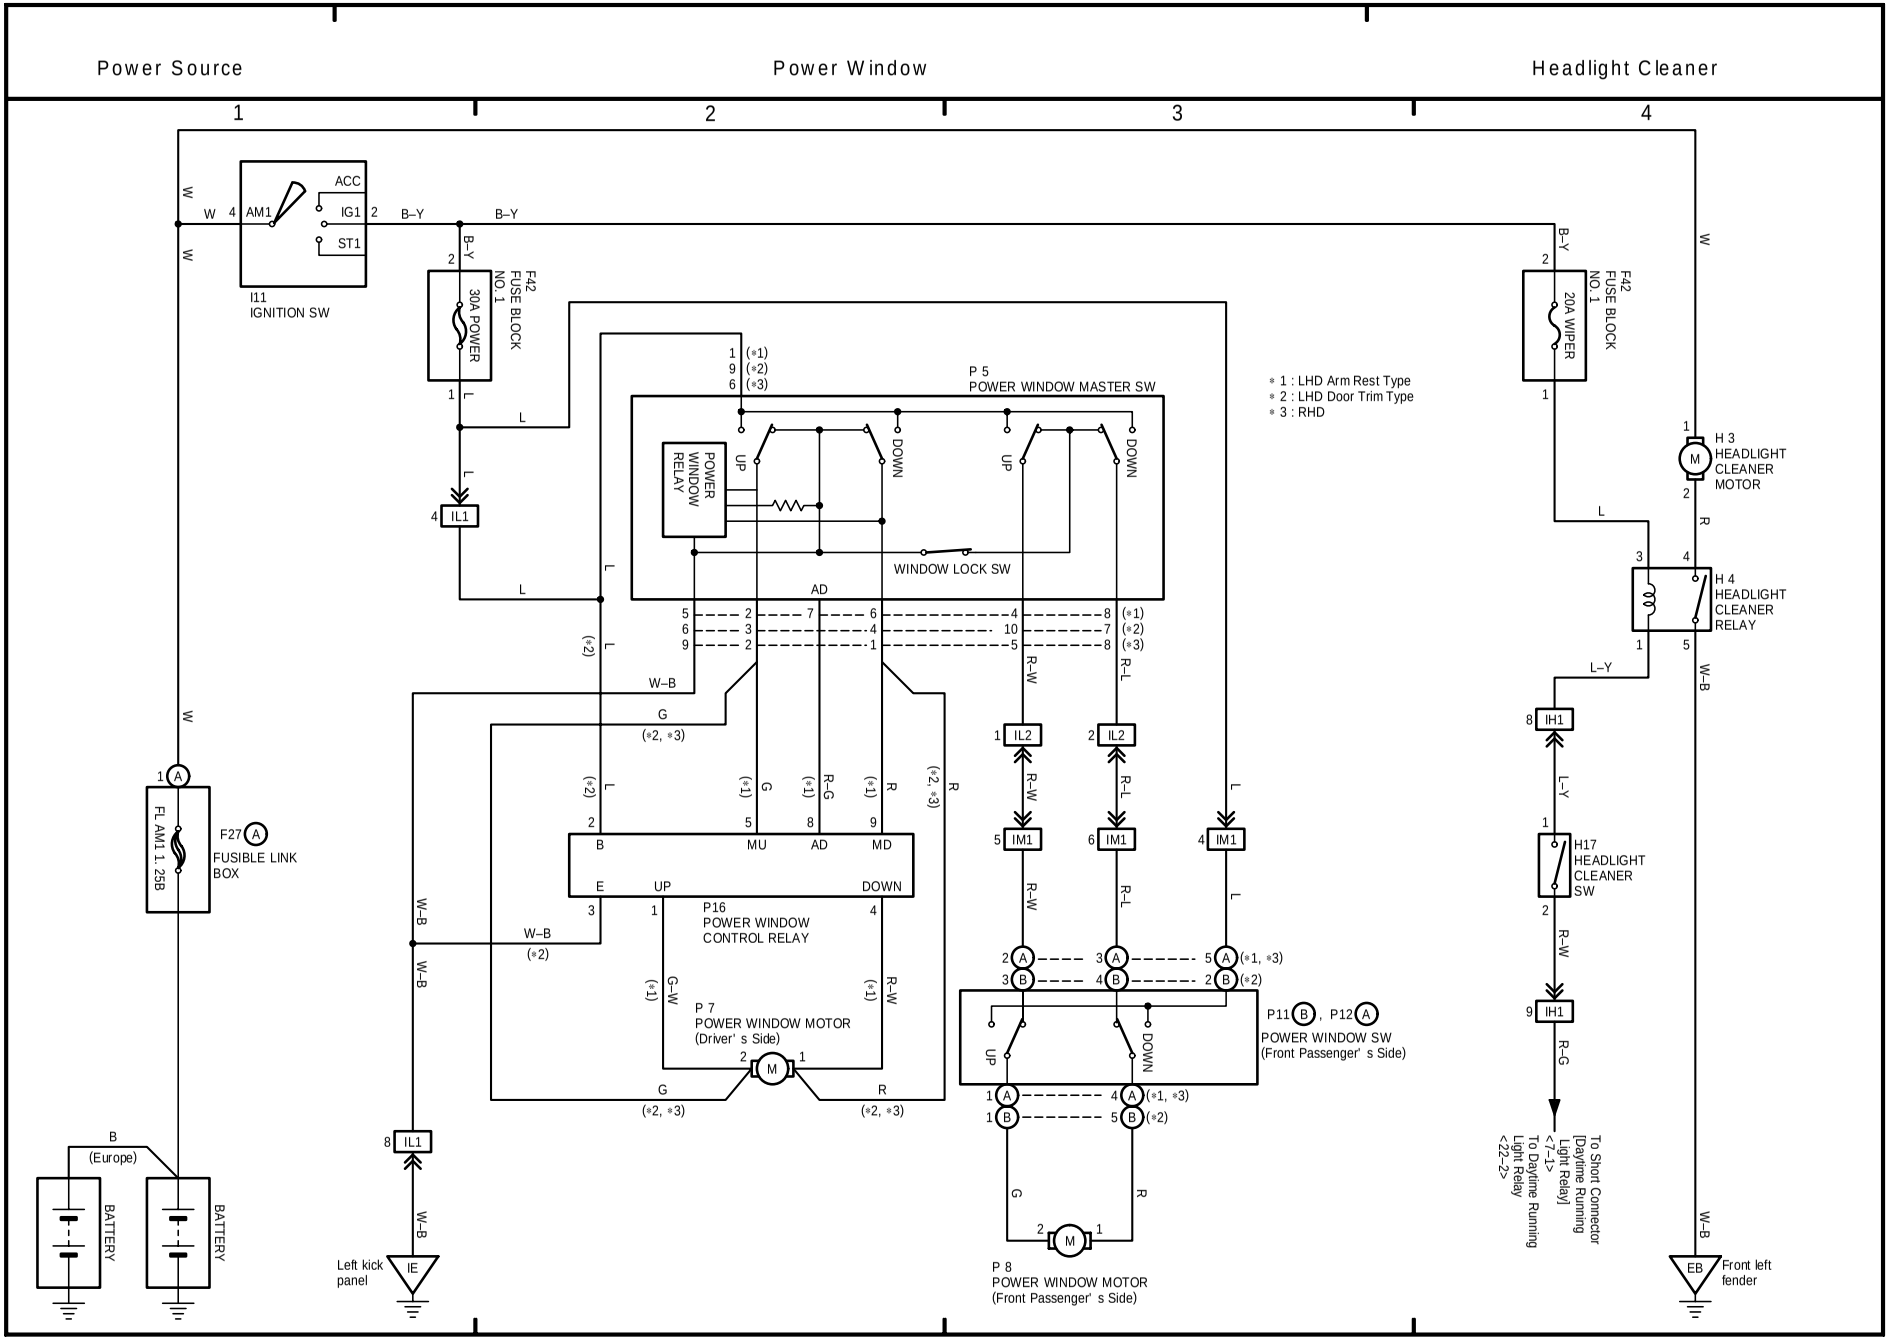
Power Source
Power Window
Headlight Cleaner
1
2
3
4
I11
IGNITION SW
ACC
IG1
ST1
AM1
F42
FUSE BLOCK
NO. 1
30A POWER
20A WIPER
P 5
POWER WINDOW MASTER SW
POWER WINDOW RELAY
WINDOW LOCK SW
UP
DOWN
AD
* 1 : LHD Arm Rest Type
* 2 : LHD Door Trim Type
* 3 : RHD
H 3
HEADLIGHT CLEANER MOTOR
H 4
HEADLIGHT CLEANER RELAY
IL1
IL2
IM1
IH1
H17
HEADLIGHT CLEANER SW
F27
FUSIBLE LINK BOX
FL AM1 1. 25B
P16
POWER WINDOW CONTROL RELAY
P 7
POWER WINDOW MOTOR
(Driver' s Side)
P11, P12
POWER WINDOW SW
(Front Passenger' s Side)
P 8
POWER WINDOW MOTOR
(Front Passenger' s Side)
To Short Connector
[Daytime Running Light Relay]
<7-1>
To Daytime Running Light Relay
<22-2>
B
(Europe)
BATTERY
BATTERY
Left kick panel
IE
EB
Front left fender