
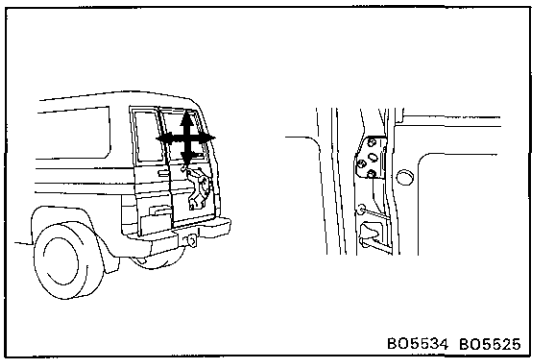


Right Back Door

ADJUSTMENT OF RIGHT BACK DOOR


1. ADJUST DOOR IN FORWARD/REARWARD AND VERTICAL DIRECTIONS

Loosen the body side hinge bolts to adjust.

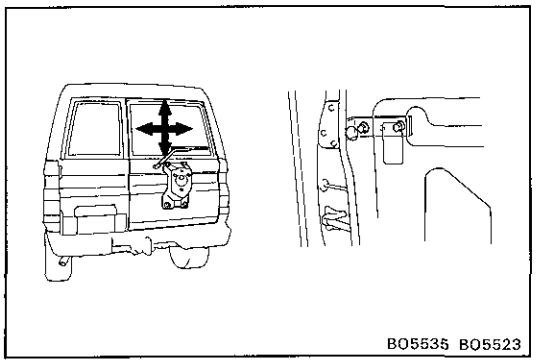

2. ADJUST DOOR IN LEFT/RIGHT AND VERTICAL DIRECTIONS

Loosen the door side hinge bolts to adjust.

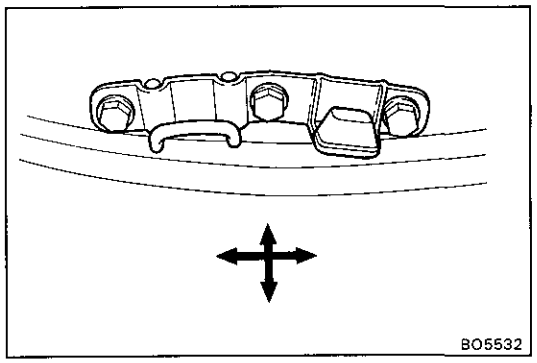



3. ADJUST DOOR LOCK STRIKER

(a) Check that the door fit and door lock linkages are adjusted correctly.

(b) Adjust the striker position by slightly loosening the striker mounting bolts or screws, and hitting the striker with a hammer.

(c) Tighten the striker mounting bolts or screws again.

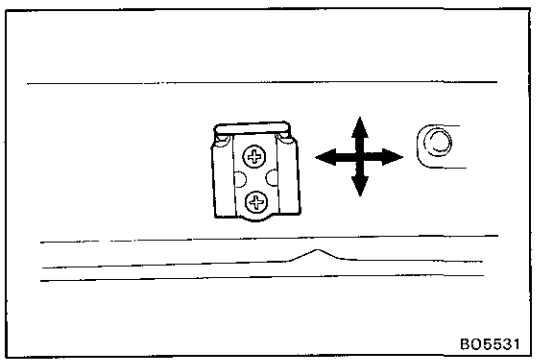

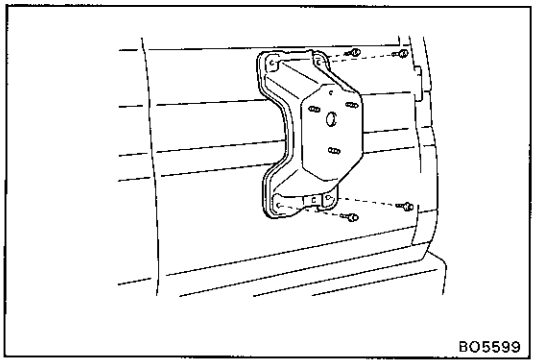


DISASSEMBLY OF RIGHT BACK DOOR

(See page BO-15)

1. **REMOVE SPARE WHEEL**

2. **REMOVE SPARE WHEEL CARRIER**

   Remove four bolts and spare wheel carrier.

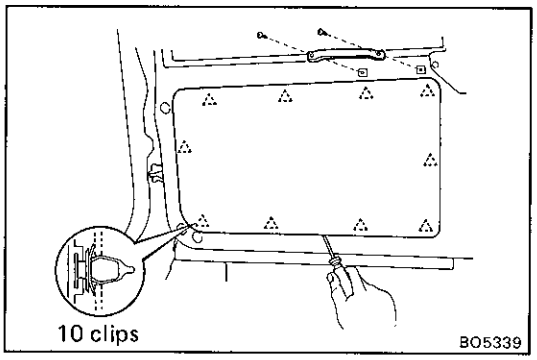

3. **REMOVE PULL HANDLE**

   Remove two screws and the handle.


4. **REMOVE DOOR TRIM**

   (a) Insert the screwdriver between the door and the door trim to pry out.

   HINT: Tape the screwdriver tip before use.

   (b) Remove the door trim.

5. **REMOVE SERVICE HOLE COVER**

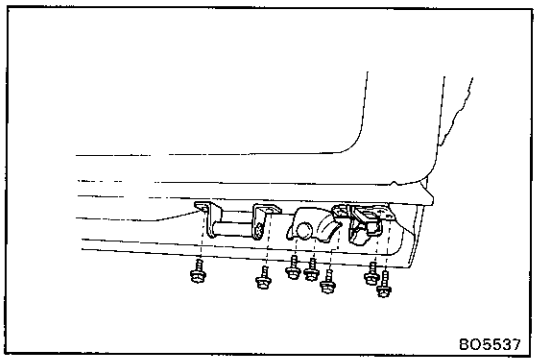

6. **REMOVE DOOR STOPPER**

   Remove two bolts and the stopper.


7. **REMOVE DOOR STOPPER BRACKET**

   Remove two bolts and the bracket.

8. **REMOVE LOWER DOOR LOCK**


   (a) Disconnect the link from the door lock control.

   (b) Remove three bolts and the door lock.

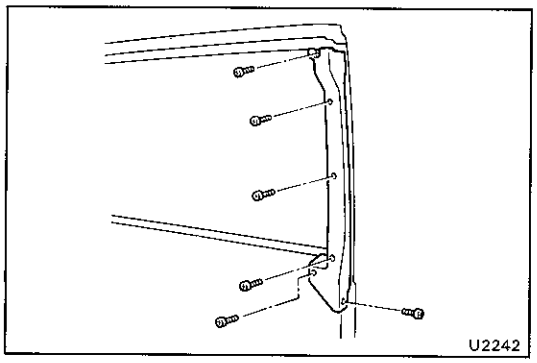

9. **(w/o Canvas Top)**
   REMOVE LINK COVER


   Remove six screws and the cover.

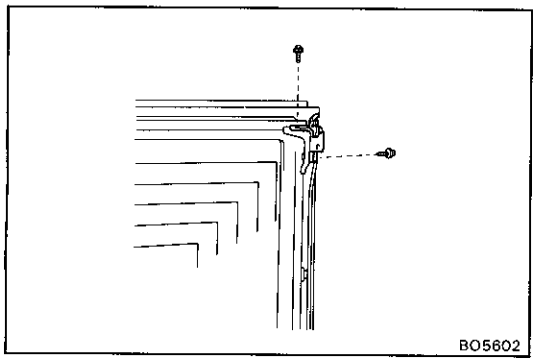

10. **(w/o Canvas Top)**
    REMOVE UPPER DOOR LOCK

    (a) Disconnect the link from the door lock control.

    (b) Remove two bolts and the door lock.

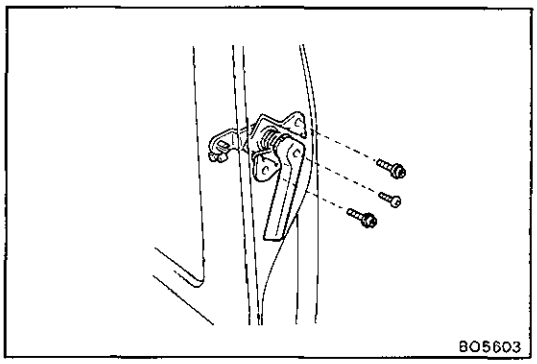


11. REMOVE DOOR LOCK CONTROL

(a) Remove the screw and the inside handle.

(b) Remove the screws and the door lock control.


ASSEMBLY OF RIGHT BACK DOOR

(See page BO-15)

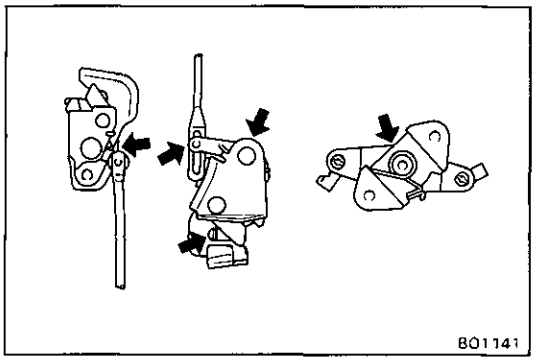

1. BEFORE INSTALLING PARTS, COAT THEM WITH MP GREASE


Apply MP grease to the sliding surface of the door lock and the door lock control.

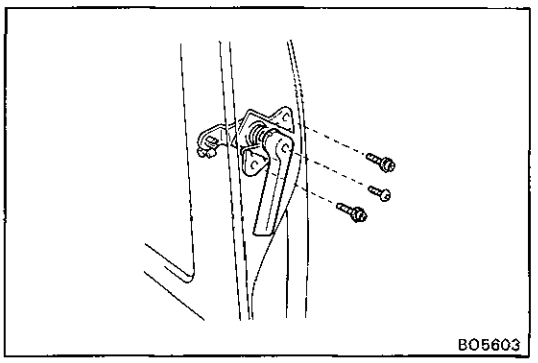

2. INSTALL DOOR LOCK CONTROL

(a) Install the door lock control with two screws.


(b) Install the inside handle with the screw.

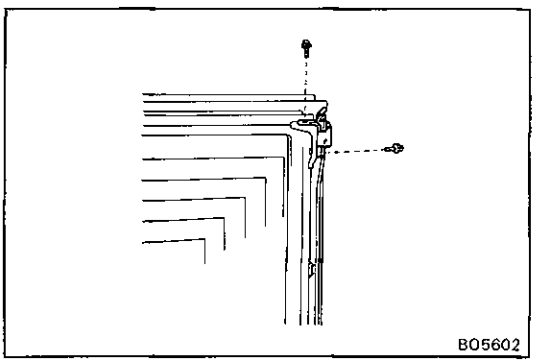

3. (w/o Canvas Top)
INSTALL UPPER DOOR LOCK


(a) Install the door lock with two bolts.

(b) Connect the link to the door lock control.

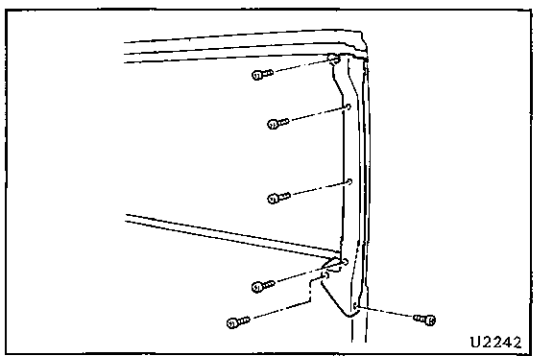

4. (w/o Canvas Top)
INSTALL LINK COVER

Install the cover with six screws.

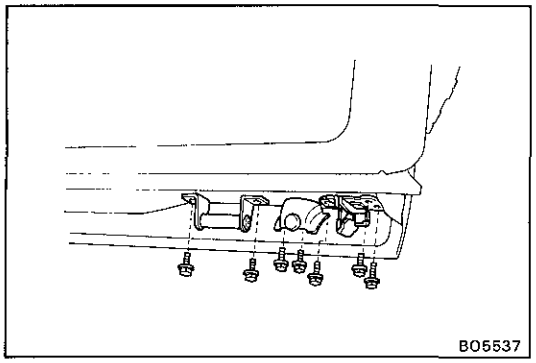

5. INSTALL LOWER DOOR LOCK

(a) Install the door lock with three bolts.


(b) Connect the link to the door lock control.

6. INSTALL DOOR STOPPER BRACKET

Install the bracket with two bolts.

7. INSTALL DOOR STOPPER

Install the stopper with two bolts.

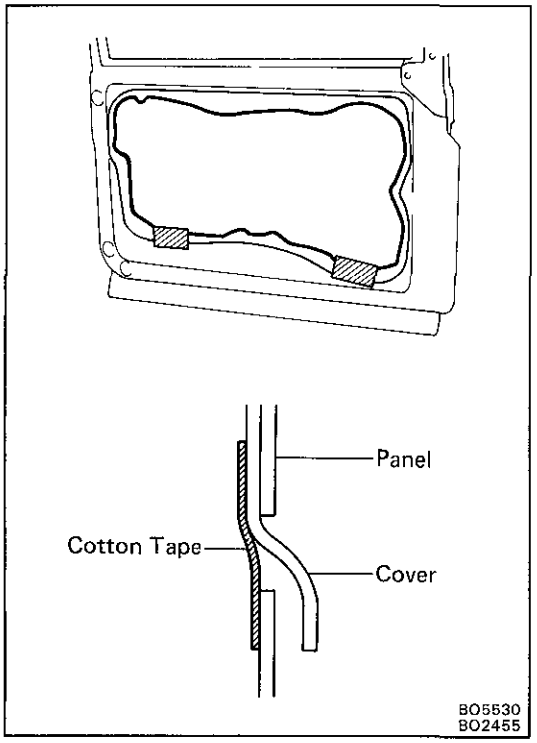


8. INSTALL SERVICE HOLE COVER

(a) Install the service hole cover with adhesive.

(b) Insert the lower edge of the service hole cover into the panel slit.

(c) Seal the panel slit with the cotton tape.

NOTICE: Do not block the trim clip sealing with the tape.

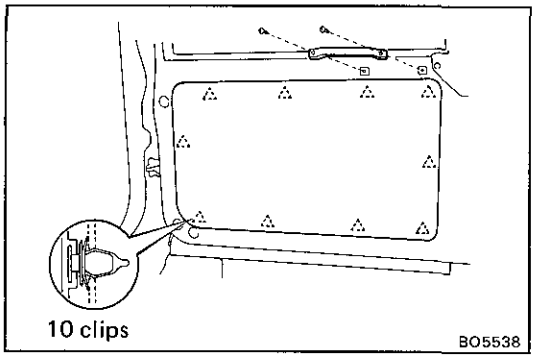


9. *INSTALL DOOR TRIM*

Install the door trim with retainer to the inside panel by tapping.

10. INSTALL PULL HANDLE

Install the handle with two screws.

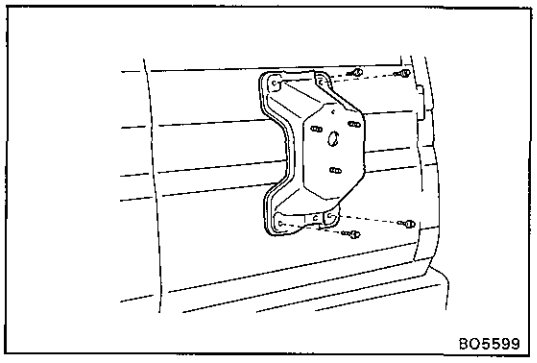

11. INSTALL SPARE WHEEL CARRIER

Install the spare wheel carrier with four bolts.

12. INSTALL SPARE WHEEL