
CO0RN–01

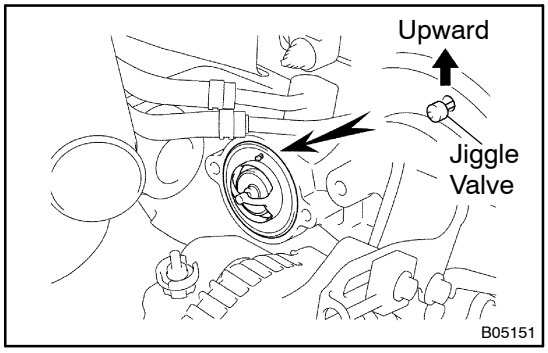


INSTALLATION

1. PLACE THERMOSTAT IN CYLINDER BLOCK

(a) Install a new gasket to the thermostat.

(b) Install the thermostat with the jiggle valve upward.

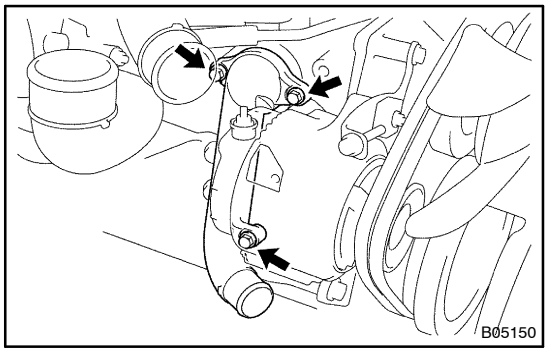

2. INSTALL WATER INLET

(a) Temporarily install the water inlet with the 3 bolts.

(b) Alternately tighten the 3 bolts in several passes.

Torque: 19.6 N·m (200 kgf·cm, 14 ft·lbf)

3. FILL WITH ENGINE COOLANT

4. START ENGINE AND CHECK FOR COOLANT LEAKS