

CYLINDER HEAD (1HD–FTE)


COMPONENTS

EM0WS–01

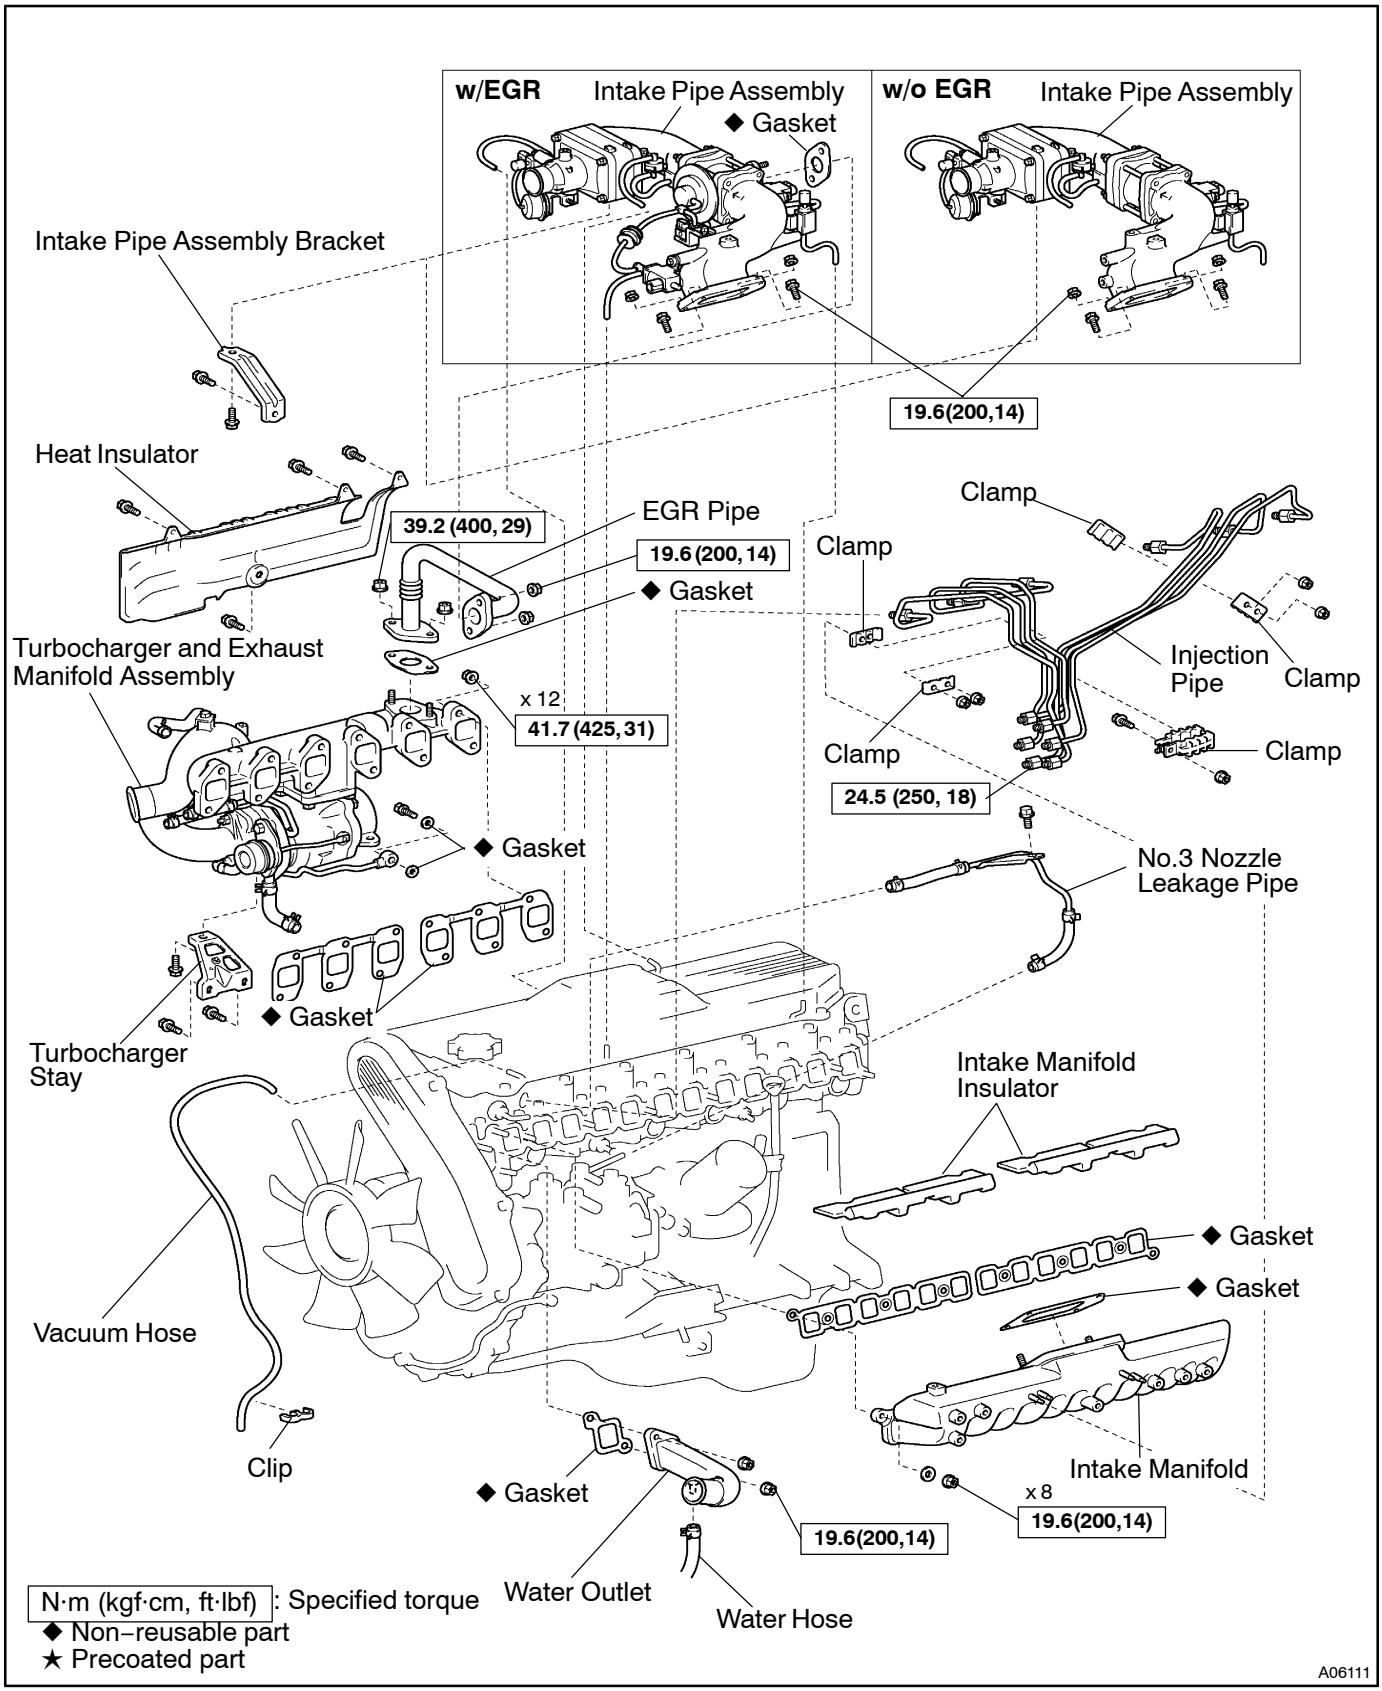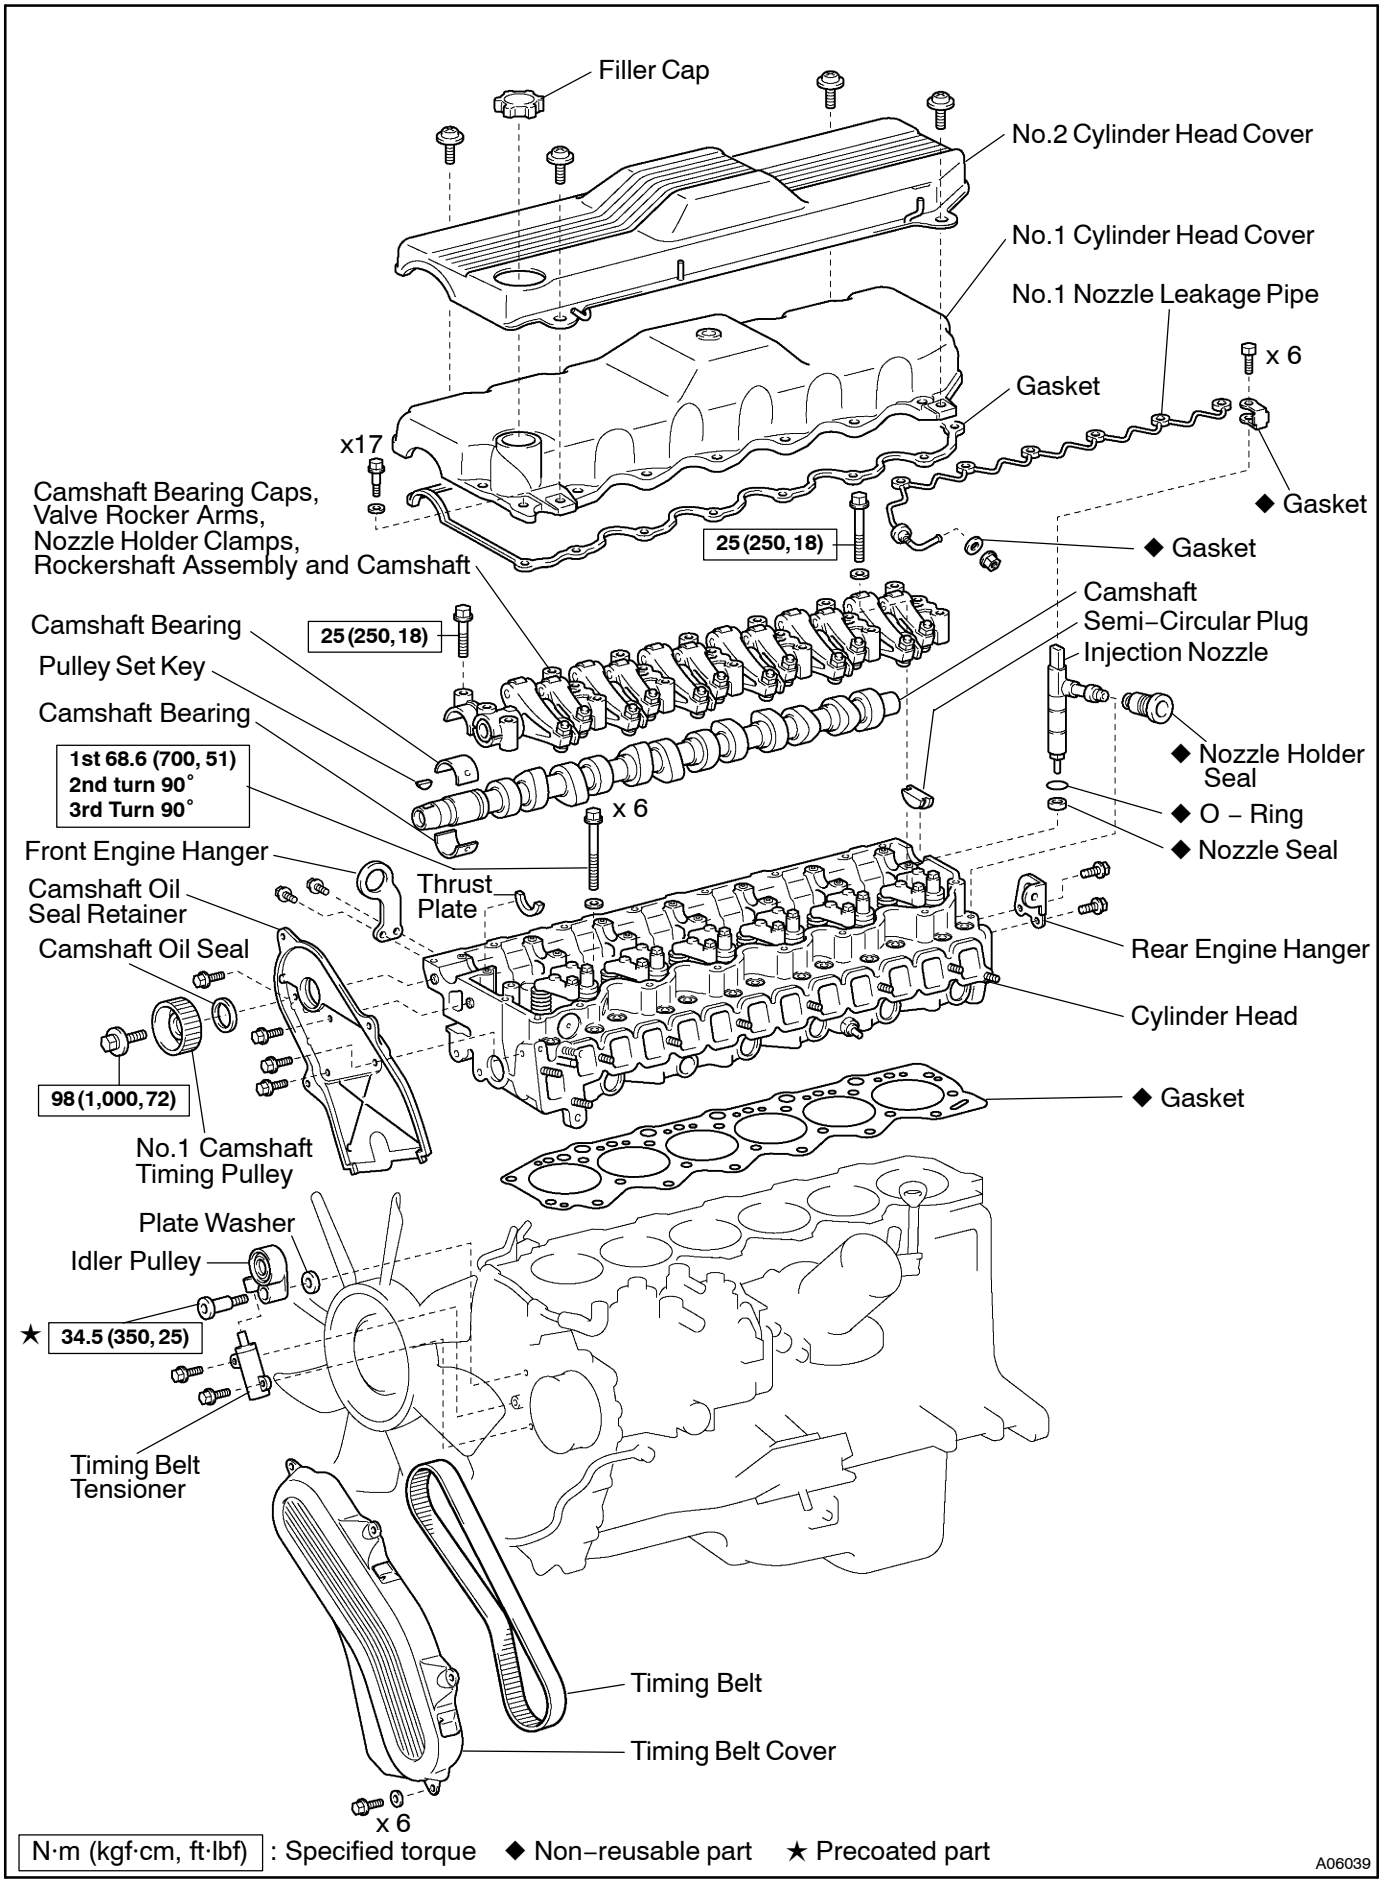



Filler Cap
No.2 Cylinder Head Cover
No.1 Cylinder Head Cover
No.1 Nozzle Leakage Pipe
x 6
Gasket
x17
Camshaft Bearing Caps,
Valve Rocker Arms,
Nozzle Holder Clamps,
Rockershaft Assembly and Camshaft
25 (250, 18)
◆ Gasket
◆ Gasket
Camshaft Bearing
Pulley Set Key
Camshaft Bearing
1st 68.6 (700, 51)
2nd turn 90°
3rd Turn 90°
25 (250, 18)
Camshaft
Semi–Circular Plug
Injection Nozzle
◆ Nozzle Holder Seal
◆ O – Ring
◆ Nozzle Seal
x 6
Front Engine Hanger
Thrust Plate
Camshaft Oil Seal Retainer
Camshaft Oil Seal
Rear Engine Hanger
Cylinder Head
98 (1,000, 72)
◆ Gasket
No.1 Camshaft Timing Pulley
Plate Washer
Idler Pulley
★ 34.5 (350, 25)
Timing Belt Tensioner
Timing Belt
Timing Belt Cover
x 6
N·m (kgf·cm, ft·lbf) : Specified torque ◆ Non–reusable part ★ Precoated part
A06039


Camshaft Bearing Cap, Valve Rocker Arm, Nozzle Holder Clamp and Rocker Shaft Assembly

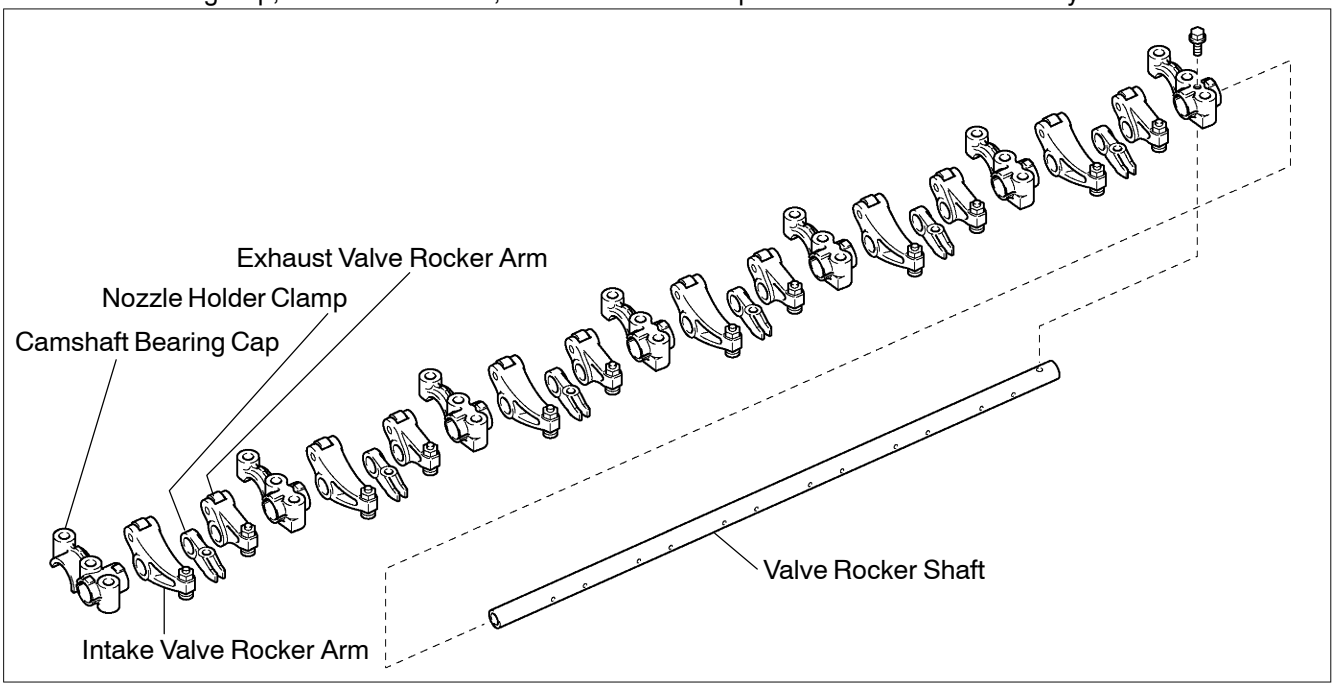

Cylinder Head Assembly

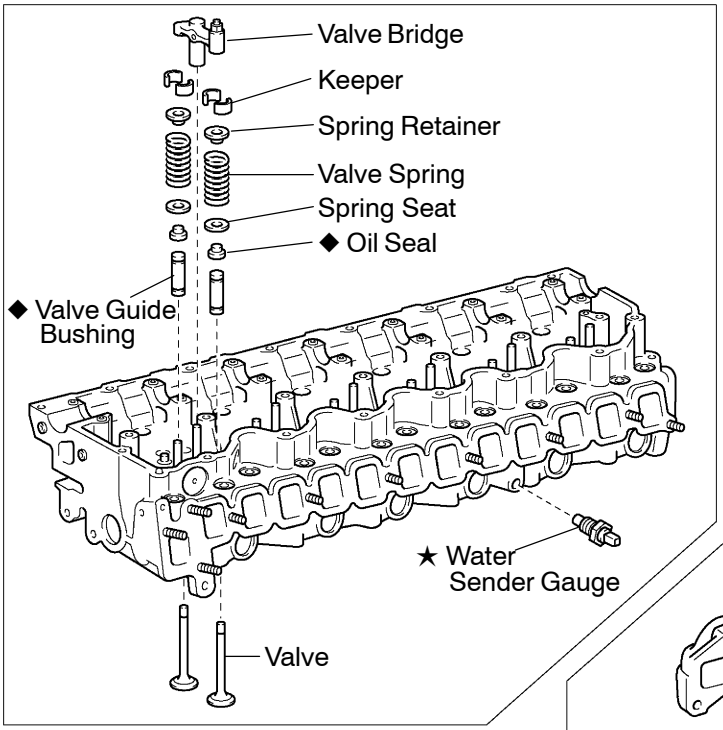

Turbocharger and Exhaust Manifold Assembly

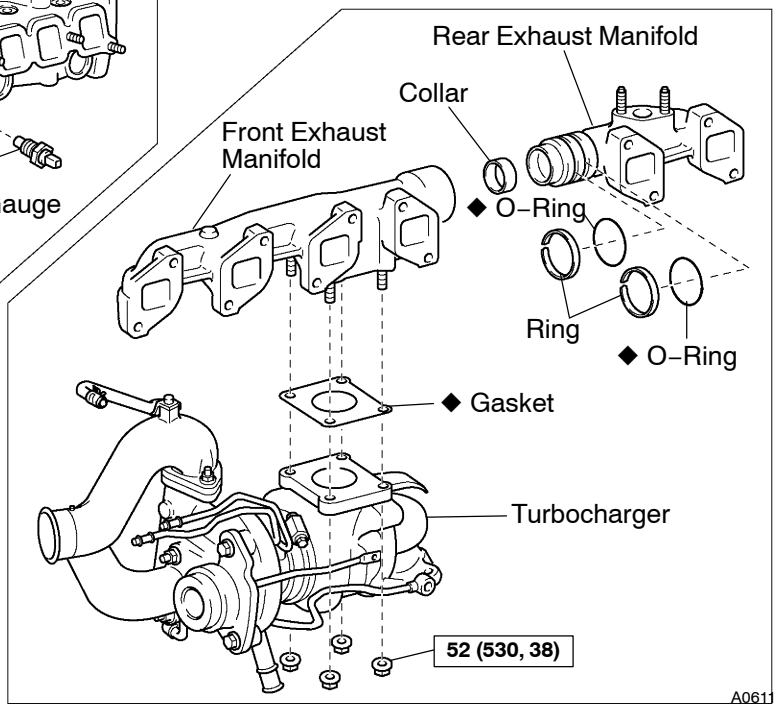

N·m (kgf·cm, ft·lbf): Specified torque
◆ Non–reusable part
★ Precoated part