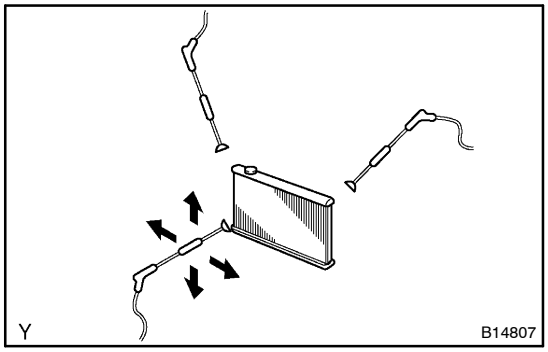


RADIATOR

CO1B0–01

ON–VEHICLE CLEANING

INSPECT FINS FOR BLOCKAGE

If fins are clogged, wash them with water or a steam cleaner and dry with compressed air.

NOTICE:

- **If the distance between the steam cleaner and the core is too close, there is a possibility of damaging the fin, so keep the following injection distance.**

Injection Pressure	Injection Distance
2,942 – 4,903 kpa (30 – 50 kg/cm^{2,} 427 –711 psi)	300 mm (11.811 in)
4,903 – 7,845 kpa (50 – 80 kg/cm^{2,} 711 – 1,138 psi)	500 mm (19.685 in)

- **If the fins are bent, straighten them with a screwdriver or pliers.**
- **Never apply water directly onto the electronic components.**