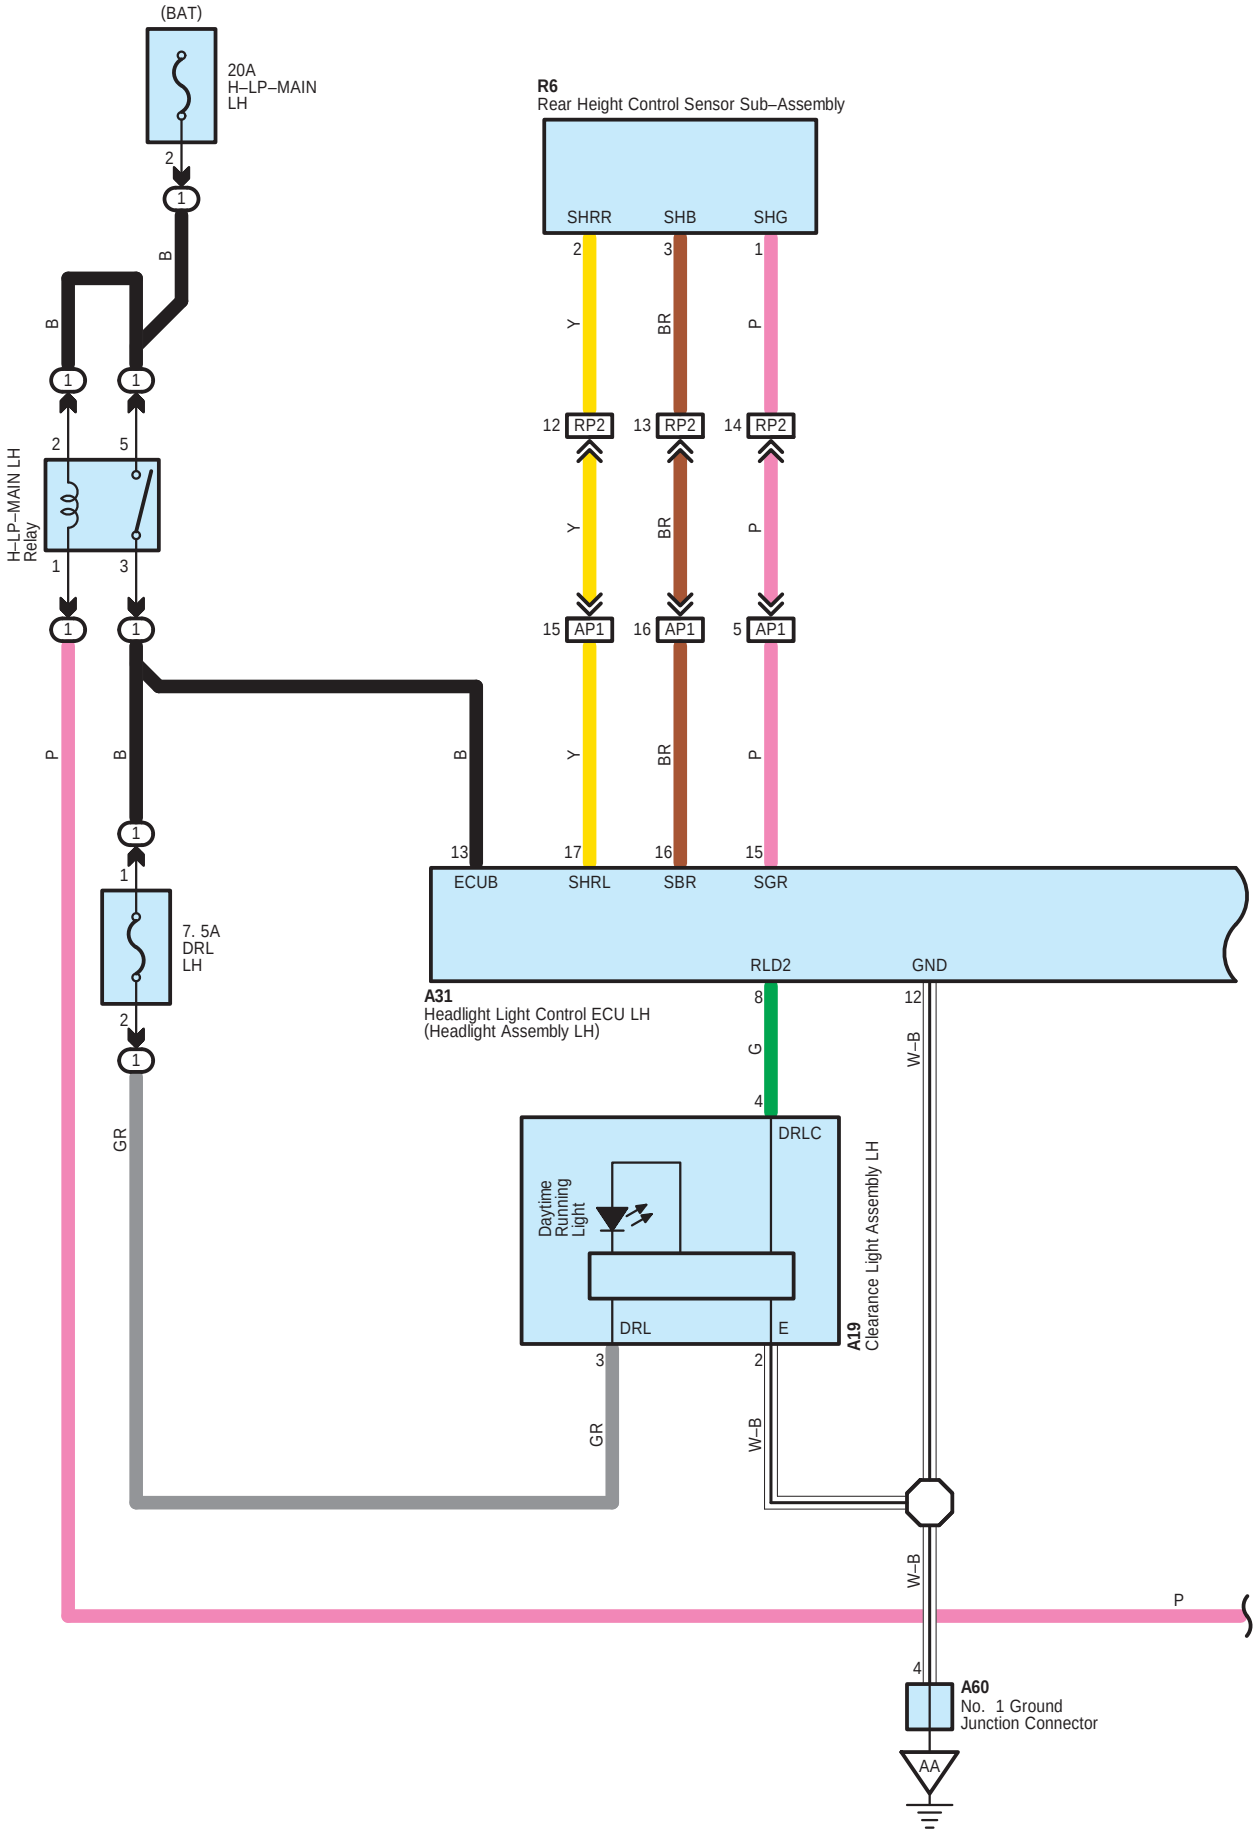
(BAT)
20A
H–LP–MAIN
LH
R6
Rear Height Control Sensor Sub–Assembly
SHRR
SHB
SHG
RP2
AP1
H–LP–MAIN LH
Relay
7. 5A
DRL
LH
ECUB
SHRL
SBR
SGR
RLD2
GND
A31
Headlight Light Control ECU LH
(Headlight Assembly LH)
DRLC
Daytime
Running
Light
DRL
E
A19
Clearance Light Assembly LH
A60
No. 1 Ground
Junction Connector
AA

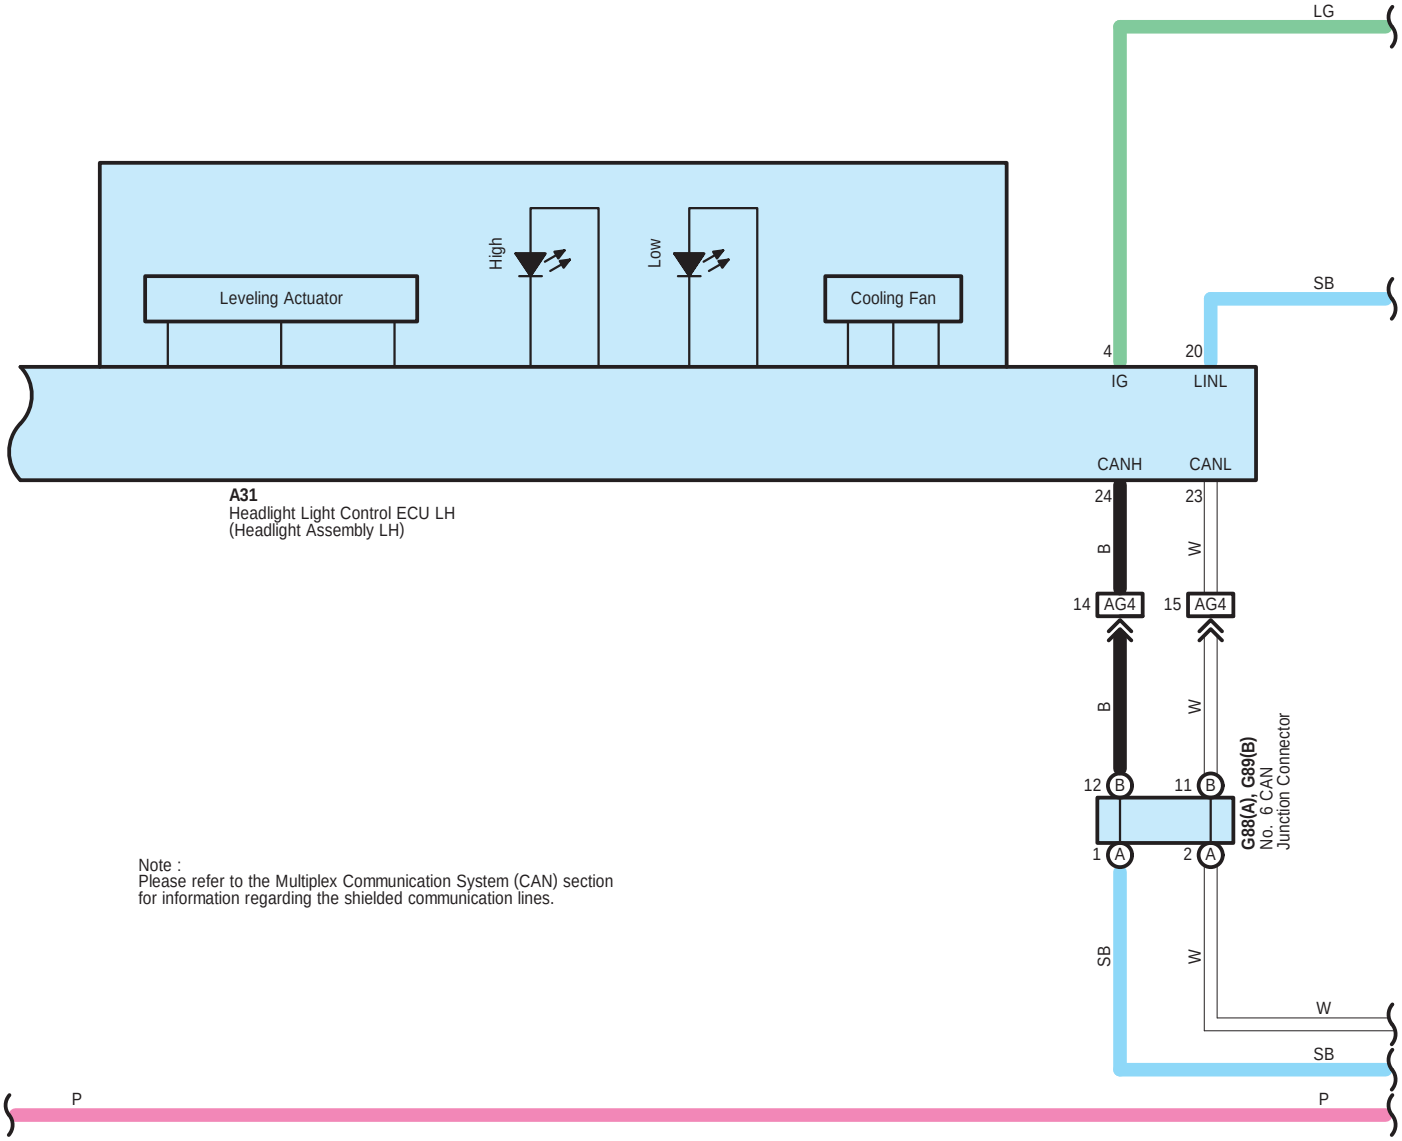

Note :
Please refer to the Multiplex Communication System (CAN) section for information regarding the shielded communication lines.

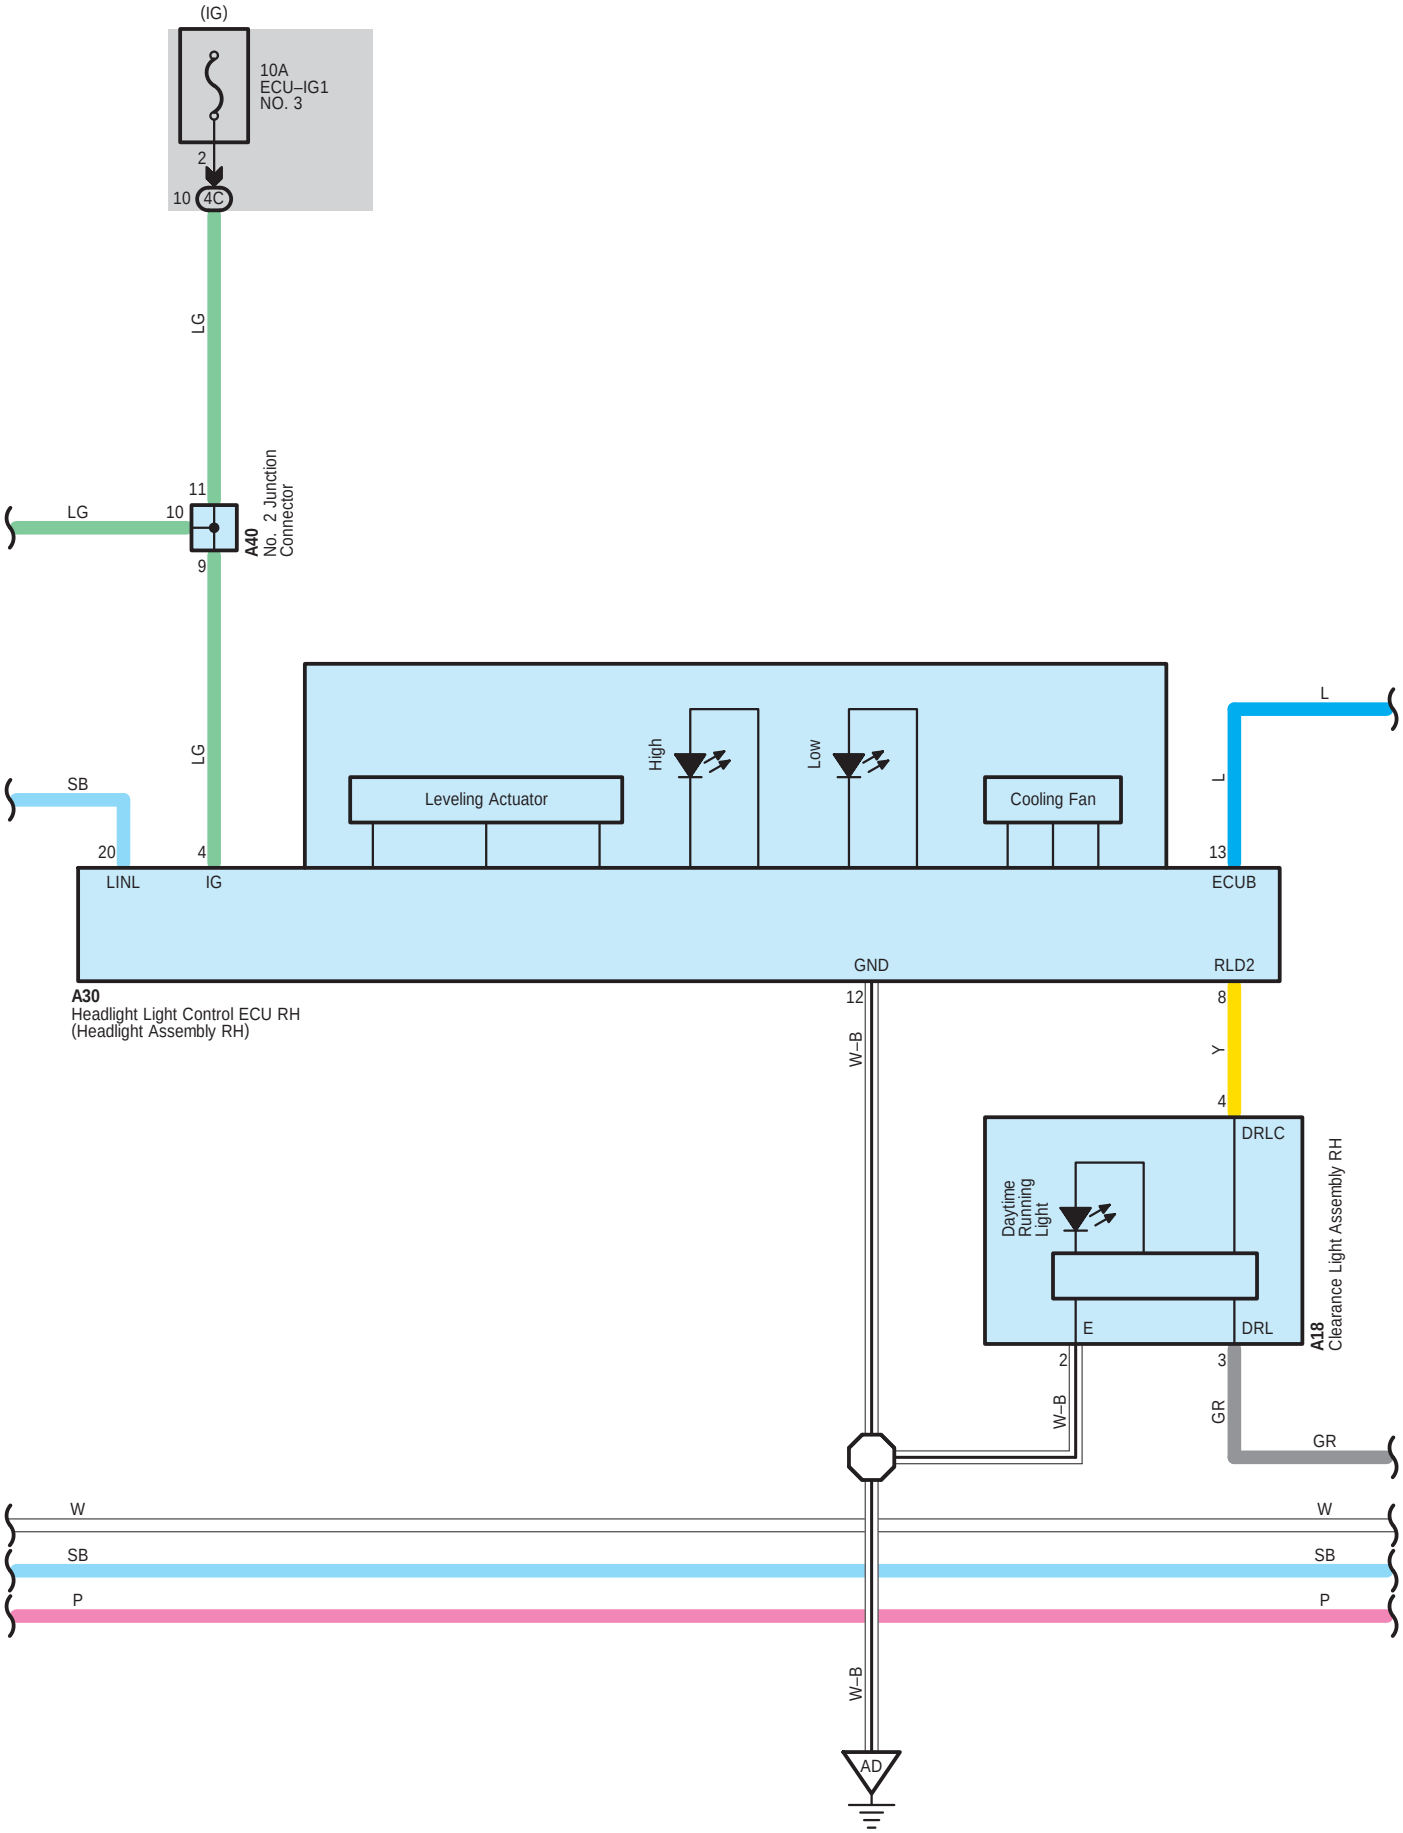
(IG)
10A
ECU–IG1
NO. 3
2
10
4C
LG
11
LG
10
9
A40
No. 2 Junction
Connector
LG
SB
20
4
LINL
IG
Leveling Actuator
High
Low
Cooling Fan
L
L
13
ECUB
GND
RLD2
A30
Headlight Light Control ECU RH
(Headlight Assembly RH)
12
W–B
8
Y
4
DRLC
Daytime
Running
Light
E
DRL
A18
Clearance Light Assembly RH
2
W–B
3
GR
GR
W
W
SB
SB
P
P
W–B
AD

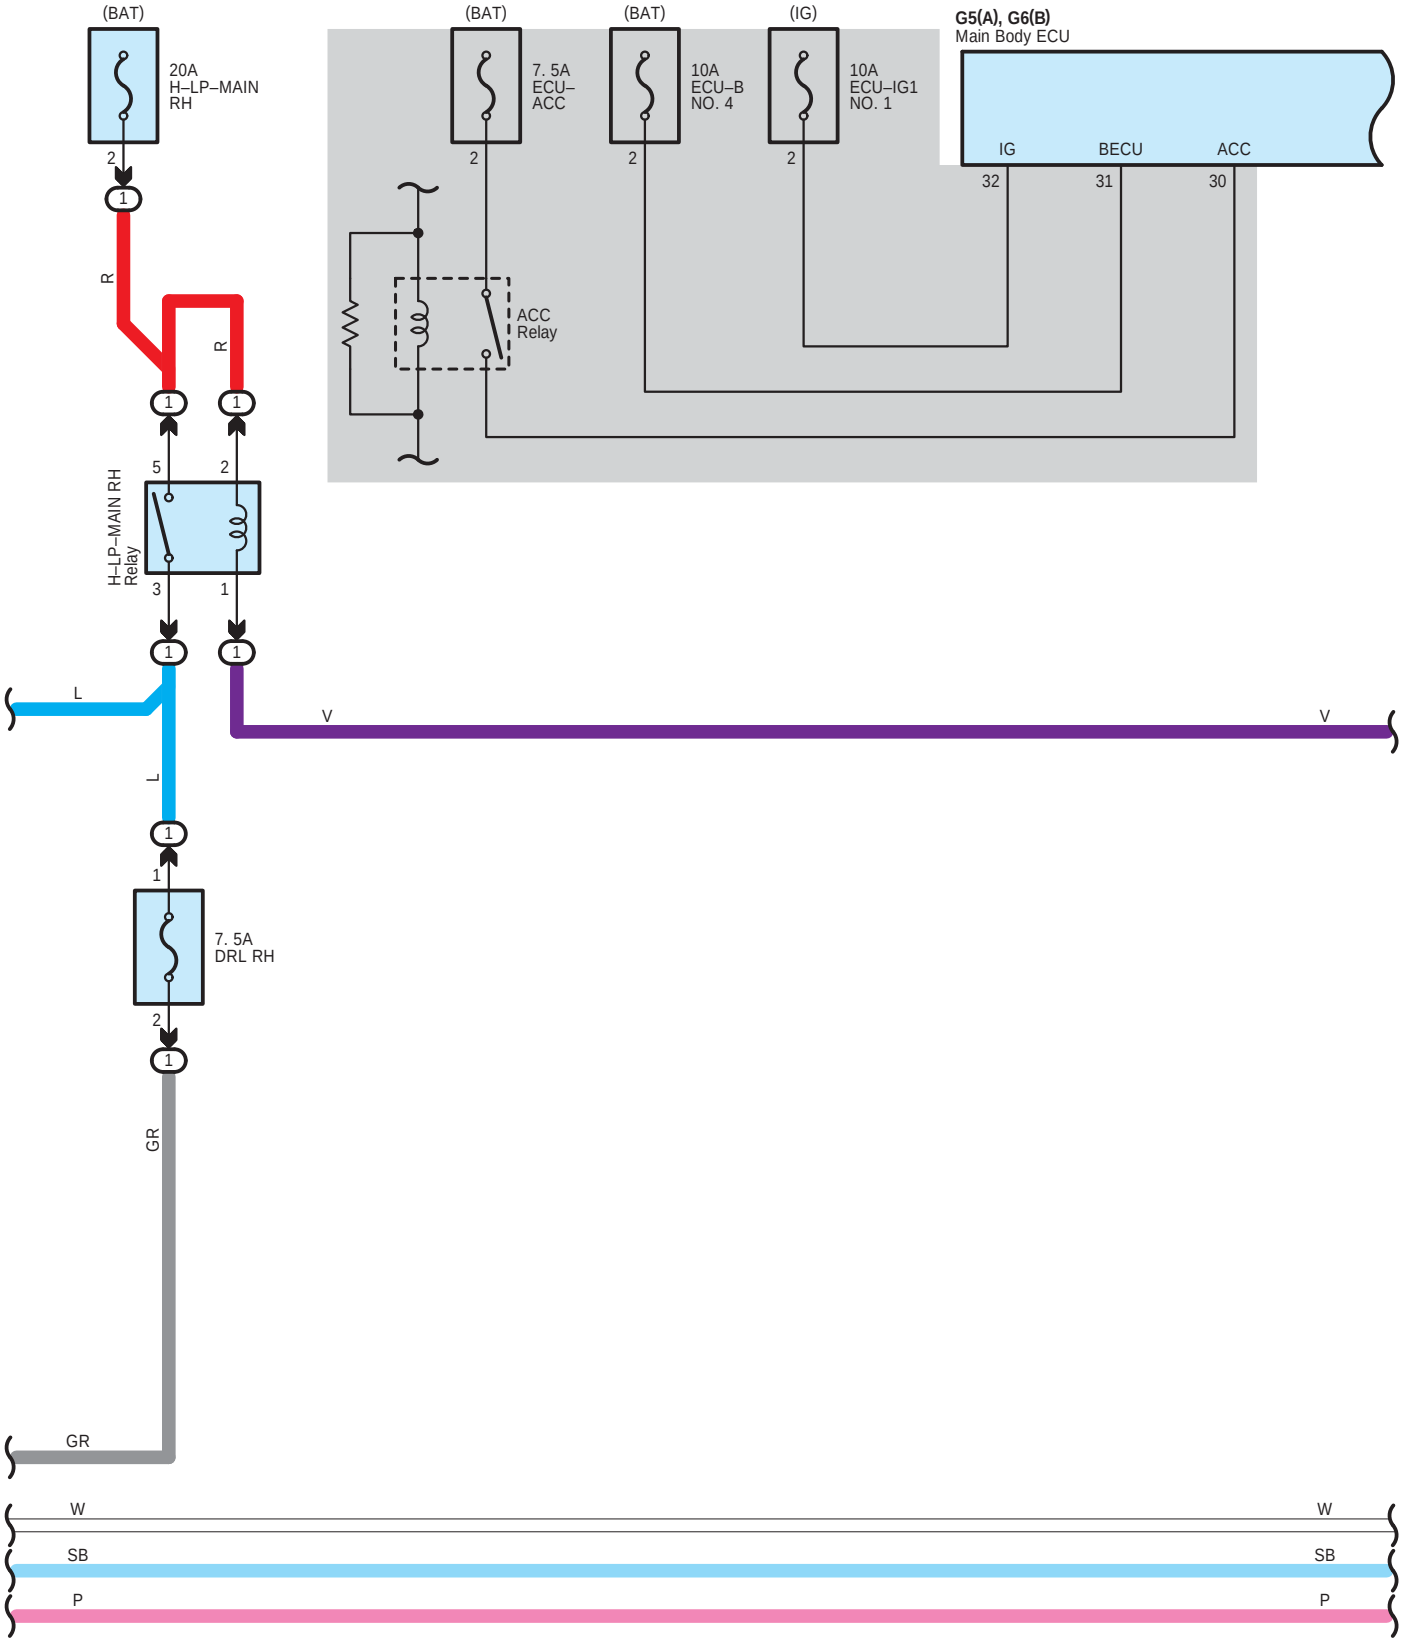
(BAT)
20A
H–LP–MAIN
RH
2
1
R
R
1
1
5
2
H–LP–MAIN RH
Relay
3
1
1
1
L
V
V
L
1
1
7. 5A
DRL RH
2
1
GR
GR
(BAT)
7. 5A
ECU–
ACC
2
(BAT)
10A
ECU–B
NO. 4
2
(IG)
10A
ECU–IG1
NO. 1
2
ACC
Relay
G5(A), G6(B)
Main Body ECU
IG
BECU
ACC
32
31
30
W
W
SB
SB
P
P

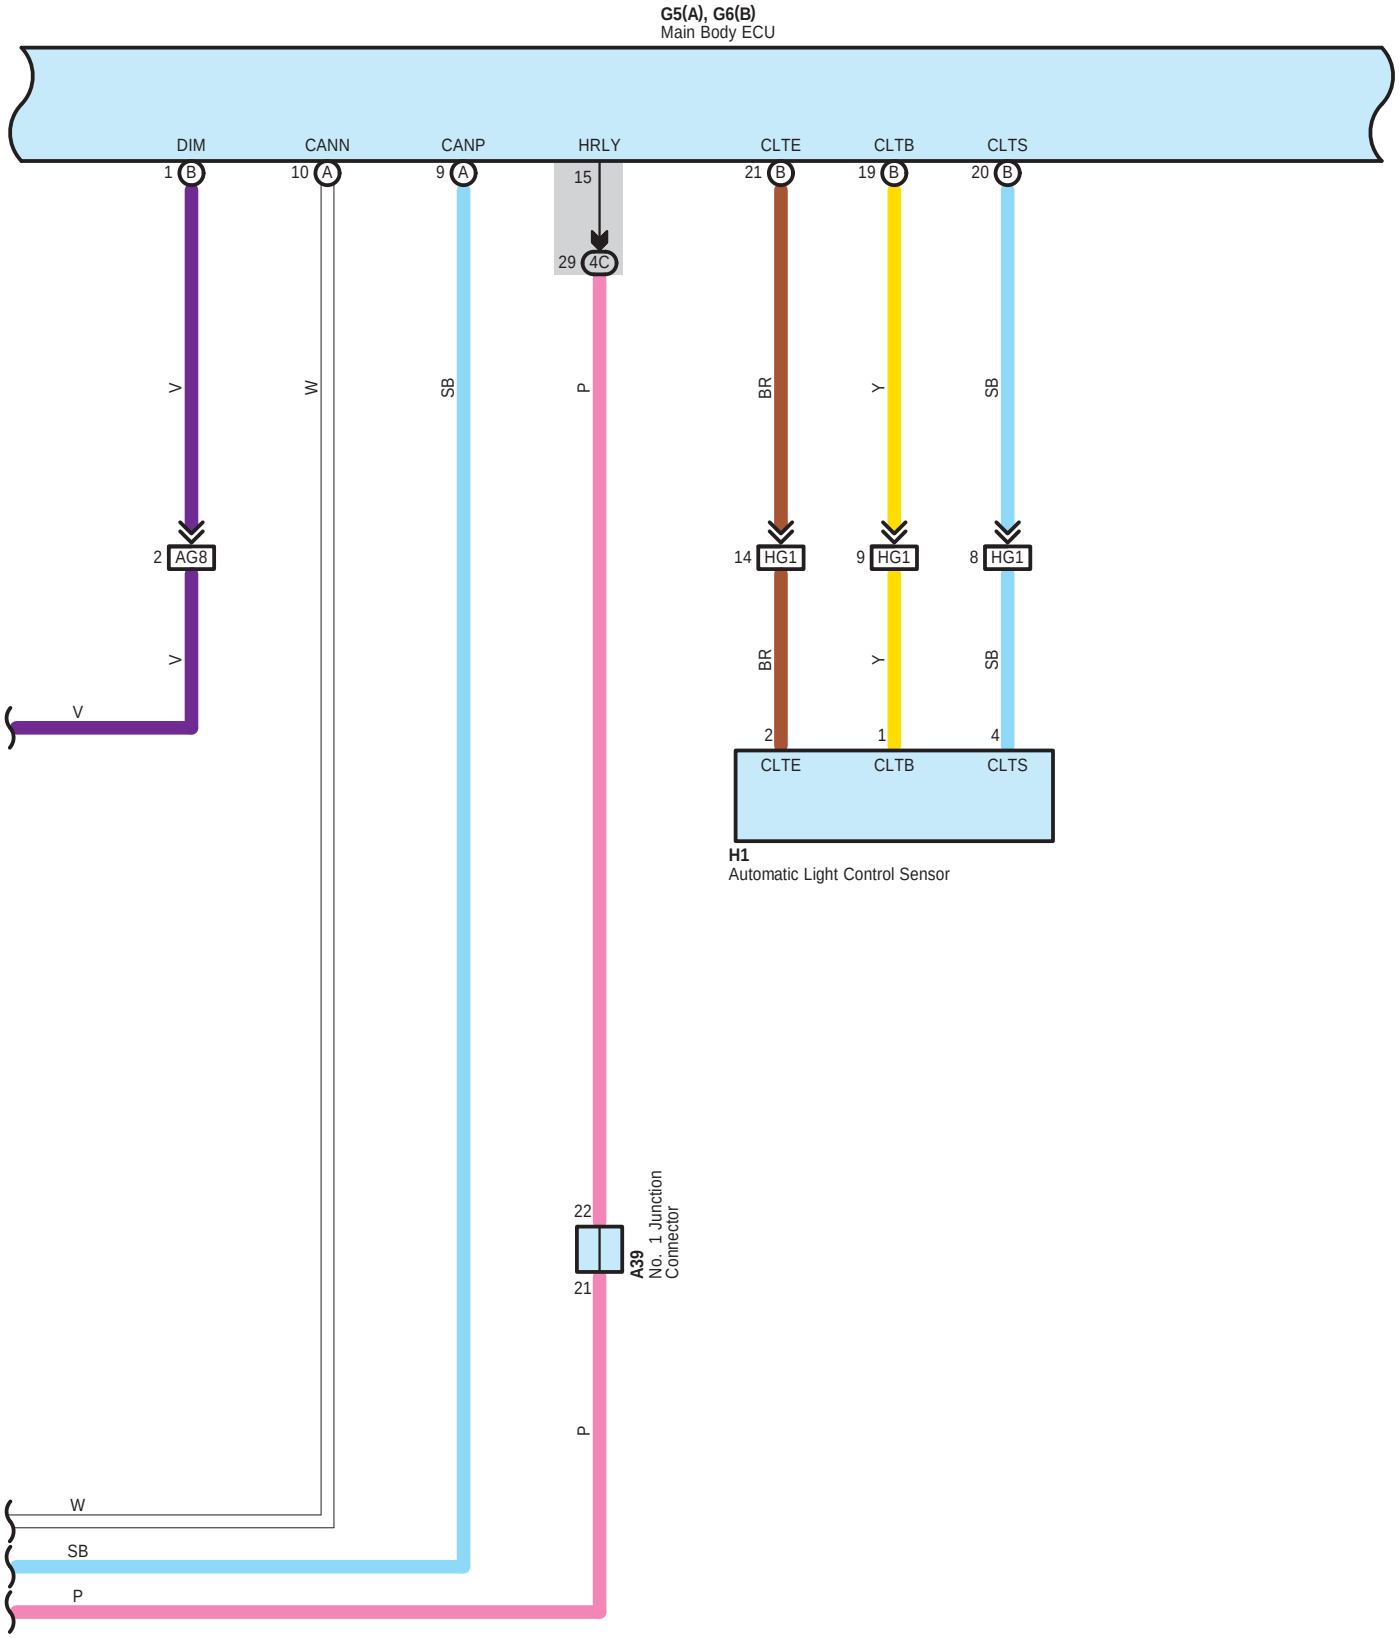
G5(A), G6(B)
Main Body ECU
DIM
CANN
CANP
HRLY
CLTE
CLTB
CLTS
1 B
10 A
9 A
15
29 4C
21 B
19 B
20 B
V
W
SB
P
BR
Y
SB
2 AG8
14 HG1
9 HG1
8 HG1
V
BR
Y
SB
2
1
4
CLTE
CLTB
CLTS
H1
Automatic Light Control Sensor
22
21
A39
No. 1 Junction Connector
P
W
SB
P

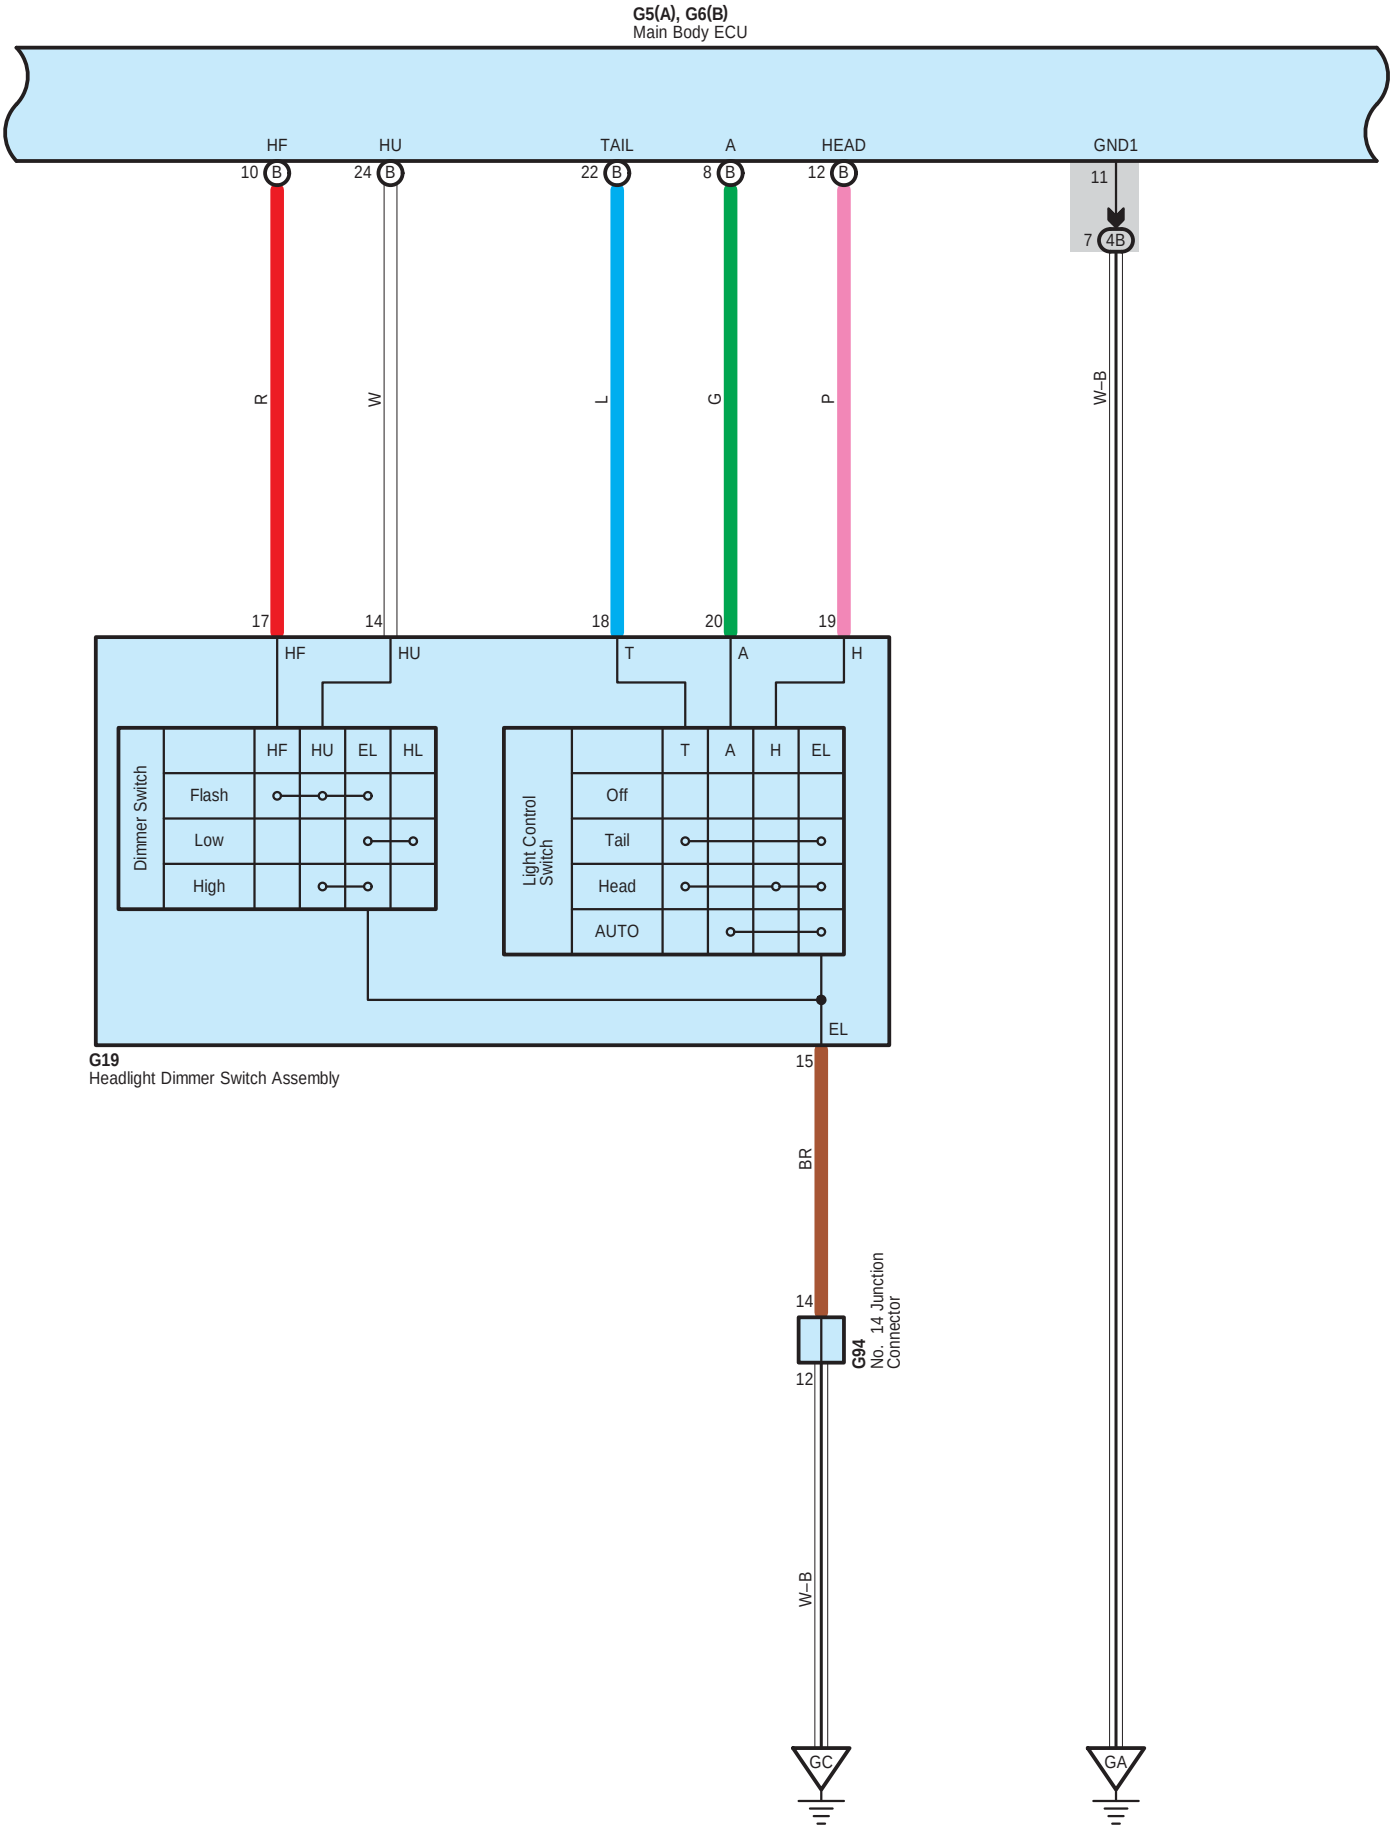
G5(A), G6(B)
Main Body ECU
HF
HU
TAIL
A
HEAD
GND1
10 B
24 B
22 B
8 B
12 B
11
7 4B
R
W
L
G
P
W–B
17
14
18
20
19
HF
HU
T
A
H
Dimmer Switch
HF HU EL HL
Flash
Low
High
Light Control Switch
T A H EL
Off
Tail
Head
AUTO
EL
G19
Headlight Dimmer Switch Assembly
15
BR
14
12
G94
No. 14 Junction Connector
W–B
GC
GA

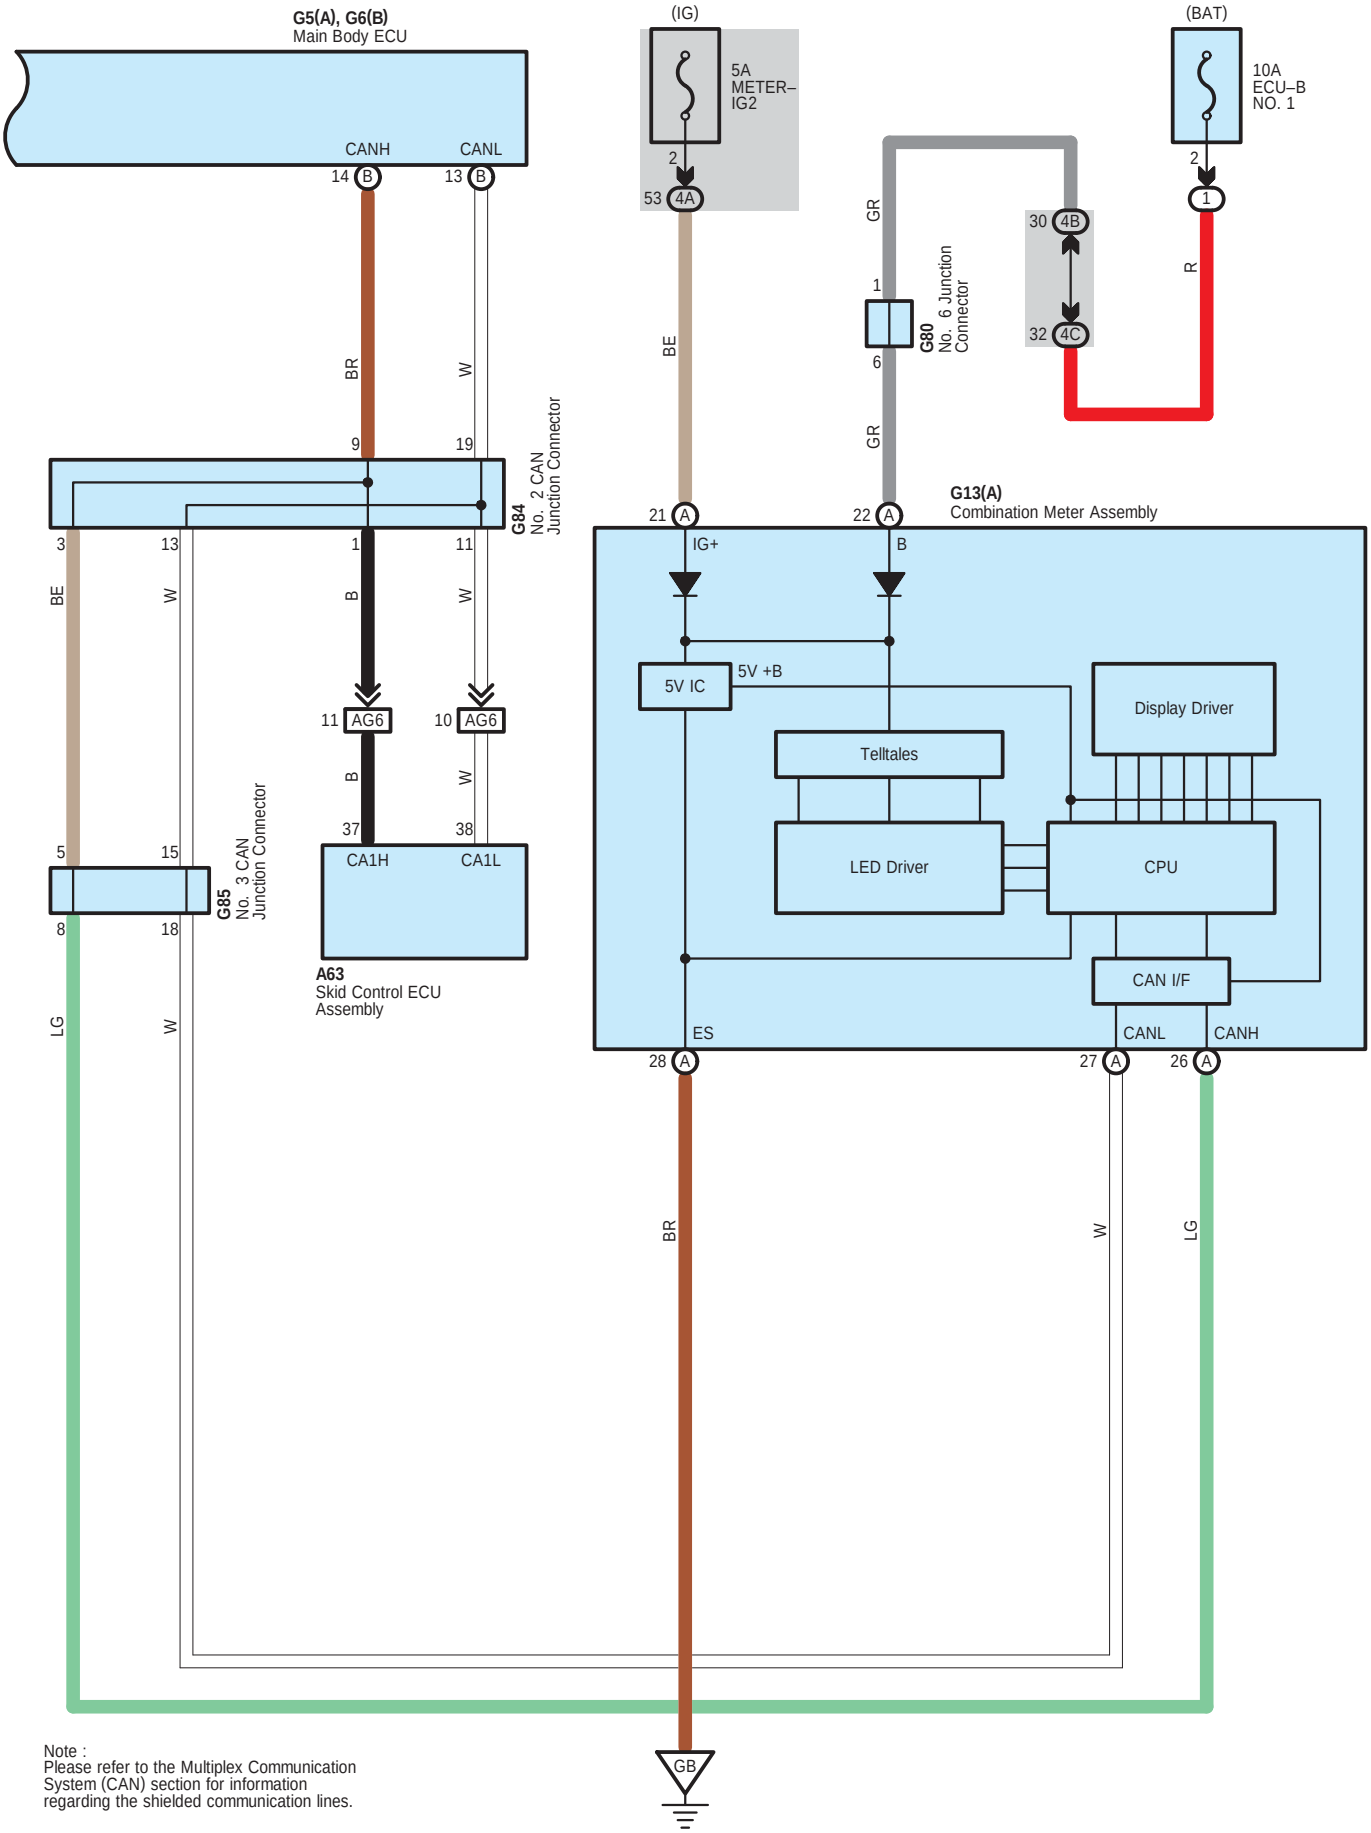

Note :
Please refer to the Multiplex Communication System (CAN) section for information regarding the shielded communication lines.

A18
Black

90980-10942

A19
Black

90980-10942

A30
Gray

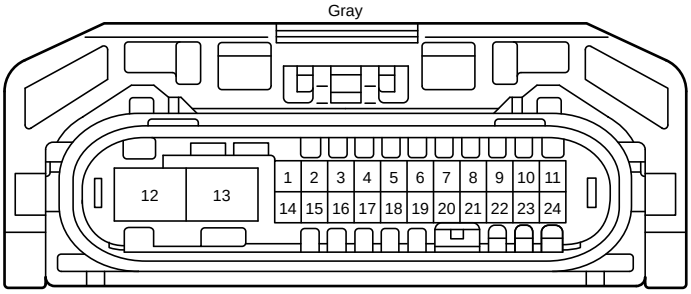

90980-12A92

A31
Gray

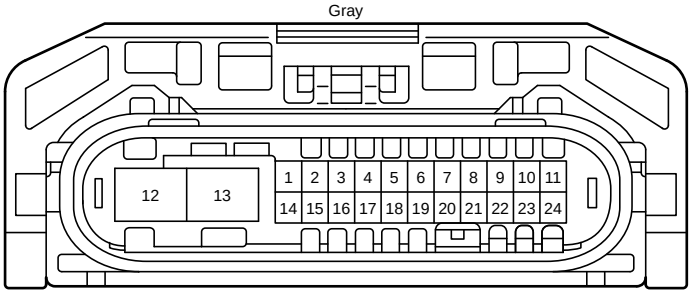

90980-12A92

A39
White

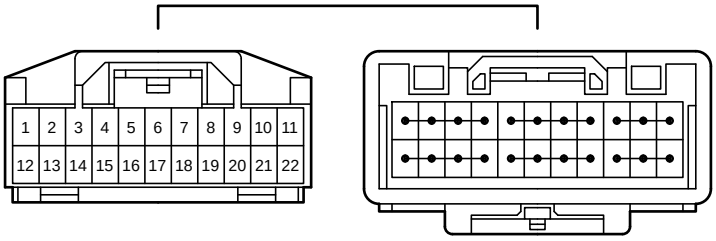

90980-11915

A40
White

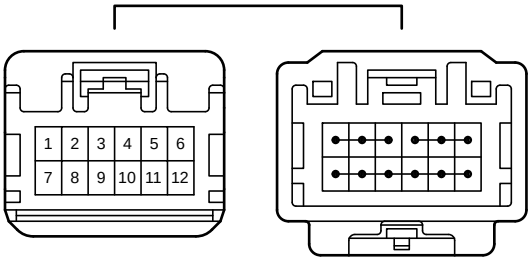

90980-12773

A60
Gray

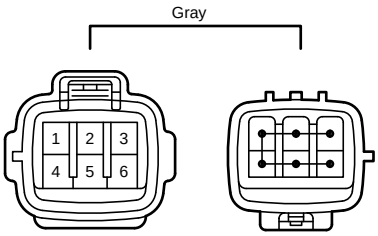

90980-11194

A63
Gray

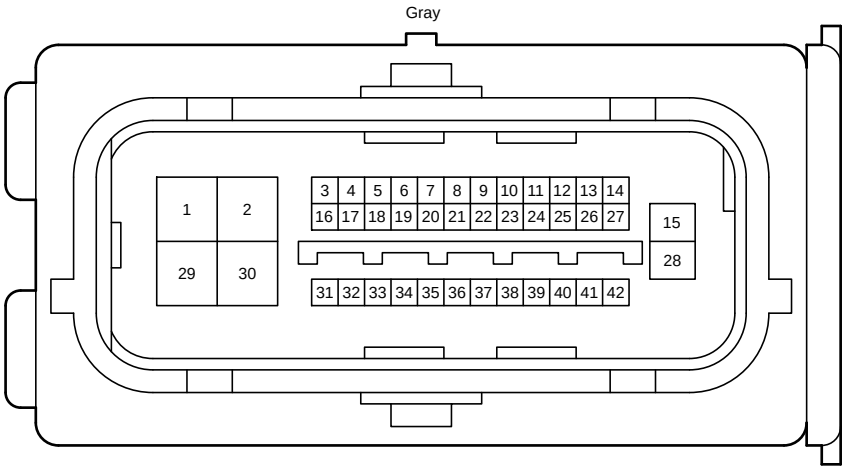

90980-12828

G5
White

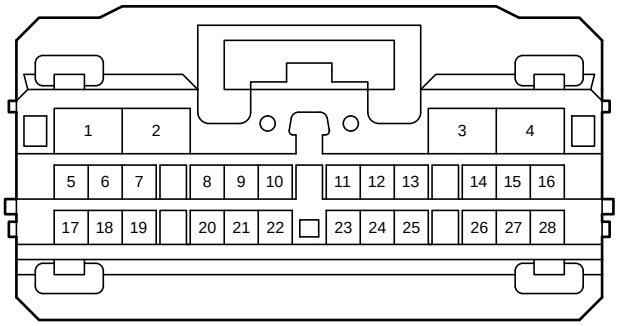

90980-12908

G6
White

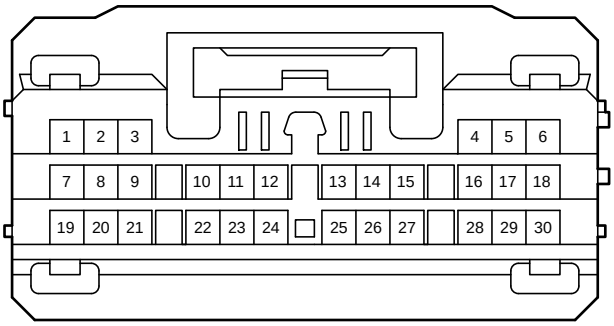

90980-12909

G13
Black

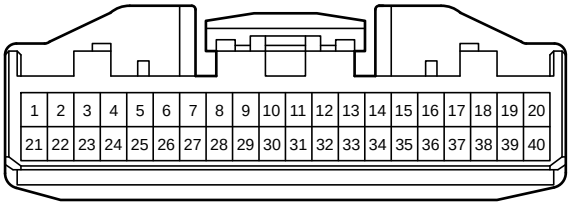

90980-12557

G19
Black

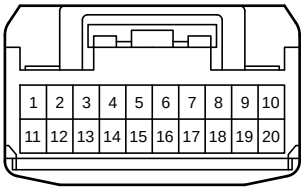

90980-12460

G80
White

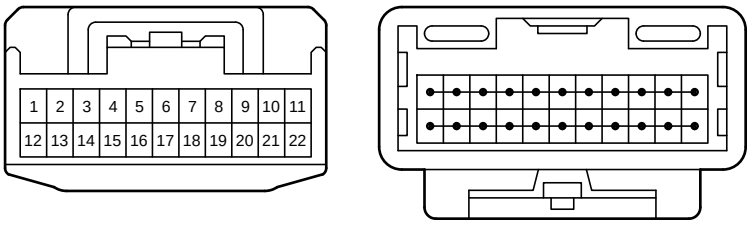

90980-12372

G84
White

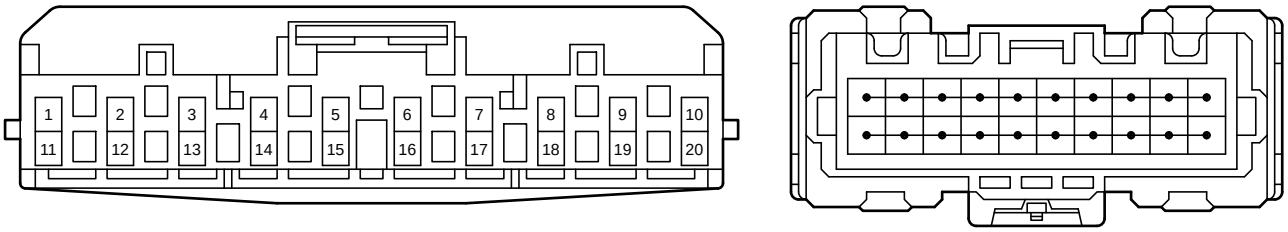

90980-12A58

G85
White

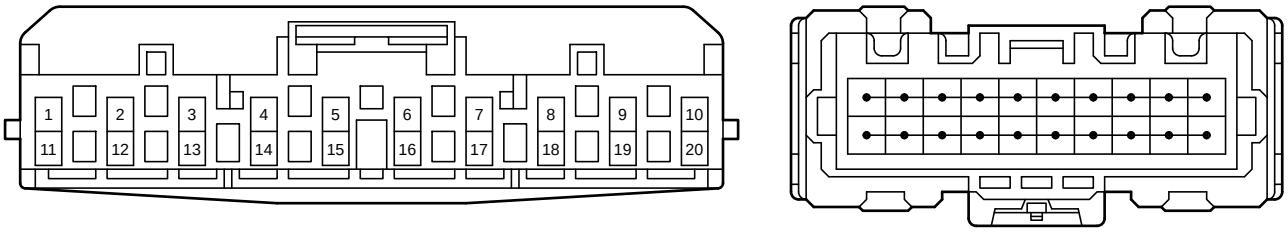

90980-12A58

G88
White

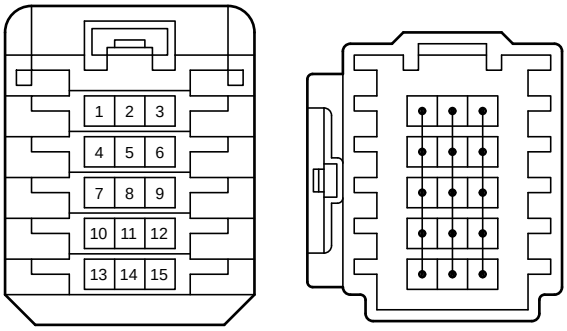

90980-12815

G89
White

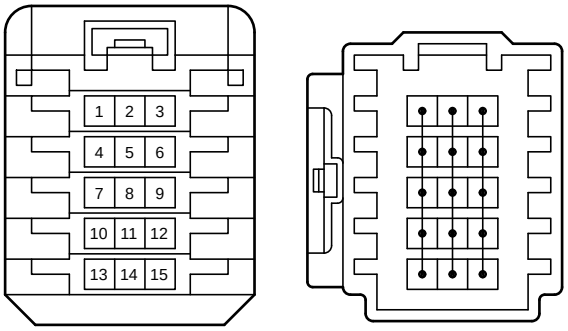

90980-12815

G94
White

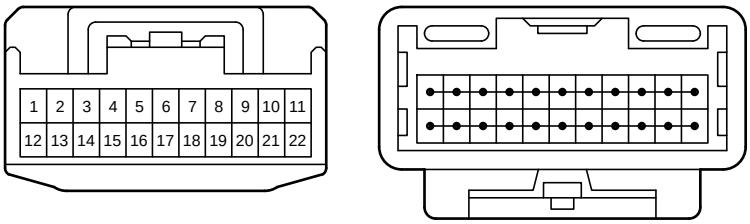

90980-12372

H1
White

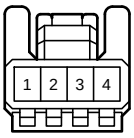

82824-50130

R6
Black

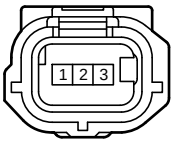

90980-12353

4A
White

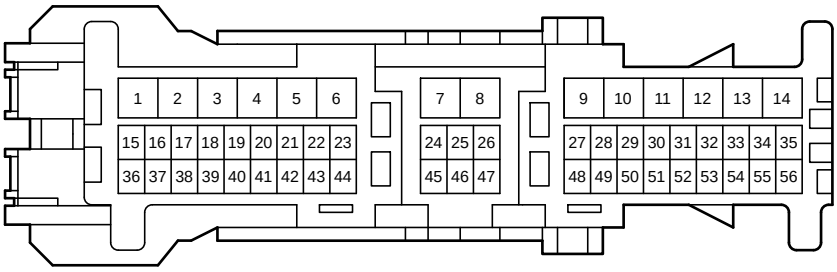

90980-12890

4B
White

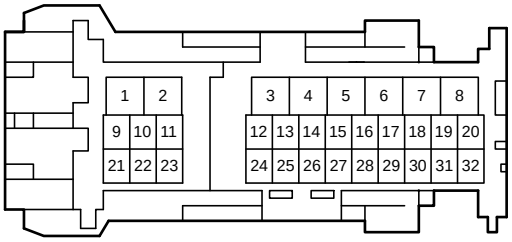

90980-12A48

4C
White

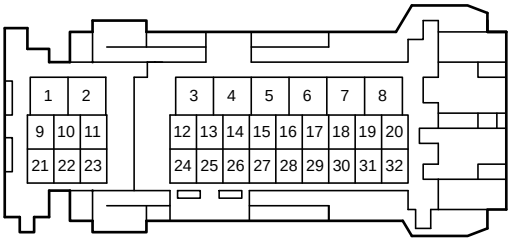

90980-12A47

AG4
Black

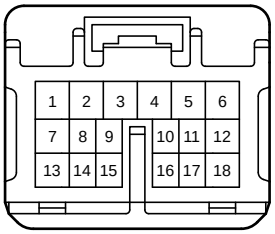

90980-12745

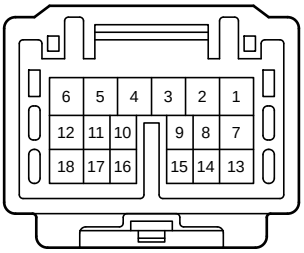

90980-12744

AG6
White

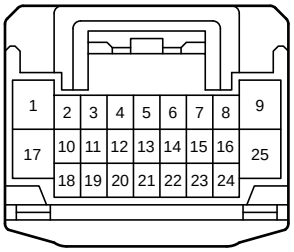

90980-12414

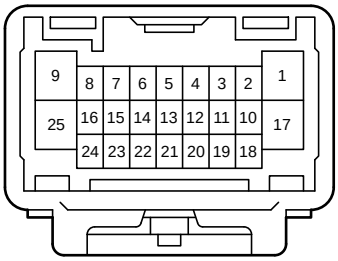

90980-12413

AG8
White

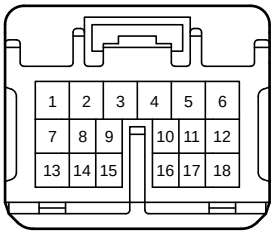

90980-12745

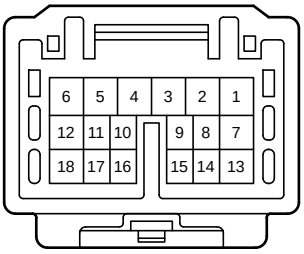

90980-12744

AP1
White

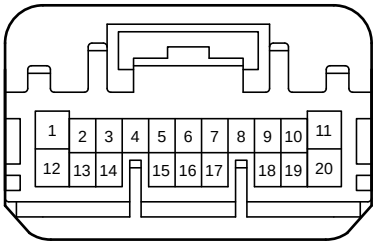

90980-12769

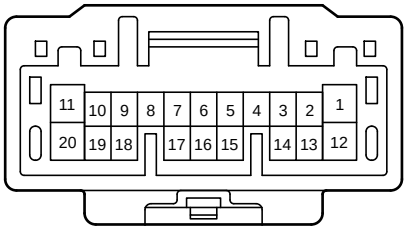

90980-12740

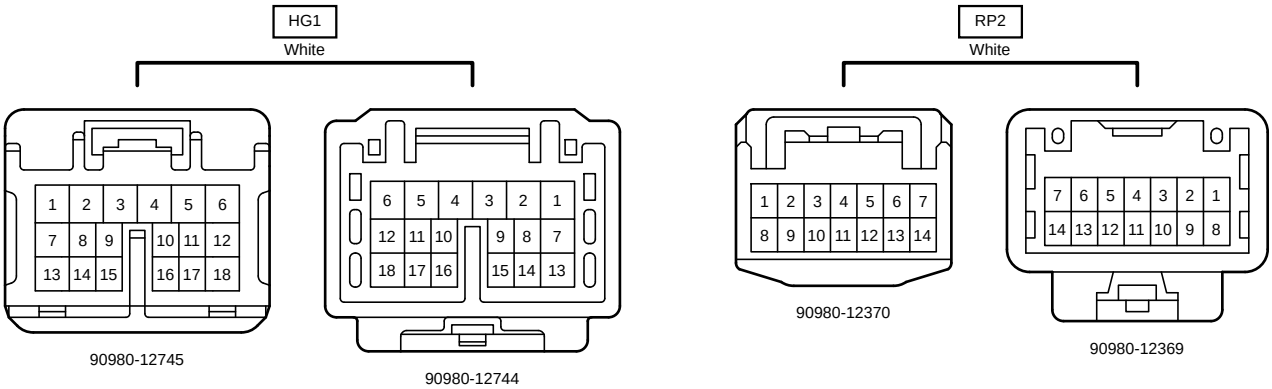
HG1
White
1 2 3 4 5 6
7 8 9 10 11 12
13 14 15 16 17 18
90980-12745
6 5 4 3 2 1
12 11 10 9 8 7
18 17 16 15 14 13
90980-12744
RP2
White
1 2 3 4 5 6 7
8 9 10 11 12 13 14
90980-12370
7 6 5 4 3 2 1
14 13 12 11 10 9 8
90980-12369