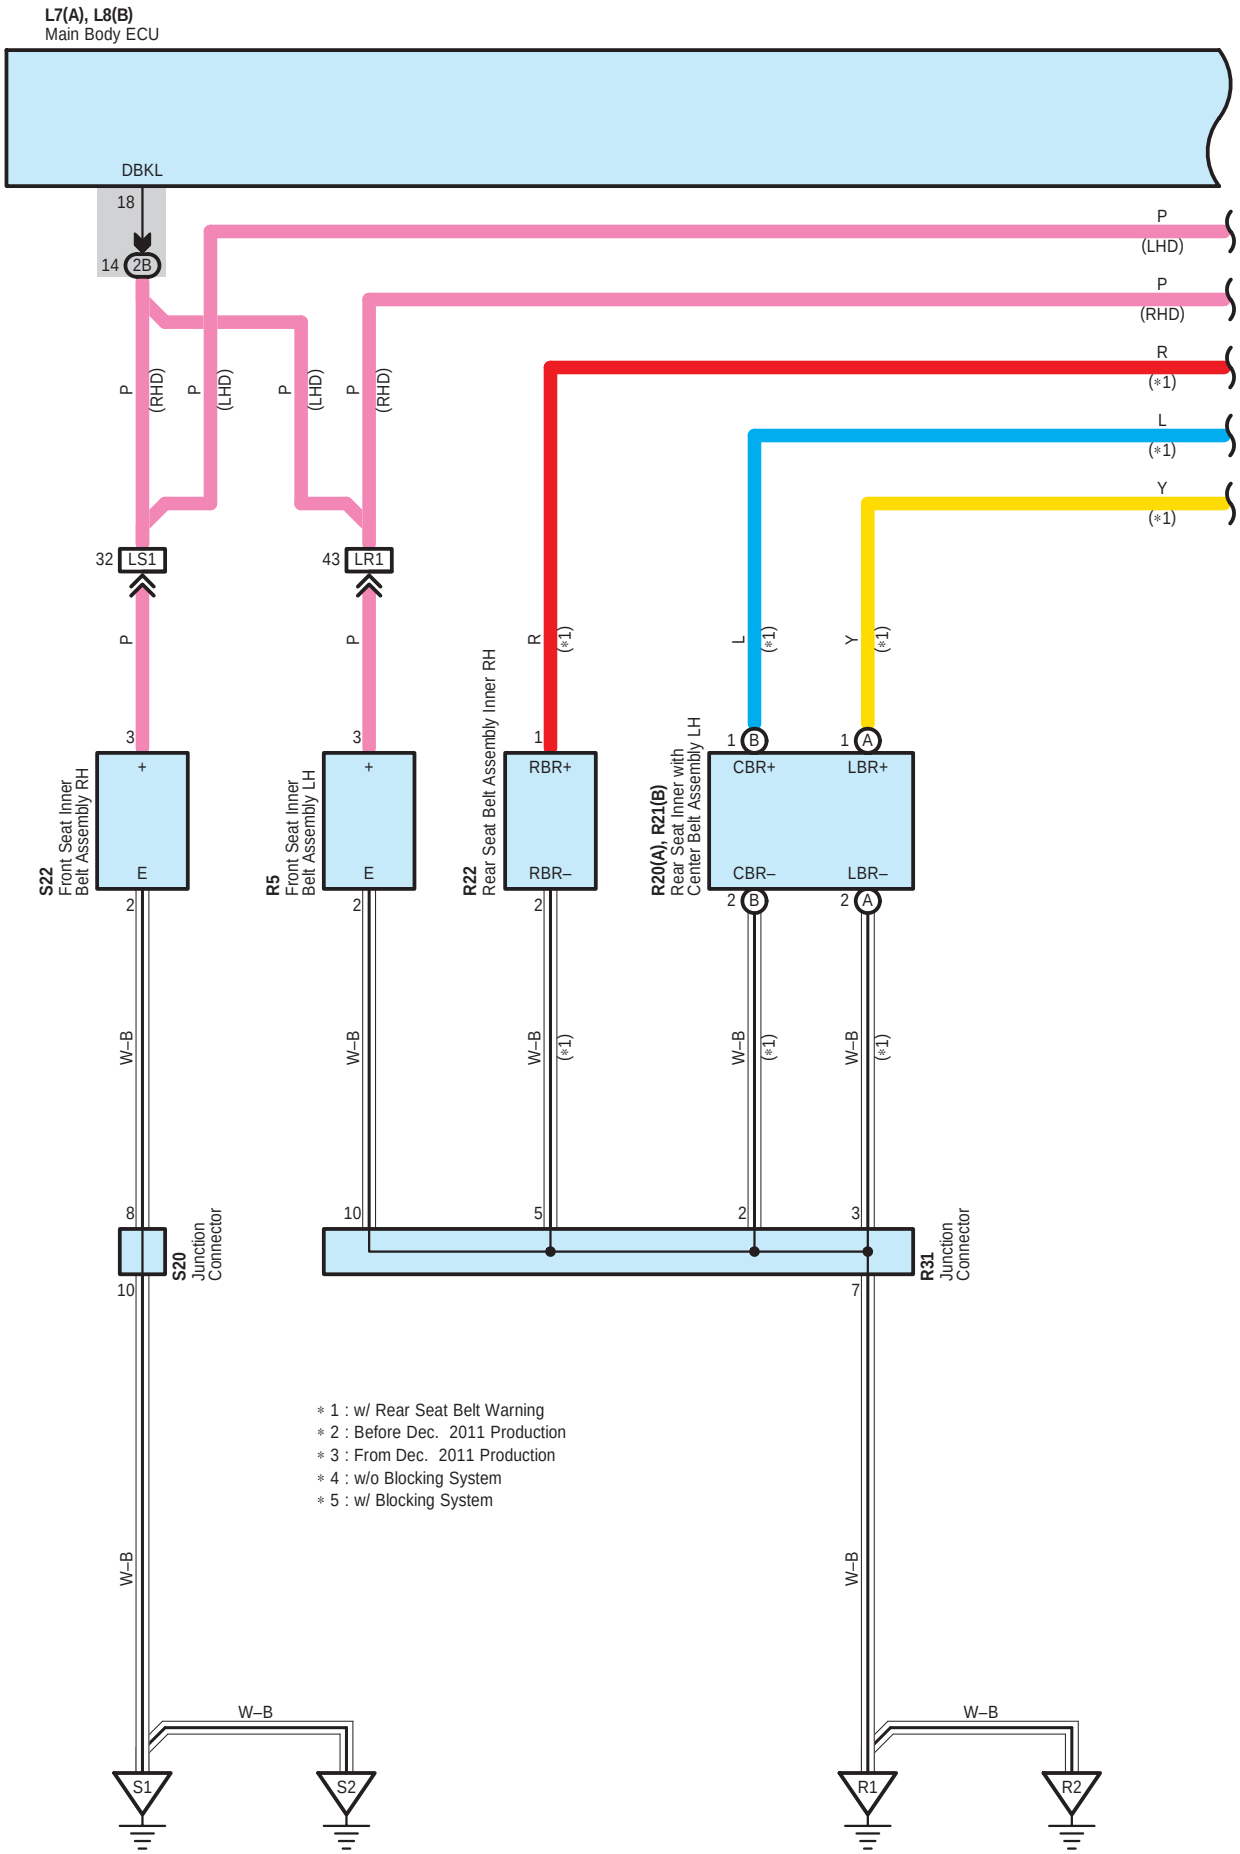
L7(A), L8(B)
Main Body ECU
DBKL
18
14 2B
P (LHD)
P (RHD)
R (*1)
L (*1)
Y (*1)
P (RHD)
P (LHD)
P (LHD)
P (RHD)
32 LS1
43 LR1
P
P
R (*1)
L (*1)
Y (*1)
S22
Front Seat Inner Belt Assembly RH
R5
Front Seat Inner Belt Assembly LH
R22
Rear Seat Belt Assembly Inner RH
RBR+
RBR–
R20(A), R21(B)
Rear Seat Inner with Center Belt Assembly LH
CBR+
LBR+
CBR–
LBR–
W–B
W–B (*1)
S20
Junction Connector
R31
Junction Connector
* 1 : w/ Rear Seat Belt Warning
* 2 : Before Dec. 2011 Production
* 3 : From Dec. 2011 Production
* 4 : w/o Blocking System
* 5 : w/ Blocking System
W–B
S1
S2
R1
R2

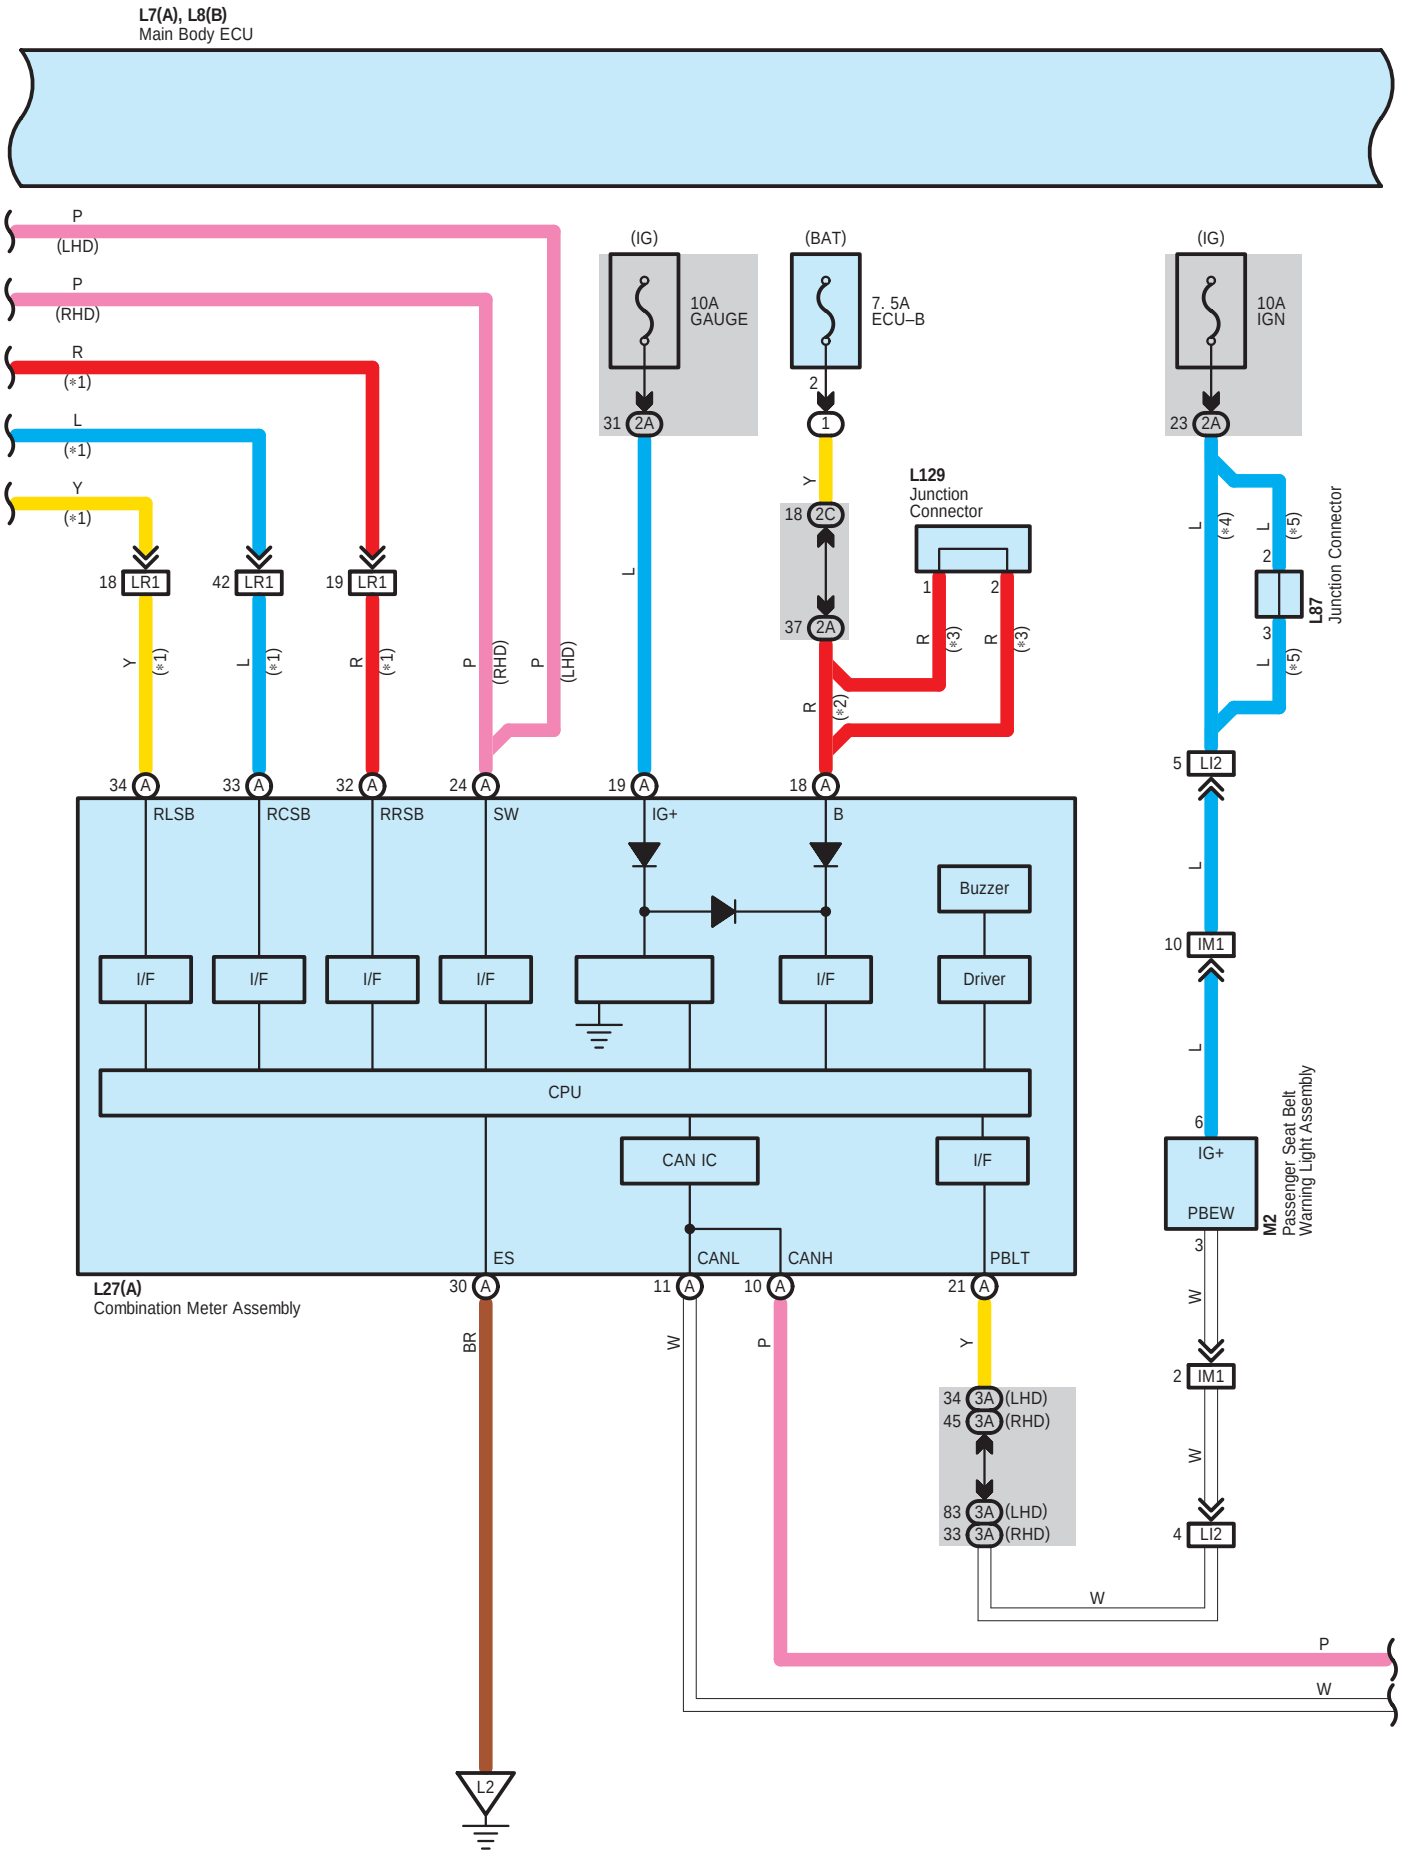
L7(A), L8(B)
Main Body ECU
P
(LHD)
P
(RHD)
R
(*1)
L
(*1)
Y
(*1)
18 LR1
42 LR1
19 LR1
(IG)
10A
GAUGE
31 2A
(BAT)
7. 5A
ECU–B
2
1
Y
18 2C
37 2A
L129
Junction
Connector
1
2
R
(*3)
R
(*3)
R
(*2)
(IG)
10A
IGN
23 2A
L
(*4)
L
(*5)
2
3
L
(*5)
L87
Junction Connector
5 LI2
10 IM1
6
IG+
PBEW
M2
Passenger Seat Belt
Warning Light Assembly
3
W
2 IM1
W
4 LI2
34 A
33 A
32 A
24 A
19 A
18 A
RLSB
RCSB
RRSB
SW
IG+
B
Buzzer
I/F
I/F
I/F
I/F
I/F
Driver
CPU
CAN IC
I/F
ES
CANL
CANH
PBLT
L27(A)
Combination Meter Assembly
30 A
11 A
10 A
21 A
BR
W
P
Y
34 3A (LHD)
45 3A (RHD)
83 3A (LHD)
33 3A (RHD)
W
P
W
L2

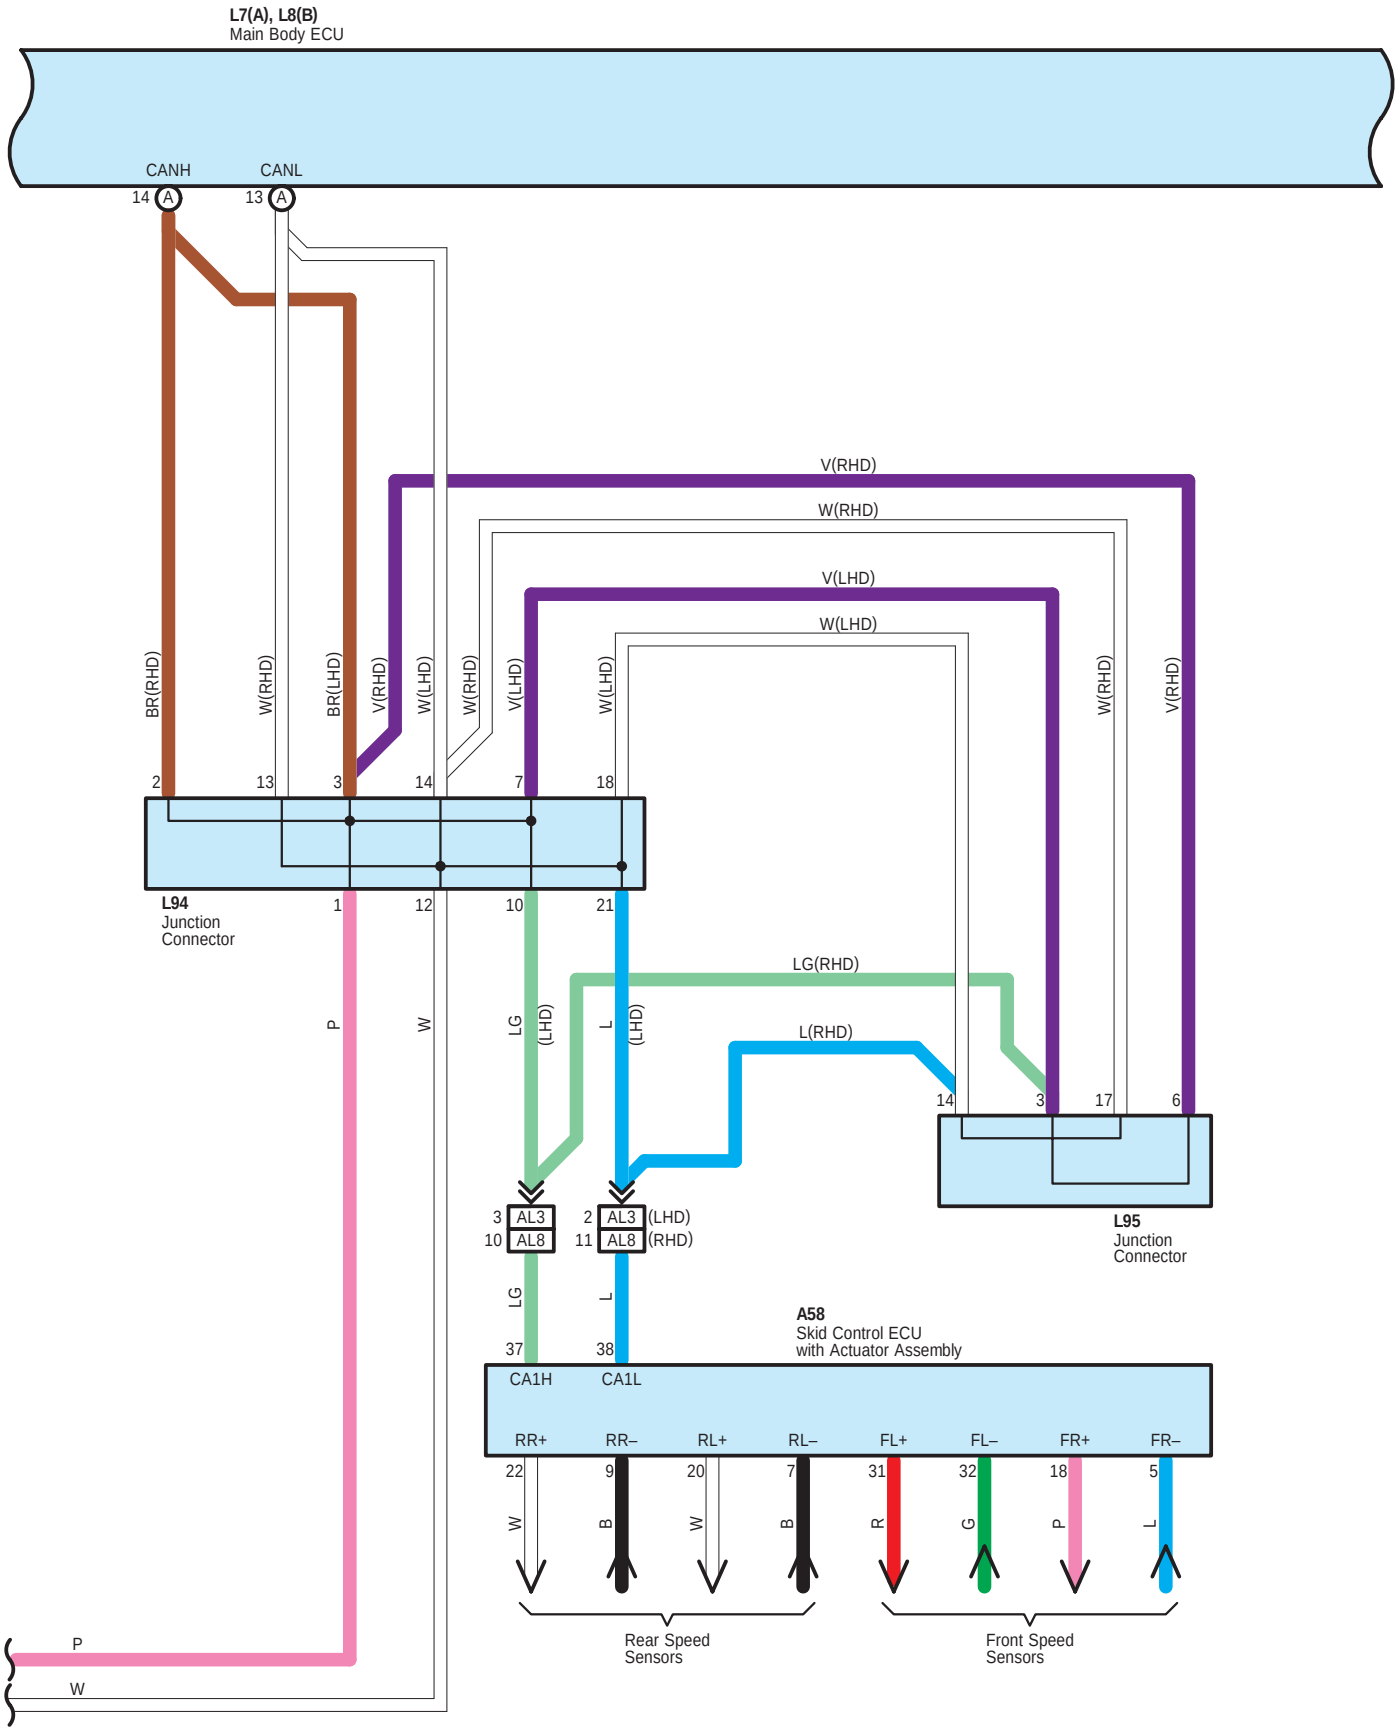
L7(A), L8(B)
Main Body ECU
CANH
CANL
14 A
13 A
V(RHD)
W(RHD)
V(LHD)
W(LHD)
BR(RHD)
W(RHD)
BR(LHD)
V(RHD)
W(LHD)
W(RHD)
V(LHD)
W(LHD)
W(RHD)
V(RHD)
2
13
3
14
7
18
L94
Junction
Connector
1
12
10
21
LG(RHD)
P
W
LG
(LHD)
L
(LHD)
L(RHD)
14
3
17
6
L95
Junction
Connector
3 AL3
10 AL8
2 AL3 (LHD)
11 AL8 (RHD)
LG
L
A58
Skid Control ECU
with Actuator Assembly
37
38
CA1H
CA1L
RR+
RR–
RL+
RL–
FL+
FL–
FR+
FR–
22
9
20
7
31
32
18
5
W
B
W
B
R
G
P
L
Rear Speed
Sensors
Front Speed
Sensors
P
W

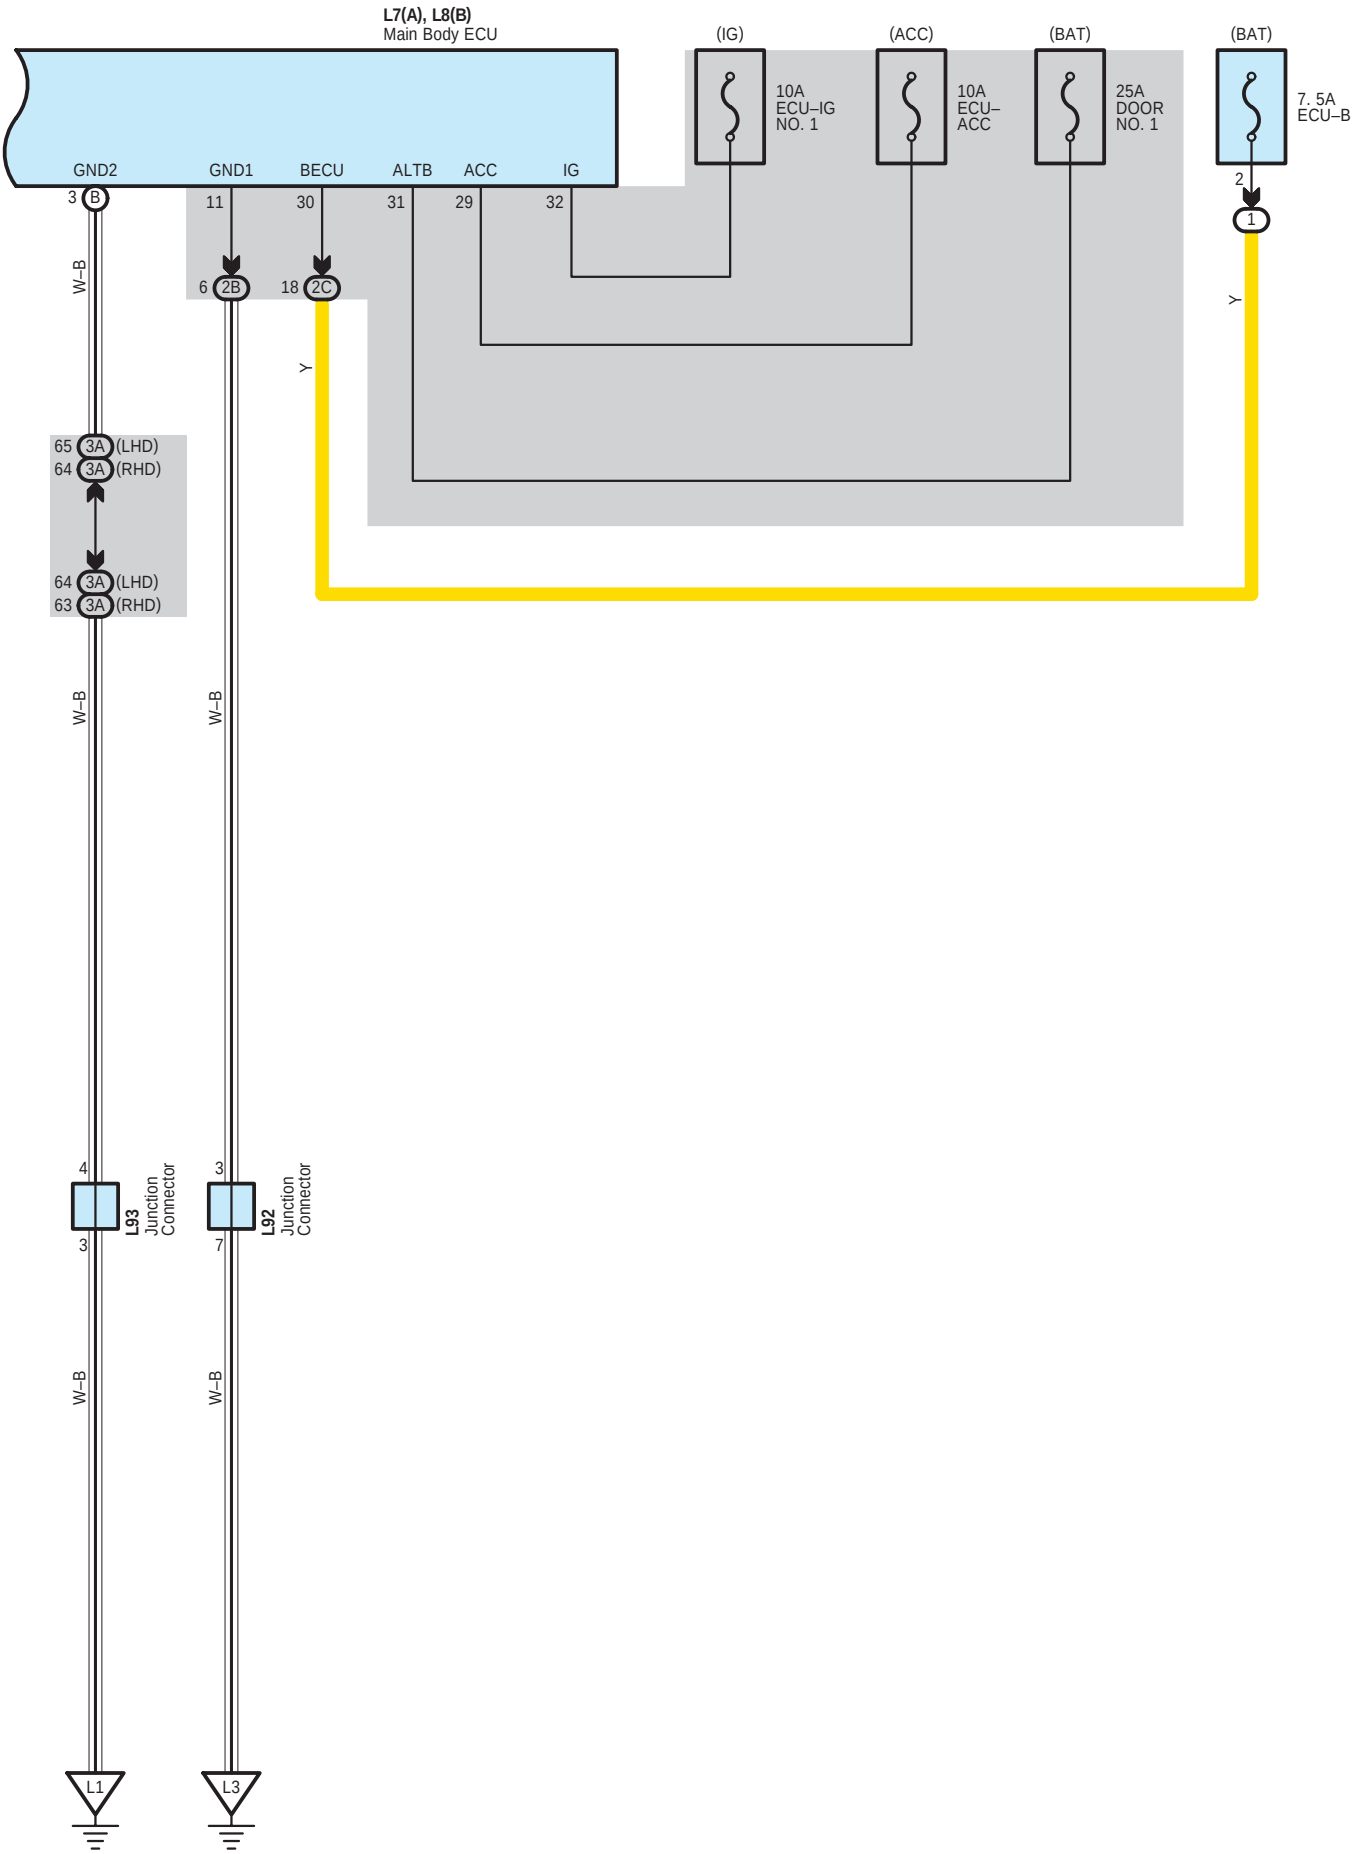
L7(A), L8(B)
Main Body ECU
GND2
GND1
BECU
ALTB
ACC
IG
(IG)
(ACC)
(BAT)
(BAT)
10A
ECU–IG
NO. 1
10A
ECU–
ACC
25A
DOOR
NO. 1
7. 5A
ECU–B
3 B
11
30
31
29
32
2
1
6 2B
18 2C
W–B
Y
65 3A (LHD)
64 3A (RHD)
64 3A (LHD)
63 3A (RHD)
4
3
L93
Junction
Connector
3
7
L92
Junction
Connector
L1
L3

A 58
Gray

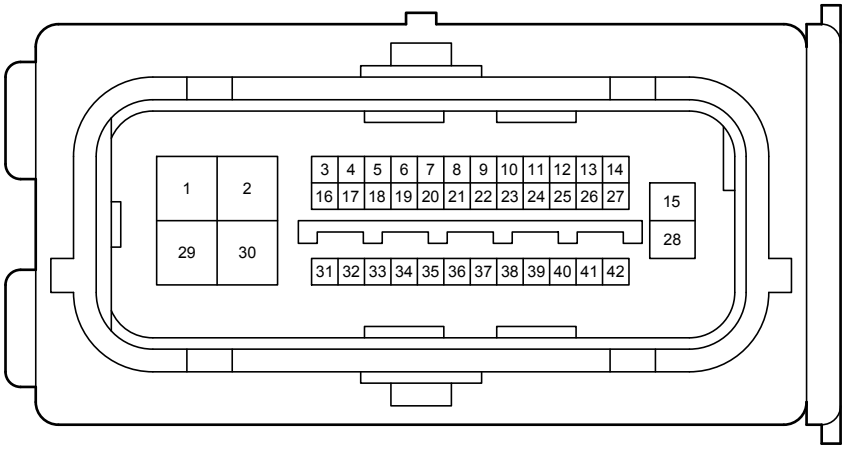

L 7
White

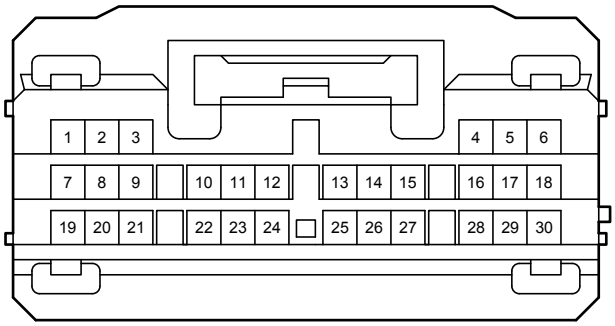

L 8
White

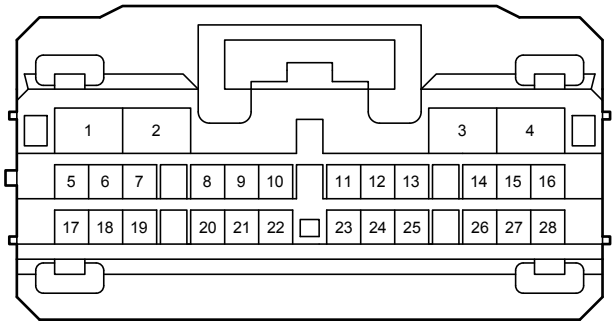

L 27
White

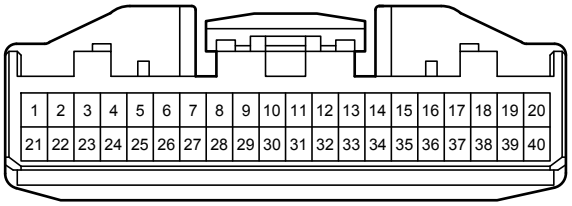

L 87
Black

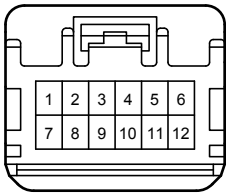

L 92
White

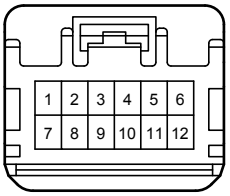

L 93
White

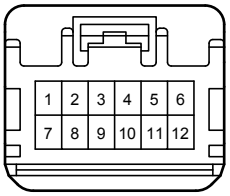

L 94
White

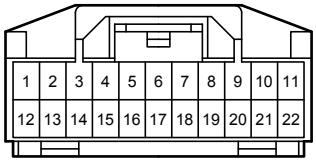

L 95
White

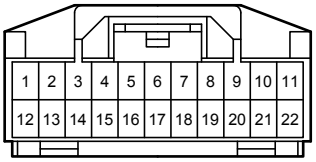

L129
Gray

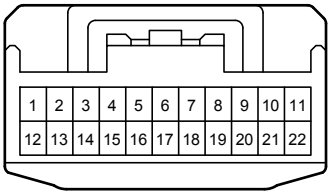

M 2
White



R 5
White

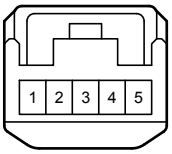

R 20
Black

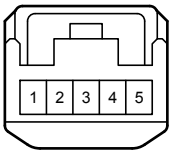

R 21
White

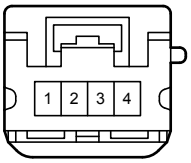

R 22
Gray

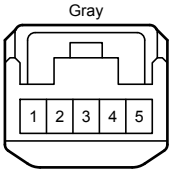

R 31
White

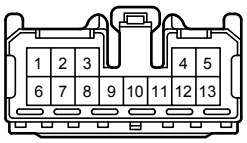

S 20
White

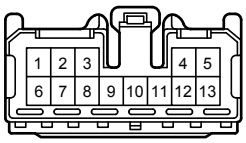

S 22
White

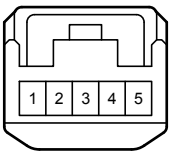

2A
White

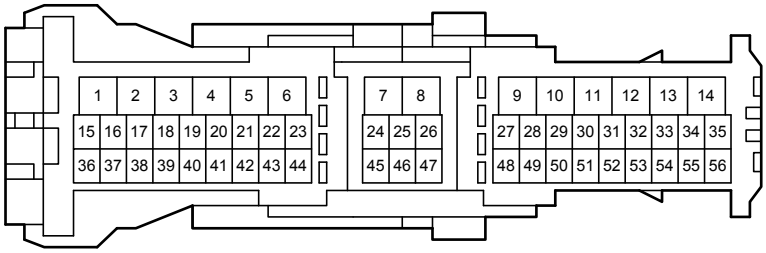

2B
White

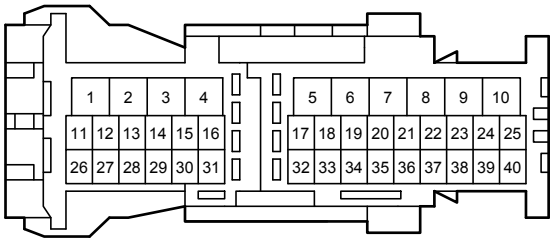

2C
White

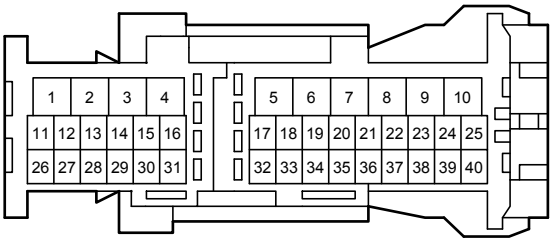

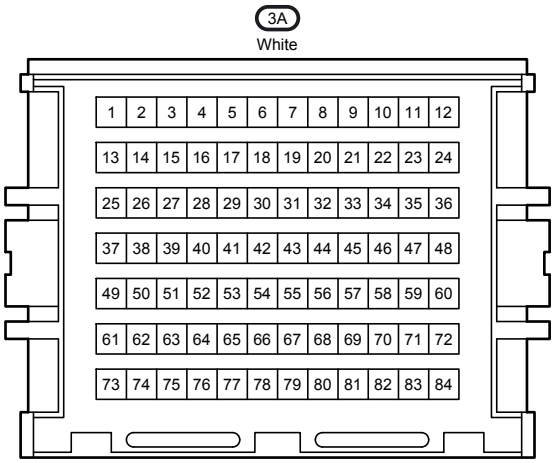
3A
White

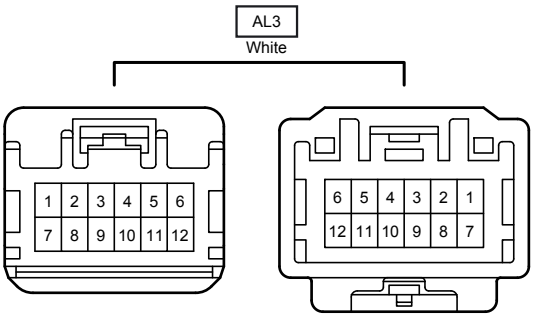
AL3
White

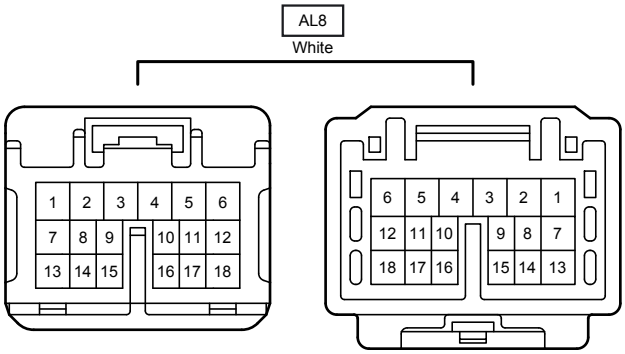
AL8
White

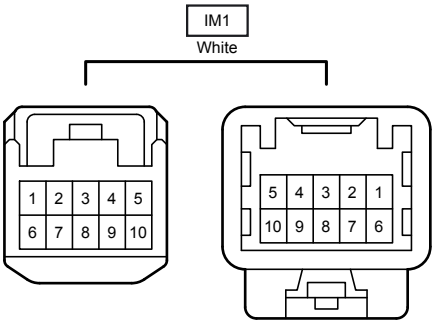
IM1
White

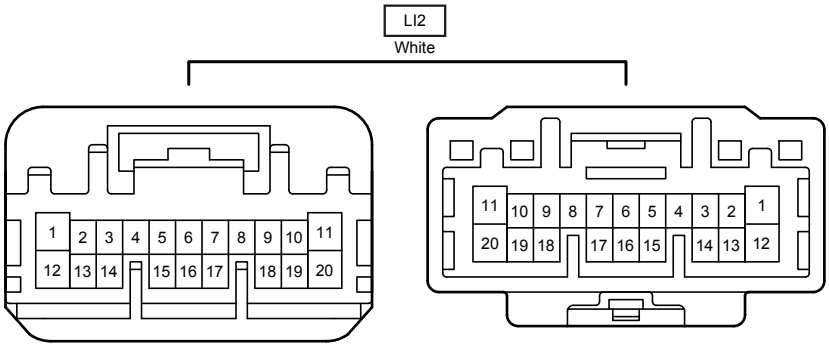
LI2
White

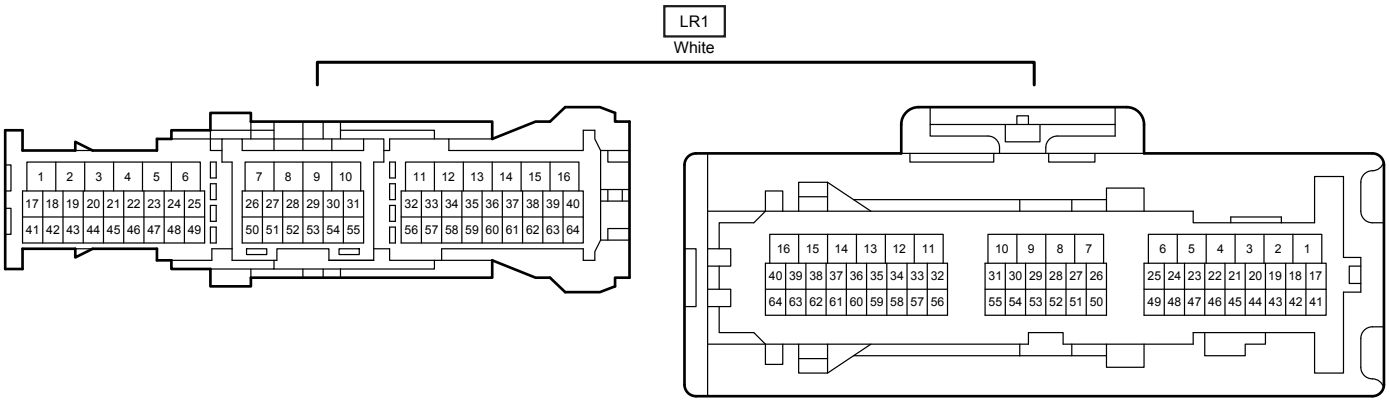
LR1
White

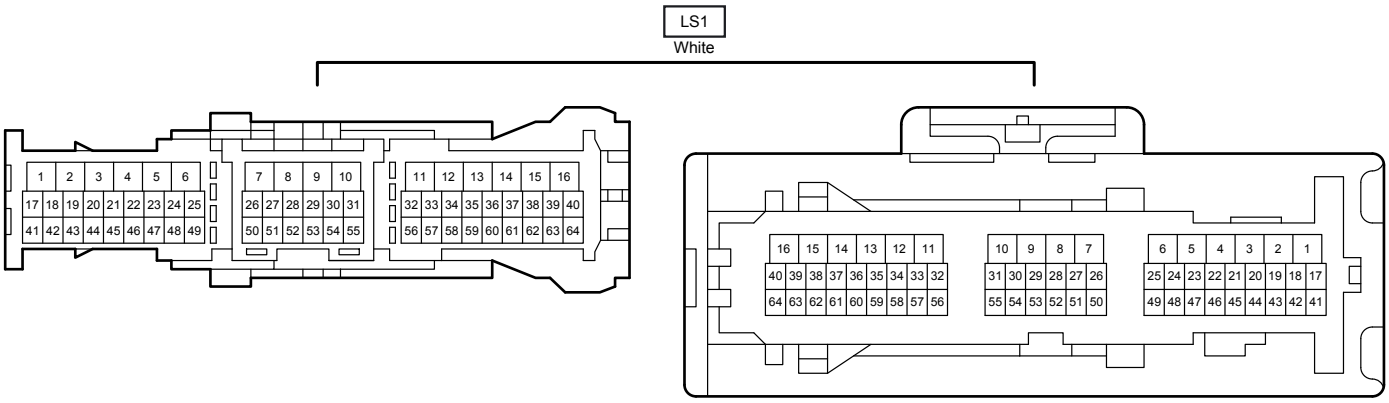
LS1
White
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16
17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40
41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64
16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1
40 39 38 37 36 35 34 33 32 31 30 29 28 27 26 25 24 23 22 21 20 19 18 17
64 63 62 61 60 59 58 57 56 55 54 53 52 51 50 49 48 47 46 45 44 43 42 41