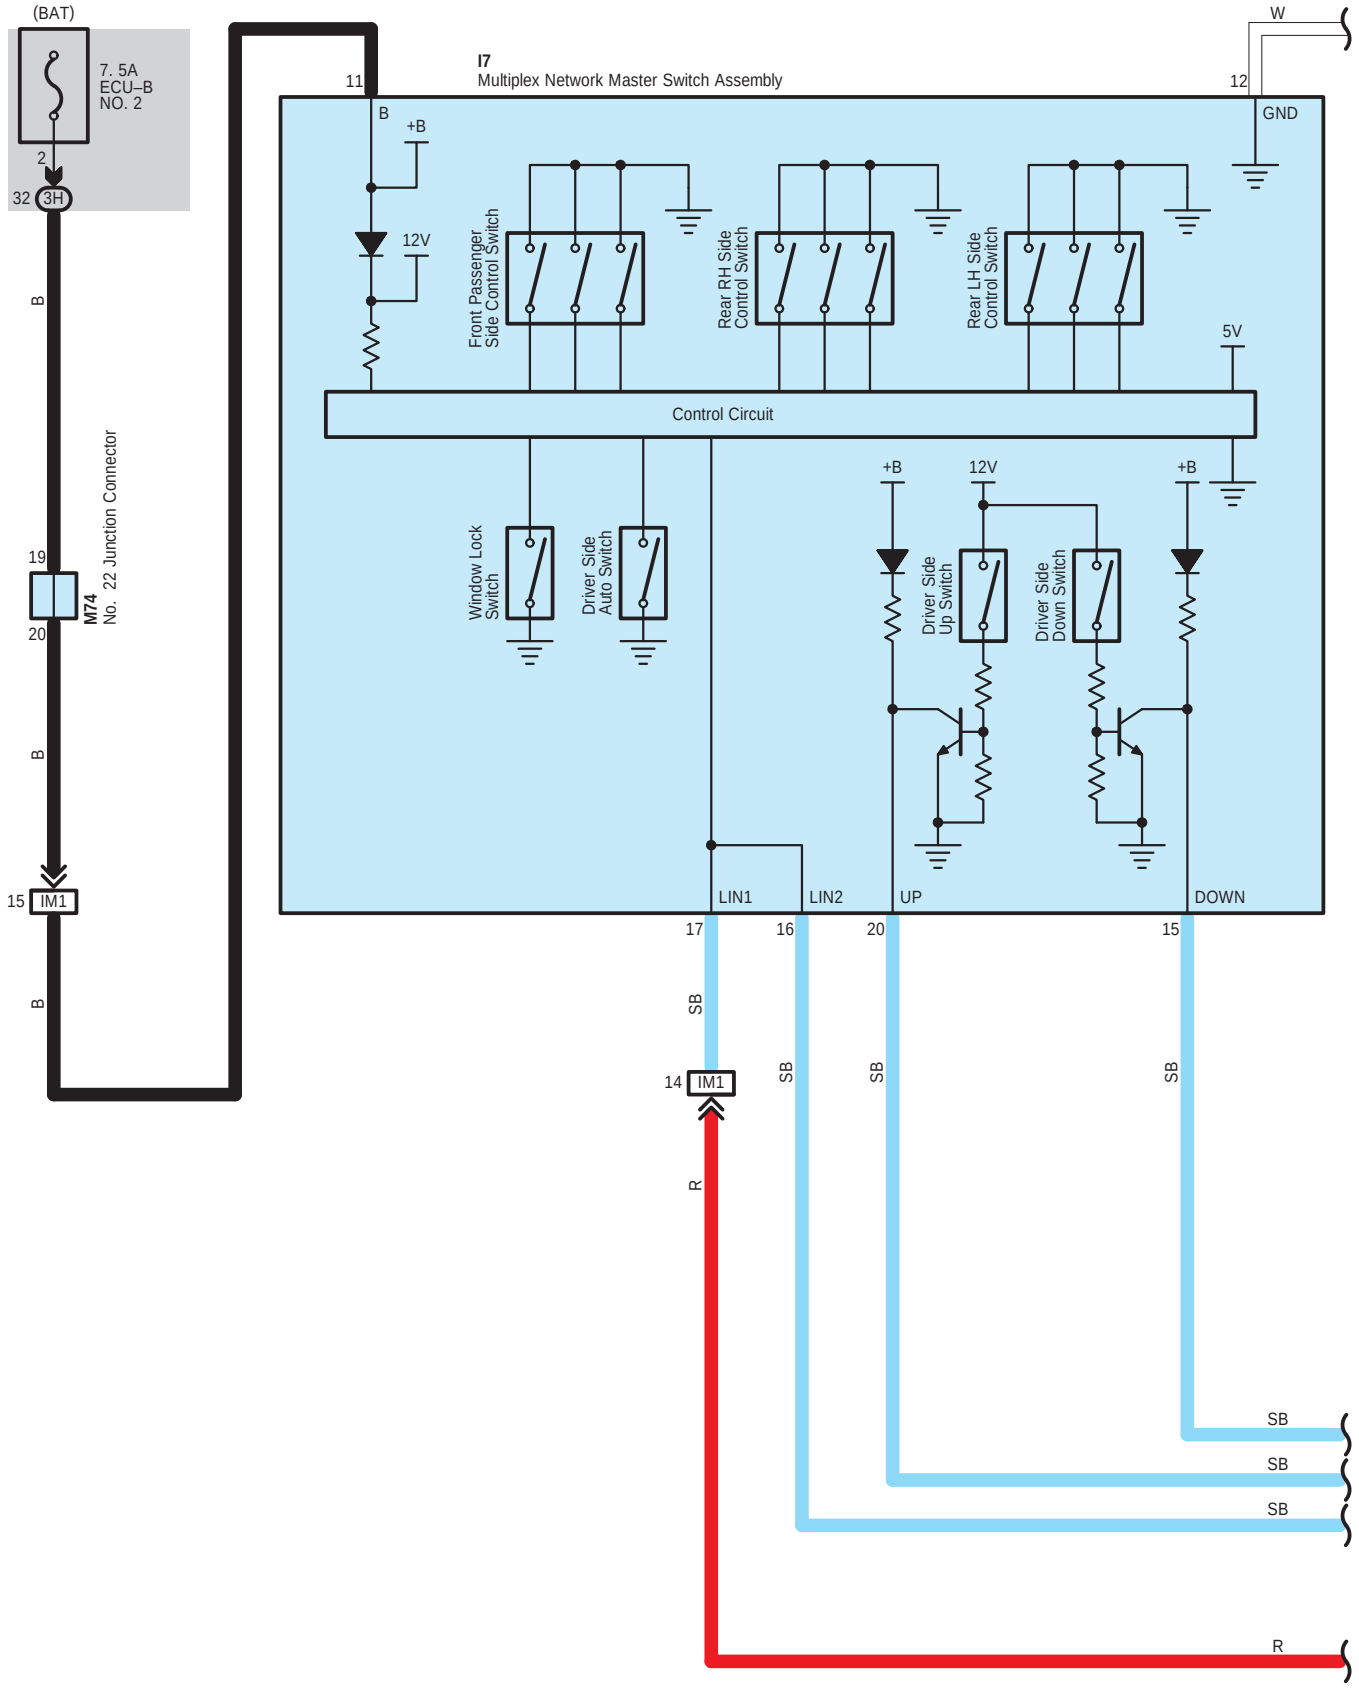
(BAT)
7. 5A
ECU–B
NO. 2
2
32
3H
B
19
20
M74
No. 22 Junction Connector
B
15
IM1
B
I7
Multiplex Network Master Switch Assembly
11
B
+B
12V
Front Passenger
Side Control Switch
Rear RH Side
Control Switch
Rear LH Side
Control Switch
12
W
GND
5V
Control Circuit
Window Lock
Switch
Driver Side
Auto Switch
+B
12V
+B
Driver Side
Up Switch
Driver Side
Down Switch
LIN1
LIN2
UP
DOWN
17
16
20
15
SB
14
IM1
SB
SB
SB
R
SB
SB
SB
R

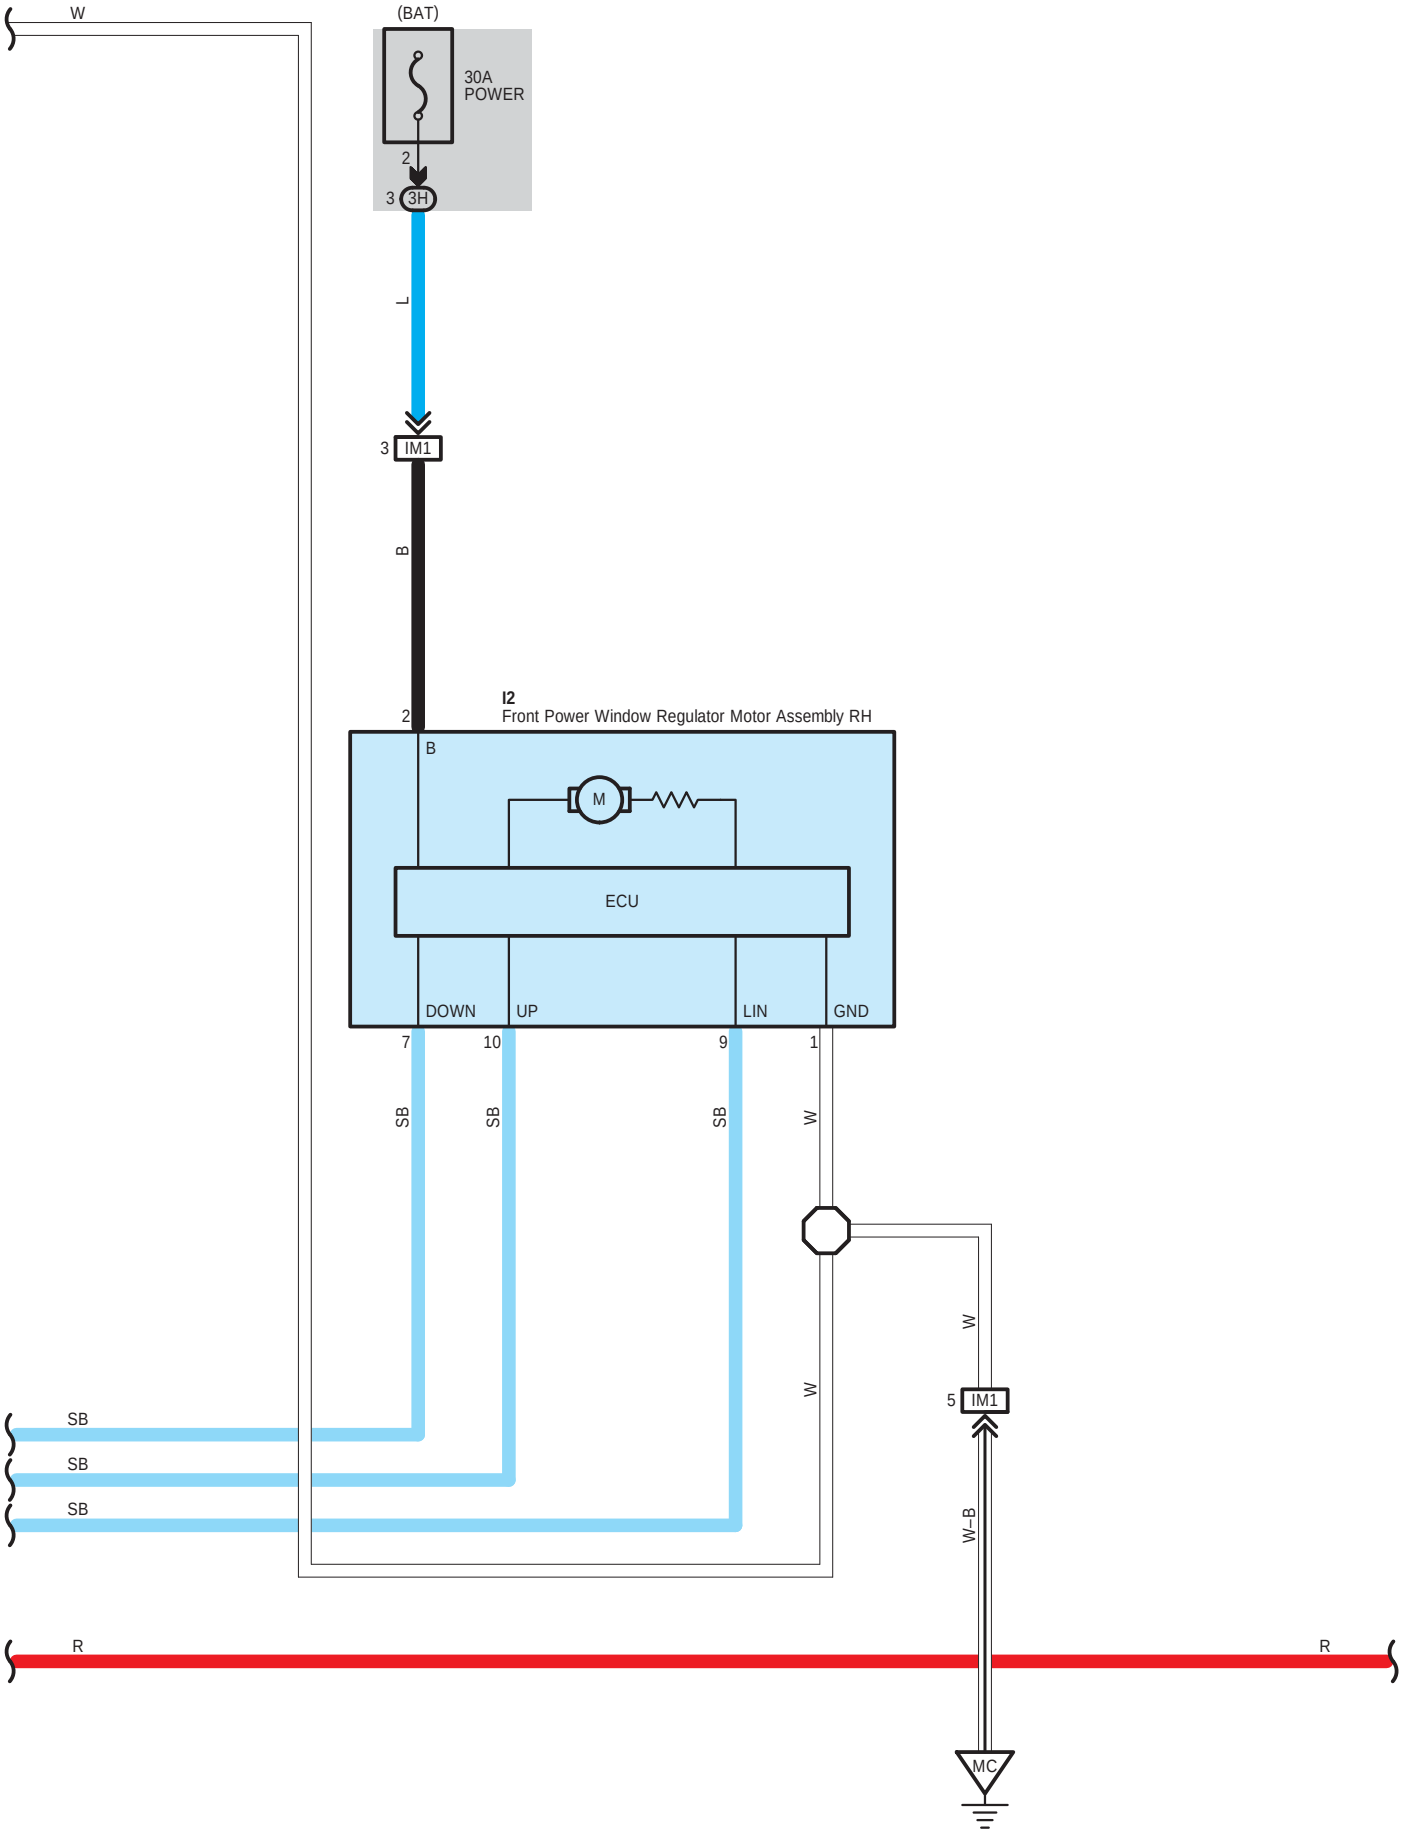
W
(BAT)
30A
POWER
2
3
3H
L
3
IM1
B
2
I2
Front Power Window Regulator Motor Assembly RH
B
M
ECU
DOWN
UP
LIN
GND
7
10
9
1
SB
SB
SB
W
W
W
5
IM1
W–B
SB
SB
SB
R
R
MC

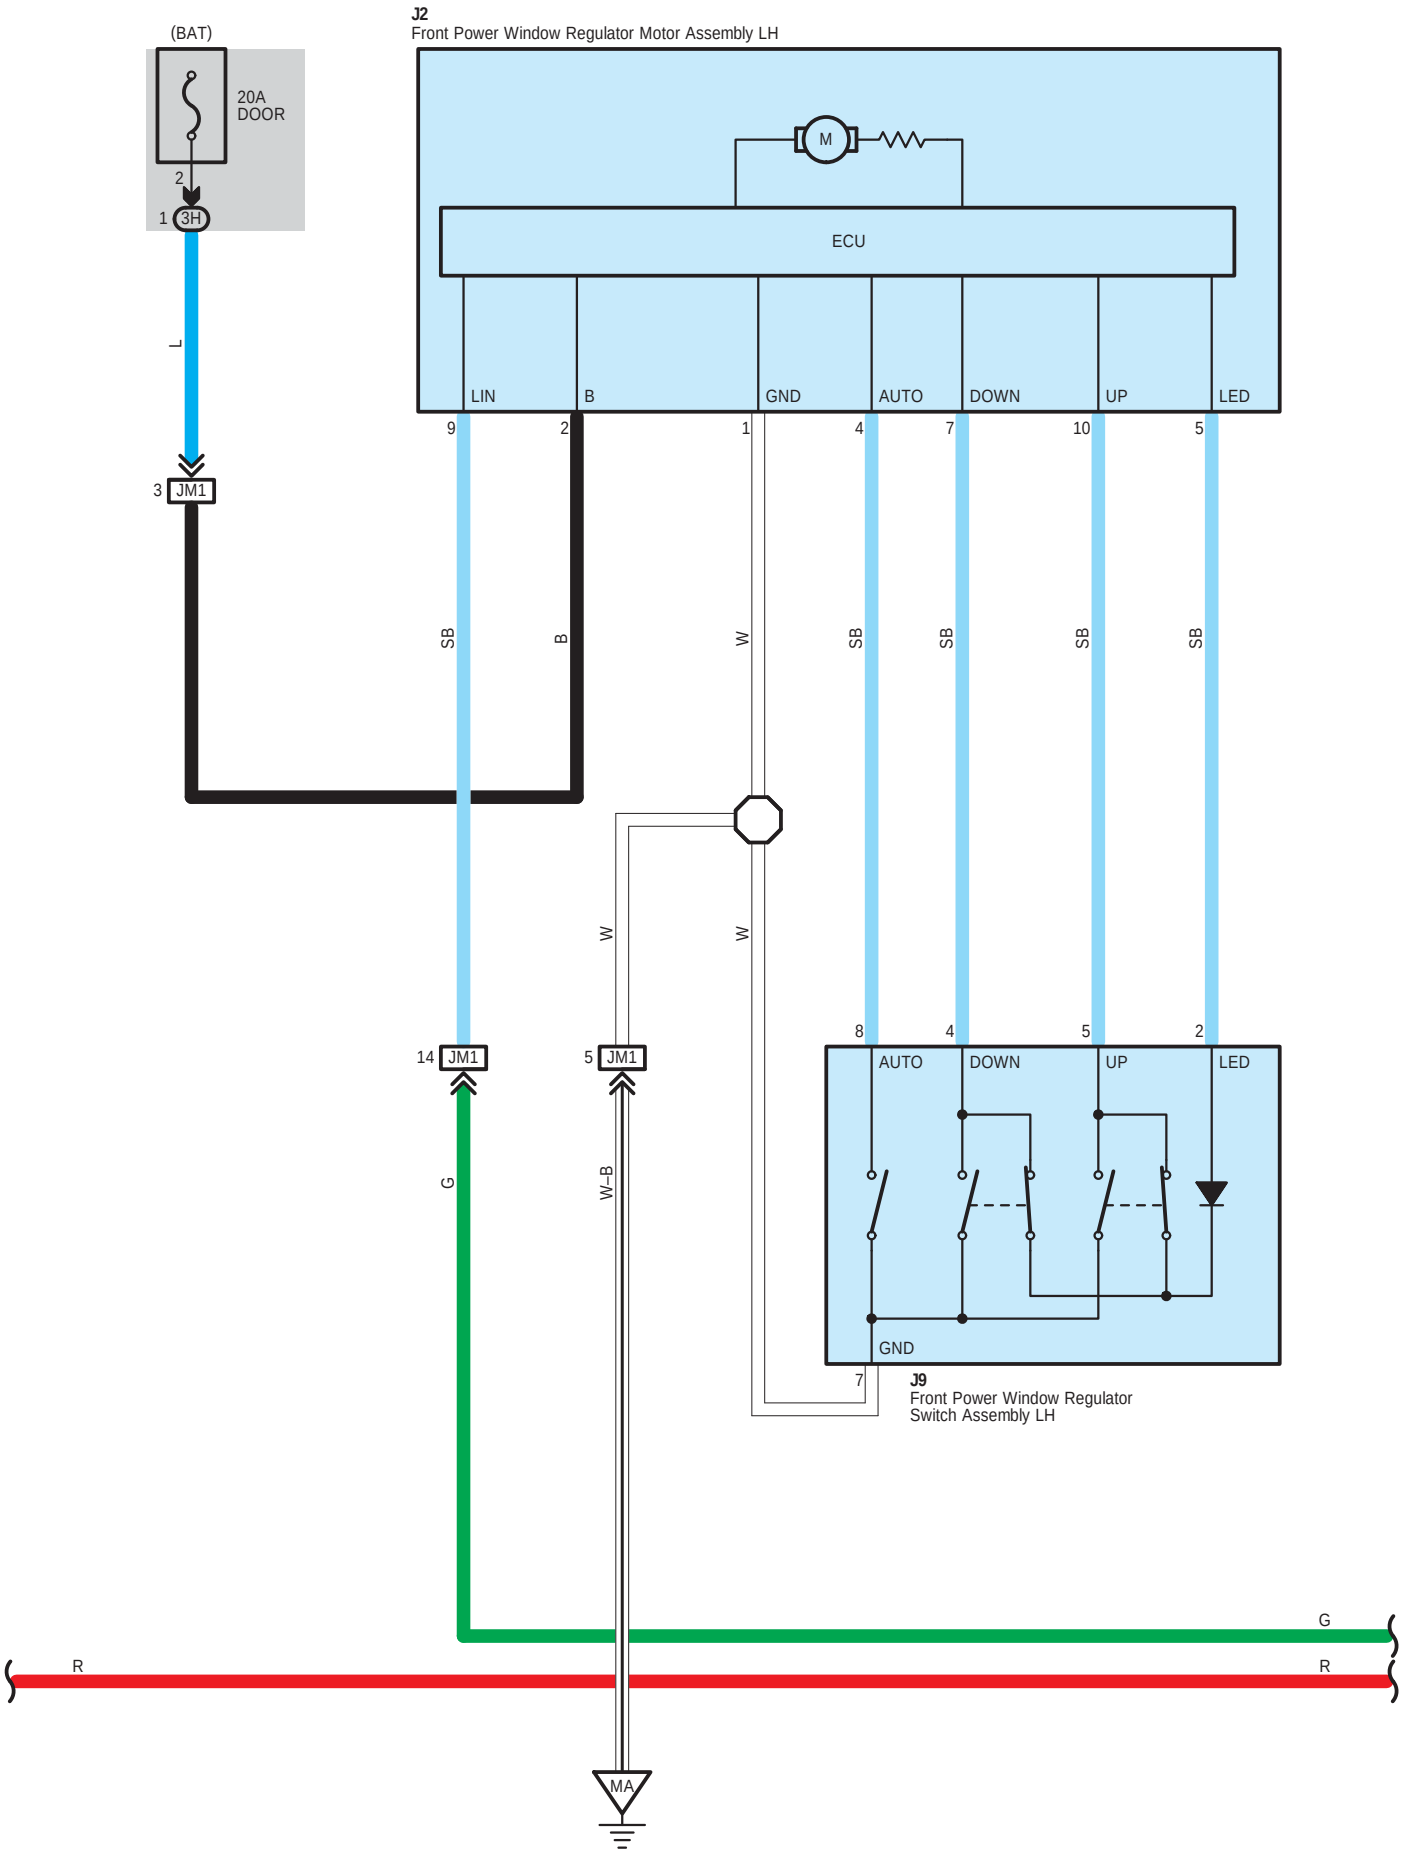
(BAT)
20A
DOOR
2
1 3H
L
3 JM1
J2
Front Power Window Regulator Motor Assembly LH
M
ECU
LIN
B
GND
AUTO
DOWN
UP
LED
9
2
1
4
7
10
5
SB
B
W
SB
SB
SB
SB
W
W
14 JM1
5 JM1
G
W–B
8
4
5
2
AUTO
DOWN
UP
LED
GND
7
J9
Front Power Window Regulator
Switch Assembly LH
G
R
R
MA

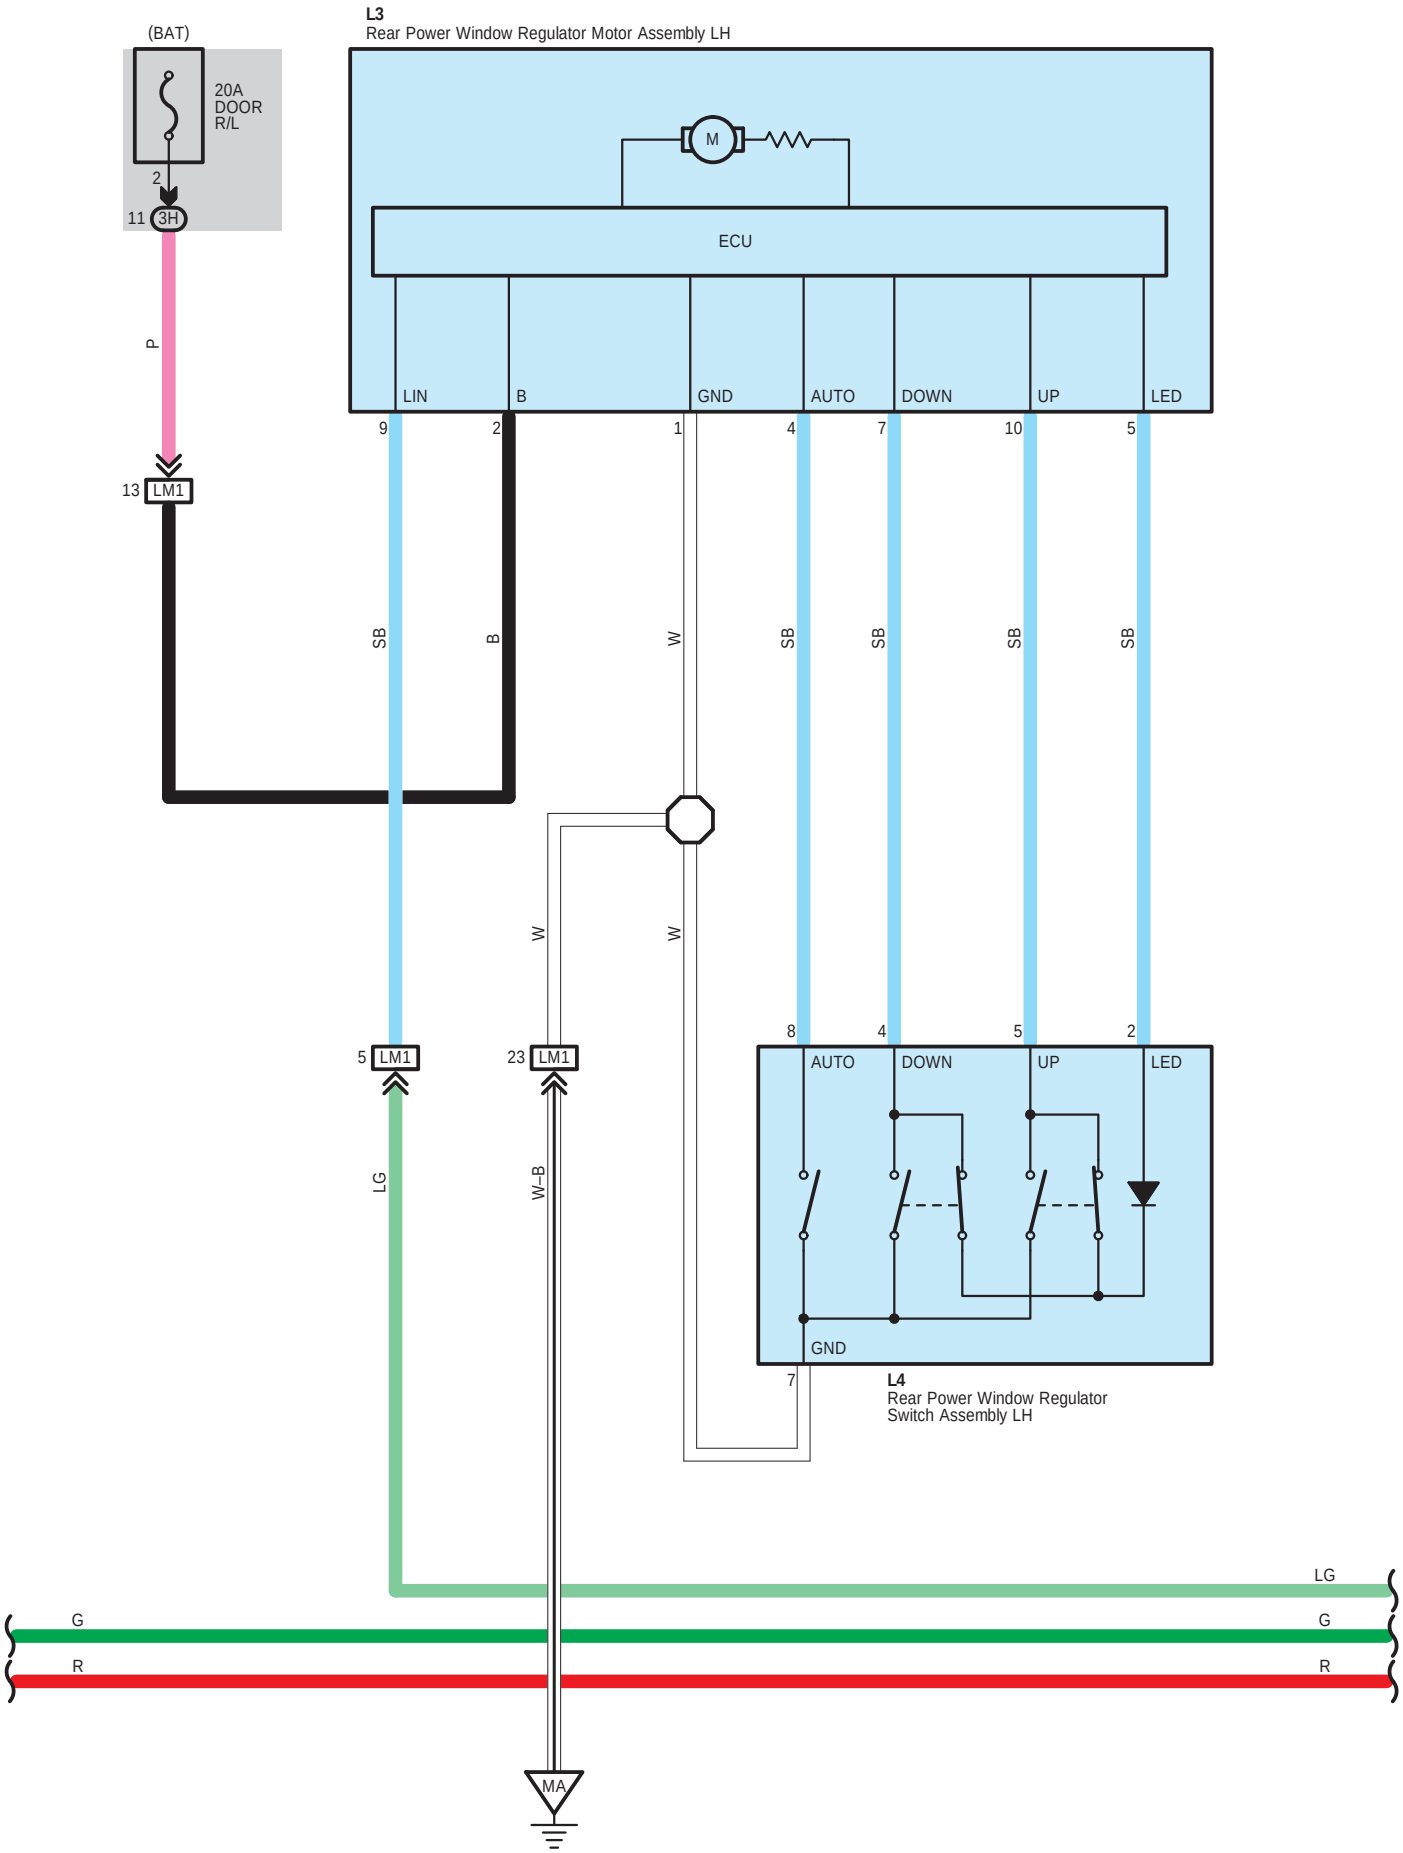
(BAT)
20A
DOOR
R/L
2
11 3H
P
13 LM1
L3
Rear Power Window Regulator Motor Assembly LH
M
ECU
LIN
B
GND
AUTO
DOWN
UP
LED
9
2
1
4
7
10
5
SB
B
W
SB
SB
SB
SB
W
W
5 LM1
23 LM1
LG
W–B
8
4
5
2
AUTO
DOWN
UP
LED
GND
7
L4
Rear Power Window Regulator
Switch Assembly LH
LG
G
R
LG
G
R
MA

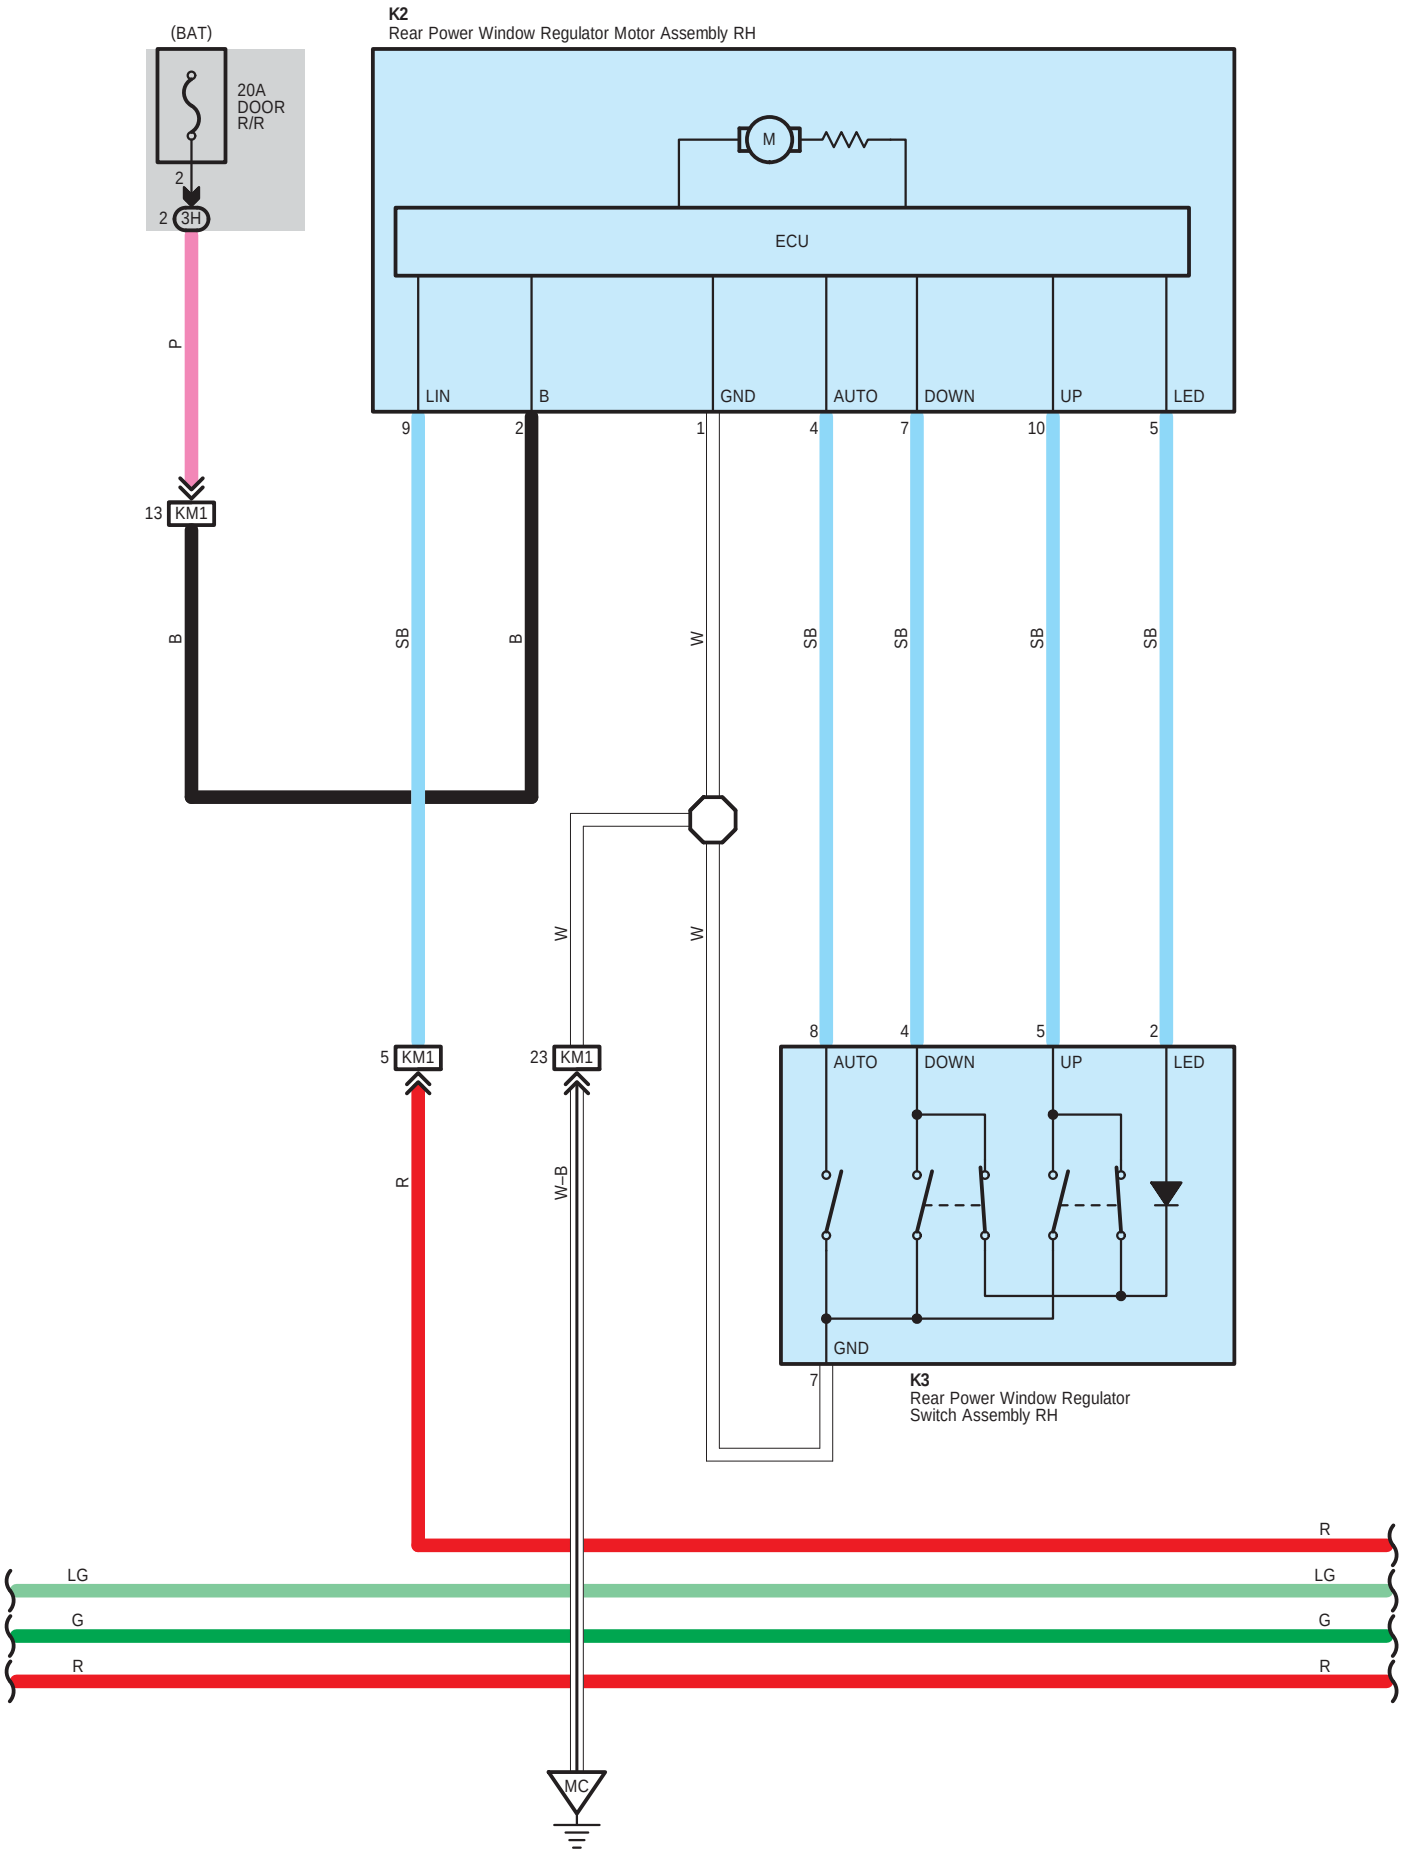
(BAT)
20A
DOOR
R/R
2
2 3H
P
13 KM1
B
K2
Rear Power Window Regulator Motor Assembly RH
M
ECU
LIN
B
GND
AUTO
DOWN
UP
LED
9
2
1
4
7
10
5
SB
B
W
SB
SB
SB
SB
W
W
5 KM1
23 KM1
R
W–B
8
4
5
2
AUTO
DOWN
UP
LED
GND
7
K3
Rear Power Window Regulator
Switch Assembly RH
R
LG
G
R
LG
G
R
MC

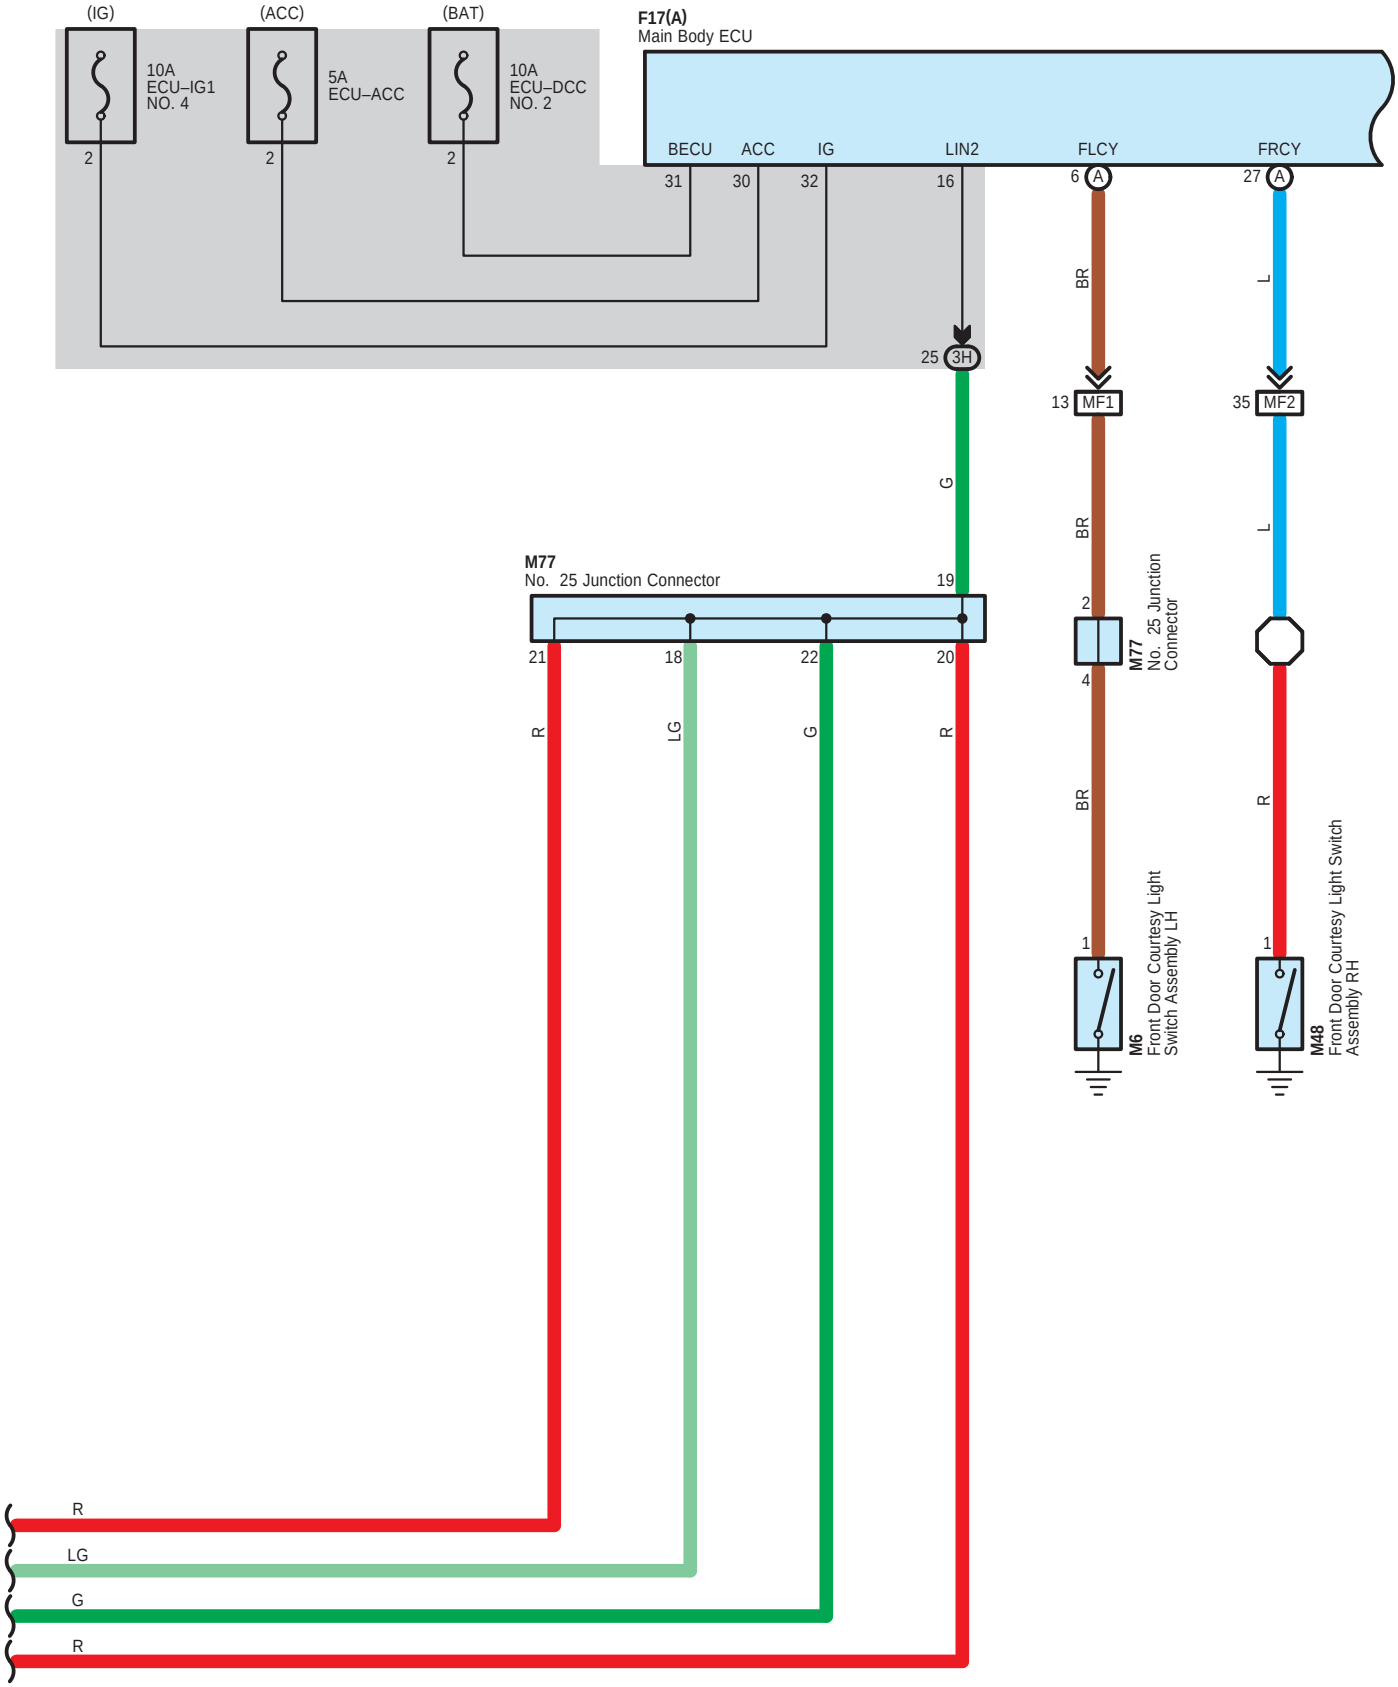
(IG)
(ACC)
(BAT)
10A
ECU–IG1
NO. 4
5A
ECU–ACC
10A
ECU–DCC
NO. 2
2
2
2
F17(A)
Main Body ECU
BECU
ACC
IG
LIN2
FLCY
FRCY
31
30
32
16
6 A
27 A
BR
L
25 3H
13 MF1
35 MF2
G
BR
L
M77
No. 25 Junction Connector
19
21
18
22
20
2
4
M77
No. 25 Junction
Connector
R
LG
G
R
BR
R
1
1
M6
Front Door Courtesy Light
Switch Assembly LH
M48
Front Door Courtesy Light Switch
Assembly RH
R
LG
G
R

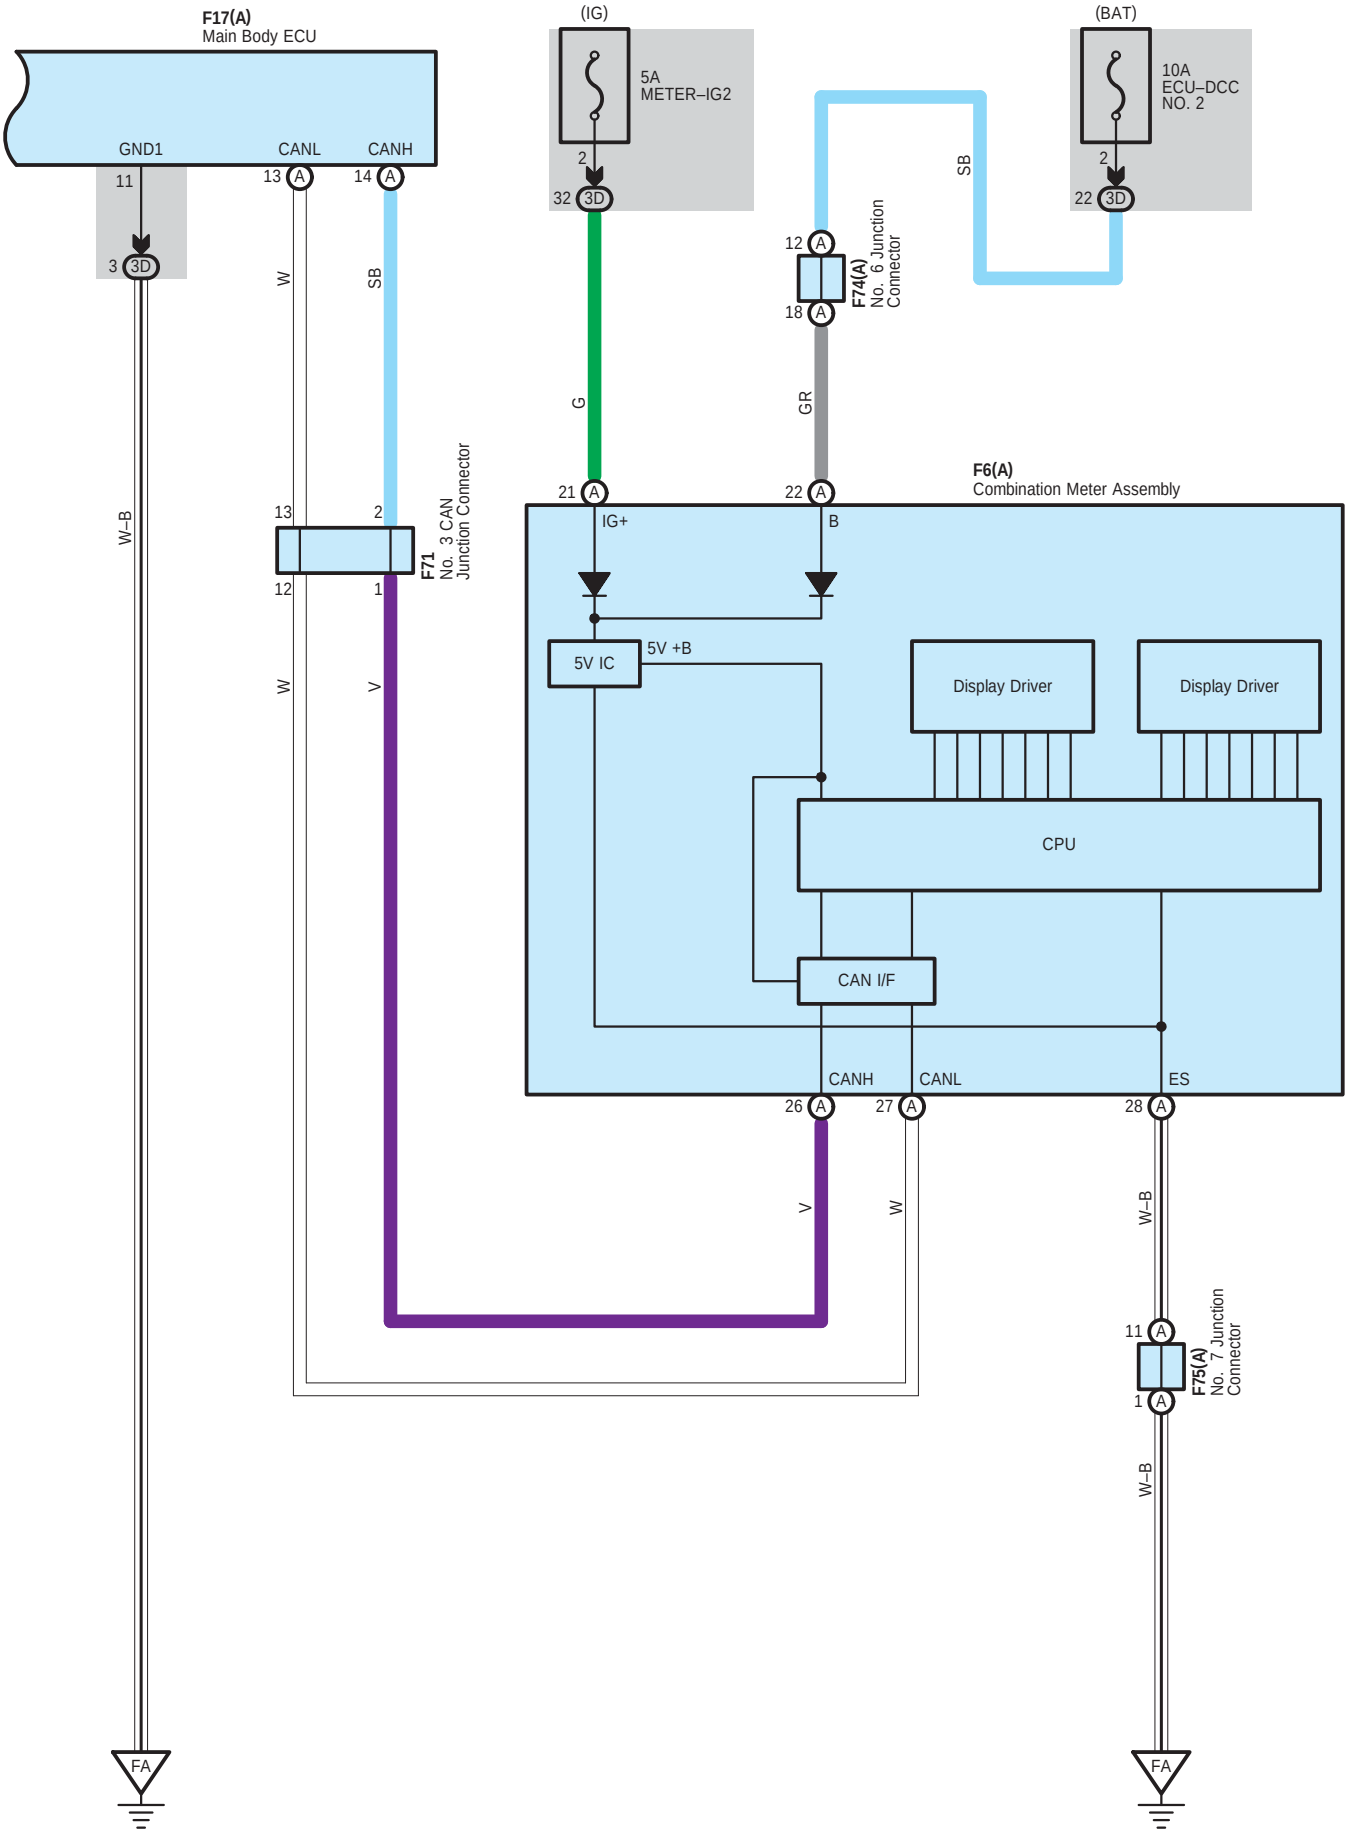
F17(A)
Main Body ECU
GND1
CANL
CANH
11
13 A
14 A
3 3D
W
SB
W–B
(IG)
5A
METER–IG2
2
32 3D
G
(BAT)
10A
ECU–DCC
NO. 2
2
22 3D
SB
12 A
18 A
F74(A)
No. 6 Junction
Connector
GR
13
2
12
1
F71
No. 3 CAN
Junction Connector
W
V
21 A
22 A
F6(A)
Combination Meter Assembly
IG+
B
5V IC
5V +B
Display Driver
Display Driver
CPU
CAN I/F
CANH
CANL
ES
26 A
27 A
28 A
V
W
W–B
11 A
1 A
F75(A)
No. 7 Junction
Connector
W–B
FA
FA

F6

Black

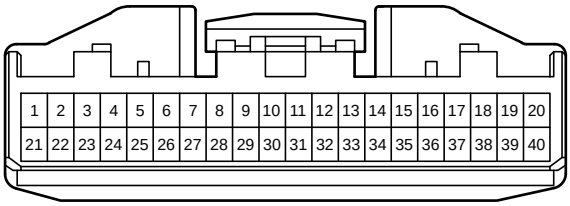

90980-12557

F17

White

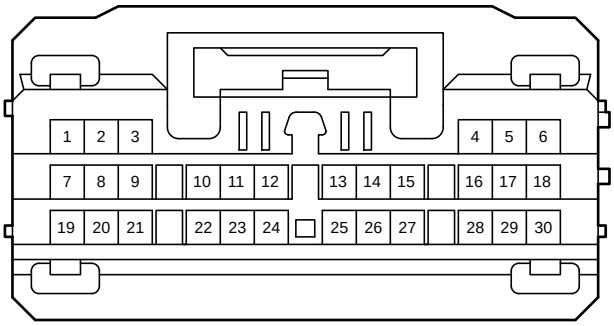

90980-12909

F71

Gray

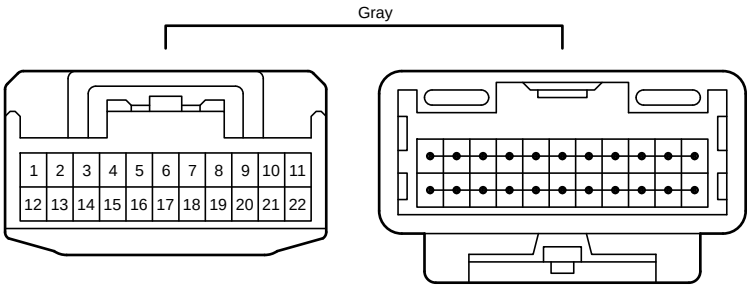

90980-12372

F74

Gray

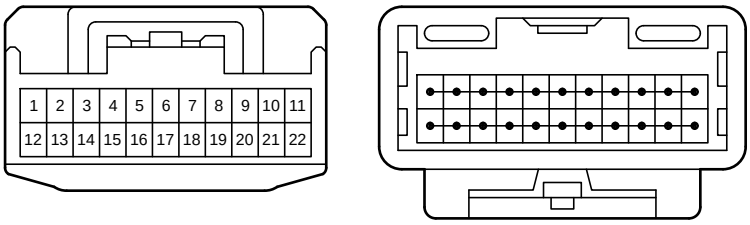

90980-12372
(RHD)

F74

White

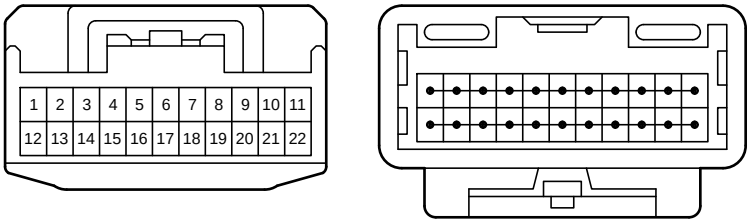

90980-12372
(LHD)

F75
Gray

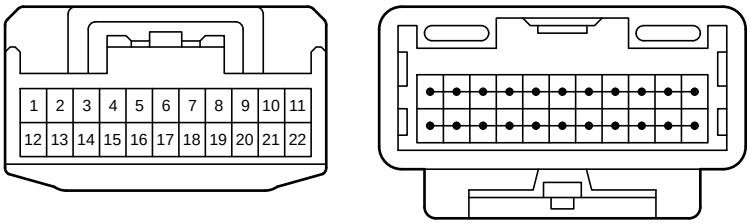

90980-12372

I2
White

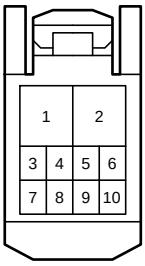

90980-12328

I7
White

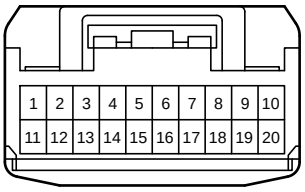

90980-12460

J2
White

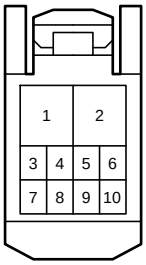

90980-12328

J9
White

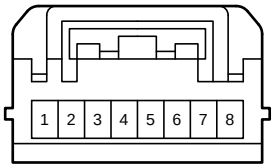

90980-12550

K2
White

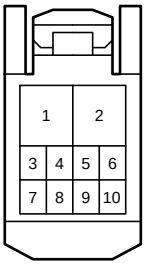

90980-12328

K3
White

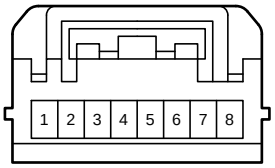

90980-12550

L3
White

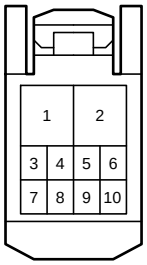

90980-12328

L4
White

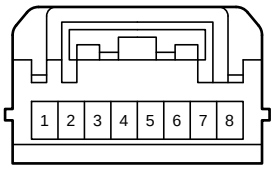

90980-12550

M6
Black

90980-10871

M48
Black

90980-10871

M74
Black

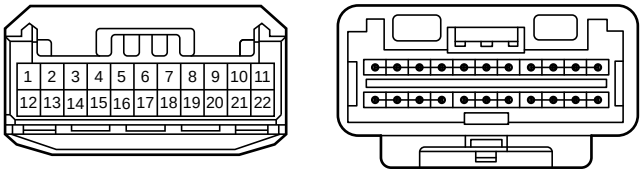

90980-12B54

M77
Black

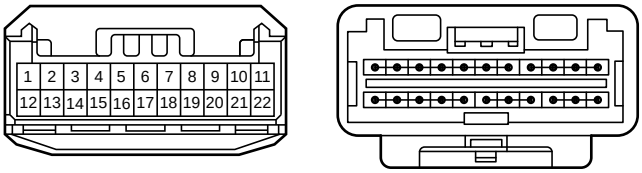

90980-12B54

3D
White

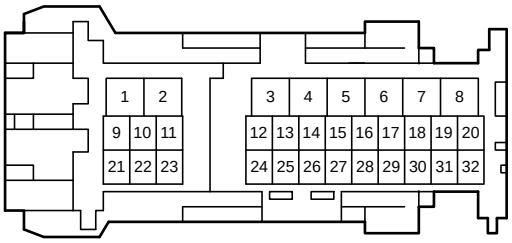

90980-12A48

3H
White

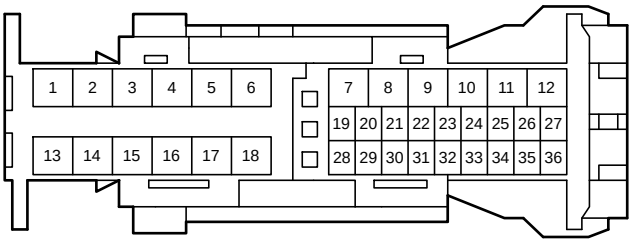

90980-12944

IM1
White

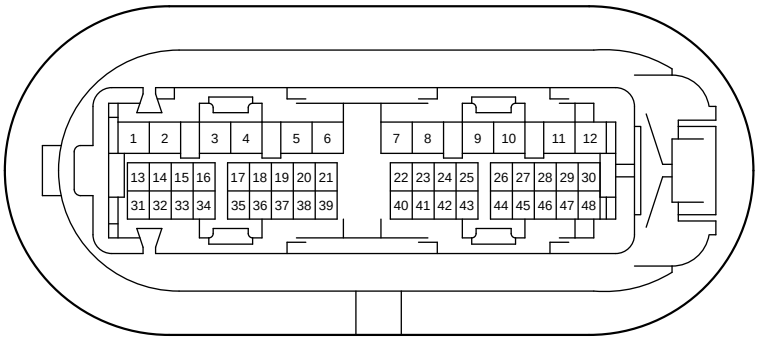

90980-12A09

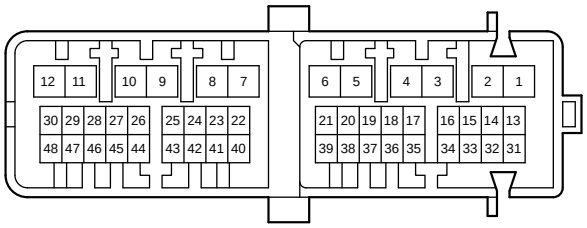

90980-12A06

JM1
White

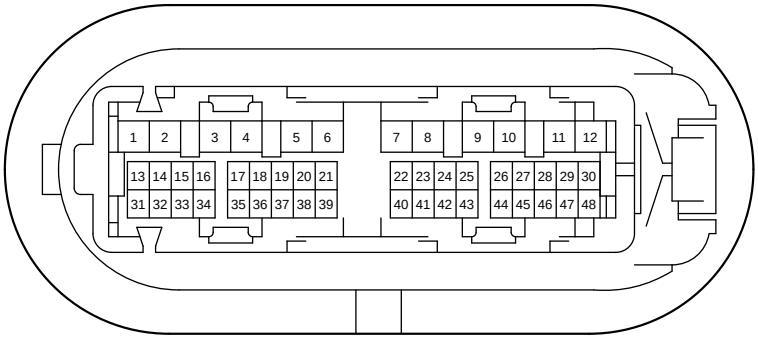

90980-12A09

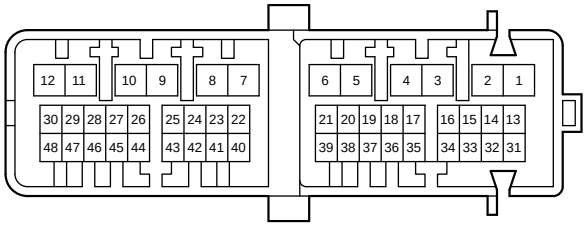

90980-12A06

KM1
White

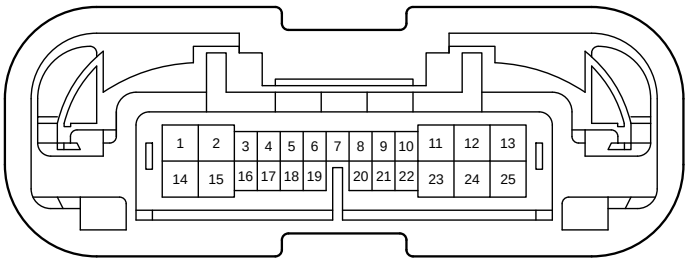

90980-12802

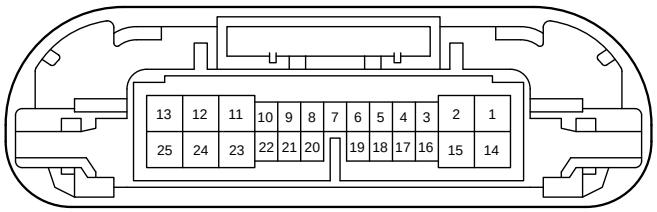

90980-12801

LM1
White

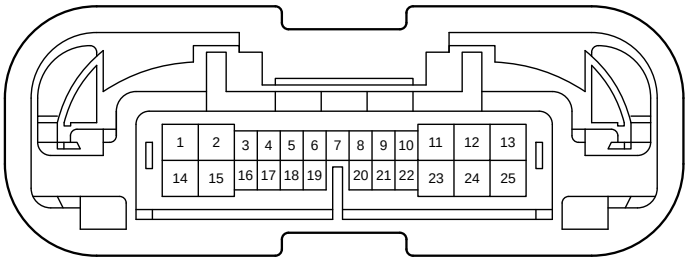

90980-12802

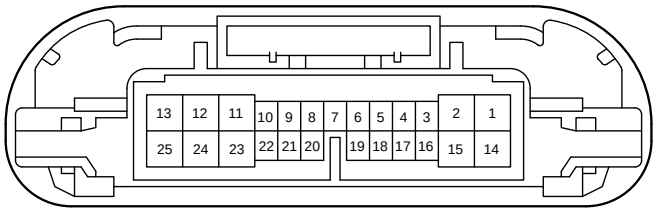

90980-12801

MF1
White

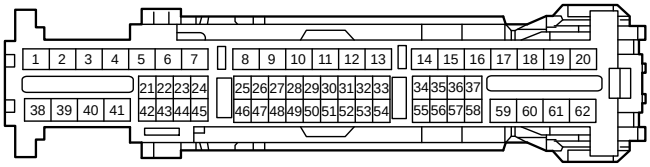

90980-12B22

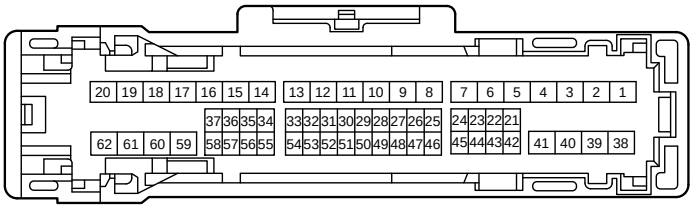

90980-12B21

MF2
White

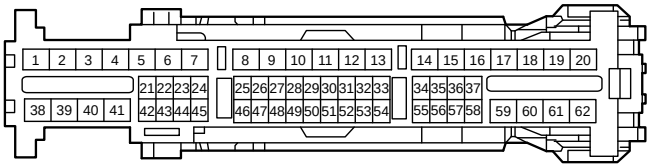

90980-12B22

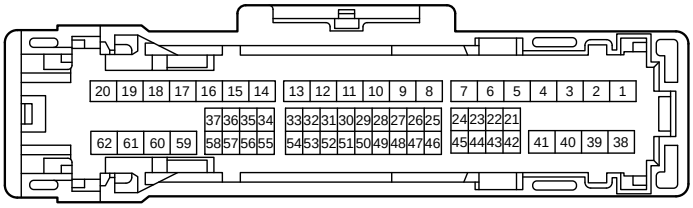

90980-12B21