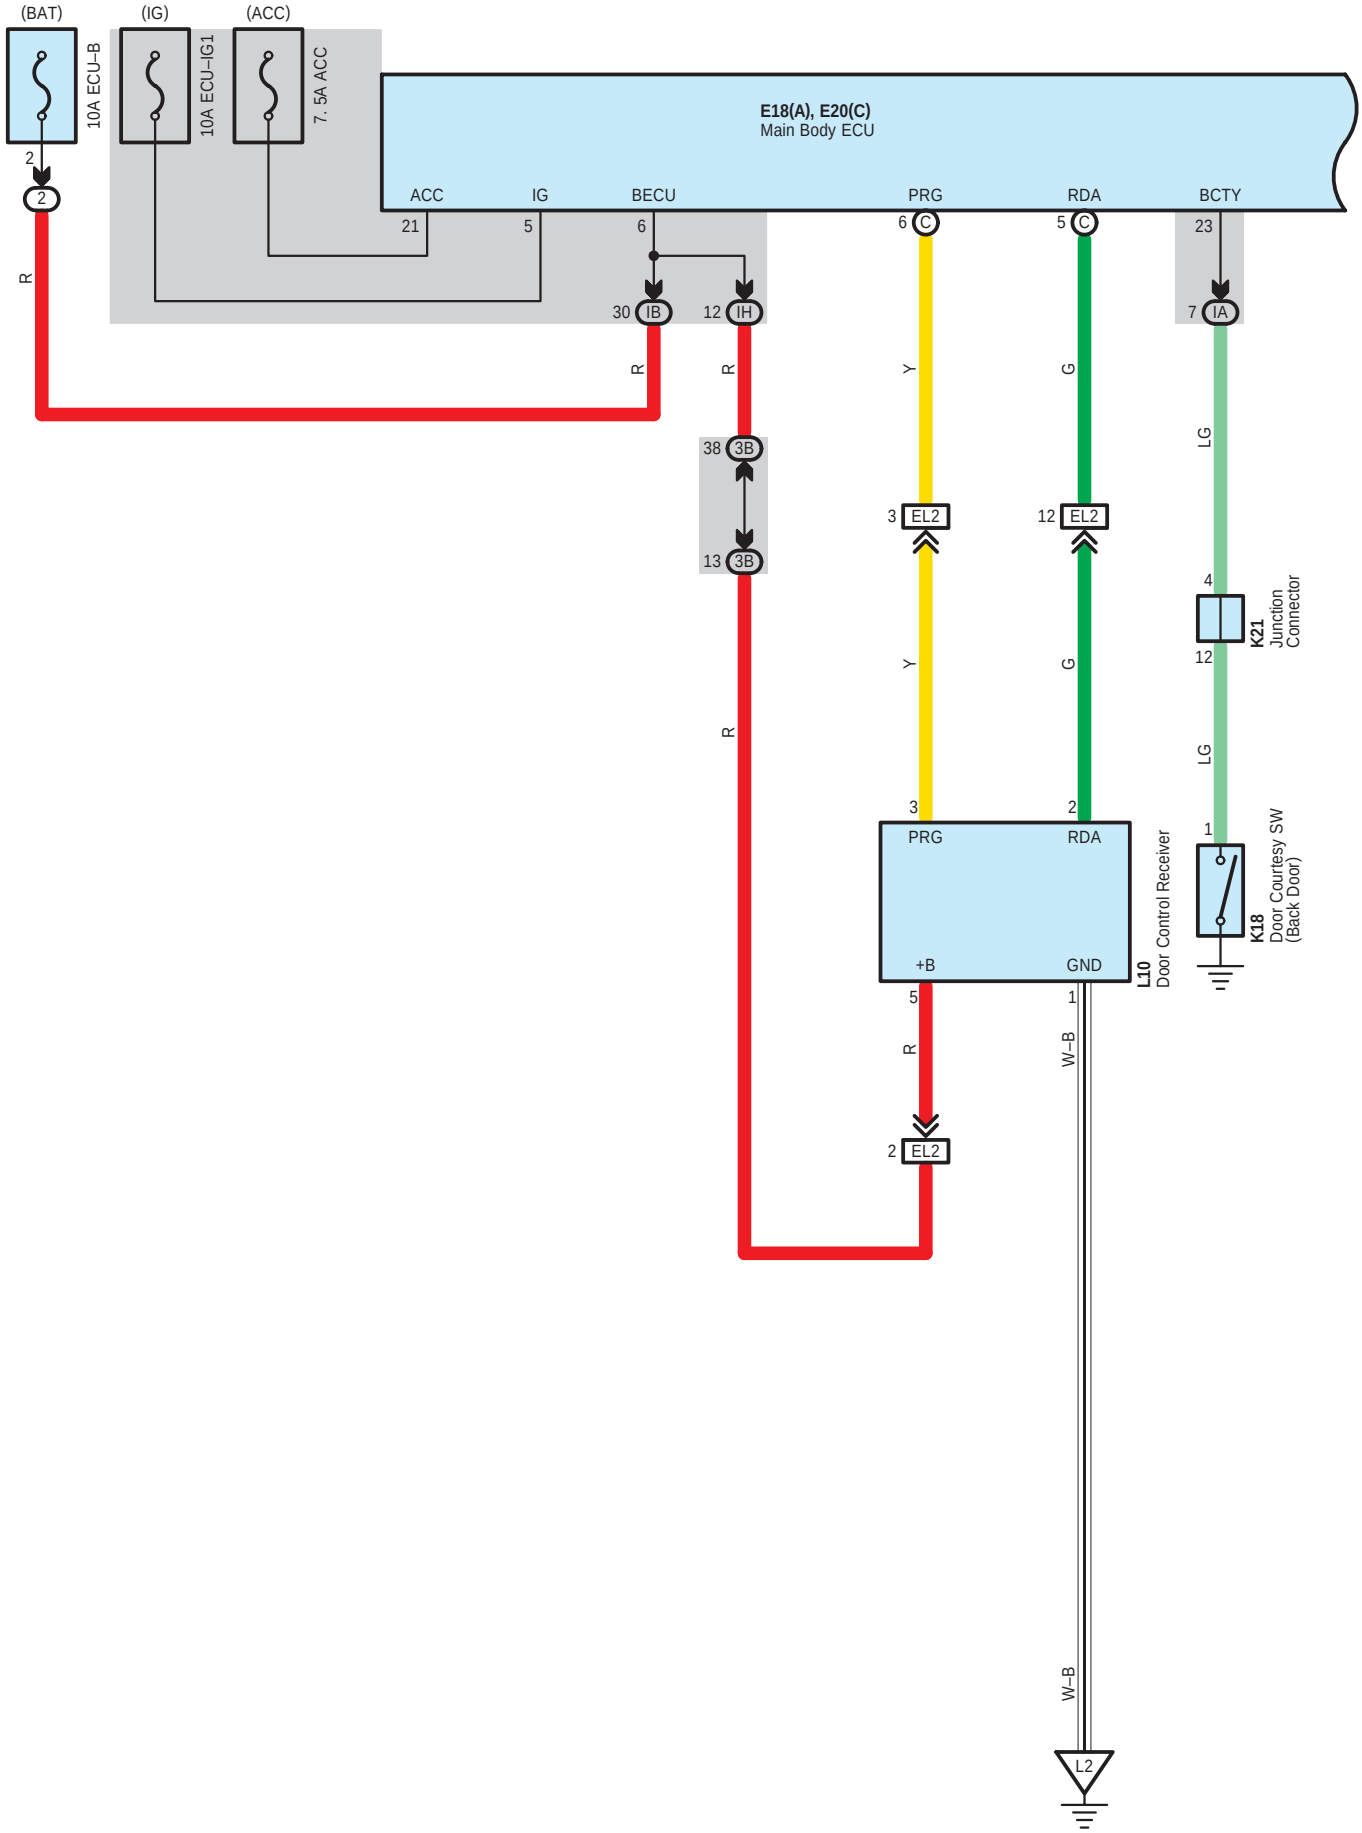
(BAT)
(IG)
(ACC)
10A ECU–B
10A ECU–IG1
7. 5A ACC
E18(A), E20(C)
Main Body ECU
ACC
IG
BECU
PRG
RDA
BCTY
21
5
6
6 C
5 C
23
2
2
R
30 IB
12 IH
7 IA
R
R
Y
G
LG
38 3B
13 3B
3 EL2
12 EL2
4
12
K21
Junction
Connector
Y
G
LG
R
3
2
1
PRG
RDA
+B
GND
L10
Door Control Receiver
K18
Door Courtesy SW
(Back Door)
5
1
R
W–B
2 EL2
W–B
L2

∗ 3 : Before Aug. 2008 Production Except Europe, Before Dec. 2008 Production Europe
∗ 4 : From Aug. 2008 Production Except Europe, From Dec. 2008 Production Europe

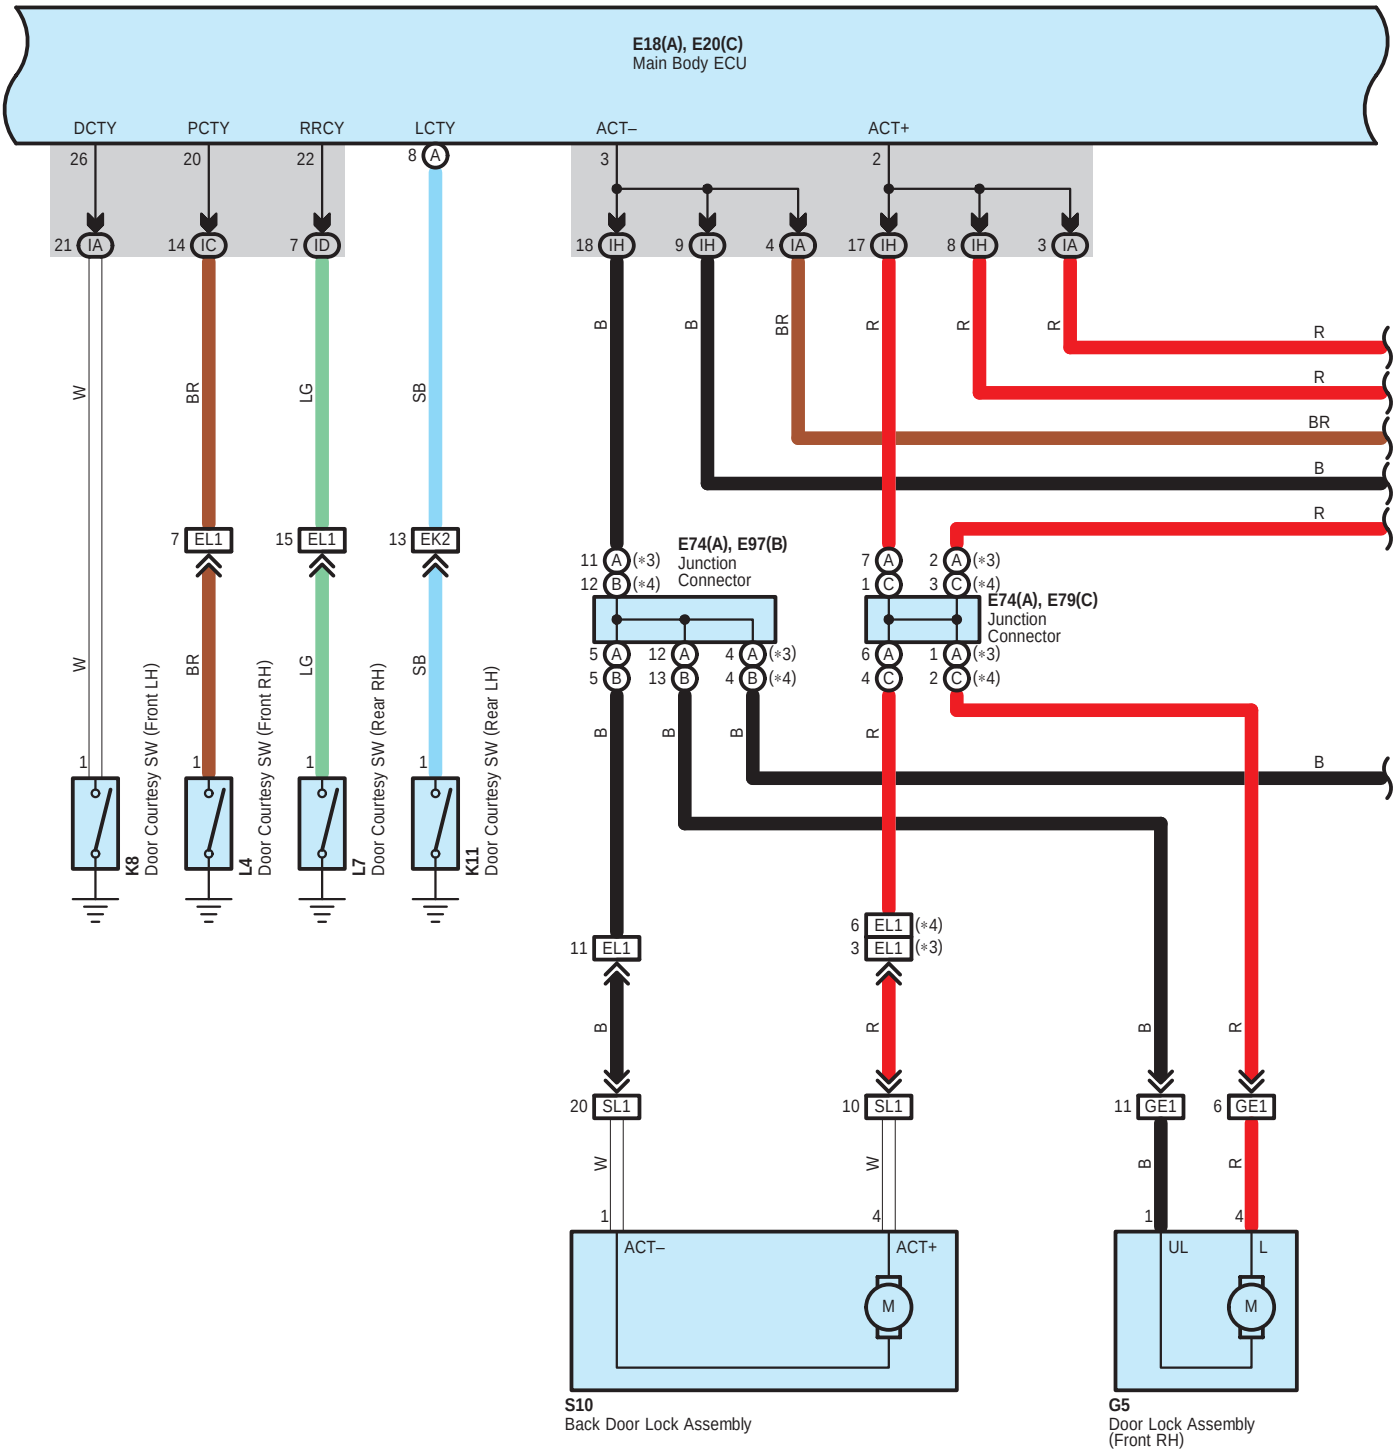

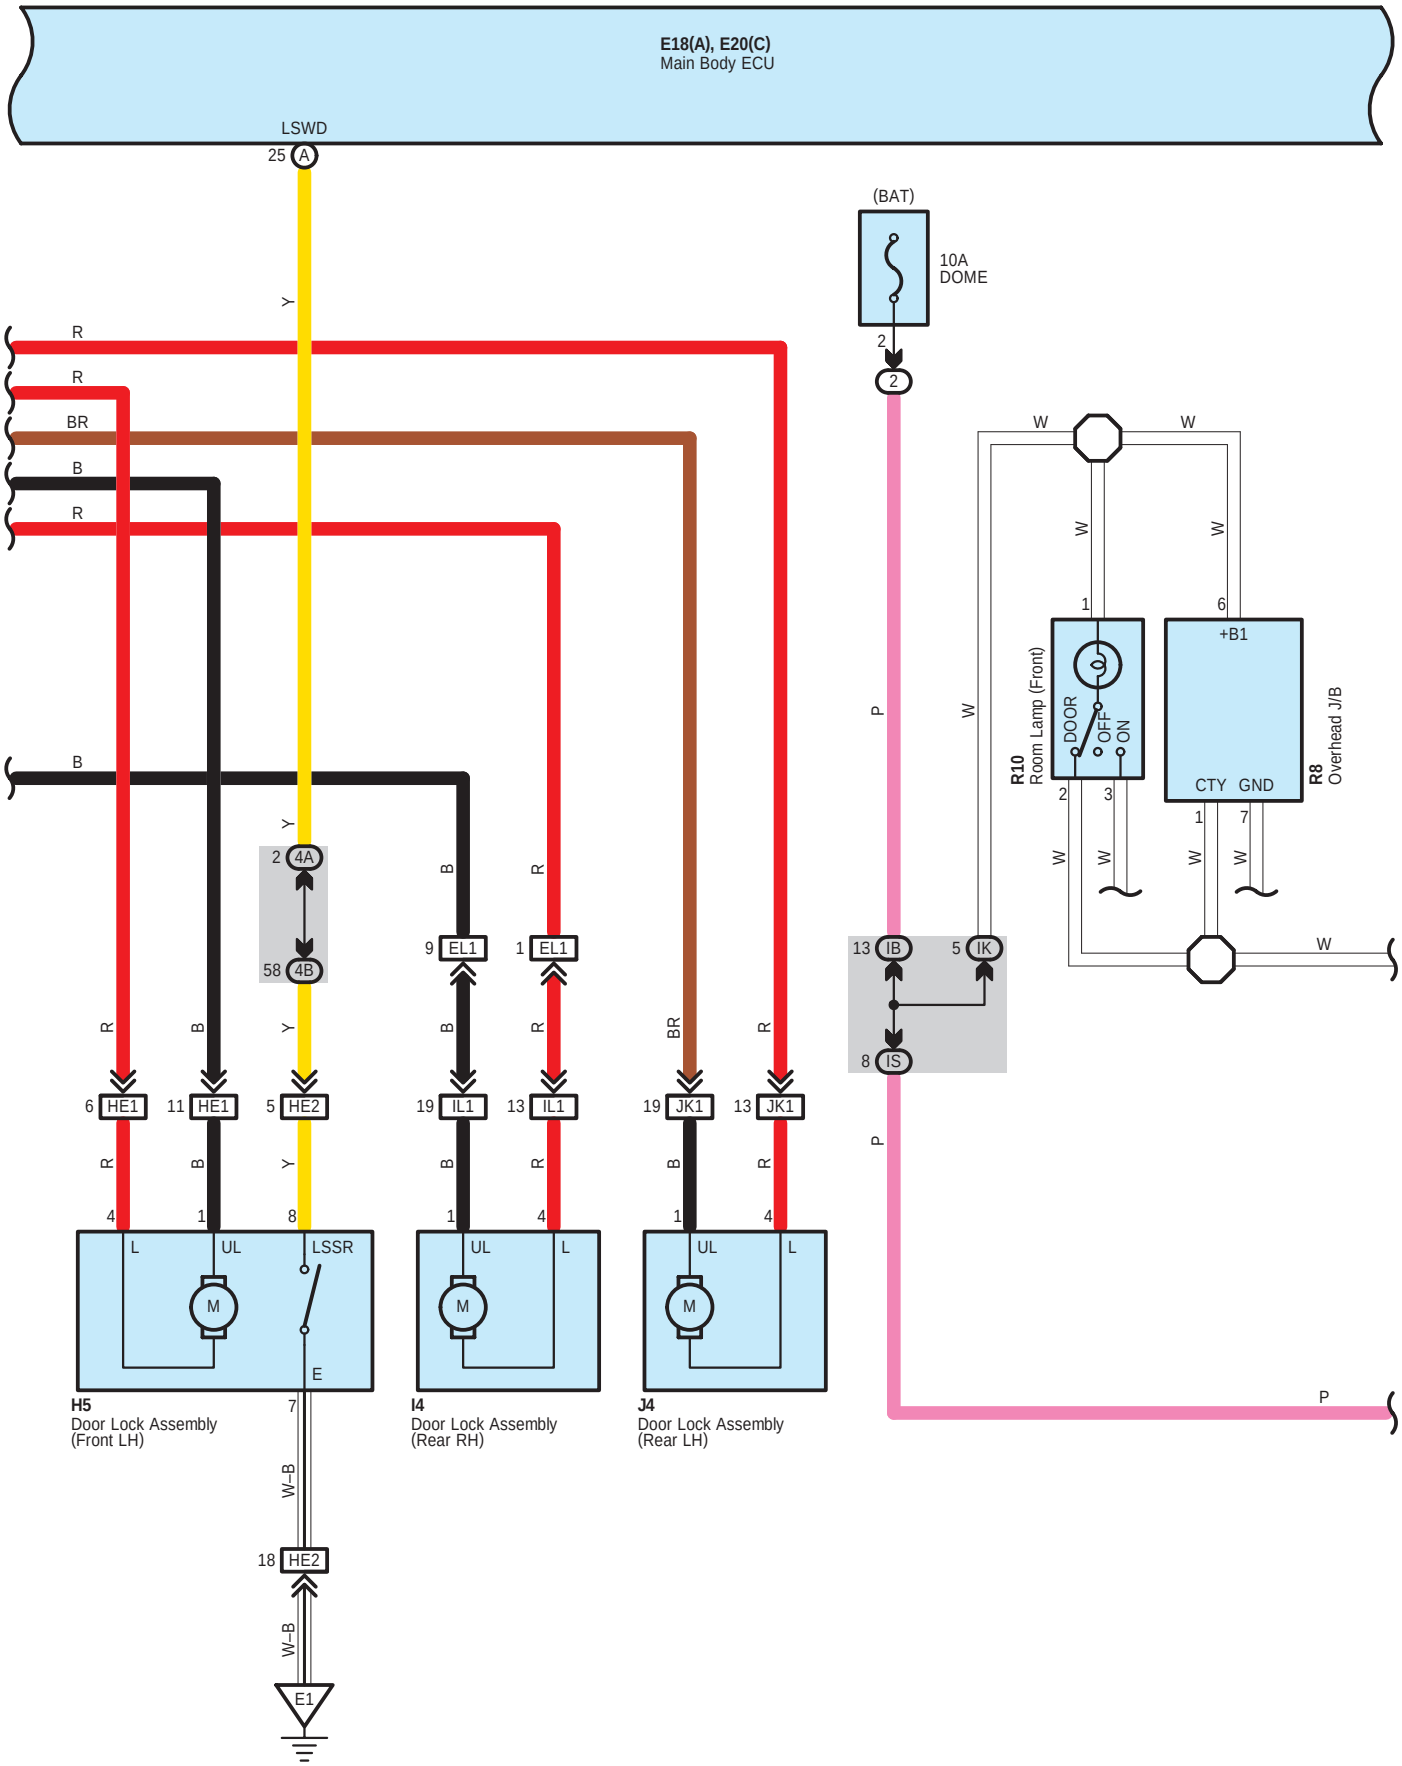
E18(A), E20(C)
Main Body ECU
LSWD
25 A
(BAT)
10A
DOME
2
2
R
R
BR
B
R
B
Y
2 4A
58 4B
9 EL1
1 EL1
13 IB
5 IK
8 IS
6 HE1
11 HE1
5 HE2
19 IL1
13 IL1
19 JK1
13 JK1
L
UL
LSSR
M
E
H5
Door Lock Assembly
(Front LH)
I4
Door Lock Assembly
(Rear RH)
J4
Door Lock Assembly
(Rear LH)
W–B
18 HE2
E1
P
W
R10
Room Lamp (Front)
DOOR
OFF
ON
+B1
CTY GND
R8
Overhead J/B

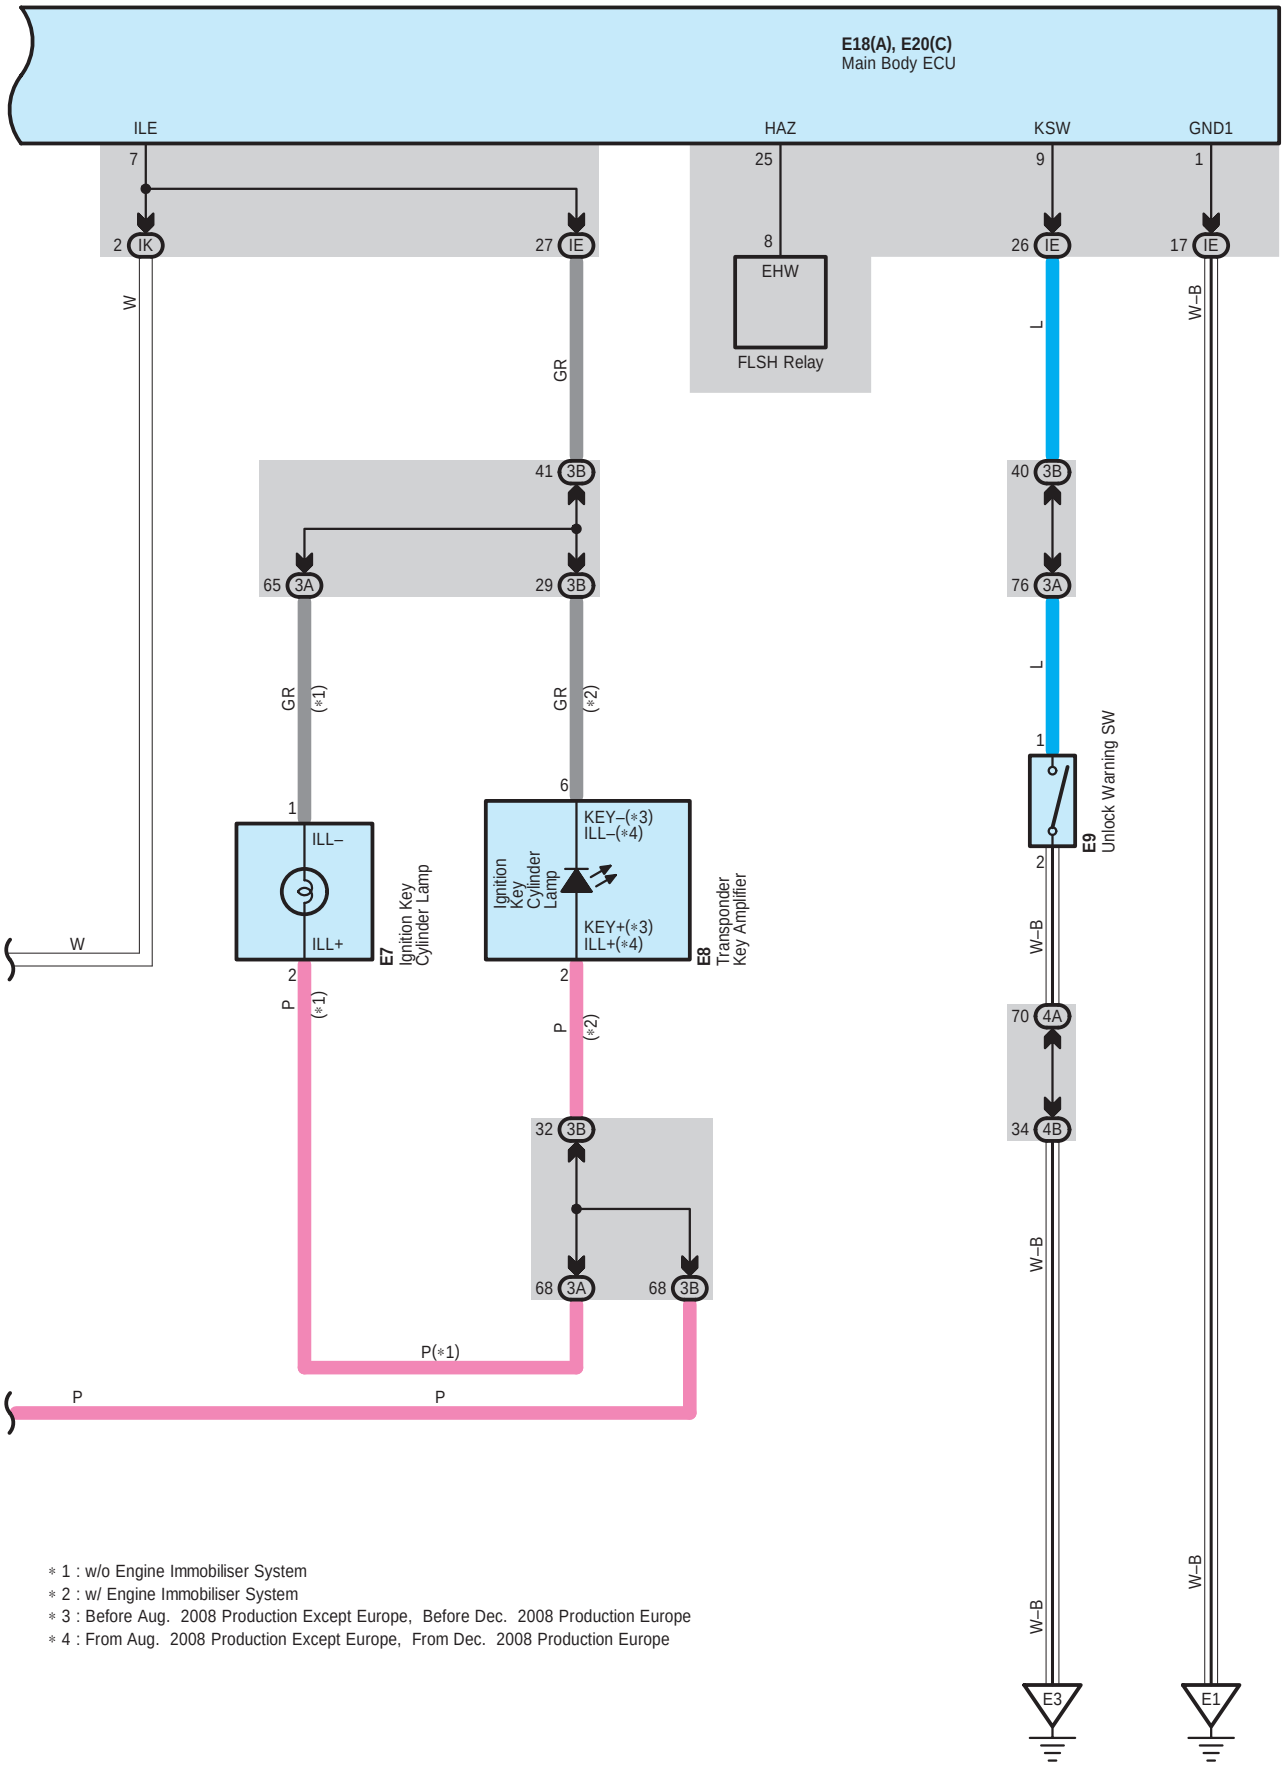

* 1 : w/o Engine Immobiliser System
* 2 : w/ Engine Immobiliser System
* 3 : Before Aug. 2008 Production Except Europe, Before Dec. 2008 Production Europe
* 4 : From Aug. 2008 Production Except Europe, From Dec. 2008 Production Europe

E 7
Gray

E 8
Black

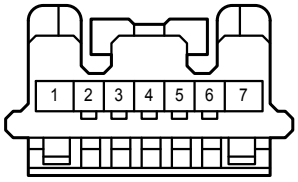

E 9
White



E 18
White

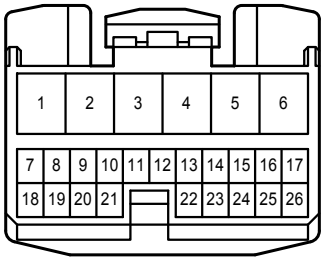

E 20
White

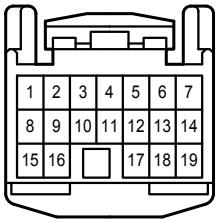

E 74
Gray



E 79
Black



E 97
Blue

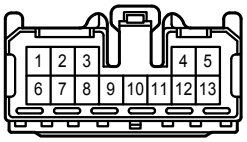

G 5
White

H 5
White

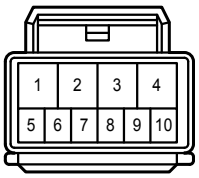

I 4
White

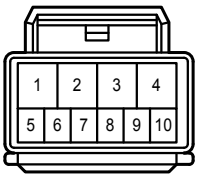

J 4
White

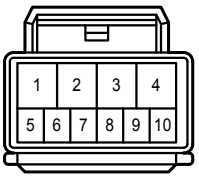

K 8
White

K 11
White

K 18
White

K 21
White

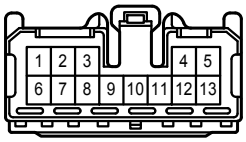

L 4
White

L 7
White

L 10
White

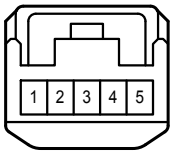

R 8
Black

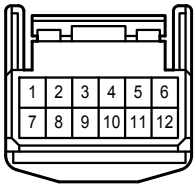

R 10
Gray

S 10
White

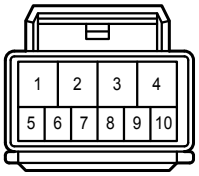

3A
White

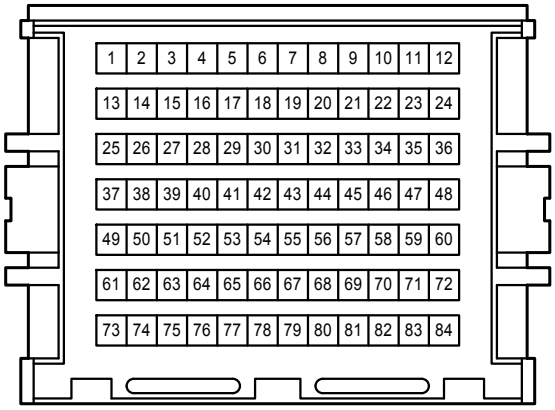

3B
White

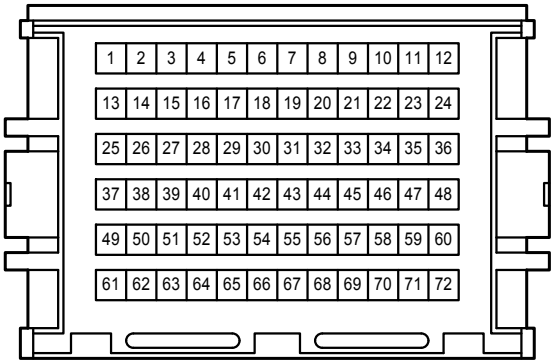

4A
White

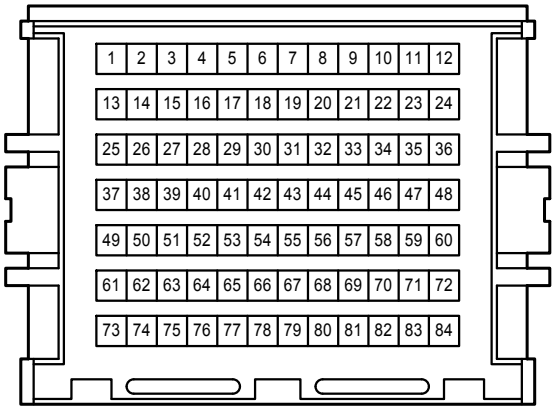

4B
White

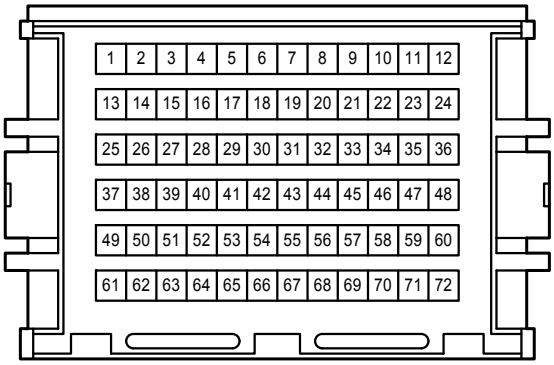

IA
White

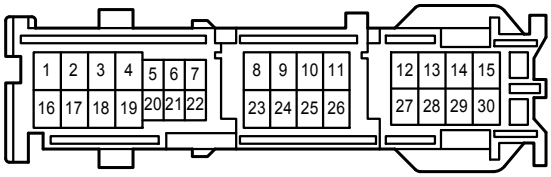

IB
White

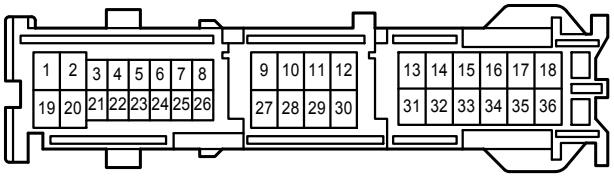

IC
White

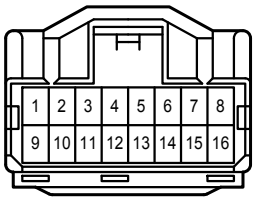

ID
White

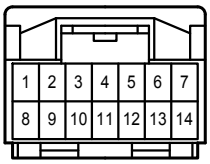

IE
White

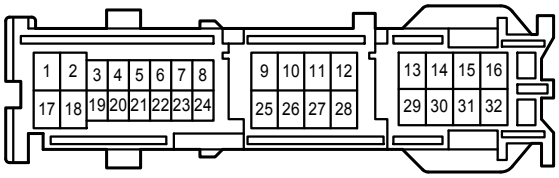

IH
White

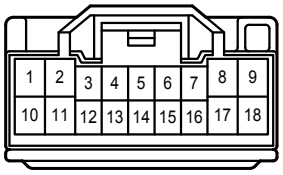

IK
White

IS
White

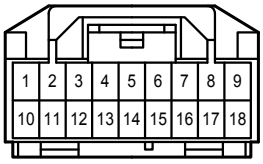

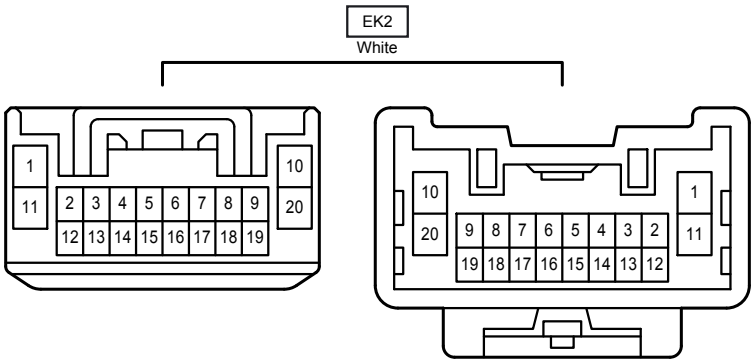
EK2
White

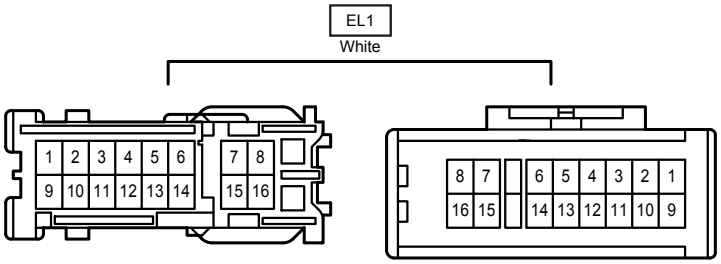
EL1
White

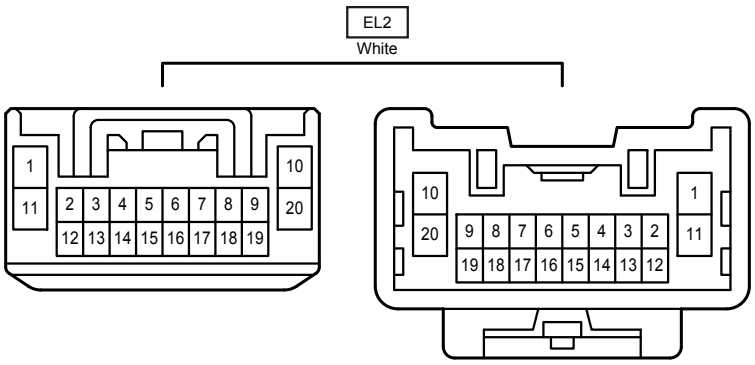
EL2
White

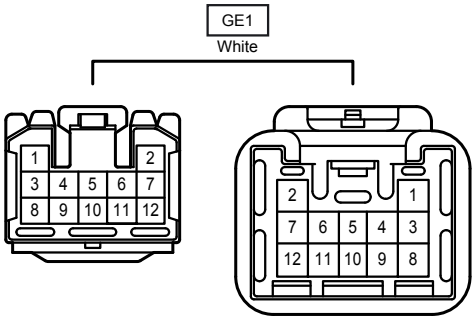
GE1
White

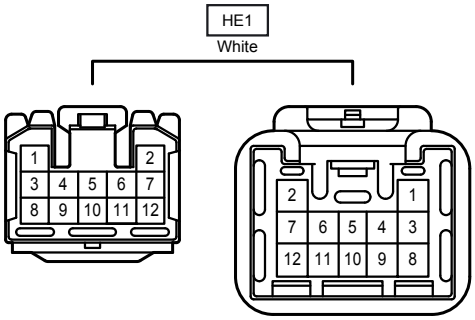
HE1
White

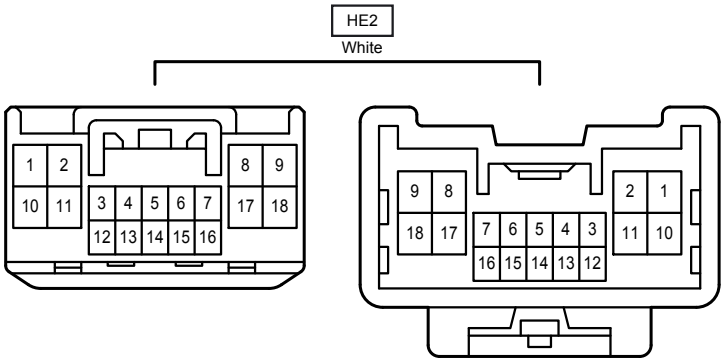
HE2
White

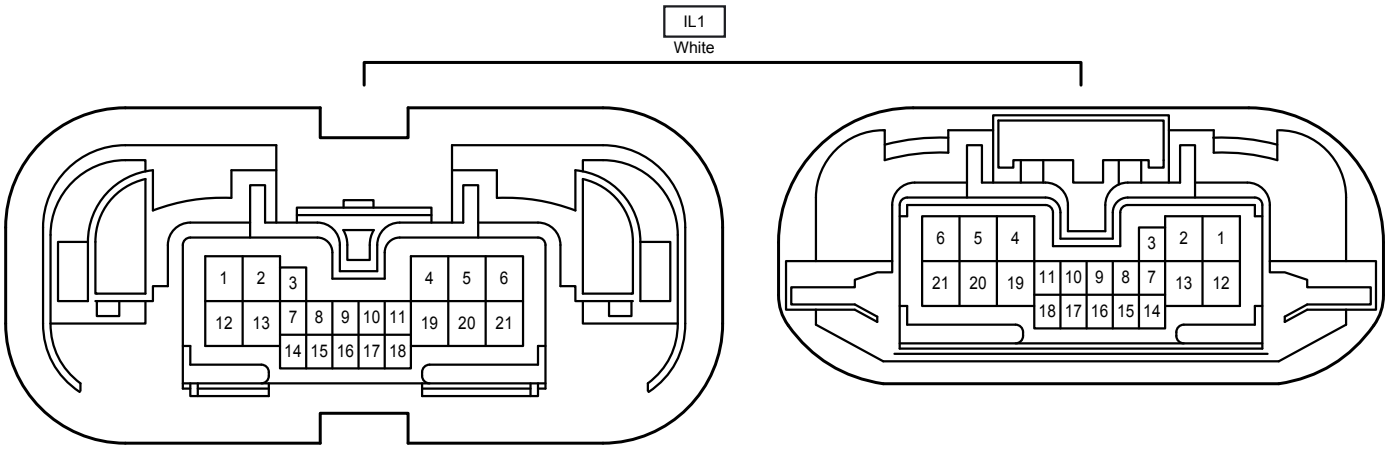
IL1
White
1 2 3 4 5 6
12 13 7 8 9 10 11 19 20 21
14 15 16 17 18
6 5 4 3 2 1
21 20 19 11 10 9 8 7 13 12
18 17 16 15 14

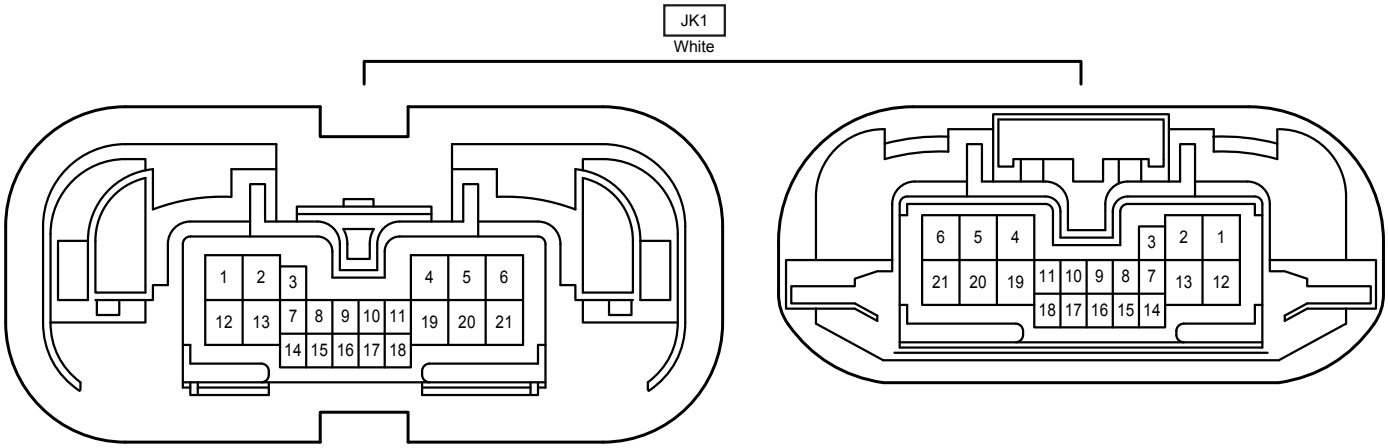
JK1
White
1 2 3 4 5 6
12 13 7 8 9 10 11 19 20 21
14 15 16 17 18
6 5 4 3 2 1
21 20 19 11 10 9 8 7 13 12
18 17 16 15 14

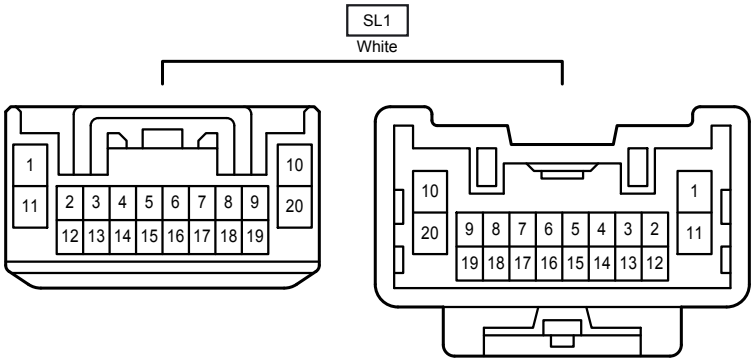
SL1
White
1 10
11 2 3 4 5 6 7 8 9 20
12 13 14 15 16 17 18 19
10 1
20 9 8 7 6 5 4 3 2 11
19 18 17 16 15 14 13 12