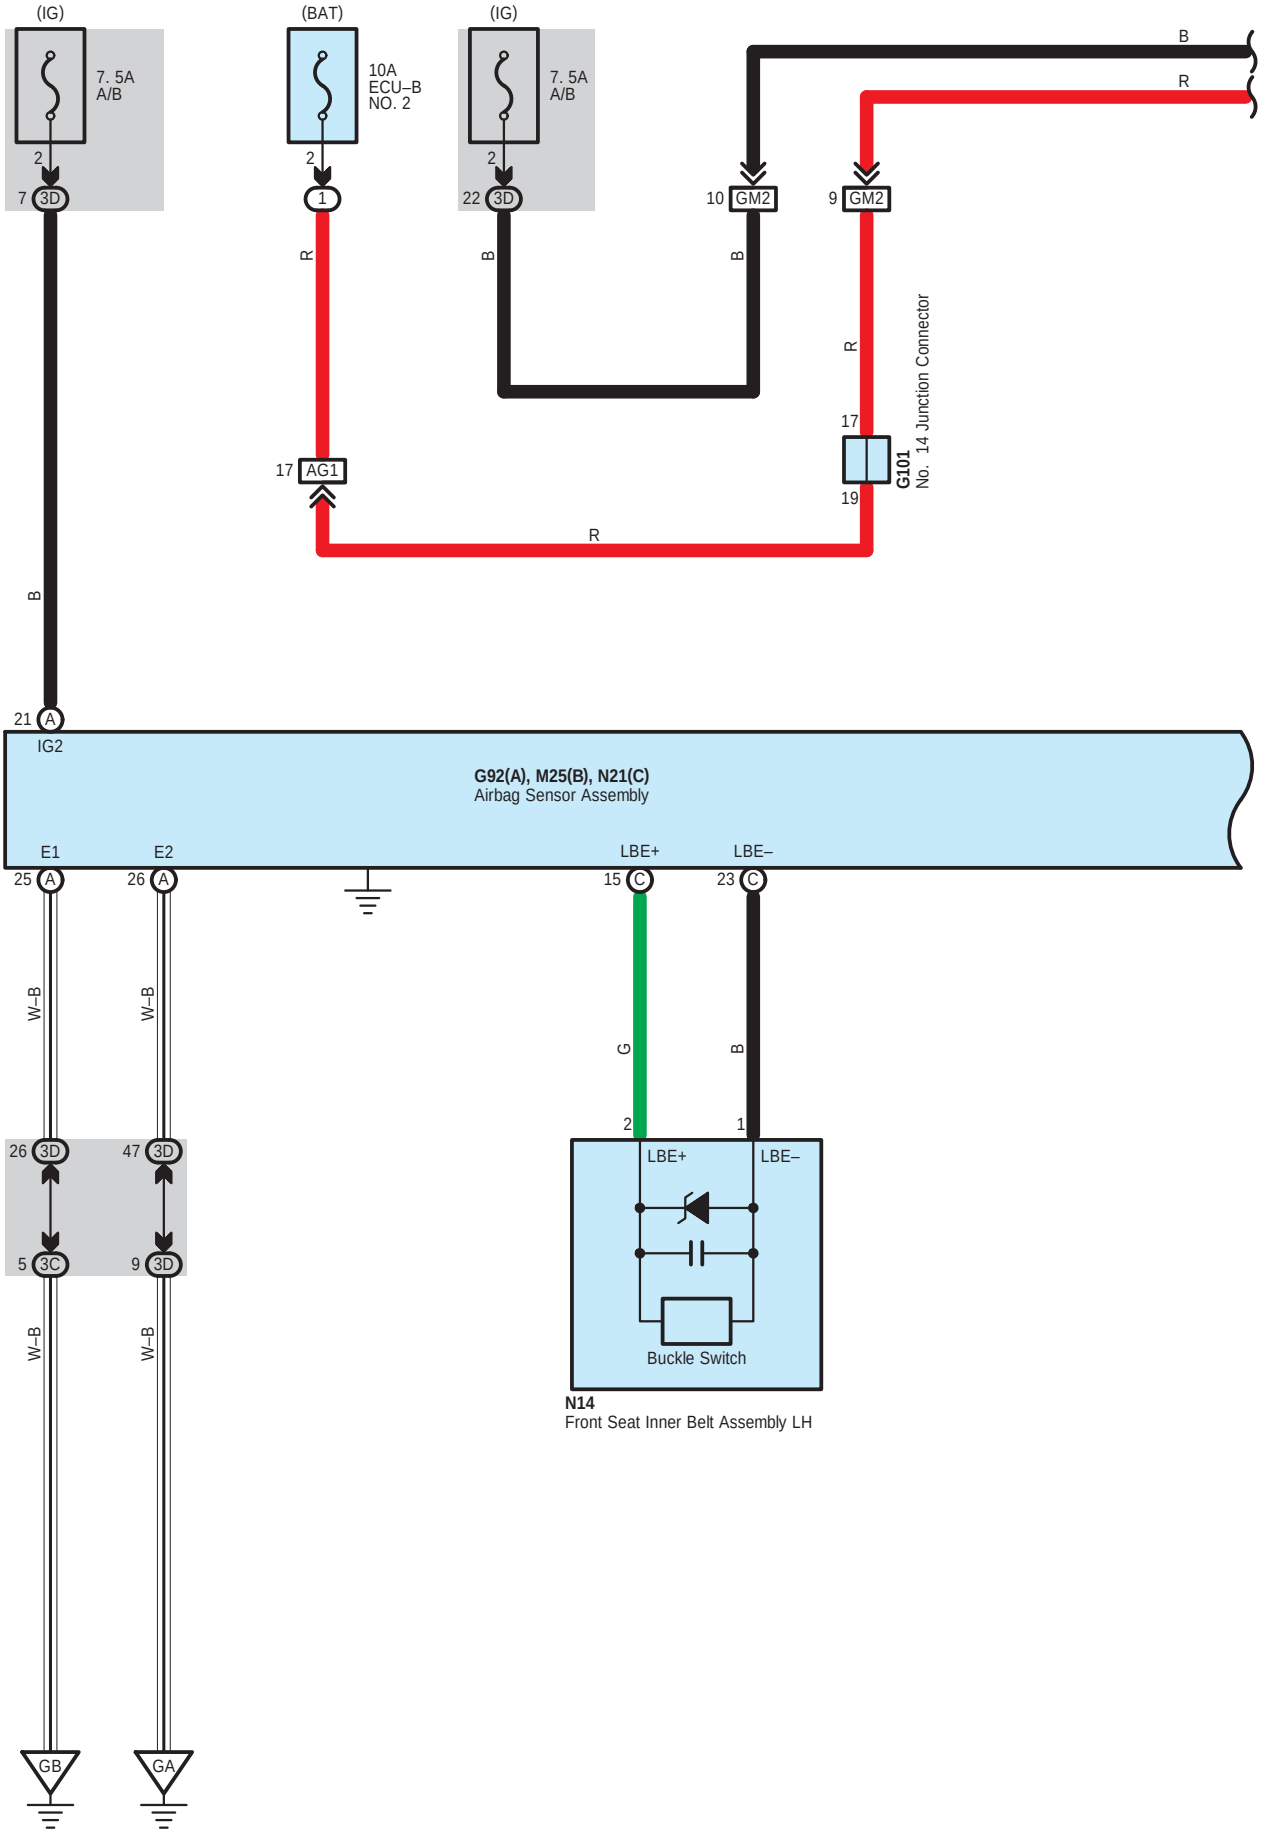
(IG)
7. 5A
A/B
2
7 3D
(BAT)
10A
ECU–B
NO. 2
2
1
(IG)
7. 5A
A/B
2
22 3D
B
R
10 GM2
9 GM2
B
R
17 AG1
17
19
G101
No. 14 Junction Connector
R
B
21 A
IG2
G92(A), M25(B), N21(C)
Airbag Sensor Assembly
E1
E2
LBE+
LBE–
25 A
26 A
15 C
23 C
W–B
W–B
G
B
2
1
26 3D
47 3D
5 3C
9 3D
LBE+
LBE–
Buckle Switch
N14
Front Seat Inner Belt Assembly LH
W–B
W–B
GB
GA

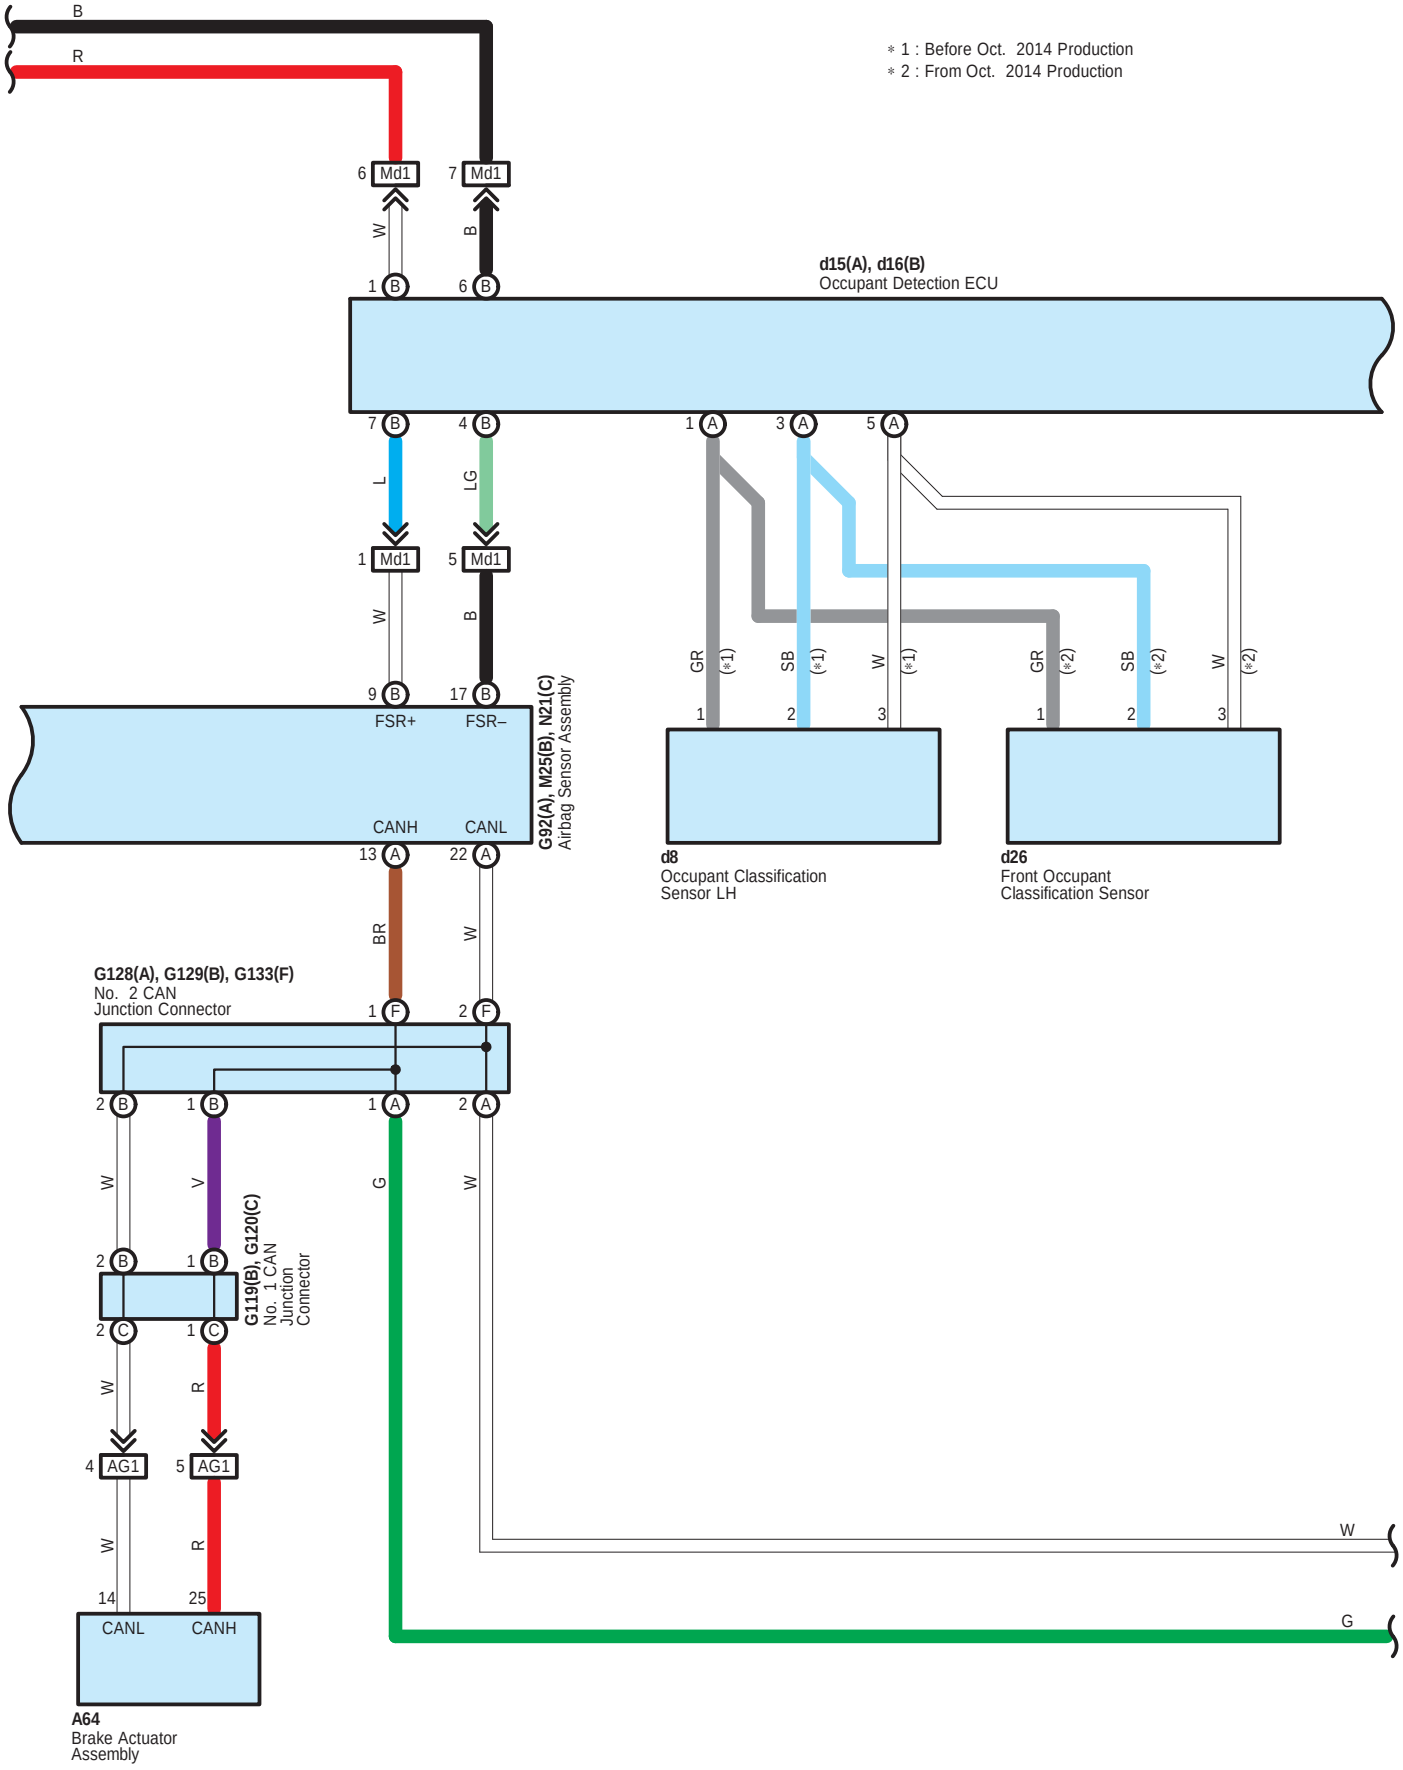
B
R
∗ 1 : Before Oct. 2014 Production
∗ 2 : From Oct. 2014 Production
6 Md1
7 Md1
W
B
1 B
6 B
d15(A), d16(B)
Occupant Detection ECU
7 B
4 B
1 A
3 A
5 A
L
LG
1 Md1
5 Md1
W
B
GR (∗1)
SB (∗1)
W (∗1)
GR (∗2)
SB (∗2)
W (∗2)
9 B
17 B
FSR+
FSR–
G92(A), M25(B), N21(C)
Airbag Sensor Assembly
CANH
CANL
13 A
22 A
BR
W
d8
Occupant Classification
Sensor LH
d26
Front Occupant
Classification Sensor
G128(A), G129(B), G133(F)
No. 2 CAN
Junction Connector
1 F
2 F
2 B
1 B
1 A
2 A
W
V
G
W
G119(B), G120(C)
No. 1 CAN
Junction
Connector
2 B
1 B
2 C
1 C
W
R
4 AG1
5 AG1
W
R
14
25
CANL
CANH
A64
Brake Actuator
Assembly
W
G

∗ 1 : Before Oct. 2014 Production
∗ 2 : From Oct. 2014 Production

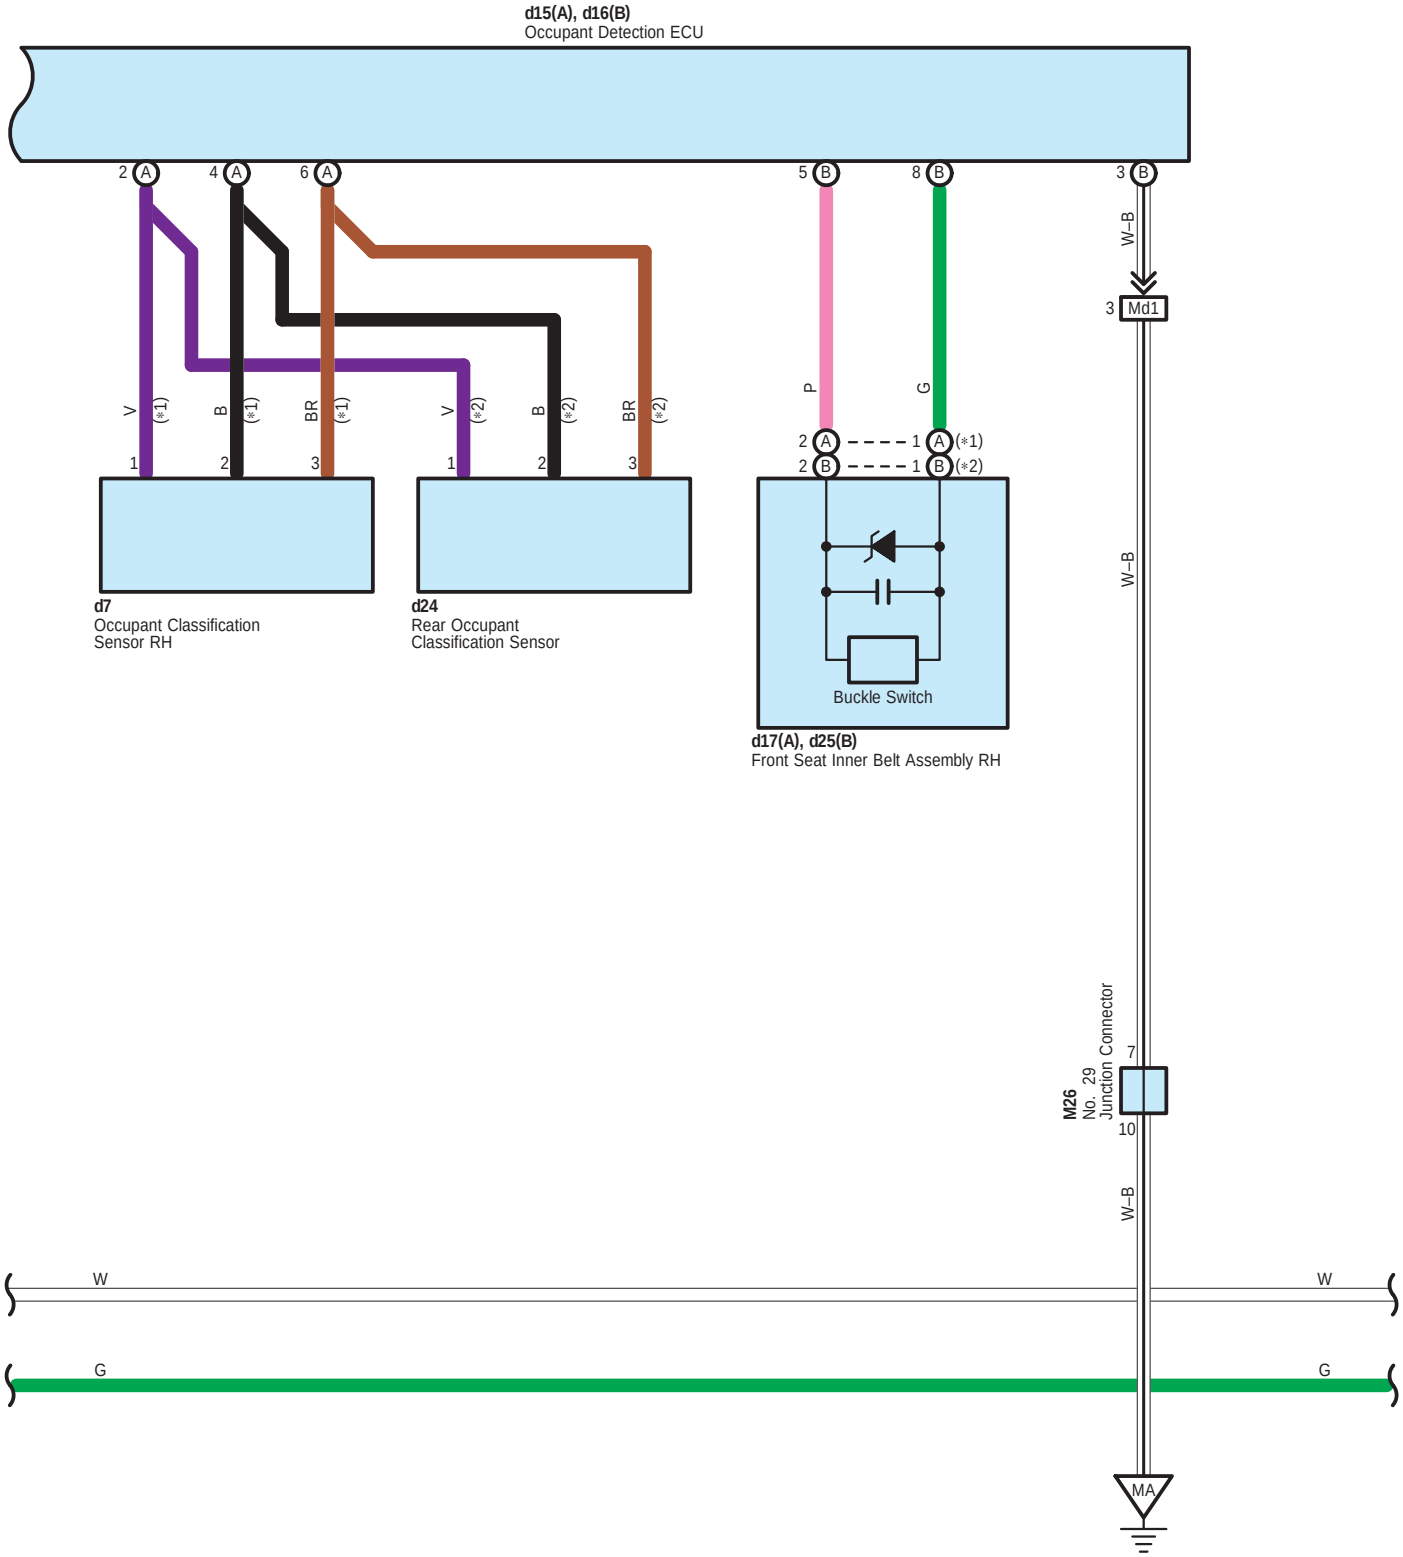

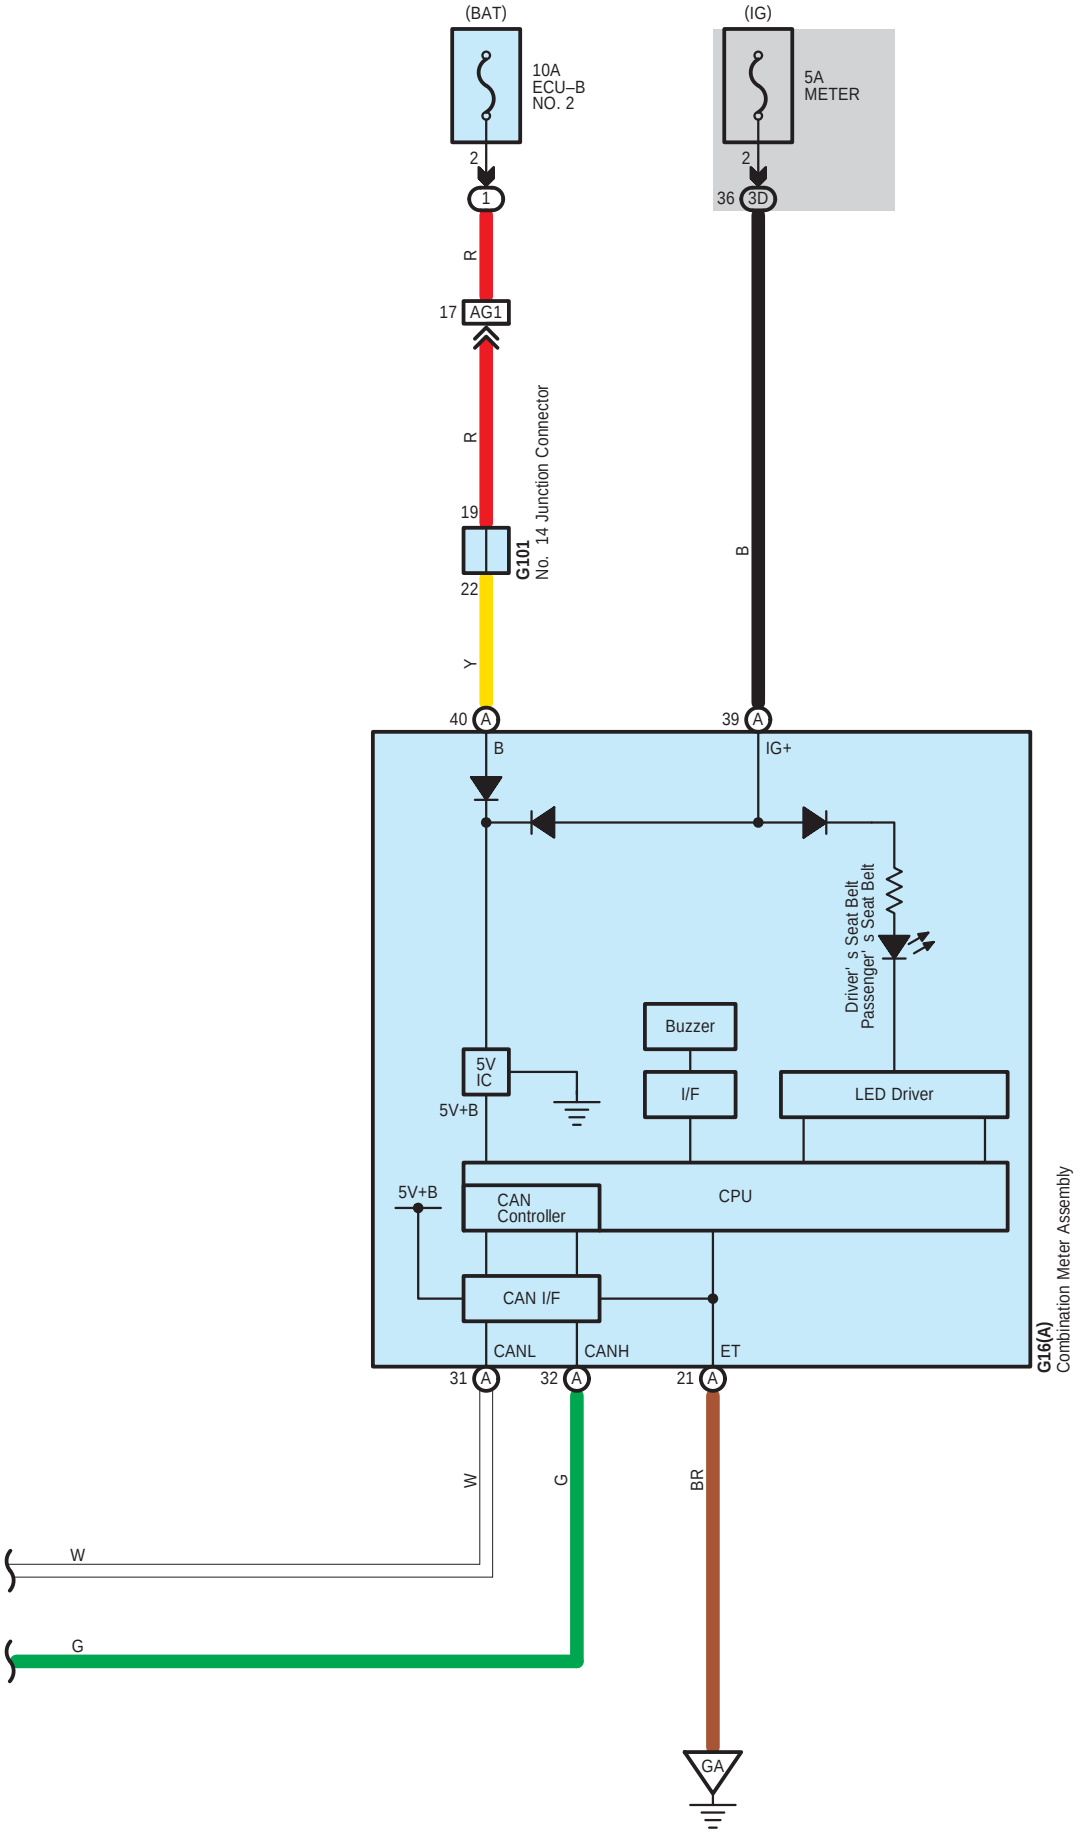
(BAT)
10A
ECU–B
NO. 2
(IG)
5A
METER
2
1
36
3D
R
17
AG1
R
19
G101
No. 14 Junction Connector
22
Y
B
40
A
39
A
B
IG+
Driver' s Seat Belt
Passenger' s Seat Belt
Buzzer
5V
IC
5V+B
I/F
LED Driver
5V+B
CAN
Controller
CPU
CAN I/F
CANL
CANH
ET
G16(A)
Combination Meter Assembly
31
A
32
A
21
A
W
G
BR
W
G
GA

A64
Black

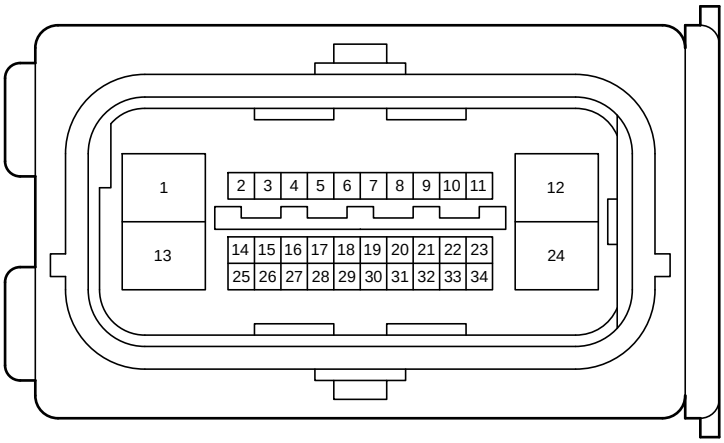

90980-12686

G16
Black

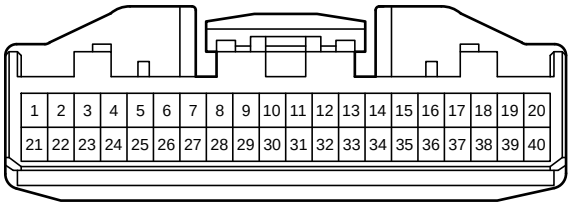

90980-12557

G92
Yellow

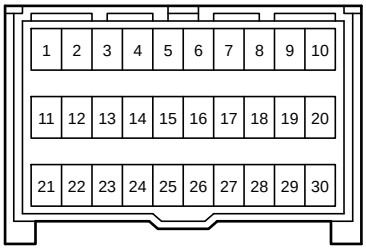

90980-12391

G101
White

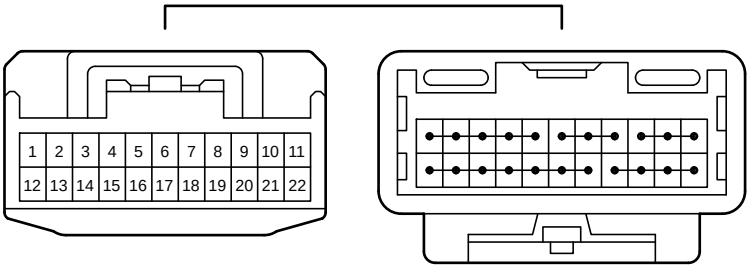

90980-12372

G119
White



90980-12827

G120
White



90980-12827

G128
White



90980-12827

G129
White



90980-12827

G133
White



90980-12827

M25
Yellow

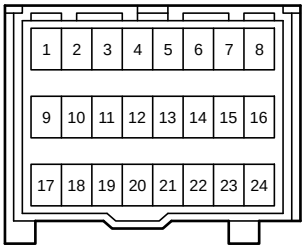

90980-12392

M26
Black

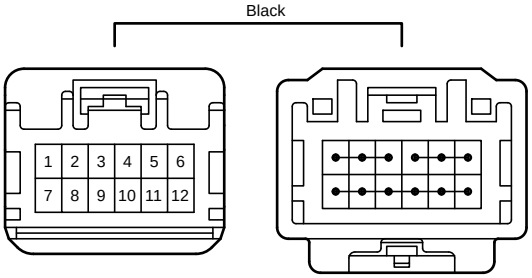

90980-12737

N14
White

90980-10942

N21
Yellow

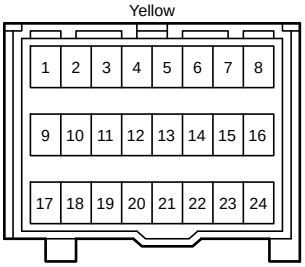

90980-12390

d7
Black

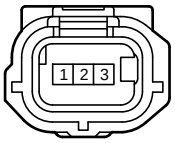

90980-12353

d8
Gray

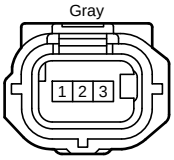

90980-12354

d15
Gray

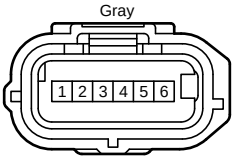

90980-12303

d16
Black

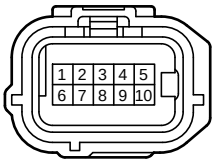

90980-12380

d17
Gray

90980-10941

d24
Gray

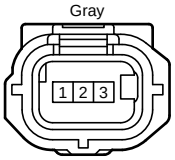

90980-12354

d25
Gray

90980-11155

d26
Black

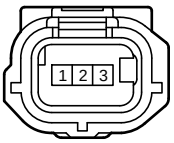

90980-12353

3C
White

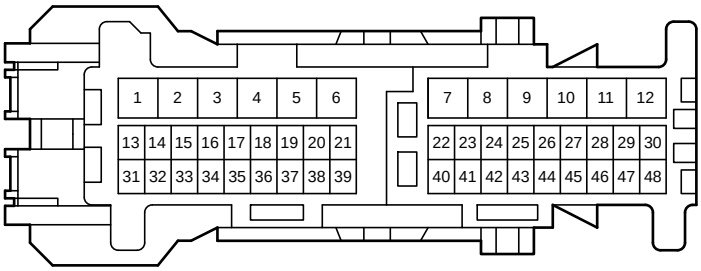

90980-12887

3D
White

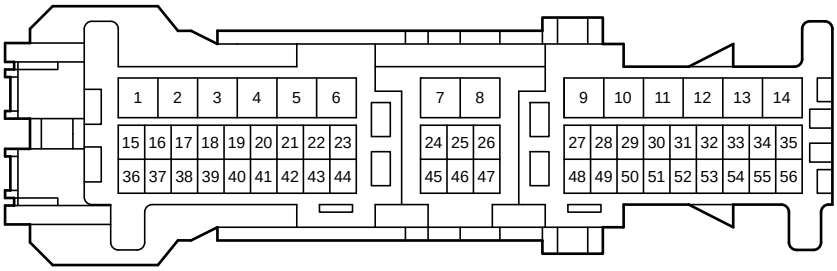

90980-12890

AG1
Blue

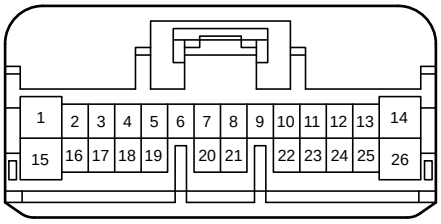

90980-12771

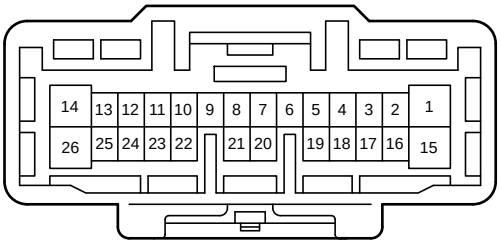

90980-12770
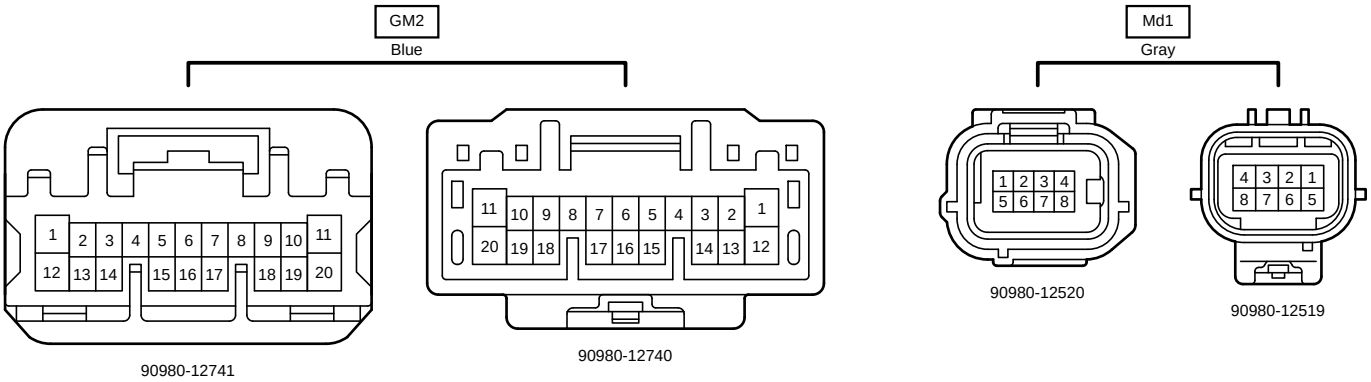
Seat Belt Warning (Korea) (Before Oct. 2015 Production)