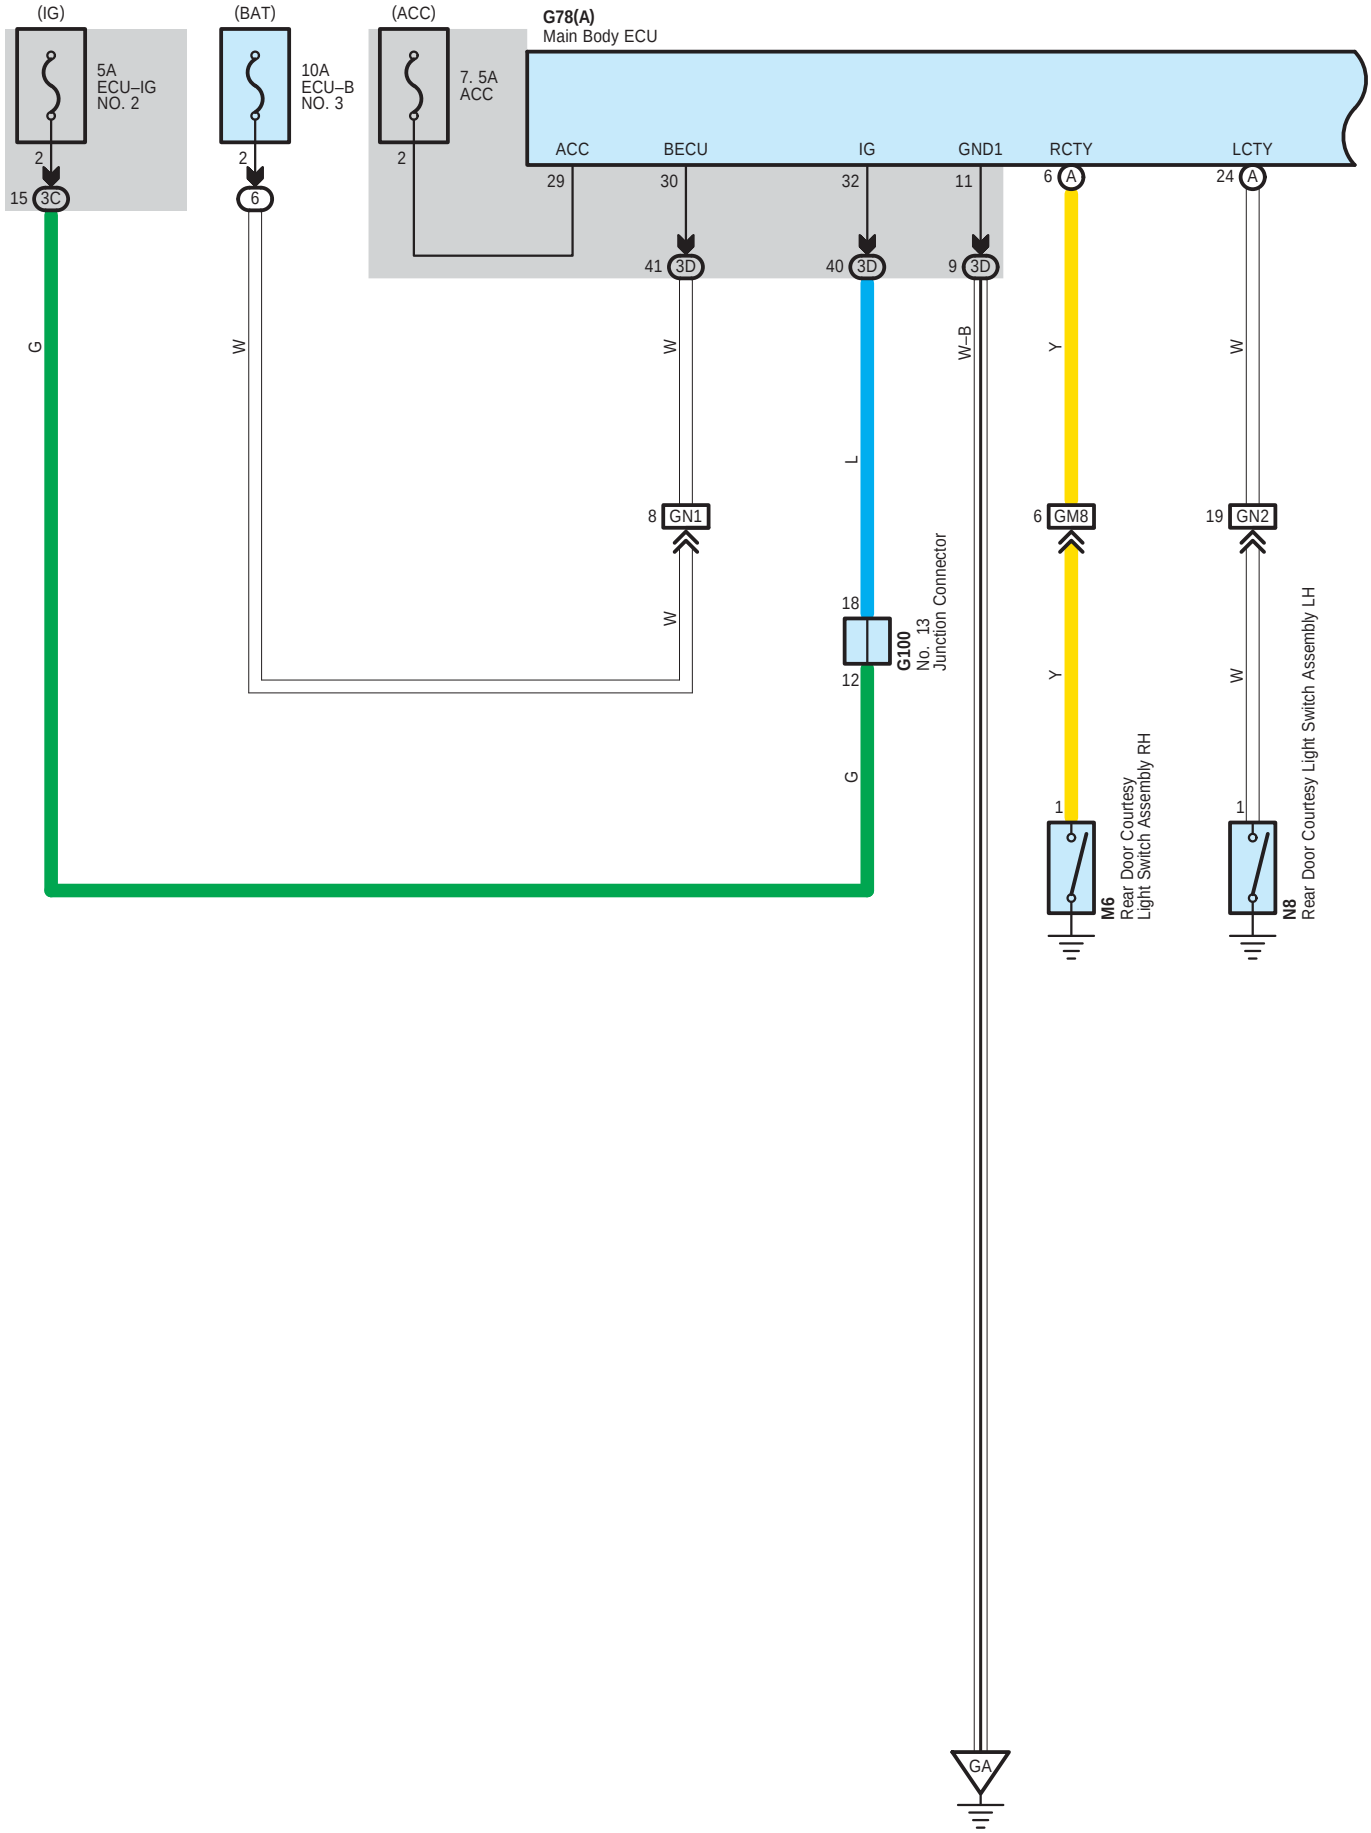
(IG)
5A
ECU–IG
NO. 2
(BAT)
10A
ECU–B
NO. 3
(ACC)
7. 5A
ACC
G78(A)
Main Body ECU
ACC
BECU
IG
GND1
RCTY
LCTY
29
30
32
11
6 A
24 A
2
15 3C
2
6
2
41 3D
40 3D
9 3D
G
W
W
W–B
Y
W
L
8 GN1
6 GM8
19 GN2
W
18
12
G100
No. 13
Junction Connector
Y
W
G
1
1
M6
Rear Door Courtesy
Light Switch Assembly RH
N8
Rear Door Courtesy Light Switch Assembly LH
GA

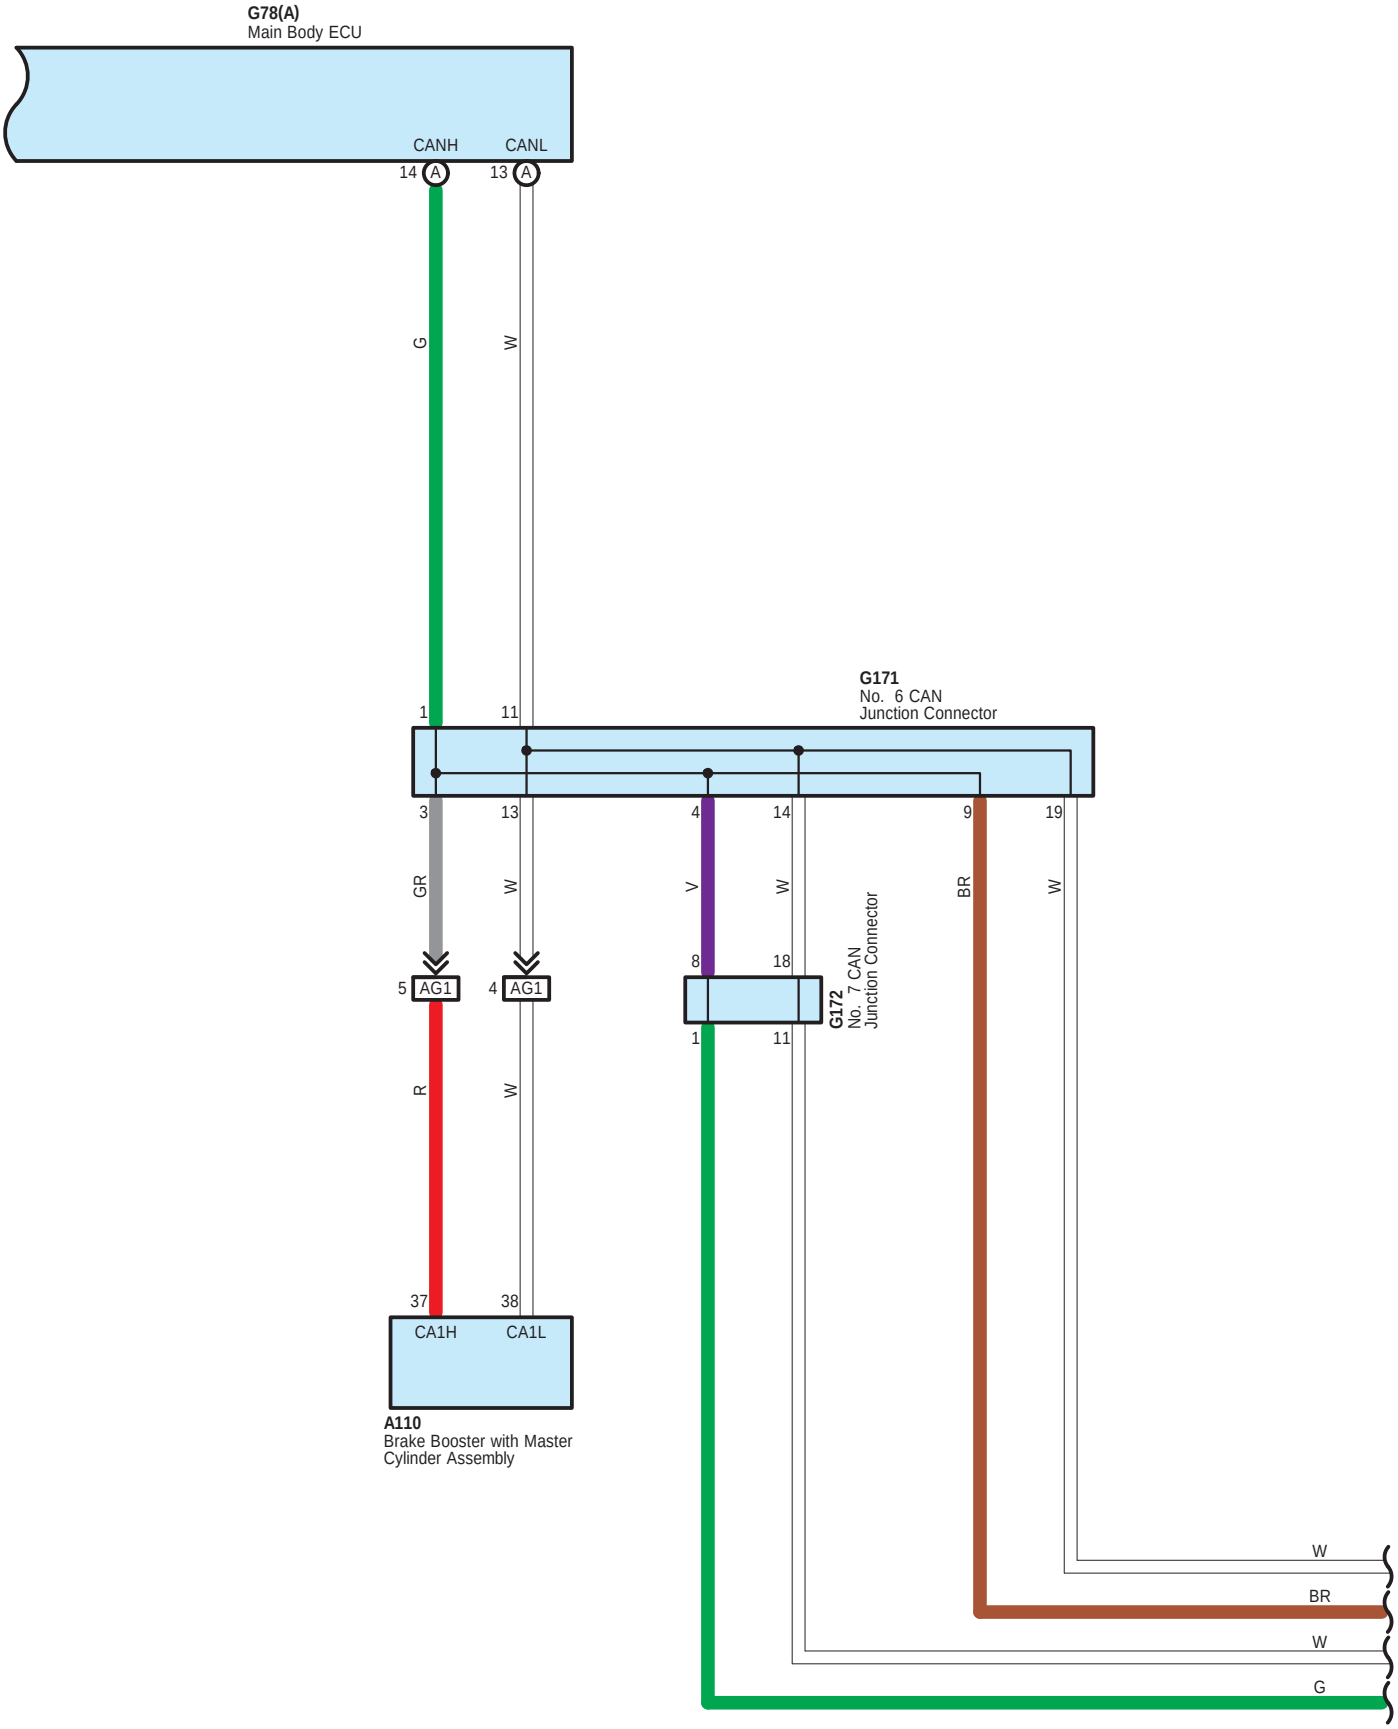
G78(A)
Main Body ECU
CANH
CANL
14 A
13 A
G
W
G171
No. 6 CAN
Junction Connector
1
11
3
13
4
14
9
19
GR
W
V
W
BR
W
5 AG1
4 AG1
8
18
G172
No. 7 CAN
Junction Connector
1
11
R
W
37
38
CA1H
CA1L
A110
Brake Booster with Master
Cylinder Assembly
W
BR
W
G

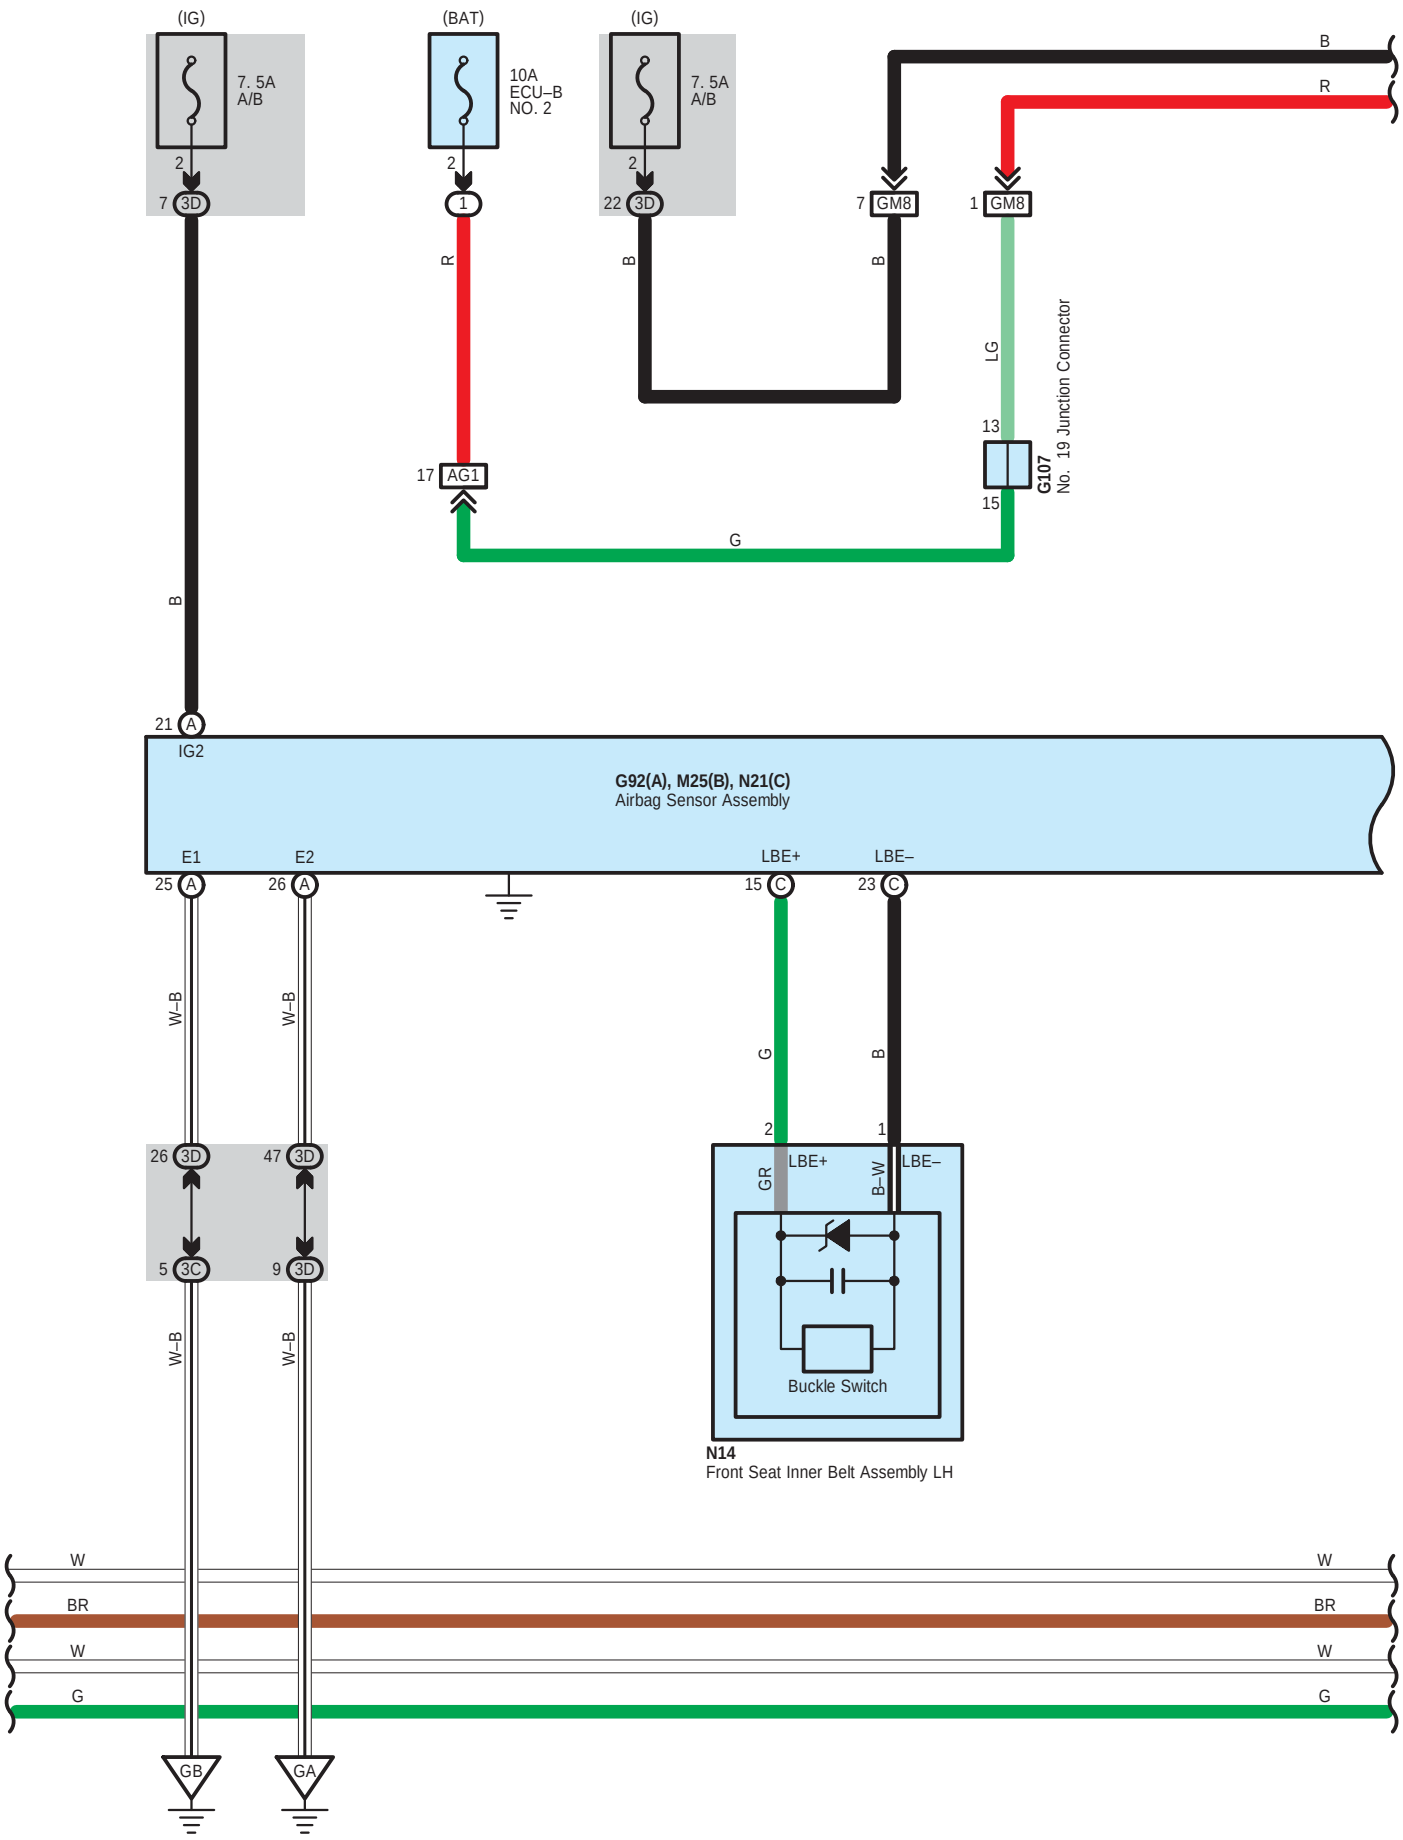
(IG)
7. 5A
A/B
(BAT)
10A
ECU–B
NO. 2
(IG)
7. 5A
A/B
B
R
7 3D
22 3D
7 GM8
1 GM8
17 AG1
13
15
G107
No. 19 Junction Connector
G
21 A
IG2
G92(A), M25(B), N21(C)
Airbag Sensor Assembly
E1
E2
LBE+
LBE–
25 A
26 A
15 C
23 C
W–B
26 3D
47 3D
5 3C
9 3D
GR
B–W
Buckle Switch
N14
Front Seat Inner Belt Assembly LH
W
BR
G
GB
GA

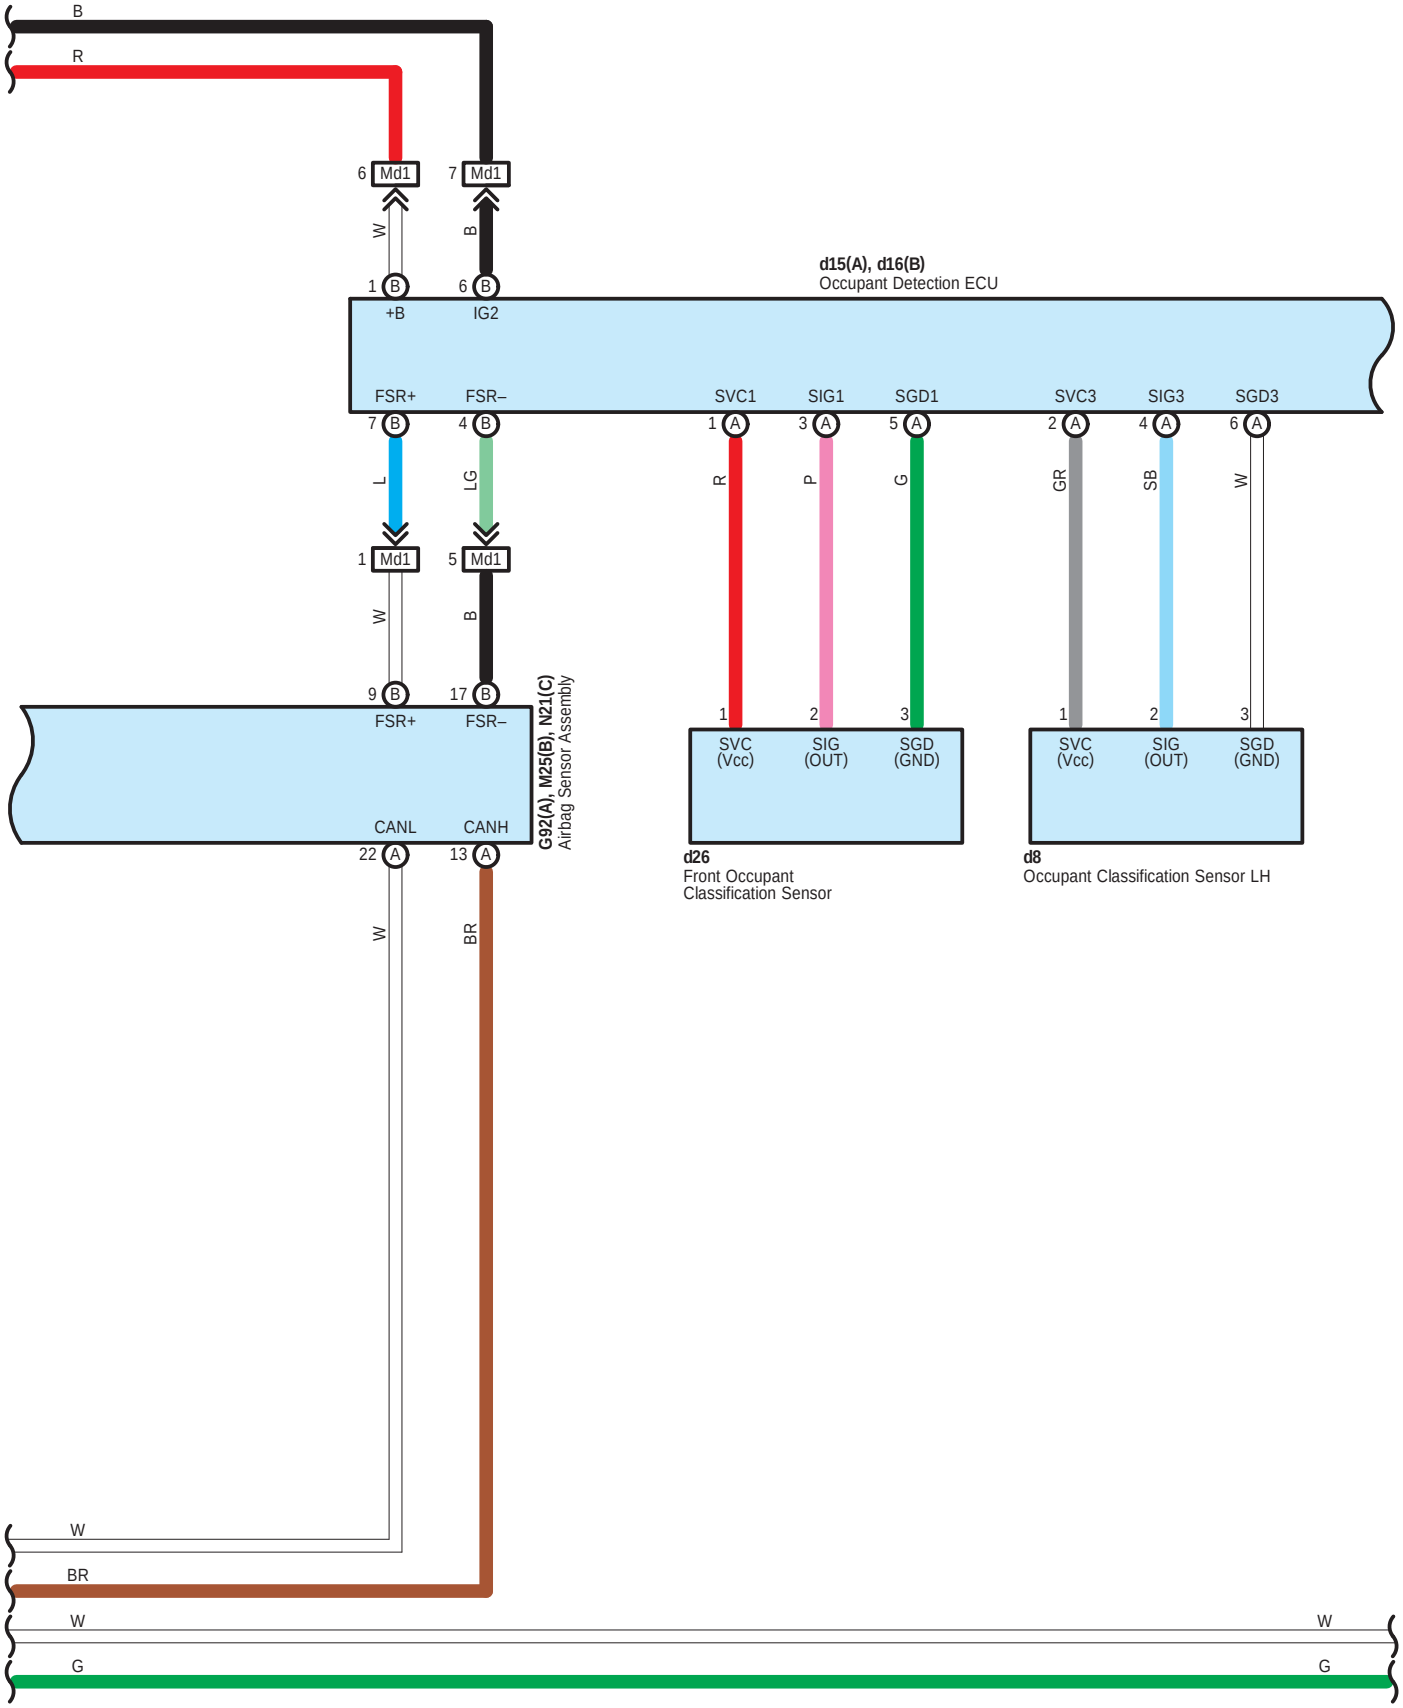
B
R
6 Md1
7 Md1
W
B
1 B
6 B
+B
IG2
d15(A), d16(B)
Occupant Detection ECU
FSR+
FSR–
SVC1
SIG1
SGD1
SVC3
SIG3
SGD3
7 B
4 B
1 A
3 A
5 A
2 A
4 A
6 A
L
LG
R
P
G
GR
SB
W
1 Md1
5 Md1
W
B
9 B
17 B
FSR+
FSR–
G92(A), M25(B), N21(C)
Airbag Sensor Assembly
CANL
CANH
22 A
13 A
W
BR
1
2
3
SVC (Vcc)
SIG (OUT)
SGD (GND)
d26
Front Occupant Classification Sensor
d8
Occupant Classification Sensor LH
W
BR
W
G
W
G

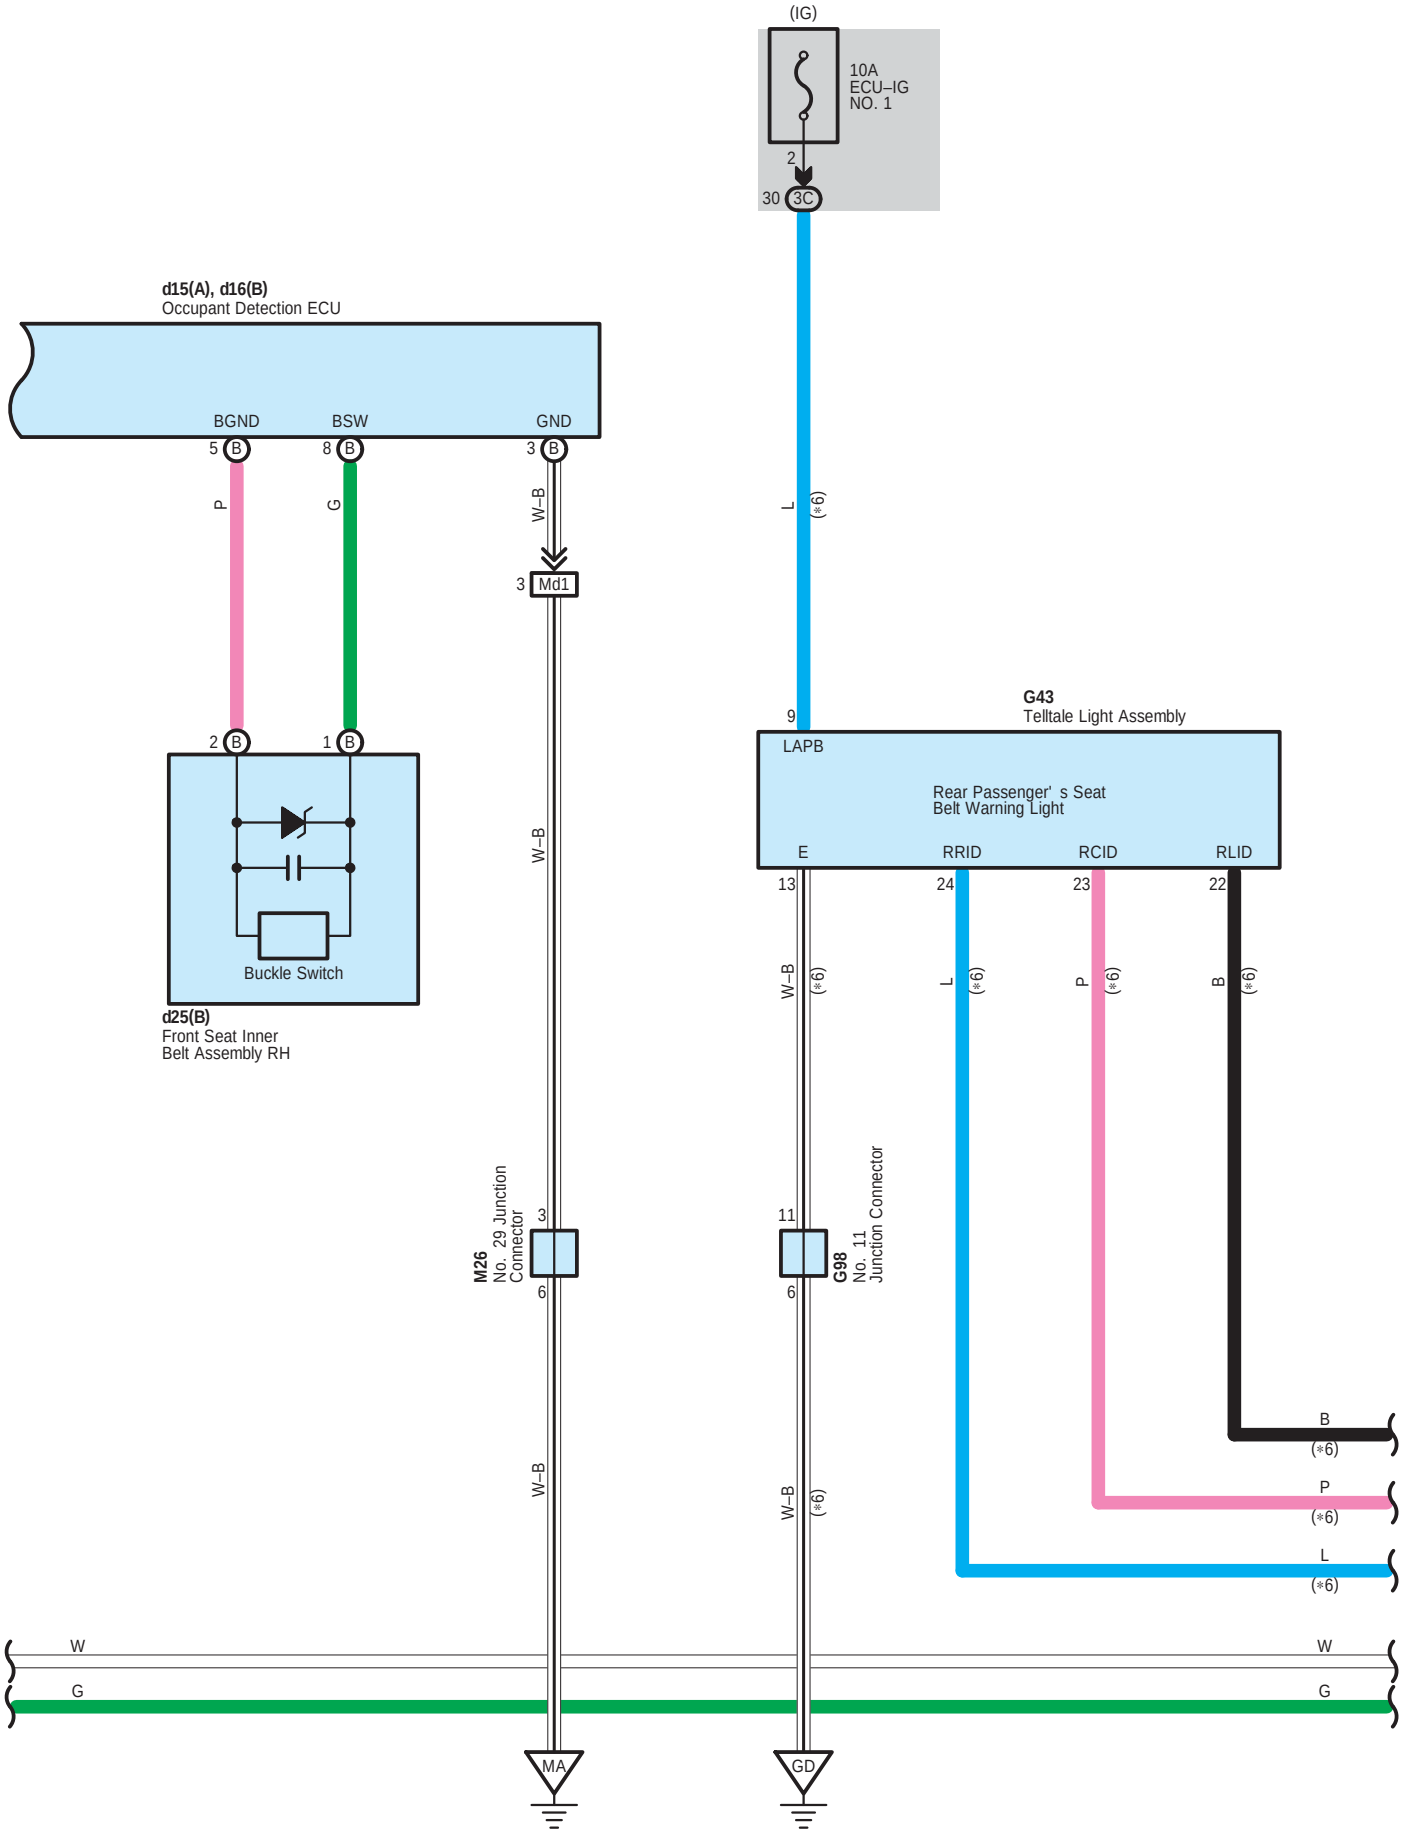
(IG)
10A
ECU–IG
NO. 1
2
30 3C
d15(A), d16(B)
Occupant Detection ECU
BGND
BSW
GND
5 B
8 B
3 B
P
G
W–B
3 Md1
L
(*6)
9
G43
Telltale Light Assembly
LAPB
Rear Passenger' s Seat
Belt Warning Light
E
RRID
RCID
RLID
13
24
23
22
2 B
1 B
Buckle Switch
d25(B)
Front Seat Inner
Belt Assembly RH
W–B
W–B
(*6)
L
(*6)
P
(*6)
B
(*6)
M26
No. 29 Junction
Connector
3
6
11
6
G98
No. 11
Junction Connector
B
(*6)
P
(*6)
L
(*6)
W–B
W–B
(*6)
W
G
W
G
MA
GD

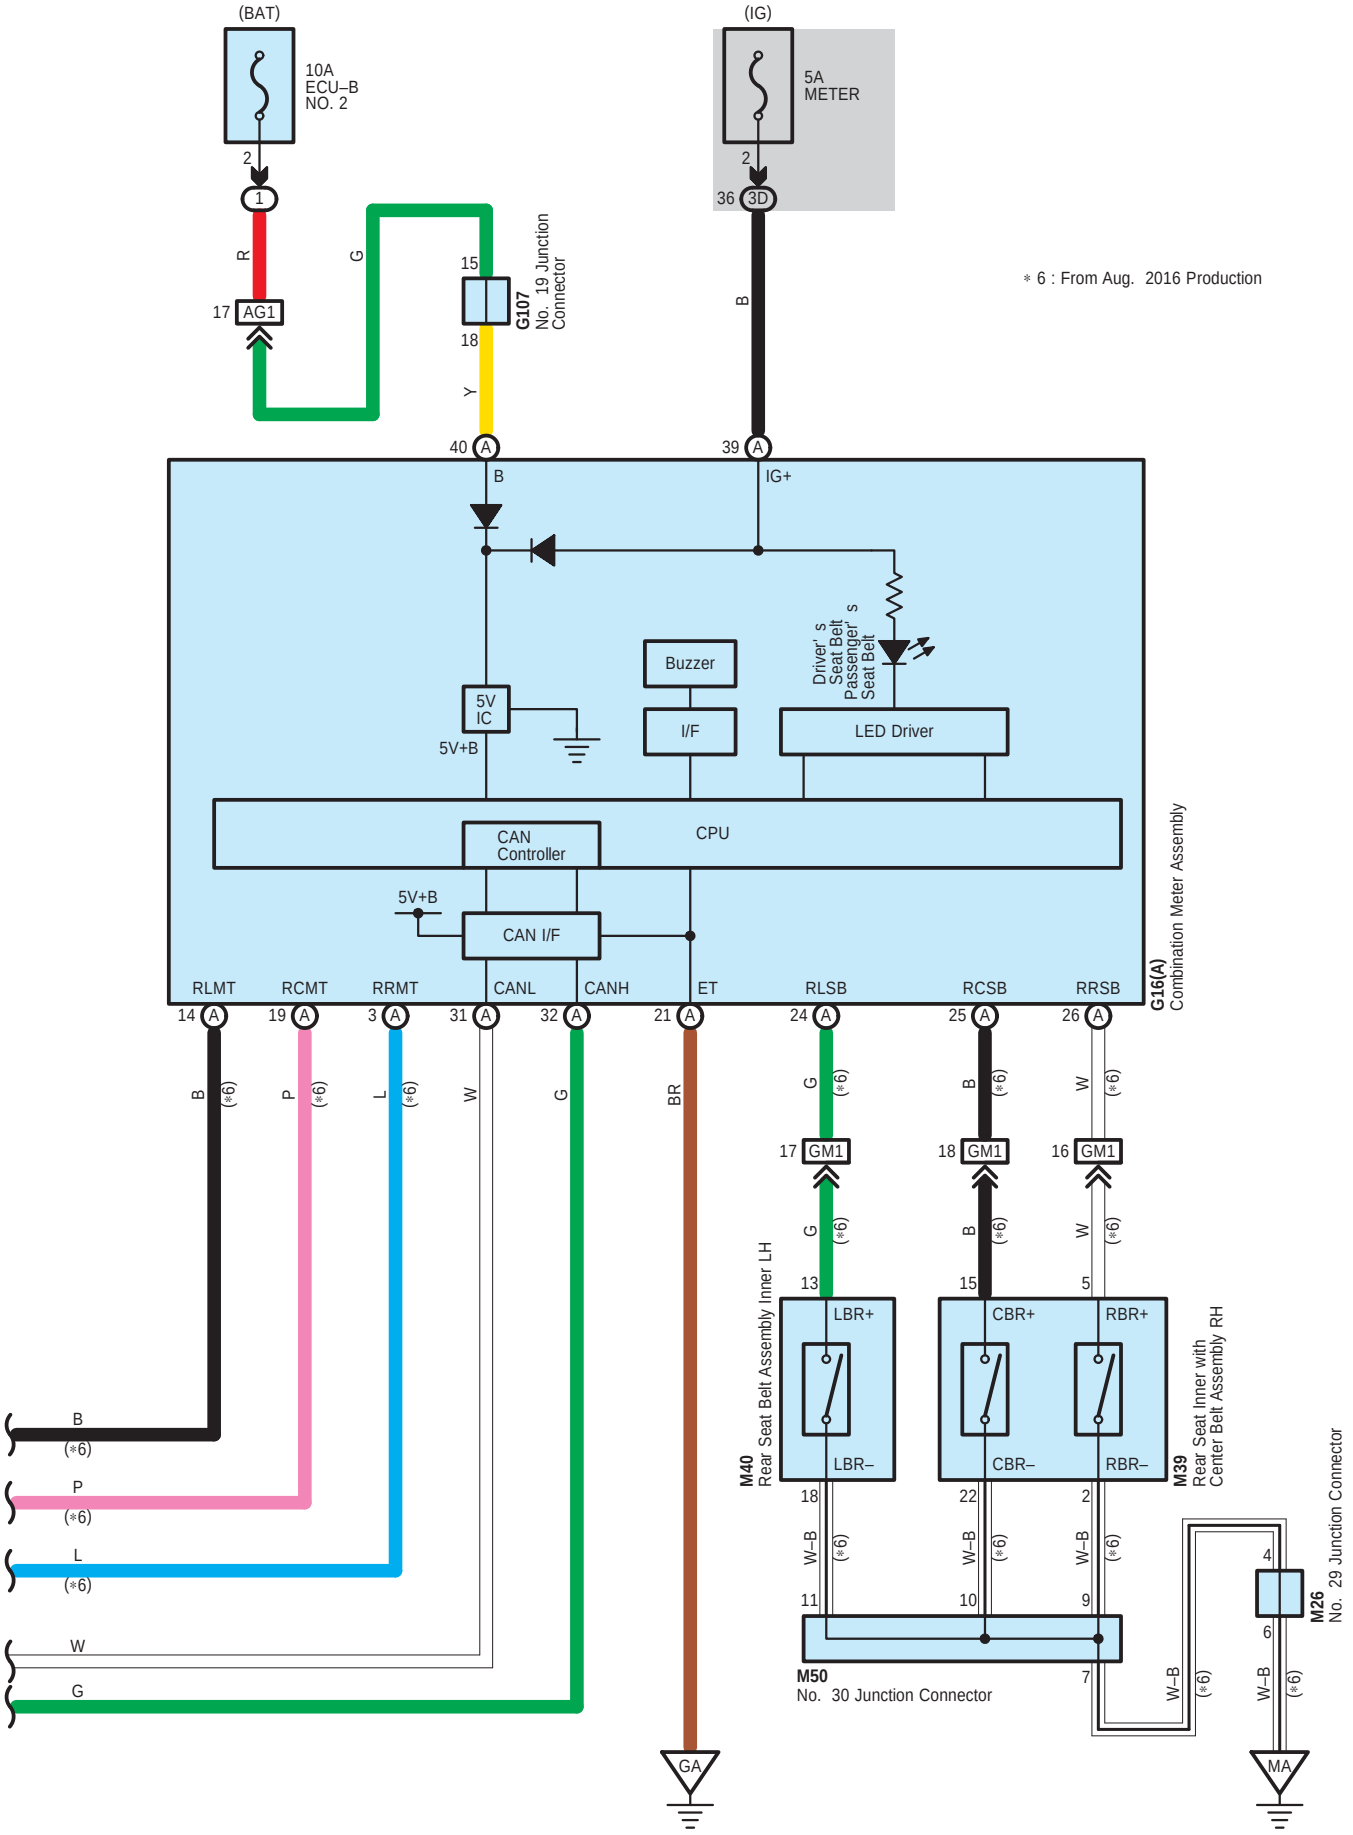
(BAT)
10A
ECU–B
NO. 2
(IG)
5A
METER
AG1
G107
No. 19 Junction Connector
3D
∗ 6 : From Aug. 2016 Production
IG+
Buzzer
I/F
5V
IC
5V+B
Driver' s Seat Belt
Passenger' s Seat Belt
LED Driver
CPU
CAN Controller
CAN I/F
G16(A)
Combination Meter Assembly
RLMT
RCMT
RRMT
CANL
CANH
ET
RLSB
RCSB
RRSB
GM1
LBR+
LBR–
CBR+
CBR–
RBR+
RBR–
M40
Rear Seat Belt Assembly Inner LH
M39
Rear Seat Inner with Center Belt Assembly RH
M50
No. 30 Junction Connector
M26
No. 29 Junction Connector
GA
MA

A110
Black

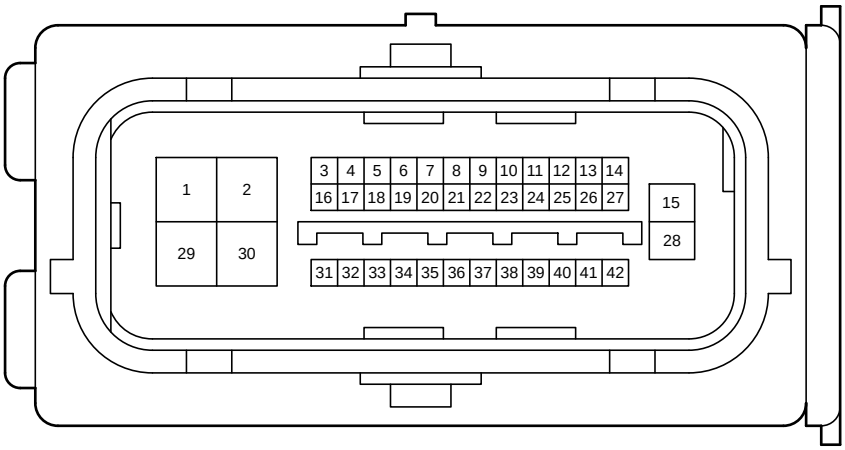

90980-12828

G16
Black

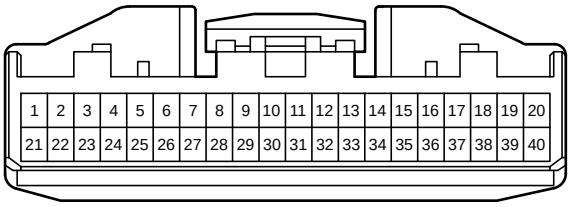

90980-12557

G43
Black

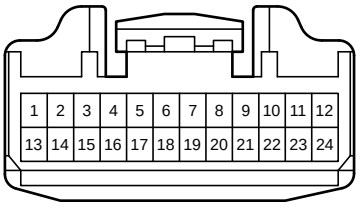

90980-12554

G78
White

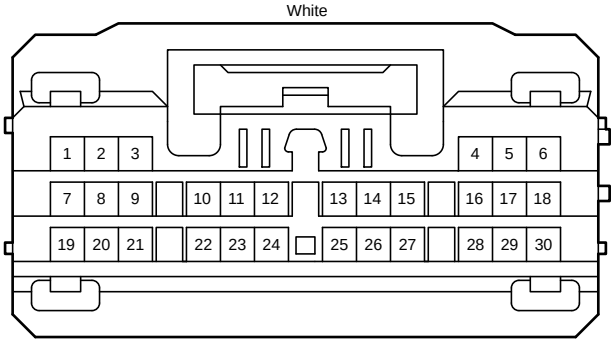

90980-12909

G92
Yellow

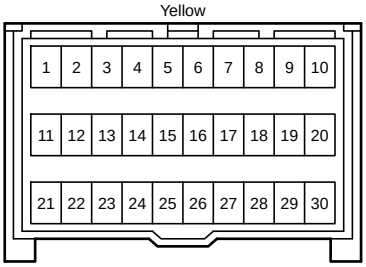

90980-12391

G98
Gray

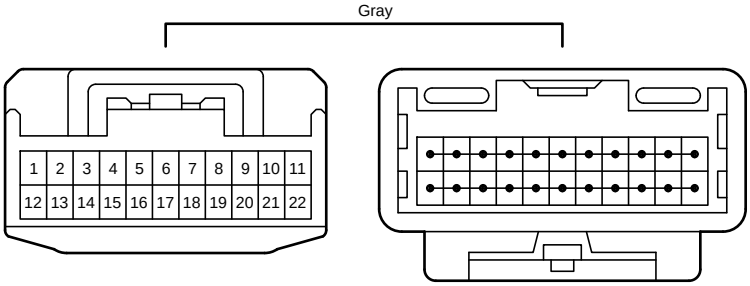

90980-12372

G100
Gray

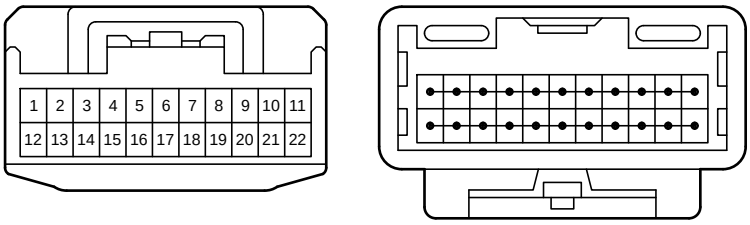

90980-12372

G107
Gray

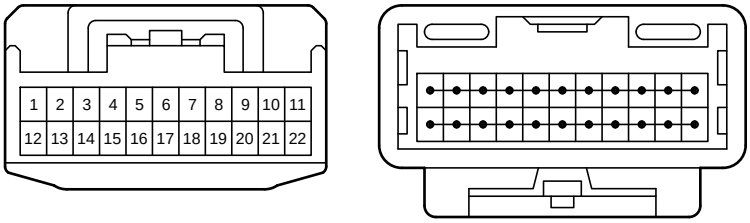

90980-12372

G171
White

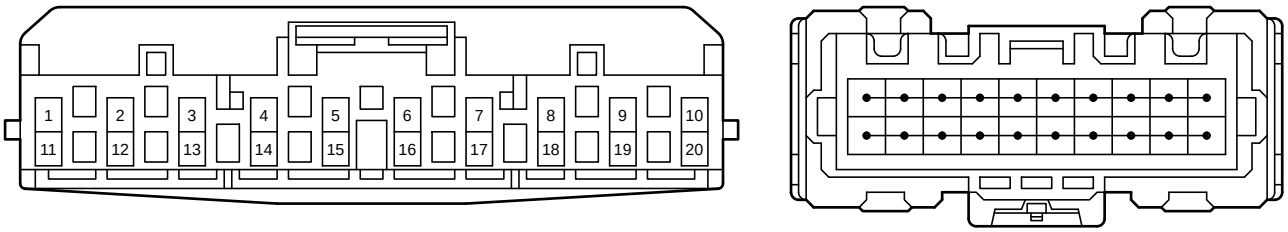

90980-12A58

G172
White

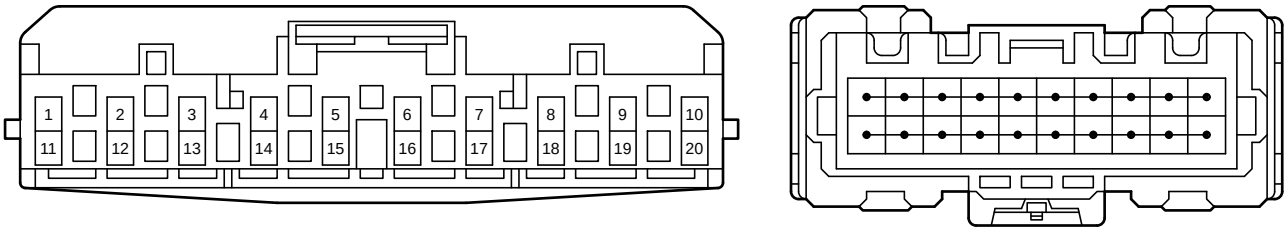

90980-12A58

M6
Black

90980-10871

M25
Yellow

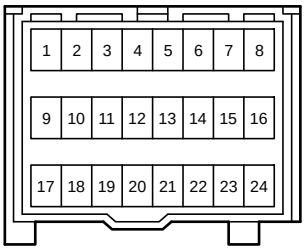

90980-12392

M26
Black

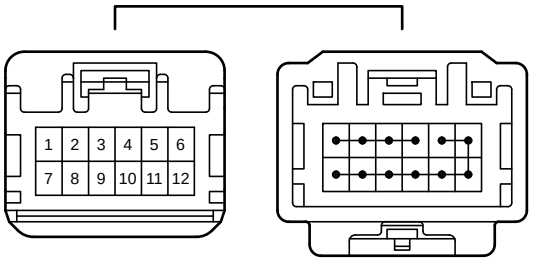

90980-12737

M39
Gray

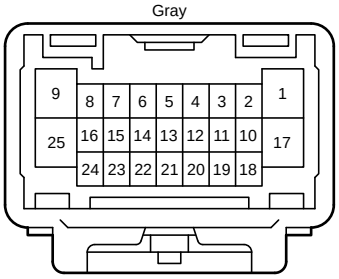

90980-12413

M40
White

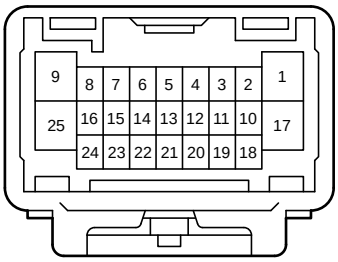

90980-12413

M50
Black

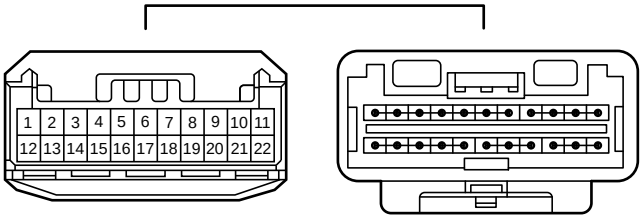

90980-12B54

N8
Black

90980-10871

N14
White

90980-10942

N21
Yellow

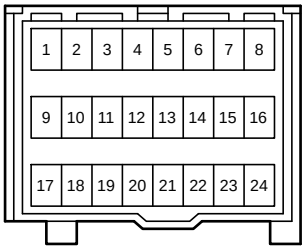

90980-12390

d8
Gray

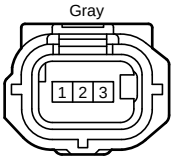

90980-12354

d15
Gray

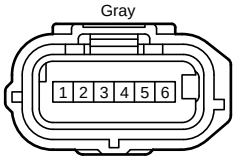

90980-12303

d16
Black

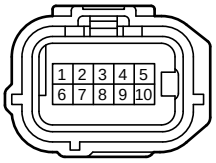

90980-12380

d25
Gray

90980-11155

d26
Black

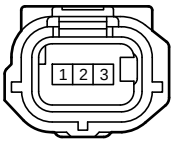

90980-12353

3C
White

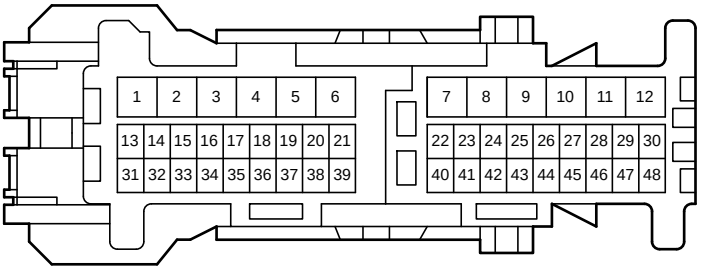

90980-12887

3D
White

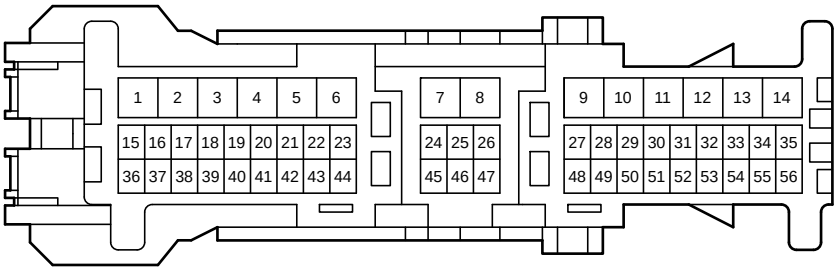

90980-12890

AG1
Blue

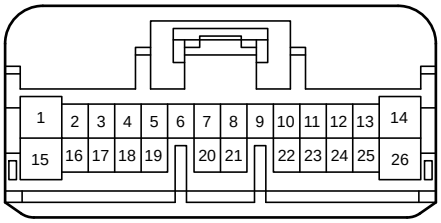

90980-12771

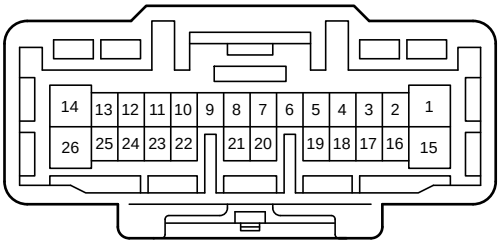

90980-12770

GM1
White

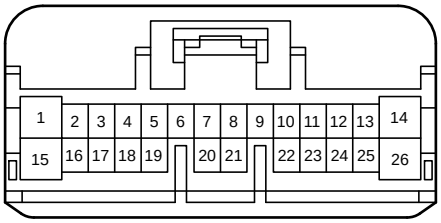

90980-12771

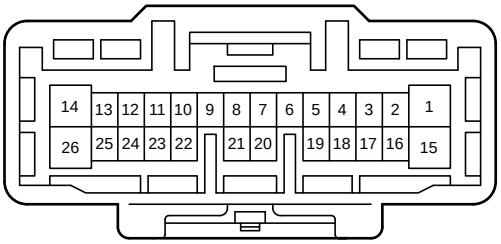

90980-12770

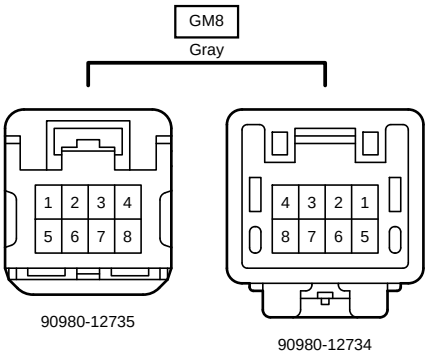
GM8
Gray
1 2 3 4
5 6 7 8
90980-12735
4 3 2 1
8 7 6 5
90980-12734

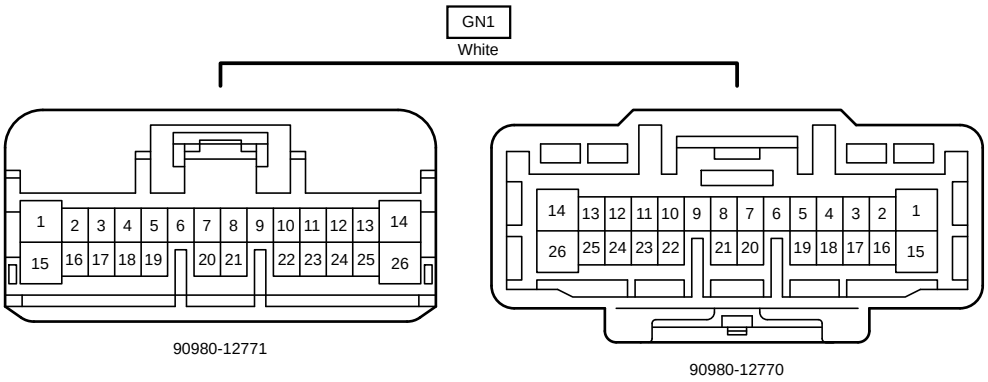
GN1
White
1 2 3 4 5 6 7 8 9 10 11 12 13 14
15 16 17 18 19 20 21 22 23 24 25 26
90980-12771
14 13 12 11 10 9 8 7 6 5 4 3 2 1
26 25 24 23 22 21 20 19 18 17 16 15
90980-12770

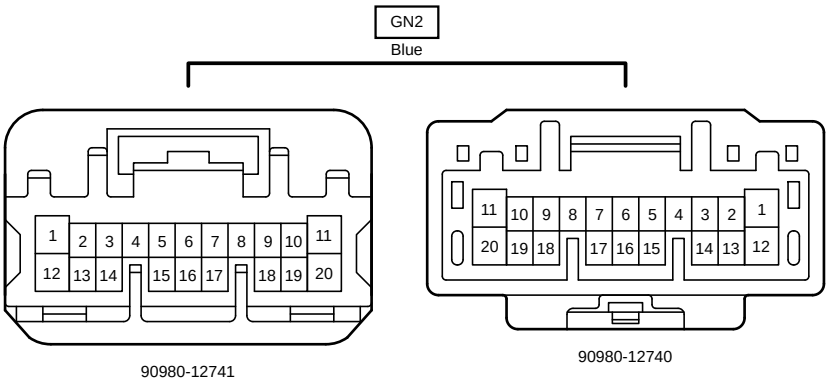
GN2
Blue
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20
90980-12741
11 10 9 8 7 6 5 4 3 2 1
20 19 18 17 16 15 14 13 12
90980-12740

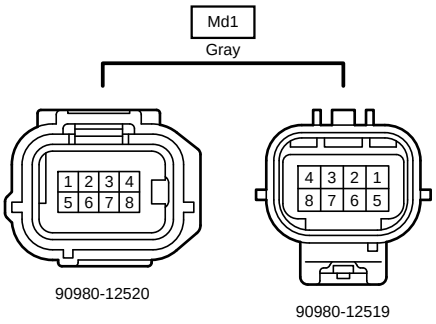
Md1
Gray
1 2 3 4
5 6 7 8
90980-12520
4 3 2 1
8 7 6 5
90980-12519