
INSTALLATION

1. INSTALL ACCELERATOR PEDAL ROD

NOTICE:

- **Avoid physical shock to the accelerator pedal assembly.**
- **Do not disassemble the accelerator pedal assembly.**

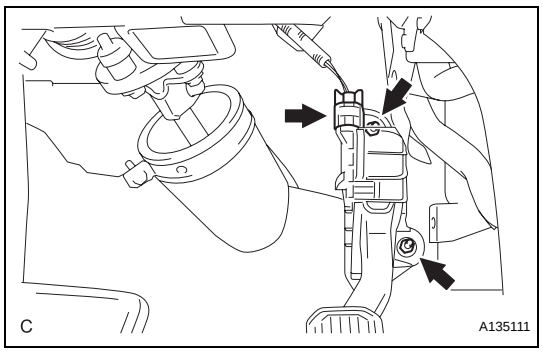

(a) Install the accelerator pedal rod with the 2 nuts.
Torque: 4.9 N*m (50 kgf*cm, 43 in.*lbf)

(b) Connect the accelerator pedal position sensor connector.