


AUTOMATIC TRANSAXLE UNIT

COMPONENTS

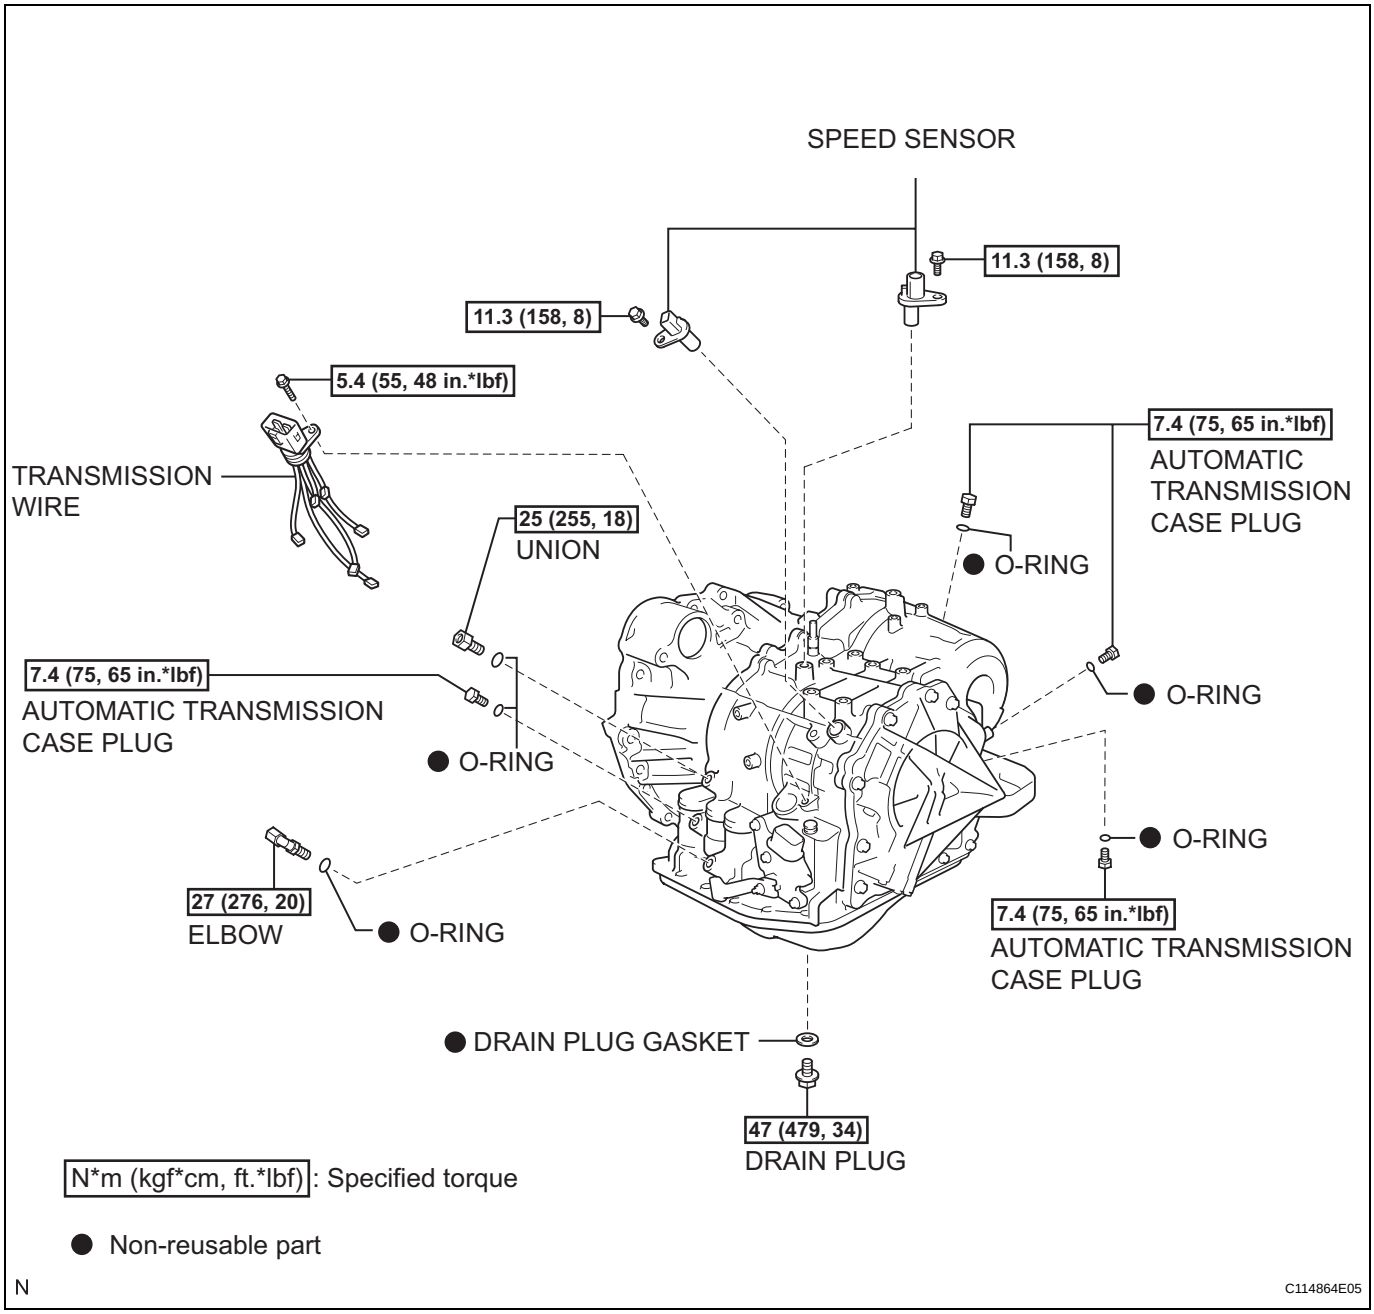

AX

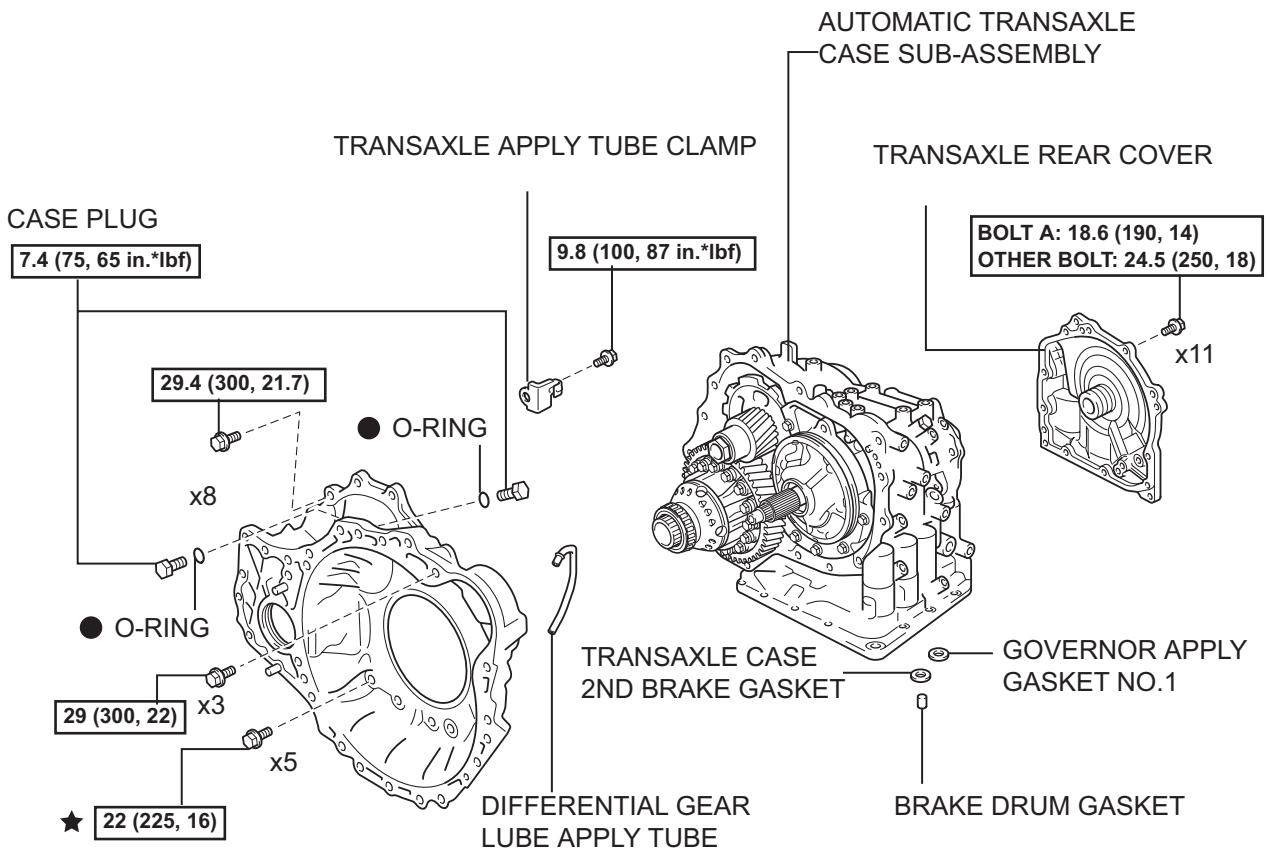

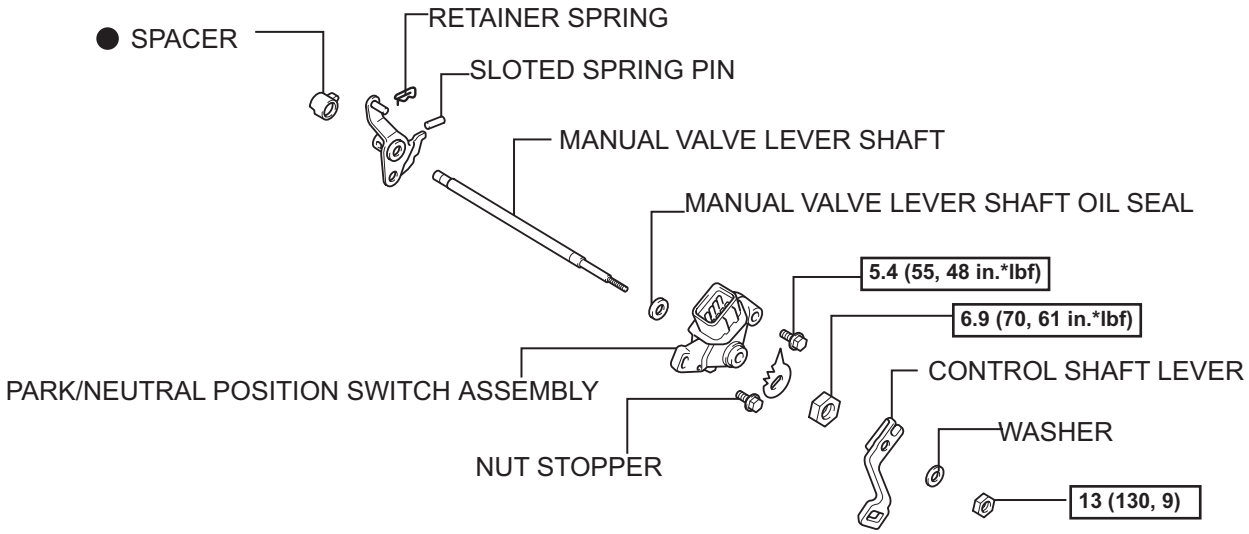


N*m (kgf*cm, ft.*lbf) : Specified torque

● Non-reusable part ★ Precoated part


N

C114953E03

AX

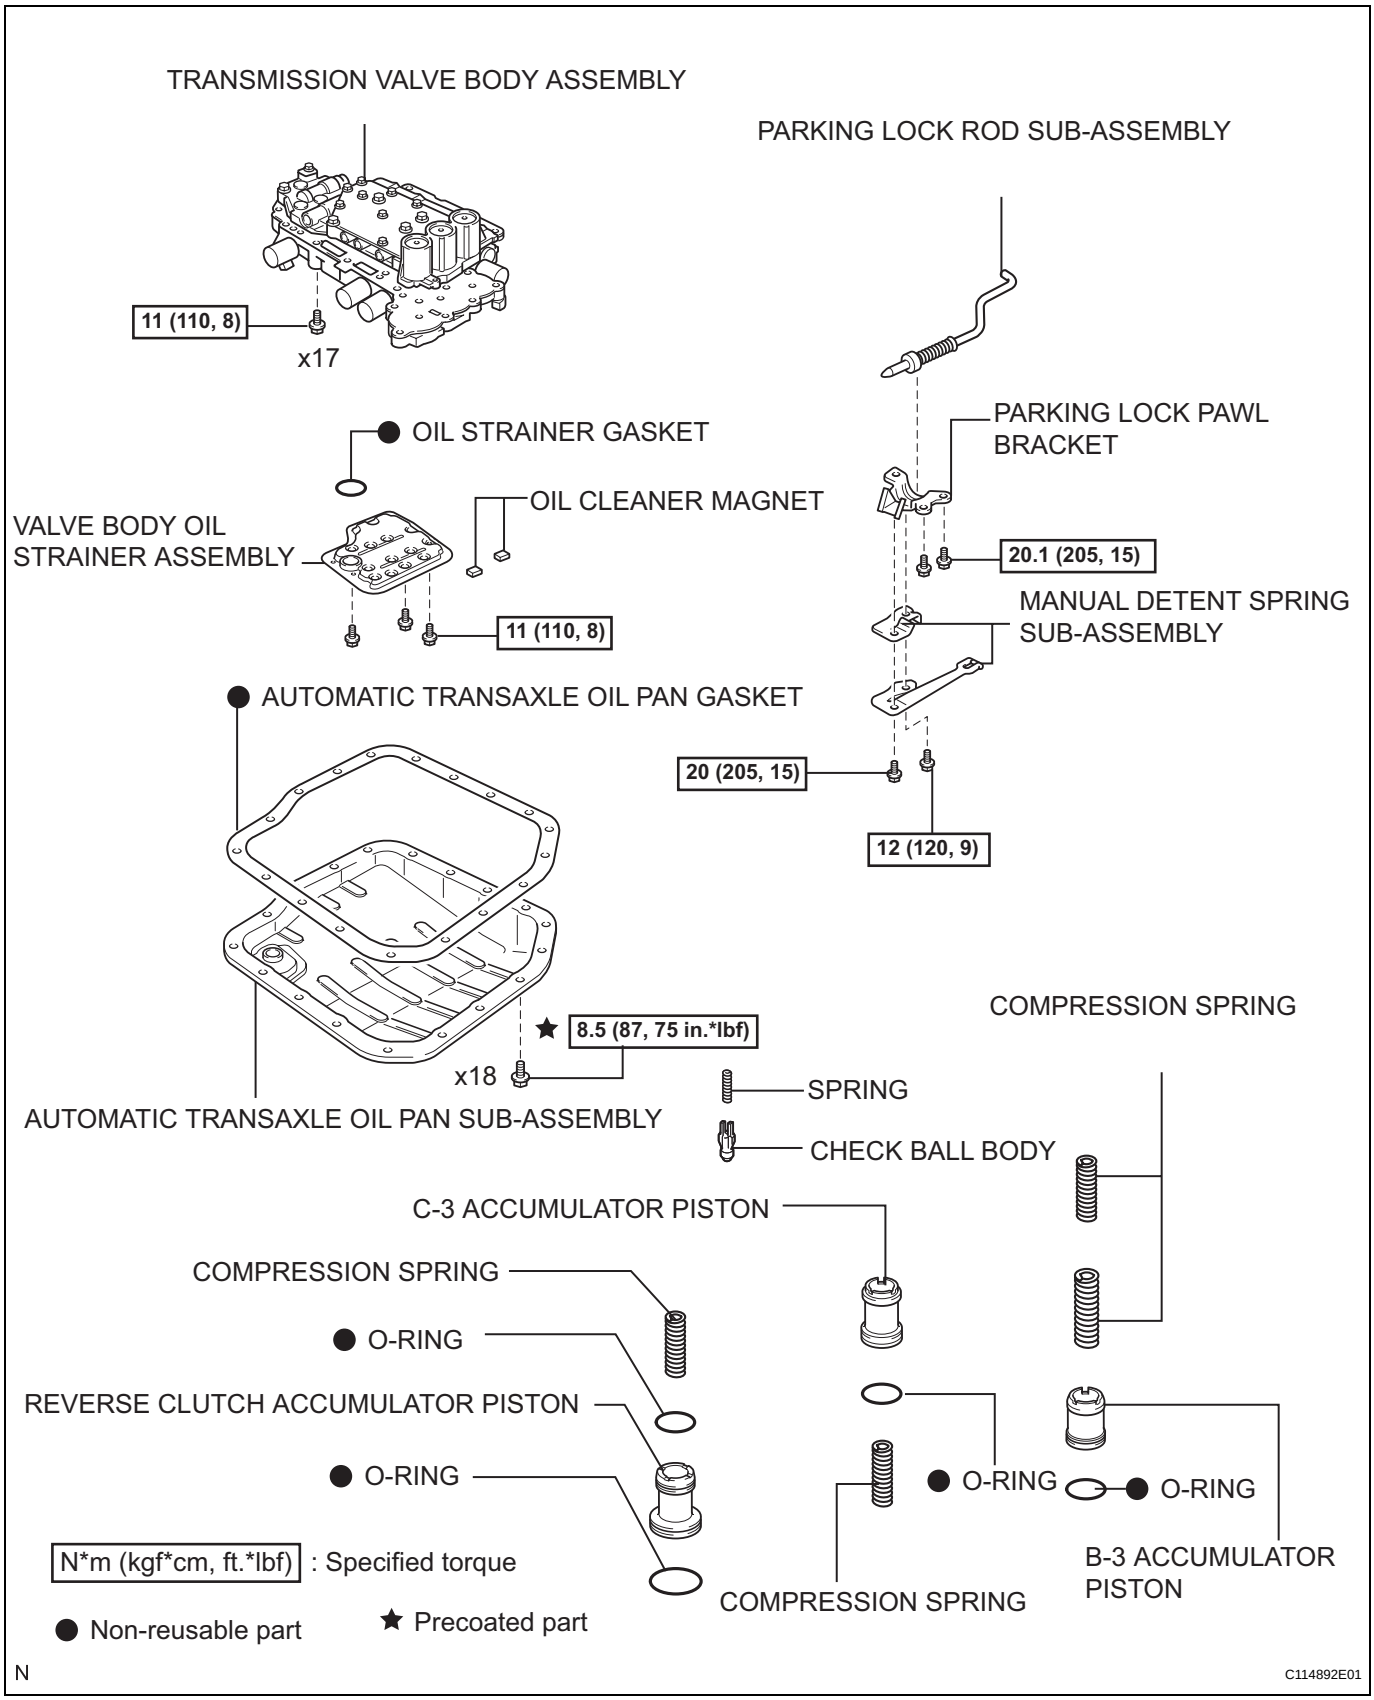
TRANSMISSION VALVE BODY ASSEMBLY
11 (110, 8)
x17
PARKING LOCK ROD SUB-ASSEMBLY
PARKING LOCK PAWL BRACKET
20.1 (205, 15)
MANUAL DETENT SPRING SUB-ASSEMBLY
OIL STRAINER GASKET
OIL CLEANER MAGNET
VALVE BODY OIL STRAINER ASSEMBLY
11 (110, 8)
AUTOMATIC TRANSAXLE OIL PAN GASKET
20 (205, 15)
12 (120, 9)
★ 8.5 (87, 75 in.*lbf)
x18
AUTOMATIC TRANSAXLE OIL PAN SUB-ASSEMBLY
COMPRESSION SPRING
SPRING
CHECK BALL BODY
C-3 ACCUMULATOR PISTON
COMPRESSION SPRING
O-RING
REVERSE CLUTCH ACCUMULATOR PISTON
O-RING
O-RING
O-RING
B-3 ACCUMULATOR PISTON
COMPRESSION SPRING
N*m (kgf*cm, ft.*lbf) : Specified torque
● Non-reusable part
★ Precoated part
N
C114892E01

AX

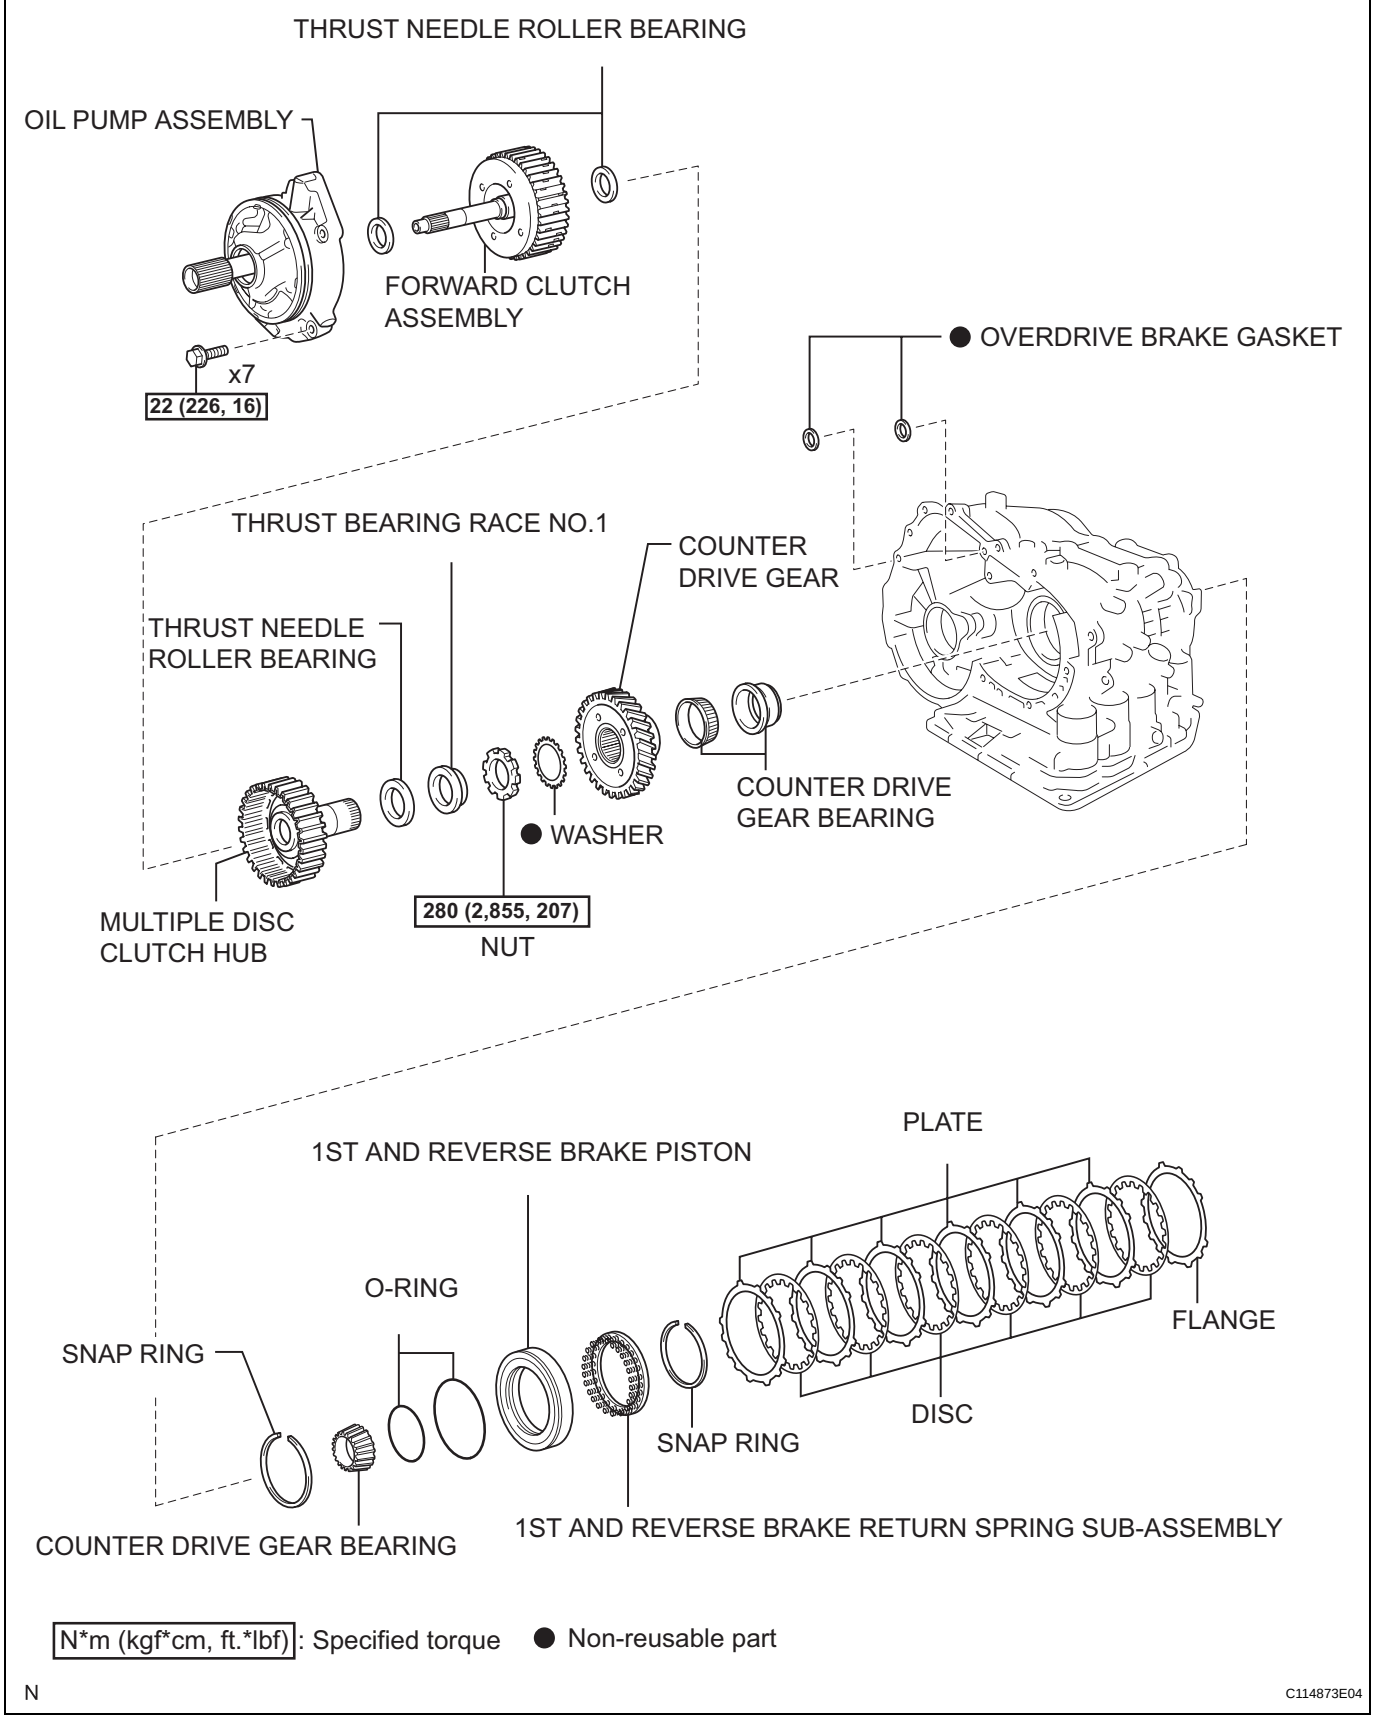


N*m (kgf*cm, ft.*lbf): Specified torque ● Non-reusable part


N

C114873E04


AX

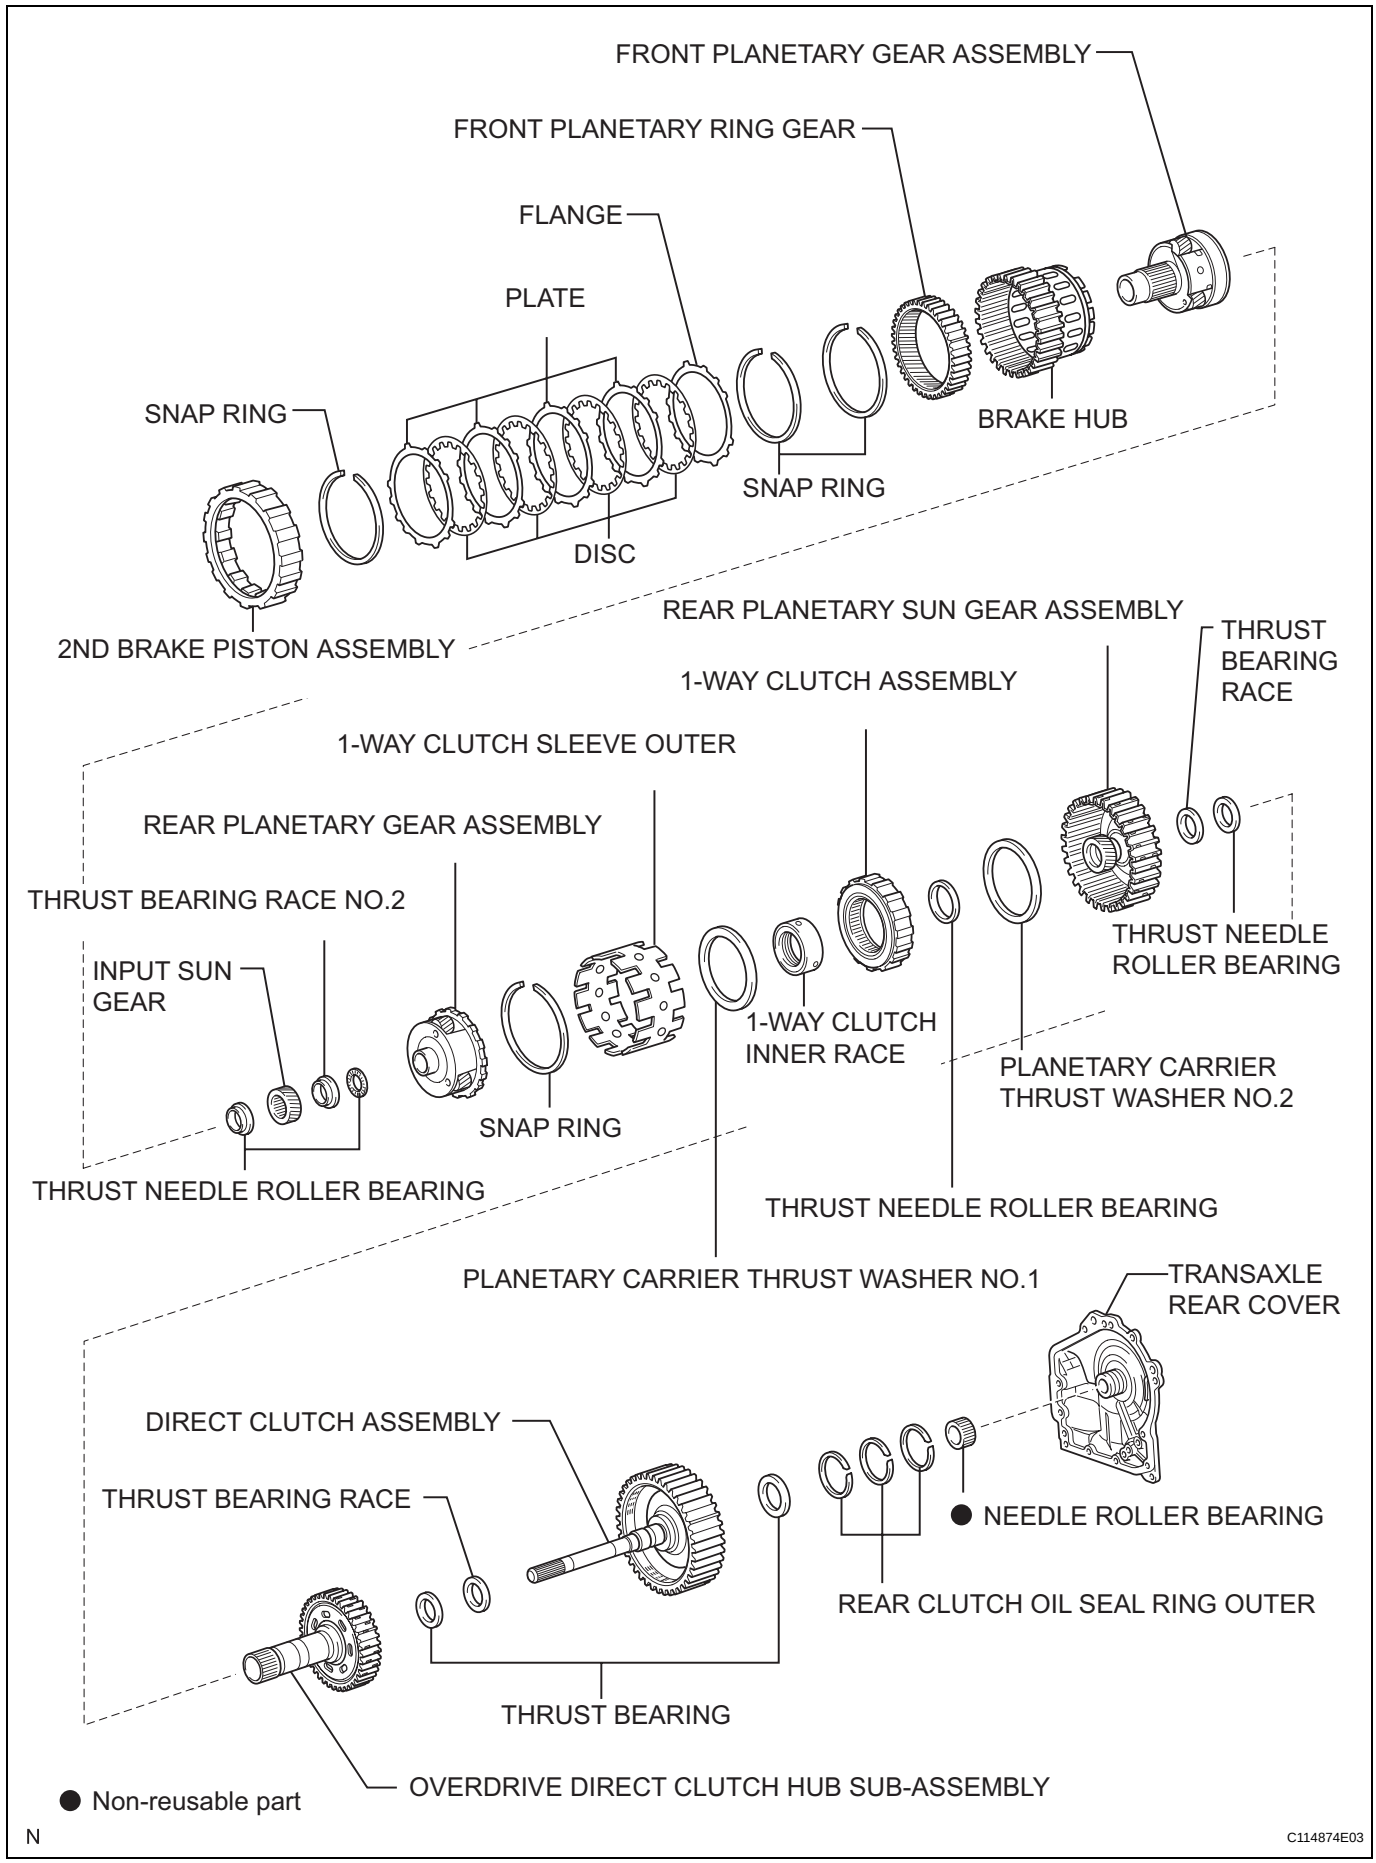
FRONT PLANETARY GEAR ASSEMBLY
FRONT PLANETARY RING GEAR
FLANGE
PLATE
SNAP RING
BRAKE HUB
SNAP RING
DISC
2ND BRAKE PISTON ASSEMBLY
REAR PLANETARY SUN GEAR ASSEMBLY
THRUST BEARING RACE
1-WAY CLUTCH ASSEMBLY
1-WAY CLUTCH SLEEVE OUTER
REAR PLANETARY GEAR ASSEMBLY
THRUST BEARING RACE NO.2
THRUST NEEDLE ROLLER BEARING
INPUT SUN GEAR
1-WAY CLUTCH INNER RACE
PLANETARY CARRIER THRUST WASHER NO.2
SNAP RING
THRUST NEEDLE ROLLER BEARING
THRUST NEEDLE ROLLER BEARING
PLANETARY CARRIER THRUST WASHER NO.1
TRANSAXLE REAR COVER
DIRECT CLUTCH ASSEMBLY
THRUST BEARING RACE
● NEEDLE ROLLER BEARING
REAR CLUTCH OIL SEAL RING OUTER
THRUST BEARING
OVERDRIVE DIRECT CLUTCH HUB SUB-ASSEMBLY
● Non-reusable part
N
C114874E03

AX

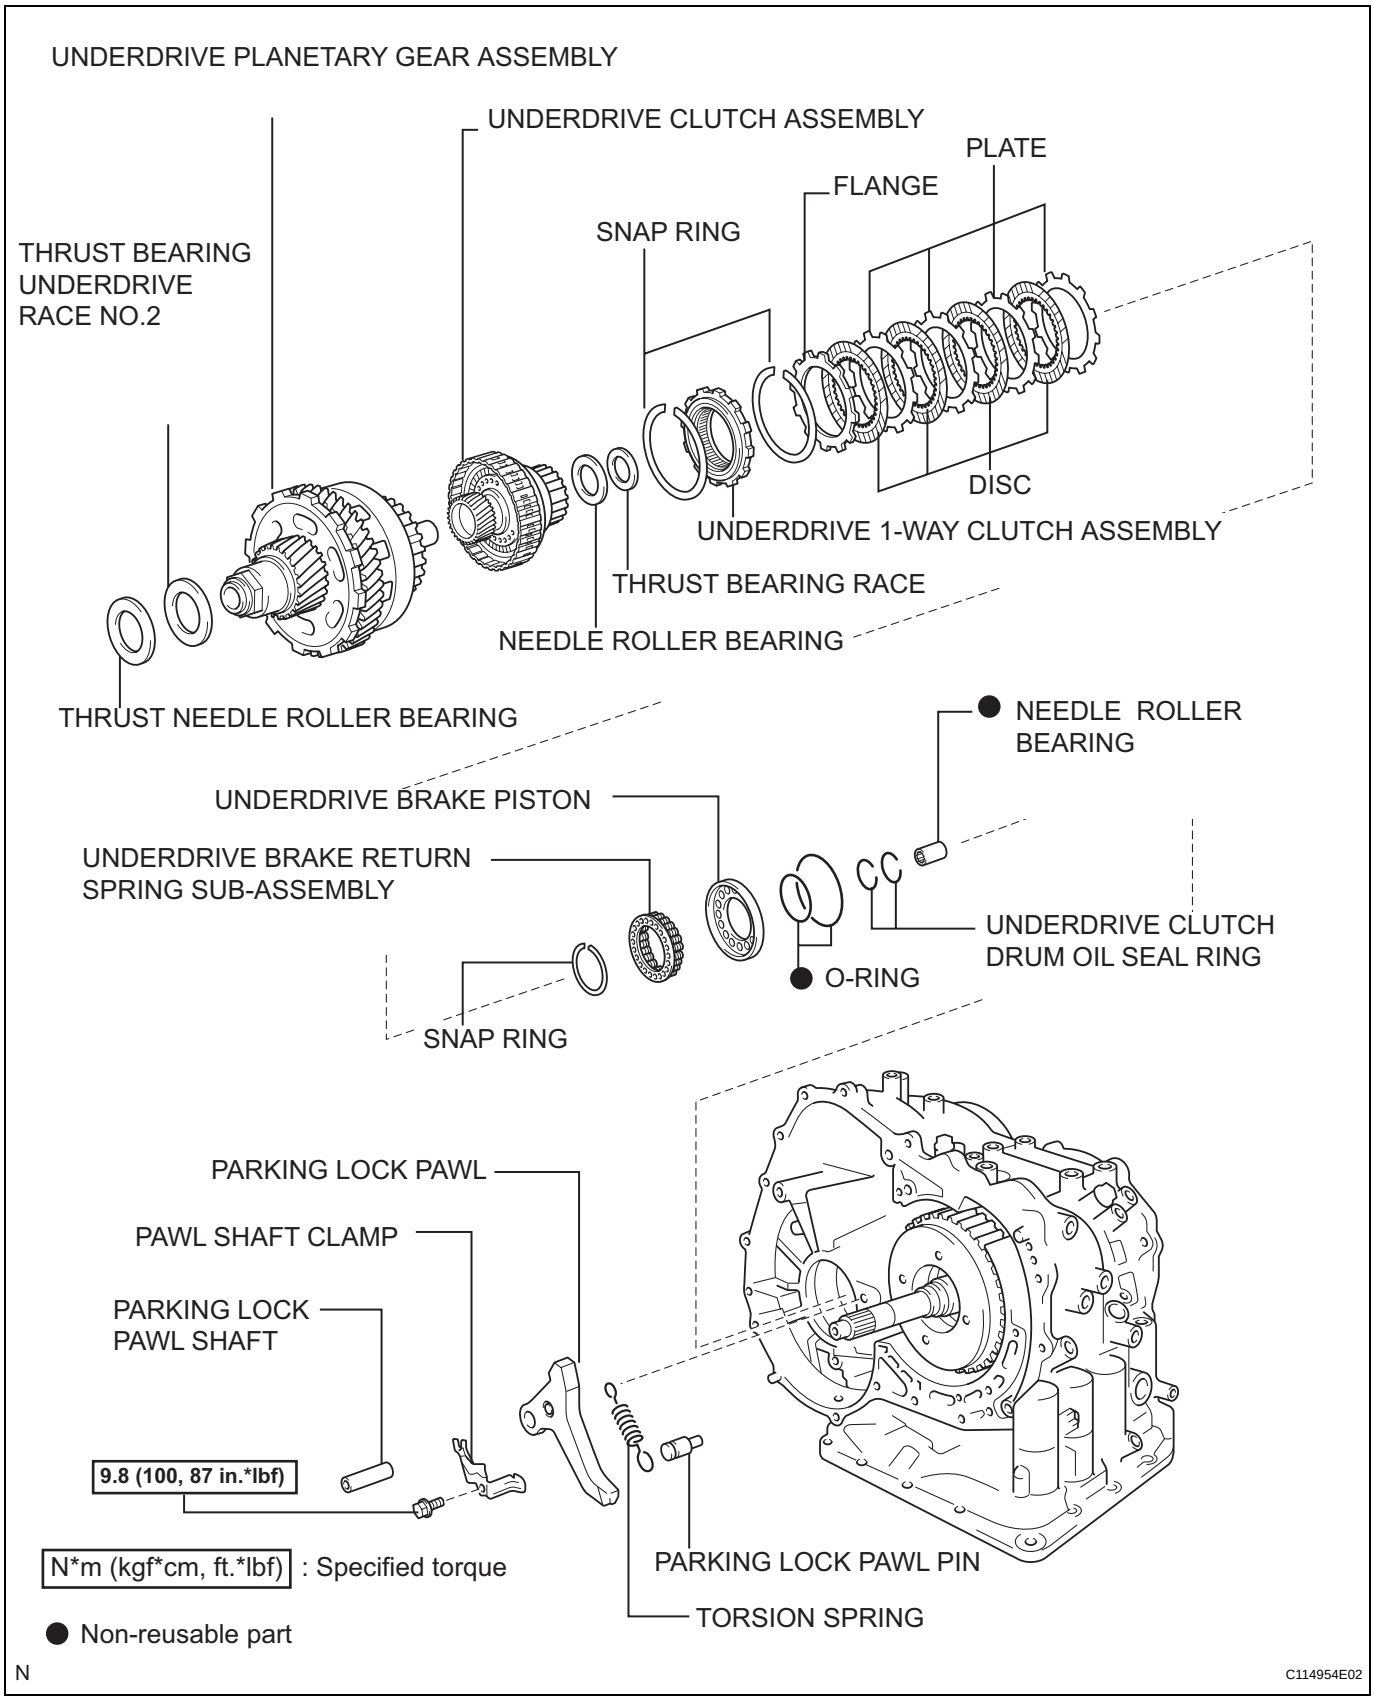
UNDERDRIVE PLANETARY GEAR ASSEMBLY
UNDERDRIVE CLUTCH ASSEMBLY
PLATE
FLANGE
SNAP RING
THRUST BEARING UNDERDRIVE RACE NO.2
DISC
UNDERDRIVE 1-WAY CLUTCH ASSEMBLY
THRUST BEARING RACE
NEEDLE ROLLER BEARING
THRUST NEEDLE ROLLER BEARING
NEEDLE ROLLER BEARING
UNDERDRIVE BRAKE PISTON
UNDERDRIVE BRAKE RETURN SPRING SUB-ASSEMBLY
UNDERDRIVE CLUTCH DRUM OIL SEAL RING
O-RING
SNAP RING
PARKING LOCK PAWL
PAWL SHAFT CLAMP
PARKING LOCK PAWL SHAFT
9.8 (100, 87 in.*lbf)
N*m (kgf*cm, ft.*lbf) : Specified torque
Non-reusable part
PARKING LOCK PAWL PIN
TORSION SPRING
N
C114954E02

AX

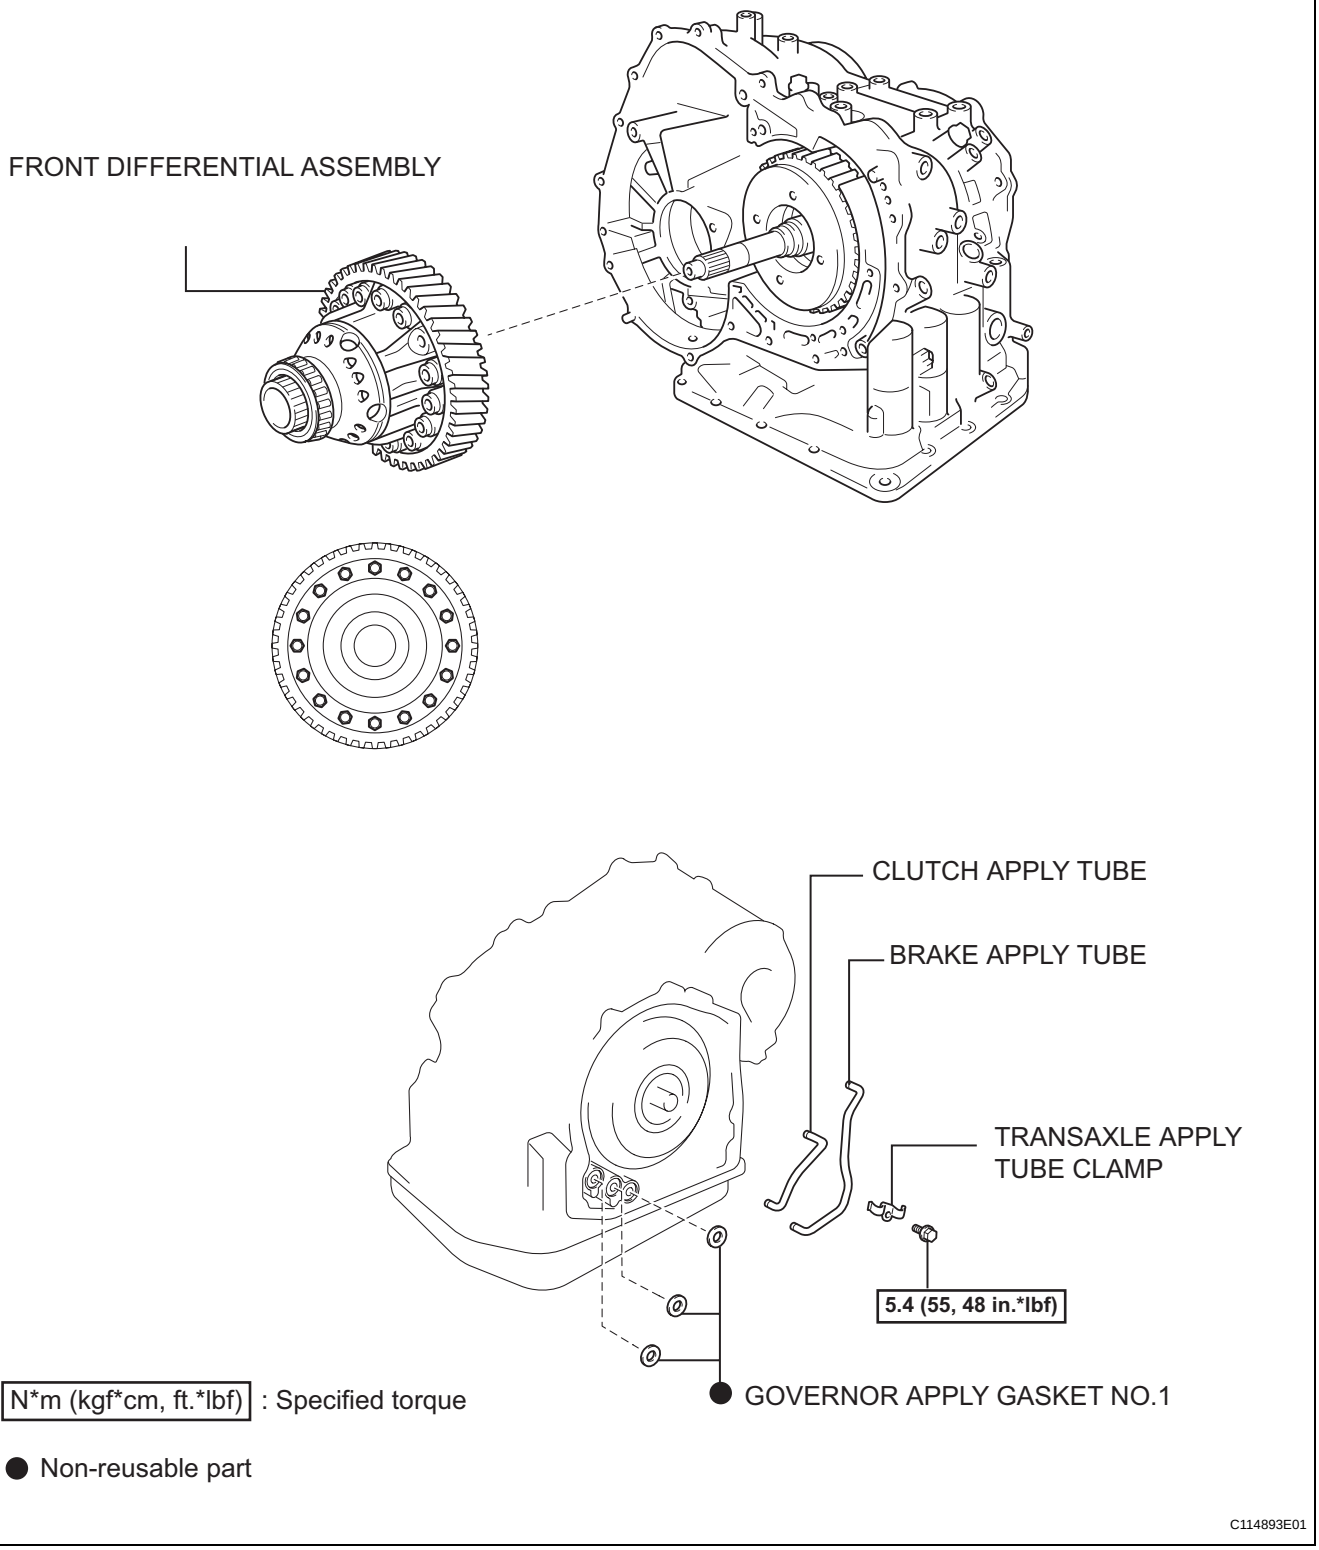
FRONT DIFFERENTIAL ASSEMBLY
CLUTCH APPLY TUBE
BRAKE APPLY TUBE
TRANSAXLE APPLY TUBE CLAMP
5.4 (55, 48 in.*lbf)
GOVERNOR APPLY GASKET NO.1
N*m (kgf*cm, ft.*lbf) : Specified torque
● Non-reusable part
N
C114893E01

AX