TRANSFER UNIT

COMPONENTS

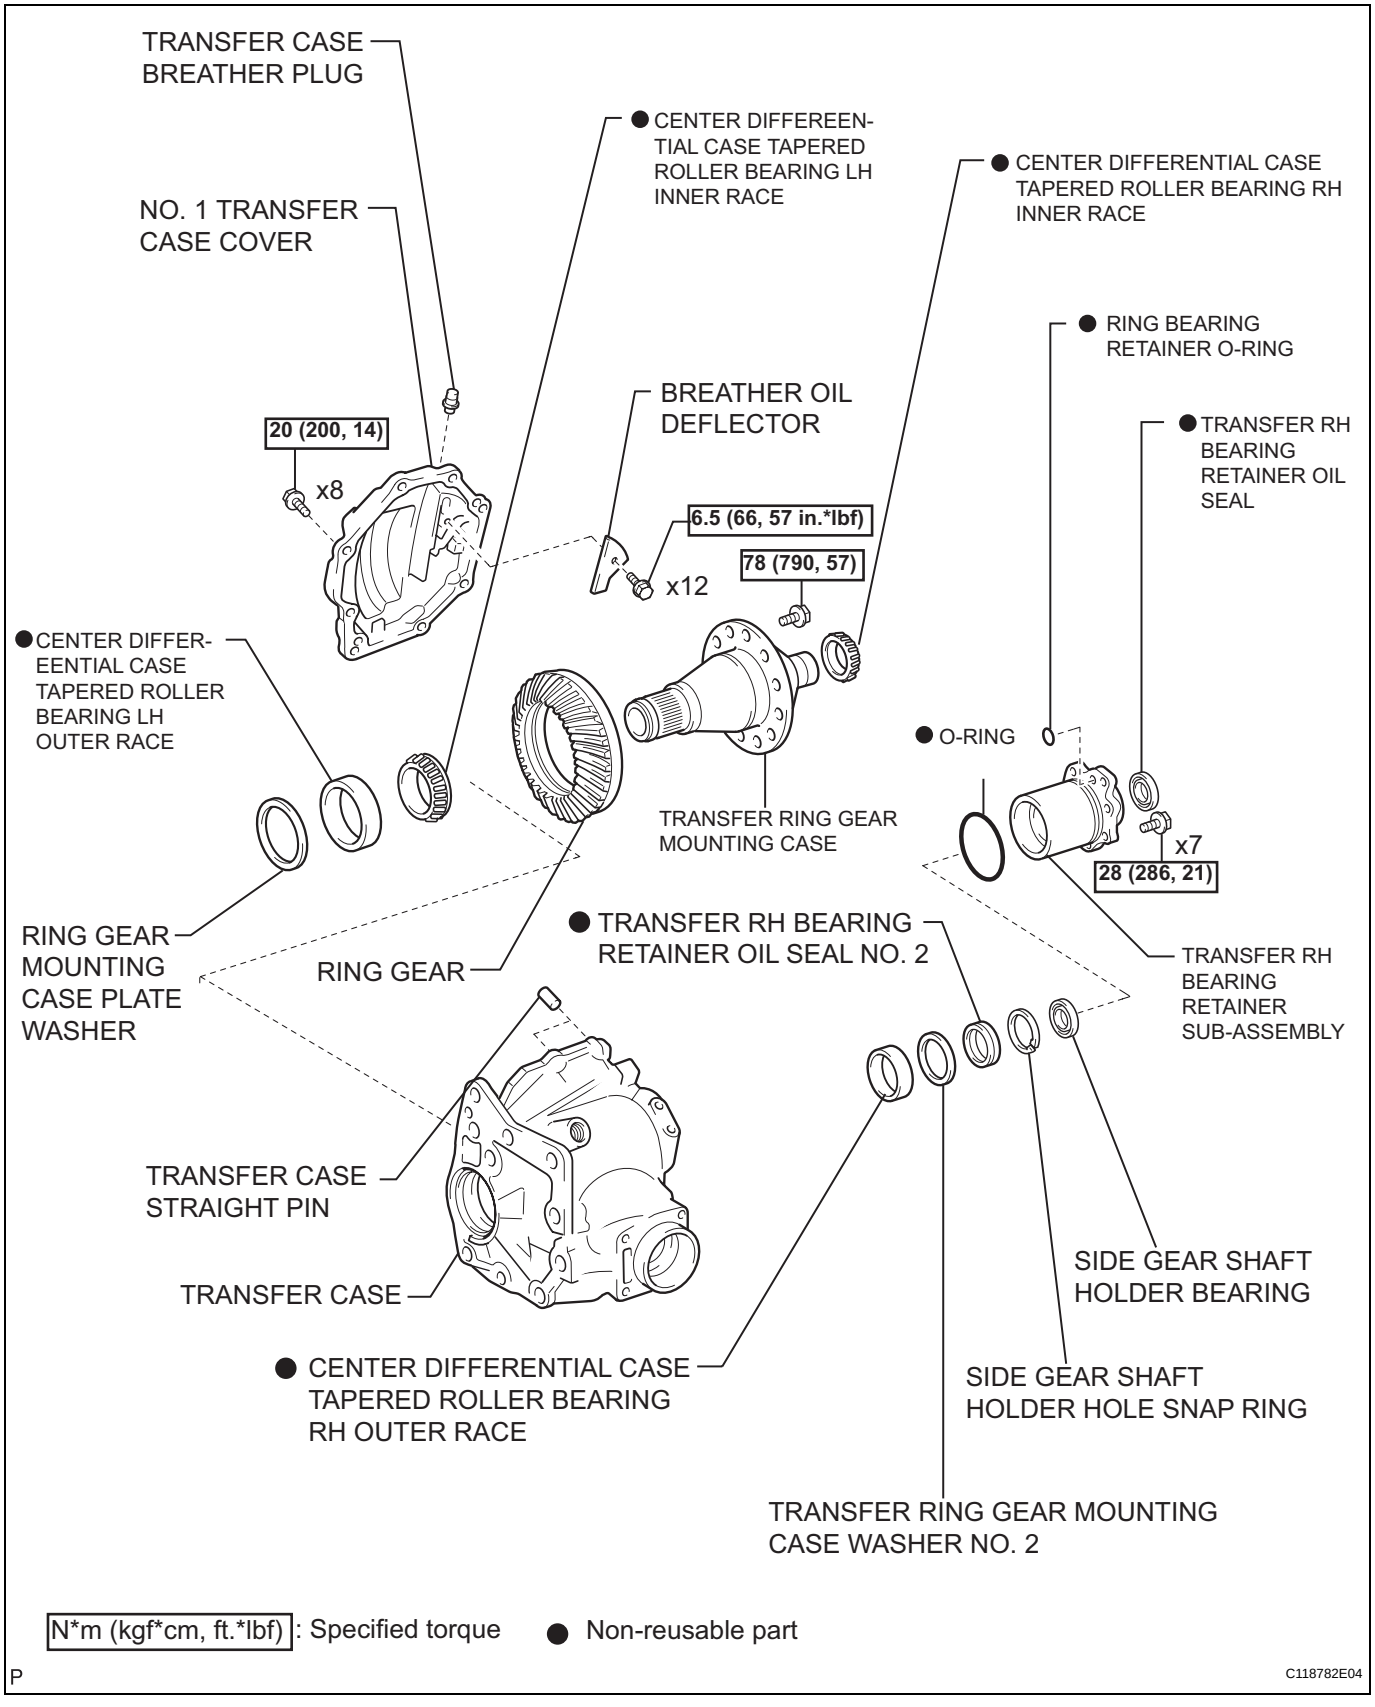

TF

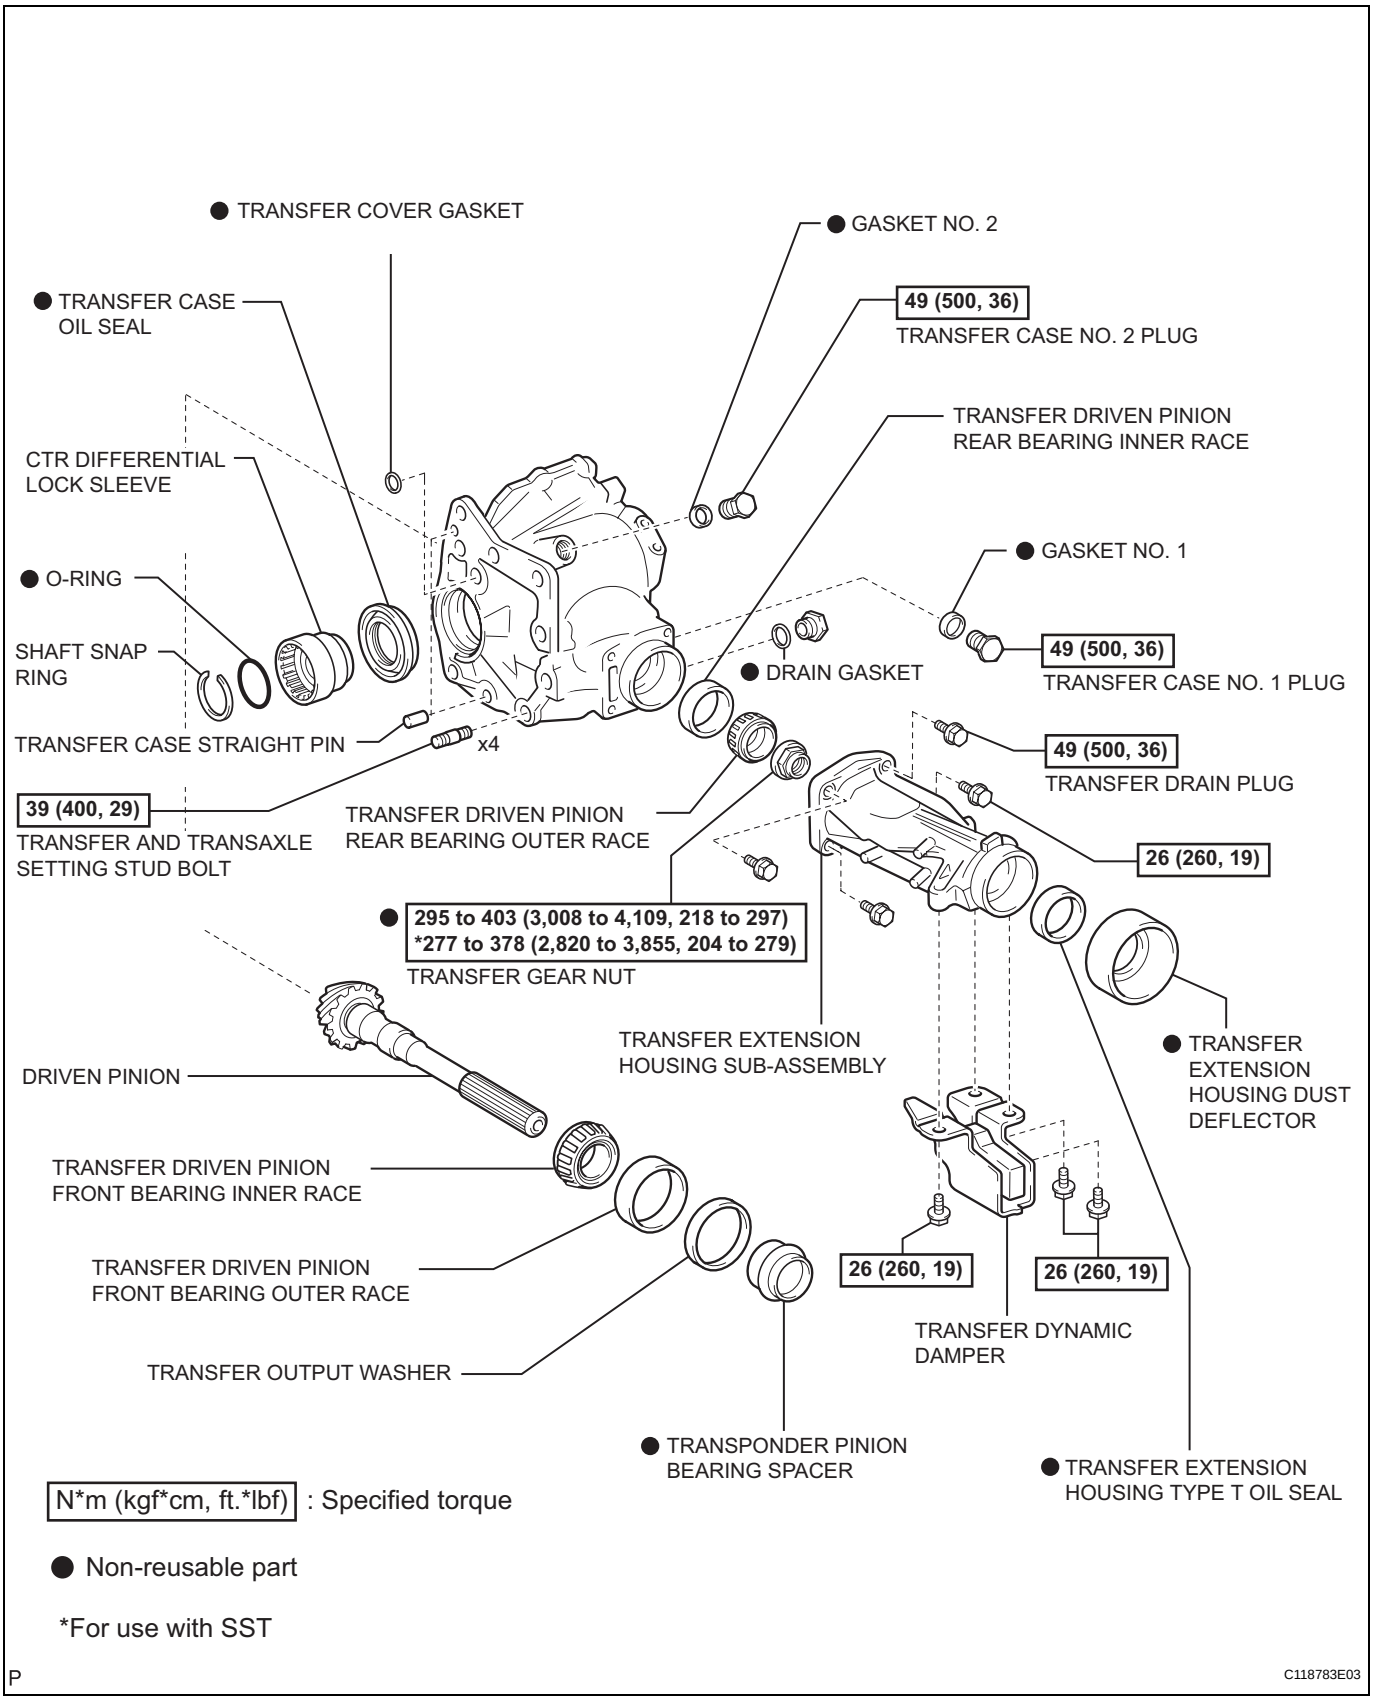
● TRANSFER COVER GASKET
● GASKET NO. 2
● TRANSFER CASE OIL SEAL
49 (500, 36)
TRANSFER CASE NO. 2 PLUG
TRANSFER DRIVEN PINION REAR BEARING INNER RACE
CTR DIFFERENTIAL LOCK SLEEVE
● GASKET NO. 1
● O-RING
SHAFT SNAP RING
49 (500, 36)
TRANSFER CASE NO. 1 PLUG
● DRAIN GASKET
TRANSFER CASE STRAIGHT PIN
x4
49 (500, 36)
TRANSFER DRAIN PLUG
39 (400, 29)
TRANSFER AND TRANSAXLE SETTING STUD BOLT
TRANSFER DRIVEN PINION REAR BEARING OUTER RACE
26 (260, 19)
● 295 to 403 (3,008 to 4,109, 218 to 297)
*277 to 378 (2,820 to 3,855, 204 to 279)
TRANSFER GEAR NUT
TRANSFER EXTENSION HOUSING SUB-ASSEMBLY
● TRANSFER EXTENSION HOUSING DUST DEFLECTOR
DRIVEN PINION
TRANSFER DRIVEN PINION FRONT BEARING INNER RACE
TRANSFER DRIVEN PINION FRONT BEARING OUTER RACE
26 (260, 19)
26 (260, 19)
TRANSFER DYNAMIC DAMPER
TRANSFER OUTPUT WASHER
● TRANSPONDER PINION BEARING SPACER
● TRANSFER EXTENSION HOUSING TYPE T OIL SEAL
N*m (kgf*cm, ft.*lbf) : Specified torque
● Non-reusable part
*For use with SST
P
C118783E03

TF