REASSEMBLY

1. INSTALL PARKING BRAKE SWITCH ASSEMBLY


(a) Install the parking brake switch to the parking brake pedal with the screw.

2. INSTALL PARKING BRAKE CABLE ASSEMBLY NO.1


(a) Connect the parking brake cable No. 1 to the parking brake cable equalizer.

(b) Install the parking brake cable No. 1 with the 6 bolts. (Except 7 Passenger Type)

(c) Install the parking brake cable No. 1 with the 7 bolts. (7 Passenger Type)

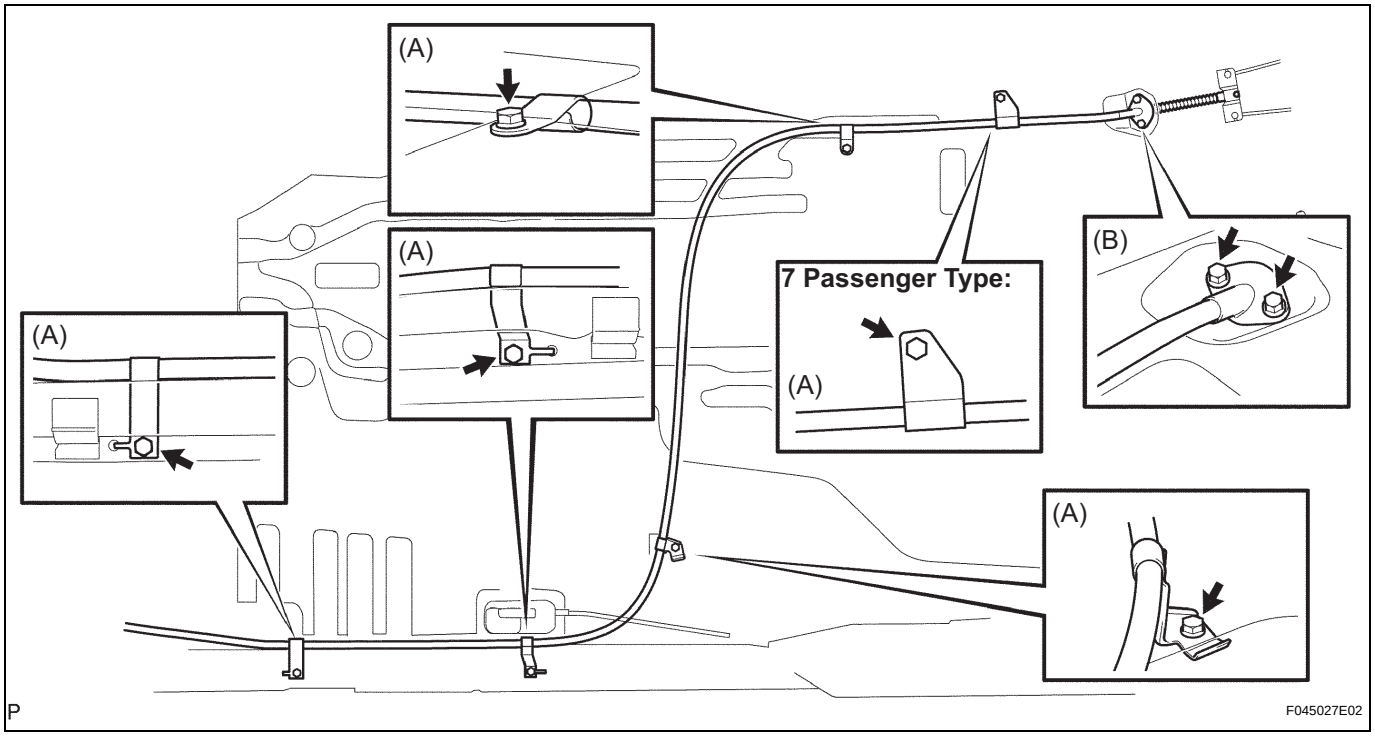



Torque: Bolt (A)
5.6 N*m (57 kgf*cm, 50 in.*lbf)
Bolt (B)
8 N*m (82 kgf*cm, 71 in.*lbf)

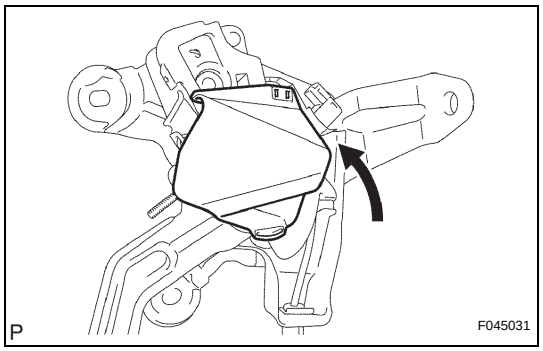

3. INSTALL PARKING BRAKE PEDAL BRACKET PROTECTOR

(a) Fit the convex part on a new parking brake pedal bracket protector into the concave part on the parking brake control pedal and turn the parking brake pedal bracket protector counterclockwise.

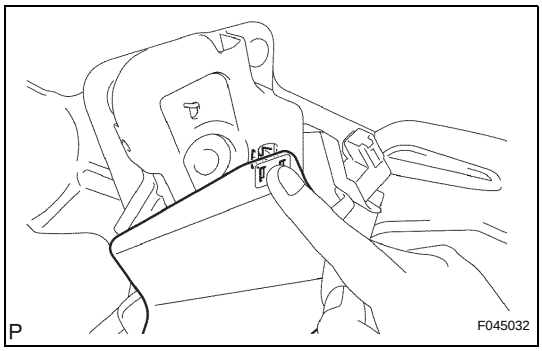

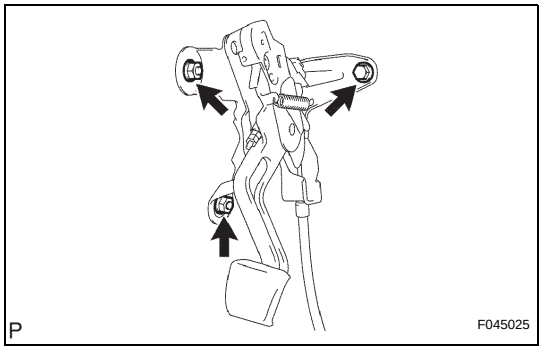

(b) Engaging the 2 claws, install the parking brake pedal bracket to the parking brake control pedal.

INSTALLATION

1. **INSTALL PARKING BRAKE CONTROL PEDAL ASSEMBLY**
   (a) Install the parking brake control pedal assembly with a bolt and the 2 nuts.
   Torque: 39 N*m (398 kgf*cm, 29 ft.*lbf)
   (b) Connect the parking brake switch connector.
   (c) Connect the instrument panel junction block assembly w/ wiring harness connector with the 4 nuts.
   Torque: 7.3 N*m (74 kgf*cm, 65 in.*lbf)
2. **INSTALL REAR FLOOR SEAT LOCK COVER**
3. **INSTALL REAR FLOOR SEAT LOCK COVER**
4. **INSTALL REAR SEAT NO.1 ASSEMBLY**
   HINT:
   - Captain Seat Type (See page SE-75)
   - Center Seat Type (See page SE-82)
5. **INSTALL FRONT SEAT ASSEMBLY LH**
   HINT:
   - Manual Seat Type (See page SE-55)
   - Power Seat Type (See page SE-66)
   - Fold Flat Type (See page SE-45)
6. **INSPECT PARKING BRAKE PEDAL TRAVEL (See page PB-1)**
7. **ADJUST PARKING BRAKE PEDAL TRAVEL (See page PB-1)**