INSTALLATION

1. INSTALL PARKING BRAKE CABLE ASSEMBLY NO.3

(a) Install the parking brake cable LH guide to the parking brake cable assembly No. 3.

(b) Connect the parking brake cable No. 3 to the parking brake cable equalizer.

(c) Install the parking brake cable No. 3 with the 3 bolts and button.

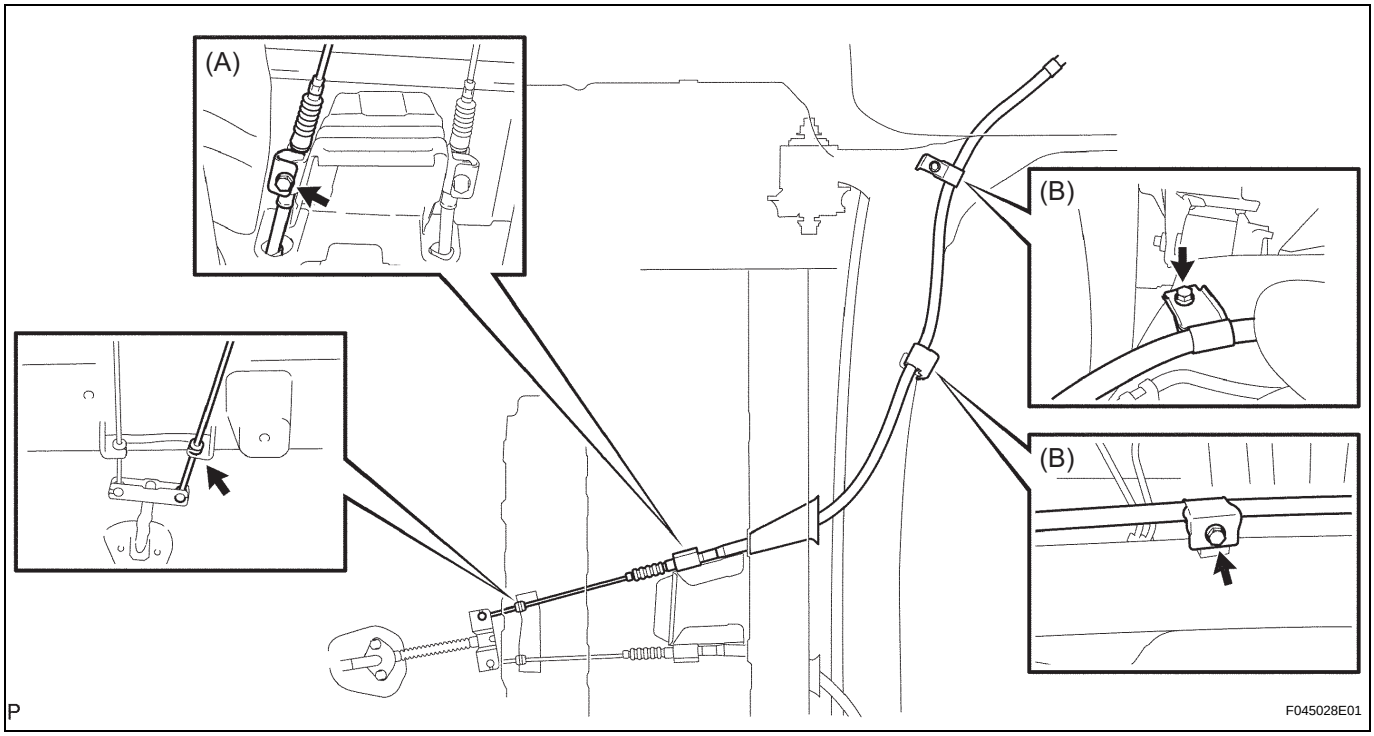

Torque: Bolt (A)
5.4 N*m (55 kgf*cm, 48 in.*lbf)
Bolt (B)
8 N*m (82 kgf*cm, 71 in.*lbf)

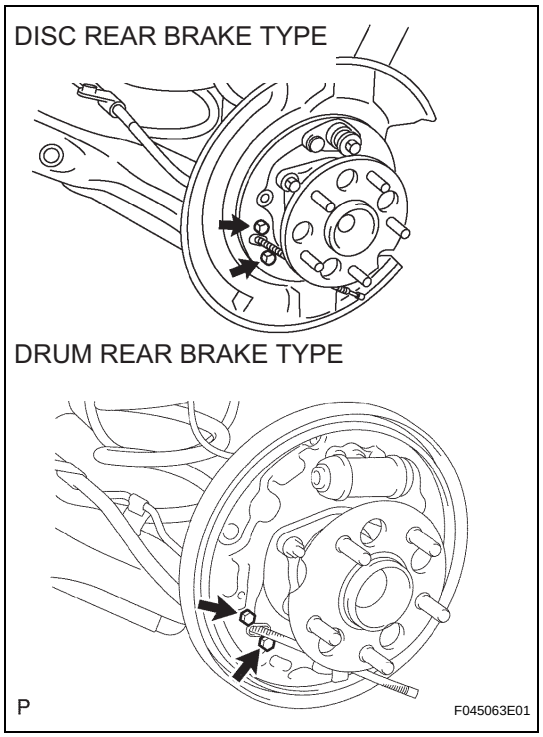

2. **CONNECT PARKING BRAKE CABLE ASSEMBLY NO.3**
   (a) Install the parking brake cable No. 3 with the 2 bolts to the backing plate.
   Torque: 8 N*m (82 kgf*cm, 71 in.*lbf)
3. **APPLY HIGH TEMPERATURE GREASE (for Drum Type) (See page BR-40)**
4. **INSTALL REAR BRAKE SHOE (for Drum Type) (See page BR-40)**
5. **INSTALL FRONT BRAKE SHOE (for Drum Type) (See page BR-40)**
6. **CHECK REAR DRUM BRAKE INSTALLATION (for Drum Type) (See page BR-42)**
7. **INSTALL REAR BRAKE DRUM SUB-ASSEMBLY (for Drum Type)**
8. **ADJUST REAR DRUM BRAKE SHOE CLEARANCE (for Drum Type) (See page BR-42)**
9. **INSPECT PARKING BRAKE PEDAL TRAVEL (for Drum Type) (See page PB-1)**
10. **ADJUST PARKING BRAKE PEDAL TRAVEL (for Drum Type) (See page PB-1)**
11. **APPLY HIGH TEMPERATURE GREASE (for Disc Type) (See page PB-16)**
12. **INSTALL PARKING BRAKE SHOE ASSEMBLY LH NO.2 (for Disc Type) (See page PB-17)**
13. **INSTALL PARKING BRAKE SHOE ADJUSTING SCREW SET (for Disc Type)**
14. **INSTALL PARKING BRAKE SHOE STRUT LH (for Disc Type)**
15. **INSTALL PARKING BRAKE SHOE ASSEMBLY LH NO.1 (for Disc Type) (See page PB-17)**
16. **CHECK PARKING BRAKE INSTALLATION (for Disc Type) (See page PB-18)**
17. **INSTALL REAR DISC (for Disc Type) (See page BR-33)**
18. **ADJUST PARKING BRAKE SHOE CLEARANCE (for Disc Type) (See page PB-18)**
19. **CONNECT REAR DISC BRAKE CALIPER ASSEMBLY LH (for Disc Type) (See page BR-35)**
20. **INSTALL REAR WHEEL**
    Torque: 103 N*m (1,050 kgf*cm, 76 ft.*lbf)
21. **INSTALL PARKING BRAKE PEDAL TRAVEL (See page PB-1)**
22. **ADJUST PARKING BRAKE PEDAL TRAVEL (See page PB-1)**