PARKING BRAKE CABLE

COMPONENTS

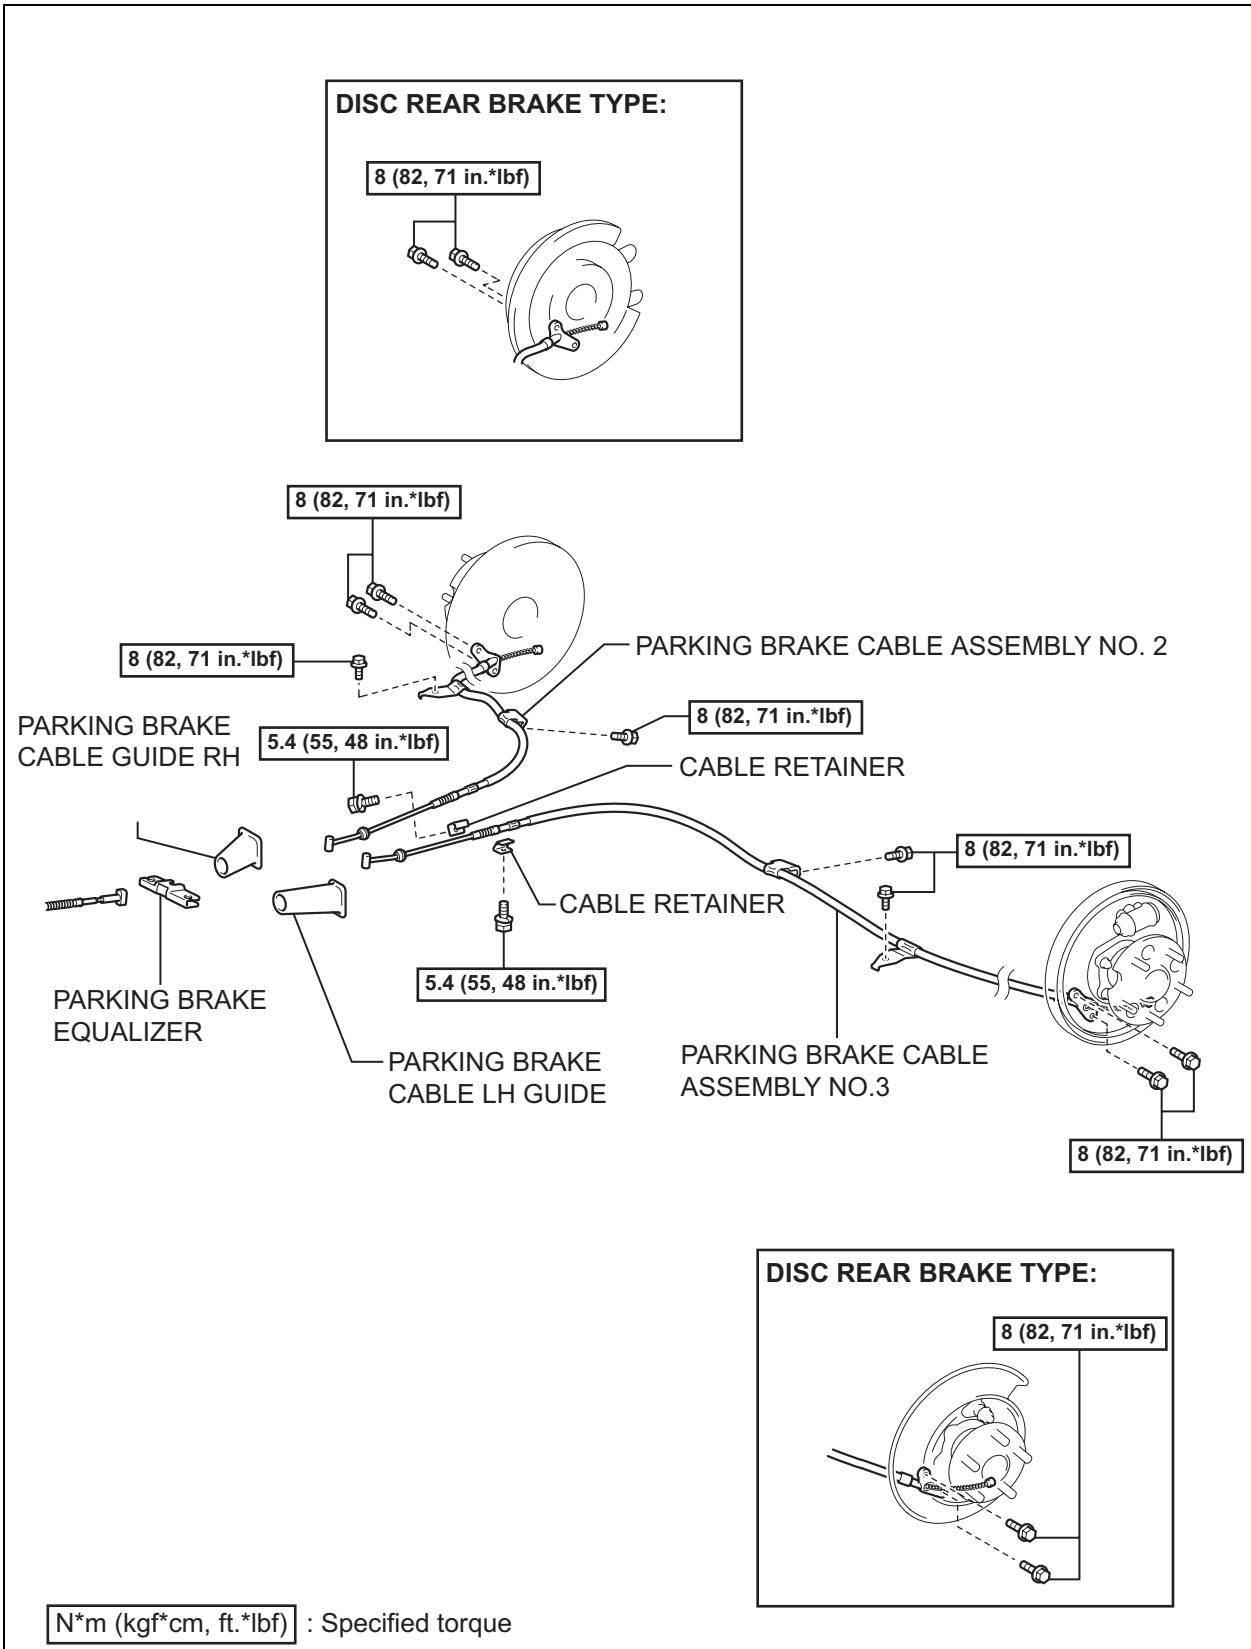

REMOVAL

HINT:
For the parking brake cable assembly No. 2, perform the same procedure to the parking brake cable assembly No. 3.

1. **REMOVE REAR WHEEL**
2. **REMOVE REAR BRAKE DRUM SUB-ASSEMBLY (for Drum Type) (See page BR-37)**
3. **REMOVE FRONT BRAKE SHOE (for Drum Type) (See page BR-37)**
4. **REMOVE REAR BRAKE SHOE (for Drum Type) (See page BR-38)**
5. **SEPARATE REAR DISC BRAKE CALIPER ASSEMBLY LH (for Disc Type) (See page PB-15)**
6. **REMOVE REAR DISC (for Disc Type) (See page BR-32)**
7. **REMOVE PARKING BRAKE SHOE ASSEMBLY LH NO.1 (for Disc Type) (See page PB-15)**
8. **REMOVE PARKING BRAKE SHOE ADJUSTING SCREW SET (for Disc Type)**
9. **REMOVE PARKING BRAKE SHOE STRUT LH (for Disc Type)**
10. **REMOVE PARKING BRAKE SHOE ASSEMBLY LH NO.2 (for Disc Type) (See page PB-15)**
11. **SEPARATE PARKING BRAKE CABLE ASSEMBLY NO.3**
    (a) Remove the 2 bolts, and disconnect the parking brake cable No. 3 from the backing plate.
12. **REMOVE PARKING BRAKE CABLE ASSEMBLY NO.3**
    (a) Remove the 3 bolts and the button to disconnect the parking brake cable No. 3 from the body.
    (b) Disconnect the parking brake cable No. 3 from the parking brake equalizer, and remove the parking brake cable No. 3.
    (c) Remove the parking brake cable LH guide from the parking brake cable assembly No. 3.

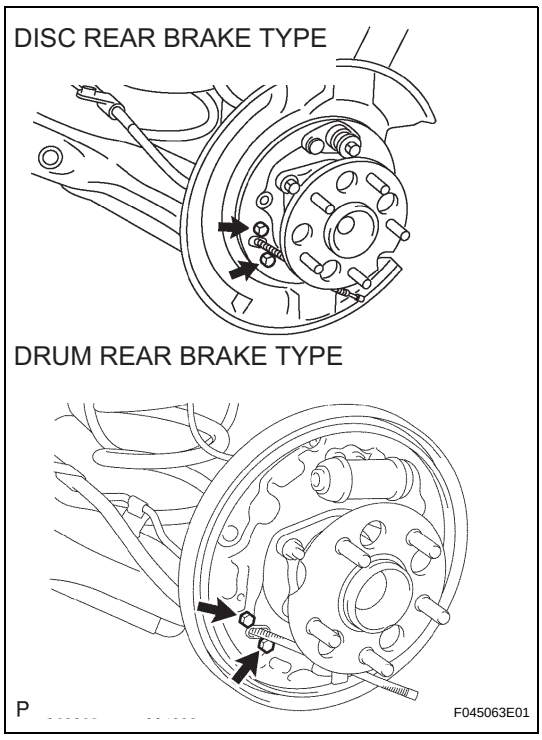

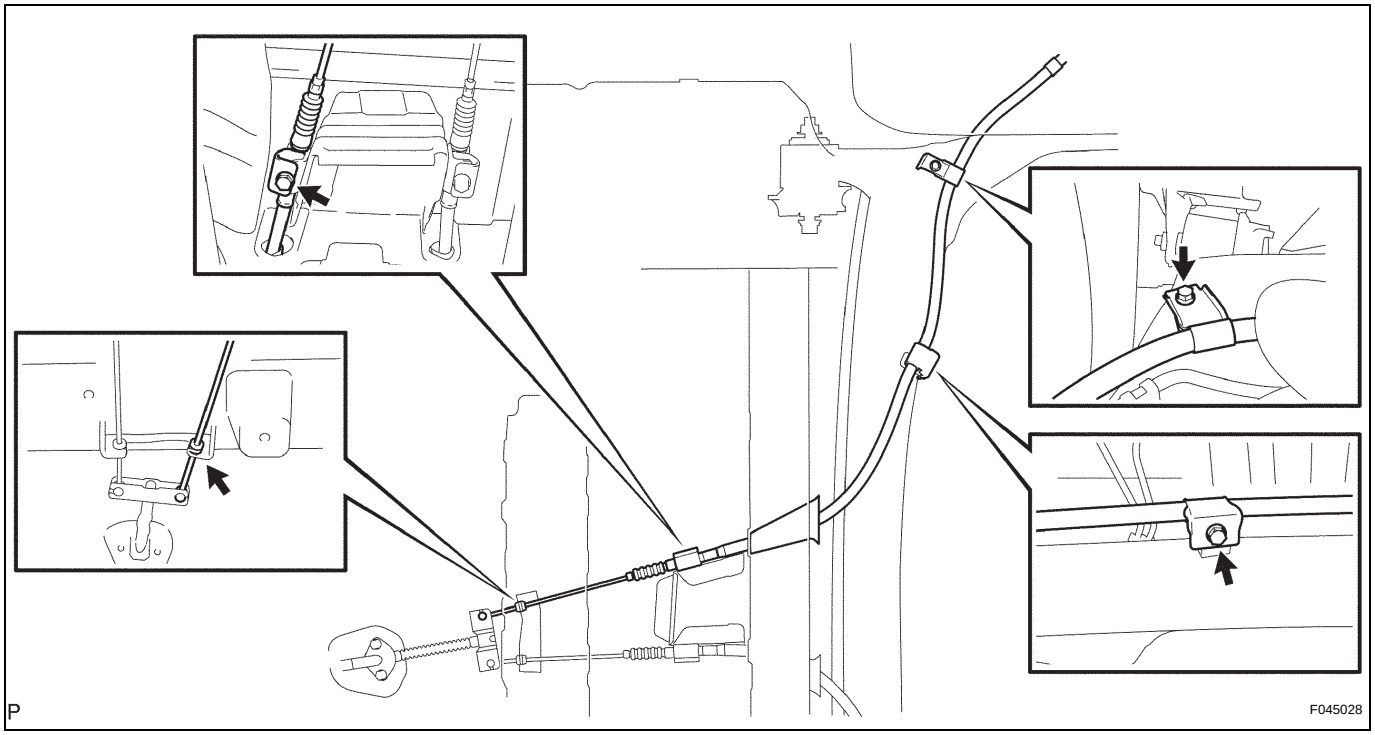
P
F045028