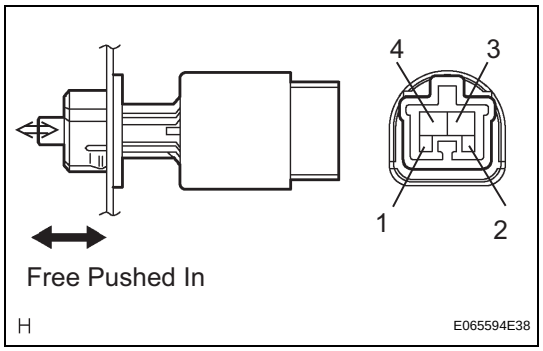


STOP LIGHT SWITCH

ON-VEHICLE INSPECTION

1. STOP LIGHT SWITCH ASSEMBLY

(a) Check the resistance between the terminals at each switch position as shown ion the chart.

Resistance

Switch operation	Tester connection	Specified condition
Switch pin free	1 - 2	10 kΩ or higher
Switch pin free	3 - 4	Below 1 Ω
Switch pin pushed in	1 - 2	Below 1 Ω
Switch pin pushed in	3 - 4	10 kΩ or higher