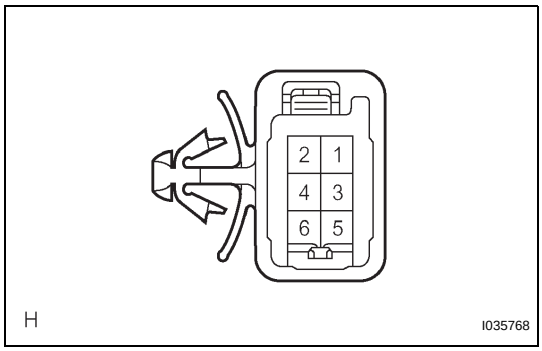


BACK DOOR COURTESY SWITCH

INSPECTION

1. BACK DOOR LOCK ASSEMBLY (WITH OUT POWER BACK DOOR)

(a) Inspect back door courtesy light switch operation.

(1) Check that there is resistance between the terminal 5 and the terminal 6 when the back door is open and closed.


Resistance:

Back door is open:

10 kΩ or higher

Back door is closed:

Below 1 Ω

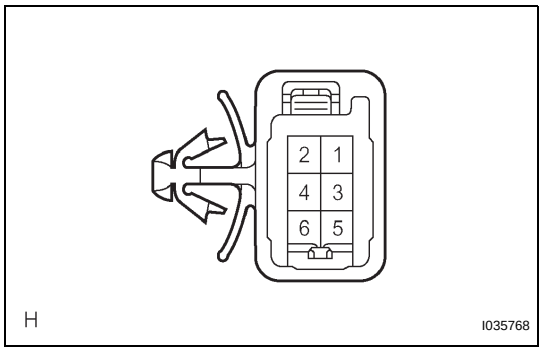

2. BACK DOOR LOCK ASSEMBLY (WITH POWER BACK DOOR)

(a) Inspect back door courtesy light switch operation.

(1) Check that there is resistance between the terminal 3 and the terminal 4 when the back door is open and closed.

Resistance:

Back door is open:

10 kΩ or higher

Back door is closed:

Below 1 Ω