DTC	44-10	DVD Player Mechanical Error

DTC	44-11	DVD Insertion and Ejection Error

DTC	44-12	DVD Reading Abnormal

DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
44-10	A mechanical error in the DVD player is detected while the DVD is not being inserted or ejected.	Television display assembly
44-11	DVD insertion or ejection is failed.	
44-12	DVD read problem occurs.	

INSPECTION PROCEDURE

HINT:
After the inspection is completed, clear the DTCs.

1	REPLACE TELEVISION DISPLAY ASSEMBLY

NEXT

END

DTC	44-41	Wrong Disc

DTC	44-42	Disc cannot be Read

DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
44-41	An unsuitable disc is inserted.	• DVD • Television display assembly
44-42	The disc cannot be read.	

INSPECTION PROCEDURE

HINT:
After the inspection is completed, clear the DTCs.

1	CHECK DISC

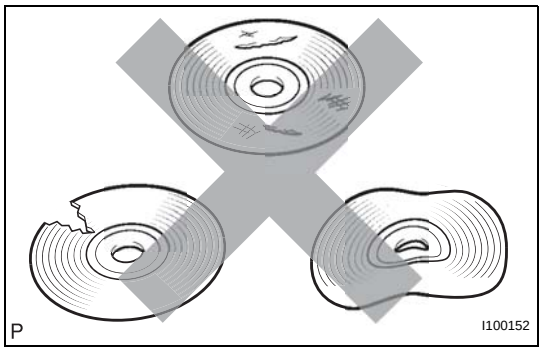

(a) Check that the disc is not deformed or cracked.
OK:
No deformation or cracks on the disc.

NG → **CHANGE DISC**

OK

2	DISC CLEANING

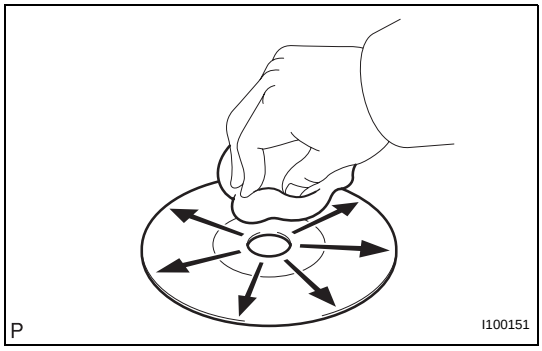

(a) Disc cleaning
(1) If dirt is on the disc surface, wipe it clean with a soft cloth from the inside to the outside in a radial direction.
NOTICE:
Do not use a conventional record cleaner or anti-static preservative.

NEXT

3	CLEAR DTC

(a) Clear the DTCs (See page AV-18).

NEXT

4	RECHECK DTC

(a) Recheck for DTCs and check if the same trouble occurs again.

OK:

Malfunction disappears.

OK → **END**

NG

5	REPLACE DISC WITH ANOTHER AND RECHECK

(a) Replace the disc with another and recheck.
   (1) Replace the disc with another normal one.
   (2) Clear the DTCs (See page AV-18).
   (3) Recheck for DTCs and check if the same trouble occurs again.

OK:

Malfunction disappears.

NG → **REPLACE TELEVISION DISPLAY ASSEMBLY**

OK

END