DTC	44-45	Eject Error

DTC	44-51	Elevator Error

DTC	44-52	Clamp Error

DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
44-45	Disc cannot be ejected.	Television display assembly
44-51	Mechanical error occurs during elevator operation.	
44-52	Error occurs in DVD player clamp.	

INSPECTION PROCEDURE

HINT:
After the inspection is completed, clear the DTCs.

1	CHECK TELEVISION DISPLAY ASSEMBLY

(a) Check if a disc can be changed, inserted or ejected normally.
OK:
Malfunction disappears.

NG → **REPLACE TELEVISION DISPLAY ASSEMBLY**

OK

END

DTC	44-46	Scratched / Reversed Disc

DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
44-46	Scratches or dirt is found on DVD surface or DVD is set upside down.	• DVD • Television display assembly

INSPECTION PROCEDURE

HINT:
After the inspection is completed, clear the DTCs.


1 CHECK THAT DISC IS INSERTED PROPERLY

(a) Check whether or not the disc is inserted upside down.
OK:
Disc is properly inserted.

NG → **INSPECT DISC**

OK

2 CHECK DISC

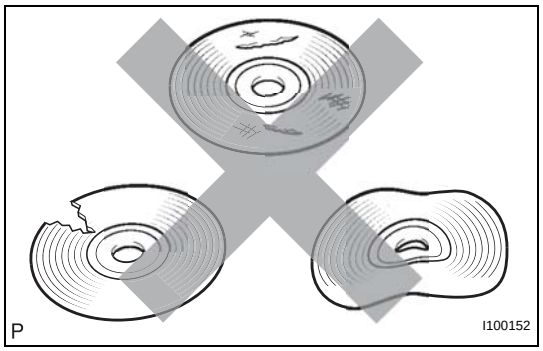


(a) Check that the disc is not deformed or cracked.
OK:
No deformation or cracks on the disc.

NG → **CHANGE DISC**

OK

3 DISC CLEANING

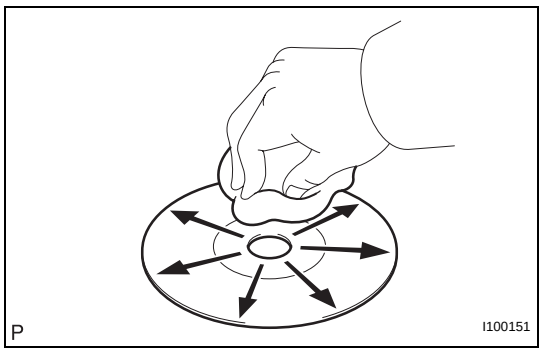

(a) Disc cleaning
(1) If dirt is on the disc surface, wipe it clean with a soft cloth from the inside to the outside in a radial direction.
NOTICE:
Do not use a conventional record cleaner or anti-static preservative.

NEXT

AV

4	CLEAR DTC

(a) Clear the DTCs (See page AV-18).

NEXT

5	RECHECK DTC

(a) Recheck for DTCs and check if the same trouble occurs again.

OK:

Malfunction disappears.

OK → END

NG

6	REPLACE DISC WITH ANOTHER AND RECHECK

(a) Replace the disc with another and recheck.
   (1) Replace the disc with another normal one.
   (2) Clear the DTCs (See page AV-18).
   (3) Recheck for DTCs and check if the same trouble occurs again.

OK:

Malfunction disappears.

NG → REPLACE TELEVISION DISPLAY ASSEMBLY

OK

END