REASSEMBLY

1. INSTALL BACK DOOR STOPPER LOWER


(a) Install the 2 stoppers with the 4 bolts.
Torque: 7.0 N*m (71 kgf*cm, 62 in.*lbf)

2. INSTALL BACK DOOR BASE STOPPER BRACKET

(a) Install the 2 stopper brackets with the 4 bolts.
Torque: 7.0 N*m (71 kgf*cm, 62 in.*lbf)

3. INSTALL BACK DOOR LOCK ASSEMBLY

(a) Install the lock with the 3 bolts.
Torque: 12.5 N*m (112 kgf*cm, 9 ft.*lbf)

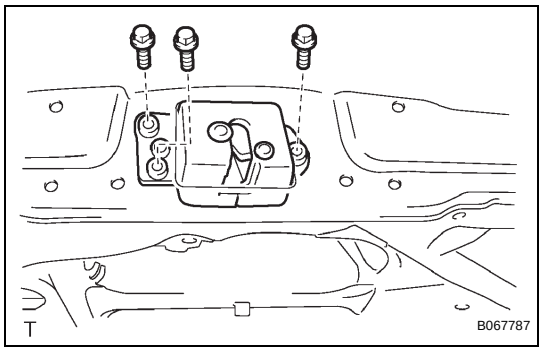

4. INSTALL BACK DOOR PULL STRAP

(a) Install the strap with the bolt.
Torque: 5.0 N*m (51 kgf*cm, 42 in.*lbf)

(b) Install the strap cover.

