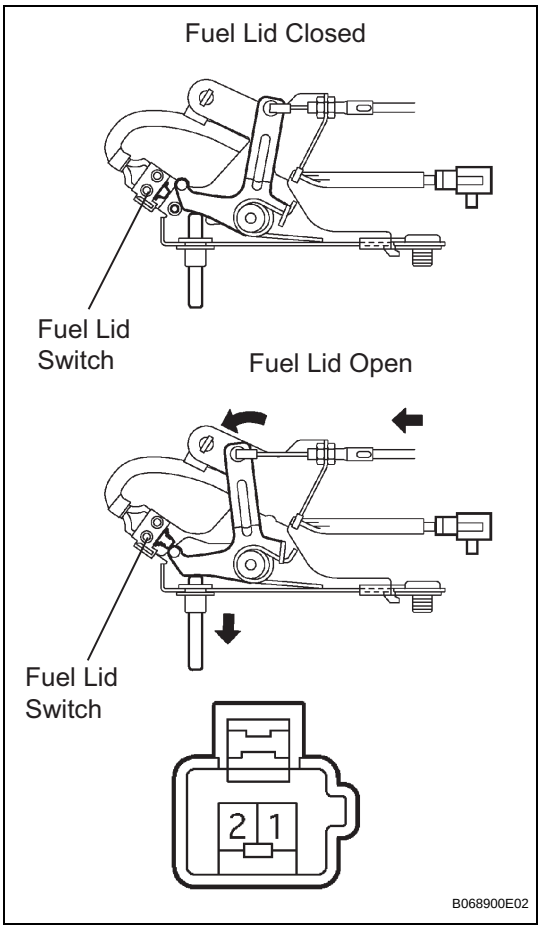

SLIDE DOOR HALF OPEN STOPPER CONTROL ASSEMBLY

INSPECTION

1. INSPECT SLIDE DOOR HALF OPEN STOPPER CONTROL ASSEMBLY

(a) Inspect the resistance of the switch.

Resistance

Terminal No.	Condition	Specified Condition
1 - 2	ON (Fuel lid closed)	Below 1 Ω
	OFF (Fuel lid open)	10 kΩ or higher

If the result is not as specified, replace the control sub-assembly.