INSTALLATION


1. REMOVE BACK DOOR STAY SUB-ASSEMBLY LH

(a) Install the stay with the bolts to the door panel.
Torque: 19.5 N*m (200 kgf*cm, 14 ft.*lbf) for door side

(b) Install the stay with the 2 bolts to the body panel.
Torque: 17.5 N*m (180 kgf*cm, 13 ft.*lbf) for body side

DISPOSAL

HINT:
On the RH side, use the same procedures as on the LH side.

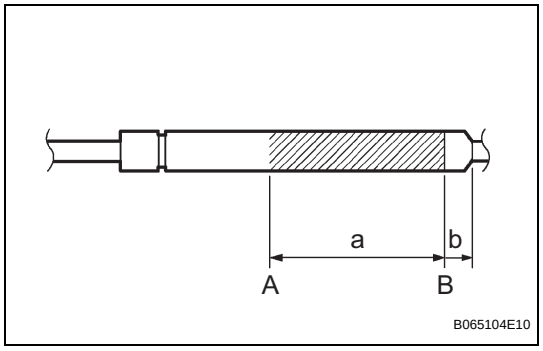

1. DISPOSE OF BACK DOOR STAY SUB-ASSEMBLY LH

(a) Horizontally fix the stay in a vise with the piston-rod pulled out.

(b) Wearing safety glasses, gradually cut a part between A and B as shown in the illustration using a metal saw to gradually release the gas.

Dimensions

a	b
80 mm (3.15 in.)	20 mm (0.80 in.)

NOTICE:
Although the gas inside the damper stay is colorless, odorless and harmless, there is a possibility that metal debris from cutting could enter the assembly. Therefore, cover it with cloth or something similar.