

POWER SLIDE DOOR

COMPONENTS

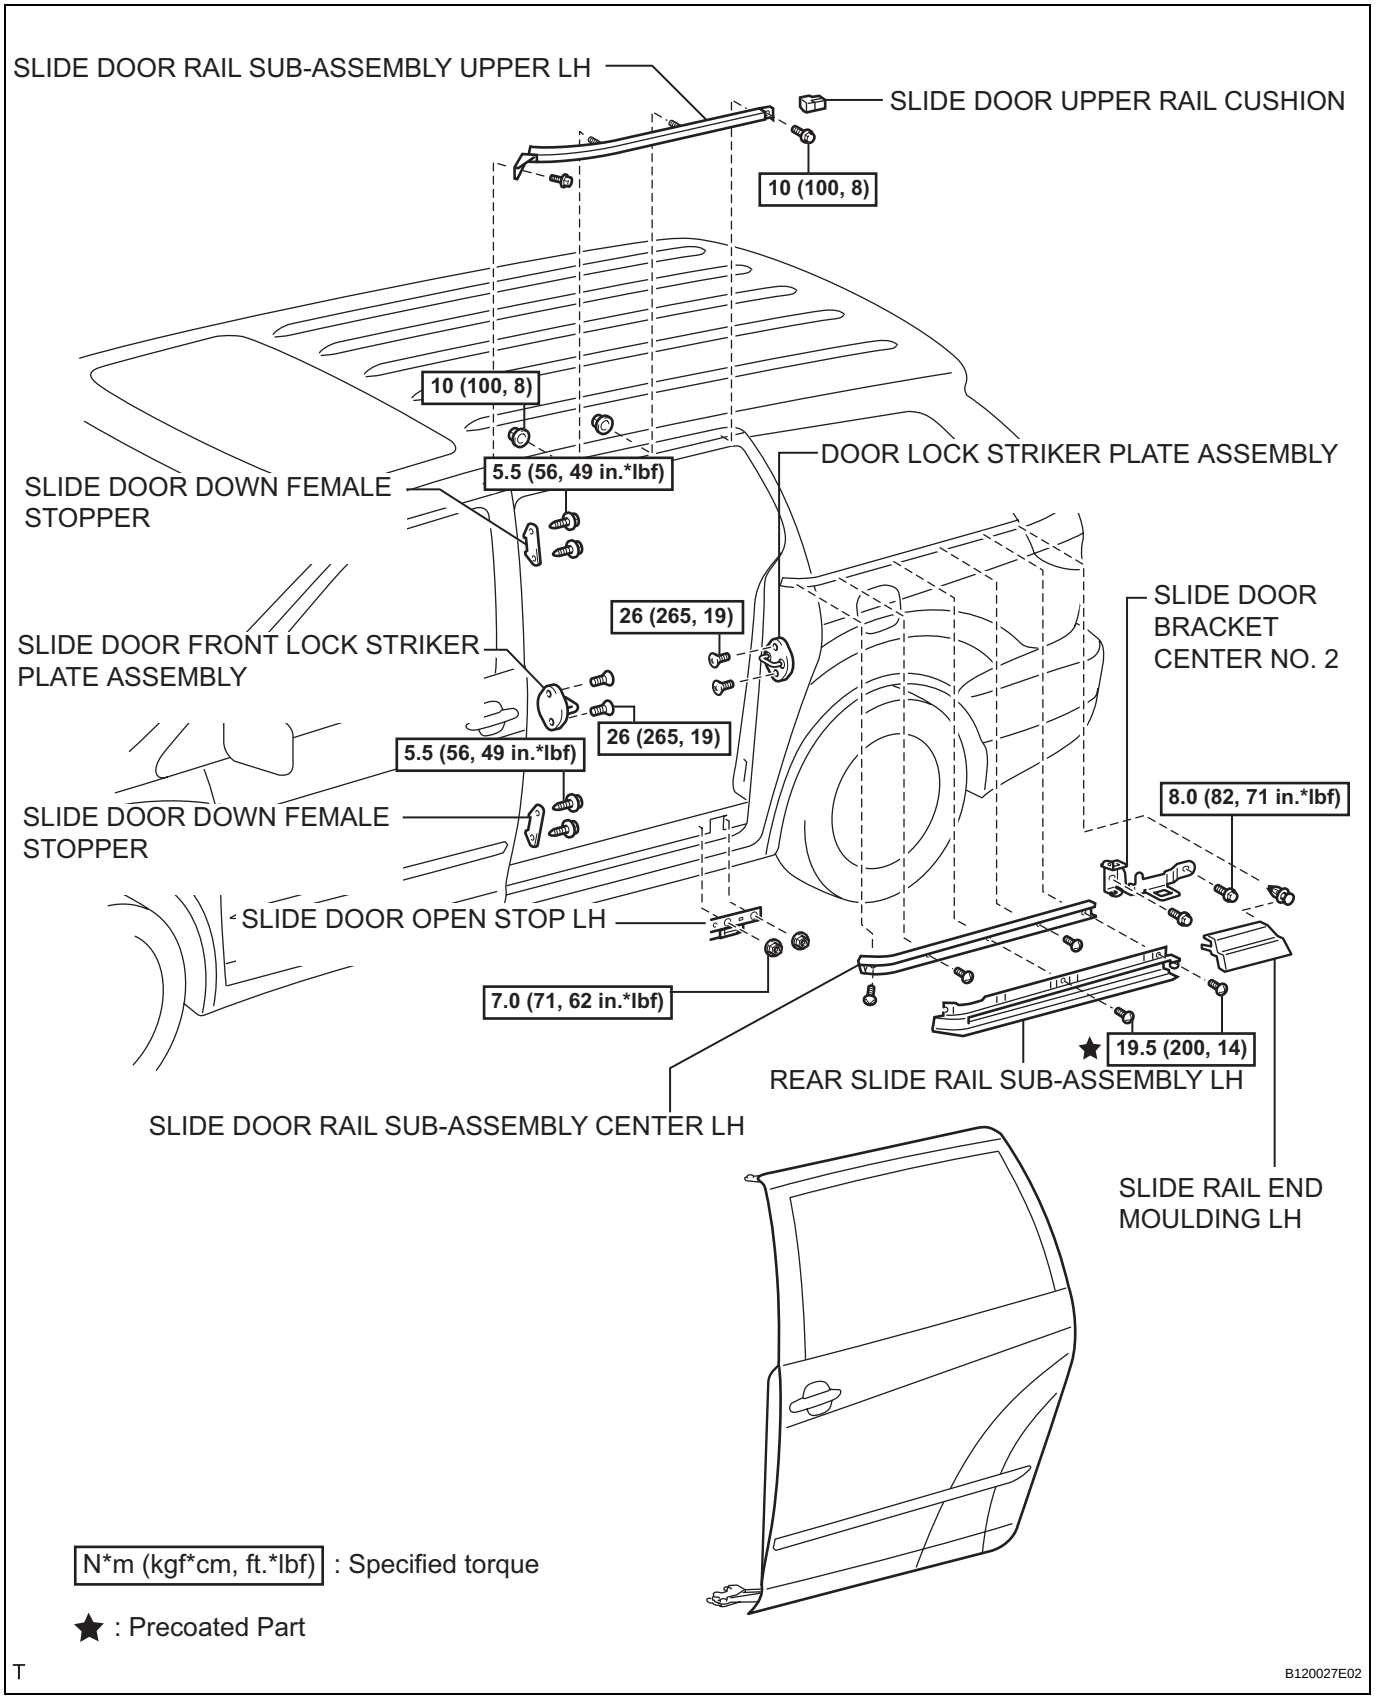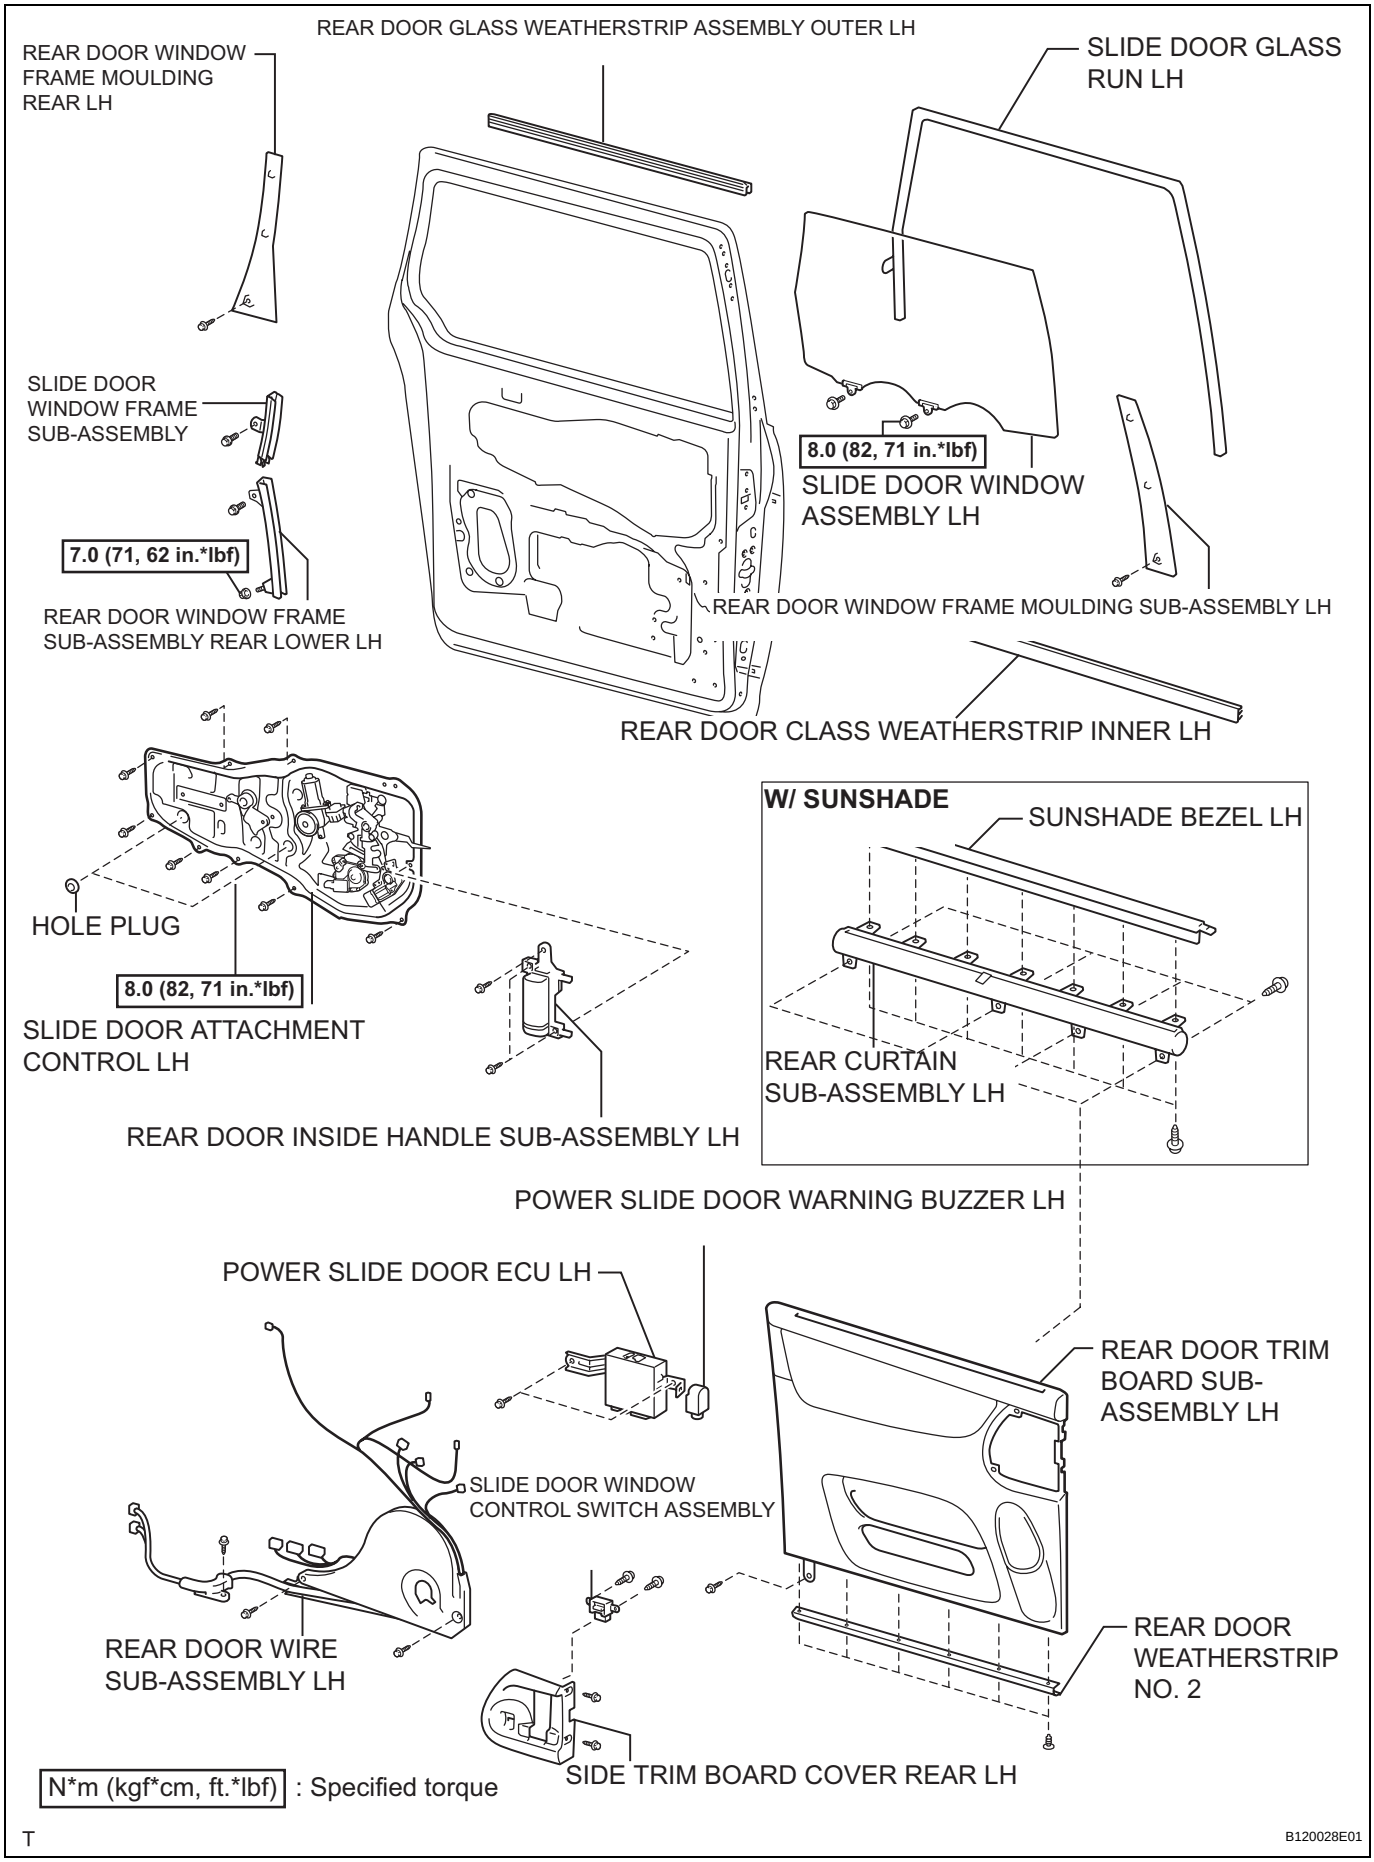


ED


REAR DOOR GLASS WEATHERSTRIP ASSEMBLY OUTER LH
REAR DOOR WINDOW FRAME MOULDING REAR LH
SLIDE DOOR GLASS RUN LH
SLIDE DOOR WINDOW FRAME SUB-ASSEMBLY
8.0 (82, 71 in.*lbf)
SLIDE DOOR WINDOW ASSEMBLY LH
7.0 (71, 62 in.*lbf)
REAR DOOR WINDOW FRAME SUB-ASSEMBLY REAR LOWER LH
REAR DOOR WINDOW FRAME MOULDING SUB-ASSEMBLY LH
REAR DOOR CLASS WEATHERSTRIP INNER LH
W/ SUNSHADE
SUNSHADE BEZEL LH
HOLE PLUG
8.0 (82, 71 in.*lbf)
SLIDE DOOR ATTACHMENT CONTROL LH
REAR CURTAIN SUB-ASSEMBLY LH
REAR DOOR INSIDE HANDLE SUB-ASSEMBLY LH
POWER SLIDE DOOR WARNING BUZZER LH
POWER SLIDE DOOR ECU LH
REAR DOOR TRIM BOARD SUB-ASSEMBLY LH
SLIDE DOOR WINDOW CONTROL SWITCH ASSEMBLY
REAR DOOR WIRE SUB-ASSEMBLY LH
REAR DOOR WEATHERSTRIP NO. 2
SIDE TRIM BOARD COVER REAR LH
N*m (kgf*cm, ft.*lbf) : Specified torque
T
B120028E01

ED

SLIDE DOOR ATTACHMENT CONTROL LH

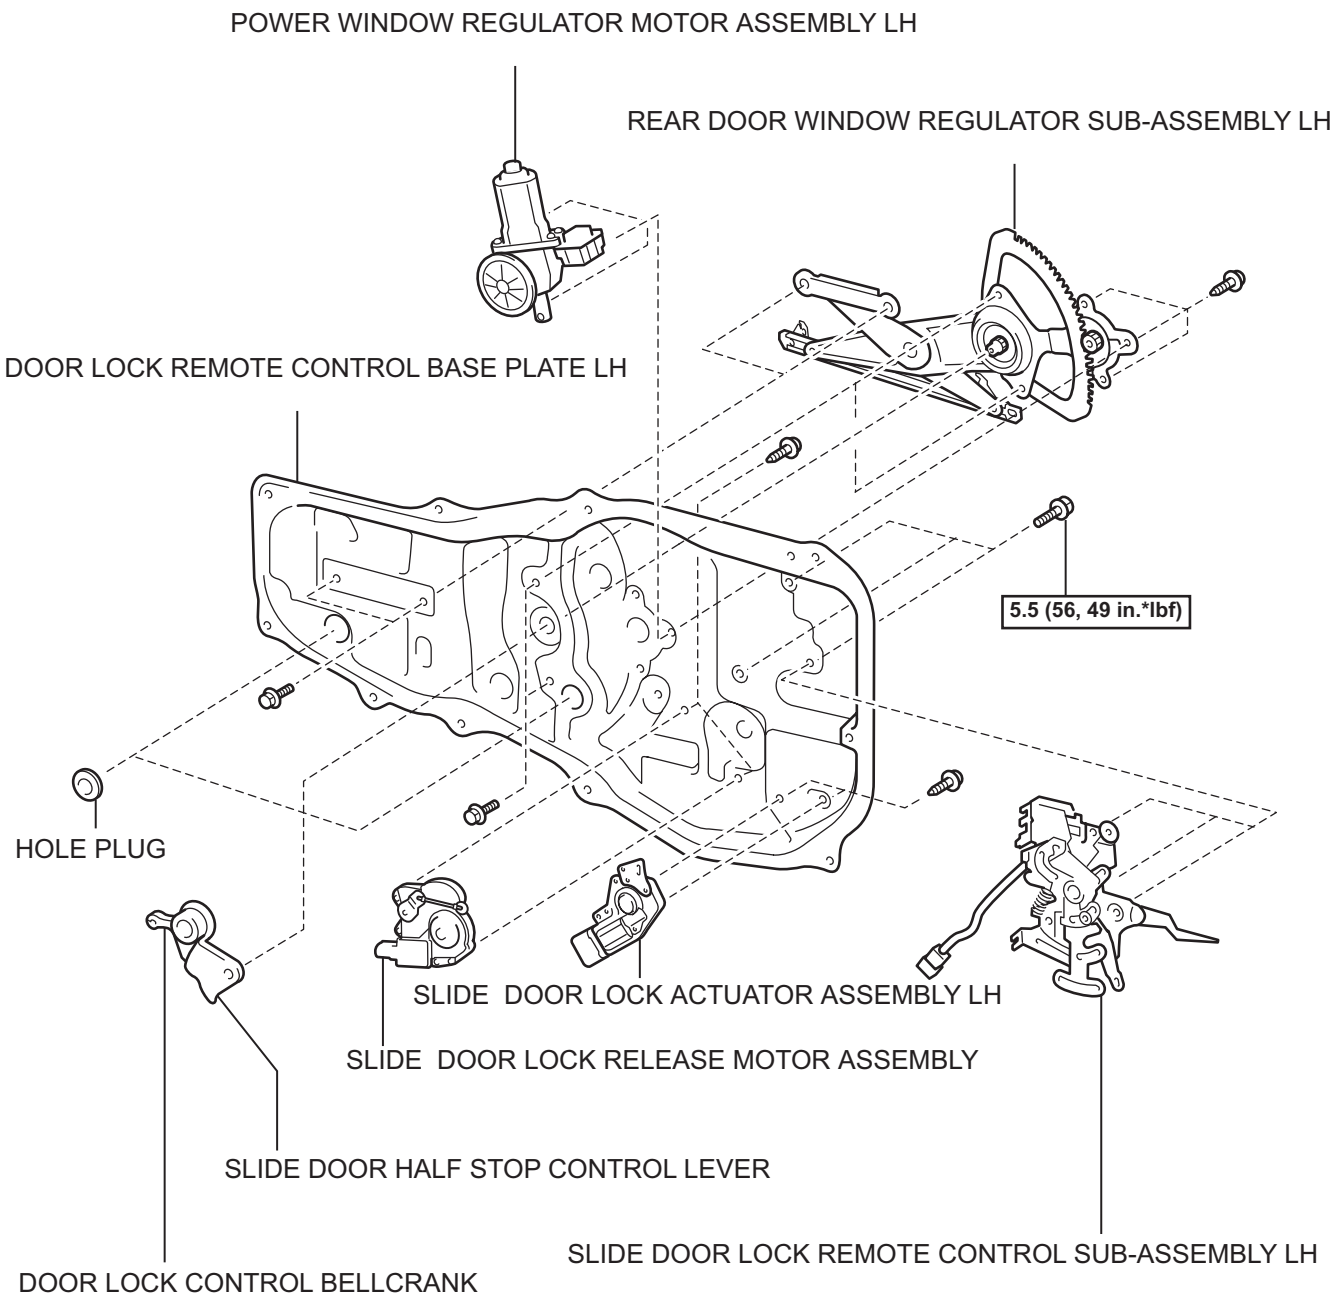


ED

N*m (kgf*cm, ft.*lbf) : Specified torque

T

B120030E01

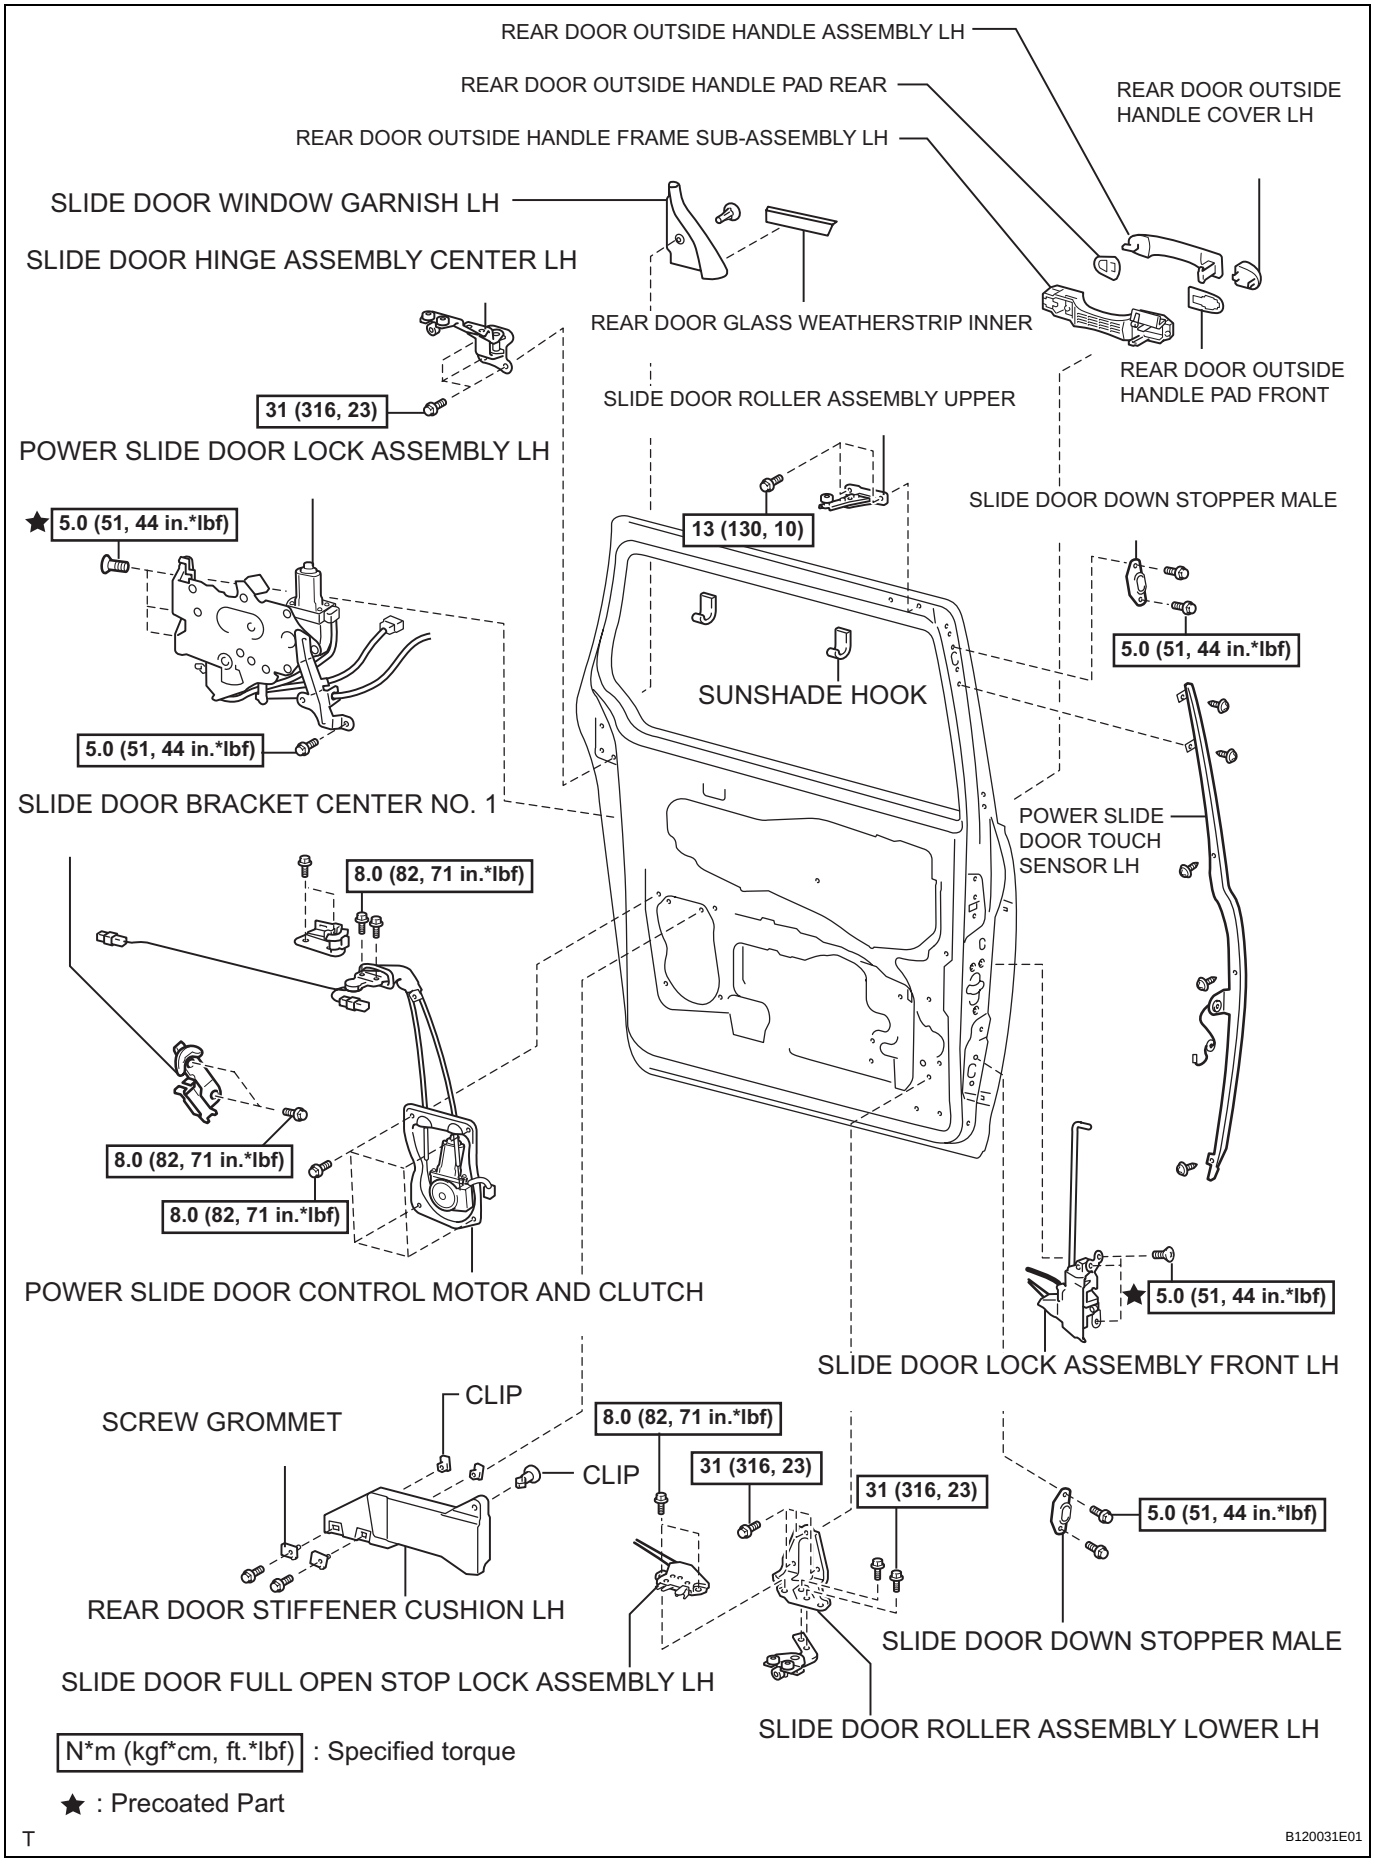
REAR DOOR OUTSIDE HANDLE ASSEMBLY LH
REAR DOOR OUTSIDE HANDLE PAD REAR
REAR DOOR OUTSIDE HANDLE FRAME SUB-ASSEMBLY LH
REAR DOOR OUTSIDE HANDLE COVER LH
SLIDE DOOR WINDOW GARNISH LH
SLIDE DOOR HINGE ASSEMBLY CENTER LH
REAR DOOR GLASS WEATHERSTRIP INNER
REAR DOOR OUTSIDE HANDLE PAD FRONT
31 (316, 23)
SLIDE DOOR ROLLER ASSEMBLY UPPER
POWER SLIDE DOOR LOCK ASSEMBLY LH
SLIDE DOOR DOWN STOPPER MALE
★5.0 (51, 44 in.*lbf)
13 (130, 10)
5.0 (51, 44 in.*lbf)
SUNSHADE HOOK
5.0 (51, 44 in.*lbf)
SLIDE DOOR BRACKET CENTER NO. 1
POWER SLIDE DOOR TOUCH SENSOR LH
8.0 (82, 71 in.*lbf)
8.0 (82, 71 in.*lbf)
8.0 (82, 71 in.*lbf)
POWER SLIDE DOOR CONTROL MOTOR AND CLUTCH
★5.0 (51, 44 in.*lbf)
SLIDE DOOR LOCK ASSEMBLY FRONT LH
CLIP
SCREW GROMMET
CLIP
8.0 (82, 71 in.*lbf)
31 (316, 23)
31 (316, 23)
5.0 (51, 44 in.*lbf)
REAR DOOR STIFFENER CUSHION LH
SLIDE DOOR DOWN STOPPER MALE
SLIDE DOOR FULL OPEN STOP LOCK ASSEMBLY LH
SLIDE DOOR ROLLER ASSEMBLY LOWER LH
N*m (kgf*cm, ft.*lbf) : Specified torque
★ : Precoated Part
T
B120031E01

ED