
REMOVAL


1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL


2. REMOVE FRONT BUMPER ASSEMBLY

(a) Remove the 4 screws and separate the fender liner from the front bumper assembly.

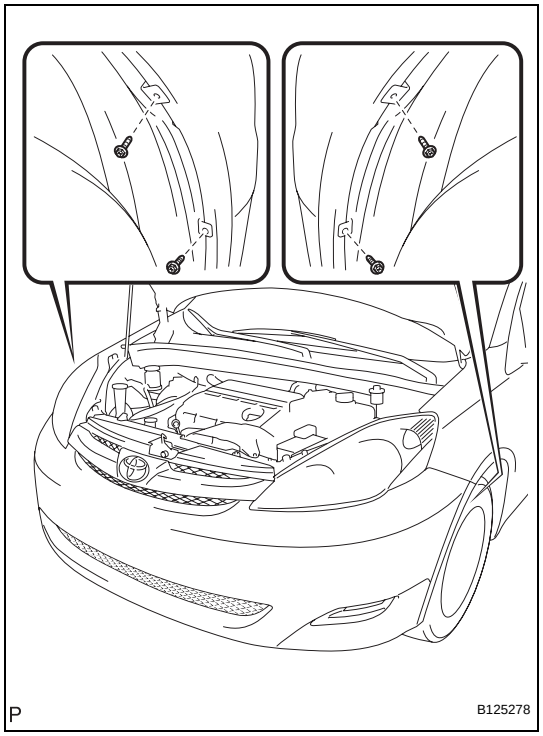


(b) Remove the 8 screws and separate the engine under cover from the front bumper assembly.

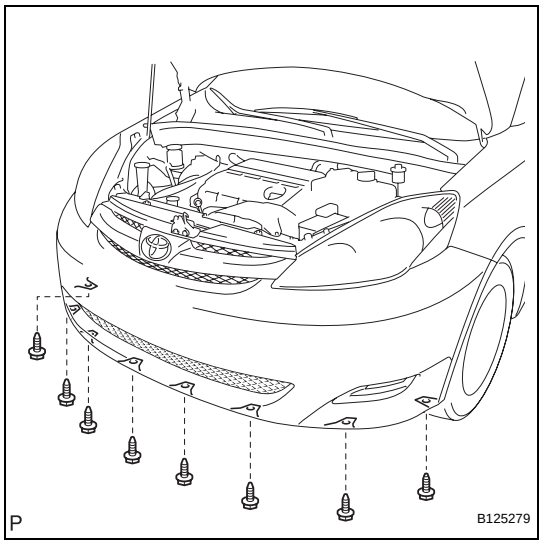

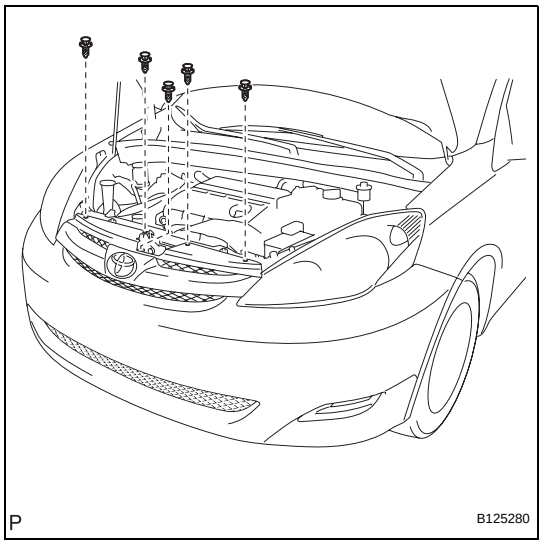

(c) Remove the 5 clips.

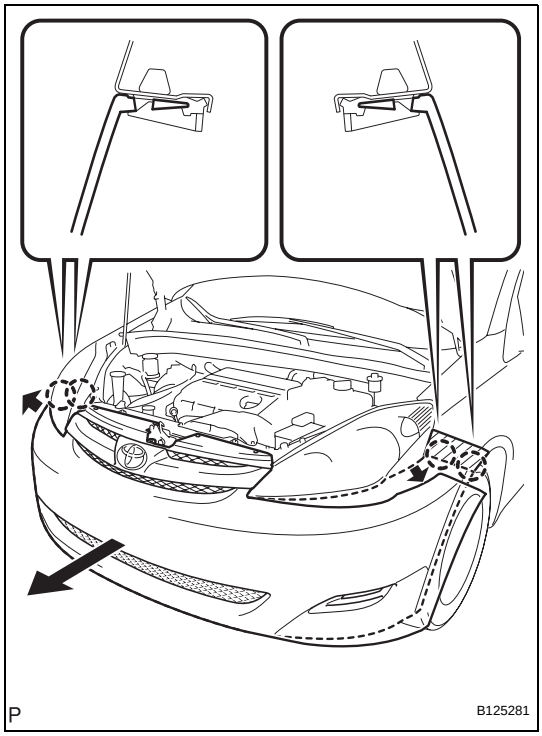

(d) Disengage the claws on the left and right sides of the front bumper and pull the front bumper toward the front of the vehicle as shown in the illustration.
HINT:
- Apply protective tape to the bottom part of the front fender to prevent it from being damaged.
- Disconnect the connectors if necessary.