19 YARIS (TMC Made)

(Cont. next page)

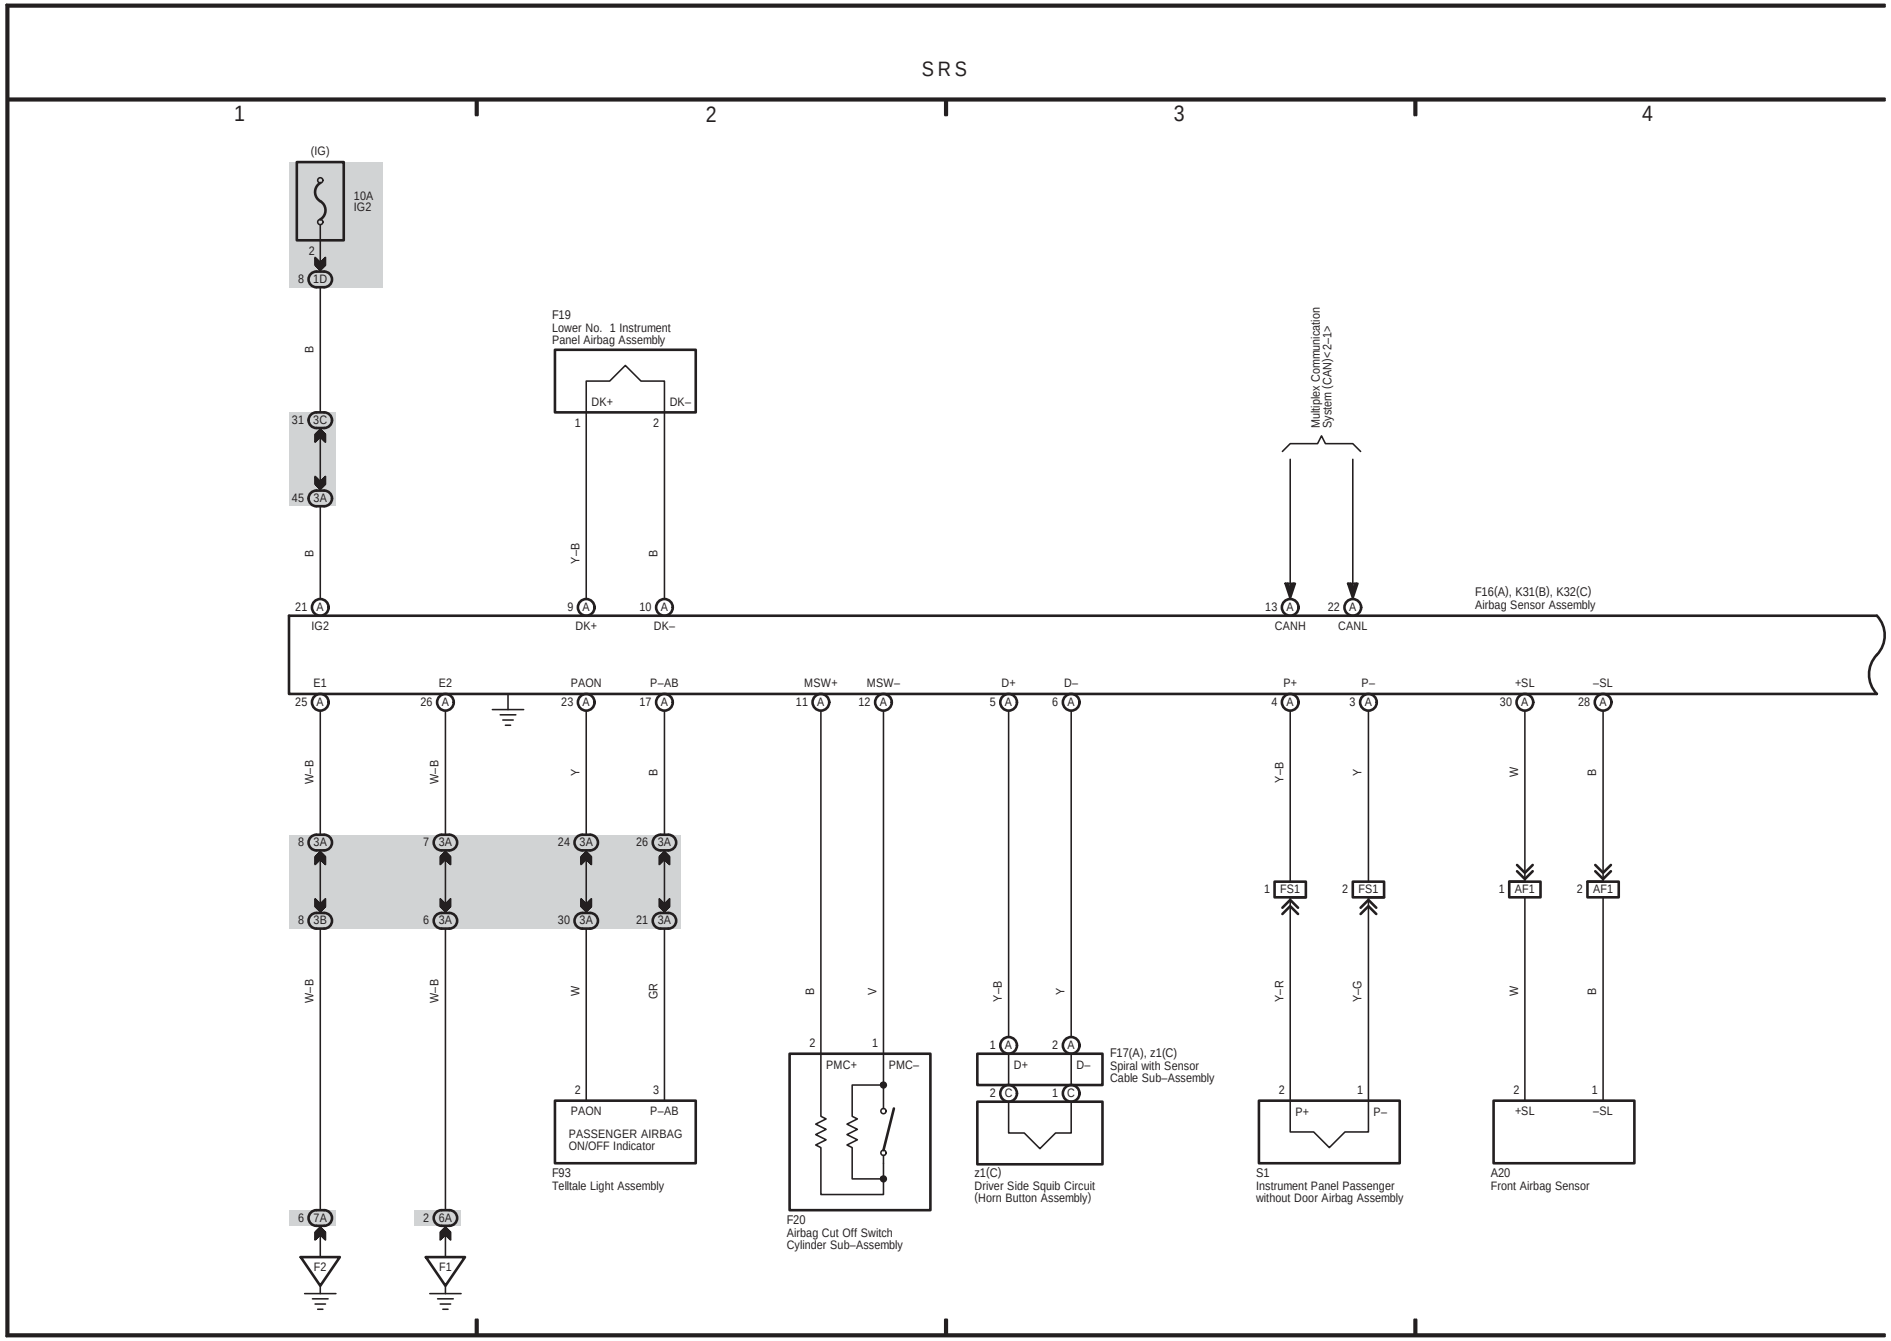

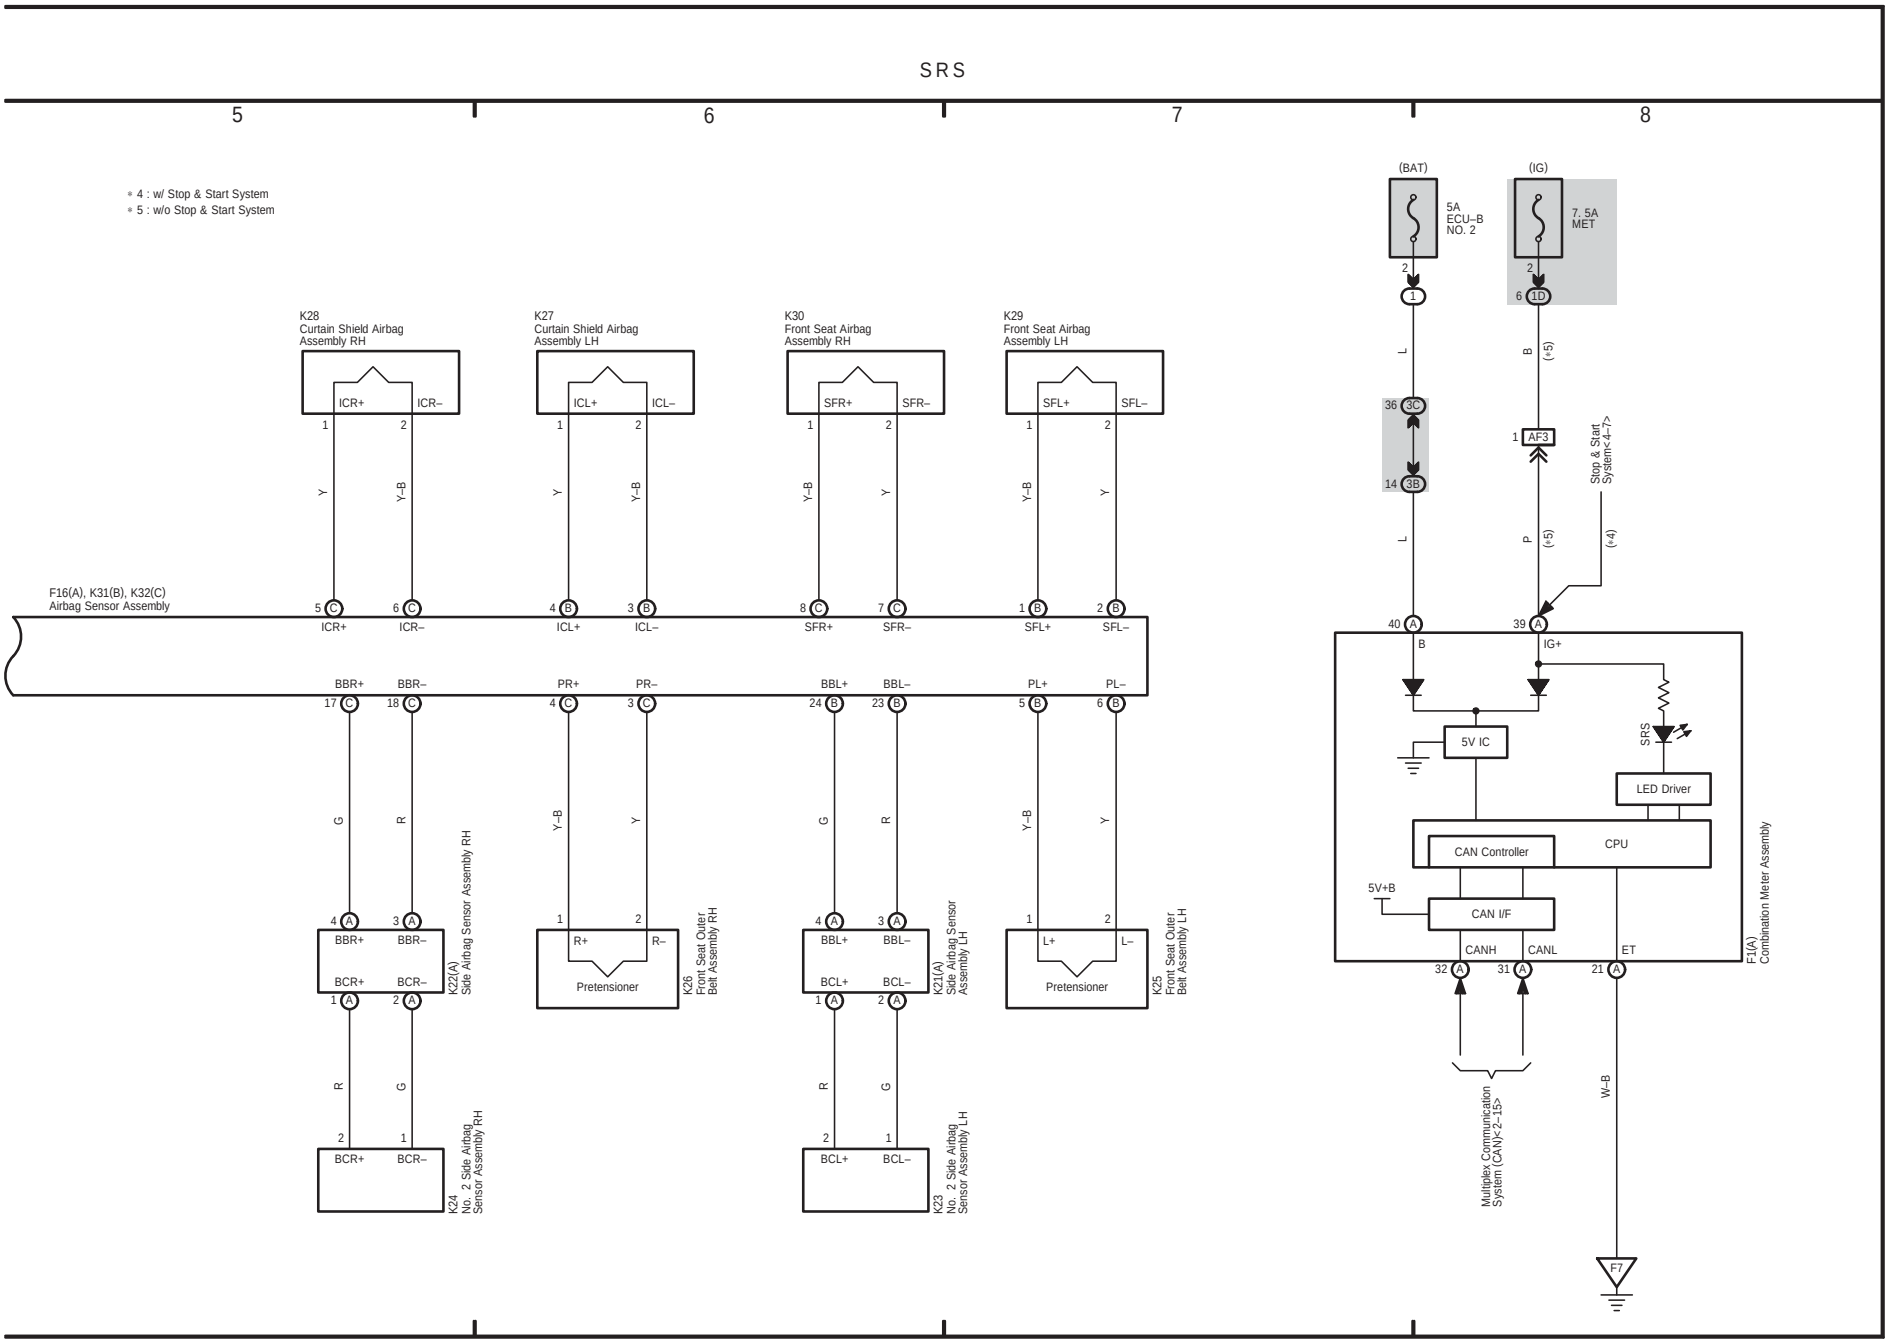
SRS
5
6
7
8
* 4 : w/ Stop & Start System
* 5 : w/o Stop & Start System
K28
Curtain Shield Airbag
Assembly RH
K27
Curtain Shield Airbag
Assembly LH
K30
Front Seat Airbag
Assembly RH
K29
Front Seat Airbag
Assembly LH
ICR+
ICR–
ICL+
ICL–
SFR+
SFR–
SFL+
SFL–
F16(A), K31(B), K32(C)
Airbag Sensor Assembly
BBR+
BBR–
PR+
PR–
BBL+
BBL–
PL+
PL–
BCR+
BCR–
BCL+
BCL–
R+
R–
L+
L–
Pretensioner
K22(A)
Side Airbag Sensor Assembly RH
K26
Front Seat Outer
Belt Assembly RH
K21(A)
Side Airbag Sensor
Assembly LH
K25
Front Seat Outer
Belt Assembly LH
K24
No. 2 Side Airbag
Sensor Assembly RH
K23
No. 2 Side Airbag
Sensor Assembly LH
(BAT)
(IG)
5A
ECU–B
NO. 2
7. 5A
MET
AF3
Stop & Start
System<4–7>
IG+
5V IC
SRS
LED Driver
CAN Controller
CPU
5V+B
CAN I/F
CANH
CANL
ET
F1(A)
Combination Meter Assembly
Multiplex Communication
System (CAN)<2–15>
W–B
F7