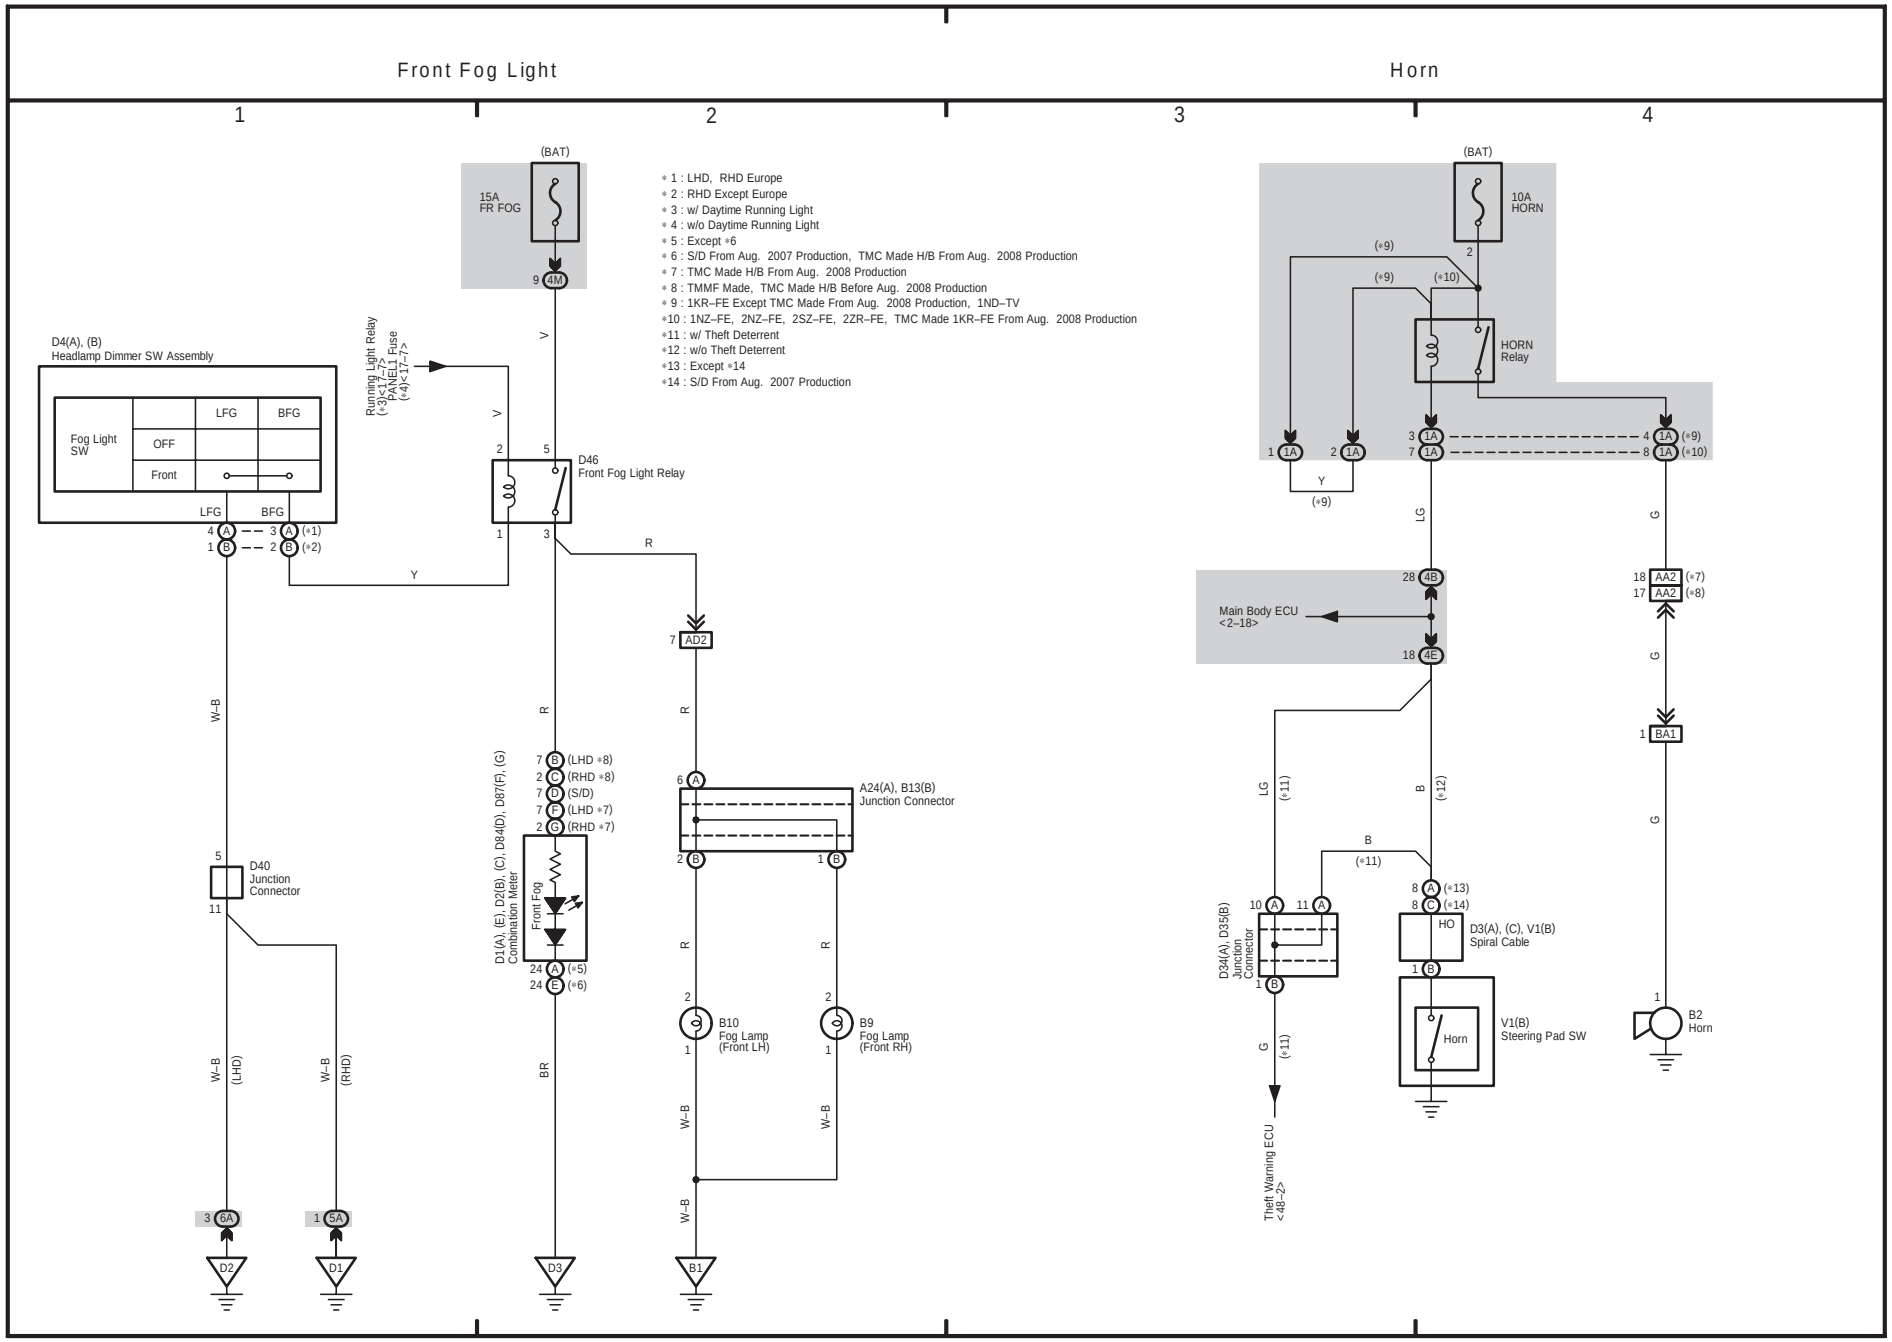
Front Fog Light
Horn
1
2
3
4
(BAT)
15A
FR FOG
9 4M
∗1 : LHD, RHD Europe
∗2 : RHD Except Europe
∗3 : w/ Daytime Running Light
∗4 : w/o Daytime Running Light
∗5 : Except ∗6
∗6 : S/D From Aug. 2007 Production, TMC Made H/B From Aug. 2008 Production
∗7 : TMC Made H/B From Aug. 2008 Production
∗8 : TMMF Made, TMC Made H/B Before Aug. 2008 Production
∗9 : 1KR–FE Except TMC Made From Aug. 2008 Production, 1ND–TV
∗10 : 1NZ–FE, 2NZ–FE, 2SZ–FE, 2ZR–FE, TMC Made 1KR–FE From Aug. 2008 Production
∗11 : w/ Theft Deterrent
∗12 : w/o Theft Deterrent
∗13 : Except ∗14
∗14 : S/D From Aug. 2007 Production
D4(A), (B)
Headlamp Dimmer SW Assembly
Fog Light SW
LFG
BFG
OFF
Front
Running Light Relay (∗3<1–7>, ∗4<17–7>)
PANEL1 Fuse
D46
Front Fog Light Relay
D40
Junction Connector
D1(A), (E), D2(B), (C), D84(D), D87(F), (G)
Combination Meter
Front Fog
(LHD ∗8)
(RHD ∗8)
(S/D)
(LHD ∗7)
(RHD ∗7)
A24(A), B13(B)
Junction Connector
B10
Fog Lamp
(Front LH)
B9
Fog Lamp
(Front RH)
6A
5A
D2
D1
D3
B1
10A
HORN
HORN
Relay
Main Body ECU
<2–18>
D34(A), D35(B)
Junction Connector
D3(A), (C), V1(B)
Spiral Cable
V1(B)
Steering Pad SW
Horn
B2
Horn
Theft Warning ECU
<48–2>
W–B
(LHD)
(RHD)
BR
R
V
Y
LG
G
B