

REGISTRATION

1. DESCRIPTION OF CODE REGISTRATION

HINT:

The key has 2 codes: The key code (immobiliser code) and the wireless code. Both of these codes need to be registered. Refer to page for the wireless code registration procedures.

- (a) When adding master keys or sub keys (Additional registration):
- (1) Register key code (immobiliser code) in the transponder key ECU.

Target ECU	See Procedure
Transponder key ECU	Procedure "A"

- (b) When replacing the transponder key ECU (New registration):
- (1) Register the key code (immobiliser code) in the transponder key ECU.

Target ECU	See Procedure
Transponder key ECU	Procedure "B"

- (2) Register the ECU COMMUNICATION ID between the hybrid vehicle control ECU and the transponder key ECU.

Target ECU	See Procedure
Transponder key ECU	Procedure "C"

- (c) When replacing the hybrid vehicle control ECU:
- (1) Register the ECU COMMUNICATION ID between the hybrid vehicle control ECU and the transponder key ECU.

Target ECU	See Procedure
Transponder key ECU	Procedure "C"

2. KEY REGISTRATION IN AUTOMATIC REGISTRATION (PROCEDURE "B")

- (a) The new registration of the key codes (immobiliser codes) is made automatically.

HINT:

- When installing a new transponder key ECU, the key codes (immobiliser codes) must be registered.
- A new transponder key ECU starts in the automatic key code registration mode. In this mode, a maximum of 4 key codes for 3 master keys and 1 sub key can be registered. Since the transponder key ECU can distinguish types of keys, any registration order is acceptable.

Automatic Key Code Registration (New Registration)

Procedure	Security Indicator Condition
1. Start (Procedure "D")	Blinking occurs until the first key is inserted.
2. Insert the key into the ignition key cylinder.	ON


Procedure	Security Indicator Condition
3. Registration begins. HINT: The registration will be completed approx. 1 sec. after the key is inserted.	OFF HINT: Approx. 1 sec.
4. Remove the key.	ON HINT:
5. Register another key ? Yes: Go to procedure "D" No: Go to procedure "E"	When the maximum number of the key codes is registered, the security indicator remains off until the last key registered is removed. After it is removed, the security indicator starts blinking.
6. End (Procedure "E")	

HINT:


- When no key is inserted in the key cylinder while the system is in automatic key code registration mode, the security indicator remains on.
- When the immobiliser system is operating normally and the key is pulled out, the security indicator blinks continuously.
- If the key code registration has failed in the automatic key code registration mode, code 2-1 will be output from the security indicator. Trying to register an already registered key will cause code 2-2 to be output when the key is inserted. If the number of registered key codes exceeds the limit, code 2-3 will be output from the security indicator. The output details are shown below.

Security Indicator:


Normal (Immobiliser system is operating normally)

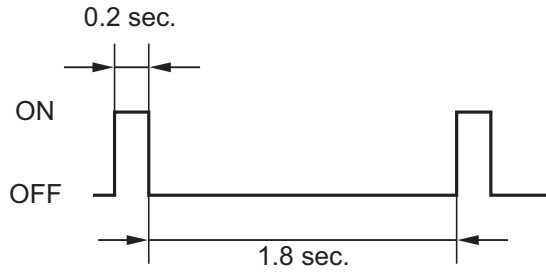


Code 2 - 1

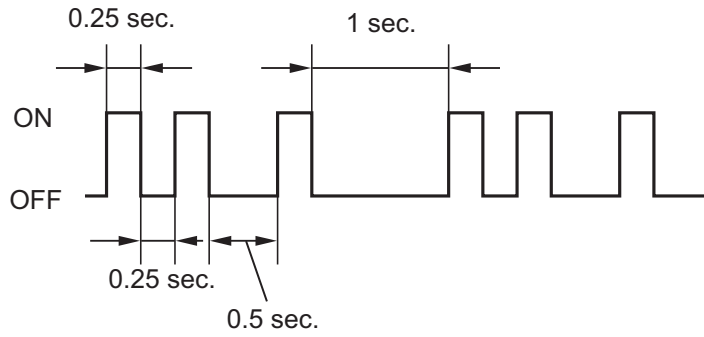

Code 2 - 2

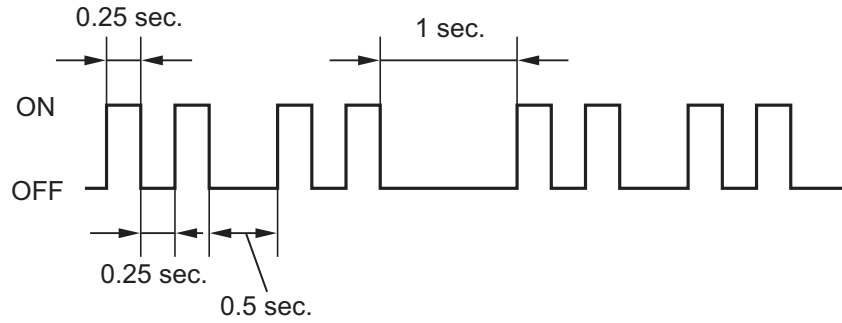

Code 2 - 3

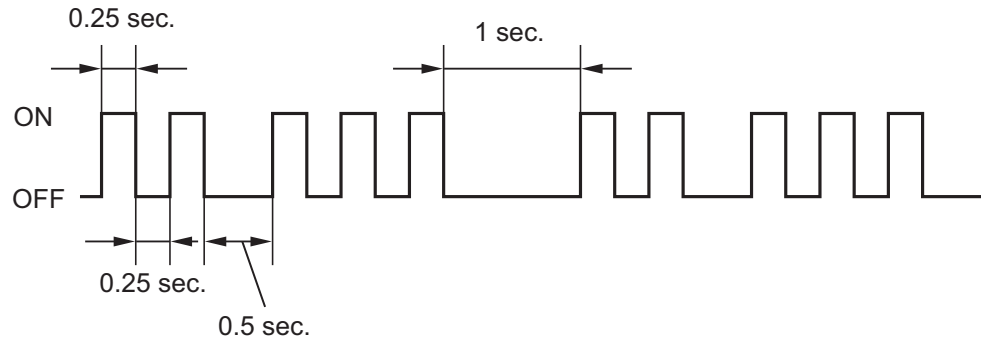

- (b) Finish the automatic key code registration mode.
The automatic key code registration mode can be forced to end, when at least 1 key code (immobiliser code) for the master key has been registered.
- (1) Turn the ignition switch on and off 5 times within 10 seconds using the already registered master key.

3. REGISTRATION OF ADDITIONAL KEYS (PROCEDURE "A")

- (a) Register an additional key by using the intelligent tester.

HINT:

- A maximum of 5 key codes and 3 sub key codes can be registered.
- Registration mode will end if any step is not completed within the specified time.
- When the ignition cylinder or the key cylinder set is replaced, remove the transmitter module from the original master key. Then install this transmitter module to a new key and use it as master key. If necessary, use this master key to register other keys.

NOTICE:

When only the ignition key cylinder has been replaced, you can lock or unlock doors by wireless operation using the new key with built in transmitter but not by inserting it in the door key cylinder. Therefore, keep the original key for door lock or unlock operation in order to avoid malfunctions caused by a dead transmitter battery in the new key.

Additional Registration

Procedure	Time (Completion of operation)	Security Indicator Condition
1. Start		
2. Insert the already registered master-key in the ignition key cylinder and turn the ignition switch on.	-	Indicator blinks until the first key is inserted.
3. Intelligent tester operation (1) Select IMMOBILISER (2) Select ID UTILITY (3) Select IMMOB CODE REG HINT: After completing the above operation, proceed to the next step in accordance with the prompts on the tester screen.	Within 120 sec.	OFF
4. Remove the master key.	Within 20 sec. of the instruction on the tester.	
5. Insert the key to be registered in the ignition key cylinder.	Within 10 sec.	ON
6. After 60 sec. the key is registered. HINT: The security indicator goes off.	-	Blinking
7. Next		OFF
8. End		

NOTICE:

If the key code registration has failed in automatic key code registration mode, code 2-1 will be output from the security indicator. Trying to register an already registered key will cause code 2-2 to be output when the key is inserted. If the number of registered key codes exceeds the limit, code 2-3 will be output from the security indicator. The output details are shown in procedure "B".

HINT:

- A brief outline of procedures for key code registration is shown above. For detailed information, please refer to the screen of the intelligent tester.
- When the immobiliser system is operating normally and the key is pulled out, the security indicator will blink.

4. ERASURE OF KEY CODE

(a) Erase key codes by using the intelligent tester.

HINT:

- All key codes will be erased except for the master-key which is used for erasing the key codes. In order to use a key for which the code has been erased, it is necessary to register the key code again.
- The registration operation will be cancelled if any step is not completed within the specified time.

Erasing Key Code

Procedure	Time (Operation Completion Time)	Security Indicator Condition
1. Start		
2. Insert the already registered master-key in the ignition key cylinder and turn the ignition switch on.	-	Indicator blinks until the first key is inserted.
3. Intelligent tester operation (1) Select IMMOBILISER (2) Select ID UTILITY (3) Select IMMOB CODE ERA HINT: After completing the above operation, proceed to the next step in accordance with the prompts on the tester screen.	Within 120 sec.	OFF
4. Remove the master key.	Within 10 sec. of the instruction on the tester..	ON for 1 sec. Then OFF.
5. Next	-	Blinking
6. End		


HINT:

- A brief outline of procedures for key code registration is shown above. For detailed information, please refer to the screen of the intelligent tester.
- When the immobiliser system is operating normally and the key is pulled out, the security indicator will blink.

5. ECU COMMUNICATION ID REGISTRATION (PROCEDURE "C")

NOTICE:

- The ECU communication ID should be registered when the transponder key ECU and/or the hybrid vehicle control ECU is replaced in order to match it to the **HYBRID VEHICLE CONTROL ECU COMMUNICATION ID**.
 - The hybrid control system cannot be started unless the **HYBRID VEHICLE CONTROL ECU COMMUNICATION ID** matches.
- (a) Register the ECU COMMUNICATION ID, after the transponder key ECU and/or the hybrid vehicle control ECU is replaced turn the ignition switch on.

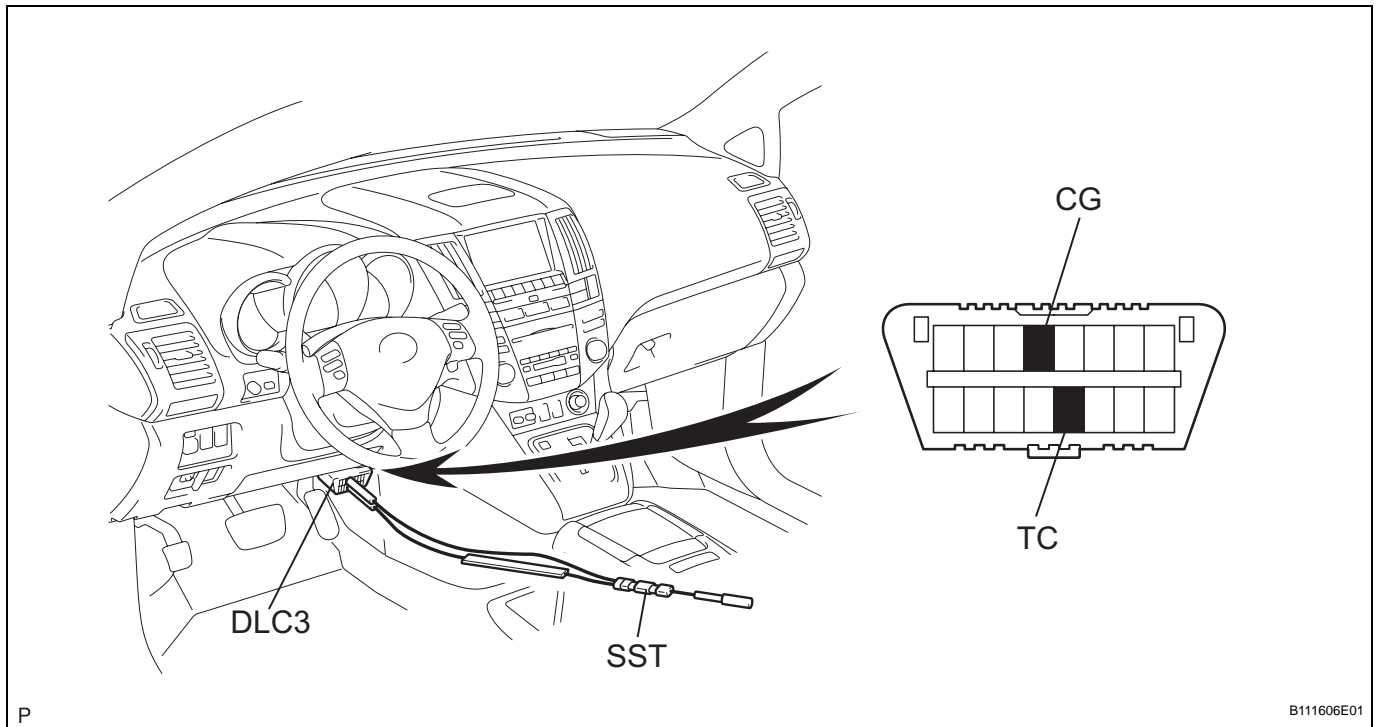

- (1) Using SST, connect terminals TC and CG of the DLC3.
SST 09843-18040
- (2) Turn the ignition on and leave it as is for 30 minutes.
- (3) Check that the hybrid control system starts.