


INSPECTION

1. INSPECT SEAT HEATER SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
ON	2 - 4 - 6	Continuity
OFF	-	No continuity
Illumination circuit	1 - 3	Continuity


If continuity is not as specified, replace the switch.

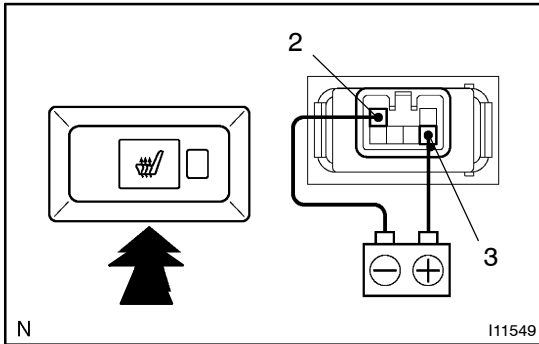

2. INSPECT SEAT HEATER INDICATOR LIGHT OPERATION

- Connect the positive (+) lead from the battery to terminal 3 and the negative (-) lead to terminal 2.
- Push the seat heater switch ON that the indicator light lights up.

If operation is not as specified, replace the switch and inspect the circuits connected to other parts.

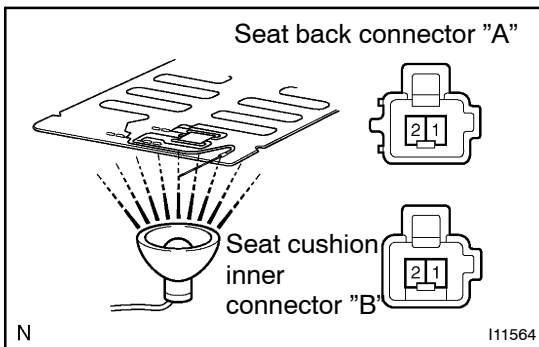


3. INSPECT SEAT HEATER CUSHION CONTINUITY

- Heat the thermostat with a light.
- Inspect the seat heater cushion continuity between terminals, as shown.

Tester connection	Condition	Specified condition
A2 - B1	Constant	Continuity
A1 - A2	Seat heater temperature below 25 °C (77 °F)	Continuity
B1 - B2	Seat heater temperature above 45 °C (113 °F)	No continuity

If continuity is not as specified, replace the seat cushion pad.

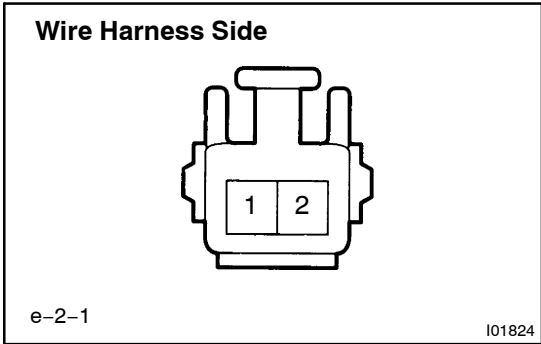


4. INSPECT SEAT HEATER CUSHION CONTINUITY

Inspect the seat heater inner cushion and front cushion continuity between terminals, as shown.

Tester connection	Condition	Specified condition
1 - Body ground	Seat heater switch ON	Battery voltage

If continuity is not as specified, replace the seat back pad.

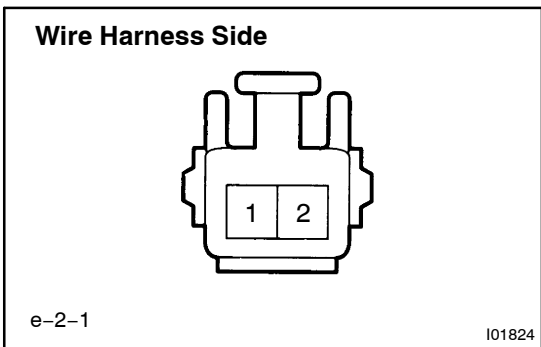

5. INSPECT SEAT BACK CONTINUITY

Inspect the seat back continuity between terminals, as shown.

Tester connection	Condition	Specified condition
2 - Body ground	Constant	Continuity

If continuity is not as specified, replace the seat back pad.