


REAR FLOOR SIDE MEMBER REAR REINFORCEMENT (ASSY)



REPLACEMENT

With the body lower back panel removed.

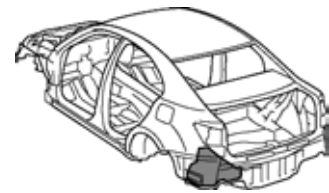

F24578A

REMOVAL

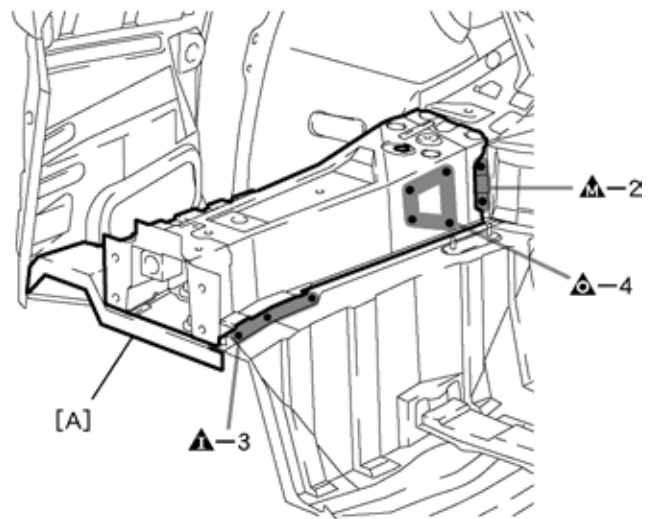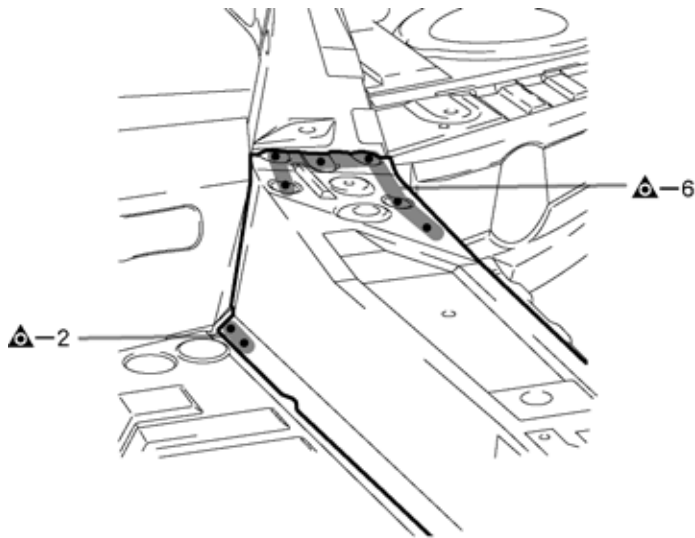



F24578

POINT

- 1 Remove [A] at the same time.



PART NAME

[A] Rear Floor Pan To Quarter Panel Extension

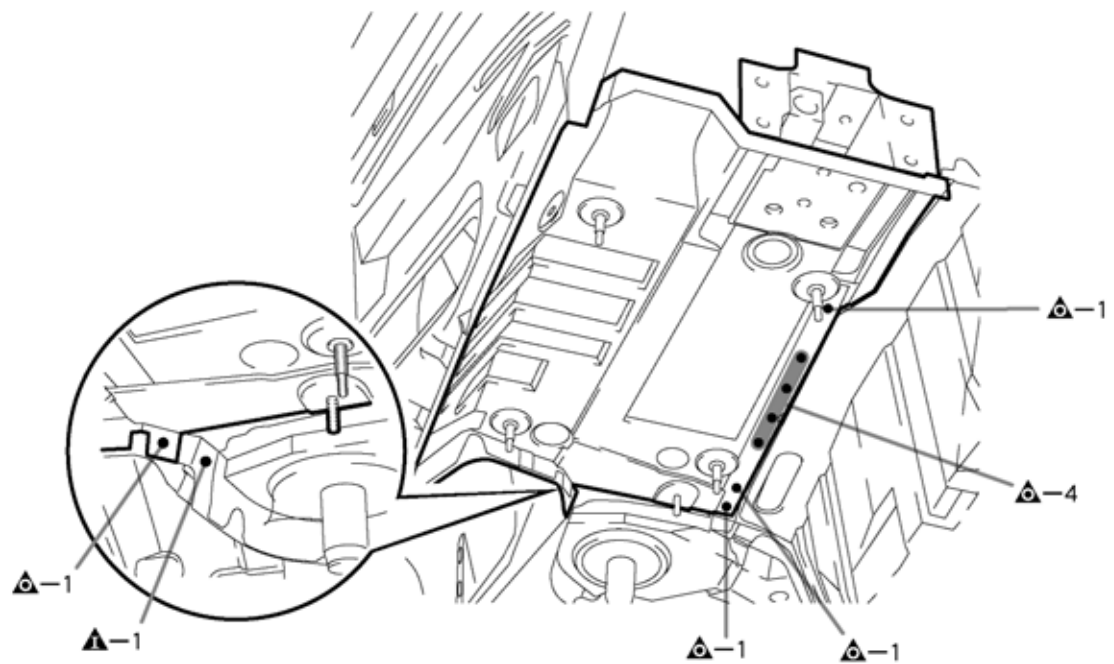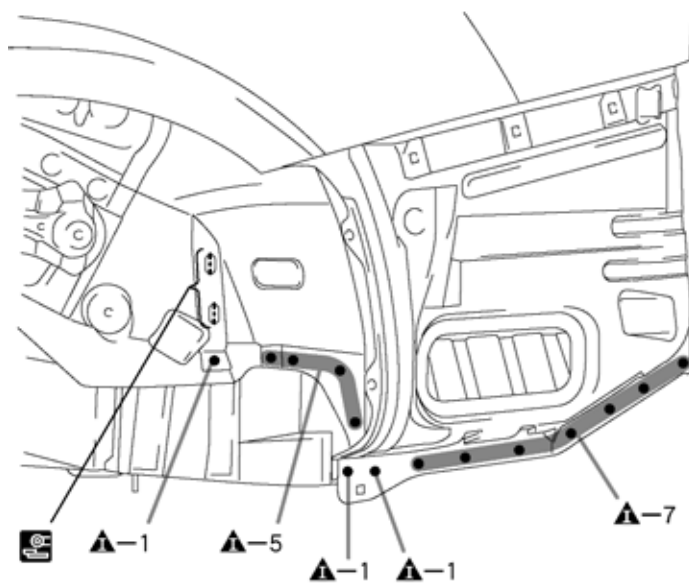

INSTALLATION



- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply polyurethane foam to the corresponding parts.
- After welding, apply body sealer and undercoating to the corresponding parts.
- After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

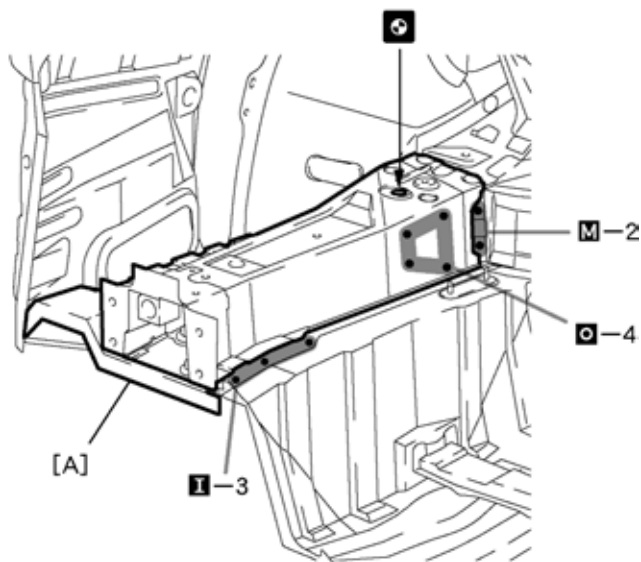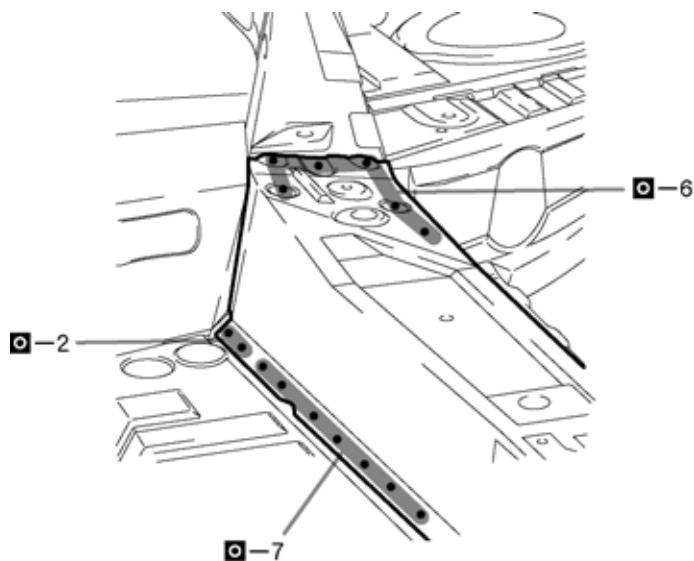

F24580

PART NAME

[A] Rear Floor Pan To Quarter Panel Extension

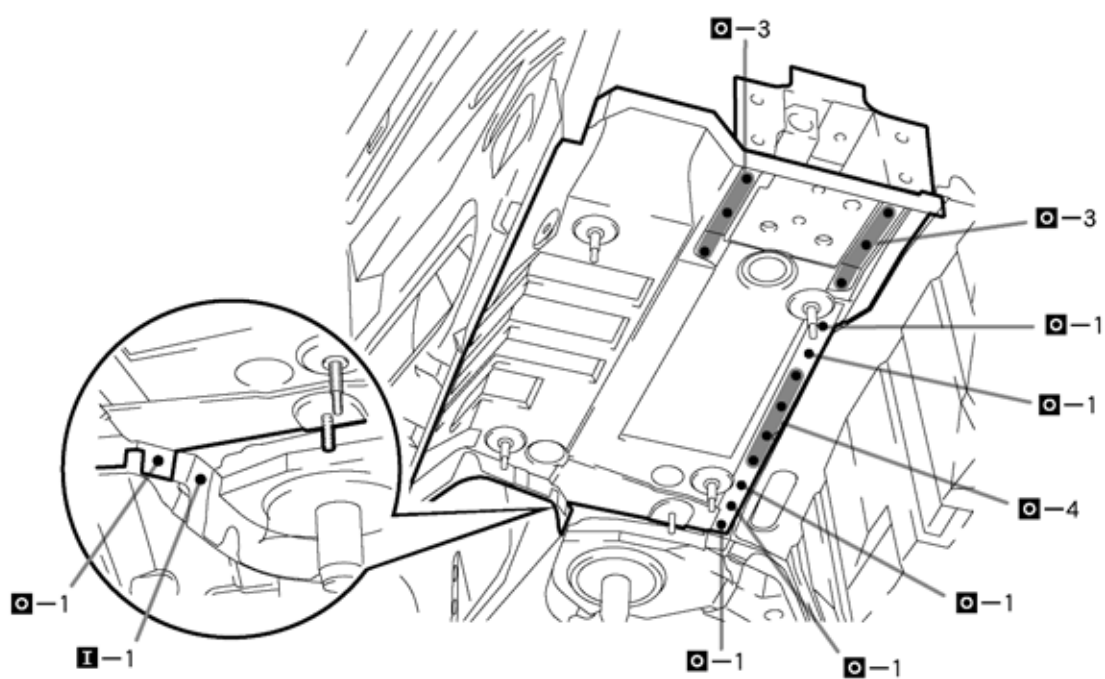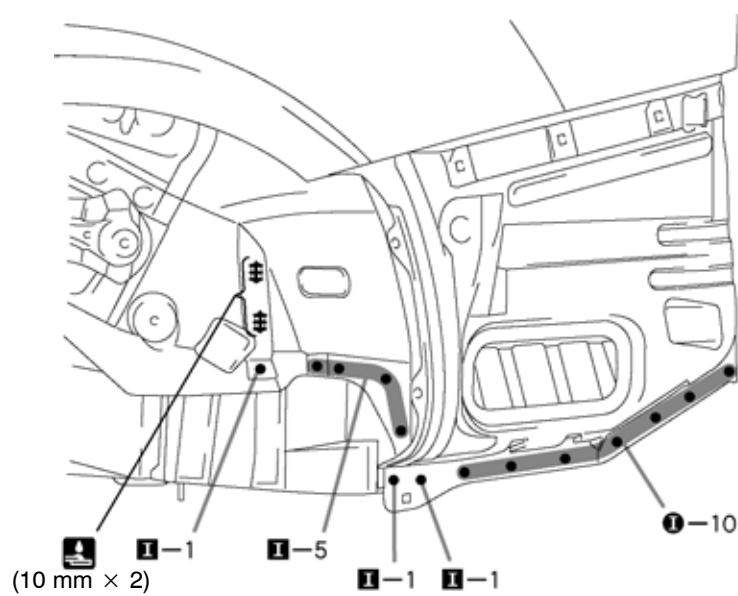

F24581

10 mm (0.39 in.)