


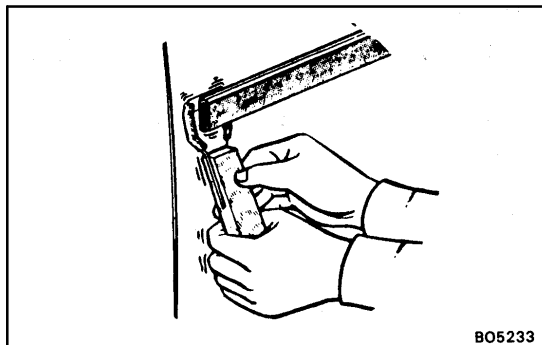

BO5233


REMOVAL

1. REMOVE ENDS OF MOULDING

Using a scraper, pry the moulding loose about 30 mm (1.18 in.) from the ends.

HINT:

Tape the scraper tip before use.

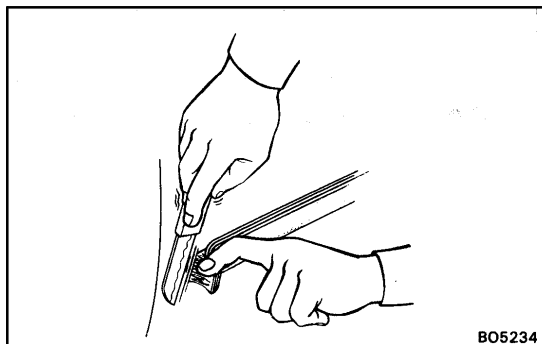

BO5234

2. REMOVE MOULDING AND ADHESIVE

- (a) Pull off the moulding by cutting the adhesive with a knife.
- (b) Scrape off adhesive from the body with a cutter or sandpaper.

NOTICE:

Remember that 30–80 mm (1.18–3.15 in.) of the ends of the moulding are glued tightly with a strong adhesive. Do not reuse moulding.