

<b>DTC</b>	<b>B1262 / 62</b>	<b>A/C ECU communication stop</b>
------------	-------------------	-----------------------------------

## CIRCUIT DESCRIPTION


This DTC is output when communication stops between Engine and ECT ECU and Body ECU.

DTC No.	DTC Detecting Condition	Trouble Area
B1262/62	No communication from ECU more than 10 seconds.	<ul style="list-style-type: none"><li>• A/C ECU</li><li>• Wireharness</li></ul>

## WIRING DIAGRAM

[See page DI-626.](#)

# 1 Check wireharness

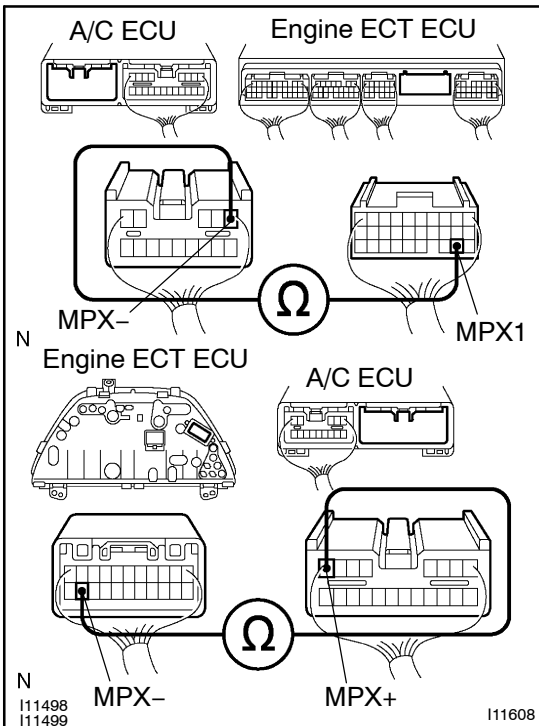

## PREPARATION:

Disconnect connector of "C10" of combination meter "A14" or "A15" of A/C ECU and "E3" of Engine and ECT ECU.

## CHECK:

- Check continuity between terminals MPX- of A/C ECU and MPX1 of Engine and ECT ECU.
- Check continuity between terminals MPX- of combination meter and MPX+ of A/C ECU.

## OK:

There is a continuity in wireharness of both (a) and (b), (a) or either (b).

## HINT:

If there is OPEN in wireharness of either (a) or (b), please repair it.

NG

Repair or replace wireharness.

OK

Replace the A/C ECU.