


## INSTALLATION

### 1. INSTALL INJECTORS AND DELIVERY PIPE

- (a) Apply a light coat of gasoline to a new O-ring and install it to the injector.

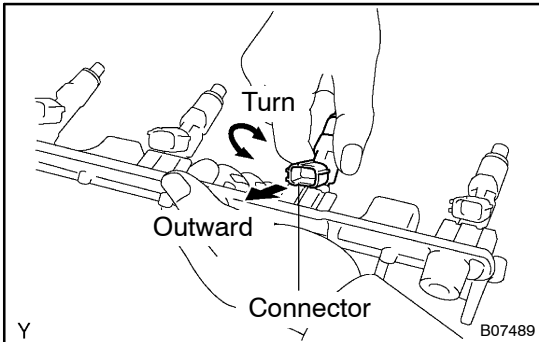


- (b) While turning the injector left and right, install it to the delivery pipe. Install the 6 injectors.

- (c) Position the injector connector upward.

- (d) Place 6 new insulators and the 3 spacers in position on the cylinder head.

- (e) Place the 6 injectors and delivery pipe assembly in position on the cylinder head.

- (f) Temporarily install the 3 bolts holding the delivery pipe to the cylinder head.

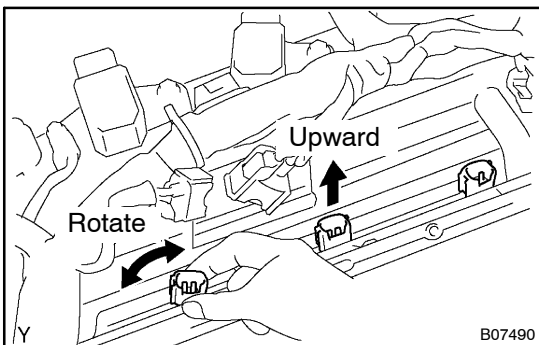

- (g) Check that the injectors rotate smoothly.

#### HINT:

If the injectors do not rotate smoothly, the probable cause is incorrect installation of the O-rings. Replace the O-rings.

- (h) Position the injector connector upward.


- (i) Tighten the 3 bolts holding the delivery pipe to the intake manifold.

**Torque: 18.5 N·m (185 kgf·cm, 13 ft·lbf)**

### 2. INSTALL FUEL PRESSURE PULSATION DAMPER (See page FI-29)

### 3. INSTALL NO.3 WATER BYPASS PIPE

Install the No.3 water bypass pipe to the cylinder head cover with the 2 bolts.

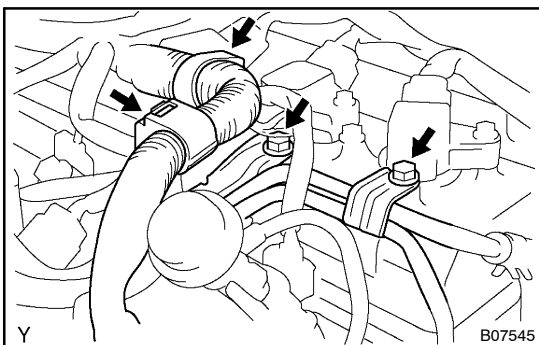

### 4. INSTALL ENGINE WIRE

- (a) Install the 2 engine wire clamps to the 2 brackets on the intake manifold.


- (b) Install the 2 engine wire clamps to the 2 brackets on the cylinder head cover.

- (c) Install the engine wire clamp to the bracket on the No.3 water bypass pipe.

### 5. INSTALL NO.2 CYLINDER HEAD COVER

### 6. INSTALL THROTTLE BODY

(See page FI-36)

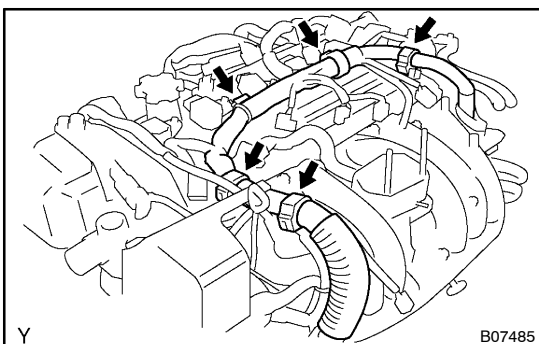

7. **INSTALL AIR CLEANER ASSEMBLY**  
Torque: 7.5 N·m (75 kgf·cm, 65 in·lbf)
8. **INSTALL AIR CLEANER INLET**  
Torque: 5 N·m (50 kgf·cm, 43 in·lbf)