


DTC	P0500/42	Vehicle Speed Sensor Malfunction
------------	-----------------	---


CIRCUIT DESCRIPTION

The vehicle speed sensor detects the rotation speed of the transmission output shaft and sends signals to the engine ECU. The engine ECU determines the vehicle speed based on these signals. An AC voltage is generated in the vehicle speed sensor coil as the rotor mounted on the output shaft rotates, and this voltage is sent to the engine ECU.

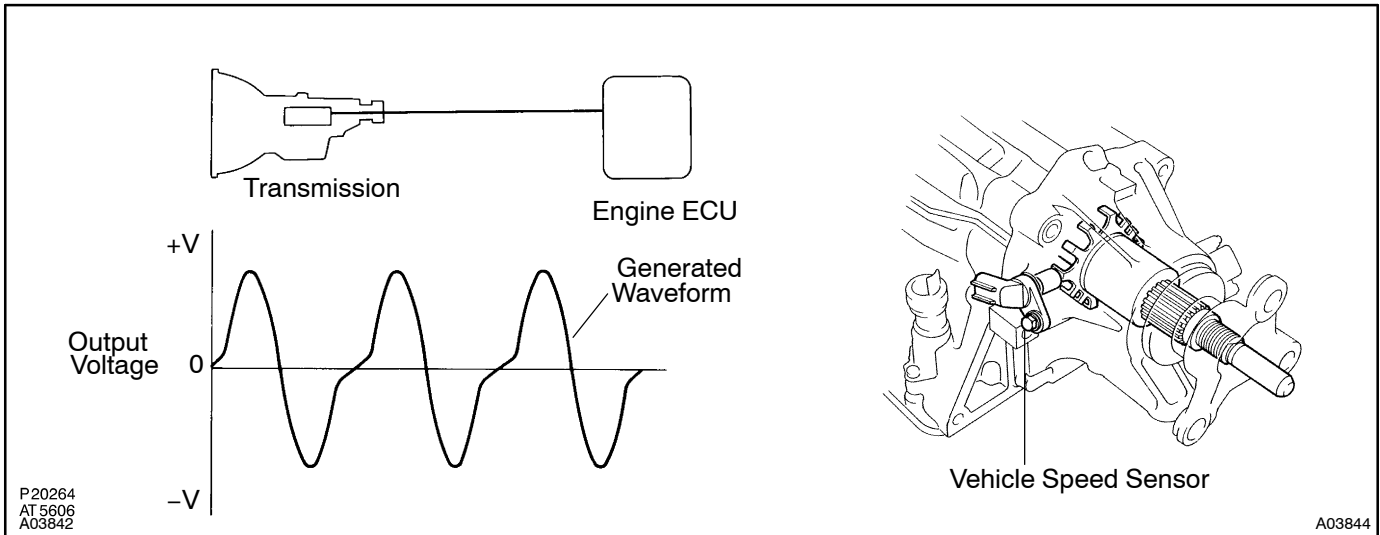

DTC No.	DTC Detecting Condition	Trouble Area
P0500/42	No vehicle speed sensor signal to engine ECU under conditions (a) and (b): (a) park/neutral position switch is OFF (b) Vehicle is being driven	<ul style="list-style-type: none"> • Open or short in vehicle speed sensor circuit • Vehicle speed sensor • engine ECU

WIRING DIAGRAM

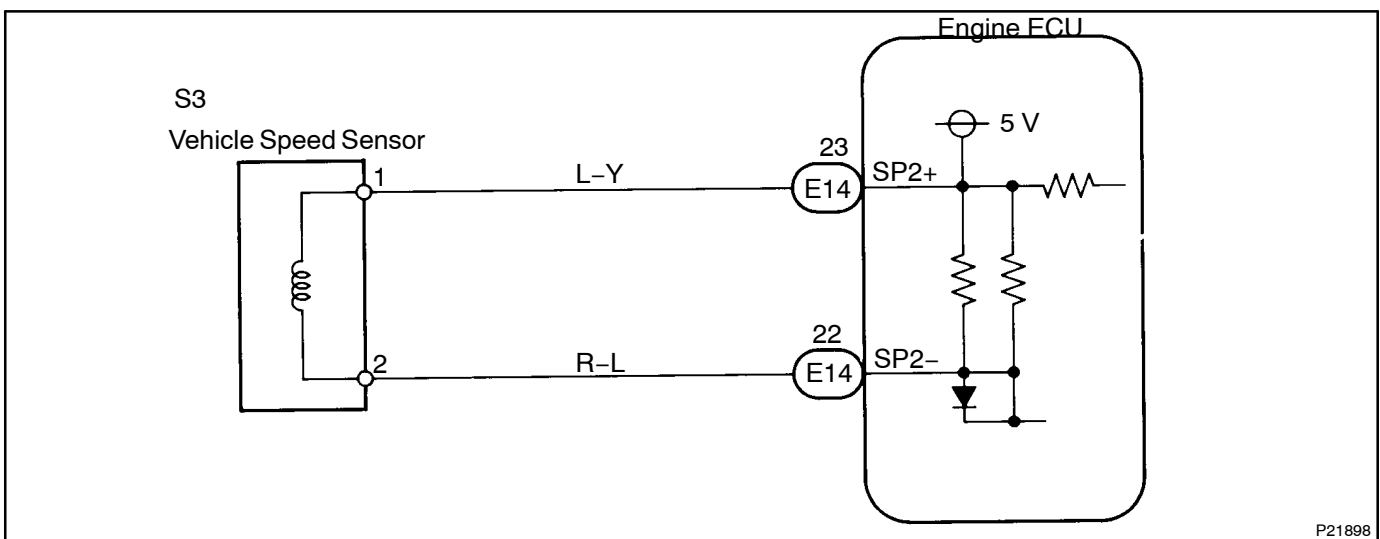

INSPECTION PROCEDURE

When using hand-held tester

HINT:

Read freeze frame data using hand-held tester. Because freeze frame records the engine conditions when the malfunction is detected, when troubleshooting it is useful for determining whether the vehicle was running or stopped, the engine warmed up or not, the air-fuel ratio lean or rich, etc. at the time of the malfunction.

1	Connect hand-held tester and read value of vehicle speed value.
----------	--

PREPARATION:

- (a) Connect the hand-held tester to the DLC3.
- (b) Start the engine and the hand-held tester main switch ON.

CHECK:

Drive the vehicle and read vehicle speed value.

OK:

Vehicle speed matches tester speed value

OK	Check and replace engine ECU (See page N-34).
-----------	--


NG

2	Check speedometer circuit (See page BE-35).
----------	--

NG	Repair or replace speedometer circuit.
-----------	---

OK

3 Check resistance between terminals SP2+ and SP2- of engine ECU connector.

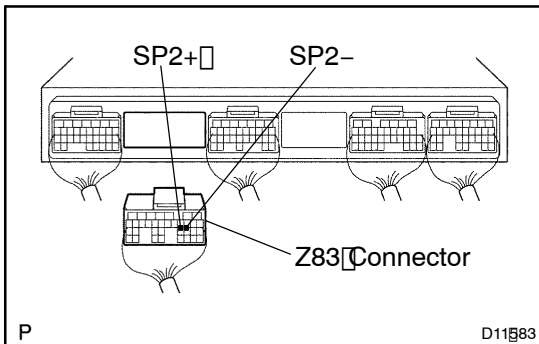

PREPARATION:

- Remove the engine room engine ECU hood and cover.
- Disconnect the Z83 connector of the engine ECU.

CHECK:

Check resistance between terminals SP2+ and SP2- of the engine ECU connector.

OK:


Resistance: 560 ~ 680 Ω

OK

Check and replace engine ECU (See page IN-34).

NG

4 Check vehicle speed sensor.

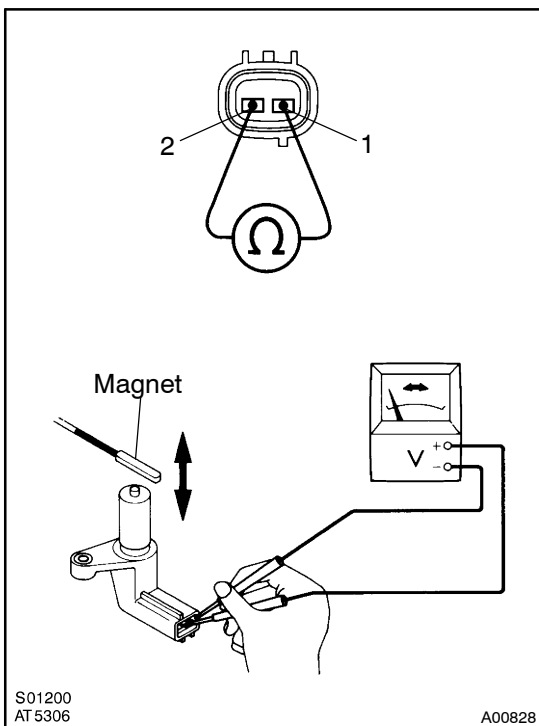

PREPARATION:

Remove the vehicle speed sensor from the transmission.

CHECK:

Measure resistance between terminals 1 and 2 of the speed sensor.

OK:

Resistance: 560 ~ 680 Ω

Reference

Check vehicle speed sensor's function

CHECK:


Check voltage between terminals 1 and 2 of the vehicle speed sensor when a magnet is put close to front end of the vehicle speed sensor then taken away quickly.

OK:

Voltage is generated intermittently

HINT:

Voltage generated is extremely low.

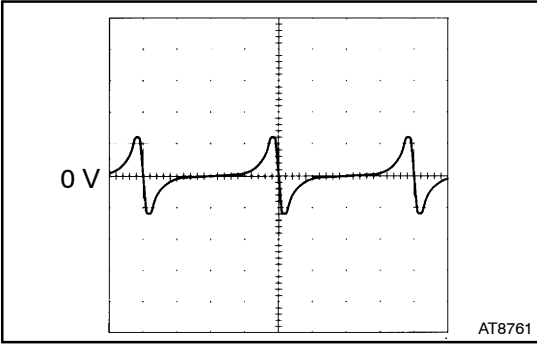**Reference INSPECTION USING OSCILLOSCOPE**


Waveform between terminals SP2+ and SP2- When the vehicle speed is approx. 60 km/h (37 mph).

NG**Replace vehicle speed sensor.****OK**

Check and repair harness and connector between engine ECU and vehicle speed sensor (See page IN-34).

When not using hand-held tester

1 Check resistance between terminals SP2+ and SP2- of engine ECU connector.

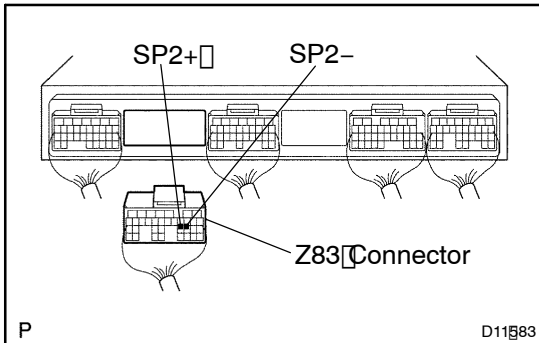

PREPARATION:

- Remove the engine room engine ECU hood and cover.
- Disconnect the Z83 connector of the engine ECU.

CHECK:

Check resistance between terminals SP2+ and SP2- of the engine ECU connector.

OK:


Resistance: 560 ~ 680 Ω

OK

Check and replace engine ECU (See page IN-34).

NG

2 Check vehicle speed sensor.

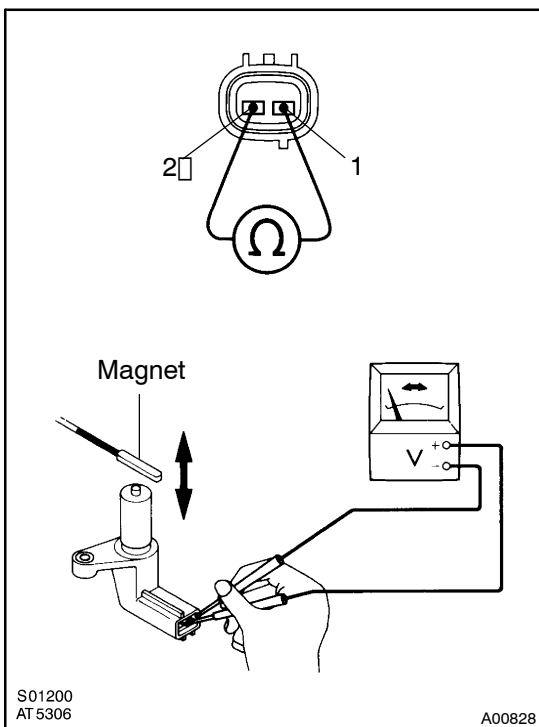

PREPARATION:

Remove the vehicle speed sensor from the transmission.

CHECK:

Measure resistance between terminals 1 and 2 of the speed sensor.

OK:

Resistance: 560 ~ 680 Ω

Reference

Check vehicle speed sensor's function

CHECK:


Check voltage between terminals 1 and 2 of the vehicle speed sensor when a magnet is put close to front end of the vehicle speed sensor then taken away quickly.

OK:

Voltage is generated intermittently

HINT:

Voltage generated is extremely low.

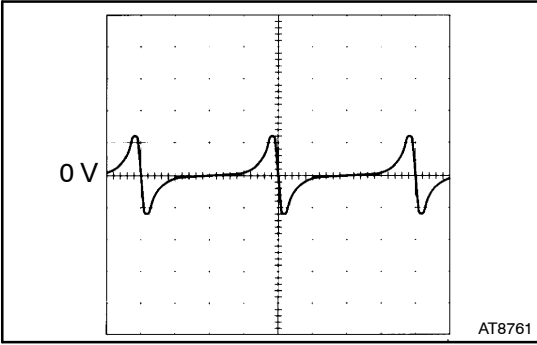

Reference INSPECTION USING OSCILLOSCOPE

Waveform between terminals SP2+ and SP2- When the vehicle speed is approx. 60 km/h (37 mph).

NG

replace vehicle speed sensor.

OK

Check and repair harness and connector between engine ECU and vehicle speed sensor (See page IN-34).