


REAR SPEED SENSOR (for 2WD)

COMPONENTS

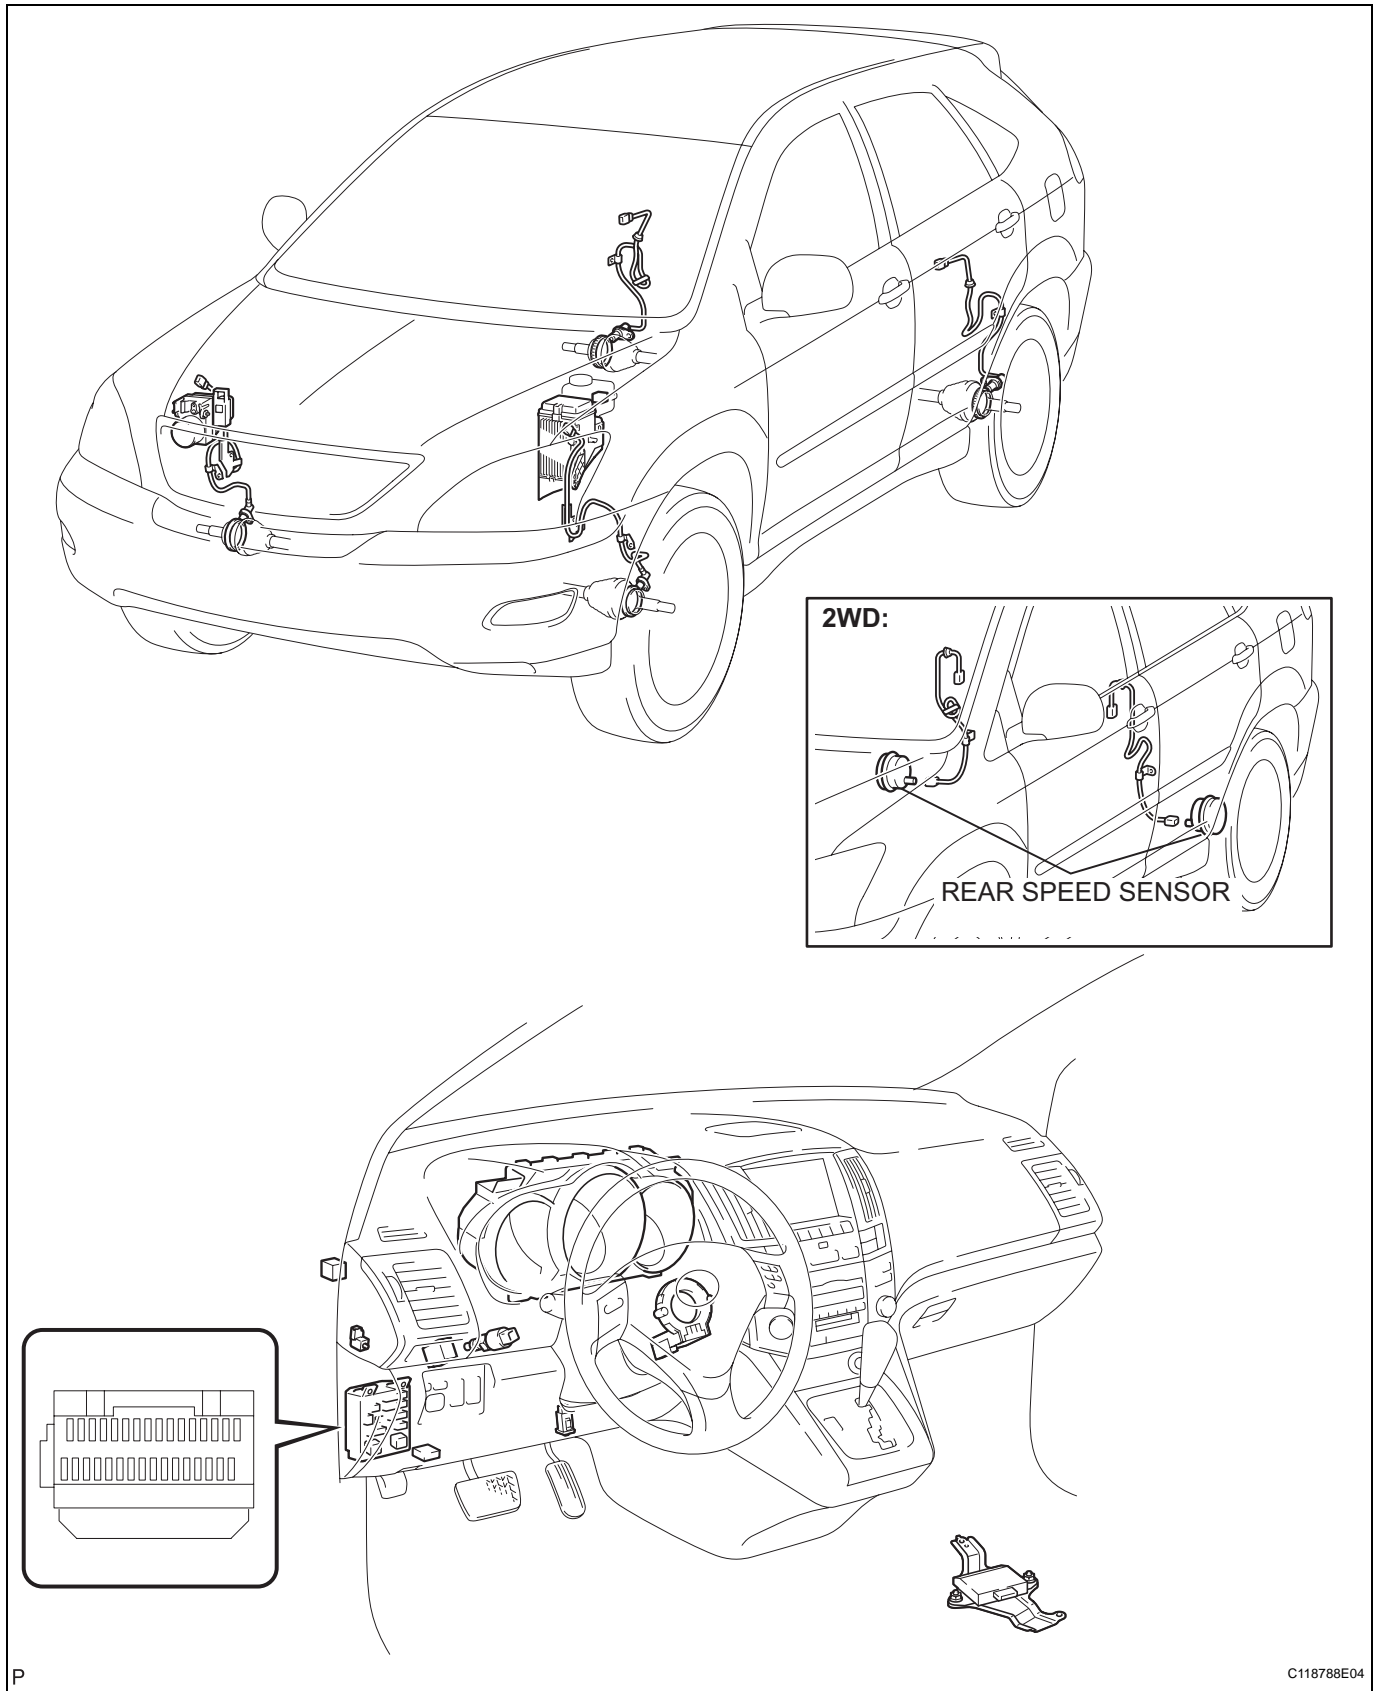

REMOVAL

HINT:

Replace the RH side by using the same procedures as those for the LH side.

1. REMOVE REAR WHEEL
2. DISCONNECT SKID CONTROL SENSOR WIRE
 - (a) Disconnect the connector from the skid control sensor.
3. SEPARATE REAR DISC BRAKE CALIPER ASSEMBLY LH (See page [PB-20](#))
4. REMOVE REAR DISC (See page [PB-20](#))
5. REMOVE REAR AXLE HUB & BEARING ASSEMBLY LH (See page [AH-22](#))
6. REMOVE SKID CONTROL SENSOR
 - (a) Mount the hub & bearing assembly on a soft jaw vise.

NOTICE:


Replace the hub & bearing assembly if it is dropped or receives a strong shock.

- (b) Using a pin punch and hammer, drive out the 2 pins and remove the 2 attachments from SST(s).
- (c) Using SST(s) and 2 bolts (Diameter: 12 mm, pitch: 1.5 mm), remove the skid control sensor from the hub & bearing assembly.

SST 09520-00031 (09520-00040), 09521-00020, 09950-00020

NOTICE:

- If the sensor rotor is damaged, replace the hub & bearing assembly.
- Do not scratch the contacting surface of the hub & bearing assembly and the skid control sensor.

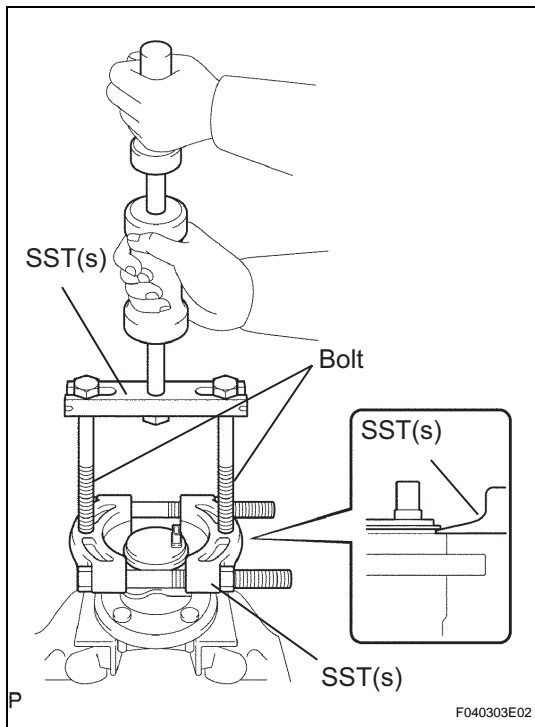

F040303E02