

INSPECTION

1. INSPECT OUTER REAR VIEW MIRROR ASSEMBLY RH (W/ MEMORY)

- (a) Inspect outer mirror motor operation.
 - (1) Remove the outer rear view mirror assembly.
 - (2) Apply battery voltage and check operation of the mirror face, as shown in the table and illustration.

Standard

Measurement Condition	Specified Condition
Battery positive (+) → Terminal 1 (RMVR) Battery negative (-) → Terminal 10 (RM+R)	Turns upward (A)
Battery positive (+) → Terminal 10 (RM+R) Battery negative (-) → Terminal 1 (RMVR)	Turns downward (B)
Battery positive (+) → Terminal 9 (RMHR) Battery negative (-) → Terminal 10 (RM+R)	Turns left (C)
Battery positive (+) → Terminal 10 (RM+R) Battery negative (-) → Terminal 9 (RMHR)	Turns right (D)

- (b) Inspect outer mirror heater operation.
 - (1) Apply battery voltage and check operation of the mirror face, as shown in the table and illustration.


Standard

Measurement Condition	Specified Condition
Battery positive (+) → Terminal 4 (HTR+) Battery negative (-) → Terminal 12 (HTR-)	Mirror surface temperature becomes higher


- (c) Inspect electrochromic outer mirror operation.
 - (1) Apply battery voltage and check operation of the mirror face, as shown in the table and illustration.

Standard


Measurement Condition	Specified Condition
Battery positive (+) → Terminal 7 (EC+) Battery negative (-) → Terminal 15 (EC-)	Mirror surface changes to dark

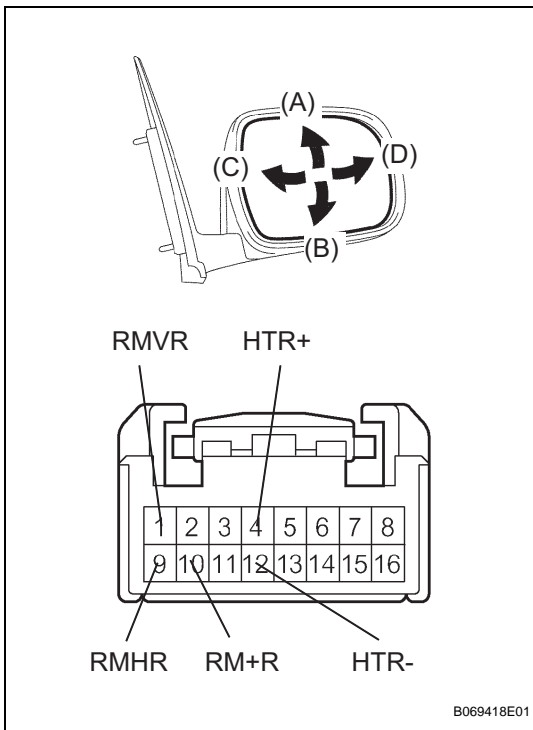

B069418E01

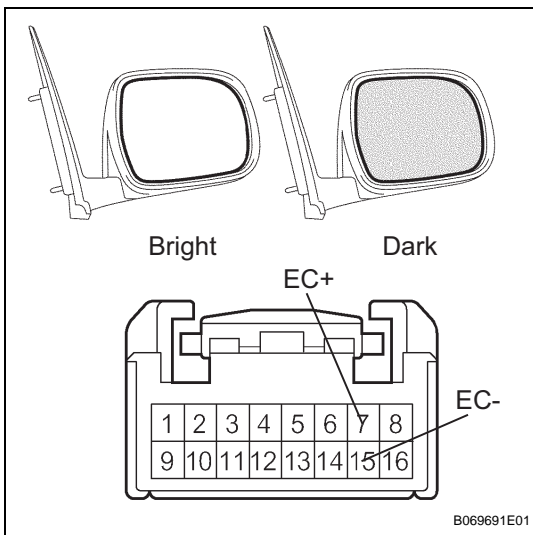

B069691E01

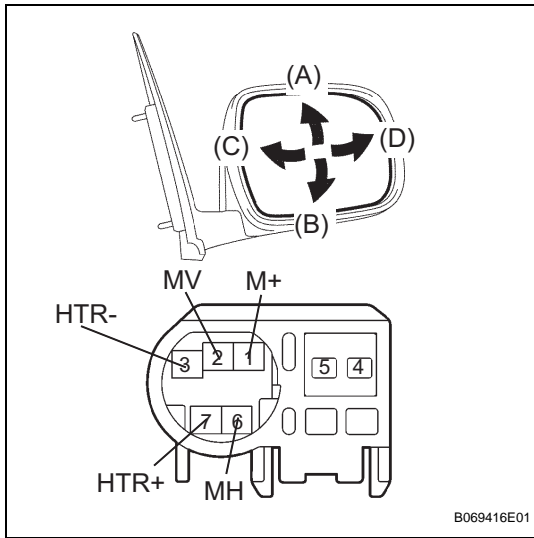

2. INSPECT OUTER REAR VIEW MIRROR ASSEMBLY RH (W/O MEMORY)

- (a) Inspect outer mirror motor operation.
- (1) Remove the outer rear view mirror assembly.
 - (2) Apply battery voltage and check operation of the mirror face, as shown in the table and illustration.

Standard

Measurement Condition	Specified Condition
Battery positive (+) → Terminal 2 (MV) Battery negative (-) → Terminal 1 (M+)	Turns upward (A)
Battery positive (+) → Terminal 1 (M+) Battery negative (-) → Terminal 2 (MV)	Turns downward (B)
Battery positive (+) → Terminal 6 (MH) Battery negative (-) → Terminal 1 (M+)	Turns left (C)
Battery positive (+) → Terminal 1 (M+) Battery negative (-) → Terminal 6 (MH)	Turns right (D)

- (b) Inspect outer mirror heater operation.
- (1) Apply battery voltage and check operation of the mirror face, as shown in the table and illustration.


Standard


Measurement Condition	Specified Condition
Battery positive (+) → Terminal 7 (HTR+) Battery negative (-) → Terminal 3 (HTR-)	Mirror surface temperature becomes higher

- (c) Inspect electrochromic outer mirror operation.
- (1) Apply battery voltage and check operation of the mirror surface, as shown in the table and illustration.

Standard

Measurement Condition	Specified Condition
Battery positive (+) → Terminal 4 (EC+) Battery negative (-) → Terminal 5 (EC-)	Mirror surface changes to dark

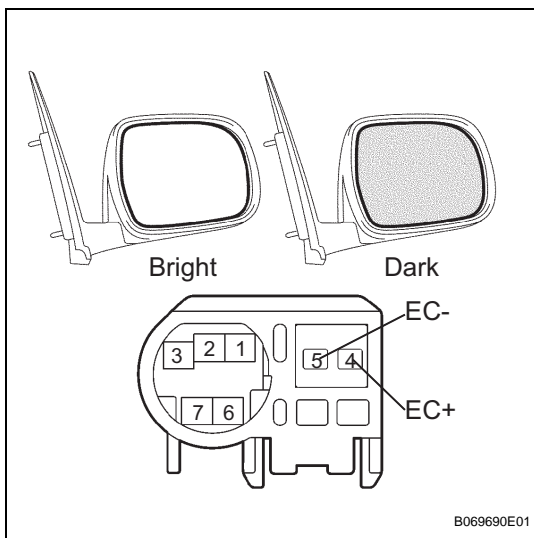

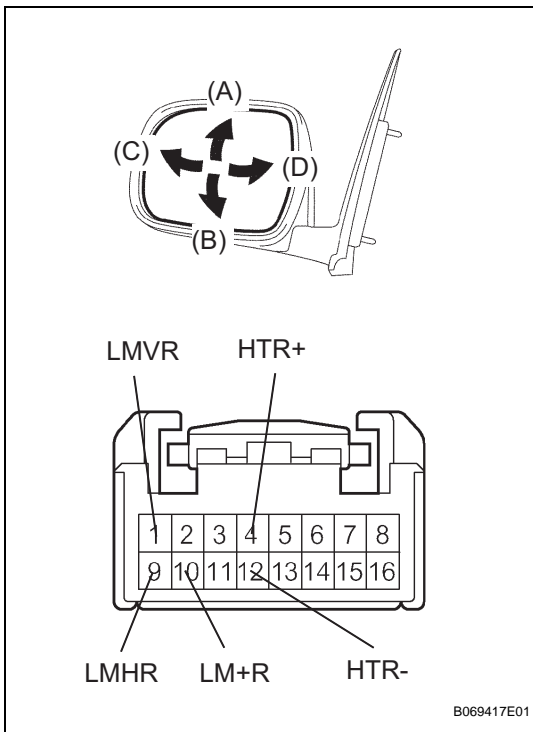

3. INSPECT OUTER REAR VIEW MIRROR ASSEMBLY LH (W/ MEMORY)

- (a) Inspect outer mirror motor operation.
 - (1) Remove the outer rear view mirror assembly.
 - (2) Apply battery voltage and check operation of the mirror face, as shown in the table and illustration.

Standard

Measurement Condition	Specified Condition
Battery positive (+) → Terminal 1 (LMVR) Battery negative (-) → Terminal 10 (LM+R)	Turns upward (A)
Battery positive (+) → Terminal 10 (LM+R) Battery negative (-) → Terminal 1 (LMVR)	Turns downward (B)
Battery positive (+) → Terminal 9 (LMHR) Battery negative (-) → Terminal 10 (LM+R)	Turns left (C)
Battery positive (+) → Terminal 10 (LM+R) Battery negative (-) → Terminal 9 (LMHR)	Turns right (D)

- (b) Inspect outer mirror heater operation.
 - (1) Apply battery voltage and check operation of the mirror face, as shown in the table and illustration.


Standard


Measurement Condition	Specified Condition
Battery positive (+) → Terminal 4 (HTR+) Battery negative (-) → Terminal 12 (HTR-)	Mirror surface temperature becomes higher

- (c) Inspect electrochromic outer mirror operation.
 - (1) Apply battery voltage and check operation of the mirror face, as shown in the table and illustration.

Standard

Measurement Condition	Specified Condition
Battery positive (+) → Terminal 7 (EC+) Battery negative (-) → Terminal 15 (EC-)	Mirror surface changes to dark

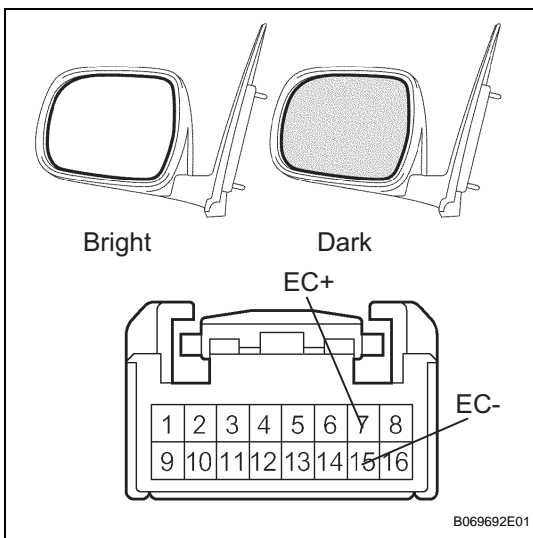

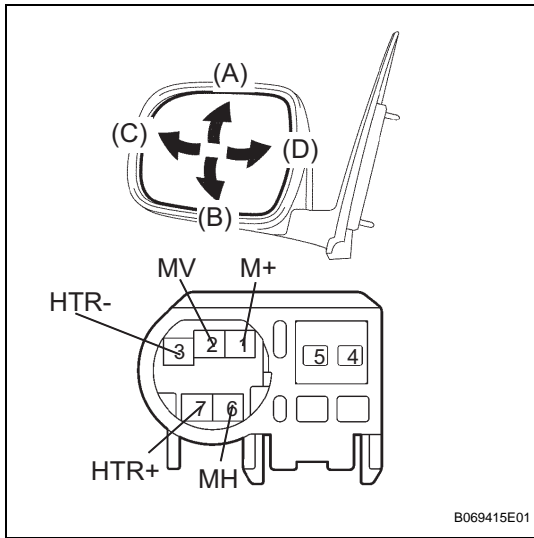

4. INSPECT OUTER REAR VIEW MIRROR ASSEMBLY LH (W/O MEMORY)

- (a) Inspect outer mirror motor operation.
 - (1) Apply battery voltage and check operation of the mirror face, as shown in the table and illustration.

Standard

Measurement Condition	Specified Condition
Battery positive (+) → Terminal 2 (MV) Battery negative (-) → Terminal 1 (M+)	Turns upward (A)
Battery positive (+) → Terminal 1 (M+) Battery negative (-) → Terminal 2 (MV)	Turns downward (B)
Battery positive (+) → Terminal 6 (MH) Battery negative (-) → Terminal 1 (M+)	Turns left (C)
Battery positive (+) → Terminal 1 (M+) Battery negative (-) → Terminal 6 (MH)	Turns right (D)

- (b) Inspect outer mirror heater operation.
 - (1) Apply battery voltage and check operation of the mirror face, as shown in the table and illustration.


Standard


Measurement Condition	Specified Condition
Battery positive (+) → Terminal 7 (HTR+) Battery negative (-) → Terminal 3 (HTR-)	Mirror surface temperature becomes higher

- (c) Inspect electrochromic outer mirror operation.
 - (1) Apply battery voltage and check operation of the mirror surface, as shown in the table and illustration.

Standard

Measurement Condition	Specified Condition
Battery positive (+) → Terminal 4 (EC+) Battery negative (-) → Terminal 5 (EC-)	Mirror surface changes to dark

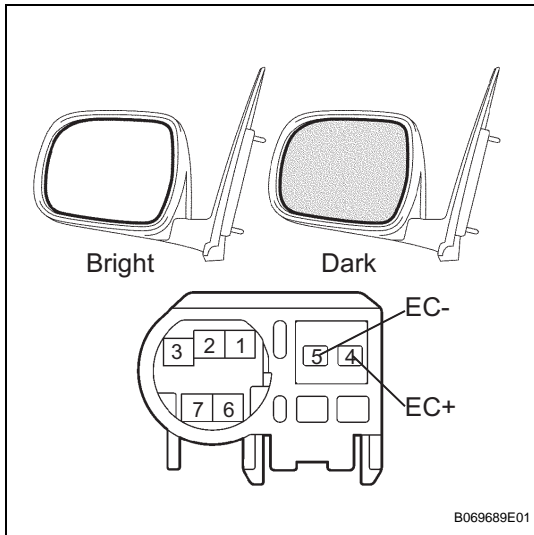

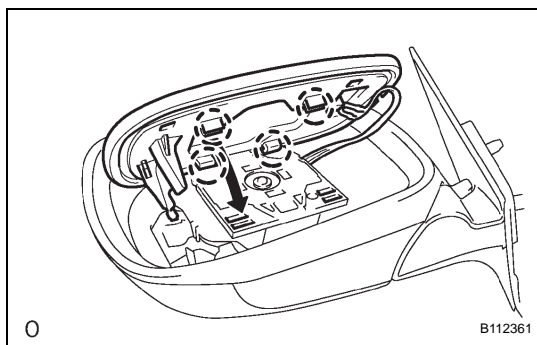

INSTALLATION

1. **INSTALL OUTER REAR VIEW MIRROR**
 - (a) Connect each connector.
 - (b) Engage the 2 claws on the upper part of the outer rear view mirror.
 - (c) Engage the 2 claws on the lower part of the outer rear view mirror as shown in the illustration, and install the outer rear view mirror.

2. **INSTALL OUTER REAR VIEW MIRROR ASSEMBLY**
 - (a) Install the outer rear view mirror assembly with the 3 bolts.
Torque: 8.0 N*m (82 kgf*cm, 71 in.*lbf)
 - (b) Connect the connector and install the clamp.

3. **REMOVE FRONT DOOR TRIM BOARD SUB-ASSEMBLY**

4. **REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH**

5. **REMOVE DOOR ARMREST COVER**

6. **REMOVE POWER WINDOW REGULATOR MASTER SWITCH ASSEMBLY**

7. **REMOVE FRONT DOOR INSIDE HANDLE BEZEL PLUG**

