

DTC

B1182/19

Short to GND in Driver Side Squib 2nd Step Circuit**DESCRIPTION**

The driver side squib 2nd step circuit consists of the center airbag sensor assembly, the spiral cable and the steering pad.

The circuit instructs the SRS to deploy when deployment conditions are met.


DTC B1182/19 is recorded when a short to ground is detected in the driver side squib 2nd step circuit.

DTC No.	DTC Detecting Condition	Trouble Area
B1182/19	<ul style="list-style-type: none"> Short circuit in driver side squib 2nd step wire harness (to ground) Driver side squib 2nd step malfunction Spiral cable malfunction Center airbag sensor assembly malfunction 	<ul style="list-style-type: none"> Steering pad (Driver side squib 2nd step) Spiral cable Center airbag sensor assembly Instrument panel wire

RS

WIRING DIAGRAM

See page [RS-241](#).

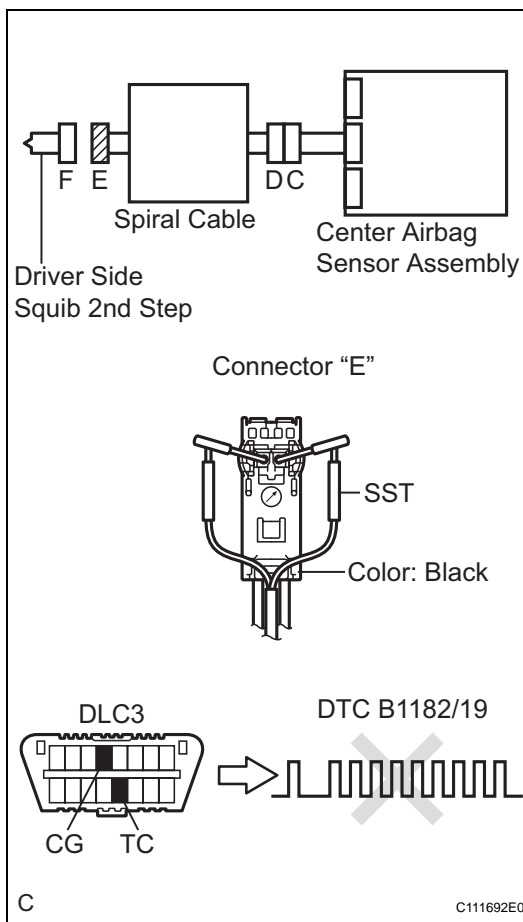1 CHECK STEERING PAD (DRIVER SIDE SQUIB 2ND STEP)

- Turn the ignition switch to the LOCK position.
- Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
- Disconnect the connectors from the steering pad.
- Connect the white wire side of SST (resistance 2.1 Ω) to the spiral cable.

CAUTION:

Never connect a tester to the steering pad (Driver side squib 2nd step) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

Do not forcibly insert the SST into the terminals of the connector when connecting.

Insert the SST straight into the terminals of the connector.

SST 09843-18060

- Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
- Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- Clear the DTCs stored in memory (See page [RS-32](#)).
- Turn the ignition switch to the LOCK position.
- Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- Check the DTCs (See page [RS-32](#)).

OK:

DTC B1182/19 is not output.

HINT:


Codes other than DTC B1182/19 may be output at this time, but they are not related to this check.

NG Go to step 2

OK

REPLACE STEERING PAD

2 CHECK DRIVER SIDE SQUIB 2ND STEP CIRCUIT

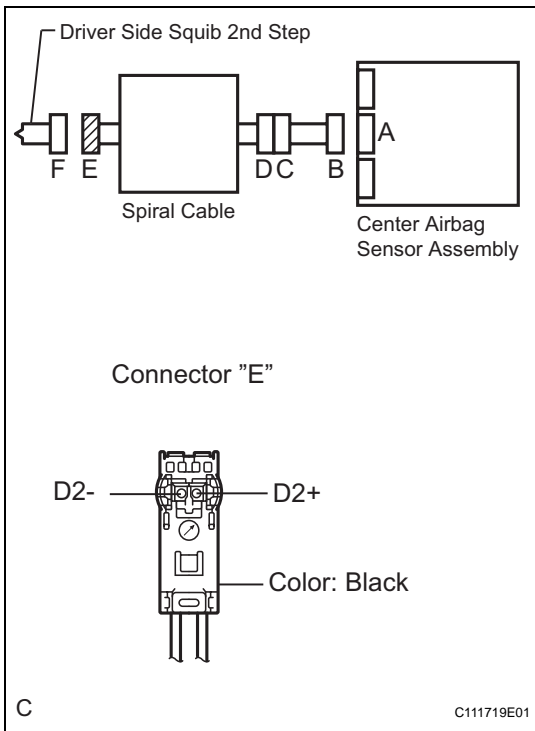

- (a) Disconnect the connector from the center airbag sensor assembly.
- (b) Measure the resistance according to the value(s) in the table below.

Resistance


Tester connection	Condition	Specified condition
D2+ - Body ground	Always	1 MΩ or higher
D2- - Body ground	Always	1 MΩ or higher

RS

NG Go to step 4

OK

3 CHECK CENTER AIRBAG SENSOR ASSEMBLY

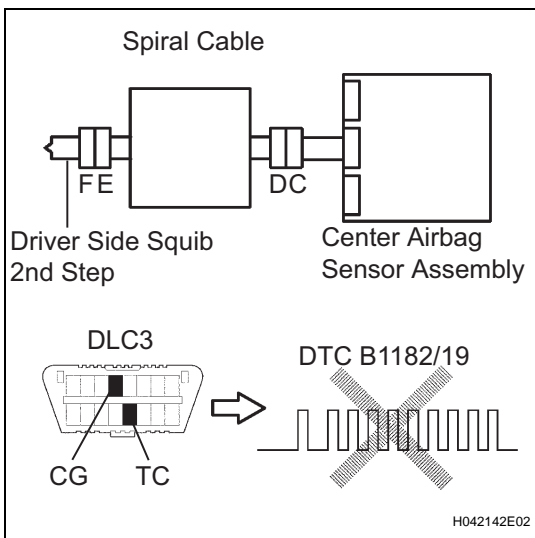

- (a) Connect the connectors to the steering pad and the center airbag sensor assembly.
- (b) Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
- (c) Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- (d) Clear the DTCs stored in memory (See page RS-32).
- (e) Turn the ignition switch to the LOCK position.
- (f) Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- (g) Check the DTCs (See page RS-32).

OK:

DTC B1182/19 is not output.

HINT:

Codes other than DTC B1182/19 may be output at this time, but they are not related to this check.

NG


REPLACE CENTER AIRBAG SENSOR ASSEMBLY

OK

USE SIMULATION METHOD TO CHECK

4 CHECK INSTRUMENT PANEL WIRE

RS

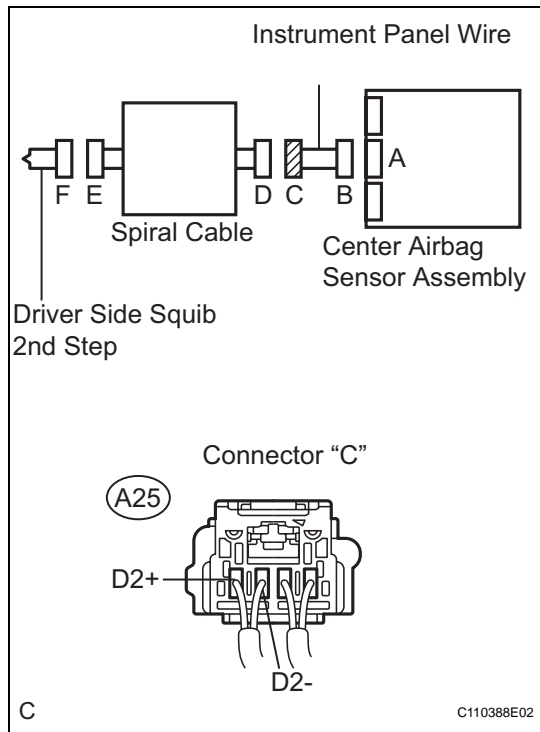

- (a) Disconnect the instrument panel wire connector from the spiral cable.
- (b) Measure the resistance according to the value(s) in the table below.

Resistance


Tester connection	Condition	Specified condition
A25-4 (D2+) - Body ground	Always	1 MΩ or higher
A25-3 (D2-) Body ground	Always	1 MΩ or higher

NG

REPAIR OR REPLACE INSTRUMENT PANEL WIRE

OK

5 CHECK SPIRAL CABLE

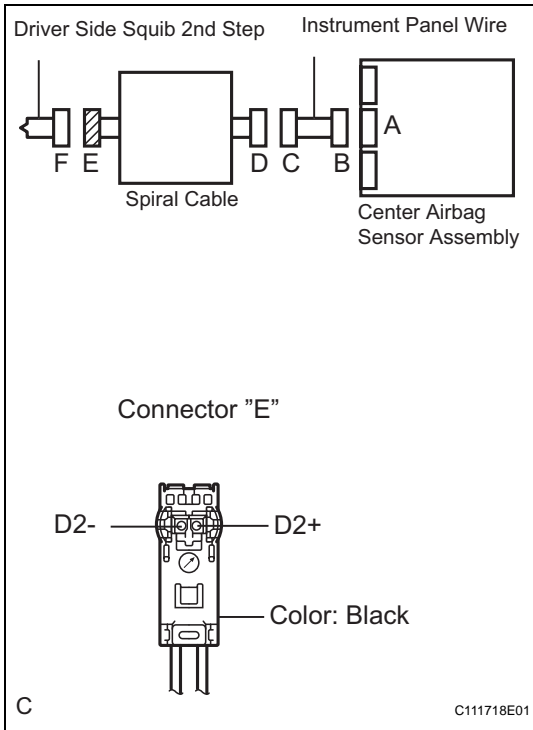

(a) Measure the resistance according to the value(s) in the table below.

Resistance

Tester connection	Condition	Specified condition
D2+ - Body ground	Always	1 MΩ or higher
D2- - Body ground	Always	1 MΩ or higher

NG → **REPLACE SPIRAL CABLE**

RS

OK

USE SIMULATION METHOD TO CHECK