

# WHEELS AND TIRES

## CONTENTS

N22AA--

<b>SERVICE ADJUSTMENT PROCEDURES</b> .....	<b>4</b>	<b>TROUBLESHOOTING</b> .....	<b>3</b>
Checking Tire Inflation Pressure .....	4	Bald Spots	
Checking Tire Wear .....	4	Cracked Treads	
Checking Wheel Runout .....	4	Feathered Edge	
<b>SPARE TIRE CARRIER</b> .....	<b>6</b>	Rapid Wear at Center	
<b>SPECIFICATIONS</b> .....	<b>2</b>	Rapid Wear at Shoulders	
General Specifications .....	2	Scalloped Wear	
Sealant and Adhesive .....	2	Wear on One Side	
Service Specifications .....	2	<b>WHEELS AND TIRES</b> .....	<b>4</b>
Torque Specifications .....	2		

## SPECIFICATIONS

## GENERAL SPECIFICATIONS

N22CA--

Items	2.6L Engine	3.0L Engine
Wheel		
Tire size	P225/75R-15	P235/75R-15
Wheel type	Steel type	Steel or Aluminum type
Wheel size	6JJ x 15	6JJ x 15
Amount of wheel offset mm (in.)	22 (.87)	22 (.87)
Tire inflation pressure kPa (psi)		
Front wheels	180 (26)	180 (26)
Rear wheels	240 (35)	240 (35)

## SERVICE SPECIFICATIONS

N22CB--

Items	Specifications
Limit	
Wheel runout	
Radial mm (in.)	2 (.08)
Lateral mm (in.)	2 (.08)
Tread depth of tire mm (in.)	1.6 (.06)

## TORQUE SPECIFICATIONS

N22CC--

Items	Nm	ft.lbs.
Hub nuts for steel wheel	100-120	72-87
Spare tire bracket to body	8-10	6-7






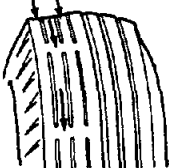
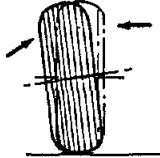
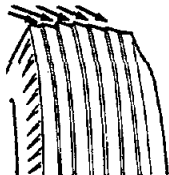
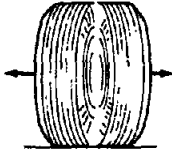
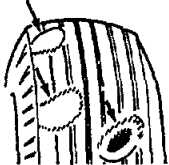
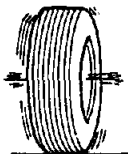
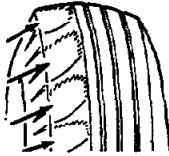
## SEALANT AND ADHESIVE

N22CD--

Items	Specified sealant and adhesive	Quantity
Spare tire bracket mounting bolts	3M ART Part No. 8634 or equivalent	As required

**TROUBLESHOOTING**

N22EA-

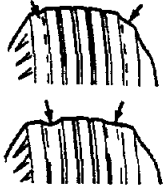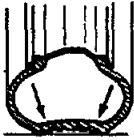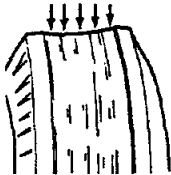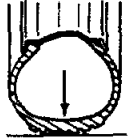Symptom	Probable cause	Remedy
Rapid wear at shoulders 	Under-inflation or lack of rotation 	Adjust the tire pressure
Rapid wear at center 	Over-inflation or lack of rotation 	
Cracked treads 	Under-inflation	
Wear on one side 	Excessive camber 	Inspect the camber
Feathered edge 	Incorrect toe 	Adjust the toe-in
Bald spots 	Unbalanced wheel 	Adjust the imbalanced wheels
Scalloped wear 	Lack of rotation of tires or worn or out-of-alignment suspension	Rotate the tires Inspect the front suspension alignment

11U0047

### SERVICE ADJUSTMENT PROCEDURES

#### CHECKING TIRE INFLATION PRESSURE N22FDAA

Check the inflation pressure of the tires.  
If it is not within the standard value, make the necessary adjustment.

#### CHECKING TIRE WEAR N22FBAB

Measure the tread depth of tires

**Limit : 1.6 mm (.06 in.)**

If the remaining tread depth is less than the limit, replace the tire.

**NOTE**


When the tread depth of tires is reduced to 1.6 mm (.06 in.) or less, wear indicators will appear.

#### CHECKING WHEEL RUNOUT N22FCAB


Jack up the vehicle so that the wheels are clear of the floor.  
While slowly turning the wheel, measure wheel runout with a dial indicator.

**Limit : Radial 2 mm (.08 in.)  
Lateral 2 mm (.08 in.)**

If wheel runout exceeds the limit, replace the wheel.

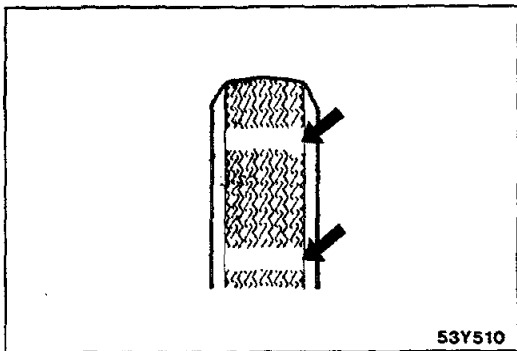

53Y510

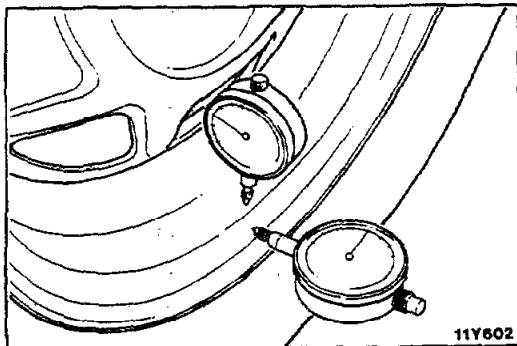


11Y602

### WHEELS AND TIRES REMOVAL AND INSTALLATION N22GA-

**Removal steps**

1. Center cap
2. Hub nut
- ◆◆ 3. Center cap holder
4. Balance weight
5. Steel wheel
6. Tire

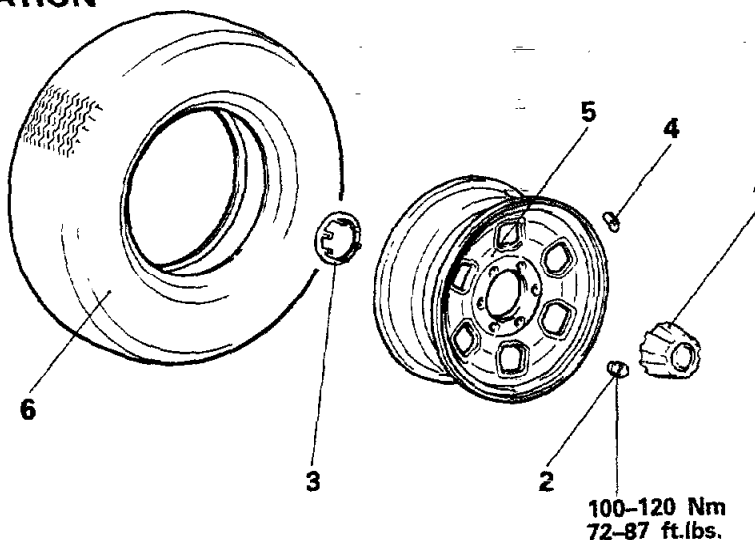


100-120 Nm  
72-87 ft.lbs.

**NOTE**  
**NOTE**

- (1) Reverse the removal procedures to reinstall.
- (2) ◆◆ : Refer to "Service Points of Installation".

11B0114

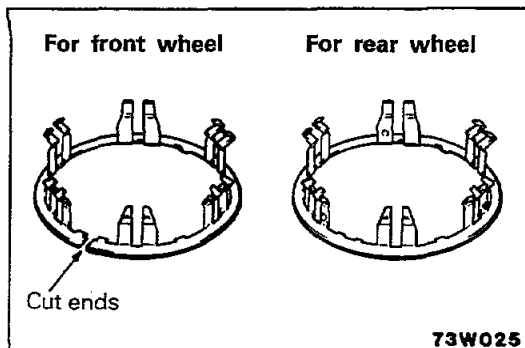


**SERVICE POINTS OF INSTALLATION**

N22GDAA

**3. INSTALLATION OF CENTER CAP HOLDER**


**NOTE**

Note that the center cap attaching metal fittings for the front and rear wheels are different in shape.

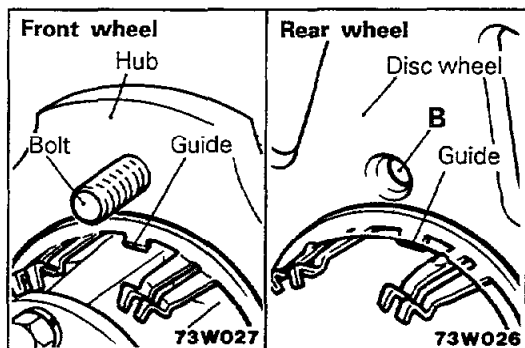

(1) Align any of the guides (three projections) inside the fitting with a bolt position, and install the fitting on the hub, while using care to make sure that the cut ends are not opened. (Front wheel)

(2) Align any of the guides (three projections) inside the fitting with the position of a wheel attaching hole (B) and install the fitting properly to the disc wheel from inside the disc wheel. (Rear wheel)

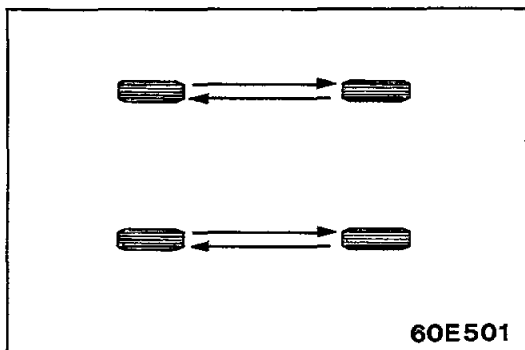

**WHEEL ROTATION**

N22GE-

Rotate the wheels in order to equalize tire wear in the patterns illustrated.


**TIRE CHAINS AND SNOW TIRES**

N22GGAB

1. Use tire chains only on rear wheels. Do not use tire chain on front wheels.
2. When using snow tires, use them on all four wheels for maneuverability and safety.

## SPARE TIRE CARRIER REMOVAL AND INSTALLATION

N22HA-

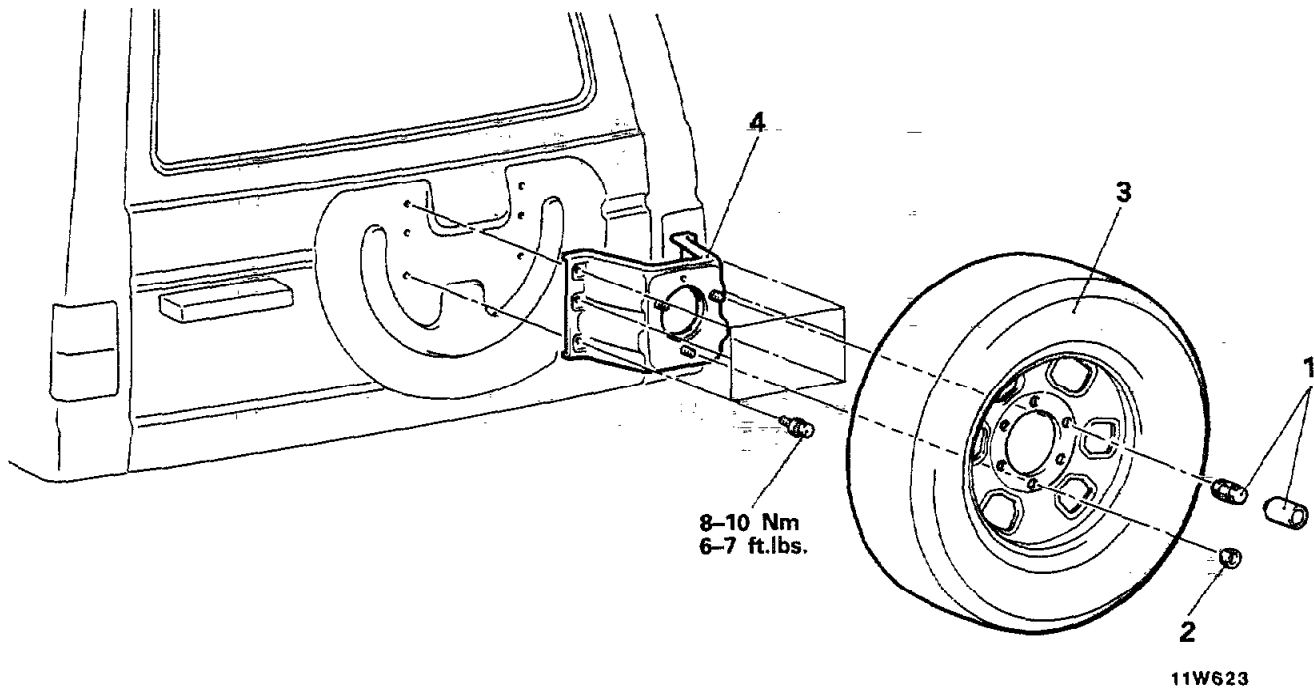

### Removal steps

1. Spare tire lock cylinder
2. Hub nut
3. Spare tire
- ◆◆ 4. Spare tire bracket

### NOTE

- (1) Reverse the removal procedures to reinstall.
- (2) ◆◆ : Refer to "Service Points of Installation".

## SERVICE POINTS OF INSTALLATION

N22HDAC

### 4. APPLICATION OF SEALANT TO SPARE TIRE BRACKET

Apply a coat of the specified sealant around the spare tire bracket mounting bolts.

**Specified sealant : 3M ART Part No. 8634 or equivalent**