

ENGINE CONTROL SYSTEM

SECTION **EC**

CONTENTS

	QG	
TRouble DIAGNOSIS - INDEX		10
Alphabetical & P No. Index for DTC		10
PRECAUTIONS		16
Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"		16
Precautions for On Board Diagnostic (OBD) System of Engine and A/T.....		16
Engine Fuel & Emission Control System		17
Wiring Diagrams and Trouble Diagnosis.....		19
PREPARATION		20
Special Service Tools		20
Commercial Service Tools		20
ENGINE AND EMISSION CONTROL OVERALL SYSTEM		21
Engine Control Component Parts Location.....		21
Circuit Diagram		25
System Diagram		26
Vacuum Hose Drawing.....		27
System Chart		28
ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION		29
Multiport Fuel Injection (MFI) System		29
Electronic Ignition (EI) System		31
Air Conditioning Cut Control.....		32
Fuel Cut Control (at no load & high engine speed)		33
Evaporative Emission System		33
Positive Crankcase Ventilation		37
BASIC SERVICE PROCEDURE		38
Fuel Pressure Release		38
Fuel Pressure Check		38
Fuel Pressure Regulator Check		39
Injector		39
How to Check Idle Speed and Ignition Timing.....		41
Preparation		42
Inspection Procedure.....		45
Idle Air Volume Learning		55
ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION		57
Introduction		57
Two Trip Detection Logic.....		57
Emission-related Diagnostic Information		58
NATS (Nissan Anti-theft System)		72
Malfunction Indicator (MI)		72
OBD System Operation Chart (With Euro-OBD Models Only).....		76
CONSULT-II		81
Generic Scan Tool (GST)		92
TRouble DIAGNOSIS - INTRODUCTION		94
Introduction		94
Work Flow.....		96
TRouble DIAGNOSIS - BASIC INSPECTION		98
Basic Inspection.....		98
TRouble DIAGNOSIS - GENERAL DESCRIPTION		122
DTC Inspection Priority Chart.....		122
Fail-safe Chart		123
Symptom Matrix Chart.....		124
CONSULT-II Reference Value in Data Monitor Mode		128
Major Sensor Reference Graph in Data Monitor Mode		130
ECM Terminals and Reference Value		132
TRouble DIAGNOSIS - SPECIFICATION VALUE ..		140
Description		140
Testing Condition		140
Inspection Procedure.....		140
Diagnostic Procedure		141
TRouble DIAGNOSIS FOR INTERMITTENT INCIDENT		144
Description		144
Diagnostic Procedure		144
TRouble DIAGNOSIS FOR POWER SUPPLY		145
Main Power Supply and Ground Circuit.....		145
DTC P0100 MASS AIR FLOW SENSOR (MAFS)		152
Component Description		152

CONTENTS (Cont'd)

CONSULT-II Reference Value in Data Monitor Mode	152	DTC P0131 HEATED OXYGEN SENSOR 1 (FRONT) (LEAN SHIFT MONITORING)	183
ECM Terminals and Reference Value	152	Component Description	183
On Board Diagnosis Logic.....	152	CONSULT-II Reference Value in Data Monitor Mode	183
Fail-safe Mode	153	ECM Terminals and Reference Value	183
DTC Confirmation Procedure	153	On Board Diagnosis Logic.....	184
Wiring Diagram	154	DTC Confirmation Procedure	184
Diagnostic Procedure	155	Overall Function Check	185
Component Inspection.....	157	Diagnostic Procedure	185
DTC P0110 INTAKE AIR TEMPERATURE SENSOR	158	Component Inspection.....	187
Component Description	158	DTC P0132 HEATED OXYGEN SENSOR 1 (FRONT) (RICH SHIFT MONITORING)	189
On Board Diagnosis Logic.....	158	Component Description	189
DTC Confirmation Procedure	158	CONSULT-II Reference Value in Data Monitor Mode	189
Wiring Diagram	160	ECM Terminals and Reference Value	189
Diagnostic Procedure	161	On Board Diagnosis Logic.....	190
Component Inspection.....	162	DTC Confirmation Procedure	190
DTC P0115 ENGINE COOLANT TEMPERATURE SENSOR (ECTS)	163	Overall Function Check	191
Component Description	163	Diagnostic Procedure	191
CONSULT-II Reference Value in Data Monitor Mode	163	Component Inspection.....	193
On Board Diagnosis Logic.....	163	DTC P0133 HEATED OXYGEN SENSOR 1 (FRONT)	195
Fail-safe Mode	164	Component Description	195
DTC Confirmation Procedure	164	CONSULT-II Reference Value in Data Monitor Mode	195
Wiring Diagram	165	ECM Terminals and Reference Value	195
Diagnostic Procedure	166	On Board Diagnosis Logic.....	196
Component Inspection.....	167	DTC Confirmation Procedure	196
DTC P0120 THROTTLE POSITION SENSOR	168	Overall Function Check	197
Component Description	168	Wiring Diagram	198
CONSULT-II Reference Value in Data Monitor Mode	168	Diagnostic Procedure	199
ECM Terminals and Reference Value	169	Component Inspection.....	201
On Board Diagnosis Logic.....	169	DTC P0134 HEATED OXYGEN SENSOR 1 (FRONT) (HIGH VOLTAGE)	203
Fail-safe Mode	169	Component Description	203
DTC Confirmation Procedure	169	CONSULT-II Reference Value in Data Monitor Mode	203
Wiring Diagram	171	ECM Terminals and Reference Value	203
Diagnostic Procedure	172	On Board Diagnosis Logic.....	204
Component Inspection.....	174	DTC Confirmation Procedure	204
DTC P0130 HEATED OXYGEN SENSOR 1 (FRONT) (CIRCUIT)	176	Wiring Diagram	205
Component Description	176	Diagnostic Procedure	206
CONSULT-II Reference Value in Data Monitor Mode	176	Component Inspection.....	207
ECM Terminals and Reference Value	176	DTC P0135 HEATED OXYGEN SENSOR 1 (FRONT) HEATER	209
On Board Diagnosis Logic.....	177	Description	209
DTC Confirmation Procedure	177	CONSULT-II Reference Value in Data Monitor Mode	209
Overall Function Check	178	ECM Terminals and Reference Value	209
Wiring Diagram	179	On Board Diagnosis Logic.....	209
Diagnostic Procedure	180		
Component Inspection.....	181		

CONTENTS (Cont'd)

DTC Confirmation Procedure	210	DTC P0141 HEATED OXYGEN SENSOR 2 HEATER (REAR)	243
Wiring Diagram	211	Description	243
Diagnostic Procedure	212	CONSULT-II Reference Value in Data Monitor Mode	243
Component Inspection	213	ECM Terminals and Reference Value	243
DTC P0137 HEATED OXYGEN SENSOR 2 (REAR) (MIN. VOLTAGE MONITORING)	214	On Board Diagnosis Logic	244
Component Description	214	DTC Confirmation Procedure	244
CONSULT-II Reference Value in Data Monitor Mode	214	Wiring Diagram	245
ECM Terminals and Reference Value	214	Diagnostic Procedure	246
On Board Diagnosis Logic	214	Component Inspection	247
DTC Confirmation Procedure	215	DTC P0171 FUEL INJECTION SYSTEM FUNCTION (LEAN SIDE)	248
Overall Function Check	216	On Board Diagnosis Logic	248
Wiring Diagram	217	DTC Confirmation Procedure	248
Diagnostic Procedure	218	Wiring Diagram	250
Component Inspection	220	Diagnostic Procedure	251
DTC P0138 HEATED OXYGEN SENSOR 2 (REAR) (MAX. VOLTAGE MONITORING)	222	DTC P0172 FUEL INJECTION SYSTEM FUNCTION (RICH SIDE)	255
Component Description	222	On Board Diagnosis Logic	255
CONSULT-II Reference Value in Data Monitor Mode	222	DTC Confirmation Procedure	255
ECM Terminals and Reference Value	222	Wiring Diagram	257
On Board Diagnosis Logic	222	Diagnostic Procedure	258
DTC Confirmation Procedure	223	DTC P0300 - P0304 NO. 4 - 1 CYLINDER MISFIRE, MULTIPLE CYLINDER MISFIRE	262
Overall Function Check	224	On Board Diagnosis Logic	262
Wiring Diagram	225	DTC Confirmation Procedure	262
Diagnostic Procedure	226	Diagnostic Procedure	263
Component Inspection	227	DTC P0325 KNOCK SENSOR (KS)	268
DTC P0139 HEATED OXYGEN SENSOR 2 (REAR)	229	Component Description	268
Component Description	229	ECM Terminals and Reference Value	268
CONSULT-II Reference Value in Data Monitor Mode	229	On Board Diagnosis Logic	268
ECM Terminals and Reference Value	229	DTC Confirmation Procedure	268
On Board Diagnosis Logic	229	Wiring Diagram	269
DTC Confirmation Procedure	230	Diagnostic Procedure	270
Overall Function Check	231	Component Inspection	271
Wiring Diagram	232	DTC P0335 CRANKSHAFT POSITION SENSOR (POS)	272
Diagnostic Procedure	233	Component Description	272
Component Inspection	235	ECM Terminals and Reference Value	272
DTC P0140 HEATED OXYGEN SENSOR 2 (REAR) (HIGH VOLTAGE)	237	On Board Diagnosis Logic	273
Component Description	237	DTC Confirmation Procedure	273
CONSULT-II Reference Value in Data Monitor Mode	237	Wiring Diagram	274
ECM Terminals and Reference Value	237	Diagnostic Procedure	275
On Board Diagnosis Logic	237	Component Inspection	277
DTC Confirmation Procedure	238	DTC P0340 CAMSHAFT POSITION SENSOR (CMPS) (PHASE)	278
Overall Function Check	238	Component Description	278
Wiring Diagram	239	ECM Terminals and Reference Value	278
Diagnostic Procedure	240	On Board Diagnosis Logic	279
Component Inspection	241	DTC Confirmation Procedure	279
		Wiring Diagram	280

CONTENTS (Cont'd)

Diagnostic Procedure	281	ECM Terminals and Reference Value	314
Component Inspection.....	284	On Board Diagnosis Logic.....	314
DTC P0400 EGR FUNCTION (CLOSED) (WHERE FITTED)	285	DTC Confirmation Procedure	314
Description	285	Wiring Diagram	315
CONSULT-II Reference Value in Data Monitor		Diagnostic Procedure	316
Mode	286	Component Inspection.....	320
ECM Terminals and Reference Value	286	DTC P0510 CLOSED THROTTLE POSITION SWITCH (WHERE FITTED)	321
On Board Diagnosis Logic.....	286	Component Description	321
DTC Confirmation Procedure	287	CONSULT-II Reference Value in Data Monitor	
Wiring Diagram	289	Mode	321
Diagnostic Procedure	290	ECM Terminals and Reference Value	321
Component Inspection.....	292	On Board Diagnosis Logic.....	321
DTC P0403 EGR VOLUME CONTROL VALVE (CIRCUIT)	293	DTC Confirmation Procedure	321
Description	293	Overall Function Check	322
CONSULT-II Reference Value in Data Monitor		Wiring Diagram	323
Mode	294	Diagnostic Procedure	324
ECM Terminals and Reference Value	294	Component Inspection.....	325
On Board Diagnosis Logic.....	294	DTC P0605 ECM	327
DTC Confirmation Procedure	294	Component Description	327
Wiring Diagram	296	On Board Diagnosis Logic.....	327
Diagnostic Procedure	297	DTC Confirmation Procedure	327
Component Inspection.....	298	Diagnostic Procedure	328
DTC P0420 THREE WAY CATALYST FUNCTION	299	DTC P1111 INTAKE VALVE TIMING CONTROL SOLENOID VALVE	329
On Board Diagnosis Logic.....	299	Component Description	329
DTC Confirmation Procedure	299	Operation	329
Overall Function Check	300	CONSULT-II Reference Value in Data Monitor	
Diagnostic Procedure	300	Mode	329
DTC P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE (CIRCUIT)	304	ECM Terminals and Reference Value	329
Description	304	On Board Diagnosis Logic.....	329
CONSULT-II Reference Value in Data Monitor		DTC Confirmation Procedure	330
Mode	304	Wiring Diagram	331
ECM Terminals and Reference Value	305	Diagnostic Procedure	332
On Board Diagnosis Logic.....	305	Component Inspection.....	333
DTC Confirmation Procedure	305	DTC P1217 OVERHEAT (COOLING SYSTEM)	334
Wiring Diagram	306	System Description.....	334
Diagnostic Procedure	307	CONSULT-II Reference Value in Data Monitor	
Component Inspection.....	308	Mode	334
DTC P0500 VEHICLE SPEED SENSOR (VSS)	309	ECM Terminals and Reference Value	335
Component Description	309	On Board Diagnosis Logic.....	335
ECM Terminals and Reference Value	309	Overall Function Check	336
On Board Diagnosis Logic.....	309	Wiring Diagram	337
DTC Confirmation Procedure	309	Diagnostic Procedure	339
Wiring Diagram	311	Main 12 Causes of Overheating.....	345
Diagnostic Procedure	312	Component Inspection.....	345
DTC P0505 IDLE AIR CONTROL VALVE (IACV) - AUXILIARY AIR CONTROL (AAC) VALVE	313	DTC P1401 EGR TEMPERATURE SENSOR (WHERE FITTED)	347
Description	313	Component Description	347
CONSULT-II Reference Value in Data Monitor		On Board Diagnosis Logic.....	347
Mode	314	DTC Confirmation Procedure	347
		Wiring Diagram	350

CONTENTS (Cont'd)

Diagnostic Procedure	351	Component Inspection.....	382
Component Inspection.....	352	HEATED OXYGEN SENSOR 2 (REAR)	383
DTC P1402 EGR FUNCTION (OPEN) (WHERE FITTED)	353	Component Description	383
Description	353	CONSULT-II Reference Value in Data Monitor	
CONSULT-II Reference Value in Data Monitor		Mode	383
Mode	354	ECM Terminals and Reference Value	383
ECM Terminals and Reference Value	354	Wiring Diagram	384
On Board Diagnosis Logic.....	354	Diagnostic Procedure	385
DTC Confirmation Procedure	355	Component Inspection.....	387
Wiring Diagram	357	HEATED OXYGEN SENSOR 2 HEATER (REAR)	389
Diagnostic Procedure	358	Description	389
Component Inspection.....	359	CONSULT-II Reference Value in Data Monitor	
DTC P1605 A/T DIAGNOSIS COMMUNICATION LINE	361	Mode	389
System Description.....	361	ECM Terminals and Reference Value	389
ECM Terminals and Reference Value	361	Wiring Diagram	390
On Board Diagnosis Logic.....	361	Diagnostic Procedure	391
DTC Confirmation Procedure	361	Component Inspection.....	393
Wiring Diagram	362	CRANKSHAFT POSITION SENSOR (POS)	394
Diagnostic Procedure	363	Component Description	394
DTC P1706 PARK/NEUTRAL POSITION (PNP) SWITCH	364	ECM Terminals and Reference Value	394
Component Description	364	Wiring Diagram	395
CONSULT-II Reference Value in Data Monitor		Diagnostic Procedure	396
Mode	364	Component Inspection.....	399
ECM Terminals and Reference Value	364	EGR VOLUME CONTROL SYSTEM (WHERE FITTED)	400
On Board Diagnosis Logic.....	364	Description	400
DTC Confirmation Procedure	364	CONSULT-II Reference Value in Data Monitor	
Overall Function Check	365	Mode	401
Wiring Diagram	366	ECM Terminals and Reference Value	402
Diagnostic Procedure	367	Wiring Diagram	403
INTAKE AIR TEMPERATURE SENSOR	369	Diagnostic Procedure	404
Component Description	369	Component Inspection.....	409
Wiring Diagram	370	EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE	411
Diagnostic Procedure	371	Description	411
Component Inspection.....	372	CONSULT-II Reference Value in Data Monitor	
HEATED OXYGEN SENSOR 1 (FRONT)	373	Mode	411
Component Description	373	ECM Terminals and Reference Value	412
CONSULT-II Reference Value in Data Monitor		Wiring Diagram	413
Mode	373	Diagnostic Procedure	414
ECM Terminals and Reference Value	373	Component Inspection.....	417
Wiring Diagram	374	IDLE AIR CONTROL VALVE (IACV) - AUXILIARY AIR CONTROL	418
Diagnostic Procedure	375	Description	418
Component Inspection.....	377	CONSULT-II Reference Value in Data Monitor	
HEATED OXYGEN SENSOR 1 HEATER (FRONT)	379	Mode	419
Description	379	ECM Terminals and Reference Value	419
CONSULT-II Reference Value in Data Monitor		Wiring Diagram	420
Mode	379	Diagnostic Procedure	421
ECM Terminals and Reference Value	379	Component Inspection.....	425
Wiring Diagram	380		
Diagnostic Procedure	381		

CONTENTS (Cont'd)

CLOSED THROTTLE POSITION SWITCH (WHERE FITTED)	426
Component Description	426
ECM Terminals and Reference Value	426
Wiring Diagram	427
Diagnostic Procedure	428
Component Inspection.....	431
INTAKE VALVE TIMING CONTROL SOLENOID VALVE	432
Component Description	432
Operation	432
CONSULT-II Reference Value in Data Monitor Mode	432
ECM Terminals and Reference Value	432
Wiring Diagram	433
Diagnostic Procedure	434
Component Inspection.....	436
A/T COMMUNICATION LINE	437
System Description	437
Wiring Diagram	438
Diagnostic Procedure	439
PARK/NEUTRAL POSITION (PNP) SWITCH	441
Component Description	441
CONSULT-II Reference Value in Data Monitor Mode	441
ECM Terminals and Reference Value	441
Wiring Diagram	442
Diagnostic Procedure	443
INJECTOR	446
Component Description	446
CONSULT-II Reference Value in Data Monitor Mode	446
ECM Terminals and Reference Value	446
Wiring Diagram	447
Diagnostic Procedure	448
Component Inspection.....	450
IGNITION SIGNAL	451
Component Description	451
CONSULT-II Reference Value in Data Monitor Mode	451
ECM Terminals and Reference Value	451
Wiring Diagram	452
Diagnostic Procedure	454
Component Inspection.....	458
START SIGNAL	460
CONSULT-II Reference Value in Data Monitor Mode	460
ECM Terminals and Reference Value	460
Wiring Diagram	461
Diagnostic Procedure	462
FUEL PUMP	464
System Description.....	464
Component Description	464
CONSULT-II Reference Value in Data Monitor Mode	464
ECM Terminals and Reference Value	465
Wiring Diagram	466
Diagnostic Procedure	467
Component Inspection.....	469
POWER STEERING OIL PRESSURE SWITCH	470
Component Description	470
CONSULT-II Reference Value in Data Monitor Mode	470
ECM Terminals and Reference Value	470
Wiring Diagram	471
Diagnostic Procedure	472
Component Inspection.....	473
REFRIGERANT PRESSURE SENSOR	475
Description	475
ECM Terminals and Reference Value	475
Wiring Diagram	476
Diagnostic Procedure	477
ELECTRICAL LOAD SIGNAL	480
CONSULT-II Reference Value in Data Monitor Mode	480
ECM Terminals and Reference Value	480
Wiring Diagram	481
Diagnostic Procedure - Load Signal -	483
Diagnostic Procedure - Heater Control Panel (Fan Switch) -	487
MI & DATA LINK CONNECTORS	488
Wiring Diagram	488
SERVICE DATA AND SPECIFICATIONS (SDS)	489
Fuel Pressure Regulator.....	489
Idle Speed and Ignition Timing.....	489
Mass Air Flow Sensor.....	489
Intake Air Temperature Sensor.....	489
Engine Coolant Temperature Sensor	489
Throttle Position Sensor	489
Heated Oxygen Sensor 1 Heater (Front).....	489
Heated Oxygen Sensor 2 Heater (Rear).....	489
EGR Volume Control Valve (Where Fitted).....	490
EGR Temperature Sensor (Where Fitted).....	490
EVAP Canister Purge Volume Control Valve	490
IACV-AAC Valve	490
Injector	490
Ignition Coil with Power Transistor	490
Condenser	490
Fuel Pump	490
Crankshaft Position Sensor (POS).....	491
Camshaft Position Sensor (PHASE)	491

CONTENTS (Cont'd)

	YD	
TRouble DIAGNOSIS - INDEX	492	
Alphabetical & P No. Index for DTC	492	
PRECAUTIONS	494	
Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	494	
Engine Fuel & Emission Control System	495	
Precautions	496	
Wiring Diagrams and Trouble Diagnosis	497	
PREPARATION	498	
Special Service Tools	498	
ENGINE AND EMISSION CONTROL OVERALL SYSTEM	499	
Engine Control Component Parts Location	499	
Circuit Diagram	502	
System Diagram	503	
System Chart	504	
ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION	505	
Fuel Injection Control System	505	
Fuel Injection Timing Control System	506	
Air Conditioning Cut Control	507	
Fuel Cut Control (at no load & high engine speed)	507	
Crankcase Ventilation System	508	
BASIC SERVICE PROCEDURE	509	
Injection Tube and Injection Nozzle	509	
Electronic Control Fuel Injection Pump	513	
Fuel Filter	520	
ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION	522	
DTC and MI Detection Logic	522	
Diagnostic Trouble Code (DTC)	522	
Malfunction Indicator (MI)	523	
CONSULT-II	527	
TRouble DIAGNOSIS - INTRODUCTION	532	
Introduction	532	
Work Flow	534	
TRouble DIAGNOSIS - BASIC INSPECTION	536	
Basic Inspection	536	
TRouble DIAGNOSIS - GENERAL DESCRIPTION	541	
Symptom Matrix Chart	541	
CONSULT-II Reference Value in Data Monitor Mode	551	
Major Sensor Reference Graph in Data Monitor Mode	553	
ECM Terminals and Reference Value	554	
TRouble DIAGNOSIS FOR INTERMITTENT INCIDENT	559	
Description	559	
Diagnostic Procedure	559	
TRouble DIAGNOSIS FOR POWER SUPPLY	560	
Main Power Supply and Ground Circuit	560	
DTC P0100 MASS AIR FLOW SEN	566	
Component Description	566	
CONSULT-II Reference Value in Data Monitor Mode	566	
ECM Terminals and Reference Value	566	
On Board Diagnosis Logic	566	
DTC Confirmation Procedure	566	
Wiring Diagram	568	
Diagnostic Procedure	569	
DTC P0115 COOLANT TEMP SEN	572	
Description	572	
On Board Diagnosis Logic	572	
DTC Confirmation Procedure	572	
Wiring Diagram	574	
Diagnostic Procedure	575	
DTC P0120 ACCEL POS SENSOR	577	
Description	577	
CONSULT-II Reference Value in Data Monitor Mode	577	
ECM Terminals and Reference Value	577	
On Board Diagnosis Logic	578	
DTC Confirmation Procedure	578	
Wiring Diagram	579	
Diagnostic Procedure	580	
DTC P0335 CRANK POS SEN (TDC)	587	
Description	587	
CONSULT-II Reference Value in Data Monitor Mode	587	
ECM Terminals and Reference Value	587	
On Board Diagnosis Logic	587	
DTC Confirmation Procedure	588	
Wiring Diagram	589	
Diagnostic Procedure	590	
DTC P0500 VEHICLE SPEED SEN	593	
Description	593	
ECM Terminals and Reference Value	593	
On Board Diagnosis Logic	593	
Overall Function Check	593	
Wiring Diagram	595	
Diagnostic Procedure	596	
DTC P0571 BRAKE SW	597	
Description	597	
ECM Terminals and Reference Value	597	
On Board Diagnosis Logic	597	
DTC Confirmation Procedure	597	
Wiring Diagram	599	
Diagnostic Procedure	600	
DTC P1107 ECM 10	604	
Description	604	
On Board Diagnosis Logic	604	

CONTENTS (Cont'd)

DTC Confirmation Procedure	604	ECM Terminals and Reference Value	647
Diagnostic Procedure	605	On Board Diagnosis Logic.....	647
DTC P1180 P9.FUEL TEMP SEN	606	DTC Confirmation Procedure	647
Description	606	Wiring Diagram	649
CONSULT-II Reference Value in Data Monitor		Diagnostic Procedure	650
Mode	606	DTC P1341 P1.CAM POS SEN	652
ECM Terminals and Reference Value	607	Description	652
On Board Diagnosis Logic.....	607	CONSULT-II Reference Value in Data Monitor	
DTC Confirmation Procedure	607	Mode	652
Wiring Diagram	609	ECM Terminals and Reference Value	653
Diagnostic Procedure	610	On Board Diagnosis Logic.....	653
DTC P1202 FUEL CUT SYSTEM2	612	DTC Confirmation Procedure	653
Description	612	Wiring Diagram	655
CONSULT-II Reference Value in Data Monitor		Diagnostic Procedure	656
Mode	612	DTC P1600 P3.PUMP COMM LINE	658
ECM Terminals and Reference Value	613	Description	658
On Board Diagnosis Logic.....	613	CONSULT-II Reference Value in Data Monitor	
DTC Confirmation Procedure	613	Mode	658
Wiring Diagram	615	ECM Terminals and Reference Value	659
Diagnostic Procedure	616	On Board Diagnosis Logic.....	659
DTC P1217 OVER HEAT	618	DTC Confirmation Procedure	659
Description	618	Wiring Diagram	661
CONSULT-II Reference Value in Data Monitor		Diagnostic Procedure	662
Mode	618	DTC P1603 ECM 12, DTC P1607 ECM 2	664
ECM Terminals and Reference Value	618	Description	664
On Board Diagnosis Logic.....	619	On Board Diagnosis Logic.....	664
Overall Function Check	620	DTC Confirmation Procedure	664
Wiring Diagram	621	Diagnostic Procedure	665
Diagnostic Procedure	622	DTC P1620 ECM RLY	666
Main 12 Causes of Overheating.....	633	ECM Terminals and Reference Value	666
DTC P1241 P7.F/INJ TIMG FB	634	On Board Diagnosis Logic.....	666
Description	634	DTC Confirmation Procedure	666
CONSULT-II Reference Value in Data Monitor		Wiring Diagram	667
Mode	634	Diagnostic Procedure	668
ECM Terminals and Reference Value	635	DTC P1621 ECM 15	670
On Board Diagnosis Logic.....	635	Description	670
DTC Confirmation Procedure	635	On Board Diagnosis Logic.....	670
Wiring Diagram	637	DTC Confirmation Procedure	670
Diagnostic Procedure	638	Diagnostic Procedure	671
DTC P1251 P4.SPILL/V CIRC	640	DTC P1660 BATTERY VOLTAGE	672
Description	640	On Board Diagnosis Logic.....	672
CONSULT-II Reference Value in Data Monitor		DTC Confirmation Procedure	672
Mode	640	Diagnostic Procedure	672
ECM Terminals and Reference Value	641	DTC P1690 P5.PUMP C/MODULE	674
On Board Diagnosis Logic.....	641	Description	674
DTC Confirmation Procedure	641	CONSULT-II Reference Value in Data Monitor	
Wiring Diagram	643	Mode	674
Diagnostic Procedure	644	ECM Terminals and Reference Value	675
DTC P1337 P2.DTC PULSE SIG	646	On Board Diagnosis Logic.....	675
Description	646	DTC Confirmation Procedure	675
CONSULT-II Reference Value in Data Monitor		Diagnostic Procedure	676
Mode	646		

CONTENTS (Cont'd)

GLOW CONTROL SYSTEM	677	CONSULT-II Reference Value in Data Monitor	
Description	677	Mode	696
ECM Terminals and Reference Value	678	ECM Terminals and Reference Value	696
Wiring Diagram	679	Wiring Diagram	697
Diagnostic Procedure	680	Diagnostic Procedure	698
EGR VOLUME CONTROL SYSTEM	686	AIR CONDITIONER CONTROL	700
Description	686	Wiring Diagram	700
CONSULT-II Reference Value in Data Monitor		MI & DATA LINK CONNECTORS	701
Mode	687	Wiring Diagram	701
ECM Terminals and Reference Value	687	SERVICE DATA AND SPECIFICATIONS (SDS)	702
Wiring Diagram	688	General Specifications	702
Diagnostic Procedure	689	Injection Nozzle	702
START SIGNAL	693	Engine Coolant Temperature Sensor	702
Wiring Diagram	693	Crankshaft Position Sensor (TDC)	702
Diagnostic Procedure	694	Glow Plug	702
PARK/NEUTRAL POSITION (PNP) SWITCH		Accelerator Position Sensor	702
(WHERE FITTED)	696	EGR Volume Control Valve	702
Description	696		

Alphabetical & P No. Index for DTC

Alphabetical & P No. Index for DTC

NJEC0001

Check if the vehicle is a model with the Euro-OBd (E-OBd) system or not by referring to the "Type approval number" on the identification plate.
Refer to GI-40, "IDENTIFICATION PLATE".

Type approval number	Model
Available	With Euro-OBd system
Not available	Without Euro-OBd system

MODELS WITH EURO-OBd SYSTEM

NJEC0001S03

Alphabetical Index for DTC

NJEC0001S0301

Items (CONSULT-II screen terms)	DTC*6		Reference page
	CONSULT-II GST*2	ECM*1*7	
Unable to access ECM	—	—	EC-123
AIR TEMP SEN/CIRC	P0110	0110	EC-158
A/T 1ST GR FNCTN	P0731	0731	AT-202
A/T 2ND GR FNCTN	P0732	0732	AT-209
A/T 3RD GR FNCTN	P0733	0733	AT-215
A/T 4TH GR FNCTN	P0734	0734	AT-221
A/T DIAG COMM LINE	P1605	1605	EC-361
ATF TEMP SEN/CIRC	P0710	0710	AT-187
CMP SEN/CIRCUIT	P0340	0340	EC-278
CLOSED TP SW/CIRC*7	P0510	0510	EC-321
COOLANT T SEN/CIRC*3	P0115	0115	EC-163
CKP SEN/CIRCUIT	P0335	0335	EC-272
CYL 1 MISFIRE	P0301	0301	EC-262
CYL 2 MISFIRE	P0302	0302	EC-262
CYL 3 MISFIRE	P0303	0303	EC-262
CYL 4 MISFIRE	P0304	0304	EC-262
ECM	P0605	0605	EC-327
EGR SYSTEM*7	P0400	0400	EC-285
EGR SYSTEM*7	P1402	1402	EC-353
EGR TEMP SEN/CIRC*7	P1401	1401	EC-347
EGR VOL CON/V CIR*7	P0403	0403	EC-293
ENGINE SPEED SIG	P0725	0725	AT-198
ENG OVER TEMP	P1217	1217	EC-334
FUEL SYS-LEAN/BK1	P0171	0171	EC-248
FUEL SYS-RICH/BK1	P0172	0172	EC-255
HO2S1 HTR (B1)	P0135	0135	EC-209
HO2S1 (B1)	P0130	0130	EC-176
HO2S1 (B1)	P0131	0131	EC-183

TROUBLE DIAGNOSIS — INDEX

QG

Alphabetical & P No. Index for DTC (Cont'd)

Items (CONSULT-II screen terms)	DTC*6		Reference page
	CONSULT-II GST*2	ECM*1*7	
HO2S1 (B1)	P0132	0132	EC-189
HO2S1 (B1)	P0133	0133	EC-195
HO2S1 (B1)	P0134	0134	EC-203
HO2S2 (B1)	P0137	0137	EC-214
HO2S2 (B1)	P0138	0138	EC-222
HO2S2 (B1)	P0139	0139	EC-229
HO2S2 (B1)	P0140	0140	EC-237
HO2S2 HTR (B1)	P0141	0141	EC-243
IACV/AAC VLV/CIRC	P0505	0505	EC-313
INT/V TIM V/CIR-B1	P1111	1111	EC-329
KNOCK SEN/CIRC-B1	P0325	0325	EC-268
L/PRESS SOL/CIRC	P0745	0745	AT-237
MAF SEN/CIRCUIT*3	P0100	0100	EC-152
MULTI CYL MISFIRE	P0300	0300	EC-262
NATS MALFUNCTION	P1610 - P1615	1610 - 1615	EL-239
NO DTC IS DETECTED. FURTHER TESTING MAYBE REQUIRED	—	0000	—
NO DTC IS DETECTED. FURTHER TESTING MAYBE REQUIRED	—	Flashing*5	EC-73
O/R CLTCH SOL/CIRC	P1760	1760	AT-265
PNP SW/CIRC	P0705	0705	AT-181
P-N POS SW/CIRCUIT	P1706	1706	EC-364
PURG VOLUME CONT/V	P0443	0443	EC-304
SFT SOL A/CIRC	P0750	0750	AT-244
SFT SOL B/CIRC	P0755	0755	AT-250
TCC SOLENOID/CIRC	P0740	0740	AT-231
THRTL POS SEN/CIRC*3	P0120	0120	EC-168
TP SEN/CIRC A/T	P1705	1705	AT-256
TW CATALYST SYS-B1	P0420	0420	EC-299
VEH SPD SEN/CIR AT	P0720	0720	AT-193
VEH SPEED SEN/CIRC*4	P0500	0500	EC-309

*1: In Diagnostic Test Mode II (Self-diagnostic results). These numbers are controlled by NISSAN.

*2: These numbers are prescribed by ISO 15031-6.

*3: When the fail-safe operation occurs, the MI illuminates.

*4: The MI illuminates when the "Revolution sensor signal" and the "Vehicle speed sensor signal" meet the fail-safe condition at the same time.

*5: While engine is running.

*6: 1st trip DTC No. is the same as DTC No.

*7: If so equipped

TROUBLE DIAGNOSIS — INDEX

QG

Alphabetical & P No. Index for DTC (Cont'd)

P No. Index for DTC

NJEC0001S0302

DTC*6		Items (CONSULT-II screen terms)	Reference page
CONSULT-II GST*2	ECM*1*7		
—	—	Unable to access ECM	EC-123
—	Flashing*5	NO DTC IS DETECTED. FURTHER TESTING MAYBE REQUIRED.	EC-73
—	0000	NO DTC IS DETECTED. FURTHER TESTING MAYBE REQUIRED.	—
P0100	0100	MAF SEN/CIRCUIT*3	EC-152
P0110	0110	AIR TEMP SEN/CIRC	EC-158
P0115	0115	COOLANT T SEN/CIRC*3	EC-163
P0120	0120	THRTL POS SEN/CIRC*3	EC-168
P0130	0130	HO2S1 (B1)	EC-176
P0131	0131	HO2S1 (B1)	EC-183
P0132	0132	HO2S1 (B1)	EC-189
P0133	0133	HO2S1 (B1)	EC-195
P0134	0134	HO2S1 (B1)	EC-203
P0135	0135	HO2S1 HTR (B1)	EC-209
P0137	0137	HO2S2 (B1)	EC-214
P0138	0138	HO2S2 (B1)	EC-222
P0139	0139	HO2S2 (B1)	EC-229
P0140	0140	HO2S2 (B1)	EC-237
P0141	0141	HO2S2 HTR (B1)	EC-243
P0171	0171	FUEL SYS-LEAN/BK1	EC-248
P0172	0172	FUEL SYS-RICH/BK1	EC-255
P0300	0300	MULTI CYL MISFIRE	EC-262
P0301	0301	CYL 1 MISFIRE	EC-262
P0302	0302	CYL 2 MISFIRE	EC-262
P0303	0303	CYL 3 MISFIRE	EC-262
P0304	0304	CYL 4 MISFIRE	EC-262
P0325	0325	KNOCK SEN/CIRC-B1	EC-268
P0335	0335	CKP SEN/CIRCUIT	EC-272
P0340	0340	CMP SEN/CIRCUIT	EC-278
P0400	0400	EGR SYSTEM*7	EC-285
P0403	0403	EGR VOL CON/V CIR*7	EC-293
P0420	0420	TW CATALYST SYS-B1	EC-299
P0443	0443	PURG VOLUME CONT/V	EC-304
P0500	0500	VEH SPEED SEN/CIRC*4	EC-309
P0505	0505	IACV/AAC VLV/CIRC	EC-313

TROUBLE DIAGNOSIS — INDEX

QG

Alphabetical & P No. Index for DTC (Cont'd)

DTC*6		Items (CONSULT-II screen terms)	Reference page
CONSULT-II GST*2	ECM*1*7		
P0510	0510	CLOSED TP SW/CIRC*7	EC-321
P0605	0605	ECM	EC-327
P0705	0705	PNP SW/CIRC	AT-181
P0710	0710	ATF TEMP SEN/CIRC	AT-187
P0720	0720	VEH SPD SEN/CIR AT	AT-193
P0725	0725	ENGINE SPEED SIG	AT-198
P0731	0731	A/T 1ST GR FNCTN	AT-202
P0732	0732	A/T 2ND GR FNCTN	AT-209
P0733	0733	A/T 3RD GR FNCTN	AT-215
P0734	0734	A/T 4TH GR FNCTN	AT-221
P0740	0740	TCC SOLENOID/CIRC	AT-231
P0745	0745	L/PRESS SOL/CIRC	AT-237
P0750	0750	SFT SOL A/CIRC	AT-244
P0755	0755	SFT SOL B/CIRC	AT-250
P1111	1111	INT/V TIM V/CIR-B1	EC-329
P1217	1217	ENG OVER TEMP	EC-334
P1401	1401	EGR TEMP SEN/CIRC*7	EC-347
P1402	1402	EGR SYSTEM*7	EC-353
P1605	1605	A/T DIAG COMM LINE	EC-361
P1610 - 1615	1610 - 1615	NATS MALFUNCTION	EL-239
P1705	1705	TP SEN/CIRC A/T	AT-256
P1706	1706	P-N POS SW/CIRCUIT	EC-364
P1760	1760	O/R CLTCH SOL/CIRC	AT-265

*1: In Diagnostic Test Mode II (Self-diagnostic results). These numbers are controlled by NISSAN.

*2: These numbers are prescribed by ISO 15031-6

*3: When the fail-safe operation occurs, the MI illuminates.

*4: The MI illuminates when the "Revolution sensor signal" and the "Vehicle speed sensor signal" meet the fail-safe condition at the same time.

*5: While engine is running.

*6: 1st trip DTC No. is the same as DTC No.

*7: If so equipped

MODELS WITHOUT EURO-OBD SYSTEM

Alphabetical Index for DTC

NJEC0001S04

NJEC0001S0401

Items (CONSULT-II screen terms)	DTC*6		Reference page
	CONSULT-II GST*2	ECM*1	
Unable to access ECM	—	—	EC-123
CKP SEN/CIRCUIT	P0335	0335	EC-272
CMP SEN/CIRCUIT	P0340	0340	EC-278

TROUBLE DIAGNOSIS — INDEX

QG

Alphabetical & P No. Index for DTC (Cont'd)

Items (CONSULT-II screen terms)	DTC*6		Reference page
	CONSULT-II GST*2	ECM*1	
COOLANT T SEN/CIRC*3	P0115	0115	EC-163
ENG OVER TEMP	P1217	1217	EC-334
HO2S1 (B1)	P0130	0130	EC-176
KNOCK SEN/CIRC-B1	P0325	0325	EC-268
MAF SEN/CIRCUIT*3	P0100	0100	EC-152
NATS MALFUNCTION	P1610 - P1615	1610 - 1615	EL-239
NO DTC IS DETECTED. FURTHER TESTING MAYBE REQUIRED	—	0000	—
NO DTC IS DETECTED. FURTHER TESTING MAYBE REQUIRED	—	Flashing*5	EC-73
THRTL POS SEN/CIRC*3	P0120	0120	EC-168
VEH SPEED SEN/CIRC*4	P0500	0500	EC-309

*1: In Diagnostic Test Mode II (Self-diagnostic results) (If so equipped). These numbers are controlled by NISSAN.

*2: These numbers are prescribed by ISO 15031-6.

*3: When the fail-safe operation occurs, the MI illuminates.

*4: The MI illuminates when the "Revolution sensor signal" and the "Vehicle speed sensor signal" meet the fail-safe condition at the same time.

*5: While engine is running.

*6: 1st trip DTC No. is the same as DTC No.

P No. Index for DTC

NJEC0001S0402

DTC*6		Items (CONSULT-II screen terms)	Reference page
CONSULT-II GST*2	ECM*1		
—	—	Unable to access ECM	EC-123
—	Flashing*5	NO DTC IS DETECTED. FURTHER TESTING MAYBE REQUIRED.	EC-73
—	0000	NO DTC IS DETECTED. FURTHER TESTING MAYBE REQUIRED.	—
P0100	0100	MAF SEN/CIRCUIT*3	EC-152
P0115	0115	COOLANT T SEN/CIRC*3	EC-163
P0120	0120	THRTL POS SEN/CIRC*3	EC-168
P0130	0130	HO2S1 (B1)	EC-176
P0325	0325	KNOCK SEN/CIRC-B1	EC-268
P0335	0335	CKP SEN/CIRCUIT	EC-272
P0340	0340	CMP SEN/CIRCUIT	EC-278
P0500	0500	VEH SPEED SEN/CIRC*4	EC-309
P1217	1217	ENG OVER TEMP	EC-334
P1610 - 1615	1610 - 1615	NATS MALFUNCTION	EL-239

*1: In Diagnostic Test Mode II (Self-diagnostic results) (If so equipped). These numbers are controlled by NISSAN.

*2: These numbers are prescribed by ISO 15031-6

*3: When the fail-safe operation occurs, the MI illuminates.

TROUBLE DIAGNOSIS — INDEX

QG

Alphabetical & P No. Index for DTC (Cont'd)

- *4: The MI illuminates when the “Revolution sensor signal” and the “Vehicle speed sensor signal” meet the fail-safe condition at the same time.
- *5: While engine is running.
- *6: 1st trip DTC No. is the same as DTC No.

Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

NJEC0002

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER" used along with a seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. The SRS system composition which is available to NISSAN MODEL N16 is as follows (The composition varies according to the destination and optional equipment.):

- For a frontal collision
The Supplemental Restraint System consists of driver air bag module (located in the center of the steering wheel), front passenger air bag module (located on the instrument panel on passenger side), front seat belt pre-tensioners, a diagnoses sensor unit, warning lamp, wiring harness and spiral cable.
- For a side collision
The Supplemental Restraint System consists of front side air bag module (located in the outer side of front seat), side air bag (satellite) sensor, diagnoses sensor unit (one of components of air bags for a frontal collision), wiring harness, warning lamp (one of components of air bags for a frontal collision).

Information necessary to service the system safely is included in the **RS section** of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance should be performed by an authorized NISSAN dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the RS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harness can be identified by yellow harness connector.





Precautions for On Board Diagnostic (OBD) System of Engine and A/T

NJEC0003

The ECM has an on board diagnostic system. It will light up the malfunction indicator (MI) to warn the driver of a malfunction causing emission deterioration.

CAUTION:


- Be sure to turn the ignition switch "OFF" and disconnect the negative battery terminal before any repair or inspection work. The open/short circuit of related switches, sensors, solenoid valves, etc. will cause the MI to light up.
- Be sure to connect and lock the connectors securely after work. A loose (unlocked) connector will cause the MI to light up due to the open circuit. (Be sure the connector is free from water, grease, dirt, bent terminals, etc.)
- Certain systems and components, especially those related to OBD, may use a new style slide-locking type harness connector.
For description and how to disconnect, refer to EL section, "Description", "HARNESS CONNECTOR".
- Be sure to route and secure the harnesses properly after work. The interference of the harness with a bracket, etc. may cause the MI to light up due to the short circuit.
- Be sure to connect rubber tubes properly after work. A misconnected or disconnected rubber tube may cause the MI to light up due to the malfunction of fuel injection system, etc.
- Be sure to erase the unnecessary malfunction information (repairs completed) from the ECM and TCM (Transmission Control Module) before returning the vehicle to the customer.

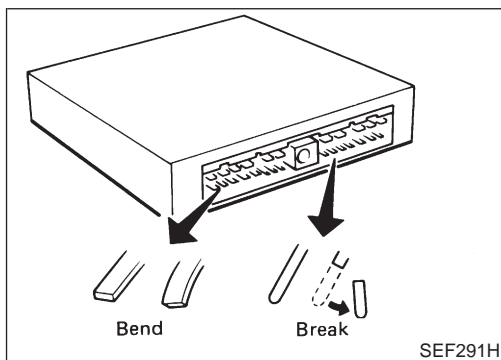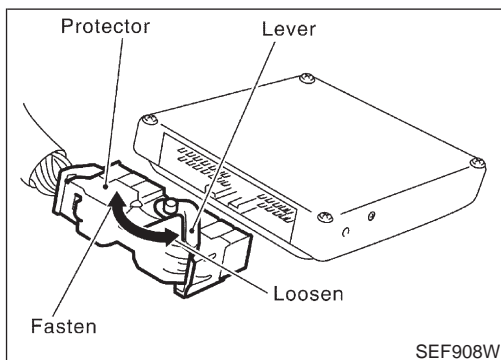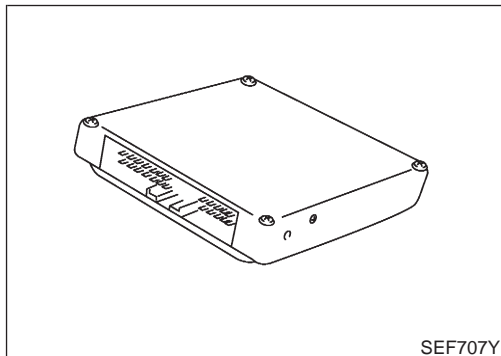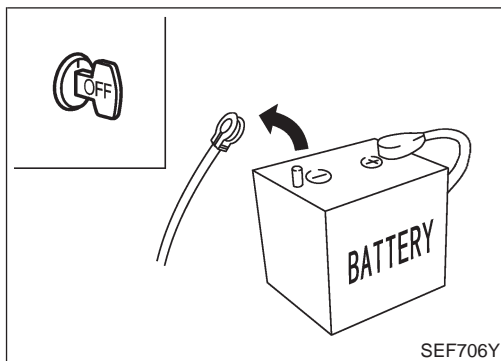


Engine Fuel & Emission Control System

=NJE0004


- Always use a 12 volt battery as power source.
- Do not attempt to disconnect battery cables while engine is running.
- Before connecting or disconnecting the ECM harness connector, turn ignition switch OFF and disconnect negative battery terminal. Failure to do so may damage the ECM because battery voltage is applied to ECM even if ignition switch is turned off.
- Do not disassemble ECM.
- If a battery terminal is disconnected, the memory will return to the ECM value. The ECM will now start to self-control at its initial value. Engine operation can vary slightly when the terminal is disconnected. However, this is not an indication of a problem. Do not replace parts because of a slight variation.
- When connecting or disconnecting ECM harness connector, use lever as shown. When connecting, fasten connector securely with lever moved until it stops.
- When connecting or disconnecting pin connectors into or from ECM, take care not to damage pin terminals (bend or break). Make sure that there are not any bends or breaks on ECM pin terminals when connecting pin connectors.
- Securely connect ECM harness connectors. A Poor connection can cause an extremely high (surge) voltage to develop in coil and condenser, thus resulting in damage to ICs.
- Keep ECM harness at least 10 cm (4 in) away from adjacent harness, to prevent an ECM system malfunctions due to receiving external noise, degraded operation of ICs, etc.
- Keep ECM parts and harness dry.

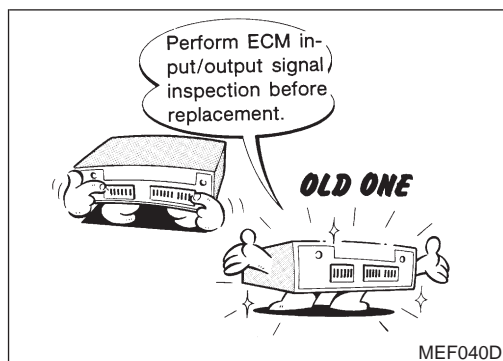

- Handle mass air flow sensor carefully to avoid damage.
- Do not disassemble mass air flow sensor.
- Do not clean mass air flow sensor with any type of detergent.
- Do not disassemble IAC valve-AAC valve.
- Even a slight leak in the air intake system can cause serious problems.
- Do not shock or jar the camshaft position sensor and crankshaft position sensor.
- Before replacing ECM, perform refer to “ECM Terminals and Reference Value” inspection and make sure ECM functions properly, EC-132.

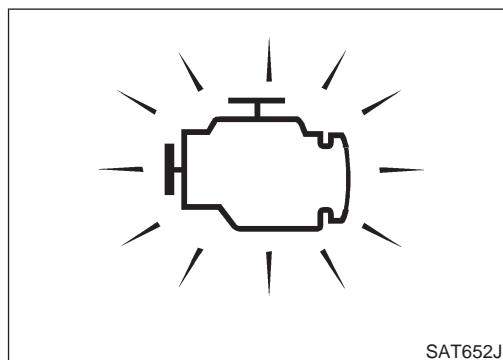

- After performing each TROUBLE DIAGNOSIS, perform “DTC Confirmation Procedure” or “Overall Function Check”.
The DTC should not be displayed in the “DTC Confirmation Procedure” if the repair is completed. The “Overall Function Check” should be a good result if the repair is completed.

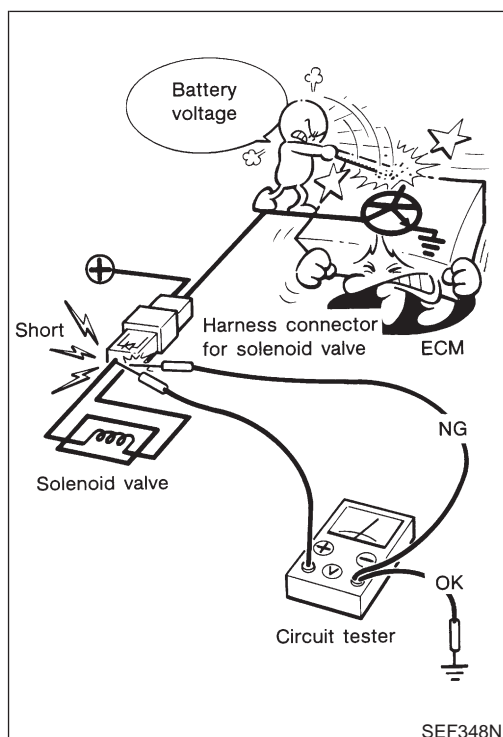


- When measuring ECM signals with a circuit tester, never allow the two tester probes to contact. Accidental contact of probes will cause a short circuit and damage the ECM power transistor.
- Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM’s transistor. Use a ground other than ECM terminals, such as the ground.

PRECAUTIONS

QG


Engine Fuel & Emission Control System (Cont'd)

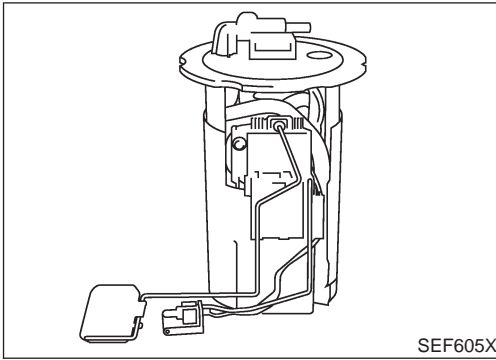

- Do not operate fuel pump when there is no fuel in lines.
- Tighten fuel hose clamps to the specified torque.



- Do not depress accelerator pedal when starting.
- Immediately after starting, do not rev up engine unnecessarily.
- Do not rev up engine just prior to shutdown.

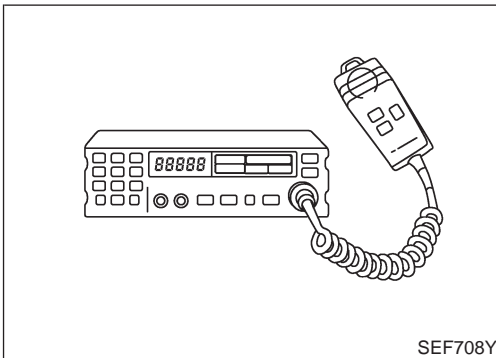

- When installing C.B. ham radio or a mobile phone, be sure to observe the following as it may adversely affect electronic control systems depending on installation location.
- 1) Keep the antenna as far as possible from the electronic control units.
 - 2) Keep the antenna feeder line more than 20 cm (8 in) away from the harness of electronic controls. Do not let them run parallel for a long distance.
 - 3) Adjust the antenna and feeder line so that the standing-wave ratio can be kept smaller.
 - 4) Be sure to ground the radio to vehicle body.

Wiring Diagrams and Trouble Diagnosis

NJEC0006

When you read Wiring diagrams, refer to the following:

- GI-12, "HOW TO READ WIRING DIAGRAMS"
- EL-10, "POWER SUPPLY ROUTING" for power distribution circuit

When you perform trouble diagnosis, refer to the following:

- GI-31, "HOW TO FOLLOW TEST GROUP IN TROUBLE DIAGNOSIS"
- GI-21, "HOW TO PERFORM EFFICIENT DIAGNOSIS FOR AN ELECTRICAL INCIDENT"



PREPARATION

QG

Special Service Tools




Special Service Tools

NJEC0007

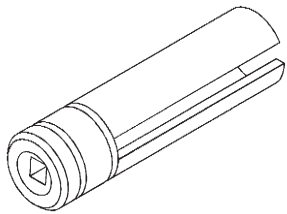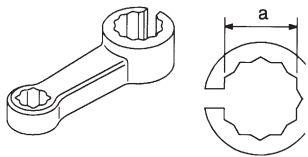Tool number Tool name	Description	
KV10117100 Heated oxygen sensor wrench		Loosening or tightening heated oxygen sensor 1 (front) with 22 mm hexagon nut
	NT379	
KV10114400 Heated oxygen sensor wrench		Loosening or tightening heated oxygen sensor 2 (rear) a: 22 mm
	NT636	

Commercial Service Tools


NJEC0008

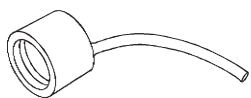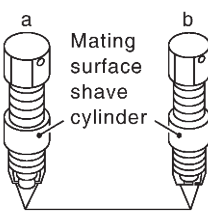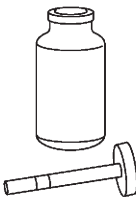Tool name	Description	
Fuel filler cap adapter		Checking fuel tank vacuum relief valve opening pressure
	NT653	
Oxygen sensor thread cleaner		Reconditioning the exhaust system threads before installing a new oxygen sensor. Use with anti-seize lubricant shown below. a: 18 mm dia. with pitch 1.5 mm, for Zirconia Oxygen Sensor b: 12 mm dia. with pitch 1.25 mm, for Titania Oxygen Sensor
	NT778	
Anti-seize lubricant (Permatex™ 133AR or equivalent meeting MIL specification MIL-A-907)		Lubricating oxygen sensor thread cleaning tool when reconditioning exhaust system threads.
	NT779	

Engine Control Component Parts Location

NJEC0009

For more details of ECM location, refer to "ELECTRICAL UNIT LOCATION" in EL section (EL-319).

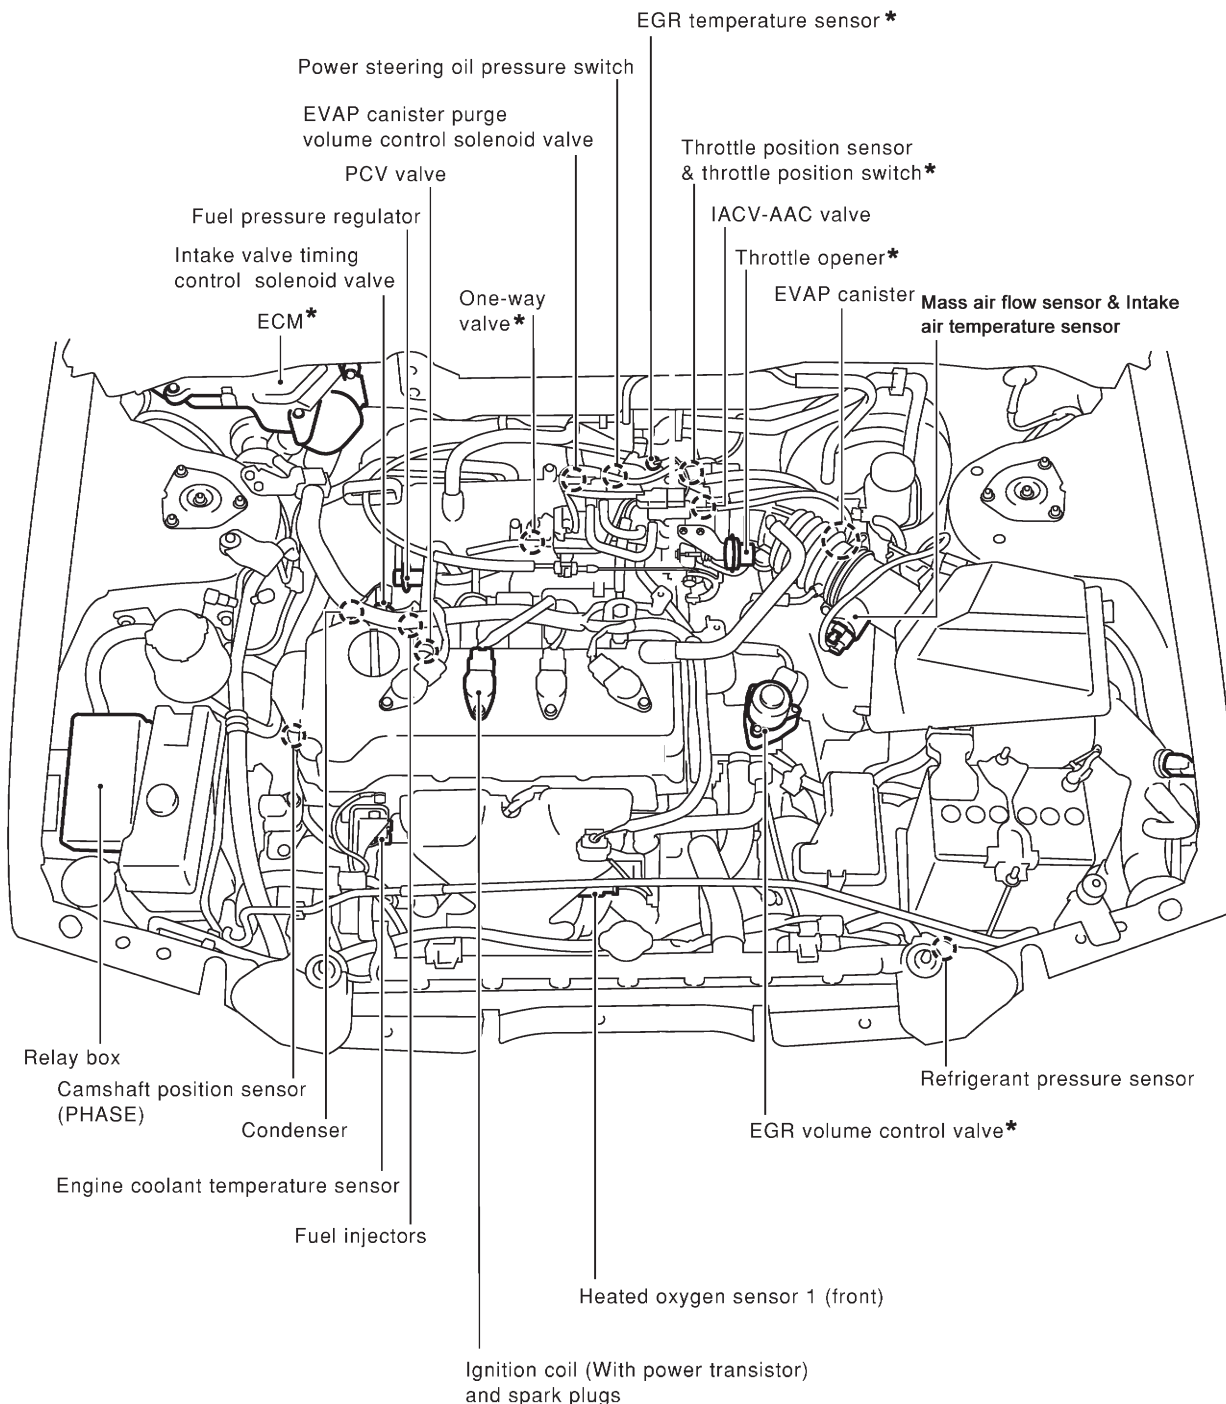








*: where fitted

View with engine cover removed

ENGINE AND EMISSION CONTROL OVERALL SYSTEM

QG

Engine Control Component Parts Location (Cont'd)

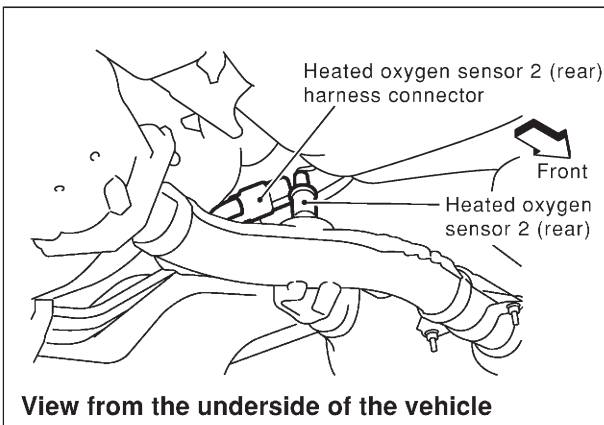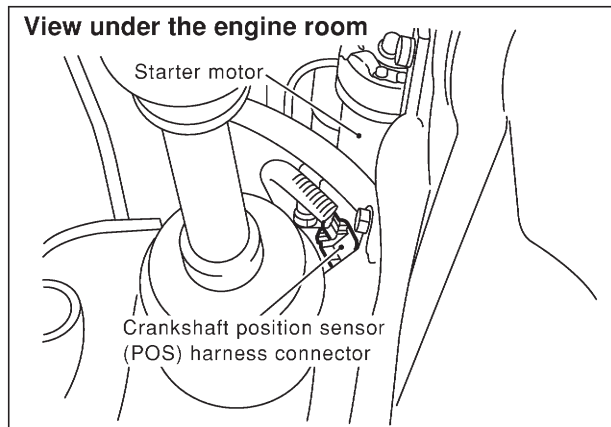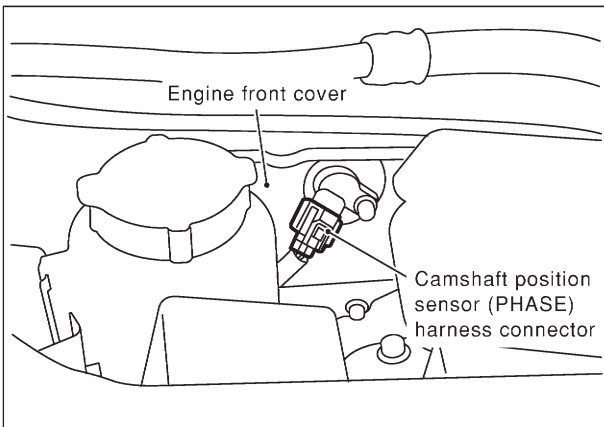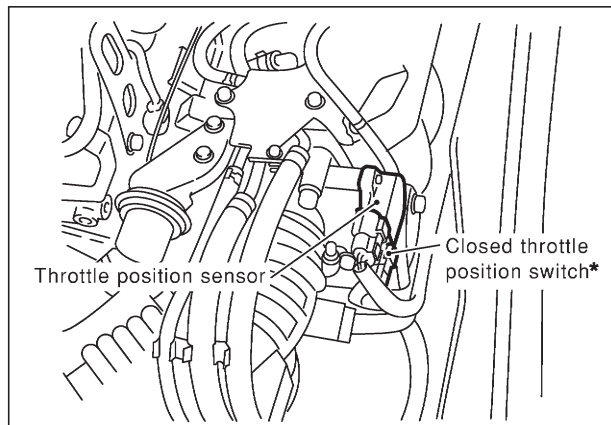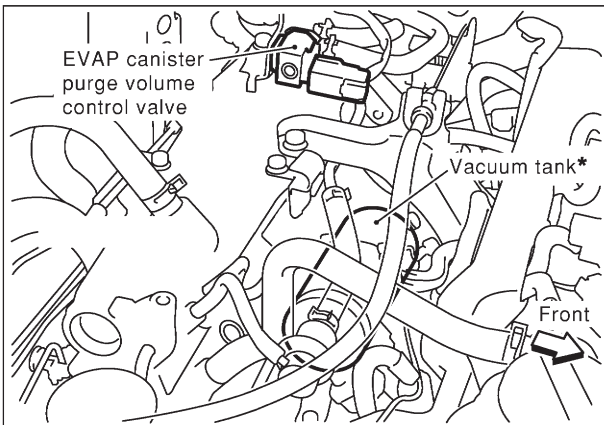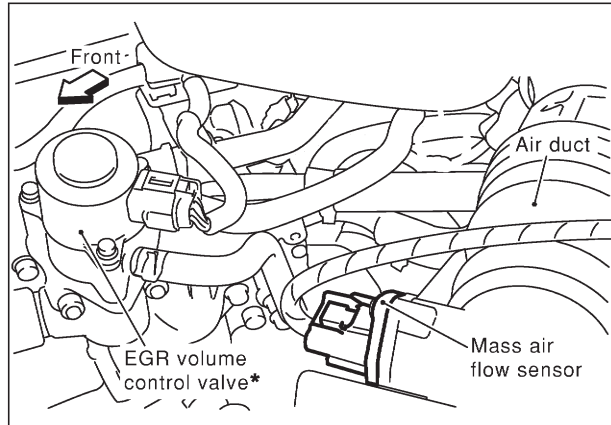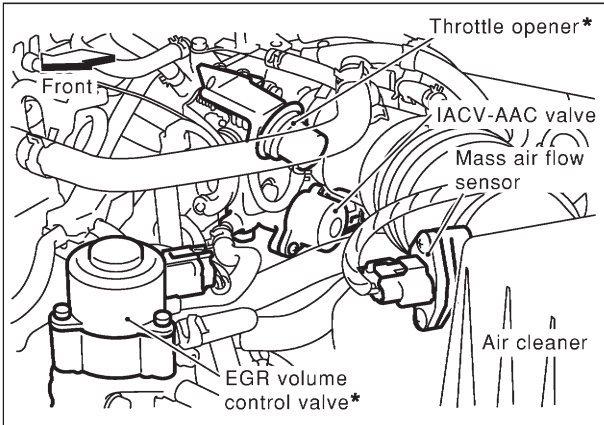








*: where fitted

NEF372A

ENGINE AND EMISSION CONTROL OVERALL SYSTEM

QG

Engine Control Component Parts Location (Cont'd)

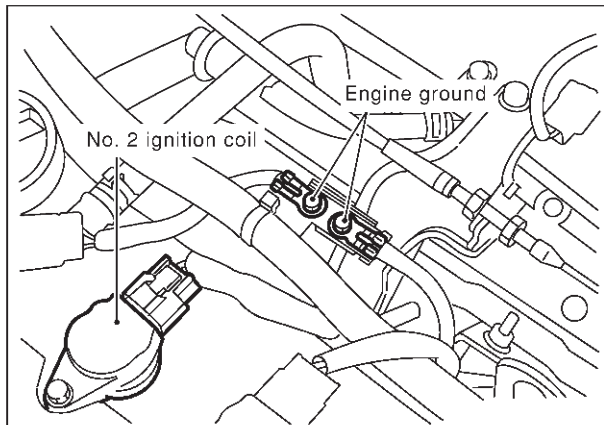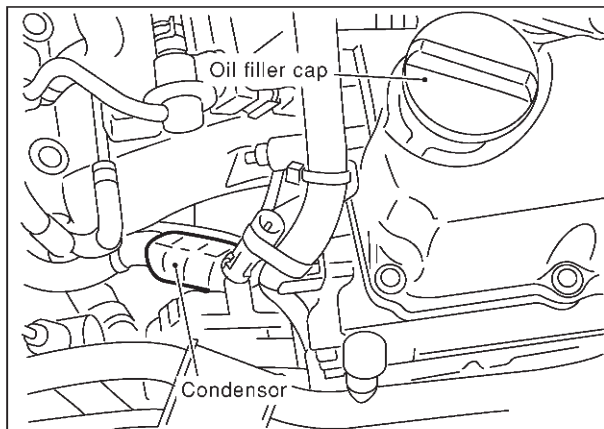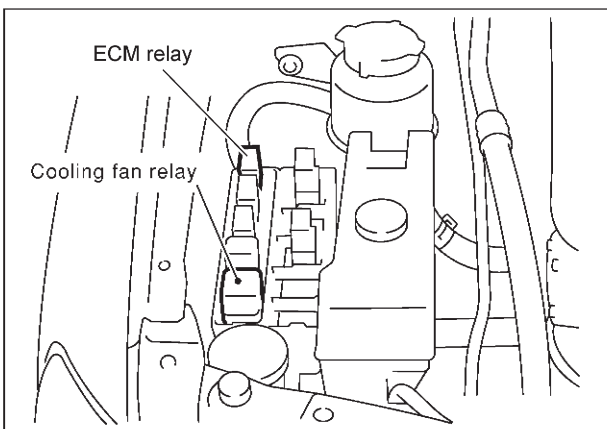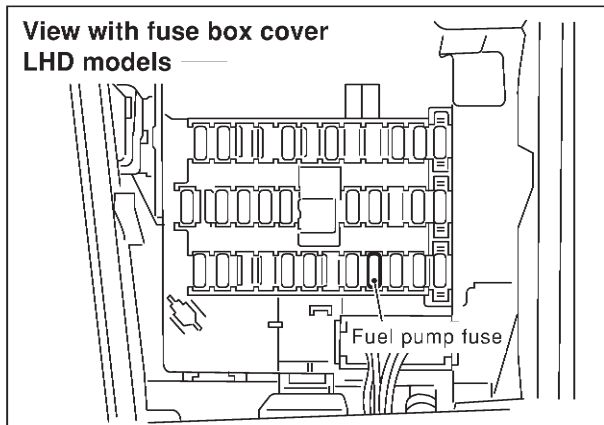
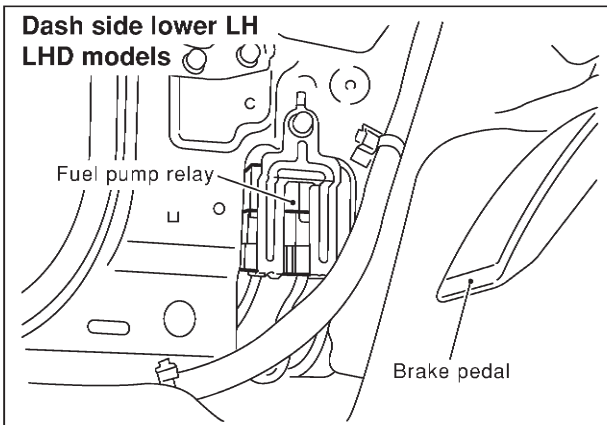
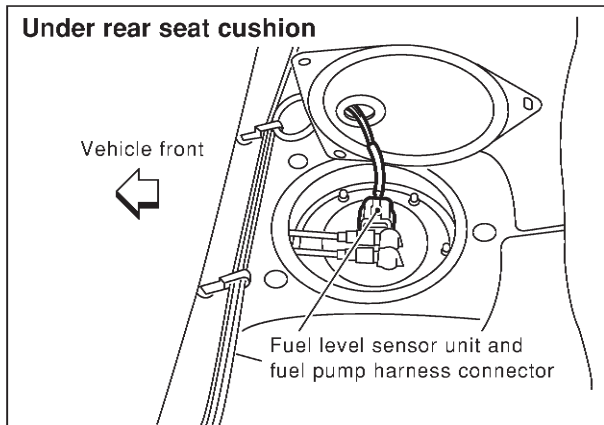
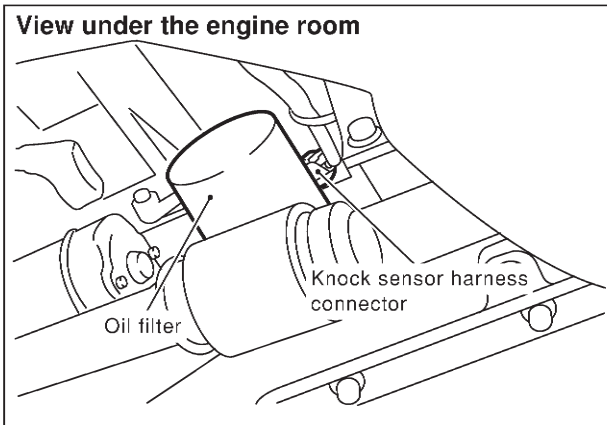


NEF373A

ENGINE AND EMISSION CONTROL OVERALL SYSTEM

QG

Engine Control Component Parts Location (Cont'd)

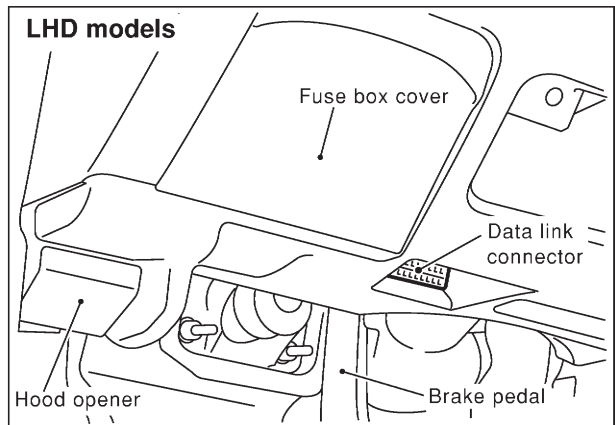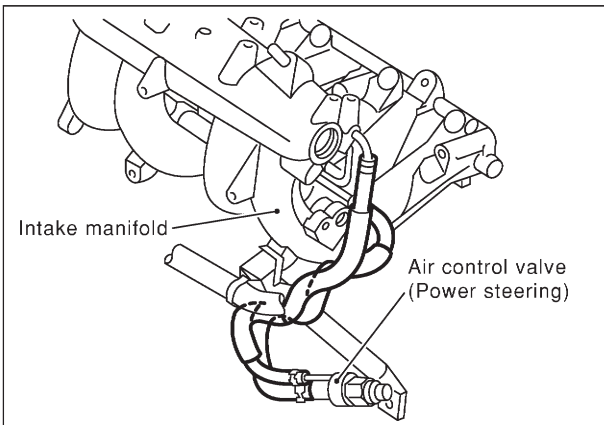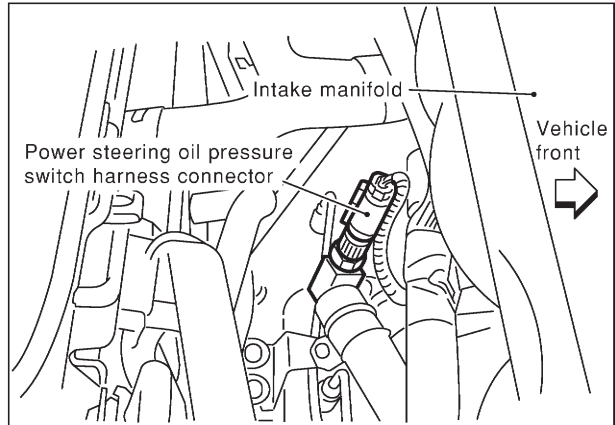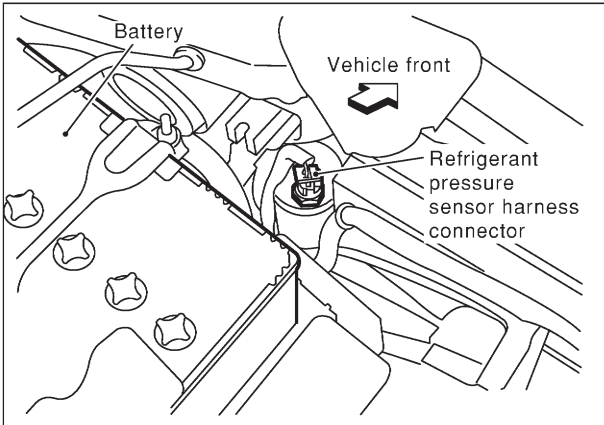


SEF599Y

ENGINE AND EMISSION CONTROL OVERALL SYSTEM

Circuit Diagram

Circuit Diagram


QG

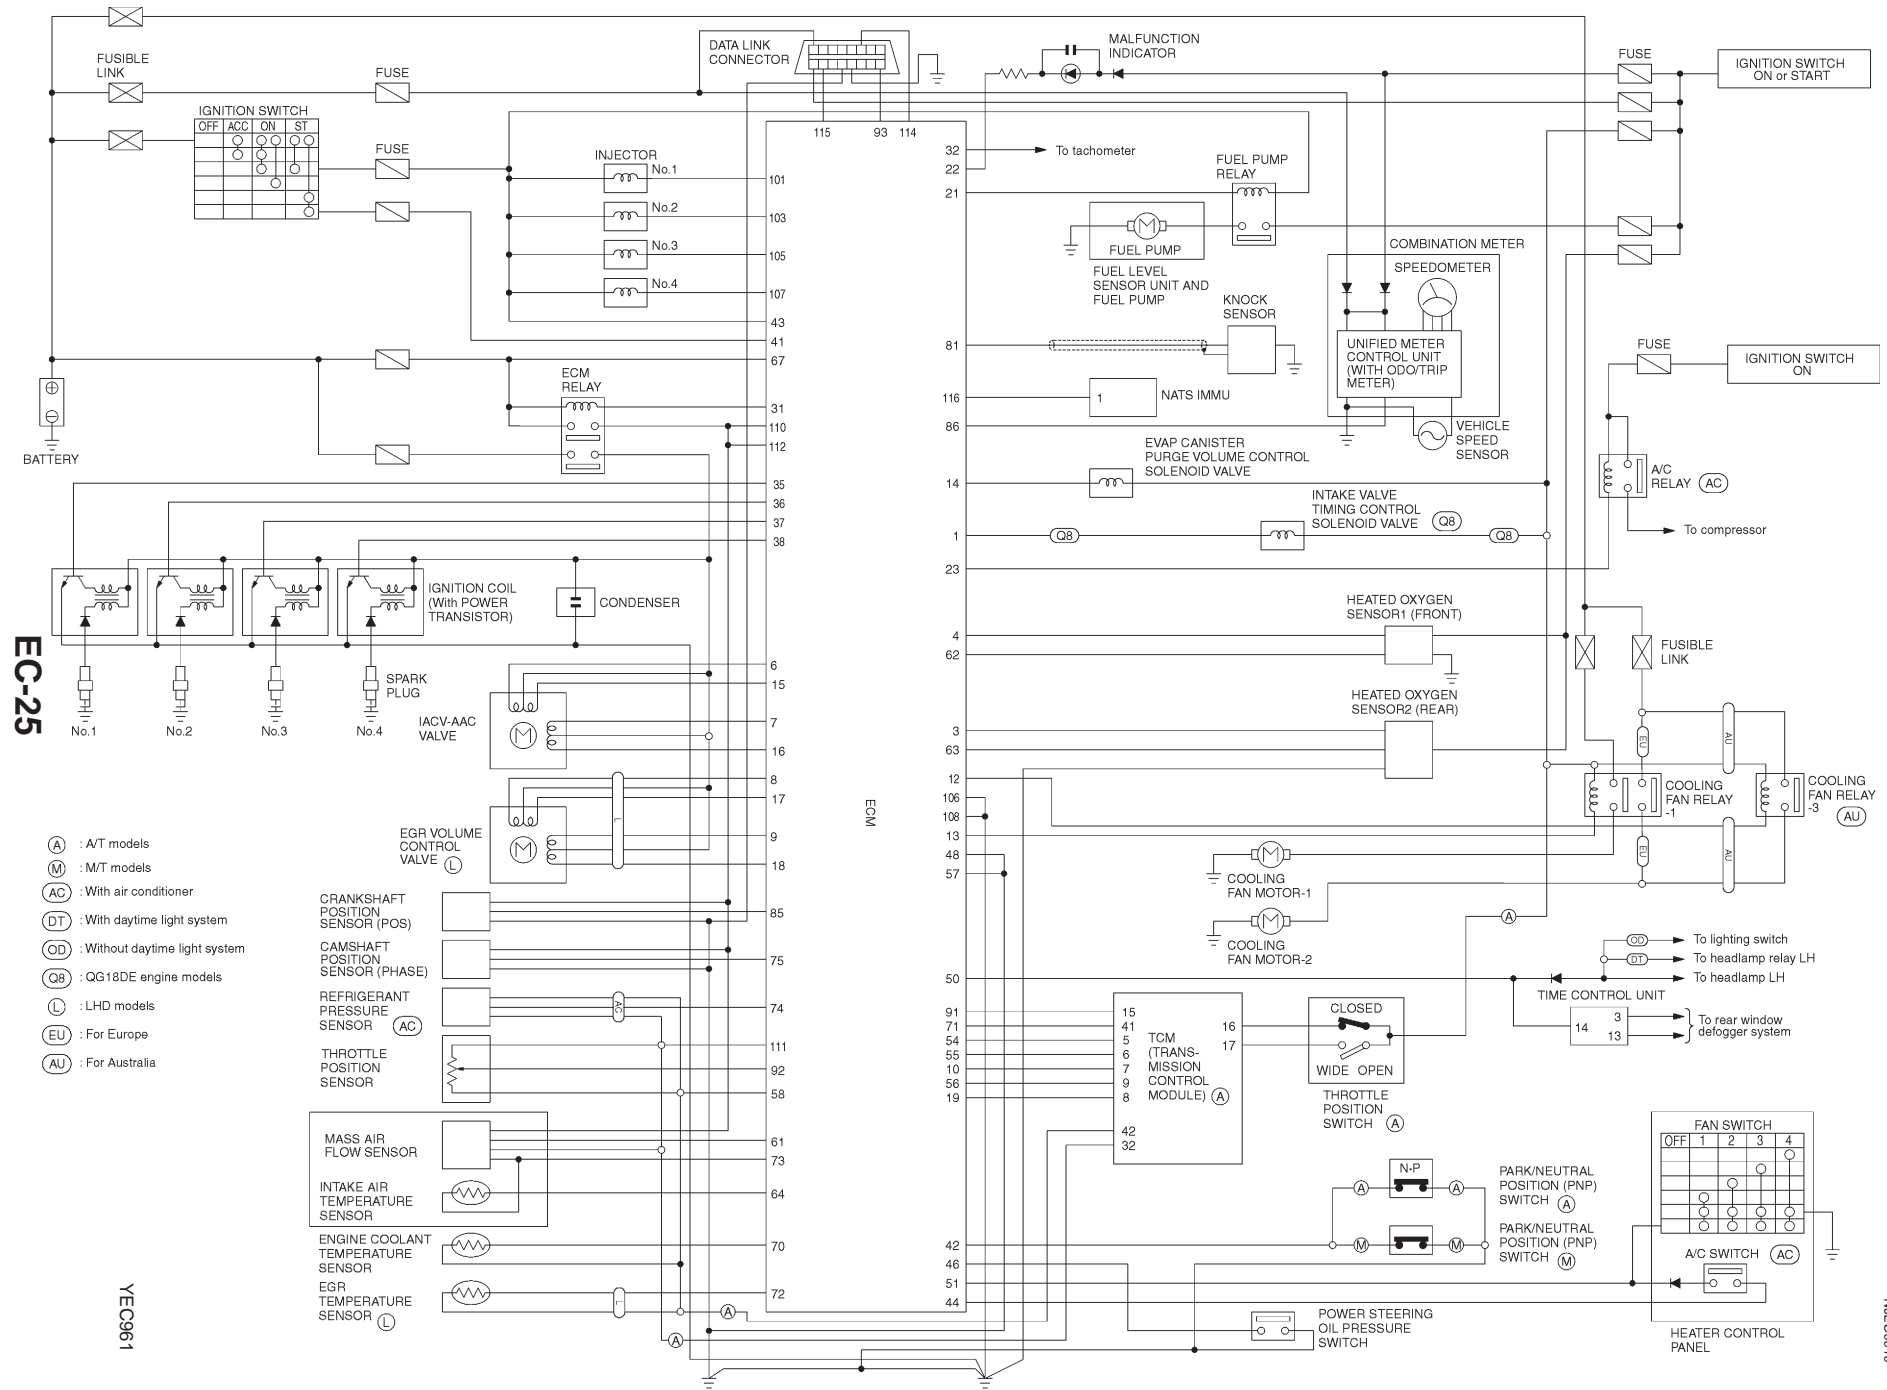

YEC961

N/EC0010

System Diagram

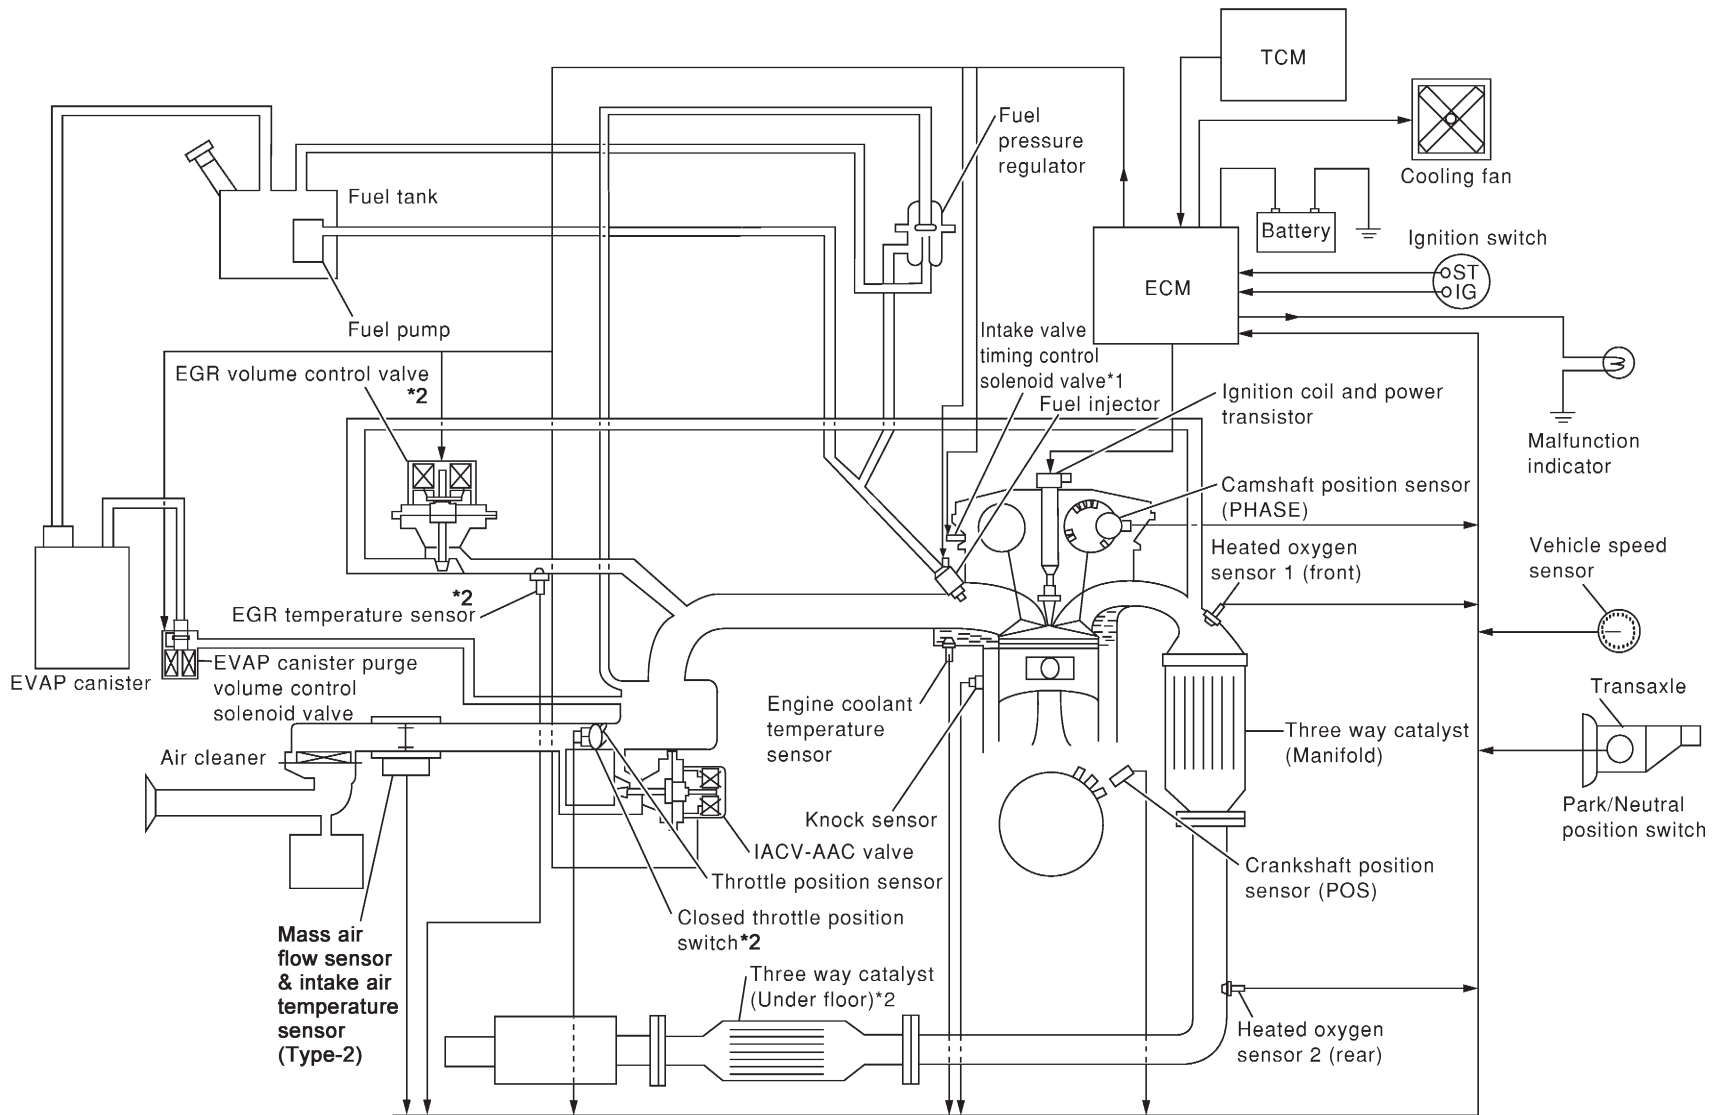




*1: Models with QG18DE engine
 *2: If so equipped

EC-26

Vacuum Hose Drawing

NJEC0012

Refer to "System Diagram" on EC-26 for vacuum control system.

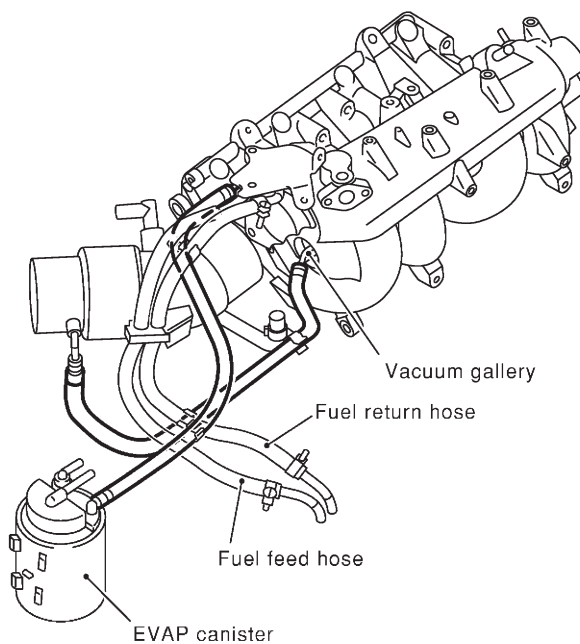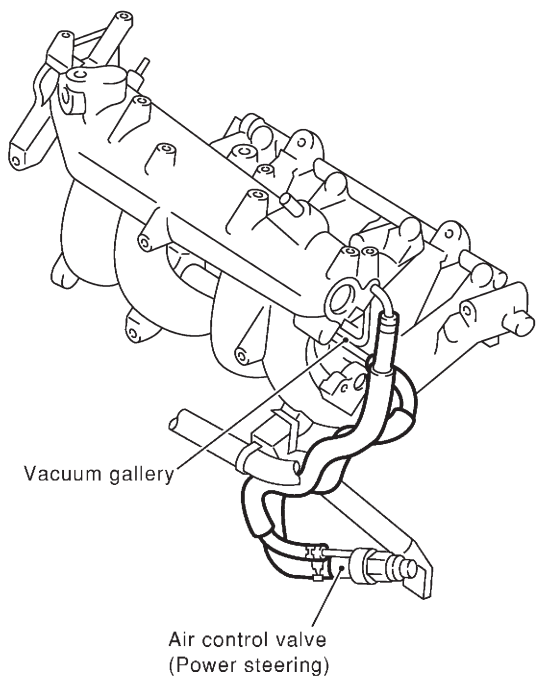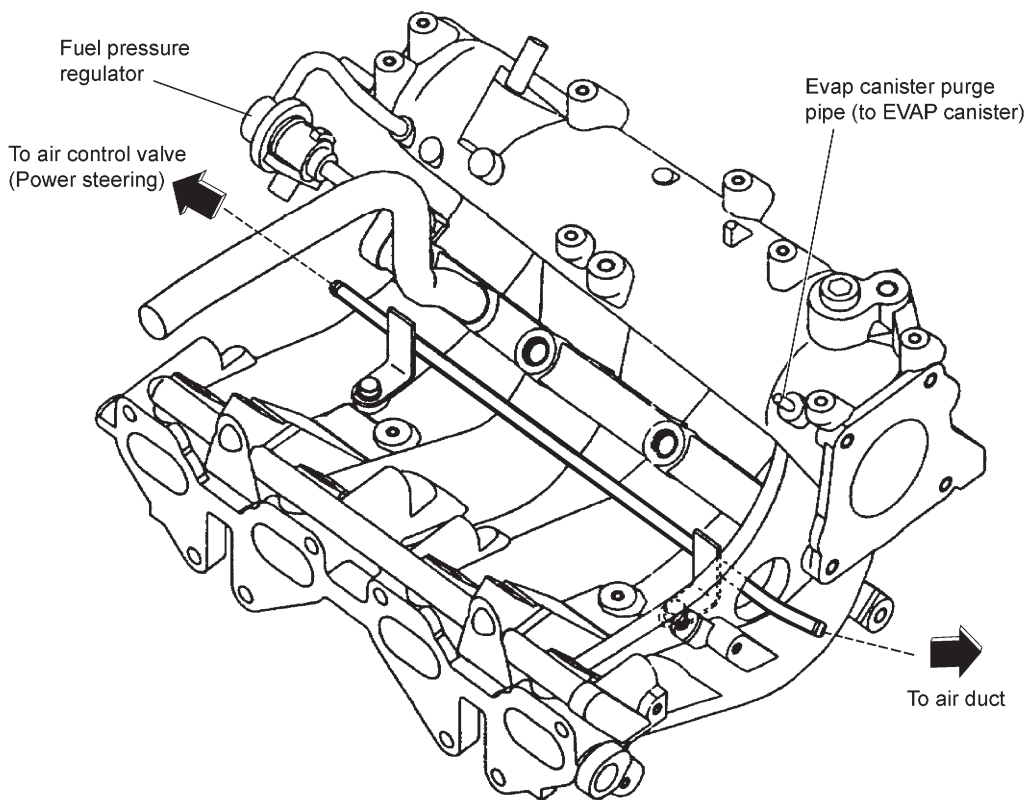

NOTE:
Do not use soapy water or any type of solvent while installing vacuum hoses or purge hoses.

NEF375A

System Chart

NJEC0013

Input (Sensor)	ECM Function	Output (Actuator)
<ul style="list-style-type: none"> ● Camshaft position sensor (PHASE) ● Crankshaft position sensor (POS) ● Mass air flow sensor ● Engine coolant temperature sensor ● Heated oxygen sensor 1 (front) ● Ignition switch ● Throttle position sensor ● PNP switch ● Air conditioner switch ● Knock sensor ● EGR temperature sensor*1, *4 ● Battery voltage ● Power steering oil pressure switch ● Vehicle speed sensor ● Intake air temperature sensor ● Heated oxygen sensor 2 (rear)*2 ● TCM (Transmission Control Module)*3 ● Closed throttle position switch ● Electrical load ● Refrigerant pressure sensor 	Fuel injection & mixture ratio control	Injectors
	Electronic ignition system	Power transistor
	Idle air control system	IACV-AAC valve
	Intake valve timing control	Intake valve timing control solenoid valve
	Fuel pump control	Fuel pump relay
	On board diagnostic system	Malfunction indicator (On the instrument panel)
	EGR control*4	EGR volume control valve*4
	Heated oxygen sensor 1/2 heater (front/rear) control	Heated oxygen sensor 1/2 heater (front/rear)
	EVAP canister purge flow control	EVAP canister purge volume control solenoid valve
	Cooling fan control	Cooling fan relay
	Air conditioning cut control	Air conditioner relay

*1: These sensors are not used to control the engine system. They are used only for the on board diagnosis.

*2: Under normal conditions, this sensor is not for engine control operation.

*3: The DTC related to A/T will be sent to ECM.

*4: If so equipped

Multiport Fuel Injection (MFI) System

DESCRIPTION

Input/Output Signal Chart

NJEC0014

NJEC0014S01

Sensor	Input Signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS)	Engine speed	Fuel injection & mixture ratio control	Injector
Camshaft position sensor (PHASE)	Engine speed and cylinder number		
Mass air flow sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Heated oxygen sensor 1 (front)	Density of oxygen in exhaust gas		
Throttle position sensor	Throttle position Throttle valve idle position		
PNP switch	Gear position		
Vehicle speed sensor	Vehicle speed		
Ignition switch	Start signal		
Air conditioner switch	Air conditioner operation		
Knock sensor	Engine knocking condition		
Electrical load	Electrical load signal		
Battery	Battery voltage		
Power steering oil pressure switch	Power steering operation		
Heated oxygen sensor 2 (rear)*	Density of oxygen in exhaust gas		

* Under normal conditions, this sensor is not for engine control operation.

Basic Multiport Fuel Injection System

NJEC0014S02

The amount of fuel injected from the fuel injector is determined by the ECM. The ECM controls the length of time the valve remains open (injection pulse duration). The amount of fuel injected is a program value in the ECM memory. The program value is preset by engine operating conditions. These conditions are determined by input signals (for engine speed and intake air) from both the camshaft position sensor and the mass air flow sensor.

Various Fuel Injection Increase/Decrease Compensation

NJEC0014S03

In addition, the amount of fuel injected is compensated to improve engine performance under various operating conditions as listed below.

<Fuel increase>


- During warm-up
- When starting the engine
- During acceleration
- Hot-engine operation
- When selector lever is changed from "N" to "D" (A/T models)
- High-load, high-speed operation

<Fuel decrease>

- During deceleration
- During high engine speed operation
- During high vehicle speed operation (M/T models)
- Extremely high engine coolant temperature

Mixture Ratio Feedback Control (Closed loop control)

NJEC0014S04

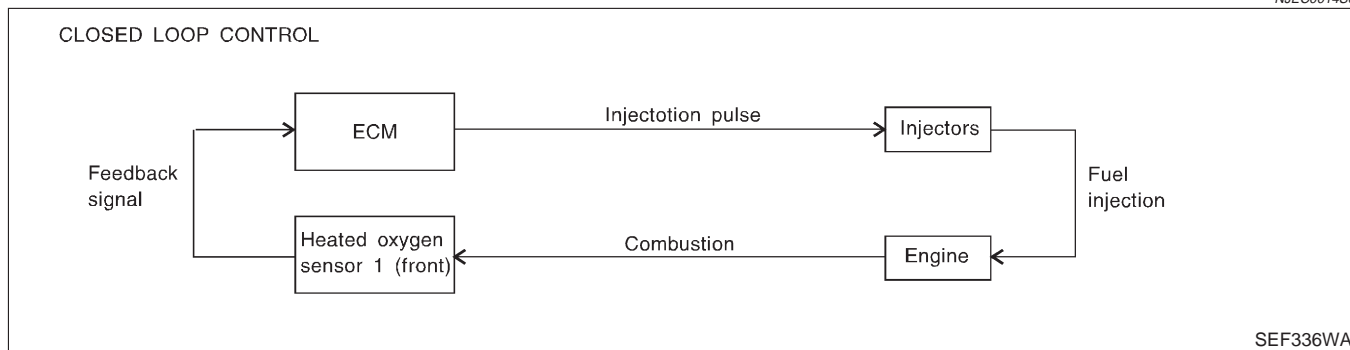

The mixture ratio feedback system provides the best air-fuel mixture ratio for driveability and emission control. The three way catalyst can then better reduce CO, HC and NOx emissions. This system uses a heated oxygen sensor 1 (front) in the exhaust manifold to monitor if the engine operation is rich or lean. The ECM adjusts the injection pulse width according to the sensor voltage signal. For more information about the heated oxygen sensor 1 (front), refer to EC-176. This maintains the mixture ratio within the range of stoichiometric (ideal air-fuel mixture).

This stage is referred to as the closed loop control condition.

Heated oxygen sensor 2 (rear) is located downstream of the three way catalyst. Even if the switching characteristics of the heated oxygen sensor 1 (front) shift, the air-fuel ratio is controlled to stoichiometric by the signal from the heated oxygen sensor 2 (rear).

Open Loop Control

NJEC0014S05

The open loop system condition refers to when the ECM detects any of the following conditions. Feedback control stops in order to maintain stabilized fuel combustion.

- Deceleration and acceleration
- High-load, high-speed operation
- Malfunction of heated oxygen sensor 1 (front) or its circuit
- Insufficient activation of heated oxygen sensor 1 (front) at low engine coolant temperature
- High engine coolant temperature
- During warm-up
- When starting the engine

Mixture Ratio Self-learning Control

NJEC0014S06

The mixture ratio feedback control system monitors the mixture ratio signal transmitted from the heated oxygen sensor 1 (front). This feedback signal is then sent to the ECM. The ECM controls the basic mixture ratio as close to the theoretical mixture ratio as possible. However, the basic mixture ratio is not necessarily controlled as originally designed. Both manufacturing differences (i.e., mass air flow sensor hot film) and characteristic changes during operation (i.e., injector clogging) directly affect mixture ratio.


Accordingly, the difference between the basic and theoretical mixture ratios is monitored in this system. This is then computed in terms of "injection pulse duration" to automatically compensate for the difference between the two ratios.

"Fuel trim" refers to the feedback compensation value compared against the basic injection duration. Fuel trim includes short term fuel trim and long term fuel trim.

"Short term fuel trim" is the short-term fuel compensation used to maintain the mixture ratio at its theoretical value. The signal from the heated oxygen sensor 1 (front) indicates whether the mixture ratio is RICH or LEAN compared to the theoretical value. The signal then triggers a reduction in fuel volume if the mixture ratio is rich, and an increase in fuel volume if it is lean.

"Long term fuel trim" is overall fuel compensation carried out long-term to compensate for continual deviation of the short term fuel trim from the central value. Such deviation will occur due to individual engine differences, wear over time and changes in the usage environment.

Fuel Injection Timing

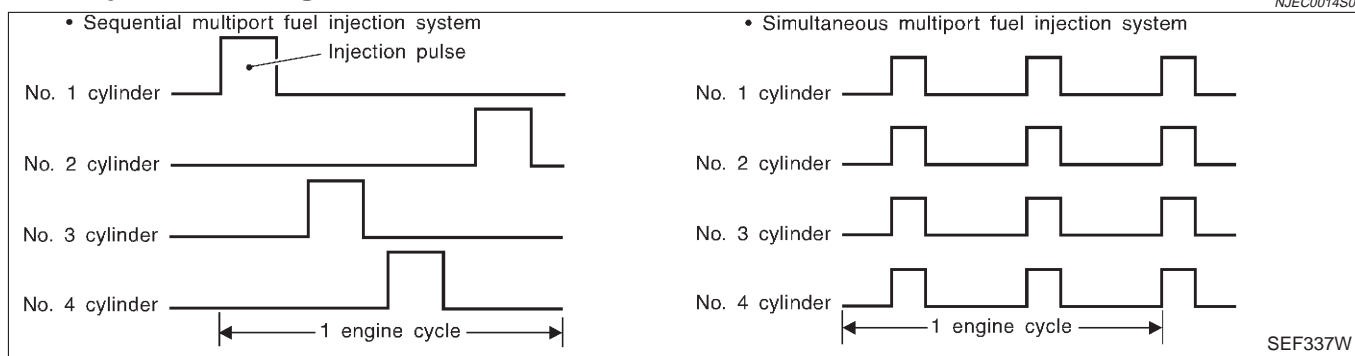

Two types of systems are used.

Sequential Multiport Fuel Injection System

Fuel is injected into each cylinder during each engine cycle according to the firing order. This system is used when the engine is running. NJEC0014S0701

Simultaneous Multiport Fuel Injection System

Fuel is injected simultaneously into all four cylinders twice each engine cycle. In other words, pulse signals of the same width are simultaneously transmitted from the ECM. NJEC0014S0702

The four injectors will then receive the signals two times for each engine cycle.

This system is used when the engine is being started and/or if the fail-safe system (CPU) is operating.

Fuel Shut-off

Fuel to each cylinder is cut off during deceleration or operation of the engine at excessively high speeds. NJEC0014S08

Electronic Ignition (EI) System


DESCRIPTION

Input/Output Signal Chart

Sensor	Input Signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS)	Engine speed	Ignition timing control	Power transistor
Camshaft position sensor (PHASE)	Engine speed and cylinder number		
Mass air flow sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Throttle position sensor	Throttle position Throttle valve idle position		
Vehicle speed sensor	Vehicle speed		
Ignition switch	Start signal		
Knock sensor	Engine knocking		
PNP switch	Gear position		
Battery	Battery voltage		

System Description

NJEC0015S02

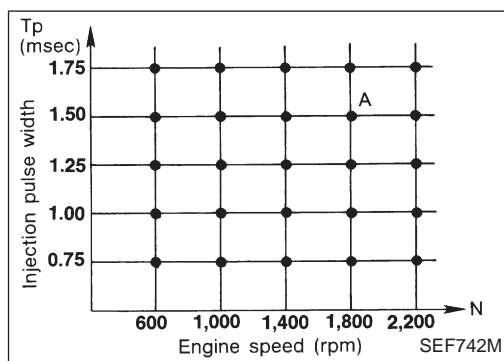

The ignition timing is controlled by the ECM to maintain the best air-fuel ratio for every running condition of the engine. The ignition timing data is stored in the ECM. This data forms the map shown above.

The ECM receives information such as the injection pulse width, crankshaft position sensor signal and camshaft position sensor signal. Computing this information, ignition signals are transmitted to the power transistor.

e.g., N: 1,800 rpm, Tp: 1.50 msec
A°BTDC

During the following conditions, the ignition timing is revised by the ECM according to the other data stored in the ECM.

- At starting
- During warm-up
- At idle
- During acceleration

The knock sensor retard system is designed only for emergencies. The basic ignition timing is programmed within the anti-knocking zone, if recommended fuel is used under dry conditions. The retard system does not operate under normal driving conditions.

If engine knocking occurs, the knock sensor monitors the condition. The signal is transmitted to the ECM. The ECM retards the ignition timing to eliminate the knocking condition.

Air Conditioning Cut Control

DESCRIPTION

Input/Output Signal Chart

NJEC0016

NJEC0016S01

Sensor	Input Signal to ECM	ECM function	Actuator
Air conditioner switch	Air conditioner "ON" signal	Air conditioner cut control	Air conditioner relay
PNP switch	Neutral position		
Throttle position sensor	Throttle valve opening angle		
Crankshaft position sensor (POS)	Engine speed		
Engine coolant temperature sensor	Engine coolant temperature		
Ignition switch	Start signal		
Refrigerant pressure sensor	Refrigerant pressure		
Vehicle speed sensor	Vehicle speed		
Power steering oil pressure switch	Power steering operation		

System Description

This system improves engine operation when the air conditioner is used. Under the following conditions, the air conditioner is turned off.

NJEC0016S02

- When the accelerator pedal is fully depressed.
- When cranking the engine.

- At high engine speeds.
- When the engine coolant temperature becomes excessively high.
- When operating power steering during low engine speed or low vehicle speed.
- When engine speed is excessively low.
- When the refrigerant pressure is excessively high or low.

Fuel Cut Control (at no load & high engine speed)

DESCRIPTION

Input/Output Signal Chart

NJEC0017
NJEC0017S01

Sensor	Input Signal to ECM	ECM function	Actuator
Vehicle speed sensor	Vehicle speed	Fuel cut control	Injectors
PNP switch	Neutral position		
Throttle position sensor	Throttle position		
Engine coolant temperature sensor	Engine coolant temperature		
Crankshaft position sensor (POS)	Engine speed		
Camshaft position sensor (PHASE)	Engine speed and cylinder number		


If the engine speed is above 3,950 rpm with no load, (for example, in Neutral and engine speed over 4,000 rpm) fuel will be cut off after some time. The exact time when the fuel is cut off varies based on engine speed. Fuel cut will operate until the engine speed reaches 1,150 rpm, then fuel cut is cancelled.

NOTE:

This function is different from deceleration control listed under “Multiport Fuel Injection (MFI) System”, EC-29.

Evaporative Emission System

DESCRIPTION

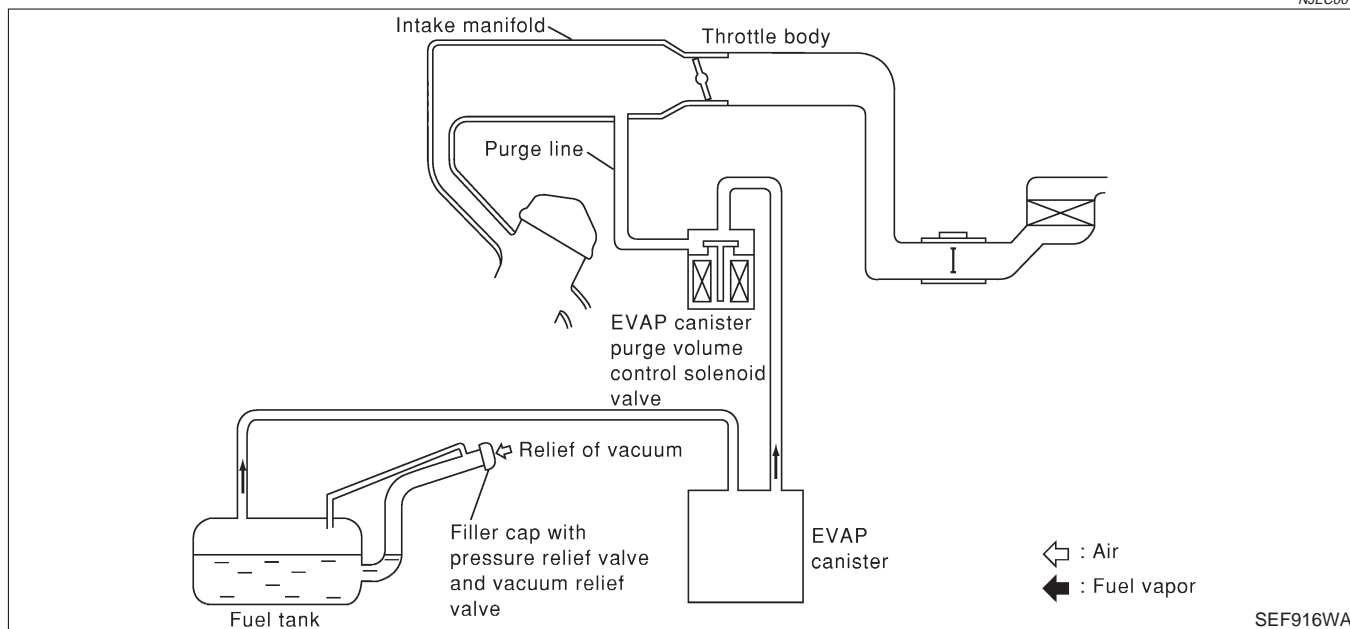
NJEC0018


The evaporative emission system is used to reduce hydrocarbons emitted into the atmosphere from the fuel system. This reduction of hydrocarbons is accomplished by activated charcoals in the EVAP canister. The fuel vapor in the sealed fuel tank is led into the EVAP canister which contains activated carbon and the vapor is stored there when the engine is not operating or when refueling to the fuel tank. The vapor in the EVAP canister is purged by the air through the purge line to the intake manifold when the engine is operating.

Evaporative Emission System (Cont'd)

EVAP canister purge volume control solenoid valve is controlled by ECM. When the engine operates, the flow rate of vapor controlled by EVAP canister purge volume control solenoid valve is proportionally regulated as the air flow increases.

EVAP canister purge volume control solenoid valve also shuts off the vapor purge line during decelerating and idling.

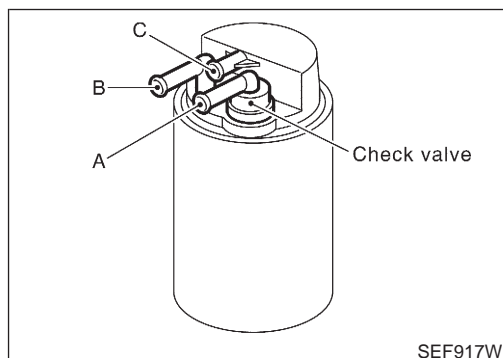

INSPECTION


EVAP Canister

NJEC0019

NJEC0019S01

Check EVAP canister as follows:

1. Block port B. Orally blow air through port A. Check that air flows freely through port C with check valve resistance.
2. Block port A. Orally blow air through port B. Check that air flows freely through port C.

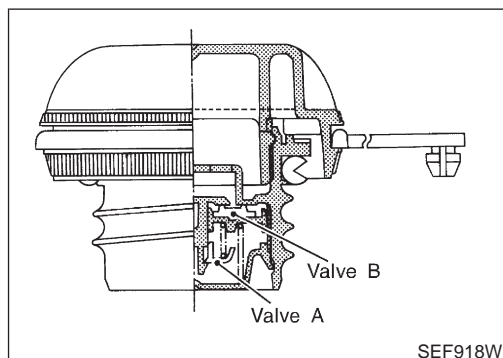

Fuel Tank Vacuum Relief Valve (Built into fuel filler cap)

NJEC0019S03

1. Wipe clean valve housing.
2. Check valve opening pressure and vacuum.


Pressure:

16.0 - 20.0 kPa (0.16 - 0.20 bar, 0.163 - 0.204 kg/cm², 2.32 - 2.90 psi)

Vacuum:

-6.0 to -3.5 kPa (-0.060 to -0.035 bar, -0.061 to -0.036 kg/cm², -0.87 to -0.51 psi)

3. If out of specification, replace fuel filler cap as an assembly.

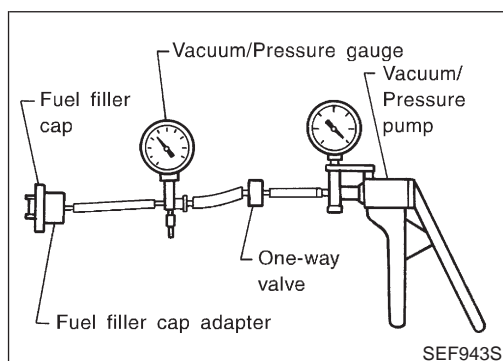

Evaporative Emission (EVAP) Canister Purge Volume Control Solenoid Valve

NJEC0019S07

Refer to EC-308.

Checking EVAP Vapour Lines

NJEC0019S13

1. Visually inspect vapor lines for leaks, cracks, damage, loose connections, chafing and deterioration.
2. Inspect vacuum relief valve of fuel tank filler cap for clogging, sticking, etc. Refer to next page.


Evaporative Emission System (Cont'd)

EVAPORATIVE EMISSION LINE DRAWING

=NJE0020

NOTE:


Do not use soapy water or any type of solvent while installing vacuum hoses or purge hoses.

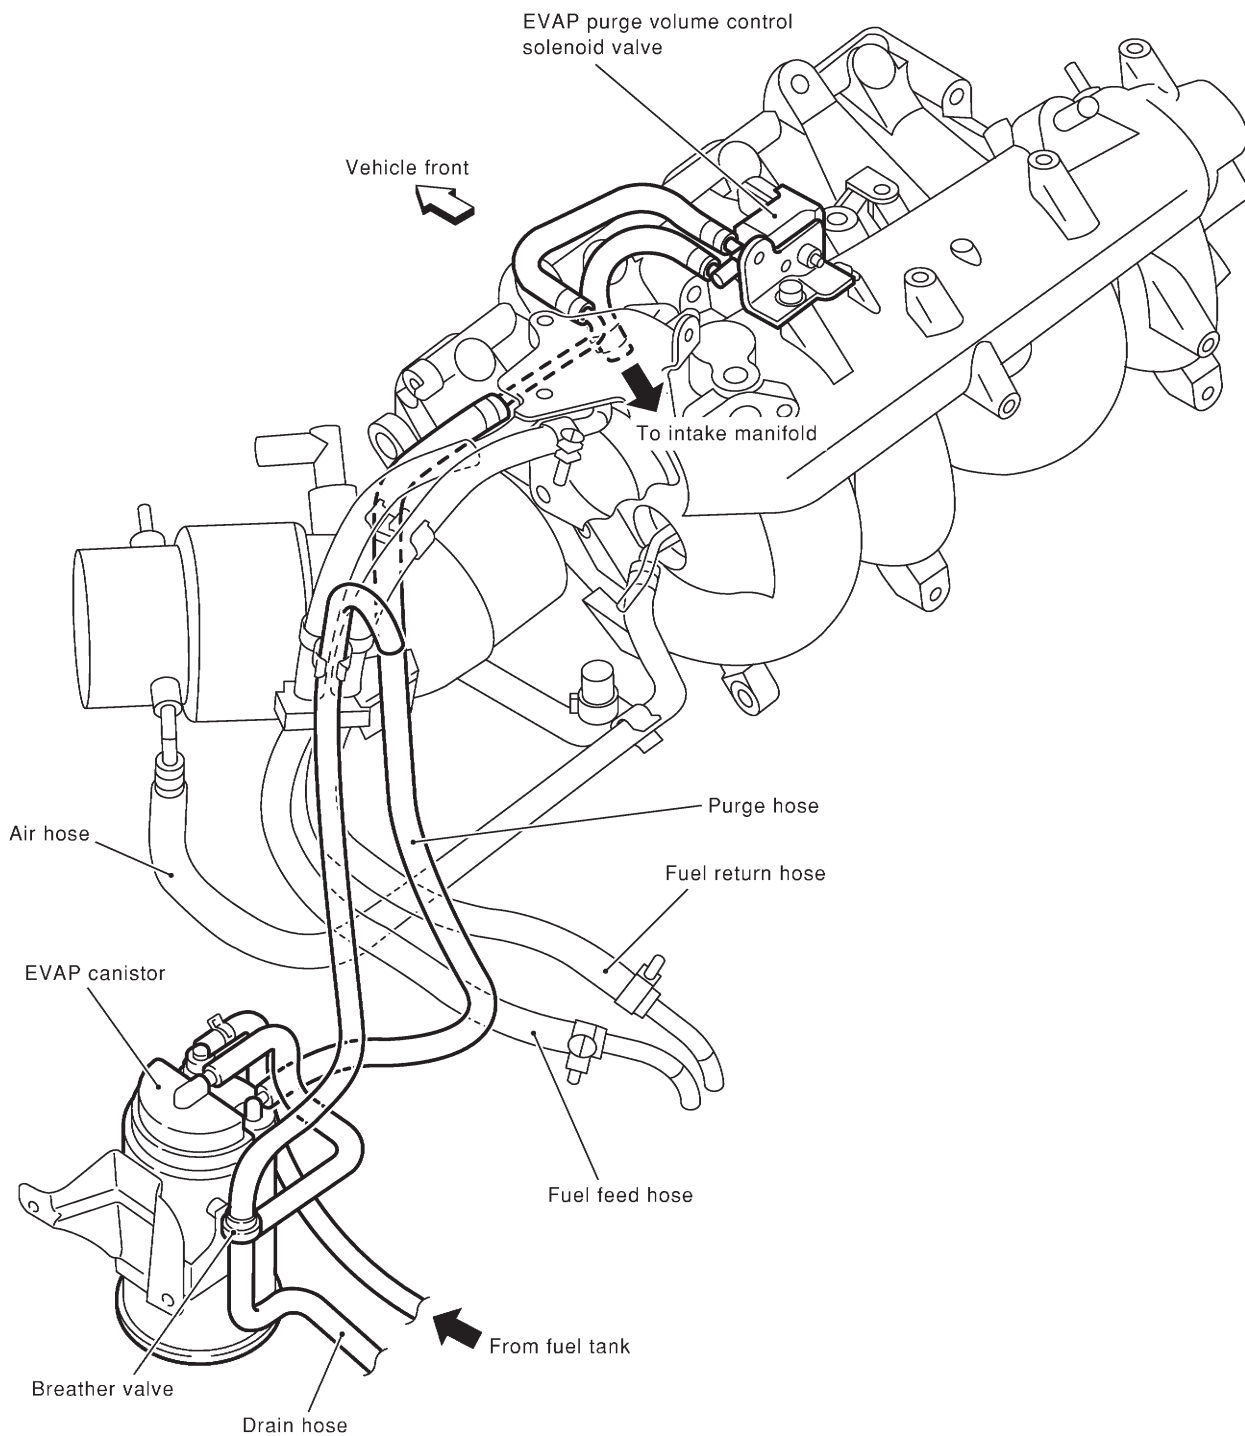

Positive Crankcase Ventilation

DESCRIPTION

NJEC0022

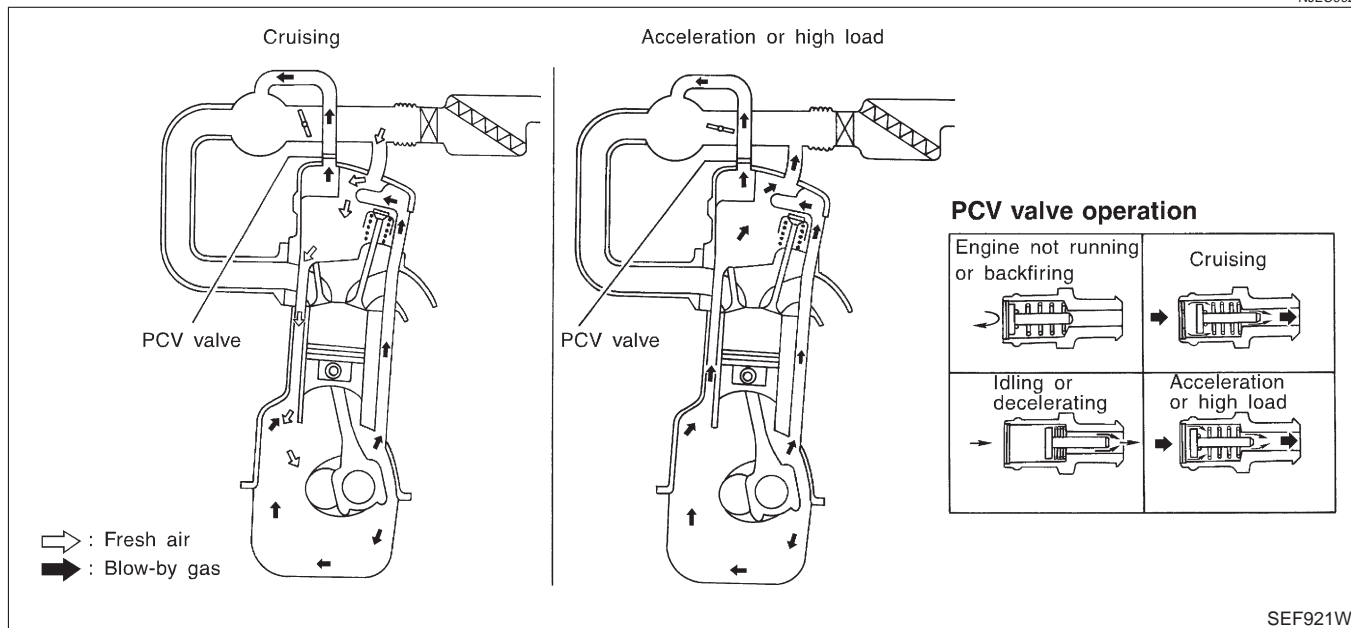

This system returns blow-by gas to the intake collector.


The positive crankcase ventilation (PCV) valve is provided to conduct crankcase blow-by gas to the intake manifold.

During partial throttle operation of the engine, the intake manifold sucks the blow-by gas through the PCV valve.

Normally, the capacity of the valve is sufficient to handle any blow-by and a small amount of ventilating air. The ventilating air is then drawn from the air duct into the crankcase. In this process the air passes through the hose connecting air inlet tubes to rocker cover.

Under full-throttle condition, the manifold vacuum is insufficient to draw the blow-by flow through the valve. The flow goes through the hose connection in the reverse direction.

On vehicles with an excessively high blow-by, the valve does not meet the requirement. This is because some of the flow will go through the hose connection to the intake collector under all conditions.

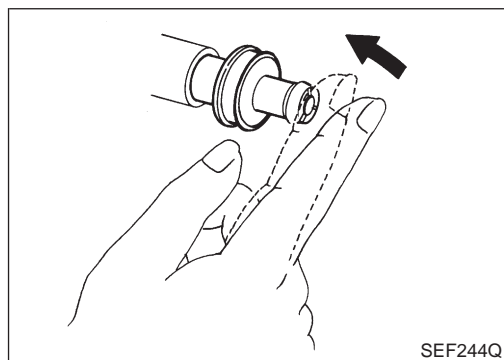


INSPECTION

NJEC0023

PCV (Positive Crankcase Ventilation) Valve

NJEC0023S01

With engine running at idle, remove PCV valve from breather separator. A properly working valve makes a hissing noise as air passes through it. A strong vacuum should be felt immediately when a finger is placed over the valve inlet.




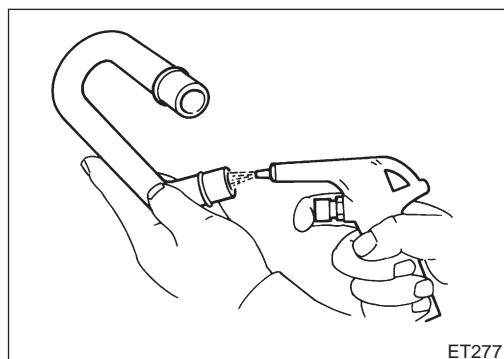


Ventilation Hose

NJEC0023S02

1. Check hoses and hose connections for leaks.
2. Disconnect all hoses and clean with compressed air. If any hose cannot be freed of obstructions, replace.

Fuel Pressure Release

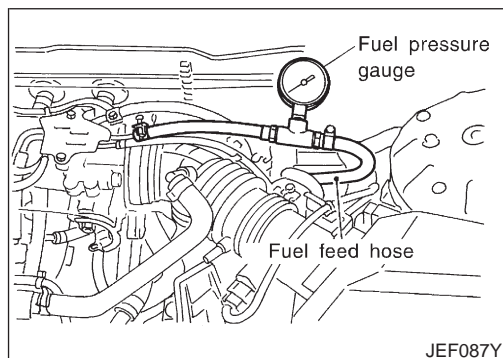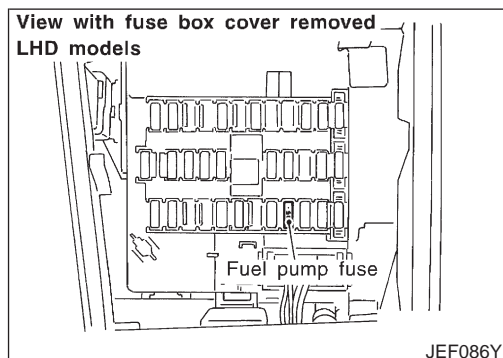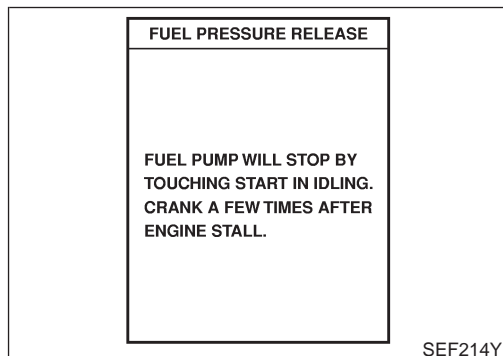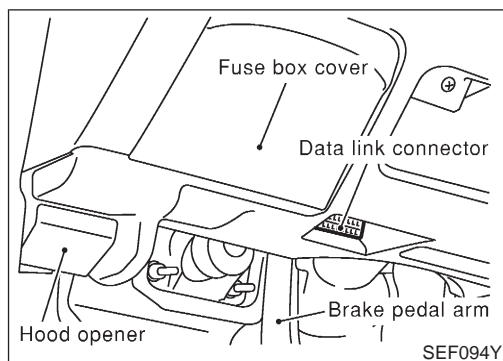

Fuel Pressure Release

NJEC0024

Before disconnecting fuel line, release fuel pressure from fuel line to eliminate danger.

WITH CONSULT-II

NJEC0024S01

1. Start engine.
2. Perform "FUEL PRESSURE RELEASE" in "WORK SUPPORT" mode with CONSULT-II.
3. After engine stalls, crank it two or three times to release all fuel pressure.
4. Turn ignition switch OFF.

WITHOUT CONSULT-II

NJEC0024S02

1. Remove fuse for fuel pump. Refer to fuse block cover for fuse location.
2. Start engine.
3. After engine stalls, crank it two or three times to release all fuel pressure.
4. Turn ignition switch OFF and reconnect fuel pump fuse.

Fuel Pressure Check

NJEC0025

- When reconnecting fuel line, always use new clamps.
- Make sure that clamp screw does not contact adjacent parts.
- Use a torque driver to tighten clamps.
- Use Pressure Gauge to check fuel pressure.
- Do not perform fuel pressure check with system operating. Fuel pressure gauge may indicate false readings.

1. Release fuel pressure to zero.
2. Disconnect fuel hose between fuel filter and fuel tube (engine side).
3. Install pressure gauge between fuel filter and fuel tube.
4. Start engine and check for fuel leakage.
5. Read the indication of fuel pressure gauge.

At idle speed:


With vacuum hose connected

Approximately 235 kPa (2.35 bar, 2.4 kg/cm², 34 psi)

With vacuum hose disconnected

Approximately 294 kPa (2.94 bar, 3.0 kg/cm², 43 psi)

If results are unsatisfactory, perform Fuel Pressure Regulator Check, EC-39.

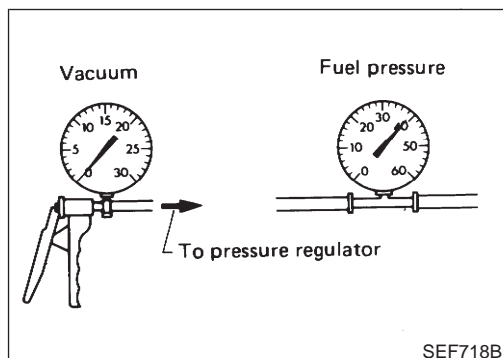


Fuel Pressure Regulator Check

NJEC0026

1. Stop engine and disconnect fuel pressure regulator vacuum hose from intake manifold.
2. Plug intake manifold with a rubber cap.
3. Connect variable vacuum source to fuel pressure regulator.
4. Start engine and read indication of fuel pressure gauge as vacuum is changed.

Fuel pressure should decrease as vacuum increases. If results are unsatisfactory, replace fuel pressure regulator.

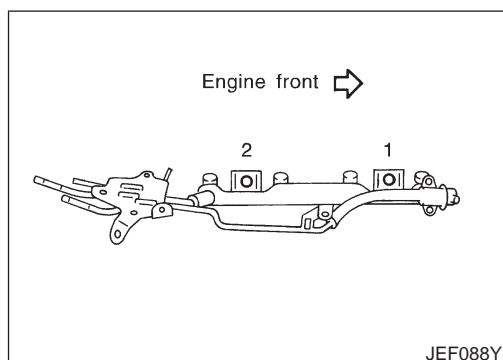

Injector


REMOVAL AND INSTALLATION

NJEC0027


1. Release fuel pressure to zero.
2. Remove fuel tube assemblies in numerical sequence as shown in the Figure at left.
3. Expand and remove clips securing fuel injectors.
4. Extract fuel injectors straight from fuel tubes.
 - **Be careful not to damage injector nozzles during removal.**
 - **Do not bump or drop fuel injectors.**
5. Install fuel injectors.

Carefully install O-rings, including the one used with the pressure regulator.


 - **Lubricate O-rings with a smear of engine oil.**
 - **Be careful not to damage O-rings with service tools or finger nails or clips. Do not expand or twist O-rings.**
 - **Discard old clips; replace with new ones.**
6. Position clips in grooves on fuel injectors.
 - **Make sure that protrusions of fuel injectors are aligned with cutouts of clips after installation.**

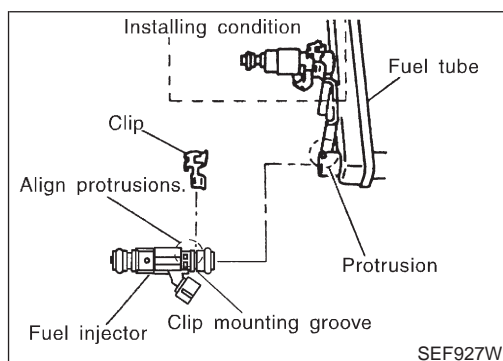

Injector (Cont'd)

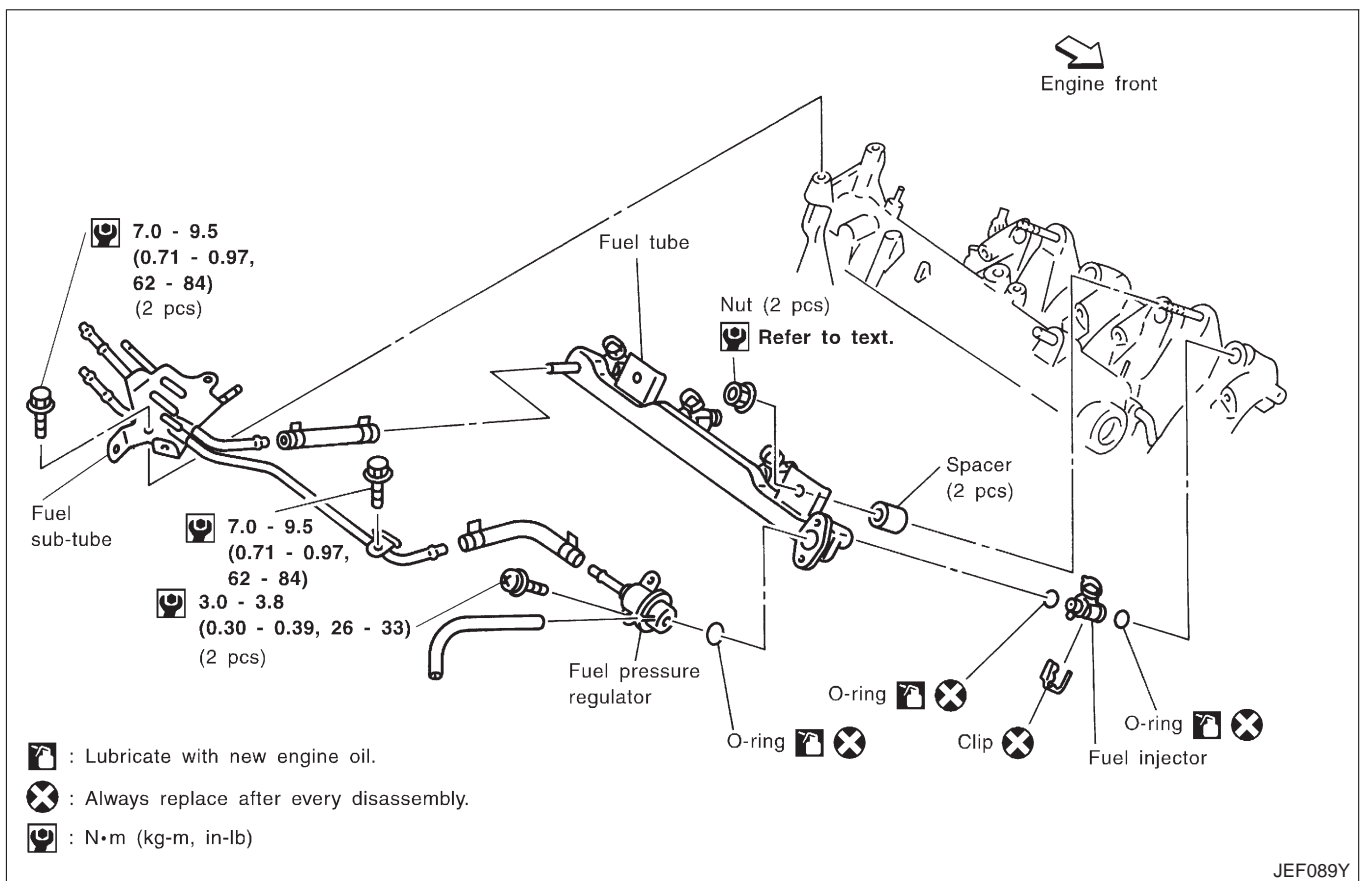

7. Align protrusions of fuel tubes with those of fuel injectors. Insert fuel injectors straight into fuel tubes.
8. After properly inserting fuel injectors, check to make sure that fuel tube protrusions are engaged with those of fuel injectors, and that flanges of fuel tubes are engaged with clips.

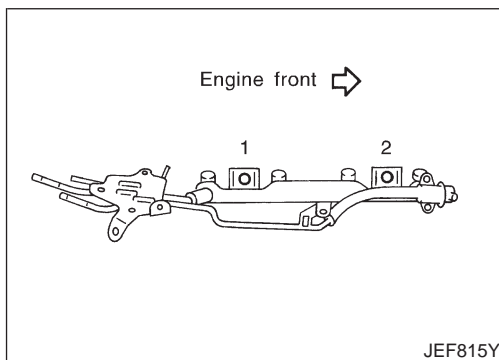

9. Tighten fuel tube assembly mounting nuts in numerical sequence (indicated in the Figure at left) and in two stages.

: Tightening torque N·m (kg-m, ft-lb)

1st stage:

12 - 13 (1.2 - 1.4, 9 - 10)


2nd stage:

17 - 23 (1.7 - 2.4, 13 - 17)

10. Insert fuel hoses into fuel tubes so that ends of fuel hoses butt up against fuel tubes; fasten with clamps, avoiding bulges.

CAUTION:

After properly connecting fuel tube assembly to injector and fuel hose, check connection for fuel leakage.

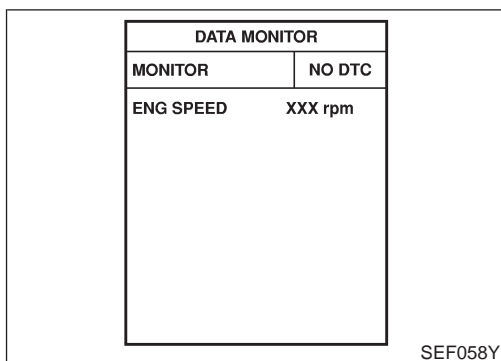

How to Check Idle Speed and Ignition Timing


IDL E SPEED

NJEC0028

NJEC0028S05


Method A

- **Using CONSULT-II**
Check idle speed in "DATA MONITOR" mode with CONSULT-II.
- **With GST**
Check idle speed in "MODE 1" with GST.

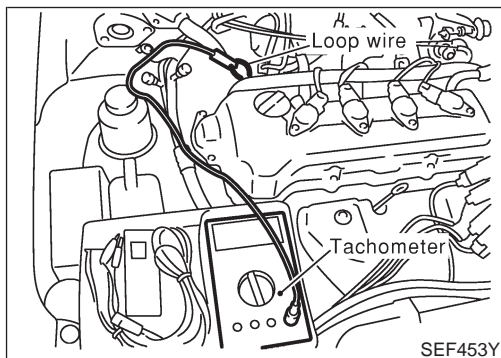

Method B (Using Loop wire)

Check the idle speed using loop-wire as shown in the figure.

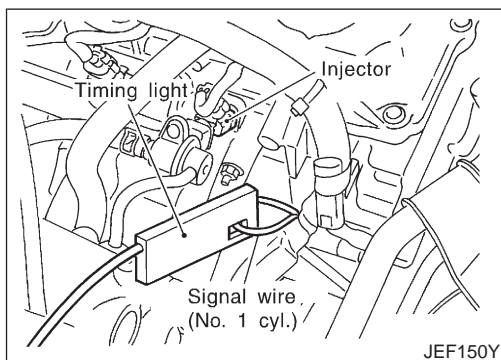


IGNITION TIMING


NJEC0028S06

Any of following two methods may be used.

- **Method A**
 - a) Attach timing light to loop wire or, combine the three No. 1 ignition coil harnesses and attach the timing light sensor (attach from above the harness protector) as shown.
 - b) Check ignition timing.


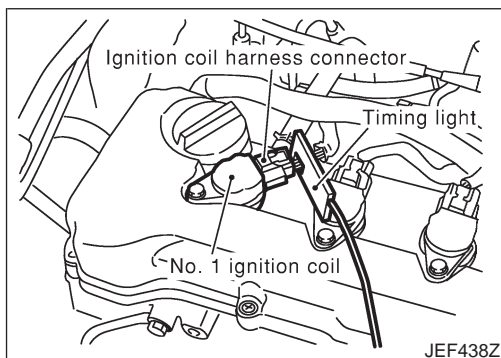


How to Check Idle Speed and Ignition Timing (Cont'd)

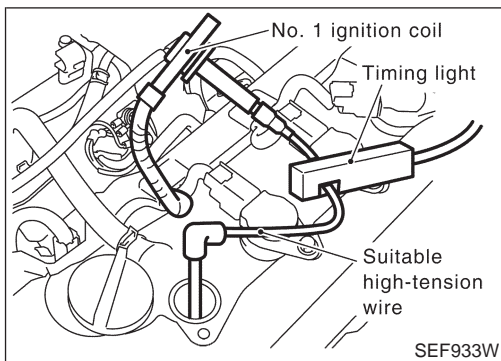

● **Method B**

- a) Remove No. 1 ignition coil.
- b) Connect No. 1 ignition coil and No. 1 spark plug with suitable high-tension wire as shown, and attach timing light clamp to this wire.
- c) Check ignition timing.

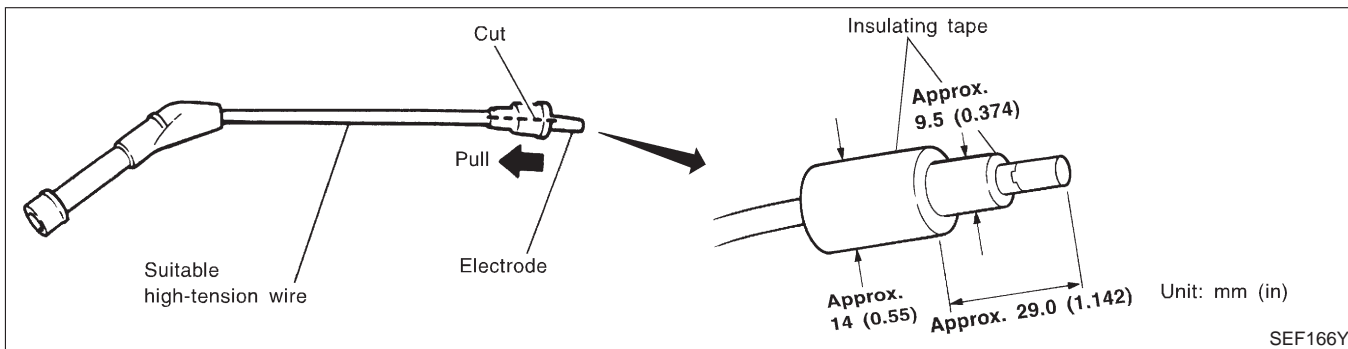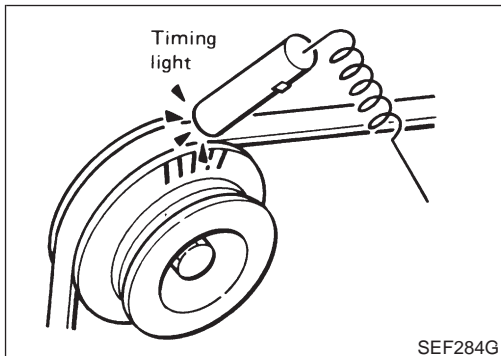


Preparation

- Make sure that the following parts are in good order. NJEC0592
- a) **Battery**
 - b) **Ignition system**
 - c) **Engine oil and coolant levels**
 - d) **Fuses**
 - e) **ECM harness connector**
 - f) **Vacuum hoses**
 - g) **Air intake system**
(Oil filler cap, oil level gauge, etc.)

- h) Fuel pressure
- i) Engine compression
- j) EGR valve operation
- k) Throttle valve
- l) EVAP system
 - On models equipped with air conditioner, checks should be carried out while the air conditioner is "OFF".
 - When checking idle speed on models equipped with A/T, ignition timing and mixture ratio, checks should be carried out while shift lever is in "P" or "N" position.
 - When measuring "CO" percentage, insert probe more than 40 cm (15.7 in) into tail pipe.
 - Turn off headlamps, heater blower, rear window defogger.
 - On vehicles equipped with daytime light systems, set lighting switch to the 1st position to light only small lamps.
 - Keep front wheels pointed straight ahead.
 - If engine stops immediately after starting or idle condition is unstable, perform the following to initialize IACV-AAC valve:
 - a) Stop engine and wait 9 seconds.
 - b) Turn ignition "ON" and wait 1 second.
 - c) Turn ignition "OFF" and wait 9 seconds.
 - Make sure the cooling fan has stopped.

OVERALL INSPECTION SEQUENCE

NJEC0592S01


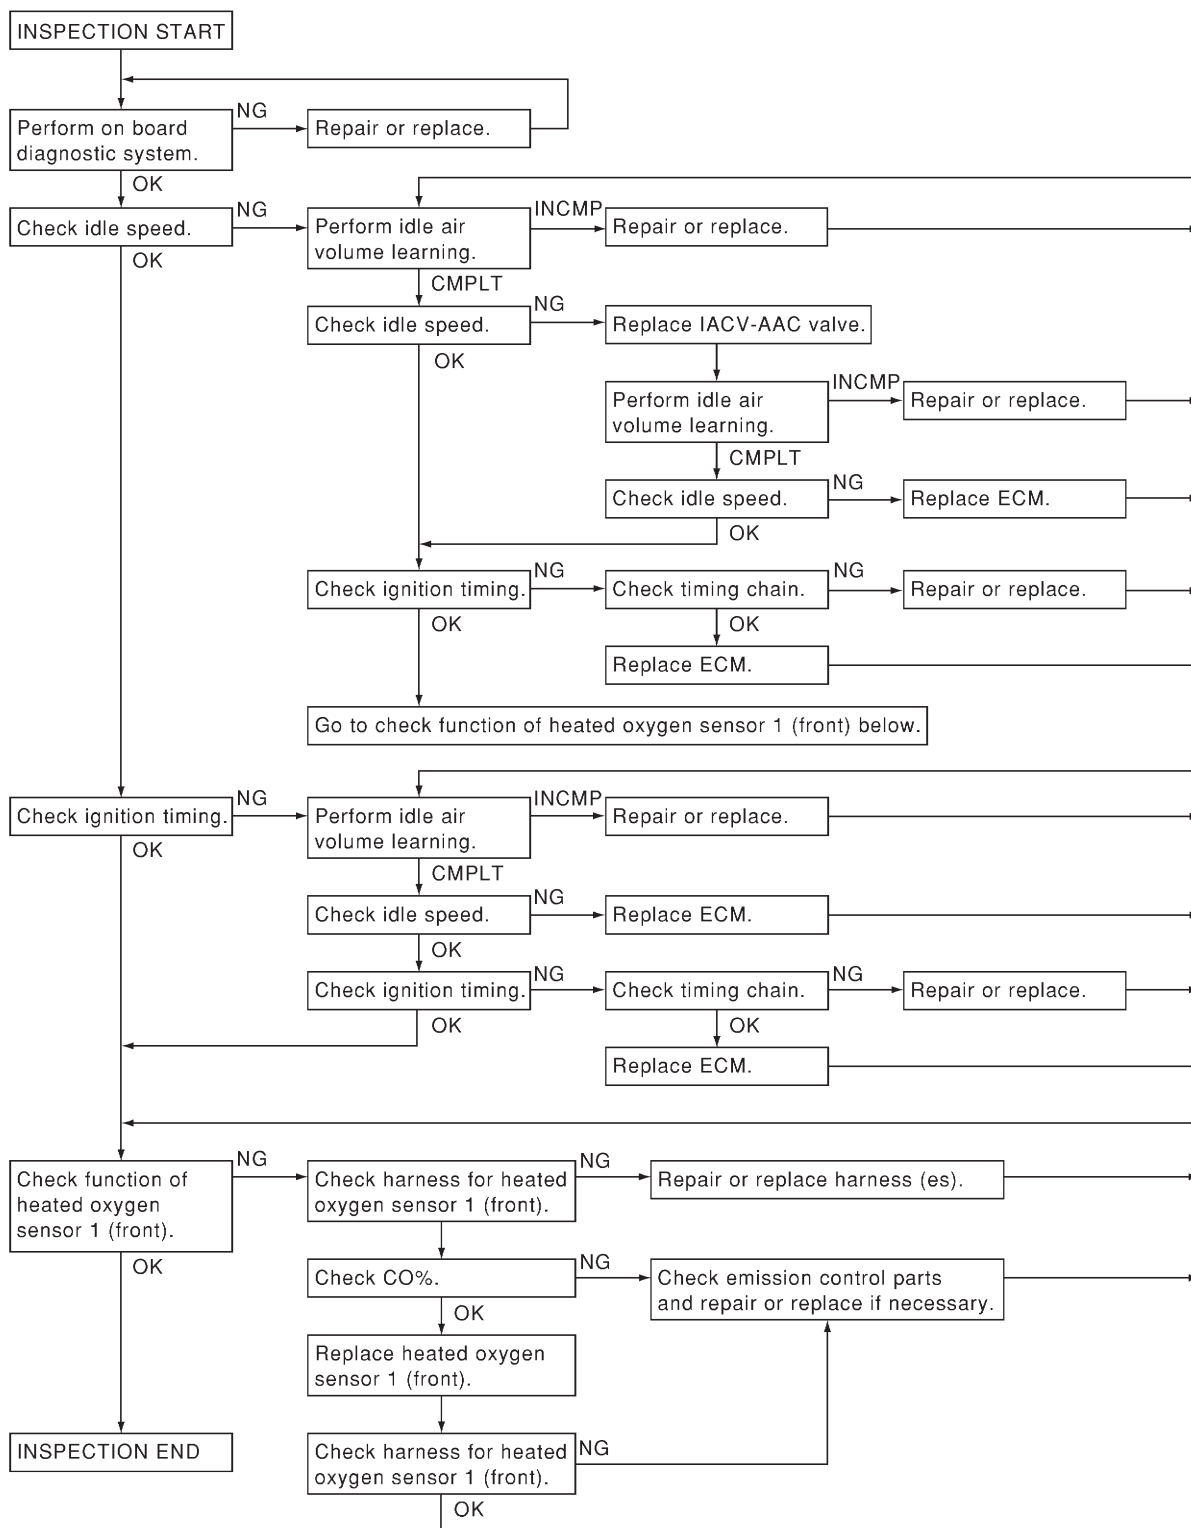


NOTE:

If a vehicle contains a part which is operating outside of design specifications with no MIL illumination, the part shall not be replaced prior to emission testing unless it is determined that the part has been tampered with or abused in such a way that the diagnostic system cannot reasonably be expected to detect the resulting malfunction.

Inspection Procedure

NJEC0593

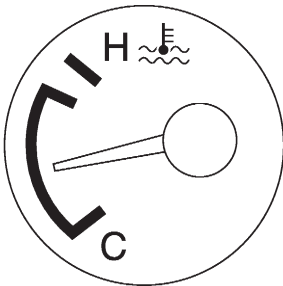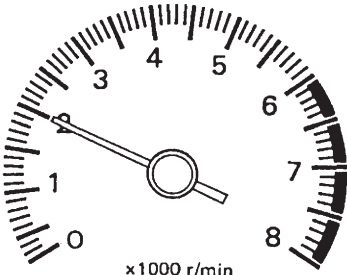1	INSPECTION START	<p>1. Visually check the following:</p> <ul style="list-style-type: none"> ● Air cleaner clogging ● Hoses and ducts for leaks ● EGR valve operation ● Electrical connectors ● Gasket ● Throttle valve and throttle position sensor operation <p>2. Start engine and warm it up until engine coolant temperature indicator points to the middle of gauge. Ensure engine stays below 1,000 rpm.</p> <div style="text-align: center; margin: 20px 0;">  </div> <p>3. Open engine hood and run engine at about 2,000 rpm for about 2 minutes under no-load.</p> <div style="text-align: center; margin: 20px 0;">  </div> <p>4. Make sure that no DTC is displayed with CONSULT-II or GST.</p> <p style="text-align: center;">OK or NG</p>	<p>SEF090Y</p> <p>SEF977U</p>	
	OK	▶	GO TO 3.	
	NG	▶	GO TO 2.	

2	REPAIR OR REPLACE	<p>Repair or replace components as necessary according to corresponding "Diagnostic Procedure".</p>	
		▶	GO TO 3.

BASIC SERVICE PROCEDURE

QG

Inspection Procedure (Cont'd)

3	CHECK TARGET IDLE SPEED	
<p><input checked="" type="checkbox"/> With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Select "ENG SPEED" in "DATA MONITOR" mode with CONSULT-II. 3. Check idle speed. M/T: 700±50 rpm A/T: 800±50 rpm (in "P" or "N" position) 		
<p><input type="checkbox"/> Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Check idle speed. M/T: 700±50 rpm A/T: 800±50 rpm (in "P" or "N" position) <p style="text-align: right;">OK or NG</p>		
OK	▶	GO TO 12.
NG	▶	GO TO 4.

4	PERFORM IDLE AIR VOLUME LEARNING	
<p>Refer to "Idle Air Volume Learning", EC-55. Which is the result CMPLT or INCMP?</p> <p style="text-align: center;">CMPLT or INCMP</p>		
CMPLT	▶	GO TO 5.
INCMP	▶	<ol style="list-style-type: none"> 1. Follow the construction of "Idle Air Volume Learning". 2. GO TO 4.


5	CHECK TARGET IDLE SPEED AGAIN	
<p><input checked="" type="checkbox"/> With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Select "ENG SPEED" in "DATA MONITOR" mode with CONSULT-II. 3. Check idle speed. M/T: 700±50 rpm A/T: 800±50 rpm (in "P" or "N" position) 		
<p><input type="checkbox"/> Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Check idle speed. M/T: 700±50 rpm A/T: 800±50 rpm (in "P" or "N" position) <p style="text-align: right;">OK or NG</p>		
OK	▶	GO TO 10.
NG	▶	GO TO 6.

6	REPLACE IACV-AAC VALVE	
<p>Replace IACV-AAC valve.</p>		
	▶	GO TO 7.

7	PERFORM IDLE AIR VOLUME LEARNING	
Refer to "Idle Air Volume Learning", EC-55. Which is the result CMPLT or INCMP?		
CMPLT or INCMP		
CMPLT	▶	GO TO 8.
INCMP	▶	1. Follow the construction of "Idle Air Volume Learning". 2. GO TO 4.

8	CHECK TARGET IDLE SPEED AGAIN	
<p>☑ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Select "ENG SPEED" in "DATA MONITOR" mode with CONSULT-II. 3. Check idle speed. M/T: 700±50 rpm A/T: 800±50 rpm (in "P" or "N" position) 		
<p>☒ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Check idle speed. M/T: 700±50 rpm A/T: 800±50 rpm (in "P" or "N" position) <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 10.
NG	▶	GO TO 9.

9	CHECK ECM FUNCTION	
<ol style="list-style-type: none"> 1. Substitute another known-good ECM to check ECM function. (ECM may be the cause of a problem, but this is rarely the case.) 2. Perform initialization of NATS system and registration of NATS ignition key IDs. Refer to "NATS (Nissan Anti-Theft System)", EC-72. 		
	▶	GO TO 4.

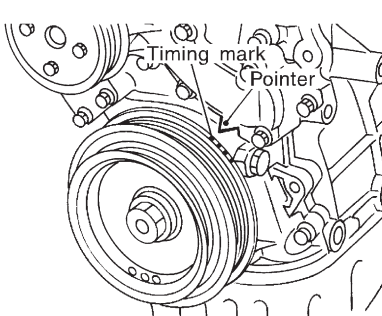10	CHECK IGNITION TIMING	
<ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Check ignition timing at idle using a timing light. 		
		
<p>M/T: 8°±5° BTDC A/T: 10°±5° BTDC (in "P" or "N" position)</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 18.
NG	▶	GO TO 11.


SEM872F

BASIC SERVICE PROCEDURE

QG

Inspection Procedure (Cont'd)

11	CHECK TIMING CHAIN INSTALLATION	
Check timing chain installation. Refer to EM-27, "Installation".		
OK or NG		
OK	▶	GO TO 9.
NG	▶	1. Repair the timing chain installation. 2. GO TO 4.

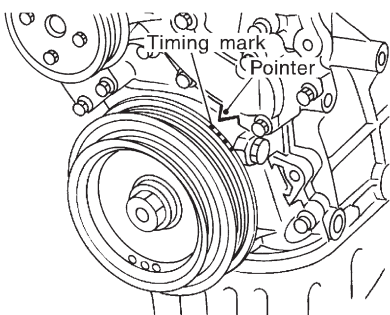12	CHECK IGNITION TIMING	
1. Start engine and let it idle. 2. Check ignition timing at idle using a timing light.		
		
SEM872F		
<p>M/T: 8°±5° BTDC A/T: 10°±5° BTDC (in "P" or "N" position)</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 18.
NG	▶	GO TO 13.

13	PERFORM IDLE AIR VOLUME LEARNING	
Refer to "Idle Air Volume Learning", EC-55. Which is the result CMPLT or INCMP?		
CMPLT or INCMP		
CMPLT	▶	GO TO 14.
INCMP	▶	1. Follow the construction of "Idle Air volume Learning". 2. GO TO 13.

14	CHECK TARGET IDLE SPEED AGAIN	
<p>☑ With CONSULT-II</p> <p>1. Start engine and warm it up to normal operating temperature. 2. Select "ENG SPEED" in "DATA MONITOR" mode with CONSULT-II. 3. Check idle speed. M/T: 700±50 rpm A/T: 800±50 rpm (in "P" or "N" position)</p>		
<p>☒ Without CONSULT-II</p> <p>1. Start engine and warm it up to normal operating temperature. 2. Check idle speed. M/T: 700±50 rpm A/T: 800±50 rpm (in "P" or "N" position)</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 16.
NG	▶	GO TO 15.

BASIC SERVICE PROCEDURE

QG*Inspection Procedure (Cont'd)*

15	CHECK ECM FUNCTION
1. Substitute another known-good ECM to check ECM function. (ECM may be the cause of a problem, but this is rarely the case.)	
2. Perform initialization of NATS system and registration of NATS ignition key IDs. Refer to "NATS (Nissan Anti-Theft System)", EC-72.	
	▶ GO TO 13.

16	CHECK IGNITION TIMING AGAIN
Check ignition timing again. Refer to Test No. 12.	
OK or NG	
OK	▶ GO TO 18.
NG	▶ GO TO 17.

17	CHECK TIMING CHAIN INSTALLATION
Check timing chain installation. Refer to EM-27, "Installation".	
OK or NG	
OK	▶ GO TO 15.
NG	▶ 1. Repair the timing chain installation. 2. GO TO 13.

18	ERASE UNNECESSARY DTC
After this inspection, unnecessary DTC No. might be displayed. Erase the stored memory in ECM and TCM (Transmission control module). Refer to "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION", EC-68 or EC-71 and AT-50, "HOW TO ERASE DTC".	
With CONSULT-II	▶ GO TO 19.
Without CONSULT-II	▶ GO TO 20.

BASIC SERVICE PROCEDURE

QG

Inspection Procedure (Cont'd)

19	CHECK HEATED OXYGEN SENSOR 1 (FRONT) SIGNAL								
<p> With CONSULT-II</p> <ol style="list-style-type: none"> 1. Run engine at about 2,000 rpm for about 2 minutes under no-load. 2. See "HO2S1 MNTR (B1)" in "DATA MONITOR" mode. 3. Running engine at 2,000 rpm under no-load (engine is warmed up to normal operating temperature.), check that the monitor fluctuates between "LEAN" and "RICH" more than 5 times during 10 seconds. 									
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2" style="padding: 2px;">DATA MONITOR</th> </tr> <tr> <th style="padding: 2px;">MONITOR</th> <th style="padding: 2px;">NO DTC</th> </tr> </thead> <tbody> <tr> <td style="padding: 2px;">ENG SPEED</td> <td style="padding: 2px;">XXX rpm</td> </tr> <tr> <td style="padding: 2px;">HO2S1 MNTR (B1)</td> <td style="padding: 2px;">RICH</td> </tr> </tbody> </table>		DATA MONITOR		MONITOR	NO DTC	ENG SPEED	XXX rpm	HO2S1 MNTR (B1)	RICH
DATA MONITOR									
MONITOR	NO DTC								
ENG SPEED	XXX rpm								
HO2S1 MNTR (B1)	RICH								
SEF820Y									
<p>1 time: RICH → LEAN → RICH 2 times: RICH → LEAN → RICH → LEAN → RICH</p> <p style="text-align: center;">OK or NG</p>									
OK	▶ INSPECTION END								
NG (Monitor does not fluctuate.)	▶ GO TO 23.								
NG (Monitor fluctuates less than 5 times.)	▶ GO TO 21.								

20	CHECK HEATED OXYGEN SENSOR 1 (FRONT) SIGNAL
<p> Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Run engine at about 2,000 rpm for about 2 minutes under no-load. 2. Set voltmeter probe between ECM terminal 62 and ground. 3. Make sure that the voltage fluctuates between 0 to 0.3V and 0.6 to 1.0V more than 5 times during 10 seconds at 2,000 rpm. 	
<p>1 time: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V 2 times: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ INSPECTION END
NG (Voltage does not fluctuate.)	▶ GO TO 23.
NG (Voltage fluctuates less than 5 times.)	▶ GO TO 21.

21	CHECK HEATED OXYGEN SENSOR 1 (FRONT) SIGNAL	
<p>Ⓟ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Stop engine. 2. Replace heated oxygen sensor 1 (front). 3. Start engine and warm it up to normal operating temperature. 4. Run engine at approx. 2,000 rpm for approx. 2 minutes under no-load. 5. See "HO2S1 MNTR (B1)" in "DATA MONITOR" mode. 6. Running engine at 2,000 rpm under no-load (engine is warmed up to normal operating temperature.), check that the monitor fluctuates between "LEAN" and "RICH" more than 5 times during 10 seconds. <p>1 time: RICH → LEAN → RICH 2 times: RICH → LEAN → RICH → LEAN → RICH</p>		
<p>ⓧ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Stop engine. 2. Replace heated oxygen sensor 1 (front). 3. Start engine and warm it up to normal operating temperature. 4. Run engine at approx. 2,000 rpm for approx. 2 minutes under no-load. 5. Set voltmeter probe between ECM terminal 62 and ground. 6. Make sure that the voltage fluctuates between 0 to 0.3V and 0.6 to 1.0V more than 5 times during 10 seconds at 2,000 rpm. <p>1 time: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V 2 times: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V</p> <p style="text-align: center;">OK or NG</p>		
OK		▶ INSPECTION END
NG		▶ GO TO 22.

22	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ol style="list-style-type: none"> 1. Check fuel pressure regulator. Refer to EC-39. 2. Check mass air flow sensor and its circuit. Refer to EC-152. 3. Check injector and its circuit. Refer to EC-446. Clean or replace if necessary. 4. Check engine coolant temperature sensor and its circuit. Refer to EC-163. 5. Check ECM function by substituting another known-good ECM. (ECM may be the cause of a problem, but this is rarely the case.) 		
		▶ GO TO 3.

23	CHECK HEATED OXYGEN SENSOR 1 (FRONT) HARNESS	
<ol style="list-style-type: none"> 1. Turn off engine and disconnect battery ground cable. 2. Disconnect ECM harness connector. 3. Disconnect heated oxygen sensor 1 (front) harness connector. 4. Check harness continuity between ECM terminal 62 and heated oxygen sensor 1 (front) harness connector terminal 1. Refer to Wiring Diagram, EC-176. <p style="color: blue;">Continuity should exist.</p> <p style="text-align: center;">OK or NG</p>		
OK		▶ GO TO 25.
NG		▶ GO TO 24.

24	REPAIR OR REPLACE	
Repair or replace harness between ECM and heated oxygen sensor 1 (front).		
		▶ GO TO 3.

25 PREPARATION FOR "CO" % CHECK

④ With CONSULT-II


1. Reconnect ECM harness connector.
2. Turn ignition switch "ON".
3. Select "COOLANT TEMP" in "ACTIVE TEST" mode.
4. Set "COOLANT TEMP" to 5°C (41°F) by touching "DWN" and "Qd".

ACTIVE TEST	
ENG COOLANT TEMP	XXX °C
MONITOR	
ENG SPEED	XXX rpm
INJ PULSE-B1	XXX msec
IGN TIMING	XXX BTDC

SEF172Y




⊗ Without CONSULT-II

1. Disconnect ECM harness connector.
2. Disconnect engine coolant temperature sensor harness connector.
3. Connect a resistor (4.4 kΩ) between terminals of engine coolant temperature sensor harness connector.

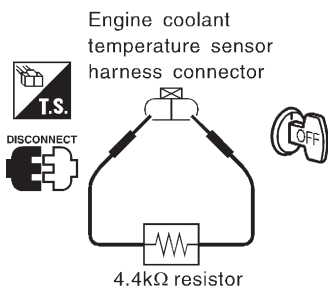

SEF982UA

▶ GO TO 26.

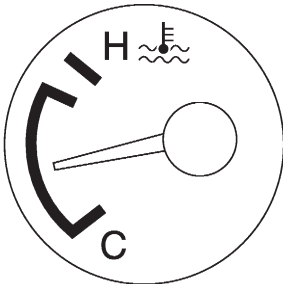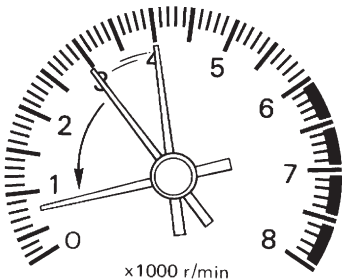26	CHECK "CO" %	<p>1. Start engine and warm it up until engine coolant temperature indicator points to the middle of gauge.</p> <div style="text-align: center; margin: 10px 0;">  </div> <p>2. Rev engine (2,000 to 3,000 rpm) two or three times under no-load, then run engine at idle speed.</p> <div style="text-align: center; margin: 10px 0;">  </div> <p>3. Check "CO" %. Idle CO: 3 - 11%</p> <p>4.  Without CONSULT-II After checking CO%,</p> <p>a. Disconnect the resistor from terminals of engine coolant temperature sensor.</p> <p>b. Connect engine coolant temperature sensor harness connector to engine coolant temperature sensor.</p> <p style="text-align: center;">OK or NG</p>	SEF090Y	SEF978U
OK	▶	GO TO 27.		
NG	▶	GO TO 28.		

27	CHECK HEATED OXYGEN SENSOR 1 (FRONT) SIGNAL	
<p>Ⓟ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Stop engine. 2. Replace heated oxygen sensor 1 (front). 3. Start engine and warm it up to normal operating temperature. 4. Run engine at approx. 2,000 rpm for approx. 2 minutes under no-load. 5. See "HO2S1 MNTR (B1)" in "DATA MONITOR" mode. 6. Maintaining engine at 2,000 rpm under no-load (engine is warmed up to normal operating temperature.), check that the monitor fluctuates between "LEAN" and "RICH" more than 5 times during 10 seconds. 1 time: RICH → LEAN → RICH 2 times: RICH → LEAN → RICH → LEAN → RICH 		
<p>ⓧ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Stop engine. 2. Replace heated oxygen sensor 1 (front). 3. Start engine and warm it up to normal operating temperature. 4. Run engine at approx. 2,000 rpm for approx. 2 minutes under no-load. 5. Set voltmeter probe between ECM terminal 62 and ground. 6. Make sure that voltage fluctuates between 0 - 0.3V and 0.6 - 1.0V more than 5 times during 10 seconds at 2,000 rpm. 1 time: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V 2 times: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 3.
NG	▶	GO TO 28.

28	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Connect heated oxygen sensor 1 (front) harness connectors to heated oxygen sensors 1 (front). ● Check fuel pressure regulator. Refer to EC-39. ● Check mass air flow sensor and its circuit. Refer to EC-152. ● Check injector and its circuit. Refer to EC-446. Clean or replace if necessary. ● Check engine coolant temperature sensor and its circuit. Refer to EC-163. ● Check ECM function by substituting another known-good ECM. (ECM may be the cause of a problem, but this is rarely the case.) 		
		▶ GO TO 3.

SELECT WORK ITEM
XXXXXXXXXX
XXXXXXXXXX
IDLE AIR VOL LEARN
XXXXXXXXXX
XXXXXXXXXX
XXXXXXXXXX

SEF217Z

WORK SUPPORT	
IDLE AIR VOL LEARN	
MONITOR	
ENG SPEED	XXX rpm
START	

SEF454Y

WORK SUPPORT	
IDLE AIR VOL LEARN	CMPLT
MONITOR	
ENG SPEED	XXX rpm
Result appears.	
CMPLT: successful	
INCMP: unsuccessful	
START	

SEF455Y

Idle Air Volume Learning

NJEC0562

DESCRIPTION

NJEC0562S01

“Idle Air Volume Learning” is an operation to learn the idle air volume that keeps each engine within the specific range. It must be performed under any of the following conditions:

- Each time IACV-AAC valve, throttle body or ECM is replaced.
- Idle speed or ignition timing is out of specification.

PRE-CONDITIONING

NJEC0562S02

Before performing “Idle Air Volume Learning”, make sure that all of the following conditions are satisfied.

Learning will be cancelled if any of the following conditions are missed for even a moment.

- Battery voltage: More than 12.9V (At idle)
- Engine coolant temperature: 70 - 99°C (158 - 210°F)
- PNP switch: ON
- Electric load switch: OFF
(Air conditioner, headlamp, rear window defogger)

On vehicles equipped with daytime light systems, set lighting switch to the 1st position to light only small lamps.

- Cooling fan motor: Not operating
- Steering wheel: Neutral (Straight-ahead position)
- Vehicle speed: Stopped
- Transmission: Warmed-up

For A/T models with CONSULT-II, drive vehicle until “FLUID TEMP SE” in “DATA MONITOR” mode of “A/T” system indicates less than 0.9V.

For A/T models without CONSULT-II and M/T models, drive vehicle for 10 minutes.

OPERATION PROCEDURE

NJEC0562S03

With CONSULT-II

NJEC0562S0301

1. Turn ignition switch “ON” and wait at least 1 second.
2. Turn ignition switch “OFF” and wait at least 10 seconds.
3. Start engine and warm it up to normal operating temperature.
4. Check that all items listed under the topic “PRE-CONDITIONING” (previously mentioned) are in good order.
5. Turn ignition switch “OFF” and wait at least 9 seconds.
6. Start the engine and let it idle for at least 28 seconds.
7. Select “IDLE AIR VOL LEARN” in “WORK SUPPORT” mode.
8. Touch “START” and wait 20 seconds.
9. Make sure that “CMPLT” is displayed on CONSULT-II screen. If “INCMP” is displayed, “Idle Air Volume Learning” will not be carried out successfully. In this case, find the cause of the problem by referring to the NOTE below.
10. Rev up the engine two or three times. Make sure that idle speed and ignition timing are within specifications.


ITEM	SPECIFICATION
Idle speed	M/T: 700±50 rpm A/T: 800±50 rpm (in “P” or “N” position)
Ignition timing	M/T: 8±5° BTDC A/T: 10±5° BTDC (in “P” or “N” position)

Without CONSULT-II

NJEC0562S0302

1. Turn ignition switch “ON” and wait at least 1 second.

Idle Air Volume Learning (Cont'd)

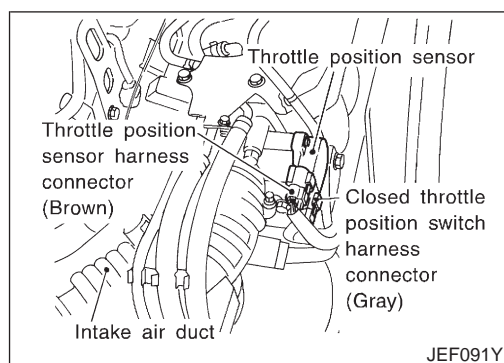

2. Turn ignition switch "OFF" and wait at least 10 seconds.
3. Start engine and warm it up to normal operating temperature.
4. Check that all items listed under the topic "PRE-CONDITIONING" (previously mentioned) are in good order.
5. Turn ignition switch "OFF" and wait at least 9 seconds.
6. Start the engine and let it idle for at least 28 seconds.
7. Disconnect throttle position sensor harness connector (brown), then reconnect it within 5 seconds.
8. Wait 20 seconds.
9. Make sure that idle speed is within specifications. If not, the result will be incomplete. In this case, find the cause of the problem by referring to the NOTE below.
10. Rev up the engine two or three times. Make sure that idle speed and ignition timing are within specifications.

ITEM	SPECIFICATION
Idle speed	M/T: 700±50 rpm A/T: 800±50 rpm (in "P" or "N" position)
Ignition timing	M/T: 8±5° BTDC A/T: 10±5° BTDC (in "P" or "N" position)

NOTE:

If idle air volume learning cannot be performed successfully, proceed as follows:

- 1) Check that throttle valve is fully closed.
- 2) Check PCV valve operation.
- 3) Check that downstream of throttle valve is free from air leakage.
- 4) Adjust closed throttle position switch and reset memory. (Refer to Basic Inspection, EC-98.)
- 5) When the above three items check out OK, engine component parts and their installation condition are questionable. Check and eliminate the cause of the problem. It is useful to perform "TROUBLE DIAGNOSIS — SPECIFICATION VALVE", EC-140.
- 6) If any of the following conditions occur after the engine has started, eliminate the cause of the problem and perform "Idle air volume learning" all over again:
 - Engine stalls.
 - Erroneous idle.
 - Blown fuses related to the IACV-AAC valve system.

Introduction

NJEC0029

MODELS WITH EURO-OBD SYSTEM

NJEC0029S01

The ECM has an on board diagnostic system which detects malfunctions related to engine sensors or actuators. The ECM also records various emission-related diagnostic information including:

Diagnostic Trouble Code (DTC)	Mode 3 of ISO 15031-5
Freeze Frame data	Mode 2 of ISO 15031-5
System Readiness Test (SRT) code	Mode 1 of ISO 15031-5
1st Trip Diagnostic Trouble Code (1st Trip DTC)	Mode 7 of ISO 15031-5
1st Trip Freeze Frame data	
Test values and Test limits	Mode 6 of ISO 15031-5
Calibration ID	Mode 9 of ISO 15031-5

The above information can be checked using procedures listed in the table below.

X: Applicable —: Not applicable

	DTC	1st trip DTC	Freeze Frame data	1st trip Freeze Frame data	SRT code	Test value
ECM*3	X	X*1	—	—	—	—
CONSULT-II	X	X	X	X	X	—
GST	X	X*2	X	—	X	X

*1: When DTC and 1st trip DTC simultaneously appear on the display, they cannot be clearly distinguished from each other.

*2: 1st trip DTCs for self-diagnoses concerning SRT items cannot be shown on the GST display.

*3: In diagnostic test mode II (Self-diagnostic results), DTC is displayed on MI. DTC uses a set of four digit numbers. (If so equipped)

The malfunction indicator (MI) on the instrument panel lights up when the same malfunction is detected in two consecutive trips (Two trip detection logic), or when the ECM enters fail-safe mode. (Refer to EC-123.)

MODELS WITHOUT EURO-OBD SYSTEM

NJEC0029S02

The ECM has an on board diagnostic system, which detects malfunctions related to engine sensors or actuators. The ECM also records various emission-related diagnostic information including:

Diagnostic Trouble Code (DTC)	
Freeze Frame data	
1st Trip Diagnostic Trouble Code (1st Trip DTC)	
1st Trip Freeze Frame data	

The above information can be checked using procedures listed in the table below.

X: Applicable —: Not applicable

	DTC	1st trip DTC	Freeze Frame data	1st trip Freeze Frame data
CONSULT-II	X	X	X	X
ECM*1	X	X*2	—	—

*1: In diagnostic test mode II (Self-diagnostic results), (1st trip) DTC is displayed on the MI by a set of four digit numbers.

*2: When the DTC and the 1st trip DTC appear on the display simultaneously, it is difficult to clearly distinguish one from the other.

Two Trip Detection Logic

NJEC0030

MODELS WITH EURO-OBD SYSTEM

NJEC0030S01

When a malfunction is detected for the first time, 1st trip DTC and 1st trip Freeze Frame data are stored in the ECM memory. The MI will not light up at this stage <1st trip>.

If the same malfunction is detected again during the next drive, the DTC and Freeze Frame data are stored in the ECM memory, and the MI lights up. The MI lights up at the same time when the DTC is stored <2nd trip>.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

QG

Two Trip Detection Logic (Cont'd)

The “trip” in the “Two Trip Detection Logic” means a driving mode in which self-diagnosis is performed during vehicle operation. Specific on board diagnostic items will cause the ECM to light up or blink the MI, and store DTC and Freeze Frame data, even in the 1st trip, as shown below.

X: Applicable —: Not applicable

Items	MI				DTC		1st trip DTC	
	1st trip		2nd trip		1st trip displaying	2nd trip displaying	1st trip displaying	2nd trip displaying
	Blinking	Lighting up	Blinking	Lighting up				
Misfire (Possible three way catalyst damage) — DTC: P0300 - P0304 is being detected	X	—	—	—	—	—	X	—
Misfire (Possible three way catalyst damage) — DTC: P0300 - P0304 is being detected	—	—	X	—	—	X	—	—
Fail-safe items (Refer to EC-123.)	—	X	—	—	X*1	—	X*1	—
Except above	—	—	—	X	—	X	X	—

*1: Except “ECM”.

MODELS WITHOUT EURO-OBDSYSTEM

NJEC0030S02

When a malfunction is detected for the first time, 1st trip DTC and 1st trip Freeze Frame data are stored in the ECM memory. <1st trip>

If the same malfunction is detected again during the next drive, the DTC and Freeze Frame data are stored in the ECM memory. <2nd trip> The “trip” in the “Two Trip Detection Logic” means a driving mode in which self-diagnosis is performed during vehicle operation. When the ECM enters the fail-safe mode (Refer to EC-123), the DTC is stored in the ECM memory even in the 1st trip.

Emission-related Diagnostic Information

NJEC0031

MODELS WITH EURO-OBDSYSTEM

NJEC0031S01

DTC and 1st Trip DTC

NJEC0031S0101

The 1st trip DTC (whose number is the same as the DTC number) is displayed for the latest self-diagnostic result obtained. If the ECM memory was cleared previously, and the 1st trip DTC did not reoccur, the 1st trip DTC will not be displayed. If a malfunction is detected during the 1st trip, the 1st trip DTC is stored in the ECM memory. The MI will not light up (two trip detection logic). If the same malfunction is not detected in the 2nd trip (meeting the required driving pattern), the 1st trip DTC is cleared from the ECM memory. If the same malfunction is detected in the 2nd trip, both the 1st trip DTC and DTC are stored in the ECM memory and the MI lights up. In other words, the DTC is stored in the ECM memory and the MI lights up when the same malfunction occurs in two consecutive trips. If a 1st trip DTC is stored and a non-diagnostic operation is performed between the 1st and 2nd trips, only the 1st trip DTC will continue to be stored. For malfunctions that blink or light up the MI during the 1st trip, the DTC and 1st trip DTC are stored in the ECM memory.

Procedures for clearing the DTC and the 1st trip DTC from the ECM memory are described in “How to Erase Emission-related Diagnostic Information”. Refer to EC-68.

For malfunctions in which 1st trip DTCs are displayed, refer to EC-66. These items are required by legal regulations to continuously monitor the system/component. In addition, the items monitored non-continuously are also displayed on CONSULT-II.

1st trip DTC is specified in Mode 7 of ISO 15031-5. 1st trip DTC detection occurs without lighting up the MI and therefore does not warn the driver of a problem. However, 1st trip DTC detection will not prevent the vehicle from being tested, for example during Inspection/Maintenance (I/M) tests.

When a 1st trip DTC is detected, check, print out or write down and erase (1st trip) DTC and Freeze Frame data as specified in “Work Flow” procedure Step II, refer to page EC-96. Then perform “DTC Confirmation Procedure” or “Overall Function Check” to try to duplicate the problem. If the malfunction is duplicated, the item requires repair.

How to read DTC and 1st Trip DTC

DTC and 1st trip DTC can be read by the following methods.

- With CONSULT-II** **With GST**

CONSULT-II or GST (Generic Scan Tool) Examples: P0340, P1320, P0705, P0750, etc.

These DTCs are prescribed by ISO 15031-6.

(CONSULT-II also displays the malfunctioning component or system.)

- **1st trip DTC No. is the same as DTC No.**
- **Output of a DTC indicates a malfunction. However, Mode II and GST do not indicate whether the malfunction is still occurring or has occurred in the past and has returned to normal.**
CONSULT-II can identify malfunction status as shown below. Therefore, using CONSULT-II (if available) is recommended.

A sample of CONSULT-II display for DTC is shown below. DTC or 1st trip DTC of a malfunction is displayed in SELF-DIAGNOSTIC RESULTS mode of CONSULT-II. Time data indicates how many times the vehicle was driven after the last detection of a DTC.

If the DTC is being detected currently, the time data will be "0".

If a 1st trip DTC is stored in the ECM, the time data will be "[1t]".

DTC display		SELF DIAG RESULTS		SELF DIAG RESULTS	
		DTC RESULTS	TIME	DTC RESULTS	TIME
		IACV-AAC VALVE [P0505]	0	IACV-AAC VALVE [P0505]	1t
			1st trip DTC display		

SEF698X

Freeze Frame Data and 1st Trip Freeze Frame Data

NJEC0031S0102

The ECM records the driving conditions such as fuel system status, calculated load value, engine coolant temperature, short term fuel trim, long term fuel trim, engine speed, vehicle speed, absolute throttle position, base fuel schedule and intake air temperature at the moment a malfunction is detected.

Data which are stored in the ECM memory, along with the 1st trip DTC, are called 1st trip freeze frame data. The data, stored together with the DTC data, are called freeze frame data and displayed on CONSULT-II or GST. The 1st trip freeze frame data can only be displayed on the CONSULT-II screen, not on the GST. For details, see EC-84.

Only one set of freeze frame data (either 1st trip freeze frame data or freeze frame data) can be stored in the ECM. 1st trip freeze frame data is stored in the ECM memory along with the 1st trip DTC. There is no priority for 1st trip freeze frame data and it is updated each time a different 1st trip DTC is detected. However, once freeze frame data (2nd trip detection/MI on) is stored in the ECM memory, 1st trip freeze frame data is no longer stored. Remember, only one set of freeze frame data can be stored in the ECM. The ECM has the following priorities to update the data.

Priority	Items	
1	Freeze frame data	Misfire — DTC: P0300 - P0304 (0300 - 0304) Fuel Injection System Function — DTC: P0171 (0171), P0172 (0172)
2		Except the above items (Includes A/T related items)
3	1st trip freeze frame data	

For example, the EGR malfunction (Priority: 2) was detected and the freeze frame data was stored in the 2nd trip. After that when the misfire (Priority: 1) is detected in another trip, the freeze frame data will be updated from the EGR malfunction to the misfire. The 1st trip freeze frame data is updated each time a different malfunction is detected. There is no priority for 1st trip freeze frame data. However, once freeze frame data is stored in the ECM memory, 1st trip freeze data is no longer stored (because only one freeze frame data or 1st trip freeze frame data can be stored in the ECM). If freeze frame data is stored in the ECM memory and freeze frame data with the same priority occurs later, the first (original) freeze frame data remains unchanged in the ECM memory.

Both 1st trip freeze frame data and freeze frame data (along with the DTCs) are cleared when the ECM memory is erased. Procedures for clearing the ECM memory are described in "How to Erase Emission-related Diagnostic Information". Refer to EC-68.

System Readiness Test (SRT) Code

NJEC0031S0103

System Readiness Test (SRT) code is specified in Mode 1 of ISO 15031-5.

As part of an emissions test for Inspection & Maintenance (I/M), certain states require the status of SRT be used to indicate whether the ECM has completed self-diagnosis of major emission systems and components. Completion must be verified in order for the emissions inspection to proceed.

If a vehicle is rejected for a State emissions inspection due to one or more SRT items indicating "INCMP", use the information in this Service Manual to set the SRT to "CMPLT".

In most cases the ECM will automatically complete its self-diagnosis cycle during normal usage, and the SRT status will indicate "CMPLT" for each application system. Once set as "CMPLT", the SRT status remains "CMPLT" until the self-diagnosis memory is erased.

Occasionally, certain portions of the self-diagnostic test may not be completed as a result of the customer's normal driving pattern; the SRT will indicate "INCMP" for these items.

NOTE:

The SRT will also indicate "INCMP" if the self-diagnosis memory is erased for any reason or if the ECM memory power supply is interrupted for several hours.

If, during the state emissions inspection, the SRT indicates "CMPLT" for all test items, the inspector will continue with the emissions test. However, if the SRT indicates "INCMP" for one or more of the SRT items the vehicle is returned to the customer untested.

NOTE:

If MI is "ON" during the state emissions inspection, the vehicle is also returned to the customer untested even though the SRT indicates "CMPLT" for all test items. Therefore, it is important to check SRT ("CMPLT") and DTC (No DTCs) before the inspection.

SRT Item

NJEC0031S0107

The table below shows required self-diagnostic items to set the SRT to "CMPLT".

SRT item (CONSULT-II indication)	Performance Priority*1	Required self-diagnostic items to set the SRT to "CMPLT"	Corresponding DTC No.
CATALYST	3	Three way catalyst function	P0420
O2 SENSOR	3	Heated oxygen sensor 1 (front) (circuit)	P0130
		Heated oxygen sensor 1 (front) (lean shift monitoring)	P0131
		Heated oxygen sensor 1 (front) (rich shift monitoring)	P0132
		Heated oxygen sensor 1 (front) (response monitoring)	P0133
		Heated oxygen sensor 1 (front) (high voltage)	P0134
		Heated oxygen sensor 2 (rear) (min. voltage monitoring)	P0137
		Heated oxygen sensor 2 (rear) (max. voltage monitoring)	P0138
		Heated oxygen sensor 2 (rear) (response monitoring)	P0139
O2 SEN HEATER	3	Front heated oxygen sensor 1 heater (front)	P0135
		Rear heated oxygen sensor 1 heater (rear)	P0141
EGR SYSTEM (If so equipped)	3	EGR function (close)	P0400
	1	EGR function (open)	P1402

*1: If completion of several SRTs is required, perform driving patterns (DTC confirmation procedure), one by one based on the priority for models with CONSULT-II.

SRT Set Timing

NJEC0031S0108

SRT is set as "CMPLT" after self-diagnosis has been performed one or more times. Completion of SRT is done regardless of whether the result is OK or NG. The set timing is different between OK and NG results and is shown in the table below.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

QG

Emission-related Diagnostic Information (Cont'd)

Self-diagnosis result		Example						
		Diagnosis	Ignition cycle					
			← ON →	OFF	← ON →	OFF	← ON →	OFF
All OK	Case 1	P0400	OK (1)	— (1)	OK (2)	— (2)		
		P0402	OK (1)	— (1)	— (1)	OK (2)		
		P1402	OK (1)	OK (2)	— (2)	— (2)		
		SRT of EGR	“CMPLT”	“CMPLT”	“CMPLT”	“CMPLT”		
	Case 2	P0400	OK (1)	— (1)	— (1)	— (1)		
		P0402	— (0)	— (0)	OK (1)	— (1)		
		P1402	OK (1)	OK (2)	— (2)	— (2)		
		SRT of EGR	“INCMP”	“INCMP”	“CMPLT”	“CMPLT”		
NG exists	Case 3	P0400	OK	OK	—	—		
		P0402	—	—	—	—		
		P1402	NG	—	NG	NG (Consecutive NG)		
		(1st trip) DTC	1st trip DTC	—	1st trip DTC	DTC (= MIL “ON”)		
		SRT of EGR	“INCMP”	“INCMP”	“INCMP”	“CMPLT”		

OK: Self-diagnosis is carried out and the result is OK.

NG: Self-diagnosis is carried out and the result is NG.

—: Self-diagnosis is not carried out.

When all SRT related self-diagnoses showed OK results in a single cycle (Ignition OFF-ON-OFF), the SRT will indicate “CMPLT”. → Case 1 above

When all SRT related self-diagnoses showed OK results through several different cycles, the SRT will indicate “CMPLT” at the time the respective self-diagnoses have at least one OK result. → Case 2 above

If one or more SRT related self-diagnoses showed NG results in 2 consecutive cycles, the SRT will also indicate “CMPLT”. → Case 3 above

The table above shows that the minimum number of cycles for setting SRT as “INCMP” is one (1) for each self-diagnosis (Case 1 & 2) or two (2) for one of self-diagnoses (Case 3). However, in preparation for the state emissions inspection, it is unnecessary of each self-diagnosis to be executed twice (Case 3) for the following reasons:

- The SRT will indicate “CMPLT” at the time the respective self-diagnoses have one (1) OK result.
- The emissions inspection requires “CMPLT” of the SRT only with OK self-diagnosis results.
- When, during SRT driving pattern, 1st trip DTC (NG) is detected prior to “CMPLT” of SRT, the self-diagnosis memory must be erased from ECM after repair.
- If the 1st trip DTC is erased, all the SRT will indicate “INCMP”.


NOTE:

SRT can be set as “CMPLT” together with the DTC(s). Therefore, DTC check must always be carried out prior to the state emission inspection even though the SRT indicates “CMPLT”.

SRT Service Procedure

If a vehicle has failed the state emissions inspection due to one or more SRT items indicating “INCMP”, review the flowchart diagnostic sequence on the next page.

NJEC0031S0109

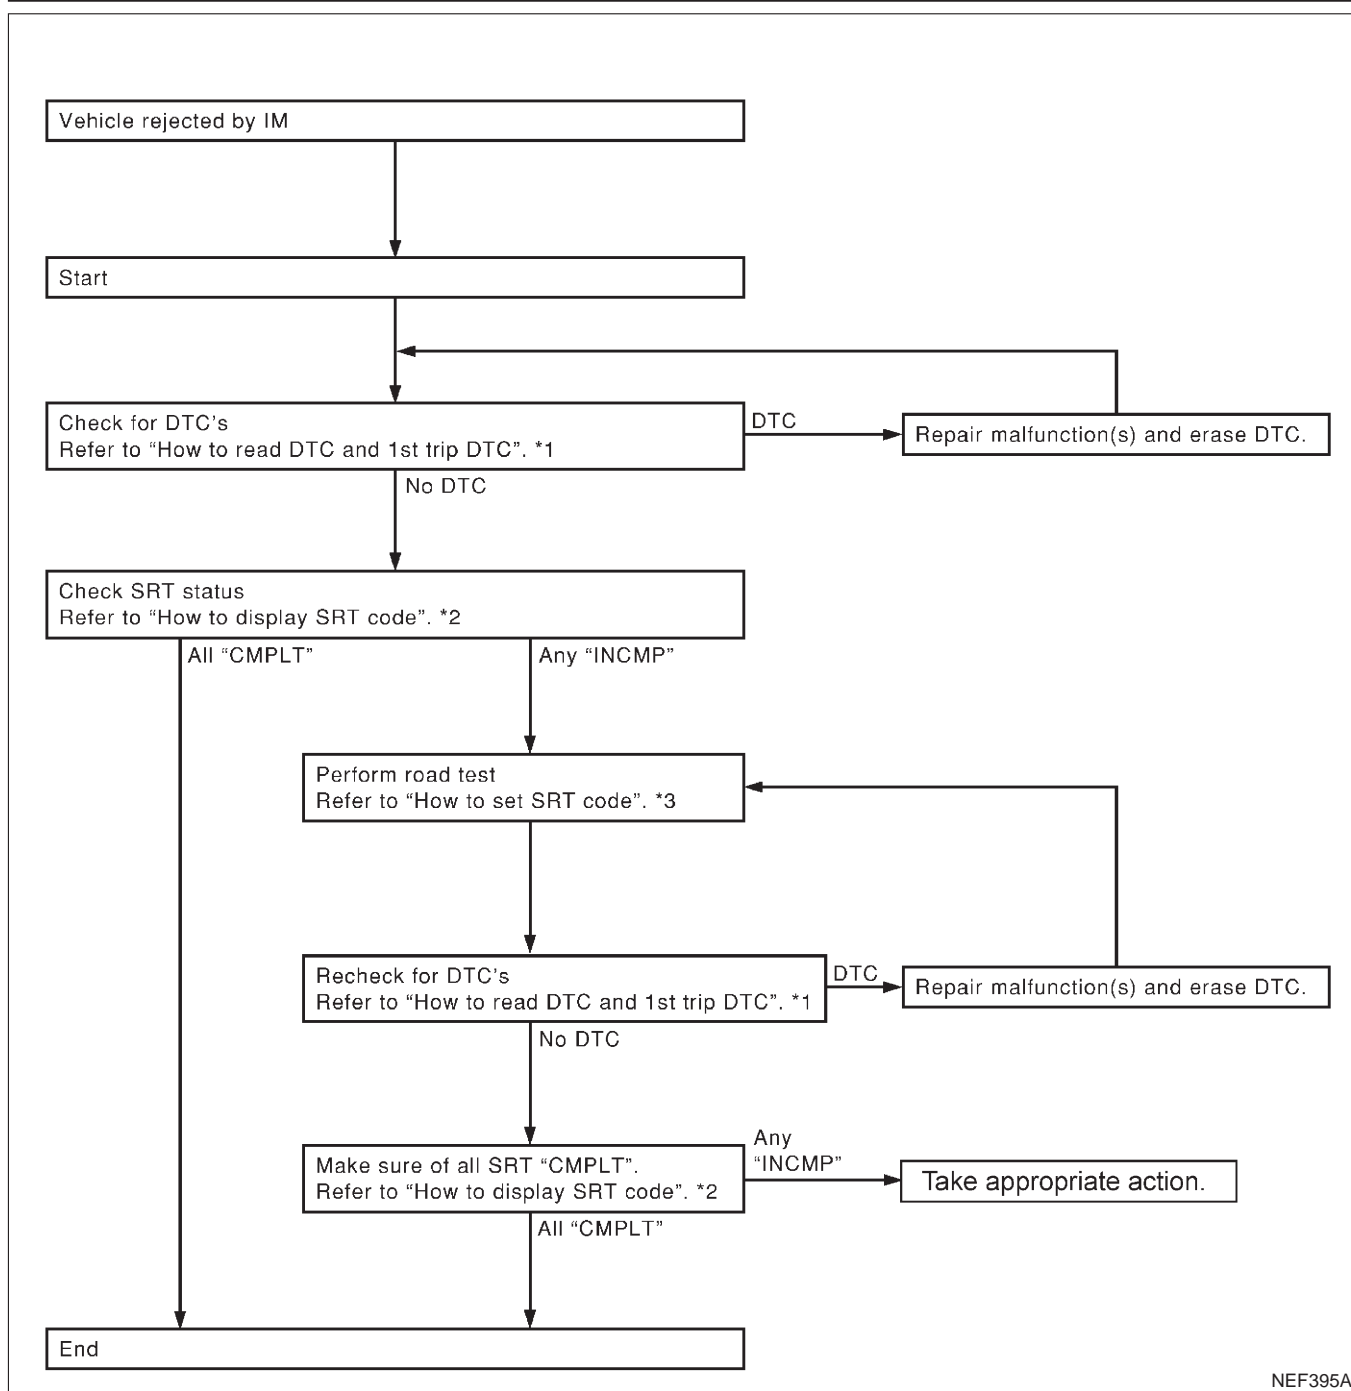

NEF395A

*1 EC-58

*2 EC-62

*3 EC-63

How to Display SRT Code

1. With CONSULT-II

NJEC0031S0110

Selecting "SRT STATUS" in "DTC CONFIRMATION" mode with CONSULT-II.

For items whose SRT codes are set, a "CMPLT" is displayed on the CONSULT-II screen; for items whose SRT codes are not set, "INCMP" is displayed as shown below.

SRT STATUS	
CATALYST	CMLPT
HO2S HTR	CMLPT
HO2S	CMLPT
EGR SYSTEM	INCOMP

SEF821Y

2.  **With GST**
 Selecting Mode 1 with GST (Generic Scan Tool)

How to Set SRT Code

To set all SRT codes, self-diagnosis for the items indicated above must be performed one or more times. Each diagnosis may require a long period of actual driving under various conditions. NJEC0031S0111

 **With CONSULT-II**


Perform corresponding DTC Confirmation Procedure one by one based on "Performance Priority" in the table on EC-122.

 **Without CONSULT-II**

The most efficient driving pattern in which SRT codes can be properly set is explained on the next page. The driving pattern should be performed one or more times to set all SRT codes.

**Note: Always drive vehicle in safe manner according to traffic conditions and obey all traffic laws.
Refer to next page for more information and explanation of chart.**

SRT item (CONSULT-II screen term)	Self-diagnostic test item (CONSULT-II screen term)	Pattern 1	Pattern 2
CATALYST	TW CATALYST SYS		
HEATED OXYGEN SENSOR (HO2S)	HO2S1 (FRONT)		
	HO2S2 (REAR)		
HEATED OXYGEN SENSOR (HO2S) HEATER	HO2S1 HTR (FRONT)		
	HO2S2 HTR (REAR)		
EGR SYSTEM (where fitted)	EGR SYSTEM (where fitted)		

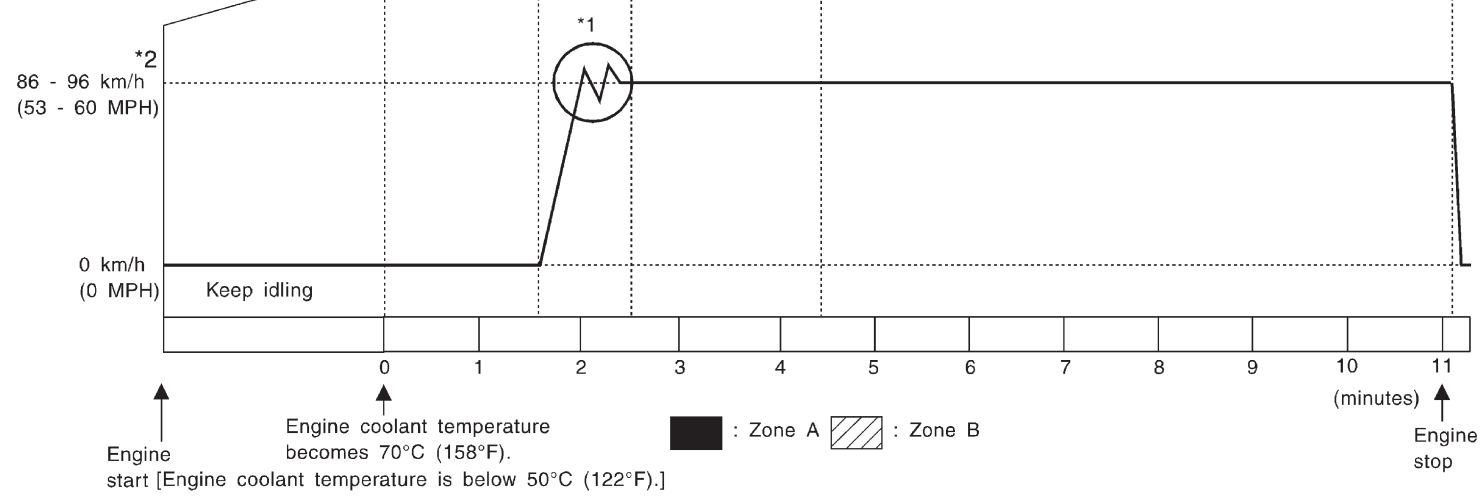

EC-64

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

QG

Emission-related Diagnostic Information (Cont'd)

- The time required for each diagnosis varies with road surface conditions, weather, altitude, individual driving habits, etc.
Zone A refers to the range where the time required, for the diagnosis under normal conditions*, is the shortest. Zone B refers to the range where the diagnosis can still be performed if the diagnosis is not completed within zone A.

*: Normal conditions refer to the following:

- Sea level
- Flat road
- Ambient air temperature: 20 - 30°C (68 - 86°F)
- Diagnosis is performed as quickly as possible under normal conditions.
Under different conditions [For example: ambient air temperature other than 20 - 30°C (68 - 86°F)], diagnosis may also be performed.

Pattern 1:

- **The engine is started at the engine coolant temperature of -10 to 35°C (14 to 95°F) (where the voltage between the ECM terminals 70 and 58 is 3.0 - 4.3V).**
- **The engine must be operated at idle speed until the engine coolant temperature is greater than 70°C (158°F) (where the voltage between the ECM terminals 70 and 58 is lower than 1.4V).**
- **The engine is started at the fuel tank temperature of warmer than 0°C (32°F) (where the voltage between the ECM terminal 82 and ground is less than 4.1V).**

Pattern 2:

- When steady-state driving is performed again even after it is interrupted, each diagnosis can be conducted. In this case, the time required for diagnosis may be extended.

*1: Depress the accelerator pedal until vehicle speed is 90 km/h (56 MPH), then release the accelerator pedal and keep it released for more than 10 seconds. Depress the accelerator pedal until vehicle speed is 90 km/h (56 MPH) again.

*2: Checking the vehicle speed with CONSULT-II or GST is advised.

Suggested transmission gear position for A/T models

Set the selector lever in the "D" position with "OD" ON.

Suggested upshift speeds for M/T models

Shown below are suggested vehicle speeds for shifting into a higher gear. These suggestions relate to fuel economy and vehicle performance. Actual upshift speeds will vary according to road conditions, the weather and individual driving habits.

Gear change	ACCEL shift point km/h (MPH)
1st to 2nd	15 (9)
2nd to 3rd	35 (22)
3rd to 4th	50 (31)
4th to 5th	70 (43)

Test Value and Test Limit (GST only — not applicable to CONSULT-II)

NJEC0031S0104

The following is the information specified in Mode 6 of ISO 15031-5.

The test value is a parameter used to determine whether a system/circuit diagnostic test is "OK" or "NG" while being monitored by the ECM during self-diagnosis. The test limit is a reference value which is specified as the maximum or minimum value and is compared with the test value being monitored.

Items for which these data (test value and test limit) are displayed are the same as SRT code items (14 test items).

These data (test value and test limit) are specified by Test ID (TID) and Component ID (CID) and can be displayed on the GST screen.

X: Applicable —: Not applicable

SRT item	Self-diagnostic test item	Test value (GST display)		Test limit	Application
		TID	CID		
CATALYST	Three way catalyst function	01H	01H	Max.	X
		02H	81H	Min.	X

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

QG

Emission-related Diagnostic Information (Cont'd)

SRT item	Self-diagnostic test item	Test value (GST display)		Test limit	Application
		TID	CID		
HO2S	Heated oxygen sensor 1 (front)	09H	04H	Max.	X
		0AH	84H	Min.	X
		0BH	04H	Max.	X
		0CH	04H	Max.	X
		0DH	04H	Max.	X
	Heated oxygen sensor 2 (rear)	19H	86H	Min.	X
		1AH	86H	Min.	X
		1BH	06H	Max.	X
		1CH	06H	Max.	X
	HO2S HTR	Heated oxygen sensor 1 heater (front)	29H	08H	Max.
2AH			88H	Min.	X
Heated oxygen sensor 2 heater (rear)		2DH	0AH	Max.	X
		2EH	8AH	Min.	X
EGR SYSTEM (where fitted)	EGR function	31H	8CH	Min.	X
		32H	8CH	Min.	X
		33H	8CH	Min.	X
		34H	8CH	Min.	X
		35H	0CH	Max.	X

Emission-related Diagnostic Information Items

X: Applicable —: Not applicable NJEC0031S0105

Items (CONSULT-II screen terms)	DTC*1	SRT code	Test value/Test limit (GST only)	1st trip DTC*1	Reference page
NO SELF DIAGNOSTIC FAILURE INDICATED	P0000	—	—	—	—
MAF SEN/CIRCUIT	P0100	—	—	X	EC-152
AIR TEMP SEN/CIRC	P0110	—	—	X	EC-158
COOLANT T SEN/CIRC	P0115	—	—	X	EC-163
THRTL POS SEN/CIRC	P0120	—	—	X	EC-168
HO2S1 (B1)	P0130	X	X	X*2	EC-176
HO2S1 (B1)	P0131	X	X	X*2	EC-183
HO2S1 (B1)	P0132	X	X	X*2	EC-189
HO2S1 (B1)	P0133	X	X	X*2	EC-195
HO2S1 (B1)	P0134	X	X	X*2	EC-203
HO2S1 HTR (B1)	P0135	X	X	X*2	EC-209
HO2S2 (B1)	P0137	X	X	X*2	EC-214
HO2S2 (B1)	P0138	X	X	X*2	EC-222
HO2S2 (B1)	P0139	X	X	X*2	EC-229

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

QG

Emission-related Diagnostic Information (Cont'd)

Items (CONSULT-II screen terms)	DTC*1	SRT code	Test value/Test limit (GST only)	1st trip DTC*1	Reference page
HO2S2 (B1)	P0140	X	X	X*2	EC-237
HO2S2 HTR (B1)	P0141	X	X	X*2	EC-243
FUEL SYS-LEAN/BK1	P0171	—	—	X	EC-248
FUEL SYS-RICH/BK1	P0172	—	—	X	EC-255
MULTI CYL MISFIRE	P0300	—	—	X	EC-262
CYL 1 MISFIRE	P0301	—	—	X	EC-262
CYL 2 MISFIRE	P0302	—	—	X	EC-262
CYL 3 MISFIRE	P0303	—	—	X	EC-262
CYL 4 MISFIRE	P0304	—	—	X	EC-262
KNOCK SEN/CIRC-B1	P0325	—	—	—	EC-268
CKP SEN/CIRCUIT (POS)	P0335	—	—	X	EC-272
CMP SEN/CIRCUIT (PHS)	P0340	—	—	X	EC-278
EGR SYSTEM*3	P0400	X	X	X*2	EC-285
EGR VOL CONT/V CIRC*3	P0403	—	—	X	EC-293
TW CATALYST SYS-B1	P0420	X	X	X*2	EC-299
PURG VOLUME CONT/V	P0443	—	—	X	EC-304
VEH SPEED SEN/CIRC	P0500	—	—	X	EC-309
IACV/AAC VLV/CIRC	P0505	—	—	X	EC-313
CLOSED TP SW/CIRC*3	P0510	—	—	X	EC-321
ECM	P0605	—	—	X	EC-327
PNP SW/CIRC	P0705	—	—	X	Refer to AT section.
ATF TEMP SEN/CIRC	P0710	—	—	X	Refer to AT section.
VEH SPD SEN/CIR AT	P0720	—	—	X	Refer to AT section.
ENGINE SPEED SIG	P0725	—	—	X	Refer to AT section.
A/T 1ST GR FNCTN	P0731	—	—	X	Refer to AT section.
A/T 2ND GR FNCTN	P0732	—	—	X	Refer to AT section.
A/T 3RD GR FNCTN	P0733	—	—	X	Refer to AT section.
A/T 4TH GR FNCTN	P0734	—	—	X	Refer to AT section.
TCC SOLENOID/CIRC	P0740	—	—	X	Refer to AT section.
L/PRESS SOL/CIRC	P0745	—	—	X	Refer to AT section.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

QG

Emission-related Diagnostic Information (Cont'd)

Items (CONSULT-II screen terms)	DTC*1	SRT code	Test value/Test limit (GST only)	1st trip DTC*1	Reference page
SFT SOL A/CIRC	P0750	—	—	X	Refer to AT section.
SFT SOL B/CIRC	P0755	—	—	X	Refer to AT section.
INT/V TIM V/CIR-B1	P1111	—	—	X	EC-329
ENG OVER TEMP	P1217	—	—	X	EC-334
EGR TEMP SEN/CIRC*3	P1401	—	—	X	EC-347
EGR SYSTEM*3	P1402	X	X	X*2	EC-353
A/T DIAG COMM LINE	P1605	—	—	X	EC-361
TP SEN/CIRC A/T	P1705	—	—	X	Refer to AT section.
P-N POS SW/CIRCUIT	P1706	—	—	X	EC-364
O/R CLTCH SOL/CIRC	P1760	—	—	X	Refer to AT section.

*1: 1st trip DTC No. is the same as DTC No.

*2: These are not displayed with GST.

*3: If so equipped

How to Erase Emission-related Diagnostic Information

NJEC0031S0106

How to Erase DTC (With CONSULT-II)

NOTE:

If the DTC is not for A/T related items (see EC-10), skip steps 2 through 4.

- 1) If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 9 seconds and then turn it "ON" (engine stopped) again.
 - 2) Turn CONSULT-II "ON" and touch "A/T".
 - 3) Touch "SELF-DIAG RESULTS".
 - 4) Touch "ERASE". [The DTC in the TCM (Transmission control module) will be erased.] Then touch "BACK" twice.
 - 5) Touch "ENGINE".
 - 6) Touch "SELF-DIAG RESULTS".
 - 7) Touch "ERASE". (The DTC in the ECM will be erased.)
- If DTCs are displayed for both ECM and TCM (Transmission control module), they need to be erased individually from the ECM and TCM (Transmission control module).

How to erase DTC (With CONSULT-II)

1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 9 seconds and then turn it "ON" (engine stopped) again.

SELECT SYSTEM
ENGINE
A/T



SELECT DIAG MODE
SELF-DIAG RESULTS
DATA MONITOR
DTC WORK SUPPORT
TCM PART NUMBER




SELF-DIAG RESULTS	
DTC RESULTS	TIME
SHIFT SOLENOID/V A	

2. Turn CONSULT-II "ON", and touch "A/T".

3. Touch "SELF-DIAG RESULTS".

4. Touch "ERASE". (The DTC in the TCM will be erased.)



SELECT SYSTEM
ENGINE
A/T

SELECT DIAG MODE
WORK SUPPORT
SELF-DIAG RESULTS
DATA MONITOR
DATA MONITOR (SPEC)
ACTIVE TEST
DTC & SRT CONFIRMATION
ECM PART NUMBER

SELF DIAG RESULTS	
DTC RESULTS	TIME
SFT SOL A/CIRC [P0750]	0

5. Touch "ENGINE".

6. Touch "SELF-DIAG RESULTS".

7. Touch "ERASE". (The DTC in the ECM will be erased.)

SEF823Y

The emission-related diagnostic information can be erased by selecting "ERASE" in the "SELF-DIAG RESULTS" mode with CONSULT-II.

How to Erase DTC (GST) With GST

NOTE:

If the DTC is not for A/T related items (see EC-10), skip step 2.

- 1) If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 9 seconds and then turn it "ON" (engine stopped) again.
- 2) Perform "SELF-DIAGNOSTIC PROCEDURE (Without CONSULT-II)" in AT section titled "TROUBLE DIAGNOSIS", "Self-diagnosis". (The engine warm-up step can be skipped when performing the diagnosis only to erase the DTC.)
- 3) Select Mode 4 with GST (Generic Scan Tool).

The emission-related diagnostic information can be erased by selecting Mode 4 with GST (Generic Scan Tool).

NOTE:

- If the battery is disconnected, the emission-related diagnostic information will be lost after approx. 24 hours.
- The following data are cleared when the ECM memory is erased.
 - 1) Diagnostic trouble codes
 - 2) 1st trip diagnostic trouble codes
 - 3) Freeze frame data
 - 4) 1st trip freeze frame data
 - 5) System readiness test (SRT) codes
 - 6) Test values
 - 7) Distance traveled while MI is activated
 - 8) Others

Actual work procedures are explained using a DTC as an example. Be careful so that not only the DTC, but all of the data listed above, are cleared from the ECM memory during work procedures.

MODELS WITHOUT EURO-OBd SYSTEM

NJEC0031S07

DTC and 1st Trip DTC

NJEC0031S0701

The 1st trip DTC (whose number is the same as the DTC number) is displayed for the latest self-diagnostic result obtained. If the ECM memory was cleared previously, and the 1st trip DTC did not reoccur, the 1st trip DTC will not be displayed.

If a malfunction is detected during the 1st trip, the 1st trip DTC is stored in the ECM memory. If the same malfunction is not detected in the 2nd trip (meeting the required driving pattern), the 1st trip DTC is cleared from the ECM memory. If the same malfunction is detected in the 2nd trip, both the 1st trip DTC and DTC are stored in the ECM memory. In other words, the DTC is stored in the ECM memory when the same malfunction occurs in two consecutive trips. If a 1st trip DTC is stored and a non-diagnostic operation is performed between the 1st and 2nd trips, only the 1st trip DTC will continue to be stored. For fail-safe items, the DTC is stored in the ECM memory even in the 1st trip.

Procedures for clearing the DTC and the 1st trip DTC from the ECM memory are described in "How to Erase Emission-related Diagnostic Information", EC-71.

When a (1st trip) DTC is detected, check, print out or write down and erase (1st trip) DTC and Freeze Frame data as specified in "Work Flow" procedure Step II, refer to EC-96. Then perform "DTC Confirmation Procedure" or "Overall Function Check" to try to duplicate the problem. If the malfunction is duplicated, the item requires repair.

How to Read DTC and 1st Trip DTC

DTC and 1st trip DTC can be read by the following methods.

⊗ Without CONSULT-II

ECM displays the DTC by a set of four digit numbers with MI illumination in the diagnostic test mode II (Self-diagnostic results). Example: 0100, 0115, 0340, 1335, etc.

Ⓟ With CONSULT-II

CONSULT-II displays the DTC in "SELF-DIAG RESULTS" mode. Examples: P0100, P0115, P0340, P1335, etc.

(CONSULT-II also displays the malfunctioning component or system.)

- **1st trip DTC No. is the same as DTC No.**
- **Output of a DTC indicates a malfunction. However, ECM in the diagnostic test mode II (Self-diagnostic results) (if so equipped) does not indicate whether the malfunction is still occurring or has occurred in the past and has returned to normal. CONSULT-II can identify malfunction status as shown below. Therefore, the use of CONSULT-II (if available) is recommended.**

A sample CONSULT-II display for DTC and 1st trip DTC is shown below. DTC or 1st trip DTC of a malfunction is displayed in the SELF-DIAGNOSTIC RESULTS mode of CONSULT-II. Time data indicates how many times the vehicle was driven after the last detection of a DTC.

If the DTC is being detected currently, the time data will be "0".

If a 1st trip DTC is stored in the ECM, the time data will be "[1t]".

DTC display		SELF DIAG RESULTS			
		DTC RESULTS	TIME		
		MAF SEN/CIRCUIT [P0100]	0		
				1st trip DTC display	
		SELF DIAG RESULTS			
		DTC RESULTS	TIME		
		MAF SEN/CIRCUIT [P0100]	1t		

SEF992X

Freeze Frame Data and 1st Trip Freeze Frame Data

NJEC0031S0702

The ECM records the driving conditions such as fuel system status, calculated load value, engine coolant temperature, short term fuel trim, long term fuel trim, engine speed, vehicle speed, throttle valve opening, base fuel schedule and intake air temperature at the moment a malfunction is detected.

Data which are stored in the ECM memory, along with the 1st trip DTC, are called 1st trip freeze frame data. The data, stored together with the DTC data, are called freeze frame data and displayed on CONSULT-II. For details, see EC-84.

Only one set of freeze frame data (either 1st trip freeze frame data or freeze frame data) can be stored in the ECM. 1st trip freeze frame data is stored in the ECM memory along with the 1st trip DTC. There is no priority for 1st trip freeze frame data and it is updated each time a different 1st trip DTC is detected. However, once freeze frame data is stored in the ECM memory, 1st trip freeze frame data is no longer stored. Remember, only one set of freeze frame data can be stored in the ECM.

If freeze frame data is stored in the ECM memory and another freeze frame data occurs later, the first (original) freeze frame data remains unchanged in the ECM memory.

Both 1st trip freeze frame data and freeze frame data (along with the DTCs) are cleared when the ECM memory is erased. Procedures for clearing the ECM memory are described in "How to Erase Emission-related Diagnostic Information", EC-71.

How to Erase Emission-related Diagnostic Information

NJEC0031S0706

How to Erase DTC (Ⓜ With CONSULT-II)

- 1) If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 10 seconds and then turn it "ON" (engine stopped) again.
- 2) Touch "ENGINE".
- 3) Touch "SELF-DIAG RESULTS".
- 4) Touch "ERASE". (The DTC in the ECM will be erased.)

How to erase DTC (With CONSULT-II)

1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 9 seconds and then turn it "ON" again.

SELECT SYSTEM
ENGINE

2. Turn CONSULT-II "ON" and touch "ENGINE".



SELECT DIAG MODE
WORK SUPPORT
SELF-DIAG RESULTS
DATA MONITOR
ACTIVE TEST
ECM PART NUMBER

3. Touch "SELF-DIAG RESULTS".



SELF DIAG RESULTS	
DTC RESULTS	TIME
COOLANT T SEN/CIRC [P0115]	0

4. Touch "ERASE". (The DTC in the ECM will be erased.)

SEF993XA

The emission related diagnostic information in the ECM can be erased by selecting "ERASE" in the "SELF-DIAG RESULTS" mode with CONSULT-II.

How to Erase DTC (ⓧ Without CONSULT-II)

- 1) If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 10 seconds and then turn it "ON" (engine stopped) again.
- 2) Change the diagnostic test mode from Mode II to Mode I by using the data link connector. (See EC-74.)

The emission related diagnostic information in the ECM can be erased by changing the diagnostic test mode.

- **If the battery is disconnected, the emission-related diagnostic information will be lost after approx. 24 hours.**
- **The following data are cleared when the ECM memory is erased.**
 - 1) Diagnostic trouble codes
 - 2) 1st trip diagnostic trouble codes
 - 3) Freeze frame data
 - 4) 1st trip freeze frame data
 - 5) Others

Actual work procedures are explained using a DTC as an example. Be careful so that not only the DTC, but all of the data listed above, are cleared from the ECM memory during work procedures.

NATS (Nissan Anti-theft System)

SELF DIAG RESULTS	
DTC RESULTS	TIME
NATS MALFUNCTION [P1610]	0

SEF543X

NATS (Nissan Anti-theft System)


NJEC0591

- If the security indicator lights up with the ignition switch in the “ON” position or “NATS MALFUNCTION” is displayed on “SELF-DIAG RESULTS” screen, perform self-diagnostic results mode with CONSULT-II using NATS program card. Refer to NATS (Nissan Anti-Theft System) in EL section.
- Confirm no self-diagnostic results of NATS is displayed before touching “ERASE” in “SELF-DIAG RESULTS” mode with CONSULT-II.
- When replacing ECM, initialization of NATS system and registration of all NATS ignition key IDs must be carried out with CONSULT-II using NATS program card. Therefore, be sure to receive all keys from vehicle owner. Regarding the procedure of NATS initialization and NATS ignition key ID registration, refer to CONSULT-II operation manual, NATS.

Malfunction Indicator (MI)

DESCRIPTION

NJEC0032

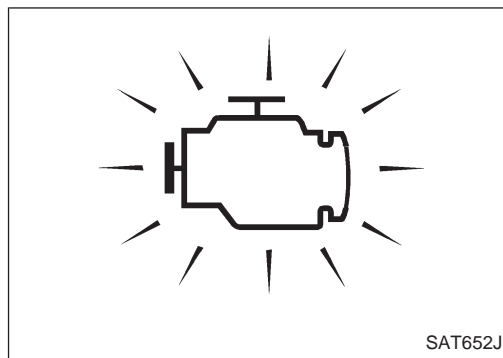

The MI is located on the instrument panel.

1. The MI will light up when the ignition switch is turned ON without the engine running. This is a bulb check.
 - If the MI does not light up, refer to EL-107, “WARNING LAMPS” or see EC-488.
2. When the engine is started, the MI should go off.
 - If the MI remains on, the on board diagnostic system has detected an engine system malfunction.

On Board Diagnostic System Function

NJEC0032S01

The on board diagnostic system has the following four functions.

Diagnostic Test Mode I

1. BULB CHECK:
This function checks the MI bulb for damage (blown, open circuit, etc.).
If the MI does not come on, check MI circuit and ECM test mode selector. (See the following page.)
2. MALFUNCTION WARNING:

MI	Condition
ON	When the malfunction is detected or the ECM's CPU is malfunctioning.
OFF	No malfunction.

Diagnostic Test Mode II (If so equipped)

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

QG

Malfunction Indicator (MI) (Cont'd)

3. SELF-DIAGNOSTIC RESULTS:

This function allows DTCs and 1st trip DTCs to be read.

4. HEATED OXYGEN SENSOR 1 MONITOR (FRONT):




This function allows the fuel mixture condition (lean or rich), monitored by heated oxygen sensor 1 (front), to be read.

MI Flashing without DTC

If the ECM is in Diagnostic Test Mode II, MI may flash when engine is running. In this case, check ECM test mode following "How to Switch Diagnostic Test Modes".

NJEC0032S0101

How to switch the diagnostic test (function) modes, and details of the above functions are described later. (Refer to EC-74.)


Condition		Diagnostic Test Mode I	Diagnostic Test Mode II
Ignition switch in "ON" position 	Engine stopped 	BULB CHECK	SELF-DIAGNOSTIC RESULTS
	Engine running 	MALFUNCTION WARNING	HEATED OXYGEN SENSOR 1 MONITOR (FRONT)

The following emission-related diagnostic information is cleared when the ECM memory is erased.

- 1) Diagnostic trouble codes
- 2) 1st trip diagnostic trouble codes
- 3) Freeze frame data
- 4) 1st trip freeze frame data
- 5) System readiness test (SRT) codes
- 6) Test values
- 7) Distance traveled while MI is activated
- 8) Others

How to Switch Diagnostic Test Modes (If diagnostic test mode II is equipped)

NJEC0032S02

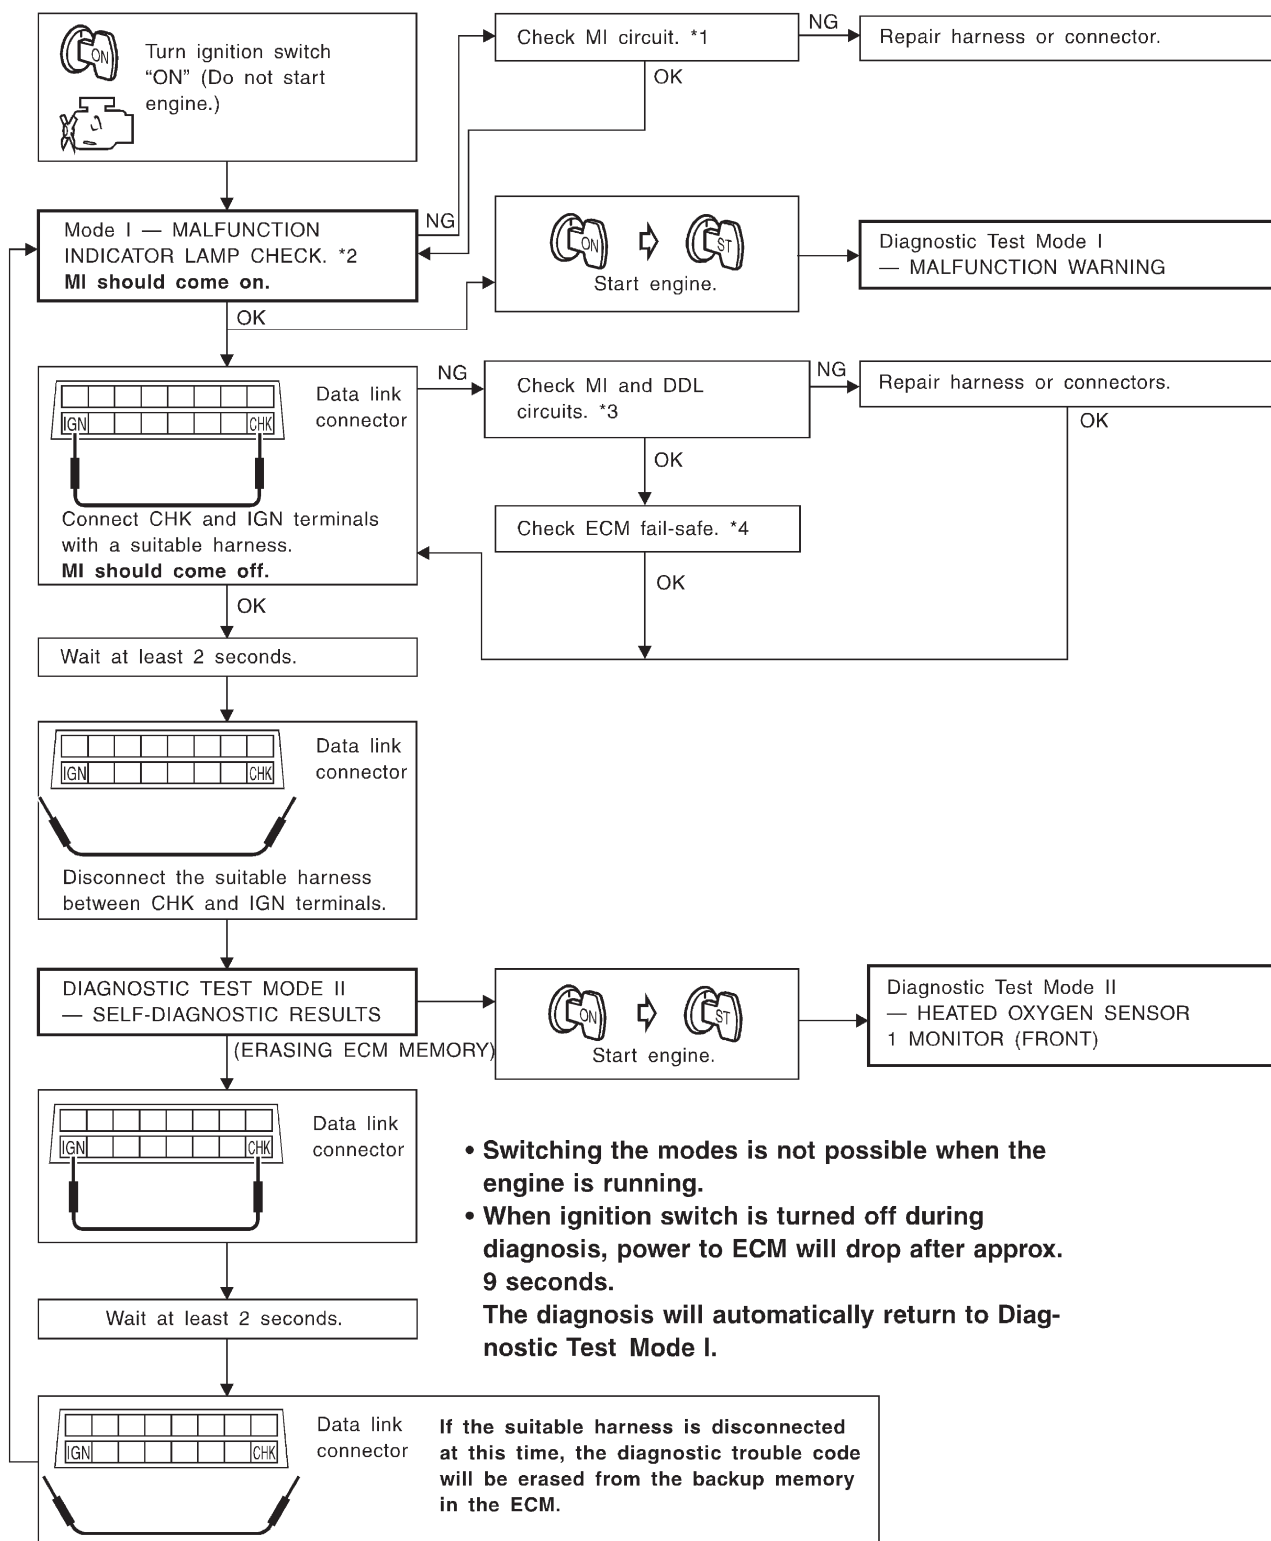

SEF951WA

*1: EC-488

*3: EC-488

*4: EC-123

*2: EC-72

Diagnostic Test Mode I — Bulb Check

NJEC0032S03

In this mode, the MI on the instrument panel should stay ON. If it remains OFF, check the MI bulb. Refer to EL-107, "WARNING LAMPS" or see EC-488.

Diagnostic Test Mode I — Malfunction Warning

NJEC0032S04


MI	Condition
ON	When the malfunction is detected or the ECM's CPU is malfunctioning.
OFF	No malfunction.

- These DTC numbers are clarified in Diagnostic Test Mode II (SELF-DIAGNOSTIC RESULTS).

Diagnostic Test Mode II — Self-diagnostic Results (If so equipped)

NJEC0032S05

In this mode, the DTC and 1st trip DTC are indicated by the number of blinks of the MI as shown below. The DTC and 1st trip DTC are displayed at the same time. If the MI does not illuminate in diagnostic test mode I (Malfunction warning), all displayed items are 1st trip DTCs. If only one code is displayed when the MI illuminates in diagnostic test mode II (SELF-DIAGNOSTIC RESULTS), it is a DTC; if two or more codes are displayed, they may be either DTCs or 1st trip DTCs. DTC No. is same as that of 1st trip DTC. These unidentified codes can be identified by using the CONSULT-II or GST. A DTC will be used as an example for how to read a code.

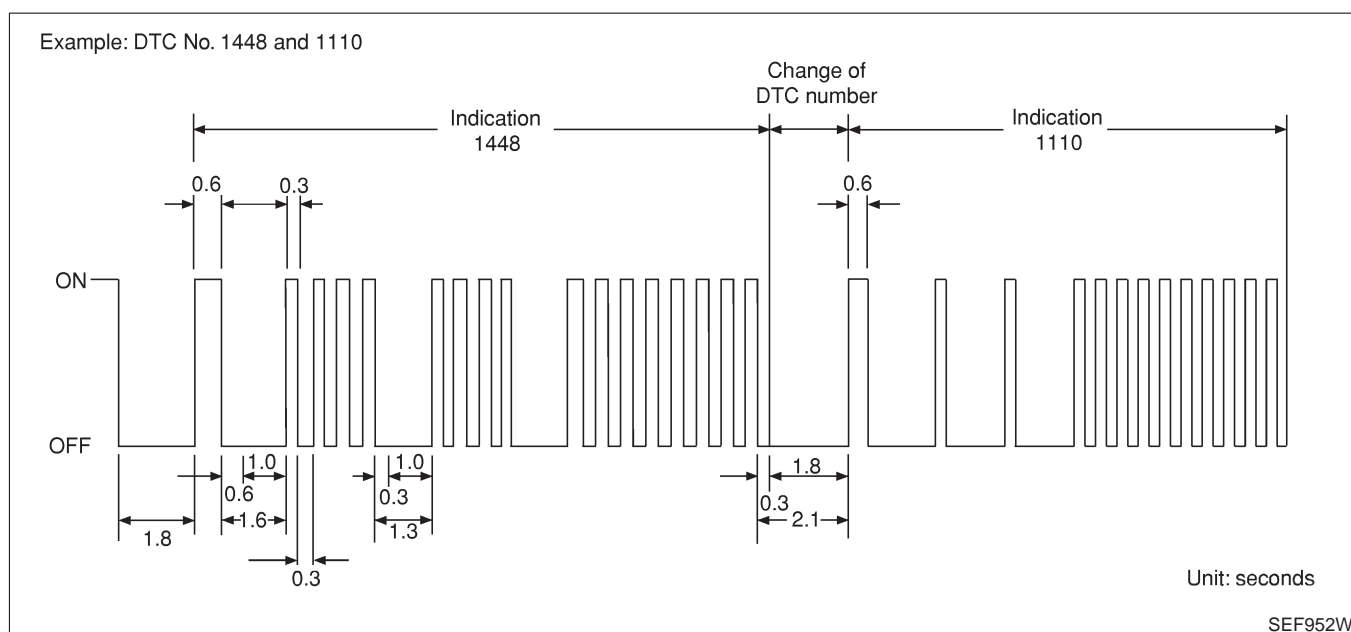

A particular trouble code can be identified by the number of four-digit numeral flashes. The "zero" is indicated by the number of ten flashes. The length of time the 1000th-digit numeral flashes on and off is 1.2 seconds consisting of an ON (0.6-second)-OFF (0.6-second) cycle.

The 100th-digit numeral and lower digit numerals consist of a 0.3-second ON and 0.3-second OFF cycle.

A change from one digit numeral to another occurs at an interval of 1.0 second OFF. In other words, the latter numeral appears on the display 1.3 seconds after the former numeral has disappeared.

A change from one trouble code to another occurs at an interval of 1.8 second off.

In this way, all the detected malfunctions are classified by their DTC numbers. The DTC "0000" refers to no malfunction. (See TROUBLE DIAGNOSIS — INDEX, EC-10.)

How to Erase Diagnostic Test Mode II (Self-diagnostic results)

NJEC0032S0501

The DTC can be erased from the backup memory in the ECM when the diagnostic test mode is changed from Diagnostic Test Mode II to Diagnostic Test Mode I. (Refer to "How To Switch Diagnostic Test Modes", EC-74.)

- If the battery is disconnected, the DTC will be lost from the backup memory after approx. 24 hours.
- Be careful not to erase the stored memory before starting trouble diagnoses.

Diagnostic Test Mode II — Heated Oxygen Sensor 1 Monitor (Front) (If so equipped)

NJEC0032S06

In this mode, the MI displays the condition of the fuel mixture (lean or rich) which is monitored by the heated oxygen sensor 1 (front).

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

QG

Malfunction Indicator (MI) (Cont'd)

MI	Fuel mixture condition in the exhaust gas	Air fuel ratio feedback control condition
ON	Lean	Closed loop system
OFF	Rich	
*Remains ON or OFF	Any condition	Open loop system

*: Maintains conditions just before switching to open loop.

To check the heated oxygen sensor 1 (front) function, start engine in the Diagnostic Test Mode II and warm it up until engine coolant temperature indicator points to the middle of the gauge.

Next run engine at about 2,000 rpm for about 2 minutes under no-load conditions. Then make sure that the MI comes ON more than 5 times within 10 seconds with engine running at 2,000 rpm under no-load.

OBD System Operation Chart (With Euro-OBD Models Only)

RELATIONSHIP BETWEEN MI, 1ST TRIP DTC, DTC, AND DETECTABLE ITEMS

NJEC0033

NJEC0033S01

- When a malfunction is detected for the first time, the 1st trip DTC and the 1st trip freeze frame data are stored in the ECM memory.
- When the same malfunction is detected in two consecutive trips, the DTC and the freeze frame data are stored in the ECM memory, and the MI will come on. For details, refer to "Two Trip Detection Logic" on EC-57.
- The MI will go off after the vehicle is driven 3 times with no malfunction. The drive is counted only when the recorded driving pattern is met (as stored in the ECM). If another malfunction occurs while counting, the counter will reset.
- The DTC and the freeze frame data will be stored until the vehicle is driven 40 times (driving pattern A) without the same malfunction recurring (except for Misfire and Fuel Injection System). For Misfire and Fuel Injection System, the DTC and freeze frame data will be stored until the vehicle is driven 80 times (driving pattern C) without the same malfunction recurring. The "TIME" in "SELF-DIAGNOSTIC RESULTS" mode of CONSULT-II will count the number of times the vehicle is driven.
- The 1st trip DTC is not displayed when the self-diagnosis results in "OK" for the 2nd trip.

SUMMARY CHART

NJEC0033S02

Items	Fuel Injection System	Misfire	Other
MI (goes off)	3 (pattern B)	3 (pattern B)	3 (pattern B)
DTC, Freeze Frame Data (no display)	80 (pattern C)	80 (pattern C)	40 (pattern A)
1st Trip DTC (clear)	1 (pattern C), *1	1 (pattern C), *1	1 (pattern B)
1st Trip Freeze Frame Data (clear)	*1, *2	*1, *2	1 (pattern B)

For details about patterns "B" and "C" under "Fuel Injection System" and "Misfire", see EC-78.


For details about patterns "A" and "B" under "Other", see EC-80.

*1: Clear timing is at the moment OK is detected.

*2: Clear timing is when the same malfunction is detected in the 2nd trip.

RELATIONSHIP BETWEEN MI, DTC, 1ST TRIP DTC AND DRIVING PATTERNS FOR "MISFIRE" <EXHAUST QUALITY DETERIORATION>, "FUEL INJECTION SYSTEM"

NJEC0033S03

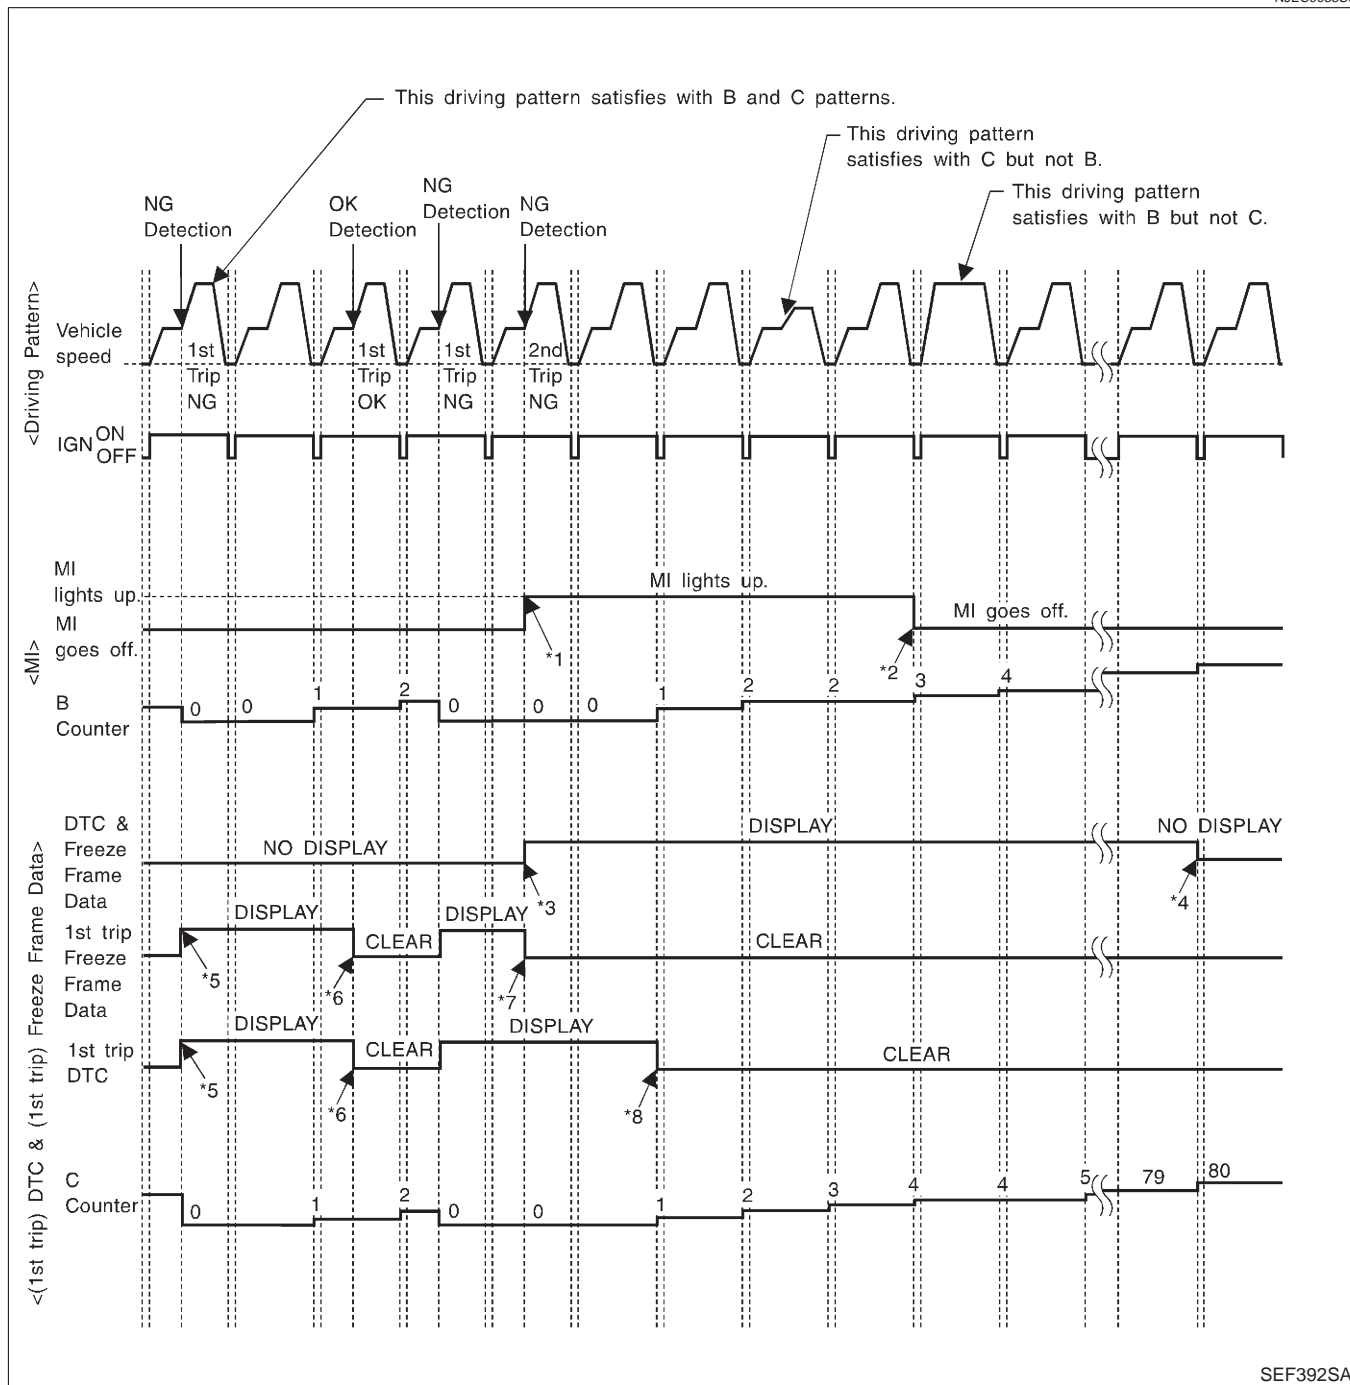

- *1: When the same malfunction is detected in two consecutive trips, MI will light up.
- *2: MI will go off after vehicle is driven 3 times (pattern B) without any malfunctions.
- *3: When the same malfunction is detected in two consecutive trips, the DTC and the freeze frame data will be stored in ECM.
- *4: The DTC and the freeze frame data will not be displayed any longer after vehicle is driven 80 times (pattern C) without the same malfunction. (The DTC and the freeze frame data still remain in ECM.)
- *5: When a malfunction is detected for the first time, the 1st trip DTC and the 1st trip freeze frame data will be stored in ECM.
- *6: The 1st trip DTC and the 1st trip freeze frame data will be cleared at the moment OK is detected.
- *7: When the same malfunction is detected in the 2nd trip, the 1st trip freeze frame data will be cleared.
- *8: 1st trip DTC will be cleared when vehicle is driven once (pattern C) without the same malfunction after DTC is stored in ECM.

EXPLANATION FOR DRIVING PATTERNS FOR “MISFIRE <EXHAUST QUALITY DETERIORATION>”, “FUEL INJECTION SYSTEM”

NJEC0033S04

Driving Pattern B

NJEC0033S0401

Driving pattern B means the vehicle operation as follows:

All components and systems should be monitored at least once by the OBD system.

- The B counter will be cleared when the malfunction is detected once regardless of the driving pattern.
- The B counter will be counted up when driving pattern B is satisfied without any malfunction.
- The MI will go off when the B counter reaches 3. (*2 in EC-77)

Driving Pattern C

NJEC0033S0402

Driving pattern C means the vehicle operation as follows:

1) The following conditions should be satisfied at the same time:

Engine speed: (Engine speed in the freeze frame data) ± 375 rpm

Calculated load value: (Calculated load value in the freeze frame data) $\times (1 \pm 0.1)$ [%]

Engine coolant temperature (T) condition:

- When the freeze frame data shows lower than 70°C (158°F), “T” should be lower than 70°C (158°F).
- When the freeze frame data shows higher than or equal to 70°C (158°F), “T” should be higher than or equal to 70°C (158°F).

Example:

If the stored freeze frame data is as follows:

Engine speed: 850 rpm, Calculated load value: 30%, Engine coolant temperature: 80°C (176°F)


To be satisfied with driving pattern C, the vehicle should run under the following conditions:

Engine speed: 475 - 1,225 rpm, Calculated load value: 27 - 33%, Engine coolant temperature: more than 70°C (158°F)

- The C counter will be cleared when the malfunction is detected regardless of driving pattern C.
- The C counter will be counted up when driving pattern C is satisfied without the same malfunction.
- The DTC will not be displayed after C counter reaches 80.
- The 1st trip DTC will be cleared when C counter is counted once without the same malfunction after DTC is stored in ECM.

RELATIONSHIP BETWEEN MI, DTC, 1ST TRIP DTC AND DRIVING PATTERNS EXCEPT FOR "MISFIRE <EXHAUST QUALITY DETERIORATION>", "FUEL INJECTION SYSTEM"

NJEC0033S05

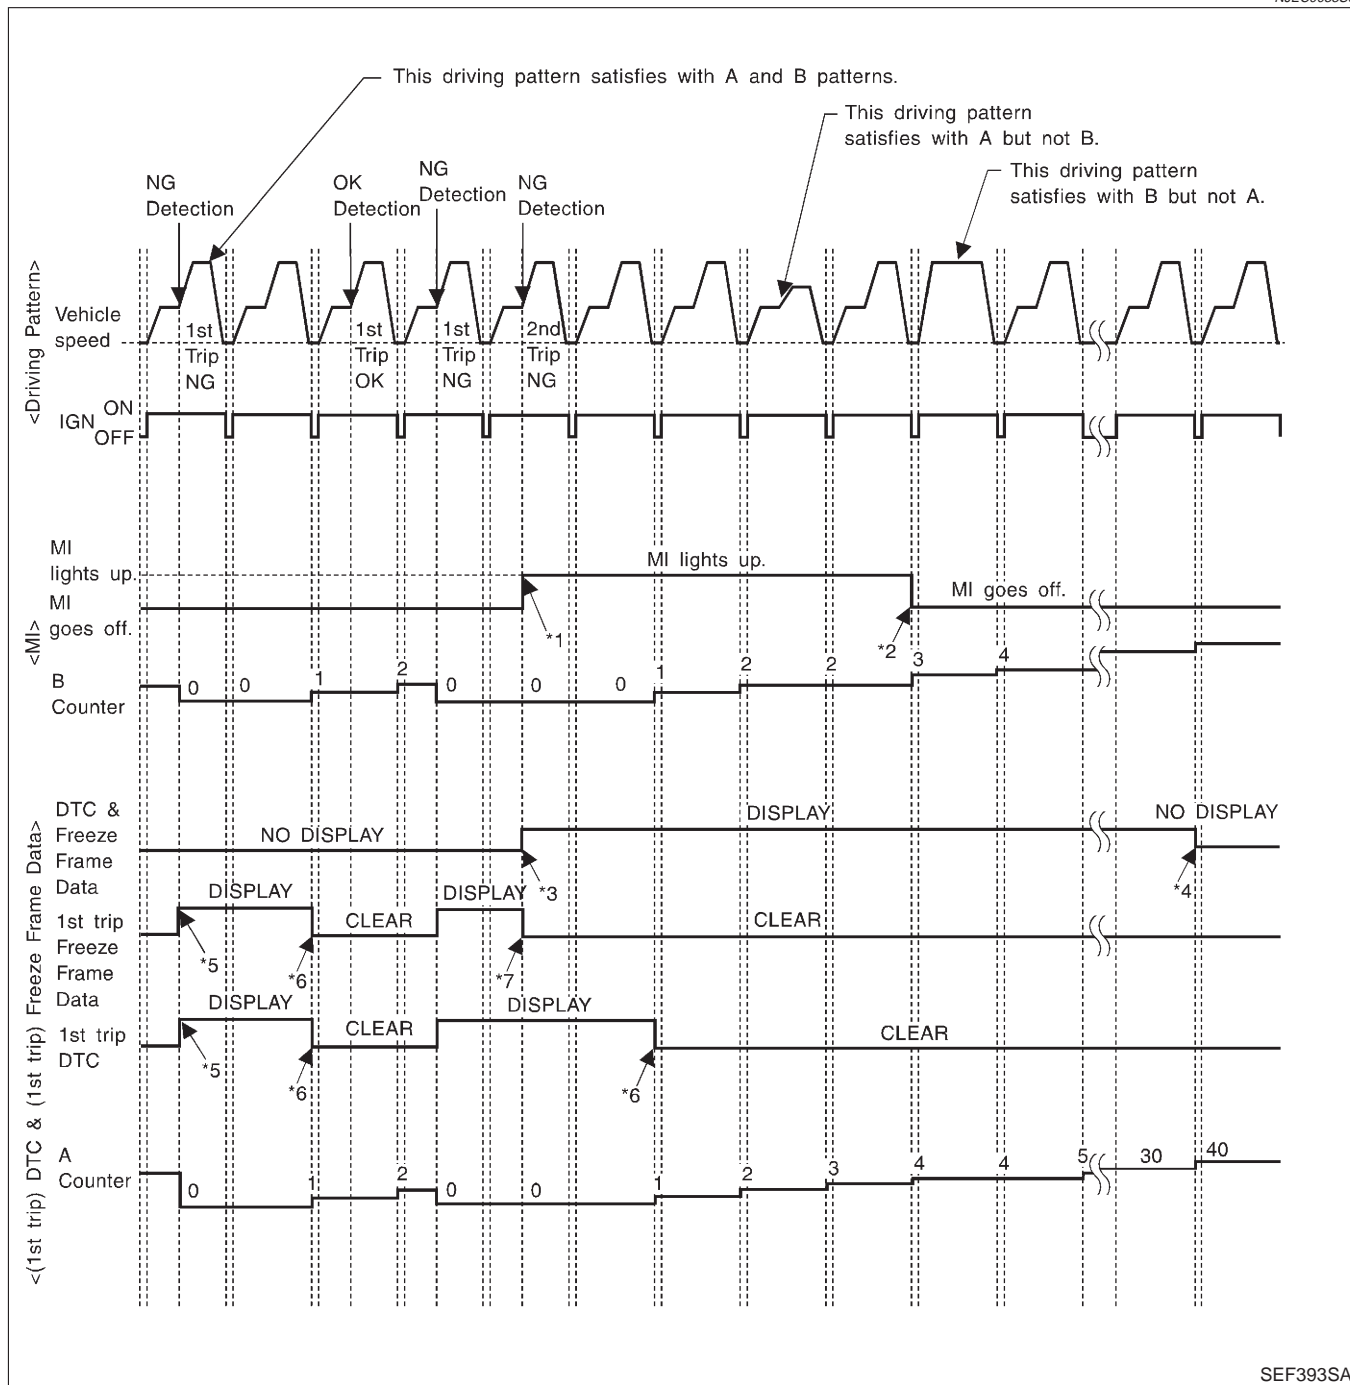

SEF393SA


- *1: When the same malfunction is detected in two consecutive trips, MI will light up.
- *2: MI will go off after vehicle is driven 3 times (pattern B) without any malfunctions.
- *3: When the same malfunction is detected in two consecutive trips, the DTC and the freeze frame data will be stored in ECM.
- *4: The DTC and the freeze frame data will not be displayed any longer after vehicle is driven 40 times (pattern A) without the same malfunction. (The DTC and the freeze frame data still remain in ECM.)
- *5: When a malfunction is detected for the first time, the 1st trip DTC and the 1st trip freeze frame data will be stored in ECM.
- *6: 1st trip DTC will be cleared after vehicle is driven once (pattern B) without the same malfunction.
- *7: When the same malfunction is detected in the 2nd trip, the 1st trip freeze frame data will be cleared.

EXPLANATION FOR DRIVING PATTERNS EXCEPT FOR "MISFIRE <EXHAUST QUALITY DETERIORATION>", "FUEL INJECTION SYSTEM"

NJEC0033S06

Driving Pattern A

NJEC0033S0601

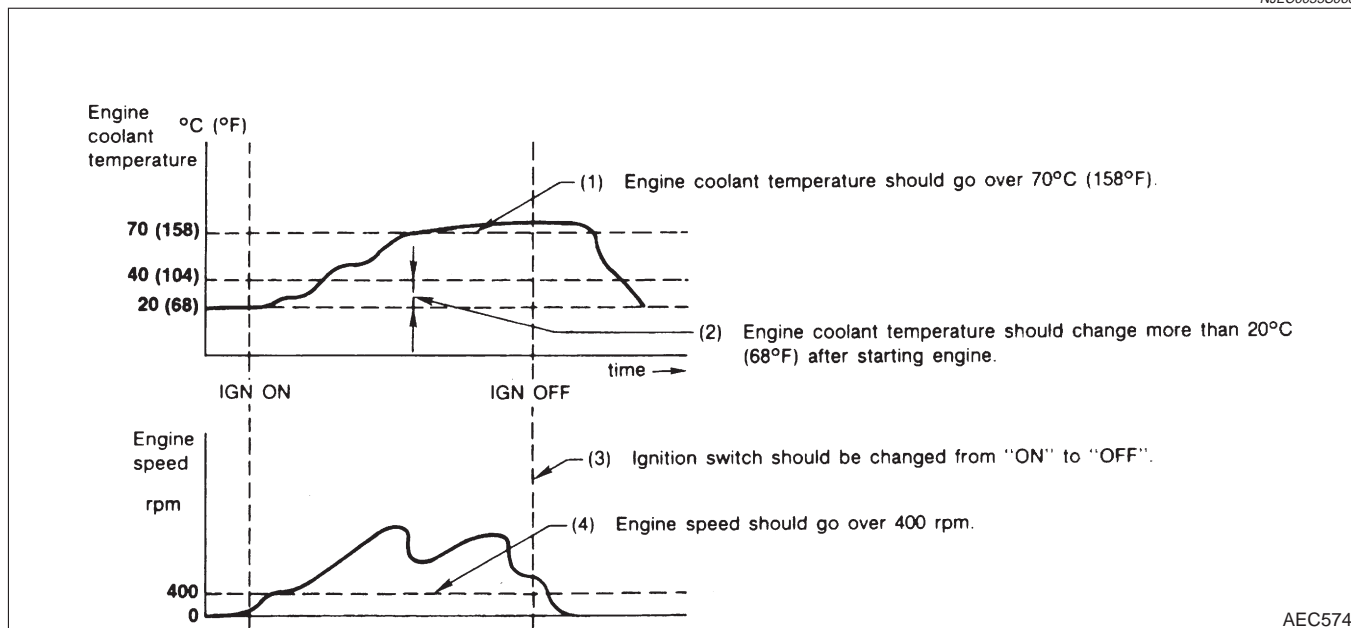

- The A counter will be cleared when the malfunction is detected regardless of (1) - (4).
- The A counter will be counted up when (1) - (4) are satisfied without the same malfunction.
- The DTC will not be displayed after the A counter reaches 40.


Driving Pattern B

NJEC0033S0602

Driving pattern B means the vehicle operation as follows:

All components and systems should be monitored at least once by the OBD system.

- The B counter will be cleared when the malfunction is detected once regardless of the driving pattern.
- The B counter will be counted up when driving pattern B is satisfied without any malfunctions.
- The MI will go off when the B counter reaches 3 (*2 in EC-79).

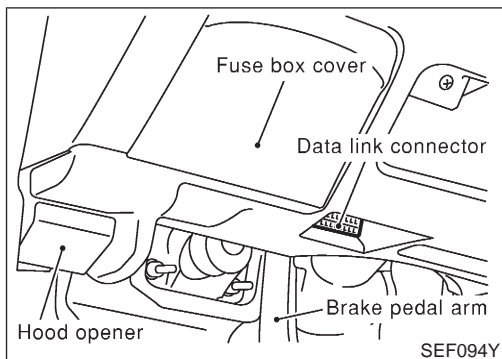


CONSULT-II

CONSULT-II INSPECTION PROCEDURE


=NJEC0034

NJEC0034S01


1. Turn ignition switch OFF.
2. Connect "CONSULT-II" to data link connector.
(Data link connector is located under lower dash panel near the fuse box cover.)

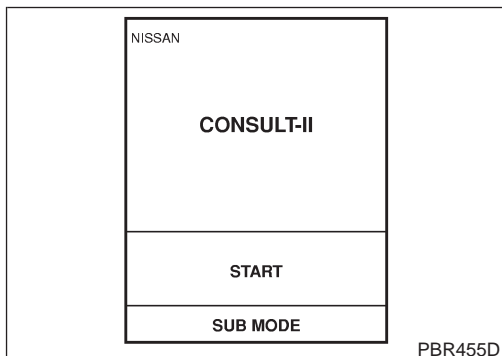

3. Turn ignition switch ON.
4. Touch "START".

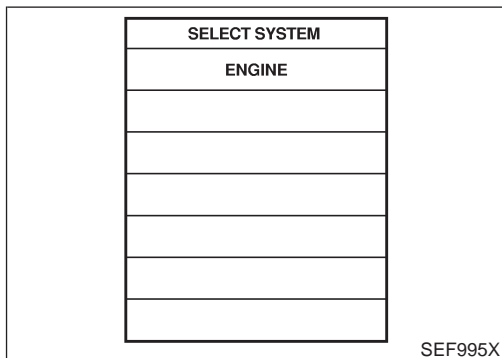

5. Touch "ENGINE".

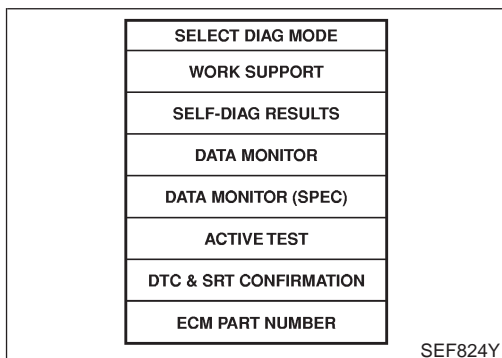

6. Perform each diagnostic test mode according to each service procedure.

For further information, see the GI-35 regarding CONSULT-II.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

QG

CONSULT-II (Cont'd)

ENGINE CONTROL COMPONENT PARTS/CONTROL SYSTEMS APPLICATION

NJEC0034S02

Item		DIAGNOSTIC TEST MODE							
		WORK SUP-PORT	SELF-DIAGNOSTIC RESULTS		DATA MONI-TOR	DATA MONI-TOR (SPEC)	ACTIVE TEST	DTC & SRT CONFIRMATION	
			DTC*1	FREEZE FRAME DATA*2				SRT STA-TUS	DTC WORK SUP-PORT
ENGINE CONTROL COMPONENT PARTS	INPUT	Camshaft position sensor (PHASE)	X	Engine speed X	Engine speed X	Engine speed X			
	Crankshaft position sensor (POS)	X*3							
	Mass air flow sensor	X		X	X				
	Engine coolant temperature sensor	X	X	X	X	X			
	Heated oxygen sensor 1 (front)	X		X	X		X*3	X*3	
	Heated oxygen sensor 2 (rear)	X*3		X	X		X*3	X*3	
	Vehicle speed sensor	X	X	X	X				
	Throttle position sensor	X		X	X				
	EGR temperature sensor*4	X*3		X	X				
	Intake air temperature sensor	X*3	X	X	X				
	Knock sensor	X							
	Ignition switch (start signal)			X	X				
	Closed throttle position switch*4	X*3		X	X				
	Closed throttle position switch (throttle position sensor signal)			X	X				
	Air conditioner switch			X	X				
	Refrigerant pressure sensor			X	X				
	Park/Neutral position (PNP) switch	X*3		X	X				
	Power steering oil pressure switch			X	X				
	Electrical load			X	X				
	Heater fan switch			X	X				
Battery voltage			X	X					

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

QG

CONSULT-II (Cont'd)

Item		DIAGNOSTIC TEST MODE								
		WORK SUP-PORT	SELF-DIAGNOSTIC RESULTS		DATA MONI-TOR	DATA MONI-TOR (SPEC)	ACTIVE TEST	DTC & SRT CONFIRMATION		
			DTC*1	FREEZE FRAME DATA*2				SRT STA-TUS	DTC WORK SUP-PORT	
ENGINE CONTROL COMPONENT PARTS	OUT-PUT	Injectors				X	X	X		
	Power transistor (Ignition timing)		X*3 (misfire)			X	X	X		
	IACV-AAC valve	X	X*3			X	X	X		
	Intake valve timing control solenoid valve					X	X	X		
	EVAP canister purge volume control solenoid valve		X*3			X	X	X		
	Air conditioner relay					X	X			
	Fuel pump relay	X				X	X	X		
	EGR volume control valve*4		X*3			X	X	X		X*3
	Heated oxygen sensor 1 heater (front)		X*3			X	X		X*3	
	Heated oxygen sensor 2 heater (rear)		X*3			X	X		X*3	
	Cooling fan					X	X	X		
	Calculated load value			X		X	X			

X: Applicable

*1: This item includes 1st trip DTCs.

*2: This mode includes 1st trip freeze frame data or freeze frame data. The items appear on CONSULT-II screen in freeze frame data mode only if a 1st trip DTC or DTC is detected. For details, refer to EC-59, EC-70.

*3: Not applicable for models without Euro-OBD system

*4: If so equipped

FUNCTION

NJEC0034S03

Diagnostic test mode	Function
Work support	This mode enables a technician to adjust some devices faster and more accurately by following the indications on the CONSULT-II unit.
Self-diagnostic results	Self-diagnostic results such as 1st trip DTC, DTCs and 1st trip freeze frame data or freeze frame data can be read and erased quickly.*1
Data monitor	Input/Output data in the ECM can be read.
Data monitor (spec)	Input/Output specifications of the basic fuel schedule, AFM, A/F feedback control value and the other data monitor items can be read.
Active test	Diagnostic Test Mode in which CONSULT-II drives some actuators apart from the ECMs and also shifts some parameters in a specified range.
DTC and SRT confirmation	The status of system monitoring tests and the self-diagnosis status/result can be confirmed.
ECM part number	ECM part numbers can be read.

*1 The following emission-related diagnostic information is cleared when the ECM memory is erased.

- 1) Diagnostic trouble codes
- 2) 1st trip diagnostic trouble codes
- 3) Freeze frame data
- 4) 1st trip freeze frame data

CONSULT-II (Cont'd)

- 5) System readiness test (SRT) codes
- 6) Test values
- 7) Distance traveled while MI is activated.
- 8) Others

WORK SUPPORT MODE

NJEC0034S04

WORK ITEM	CONDITION	USAGE
TP SW/TP SEN IDLE POSI ADJ	<ul style="list-style-type: none"> ● FOLLOW THE BASIC INSPECTION INSTRUCTION IN THE SERVICE MANUAL. 	When adjusting the idle throttle position
FUEL PRESSURE RELEASE	<ul style="list-style-type: none"> ● FUEL PUMP WILL STOP BY TOUCHING "START" DURING IDLING. CRANK A FEW TIMES AFTER ENGINE STALLS. 	When releasing fuel pressure from fuel line
IDLE AIR VOL LEARN	<ul style="list-style-type: none"> ● THE IDLE AIR VOLUME THAT KEEPS THE ENGINE WITHIN THE SPECIFIED RANGE IS MEMORIZED IN ECM. 	When learning the idle air volume
SELF-LEARNING CONT	<ul style="list-style-type: none"> ● THE COEFFICIENT OF SELF-LEARNING CONTROL MIXTURE RATIO RETURNS TO THE ORIGINAL COEFFICIENT. 	When clear the coefficient of self-learnign control value
TARGET IDLE RPM ADJ*	<ul style="list-style-type: none"> ● IDLE CONDITION 	When setting target idle speed
TARGET IGNITION TIMING ADJ*	<ul style="list-style-type: none"> ● IDLE CONDITION 	When adjusting target ignition timing After adjustment, confirm target ignition timing with a timing light. <ul style="list-style-type: none"> ● If once the "TARGET IDLE RPM ADJ" has been done, the Idle Air Volume Learning procedure will not be completed.

*: This function is not necessary in the usual service procedure.

SELF DIAGNOSTIC MODE

NJEC0034S05

DTC and 1st Trip DTC

NJEC0034S0501

Regarding items of "DTC and 1st trip DTC", refer to "TROUBLE DIAGNOSIS — INDEX", EC-10.

Freeze Frame Data and 1st Trip Freeze Frame Data

NJEC0034S0502

Freeze frame data item*	Description
DIAG TROUBLE CODE [PXXXX]	<ul style="list-style-type: none"> ● Engine Control component part/control system has a trouble code, it is displayed as "PXXXX". (Refer to "Alphabetical & P No. Index for DTC", EC-10.)
FUEL SYS-B1	<ul style="list-style-type: none"> ● "Fuel injection system status" at the moment a malfunction is detected is displayed. ● One mode in the following is displayed. "MODE 2": Open loop due to detected system malfunction "MODE 3": Open loop due to driving conditions (power enrichment, deceleration enrichment) "MODE 4": Closed loop - using oxygen sensor(s) as feedback for fuel control "MODE 5": Open loop - has not yet satisfied condition to go to closed loop
CAL/LD VALUE [%]	<ul style="list-style-type: none"> ● The calculated load value at the moment a malfunction is detected is displayed.
COOLANT TEMP [°C] or [°F]	<ul style="list-style-type: none"> ● The engine coolant temperature at the moment a malfunction is detected is displayed.
L-FUEL TRIM-B1 [%]	<ul style="list-style-type: none"> ● "Long-term fuel trim" at the moment a malfunction is detected is displayed. ● The long-term fuel trim indicates much more gradual feedback compensation to the base fuel schedule than short-term fuel trim.
S-FUEL TRIM-B1 [%]	<ul style="list-style-type: none"> ● "Short-term fuel trim" at the moment a malfunction is detected is displayed. ● The short-term fuel trim indicates dynamic or instantaneous feedback compensation to the base fuel schedule.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

QG

CONSULT-II (Cont'd)

Freeze frame data item*	Description
ENGINE SPEED [rpm]	<ul style="list-style-type: none"> The engine speed at the moment a malfunction is detected is displayed.
VEHICL SPEED [km/h] or [mph]	<ul style="list-style-type: none"> The vehicle speed at the moment a malfunction is detected is displayed.
ABSOL TH-P/S [%]	<ul style="list-style-type: none"> The throttle valve opening angle at the moment a malfunction is detected is displayed.
B/FUEL SCHDL [msec]	<ul style="list-style-type: none"> The base fuel schedule at the moment a malfunction is detected is displayed.
INT/A TEMP SE [°C] or [°F]	<ul style="list-style-type: none"> The intake air temperature at the moment a malfunction is detected is displayed.

*: The items are the same as those of 1st trip freeze frame data.

DATA MONITOR MODE

NJEC0034S06

Monitored item [Unit]	ECM input signals	Main signals	Description	Remarks
ENG SPEED [rpm]	○	○	<ul style="list-style-type: none"> Indicates the engine speed computed from the POS signal of the crankshaft position sensor. 	<ul style="list-style-type: none"> Accuracy becomes poor if engine speed drops below the idle rpm. If the signal is interrupted while the engine is running, an abnormal value may be indicated.
MAS A/F SE-B1 [V]	○	○	<ul style="list-style-type: none"> The signal voltage of the mass air flow sensor is displayed. 	<ul style="list-style-type: none"> When the engine is stopped, a certain value is indicated.
B/FUEL SCHDL [msec]			<ul style="list-style-type: none"> "Base fuel schedule" indicates the fuel injection pulse width programmed into ECM, prior to any learned on board correction. 	
A/F ALPHA-B1 [%]		○	<ul style="list-style-type: none"> Indicates the mean value of the air-fuel ratio feedback correction factor per cycle. 	<ul style="list-style-type: none"> When the engine is stopped, a certain value is indicated. This data also includes the data for the air-fuel ratio learning control.
COOLAN TEMP/S [°C] or [°F]	○	○	<ul style="list-style-type: none"> The engine coolant temperature (determined by the signal voltage of the engine coolant temperature sensor) is displayed. 	<ul style="list-style-type: none"> When the engine coolant temperature sensor is open or short-circuited, ECM enters fail-safe mode. The engine coolant temperature determined by the ECM is displayed.
HO2S1 (B1) [V]	○	○	<ul style="list-style-type: none"> The signal voltage of the heated oxygen sensor 1 (front) is displayed. 	
HO2S2 (B1) [V]	○		<ul style="list-style-type: none"> The signal voltage of the heated oxygen sensor 2 (rear) is displayed. 	
HO2S1 MNTR (B1) [RICH/LEAN]	○		<ul style="list-style-type: none"> Display of heated oxygen sensor 1 (front) signal during air-fuel ratio feedback control: RICH ... means the mixture became "rich", and control is being affected toward a leaner mixture. LEAN ... means the mixture became "lean", and control is being affected toward a rich mixture. 	<ul style="list-style-type: none"> After turning ON the ignition switch, "RICH" is displayed until air-fuel mixture ratio feedback control begins. When the air-fuel ratio feedback is clamped, the value just before the clamping is displayed continuously.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

QG

CONSULT-II (Cont'd)

Monitored item [Unit]	ECM input signals	Main signals	Description	Remarks
HO2S2 MNTR (B1) [RICH/LEAN]	○		<ul style="list-style-type: none"> Display of heated oxygen sensor 2 (rear) signal: RICH ... means the amount of oxygen after three way catalyst is relatively small. LEAN ... means the amount of oxygen after three way catalyst is relatively large. 	<ul style="list-style-type: none"> When the engine is stopped, a certain value is indicated.
VHCL SPEED SE [km/h] or [mph]	○	○	<ul style="list-style-type: none"> The vehicle speed computed from the vehicle speed sensor signal is displayed. 	
BATTERY VOLT [V]	○		<ul style="list-style-type: none"> The power supply voltage of ECM is displayed. 	
THRTL POS SEN [V]	○	○	<ul style="list-style-type: none"> The throttle position sensor signal voltage is displayed. 	
FUEL T/TMP SE [°C] or [°F]*			<ul style="list-style-type: none"> The fuel temperature judged from the fuel tank temperature sensor signal voltage is displayed. 	
INT/A TEMP SE [°C] or [°F]	○		<ul style="list-style-type: none"> The intake air temperature determined by the signal voltage of the intake air temperature sensor is indicated. 	
EGR TEMP SEN [V]*	○	○	<ul style="list-style-type: none"> The signal voltage of the EGR temperature sensor is displayed. 	
START SIGNAL [ON/OFF]	○	○	<ul style="list-style-type: none"> Indicates [ON/OFF] condition from the starter signal. 	<ul style="list-style-type: none"> After starting the engine, [OFF] is displayed regardless of the starter signal.
CLSD THL POS [ON/OFF]	○	○	<ul style="list-style-type: none"> Indicates idle position [ON/OFF] computed by ECM according to the throttle position sensor signal. 	
CLSD THL/P SW [ON/OFF]*	○		<ul style="list-style-type: none"> Indicates mechanical contact [ON/OFF] condition of the closed throttle position switch. 	
AIR COND SIG [ON/OFF]	○	○	<ul style="list-style-type: none"> Indicates [ON/OFF] condition of the air conditioner switch as determined by the air conditioning signal. 	
P/N POSI SW [ON/OFF]	○	○	<ul style="list-style-type: none"> Indicates [ON/OFF] condition from the PNP switch signal. 	
PW/ST SIGNAL [ON/OFF]	○	○	<ul style="list-style-type: none"> Indicates [ON/OFF] condition of the power steering oil pressure switch determined by the power steering oil pressure switch signal. 	
LOAD SIGNAL [ON/OFF]	○	○	<ul style="list-style-type: none"> Indicates [ON/OFF] condition from the electrical load signal and/or lighting switch. ON ... rear defogger is operating and/or lighting switch is on. OFF ... rear defogger is not operating and lighting switch is not on. 	
IGNITION SW [ON/OFF]	○		<ul style="list-style-type: none"> Indicates [ON/OFF] condition from ignition switch. 	
HEATER FAN SW [ON/OFF]	○		<ul style="list-style-type: none"> Indicates [ON/OFF] condition from the heater fan switch. 	
INJ PULSE-B1 [msec]		○	<ul style="list-style-type: none"> Indicates the actual fuel injection pulse width compensated by ECM according to the input signals. 	<ul style="list-style-type: none"> When the engine is stopped, a certain computed value is indicated.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

QG

CONSULT-II (Cont'd)

Monitored item [Unit]	ECM input signals	Main signals	Description	Remarks
IGN TIMING [BTDC]		○	<ul style="list-style-type: none"> Indicates the ignition timing computed by ECM according to the input signals. 	
CAL/LD VALUE [%]			<ul style="list-style-type: none"> "Calculated load value" indicates the value of the current airflow divided by peak airflow. 	
ABSOL TH.P/S [%]			<ul style="list-style-type: none"> "Absolute throttle position sensor" indicates the throttle opening computed by ECM according to the signal voltage of the throttle position sensor. 	
MASS AIRFLOW [gm/s]			<ul style="list-style-type: none"> Indicates the mass airflow computed by ECM according to the signal voltage of the mass air flow sensor. 	
IACV-AAC/V [step]		○	<ul style="list-style-type: none"> Indicates the IACV-AAC valve control value computed by ECM according to the input signals. 	
PURG VOL C/V [%]			<ul style="list-style-type: none"> Indicates the EVAP canister purge volume control solenoid valve computed by the ECM according to the input signals. The opening becomes larger as the value increases. 	
EGR VOL CON/V [step]*		○	<ul style="list-style-type: none"> Indicates the EGR volume control valve computed by the ECM according to the input signals. The opening becomes larger as the value increases. 	
INT/V SOL-B1 [ON/OFF]			<ul style="list-style-type: none"> The control condition of the valve timing solenoid valve (determined by ECM according to the input signal) is indicated. ON ... Intake valve timing control operating OFF ... Intake valve timing control not operating 	
AIR COND RLY [ON/OFF]		○	<ul style="list-style-type: none"> Indicates the air conditioner relay control condition determined by ECM according to the input signals. 	
FUEL PUMP RLY [ON/OFF]		○	<ul style="list-style-type: none"> Indicates the fuel pump relay control condition determined by ECM according to the input signals. 	
COOLING FAN [ON/OFF]		○	<ul style="list-style-type: none"> Indicates [ON/OFF] control condition of the cooling fan determined by ECM according to the input signals. 	
HO2S1 HTR (B1) [ON/OFF]			<ul style="list-style-type: none"> Indicates [ON/OFF] condition of heated oxygen sensor 1 heater (front) determined by ECM according to the input signals. 	
HO2S2 HTR (B1) [ON/OFF]			<ul style="list-style-type: none"> Indicates [ON/OFF] condition of heated oxygen sensor 2 heater (rear) determined by ECM according to the input signals. 	

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

QG

CONSULT-II (Cont'd)

Monitored item [Unit]	ECM input signals	Main signals	Description	Remarks
IDL A/V LEARN			<ul style="list-style-type: none"> Display the condition of idle air volume learning YET ... Idle air volume learning has not been performed yet. CMPLT ... Idle air volume learning has already been performed successfully. INCMP ... Idle air volume learning has not been performed successfully. 	
TRVL AFTER MIL [km] or [Mile]			<ul style="list-style-type: none"> Distance traveled while MI is activated 	
VOLTAGE [V]			<ul style="list-style-type: none"> Voltage measured by the voltage probe. 	
PULSE [msec] or [Hz] or [%]			<ul style="list-style-type: none"> Pulse width, frequency or duty cycle measured by the pulse probe. 	<ul style="list-style-type: none"> Only “#” is displayed if item is unable to be measured. Figures with “#”s are temporary ones. They are the same figures as an actual piece of data which was just previously measured.

*: If so equipped

NOTE:

Any monitored item that does not match the vehicle being diagnosed is deleted from the display automatically.

DATA MONITOR (SPEC) MODE

NJEC0034S11

Monitored item [Unit]	ECM input signals	Main signals	Description	Remarks
MAS A/F SE-B1 [V]	○	○	<ul style="list-style-type: none"> The signal voltage of the mass air flow sensor specification is displayed. 	<ul style="list-style-type: none"> When the engine is running, specification range is indicated.
B/FUEL SCHDL [msec]			<ul style="list-style-type: none"> “Base fuel schedule” indicates the fuel injection pulse width programmed into ECM, prior to any learned on board correction. 	<ul style="list-style-type: none"> When the engine is running, specification range is indicated.
A/F ALPHA-B1 [%]		○	<ul style="list-style-type: none"> Indicates the mean value of the air-fuel ratio feedback correction factor per cycle. 	<ul style="list-style-type: none"> When the engine is running, specification range is indicated. This data also includes the data for the air-fuel ratio learning control.

NOTE:

Any monitored item that does not match the vehicle being diagnosed is deleted from the display automatically.

ACTIVE TEST MODE

NJEC0034S07

TEST ITEM	CONDITION	JUDGEMENT	CHECK ITEM (REMEDY)
FUEL INJECTION	<ul style="list-style-type: none"> Engine: Return to the original trouble condition Change the amount of fuel injection using CONSULT-II. 	If trouble symptom disappears, see CHECK ITEM.	<ul style="list-style-type: none"> Harness and connector Fuel injectors Heated oxygen sensor 1 (front)
IGNITION TIMING	<ul style="list-style-type: none"> Engine: Return to the original trouble condition Timing light: Set Retard the ignition timing using CONSULT-II. 	If trouble symptom disappears, see CHECK ITEM.	<ul style="list-style-type: none"> “Idle Air Volume Leaning” (Refer to EC-55.) Camshaft position sensor (PHASE) Crankshaft position sensor (POS) Engine component parts and installing conditions

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

QG

CONSULT-II (Cont'd)

TEST ITEM	CONDITION	JUDGEMENT	CHECK ITEM (REMEDY)
IACV-AAC/V OPENING	<ul style="list-style-type: none"> ● Engine: After warming up, idle the engine. ● Change the IACV-AAC valve opening steps using CONSULT-II. 	Engine speed changes according to the opening steps.	<ul style="list-style-type: none"> ● Harness and connector ● IACV-AAC valve
POWER BAL- ANCE	<ul style="list-style-type: none"> ● Engine: After warming up, idle the engine. ● Air conditioner switch "OFF" ● Shift lever "N" ● Cut off each injector signal one at a time using CONSULT-II. 	Engine runs rough or dies.	<ul style="list-style-type: none"> ● Harness and connector ● Compression ● Injectors ● Power transistor ● Spark plugs ● Ignition coils
COOLING FAN	<ul style="list-style-type: none"> ● Ignition switch: ON ● Turn the cooling fan "ON" and "OFF" using CONSULT-II. 	Cooling fan moves and stops.	<ul style="list-style-type: none"> ● Harness and connector ● Cooling fan motor
ENG COOLANT TEMP	<ul style="list-style-type: none"> ● Engine: Return to the original trouble condition ● Change the engine coolant temperature indication using CONSULT-II. 	If trouble symptom disappears, see CHECK ITEM.	<ul style="list-style-type: none"> ● Harness and connector ● Engine coolant temperature sensor ● Fuel injectors
FUEL PUMP RELAY	<ul style="list-style-type: none"> ● Ignition switch: ON (Engine stopped) ● Turn the fuel pump relay "ON" and "OFF" using CONSULT-II and listen to operating sound. 	Fuel pump relay makes the operating sound.	<ul style="list-style-type: none"> ● Harness and connector ● Fuel pump relay
EGR VOL CONT/V (If so equipped)	<ul style="list-style-type: none"> ● Engine: After warming up, idle the engine. ● Change the EGR volume control valve opening step using CONSULT-II. 	Engine speed changes according to the opening step.	<ul style="list-style-type: none"> ● Harness and connector ● EGR volume control valve
VALVE TIMING SOL	<ul style="list-style-type: none"> ● Ignition switch: ON ● Turn intake valve timing control solenoid valve "ON" and "OFF" using CONSULT-II and listen for operating sound. 	Intake valve timing control solenoid valve makes an operating sound.	<ul style="list-style-type: none"> ● Harness and connector ● Intake valve timing control solenoid valve
PURG VOL CONT/V	<ul style="list-style-type: none"> ● Engine: After warming up, idle the engine. ● Change the EVAP canister purge volume control solenoid valve opening percent using CONSULT-II. 	Engine speed changes according to the opening percent.	<ul style="list-style-type: none"> ● Harness and connector ● EVAP canister purge volume control solenoid valve

DTC AND SRT CONFIRMATION MODE

NJEC0034S08

This mode is not available for models without Euro-OBD system.

SRT STATUS Mode

NJEC0034S0801

For details, refer to "SYSTEM READINESS TEST (SRT) CODE", EC-60.

SRT Work Support Mode



NJEC0034S0803

This mode enables a technician to drive a vehicle to set the SRT while monitoring the SRT status.

DTC Work Support Mode

NJEC0034S0802

TEST MODE	TEST ITEM	CONDITION	REFERENCE PAGE
HEATED OXYGEN SENSOR 1 (FRONT)	HO2S1 (B1) P0130	Refer to corresponding trouble diagnosis for DTC.	EC-176
	HO2S1 (B1) P0131		EC-183
	HO2S1 (B1) P0132		EC-189
	HO2S1 (B1) P0133		EC-195
HEATED OXYGEN SENSOR 2 (REAR)	HO2S2 (B1) P0137		EC-214
	HO2S2 (B1) P0138		EC-222
	HO2S2 (B1) P0139		EC-229
EGR SYSTEM (If so equipped)	EGR SYSTEM P0400	EC-285	
	EGR SYSTEM P1402	EC-353	

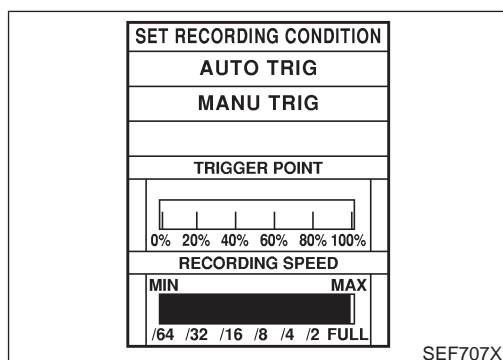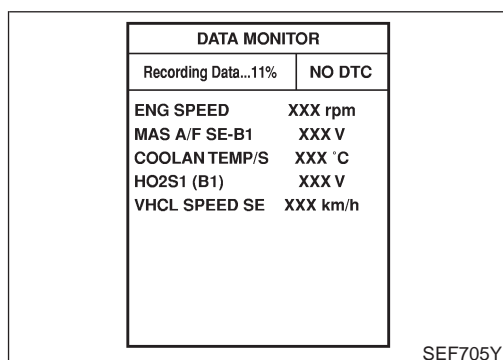

REAL TIME DIAGNOSIS IN DATA MONITOR MODE (RECORDING VEHICLE DATA)

NJEC0034S10

CONSULT-II has two kinds of triggers and they can be selected by touching "SETTING" in "DATA MONITOR" mode.


- 1) "AUTO TRIG" (Automatic trigger):
 - The malfunction will be identified on the CONSULT-II screen in real time.
In other words, DTC/1st trip DTC and malfunction item will be displayed if the malfunction is detected by ECM.
At the moment a malfunction is detected by ECM, "MONITOR" in "DATA MONITOR" screen is changed to "Recording Data ... xx%" as shown at left, and the data after the malfunction detection is recorded. Then when the percentage reached 100%, "REAL-TIME DIAG" screen is displayed. If "STOP" is touched on the screen during "Recording Data ... xx%", "REAL-TIME DIAG" screen is also displayed.
The recording time after the malfunction detection and the recording speed can be changed by "TRIGGER POINT" and "Recording Speed". Refer to CONSULT-II OPERATION MANUAL.
- 2) "MANU TRIG" (Manual trigger):
 - DTC/1st trip DTC and malfunction item will not be displayed automatically on CONSULT-II screen even though a malfunction is detected by ECM.
DATA MONITOR can be performed continuously even though a malfunction is detected.

Use these triggers as follows:


- 1) "AUTO TRIG"
 - While trying to detect the DTC/1st trip DTC by performing the "DTC Confirmation Procedure", be sure to select to "DATA MONITOR (AUTO TRIG)" mode. You can confirm the malfunction at the moment it is detected.
 - While narrowing down the possible causes, CONSULT-II should be set in "DATA MONITOR (AUTO TRIG)" mode, especially in case the incident is intermittent.

When you are inspecting the circuit by gently shaking (or twisting) the suspicious connectors, components and harness in the "DTC Confirmation Procedure", the moment a malfunction is found the DTC/1st trip DTC will be displayed. (Refer to GI-22, "Incident Simulation Tests".)

- 2) "MANU TRIG"
 - If the malfunction is displayed as soon as "DATA MONITOR" is selected, reset CONSULT-II to "MANU TRIG". By selecting "MANU TRIG" you can monitor and store the data. The data can be utilized for further diagnosis, such as a comparison with the value for the normal operating condition.

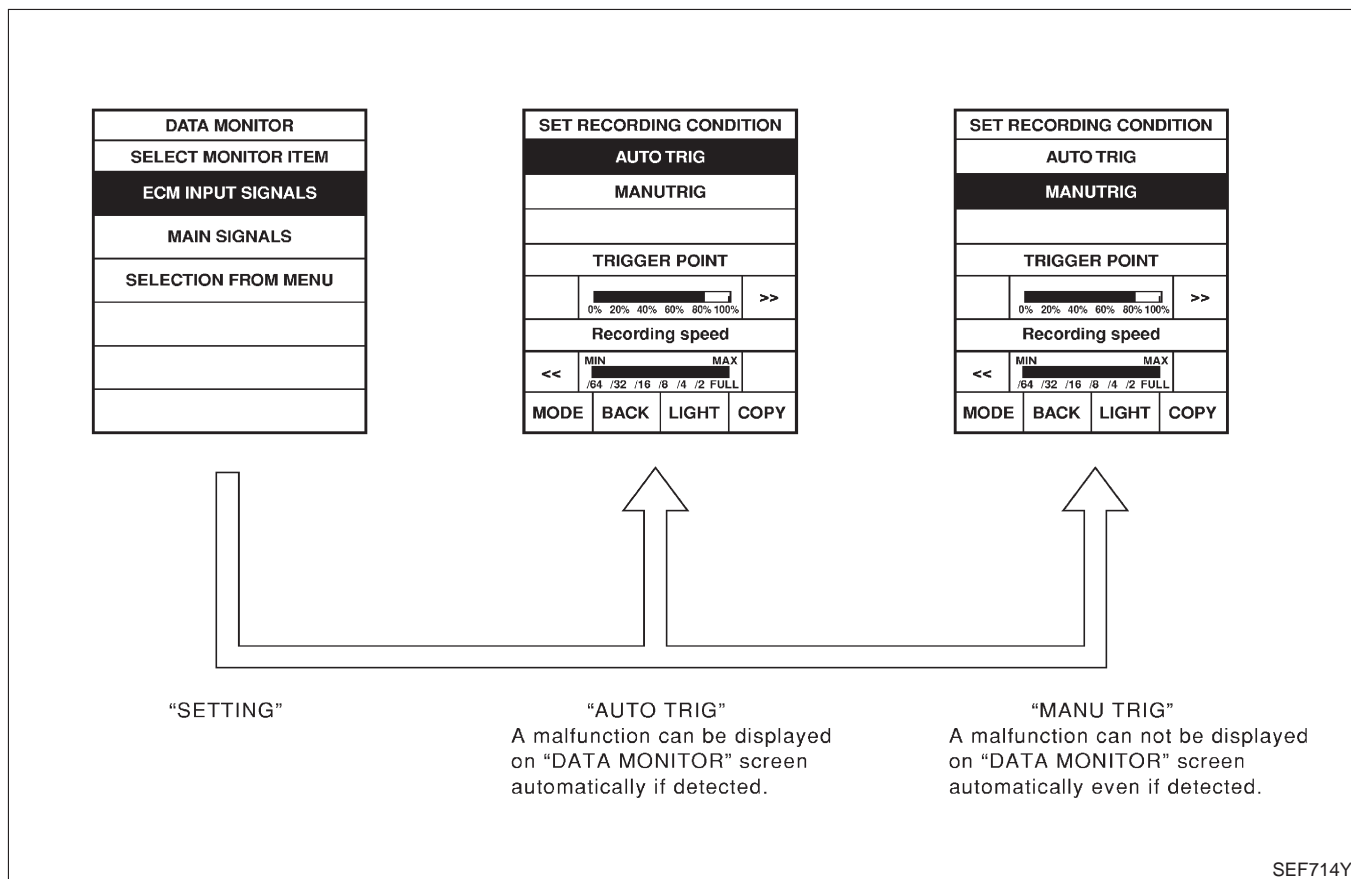

Generic Scan Tool (GST)

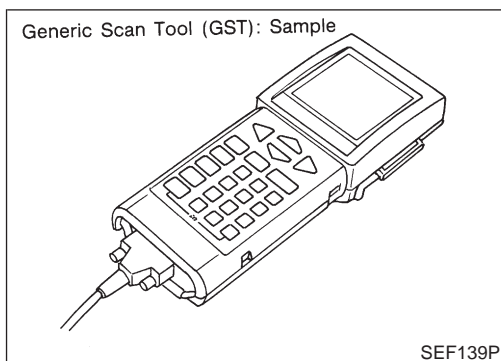

Generic Scan Tool (GST)

=NJEC0035


DESCRIPTION

NJEC0035S01

Generic Scan Tool (OBDII scan tool) complying with ISO15031-4 has 9 different functions explained on the next page.

ISO9141 is used as the protocol.


The name "GST" or "Generic Scan Tool" is used in this service manual.

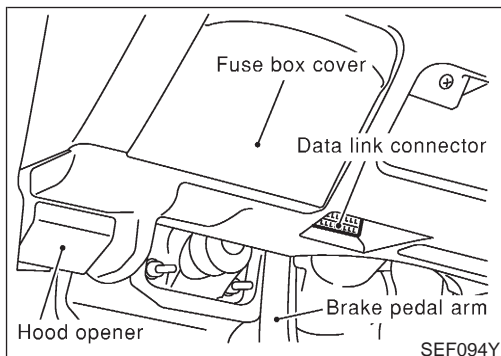

GST INSPECTION PROCEDURE


NJEC0035S02

1. Turn ignition switch OFF.
2. Connect "GST" to data link connector. (Data link connector is located under lower dash panel near the fuse box cover.)

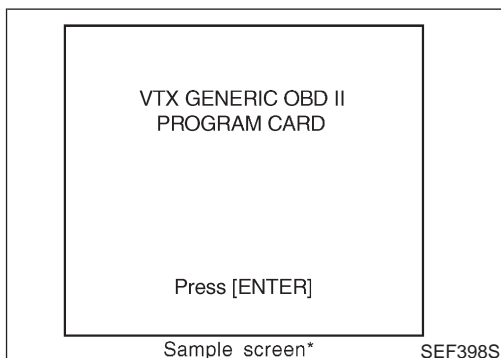

3. Turn ignition switch ON.
4. Enter the program according to instruction on the screen or in the operation manual.

(*: Regarding GST screens in this section, sample screens are shown.)

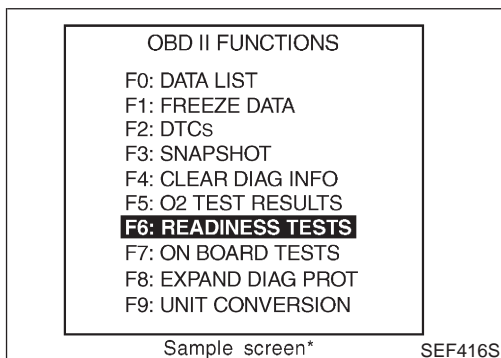

5. Perform each diagnostic mode according to each service procedure.

For further information, see the GST Operation Manual of the tool maker.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION




QG

Generic Scan Tool (GST) (Cont'd)

FUNCTION

NJEC0035S03

Diagnostic test mode		Function
MODE 1	READINESS TESTS	This mode gains access to current emission-related data values, including analog inputs and outputs, digital inputs and outputs, distance traveled while MI is activated and system status information.
MODE 2	(FREEZE DATA)	This mode gains access to emission-related data value which were stored by ECM during the freeze frame. (For details, refer to "Freeze Frame Data", EC-84.)
MODE 3	DTCs	This mode gains access to emission-related power train trouble codes which were stored by ECM.
MODE 4	CLEAR DIAG INFO	This mode can clear all emission-related diagnostic information. This includes: <ul style="list-style-type: none"> ● Clear number of diagnostic trouble codes (MODE 1) ● Clear diagnostic trouble codes (MODE 3) ● Clear trouble code for freeze frame data (MODE 1) ● Clear freeze frame data (MODE 2) ● Reset status of system monitoring test (MODE 1) ● Clear on board monitoring test results (MODE 6 and 7)
MODE 6	(ON BOARD TESTS)	This mode accesses the results of on board diagnostic monitoring tests of specific components/systems that are not continuously monitored.
MODE 7	(ON BOARD TESTS)	This mode enables the off board test drive to obtain test results for emission-related powertrain components/systems that are continuously monitored during normal driving conditions.
MODE 8	—	This mode is not applicable on this vehicle.
MODE 9	(CALIBRATION ID)	This mode enables the off-board (External test equipment) to request specific vehicle information such as Vehicle Identification Number (VIN) and Calibration IDs.

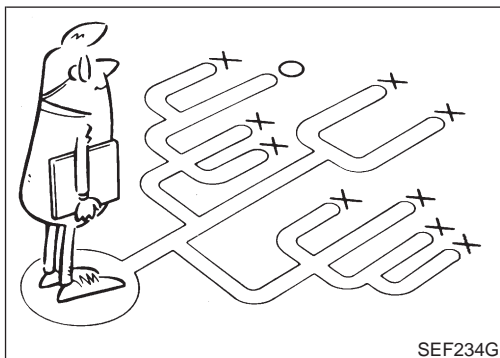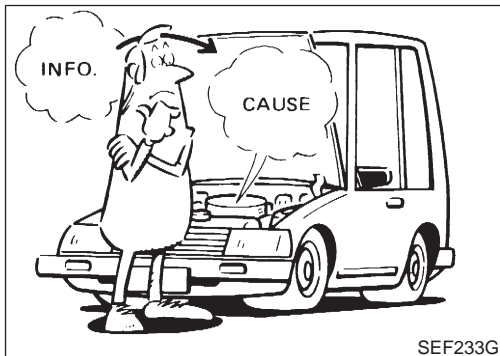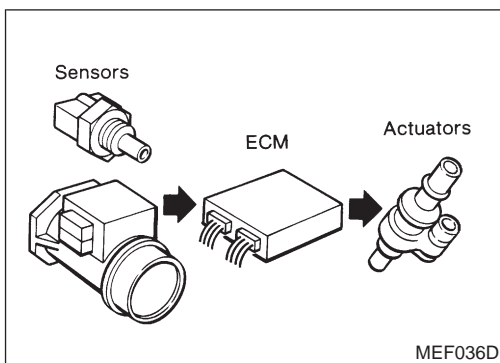

KEY POINTS

WHAT	Vehicle & engine model
WHEN	Date, Frequencies
WHERE	Road conditions
HOW	Operating conditions, Weather conditions, Symptoms

SEF907L

Introduction

NJEC0036

The engine has an ECM to control major systems such as fuel control, ignition control, idle air control system, etc. The ECM accepts input signals from sensors and instantly drives actuators. It is essential that both input and output signals are proper and stable. At the same time, it is important that there are no problems such as vacuum leaks, fouled spark plugs, or other problems with the engine.

It is much more difficult to diagnose a problem that occurs intermittently rather than continuously. Most intermittent problems are caused by poor electric connections or improper wiring. In this case, careful checking of suspected circuits may help prevent the replacement of good parts.

A visual check only may not find the cause of the problems. A road test with CONSULT-II (or GST) or a circuit tester connected should be performed. Follow the "Work Flow" on EC-96.

Before undertaking actual checks, take a few minutes to talk with a customer who approaches with a driveability complaint. The customer can supply good information about such problems, especially intermittent ones. Find out what symptoms are present and under what conditions they occur. A "Diagnostic Worksheet" like the example on next page should be used.

Start your diagnosis by looking for "conventional" problems first. This will help troubleshoot driveability problems on an electronically controlled engine vehicle.

DIAGNOSTIC WORKSHEET

NJEC0036S01

There are many operating conditions that lead to the malfunction of engine components. A good grasp of such conditions can make trouble-shooting faster and more accurate.

In general, each customer feels differently about a problem. It is important to fully understand the symptoms or conditions for a customer complaint.

Utilize a diagnostic worksheet like the one on the next page in order to organize all the information for troubleshooting.


Some conditions may cause the malfunction indicator lamp to come on steady or blink and DTC to be detected.

Example:

Vehicle ran out of fuel, which caused the engine to misfire.

Work Flow

NJEC0563

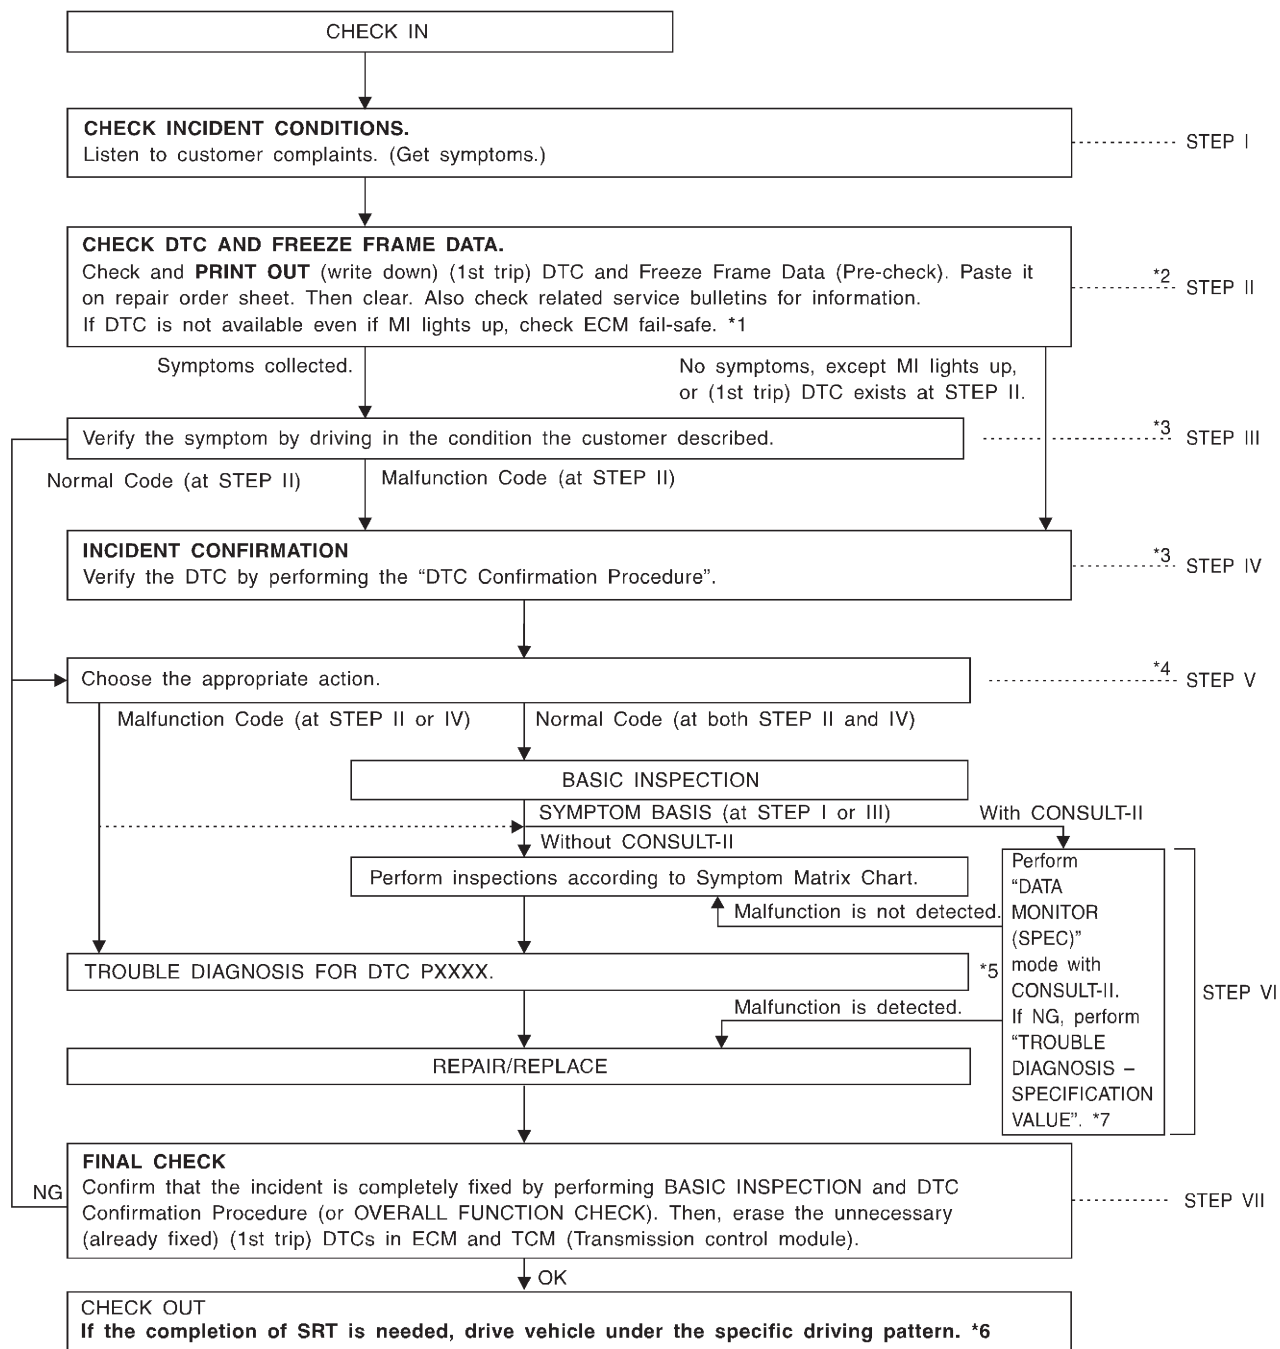

SEF510ZD

*1 EC-123

*2 If time data of "SELF-DIAG RESULTS" is other than "0" or "[1t]", perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.

*3 If the incident cannot be verified, perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.

*4 If the on board diagnostic system cannot be performed, check main power supply and ground circuit. Refer to "TROUBLE DIAGNOSIS FOR POWER SUPPLY", EC-145.

*5 If malfunctioning part cannot be

detected, perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.

*6 EC-64

*7 EC-140

DESCRIPTION FOR WORK FLOW

NJEC0563S01

STEP	DESCRIPTION
STEP I	Get detailed information about the conditions and the environment when the incident/symptom occurred using the "DIAGNOSTIC WORK SHEET", EC-95.
STEP II	Before confirming the concern, check and write down (print out using CONSULT-II or GST) the (1st trip) DTC and the (1st trip) freeze frame data, then erase the DTC and the data. (Refer to EC-68, EC-71.) The (1st trip) DTC and the (1st trip) freeze frame data can be used when duplicating the incident at STEP III & IV. If the incident cannot be verified, perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144. Study the relationship between the cause, specified by (1st trip) DTC, and the symptom described by the customer. (The "Symptom Matrix Chart" will be useful. See EC-124.) Also check related service bulletins for information.
STEP III	Try to confirm the symptom and under what conditions the incident occurs. The "DIAGNOSTIC WORK SHEET" and the freeze frame data are useful to verify the incident. Connect CONSULT-II to the vehicle in DATA MONITOR (AUTO TRIG) mode and check real time diagnosis results. If the incident cannot be verified, perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144. If the malfunction code is detected, skip STEP IV and perform STEP V.
STEP IV	Try to detect the (1st trip) DTC by driving in (or performing) the "DTC Confirmation Procedure". Check and read the (1st trip) DTC and (1st trip) freeze frame data by using CONSULT-II or GST. During the (1st trip) DTC verification, be sure to connect CONSULT-II to the vehicle in DATA MONITOR (AUTO TRIG) mode and check real time diagnosis results. If the incident cannot be verified, perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144. In case the "DTC Confirmation Procedure" is not available, perform the "Overall Function Check" instead. The (1st trip) DTC cannot be displayed by this check, however, this simplified "check" is an effective alternative. The "NG" result of the "Overall Function Check" is the same as the (1st trip) DTC detection.
STEP V	Take the appropriate action based on the results of STEP I through IV. If the malfunction code is indicated, proceed to TROUBLE DIAGNOSIS FOR DTC PXXXX. If the normal code is indicated, proceed refer to "BASIC INSPECTION", EC-98. If CONSULT-II is available, perform "DATA MONITOR (SPEC)" mode with CONSULT-II and proceed to the "TROUBLE DIAGNOSIS — SPECIFICATION VALUE". (Refer to EC-140.) (If malfunction is detected, proceed to "REPAIR/REPLACE".) Then perform inspections according to the Symptom Matrix Chart. (Refer to EC-124.)
STEP VI	Identify where to begin diagnosis based on the relationship study between symptom and possible causes. Inspect the system for mechanical binding, loose connectors or wiring damage using (tracing) "Harness Layouts". Gently shake the related connectors, components or wiring harness with CONSULT-II set in "DATA MONITOR (AUTO TRIG)" mode. Check the voltage of the related ECM terminals or monitor the output data from the related sensors with CONSULT-II. Refer to EC-132. The "Diagnostic Procedure" in EC section contains a description based on open circuit inspection. A short circuit inspection is also required for the circuit check in the Diagnostic Procedure. For details, refer to GI section ("HOW TO PERFORM EFFICIENT DIAGNOSIS FOR AN ELECTRICAL INCIDENT", "Circuit Inspection"). Repair or replace the malfunction parts. If malfunctioning part cannot be detected, perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.
STEP VII	Once you have repaired the circuit or replaced a component, you need to run the engine in the same conditions and circumstances which resulted in the customer's initial complaint. Perform the "DTC Confirmation Procedure" and confirm the normal code [DTC No. P0000] is detected. If the incident is still detected in the final check, perform STEP VI by using a different method from the previous one. Before returning the vehicle to the customer, be sure to erase the unnecessary (already fixed) (1st trip) DTC in ECM and TCM (Transmission control module). (Refer to EC-68, EC-71.)

Basic Inspection

MODELS WITH THROTTLE POSITION SWITCH

NJEC1785

NJEC1785S01


Precaution:


Perform Basic Inspection without electrical or mechanical loads applied;

- Headlamp switch is OFF,

On vehicle equipped with daytime light systems, set lighting switch to the 1st position to light only small lamps.

- Air conditioner switch is OFF,
- Rear window defogger switch is OFF,
- Steering wheel is in the straight-ahead position, etc.

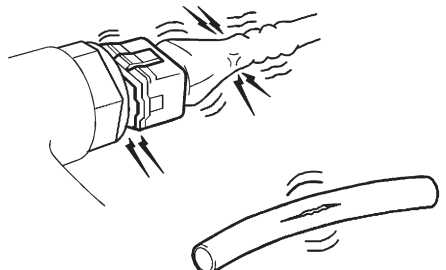1	INSPECTION START
<p>1. Check service records for any recent repairs that may indicate a related problem, or a current need for scheduled maintenance.</p> <p>2. Open engine hood and check the following:</p> <ul style="list-style-type: none"> ● Harness connectors for improper connections ● Vacuum hoses for splits, kinks and improper connections ● Wiring for improper connections, pinches and cuts ● Air cleaner clogging ● Hoses and ducts for leaks 	
	
SEF983U	
▶ GO TO 2.	

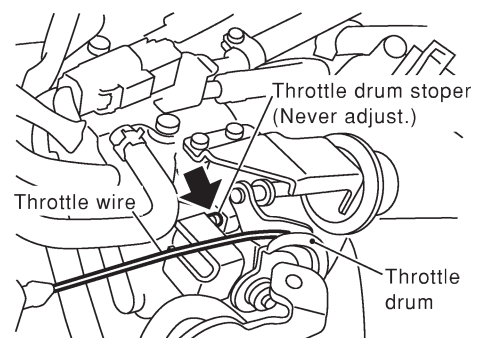
2	CHECK THROTTLE OPENER OPERATION-I
<p>Confirm that there is a clearance between throttle drum and stopper.</p>	
	
OK or NG	
OK	▶ GO TO 4.
NG	▶ GO TO 3.


TROUBLE DIAGNOSIS — BASIC INSPECTION

QG

Basic Inspection (Cont'd)

3	CHECK THROTTLE OPENER FIXING BOLTS	
Check throttle opener fixing bolts for loosening.		
OK or NG		
OK	▶	1. Repair or replace throttle body assembly. 2. GO TO 2.
NG	▶	1. Retighten the fixing bolts. 2. GO TO 2.

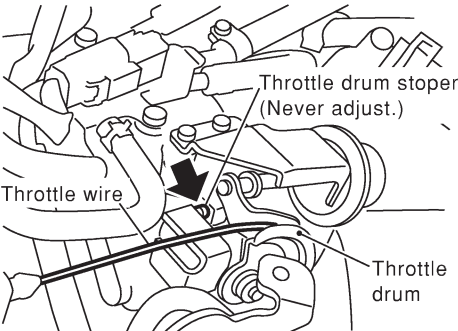
4	CHECK THROTTLE OPENER OPERATION-II	
1. Start engine and let it idle. 2. Confirm that throttle opener rod moves backward and there is a clearance between throttle drum and throttle opener rod.		
		
SEF850Y		
OK or NG		
OK	▶	GO TO 7.
NG	▶	GO TO 5.

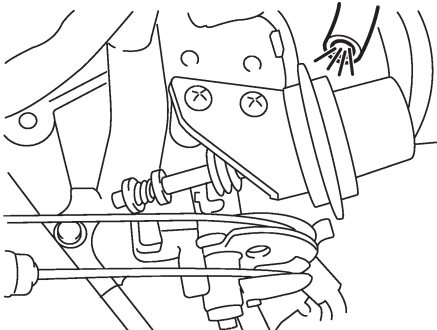
5	CHECK VACUUM SOURCE FOR THROTTLE OPENER	
1. Disconnect vacuum hose connected to throttle opener. 2. Check vacuum existence with engine running.		
		
Vacuum should exist.		
SEF155Y		
OK or NG		
OK	▶	1. Repair or replace throttle body assembly. 2. GO TO 2.
NG	▶	GO TO 6.

TROUBLE DIAGNOSIS — BASIC INSPECTION

QG

Basic Inspection (Cont'd)

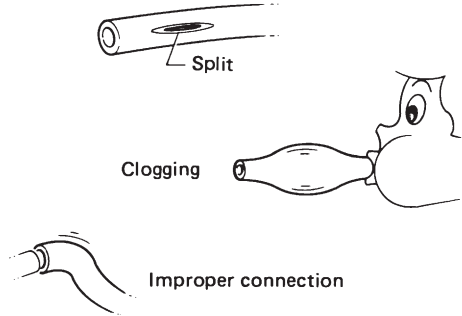6	CHECK VACUUM HOSE	
<p>1. Stop engine. 2. Remove the vacuum hose. 3. Check the vacuum hose for splits, kinks and clogging.</p> <div style="text-align: center;">  <p style="margin-left: 100px;">Split</p> <p style="margin-left: 100px;">Clogging</p> <p style="margin-left: 100px;">Improper connection</p> </div> <p style="text-align: right;">SEF109L</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	1. Clean vacuum port by blowing air. 2. GO TO 4.
NG	▶	1. Replace vacuum hose. 2. GO TO 4.

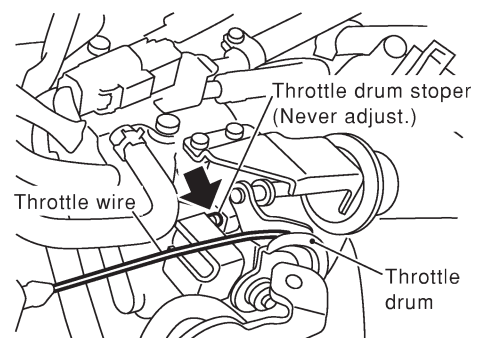7	CHECK THROTTLE DRUM OPERATION	
<p>Confirm that throttle drum moves to contact the stopper.</p> <div style="text-align: center;">  <p style="margin-left: 100px;">Throttle drum stopper (Never adjust.)</p> <p style="margin-left: 100px;">Throttle wire</p> <p style="margin-left: 100px;">Throttle drum</p> </div> <p style="text-align: right;">SEF850Y</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 10.
NG	▶	GO TO 8.

8	CHECK ACCELERATOR WIRE INSTALLATION	
<p>1. Stop engine. 2. Check accelerator wire for slack.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 9.
NG	▶	1. Adjust accelerator wire. Refer to FE-3, "Adjusting Accelerator Wire". 2. GO TO 7.

TROUBLE DIAGNOSIS — BASIC INSPECTION

QG

Basic Inspection (Cont'd)


9	CHECK THROTTLE VALVE OPERATION	
1. Remove intake air ducts. 2. Check throttle valve operation when moving throttle drum by hand.		
OK or NG		
OK	▶	1. Retighten the throttle drum fixing nuts. 2. GO TO 7.
NG	▶	1. Clean the throttle body and throttle valve. 2. GO TO 7.

10	CHECK THROTTLE POSITION SWITCH CLOSED POSITION-I (If throttle opener is equipped)	
<p>NOTE: Always check ignition timing before performing the following.</p> 1. Warm up engine to normal operating temperature. 2. Stop engine. 3. Remove the vacuum hose connected to the throttle opener. 4. Connect suitable vacuum hose to vacuum pump as shown below.		
<p style="text-align: right;">SEF793WA</p>		
5. Apply vacuum [more than -40.0 kPa (-400 mbar, -300 mmHg, -11.81 inHg)] until the throttle drum is free from the throttle opener rod.		
Models with CONSULT-II	▶	GO TO 11.
Models without CONSULT-II	▶	GO TO 15.

11 CHECK THROTTLE POSITION SWITCH CLOSED POSITION-II

④ With CONSULT-II

1. Connect "CONSULT-II" to the data link connector and select "ENGINE" from the menu. Refer to EC-81.
2. Turn ignition switch "ON".
3. Select "TP SW/TP SEN IDLE POSI ADJ" in "WORK SUPPORT" mode with CONSULT-II.
4. Read "CLSD THL/P SW" signal under the following conditions.
 - Insert a 0.05 mm (0.0020 in) and 0.15 mm (0.0059 in) feeler gauge alternately between stopper and throttle drum as shown in the figure and check the signal.

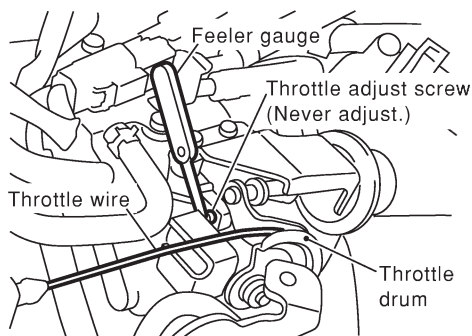

SEF073X

TP SW/TP SEN IDLE POSI ADJ	
MONITOR	
COOLAN TEMP/S	91°C
CLSD THL POS	ON
CLSD THL/P SW	ON

SEF715Y


"CLSD THL/P SW" signal should remain "ON" while inserting 0.05 mm (0.0020 in) feeler gauge.
 "CLSD THL/P SW" signal should remain "OFF" while inserting 0.15 mm (0.0059 in) feeler gauge.

OK or NG

OK	▶	GO TO 14.
NG	▶	GO TO 12.


12 ADJUSTMENT THROTTLE POSITION SWITCH CLOSED POSITION-I

- Ⓟ **With CONSULT-II**
1. Loosen throttle position sensor fixing bolts.
 2. Confirm that proper vacuum is applied. Refer to test No. 10. During adjustment, vacuum should be applied.
 3. Insert 0.05 mm (0.0020 in) feeler gauge between stopper and throttle drum as shown in the figure.

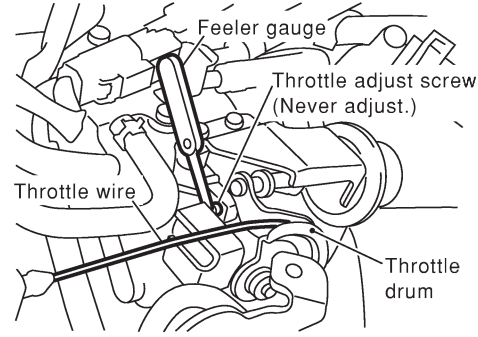

SEF073X

4. Turn throttle position sensor body counterclockwise until "CLSD THL/P SW" signal switches to "OFF".

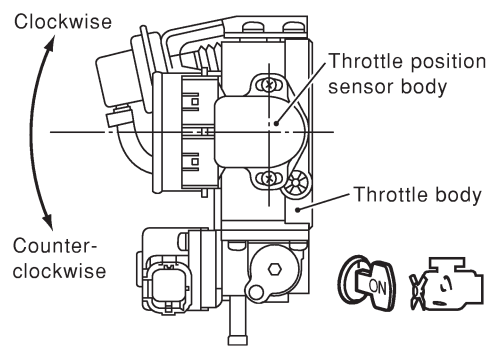

TP SW/TP SEN IDLE POSI ADJ	
MONITOR	
COOLAN TEMP/S	91°C
CLSD THL POS	ON
CLSD THL/P SW	OFF


SEF863Y

▶ GO TO 13.

13 ADJUSTMENT THROTTLE POSITION SWITCH CLOSED POSITION-II

Ⓟ With CONSULT-II

1. Temporarily tighten sensor body fixing bolts as follows.
 - Gradually move the sensor body clockwise and stop it when "CLSD THL/P SW" signal switches from "OFF" to "ON", then temporarily tighten sensor body fixing bolts.

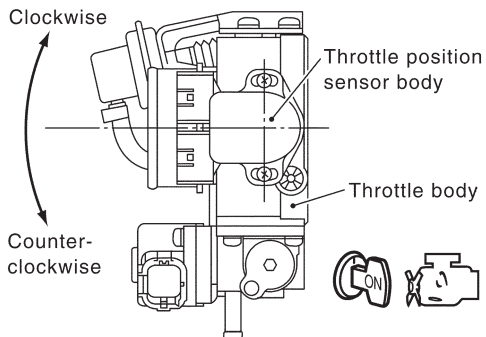

SEF964W

2. Make sure two or three times that the signal is "ON" when the throttle valve is closed and "OFF" when it is opened.
3. Remove 0.05 mm (0.0020 in) feeler gauge then insert 0.15 mm (0.0059 in) feeler gauge.
4. Make sure two or three times that the signal remains "OFF" when the throttle valve is closed.
5. Tighten throttle position sensor.
6. Check the "CLSD THL/P SW" signal again.

TP SW/TP SEN IDLE POSI ADJ	
MONITOR	
COOLAN TEMP/S	91 °C
CLSD THL POS	ON
CLSD THL/P SW	OFF

SEF716Y

The signal remains "OFF" while closing throttle valve.


OK or NG

OK	▶	GO TO 14.
NG	▶	GO TO 12.

14 RESET THROTTLE POSITION SENSOR IDLE POSITION MEMORY

④ With CONSULT-II
NOTE:
Always warm up engine to normal operating temperature. If engine is cool, the throttle position sensor idle position memory will not be reset correctly.

1. Confirm that proper vacuum is applied. Refer to Test No. 10.
2. Attach blind cap to vacuum port from which vacuum hose to throttle opener was disconnected.
3. Start engine.
4. Warm up engine to normal operating temperature.
5. Select "TP SW/TP SEN IDLE POSI ADJ" in "WORK SUPPORT" mode.
6. Stop engine. (Turn ignition switch "OFF".)
7. Turn ignition switch "ON" and wait at least 5 seconds.

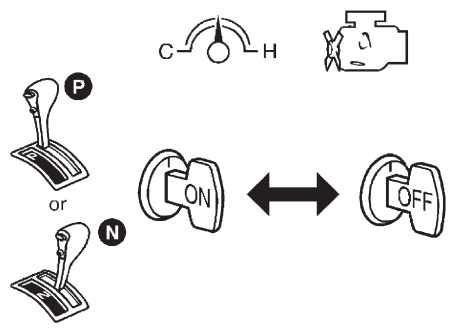


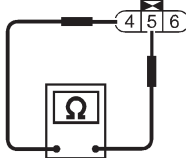
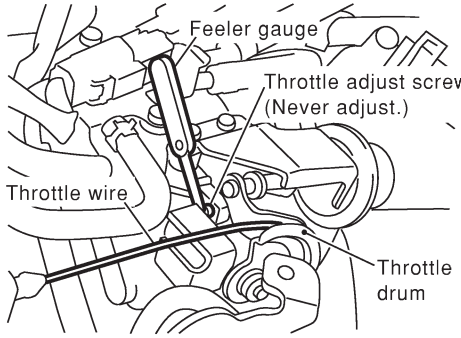
SEF864V

8. Turn ignition switch "OFF" and wait at least 9 seconds.
9. Repeat steps 7 and 8 until "CLSD THL POS" signal changes to "ON".

TP SW/TP SEN IDLE POSI ADJ	
MONITOR	
COOLAN TEMP/S	91 °C
CLSD THL POS	ON
CLSD THL/P SW	ON

SEF715Y


▶ GO TO 19.

15	CHECK THROTTLE POSITION SWITCH CLOSED POSITION-II	
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Disconnect closed throttle position switch harness connector. 2. Check continuity between closed throttle position switch terminals 4 and 5 under the following conditions. 		
		
		
SEF711X		
<ul style="list-style-type: none"> ● Insert the 0.05 mm (0.0020 in) and 0.15 mm (0.0059 in) feeler gauge alternately between the stopper and throttle drum as shown in the figure. 		
		
SEF073X		
<p>“Continuity should exist” while inserting 0.05 mm (0.0020 in) feeler gauge. “Continuity should not exist” while inserting 0.15 mm (0.0059 in) feeler gauge.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 18.
NG	▶	GO TO 16.


16 ADJUSTMENT THROTTLE POSITION SWITCH CLOSED POSITION-I

⊗ **Without CONSULT-II**

1. Loosen throttle position sensor fixing bolts.
2. Confirm that proper vacuum is applied. Refer to Test No. 10. During adjustment, vacuum should be applied.
3. Insert 0.05 mm (0.0020 in) feeler gauge between stopper and throttle drum as shown in the figure.

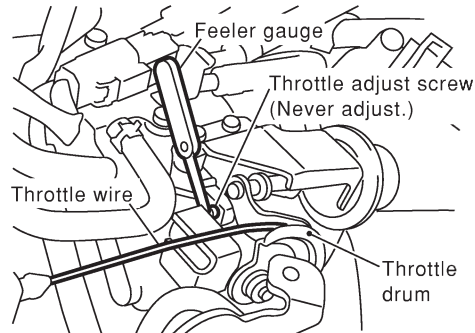


SEF073X

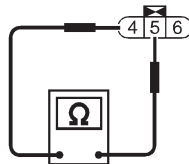


SEF711X


4. Turn throttle position sensor body counterclockwise until continuity does not exist.

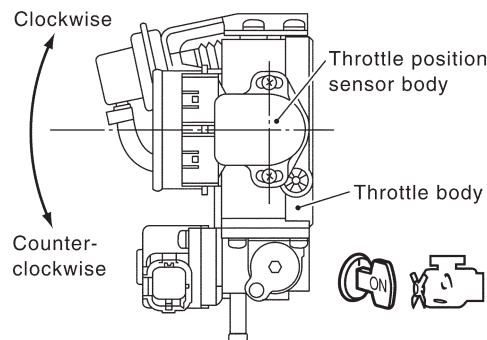

SEF964W

▶ GO TO 17.

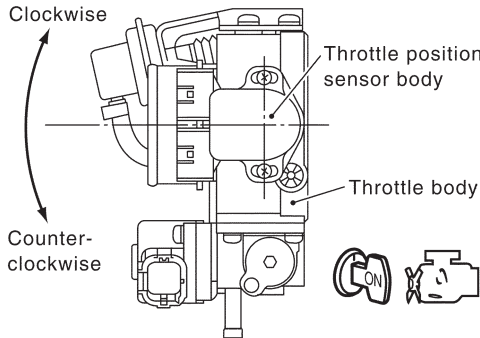17	ADJUSTMENT THROTTLE POSITION SWITCH CLOSED POSITION-II	
<p>⊗ Without CONSULT-II</p> <p>1. Temporarily tighten sensor body fixing bolts as follows.</p> <ul style="list-style-type: none"> ● Gradually move the sensor body clockwise and stop it when the continuity comes to exist, then temporarily tighten sensor body fixing bolts. 		
		
SEF964W		
<p>2. Make sure two or three times that the continuity exists when the throttle valve is closed and continuity does not exist when it is opened.</p> <p>3. Remove 0.05 mm (0.0020 in) feeler gauge then insert 0.15 mm (0.0059 in) feeler gauge.</p> <p>4. Make sure two or three times that the continuity does not exist when the throttle valve is closed.</p> <p>5. Tighten throttle position sensor.</p> <p>6. Check the continuity again.</p> <p style="color: blue;">Continuity does not exist while closing the throttle valve.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 18.
NG	▶	GO TO 16.

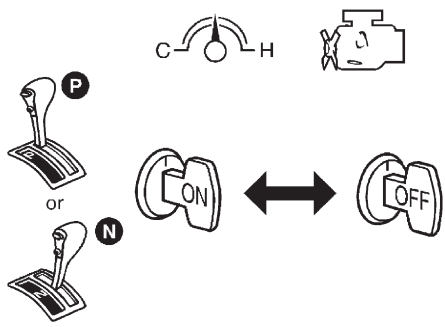18	RESET THROTTLE POSITION SENSOR IDLE POSITION MEMORY	
<p>⊗ Without CONSULT-II</p> <p>NOTE:</p> <p>Always warm up engine to normal operating temperature. If engine is cool, the throttle position sensor idle position memory will not be reset correctly.</p>		
<p>1. Confirm that proper vacuum is applied. Refer to Test No. 10.</p> <p>2. Attach blind cap to vacuum port from which vacuum hose to throttle opener was disconnected.</p> <p>3. Start engine.</p> <p>4. Warm up engine to normal operating temperature.</p> <p>5. Stop engine. (Turn ignition switch "OFF".)</p> <p>6. Turn ignition switch "ON" and wait at least 5 seconds.</p>		
		
SEF864V		
<p>7. Turn ignition switch "OFF" and wait at least 9 seconds.</p> <p>8. Repeat steps 6 and 7, 20 times.</p>		
▶		GO TO 19.

19	CHECK (1ST TRIP) DTC	
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Release vacuum from throttle opener. 3. Remove vacuum pump and vacuum hose from throttle opener. 4. Reinstall original vacuum hose to throttle opener securely. 5. Start engine and warm it up to normal operating temperature. 6. Rev (2,000 to 3,000 rpm) two or three times. 7. Make sure no (1st trip) DTC is displayed with CONSULT-II or GST. 		
OK or NG		
OK	▶	GO TO 21.
NG	▶	GO TO 20.

20	REPAIR MALFUNCTION	
Repair or replace components as necessary according to corresponding "Diagnostic Procedure".		
		▶ GO TO 19.

21	CHECK TARGET IDLE SPEED	
<p> With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Select "ENG SPEED" in "DATA MONITOR" mode with CONSULT-II. 3. Check idle speed. M/T: 700±50 rpm A/T: 800±50 rpm (in "P" or "N" position) 		
<p> Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Check idle speed. M/T: 700±50 rpm A/T: 800±50 rpm (in "P" or "N" position) 		
OK or NG		
OK	▶	GO TO 31.
NG	▶	GO TO 22.

22	PERFORM IDLE AIR VOLUME LEARNING	
Refer to "Idle Air Volume Learning", EC-55. Which is the result CMPLT or INCMP?		
CMPLT or INCMP		
CMPLT	▶	GO TO 23.
INCMP	▶	<ol style="list-style-type: none"> 1. Follow the construction of "Idle Air Volume Learning". 2. GO TO 22.

Basic Inspection (Cont'd)

23	CHECK TARGET IDLE SPEED AGAIN	
<p>Ⓜ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Select "ENG SPEED" in "DATA MONITOR" mode with CONSULT-II. 3. Check idle speed. M/T: 700±50 rpm A/T: 800±50 rpm (in "P" or "N" position) 		
<p>ⓧ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Check idle speed. M/T: 700±50 rpm A/T: 800±50 rpm (in "P" or "N" position) <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 29.
NG (Models with Euro-OBD system)	▶	GO TO 25.
NG (Models without Euro-OBD system)	▶	GO TO 24.


24	CHECK IACV-AAC VALVE CIRCUIT FOR OPEN AND SHORT	
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Check IACV-AAC valve circuit for open and short. Refer to "Diagnostic Procedure", EC-313. <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 25.
NG	▶	<ol style="list-style-type: none"> 1. Repair or replace. 2. GO TO 26.

25	REPLACE IACV-AAC VALVE	
Replace IACV-AAC valve.		
	▶	GO TO 26.

26	PERFORM IDLE AIR VOLUME LEARNING	
<p>Refer to "Idle Air Volume Learning", EC-55 Which is the result CMPLT or INCMP?</p> <p style="text-align: center;">CMPLT or INCMP</p>		
CMPLT	▶	GO TO 27.
INCMP	▶	<ol style="list-style-type: none"> 1. Follow the construction of "Idle Air Volume Learning". 2. GO TO 22.


27	CHECK TARGET IDLE SPEED AGAIN	
<p>Ⓟ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Select "ENG SPEED" in "DATA MONITOR" mode with CONSULT-II. 3. Check idle speed. M/T: 700±50 rpm A/T: 800±50 rpm (in "P" or "N" position) 		
<p>ⓧ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Check idle speed. M/T: 700±50 rpm A/T: 800±50 rpm (in "P" or "N" position) <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 29.
NG	▶	GO TO 28.

28	CHECK ECM FUNCTION	
<ol style="list-style-type: none"> 1. Substitute another known-good ECM to check ECM function. (ECM may be the cause of a problem, but this is rarely the case.) 2. Perform initialization of NATS system and registration of NATS ignition key IDs. Refer to "NATS (Nissan Anti-Theft System)", EC-72. 		
	▶	GO TO 22.

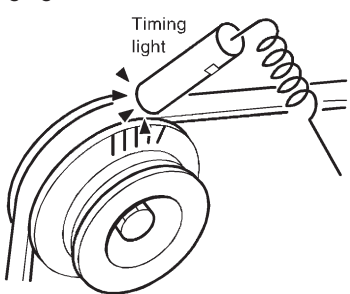29	CHECK IGNITION TIMING	
<ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Check ignition timing at idle using a timing light. 		
		
<p>Ignition timing: M/T 8°±5° BTDC A/T 10°±5° BTDC (in "P" or "N" position)</p> <p style="text-align: right;">SEF984U</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 37.
NG	▶	GO TO 30.

30	CHECK TIMING CHAIN INSTALLATION	
<p>Check timing chain installation. Refer to EM-27, "Installation".</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 28.
NG	▶	<ol style="list-style-type: none"> 1. Repair the timing chain installation. 2. GO TO 22.

Basic Inspection (Cont'd)

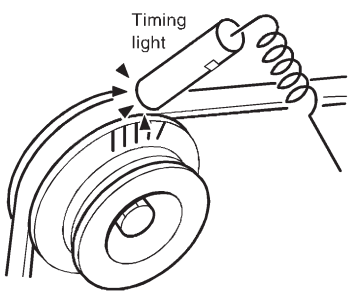31	CHECK IGNITION TIMING	
<p>1. Start engine and let it idle. 2. Check ignition timing at idle using a timing light.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SEF984U</p> <p>Ignition timing: M/T 8°±5° BTDC A/T 10°±5° BTDC (in "P" or "N" position)</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 37.
NG	▶	GO TO 22.

32	PERFORM IDLE AIR VOLUME LEARNING	
<p>Refer to "Idle Air Volume Learning", EC-55. Which is the result CMPLT or INCMP?</p> <p style="text-align: center;">CMPLT or INCMP</p>		
CMPLT	▶	GO TO 33.
INCMP	▶	1. Follow the construction of "Idle Air Volume Learning". 2. GO TO 32.

33	CHECK TARGET IDLE SPEED AGAIN	
<p><input checked="" type="checkbox"/> With CONSULT-II</p> <p>1. Start engine and warm it up to normal operating temperature. 2. Select "ENG SPEED" in "DATA MONITOR" mode with CONSULT-II. 3. Check idle speed. M/T: 700±50 rpm A/T: 800±50 rpm (in "P" or "N" position)</p>		
<p><input type="checkbox"/> Without CONSULT-II</p> <p>1. Start engine and warm it up to normal operating temperature. 2. Check idle speed. M/T: 700±50 rpm A/T: 800±50 rpm (in "P" or "N" position)</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 35.
NG	▶	GO TO 34.

34	CHECK ECM FUNCTION	
<p>1. Substitute another known-good ECM to check ECM function. (ECM may be the cause of a problem, but this is rarely the case.) 2. Perform initialization of NATS system and registration of NATS ignition key IDs. Refer to "NATS (Nissan Anti-Theft System)", EC-72.</p>		
	▶	GO TO 32.

35	CHECK IGNITION TIMING AGAIN	
Check ignition timing again. Refer to Test No. 31.		
OK or NG		
OK	▶	GO TO 37.
NG	▶	GO TO 36.

36	CHECK TIMING CHAIN INSTALLATION	
Check timing chain installation. Refer to EM-27, "Installation".		
OK or NG		
OK	▶	GO TO 34.
NG	▶	1. Repair the timing chain installation. 2. GO TO 32.

37	ERASE UNNECESSARY DTC	
After this inspection, unnecessary DTC No. might be displayed. Erase the stored memory in ECM and TCM (Transmission control module). Refer to "How to Erase Emission-Related Diagnostic Information", EC-68 or EC-75 and AT-50, "HOW TO ERASE DTC".		
OK or NG		
▶		INSPECTION END


MODELS WITHOUT THROTTLE POSITION SWITCH

NJEC1785S02

Precaution:

Perform Basic Inspection without electrical or mechanical loads applied;

- Headlamp switch is OFF,
- On vehicle equipped with daytime light system, set lighting switch to the 1st position to light only small lamps.**
- Air conditioner switch is OFF,
- Rear window defogger switch is OFF,
- Steering wheel is in the straight-ahead position, etc.

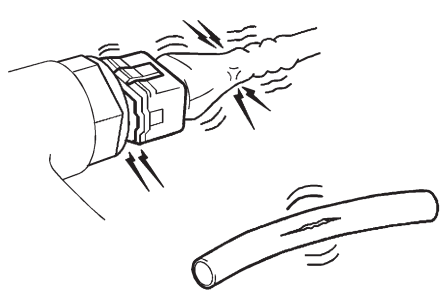1	INSPECTION START	
<p>1. Check service records for any recent repairs that may indicate a related problem, or a current need for scheduled maintenance.</p> <p>2. Open engine hood and check the following:</p> <ul style="list-style-type: none"> ● Harness connectors for improper connections ● Vacuum hoses for splits, kinks and improper connections ● Wiring for improper connections, pinches and cuts ● Air cleaner clogging ● Hoses and ducts for leaks 		
		
▶		GO TO 2.

SEF983U

TROUBLE DIAGNOSIS — BASIC INSPECTION

QG*Basic Inspection (Cont'd)*

2 CHECK THROTTLE DRUM OPERATION-I	
Confirm that throttle drum is in contact with the stopper. OK or NG	
OK (with CONSULT-II) ▶	GO TO 5.
OK (without CONSULT-II) ▶	GO TO 8.
NG ▶	GO TO 3.

3 CHECK ACCELERATOR WIRE INSTALLATION	
Check accelerator wire for slack. OK or NG	
OK ▶	GO TO 4.
NG ▶	Adjust accelerator wire. Refer to FE section, "Adjusting Accelerator Wire".


4 CHECK THROTTLE VALVE OPERATION	
1. Remove intake air ducts. 2. Check throttle valve operation when moving throttle drum by hand. OK or NG	
OK ▶	Retighten the throttle drum fixing nuts.
NG ▶	Clean the throttle body and throttle valve.

5 CHECK CLOSED THROTTLE POSITION SWITCH IDLE POSITION	
Ⓟ With CONSULT-II 1. Start engine and warm it up to normal operating temperature. 2. Stop engine. 3. Turn ignition switch "ON". 4. Select "THRTL POS SEN" and "CLSD THL POS" in "DATA MONITOR" mode with CONSULT-II. 5. Make sure that "THRTL POS SEN" indicates 0.35 to 0.65V, and "CLSD THL POS" indicates "ON". (Accelerator pedal is fully released). OK or NG	
OK ▶	GO TO 11.
NG ▶	GO TO 6.

6 ADJUST THROTTLE POSITION SENSOR IDLE POSITION

④ With CONSULT-II

1. Loosen throttle position sensor fixing bolts.
2. Turn throttle position sensor body clockwise or counterclockwise until "THRTL POS SEN" indication becomes 0.35 to 0.65V.

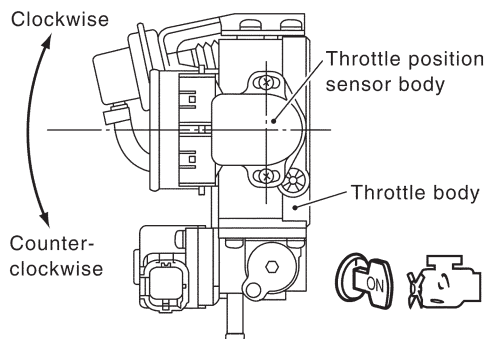

SEF964W

3. Tighten the throttle position sensor fixing bolts.

▶ GO TO 7.


7 RESET THROTTLE POSITION SENSOR IDLE POSITION MEMORY

④ With CONSULT-II

NOTE:

Always warm up engine to normal operating temperature. If engine is cool, the throttle position sensor idle position memory will not be reset correctly.

1. Start engine and warm it up to normal operating temperature.
2. Select "CLSD THL POS" in "DATA MONITOR" mode with CONSULT-II.
3. Stop engine. (Turn ignition switch "OFF".)
4. Turn ignition switch "ON" and wait at least 5 seconds.

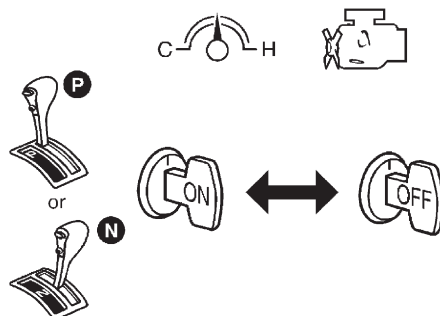

SEF864V


5. Turn ignition switch "OFF" and wait at least 9 seconds.
6. Repeat steps 4 and 6 until "CLSD THL POS" indication changes to "ON".


DATA MONITOR	
MONITOR	NO DTC
CLSD THL POS	ON

SEF061Y

▶ GO TO 11.

Basic Inspection (Cont'd)

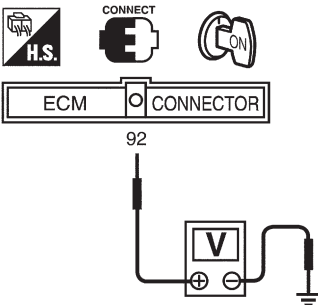8	CHECK CLOSED THROTTLE POSITION SWITCH IDLE POSITION	
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Stop engine. 3. Turn ignition switch "ON". 4. Check voltage between ECM terminal 92 and ground with accelerator pedal fully released. 		
		
NEF315A		
Voltage: 0.35 to 0.65V		
OK	▶	GO TO 6.
NG	▶	GO TO 9.

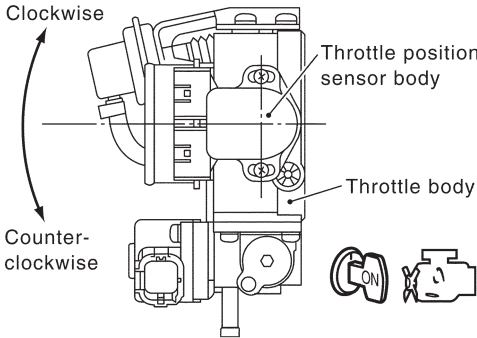9	CHECK THROTTLE VALVE OPERATION	
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Loosen throttle position sensor fixing bolts. 2. Turn throttle position sensor body clockwise or counterclockwise until the voltage between ECM terminal 92 and ground becomes 0.35 to 0.65V. 		
		
SEF964W		
<ol style="list-style-type: none"> 3. Tighten the throttle position sensor fixing bolts. 		
▶		GO TO 10.

10	RESET THROTTLE POSITION SENSOR IDLE POSITION MEMORY
<p> Without CONSULT-II</p> <p>NOTE: Always warm up engine to normal operating temperature. If engine is cool, the throttle position sensor idle position memory will not be reset correctly.</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Stop engine. (Turn ignition switch "OFF"). 3. Turn ignition switch "ON" and wait at least 5 seconds. <div style="text-align: center; margin: 10px 0;"> </div> <ol style="list-style-type: none"> 4. Turn ignition switch "OFF" and wait at least 9 seconds. 5. Repeat steps 4 and 6, 20 times. 	
SEF864V	
▶	GO TO 11.

11	CHECK (1ST TRIP) DTC
<ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Rev (2,000 to 3,000 rpm) two or three times. 3. Make sure no (1st trip) DTC is displayed with CONSULT-II GST or Diagnostic Test Mode II (Self-diagnostic Results). <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 13.
NG	▶ GO TO 12.

12	REPAIR MALFUNCTION
Repair or replace components as necessary	
▶	GO TO 11.

13	CHECK TARGET IDLE SPEED
<p> With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Select "ENG SPEED" in "DATA MONITOR" mode with CONSULT-II. 3. Check idle speed. M/T: 700±50 rpm A/T: 800±50 rpm (in "P" or "N" position) 	
<p> Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Check idle speed. M/T: 700±50 rpm A/T: 800±50 rpm (in "P" or "N" position) <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 22.
NG	▶ GO TO 14.

Basic Inspection (Cont'd)

14	PERFORM IDLE AIR VOLUME LEARNING	
Refer to "Idle Air Volume Learning", EC-55 Which is the result CMPLT or INCMP?		
CMPLT or INCMP		
CMPLT	▶	GO TO 15.
INCMP	▶	1. Follow the instruction of "Idle Air Volume Learning". 2. GO TO 14.

15	CHECK TARGET IDLE SPEED AGAIN	
(P) With CONSULT-II 1. Start engine and warm it up to normal operating temperature. 2. Select "ENG SPEED" in "DATA MONITOR" mode with CONSULT-II. 3. Check idle speed. M/T: 700±50 rpm A/T: 800±50 rpm (in "P" or "N" position)		
(X) Without CONSULT-II 1. Start engine and warm it up to normal operating temperature. 2. Check idle speed. M/T: 700±50 rpm A/T: 800±50 rpm (in "P" or "N" position)		
OK or NG		
OK	▶	GO TO 29.
NG (Models with Euro-OBD system)	▶	GO TO 17.
NG (Models without Euro-OBD system)	▶	GO TO 16.


16	CHECK IACV-AAC VALVE CIRCUIT FOR OPEN AND SHORT	
1. Turn ignition switch "OFF". 2. Check IACV-AAC valve circuit for open and short. Refer to "Diagnostic Procedure", EC-313.		
OK or NG		
OK	▶	GO TO 17.
NG	▶	1. Repair or replace. 2. GO TO 18.

17	REPLACE IACV-AAC VALVE	
Replace IACV-AAC valve.		
	▶	GO TO 18.

18	PERFORM IDLE AIR VOLUME LEARNING	
Refer to "Idle Air Volume Learning", EC-55 Which is the result CMPLT or INCMP?		
CMPLT or INCMP		
CMPLT	▶	GO TO 19.
INCMP	▶	1. Follow the instruction of "Idle Air Volume Learning". 2. GO TO 14.


19	CHECK TARGET IDLE SPEED AGAIN	
<p>Ⓜ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Select "ENG SPEED" in "DATA MONITOR" mode with CONSULT-II. 3. Check idle speed. M/T: 700±50 rpm A/T: 800±50 rpm (in "P" or "N" position) 		
<p>ⓧ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Check idle speed. M/T: 700±50 rpm A/T: 800±50 rpm (in "P" or "N" position) <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 21.
NG	▶	GO TO 20.

20	CHECK ECM FUNCTION	
<ol style="list-style-type: none"> 1. Substitute another known-good ECM to check ECM function. (ECM may be the cause of a problem, but this is rarely the case.) 2. Perform initialization of NATS system and registration of NATS ignition key IDs. Refer to "NATS (Nissan Anti-Theft system)", EC-72. 		
	▶	GO TO 14.

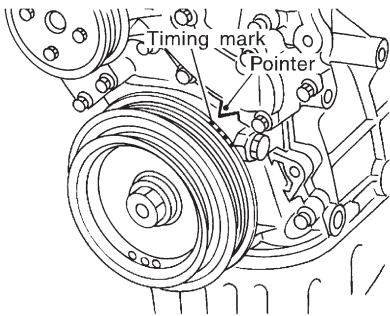21	CHECK IGNITION TIMING	
<ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Perform initialization of NATS system and registration of NATS ignition key IDs. Refer to "NATS (Nissan Anti-Theft System)", EC-72. 		
		
<p>Ignition timing: M/T 8°±5° BTDC A/T 10°±5° BTDC (in "P" or "N" position)</p>		
SEM872F		
OK	▶	GO TO 29.
NG	▶	GO TO 22.

22	CHECK TIMING CHAIN INSTALLATION	
Check timing chain installation. Refer to EM section.		
OK or NG		
OK	▶	GO TO 20.
NG	▶	<ol style="list-style-type: none"> 1. Repair the timing chain installation. 2. GO TO 14.

Basic Inspection (Cont'd)

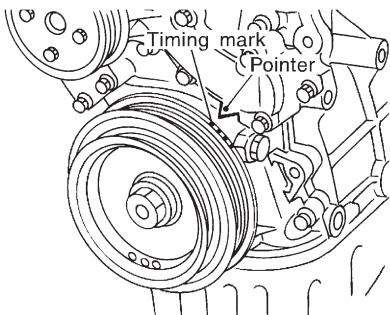23	CHECK IGNITION TIMING	
<p>1. Start engine and let it idle. 2. Check ignition timing at idle using a timing light.</p> <div style="text-align: center;">  </div> <p style="text-align: right; font-size: small;">SEM872F</p>		
<p>Ignition timing: M/T 8°±5° BTDC A/T 10°±5° BTDC (in "P" or "N" position)</p>		
OK	▶	GO TO 29.
NG	▶	GO TO 24.

24	PERFORM IDLE AIR VOLUME LEARNING	
<p>Refer to "Idle Air Volume Learning", EC-55. Which is the result CMPLT or INCMP?</p> <p style="text-align: center;">CMPLT or INCMP</p>		
CMPLT	▶	GO TO 25.
INCMP	▶	1. Follow the construction of "Idle Air Volume Learning". 2. GO TO 24.

25	CHECK TARGET IDLE SPEED AGAIN	
<p>Ⓟ With CONSULT-II</p> <p>1. Start engine and warm it up to normal operating temperature. 2. Select "ENG SPEED" in "DATA MONITOR" mode with CONSULT-II. 3. Check idle speed. M/T: 700±50 rpm A/T: 800±50 rpm (in "P" or "N" position)</p>		
<p>ⓧ Without CONSULT-II</p> <p>1. Start engine and warm it up to normal operating temperature. 2. Check idle speed. M/T: 700±50 rpm A/T: 800±50 rpm (in "P" or "N" position)</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 27.
NG	▶	GO TO 26.

26	CHECK ECM FUNCTION	
<p>1. Substitute another known-good ECM to check ECM function. (ECM may be the cause of a problem, but this is rarely the case). 2. Perform initialization of NATS system and registration of NATS ignition key IDs. Refer to "NATS (Nissan Anti-Theft System)", EC-72.</p>		
	▶	GO TO 24.

TROUBLE DIAGNOSIS — BASIC INSPECTION

QG*Basic Inspection (Cont'd)*

27	CHECK IGNITION TIMING AGAIN
Check ignition timing again. Refer to Test No. 23.	
OK	▶ GO TO 29.
NG	▶ GO TO 28.

28	CHECK TIMING CHAIN INSTALLATION
Check timing chain installation. Refer to EM section.	
OK or NG	
OK	▶ GO TO 26.
NG	▶ 1. Repair the timing chain installation. 2. GO TO 24.

29	ERASE UNNECESSARY DTC
After this inspection, unnecessary DTC No. might be displayed. Erase the stored memory in ECM. Refer to "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION", EC-68.	
	▶ INSPECTION END

DTC Inspection Priority Chart

NJEC0039

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	Detected items (DTC)
1	<ul style="list-style-type: none"> ● P0100 Mass air flow sensor ● P0110 Intake air temperature sensor ● P0115 Engine coolant temperature sensor ● P0120 Throttle position sensor ● P0325 Knock sensor ● P0340 Camshaft position sensor (PHASE) circuit ● P0403 EGR volume control valve*1 ● P0500 Vehicle speed sensor ● P0605 ECM ● P0335 Crankshaft position sensor (POS) ● P1605 A/T diagnostic communication line ● P1706 Park/Neutral position switch
2	<ul style="list-style-type: none"> ● P0130 - P0134 Heated oxygen sensor 1 (front) ● P0135 Heated oxygen sensor 1 heater (front) ● P0137 - P0140 Heated oxygen sensor 2 (rear) ● P0141 Heated oxygen sensor 2 heater (rear) ● P0443 EVAP canister purge volume control solenoid valve ● P0510 Closed throttle position switch*1 ● P0705 - P0725, P0740 - P1760 A/T related sensors, solenoid valves and switches ● P1217 Overheat (Cooling system) ● P1401 EGR temperature sensor*1
3	<ul style="list-style-type: none"> ● P0171, P0172 Fuel injection system function ● P0300 - P0304 Misfire ● P0400, P1402 EGR function*1 ● P0420 Three way catalyst function ● P0505 IACV-AAC valve ● P0731 - P0734, P0744 A/T function ● P1111 Intake valve timing control

*1: If so equipped

Fail-safe Chart

=NJE0040

The ECM enters fail-safe mode if any of the following malfunctions is detected due to the open or short circuit. When the ECM enters the fail-safe mode, the MI illuminates.

DTC No.		Detected items	Engine operating condition in fail-safe mode	
CONSULT-II GST	ECM*1			
P0100	0100	Mass air flow sensor circuit	Engine speed will not rise more than 2,400 rpm due to the fuel cut.	
P0115	0115	Engine coolant temperature sensor circuit	Engine coolant temperature will be determined by ECM based on the time after turning ignition switch "ON" or "START". CONSULT-II displays the engine coolant temperature decided by ECM. The radiator fan operates.	
			Condition	Engine coolant temperature decided (CONSULT-II display)
			Just as ignition switch is turned ON or Start	40°C (104°F)
			More than approx. 4 minutes after ignition ON or Start	80°C (176°F)
			Except as shown above	40 - 80°C (104 - 176°F) (Depends on the time)
P0120	0120	Throttle position sensor circuit	Throttle position will be determined based on the injected fuel amount and the engine speed. Therefore, acceleration will be poor.	
			Condition	Driving condition
			When engine is idling	Normal
			When accelerating	Poor acceleration
Unable to access ECM	Unable to access Diagnostic Test Mode II	ECM	<p>ECM fail-safe activating condition The computing function of the ECM was judged to be malfunctioning. When the fail-safe system activates (i.e., if the ECM detects a malfunction condition in the CPU of ECM), the MI on the instrument panel lights to warn the driver. However it is not possible to access ECM and DTC cannot be confirmed.</p> <p>Engine control with fail-safe When ECM fail-safe is operating, fuel injection, ignition timing, fuel pump operation and IACV-AAC valve operation are controlled under certain limitations.</p>	
			ECM fail-safe operation	
			Engine speed	Engine speed will not rise more than 3,000 rpm
			Fuel injection	Simultaneous multiport fuel injection system
			Ignition timing	Ignition timing is fixed at the preset value
			Fuel pump	Fuel pump relay is "ON" when engine is running and "OFF" when engine stalls
			IACV-AAC valve	Full open
			Cooling fans	Cooling fan relay "ON" (High speed condition) when engine is running, and "OFF" when engine stalls.
			Replace ECM, if ECM fail-safe condition is confirmed.	

*: In Diagnostic Test Mode II (Self-diagnostic results) (If so equipped)

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

QG

Symptom Matrix Chart

Symptom Matrix Chart SYSTEM — ENGINE CONTROL SYSTEM

NJEC0041

NJEC0041S01

		SYMPTOM												Reference page	
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION		BATTERY DEAD (UNDER CHARGE)
Warranty symptom code		AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	HA	
Fuel	Fuel pump circuit	1	1	2	3	2		2	2			3		2	EC-464
	Fuel pressure regulator system	3	3	4	4	4	4	4	4	4		4			EC-39
	Injector circuit	1	1	2	3	2		2	2			2			EC-447
	Evaporative emission system	3	3	4	4	4	4	4	4	4		4			EC-33
Air	Positive crankcase ventilation system	3	3	4	4	4	4	4	4	4		4	1		EC-37
	Incorrect idle speed adjustment	3	3				1	1	1	1		1			EC-41
	IACV-AAC valve circuit	1	1	2	3	3	2	2	2	2		2		2	EC-313
Ignition	Incorrect ignition timing adjustment	3	3	1	1	1		1	1			1			EC-41
	Ignition circuit	1	1	2	2	2		2	2			2			EC-451
EGR	EGR volume control valve circuit		2	2	3	3						3			EC-293
	EGR system	2	1	2	3	3	3	2	2	3		3			EC-285, 293, 353
Main power supply and ground circuit		2	2	3	3	3		3	3		2	3		2	EC-145
Air conditioner circuit		2	2	3	3	3	3	3	3	3		3		2	HA section

1 - 6: The numbers refer to the order of inspection.
(continued on next page)

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

QG

Symptom Matrix Chart (Cont'd)

	SYMPTOM													Reference page
	HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)	
Warranty symptom code	AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	HA	
Crankshaft position sensor (POS) circuit	2	2												EC-272
Camshaft position sensor (PHASE) circuit	3	2									3			EC-278
Mass air flow sensor circuit	1	1	2	2	2		2	2			2			EC-152
Heated oxygen sensor 1 (front) circuit		1	2	3	2		2	2			2			EC-176, 183
Engine coolant temperature sensor circuit	1	1	2	3	2	3	2	2	3		2			EC-163, 165
Throttle position sensor circuit		1	2		2	2	2	2	2		2			EC-168
Incorrect throttle position sensor adjustment		3	1		1	1	1	1	1		1			EC-98
Vehicle speed sensor circuit		2	3		3						3			EC-309
Knock sensor circuit			2								3			EC-268
ECM	2	2	3	3	3	3	3	3	3	3	3			EC-327, 123
Start signal circuit	2													EC-461
PNP switch circuit			3		3		3	3			3			EC-364
Power steering oil pressure switch circuit		2					3	3						EC-471
Electrical load signal circuit							3	3						EC-480

1 - 6: The numbers refer to the order of inspection.
(continued on next page)

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

QG

Symptom Matrix Chart (Cont'd)

SYSTEM — ENGINE MECHANICAL & OTHER

NJEC0041S03

		SYMPTOM												Reference page	
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATSWATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION		BATTERY DEAD (UNDER CHARGE)
Warranty symptom code		AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	HA	
Fuel	Fuel tank	5	5												FE section
	Fuel piping			5	5	5		5	5			5			
	Vapor lock														
	Valve deposit														
	Poor fuel (Heavy weight gasoline, Low octane)	5		5	5	5		5	5			5			
Air	Air duct		5	5											FE section
	Air cleaner														
	Air leakage from air duct (Mass air flow sensor — throttle body)				5	5		5	5			5			
	Throttle body, Throttle wire	5				5		5		5					
	Air leakage from intake manifold/Collector/Gasket														
Cranking	Battery	1	1	1		1		1	1			1		1	EL section
	Alternator circuit														
	Starter circuit	3													
	Flywheel/drive plate	6													

1 - 6: The numbers refer to the order of inspection.
(continued on next page)

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

QG

Symptom Matrix Chart (Cont'd)

		SYMPTOM												Reference page	
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION		BATTERY DEAD (UNDER CHARGE)
Warranty symptom code		AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	HA	
Engine	Cylinder head	5	5	5	5	5		5	5			5			EM section
	Cylinder head gasket										4	5	3		
	Cylinder block												4		
	Piston														
	Piston ring	6	6	6	6	6		6	6			6			
	Connecting rod														
	Bearing														
	Crankshaft														
Valve mechanism	Timing chain														EM section
	Camshaft	5	5	5	5	5		5	5			5			
	Intake valve												3		
	Exhaust valve														
Exhaust	Exhaust manifold/Tube/Muffler/Gasket	5	5	5	5	5		5	5			5		FE section	
	Three way catalyst														
Lubrication	Oil pan/Oil strainer/Oil pump/Oil filter/Oil gallery	5	5	5	5	5		5	5			5		MA, EM and LC sections	
	Oil level (Low)/Filthy oil														
Cooling	Radiator/Hose/Radiator filler cap													LC section	
	Thermostat									5					
	Water pump	5	5	5	5	5		5	5		4	5			
	Water gallery														
	Cooling fan										5			EC-334	
	Coolant level (low)/Contaminated coolant													MA section	

1 - 6: The numbers refer to the order of inspection.

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

QG

CONSULT-II Reference Value in Data Monitor Mode

CONSULT-II Reference Value in Data Monitor Mode

NJE0042

Remarks:

- Specification data are reference values.
 - Specification data are output/input values which are detected or supplied by the ECM at the connector.
 - * Specification data may not be directly related to their components signals/values/operations.
- (i.e., Adjust ignition timing with a timing light before monitoring IGN TIMING. Specification data might be displayed even when ignition timing is not adjusted to specification. This IGN TIMING monitors the data calculated by the ECM according to the input signals from the crankshaft position sensor and other ignition timing related sensors.)
- If the real-time diagnosis results are NG, and the on board diagnostic system results are OK, when diagnosing the mass air flow sensor, first check to see if the fuel pump control circuit is normal.

MONITOR ITEM	CONDITION		SPECIFICATION
ENG SPEED	<ul style="list-style-type: none"> ● Tachometer: Connect ● Run engine and compare tachometer indication with the CONSULT-II value. 		Almost the same speed as the CONSULT-II value.
MAS A/F SE-B1	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: OFF ● Shift lever: "N" ● No-load 	Idle	1.0 - 1.7V
		2,500 rpm	1.5 - 2.1V
B/FUEL SCHDL	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: OFF ● Shift lever: "N" ● No-load 	Idle	1.5 - 3.0 msec
		2,000 rpm	1.2 - 3.0 msec
A/F ALPHA-B1	<ul style="list-style-type: none"> ● Engine: After warming up 	Maintaining engine speed at 2,000 rpm	75 - 125%
COOLAN TEMP/S	<ul style="list-style-type: none"> ● Engine: After warming up 		More than 70°C (158°F)
HO2S1 (B1)	<ul style="list-style-type: none"> ● Engine: After warming up 	Maintaining engine speed at 2,000 rpm	0 - 0.3V ↔ 0.6 - 1.0V
HO2S1 MNTR (B1)			LEAN ↔ RICH Changes more than 5 times during 10 seconds.
HO2S2 (B1)	<ul style="list-style-type: none"> ● Engine: After warming up 	Revving engine from idle to 3,000 rpm quickly	0 - 0.3V ↔ 0.6 - 1.0V
HO2S2 MNTR (B1)			LEAN ↔ RICH
VHCL SPEED SE	<ul style="list-style-type: none"> ● Turn drive wheels and compare speedometer indication with the CONSULT-II value 		Almost the same speed as the CONSULT-II value
BATTERY VOLT	<ul style="list-style-type: none"> ● Ignition switch: ON (Engine stopped) 		11 - 14V
THRTL POS SEN	<ul style="list-style-type: none"> ● Engine: Idle 	Throttle valve fully closed	0.15 - 0.85V
	<ul style="list-style-type: none"> ● Ignition switch: ON (Engine stopped) 	Throttle valve fully opened	3.5 - 4.7V
EGR TEMP SEN*	<ul style="list-style-type: none"> ● Engine: After warming up 		Less than 4.5V
START SIGNAL	<ul style="list-style-type: none"> ● Ignition switch: ON → START → ON 		OFF → ON → OFF
CLSD THL POS CLSD THL/P SW*	<ul style="list-style-type: none"> ● Engine: Idle 	Throttle valve: Idle position	ON
	<ul style="list-style-type: none"> ● Ignition switch: ON (Engine stopped) 	Throttle valve: Slightly open	OFF
AIR COND SIG	<ul style="list-style-type: none"> ● Engine: After warming up, idle the engine 	A/C switch "OFF"	OFF
		A/C switch "ON" (Compressor operates)	ON
P/N POSI SW	<ul style="list-style-type: none"> ● Ignition switch: ON 	Shift lever "P" or "N"	ON
		Except above	OFF

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

QG

CONSULT-II Reference Value in Data Monitor Mode (Cont'd)

MONITOR ITEM	CONDITION	SPECIFICATION
PW/ST SIGNAL	● Engine: After warming up, idle the engine	Steering wheel in neutral position (forward direction) OFF
		The steering wheel is turned ON
LOAD SIGNAL	● Engine: running	Rear window defogger or headlamp "ON" ON
		Except the above OFF
IGNITION SW	● Ignition switch: ON → OFF	ON → OFF
HEATER FAN SW	● Heater fan switch is "ON"	ON
	● Heater fan switch is "OFF"	OFF
INJ PULSE-B1	● Engine: After warming up ● Air conditioner switch: OFF ● Shift lever: "N" ● No-load	Idle 2.0 - 3.5 msec
		2,000 rpm 1.5 - 3.5 msec
IGN TIMING	● Engine: After warming up ● Air conditioner switch: OFF ● Shift lever: "N" ● No-load	Idle M/T: 8°±5° BTDC A/T: 10°±5° BTDC
		2,000 rpm Approx. 30° BTDC
CAL/LD VALUE	● Engine: After warming up ● Air conditioner switch: OFF ● Shift lever: "N" ● No-load	Idle Not used
		2,500 rpm Not used
ABSOL TH-P/S	● Engine: Idle	Throttle valve fully closed 0.0°
	● Ignition switch: ON (Engine stopped)	Throttle valve fully opened Approx. 80°
MASS AIRFLOW	● Engine: After warming up ● Air conditioner switch: OFF ● Shift lever: N ● No-load	Idle 1.0 - 4.0 g-m/s
		2,500 rpm 5.0 - 10.0 g-m/s
IACV-AAC/V	● Engine: After warming up ● Air conditioner switch: OFF ● Shift lever: "N" ● No-load	Idle 5 - 25 steps
		2,000 rpm —
PURG VOL C/V	● Engine: After warming up ● No-load	Idle 0%
		Revving engine —
EGR VOL CON/V*	● Engine: After warming up ● Shift lever: "N" ● No-load	Idle 0 step
		Revving engine up to 3,000 rpm quickly 1 - 10 steps
INT/V SOL-B1	● Engine: After warming up ● Lift up drive wheels	Idle OFF
		Suitable gear position except "P" or "N" and revving engine ON (Momentarily)
AIR COND RLY	● Air conditioner switch: OFF → ON	OFF → ON
FUEL PUMP RLY	● Ignition switch is turned to ON (Operates for 1 second) ● Engine running and cranking ● When engine is stopped (stops in 1.5 seconds)	ON
	● Except as shown above	OFF

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

QG

CONSULT-II Reference Value in Data Monitor Mode (Cont'd)

MONITOR ITEM	CONDITION	SPECIFICATION	
COOLING FAN	<ul style="list-style-type: none"> ● After warming up engine, idle the engine. ● Air conditioner switch: OFF 	Engine coolant temperature is 99°C (210°F) or less OFF	
		Engine coolant temperature is 100°C (212°F) or more ON	
HO2S1 HTR (B1)	● Engine speed: Below 3,200 rpm	ON	
	● Engine speed: Above 3,200 rpm	OFF	
HO2S2 HTR (B1)	● Engine speed	Below 3,600 rpm [After driving for 2 minutes at a speed of 70 km/h (43 MPH) or more]	ON
		Above 3,600 rpm	OFF
	● Ignition switch ON (Engine stopped)	OFF	
TRVL AFTER MI	● Ignition switch: ON	Vehicle has traveled after MI has turned ON. 0 - 65,535 km (0 - 40,723 mile)	

*: If so equipped

Major Sensor Reference Graph in Data Monitor Mode

NJEC0043


The following are the major sensor reference graphs in "DATA MONITOR" mode.

THRTL POS SEN, ABSOL TH-P/S, CLSD THL/P SW

NJEC0043S01

Below is the data for "THRTL POS SEN", "ABSOL TH-P/S" and "CLSD THL/P SW" when depressing the accelerator pedal with the ignition switch "ON".

The signal of "THRTL POS SEN" and "ABSOL TH-P/S" should rise gradually without any intermittent drop or rise after "CLSD THL/P SW" is changed from "ON" to "OFF".

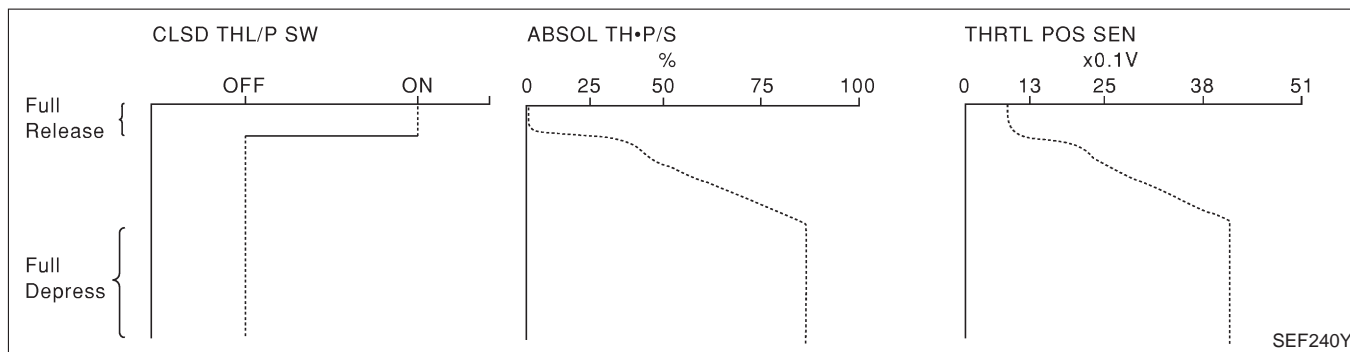

SEF240Y

ENG SPEED, MAS A/F SE-B1, THRTL POS SEN, HO2S2 (B1), HO2S1 (B1), INJ PULSE-B1

NJEC0043S02



Below is the data for "ENG SPEED", "MAS A/F SE-B1", "THRTL POS SEN", "HO2S2 (B1)", "HO2S1 (B1)" and "INJ PULSE-B1" when revving engine quickly up to 4,800 rpm under no load after warming up engine to normal operating temperature.

Each value is for reference, the exact value may vary.



TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

QG

Major Sensor Reference Graph in Data Monitor Mode (Cont'd)

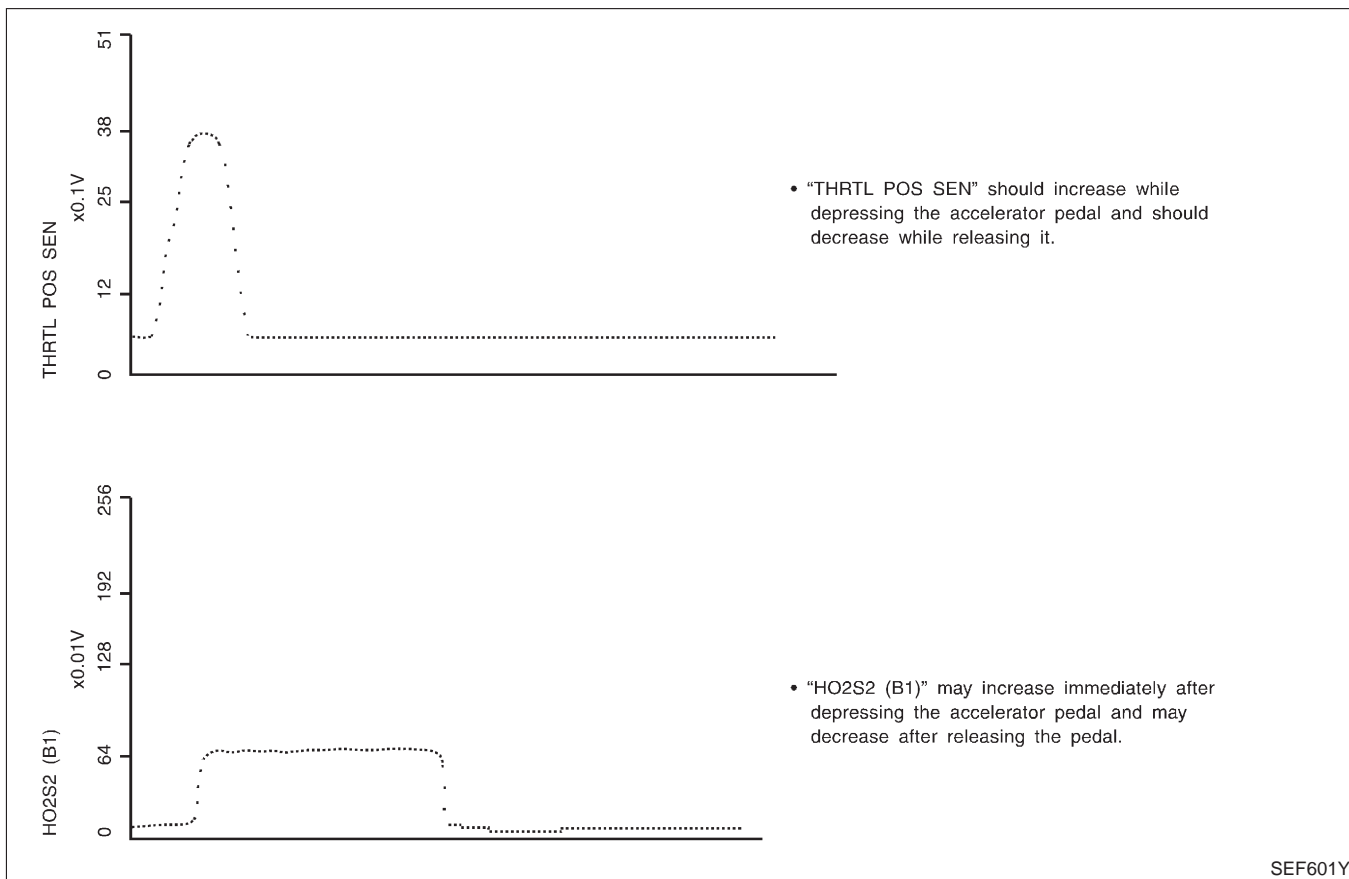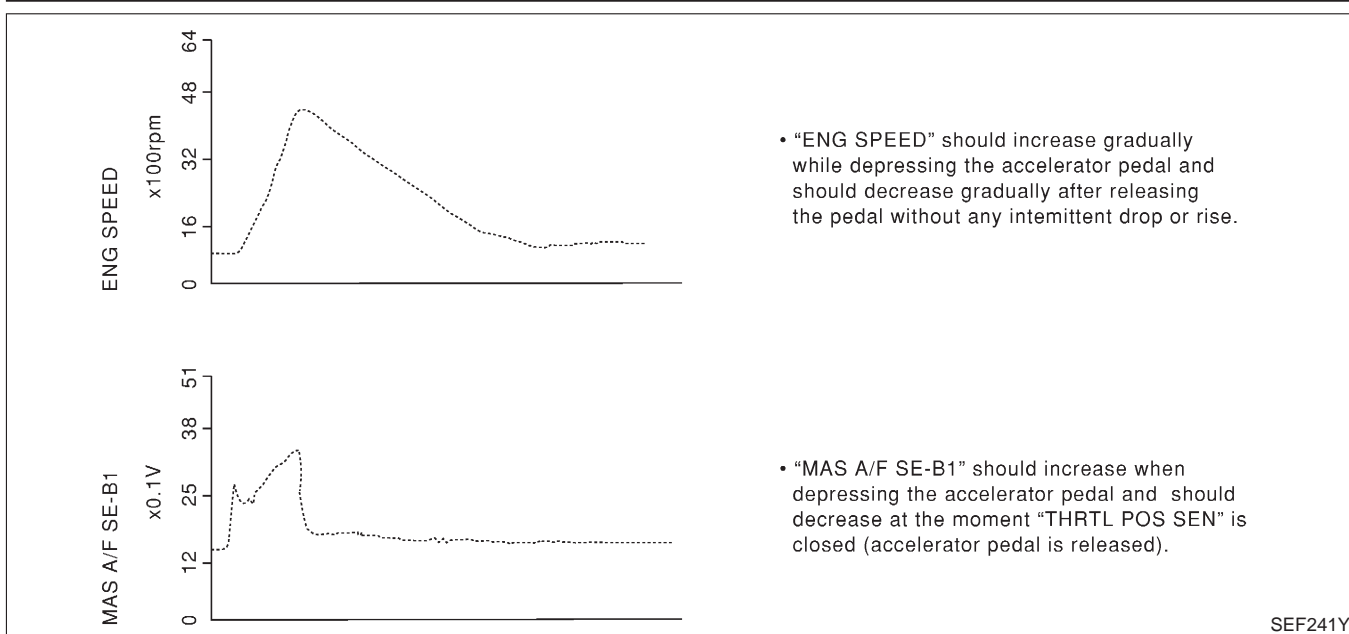

Major Sensor Reference Graph in Data Monitor Mode (Cont'd)

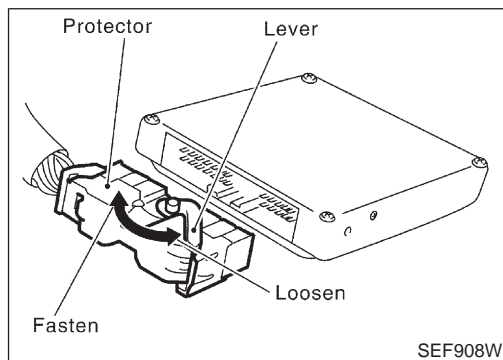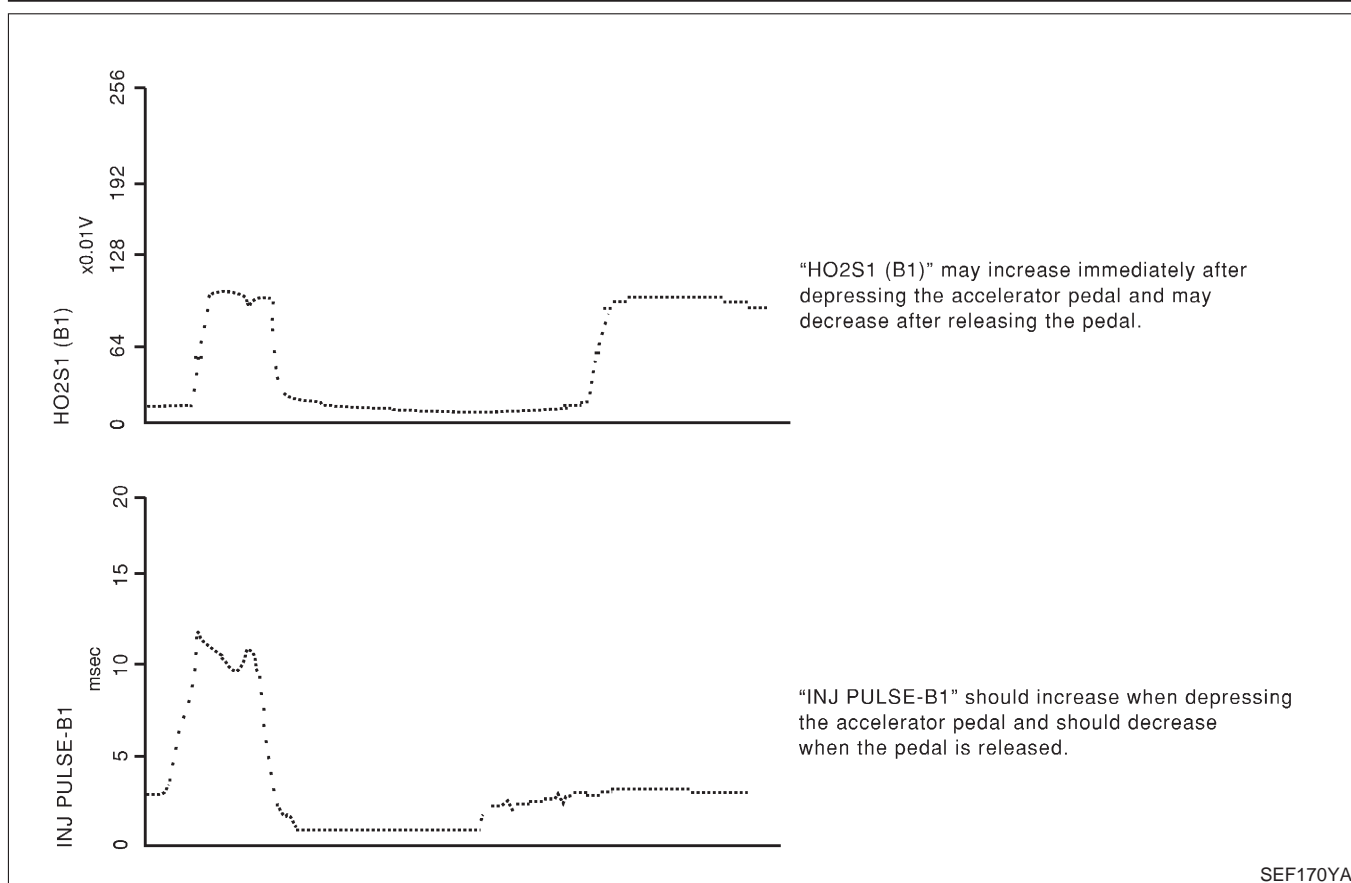

ECM Terminals and Reference Value PREPARATION

NJEC0044

NJEC0044S01


ECM is locating beside of blower unit.

1. Remove the ECM bracket fixing.
 2. Remove ECM harness protector.
- **When connecting or disconnecting ECM harness connector, use lever as shown. When connecting, fasten connector securely with lever moved until it stops.**

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

QG

ECM Terminals and Reference Value (Cont'd)

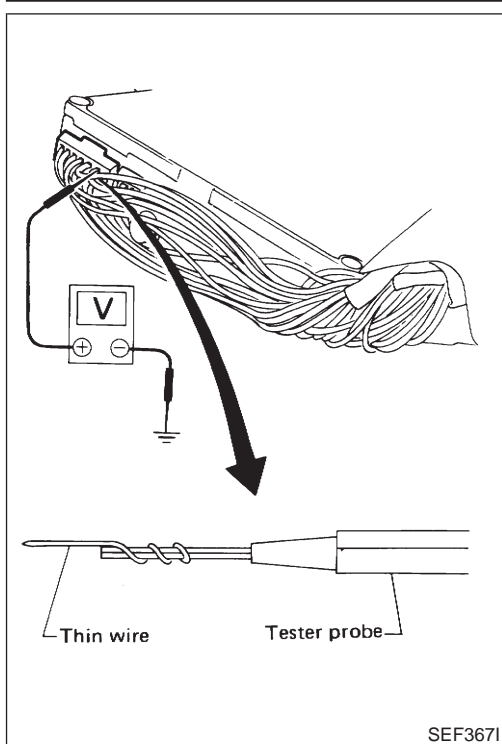


3. Perform all voltage measurements with the connector connected. Extend tester probe as shown to perform tests easily.
 - Open harness securing clip to make testing easier.
 - Use extreme care not to touch 2 pins at one time.
 - Data is for comparison and may not be exact.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

ECM HARNESS CONNECTOR TERMINAL LAYOUT

NJEC0044S02

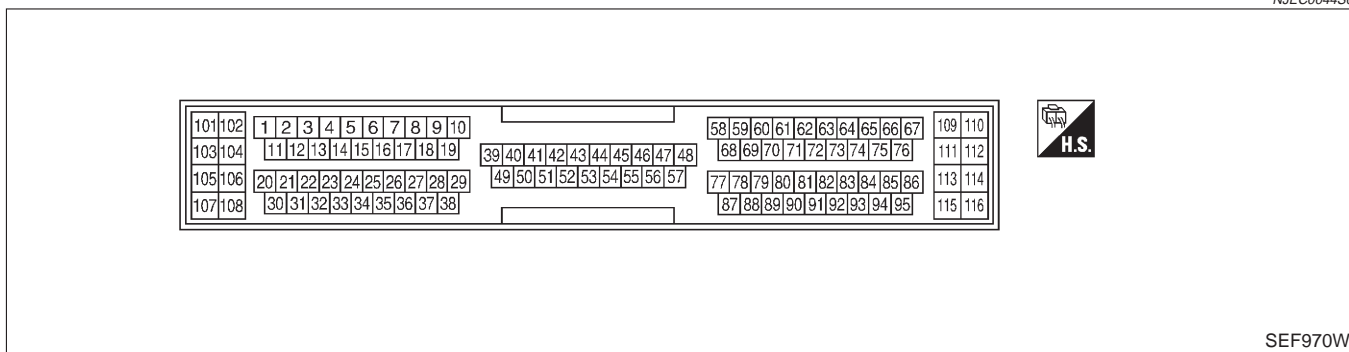

ECM INSPECTION TABLE

NJEC0044S03

Specification data are reference values and are measured between each terminal and ground.

CAUTION:


Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
1	Y/R	Intake valve timing con- trol solenoid valve	[Engine is running]	BATTERY VOLTAGE (11 - 14V)
			<ul style="list-style-type: none"> ● Idle speed 	
			[Engine is running]	Approximately 0V
			<ul style="list-style-type: none"> ● Lift up drive wheels and suitable gear position ● Rev engine from 2,000 to 3,000 rpm 	

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

QG





ECM Terminals and Reference Value (Cont'd)

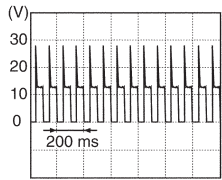TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
3	W/R	Heated oxygen sensor 2 heater (rear)	[Engine is running] <ul style="list-style-type: none"> ● Engine speed is below 3,600 rpm ● After driving for 2 minutes at a speed of 70 km/h (43 MPH) or more 	Approximately 0.7V
			[Ignition switch "ON"] <ul style="list-style-type: none"> ● Engine stopped ● Engine speed is above 3,600 rpm 	BATTERY VOLTAGE (11 - 14V)
4	R/B	Heated oxygen sensor 1 heater (front)	[Engine is running] <ul style="list-style-type: none"> ● Engine speed is below 3,200 rpm 	Approximately 0V
			[Engine is running] <ul style="list-style-type: none"> ● Engine speed is above 3,200 rpm 	BATTERY VOLTAGE (11 - 14V)
6 7 15 16	BR L/G P OR	IACV-AAC valve	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	0.1 - 14V
8* 9* 17* 18*	SB W/B R/Y BR/R	EGR volume control valve	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Rev engine from 2,000 to 4,000 rpm 	0 - 14V
10	Y/B	A/T signal No. 3	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	Approximately 0V
13	LG/R	Cooling fan relay	[Engine is running] <ul style="list-style-type: none"> ● Cooling fan is not operating 	BATTERY VOLTAGE (11 - 14V)
			[Engine is running] <ul style="list-style-type: none"> ● Cooling fan is operating 	Approximately 0V
14	GY/L	EVAP canister purge volume control valve (ON/OFF duty)	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Accelerator pedal depressed 	5 - 12V 
<small>SEF975W</small>				
19	BR/W	A/T signal No. 5	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	Approximately 8V
21	B/P	Fuel pump relay	[Ignition switch "ON"] <ul style="list-style-type: none"> ● For 1 second after turning ignition switch "ON" 	0 - 1V
			[Engine is running] <ul style="list-style-type: none"> ● More than 1 second after turning ignition switch "ON" 	BATTERY VOLTAGE (11 - 14V)
22	OR/L	Malfunction indicator	[Ignition switch "ON"]	0 - 1V
			[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	BATTERY VOLTAGE (11 - 14V)
23	L	Air conditioner relay	[Engine is running] <ul style="list-style-type: none"> ● Both A/C switch and blower switch are "ON" 	Approximately 0V
			[Engine is running] <ul style="list-style-type: none"> ● A/C switch is "OFF" 	BATTERY VOLTAGE (11 - 14V)

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

QG

ECM Terminals and Reference Value (Cont'd)

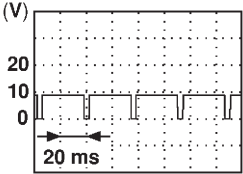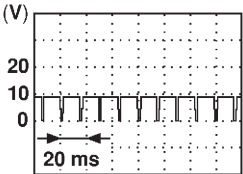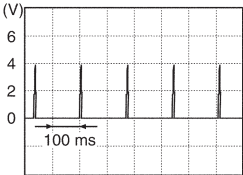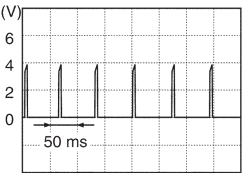TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
31	W/G	ECM relay (Self shut-off)	[Ignition switch "OFF"] <ul style="list-style-type: none"> ● For 9 seconds after turning ignition switch "OFF" 	0 - 1V
			[Ignition switch "OFF"] <ul style="list-style-type: none"> ● 9 seconds passed after turning ignition switch "OFF" 	BATTERY VOLTAGE (11 - 14V)
32	L/OR	Tachometer	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	7 - 8V  <small style="float: right;">SEF928X</small>
			[Engine is running] <ul style="list-style-type: none"> ● Engine speed is 2,000 rpm 	7 - 8V  <small style="float: right;">SEF929X</small>
35 36 37 38	L/W PU L/R GY/R	Ignition signal (No. 1) Ignition signal (No. 2) Ignition signal (No. 3) Ignition signal (No. 4)	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	0 - 0.2V  <small style="float: right;">SEF971W</small>
			[Engine is running] <ul style="list-style-type: none"> ● Engine speed is 2,000 rpm 	0.2 - 0.4V  <small style="float: right;">SEF972W</small>
40*	Y/PU	Throttle position switch (Closed position)	[Engine is running] <ul style="list-style-type: none"> ● Accelerator pedal released 	BATTERY VOLTAGE (11 - 14V)
			[Engine is running] <ul style="list-style-type: none"> ● Accelerator pedal depressed 	Approximately 0V
41	B/Y	Start signal	[Ignition switch "ON"]	Approximately 0V
			[Ignition switch "START"]	9 - 12V

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

QG




ECM Terminals and Reference Value (Cont'd)

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
42	G/OR	PNP switch	[Ignition switch "ON"] <ul style="list-style-type: none"> ● Gear position is "Neutral position" (M/T models) ● Gear position is "P" or "N" (A/T models) 	Approximately 0V
			[Ignition switch "ON"] <ul style="list-style-type: none"> ● Except the above gear position 	A/T models BATTERY VOLTAGE (11 - 14V) M/T models Approximately 5V
43	B/R	Ignition switch	[Ignition switch "OFF"]	0V
			[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)
44	L/R	Air conditioner switch	[Engine is running] <ul style="list-style-type: none"> ● Both air conditioner switch and blower switch are "ON" (Compressor operates) 	Approximately 0V
			[Engine is running] <ul style="list-style-type: none"> ● Air conditioner switch is "OFF" 	Approximately 5V
46	PU/W	Power steering oil pressure switch	[Engine is running] <ul style="list-style-type: none"> ● Steering wheel is fully turned 	Approximately 0V
			[Engine is running] <ul style="list-style-type: none"> ● Steering wheel is not turned 	Approximately 5V
48	B	ECM ground	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	Engine ground
50	L/B	Electrical load signal (Headlamp and Rear defogger)	[Engine is running] <ul style="list-style-type: none"> ● Headlamp switch or rear defogger switch is "ON" 	BATTERY VOLTAGE (11 - 14V)
			[Engine is running] <ul style="list-style-type: none"> ● Headlamp switch and rear defogger switch are "OFF" 	Approximately 0V
51	LG/B	Blower fan SW	[Ignition switch "ON"] <ul style="list-style-type: none"> ● Blower fan switch is "ON" 	Approximately 0V
			[Ignition switch "ON"] <ul style="list-style-type: none"> ● Blower fan switch is "OFF" 	Approximately 5V
54	Y/R	A/T signal No. 1	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	Approximately 0V
55	Y/G	A/T signal No. 2	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	Approximately 0V
56	G/Y	A/T signal No. 4	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	Approximately 0V
57	B	ECM ground	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	Engine ground
58	B	Sensors' ground	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	Approximately 0V

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

QG




ECM Terminals and Reference Value (Cont'd)

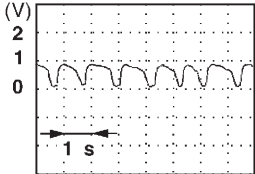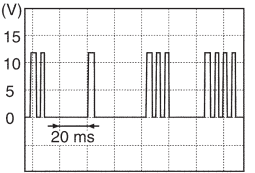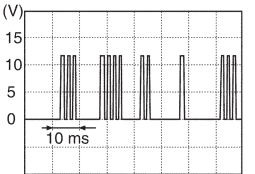TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
61	G	Mass air flow sensor	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	1.0 - 1.7V
			[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is 2,500 rpm 	1.5 - 2.1V
62	W	Heated oxygen sensor 1 (front)	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is 2,000 rpm 	0 - Approximately 0.7V  SEF008W
63	L	Heated oxygen sensor 2 (rear)	[Engine is running] <ul style="list-style-type: none"> ● After warming up to normal operating temperature and engine speed is 3,000 rpm 	0 - Approximately 1.0V
64	Y/B	Intake air temperature sensor	[Engine is running]	Approximately 0 - 4.8V Output voltage varies with intake air temperature
66 75	R R	Camshaft position sensor (PHASE)	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	2.0 - 3.0V  SEF977W
			[Engine is running] <ul style="list-style-type: none"> ● Engine speed is 2,000 rpm 	2.0 - 3.0V  SEF978W
67	W/L	Power supply for ECM (Back-up)	[Ignition switch "OFF"]	BATTERY VOLTAGE (11 - 14V)
70	BR/W	Engine coolant temperature sensor	[Engine is running]	Approximately 0 - 4.8V Output voltage varies with engine coolant temperature
71	GY	Throttle position sensor signal output	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Accelerator pedal fully released 	Approximately 0.4V
			[Ignition switch "ON"] <ul style="list-style-type: none"> ● Accelerator pedal fully depressed 	Approximately 4V

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

QG



ECM Terminals and Reference Value (Cont'd)

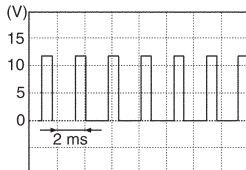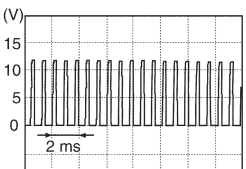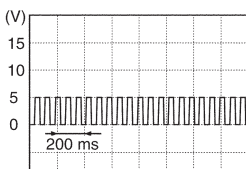TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
72*	P/B	EGR temperature sensor	[Engine is running] ● Warm-up condition ● Idle speed	Less than 4.5V
			[Engine is running] ● Warm-up condition ● EGR system is operating	0 - 1.0V
73	B	Mass air flow sensor ground	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0V
74	R/L	Refrigerant pressure sensor	[Engine is running] ● Air conditioner switch is "ON" (Compressor operates)	1.0 - 4.0V
			[Engine is running] ● Warm-up condition ● Idle speed ● Air conditioner switch is turned from "ON" to "OFF"	Voltage is gradually decreasing.
81	W	Knock sensor	[Engine is running] ● Idle speed	1.0 - 4.0V
85	R	Crankshaft position sensor (POS)	[Engine is running] ● Warm-up condition ● Idle speed	3.0 - 4.0V  SEF979W
			[Engine is running] ● Engine speed is 2,000 rpm	3.0 - 4.0V  SEF980W
86	PU/R	Vehicle speed sensor	[Engine is running] ● Lift up the vehicle ● Vehicle speed is 40 km/h (25 MPH)	2.5 - 3V  SEF976W
91	PU	A/T check signal	[Engine is running] ● Idle speed	0 - Approximately 5V
92	Y	Throttle position sensor	[Engine is running] ● Accelerator pedal released	0.15 - 0.85V
			[Ignition switch "ON"] ● Accelerator pedal fully depressed	3.5 - 4.7V

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

QG

ECM Terminals and Reference Value (Cont'd)

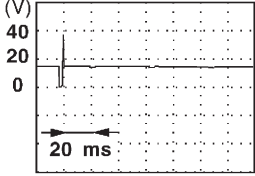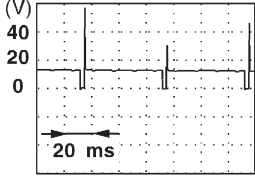TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
93	G/R	Data link connector	[Engine is running] <ul style="list-style-type: none"> ● Idle speed (CONSULT-II or GST is disconnected) 	Approximately 0V
101 103 105 107	R/B YB GB L/B	Injector No. 1 Injector No. 2 Injector No. 3 Injector No. 4	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	BATTERY VOLTAGE (11 - 14V)  <small>SEF011W</small>
106 108	B/Y	ECM ground	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	Engine ground
110 112	W W	Power supply for ECM	[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)  <small>SEF012W</small>
111	R	Sensors' power supply	[Ignition switch "ON"]	Approximately 5V
114	GY/R	Adjust switch	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	0V
115	LG	Data link connector	[Engine is running] <ul style="list-style-type: none"> ● Idle speed (CONSULT-II or GST is disconnected) 	0 - 10V

* If so equipped

Description

Description

The specification (SP) value indicates the tolerance of the value that is displayed in “DATA MONITOR (SPEC)” mode of CONSULT-II during normal operation of the Engine Control System. When the value in “DATA MONITOR (SPEC)” mode is within the SP value, the Engine Control System is confirmed OK. When the value in “DATA MONITOR (SPEC)” mode is NOT within the SP value, the Engine Control System may have one or more malfunctions. NJEC1265

The SP value is used to detect malfunctions that may affect the Engine Control System, but will not light the MIL.

The SP value will be displayed for the following three items:

- B/FUEL SCHDL (The fuel injection pulse width programmed into ECM prior to any learned on board correction)
- A/F ALPHA-B1 (The mean value of air-fuel ratio feedback correction factor per cycle)
- MAS A/F SE-B1 (The signal voltage of the mass air flow sensor)


Testing Condition

- Vehicle driven distance: More than 5,000 km (3,017 miles)
- Barometric pressure: 98.3 - 104.3 kPa (0.983 - 1.043 bar, 1.003 - 1.064 kg/cm², 14.25 - 15.12 psi)
- Atmospheric temperature: 20 - 30°C (68 - 86°F)
- Engine coolant temperature: 75 - 95°C (167 - 203°F)
- Transmission: Warmed-up*1
- Electrical load: Not applied*2
- Engine speed: Idle

NJEC1266

*1: For A/T or CVT models, after the engine is warmed up to normal operating temperature, drive vehicle until “FLUID TEMP SE” (A/T or CVT fluid temperature sensor signal) indicates less than 0.9V. For M/T models, drive vehicle for 5 minutes after the engine is warmed up to normal operating temperature.

*2: Rear window defogger switch, air conditioner switch, lighting switch are “OFF”. Cooling fans are not operating. Steering wheel is straight ahead.

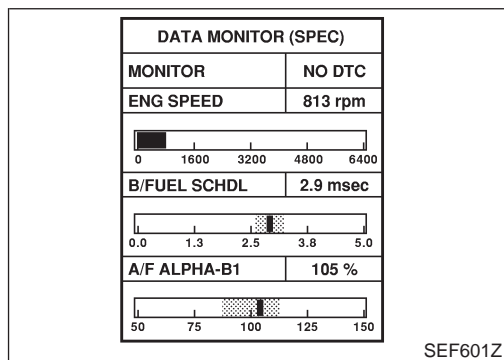

Inspection Procedure

NJEC1267


NOTE:

Perform “DATA MONITOR (SPEC)” mode in maximum scale display.

1. Perform “Basic Inspection”, EC-98.
2. Confirm that the testing conditions indicated above are met.
3. Select “B/FUEL SCHDL”, “A/F ALPHA-B1” and “MAS A/F SE-B1” in “DATA MONITOR (SPEC)” mode with CONSULT-II.
4. Make sure that monitor items are within the SP value.
5. If NG, go to “Diagnostic Procedure”, EC-141.

Diagnostic Procedure

NJE1268

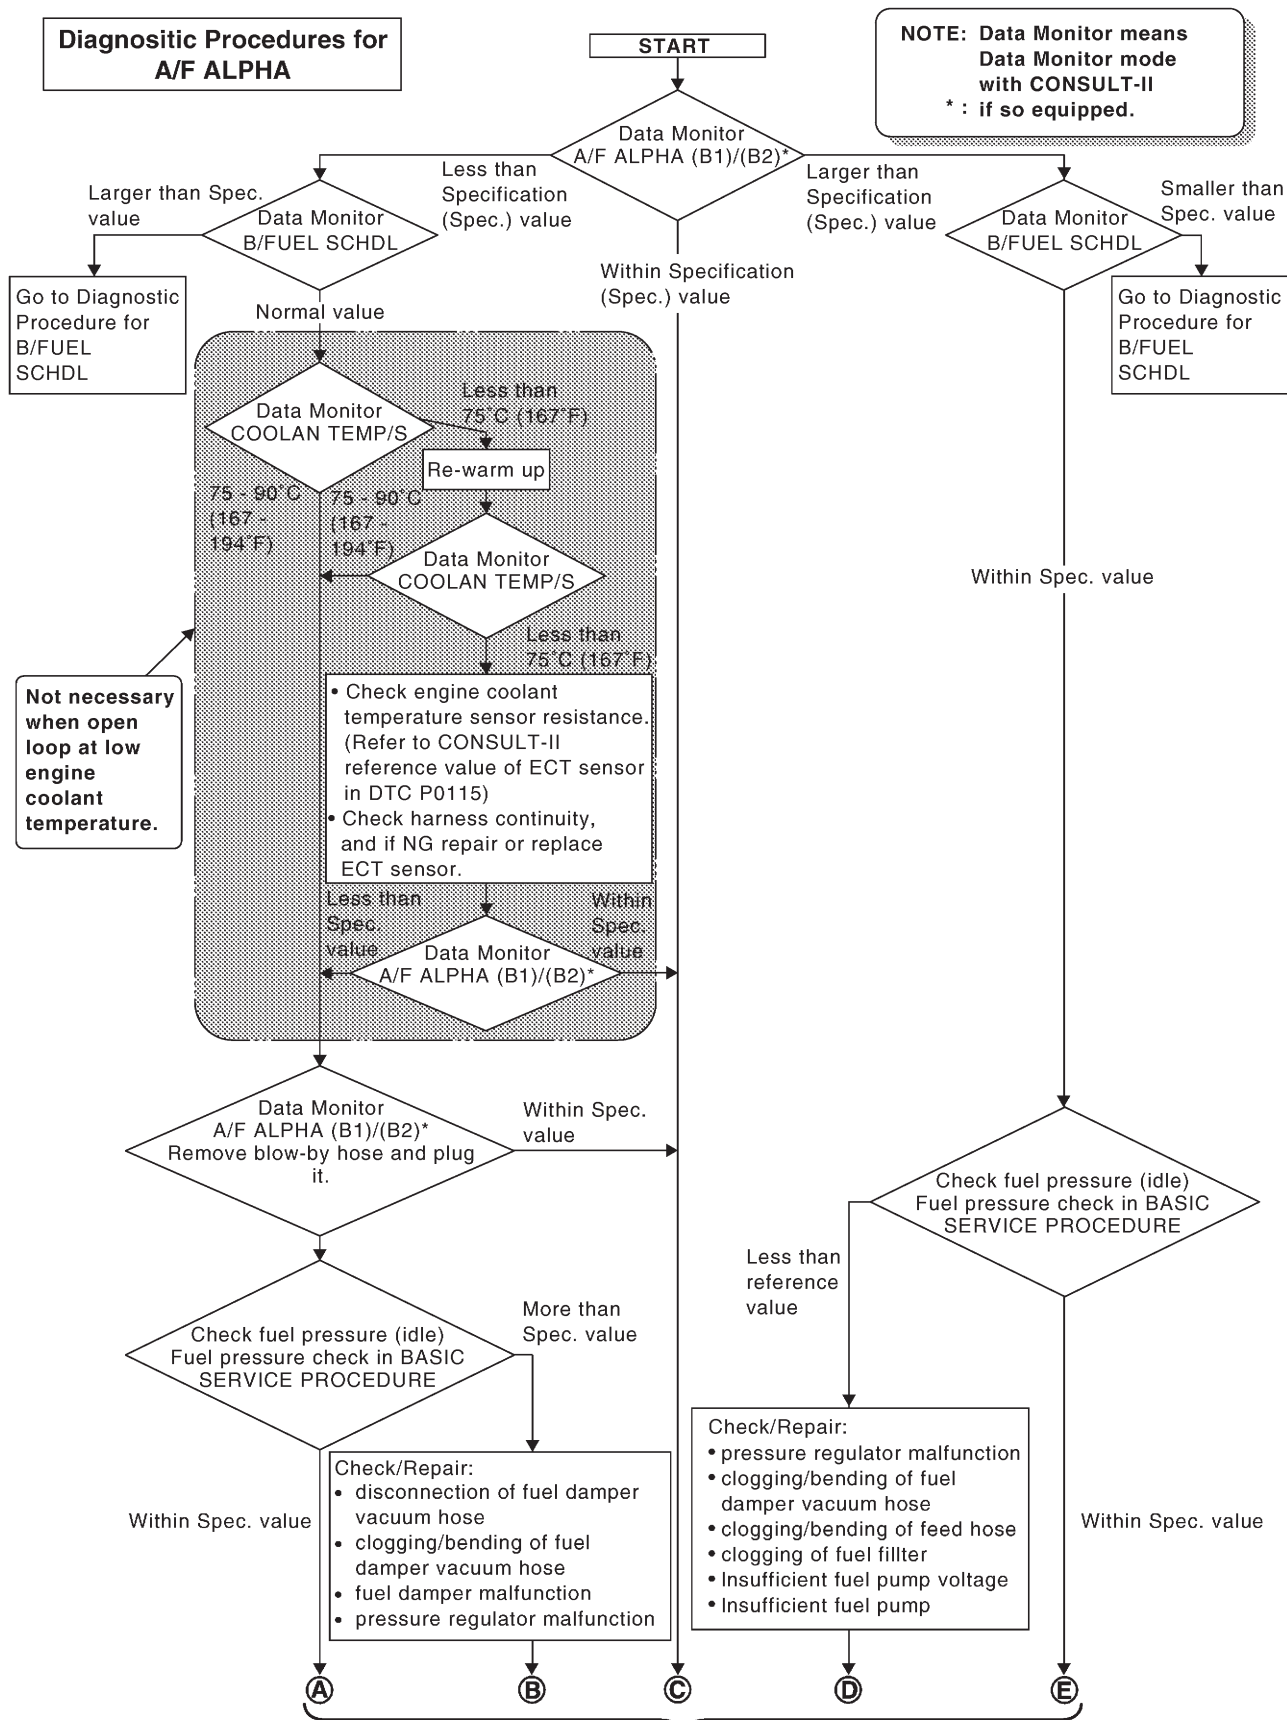

Not necessary when open loop at low engine coolant temperature.


(Go to next page.)

SEF613ZA


TROUBLE DIAGNOSIS — SPECIFICATION VALUE

QG

Diagnostic Procedure (Cont'd)

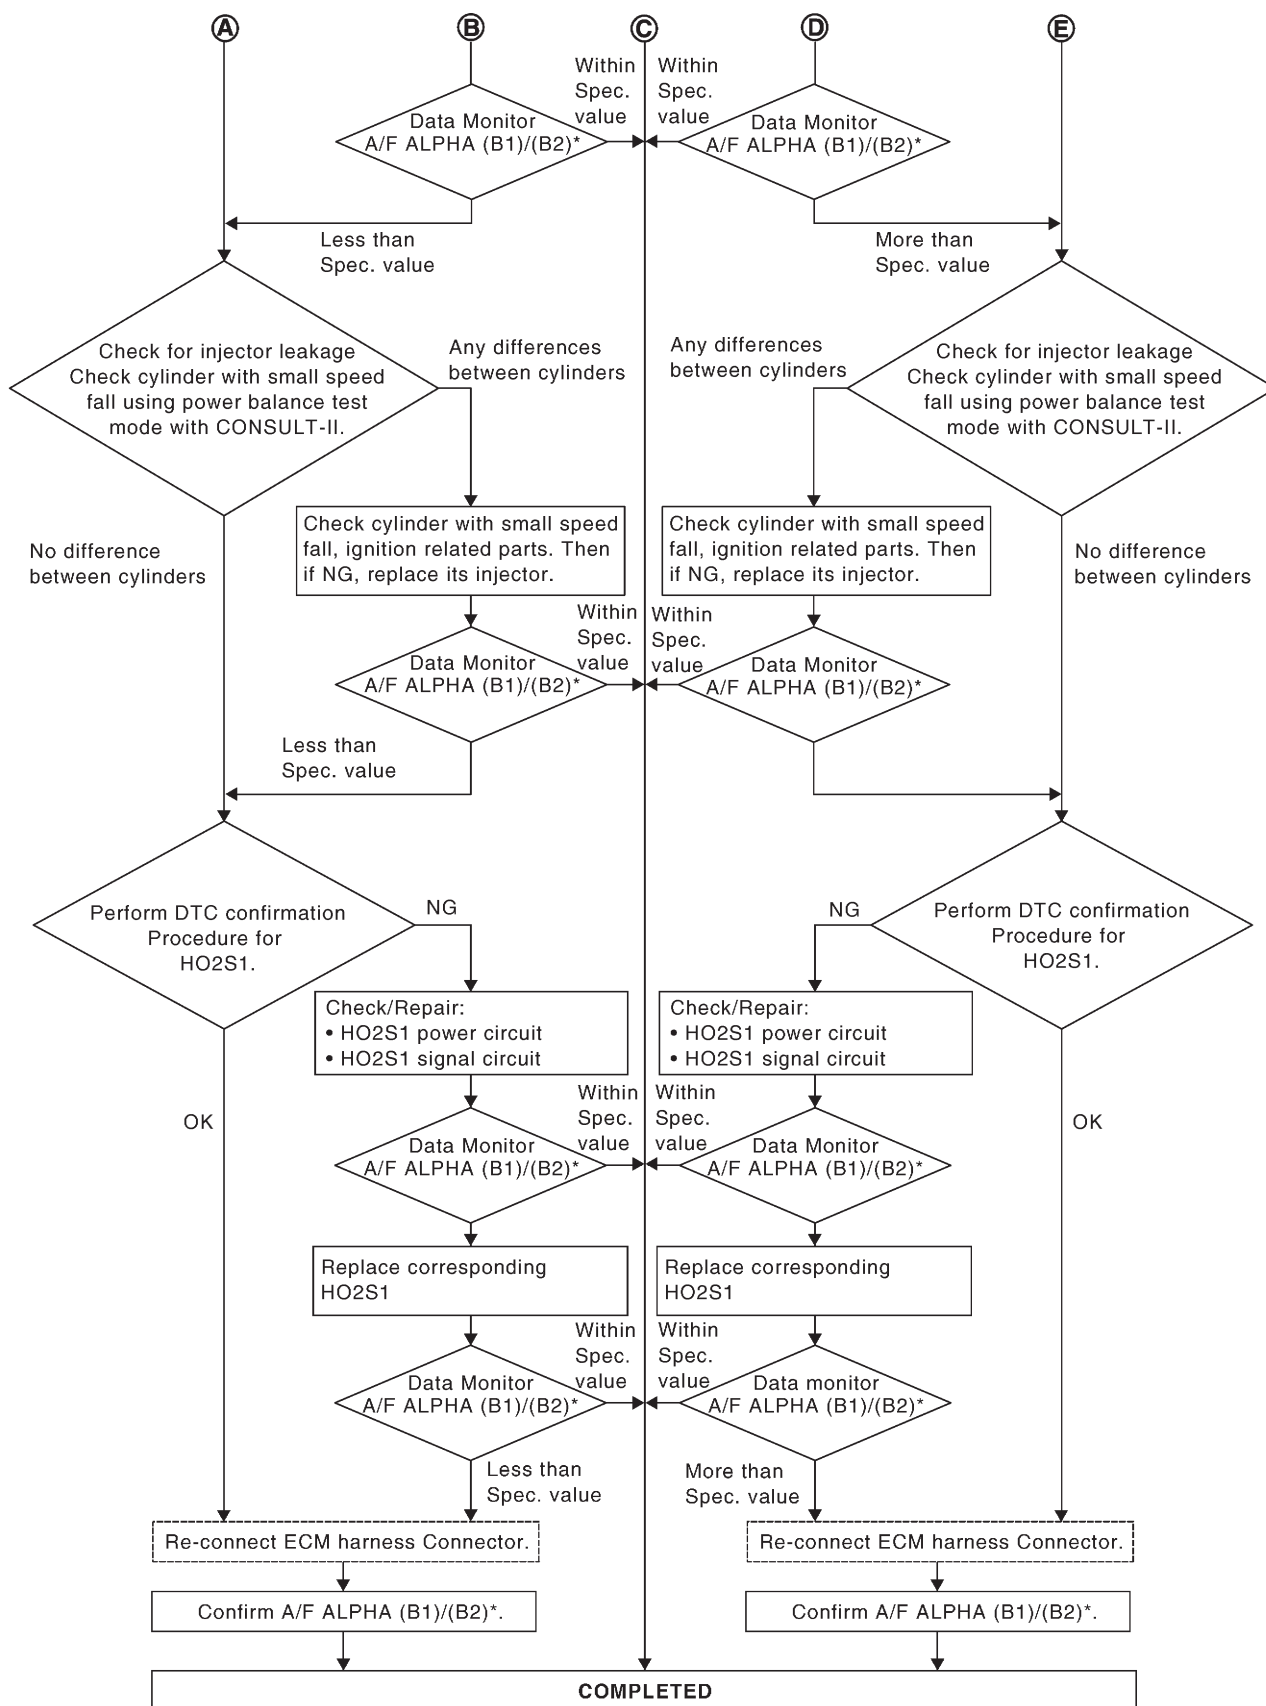

SEF768Z

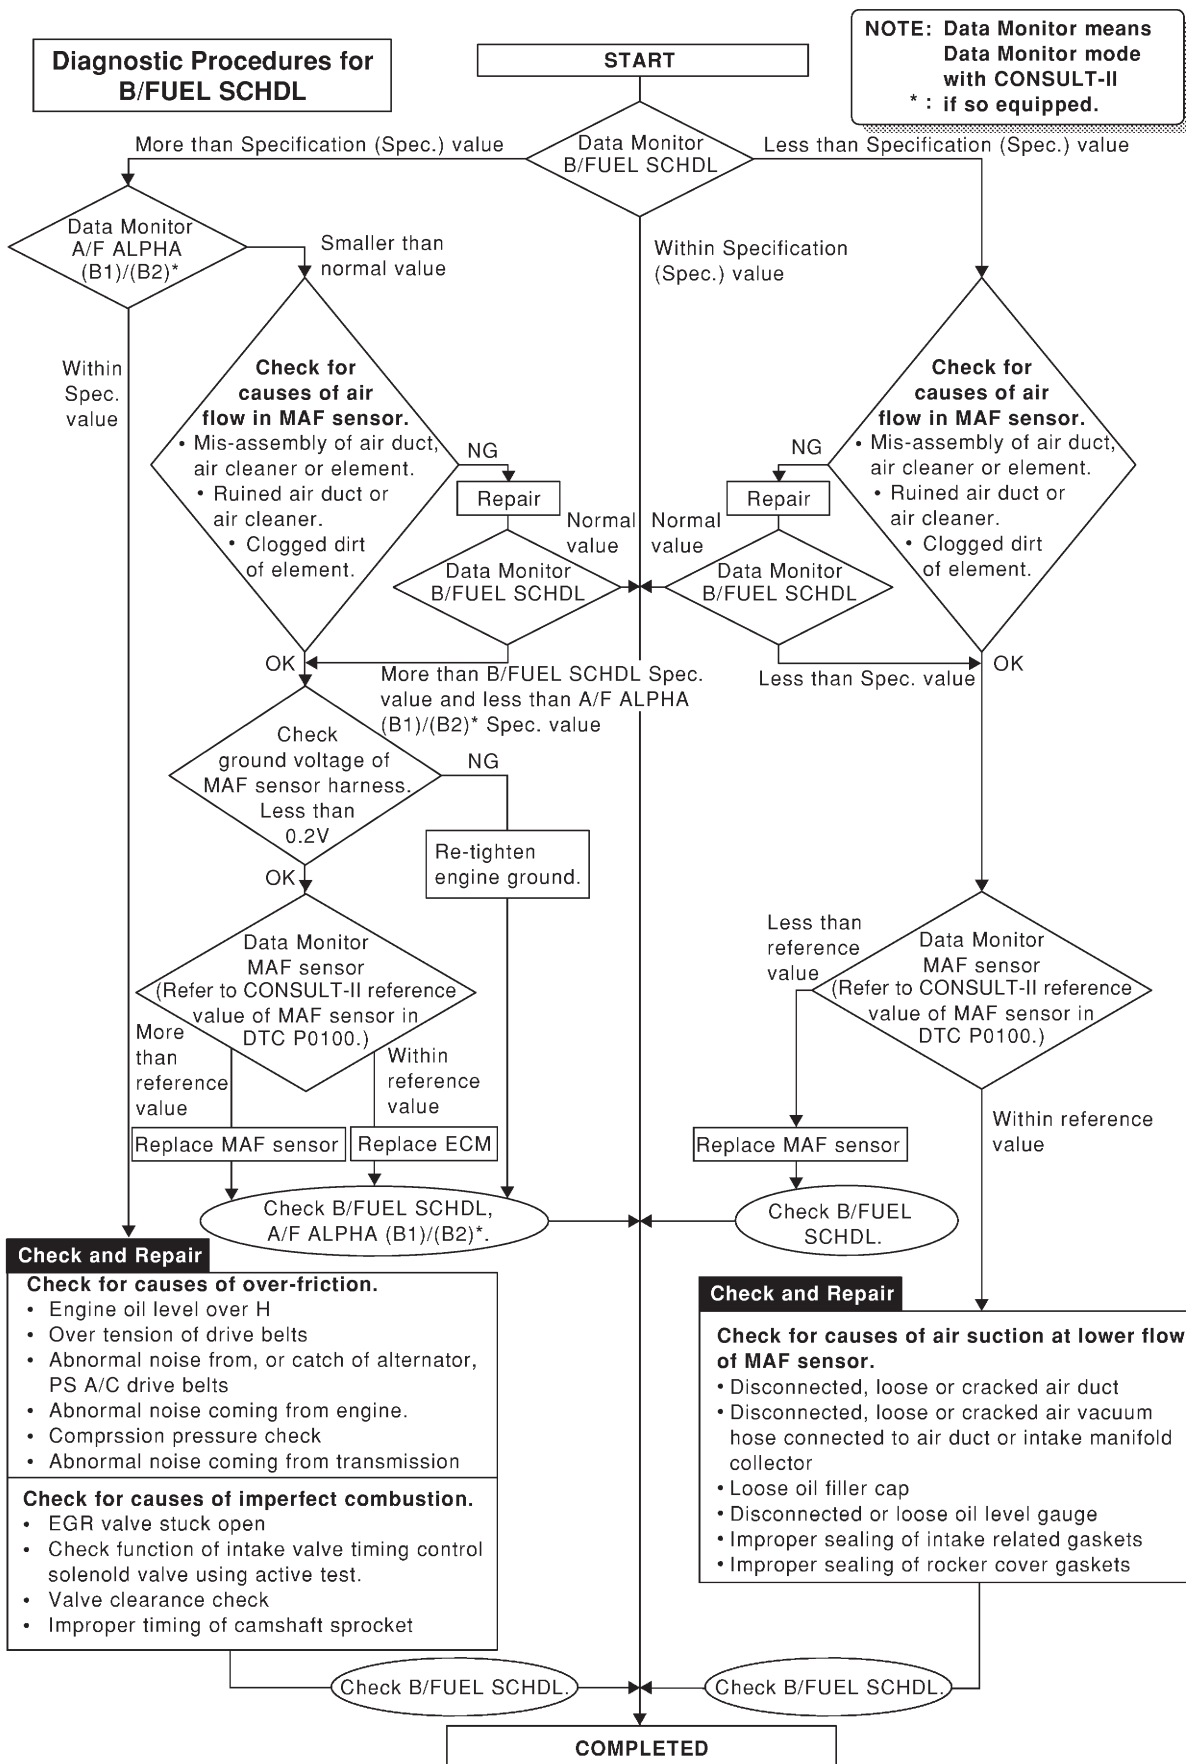

Description

Description

NJEC0045

Intermittent incidents (I/I) may occur. In many cases, the problem resolves itself (the part or circuit function returns to normal without intervention). It is important to realize that the symptoms described in the customer's complaint often do not recur on DTC (1st trip) visits. Realize also that the most frequent cause of I/I occurrences is poor electrical connections. Because of this, the conditions under which the incident occurred may not be clear. Therefore, circuit checks made as part of the standard diagnostic procedure may not indicate the specific problem area.

COMMON I/I REPORT SITUATIONS

NJEC0045S01

STEP in Work Flow	Situation
II	The CONSULT-II is used. The SELF-DIAG RESULTS screen shows time data other than "0" or "1t".
III	The symptom described by the customer does not recur.
IV	(1st trip) DTC data does not appear during the DTC Confirmation Procedure.
VI	The Diagnostic Procedure for PXXXX does not indicate the problem area.

Diagnostic Procedure



NJEC0046

1	INSPECTION START		
Erase (1st trip) DTCs. Refer to "How to Erase Emission-related Diagnostic Information", EC-68, EC-71.			
▶		GO TO 2.	
2	CHECK GROUND TERMINALS		
Check ground terminals for corroding or loose connection. Refer to GI-27, "GROUND INSPECTION".			
OK or NG			
OK	▶	GO TO 3.	
NG	▶	Repair or replace.	
3	SEARCH FOR ELECTRICAL INCIDENT		
Perform GI-22, "Incident Simulation Tests".			
OK or NG			
OK	▶	INSPECTION END	
NG	▶	Repair or replace.	


**Main Power Supply and Ground Circuit
WIRING DIAGRAM**

NJEC0047

EC-MAIN-01

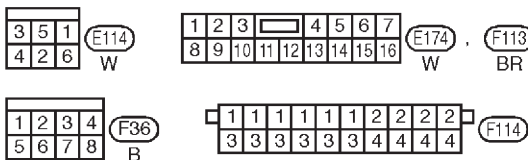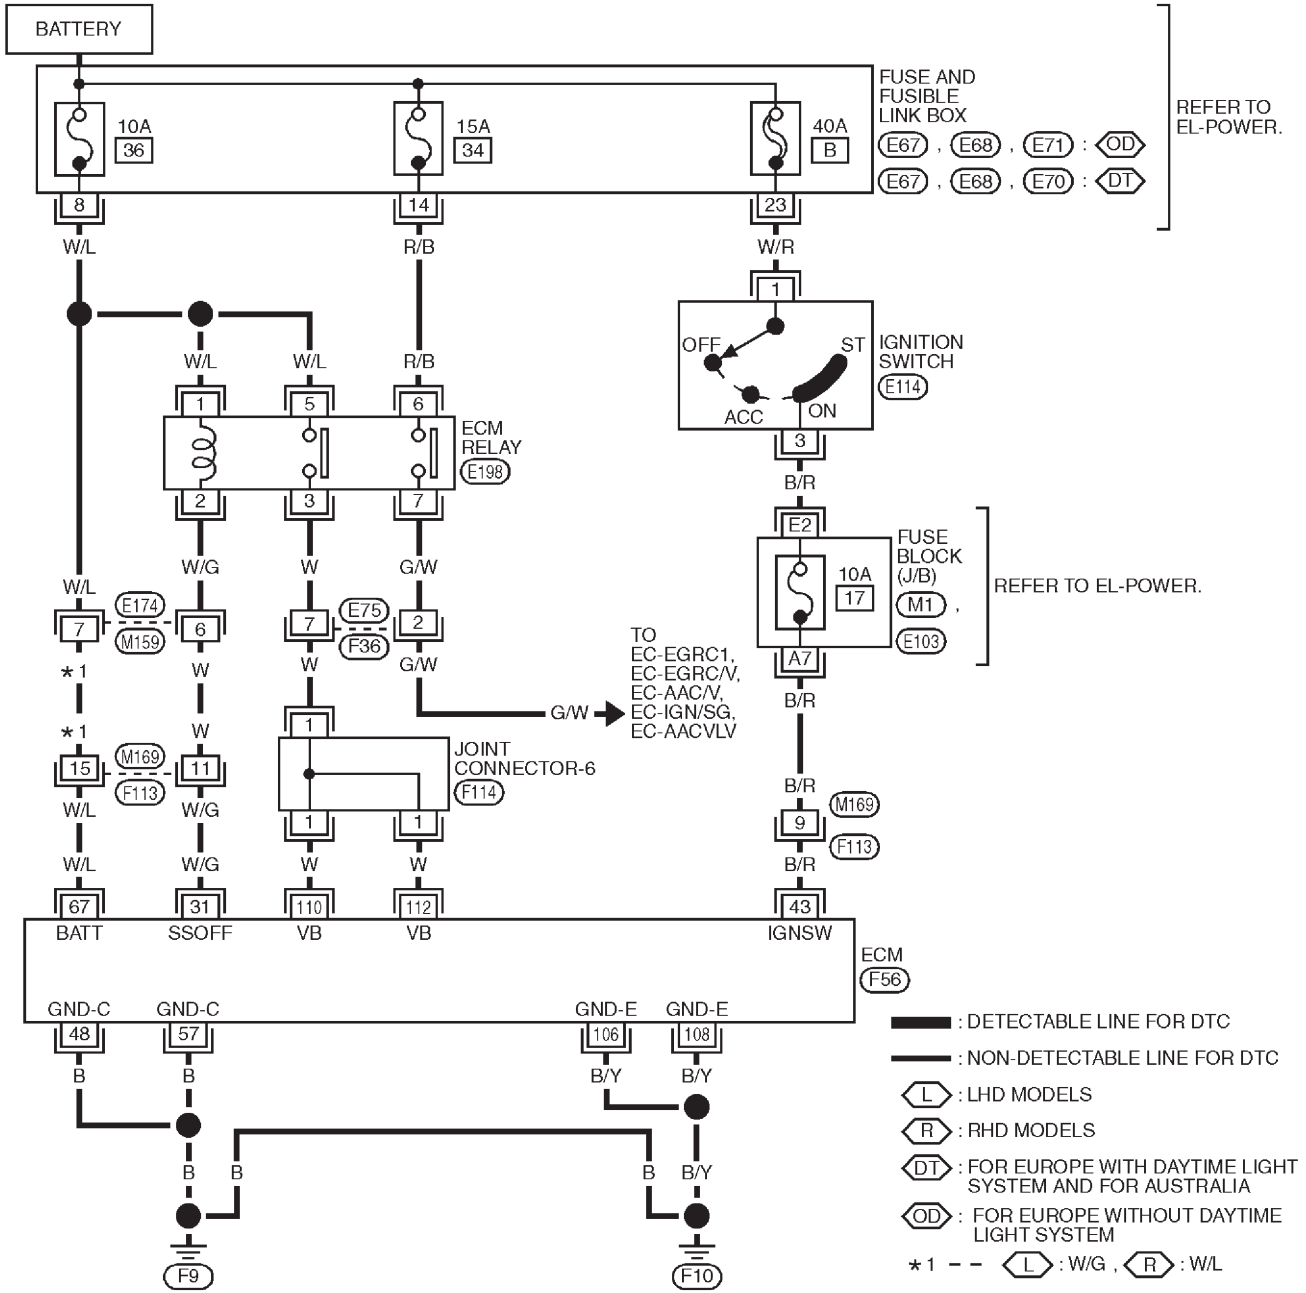

REFER TO THE FOLLOWING.
 (M1) , (E103) - FUSE BLOCK-JUNCTION BOX (J/B)
 (E67) , (E68) , (E70)
 (E71)
 - FUSE AND FUSIBLE LINK BOX

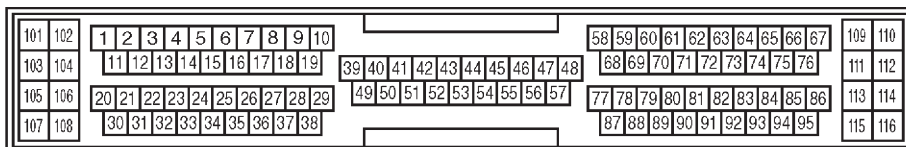

TROUBLE DIAGNOSIS FOR POWER SUPPLY

QG

Main Power Supply and Ground Circuit (Cont'd)

ECM TERMINALS AND REFERENCE VALUE

NJE0048

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
31	W/G	ECM relay (Self shut-off)	[Engine is running] [Ignition switch "OFF"] ● For 9 seconds after turning ignition switch "OFF"	0 - 1V
			[Ignition switch "OFF"] ● 9 seconds passed after turning ignition switch "OFF"	BATTERY VOLTAGE (11 - 14V)
43	B/R	Ignition switch	[Ignition switch "OFF"]	0V
			[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)
48	B	ECM ground	[Engine is running] ● Idle speed	Engine ground
57	B	ECM ground	[Engine is running] ● Idle speed	Engine ground
67	W/L	Power supply for ECM (Back-up)	[Ignition switch "OFF"]	BATTERY VOLTAGE (11 - 14V)
106 108	B/Y B/Y	ECM ground	[Engine is running] ● Idle speed	Engine ground
110 112	W W	Power supply for ECM	[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)

DIAGNOSTIC PROCEDURE


NJE0565

1	INSPECTION START	
Start engine.		
Is engine running?		
Yes or No		
Yes	▶	GO TO 9.
No	▶	GO TO 2.

TROUBLE DIAGNOSIS FOR POWER SUPPLY

QG

Main Power Supply and Ground Circuit (Cont'd)

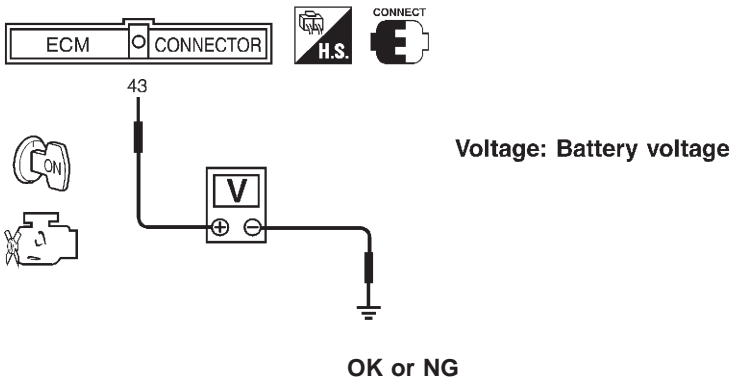2	CHECK ECM POWER SUPPLY CIRCUIT-I	
<p>1. Turn ignition switch "OFF" and then "ON". 2. Check voltage between ECM terminal 43 and ground with CONSULT-II or tester.</p>		
		
SEF291X		
OK	▶	GO TO 4.
NG	▶	GO TO 3.


3	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M169, F113 ● Fuse block (J/B) connector M1, E103 ● 10A fuse ● Harness for open or short between ECM and ignition switch 		
▶ Repair harness or connectors.		

4	CHECK ECM GROUND CIRCUIT FOR OPEN AND SHORT-I	
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminals 48, 57, 106, 108 and engine ground. Refer to WIRING DIAGRAM. Continuity should exist. 4. Also check harness for short to ground and short to power.</p>		
OK or NG		
OK	▶	GO TO 5.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

TROUBLE DIAGNOSIS FOR POWER SUPPLY

QG

Main Power Supply and Ground Circuit (Cont'd)

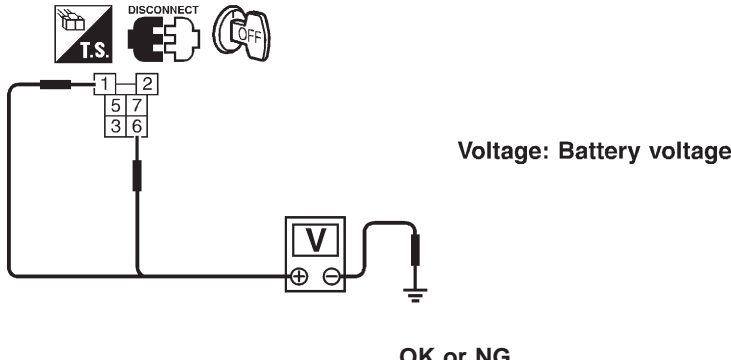5	CHECK POWER SUPPLY-II
<p>1. Disconnect ECM relay. (For ECM relay location, refer to "Engine Control Compartment Parts Location".) 2. Check voltage between ECM relay terminals 1, 6 and ground with CONSULT-II or tester.</p>	
	
SEF101Y	
OK	▶ GO TO 7.
NG	▶ GO TO 6.

6	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● 15A fuse and 10A fuse ● Harness for open or short between ECM relay and battery 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.


7	CHECK OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT
<p>1. Check harness continuity between ECM terminal 31 and ECM relay terminal 2. Continuity should exist.</p> <p>2. Also check harness for short to ground and short to power.</p>	
OK or NG	
OK	▶ Go to "IGNITION SIGNAL", EC-451.
NG	▶ GO TO 8.

8	DETECT MALFUNCTIONING PART
<p>Check the harness for open or short between ECM relay and ECM.</p>	
▶	Repair open circuit or short to ground or short to power in harness or connectors.


TROUBLE DIAGNOSIS FOR POWER SUPPLY

QG

Main Power Supply and Ground Circuit (Cont'd)

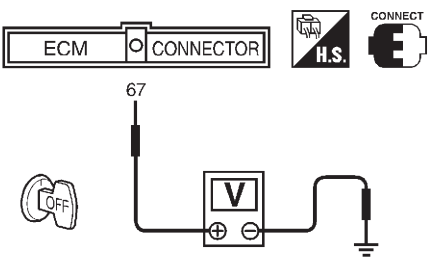9	CHECK ECM POWER SUPPLY CIRCUIT-II	
<p>1. Stop engine. 2. Check voltage between ECM terminal 67 and ground with CONSULT-II or tester.</p>		
 <p style="text-align: right;">Voltage: Battery voltage</p>		
SEF293X		
OK or NG		
OK	▶	GO TO 11.
NG	▶	GO TO 10.


10	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E174, M159 ● Harness connectors M169, F113 ● Harness for open or short between ECM and fuse 		
▶ Repair harness or connectors.		

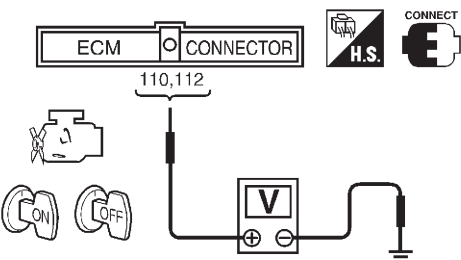11	CHECK ECM POWER SUPPLY CIRCUIT-III	
<p>1. Turn ignition switch "ON" and then "OFF". 2. Check voltage between ECM terminals 110, 112 and ground with CONSULT-II or tester.</p>		
 <p style="text-align: right;">Voltage: After turning ignition switch "OFF", battery voltage will exist for a few seconds, then drop approximately 0V.</p>		
SEF294X		
OK or NG		
OK	▶	GO TO 17.
NG (Battery voltage does not exist.)	▶	GO TO 12.
NG (Battery voltage exists for more than a few seconds.)	▶	GO TO 14.

TROUBLE DIAGNOSIS FOR POWER SUPPLY

QG

Main Power Supply and Ground Circuit (Cont'd)

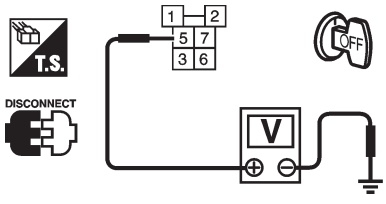12	CHECK ECM POWER SUPPLY CIRCUIT-IV	
<p>1. Disconnect ECM relay. (For ECM relay location, refer to "Engine Control Compartment Parts Location".) 2. Check voltage between ECM relay terminal 5 and ground with CONSULT-II or tester.</p>		
 <p style="text-align: right;">Voltage: Battery voltage</p> <p style="text-align: center;">OK or NG</p>		
YEC054A		
OK	▶	GO TO 14.
NG	▶	GO TO 13.

13	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness for open or short between ECM relay and 10A fuse 		
▶ Repair open circuit or short to ground or short to power in harness or connectors.		


14	CHECK HARNESS CONTINUITY BETWEEN ECM RELAY AND ECM FOR OPEN AND SHORT	
<p>1. Check harness continuity between ECM terminals 110, 112 and ECM relay terminal 3. Refer to WIRING DIAGRAM. Continuity should exist.</p> <p>2. Also check harness for short to ground and short to power.</p>		
OK or NG		
OK	▶	GO TO 16.
NG	▶	GO TO 15.

15	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Joint connector-6 ● Harness connector E75, F36 ● Harness for open or short between ECM and ECM relay 		
▶ Repair open circuit or short to ground or short to power in harness or connectors.		

TROUBLE DIAGNOSIS FOR POWER SUPPLY

QG

Main Power Supply and Ground Circuit (Cont'd)

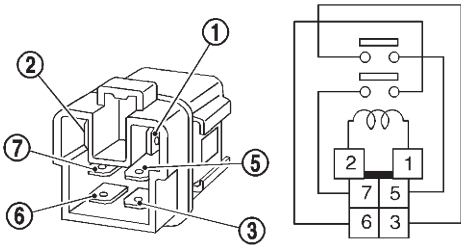16	CHECK ECM RELAY							
<p>1. Apply 12V direct current between ECM relay terminals 1 and 2. 2. Check continuity between relay terminals 3 and 5, 6 and 7.</p>								
								
<table border="1" style="margin-left: auto; margin-right: 0;"> <thead> <tr> <th style="width: 60%;">Condition</th> <th>Continuity</th> </tr> </thead> <tbody> <tr> <td>12V direct current supply between terminals 1 and 2</td> <td style="text-align: center;">Yes</td> </tr> <tr> <td>OFF</td> <td style="text-align: center;">No</td> </tr> </tbody> </table>			Condition	Continuity	12V direct current supply between terminals 1 and 2	Yes	OFF	No
Condition	Continuity							
12V direct current supply between terminals 1 and 2	Yes							
OFF	No							
SEF296X								
OK or NG								
OK	▶	GO TO 17.						
NG	▶	Replace ECM relay.						


17	CHECK ECM GROUND CIRCUIT FOR OPEN AND SHORT-II	
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminals 48, 57, 106, 108 and engine ground. Refer to WIRING DIAGRAM. Continuity should exist. 4. Also check harness for short to ground and short to power.</p>		
OK or NG		
OK	▶	GO TO 18.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

18	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.		
▶		INSPECTION END

DTC P0100 MASS AIR FLOW SENSOR (MAFS)

QG

Component Description

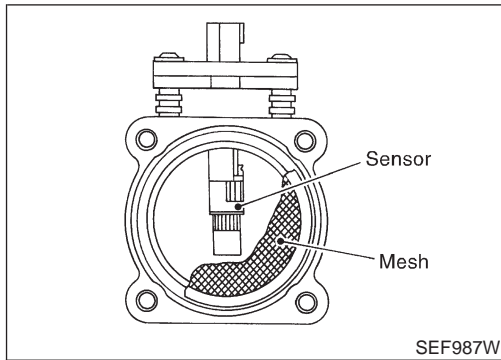

Component Description

NJEC0050

The mass air flow sensor is placed in the stream of intake air. It measures the intake flow rate by measuring a part of the entire intake flow. It consists of a hot wire that is supplied with electric current from the ECM. The temperature of the hot wire is controlled by the ECM a certain amount. The heat generated by the hot wire is reduced as the intake air flows around it. The more air, the greater the heat loss.

Therefore, the ECM must supply more electric current to maintain the temperature of the hot wire as air flow increases. The ECM detects the air flow by means of this current change.

CONSULT-II Reference Value in Data Monitor Mode

NJEC0051

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
MAS A/F SE-B1	● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load Idle	1.0 - 1.7V
	2,500 rpm	1.5 - 2.1V
MASS AIRFLOW	● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load Idle	1.0 - 4.0 g-m/s
	2,500 rpm	5.0 - 10.0 g-m/s

ECM Terminals and Reference Value

NJEC0052

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
61	G	Mass air flow sensor	[Engine is running] ● Warm-up condition ● Idle speed	1.0 - 1.7V
			[Engine is running] ● Warm-up condition ● Engine speed is 2,500 rpm	1.5 - 2.1V
73	B	Mass air flow sensor ground	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0V

On Board Diagnosis Logic

NJEC0053

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0100 0100	A) An excessively high voltage from the sensor is sent to ECM when engine is not running.	<ul style="list-style-type: none"> ● Harness or connectors (The sensor circuit is open or shorted.) ● Mass air flow sensor
	B) An excessively low voltage from the sensor is sent to ECM* when engine is running.	<ul style="list-style-type: none"> ● Harness or connectors (The sensor circuit is open or shorted.) ● Intake air leaks ● Mass air flow sensor

*: When this malfunction is detected, the ECM enters fail-safe mode and the MI lights up.

Fail-safe Mode

NJEC0589

Detected items	Engine operating condition in fail-safe mode
Mass air flow sensor circuit	Engine speed will not rise more than 2,400 rpm due to the fuel cut.

DTC Confirmation Procedure


NJEC0054

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch “OFF” and wait at least 9 seconds before conducting the next test.

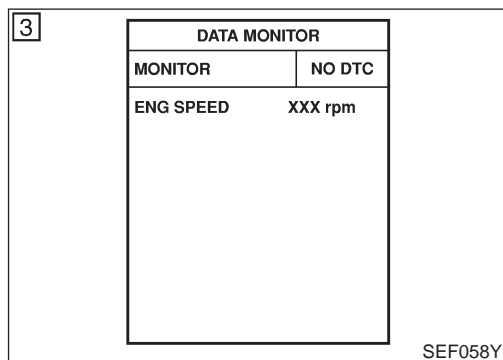

PROCEDURE FOR MALFUNCTION A


NJEC0054S01

With CONSULT-II

- 1) Turn ignition switch “ON”.
- 2) Select “DATA MONITOR” mode with CONSULT-II.
- 3) Wait at least 2 seconds.
- 4) If 1st trip DTC is detected, go to “Diagnostic Procedure”, EC-155.

With GST

Follow the procedure “With CONSULT-II” above.

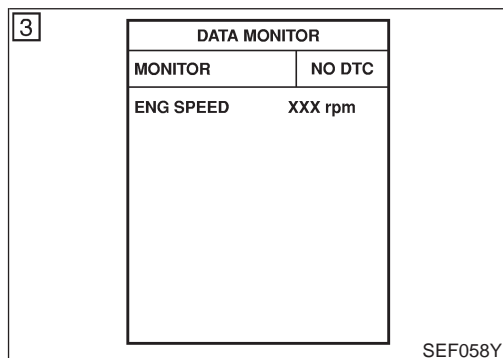

PROCEDURE FOR MALFUNCTION B

NJEC0054S02

With CONSULT-II

- 1) Turn ignition switch “ON”.
- 2) Select “DATA MONITOR” mode with CONSULT-II.
- 3) Start engine and wait 2 seconds at most.
- 4) If 1st trip DTC is detected, go to “Diagnostic Procedure”, EC-155.

With GST

Follow the procedure “With CONSULT-II” above.

DTC P0100 MASS AIR FLOW SENSOR (MAFS)


QG

Wiring Diagram


Wiring Diagram

NJEC0056

EC-MAFS-01

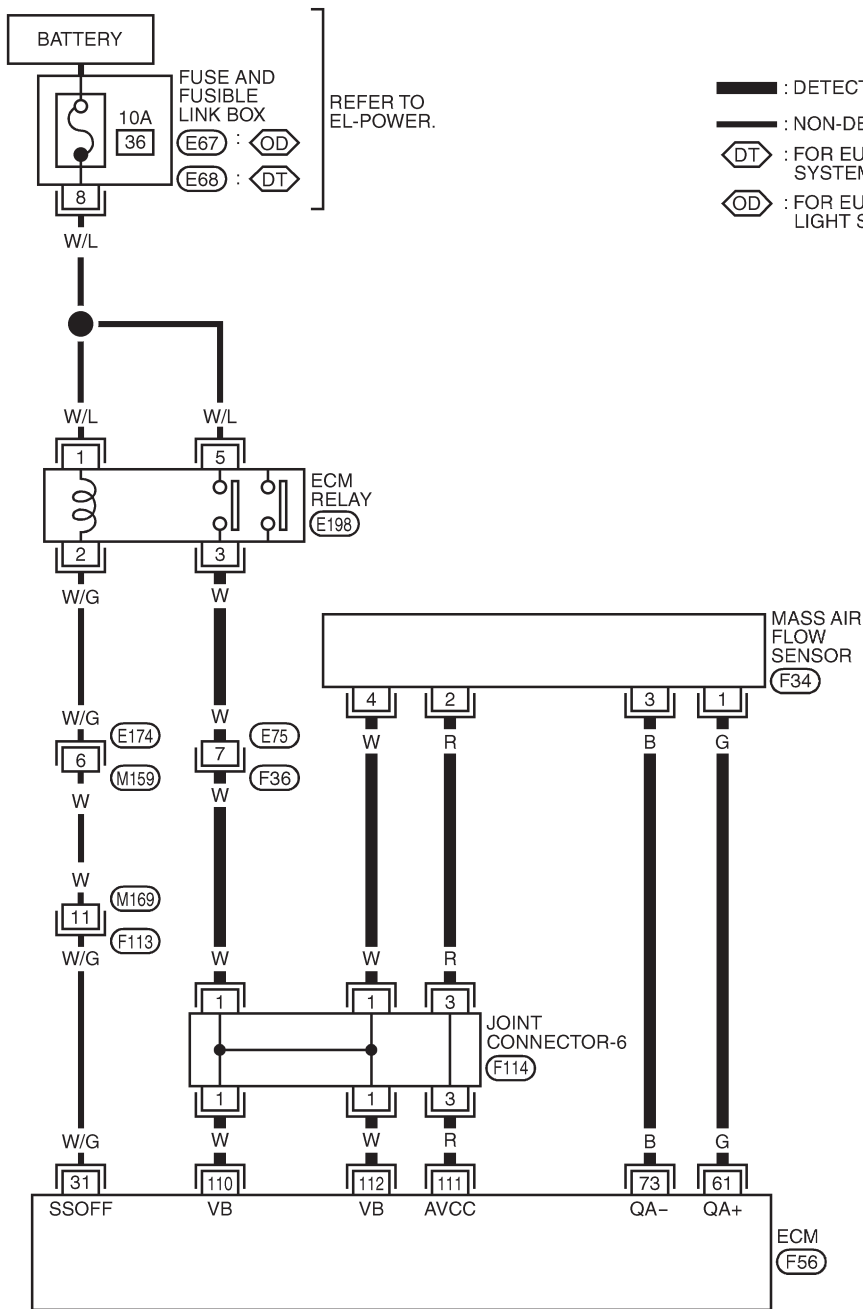

- : DETECTABLE LINE FOR DTC
- : NON-DETECTABLE LINE FOR DTC
- DT : FOR EUROPE WITH DAYTIME LIGHT SYSTEM AND FOR AUSTRALIA
- OD : FOR EUROPE WITHOUT DAYTIME LIGHT SYSTEM

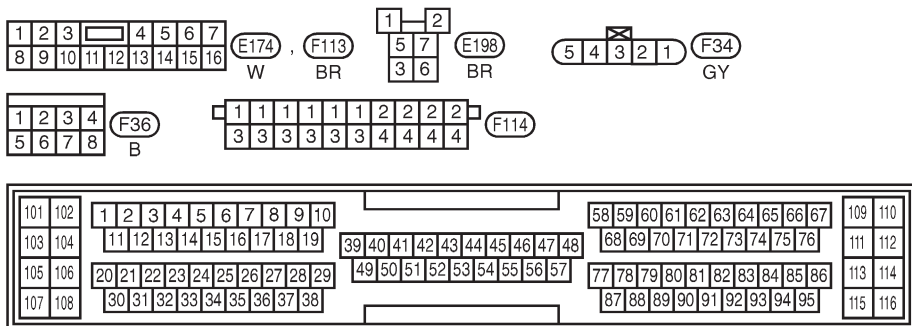

REFER TO THE FOLLOWING.
E67 , E68 - FUSE AND FUSIBLE LINK BOX




YEC963

Diagnostic Procedure

NJE0057

1	INSPECTION START	
Which malfunction (A, or B) is duplicated?		
Malfunction A or B		
A	▶	GO TO 3.
B	▶	GO TO 2.



2	CHECK INTAKE SYSTEM	
Check the following for connection.		
<ul style="list-style-type: none"> ● Air duct ● Vacuum hoses ● Intake air passage between air duct to collector 		
OK or NG		
OK	▶	GO TO 3.
NG	▶	Reconnect the parts.

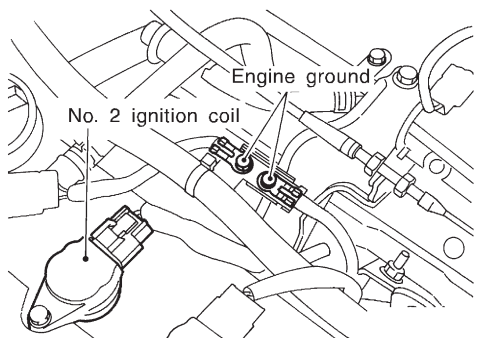3	RETIGHTEN GROUND SCREWS	
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Loosen and retighten engine ground screws. 		
 <p>The diagram shows a close-up of an engine's grounding system. It features several screws used for grounding. One screw is specifically labeled 'Engine ground'. Another component, a 'No. 2 ignition coil', is also shown and labeled. The diagram illustrates the correct placement and connection of these components.</p>		
JEF104Y		
▶		GO TO 4.

DTC P0100 MASS AIR FLOW SENSOR (MAFS)

QG

Diagnostic Procedure (Cont'd)

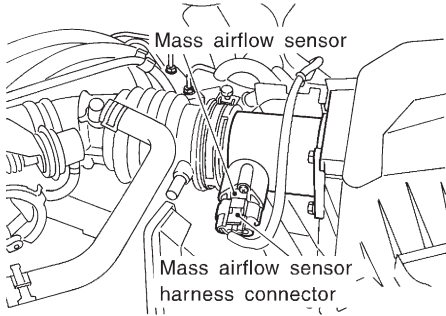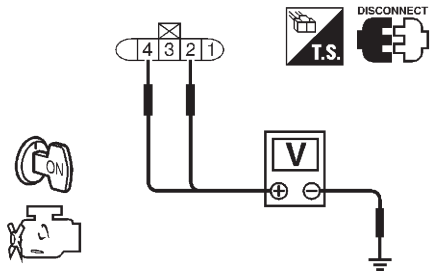4	CHECK POWER SUPPLY								
<p>1. Disconnect mass air flow sensor harness connector.</p> <div style="text-align: center;">  <p>Mass airflow sensor Mass airflow sensor harness connector</p> </div> <p style="text-align: right;">JEF105Y</p> <p>2. Turn ignition switch "ON". 3. Check voltage between terminal 2, 4 and ground with CONSULT-II or tester.</p> <div style="display: flex; align-items: center; justify-content: center;"> <div style="text-align: center;">  </div> <table border="1" style="margin-left: 20px; border-collapse: collapse;"> <thead> <tr> <th style="width: 30%;">Terminal</th> <th style="width: 70%;">Voltage</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">2</td> <td style="text-align: center;">Approximately 5</td> </tr> <tr> <td style="text-align: center;">4</td> <td style="text-align: center;">Battery voltage</td> </tr> </tbody> </table> </div> <p style="text-align: right;">SEF297X</p> <p style="text-align: center;">OK or NG</p>				Terminal	Voltage	2	Approximately 5	4	Battery voltage
Terminal	Voltage								
2	Approximately 5								
4	Battery voltage								
OK	▶	GO TO 6.							
NG	▶	GO TO 5.							

5	DETECT MALFUNCTIONING PART		
<p>Check the following.</p> <ul style="list-style-type: none"> ● Joint connector-6 ● Harness for open or short between ECM relay and mass air flow sensor ● Harness for open or short between mass air flow sensor and ECM 			
▶		Repair harness or connectors.	

6	CHECK GROUND CIRCUIT		
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between mass air flow sensor harness connector terminal 3 and ECM terminal 73. Refer to wiring diagram. Continuity should exist. 4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>			
OK	▶	GO TO 7.	
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.	

DTC P0100 MASS AIR FLOW SENSOR (MAFS)



QG

Diagnostic Procedure (Cont'd)

7	CHECK INPUT SIGNAL CIRCUIT	
1. Check harness continuity between mass air flow sensor harness connector terminal 1 and ECM terminal 61. Refer to wiring diagram. Continuity should exist.		
2. Also check harness for short to ground and short to power.		
OK or NG		
OK	▶	GO TO 8.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

8	CHECK MASS AIR FLOW SENSOR	
Refer to "Component Inspection", EC-157.		
OK or NG		
OK	▶	GO TO 9.
NG	▶	Replace mass air flow sensor.

9	CHECK INTERMITTENT INCIDENT	
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.		
▶ INSPECTION END		

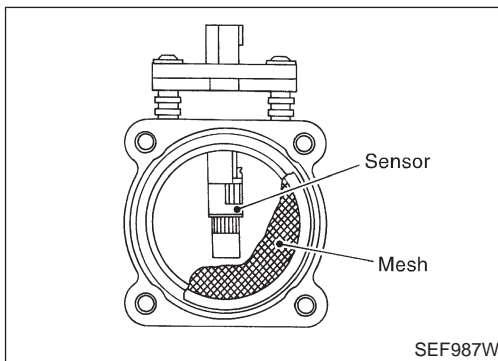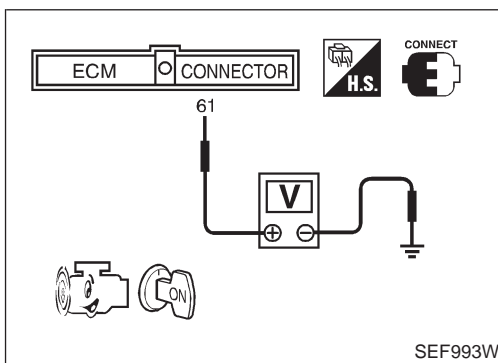

Component Inspection MASS AIR FLOW SENSOR

NJEC0058

NJEC0058S01

1. Turn ignition switch "ON".
2. Start engine and warm it up to normal operating temperature.
3. Check voltage between ECM terminal 61 (Mass air flow sensor signal) and ground.

Conditions	Voltage V
Ignition switch "ON" (Engine stopped.)	Less than 1.2
Idle (Engine is warmed-up to normal operating temperature.)	1.0 - 1.7
2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.7 - 2.1
Idle to about 4,000 rpm*	1.0 - 1.7 to Approx. 4.0


*: Check for linear voltage rise in response to increases to about 4,000 rpm in engine speed.

4. If the voltage is out of specification, disconnect mass air flow sensor harness connector and connect it again. Repeat above check.
5. If NG, remove mass air flow sensor from air duct. Check hot film for damage or dust.

DTC P0110 INTAKE AIR TEMPERATURE SENSOR

QG

Component Description

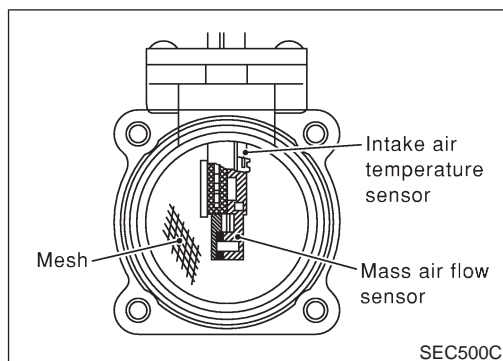

Component Description

NJEC0066

The intake air temperature sensor is built into the mass air flow sensor. The sensor detects intake air temperature and transmits a signal to the ECM.

The temperature sensing unit uses a thermistor which is sensitive to the change in temperature. Electrical resistance of the thermistor decreases in response to the temperature rise.

<Reference data>

Intake air temperature °C (°F)	Voltage* V	Resistance kΩ
25 (77)	3.3	1.9 - 2.1
80 (176)	1.28	0.31 - 0.37

*: These data are reference values and are measured between ECM terminal 64 (Intake air temperature sensor) and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

On Board Diagnosis Logic

NJEC0067

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0110 0110	An excessively low or high voltage from the sensor is sent to ECM.	<ul style="list-style-type: none"> ● Harness or connectors (The sensor circuit is open or shorted.) ● Intake air temperature sensor

DTC Confirmation Procedure

NJEC0068

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 9 seconds before conducting the next test.

DTC P0110 INTAKE AIR TEMPERATURE SENSOR

QG

DTC Confirmation Procedure (Cont'd)

3	DATA MONITOR	
	MONITOR	NO DTC
	ENG SPEED	XXX rpm

SEF058Y

With CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Wait at least 5 seconds.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-161.

With GST

Follow the procedure "With CONSULT-II" above.

DTC P0110 INTAKE AIR TEMPERATURE SENSOR




QG

Wiring Diagram

Wiring Diagram

NJEC0069



EC-IATS-01

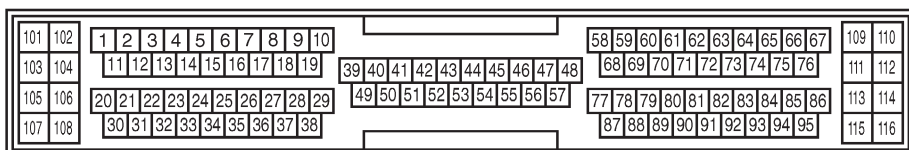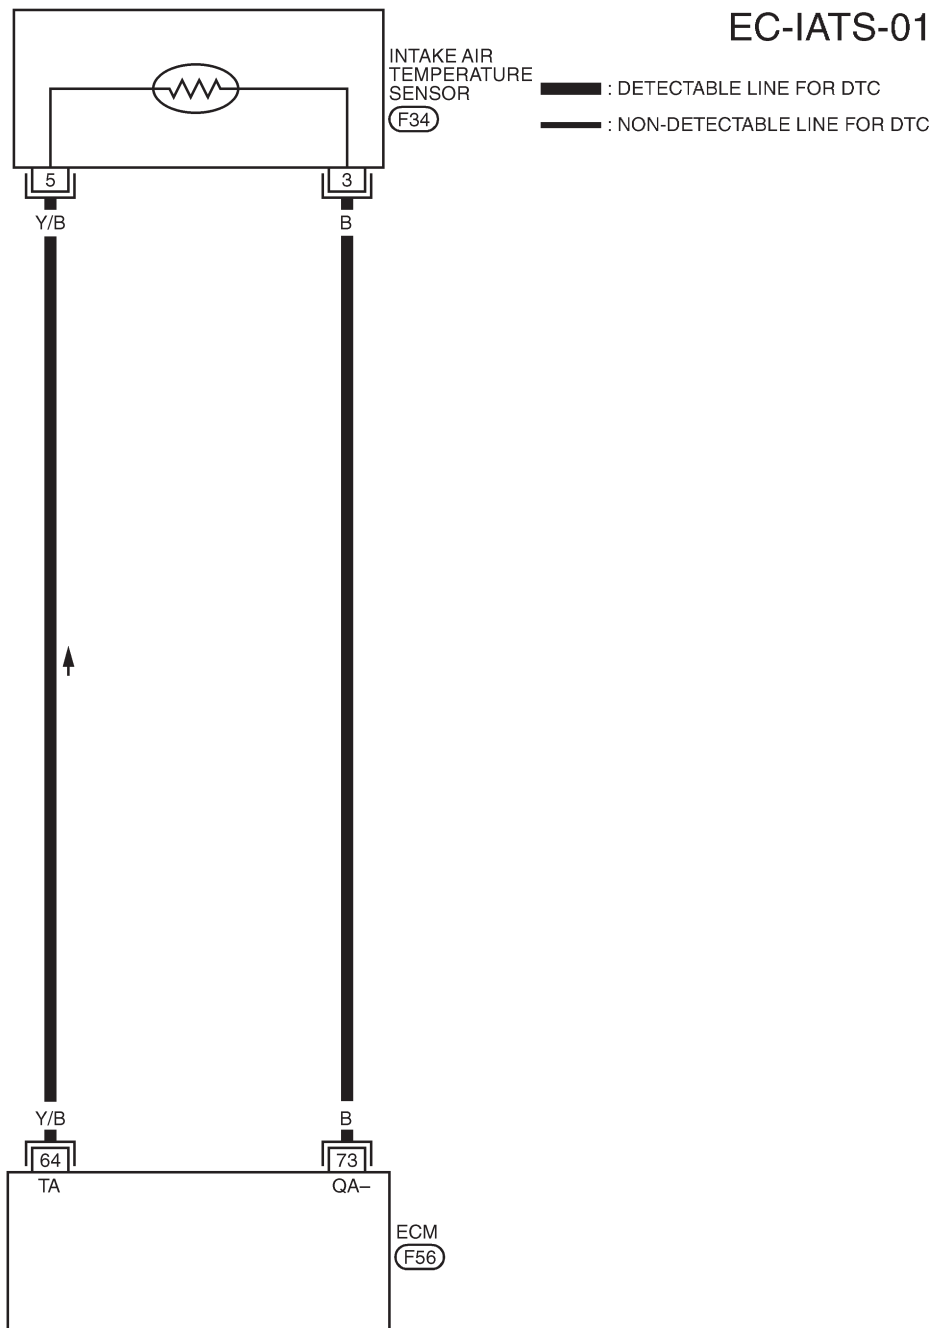

YEC964

Diagnostic Procedure

NJE0070

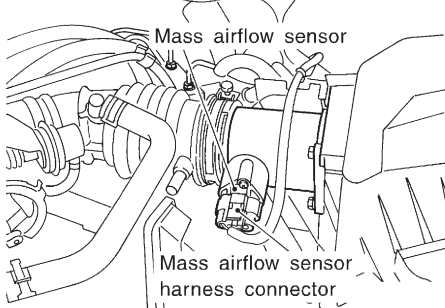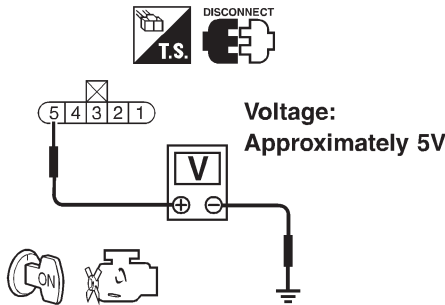1	CHECK POWER SUPPLY (Models with intake air temperature sensor in mass air flow sensor)
<p>1. Turn ignition switch "OFF". 2. Disconnect mass air flow sensor harness connector.</p> <div style="text-align: center;">  <p>Mass airflow sensor Mass airflow sensor harness connector</p> </div> <p>3. Turn ignition switch "ON". 4. Check voltage between terminal 5 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  <p>Voltage: Approximately 5V</p> <p>OK or NG</p> </div>	
OK	▶ GO TO 3.
NG	▶ GO TO 2.

JEF105Y

SEC503C

2	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness for open or short between ECM and intake air temperature sensor 	
▶	Repair harness or connectors.

3	CHECK GROUND CIRCUIT
<p>1. Turn ignition switch "OFF". 2. Check harness continuity between intake air temperature sensor harness connector terminal 2 and engine ground. Refer to wiring diagram. Continuity should exist. 3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 5.
NG	▶ GO TO 4.

4	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness for open or short between ECM and intake air temperature sensor 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.


DTC P0110 INTAKE AIR TEMPERATURE SENSOR

QG

Diagnostic Procedure (Cont'd)

5	CHECK INTAKE AIR TEMPERATURE SENSOR	
Refer to "Component Inspection", EC-163.		
OK or NG		
OK	▶	GO TO 6.
NG	▶	Replace intake air temperature sensor.

6	CHECK INTERMITTENT INCIDENT	
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.		
▶		INSPECTION END

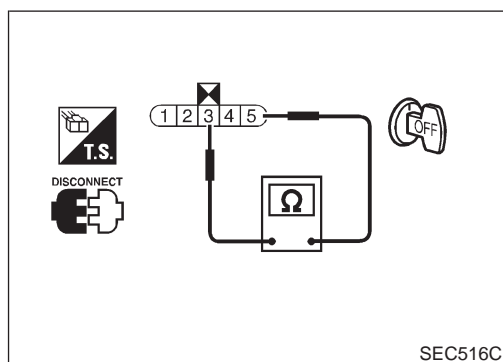

Component Inspection

INTAKE AIR TEMPERATURE SENSOR

NJEC0071

NJEC0071S01

Check resistance between mass air flow sensor harness connector terminals 3 and 5.

<Reference data>


Intake air temperature °C (°F)	Resistance kΩ
25 (77)	1.9 - 2.1

If NG, replace intake air temperature sensor.

DTC P0115 ENGINE COOLANT TEMPERATURE SENSOR (ECTS) (CIRCUIT)

QG


Component Description

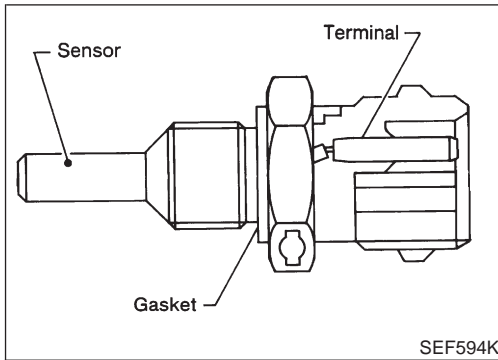

Component Description

NJEC0072

The engine coolant temperature sensor is used to detect the engine coolant temperature. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the engine coolant temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

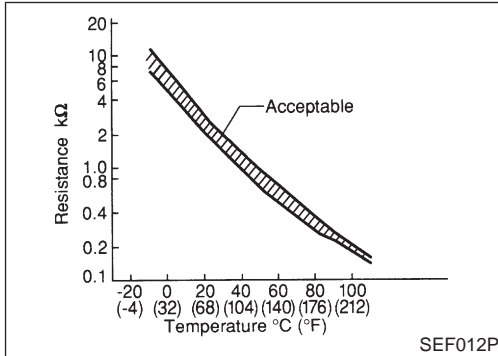

<Reference data>

Engine coolant temperature °C (°F)	Voltage* V	Resistance kΩ
-10 (14)	4.4	7.0 - 11.4
20 (68)	3.5	2.1 - 2.9
50 (122)	2.2	0.68 - 1.00
90 (194)	0.9	0.236 - 0.260

*: These data are reference values and are measured between ECM terminal 70 (Engine coolant temperature sensor) and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

CONSULT-II Reference Value in Data Monitor Mode

NJEC0073

MONITOR ITEM	CONDITION	SPECIFICATION
COOLAN TEMP/S	● Engine: After warming up	More than 70°C (158°F)

On Board Diagnosis Logic

NJEC0074

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0115 0115	● An excessively high or low voltage from the sensor is sent to ECM.*	<ul style="list-style-type: none"> ● Harness or connectors (The sensor circuit is open or shorted.) ● Engine coolant temperature sensor

*: When this malfunction is detected, the ECM enters fail-safe mode and the MI lights up.

DTC P0115 ENGINE COOLANT TEMPERATURE SENSOR (ECTS) (CIRCUIT)

QG

Fail-safe Mode

Fail-safe Mode

NJEC0566

Detected items	Engine operating condition in fail-safe mode	
Engine coolant temperature sensor circuit	Engine coolant temperature will be determined by ECM based on the time after turning ignition switch "ON" or "START". CONSULT-II displays the engine coolant temperature decided by ECM.	
	Condition	Engine coolant temperature decided (CONSULT-II display)
	Just as ignition switch is turned ON or Start	40°C (104°F)
	More than approx. 4 minutes after ignition ON or Start	80°C (176°F)
	Except as shown above	40 - 80°C (104 - 176°F) (Depends on the time)
When the fail-safe system for engine coolant temperature sensor is activated, the cooling fan operates while the engine is running.		

DATA MONITOR

MONITOR	NO DTC
COOLANTTEMP/S	XXX °C

SEF013Y

DTC Confirmation Procedure

NJEC0075

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 9 seconds before conducting the next test.

With CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Wait at least 5 seconds.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-166 .

With GST

Follow the procedure "With CONSULT-II" above.

DTC P0115 ENGINE COOLANT TEMPERATURE SENSOR (ECTS) (CIRCUIT)




QG

Wiring Diagram

NJEC0076

Wiring Diagram

EC-ECTS-01

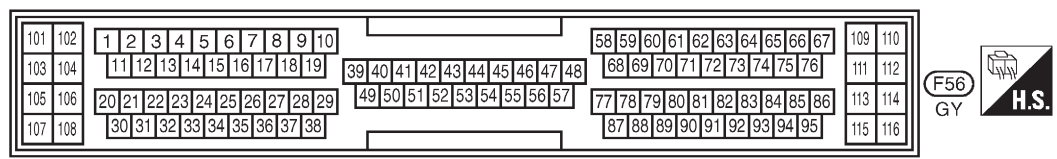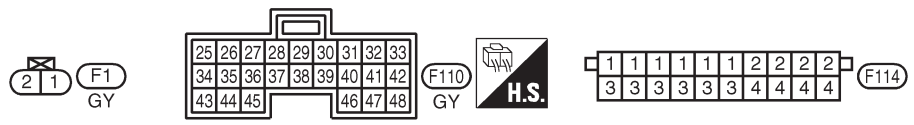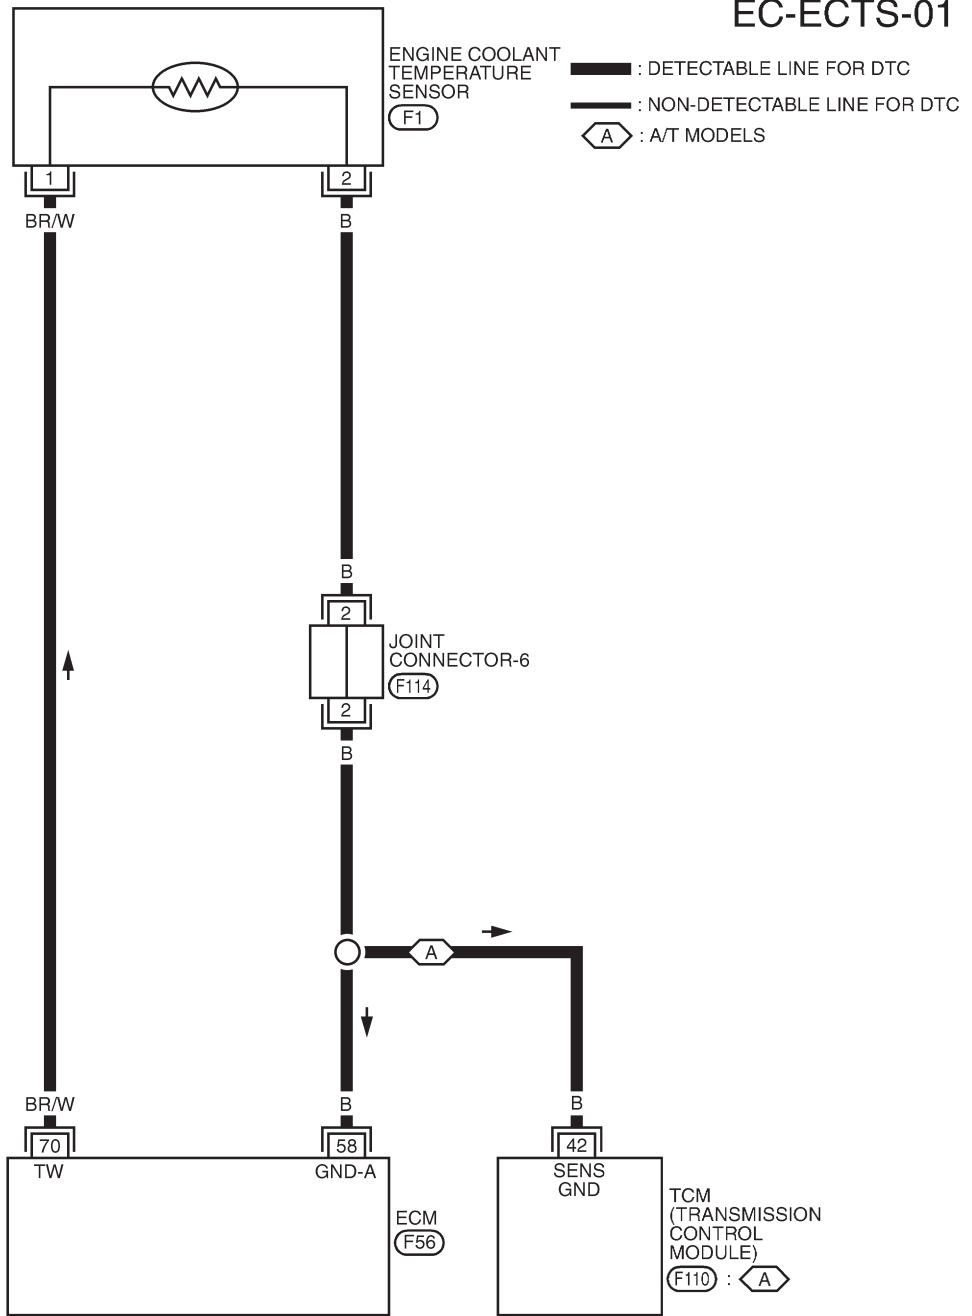

YEC965



DTC P0115 ENGINE COOLANT TEMPERATURE SENSOR (ECTS) (CIRCUIT)

QG

Diagnostic Procedure

Diagnostic Procedure

NJEC0077

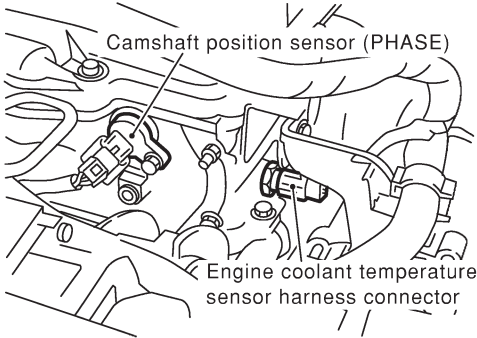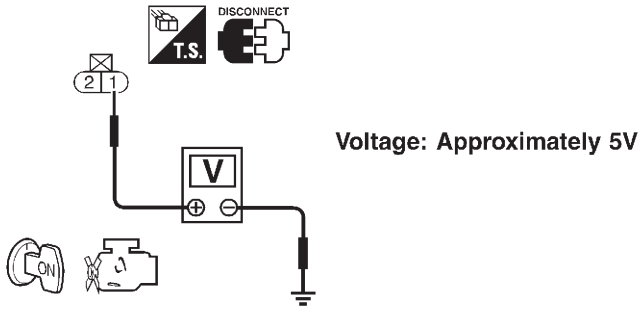1	CHECK POWER SUPPLY		
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect engine coolant temperature sensor harness connector. 			
			
SEF999W			
<ol style="list-style-type: none"> 3. Turn ignition switch "ON". 4. Check voltage between terminal 1 and ground with CONSULT-II or tester. 			
			
OK or NG			
OK	▶	GO TO 3.	
NG	▶	GO TO 2.	

2	DETECT MALFUNCTIONING PART		
Check the harness for open or short between ECM and engine coolant temperature sensor.			
▶		Repair harness or connectors.	


3	CHECK GROUND CIRCUIT		
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Check harness continuity between engine coolant temperature sensor harness connector terminal 2 and engine ground. Refer to wiring diagram. Continuity should exist. 3. Also check harness for short to ground and short to power. 			
OK or NG			
OK	▶	GO TO 5.	
NG	▶	GO TO 4.	

DTC P0115 ENGINE COOLANT TEMPERATURE SENSOR (ECTS) (CIRCUIT)

QG

Diagnostic Procedure (Cont'd)

4	DETECT MALFUNCTIONING PART	
Check the following. <ul style="list-style-type: none"> ● Joint connector-6 ● Harness for open or short between ECM and engine coolant temperature sensor ● Harness for open or short between engine coolant temperature sensor and TCM (Transmission Control Module) 		
▶		Repair open circuit or short to ground or short to power in harness or connectors.
5	CHECK ENGINE COOLANT TEMPERATURE SENSOR	
Refer to "Component Inspection", EC-167.		
OK or NG		
OK	▶	GO TO 6.
NG	▶	Replace engine coolant temperature sensor.
6	CHECK INTERMITTENT INCIDENT	
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.		
▶		INSPECTION END

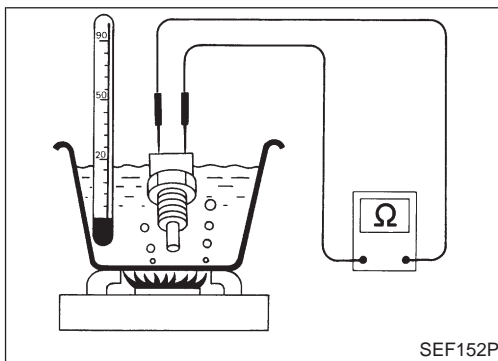

Component Inspection ENGINE COOLANT TEMPERATURE SENSOR


NJEC0078

NJEC0078S01

Check resistance as shown in the figure.
<Reference data>

Temperature °C (°F)	Resistance kΩ
20 (68)	2.1 - 2.9
50 (122)	0.68 - 1.00
90 (194)	0.236 - 0.260

If NG, replace engine coolant temperature sensor.

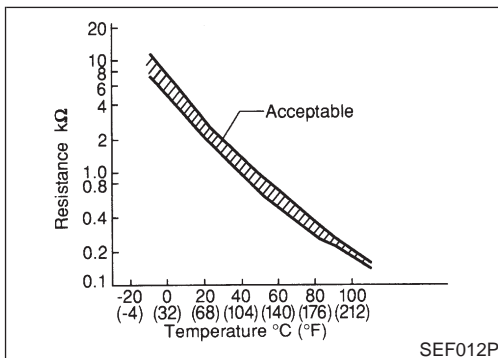

Component Description


NJEC0079

NOTE:

If DTC P0120 (0120) is displayed with DTC P0510 (0510), first perform trouble diagnosis for DTC P0510, EC-321.

The throttle position sensor responds to the accelerator pedal movement. This sensor is a kind of potentiometer which transforms the throttle position into output voltage, and emits the voltage signal to the ECM. In addition, the sensor detects the opening and closing speed of the throttle valve and feeds the voltage signal to the ECM.

Idle position of the throttle valve is determined by the ECM receiving the signal from the throttle position sensor. This sensor controls engine operation such as fuel cut. On the other hand, the "Wide open and closed throttle position switch", which is built into the throttle position sensor unit, is not used for engine control.

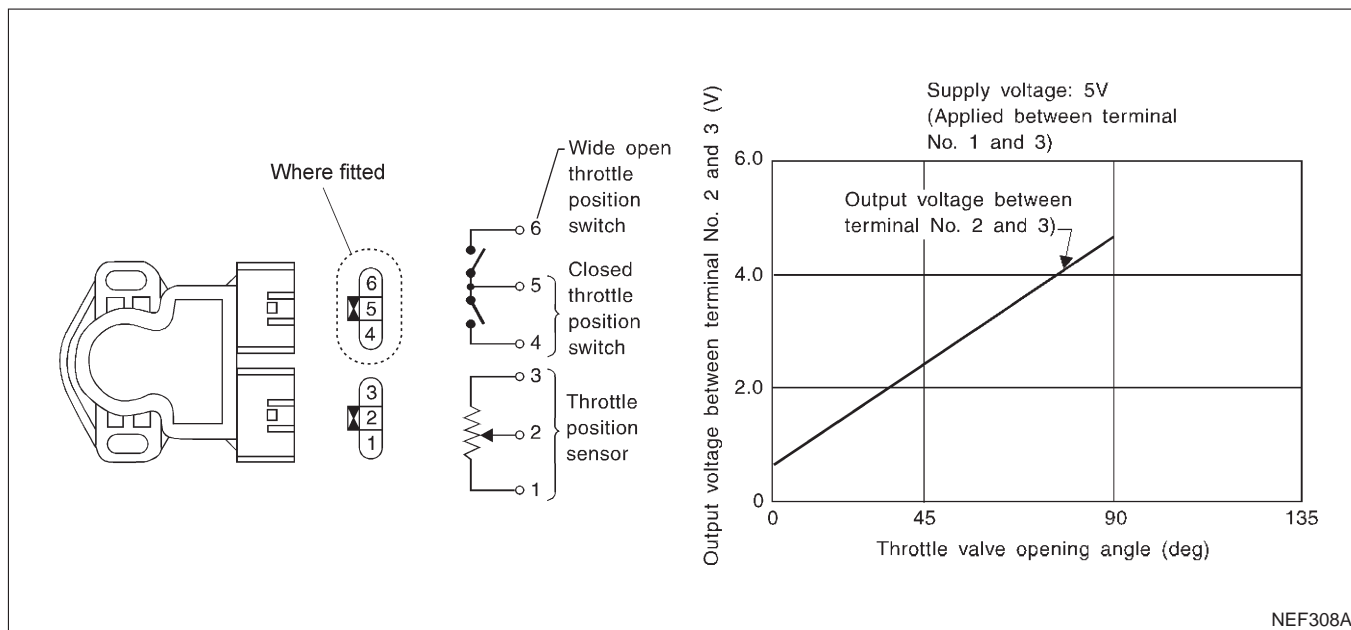

CONSULT-II Reference Value in Data Monitor Mode

NJEC0080

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
THRTL POS SEN	● Engine: Idle	Throttle valve: fully closed	0.15 - 0.85V
	● Ignition switch: ON (Engine stopped)	Throttle valve: fully opened	3.5 - 4.7V
ABSOL TH-P/S	● Engine: Idle	Throttle valve: fully closed	0.0°
	● Ignition switch: ON (Engine stopped)	Throttle valve: fully opened	Approx. 80°

DTC P0120 THROTTLE POSITION SENSOR

QG

ECM Terminals and Reference Value

ECM Terminals and Reference Value

=NJE0081

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
58	B	Sensors' ground	[Engine is running] <ul style="list-style-type: none"> ● Warm up condition ● Idle speed 	Approximately 0V
92	Y	Throttle position sensor	[Engine is running] <ul style="list-style-type: none"> ● Accelerator pedal fully released 	0.15 - 0.85V
			[Ignition switch "ON"] <ul style="list-style-type: none"> ● Accelerator pedal fully depressed 	3.5 - 4.7V
111	R	Sensors' power supply	[Ignition switch "ON"]	Approximately 5V

On Board Diagnosis Logic

NJE0082

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0120 0120	An excessively low or high voltage from the sensor is sent to ECM* while driving.	<ul style="list-style-type: none"> ● Harness or connectors (The throttle position sensor circuit is open or shorted.) ● Throttle position sensor

*: When this malfunction is detected, the ECM enters fail-safe mode and the MI lights up.

Fail-safe Mode

NJE0087

Detected items	Engine operating condition in fail-safe mode	
Throttle position sensor circuit	Throttle position will be determined based on the injected fuel amount and the engine speed. Therefore, acceleration will be poor.	
	Condition	Driving condition
	When engine is idling	Normal
	When accelerating	Poor acceleration

DTC Confirmation Procedure

NJE0083

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 9 seconds before conducting the next test.

CAUTION:

Always drive vehicle at a safe speed.

TESTING CONDITION:

- Before performing the following procedure, confirm that battery voltage is more than 10V at idle.
- This test may be conducted with the drive wheels lifted in

DTC P0120 THROTTLE POSITION SENSOR

QG

DTC Confirmation Procedure (Cont'd)

the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

2	DATA MONITOR	
	MONITOR	NO DTC
	ENG SPEED	XXX rpm
	VHCL SPEED SE	XXX km/h
	THRTL POS SEN	XXX V

SEF175Y

With CONSULT-II

- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT-II.
- 2) Start engine and maintain the following conditions for at least 5 consecutive seconds.

VHCL SPEED SE	More than 4 km/h (2 MPH)
Selector lever	Suitable position except "P" or "N" position

- 3) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-172.

With GST




Follow the procedure "With CONSULT-II" above.

DTC P0120 THROTTLE POSITION SENSOR

Wiring Diagram


NJEC0084



EC-TPS-01

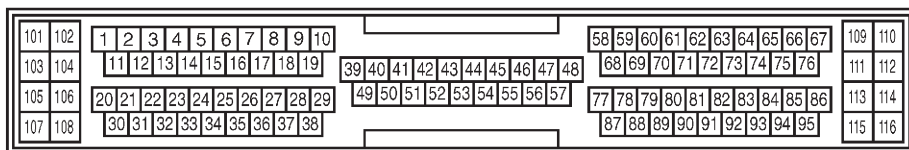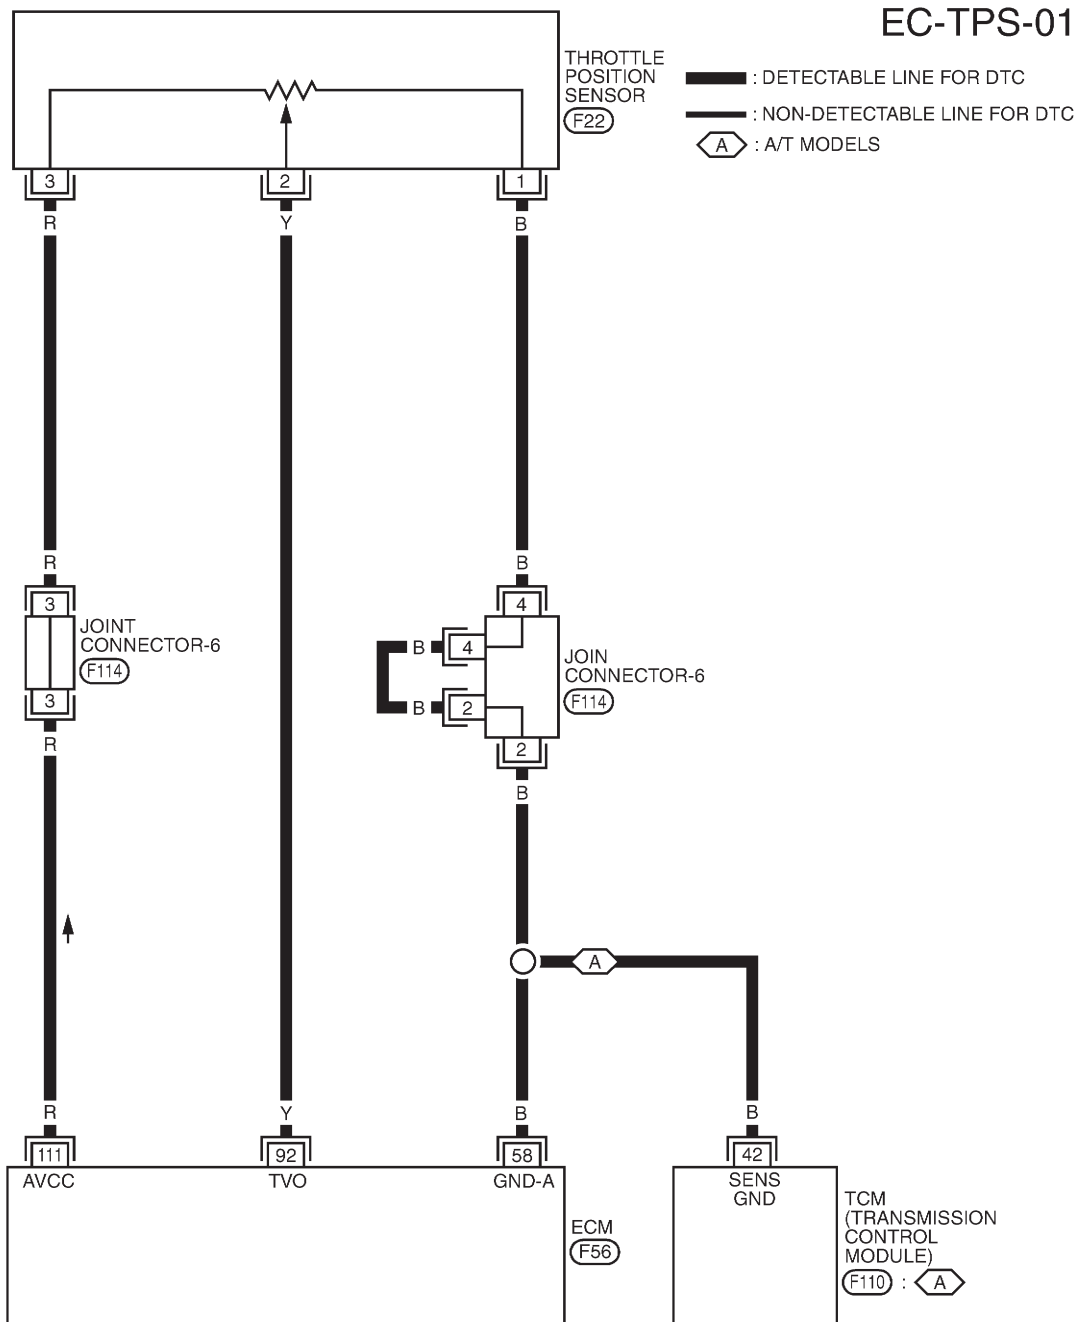

Diagnostic Procedure

NJE0085

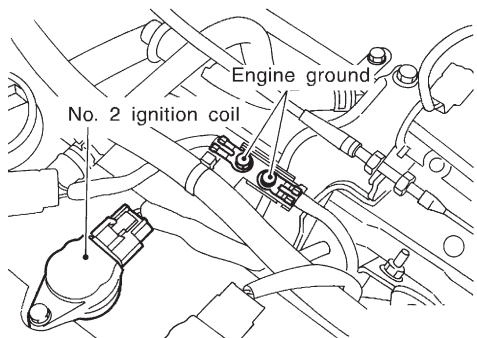1	RETIGHTEN GROUND SCREWS
<p>1. Turn ignition switch "OFF". 2. Loosen and retighten engine ground screws.</p>	
 <p>The diagram shows a close-up of the engine's ignition system. It labels the 'No. 2 ignition coil' and 'Engine ground' screws. The coil is connected to a spark plug, and the ground screws are shown being tightened to ensure a proper electrical connection to the engine block.</p>	
JEF104Y	
<p>▶ GO TO 2.</p>	

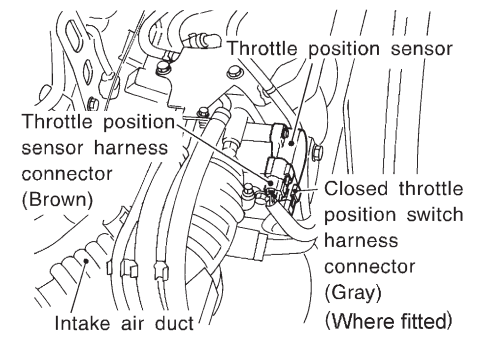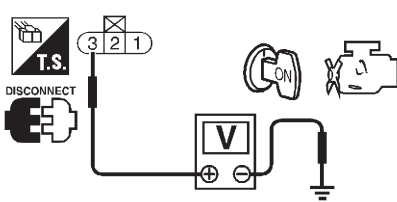2	CHECK POWER SUPPLY
<p>1. Disconnect throttle position sensor harness connector.</p>	
 <p>The diagram shows the throttle position sensor (TPS) mounted on the throttle body. It labels the 'Throttle position sensor', 'Throttle position sensor harness connector (Brown)', 'Closed throttle position switch harness connector (Gray) (Where fitted)', and 'Intake air duct'. The brown connector is shown disconnected from the sensor.</p>	
NEF309A	
<p>2. Turn ignition switch "ON". 3. Check voltage between terminal 3 and ground with CONSULT-II or tester.</p>	
 <p>The diagram shows a multimeter connected to terminal 3 of the disconnected TPS harness connector. The other lead of the multimeter is connected to ground. A 'DISCONNECT' symbol is shown next to the harness connector, and a 'T.S.' symbol is shown next to terminal 3. The multimeter is set to measure voltage (V).</p>	
Voltage: Approximately 5V	
SEF306X	
OK or NG	
OK	▶ GO TO 4.
NG	▶ GO TO 3.

3	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Joint connector-6 ● Harness for open or short between throttle position sensor terminal 3 and ECM terminal 111 	
<p>▶ Repair harness or connectors.</p>	

DTC P0120 THROTTLE POSITION SENSOR

QG

Diagnostic Procedure (Cont'd)

4		CHECK GROUND CIRCUIT
1. Turn ignition switch "OFF".		
2. Check harness continuity between throttle position sensor harness connector terminal 1 and engine ground. Refer to wiring diagram. Continuity should exist.		
3. Also check harness for short to ground and short to power.		
OK or NG		
OK	▶	GO TO 6.
NG	▶	GO TO 5.


5		DETECT MALFUNCTIONING PART
Check the following.		
<ul style="list-style-type: none">● Joint connector-6● Harness for open or short between ECM terminal 58 and throttle position sensor● Harness for open or short between ECM terminal 58 and TCM (Transmission Control Module)		
	▶	Repair open circuit or short to ground or short to power in harness or connectors.

6		CHECK INPUT SIGNAL CIRCUIT
1. Disconnect ECM harness connector.		
2. Check harness continuity between ECM terminal 92 and throttle position sensor harness connector terminal 2. Refer to wiring diagram. Continuity should exist.		
3. Also check harness for short to ground and short to power.		
OK or NG		
OK	▶	GO TO 7.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

7		CHECK THROTTLE POSITION SENSOR
Refer to "Component Inspection", EC-174.		
OK or NG		
OK	▶	GO TO 8.
NG	▶	Replace throttle position sensor. To adjust it, perform "Basic Inspection", EC-98.

8		CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.		
	▶	INSPECTION END

Component Inspection

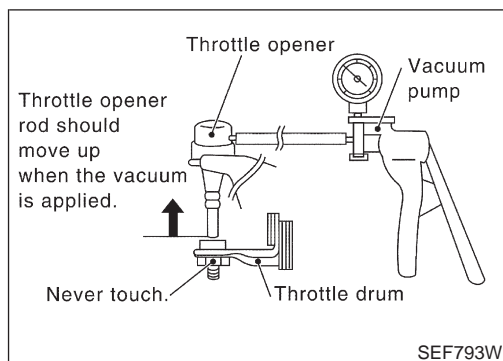

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm
COOLANT TEMP/S	XXX °C
THRTL POS SEN	XXX V

SEF179Y

Component Inspection THROTTLE POSITION SENSOR Models with Throttle Opener

NJE00086
NJE00086S01
NJE00086S0101

① With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Stop engine (ignition switch OFF).
- 3) Remove the vacuum hose connected to the throttle opener.
- 4) Connect suitable vacuum hose to the vacuum pump and the opener.
- 5) Apply vacuum [more than -40.0 kPa (-400 mbar, -300 mmHg, -11.81 inHg)] until the throttle drum becomes free from the rod of the throttle opener.
- 6) Turn ignition switch ON.
- 7) Select "DATA MONITOR" mode with CONSULT-II.
- 8) Check voltage of "THRTL POS SEN" under the following conditions.



NOTE:

Voltage measurement must be made with throttle position sensor installed in vehicle.

Throttle valve conditions	Voltage (V)
Completely closed	0.15 - 0.85 (a)
Partially open	Between (a) and (b)
Completely open	3.5 - 4.7 (b)

If NG, adjust closed throttle position switch. Refer to "Basic Inspection", EC-98.

- 9) If it is impossible to adjust closed throttle position switch in "Basic Inspection", replace throttle position sensor.

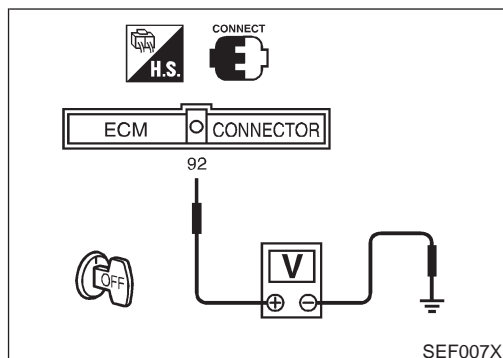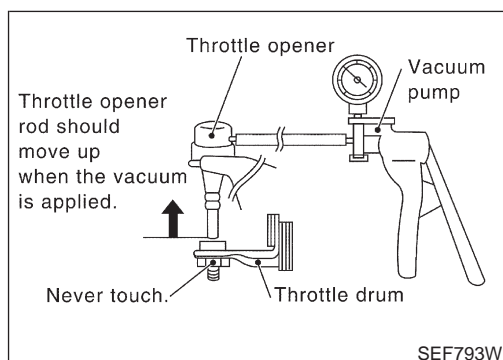

⊗ Without CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Stop engine (ignition switch OFF).
- 3) Remove the vacuum hose connected to the throttle opener.
- 4) Connect suitable vacuum hose to the vacuum pump and the opener.
- 5) Apply vacuum [more than -40.0 kPa (-400 mbar, -300 mmHg, -11.81 inHg)] until the throttle drum becomes free from the rod of the throttle opener.
- 6) Turn ignition switch ON.
- 7) Check voltage between ECM terminal 92 (Throttle position sensor signal) and ground under the following conditions.

NOTE:

Voltage measurement must be made with throttle position sensor installed in vehicle.

Throttle valve conditions	Voltage (V)
Completely closed	0.15 - 0.85 (a)
Partially open	Between (a) and (b)
Completely open	3.5 - 4.7 (b)

DTC P0120 THROTTLE POSITION SENSOR

QG

Component Inspection (Cont'd)

If NG, adjust closed throttle position switch. Refer to "Basic Inspection", EC-98.

- 8) If it is impossible to adjust closed throttle position switch in "Basic Inspection", replace throttle position sensor.

DATA MONITOR	
MONITORING	NO FAIL
ENG SPEED	XXX rpm
COOLANT TEMP/S	XXX °C
THRTL POS SEN	XXX V

NEF069A

Models without Throttle Opener

NJEC0086S0102

With CONSULT-II

- 1) Stop engine (ignition switch OFF).
- 2) Turn ignition switch ON.
- 3) Select "DATA MONITOR" mode with CONSULT-II.
- 4) Check voltage of "THRTL POS SEN" under the following conditions.


NOTE:

Voltage measurement must be made with throttle position sensor installed in vehicle.

Throttle valve conditions	Voltage (V)
Completely closed	0.35 - 0.65 (a)
Partially open	Between (a) and (b)
Completely open	3.7 - 4.5 (b)

If NG, adjust closed throttle position switch. Refer to "Basic Inspection", EC-98.

- 5) If it is impossible to adjust closed throttle position sensor idle position in "Basic Inspection", replace throttle position sensor.

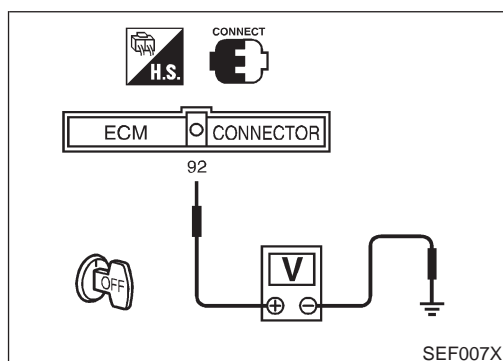

Without CONSULT-II

- 1) Stop engine (ignition switch OFF).
- 2) Turn ignition switch ON.
- 3) Check voltage between ECM terminal 92 (Throttle position sensor signal) and ground under the following conditions.

NOTE:

Voltage measurement must be made with throttle position sensor installed in vehicle.

Throttle valve conditions	Voltage (V)
Completely closed	0.35 - 0.65 (a)
Partially open	Between (a) and (b)
Completely open	3.7 - 4.5 (b)


If NG, adjust throttle position sensor idle position. Refer to "Basic Inspection", EC-98.

- 4) If it is impossible to adjust throttle position sensor idle position in "Basic Inspection", replace throttle position sensor.

DTC P0130 HEATED OXYGEN SENSOR 1 (FRONT) (CIRCUIT)

QG


Component Description

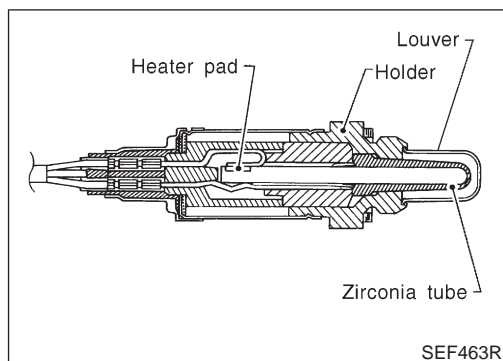

Component Description

NJEC0094

The heated oxygen sensor 1 (front) is placed into the exhaust manifold. It detects the amount of oxygen in the exhaust gas compared to the outside air. The heated oxygen sensor 1 (front) has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The heated oxygen sensor 1 (front) signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

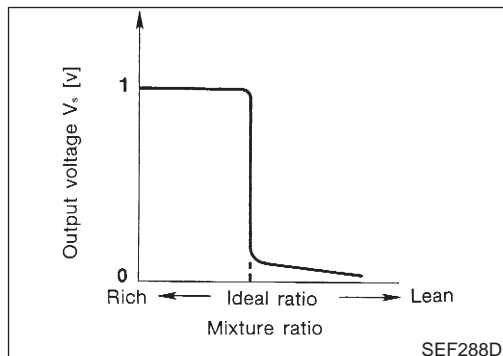

CONSULT-II Reference Value in Data Monitor Mode

NJEC0095

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
HO2S1 (B1)			0 - 0.3V ↔ Approx. 0.6 - 1.0V
HO2S1 MNTR (B1)	<ul style="list-style-type: none"> Engine: After warming up 	Maintaining engine speed at 2,000 rpm	LEAN ↔ RICH Changes more than 5 times during 10 seconds.

ECM Terminals and Reference Value

NJEC0096

Specification data are reference values and are measured between each terminal and ground.

CAUTION:


Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
62	W	Heated oxygen sensor 1 (front)	<p>[Engine is running]</p> <ul style="list-style-type: none"> After warming up to normal operating temperature and engine speed is 2,000 rpm 	<p>0 - Approximately 1.0V</p> <p style="text-align: right;">SEF008W</p>

DTC P0130 HEATED OXYGEN SENSOR 1 (FRONT) (CIRCUIT)

QG

On Board Diagnosis Logic

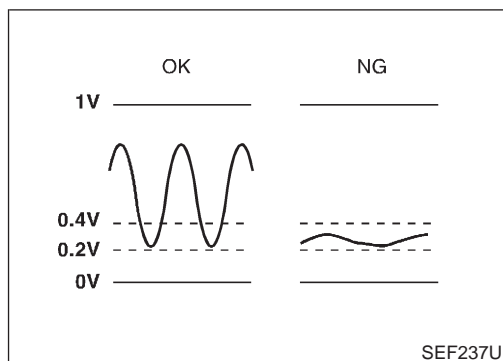

On Board Diagnosis Logic

NJEC0097

Under the condition in which the heated oxygen sensor 1 (front) signal is not input, the ECM circuits will read a continuous approximately 0.3V. Therefore, for this diagnosis, the time that output voltage is within 200 to 400 mV range is monitored, and the diagnosis checks that this time is not inordinately long.

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0130 0130	<ul style="list-style-type: none"> The voltage from the sensor is constantly approx. 0.3V. 	<ul style="list-style-type: none"> Harness or connectors (The sensor circuit is open or shorted.) Heated oxygen sensor 1 (front)

5

P0130 S102 CH1 (R1)	
HORS CONDITION	
CONTROLE	
TR/MN MOT	XXX TR/MN
PLAN CAR BASE	XXX msec
CAP PAPILLON	XXX V
CAP VIT VEH	XXX km/h

SEF825Y

DTC Confirmation Procedure

NJEC0098

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 9 seconds before conducting the next test.

TESTING CONDITION:

- Before performing the following procedure, confirm that battery voltage is more than 11V at idle.

With CONSULT-II

- Start engine and warm it up to normal operating temperature.
- Select "HO2S1 (B1) P0130" of "HO2S1 (B1)" in "DTC WORK SUPPORT" mode with CONSULT-II.
- Touch "START".
- Let it idle for at least 3 minutes.

NOTE:

Never raise engine speed above 3,200 rpm after this step. If the engine speed limit is exceeded, return to step 4.

- When the following conditions are met, "TESTING" will be displayed on the CONSULT-II screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take approximately 10 to 60 seconds.)

ENG SPEED	1,700 - 2,600 rpm
Vehicle speed	64 - 100 km/h (40 - 62 MPH)
B/FUEL SCHDL	3.0 - 5.2 msec
Selector lever	Suitable position

If "TESTING" is not displayed after 5 minutes, retry from step 2.

- Make sure that "OK" is displayed after touching "SELF-DIAG

5

P0130 S102 CH1 (R1)	
TEST EN COURS	
CONTROLE	
TR/MN MOT	XXX TR/MN
PLAN CAR BASE	XXX msec
CAP PAPILLON	XXX V
CAP VIT VEH	XXX km/h

SEF826Y

5

HO2S1 (B1) P0130	
COMPLETED	


SEF645Y

DTC P0130 HEATED OXYGEN SENSOR 1 (FRONT) (CIRCUIT)

QG

Overall Function Check

RESULTS". If "NG" is displayed, refer to "Diagnostic Procedure", EC-180.

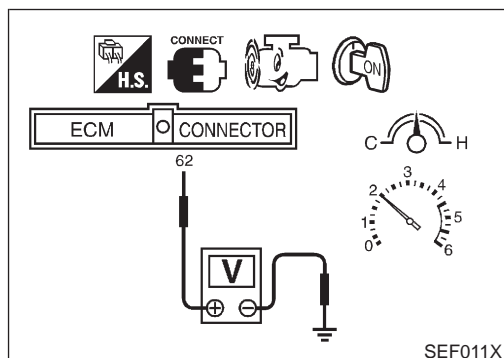

Overall Function Check

Use this procedure to check the overall function of the heated oxygen sensor 1 (front) circuit. During this check, a 1st trip DTC might not be confirmed. NJEC0099

⊗ Without CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminal 62 (HO2S1 signal) and engine ground.
- 3) Check the following with engine speed held at 2,000 rpm constant under no load.
 - The voltage does not remain in the range of 0.2 - 0.4V.
- 4) If NG, go to "Diagnostic Procedure", EC-180.

DTC P0130 HEATED OXYGEN SENSOR 1 (FRONT) (CIRCUIT)



QG




Wiring Diagram

Wiring Diagram

NJEC0100

EC-O2S1B1-01

 : DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

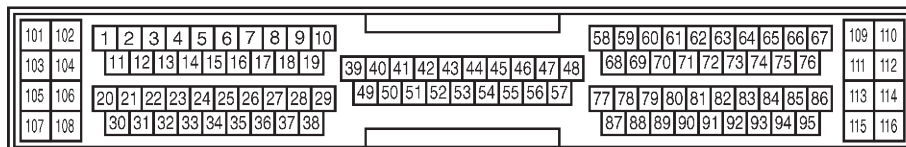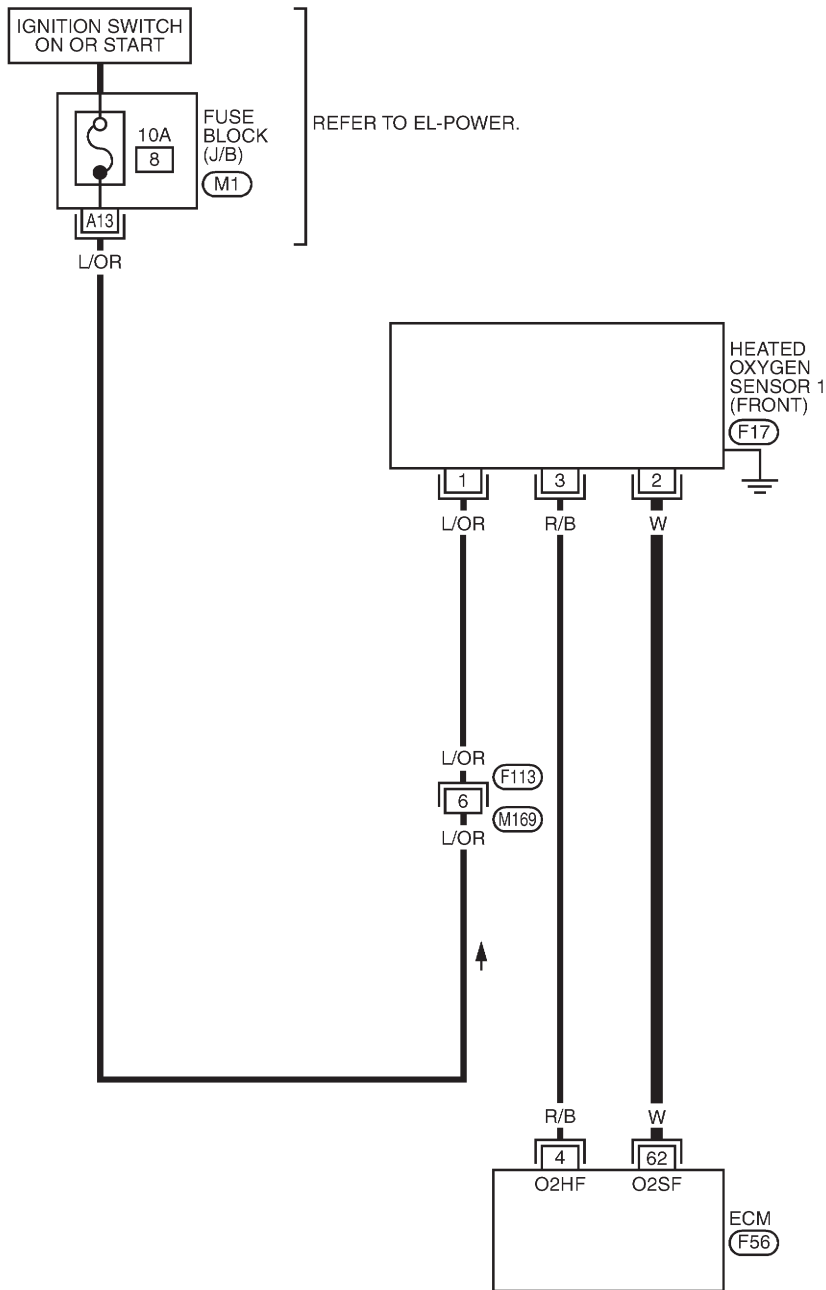

F56 GY 

REFER TO THE FOLLOWING.

(M1) - FUSE BLOCK- JUNCTION BOX (J/B)

YEC967



DTC P0130 HEATED OXYGEN SENSOR 1 (FRONT) (CIRCUIT)

QG

Diagnostic Procedure

Diagnostic Procedure

NJEC0101

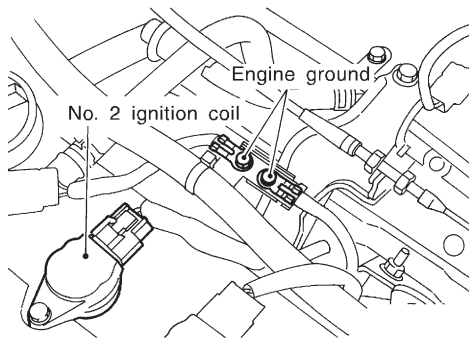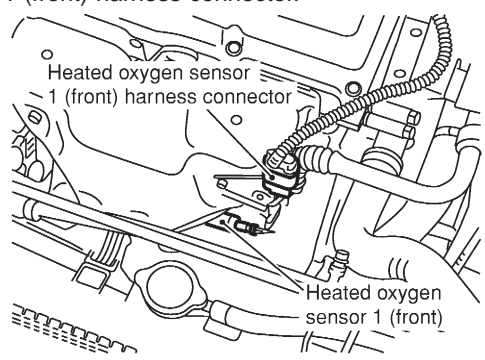1	INSPECTION START		
		<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Loosen and retighten engine ground screws. 	
			
		<ol style="list-style-type: none"> 3. Disconnect heated oxygen sensor 1 (front) harness connector. 	JEF104Y
			SEF012XA
▶		GO TO 2.	

2	CHECK INPUT SIGNAL CIRCUIT		
		<ol style="list-style-type: none"> 1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal 62 and heated oxygen sensor 1 (front) harness connector terminal 2. Refer to wiring diagram. Continuity should exist. 3. Check harness continuity between ECM terminal 62 (or terminal 2) and ground. Continuity should not exist. 4. Also check harness for short to power. 	
		OK or NG	
OK ▶		GO TO 3.	
NG ▶		Repair open circuit or short to ground or short to power in harness or connectors.	

3	CHECK HEATED OXYGEN SENSOR 1 (FRONT)		
		Refer to "Component Inspection", EC-181.	
		OK or NG	
OK ▶		GO TO 4.	
NG ▶		Replace heated oxygen sensor 1 (front).	

4	CHECK INTERMITTENT INCIDENT		
		Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.	
▶		INSPECTION END	

4	DATA MONITOR	
	MONITOR	NO DTC
	ENG SPEED	XXX rpm
	MAS A/F SE-B1	XXX V
	COOLANT TEMP/S	XXX °C
	HO2S1 (B1)	XXX V
	HO2S1 MNTR (B1)	LEAN

SEF646Y

5	Bank 1	cycle	1 2 3 4 5
		HO2S1 MNTR (B1)	R-L-R-L-R-L-R-L-R-L-R
5	Bank 2	cycle	1 2 3 4 5
		HO2S1 MNTR (B2)	R-L-R-L-R-L-R-L-R-L-R

R means HO2S1
MNTR (B1)/(B2) indicates RICH
L means HO2S1
MNTR (B1)/(B2) indicates LEAN

SEF647Y

Component Inspection HEATED OXYGEN SENSOR 1 (FRONT)



NJEC0102
NJEC0102S01

④ With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Select "MANU TRIG" in "DATA MONITOR" mode, and select "HO2S1 (B1)" and "HO2S1 MNTR (B1)".
- 3) Hold engine speed at 2,000 rpm under no load during the following steps.
- 4) Touch "RECORD" on CONSULT-II screen.
- 5) Check the following.
 - "HO2S1 MNTR (B1)" in "DATA MONITOR" mode changes from "RICH" to "LEAN" to "RICH" 5 times in 10 seconds. 5 times (cycles) are counted as shown below:
R = "HO2S1 MNTR (B1)", "RICH"
L = "HO2S1 MNTR (B1)", "LEAN"
 - "HO2S1 (B1)" voltage goes above 0.6V at least once.
 - "HO2S1 (B1)" voltage goes below 0.3V at least once.
 - "HO2S1 (B1)" voltage never exceeds 1.0V.

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool and approved anti-seize lubricant.

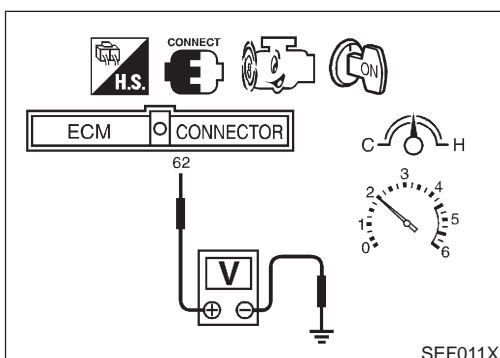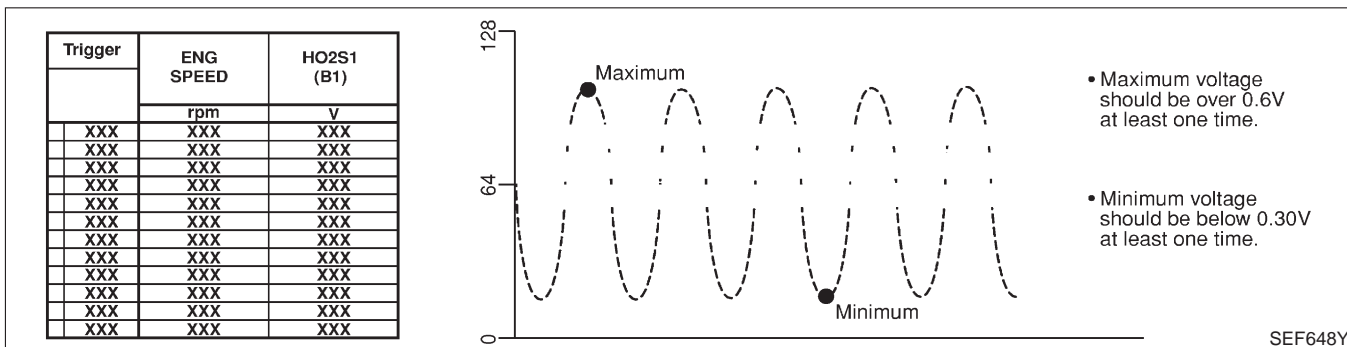

⊗ Without CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminal 62 (HO2S1 signal) and engine ground.
- 3) Check the following with engine speed held at 2,000 rpm constant under no load.
 - The voltage fluctuates between 0 to 0.3V and 0.6 to 1.0V more than 5 times within 10 seconds.
 - The maximum voltage is over 0.6V at least one time.
 - The minimum voltage is below 0.3V at least one time.
 - The voltage never exceeds 1.0V.

DTC P0130 HEATED OXYGEN SENSOR 1 (FRONT) (CIRCUIT)

QG

Component Inspection (Cont'd)

1 time: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V

2 times: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V


CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool and approved anti-seize lubricant.

DTC P0131 HEATED OXYGEN SENSOR 1 (FRONT) (LEAN SHIFT MONITORING)

QG


Component Description

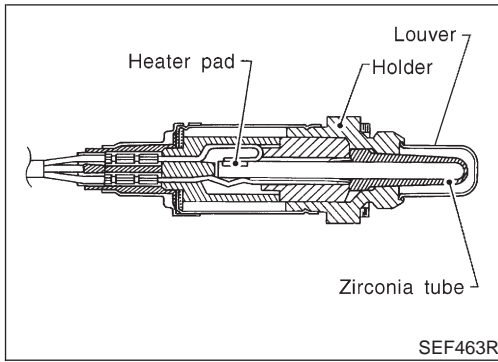

Component Description

NJEC0103

The heated oxygen sensor 1 (front) is placed into the exhaust manifold. It detects the amount of oxygen in the exhaust gas compared to the outside air. The heated oxygen sensor 1 (front) has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The heated oxygen sensor 1 (front) signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

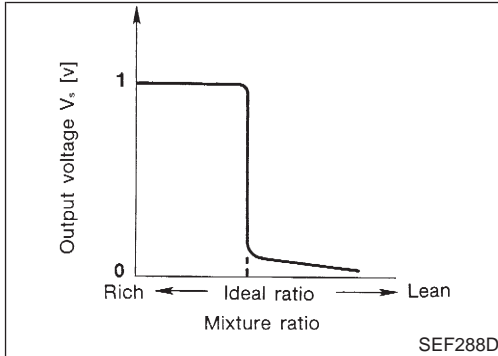

CONSULT-II Reference Value in Data Monitor Mode

NJEC0104

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
HO2S1 (B1)	Maintaining engine speed at 2,000 rpm	0 - 0.3V ↔ Approx. 0.6 - 1.0V
HO2S1 MNTR (B1)		LEAN ↔ RICH Changes more than 5 times during 10 seconds.

ECM Terminals and Reference Value

NJEC0105

Specification data are reference values and are measured between each terminal and ground.

CAUTION:


Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
62	W	Heated oxygen sensor 1 (front)	[Engine is running] ● After warming up to normal operating temperature and engine speed is 2,000 rpm	0 - Approximately 1.0V <p style="text-align: right;">SEF008W</p>

DTC P0131 HEATED OXYGEN SENSOR 1 (FRONT) (LEAN SHIFT MONITORING)

QG

On Board Diagnosis Logic

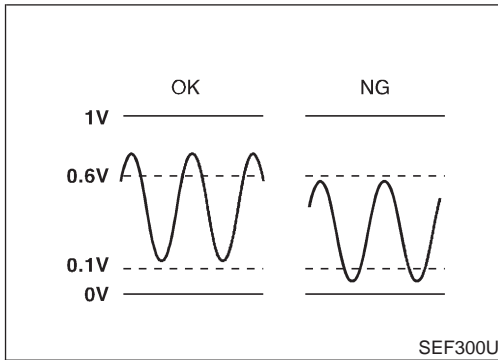

On Board Diagnosis Logic

NJEC0106

To judge the malfunction, the output from the heated oxygen sensor 1 (front) is monitored to determine whether the “rich” output is sufficiently high and whether the “lean” output is sufficiently low. When both the outputs are shifting to the lean side, the malfunction will be detected.

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0131 0131	<ul style="list-style-type: none"> The maximum and minimum voltages from the sensor are not reached to the specified voltages. 	<ul style="list-style-type: none"> Heated oxygen sensor 1 (front) Heated oxygen sensor 1 heater (front) Fuel pressure Injectors Intake air leaks

6	<table border="1"> <tr> <td colspan="2" style="text-align: center;">CH S/02 CH1 (R1) P0131</td> </tr> <tr> <td colspan="2" style="text-align: center;">HORS CONDITION</td> </tr> <tr> <td colspan="2" style="text-align: center;">CONTROLE</td> </tr> <tr> <td>TR/MN MOT</td> <td>XXX TR/MN</td> </tr> <tr> <td>PLAN CAR BASE</td> <td>XXX msec</td> </tr> <tr> <td>CAP PAPILLON</td> <td>XXX V</td> </tr> <tr> <td>CAP VIT VEH</td> <td>XXX km/h</td> </tr> </table>	CH S/02 CH1 (R1) P0131		HORS CONDITION		CONTROLE		TR/MN MOT	XXX TR/MN	PLAN CAR BASE	XXX msec	CAP PAPILLON	XXX V	CAP VIT VEH	XXX km/h
CH S/02 CH1 (R1) P0131															
HORS CONDITION															
CONTROLE															
TR/MN MOT	XXX TR/MN														
PLAN CAR BASE	XXX msec														
CAP PAPILLON	XXX V														
CAP VIT VEH	XXX km/h														

SEF827Y

DTC Confirmation Procedure

NJEC0107

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch “OFF” and wait at least 9 seconds before conducting the next test.

TESTING CONDITION:

- Always perform at a temperature above -10°C (14°F).
- Before performing the following procedure, confirm that battery voltage is more than 11V at idle.

With CONSULT-II

- Start engine and warm it up to normal operating temperature.
- Stop engine and wait at least 9 seconds.
- Turn ignition switch “ON” and select “HO2S1 (B1) P0131” of “HO2S1” in “DTC WORK SUPPORT” mode with CONSULT-II.
- Touch “START”.
- Start engine and let it idle for at least 3 minutes.

NOTE:

Never raise engine speed above 3,200 rpm after this step. If the engine speed limit is exceeded, return to step 5.

- When the following conditions are met, “TESTING” will be displayed on the CONSULT-II screen. Maintain the conditions continuously until “TESTING” changes to “COMPLETED”. (It will take approximately 50 seconds or more.)

ENG SPEED	1,700 - 2,600 rpm
Vehicle speed	64 - 100 km/h (40 - 62 MPH)
B/FUEL SCHDL	3.0 - 5.2 msec
Selector lever	Suitable position

If “TESTING” is not displayed after 5 minutes, retry from step 2.

6	<table border="1"> <tr> <td colspan="2" style="text-align: center;">HO2S1 (B1) P0131</td> </tr> <tr> <td colspan="2" style="text-align: center;">TESTING</td> </tr> <tr> <td colspan="2" style="text-align: center;">MONITOR</td> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>B/FUEL SCHDL</td> <td>XXX msec</td> </tr> <tr> <td>THRTL POS SEN</td> <td>XXX V</td> </tr> <tr> <td>VHCL SPEED SE</td> <td>XXX km/h</td> </tr> </table>	HO2S1 (B1) P0131		TESTING		MONITOR		ENG SPEED	XXX rpm	B/FUEL SCHDL	XXX msec	THRTL POS SEN	XXX V	VHCL SPEED SE	XXX km/h
HO2S1 (B1) P0131															
TESTING															
MONITOR															
ENG SPEED	XXX rpm														
B/FUEL SCHDL	XXX msec														
THRTL POS SEN	XXX V														
VHCL SPEED SE	XXX km/h														

SEF828Y

6	<table border="1"> <tr> <td colspan="2" style="text-align: center;">HO2S1 (B1) P0131</td> </tr> <tr> <td colspan="2" style="text-align: center;">COMPLETED</td> </tr> </table>	HO2S1 (B1) P0131		COMPLETED	
HO2S1 (B1) P0131					
COMPLETED					


SEF651Y

DTC P0131 HEATED OXYGEN SENSOR 1 (FRONT) (LEAN SHIFT MONITORING)

QG

DTC Confirmation Procedure (Cont'd)

- 7) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "Diagnostic Procedure", EC-185.

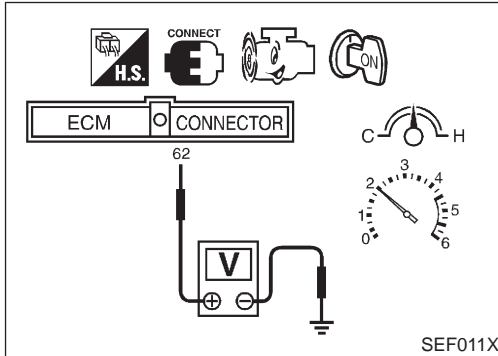

Overall Function Check

Use this procedure to check the overall function of the heated oxygen sensor 1 (front) circuit. During this check, a 1st trip DTC might not be confirmed. NJEC0108

⊗ Without CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminal 62 (HO2S1 signal) and engine ground.
- 3) Check the following with engine speed held at 2,000 rpm constant under no load.
 - The maximum voltage is over 0.6V at least one time.
 - The minimum voltage is over 0.1V at least one time.
- 4) If NG, go to "Diagnostic Procedure", EC-185.

Diagnostic Procedure

NJEC0109

1	RETIGHTEN HEATED OXYGEN SENSOR 1 (FRONT)
1. Turn ignition switch "OFF".	
2. Loosen and retighten heated oxygen sensor 1 (front).	
Tightening torque: 40 - 60 N·m (4.1 - 6.1 kg·m, 30 - 44 ft·lb)	
▶ GO TO 2.	

DTC P0131 HEATED OXYGEN SENSOR 1 (FRONT) (LEAN SHIFT MONITORING)

QG

Diagnostic Procedure (Cont'd)

2	CLEAR THE SELF-LEARNING DATA									
<p>Ⓟ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Select "SELF-LEARN CONTROL" in "WORK SUPPORT" mode with CONSULT-II. 3. Clear the self-learning control coefficient by touching "START". 										
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr> <th colspan="2" style="padding: 2px;">WORK SUPPORT</th> </tr> <tr> <td style="padding: 2px;">SELF-LEARNING CONT</td> <td style="padding: 2px; text-align: right;">B1 100%</td> </tr> <tr> <td colspan="2" style="height: 100px;"></td> </tr> <tr> <td colspan="2" style="text-align: center; padding: 2px;">CLEAR</td> </tr> </table>			WORK SUPPORT		SELF-LEARNING CONT	B1 100%			CLEAR	
WORK SUPPORT										
SELF-LEARNING CONT	B1 100%									
CLEAR										
SEF215Z										
<p>4. Run engine for at least 10 minutes at idle speed. Is the 1st trip DTC P0171 detected? Is it difficult to start engine?</p>										
<p>ⓧ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Turn ignition switch "OFF". 3. Disconnect mass air flow sensor harness connector, and restart and run engine for at least 5 seconds at idle speed. 4. Stop engine and reconnect mass air flow sensor harness connector. 5. Make sure 1st trip DTC P0100 is displayed. 6. Erase the 1st trip DTC memory. Refer to "How to Erase Emission-related Diagnostic Information", EC-68. 7. Make sure DTC P0000 is displayed. 8. Run engine for at least 10 minutes at idle speed. <p>Is the 1st trip DTC P0171 detected? Is it difficult to start engine?</p> <p style="text-align: center;">Yes or No</p>										
Yes	▶	Perform trouble diagnosis for DTC P0171. Refer to EC-248.								
No	▶	GO TO 3.								

3	CHECK HEATED OXYGEN SENSOR 1 HEATER (FRONT)	
Refer to "Component Inspection", EC-213.		
OK or NG		
OK	▶	GO TO 4.
NG	▶	Replace heated oxygen sensor 1 (front).

4	CHECK HEATED OXYGEN SENSOR 1 (FRONT)	
Refer to "Component Inspection", EC-187.		
OK or NG		
OK	▶	GO TO 5.
NG	▶	Replace heated oxygen sensor 1 (front).

5	CHECK INTERMITTENT INCIDENT	
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144. Refer to "Wiring Diagram", EC-179, for circuit.		
▶		INSPECTION END

DTC P0131 HEATED OXYGEN SENSOR 1 (FRONT) (LEAN SHIFT MONITORING)

QG

Component Inspection

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm
MAS A/F SE-B1	XXX V
COOLANT TEMP/S	XXX °C
HO2S1 (B1)	XXX V
HO2S1 MNTR (B1)	LEAN

SEF646Y

Bank 1
 cycle | 1 | 2 | 3 | 4 | 5 |
 HO2S1 MNTR (B1) R-L-R-L-R-L-R-L-R-L-R

Bank 2
 cycle | 1 | 2 | 3 | 4 | 5 |
 HO2S1 MNTR (B2) R-L-R-L-R-L-R-L-R-L-R

R means HO2S1
 MNTR (B1)/(B2) indicates RICH
 L means HO2S1
 MNTR (B1)/(B2) indicates LEAN

SEF647Y

Component Inspection HEATED OXYGEN SENSOR 1 (FRONT)

NJEC0110

NJEC0110S02


④ With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Select "MANU TRIG" in "DATA MONITOR" mode, and select "HO2S1 (B1)" and "HO2S1 MNTR (B1)".
- 3) Hold engine speed at 2,000 rpm under no load during the following steps.
- 4) Touch "RECORD" on CONSULT-II screen.
- 5) Check the following.
 - "HO2S1 MNTR (B1)" in "DATA MONITOR" mode changes from "RICH" to "LEAN" to "RICH" 5 times in 10 seconds. 5 times (cycles) are counted as shown below:
 R = "HO2S1 MNTR (B1)", "RICH"
 L = "HO2S1 MNTR (B1)", "LEAN"
 - "HO2S1 (B1)" voltage goes above 0.6V at least once.
 - "HO2S1 (B1)" voltage goes below 0.3V at least once.
 - "HO2S1 (B1)" voltage never exceeds 1.0V.

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool and approved anti-seize lubricant.


Trigger	ENG SPEED	HO2S1 (B1)
	rpm	v
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX

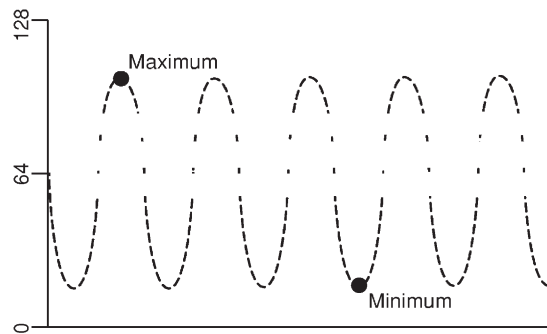

• Maximum voltage should be over 0.6V at least one time.

• Minimum voltage should be below 0.30V at least one time.

SEF648Y

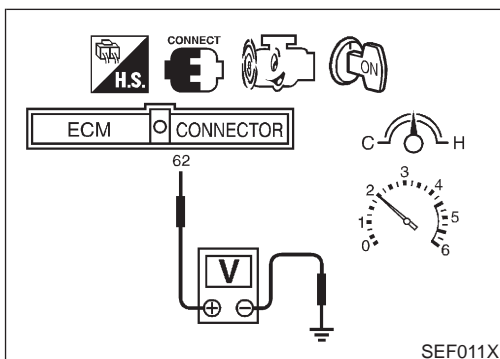

SEF011X

⊗ Without CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminal 62 (HO2S1 signal) and engine ground.
- 3) Check the following with engine speed held at 2,000 rpm constant under no load.
 - The voltage fluctuates between 0 to 0.3V and 0.6 to 1.0V more than 5 times within 10 seconds.
 - The maximum voltage is over 0.6V at least one time.
 - The minimum voltage is below 0.3V at least one time.
 - The voltage never exceeds 1.0V.

DTC P0131 HEATED OXYGEN SENSOR 1 (FRONT) (LEAN SHIFT MONITORING)

QG

Component Inspection (Cont'd)

1 time: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V

2 times: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V


CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool and approved anti-seize lubricant.

DTC P0132 HEATED OXYGEN SENSOR 1 (FRONT) (RICH SHIFT MONITORING)

QG


Component Description

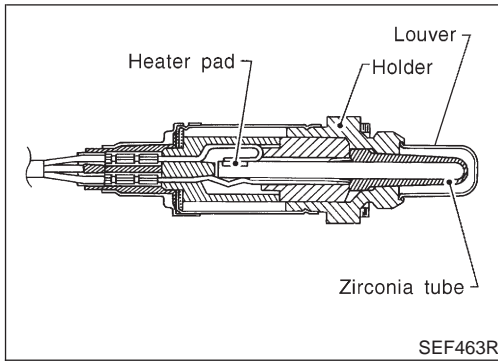

Component Description

NJEC0111

The heated oxygen sensor 1 (front) is placed into the exhaust manifold. It detects the amount of oxygen in the exhaust gas compared to the outside air. The heated oxygen sensor 1 (front) has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The heated oxygen sensor 1 (front) signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

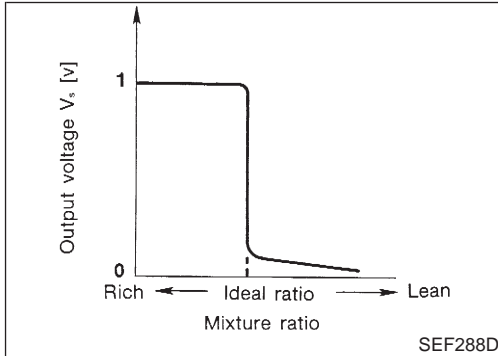

CONSULT-II Reference Value in Data Monitor Mode

NJEC0112

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
HO2S1 (B1)	<ul style="list-style-type: none"> ● Engine: After warming up 	0 - 0.3V ←→ Approx. 0.6 - 1.0V
HO2S1 MNTR (B1)		LEAN ←→ RICH Changes more than 5 times during 10 seconds.

ECM Terminals and Reference Value

NJEC0113

Specification data are reference values and are measured between each terminal and ground.

CAUTION:


Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
62	W	Heated oxygen sensor 1 (front)	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● After warming up to normal operating temperature and engine speed is 2,000 rpm 	<p>0 - Approximately 1.0V</p> <p style="text-align: right;">SEF008W</p>

DTC P0132 HEATED OXYGEN SENSOR 1 (FRONT) (RICH SHIFT MONITORING)

QG

On Board Diagnosis Logic

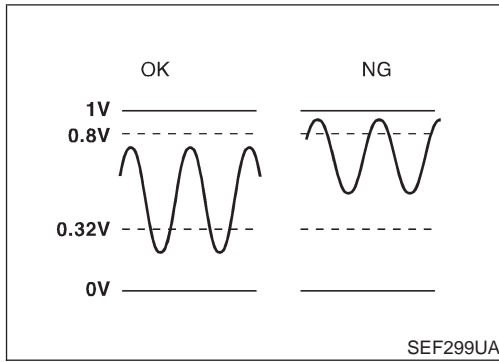

On Board Diagnosis Logic

NJEC0114

To judge the malfunction, the output from the heated oxygen sensor 1 (front) is monitored to determine whether the “rich” output is sufficiently high. The “lean” output is sufficiently low. When both the outputs are shifting to the rich side, the malfunction will be detected.

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0132 0132	<ul style="list-style-type: none"> The maximum and minimum voltages from the sensor are beyond the specified voltages. 	<ul style="list-style-type: none"> Heated oxygen sensor 1 (front) Heated oxygen sensor 1 heater (front) Fuel pressure Injectors

6

HO2S1 (B1) P0132	
OUT OF CONDITION	
MONITOR	
ENG SPEED	XXX rpm
B/FUEL SCHDL	XXX msec
THRTL POS SEN	XXX V
VHCL SPEED SE	XXX km/h

SEF829Y

6

HO2S1 (B1) P0132	
TESTING	
MONITOR	
ENG SPEED	XXX rpm
B/FUEL SCHDL	XXX msec
THRTL POS SEN	XXX V
VHCL SPEED SE	XXX km/h

SEF830Y

6

HO2S1 (B1) P0132	
COMPLETED	

SEF655Y

DTC Confirmation Procedure

NJEC0115

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch “OFF” and wait at least 9 seconds before conducting the next test.

TESTING CONDITION:

- Always perform at a temperature above -10°C (14°F).
- Before performing the following procedure, confirm that battery voltage is more than 11V at idle.

With CONSULT-II

- Start engine and warm it up to normal operating temperature.
- Stop engine and wait at least 9 seconds.
- Turn ignition switch “ON” and select “HO2S1 (B1) P0132” of “HO2S1” in “DTC WORK SUPPORT” mode with CONSULT-II.
- Touch “START”.
- Start engine and let it idle for at least 3 minutes.

NOTE:

Never raise engine speed above 3,200 rpm after this step. If the engine speed limit is exceeded, return to step 5.

- When the following conditions are met, “TESTING” will be displayed on the CONSULT-II screen. Maintain the conditions continuously until “TESTING” changes to “COMPLETED”. (It will take approximately 50 seconds or more.)

ENG SPEED	1,700 - 2,600 rpm
Vehicle speed	64 - 100 km/h (40 - 62 MPH)
B/FUEL SCHDL	3.0 - 5.2 msec
Selector lever	Suitable position


If “TESTING” is not displayed after 5 minutes, retry from step 2.

DTC P0132 HEATED OXYGEN SENSOR 1 (FRONT) (RICH SHIFT MONITORING)

QG

DTC Confirmation Procedure (Cont'd)

- 7) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "Diagnostic Procedure", EC-191.

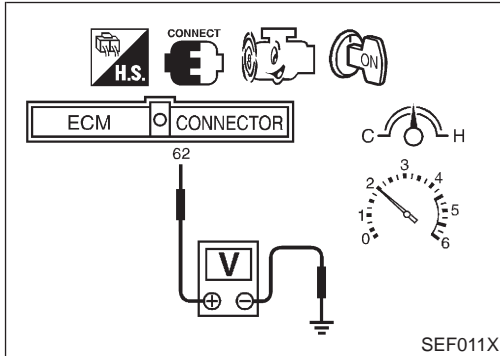

Overall Function Check

Use this procedure to check the overall function of the heated oxygen sensor 1 (front) circuit. During this check, a 1st trip DTC might not be confirmed. NJEC0116

Without CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminal 62 (HO2S1 signal) and engine ground.
- 3) Check the following with engine speed held at 2,000 rpm constant under no load.
 - The maximum voltage is below 0.8V at least one time.
 - The minimum voltage is below 0.3V at least one time.
- 4) If NG, go to "Diagnostic Procedure", EC-191.

Diagnostic Procedure



NJEC0117

1	RETIGHTEN HEATED OXYGEN SENSOR 1 (FRONT)
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Loosen and retighten heated oxygen sensor 1 (front). <b style="color: blue;">Tightening torque: <b style="color: blue;">40 - 60 N·m (4.1 - 6.1 kg·m, 30 - 44 ft·lb) 	
	GO TO 2.

DTC P0132 HEATED OXYGEN SENSOR 1 (FRONT) (RICH SHIFT MONITORING)

QG

Diagnostic Procedure (Cont'd)

2	CLEAR THE SELF-LEARNING DATA									
<p> With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Select "SELF-LEARN CONTROL" in "WORK SUPPORT" mode with CONSULT-II. 3. Clear the self-learning control coefficient by touching "START". 										
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr> <th colspan="2" style="padding: 2px;">WORK SUPPORT</th> </tr> <tr> <td style="padding: 2px;">SELF-LEARNING CONT</td> <td style="padding: 2px; text-align: right;">B1 100%</td> </tr> <tr> <td colspan="2" style="height: 100px;"></td> </tr> <tr> <td colspan="2" style="text-align: center; padding: 2px;">CLEAR</td> </tr> </table>			WORK SUPPORT		SELF-LEARNING CONT	B1 100%			CLEAR	
WORK SUPPORT										
SELF-LEARNING CONT	B1 100%									
CLEAR										
SEF215Z										
<ol style="list-style-type: none"> 4. Run engine for at least 10 minutes at idle speed. <p>Is the 1st trip DTC P0172 detected? Is it difficult to start engine?</p>										
<p> Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Turn ignition switch "OFF". 3. Disconnect mass air flow sensor harness connector, and restart and run engine for at least 5 seconds at idle speed. 4. Stop engine and reconnect mass air flow sensor harness connector. 5. Make sure 1st trip DTC P0100 is displayed. 6. Erase the 1st trip DTC memory. Refer to "How to Erase Emission-related Diagnostic Information", EC-68. 7. Make sure DTC P0000 is displayed. 8. Run engine for at least 10 minutes at idle speed. <p>Is the 1st trip DTC 0172 detected? Is it difficult to start engine?</p> <p style="text-align: center;">Yes or No</p>										
Yes	▶	Perform trouble diagnosis for DTC P0172. Refer to EC-255.								
No	▶	GO TO 3.								

3	CHECK HARNESS CONNECTOR	
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect heated oxygen sensor 1 (front) harness connector. 3. Check harness connector for water. <p>Water should not exit.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 4.
NG	▶	Repair or replace harness connector.

4	CHECK HEATED OXYGEN SENSOR 1 HEATER (FRONT)	
Refer to "Component Inspection", EC-213. <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 5.
NG	▶	Replace heated oxygen sensor 1 (front).

DTC P0132 HEATED OXYGEN SENSOR 1 (FRONT) (RICH SHIFT MONITORING)

QG

Diagnostic Procedure (Cont'd)

5	CHECK HEATED OXYGEN SENSOR 1 (FRONT)	
Refer to "Component Inspection", EC-193.		
OK or NG		
OK	▶	GO TO 6.
NG	▶	Replace heated oxygen sensor 1 (front).

6	CHECK INTERMITTENT INCIDENT	
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144. Refer to "Wiring Diagram", EC-179, for circuit.		
▶		INSPECTION END

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm
MAS A/F SE-B1	XXX V
COOLAN TEMP/S	XXX °C
HO2S1 (B1)	XXX V
HO2S1 MNTR (B1)	LEAN

SEF646Y

Bank 1	cycle	1 2 3 4 5							
	HO2S1 MNTR (B1)	R-L-R-L-R-L-R-L-R-L-R							
Bank 2	cycle	1 2 3 4 5							
	HO2S1 MNTR (B2)	R-L-R-L-R-L-R-L-R-L-R							
<p>R means HO2S1 MNTR (B1)/(B2) indicates RICH L means HO2S1 MNTR (B1)/(B2) indicates LEAN</p>									

SEF647Y

Component Inspection HEATED OXYGEN SENSOR 1 (FRONT)

NJEC0118

NJEC0118S02

Ⓜ With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Select "MANU TRIG" in "DATA MONITOR" mode, and select "HO2S1 (B1)" and "HO2S1 MNTR (B1)".
- 3) Hold engine speed at 2,000 rpm under no load during the following steps.
- 4) Touch "RECORD" on CONSULT-II screen.
- 5) Check the following.
 - "HO2S1 MNTR (B1)" in "DATA MONITOR" mode changes from "RICH" to "LEAN" to "RICH" 5 times in 10 seconds. 5 times (cycles) are counted as shown below:
 R = "HO2S1 MNTR (B1)", "RICH"
 L = "HO2S1 MNTR (B1)", "LEAN"
 - "HO2S1 (B1)" voltage goes above 0.6V at least once.
 - "HO2S1 (B1)" voltage goes below 0.3V at least once.
 - "HO2S1 (B1)" voltage never exceeds 1.0V.



CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool and approved anti-seize lubricant.

DTC P0132 HEATED OXYGEN SENSOR 1 (FRONT) (RICH SHIFT MONITORING)

QG

Component Inspection (Cont'd)

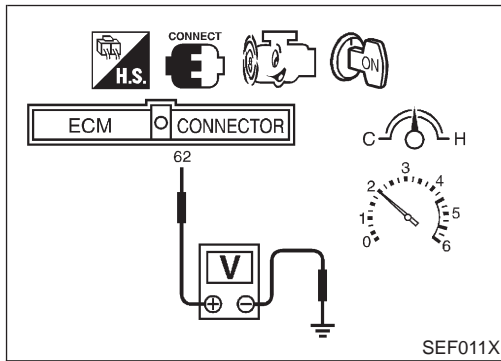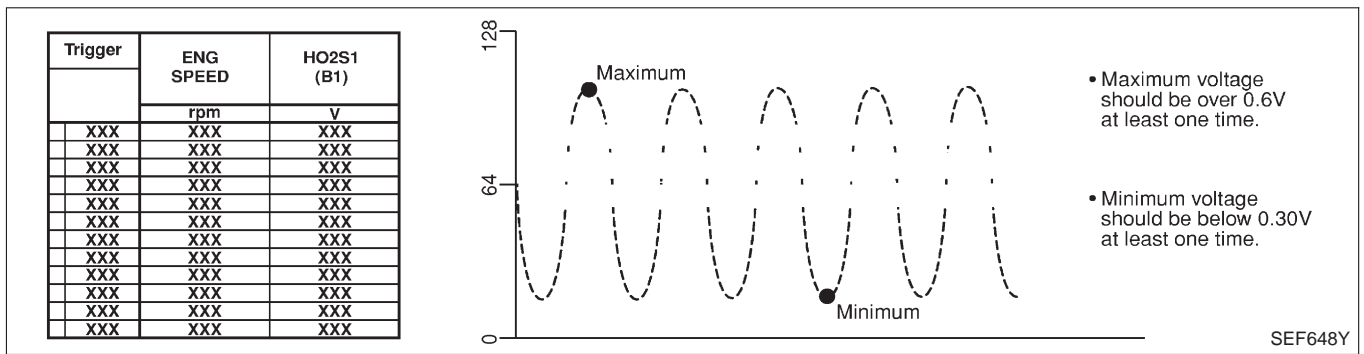

Without CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminal 62 (HO2S1 signal) and engine ground.
- 3) Check the following with engine speed held at 2,000 rpm constant under no load.
 - The voltage fluctuates between 0 to 0.3V and 0.6 to 1.0V more than 5 times within 10 seconds.
 - The maximum voltage is over 0.6V at least one time.
 - The minimum voltage is below 0.3V at least one time.
 - The voltage never exceeds 1.0V.
 - 1 time: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V
 - 2 times: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V


CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool and approved anti-seize lubricant.

DTC P0133 HEATED OXYGEN SENSOR 1 (FRONT) (RESPONSE MONITORING)

QG


Component Description

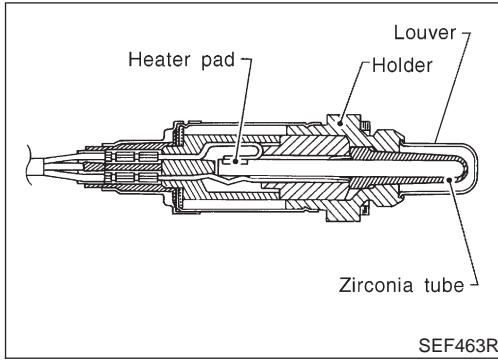

Component Description

NJEC0119

The heated oxygen sensor 1 (front) is placed into the exhaust manifold. It detects the amount of oxygen in the exhaust gas compared to the outside air. The heated oxygen sensor 1 (front) has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The heated oxygen sensor 1 (front) signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

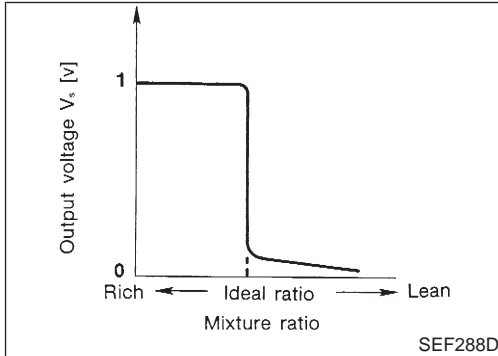

CONSULT-II Reference Value in Data Monitor Mode

NJEC0120

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
HO2S1 (B1)		0 - 0.3V ↔ Approx. 0.6 - 1.0V
HO2S1 MNTR (B1)	<ul style="list-style-type: none"> Engine: After warming up 	Maintaining engine speed at 2,000 rpm LEAN ↔ RICH Changes more than 5 times during 10 seconds.

ECM Terminals and Reference Value

NJEC0121

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.


TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
62	W	Heated oxygen sensor 1 (front)	[Engine is running] <ul style="list-style-type: none"> After warming up to normal operating temperature and engine speed is 2,000 rpm 	0 - Approximately 1.0V

SEF008W

DTC P0133 HEATED OXYGEN SENSOR 1 (FRONT) (RESPONSE MONITORING)

QG

On Board Diagnosis Logic

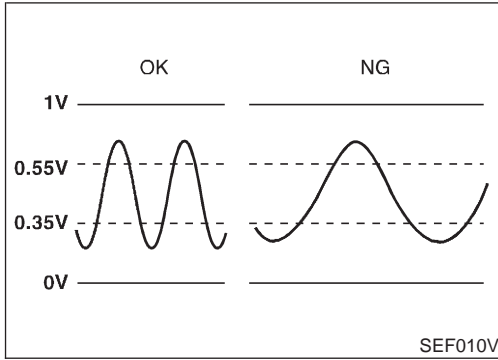

On Board Diagnosis Logic

NJEC0122

To judge the malfunction of heated oxygen sensor 1 (front), this diagnosis measures response time of heated oxygen sensor 1 (front) signal. The time is compensated by engine operating (speed and load), fuel feedback control constant, and heated oxygen sensor 1 (front) temperature index. Judgment is based on whether the compensated time [heated oxygen sensor 1 (front) cycling time index] is inordinately long or not.

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0133 0133	<ul style="list-style-type: none"> The response of the voltage signal from the sensor takes more than the specified time. 	<ul style="list-style-type: none"> Harness or connectors (The sensor circuit is open or shorted.) Heated oxygen sensor 1 (front) Heated oxygen sensor 1 heater (front) Fuel pressure Injectors Intake air leaks Exhaust gas leaks PCV Mass air flow sensor

6	<table border="1"> <tr><td colspan="2" style="text-align: center;">HO2S1 (B1) P0133</td></tr> <tr><td colspan="2" style="text-align: center;">OUT OF CONDITION</td></tr> <tr><td colspan="2" style="text-align: center;">MONITOR</td></tr> <tr><td>ENG SPEED</td><td>XXX rpm</td></tr> <tr><td>B/FUEL SCHDL</td><td>XXX msec</td></tr> <tr><td>THRTL POS SEN</td><td>XXX V</td></tr> <tr><td>VHCL SPEED SE</td><td>XXX km/h</td></tr> </table>	HO2S1 (B1) P0133		OUT OF CONDITION		MONITOR		ENG SPEED	XXX rpm	B/FUEL SCHDL	XXX msec	THRTL POS SEN	XXX V	VHCL SPEED SE	XXX km/h	SEF831Y
HO2S1 (B1) P0133																
OUT OF CONDITION																
MONITOR																
ENG SPEED	XXX rpm															
B/FUEL SCHDL	XXX msec															
THRTL POS SEN	XXX V															
VHCL SPEED SE	XXX km/h															

6	<table border="1"> <tr><td colspan="2" style="text-align: center;">HO2S1 (B1) P0133</td></tr> <tr><td colspan="2" style="text-align: center;">TESTING</td></tr> <tr><td colspan="2" style="text-align: center;">MONITOR</td></tr> <tr><td>ENG SPEED</td><td>XXX rpm</td></tr> <tr><td>B/FUEL SCHDL</td><td>XXX msec</td></tr> <tr><td>THRTL POS SEN</td><td>XXX V</td></tr> <tr><td>VHCL SPEED SE</td><td>XXX km/h</td></tr> </table>	HO2S1 (B1) P0133		TESTING		MONITOR		ENG SPEED	XXX rpm	B/FUEL SCHDL	XXX msec	THRTL POS SEN	XXX V	VHCL SPEED SE	XXX km/h	SEF832Y
HO2S1 (B1) P0133																
TESTING																
MONITOR																
ENG SPEED	XXX rpm															
B/FUEL SCHDL	XXX msec															
THRTL POS SEN	XXX V															
VHCL SPEED SE	XXX km/h															

6	<table border="1"> <tr><td colspan="2" style="text-align: center;">HO2S1 (B1) P0133</td></tr> <tr><td colspan="2" style="text-align: center;">COMPLETED</td></tr> </table>	HO2S1 (B1) P0133		COMPLETED		SEF658Y
HO2S1 (B1) P0133						
COMPLETED						

DTC Confirmation Procedure

NJEC0123

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 9 seconds before conducting the next test.

TESTING CONDITION:

- Always perform at a temperature above -10°C (14°F).
- Before performing the following procedure, confirm that battery voltage is more than 11V at idle.

With CONSULT-II

- Start engine and warm it up to normal operating temperature.
- Stop engine and wait at least 9 seconds.
- Turn ignition switch "ON" and select "HO2S1 (B1) P0133" of "HO2S1" in "DTC WORK SUPPORT" mode with CONSULT-II.
- Touch "START".
- Start engine and let it idle for at least 3 minutes.

NOTE:

Never raise engine speed above 3,200 rpm after this step. If the engine speed limit is exceeded, return to step 5.

- When the following conditions are met, "TESTING" will be displayed on the CONSULT-II screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take approximately 50 seconds.)

ENG SPEED	2,100 - 3,100 rpm
Vehicle speed	80 - 120 km/h (50 - 75 MPH)
B/FUEL SCHDL	3.8 - 7.6 msec
Selector lever	Suitable position


If "TESTING" is not displayed after 5 minutes, retry from step 2.

DTC P0133 HEATED OXYGEN SENSOR 1 (FRONT) (RESPONSE MONITORING)

QG

DTC Confirmation Procedure (Cont'd)

- 7) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "Diagnostic Procedure", EC-199.

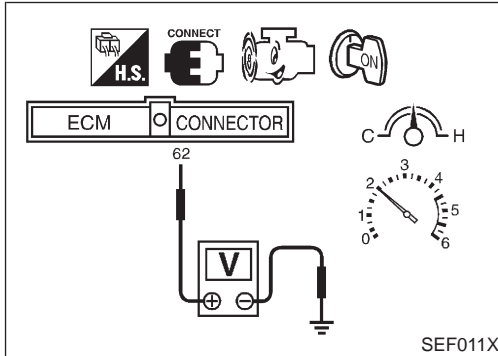

Overall Function Check

Use this procedure to check the overall function of the heated oxygen sensor 1 (front) circuit. During this check, a 1st trip DTC might not be confirmed. NJEC0124

⊗ Without CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminal 62 (HO2S1 signal) and engine ground.
- 3) Check the following with engine speed held at 2,000 rpm constant under no load.
 - The voltage fluctuates between 0 to 0.3V and 0.6 to 1.0V more than 5 times within 10 seconds.
1 time: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V
2 times: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V
- 4) If NG, go to "Diagnostic Procedure", EC-199.

DTC P0133 HEATED OXYGEN SENSOR 1 (FRONT) (RESPONSE MONITORING)


QG

Wiring Diagram

Wiring Diagram


NJEC0125

EC-O2S1B1-01

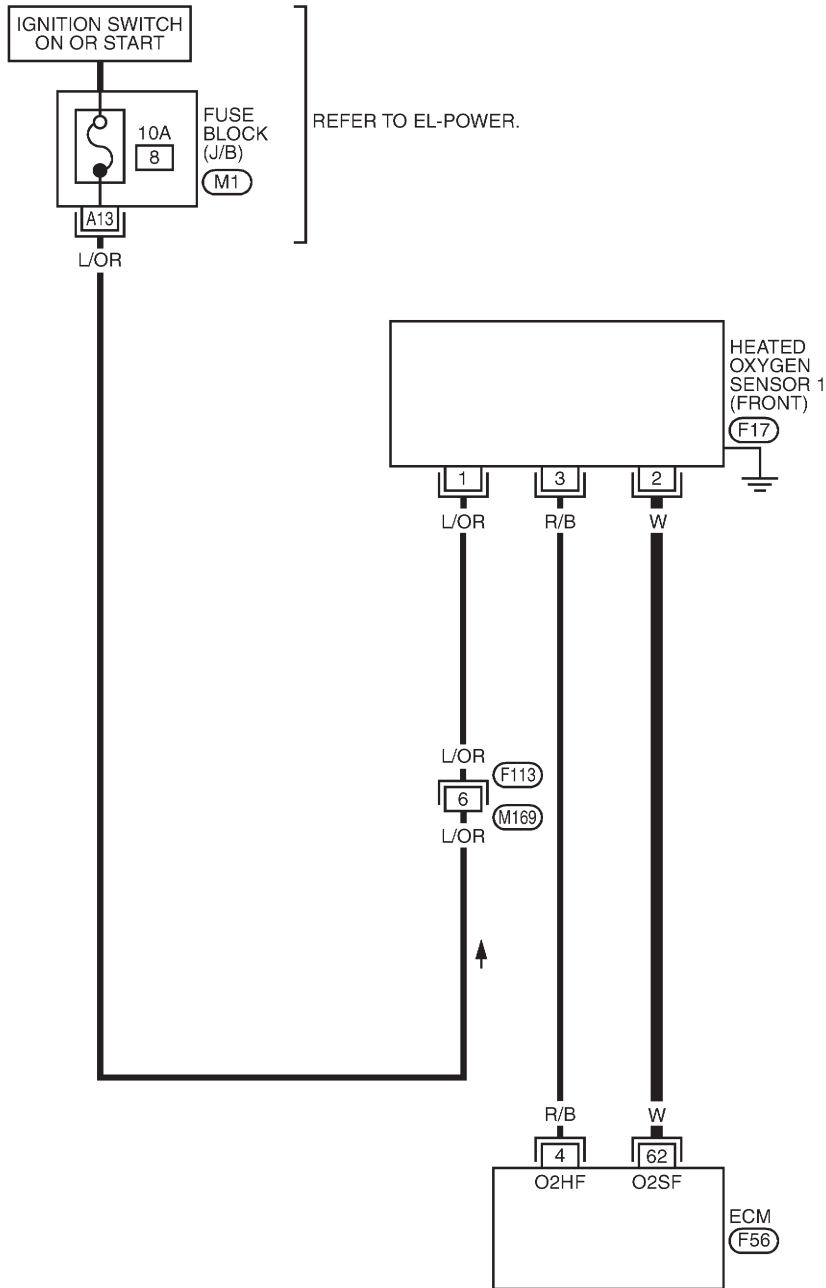


: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

REFER TO EL-POWER.



REFER TO THE FOLLOWING.

(M1) - FUSE BLOCK-
JUNCTION BOX (J/B)

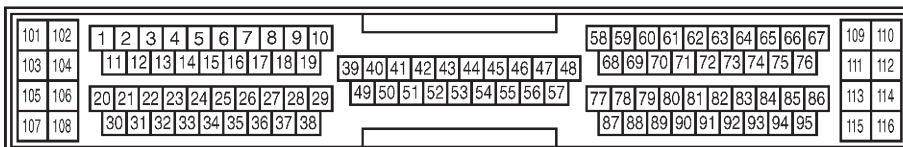

(F56)
GY



YEC967


DTC P0133 HEATED OXYGEN SENSOR 1 (FRONT) (RESPONSE MONITORING)

QG


Diagnostic Procedure

Diagnostic Procedure

NJE0126

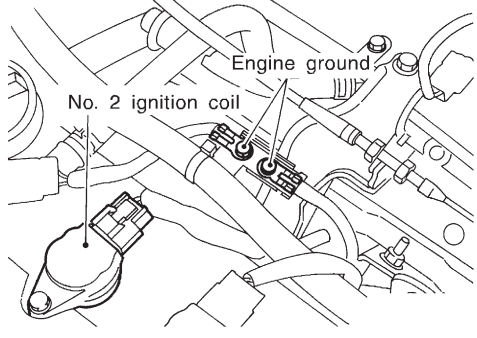1	RETIGHTEN GROUND SCREWS
<p>1. Turn ignition switch "OFF". 2. Loosen and retighten engine ground screws.</p>	
 <p>The diagram shows a close-up of the engine's ground screws and the No. 2 ignition coil. Labels point to 'Engine ground' and 'No. 2 ignition coil'.</p>	
JEF104Y	
▶ GO TO 2.	

2	RETIGHTEN HEATED OXYGEN SENSOR 1 (FRONT)
<p>Loosen and retighten heated oxygen sensor 1 (front). Tightening torque: 40 - 60 N·m (4.1 - 6.1 kg·m, 30 - 44 ft·lb)</p>	
▶ GO TO 3.	

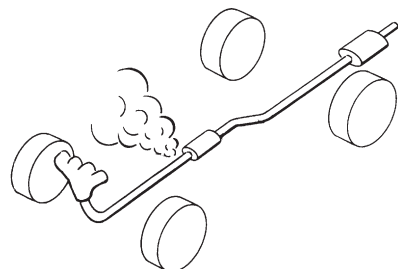3	CHECK EXHAUST AIR LEAK
<p>1. Start engine and run it at idle. 2. Listen for an exhaust air leak before three way catalyst.</p>	
 <p>The diagram shows a hand holding a listening device to the exhaust pipe before the three-way catalyst. A cloud of air is shown escaping from the pipe.</p>	
SEF099P	
OK or NG	
OK	▶ GO TO 4.
NG	▶ Repair or replace.

4	CHECK FOR INTAKE AIR LEAK
<p>Listen for an intake air leak after the mass air flow sensor.</p>	
OK or NG	
OK	▶ GO TO 5.
NG	▶ Repair or replace.

DTC P0133 HEATED OXYGEN SENSOR 1 (FRONT) (RESPONSE MONITORING)

QG

Diagnostic Procedure (Cont'd)

5	CLEAR THE SELF-LEARNING DATA													
<p>Ⓟ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Select "SELF-LEARN CONTROL" in "WORK SUPPORT" mode with CONSULT-II. 3. Clear the self-learning control coefficient by touching "START". 														
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr> <th colspan="3" style="padding: 2px;">WORK SUPPORT</th> </tr> <tr> <td style="padding: 2px;">SELF-LEARNING CONT</td> <td style="padding: 2px;"></td> <td style="padding: 2px;">B1 100%</td> </tr> <tr> <td colspan="3" style="height: 100px;"></td> </tr> <tr> <td colspan="3" style="text-align: center; padding: 2px;">CLEAR</td> </tr> </table>			WORK SUPPORT			SELF-LEARNING CONT		B1 100%				CLEAR		
WORK SUPPORT														
SELF-LEARNING CONT		B1 100%												
CLEAR														
<p>4. Run engine for at least 10 minutes at idle speed. Is the 1st trip DTC P0171 or P0172 detected? Is it difficult to start engine?</p>														
<p>ⓧ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Turn ignition switch "OFF". 3. Disconnect mass air flow sensor harness connector, and restart and run engine for at least 5 seconds at idle speed. 4. Stop engine and reconnect mass air flow sensor harness connector. 5. Make sure 1st trip DTC P0100 is displayed. 6. Erase the 1st trip DTC memory. Refer to "How to Erase Emission-related Diagnostic Information", EC-68. 7. Make sure DTC P0000 is displayed. 8. Run engine for at least 10 minutes at idle speed. <p>Is the 1st trip DTC 0171 or 0172 detected? Is it difficult to start engine?</p> <p style="text-align: center;">Yes or No</p>														
Yes	▶	Perform trouble diagnosis for DTC P0171, P0172. Refer to EC-248, 255.												
No	▶	GO TO 6.												

SEF215Z

6	CHECK INPUT SIGNAL CIRCUIT	
<ol style="list-style-type: none"> 1. Disconnect heated oxygen sensor 1 (front) harness connector and ECM harness connector. 2. Check harness continuity between ECM terminal 62 and heated oxygen sensor 1 (front) harness connector terminal 2. Refer to wiring diagram. Continuity should exist. 3. Check harness continuity between ECM terminal 62 (or terminal 2) and ground. Continuity should not exist. 4. Also check harness for short to power. <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 7.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

7	CHECK HEATED OXYGEN SENSOR 1 HEATER (FRONT)	
<p>Refer to "Component Inspection", EC-213.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 8.
NG	▶	Replace heated oxygen sensor 1 (front).

DTC P0133 HEATED OXYGEN SENSOR 1 (FRONT) (RESPONSE MONITORING)

QG

Diagnostic Procedure (Cont'd)

8	CHECK HEATED OXYGEN SENSOR 1 (FRONT)	
Refer to "Component Inspection", EC-201.		
OK or NG		
OK	▶	GO TO 9.
NG	▶	Replace heated oxygen sensor 1 (front).

9	CHECK MASS AIR FLOW SENSOR	
Refer to "Component Inspection", EC-157.		
OK or NG		
OK	▶	GO TO 10.
NG	▶	Replace mass air flow sensor.

10	CHECK PCV VALVE	
Refer to "Positive Crankcase Ventilation", EC-37.		
OK or NG		
OK	▶	GO TO 11.
NG	▶	Repair or replace PCV valve.

11	CHECK INTERMITTENT INCIDENT	
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.		
▶		INSPECTION END

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm
MAS A/F SE-B1	XXX V
COOLANT TEMP/S	XXX °C
HO2S1 (B1)	XXX V
HO2S1 MNTR (B1)	LEAN

SEF646Y

Bank 1	cycle	1 2 3 4 5	HO2S1 MNTR (B1) R-L-R-L-R-L-R-L-R-L-R
Bank 2	cycle	1 2 3 4 5	HO2S1 MNTR (B2) R-L-R-L-R-L-R-L-R-L-R
R means HO2S1 MNTR (B1)/(B2) indicates RICH			
L means HO2S1 MNTR (B1)/(B2) indicates LEAN			

SEF647Y

Component Inspection HEATED OXYGEN SENSOR 1 (FRONT)

NJEC0127

NJEC0127S02

Ⓜ With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Select "MANU TRIG" in "DATA MONITOR" mode, and select "HO2S1 (B1)" and "HO2S1 MNTR (B1)".
- 3) Hold engine speed at 2,000 rpm under no load during the following steps.
- 4) Touch "RECORD" on CONSULT-II screen.
- 5) Check the following.
 - "HO2S1 MNTR (B1)" in "DATA MONITOR" mode changes from "RICH" to "LEAN" to "RICH" five times in 10 seconds. 5 times (cycles) are counted as shown below:
R = "HO2S1 MNTR (B1)", "RICH"
L = "HO2S1 MNTR (B1)", "LEAN"
 - "HO2S1 (B1)" voltage goes above 0.6V at least once.
 - "HO2S1 (B1)" voltage goes below 0.3V at least once.
 - "HO2S1 (B1)" voltage never exceeds 1.0V.

CAUTION:



- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

DTC P0133 HEATED OXYGEN SENSOR 1 (FRONT) (RESPONSE MONITORING)

QG

Component Inspection (Cont'd)

- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool and approved anti-seize lubricant.

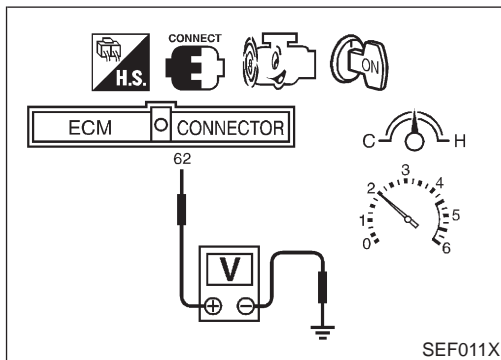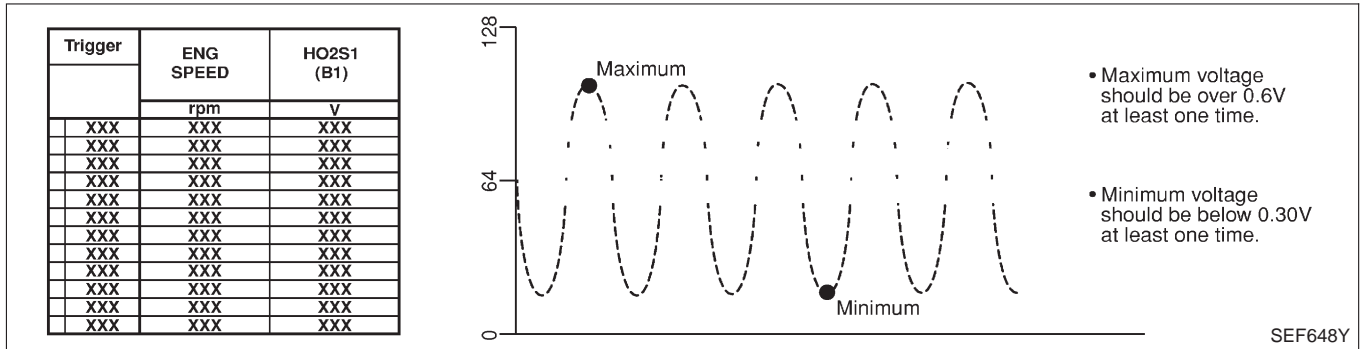

⊗ Without CONSULT-II


- 1) Start engine and warm it up to normal operating temperature.
 - 2) Set voltmeter probes between ECM terminal 62 (HO2S1 signal) and engine ground.
 - 3) Check the following with engine speed held at 2,000 rpm constant under no load.
 - The voltage fluctuates between 0 to 0.3V and 0.6 to 1.0V more than 5 times within 10 seconds.
 - The maximum voltage is over 0.6V at least one time.
 - The minimum voltage is below 0.3V at least one time.
 - The voltage never exceeds 1.0V.
- 1 time: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V
 2 times: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool and approved anti-seize lubricant.

DTC P0134 HEATED OXYGEN SENSOR 1 (FRONT) (HIGH VOLTAGE) QG


Component Description

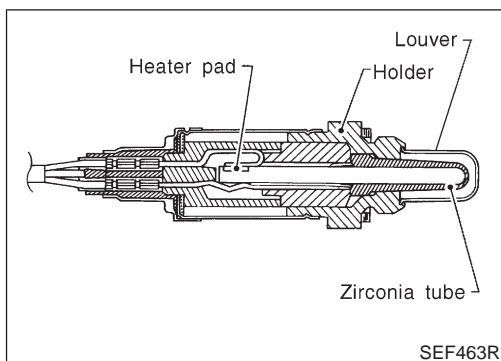

Component Description

NJEC0128

The heated oxygen sensor 1 (front) is placed into the exhaust manifold. It detects the amount of oxygen in the exhaust gas compared to the outside air. The heated oxygen sensor 1 (front) has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The heated oxygen sensor 1 (front) signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

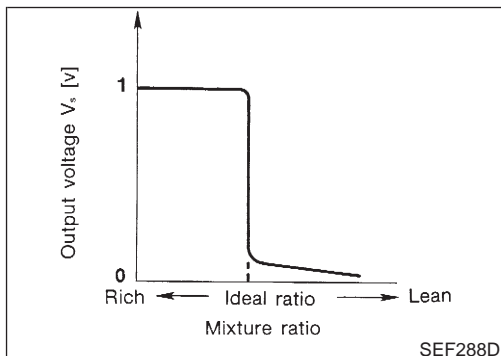

CONSULT-II Reference Value in Data Monitor Mode

NJEC0129

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
HO2S1 (B1)	Maintaining engine speed at 2,000 rpm	0 - 0.3V ←→ Approx. 0.6 - 1.0V
HO2S1 MNTR (B1)		LEAN ←→ RICH Changes more than 5 times during 10 seconds.

ECM Terminals and Reference Value

NJEC0130

Specification data are reference values and are measured between each terminal and ground.


CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
62	W	Heated oxygen sensor 1 (front)	[Engine is running] <ul style="list-style-type: none"> After warming up to normal operating temperature and engine speed is 2,000 rpm 	0 - Approximately 1.0V <p style="text-align: right;">SEF008W</p>

DTC P0134 HEATED OXYGEN SENSOR 1 (FRONT) (HIGH VOLTAGE) QG

On Board Diagnosis Logic

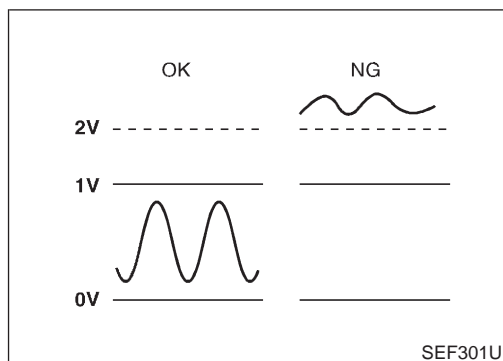


On Board Diagnosis Logic

NJEC0131

To judge the malfunction, the diagnosis checks that the heated oxygen sensor 1 (front) output is not inordinately high.

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0134 0134	<ul style="list-style-type: none"> An excessively high voltage from the sensor is sent to ECM. 	<ul style="list-style-type: none"> Harness or connectors (The sensor circuit is open or shorted.) Heated oxygen sensor 1 (front)

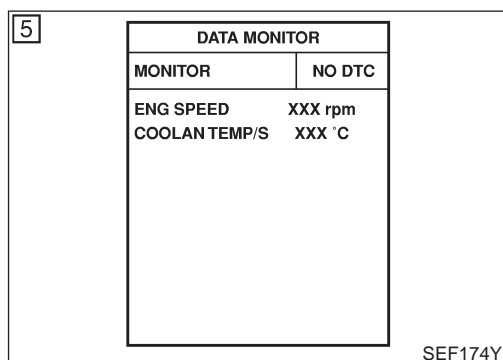

DTC Confirmation Procedure

NJEC0132

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 9 seconds before conducting the next test.

With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 9 seconds.
- 3) Turn ignition switch "ON".
- 4) Select "DATA MONITOR" mode with CONSULT-II.
- 5) Restart engine and let it idle for 2 minutes.
- 6) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-206.

With GST

- 1) Start engine and warm it up to normal operating temperature.
 - 2) Turn ignition switch "OFF" and wait at least 9 seconds.
 - 3) Restart engine and let it idle for 2 minutes.
 - 4) Turn ignition switch "OFF" and wait at least 9 seconds.
 - 5) Restart engine and let it idle for 2 minutes.
 - 6) Select "MODE 3" with GST.
 - 7) If DTC is detected, go to "Diagnostic Procedure", EC-206.
- **When using GST, "DTC Confirmation Procedure" should be performed twice as much as when using CONSULT-II because GST cannot display MODE 7 (1st trip DTC) concerning this diagnosis. Therefore, using CONSULT-II is recommended.**

DTC P0134 HEATED OXYGEN SENSOR 1 (FRONT) (HIGH VOLTAGE) QG




Wiring Diagram

Wiring Diagram

NJEC0133

EC-O2S1B1-01

— : DETECTABLE LINE FOR DTC
— : NON-DETECTABLE LINE FOR DTC

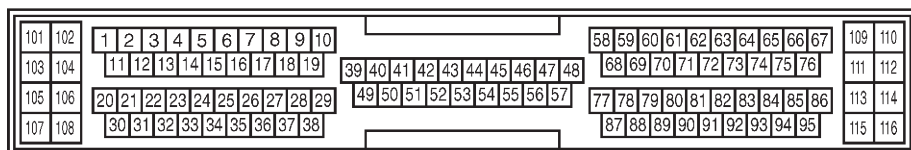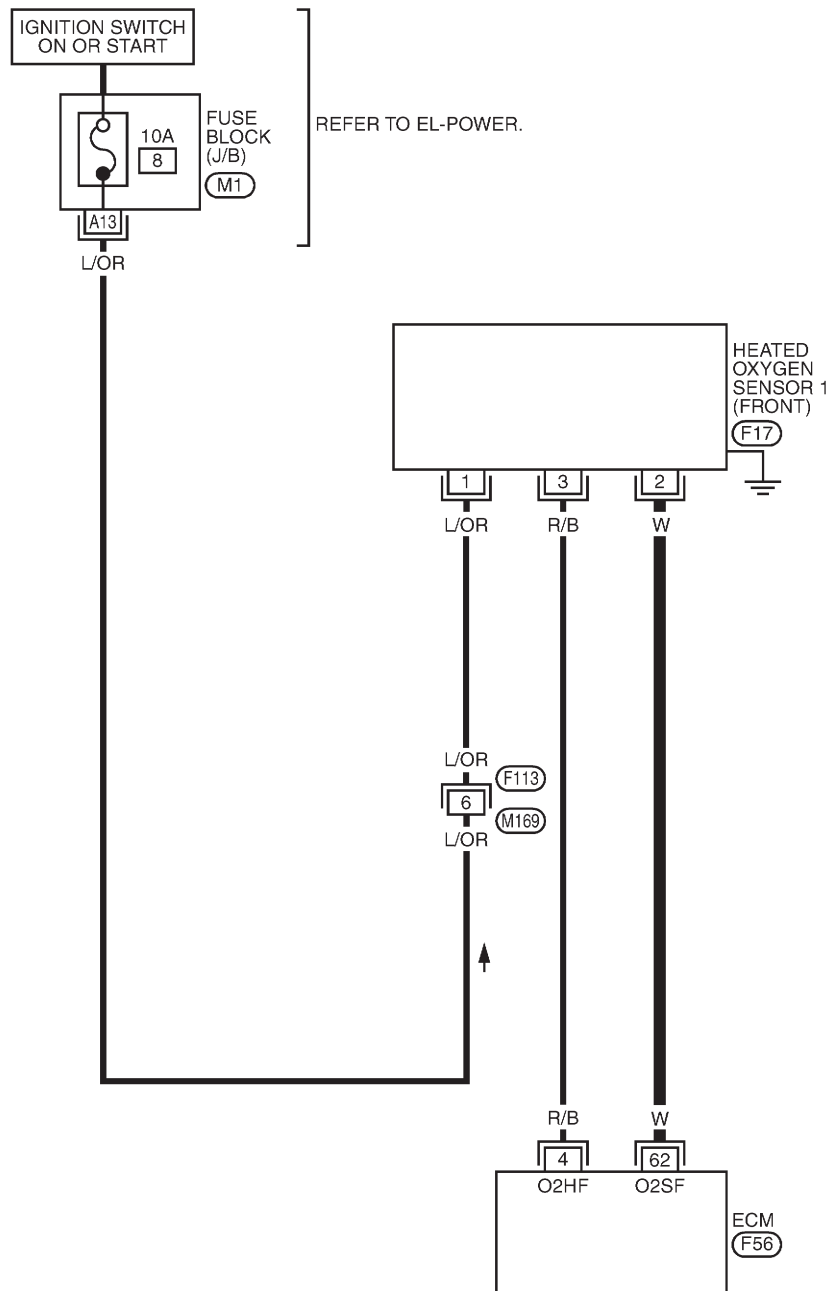

F56 GY

REFER TO THE FOLLOWING.

M1 - FUSE BLOCK-
 JUNCTION BOX (J/B)

YEC967


DTC P0134 HEATED OXYGEN SENSOR 1 (FRONT) (HIGH VOLTAGE) QG

Diagnostic Procedure

Diagnostic Procedure

NJE0134

1	RETIGHTEN HEATED OXYGEN SENSOR 1 (FRONT)
Loosen and retighten heated oxygen sensor 1 (front). Tightening torque: 40 - 60 N·m (4.1 - 6.1 kg·m, 30 - 44 ft·lb)	
▶	GO TO 2.

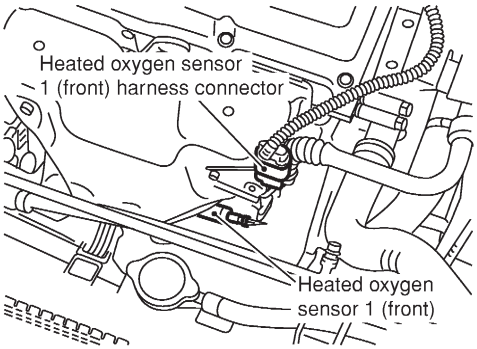2	CHECK INPUT SIGNAL CIRCUIT	
1. Disconnect heated oxygen sensor 1 (front) harness connector and ECM harness connector.		
		
SEF012XA		
2. Check harness continuity between ECM terminal 62 and heated oxygen sensor 1 (front) harness connector terminal 2. Refer to wiring diagram. Continuity should exist.		
3. Check harness continuity between ECM terminal 62 (or terminal 2) and ground. Continuity should not exist.		
4. Also check harness for short to power.		
OK or NG		
OK	▶	GO TO 3.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

3	CHECK HARNESS CONNECTOR	
Check heated oxygen sensor 1 (front) harness connector for water. Water should not exist.		
OK or NG		
OK	▶	GO TO 4.
NG	▶	Repair or replace harness connector.

4	CHECK HEATED OXYGEN SENSOR 1 (FRONT)	
Refer to "Component Inspection", EC-207.		
OK or NG		
OK	▶	GO TO 5.
NG	▶	Replace heated oxygen sensor 1 (front).

5	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.	
▶	INSPECTION END

DTC P0134 HEATED OXYGEN SENSOR 1 (FRONT) (HIGH VOLTAGE) QG

Component Inspection

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm
MAS A/F SE-B1	XXX V
COOLANT TEMP/S	XXX °C
HO2S1 (B1)	XXX V
HO2S1 MNTR (B1)	LEAN

SEF646Y

Bank 1
 cycle | 1 | 2 | 3 | 4 | 5 |
 HO2S1 MNTR (B1) R-L-R-L-R-L-R-L-R-L-R

Bank 2
 cycle | 1 | 2 | 3 | 4 | 5 |
 HO2S1 MNTR (B2) R-L-R-L-R-L-R-L-R-L-R

R means HO2S1
 MNTR (B1)/(B2) indicates RICH
 L means HO2S1
 MNTR (B1)/(B2) indicates LEAN

SEF647Y

Component Inspection HEATED OXYGEN SENSOR 1 (FRONT)

NJEC0135



NJEC0135S01

With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Select "MANU TRIG" in "DATA MONITOR" mode, and select "HO2S1 (B1)" and "HO2S1 MNTR (B1)".
- 3) Hold engine speed at 2,000 rpm under no load during the following steps.
- 4) Touch "RECORD" on CONSULT-II screen.
- 5) Check the following.
 - "HO2S1 MNTR (B1)" in "DATA MONITOR" mode changes from "RICH" to "LEAN" to "RICH" five times in 10 seconds. 5 times (cycles) are counted as shown below:
 R = "HO2S1 MNTR (B1)", "RICH"
 L = "HO2S1 MNTR (B1)", "LEAN"
 - "HO2S1 (B1)" voltage goes above 0.6V at least once.
 - "HO2S1 (B1)" voltage goes below 0.3V at least once.
 - "HO2S1 (B1)" voltage never exceeds 1.0V.

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool and approved anti-seize lubricant.

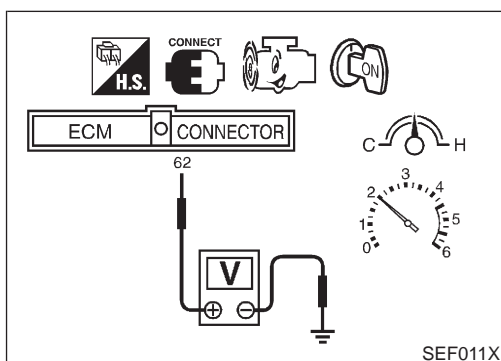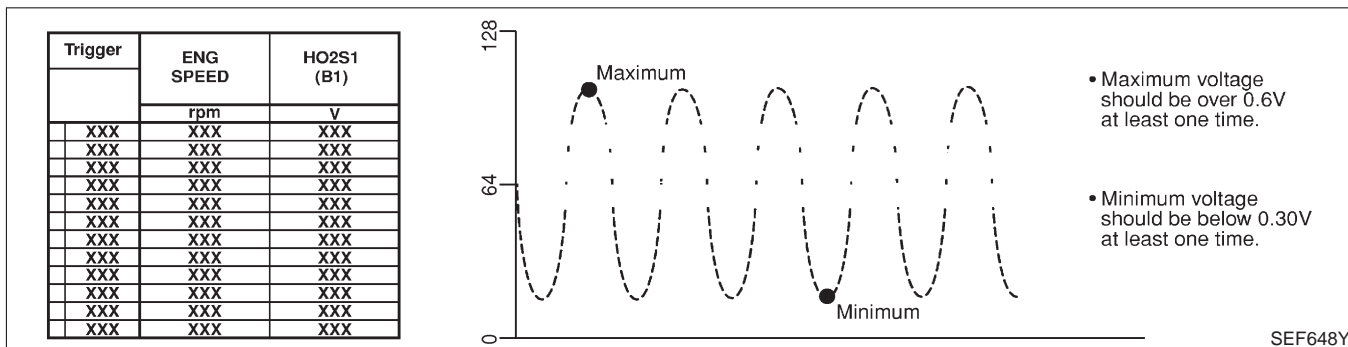

Without CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminal 62 (HO2S1 signal) and engine ground.
- 3) Check the following with engine speed held at 2,000 rpm constant under no load.
 - The voltage fluctuates between 0 to 0.3V and 0.6 to 1.0V more than 5 times within 10 seconds.
 - The maximum voltage is over 0.6V at least one time.
 - The minimum voltage is below 0.3V at least one time.
 - The voltage never exceeds 1.0V.

DTC P0134 HEATED OXYGEN SENSOR 1 (FRONT) (HIGH VOLTAGE) QG

Component Inspection (Cont'd)

1 time: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V

2 times: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool and approved anti-seize lubricant.

DTC P0135 HEATED OXYGEN SENSOR 1 (FRONT) HEATER

QG

Description

Description

NJEC0136

SYSTEM DESCRIPTION

NJEC0136S01

Sensor	Input Signal to ECM	ECM function	Actuator
Camshaft position sensor (PHASE) Crankshaft position sensor (POS)	Engine speed	Heated oxygen sensor 1 heater (front) control	Heated oxygen sensor 1 heater (front)

The ECM performs ON/OFF control of the heated oxygen sensor 1 heater (front) corresponding to the engine operating condition.

OPERATION

NJEC0136S02

Engine speed	Heated oxygen sensor 1 heater (front)
Above 3,200 rpm	OFF
Below 3,200 rpm	ON

CONSULT-II Reference Value in Data Monitor Mode

NJEC0137

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
HO2S1 HTR (B1)	● Engine speed: Below 3,200 rpm	ON
	● Engine speed: Above 3,200 rpm	OFF

ECM Terminals and Reference Value

NJEC0138

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
4	R/B	Heated oxygen sensor 1 heater (front)	[Engine is running] ● Engine speed is below 3,200 rpm.	Approximately 0V
			[Engine is running] ● Engine speed is above 3,200 rpm.	BATTERY VOLTAGE (11 - 14V)

On Board Diagnosis Logic

NJEC0139

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0135 0135	<ul style="list-style-type: none"> The current amperage in the heated oxygen sensor 1 heater (front) circuit is out of the normal range. [An improper voltage drop signal is sent to ECM through the heated oxygen sensor 1 heater (front).] 	<ul style="list-style-type: none"> Harness or connectors (The heated oxygen sensor 1 heater (front) circuit is open or shorted.) Heated oxygen sensor 1 heater (front)

DTC Confirmation Procedure

NJEC0140

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 9 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is between 10.5V and 16V at idle.

2	DATA MONITOR	
	MONITOR	NO DTC
	ENG SPEED	XXX rpm

SEF058Y

With CONSULT-II

- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT-II.
- 2) Start engine and run it for at least 5 seconds at idle speed.
- 3) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-212.

With GST

- 1) Start engine and run it for at least 5 seconds at idle speed.
 - 2) Turn ignition switch "OFF" and wait at least 9 seconds.
 - 3) Start engine and run it for at least 5 seconds at idle speed.
 - 4) Select "MODE 3" with GST.
 - 5) If DTC is detected, go to "Diagnostic Procedure", EC-212.
- **When using GST, "DTC Confirmation Procedure" should be performed twice as much as when using CONSULT-II because GST cannot display MODE 7 (1st trip DTC) concerning this diagnosis. Therefore, using CONSULT-II is recommended.**

DTC P0135 HEATED OXYGEN SENSOR 1 (FRONT) HEATER


QG

Wiring Diagram

Wiring Diagram

NJEC0141

EC-O2H1B1-01


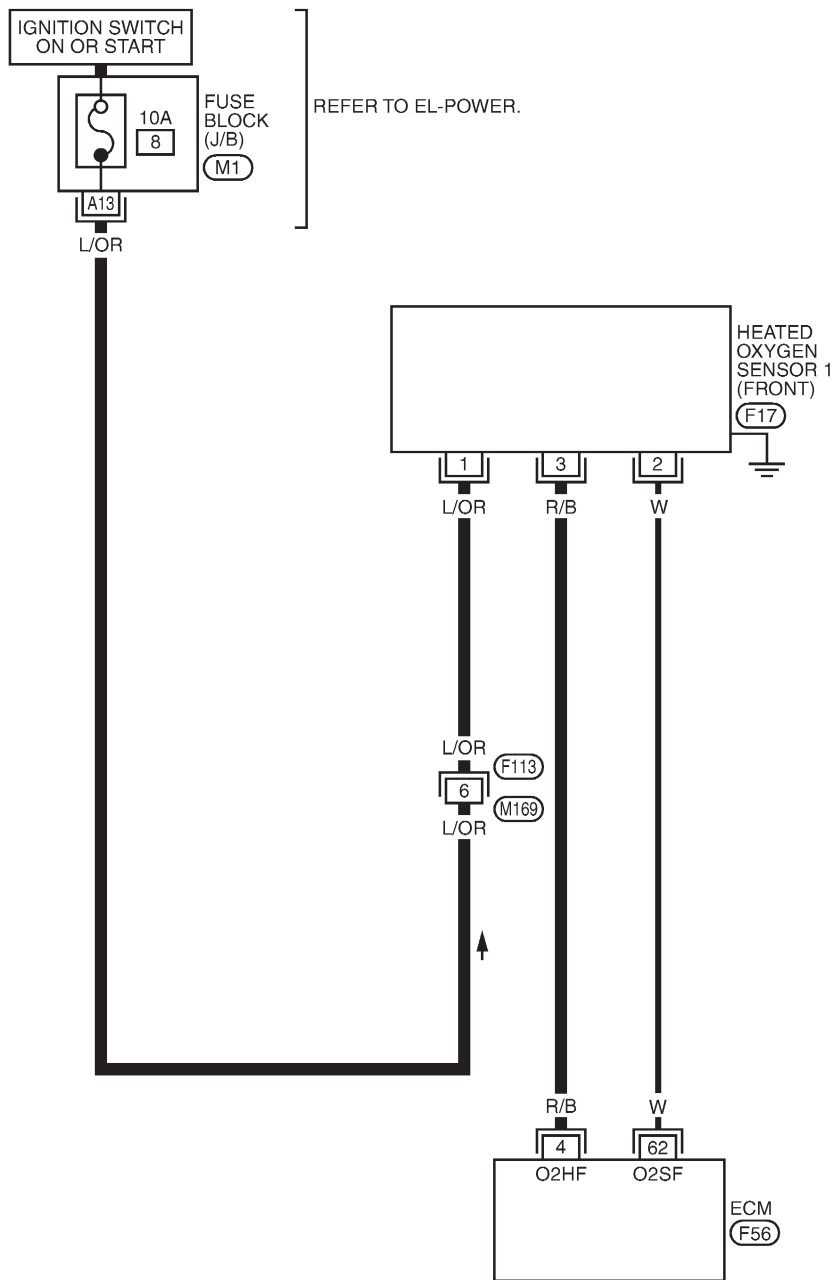


: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

REFER TO EL-POWER.

REFER TO THE FOLLOWING.

(M1) - FUSE BLOCK-
JUNCTION BOX (J/B)

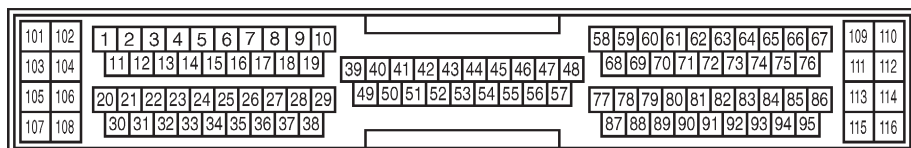



F56
GY



YEC968

Diagnostic Procedure

NJEC0142

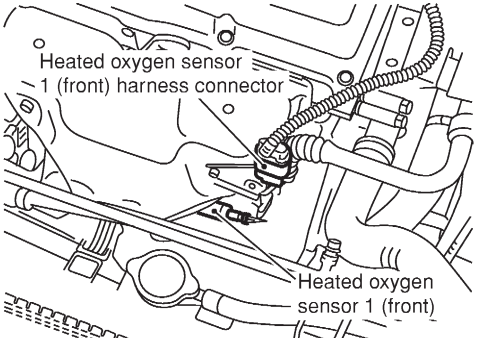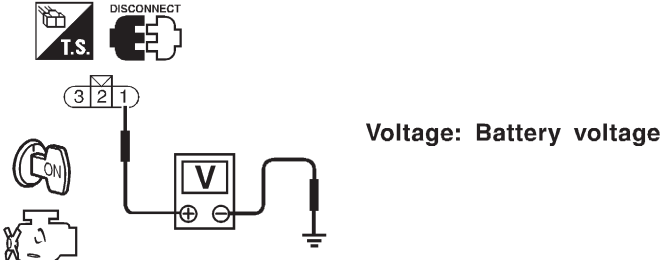1	CHECK POWER SUPPLY	<p>1. Turn ignition switch "OFF".</p> <p>2. Disconnect heated oxygen sensor 1 (front) harness connector.</p> <div style="text-align: center;">  </div> <p>3. Turn ignition switch "ON".</p> <p>4. Check voltage between terminal 1 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SEF012XA</p> <p style="text-align: right;">SEF934X</p> <p style="text-align: center;">OK or NG</p>
OK	▶	GO TO 3.
NG	▶	GO TO 2.

2	DETECT MALFUNCTIONING PART	<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors F113, M169 ● 10A fuse ● Harness for open or short between heated oxygen sensor 1 (front) and fuse <p style="text-align: right;">▶ Repair harness or connectors.</p>
----------	-----------------------------------	--

3	CHECK GROUND CIRCUIT	<p>1. Turn ignition switch "OFF".</p> <p>2. Disconnect ECM harness connector.</p> <p>3. Check harness continuity between heated oxygen sensor 1 (front) harness connector terminal 3 and ECM terminal 4. Refer to wiring diagram.</p> <p style="color: blue;">Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>
OK	▶	GO TO 4.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.


DTC P0135 HEATED OXYGEN SENSOR 1 (FRONT) HEATER

QG

Diagnostic Procedure (Cont'd)

4	CHECK HEATED OXYGEN SENSOR 1 HEATER (FRONT)
Refer to "Component Inspection", EC-213.	
OK or NG	
OK	▶ GO TO 5.
NG	▶ Replace heated oxygen sensor 1 (front).

5	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.	
	▶ INSPECTION END

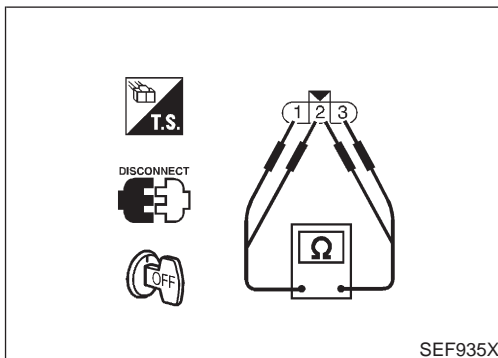

Component Inspection

HEATED OXYGEN SENSOR 1 HEATER (FRONT)

NJEC0143

NJEC0143S01

Check resistance between terminals 3 and 1.

Resistance: 2.3 - 4.3 Ω at 25°C (77°F)

Check continuity between terminals 2 and 1, 3 and 2.

Continuity should not exist.

If NG, replace the heated oxygen sensor 1 (front).


CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool and approved anti-seize lubricant.

DTC P0137 HEATED OXYGEN SENSOR 2 (REAR) (MIN. VOLTAGE MONITORING)

QG

Component Description

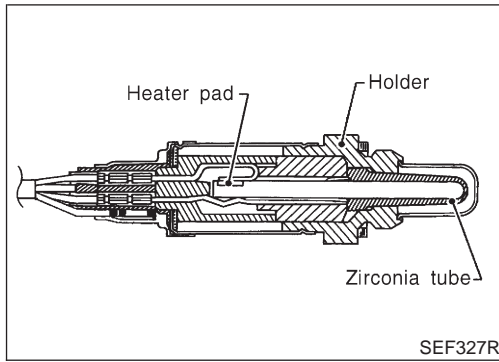

Component Description

NJEC0144

The heated oxygen sensor 2 (rear), after three way catalyst, monitors the oxygen level in the exhaust gas.

Even if switching characteristics of the heated oxygen sensor 1 (front) are shifted, the air fuel ratio is controlled to stoichiometric, by the signal from the heated oxygen sensor 2 (rear).

This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions.

Under normal conditions the heated oxygen sensor 2 (rear) is not used for engine control operation.

CONSULT-II Reference Value in Data Monitor Mode

NJEC0145

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
HO2S2 (B1)	<ul style="list-style-type: none"> Engine: After warming up 	Revving engine from idle to 3,000 rpm	0 - 0.3V ↔ Approx. 0.6 - 1.0V
HO2S2 MNTR (B1)			LEAN ↔ RICH

ECM Terminals and Reference Value


NJEC0146

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
63	L	Heated oxygen sensor 2 (rear)	[Engine is running] <ul style="list-style-type: none"> After warming up to normal operating temperature and engine speed is 3,000 rpm 	0 - Approximately 1.0V

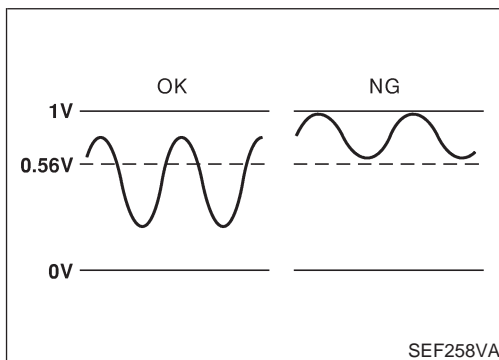

On Board Diagnosis Logic

NJEC0147

The heated oxygen sensor 2 (rear) has a much longer switching time between rich and lean than the heated oxygen sensor 1 (front). The oxygen storage capacity before the three way catalyst causes the longer switching time. To judge the malfunctions of heated oxygen sensor 2 (rear), ECM monitors whether the minimum voltage of the sensor is sufficiently low during various driving conditions such as fuel-cut.

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0137 0137	<ul style="list-style-type: none"> The minimum voltage from the sensor does not reach the specified voltage. 	<ul style="list-style-type: none"> Harness or connectors (The sensor circuit is open or shorted.) Heated oxygen sensor 2 (rear) Fuel pressure Injectors

DTC P0137 HEATED OXYGEN SENSOR 2 (REAR) (MIN. VOLTAGE MONITORING)

QG

On Board Diagnosis Logic (Cont'd)

NJE00594

8	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td colspan="2" style="text-align: center;">HO2S2 (B1) P0137</td> </tr> <tr> <td>COND1:</td> <td>OUT OF CONDITION</td> </tr> <tr> <td>COND2:</td> <td>INCOMPLETE</td> </tr> <tr> <td>COND3:</td> <td>INCOMPLETE</td> </tr> <tr> <td colspan="2" style="text-align: center;">MONITOR</td> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>B/FUEL SCHDL</td> <td>XXX msec</td> </tr> <tr> <td>COOLAN TEMP/S</td> <td>XXX °C</td> </tr> <tr> <td>VHCL SPEED SE</td> <td>XXX km/h</td> </tr> </table>	HO2S2 (B1) P0137		COND1:	OUT OF CONDITION	COND2:	INCOMPLETE	COND3:	INCOMPLETE	MONITOR		ENG SPEED	XXX rpm	B/FUEL SCHDL	XXX msec	COOLAN TEMP/S	XXX °C	VHCL SPEED SE	XXX km/h	SEF833Y
HO2S2 (B1) P0137																				
COND1:	OUT OF CONDITION																			
COND2:	INCOMPLETE																			
COND3:	INCOMPLETE																			
MONITOR																				
ENG SPEED	XXX rpm																			
B/FUEL SCHDL	XXX msec																			
COOLAN TEMP/S	XXX °C																			
VHCL SPEED SE	XXX km/h																			

8	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td colspan="2" style="text-align: center;">HO2S2 (B1) P0137</td> </tr> <tr> <td>COND1:</td> <td>TESTING</td> </tr> <tr> <td>COND2:</td> <td>INCOMPLETE</td> </tr> <tr> <td>COND3:</td> <td>INCOMPLETE</td> </tr> <tr> <td colspan="2" style="text-align: center;">MONITOR</td> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>B/FUEL SCHDL</td> <td>XXX msec</td> </tr> <tr> <td>COOLAN TEMP/S</td> <td>XXX °C</td> </tr> <tr> <td>VHCL SPEED SE</td> <td>XXX km/h</td> </tr> </table>	HO2S2 (B1) P0137		COND1:	TESTING	COND2:	INCOMPLETE	COND3:	INCOMPLETE	MONITOR		ENG SPEED	XXX rpm	B/FUEL SCHDL	XXX msec	COOLAN TEMP/S	XXX °C	VHCL SPEED SE	XXX km/h	SEF834Y
HO2S2 (B1) P0137																				
COND1:	TESTING																			
COND2:	INCOMPLETE																			
COND3:	INCOMPLETE																			
MONITOR																				
ENG SPEED	XXX rpm																			
B/FUEL SCHDL	XXX msec																			
COOLAN TEMP/S	XXX °C																			
VHCL SPEED SE	XXX km/h																			

8	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td colspan="2" style="text-align: center;">HO2S2 (B1) P0137</td> </tr> <tr> <td>COND1:</td> <td>COMPLETED</td> </tr> <tr> <td>COND2:</td> <td>INCOMPLETE</td> </tr> <tr> <td>COND3:</td> <td>INCOMPLETE</td> </tr> <tr> <td colspan="2" style="text-align: center;">MONITOR</td> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>B/FUEL SCHDL</td> <td>XXX msec</td> </tr> <tr> <td>COOLAN TEMP/S</td> <td>XXX °C</td> </tr> <tr> <td>VHCL SPEED SE</td> <td>XXX km/h</td> </tr> </table>	HO2S2 (B1) P0137		COND1:	COMPLETED	COND2:	INCOMPLETE	COND3:	INCOMPLETE	MONITOR		ENG SPEED	XXX rpm	B/FUEL SCHDL	XXX msec	COOLAN TEMP/S	XXX °C	VHCL SPEED SE	XXX km/h	SEF835Y
HO2S2 (B1) P0137																				
COND1:	COMPLETED																			
COND2:	INCOMPLETE																			
COND3:	INCOMPLETE																			
MONITOR																				
ENG SPEED	XXX rpm																			
B/FUEL SCHDL	XXX msec																			
COOLAN TEMP/S	XXX °C																			
VHCL SPEED SE	XXX km/h																			

DTC Confirmation Procedure

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

- “COMPLETED” will appear on CONSULT-II screen when all tests “COND1”, “COND2” and “COND3” are completed.
- If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch “OFF” and wait at least 9 seconds before conducting the next test.

TESTING CONDITION:

Never stop engine during this procedure. If the engine is stopped, retry this procedure from step 2 in “Procedure for COND1”.

With CONSULT-II Procedure for COND1

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch “OFF” and wait at least 9 seconds.
- 3) Turn ignition switch “ON” and select “HO2S2 (B1) P0137” of “HO2S2” in “DTC WORK SUPPORT” mode with CONSULT-II.
- 4) Touch “START”.
- 5) Start engine and let it idle for at least 30 seconds.
- 6) Rev engine up to 2,000 rpm 2 or 3 times quickly under no load. If “COMPLETED” appears on CONSULT-II screen, go to step 2 in “Procedure for COND3”. If “COMPLETED” does not appear on CONSULT-II screen, go to the following step.
- 7) Drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
- 8) When the following conditions are met, “TESTING” will be displayed at “COND1” on the CONSULT-II screen. Maintain the conditions continuously until “TESTING” changes to “COMPLETED”. (It will take approximately 60 seconds.)

ENG SPEED	1,500 - 3,600 rpm
Vehicle speed	Above 70 km/h (43 MPH)
Selector lever	Suitable position

NOTE:

- If “TESTING” is not displayed after 5 minutes, retry from step 2 in “Procedure for COND1”.
- If “COMPLETED” already appears at “COND2” on CONSULT-II screen before “Procedure for COND2” is conducted, it is unnecessary to conduct step 1 in “Procedure for COND2”.

1	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td colspan="2" style="text-align: center;">HO2S2 (B1) P0137</td> </tr> <tr> <td>COND1:</td> <td>COMPLETED</td> </tr> <tr> <td>COND2:</td> <td>COMPLETED</td> </tr> <tr> <td>COND3:</td> <td>INCOMPLETE</td> </tr> <tr> <td colspan="2" style="text-align: center;">MONITOR</td> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>B/FUEL SCHDL</td> <td>XXX msec</td> </tr> <tr> <td>COOLAN TEMP/S</td> <td>XXX °C</td> </tr> <tr> <td>VHCL SPEED SE</td> <td>XXX km/h</td> </tr> </table>	HO2S2 (B1) P0137		COND1:	COMPLETED	COND2:	COMPLETED	COND3:	INCOMPLETE	MONITOR		ENG SPEED	XXX rpm	B/FUEL SCHDL	XXX msec	COOLAN TEMP/S	XXX °C	VHCL SPEED SE	XXX km/h	SEF836Y
HO2S2 (B1) P0137																				
COND1:	COMPLETED																			
COND2:	COMPLETED																			
COND3:	INCOMPLETE																			
MONITOR																				
ENG SPEED	XXX rpm																			
B/FUEL SCHDL	XXX msec																			
COOLAN TEMP/S	XXX °C																			
VHCL SPEED SE	XXX km/h																			

Procedure for COND2

- 1) While driving, release accelerator pedal completely with “OD” OFF (A/T models), or 4th gear position (M/T models) from the above condition [step 8] until “INCOMPLETE” at “COND2” on CONSULT-II screen has turned to “COMPLETED”. (It will take approximately 4 seconds.)


NOTE:

If “COMPLETED” already appears at “COND3” on CONSULT-II screen before “Procedure for COND3” is conducted, it is unnecessary to conduct step 1 in “Procedure for COND3”.

DTC P0137 HEATED OXYGEN SENSOR 2 (REAR) (MIN. VOLTAGE MONITORING)


QG

DTC Confirmation Procedure (Cont'd)

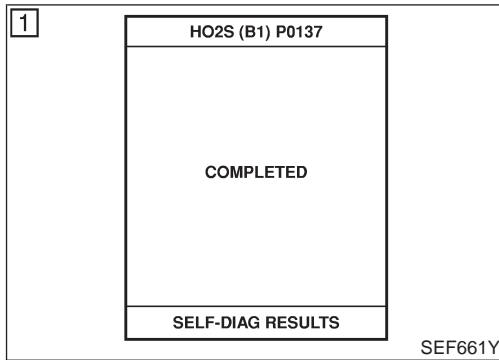

Procedure for COND3

- 1) Stop vehicle and let it idle until "INCOMPLETE" of "COND3" on CONSULT-II screen has turned to "COMPLETED". (It will take a maximum of approximately 6 minutes.)
- 2) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "Diagnostic Procedure", EC-218.

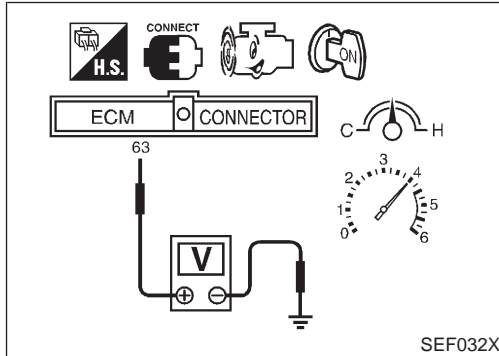

Overall Function Check

Use this procedure to check the overall function of the rear heated oxygen sensor circuit. During this check, a 1st trip DTC might not be confirmed. NJEC0595

⊗ Without CONSULT-II

- 1) Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
- 2) Stop vehicle with engine running.
- 3) Set voltmeter probes between ECM terminals 63 (HO2S2 signal) and engine ground.
- 4) Check the voltage when revving engine up to 4,000 rpm under no load at least 10 times.
(Depress and release accelerator pedal as soon as possible.)
The voltage should be below 0.56V at least once during this procedure.
If the voltage can be confirmed in step 4, step 5 is not necessary.
- 5) Keep vehicle at idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in 3rd gear position (M/T), D position with "OD" OFF (A/T).
The voltage should be below 0.56V at least once during this procedure.
- 6) If NG, go to "Diagnostic Procedure", EC-218.

DTC P0137 HEATED OXYGEN SENSOR 2 (REAR) (MIN. VOLTAGE MONITORING)



QG

Wiring Diagram

Wiring Diagram


NJEC0150

EC-O2S2B1-01

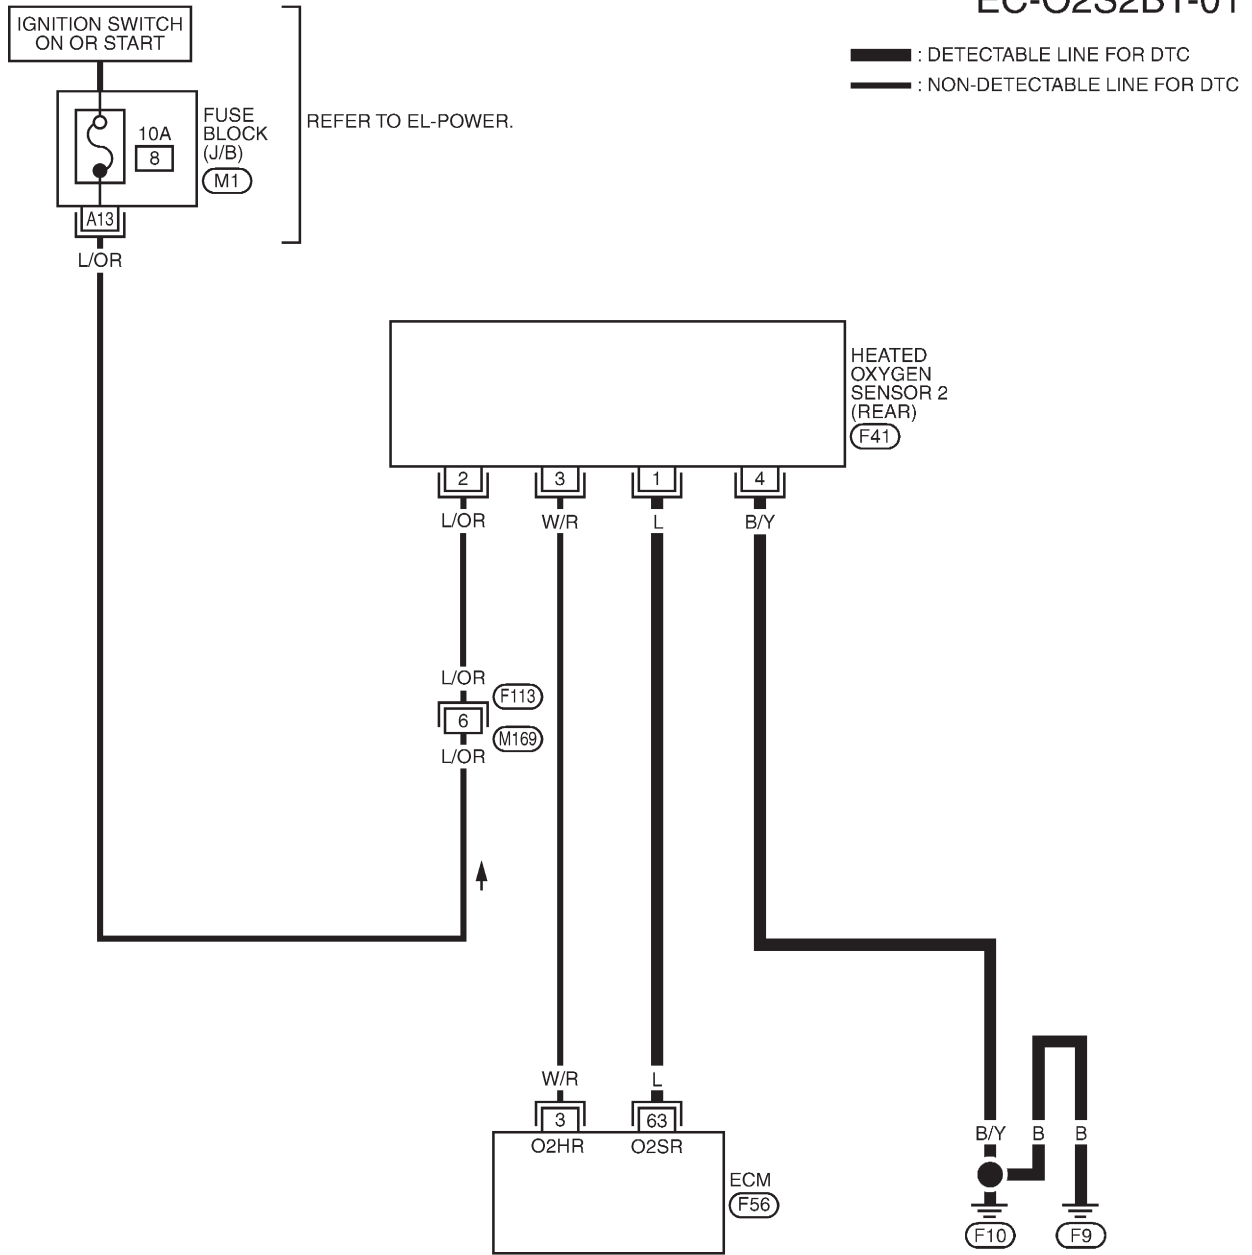

REFER TO THE FOLLOWING.

(M1) - FUSE BLOCK-
JUNCTION BOX (J/B)

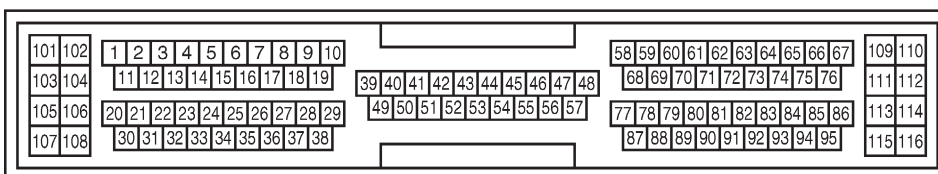

YEC969


DTC P0137 HEATED OXYGEN SENSOR 2 (REAR) (MIN. VOLTAGE MONITORING)

QG

Diagnostic Procedure

Diagnostic Procedure

NJE00151

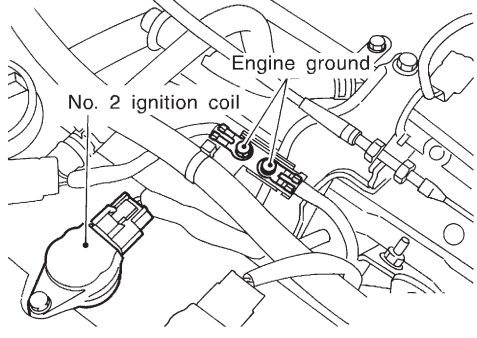
1	RETIGHTEN GROUND SCREWS
<p>1. Turn ignition switch "OFF". 2. Loosen and retighten engine ground screws.</p>	
 <p>The diagram shows a close-up of the engine's ignition system. It labels the 'No. 2 ignition coil' and the 'Engine ground' screws. The coil is connected to a spark plug, and the ground screws are shown being tightened to ensure a proper electrical connection.</p>	
JEF104Y	
▶ GO TO 2.	

2	CLEAR THE SELF-LEARNING DATA								
<p>Ⓟ With CONSULT-II</p> <p>1. Start engine and warm it up to normal operating temperature. 2. Select "SELF-LEARN CONTROL" in "WORK SUPPORT" mode with CONSULT-II. 3. Clear the self-learning control coefficient by touching "START".</p>									
<table border="1" style="margin: auto;"> <tr> <th colspan="2" style="text-align: center;">WORK SUPPORT</th> </tr> <tr> <td style="text-align: center;">SELF-LEARNING CONT</td> <td style="text-align: center;">B1 100%</td> </tr> <tr> <td colspan="2" style="text-align: center; height: 100px;"> </td> </tr> <tr> <td colspan="2" style="text-align: center;">CLEAR</td> </tr> </table>		WORK SUPPORT		SELF-LEARNING CONT	B1 100%			CLEAR	
WORK SUPPORT									
SELF-LEARNING CONT	B1 100%								
CLEAR									
SEF215Z									
<p>4. Run engine for at least 10 minutes at idle speed. Is the 1st trip DTC P0172 detected? Is it difficult to start engine?</p>									
<p>ⓧ Without CONSULT-II</p> <p>1. Start engine and warm it up to normal operating temperature. 2. Turn ignition switch "OFF". 3. Disconnect mass air flow sensor harness connector, and restart and run engine for at least 5 seconds at idle speed. 4. Stop engine and reconnect mass air flow sensor harness connector. 5. Make sure 1st trip DTC P0100 is displayed. 6. Erase the 1st trip DTC memory. Refer to "How to Erase Emission-related Diagnostic Information", EC-68. 7. Make sure DTC P0000 is displayed. 8. Run engine for at least 10 minutes at idle speed. Is the 1st trip DTC 0172 detected? Is it difficult to start engine?</p>									
Yes or No									
Yes	▶ Perform trouble diagnosis for DTC P0172. Refer to EC-255.								
No	▶ GO TO 3.								

DTC P0137 HEATED OXYGEN SENSOR 2 (REAR) (MIN. VOLTAGE MONITORING)

QG

Diagnostic Procedure (Cont'd)

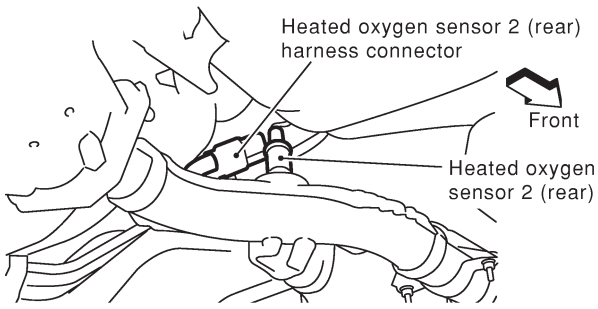3	CHECK INPUT SIGNAL CIRCUIT	
<p>1. Turn ignition switch "OFF".</p> <p>2. Disconnect heated oxygen sensor 2 (rear) harness connector and ECM harness connector.</p>		
 <p style="text-align: center;">View from the underside of the vehicle</p>		
NEF345A		
<p>3. Check harness continuity between ECM terminal 63 and heated oxygen sensor 2 (rear) harness connector terminal 1. Refer to wiring diagram. Continuity should exist.</p> <p>4. Check harness continuity between ECM terminal 63 [or heated oxygen sensor 2 (rear) harness connector terminal 1] and ground. Continuity should not exist.</p> <p>5. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 5.
NG	▶	GO TO 4.

4	DETECT MALFUNCTIONING PART	
Check the harness for open or short between heated oxygen sensor 2 (rear) and ECM.		
		▶ Repair open circuit or short to ground or short to power in harness or connectors.

5	CHECK GROUND CIRCUIT	
<p>1. Check harness continuity between heated oxygen sensor 2 (rear) harness connector terminal 4 and body ground. Refer to wiring diagram. Continuity should exist.</p> <p>2. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 6.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

6	CHECK HEATED OXYGEN SENSOR 2 (REAR)	
Refer to "Component Inspection", EC-220.		
OK or NG		
OK	▶	GO TO 7.
NG	▶	Replace heated oxygen sensor 2 (rear).

7	CHECK INTERMITTENT INCIDENT	
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.		
		▶ INSPECTION END

DTC P0137 HEATED OXYGEN SENSOR 2 (REAR) (MIN. VOLTAGE MONITORING)

QG

Component Inspection

ACTIVE TEST	
FUEL INJECTION	25 %
MONITOR	
ENG SPEED	XXX rpm
HO2S1 (B1)	XXX V
HO2S2 (B1)	XXX V
HO2S1 MNTR (B1)	RICH
HO2S2 MNTR (B1)	RICH

SEF662Y

Component Inspection HEATED OXYGEN SENSOR 2 (REAR)

NJEC0152

NJEC0152S01



④ With CONSULT-II

- 1) Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
- 2) Stop vehicle with engine running.
- 3) Select "FUEL INJECTION" in "ACTIVE TEST" mode, and select "HO2S2 (B1)" as the monitor item with CONSULT-II.
- 4) Check "HO2S2 (B1)" at idle speed when adjusting "FUEL INJECTION" to $\pm 25\%$.

"HO2S2 (B1)" should be above 0.68V at least once when the "FUEL INJECTION" is +25%. "HO2S2 (B1)" should be below 0.56V at least once when the "FUEL INJECTION" is -25%.

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool and approved anti-seize lubricant.

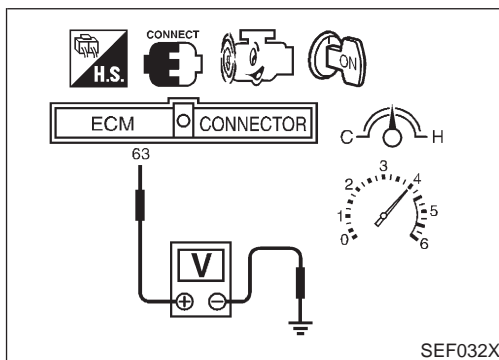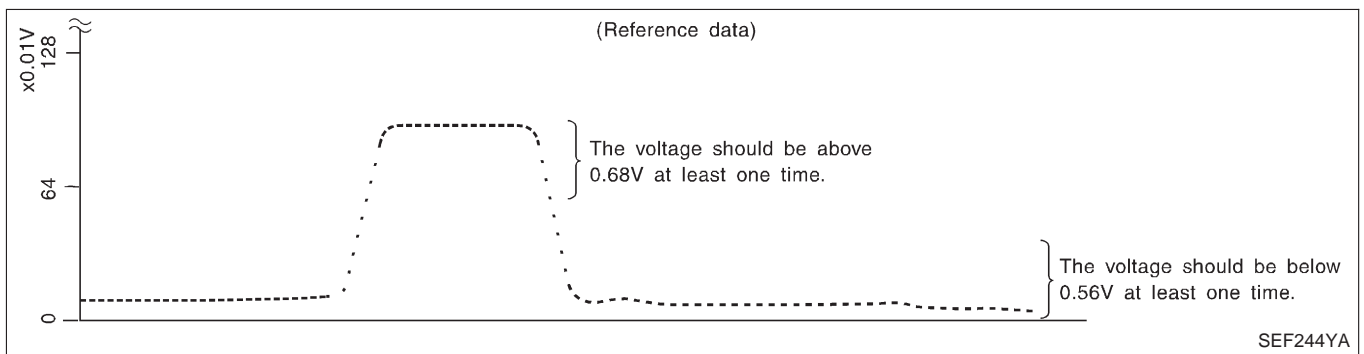

⊗ Without CONSULT-II

- 1) Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
- 2) Stop vehicle with engine running.
- 3) Set voltmeter probes between ECM terminals 63 (HO2S2 signal) and engine ground.
- 4) Check the voltage when revving up to 4,000 rpm under no load at least 10 times.
(Depress and release accelerator pedal as soon as possible.)
The voltage should be above 0.68V at least once.
If the voltage is above 0.68V at step 4, step 5 is not necessary.
- 5) Check the voltage when revving up to 6,000 rpm under no load. Or keep vehicle at idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in 3rd gear position (M/T), D position with "OD" OFF (A/T).
The voltage should be below 0.56V at least once.

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

DTC P0137 HEATED OXYGEN SENSOR 2 (REAR) (MIN. VOLTAGE MONITORING)

QG


Component Inspection (Cont'd)

- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool and approved anti-seize lubricant.

DTC P0138 HEATED OXYGEN SENSOR 2 (REAR) (MAX. VOLTAGE MONITORING)

QG

Component Description

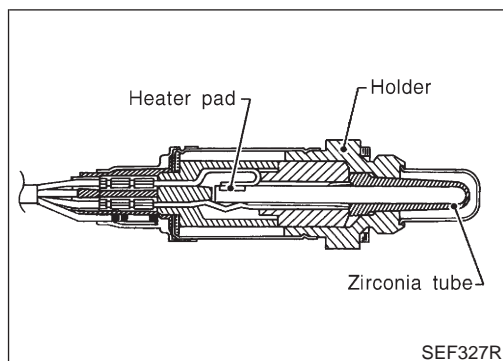

Component Description

NJEC0153

The heated oxygen sensor 2 (rear), after three way catalyst, monitors the oxygen level in the exhaust gas.

Even if switching characteristics of the heated oxygen sensor 1 (front) are shifted, the air fuel ratio is controlled to stoichiometric, by the signal from the heated oxygen sensor 2 (rear).

This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions.

Under normal conditions the heated oxygen sensor 2 (rear) is not used for engine control operation.

CONSULT-II Reference Value in Data Monitor Mode

NJEC0154

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
HO2S2 (B1)			0 - 0.3V ↔ Approx. 0.6 - 1.0V
HO2S2 MNTR (B1)	<ul style="list-style-type: none"> Engine: After warming up 	Revving engine from idle to 3,000 rpm	LEAN ↔ RICH

ECM Terminals and Reference Value


NJEC0155

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
63	L	Heated oxygen sensor 2 (rear)	[Engine is running] <ul style="list-style-type: none"> After warming up to normal operating temperature and engine speed is 2,000 rpm 	0 - Approximately 1.0V

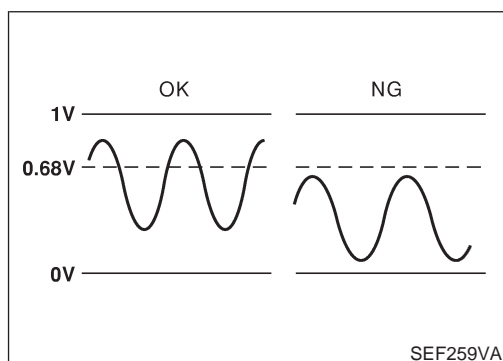

On Board Diagnosis Logic

NJEC0156

The heated oxygen sensor 2 (rear) has a much longer switching time between rich and lean than the heated oxygen sensor 1 (front). The oxygen storage capacity before the three way catalyst causes the longer switching time. To judge the malfunctions of heated oxygen sensor 2 (rear), ECM monitors whether the maximum voltage of the sensor is sufficiently high during various driving conditions such as fuel-cut.

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0138 0138	<ul style="list-style-type: none"> The maximum voltage from the sensor does not reach the specified voltage. 	<ul style="list-style-type: none"> Harness or connectors (The sensor circuit is open or shorted.) Heated oxygen sensor 2 (rear) Fuel pressure Injectors Intake air leaks

DTC P0138 HEATED OXYGEN SENSOR 2 (REAR) (MAX. VOLTAGE MONITORING)

QG

On Board Diagnosis Logic (Cont'd)

N/JEC0596

8	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td colspan="2" style="text-align: center;">HO2S2 (B1) P0138</td> </tr> <tr> <td>COND1:</td> <td>OUT OF CONDITION</td> </tr> <tr> <td>COND2:</td> <td>INCOMPLETE</td> </tr> <tr> <td>COND3:</td> <td>INCOMPLETE</td> </tr> <tr> <td colspan="2" style="text-align: center;">MONITOR</td> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>B/FUEL SCHDL</td> <td>XXX msec</td> </tr> <tr> <td>COOLAN TEMP/S</td> <td>XXX °C</td> </tr> <tr> <td>VHCL SPEED SE</td> <td>XXX km/h</td> </tr> </table>	HO2S2 (B1) P0138		COND1:	OUT OF CONDITION	COND2:	INCOMPLETE	COND3:	INCOMPLETE	MONITOR		ENG SPEED	XXX rpm	B/FUEL SCHDL	XXX msec	COOLAN TEMP/S	XXX °C	VHCL SPEED SE	XXX km/h	SEF837Y
HO2S2 (B1) P0138																				
COND1:	OUT OF CONDITION																			
COND2:	INCOMPLETE																			
COND3:	INCOMPLETE																			
MONITOR																				
ENG SPEED	XXX rpm																			
B/FUEL SCHDL	XXX msec																			
COOLAN TEMP/S	XXX °C																			
VHCL SPEED SE	XXX km/h																			

8	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td colspan="2" style="text-align: center;">HO2S2 (B1) P0138</td> </tr> <tr> <td>COND1:</td> <td>TESTING</td> </tr> <tr> <td>COND2:</td> <td>INCOMPLETE</td> </tr> <tr> <td>COND3:</td> <td>INCOMPLETE</td> </tr> <tr> <td colspan="2" style="text-align: center;">MONITOR</td> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>B/FUEL SCHDL</td> <td>XXX msec</td> </tr> <tr> <td>COOLAN TEMP/S</td> <td>XXX °C</td> </tr> <tr> <td>VHCL SPEED SE</td> <td>XXX km/h</td> </tr> </table>	HO2S2 (B1) P0138		COND1:	TESTING	COND2:	INCOMPLETE	COND3:	INCOMPLETE	MONITOR		ENG SPEED	XXX rpm	B/FUEL SCHDL	XXX msec	COOLAN TEMP/S	XXX °C	VHCL SPEED SE	XXX km/h	SEF838Y
HO2S2 (B1) P0138																				
COND1:	TESTING																			
COND2:	INCOMPLETE																			
COND3:	INCOMPLETE																			
MONITOR																				
ENG SPEED	XXX rpm																			
B/FUEL SCHDL	XXX msec																			
COOLAN TEMP/S	XXX °C																			
VHCL SPEED SE	XXX km/h																			

8	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td colspan="2" style="text-align: center;">HO2S2 (B1) P0138</td> </tr> <tr> <td>COND1:</td> <td>COMPLETED</td> </tr> <tr> <td>COND2:</td> <td>INCOMPLETE</td> </tr> <tr> <td>COND3:</td> <td>INCOMPLETE</td> </tr> <tr> <td colspan="2" style="text-align: center;">MONITOR</td> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>B/FUEL SCHDL</td> <td>XXX msec</td> </tr> <tr> <td>COOLAN TEMP/S</td> <td>XXX °C</td> </tr> <tr> <td>VHCL SPEED SE</td> <td>XXX km/h</td> </tr> </table>	HO2S2 (B1) P0138		COND1:	COMPLETED	COND2:	INCOMPLETE	COND3:	INCOMPLETE	MONITOR		ENG SPEED	XXX rpm	B/FUEL SCHDL	XXX msec	COOLAN TEMP/S	XXX °C	VHCL SPEED SE	XXX km/h	SEF839Y
HO2S2 (B1) P0138																				
COND1:	COMPLETED																			
COND2:	INCOMPLETE																			
COND3:	INCOMPLETE																			
MONITOR																				
ENG SPEED	XXX rpm																			
B/FUEL SCHDL	XXX msec																			
COOLAN TEMP/S	XXX °C																			
VHCL SPEED SE	XXX km/h																			

DTC Confirmation Procedure

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

- “COMPLETED” will appear on CONSULT-II screen when all tests “COND1”, “COND2” and “COND3” are completed.
- If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch “OFF” and wait at least 9 seconds before conducting the next test.

TESTING CONDITION:

Never stop engine during this procedure. If the engine is stopped, retry this procedure from step 2 in “Procedure for COND1”.

With CONSULT-II Procedure for COND1

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch “OFF” and wait at least 9 seconds.
- 3) Turn ignition switch “ON” and select “HO2S2 (B1) P0138” of “HO2S2” in “DTC WORK SUPPORT” mode with CONSULT-II.
- 4) Touch “START”.
- 5) Start engine and let it idle for at least 30 seconds.
- 6) Rev engine up to 2,000 rpm 2 or 3 times quickly under no load. If “COMPLETED” appears on CONSULT-II screen, go to step 2 in “Procedure for COND3”. If “COMPLETED” does not appear on CONSULT-II screen, go to the following step.
- 7) Drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
- 8) When the following conditions are met, “TESTING” will be displayed at “COND1” on the CONSULT-II screen. Maintain the conditions continuously until “TESTING” changes to “COMPLETED”. (It will take approximately 60 seconds.)

ENG SPEED	1,500 - 3,600 rpm
Vehicle speed	Above 70 km/h (43 MPH)
Selector lever	Suitable position

NOTE:

- If “TESTING” is not displayed after 5 minutes, retry from step 2 in “Procedure for COND1”.
- If “COMPLETED” already appears at “COND2” on CONSULT-II screen before “Procedure for COND2” is conducted, it is unnecessary to conduct step 1 in “Procedure for COND2”.

1	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td colspan="2" style="text-align: center;">HO2S2 (B1) P0138</td> </tr> <tr> <td>COND1:</td> <td>COMPLETED</td> </tr> <tr> <td>COND2:</td> <td>COMPLETED</td> </tr> <tr> <td>COND3:</td> <td>INCOMPLETE</td> </tr> <tr> <td colspan="2" style="text-align: center;">MONITOR</td> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>B/FUEL SCHDL</td> <td>XXX msec</td> </tr> <tr> <td>COOLAN TEMP/S</td> <td>XXX °C</td> </tr> <tr> <td>VHCL SPEED SE</td> <td>XXX km/h</td> </tr> </table>	HO2S2 (B1) P0138		COND1:	COMPLETED	COND2:	COMPLETED	COND3:	INCOMPLETE	MONITOR		ENG SPEED	XXX rpm	B/FUEL SCHDL	XXX msec	COOLAN TEMP/S	XXX °C	VHCL SPEED SE	XXX km/h	SEF840Y
HO2S2 (B1) P0138																				
COND1:	COMPLETED																			
COND2:	COMPLETED																			
COND3:	INCOMPLETE																			
MONITOR																				
ENG SPEED	XXX rpm																			
B/FUEL SCHDL	XXX msec																			
COOLAN TEMP/S	XXX °C																			
VHCL SPEED SE	XXX km/h																			

Procedure for COND2

- 1) While driving, release accelerator pedal completely with “OD” OFF (A/T models), or 4th gear position (M/T models) from the above condition [step 8] until “INCOMPLETE” at “COND2” on CONSULT-II screen is turned to “COMPLETED”. (It will take approximately 4 seconds.)


NOTE:

If “COMPLETED” already appears at “COND3” on CONSULT-II screen before “Procedure for COND3” is conducted, it is unnecessary to conduct step 1 in “Procedure for COND3”.

DTC P0138 HEATED OXYGEN SENSOR 2 (REAR) (MAX. VOLTAGE MONITORING)


QG

DTC Confirmation Procedure (Cont'd)

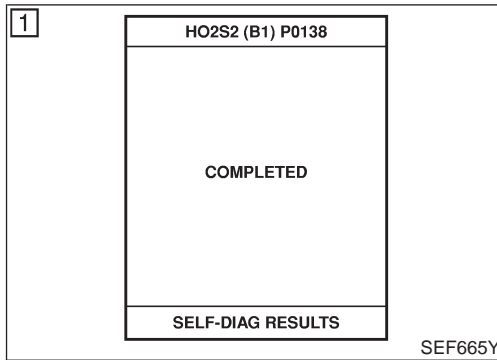

Procedure for COND3

- 1) Stop vehicle and let it idle until "INCOMPLETE" of "COND3" on CONSULT-II screen has turned to "COMPLETED". (It will take a maximum of approximately 6 minutes.)
- 2) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS".
If "NG" is displayed, refer to "Diagnostic Procedure", EC-226.

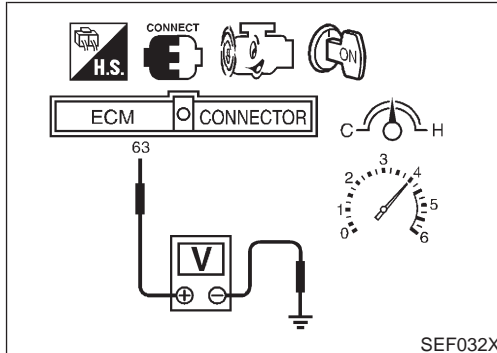

Overall Function Check

Use this procedure to check the overall function of the rear heated oxygen sensor circuit. During this check, a 1st trip DTC might not be confirmed. NJEC0597

⊗ Without CONSULT-II

- 1) Start engine and drive vehicle at a speed of 70 km/h (43 MPH) for 2 consecutive minutes.
- 2) Stop vehicle with engine running.
- 3) Set voltmeter probes between ECM terminals 63 (HO2S2 signal) and engine ground.
- 4) Check the voltage when revving engine up to 4,000 rpm under no load at least 10 times.
(Depress and release accelerator pedal as soon as possible.)
The voltage should be above 0.68V at least once during this procedure.
If the voltage can be confirmed in step 4, step 5 is not necessary.
- 5) Keep vehicle at idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in 3rd gear position (M/T), D position with "OD" OFF (A/T).
The voltage should be above 0.68V at least once during this procedure.
- 6) If NG, go to "Diagnostic Procedure", EC-226.

DTC P0138 HEATED OXYGEN SENSOR 2 (REAR) (MAX. VOLTAGE MONITORING)



QG

Wiring Diagram

Wiring Diagram


NJEC0159

EC-O2S2B1-01

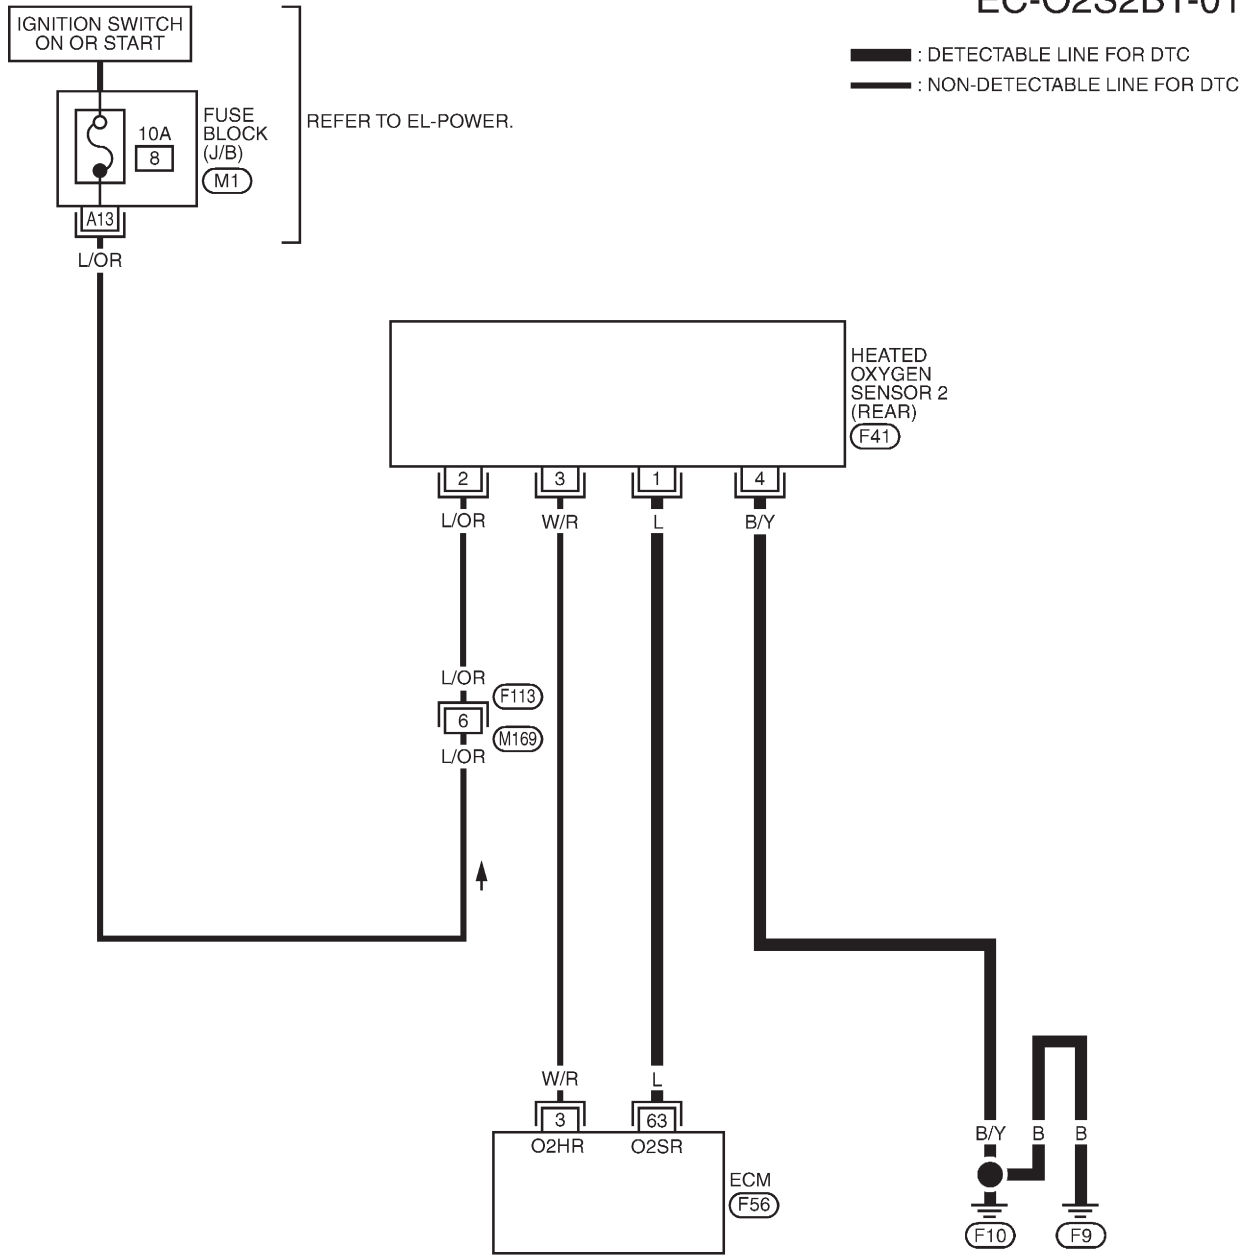

REFER TO THE FOLLOWING.

(M1) - FUSE BLOCK- JUNCTION BOX (J/B)

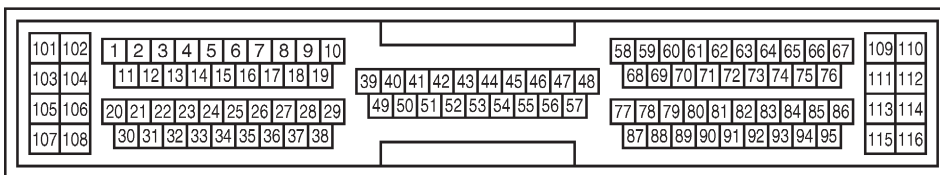

YEC969


DTC P0138 HEATED OXYGEN SENSOR 2 (REAR) (MAX. VOLTAGE MONITORING)

QG

Diagnostic Procedure

Diagnostic Procedure

NJE0160

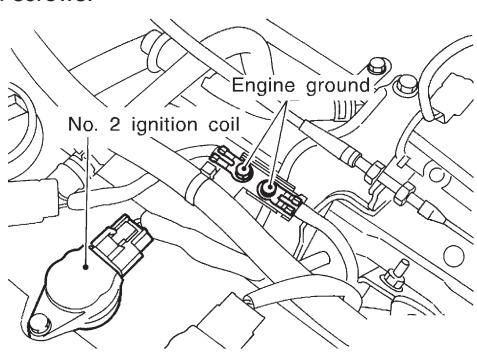1	RETIGHTEN GROUND SCREWS
<p>1. Turn ignition switch "OFF". 2. Loosen and retighten engine ground screws.</p> <div style="text-align: center;">  <p>The diagram shows a close-up of the engine's ignition system. It labels the 'No. 2 ignition coil' and the 'Engine ground' screws. The coil is connected to a spark plug, and the ground screws are shown being tightened to ensure proper electrical contact.</p> </div> <p style="text-align: right;">JEF104Y</p>	
▶ GO TO 2.	

2	CLEAR THE SELF-LEARNING DATA						
<p>Ⓟ With CONSULT-II</p> <p>1. Start engine and warm it up to normal operating temperature. 2. Select "SELF-LEARN CONTROL" in "WORK SUPPORT" mode with CONSULT-II. 3. Clear the self-learning control coefficient by touching "START".</p> <div style="text-align: center;"> <table border="1" style="margin: auto;"> <tr> <th colspan="2">WORK SUPPORT</th> </tr> <tr> <td>SELF-LEARNING CONT</td> <td>B1 100%</td> </tr> <tr> <td colspan="2" style="text-align: center;">CLEAR</td> </tr> </table> </div> <p style="text-align: right;">SEF215Z</p> <p>4. Run engine for at least 10 minutes at idle speed. Is the 1st trip DTC P0171 detected? Is it difficult to start engine?</p>		WORK SUPPORT		SELF-LEARNING CONT	B1 100%	CLEAR	
WORK SUPPORT							
SELF-LEARNING CONT	B1 100%						
CLEAR							
<p>ⓧ Without CONSULT-II</p> <p>1. Start engine and warm it up to normal operating temperature. 2. Turn ignition switch "OFF". 3. Disconnect mass air flow sensor harness connector, and restart and run engine for at least 5 seconds at idle speed. 4. Stop engine and reconnect mass air flow sensor harness connector. 5. Make sure 1st trip DTC P0100 is displayed. 6. Erase the 1st trip DTC memory. Refer to "How to Erase Emission-related Diagnostic Information", EC-68. 7. Make sure DTC P0000 is displayed. 8. Run engine for at least 10 minutes at idle speed. Is the 1st trip DTC 0171 detected? Is it difficult to start engine?</p> <p style="text-align: center;">Yes or No</p>							
Yes	▶ Perform trouble diagnosis for DTC P0171. Refer to EC-248.						
No	▶ GO TO 3.						

DTC P0138 HEATED OXYGEN SENSOR 2 (REAR) (MAX. VOLTAGE MONITORING)

QG

Diagnostic Procedure (Cont'd)

3	CHECK INPUT SIGNAL CIRCUIT	
<p>1. Disconnect heated oxygen sensor 2 (rear) harness connector and ECM harness connector.</p> <p>2. Check harness continuity between ECM terminal 63 and heated oxygen sensor 2 (rear) harness connector terminal 1. Refer to wiring diagram. Continuity should exist.</p> <p>3. Check harness continuity between ECM terminal 63 [or heated oxygen sensor 2 (rear) harness connector terminal 1] and ground. Continuity should not exist.</p> <p>4. Also check harness for short to ground and short to power.</p>		
OK or NG		
OK	▶	GO TO 5.
NG	▶	GO TO 4.

4	DETECT MALFUNCTIONING PART	
Check the harness for open or short between ECM and heated oxygen sensor 2 (rear).		
		▶ Repair open circuit or short to ground or short to power in harness or connectors.

5	CHECK GROUND CIRCUIT	
<p>1. Check harness continuity between heated oxygen sensor 2 (rear) harness connector terminal 4 and engine ground. Refer to wiring diagram. Continuity should exist.</p> <p>2. Also check harness for short to ground and short to power.</p>		
OK or NG		
OK	▶	GO TO 6.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

6	CHECK HEATED OXYGEN SENSOR 2 (REAR)	
Refer to "Component Inspection", EC-227.		
OK or NG		
OK	▶	GO TO 7.
NG	▶	Replace heated oxygen sensor 2 (rear).

7	CHECK INTERMITTENT INCIDENT	
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.		
		▶ INSPECTION END

ACTIVE TEST	
FUEL INJECTION	25 %
MONITOR	
ENG SPEED	XXX rpm
HO2S1 (B1)	XXX V
HO2S2 (B1)	XXX V
HO2S1 MNTR (B1)	RICH
HO2S2 MNTR (B1)	RICH

SEF662Y

Component Inspection

HEATED OXYGEN SENSOR 2 (REAR)

NJEC0161

NJEC0161S01

ⓑ With CONSULT-II

- 1) Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes..
- 2) Stop vehicle with engine running.
- 3) Select "FUEL INJECTION" in "ACTIVE TEST" mode, and select "HO2S2 (B1)" as the monitor item with CONSULT-II.
- 4) Check "HO2S2 (B1)" at idle speed when adjusting "FUEL INJECTION" to $\pm 25\%$.
"HO2S2 (B1)" should be above 0.68V at least once when

EC-227

DTC P0138 HEATED OXYGEN SENSOR 2 (REAR) (MAX. VOLTAGE MONITORING)



QG

Component Inspection (Cont'd)

the "FUEL INJECTION" is +25%.
"HO2S2 (B1)" should be below 0.56V at least once when the "FUEL INJECTION" is -25%.

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool and approved anti-seize lubricant.

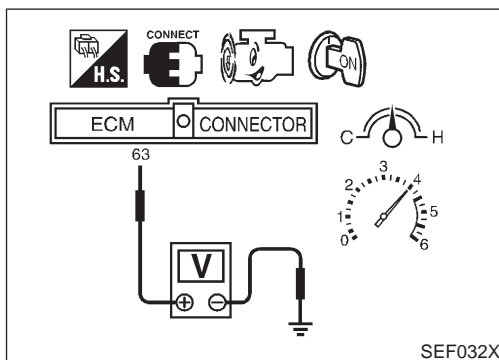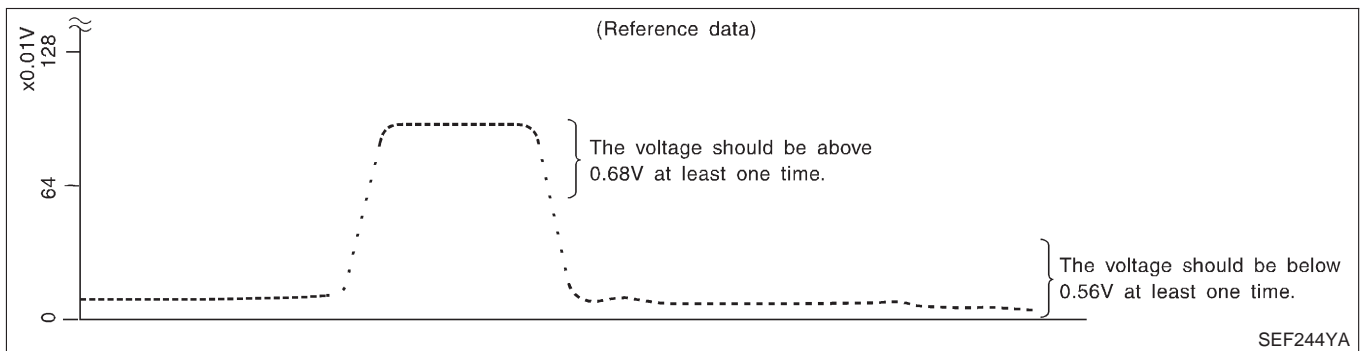

⊗ Without CONSULT-II

- 1) Start engine and drive vehicle at a speed of 70 km/h (43 MPH) for 2 consecutive minutes.
- 2) Stop vehicle with engine running.
- 3) Set voltmeter probes between ECM terminals 63 (HO2S2 signal) and engine ground.
- 4) Check the voltage when revving up to 4,000 rpm under no load at least 10 times.
(Depress and release accelerator pedal as soon as possible.)
The voltage should be above 0.68V at least once.
If the voltage is above 0.68V at step 4, step 5 is not necessary.
- 5) Check the voltage when revving up to 6,000 rpm under no load. Or keep vehicle at idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in 3rd gear position (M/T), D position with "OD" OFF (A/T).
The voltage should be below 0.56V at least once.


CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool and approved anti-seize lubricant.

DTC P0139 HEATED OXYGEN SENSOR 2 (REAR) (RESPONSE MONITORING)

QG

Component Description

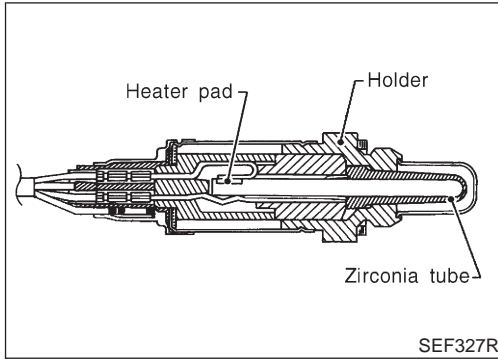

Component Description

NJEC0162

The heated oxygen sensor 2 (rear), after three way catalyst, monitors the oxygen level in the exhaust gas. Even if switching characteristics of the heated oxygen sensor 1 (front) are shifted, the air fuel ratio is controlled to stoichiometric, by the signal from the heated oxygen sensor 2 (rear). This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. Under normal conditions the heated oxygen sensor 2 (rear) is not used for engine control operation.

CONSULT-II Reference Value in Data Monitor Mode

NJEC0163

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
HO2S2 (B1)	<ul style="list-style-type: none"> ● Engine: After warming up Revving engine from idle to 3,000 rpm	0 - 0.3V ↔ Approx. 0.6 - 1.0V
HO2S2 MNTR (B1)		LEAN ↔ RICH

ECM Terminals and Reference Value


NJEC0164

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
63	L	Heated oxygen sensor 2 (rear)	[Engine is running] <ul style="list-style-type: none"> ● After warming up to normal operating temperature and revving engine from idle to 2,000 rpm 	0 - Approximately 1.0V

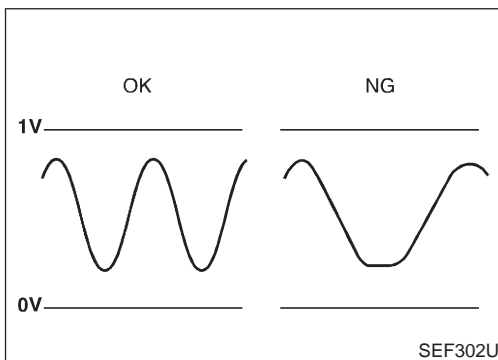

On Board Diagnosis Logic

NJEC0165

The heated oxygen sensor 2 (rear) has a much longer switching time between rich and lean than the heated oxygen sensor 1 (front). The oxygen storage capacity before the three way catalyst causes the longer switching time. To judge the malfunctions of heated oxygen sensor 2 (rear), ECM monitors whether the switching response of the sensor's voltage is faster than specified during various driving conditions such as fuel-cut.

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0139 0139	<ul style="list-style-type: none"> ● It takes more than the specified time for the sensor to respond between rich and lean. 	<ul style="list-style-type: none"> ● Harness or connectors (The sensor circuit is open or shorted.) ● Heated oxygen sensor 2 (rear) ● Fuel pressure ● Injectors ● Intake air leaks

DTC P0139 HEATED OXYGEN SENSOR 2 (REAR) (RESPONSE MONITORING)

QG

On Board Diagnosis Logic (Cont'd)

8	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td colspan="2" style="text-align: center;">HO2S2 (B1) P0139</td> </tr> <tr> <td>COND1:</td> <td>OUT OF CONDITION</td> </tr> <tr> <td>COND2:</td> <td>INCOMPLETE</td> </tr> <tr> <td>COND3:</td> <td>INCOMPLETE</td> </tr> <tr> <td colspan="2" style="text-align: center;">MONITOR</td> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>B/FUEL SCHDL</td> <td>XXX msec</td> </tr> <tr> <td>COOLAN TEMP/S</td> <td>XXX °C</td> </tr> <tr> <td>VHCL SPEED SE</td> <td>XXX km/h</td> </tr> </table>	HO2S2 (B1) P0139		COND1:	OUT OF CONDITION	COND2:	INCOMPLETE	COND3:	INCOMPLETE	MONITOR		ENG SPEED	XXX rpm	B/FUEL SCHDL	XXX msec	COOLAN TEMP/S	XXX °C	VHCL SPEED SE	XXX km/h
HO2S2 (B1) P0139																			
COND1:	OUT OF CONDITION																		
COND2:	INCOMPLETE																		
COND3:	INCOMPLETE																		
MONITOR																			
ENG SPEED	XXX rpm																		
B/FUEL SCHDL	XXX msec																		
COOLAN TEMP/S	XXX °C																		
VHCL SPEED SE	XXX km/h																		

SEF841Y

8	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td colspan="2" style="text-align: center;">HO2S2 (B1) P0139</td> </tr> <tr> <td>COND1:</td> <td>TESTING</td> </tr> <tr> <td>COND2:</td> <td>INCOMPLETE</td> </tr> <tr> <td>COND3:</td> <td>INCOMPLETE</td> </tr> <tr> <td colspan="2" style="text-align: center;">MONITOR</td> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>B/FUEL SCHDL</td> <td>XXX msec</td> </tr> <tr> <td>COOLAN TEMP/S</td> <td>XXX °C</td> </tr> <tr> <td>VHCL SPEED SE</td> <td>XXX km/h</td> </tr> </table>	HO2S2 (B1) P0139		COND1:	TESTING	COND2:	INCOMPLETE	COND3:	INCOMPLETE	MONITOR		ENG SPEED	XXX rpm	B/FUEL SCHDL	XXX msec	COOLAN TEMP/S	XXX °C	VHCL SPEED SE	XXX km/h
HO2S2 (B1) P0139																			
COND1:	TESTING																		
COND2:	INCOMPLETE																		
COND3:	INCOMPLETE																		
MONITOR																			
ENG SPEED	XXX rpm																		
B/FUEL SCHDL	XXX msec																		
COOLAN TEMP/S	XXX °C																		
VHCL SPEED SE	XXX km/h																		

SEF842Y

8	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td colspan="2" style="text-align: center;">HO2S2 (B1) P0139</td> </tr> <tr> <td>COND1:</td> <td>COMPLETED</td> </tr> <tr> <td>COND2:</td> <td>INCOMPLETE</td> </tr> <tr> <td>COND3:</td> <td>INCOMPLETE</td> </tr> <tr> <td colspan="2" style="text-align: center;">MONITOR</td> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>B/FUEL SCHDL</td> <td>XXX msec</td> </tr> <tr> <td>COOLAN TEMP/S</td> <td>XXX °C</td> </tr> <tr> <td>VHCL SPEED SE</td> <td>XXX km/h</td> </tr> </table>	HO2S2 (B1) P0139		COND1:	COMPLETED	COND2:	INCOMPLETE	COND3:	INCOMPLETE	MONITOR		ENG SPEED	XXX rpm	B/FUEL SCHDL	XXX msec	COOLAN TEMP/S	XXX °C	VHCL SPEED SE	XXX km/h
HO2S2 (B1) P0139																			
COND1:	COMPLETED																		
COND2:	INCOMPLETE																		
COND3:	INCOMPLETE																		
MONITOR																			
ENG SPEED	XXX rpm																		
B/FUEL SCHDL	XXX msec																		
COOLAN TEMP/S	XXX °C																		
VHCL SPEED SE	XXX km/h																		

SEF843Y

DTC Confirmation Procedure

NJEC0598

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

- “COMPLETED” will appear on CONSULT-II screen when all tests “COND1”, “COND2” and “COND3” are completed.
- If “DTC Confirmation Procedure ” has been previously conducted, always turn ignition switch “OFF” and wait at least 9 seconds before conducting the next test.

TESTING CONDITION:

Never stop engine during this procedure. If the engine is stopped, retry this procedure from step 2 in “Procedure for COND1”.

With CONSULT-II Procedure for COND1

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch “OFF” and wait at least 9 seconds.
- 3) Turn ignition switch “ON” and select “HO2S2 (B1) P0139” of “HO2S2” in “DTC WORK SUPPORT” mode with CONSULT-II.
- 4) Touch “START”.
- 5) Start engine and let it idle for at least 30 seconds.
- 6) Rev engine up to 2,000 rpm 2 or 3 times quickly under no load. If “COMPLETED” appears on CONSULT-II screen, go to step 2 in “Procedure for COND3”. If “COMPLETED” does not appear on CONSULT-II screen, go to the following step.
- 7) Drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
- 8) When the following conditions are met, “TESTING” will be displayed at “COND1” on the CONSULT-II screen. Maintain the conditions continuously until “TESTING” changes to “COMPLETED”. (It will take approximately 60 seconds.)

ENG SPEED	1,500 - 3,600 rpm
Vehicle speed	Above 70 km/h (43 MPH)
Selector lever	Suitable position

NOTE:

- If “TESTING” is not displayed after 5 minutes, retry from step 2 in “Procedure for COND1”.
- If “COMPLETED” already appears at “COND2” on CONSULT-II screen before “Procedure for COND2” is conducted, it is unnecessary to conduct step 1 in “Procedure for COND2”.

1	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td colspan="2" style="text-align: center;">HO2S2 (B1) P0139</td> </tr> <tr> <td>COND1:</td> <td>COMPLETED</td> </tr> <tr> <td>COND2:</td> <td>COMPLETED</td> </tr> <tr> <td>COND3:</td> <td>INCOMPLETE</td> </tr> <tr> <td colspan="2" style="text-align: center;">MONITOR</td> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>B/FUEL SCHDL</td> <td>XXX msec</td> </tr> <tr> <td>COOLAN TEMP/S</td> <td>XXX °C</td> </tr> <tr> <td>VHCL SPEED SE</td> <td>XXX km/h</td> </tr> </table>	HO2S2 (B1) P0139		COND1:	COMPLETED	COND2:	COMPLETED	COND3:	INCOMPLETE	MONITOR		ENG SPEED	XXX rpm	B/FUEL SCHDL	XXX msec	COOLAN TEMP/S	XXX °C	VHCL SPEED SE	XXX km/h
HO2S2 (B1) P0139																			
COND1:	COMPLETED																		
COND2:	COMPLETED																		
COND3:	INCOMPLETE																		
MONITOR																			
ENG SPEED	XXX rpm																		
B/FUEL SCHDL	XXX msec																		
COOLAN TEMP/S	XXX °C																		
VHCL SPEED SE	XXX km/h																		

SEF844Y

Procedure for COND2

- 1) While driving, release accelerator pedal completely with “OD” OFF (A/T models), or 4th gear position (M/T models) from the above condition [step 8] until “INCOMPLETE” at “COND2” on CONSULT-II screen has turned to “COMPLETED”. (It will take approximately 4 seconds.)


NOTE:

If “COMPLETED” already appears at “COND3” on CONSULT-II screen before “Procedure for COND3” is conducted, it is unnecessary to conduct step 1 in “Procedure for COND3”.

DTC P0139 HEATED OXYGEN SENSOR 2 (REAR) (RESPONSE MONITORING)


QG

DTC Confirmation Procedure (Cont'd)

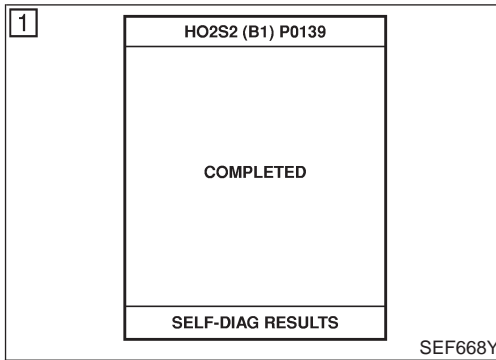

Procedure for COND3

- 1) Stop vehicle and let it idle until "INCOMPLETE" of "COND3" on CONSULT-II screen has turned to "COMPLETED". (It will take a maximum of approximately 6 minutes.)
- 2) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS".
If "NG" is displayed, refer to "Diagnostic Procedure", EC-233.

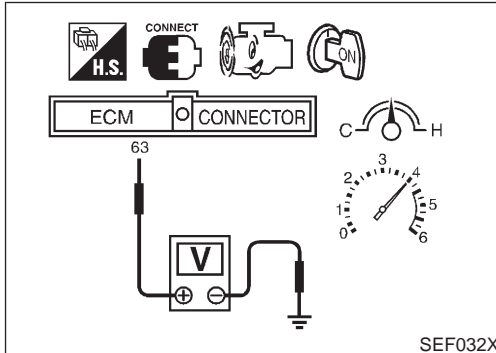

Overall Function Check

Use this procedure to check the overall function of the rear heated oxygen sensor circuit. During this check, a 1st trip DTC might not be confirmed. NJEC0599

⊗ Without CONSULT-II

- 1) Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
- 2) Stop vehicle with engine running.
- 3) Set voltmeter probes between ECM terminals 63 (HO2S2 signal) and engine ground.
- 4) Check the voltage when revving up to 4,000 rpm under no load at least 10 times.
(Depress and release accelerator pedal as soon as possible.)
The voltage should change at more than 0.06V for 1 second during this procedure.
If the voltage can be confirmed in step 4, step 5 is not necessary.
- 5) Keep vehicle at idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in 3rd gear position (M/T), D position with "OD" OFF (A/T).
The voltage should change at more than 0.06V for 1 second during this procedure.
- 6) If NG, go to "Diagnostic Procedure", EC-233.

DTC P0139 HEATED OXYGEN SENSOR 2 (REAR) (RESPONSE MONITORING)



QG

Wiring Diagram

Wiring Diagram


NJEC0168

EC-O2S2B1-01

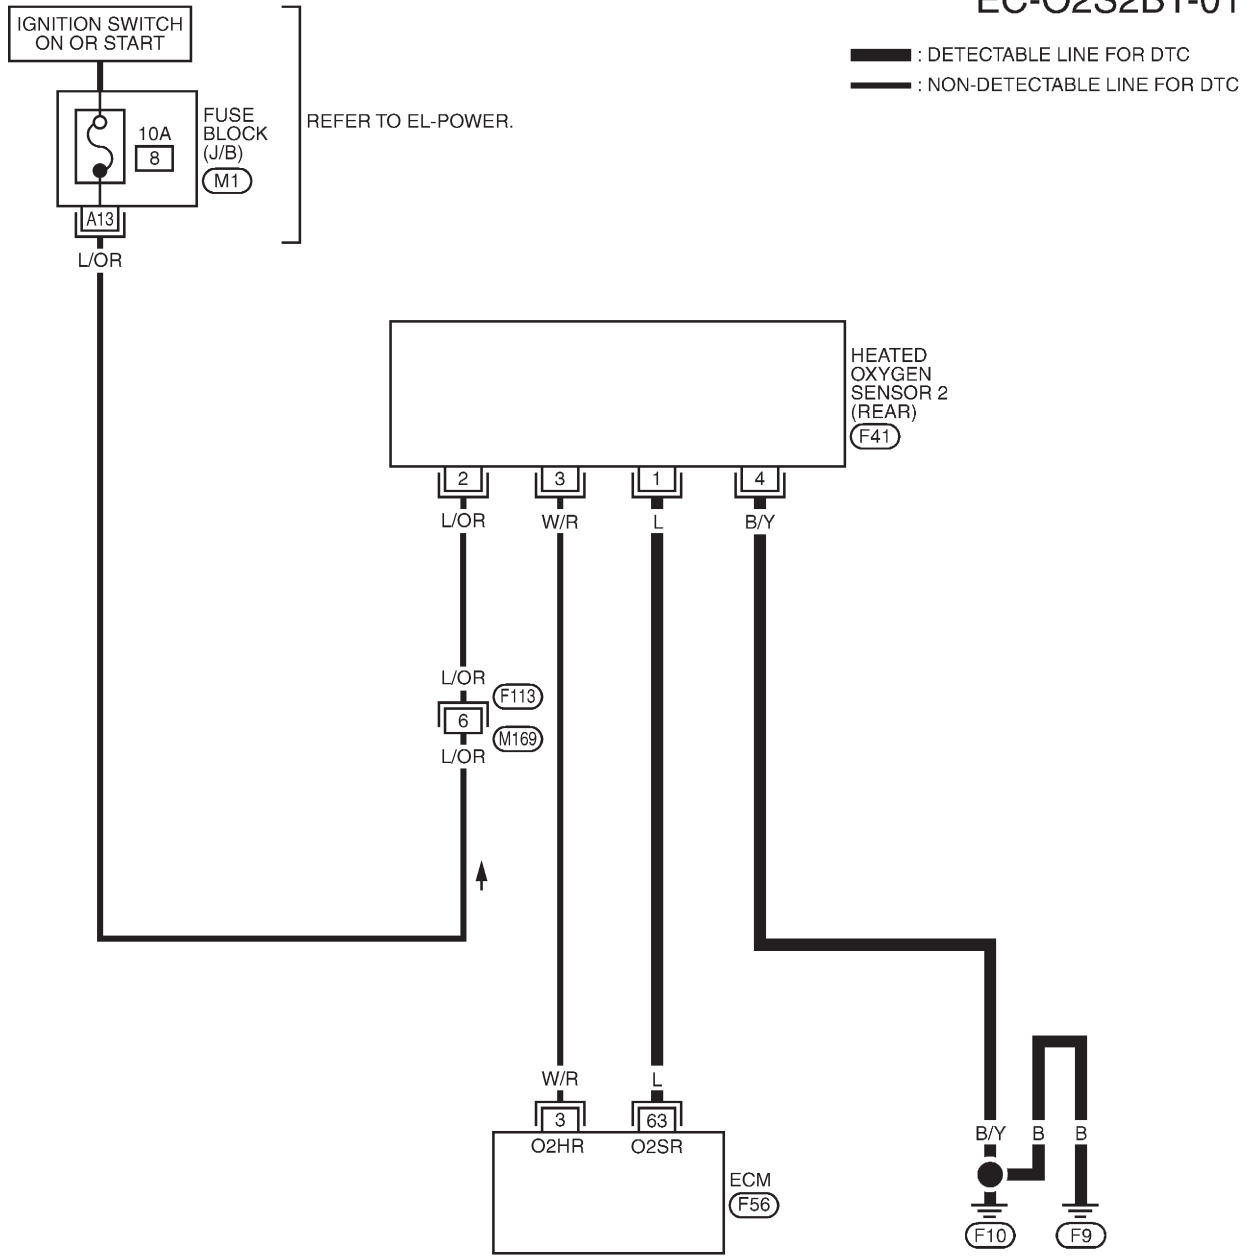

REFER TO THE FOLLOWING.

(M1) - FUSE BLOCK-
JUNCTION BOX (J/B)

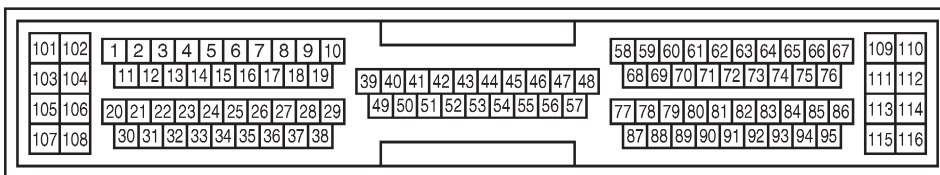

YEC969


DTC P0139 HEATED OXYGEN SENSOR 2 (REAR) (RESPONSE MONITORING)

QG

Diagnostic Procedure

Diagnostic Procedure

NJE0169

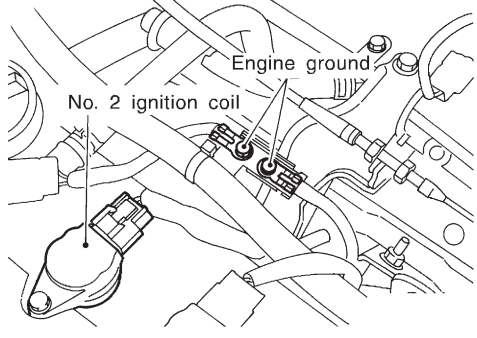
1	RETIGHTEN GROUND SCREWS
<p>1. Turn ignition switch "OFF". 2. Loosen and retighten engine ground screws.</p> <div style="text-align: center;">  <p>The diagram shows a close-up of the engine's ignition system. It labels the 'No. 2 ignition coil' and the 'Engine ground' screws. The ground screws are shown being tightened onto the engine block.</p> </div> <p style="text-align: right;">JEF104Y</p>	
▶ GO TO 2.	

2	CLEAR THE SELF-LEARNING DATA						
<p>Ⓟ With CONSULT-II</p> <p>1. Start engine and warm it up to normal operating temperature. 2. Select "SELF-LEARN CONTROL" in "WORK SUPPORT" mode with CONSULT-II. 3. Clear the self-learning control coefficient by touching "START".</p> <div style="text-align: center;"> <table border="1" style="margin: auto;"> <tr> <th colspan="2">WORK SUPPORT</th> </tr> <tr> <td>SELF-LEARNING CONT</td> <td>B1 100%</td> </tr> <tr> <td colspan="2" style="text-align: center;">CLEAR</td> </tr> </table> </div> <p style="text-align: right;">SEF215Z</p>		WORK SUPPORT		SELF-LEARNING CONT	B1 100%	CLEAR	
WORK SUPPORT							
SELF-LEARNING CONT	B1 100%						
CLEAR							
<p>4. Run engine for at least 10 minutes at idle speed. Is the 1st trip DTC P0172 detected? Is it difficult to start engine?</p>							
<p>ⓧ Without CONSULT-II</p> <p>1. Start engine and warm it up to normal operating temperature. 2. Turn ignition switch "OFF". 3. Disconnect mass air flow sensor harness connector, and restart and run engine for at least 5 seconds at idle speed. 4. Stop engine and reconnect mass air flow sensor harness connector. 5. Make sure 1st trip DTC P0100 is displayed. 6. Erase the 1st trip DTC memory. Refer to "How to Erase Emission-related Diagnostic Information", EC-68. 7. Make sure DTC P0000 is displayed. 8. Run engine for at least 10 minutes at idle speed. Is the 1st trip DTC 0172 detected? Is it difficult to start engine?</p> <p style="text-align: center;">Yes or No</p>							
Yes	▶ Perform trouble diagnosis for DTC P0172. Refer to EC-255.						
No	▶ GO TO 3.						

DTC P0139 HEATED OXYGEN SENSOR 2 (REAR) (RESPONSE MONITORING)

QG

Diagnostic Procedure (Cont'd)

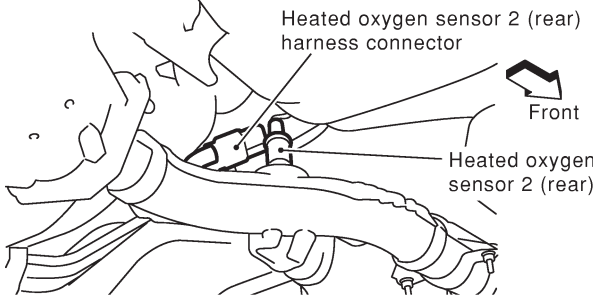3	CHECK INPUT SIGNAL CIRCUIT
<p>1. Disconnect heated oxygen sensor 2 (rear) harness connector and ECM harness connector.</p> <div style="text-align: center;">  <p>View from the underside of the vehicle</p> </div>	
<p>2. Check harness continuity between ECM terminal 63 and heated oxygen sensor 2 (rear) harness connector terminal 1. Refer to wiring diagram. Continuity should exist.</p> <p>3. Check harness continuity between ECM terminal 63 [or heated oxygen sensor 2 (rear) harness connector terminal 1] and ground. Continuity should not exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 5.
NG	▶ GO TO 4.

NEF345A

4	DETECT MALFUNCTIONING PART
Check the harness for open or short between heated oxygen sensor 2 (rear) and ECM.	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

5	CHECK GROUND CIRCUIT
<p>1. Check harness continuity between heated oxygen sensor 2 (rear) harness connector terminal 4 and engine ground. Refer to wiring diagram. Continuity should exist.</p> <p>2. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 6.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

6	CHECK HEATED OXYGEN SENSOR 2 (REAR)
Refer to "Component Inspection", EC-235.	
OK or NG	
OK	▶ GO TO 7.
NG	▶ Replace heated oxygen sensor 2 (rear).

7	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.	
▶	INSPECTION END

DTC P0139 HEATED OXYGEN SENSOR 2 (REAR) (RESPONSE MONITORING)

QG

Component Inspection

ACTIVE TEST	
FUEL INJECTION	25 %
MONITOR	
ENG SPEED	XXX rpm
HO2S1 (B1)	XXX V
HO2S2 (B1)	XXX V
HO2S1 MNTR (B1)	RICH
HO2S2 MNTR (B1)	RICH

SEF662Y

Component Inspection HEATED OXYGEN SENSOR 2 (REAR)

NJEC0170

NJEC0170S01

④ With CONSULT-II



- 1) Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
- 2) Stop vehicle with engine running.
- 3) Select "FUEL INJECTION" in "ACTIVE TEST" mode, and select "HO2S2 (B1)" as the monitor item with CONSULT-II.
- 4) Check "HO2S2 (B1)" at idle speed when adjusting "FUEL INJECTION" to $\pm 25\%$.

"HO2S2 (B1)" should be above 0.68V at least once when the "FUEL INJECTION" is +25%.

"HO2S2 (B1)" should be below 0.56V at least once when the "FUEL INJECTION" is -25%.

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool and approved anti-seize lubricant.

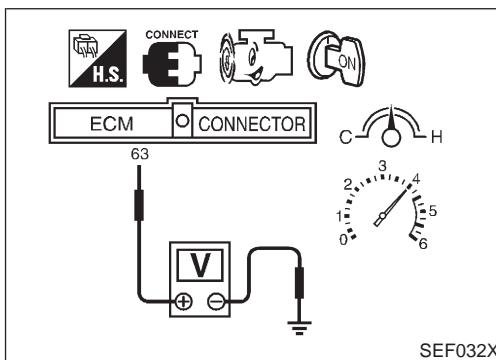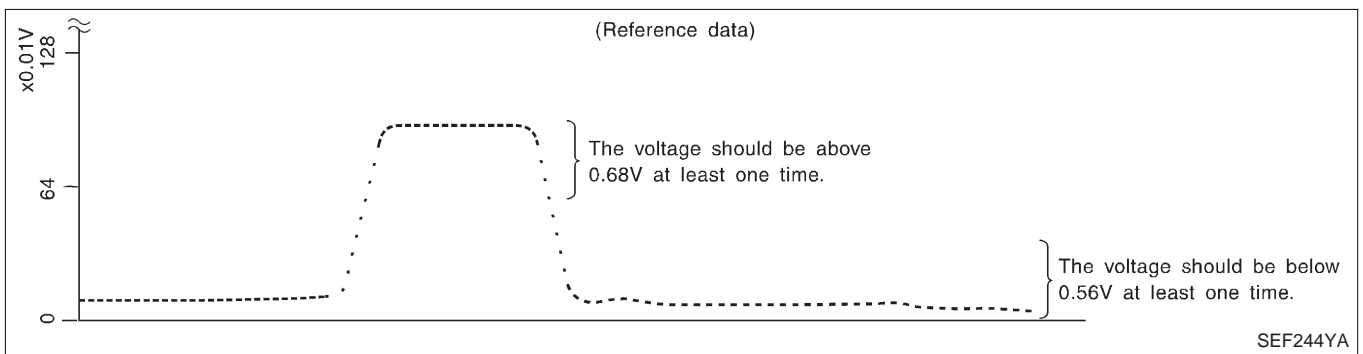

⊗ Without CONSULT-II

- 1) Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
- 2) Stop vehicle with engine running.
- 3) Set voltmeter probes between ECM terminals 63 (HO2S2 signal) and engine ground.
- 4) Check the voltage when revving up to 4,000 rpm under no load at least 10 times.

(Depress and release accelerator pedal as soon as possible.)
The voltage should be above 0.68V at least once.

If the voltage is above 0.68V at step 4, step 5 is not necessary.

- 5) Check the voltage when revving up to 6,000 rpm under no load. Or keep vehicle at idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in 3rd gear position (M/T), D position with "OD" OFF (A/T).

The voltage should be below 0.56V at least once.

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

DTC P0139 HEATED OXYGEN SENSOR 2 (REAR) (RESPONSE MONITORING)

QG


Component Inspection (Cont'd)

- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool and approved anti-seize lubricant.

DTC P0140 HEATED OXYGEN SENSOR 2 (REAR) (HIGH VOLTAGE)

QG

Component Description

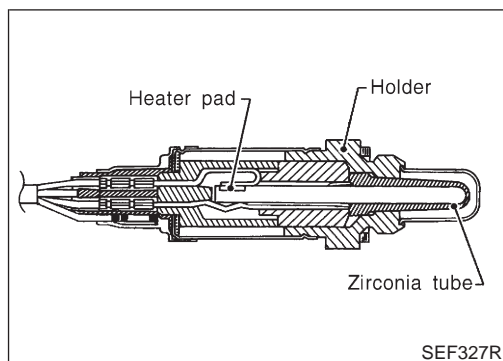

Component Description

NJEC0171

The heated oxygen sensor 2 (rear), after three way catalyst, monitors the oxygen level in the exhaust gas.

Even if switching characteristics of the heated oxygen sensor 1 (front) are shifted, the air fuel ratio is controlled to stoichiometric, by the signal from the heated oxygen sensor 2 (rear).

This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions.

Under normal conditions the heated oxygen sensor 2 (rear) is not used for engine control operation.

CONSULT-II Reference Value in Data Monitor Mode

NJEC0172

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
HO2S2 (B1)	<ul style="list-style-type: none"> Engine: After warming up 	Revsing engine from idle to 3,000 rpm	0 - 0.3V ↔ Approx. 0.6 - 1.0V
HO2S2 MNTR (B1)			LEAN ↔ RICH

ECM Terminals and Reference Value


NJEC0173

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
63	L	Heated oxygen sensor 2 (rear)	[Engine is running] <ul style="list-style-type: none"> After warming up to normal operating temperature and revving engine from idle to 2,000 rpm 	0 - Approximately 1.0V

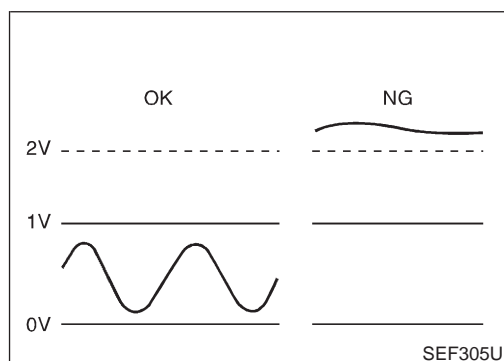

On Board Diagnosis Logic

NJEC0174

The heated oxygen sensor 2 (rear) has a much longer switching time between rich and lean than the heated oxygen sensor 1 (front). The oxygen storage capacity before the three way catalyst causes the longer switching time. To judge the malfunctions of heated oxygen sensor 2 (rear), ECM monitors whether or not the voltage is too high during various driving conditions such as fuel-cut.

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0140 0140	<ul style="list-style-type: none"> An excessively high voltage from the sensor is sent to ECM. 	<ul style="list-style-type: none"> Harness or connectors (The sensor circuit is open or shorted.) Heated oxygen sensor 2 (rear)

DTC P0140 HEATED OXYGEN SENSOR 2 (REAR) (HIGH VOLTAGE)

QG

DTC Confirmation Procedure

5

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm
COOLANT TEMP/S	XXX °C
VHCL SPEED SE	XXX km/h
B/FUEL SCHDL	XXX msec

SEF189Y

DTC Confirmation Procedure

NJEC0175

NOTE:


If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 9 seconds before conducting the next test.

Ⓜ With CONSULT-II

- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT-II.
- 2) Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
- 3) Stop vehicle with engine running.
- 4) Let engine idle for 1 minute.
- 5) Maintain the following conditions for at least 5 consecutive minutes.

ENG SPEED	Above 1,500 rpm
Selector lever	Suitable position

- 6) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-240.

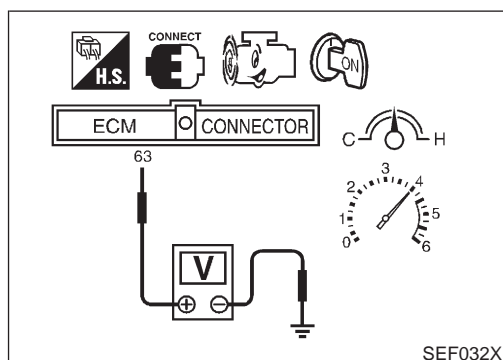

Overall Function Check

NJEC0176

Use this procedure to check the overall function of the heated oxygen sensor 2 (rear) circuit. During this check, a 1st trip DTC might not be confirmed.

ⓧ Without CONSULT-II

- 1) Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
- 2) Stop vehicle with engine running.
- 3) Set voltmeter probes between ECM terminals 63 (HO2S2 signal) and engine ground.
- 4) Check the voltage after revving up to 4,000 rpm under no load at least 10 times.
(Depress and release accelerator pedal as soon as possible.)
The voltage should be below 2V during this procedure.
- 5) If NG, go to "Diagnostic Procedure", EC-240.

DTC P0140 HEATED OXYGEN SENSOR 2 (REAR) (HIGH VOLTAGE)



QG

Wiring Diagram

Wiring Diagram


NJEC0177

EC-O2S2B1-01

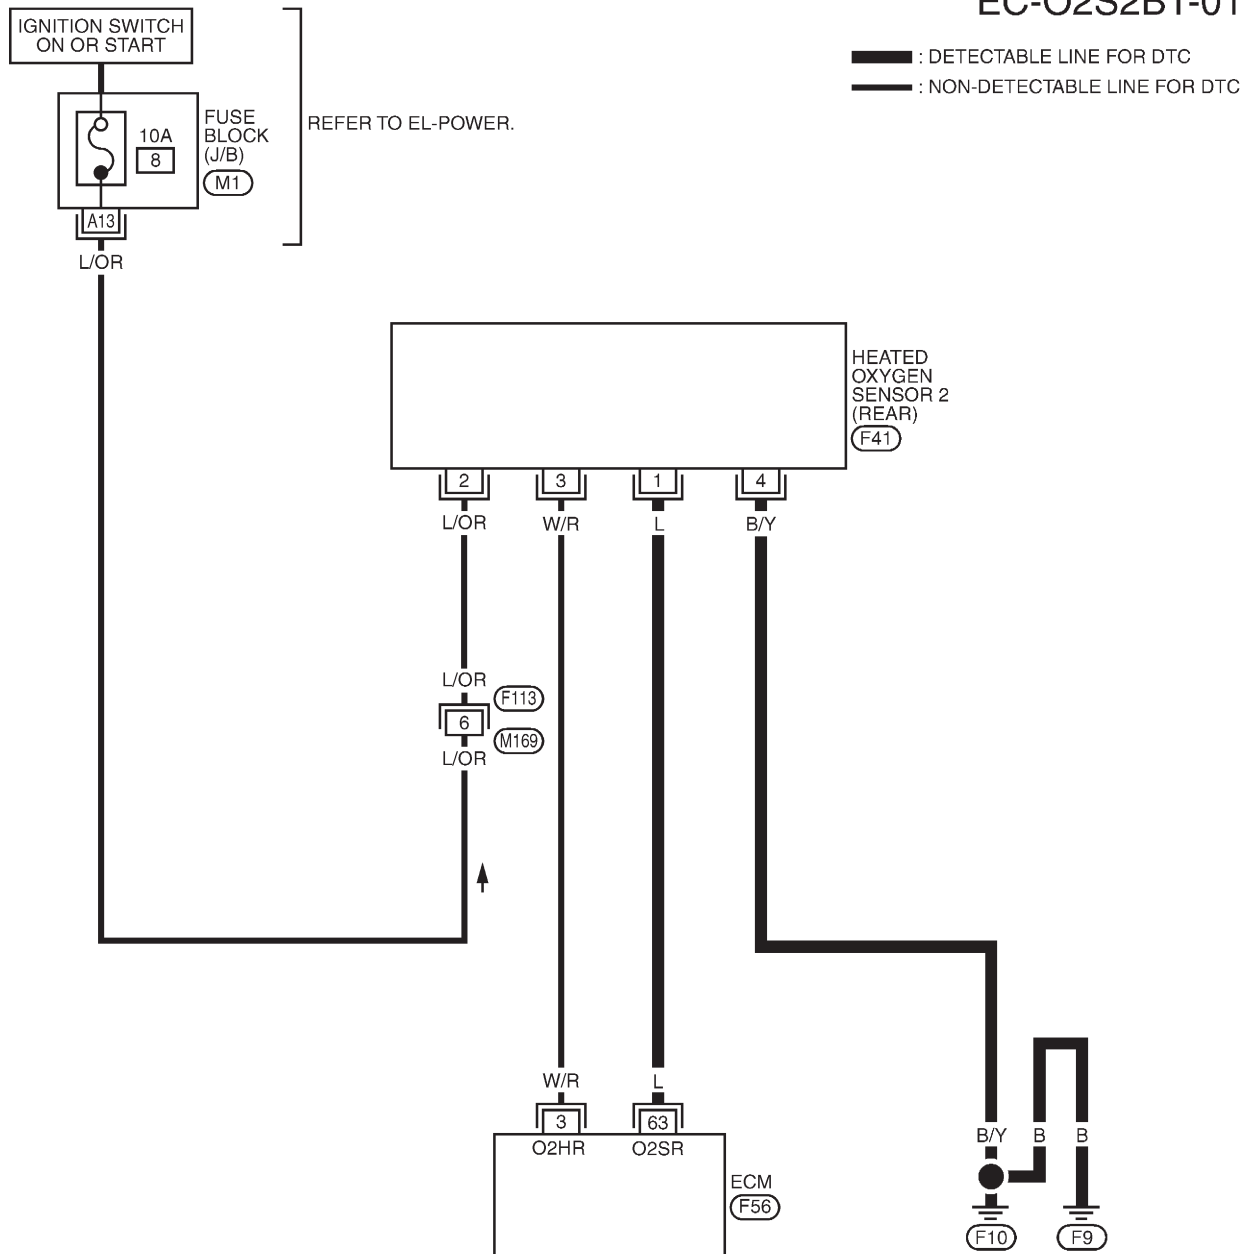

REFER TO THE FOLLOWING.

(M1) - FUSE BLOCK-
JUNCTION BOX (J/B)

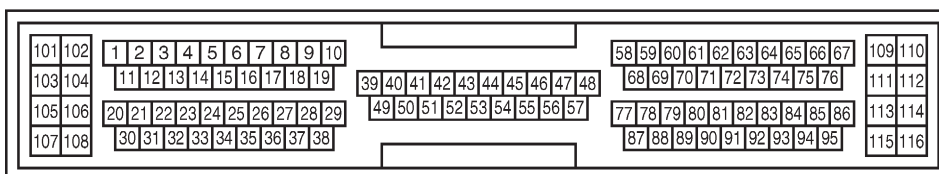

YEC969


DTC P0140 HEATED OXYGEN SENSOR 2 (REAR) (HIGH VOLTAGE)


QG

Diagnostic Procedure

Diagnostic Procedure

NJEC0178

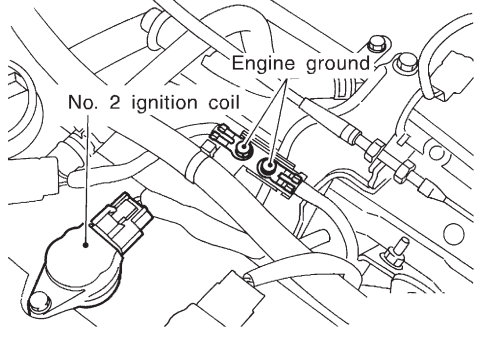1	RETIGHTEN GROUND SCREWS
<ol style="list-style-type: none">1. Turn ignition switch "OFF".2. Loosen and retighten engine ground screws.	
 <p>The diagram shows a close-up of the engine compartment. It highlights the 'Engine ground' screws and the 'No. 2 ignition coil'. A hand is shown using a screwdriver to adjust one of the ground screws.</p>	
JEF104Y	
▶ GO TO 2.	

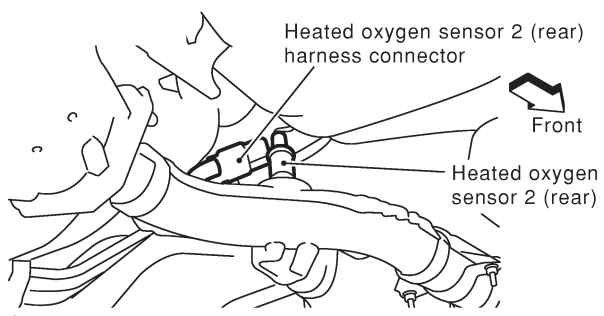2	CHECK INPUT SIGNAL CIRCUIT
<ol style="list-style-type: none">1. Disconnect heated oxygen sensor 2 (rear) harness connector and ECM harness connector.	
 <p>The diagram shows the 'Heated oxygen sensor 2 (rear) harness connector' and the 'Heated oxygen sensor 2 (rear)'. A 'Front' arrow indicates the orientation. Below the diagram, it says 'View from the underside of the vehicle'.</p>	
NEF345A	
<ol style="list-style-type: none">2. Check harness continuity between ECM terminal 63 and heated oxygen sensor 2 (rear) harness connector terminal 1. Refer to wiring diagram. Continuity should exist.3. Check harness continuity between ECM terminal 63 [or heated oxygen sensor 2 (rear) harness connector terminal 1] and ground. Continuity should not exist.4. Also check harness for short to ground and short to power.	
OK or NG	
OK	▶ GO TO 4.
NG	▶ GO TO 3.

3	DETECT MALFUNCTIONING PART
Check the harness for open or short between heated oxygen sensor 2 (rear) and ECM.	
▶ Repair open circuit or short to ground or short to power in harness or connectors.	

DTC P0140 HEATED OXYGEN SENSOR 2 (REAR) (HIGH VOLTAGE)

QG

Diagnostic Procedure (Cont'd)

4	CHECK GROUND CIRCUIT	
1. Check harness continuity between heated oxygen sensor 2 (rear) harness connector terminal 4 and engine ground. Refer to wiring diagram. Continuity should exist.		
2. Also check harness for short to ground and short to power.		
OK or NG		
OK	▶	GO TO 5.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

5	CHECK HARNESS CONNECTOR	
Check heated oxygen sensor 2 (rear) harness connector for water. Water should not exist.		
OK or NG		
OK	▶	GO TO 6.
NG	▶	Repair or replace harness connector.

6	CHECK HEATED OXYGEN SENSOR 2 (REAR)	
Refer to "Component Inspection", EC-241.		
OK or NG		
OK	▶	GO TO 7.
NG	▶	Replace heated oxygen sensor 2 (rear).

7	CHECK INTERMITTENT INCIDENT	
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.		
▶		INSPECTION END

ACTIVE TEST	
FUEL INJECTION	25 %
MONITOR	
ENG SPEED	XXX rpm
HO2S1 (B1)	XXX V
HO2S2 (B1)	XXX V
HO2S1 MNTR (B1)	RICH
HO2S2 MNTR (B1)	RICH

SEF662Y

Component Inspection HEATED OXYGEN SENSOR 2 (REAR)

NJEC0179

NJEC0179S01

Ⓟ With CONSULT-II

- 1) Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
- 2) Stop vehicle with engine running.
- 3) Select "FUEL INJECTION" in "ACTIVE TEST" mode, and select "HO2S2 (B1)" as the monitor item with CONSULT-II.
- 4) Check "HO2S2 (B1)" at idle speed when adjusting "FUEL INJECTION" to $\pm 25\%$.
"HO2S2 (B1)" should be above 0.68V at least once when the "FUEL INJECTION" is +25%.
"HO2S2 (B1)" should be below 0.56V at least once when the "FUEL INJECTION" is -25%.



CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool and approved anti-seize lubricant.

DTC P0140 HEATED OXYGEN SENSOR 2 (REAR) (HIGH VOLTAGE)

QG

Component Inspection (Cont'd)

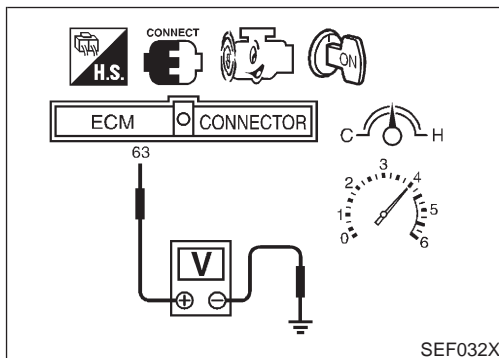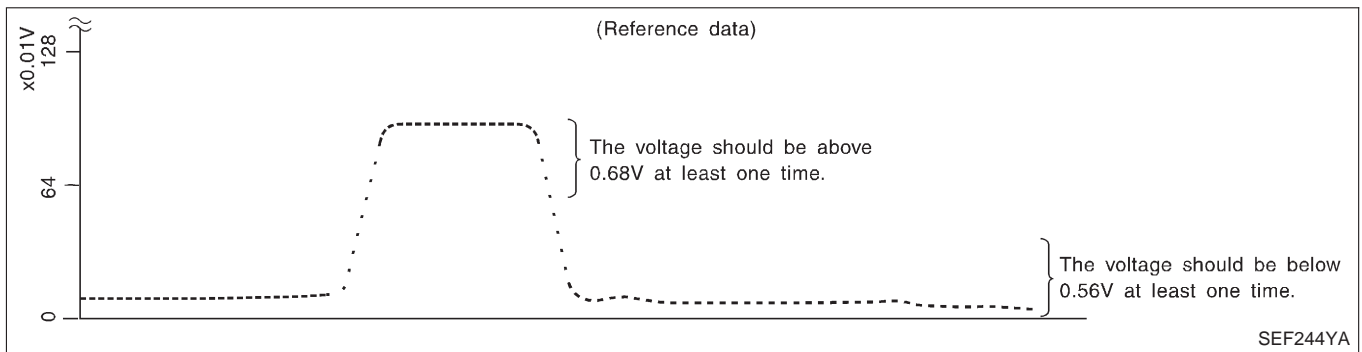

⊗ Without CONSULT-II

- 1) Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
- 2) Stop vehicle with engine running.
- 3) Set voltmeter probes between ECM terminals 63 (HO2S2 signal) and engine ground.
- 4) Check the voltage when revving up to 4,000 rpm under no load at least 10 times.
(Depress and release accelerator pedal as soon as possible.)
The voltage should be above 0.68V at least once.
If the voltage is above 0.68V at step 4, step 5 is not necessary.
- 5) Check the voltage when revving up to 6,000 rpm under no load. Or keep vehicle at idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in 3rd gear position (M/T), D position with "OD" OFF (A/T).
The voltage should be below 0.56V at least once.

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool and approved anti-seize lubricant.

DTC P0141 HEATED OXYGEN SENSOR 2 HEATER (REAR)

QG
Description

Description

NJEC0180

SYSTEM DESCRIPTION

NJEC0180S01

Sensor	Input Signal to ECM	ECM function	Actuator
Camshaft position sensor (PHASE) Crankshaft position sensor (POS)	Engine speed	Heated oxygen sensor 2 heater (rear) control	Heated oxygen sensor 2 heater (rear)

The ECM performs ON/OFF control of the heated oxygen sensor 2 heater (rear) corresponding to the engine speed.

OPERATION

NJEC0180S02

Engine condition	Heated oxygen sensor 2 heater (rear)
Engine stopped	OFF
Engine is running.	ON
After driving for 2 minutes at a speed of 70 km/h (43 MPH) or more	ON
Engine speed above 3,600 rpm	OFF

CONSULT-II Reference Value in Data Monitor Mode

NJEC0181

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
HO2S2 HTR (B1)	<ul style="list-style-type: none"> ● Engine speed 	ON
	Below 3,600 rpm [After driving for 2 minutes at a speed of 70 km/h (43 MPH) or more]	ON
	Above 3,600 rpm	OFF
<ul style="list-style-type: none"> ● Ignition switch ON (Engine stopped) 		OFF

ECM Terminals and Reference Value

NJEC0182

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
3	W/R	Heated oxygen sensor 2 heater (rear)	[Engine is running] <ul style="list-style-type: none"> ● Engine speed is below 3,600 rpm [After driving for 2 minutes at a speed of 70 km/h (43 MPH) or more] 	Approximately 0.7V
			[Engine is running] <ul style="list-style-type: none"> ● Engine speed is above 3,600 rpm 	BATTERY VOLTAGE
			[Ignition switch "ON"] <ul style="list-style-type: none"> ● Engine stopped 	(11 - 14V)

DTC P0141 HEATED OXYGEN SENSOR 2 HEATER (REAR)

QG

On Board Diagnosis Logic

On Board Diagnosis Logic

NJEC0183

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0141 0141	<ul style="list-style-type: none">The current amperage in the heated oxygen sensor 2 heater (rear) circuit is out of the normal range. [An improper voltage drop signal is sent to ECM through the heated oxygen sensor 2 heater (rear).]	<ul style="list-style-type: none">Harness or connectors (The heated oxygen sensor 2 heater (rear) circuit is open or shorted.)Heated oxygen sensor 2 heater (rear)

DTC Confirmation Procedure

NJEC0184

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 9 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is in between 10.5V and 16V at idle.

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm
VHCL SPEED SE	XXX km/h
THRTL POS SEN	XXX V

SEF175Y

With CONSULT-II

- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT-II.
- 2) Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes. Engine speed must be maintained at speeds of 3,600 rpm or less during vehicle operations.
- 3) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-246.

With GST

- 1) Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes. Engine speed must be maintained at speeds of 3,600 rpm or less during vehicle operations.
- 2) Turn ignition switch "OFF" and wait at least 9 seconds.
- 3) Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
- 4) Select "MODE 3" with GST.
- 5) If DTC is detected, go to "Diagnostic Procedure", EC-246.

When using GST, "DTC Confirmation Procedure" should be performed twice as much as when using CONSULT-II because GST cannot display MODE 7 (1st trip DTC) concerning this diagnosis. Therefore, using CONSULT-II is recommended.

DTC P0141 HEATED OXYGEN SENSOR 2 HEATER (REAR)


QG

Wiring Diagram

Wiring Diagram


NJEC0185

EC-O2H2B1-01

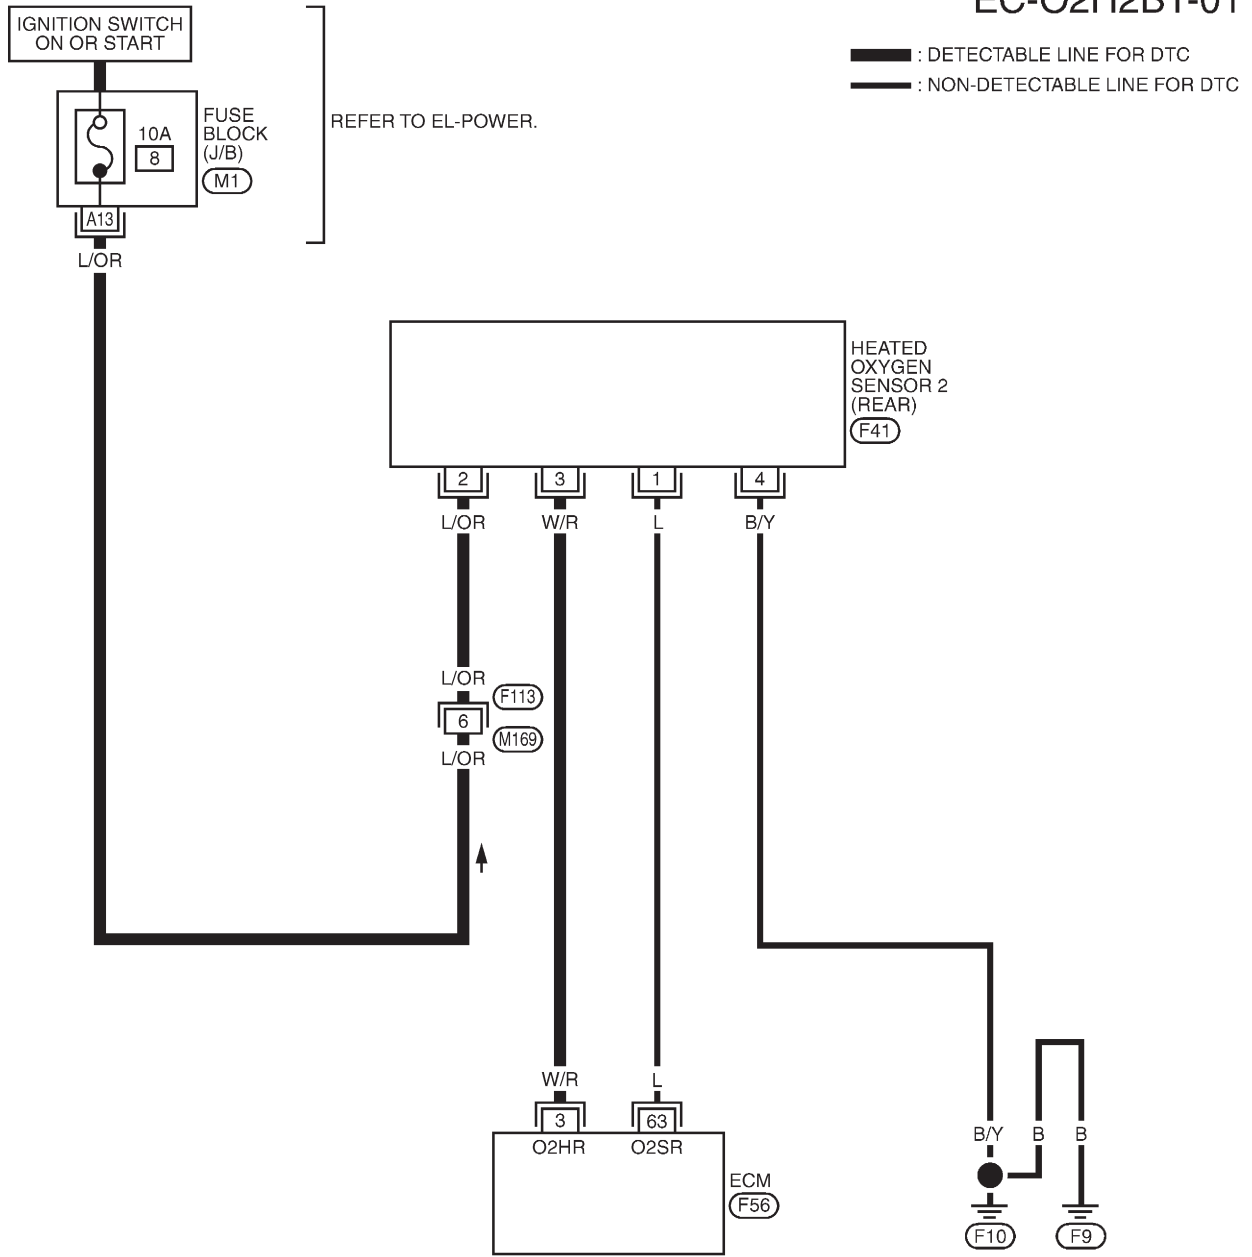

REFER TO THE FOLLOWING.



(M1) - FUSE BLOCK-
JUNCTION BOX (J/B)

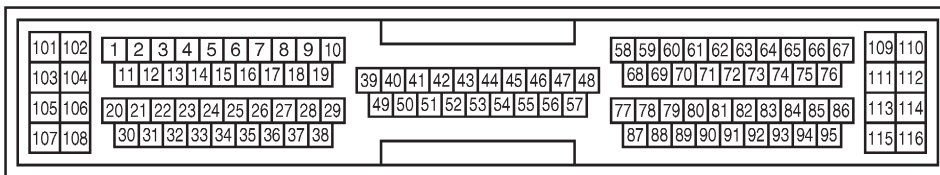

YEC970

Diagnostic Procedure

NJEC0186

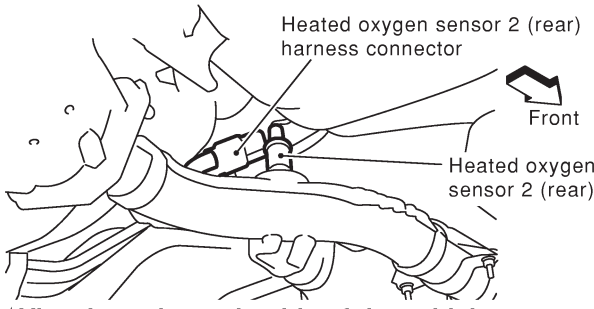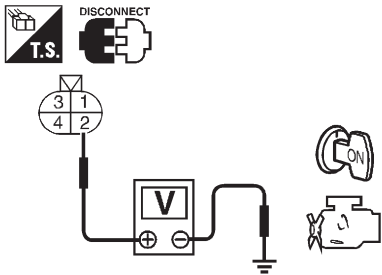1	CHECK POWER SUPPLY		
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect heated oxygen sensor 2 (rear) harness connector. 			
 <p style="text-align: center;">View from the underside of the vehicle</p>			
<ol style="list-style-type: none"> 3. Turn ignition switch "ON". 4. Check voltage between terminal 2 and ground. 			
			
OK or NG			
OK	▶	GO TO 3.	
NG	▶	GO TO 2.	

NEF345A
SEF218W

2	DETECT MALFUNCTIONING PART		
Check the following. <ul style="list-style-type: none"> ● Harness connectors M169, F113 ● Harness for open or short between heated oxygen sensor 2 (rear) and fuse ● 10A fuse 			
▶		Repair harness or connectors.	

3	CHECK GROUND CIRCUIT		
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between heated oxygen sensor 2 (rear) harness connector terminal 3 and ECM terminal 3. Refer to wiring diagram. Continuity should exist. 4. Also check harness for short to ground and short to power. 			
OK or NG			
OK	▶	GO TO 5.	
NG	▶	GO TO 4.	

4	DETECT MALFUNCTIONING PART		
Check the harness for open or short between heated oxygen sensor 2 heater (rear) and ECM.			
▶		Repair open circuit or short to ground or short to power in harness or connectors.	


DTC P0141 HEATED OXYGEN SENSOR 2 HEATER (REAR)

QG

Diagnostic Procedure (Cont'd)

5	CHECK HEATED OXYGEN SENSOR 2 HEATER (REAR)	
Refer to "Component Inspection", EC-247.		
OK or NG		
OK	▶	GO TO 6.
NG	▶	Replace heated oxygen sensor 2 (rear).

6	CHECK INTERMITTENT INCIDENT	
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.		
▶		INSPECTION END

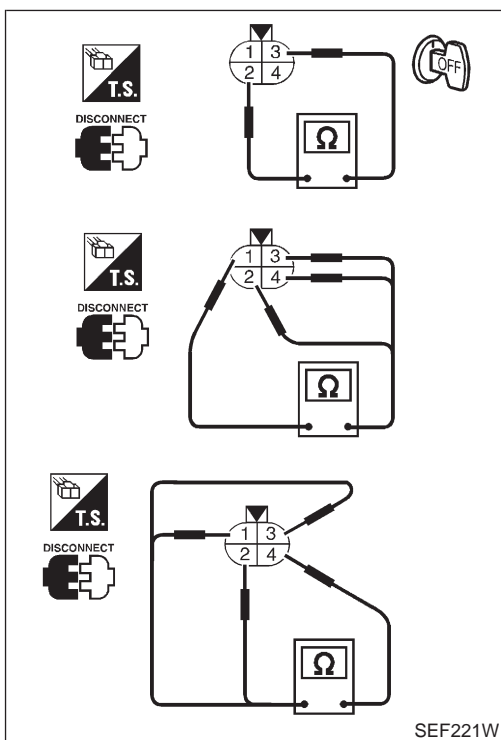

Component Inspection

HEATED OXYGEN SENSOR 2 HEATER (REAR)

NJEC0187
NJEC0187S01

Check the following.

- Check resistance between terminals 1 and 4.
Resistance: 2.3 - 4.3Ω at 25°C (77°F)
- Check continuity.

Terminal No.	Continuity
1 and 2, 3, 4	No
4 and 1, 2, 3	

If NG, replace the heated oxygen sensor 2 (rear).

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool and approved anti-seize lubricant.

On Board Diagnosis Logic




NJEC0188

With the Air/Fuel Mixture Ratio Self-Learning Control, the actual mixture ratio can be brought closely to the theoretical mixture ratio based on the mixture ratio feedback signal from the heated oxygen sensor 1 (front). The ECM calculates the necessary compensation to correct the offset between the actual and the theoretical ratios.

In case the amount of the compensation value is extremely large (The actual mixture ratio is too lean.), the ECM judges the condition as the fuel injection system malfunction and lights up the MIL (2 trip detection logic).

Sensor	Input Signal to ECM	ECM function	Actuator
Heated oxygen sensor 1 (front)	Density of oxygen in exhaust gas (Mixture ratio feedback signal)	Fuel injection & mixture ratio control	Injectors

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0171 0171	<ul style="list-style-type: none"> ● Fuel injection system does not operate properly. ● The amount of mixture ratio compensation is too large. (The mixture ratio is too lean.) 	<ul style="list-style-type: none"> ● Intake air leaks ● Heated oxygen sensor 1 (front) ● Injectors ● Exhaust gas leaks ● Incorrect fuel pressure ● Lack of fuel ● Mass air flow sensor

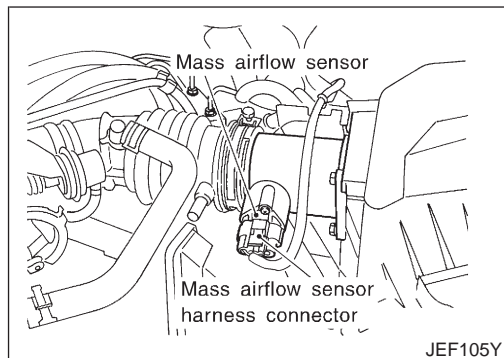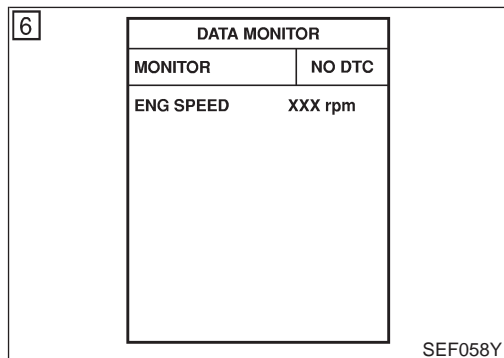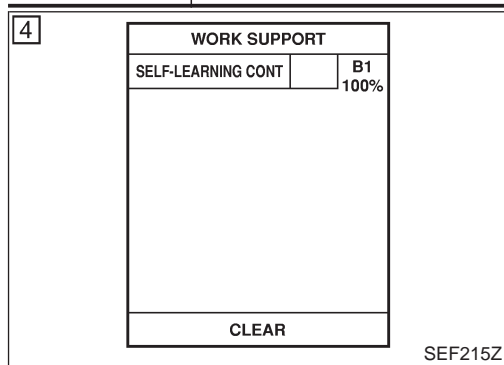

DTC Confirmation Procedure

NJEC0189

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 9 seconds before conducting the next test.

With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 9 seconds.
- 3) Turn ignition switch "ON" and select "SELF-LEARN CONTROL" in "WORK SUPPORT" mode with CONSULT-II.
- 4) Clear the self-learning control coefficient by touching "START".
- 5) Select "DATA MONITOR" mode with CONSULT-II.
- 6) Start engine again and let it idle for at least 10 minutes. The 1st trip DTC P0171 should be detected at this stage, if a malfunction exists. If so, go to "Diagnostic Procedure", EC-251.
- 7) If it is difficult to start engine at step 6, the fuel injection system has a malfunction.
- 8) Crank engine while depressing accelerator pedal. If engine starts, go to "Diagnostic Procedure", EC-251. If engine does not start, visually check for exhaust and intake air leak.

With GST

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 9 seconds.
- 3) Disconnect mass air flow sensor harness connector. Then restart and run engine for at least 3 seconds at idle speed.
- 4) Stop engine and reconnect mass air flow sensor harness connector.
- 5) Select "MODE 7" with GST. Make sure 1st trip DTC P0100 is detected.
- 6) Select "MODE 4" with GST and erase the 1st trip DTC P0100.

DTC P0171 FUEL INJECTION SYSTEM FUNCTION (LEAN SIDE)

QG

DTC Confirmation Procedure (Cont'd)

- 7) Start engine again and run it for at least 10 minutes at idle speed.
- 8) Select "MODE 7" with GST. The 1st trip DTC P0171 should be detected at this stage, if a malfunction exists. If so, go to "Diagnostic Procedure", EC-251.
- 9) If it is difficult to start engine at step 8, the fuel injection system has a malfunction.
- 10) Crank engine while depressing accelerator pedal. If engine starts, go to "Diagnostic Procedure", EC-251. If engine does not start, visually check for exhaust and intake air leak.

DTC P0171 FUEL INJECTION SYSTEM FUNCTION (LEAN SIDE)


QG

Wiring Diagram

Wiring Diagram


NJEC0190

EC-FUEL-01

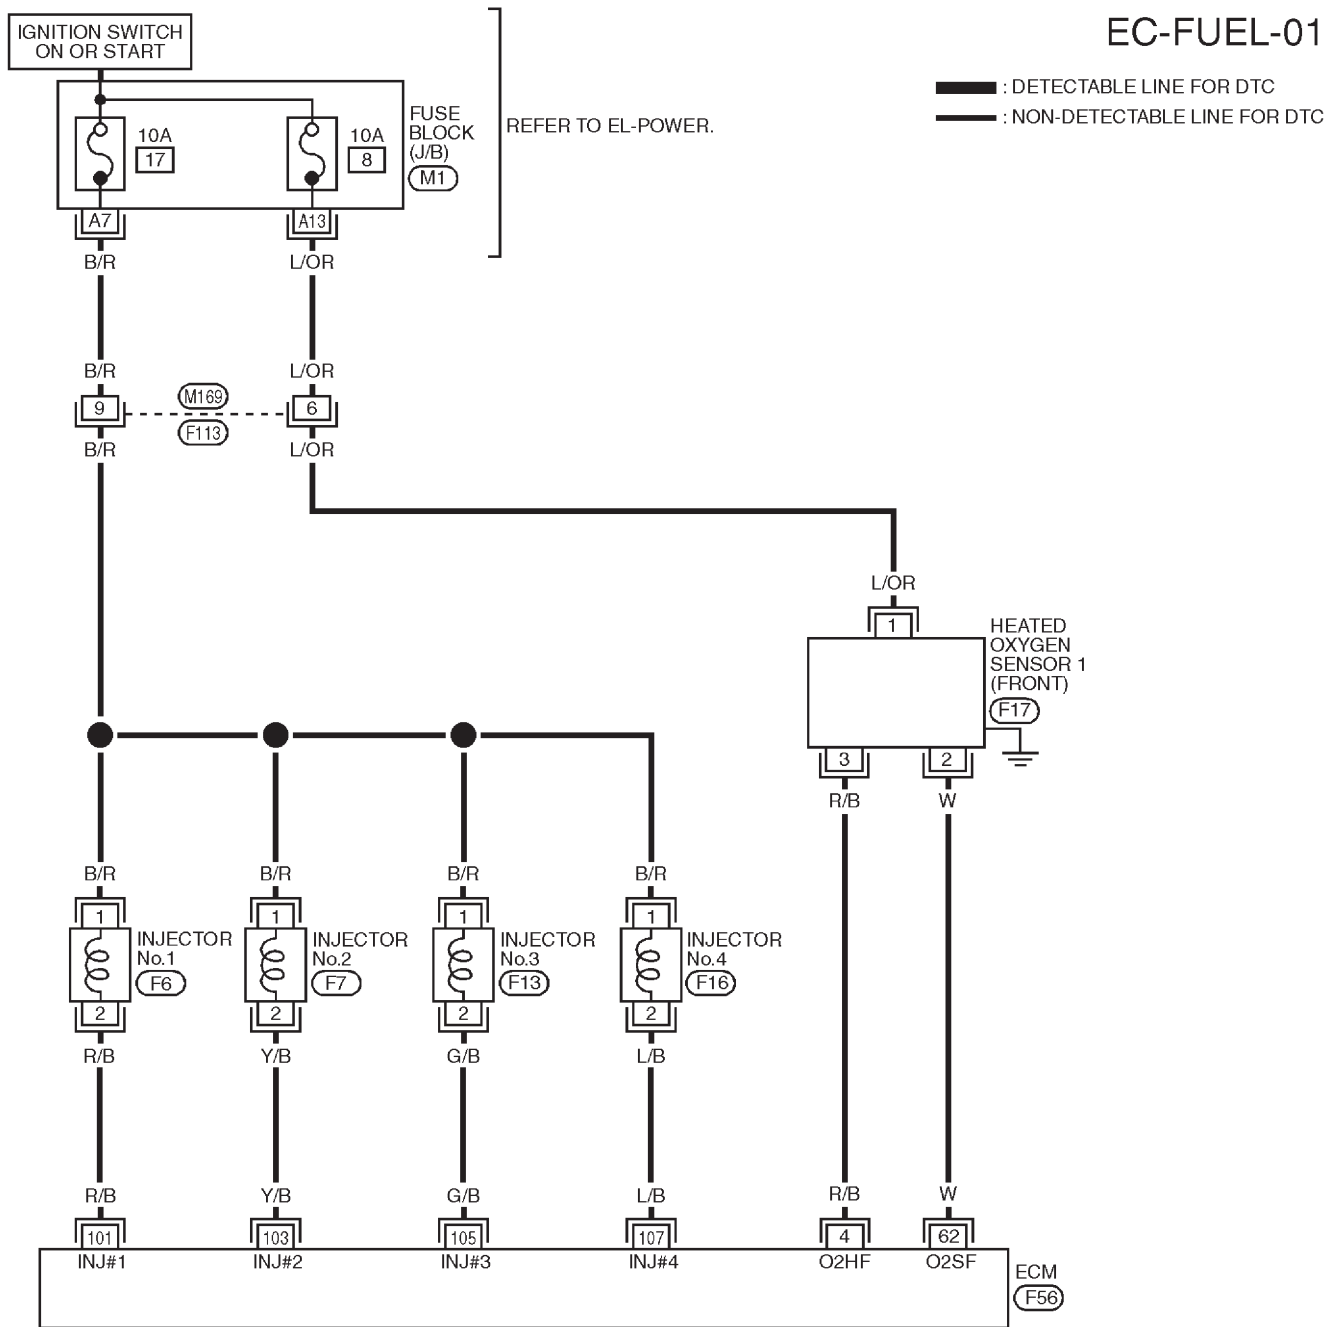

REFER TO THE FOLLOWING.

(M1) - FUSE BLOCK- JUNCTION BOX (J/B)



101	102	1	2	3	4	5	6	7	8	9	10					58	59	60	61	62	63	64	65	66	67	109	110									
103	104	11	12	13	14	15	16	17	18	19					39	40	41	42	43	44	45	46	47	48	68	69	70	71	72	73	74	75	76	111	112	
105	106	20	21	22	23	24	25	26	27	28	29				49	50	51	52	53	54	55	56	57	77	78	79	80	81	82	83	84	85	86	113	114	
107	108	30	31	32	33	34	35	36	37	38																									115	116


F56 GY

H.S.


YEC971

Diagnostic Procedure

NJEC0191

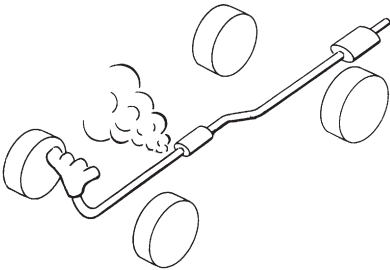1	CHECK EXHAUST AIR LEAK	
<p>1. Start engine and run it at idle. 2. Listen for an exhaust air leak before three way catalyst.</p>		
		
SEF099P		
OK or NG		
OK	▶	GO TO 2.
NG	▶	Repair or replace.

2	CHECK FOR INTAKE AIR LEAK	
Listen for an intake air leak after the mass air flow sensor.		
OK or NG		
OK	▶	GO TO 3.
NG	▶	Repair or replace.

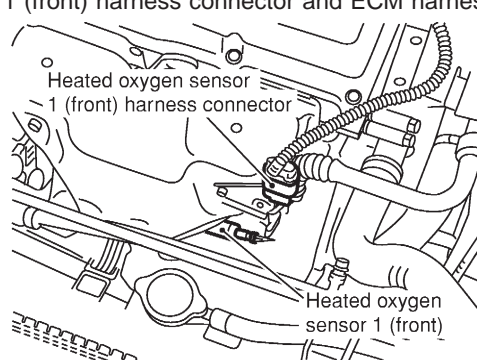3	CHECK HEATED OXYGEN SENSOR 1 (FRONT) CIRCUIT	
<p>1. Turn ignition switch "OFF". 2. Disconnect heated oxygen sensor 1 (front) harness connector and ECM harness connector.</p>		
		
SEF012XA		
<p>3. Check harness continuity between ECM terminal 62 and heated oxygen sensor 1 (front) harness connector terminal 2. Refer to wiring diagram. Continuity should exist.</p> <p>4. Check harness continuity between ECM terminal 62 [or heated oxygen sensor 1 (front) harness connector terminal 2] and ground. Continuity should not exist.</p> <p>5. Also check harness for short to ground and short to power.</p>		
OK or NG		
OK	▶	GO TO 4.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.



DTC P0171 FUEL INJECTION SYSTEM FUNCTION (LEAN SIDE)

QG

Diagnostic Procedure (Cont'd)

4		CHECK FUEL PRESSURE
1. Release fuel pressure to zero. Refer to EC-38.		
2. Install fuel pressure gauge and check fuel pressure. At idling: When fuel pressure regulator valve vacuum hose is connected. 235 kPa (2.35 bar, 2.4 kg/cm², 34 psi) When fuel pressure regulator valve vacuum hose is disconnected. 294 kPa (2.94 bar, 3.0 kg/cm², 43 psi)		
OK or NG		
OK	▶	GO TO 6.
NG	▶	GO TO 5.

5		DETECT MALFUNCTIONING PART
Check the following.		
<ul style="list-style-type: none">● Fuel pump and circuit (Refer to EC-464.)● Fuel pressure regulator (Refer to EC-39.)● Fuel lines (Refer to "ENGINE MAINTENANCE" in MA section.)● Fuel filter for clogging		
	▶	Repair or replace.

6		CHECK MASS AIR FLOW SENSOR
 With CONSULT-II Check "MASS AIR FLOW" in "DATA MONITOR" mode with CONSULT-II. at idling: 1.0 - 4.0 g-m/sec at 2,500 rpm: 5.0 - 10.0 g-m/sec		
 With GST Check mass air flow sensor signal in MODE 1 with GST. at idling: 1.0 - 4.0 g-m/sec at 2,500 rpm: 5.0 - 10.0 g-m/sec		
OK or NG		
OK	▶	GO TO 7.
NG	▶	Check connectors for rusted terminals or loose connections in the mass air flow sensor circuit or engine grounds. Refer to EC-152.

DTC P0171 FUEL INJECTION SYSTEM FUNCTION (LEAN SIDE)

QG

Diagnostic Procedure (Cont'd)

7 CHECK FUNCTION OF INJECTORS

Ⓟ With CONSULT-II

1. Install all parts removed.
2. Start engine.
3. Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT-II.


ACTIVE TEST	
POWER BALANCE	
MONITOR	
ENG SPEED	XXX rpm
MAS A/F SE-B1	XXX V
IACV-AAC/V	XXX step

SEF190Y

4. Make sure that each circuit produces a momentary engine speed drop.

ⓧ Without CONSULT-II

1. Install all parts removed.
2. Start engine.
3. Listen to each injector operating sound.

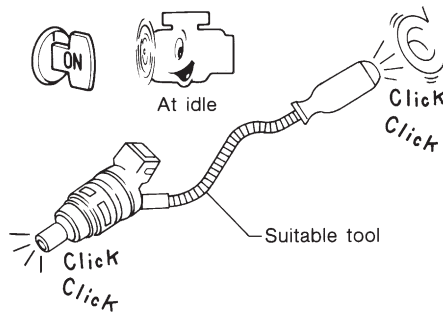

MEC703B

Clicking noise should be heard.

OK or NG

OK	▶	GO TO 8.
NG	▶	Perform trouble diagnosis for "INJECTORS", EC-446.

8 REMOVE INJECTOR


1. Confirm that the engine is cooled down and there are no fire hazards near the vehicle.
2. Turn ignition switch "OFF".
3. Remove injector with fuel tube assembly. Refer to EC-39.
Keep fuel hose and all injectors connected to injector gallery. The injector harness connectors should remain connected.

	▶	GO TO 9.
--	---	----------

DTC P0171 FUEL INJECTION SYSTEM FUNCTION (LEAN SIDE)

QG

Diagnostic Procedure (Cont'd)

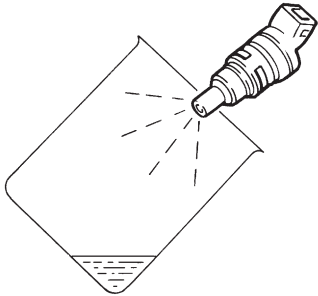9	CHECK INJECTOR
<p>1. Disconnect all ignition coil harness connectors. 2. Place pans or saucers under each injector. 3. Crank engine for about 3 seconds. Make sure that fuel sprays out from injectors.</p>	
	
<p>Fuel should be sprayed evenly for each cylinder.</p>	
<p>SEF595Q</p>	
<p>OK or NG</p>	
OK	▶ GO TO 10.
NG	▶ Replace injectors from which fuel does not spray out. Always replace O-ring with new one.

10	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.	
	▶ INSPECTION END

On Board Diagnosis Logic




NJEC0192

With the Air/Fuel Mixture Ratio Self-Learning Control, the actual mixture ratio can be brought closely to the theoretical mixture ratio based on the mixture ratio feedback signal from the heated oxygen sensor 1 (front). The ECM calculates the necessary compensation to correct the offset between the actual and the theoretical ratios.

In case the amount of the compensation value is extremely large (The actual mixture ratio is too rich.), the ECM judges the condition as the fuel injection system malfunction and lights up the MIL (2 trip detection logic).

Sensor	Input Signal to ECM	ECM function	Actuator
Heated oxygen sensor 1 (front)	Density of oxygen in exhaust gas (Mixture ratio feedback signal)	Fuel injection & mixture ratio control	Injectors

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0172 0172	<ul style="list-style-type: none"> ● Fuel injection system does not operate properly. ● The amount of mixture ratio compensation is too large. (The mixture ratio is too rich.) 	<ul style="list-style-type: none"> ● Heated oxygen sensor 1 (front) ● Injectors ● Exhaust gas leaks ● Incorrect fuel pressure ● Mass air flow sensor

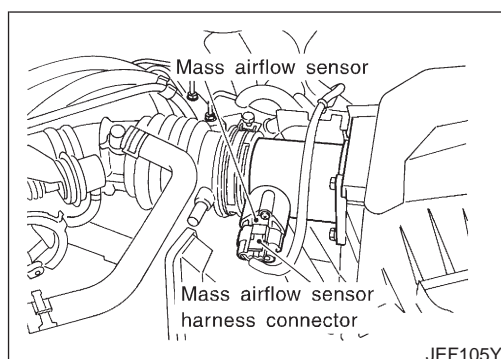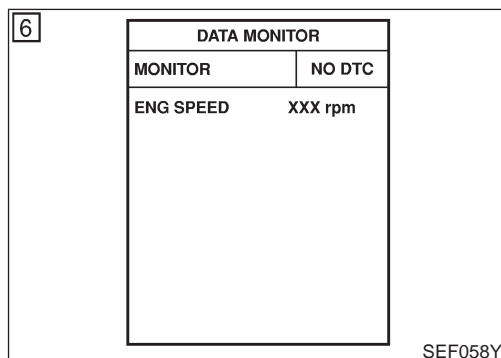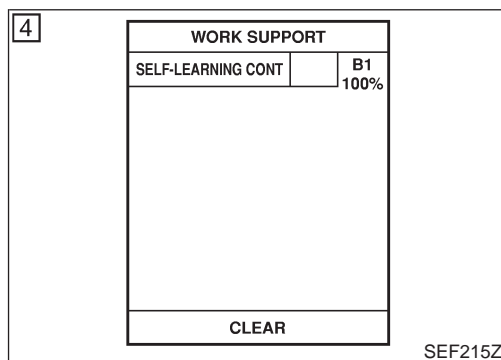

DTC Confirmation Procedure

NJEC0193

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 9 seconds before conducting the next test.

With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 9 seconds.
- 3) Turn ignition switch "ON" and select "SELF-LEARN CONTROL" in "WORK SUPPORT" mode with CONSULT-II.
- 4) Clear the self-learning control coefficient by touching "START".
- 5) Select "DATA MONITOR" mode with CONSULT-II.
- 6) Start engine again and let it idle for at least 10 minutes. The 1st trip DTC P0172 should be detected at this stage, if a malfunction exists. If so, go to "Diagnostic Procedure", EC-258.
- 7) If it is difficult to start engine at step 6, the fuel injection system has a malfunction.
- 8) Crank engine while depressing accelerator pedal. If engine starts, go to "Diagnostic Procedure", EC-258. If engine does not start, remove ignition plugs and check for fouling, etc.

With GST

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 9 seconds.
- 3) Disconnect mass air flow sensor harness connector. Then restart and run engine for at least 3 seconds at idle speed.
- 4) Stop engine and reconnect mass air flow sensor harness connector.
- 5) Select "MODE 7" with GST. Make sure 1st trip DTC P0100 is detected.
- 6) Select "MODE 4" with GST and erase the 1st trip DTC P0100.

DTC P0172 FUEL INJECTION SYSTEM FUNCTION (RICH SIDE)

QG

DTC Confirmation Procedure (Cont'd)

- 7) Start engine again and run it for at least 10 minutes at idle speed.
- 8) Select "MODE 7" with GST. The 1st trip DTC P0172 should be detected at this stage, if a malfunction exists. If so, go to "Diagnostic Procedure", EC-258.
- 9) If it is difficult to start engine at step 8, the fuel injection system has a malfunction.
- 10) Crank engine while depressing accelerator pedal. If engine starts, go to "Diagnostic Procedure", EC-258. If engine does not start, remove ignition plugs and check for fouling, etc.

DTC P0172 FUEL INJECTION SYSTEM FUNCTION (RICH SIDE)


QG

Wiring Diagram


Wiring Diagram

NJEC0194

EC-FUEL-01

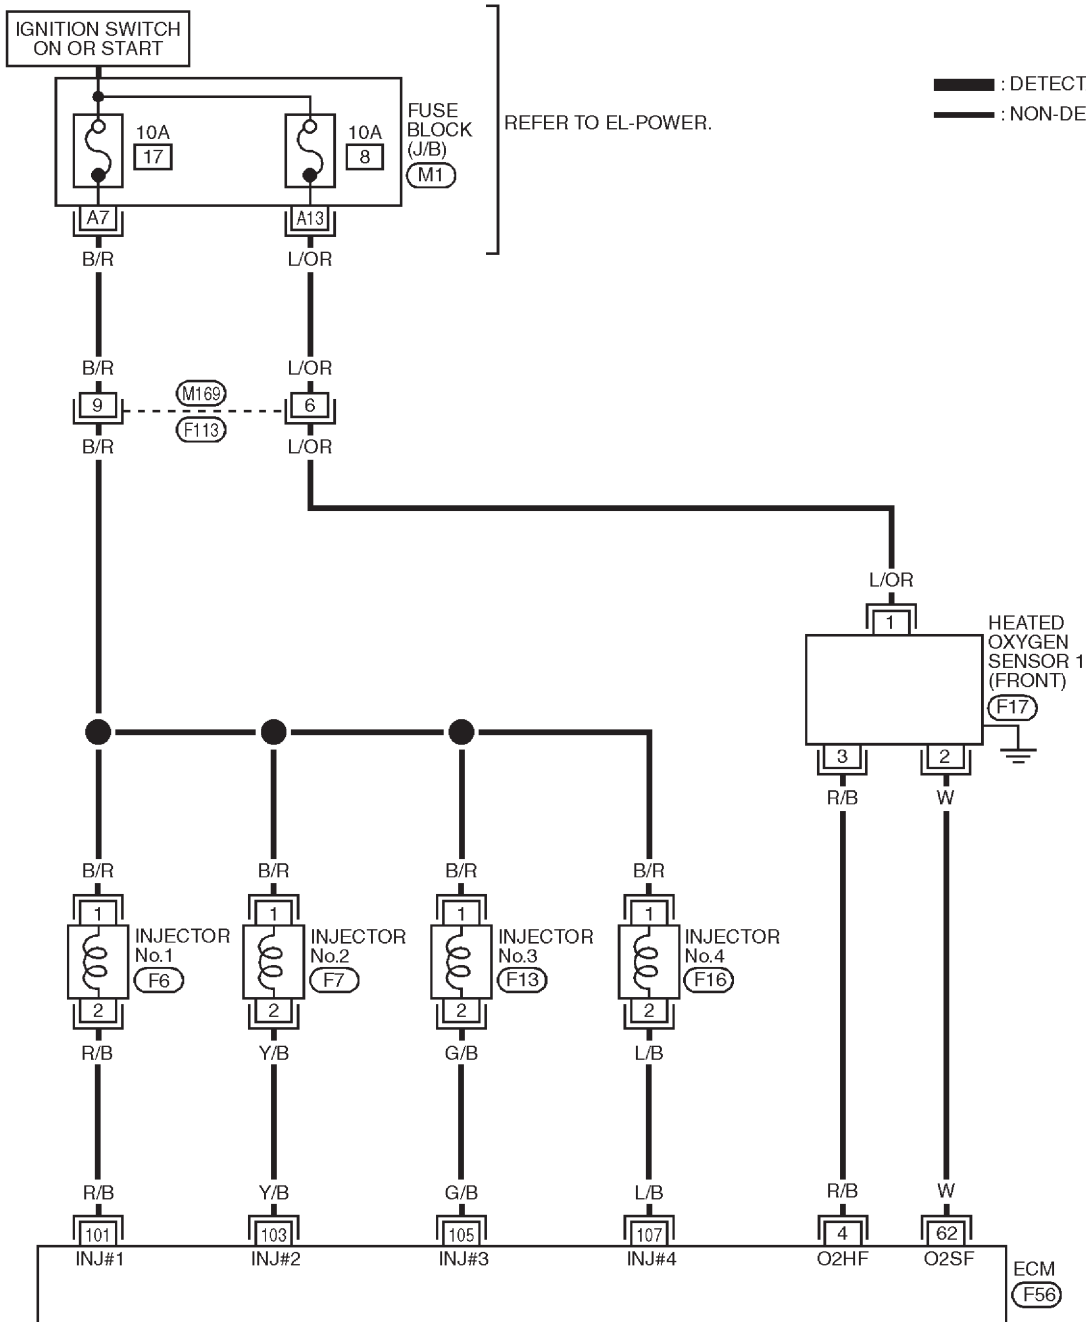

— : DETECTABLE LINE FOR DTC
 — : NON-DETECTABLE LINE FOR DTC



REFER TO THE FOLLOWING.

(M1) - FUSE BLOCK- JUNCTION BOX (J/B)


101	102	1	2	3	4	5	6	7	8	9	10					58	59	60	61	62	63	64	65	66	67	109	110					
103	104	11	12	13	14	15	16	17	18	19	39	40	41	42	43	44	45	46	47	48	68	69	70	71	72	73	74	75	76	111	112	
105	106	20	21	22	23	24	25	26	27	28	29	49	50	51	52	53	54	55	56	57	77	78	79	80	81	82	83	84	85	86	113	114
107	108	30	31	32	33	34	35	36	37	38											87	88	89	90	91	92	93	94	95	115	116	




YEC971

Diagnostic Procedure

NJEC0195

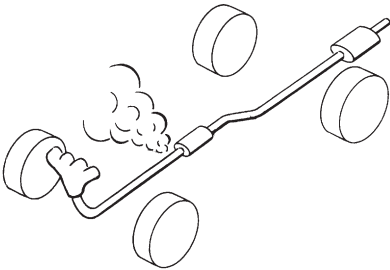1	CHECK FOR EXHAUST AIR LEAK		
<p>1. Start engine and run it at idle. 2. Listen for an exhaust air leak before the three way catalyst.</p> <div style="text-align: center;">  </div> <div style="text-align: right;"><small>SEF099P</small></div>			
OK or NG			
OK	▶	GO TO 2.	
NG	▶	Repair or replace.	

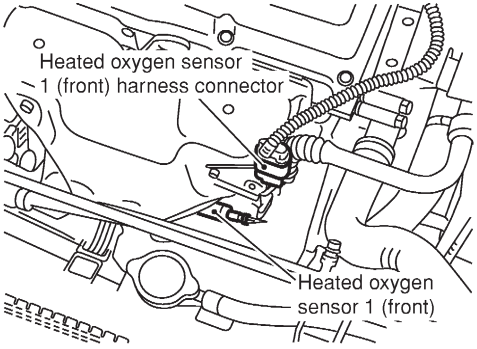2	CHECK HEATED OXYGEN SENSOR 1 (FRONT) CIRCUIT		
<p>1. Turn ignition switch "OFF". 2. Disconnect heated oxygen sensor 1 (front) harness connector and ECM harness connector.</p> <div style="text-align: center;">  </div> <div style="text-align: right;"><small>SEF012XA</small></div>			
<p>3. Check harness continuity between ECM terminal 62 and heated oxygen sensor 1 (front) harness connector terminal 2. Refer to wiring diagram. Continuity should exist.</p> <p>4. Check harness continuity between ECM terminal 62 [or heated oxygen sensor 1 (front) harness connector terminal 2] and ground. Continuity should not exist.</p> <p>5. Also check harness for short to ground and short to power.</p>			
OK or NG			
OK	▶	GO TO 3.	
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.	



DTC P0172 FUEL INJECTION SYSTEM FUNCTION (RICH SIDE)

QG

Diagnostic Procedure (Cont'd)

3		CHECK FUEL PRESSURE
1. Release fuel pressure to zero. Refer to EC-38.		
2. Install fuel pressure gauge and check fuel pressure. At idling: When fuel pressure regulator valve vacuum hose is connected. Approximately 235 kPa (2.35 bar, 2.4 kg/cm², 34 psi) When fuel pressure regulator valve vacuum hose is disconnected. Approximately 294 kPa (2.94 bar, 3.0 kg/cm², 43 psi)		
OK or NG		
OK	▶	GO TO 5.
NG	▶	GO TO 4.


4		DETECT MALFUNCTIONING PART
Check the following.		
<ul style="list-style-type: none">Fuel pump and circuit (Refer to EC-464.)Fuel pressure regulator (Refer to EC-39.)		
	▶	Repair or replace.

5		CHECK MASS AIR FLOW SENSOR
 With CONSULT-II Check "MASS AIR FLOW" in "DATA MONITOR" mode with CONSULT-II. at idling: 1.0 - 4.0 g-m/sec at 2,500 rpm: 5.0 - 10.0 g-m/sec		
 With GST Check mass air flow sensor signal in MODE 1 with GST. at idling: 1.0 - 4.0 g-m/sec at 2,500 rpm: 5.0 - 10.0 g-m/sec		
OK or NG		
OK	▶	GO TO 6.
NG	▶	Check connectors for rusted terminals or loose connections in the mass air flow sensor circuit or engine grounds. Refer to EC-155.

DTC P0172 FUEL INJECTION SYSTEM FUNCTION (RICH SIDE)

QG

Diagnostic Procedure (Cont'd)

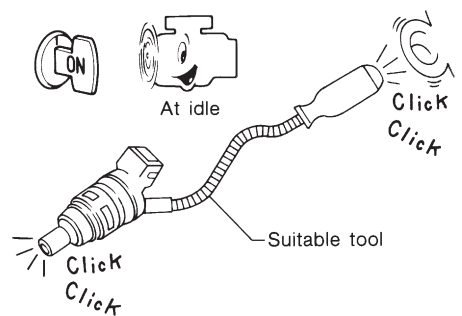6	CHECK FUNCTION OF INJECTORS																
<p>Ⓟ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Install all parts removed. 2. Start engine. 3. Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT-II. 																	
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr><th colspan="2">ACTIVE TEST</th></tr> <tr><td>POWER BALANCE</td><td></td></tr> <tr><th colspan="2">MONITOR</th></tr> <tr><td>ENG SPEED</td><td>XXX rpm</td></tr> <tr><td>MAS A/F SE-B1</td><td>XXX V</td></tr> <tr><td>IACV-AAC/V</td><td>XXX step</td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table>		ACTIVE TEST		POWER BALANCE		MONITOR		ENG SPEED	XXX rpm	MAS A/F SE-B1	XXX V	IACV-AAC/V	XXX step				
ACTIVE TEST																	
POWER BALANCE																	
MONITOR																	
ENG SPEED	XXX rpm																
MAS A/F SE-B1	XXX V																
IACV-AAC/V	XXX step																
SEF190Y																	
<ol style="list-style-type: none"> 4. Make sure that each circuit produces a momentary engine speed drop. 																	
<p>ⓧ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Install all parts removed. 2. Start engine. 3. Listen to each injector operating sound. 																	
																	
<p>Clicking noise should be heard.</p> <p>OK or NG</p>																	
OK	▶ GO TO 7.																
NG	▶ Perform trouble diagnosis for "INJECTORS", EC-447.																

7	REMOVE INJECTOR
<ol style="list-style-type: none"> 1. Confirm that the engine is cooled down and there are no fire hazards near the vehicle. 2. Turn ignition switch "OFF". 3. Remove injector assembly. Refer to EC-39. Keep fuel hose and all injectors connected to injector gallery. 	
▶ GO TO 8.	

8	CHECK INJECTOR
<ol style="list-style-type: none"> 1. Disconnect all injector harness connectors. 2. Disconnect all ignition coil harness connectors. 3. Prepare pans or saucers under each injectors. 4. Crank engine for about 3 seconds. Make sure fuel does not drip from injector. 	
OK or NG	
OK (Does not drip)	▶ GO TO 9.
NG (Drips)	▶ Replace the injectors from which fuel is dripping. Always replace O-ring with new one.

DTC P0172 FUEL INJECTION SYSTEM FUNCTION (RICH SIDE)

QG

Diagnostic Procedure (Cont'd)

9	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.	
▶	INSPECTION END

DTC P0300 - P0304 NO. 4 - 1 CYLINDER MISFIRE, MULTIPLE CYLINDER MISFIRE

QG

On Board Diagnosis Logic

On Board Diagnosis Logic

NJECD0202


If a misfire occurs, the engine speed will fluctuate. If the fluctuation is detected by the crankshaft position sensor (POS), the misfire is diagnosed.

Sensor	Input Signal to ECM	ECM function
Crankshaft position sensor (POS)	Engine speed	On board diagnosis of misfire

The misfire detection logic consists of the following two conditions.

1. **One Trip Detection Logic (Three Way Catalyst Damage)**
 When a misfire is detected which will overheat and damage the three way catalyst, the MI will start blinking; even during the first trip. In this condition, ECM monitors the misfire every 200 revolutions. If the misfire frequency decreases to a level that will not damage the three way catalyst, the MI will change from blinking to lighting up. (After the first trip detection, the MI will light up from engine starting. If a misfire is detected that will cause three way catalyst damage, the MI will start blinking.)
2. **Two Trip Detection Logic (Exhaust quality deterioration)**
 When a misfire that will not damage the three way catalyst (but will affect exhaust emission) occurs, the MI will light up based on two trip detection logic. In this condition, ECM monitors the misfire for every 1,000 revolutions of the engine.

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0300 0300	<ul style="list-style-type: none"> ● Multiple cylinders misfire. 	<ul style="list-style-type: none"> ● Improper spark plug ● Insufficient compression ● Incorrect fuel pressure ● EGR volume control valve ● The injector circuit is open or shorted ● Injectors ● Intake air leak ● Insufficient ignition spark ● Lack of fuel ● Heated oxygen sensor 1 (front)
P0301 0301	<ul style="list-style-type: none"> ● No. 1 cylinder misfires. 	
P0302 0302	<ul style="list-style-type: none"> ● No. 2 cylinder misfires. 	
P0303 0303	<ul style="list-style-type: none"> ● No. 3 cylinder misfires. 	
P0304 0304	<ul style="list-style-type: none"> ● No. 4 cylinder misfires. 	

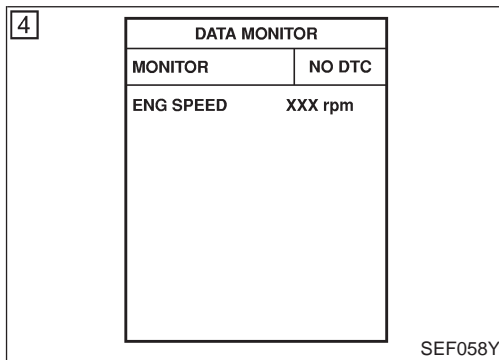

DTC Confirmation Procedure

NJECD0203

CAUTION:
Always drive vehicle at a safe speed.

NOTE:
 If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 9 seconds before conducting the next test.

Ⓜ With CONSULT-II

- 1) Turn ignition switch "ON", and select "DATA MONITOR" mode with CONSULT-II.
- 2) Start engine and warm it up to normal operating temperature.
- 3) Turn ignition switch "OFF" and wait at least 9 seconds.
- 4) Start engine again and drive at 1,500 - 3,000 rpm for at least 3 minutes.
 Hold the accelerator pedal as steady as possible.

NOTE:
Refer to the freeze frame data for the test driving conditions.
 5) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-263.

Ⓜ With GST

Follow the procedure "With CONSULT-II" above.

DTC P0300 - P0304 NO. 4 - 1 CYLINDER MISFIRE, MULTIPLE CYLINDER MISFIRE

QG

Diagnostic Procedure

Diagnostic Procedure

NJEC0204

1	CHECK FOR INTAKE AIR LEAK
1. Start engine and run it at idle speed. 2. Listen for the sound of the intake air leak.	
OK or NG	
OK	▶ GO TO 2.
NG	▶ Discover air leak location and repair.


2	CHECK FOR EXHAUST SYSTEM CLOGGING
Stop engine and visually check exhaust tube, three way catalyst and muffler for dents.	
OK or NG	
OK	▶ GO TO 3.
NG	▶ Repair or replace it.


3	CHECK EGR FUNCTION
Perform DTC Confirmation Procedure for DTC P1402 EGR FUNCTION (OPEN). Refer to EC-353.	
OK or NG	
OK	▶ GO TO 4.
NG	▶ Repair EGR system.

DTC P0300 - P0304 NO. 4 - 1 CYLINDER MISFIRE, MULTIPLE CYLINDER MISFIRE

QG

Diagnostic Procedure (Cont'd)

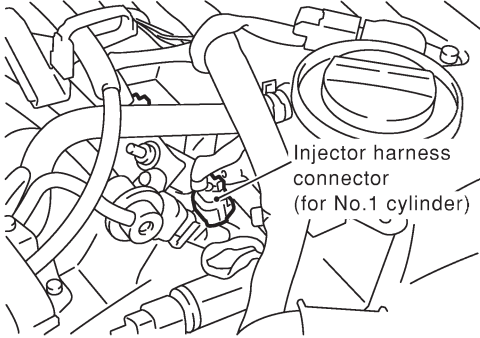
4	PERFORM POWER BALANCE TEST																
<p>Ⓟ With CONSULT-II 1. Perform "POWER BALANCE" in "ACTIVE TEST" mode.</p>																	
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr><th colspan="2">ACTIVE TEST</th></tr> <tr><th colspan="2">POWER BALANCE</th></tr> <tr><th colspan="2">MONITOR</th></tr> <tr><td>ENG SPEED</td><td>XXX rpm</td></tr> <tr><td>MAS A/F SE-B1</td><td>XXX V</td></tr> <tr><td>IACV-AAC/V</td><td>XXX step</td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table>		ACTIVE TEST		POWER BALANCE		MONITOR		ENG SPEED	XXX rpm	MAS A/F SE-B1	XXX V	IACV-AAC/V	XXX step				
ACTIVE TEST																	
POWER BALANCE																	
MONITOR																	
ENG SPEED	XXX rpm																
MAS A/F SE-B1	XXX V																
IACV-AAC/V	XXX step																
SEF190Y																	
2. Is there any cylinder which does not produce a momentary engine speed drop?																	
<p>ⓧ Without CONSULT-II When disconnecting each injector harness connector one at a time, is there any cylinder which does not produce a momentary engine speed drop?</p>																	
 <p style="text-align: center;">Injector harness connector (for No.1 cylinder)</p>																	
SEF604Y																	
Yes or No																	
Yes	▶ GO TO 5.																
No	▶ GO TO 7.																

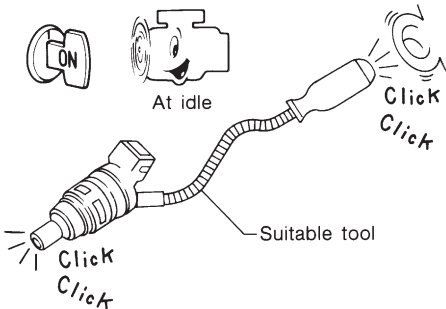
5	CHECK INJECTOR
Does each injector make an operating sound at idle?	
 <p style="text-align: center;">At idle</p> <p style="text-align: center;">Suitable tool</p>	
MEC703B	
Yes or No	
Yes	▶ GO TO 6.
No	▶ Check injector(s) and circuit(s). Refer to EC-447.

DTC P0300 - P0304 NO. 4 - 1 CYLINDER MISFIRE, MULTIPLE CYLINDER MISFIRE

QG

Diagnostic Procedure (Cont'd)

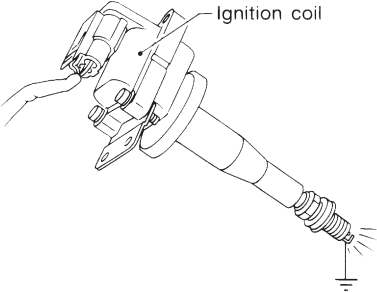6	CHECK IGNITION SPARK	
<p>1. Turn Ignition switch "OFF". 2. Disconnect ignition coil assembly from rocker cover. 3. Connect a known good spark plug to the ignition coil assembly. 4. Place end of spark plug against a suitable ground and crank engine. 5. Check for spark.</p>		
		
SEF575Q		
OK or NG		
OK	▶	GO TO 7.
NG	▶	Check ignition coil, power transistor and their circuits. Refer to EC-451.

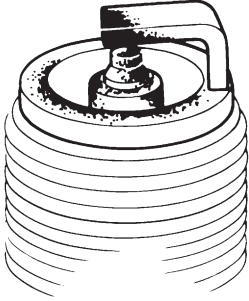
7	CHECK SPARK PLUGS	
Remove the spark plugs and check for fouling, etc.		
		
SEF156I		
OK or NG		
OK	▶	GO TO 8.
NG	▶	Repair or replace spark plug(s) with standard type one(s). For spark plug type, refer to EM-18, "Checking and changing".

8	CHECK COMPRESSION PRESSURE	
Refer to EM section.		
<ul style="list-style-type: none"> ● Check compression pressure. <ul style="list-style-type: none"> Standard: 1,324 kPa (13.24 bar, 13.5 kg/cm², 192 psi)/350 rpm Minimum: 1,128 kPa (11.28 bar, 11.5 kg/cm², 164 psi)/350 rpm Difference between each cylinder: 98 kPa (0.98 bar, 1.0 kg/cm², 14 psi)/350 rpm 		
OK or NG		
OK	▶	GO TO 9.
NG	▶	Check pistons, piston rings, valves, valve seats and cylinder head gaskets.

DTC P0300 - P0304 NO. 4 - 1 CYLINDER MISFIRE, MULTIPLE CYLINDER MISFIRE

QG

Diagnostic Procedure (Cont'd)

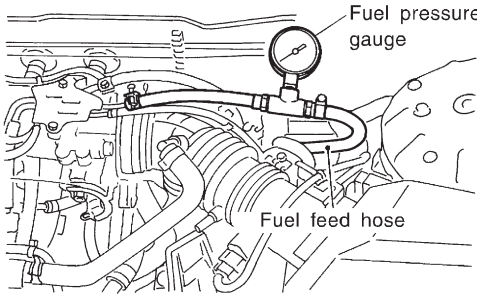9	CHECK FUEL PRESSURE	
<p>1. Install any parts removed.</p> <p>2. Release fuel pressure to zero. Refer to EC-38.</p> <p>3. Install fuel pressure gauge and check fuel pressure.</p>		
 <p>The diagram shows a fuel system with a fuel pressure gauge connected to a fuel feed hose. The gauge is mounted on the hose, and the hose is connected to the fuel system. The fuel system includes a fuel pump, fuel filter, and fuel lines.</p>		
<p>At idle: Approx. 235 kPa (2.35 bar, 2.4 kg/cm², 34 psi)</p> <p>OK or NG</p>		
OK	▶	GO TO 11.
NG	▶	GO TO 10.

JEF087Y

10	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Fuel pump and circuit (Refer to EC-464.) ● Fuel pressure regulator (Refer to EC-39.) ● Fuel lines ● Fuel filter for clogging 		
		▶ Repair or replace.



11	CHECK IGNITION TIMING	
<p>Perform "Basic Inspection". Refer to EC-98.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 12.
NG	▶	<p>1. Perform "Idle Air Volume Learning". Refer to EC-55.</p> <p>2. Check camshaft position sensor (PHASE) (EC-278) and crankshaft position sensor (POS) (EC-272).</p>

12	CHECK HEATED OXYGEN SENSOR 1 (FRONT)	
<p>Refer to "Component Inspection", EC-181.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 13.
NG	▶	Replace heated oxygen sensor 1 (front).

DTC P0300 - P0304 NO. 4 - 1 CYLINDER MISFIRE, MULTIPLE CYLINDER MISFIRE

QG

Diagnostic Procedure (Cont'd)

13	CHECK MASS AIR FLOW SENSOR	
<p> With CONSULT-II Check "MASS AIR FLOW" in "DATA MONITOR" mode with CONSULT-II. at idling: 1.0 - 4.0 g-m/sec at 2,500 rpm: 5.0 - 10.0 g-m/sec</p>		
<p> With GST Check mass air flow sensor signal in MODE 1 with GST. at idling: 1.0 - 4.0 g-m/sec at 2,500 rpm: 5.0 - 10.0 g-m/sec</p>		
OK or NG		
OK	▶	GO TO 15.
NG	▶	GO TO 14.

14	CHECK CONNECTORS	
Check connectors for rusted terminals or loose connections in the mass air flow sensor circuit or engine grounds. Refer to EC-152.		
OK or NG		
NG	▶	Repair or replace it.

15	CHECK SYMPTOM MATRIX CHART	
Check items on the rough idle symptom in "Symptom Matrix Chart", EC-124.		
OK or NG		
OK	▶	GO TO 16.
NG	▶	Repair or replace.


16	ERASE THE 1ST TRIP DTC	
Some tests may cause a 1st trip DTC to be set. Erase the 1st trip DTC from the ECM memory after performing the tests. Refer to EC-68.		
		▶ GO TO 17.

17	CHECK INTERMITTENT INCIDENT	
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.		
		▶ INSPECTION END

DTC P0325 KNOCK SENSOR (KS)

QG

Component Description

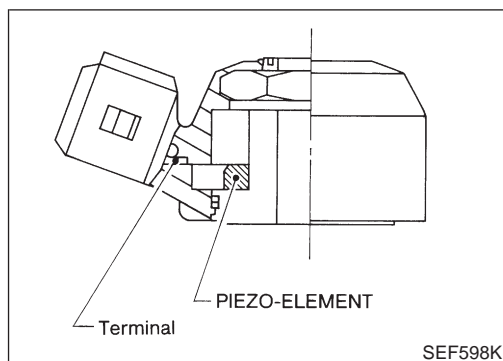

Component Description

NJEC0206

The knock sensor is attached to the cylinder block. It senses engine knocking using a piezoelectric element. A knocking vibration from the cylinder block is sensed as vibrational pressure. This pressure is converted into a voltage signal and sent to the ECM. **Freeze frame data will not be stored in the ECM for the knock sensor. The MI will not light for knock sensor malfunction. The knock sensor has one trip detection logic.**

ECM Terminals and Reference Value

NJEC0207

Specification data are reference values and are measured between each terminal and ground.

CAUTION:


Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
81	W	Knock sensor	[Engine is running] ● Idle speed	1.0 - 4.0V

On Board Diagnosis Logic

NJEC0208

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0325 0325	● An excessively low or high voltage from the knock sensor is sent to ECM.	● Harness or connectors (The knock sensor circuit is open or shorted.) ● Knock sensor

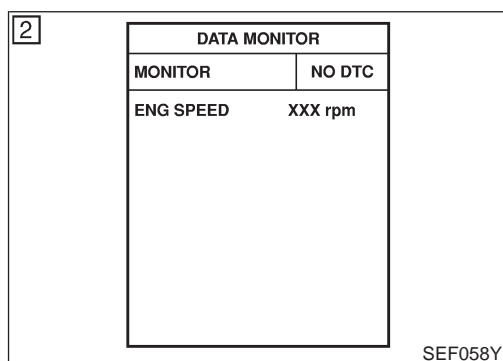

DTC Confirmation Procedure

NJEC0209

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 9 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

④ With CONSULT-II

- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT-II.
- 2) Start engine and run it for at least 5 seconds at idle speed.
- 3) If DTC is detected, go to "Diagnostic Procedure", EC-270.

④ With GST

Follow the procedure "With CONSULT-II" above.

DTC P0325 KNOCK SENSOR (KS)


QG

Wiring Diagram

Wiring Diagram

NJEC0210

EC-KS-01

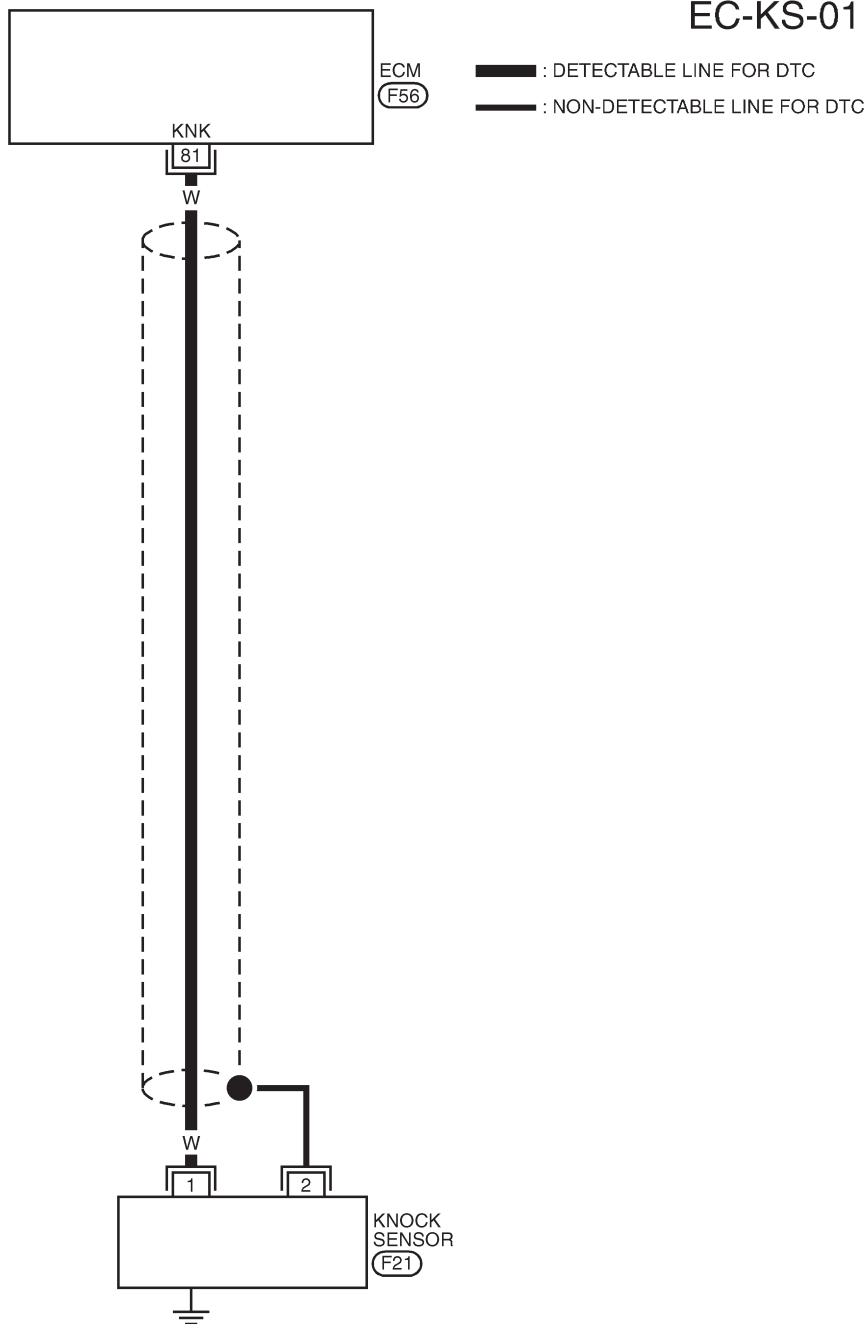

101	102	1	2	3	4	5	6	7	8	9	10					58	59	60	61	62	63	64	65	66	67	109	110					
103	104	11	12	13	14	15	16	17	18	19	39	40	41	42	43	44	45	46	47	48	68	69	70	71	72	73	74	75	76	111	112	
105	106	20	21	22	23	24	25	26	27	28	29	49	50	51	52	53	54	55	56	57	77	78	79	80	81	82	83	84	85	86	113	114
107	108	30	31	32	33	34	35	36	37	38											87	88	89	90	91	92	93	94	95	115	116	



YEC972


DTC P0325 KNOCK SENSOR (KS)


QG

Diagnostic Procedure

Diagnostic Procedure

NJEC0211

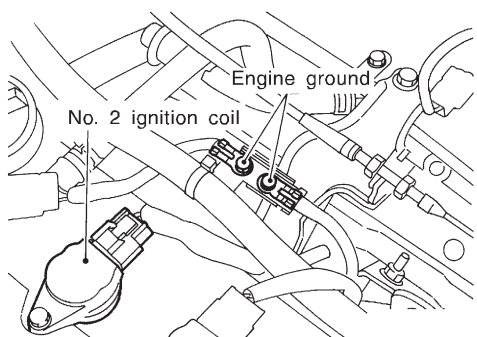1	RETIGHTEN GROUND SCREWS	<p>Loosen and retighten engine ground screws.</p> <div style="text-align: center;">  <p>The diagram shows a close-up of the engine's ground area. It labels 'Engine ground' pointing to several screws and 'No. 2 ignition coil' pointing to a specific component on the engine block.</p> </div> <p style="text-align: right;">JEF104Y</p>
▶ GO TO 2.		

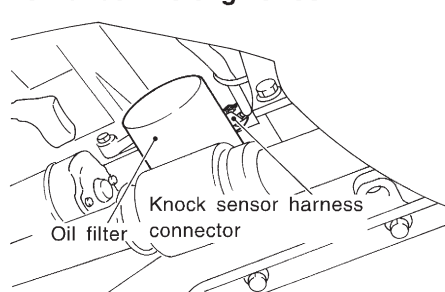2	CHECK INPUT SIGNAL CIRCUIT-1	<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector and knock sensor harness connector.</p> <p style="text-align: center;">View under the engine room</p> <div style="text-align: center;">  <p>The diagram shows the underside of the engine compartment. It labels 'Knock sensor harness connector' pointing to a plug and 'Oil filter' pointing to a cylindrical component.</p> </div> <p style="text-align: right;">JEF110Y</p> <p>3. Check harness continuity between knock sensor signal terminal 1 and ECM terminal 81. Refer to wiring diagram. Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 15%;">OK</td> <td style="width: 10%; text-align: center;">▶</td> <td style="width: 75%;">GO TO 4.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 3.</td> </tr> </table>	OK	▶	GO TO 4.	NG	▶	GO TO 3.
OK	▶	GO TO 4.						
NG	▶	GO TO 3.						

3	DETECT MALFUNCTIONING PART	<p>Check the harness for open or short between knock sensor and ECM.</p> <p style="text-align: center;">▶ Repair open circuit or short to ground or short to power in harness or connectors.</p>
----------	-----------------------------------	--


4	CHECK KNOCK SENSOR	<p>Refer to "Component Inspection", EC-271.</p> <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 15%;">OK</td> <td style="width: 10%; text-align: center;">▶</td> <td style="width: 75%;">GO TO 5.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>Replace knock sensor.</td> </tr> </table>	OK	▶	GO TO 5.	NG	▶	Replace knock sensor.
OK	▶	GO TO 5.						
NG	▶	Replace knock sensor.						

DTC P0325 KNOCK SENSOR (KS)

QG

Diagnostic Procedure (Cont'd)

5	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.	
▶	INSPECTION END

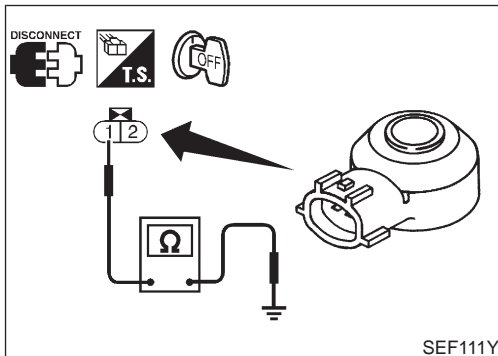

Component Inspection KNOCK SENSOR

NJEC0212

NJEC0212S01

- Use an ohmmeter which can measure more than 10 M Ω .

1. Disconnect knock sensor harness connector.
2. Check resistance between terminal 1 and ground.

Resistance: 500 - 620 k Ω [at 25°C (77°F)]


CAUTION:

Discard any knock sensors that have been dropped or physically damaged. Use only new ones.

DTC P0335 CRANKSHAFT POSITION SENSOR (POS)

QG

Component Description

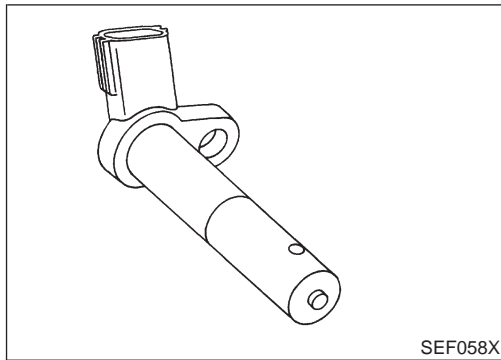

Component Description

NJEC0551

The crankshaft position sensor (POS) is located on the right-rear wall of the cylinder block in relation to the signal plate at the rear end of the crankshaft.


The sensor consists of a permanent magnet, and hall IC.

When the engine is running, the high and low parts of the teeth cause the gap with the sensor to change.

The changing gap causes the magnetic field near the sensor to change.

Due to the changing magnetic field, the voltage from the sensor changes.

The ECM receives the voltage signal and detects the fluctuation of the engine revolution.

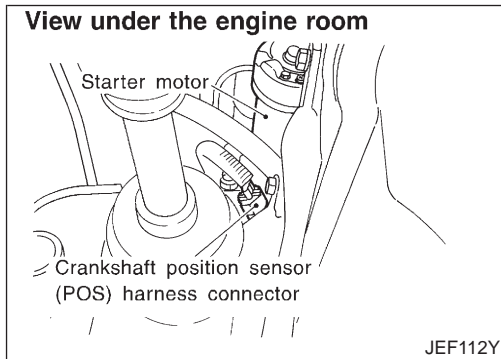

ECM Terminals and Reference Value

NJEC0552

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (AC Voltage)
85	R	Crankshaft position sensor (POS)	[Engine is running] <ul style="list-style-type: none"> • Warm-up condition • Idle speed 	3 - 4V SEF979W
			[Engine is running] <ul style="list-style-type: none"> • Engine speed is 2,000 rpm 	3 - 4V SEF980W

DTC P0335 CRANKSHAFT POSITION SENSOR (POS)


QG

On Board Diagnosis Logic

On Board Diagnosis Logic

NJEC0553

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0335 0802	<ul style="list-style-type: none"> ● The 10° signal is not entered to ECM for the first few seconds during engine cranking. ● The 10° signal is not entered to ECM during engine running. ● The 10° signal is not in the normal pattern at each engine revolution. 	<ul style="list-style-type: none"> ● Harness or connectors (The crankshaft position sensor (POS) circuit is open or shorted.) ● Crankshaft position sensor (POS) ● Starter motor (Refer to EL section.) ● Starting system circuit (Refer to EL section.) ● Dead (Weak) battery

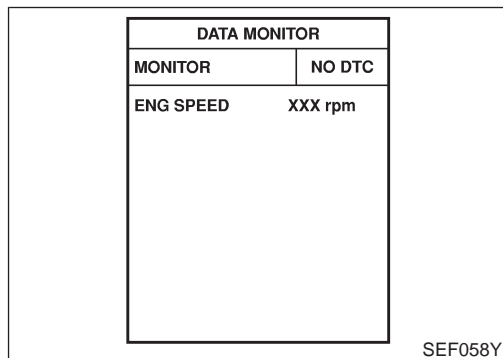

DTC Confirmation Procedure

NJEC0554

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 9 seconds before conducting the next test.

With CONSULT-II

- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT-II.
- 2) Start engine and run it for at least 2 seconds at idle speed.
- 3) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-275.

With GST

Follow the procedure "With CONSULT-II" above.

DTC P0335 CRANKSHAFT POSITION SENSOR (POS)



QG

Wiring Diagram


Wiring Diagram

NJEC0555

EC-POS-01

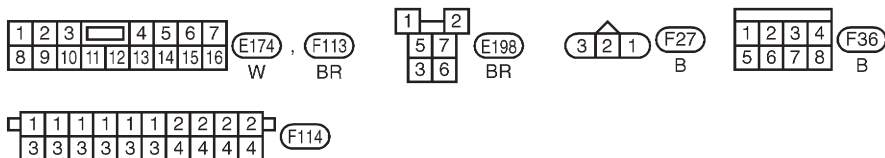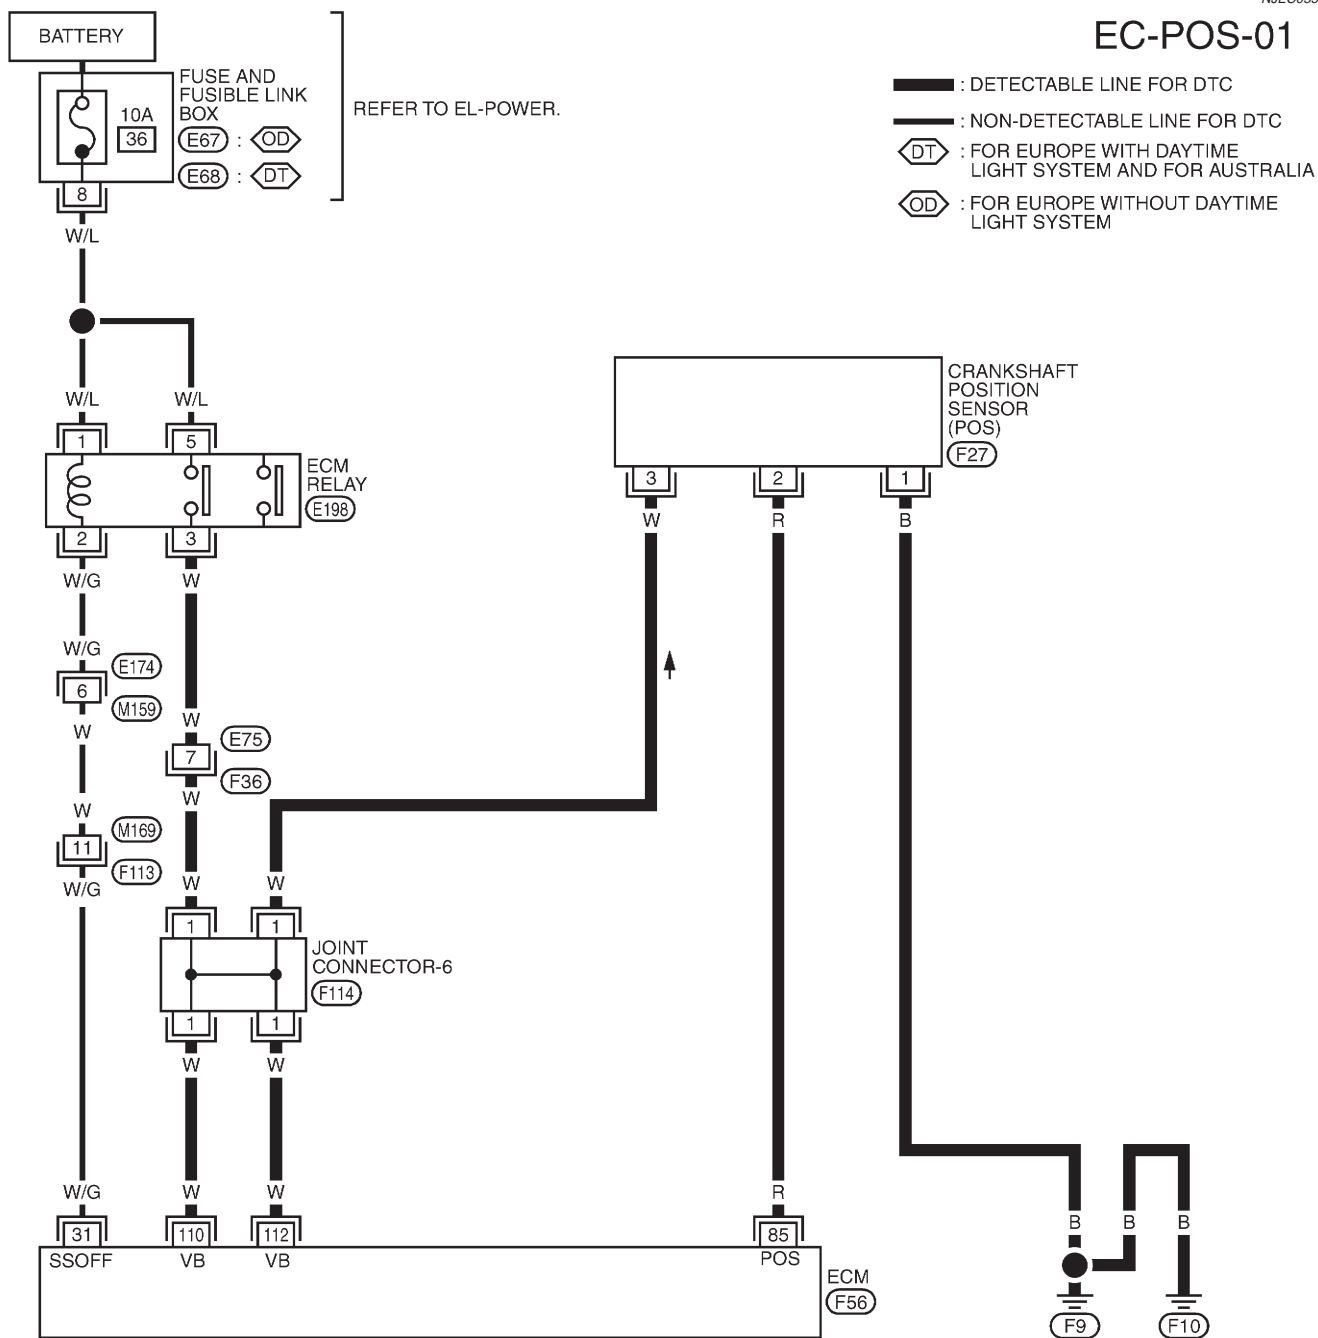


REFER TO THE FOLLOWING.
 (E67), (E68) - FUSE AND FUSIBLE LINK BOX


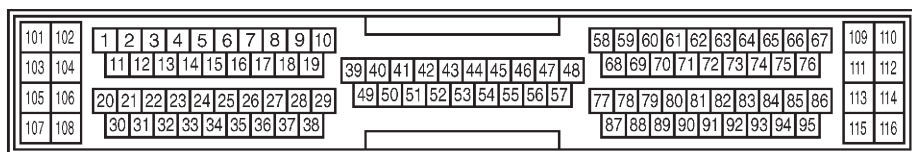


YEC973

Diagnostic Procedure

NJEC0556

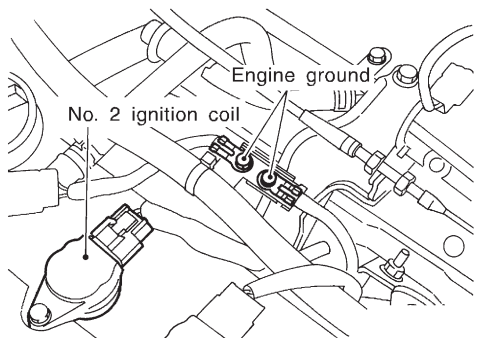1	RETIGHTEN GROUND SCREWS	<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Loosen and retighten engine ground screws. <div style="text-align: center; margin-top: 20px;">  <p>The diagram shows a close-up of the engine's ignition system. A label 'No. 2 ignition coil' points to a coil connected to a spark plug. Another label 'Engine ground' points to a screw on the engine block. A third screw is also visible nearby.</p> </div> <p style="text-align: right;">JEF104Y</p>
▶		GO TO 2.

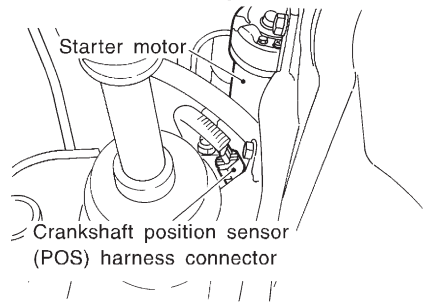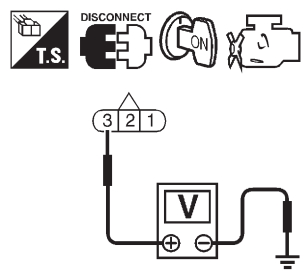
2	CHECK POWER SUPPLY	<ol style="list-style-type: none"> 1. Disconnect crankshaft position sensor harness connector. <div style="text-align: center; margin-top: 10px;"> <p>View under the engine room</p>  <p>The diagram shows the area under the engine room. A label 'Starter motor' points to the motor. Another label 'Crankshaft position sensor (POS) harness connector' points to a connector on the engine block.</p> </div> <p style="text-align: right;">JEF112Y</p> <ol style="list-style-type: none"> 2. Turn ignition switch "ON". 3. Check voltage between terminal 3 and ground with CONSULT-II or tester. <div style="margin-top: 20px;">  <p>The diagram shows a 'T.S. DISCONNECT' icon with a plug and a hand turning a switch 'ON'. Below it, a voltmeter (V) is connected to terminal 3 of a three-terminal connector (labeled 3, 2, 1) and to ground. The text 'Voltage: Battery voltage' is next to it.</p> </div> <p style="text-align: right;">SEF113Y</p> <p style="text-align: center; margin-top: 10px;">OK or NG</p>
OK	▶	GO TO 4.
NG	▶	GO TO 3.

DTC P0335 CRANKSHAFT POSITION SENSOR (POS)

QG

Diagnostic Procedure (Cont'd)

3	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none">● Joint connector-6● Harness connectors E75, F36● Harness for open or short between joint connector and ECM relay● Harness for open or short between crankshaft position sensor and joint connector● Harness for open or short between joint connector and ECM● ECM relay	
▶ Repair open circuit or short to ground or short to power in harness or connectors.	

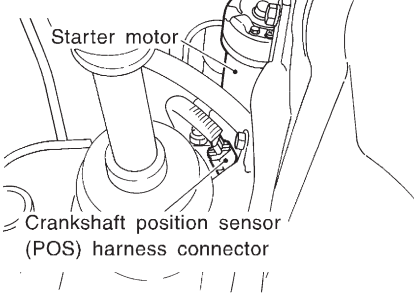4	CHECK INPUT SIGNAL CIRCUIT
1. Disconnect crankshaft position sensor and ECM harness connectors.	
View under the engine room	
	
2. Check continuity between ECM terminal 85 and crankshaft position sensor harness connector terminal 2. Refer to wiring diagram. Continuity should exist.	
3. Also check harness for short to ground and short to power.	
OK or NG	
OK	▶ GO TO 5.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

5	CHECK GROUND CIRCUIT
1. Reconnect ECM harness connector.	
2. Check harness continuity between terminal 1 and engine ground. Refer to wiring diagram. Continuity should exist.	
3. Also check harness for short to ground and short to power.	
OK or NG	
OK	▶ GO TO 6.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.


6	CHECK CRANKSHAFT POSITION SENSOR
Refer to "Component Inspection", EC-277.	
OK or NG	
OK	▶ GO TO 7.
NG	▶ Replace crankshaft position sensor.

7	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.	
▶ INSPECTION END	

DTC P0335 CRANKSHAFT POSITION SENSOR (POS)

QG

Component Inspection

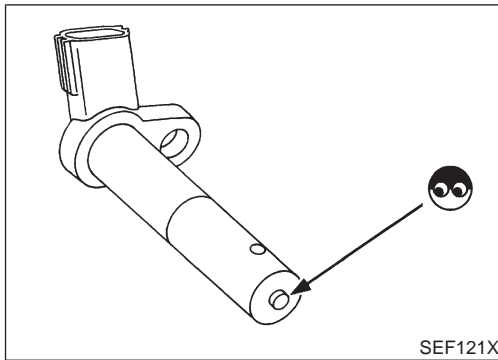


Component Inspection CRANKSHAFT POSITION SENSOR (POS)

NJEC0557

NJEC0557S01

1. Disconnect crankshaft position sensor (POS) harness connector.
2. Loosen the fixing bolt of the sensor.
3. Remove the sensor.
4. Visually check the sensor for chipping.

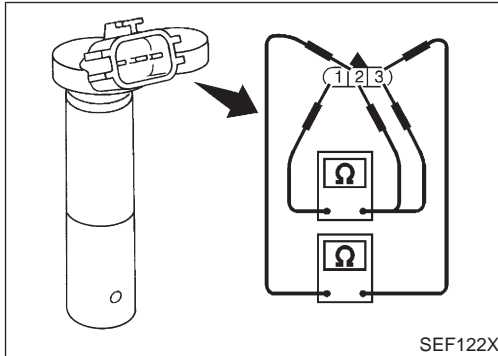

5. Check resistance as shown in the figure.


Terminal No. (Polarity)	Resistance Ω [at 25°C (77°F)]
3 (+) - 1 (-)	Except 0 or ∞
2 (+) - 1 (-)	
3 (+) - 2 (-)	

If NG, replace crankshaft position sensor.

DTC P0340 CAMSHAFT POSITION SENSOR (CMPS) (PHASE)

QG

Component Description

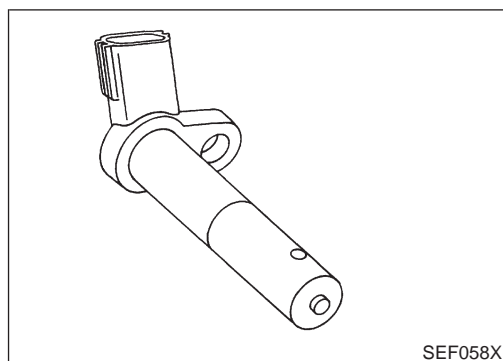

Component Description

NJEC0220

The camshaft position sensor (PHASE) senses the protrusion provided with exhaust valve cam sprocket to identify a particular cylinder. The crankshaft position sensor senses the piston position. The sensor consists of a permanent magnet and hall IC. When the engine is running, the high and low parts of the teeth cause the gap with the sensor to change. The changing gap causes the magnetic field near the sensor to change. Due to the changing magnetic field, the voltage from the sensor changes. The ECM receives the voltage signal and detects the cylinder number signal.

ECM Terminals and Reference Value

NJEC0221

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
66 75	R R	Camshaft position sensor (PHASE)	<p>[Engine is running]</p> <ul style="list-style-type: none"> • Warm-up condition • Idle speed 	<p>3 - 4V</p> <p>SEF977W</p>
			<p>[Engine is running]</p> <ul style="list-style-type: none"> • Engine speed is 2,000 rpm 	<p>3 - 4V</p> <p>SEF978W</p>

DTC P0340 CAMSHAFT POSITION SENSOR (CMPS) (PHASE)

QG

On Board Diagnosis Logic

On Board Diagnosis Logic

NJEC0222

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0340 0340	<ul style="list-style-type: none">• The cylinder No. signal is not entered to ECM for the first few seconds during engine cranking.• The cylinder No. signal is not entered to ECM during engine running.• The cylinder No. signal is not in the normal pattern during engine running.	<ul style="list-style-type: none">• Harness or connectors (The camshaft position sensor (PHASE) circuit is open or shorted.)• Camshaft position sensor (PHASE)• Starter motor (Refer to EL section.)• Starting system circuit (Refer to EL section.)

DTC Confirmation Procedure


NJEC0223

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 9 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10.5V.

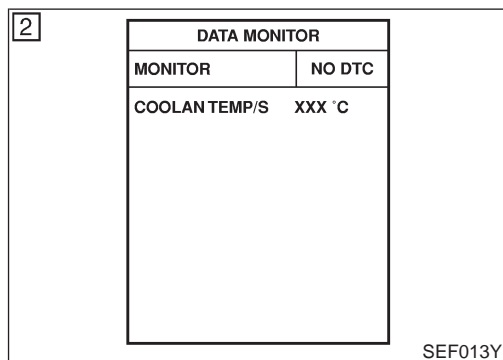

With CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Crank engine for at least 2 seconds.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-281.

With GST

Follow the procedure "With CONSULT-II" above.

DTC P0340 CAMSHAFT POSITION SENSOR (CMPS) (PHASE)



QG

Wiring Diagram


Wiring Diagram

NJE0224

EC-PHASE-01

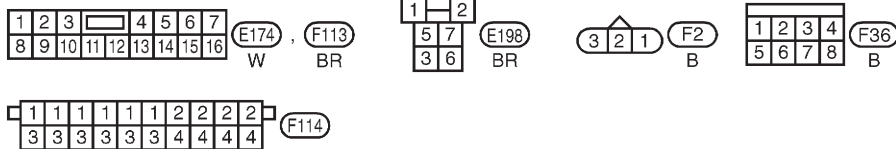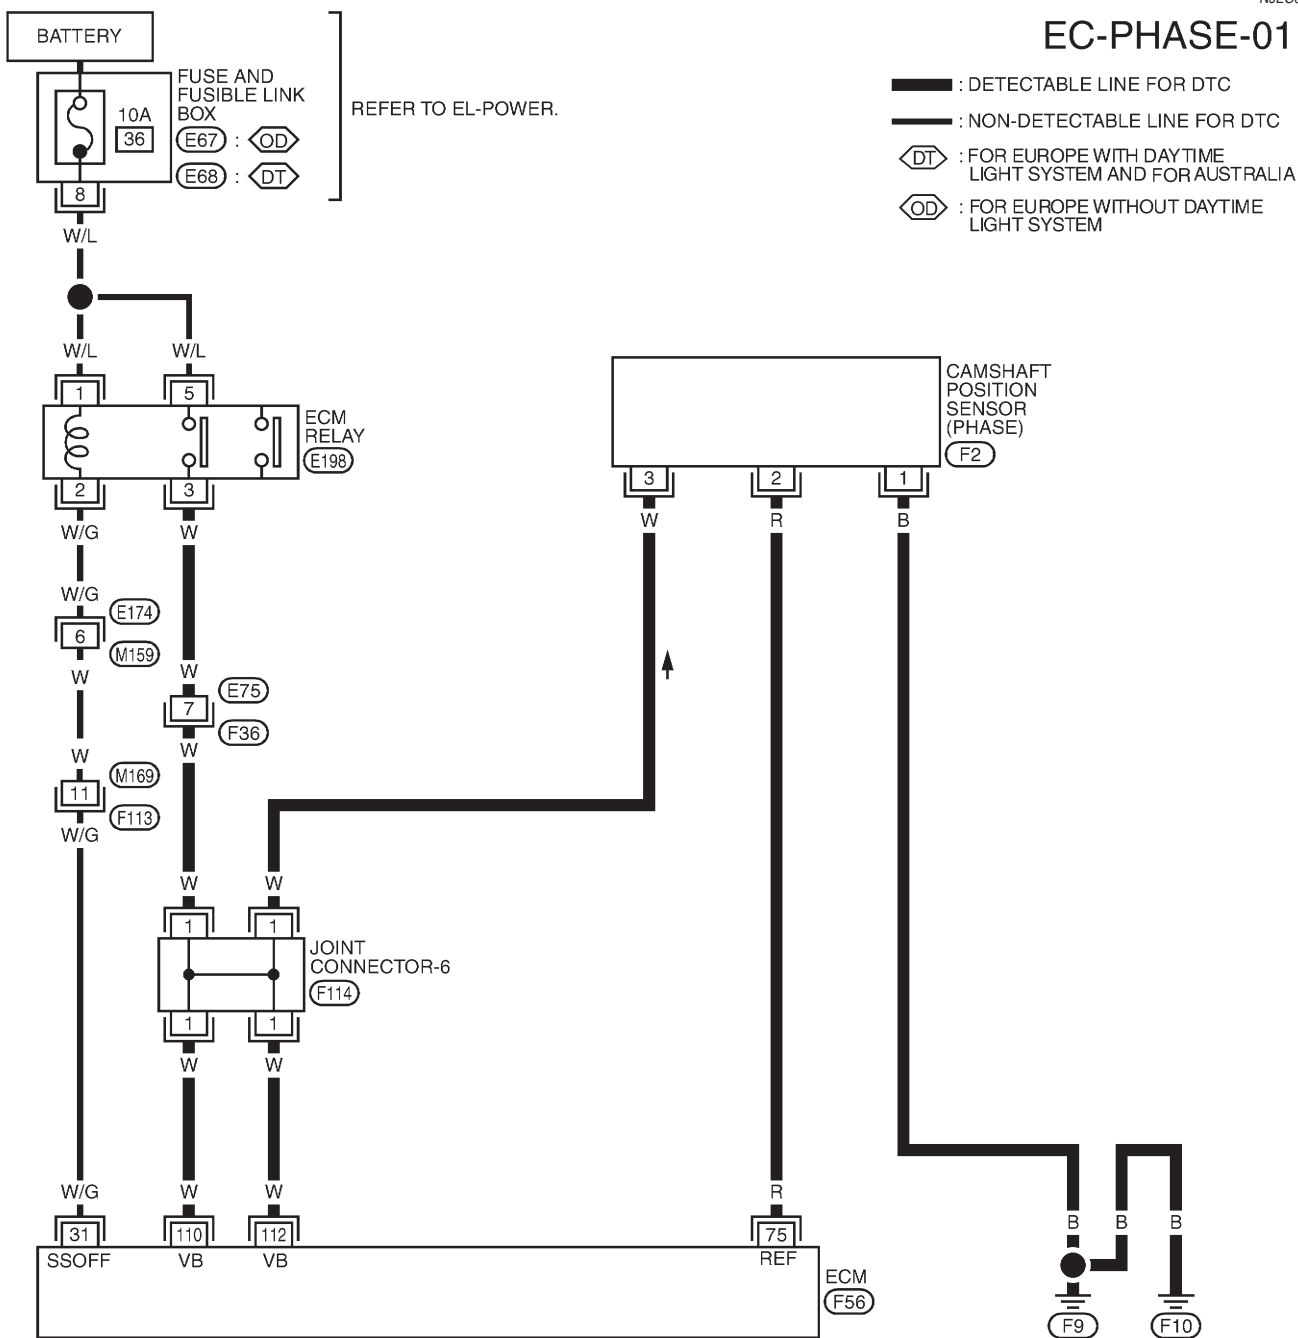

REFER TO THE FOLLOWING.
 (E67), (E68) - FUSE AND FUSIBLE LINK BOX

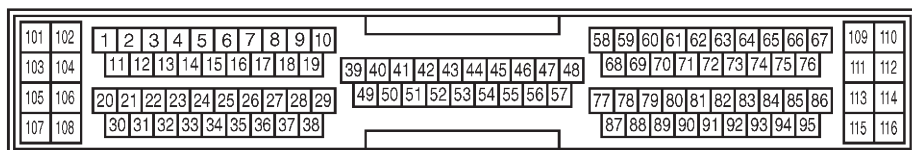

YEC974

DTC P0340 CAMSHAFT POSITION SENSOR (CMPS) (PHASE)


QG

Diagnostic Procedure

Diagnostic Procedure

NJEC0225



1	CHECK STARTING SYSTEM
Does the engine turn over? (Does the starter motor operate?)	
Yes or No	
Yes	▶ GO TO 2.
No	▶ Check starting system. (Refer to EL section.)

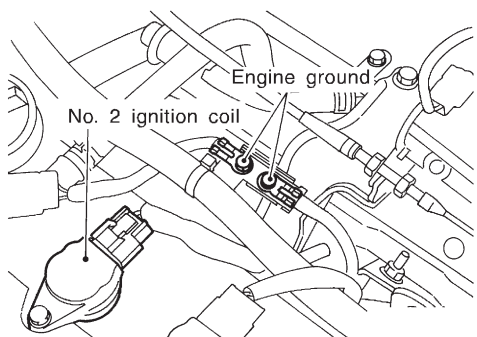2	RETIGHTEN GROUND SCREWS
1. Turn ignition switch "OFF". 2. Loosen and retighten engine ground screws.	
 <p>The diagram shows a close-up of the engine's electrical components. Two screws are labeled 'Engine ground' with arrows pointing to them. A component labeled 'No. 2 ignition coil' is also shown with an arrow pointing to it. The diagram illustrates the location of these components on the engine block.</p>	
JEF104Y	
▶	GO TO 3.

DTC P0340 CAMSHAFT POSITION SENSOR (CMPS) (PHASE)

QG

Diagnostic Procedure (Cont'd)

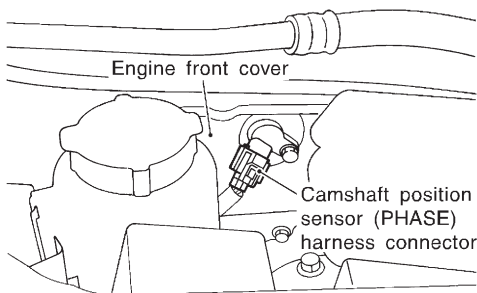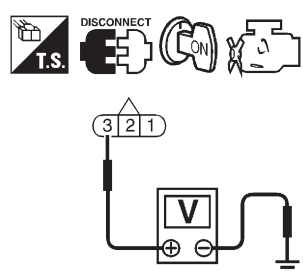3	CHECK POWER SUPPLY		
<p>1. Disconnect camshaft position sensor harness connector.</p> <div style="text-align: center;">  <p style="margin-left: 100px;">Engine front cover</p> <p style="margin-left: 150px;">Camshaft position sensor (PHASE) harness connector</p> </div> <p style="text-align: right;">JEF114Y</p> <p>2. Turn ignition switch "ON".</p> <p>3. Check voltage between terminal 3 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  <p style="margin-left: 100px;">Voltage: Battery voltage</p> </div> <p style="text-align: right;">SEF113Y</p> <p style="text-align: center;">OK or NG</p>			
OK	▶	GO TO 5.	
NG	▶	GO TO 4.	

4	DETECT MALFUNCTIONING PART		
<p>Check the following.</p> <ul style="list-style-type: none"> ● Joint connector-6 ● Harness connectors E75, F36 ● Harness for open or short between joint connector and ECM relay ● Harness for open or short between camshaft position sensor and joint connector ● Harness for open or short between joint connector and ECM <p style="text-align: right;">▶ Repair open circuit or short to ground or short to power in harness or connectors.</p>			

5	CHECK INPUT SIGNAL CIRCUIT		
<p>1. Turn ignition switch "OFF".</p> <p>2. Disconnect ECM harness connector.</p> <p>3. Check harness continuity between sensor terminal 2 and ECM terminal 75. Refer to wiring diagram.</p> <p style="color: blue; margin-left: 20px;">Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>			
OK	▶	GO TO 7.	
NG	▶	GO TO 6.	

DTC P0340 CAMSHAFT POSITION SENSOR (CMPS) (PHASE)

QG


Diagnostic Procedure (Cont'd)

6	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none">● Harness for open or short between ECM and joint connector● Harness for open or short between joint connector and camshaft position sensor	
	▶ Repair open circuit or short to ground or short to power in harness or connectors.
7	CHECK GROUND CIRCUIT
1. Turn ignition switch "OFF". 2. Check harness continuity between sensor terminal 1 and engine ground. Refer to wiring diagram. Continuity should exist. 3. Also check harness for short to ground and short to power.	
OK or NG	
OK	▶ GO TO 8.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.
8	CHECK CAMSHAFT POSITION SENSOR
Refer to "Component Inspection", EC-284.	
OK or NG	
OK	▶ GO TO 9.
NG	▶ Replace camshaft position sensor.
9	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.	
	▶ INSPECTION END

DTC P0340 CAMSHAFT POSITION SENSOR (CMPS) (PHASE)

QG

Component Inspection

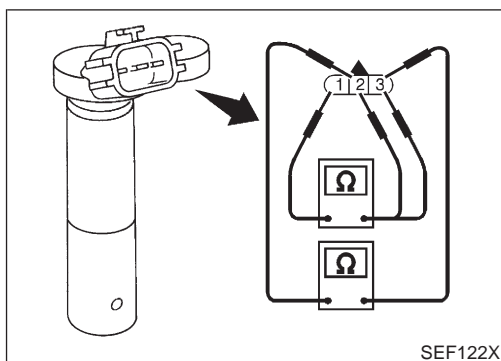

Component Inspection CAMSHAFT POSITION SENSOR

=NJEC0226

NJEC0226S01

1. Disconnect camshaft position sensor (PHASE) harness connector.
2. Loosen the fixing bolt of the sensor.
3. Remove the sensor.
4. Visually check the sensor for chipping.
5. Check resistance as shown in the figure.

Terminal No. (Polarity)	Resistance Ω [at 25°C (77°F)]
3 (+) - 1 (-)	Except 0 or ∞
2 (+) - 1 (-)	
3 (+) - 2 (-)	

If NG, replace camshaft position sensor.

DTC P0400 EGR FUNCTION (CLOSED) (WHERE FITTED)

QG

Description

Description SYSTEM DESCRIPTION


NJEC0227

NJEC0227S01

Sensor	Input Signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS)	Engine speed	EGR volume control	EGR volume control valve
Camshaft position sensor (PHASE)	Engine speed and cylinder number		
Mass air flow sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Ignition switch	Start signal		
Throttle position sensor	Throttle position		
Vehicle speed sensor	Vehicle speed		
Battery	Battery voltage		
Air conditioner switch	Air conditioner operation		
Power steering oil pressure switch	Power steering load signal		
Electrical load	Electrical load signal		
PNP switch	Park/Neutral position signal		

This system controls flow rate of EGR led from exhaust manifold to intake manifold. The opening of the EGR by-pass passage in the EGR volume control valve changes to control the flow rate. A built-in step motor moves the valve in steps corresponding to the ECM output pulses. The opening of the valve varies for optimum engine control. The optimum value stored in the ECM is determined by considering various engine conditions. The EGR volume control valve remains close under the following conditions.

- Low engine coolant temperature
- Engine starting
- High-speed engine operation
- Extremely light load engine operation
- Engine idling
- Excessively high engine coolant temperature
- Wide open throttle
- Mass air flow sensor malfunction
- Low battery voltage

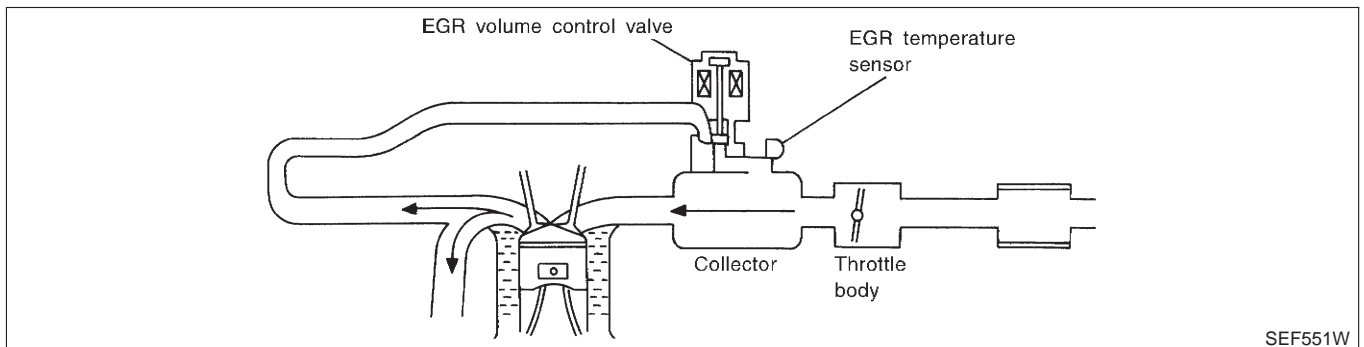


SEF551W

DTC P0400 EGR FUNCTION (CLOSED) (WHERE FITTED)

QG

Description (Cont'd)

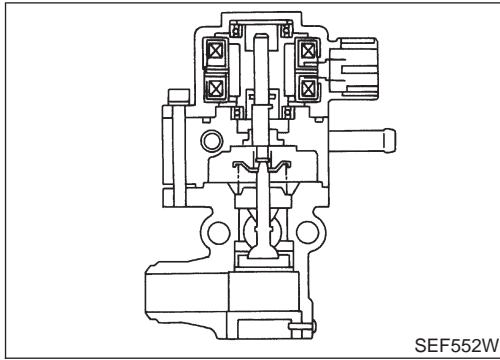

COMPONENT DESCRIPTION

EGR Volume Control Valve

NJEC0227S02

NJEC0227S0201

The EGR volume control valve uses a step motor to control the flow rate of EGR from exhaust manifold. This motor has four winding phases. It operates according to the output pulse signal of the ECM. Two windings are turned ON and OFF in sequence. Each time an ON pulse is issued, the valve opens or closes, changing the flow rate. When no change in the flow rate is needed, the ECM does not issue the pulse signal. A certain voltage signal is issued so that the valve remains at that particular opening.

CONSULT-II Reference Value in Data Monitor Mode

NJEC0502

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
EGR TEMP SEN	● Engine: After warming up		Less than 4.5V
EGR VOL CON/V	● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load	Idle	0 step
		Revving engine up to 3,000 rpm quickly	10 - 55 step

ECM Terminals and Reference Value


NJEC0503

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
8 9 17 18	SB W/B R/Y BR/R	EGR volume control valve	[Engine is running] ● Idle speed	0 - 14V
58	B	Sensor's ground	[Engine is running] ● Warm-up condition ● Idle speed	0V
72	P/B	EGR temperature sensor	[Engine is running] ● Warm-up condition ● Idle speed	Less than 4.5V
			[Engine is running] ● Warm-up condition ● EGR system is operating.	0 - 1V

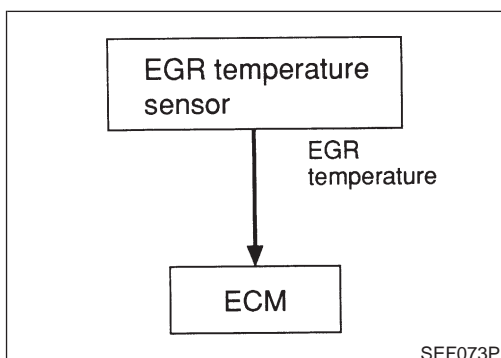

On Board Diagnosis Logic

NJEC0228





If the absence of EGR flow is detected by EGR temperature sensor under the condition that calls for EGR, a low-flow malfunction is diagnosed.

DTC P0400 EGR FUNCTION (CLOSED) (WHERE FITTED)

QG

On Board Diagnosis Logic (Cont'd)

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0400 0400	<ul style="list-style-type: none"> ● No EGR flow is detected under conditions that call for EGR. 	<ul style="list-style-type: none"> ● Harness or connectors (EGR volume control valve circuit is open or shorted.) ● EGR volume control valve stuck closed ● Dead (Weak) battery ● EGR passage clogged ● EGR temperature sensor and circuit ● Exhaust gas leaks

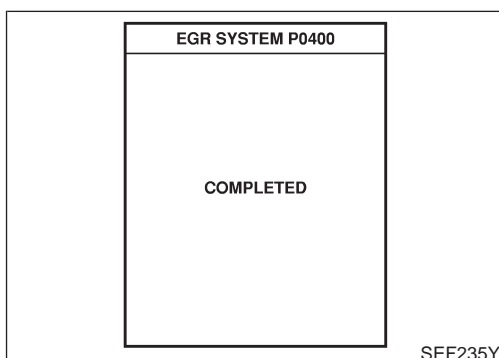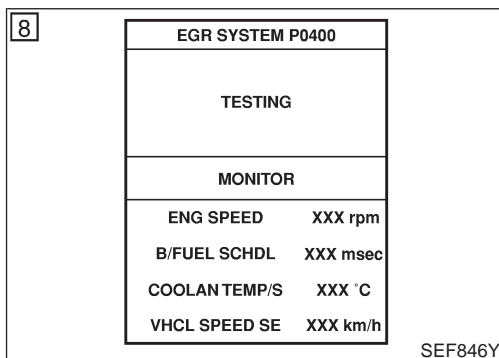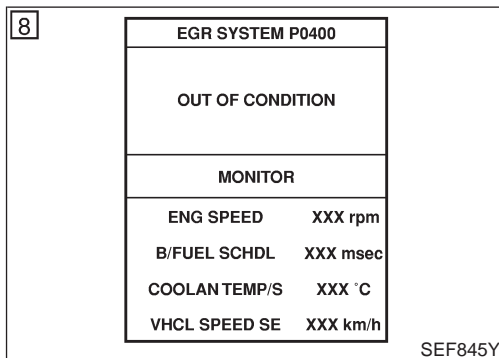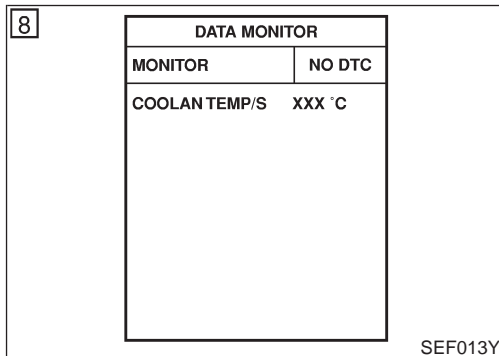

DTC Confirmation Procedure

NJEC0229

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

- If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 9 seconds before conducting the next test.
- P0400 will not be displayed at "SELF-DIAG RESULTS" mode with CONSULT-II even though DTC work support test result is "NG".

TESTING CONDITION:

- Before performing the following procedure, confirm battery voltage is more than 10V at idle, then stop engine immediately.
- For best result, perform the test at a temperature of 0°C (32°F) or higher.

With CONSULT-II

- 1) Turn ignition switch "OFF" and wait at least 9 seconds.
- 2) Turn ignition switch "ON".
- 3) Check "COOLAN TEMP/S" in "DATA MONITOR" mode with CONSULT-II and confirm it is within the range listed below.

COOLAN TEMP/S: Less than 40°C (104°F)

If the value is out of range, park the vehicle in a cool place and allow the engine temperature to stabilize. Do not attempt to lower the engine coolant temperature with a fan or means other than ambient air. Doing so may produce an inaccurate diagnostic result.

- 4) Start engine and let it idle monitoring "COOLAN TEMP/S" value. When the "COOLAN TEMP/S" value reaches 70°C (158°F), immediately go to the next step.
- 5) Select "EGR SYSTEM P0400" of "EGR SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT-II.
- 6) Touch "START".
- 7) Accelerate vehicle to a speed of 40 km/h (25 MPH) once and then stop vehicle with engine running.
If "COMPLETED" appears on CONSULT-II screen, go to step 9.
If "COMPLETED" does not appear on CONSULT-II screen, go to the following step.
- 8) When the following conditions are met, "TESTING" will be displayed on the CONSULT-II screen. Maintain the conditions until "TESTING" changes to "COMPLETED". (It will take approximately 45 seconds or more.)

DTC P0400 EGR FUNCTION (CLOSED) (WHERE FITTED)

QG

DTC Confirmation Procedure (Cont'd)

ENG SPEED	Above 2,400 rpm
Vehicle speed	Above 90 km/h (56 MPH)
B/FUEL SCHDL	4.0 - 8.0 msec
Selector lever	4th or 5th

If “TESTING” is not displayed after 5 minutes, retry from step 2.

- 9) Make sure that “OK” is displayed after touching “SELF-DIAG RESULTS”. If “NG” is displayed, refer to “Diagnostic Procedure”, EC-290.

With GST

- 1) Turn ignition switch “ON”.
- 2) Check engine coolant temperature in MODE 1 with GST.

Engine coolant temperature: Less than 40°C (104°F)

If the value is out of range, park the vehicle in a cool place and allow the engine temperature to stabilize. Do not attempt to lower the engine coolant temperature with a fan or means other than ambient air. Doing so may produce an inaccurate diagnostic result.

- 3) Start engine and let it idle monitoring the value of “COOLAN TEMP/S”. When the engine coolant temperature reaches 70°C (158°F), immediately go to the next step.
- 4) Maintain the following conditions for at least 1 minute.

Engine speed	Above 2,400 rpm
Vehicle speed	Above 90 km/h (56 MPH)
Selector lever	4th or 5th

- 5) Stop vehicle.
 - 6) Turn ignition switch “OFF” and wait at least 9 seconds, then turn “ON”.
 - 7) Repeat step 2 to 4.
 - 8) Select “MODE 3” with GST.
 - 9) If DTC is detected, go to “DIAGNOSTIC PROCEDURE”, EC-290.
- **When using GST, “DTC CONFIRMATION PROCEDURE” should be performed twice as much as when using CONSULT-II because GST cannot display MODE 7 (1st trip DTC) concerning this diagnosis. Therefore, using CONSULT-II is recommended.**

DTC P0400 EGR FUNCTION (CLOSED) (WHERE FITTED)


QG

Wiring Diagram


Wiring Diagram

NJEC0231

EC-EGRC1-01

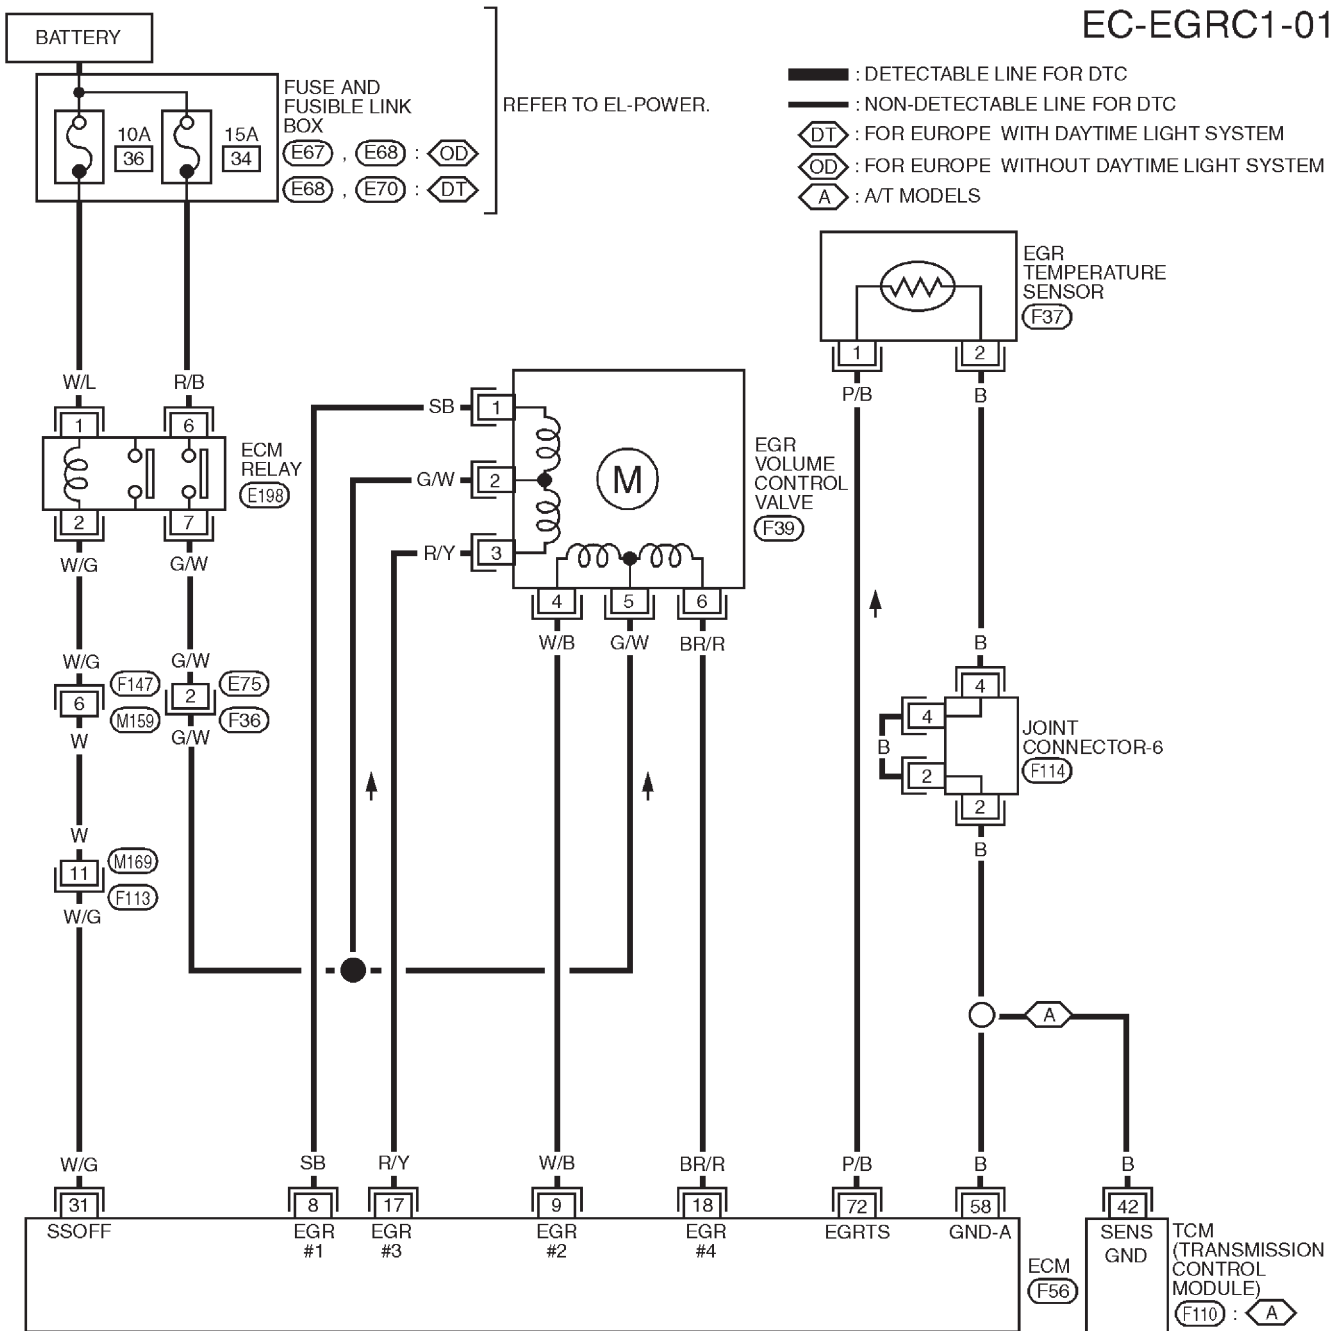

- : DETECTABLE LINE FOR DTC
- : NON-DETECTABLE LINE FOR DTC
- ⬡ (DT) : FOR EUROPE WITH DAYTIME LIGHT SYSTEM
- ⬡ (OD) : FOR EUROPE WITHOUT DAYTIME LIGHT SYSTEM
- ⬡ (A) : AT MODELS

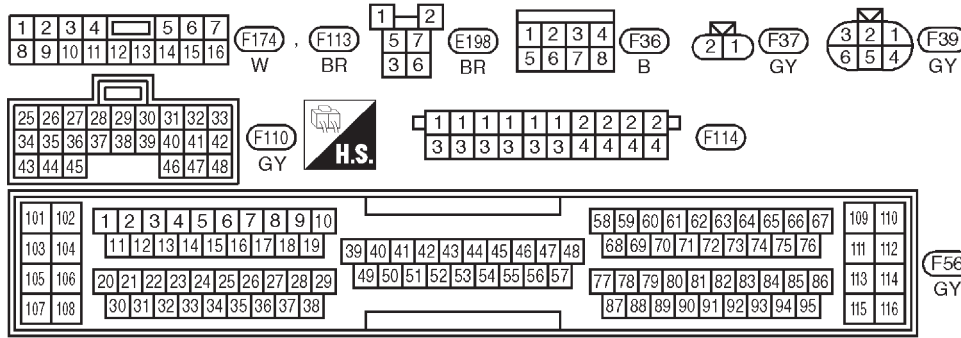

REFER TO THE FOLLOWING.
 (E67), (E68), (E70)
 - FUSE AND FUSIBLE LINK BOX

YEC975


DTC P0400 EGR FUNCTION (CLOSED) (WHERE FITTED)


QG

Diagnostic Procedure

Diagnostic Procedure

NJEC0232

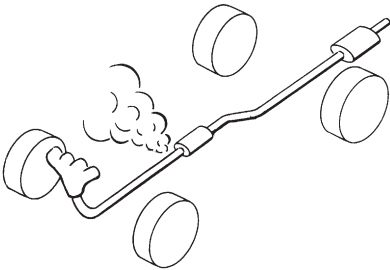1 CHECK EXHAUST SYSTEM	
<p>1. Start engine. 2. Check exhaust pipes and muffler for leaks.</p>  <p style="text-align: right;">SEF099P</p>	
OK or NG	
OK (With CONSULT-II) ▶	GO TO 2.
OK (Without CONSULT-II) ▶	GO TO 4.
NG ▶	Repair or replace exhaust system.

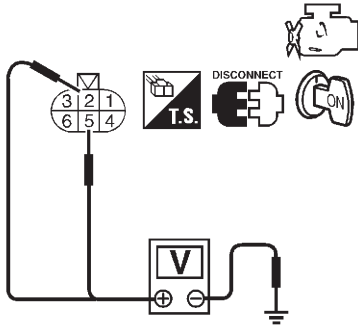2 CHECK POWER SUPPLY	
<p>1. Disconnect EGR volume control valve harness connector. 2. Turn ignition switch "ON". 3. Check voltage between terminals 2, 5 and ground with CONSULT-II or tester.</p>  <p style="text-align: right;">SEF327X</p>	
OK or NG	
OK ▶	GO TO 4.
NG ▶	GO TO 3.

3 DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none">● Harness connectors E75, F36● Harness for open or short between EGR volume control valve and ECM relay	
▶	Repair harness or connectors.

DTC P0400 EGR FUNCTION (CLOSED) (WHERE FITTED)

QG


Diagnostic Procedure (Cont'd)

4	CHECK OUTPUT SIGNAL CIRCUIT
1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 8 and terminal 1, ECM terminal 9 and terminal 4, ECM terminal 17 and terminal 3, ECM terminal 18 and terminal 6. Refer to wiring diagram. Continuity should exist. If OK, check harness for short to ground and short to power. <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 5.
NG	▶ Repair open circuit, short to ground or short to power in harness connectors.
5	CHECK EGR PASSAGE
Check EGR passage for clogging and cracks. <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 6.
NG	▶ Repair or replace EGR passage.
6	CHECK EGR TEMPERATURE SENSOR
Refer to "COMPONENT INSPECTION", EC-352. <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 7.
NG	▶ Replace EGR temperature sensor.
7	CHECK EGR VOLUME CONTROL VALVE
Refer to "COMPONENT INSPECTION", EC-292. <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 8.
NG	▶ Replace EGR volume control valve.
8	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144. <p style="text-align: center;">▶ INSPECTION END</p>	

DTC P0400 EGR FUNCTION (CLOSED) (WHERE FITTED)

QG

Diagnostic Procedure (Cont'd)

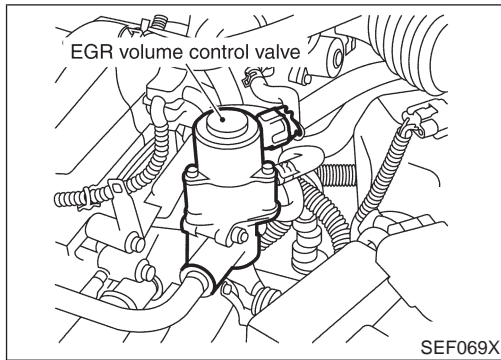

Component Inspection EGR VOLUME CONTROL VALVE

NJEC0233

NJEC0233S01

④ With CONSULT-II

- 1) Disconnect EGR volume control valve harness connector.
- 2) Check resistance between the following terminals.
terminal 2 and terminals 1, 3
terminal 5 and terminals 4, 6

Temperature °C (°F)	Resistance Ω
20 (68)	20 - 24


- 3) Reconnect EGR volume control valve harness connector.
- 4) Remove EGR volume control valve from cylinder head.
(The EGR volume control valve harness connector should remain connected.)
- 5) Turn ignition switch "ON".
- 6) Perform "EGR VOL CONT/V" in "ACTIVE TEST" mode with CONSULT-II. Check that EGR volume control valve shaft moves smoothly forward and backward according to the valve opening.
If NG, replace the EGR volume control valve.

⊗ Without CONSULT-II

- 1) Disconnect EGR volume control valve harness connector.
- 2) Check resistance between the following terminals.
terminal 2 and terminals 1, 3
terminal 5 and terminals 4, 6


Temperature °C (°F)	Resistance Ω
20 (68)	20 - 24

- 3) Turn ignition switch "ON" and "OFF". Check that EGR volume control valve shaft moves smoothly forward and backward according to the ignition switch position.
If NG, replace the EGR volume control valve.

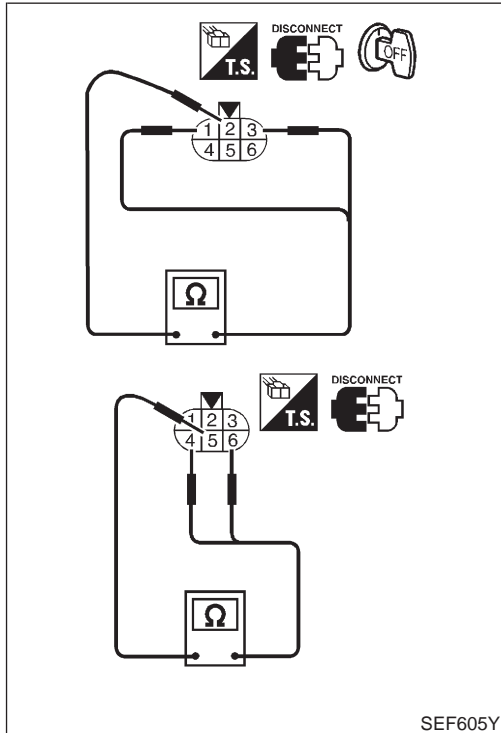

ACTIVE TEST	
EGR VOL CONT/V	20 step
MONITOR	
ENG SPEED	XXX rpm
EGR TEMP SEN	XXX V

SEF015Y

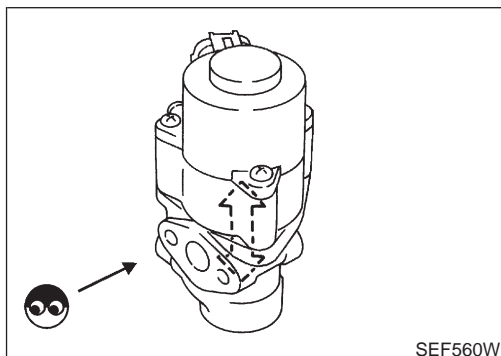

DTC P0403 EGR VOLUME CONTROL VALVE (CIRCUIT) (WHERE FITTED)

QG
Description

Description SYSTEM DESCRIPTION


NJEC0504

NJEC0504S01

Sensor	Input Signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS)	Engine speed	EGR volume control	EGR volume control valve
Camshaft position sensor (PHASE)	Engine speed and cylinder number		
Mass air flow sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Ignition switch	Start signal		
Throttle position sensor	Throttle position		
Vehicle speed sensor	Vehicle speed		
Battery	Battery voltage		
Air conditioner switch	Air conditioner operation		
Power steering oil pressure switch	Power steering load signal		
Electrical load	Electrical load signal		
PNP switch	Park/Neutral position signal		

This system controls flow rate of EGR led from exhaust manifold to intake manifold. The opening of the EGR by-pass passage in the EGR volume control valve changes to control the flow rate. A built-in step motor moves the valve in steps corresponding to the ECM output pulses. The opening of the valve varies for optimum engine control. The optimum value stored in the ECM is determined by considering various engine conditions. The EGR volume control valve remains close under the following conditions.

- Low engine coolant temperature
- Engine starting
- High-speed engine operation
- Extremely light load engine operation
- Engine idling
- Excessively high engine coolant temperature
- Wide open throttle
- Mass air flow sensor malfunction
- Low battery voltage

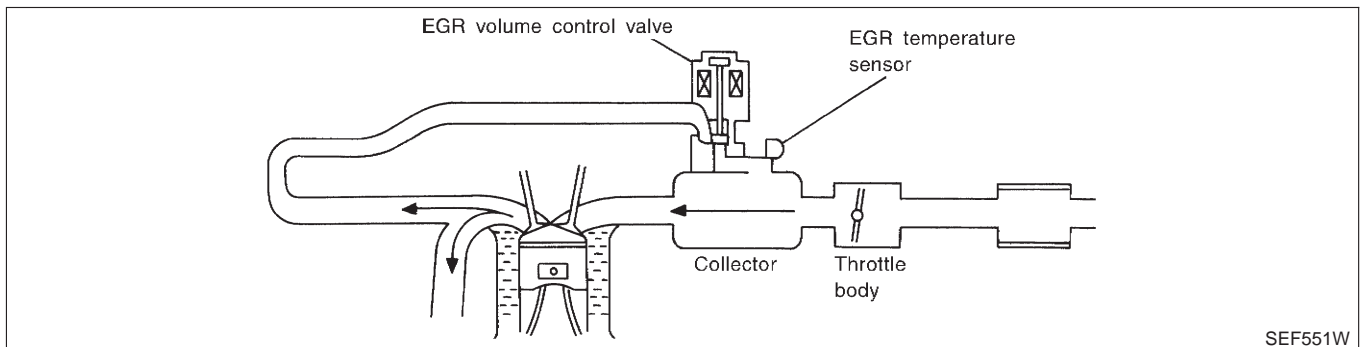


SEF551W

DTC P0403 EGR VOLUME CONTROL VALVE (CIRCUIT) (WHERE FITTED)

QG

Description (Cont'd)

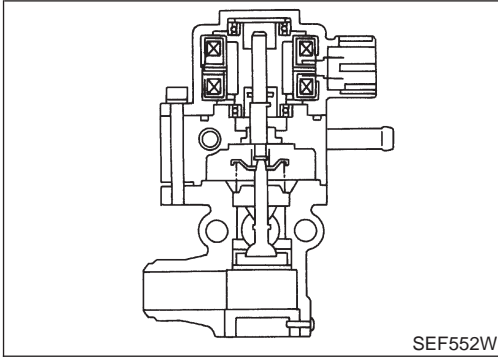

COMPONENT DESCRIPTION

EGR Volume Control Valve

NJEC0504S02

NJEC0504S0201

The EGR volume control valve uses a step motor to control the flow rate of EGR from exhaust manifold. This motor has four winding phases. It operates according to the output pulse signal of the ECM. Two windings are turned ON and OFF in sequence. Each time an ON pulse is issued, the valve opens or closes, changing the flow rate. When no change in the flow rate is needed, the ECM does not issue the pulse signal. A certain voltage signal is issued so that the valve remains at that particular opening.

CONSULT-II Reference Value in Data Monitor Mode

NJEC0506

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
EGR VOL CON/V	● Engine: After warming up ● Shift lever: "N" ● No-load	Idle 0 step
		Revsing engine up to 3,000 rpm quickly 1 - 10 step

ECM Terminals and Reference Value

NJEC0507

Specification data are reference values and are measured between each terminal and ground.

CAUTION:


Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
8 9 17 18	SB W/B R/Y BR/R	EGR volume control valve	[Engine is running] ● Warm-up condition ● Idle speed	0 - 14V

On Board Diagnosis Logic

NJEC0508

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0403 0403	● An improper voltage signal is sent to ECM through the valve.	● Harness or connectors (The EGR volume control valve circuit is open or shorted.) ● EGR volume control valve

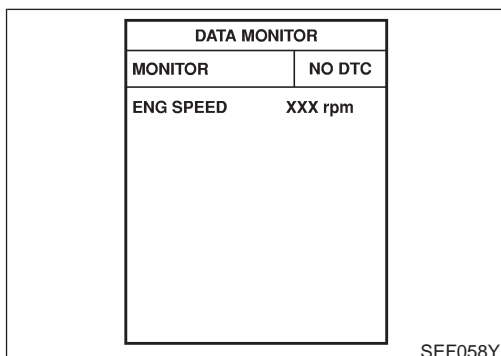

DTC Confirmation Procedure

NJEC0509

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 9 seconds before conducting the next test.

Ⓜ With CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and warm it up to normal operating temperature.
- 4) Rev engine from idle to 2,000 rpm 20 times.

DTC P0403 EGR VOLUME CONTROL VALVE (CIRCUIT) (WHERE FITTED)

QG

DTC Confirmation Procedure (Cont'd)

If 1st trip DTC is detected, go to "DIAGNOSTIC PROCEDURE", EC-297.



With GST

Follow the procedure "With CONSULT-II" above.

DTC P0403 EGR VOLUME CONTROL VALVE (CIRCUIT) (WHERE FITTED)



QG

Wiring Diagram


Wiring Diagram

NJEC0510

EC-EGRC/V-01

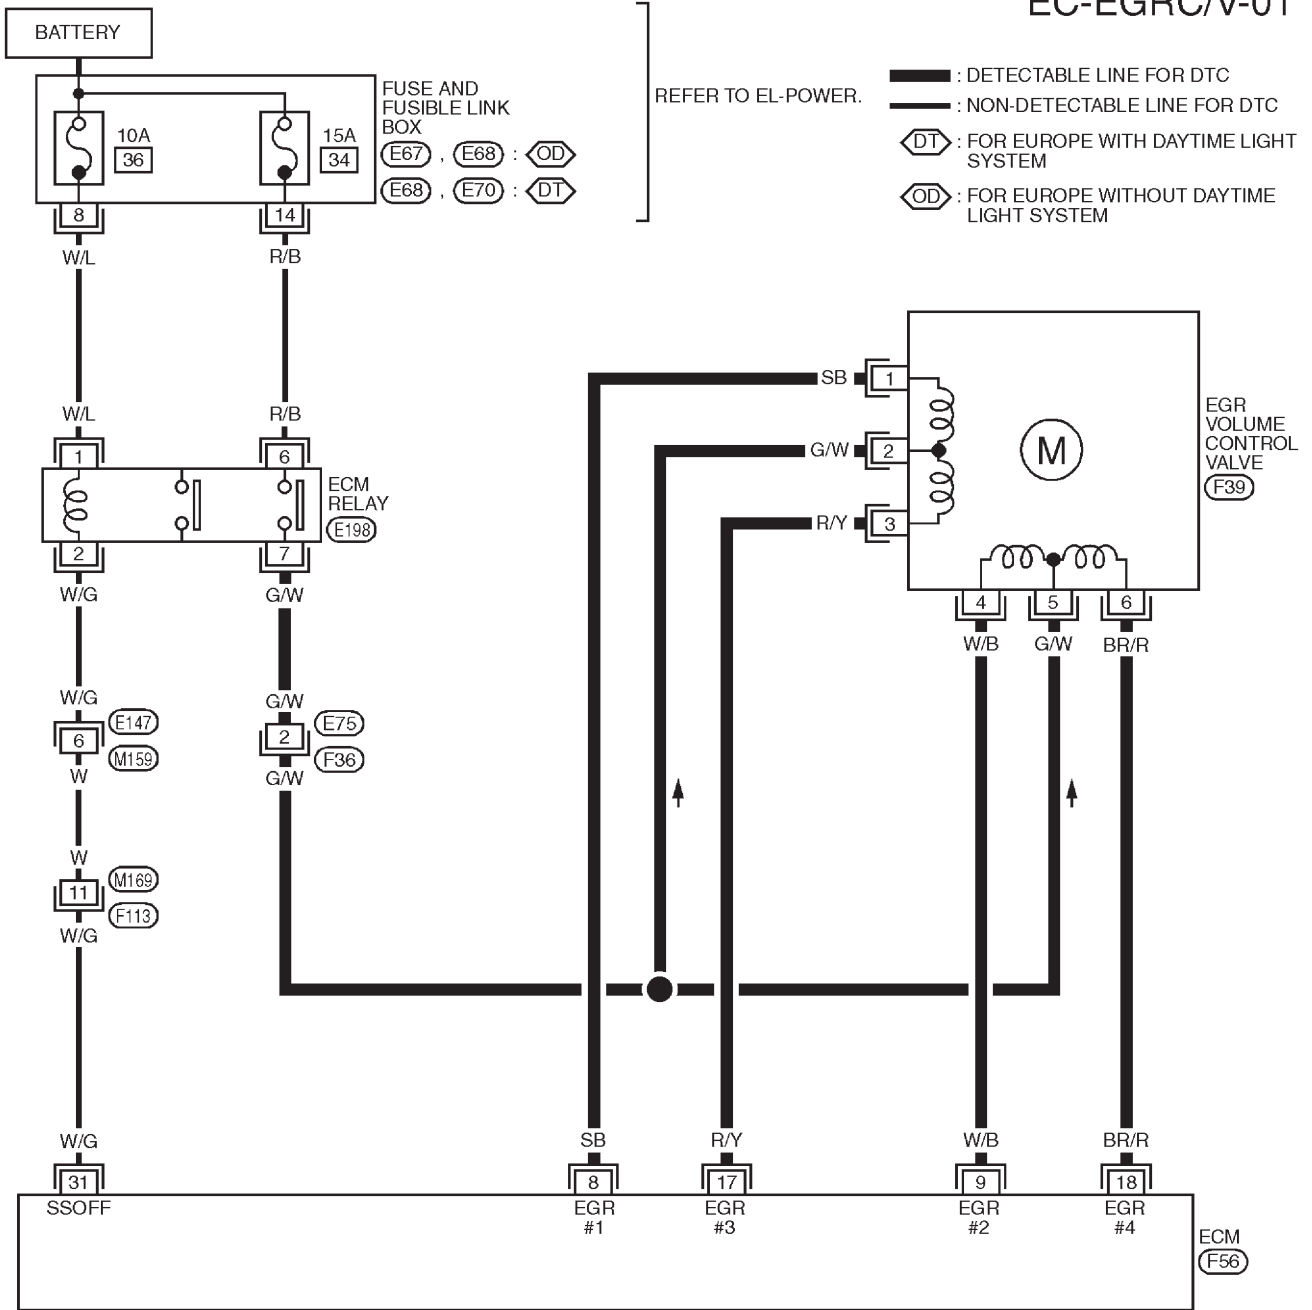

REFER TO THE FOLLOWING.
E67 , E68 , E70
 - FUSE AND FUSIBLE LINK BOX

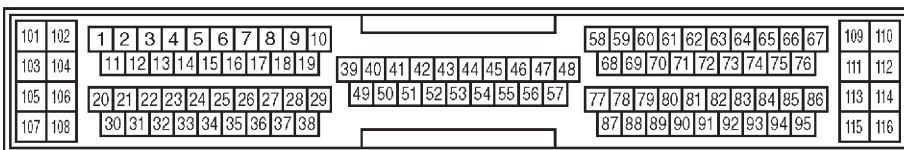

YEC976


DTC P0403 EGR VOLUME CONTROL VALVE (CIRCUIT) (WHERE FITTED)

QG

Diagnostic Procedure

Diagnostic Procedure

NJEC0511

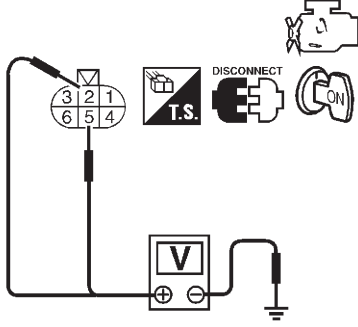1	CHECK POWER SUPPLY	
<p>1. Disconnect EGR volume control valve harness connector. 2. Turn ignition switch "ON". 3. Check voltage between terminals 2, 5 and ground with CONSULT-II or tester.</p>		
 <p style="text-align: right;">Voltage: Battery voltage</p>		
SEF327X		
OK or NG		
OK	▶	GO TO 3.
NG	▶	GO TO 2.

2	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E75, F36 ● Harness for open or short between EGR volume control valve and ECM relay 		
▶		Repair harness or connectors.

3	CHECK OUTPUT SIGNAL CIRCUIT	
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 8 and terminal 1, ECM terminal 9 and terminal 4, ECM terminal 17 and terminal 3, ECM terminal 18 and terminal 6. Refer to wiring diagram. Continuity should exist. If OK, check harness for short to ground and short to power.</p>		
OK or NG		
OK	▶	GO TO 4.
NG	▶	Repair open circuit, short to ground or short to power in harness connectors.


4	CHECK EGR VOLUME CONTROL VALVE	
<p>Refer to "COMPONENT INSPECTION", EC-298.</p>		
OK or NG		
OK	▶	GO TO 5.
NG	▶	Replace EGR volume control valve.

5	CHECK INTERMITTENT INCIDENT	
<p>Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.</p>		
▶		INSPECTION END

DTC P0403 EGR VOLUME CONTROL VALVE (CIRCUIT) (WHERE FITTED)

QG

Diagnostic Procedure (Cont'd)

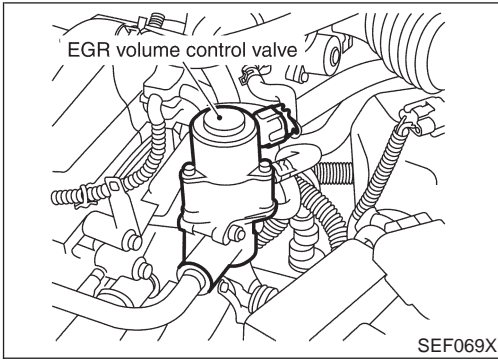

Component Inspection EGR VOLUME CONTROL VALVE

NJEC0512

NJEC0512S01

④ With CONSULT-II

- 1) Disconnect EGR volume control valve harness connector.
- 2) Check resistance between the following terminals.
terminal 2 and terminals 1, 3
terminal 5 and terminals 4, 6

Temperature °C (°F)	Resistance Ω
20 (68)	20 - 24


- 3) Reconnect EGR volume control valve harness connector.
- 4) Remove EGR volume control valve from cylinder head.
(The EGR volume control valve harness connector should remain connected.)
- 5) Turn ignition switch "ON".
- 6) Perform "EGR VOL CONT/V" in "ACTIVE TEST" mode with CONSULT-II. Check that EGR volume control valve shaft moves smoothly forward and backward according to the valve opening.
If NG, replace the EGR volume control valve.

⊗ Without CONSULT-II


- 1) Disconnect EGR volume control valve harness connector.
- 2) Check resistance between the following terminals.
terminal 2 and terminals 1, 3
terminal 5 and terminals 4, 6

Temperature °C (°F)	Resistance Ω
20 (68)	20 - 24

- 3) Turn ignition switch "ON" and "OFF". Check that EGR volume control valve shaft moves smoothly forward and backward according to the ignition switch position.
If NG, replace the EGR volume control valve.

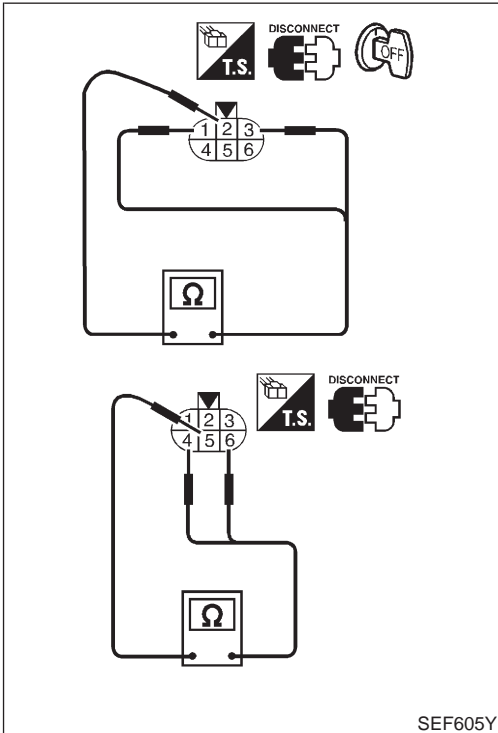


ACTIVE TEST	
EGR VOL CONT/V	20 step
MONITOR	
ENG SPEED	XXX rpm
EGR TEMP SEN	XXX V

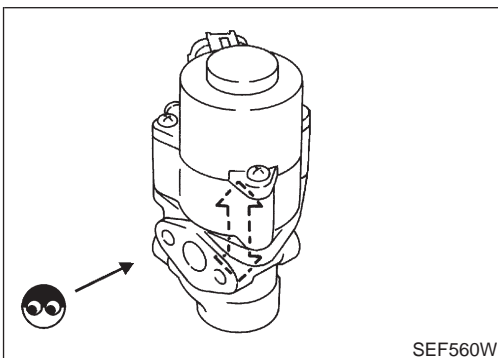

DTC P0420 THREE WAY CATALYST FUNCTION

QG

On Board Diagnosis Logic

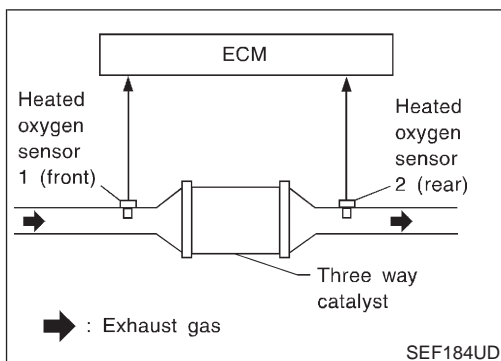

On Board Diagnosis Logic

NJEC0240

The ECM monitors the switching frequency ratio of heated oxygen sensors 1 (front) and 2 (rear).

A three way catalyst with high oxygen storage capacity will indicate a low switching frequency of heated oxygen sensor 2 (rear). As oxygen storage capacity decreases, the heated oxygen sensor 2 (rear) switching frequency will increase.

When the frequency ratio of heated oxygen sensors 1 (front) and 2 (rear) approaches a specified limit value, the three way catalyst malfunction is diagnosed.

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0420 0420	<ul style="list-style-type: none"> • Three way catalyst does not operate properly. • Three way catalyst does not have enough oxygen storage capacity. 	<ul style="list-style-type: none"> • Three way catalyst • Exhaust tube • Intake air leaks • Injectors • Injector leaks • Spark plug • Improper ignition timing

SRT WORK SUPPORT	
CATALYST	INCMP
HO2S HTR	CMPLT
HO2S	INCMP
EGR SYSTEM	INCMP
MONITOR	
ENG SPEED	XXX rpm
MAS A/F SE B1	XXX V
B/FUEL SCHDL	XXX msec
A/F ALPHA-B1	XXX V
COOLAN TEMP/S	XXX °C
HO2S1 (B1)	XXX V

SEF847Y

DTC Confirmation Procedure

NJEC0241

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 9 seconds before conducting the next test.

With CONSULT-II

TESTING CONDITION:

- Open engine hood before conducting following procedure.
 - Do not hold engine speed more than specified minutes below.
- 1) Turn ignition switch "ON".
 - 2) Select "DTC & SRT CONFIRMATION" then "SRT WORK SUPPORT" mode with CONSULT-II.
 - 3) Start engine.
 - 4) Rev engine up to 3,000±500 rpm and hold it for 3 consecutive minutes then release the accelerator pedal completely. If "COMPLETED" appears on the CONSULT-II screen, go to step 7.
 - 5) Wait 5 seconds at idle.
 - 6) Rev engine up to 2,500±500 rpm and maintain it until "INCMP" of CATALYST changes to "CMPLT" (it will take approximately 5 minutes.) If not "CMPLT", stop engine and cool it down to less than 70°C (158°F) and then retest from step 1.
 - 7) Select "SELF-DIAG RESULTS" mode with CONSULT-II.
 - 8) Confirm that the 1st trip DTC is not detected. If the 1st trip DTC is detected, go to "Diagnostic Procedure", EC-300.

7

SRT WORK SUPPORT	
CATALYST	CMPLT
HO2S HTR	CMPLT
HO2S	INCMP
EGR SYSTEM	INCMP
MONITOR	
ENG SPEED	XXX rpm
MAS A/F SE B1	XXX V
B/FUEL SCHDL	XXX msec
A/F ALPHA-B1	XXX V
COOLAN TEMP/S	XXX °C
HO2S1 (B1)	XXX V

SEF848Y


SELF DIAG RESULTS	
DTC RESULTS	TIME
NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.	

SEF560X

DTC P0420 THREE WAY CATALYST FUNCTION

QG

Overall Function Check

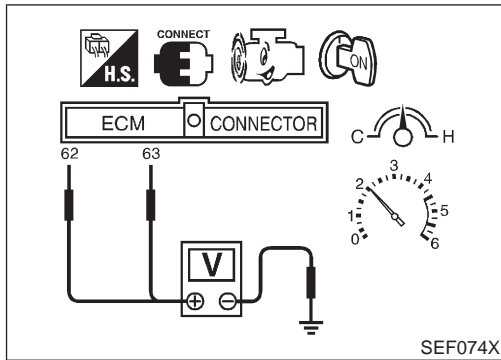

Overall Function Check

NJEC0242

Use this procedure to check the overall function of the three way catalyst. During this check, a 1st trip DTC might not be confirmed.

⊗ Without CONSULT-II

- 1) Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
- 2) Stop vehicle with engine running.
- 3) Set voltmeters probes between ECM terminals 62 (HO2S1 signal), 63 (HO2S2 signal) and engine ground.
- 4) Keep engine speed at 2,000 rpm constant under no load.
- 5) Make sure that the voltage switching frequency (high & low) between ECM terminal 63 and engine ground is much less than that of ECM terminal 62 and engine ground.

Switching frequency ratio = A/B

A: Heated oxygen sensor 2 (rear) voltage switching frequency

B: Heated oxygen sensor 1 (front) voltage switching frequency

This ratio should be less than 0.75.

If the ratio is greater than above, it means three way catalyst does not operate properly.

NOTE:

If the voltage at terminal 62 does not switch periodically more than 5 times within 10 seconds at step 4, perform trouble diagnosis for DTC P0133 first. (See EC-195.)

Diagnostic Procedure


NJEC0243

1	CHECK EXHAUST SYSTEM	
Visually check exhaust tubes and muffler for dent.		
OK or NG		
OK	▶	GO TO 2.
NG	▶	Repair or replace.

DTC P0420 THREE WAY CATALYST FUNCTION

QG

Diagnostic Procedure (Cont'd)

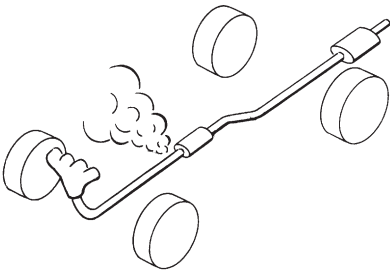2	CHECK EXHAUST AIR LEAK
1. Start engine and run it at idle. 2. Listen for an exhaust air leak before the three way catalyst.	
 A schematic diagram of a three-way catalyst. It shows a central pipe with three circular chambers. A hand is shown holding a spray nozzle and spraying air into the left chamber. Clouds of air are shown escaping from the left chamber and the middle chamber, indicating leaks. The right chamber is also shown with a circular cap.	
SEF099P	
OK or NG	
OK	▶ GO TO 3.
NG	▶ Repair or replace.


3	CHECK INTAKE AIR LEAK
Listen for an intake air leak after the mass air flow sensor.	
OK or NG	
OK	▶ GO TO 4.
NG	▶ Repair or replace.

4	CHECK IGNITION TIMING
Check for ignition timing. Refer to "BASIC INSPECTION", EC-98.	
OK or NG	
OK	▶ GO TO 5.
NG	▶ Check camshaft position sensor (PHASE) (EC-278) and crankshaft position sensor (POS) (EC-272).


DTC P0420 THREE WAY CATALYST FUNCTION

QG

Diagnostic Procedure (Cont'd)

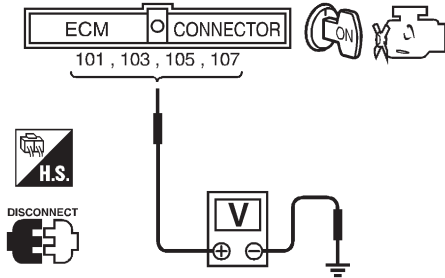5	CHECK INJECTORS	
<ol style="list-style-type: none"> 1. Refer to Wiring Diagram for Injectors, EC-447. 2. Stop engine and then turn ignition switch "ON". 3. Check voltage between ECM terminals 101, 103, 105 and 107 and ground with CONSULT-II or tester. 		
		
<p>Battery voltage should exist.</p> <p>OK or NG</p>		
OK	▶	GO TO 6.
NG	▶	Perform "Diagnostic Procedure" INJECTOR, EC-448.

SEF075X

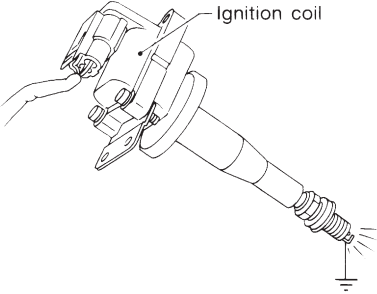6	CHECK IGNITION SPARK	
<ol style="list-style-type: none"> 1. Disconnect ignition coil assembly from rocker cover. 2. Connect a known good spark plug to the ignition coil assembly. 3. Place end of spark plug against a suitable ground and crank engine. 4. Check for spark. 		
		
<p>OK or NG</p>		
OK	▶	GO TO 7.
NG	▶	Check ignition coil, power transistor and their circuits. Refer to EC-451.

SEF575Q

7	CHECK INJECTOR	
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Remove injector assembly. Refer to EC-39. Keep fuel hose and all injectors connected to injector gallery. 3. Disconnect camshaft position sensor harness connector. 4. Turn ignition switch "ON". Make sure fuel does not drip from injector. 		
<p>OK or NG</p>		
OK (Does not drip)	▶	GO TO 8.
NG (Drips)	▶	Replace the injector(s) from which fuel is dripping.

DTC P0420 THREE WAY CATALYST FUNCTION

QG*Diagnostic Procedure (Cont'd)*

8	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.	
Trouble is fixed	▶ INSPECTION END
Trouble is not fixed	▶ Replace three way catalyst.

DTC P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE (CIRCUIT)

QG

Description

Description SYSTEM DESCRIPTION

NJEC0248

NJEC0248S01

Sensor	Input Signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS)	Engine speed	EVAP canister purge control	EVAP canister purge volume control solenoid valve
Camshaft position sensor (PHASE)	Engine speed and cylinder number		
Mass air flow sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Battery	Battery voltage		
Ignition switch	Start signal		
Closed throttle position switch*	Closed throttle position		
Throttle position sensor	Throttle position		
Heated oxygen sensor 1 (front)	Density of oxygen in exhaust gas (Mixture ratio feedback signal)		
Fuel tank temperature sensor*	Fuel temperature in fuel tank		
Vehicle speed sensor	Vehicle speed		


*: If so equipped

This system controls flow rate of fuel vapor from the EVAP canister. The opening of the vapor by-pass passage in the EVAP canister purge volume control solenoid valve changes to control the flow rate. The EVAP canister purge volume control solenoid valve repeats ON/OFF operation according to the signal sent from the ECM. The opening of the valve varies for optimum engine control. The optimum value stored in the ECM is determined by considering various engine conditions. When the engine is operating, the flow rate of fuel vapor from the EVAP canister is regulated as the air flow changes.

COMPONENT DESCRIPTION

NJEC0248S02

The EVAP canister purge volume control solenoid valve uses a ON/OFF duty to control the flow rate of fuel vapor from the EVAP canister. The EVAP canister purge volume control solenoid valve is moved by ON/OFF pulses from the ECM. The longer the ON pulse, the greater the amount of fuel vapor that will flow through the valve.

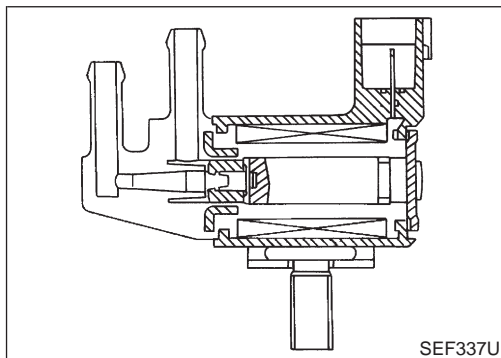

CONSULT-II Reference Value in Data Monitor Mode

NJEC0249

MONITOR ITEM	CONDITION	SPECIFICATION
PURG VOL C/V	● Engine: After warming up	Idle
	● No-load	Reving engine
		0%
		—

DTC P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE (CIRCUIT)

QG

ECM Terminals and Reference Value


ECM Terminals and Reference Value

=NJE0250

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

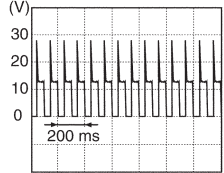TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
14	GY/L	EVAP canister purge volume control solenoid valve	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	BATTERY VOLTAGE (11 - 14V)
			[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● 2,000 rpm 	5 - 12V  <p style="text-align: right; margin-top: 5px;">SEF975W</p>

On Board Diagnosis Logic

NJE0251

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0443 0443	<ul style="list-style-type: none"> ● An improper voltage signal is sent to ECM through the valve. 	<ul style="list-style-type: none"> ● Harness or connectors (The valve circuit is open or shorted.) ● EVAP canister purge volume control solenoid valve

DTC Confirmation Procedure


NJE0252

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 9 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm battery voltage is more than 11V.

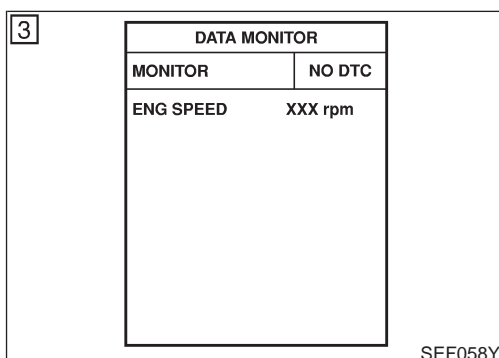

With CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and let it idle for at least 5 seconds.
- 4) If 1st trip DTC is detected, go to "DIAGNOSTIC PROCEDURE", EC-307.

With GST

Follow the procedure "With CONSULT-II" above.

DTC P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE (CIRCUIT)


QG

Wiring Diagram

Wiring Diagram


NJEC0253

EC-PGC/V-01

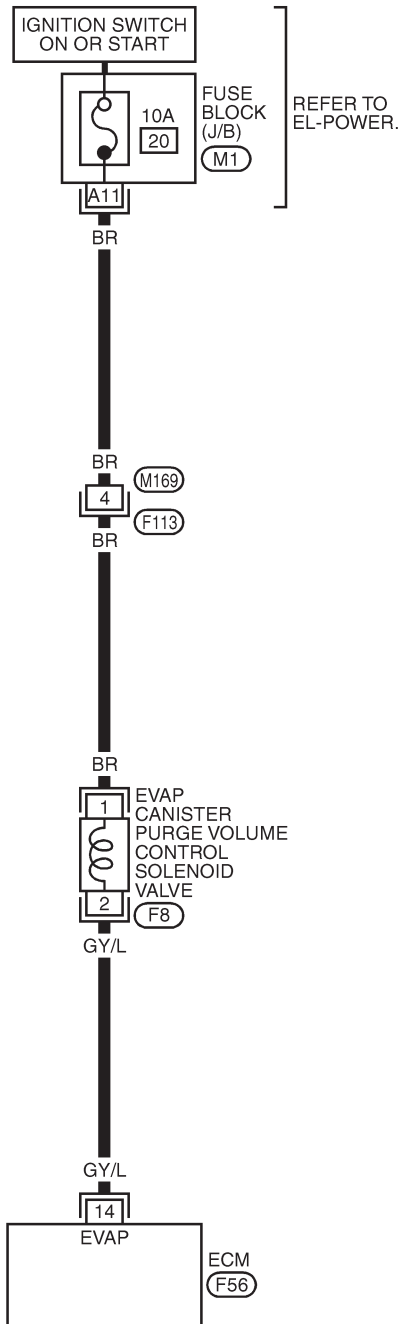


: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

REFER TO EL-POWER.



REFER TO THE FOLLOWING.

(M1) - FUSE BLOCK-JUNCTION BOX (J/B)

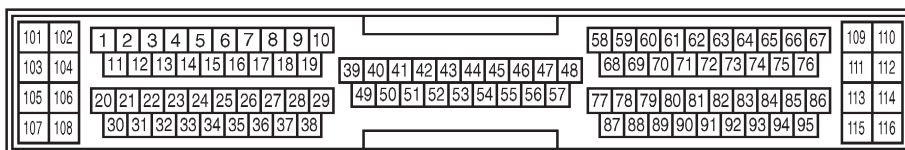

(F56) GY

YEC977



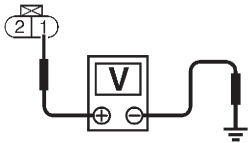
DTC P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE (CIRCUIT)

QG

Diagnostic Procedure

Diagnostic Procedure

NJE0254

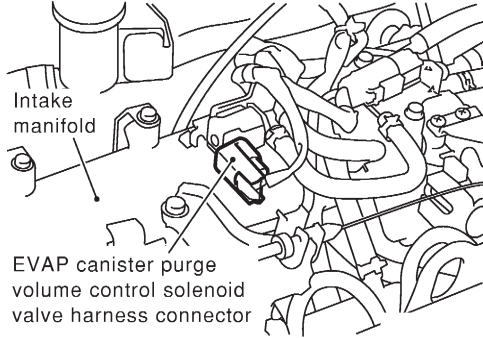1	CHECK POWER SUPPLY	<p>1. Turn ignition switch "OFF".</p> <p>2. Disconnect EVAP canister purge volume control solenoid valve harness connector.</p> <div style="text-align: center;">  <p>Intake manifold</p> <p>EVAP canister purge volume control solenoid valve harness connector</p> </div> <p>3. Turn ignition switch "ON".</p> <p>4. Check voltage between terminals 1 and engine ground with CONSULT-II or tester.</p> <div style="text-align: center;">  <p>Voltage: Battery voltage</p>  </div> <p style="text-align: right;">SEF076X</p> <p style="text-align: right;">SEF606Y</p> <p style="text-align: center;">OK or NG</p>
OK	▶	GO TO 3.
NG	▶	GO TO 2.

2	DETECT MALFUNCTIONING PART	<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M169, F113 ● 10A fuse ● Harness for open or short between EVAP canister purge volume control solenoid valve and fuse <p style="text-align: right;">▶ Repair harness or connectors.</p>
----------	-----------------------------------	---

3	CHECK OUTPUT SIGNAL CIRCUIT	<p>1. Turn ignition switch "OFF".</p> <p>2. Disconnect ECM harness connector.</p> <p>3. Check harness continuity between ECM terminal 14 and terminal 2. Refer to wiring diagram. Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>
OK	▶	GO TO 4.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

DTC P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE (CIRCUIT)

QG


Diagnostic Procedure (Cont'd)

4	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE	
Refer to "Component Inspection" EC-308.		
OK or NG		
OK	▶	GO TO 5.
NG	▶	Replace EVAP canister purge volume control solenoid valve.

5	CHECK INTERMITTENT INCIDENT	
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.		
▶		INSPECTION END

ACTIVE TEST	
PURG VOL CONT/V	XXX %
MONITOR	
ENG SPEED	XXX rpm
A/F ALPHA-B1	XX %
A/F ALPHA-B2	XX %
HO2S1 MNTR (B1)	LEAN
HO2S1 MNTR (B2)	LEAN
THRTL POS SEN	X.XX V

SEF677Y

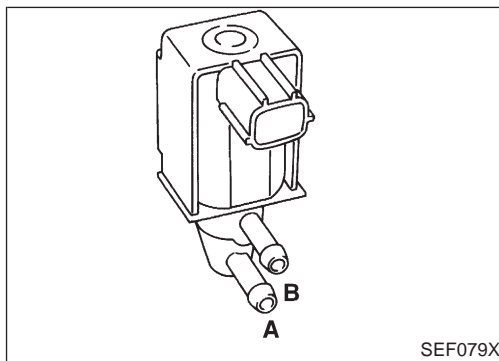

Component Inspection

NJEC0255

EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

NJEC0255S01

Ⓜ With CONSULT-II

- 1) Start engine.
- 2) Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT-II. Check that engine speed varies according to the valve opening.
If OK, inspection end. If NG, go to following step.
- 3) Check air passage continuity.

Condition PURG VOL CONT/V value	Air passage continuity between A and B
100.0%	Yes
0.0%	No

If NG or operation takes more than 1 second, replace the EVAP canister purge volume control solenoid valve.

ⓧ Without CONSULT-II

Check air passage continuity.


Condition	Air passage continuity between A and B
12V direct current supply between terminals	Yes
No supply	No

If NG or operation takes more than 1 second, replace the EVAP canister purge volume control solenoid valve.

DTC P0500 VEHICLE SPEED SENSOR (VSS)

QG

Component Description

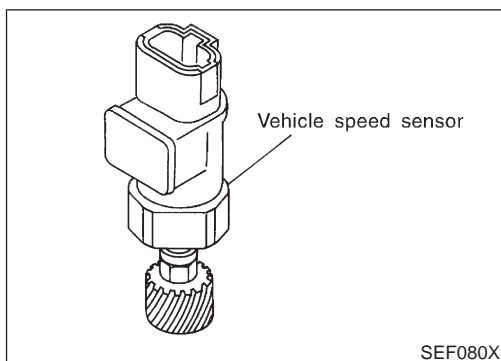

Component Description

NJEC0272

The vehicle speed sensor is installed in the transaxle. It contains a pulse generator which provides a vehicle speed signal to the speedometer. The speedometer then sends a signal to the ECM.

ECM Terminals and Reference Value

NJEC0273

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
86	PU/R	Vehicle speed sensor	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Lift up the vehicle ● In 2nd gear position ● Vehicle speed is 40 km/h (25 MPH) 	<p>2.5 - 3V</p> <p style="text-align: right;">SEF976W</p>

On Board Diagnosis Logic

NJEC0274

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0500 0500	<ul style="list-style-type: none"> ● The almost 0 km/h (0 MPH) signal from vehicle speed sensor is sent to ECM even when vehicle is being driven. 	<ul style="list-style-type: none"> ● Harness or connector (The vehicle speed sensor circuit is open or shorted.) ● Vehicle speed sensor

DTC Confirmation Procedure

NJEC0275

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 9 seconds before conducting the next test.

TESTING CONDITION:

This procedure may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

DTC P0500 VEHICLE SPEED SENSOR (VSS)

QG

DTC Confirmation Procedure (Cont'd)

6	DATA MONITOR	
	MONITOR	NO DTC
	ENG SPEED	XXX rpm
	COOLAN TEMP/S	XXX °C
	B/FUEL SCHDL	XXX msec
	PW/ST SIGNAL	OFF
	VHCL SPEED SE	XXX km/h

SEF196Y

With CONSULT-II


- 1) Start engine
- 2) Read "VHCL SPEED SE" in "DATA MONITOR" mode with CONSULT-II. The vehicle speed on CONSULT-II should exceed 10 km/h (6 MPH) when rotating wheels with suitable gear position.
- 3) If NG, go to "Diagnostic Procedure", EC-312. If OK, go to following step.
- 4) Select "DATA MONITOR" mode with CONSULT-II.
- 5) Warm engine up to normal operating temperature.
- 6) Maintain the following conditions for at least 10 consecutive seconds.

ENG SPEED	2,600 - 4,000 rpm (M/T) 2,600 - 3,000 rpm (A/T)
COOLAN TEMP/S	More than 70°C (158°F)
B/FUEL SCHDL	5.3 - 10.7 msec (M/T) 4.8 - 10.7 msec (A/T)
Selector lever	Suitable position
PW/ST SIGNAL	OFF

- 7) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-312.

With GST

Follow the procedure "With CONSULT-II" above.

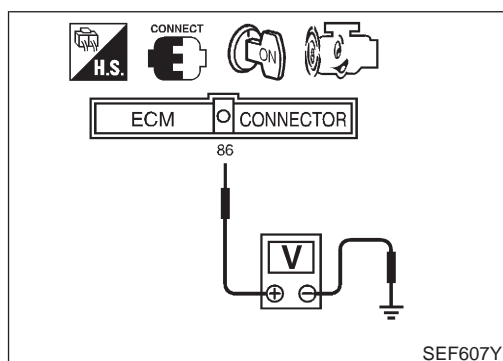

Without CONSULT-II



- 1) Lift up drive wheels.
- 2) Start engine.
- 3) Read the voltage signal between ECM terminal 86 (Vehicle speed sensor signal) and ground with oscilloscope.
- 4) Verify that the oscilloscope screen shows the signal wave as shown in the figure.
- 5) If NG, go to "Diagnostic Procedure", EC-312.

DTC P0500 VEHICLE SPEED SENSOR (VSS)


Wiring Diagram

NJEC0277

EC-VSS-01

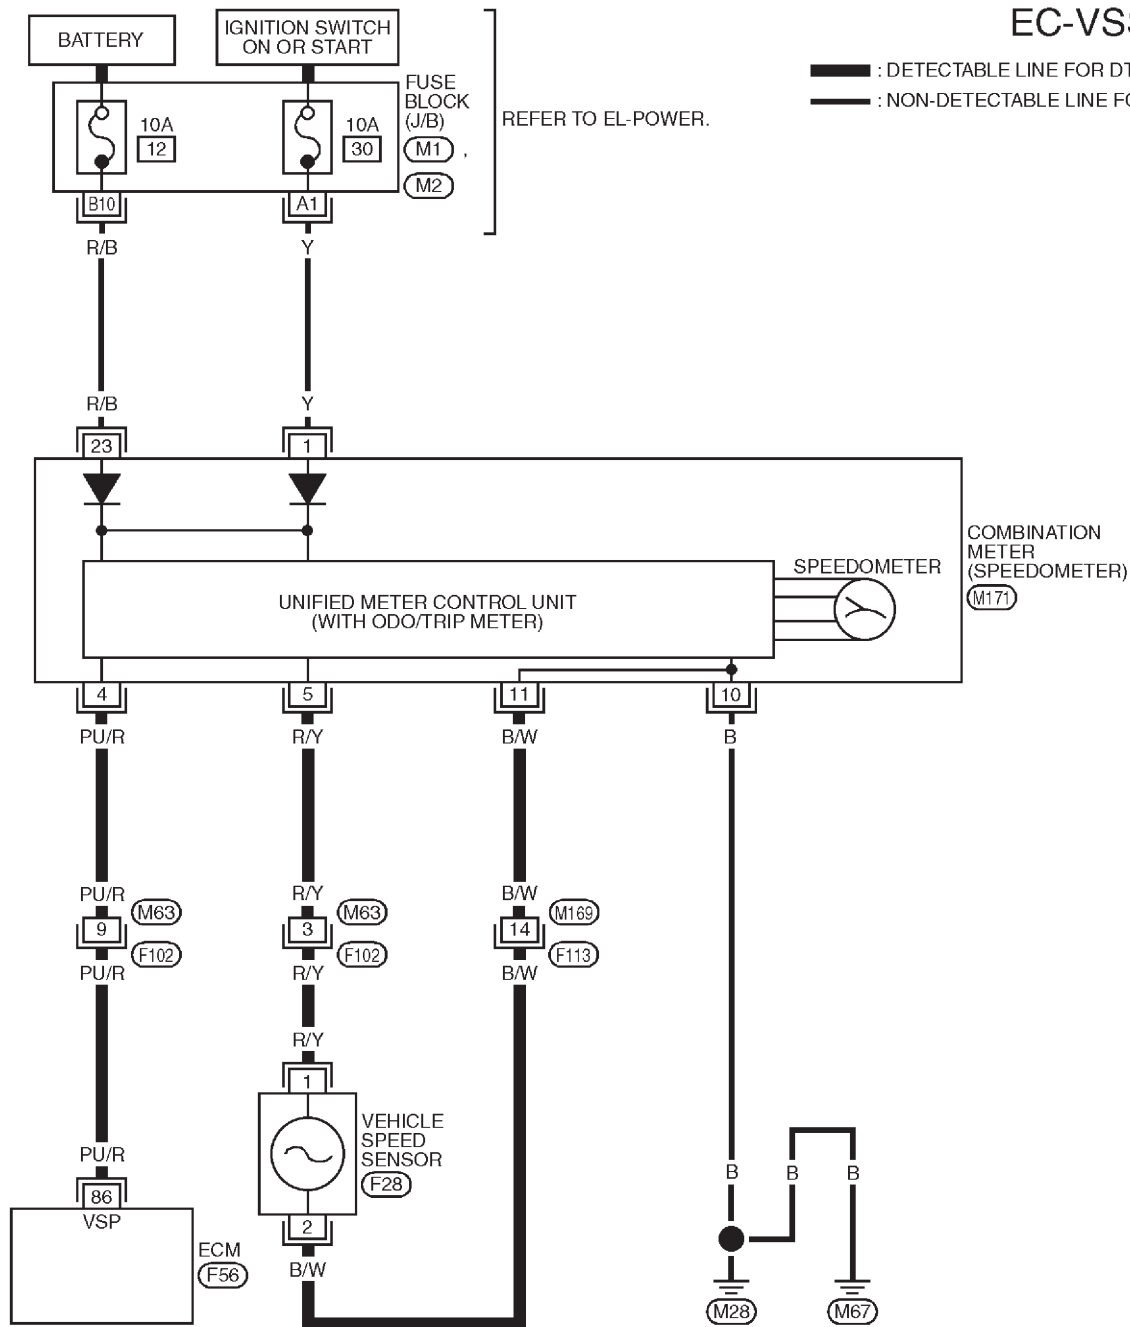

REFER TO THE FOLLOWING.
 (M1), (M2) - FUSE BLOCK-
 JUNCTION BOX (J/B)

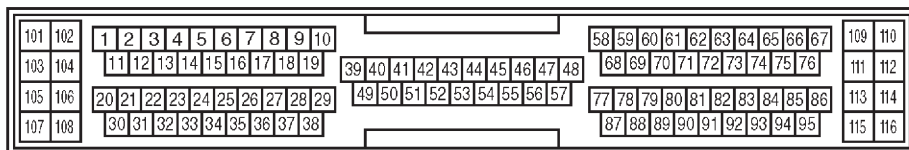

Diagnostic Procedure

NJE0278

1	CHECK INPUT SIGNAL CIRCUIT	
<p>1. Turn ignition switch "OFF".</p> <p>2. Disconnect ECM harness connector and combination meter harness connector.</p> <p>3. Check harness continuity between ECM terminal 86 and meter terminal 4. Refer to wiring diagram.</p> <p style="color: blue; margin-left: 20px;">Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK		▶ GO TO 3.
NG		▶ GO TO 2.

2	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M63, F102 ● Harness for open or short between ECM and combination meter 		
		▶ Repair open circuit or short to ground or short to power in harness or connectors.

3	CHECK SPEEDOMETER FUNCTION	
<p>Make sure that speedometer functions properly.</p> <p style="text-align: center;">OK or NG</p>		
OK		▶ GO TO 5.
NG		▶ GO TO 4.

4	CHECK SPEEDOMETER CIRCUIT	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M63, F102 ● Harness connectors M169, F113 ● Harness for open or short between combination meter and vehicle speed sensor 		
OK		▶ Check combination meter and vehicle speed sensor. Refer to EL-89, "METERS AND GAUGES".
NG		▶ Repair open circuit or short to ground or short to power in harness or connectors.

5	CHECK INTERMITTENT INCIDENT	
<p>Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.</p>		
		▶ INSPECTION END

DTC P0505 IDLE AIR CONTROL VALVE (IACV) — AUXILIARY AIR CONTROL (AAC) VALVE

QG

Description


Description SYSTEM DESCRIPTION

NJEC0279

NJEC0279S01

Sensor	Input Signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS)	Engine speed	Idle air control	IACV-AAC valve
Camshaft position sensor (PHASE)	Engine speed and cylinder number		
Engine coolant temperature sensor	Engine coolant temperature		
Ignition switch	Start signal		
Throttle position sensor	Throttle position		
PNP switch	Park/Neutral position		
Air conditioner switch	Air conditioner operation		
Power steering oil pressure switch	Power steering load signal		
Battery	Battery voltage		
Vehicle speed sensor	Vehicle speed		
Cooling fan	Cooling fan operation		
Electrical load	Electrical load signal		

This system automatically controls engine idle speed to a specified level. Idle speed is controlled through fine adjustment of the amount of air which by-passes the throttle valve via IACV-AAC valve. The IACV-AAC valve changes the opening of the air by-pass passage to control the amount of auxiliary air. This valve is actuated by a step motor built into the valve, which moves the valve in the axial direction in steps corresponding to the ECM output signals. One step of IACV-AAC valve movement causes the respective opening of the air by-pass passage. (i.e. when the step advances, the opening is enlarged.) The opening of the valve is varied to allow for optimum control of the engine idling speed. The crankshaft position sensor (POS) detects the actual engine speed and sends a signal to the ECM. The ECM then controls the step position of the IACV-AAC valve so that engine speed coincides with the target value memorized in ECM. The target engine speed is the lowest speed at which the engine can operate steadily. The optimum value stored in the ECM is determined by taking into consideration various engine conditions, such as during warm up, deceleration, and engine load (air conditioner, power steering, cooling fan operation and electrical load).

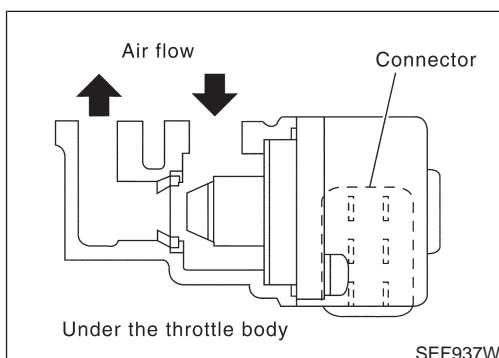

COMPONENT DESCRIPTION

NJEC0279S02

IACV-AAC Valve

NJEC0279S0202

The IACV-AAC valve is operated by a step motor for centralized control of auxiliary air supply. This motor has four winding phases and is actuated by the output signals of ECM which turns ON and OFF two windings each in sequence. Each time the IACV-AAC valve opens or closes to change the auxiliary air quantity, the ECM sends a pulse signal to the step motor. When no change in the auxiliary air quantity is needed, the ECM does not issue the pulse signal. A certain voltage signal is issued so that the valve remains at that particular opening.

DTC P0505 IDLE AIR CONTROL VALVE (IACV) — AUXILIARY AIR CONTROL (AAC) VALVE

QG

CONSULT-II Reference Value in Data Monitor Mode

CONSULT-II Reference Value in Data Monitor Mode

NJEC0280

MONITOR ITEM	CONDITION	SPECIFICATION
IACV-AAC/V	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: OFF ● Shift lever: "N" ● No-load 	Idle
		2,000 rpm
		5 - 25 steps
		—

ECM Terminals and Reference Value

NJEC0281

Specification data are reference values and are measured between each terminal and ground.

CAUTION:


Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
6 7 15 16	BR LG P OR	IACV-AAC valve	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	0.1 - 14V

On Board Diagnosis Logic

NJEC0282

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0505 0505	<ul style="list-style-type: none"> ● An improper voltage signal is sent to ECM through the valve. 	<ul style="list-style-type: none"> ● Harness or connectors (The IACV-AAC valve circuit is open.) ● IACV-AAC valve

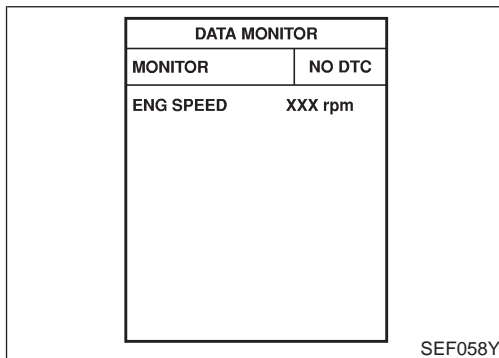

DTC Confirmation Procedure

NJEC0283

NOTE:

- If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 9 seconds before conducting the next test.
- **If the target idle speed is out of the specified value, perform "Idle Air Volume Learning", refer to EC-55, before conducting "DTC Confirmation Procedure". For the target idle speed, refer to "SERVICE DATA AND SPECIFICATIONS (SDS)", EC-489.**

With CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and warm it up to normal operating temperature.
- 4) Rev engine from idle to 2,000 rpm 20 times.
If 1st trip DTC is detected, go to "DIAGNOSTIC PROCEDURE", EC-297.

With GST

Follow the procedure "With CONSULT-II" above.

DTC P0505 IDLE AIR CONTROL VALVE (IACV) — AUXILIARY AIR CONTROL (AAC) VALVE



QG

Wiring Diagram


Wiring Diagram

NJE0284

EC-AAC/V-01

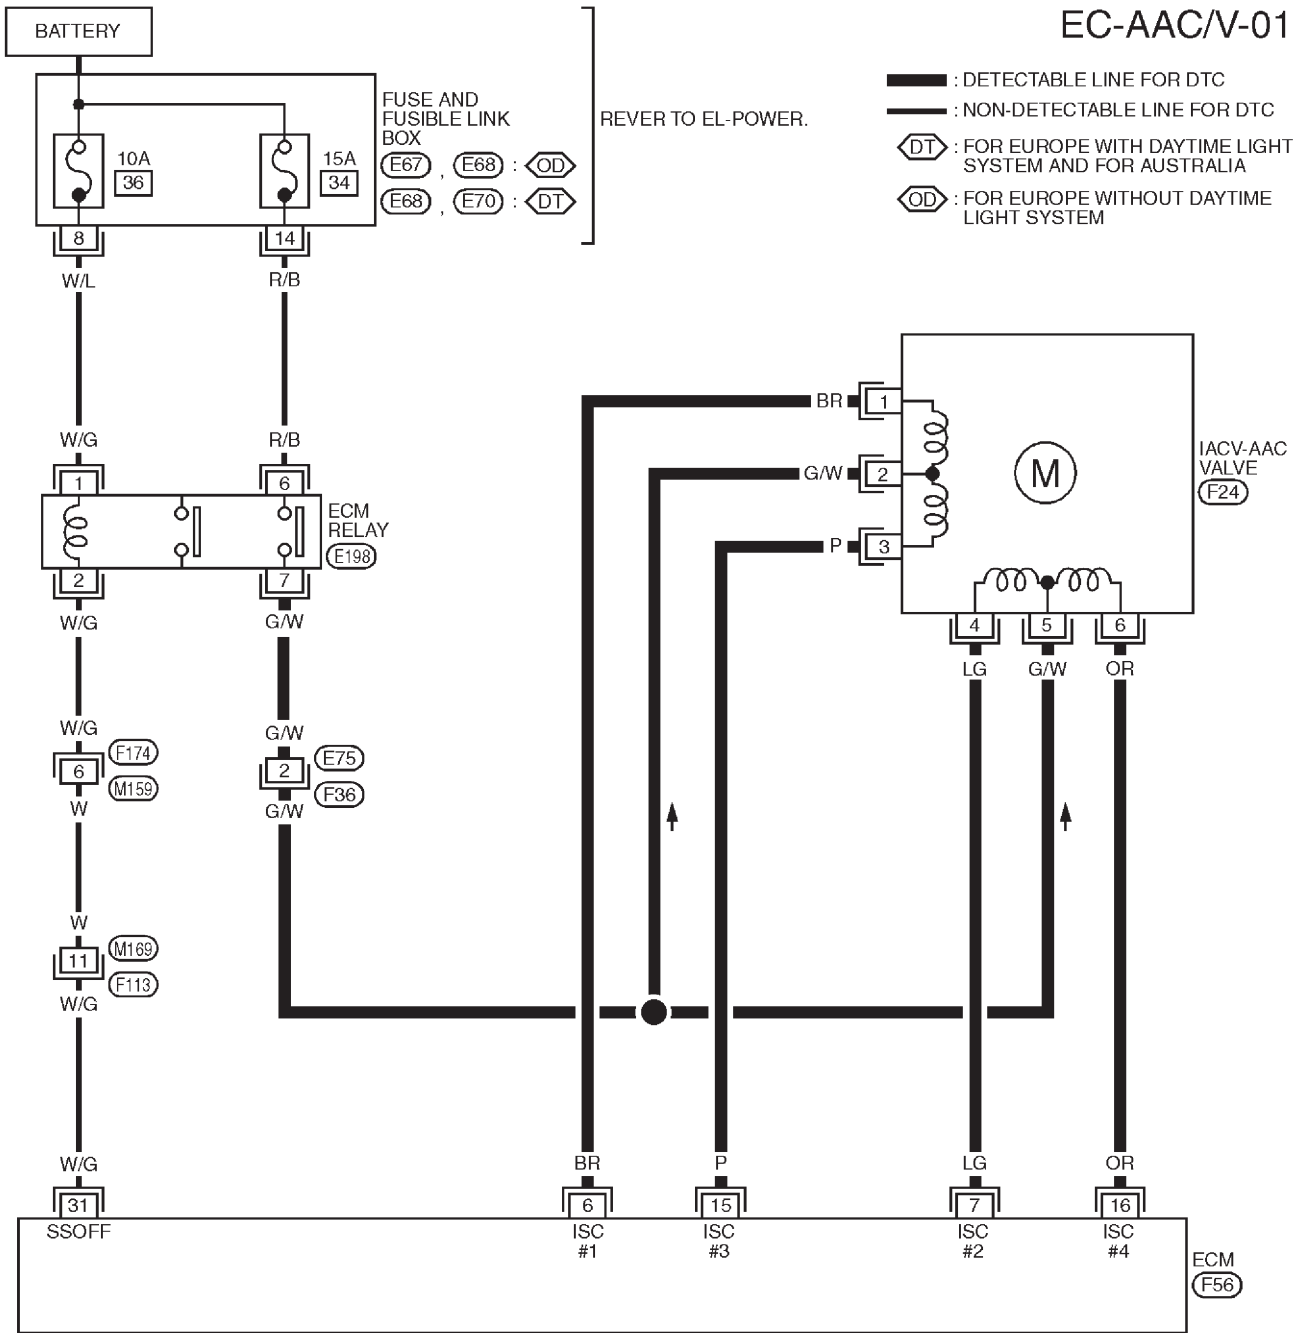

REFER TO THE FOLLOWING.
 (E67), (E68), (E70)
 -FUSE AND FUSIBLE LINK BOX

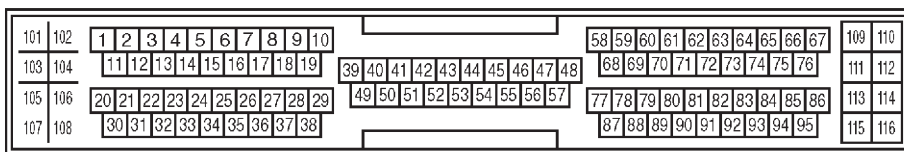

YEC979



DTC P0505 IDLE AIR CONTROL VALVE (IACV) — AUXILIARY AIR CONTROL (AAC) VALVE

QG

Diagnostic Procedure

Diagnostic Procedure

NJEC0285

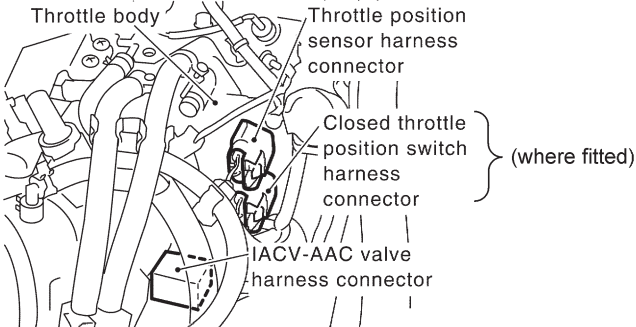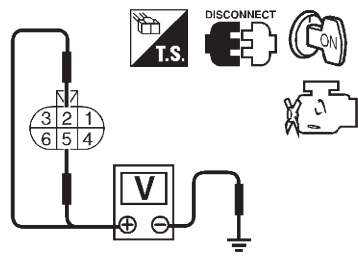1	CHECK POWER SUPPLY		
<p>1. Turn ignition switch "OFF". 2. Disconnect IACV-AAC valve harness connector.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">NEF316A</p> <p>3. Turn ignition switch "ON". 4. Check voltage between terminal 2, 5 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  <p style="margin-left: 100px;">Voltage: Battery voltage</p> </div> <p style="text-align: right;">SEF343X</p> <p style="text-align: center;">OK or NG</p>			
OK		▶	GO TO 3.
NG		▶	GO TO 2.


2	DETECT MALFUNCTIONING PART		
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E75, F36 ● Harness for open or short between IACV-AAC and ECM relay 			
		▶	Repair harness or connectors.


3	CHECK OUTPUT SIGNAL CIRCUIT		
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 6 and terminal 1, ECM terminal 7 and terminal 4, ECM terminal 15 and terminal 3, ECM terminal 16 and terminal 6. Refer to wiring diagram. Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>			
OK		▶	GO TO 4.
NG		▶	Repair open circuit or short to ground or short to power in harness or connectors.

DTC P0505 IDLE AIR CONTROL VALVE (IACV) — AUXILIARY AIR CONTROL (AAC) VALVE

QG

Diagnostic Procedure (Cont'd)

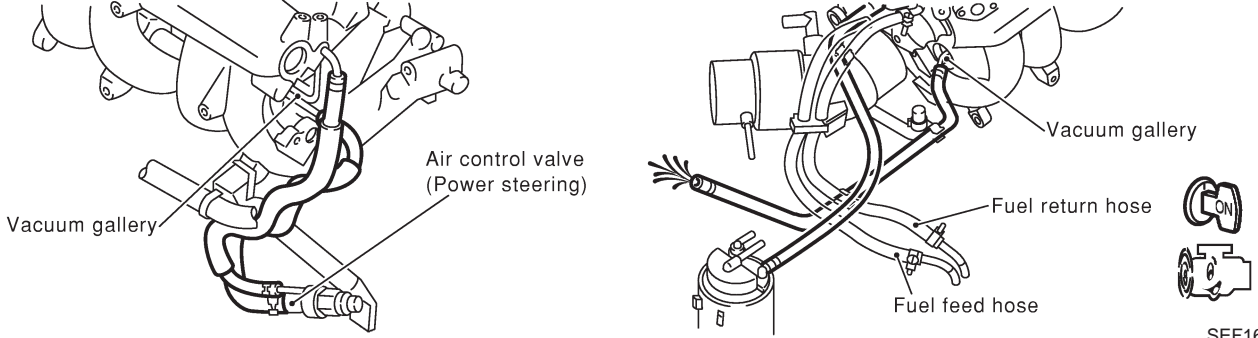
4	CHECK AIR CONTROL VALVE (POWER STEERING) OPERATION-I	
<ol style="list-style-type: none"> 1. Reconnect the ECM harness connector and IACV-AAC valve harness connector. 2. Disconnect the vacuum hose connected to the air control valve (Power steering) at the intake air duct. 3. Start engine and let it idle. 4. Check vacuum hose for vacuum existence. 		
		
<p>Vacuum does not exist or slightly exist.</p> <p>OK or NG</p>		
OK	▶	GO TO 5.
NG	▶	Replace air control valve (Power steering).

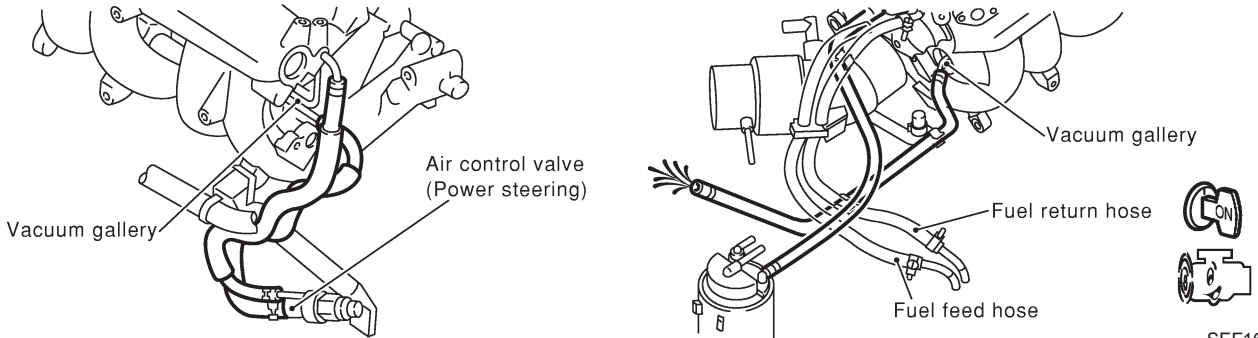
5	CHECK AIR CONTROL VALVE (POWER STEERING) OPERATION-II	
Check the vacuum hose for vacuum existence when steering wheel is turned.		
		
<p>Vacuum should exist.</p> <p>OK or NG</p>		
OK	▶	GO TO 8.
NG	▶	GO TO 6.

DTC P0505 IDLE AIR CONTROL VALVE (IACV) — AUXILIARY AIR CONTROL (AAC) VALVE

QG

Diagnostic Procedure (Cont'd)

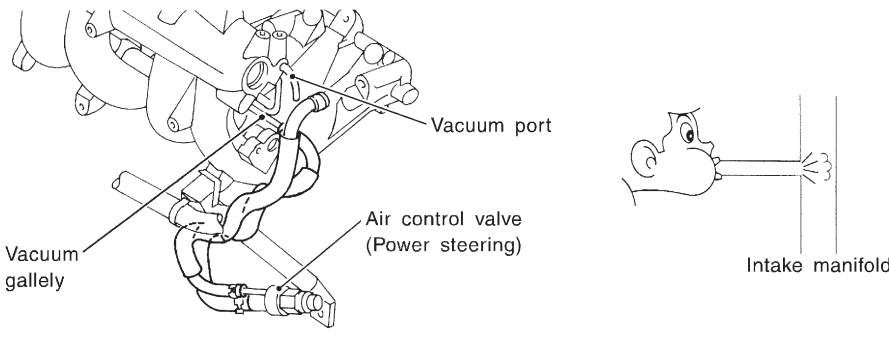6	CHECK VACUUM PORT	
<ol style="list-style-type: none"> 1. Stop engine. 2. Disconnect the vacuum hose connected to the air control valve (Power steering) at the vacuum port. 3. Blow air into vacuum port. 4. Check that air flows freely. 		
		
SEF924Y		
OK or NG		
OK	▶▶	GO TO 7.
NG	▶▶	Repair or clean vacuum port.

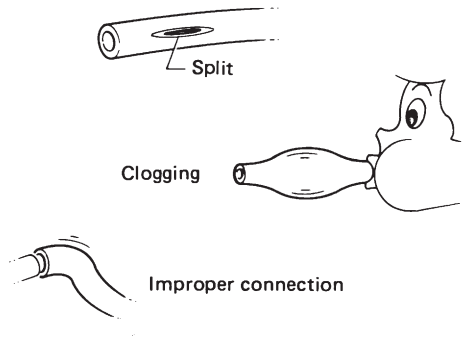7	CHECK VACUUM HOSES AND TUBES	
<ol style="list-style-type: none"> 1. Disconnect vacuum hoses between the air control valve (Power steering) and vacuum port, air control valve (Power steering) and air duct. 2. Check hoses and tubes for cracks, clogging, improper connection or disconnection. 		
		
SEF109L		
OK or NG		
OK	▶▶	GO TO 8.
NG	▶▶	Repair hoses or tubes.

8	CHECK IACV-AAC VALVE	
Refer to "Component Inspection", EC-320.		
OK or NG		
OK	▶▶	GO TO 10.
NG	▶▶	GO TO 9.

DTC P0505 IDLE AIR CONTROL VALVE (IACV) — AUXILIARY AIR CONTROL (AAC) VALVE

QG

Diagnostic Procedure (Cont'd)

9	REPLACE IACV-AAC VALVE	
1. Replace IACV-AAC valve assembly. 2. Perform "Idle Air Volume Learning", EC-55. Is the result CMPLT or INCMP?		
CMPLT or INCMP		
CMPLT	▶	INSPECTION END
INCMP	▶	Follow the construction of "Idle Air Volume Learning".


10	CHECK TARGET IDLE SPEED	
1. Turn ignition switch "OFF". 2. Reconnect all harness connectors and vacuum hoses. 3. Start engine and warm it up to normal operating temperature. 4. Also warm up transmission to normal operating temperature. ● For A/T models with CONSULT-II, drive vehicle until "FLUID TEMP SE" in "DATA MONITOR" mode of "A/T" system indicates less than 0.9V. ● For A/T models without CONSULT-II and M/T models, drive vehicle for 10 minutes. 5. Stop vehicle with engine running. 6. Check target idle speed. M/T: 700±50 rpm A/T: 800±50 rpm (in "P" or "N" position)		
OK or NG		
OK	▶	GO TO 11.
NG	▶	Perform "Idle Air Volume Learning", EC-55.

11	CHECK INTERMITTENT INCIDENT	
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.		
	▶	INSPECTION END

DTC P0505 IDLE AIR CONTROL VALVE (IACV) — AUXILIARY AIR CONTROL (AAC) VALVE

QG

Component Inspection

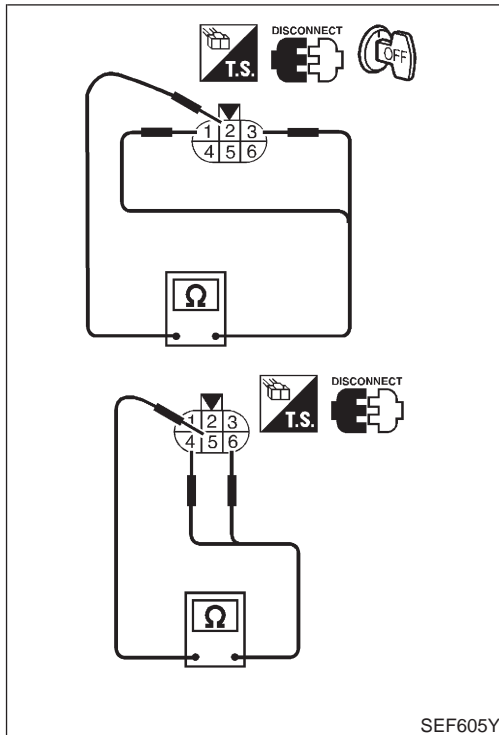

Component Inspection

IACV-AAC VALVE


NJEC0286

NJEC0286S01

- 1) Disconnect IACV-AAC valve harness connector.
- 2) Check IACV-AAC valve resistance.


Condition	Resistance
Terminal 2 and terminals 1, 3	20 - 24Ω [at 20°C (68°F)]
Terminal 5 and terminals 4, 6	

- 3) Reconnect IACV-AAC valve harness connector.
- 4) Remove idle air adjusting unit assembly (IACV-AAC valve is built-in) from engine.
(The IACV-AAC valve harness connector should remain connected.)
- 5) Turn ignition switch "ON" and "OFF", and ensure the IACV-AAC valve shaft smoothly moves forward and backward, according to the ignition switch position.
If NG, replace the IACV-AAC valve.

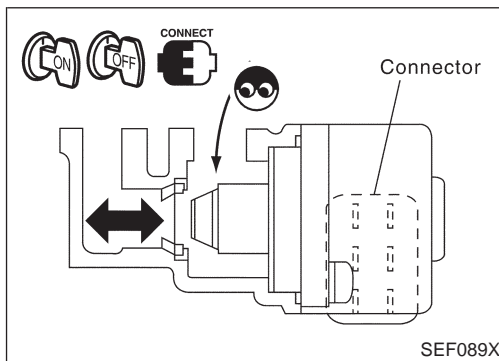

DTC P0510 CLOSED THROTTLE POSITION SWITCH (WHERE FITTED) QG

Component Description

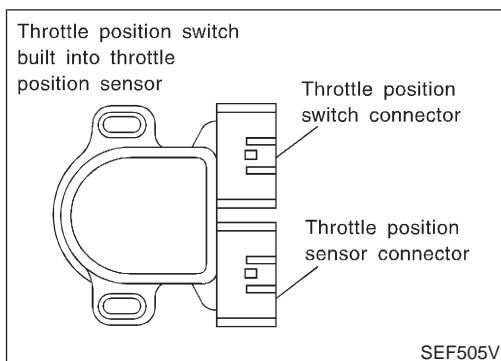

Component Description

NJEC0287

A closed throttle position switch and wide open throttle position switch are built into the throttle position sensor unit. The wide open throttle position switch is used only for A/T control. When the throttle valve is in the closed position, the closed throttle position switch sends a voltage signal to the ECM. The ECM only uses this signal to open or close the EVAP canister purge control valve when the throttle position sensor is malfunctioning.

CONSULT-II Reference Value in Data Monitor Mode

NJEC0571

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
CLSD THL/P SW	● Engine: Idle Throttle valve: Idle position	ON
	Throttle valve: Slightly open	OFF

ECM Terminals and Reference Value

NJEC0288

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
40	Y/PU	Throttle position switch (Closed position)	[Engine is running] ● Accelerator pedal released	BATTERY VOLTAGE (11 - 14V)
			[Engine is running] ● Accelerator pedal depressed	Approximately 0V

On Board Diagnosis Logic

NJEC0289

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0510 0510	● Battery voltage from the closed throttle position switch is sent to ECM with the throttle valve opened.	<ul style="list-style-type: none"> ● Harness or connectors (The closed throttle position switch circuit is shorted.) ● Closed throttle position switch ● Throttle position sensor

4

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm
COOLAN TEMP/S	XXX °C
CLSD THL/P SW	ON

SEF197Y

DTC Confirmation Procedure

NJEC0290

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 9 seconds before conducting the next test.

With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF", wait at least 9 seconds and then start engine.

DTC P0510 CLOSED THROTTLE POSITION SWITCH (WHERE FITTED) QG

DTC Confirmation Procedure (Cont'd)

- 3) Select "CLSD THL/P SW" in "DATA MONITOR" mode. If "CLSD THL/P SW" is not available, go to step 5.
- 4) Check the signal under the following conditions.


Condition	Signal indication
Throttle valve: Idle position	ON
Throttle valve: Slightly open	OFF

If the result is NG, go to "Diagnostic Procedure", EC-324.
If OK, go to following step.

- 5) Select "DATA MONITOR" mode with CONSULT-II.
- 6) Drive the vehicle for at least 5 consecutive seconds under the following condition.

THRTL POS SEN	More than 2.3V
VHCL SPEED SE	More than 4 km/h (2 MPH)
Selector lever	Suitable position
Driving pattern	Driving vehicle uphill (Increased engine load) will help maintain the driving conditions required for this test.

- 7) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-324.

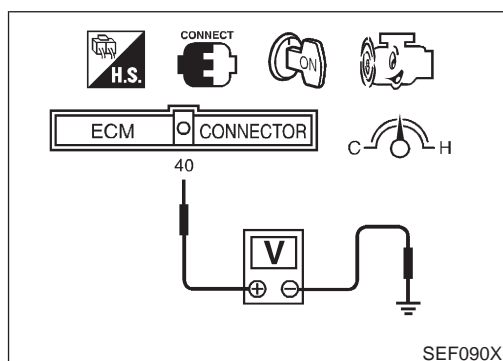

Overall Function Check

Use this procedure to check the overall function of the closed throttle position switch circuit. During this check, a 1st trip DTC might not be confirmed. N/JEC0291

Without CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Check the voltage between ECM terminal 40 (Closed throttle position switch signal) and ground under the following conditions.

Condition	Voltage
At idle	Battery voltage
At 2,000 rpm	Approximately 0V


- 3) If NG, go to "Diagnostic Procedure", EC-324.

DTC P0510 CLOSED THROTTLE POSITION SWITCH (WHERE FITTED) QG

Wiring Diagram

Wiring Diagram

NJEC0292

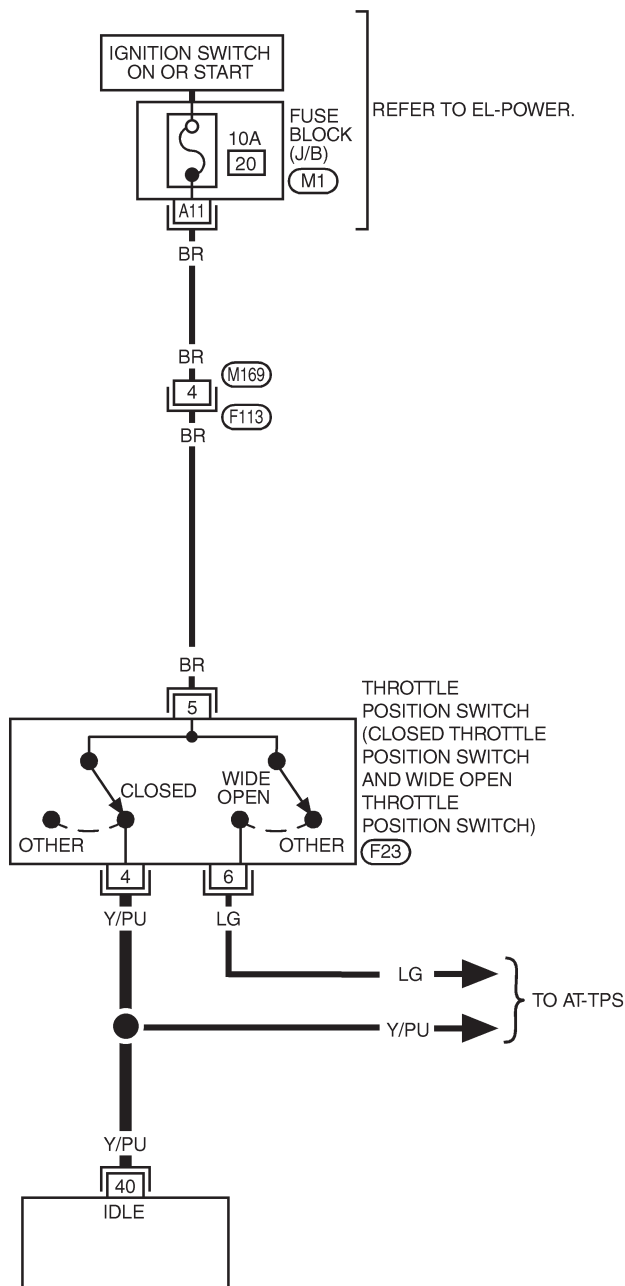


EC-TP/SW-01

- : DETECTABLE LINE FOR DTC
- : NON-DETECTABLE LINE FOR DTC


THROTTLE POSITION SWITCH (CLOSED THROTTLE POSITION SWITCH AND WIDE OPEN THROTTLE POSITION SWITCH) F23

TO AT-TPS



REFER TO THE FOLLOWING.

M1 - FUSE BLOCK-JUNCTION BOX (J/B)

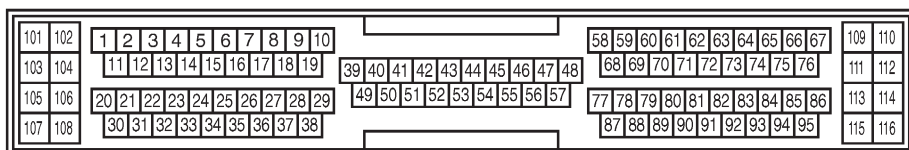



YEC052A

DTC P0510 CLOSED THROTTLE POSITION SWITCH (WHERE FITTED) QG

Diagnostic Procedure

Diagnostic Procedure

NJE0293

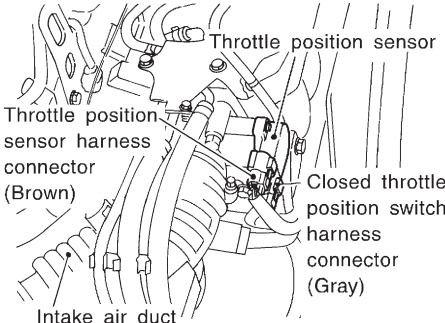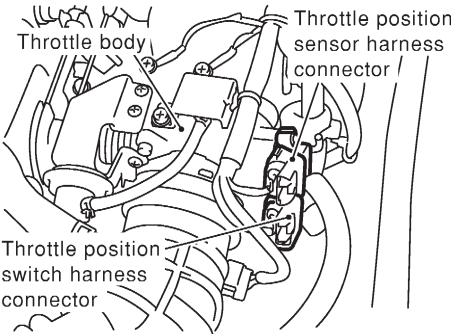1	CHECK POWER SUPPLY		
<p>1. Turn ignition switch "OFF". 2. Disconnect throttle position switch harness connector.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">JEF091Y</p> <p>3. Turn ignition switch "ON". 4. Check voltage between terminal 5 and engine ground with CONSULT-II or tester.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SEF837X</p> <p>Voltage: Battery voltage</p> <p style="text-align: center;">OK or NG</p>			
OK		▶	GO TO 3.
NG		▶	GO TO 2.

2	DETECT MALFUNCTIONING PART		
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M169, F113 ● 10A fuse ● Harness for open or short between throttle position switch and fuse 			
		▶	Repair harness or connectors.

3	CHECK INPUT SIGNAL CIRCUIT		
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 40 and terminal 4. Refer to wiring diagram. Continuity should exist. 4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>			
OK		▶	GO TO 5.
NG		▶	GO TO 4.

DTC P0510 CLOSED THROTTLE POSITION SWITCH (WHERE FITTED) QG

Diagnostic Procedure (Cont'd)

4	DETECT MALFUNCTIONING PART	
Check the following.		
<ul style="list-style-type: none"> ● Harness for open or short between throttle position switch and ECM ● Harness for open or short between throttle position switch and TCM (Transmission Control Module) 		
▶	Repair open circuit or short to ground or short to power in harness or connectors.	
5	ADJUST THROTTLE POSITION SWITCH IDLE POSITION	
Perform Basic Inspection, EC-98.		
▶	GO TO 6.	
6	CHECK CLOSED THROTTLE POSITION SWITCH	
Refer to "Component Inspection", EC-325.		
OK or NG		
OK	▶	GO TO 7.
NG	▶	Replace throttle position switch.
7	CHECK THROTTLE POSITION SENSOR	
Refer to "Component Inspection", EC-174.		
OK or NG		
OK	▶	GO TO 8.
NG	▶	Replace throttle position sensor.
8	CHECK INTERMITTENT INCIDENT	
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.		
▶	INSPECTION END	

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm
COOLAN TEMP/S	XXX °C
CLSD THL/P SW	ON

SEF197Y

Component Inspection CLOSED THROTTLE POSITION SWITCH

NJEC0294

NJEC0294S01

With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Stop engine and turn ignition switch "ON".
- 3) Select "DATA MONITOR" mode with CONSULT-II.
- 4) Check indication of "CLSD THL/P SW" under the following conditions.

NOTE:

Measurement must be made with closed throttle position switch installed in vehicle.

Throttle valve conditions	CLSD THL/P SW
Completely closed	ON
Partially open or completely open	OFF

If NG, adjust closed throttle position switch. Refer to "Basic Inspection", EC-98.

- 5) If it is impossible to adjust closed throttle position switch in "Basic Inspection", replace closed throttle position switch.

Without CONSULT-II

DTC P0510 CLOSED THROTTLE POSITION SWITCH (WHERE FITTED) QG

Component Inspection (Cont'd)

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF".
- 3) Disconnect throttle position switch harness connector.
- 4) Check continuity between terminals 4 and 5 under the following conditions. Refer to wiring diagram.


NOTE:

Continuity measurement must be made with closed throttle position switch installed in vehicle.

Throttle valve conditions	Continuity
Completely closed	Yes
Partially open or completely open	No

If NG, adjust closed throttle position switch. Refer to "Basic Inspection", EC-98.

- 5) If it is impossible to adjust closed throttle position switch in "Basic Inspection", replace closed throttle position switch.

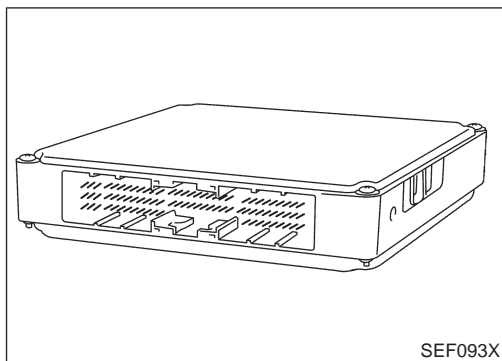

Component Description


NJEC0295

The ECM consists of a microcomputer, and connectors for signal input and output and for power supply. The ECM controls the engine.

On Board Diagnosis Logic

NJEC0296

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0605 0605	<ul style="list-style-type: none"> ECM calculation function is malfunctioning. 	<ul style="list-style-type: none"> ECM

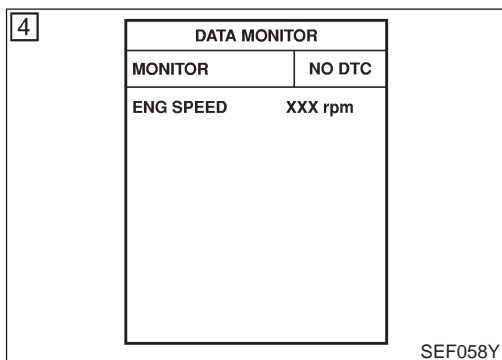

DTC Confirmation Procedure

NJEC0297

NOTE:

If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch “OFF” and wait at least 9 seconds before conducting the next test.

With CONSULT-II

- 1) Turn ignition switch “ON”.
- 2) Select “DATA MONITOR” mode with CONSULT-II.
- 3) Start engine.
- 4) Run engine for at least 1 second at idle speed.
- 5) If 1st trip DTC is detected, go to “Diagnostic Procedure”, EC-328.

With GST

Follow the procedure “With CONSULT-II” above.

Diagnostic Procedure

=NJECD298


1	INSPECTION START	
<p>Ⓜ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch "ON". 2. Select "SELF DIAG RESULTS" mode with CONSULT-II. 3. Touch "ERASE". 4. Perform "DTC Confirmation Procedure". See EC-327. 5. Is the 1st trip DTC P0605 displayed again? 		
<p>Ⓜ With GST</p> <ol style="list-style-type: none"> 1. Turn ignition switch "ON". 2. Select MODE 4 with GST. 3. Touch "ERASE". 4. Perform "DTC Confirmation Procedure". See EC-327. 5. Is the 1st trip DTC P0605 displayed again? 		
Yes or No		
Yes	▶	GO TO 2.
No	▶	INSPECTION END

2	REPLACE ECM	
<ol style="list-style-type: none"> 1. Replace ECM. 2. Perform initialization of NATS (NISSAN ANTI-THEFT SYSTEM) system and registration of all NATS ignition key IDs. Refer to "NATS (NISSAN ANTI-THEFT SYSTEM)", EC-72. 3. Perform "Idle Air Volume Learning", EC-55, Is the result CMPLT or INCMP? 		
CMPLT or INCMP		
CMPLT	▶	INSPECTION END
INCMP	▶	Follow the construction of "Idle Air Volume Learning".

DTC P1111 INTAKE VALVE TIMING CONTROL SOLENOID VALVE

QG

Component Description

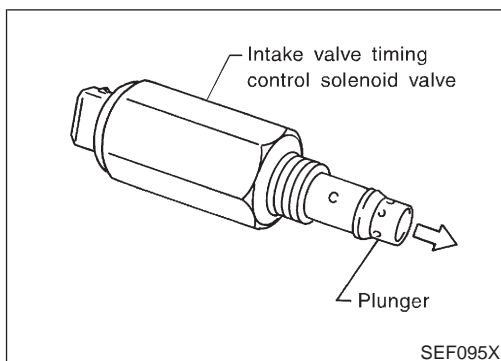

Component Description

NJEC0513

The valve timing control system is utilized to control intake valve opening and closing timing. Engine coolant temperature signals, engine speed and throttle position are used to determine intake valve timing.

The intake camshaft sprocket position is regulated by oil pressure controlled by the intake valve timing control.

When ECM sends ON signal to intake valve timing control solenoid valve, oil pressure is transmitted to camshaft sprocket. Then, intake side camshaft is advanced.

Operation

NJEC0514

Engine operating condition				Intake valve timing control solenoid valve	Intake valve opening and closing time	Valve overlap
Engine coolant temperature	Engine speed	B/FUEL SCHDL	Neutral switch			
20°C (68°F) - 70°C (158°F)	1,150 - 4,600 rpm	Above 3 msec	OFF	ON	Advance	Increased
Above 70°C (158°F)		Above 7 msec				
Conditions other than those above				OFF	Normal	Normal

CONSULT-II Reference Value in Data Monitor Mode

NJEC0515

MONITOR ITEM	CONDITION	SPECIFICATION
INT/V SOL-B1	<ul style="list-style-type: none"> Engine: After warming up Lift up drive wheels and suitable gear position 	Idle OFF
	Revsing engine from 2,000 to 3,000 rpm	ON

ECM Terminals and Reference Value

NJEC0516

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
1	Y/R	Intake valve timing control solenoid valve	[Engine is running] <ul style="list-style-type: none"> Idle speed 	BATTERY VOLTAGE (11 - 14V)

On Board Diagnosis Logic

NJEC0517

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P1111 1111	<ul style="list-style-type: none"> An improper voltage signal is entered to ECM through intake valve timing control solenoid valve. 	<ul style="list-style-type: none"> Harness or connectors (The intake valve timing control solenoid valve circuit is open or shorted.) Intake valve timing control solenoid valve

DTC P1111 INTAKE VALVE TIMING CONTROL SOLENOID VALVE

QG

DTC Confirmation Procedure

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm
COOLAN TEMP/S	XXX °C
THRTL POS SEN	XXX V
B/FUEL SCHDL	XXX msec
INT/V SOL-BL	OFF

SEF608Y

DTC Confirmation Procedure

NJEC0518

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 9 seconds before conducting the next test.

☐ With CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Wait at least 5 seconds.
- 4) If 1st trip DTC is detected, go to "DIAGNOSTIC PROCEDURE", EC-332.

☒ Without CONSULT-II

- 1) Turn ignition switch "ON", wait at least 5 seconds.
- 2) Perform "Diagnostic Test Mode II" (Self-diagnostic results), EC-72.
- 3) If 1st trip DTC is detected, go to "DIAGNOSTIC PROCEDURE", EC-332.

DTC P1111 INTAKE VALVE TIMING CONTROL SOLENOID VALVE


QG

Wiring Diagram



Wiring Diagram

NJEC0519

EC-IVC-01

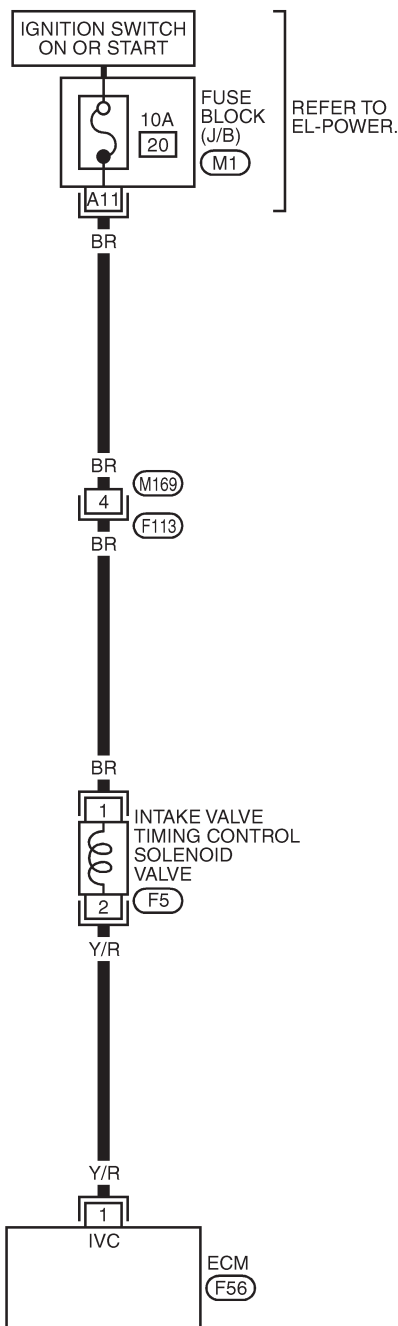


- : DETECTABLE LINE FOR DTC
- : NON-DETECTABLE LINE FOR DTC
- L** : LHD MODELS
- R** : RHD MODELS



REFER TO THE FOLLOWING.



(M1) - FUSE BLOCK-JUNCTION BOX (J/B)

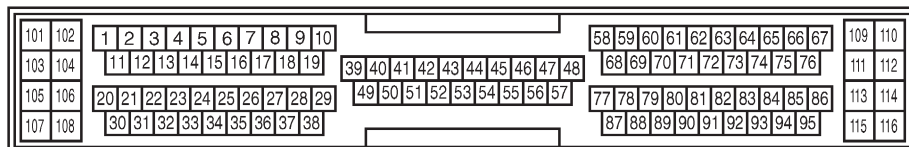

YEC007A

Diagnostic Procedure

NJEC0520

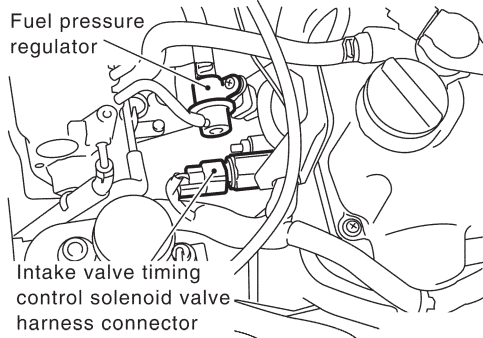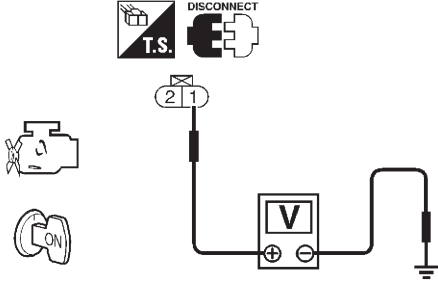1	CHECK POWER SUPPLY		
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect intake valve timing control solenoid valve harness connector. 			
			
SEF149X			
<ol style="list-style-type: none"> 3. Turn ignition switch "ON". 4. Check voltage between terminal 1 and engine ground with CONSULT-II or tester. 			
			
SEF619X			
OK or NG			
OK	▶	GO TO 3.	
NG	▶	GO TO 2.	

2	DETECT MALFUNCTIONING PART		
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M169, F113 ● 10A fuse ● Harness for open or short between valve timing control solenoid valve and fuse 			
▶ Repair harness or connectors.			

3	CHECK OUTPUT SIGNAL CIRCUIT		
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 1 and intake valve timing control solenoid valve harness connector terminal 2. Refer to wiring diagram. Continuity should exist. 4. Also check harness for short to ground and short to power. 			
OK or NG			
OK	▶	GO TO 4.	
NG	▶	Repair open circuit or short to ground to short to power or connectors.	


DTC P1111 INTAKE VALVE TIMING CONTROL SOLENOID VALVE

QG

Diagnostic Procedure (Cont'd)

4	CHECK VALVE TIMING CONTROL SOLENOID VALVE
Refer to "Component Inspection", EC-333.	
OK or NG	
OK	▶ GO TO 5.
NG	▶ Replace valve timing control solenoid valve.

5	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.	
	▶ INSPECTION END

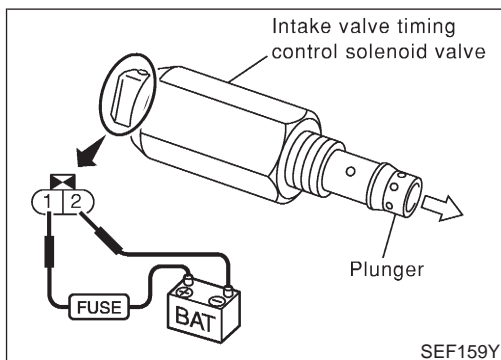

Component Inspection

INTAKE VALVE TIMING CONTROL SOLENOID VALVE

NJEC0521
NJEC0521S01

1. Check oil passage visually for any metal debris.
2. Supply intake valve timing control solenoid valve terminals with battery voltage.
3. Make sure that inside plunger protrudes.
If NG, replace intake valve timing control solenoid valve.

System Description

NJEC0433

COOLING FAN CONTROL

NJEC0433S01

Sensor	Input Signal to ECM	ECM function	Actuator
Vehicle speed sensor	Vehicle speed	Cooling fan control	Cooling fan relay(s)
Engine coolant temperature sensor	Engine coolant temperature		
Air conditioner switch	Air conditioner "ON" signal		
Ignition switch	Start signal		
Refrigerant pressure sensor	Refrigerant pressure		

The ECM controls the cooling fan corresponding to the vehicle speed, engine coolant temperature, refrigerant pressure, and air conditioner ON signal. The control system has ON-OFF control.

OPERATION

NJEC0433S02

Engine coolant temperatures at which the cooling fan turns "ON" are indicated in the Table below.

		Vehicle speed km/h (MPH)		
Air conditioner switch	High pressure of refrigerant kPa (bar, kg/cm ² , psi)	Less than 50 (30)	50 - 80 (30 - 50)	More than 80 (50)
ON	More than 1,680 (16.8, 17.14, 244)	Always	Always	More than 95°C (203°F)
	Less than 1,680 (16.8, 17.14, 244)	Always	More than 95°C (203°F)	More than 95°C (203°F)
OFF		More than 100°C (212°F)	More than 95°C (203°F)	More than 95°C (203°F)

CONSULT-II Reference Value in Data Monitor Mode

NJEC0486

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
AIR COND SIG	● Engine: After warming up, idle the engine	Air conditioner switch: OFF OFF
		Air conditioner switch: ON (Compressor operates) ON
COOLING FAN	● After warming up engine, idle the engine.	Engine coolant temperature is less than 100°C (212°F) OFF
	● Air conditioner switch: OFF	Engine coolant temperature is 100°C (212°F) or more ON

DTC P1217 OVERHEAT (COOLING SYSTEM)

QG

ECM Terminals and Reference Value

ECM Terminals and Reference Value

=NJE0487

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
13	LG/R	Cooling fan relay	[Engine is running] ● Cooling fan is not operating	BATTERY VOLTAGE (11 - 14V)
			[Engine is running] ● Cooling fan is operating	0 - 0.6V
23	L/W	Air conditioner switch	[Engine is running] ● Both air conditioner switch and blower switch are "ON" (Compressor operates)	Approximately 0V
			[Engine is running] ● Air conditioner switch is "OFF"	BATTERY VOLTAGE (11 - 14V)

On Board Diagnosis Logic

NJE0572

If the cooling fan or another component in the cooling system malfunctions, engine coolant temperature will rise.


When the engine coolant temperature reaches an abnormally high temperature condition, a malfunction is indicated.

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P1217 1217	<ul style="list-style-type: none"> ● The engine coolant temperature is extraordinary high, even when the load is not heavy. 	<ul style="list-style-type: none"> ● Harness or connectors (The cooling fan circuit is open or shorted) ● Cooling fan ● Thermostat ● Improper ignition timing ● Engine coolant temperature sensor ● Blocked radiator ● Blocked front end (Improper fitting of nose mask) ● Crushed vehicle frontal area (Vehicle frontal is collided but not repaired) ● Blocked air passage by improper installation of front fog lamp or fog lamps. ● Improper mixture ratio of coolant ● Damaged bumper <p>For more information, refer to "MAIN 12 CAUSES OF OVERHEATING", EC-345.</p>

CAUTION:


When a malfunction is indicated, be sure to replace the coolant following the procedure in the LC-17, "Changing Engine Coolant". Also, replace the engine oil.

- 1) Fill radiator with coolant up to specified level with a filling speed of 2 liters per minute. Be sure to use coolant with the proper mixture ratio. Refer to MA-22, "Anti-freeze Coolant Mixture Ratio", "RECOMMENDED FLUIDS AND LUBRICANTS".
- 2) After refilling coolant, run engine to ensure that no water-flow noise is emitted.

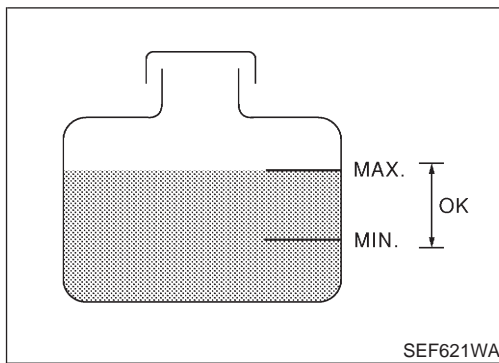

ACTIVE TEST	
COOLING FAN	OFF
MONITOR	
COOLANT TEMP/S	XXX °C

SEF646X

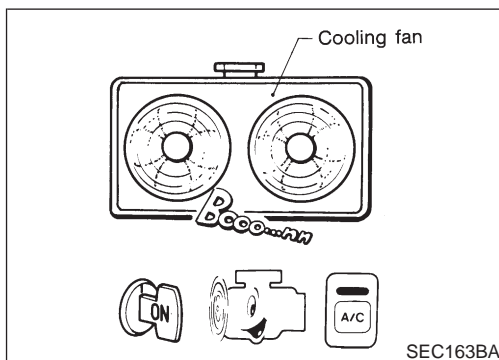

Overall Function Check

NJEC0489

Use this procedure to check the overall function of the cooling fan. During this check, a DTC might not be confirmed.

WARNING:

Never remove the radiator cap when the engine is hot. Serious burns could be caused by high pressure fluid escaping from the radiator.

Wrap a thick cloth around cap. Carefully remove the cap by turning it a quarter turn to allow built-up pressure to escape. Then turn the cap all the way off.

☑ With CONSULT-II

- 1) Check the coolant level and mixture ratio (using coolant tester) in the reservoir tank and radiator.
Allow engine to cool before checking coolant level and mixture ratio.
 - If the coolant level in the reservoir tank and/or radiator is below the proper range, skip the following steps and go to “Diagnostic Procedure”, EC-339.
 - If the coolant mixture ratio is out of the range of 45 to 55%, replace the coolant in the following procedure LC-17, “Changing Engine Coolant”.
- 2) Confirm whether customer filled the coolant or not. If customer filled the coolant, skip the following steps and go to “Diagnostic Procedure”, EC-339.
- 3) Turn ignition switch “ON”.
- 4) Perform “COOLING FAN” in “ACTIVE TEST” mode with CONSULT-II.
- 5) If the results are NG, go to “Diagnostic Procedure”, EC-339.

☒ Without CONSULT-II

- 1) Check the coolant level and mixture ratio (using coolant tester) in the reservoir tank and radiator.
Allow engine to cool before checking coolant level and mixture ratio.
 - If the coolant level in the reservoir tank and/or radiator is below the proper range, skip the following steps and go to “Diagnostic Procedure”, EC-339.
 - If the coolant mixture ratio is out of the range of 45 to 55%, replace the coolant in the following procedure LC-17, “Changing Engine Coolant”.
- 2) Confirm whether customer filled the coolant or not. If customer filled the coolant, skip the following steps and go to “Diagnostic Procedure”, EC-339.
- 3) Start engine.
Be careful not to overheat engine.
- 4) Set temperature control lever to full cold position.
- 5) Turn air conditioner switch “ON”.
- 6) Turn blower fan switch “ON”.
- 7) Run engine at idle for a few minutes with air conditioner operating.
Be careful not to overheat engine.
- 8) Make sure that cooling fan operates. Refer to “OPERATION” table for cooling fan, EC-334.
If NG, go to “Diagnostic Procedure”, EC-339.

DTC P1217 OVERHEAT (COOLING SYSTEM)

QG



Wiring Diagram

Wiring Diagram FOR EUROPE

NJEC0490


NJEC0490S03

EC-COOL/F-01

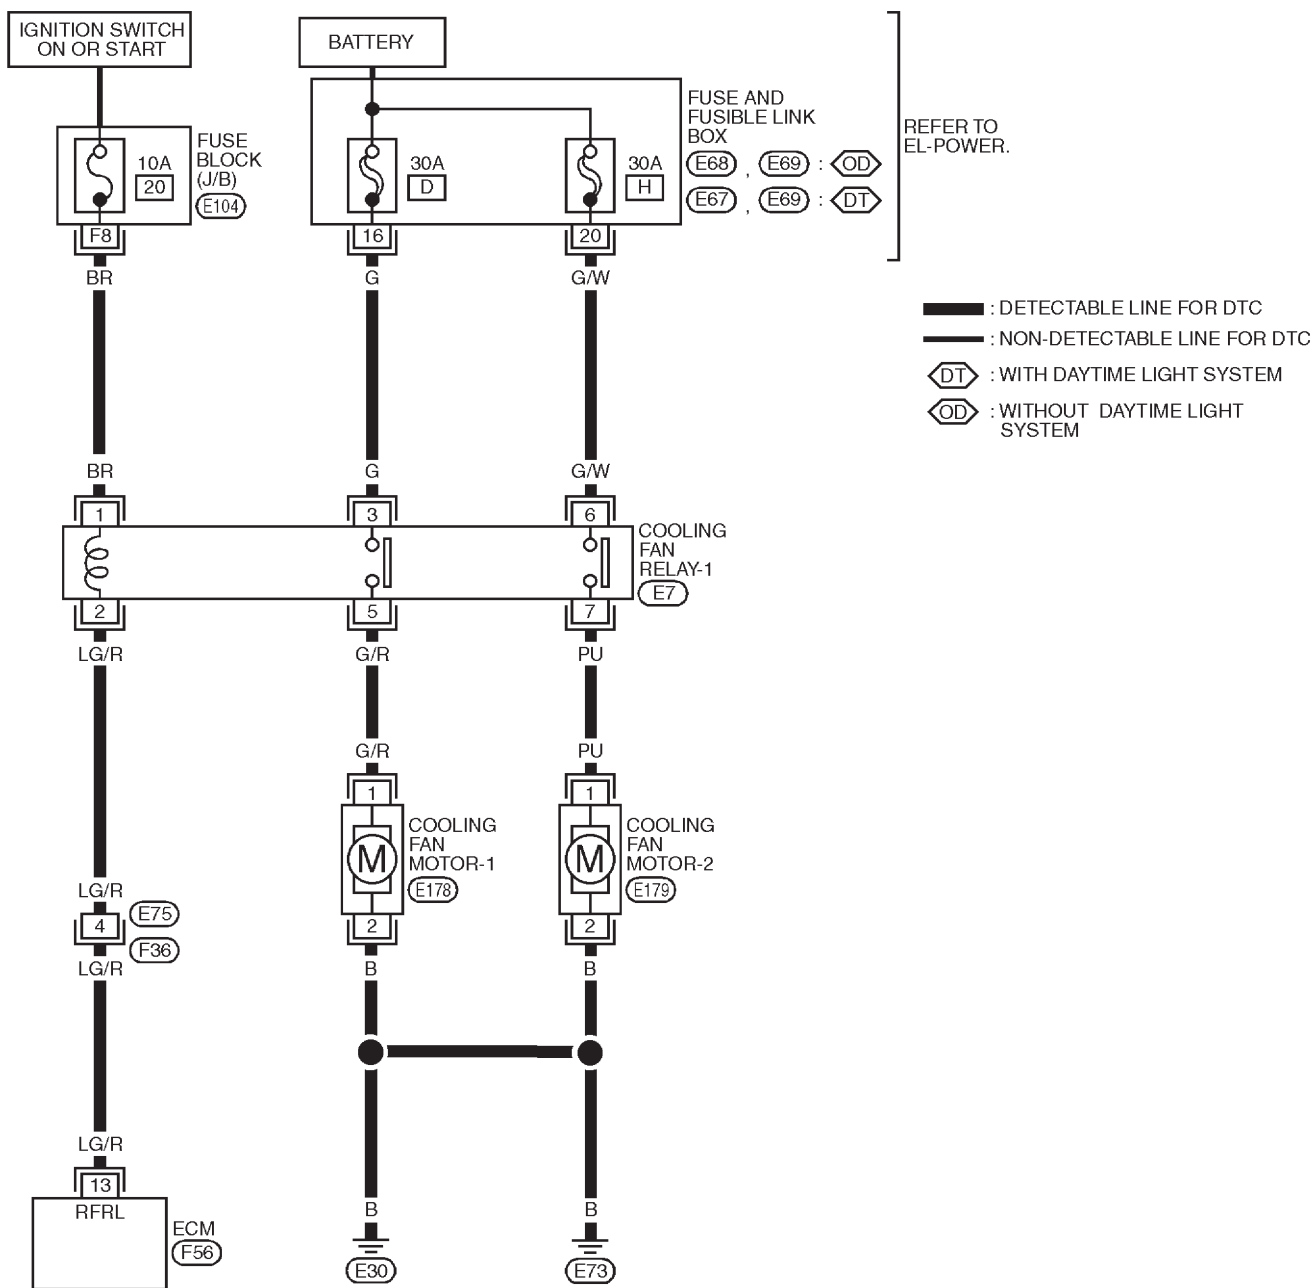

REFER TO THE FOLLOWING.

- (E104) - FUSE BLOCK-JUNCTION BOX (J/B)
- (E67), (E68), (E69) - FUSE AND FUSIBLE LINK BOX

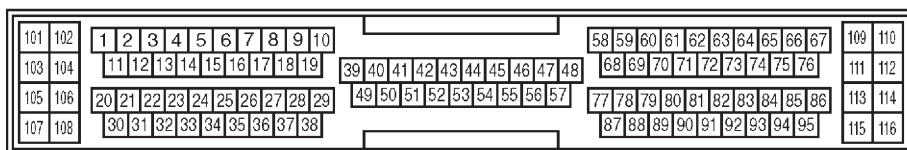

DTC P1217 OVERHEAT (COOLING SYSTEM)


QG

Wiring Diagram (Cont'd)

FOR AUSTRALIA AND SOUTH AFRICA MODELS


NJEC0490S04

EC-COOL/F-02

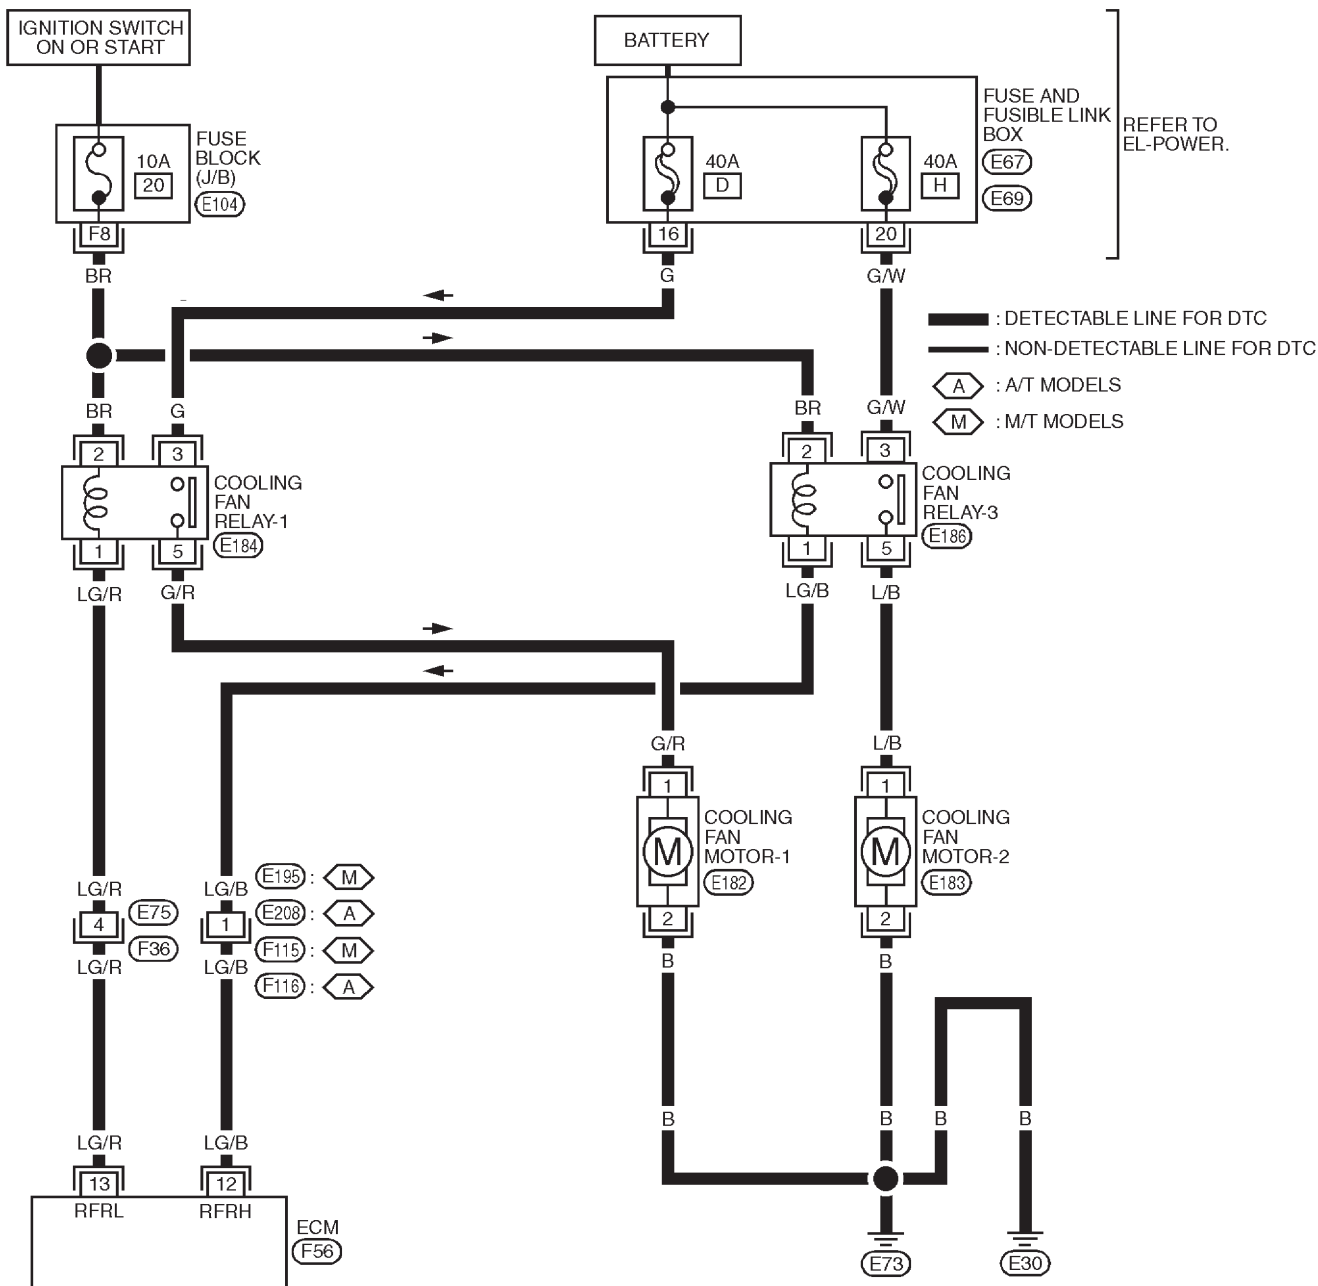

REFER TO THE FOLLOWING.

- (E104) - FUSE BLOCK-JUNCTION BOX (J/B)
- (E67) , (E69)
- FUSE AND FUSIBLE LINK BOX




101	102	1	2	3	4	5	6	7	8	9	10	58	59	60	61	62	63	64	65	66	67	109	110									
103	104	11	12	13	14	15	16	17	18	19	39	40	41	42	43	44	45	46	47	48	68	69	70	71	72	73	74	75	76	111	112	
105	106	20	21	22	23	24	25	26	27	28	29	49	50	51	52	53	54	55	56	57	77	78	79	80	81	82	83	84	85	86	113	114
107	108	30	31	32	33	34	35	36	37	38											87	88	89	90	91	92	93	94	95	115	116	



YEC047A

Diagnostic Procedure

NJEC0491

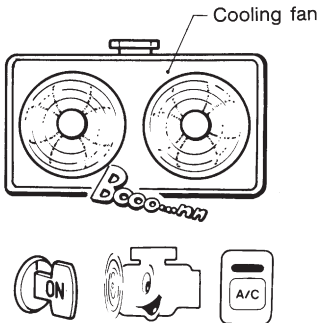




1	CHECK COOLING FAN OPERATION	
<p>1. Start engine and let it idle. 2. Set temperature lever at full cold position. 3. Turn air conditioner switch "ON". 4. Turn blower fan switch "ON". 5. Make sure that cooling fans-1 and -2 operate.</p> <div style="text-align: center;">  <p style="margin-top: 10px;">OK or NG</p> </div>		
SEC163BA		
OK	▶	GO TO 11.
NG	▶	GO TO 2.

2	CHECK AIR CONDITIONER OPERATION	
<p>Is air conditioner operating? (Check operation of compressor and blower motor.)</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 3.
NG	▶	Check for failure of air conditioner to operate. Refer to HA section.

DTC P1217 OVERHEAT (COOLING SYSTEM)

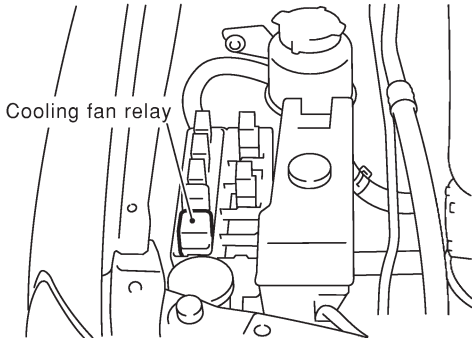QG

Diagnostic Procedure (Cont'd)


3	CHECK POWER SUPPLY
<p>1. Turn ignition switch "OFF". 2. Disconnect cooling fan relay (For Europe) or cooling fan relay-land-2 (For Australia).</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SEF628Y</p> <p>3. Turn ignition switch "ON". 4. Check voltage between terminals 1, 3, 6 (For Europe) or 2, 3 (For Australia) and ground with CONSULT-II or tester.</p> <div style="display: flex; justify-content: space-around; align-items: flex-start;"> <div style="text-align: center;">  <p>FOR AUSTRALIA</p> </div> <div style="text-align: center;">  <p>FOR EUROPE</p> </div> <div style="text-align: center;">  </div> </div> <div style="text-align: center; margin-top: 20px;">  <p style="margin-left: 150px;">Voltage: Battery voltage</p> <p style="margin-left: 150px;">OK or NG</p> </div> <p style="text-align: right;">YEC055A</p>	
OK	▶ GO TO 5.
NG	▶ GO TO 4.

4	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● 10A fuse ● 30A fusible link (For Europe) ● 40A fusible link (For Australia) ● Harness for open or short between cooling fan relay and fuse 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

DTC P1217 OVERHEAT (COOLING SYSTEM)

QG

Diagnostic Procedure (Cont'd)

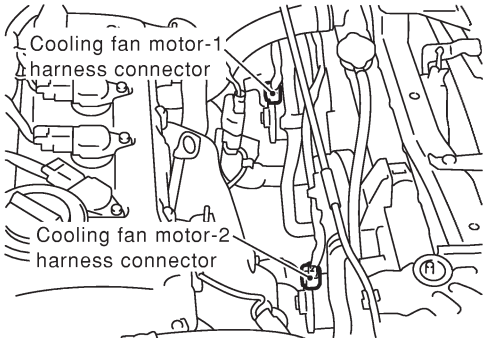5	CHECK GROUND CIRCUIT	
<p>1. Turn ignition switch "OFF".</p> <p>2. Disconnect cooling fan motor-1 harness connector and cooling fan motor-2 harness connector.</p>		
		
SEF609Y		
<p>3. Check harness continuity between relay terminal 5 and motor-1 terminal 2, motor-1 terminal 1 and body ground. Refer to wiring diagram. Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p>5. Check harness continuity between relay terminal 7 (For Europe) or 5 (For Australia) and motor-2 terminal 2, motor-2 terminal 1 and body ground. Refer to wiring diagram. Continuity should exist.</p> <p>6. Also check harness for short to ground and short to power.</p>		
OK or NG		
OK	▶	GO TO 6.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

6	CHECK OUTPUT SIGNAL CIRCUIT	
<p>1. Disconnect ECM harness connector.</p> <p>2. Check harness continuity between ECM terminal 13 and relay terminal 2. Refer to wiring diagram. (For Europe)</p> <p>3. Check harness continuity between ECM terminal 12 and relay-3 terminal 1. Refer to wiring diagram. (For Australia)</p> <p>4. Check harness continuity between ECM terminal 13 and relay-1 terminal 1. Refer to wiring diagram. (For Australia) Continuity should exist.</p> <p>5. Also check harness for short to ground and short to power.</p>		
OK or NG		
OK	▶	GO TO 8.
NG	▶	GO TO 7.

7	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E75, F36 ● Harness connectors E195, F115 (MT models for Australia) or E208, F116 (AT models for Australia) ● Harness for open or short between cooling fan relay and ECM 		
▶ Repair open circuit or short to ground or short to power in harness or connectors.		

8	CHECK COOLING FAN RELAY	
Refer to "Component Inspection", EC-345.		
OK or NG		
OK	▶	GO TO 9.
NG	▶	Replace cooling fan relay.


DTC P1217 OVERHEAT (COOLING SYSTEM)

QG

Diagnostic Procedure (Cont'd)

9	CHECK COOLING FAN MOTORS-1 AND -2
Refer to "Component Inspection", EC-345.	
OK or NG	
OK	▶ GO TO 10.
NG	▶ Replace cooling fan motors.


10	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.	
▶ INSPECTION END	

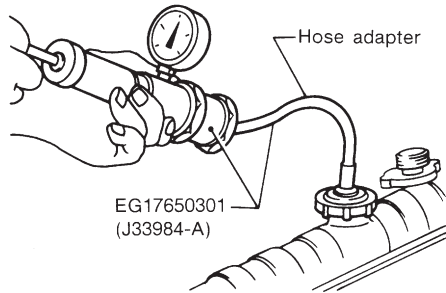11	CHECK COOLING SYSTEM FOR LEAK
Apply pressure to the cooling system with a tester, and check if the pressure drops. Testing pressure: 157 kPa (1.57 bar, 1.6 kg/cm², 23 psi) CAUTION: Higher than the specified pressure may cause radiator damage.	
 <p style="text-align: right;">SLC754A</p>	
Pressure should not drop.	
OK or NG	
OK	▶ GO TO 12.
NG	▶ Check the following for leak <ul style="list-style-type: none">● Hose● Radiator● Water pump Refer to LC-14, "Water Pump".


DTC P1217 OVERHEAT (COOLING SYSTEM)

QG

Diagnostic Procedure (Cont'd)

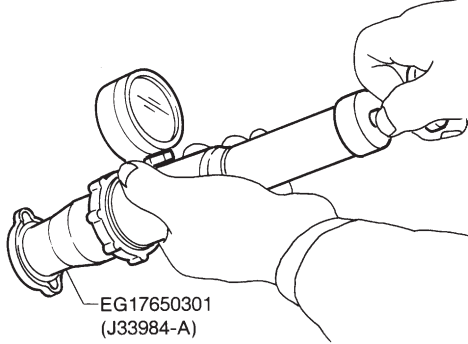12	CHECK RADIATOR CAP	
Apply pressure to cap with a tester.		
		
<p>Radiator cap relief pressure: 59 - 98 kPa (0.59 - 0.98 bar, 0.6 - 1.0 kg/cm², 9 - 14 psi)</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 13.
NG	▶	Replace radiator cap.

SLC755A

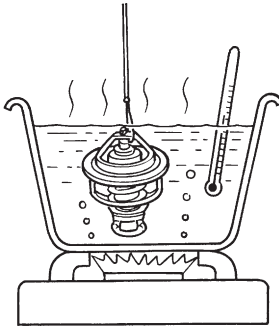13	CHECK THERMOSTAT	
<p>1. Check valve seating condition at normal room temperatures. It should seat tightly.</p> <p>2. Check valve opening temperature and valve lift.</p>		
		
<p>Valve opening temperature: 82°C (180°F) [standard]</p> <p>Valve lift: More than 8 mm/95°C (0.31 in/203°F)</p> <p>3. Check if valve is closed at 5°C (9°F) below valve opening temperature. For details, refer to LC section ("Thermostat").</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 14.
NG	▶	Replace thermostat

SLC343

14	CHECK ENGINE COOLANT TEMPERATURE SENSOR	
Refer to "COMPONENT INSPECTION", EC-167.		
OK or NG		
OK	▶	GO TO 15.
NG	▶	Replace engine coolant temperature sensor.

DTC P1217 OVERHEAT (COOLING SYSTEM)

QG

Diagnostic Procedure (Cont'd)

15	CHECK MAIN 12 CAUSES
If the cause cannot be isolated, go to "MAIN 12 CAUSES OF OVERHEATING", EC-345.	
▶	INSPECTION END

Main 12 Causes of Overheating

=NJE0492

Engine	Step	Inspection item	Equipment	Standard	Reference page
OFF	1	<ul style="list-style-type: none"> ● Blocked radiator ● Blocked condenser ● Blocked radiator grille ● Blocked bumper 	<ul style="list-style-type: none"> ● Visual 	No blocking	—
	2	<ul style="list-style-type: none"> ● Coolant mixture 	<ul style="list-style-type: none"> ● Coolant tester 	50 - 50% coolant mixture	See MA-20, "RECOMMENDED FLUIDS AND LUBRICANTS".
	3	<ul style="list-style-type: none"> ● Coolant level 	<ul style="list-style-type: none"> ● Visual 	Coolant up to MAX level in reservoir tank and radiator filler neck	See LC-17, "Changing Engine Coolant".
	4	<ul style="list-style-type: none"> ● Radiator cap 	<ul style="list-style-type: none"> ● Pressure tester 	59 - 98 kPa (0.59 - 0.98 bar, 0.6 - 1.0 kg/cm ² , 9 - 14 psi) (Limit)	See LC-10, "System Check".
ON*2	5	<ul style="list-style-type: none"> ● Coolant leaks 	<ul style="list-style-type: none"> ● Visual 	No leaks	See LC-10, "System Check".
ON*2	6	<ul style="list-style-type: none"> ● Thermostat 	<ul style="list-style-type: none"> ● Touch the upper and lower radiator hoses 	Both hoses should be hot	See LC-15, "Thermostat" and LC-16, "Radiator".
ON*1	7	<ul style="list-style-type: none"> ● Cooling fan 	<ul style="list-style-type: none"> ● CONSULT-II 	Operating	See "TROUBLE DIAGNOSIS FOR OVERHEAT" (EC-334).
OFF	8	<ul style="list-style-type: none"> ● Combustion gas leak 	<ul style="list-style-type: none"> ● Color checker chemical tester 4 Gas analyzer 	Negative	—
ON*3	9	<ul style="list-style-type: none"> ● Coolant temperature gauge 	<ul style="list-style-type: none"> ● Visual 	Gauge less than 3/4 when driving	—
		<ul style="list-style-type: none"> ● Coolant overflow to reservoir tank 	<ul style="list-style-type: none"> ● Visual 	No overflow during driving and idling	See LC-17, "Changing Engine Coolant".
OFF*4	10	<ul style="list-style-type: none"> ● Coolant return from reservoir tank to radiator 	<ul style="list-style-type: none"> ● Visual 	Should be initial level in reservoir tank	See LC-18, "Refilling Engine Coolant".
OFF	11	<ul style="list-style-type: none"> ● Cylinder head 	<ul style="list-style-type: none"> ● Straight gauge feeler gauge 	0.1 mm (0.004 in) Maximum distortion (warping)	See EM-36, "Inspection", "CYLINDER HEAD".
	12	<ul style="list-style-type: none"> ● Cylinder block and pistons 	<ul style="list-style-type: none"> ● Visual 	No scuffing on cylinder walls or piston	See EM-54, "Inspection", "CYLINDER BLOCK".


*1: Turn the ignition switch ON.

*2: Engine running at 3,000 rpm for 10 minutes.

*3: Drive at 90 km/h (55 MPH) for 30 minutes and then let idle for 10 minutes.

*4: After 60 minutes of cool down time.

For more information, refer to LC-23, "OVERHEATING CAUSE ANALYSIS".

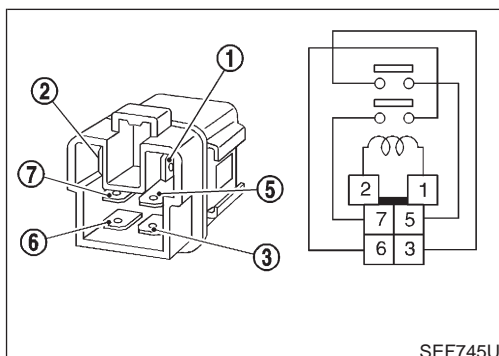

Component Inspection

COOLING FAN RELAY

NJE0493

NJE0493S01

Check continuity between terminals 3 and 5, 6 and 7.


Conditions	Continuity
12V direct current supply between terminals 1 and 2	Yes
No current supply	No

If NG, replace relay.

DTC P1217 OVERHEAT (COOLING SYSTEM)

QG

Component Inspection (Cont'd)

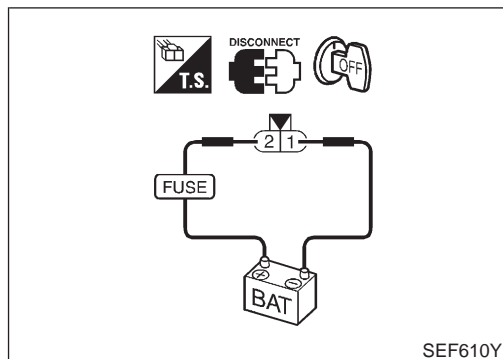

COOLING FAN MOTORS-1 AND -2

NJEC0493S02

1. Disconnect cooling fan motor harness connectors.
2. Supply cooling fan motor terminals with battery voltage and check operation.

	Terminals	
	(+)	(-)
Cooling fan motor	2	1


Cooling fan motor should operate.

If NG, replace cooling fan motor.

DTC P1401 EGR TEMPERATURE SENSOR (WHERE FITTED)

QG


Component Description

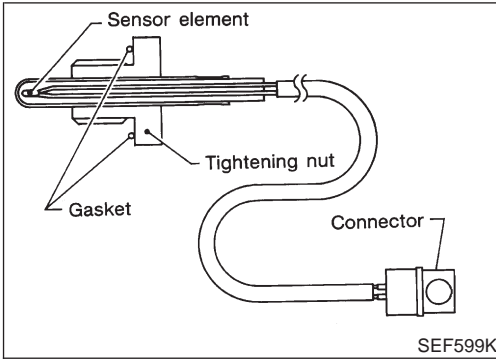

Component Description

NJEC0342

The EGR temperature sensor detects temperature changes in the EGR passageway. When the EGR volume control valve opens, hot exhaust gases flow, and the temperature in the passageway changes. The EGR temperature sensor is a thermistor that modifies a voltage signal sent from the ECM. This modified signal then returns to the ECM as an input signal. As the temperature increases, EGR temperature sensor resistance decreases. This sensor is not used to control the engine system. It is used only for the on board diagnosis.

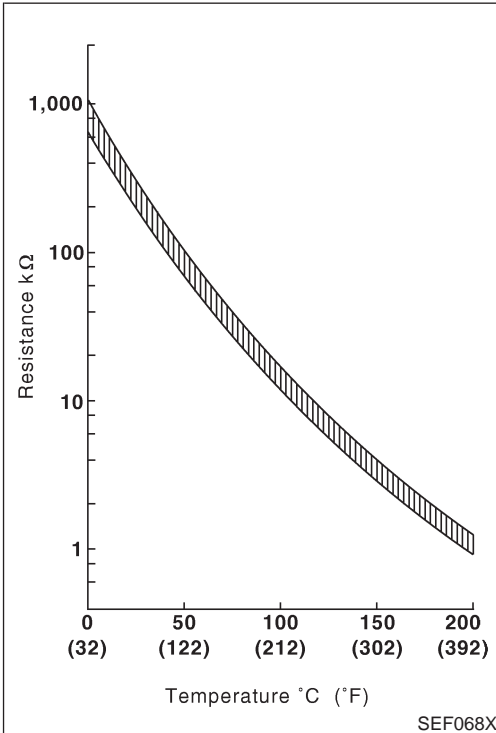

<Reference data>

EGR temperature °C (°F)	Voltage* V	Resistance MΩ
0 (32)	4.56	0.62 - 1.05
50 (122)	2.25	0.065 - 0.094
100 (212)	0.59	0.011 - 0.015

*: These data are reference values and are measured between ECM terminal 72 (EGR temperature sensor) and ground.

When EGR system is operating.

Voltage: 0 - 1.5V

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

On Board Diagnosis Logic

NJEC0343

DTC No.	Malfunction is detected when ...		Check Items (Possible Cause)
P1401 1401	A)	An excessively low voltage from the EGR temperature sensor is sent to ECM even when engine coolant temperature is low.	<ul style="list-style-type: none"> ● Harness or connectors (The EGR temperature sensor circuit is shorted.) ● EGR temperature sensor ● Malfunction of EGR function
	B)	An excessively high voltage from the EGR temperature sensor is sent to ECM even when engine coolant temperature is high.	<ul style="list-style-type: none"> ● Harness or connectors (The EGR temperature sensor circuit is open.) ● EGR temperature sensor ● Malfunction of EGR function

DTC Confirmation Procedure

NJEC0344

Perform "PROCEDURE FOR MALFUNCTION A" first. If 1st trip DTC cannot be confirmed, perform "PROCEDURE FOR MALFUNCTION B".

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 9 seconds before conducting the next test.

DTC P1401 EGR TEMPERATURE SENSOR (WHERE FITTED)

QG

DTC Confirmation Procedure (Cont'd)

4	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th colspan="2" style="text-align: center;">DATA MONITOR</th> </tr> <tr> <th style="width: 50%;">MONITOR</th> <th style="width: 50%;">NO DTC</th> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>COOLAN TEMP/S</td> <td>XXX °C</td> </tr> </table>	DATA MONITOR		MONITOR	NO DTC	ENG SPEED	XXX rpm	COOLAN TEMP/S	XXX °C
DATA MONITOR									
MONITOR	NO DTC								
ENG SPEED	XXX rpm								
COOLAN TEMP/S	XXX °C								

SEF174Y

PROCEDURE FOR MALFUNCTION A

=NJE0344S01

With CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Verify that "COOLAN TEMP/S" is less than 50°C (122°F).
If the engine coolant temperature is above the range, cool the engine down.
- 4) Start engine and let it idle for at least 5 seconds.
- 5) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-351.

With GST

Follow the procedure "With CONSULT-II" above.

9	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th colspan="2" style="text-align: center;">ACTIVE TEST</th> </tr> <tr> <td>EGR VOL CONT/V</td> <td>50 step</td> </tr> <tr> <th colspan="2" style="text-align: center;">MONITOR</th> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>EGR TEMP SEN</td> <td>XXX V</td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> </table>	ACTIVE TEST		EGR VOL CONT/V	50 step	MONITOR		ENG SPEED	XXX rpm	EGR TEMP SEN	XXX V								
ACTIVE TEST																			
EGR VOL CONT/V	50 step																		
MONITOR																			
ENG SPEED	XXX rpm																		
EGR TEMP SEN	XXX V																		

SEF200Y

PROCEDURE FOR MALFUNCTION B

NJE0344S02

CAUTION:

Always drive vehicle at a safe speed.

TESTING CONDITION:

Always perform the test at a temperature above -10°C (14°F).

With CONSULT-II

- 1) Start engine and warm it up to above 80°C (176°F).
- 2) Select "EGR VOL CONT/V" in "ACTIVE TEST" mode with CONSULT.
- 3) Hold engine speed at 1,500 rpm.
- 4) Touch "Qu" and set the EGR volume control valve opening to 50 step and check EGR TEMP SEN.
EGR TEMP SEN should decrease to less than 1.0V.
If the check result is NG, go to "DIAGNOSTIC PROCEDURE", EC-351.
If the check result is OK, go to the following step.

4	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th colspan="2" style="text-align: center;">DATA MONITOR</th> </tr> <tr> <th style="width: 50%;">MONITOR</th> <th style="width: 50%;">NO DTC</th> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>COOLAN TEMP/S</td> <td>XXX °C</td> </tr> <tr> <td>VHCL SPEED SE</td> <td>XXX km/h</td> </tr> <tr> <td>THRTL POS SEN</td> <td>XXX V</td> </tr> <tr> <td>B/FUEL SCHDL</td> <td>XXX msec</td> </tr> </table>	DATA MONITOR		MONITOR	NO DTC	ENG SPEED	XXX rpm	COOLAN TEMP/S	XXX °C	VHCL SPEED SE	XXX km/h	THRTL POS SEN	XXX V	B/FUEL SCHDL	XXX msec
DATA MONITOR															
MONITOR	NO DTC														
ENG SPEED	XXX rpm														
COOLAN TEMP/S	XXX °C														
VHCL SPEED SE	XXX km/h														
THRTL POS SEN	XXX V														
B/FUEL SCHDL	XXX msec														

SEF201Y

- 5) Turn ignition switch "OFF" and wait at least 9 seconds.
- 6) Start engine and maintain the following conditions for at least 5 consecutive seconds.

ENG SPEED	Above 2,400 rpm
VHCL SPEED SE	Above 90 km/h (56 MPH) or more
B/FUEL SCHDL	4.0 - 4.8 msec
Selector lever	Suitable position

- 7) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-351.

DTC P1401 EGR TEMPERATURE SENSOR (WHERE FITTED)

QG

DTC Confirmation Procedure (Cont'd)

With GST

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 9 seconds, then turn "ON".
- 3) Select "MODE 1" with GST and maintain the following conditions for at least 5 consecutive seconds.

Engine speed	Above 2,400 rpm
Vehicle speed	Above 90 km/h (56 MPH)
Selector lever	4th or 5th

- 4) Select "MODE 7" with GST
- 5) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-351.

DTC P1401 EGR TEMPERATURE SENSOR (WHERE FITTED)



QG

Wiring Diagram

Wiring Diagram

NJEC0346

EC-EGR/TS-01

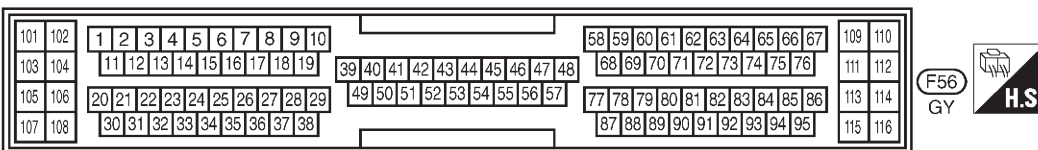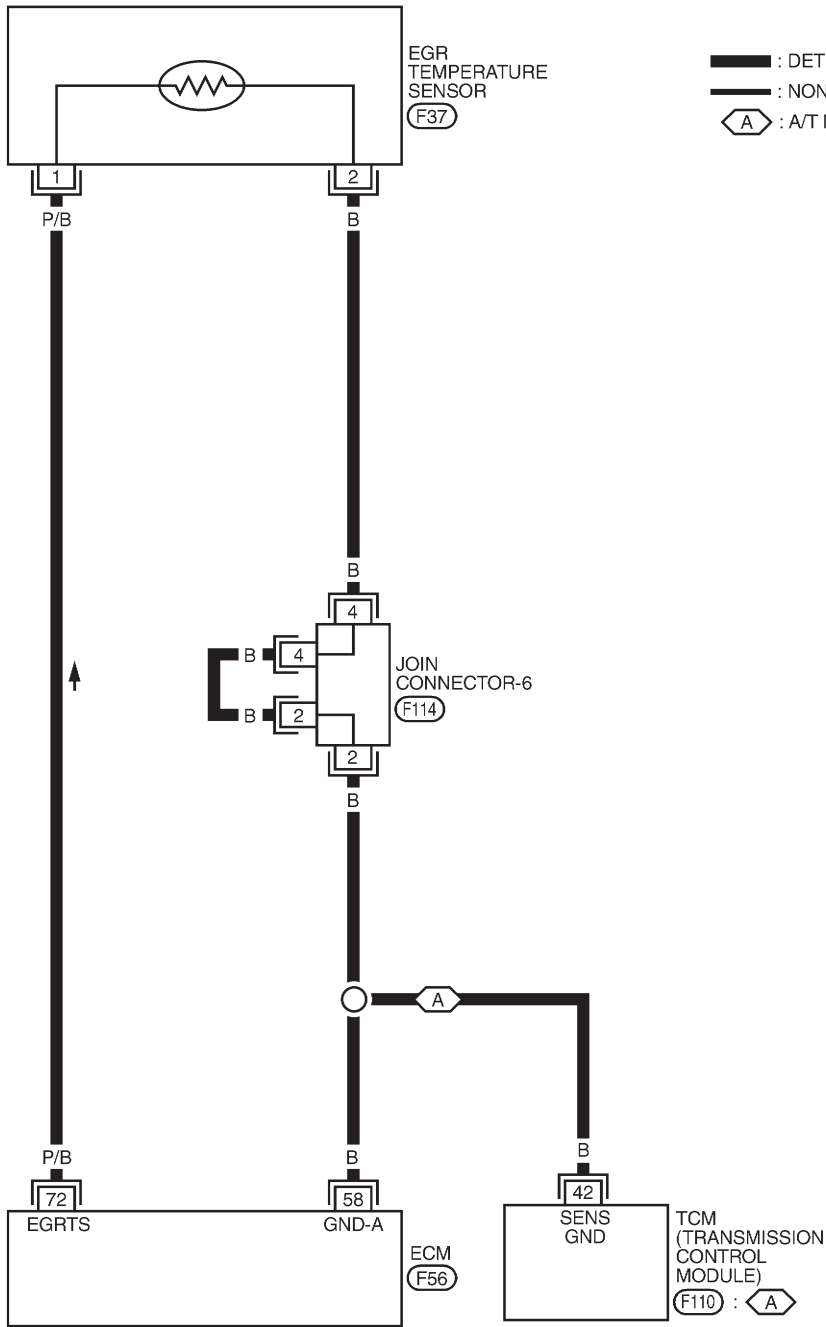

YEC983



DTC P1401 EGR TEMPERATURE SENSOR (WHERE FITTED)

QG

Diagnostic Procedure

Diagnostic Procedure

NJEC0347

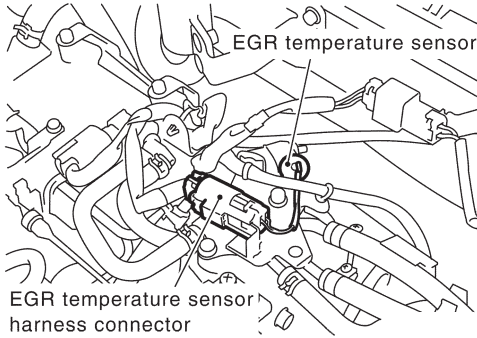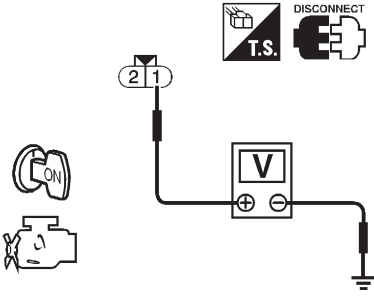1	CHECK POWER SUPPLY		
<p>1. Turn ignition switch "OFF". 2. Disconnect EGR temperature sensor harness connector.</p> <div style="text-align: center;">  <p>EGR temperature sensor EGR temperature sensor harness connector</p> </div> <p style="text-align: right;">SEF127X</p> <p>3. Turn ignition switch "ON". 4. Check voltage between terminal 1 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  <p>Voltage: Approximately 5V</p> <p>OK or NG</p> </div> <p style="text-align: right;">SEF945X</p>			
OK	▶	GO TO 2.	
NG	▶	Repair harness or connectors.	

2	CHECK GROUND CIRCUIT		
<p>1. Turn ignition switch "OFF". 2. Check harness continuity between EGR temperature sensor harness terminal 2 and engine ground. Refer to wiring diagram. Continuity should exist. 3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>			
OK	▶	GO TO 4.	
NG	▶	GO TO 3.	

3	DETECT MALFUNCTIONING PART		
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness for open or short between EGR temperature sensor and ECM ● Harness for open or short between TCM (Transmission Control Module) and ECM ● Joint connector-6 			
	▶	Repair open circuit or short to ground or short to power in harness or connector.	

DTC P1401 EGR TEMPERATURE SENSOR (WHERE FITTED)


QG

Diagnostic Procedure (Cont'd)

4	CHECK EGR TEMPERATURE SENSOR	
Refer to "Component Inspection", EC-352.		
OK or NG		
OK	▶	GO TO 5.
NG	▶	Replace EGR temperature sensor.

5	CHECK EGR VOLUME CONTROL VALVE	
Refer to "Component Inspection", EC-359.		
OK or NG		
OK	▶	GO TO 6.
NG	▶	Replace EGR volume control valve.

6	CHECK INTERMITTENT INCIDENT	
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.		
▶		INSPECTION END

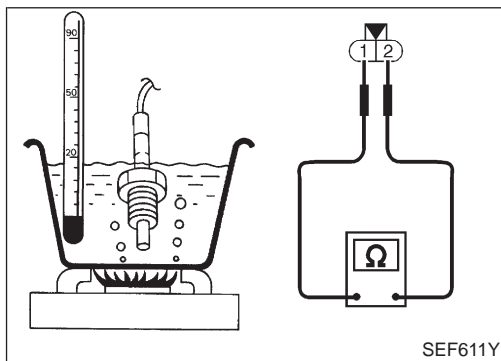

SEF611Y

Component Inspection EGR TEMPERATURE SENSOR


NJEC0348

NJEC0348S01

Check resistance change and resistance value.
<Reference data>

EGR temperature °C (°F)	Voltage V	Resistance MΩ
0 (32)	4.56	0.62 - 1.05
50 (122)	2.25	0.065 - 0.094
100 (212)	0.59	0.011 - 0.015

If NG, replace EGR temperature sensor.

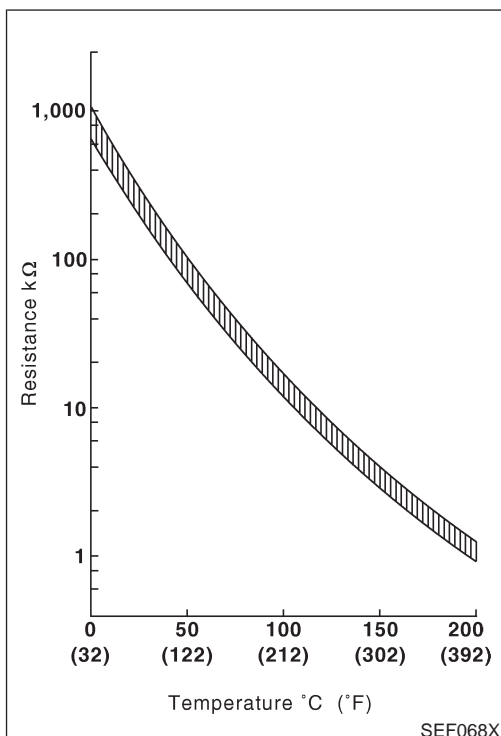

SEF068X

DTC P1402 EGR FUNCTION (OPEN) (WHERE FITTED)

QG

Description

Description SYSTEM DESCRIPTION


NJEC0349

NJEC0349S01

Sensor	Input Signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS)	Engine speed	EGR volume control	EGR volume control valve
Camshaft position sensor (PHASE)	Engine speed and cylinder number		
Mass air flow sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Ignition switch	Start signal		
Throttle position sensor	Throttle position		
Vehicle speed sensor	Vehicle speed		
Battery	Battery voltage		

This system controls flow rate of EGR led from exhaust manifold to intake manifold. The opening of the EGR by-pass passage in the EGR volume control valve changes to control the flow rate. A built-in step motor moves the valve in steps corresponding to the ECM output pulses. The opening of the valve varies for optimum engine control. The optimum value stored in the ECM is determined by considering various engine conditions. The EGR volume control valve remains close under the following conditions.

- Extremely light load engine operation
- Mass air flow sensor malfunction
- Engine idling
- Low engine coolant temperature
- Excessively high engine coolant temperature
- High-speed engine operation
- Wide open throttle
- Low battery voltage
- Engine starting

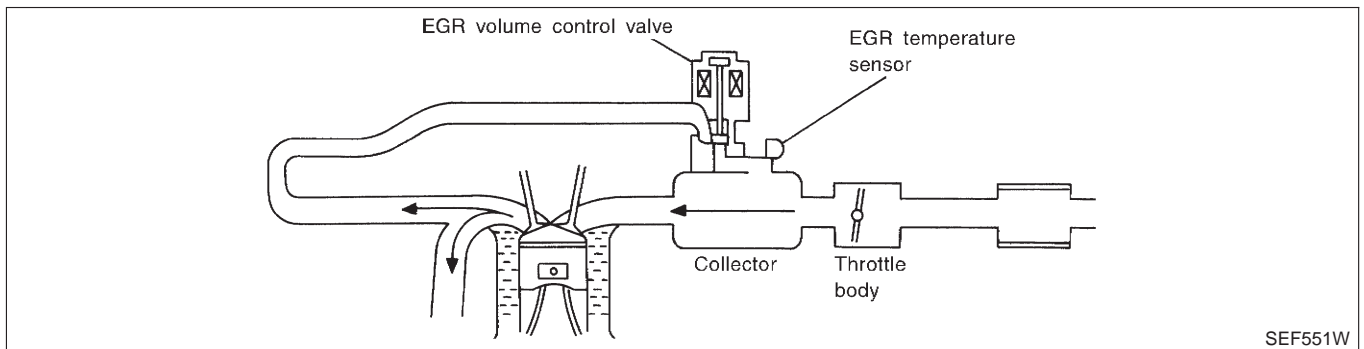


SEF551W

DTC P1402 EGR FUNCTION (OPEN) (WHERE FITTED)

QG

Description (Cont'd)

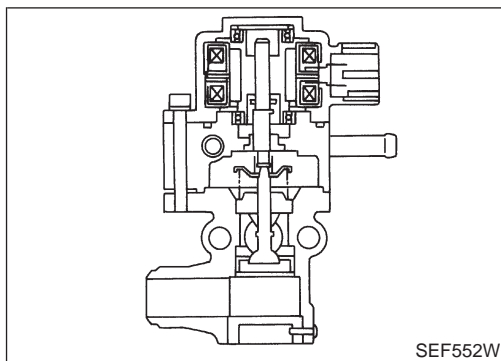

COMPONENT DESCRIPTION

EGR Volume Control Valve

NJEC0349S02

NJEC0349S0201

The EGR volume control valve uses a step motor to control the flow rate of EGR from exhaust manifold. This motor has four winding phases. It operates according to the output pulse signal of the ECM. Two windings are turned ON and OFF in sequence. Each time an ON pulse is issued, the valve opens or closes, changing the flow rate. When no change in the flow rate is needed, the ECM does not issue the pulse signal. A certain voltage signal is issued so that the valve remains at that particular opening.

CONSULT-II Reference Value in Data Monitor Mode

NJEC0539

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
EGR TEMP SEN	<ul style="list-style-type: none"> Engine: After warming up 	Less than 4.5V
EGR VOL CON/V	<ul style="list-style-type: none"> Engine: After warming up Air conditioner switch: "OFF" Shift lever: "N" No-load Idle	0 step
	Revving engine up to 3,000 rpm quickly	10 - 55 step

ECM Terminals and Reference Value


NJEC0540

Specification data are reference values, and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
8 9 17 18	SB W/B R/Y BR/R	EGR volume control valve	[Engine is running.] <ul style="list-style-type: none"> Warm-up condition Idle speed 	0 - 14V
58	B	Sensor's ground	[Engine is running.] <ul style="list-style-type: none"> Warm-up condition Idle speed 	0V
72	P/B	EGR temperature sensor	[Engine is running.] <ul style="list-style-type: none"> Warm-up condition Idle speed 	Less than 4.5V
			[Engine is running.] <ul style="list-style-type: none"> Warm-up condition EGR system is operating. 	0 - 1.0V

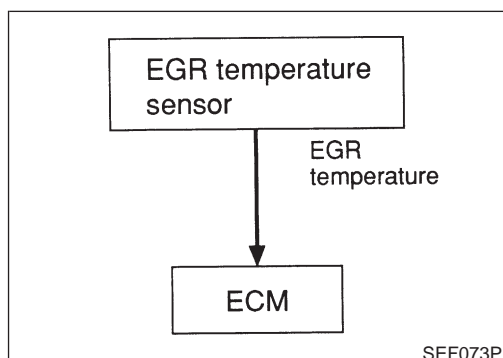

On Board Diagnosis Logic

NJEC0350

If EGR temperature sensor detects EGR flow under the condition that does not call for EGR, a high-flow malfunction is diagnosed.

NOTE:

Diagnosis for this DTC will occur when engine coolant temperature is below 50 to 60°C (122 to 140°F). Therefore, it will be better to turn ignition switch "ON" (start engine) at the engine coolant temperature below 30°C (86°F) when starting DTC confirmation procedure.

DTC P1402 EGR FUNCTION (OPEN) (WHERE FITTED)

QG

On Board Diagnosis Logic (Cont'd)

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P1402 1402	<ul style="list-style-type: none"> EGR flow is detected under conditions that do not call for EGR. 	<ul style="list-style-type: none"> Harness or connectors (The valve circuit is open or shorted.) EGR volume control valve leaking or stuck open EGR temperature sensor

DATA MONITOR	
MONITOR	NO DTC
COOLANT TEMP/S	XXX °C
EGR TEMP SEN	XXX V

SEF202Y

EGR SYSTEM P1402	
OUT OF CONDITION	
MONITOR	
ENG SPEED	XXX rpm
B/FUEL SCHDL	XXX msec
COOLANT TEMP/S	XXX °C
VHCL SPEED SE	XXX km/h

SEF851Y

EGR SYSTEM P1402	
TESTING	
MONITOR	
ENG SPEED	XXX rpm
B/FUEL SCHDL	XXX msec
COOLANT TEMP/S	XXX °C
VHCL SPEED SE	XXX km/h

SEF852Y

EGR SYSTEM P1402	
COMPLETED	

SEF236Y

DTC Confirmation Procedure

NJEC0351

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 9 seconds before conducting the next test.

TESTING CONDITION:

- Always perform at a temperature above -10°C (14°F).
- Engine coolant temperature and EGR temperature must be verified in "DATA MONITOR" mode with CONSULT-II before starting DTC WORK SUPPORT test. If it is out of range below, the test cannot be conducted.

COOLAN TEMP/S: -10 to 40°C (14 to 104°F)*

EGR TEMP SEN: Less than 4.8V

If the values are out of the ranges indicated above, park the vehicle in a cool place and allow the engine temperature to stabilize. Do not attempt to reduce the engine coolant or EGR temperature with a fan or means other than ambient air. Doing so may produce an inaccurate diagnostic result.

*: Although CONSULT-II screen displays "-10 to 40°C (14 to 104°F)" as a range of engine coolant temperature, ignore it.

With CONSULT-II

- Turn ignition switch "OFF" and wait at least 9 seconds, then turn ignition switch "ON".
- Select "EGR SYSTEM P1402" of "EGR SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT-II.
- Touch "START". Follow instruction of CONSULT-II.
- Start engine and let it idle until "TESTING" on CONSULT-II screen is turned to "COMPLETED". (It will take 45 seconds or more.)


If "TESTING" is not displayed after 5 minutes, turn ignition "OFF" and cool the engine coolant temperature to the range of -10 to 40°C (14 to 104°F). Retry from step 1.

- Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "Diagnostic Procedure", EC-358.

DTC P1402 EGR FUNCTION (OPEN) (WHERE FITTED)

QG

DTC Confirmation Procedure (Cont'd)

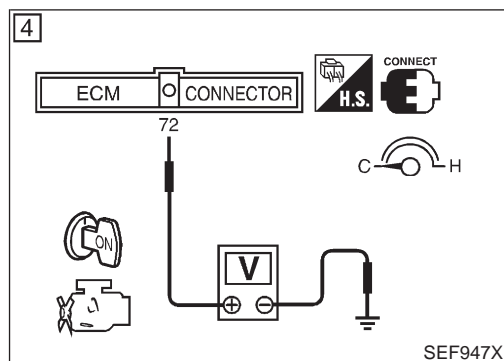

With GST



- 1) Turn ignition switch "ON" and select "MODE 1" with GST.
 - 2) Check that engine coolant temperature is within the range of -10 to 40°C (14 to 104°F).
 - 3) Check that voltage between ECM terminal 72 (EGR temperature sensor signal) and ground is less than 4.8V .
 - 4) Start engine and let it idle for at least 45 seconds.
 - 5) Stop engine.
 - 6) Perform from step 1 to 4.
 - 7) Select "MODE 3" with GST.
 - 8) If DTC is detected, go to "Diagnostic Procedure", EC-358.
- **When using GST, "DTC Confirmation Procedure" should be performed twice as much as when using CONSULT-II because GST cannot display MODE 7 (1st trip DTC) concerning this diagnosis. Therefore, using CONSULT-II is recommended.**

DTC P1402 EGR FUNCTION (OPEN) (WHERE FITTED)

NJEC0352

Wiring Diagram

EC-EGRC1-01

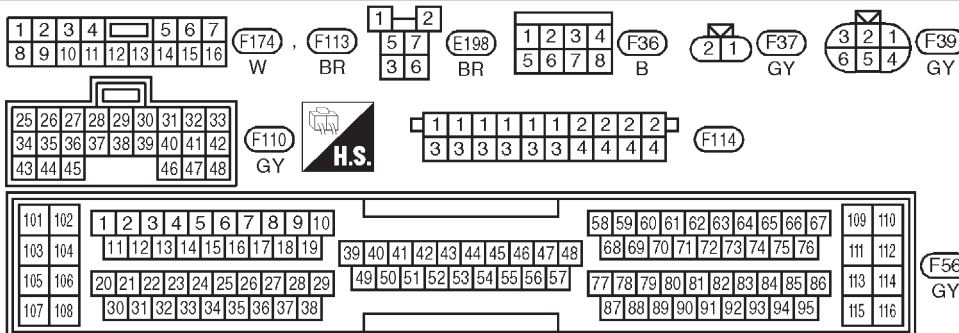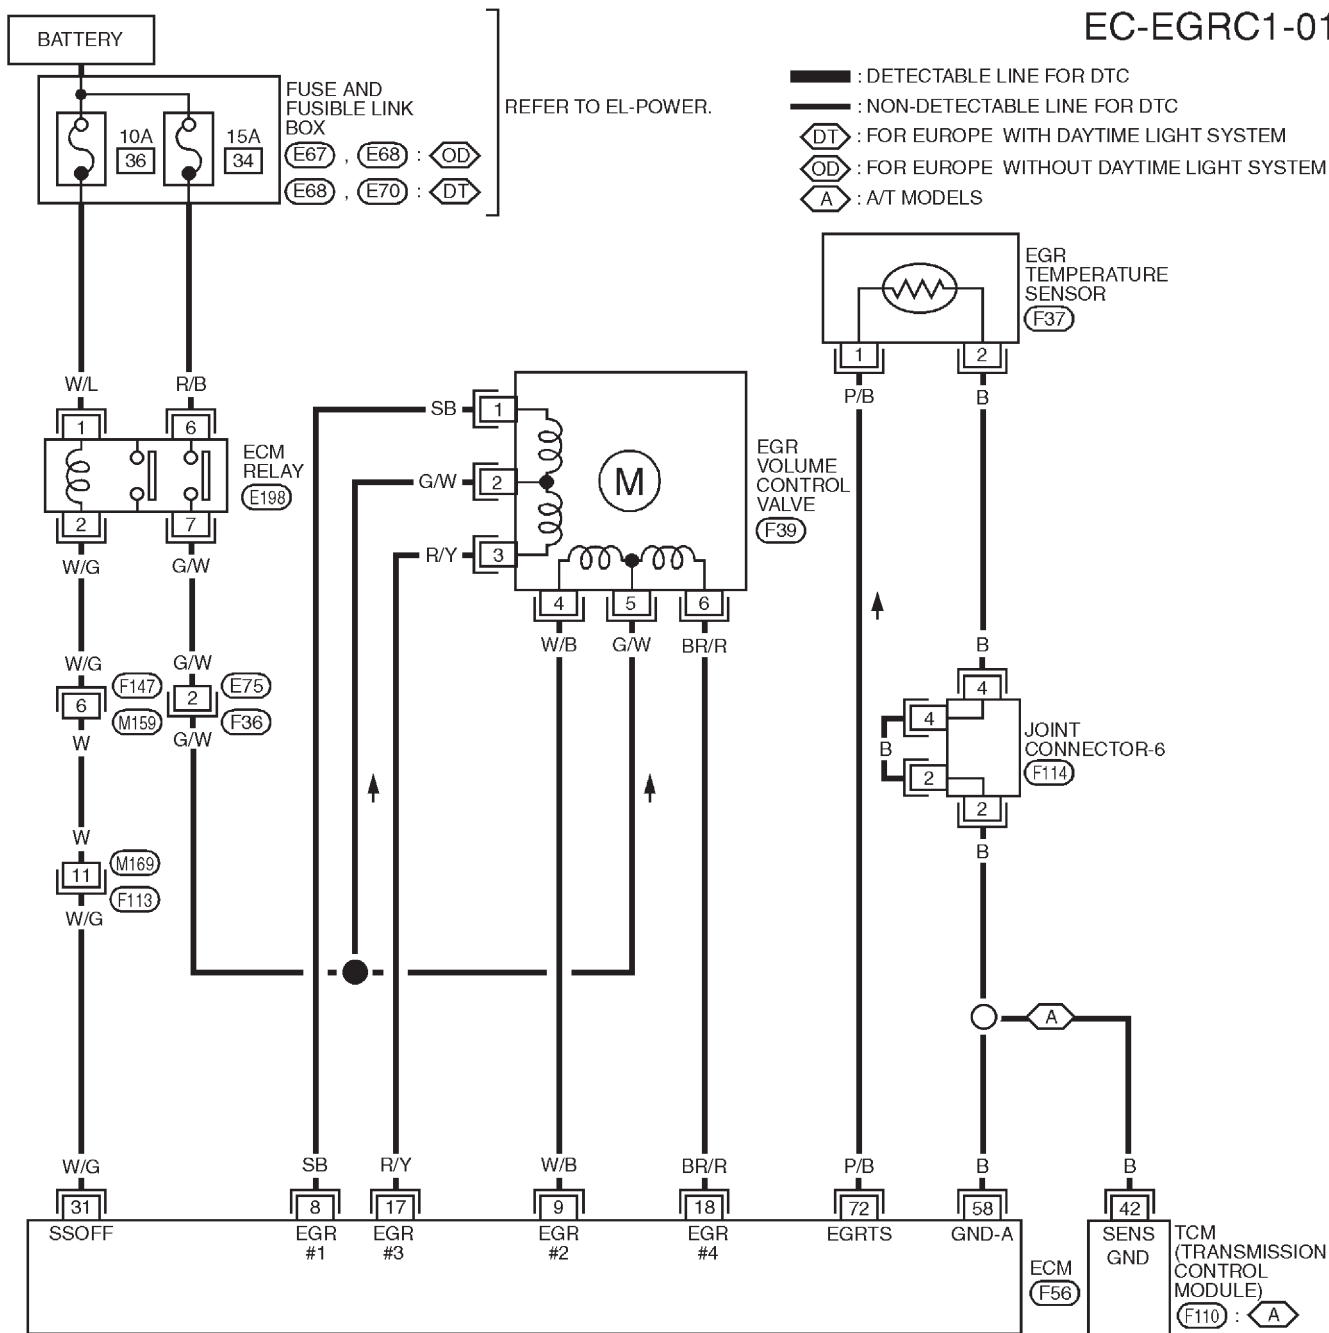

REFER TO THE FOLLOWING.
E67 , E68 , E70
 - FUSE AND FUSIBLE LINK BOX

YEC975


DTC P1402 EGR FUNCTION (OPEN) (WHERE FITTED)

QG

Diagnostic Procedure

Diagnostic Procedure

NJE0353

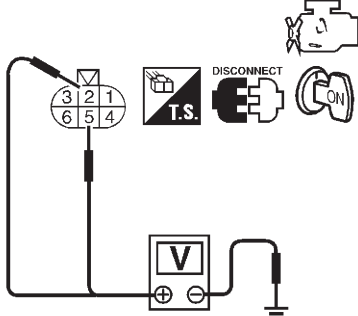1	CHECK POWER SUPPLY	
<p>1. Disconnect EGR volume control valve harness connector. 2. Turn ignition switch "ON". 3. Check voltage between terminals 2, 5 and ground with CONSULT-II or tester.</p>		
 <p style="text-align: right;">Voltage: Battery voltage</p>		
SEF327X		
OK or NG		
OK	▶	GO TO 3.
NG	▶	GO TO 2.

2	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E75, F36 ● Harness for open or short between EGR volume control valve and ECM relay 		
▶		Repair harness or connectors.

3	CHECK OUTPUT SIGNAL CIRCUIT	
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 8 and terminal 1, ECM terminal 9 and terminal 4, ECM terminal 17 and terminal 3, ECM terminal 18 and terminal 6. Refer to wiring diagram. Continuity should exist. If OK, check harness for short to ground and short to power.</p>		
OK or NG		
OK	▶	GO TO 4.
NG	▶	Repair open circuit, short to ground or short to power in harness connectors.

4	CHECK EGR TEMPERATURE SENSOR	
<p>Refer to "COMPONENT INSPECTION", EC-359.</p>		
OK or NG		
OK	▶	GO TO 5.
NG	▶	Replace EGR temperature sensor.


DTC P1402 EGR FUNCTION (OPEN) (WHERE FITTED)

QG

Diagnostic Procedure (Cont'd)

5	CHECK EGR VOLUME CONTROL VALVE	
Refer to "COMPONENT INSPECTION", EC-359.		
OK or NG		
OK	▶	GO TO 6.
NG	▶	Replace EGR volume control valve.

6	CHECK INTERMITTENT INCIDENT	
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.		
▶		INSPECTION END

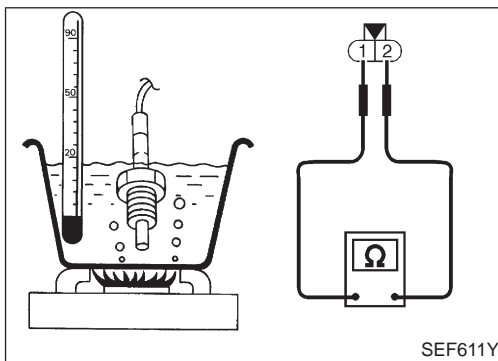

Component Inspection EGR TEMPERATURE SENSOR


NJEC0354

NJEC0354S01

Check resistance change and resistance value.
<Reference data>

EGR temperature °C (°F)	Voltage V	Resistance MΩ
0 (32)	4.56	0.62 - 1.05
50 (122)	2.25	0.065 - 0.094
100 (212)	0.59	0.011 - 0.015


If NG, replace EGR temperature sensor.

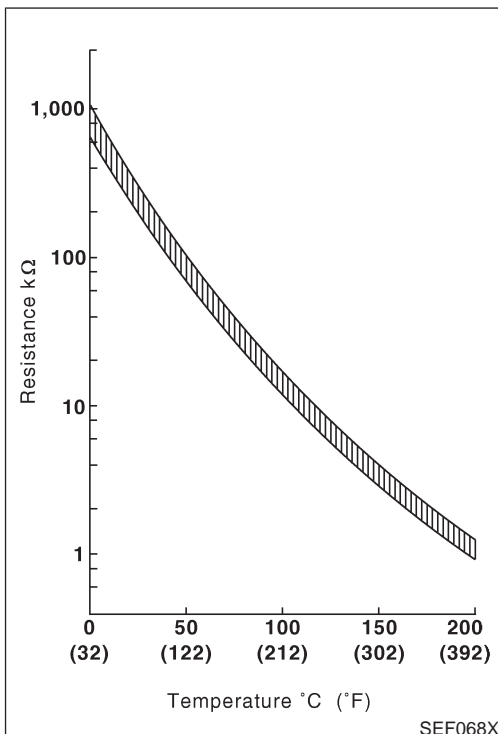

DTC P1402 EGR FUNCTION (OPEN) (WHERE FITTED)

QG

Component Inspection (Cont'd)

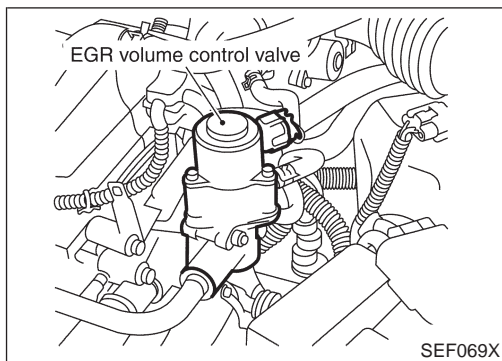

EGR VOLUME CONTROL VALVE

NJEC0354S04

With CONSULT-II

- 1) Disconnect EGR volume control valve harness connector.
- 2) Check resistance between the following terminals.
terminal 2 and terminals 1, 3
terminal 5 and terminals 4, 6

Temperature °C (°F)	Resistance Ω
20 (68)	20 - 24


- 3) Reconnect EGR volume control valve harness connector.
- 4) Remove EGR volume control valve from cylinder head.
(The EGR volume control valve harness connector should remain connected.)
- 5) Turn ignition switch "ON".
- 6) Perform "EGR VOL CONT/V" in "ACTIVE TEST" mode with CONSULT-II. Check that EGR volume control valve shaft moves smoothly forward and backward according to the valve opening.
If NG, replace the EGR volume control valve.

Without CONSULT-II

- 1) Disconnect EGR volume control valve harness connector.
- 2) Check resistance between the following terminals.
terminal 2 and terminals 1, 3
terminal 5 and terminals 4, 6


Temperature °C (°F)	Resistance Ω
20 (68)	20 - 24

- 3) Turn ignition switch "ON" and "OFF". Check that EGR volume control valve shaft moves smoothly forward and backward according to the ignition switch position.
If NG, replace the EGR volume control valve.

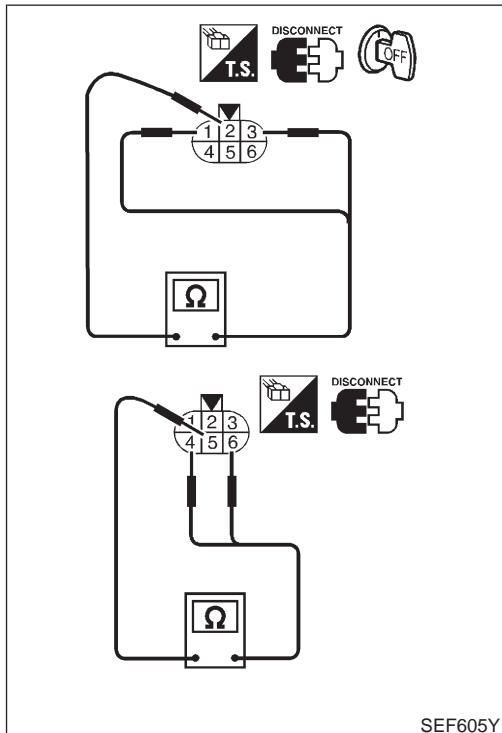

ACTIVE TEST	
EGR VOL CONT/V	20 step
MONITOR	
ENG SPEED	XXX rpm
EGR TEMP SEN	XXX V

SEF015Y

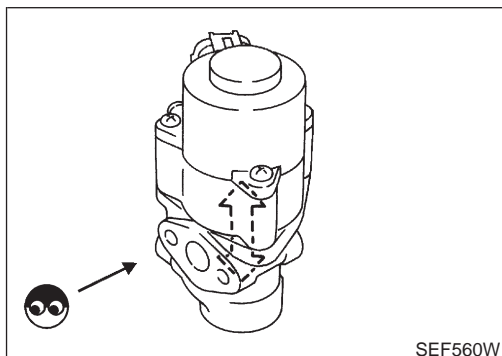

System Description

The malfunction information related to A/T (Automatic Transaxle) is transferred through the line (circuit) from TCM (Transmission Control Module) to ECM. Therefore, be sure to erase the malfunction information such as DTC not only in TCM (Transmission Control Module) but also ECM after the A/T related repair. NJEC0573

ECM Terminals and Reference Value

Specification data are reference values and are measured between each terminal and ground. NJEC0574


CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
91	PU	A/T check signal	[Ignition switch "ON"]	0 - Approximately 5V

On Board Diagnosis Logic

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P1605 1605	<ul style="list-style-type: none"> ● An incorrect signal from TCM (Transmission Control Module) is sent to ECM. 	<ul style="list-style-type: none"> ● Harness or connectors [The communication line circuit between ECM and TCM (Transmission Control Module) is open or shorted.] ● Dead (Weak) battery ● TCM (Transmission Control Module)

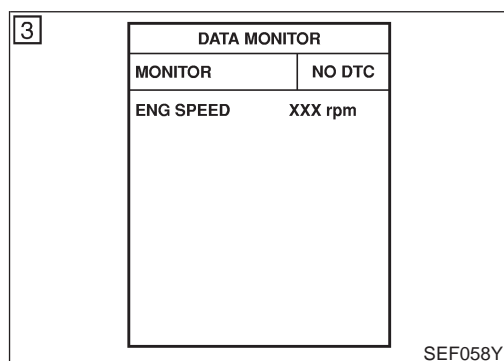

DTC Confirmation Procedure

NJEC0576

NOTE:

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 9 seconds before conducting the next test.

With CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and let it idle for at least 40 seconds.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-363.

With GST




Follow the procedure "With CONSULT-II" above.

Wiring Diagram

NJEC0577

EC-ATDIAG-01

- : DETECTABLE LINE FOR DTC
— : NON-DETECTABLE LINE FOR DTC

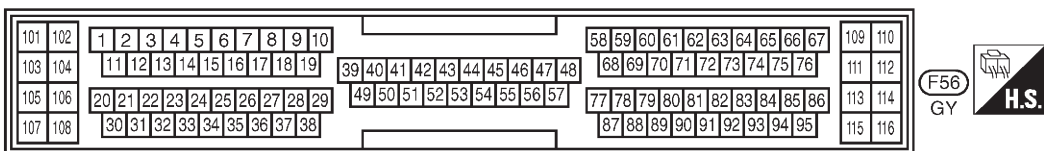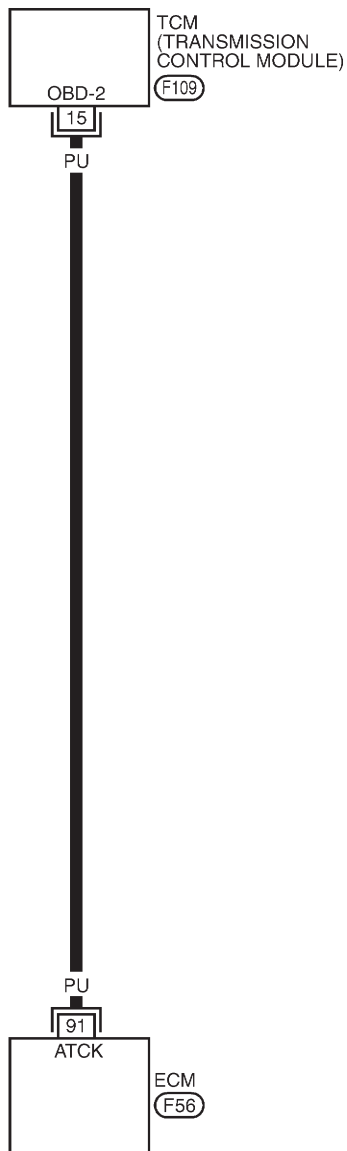


YEC981

EC-362

Diagnostic Procedure


NJEC0578

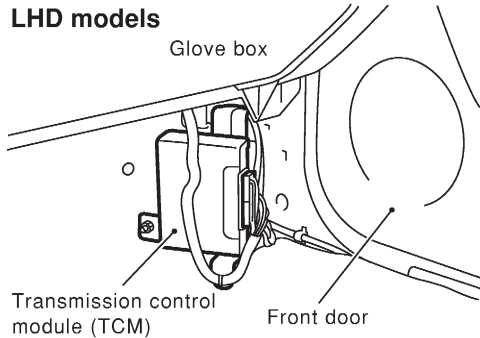1	CHECK INPUT SIGNAL CIRCUIT	
<p>1. Turn ignition switch "OFF".</p> <p>2. Disconnect ECM harness connector and TCM harness connector.</p> <div style="text-align: center;"> <p>LHD models</p>  <p>The diagram shows the interior of a vehicle, specifically the area around the glove box and the front door. A Transmission control module (TCM) is shown mounted near the glove box. Labels include 'Glove box', 'Transmission control module (TCM)', and 'Front door'.</p> </div> <p style="text-align: right;">SEF116Y</p> <p>3. Check harness continuity between ECM terminal 91 and TCM terminal 15. Refer to Wiring Diagram. Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK		▶ GO TO 2.
NG		▶ Repair open circuit or short to ground or short to power in harness or connectors.
2	CHECK INTERMITTENT INCIDENT	
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.		
		▶ INSPECTION END

DTC P1706 PARK/NEUTRAL POSITION (PNP) SWITCH

QG

Component Description

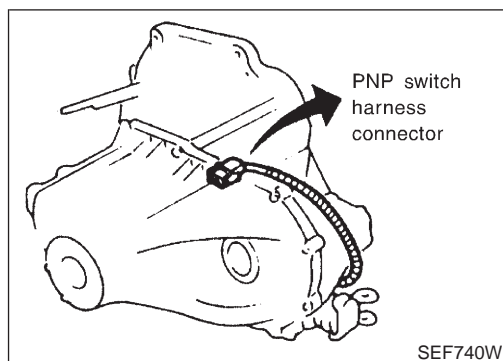

Component Description

NJEC0424

When the gear position is “P” (A/T models only) or “N”, park/neutral position (PNP) switch is “ON”.
ECM detects the park/neutral position when continuity with ground exists.

CONSULT-II Reference Value in Data Monitor Mode

NJEC0425

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
P/N POSI SW	● Ignition switch: ON	Shift lever: “P” or “N”	ON
		Except above	OFF

ECM Terminals and Reference Value

NJEC0426

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM’s transistor. Use a ground other than ECM terminals, such as the ground.

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
42	G/OR	PNP switch	[Ignition switch “ON”] ● Gear position is “Neutral position” (M/T models) ● Gear position is “N” or “P” (A/T models)	Approximately 0V
			[Ignition switch “ON”] ● Except the above gear position	A/T models BATTERY VOLTAGE (11 - 14V) M/T models Approximately 5V

On Board Diagnosis Logic

NJEC0427

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P1706 1706	● The signal of the PNP switch is not changed in the process of engine starting and driving.	● Harness or connectors (The PNP switch circuit is open or shorted.) ● PNP switch

DTC Confirmation Procedure

NJEC0428

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch “OFF” and wait at least 9 seconds before conducting the next test.

Ⓜ With CONSULT-II

- 1) Turn ignition switch “ON”.

DTC P1706 PARK/NEUTRAL POSITION (PNP) SWITCH

QG

DTC Confirmation Procedure (Cont'd)

4	DATA MONITOR	
	MONITOR	NO DTC
	ENG SPEED	XXX rpm
	COOLANT TEMP/S	XXX °C
	VHCL SPEED SE	XXX km/h
	P/N POSI SW	OFF
	B/FUEL SCHDL	XXX msec

SEF213Y

2) Select "P/N POSI SW" in "DATA MONITOR" mode with CONSULT-II. Then check the "P/N POSI SW" signal under the following conditions.


Position (Selector lever)	Known-good signal
"N" and "P" (A/T only) position	ON
Except the above position	OFF

If NG, go to "Diagnostic Procedure", EC-367.
If OK, go to following step.

- 3) Select "DATA MONITOR" mode with CONSULT-II.
- 4) Start engine and warm it up to normal operating temperature.
- 5) Maintain the following conditions for at least 50 consecutive seconds.

ENG SPEED	1,550 - 4,000 rpm
COOLANT TEMP/S	More than 70°C (158°F)
B/FUEL SCHDL	3.0 msec or more
VHCL SPEED SE	70 - 130 km/h (43 - 81 MPH)
Selector lever	Suitable position

6) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-367.

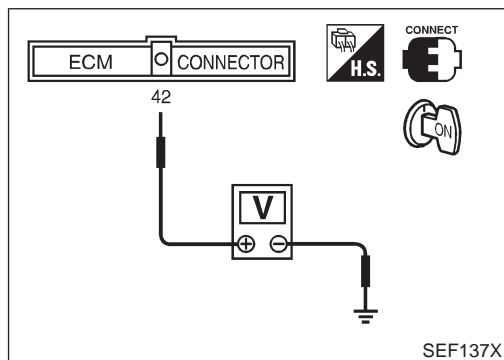

Overall Function Check

NJEC0429

Use this procedure to check the overall function of the park/neutral position switch circuit. During this check, a 1st trip DTC might not be confirmed.

⊗ Without CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Check voltage between ECM terminal 42 (PNP switch signal) and body ground under the following conditions.

Condition (Gear position)	Voltage (V) (Known good data)
"P" (A/T only) and "N" position	Approx. 0
Except the above position	A/T models BATTERY VOLTAGE (11 - 14V) M/T models Approximately 5

3) If NG, go to "Diagnostic Procedure", EC-367.

DTC P1706 PARK/NEUTRAL POSITION (PNP) SWITCH



QG

Wiring Diagram

Wiring Diagram

NJEC0430

EC-PNP/SW-01

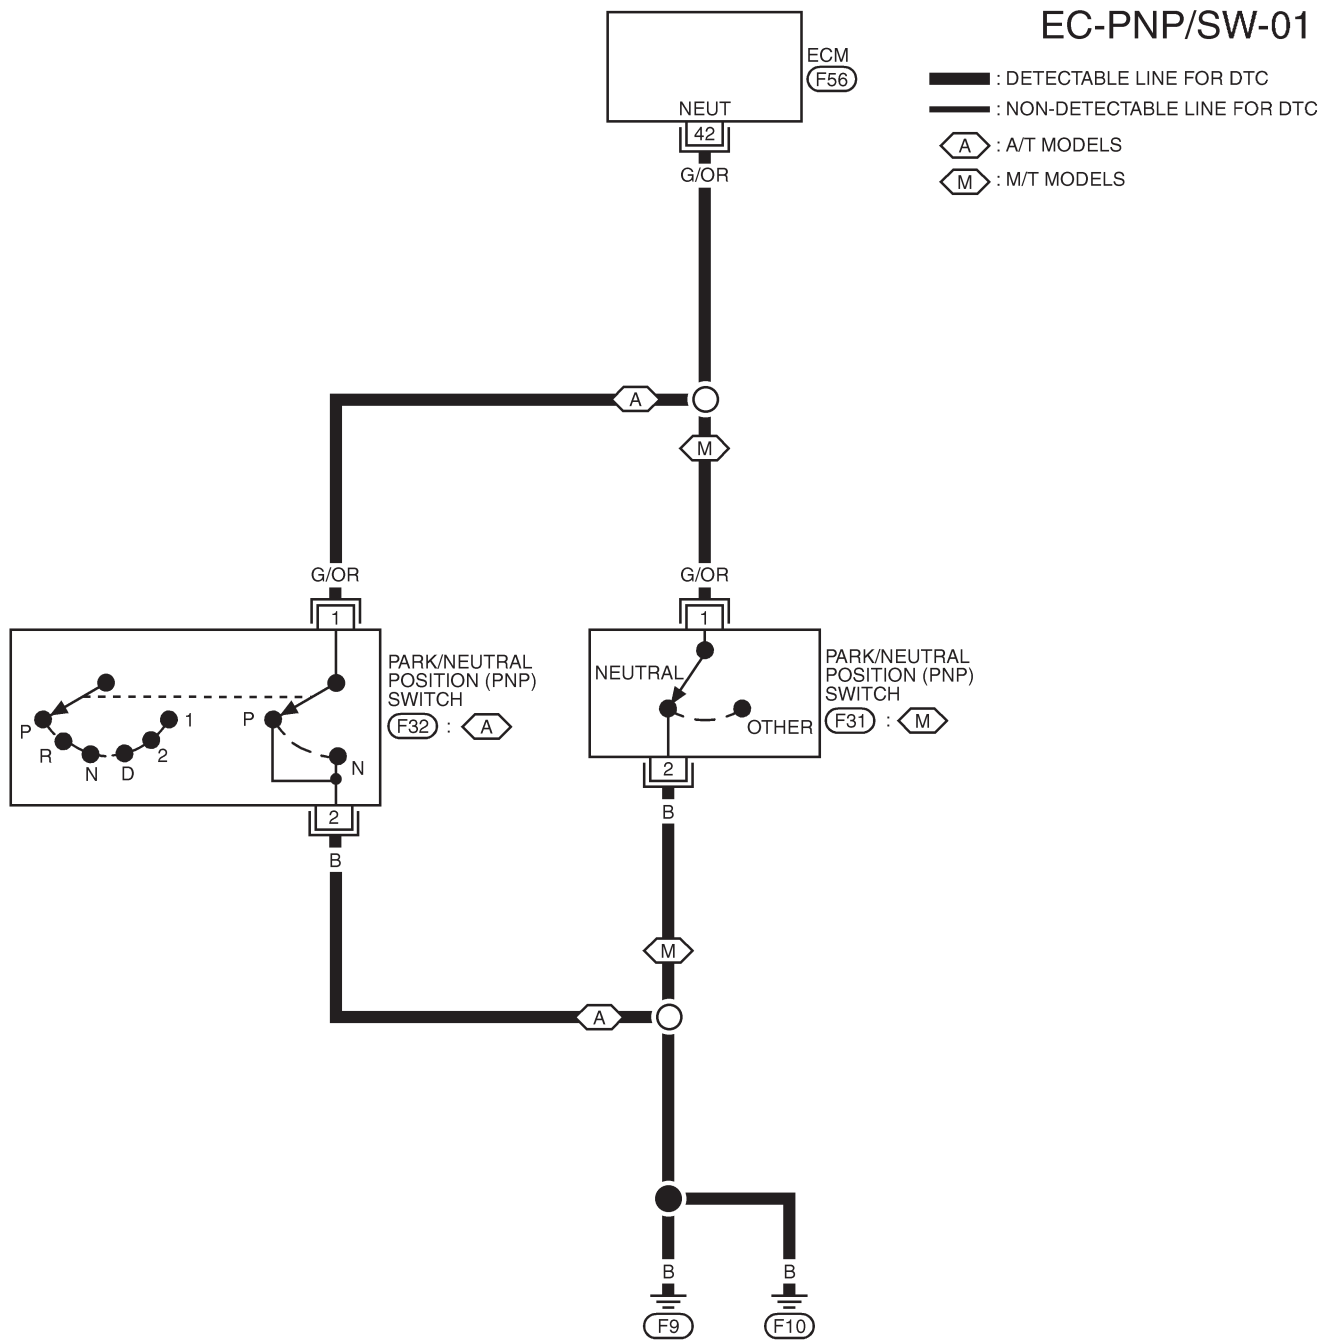

101	102	1	2	3	4	5	6	7	8	9	10			58	59	60	61	62	63	64	65	66	67	109	110							
103	104	11	12	13	14	15	16	17	18	19	39	40	41	42	43	44	45	46	47	48	68	69	70	71	72	73	74	75	76	111	112	
105	106	20	21	22	23	24	25	26	27	28	29	49	50	51	52	53	54	55	56	57	77	78	79	80	81	82	83	84	85	86	113	114
107	108	30	31	32	33	34	35	36	37	38											87	88	89	90	91	92	93	94	95	115	116	



YEC984


DTC P1706 PARK/NEUTRAL POSITION (PNP) SWITCH

QG

Diagnostic Procedure

Diagnostic Procedure

NJE0431

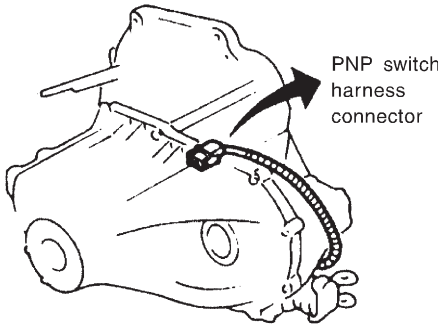1	CHECK GROUND CIRCUIT		
<p>1. Turn ignition switch "OFF". 2. Disconnect PNP switch harness connector.</p> <div style="text-align: center;">  <p style="margin-left: 150px;">PNP switch harness connector</p> </div> <p style="text-align: right;">SEF740W</p> <p>3. Check harness continuity between PNP switch harness connector terminal 2 and body ground. Refer to wiring diagram. Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>			
OK		▶	GO TO 3.
NG		▶	GO TO 2.

2	DETECT MALFUNCTIONING PART		
<p>Check the harness for open or short between PNP switch and body ground.</p> <p style="text-align: right;">▶ Repair open circuit or short to ground or short to power in harness or connectors.</p>			

3	CHECK INPUT SIGNAL CIRCUIT		
<p>1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal 42 and PNP switch harness connector terminal 1. Refer to wiring diagram. Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>			
OK		▶	GO TO 5.
NG		▶	GO TO 4.

4	DETECT MALFUNCTIONING PART		
<p>Check the harness for open or short between ECM and PNP switch.</p> <p style="text-align: right;">▶ Repair open circuit or short to ground or short to power in harness or connectors.</p>			

5	CHECK PNP SWITCH		
<p>Refer to MT-21, "POSITION SWITCH CHECK" or AT-181, "PARK/NEUTRAL POSITION (PNP) SWITCH".</p> <p style="text-align: center;">OK or NG</p>			
OK		▶	GO TO 6.
NG		▶	Replace PNP switch.

DTC P1706 PARK/NEUTRAL POSITION (PNP) SWITCH

QG


Diagnostic Procedure (Cont'd)

6	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.	
▶	INSPECTION END

INTAKE AIR TEMPERATURE SENSOR

QG

Component Description

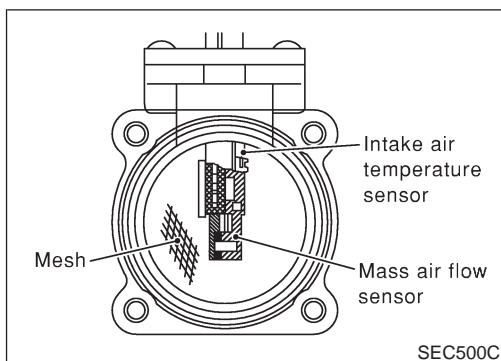

Component Description

NJEC1737

The intake air temperature sensor is built into the mass air flow sensor. The sensor detects intake air temperature and transmits a signal to the ECM.

The temperature sensing unit uses a thermistor which is sensitive to the change in temperature. Electrical resistance of the thermistor decreases in response to the temperature rise.

<Reference data>

Intake air temperature °C (°F)	Voltage* V	Resistance kΩ
25 (77)	3.3	1.9 - 2.1
80 (176)	1.28	0.31 - 0.37

*: These data are reference values and are measured between ECM terminal 64 (Intake air temperature sensor) and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

INTAKE AIR TEMPERATURE SENSOR




QG

Wiring Diagram

Wiring Diagram

NJEC1738


EC-IATSEN-01

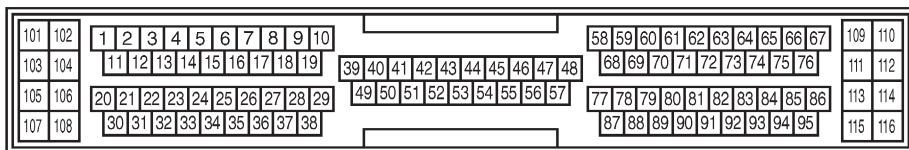
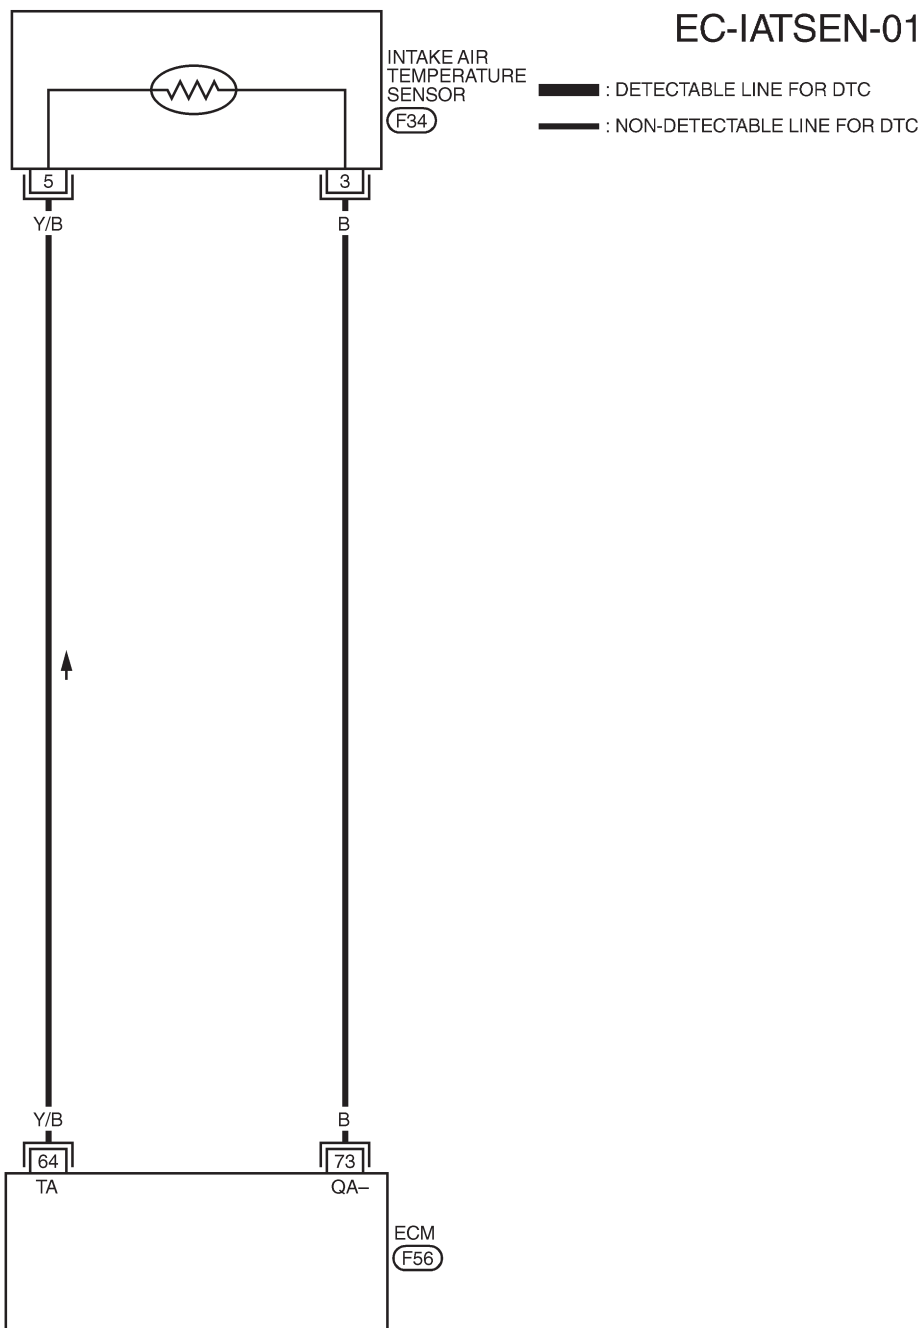


YEC985

Diagnostic Procedure

NJE1739

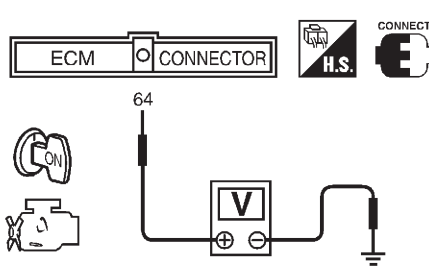1	CHECK OVERALL FUNCTION			
<p>1. Turn ignition switch "ON". 2. Check voltage between ECM terminal 64 and ground with CONSULT-II or tester.</p>				
 <p style="text-align: right;">Voltage: Approximately 0 - 4.8V</p>				
SEF004YA				
OK or NG				
OK	▶	INSPECTION END		
NG	▶	GO TO 2.		

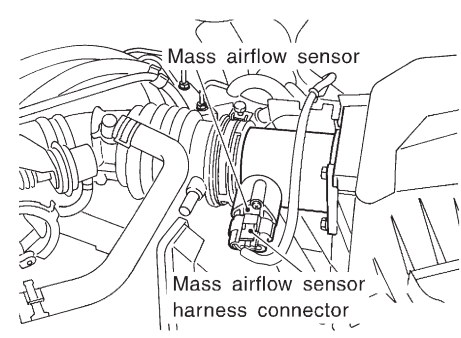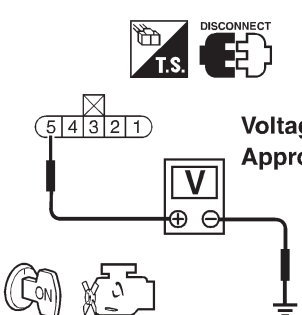2	CHECK POWER SUPPLY (Models with intake air temperature sensor in mass air flow sensor)			
<p>1. Turn ignition switch "OFF". 2. Disconnect mass air flow sensor harness connector.</p>				
				
JEF105Y				
<p>3. Turn ignition switch "ON". 4. Check voltage between terminal 1 and ground with CONSULT-II or tester.</p>				
 <p style="text-align: right;">Voltage: Approximately 5V</p>				
SEC503C				
OK or NG				
OK	▶	GO TO 4.		
NG	▶	GO TO 3.		

INTAKE AIR TEMPERATURE SENSOR

QG

Diagnostic Procedure (Cont'd)


3	DETECT MALFUNCTIONING PART
Check harness for open or short between ECM and intake air temperature sensor.	
▶	Repair harness or connectors.

4	CHECK GROUND CIRCUIT
1. Turn ignition switch "OFF". 2. Check harness continuity between mass air flow sensor harness connector terminal 3 and engine ground. Refer to wiring diagram. Continuity should exist.	
3. Also check harness for short to ground and short to power.	
OK or NG	
OK	▶ GO TO 6.
NG	▶ GO TO 5.

5	DETECT MALFUNCTIONING PART
Check harness for open or short between ECM and intake air temperature sensor.	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

6	CHECK INTAKE AIR TEMPERATURE SENSOR
Refer to "Component Inspection", EC-372.	
OK or NG	
OK	▶ GO TO 7.
NG	▶ Replace intake air temperature sensor.

7	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.	
▶	INSPECTION END

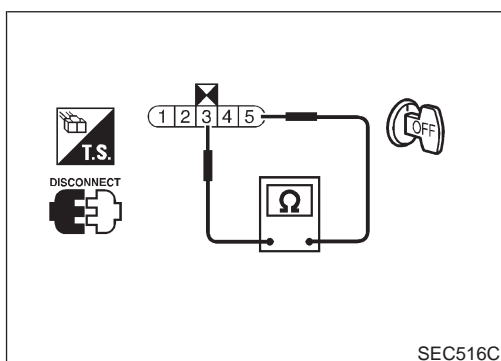

Component Inspection INTAKE AIR TEMPERATURE SENSOR

NJEC1740

NJEC1740S01

Check resistance between mass air flow sensor harness connector terminals 3 and 5.

<Reference data>


Intake air temperature °C (°F)	Resistance kΩ
25 (77)	1.9 - 2.1

If NG, replace intake air temperature sensor.

HEATED OXYGEN SENSOR 1 (FRONT)

QG


Component Description

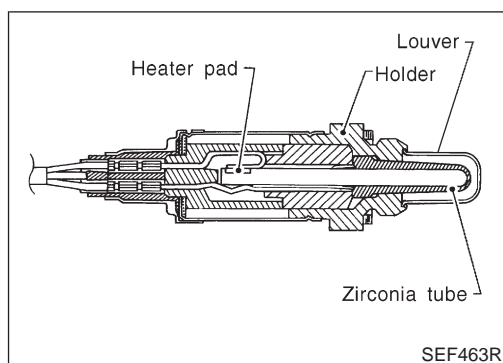

Component Description

NJEC1214

The heated oxygen sensor 1 (front) is placed into the exhaust manifold. It detects the amount of oxygen in the exhaust gas compared to the outside air. The heated oxygen sensor 1 (front) has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The heated oxygen sensor 1 (front) signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

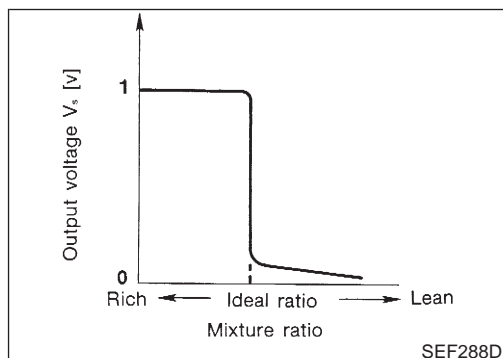

CONSULT-II Reference Value in Data Monitor Mode

NJEC1215

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
HO2S1 (B1)			0 - 0.3V ↔ Approx. 0.6 - 1.0V
HO2S1 MNTR (B1)	<ul style="list-style-type: none"> Engine: After warming up 	Maintaining engine speed at 2,000 rpm	LEAN ↔ RICH Changes more than 5 times during 10 seconds.

ECM Terminals and Reference Value

NJEC1216

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
62	W	Heated oxygen sensor 1 (front)	<p>[Engine is running]</p> <ul style="list-style-type: none"> After warming up to normal operating temperature and engine speed is 2,000 rpm 	<p>0 - Approximately 1.0V</p>

HEATED OXYGEN SENSOR 1 (FRONT)


QG

Wiring Diagram



Wiring Diagram

NJEC1220

EC-FRO2-01

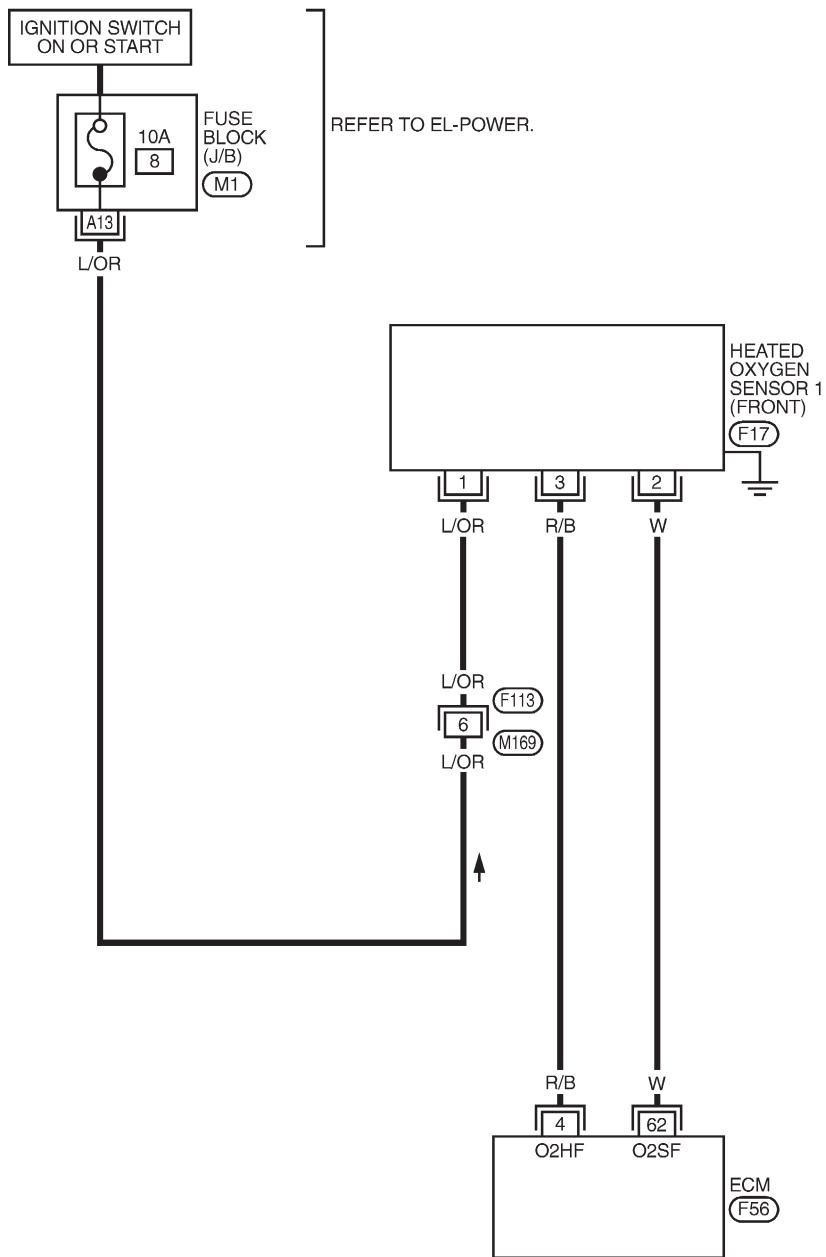

— : DETECTABLE LINE FOR DTC
 — : NON-DETECTABLE LINE FOR DTC

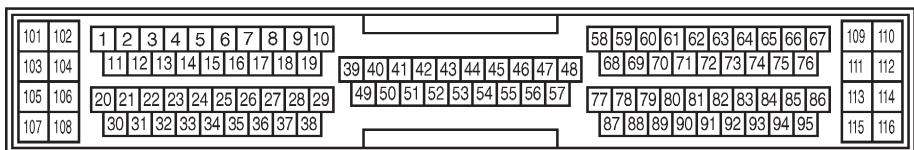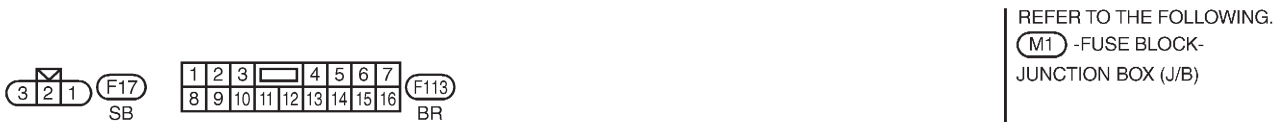

YEC986

Diagnostic Procedure

NJE1221

1	INSPECTION START	
Do you have CONSULT-II?		
Yes or No		
Yes	▶	GO TO 2.
No	▶	GO TO 3.



2	CHECK OVERALL FUNCTION															
<p> With CONSULT-II</p> <ol style="list-style-type: none"> Start engine and warm it up to normal operating temperature. Select "HO2S1 MNTR (B1)" in "DATA MONITOR" mode with CONSULT-II. Keep the engine speed at 2,000 rpm under no load, and make sure that the monitors fluctuate between LEAN and RICH more than five times in 10 seconds. 																
<table border="1" style="margin: auto;"> <thead> <tr> <th colspan="2">DATA MONITOR</th> </tr> <tr> <th>MONITOR</th> <th>NO DTC</th> </tr> </thead> <tbody> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>MAS A/F SE-B1</td> <td>XXX V</td> </tr> <tr> <td>COOLAN TEMP/S</td> <td>XXX °C</td> </tr> <tr> <td>HO2S1 (B1)</td> <td>XXX V</td> </tr> <tr> <td>HO2S1 MNTR (B1)</td> <td>LEAN</td> </tr> </tbody> </table>			DATA MONITOR		MONITOR	NO DTC	ENG SPEED	XXX rpm	MAS A/F SE-B1	XXX V	COOLAN TEMP/S	XXX °C	HO2S1 (B1)	XXX V	HO2S1 MNTR (B1)	LEAN
DATA MONITOR																
MONITOR	NO DTC															
ENG SPEED	XXX rpm															
MAS A/F SE-B1	XXX V															
COOLAN TEMP/S	XXX °C															
HO2S1 (B1)	XXX V															
HO2S1 MNTR (B1)	LEAN															
<p>1 time: RICH → LEAN → RICH 2 times: RICH → LEAN → RICH → LEAN → RICH</p>																
SEF218Z																
OK or NG																
OK	▶	INSPECTION END														
NG	▶	GO TO 4.														

3	CHECK OVERALL FUNCTION	
<p> Without CONSULT-II</p> <ol style="list-style-type: none"> Start engine and warm it up to normal operating temperature. Set voltmeter probes between ECM terminal 62 (HO2S1 signal) and engine ground. Check the following with engine speed held at 2,000 rpm constant under no load. 		
<div style="display: flex; align-items: flex-start;"> <div style="flex: 1;"> </div> <div style="flex: 2;"> <ul style="list-style-type: none"> The voltage fluctuates between 0 to 0.3V and 0.6 to 1.0V more than 5 times within 10 seconds. The maximum voltage is over 0.6V at least one time. The minimum voltage is below 0.3V at least one time. The voltage never exceeds 1.0V. <p>1 time: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V 2 times: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V</p> </div> </div>		
SEC518C		
CAUTION:		
Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.		
OK or NG		
OK	▶	INSPECTION END
NG	▶	GO TO 4.

HEATED OXYGEN SENSOR 1 (FRONT)

QG

Diagnostic Procedure (Cont'd)

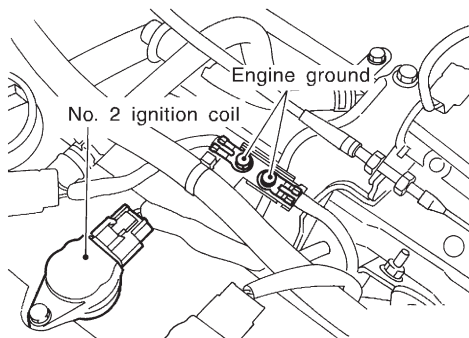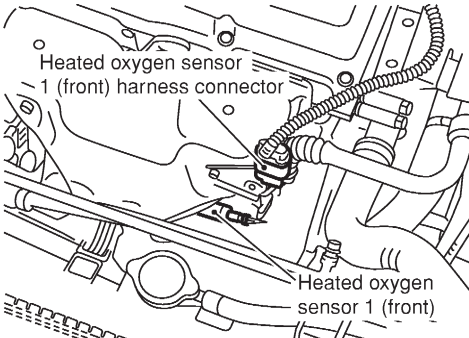4	RETIGHTEN GROUND SCREWS
<p>1. Turn ignition switch "OFF". 2. Loosen and retighten engine ground screws.</p>	
 <p>The diagram shows a close-up of the engine's ground screws and the No. 2 ignition coil. Labels include 'Engine ground' and 'No. 2 ignition coil'.</p>	
<p>3. Disconnect heated oxygen sensor 1 (front) harness connector.</p>	
 <p>The diagram shows the heated oxygen sensor 1 (front) harness connector and the sensor itself. Labels include 'Heated oxygen sensor 1 (front) harness connector' and 'Heated oxygen sensor 1 (front)'.</p>	
JEF104Y	
SEF012XA	
▶ GO TO 5.	

5	RETIGHTEN HEATED OXYGEN SENSOR 1 (FRONT)
<p>Loosen and retighten corresponding heated oxygen sensor 1 (front). Tightening torque: 40 - 50 N·m (4.1 - 5.1 kg·m, 30 - 37 ft·lb)</p>	
▶ GO TO 6.	

6	CHECK INPUT SIGNAL CIRCUIT
<p>1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal 62 and heated oxygen sensor 1 (front) harness connector terminal 2. Refer to wiring diagram. Continuity should exist. 3. Check harness continuity between ECM terminal 62 (or terminal 2) and ground. Continuity should not exist. 4. Also check harness for short to power.</p>	
OK or NG	
OK	▶ GO TO 7.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

HEATED OXYGEN SENSOR 1 (FRONT)

QG

Diagnostic Procedure (Cont'd)

7	CHECK HEATED OXYGEN SENSOR 1 (FRONT)	
Refer to "Component Inspection", EC-377.		
OK or NG		
OK	▶	GO TO 8.
NG	▶	Replace heated oxygen sensor 1 (front).

8	CHECK INTERMITTENT INCIDENT	
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.		
▶		INSPECTION END

4	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th colspan="2">DATA MONITOR</th> </tr> <tr> <th>MONITOR</th> <th>NO DTC</th> </tr> </thead> <tbody> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>MAS A/F SE-B1</td> <td>XXX V</td> </tr> <tr> <td>COOLAN TEMP/S</td> <td>XXX °C</td> </tr> <tr> <td>HO2S1 (B1)</td> <td>XXX V</td> </tr> <tr> <td>HO2S1 MNTR (B1)</td> <td>LEAN</td> </tr> </tbody> </table>	DATA MONITOR		MONITOR	NO DTC	ENG SPEED	XXX rpm	MAS A/F SE-B1	XXX V	COOLAN TEMP/S	XXX °C	HO2S1 (B1)	XXX V	HO2S1 MNTR (B1)	LEAN
DATA MONITOR															
MONITOR	NO DTC														
ENG SPEED	XXX rpm														
MAS A/F SE-B1	XXX V														
COOLAN TEMP/S	XXX °C														
HO2S1 (B1)	XXX V														
HO2S1 MNTR (B1)	LEAN														
	SEF646Y														

5	<p>Bank 1</p> <p style="text-align: center;">cycle 1 2 3 4 5 </p> <p style="text-align: center;">HO2S1 MNTR (B1) R-L-R-L-R-L-R-L-R-L-R</p> <p>Bank 2</p> <p style="text-align: center;">cycle 1 2 3 4 5 </p> <p style="text-align: center;">HO2S1 MNTR (B2) R-L-R-L-R-L-R-L-R-L-R</p> <p>R means HO2S1 MNTR (B1)/(B2) indicates RICH L means HO2S1 MNTR (B1)/(B2) indicates LEAN</p>
	SEF647Y

Component Inspection

HEATED OXYGEN SENSOR 1 (FRONT)

NJEC1222

NJEC1222S01

Ⓜ With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Select "MANU TRIG" in "DATA MONITOR" mode, and select "HO2S1 (B1)" and "HO2S1 MNTR (B1)".
- 3) Hold engine speed at 2,000 rpm under no load during the following steps.
- 4) Touch "RECORD" on CONSULT-II screen.
- 5) Check the following.
 - "HO2S1 MNTR (B1)" in "DATA MONITOR" mode changes from "RICH" to "LEAN" to "RICH" 5 times in 10 seconds. 5 times (cycles) are counted as shown below:
R = "HO2S1 MNTR (B1)", "RICH"
L = "HO2S1 MNTR (B1)", "LEAN"
 - "HO2S1 (B1)" voltage goes above 0.6V at least once.
 - "HO2S1 (B1)" voltage goes below 0.3V at least once.
 - "HO2S1 (B1)" voltage never exceeds 1.0V.

CAUTION:


- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool and approved anti-seize lubricant.

HEATED OXYGEN SENSOR 1 (FRONT)

QG


Component Inspection (Cont'd)

Trigger	ENG SPEED	HO2S1 (B1)
	rpm	V
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX

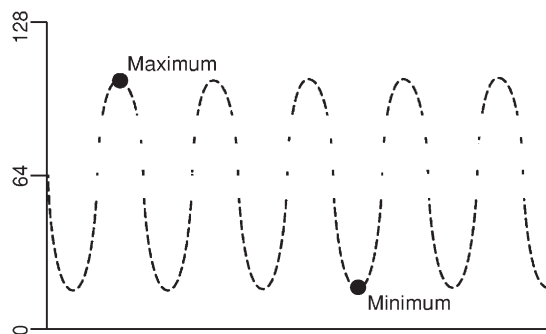

- Maximum voltage should be over 0.6V at least one time.
- Minimum voltage should be below 0.30V at least one time.

SEF648Y

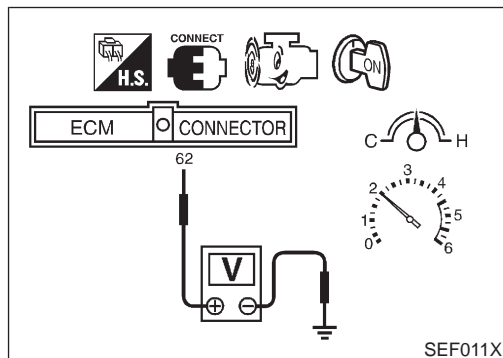

SEF011X

⊗ Without CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminal 62 (HO2S1 signal) and engine ground.
- 3) Check the following with engine speed held at 2,000 rpm constant under no load.
 - The voltage fluctuates between 0 to 0.3V and 0.6 to 1.0V more than 5 times within 10 seconds.
 - The maximum voltage is over 0.6V at least one time.
 - The minimum voltage is below 0.3V at least one time.
 - The voltage never exceeds 1.0V.
 - 1 time: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V
 - 2 times: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool and approved anti-seize lubricant.

HEATED OXYGEN SENSOR 1 HEATER (FRONT)

QG
Description

Description

SYSTEM DESCRIPTION

NJEC1223

NJEC1223S01

Sensor	Input Signal to ECM	ECM function	Actuator
Camshaft position sensor (PHASE) Crankshaft position sensor (POS)	Engine speed	Heated oxygen sensor 1 heater (front) control	Heated oxygen sensor 1 heater (front)

The ECM performs ON/OFF control of the heated oxygen sensor 1 heater (front) corresponding to the engine operating condition.

OPERATION

NJEC1223S02

Engine speed	Heated oxygen sensor 1 heater (front)
Above 3,200 rpm	OFF
Below 3,200 rpm	ON

CONSULT-II Reference Value in Data Monitor Mode

NJEC1224

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
HO2S1 HTR (B1)	• Engine speed: Below 3,200 rpm	ON
	• Engine speed: Above 3,200 rpm	OFF

ECM Terminals and Reference Value

NJEC1225

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
4	R/B	Heated oxygen sensor 1 heater (front)	[Engine is running] • Engine speed is below 3,200 rpm.	Approximately 0V
			[Engine is running] • Engine speed is above 3,200 rpm.	BATTERY VOLTAGE (11 - 14V)

HEATED OXYGEN SENSOR 1 HEATER (FRONT)



QG



Wiring Diagram

Wiring Diagram

NJEC1228


EC-FRO2/H-01

 : DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

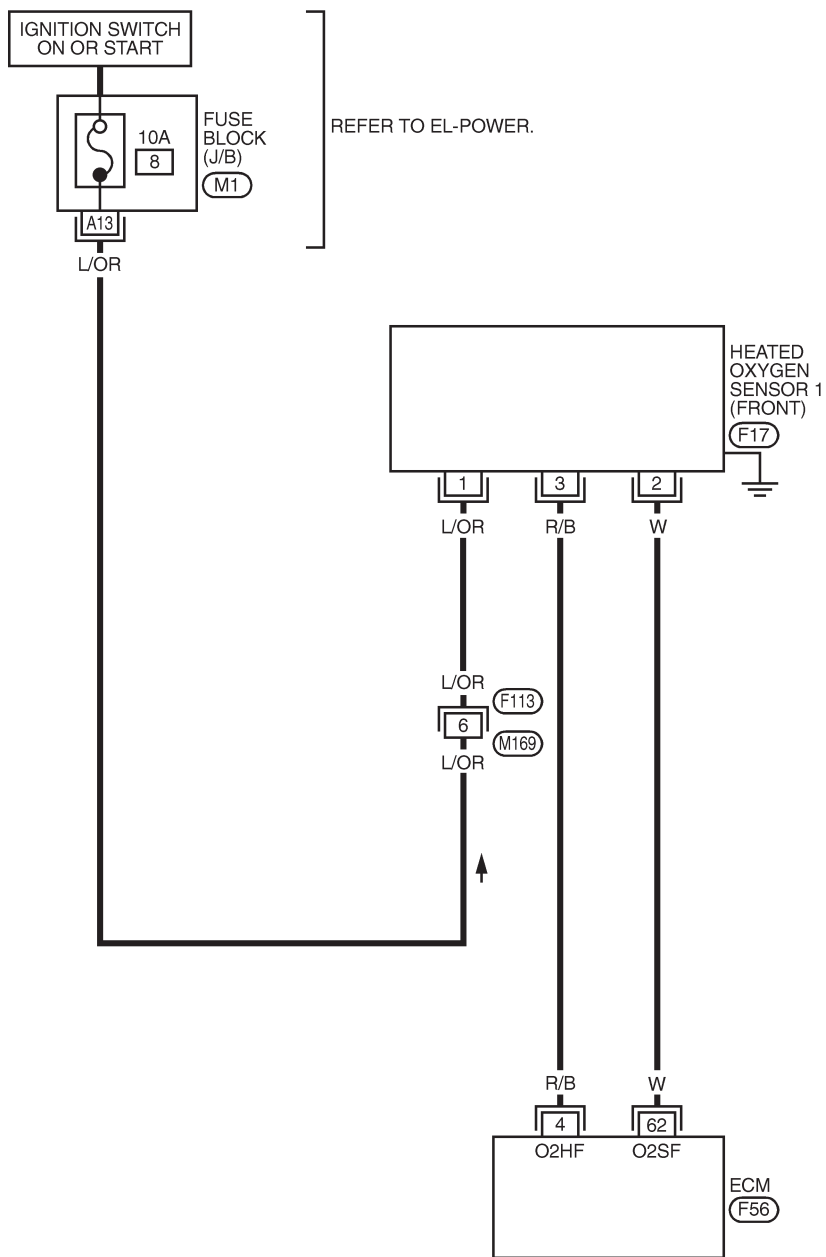

REFER TO THE FOLLOWING.

(M1) - FUSE BLOCK-
JUNCTION BOX (J/B)

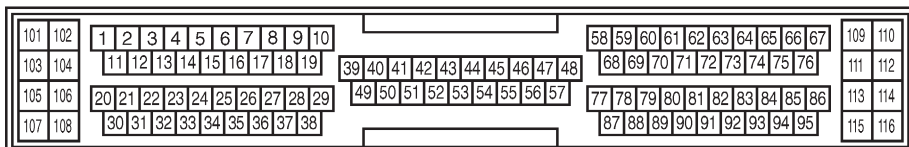


F56
GY





YEC987

Diagnostic Procedure

NJE1229

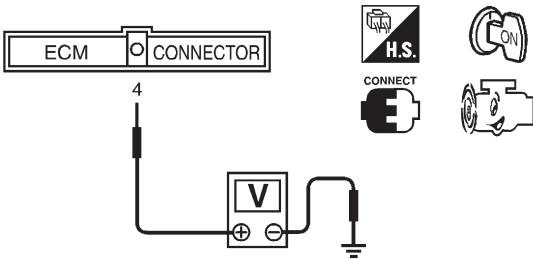1	CHECK OVERALL FUNCTION								
<ol style="list-style-type: none"> 1. Turn ignition switch "ON". 2. Set the tester probe between ECM terminals 4 [HO2S1 Heater (front) signal] and ground. 3. Start engine and let it idle. 4. Check the voltage under the following conditions. 									
									
		<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Conditions</th> <th style="text-align: center;">Voltage</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">At idle</td> <td style="text-align: center;">0 - 1V</td> </tr> <tr> <td style="text-align: center;">Engine speed is above 3,200 rpm.</td> <td style="text-align: center;">Battery voltage</td> </tr> </tbody> </table>	Conditions	Voltage	At idle	0 - 1V	Engine speed is above 3,200 rpm.	Battery voltage	
Conditions	Voltage								
At idle	0 - 1V								
Engine speed is above 3,200 rpm.	Battery voltage								
SEF239Z									
OK or NG									
OK	▶	INSPECTION END							
NG	▶	GO TO 2.							

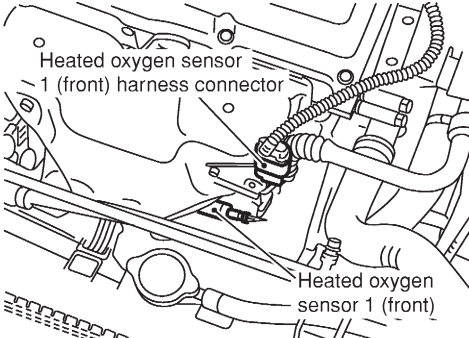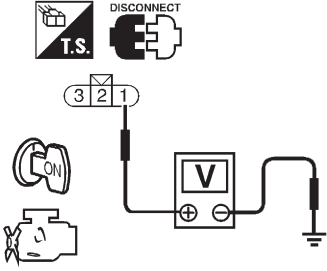
2	CHECK POWER SUPPLY		
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect heated oxygen sensor 1 (front) harness connector. 			
			
SEF012XA			
<ol style="list-style-type: none"> 3. Turn ignition switch "ON". 4. Check voltage between terminal 1 and ground with CONSULT-II or tester. 			
			
		Voltage: Battery voltage	
SEF934X			
OK or NG			
OK	▶	GO TO 4.	
NG	▶	GO TO 3.	

HEATED OXYGEN SENSOR 1 HEATER (FRONT)

QG

Diagnostic Procedure (Cont'd)

3	DETECT MALFUNCTIONING PART	
Check the following. <ul style="list-style-type: none"> ● Harness connectors F113, M169 ● 10A fuse ● Harness for open or short between heated oxygen sensor 1 (front) and fuse 		
▶		Repair harness or connectors.
4	CHECK GROUND CIRCUIT	
1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between heated oxygen sensor 1 (front) harness connector terminal 3 and ECM terminal 4. Refer to wiring diagram. Continuity should exist.		
4. Also check harness for short to ground and short to power.		
OK or NG		
OK	▶	GO TO 5.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.
5	CHECK HEATED OXYGEN SENSOR 1 HEATER (FRONT)	
Refer to "Component Inspection", EC-382.		
OK or NG		
OK	▶	GO TO 6.
NG	▶	Replace heated oxygen sensor 1 (front).
6	CHECK INTERMITTENT INCIDENT	
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.		
▶		INSPECTION END

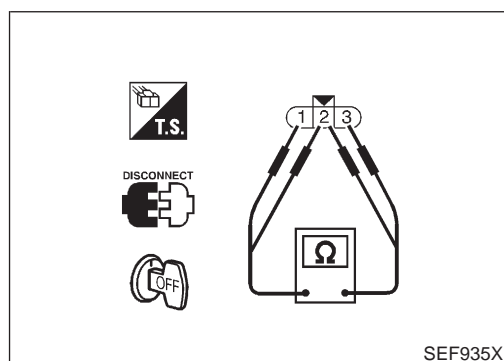

Component Inspection HEATED OXYGEN SENSOR 1 HEATER (FRONT)

NJEC1230
NJEC1230S01

Check resistance between terminals 3 and 1.

Resistance: 2.3 - 4.3 Ω at 25°C (77°F)

Check continuity between terminals 2 and 1, 3 and 2.

Continuity should not exist.

If NG, replace the heated oxygen sensor 1 (front).


CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool and approved anti-seize lubricant.

HEATED OXYGEN SENSOR 2 (REAR)

QG

Component Description

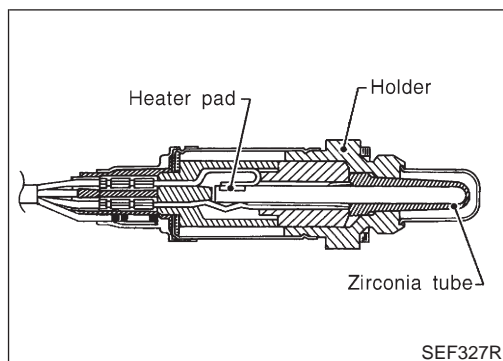

Component Description

NJEC1231

The heated oxygen sensor 2 (rear), after three way catalyst, monitors the oxygen level in the exhaust gas.

Even if switching characteristics of the heated oxygen sensor 1 (front) are shifted, the air fuel ratio is controlled to stoichiometric, by the signal from the heated oxygen sensor 2 (rear).

This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions.

Under normal conditions the heated oxygen sensor 2 (rear) is not used for engine control operation.

CONSULT-II Reference Value in Data Monitor Mode

NJEC1232

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
HO2S2 (B1)	<ul style="list-style-type: none"> Engine: After warming up 	Revsing engine from idle to 3,000 rpm	0 - 0.3V ↔ Approx. 0.6 - 1.0V
HO2S2 MNTR (B1)			LEAN ↔ RICH

ECM Terminals and Reference Value

NJEC1233

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
63	L	Heated oxygen sensor 2 (rear)	[Engine is running] <ul style="list-style-type: none"> After warming up to normal operating temperature and engine speed is 3,000 rpm 	0 - Approximately 1.0V

HEATED OXYGEN SENSOR 2 (REAR)



QG

Wiring Diagram

Wiring Diagram


NJEC1237

EC-RRO2-01

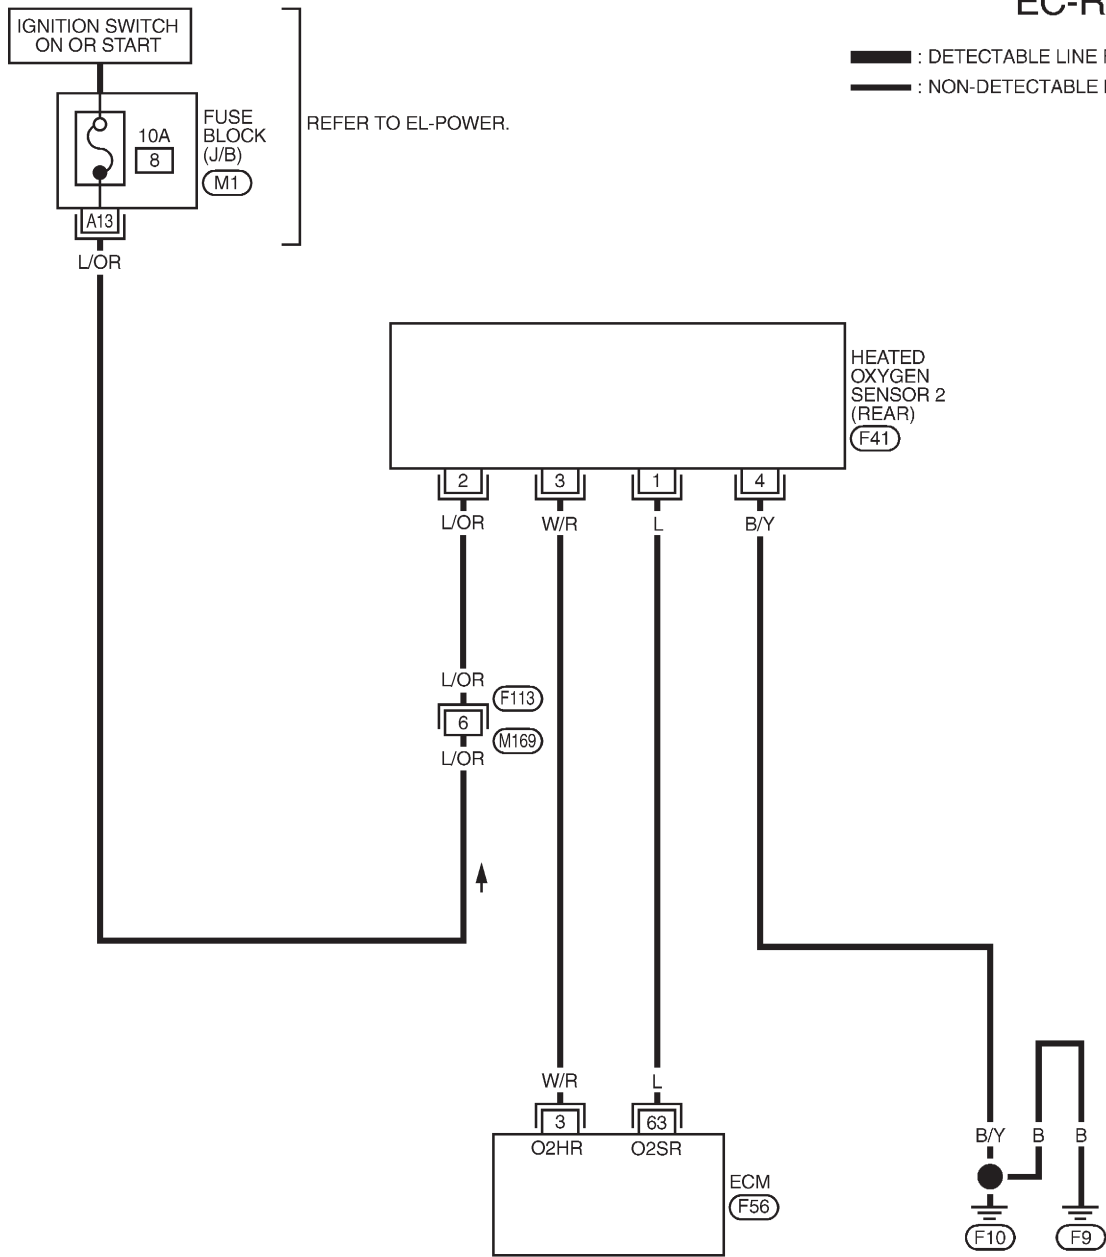

REFER TO THE FOLLOWING.

(M1) - FUSE BLOCK- JUNCTION BOX (J/B)

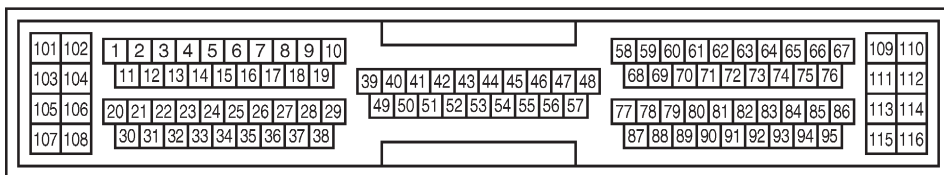

YEC988


HEATED OXYGEN SENSOR 2 (REAR)


QG

Diagnostic Procedure

Diagnostic Procedure

NJEC1238

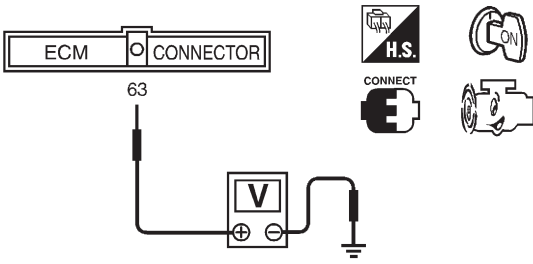
1	CHECK OVERALL FUNCTION-I	<p>1. Start engine and drive the vehicle at over 70 km/h (43 MPH) for 2 consecutive minutes.</p> <p>2. Stop vehicle and keep the engine running.</p> <p>3. Set voltmeter probes between ECM terminals 63 [HO2S2 (B1) signal] and ground.</p> <p>4. Check the voltage while revving up to 4,000 rpm under no load at least 10 times. (Depress and release the accelerator pedal as quickly as possible.)</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  </div> <div style="text-align: center;"> <p>The voltage does not remain in the range of 0.2 - 0.4V.</p> </div> </div> <p style="text-align: right;">SEF240Z</p> <p style="text-align: center;">OK or NG</p>	
OK	▶	INSPECTION END	
NG	▶	GO TO 2.	

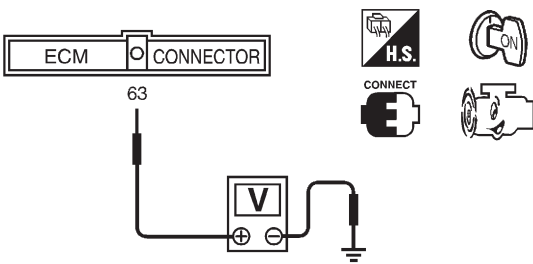
2	CHECK OVERALL FUNCTION-II	<p>Keep engine at idle for 10 minutes, then check the voltage between ECM terminal 63 and ground, or check the voltage when coasting at 80 km/h (50 MPH) in 3rd gear (M/T), "D" position with "OD" OFF (A/T).</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  </div> <div style="text-align: center;"> <p>The voltage does not remain in the range of 0.2 - 0.4V.</p> </div> </div> <p style="text-align: right;">SEF240Z</p> <p style="text-align: center;">OK or NG</p>	
OK	▶	INSPECTION END	
NG	▶	GO TO 3.	

HEATED OXYGEN SENSOR 2 (REAR)

QG

Diagnostic Procedure (Cont'd)

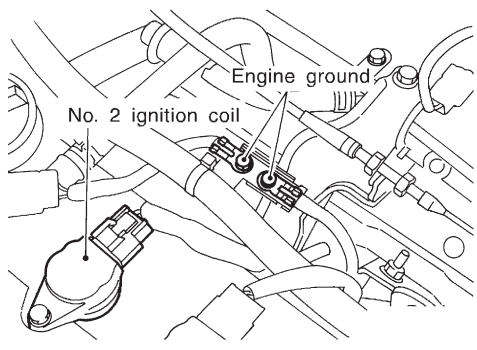3	RETIGHTEN GROUND SCREWS
<ol style="list-style-type: none">1. Turn ignition switch "OFF".2. Loosen and retighten engine ground screws.	
 <p>The diagram shows a close-up of the engine compartment. Two screws are labeled 'Engine ground'. A component is labeled 'No. 2 ignition coil'. The diagram illustrates the location of these components relative to the engine block.</p>	
JEF104Y	
▶ GO TO 4.	

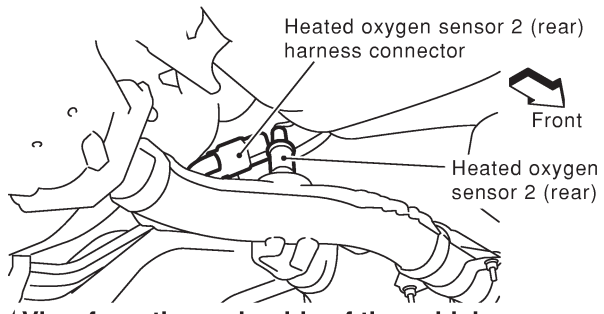4	CHECK INPUT SIGNAL CIRCUIT
<ol style="list-style-type: none">1. Turn ignition switch "OFF".2. Disconnect heated oxygen sensor 2 (rear) harness connector and ECM harness connector.	
 <p>The diagram shows the underside of the vehicle. A harness connector is labeled 'Heated oxygen sensor 2 (rear) harness connector'. The sensor itself is labeled 'Heated oxygen sensor 2 (rear)'. An arrow points to the 'Front' of the vehicle. Below the diagram, it says 'View from the underside of the vehicle'.</p>	
NEF345A	
<ol style="list-style-type: none">3. Check harness continuity between ECM terminal 63 and heated oxygen sensor 2 (rear) harness connector terminal 1. Refer to wiring diagram. Continuity should exist.4. Check harness continuity between ECM terminal 63 [or heated oxygen sensor 2 (rear) harness connector terminal 1] and ground. Continuity should not exist.5. Also check harness for short to ground and short to power.	
OK or NG	
OK	▶ GO TO 6.
NG	▶ GO TO 5.

5	DETECT MALFUNCTIONING PART
Check the harness for open or short between heated oxygen sensor 2 (rear) and ECM.	
▶ Repair open circuit or short to ground or short to power in harness or connectors.	

HEATED OXYGEN SENSOR 2 (REAR)

QG

Diagnostic Procedure (Cont'd)

6	CHECK GROUND CIRCUIT	
1. Check harness continuity between heated oxygen sensor 2 (rear) harness connector terminal 4 and body ground. Refer to wiring diagram. Continuity should exist.		
2. Also check harness for short to ground and short to power.		
OK or NG		
OK	▶	GO TO 7.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

7	CHECK HEATED OXYGEN SENSOR 2 (REAR)	
Refer to "Component Inspection", EC-387.		
OK or NG		
OK	▶	GO TO 8.
NG	▶	Replace heated oxygen sensor 2 (rear).

8	CHECK INTERMITTENT INCIDENT	
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.		
▶ INSPECTION END		

ACTIVE TEST	
FUEL INJECTION	25 %
MONITOR	
ENG SPEED	XXX rpm
HO2S1 (B1)	XXX V
HO2S2 (B1)	XXX V
HO2S1 MNTR (B1)	RICH
HO2S2 MNTR (B1)	RICH

SEF662Y

Component Inspection

NJE1239

HEATED OXYGEN SENSOR 2 (REAR)

NJE1239S01


④ With CONSULT-II

- 1) Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
- 2) Stop vehicle with engine running.
- 3) Select "FUEL INJECTION" in "ACTIVE TEST" mode, and select "HO2S2 (B1)" as the monitor item with CONSULT-II.
- 4) Check "HO2S2 (B1)" at idle speed when adjusting "FUEL INJECTION" to $\pm 25\%$.

"HO2S2 (B1)" should be above 0.68V at least once when the "FUEL INJECTION" is +25%. "HO2S2 (B1)" should be below 0.56V at least once when the "FUEL INJECTION" is -25%.

CAUTION:


- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool and approved anti-seize lubricant.

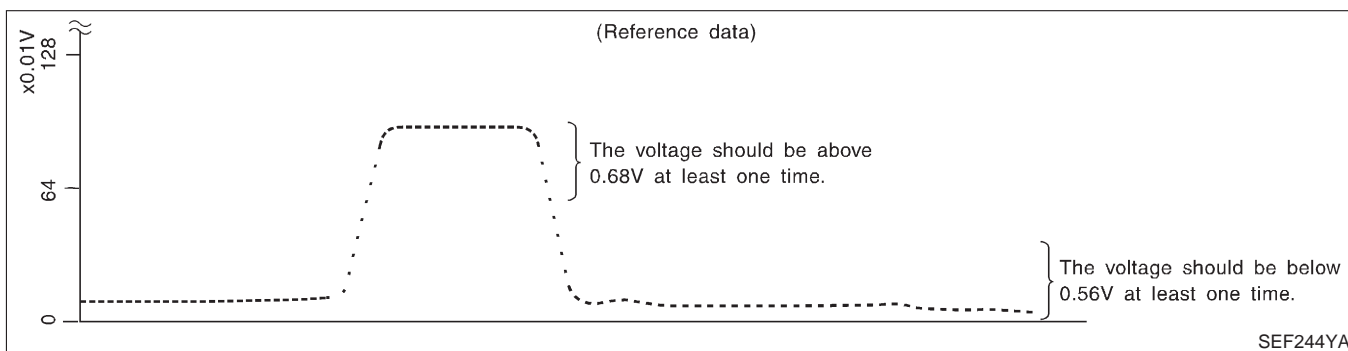

HEATED OXYGEN SENSOR 2 (REAR)

QG

Component Inspection (Cont'd)

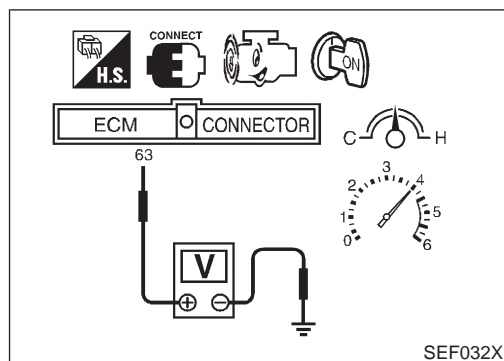

⊗ Without CONSULT-II

- 1) Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
- 2) Stop vehicle with engine running.
- 3) Set voltmeter probes between ECM terminals 63 (HO2S2 signal) and engine ground.
- 4) Check the voltage when revving up to 4,000 rpm under no load at least 10 times.
(Depress and release accelerator pedal as soon as possible.)
The voltage should be above 0.68V at least once.
If the voltage is above 0.68V at step 4, step 5 is not necessary.
- 5) Check the voltage when revving up to 6,000 rpm under no load. Or keep vehicle at idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in 3rd gear position (M/T), D position with "OD" OFF (A/T).
The voltage should be below 0.56V at least once.

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool and approved anti-seize lubricant.

HEATED OXYGEN SENSOR 2 HEATER (REAR)

QG

Description

Description

NJEC1240

SYSTEM DESCRIPTION

NJEC1240S01

Sensor	Input Signal to ECM	ECM function	Actuator
Camshaft position sensor (PHASE) Crankshaft position sensor (POS)	Engine speed	Heated oxygen sensor 2 heater (rear) control	Heated oxygen sensor 2 heater (rear)

The ECM performs ON/OFF control of the heated oxygen sensor 2 heater (rear) corresponding to the engine speed.

OPERATION

NJEC1240S02

Engine condition	Heated oxygen sensor 2 heater (rear)
Engine stopped	OFF
Engine is running.	
After driving for 2 minutes at a speed of 70 km/h (43 MPH) or more	ON
Engine speed above 3,600 rpm	OFF

CONSULT-II Reference Value in Data Monitor Mode

NJEC1241

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
HO2S2 HTR (B1)	<ul style="list-style-type: none"> ● Engine speed 	ON
	Below 3,600 rpm [After driving for 2 minutes at a speed of 70 km/h (43 MPH) or more]	ON
	Above 3,600 rpm	OFF
<ul style="list-style-type: none"> ● Ignition switch ON (Engine stopped) 		OFF

ECM Terminals and Reference Value

NJEC1242

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
3	W/R	Heated oxygen sensor 2 heater (rear)	[Engine is running] <ul style="list-style-type: none"> ● Engine speed is below 3,600 rpm [After driving for 2 minutes at a speed of 70 km/h (43 MPH) or more] 	0 - 1V
			[Engine is running] <ul style="list-style-type: none"> ● Engine speed is above 3,600 rpm 	BATTERY VOLTAGE (11 - 14V)
			[Ignition switch "ON"] <ul style="list-style-type: none"> ● Engine stopped 	

HEATED OXYGEN SENSOR 2 HEATER (REAR)



QG

Wiring Diagram

Wiring Diagram


NJEC1245

EC-RRO2/H-01

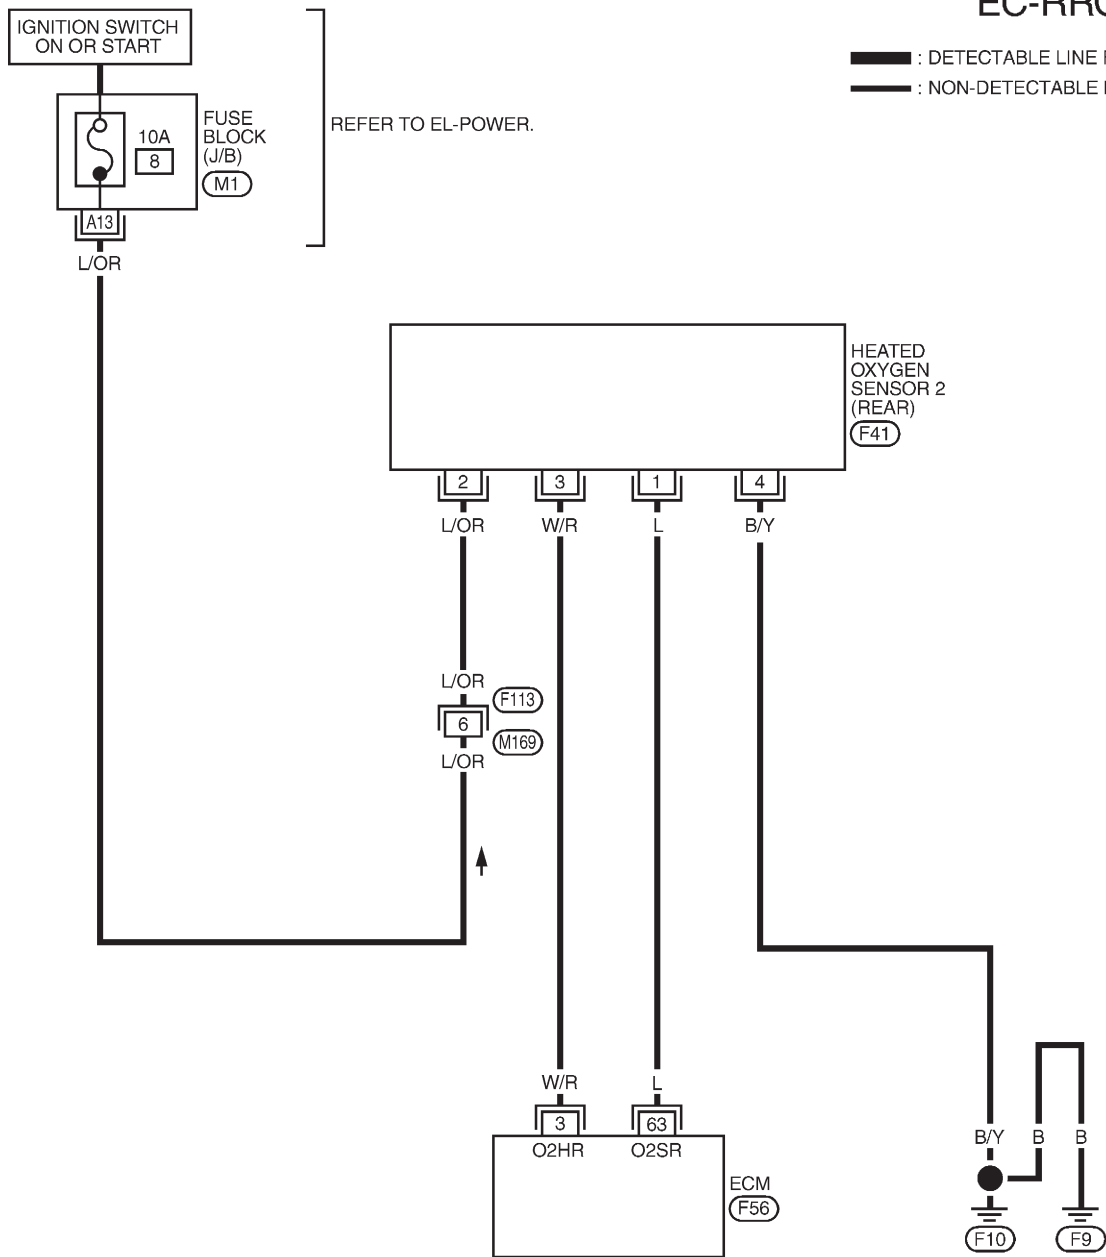

REFER TO THE FOLLOWING.


(M1) - FUSE BLOCK- JUNCTION BOX (J/B)


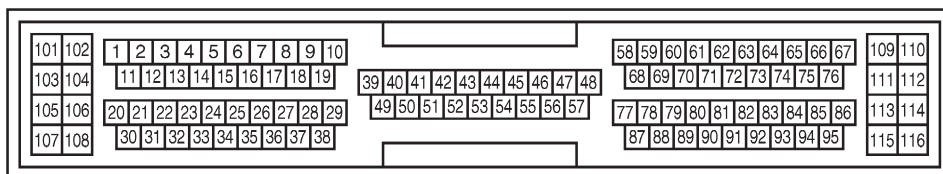


YEC989

Diagnostic Procedure

NJEC1246

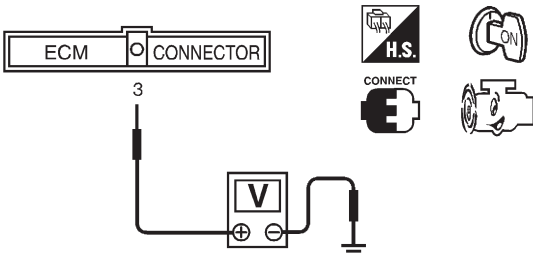1	CHECK OVERALL FUNCTION							
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and drive the vehicle at over 70 km/h (43 MPH) for 2 consecutive minutes. 2. Stop vehicle and keep the engine running. 3. Set the voltmeter probe between ECM terminals 3 [HO2S2 HTR (B1) signal] and ground. 4. Check the voltage under the following conditions. 								
								
<table border="1" style="margin-left: auto; margin-right: 0;"> <thead> <tr> <th style="width: 50%;">Conditions</th> <th style="width: 50%;">Voltage</th> </tr> </thead> <tbody> <tr> <td>At idle</td> <td>0 - 1V</td> </tr> <tr> <td>Engine speed is above 3,600 rpm.</td> <td>Battery voltage</td> </tr> </tbody> </table>			Conditions	Voltage	At idle	0 - 1V	Engine speed is above 3,600 rpm.	Battery voltage
Conditions	Voltage							
At idle	0 - 1V							
Engine speed is above 3,600 rpm.	Battery voltage							
SEF241Z								
OK or NG								
OK	▶	INSPECTION END						
NG	▶	GO TO 2.						

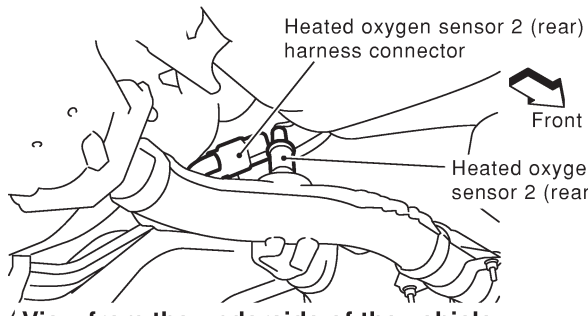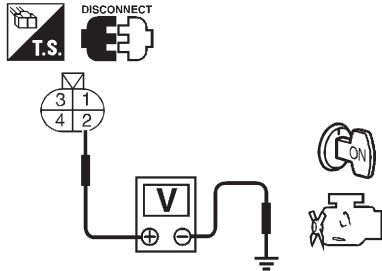2	CHECK POWER SUPPLY	
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect heated oxygen sensor 2 (rear) harness connector. 		
		
NEF345A		
<ol style="list-style-type: none"> 3. Turn ignition switch "ON". 4. Check voltage between terminal 2 and ground. 		
		
SEF218W		
OK or NG		
OK	▶	GO TO 4.
NG	▶	GO TO 3.

HEATED OXYGEN SENSOR 2 HEATER (REAR)

QG


Diagnostic Procedure (Cont'd)

3	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none">● Harness connectors M169, F113● Harness for open or short between heated oxygen sensor 2 (rear) and fuse● 10A fuse	
	▶ Repair harness or connectors.
4	CHECK GROUND CIRCUIT
1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between heated oxygen sensor 2 (rear) harness connector terminal 3 and ECM terminal 3. Refer to wiring diagram. Continuity should exist. 4. Also check harness for short to ground and short to power.	
OK or NG	
OK	▶ GO TO 6.
NG	▶ GO TO 5.
5	DETECT MALFUNCTIONING PART
Check the harness for open or short between heated oxygen sensor 2 heater (rear) and ECM.	
	▶ Repair open circuit or short to ground or short to power in harness or connectors.
6	CHECK HEATED OXYGEN SENSOR 2 HEATER (REAR)
Refer to "Component Inspection", EC-393.	
OK or NG	
OK	▶ GO TO 7.
NG	▶ Replace heated oxygen sensor 2 (rear).
7	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.	
	▶ INSPECTION END

HEATED OXYGEN SENSOR 2 HEATER (REAR)

QG

Component Inspection

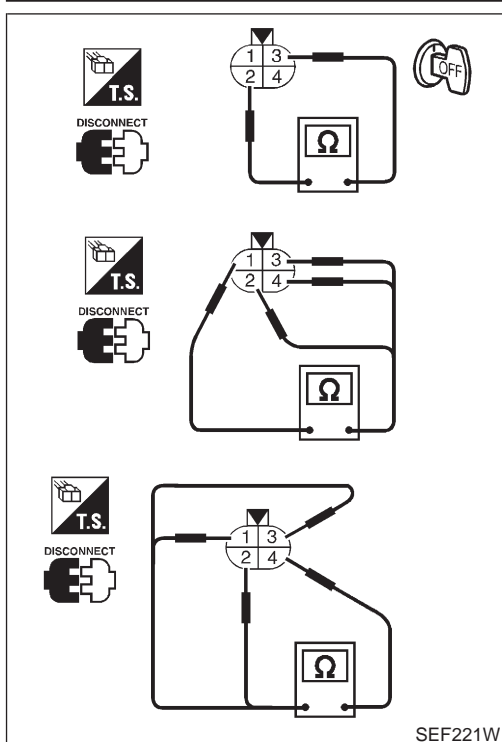

Component Inspection

HEATED OXYGEN SENSOR 2 HEATER (REAR)

NJEC1247

NJEC1247S01

Check the following.

1. Check resistance between terminals 1 and 4.
Resistance: 2.3 - 4.3Ω at 25°C (77°F)
2. Check continuity.

Terminal No.	Continuity
1 and 2, 3, 4	No
4 and 1, 2, 3	

If NG, replace the heated oxygen sensor 2 (rear).


CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool and approved anti-seize lubricant.

CRANKSHAFT POSITION SENSOR (POS)

QG

Component Description

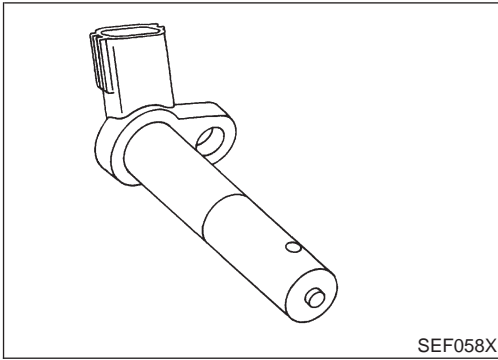

Component Description

NJEC1741

The crankshaft position sensor (POS) is located on the right-rear wall of the cylinder block in relation to the signal plate at the rear end of the crankshaft.


The sensor consists of a permanent magnet, and hall IC.

When the engine is running, the high and low parts of the teeth cause the gap with the sensor to change.

The changing gap causes the magnetic field near the sensor to change.

Due to the changing magnetic field, the voltage from the sensor changes.

The ECM receives the voltage signal and detects the fluctuation of the engine revolution.

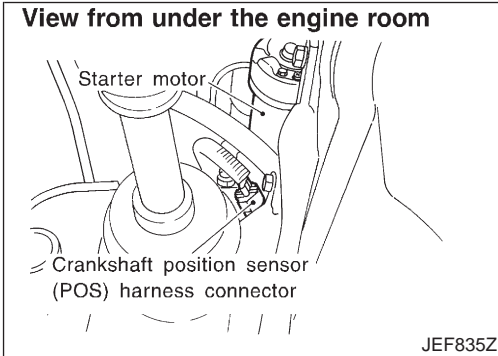



ECM Terminals and Reference Value

NJEC1742

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

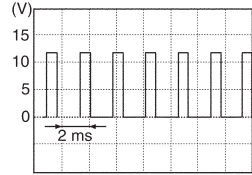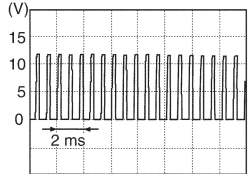TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (AC Voltage)
85	R	Crankshaft position sensor (POS)	[Engine is running] <ul style="list-style-type: none"> • Warm-up condition • Idle speed 	3 - 4V  SEF979W
			[Engine is running] <ul style="list-style-type: none"> • Engine speed is 2,000 rpm 	3 - 4V  SEF980W

CRANKSHAFT POSITION SENSOR (POS)



QG

Wiring Diagram


Wiring Diagram

NJEC1743

EC-CKPS-01

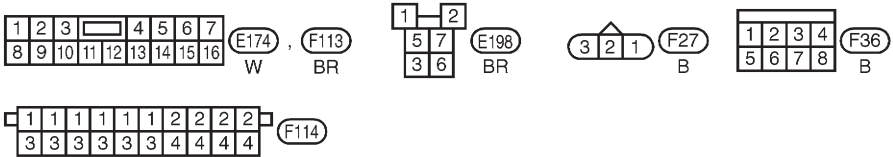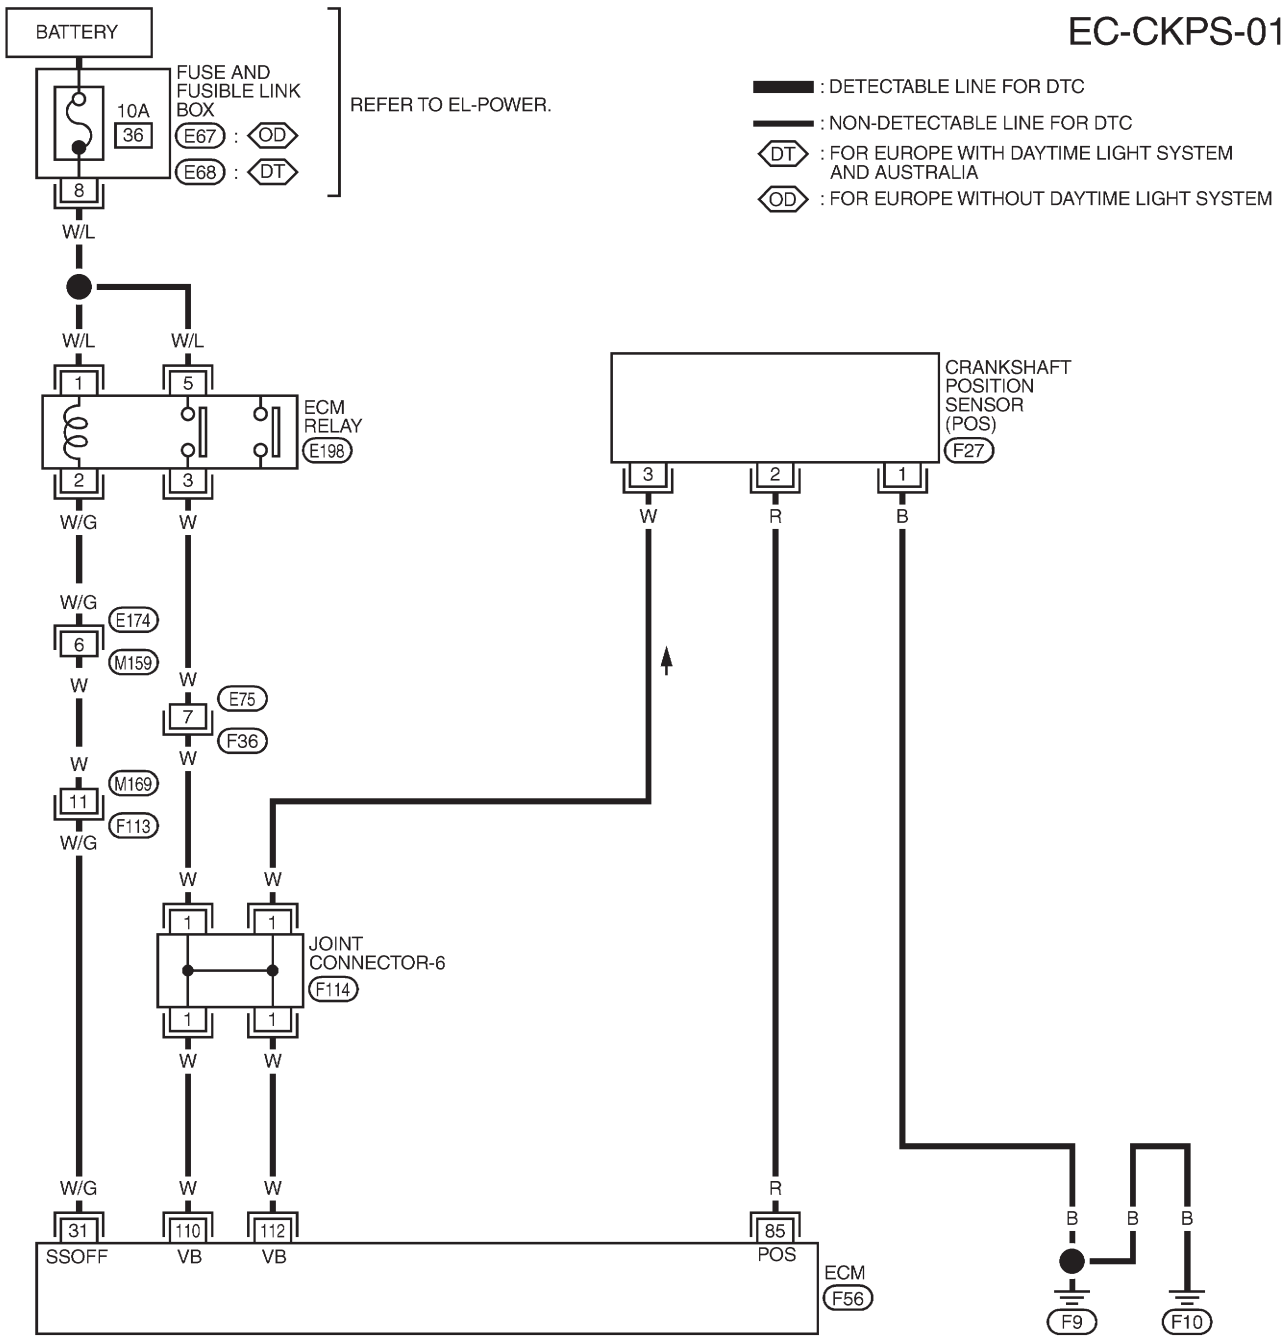



REFER TO THE FOLLOWING.
 E67, E68 - FUSE AND FUSIBLE LINK BOX

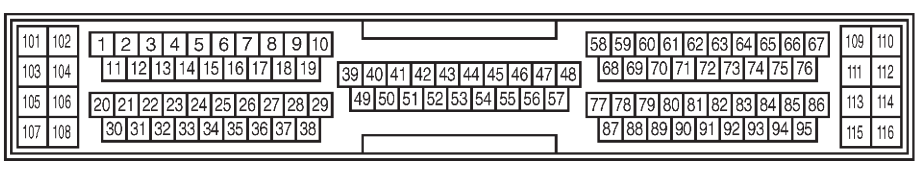


YEC990

Diagnostic Procedure

NJE1744

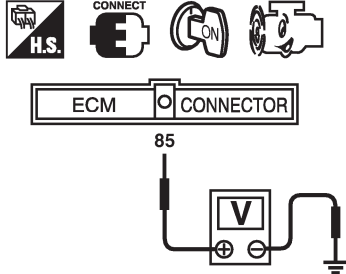
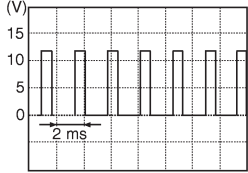
1	CHECK OVERALL FUNCTION		
<p>1. Start engine and let it idle. 2. Check voltage between ECM terminal 85 and ground.</p>			
			
<p>Voltage is 3 to 4V.</p> 			
SEF761Z			
OK or NG			
OK	▶	INSPECTION END	
NG	▶	GO TO 2.	

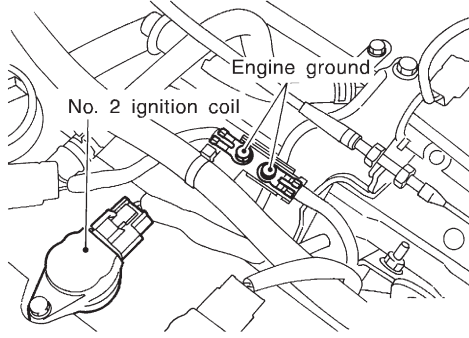2	RETIGHTEN GROUND SCREWS		
<p>1. Turn ignition switch "OFF". 2. Loosen and retighten engine ground screws.</p>			
			
JEF104Y			
▶		GO TO 3.	

CRANKSHAFT POSITION SENSOR (POS)

QG

Diagnostic Procedure (Cont'd)

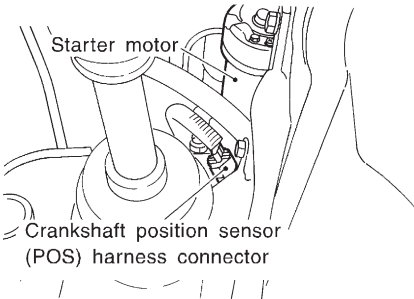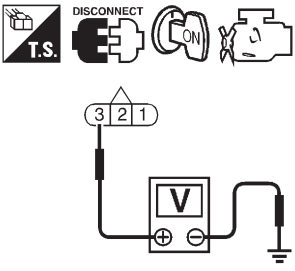
3	CHECK POWER SUPPLY
1. Disconnect crankshaft position sensor harness connector.	
<p style="text-align: center;">View from under the engine room</p>  <p style="text-align: right;">JEF835Z</p>	
2. Turn ignition switch "ON". 3. Check voltage between terminal 3 and ground with CONSULT-II or tester.	
 <p style="text-align: right;">Voltage: Battery voltage</p> <p style="text-align: right;">SEF113Y</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 5.
NG	▶ GO TO 4.

4	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none">● Joint connector-6● Harness for open or short between joint connector and ECM relay● Harness for open or short between crankshaft position sensor and joint connector● Harness for open or short between joint connector and ECM● ECM relay	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

CRANKSHAFT POSITION SENSOR (POS)

QG

Diagnostic Procedure (Cont'd)

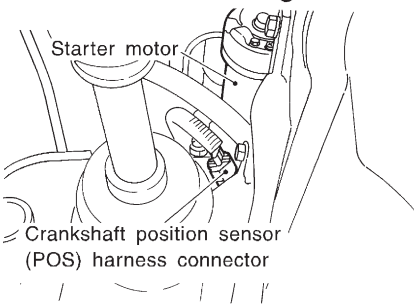5	CHECK INPUT SIGNAL CIRCUIT							
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connectors.</p>								
<p>View from under the engine room</p> 								
<p>3. Check continuity between ECM terminal 85 and crankshaft position sensor harness connector terminal 2. Refer to wiring diagram. Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>								
<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td>GO TO 6.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>Repair open circuit or short to ground or short to power in harness or connectors.</td> </tr> </table>			OK	▶	GO TO 6.	NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.
OK	▶	GO TO 6.						
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.						

JEF835Z

6	CHECK GROUND CIRCUIT							
<p>1. Reconnect ECM harness connector. 2. Check harness continuity between terminal 1 and engine ground. Refer to wiring diagram. Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>								
<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td>GO TO 8.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 7.</td> </tr> </table>			OK	▶	GO TO 8.	NG	▶	GO TO 7.
OK	▶	GO TO 8.						
NG	▶	GO TO 7.						

7	DETECT MALFUNCTIONING PART				
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness for open between crankshaft position sensor harness connector terminal 1 and engine ground. 					
<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;"></td> <td style="width: 5%; text-align: center;">▶</td> <td>Repair open circuit or short to power in harness or connectors.</td> </tr> </table>				▶	Repair open circuit or short to power in harness or connectors.
	▶	Repair open circuit or short to power in harness or connectors.			


8	CHECK CRANKSHAFT POSITION SENSOR							
<p>Refer to "Component Inspection", EC-399.</p> <p style="text-align: center;">OK or NG</p>								
<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td>GO TO 9.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>Replace crankshaft position sensor.</td> </tr> </table>			OK	▶	GO TO 9.	NG	▶	Replace crankshaft position sensor.
OK	▶	GO TO 9.						
NG	▶	Replace crankshaft position sensor.						

9	CHECK INTERMITTENT INCIDENT				
<p>Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.</p>					
<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;"></td> <td style="width: 5%; text-align: center;">▶</td> <td>INSPECTION END</td> </tr> </table>				▶	INSPECTION END
	▶	INSPECTION END			

CRANKSHAFT POSITION SENSOR (POS)

QG

Component Inspection

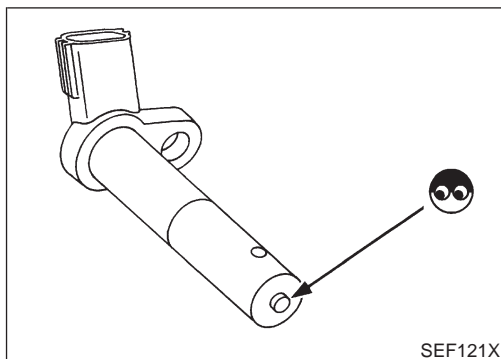


Component Inspection

CRANKSHAFT POSITION SENSOR (POS)

NJEC1745

NJEC1745S01

1. Disconnect crankshaft position sensor (POS) harness connector.
2. Loosen the fixing bolt of the sensor.
3. Remove the sensor.
4. Visually check the sensor for chipping.

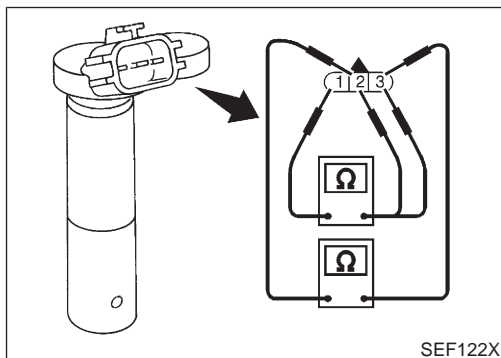

5. Check resistance as shown in the figure.

Terminal No. (Polarity)	Resistance Ω [at 25°C (77°F)]
3 (+) - 1 (-)	Except 0 or ∞
2 (+) - 1 (-)	
3 (+) - 2 (-)	

If NG, replace crankshaft position sensor.

Description SYSTEM DESCRIPTION


NJEC1746


NJEC1746S01

Sensor	Input Signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS)	Engine speed	EGR volume control	EGR volume control valve
Camshaft position sensor (PHASE)	Engine speed and cylinder number		
Mass air flow sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Ignition switch	Start signal		
Throttle position sensor	Throttle position		
Vehicle speed sensor	Vehicle speed		
Battery	Battery voltage		
Air conditioner switch	Air conditioner operation		
Power steering oil pressure switch	Power steering load signal		
Electrical load	Electrical load signal		
PNP switch	Park/Neutral position signal		

This system controls flow rate of EGR led from exhaust manifold to intake manifold. The opening of the EGR by-pass passage in the EGR volume control valve changes to control the flow rate. A built-in step motor moves the valve in steps corresponding to the ECM output pulses. The opening of the valve varies for optimum engine control. The optimum value stored in the ECM is determined by considering various engine conditions. The EGR volume control valve remains close under the following conditions.

- Low engine coolant temperature
- Engine starting
- High-speed engine operation
- Extremely light load engine operation
- Engine idling
- Excessively high engine coolant temperature
- Wide open throttle
- Mass air flow sensor malfunction
- Low battery voltage

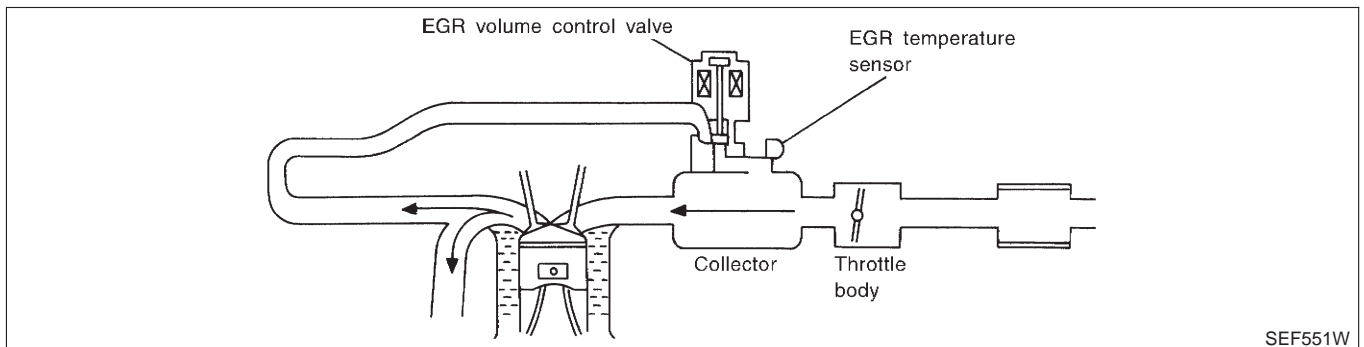

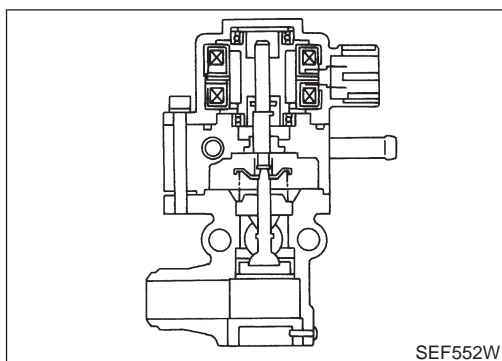


COMPONENT DESCRIPTION

EGR Volume Control Valve

NJEC1746S02

NJEC1746S0201


The EGR volume control valve uses a step motor to control the flow rate of EGR from exhaust manifold. This motor has four winding phases. It operates according to the output pulse signal of the ECM. Two windings are turned ON and OFF in sequence. Each time an ON pulse is issued, the valve opens or closes, changing the flow rate. When no change in the flow rate is needed, the ECM does not issue the pulse signal. A certain voltage signal is issued so that the valve remains at that particular opening.

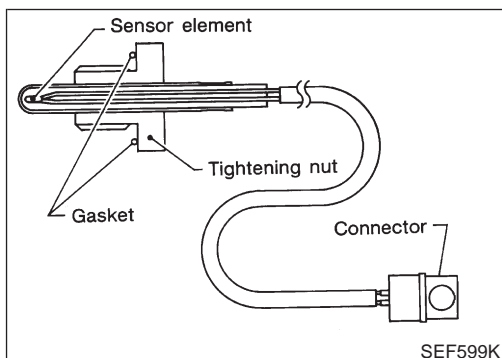

EGR Temperature Sensor

NJEC1746S0202

The EGR temperature sensor detects temperature changes in the EGR passageway. When the EGR volume control valve opens, hot exhaust gases flow, and the temperature in the passageway changes. The EGR temperature sensor is a thermistor that modifies a voltage signal sent from the ECM. This modified signal then returns to the ECM as an input signal. As the temperature increases, EGR temperature sensor resistance decreases. This sensor is not used to control the engine system.

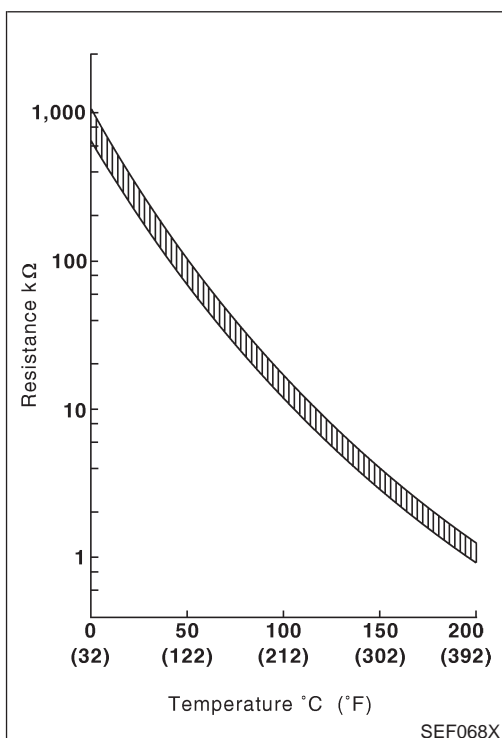

<Reference data>

EGR temperature °C (°F)	Voltage* V	Resistance MΩ
0 (32)	4.56	0.62 - 1.05
50 (122)	2.25	0.065 - 0.094
100 (212)	0.59	0.011 - 0.015

*: These data are reference values and are measured between ECM terminal 72 (EGR temperature sensor) and ground.

When EGR system is operating.

Voltage: 0 - 1.5V

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

CONSULT-II Reference Value in Data Monitor Mode

NJEC1747

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
EGR TEMP SEN	● Engine: After warming up		Less than 4.5V
EGR VOL CON/V	● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load	Idle	0 step
		Revving engine up to 3,000 rpm quickly	10 - 55 step

EGR VOLUME CONTROL SYSTEM (WHERE FITTED)

QG

ECM Terminals and Reference Value

ECM Terminals and Reference Value

NJEC1748

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
8 9 17 18	SB W/B R/Y BR/R	EGR volume control valve	[Engine is running] <ul style="list-style-type: none">● Idle speed	0 - 14V
58	B	Sensor's ground	[Engine is running] <ul style="list-style-type: none">● Warm-up condition● Idle speed	0V
72	P/B	EGR temperature sensor	[Engine is running] <ul style="list-style-type: none">● Warm-up condition● Idle speed	Less than 4.5V
			[Engine is running] <ul style="list-style-type: none">● Warm-up condition● EGR system is operating.	0 - 1V

EGR VOLUME CONTROL SYSTEM (WHERE FITTED)



QG

Wiring Diagram

Wiring Diagram

NJEC1749

EC-EGRC1-01

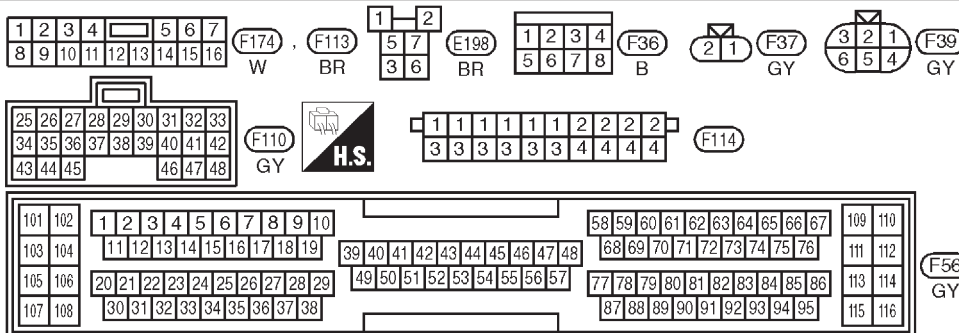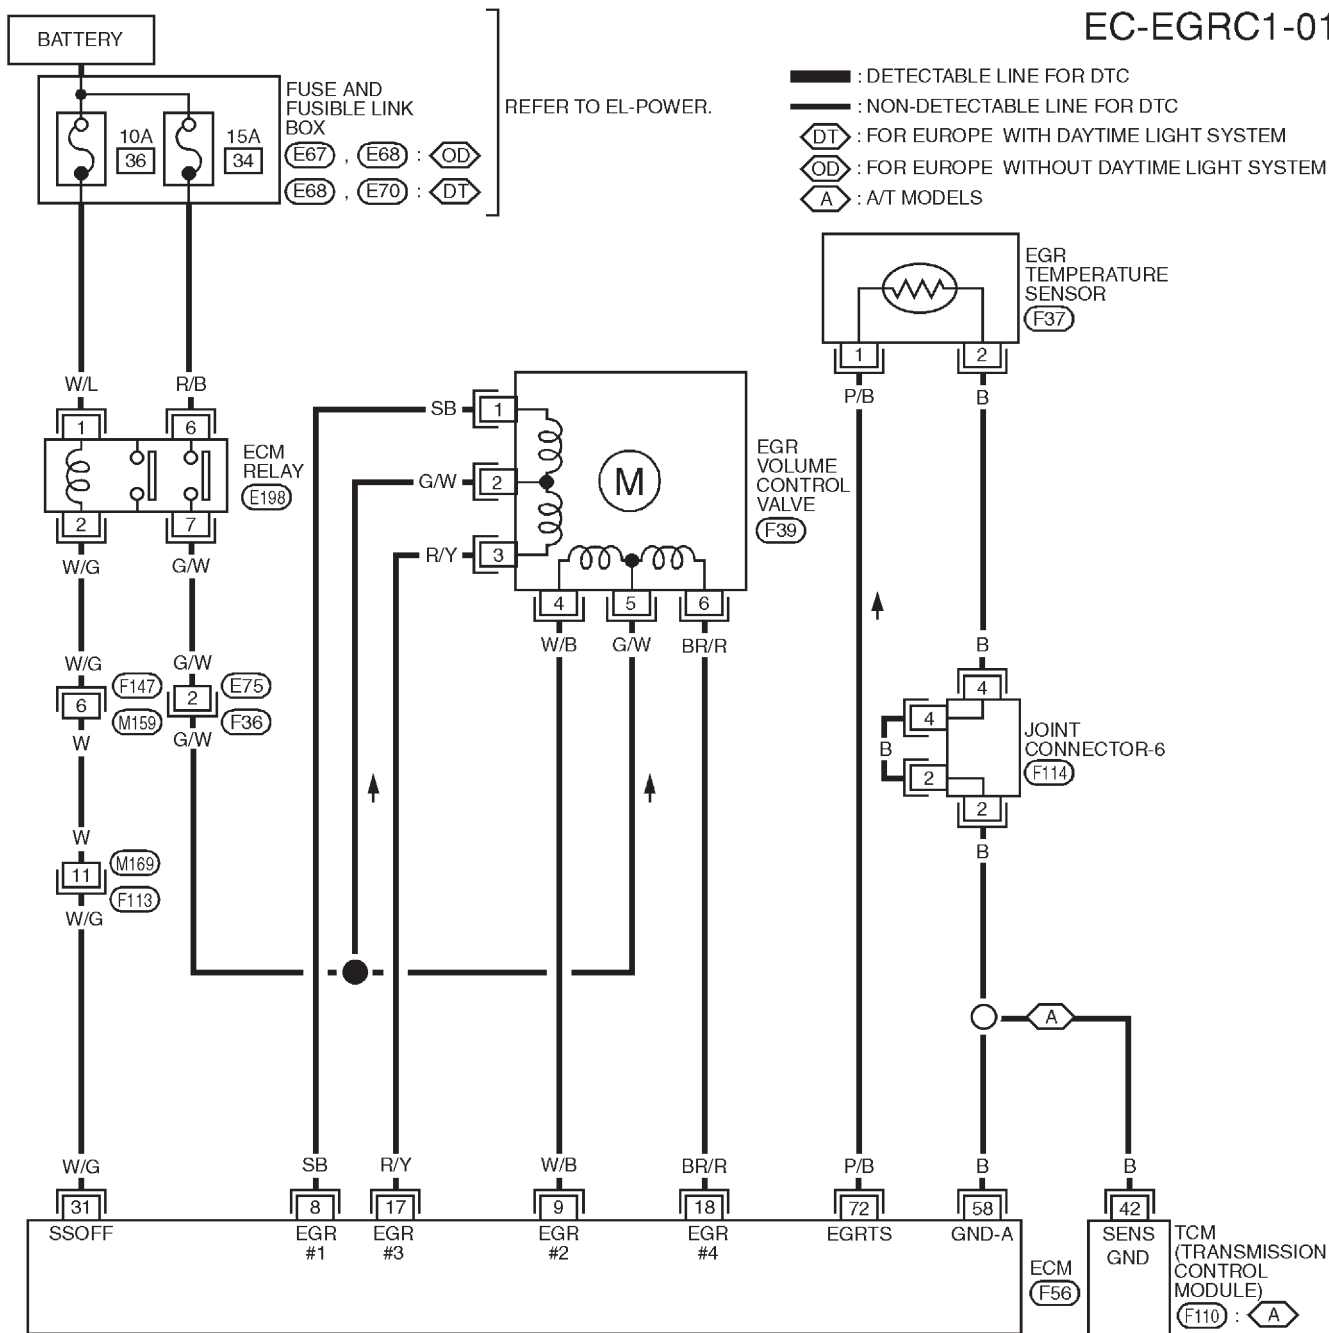

REFER TO THE FOLLOWING.
 (E67), (E68), (E70)
 - FUSE AND FUSIBLE LINK BOX

YEC975

EGR VOLUME CONTROL SYSTEM (WHERE FITTED)

QG

Diagnostic Procedure

Diagnostic Procedure

NJE1750

1	INSPECTION START	
Do you have CONSULT-II?		
Yes or No		
Yes	▶	GO TO 2.
No	▶	GO TO 4.



2	CHECK OVERALL FUNCTION-I							
<p>🔧 With CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch "ON". 2. Select "DATA MONITOR" mode with CONSULT-II. 3. Confirm that "COOLAN TEMP/S" indicates less than 40°C (104°F). If the indication is out of range, cool the engine down. 								
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2" style="text-align: center;">DATA MONITOR</th> </tr> <tr> <th style="text-align: center;">MONITOR</th> <th style="text-align: center;">NO DTC</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">COOLAN TEMP/S</td> <td style="text-align: center;">XXX °C</td> </tr> </tbody> </table>			DATA MONITOR		MONITOR	NO DTC	COOLAN TEMP/S	XXX °C
DATA MONITOR								
MONITOR	NO DTC							
COOLAN TEMP/S	XXX °C							
SEF013Y								
<ol style="list-style-type: none"> 4. Start engine and let it idle. 5. Make sure that "EGR TEMP SEN" in "DATA MONITOR" mode indicates more than 3V. Print out the screen or note the indication. 								
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2" style="text-align: center;">DATA MONITOR</th> </tr> <tr> <th style="text-align: center;">MONITOR</th> <th style="text-align: center;">NO DTC</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">EGR TEMP SEN</td> <td style="text-align: center;">XXX V</td> </tr> </tbody> </table>			DATA MONITOR		MONITOR	NO DTC	EGR TEMP SEN	XXX V
DATA MONITOR								
MONITOR	NO DTC							
EGR TEMP SEN	XXX V							
SEF014Y								
OK or NG								
OK	▶	GO TO 3.						
NG	▶	GO TO 6.						

EGR VOLUME CONTROL SYSTEM (WHERE FITTED)

QG

Diagnostic Procedure (Cont'd)


3	CHECK OVERALL FUNCTION-II																				
<p>With CONSULT-II</p> <ol style="list-style-type: none"> 1. Warm up engine to normal operating temperature. 2. Select "EGR VOL CONT/V" in "ACTIVE TEST" mode with CONSULT-II. 3. Keep engine speed at 2,000 rpm and set the "EGR VOL CONT/V" opening to "20 step". 4. Make sure the "EGR TEMP SEN" indicated is lower than the value indicated in test No. 2 by 1.0V or more. 																					
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr><th colspan="2">ACTIVE TEST</th></tr> <tr><td>EGR VOL CONT/V</td><td>20 step</td></tr> <tr><th colspan="2">MONITOR</th></tr> <tr><td>ENG SPEED</td><td>XXX rpm</td></tr> <tr><td>EGR TEMP SEN</td><td>XXX V</td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table>		ACTIVE TEST		EGR VOL CONT/V	20 step	MONITOR		ENG SPEED	XXX rpm	EGR TEMP SEN	XXX V										
ACTIVE TEST																					
EGR VOL CONT/V	20 step																				
MONITOR																					
ENG SPEED	XXX rpm																				
EGR TEMP SEN	XXX V																				
SEF015Y																					
OK or NG																					
OK	▶ INSPECTION END																				
NG	▶ GO TO 6.																				

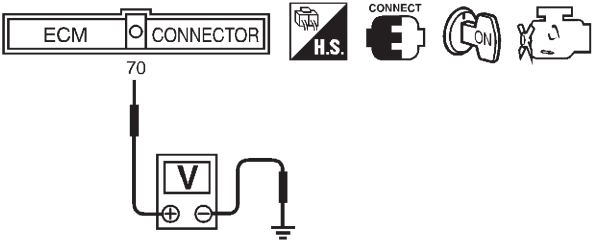
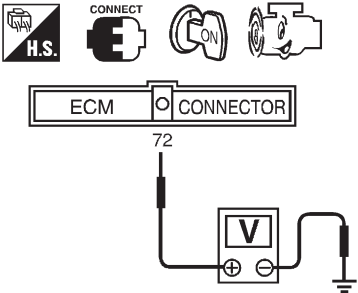
4	CHECK OVERALL FUNCTION-I
<p>Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch "ON". 2. Confirm that the voltage between ECM terminal 70 (Engine coolant temperature sensor signal) and ground is more than 2.72V. If the voltage is out of range, cool the engine down. 	
	
SEF016Y	
<ol style="list-style-type: none"> 3. Start engine and let it idle. 4. Make sure that the voltage between ECM terminal 72 (EGR temperature sensor signal) and ground is more than 3V. 	
	
SEF755Z	
OK or NG	
OK	▶ GO TO 5.
NG	▶ GO TO 6.

EGR VOLUME CONTROL SYSTEM (WHERE FITTED)

QG

Diagnostic Procedure (Cont'd)

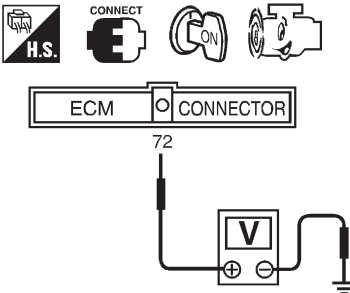5	CHECK OVERALL FUNCTION-II
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Warm up engine to normal operating temperature. 2. Rev engine from idle up to about 3,000 rpm two to three times. 3. Make sure the voltage between ECM terminal 72 and ground is lower than the voltage measured in test No. 4 by 1.0V or more. <div style="text-align: center; margin: 10px 0;">  </div> <p style="text-align: right; margin-right: 20px;">SEF755Z</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ INSPECTION END
NG	▶ GO TO 6.

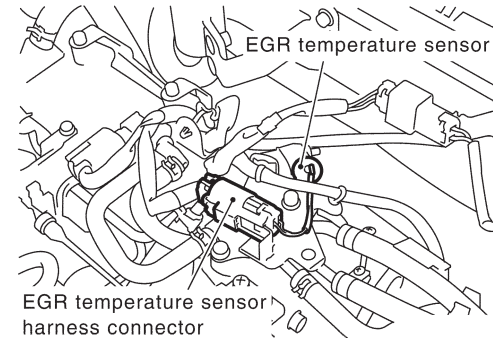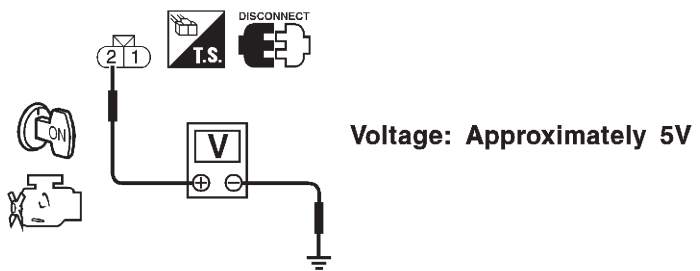6	CHECK EGR TEMPERATURE SENSOR POWER SUPPLY
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect EGR temperature sensor harness connector. <div style="text-align: center; margin: 10px 0;">  </div> <p style="text-align: right; margin-right: 20px;">SEF127X</p> <ol style="list-style-type: none"> 3. Turn ignition switch "ON". 4. Check voltage between terminal 1 and ground with CONSULT-II or tester. <div style="text-align: center; margin: 10px 0;">  <p style="text-align: right; margin-right: 20px;">SEF896X</p> <p style="text-align: center;">OK or NG</p> </div>	
OK	▶ GO TO 7.
NG	▶ Repair harness or connectors.

EGR VOLUME CONTROL SYSTEM (WHERE FITTED)


QG

Diagnostic Procedure (Cont'd)

7	CHECK EGR TEMPERATURE SENSOR GROUND CIRCUIT	
<p>1. Turn ignition switch "OFF".</p> <p>2. Check harness continuity between EGR temperature sensor harness terminal 2 and engine ground. Refer to wiring diagram. Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 9.
NG	▶	GO TO 8.

8	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness for open or short between EGR temperature sensor and ECM ● Harness for open or short between TCM (Transmission Control Module) and ECM ● Joint connector-6 		
▶		Repair open circuit or short to ground or short to power in harness or connector.

9	CHECK EGR TEMPERATURE SENSOR	
Refer to "Component Inspection", EC-410.		
OK or NG		
OK	▶	GO TO 10.
NG	▶	Replace EGR temperature sensor.

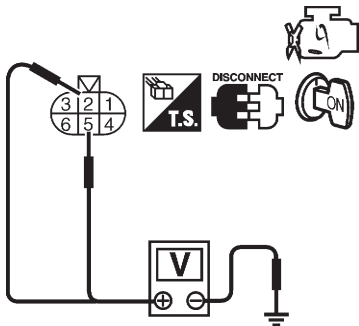10	CHECK EGR VOLUME CONTROL VALVE POWER SUPPLY	
<p>1. Disconnect EGR volume control valve harness connector.</p> <p>2. Turn ignition switch "ON".</p> <p>3. Check voltage between terminals 2, 5 and ground with CONSULT-II or tester.</p>		
		
OK or NG		
OK	▶	GO TO 12.
NG	▶	GO TO 11.

YEC056A

11	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● 15A fuse ● Harness connectors E75, F36 ● Harness for open or short between fuse and ECM relay ● ECM relay ● Harness for open or short between EGR volume control valve and ECM relay. 		
▶		Repair harness or connectors, or replace fuse or ECM relay.

EGR VOLUME CONTROL SYSTEM (WHERE FITTED)


QG*Diagnostic Procedure (Cont'd)*

12 CHECK OUTPUT SIGNAL CIRCUIT	
1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 8 and EGR volume control valve terminal 1, ECM terminal 9 and EGR volume control valve terminal 4, ECM terminal 17 and EGR volume control valve terminal 3, ECM terminal 18 and EGR volume control valve terminal 6. Refer to wiring diagram. Continuity should exist.	
4. Also check harness for short to ground and short to power. OK or NG	
OK	▶ GO TO 13.
NG	▶ Repair open circuit, short to ground or short to power in harness connectors.

13 CHECK EGR PASSAGE	
Check EGR passage for clogging and cracks. OK or NG	
OK	▶ GO TO 14.
NG	▶ Repair or replace EGR passage.

14 CHECK EGR VOLUME CONTROL VALVE	
Refer to "COMPONENT INSPECTION", EC-409. OK or NG	
OK	▶ GO TO 15.
NG	▶ Replace EGR volume control valve.

15 CHECK INTERMITTENT INCIDENT	
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.	
▶	INSPECTION END

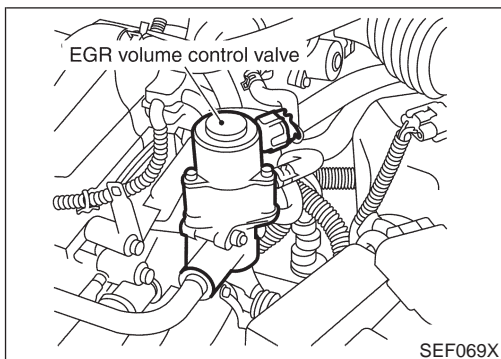

Component Inspection EGR VOLUME CONTROL VALVE

NJEC1751

NJEC1751S01

④ With CONSULT-II

- 1) Disconnect EGR volume control valve harness connector.
- 2) Check resistance between the following terminals.
terminal 2 and terminals 1, 3
terminal 5 and terminals 4, 6

Temperature °C (°F)	Resistance Ω
20 (68)	20 - 24


- 3) Reconnect EGR volume control valve harness connector.
- 4) Remove EGR volume control valve from cylinder head.
(The EGR volume control valve harness connector should remain connected.)
- 5) Turn ignition switch "ON".
- 6) Perform "EGR VOL CONT/V" in "ACTIVE TEST" mode with CONSULT-II. Check that EGR volume control valve shaft moves smoothly forward and backward according to the valve opening.
If NG, replace the EGR volume control valve.

⊗ Without CONSULT-II

- 1) Disconnect EGR volume control valve harness connector.
- 2) Check resistance between the following terminals.
terminal 2 and terminals 1, 3
terminal 5 and terminals 4, 6


Temperature °C (°F)	Resistance Ω
20 (68)	20 - 24

- 3) Turn ignition switch "ON" and "OFF". Check that EGR volume control valve shaft moves smoothly forward and backward according to the ignition switch position.
If NG, replace the EGR volume control valve.

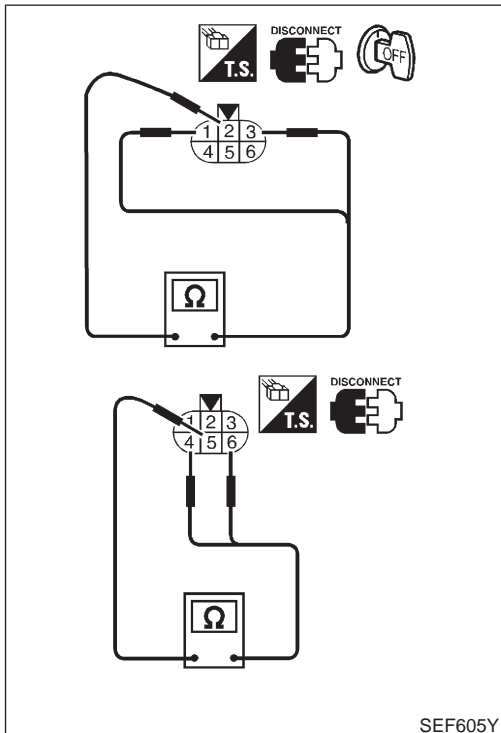

ACTIVE TEST	
EGR VOL CONT/V	20 step
MONITOR	
ENG SPEED	XXX rpm
EGR TEMP SEN	XXX V


SEF015Y

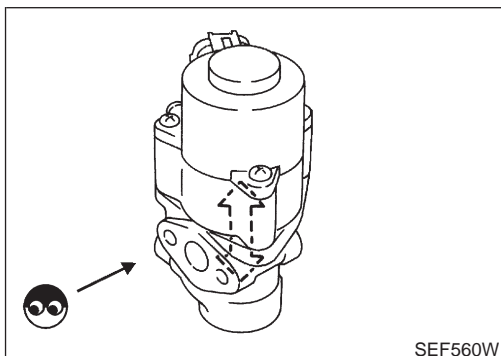

EGR VOLUME CONTROL SYSTEM (WHERE FITTED)

QG

Component Inspection (Cont'd)

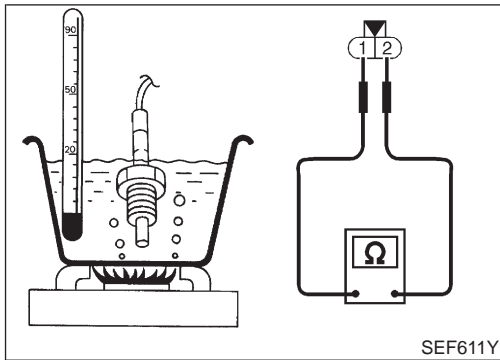

SEF611Y

EGR TEMPERATURE SENSOR


NJEC1751S02

Check resistance change and resistance value.

<Reference data>

EGR temperature °C (°F)	Voltage V	Resistance MΩ
0 (32)	4.56	0.62 - 1.05
50 (122)	2.25	0.065 - 0.094
100 (212)	0.59	0.011 - 0.015

If NG, replace EGR temperature sensor.

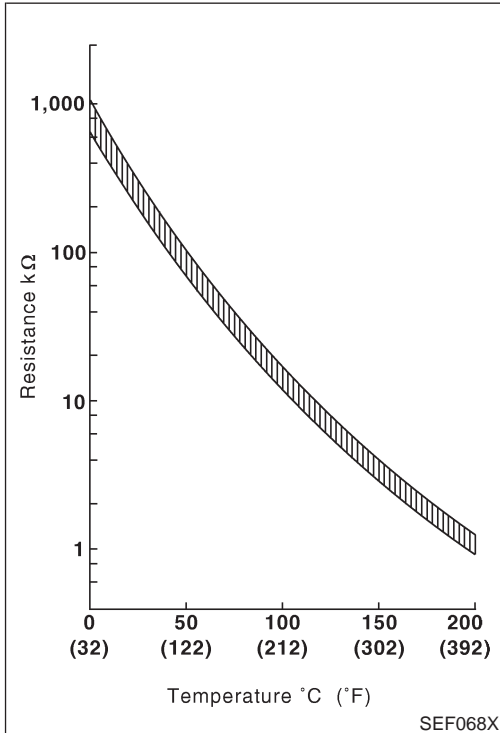

SEF068X

Description SYSTEM DESCRIPTION

NJEC1752

NJEC1752S01


Sensor	Input Signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS)	Engine speed	EVAP canister purge control	EVAP canister purge volume control solenoid valve
Camshaft position sensor (PHASE)	Engine speed and cylinder number		
Mass air flow sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Battery	Battery voltage		
Ignition switch	Start signal		
Closed throttle position switch (If so equipped)	Closed throttle position		
Throttle position sensor	Throttle position		
Heated oxygen sensor 1 (front)	Density of oxygen in exhaust gas (Mixture ratio feedback signal)		
Vehicle speed sensor	Vehicle speed		

This system controls flow rate of fuel vapor from the EVAP canister. The opening of the vapor by-pass passage in the EVAP canister purge volume control solenoid valve changes to control the flow rate. The EVAP canister purge volume control solenoid valve repeats ON/OFF operation according to the signal sent from the ECM. The opening of the valve varies for optimum engine control. The optimum value stored in the ECM is determined by considering various engine conditions. When the engine is operating, the flow rate of fuel vapor from the EVAP canister is regulated as the air flow changes.

COMPONENT DESCRIPTION

NJEC1752S02

The EVAP canister purge volume control solenoid valve uses a ON/OFF duty to control the flow rate of fuel vapor from the EVAP canister. The EVAP canister purge volume control solenoid valve is moved by ON/OFF pulses from the ECM. The longer the ON pulse, the greater the amount of fuel vapor that will flow through the valve.

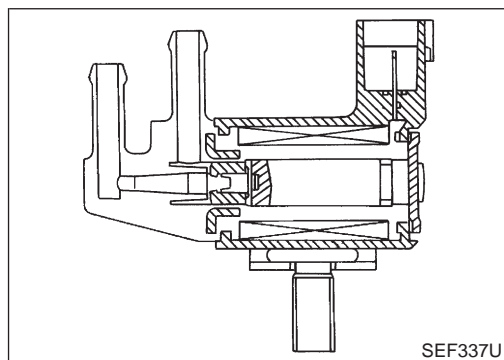

CONSULT-II Reference Value in Data Monitor Mode

NJEC1753

MONITOR ITEM	CONDITION	SPECIFICATION
PURG VOL C/V	● Engine: After warming up	Idle
	● No-load	Reving engine
		0%
		—

EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

QG

ECM Terminals and Reference Value


ECM Terminals and Reference Value

=NJE1754

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

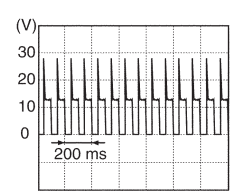TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
14	GY/L	EVAP canister purge volume control solenoid valve	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	<p>BATTERY VOLTAGE (11 - 14V)</p>
			<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● 2,000 rpm 	<p>5 - 12V</p>  <p style="text-align: right;">SEF975W</p>

EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

QG



Wiring Diagram

Wiring Diagram

NJEC1755


EC-PRGVLV-01

— : DETECTABLE LINE FOR DTC
 — : NON-DETECTABLE LINE FOR DTC

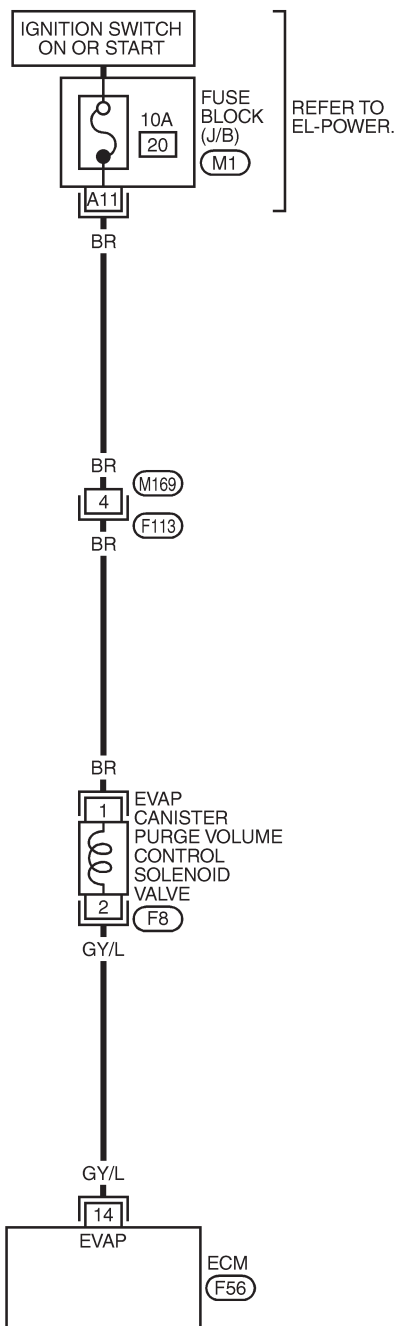

REFER TO THE FOLLOWING.

(M1) - FUSE BLOCK- JUNCTION BOX (J/B)

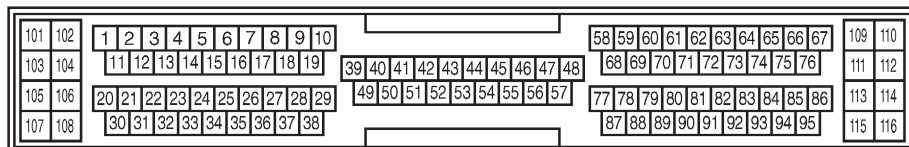

YEC991

Diagnostic Procedure

NJE1756


1	INSPECTION START	
Do you have CONSULT-II?		
Yes or No		
Yes	▶	GO TO 2.
No	▶	GO TO 3.


2	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE CONTROL FUNCTION																					
<p>🔧 With CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect the EVAP purge hose connected to the EVAP canister purge volume control solenoid valve at the EVAP canister. 3. Turn ignition switch "ON" and select "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT-II. 4. Start engine and let it idle. 5. Change the valve opening percentage touching "Qu" and "Qd" and check for vacuum existence under the following conditions. 																						
<table border="1" style="margin: 10px auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2" style="text-align: center;">ACTIVE TEST</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">PURG VOL CONT/V</td> <td style="text-align: center;">XXX %</td> </tr> <tr> <th colspan="2" style="text-align: center;">MONITOR</th> </tr> <tr> <td style="text-align: center;">ENG SPEED</td> <td style="text-align: center;">XXX rpm</td> </tr> <tr> <td style="text-align: center;">A/F ALPHA-B1</td> <td style="text-align: center;">XXX %</td> </tr> <tr> <td style="text-align: center;">HO2S1 MNTR (B1)</td> <td style="text-align: center;">LEAN</td> </tr> <tr> <td style="text-align: center;">THRTL POS SEN</td> <td style="text-align: center;">XXX V</td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> </tbody> </table>			ACTIVE TEST		PURG VOL CONT/V	XXX %	MONITOR		ENG SPEED	XXX rpm	A/F ALPHA-B1	XXX %	HO2S1 MNTR (B1)	LEAN	THRTL POS SEN	XXX V						
ACTIVE TEST																						
PURG VOL CONT/V	XXX %																					
MONITOR																						
ENG SPEED	XXX rpm																					
A/F ALPHA-B1	XXX %																					
HO2S1 MNTR (B1)	LEAN																					
THRTL POS SEN	XXX V																					
<table border="1" style="margin: 0 auto; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Conditions</th> <th style="width: 50%;">Vacuum</th> </tr> </thead> <tbody> <tr> <td style="padding: 2px;">At idle</td> <td style="padding: 2px;">Should not exist.</td> </tr> <tr> <td style="padding: 2px;">Engine speed is about 2,000 rpm.</td> <td style="padding: 2px;">Should exist.</td> </tr> </tbody> </table>			Conditions	Vacuum	At idle	Should not exist.	Engine speed is about 2,000 rpm.	Should exist.														
Conditions	Vacuum																					
At idle	Should not exist.																					
Engine speed is about 2,000 rpm.	Should exist.																					
SEC582C																						
OK or NG																						
OK	▶	GO TO 4.																				
NG	▶	GO TO 5.																				

EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

QG

Diagnostic Procedure (Cont'd)

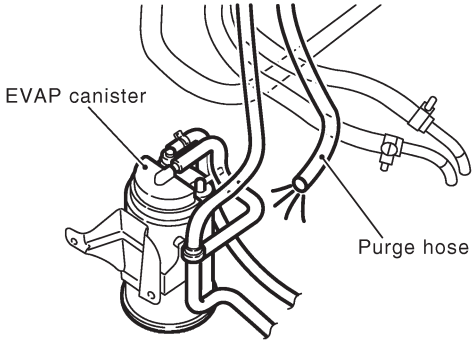

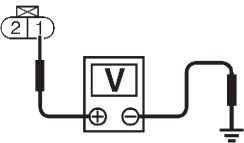
3	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE CONTROL FUNCTION							
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Turn ignition switch "OFF". 3. Disconnect the EVAP purge hose connected to the EVAP canister purge volume control solenoid valve at the EVAP canister. 4. Start engine and let it idle for at least 90 seconds. 5. Check for vacuum existence at the EVAP purge hose under the following conditions. 								
								
<table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th style="text-align: center;">Conditions</th> <th style="text-align: center;">Vacuum</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">At idle</td> <td style="text-align: center;">Should not exist.</td> </tr> <tr> <td style="text-align: center;">Engine speed is approx. 2,000 rpm.</td> <td style="text-align: center;">Should exist.</td> </tr> </tbody> </table>			Conditions	Vacuum	At idle	Should not exist.	Engine speed is approx. 2,000 rpm.	Should exist.
Conditions	Vacuum							
At idle	Should not exist.							
Engine speed is approx. 2,000 rpm.	Should exist.							
SEF760Z								
OK or NG								
OK	▶	GO TO 4.						
NG	▶	GO TO 5.						

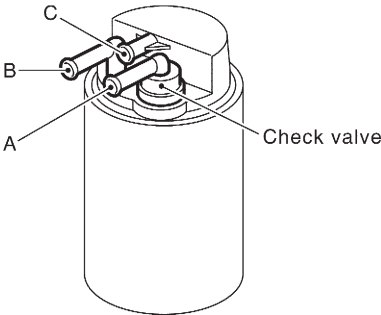4	CHECK EVAP CANISTER	
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Remove EVAP canister. 3. Block port B of EVAP canister. 4. Blow air through port A orally, and confirm that air flows freely through port C with check valve resistance. 5. Block port A of EVAP canister. 6. Blow air through port B orally, and confirm that air flows freely through port C. 		
		
SEF917W		
OK or NG		
OK	▶	INSPECTION END
NG	▶	Replace EVAP canister.

EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

QG

Diagnostic Procedure (Cont'd)

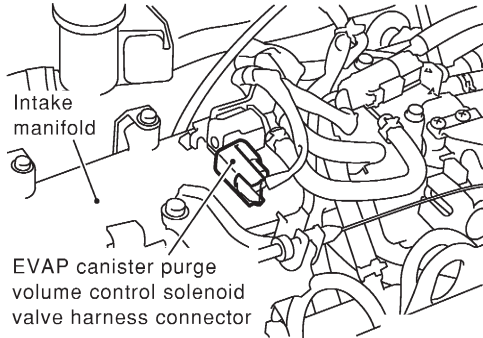5	CHECK POWER SUPPLY	
<p>1. Turn ignition switch "OFF". 2. Disconnect EVAP canister purge volume control solenoid valve harness connector.</p>		
 <p style="text-align: center;">Intake manifold EVAP canister purge volume control solenoid valve harness connector</p>		
SEF076X		
<p>3. Turn ignition switch "ON". 4. Check voltage between terminals 1 and engine ground with CONSULT-II or tester.</p>		
		
<p>Voltage: Battery voltage</p> 		
SEF606Y		
OK or NG		
OK	▶	GO TO 7.
NG	▶	GO TO 6.

6	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M169, F113 ● 10A fuse ● Harness for open or short between EVAP canister purge volume control solenoid valve and fuse 		
▶		Repair harness or connectors.

7	CHECK OUTPUT SIGNAL CIRCUIT	
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 14 and terminal 2. Refer to wiring diagram. Continuity should exist.</p>		
<p>4. Also check harness for short to ground and short to power.</p>		
OK or NG		
OK	▶	GO TO 8.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

QG


Diagnostic Procedure (Cont'd)

8	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE	
Refer to "Component Inspection", EC-417.		
OK or NG		
OK	▶	GO TO 9.
NG	▶	Replace EVAP canister purge volume control solenoid valve.

9	CHECK INTERMITTENT INCIDENT	
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.		
	▶	INSPECTION END

ACTIVE TEST	
PURG VOL CONT/V	XXX %
MONITOR	
ENG SPEED	XXX rpm
A/F ALPHA-B1	XXX %
HO2S1 MNTR (B1)	LEAN
THRTL POS SEN	XXX V

SEF801Y

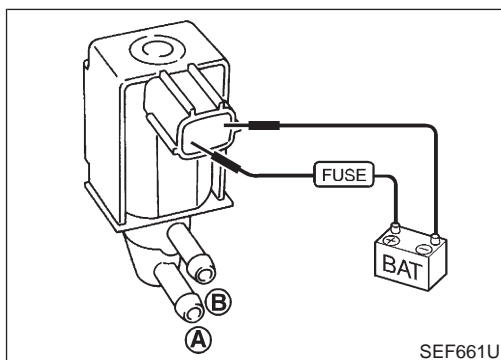

Component Inspection

NJEC1757

EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

NJEC1757S01

Ⓜ With CONSULT-II

- 1) Start engine.
- 2) Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT-II. Check that engine speed varies according to the valve opening.
If OK, inspection end. If NG, go to following step.
- 3) Check air passage continuity.

Condition PURG VOL CONT/V value	Air passage continuity between A and B
100.0%	Yes
0.0%	No

If NG, replace the EVAP canister purge volume control solenoid valve.

ⓧ Without CONSULT-II

Check air passage continuity.

Condition	Air passage continuity between A and B
12V direct current supply between terminals	Yes
No supply	No

If NG, replace the EVAP canister purge volume control solenoid valve.

IDLE AIR CONTROL VALVE (IACV) — AUXILIARY AIR CONTROL (AAC) VALVE

QG

Description


Description SYSTEM DESCRIPTION

NJEC1758

NJEC1758S01

Sensor	Input Signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS)	Engine speed	Idle air control	IACV-AAC valve
Camshaft position sensor (PHASE)	Engine speed and cylinder number		
Engine coolant temperature sensor	Engine coolant temperature		
Ignition switch	Start signal		
Throttle position sensor	Throttle position		
PNP switch	Park/Neutral position		
Air conditioner switch	Air conditioner operation		
Power steering oil pressure switch	Power steering load signal		
Battery	Battery voltage		
Vehicle speed sensor	Vehicle speed		
Cooling fan	Cooling fan operation		
Electrical load	Electrical load signal		

This system automatically controls engine idle speed to a specified level. Idle speed is controlled through fine adjustment of the amount of air which by-passes the throttle valve via IACV-AAC valve. The IACV-AAC valve changes the opening of the air by-pass passage to control the amount of auxiliary air. This valve is actuated by a step motor built into the valve, which moves the valve in the axial direction in steps corresponding to the ECM output signals. One step of IACV-AAC valve movement causes the respective opening of the air by-pass passage. (i.e. when the step advances, the opening is enlarged.) The opening of the valve is varied to allow for optimum control of the engine idling speed. The crankshaft position sensor (POS) detects the actual engine speed and sends a signal to the ECM. The ECM then controls the step position of the IACV-AAC valve so that engine speed coincides with the target value memorized in ECM. The target engine speed is the lowest speed at which the engine can operate steadily. The optimum value stored in the ECM is determined by taking into consideration various engine conditions, such as during warm up, deceleration, and engine load (air conditioner, power steering, cooling fan operation and electrical load).

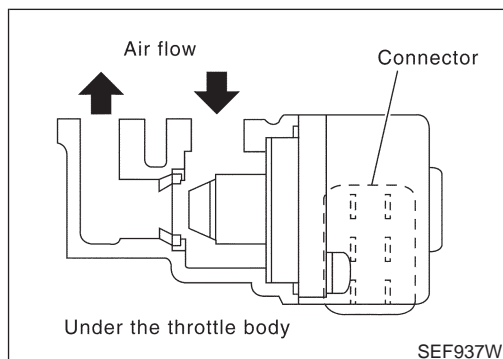

COMPONENT DESCRIPTION

NJEC1758S02

IACV-AAC Valve

NJEC1758S0201

The IACV-AAC valve is operated by a step motor for centralized control of auxiliary air supply. This motor has four winding phases and is actuated by the output signals of ECM which turns ON and OFF two windings each in sequence. Each time the IACV-AAC valve opens or closes to change the auxiliary air quantity, the ECM sends a pulse signal to the step motor. When no change in the auxiliary air quantity is needed, the ECM does not issue the pulse signal. A certain voltage signal is issued so that the valve remains at that particular opening.

IDLE AIR CONTROL VALVE (IACV) — AUXILIARY AIR CONTROL (AAC) VALVE

QG

CONSULT-II Reference Value in Data Monitor Mode

CONSULT-II Reference Value in Data Monitor Mode

NJEC1759

MONITOR ITEM	CONDITION	SPECIFICATION
IACV-AAC/V	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: OFF ● Shift lever: "N" ● No-load 	Idle
		2,000 rpm
		5 - 25 steps
		—

ECM Terminals and Reference Value

NJEC1760

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
6 7 15 16	BR LG P OR	IACV-AAC valve	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	0.1 - 14V

IDLE AIR CONTROL VALVE (IACV) — AUXILIARY AIR CONTROL (AAC) VALVE



QG

Wiring Diagram


Wiring Diagram

NJEC1761

EC-AACVLV-01

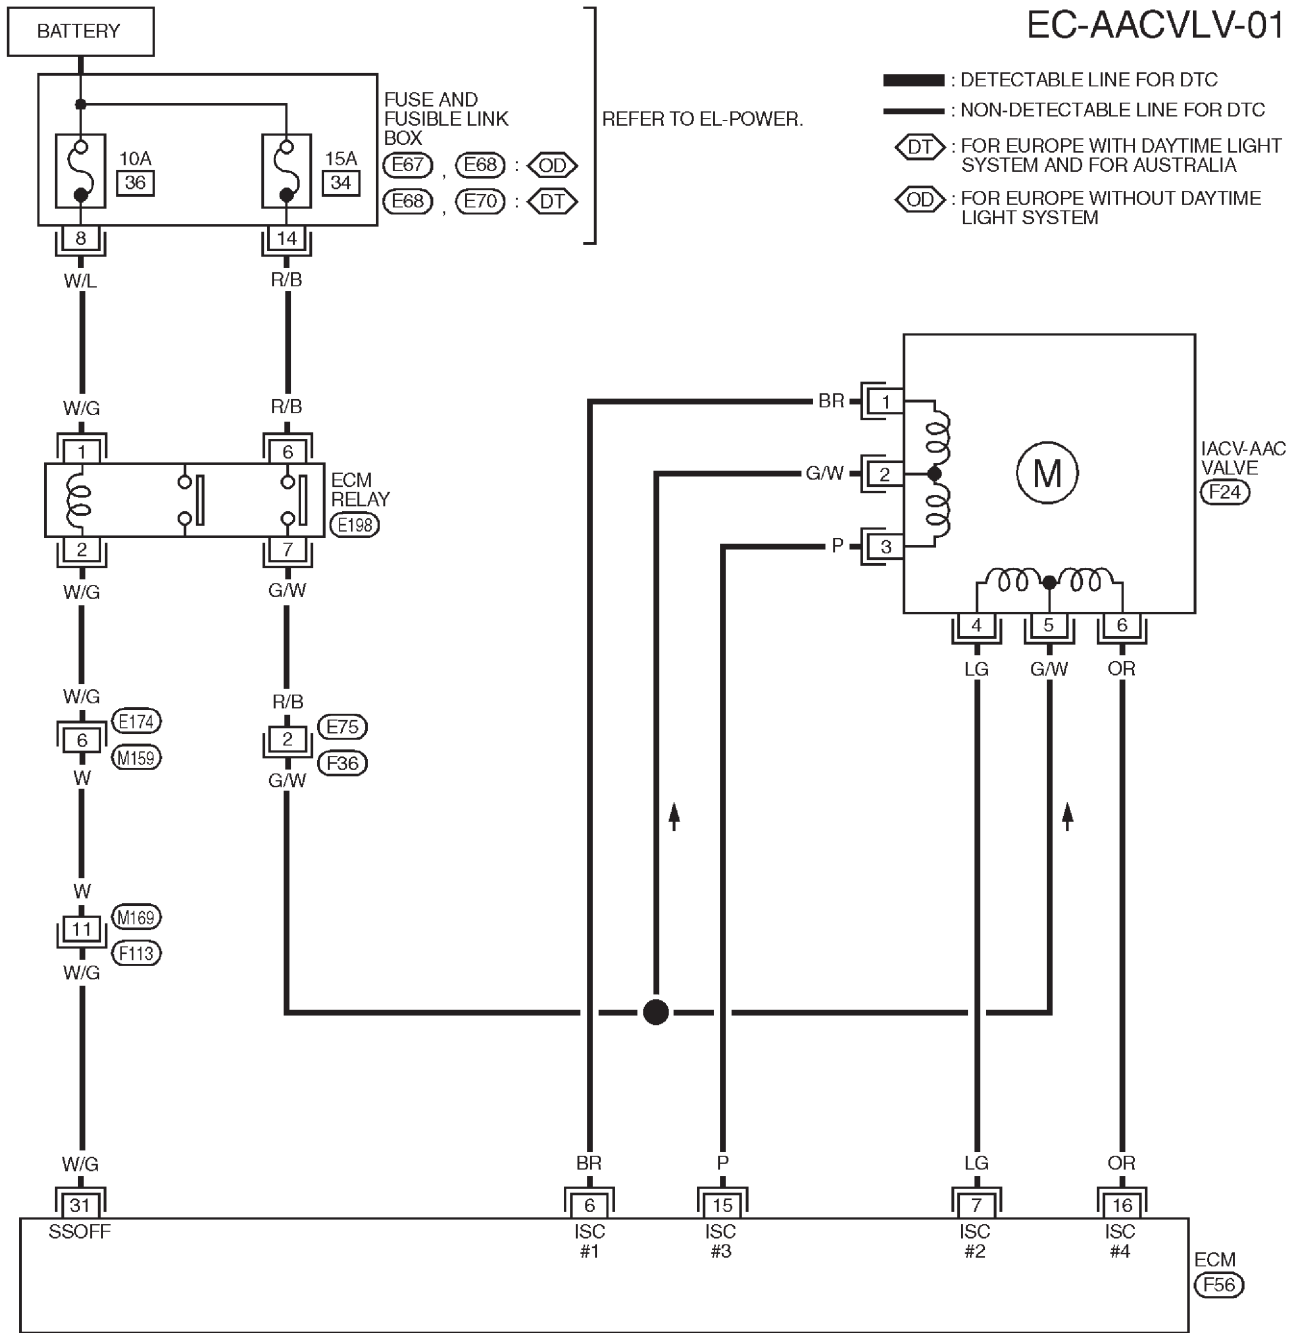

REFER TO THE FOLLOWING.
E67 , E68 , E70
 - FUSE AND FUSIBLE LINK BOX

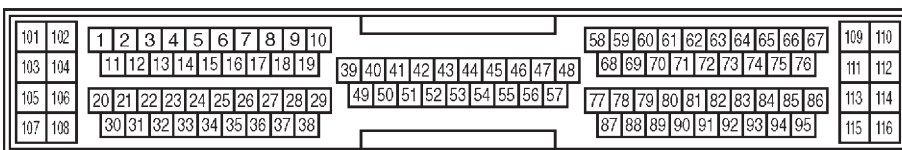

YEC992


IDLE AIR CONTROL VALVE (IACV) — AUXILIARY AIR CONTROL (AAC) VALVE



QG

Diagnostic Procedure

Diagnostic Procedure

NJE1762

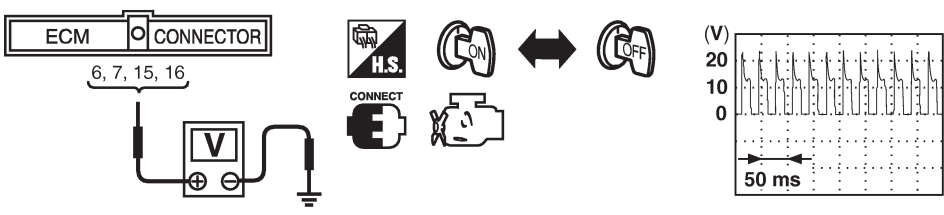1	CHECK OVERALL FUNCTION	<p>1. Turn ignition switch "OFF".</p> <p>2. Read the voltage signal between ECM terminals 6, 7, 15, 16 (IACV-AAC valve signal) and ground with an oscilloscope.</p> <p>3. Turn ignition switch "ON", wait at least 5 seconds and then "OFF".</p> <p>4. Verify that the oscilloscope screen shows the signal wave as shown below at least once every 10 seconds after turning ignition switch "OFF".</p>	
			SEF756Z
		OK or NG	
OK	▶	INSPECTION END	
NG	▶	GO TO 2.	

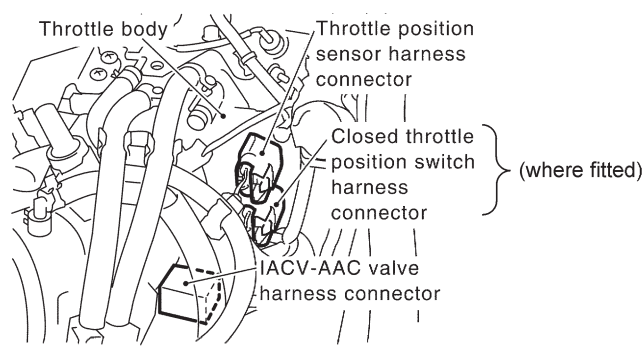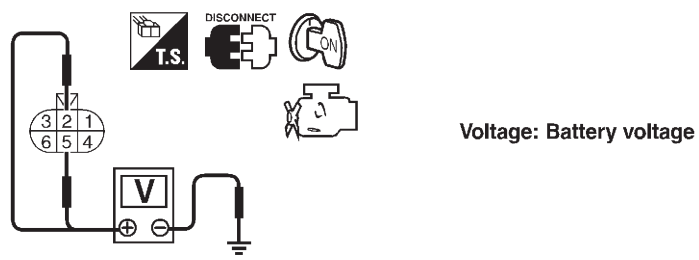2	CHECK POWER SUPPLY	<p>1. Turn ignition switch "OFF".</p> <p>2. Disconnect IACV-AAC valve harness connector.</p>	
			NEF316A
		<p>3. Turn ignition switch "ON".</p> <p>4. Check voltage between terminal 2, 5 and ground with CONSULT-II or tester.</p>	
			SEF343X
		OK or NG	
OK	▶	GO TO 4.	
NG	▶	GO TO 3.	


IDLE AIR CONTROL VALVE (IACV) — AUXILIARY AIR CONTROL (AAC) VALVE

QG

Diagnostic Procedure (Cont'd)

3	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● 15A fuse ● Harness connectors E75, F36 (If so equipped) ● Harness for open or short between fuse and ECM relay ● ECM relay ● Harness for open or short between IACV-AAC and ECM relay. 	
▶	Repair harness or connectors, or replace fuse or ECM relay.

4	CHECK OUTPUT SIGNAL CIRCUIT
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 6 and IACV-AAC valve terminal 1, ECM terminal 7 and IACV-AAC valve terminal 4, ECM terminal 15 and IACV-AAC valve terminal 3, ECM terminal 16 and IACV-AAC valve terminal 6. Refer to wiring diagram. Continuity should exist. 4. Also check harness for short to ground and short to power. <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 5.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

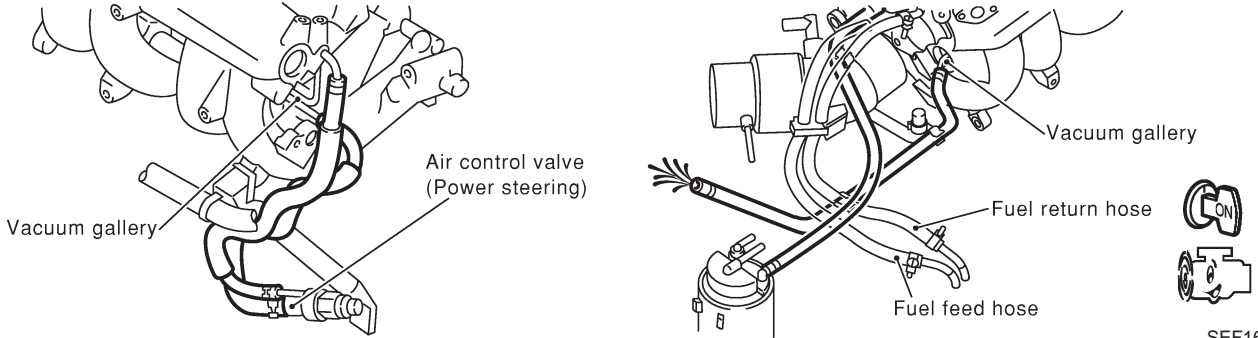5	CHECK AIR CONTROL VALVE (POWER STEERING) OPERATION-I
<ol style="list-style-type: none"> 1. Reconnect the ECM harness connector and IACV-AAC valve harness connector. 2. Disconnect the vacuum hose connected to the air control valve (Power steering) at the intake air duct. 3. Start engine and let it idle. 4. Check vacuum hose for vacuum existence. 	
	
<p>Vacuum does not exist or slightly exist.</p> <p>OK or NG</p>	
OK	▶ GO TO 6.
NG	▶ Replace air control valve (Power steering).

IDLE AIR CONTROL VALVE (IACV) — AUXILIARY AIR CONTROL (AAC) VALVE

QG

Diagnostic Procedure (Cont'd)


6	CHECK AIR CONTROL VALVE (POWER STEERING) OPERATION-II	
<p>Check the vacuum hose for vacuum existence when steering wheel is turned.</p>		
<p>Vacuum should exist.</p>		
<p>OK or NG</p>		
OK	▶	GO TO 9.
NG	▶	GO TO 7.

7	CHECK VACUUM PORT	
<ol style="list-style-type: none"> 1. Stop engine. 2. Disconnect the vacuum hose connected to the air control valve (Power steering) at the vacuum port. 3. Blow air into vacuum port. 4. Check that air flows freely. 		
<p>OK or NG</p>		
OK	▶	GO TO 8.
NG	▶	Repair or clean vacuum port.

IDLE AIR CONTROL VALVE (IACV) — AUXILIARY AIR CONTROL (AAC) VALVE

QG

Diagnostic Procedure (Cont'd)

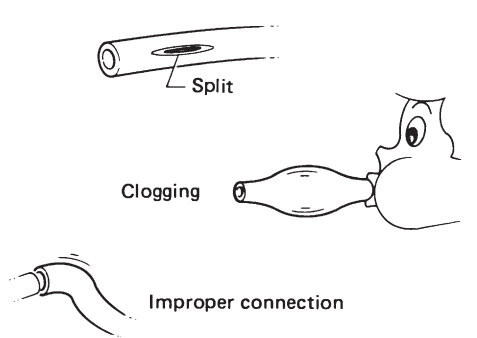8	CHECK VACUUM HOSES AND TUBES	
<p>1. Disconnect vacuum hoses between the air control valve (Power steering) and vacuum port, air control valve (Power steering) and air duct.</p> <p>2. Check hoses and tubes for cracks, clogging, improper connection or disconnection.</p>		
		
SEF109L		
OK or NG		
OK	▶	GO TO 9.
NG	▶	Repair hoses or tubes.

9	CHECK IACV-AAC VALVE	
Refer to "Component Inspection", EC-425.		
OK or NG		
OK	▶	GO TO 11.
NG	▶	GO TO 10.

10	REPLACE IACV-AAC VALVE	
<p>1. Replace IACV-AAC valve assembly.</p> <p>2. Perform "Idle Air Volume Learning", EC-55.</p> <p style="color: blue;">Is the result CMPLT or INCMP?</p>		
CMPLT or INCMP		
CMPLT	▶	INSPECTION END
INCMP	▶	Follow the construction of "Idle Air Volume Learning".


11	CHECK TARGET IDLE SPEED	
<p>1. Turn ignition switch "OFF".</p> <p>2. Reconnect all harness connectors and vacuum hose.</p> <p>3. Start engine and warm it up to normal operating temperature.</p> <p>4. Also warm up transmission to normal operating temperature.</p> <ul style="list-style-type: none"> ● For A/T models with CONSULT-II, drive vehicle until "FLUID TEMP SE" in "DATA MONITOR" mode of "A/T" system indicates less than 0.9V. ● For A/T models without CONSULT-II and M/T models, drive vehicle for 10 minutes. <p>5. Stop vehicle with engine running.</p> <p>6. Check target idle speed.</p> <p style="color: blue;">M/T: 700±50 rpm</p> <p style="color: blue;">A/T: 800±50 rpm (in "P" or "N" position)</p>		
OK or NG		
OK	▶	GO TO 12.
NG	▶	Perform "Idle Air Volume Learning", EC-55.

IDLE AIR CONTROL VALVE (IACV) — AUXILIARY AIR CONTROL (AAC) VALVE


QG

Diagnostic Procedure (Cont'd)

12	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.	
	INSPECTION END

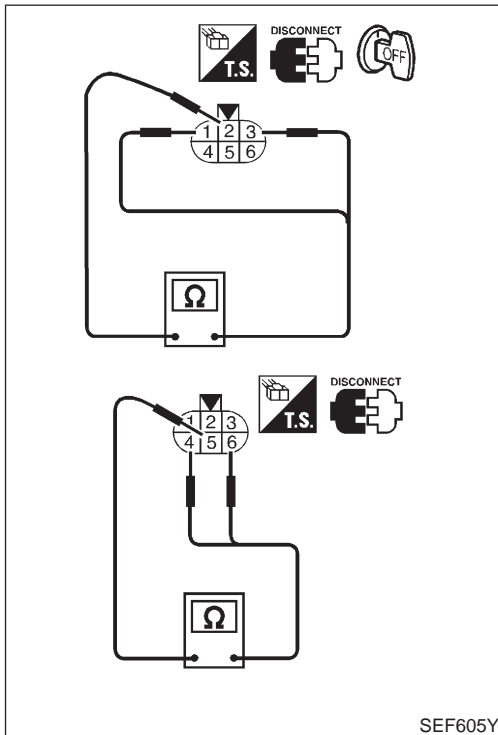

SEF605Y

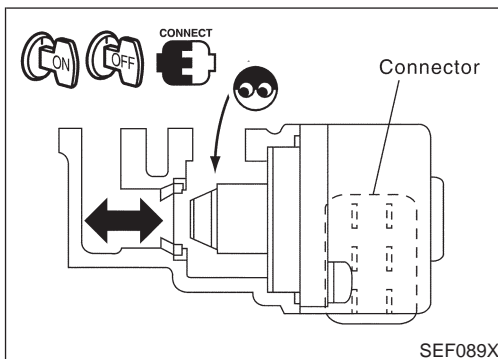

SEF089X

Component Inspection

IACV-AAC VALVE

NJEC1763

NJEC1763S01

- 1) Disconnect IACV-AAC valve harness connector.
- 2) Check IACV-AAC valve resistance.


Condition	Resistance
Terminal 2 and terminals 1, 3	20 - 24Ω [at 20°C (68°F)]
Terminal 5 and terminals 4, 6	

- 3) Reconnect IACV-AAC valve harness connector.
- 4) Remove idle air adjusting unit assembly (IACV-AAC valve is built-in) from engine.
(The IACV-AAC valve harness connector should remain connected.)
- 5) Turn ignition switch "ON" and "OFF", and ensure the IACV-AAC valve shaft smoothly moves forward and backward, according to the ignition switch position.
If NG, replace the IACV-AAC valve.

CLOSED THROTTLE POSITION SWITCH (WHERE FITTED)

QG

Component Description

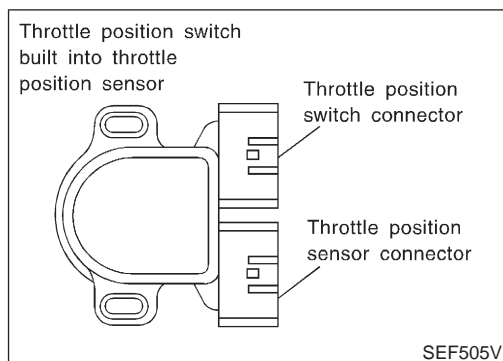

Component Description

NJEC1764

A closed throttle position switch and wide open throttle position switch are built into the throttle position sensor unit. The wide open throttle position switch is used only for A/T control.

When the throttle valve is in the closed position, the closed throttle position switch sends a voltage signal to the ECM. The ECM only uses this signal to open or close the EVAP canister purge control valve when the throttle position sensor is malfunctioning.

ECM Terminals and Reference Value

NJEC1765

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
43	Y/PU	Throttle position switch (Closed position)	[Ignition switch "ON"] ● Accelerator pedal fully released	BATTERY VOLTAGE (11 - 14V)
			[Ignition switch "ON"] ● Accelerator pedal depressed	Approximately 0V

CLOSED THROTTLE POSITION SWITCH (WHERE FITTED)

QG




Wiring Diagram

Wiring Diagram

NJEC1766


EC-TP/SW1-01

— : DETECTABLE LINE FOR DTC
 - - - : NON-DETECTABLE LINE FOR DTC

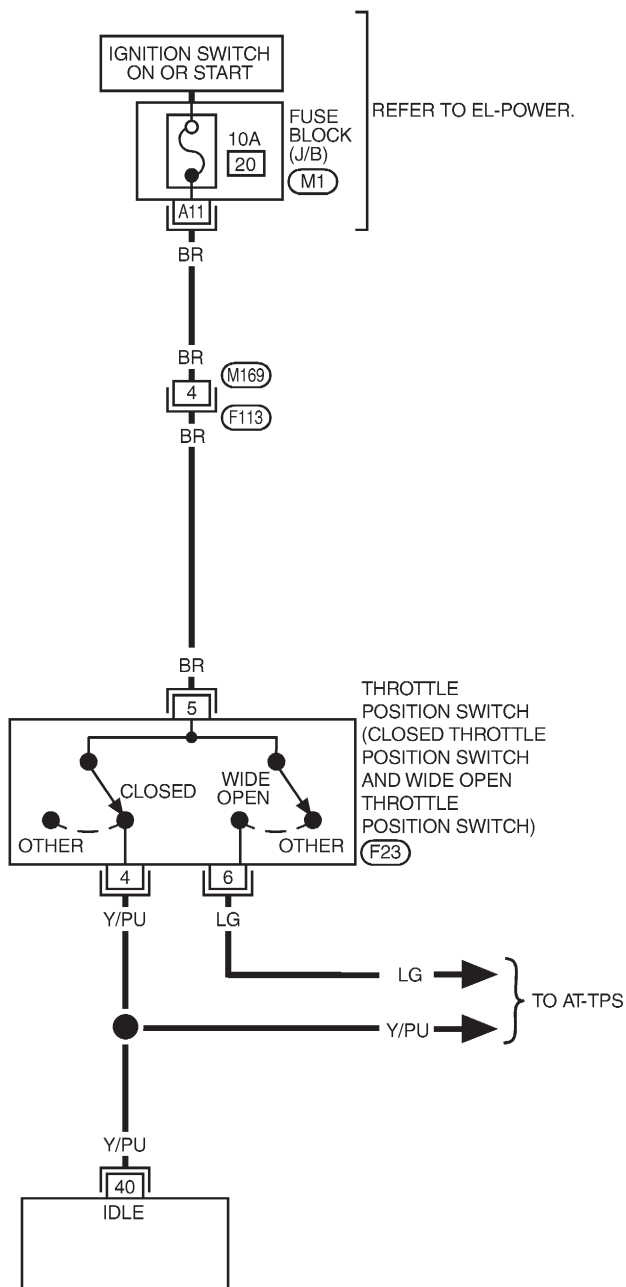

REFER TO THE FOLLOWING.

(M1) - FUSE BLOCK-JUNCTION BOX (J/B)

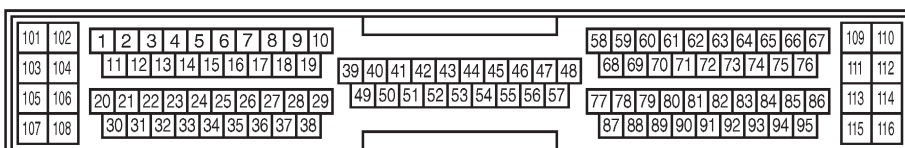

YEC053A

CLOSED THROTTLE POSITION SWITCH (WHERE FITTED)

QG

Diagnostic Procedure

Diagnostic Procedure

NJE1767

1	INSPECTION START		
Do you have CONSULT-II?			
Yes or No			
Yes	▶	GO TO 2.	
No	▶	GO TO 3.	



2	CHECK OVERALL FUNCTION								
<p> With CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch "ON". 2. Select "A/T" and then select "DATA MONITOR" mode with CONSULT-II. 3. Check indication of "CLSD THL/P SW" under the following conditions. Measurement must be made with throttle position switch installed in vehicle. 									
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Throttle valve conditions</th> <th style="width: 50%;">CLSD THL/P SW</th> </tr> </thead> <tbody> <tr> <td>Completely closed</td> <td style="text-align: center;">ON</td> </tr> <tr> <td>Partially open or completely open</td> <td style="text-align: center;">OFF</td> </tr> </tbody> </table>				Throttle valve conditions	CLSD THL/P SW	Completely closed	ON	Partially open or completely open	OFF
Throttle valve conditions	CLSD THL/P SW								
Completely closed	ON								
Partially open or completely open	OFF								
MTBL0355									
OK or NG									
OK	▶	GO TO 10.							
NG	▶	GO TO 4.							

3	CHECK OVERALL FUNCTION								
<p> Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch "ON". 2. Check voltage between ECM terminal 40 (closed throttle position switch signal) and ground under the following conditions. 									
<div style="display: flex; align-items: center; justify-content: center;"> </div> <div style="display: flex; align-items: center; justify-content: center; margin-top: 10px;"> <div style="border: 1px solid black; padding: 5px; margin-right: 10px;">ECM</div> <div style="border: 1px solid black; padding: 5px; margin-right: 10px;">CONNECTOR</div> </div> <div style="display: flex; align-items: center; justify-content: center; margin-top: 10px;"> <div style="margin-right: 10px;">40</div> </div>									
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Throttle valve conditions</th> <th style="width: 50%;">Voltage</th> </tr> </thead> <tbody> <tr> <td>Completely closed</td> <td style="text-align: center;">Battery Voltage</td> </tr> <tr> <td>Partially open or completely open</td> <td style="text-align: center;">Approximately 0V</td> </tr> </tbody> </table>				Throttle valve conditions	Voltage	Completely closed	Battery Voltage	Partially open or completely open	Approximately 0V
Throttle valve conditions	Voltage								
Completely closed	Battery Voltage								
Partially open or completely open	Approximately 0V								
SEC583C									
OK or NG									
OK	▶	GO TO 11.							
NG	▶	GO TO 4.							

CLOSED THROTTLE POSITION SWITCH (WHERE FITTED)

QG

Diagnostic Procedure (Cont'd)

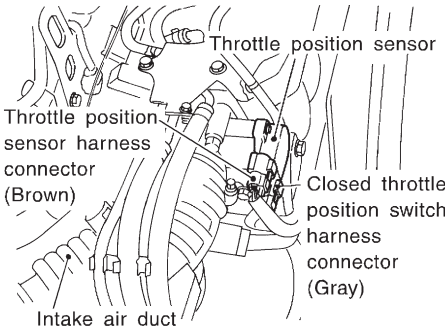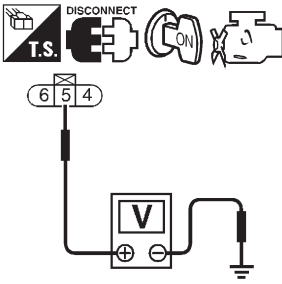4	CHECK POWER SUPPLY	
<p>1. Turn ignition switch "OFF". 2. Disconnect throttle position switch harness connector.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">JEF091Y</p> <p>3. Turn ignition switch "ON". 4. Check voltage between terminal 5 and engine ground with CONSULT-II or tester.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SEF250W</p> <p>Voltage: Battery voltage</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 6.
NG	▶	GO TO 5.

5	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M169, F113 ● Harness for open or short between throttle position switch and fuse block. ● 10A fuse 		
▶		Repair harness or connectors.

6	CHECK INPUT SIGNAL CIRCUIT	
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 40 and throttle position switch harness connector terminal 4. Refer to wiring diagram. Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 8.
NG	▶	GO TO 7.

CLOSED THROTTLE POSITION SWITCH (WHERE FITTED)

QG


Diagnostic Procedure (Cont'd)

7	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none"> ● Harness for open or short between throttle position switch and ECM ● Harness for open or short between throttle position switch and TCM (Transmission Control Module) 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

8	ADJUST THROTTLE POSITION SWITCH IDLE POSITION
Perform Basic Inspection, EC-98.	
▶	GO TO 9.

9	CHECK CLOSED THROTTLE POSITION SWITCH
Refer to "Component Inspection", EC-431.	
OK or NG	
OK (With CONSULT-II) ▶	GO TO 10.
OK (Without CONSULT-II) ▶	GO TO 11.
NG ▶	Replace throttle position switch.

10	CHECK THROTTLE POSITION SENSOR								
(P) With CONSULT-II 1. Select "ENGINE" and then select "DATA MONITOR" mode with CONSULT-II. 2. Check voltage of "THRTL POS SEN" under the following conditions. Voltage measurement must be made with throttle position sensor installed in vehicle.									
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="padding: 5px;">Throttle valve conditions</th> <th style="padding: 5px;">THRTL POS SEN</th> </tr> </thead> <tbody> <tr> <td style="padding: 5px;">Completely closed (a)</td> <td style="padding: 5px;">0.15 - 0.85V</td> </tr> <tr> <td style="padding: 5px;">Partially open</td> <td style="padding: 5px;">Between (a) and (b)</td> </tr> <tr> <td style="padding: 5px;">Completely open (b)</td> <td style="padding: 5px;">3.5 - 4.7V</td> </tr> </tbody> </table>		Throttle valve conditions	THRTL POS SEN	Completely closed (a)	0.15 - 0.85V	Partially open	Between (a) and (b)	Completely open (b)	3.5 - 4.7V
Throttle valve conditions	THRTL POS SEN								
Completely closed (a)	0.15 - 0.85V								
Partially open	Between (a) and (b)								
Completely open (b)	3.5 - 4.7V								
MTBL0230									
OK or NG									
OK ▶	GO TO 12.								
NG ▶	Replace throttle position sensor.								

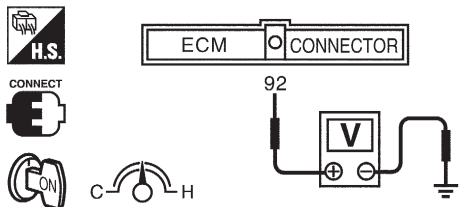
11	CHECK THROTTLE POSITION SENSOR								
(X) Without CONSULT-II Check voltage between ECM terminal 92 (Throttle position sensor signal) and ground. Voltage measurement must be made with throttle position sensor installed in vehicle.									
									
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="padding: 5px;">Throttle valve conditions</th> <th style="padding: 5px;">Voltage</th> </tr> </thead> <tbody> <tr> <td style="padding: 5px;">Completely closed (a)</td> <td style="padding: 5px;">0.15 - 0.85V</td> </tr> <tr> <td style="padding: 5px;">Partially open</td> <td style="padding: 5px;">Between (a) and (b)</td> </tr> <tr> <td style="padding: 5px;">Completely open (b)</td> <td style="padding: 5px;">3.5 - 4.7V</td> </tr> </tbody> </table>		Throttle valve conditions	Voltage	Completely closed (a)	0.15 - 0.85V	Partially open	Between (a) and (b)	Completely open (b)	3.5 - 4.7V
Throttle valve conditions	Voltage								
Completely closed (a)	0.15 - 0.85V								
Partially open	Between (a) and (b)								
Completely open (b)	3.5 - 4.7V								
YEC049A									
OK or NG									
OK ▶	GO TO 12.								
NG ▶	Replace throttle position sensor.								

CLOSED THROTTLE POSITION SWITCH (WHERE FITTED)

QG

Diagnostic Procedure (Cont'd)

12	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.	
	INSPECTION END

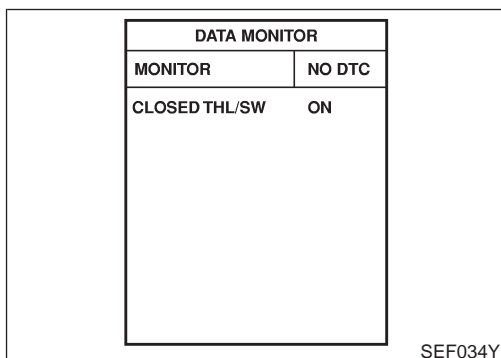

Component Inspection

CLOSED THROTTLE POSITION SWITCH

NJEC1768

NJEC1768S01

With CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode in A/T SECTION with CONSULT-II.
- 3) Check indication of "CLOSED THL/SW" under the following conditions.

NOTE:

Measurement must be made with closed throttle position switch installed in vehicle.

Throttle valve conditions	CLOSED THL/SW
Completely closed	ON
Partially open or completely open	OFF

If NG, adjust closed throttle position switch. Refer to "Basic Inspection", EC-98.

- 4) If it is impossible to adjust closed throttle position switch in "Basic Inspection", replace closed throttle position switch.

Without CONSULT-II

- 1) Disconnect throttle position switch harness connector.
- 2) Check continuity between terminals 4 and 5 under the following conditions. Refer to wiring diagram.

NOTE:

Continuity measurement must be made with closed throttle position switch installed in vehicle.

Throttle valve conditions	Continuity
Completely closed	Yes
Partially open or completely open	No


If NG, adjust closed throttle position switch. Refer to "Basic Inspection", EC-98.

- 3) If it is impossible to adjust closed throttle position switch in "Basic Inspection", replace closed throttle position switch.

INTAKE VALVE TIMING CONTROL SOLENOID VALVE

QG

Component Description

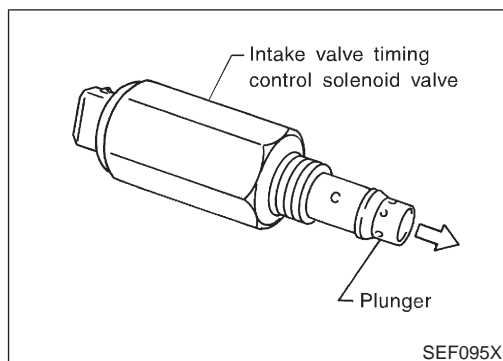

Component Description

NJEC1769

The valve timing control system is utilized to control intake valve opening and closing timing. Engine coolant temperature signals, engine speed and throttle position are used to determine intake valve timing.

The intake camshaft sprocket position is regulated by oil pressure controlled by the intake valve timing control.

When ECM sends ON signal to intake valve timing control solenoid valve, oil pressure is transmitted to camshaft sprocket. Then, intake side camshaft is advanced.

Operation

NJEC1770

Engine operating condition				Intake valve timing control solenoid valve	Intake valve opening and closing time	Valve overlap
Engine coolant temperature	Engine speed	B/FUEL SCHDL	Neutral switch			
20°C (68°F) - 70°C (158°F)	1,150 - 4,600 rpm	Above 3 msec	OFF	ON	Advance	Increased
Above 70°C (158°F)		Above 7 msec				
Conditions other than those above				OFF	Normal	Normal

CONSULT-II Reference Value in Data Monitor Mode

NJEC1771

MONITOR ITEM	CONDITION	SPECIFICATION
INT/V SOL-B1	<ul style="list-style-type: none"> Engine: After warming up Lift up vehicle and suitable gear position 	Idle
	<ul style="list-style-type: none"> Revving engine from 2,000 to 3,000 rpm 	ON

ECM Terminals and Reference Value

NJEC1772

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
1	Y/R	Intake valve timing control solenoid valve	[Engine is running] <ul style="list-style-type: none"> Idle speed 	BATTERY VOLTAGE (11 - 14V)
			[Engine is running] <ul style="list-style-type: none"> Warm-up condition Lift up vehicle and suitable gear position Rev engine from 2,000 to 3,000 rpm 	Approximately 0V

INTAKE VALVE TIMING CONTROL SOLENOID VALVE


QG

Wiring Diagram


Wiring Diagram

NJEC1773

EC-IVC/V-01

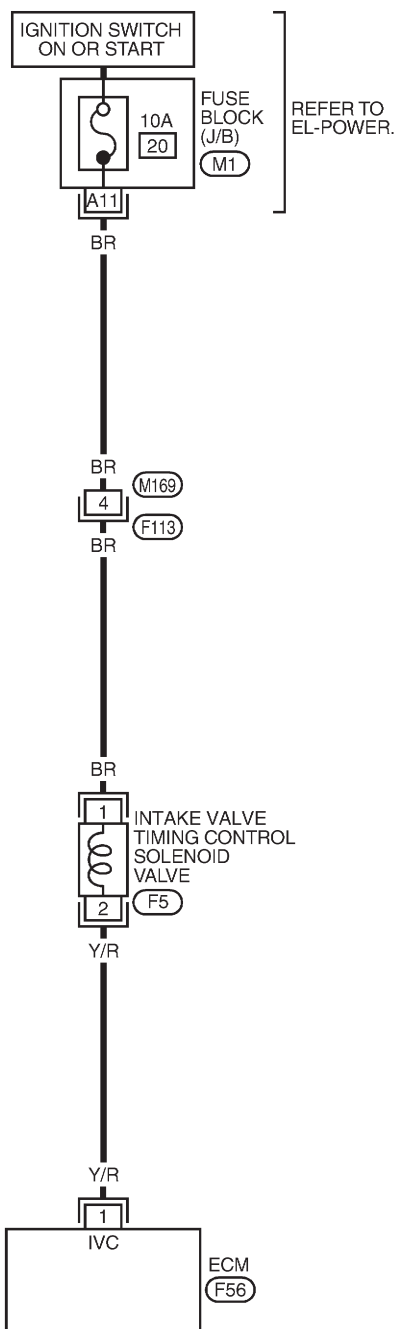


- : DETECTABLE LINE FOR DTC
- : NON-DETECTABLE LINE FOR DTC
- L : LHD MODELS
- R : RHD MODELS



REFER TO THE FOLLOWING.

M1 - FUSE BLOCK-JUNCTION BOX (J/B)

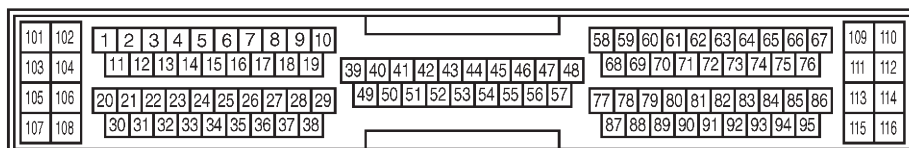

YEC993

INTAKE VALVE TIMING CONTROL SOLENOID VALVE

QG

Diagnostic Procedure

Diagnostic Procedure

NJE1774

1	INSPECTION START	
Do you have CONSULT-II?		
Yes or No		
Yes	▶	GO TO 2.
No	▶	GO TO 3.



2	CHECK OVERALL FUNCTION							
<p> With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operation temperature. 2. Select "INT/V SOL-B1" in "DATA MONITOR" mode with CONSULT-II. 3. Lift-up the vehicle and simulate driving in a suitable gear position. 4. Check the "INT/V SOL-B1" signal under the following conditions. 								
<table border="1" style="margin: 10px auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2" style="text-align: center;">DATA MONITOR</th> </tr> <tr> <th style="text-align: center;">MONITOR</th> <th style="text-align: center;">NO DTC</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">INT/V SOL-B1</td> <td style="text-align: center;">ON</td> </tr> </tbody> </table>			DATA MONITOR		MONITOR	NO DTC	INT/V SOL-B1	ON
DATA MONITOR								
MONITOR	NO DTC							
INT/V SOL-B1	ON							
<table border="1" style="margin: 10px auto; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Conditions</th> <th style="text-align: center;">INT/V SOL-B1</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">At idle</td> <td style="text-align: center;">OFF</td> </tr> <tr> <td style="text-align: center;">Rev engine from 2,000 to 3,000 rpm at suitable gear position.</td> <td style="text-align: center;">ON</td> </tr> </tbody> </table>			Conditions	INT/V SOL-B1	At idle	OFF	Rev engine from 2,000 to 3,000 rpm at suitable gear position.	ON
Conditions	INT/V SOL-B1							
At idle	OFF							
Rev engine from 2,000 to 3,000 rpm at suitable gear position.	ON							
SEF758Z								
OK or NG								
OK	▶	INSPECTION END						
NG	▶	GO TO 4.						

3	CHECK OVERALL FUNCTION							
<p> Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operation temperature. 2. Lift up the vehicle and simulate driving in a suitable gear position. 3. Check the voltage between ECM terminal 1 and ground under the following conditions. 								
<table border="1" style="margin: 10px auto; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Conditions</th> <th style="text-align: center;">Voltage</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">At idle</td> <td style="text-align: center;">Battery voltage</td> </tr> <tr> <td style="text-align: center;">Rev engine from 2,000 to 3,000 rpm at suitable gear position.</td> <td style="text-align: center;">Approximately 0V</td> </tr> </tbody> </table>			Conditions	Voltage	At idle	Battery voltage	Rev engine from 2,000 to 3,000 rpm at suitable gear position.	Approximately 0V
Conditions	Voltage							
At idle	Battery voltage							
Rev engine from 2,000 to 3,000 rpm at suitable gear position.	Approximately 0V							
SEF757Z								
OK or NG								
OK	▶	INSPECTION END						
NG	▶	GO TO 4.						

INTAKE VALVE TIMING CONTROL SOLENOID VALVE

QG

Diagnostic Procedure (Cont'd)

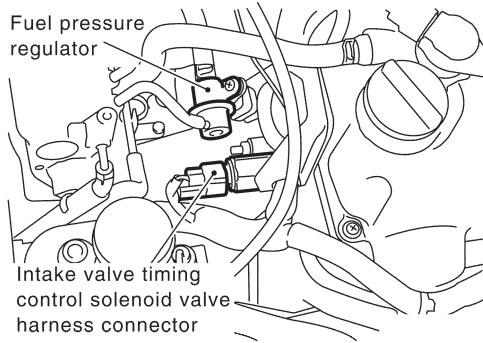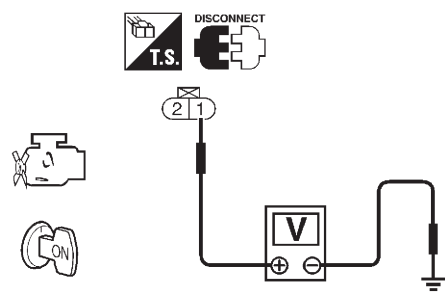4	CHECK POWER SUPPLY	
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect intake valve timing control solenoid valve harness connector. 		
 <p style="text-align: center;">Fuel pressure regulator</p> <p style="text-align: center;">Intake valve timing control solenoid valve harness connector</p>		
SEF149X		
<ol style="list-style-type: none"> 3. Turn ignition switch "ON". 4. Check voltage between terminal 1 and engine ground with CONSULT-II or tester. 		
 <p style="text-align: right; margin-right: 50px;">Voltage: Battery voltage</p> <p style="text-align: center; margin-top: 20px;">OK or NG</p>		
SEF619X		
OK	▶	GO TO 6.
NG	▶	GO TO 5.

5	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M169, F113 ● 10A fuse ● Harness for open or short between valve timing control solenoid valve and fuse 		
▶		Repair harness or connectors.

6	CHECK OUTPUT SIGNAL CIRCUIT	
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 1 and intake valve timing control solenoid valve harness connector terminal 2. Refer to wiring diagram. Continuity should exist. 4. Also check harness for short to ground and short to power. 		
OK or NG		
OK	▶	GO TO 7.
NG	▶	Repair open circuit or short to ground to short to power or connectors.


INTAKE VALVE TIMING CONTROL SOLENOID VALVE

QG

Diagnostic Procedure (Cont'd)

7	CHECK VALVE TIMING CONTROL SOLENOID VALVE
Refer to "Component Inspection", EC-436.	
OK or NG	
OK	▶ GO TO 8.
NG	▶ Replace valve timing control solenoid valve.

8	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.	
	▶ INSPECTION END

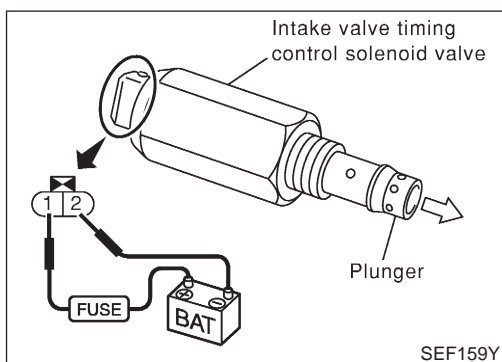

Component Inspection

INTAKE VALVE TIMING CONTROL SOLENOID VALVE

NJEC1775
NJEC1775S01

1. Check oil passage visually for any metal debris.
2. Supply intake valve timing control solenoid valve terminals with battery voltage.
3. Make sure that inside plunger protrudes.
If NG, replace intake valve timing control solenoid valve.

System Description




These circuit lines are used to control the smooth shifting up and down of A/T during the hard acceleration/
deceleration. NJEC1776

Voltage signals are exchanged between ECM and TCM (Transmission Control Module).

Wiring Diagram


EC-ATCONT-01


: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

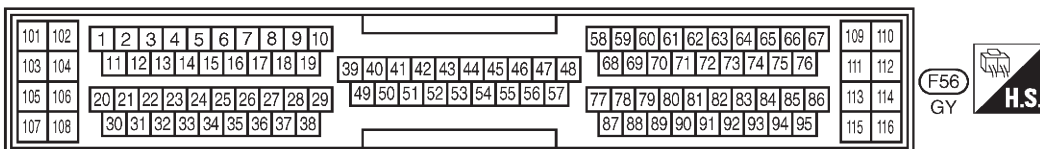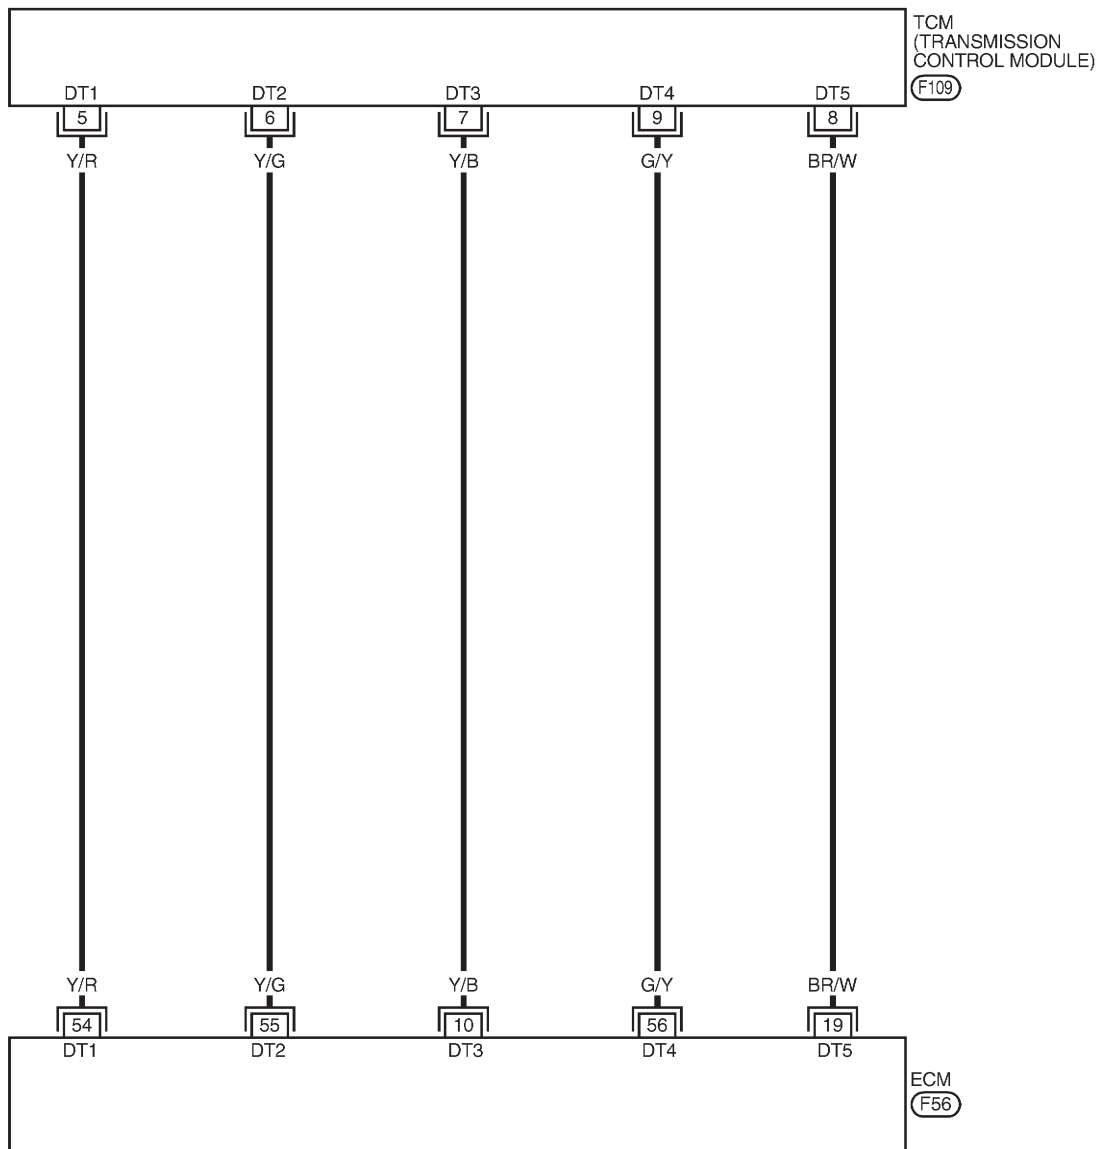

Diagnostic Procedure

NJE1778

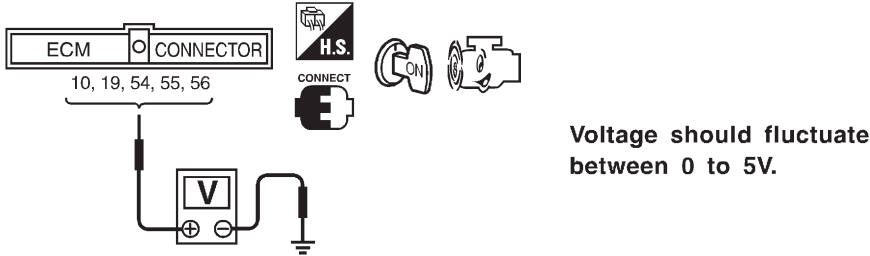1	CHECK OVERALL FUNCTION			
<p>1. Start engine and warm it up to normal operating temperature. 2. Check the voltage between ECM terminals 10, 19, 54, 55, 56 and ground.</p>				
				
SEF791Z				
OK or NG				
OK	▶	INSPECTION END		
NG	▶	GO TO 2.		

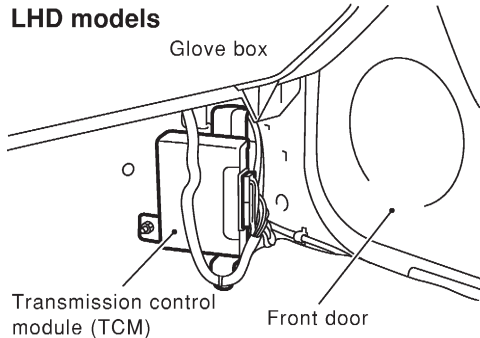2	CHECK A/T CONTROL INPUT SIGNAL CIRCUIT FOR OPEN															
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector and TCM (Transmission Control Module) harness connector.</p>																
<p>LHD models</p> 																
SEF116Y																
<p>3. Check harness continuity between the following terminals.</p>																
<table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th style="width: 50%;">ECM</th> <th style="width: 50%;">TCM</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">54</td> <td style="text-align: center;">5</td> </tr> <tr> <td style="text-align: center;">55</td> <td style="text-align: center;">6</td> </tr> <tr> <td style="text-align: center;">10</td> <td style="text-align: center;">7</td> </tr> <tr> <td style="text-align: center;">56</td> <td style="text-align: center;">9</td> </tr> <tr> <td style="text-align: center;">19</td> <td style="text-align: center;">8</td> </tr> </tbody> </table>					ECM	TCM	54	5	55	6	10	7	56	9	19	8
ECM	TCM															
54	5															
55	6															
10	7															
56	9															
19	8															
YEC057A																
<p>Refer to Wiring Diagram. Continuity should exist.</p>																
OK or NG																
OK	▶	GO TO 3.														
NG	▶	Repair harness or connectors.														

A/T COMMUNICATION LINE

QG


Diagnostic Procedure (Cont'd)

3	CHECK A/T CONTROL INPUT SIGNAL CIRCUIT FOR SHORT	
1. Check harness continuity between ECM terminals 10, 19, 54, 55, 56 and ground. Refer to Wiring Diagram. Continuity should not exist.		
2. Also check harness for short to power.		
OK or NG		
OK	▶	GO TO 4.
NG	▶	Repair short to ground or short to power in harness or connectos.
4	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.		
	▶	INSPECTION END

PARK/NEUTRAL POSITION (PNP) SWITCH

QG

Component Description

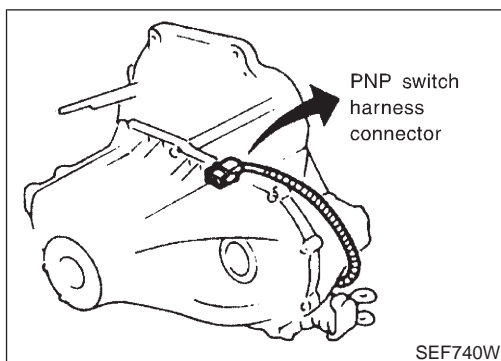

Component Description

NJEC1779

When the gear position is "P" (A/T models only) or "N", park/neutral position (PNP) switch is "ON".

ECM detects the park/neutral position when continuity with ground exists.

CONSULT-II Reference Value in Data Monitor Mode

NJEC1780

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
P/N POSI SW	● Ignition switch: ON	Shift lever: "P" or "N"	ON
		Except above	OFF

ECM Terminals and Reference Value

NJEC1781

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
42	G/OR	PNP switch	[Ignition switch "ON"] <ul style="list-style-type: none"> ● Gear position is "Neutral position" (M/T models) ● Gear position is "N" or "P" (A/T models) 	Approximately 0V
			[Ignition switch "ON"] <ul style="list-style-type: none"> ● Except the above gear position 	A/T models BATTERY VOLTAGE (11 - 14V) M/T models Approximately 5V

PARK/NEUTRAL POSITION (PNP) SWITCH



QG

Wiring Diagram

Wiring Diagram

NJEC1782

EC-PNPSW1-01

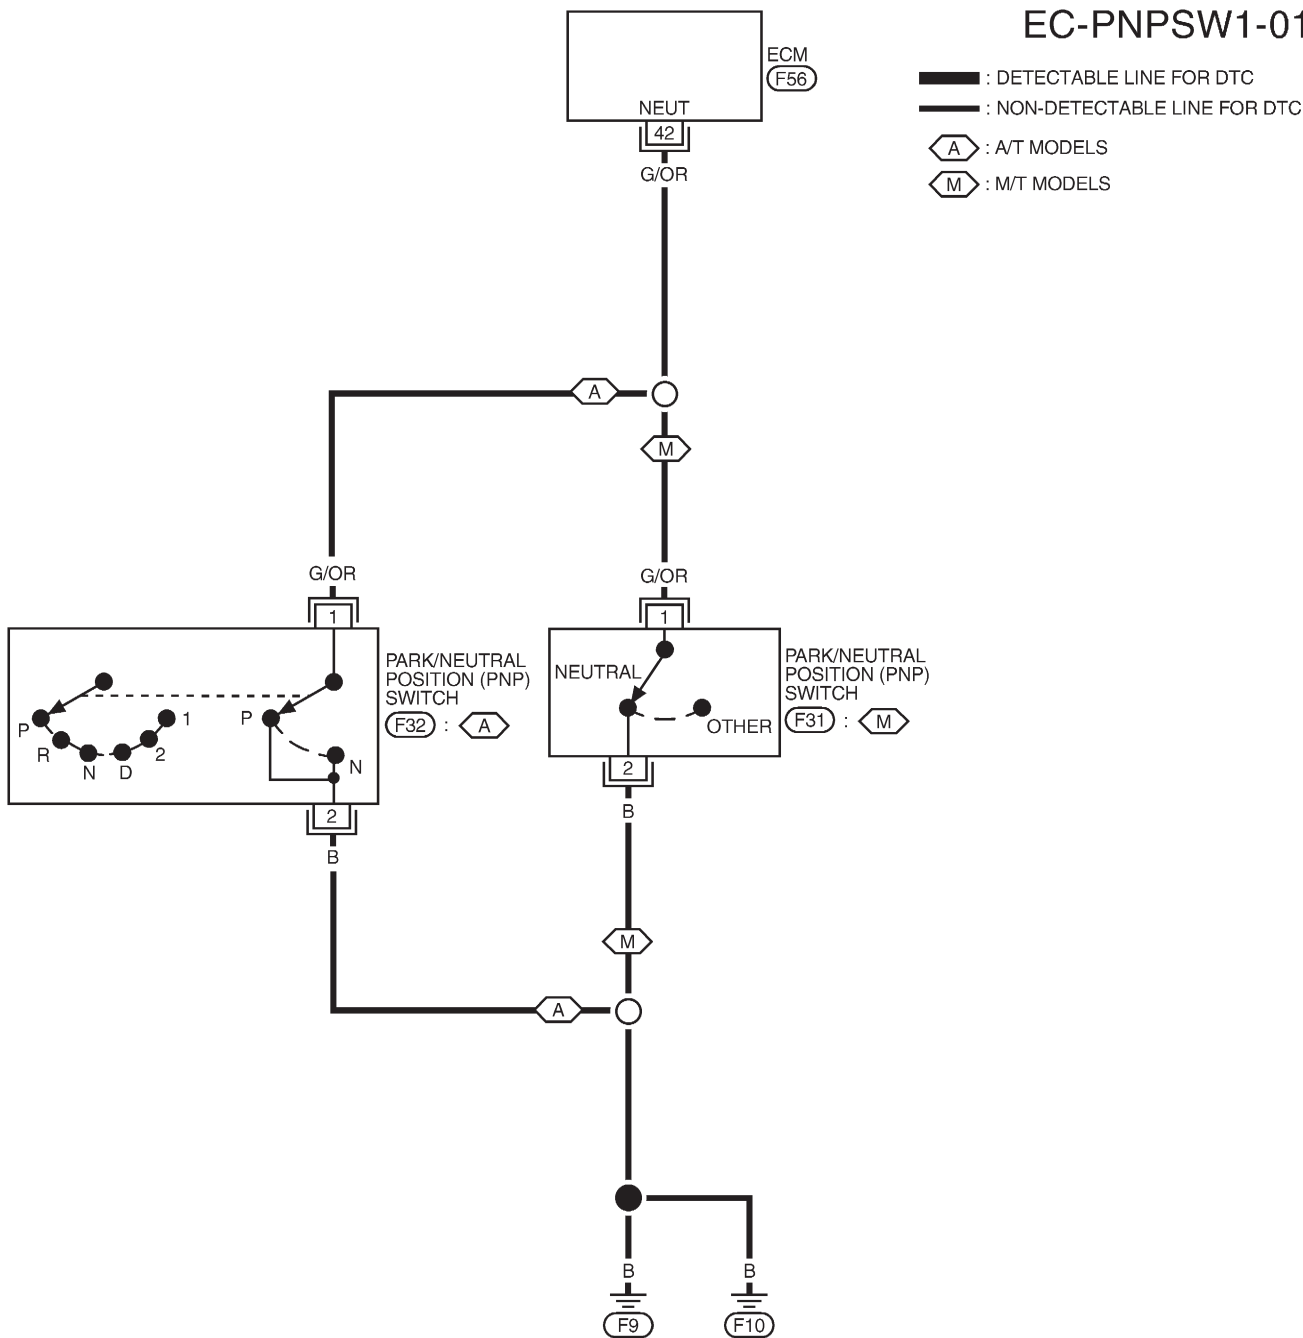

101	102	1	2	3	4	5	6	7	8	9	10			58	59	60	61	62	63	64	65	66	67	109	110							
103	104	11	12	13	14	15	16	17	18	19	39	40	41	42	43	44	45	46	47	48	68	69	70	71	72	73	74	75	76	111	112	
105	106	20	21	22	23	24	25	26	27	28	29	49	50	51	52	53	54	55	56	57	77	78	79	80	81	82	83	84	85	86	113	114
107	108	30	31	32	33	34	35	36	37	38											87	88	89	90	91	92	93	94	95	115	116	



YEC995

PARK/NEUTRAL POSITION (PNP) SWITCH


QG


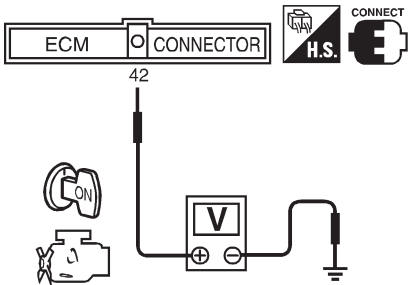
Diagnostic Procedure

Diagnostic Procedure

NJE1783

1	INSPECTION START	
Do you have CONSULT-II?		
Yes or No		
Yes	▶	GO TO 2.
No	▶	GO TO 3.


2	CHECK OVERALL FUNCTION									
<p> With CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch "ON". 2. Select "P/N POSI SW" in "DATA MONITOR" mode with CONSULT-II. 3. Check the "P/N POSI SW" signal under the following conditions. 										
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2" style="text-align: center;">DATA MONITOR</th> </tr> <tr> <th style="text-align: center;">MONITOR</th> <th style="text-align: center;">NO DTC</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">P/N POSI SW</td> <td style="text-align: center;">ON</td> </tr> </tbody> </table>			DATA MONITOR		MONITOR	NO DTC	P/N POSI SW	ON		
DATA MONITOR										
MONITOR	NO DTC									
P/N POSI SW	ON									
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Selector lever position</th> <th style="text-align: center;">P/N POSI SW</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">Neutral position (M/T models)</td> <td style="text-align: center;">ON</td> </tr> <tr> <td style="text-align: center;">"P" or "N" position (A/T models)</td> <td style="text-align: center;">ON</td> </tr> <tr> <td style="text-align: center;">Except the above position</td> <td style="text-align: center;">OFF</td> </tr> </tbody> </table>			Selector lever position	P/N POSI SW	Neutral position (M/T models)	ON	"P" or "N" position (A/T models)	ON	Except the above position	OFF
Selector lever position	P/N POSI SW									
Neutral position (M/T models)	ON									
"P" or "N" position (A/T models)	ON									
Except the above position	OFF									
SEF836Z										
OK or NG										
OK	▶	INSPECTION END								
NG	▶	GO TO 4.								

3	CHECK OVERALL FUNCTION									
<p> Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch "ON". 2. Check voltage between ECM terminal 42 and ground under the following conditions. 										
										
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Selector lever position</th> <th style="text-align: center;">Voltage</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">Neutral position (M/T models)</td> <td style="text-align: center;">Approx. 0V</td> </tr> <tr> <td style="text-align: center;">"P" or "N" position (A/T models)</td> <td style="text-align: center;">Approx. 0V</td> </tr> <tr> <td style="text-align: center;">Except the above position</td> <td style="text-align: center;">Battery voltage</td> </tr> </tbody> </table>			Selector lever position	Voltage	Neutral position (M/T models)	Approx. 0V	"P" or "N" position (A/T models)	Approx. 0V	Except the above position	Battery voltage
Selector lever position	Voltage									
Neutral position (M/T models)	Approx. 0V									
"P" or "N" position (A/T models)	Approx. 0V									
Except the above position	Battery voltage									
SEF837Z										
OK or NG										
OK	▶	INSPECTION END								
NG	▶	GO TO 4.								

PARK/NEUTRAL POSITION (PNP) SWITCH

QG

Diagnostic Procedure (Cont'd)

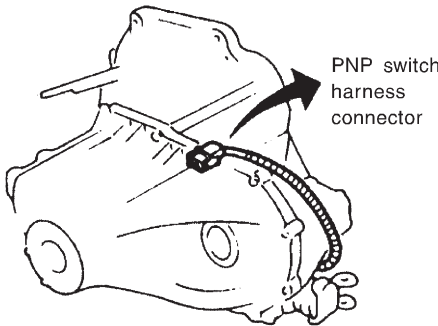4	CHECK GROUND CIRCUIT							
<p>1. Turn ignition switch "OFF". 2. Disconnect PNP switch harness connector.</p>								
								
<p>3. Check harness continuity between PNP switch harness connector terminal 2 and body ground. Refer to wiring diagram. Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>								
<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td>GO TO 6.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 5.</td> </tr> </table>			OK	▶	GO TO 6.	NG	▶	GO TO 5.
OK	▶	GO TO 6.						
NG	▶	GO TO 5.						

SEF740W

5	DETECT MALFUNCTIONING PART	
Check the harness for open or short between PNP switch and body ground.		
▶ Repair open circuit or short to ground or short to power in harness or connectors.		

6	CHECK INPUT SIGNAL CIRCUIT							
<p>1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal 42 and PNP switch harness connector terminal 1. Refer to wiring diagram. Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>								
<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td>GO TO 8.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 7.</td> </tr> </table>			OK	▶	GO TO 8.	NG	▶	GO TO 7.
OK	▶	GO TO 8.						
NG	▶	GO TO 7.						

7	DETECT MALFUNCTIONING PART	
Check the harness for open or short between ECM and PNP switch.		
▶ Repair open circuit or short to ground or short to power in harness or connectors.		

8	CHECK PNP SWITCH							
Refer to MT-21, "POSITION SWITCH CHECK" or AT-181, "PARK/NEUTRAL POSITION (PNP) SWITCH".								
OK or NG								
<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td>GO TO 9.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>Replace PNP switch.</td> </tr> </table>			OK	▶	GO TO 9.	NG	▶	Replace PNP switch.
OK	▶	GO TO 9.						
NG	▶	Replace PNP switch.						


PARK/NEUTRAL POSITION (PNP) SWITCH

QG

Diagnostic Procedure (Cont'd)

9	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.	
▶	INSPECTION END

Component Description

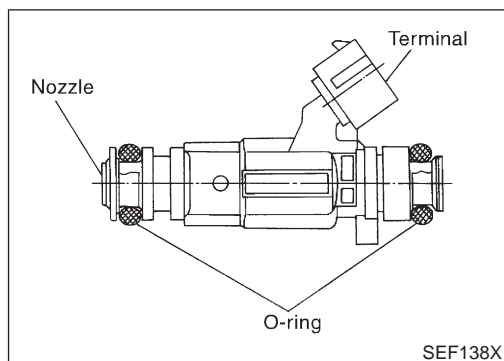

Component Description

NJEC0435

The fuel injector is a small, precise solenoid valve. When the ECM supplies a ground to the injector circuit, the coil in the injector is energized. The energized coil pulls the needle valve back and allows fuel to flow through the injector into the intake manifold. The amount of fuel injected depends upon the injection pulse duration. Pulse duration is the length of time the injector remains open. The ECM controls the injection pulse duration based on engine fuel needs.

CONSULT-II Reference Value in Data Monitor Mode

NJEC0436

MONITOR ITEM	CONDITION		SPECIFICATION
INJ PULSE-B1	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: OFF ● Shift lever: "N" ● No-load 	Idle	2.0 - 3.5 msec
		2,000 rpm	1.5 - 3.5 msec
B/FUEL SCHDL	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: OFF ● Shift lever: "N" ● No-load 	Idle	1.5 - 3.0 msec
		2,000 rpm	1.2 - 3.0 msec

ECM Terminals and Reference Value

NJEC0437

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
101	R/B	Injector No. 1	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	<p>BATTERY VOLTAGE (11 - 14V)</p> <p style="text-align: right;">SEF011W</p>
103	Y/B	Injector No. 2		
105	G/B	Injector No. 3		
107	L/B	Injector No. 4		
			<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is 2,000 rpm 	<p>BATTERY VOLTAGE (11 - 14V)</p> <p style="text-align: right;">SEF012W</p>


INJECTOR

Wiring Diagram

NJEC0434


EC-INJECT-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

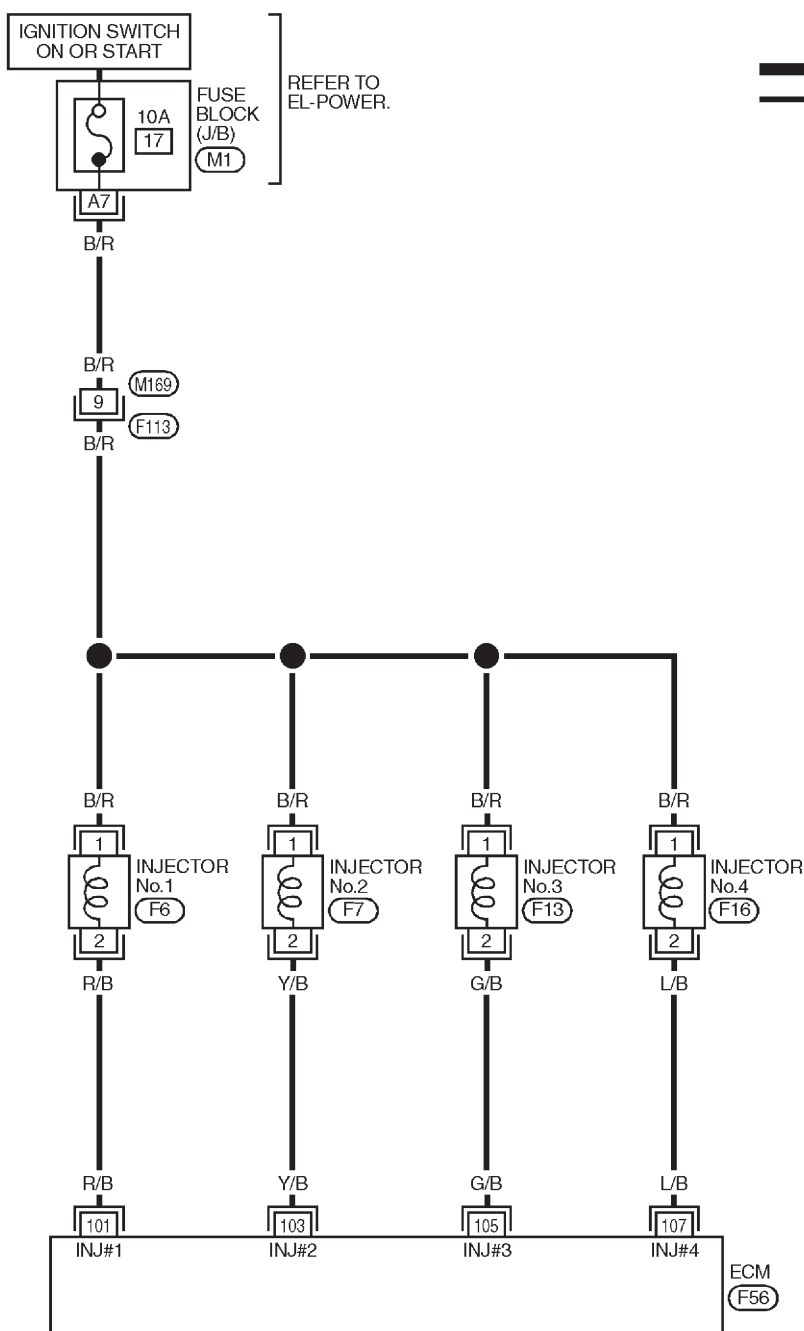

REFER TO THE FOLLOWING.

(M1) - FUSE BLOCK-
JUNCTION BOX (J/B)

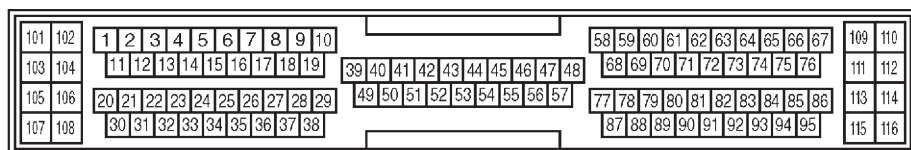

Diagnostic Procedure

NJECD438

1	CHECK OVERALL FUNCTION
----------	-------------------------------

With CONSULT-II

1. Start engine.
2. Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT-II.


ACTIVE TEST	
POWER BALANCE	
MONITOR	
ENG SPEED	XXX rpm
MAS A/F SE-B1	XXX V
IACV-AAC/V	XXX step

SEF190Y

3. Make sure that each circuit produces a momentary engine speed drop.

Without CONSULT-II

1. Start engine.
2. Listen to each injector operating sound.

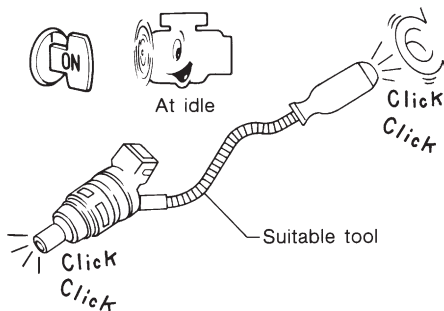

MEC703B

Clicking noise should be heard.


OK or NG

OK	▶	INSPECTION END
NG	▶	GO TO 2.

INJECTOR

QG

Diagnostic Procedure (Cont'd)

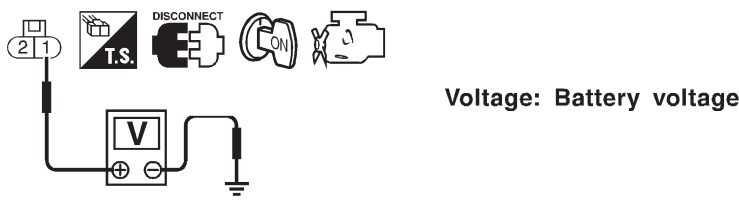2	CHECK POWER SUPPLY	
<ol style="list-style-type: none"> 1. Stop engine. 2. Disconnect injector harness connector. 3. Turn ignition switch "ON". 4. Check voltage between terminal 1 and ground with CONSULT-II or tester. 		
		
SEF949X		
OK or NG		
OK	▶	GO TO 4.
NG	▶	GO TO 3.

3	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● 10A fuse ● Harness connectors M169, F113 ● Harness for open or short between injector and fuse 		
▶ Repair harness or connectors.		


4	CHECK OUTPUT SIGNAL CIRCUIT	
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between injector harness connector terminal 2 and ECM terminals 101, 103, 105, 107. Refer to wiring diagram. Continuity should exist. 4. Also check harness for short to ground and short to power. 		
OK or NG		
OK	▶	GO TO 6.
NG	▶	GO TO 5.

5	DETECT MALFUNCTIONING PART	
Check the harness for open or short between ECM and injector.		
▶ Repair open circuit or short to ground or short to power in harness or connectors.		

6	CHECK INJECTOR	
Refer to "Component Inspection", EC-450.		
OK or NG		
OK	▶	GO TO 7.
NG	▶	Replace injector.

Diagnostic Procedure (Cont'd)

7	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.	
▶	INSPECTION END

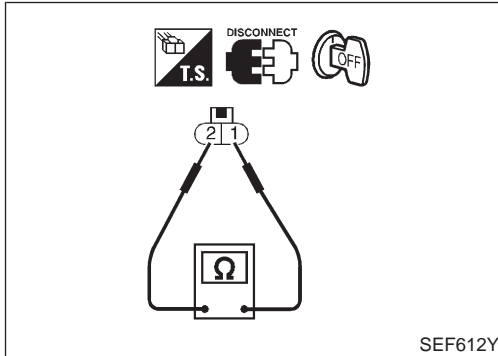

Component Inspection

INJECTOR

NJEC0439

NJEC0439S01

1. Disconnect injector harness connector.
2. Check resistance between terminals as shown in the figure.

Resistance: 13.5 - 17.5Ω [at 25°C (77°F)]

If NG, replace injector.

Component Description

IGNITION COIL AND POWER TRANSISTOR

NJEC0542
NJEC0542S01

The ignition signal from the ECM is sent to and amplified by the power transistor. The power transistor turns on and off the ignition coil primary circuit. This on-off operation induces the proper high voltage in the coil secondary circuit.

CONSULT-II Reference Value in Data Monitor Mode

NJEC0543

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
IGNITION SW	● Ignition switch: ON → OFF → ON	ON → OFF → ON



ECM Terminals and Reference Value

NJEC0544

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

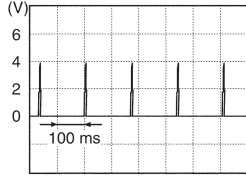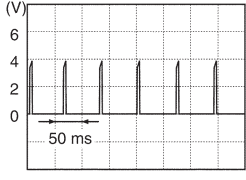TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
35	L/W	Ignition signal (No. 1)	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	0 - 0.2V 
36	PU	Ignition signal (No. 2)		0.2 - 0.4V 
37	L/R	Ignition signal (No. 3)		
38	GY/R	Ignition signal (No. 4)		

IGNITION SIGNAL


QG

Wiring Diagram

Wiring Diagram

NJEC1784

EC-IGN/SG-01

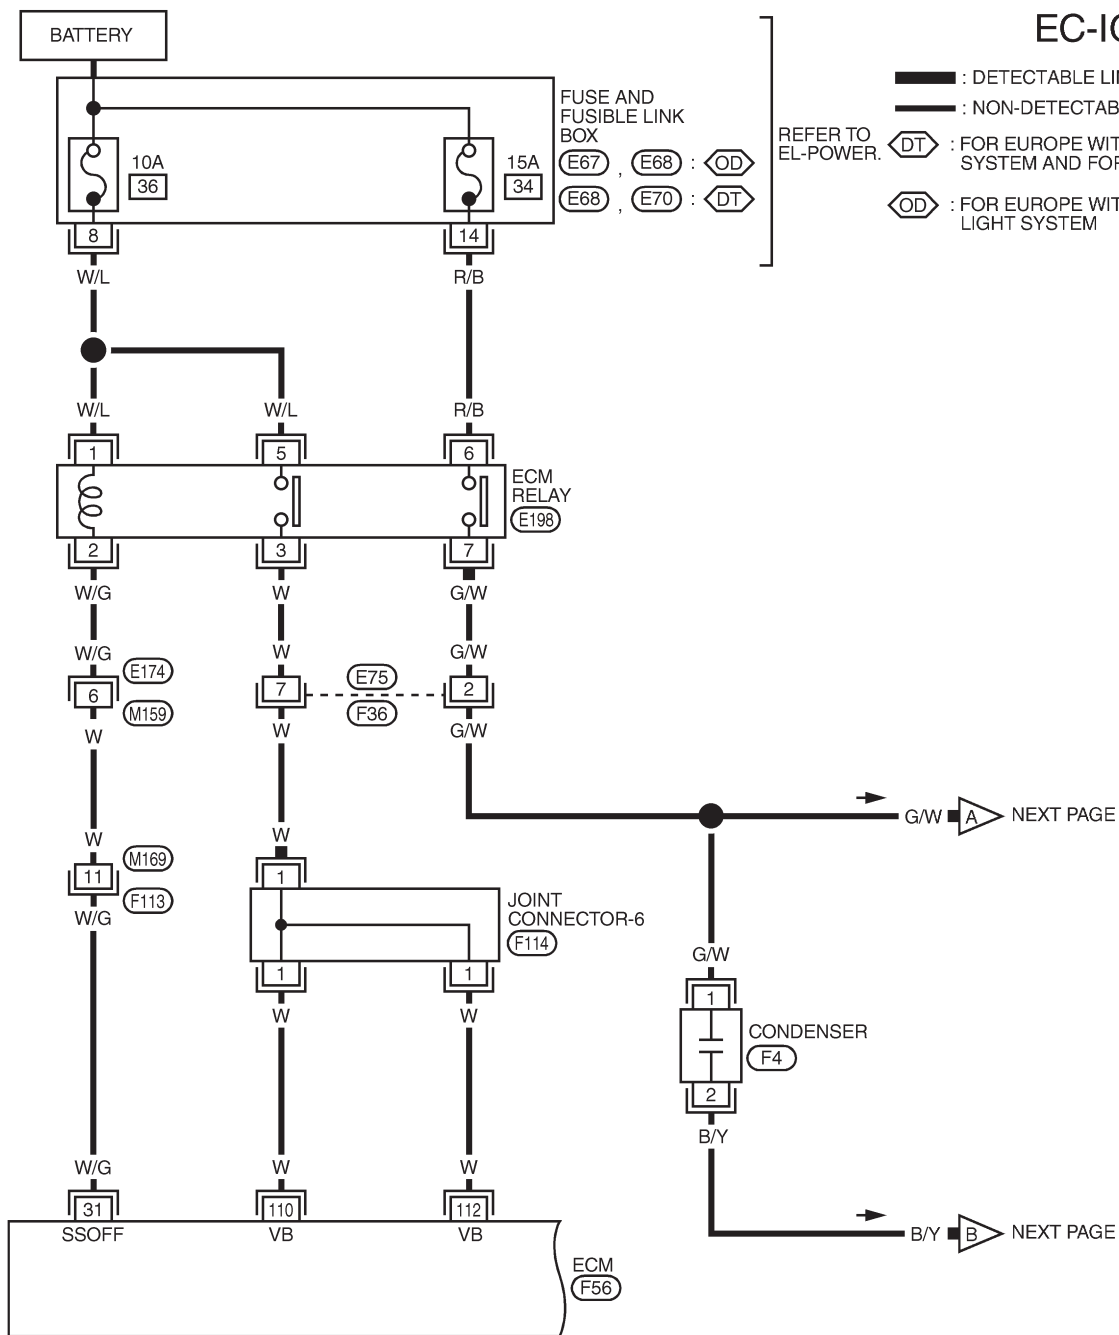

1	2	3	4	5	6	7		
8	9	10	11	12	13	14	15	16

(E174), (F113)
W BR

1	2
5	7
3	6

(E198)
BR

1
2

(F4)
W

1	2	3	4
5	6	7	8

(F36)
B

1	1	1	1	1	1	2	2	2	2
3	3	3	3	3	3	4	4	4	4

(F114)

REFER TO THE FOLLOWING.

(E67), (E68), (E70)

-FUSE AND FUSIBLE LINK BOX

101	102	1	2	3	4	5	6	7	8	9	10	58	59	60	61	62	63	64	65	66	67	109	110									
103	104	11	12	13	14	15	16	17	18	19	39	40	41	42	43	44	45	46	47	48	68	69	70	71	72	73	74	75	76	111	112	
105	106	20	21	22	23	24	25	26	27	28	29	49	50	51	52	53	54	55	56	57	77	78	79	80	81	82	83	84	85	86	113	114
107	108	30	31	32	33	34	35	36	37	38	87	88	89	90	91	92	93	94	95	115	116											

(F56)
GY




YEC997

IGNITION SIGNAL

QG

Wiring Diagram (Cont'd)

EC-IGN/SG-02

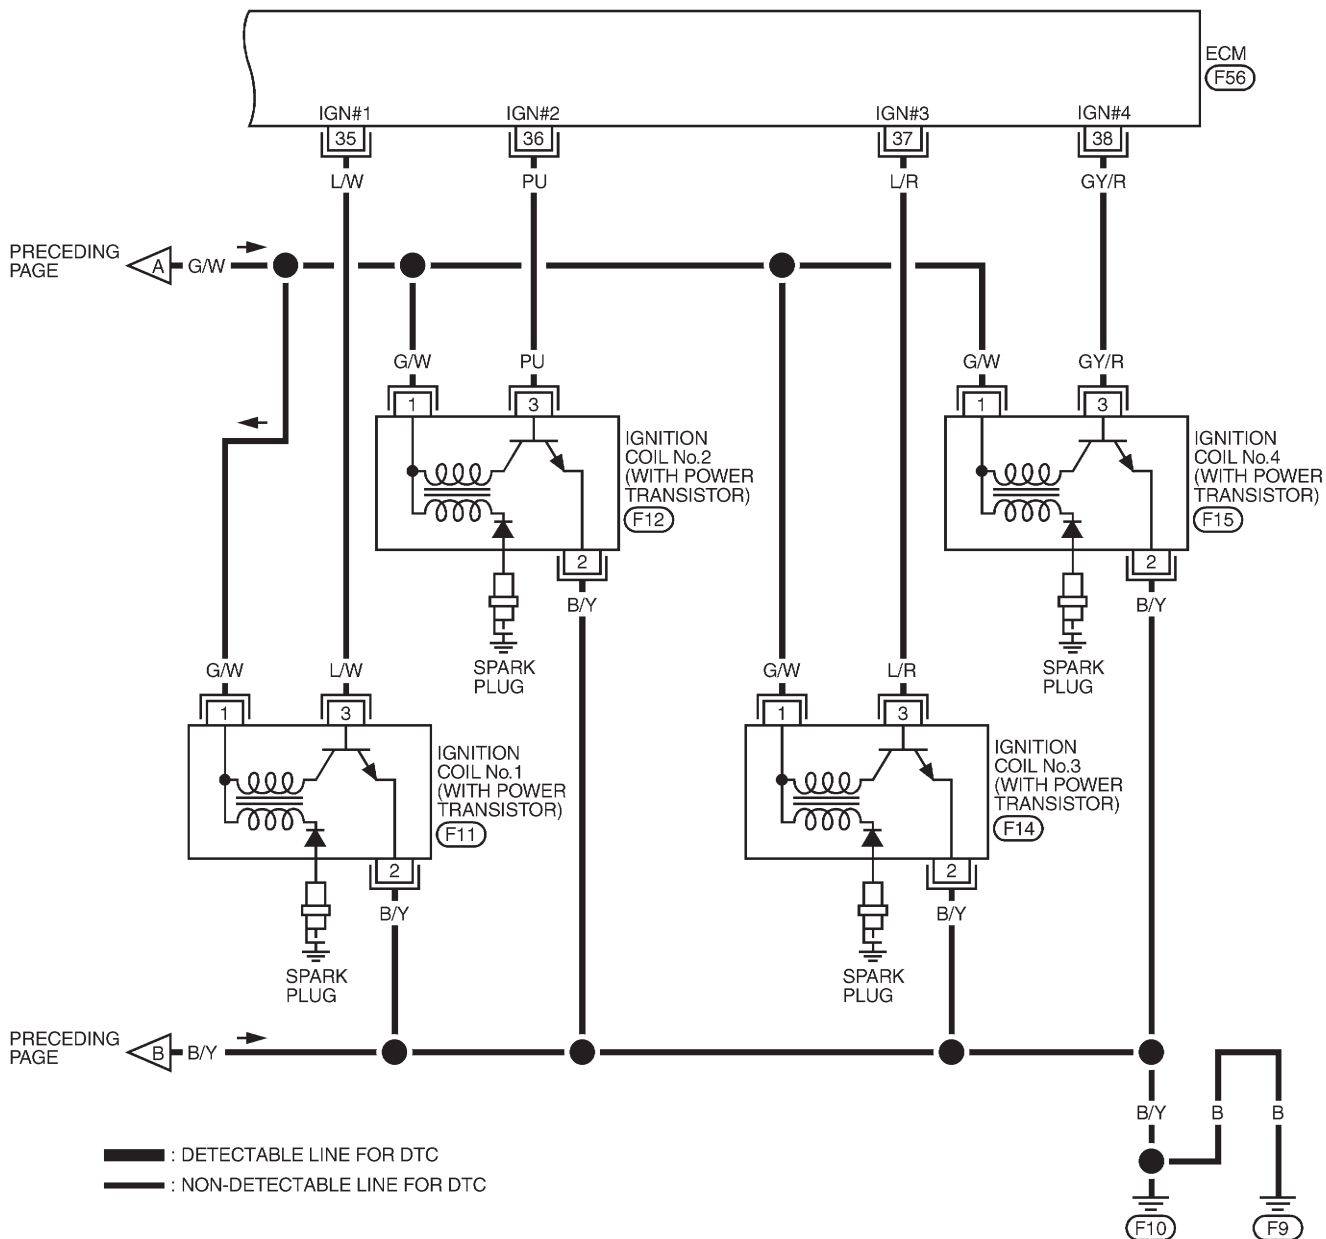

1 2 3 (F11), (F12), (F14), (F15)
 GY GY GY GY

101	102																					109	110									
103	104	1	2	3	4	5	6	7	8	9	10	39	40	41	42	43	44	45	46	47	48	68	69	70	71	72	73	74	75	76	111	112
105	106	20	21	22	23	24	25	26	27	28	29	49	50	51	52	53	54	55	56	57	77	78	79	80	81	82	83	84	85	86	113	114
107	108	30	31	32	33	34	35	36	37	38											87	88	89	90	91	92	93	94	95	115	116	



YEC998



Diagnostic Procedure

NJE00579

1	CHECK ENGINE START	
Turn ignition switch "OFF", and restart engine. Is engine running?		
Yes or No		
Yes (With CONSULT-II) ▶	GO TO 2.	
Yes (Without CONSULT-II) ▶	GO TO 12.	
No ▶	GO TO 3.	


2	SEARCH FOR MALFUNCTIONING CIRCUIT																	
<p>Ⓟ With CONSULT-II</p> <p>1. Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT-II.</p> <p>2. Search for circuit which does not produce a momentary engine speed drop.</p>																		
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <th>POWER BALANCE</th> <th></th> </tr> <tr> <th colspan="2">MONITOR</th> </tr> </thead> <tbody> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>MAS A/F SE-B1</td> <td>XXX V</td> </tr> <tr> <td>IACV-AAC/V</td> <td>XXX step</td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> </tbody> </table>			ACTIVE TEST		POWER BALANCE		MONITOR		ENG SPEED	XXX rpm	MAS A/F SE-B1	XXX V	IACV-AAC/V	XXX step				
ACTIVE TEST																		
POWER BALANCE																		
MONITOR																		
ENG SPEED	XXX rpm																	
MAS A/F SE-B1	XXX V																	
IACV-AAC/V	XXX step																	
SEF190Y																		
▶		GO TO 12.																

3	CHECK IGNITION COIL POWER SUPPLY CIRCUIT-I	
<p>1. Turn ignition switch ON.</p> <p>2. Check voltage between ECM terminals 110, 112 and ground with CONSULT-II or tester.</p>		
SEF366X		
OK ▶	GO TO 4.	
NG ▶	GO TO TROUBLE DIAGNOSIS FOR POWER SUPPLY, EC-145.	

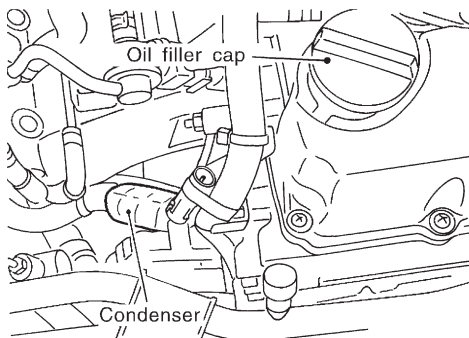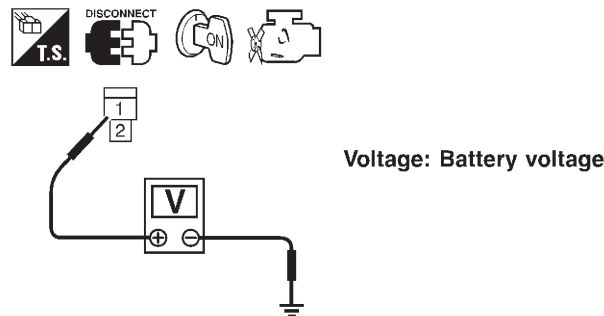4	CHECK IGNITION COIL POWER SUPPLY CIRCUIT-II	
<p>1. Turn ignition switch OFF. 2. Disconnect condenser harness connector.</p> <div style="text-align: center;">  </div> <p>3. Turn ignition switch ON. 4. Check voltage between condenser terminal 1 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  <p style="margin-left: 150px;">Voltage: Battery voltage</p> </div> <p style="text-align: center;">OK or NG</p>		
JEF121Y		
SEF367X		
OK	▶	GO TO 10.
NG	▶	GO TO 5.

5	CHECK IGNITION COIL POWER SUPPLY CIRCUIT-III	
<p>1. Turn ignition switch OFF. 2. Disconnect ECM relay. (For ECM relay location, refer to "Engine Control Component Parts Location".) 3. Check harness continuity between ECM relay terminal 7 and condenser terminal 1. Refer to Wiring Diagram. Continuity should exist. 4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK or NG		
OK	▶	GO TO 7.
NG	▶	GO TO 6.

6	DETECT MALFUNCTIONING PART	
Check the harness for open or short between ECM relay and condenser.		
▶ Repair open circuit or short to ground or short to power in harness or connectors.		


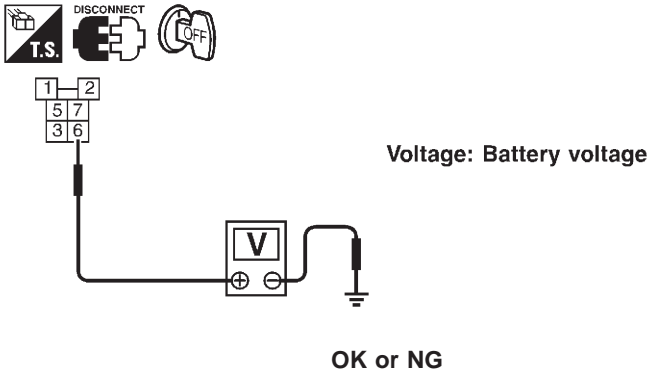
7	CHECK IGNITION COIL POWER SUPPLY CIRCUIT-IV	
Check voltage between ECM relay terminal 6 and ground with CONSULT-II or tester.		
		
SEF368X		
OK	▶	GO TO 9.
NG	▶	GO TO 8.

8	DETECT MALFUNCTIONING PART	
Check the following.		
<ul style="list-style-type: none"> ● 15A fuse ● Harness for open and short between ECM relay and fuse 		
		▶ Repair or replace harness or connectors.

9	CHECK ECM RELAY	
Refer to "Component Inspection", EC-458.		
OK or NG		
OK	▶	GO TO 17.
NG	▶	Replace ECM relay.

10	CHECK CONDENSER GROUND CIRCUIT	
<ol style="list-style-type: none"> 1. Turn ignition switch OFF. 2. Check harness continuity between condenser terminal 2 and engine ground. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to ground and short to power. 		
OK or NG		
OK	▶	GO TO 11.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

11	CHECK CONDENSER	
Refer to "Component Inspection", EC-458.		
OK or NG		
OK	▶	GO TO 12.
NG	▶	Replace condenser.

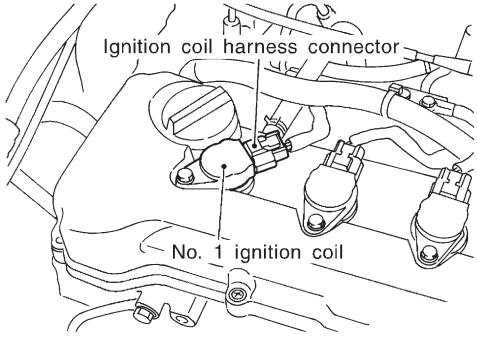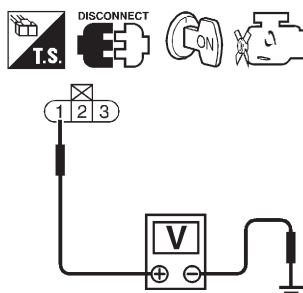12	CHECK IGNITION COIL POWER SUPPLY CIRCUIT-V
<p>1. Turn ignition switch OFF. 2. Reconnect harness connectors disconnected. 3. Disconnect ignition coil harness connector.</p> <div style="text-align: center;">  <p style="margin-left: 100px;">Ignition coil harness connector</p> <p style="margin-left: 100px;">No. 1 ignition coil</p> </div> <p style="text-align: right;">JEF119Y</p> <p>4. Turn ignition switch ON. 5. Check voltage between ignition coil terminal 1 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  <p style="margin-left: 100px;">Voltage: Battery voltage</p> <p style="margin-left: 100px;">OK or NG</p> <p style="text-align: right;">SEF122Y</p> </div>	
OK	▶ GO TO 14.
NG	▶ GO TO 13.


13	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connector E75, F36 (If so equipped) ● Harness for open or short between ignition coil and ECM relay terminal 7 <p style="text-align: right;">▶ Repair or replace harness or connectors.</p>	

14	CHECK IGNITION COIL GROUND CIRCUIT
<p>1. Turn ignition switch OFF. 2. Check harness continuity between ignition coil terminal 2 and engine ground. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 15.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

15	CHECK IGNITION COIL OUTPUT SIGNAL CIRCUIT	
1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminals 35, 36, 37, 38 and ignition coil terminal 3. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to ground and short to power.		
OK or NG		
OK	▶	GO TO 16.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

16	CHECK IGNITION COIL WITH POWER TRANSISTOR	
Refer to "Component Inspection", EC-458.		
OK or NG		
OK	▶	GO TO 17.
NG	▶	Replace ignition coil with power transistor.

17	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.		
▶ INSPECTION END		

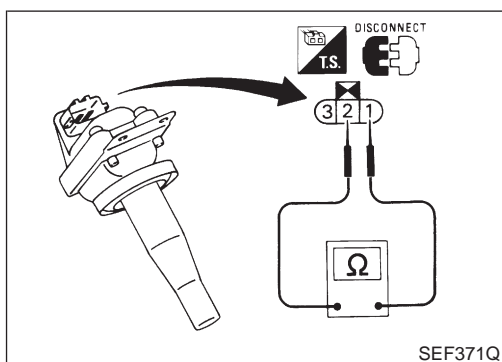

Component Inspection

IGNITION COIL WITH POWER TRANSISTOR


NJEC0547

NJEC0547S01

1. Disconnect ignition coil with power transistor harness connector.
2. Check ignition coil with power transistor for resistance as show in the figure.

Terminal No. (Polarity)	Resistance Ω [at 25°C (77°F)]
3 (+) - 2 (-)	Except 0 or ∞
1 (+) - 3 (-)	Except 0
1 (+) - 2 (-)	

If NG, replace ignition coil with power transistor assembly.

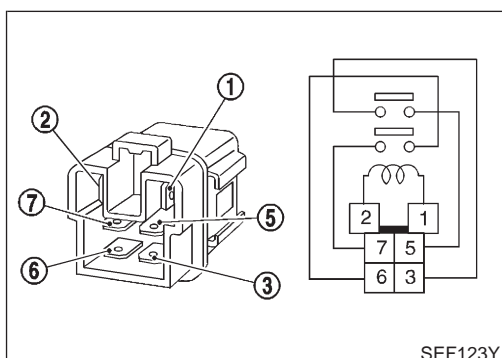

ECM RELAY

NJEC0547S03

1. Apply 12V of direct current between ECM relay terminals 1 and 2.
2. Check continuity between ECM relay terminals 3 and 5, and 6 and 7.


Condition	Continuity
12V direct current supply between terminals 1 and 2	Yes
OFF	No

IGNITION SIGNAL

QG

Component Inspection (Cont'd)

If NG, replace ECM relay.

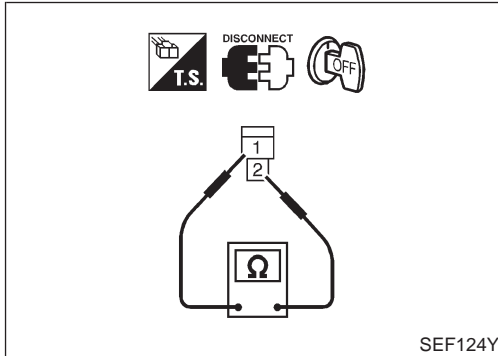

CONDENSER

NJEC0547S02

1. Disconnect condenser harness connector.
2. Check condenser continuity between terminals 1 and 2.

Resistance: Above 1 M Ω at 25°C (77°F)

If NG, replace condenser.

START SIGNAL

QG

CONSULT-II Reference Value in Data Monitor Mode

CONSULT-II Reference Value in Data Monitor Mode

NJEC0441

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
START SIGNAL	● Ignition switch: ON → START → ON	OFF → ON → OFF

ECM Terminals and Reference Value

NJEC0442

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
41	B/Y	Start signal	[Ignition switch "ON"]	Approximately 0V
			[Ignition switch "START"]	9 - 12V

START SIGNAL



QG

Wiring Diagram


Wiring Diagram

NJEC0440

EC-S/SIG-01

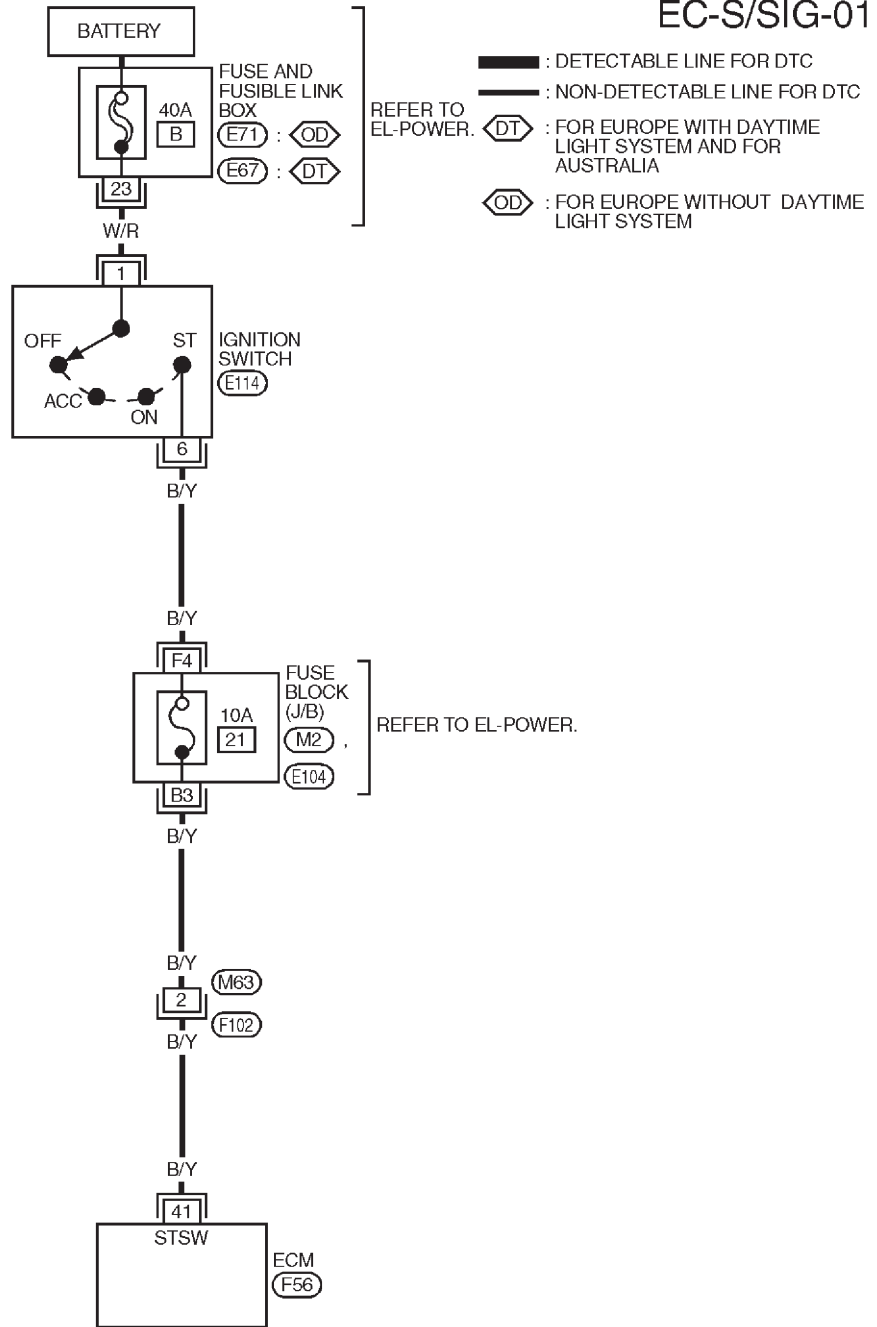

REFER TO THE FOLLOWING.
 (M2), (E104) - FUSE BLOCK-JUNCTION BOX (J/B)
 (E67), (E71) - FUSE AND FUSIBLE LINK BOX

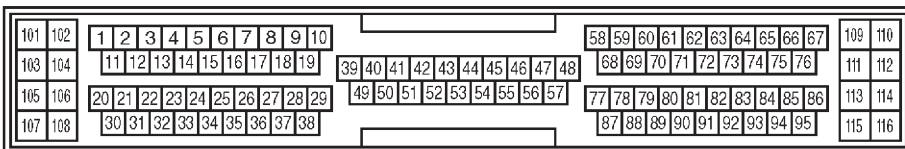

YEC999

START SIGNAL

QG

Diagnostic Procedure

Diagnostic Procedure

=NJE0443

1	INSPECTION START	
Do you have CONSULT-II?		
Yes or No		
Yes	▶	GO TO 2.
No	▶	GO TO 3.

2	CHECK OVERALL FUNCTION							
<p> With CONSULT-II</p> <p>1. Turn ignition switch "ON".</p> <p>2. Check "START SIGNAL" in "DATA MONITOR" mode with CONSULT-II under the following conditions.</p>								
<table border="1" style="margin: auto;"> <tr><th colspan="2">DATA MONITOR</th></tr> <tr><th>MONITOR</th><th>NO DTC</th></tr> <tr><td>START SIGNAL</td><td>OFF</td></tr> </table>			DATA MONITOR		MONITOR	NO DTC	START SIGNAL	OFF
DATA MONITOR								
MONITOR	NO DTC							
START SIGNAL	OFF							
<table border="1" style="margin: auto;"> <tr><th>Condition</th><th>"START SIGNAL"</th></tr> <tr><td>Ignition switch "ON"</td><td>OFF</td></tr> <tr><td>Ignition switch "START"</td><td>ON</td></tr> </table>			Condition	"START SIGNAL"	Ignition switch "ON"	OFF	Ignition switch "START"	ON
Condition	"START SIGNAL"							
Ignition switch "ON"	OFF							
Ignition switch "START"	ON							
SEF227Y								
OK or NG								
OK	▶	INSPECTION END						
NG	▶	GO TO 4.						

3	CHECK OVERALL FUNCTION							
<p> Without CONSULT-II</p> <p>1. Turn ignition switch to "START".</p> <p>2. Check voltage between ECM terminal 41 and ground under the following conditions.</p>								
<table border="1" style="margin: auto;"> <tr><th>Condition</th><th>Voltage</th></tr> <tr><td>Ignition switch "START"</td><td>Battery Voltage</td></tr> <tr><td>Except above</td><td>Approximately 0V</td></tr> </table>			Condition	Voltage	Ignition switch "START"	Battery Voltage	Except above	Approximately 0V
Condition	Voltage							
Ignition switch "START"	Battery Voltage							
Except above	Approximately 0V							
SEF613Y								
OK or NG								
OK	▶	INSPECTION END						
NG	▶	GO TO 4.						

START SIGNAL

QG

Diagnostic Procedure (Cont'd)

4	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none">● Harness connectors M63, F102● 10A fuse● Harness for open or short between ECM and ignition switch	
OK or NG	
OK	▶ GO TO 5.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

5	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.	
	▶ INSPECTION END


System Description

NJEC0444

Sensor	Input Signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS)	Engine speed	Fuel pump control	Fuel pump relay
Camshaft position sensor (PHASE)	Engine speed and cylinder number		
Ignition switch	Ignition signal and start signal		

The ECM activates the fuel pump for several seconds after the ignition switch is turned on to improve engine startability. If the ECM receives a 180° signal from the camshaft position sensor, it knows that the engine is rotating, and causes the pump to perform. If the 180° signal is not received when the ignition switch is on, the engine stalls. The ECM stops pump operation and prevents battery discharging, thereby improving safety. The ECM does not directly drive the fuel pump. It controls the ON/OFF fuel pump relay, which in turn controls the fuel pump.

Condition	Fuel pump operation
Ignition switch is turned to ON.	Operates for 1 second
Engine running and cranking	Operates
When engine is stopped (Signal is not sent from crankshaft position sensor and camshaft position sensor.)	Stops in 1.5 seconds
Except as shown above	Stops

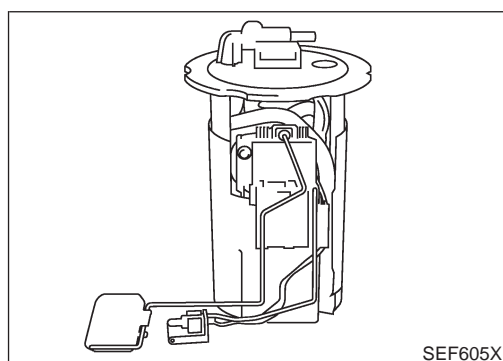

Component Description

A turbine type design fuel pump is used in the fuel tank.

NJEC0501

CONSULT-II Reference Value in Data Monitor Mode

NJEC0445

MONITOR ITEM	CONDITION	SPECIFICATION
FUEL PUMP RLY	<ul style="list-style-type: none"> ● Ignition switch is turned to ON (Operates for 1 second) ● Engine running and cranking ● When engine is stopped (stops in 1.5 seconds) 	ON
	<ul style="list-style-type: none"> ● Except as shown above 	OFF

FUEL PUMP

QG*ECM Terminals and Reference Value*

ECM Terminals and Reference Value

=NJE0446

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
21	B/P	Fuel pump relay	[Ignition switch "ON"] ● For 1 second after turning ignition switch "ON" [Engine is running]	0 - 1V
			[Ignition switch "ON"] ● More than 1 second after turning ignition switch "ON"	BATTERY VOLTAGE (11 - 14V)

FUEL PUMP









QG



Wiring Diagram

Wiring Diagram


NJEC0447


EC-F/PUMP-01

-  : DETECTABLE LINE FOR DTC
-  : NON-DETECTABLE LINE FOR DTC
-  : SEDAN MODELS
-  : HATCH BACK MODELS
-  : WITH POWER DOOR LOCK
-  : WITHOUT POWER DOOR LOCK
- * 1 ---  2,  7

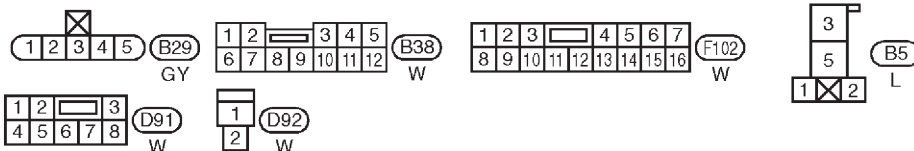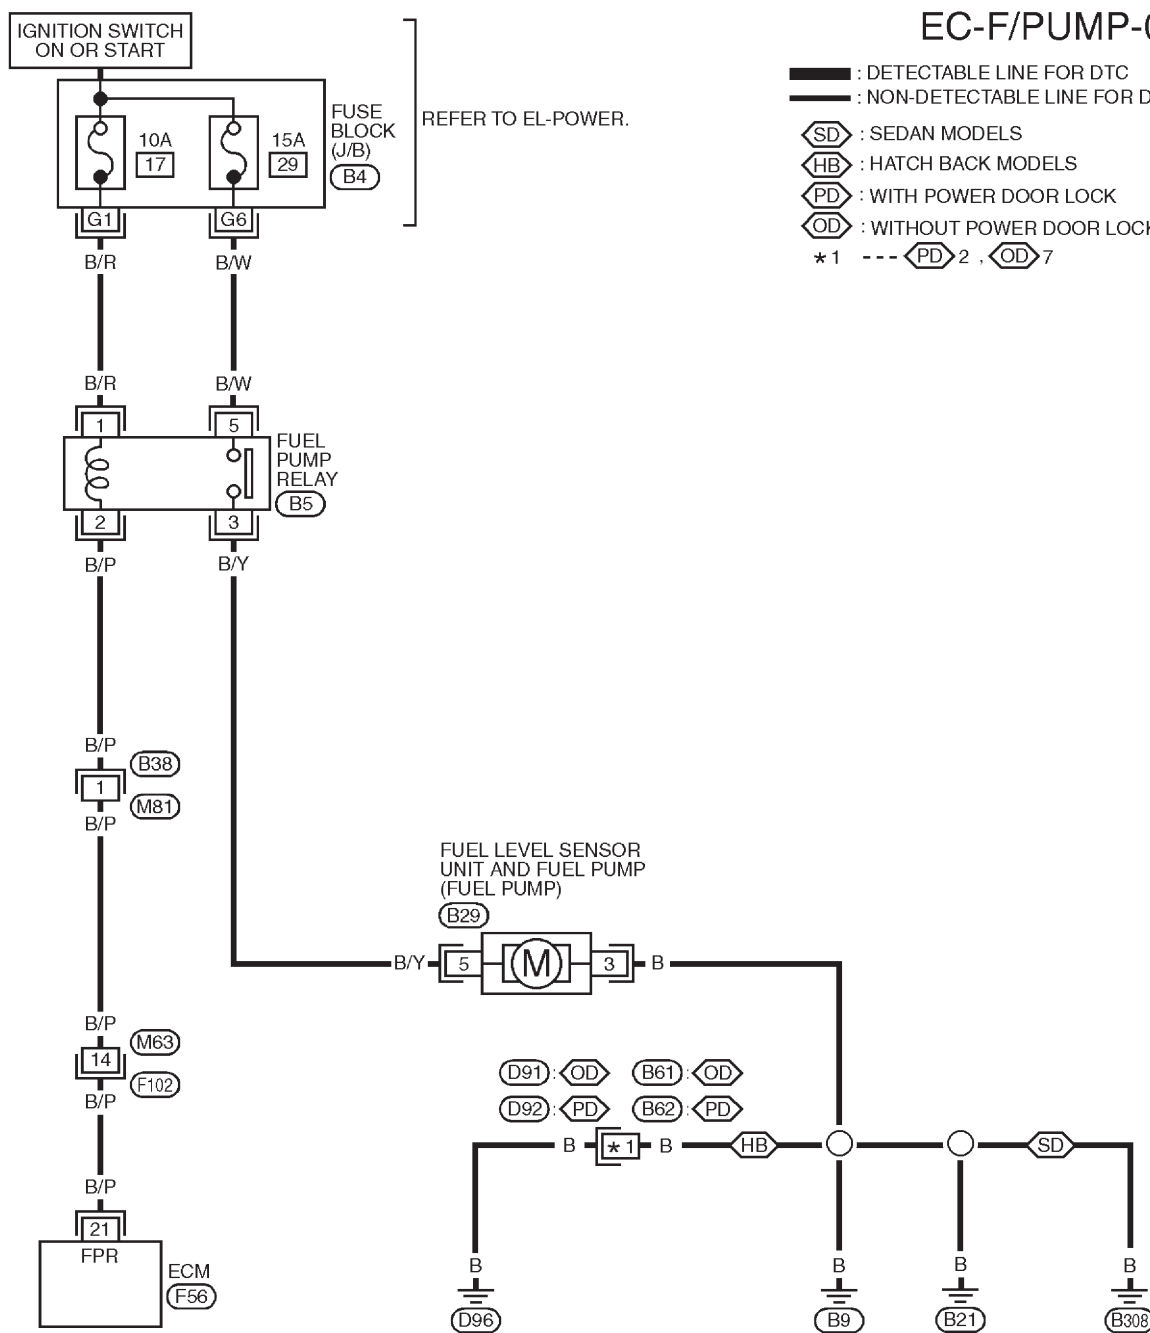

REFER TO THE FOLLOWING.


 - FUSE BLOCK-JUNCTION BOX (J/B)


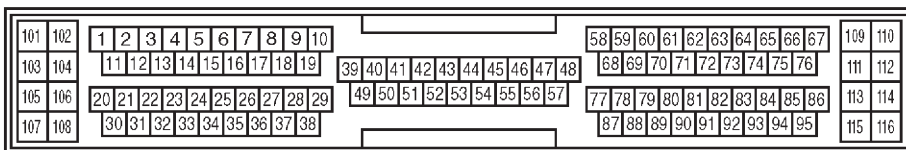


YEC001A

Diagnostic Procedure

NJE0448

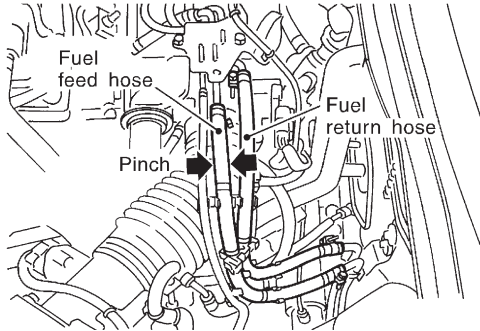1	CHECK OVERALL FUNCTION		
<ol style="list-style-type: none"> 1. Turn ignition switch "ON". 2. Pinch fuel feed hose with fingers. 			
			
JEF133Y			
<p style="text-align: center;">Fuel pressure pulsation should be felt on the fuel feed hose for 1 second after ignition switch is turned "ON".</p> <p style="text-align: center;">OK or NG</p>			
OK	▶	INSPECTION END	
NG	▶	GO TO 2.	

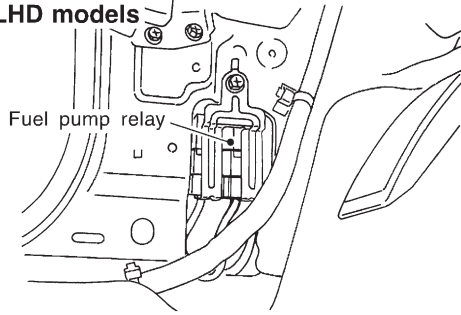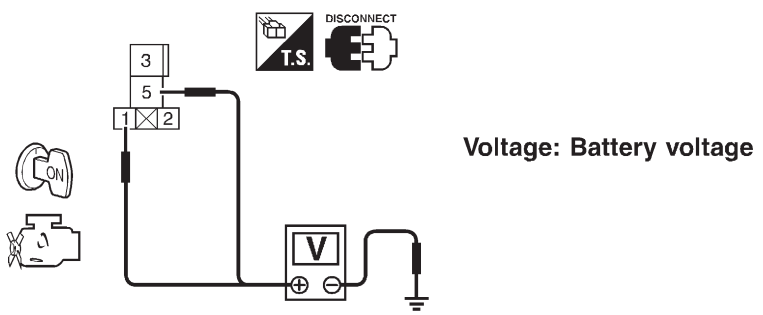
2	CHECK POWER SUPPLY		
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect fuel pump relay. 			
<p>Dashside lower LH LHD models</p> 			
JEF134Y			
<ol style="list-style-type: none"> 3. Turn ignition switch "ON". 4. Check voltage between terminals 1, 5 and ground with CONSULT-II or tester. 			
			
SEF607X			
OK or NG			
OK	▶	GO TO 4.	
NG	▶	GO TO 3.	

FUEL PUMP

QG

Diagnostic Procedure (Cont'd)

3	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none"> ● 10A fuse ● 15A fuse ● Harness for open or short between fuse and fuel pump relay 	
▶	Repair harness or connectors.

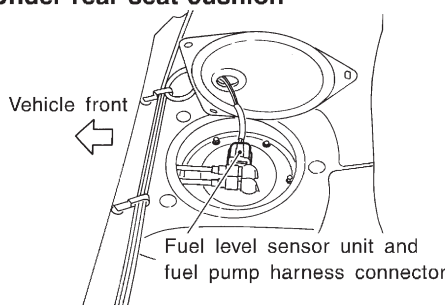4	CHECK POWER GROUND CIRCUIT
1. Turn ignition switch "OFF". 2. Disconnect fuel level sensor unit and fuel pump harness connector.	
Under rear seat cushion	
	
JEF135Y	
3. Check harness continuity between fuel level sensor unit and fuel pump harness connector terminal 3 and body ground, terminal 5 and fuel pump relay connector terminal 3. Refer to wiring diagram. Continuity should exist.	
4. Also check harness for short to ground and short to power.	
OK or NG	
OK	▶ GO TO 6.
NG	▶ GO TO 5.

5	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none"> ● Harness for open or short between fuel pump and body ground ● Harness for open or short between fuel pump and fuel pump relay 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

6	CHECK OUTPUT SIGNAL CIRCUIT
1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal 21 and fuel pump relay connector terminal 2. Refer to wiring diagram. Continuity should exist.	
3. Also check harness for short to ground and short to power.	
OK or NG	
OK	▶ GO TO 8.
NG	▶ GO TO 7.

7	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none"> ● Harness connectors B38, M81 ● Harness connectors M63, F102 ● Harness for open or short between ECM and fuel pump relay 	
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

FUEL PUMP


QG

Diagnostic Procedure (Cont'd)

8	CHECK FUEL PUMP RELAY	
Refer to "Component Inspection", EC-469.		
OK or NG		
OK	▶	GO TO 9.
NG	▶	Replace fuel pump relay.

9	CHECK FUEL PUMP	
Refer to "Component Inspection", EC-469.		
OK or NG		
OK	▶	GO TO 10.
NG	▶	Replace fuel pump.

10	CHECK INTERMITTENT INCIDENT	
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.		
		▶ INSPECTION END

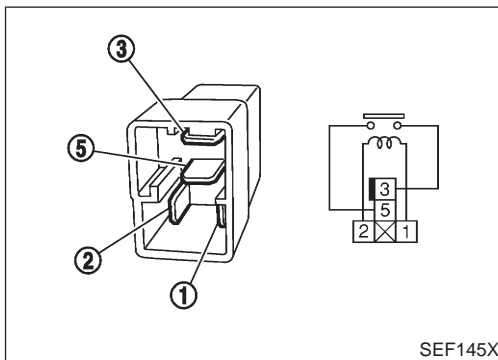

Component Inspection FUEL PUMP RELAY


NJEC0449

NJEC0449S01

Check continuity between terminals 3 and 5.

Conditions	Continuity
12V direct current supply between terminals 1 and 2	Yes
No current supply	No

If NG, replace relay.

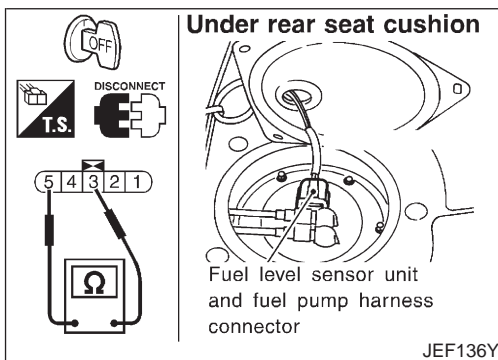

FUEL PUMP

NJEC0449S02

1. Disconnect fuel level sensor unit and fuel pump harness connector.

2. Check resistance between terminals 3 and 5.


Resistance: 0.2 - 5.0Ω [at 25°C (77°F)]

If NG, replace fuel pump.

POWER STEERING OIL PRESSURE SWITCH

QG

Component Description

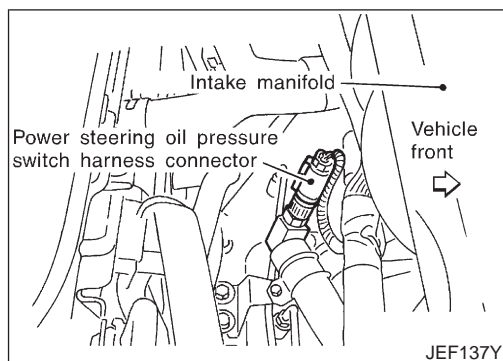

Component Description

NJEC0451

The power steering oil pressure switch is attached to the power steering high-pressure tube and detects a power steering load. When a power steering load is detected, it signals the ECM. The ECM adjusts the IACV-AAC valve to increase the idle speed and adjust for the increased load.

CONSULT-II Reference Value in Data Monitor Mode

NJEC0452

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
PW/ST SIGNAL	<ul style="list-style-type: none"> Engine: After warming up, idle the engine 	Steering wheel in neutral position (forward direction)	OFF
		The steering wheel is fully turned	ON

ECM Terminals and Reference Value

NJEC0453

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
46	PU/W	Power steering oil pressure switch	[Engine is running] <ul style="list-style-type: none"> Steering wheel is fully turned 	Approximately 0V
			[Engine is running] <ul style="list-style-type: none"> Steering wheel is not turned 	Approximately 5V

POWER STEERING OIL PRESSURE SWITCH

QG




Wiring Diagram

Wiring Diagram

NJEC0450

EC-PST/SW-01

— : DETECTABLE LINE FOR DTC
 — : NON-DETECTABLE LINE FOR DTC

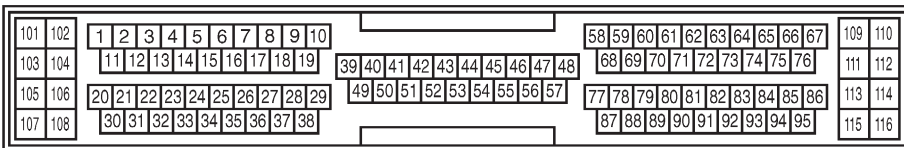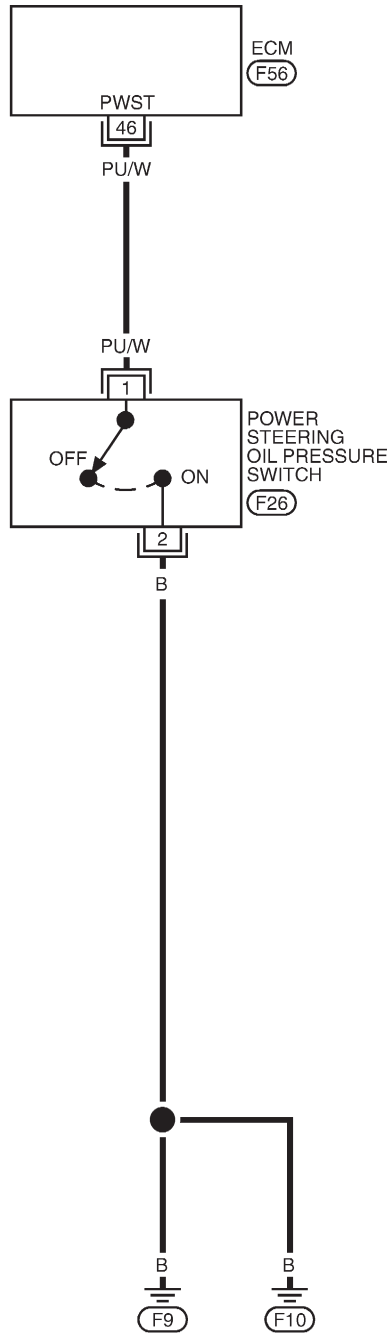

POWER STEERING OIL PRESSURE SWITCH

QG

Diagnostic Procedure

Diagnostic Procedure

=NJE0454

1	INSPECTION START	
Do you have CONSULT-II?		
Yes or No		
Yes	▶	GO TO 2.
No	▶	GO TO 3.

2	CHECK OVERALL FUNCTION							
<p> With CONSULT-II</p> <p>1. Start engine.</p> <p>2. Check "PW/ST SIGNAL" in "DATA MONITOR" mode with CONSULT-II under the following conditions.</p>								
<table border="1" style="margin: 0 auto;"> <tr><th colspan="2">DATA MONITOR</th></tr> <tr><td>MONITOR</td><td>NO DTC</td></tr> <tr><td>PW/ST SIGNAL</td><td>OFF</td></tr> </table>			DATA MONITOR		MONITOR	NO DTC	PW/ST SIGNAL	OFF
DATA MONITOR								
MONITOR	NO DTC							
PW/ST SIGNAL	OFF							
<table border="1" style="margin: 0 auto;"> <thead> <tr> <th>Conditions</th> <th>PW/ST SIGNAL</th> </tr> </thead> <tbody> <tr> <td>Steering is in neutral position</td> <td>OFF</td> </tr> <tr> <td>Steering is turned</td> <td>ON</td> </tr> </tbody> </table>			Conditions	PW/ST SIGNAL	Steering is in neutral position	OFF	Steering is turned	ON
Conditions	PW/ST SIGNAL							
Steering is in neutral position	OFF							
Steering is turned	ON							
SEF311Y								
OK or NG								
OK	▶	INSPECTION END						
NG	▶	GO TO 4.						

3	CHECK OVERALL FUNCTION							
<p> Without CONSULT-II</p> <p>1. Start engine.</p> <p>2. Check voltage between ECM terminal 46 and ground under the following conditions.</p>								
<table border="1" style="margin: 0 auto;"> <thead> <tr> <th>Condition</th> <th>Voltage</th> </tr> </thead> <tbody> <tr> <td>When steering wheel is turned quickly</td> <td>Approximately 0V</td> </tr> <tr> <td>Except above</td> <td>Approximately 5V</td> </tr> </tbody> </table>			Condition	Voltage	When steering wheel is turned quickly	Approximately 0V	Except above	Approximately 5V
Condition	Voltage							
When steering wheel is turned quickly	Approximately 0V							
Except above	Approximately 5V							
SEF614Y								
OK or NG								
OK	▶	INSPECTION END						
NG	▶	GO TO 4.						

POWER STEERING OIL PRESSURE SWITCH

QG

Diagnostic Procedure (Cont'd)

4	CHECK GROUND CIRCUIT	
<p>1. Turn ignition switch "OFF".</p> <p>2. Disconnect power steering oil pressure switch harness connector.</p> <p>3. Check harness continuity between power steering oil pressure switch harness terminal 2 and engine ground. Refer to wiring diagram. Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 5.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

5	CHECK INPUT SIGNAL CIRCUIT	
<p>1. Disconnect ECM harness connector.</p> <p>2. Check harness continuity between ECM terminal 46 and power steering oil pressure switch harness terminal 1. Refer to wiring diagram. Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 7.
NG	▶	GO TO 6.

6	DETECT MALFUNCTIONING PART	
Check the harness for open or short between ECM and power steering oil pressure switch.		
	▶	Repair open circuit or short to ground or short to power in harness or connectors.

7	CHECK POWER STEERING OIL PRESSURE SWITCH	
Refer to "Component Inspection", EC-473. <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 8.
NG	▶	Replace power steering oil pressure switch.

8	CHECK INTERMITTENT INCIDENT	
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.		
	▶	INSPECTION END

Component Inspection

POWER STEERING OIL PRESSURE SWITCH

NJEC0455

NJEC0455S01

1. Disconnect power steering oil pressure switch harness connector then start engine.
2. Check continuity between terminals 1 and 2. Refer to wiring diagram.

Conditions	Continuity
Steering wheel is being fully turned.	Yes
Steering wheel is not being turned.	No

POWER STEERING OIL PRESSURE SWITCH

QG


Component Inspection (Cont'd)

If NG, replace power steering oil pressure switch.

REFRIGERANT PRESSURE SENSOR

QG


Description

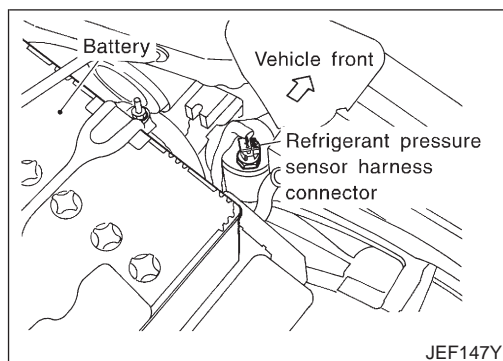

Description

NJEC0580

The refrigerant pressure sensor is installed at the liquid tank of the air conditioner system. The sensor uses an electrostatic volume pressure transducer to convert refrigerant pressure to voltage. The voltage signal is sent to ECM, and ECM controls cooling fan system.

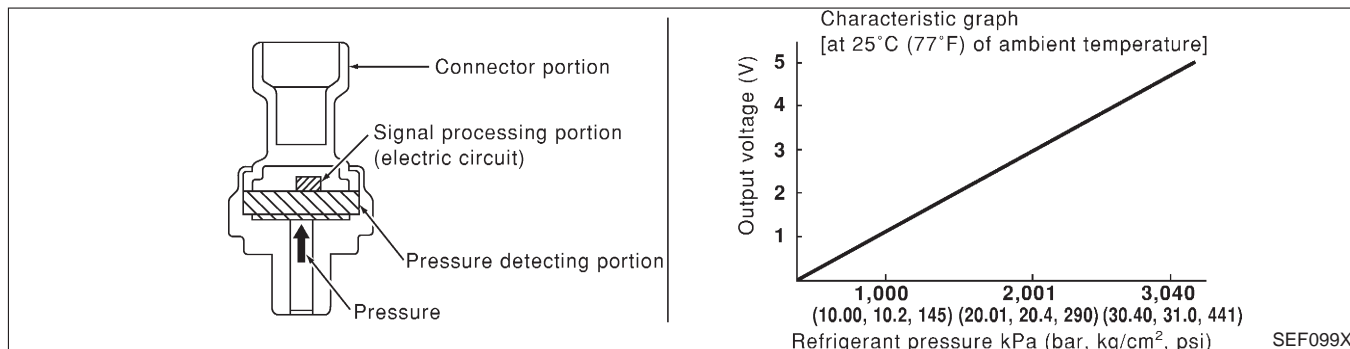

ECM Terminals and Reference Value

NJEC0581

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
58	B	Sensor's ground	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0V
74	R/L	Refrigerant pressure sensor	[Engine is running] ● Warm-up condition ● Both A/C switch and blower switch are "ON" (Compressor operates.)	1.0 - 4.0V
111	R	Sensor's power supply	[Ignition switch "ON"]	Approximately 5V




REFRIGERANT PRESSURE SENSOR

QG

Wiring Diagram

Wiring Diagram

NJEC0582

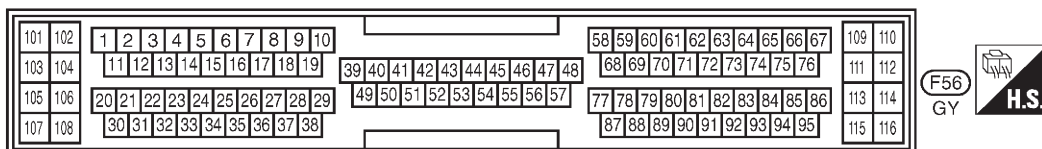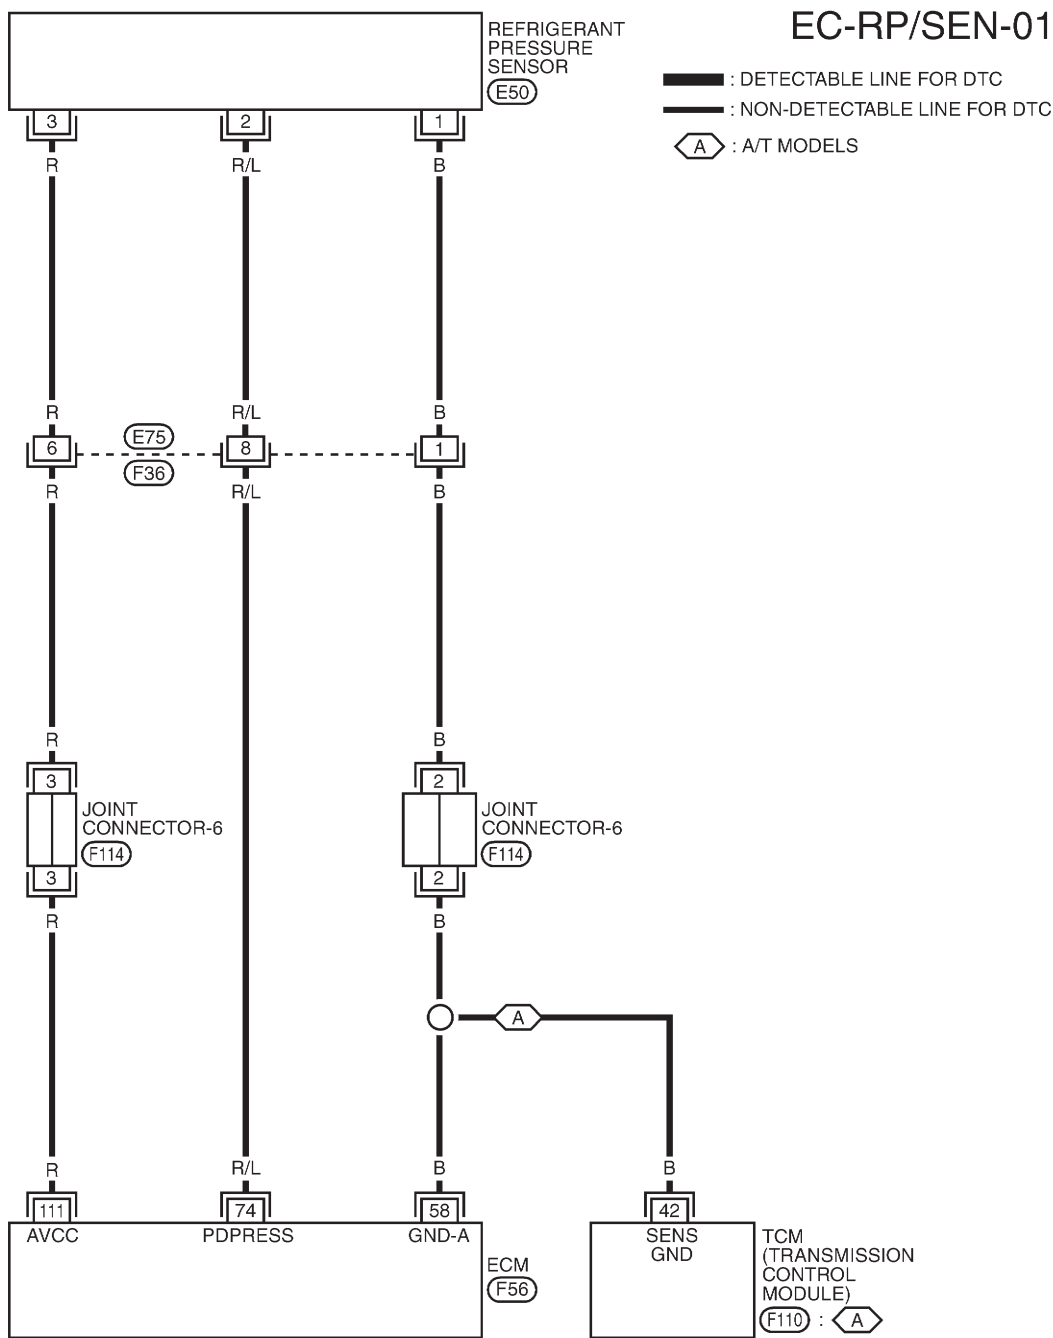




EC-476

YEC003A

Diagnostic Procedure

NJE00590

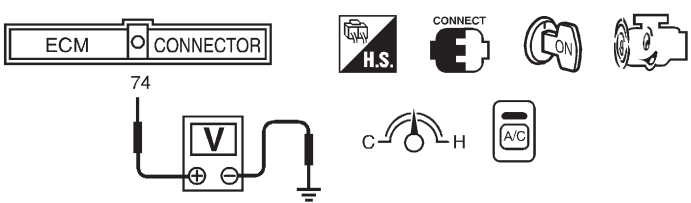1	CHECK REFRIGERANT PRESSURE SENSOR OVERALL FUNCTION	
<p>1. Start engine and warm it up to normal operating temperature. 2. Turn A/C switch and blower switch "ON". 3. Check voltage between ECM terminal 74 and ground with CONSULT-II or tester.</p>		
		
Voltage: 1.0 - 4.0V		
SEF952XA		
OK or NG		
OK	▶	INSPECTION END
NG	▶	GO TO 2.

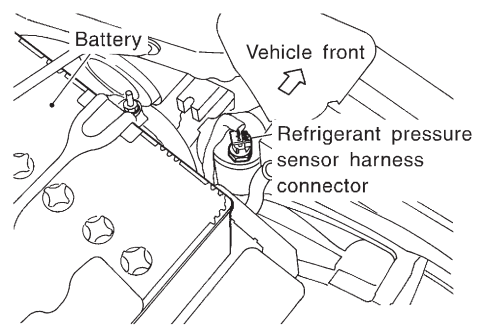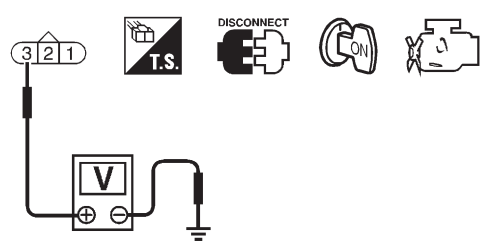2	CHECK REFRIGERANT PRESSURE SENSOR POWER SUPPLY CIRCUIT	
<p>1. Turn A/C switch and blower switch "OFF". 2. Stop engine. 3. Disconnect refrigerant pressure sensor harness connector.</p>		
		
JEF147Y		
<p>4. Turn ignition switch "ON". 5. Check voltage between refrigerant pressure sensor terminal 3 and ground with CONSULT-II or tester.</p>		
		
Voltage: Approximately 5V		
SEF953X		
OK or NG		
OK	▶	GO TO 4.
NG	▶	GO TO 3.

REFRIGERANT PRESSURE SENSOR

QG*Diagnostic Procedure (Cont'd)*

3	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none">● Harness connectors E75, F36● Joint connector-6● Harness for open or short between ECM and refrigerant pressure sensor	
	▶ Repair harness or connectors.

4	CHECK REFRIGERANT PRESSURE SENSOR GROUND CIRCUIT
1. Turn ignition switch "OFF". 2. Check harness continuity between refrigerant pressure sensor terminal 1 and engine ground. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to ground and short to power.	
OK or NG	
OK	▶ GO TO 6.
NG	▶ GO TO 5.

5	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none">● Harness connectors E75, F36● Joint connector-6● Harness for open or short between ECM and refrigerant pressure sensor● Harness for open or short between TCM (Transmission Control Module) and refrigerant pressure sensor	
	▶ Repair open circuit or short to ground or short to power in harness or connectors.

6	CHECK REFRIGERANT PRESSURE SENSOR INPUT SIGNAL CIRCUIT
1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal 74 and refrigerant pressure sensor terminal 2. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to ground and short to power.	
OK or NG	
OK	▶ GO TO 8.
NG	▶ GO TO 7.

7	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none">● Harness connectors E75, F36● Harness for open or short between ECM and refrigerant pressure sensor	
	▶ Repair open circuit or short to ground or short to power in harness or connectors.

8	CHECK REFRIGERANT PRESSURE SENSOR
Refer to HA-72, "Refrigerant pressure sensor".	
OK or NG	
OK	▶ GO TO 9.
NG	▶ Replace refrigerant pressure sensor.

REFRIGERANT PRESSURE SENSOR

QG

Diagnostic Procedure (Cont'd)

9	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.	
▶	INSPECTION END

ELECTRICAL LOAD SIGNAL

QG

CONSULT-II Reference Value in Data Monitor Mode

CONSULT-II Reference Value in Data Monitor Mode

NJE00548

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
LOAD SIGNAL	<ul style="list-style-type: none"> ● Ignition switch: ON 	Rear window defogger is operating and/or lighting switch is on. ON
		Rear window defogger is not operating and lighting switch is not on. OFF
HEATER FAN SW	<ul style="list-style-type: none"> ● Ignition switch: ON 	Heater fan motor is operating. ON
		Heater fan motor is not operating. OFF

ECM Terminals and Reference Value

NJE00549

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.





TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
50	L/B	Electric load signal (Load switch)	[Engine is running] <ul style="list-style-type: none"> ● Rear window defogger is operating and/or lighting switch is on 	BATTERY VOLTAGE (11 - 14V)
			[Engine is running] <ul style="list-style-type: none"> ● Rear window defogger is not operating and lighting switch is not on 	Approximately 0V
51	LG/B	Heater fan motor switch	[Engine is running] <ul style="list-style-type: none"> ● Heater fan motor is operating 	Approximately 0V
			[Engine is running] <ul style="list-style-type: none"> ● Heater fan motor is not operating 	Approximately 5V

ELECTRICAL LOAD SIGNAL

Wiring Diagram

NJE00550

EC-LOAD-01

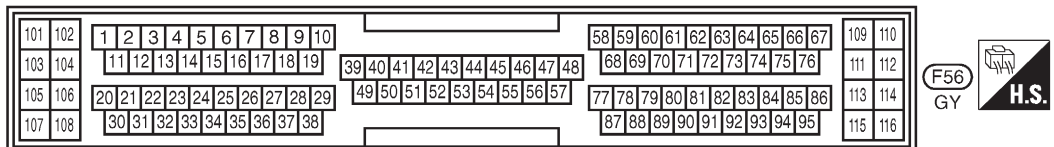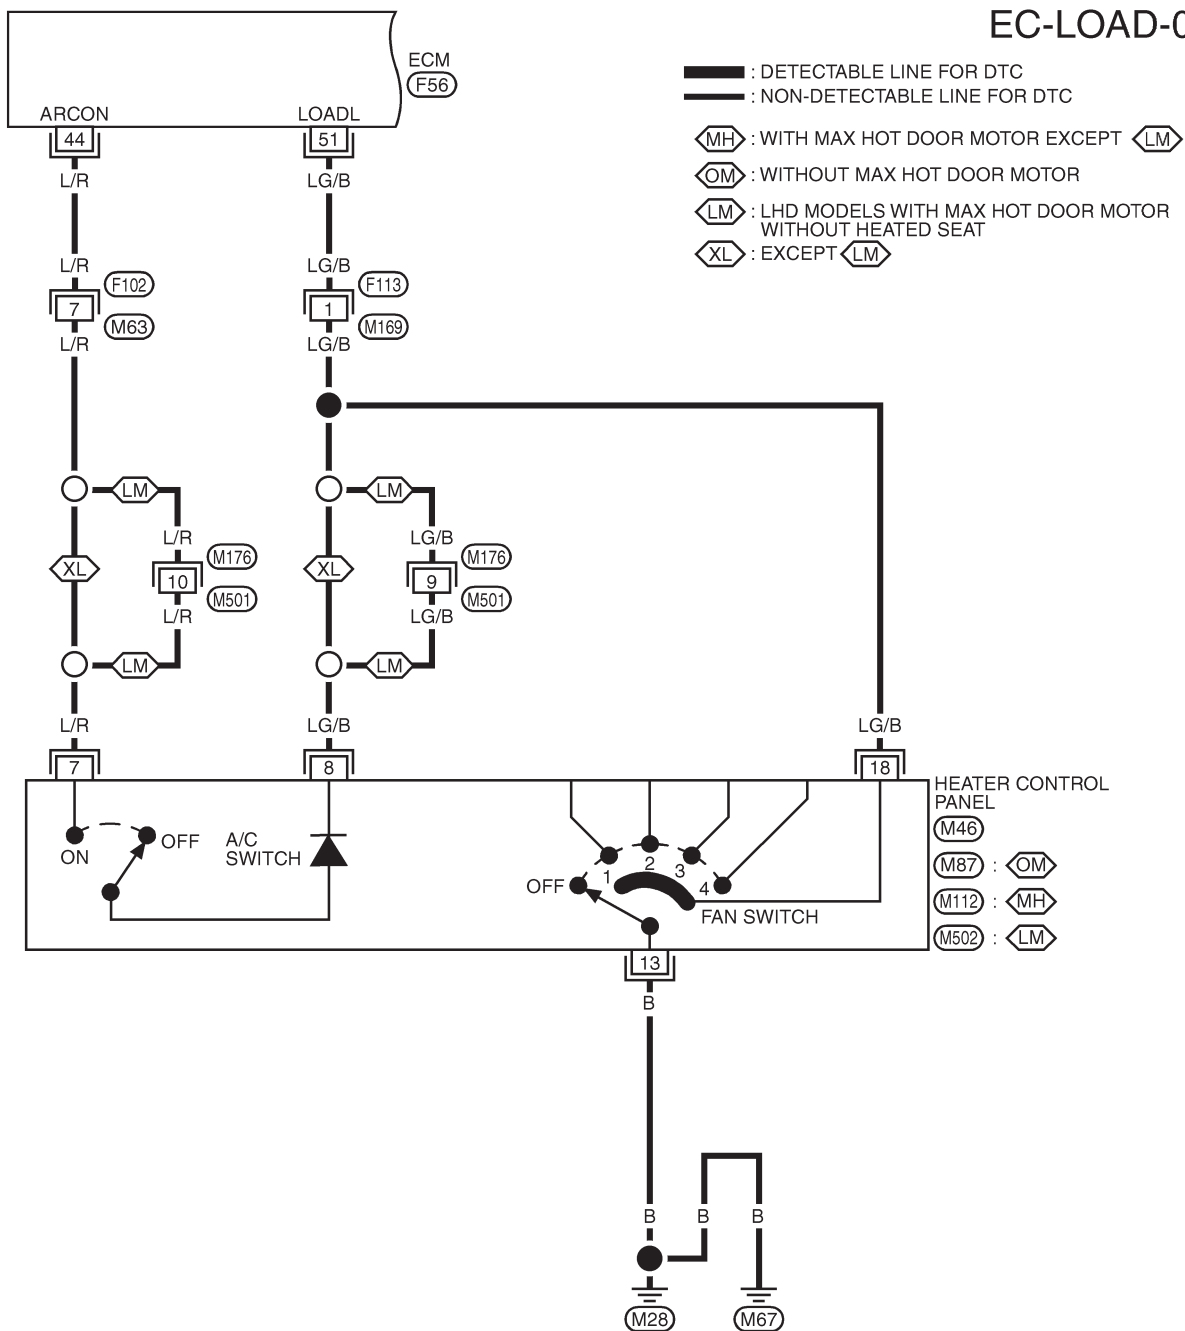




YEC004A

ELECTRICAL LOAD SIGNAL

QG

Wiring Diagram (Cont'd)

EC-LOAD-02

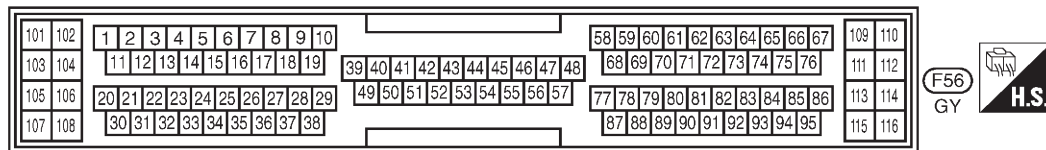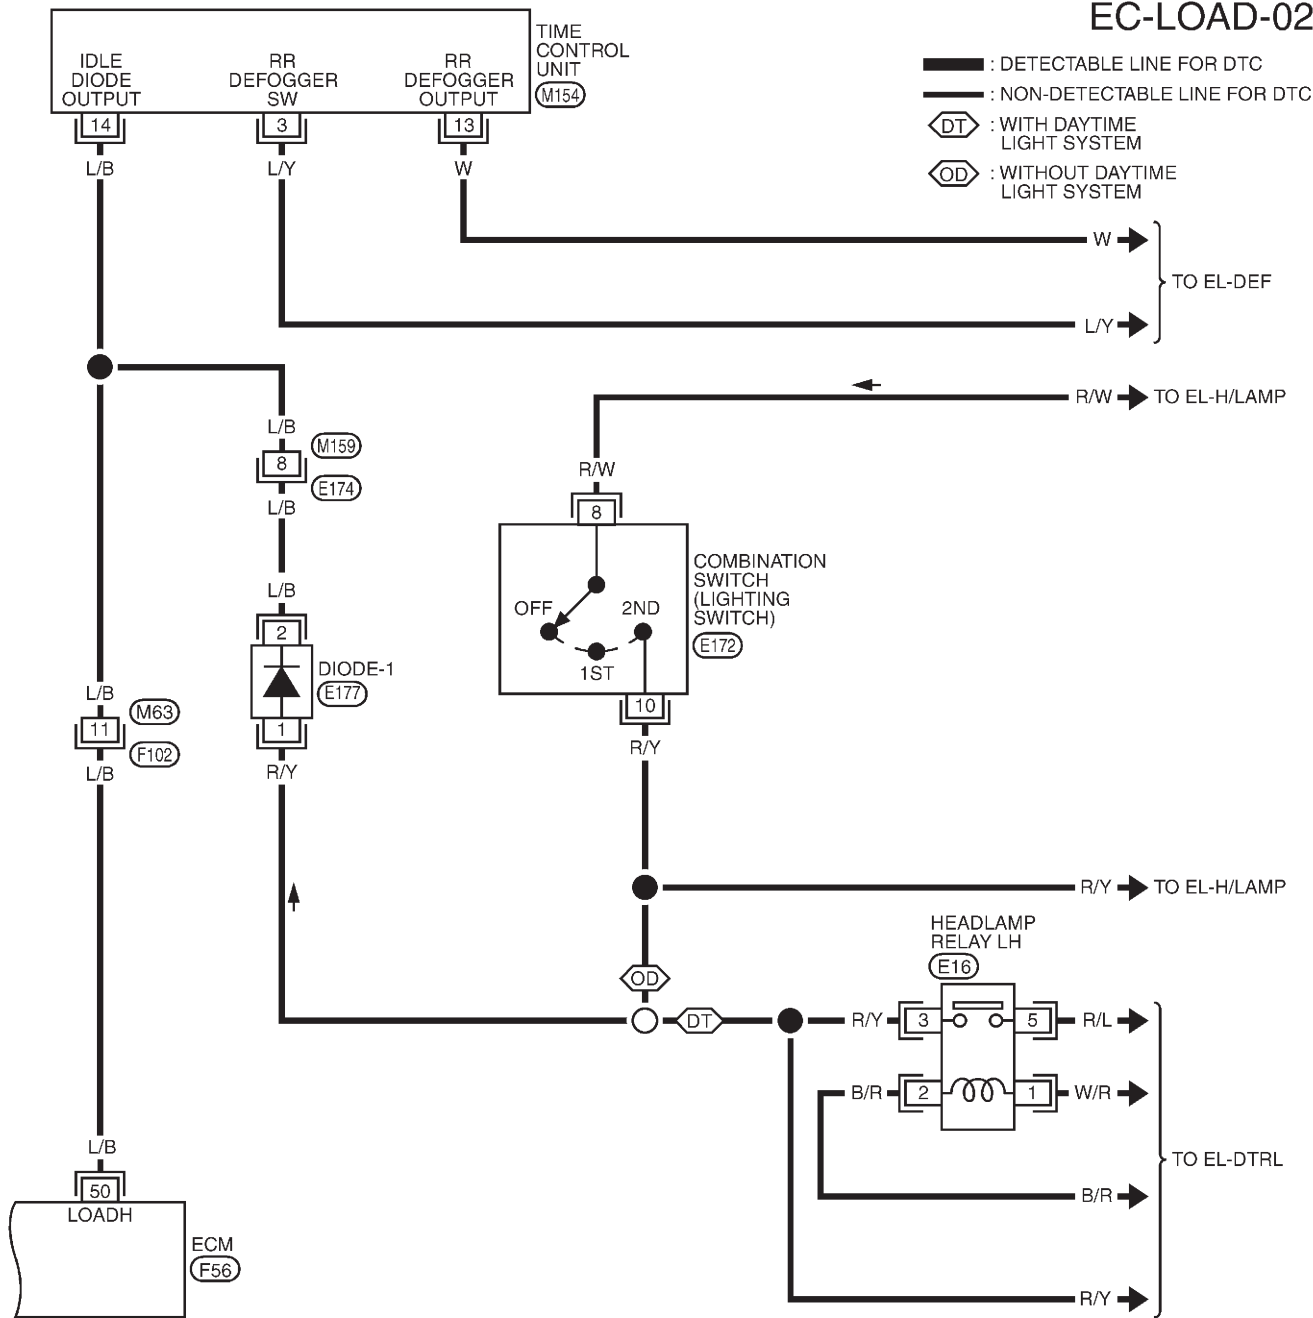

YEC005A

Diagnostic Procedure — Load Signal —

NJEC0584

1	INSPECTION START	
Do you have CONSULT-II?		
Yes or No		
Yes	▶	GO TO 2.
No	▶	GO TO 4.

2	CHECK LOAD SIGNAL CIRCUIT OVERALL FUNCTION-I							
<p>With CONSULT-II</p> <p>1. Turn ignition switch "ON".</p> <p>2. Check "LOAD SIGNAL" in "DATA MONITOR" mode with CONSULT-II under the following conditions.</p>								
<table border="1" style="margin: auto;"> <thead> <tr> <th colspan="2">DATA MONITOR</th> </tr> <tr> <th>MONITOR</th> <th>NO DTC</th> </tr> </thead> <tbody> <tr> <td>LOAD SIGNAL</td> <td>ON</td> </tr> </tbody> </table>			DATA MONITOR		MONITOR	NO DTC	LOAD SIGNAL	ON
DATA MONITOR								
MONITOR	NO DTC							
LOAD SIGNAL	ON							
<table border="1" style="margin: auto;"> <tbody> <tr> <td>Rear window defogger switch "ON"</td> <td style="text-align: center;">ON</td> </tr> <tr> <td>Rear window defogger switch "OFF"</td> <td style="text-align: center;">OFF</td> </tr> </tbody> </table>			Rear window defogger switch "ON"	ON	Rear window defogger switch "OFF"	OFF		
Rear window defogger switch "ON"	ON							
Rear window defogger switch "OFF"	OFF							
SEF954X								
OK or NG								
OK	▶	GO TO 3.						
NG	▶	GO TO 6.						

3	CHECK LOAD SIGNAL CIRCUIT OVERALL FUNCTION-II							
<p>With CONSULT-II</p> <p>1. Turn ignition switch "ON".</p> <p>2. Check "LOAD SIGNAL" in "DATA MONITOR" mode with CONSULT-II under the following conditions.</p>								
<table border="1" style="margin: auto;"> <thead> <tr> <th colspan="2">DATA MONITOR</th> </tr> <tr> <th>MONITOR</th> <th>NO DTC</th> </tr> </thead> <tbody> <tr> <td>LOAD SIGNAL</td> <td>ON</td> </tr> </tbody> </table>			DATA MONITOR		MONITOR	NO DTC	LOAD SIGNAL	ON
DATA MONITOR								
MONITOR	NO DTC							
LOAD SIGNAL	ON							
<table border="1" style="margin: auto;"> <tbody> <tr> <td>Lighting switch "ON" at 2nd position</td> <td style="text-align: center;">ON</td> </tr> <tr> <td>Lighting switch "OFF"</td> <td style="text-align: center;">OFF</td> </tr> </tbody> </table>			Lighting switch "ON" at 2nd position	ON	Lighting switch "OFF"	OFF		
Lighting switch "ON" at 2nd position	ON							
Lighting switch "OFF"	OFF							
SEF955X								
OK or NG								
OK	▶	INSPECTION END						
NG	▶	GO TO 9.						

ELECTRICAL LOAD SIGNAL

QG

Diagnostic Procedure — Load Signal — (Cont'd)

4	CHECK LOAD SIGNAL CIRCUIT OVERALL FUNCTION-I							
<p> Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch "ON". 2. Check voltage between ECM terminal 50 and ground under the following conditions. 								
		<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 60%;">Condition</th> <th style="width: 40%;">Voltage</th> </tr> </thead> <tbody> <tr> <td>Rear window defogger switch "ON"</td> <td>BATTERY VOLTAGE</td> </tr> <tr> <td>Rear window defogger switch "OFF"</td> <td>0V</td> </tr> </tbody> </table>	Condition	Voltage	Rear window defogger switch "ON"	BATTERY VOLTAGE	Rear window defogger switch "OFF"	0V
Condition	Voltage							
Rear window defogger switch "ON"	BATTERY VOLTAGE							
Rear window defogger switch "OFF"	0V							
SEF956X								
OK or NG								
OK	▶	GO TO 5.						
NG	▶	GO TO 6.						

5	CHECK LOAD SIGNAL CIRCUIT OVERALL FUNCTION-II							
<p> Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch "ON". 2. Check voltage between ECM terminal 50 and ground under the following conditions. 								
		<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 60%;">Condition</th> <th style="width: 40%;">Voltage</th> </tr> </thead> <tbody> <tr> <td>Lighting switch "ON" at 2nd position</td> <td>BATTERY VOLTAGE</td> </tr> <tr> <td>Lighting switch "OFF"</td> <td>0V</td> </tr> </tbody> </table>	Condition	Voltage	Lighting switch "ON" at 2nd position	BATTERY VOLTAGE	Lighting switch "OFF"	0V
Condition	Voltage							
Lighting switch "ON" at 2nd position	BATTERY VOLTAGE							
Lighting switch "OFF"	0V							
SEF957X								
OK or NG								
OK	▶	INSPECTION END						
NG	▶	GO TO 10.						

6	CHECK REAR WINDOW DEFOGGER FUNCTION	
<ol style="list-style-type: none"> 1. Start engine. 2. Turn "ON" the rear window defogger switch. 3. Check the rear windshield. Is the rear windshield heated up? 		
Yes or No		
Yes	▶	GO TO 7.
No	▶	Refer to EL-138, "Rear Window Defogger".

ELECTRICAL LOAD SIGNAL

QG*Diagnostic Procedure — Load Signal — (Cont'd)*

7 CHECK REAR WINDOW DEFOGGER INPUT SIGNAL CIRCUIT	
1. Disconnect ECM harness connector. 2. Disconnect time control unit harness connector. 3. Check harness continuity between ECM terminal 50 and time control unit harness connector terminal 14. Refer to wiring diagram. 4. Also check harness for short to ground and short to power.	
OK or NG	
OK	▶ Refer to EL-229, "TIME CONTROL UNIT".
NG	▶ GO TO 8.

8 DETECT MALFUNCTIONING PART	
Check the following. <ul style="list-style-type: none">● Harness connectors M63, F102● Harness open and short between ECM and time control unit connectors	
	▶ Repair open circuit or short to ground or short to power in harness or connectors.

9 CHECK HEADLAMP FUNCTION	
1. Start engine. 2. Turn the lighting switch "ON". 3. Check that headlamps are illuminated. Do the headlamps illuminate in both "High" and "Low" positions?	
Yes or No	
Yes	▶ GO TO 11.
No	▶ Refer to EL-40, "HEADLAMP SYSTEM".

10 CHECK HEADLAMP FUNCTION	
1. Start engine. 2. Turn the lighting switch "ON". 3. Check that headlamps are illuminated.	
OK or NG	
OK	▶ GO TO 11.
NG	▶ Refer to EL-40, "HEADLAMP SYSTEM".


11	CHECK HEADLAMP INPUT SIGNAL CIRCUIT	
<p>Without Daytime Light system</p> <ol style="list-style-type: none"> Stop engine. Disconnect ECM harness connector. Disconnect lighting switch connector. Check harness continuity between ECM terminal 50 and lighting switch connector terminal 10 under the following conditions. 		
<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>CONDITION 1</p> </div> <div style="text-align: center;"> <p>CONDITION 2</p> </div> </div>		
SEF161Z		
<ol style="list-style-type: none"> Also check harness for short to ground and short to power. 		
<p>With Daytime Light system</p> <ol style="list-style-type: none"> Stop engine. Disconnect ECM harness connector. Disconnect headlamp relay LH connector. Check harness continuity between ECM terminal 50 and headlamp relay LH connector terminal 3 under the following conditions. 		
<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>CONDITION 1</p> </div> <div style="text-align: center;"> <p>CONDITION 2</p> </div> </div>		
SEF445Z		
<ol style="list-style-type: none"> Also check harness for short to ground and short to power. 		
OK or NG		
OK	▶	GO TO 13.
NG	▶	GO TO 12.

12	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M63, F102 ● Harness connectors M159, F174 ● Diode E177 ● Harness for open and short between ECM and lighting switch connector 		
▶		Repair open circuit or short to ground or short to power in harness or connectors.

13	CHECK INTERMITTENT INCIDENT	
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-144.		
▶		INSPECTION END

Diagnostic Procedure — Heater Control Panel (Fan Switch) —

NJEC0585

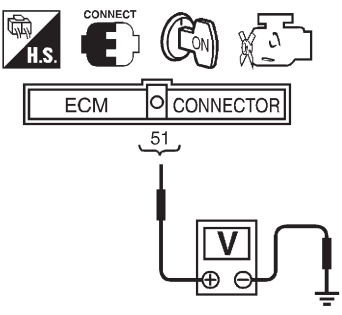1	CHECK CIRCUIT OVERALL FUNCTION							
<p>1. Start engine. 2. Heater fan motor switch "ON". 3. Check voltage between ECM terminal 51 and ground under the following conditions.</p>								
								
<table border="1" style="margin: auto;"> <thead> <tr> <th style="width: 60%;">Condition</th> <th style="width: 40%;">Voltage</th> </tr> </thead> <tbody> <tr> <td>Heater fan motor switch "ON"</td> <td style="text-align: center;">0V</td> </tr> <tr> <td>Heater fan motor switch "OFF"</td> <td style="text-align: center;">Approximatly 5V</td> </tr> </tbody> </table>			Condition	Voltage	Heater fan motor switch "ON"	0V	Heater fan motor switch "OFF"	Approximatly 5V
Condition	Voltage							
Heater fan motor switch "ON"	0V							
Heater fan motor switch "OFF"	Approximatly 5V							
SEF620Y								
OK or NG								
OK	▶	INSPECTION END						
NG	▶	GO TO 2.						





2	CHECK INPUT SIGNAL CIRCUIT	
<p>1. Stop engine. 2. Disconnect ECM harness connector. 3. Disconnect heater control panel fan switch harness connector. 4. Check harness continuity between ECM terminal 51 and heater fan switch harness connector terminal 18. Refer to wiring diagram. Continuity should exist. 5. Also check harness for short to ground and short to power.</p>		
OK or NG		
OK	▶	Refer to HA-54, "BLOWER MOTOR".
NG	▶	GO TO 3.

3	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M169, F113 ● Harness for open and short between ECM and heater fan motor switch 		
▶ Repair open circuit or short to ground or short to power in harness or connectors.		


Wiring Diagram

NJEC0466

EC-MIL/DL-01

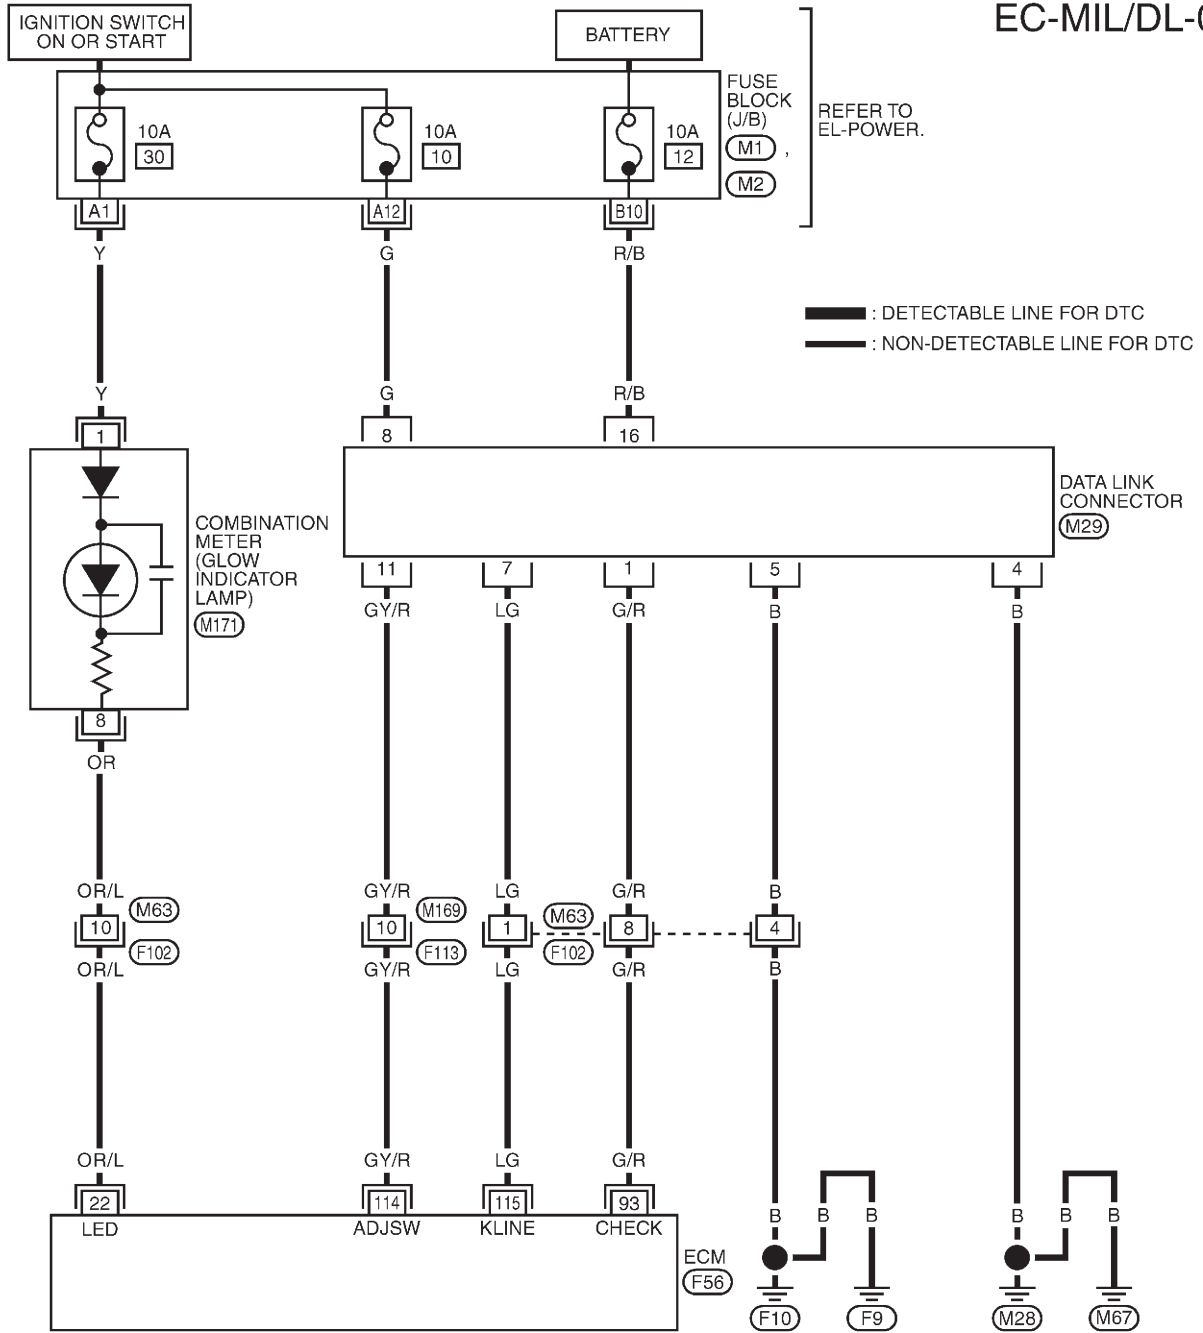

REFER TO THE FOLLOWING.
 (M1), (M2) - FUSE BLOCK-
 JUNCTION BOX (J/B)

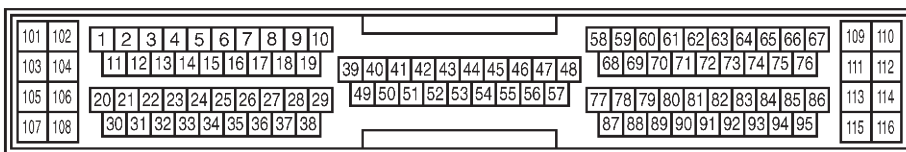

YEC006A

Fuel Pressure Regulator

NJEC0467

Fuel pressure at idling kPa (bar, kg/cm ² , psi)	Vacuum hose is connected	Approximately 235 (2.35, 2.4, 34)
	Vacuum hose is disconnected	Approximately 294 (2.94, 3.0, 43)

Idle Speed and Ignition Timing

NJEC0468

Target idle speed* rpm	M/T: 700±50 A/T: 800±50
Air conditioner: ON rpm	825 or more
Ignition timing	M/T: 8±5° BTDC A/T: 10±5° BTDC
Throttle position sensor idle position V	0.15 - 0.85

*: Under the following conditions:

- Air conditioner switch: OFF
- Electrical load: OFF (Lights, heater fan & rear window defogger)
- Steering wheel: Kept in straight-ahead position

Mass Air Flow Sensor

NJEC0470

Supply voltage (Heater) V	Battery voltage (11 - 14)
Supply voltage (Sensor) V	Approximately 5
Output voltage V	1.0 - 1.7*
Mass air flow (Using CONSULT-II or GST) g-m/sec	1.0 - 4.0 at idle* 5.0 - 10.0 at 2,500 rpm*

*: Engine is warmed up to normal operating temperature and idling under no-load.

Intake Air Temperature Sensor

NJEC0480

Temperature °C (°F)	Resistance kΩ
20 (68)	2.1 - 2.9
80 (176)	0.27 - 0.38

Engine Coolant Temperature Sensor

NJEC0471

Temperature °C (°F)	Resistance kΩ
20 (68)	2.1 - 2.9
50 (122)	0.68 - 1.00
90 (194)	0.236 - 0.260

Throttle Position Sensor

NJEC0477

Throttle valve conditions	Voltage (V)
Completely closed	0.15 - 0.85
Completely open	3.5 - 4.7

Heated Oxygen Sensor 1 Heater (Front)

NJEC0478

Resistance [at 25°C (77°F)] Ω	2.3 - 4.3
-------------------------------	-----------

Heated Oxygen Sensor 2 Heater (Rear)

NJEC0483

Resistance [at 25°C (77°F)] Ω	2.3 - 4.3
-------------------------------	-----------

SERVICE DATA AND SPECIFICATIONS (SDS)

QG*EGR Volume Control Valve (Where Fitted)*

EGR Volume Control Valve (Where Fitted)

NJEC0560

Terminal No.	Resistance Ω [at 20°C (68°F)]
1 - 2	20 - 24
2 - 3	
4 - 5	
5 - 6	

EGR Temperature Sensor (Where Fitted)

NJEC0472

EGR temperature °C (°F)	Voltage V	Resistance M Ω
0 (32)	4.56	0.62 - 1.05
50 (122)	2.25	0.065 - 0.094
100 (212)	0.59	0.011 - 0.015

EVAP Canister Purge Volume Control Valve

NJEC0481

Resistance [at 20°C (68°F)] Ω	31 - 35
--------------------------------------	---------

IACV-AAC Valve

NJEC0474

Terminal No.	Resistance Ω [at 20°C (68°F)]
1 - 2	20 - 24
2 - 3	
4 - 5	
5 - 6	

Injector

NJEC0475

Resistance [at 25°C (77°F)] Ω	13.5 - 17.5
--------------------------------------	-------------

Ignition Coil with Power Transistor

NJEC0561

Terminal No. (Polarity)	Resistance Ω [at 25°C (77°F)]
3 (+) - 2 (-)	Except 0 or ∞
1 (+) - 3 (-)	Except 0
1 (+) - 2 (-)	

Condenser

NJEC0587

Resistance [at 25°C (77°F)] M Ω	Above 1
--	---------

Fuel Pump

NJEC0473

Resistance [at 25°C (77°F)] Ω	0.2 - 5.0
--------------------------------------	-----------

Crankshaft Position Sensor (POS)

Refer to "Component Inspection", EC-277.

NJEC0558

Camshaft Position Sensor (PHASE)

Refer to "Component Inspection", EC-284.

NJEC0559

TROUBLE DIAGNOSIS — INDEX

YD

Alphabetical & P No. Index for DTC

Alphabetical & P No. Index for DTC

NJEC0600

ALPHABETICAL INDEX FOR DTC

NJEC0600S01

X: Applicable —: Not applicable

Items (CONSULT-II screen terms)	DTC		MI illumination	Reference page
	CONSULT-II	ECM		
ACCEL POS SENSOR	P0120	0403	X	EC-577
BATTERY VOLTAGE	P1660	0502	—	EC-672
BRAKE SW	P0571	0807	X	EC-597
COOLANT TEMP SEN	P0115	0103	X	EC-572
CRANK POS SEN (TDC)	P0335	0407	X	EC-587
ECM RLY	P1620	0902	X	EC-666
ECM 2	P1607	0301	X	EC-664
ECM 10	P1107	0802	X	EC-604
ECM 12	P1603	0901	X	EC-664
ECM 15	P1621	0903	—	EC-670
FUEL CUT SYSTEM2	P1202	1002	X	EC-612
MASS AIR FLOW SEN	P0100	0102	X	EC-566
NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.	P0000	0505	—	—
OVER HEAT	P1217	0208	X	EC-618
P1-CAM POS SEN	P1341	0701	X	EC-652
P2-TDC PULSE SIG	P1337	0702	X	EC-646
P3-PUMP COMM LINE	P1600	0703	X	EC-658
P4-SPILL/V CIRC	P1251	0704	X	EC-640
P5-PUMP C/MODULE	P1690	0705	X	EC-674
P7-F/INJ TIMG FB	P1241	0707	X	EC-634
P9-FUEL TEMP SEN	P1180	0402	X	EC-606
VEHICLE SPEED SEN	P0500	0104	X	EC-593

TROUBLE DIAGNOSIS — INDEX

YD

Alphabetical & P No. Index for DTC (Cont'd)

P NO. INDEX FOR DTC

=NJE0600S02

X: Applicable —: Not applicable

DTC		MI illumination	Items (CONSULT-II screen terms)	Reference page
CONSULT-II	ECM			
P0000	0505	—	NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.	—
P0100	0102	X	MASS AIR FLOW SEN	EC-566
P0115	0103	X	COOLANT TEMP SEN	EC-572
P0120	0403	X	ACCEL POS SENSOR	EC-577
P0335	0407	X	CRANK POS SEN (TDC)	EC-587
P0500	0104	X	VEHICLE SPEED SEN	EC-593
P0571	0807	X	BRAKE SW	EC-597
P1107	0802	X	ECM 10	EC-604
P1180	0402	X	P9-FUEL TEMP SEN	EC-606
P1202	1002	X	FUEL CUT SYSTEM2	EC-612
P1217	0208	X	OVER HEAT	EC-618
P1241	0707	X	P7-F/INJ TIMG FB	EC-634
P1251	0704	X	P4-SPILL/V CIRC	EC-640
P1337	0702	X	P2-TDC PULSE SIG	EC-646
P1341	0701	X	P1-CAM POS SEN	EC-652
P1600	0703	X	P3-PUMP COMM LINE	EC-658
P1603	0901	X	ECM 12	EC-664
P1607	0301	X	ECM 2	EC-664
P1620	0902	X	ECM RLY	EC-666
P1621	0903	—	ECM 15	EC-670
P1660	0502	—	BATTERY VOLTAGE	EC-672
P1690	0705	X	P5-PUMP C/MODULE	EC-674

Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

NJEC0601

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER" used along with a seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. The SRS system composition which is available to NISSAN MODEL N16 is as follows (The composition varies according to the destination and optional equipment.):

- For a frontal collision
The Supplemental Restraint System consists of driver air bag module (located in the center of the steering wheel), front passenger air bag module (located on the instrument panel on passenger side), front seat belt pre-tensioners, a diagnosis sensor unit, warning lamp, wiring harness and spiral cable.
- For a side collision
The Supplemental Restraint System consists of front side air bag module (located in the outer side of front seat), side air bag (satellite) sensor, diagnosis sensor unit (one of components of air bags for a frontal collision), wiring harness, warning lamp (one of components of air bags for a frontal collision).

Information necessary to service the system safely is included in the **RS section** of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance should be performed by an authorized NISSAN dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the RS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harness can be identified by yellow harness connector.

Engine Fuel & Emission Control System


NJEC0602

BATTERY

- Always use a 12 volt battery as power source.
- Do not attempt to disconnect battery cable while engine is running.


ECM

- Do not disassemble ECM.
- If a battery terminal is disconnected, the memory will return to the ECM value. The ECM will now start to self-control at its initial value. Engine operation can vary slightly when the terminal is disconnected. However, this is not an indication of a problem. Do not replace parts because of a slight variation.
- When ECM is removed for inspection, make sure to ground the ECM mainframe.

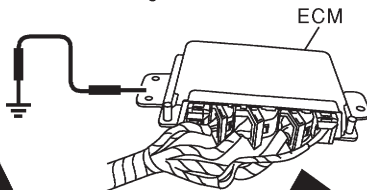



WIRELESS EQUIPMENT

- When installing C.B. ham radio or a mobile phone, be sure to observe the following as it may adversely affect electronic control systems depending on its installation location.
 - 1) Keep the antenna as far as possible away from the ECM.
 - 2) Keep the antenna feeder line more than 20 cm (7.9 in) away from the harness of electronic controls. Do not let them run parallel for a long distance.
 - 3) Adjust the antenna and feeder line so that the standing-wave ratio can be kept smaller.
 - 4) Be sure to ground the radio to vehicle body.

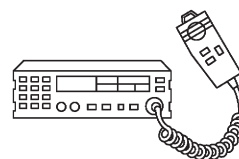

ELECTRONIC CONTROL FUEL INJECTION PUMP

- Do not disconnect pump harness connector with engine running.
- Do not disassemble electronic fuel injection pump. If NG, take proper action.

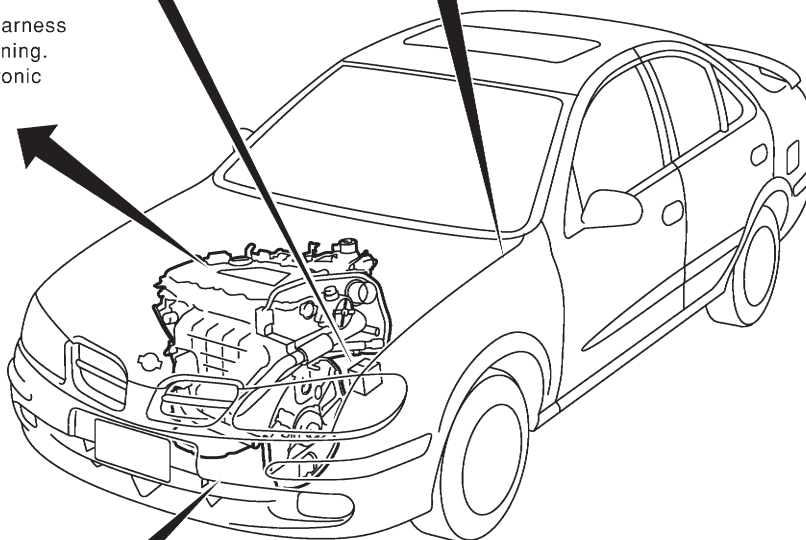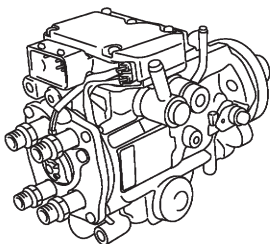

ENGINE CONTROL PARTS HANDLING

- Do not disassemble injection nozzle. If NG, replace injection nozzle.
- Even a slight leak in the air intake system can cause serious problems.
- Do not shock or jar the crankshaft position sensor (TDC).

WHEN STARTING






- Do not depress accelerator pedal when starting.
- Immediately after starting, do not rev up engine unnecessarily.
- Do not rev up engine just prior to shutdown.



ECM HARNESS HANDLING

- Securely connect ECM harness connectors. A poor connection can cause an extremely high (surge) voltage to develop in the circuit, thus resulting in damage to ICs.
- Keep ECM harness at least 10 cm (3.9 in) away from adjacent harnesses, to prevent an ECM system malfunction due to receiving external noise, degraded operation of ICs, etc.
- Keep ECM parts and harnesses dry.
- Before removing parts, turn off ignition switch and then disconnect battery ground cable.

SEF433Z

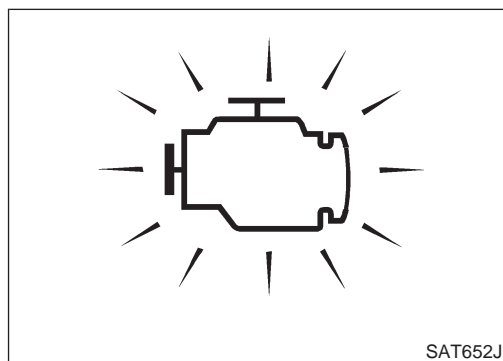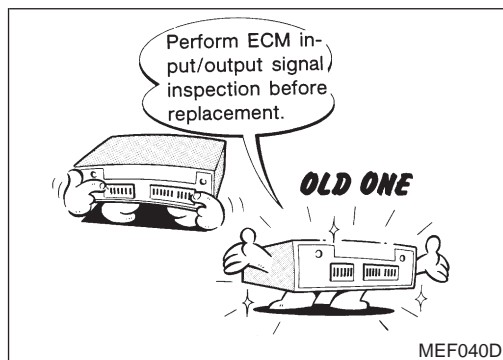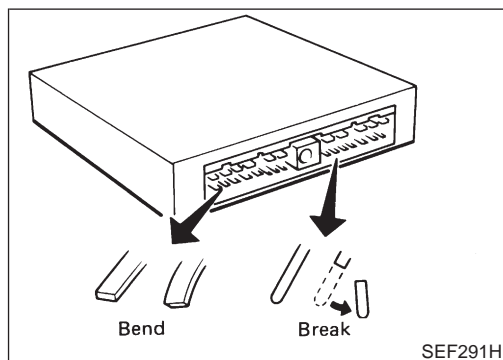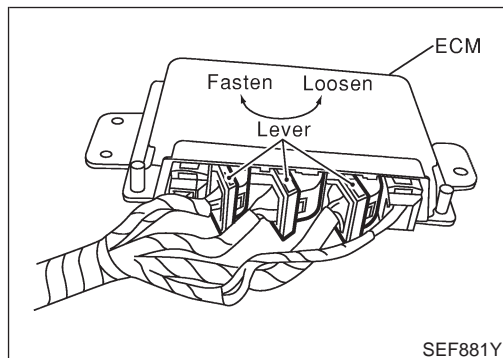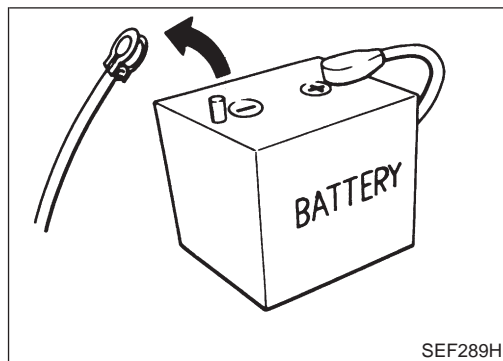

Precautions


NJEC0603

- Before connecting or disconnecting the ECM harness connector, turn ignition switch OFF and disconnect negative battery terminal. Failure to do so may damage the ECM because battery voltage is applied to ECM even if ignition switch is turned off.
- When connecting ECM harness connectors, push in both sides of the connector until you hear a click. Maneuver the lever until you hear the three connectors on the inside click. Refer to the figure at left.
- When connecting or disconnecting pin connectors into or from ECM, take care not to damage pin terminals (bend or break). Make sure that there are not any bends or breaks on ECM pin terminal, when connecting pin connectors.
- Before replacing ECM, perform Terminals and Reference Value inspection and make sure ECM functions properly. Refer to EC-554.
- If MI illuminates or blinks irregularly when engine is running, water may have accumulated in fuel filter. Drain water from fuel filter. If this does not correct the problem, perform specified trouble diagnostic procedures.
- After performing each TROUBLE DIAGNOSIS, perform "DTC Confirmation Procedure" or "Overall Function Check". The DTC should not be displayed in the "DTC Confirmation Procedure" if the repair is completed. The "Overall Function Check" should be a good result if the repair is completed.

PRECAUTIONS

YD

Precautions (Cont'd)

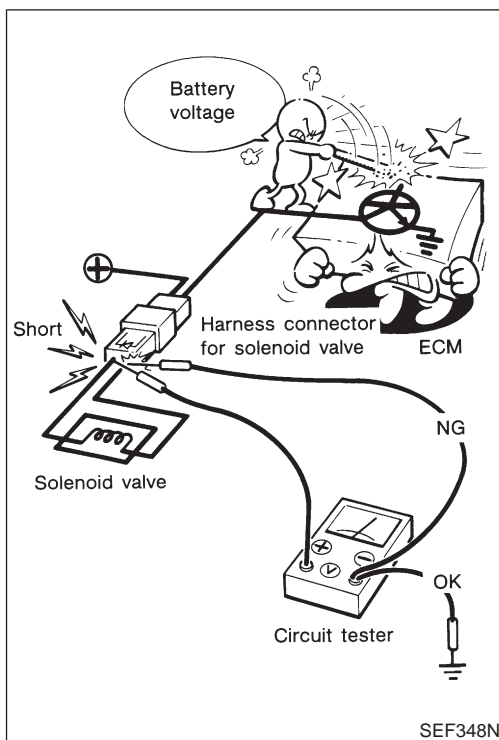

- When measuring ECM signals with a circuit tester, never allow the two tester probes to contact. Accidental contact of probes will cause a short circuit and damage the ECM power transistor.
- Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.
- Install the break-out box between ECM and ECM harness connectors when measuring ECM input/output voltage.

Wiring Diagrams and Trouble Diagnosis

NJEC0604

When you read Wiring diagrams, refer to the following:

- GI-12, "HOW TO READ WIRING DIAGRAMS"
- EL-10, "POWER SUPPLY ROUTING" for power distribution circuit

When you perform trouble diagnosis, refer to the following:

- GI-32, "HOW TO FOLLOW TEST GROUPS IN TROUBLE DIAGNOSES"
- GI-21, "HOW TO PERFORM EFFICIENT DIAGNOSIS FOR AN ELECTRICAL INCIDENT"




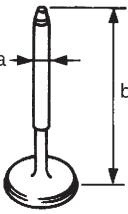
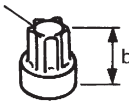
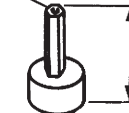
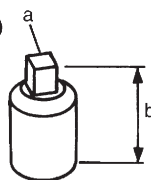
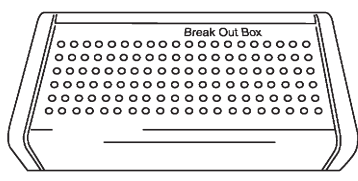
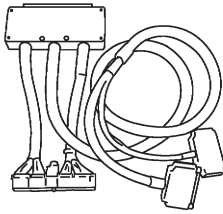
PREPARATION

YD

Special Service Tools

Special Service Tools


NJE0605

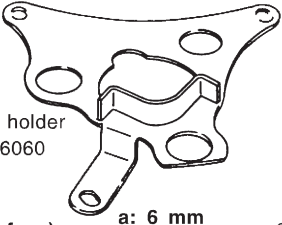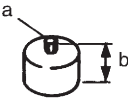Tool number Tool name	Description
KV111060S0 Removal/Installation tool kit for fuel injection pump	 <p>Sprocket holder KV11106060</p> <div style="display: flex; justify-content: space-around; align-items: flex-start;"> <div style="text-align: center;"> <p>a: 5 mm (Face to face) b: 20 mm</p>  <p>Hexagon wrench KV11106010</p> </div> <div style="text-align: center;"> <p>a: 6 mm (Face to face) b: 20 mm</p>  <p>Hexagon wrench KV11106020</p> </div> <div style="text-align: center;"> <p>a: 6 mm dia b: 80 mm</p>  <p>Positioning stopper pin KV11106030</p> </div> <div style="text-align: center;"> <p>a: T70 b: 26 mm</p>  <p>Torque wrench KV11106040</p> </div> <div style="text-align: center;"> <p>a: 6 mm (Face to face) b: 42 mm</p>  <p>Hexagon wrench KV11106050</p> </div> </div> <div style="text-align: center; margin-top: 20px;"> <p>a: 9.5 mm (Face to face) b: 29 mm</p> <p>Extension bar KV11106070</p>  </div>
	NT814
KV109E0010 Break-out box	 <p style="text-align: center; font-size: small;">Break Out Box</p>
	NT825
KV109E0050 Y-cable adapter	
	NT826






Engine Control Component Parts Location

NJEC0607

For more details of ECM location, refer to "ELECTRICAL UNIT LOCATION" in EL section (EL-319).

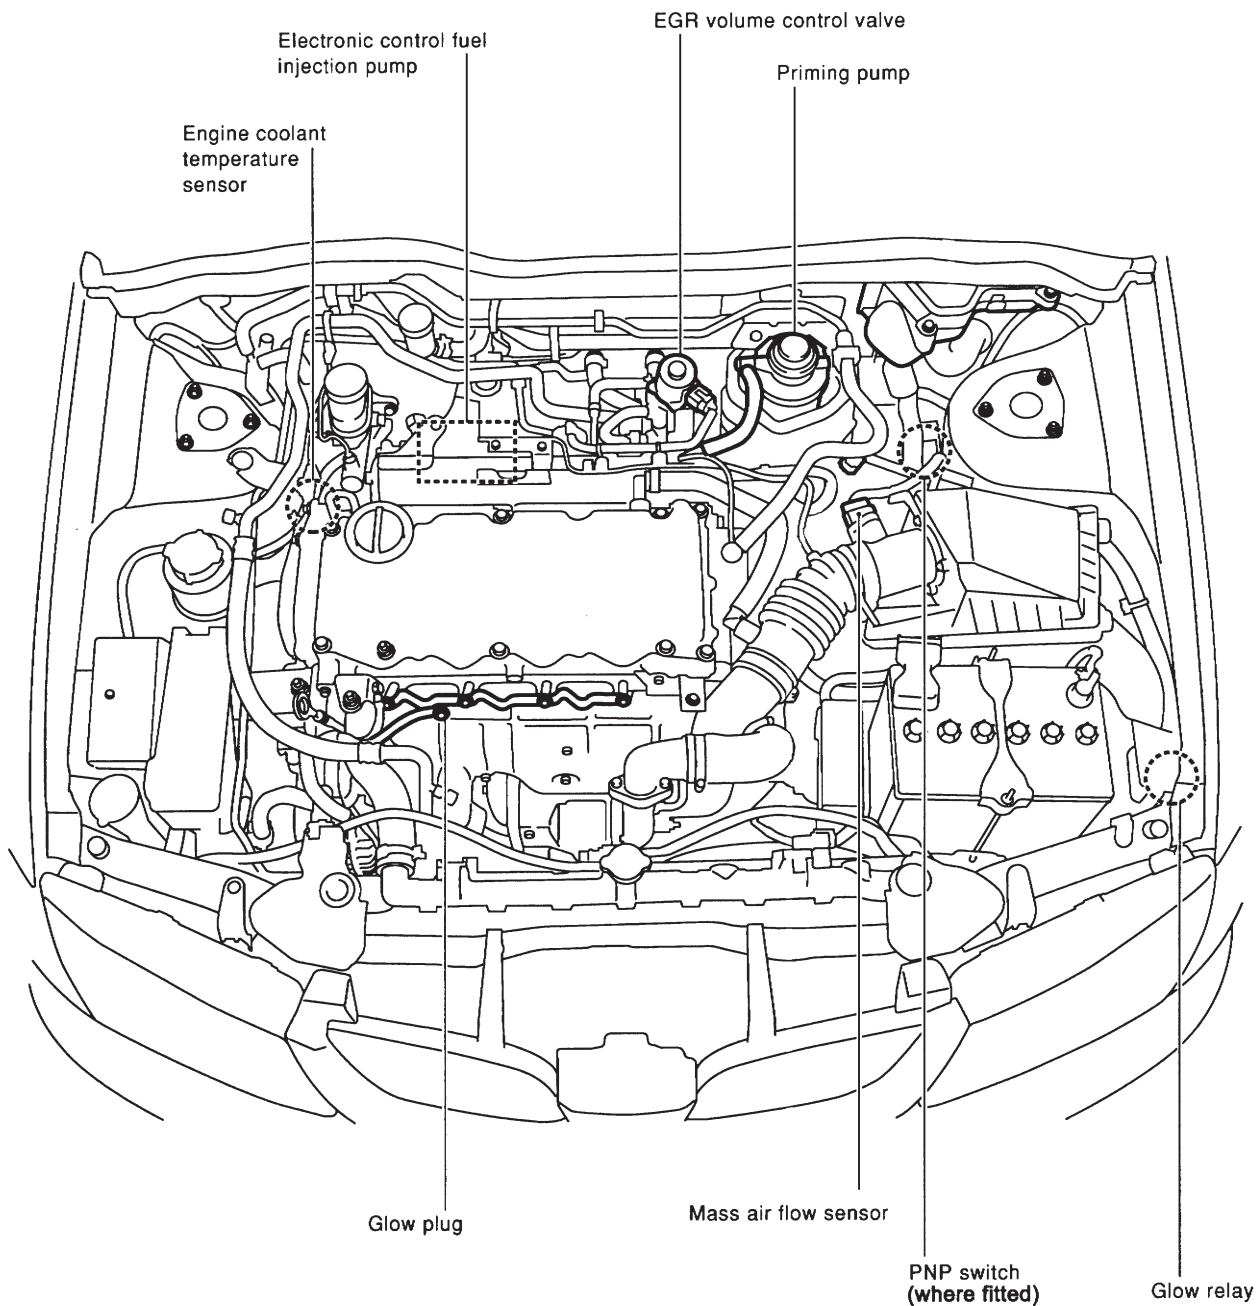




Electronic control fuel injection pump

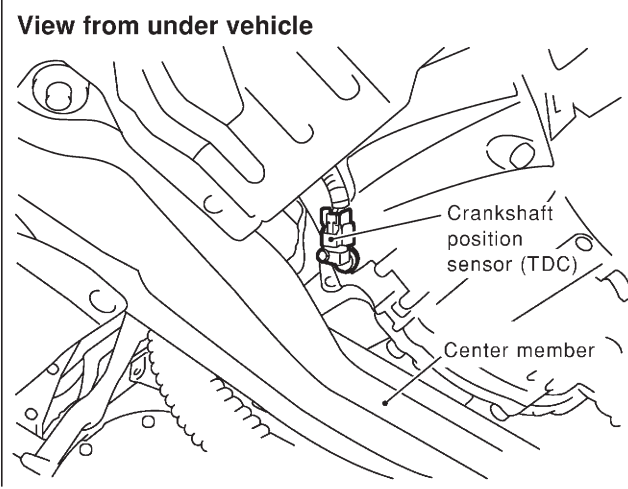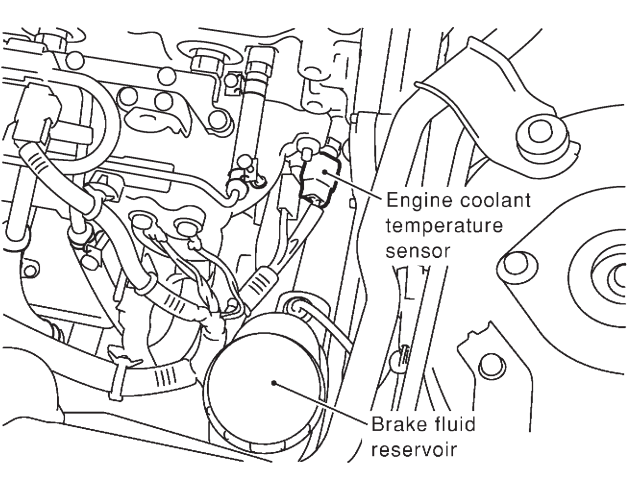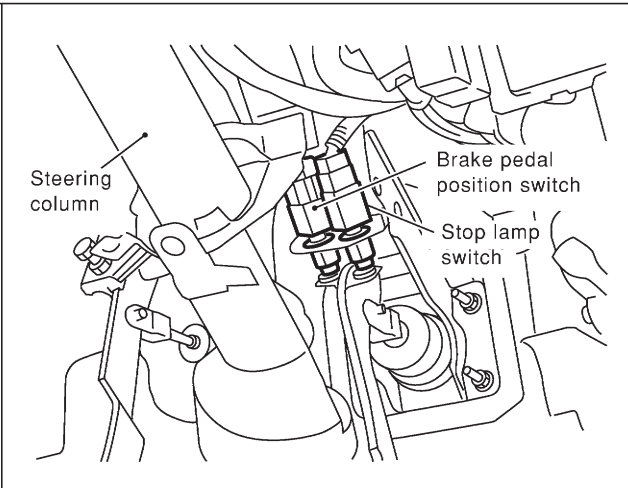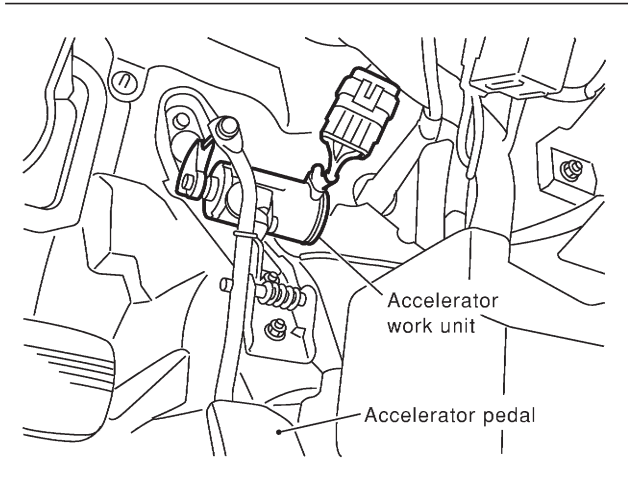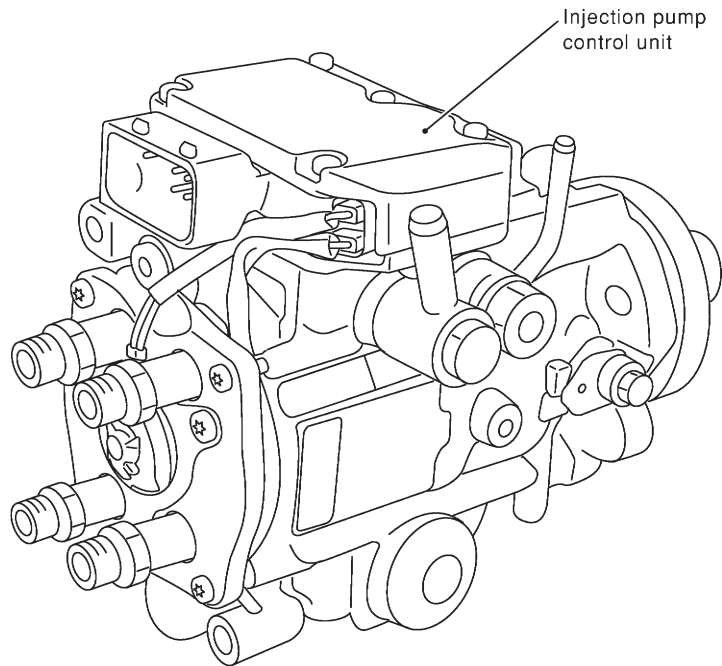

ENGINE AND EMISSION CONTROL OVERALL SYSTEM

YD

Engine Control Component Parts Location (Cont'd)

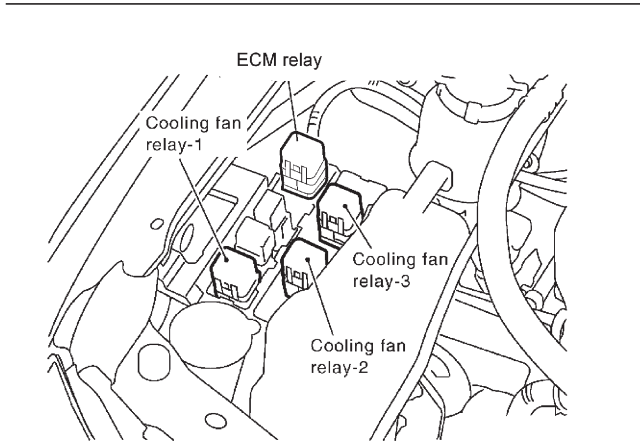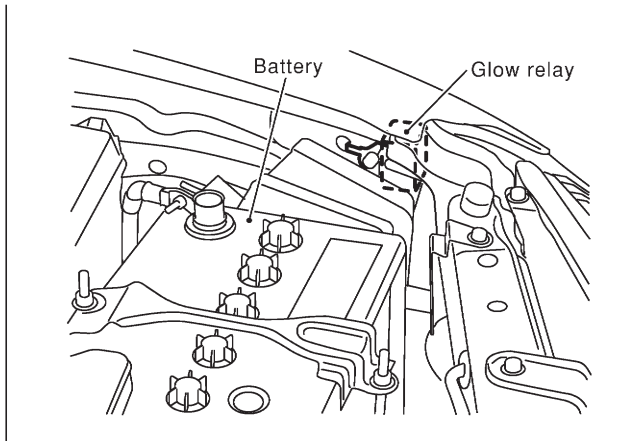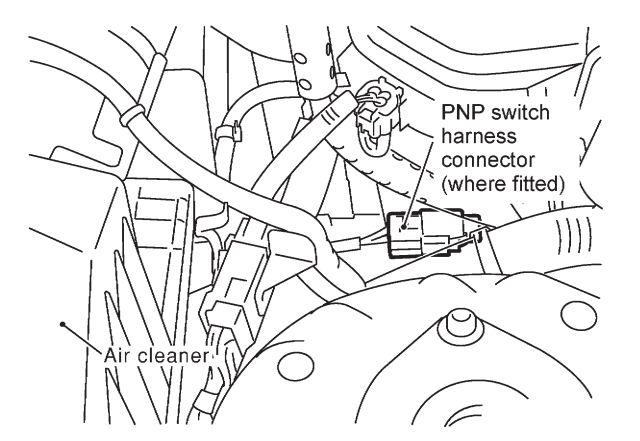


NEF376A

ENGINE AND EMISSION CONTROL OVERALL SYSTEM

Circuit Diagram

Circuit Diagram

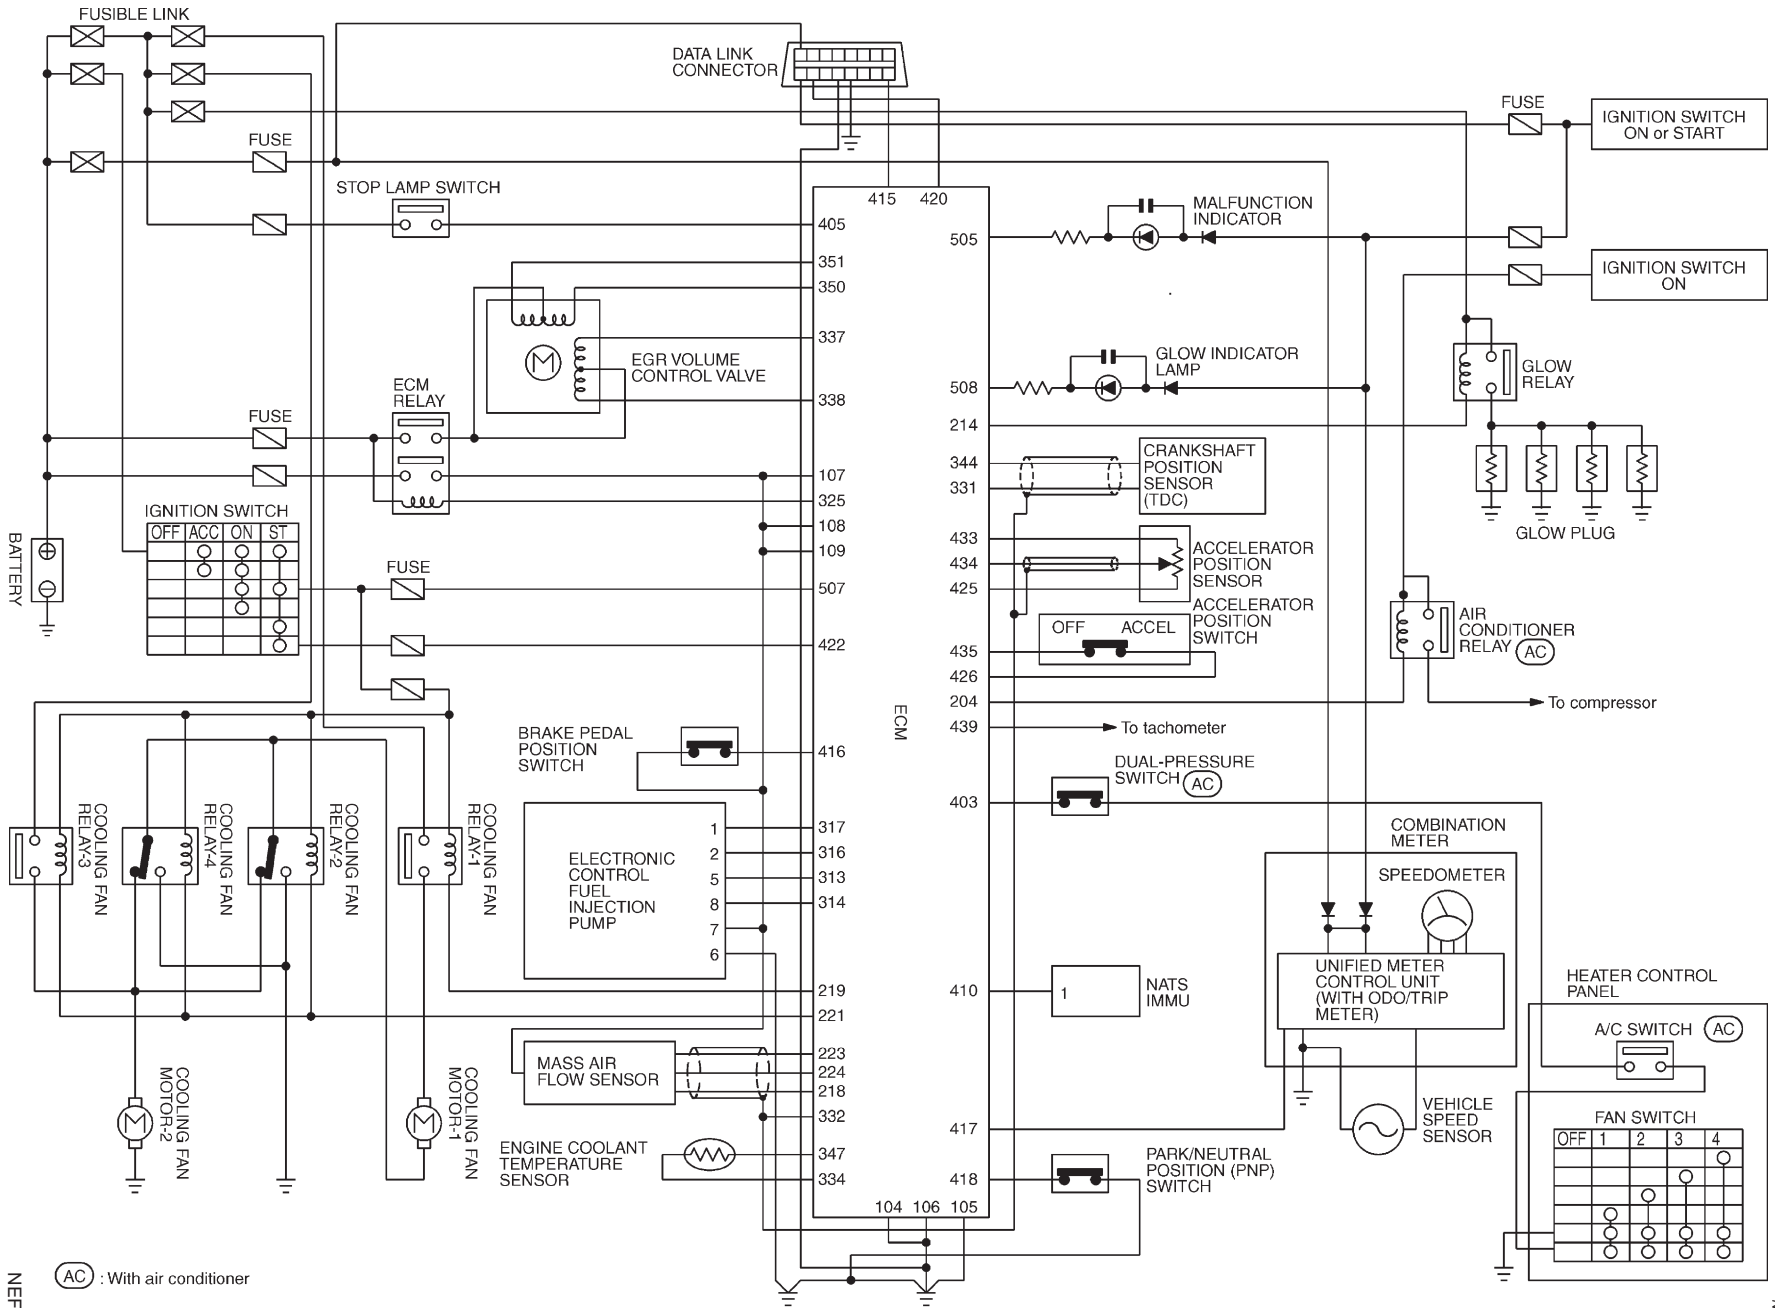

(AC) : With air conditioner

EC-502

NEF397A

NAJEC0608

YD


ENGINE AND EMISSION CONTROL OVERALL SYSTEM

System Diagram

YD

System Diagram

N/EC06/09

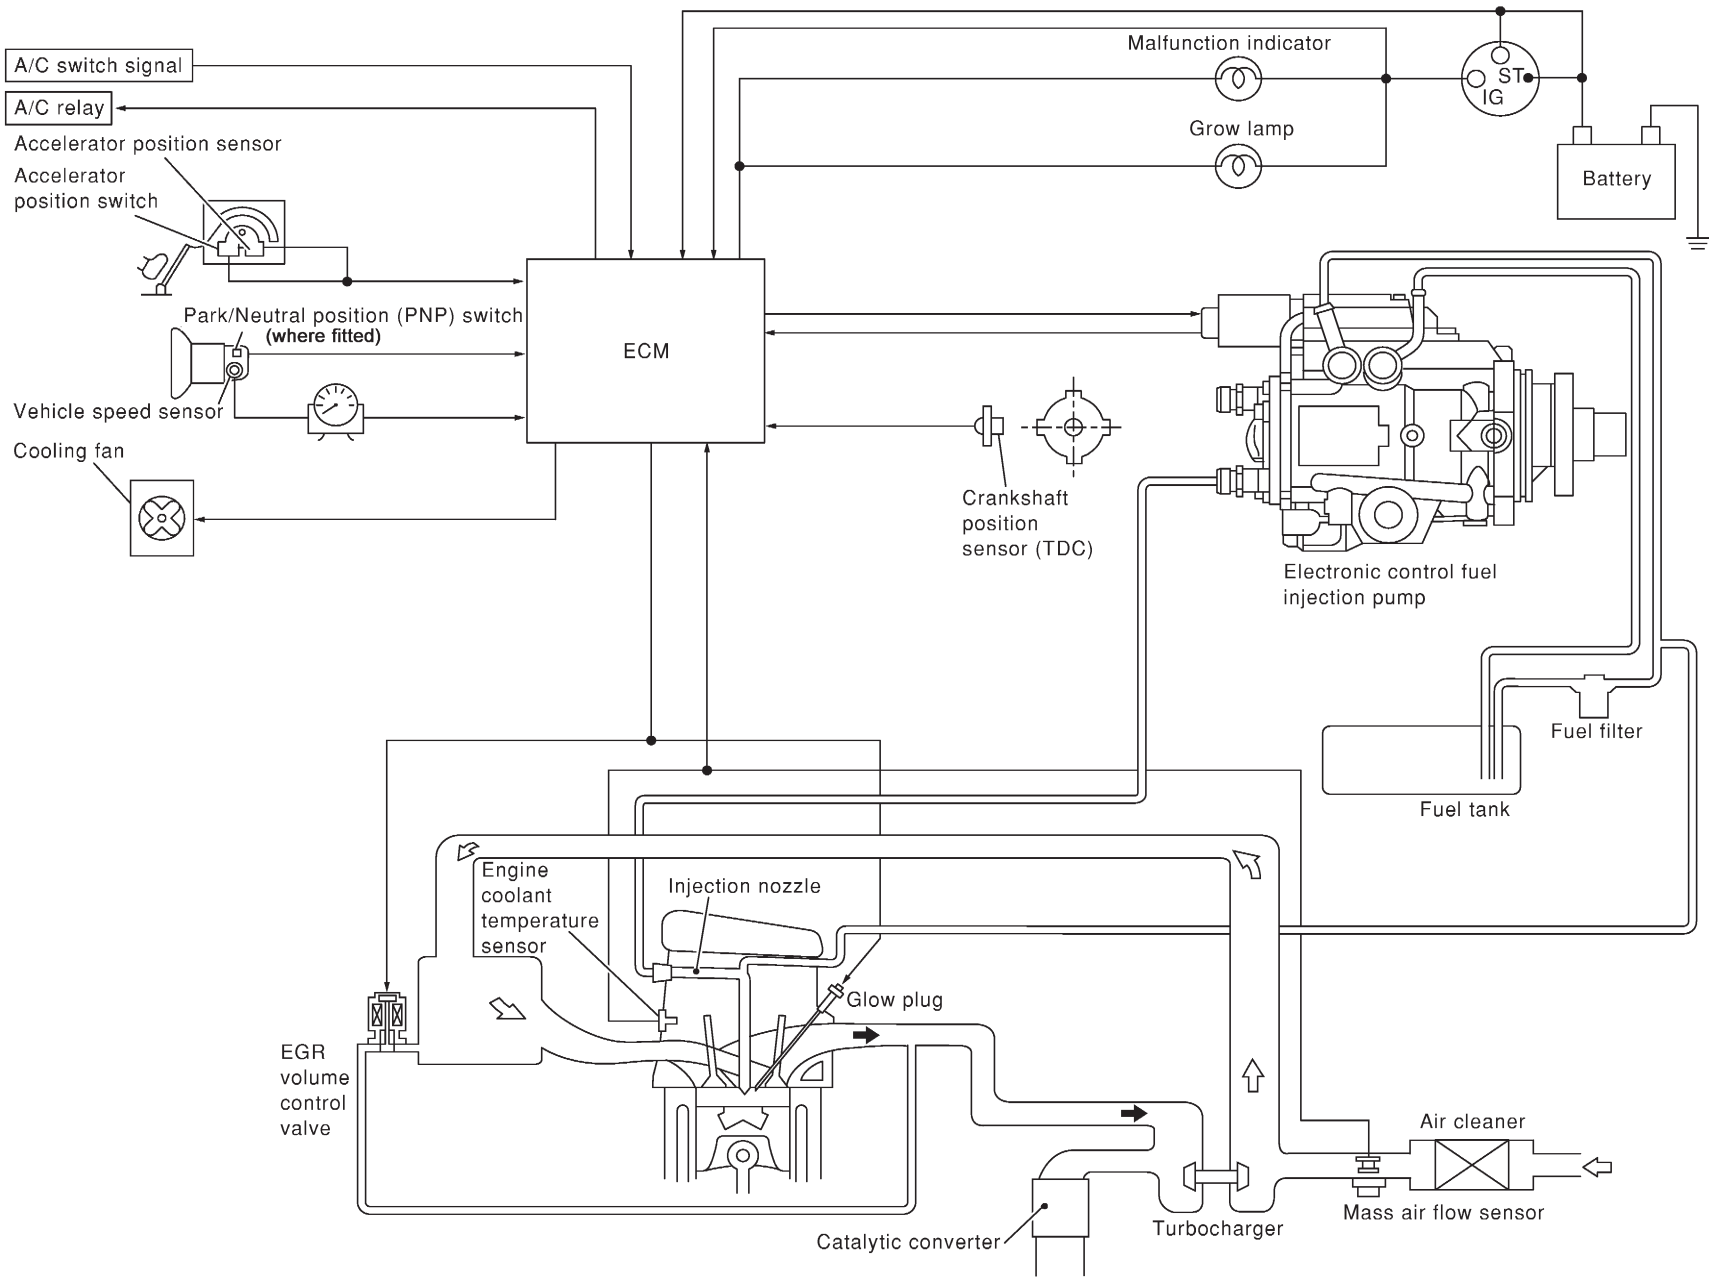

EC-503

N/EF398A

ENGINE AND EMISSION CONTROL OVERALL SYSTEM

YD

System Chart

System Chart

N/JEC0611

Input (Sensor)	ECM Function	Output (Actuator)
<ul style="list-style-type: none"> ● Electronic control fuel injection pump ● Crankshaft position sensor (TDC) ● Engine coolant temperature sensor ● Accelerator position sensor ● Accelerator position switch ● Park/Neutral position (PNP) switch* ● Ignition switch ● Battery voltage ● Vehicle speed sensor ● Air conditioner switch ● Mass air flow sensor ● Stop lamp switch 	Fuel injection control	Electronic control fuel injection pump
	Fuel injection timing control	Electronic control fuel injection pump
	Fuel cut control	Electronic control fuel injection pump
	Glow control system	Glow relay & glow lamp
	On board diagnostic system	MI (On the instrument panel)
	EGR volume control	EGR volume control valve
	Cooling fan control	Cooling fan relay
	Air conditioning cut control	Air conditioner relay

*: If so equipped

Fuel Injection Control System

DESCRIPTION

System Description

NJEC0612

Three types of fuel injection control are provided to accommodate engine operating conditions; normal control, idle control and start control. The ECM determines the appropriate fuel injection control. Under each control, the amount of fuel injected is compensated to improve engine performance.

NJEC0612S01


Pulse signals are exchanged between ECM and electronic control fuel injection pump (control unit is built-in). The fuel injection pump control unit performs duty control on the spill valve (built into the fuel injection pump) according to the input signals to compensate the amount of fuel injected to the preset value.

Start Control

Input/Output Signal Chart

NJEC0612S02
NJEC0612S0201

Sensor	Input Signal to ECM	ECM Function	Actuator
Engine coolant temperature sensor	Engine coolant temperature	Fuel injection control (start control)	Electronic control fuel injection pump
Crankshaft position sensor (TDC)	Engine speed		
Ignition switch	Start signal		

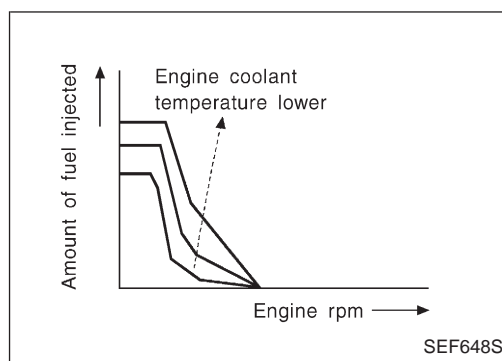

When the ECM receives a start signal from the ignition switch, the ECM adapts the fuel injection system for the start control. The amount of fuel injected at engine starting is a preset program value in the ECM. The program is determined by the engine speed and engine coolant temperature.

For better startability under cool engine conditions, the lower the coolant temperature becomes, the greater the amount of fuel injected. The ECM ends the start control when the engine speed reaches the specific value, and shifts the control to the normal or idle control.

Idle Control

Input/Output Signal Chart

NJEC0612S03
NJEC0612S0301

Sensor	Input Signal to ECM	ECM Function	Actuator
Engine coolant temperature sensor	Engine coolant temperature	Fuel injection control (Idle control)	Electronic control fuel injection pump
Crankshaft position sensor (TDC)	Engine speed		
Battery	Battery voltage		
Accelerator position switch	Idle position		
Vehicle speed sensor	Vehicle speed		
Air conditioner switch	Air conditioner signal		


When the ECM determines that the engine speed is at idle, the fuel injection system is adapted for the idle control. The ECM regulates the amount of fuel injected corresponding to changes in load applied to the engine to keep engine speed constant. The ECM also provides the system with a fast idle control in response to the engine coolant temperature signal.

Normal Control Input/Output Signal Chart

NJEC0612S04

NJEC0612S0401

Sensor	Input Signal to ECM	ECM Function	Actuator
Crankshaft position sensor (TDC)	Engine speed	Fuel injection control (Normal control)	Electronic control fuel injection pump
Accelerator position sensor	Accelerator position		

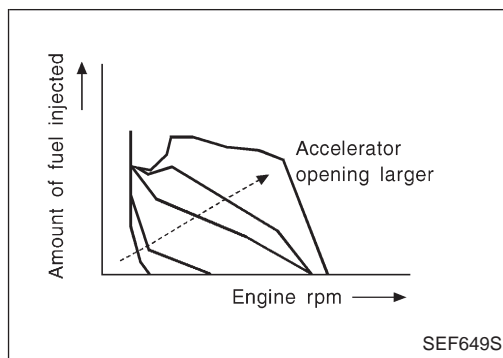

The amount of fuel injected under normal driving conditions is determined according to sensor signals. The crankshaft position sensor (TDC) detects engine speed and the accelerator position sensor detects accelerator position. These sensors send signals to the ECM.

The fuel injection data, predetermined by correlation between various engine speeds and accelerator positions, are stored in the ECM memory, forming a map. The ECM determines the optimal amount of fuel to be injected using the sensor signals in comparison with the map.

Maximum Amount Control Input/Output Signal Chart

NJEC0612S05

NJEC0612S0501

Sensor	Input Signal to ECM	ECM Function	Actuator
Mass air flow sensor	Amount of intake air	Fuel injection control (Maximum amount control)	Electronic control fuel injection pump
Engine coolant temperature sensor	Engine coolant temperature		
Crankshaft position sensor (TDC)	Engine speed		
Accelerator position sensor	Accelerator position		

The maximum injection amount is controlled to an optimum by the engine speed, intake air amount, engine coolant temperature, and accelerator opening in accordance with the driving conditions.

This prevents the oversupply of the injection amount caused by decreased air density at a high altitude or during a system failure.

Deceleration Control Input/Output Signal Chart

NJEC0612S06

NJEC0612S0601

Sensor	Input Signal to ECM	ECM Function	Actuator
Accelerator position switch	Accelerator position	Fuel injection control (Deceleration control)	Electronic control fuel injection pump
Crankshaft position sensor (TDC)	Engine speed		

The ECM sends a fuel cut signal to the electronic control fuel injection pump during deceleration for better fuel efficiency. The ECM determines the time of deceleration according to signals from the accelerator position switch and crankshaft position sensor (TDC).

Fuel Injection Timing Control System

DESCRIPTION

The target fuel injection timing in accordance with the engine speed and the fuel injection amount are recorded as a map in the ECM beforehand. The ECM and the injection pump control unit exchange signals and perform feedback control for optimum injection timing in accordance with the map.

NJEC0613

Air Conditioning Cut Control

DESCRIPTION

NJEC0614

Input/Output Signal Chart

NJEC0614S01

Sensor	Input Signal to ECM	ECM Function	Actuator
Air conditioner switch	Air conditioner "ON" signal	Air conditioner cut control	Air conditioner relay
Accelerator position sensor	Accelerator valve opening angle		
Vehicle speed sensor	Vehicle speed		
Engine coolant temperature sensor	Engine coolant temperature		

System Description

NJEC0614S02

This system improves acceleration when the air conditioner is used. When the accelerator pedal is fully depressed, the air conditioner is turned off for a few seconds. When engine coolant temperature becomes excessively high, the air conditioner is turned off. This continues until the engine coolant temperature returns to normal.

Fuel Cut Control (at no load & high engine speed)

DESCRIPTION

NJEC0615

Input/Output Signal Chart

NJEC0615S01


Sensor	Input Signal to ECM	ECM Function	Actuator
Vehicle speed sensor	Vehicle speed	Fuel cut control	Electronic control fuel injection pump
Accelerator position switch	Accelerator position		
Crankshaft position sensor (TDC)	Engine speed		

If the engine speed is above 2,800 rpm with no load (for example, in neutral and engine speed over 2,800 rpm) fuel will be cut off after some time. The exact time when the fuel is cut off varies based on engine speed. Fuel cut will operate until the engine speed reaches 1,500 rpm, then fuel cut is cancelled.

NOTE:

This function is different from deceleration control listed under "Fuel Injection Control System", EC-505.

Crankcase Ventilation System

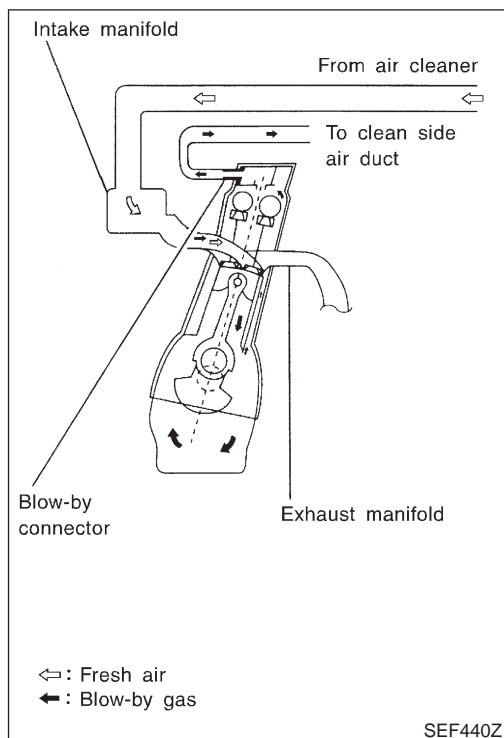


Crankcase Ventilation System

DESCRIPTION

In this system, blow-by gas is sucked into the air duct after oil separation by oil separator in the rocker cover.

NJEC0616

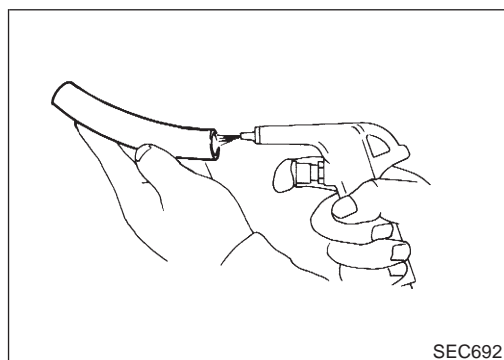

INSPECTION

Ventilation Hose

1. Check hoses and hose connections for leaks.
2. Disconnect all hoses and clean with compressed air. If any hose cannot be freed of obstructions, replace.

NJEC0617



NJEC0617S01

Injection Tube and Injection Nozzle REMOVAL AND INSTALLATION

NJEC0618

CAUTION:

- Do not disassemble injection nozzle assembly. If NG, replace injection nozzle assembly.
- Plug flare nut with a cap or rag so that no dust enters the nozzle. Cover nozzle tip for protection of needle.

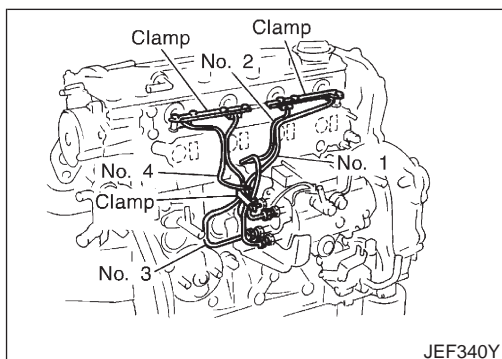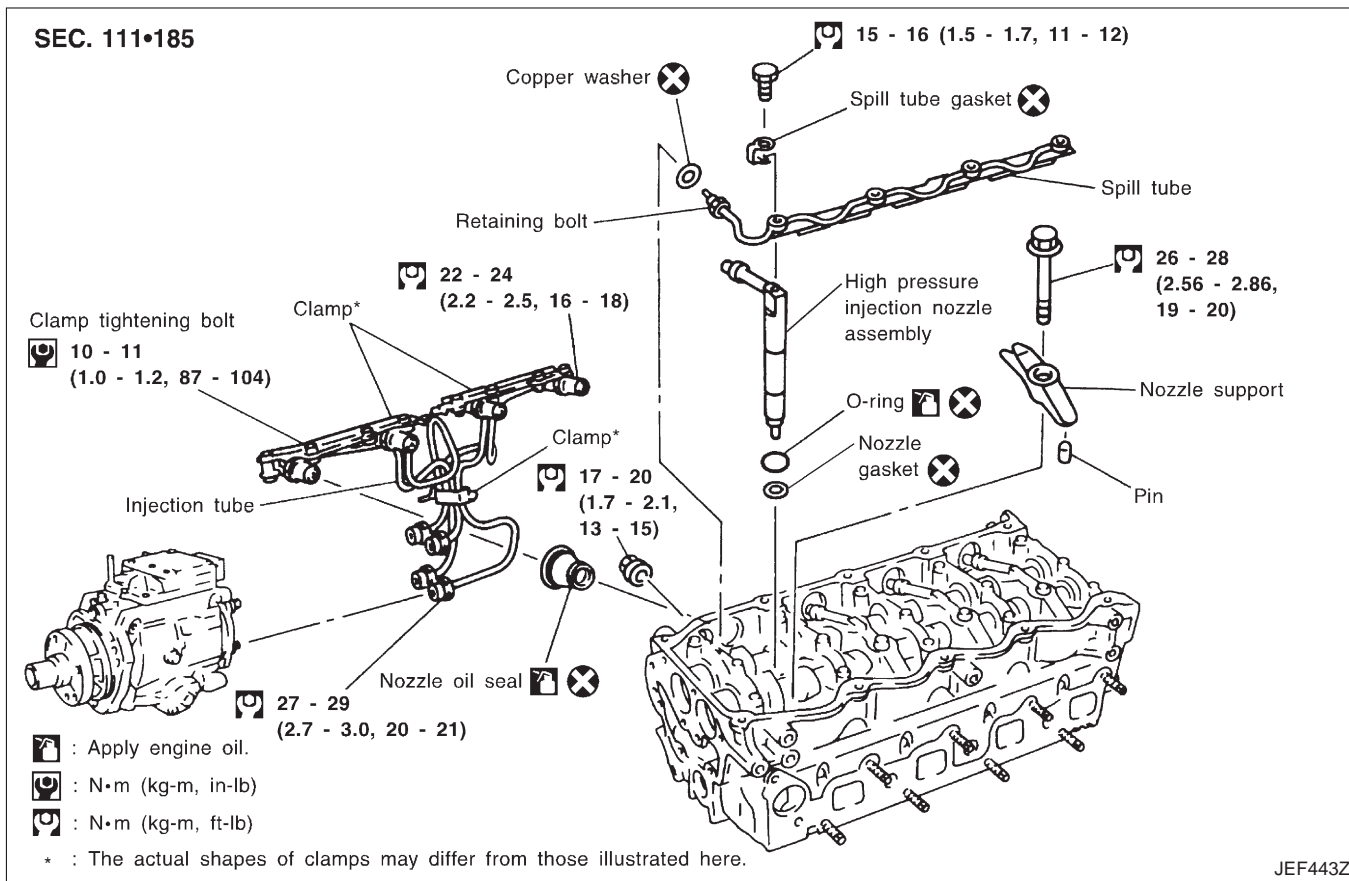

Injection Tube




NJEC0618S01

Removal

NJEC0618S0101

1. Mark the cylinder Nos. to the injection tubes, then disconnect them.
 - **Marking should be made at proper locations and by the proper method, so that they are not erased by fuel, etc.**
2. Remove the clamps, then disconnect the tubes one by one.
 - The intake manifold is removed for explanation in the figure.

Injection Tube and Injection Nozzle (Cont'd)

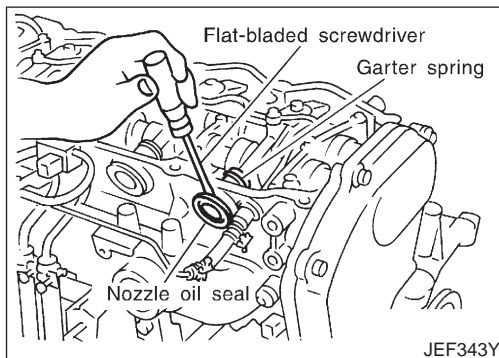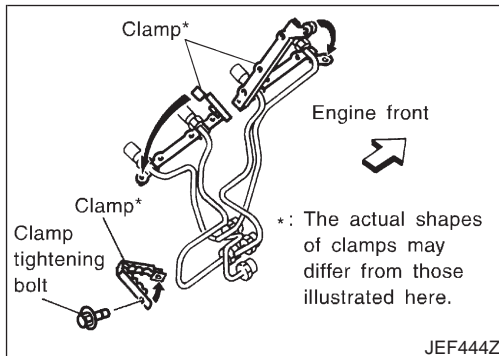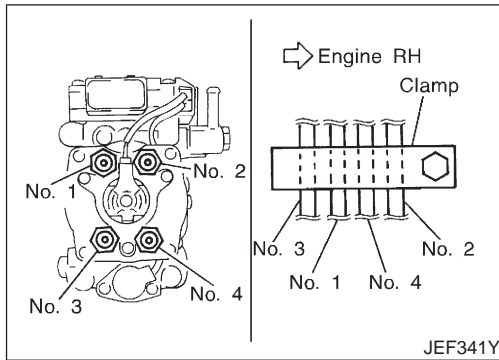

Installation

NJEC0618S0102

1. Referring to the figure and the marking which were made for installation, connect the injection tubes to all the cylinders.
2. Connect temporarily the tubes to the cylinder head side only by screwing 2 to 3 turns. Make sure that all tubes can be connected to the pump side also.
3. Then, tighten the flare nuts of the cylinder head side and pump side, starting from the opposite side from you.

4. Attach the injection tube clamp in the direction shown in the figure.
5. Insert tightening bolts of the clamp (4-tube type) from the rear to the front of the engine.

Injection Nozzle Oil Seal

NJEC0618S02

Removal


NJEC0618S0201

Using a tool such as a flat-bladed screwdriver, pry the flange of the seal, then remove it.

Installation

NJEC0618S0202

1. After the high-pressure injection nozzle assembly is installed, push the seal from the cylinder head side until it contacts the flange.
 2. Make sure that the garter spring of the seal on the high-pressure injection nozzle assembly side is not falling.
- **Replace the oil seal with new one when the high-pressure injection nozzle assembly is removed. (It is not necessary to replace the oil seal when only injection tubes are removed.)**

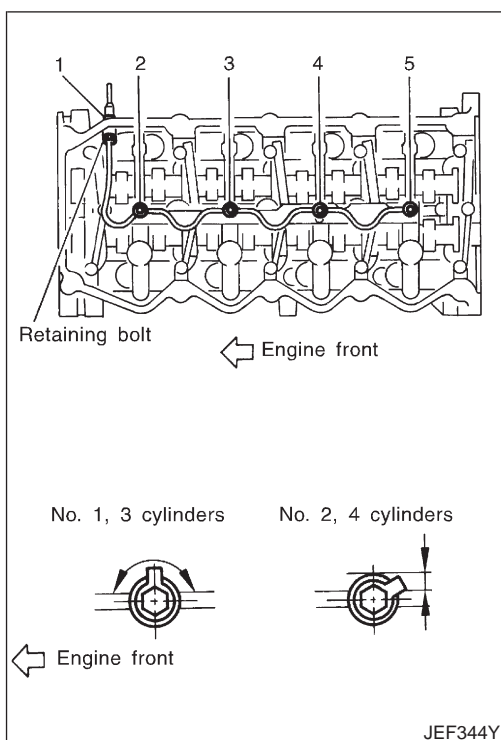

Spill Tube

NJEC0618S03

Removal

NJEC0618S0301


Loosen and remove the mounting bolts and flare nuts in the reverse order of the numbers in the figure.

- When the flare nuts are loosened, hold the head of hexagonal retaining bolts (head inside) using a wrench.

Installation

NJEC0618S0302

1. Tighten the flare nuts and mounting bolts in the numerical order shown in the figure.
- When the flare nuts are tightened, hold the head of the hexagonal retaining bolts (head inside) using a wrench.
2. To prevent interference with the rocker cover, place the spill gasket joint within the range shown by the arrow, then tighten the mounting bolts. (Be especially careful about No. 2 and 4 cylinders.)
- **After the spill tube is installed, check the airtightness of the spill tube.**
- After the bolts are tightened, the joint of the spill tube gasket might be broken. However, this will not affect function.

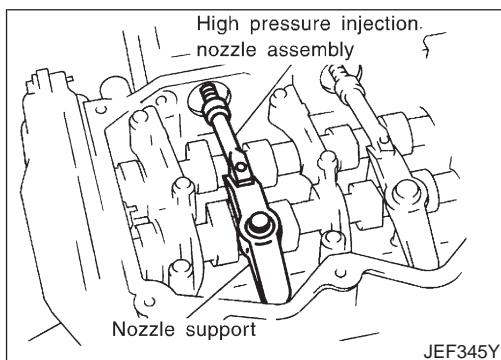

High Pressure Injection Nozzle Assembly

NJEC0618S04

Removal

NJEC0618S0401

1. Remove the nozzle support, then pull out the high-pressure injection nozzle assembly by turning it clockwise/counterclockwise.
2. Using a tool such as a flat-head screwdriver, remove the copper washer inside the cylinder head.

CAUTION:

Do not disassemble the high-pressure injection nozzle.

Installation

NJEC0618S0402

1. Insert the nozzle gasket to the cylinder head hole.
2. Attach the O-ring to the mounting groove of the nozzle side, then insert it in the cylinder head.


TEST AND ADJUSTMENT

NJEC0619

WARNING:

When using nozzle tester, be careful not to allow diesel fuel sprayed from nozzle to contact your hands or body, and make sure your eyes are properly protected with goggles.

Injection Tube and Injection Nozzle (Cont'd)

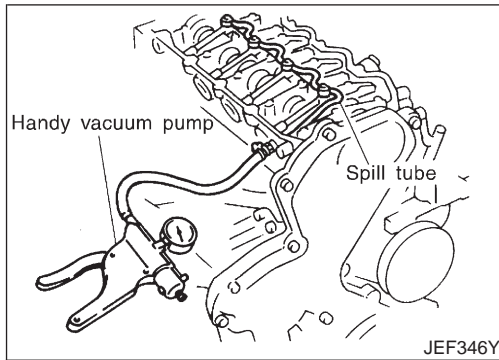

Inspection for Spill Tube Airtightness


NJEC0619S01

Before the rocker cover is installed, perform the inspection as follows.

1. Connect the handy vacuum pump to the spill hose.
2. Check that the airtightness is maintained after the negative pressure shown below is applied.

Standard:


-53.3 to -66.7 kPa (-533 to -667 mbar, -400 to -500 mmHg, -15.75 to -19.69 inHg)

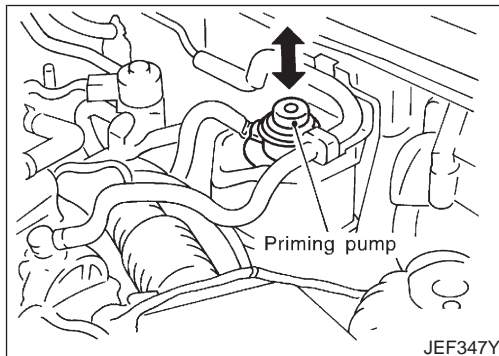

Air Bleeding of Fuel Piping

NJEC0619S02

After the repair, bleed air in the piping by pumping the priming pump up and down until it becomes heavy.

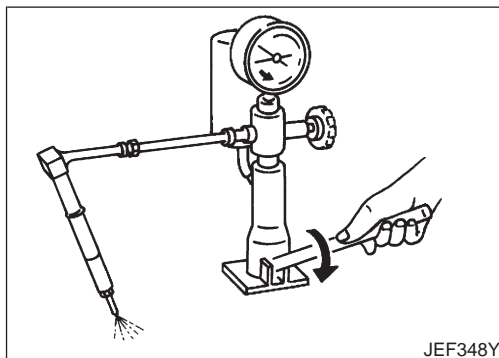

Injection Pressure Test

NJEC0619S03

1. Install injection nozzle assembly to injection nozzle tester and bleed air from flare nut.

2. Pump the tester handle slowly (one time per second) and watch the pressure gauge.
3. Read the pressure gauge when the injection pressure just starts dropping.

Initial injection pressure:

New


21,476 - 22,457 kPa (214.7 - 224.5 bar, 219 - 229 kg/cm², 3,114 - 3,256 psi)

Limit

18,275 kPa (182.7 bar, 186 kg/cm², 2,650 psi)

- The injection nozzle assembly has a 2-stage pressure injection function. However, the judgement should be made at the first stage of the valve opening pressure.

Always check initial injection pressure using a new nozzle.

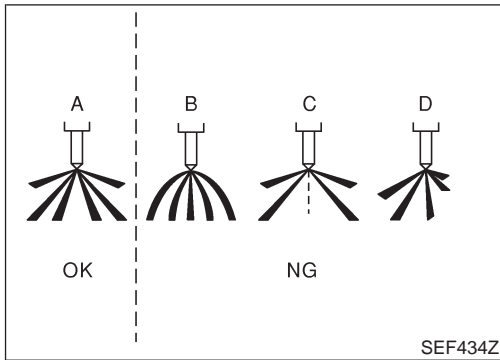

Spray Pattern Test

NJEC0619S05

1. Check spray pattern by pumping tester handle one full stroke per second.

NG spray pattern:

Does not inject straight and strong (B in the figure).


Fuel drips (C in the figure).

Does not inject evenly (D in the figure).

2. If the spray pattern is not correct, replace injection nozzle assembly.

Electronic Control Fuel Injection Pump REMOVAL AND INSTALLATION

NJEC0620

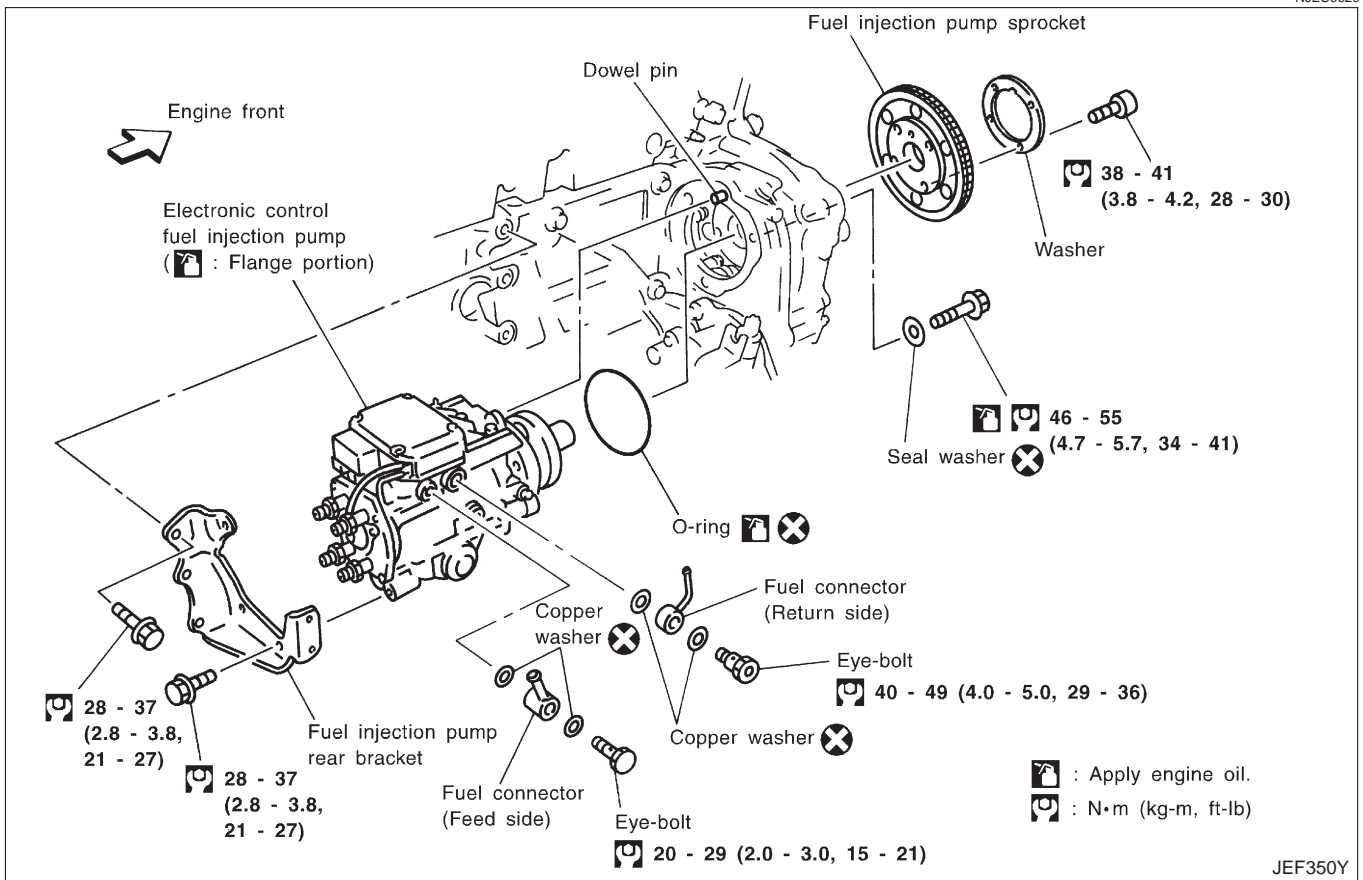


JEF350Y

Removal


NJEC0620S01

1. Remove the parts shown below.
 - Engine hood
 - Engine coolant (drain)
 - Engine cover
 - Heater pipe under intake manifold
 - Injection tubes
 - Right splash cover (with undercover)
 - Right front wheel

Electronic Control Fuel Injection Pump (Cont'd)

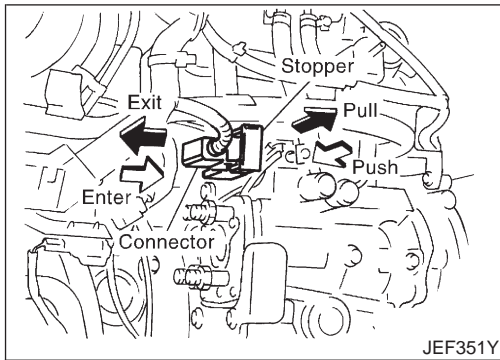


2. Disconnect the fuel hoses from the fuel injection pump.
3. Disconnect the harness connector from the fuel injection pump.
 - Disconnect the connector by pulling the connector stopper fully.
 - When the stopper is fully pulled, the connector will be disconnected together. For installation, push the connector half way first, then press the stopper until it locks, so that the connector is connected together.
4. Remove the fuel injection pump rear bracket.

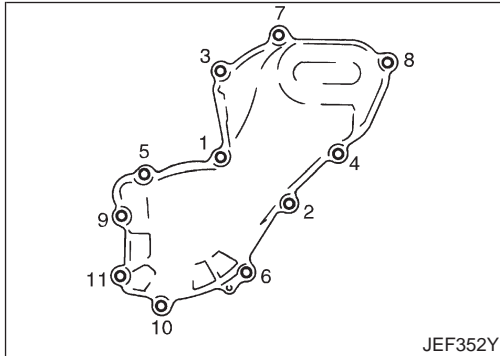


5. Remove the front chain case.
 - Move the power steering fluid reservoir tank from the bracket.
 - Loosen and remove the mounting bolts in the reverse order of the numbers shown in the figure.
 - As for bolts 6, 10, and 11, remove with rubber washer because there is not enough space for removing only the bolts.


CAUTION:
To prevent foreign objects from getting in the engine, cover the opening during the removal of the front chain case.

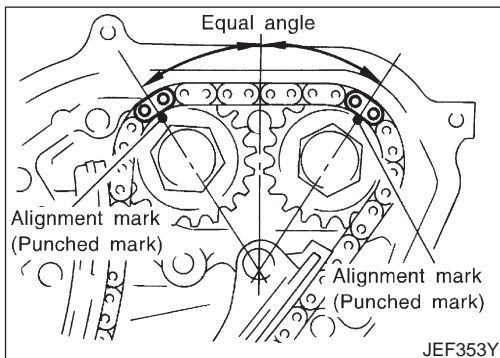


6. Adjust the No. 1 cylinder to the top dead center position.
 - Turn the crankshaft pulley clockwise, then align the alignment mark (punched mark) of the camshaft sprocket to the position shown in the figure.
 - There is no indicator on the crankshaft pulley.
 - It is not necessary to mark the secondary timing chain for removal because it can be matched by the link color for installation. However, the alignment mark on the fuel injection pump sprocket is difficult to see; mark it if necessary.

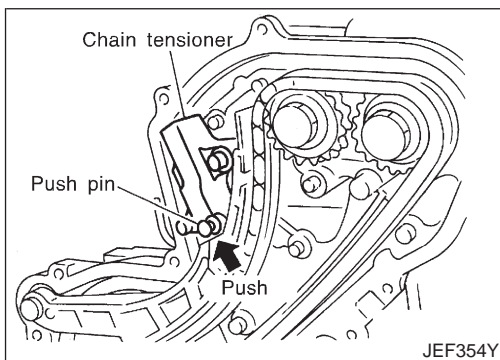


7. Remove the chain tensioner.
 - a. Push the plunger of the chain tensioner, then fix it with a tool such as a push pin.

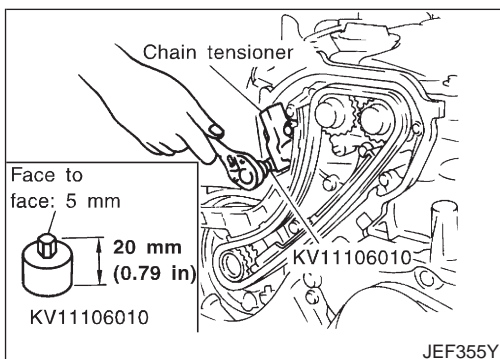


- b. Using the hexagon wrench (face to face: 5 mm) (SST), remove the mounting bolts, then remove the chain tensioner.
 - A multi-purpose tool may also be used.

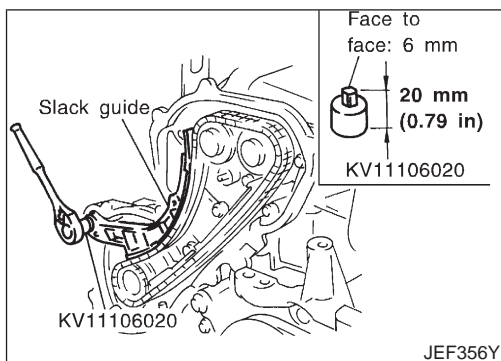


8. Remove the timing chain slack guide.
 - Using the hexagon wrench (face to face: 6 mm, short-type) (SST), remove the mounting bolts, then remove the timing chain slack guide.

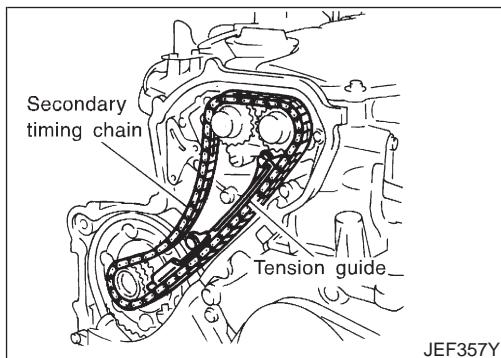

9. Remove the timing chain tension guide.
10. Remove the secondary timing chain.
 - Only the timing chain can be removed without removing the sprockets.

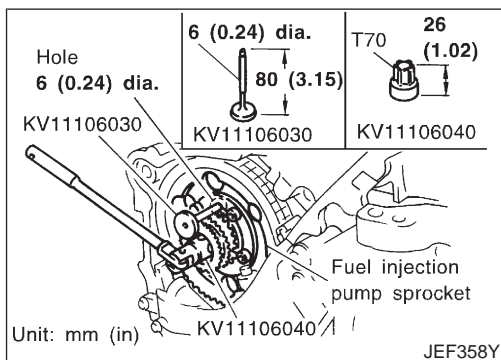

11. Fix the fuel injection pump sprocket.
 - a. Insert the positioning stopper pin (SST) in the 6 mm (0.24 in) dia. hole of the fuel injection pump sprocket.
 - b. Using the torx wrench (SST), turn the pump shaft gradually to adjust the hole position of the fuel injection pump sprocket.
 - c. Insert the positioning stopper pin through the fuel injection pump body to fix the sprocket.

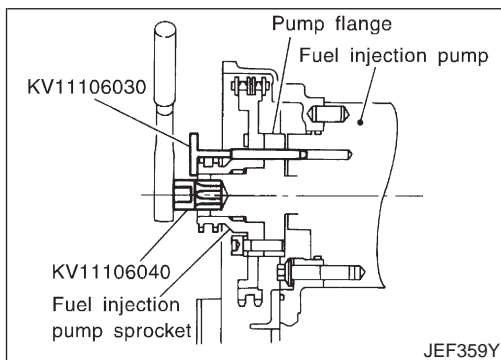


- Insert the positioning stopper pin until its flange contacts the fuel injection pump sprocket.
- d. Remove the torx wrench (SST).

BASIC SERVICE PROCEDURE



YD

Electronic Control Fuel Injection Pump (Cont'd)

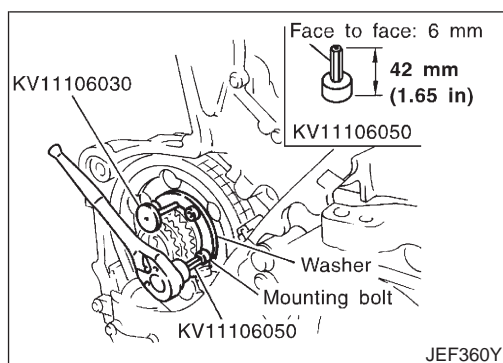

12. Using the hexagon wrench (face to face: 6 mm, long-type) (SST), remove the mounting bolts of the fuel injection pump sprocket.

- It is not necessary to remove the washer of the fuel injection pump sprocket.

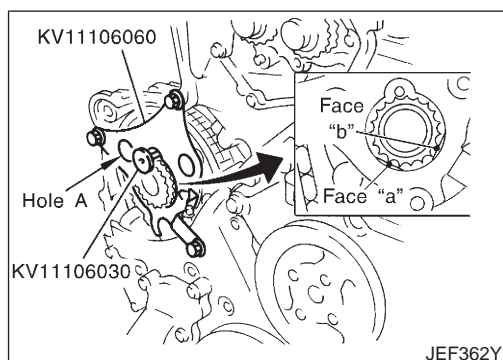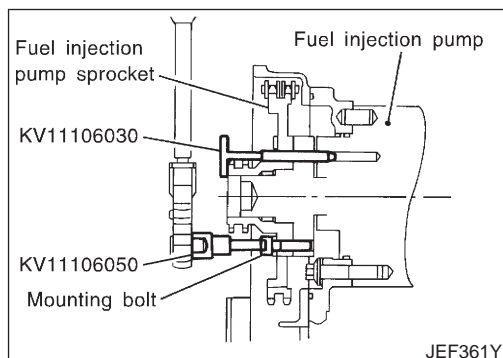



13. Using the sprocket holder (SST), hold the fuel injection pump sprocket to prevent falling.

- When the sprocket holder is installed, if the positioning stopper pin interferes, pull out the stopper pin approximately 10 mm (0.39 in), then install it.
- After the sprocket holder is installed temporarily, insert the extension bar (SST) and Torx socket in the three holes A. After positioning the holes, tighten the holder mounting bolts. (Refer to the step 14 about the tool.)
- The length of the sprocket holder mounting bolts should be approximately 15 mm (0.59 in) (M6 thread length).
- Make sure that the a- and b-faces of the sprocket holder contact the bottom side of the sprocket 15 mm (0.59 in) (small diameter side).

CAUTION:

Do not remove the sprocket holder until the fuel injection pump is installed.

- After the sprocket holder is installed, pull out the positioning stopper pin (SST) from the fuel injection pump sprocket.

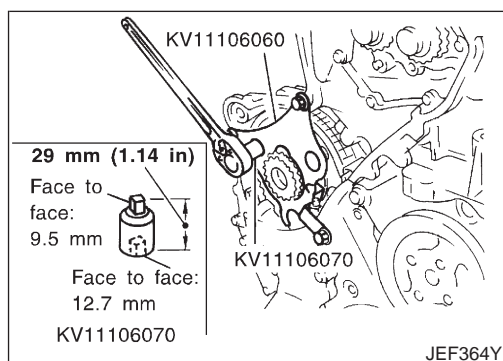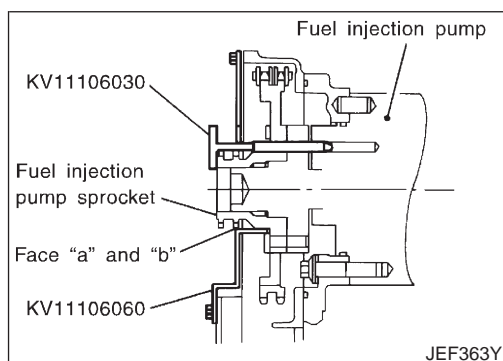


14. Using the extension bar [SST: whole length 43 mm (1.69 in)] and the Torx socket (Q6-E12: commercially available), remove the mounting bolts, then remove the fuel injection pump toward the rear of the engine.

- Even after all the mounting bolts are removed, the fuel injection pump is still held by a dowel pin.

CAUTION:


Do not disassemble or adjust the fuel injection pump.

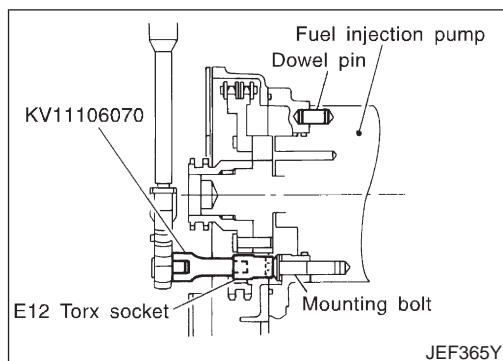

15. Remove the fuel injection pump mounting bolts.
- The seal washer of the mounting bolts cannot be reused.

CAUTION:

For removal, be careful not to drop the seal washer into the engine.

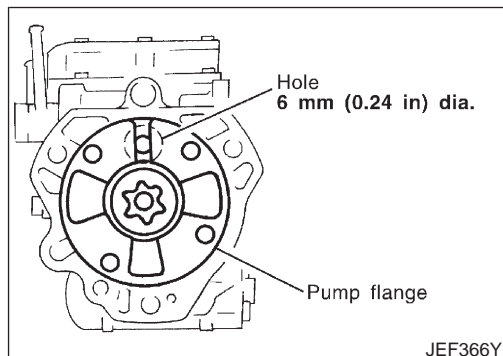


Installation


NJEC0620S02

- It is not necessary to adjust the injection timing by changing the installation angle which used to be performed with conventional fuel injection pumps. The installation position can be simply decided by the dowel pin and the mounting bolts.


1. Before the fuel injection pump is installed, check that the notch of its flange and the 6 mm (0.24 in) dia. hole on the body are aligned.

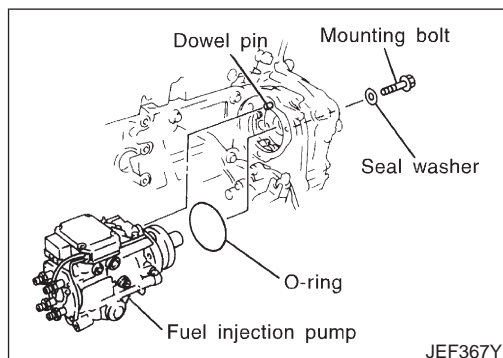

2. Insert the fuel injection pump to the mounting position from the rear of the engine.
- Adjust the fuel injection pump bracket position to the dowel pin, then install it.

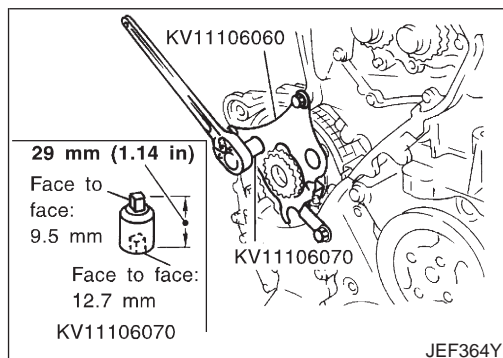


3. Using the extension bar (SST) and the Torx socket, tighten the mounting bolts of the fuel injection pump.
4. Remove the sprocket holder (SST).

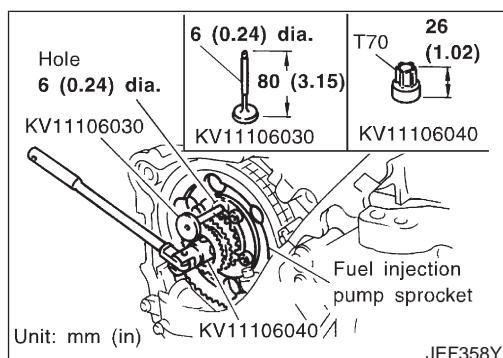


5. Using the torx wrench (SST), turn the pump shaft gradually to adjust the position of the flange. Then, insert the positioning stopper pin (SST) to the 6 mm (0.24 in) dia. hole of the fuel injection pump sprocket through the pump flange and the pump body.
6. Remove the torx wrench (SST).


Electronic Control Fuel Injection Pump (Cont'd)

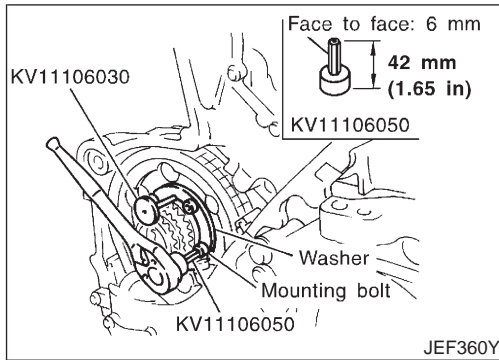


7. Using the hexagon wrench (face to face: 6 mm, long-type) (SST), tighten the sprocket mounting bolt.
 - When the washer of the fuel injection pump sprocket is removed, install it with the marking "F" (front) facing the front of the engine.
8. Pull out the positioning stopper pin (SST).

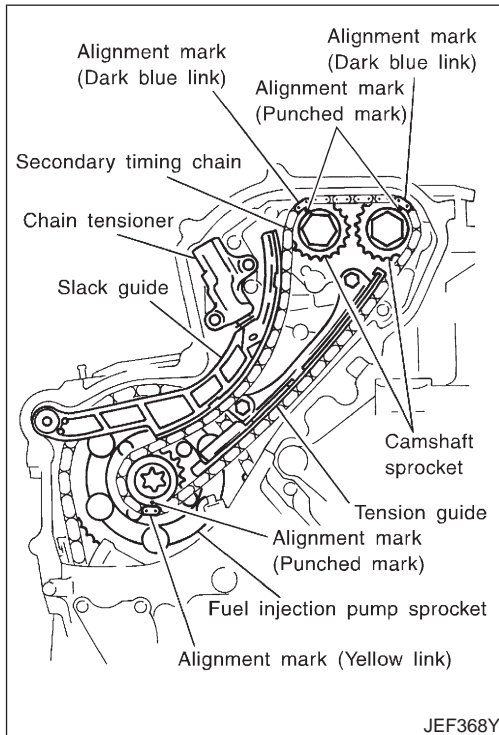





9. Install the secondary timing chain.
 - Align the alignment marks of the sprockets and those of the chain, then install it.
 - The figure shows the installation state and names of the secondary timing chain and other related parts.
10. Install timing chain tension guide.
 - The upper installation bolt is longer than the lower.

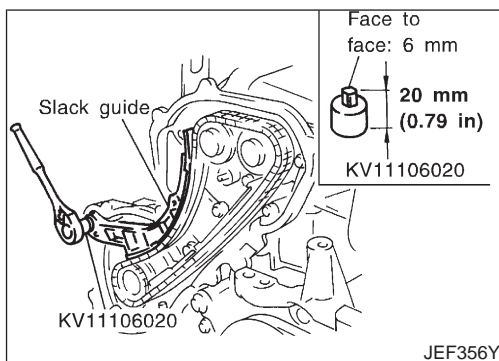

11. Using a hexagon wrench (face to face: 6 mm, short-type) (SST), install the timing chain slack guide.

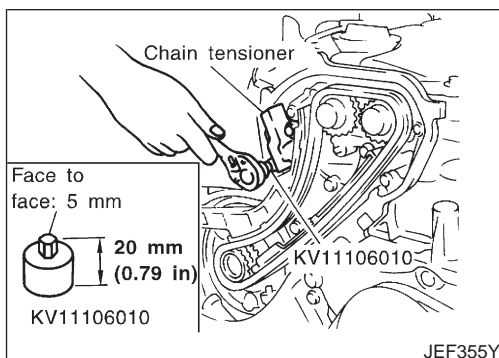

12. Install the chain tensioner.
 - a. Push the plunger of the chain tensioner, then hold it with a tool such as a push pin, and install it.
 - b. Using a hexagon wrench (face to face: 5 mm) (SST), tighten the mounting bolts.
 - Installation is possible by a multi-purpose tool also.
 - c. Pull out the tool such as a push pin which holds the plunger.
 - **Make sure that the alignment marks of the sprockets and timing chain are aligned.**

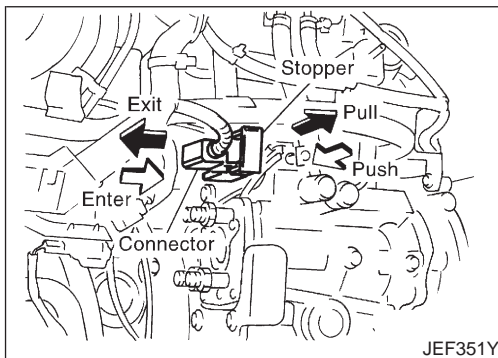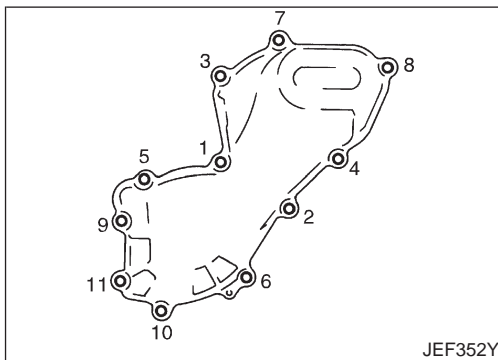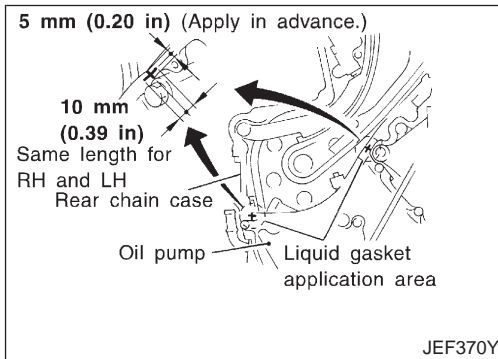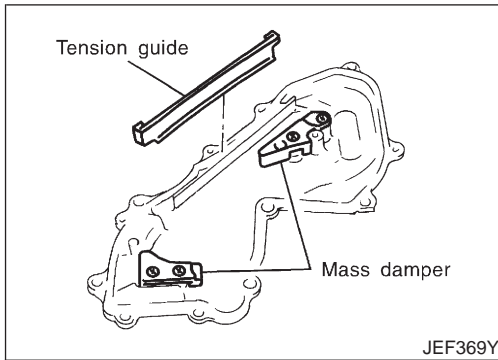


13. Install the front chain case.
 - a. Install the tension guide to the back side of the front chain case.
 - If the front chain case is tilted, the tension guide may fall off. Therefore, when installing the front chain case, hold it vertically.
 - b. Apply Three Bond 1207C (KP510 00150) to both ends of the arch area of the oil pump (contact surface of rear chain case) as shown in the figure.
 - c. Install the front chain case.
 - Align the dowel pin of the oil pump case to the pin hole, then install it.
 - Install bolts 6, 10, and 11 (shown in the figure) with the rubber washer to the front chain case.
 - d. Tighten the mounting bolts in the numerical order shown in the figure.
 - e. After all bolts are tightened, tighten the mounting bolts in the numerical order shown in the figure again.
14. Install the fuel injection pump rear bracket.
 - Tighten all the bolts temporarily, then tighten them securely with the mounting face securely contacting the fuel injection pump and the pump bracket.
15. Connect the fuel injection pump harness connector.
 - Insert the harness connector securely until the stopper locks.
 - Push the connector half way first, then press the stopper until it locks, so that the connector is connected together.
16. Connect the fuel hoses.
 - When the hoses are disconnected at the fuel gallery side, insert until the hoses contact the valve, then install the clamp securely.
17. Install other parts in the reverse order of removal.

Fuel Filter

DESCRIPTION

A water draining cock is on the lower side and a priming pump for bleeding air is on the upper side. NJEC0623

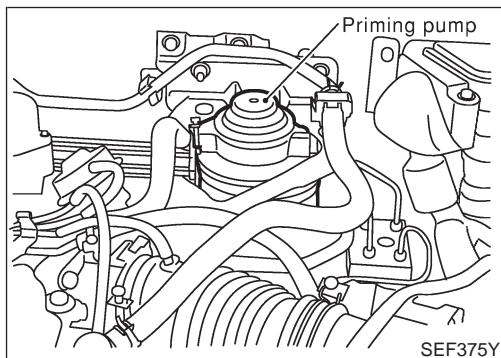

AIR BLEEDING

1. After the repair, bleed air from the piping by pumping the priming pump up and down until it becomes heavy. NJEC0624
 2. To start the engine, rotate the starter for a maximum of 30 seconds. To start the engine more quickly, crank the engine while pumping the priming pump (requires two workers).
 3. If the engine does not start after rotating the starter for a maximum of 30 seconds, stop it once, and pump the priming pump again until it becomes heavy.
 4. Rotate the starter again until the engine starts running.
 5. After the engine starts, let it idle for at least 1 minute to stabilize the behavior.
- **When air is bled completely, the pumping of the priming pump suddenly becomes heavy. Stop the operation at that time.**
 - **If it is difficult to bleed air by the pumping of the priming pump (the pumping of the priming pump does not become heavy), disconnect the fuel supply hose between the fuel filter and the injection pump. Then, perform the operation described above, and make sure that fuel comes out. (Use a pan, etc. so as not to spill fuel. Do not let fuel get on engine and other parts.) After that, connect the hose, then bleed air again.**
 - **Start engine and let it idle for at least one minute after performing air bleeding.**

WATER DRAINING

1. Remove the fuel filter, filter bracket, protector assembly from the dash panel as follows. NJEC0625
 - a. Remove the air cleaner case (upper), air duct assembly, and vacuum hose for brake booster (between the vacuum pump and vacuum pipe).

CAUTION:

After the duct is removed, cover the opening with gum tape, etc. to prevent foreign object from getting into the engine during the operation.

- b. Disconnect the water level warning sensor harness connector.
 - c. Remove the mounting nuts on the dash panel, then remove the fuel filter, filter bracket, and protector assembly from the dash panel.
 - It is not necessary to disconnect the fuel hose.
2. Using a tool such as a pliers, loosen the water draining cock at the bottom of the water level warning sensor located under the fuel filter.

3. Install the fuel filter, filter bracket, and protector assembly temporarily. Then, drain the water by pumping the priming pump with the filter standing straight.
 - Extend the drain hose if necessary.

Water amount when the MI lights up:

65 - 100 ml (2.3 - 3.5 Imp fl oz)

CAUTION:

When the water is drained, the fuel is also drained. Use a pan, etc. to avoid fuel adherence to the rubber parts such as the engine mount insulator.

4. Tighten the water draining cock, then install the fuel filter, filter bracket, protector assembly in the reverse order of removal.

CAUTION:

Do not over-tighten the water draining cock. This will damage the cock thread, resulting in water or fuel leak.

5. Bleed air of the fuel filter. Refer to EC-520.
 - **Start engine and let it idle for at least one minute after performing air bleeding.**

DTC and MI Detection Logic

NJEC0626

When a malfunction is detected, the malfunction (DTC) is stored in the ECM memory. The MI will light up each time the ECM detects malfunction. For diagnostic items causing the MI to light up, refer to "TROUBLE DIAGNOSIS — INDEX", EC-492.

Diagnostic Trouble Code (DTC)

NJEC0627

HOW TO READ DTC

NJEC0627S01

The DTC can be read by the following methods.

⊗ Without CONSULT-II

ECM displays the DTC by a set of four digit numbers with MI illumination in the diagnostic test mode II (Self-diagnostic results). Example: 0103, 0807, 1002, etc.

Ⓜ With CONSULT-II

CONSULT-II displays the DTC in "SELF-DIAG RESULTS" mode. Examples: P0115, P0571, P1202, etc.

These DTCs are prescribed by ISO15031-6.

(CONSULT-II also displays the malfunctioning component or system.)

- **Output of the trouble code means that the indicated circuit has a malfunction. However, in the Mode II it does not indicate whether the malfunction is still occurring or occurred in the past and returned to normal.**

CONSULT-II can identify them. Therefore, using CONSULT-II (if available) is recommended.

HOW TO ERASE DTC

NJEC0627S02

How to Erase DTC (Ⓜ With CONSULT-II)

NJEC0627S0201

1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 5 seconds and then turn it "ON" (engine stopped) again.
2. Touch "ENGINE".
3. Touch "SELF-DIAG RESULTS".
4. Touch "ERASE". (The DTC in the ECM will be erased.)

How to erase DTC (With CONSULT-II)

1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 5 seconds and then turn it "ON" again.

SELECT SYSTEM
ENGINE

2. Turn CONSULT-II "ON" and touch "ENGINE".



SELECT DIAG MODE
SELF-DIAG RESULTS
DATA MONITOR
ACTIVE TEST
ECM PART NUMBER

3. Touch "SELF-DIAG RESULTS".



SELF DIAG RESULTS	
DTC RESULTS	TIME
COOLANT TEMP SEN [P0115]	0

4. Touch "ERASE". (The DTC in the ECM will be erased.)

SEF246Z

The emission related diagnostic information in the ECM can be erased by selecting "ERASE" in the "SELF-DIAG RESULTS" mode with CONSULT-II.

How to Erase DTC (⊗ Without CONSULT-II)

NJEC0627S0202

1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 5 seconds and then turn it "ON" (engine stopped) again.
2. Change the diagnostic test mode from Mode II to Mode I by using the data link connector. (See EC-524.)

The emission related diagnostic information in the ECM can be erased by changing the diagnostic test mode.


- **If the battery is disconnected, the emission-related diagnostic information will be lost after approx. 24 hours.**

- Erasing the emission-related diagnostic information using CONSULT-II is easier and quicker than switching the diagnostic test mode using the data link connector.

Malfunction Indicator (MI)

DESCRIPTION

NJEC0628

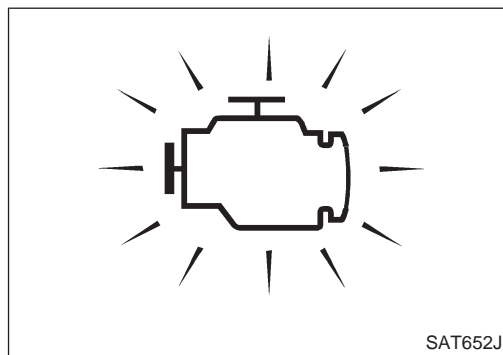

The MI is located on the instrument panel.






1. The MI will light up when the ignition switch is turned ON without the engine running. This is a bulb check.
 - If the MI does not light up, refer to EL-107, "WARNING LAMPS" or see EC-701.
2. When the engine is started, the MI should go off.
 - If the MI remains on, the on board diagnostic system has detected an engine system malfunction.

If MI illuminates or blinks irregularly after starting engine, water may have accumulated in fuel filter. Drain water from fuel filter. Refer to "WATER DRAINING", EC-520.

On Board Diagnostic System Function


NJEC0628S01

The on board diagnostic system has the following three functions.

Diagnostic Test Mode	KEY and ENG. Status	Function	Explanation of Function
Mode I	Ignition switch in ON position  Engine stopped 	BULB CHECK	This function checks the MI bulb for damage (blown, open circuit, etc.). If the MI does not come on, check MI circuit. (See EC-701.)
	Engine running 	MALFUNCTION WARNING	This is a usual driving condition. When ECM detects a malfunction, the MI will light up to inform the driver that a malfunction has been detected.
Mode II	Ignition switch in ON position  Engine stopped 	SELF-DIAGNOSTIC RESULTS	This function allows DTCs to be read.

How to Switch Diagnostic Test Modes

NJEC0628S02

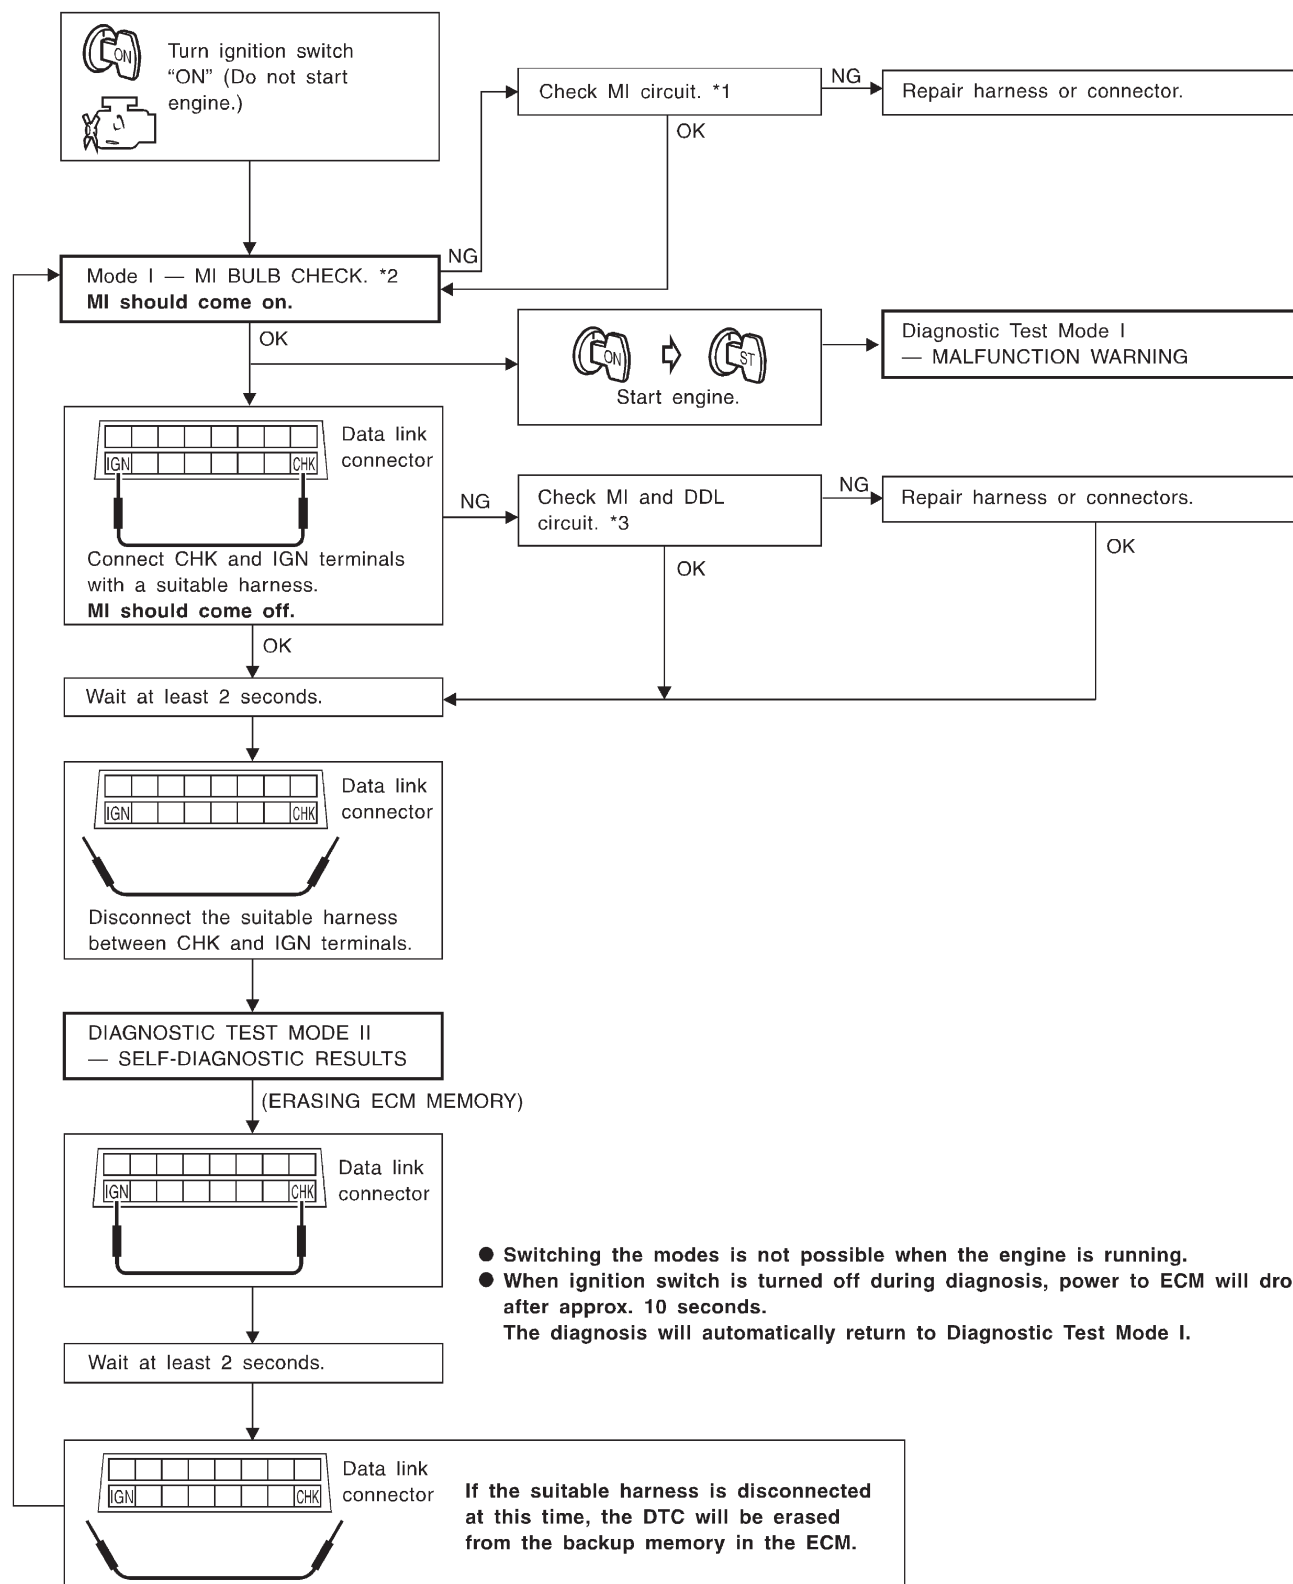

- Switching the modes is not possible when the engine is running.
- When ignition switch is turned off during diagnosis, power to ECM will drop after approx. 10 seconds. The diagnosis will automatically return to Diagnostic Test Mode I.

*1: EC-701

*2: EC-523

*3: EC-701

Diagnostic Test Mode I — Bulb Check

In this mode, the MI on the instrument panel should stay ON. If it remains OFF, check the bulb. Refer to EL-107, "WARNING LAMPS" or see EC-701.

NJEC0628S03

Diagnostic Test Mode I — Malfunction Warning



NJEC0628S04

MI	Condition
ON	When the malfunction is detected or the ECM's CPU is malfunctioning.
OFF	No malfunction.

Diagnostic Test Mode II — Self-diagnostic Results

In this mode, DTC is indicated by the number of blinks of the MI as shown below.

NJEC0628S05

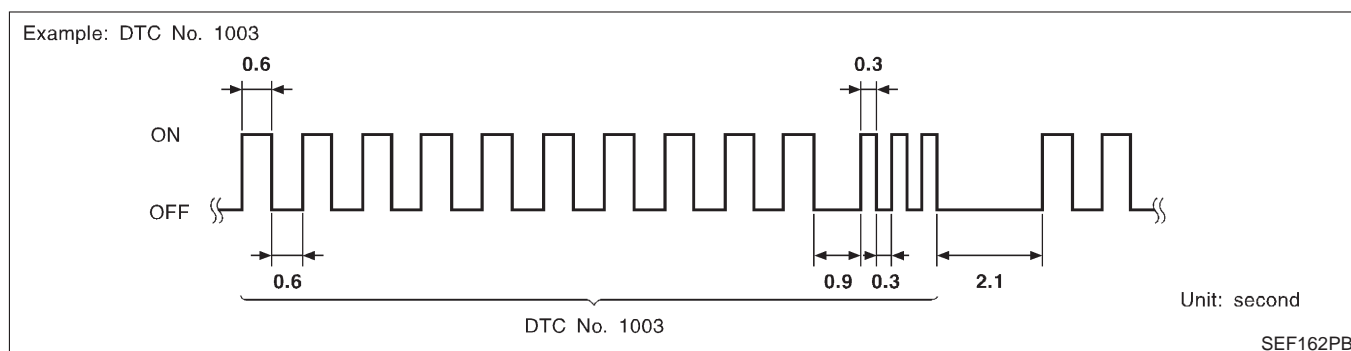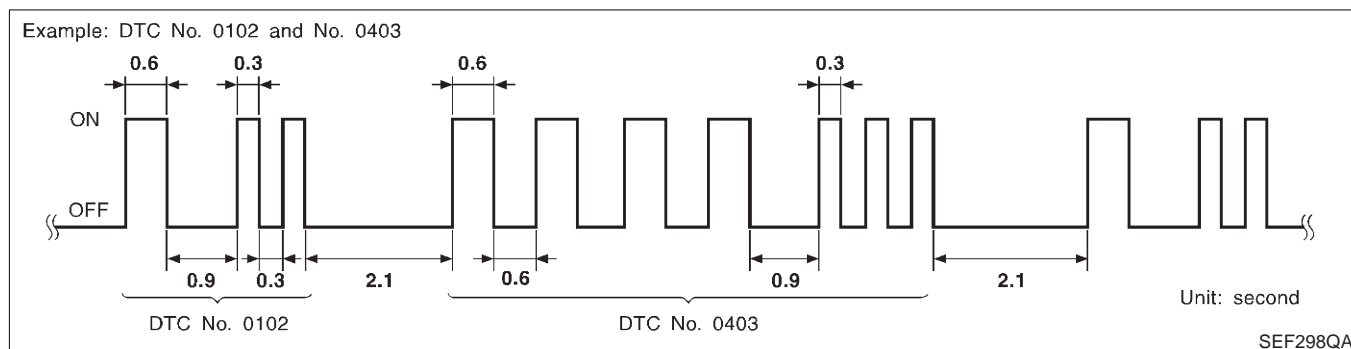

Long (0.6 second) blinking indicates the two LH digits of number and short (0.3 second) blinking indicates the two RH digits of number. For example, the MI blinks 10 times for 6 seconds (0.6 sec x 10 times) and then it blinks three times for about 1 second (0.3 sec x 3 times). This indicates the DTC "1003".

In this way, all the detected malfunctions are classified by their DTC numbers. The DTC "0505" refers to no malfunction. (See TROUBLE DIAGNOSIS — INDEX, EC-492.)

How to Erase Diagnostic Test Mode II (Self-diagnostic results)


The DTC can be erased from the backup memory in the ECM when the diagnostic test mode is changed from Diagnostic Test Mode II to Diagnostic Test Mode I. (Refer to "How to Switch Diagnostic Test Modes", EC-524.)

NJEC0628S06

- If the battery terminal is disconnected, the DTC will be lost from the backup memory within 24 hours.
- Be careful not to erase the stored memory before starting trouble diagnoses.

Relationship Between MI, DTC, CONSULT-II and Driving Patterns

NJEC0628S07

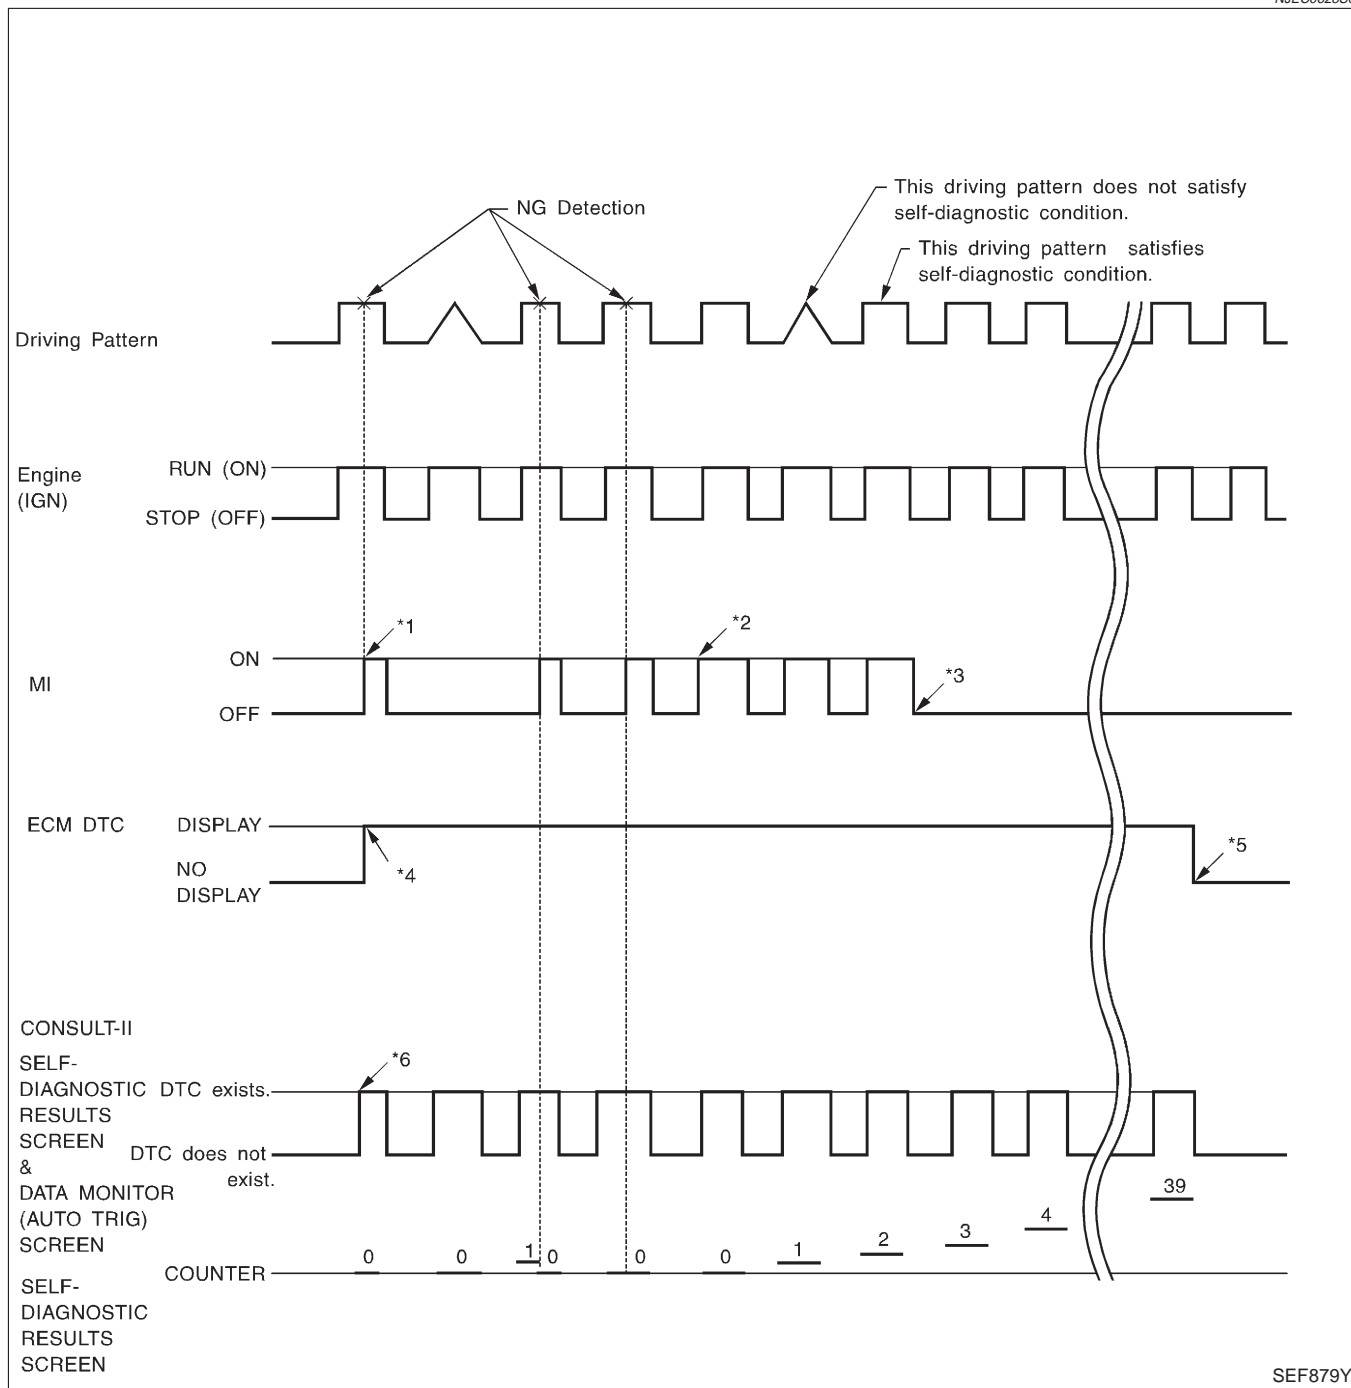


SEF879Y

- *1: When a malfunction is detected, MI will light up.
- *2: When the same malfunction is detected in two consecutive driving patterns, MI will stay lit up.
- *3: MI will go off after vehicle is driven three times without any malfunctions.

- *4: When a malfunction is detected for the first time, the DTC will be stored in ECM.
- *5: The DTC will not be displayed any longer after vehicle is driven 40 times without the same malfunction. (The DTC still remain in ECM.)

- *6: Other screens except SELF-DIAGNOSTIC RESULTS & DATA MONITOR (AUTO TRIG) cannot display the malfunction. DATA MONITOR (AUTO TRIG) can display the malfunction at the moment it is detected.

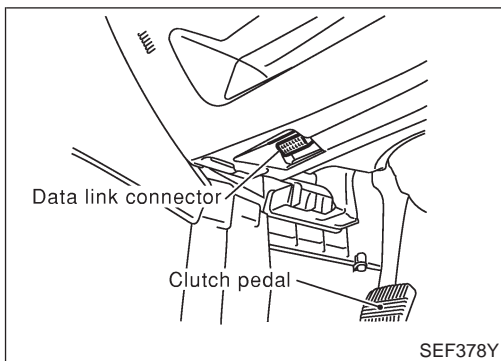


CONSULT-II CONSULT-II INSPECTION PROCEDURE

NJEC0629


NJEC0629S01

1. Turn ignition switch OFF.
2. Connect CONSULT-II to data link connector.
(Data link connector is located under the driver side dash panel.)

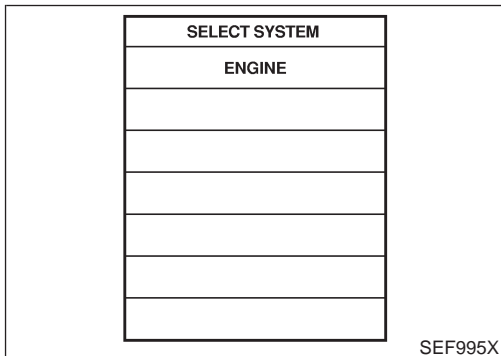

3. Turn ignition switch ON.
4. Touch "START".
5. Touch "ENGINE".
6. Perform each diagnostic test mode according to each service procedure.

For further information, see the CONSULT-II Operation Manual.

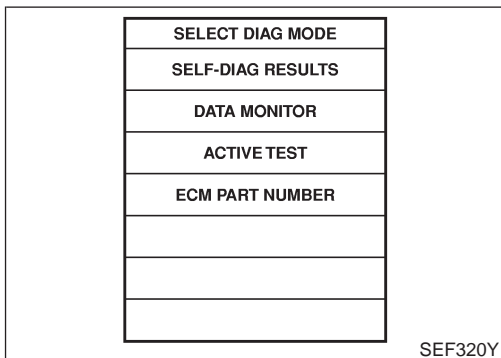

ENGINE CONTROL COMPONENT PARTS/CONTROL SYSTEMS APPLICATION

-NJEC0629S02

		Item	DIAGNOSTIC TEST MODE		
			SELF-DIAG RESULTS	DATA MONITOR	ACTIVE TEST
ENGINE CONTROL COMPONENT PARTS	INPUT	Engine coolant temperature sensor	X	X	
		Vehicle speed sensor	X	X	
		Accelerator position sensor	X	X	
		Accelerator position switch	X	X	
		Crankshaft position sensor (TDC)	X	X	
		Ignition switch (start signal)		X	
		Park/Neutral position (PNP) switch (where fitted)		X	
		Battery voltage	X	X	
		Mass air flow sensor	X	X	
		Stop lamp switch	X	X	
	OUTPUT	Glow relay		X	X
		EGR volume control valve		X	X
		Cooling fan relay	X	X	X

X: Applicable

SELF-DIAGNOSTIC MODE

Regarding items detected in "SELF-DIAG RESULTS" mode, refer to "TROUBLE DIAGNOSIS — INDEX", EC-492.

NJEC0629S03

DATA MONITOR MODE

NJEC0629S04

Monitored item [Unit]	ECM input signals	Main signals	Description	Remarks
CKPS-RPM (TDC) [rpm]	<input type="radio"/>	<input type="radio"/>	<ul style="list-style-type: none"> The engine speed computed from the crankshaft position sensor (TDC) signal is displayed. 	
CMPS-RPM-PUMP [rpm]	<input type="radio"/>	<input type="radio"/>	<ul style="list-style-type: none"> The engine speed computed from the pulse signal sent from electronic control fuel injection pump is displayed. 	
COOLAN TEMP/S [°C] or [°F]	<input type="radio"/>	<input type="radio"/>	<ul style="list-style-type: none"> The engine coolant temperature (determined by the signal voltage of the engine coolant temperature sensor) is displayed. 	<ul style="list-style-type: none"> When the engine coolant temperature sensor is open or short-circuited, ECM enters fail-safe mode. The engine coolant temperature determined by the ECM is displayed.
VHCL SPEED SE [km/h] or [mph]	<input type="radio"/>	<input type="radio"/>	<ul style="list-style-type: none"> The vehicle speed computed from the vehicle speed sensor signal is displayed. 	
FUEL TEMP SEN [°C] or [°F]	<input type="radio"/>	<input type="radio"/>	<ul style="list-style-type: none"> The fuel temperature (sent from electronic control fuel injection pump) is displayed. 	
ACCEL POS SEN [V]	<input type="radio"/>	<input type="radio"/>	<ul style="list-style-type: none"> The accelerator position sensor signal voltage is displayed. 	
OFF ACCEL SW [ON/OFF]	<input type="radio"/>	<input type="radio"/>	<ul style="list-style-type: none"> Indicates [ON/OFF] condition from the accelerator position switch signal. 	

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

YD

CONSULT-II (Cont'd)

Monitored item [Unit]	ECM input signals	Main signals	Description	Remarks
SPILL/V [°CA]		○	<ul style="list-style-type: none"> The control position of spill valve (sent from electronic control fuel injection pump) is displayed. 	
BATTERY VOLT [V]	○	○	<ul style="list-style-type: none"> The power supply voltage of ECM is displayed. 	
P/N POSI SW*1 [ON/OFF] (where fitted)	○	○	<ul style="list-style-type: none"> Indicates [ON/OFF] condition from the park/neutral position switch signal. 	
START SIGNAL [ON/OFF]	○	○	<ul style="list-style-type: none"> Indicates [ON/OFF] condition from the starter signal. 	<ul style="list-style-type: none"> After starting the engine, [OFF] is displayed regardless of the starter signal.
BRAKE SW [ON/OFF]	○	○	<ul style="list-style-type: none"> Indicates [ON/OFF] condition from the stop lamp switch signal. 	
BRAKE SW2 [ON/OFF]	○	○	<ul style="list-style-type: none"> Indicates [ON/OFF] condition from the brake pedal position switch signal. 	
IGN SW [ON/OFF]	○	○	<ul style="list-style-type: none"> Indicates [ON/OFF] condition from ignition switch signal. 	
MAS AIR/FL SE [V]	○	○	<ul style="list-style-type: none"> The signal voltage of the mass air flow sensor is displayed. 	<ul style="list-style-type: none"> When the engine is stopped, a certain value is indicated.
INT/A VOLUME [mg/]			<ul style="list-style-type: none"> The intake air volume computed from the mass air flow sensor signal is displayed. 	
F/CUT SIGNAL [ON/OFF]		○	<ul style="list-style-type: none"> The [ON/OFF] condition from deceleration fuel cut signal (sent from electronic control fuel injection pump) is displayed. OFF...Fuel is cut off. ON...Fuel is not cut off. 	
GLOW RLY [ON/OFF]		○	<ul style="list-style-type: none"> The glow relay control condition (determined by ECM according to the input signal) is displayed. 	
COOLING FAN [LOW/HI/OFF]		○	<ul style="list-style-type: none"> Indicates the control condition of the cooling fans (determined by ECM according to the input signal). LOW ... Operates at low speed. HI ... Operates at high speed. OFF ... Stopped. 	
BARO SEN [kPa]	○	○	<ul style="list-style-type: none"> The barometric pressure (determined by the signal voltage from the barometric pressure sensor built into the ECM) is displayed. 	
EGR VOL CON/V [step]		○	<ul style="list-style-type: none"> Indicates the EGR volume control value computed by the ECM according to the input signals. The opening becomes larger as the value increases. 	

*1: On models not equipped with park/neutral position (PNP) switch, "OFF" is always displayed regardless of gear shift position.



NOTE:

Any monitored item that does not match the vehicle being diagnosed is deleted from the display automatically.

ACTIVE TEST MODE

NJEC0629S05

TEST ITEM	CONDITION	JUDGEMENT	CHECK ITEM (REMEDY)
COOLING FAN	<ul style="list-style-type: none"> ● Ignition switch: ON ● Operate the cooling fan at "LOW", "HI" speed and turn "OFF" using CONSULT-II. 	Cooling fan moves at "LOW", "HI" speed and stops.	<ul style="list-style-type: none"> ● Harness and connector ● Cooling fan motor ● Cooling fan relay
EGR VOL CONT/V	<ul style="list-style-type: none"> ● Ignition switch: ON ● Change EGR volume control valve opening step using CONSULT-II. 	EGR volume control valve makes an operating sound.	<ul style="list-style-type: none"> ● Harness and connector ● EGR volume control valve
GLOW RLY	<ul style="list-style-type: none"> ● Ignition switch: ON (Engine stopped) ● Turn the glow relay "ON" and "OFF" using CONSULT-II and listen to operating sound. 	Glow relay makes the operating sound.	<ul style="list-style-type: none"> ● Harness and connector ● Glow relay

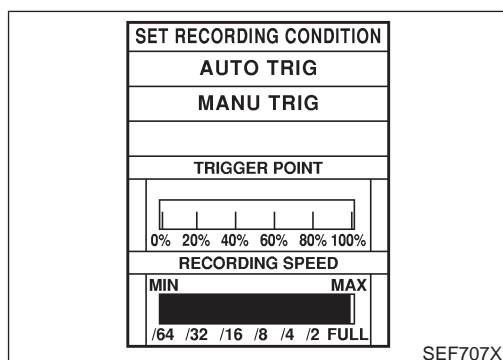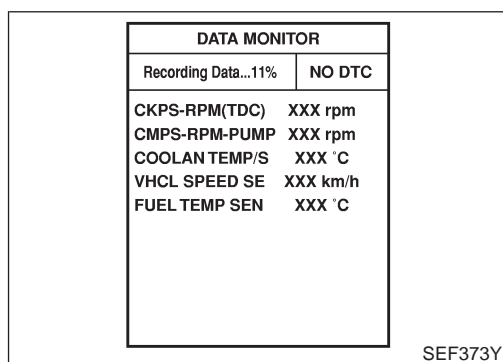

REAL TIME DIAGNOSIS IN DATA MONITOR MODE

NJEC0629S06

CONSULT-II has two kinds of triggers and they can be selected by touching "SETTING" in "DATA MONITOR" mode.

- 1) "AUTO TRIG" (Automatic trigger):
 - The malfunction will be identified on the CONSULT-II screen in real time.

In other words, DTC will be displayed if the malfunction is detected by ECM.

At the moment a malfunction is detected by ECM, "MONITOR" in "DATA MONITOR" screen is changed to "Recording Data ... xx%" as shown at left, and the data after the malfunction detection is recorded. Then when the percentage reached 100%, "REAL-TIME DIAG" screen is displayed. If "STOP" is touched on the screen during "Recording Data ... xx%", "REAL-TIME DIAG" screen is also displayed.

The recording time after the malfunction detection and the recording speed can be changed by "TRIGGER POINT" and "Recording Speed". Refer to CONSULT-II OPERATION MANUAL.
- 2) "MANU TRIG" (Manual trigger):
 - DTC will not be displayed automatically on CONSULT-II screen even though a malfunction is detected by ECM.

DATA MONITOR can be performed continuously even though a malfunction is detected.


Use these triggers as follows:




- 1) "AUTO TRIG"
 - While trying to detect the DTC by performing the "DTC Confirmation Procedure", be sure to select to "DATA MONITOR (AUTO TRIG)" mode. You can confirm the malfunction at the moment it is detected.
 - While narrowing down the possible causes, CONSULT-II should be set in "DATA MONITOR (AUTO TRIG)" mode, especially in case the incident is intermittent.

When you are inspecting the circuit by gently shaking (or twisting) the suspicious connectors, components and harness in

the "DTC Confirmation Procedure", the moment a malfunction is found the DTC will be displayed. Refer to GI-22, "Incident Simulation Tests".

- 2) "MANU TRIG"
 - If the malfunction is displayed as soon as "DATA MONITOR" is selected, reset CONSULT-II to "MANU TRIG". By selecting "MANU TRIG" you can monitor and store the data. The data can be utilized for further diagnosis, such as a comparison with the value for the normal operating condition.

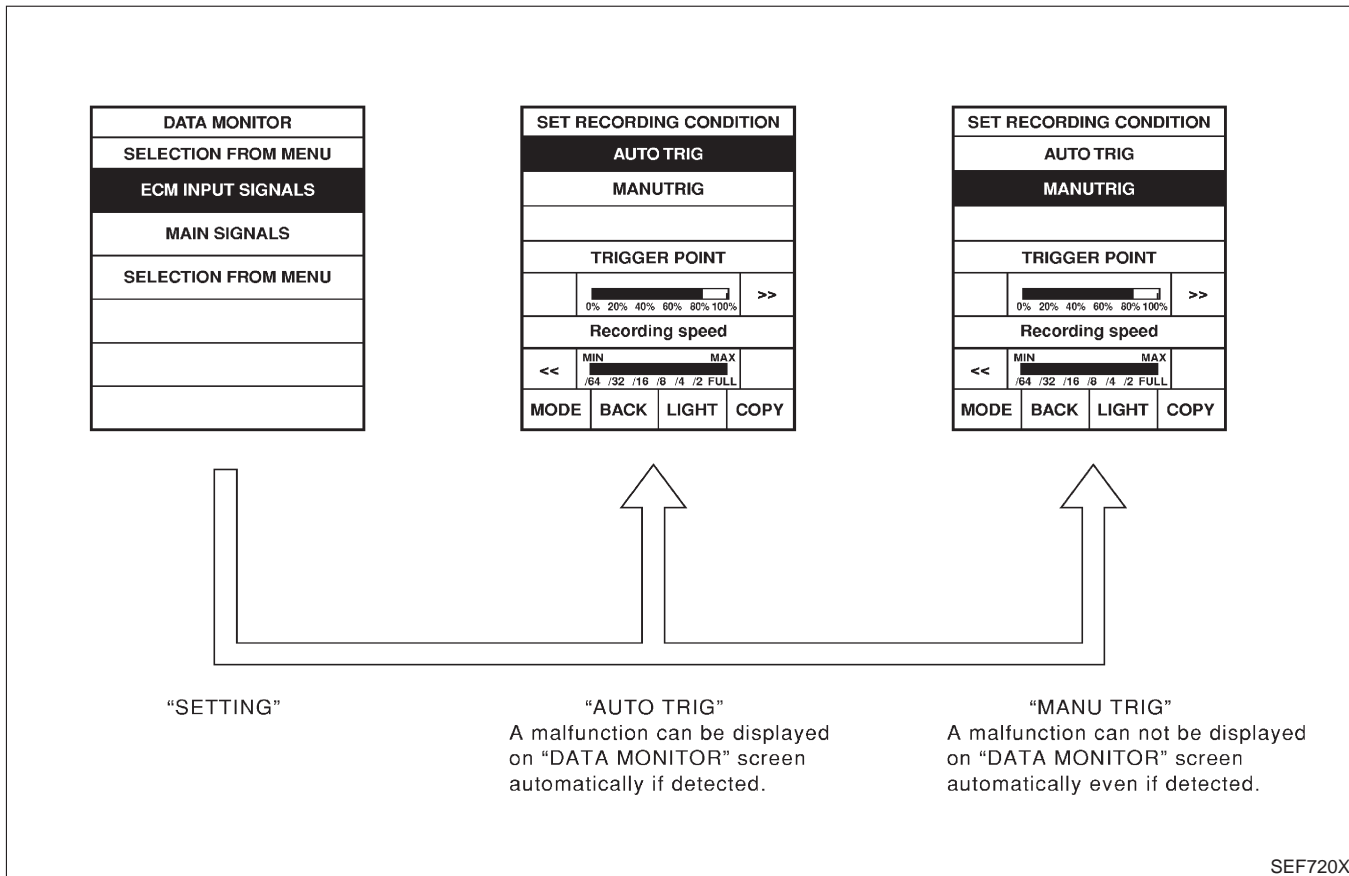

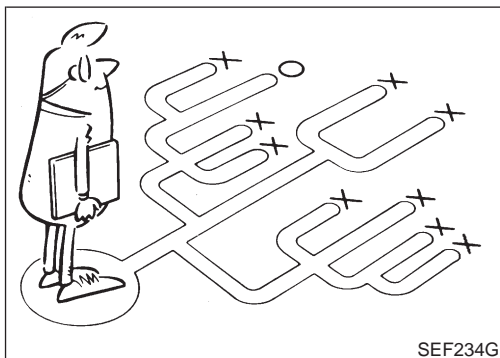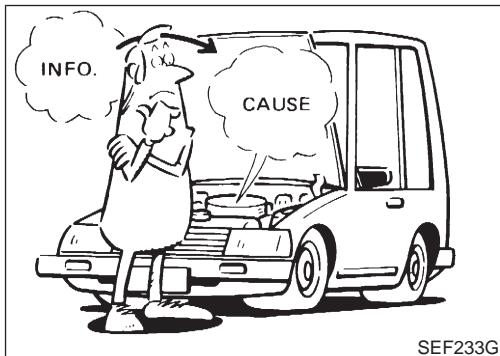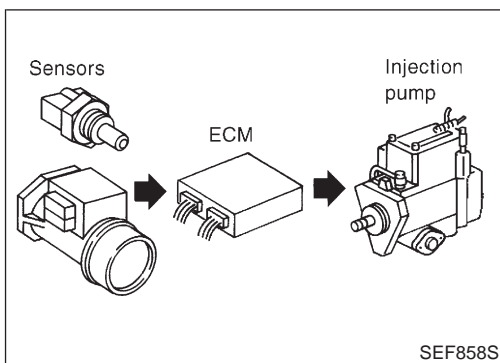

KEY POINTS

WHAT	Vehicle & engine model
WHEN	Date, Frequencies
WHERE	Road conditions
HOW	Operating conditions, Weather conditions, Symptoms

SEF907L

Introduction

NJEC0630

The engine has an ECM to control major systems such as fuel injection control, fuel injection timing control, glow control system, etc. The ECM accepts input signals from sensors and instantly drives electronic control fuel injection pump. It is essential that both input and output signals are proper and stable. At the same time, it is important that there are no problems such as vacuum leaks, or other problems with the engine.

It is much more difficult to diagnose a problem that occurs intermittently rather than continuously. Most intermittent problems are caused by poor electric connections or improper wiring. In this case, careful checking of suspected circuits may help prevent the replacement of good parts.

A visual check only may not find the cause of the problems. A road test with CONSULT-II or a circuit tester connected should be performed. Follow the "Work Flow", EC-534.

Before undertaking actual checks, take a few minutes to talk with a customer who approaches with a driveability complaint. The customer can supply good information about such problems, especially intermittent ones. Find out what symptoms are present and under what conditions they occur. A "Diagnostic Worksheet" like the example on next page should be used.

Start your diagnosis by looking for "conventional" problems first. This will help troubleshoot driveability problems on an electronically controlled engine vehicle.

DIAGNOSTIC WORKSHEET

NJEC0630S01


There are many operating conditions that lead to the malfunction of engine components. A good grasp of such conditions can make troubleshooting faster and more accurate.

In general, each customer feels differently about a problem. It is important to fully understand the symptoms or conditions for a customer complaint.

Utilize a diagnostic worksheet like the one shown below in order to organize all the information for troubleshooting.

Work Flow

NJEC0631

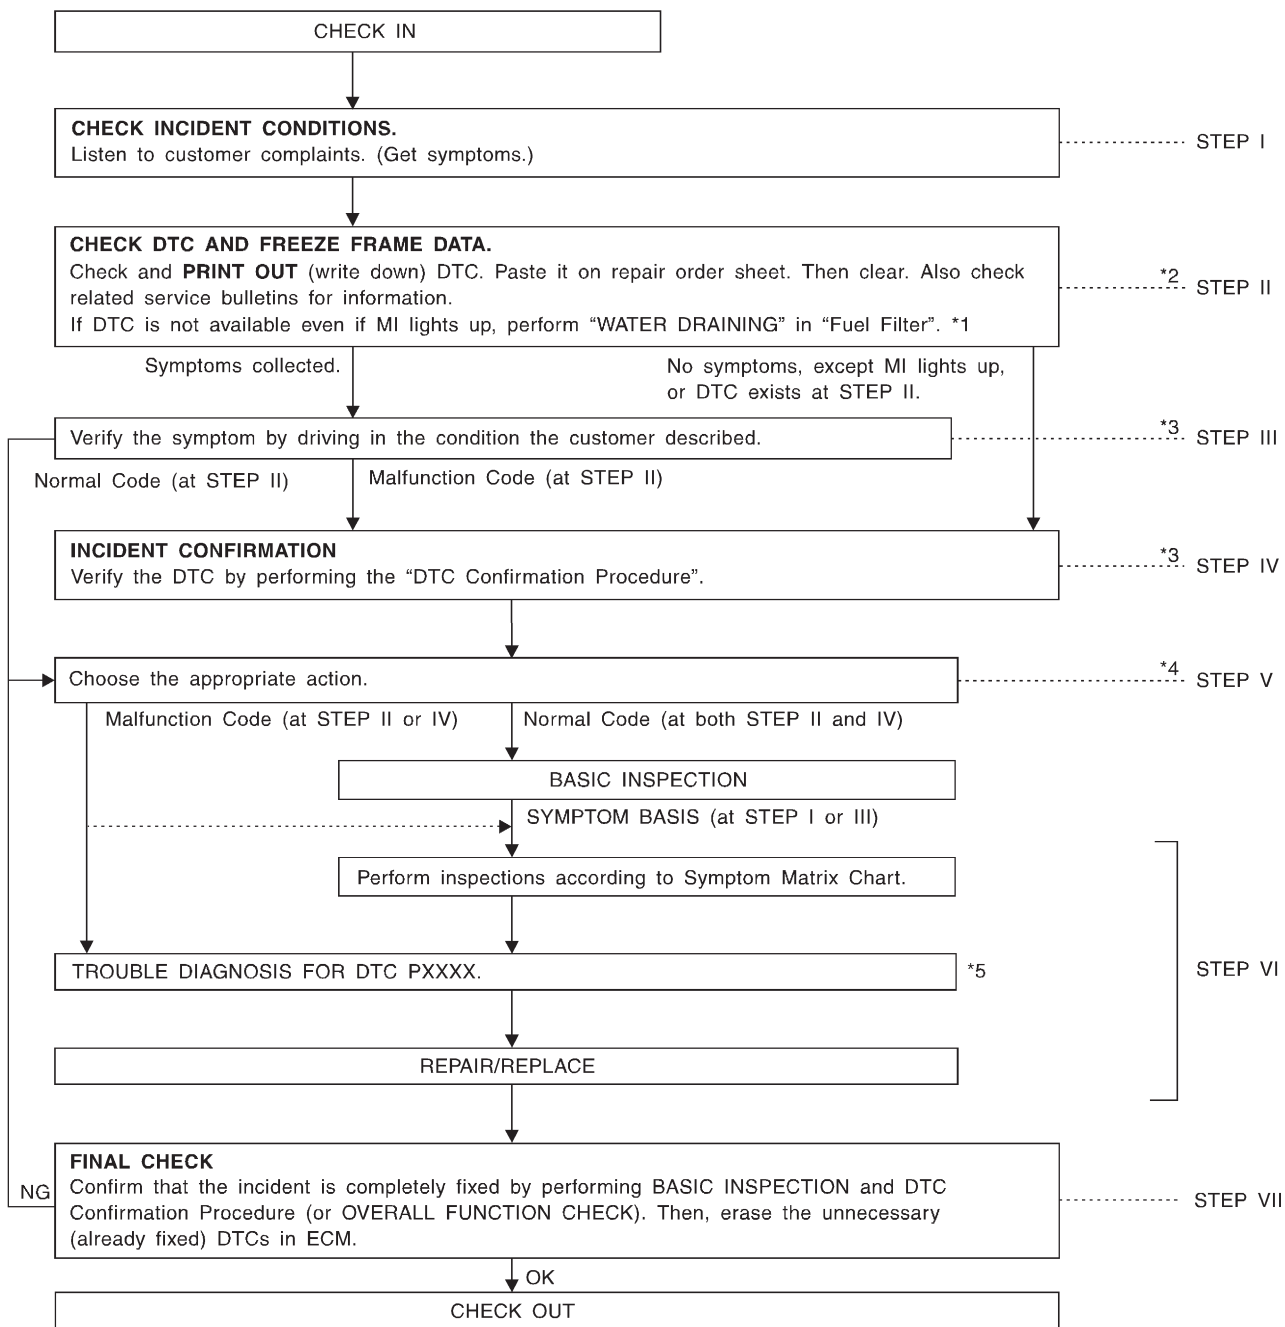

SEF880Y

*1 EC-520

*2 If time data of "SELF-DIAG RESULTS" is other than "0", perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-559.

*3 If the incident cannot be verified, perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-559.

*4 If the on board diagnostic system cannot be performed, check main power supply and ground circuit.

*5 Refer to "TROUBLE DIAGNOSIS FOR POWER SUPPLY", EC-560.
If malfunctioning part cannot be detected, perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-559.

TROUBLE DIAGNOSIS — INTRODUCTION

YD

Work Flow (Cont'd)

DESCRIPTION FOR WORK FLOW

NJEC0631S01

STEP	DESCRIPTION
STEP I	Get detailed information about the conditions and the environment when the incident/symptom occurred using the "DIAGNOSTIC WORKSHEET", EC-532.
STEP II	Before confirming the concern, check and write down (print out using CONSULT-II) the DTC, then erase the DTC. Refer to EC-522. If the incident cannot be verified, perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-559. Study the relationship between the cause, specified by DTC, and the symptom described by the customer. (The "Symptom Matrix Chart" will be useful. Refer to EC-541.) Also check related service bulletins for information.
STEP III	Try to confirm the symptom and under what conditions the incident occurs. The "DIAGNOSTIC WORK SHEET" is useful to verify the incident. Connect CONSULT-II to the vehicle in DATA MONITOR (AUTO TRIG) mode and check real time diagnosis results. If the incident cannot be verified, perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-559. If the malfunction code is detected, skip STEP IV and perform STEP V.
STEP IV	Try to detect the DTC by driving in (or performing) the "DTC Confirmation Procedure". Check and read the DTC by using CONSULT-II. During the DTC verification, be sure to connect CONSULT-II to the vehicle in DATA MONITOR (AUTO TRIG) mode and check real time diagnosis results. If the incident cannot be verified, perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-559. In case the "DTC Confirmation Procedure" is not available, perform the "Overall Function Check" instead. The DTC cannot be displayed by this check, however, this simplified "check" is an effective alternative. The "NG" result of the "Overall Function Check" is the same as the DTC detection.
STEP V	Take the appropriate action based on the results of STEP I through IV. If the malfunction code is indicated, proceed to TROUBLE DIAGNOSIS FOR DTC PXXXX. If the normal code is indicated, proceed to the Basic Inspection, EC-536. Then perform inspections according to the Symptom Matrix Chart. Refer to EC-541.
STEP VI	Identify where to begin diagnosis based on the relationship study between symptom and possible causes. Inspect the system for mechanical binding, loose connectors or wiring damage using (tracing) "Harness Layouts". Gently shake the related connectors, components or wiring harness with CONSULT-II set in "DATA MONITOR (AUTO TRIG)" mode. Check the voltage of the related ECM terminals or monitor the output data from the related sensors with CONSULT-II. Refer to EC-554 or EC-551. The "Diagnostic Procedure" in EC section contains a description based on open circuit inspection. A short circuit inspection is also required for the circuit check in the Diagnostic Procedure. For details, refer to GI-24, "Circuit Inspection". Repair or replace the malfunctioning parts. If the malfunctioning part cannot be detected, perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-559.
STEP VII	Once you have repaired the circuit or replaced a component, you need to run the engine in the same conditions and circumstances which resulted in the customer's initial complaint. Perform the "DTC Confirmation Procedure" and confirm the normal code (DTC P0000 or 0505) is detected. If the incident is still detected in the final check, perform STEP VI by using a different method from the previous one. Before returning the vehicle to the customer, be sure to erase the unnecessary (already fixed) DTC in ECM. (Refer to EC-522.)


Basic Inspection

NJEC0632



Precaution:

Perform Basic Inspection without electrical or mechanical loads applied;

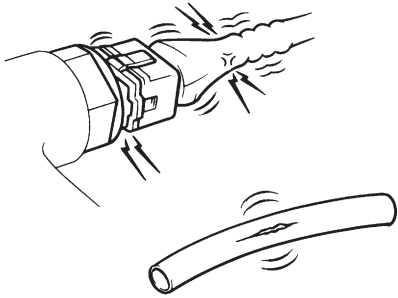- Headlamp switch is OFF,
- On vehicles equipped with daytime light systems, set lighting switch to the 1st position to light only small lamps.
- Air conditioner switch is OFF,
- Rear defogger switch is OFF,
- Steering wheel is in the straight-ahead position, etc.

1	INSPECTION START
<p>1. Check service records for any recent repairs that may indicate a related problem.</p> <p>2. Check the current need for scheduled maintenance, especially for fuel filter and air cleaner filter. Refer to MA-4, "Periodic Maintenance".</p> <p>3. Open engine hood and check the following:</p> <ul style="list-style-type: none"> ● Harness connectors for improper connections ● Vacuum hoses for splits, kinks, or improper connections ● Wiring for improper connections, pinches, or cuts 	
	
<p>4. Start engine and warm it up to the normal operating temperature.</p>	
<small>SEF1421</small>	
▶ GO TO 2.	

2	PREPARATION FOR CHECKING IDLE SPEED
<p><input checked="" type="checkbox"/> With CONSULT-II Connect CONSULT-II to the data link connector.</p>	
<p><input type="checkbox"/> Without CONSULT-II Install diesel tacho tester to the vehicle.</p>	
▶ GO TO 3.	

3	CHECK IDLE SPEED							
<p> With CONSULT-II</p> <p>1. Select "CKPS-RPM (TDC)" in "DATA MONITOR" mode with CONSULT-II. 2. Read idle speed.</p>								
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr> <th colspan="2">DATA MONITOR</th> </tr> <tr> <th style="width: 50%;">MONITOR</th> <th style="width: 50%;">NO DTC</th> </tr> <tr> <td colspan="2">CKPS-RPM (TDC) XXX rpm</td> </tr> </table>			DATA MONITOR		MONITOR	NO DTC	CKPS-RPM (TDC) XXX rpm	
DATA MONITOR								
MONITOR	NO DTC							
CKPS-RPM (TDC) XXX rpm								
SEF817Y								
<p> Without CONSULT-II</p> <p>Check idle speed. 725±25 rpm</p> <p style="text-align: center;">OK or NG</p>								
OK	▶	INSPECTION END						
NG	▶	GO TO 4.						

4	CHECK FOR INTAKE AIR LEAK	
<p>Listen for an intake air leak after the mass air flow sensor.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 5.
NG	▶	Repair or replace.

5	BLEED AIR FROM FUEL SYSTEM	
<p>1. Stop engine. 2. Use priming pump to bleed air from fuel system. Refer to "AIR BLEEDING", EC-520.</p>		
		▶ GO TO 6.

Basic Inspection (Cont'd)

6	CHECK IDLE SPEED AGAIN							
<p> With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and let it idle. 2. Select "CKPS-RPM (TDC)" in "DATA MONITOR" mode with CONSULT-II. 3. Read idle speed. 								
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr> <th colspan="2" style="padding: 2px;">DATA MONITOR</th> </tr> <tr> <th style="padding: 2px;">MONITOR</th> <th style="padding: 2px;">NO DTC</th> </tr> <tr> <td style="padding: 2px;">CKPS-RPM (TDC)</td> <td style="padding: 2px;">XXX rpm</td> </tr> </table>			DATA MONITOR		MONITOR	NO DTC	CKPS-RPM (TDC)	XXX rpm
DATA MONITOR								
MONITOR	NO DTC							
CKPS-RPM (TDC)	XXX rpm							
SEF817Y								
<p> Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and let it idle. 2. Check idle speed. 725±25 rpm <p style="text-align: center; margin-top: 10px;">OK or NG</p>								
OK	▶	INSPECTION END						
NG	▶	GO TO 7.						

7	DRIN WATER FROM FUEL FILTER	
Drain water from fuel filter. Refer to "WATER DRAINING", EC-520.		
		▶ GO TO 8.

8	CHECK IDLE SPEED AGAIN							
<p> With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and let it idle. 2. Select "CKPS-RPM (TDC)" in "DATA MONITOR" mode with CONSULT-II. 3. Read idle speed. 								
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr> <th colspan="2" style="padding: 2px;">DATA MONITOR</th> </tr> <tr> <th style="padding: 2px;">MONITOR</th> <th style="padding: 2px;">NO DTC</th> </tr> <tr> <td style="padding: 2px;">CKPS-RPM (TDC)</td> <td style="padding: 2px;">XXX rpm</td> </tr> </table>			DATA MONITOR		MONITOR	NO DTC	CKPS-RPM (TDC)	XXX rpm
DATA MONITOR								
MONITOR	NO DTC							
CKPS-RPM (TDC)	XXX rpm							
SEF817Y								
<p> Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and let it idle. 2. Check idle speed. 725±25 rpm <p style="text-align: center; margin-top: 10px;">OK or NG</p>								
OK	▶	INSPECTION END						
NG	▶	GO TO 9.						

TROUBLE DIAGNOSIS — BASIC INSPECTION

YD

Basic Inspection (Cont'd)

9	CHECK AIR CLEANER FILTER	
Check air cleaner filter for clogging or braks.		
OK or NG		
OK	▶	GO TO 10.
NG	▶	Replace air cleaner filter.

10	CHECK FUEL INJECTION NOZZLE	
Check fuel injection nozzle opening pressure. Refer to "Injection Pressure Test", EC-512.		
OK or NG		
OK	▶	GO TO 11.
NG	▶	Replace fuel injection nozzle assembly.

11	CHECK IDLE SPEED AGAIN							
<p>Ⓜ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and let it idle. 2. Select "CKPS-RPM (TDC)" in "DATA MONITOR" mode with CONSULT-II. 3. Read idle speed. 								
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr> <th colspan="2" style="padding: 2px;">DATA MONITOR</th> </tr> <tr> <th style="padding: 2px;">MONITOR</th> <th style="padding: 2px;">NO DTC</th> </tr> <tr> <td style="padding: 2px;">CKPS-RPM (TDC)</td> <td style="padding: 2px;">XXX rpm</td> </tr> </table>			DATA MONITOR		MONITOR	NO DTC	CKPS-RPM (TDC)	XXX rpm
DATA MONITOR								
MONITOR	NO DTC							
CKPS-RPM (TDC)	XXX rpm							
SEF817Y								
<p>ⓧ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and let it idle. 2. Check idle speed. 725±25 rpm 								
OK or NG								
OK	▶	INSPECTION END						
NG	▶	GO TO 12.						

12	CHECK COMPRESSION PRESSURE	
Check compression pressure. Refer to EM-82, "MEASUREMENT OF COMPRESSION PRESSURE".		
OK or NG		
OK	▶	GO TO 13.
NG	▶	Follow the instruction of "MEASUREMENT OF COMPRESSION PRESSURE".

Basic Inspection (Cont'd)

13	CHECK IDLE SPEED AGAIN						
<p> P With CONSULT-II 1. Start engine and let it idle. 2. Select "CKPS-RPM (TDC)" in "DATA MONITOR" mode with CONSULT-II. 3. Read idle speed. </p> <div style="text-align: center; margin: 10px 0;"> <table border="1" style="border-collapse: collapse; width: 150px;"> <tr> <th colspan="2" style="padding: 2px;">DATA MONITOR</th> </tr> <tr> <th style="padding: 2px;">MONITOR</th> <th style="padding: 2px;">NO DTC</th> </tr> <tr> <td style="padding: 2px;">CKPS-RPM (TDC)</td> <td style="padding: 2px;">XXX rpm</td> </tr> </table> </div> <p style="text-align: right; margin-top: 10px;">SEF817Y</p>		DATA MONITOR		MONITOR	NO DTC	CKPS-RPM (TDC)	XXX rpm
DATA MONITOR							
MONITOR	NO DTC						
CKPS-RPM (TDC)	XXX rpm						
<p> X Without CONSULT-II 1. Start engine and let it idle. 2. Check idle speed. 725±25 rpm </p> <p style="text-align: center; margin-top: 10px;">OK or NG</p>							
OK	▶ INSPECTION END						
NG	▶ Replace electronic control fuel injection pump.						

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

YD

Symptom Matrix Chart

Symptom Matrix Chart

NJEC1257

SYSTEM — Basic engine control system	SYMPTOM													Reference page	Feature of symptom, Check point
	HARD/NO START/RESTART (EXCP: HA)				ENGINE STALL			HESITATION/SURGING/FLAT SPOT	KNOCK/DETONATION	LACK OF POWER	POOR ACCELERATION	HI IDLE	LOW IDLE		
	NO START (with first firing)	NO START (without first firing)	HARD TO START WHEN ENGINE IS COLD	HARD TO START WHEN ENGINE IS HOT	AT IDLE	DURING DRIVING	WHEN DECELERATING								
Warranty symptom code	AA				AB			AC	AD	AE		AF			
Electronic control fuel injection pump mainframe	4	4	4	4	4	4	4	4	4	5	5	4	4	—	*1
Injection nozzle	3	3	3	3	3	3	3	3	3	4	4	3	3	EC-509	*2
Glow system	1	1	1	1					1					EC-677	
Engine body	3	3	3	3	3	3	3		3	4	4		3	EM section	*3
EGR system										3	3			EC-686	
Air cleaner and ducts										3	3			MA section	*4

1 - 5: The numbers refer to the order of inspection.

(continued on next page)

*1: Fuel injection system malfunction or fuel injection timing control system malfunction may be the cause.

*2: Depends on open-valve pressure and spray pattern.

*3: Caused mainly by insufficient compression pressure.

*4: Symptom varies depending on off-position of air duct, etc.

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

YD

Symptom Matrix Chart (Cont'd)

	SYMPTOM												
	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEAT/HIGH ENGINE COOLANT TEMPERATURE	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	ABNORMAL SMOKE COLOR		DEAD BATTERY (UNDER CHARGE)	Malfunction indicator illuminates.	Can be detected by CONSULT-II?		
Warranty symptom code	AG	AH	AJ	AK	AL	AM	AP		HA				
Electronic control fuel injection pump mainframe	4	4	3		4		5	4		3	3	—	*1
Injection nozzle	3	3			3		4	3				EC-509	*2
Glow system								1		1		EC-677	
Engine body	3	3		3	3	3		3				EM section	*3
EGR system							3					EC-686	
Air cleaner and ducts							3				3	MA section	*4

1 - 5: The numbers refer to the order of inspection.
(continued on next page)

*1: Fuel injection system malfunction or fuel injection timing control system malfunction may be the cause.

*2: Depends on open-valve pressure and spray pattern.

*3: Caused mainly by insufficient compression pressure.

*4: Symptom varies depending on off-position of air duct, etc.

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

YD

Symptom Matrix Chart (Cont'd)

SYSTEM — ENGINE CONTROL system		Malfunction	SYMPTOM												Reference page	Feature of symptom, Check point				
			HARD/NO START/RESTART (EXCP. HA)				ENGINE STALL													
Warranty symptom code			AA				AB			AC	AD	AE		AF						
ENGINE CONTROL	Electronic control fuel injection pump circuit	*a, *b	1		1			1	1	1	1	1	1	1	1	1	—			
		*c, *d																		
	Mass air flow sensor circuit	*a, *c											1	1				EC-566		
		*b								1										
	Engine coolant temperature sensor circuit	*a, *b			1		1		1								1	EC-572	*1	
	*a, *b												1				EC-593			

1 - 5: The numbers refer to the order of inspection.

(continued on next page)

*a: Open

*b: Short

*c: Ground short

*d: Noise

*1: Compensation according to engine coolant temperature does not function.

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

YD

Symptom Matrix Chart (Cont'd)

SYSTEM — ENGINE CONTROL system		Malfunction	SYMPTOM										Reference page	Feature of symptom, Check point		
			ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEAT/HIGH ENGINE COOLANT TEMPERATURE	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	ABNORMAL SMOKE COLOR		DEAD BATTERY (UNDER CHARGE)	Malfunction indicator illuminates.			Can be detected by CONSULT-II?	
Warranty symptom code			AG	AH	AJ	AK	AL	AM	AP	HA						
ENGINE CONTROL	Electronic control fuel injection pump circuit	*a, *b	1				1			1		1	1	—		
		*c, *d							1			1	1			
	Mass air flow sensor circuit	*a, *c											1	EC-566		
		*b								1						
	Engine coolant temperature sensor circuit	*a, *b	1	1		1					1	1	EC-572	*1		
	Vehicle speed sensor circuit	*a, *b										1	EC-593			

1 - 5: The numbers refer to the order of inspection.
(continued on next page)

*a: Open

*b: Short

*c: Ground short

*d: Noise

*1: Compensation according to engine coolant temperature does not function.

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

YD

Symptom Matrix Chart (Cont'd)

SYSTEM — ENGINE CONTROL system		Malfunction	SYMPTOM												Reference page	Feature of symptom, Check point	
			HARD/NO START/RESTART (EXCP. HA)				ENGINE STALL										
Warranty symptom code			AA				AB			AC	AD	AE		AF			
ENGINE CONTROL	Fuel cut system line	*a, *c														EC-612	*2
		*b	1				1	1	1								
	Accelerator position sensor circuit	*a, *b								1		1	1			EC-577	
		*a, *b			1	1	1	1	1	1	1	1	1			EC-587	
	*d																

1 - 5: The numbers refer to the order of inspection.
(continued on next page)

*a: Open

*b: Short

*c: Ground short

*d: Noise

*2: Engine runs on after turning ignition switch OFF.

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

YD

Symptom Matrix Chart (Cont'd)

SYSTEM — ENGINE CONTROL system		Malfunction	SYMPTOM										Reference page	Feature of symptom, Check point	
			ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEAT/HIGH ENGINE COOLANT TEMPERATURE	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BLACK SMOKE	WHITE SMOKE	ABNORMAL SMOKE COLOR	DEAD BATTERY (UNDER CHARGE)			Malfunction indicator illuminates.
Warranty symptom code			AG	AH	AJ	AK	AL	AM	AP	HA					
ENGINE CONTROL	Fuel cut system line	*a, *c										1	1	EC-612	*2
		*b													
	Accelerator position sensor circuit	*a, *b										1	1	EC-577	
	Crankshaft position sensor (TDC) circuit	*a, *b	1	1								1	1	EC-587	
		*d													

1 - 5: The numbers refer to the order of inspection.

(continued on next page)

*a: Open

*b: Short

*c: Ground short

*d: Noise

*2: Engine runs on after turning ignition switch OFF.

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

YD

Symptom Matrix Chart (Cont'd)

		Malfunction	SYMPTOM												Reference page	Feature of symptom, Check point
			HARD/NO START/RESTART (EXCP. HA)				ENGINE STALL			HESITATION/SURGING/FLAT SPOT	KNOCK/DETONATION	LACK OF POWER	POOR ACCELERATION	HI IDLE		
SYSTEM — ENGINE CONTROL system		NO START (with first firing)	NO START (without first firing)	HARD TO START WHEN ENGINE IS COLD	HARD TO START WHEN ENGINE IS HOT	AT IDLE	DURING DRIVING	WHEN DECELERATING	AC						AD	AE
ENGINE CONTROL	Start signal circuit	*a, *b	1	1	1	1								EC-693	*3	
	Accelerator position switch (Idle) circuit	*a, *c			1	1	1	1					1		EC-577	*4
		*b								1	1	1				
	Ignition switch circuit	*a		1			1	1	1						EC-560	*5
		*b														
	Power supply for ECM circuit	*a		1			1	1	1						EC-560	
		*b														

1 - 5: The numbers refer to the order of inspection.
(continued on next page)

*a: Open

*b: Short

*c: Ground short

*d: Noise

*3: Start control does not function.

*4: Accelerator position sensor NG signal is output.

*5: Engine does not stop.

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

YD

Symptom Matrix Chart (Cont'd)

SYSTEM — ENGINE CONTROL system		Malfunction	SYMPTOM										Reference page	Feature of symptom, Check point	
			ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEAT/HIGH ENGINE COOLANT TEMPERATURE	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BLACK SMOKE	WHITE SMOKE	ABNORMAL SMOKE COLOR	DEAD BATTERY (UNDER CHARGE)			Malfunction indicator illuminates.
Warranty symptom code			AG	AH	AJ	AK	AL	AM	AP	HA					
ENGINE CONTROL	Start signal circuit	*a, *b												EC-693	*3
	Accelerator position switch (Idle) circuit	*a, *c												EC-577	
		*b										1	1		*4
	Ignition switch circuit	*a												EC-560	
		*b													*5
	Power supply for ECM circuit	*a												EC-560	
*b											1	1			

1 - 5: The numbers refer to the order of inspection.
(continued on next page)

*a: Open

*b: Short

*c: Ground short

*d: Noise

*3: Start control does not function.

*4: Accelerator position sensor NG signal is output.

*5: Engine does not stop.

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

YD

Symptom Matrix Chart (Cont'd)

SYSTEM — ENGINE CONTROL system		Malfunction	SYMPTOM												Reference page	Feature of symptom, Check point		
			HARD/NO START/RESTART (EXCP. HA)				ENGINE STALL			HESITATION/SURGING/FLAT SPOT	KNOCK/DETONATION	LACK OF POWER	POOR ACCELERATION	HI IDLE			LOW IDLE	
			NO START (with first firing)	NO START (without first firing)	HARD TO START WHEN ENGINE IS COLD	HARD TO START WHEN ENGINE IS HOT	AT IDLE	DURING DRIVING	WHEN DECELERATING									
Warranty symptom code		AA				AB			AC	AD	AE		AF					
ENGINE CONTROL	EGR volume control valve circuit	*a, *b															EC-686	
		*c								1		1	1					*6
	Glow relay circuit	*a	1	1	1	1											EC-677	*7
		*b																*8
	ECM relay (Self-shutoff) circuit	*a		1			1	1	1								EC-666	
		*b																*9
	ECM, Connector circuit	*a, *b	2	2	2	2	2	2	2	2	2	2	2	2	2	EC-664, 604		
	Air conditioner relay circuit	*a															EC-700	*10
		*b										1						*11
	Air conditioner switch circuit	*a, *c															EC-700	*11
		*b																*12

1 - 5: The numbers refer to the order of inspection.
(continued on next page)

*a: Open

*b: Short

*c: Ground short

*d: Noise

*6: Does not stop operating.

*7: Glow lamp does not turn on.

*8: Glow lamp does not turn off.

*9: Ground short makes engine unable to stop.

*10: Air conditioner does not operate.

*11: Air conditioner does not stop operating.

*12: Air conditioner does not work.

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

YD

Symptom Matrix Chart (Cont'd)

SYSTEM — ENGINE CONTROL system		Malfunction	SYMPTOM										Reference page	Feature of symptom, Check point		
			ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEAT/HIGH ENGINE COOLANT TEMPERATURE	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BLACK SMOKE	WHITE SMOKE	ABNORMAL SMOKE COLOR	DEAD BATTERY (UNDER CHARGE)			Malfunction indicator illuminates.	Can be detected by CONSULT-II?
Warranty symptom code			AG	AH	AJ	AK	AL	AM	AP	HA						
ENGINE CONTROL	EGR volume control valve circuit	*a, *b													EC-686	
		*c							1							*6
	Glow relay circuit	*a									1				EC-677	*7
		*b														*8
	ECM relay (Self-shutoff) circuit	*a													EC-666	
		*b														*9
	ECM, Connector circuit	*a, *b	2	2	2	2	2	2	2	2	2	2	2	EC-664, 604		
	Air conditioner relay circuit	*a													EC-700	*10
		*b														*11
	Air conditioner switch circuit	*a, *c													EC-700	*11
		*b														*12

1 - 5: The numbers refer to the order of inspection.

*a: Open

*b: Short

*c: Ground short

*d: Noise

*6: Does not stop operating.

*7: Glow lamp does not turn on.

*8: Glow lamp does not turn off.

*9: Ground short makes engine unable to stop.

*10: Air conditioner does not operate.

*11: Air conditioner does not stop operating.

*12: Air conditioner does not work.

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

YD

CONSULT-II Reference Value in Data Monitor Mode

CONSULT-II Reference Value in Data Monitor Mode

NJE0634

Remarks:

- Specification data are reference values.
- Specification data are output/input values which are detected or supplied by the ECM at the connector.

* Specification data may not be directly related to their components signals/values/operations.

MONITOR ITEM	CONDITION	SPECIFICATION	
CKPS-RPM (TDC)	<ul style="list-style-type: none"> ● Tachometer: Connect ● Run engine and compare tachometer indication with the CONSULT-II value. 	Almost the same speed as the CONSULT-II value.	
CMPS-RPM-PUMP			
COOLAN TEMP/S	<ul style="list-style-type: none"> ● Engine: After warming up 	More than 70°C (158°F)	
VHCL SPEED SE	<ul style="list-style-type: none"> ● Turn drive wheels and compare speedometer indication with the CONSULT-II value 	Almost the same speed as the CONSULT-II value	
FUEL TEMP SEN	<ul style="list-style-type: none"> ● Engine: After warming up 	More than 40°C (104°F)	
ACCEL POS SEN	<ul style="list-style-type: none"> ● Ignition switch: ON (Engine stopped) 	Accelerator pedal: fully released	0.30 - 0.50V
		Accelerator pedal: fully depressed	3.0 - 4.3V
OFF ACCEL SW	<ul style="list-style-type: none"> ● Ignition switch: ON (Engine stopped) 	Accelerator pedal: fully released	ON
		Accelerator pedal: slightly open	OFF
SPILL/V	<ul style="list-style-type: none"> ● Engine: After warming up, idle the engine. 	Approx. 12 - 13°C	
BATTERY VOLT	<ul style="list-style-type: none"> ● Ignition switch: ON (Engine stopped) 	11 - 14V	
P/N POSI SW*1 (where fitted)	<ul style="list-style-type: none"> ● Ignition switch: ON 	Shift lever: Neutral position	ON
		Except above	OFF
START SIGNAL	<ul style="list-style-type: none"> ● Ignition switch: ON → START → ON 	OFF → ON → OFF	
IGN SW	<ul style="list-style-type: none"> ● Ignition switch: ON → OFF 	ON → OFF	
BRAKE SW	<ul style="list-style-type: none"> ● Ignition switch: ON 	Brake pedal: depressed	ON
		Brake pedal: released	OFF
BRAKE SW2	<ul style="list-style-type: none"> ● Ignition switch: ON 	Brake pedal: depressed	ON
		Brake pedal: released	OFF
MAS AIR/FL SE	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: OFF ● Shift lever: Neutral position ● No-load 	Idle	1.5 - 2.0V
INT/A VOLUME	<ul style="list-style-type: none"> ● Engine: After warming up, idle the engine. 		150 - 450 mg/st
F/CUT SIGNAL	<ul style="list-style-type: none"> ● Engine: After warming up 	Idle	ON
GLOW RLY	<ul style="list-style-type: none"> ● Refer to EC-677. 		
COOLING FAN	<ul style="list-style-type: none"> ● When cooling fan is stopped. 		OFF
	<ul style="list-style-type: none"> ● When cooling fans operate at low speed. 		LOW
	<ul style="list-style-type: none"> ● When cooling fans operate at high speed. 		HIGH

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

YD

CONSULT-II Reference Value in Data Monitor Mode (Cont'd)

MONITOR ITEM	CONDITION	SPECIFICATION				
BARO SEN	<ul style="list-style-type: none"> ● Ignition switch: ON 	Altitude Approx. 0 m (0 ft): Approx. 100.62 kPa (1.0062 bar, 1.026 kg/cm ² , 14.59 psi) Approx. 1,000 m (3,281 ft): Approx. 88.95 kPa (0.8895 bar, 0.907 kg/cm ² , 12.90 psi) Approx. 1,500 m (4,922 ft): Approx. 83.16 kPa (0.8316 bar, 0.848 kg/cm ² , 12.06 psi) Approx. 2,000 m (6,562 ft): Approx. 78.36 kPa (0.7836 bar, 0.799 kg/cm ² , 11.36 psi)				
EGR VOL CON/V	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: Neutral position ● No-load 	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%; text-align: center;">After one minute at idle</td> <td style="width: 50%; text-align: center;">More than 10 steps</td> </tr> <tr> <td style="text-align: center;">Revvng engine from idle to 3,200 rpm</td> <td style="text-align: center;">0 steps</td> </tr> </table>	After one minute at idle	More than 10 steps	Revvng engine from idle to 3,200 rpm	0 steps
After one minute at idle	More than 10 steps					
Revvng engine from idle to 3,200 rpm	0 steps					

*1: On models not equipped with park/neutral position (PNP) switch, "OFF" is always displayed regardless of gear shift position.

Major Sensor Reference Graph in Data Monitor Mode


=NJEC0635


The following are the major sensor reference graphs in "DATA MONITOR" mode.

ACCEL POS SEN, "CKPS-RPM (TDC)", "MAS AIR/FL SE"


NJEC0635S01

Below is the data for "ACCEL POS SEN", "CKPS-RPM (TDC)" and "MAS AIR/FL SE" when revving engine quickly up to 3,000 rpm under no load after warming up engine to the normal operating temperature. Each value is for reference, the exact value may vary.

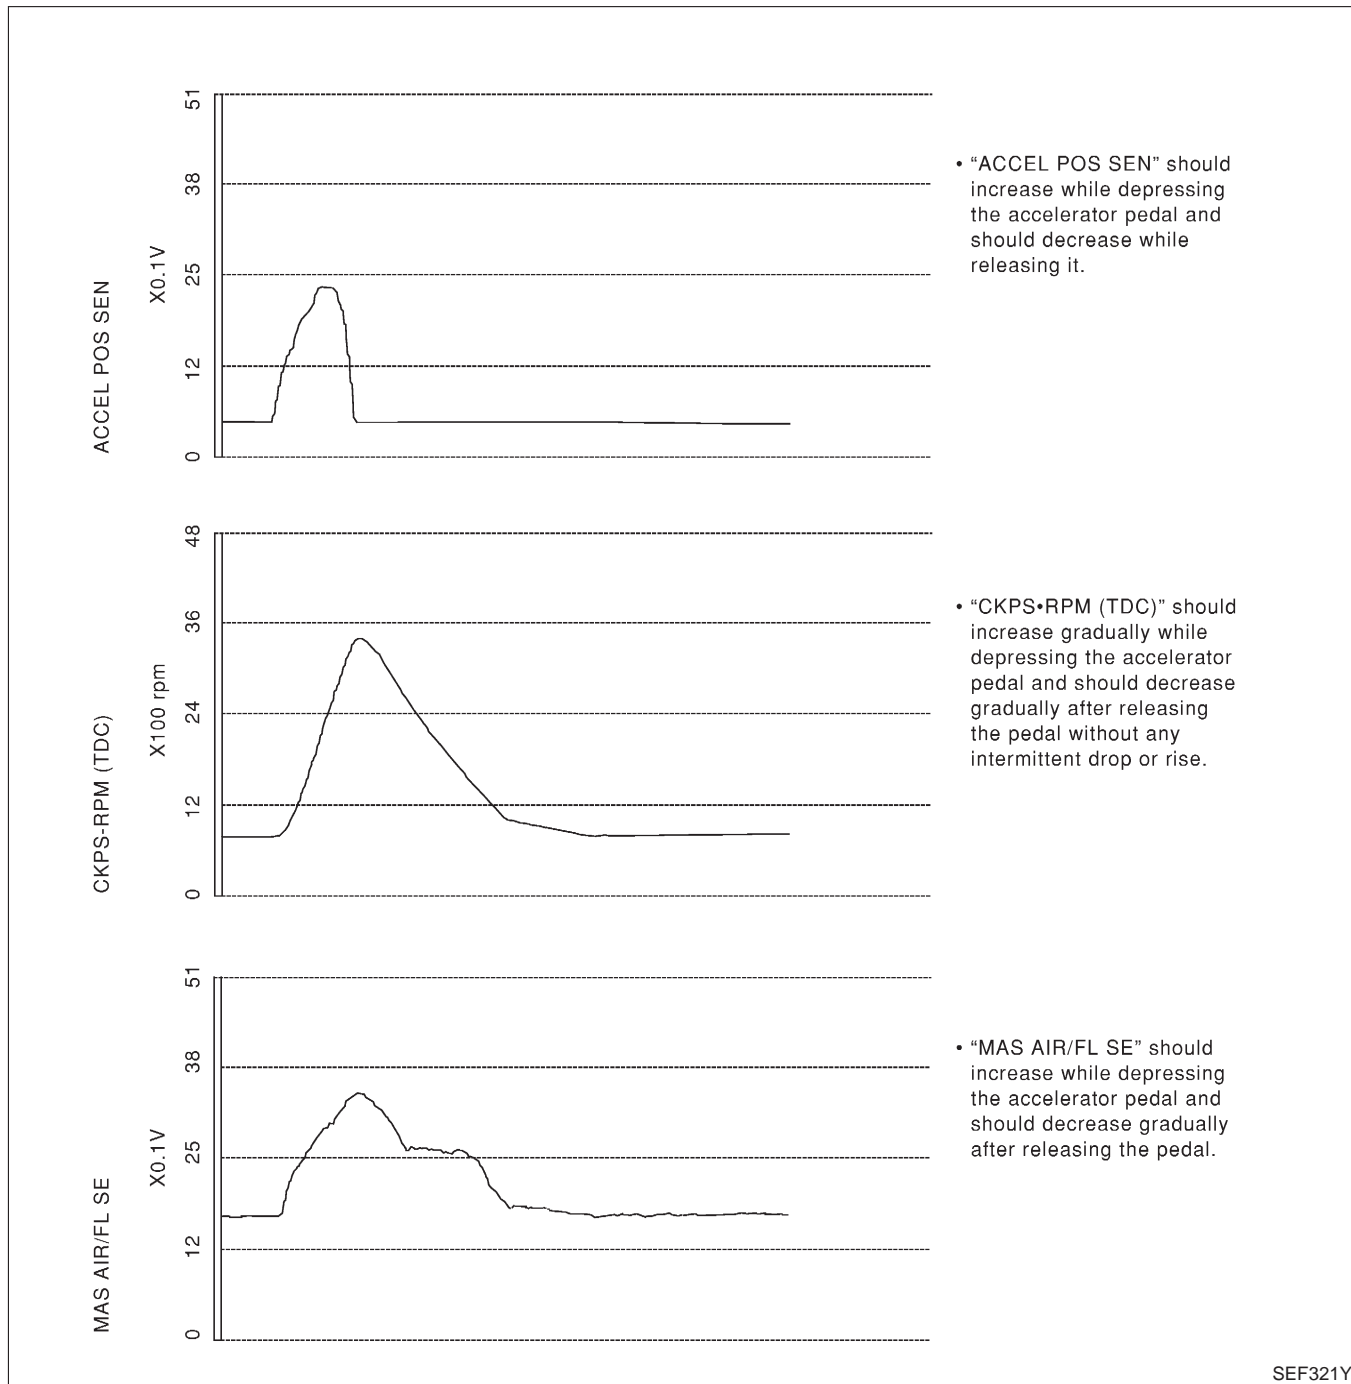

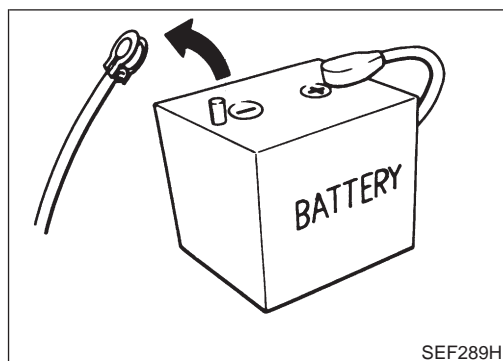

SEF289H

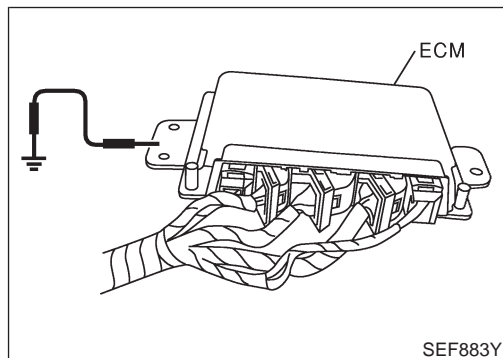

SEF883Y

ECM Terminals and Reference Value

PREPARATION

ECM is locating beside of blower unit.


1. Remove the ECM bracket fixing.
 2. Remove ECM harness protector.
 3. Disconnect negative battery terminal.
4. Connect a break out box (SST) between the ECM and ECM harness connectors.
 - Use extreme care not to touch 2 pins at one time.
 - Data is for comparison and may not be exact.
 - Be sure ECM unit is properly grounded before checking.

NJEC0636

NJEC0636S01

ECM HARNESS CONNECTOR TERMINAL LAYOUT

NJEC0636S02

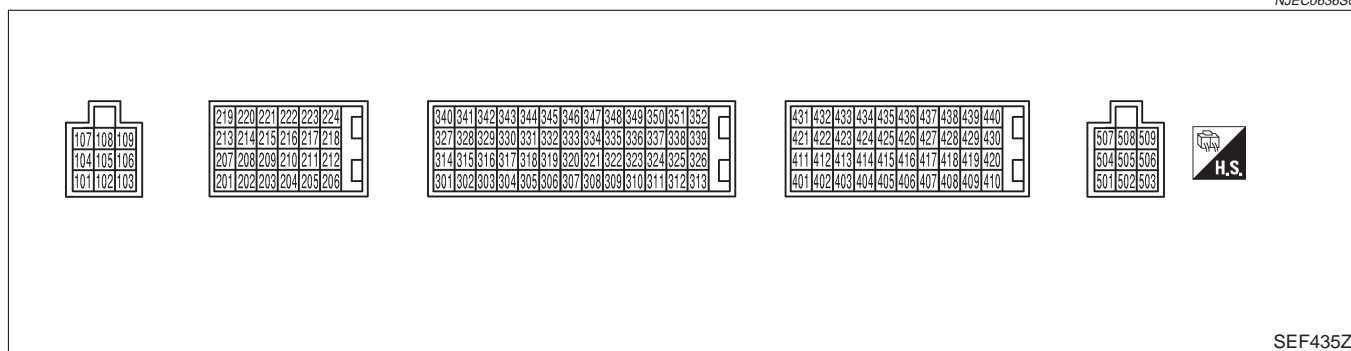

SEF435Z

ECM INSPECTION TABLE

NJEC0636S03

Remarks: Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage and Pulse Signal)
104 105 106	B B B	ECM ground	[Engine is running] ● Idle speed	Approximately 0V
107 108 109	R R R	Power supply for ECM	[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

YD



ECM Terminals and Reference Value (Cont'd)

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage and Pulse Signal)
204	L	Air conditioner relay	[Engine is running] ● Air conditioner switch is "OFF"	BATTERY VOLTAGE (11 - 14V)
			[Engine is running] ● Both air conditioner switch and blower fan switch are "ON" (Compressor is operating)	Approximately 0.1V
214	W/B	Glow relay	Refer to "Glow Control System", EC-677.	
218	B	Sensors' ground	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0V
219	LG/R	Cooling fan relay (Low)	[Engine is running] ● Cooling fan is not operating	BATTERY VOLTAGE (11 - 14V)
			[Engine is running] ● Cooling fan is operating	Approximately 0.1V
221	LG/B	Cooling fan relay (High)	[Engine is running] ● Cooling fan is not operating ● Cooling fan is operating at low speed	BATTERY VOLTAGE (11 - 14V)
			[Engine is running] ● Cooling fan is operating at high speed	Approximately 0.1V
223	W	Mass air flow sensor power supply	[Ignition switch "ON"]	Approximately 5V
224	R	Mass air flow sensor	[Engine is running] ● Warm-up condition ● Idle speed	1.5 - 2.0V
313	L/W	Electronic control fuel injection pump	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0.1V
314	L/R	Electronic control fuel injection pump	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0.4V
316	PU	Electronic control fuel injection pump	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 2.5V
317	P	Electronic control fuel injection pump	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 2.5V
325	G	ECM relay (Self-shutoff)	[Ignition switch "ON"] [Ignition switch "OFF"] ● For a few seconds after turning ignition switch "OFF"	Approximately 0.25V
			[Ignition switch "OFF"] ● A few seconds passed after turning ignition switch "OFF"	BATTERY VOLTAGE (11 - 14V)
331	OR	Crankshaft position sensor (TDC) ground	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0V
334	B/R	Engine coolant temperature sensor ground	[Ignition switch "ON"]	Approximately 0V

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

YD



ECM Terminals and Reference Value (Cont'd)

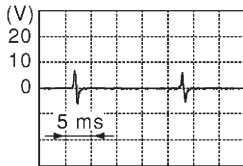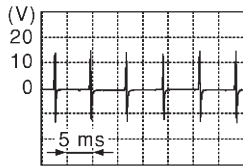TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage and Pulse Signal)
337 338 350 351	W/L PU/W GY OR/B	EGR volume control valve	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	0.1 - 14V (Voltage signals of each ECM terminals differ according to the control position of EGR volume control valve.)
344	W	Crankshaft position sen- sor (TDC)	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	Approximately 0V 
			[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is 2,000 rpm 	Approximately 0V 
347	L/B	Engine coolant tempera- ture sensor	[Engine is running]	Approximately 0 - 4.8V Output voltage varies with engine coolant temperature
403	R/L	Air conditioner switch	[Engine is running] <ul style="list-style-type: none"> ● Air conditioner switch is "OFF" 	BATTERY VOLTAGE (11 - 14V)
			[Engine is running] <ul style="list-style-type: none"> ● Both air conditioner switch and blower fan switch are "ON" (Compressor is operating) 	Approximately 0.1V
405	R/G	Stop lamp switch	[Ignition switch "ON"] <ul style="list-style-type: none"> ● Brake pedal fully released 	Approximately 0V
			[Ignition switch "ON"] <ul style="list-style-type: none"> ● Brake pedal depressed 	BATTERY VOLTAGE (11 - 14V)
416	Y/B	Brake pedal position switch	[Ignition switch "ON"] <ul style="list-style-type: none"> ● Brake pedal fully released 	BATTERY VOLTAGE (11 - 14V)
			[Ignition switch "ON"] <ul style="list-style-type: none"> ● Brake pedal depressed 	Approximately 0V

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

YD



ECM Terminals and Reference Value (Cont'd)

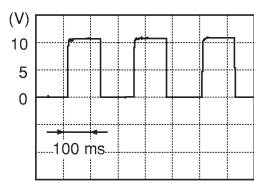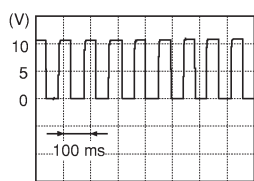TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage and Pulse Signal)
417	PU/R	Vehicle speed sensor	[Engine is running] <ul style="list-style-type: none"> ● Lift up the vehicle ● In 1st gear position ● Vehicle speed is 10 km/h (6 MPH) 	0 - Approximately 8V  <p style="text-align: right;">SEF891Y</p>
			[Engine is running] <ul style="list-style-type: none"> ● Lift up the vehicle ● In 2nd gear position ● Vehicle speed is 30 km/h (19 MPH) 	Approximately 6V  <p style="text-align: right;">SEF892Y</p>
418	G/OR	Park/Neutral position switch (where fitted)	[Ignition switch "ON"] <ul style="list-style-type: none"> ● Gear position is "Neutral" 	Approximately 0V
			[Ignition switch "ON"] <ul style="list-style-type: none"> ● Except the above gear position 	BATTERY VOLTAGE (11 - 14V)
422	B/Y	Start signal	[Ignition switch "ON"]	Approximately 0V
			[Ignition switch "START"]	BATTERY VOLTAGE (11 - 14V)
425	P/B	Accelerator position sen- sor ground	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	Approximately 0V
426	BR/R	Accelerator position switch (Idle) ground	[Ignition switch "ON"]	Approximately 0V
433	G/Y	Accelerator position sen- sor power supply	[Ignition switch "ON"]	Approximately 5V
434	W	Accelerator position sen- sor	[Ignition switch "ON"] <ul style="list-style-type: none"> ● Accelerator pedal fully released 	0.30 - 0.50V
			[Ignition switch "ON"] <ul style="list-style-type: none"> ● Accelerator pedal fully depressed 	3.0 - 4.3V
435	W/G	Accelerator position switch (Idle)	[Ignition switch "ON"] <ul style="list-style-type: none"> ● Accelerator pedal fully released 	Approximately 0V
			[Ignition switch "ON"] <ul style="list-style-type: none"> ● Accelerator pedal depressed 	BATTERY VOLTAGE (11 - 14V)

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

YD

ECM Terminals and Reference Value (Cont'd)

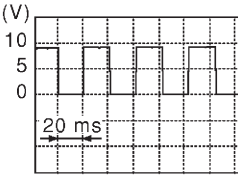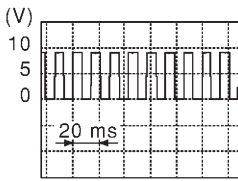TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage and Pulse Signal)
439	L/OR	Tachometer	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	Approximately 4.8V  <p style="text-align: right; margin-right: 50px;">SEF325Y</p>
			[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is 2,000 rpm 	Approximately 4.6V  <p style="text-align: right; margin-right: 50px;">SEF326Y</p>
505	OR/L	Malfunction indicator	[Ignition switch "ON"]	Approximately 1V
			[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	BATTERY VOLTAGE (11 - 14V)
507	W/R	Ignition switch	[Ignition switch "OFF"]	0V
			[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)
508	OR	Glow lamp	[Ignition switch "ON"] <ul style="list-style-type: none"> ● Glow lamp is "ON" 	Approximately 1V
			[Ignition switch "ON"] <ul style="list-style-type: none"> ● Glow lamp is "OFF" 	BATTERY VOLTAGE (11 - 14V)

Description

Intermittent incidents (I/I) may occur. In many cases, the problem resolves itself (the part or circuit function returns to normal without intervention). It is important to realize that the symptoms described in the customer's complaint often do not recur on DTC visits. Realize also that the most frequent cause of I/I occurrences is poor electrical connections. Because of this, the conditions under which the incident occurred may not be clear. Therefore, circuit checks made as part of the standard diagnostic procedure may not indicate the specific problem area.

NJEC0637

COMMON I/I REPORT SITUATIONS

NJEC0637S01

STEP in Work Flow	Situation
II	The CONSULT-II is used. The SELF-DIAG RESULTS screen shows time data other than "0".
III	The symptom described by the customer does not recur.
IV	DTC does not appear during the DTC Confirmation Procedure.
VI	The Diagnostic Procedure for XXXX does not indicate the problem area.

Diagnostic Procedure

NJEC0638

1	INSPECTION START	
Erase DTCs. Refer to "HOW TO ERASE DTC", EC-522.		
▶		GO TO 2.

2	CHECK GROUND TERMINALS	
Check ground terminals for corroding or loose connection. Refer to GI-22, "GROUND INSPECTION".		
OK or NG		
OK ▶		GO TO 3.
NG ▶		Repair or replace.

3	SEARCH FOR ELECTRICAL INCIDENT	
Perform GI-22, "Incident Simulation Tests".		
OK or NG		
OK ▶		INSPECTION END
NG ▶		Repair or replace.

TROUBLE DIAGNOSIS FOR POWER SUPPLY

YD

Main Power Supply and Ground Circuit

Main Power Supply and Ground Circuit

ECM TERMINALS AND REFERENCE VALUE

Remarks: Specification data are reference values and are measured between each terminal and ground. N/JEC0639

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA(DC Voltage)
104 105 106	B B B	ECM ground	[Engine is running] ● Idle speed	Approximately 0V
107 108 109	R R R	Power supply for ECM	[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)
325	G	ECM relay (Self-shutoff)	[Ignition switch "ON"] [Ignition switch "OFF"] ● For a few seconds after turning ignition switch "OFF"	Approximatley 0.25V
			[Ignition switch "OFF"] ● A few seconds passed after turning ignition switch "OFF"	BATTERY VOLTAGE (11 - 14V)
507	W/R	Ignition switch	[Ignition switch "OFF"]	0V
			[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)

TROUBLE DIAGNOSIS FOR POWER SUPPLY



YD

Main Power Supply and Ground Circuit (Cont'd)

WIRING DIAGRAM


NJE00640

EC-MAIN-01

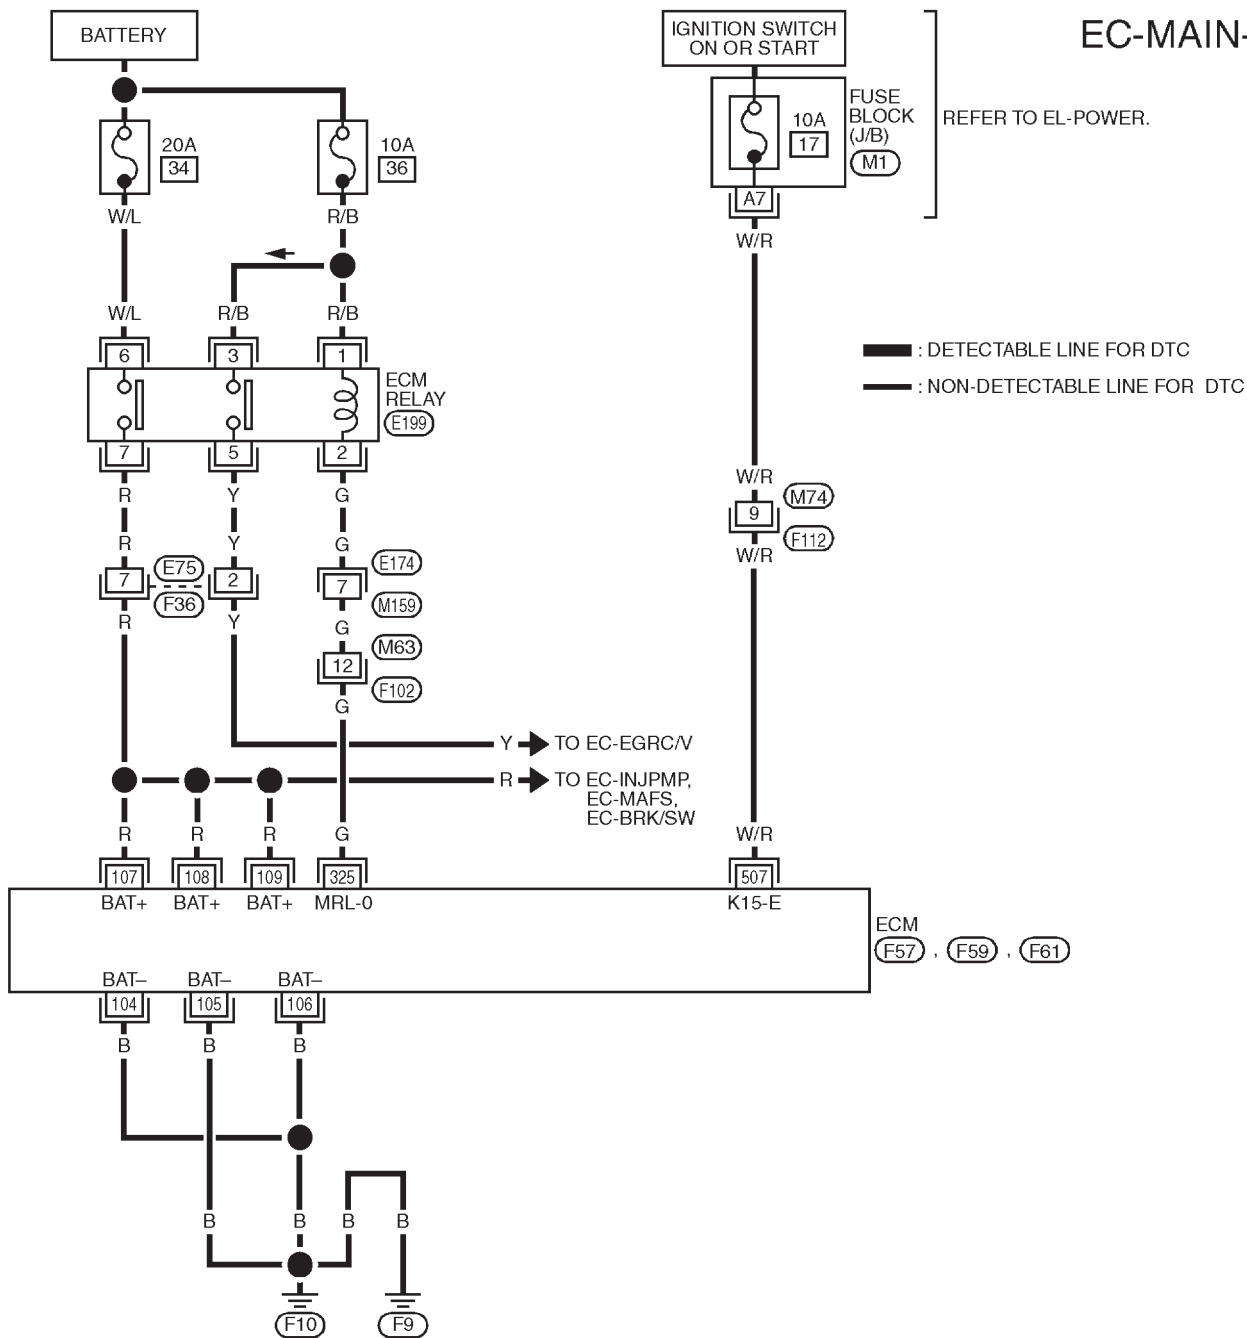

REFER TO THE FOLLOWING.

(M1) - FUSE BLOCK-JUNCTION BOX (J/B)

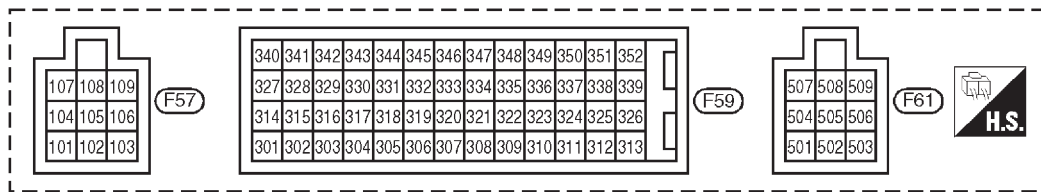

YEC009A

TROUBLE DIAGNOSIS FOR POWER SUPPLY


YD

Main Power Supply and Ground Circuit (Cont'd)

DIAGNOSTIC PROCEDURE

NJE00641

1	INSPECTION START	
Start engine. Is engine running?		
Yes or No		
Yes	▶	GO TO 13.
No	▶	GO TO 2.

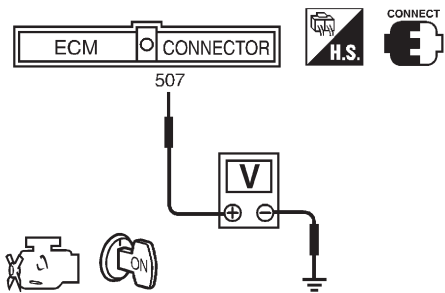2	CHECK ECM POWER SUPPLY CIRCUIT-I	
1. Turn ignition switch "ON". 2. Check voltage between ECM terminal 507 and ground with CONSULT-II or tester.		
		
Voltage: Battery voltage		
OK or NG		
OK	▶	GO TO 4.
NG	▶	GO TO 3.

SEF895Y


3	DETECT MALFUNCTIONING PART	
Check the following. <ul style="list-style-type: none"> ● Harness connectors M74, F112 ● Fuse block (J/B) connector M1 ● 10A fuse ● Harness for open or short between ECM and fuse 		
▶ Repair open circuit or short to ground or short to power in harness or connectors.		


4	CHECK ECM GROUND CIRCUIT FOR OPEN AND SHORT	
1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminals 104, 105, 106 and engine ground. Refer to Wiring Diagram. Continuity should exist. 4. Also check harness for short to ground and short to power.		
OK or NG		
OK	▶	GO TO 5.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

TROUBLE DIAGNOSIS FOR POWER SUPPLY

YD

Main Power Supply and Ground Circuit (Cont'd)

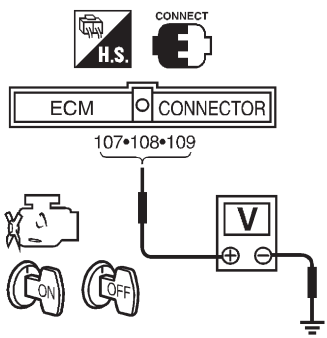5	CHECK ECM POWER SUPPLY CIRCUIT-II	
<p>1. Reconnect ECM harness connector. 2. Turn ignition switch "ON" and then "OFF". 3. Check voltage between ECM terminals 107, 108, 109 and ground with CONSULT-II or tester.</p>		
		
<p>Voltage: After turning ignition switch "OFF", battery voltage will exist for a few seconds, then drop to approximately 0V.</p>		
SEF896Y		
OK or NG		
OK	▶	Check electronic control fuel injection pump power supply circuit. Refer to "Diagnostic Procedure", EC-662.
NG (Battery voltage does not exist.)	▶	GO TO 6.
NG (Battery voltage exists for more than a few seconds.)	▶	GO TO 10.

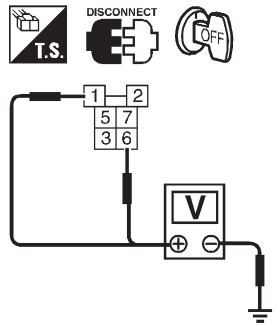6	CHECK ECM POWER SUPPLY CIRCUIT-III	
<p>1. Disconnect ECM relay. (For ECM relay location, refer to "Engine Control Component Parts Location".) 2. Check voltage between relay terminals 1, 6 and ground with CONSULT-II or tester.</p>		
		
<p>Voltage: Battery Voltage</p>		
SEF399Y		
OK or NG		
OK	▶	GO TO 8.
NG	▶	GO TO 7.

7	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● 20A fuse ● 10A fuse ● Harness for open or short between ECM relay and battery 		
<p>▶ Repair open circuit or short to ground or short to power in harness or connectors.</p>		

TROUBLE DIAGNOSIS FOR POWER SUPPLY

YD


Main Power Supply and Ground Circuit (Cont'd)

8	CHECK OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal 325 and ECM relay terminal 2. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to ground and short to power.		
OK or NG		
OK	▶	GO TO 10.
NG	▶	GO TO 9.

9	DETECT MALFUNCTIONING PART	
Check the following. <ul style="list-style-type: none"> ● Harness connectors E174, M159 ● Harness connectors M63, F102 ● Harness for open or short between ECM and ECM relay 		
▶		Repair open circuit or short to ground or short to power in harness or connectors.

10	CHECK ECM POWER SUPPLY CIRCUIT-IV	
1. Check harness continuity between ECM terminals 107, 108, 109 and ECM relay terminal 7. Refer to Wiring Diagram. Continuity should exist. 2. Also check harness for short to ground and short to power.		
OK or NG		
OK	▶	GO TO 12.
NG	▶	GO TO 11.

11	DETECT MALFUNCTIONING PART	
Check the following. <ul style="list-style-type: none"> ● Harness connectors E75, F36 ● Harness for open or short between ECM and ECM relay 		
▶		Repair open circuit or short to ground or short to power in harness or connectors.

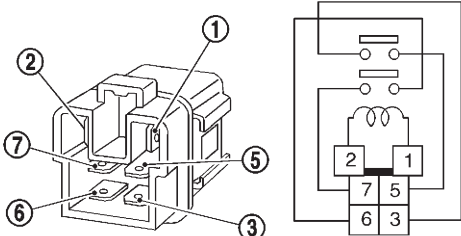12	CHECK ECM RELAY							
1. Apply 12V direct current between ECM relay terminals 1 and 2. 2. Check continuity between ECM relay terminals 3 and 5, 7 and 6.								
								
<table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th style="width: 50%;">Condition</th> <th style="width: 50%;">Continuity</th> </tr> </thead> <tbody> <tr> <td>12V direct current supply between terminals 1 and 2</td> <td style="text-align: center;">Yes</td> </tr> <tr> <td>OFF</td> <td style="text-align: center;">No</td> </tr> </tbody> </table>			Condition	Continuity	12V direct current supply between terminals 1 and 2	Yes	OFF	No
Condition	Continuity							
12V direct current supply between terminals 1 and 2	Yes							
OFF	No							
SEF296X								
OK or NG								
OK	▶	GO TO 16.						
NG	▶	Replace ECM relay.						

TROUBLE DIAGNOSIS FOR POWER SUPPLY

YD*Main Power Supply and Ground Circuit (Cont'd)*

13 CHECK ECM POWER SUPPLY CIRCUIT-V	
1. Turn ignition switch "OFF". 2. Disconnect ECM relay. (For ECM relay location, refer to "Engine Control Component Parts Location".) 3. Disconnect ECM harness connector. 4. Check harness continuity between ECM terminals 107, 108, 109 and ECM relay terminal 7. Refer to Wiring Diagram. Continuity should exist. 5. Also check harness for short to ground and short to power.	
OK or NG	
OK	▶ GO TO 15.
NG	▶ GO TO 14.

14 DETECT MALFUNCTIONING PART	
Check the following. <ul style="list-style-type: none">● Harness connectors E75, F36● Harness for open or short between ECM and ECM relay	
	▶ Repair open circuit or short to ground or short to power in harness or connectors.


15 CHECK ECM GROUND CIRCUIT FOR OPEN AND SHORT	
1. Check harness continuity between ECM terminals 104, 105, 106 and engine ground. Refer to Wiring Diagram. Continuity should exist. 2. Also check harness for short to ground and short to power.	
OK or NG	
OK	▶ GO TO 16.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

16 CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-559.	
	▶ INSPECTION END

DTC P0100 MASS AIR FLOW SEN

YD

Component Description

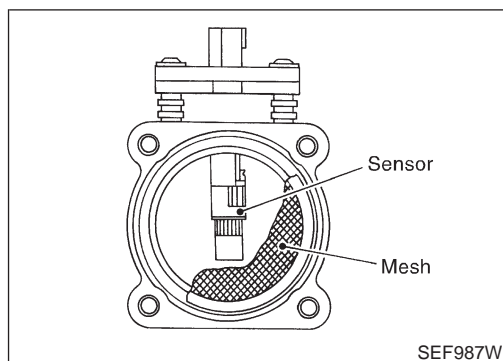

Component Description

NJEC0642

The mass air flow sensor (MAFS) is placed in the stream of intake air. It measures the intake air flow rate by measuring a part of the entire intake air flow. It consists of a hot film that is supplied with electric current from the ECM. The temperature of the hot film is controlled by the ECM a certain amount. The heat generated by the hot film is reduced as the intake air flows around it. The more air, the greater the heat loss.

Therefore, the ECM must supply more electric current to maintain the temperature of the hot film as air flow increases. The ECM detects the air flow by means of this current change.

CONSULT-II Reference Value in Data Monitor Mode

NJEC0643

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
MAS AIR/FL SE	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: Neutral position ● No-load Idle	1.5 - 2.0V

ECM Terminals and Reference Value

NJEC0644

Specification data are reference values, and are measured between each terminal and ground.

CAUTION:


Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
218	B	Sensor's ground	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	Approximately 0V
223	W	Mass air flow sensor power supply	[Ignition switch "ON"]	Approximately 5V
224	R	Mass air flow sensor	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	1.5 - 2.0V

On Board Diagnosis Logic

NJEC0645

DTC	Malfunction is detected when ...	Check Items (Possible Cause)
P0100 0102	<ul style="list-style-type: none"> ● An excessively high or low voltage from the sensor is sent to ECM. 	<ul style="list-style-type: none"> ● Harness or connectors (The sensor circuit is open or shorted.) ● Mass air flow sensor

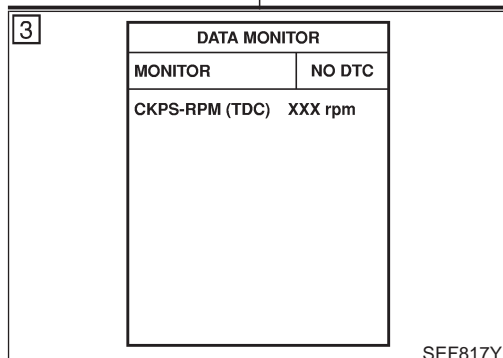

DTC Confirmation Procedure

NJEC0646

Ⓜ WITH CONSULT-II

NJEC0646S01

- 1) Turn ignition switch "ON", and wait at least 6 seconds.
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and wait at least 3 seconds.
- 4) If DTC is detected, go to "Diagnostic Procedure", EC-569.

ⓧ WITHOUT CONSULT-II

NJEC0646S02

- 1) Turn ignition switch "ON", and wait at least 6 seconds.
- 2) Start engine and wait at least 3 seconds.

DTC P0100 MASS AIR FLOW SEN

YD

DTC Confirmation Procedure (Cont'd)

- 3) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 4) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.
- 5) If DTC is detected, go to "Diagnostic Procedure", EC-569.

DTC P0100 MASS AIR FLOW SEN




YD

Wiring Diagram

Wiring Diagram

NJEC0647



EC-MAFS-01

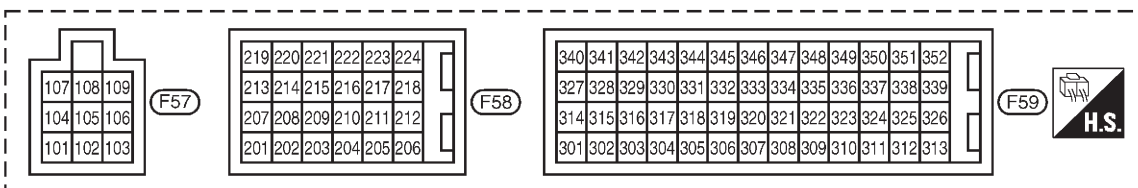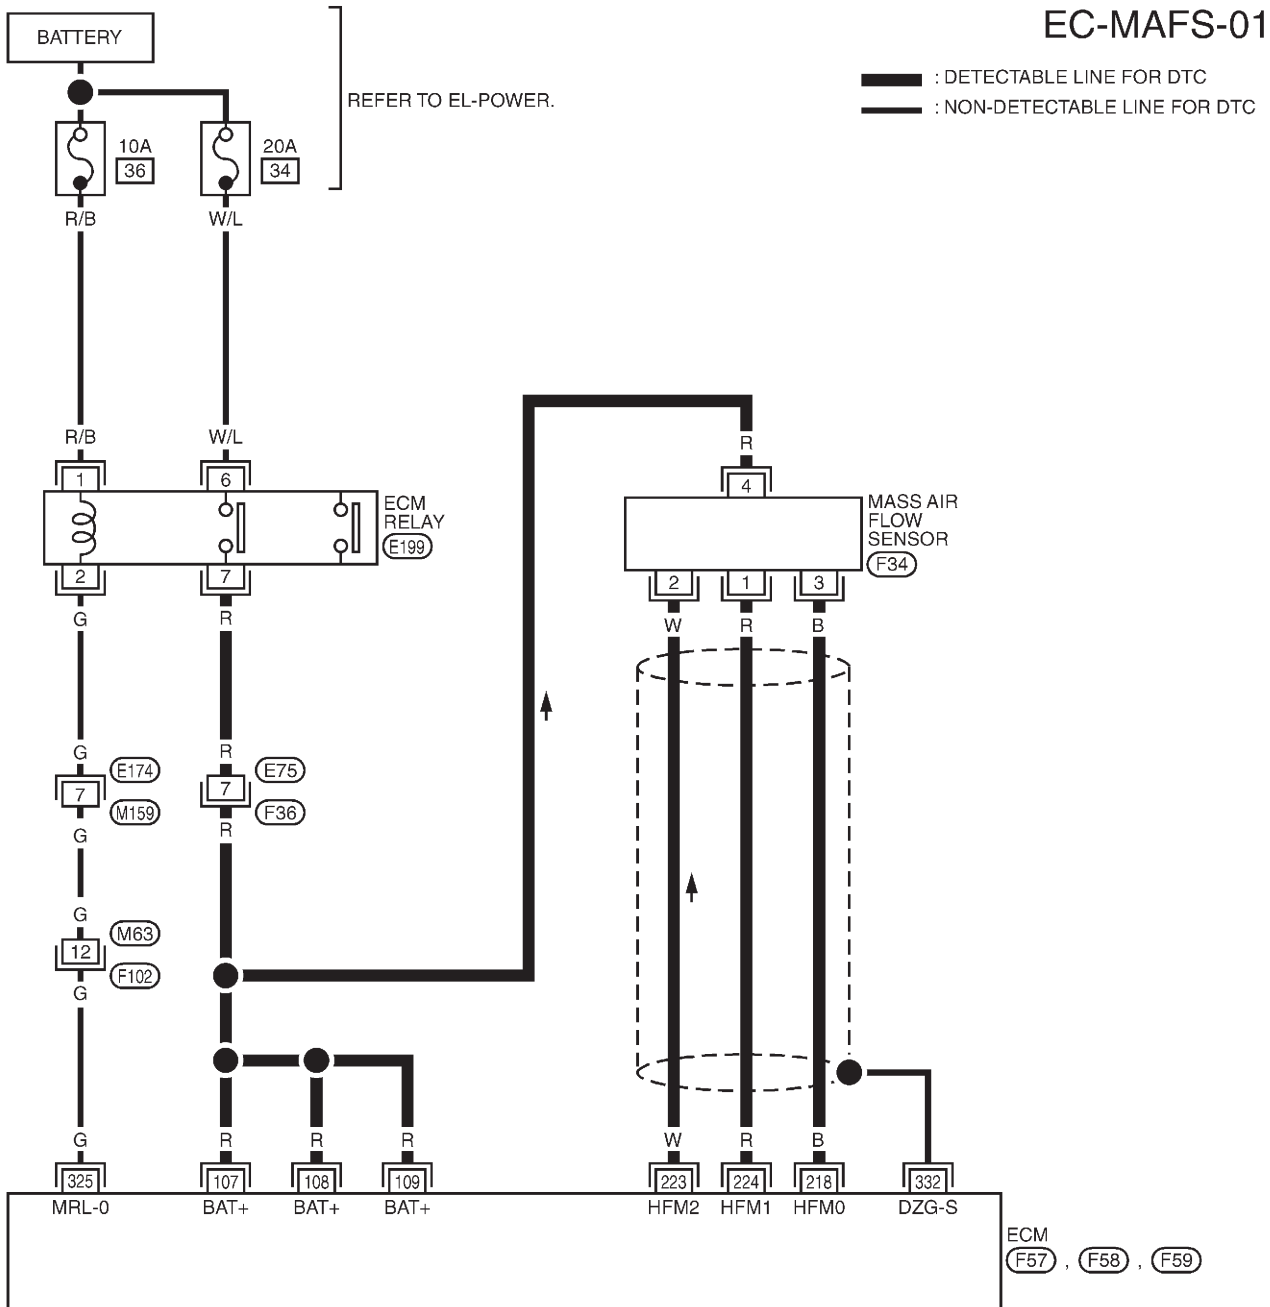

YEC010A

Diagnostic Procedure

NJEC0648

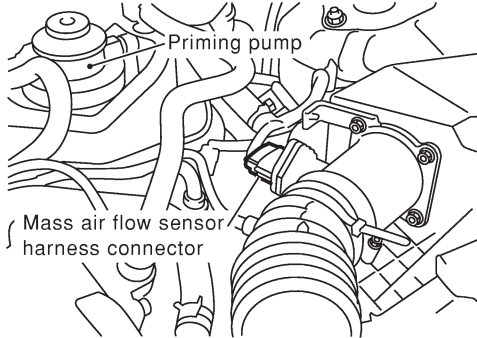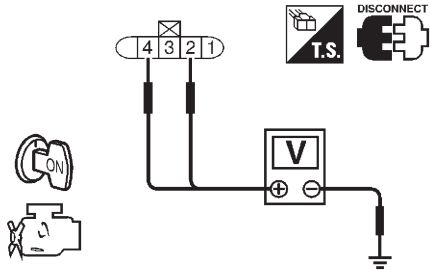
1	CHECK MAFS POWER SUPPLY CIRCUIT								
<p>1. Turn ignition switch "OFF". 2. Disconnect mass air flow sensor harness connector.</p> <div style="text-align: center;">  <p>Priming pump</p> <p>Mass air flow sensor harness connector</p> </div> <p style="text-align: right;">SEF884Y</p> <p>3. Turn ignition switch "ON". 4. Check voltage between mass air flow sensor terminals 2, 4 and ground with CONSULT-II or tester.</p> <div style="display: flex; align-items: center; justify-content: space-around;"> <div style="text-align: center;">  </div> <table border="1" style="border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Terminal</th> <th style="width: 50%;">Voltage</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">2</td> <td style="text-align: center;">Approximately 5</td> </tr> <tr> <td style="text-align: center;">4</td> <td style="text-align: center;">Battery voltage</td> </tr> </tbody> </table> </div> <p style="text-align: right;">SEF297X</p> <p style="text-align: center;">OK or NG</p>				Terminal	Voltage	2	Approximately 5	4	Battery voltage
Terminal	Voltage								
2	Approximately 5								
4	Battery voltage								
OK	▶	GO TO 3.							
NG	▶	GO TO 2.							

2	DETECT MALFUNCTIONING PART		
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E75, F36 ● Harness for open or short between mass air flow sensor and ECM ● Harness for open or short between mass air flow sensor and ECM relay 			
▶		Repair open circuit or short to ground or short to power in harness or connector.	

DTC P0100 MASS AIR FLOW SEN

YD

Diagnostic Procedure (Cont'd)

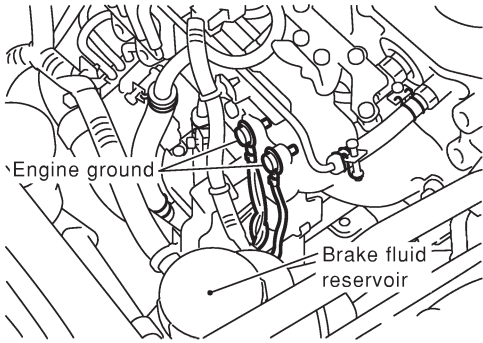3 CHECK MAFS GROUND CIRCUIT FOR OPEN AND SHORT	
<p>1. Turn ignition switch "OFF".</p> <p>2. Loosen and retighten engine ground screws.</p>	
 <p>The diagram shows a top-down view of an engine compartment. A line points to a ground screw on the engine block labeled "Engine ground". Another line points to a reservoir labeled "Brake fluid reservoir".</p>	
<p>3. Check harness continuity between mass air flow sensor terminal 3 and engine ground. Refer to Wiring Diagram. Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: right;">SEF380Y</p>	
OK or NG	
OK	▶ GO TO 5.
NG	▶ GO TO 4.

4 DETECT MALFUNCTIONING PART	
Check harness for open or short between mass air flow sensor and ECM.	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

5 CHECK MAFS INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
<p>1. Disconnect ECM harness connector.</p> <p>2. Check harness continuity between mass air flow sensor terminal 1 and ECM terminal 224. Refer to Wiring Diagram. Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p>	
OK or NG	
OK	▶ GO TO 6.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.


DTC P0100 MASS AIR FLOW SEN

YD

Diagnostic Procedure (Cont'd)

6 CHECK MASS AIR FLOW SENSOR

1. Reconnect harness connectors disconnected.
2. Start engine and warm it up to normal operating temperature.
3. Check voltage between ECM terminal 224 (Mass air flow sensor signal) and ground.

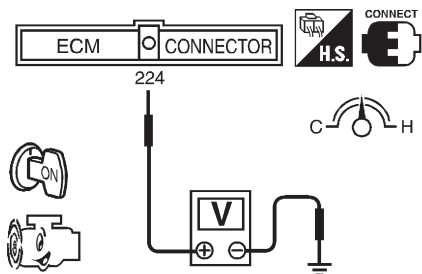

Condition	Voltage V
Ignition switch "ON" (Engine stopped.)	Approx. 1.0
Idle (Engine is warmed-up to normal operating temperature.)	1.5 - 2.0
Idle to about 4,000 rpm*	1.5 - 2.0 to Approx. 4.0

*: Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

SEF441Z

4. If the voltage is out of specification, disconnect MAFS harness connector and connect it again. Then repeat above check.

OK or NG

OK	▶	GO TO 7.
NG	▶	Replace mass air flow sensor.

7 CHECK INTERMITTENT INCIDENT



Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-559.

	▶	INSPECTION END
--	---	-----------------------

DTC P0115 COOLANT TEMP SEN

YD

Description

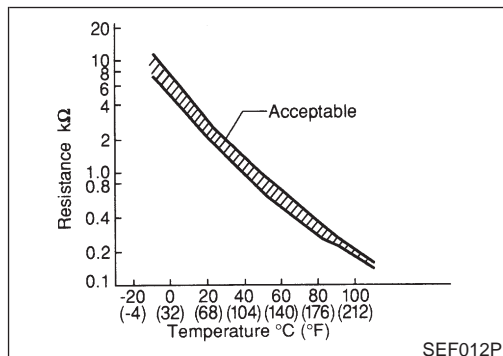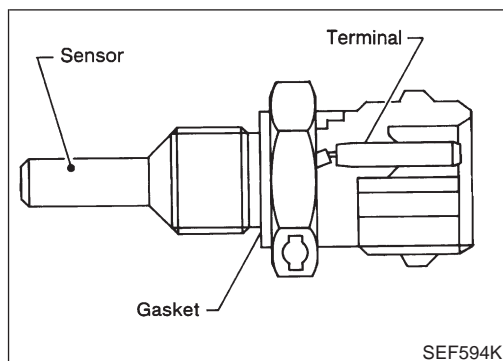

Description

NJEC0649

The engine coolant temperature sensor is used to detect the engine coolant temperature. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the engine coolant temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

<Reference data>

Engine coolant temperature °C (°F)	Voltage* (V)	Resistance (kΩ)
-10 (14)	4.4	7.0 - 11.4
20 (68)	3.5	2.1 - 2.9
50 (122)	2.3	0.68 - 1.00
90 (194)	1.0	0.236 - 0.260

*: These data are reference values and measured between ECM terminal 347 (Engine coolant temperature sensor) and ground.


CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

On Board Diagnosis Logic

NJEC0650

DTC	Malfunction is detected when ...	Check Items (Possible Cause)
P0115 0103	<ul style="list-style-type: none"> An excessively high or low voltage from the sensor is entered to ECM. 	<ul style="list-style-type: none"> Harness or connectors (The sensor circuit is open or shorted.) Engine coolant temperature sensor

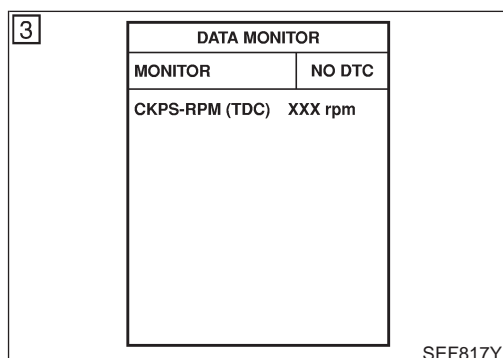

DTC Confirmation Procedure

NJEC0651

Ⓜ WITH CONSULT-II

NJEC0651S01

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Wait at least 5 seconds.
- 4) If DTC is detected, go to "Diagnostic Procedure", EC-575.

ⓧ WITHOUT CONSULT-II

NJEC0651S02

- 1) Turn ignition switch "ON" and wait at least 5 seconds.
- 2) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".

DTC P0115 COOLANT TEMP SEN

YD

DTC Confirmation Procedure (Cont'd)

- 3) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.
- 4) If DTC is detected, go to "Diagnostic Procedure", EC-575.

DTC P0115 COOLANT TEMP SEN

YD


Wiring Diagram

Wiring Diagram

NJEC0652

EC-ECTS-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

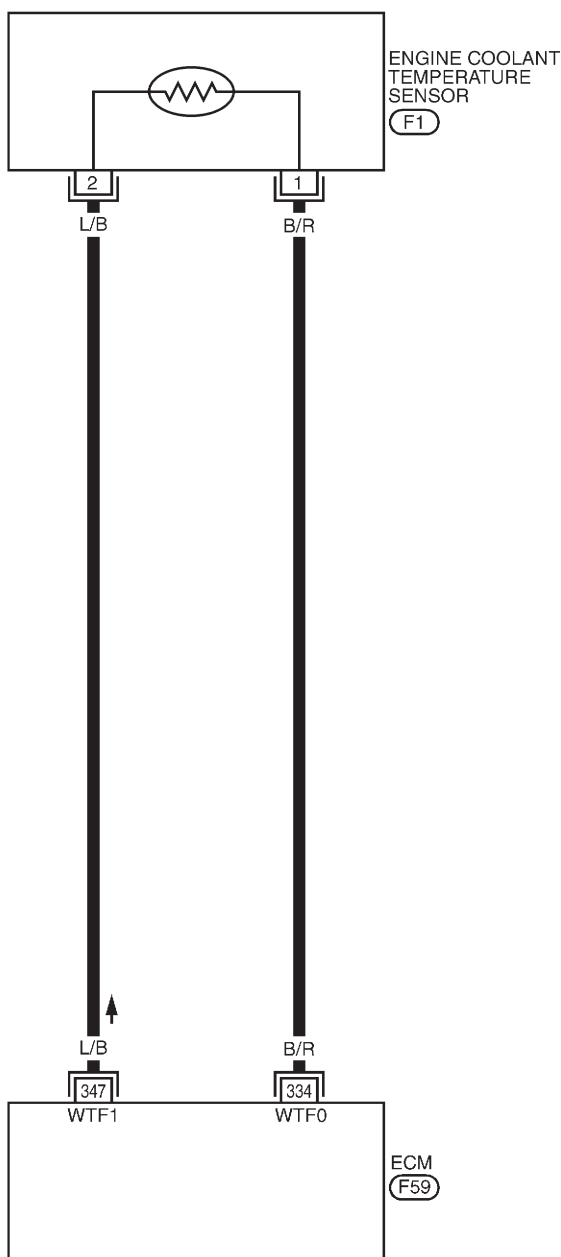



340	341	342	343	344	345	346	347	348	349	350	351	352	
327	328	329	330	331	332	333	334	335	336	337	338	339	
314	315	316	317	318	319	320	321	322	323	324	325	326	
301	302	303	304	305	306	307	308	309	310	311	312	313	



YEC011A

Diagnostic Procedure

NJEC0653

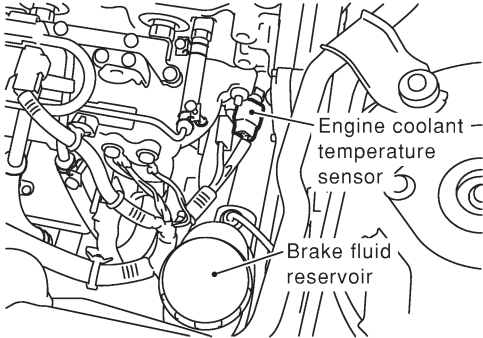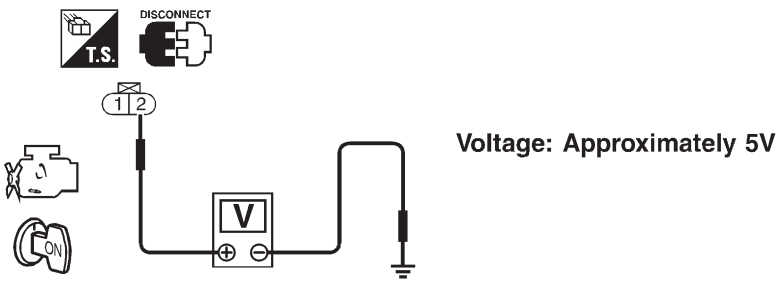1	CHECK ECTS POWER SUPPLY CIRCUIT	<p>1. Turn ignition switch "OFF".</p> <p>2. Disconnect engine coolant temperature sensor harness connector.</p> <div style="text-align: center;">  <p style="margin-left: 150px;">Engine coolant - temperature sensor</p> <p style="margin-left: 150px;">Brake fluid reservoir</p> </div> <p>3. Turn ignition switch "ON".</p> <p>4. Check voltage between ECTS terminal 2 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  <p style="margin-left: 100px;">Voltage: Approximately 5V</p> </div> <p style="text-align: center;">OK or NG</p>	SEF382Y
OK	▶	GO TO 2.	
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.	SEF401Y



2	CHECK ECTS GROUND CIRCUIT FOR OPEN AND SHORT	<p>1. Turn ignition switch "OFF".</p> <p>2. Check harness continuity between ECTS terminal 1 and engine ground. Refer to Wiring Diagram. Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶	GO TO 4.	
NG	▶	GO TO 3.	

3	DETECT MALFUNCTIONING PART	<p>Check the following harness for open or short between ECM and engine coolant temperature sensor.</p> <p style="text-align: center;">OK or NG</p>	
	▶	Repair open circuit or short to ground or short to power in harness or connectors.	

DTC P0115 COOLANT TEMP SEN

YD

Diagnostic Procedure (Cont'd)

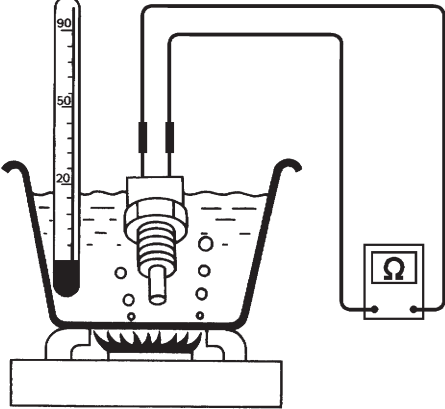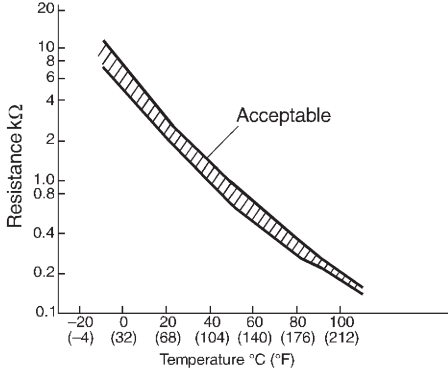4	CHECK ENGINE COOLANT TEMPERATURE SENSOR									
<p>1. Remove engine coolant temperature sensor from the engine. 2. Check resistance between ECTS terminals 1 and 2 as shown in the figure.</p>										
<p><Reference data></p> <table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Temperature °C (°F)</th> <th style="text-align: center;">Resistance kΩ</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">20 (68)</td> <td style="text-align: center;">2.1 - 2.9</td> </tr> <tr> <td style="text-align: center;">50 (122)</td> <td style="text-align: center;">0.68 - 1.00</td> </tr> <tr> <td style="text-align: center;">90 (194)</td> <td style="text-align: center;">0.236 - 0.260</td> </tr> </tbody> </table>			Temperature °C (°F)	Resistance kΩ	20 (68)	2.1 - 2.9	50 (122)	0.68 - 1.00	90 (194)	0.236 - 0.260
Temperature °C (°F)	Resistance kΩ									
20 (68)	2.1 - 2.9									
50 (122)	0.68 - 1.00									
90 (194)	0.236 - 0.260									
										
SEF304X										
OK or NG										
OK	▶	GO TO 5.								
NG	▶	Replace engine coolant temperature sensor.								


5	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-559.		
▶		INSPECTION END

Description

NJE00679

The accelerator work unit is installed on the upper end of the accelerator pedal assembly. The accelerator position sensor and accelerator position switch are built into the accelerator work unit. The sensor detects the accelerator position and sends a signal to the ECM. The ECM uses the signal to determine the amount of fuel to be injected.

The accelerator position switch detects Off-accelerator switch signal and send these signals to the ECM. The ECM will then determine engine idle conditions. These signals are also used for diagnosing the accelerator position sensor.

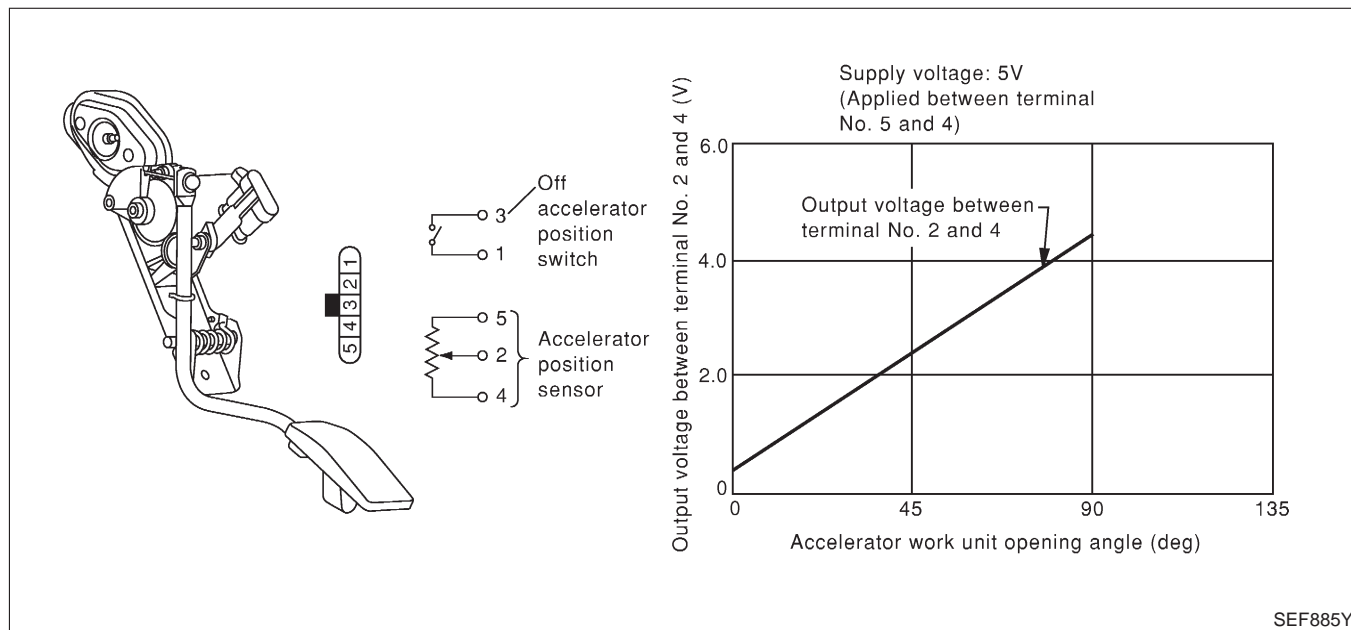

CONSULT-II Reference Value in Data Monitor Mode

NJE00680

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
ACCEL POS SEN	<ul style="list-style-type: none"> Ignition switch: ON (Engine stopped) 	Accelerator pedal: released
		Accelerator pedal: depressed
OFF ACCEL SW	<ul style="list-style-type: none"> Ignition switch: ON (Engine stopped) 	Accelerator pedal: fully released
		Accelerator pedal: slightly open

ECM Terminals and Reference Value

NJE00681

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA(DC Voltage)
425	P/B	Accelerator position sensor ground	[Engine is running] <ul style="list-style-type: none"> Warm-up condition Idle speed 	Approximately 0V
426	BR/R	Accelerator position switch (Idle) ground	[Ignition switch "ON"]	Approximately 0V
433	G/Y	Accelerator position sensor power supply	[Ignition switch "ON"]	Approximately 5V

DTC P0120 ACCEL POS SENSOR

YD

ECM Terminals and Reference Value (Cont'd)

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA(DC Voltage)
434	W	Accelerator position sensor	[Ignition switch "ON"] ● Accelerator pedal fully released	0.30 - 0.50V
			[Ignition switch "ON"] ● Accelerator pedal fully depressed	3.0 - 4.3V
435	W/G	Accelerator position switch (Idle)	[Ignition switch "ON"] ● Accelerator pedal fully released	Approximately 0V
			[Ignition switch "ON"] ● Accelerator pedal depressed	BATTERY VOLTAGE (11 - 14V)

On Board Diagnosis Logic

NJEC0682

DTC	Malfunction is detected when ...	Check Items (Possible Cause)
P0120 0403	<ul style="list-style-type: none"> ● The relation between sensor and switch signals is not in the normal range during the specified accelerator positions. 	<ul style="list-style-type: none"> ● Harness or connectors (The sensor circuit is open or shorted.) ● Accelerator position sensor ● Accelerator position switch

DATA MONITOR

MONITOR	NO DTC
CKPS-RPM (TDC) XXX rpm	

SEF817Y

DTC Confirmation Procedure

NJEC0683

WITH CONSULT-II

NJEC0683S01

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Depress and release fully accelerator pedal slowly.
- 4) If DTC is detected, go to "Diagnostic Procedure", EC-580.

WITHOUT CONSULT-II

NJEC0683S02




- 1) Turn ignition switch "ON".
- 2) Depress and release fully accelerator pedal slowly.
- 3) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 4) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.
- 5) If DTC is detected, go to "Diagnostic Procedure", EC-580.

DTC P0120 ACCEL POS SENSOR

Wiring Diagram

NJEC0684

EC-APS-01

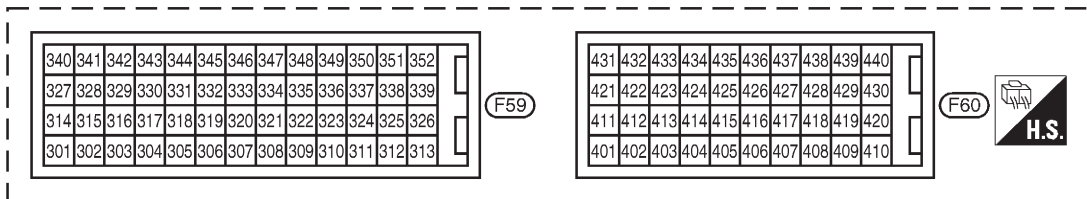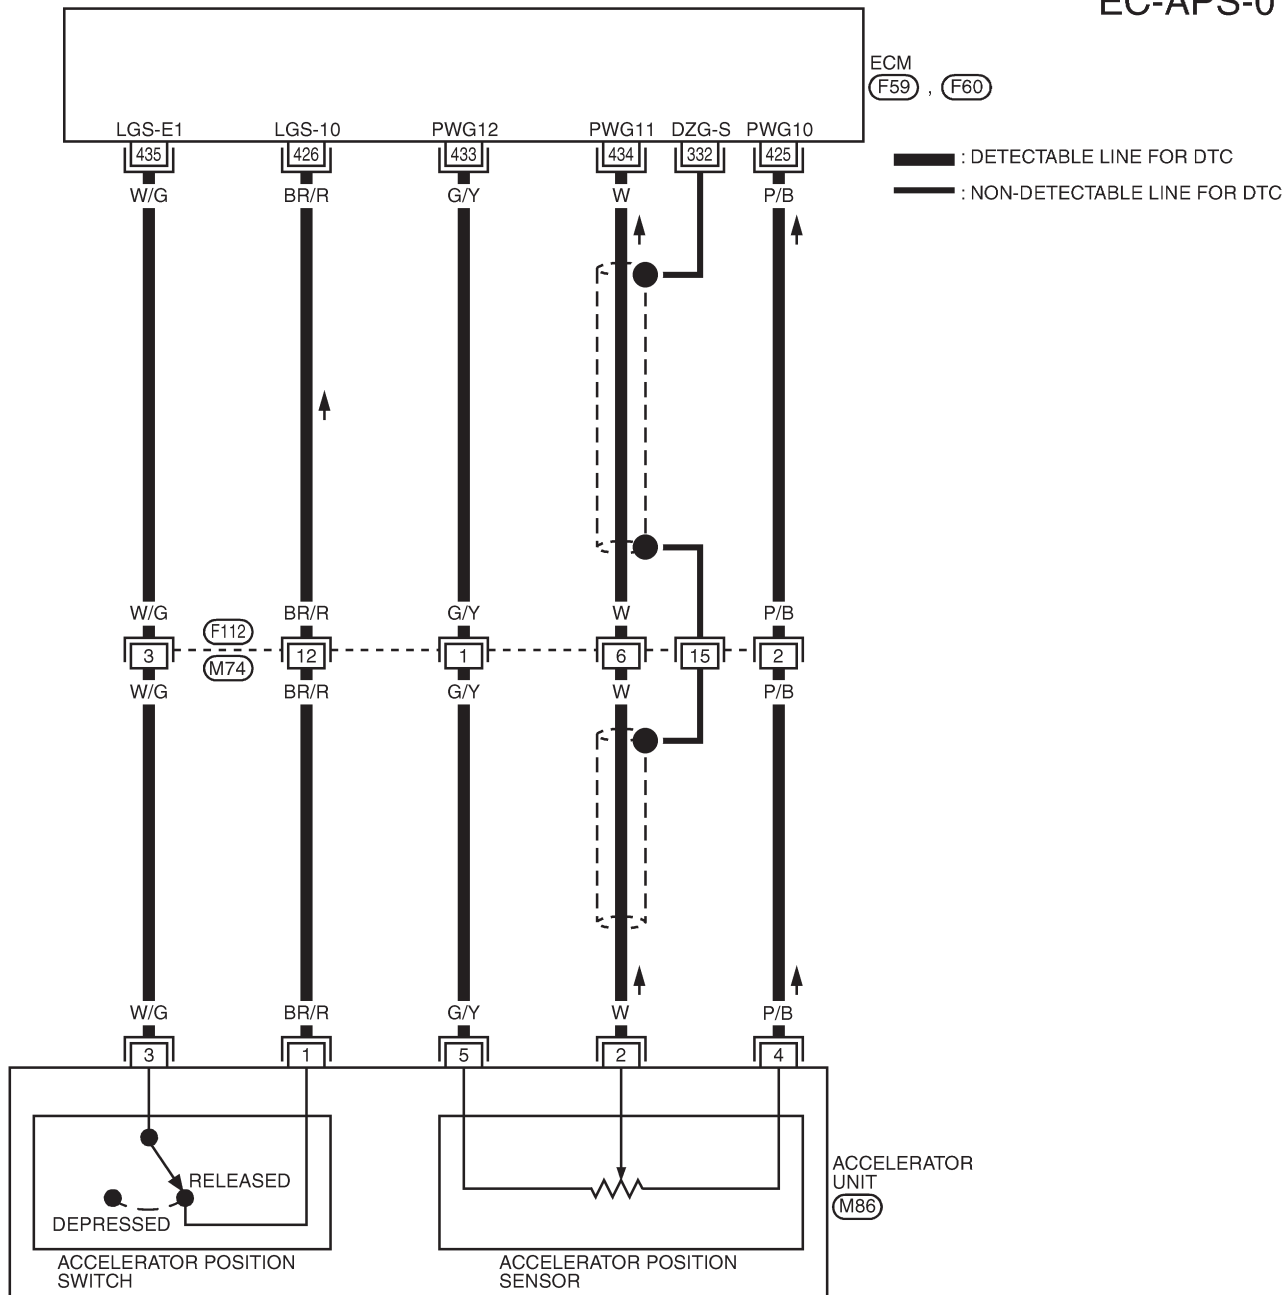

YEC012A

Diagnostic Procedure

NJEC0685

1	CHECK ACCELERATOR POSITION SENSOR FUNCTION
----------	---

With CONSULT-II

1. Turn ignition switch "ON".
2. Select "ACCEL POS SEN" in "DATA MONITOR" mode with CONSULT-II.
3. Check "ACCEL POS SEN" signal under the following conditions.


DATA MONITOR	
MONITOR	NO DTC
ACCEL POS SEN	XXX V

Conditions	ACCEL POS SEN
Accelerator pedal fully released	0.30 - 0.50V
Accelerator pedal fully depressed	3.0 - 4.3V

SEF436Z

Without CONSULT-II

1. Turn ignition switch "ON".
2. Check voltage between ECM terminal 434 and ground under the following conditions.

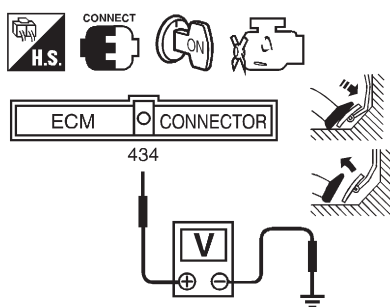

Conditions	Voltage
Accelerator pedal fully released	0.30 - 0.50V
Accelerator pedal fully depressed	3.0 - 4.3V

SEF437Z

OK or NG

OK	▶	GO TO 2.
NG	▶	GO TO 3.

DTC P0120 ACCEL POS SENSOR

YD

Diagnostic Procedure (Cont'd)

2 CHECK ACCELERATOR POSITION SWITCH FUNCTION

With CONSULT-II

1. Select "OFF ACCEL SW" in "DATA MONITOR" mode with CONSULT-II.
2. Check "OFF ACCEL SW" signal under the following conditions.


DATA MONITOR	
MONITOR	NO DTC
OFF ACCEL SW	ON

Conditions	OFF ACCEL SW
Accelerator pedal fully released	ON
Accelerator pedal depressed	OFF

SEF910Y

Without CONSULT-II

Check voltage between ECM terminal 435 and ground under the following conditions.

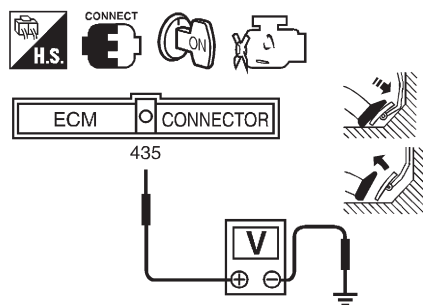

Conditions	Voltage (ECM terminal 435)
Accelerator pedal fully released	Approx. 0V
Accelerator pedal depressed	Battery voltage

SEF911Y



OK or NG

OK	▶	GO TO 16.
NG	▶	GO TO 11.

DTC P0120 ACCEL POS SENSOR

YD

Diagnostic Procedure (Cont'd)

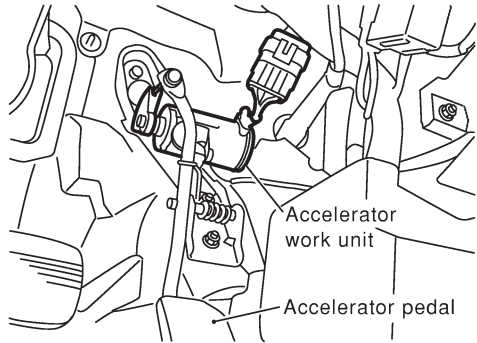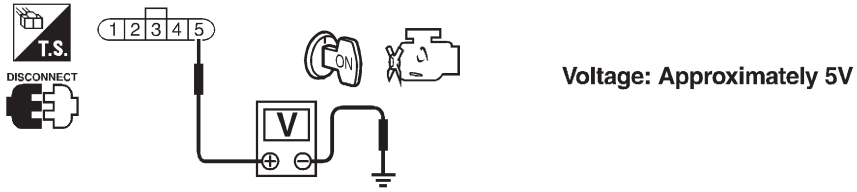3	CHECK ACCELERATOR POSITION SENSOR POWER SUPPLY CIRCUIT						
<p>1. Turn ignition switch "OFF". 2. Disconnect accelerator work unit harness connector.</p>  <p>Accelerator work unit Accelerator pedal</p> <p>3. Turn ignition switch "ON". 4. Check voltage between accelerator work unit terminal 5 and ground with CONSULT-II or tester.</p>  <p>Voltage: Approximately 5V</p> <p>OK or NG</p> <table border="1"><tr><td>OK</td><td>▶</td><td>GO TO 5.</td></tr><tr><td>NG</td><td>▶</td><td>GO TO 4.</td></tr></table>		OK	▶	GO TO 5.	NG	▶	GO TO 4.
OK	▶	GO TO 5.					
NG	▶	GO TO 4.					

SEF886Y


SEF897Y

4	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none">● Harness connectors F112, M74● Harness for open or short between ECM and accelerator work unit	
	▶ Repair harness or connectors.

DTC P0120 ACCEL POS SENSOR

YD

Diagnostic Procedure (Cont'd)

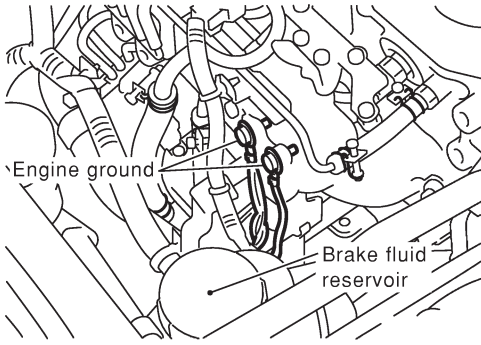5 CHECK ACCELERATOR POSITION SENSOR GROUND CIRCUIT FOR OPEN AND SHORT	
<p>1. Turn ignition switch "OFF".</p> <p>2. Loosen and retighten engine ground screw.</p>	
 <p>The diagram shows a top-down view of an engine compartment. A line points to a screw on the engine block labeled "Engine ground". Another line points to a reservoir labeled "Brake fluid reservoir".</p>	
<p>3. Check harness continuity between accelerator work unit terminal 4 and engine ground. Refer to Wiring Diagram. Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p>	
OK or NG	
OK	▶ GO TO 7.
NG	▶ GO TO 6.

SEF380Y

6 DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none">● Harness connectors F112, M74 or F103, M64● Harness for open or short between ECM and accelerator work unit	
	▶ Repair open circuit or short to ground or short to power in harness or connectors.

7 CHECK ACCELERATOR POSITION SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
<p>1. Disconnect ECM harness connector.</p> <p>2. Check harness continuity between ECM terminal 434 and accelerator work unit terminal 2. Refer to Wiring Diagram. Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p>	
OK or NG	
OK	▶ GO TO 9.
NG	▶ GO TO 8.


8 DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none">● Harness connectors F112, M74● Harness for open or short between ECM and accelerator work unit	
	▶ Repair open circuit or short to ground or short to power in harness or connectors.

DTC P0120 ACCEL POS SENSOR

YD

Diagnostic Procedure (Cont'd)



9	CHECK ACCELERATOR POSITION SENSOR													
<p> With CONSULT-II</p> <ol style="list-style-type: none"> 1. Reconnect all disconnected harness connectors. 2. Turn ignition switch "ON". 3. Select "DATA MONITOR" mode with CONSULT-II. 4. Check the indication of "ACCEL POS SEN" under the following conditions. 														
<table border="1" style="margin: 10px auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2">DATA MONITOR</th> </tr> <tr> <th>MONITOR</th> <th>NO DTC</th> </tr> </thead> <tbody> <tr> <td>ACCEL POS SEN</td> <td>XXX V</td> </tr> </tbody> </table> <table border="1" style="margin: 10px auto; border-collapse: collapse;"> <thead> <tr> <th>Conditions</th> <th>ACCEL POS SEN</th> </tr> </thead> <tbody> <tr> <td>Accelerator pedal fully released</td> <td>0.30 - 0.50V</td> </tr> <tr> <td>Accelerator pedal fully depressed</td> <td>3.0 - 4.3V</td> </tr> </tbody> </table>			DATA MONITOR		MONITOR	NO DTC	ACCEL POS SEN	XXX V	Conditions	ACCEL POS SEN	Accelerator pedal fully released	0.30 - 0.50V	Accelerator pedal fully depressed	3.0 - 4.3V
DATA MONITOR														
MONITOR	NO DTC													
ACCEL POS SEN	XXX V													
Conditions	ACCEL POS SEN													
Accelerator pedal fully released	0.30 - 0.50V													
Accelerator pedal fully depressed	3.0 - 4.3V													
SEF436Z														
OK or NG														
OK	▶	GO TO 16.												
NG	▶	Replace accelerator pedal assembly.												

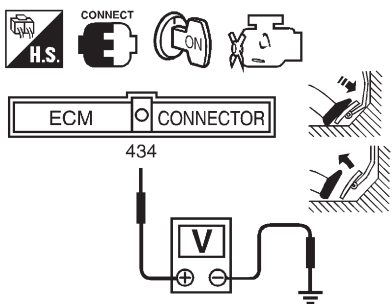10	CHECK ACCELERATOR POSITION SENSOR	
<p> Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Reconnect all disconnected harness connectors. 2. Turn ignition switch "ON". 3. Check voltage between ECM terminal 434 and ground under the following conditions. 		
		
SEF437Z		
OK or NG		
OK	▶	GO TO 16.
NG	▶	Replace accelerator pedal assembly.

DTC P0120 ACCEL POS SENSOR

YD

Diagnostic Procedure (Cont'd)

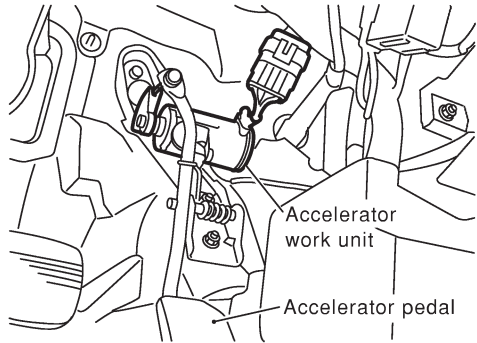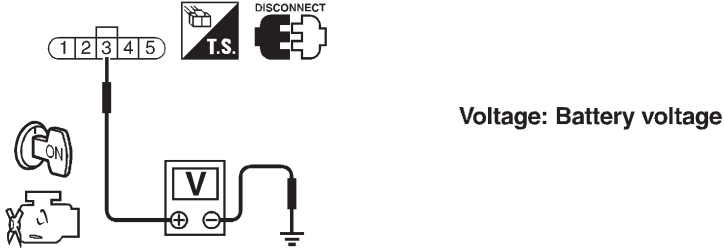11	CHECK ACCELERATOR POSITION SWITCH POWER SUPPLY CIRCUIT	
<p>1. Turn ignition switch "OFF". 2. Disconnect accelerator work unit harness connector.</p> <div style="text-align: center;">  <p style="margin-left: 150px;">Accelerator work unit</p> <p style="margin-left: 150px;">Accelerator pedal</p> </div> <p style="text-align: right;">SEF886Y</p> <p>3. Turn ignition switch "ON". 4. Check voltage between accelerator work unit terminal 3 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  <p style="margin-left: 150px;">Voltage: Battery voltage</p> </div> <p style="text-align: right;">SEF912Y</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 13.
NG	▶	GO TO 12.

12	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M74, F112 ● Harness for open or short between accelerator work unit and ECM 		
▶		Repair harness or connectors.


13	CHECK ACCELERATOR POSITION SWITCH GROUND CIRCUIT FOR OPEN AND SHORT	
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between accelerator work unit terminal 1 and ECM terminal 426. Refer to Wiring Diagram. Continuity should exist. 4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 15.
NG	▶	GO TO 14.

14	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M74, F112 ● Harness for open or short between ECM and accelerator work unit 		
▶		Repair open circuit or short to ground or short to power in harness or connectors.

DTC P0120 ACCEL POS SENSOR

YD

Diagnostic Procedure (Cont'd)

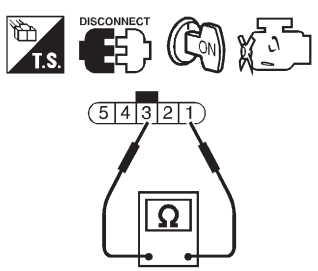
15	CHECK ACCELERATOR POSITION SWITCH								
Check continuity between accelerator position switch terminals 1 and 3 under the following conditions.									
	<table border="1"><thead><tr><th colspan="2">Between terminals 1 and 3</th></tr><tr><th>Conditions</th><th>Continuity</th></tr></thead><tbody><tr><td>Accelerator pedal fully released</td><td>Should exist.</td></tr><tr><td>Accelerator pedal depressed</td><td>Should not exist.</td></tr></tbody></table>	Between terminals 1 and 3		Conditions	Continuity	Accelerator pedal fully released	Should exist.	Accelerator pedal depressed	Should not exist.
Between terminals 1 and 3									
Conditions	Continuity								
Accelerator pedal fully released	Should exist.								
Accelerator pedal depressed	Should not exist.								
SEF913Y									
OK or NG									
OK	▶ GO TO 16.								
NG	▶ Replace accelerator pedal assembly.								

16	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-559.	
	▶ INSPECTION END

DTC P0335 CRANK POS SEN (TDC)

YD

Description

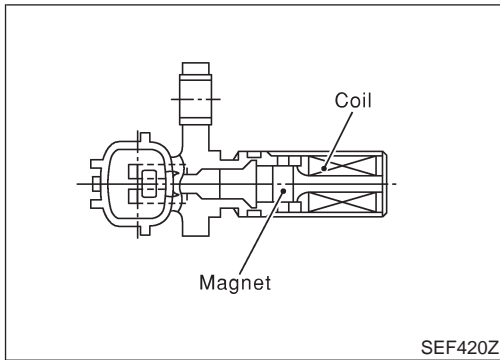

Description

The crankshaft position sensor (TDC) monitors engine speed by means of signals from the sensing plate (with three protrusions) installed to the crankshaft pulley. The datum signal output is detected at ATDC 10° and sent to the ECM. The sensor signal is used for fuel injection control and fuel injection timing control.

NJEC0686

CONSULT-II Reference Value in Data Monitor Mode

NJEC0687

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
CKPS-RPM (TDC)	<ul style="list-style-type: none"> Tachometer: Connect Run engine and compare tachometer indication with the CONSULT-II value. 	Almost the same speed as the CONSULT-II value.

ECM Terminals and Reference Value

NJEC0688

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA(DC Voltage and Pulse Signal)
331	OR	Crankshaft position sensor (TDC) ground	[Engine is running] <ul style="list-style-type: none"> Warm-up condition Idle speed 	Approximately 0V
344	W	Crankshaft position sensor (TDC)	[Engine is running] <ul style="list-style-type: none"> Warm-up condition Idle speed 	Approximately 0V
			[Engine is running] <ul style="list-style-type: none"> Warm-up condition Engine speed is 2,000 rpm 	Approximately 0V

On Board Diagnosis Logic

NJEC0689

DTC	Malfunction is detected when ...	Check Items (Possible Cause)
P0335 0407	<ul style="list-style-type: none"> An improper signal from the sensor is sent to ECM during engine running and cranking. 	<ul style="list-style-type: none"> Harness or connectors (The sensor circuit is open.) Crankshaft position sensor (TDC)

2	DATA MONITOR	
	MONITOR	NO DTC
	CKPS-RPM (TDC)	XXX rpm

SEF817Y

DTC Confirmation Procedure

NJEC0690

Before performing the following procedure, confirm that battery voltage is more than 10V.

WITH CONSULT-II

NJEC0690S01

- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT-II.
- 2) Crank engine for at least 1 second.
- 3) Start engine and run it for at least 2 seconds at idle speed.
- 4) If DTC is detected, go to "Diagnostic Procedure", EC-590.

WITHOUT CONSULT-II

NJEC0690S02


- 1) Crank engine for at least 1 second.
- 2) Start engine and run it for at least 2 seconds at idle speed.
- 3) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 4) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.
- 5) If DTC is detected, go to "Diagnostic Procedure", EC-590.

DTC P0335 CRANK POS SEN (TDC)

Wiring Diagram

NJEC0691

EC-CKPS-01

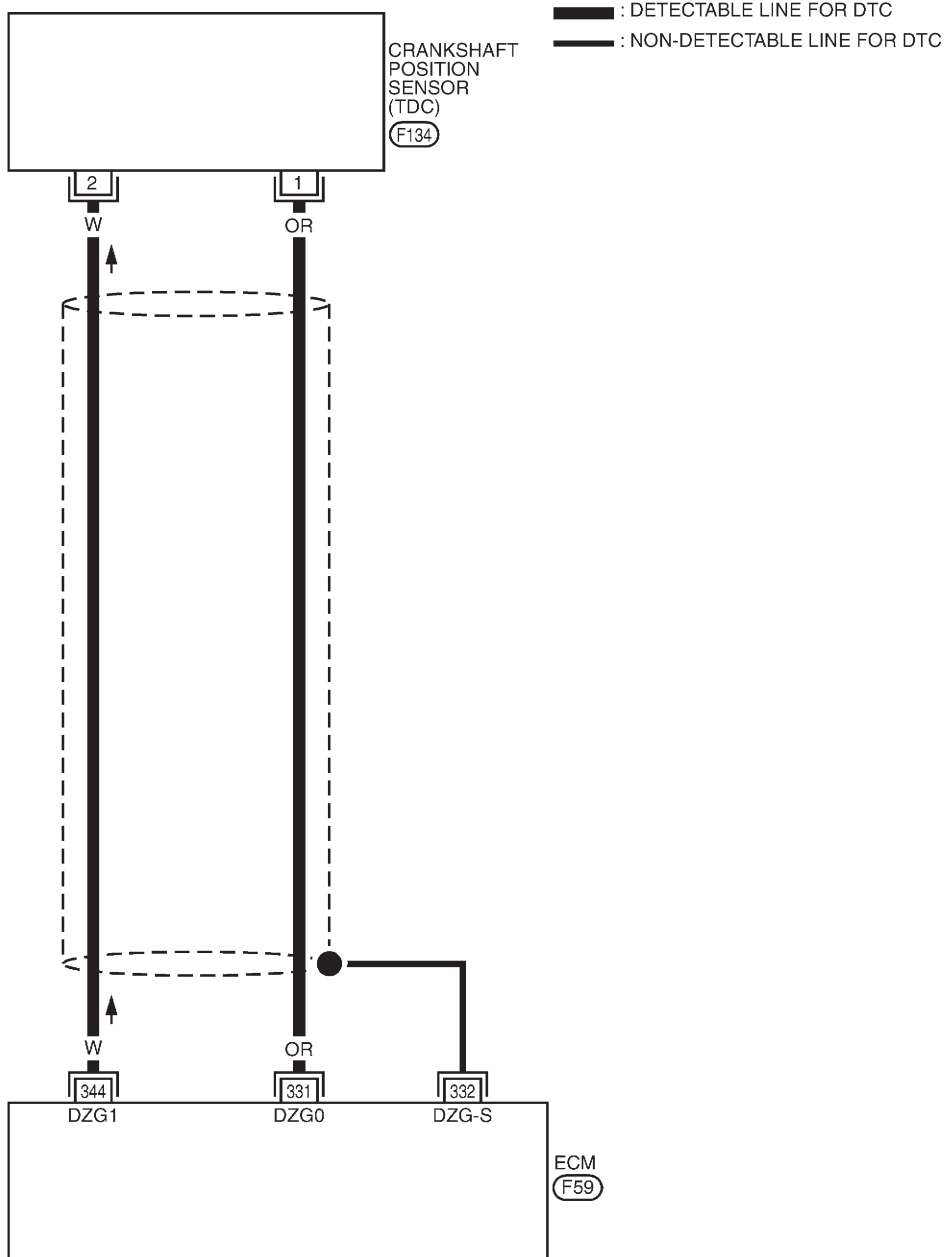

340	341	342	343	344	345	346	347	348	349	350	351	352
327	328	329	330	331	332	333	334	335	336	337	338	339
314	315	316	317	318	319	320	321	322	323	324	325	326
301	302	303	304	305	306	307	308	309	310	311	312	313




Diagnostic Procedure


NJEC0692

1	CHECK CRANKSHAFT POSITION SENSOR (TDC) GROUND CIRCUIT FOR OPEN AND SHORT
----------	---

1. Turn ignition switch "OFF".
2. Loosen and retighten engine ground screws.

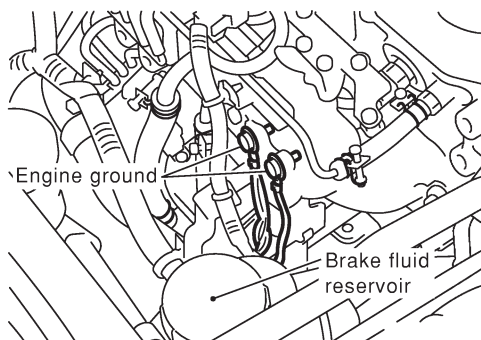
SEF380Y

3. Disconnect crankshaft position sensor (TDC) harness connector and ECM harness connector.

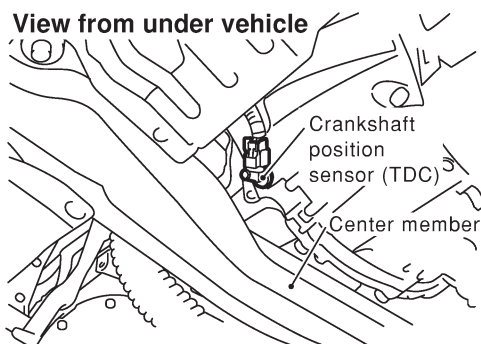
SEF387Y

4. Check harness continuity between ECM terminal 331 and crankshaft position sensor (TDC) terminal 1. Refer to Wiring Diagram.
Continuity should exist.
5. Also check harness for short to ground and short to power.

OK or NG

OK	▶	GO TO 2.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

2	CHECK CRANKSHAFT POSITION SENSOR (TDC) INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT
----------	---

1. Check harness continuity between crankshaft position sensor (TDC) terminal 2 and ECM terminal 344. Refer to Wiring Diagram.
Continuity should exist.
2. Also check harness for short to ground and short to power.


OK or NG


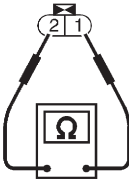
OK	▶	GO TO 3.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

DTC P0335 CRANK POS SEN (TDC)

YD

Diagnostic Procedure (Cont'd)

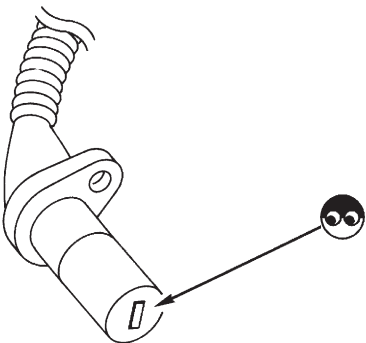

3		CHECK CRANKSHAFT POSITION SENSOR (TDC)-I
<p>1. Loosen the fixing bolt and remove the crankshaft position sensor (TDC). 2. Visually check the sensor for chipping.</p>		
		
SEF620S		
OK or NG		
OK	▶	GO TO 4.
NG	▶	Replace crankshaft position sensor (TDC).

4		CHECK CRANKSHAFT POSITION SENSOR (TDC)-II
<p>1. Disconnect crankshaft position sensor (TDC) harness connector. 2. Check resistance between crankshaft position sensor (TDC) terminals 1 and 2.</p>		
		
		
Resistance: 495 - 605Ω [at 20°C (68°F)]		
SEF408Y		
OK or NG		
OK	▶	GO TO 5.
NG	▶	Replace crankshaft position sensor (TDC).

DTC P0335 CRANK POS SEN (TDC)


YD

Diagnostic Procedure (Cont'd)

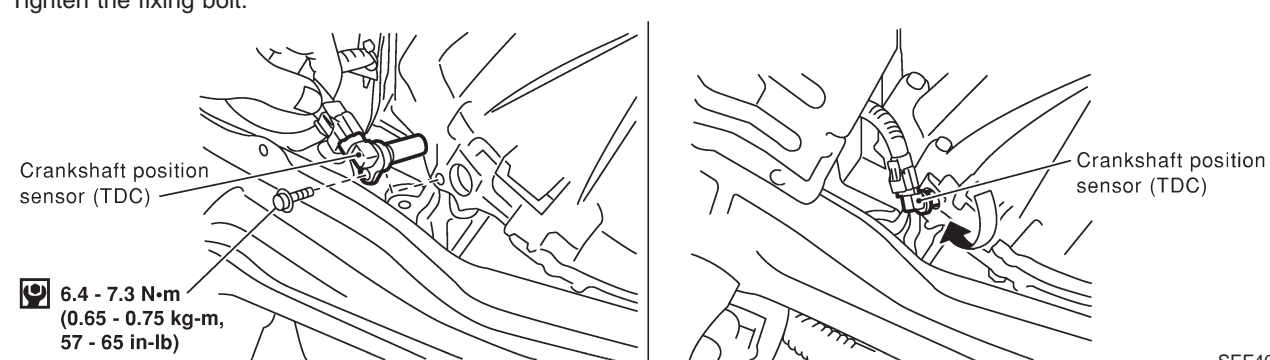5	INSTALL CRANKSHAFT POSITION SENSOR (TDC)
<ol style="list-style-type: none">1. Install crankshaft position sensor (TDC) and temporarily tighten the fixing bolt.2. Turn crankshaft position sensor (TDC) clockwise until it stops.3. Tighten the fixing bolt.	
 <p>Crankshaft position sensor (TDC)</p> <p> 6.4 - 7.3 N·m (0.65 - 0.75 kg·m, 57 - 65 in·lb)</p> <p>Crankshaft position sensor (TDC)</p> <p>SEF409Y</p>	
<p>▶ GO TO 6.</p>	

6	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-559.	
<p>▶ INSPECTION END</p>	

DTC P0500 VEHICLE SPEED SEN

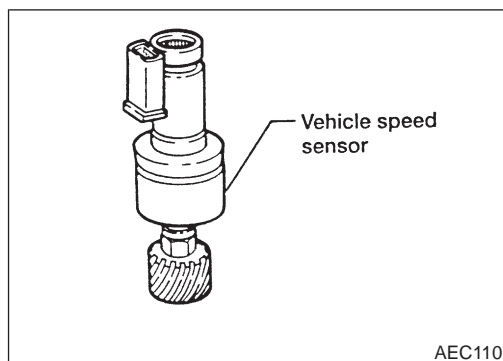

Description

The vehicle speed sensor is installed in the transaxle. It contains a pulse generator which provides a vehicle speed signal to the speedometer. The speedometer then sends a signal to the ECM.

NJEC0654

ECM Terminals and Reference Value

Specification data are reference values and are measured between each terminal and ground.

NJEC0655

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage and Pulse Signal)
417	PU/R	Vehicle speed sensor	[Engine is running] <ul style="list-style-type: none"> ● Lift up the vehicle. ● In 1st gear position ● Vehicle speed is 10 km/h (6 MPH) 	Approximately 8V <p style="text-align: right;"><small>SEF891Y</small></p>
			[Engine is running] <ul style="list-style-type: none"> ● Lift up the vehicle. ● In 2nd gear position ● Vehicle speed is 30 km/h (19 MPH) 	Approximately 6V <p style="text-align: right;"><small>SEF892Y</small></p>

On Board Diagnosis Logic

NJEC0656

DTC	Malfunction is detected when ...	Check Items (Possible Cause)
P0500 0104	<ul style="list-style-type: none"> ● The almost 0 km/h (0 MPH) signal from vehicle speed sensor is sent to ECM even when vehicle is being driven. 	<ul style="list-style-type: none"> ● Harness or connector (The vehicle speed sensor circuit is open or shorted.) ● Vehicle speed sensor

DATA MONITOR

MONITOR	NO DTC
CKPS-RPM (TDC) XXX rpm	
VHCL SPEED SE XXX km/h	
P/N POSI SW OFF	

SEF864Y

Overall Function Check

NJEC0657

Use this procedure to check the overall function of the vehicle speed sensor circuit. During this check, a DTC might not be confirmed.

WITH CONSULT-II

NJEC0657S01

- 1) Lift up the vehicle.
- 2) Start engine.
- 3) Read vehicle speed sensor signal in "DATA MONITOR" mode with CONSULT-II.

The vehicle speed on CONSULT-II should be able to

DTC P0500 VEHICLE SPEED SEN

YD

Overall Function Check (Cont'd)

exceed 10 km/h (6 MPH) when rotating wheels with suitable gear position.

- 4) If NG, go to "Diagnostic Procedure", EC-596.

⊗ WITHOUT CONSULT-II

NJEC0657S02

- 1) Lift up the vehicle.
- 2) Start engine.
- 3) Read the voltage signal for the vehicle speed sensor with an oscilloscope. Refer to "ECM Terminals and Reference Value", EC-593.
- 4) Verify that the oscilloscope screen shows the signal wave as shown at "ECM Terminals and Reference Value", EC-593.
- 5) If NG, go to "Diagnostic Procedure", EC-596.

DTC P0500 VEHICLE SPEED SEN



YD

Wiring Diagram

Wiring Diagram

NJEC0658

EC-VSS-01

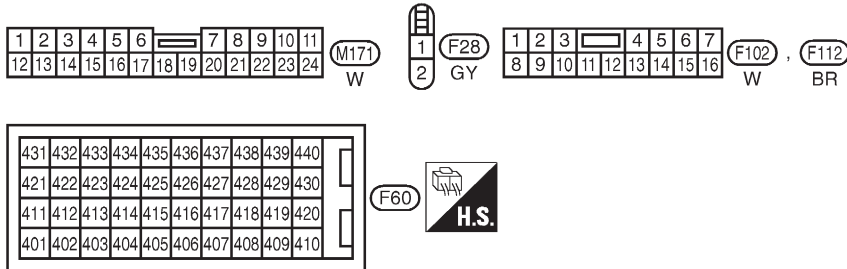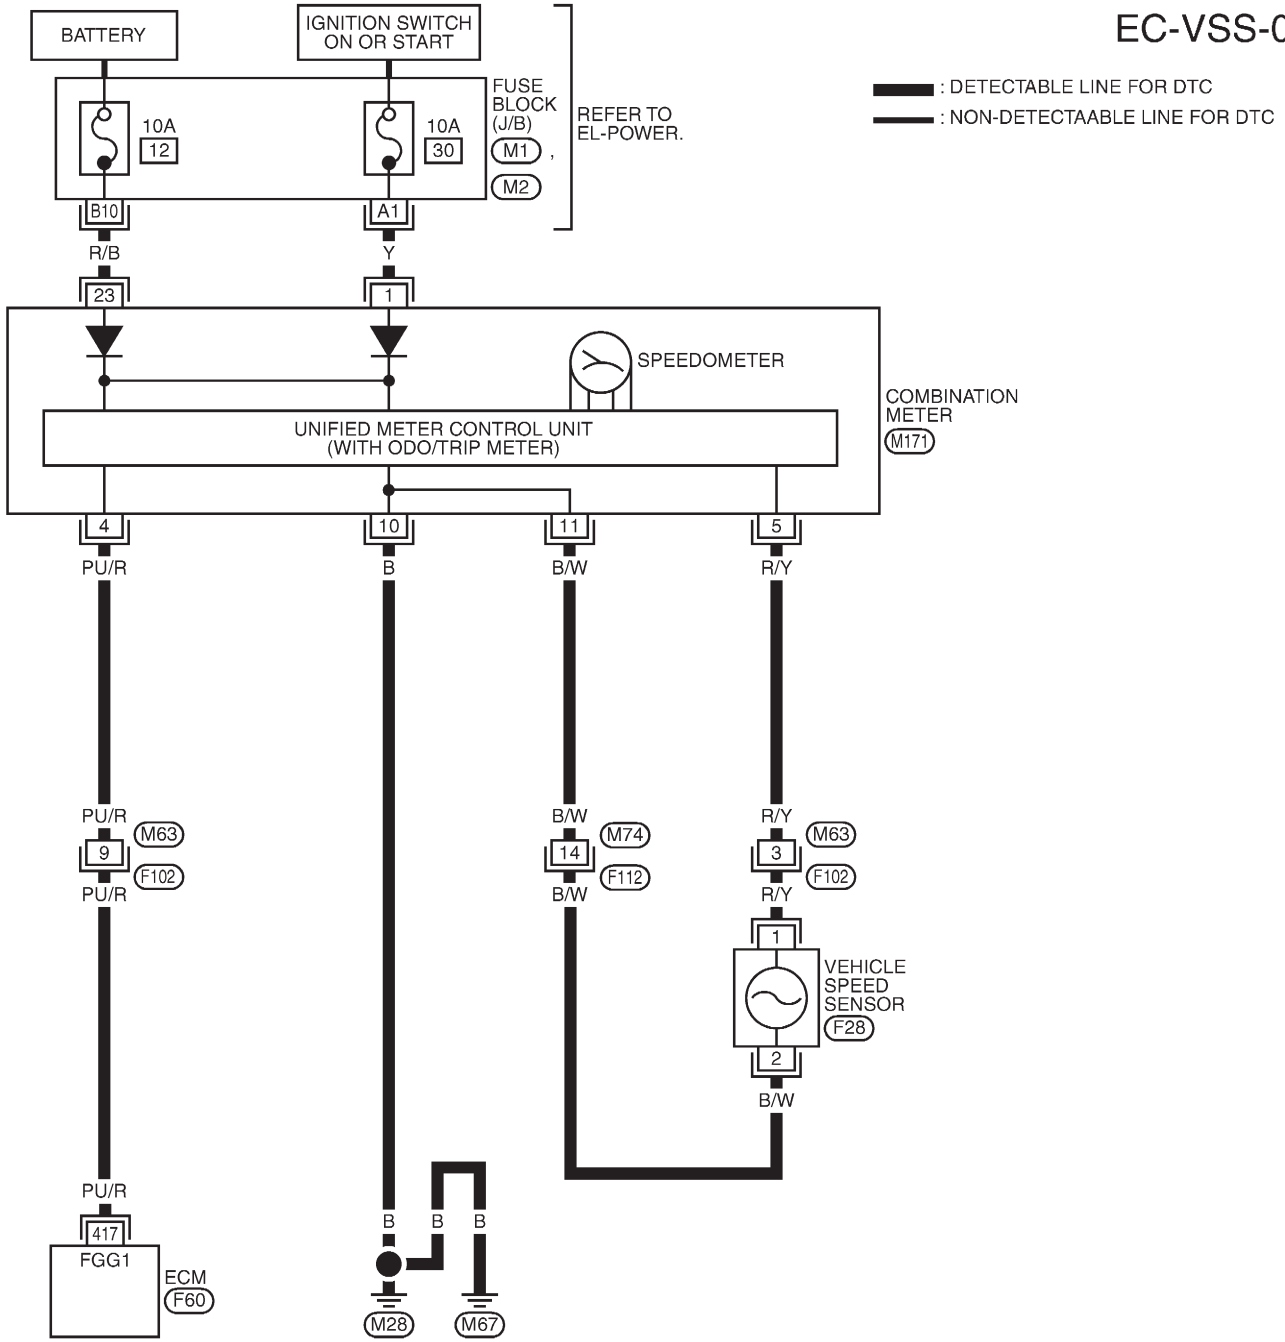

REFER TO THE FOLLOWING.
 (M1), (M2) - FUSE BLOCK-
 JUNCTION BOX (J/B)

YEC014A

DTC P0500 VEHICLE SPEED SEN

YD

Diagnostic Procedure

Diagnostic Procedure

NJEC0659

1	CHECK VEHICLE SPEED SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT
1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector and combination meter harness connector. 3. Check harness continuity between ECM terminal 417 and combination meter terminal 4. Refer to Wiring Diagram. Continuity should exist. 4. Also check harness for short to ground and short to power. <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 3.
NG	▶ GO TO 2.

2	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none">● Harness connectors M63, F102● Harness for open or short between ECM and combination meter	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

3	CHECK SPEEDOMETER FUNCTION
Make sure that speedometer functions properly. <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 5.
NG	▶ GO TO 4.


4	CHECK SPEEDOMETER CIRCUIT FOR OPEN AND SHORT
Check the following. <ul style="list-style-type: none">● Harness connectors M63, F102● Harness for open or short between vehicle speed sensor and engine ground● Harness for open or short between combination meter and vehicle speed sensor <p style="text-align: center;">OK or NG</p>	
OK	▶ Check vehicle speed sensor and combination meter. Refer to EL section.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

5	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-559.	
▶	INSPECTION END

DTC P0571 BRAKE SW

YD

Description

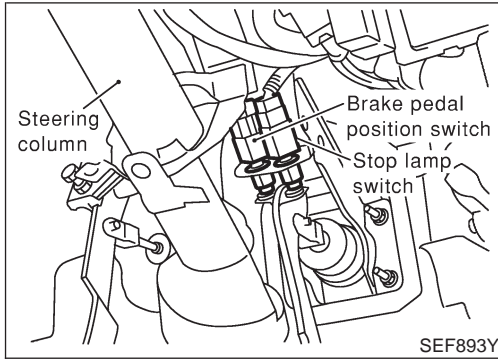

Description

The stop lamp switch is installed to brake pedal bracket. The switch senses brake pedal position and sends an ON-OFF signal to the ECM. The ECM uses the signal to control the fuel injection control system.

NJEC0738

ECM Terminals and Reference Value

Specification data are reference values and are measured between each terminal and ground.

NJEC0739

CAUTION:


Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
405	R/G	Stop lamp switch	[Ignition switch "ON"] ● Brake pedal fully released	Approximately 0V
			[Ignition switch "ON"] ● Brake pedal depressed	BATTERY VOLTAGE (11 - 14V)
416	Y/B	Brake pedal position switch	[Ignition switch "ON"] ● Brake pedal fully released	BATTERY VOLTAGE (11 - 14V)
			[Ignition switch "ON"] ● Brake pedal depressed	Approximately 0V

On Board Diagnosis Logic

NJEC0740

DTC	Malfunction is detected when ...	Check Items (Possible Cause)
P1571 0807	● An irregular voltage signal from the switch is sent to ECM.	● Harness or connectors (The stop lamp switch circuit is open or shorted.) ● Stop lamp switch

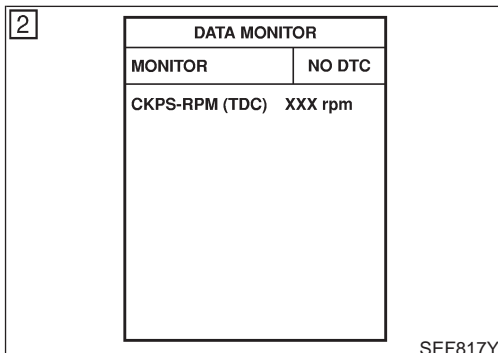

DTC Confirmation Procedure

NJEC0741

Ⓜ WITH CONSULT-II

NJEC0741S01

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Depress and release brake pedal more than 10 times.
- 4) If DTC is detected, go to "Diagnostic Procedure", EC-600.

ⓧ WITHOUT CONSULT-II

NJEC0741S02

- 1) Turn ignition switch "ON".
- 2) Depress and release brake pedal more than 10 times.

DTC P0571 BRAKE SW

YD

DTC Confirmation Procedure (Cont'd)

- 3) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 4) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.
- 5) If DTC is detected, go to "Diagnostic Procedure", EC-600.


Wiring Diagram

NJE0742


EC-BRK/SW-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC


REFER TO EL-POWER.

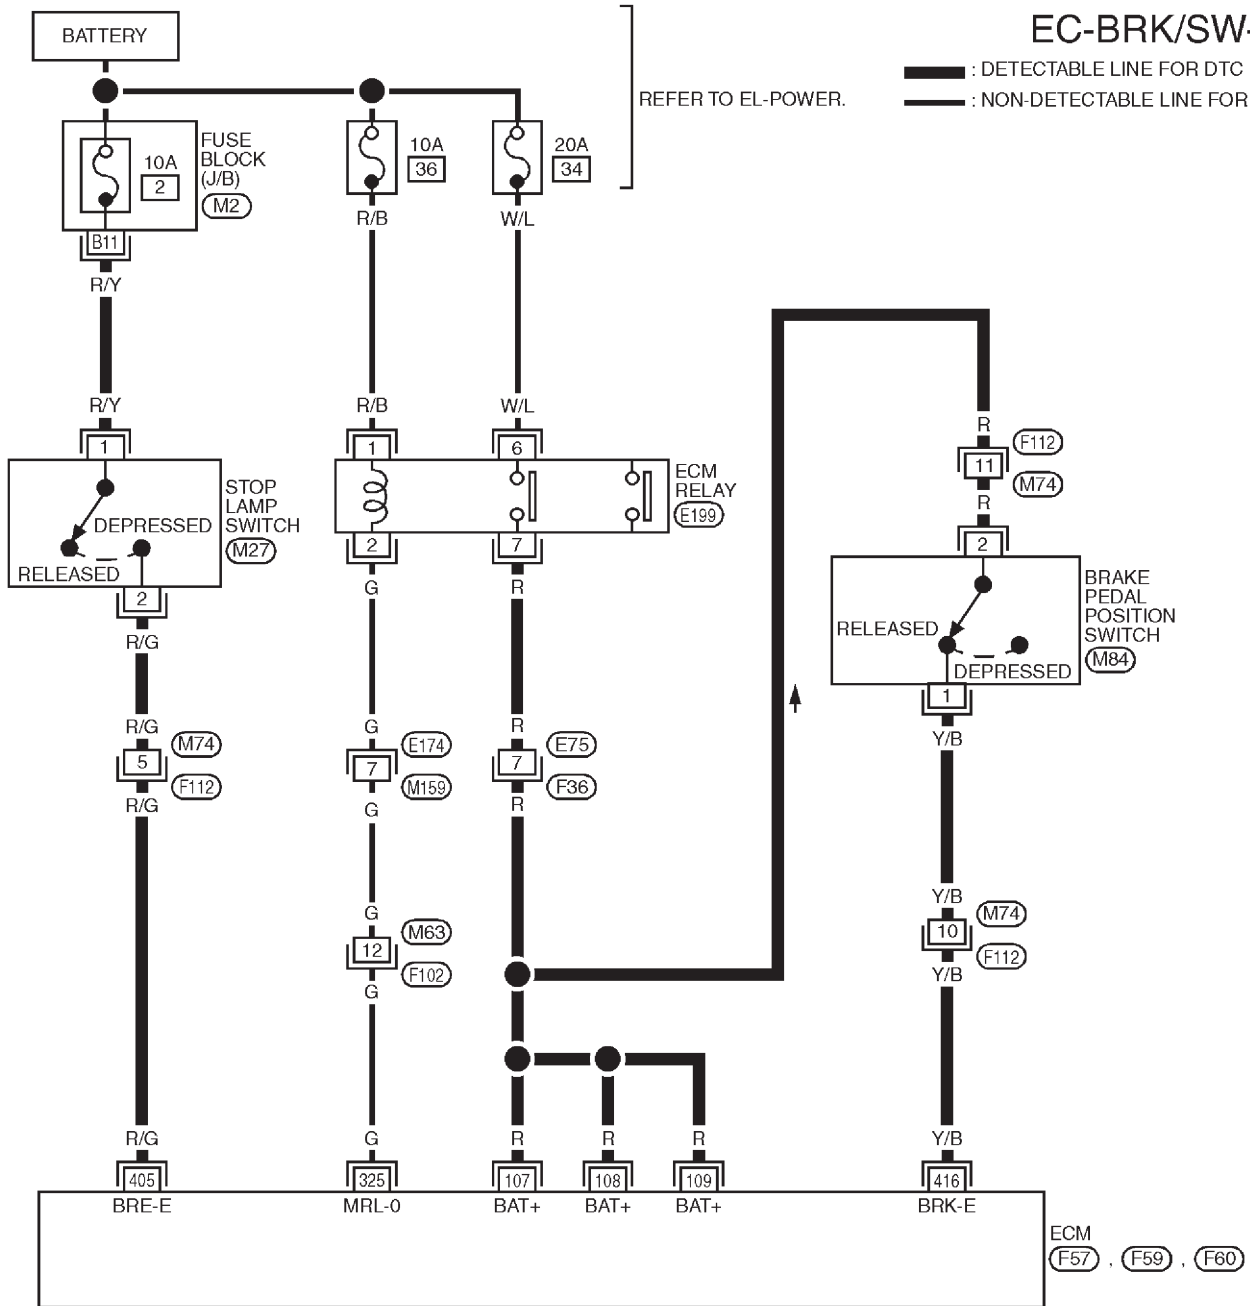

ECM
 (F57) , (F59) , (F60)






REFER TO THE FOLLOWING.
 (M2) - FUSE BLOCK-
 JUNCTION BOX (J/B)

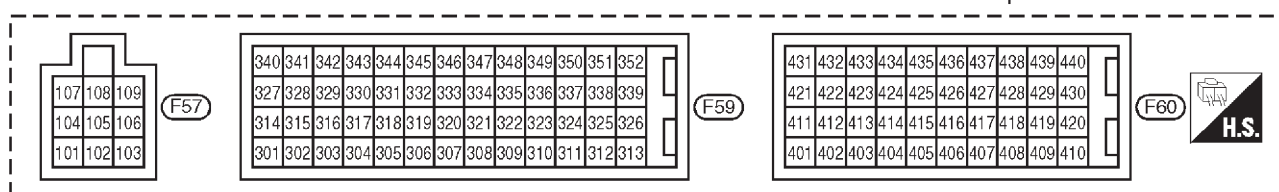


Diagnostic Procedure

NJEC0743


1	CHECK STOP LAMP SWITCH CIRCUIT							
1. Turn ignition switch "OFF". 2. Check the stop lamp when depressing and releasing the stop lamp switch.								
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Stop lamp switch</td> <td style="padding: 2px;">Stop lamp</td> </tr> <tr> <td style="padding: 2px;">Fully released</td> <td style="padding: 2px;">Not illuminated</td> </tr> <tr> <td style="padding: 2px;">Depressed</td> <td style="padding: 2px;">Illuminated</td> </tr> </table>			Stop lamp switch	Stop lamp	Fully released	Not illuminated	Depressed	Illuminated
Stop lamp switch	Stop lamp							
Fully released	Not illuminated							
Depressed	Illuminated							
MTBL0443								
OK or NG								
OK	▶	GO TO 4.						
NG	▶	GO TO 2.						

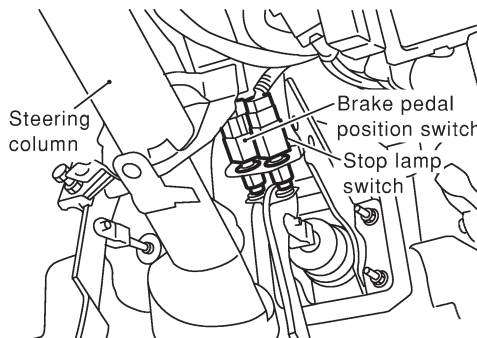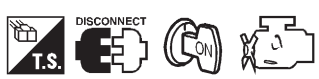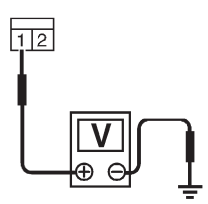2	CHECK STOP LAMP SWITCH POWER SUPPLY CIRCUIT	
1. Disconnect stop lamp switch harness connector.		
		
SEF893Y		
2. Check voltage between stop lamp switch terminal 1 and ground with CONSULT-II or tester.		
		
		
Voltage: Battery voltage		
SEF435Y		
OK or NG		
OK	▶	GO TO 4.
NG	▶	GO TO 3.



3	DETECT MALFUNCTIONING PART	
Check the following.		
<ul style="list-style-type: none"> ● Fuse block (J/B) connector M2 ● 10A fuse ● Harness for open and short between stop lamp switch and fuse 		
▶		
Repair open circuit or short to ground or short to power in harness or connectors.		

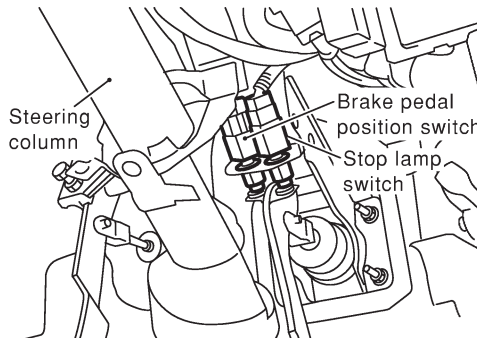4	CHECK STOP LAMP SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Disconnect stop lamp switch harness connector.</p>		
		
SEF893Y		
<p>4. Check harness continuity between ECM terminal 405 and stop lamp switch terminal 2. Refer to Wiring Diagram. Continuity should exist.</p> <p>5. Also check harness for short to ground and short to power.</p>		
OK or NG		
OK	▶	GO TO 6.
NG	▶	GO TO 5.

5	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M74, F112 ● Harness for open or short between ECM and stop lamp switch 		
▶ Repair open circuit or short to ground or short to power in harness or connectors.		

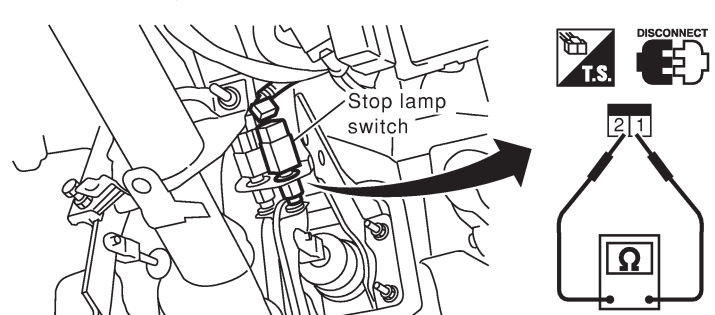6	CHECK STOP LAMP SWITCH	
<p>Check continuity between stop lamp switch terminals 1 and 2 under the following conditions.</p>		
		
SEF904Y		
OK or NG		
OK	▶	GO TO 7.
NG	▶	Replace stop lamp switch.

Conditions	Continuity
Brake pedal fully released	Should not exist.
Brake pedal depressed	Should exist.

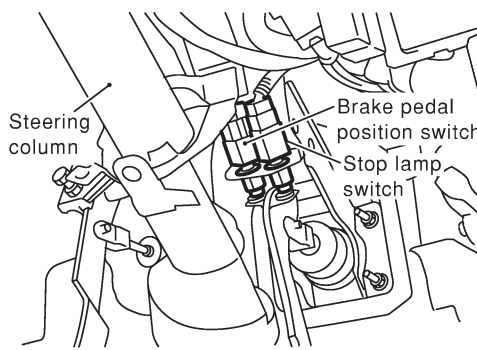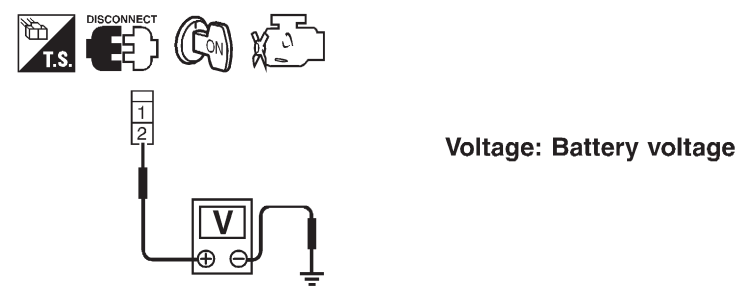7	CHECK BRAKE PEDAL POSITION SWITCH POWER SUPPLY CIRCUIT
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect brake pedal position switch harness connector. 	
	
SEF893Y	
<ol style="list-style-type: none"> 3. Turn ignition switch "ON". 4. Check voltage between brake pedal position switch terminal 2 and ground with CONSULT-II or tester. 	
	
SEF905Y	
OK or NG	
OK	▶ GO TO 9.
NG	▶ GO TO 8.

8	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none"> ● Harness connectors M74, F112 ● Harness connector E75, F36 ● Harness for open and short between brake pedal position switch and ECM relay ● Harness for open and short between brake pedal position switch and ECM 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.


9	CHECK BRAKE PEDAL POSITION SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 416 and brake pedal position switch terminal 1. Refer to Wiring Diagram. Continuity should exist. 4. Also check harness for short to ground and short to power. 	
OK or NG	
OK	▶ GO TO 11.
NG	▶ GO TO 10.

DTC P0571 BRAKE SW

YD


Diagnostic Procedure (Cont'd)

10	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none"> ● Harness connectors M74, F112 ● Harness for open or short between ECM and brake pedal position switch 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

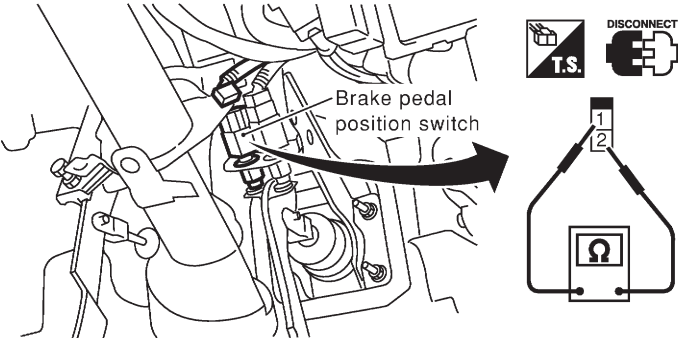11	CHECK BRAKE PEDAL POSITION SWITCH
Check continuity between brake pedal position switch terminals 1 and 2 under the following conditions.	
	
SEF906Y	
OK or NG	
OK	▶ GO TO 12.
NG	▶ Replace brake pedal position switch.

12	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-559.	
▶	INSPECTION END

Description

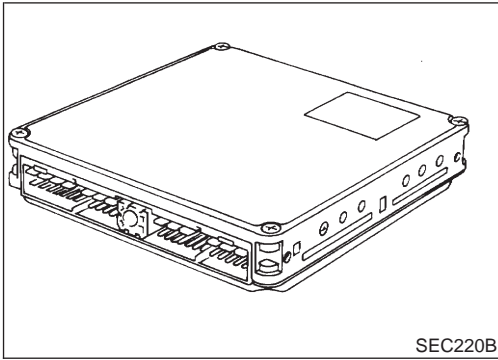


Description

The ECM consists of a microcomputer and connectors for signal input and output and for power supply. The unit controls the engine. NJEC0734

On Board Diagnosis Logic

NJEC0735

DTC	Malfunction is detected when ...	Check Items (Possible Cause)
P1107 0802	<ul style="list-style-type: none"> An excessively high or low voltage from the absolute pressure sensor (built-into ECM) is sent to ECM. 	<ul style="list-style-type: none"> ECM (ECCS-D control module)

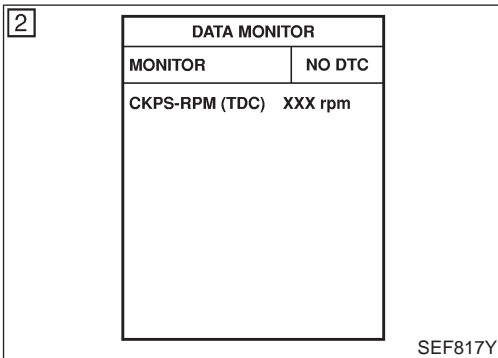

DTC Confirmation Procedure

NJEC0736

WITH CONSULT-II

NJEC0736S01

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and wait at least 2 seconds.
- 4) If DTC is detected, go to "Diagnostic Procedure", EC-605.

WITHOUT CONSULT-II

NJEC0736S02


- 1) Turn ignition switch "ON" and wait at least 2 seconds.
- 2) Start engine and wait at least 2 seconds.
- 3) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 4) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.
- 5) If DTC is detected, go to "Diagnostic Procedure", EC-605.

Diagnostic Procedure

NJEC0737

1	INSPECTION START	
<p><input checked="" type="checkbox"/> With CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch "ON". 2. Select "SELF DIAG RESULTS" mode with CONSULT-II. 3. Touch "ERASE". 4. Perform "DTC Confirmation Procedure", EC-604, again. 5. Is the DTC P1107 displayed again? 		
<p><input type="checkbox"/> Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch "ON". 2. Erase the Diagnostic Test Mode II (Self-diagnostic results) memory. 3. Perform "DTC Confirmation Procedure", EC-604, again. 4. Perform "Diagnostic Test Mode II (Self-diagnostic results)". 5. Is the DTC 0802 displayed again? 		
Yes or No		
Yes	▶▶	Replace ECM.
No	▶▶	INSPECTION END

Description

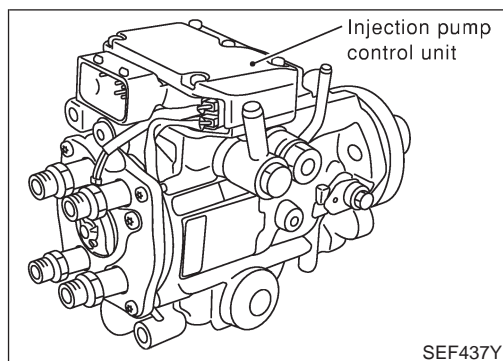

Description

NJEC0672

SYSTEM DESCRIPTION

NJEC0672S01

The ECM and the electronic control fuel injection pump control unit (abbreviated as the injection pump control unit) perform the real time communication (signal exchange).

The ECM transmits the signals of the target fuel injection amount, target fuel injection timing, and engine speed, etc., and receives the signals of the pump speed and fuel temperature, etc. from the injection pump control unit.

By those signals, the injection pump controls the optimum fuel injection amount and injection timing of the spill valve and timing control valve.

The injection pump control unit has an on board diagnostic system, which detects malfunctions related to sensors or actuators built-into electronic control fuel injection pump. These malfunction information are transferred through the line (circuit) from injection pump control unit to ECM.

FUEL INJECTION AMOUNT CONTROL

NJEC0672S02

In accordance with the target fuel injection amount signal from the ECM, the injection amount is controlled by controlling the spill valve in the injection pump and by changing the needle opening time.

FUEL INJECTION TIMING CONTROL

NJEC0672S03

Based on the target fuel injection timing signal from the ECM, the injection timing is controlled in accordance with the timer spring by performing the duty control of the timing control valve in the injection pump and by adjusting the pressure of the timer piston high pressure chamber.

FUEL TEMPERATURE SENSOR

NJEC0672S04

The sensor detects the fuel temperature in the injection pump and calibrates the injection amount change by the fuel temperature.

CAMSHAFT POSITION SENSOR

NJEC0672S05

The sensor detects the passing of the protrusion on the sensor wheel in the injection pump by the semiconductor magnetic resistance element sensor. The camshaft position sensor synchronizes with the cam ring, and detects the actual advance amount. The injection pump control unit measures the injection pump revolution by the signal of the camshaft position sensor.

CONSULT-II Reference Value in Data Monitor Mode

NJEC0673

Remarks: Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
FUEL TEMP SEN	● Engine: After warming up	More than 40°C (104°F)
SPILL/V	● Engine: After warming up, idle the engine.	Approx. 12 - 13°C
INT/A VOLUME	● Engine: After warming up, idle the engine.	Approx. 150 - 450 mg/st
F/CUT SIGNAL	● Engine: After warming up	Idle ON

DTC P1180 P9-FUEL TEMP SEN

YD

CONSULT-II Reference Value in Data Monitor Mode (Cont'd)

MONITOR ITEM	CONDITION	SPECIFICATION
BARO SEN	<ul style="list-style-type: none"> ● Ignition switch: ON 	Altitude Approx. 0 m (0 ft): Approx. 100.62 kPa (1.0062 bar, 1.026 kg/cm ² , 14.59 psi) Approx. 1,000 m (3,281 ft): Approx. 88.95 kPa (0.8895 bar, 0.907 kg/cm ² , 12.90 psi) Approx. 1,500 m (4,922 ft): Approx. 83.16 kPa (0.8316 bar, 0.848 kg/cm ² , 12.06 psi) Approx. 2,000 m (6,562 ft): Approx. 78.36 kPa (0.7836 bar, 0.799 kg/cm ² , 11.36 psi)

ECM Terminals and Reference Value

NJEC0674

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
313	L/W	Electronic control fuel injection pump	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0.1V
314	L/R	Electronic control fuel injection pump	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0.4V
316	PU	Electronic control fuel injection pump	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 2.5V
317	P	Electronic control fuel injection pump	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 2.5V

On Board Diagnosis Logic

NJEC0675

DTC	Malfunction is detected when	Check Items (Possible cause)
P1180 0402	<ul style="list-style-type: none"> ● An improper voltage signal from fuel temperature sensor (Built-into electronic control fuel injection pump) is sent to injection pump control unit. 	<ul style="list-style-type: none"> ● Harness or connectors (Electronic control fuel injection pump circuit is open or shorted.) ● Electronic control fuel injection pump

DATA MONITOR

MONITOR	NO DTC
CKPS-RPM (TDC) XXX rpm	

SEF817Y

DTC Confirmation Procedure

NJEC0676

Ⓜ WITH CONSULT-II

NJEC0676S01

- 1) Turn ignition switch "ON" and wait at least 2 seconds.
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and run it for at least 2 seconds at idle speed. (If engine does not run, turn ignition switch to "START" for at least 2 seconds.)
- 4) If DTC is detected, go to "Diagnostic Procedure", EC-610.

ⓧ WITHOUT CONSULT-II

NJEC0676S02

- 1) Turn ignition switch "ON" and wait at least 2 seconds.

DTC P1180 P9-FUEL TEMP SEN

YD

DTC Confirmation Procedure (Cont'd)

- 2) Start engine and run it for at least 2 seconds at idle speed. (If engine does not run, turn ignition switch to "START" for at least 2 seconds.)
- 3) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 4) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.
- 5) If DTC is detected, go to "Diagnostic Procedure", EC-610.




DTC P1180 P9-FUEL TEMP SEN

Wiring Diagram

NJEC0677

EC-INJPMP-01



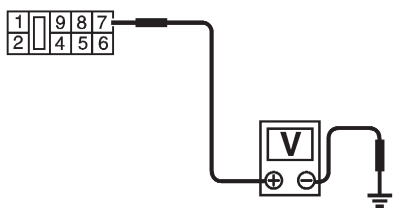
: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

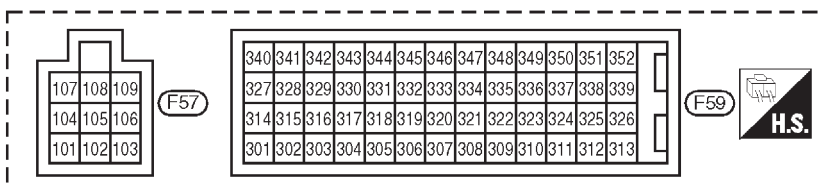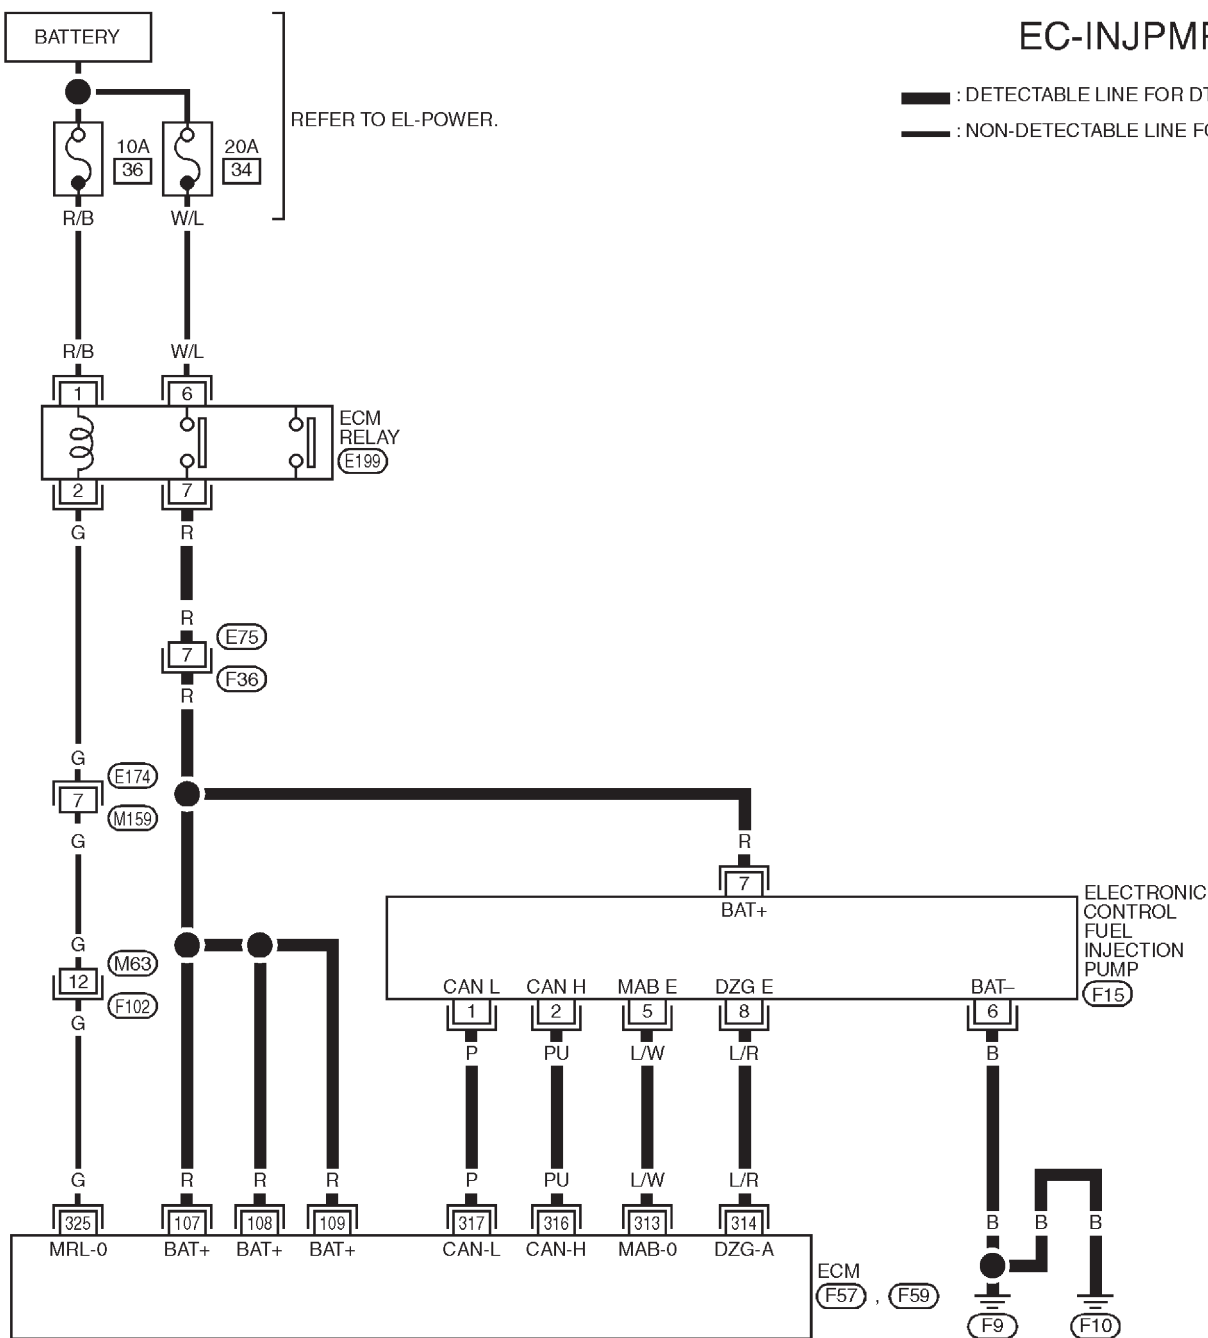

YEC016A

Diagnostic Procedure

NJEC0678

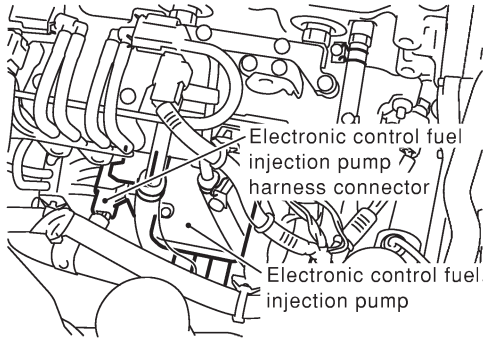1	CHECK ELECTRONIC CONTROL FUEL INJECTION PUMP POWER SUPPLY CIRCUIT	
<p>1. Turn ignition switch "OFF". 2. Disconnect electronic control fuel injection pump harness connector.</p> <div style="text-align: center;">  <p style="margin-left: 150px;">Electronic control fuel injection pump harness connector</p> <p style="margin-left: 150px;">Electronic control fuel injection pump</p> </div> <p style="text-align: right;"><small>SEF390Y</small></p> <p>3. Turn ignition switch "ON". 4. Check voltage between electronic control fuel injection pump terminal 7 and ground.</p> <div style="text-align: center;">   <p style="margin-left: 100px;">Voltage: Battery voltage</p> <p style="margin-left: 100px;">OK or NG</p> </div> <p style="text-align: right;"><small>YEC058A</small></p>		
OK	▶	GO TO 3.
NG	▶	GO TO 2.

2	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E75, F36 ● Harness for open or short between electronic control fuel injection pump and ECM ● Harness for open or short between electronic control fuel injection pump and ECM relay 		
▶		Repair open circuit or short to ground or short to power in harness or connectors.

3	CHECK ELECTRONIC CONTROL FUEL INJECTION PUMP GROUND CIRCUIT FOR OPEN AND SHORT	
<p>1. Turn ignition switch "OFF". 2. Check harness continuity between electronic control fuel injection pump terminal 6 and ground. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 4.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

DTC P1180 P9-FUEL TEMP SEN

YD


Diagnostic Procedure (Cont'd)

4	CHECK COMMUNICATION LINE FOR OPEN AND SHORT										
1. Check continuity between the following terminals. Refer to Wiring Diagram.											
<table border="1"><thead><tr><th>Electronic control fuel injection pump</th><th>ECM</th></tr></thead><tbody><tr><td>1</td><td>317</td></tr><tr><td>2</td><td>316</td></tr><tr><td>5</td><td>313</td></tr><tr><td>8</td><td>314</td></tr></tbody></table>		Electronic control fuel injection pump	ECM	1	317	2	316	5	313	8	314
Electronic control fuel injection pump	ECM										
1	317										
2	316										
5	313										
8	314										
Continuity should exist.											
2. Also check harness for short to ground and short to power.											
OK or NG											
OK	▶ GO TO 5.										
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.										

MTBL0462

5	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-559.	
OK or NG	
OK	▶ Replace electronic control fuel injection pump.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

Description

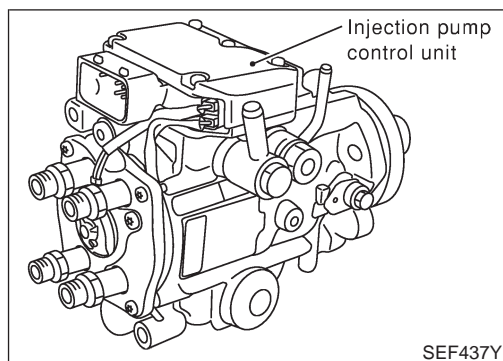

Description

NJEC0753

SYSTEM DESCRIPTION

NJEC0753S01

The ECM and the electronic control fuel injection pump control unit (abbreviated as the injection pump control unit) perform the real time communication (signal exchange).

The ECM transmits the signals of the target fuel injection amount, target fuel injection timing, and engine speed, etc., and receives the signals of the pump speed and fuel temperature, etc. from the injection pump control unit.

By those signals, the injection pump controls the optimum fuel injection amount and injection timing of the spill valve and timing control valve.

The injection pump control unit has an on board diagnostic system, which detects malfunctions related to sensors or actuators built-into electronic control fuel injection pump. These malfunction information are transferred through the line (circuit) from injection pump control unit to ECM.

FUEL INJECTION AMOUNT CONTROL

NJEC0753S02

In accordance with the target fuel injection amount signal from the ECM, the injection amount is controlled by controlling the spill valve in the injection pump and by changing the needle opening time.

FUEL INJECTION TIMING CONTROL

NJEC0753S03

Based on the target fuel injection timing signal from the ECM, the injection timing is controlled in accordance with the timer spring by performing the duty control of the timing control valve in the injection pump and by adjusting the pressure of the timer piston high pressure chamber.

FUEL TEMPERATURE SENSOR

NJEC0753S04

The sensor detects the fuel temperature in the injection pump and calibrates the injection amount change by the fuel temperature.

CAM RING POSITION SENSOR

NJEC0753S05

The sensor detects the passing of the protrusion on the sensor wheel in the injection pump by the semiconductor magnetic resistance element sensor. The cam ring position sensor synchronizes with the cam ring, and detects the actual advance amount. The injection pump control unit measures the injection pump revolution by the signal of the cam ring position sensor.

CONSULT-II Reference Value in Data Monitor Mode

NJEC0754

Remarks: Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
FUEL TEMP SEN	● Engine: After warming up		More than 40°C (104°F)
SPILL/V	● Engine: After warming up, idle the engine.		Approx. 12 - 13°C
INT/A VOLUME	● Engine: After warming up, idle the engine.		Approx. 150 - 450 mg/st
F/CUT SIGNAL	● Engine: After warming up	Idle	ON

DTC P1202 FUEL CUT SYSTEM2

YD

CONSULT-II Reference Value in Data Monitor Mode (Cont'd)

MONITOR ITEM	CONDITION	SPECIFICATION
BARO SEN	<ul style="list-style-type: none"> ● Ignition switch: ON 	Altitude Approx. 0 m (0 ft): Approx. 100.62 kPa (1.0062 bar, 1.026 kg/cm ² , 14.59 psi) Approx. 1,000 m (3,281 ft): Approx. 88.95 kPa (0.8895 bar, 0.907 kg/cm ² , 12.90 psi) Approx. 1,500 m (4,922 ft): Approx. 83.16 kPa (0.8316 bar, 0.848 kg/cm ² , 12.06 psi) Approx. 2,000 m (6,562 ft): Approx. 78.36 kPa (0.7836 bar, 0.799 kg/cm ² , 11.36 psi)

ECM Terminals and Reference Value

NJEC0755

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
313	L/W	Electronic control fuel injection pump	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0.1V
314	L/R	Electronic control fuel injection pump	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0.4V
316	PU	Electronic control fuel injection pump	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 2.5V
317	P	Electronic control fuel injection pump	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 2.5V

On Board Diagnosis Logic

NJEC0756

DTC	Malfunction is detected when	Check Items (Possible cause)
P1202 1002	<ul style="list-style-type: none"> ● Fuel cut control system does not function properly. 	<ul style="list-style-type: none"> ● Harness or connectors (Electronic control fuel circuit is open or shorted.) ● Electronic control fuel

2

DATA MONITOR	
MONITOR	NO DTC
CKPS-RPM (TDC)	XXX rpm

SEF817Y

DTC Confirmation Procedure

NJEC0757

Ⓜ WITH CONSULT-II

NJEC0757S01

- 1) Turn ignition switch "ON" and wait at least 2 seconds.
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and run it for at least 2 seconds at idle speed. (If engine does not run, turn ignition switch to "START" for at least 2 seconds.)
- 4) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 5) If DTC is detected, go to "Diagnostic Procedure", EC-616.

DTC P1202 FUEL CUT SYSTEM2

YD

DTC Confirmation Procedure (Cont'd)

⊗ WITHOUT CONSULT-II

NJEC0757S02

- 1) Turn ignition switch "ON" and wait at least 2 seconds.
- 2) Start engine and run it for at least 2 seconds at idle speed.
(If engine does not run, turn ignition switch to "START" for at least 2 seconds.)
- 3) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 4) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.
- 5) If DTC is detected, go to "Diagnostic Procedure", EC-616.




DTC P1202 FUEL CUT SYSTEM2

Wiring Diagram

NJEC0758



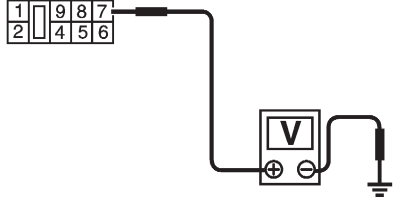
EC-INJPMP-01

— : DETECTABLE LINE FOR DTC
— : NON-DETECTABLE LINE FOR DTC

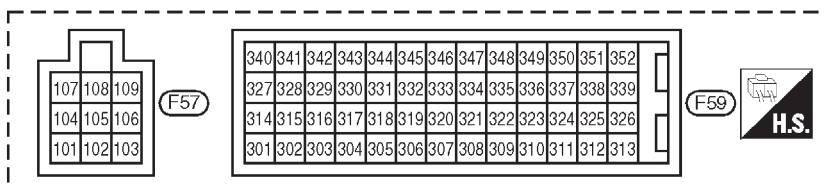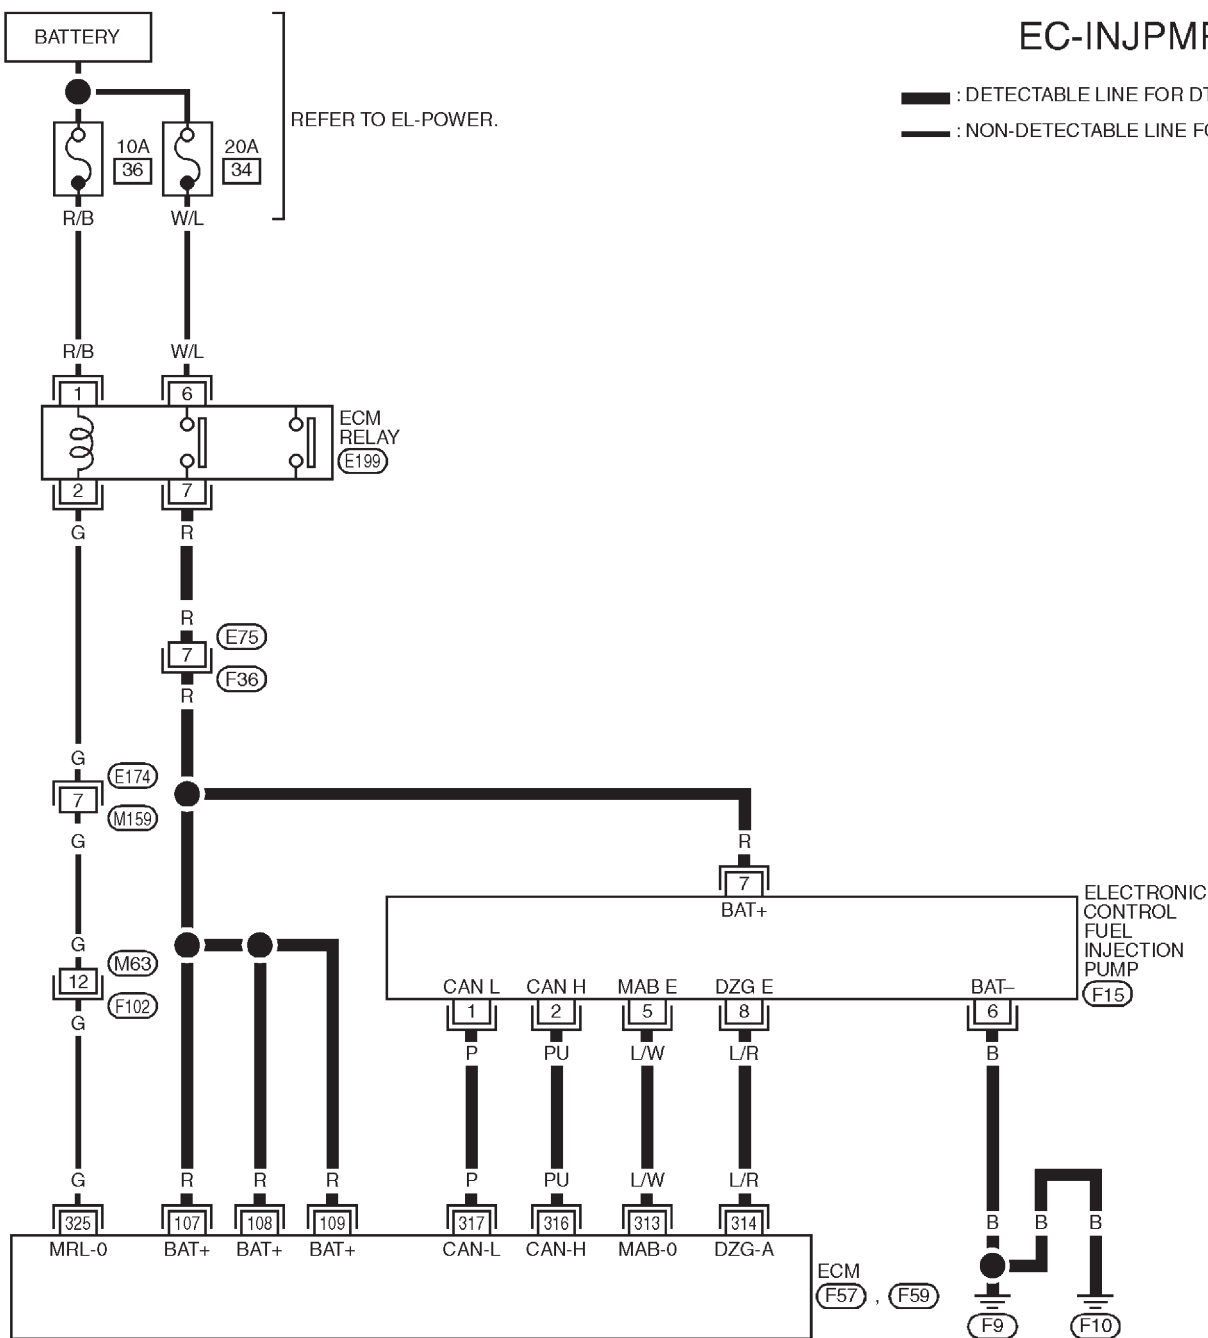

Diagnostic Procedure

NJEC0759

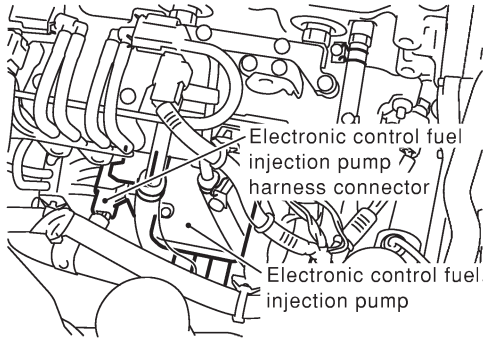1	CHECK ELECTRONIC CONTROL FUEL INJECTION PUMP POWER SUPPLY CIRCUIT	
<p>1. Turn ignition switch "OFF". 2. Disconnect electronic control fuel injection pump harness connector.</p> <div style="text-align: center;">  <p>Electronic control fuel injection pump harness connector Electronic control fuel injection pump</p> </div> <p>3. Turn ignition switch "ON". 4. Check voltage between electronic control fuel injection pump terminal 7 and ground.</p> <div style="text-align: center;">  </div> <div style="text-align: center;">  <p>Voltage: Battery voltage</p> <p>OK or NG</p> </div>		
SEF390Y		
YEC058A		
OK	▶	GO TO 3.
NG	▶	GO TO 2.

2	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E75, F36 ● Harness for open or short between electronic control fuel injection pump and ECM ● Harness for open or short between electronic control fuel injection pump and ECM relay 		
▶ Repair open circuit or short to ground or short to power in harness or connectors.		

3	CHECK ELECTRONIC CONTROL FUEL INJECTION PUMP GROUND CIRCUIT FOR OPEN AND SHORT	
<p>1. Turn ignition switch "OFF". 2. Check harness continuity between electronic control fuel injection pump terminal 6 and ground. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 4.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

DTC P1202 FUEL CUT SYSTEM2

YD

Diagnostic Procedure (Cont'd)

4	CHECK COMMUNICATION LINE FOR OPEN AND SHORT										
1. Check continuity between the following terminals. Refer to Wiring Diagram.											
<table border="1"><thead><tr><th>Electronic control fuel injection pump</th><th>ECM</th></tr></thead><tbody><tr><td>1</td><td>317</td></tr><tr><td>2</td><td>316</td></tr><tr><td>5</td><td>313</td></tr><tr><td>8</td><td>314</td></tr></tbody></table>		Electronic control fuel injection pump	ECM	1	317	2	316	5	313	8	314
Electronic control fuel injection pump	ECM										
1	317										
2	316										
5	313										
8	314										
Continuity should exist.											
2. Also check harness for short to ground and short to power.											
OK or NG											
OK	▶ GO TO 5.										
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.										

MTBL0462

5	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-559.	
OK or NG	
OK	▶ Replace electronic control fuel injection pump.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

DTC P1217 OVER HEAT

YD

Description

Description

SYSTEM DESCRIPTION

NJEC0660


NJEC0660S01

Sensor	Input signal to ECM	ECM function	Actuator
Vehicle speed sensor	Vehicle speed	Cooling fan control	Cooling fan relay
Engine coolant temperature sensor	Engine coolant temperature		
Air conditioner switch	Air conditioner "ON" signal		

The ECM controls the cooling fan corresponding to the vehicle speed, engine coolant temperature, air conditioner ON signal. The control system has 3-step control [HIGH/LOW/OFF].

OPERATION

NJEC0660S02

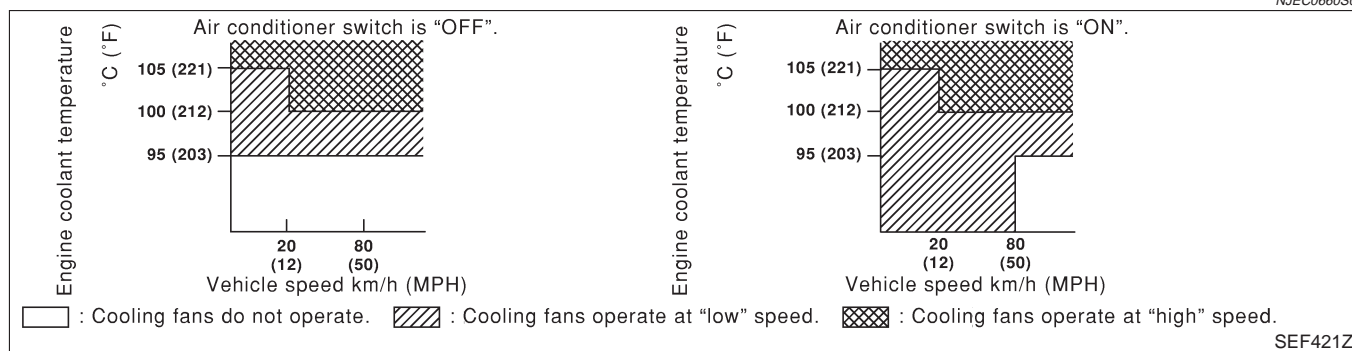

SEF421Z

CONSULT-II Reference Value in Data Monitor Mode

Specification data are reference values.

NJEC0661

MONITOR ITEM	CONDITION	SPECIFICATION
AIR COND SIG	● Engine: After warming up, idle the engine	Air conditioner switch: OFF OFF
		Air conditioner switch: ON (Compressor operates.) ON
COOLING FAN	● When cooling fan is stopped.	OFF
	● When cooling fans operate at low speed.	LOW
	● When cooling fans operate at high speed.	HIGH

ECM Terminals and Reference Value

Specification data are reference values and are measured between each terminal and ground.

NJEC0662

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA(DC Voltage)
219	LG/R	Cooling fan relay (Low)	[Engine is running] ● Cooling fans are not operating	BATTERY VOLTAGE (11 - 14V)
			[Engine is running] ● Cooling fans are operating	Approximately 0.1V

DTC P1217 OVER HEAT

YD

ECM Terminals and Reference Value (Cont'd)

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA(DC Voltage)
221	LG/B	Cooling fan relay (High)	[Engine is running] <ul style="list-style-type: none"> ● Cooling fans are not operating ● Cooling fans are operating at low speed 	BATTERY VOLTAGE (11 - 14V)
			[Engine is running] <ul style="list-style-type: none"> ● Cooling fans are operating at high speed 	Approximately 0.1V

On Board Diagnosis Logic

NJEC0663

This diagnosis continuously monitors the engine coolant temperature.

If the cooling fan or another component in the cooling system malfunctions, engine coolant temperature will rise.


When the engine coolant temperature reaches an abnormally high temperature condition, a malfunction is indicated.

DTC	Malfunction is detected when ...	Check Items (Possible Cause)
P1217 0208	<ul style="list-style-type: none"> ● Cooling fan does not operate properly (Overheat). ● Cooling fan system does not operate properly (Overheat). ● Engine coolant was not added to the system using the proper filling method. 	<ul style="list-style-type: none"> ● Harness or connectors (The cooling fan circuit is open or shorted.) ● Cooling fan ● Radiator hose ● Radiator ● Radiator cap ● Water pump ● Thermostat ● Engine coolant temperature sensor <p>For more information, refer to "MAIN 12 CAUSES OF OVERHEATING", EC-633.</p>

CAUTION:

When a malfunction is indicated, be sure to replace the coolant following the procedure in the LC-43, "Changing Engine Coolant". Also, replace the engine oil.


- 1) Fill radiator with coolant up to specified level with a filling speed of 2 liters per minute. Be sure to use coolant with the proper mixture ratio. Refer to MA-22, "Engine Coolant Mixture Ratio".
- 2) After refilling coolant, run engine to ensure that no water-flow noise is emitted.

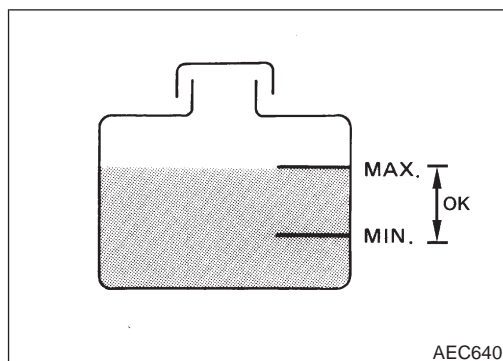


AEC640

ACTIVE TEST	
COOLING FAN	OFF
MONITOR	
COOLAN TEMP/S	XXX °C

SEF111X

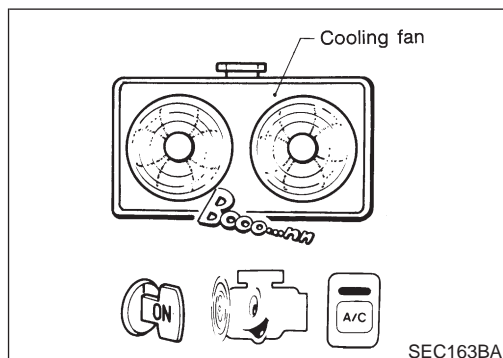

SEC163BA

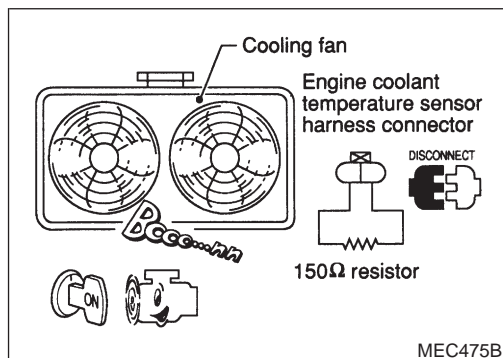

MEC475B

Overall Function Check

NJEC0664

Use this procedure to check the overall function of the cooling fan. During this check, a DTC might not be confirmed.

WARNING:

Never remove the radiator cap when the engine is hot. Serious burns could be caused by high pressure fluid escaping from the radiator.

Wrap a thick cloth around the cap. Carefully remove the cap by turning it a quarter turn to allow built-up pressure to escape. Then turn the cap all the way off.

WITH CONSULT-II

NJEC0664S01

- 1) Check the coolant level in the reservoir tank and radiator.
Allow engine to cool before checking coolant level.
 If the coolant level in the reservoir tank and/or radiator is below the proper range, skip the following steps and go to "Diagnostic Procedure", EC-622.
- 2) Confirm whether customer filled the coolant or not. If customer filled the coolant, skip the following steps and go to "Diagnostic Procedure", EC-622.
- 3) Turn ignition switch "ON".
- 4) Perform "COOLING FAN" in "ACTIVE TEST" mode with CONSULT-II and make sure that cooling fans operate when touching "HIGH" or "LOW".
 If NG, go to "Diagnostic Procedure", EC-622.

WITHOUT CONSULT-II

NJEC0664S02

- 1) Check the coolant level in the reservoir tank and radiator.
Allow engine to cool before checking coolant level.
 If the coolant level in the reservoir tank and/or radiator is below the proper range, skip the following steps and go to "Diagnostic Procedure", EC-622.
- 2) Confirm whether customer filled the coolant or not. If customer filled the coolant, skip the following steps and go to "Diagnostic Procedure", EC-622.
- 3) Start engine.
Be careful not to overheat engine.
- 4) Set temperature control lever to full cold position.
- 5) Turn air conditioner switch "ON".
- 6) Turn blower fan switch "ON".
- 7) Run engine at idle for a few minutes with air conditioner operating.
Be careful not to overheat engine.
- 8) Make sure that cooling fans operate at low speed.
- 9) Turn ignition switch "OFF".
- 10) Turn air conditioner switch and blower fan switch "OFF".
- 11) Disconnect engine coolant temperature sensor harness connector.
- 12) Connect 150Ω resistor to engine coolant temperature sensor harness connector.
- 13) Start engine and make sure that cooling fans operate at higher speed than low speed.
Be careful not to overheat engine.
- 14) If NG, go to "Diagnostic Procedure", EC-622.

DTC P1217 OVER HEAT



YD

Wiring Diagram


Wiring Diagram

NJEC0665

EC-COOL/F-01

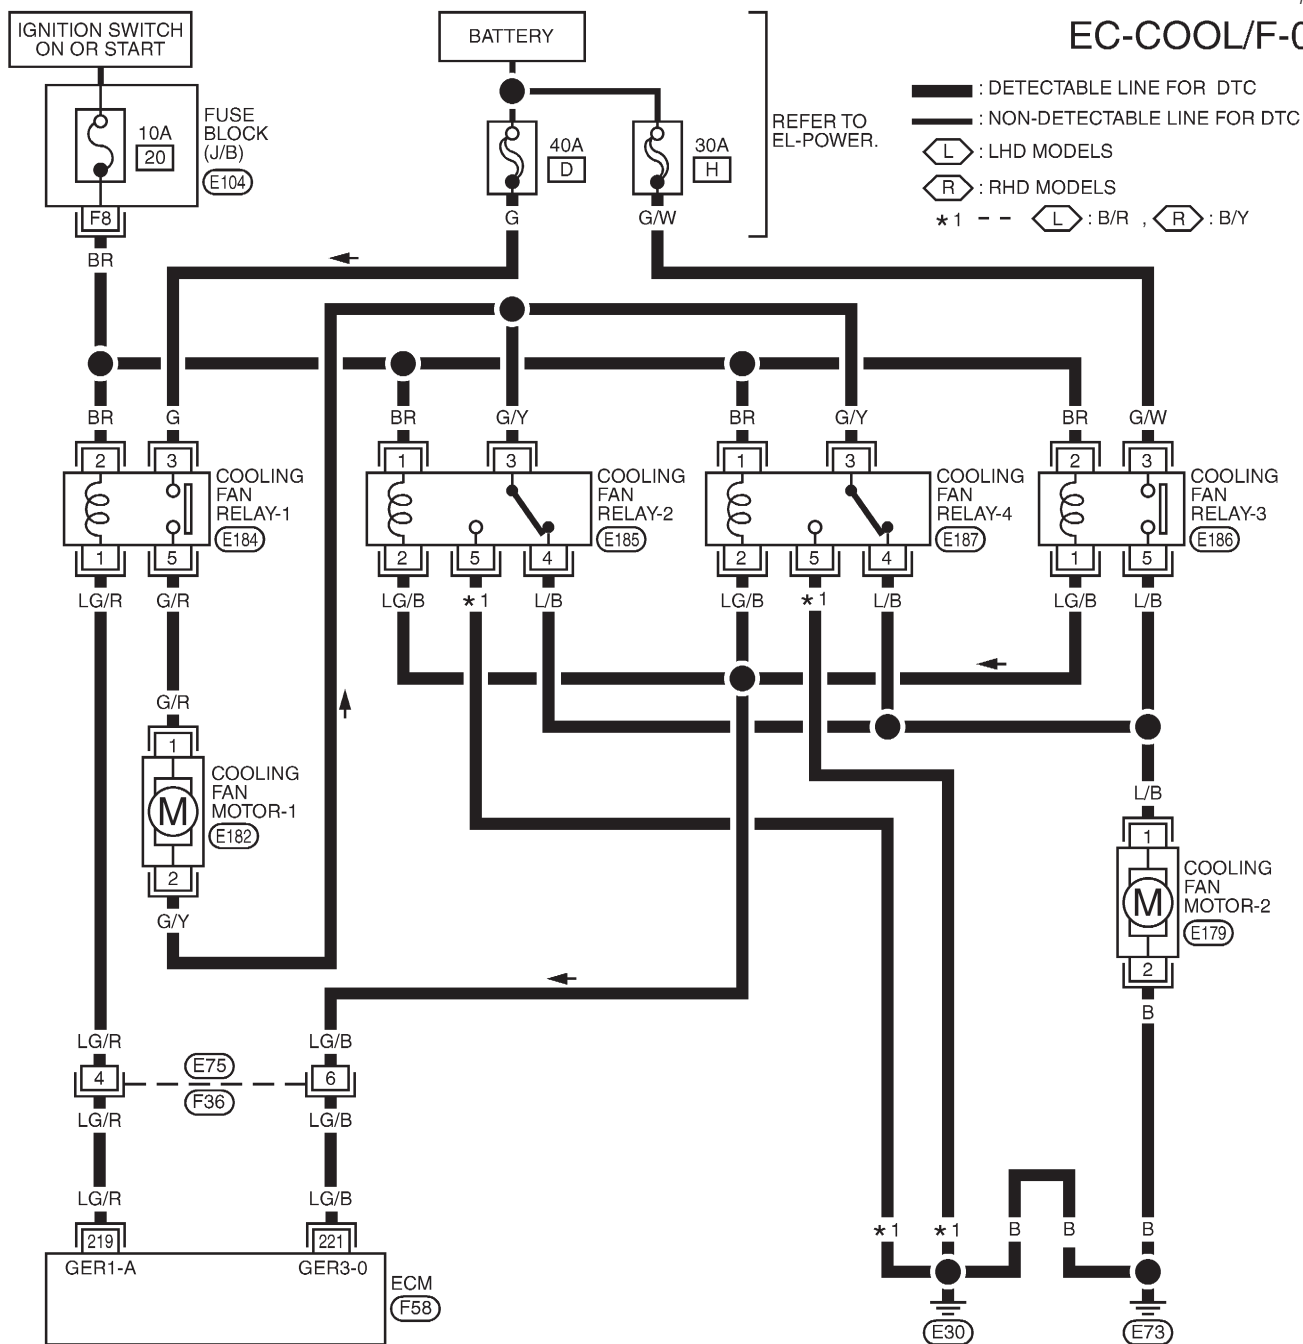

REFER TO THE FOLLOWING.
 (E104) - FUSE BLOCK
 JUNCTION BOX (J/B)

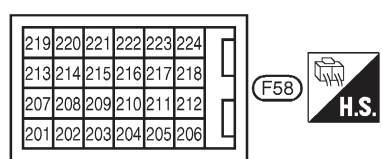

YEC017A

Diagnostic Procedure


NJEC0666

1	INSPECTION START	
Do you have CONSULT-II?		
Yes or No		
Yes	▶	GO TO 2.
No	▶	GO TO 4.

2	CHECK COOLING FAN LOW SPEED OPERATION
----------	--

With CONSULT-II

1. Disconnect cooling fan relays-2 and -4.

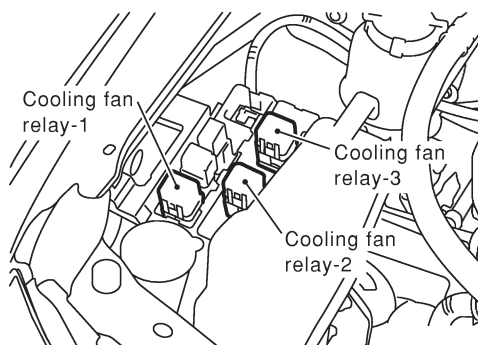
SEF384Y

2. Turn ignition switch "ON".
3. Perform "COOLING FAN" in "ACTIVE TEST" mode with CONSULT-II.

ACTIVE TEST	
COOLING FAN	OFF
MONITOR	
COOLAN TEMP/S	XXX °C

SEF646X

4. Make sure that cooling fans-1 and -2 operate at low speed.

OK or NG

OK	▶	GO TO 3.
NG	▶	Check cooling fan low speed control circuit. (Go to PROCEDURE A, EC-627.)



DTC P1217 OVER HEAT


YD


Diagnostic Procedure (Cont'd)

3	CHECK COOLING FAN HIGH SPEED OPERATION																						
<p>Ⓟ With CONSULT-II</p> <ol style="list-style-type: none">1. Turn ignition switch "OFF".2. Reconnect cooling fan relays-2 and -4.3. Turn ignition switch "ON".4. Perform "COOLING FAN" in "ACTIVE TEST" mode with CONSULT-II.																							
<table border="1"><thead><tr><th colspan="2">ACTIVE TEST</th></tr><tr><th>COOLING FAN</th><th>OFF</th></tr><tr><th colspan="2">MONITOR</th></tr><tr><th>COOLAN TEMP/S</th><th>XXX °C</th></tr></thead><tbody><tr><td> </td><td> </td></tr><tr><td> </td><td> </td></tr><tr><td> </td><td> </td></tr><tr><td> </td><td> </td></tr><tr><td> </td><td> </td></tr><tr><td> </td><td> </td></tr><tr><td> </td><td> </td></tr></tbody></table>		ACTIVE TEST		COOLING FAN	OFF	MONITOR		COOLAN TEMP/S	XXX °C														
ACTIVE TEST																							
COOLING FAN	OFF																						
MONITOR																							
COOLAN TEMP/S	XXX °C																						
5. Make sure that cooling fans-1 and -2 operate at high speed.																							
OK or NG																							
OK	▶ GO TO 6.																						
NG	▶ Check cooling fan high speed control circuit. (Go to PROCEDURE B, EC-630.)																						

SEF111X

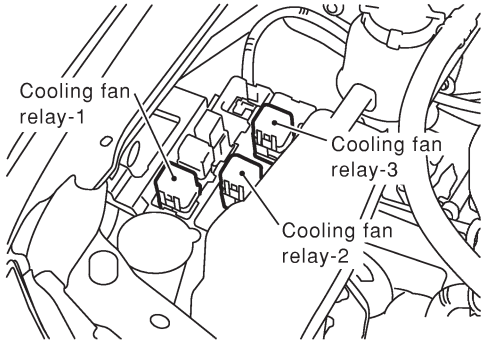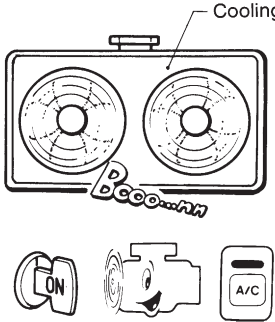4	CHECK COOLING FAN LOW SPEED OPERATION	
<p>⊗ Without CONSULT-II</p> <p>1. Disconnect cooling fan relays-2 and -4.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SEF384Y</p> <p>2. Start engine and let it idle. 3. Set temperature lever at full cold position. 4. Turn air conditioner switch "ON". 5. Turn blower fan switch "ON". 6. Make sure that cooling fans-1 and -2 operate at low speed.</p> <div style="text-align: center;">  </div> <p style="text-align: center;">OK or NG</p> <p style="text-align: right;">SEC163BA</p>		
OK	▶	GO TO 5.
NG	▶	Check cooling fan low speed control circuit. (Go to PROCEDURE A, EC-627.)

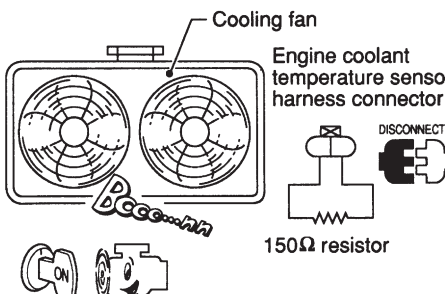5	CHECK COOLING FAN HIGH SPEED OPERATION
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Reconnect cooling fan relays-2 and -4. 3. Turn air conditioner switch and blower fan switch "OFF". 4. Disconnect engine coolant temperature sensor harness connector. 5. Connect 150Ω resistor to engine coolant temperature sensor harness connector. 6. Restart engine and make sure that cooling fans-1 and -2 operate at high speed. 	
 <p style="text-align: right;">Cooling fan Engine coolant temperature sensor harness connector DISCONNECT 150Ω resistor</p>	
MEC475B	
OK or NG	
OK	▶ GO TO 6.
NG	▶ Check cooling fan high speed control circuit. (Go to PROCEDURE B, EC-630.)

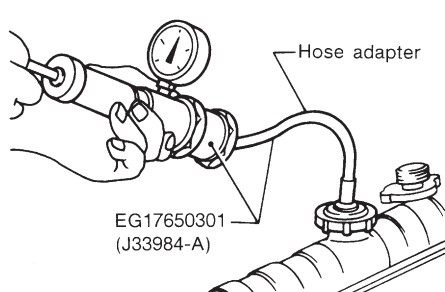
6	CHECK COOLING SYSTEM FOR LEAK
<p>Apply pressure to the cooling system with a tester, and check if the pressure drops.</p> <p style="color: blue;">Testing pressure: 157 kPa (1.57 bar, 1.6 kg/cm², 23 psi)</p> <p>CAUTION: Higher than the specified pressure may cause radiator damage.</p>	
 <p style="text-align: right;">Hose adapter EG17650301 (J33984-A)</p>	
SLC754A	
Pressure should not drop.	
OK or NG	
OK	▶ GO TO 8.
NG	▶ GO TO 7.

7	DETECT MALFUNCTIONING PART
<p>Check the following for leak.</p> <ul style="list-style-type: none"> ● Hose ● Radiator ● Water pump (Refer to LC-38, "Water Pump".) 	
▶ Repair or replace.	


DTC P1217 OVER HEAT

YD

Diagnostic Procedure (Cont'd)

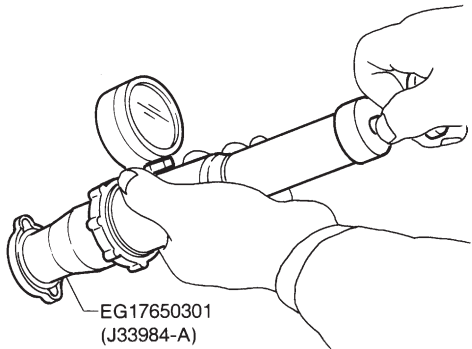8	CHECK RADIATOR CAP	
Apply pressure to cap with a tester and check radiator cap relief pressure.		
		
<p>Radiator cap relief pressure: 59 - 98 kPa (0.59 - 0.98 bar, 0.6 - 1.0 kg/cm², 9 - 14 psi)</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 9.
NG	▶	Replace radiator cap.

SLC755A

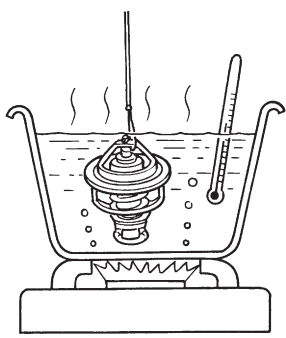9	CHECK THERMOSTAT	
<ol style="list-style-type: none"> 1. Remove thermostat. 2. Check valve seating condition at normal room temperatures. It should seat tightly. 3. Check valve opening temperature and valve lift. 		
		
<p>Valve opening temperature: 82°C (180°F) [standard]</p> <p>Valve lift: More than 8.6 mm/95°C (0.339 in/203°F)</p> <p>4. Check if valve is closed at 5°C (9°F) below valve opening temperature. For details, refer to LC-40, "Thermostat".</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 10.
NG	▶	Replace thermostat.

SLC343


DTC P1217 OVER HEAT

YD

Diagnostic Procedure (Cont'd)


10 CHECK ENGINE COOLANT TEMPERATURE SENSOR

1. Remove engine coolant temperature sensor.
2. Check resistance between engine coolant temperature sensor terminals 1 and 2 as shown in the figure.

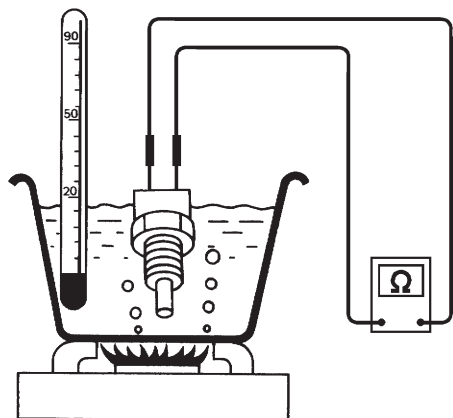

<Reference data>

Temperature °C (°F)	Resistance kΩ
20 (68)	2.1 - 2.9
50 (122)	0.68 - 1.00
90 (194)	0.236 - 0.260

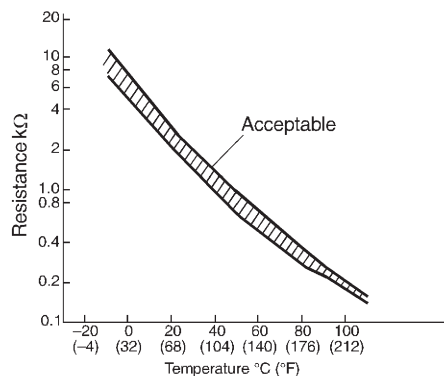

SEF304X

OK or NG

OK	▶	GO TO 11.
NG	▶	Replace engine coolant temperature sensor.

11 CHECK MAIN 12 CAUSES

If the cause cannot be isolated, go to "MAIN 12 CAUSES OF OVERHEATING", EC-633.


	▶	INSPECTION END
--	---	-----------------------

PROCEDURE A

NJEC0666S05

1 CHECK COOLING FAN POWER SUPPLY CIRCUIT

1. Turn ignition switch "OFF".
2. Disconnect cooling fan relay-1.
3. Turn ignition switch "ON".
4. Check voltage between cooling fan relay-1 terminals 2, 3 and ground with CONSULT-II or tester.

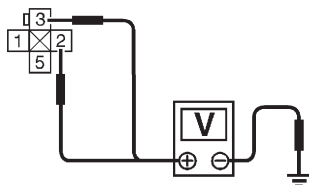


Voltage: Battery voltage

SEF899Y

OK or NG

OK	▶	GO TO 3.
NG	▶	GO TO 2.

2	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Fuse block (J/B) connector E104 ● 10A fuse ● 40A fusible link ● Harness for open or short between cooling fan relay-1 and fuse ● Harness for open or short between cooling fan relay-1 and battery 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

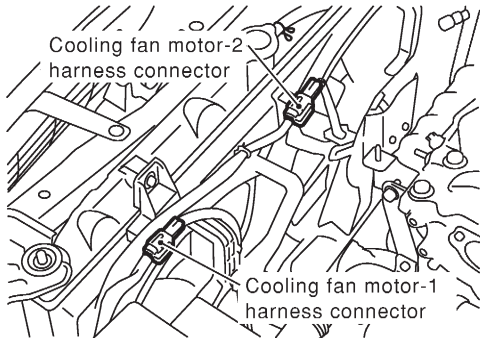3	CHECK COOLING FAN GROUND CIRCUIT FOR OPEN AND SHORT-I
<p>1. Turn ignition switch "OFF".</p> <p>2. Disconnect cooling fan motor-1 harness connector and cooling fan motor-2 harness connector.</p>	
 <p style="text-align: right; font-size: small;">SEF385Y</p>	
<p>3. Check harness continuity between cooling fan relay-1 terminal 5 and cooling fan motor-1 terminal 1, cooling fan motor-2 terminal 2 and body ground. Refer to Wiring Diagram.</p> <p style="color: blue; font-weight: bold;">Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 4.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.


4	CHECK COOLING FAN GROUND CIRCUIT FOR OPEN AND SHORT-II
<p>1. Check harness continuity between cooling fan motor-1 terminal 2 and cooling fan motor-2 terminal 1. Refer to Wiring Diagram.</p> <p style="color: blue; font-weight: bold;">Continuity should exist.</p> <p>2. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 7.
NG	▶ GO TO 5.

5	CHECK COOLING FAN GROUND CIRCUIT FOR OPEN AND SHORT-III
<p>1. Disconnect cooling fan relays-2, 4.</p> <p>2. Check harness continuity between cooling fan motor-1 terminal 2 and cooling fan relays-2, 4 terminal 3, cooling fan relays-2, 4 terminal 4 and cooling fan motor-2 terminal 1. Refer to Wiring Diagram.</p> <p style="color: blue; font-weight: bold;">Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 6.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

DTC P1217 OVER HEAT


YD

Diagnostic Procedure (Cont'd)

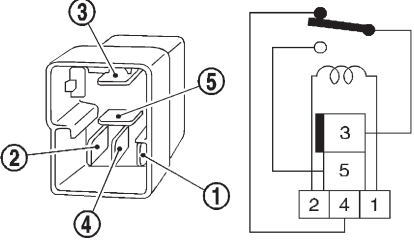6	CHECK COOLING FAN RELAY-2, 4													
Check continuity between cooling fan relays-2, 4 terminals 3 and 4, 3 and 5 under the following conditions.														
		<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th rowspan="2" style="text-align: center;">Conditions</th> <th colspan="2" style="text-align: center;">Continuity</th> </tr> <tr> <th style="text-align: center;">terminals 3 and 4</th> <th style="text-align: center;">terminals 3 and 5</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">12V direct current supply between terminals 1 and 2</td> <td style="text-align: center;">No</td> <td style="text-align: center;">Yes</td> </tr> <tr> <td style="text-align: center;">No current supply</td> <td style="text-align: center;">Yes</td> <td style="text-align: center;">No</td> </tr> </tbody> </table>		Conditions	Continuity		terminals 3 and 4	terminals 3 and 5	12V direct current supply between terminals 1 and 2	No	Yes	No current supply	Yes	No
Conditions	Continuity													
	terminals 3 and 4	terminals 3 and 5												
12V direct current supply between terminals 1 and 2	No	Yes												
No current supply	Yes	No												
SEF900Y														
OK or NG														
OK	▶	GO TO 11.												
NG	▶	Replace cooling fan relay.												

7	CHECK COOLING FAN OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT		
1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal 219 and cooling fan relay-1 terminal 1. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to ground and short to power.			
OK or NG			
OK	▶	GO TO 9.	
NG	▶	GO TO 8.	



8	DETECT MALFUNCTIONING PART		
Check the following.			
<ul style="list-style-type: none"> ● Harness connectors E75, F36 ● Harness for open or short between cooling fan relay-1 and ECM 			
▶		Repair open circuit or short to ground or short to power in harness or connectors.	

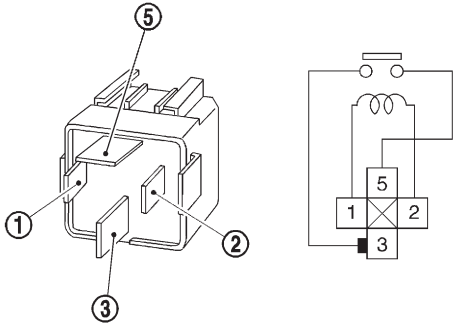9	CHECK COOLING FAN RELAY-1								
Check continuity between cooling fan relay-1 terminals 3 and 5 under the following conditions.									
		<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Conditions</th> <th style="text-align: center;">Continuity</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">12V direct current supply between terminals 1 and 2</td> <td style="text-align: center;">Yes</td> </tr> <tr> <td style="text-align: center;">No current supply</td> <td style="text-align: center;">No</td> </tr> </tbody> </table>		Conditions	Continuity	12V direct current supply between terminals 1 and 2	Yes	No current supply	No
Conditions	Continuity								
12V direct current supply between terminals 1 and 2	Yes								
No current supply	No								
SEF901Y									
OK or NG									
OK	▶	GO TO 10.							
NG	▶	Replace cooling fan relay.							

DTC P1217 OVER HEAT

YD



Diagnostic Procedure (Cont'd)

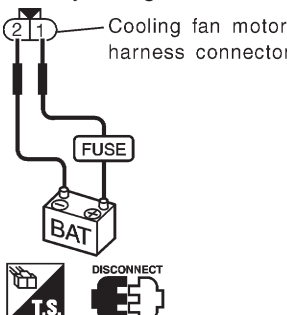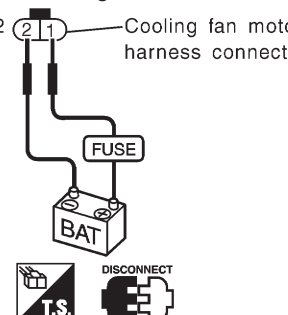10	CHECK COOLING FAN MOTORS-1 AND -2												
Supply battery voltage between the following terminals and check operation.													
 <p style="font-size: small;">Cooling fan motor-2 harness connector</p>	 <p style="font-size: small;">Cooling fan motor-1 harness connector</p>	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th rowspan="2"></th> <th colspan="2" style="text-align: center;">Terminals</th> </tr> <tr> <th style="text-align: center;">(+)</th> <th style="text-align: center;">(-)</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">Cooling fan motor-1</td> <td style="text-align: center;">1</td> <td style="text-align: center;">2</td> </tr> <tr> <td style="text-align: center;">Cooling fan motor-2</td> <td style="text-align: center;">1</td> <td style="text-align: center;">2</td> </tr> </tbody> </table>		Terminals		(+)	(-)	Cooling fan motor-1	1	2	Cooling fan motor-2	1	2
	Terminals												
	(+)	(-)											
Cooling fan motor-1	1	2											
Cooling fan motor-2	1	2											
YEC059A													
OK or NG													
OK	▶	GO TO 11.											
NG	▶	Replace cooling fan motors.											

11	CHECK INTERMITTENT INCIDENT	
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-559.		
▶		INSPECTION END

PROCEDURE B

NJEC0666S06

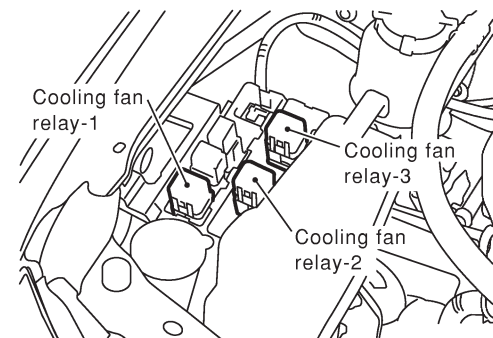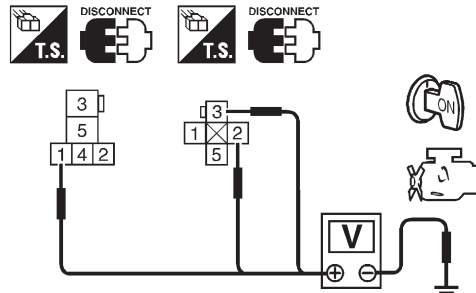
1	CHECK COOLING FAN POWER SUPPLY CIRCUIT	
<p>1. Turn ignition switch "OFF".</p> <p>2. Disconnect cooling fan relays-2, 3 and 4.</p>		
		
SEF384Y		
<p>3. Turn ignition switch "ON".</p> <p>4. Check voltage between cooling fan relays-2, 4 terminals 1 and ground, cooling fan relay-3 terminals 2, 3 and ground with CONSULT-II or tester.</p>		
		
SEF903Y		
OK or NG		
OK	▶	GO TO 3.
NG	▶	GO TO 2.

DTC P1217 OVER HEAT

YD

Diagnostic Procedure (Cont'd)

2	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none">● 30A fusible link● 10A fuse● Harness for open or short between cooling fan relays-2, 3, 4 and fuse● Harness for open or short between cooling fan relay-3 and fusible link	
▶ Repair harness or connectors.	

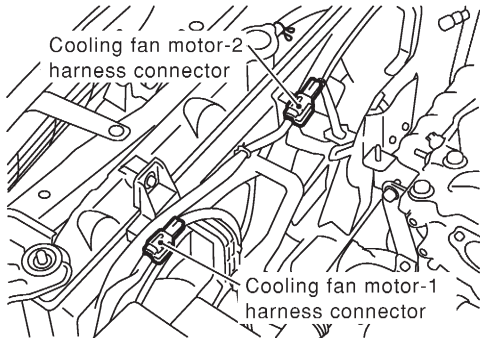3	CHECK COOLING FAN GROUND CIRCUIT FOR OPEN AND SHORT
1. Turn ignition switch "OFF". 2. Disconnect cooling fan motor-2 harness connector.	
 <p>SEF385Y</p>	
3. Check harness continuity between cooling fan relays-2, 4 terminal 5 and body ground, cooling fan relay-3 terminal 5 and cooling fan motor-2 terminal 1. Refer to Wiring Diagram. Continuity should exist.	
4. Also check harness for short to ground and short to power.	
OK or NG	
OK	▶ GO TO 4.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.



4	CHECK COOLING FAN OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT
1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal 221 and cooling fan relays-2, 4 terminal 2, cooling fan relay-3 terminal 1. Refer to Wiring Diagram. Continuity should exist.	
3. Also check harness for short to ground and short to power.	
OK or NG	
OK	▶ GO TO 6.
NG	▶ GO TO 5.



5	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none">● Harness connectors E75, F36● Harness for open or short between cooling fan relays-2, 3, 4 and ECM	
▶ Repair open circuit or short to ground or short to power in harness or connectors.	



DTC P1217 OVER HEAT

YD

Diagnostic Procedure (Cont'd)

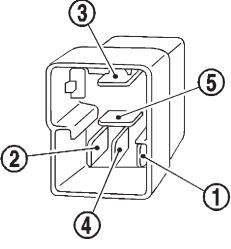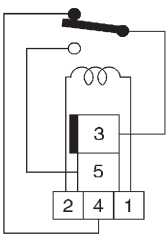6	CHECK COOLING FAN RELAYS-2 AND -4												
Check continuity between cooling fan relay-2, -3 terminals 3 and 4, 3 and 5 under the following conditions.													
<div style="display: flex; align-items: flex-start;"> <div style="flex: 1;">  </div> <div style="flex: 1;">  </div> <div style="flex: 2;"> <table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <thead> <tr> <th rowspan="2">Conditions</th> <th colspan="2">Continuity</th> </tr> <tr> <th>terminals 3 and 4</th> <th>terminals 3 and 5</th> </tr> </thead> <tbody> <tr> <td>12V direct current supply between terminals 1 and 2</td> <td>No</td> <td>Yes</td> </tr> <tr> <td>No current supply</td> <td>Yes</td> <td>No</td> </tr> </tbody> </table> </div> </div>			Conditions	Continuity		terminals 3 and 4	terminals 3 and 5	12V direct current supply between terminals 1 and 2	No	Yes	No current supply	Yes	No
Conditions	Continuity												
	terminals 3 and 4	terminals 3 and 5											
12V direct current supply between terminals 1 and 2	No	Yes											
No current supply	Yes	No											
SEF900Y													
OK or NG													
OK	▶	GO TO 7.											
NG	▶	Replace cooling fan relays.											

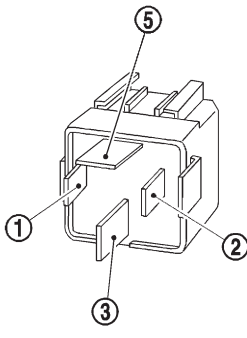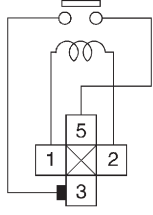7	CHECK COOLING FAN RELAY-3							
Check continuity between cooling fan relay-3 terminals 3 and 5 under the following conditions.								
<div style="display: flex; align-items: flex-start;"> <div style="flex: 1;">  </div> <div style="flex: 1;">  </div> <div style="flex: 2;"> <table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <thead> <tr> <th>Conditions</th> <th>Continuity</th> </tr> </thead> <tbody> <tr> <td>12V direct current supply between terminals 1 and 2</td> <td>Yes</td> </tr> <tr> <td>No current supply</td> <td>No</td> </tr> </tbody> </table> </div> </div>			Conditions	Continuity	12V direct current supply between terminals 1 and 2	Yes	No current supply	No
Conditions	Continuity							
12V direct current supply between terminals 1 and 2	Yes							
No current supply	No							
SEF901Y								
OK or NG								
OK	▶	GO TO 8.						
NG	▶	Replace cooling fan relay.						

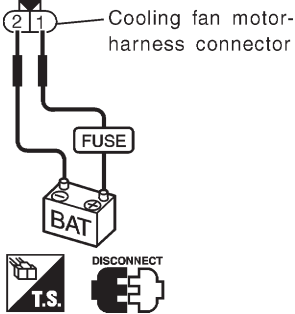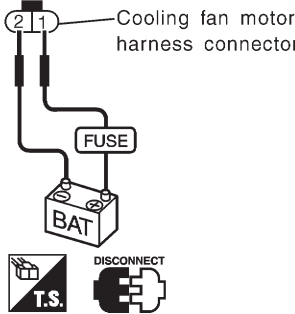8	CHECK COOLING FAN MOTORS												
Supply battery voltage between the following terminals and check operation.													
<div style="display: flex; align-items: flex-start;"> <div style="flex: 1;">  <p style="font-size: small;">Cooling fan motor-2 harness connector</p> </div> <div style="flex: 1;">  <p style="font-size: small;">Cooling fan motor-1 harness connector</p> </div> <div style="flex: 2;"> <table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <thead> <tr> <th rowspan="2"></th> <th colspan="2">Terminals</th> </tr> <tr> <th>(+)</th> <th>(-)</th> </tr> </thead> <tbody> <tr> <td>Cooling fan motor-1</td> <td>1</td> <td>2</td> </tr> <tr> <td>Cooling fan motor-2</td> <td>1</td> <td>2</td> </tr> </tbody> </table> </div> </div>				Terminals		(+)	(-)	Cooling fan motor-1	1	2	Cooling fan motor-2	1	2
	Terminals												
	(+)	(-)											
Cooling fan motor-1	1	2											
Cooling fan motor-2	1	2											
YEC059A													
OK or NG													
OK	▶	GO TO 9.											
NG	▶	Replace cooling fan motors.											

DTC P1217 OVER HEAT

YD

Diagnostic Procedure (Cont'd)

9	CHECK INTERMITTENT INCIDENT
1. Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-559.	
	INSPECTION END

Main 12 Causes of Overheating

NJEC0667

Engine	Step	Inspection item	Equipment	Condition	Reference page
OFF	1	<ul style="list-style-type: none"> ● Blocked radiator ● Blocked radiator grille ● Blocked bumper 	<ul style="list-style-type: none"> ● Visual 	No blocking	—
	2	<ul style="list-style-type: none"> ● Coolant mixture 	<ul style="list-style-type: none"> ● Coolant tester 	50 - 50% coolant mixture	See MA-20, "RECOMMENDED FLUIDS AND LUBRICANTS".
	3	<ul style="list-style-type: none"> ● Coolant level 	<ul style="list-style-type: none"> ● Visual 	Coolant up to MAX level in reservoir tank and radiator filler neck	See LC-17, "Changing Engine Coolant".
	4	<ul style="list-style-type: none"> ● Radiator cap 	<ul style="list-style-type: none"> ● Pressure tester 	78 - 98 kPa (0.78 - 0.98 bar, 0.8 - 1.0 kg/cm ² , 11 - 14 psi)	See LC-37, "System Check".
ON*2	5	<ul style="list-style-type: none"> ● Coolant leaks 	<ul style="list-style-type: none"> ● Visual 	No leaks	See LC-37, "System Check".
ON*2	6	<ul style="list-style-type: none"> ● Thermostat 	<ul style="list-style-type: none"> ● Touch the upper and lower radiator hoses 	Both hoses should be hot	See LC-40, "Thermostat" and "Radiator".
ON*1	7	<ul style="list-style-type: none"> ● Cooling fan 	<ul style="list-style-type: none"> ● CONSULT-II 	Operating	See Trouble Diagnosis for DTC P1217, EC-618.
OFF	8	<ul style="list-style-type: none"> ● Combustion gas leak 	<ul style="list-style-type: none"> ● Color checker chemical tester 4 Gas analyzer 	Negative	—
ON*3	9	<ul style="list-style-type: none"> ● Coolant temperature gauge 	<ul style="list-style-type: none"> ● Visual 	Gauge less than 3/4 when driving	—
		<ul style="list-style-type: none"> ● Coolant overflow to reservoir tank 	<ul style="list-style-type: none"> ● Visual 	No overflow during driving and idling	See LC-43, "Changing Engine Coolant".
OFF*4	10	<ul style="list-style-type: none"> ● Coolant return from reservoir tank to radiator 	<ul style="list-style-type: none"> ● Visual 	Should be initial level in reservoir tank	See LC-43, "REFILLING ENGINE COOLANT".
OFF	11	<ul style="list-style-type: none"> ● Cylinder head 	<ul style="list-style-type: none"> ● Straight gauge feeler gauge 	0.1mm (0.004 in) Maximum distortion (warping)	See EM-121, "Inspection".
	12	<ul style="list-style-type: none"> ● Cylinder block and pistons 	<ul style="list-style-type: none"> ● Visual 	No scuffing on cylinder walls or piston	See EM-143, "Inspection".

*1: Turn the ignition switch ON.


*2: Engine running at 3,000 rpm for 10 minutes.

*3: Drive at 90 km/h (55 MPH) for 30 minutes and then let idle for 10 minutes.

*4: After 60 minutes of cool down time.

For more information, refer to LC-46, "OVERHEATING CAUSE ANALYSIS".

Description

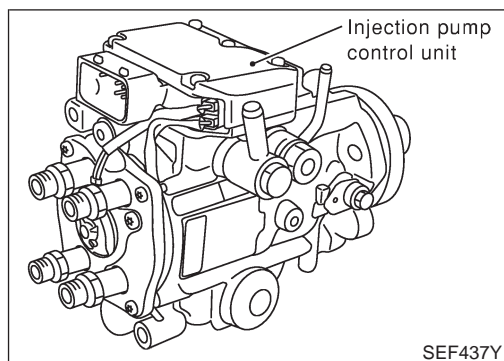

Description

NJEC0727

SYSTEM DESCRIPTION

NJEC0727S01

The ECM and the electronic control fuel injection pump control unit (abbreviated as the injection pump control unit) perform the real time communication (signal exchange).

The ECM transmits the signals of the target fuel injection amount, target fuel injection timing, and engine speed, etc., and receives the signals of the pump speed and fuel temperature, etc. from the injection pump control unit.

By those signals, the injection pump controls the optimum fuel injection amount and injection timing of the spill valve and timing control valve.

The injection pump control unit has an on board diagnostic system, which detects malfunctions related to sensors or actuators built-into electronic control fuel injection pump. These malfunction information are transferred through the line (circuit) from injection pump control unit to ECM.

FUEL INJECTION AMOUNT CONTROL

NJEC0727S02

In accordance with the target fuel injection amount signal from the ECM, the injection amount is controlled by controlling the spill valve in the injection pump and by changing the needle opening time.

FUEL INJECTION TIMING CONTROL

NJEC0727S03

Based on the target fuel injection timing signal from the ECM, the injection timing is controlled in accordance with the timer spring by performing the duty control of the timing control valve in the injection pump and by adjusting the pressure of the timer piston high pressure chamber.

FUEL TEMPERATURE SENSOR

NJEC0727S04

The sensor detects the fuel temperature in the injection pump and calibrates the injection amount change by the fuel temperature.

CAM RING POSITION SENSOR

NJEC0727S05

The sensor detects the passing of the protrusion on the sensor wheel in the injection pump by the semiconductor magnetic resistance element sensor. The cam ring position sensor synchronizes with the cam ring, and detects the actual advance amount. The injection pump control unit measures the injection pump revolution by the signal of the cam ring position sensor.

CONSULT-II Reference Value in Data Monitor Mode

NJEC0728

Remarks: Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
FUEL TEMP SEN	● Engine: After warming up	More than 40°C (104°F)
SPILL/V	● Engine: After warming up, idle the engine.	Approx. 12 - 13°C
INT/A VOLUME	● Engine: After warming up, idle the engine.	Approx. 150 - 450 mg/st
F/CUT SIGNAL	● Engine: After warming up	Idle ON

DTC P1241 P7-F/INJ TIMG FB

YD

CONSULT-II Reference Value in Data Monitor Mode (Cont'd)

MONITOR ITEM	CONDITION	SPECIFICATION
BARO SEN	<ul style="list-style-type: none"> ● Ignition switch: ON 	Altitude Approx. 0 m (0 ft): Approx. 100.62 kPa (1.0062 bar, 1.026 kg/cm ² , 14.59 psi) Approx. 1,000 m (3,281 ft): Approx. 88.95 kPa (0.8895 bar, 0.907 kg/cm ² , 12.90 psi) Approx. 1,500 m (4,922 ft): Approx. 83.16 kPa (0.8316 bar, 0.848 kg/cm ² , 12.06 psi) Approx. 2,000 m (6,562 ft): Approx. 78.36 kPa (0.7836 bar, 0.799 kg/cm ² , 11.36 psi)

ECM Terminals and Reference Value

NJEC0729

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
313	L/W	Electronic control fuel injection pump	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0.1V
314	L/R	Electronic control fuel injection pump	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0.4V
316	PU	Electronic control fuel injection pump	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 2.5V
317	P	Electronic control fuel injection pump	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 2.5V

On Board Diagnosis Logic

NJEC0730

DTC	Malfunction is detected when	Check Items (Possible cause)
P1241 0707	<ul style="list-style-type: none"> ● Fuel injection timing control system does not function properly. 	<ul style="list-style-type: none"> ● Harness or connectors (Electronic control fuel injection pump circuit is open or shorted.) ● Electronic control fuel injection pump ● Improper fuel quality

DATA MONITOR

MONITOR	NO DTC
CKPS-RPM (TDC) XXX rpm	

SEF817Y

DTC Confirmation Procedure

NJEC0731

Ⓜ WITH CONSULT-II

NJEC0731S01

- 1) Turn ignition switch "ON" and wait at least 2 seconds.
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and run it for at least 2 seconds at idle speed. (If engine does not run, turn ignition switch to "START" for at least 2 seconds.)
- 4) Keep engine speed at more than 2,000 rpm for at least 10 seconds.
- 5) If DTC is detected, go to "Diagnostic Procedure", EC-638.

⊗ WITHOUT CONSULT-II

NJEC0731S02




- 1) Turn ignition switch "ON" and wait at least 2 seconds.
- 2) Start engine and run it for at least 2 seconds at idle speed. (If engine does not run, turn ignition switch to "START" for at least 2 seconds.)
- 3) Keep engine speed at more than 2,000 rpm for at least 10 seconds.
- 4) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 5) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.
- 6) If DTC is detected, go to "Diagnostic Procedure", EC-638.

Wiring Diagram

NJEC0732

EC-INJPMP-01

— : DETECTABLE LINE FOR DTC
— : NON-DETECTABLE LINE FOR DTC

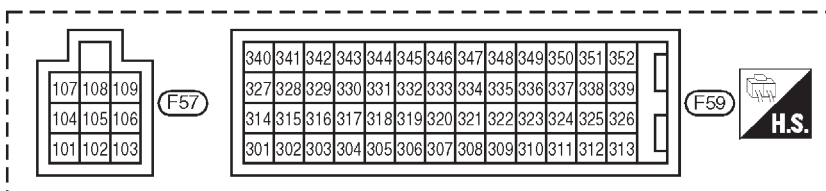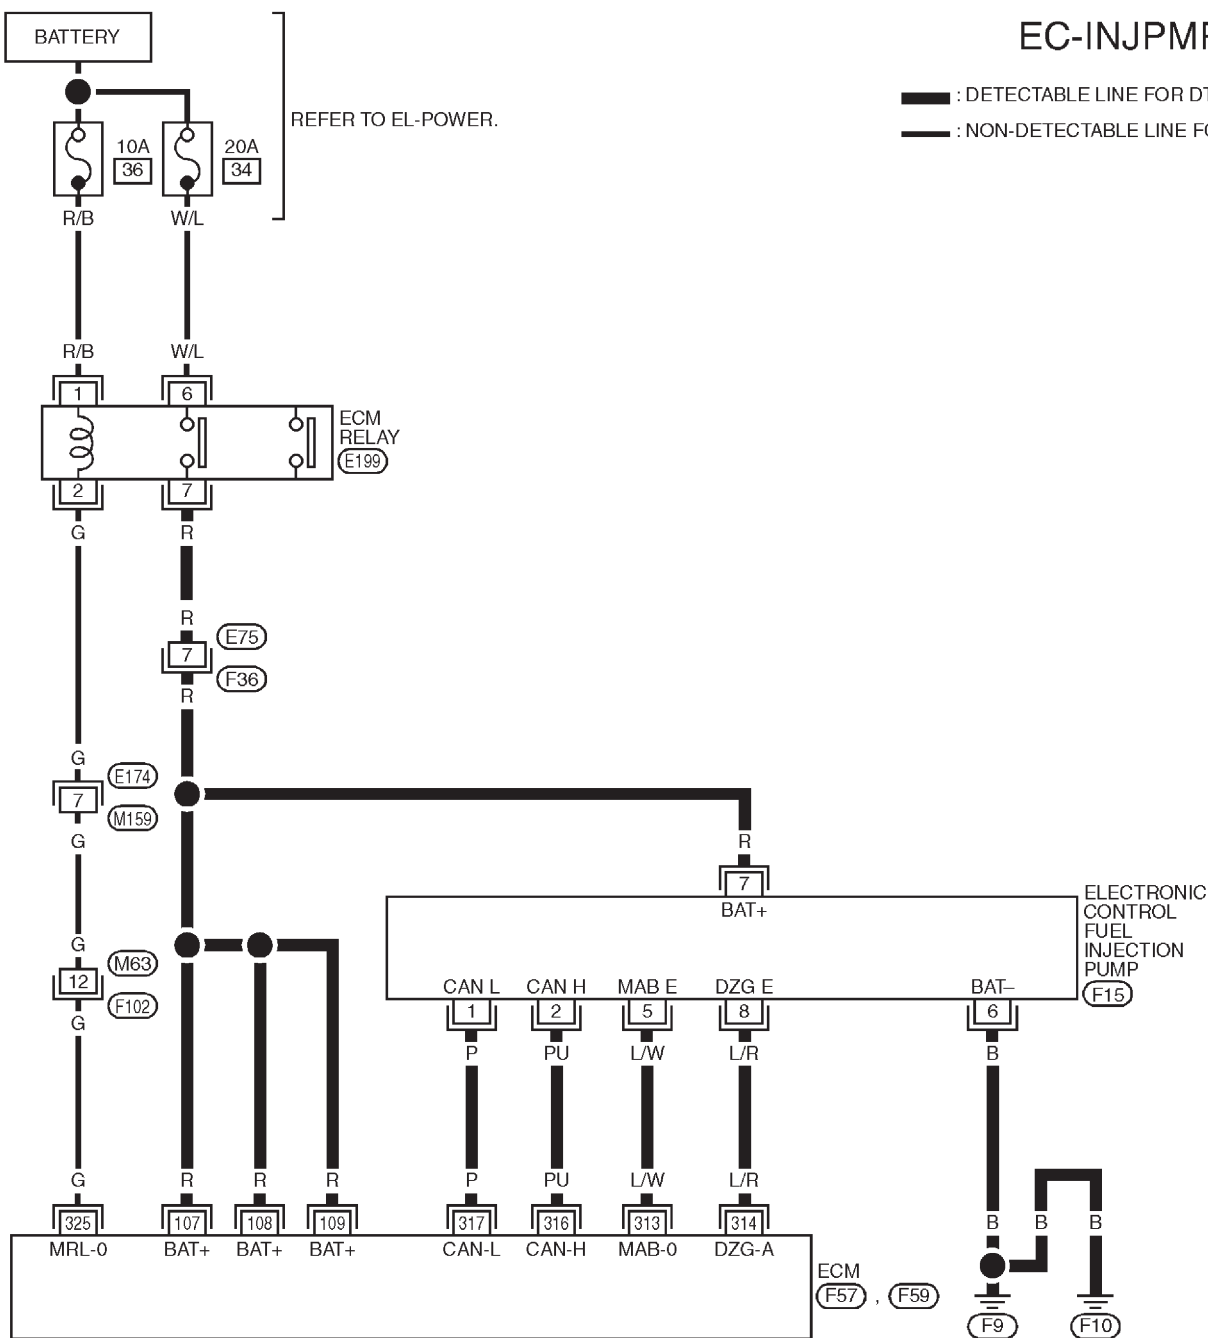



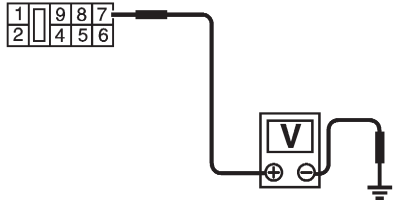
YEC016A

Diagnostic Procedure

NJEC0733

1	INSPECTION START
1. Turn ignition switch "OFF". 2. Perform "AIR BREEDING", EC-520, and "WATER DRAINING", EC-520.	
▶	GO TO 2.

2	PERFORM DTC CONFIRMATION PROCEDURE AGAIN
Perform "DTC Confirmation Procedure", EC-635 again.	
OK or NG	
OK	▶ INSPECTION END
NG	▶ GO TO 3.

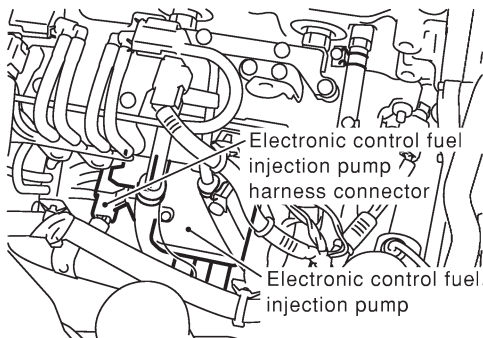3	CHECK ELECTRONIC CONTROL FUEL INJECTION PUMP POWER SUPPLY CIRCUIT
1. Turn ignition switch "OFF". 2. Disconnect electronic control fuel injection pump harness connector.	
 <p>Electronic control fuel injection pump harness connector</p> <p>Electronic control fuel injection pump</p>	
SEF390Y	
3. Turn ignition switch "ON". 4. Check voltage between electronic control fuel injection pump terminal 7 and ground.	
	
 <p>Voltage: Battery voltage</p>	
YEC058A	
OK or NG	
OK	▶ GO TO 5.
NG	▶ GO TO 4.


4	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none"> ● Harness connectors E75, F36 ● Harness for open or short between electronic control fuel injection pump and ECM ● Harness for open or short between electronic control fuel injection pump and ECM relay 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

5	CHECK ELECTRONIC CONTROL FUEL INJECTION PUMP GROUND CIRCUIT FOR OPEN AND SHORT	
<p>1. Turn ignition switch "OFF".</p> <p>2. Check harness continuity between electronic control fuel injection pump terminal 6 and ground. Refer to Wiring Diagram.</p> <p style="padding-left: 20px;">Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 6.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

6	CHECK COMMUNICATION LINE FOR OPEN AND SHORT											
<p>1. Check continuity between the following terminals. Refer to Wiring Diagram.</p> <table border="1" style="margin-left: auto; margin-right: auto; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Electronic control fuel injection pump</th> <th style="text-align: center;">ECM</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">1</td> <td style="text-align: center;">317</td> </tr> <tr> <td style="text-align: center;">2</td> <td style="text-align: center;">316</td> </tr> <tr> <td style="text-align: center;">5</td> <td style="text-align: center;">313</td> </tr> <tr> <td style="text-align: center;">8</td> <td style="text-align: center;">314</td> </tr> </tbody> </table> <p style="text-align: right; margin-top: 10px;">MTBL0462</p> <p style="padding-left: 20px;">Continuity should exist.</p> <p>2. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>			Electronic control fuel injection pump	ECM	1	317	2	316	5	313	8	314
Electronic control fuel injection pump	ECM											
1	317											
2	316											
5	313											
8	314											
OK	▶	GO TO 7.										
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.										

7	CHECK INTERMITTENT INCIDENT	
<p>Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-559.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	Replace electronic control fuel injection pump.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

Description

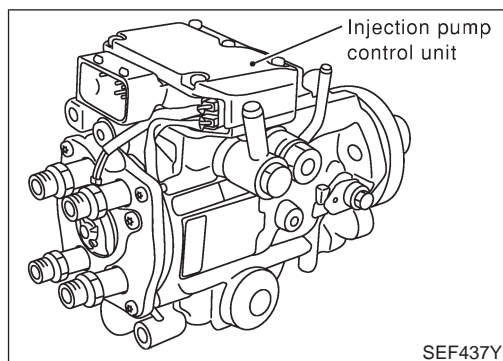

Description

NJEC0714

SYSTEM DESCRIPTION

NJEC0714S01

The ECM and the electronic control fuel injection pump control unit (abbreviated as the injection pump control unit) perform the real time communication (signal exchange).

The ECM transmits the signals of the target fuel injection amount, target fuel injection timing, and engine speed, etc., and receives the signals of the pump speed and fuel temperature, etc. from the injection pump control unit.

By those signals, the injection pump controls the optimum fuel injection amount and injection timing of the spill valve and timing control valve.

The injection pump control unit has an on board diagnostic system, which detects malfunctions related to sensors or actuators built-into electronic control fuel injection pump. These malfunction information are transferred through the line (circuit) from injection pump control unit to ECM.

FUEL INJECTION AMOUNT CONTROL

NJEC0714S02

In accordance with the target fuel injection amount signal from the ECM, the injection amount is controlled by controlling the spill valve in the injection pump and by changing the needle opening time.

FUEL INJECTION TIMING CONTROL

NJEC0714S03

Based on the target fuel injection timing signal from the ECM, the injection timing is controlled in accordance with the timer spring by performing the duty control of the timing control valve in the injection pump and by adjusting the pressure of the timer piston high pressure chamber.

FUEL TEMPERATURE SENSOR

NJEC0714S04

The sensor detects the fuel temperature in the injection pump and calibrates the injection amount change by the fuel temperature.

CAM RING POSITION SENSOR

NJEC0714S05

The sensor detects the passing of the protrusion on the sensor wheel in the injection pump by the semiconductor magnetic resistance element sensor. The cam ring position sensor synchronizes with the cam ring, and detects the actual advance amount. The injection pump control unit measures the injection pump revolution by the signal of the cam ring position sensor.

CONSULT-II Reference Value in Data Monitor Mode

NJEC0715

Remarks: Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
FUEL TEMP SEN	● Engine: After warming up		More than 40°C (104°F)
SPILL/V	● Engine: After warming up, idle the engine.		Approx. 12 - 13°C
INT/A VOLUME	● Engine: After warming up, idle the engine.		Approx. 150 - 450 mg/st
F/CUT SIGNAL	● Engine: After warming up	Idle	ON

DTC P1251 P4-SPILL/V CIRC

YD

CONSULT-II Reference Value in Data Monitor Mode (Cont'd)

MONITOR ITEM	CONDITION	SPECIFICATION
BARO SEN	<ul style="list-style-type: none"> ● Ignition switch: ON 	Altitude Approx. 0 m (0 ft): Approx. 100.62 kPa (1.0062 bar, 1.026 kg/cm ² , 14.59 psi) Approx. 1,000 m (3,281 ft): Approx. 88.95 kPa (0.8895 bar, 0.907 kg/cm ² , 12.90 psi) Approx. 1,500 m (4,922 ft): Approx. 83.16 kPa (0.8316 bar, 0.848 kg/cm ² , 12.06 psi) Approx. 2,000 m (6,562 ft): Approx. 78.36 kPa (0.7836 bar, 0.799 kg/cm ² , 11.36 psi)

ECM Terminals and Reference Value

NJEC0716

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
313	L/W	Electronic control fuel injection pump	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0.1V
314	L/R	Electronic control fuel injection pump	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0.4V
316	PU	Electronic control fuel injection pump	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 2.5V
317	P	Electronic control fuel injection pump	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 2.5V

On Board Diagnosis Logic

NJEC0717

DTC	Malfunction is detected when	Check Items (Possible cause)
P1251 0704	<ul style="list-style-type: none"> ● Spill valve (Built-into electronic control fuel injection pump) does not function properly. 	<ul style="list-style-type: none"> ● Harness or connectors (Electronic control fuel injection pump circuit is open or shorted.) ● Electronic control fuel injection pump

DATA MONITOR

MONITOR	NO DTC
CKPS-RPM (TDC) XXX rpm	

SEF817Y

DTC Confirmation Procedure

NJEC0718

④ WITH CONSULT-II

NJEC0718S01

- 1) Turn ignition switch "ON" and wait at least 2 seconds.
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and run it for at least 2 seconds at idle speed. (If engine does not run, turn ignition switch to "START" for at least 2 seconds.)
- 4) If DTC is detected, go to "Diagnostic Procedure", EC-644.

⊗ WITHOUT CONSULT-II

NJEC0718S02

- 1) Turn ignition switch "ON" and wait at least 2 seconds.

DTC P1251 P4-SPILL/V CIRC

YD

DTC Confirmation Procedure (Cont'd)




- 2) Start engine and run it for at least 2 seconds at idle speed. (If engine does not run, turn ignition switch to "START" for at least 2 seconds.)
- 3) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 4) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.
- 5) If DTC is detected, go to "Diagnostic Procedure", EC-644.

Wiring Diagram

NJE0719

EC-INJPMP-01



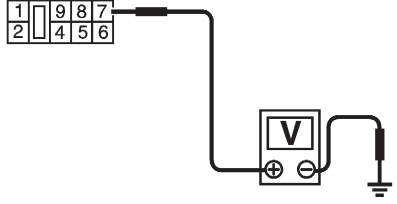
: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

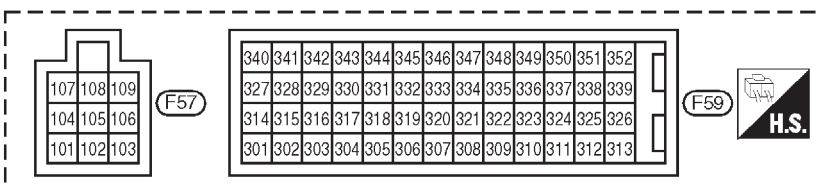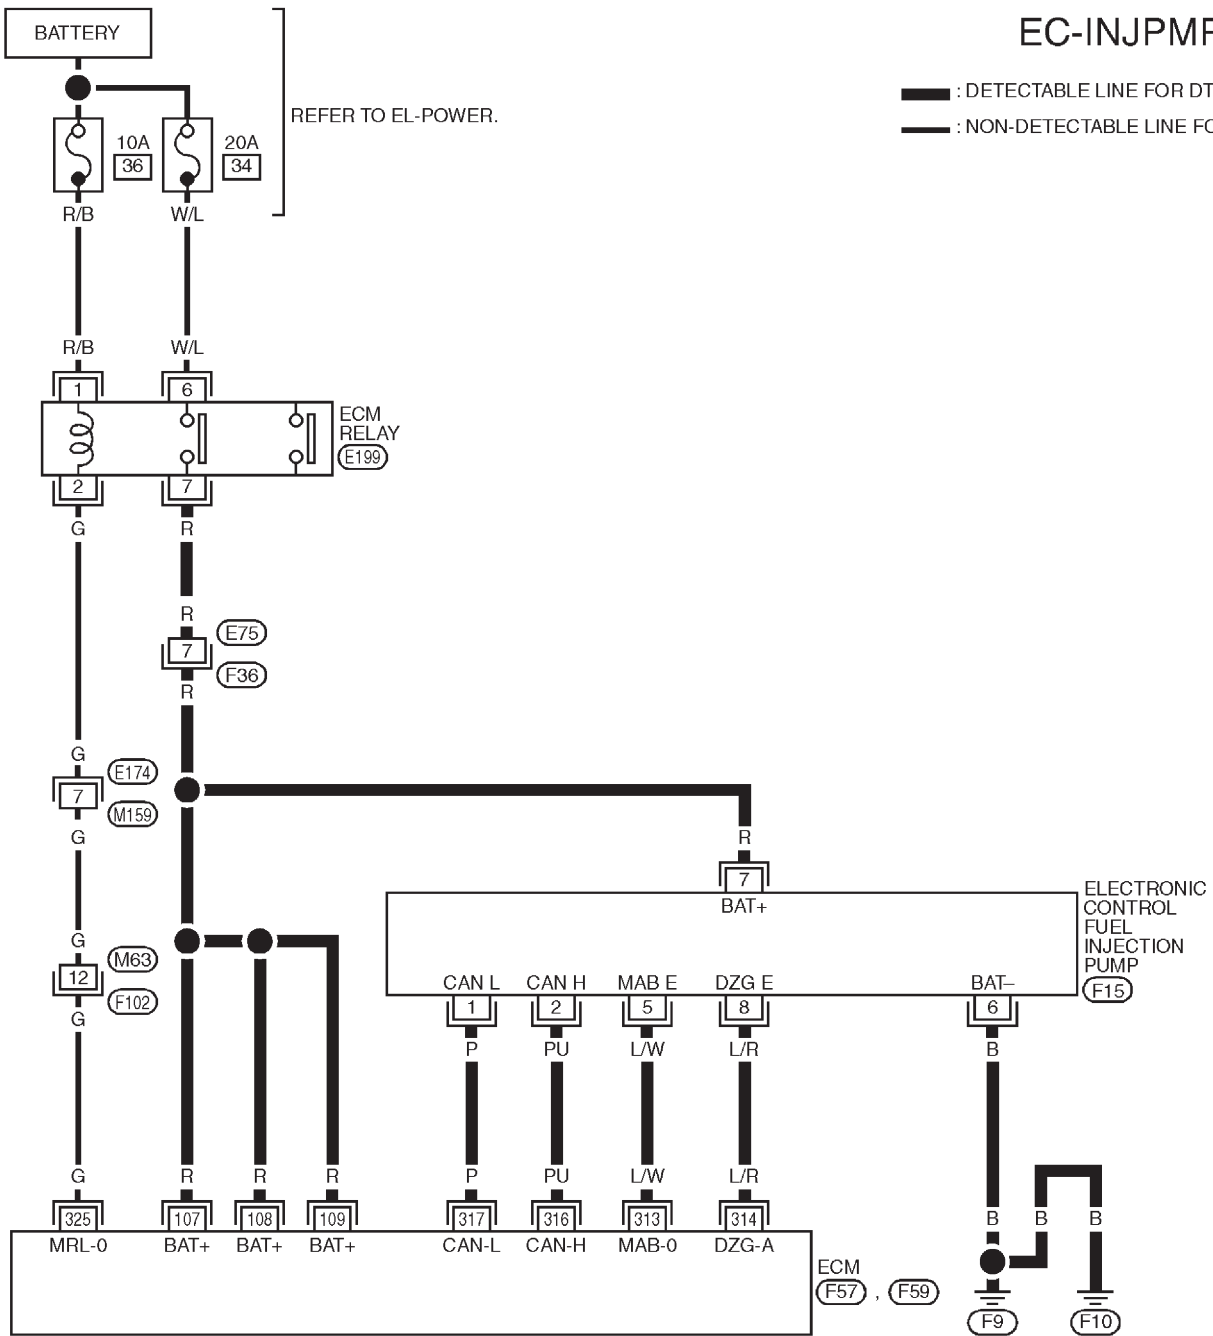

YEC016A

Diagnostic Procedure

NJEC0720

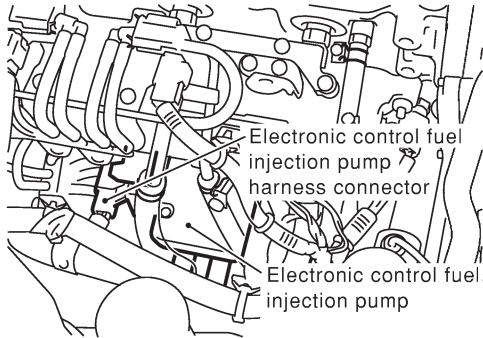1	CHECK ELECTRONIC CONTROL FUEL INJECTION PUMP POWER SUPPLY CIRCUIT								
<p>1. Turn ignition switch "OFF". 2. Disconnect electronic control fuel injection pump harness connector.</p> <div style="text-align: center;">  <p>Electronic control fuel injection pump harness connector Electronic control fuel injection pump</p> </div> <p>3. Turn ignition switch "ON". 4. Check voltage between electronic control fuel injection pump terminal 7 and ground.</p> <div style="text-align: center;">  <div style="display: flex; align-items: center; justify-content: center;"> <table border="1" style="border-collapse: collapse; margin-right: 20px;"> <tr><td>1</td><td>9</td><td>8</td><td>7</td></tr> <tr><td>2</td><td>4</td><td>5</td><td>6</td></tr> </table>  <div style="margin-left: 20px;"> <p>Voltage: Battery voltage</p> <p>OK or NG</p> </div> </div> </div> <p style="text-align: right;">SEF390Y</p> <p style="text-align: right;">YEC058A</p>		1	9	8	7	2	4	5	6
1	9	8	7						
2	4	5	6						
OK	▶ GO TO 3.								
NG	▶ GO TO 2.								

2	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connector E75, F36 ● Harness for open or short between electronic control fuel injection pump and ECM ● Harness for open or short between electronic control fuel injection pump and ECM relay <p style="text-align: right;">▶ Repair open circuit or short to ground or short to power in harness or connectors.</p>	

3	CHECK ELECTRONIC CONTROL FUEL INJECTION PUMP GROUND CIRCUIT FOR OPEN AND SHORT
<p>1. Turn ignition switch "OFF". 2. Check harness continuity between electronic control fuel injection pump terminal 6 and ground. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 4.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

DTC P1251 P4-SPILL/V CIRC

YD


Diagnostic Procedure (Cont'd)

4	CHECK COMMUNICATION LINE FOR OPEN AND SHORT										
1. Check continuity between the following terminals. Refer to Wiring Diagram.											
<table border="1"><thead><tr><th>Electronic control fuel injection pump</th><th>ECM</th></tr></thead><tbody><tr><td>1</td><td>317</td></tr><tr><td>2</td><td>316</td></tr><tr><td>5</td><td>313</td></tr><tr><td>8</td><td>314</td></tr></tbody></table>		Electronic control fuel injection pump	ECM	1	317	2	316	5	313	8	314
Electronic control fuel injection pump	ECM										
1	317										
2	316										
5	313										
8	314										
Continuity should exist.											
2. Also check harness for short to ground and short to power.											
OK or NG											
OK	▶ GO TO 5.										
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.										

MTBL0462

5	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-559.	
OK or NG	
OK	▶ Replace electronic control fuel injection pump.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

Description

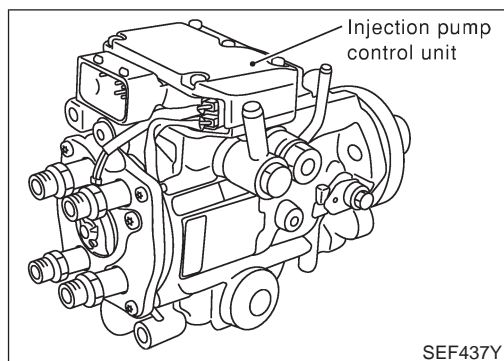

Description

NJEC0700

SYSTEM DESCRIPTION

NJEC0700S01

The ECM and the electronic control fuel injection pump control unit (abbreviated as the injection pump control unit) perform the real time communication (signal exchange).

The ECM transmits the signals of the target fuel injection amount, target fuel injection timing, and engine speed, etc., and receives the signals of the pump speed and fuel temperature, etc. from the injection pump control unit.

By those signals, the injection pump controls the optimum fuel injection amount and injection timing of the spill valve and timing control valve.

The injection pump control unit has an on board diagnostic system, which detects malfunctions related to sensors or actuators built-into electronic control fuel injection pump. These malfunction information are transferred through the line (circuit) from injection pump control unit to ECM.

FUEL INJECTION AMOUNT CONTROL

NJEC0700S02

In accordance with the target fuel injection amount signal from the ECM, the injection amount is controlled by controlling the spill valve in the injection pump and by changing the needle opening time.

FUEL INJECTION TIMING CONTROL

NJEC0700S03

Based on the target fuel injection timing signal from the ECM, the injection timing is controlled in accordance with the timer spring by performing the duty control of the timing control valve in the injection pump and by adjusting the pressure of the timer piston high pressure chamber.

FUEL TEMPERATURE SENSOR

NJEC0700S04

The sensor detects the fuel temperature in the injection pump and calibrates the injection amount change by the fuel temperature.

CAM RING POSITION SENSOR

NJEC0700S05

The sensor detects the passing of the protrusion on the sensor wheel in the injection pump by the semiconductor magnetic resistance element sensor. The cam ring position sensor synchronizes with the cam ring, and detects the actual advance amount. The injection pump control unit measures the injection pump revolution by the signal of the cam ring position sensor.

CONSULT-II Reference Value in Data Monitor Mode

NJEC0701

Remarks: Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
FUEL TEMP SEN	● Engine: After warming up	More than 40°C (104°F)
SPILL/V	● Engine: After warming up, idle the engine.	Approx. 12 - 13°C
INT/A VOLUME	● Engine: After warming up, idle the engine.	Approx. 150 - 450 mg/st
F/CUT SIGNAL	● Engine: After warming up	Idle ON

DTC P1337 P2-DTC PULSE SIG

YD

CONSULT-II Reference Value in Data Monitor Mode (Cont'd)

MONITOR ITEM	CONDITION	SPECIFICATION
BARO SEN	<ul style="list-style-type: none"> ● Ignition switch: ON 	Altitude Approx. 0 m (0 ft): Approx. 100.62 kPa (1.0062 bar, 1.026 kg/cm ² , 14.59 psi) Approx. 1,000 m (3,281 ft): Approx. 88.95 kPa (0.8895 bar, 0.907 kg/cm ² , 12.90 psi) Approx. 1,500 m (4,922 ft): Approx. 83.16 kPa (0.8316 bar, 0.848 kg/cm ² , 12.06 psi) Approx. 2,000 m (6,562 ft): Approx. 78.36 kPa (0.7836 bar, 0.799 kg/cm ² , 11.36 psi)

ECM Terminals and Reference Value

NJEC0702

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
313	L/W	Electronic control fuel injection pump	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0.1V
314	L/R	Electronic control fuel injection pump	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0.4V
316	PU	Electronic control fuel injection pump	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 2.5V
317	P	Electronic control fuel injection pump	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 2.5V

On Board Diagnosis Logic

NJEC0703

DTC	Malfunction is detected when	Check Items (Possible cause)
P1337 0702	<ul style="list-style-type: none"> ● Injection pump control unit input signal [Crankshaft position sensor (TDC) signal] processing function is malfunctioning. 	<ul style="list-style-type: none"> ● Harness or connectors (Electronic control fuel injection pump circuit is open or shorted.) ● Electronic control fuel injection pump

DATA MONITOR

MONITOR	NO DTC
CKPS-RPM (TDC) XXX rpm	

SEF817Y

DTC Confirmation Procedure

NJEC0704

Ⓜ WITH CONSULT-II

NJEC0704S01

- 1) Turn ignition switch "ON" and wait at least 2 seconds.
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and run it for at least 2 seconds at idle speed. (If engine does not run, turn ignition switch to "START" for at least 2 seconds.)
- 4) If DTC P0335 is detected, go to "Diagnostic procedure", EC-590.
If DTC P1337 is detected, go to "Diagnostic Procedure", EC-650.

DTC P1337 P2-DTC PULSE SIG

YD

DTC Confirmation Procedure (Cont'd)

⊗ WITHOUT CONSULT-II

NJEC0704S02

- 1) Turn ignition switch "ON" and wait at least 2 seconds.
- 2) Start engine and run it for at least 2 seconds at idle speed.
(If engine does not run, turn ignition switch to "START" for at least 2 seconds.)
- 3) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 4) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.
- 5) If DTC P0335 is detected, go to "Diagnostic Procedure", EC-590.
If DTC P1337 is detected, go to "Diagnostic Procedure", EC-650.




DTC P1337 P2-DTC PULSE SIG

Wiring Diagram

NJE0705

EC-INJPMP-01



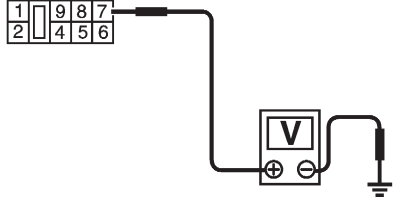
: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

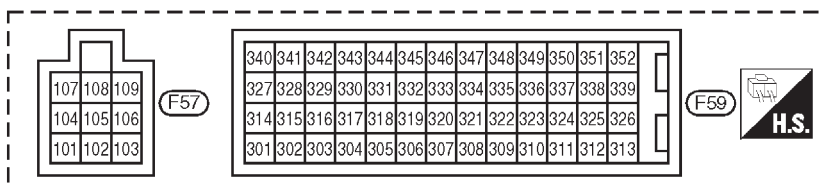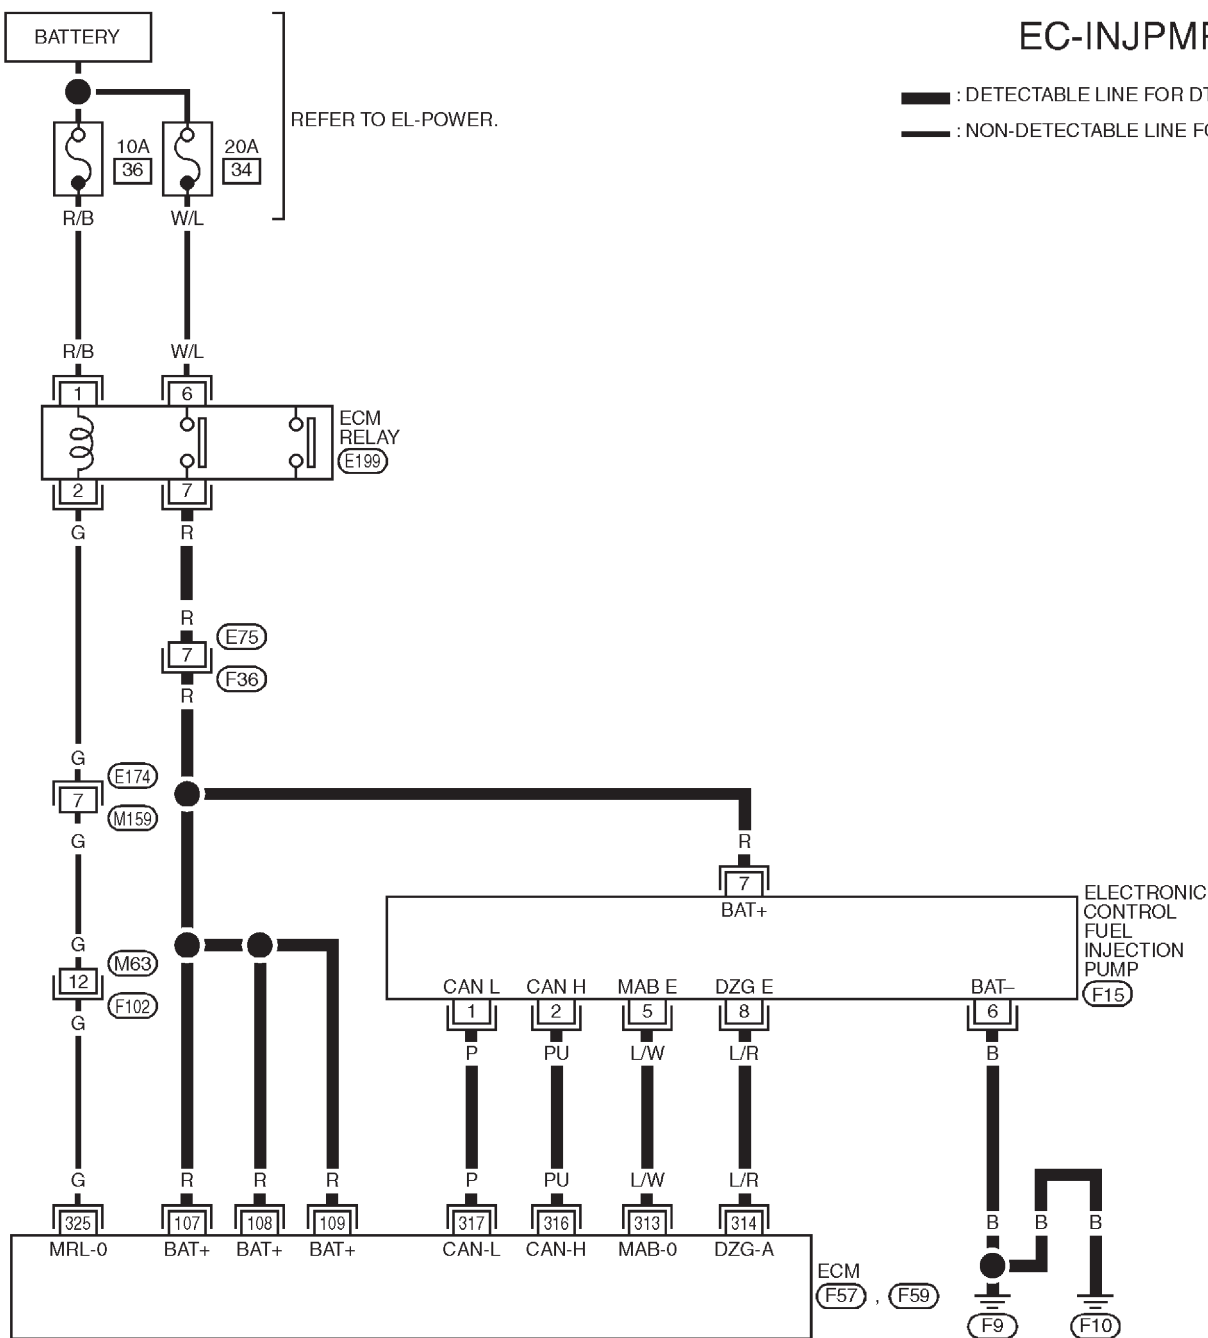

YEC016A

Diagnostic Procedure

NJEC0706

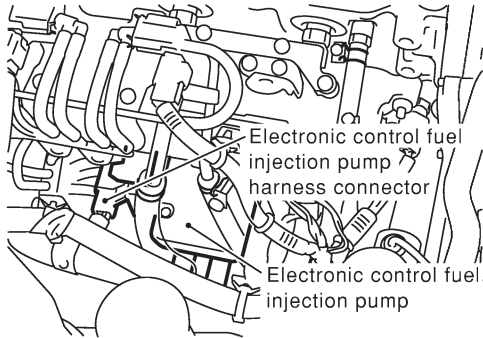1	CHECK ELECTRONIC CONTROL FUEL INJECTION PUMP POWER SUPPLY CIRCUIT									
<p>1. Turn ignition switch "OFF". 2. Disconnect electronic control fuel injection pump harness connector.</p> <div style="text-align: center;">  <p>Electronic control fuel injection pump harness connector Electronic control fuel injection pump</p> </div> <p>3. Turn ignition switch "ON". 4. Check voltage between electronic control fuel injection pump terminal 7 and ground.</p> <div style="text-align: center;">  <div style="display: flex; align-items: center; justify-content: center; margin-top: 10px;"> <div style="border: 1px solid black; padding: 2px; margin-right: 10px;"> <table border="1" style="font-size: 8px;"> <tr><td>1</td><td>9</td><td>8</td><td>7</td></tr> <tr><td>2</td><td>4</td><td>5</td><td>6</td></tr> </table> </div> <div style="flex-grow: 1;">  <p style="margin-left: 100px;">Voltage: Battery voltage</p> <p style="margin-left: 100px;">OK or NG</p> </div> </div> </div> <p style="text-align: right;">SEF390Y</p> <p style="text-align: right;">YEC058A</p>			1	9	8	7	2	4	5	6
1	9	8	7							
2	4	5	6							
OK	▶	GO TO 3.								
NG	▶	GO TO 2.								

2	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E75, F36 ● Harness for open or short between electronic control fuel injection pump and ECM ● Harness for open or short between electronic control fuel injection pump and ECM relay 		
▶		Repair open circuit or short to ground or short to power in harness or connectors.

3	CHECK ELECTRONIC CONTROL FUEL INJECTION PUMP GROUND CIRCUIT FOR OPEN AND SHORT	
<p>1. Turn ignition switch "OFF". 2. Check harness continuity between electronic control fuel injection pump terminal 6 and ground. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 4.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

DTC P1337 P2-DTC PULSE SIG

YD


Diagnostic Procedure (Cont'd)

4	CHECK COMMUNICATION LINE FOR OPEN AND SHORT										
1. Check continuity between the following terminals. Refer to Wiring Diagram.											
<table border="1"><thead><tr><th>Electronic control fuel injection pump</th><th>ECM</th></tr></thead><tbody><tr><td>1</td><td>317</td></tr><tr><td>2</td><td>316</td></tr><tr><td>5</td><td>313</td></tr><tr><td>8</td><td>314</td></tr></tbody></table>		Electronic control fuel injection pump	ECM	1	317	2	316	5	313	8	314
Electronic control fuel injection pump	ECM										
1	317										
2	316										
5	313										
8	314										
Continuity should exist.											
2. Also check harness for short to ground and short to power.											
OK or NG											
OK	▶ GO TO 5.										
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.										

MTBL0462

5	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-559.	
OK or NG	
OK	▶ Replace electronic control fuel injection pump.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

Description

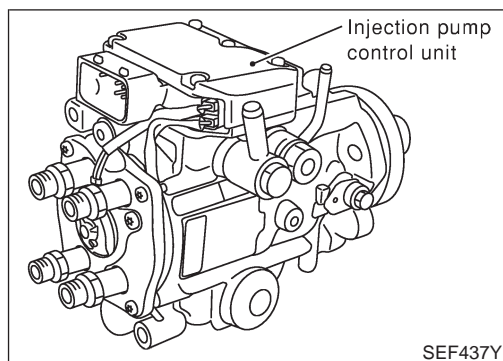

Description

NJEC0693

SYSTEM DESCRIPTION

NJEC0693S01

The ECM and the electronic control fuel injection pump control unit (abbreviated as the injection pump control unit) perform the real time communication (signal exchange).

The ECM transmits the signals of the target fuel injection amount, target fuel injection timing, and engine speed, etc., and receives the signals of the pump speed and fuel temperature, etc. from the injection pump control unit.

By those signals, the injection pump controls the optimum fuel injection amount and injection timing of the spill valve and timing control valve.

The injection pump control unit has an on board diagnostic system, which detects malfunctions related to sensors or actuators built-into electronic control fuel injection pump. These malfunction information are transferred through the line (circuit) from injection pump control unit to ECM.

FUEL INJECTION AMOUNT CONTROL

NJEC0693S02

In accordance with the target fuel injection amount signal from the ECM, the injection amount is controlled by controlling the spill valve in the injection pump and by changing the needle opening time.

FUEL INJECTION TIMING CONTROL

NJEC0693S03

Based on the target fuel injection timing signal from the ECM, the injection timing is controlled in accordance with the timer spring by performing the duty control of the timing control valve in the injection pump and by adjusting the pressure of the timer piston high pressure chamber.

FUEL TEMPERATURE SENSOR

NJEC0693S04

The sensor detects the fuel temperature in the injection pump and calibrates the injection amount change by the fuel temperature.

CAM RING POSITION SENSOR

NJEC0693S05

The sensor detects the passing of the protrusion on the sensor wheel in the injection pump by the semiconductor magnetic resistance element sensor. The cam ring position sensor synchronizes with the cam ring, and detects the actual advance amount. The injection pump control unit measures the injection pump revolution by the signal of the cam ring position sensor.

CONSULT-II Reference Value in Data Monitor Mode

NJEC0694

Remarks: Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
FUEL TEMP SEN	● Engine: After warming up		More than 40°C (104°F)
SPILL/V	● Engine: After warming up, idle the engine.		Approx. 12 - 13°C
INT/A VOLUME	● Engine: After warming up, idle the engine.		Approx. 150 - 450 mg/st
F/CUT SIGNAL	● Engine: After warming up	Idle	ON

DTC P1341 P1-CAM POS SEN

YD

CONSULT-II Reference Value in Data Monitor Mode (Cont'd)

MONITOR ITEM	CONDITION	SPECIFICATION
BARO SEN	<ul style="list-style-type: none"> ● Ignition switch: ON 	Altitude Approx. 0 m (0 ft): Approx. 100.62 kPa (1.0062 bar, 1.026 kg/cm ² , 14.59 psi) Approx. 1,000 m (3,281 ft): Approx. 88.95 kPa (0.8895 bar, 0.907 kg/cm ² , 12.90 psi) Approx. 1,500 m (4,922 ft): Approx. 83.16 kPa (0.8316 bar, 0.848 kg/cm ² , 12.06 psi) Approx. 2,000 m (6,562 ft): Approx. 78.36 kPa (0.7836 bar, 0.799 kg/cm ² , 11.36 psi)

ECM Terminals and Reference Value

NJEC0695

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
313	L/W	Electronic control fuel injection pump	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0.1V
314	L/R	Electronic control fuel injection pump	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0.4V
316	PU	Electronic control fuel injection pump	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 2.5V
317	P	Electronic control fuel injection pump	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 2.5V

On Board Diagnosis Logic

NJEC0696

DTC	Malfunction is detected when	Check Items (Possible cause)
P1341 0701	<ul style="list-style-type: none"> ● An improper voltage signal from cam position sensor (Built-into electronic control fuel injection pump) is sent to injection pump control unit. 	<ul style="list-style-type: none"> ● Harness or connectors (Electronic control fuel injection pump circuit is open or shorted.) ● Electronic control fuel injection pump

DATA MONITOR

MONITOR	NO DTC
CKPS-RPM (TDC) XXX rpm	

SEF817Y

DTC Confirmation Procedure

NJEC0697

Ⓜ WITH CONSULT-II

NJEC0697S01

- 1) Turn ignition switch "ON" and wait at least 2 seconds.
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and run it for at least 2 seconds at idle speed. (If engine does not run, turn ignition switch to "START" for at least 2 seconds.)
- 4) If DTC is detected, go to "Diagnostic Procedure", EC-656.

ⓧ WITHOUT CONSULT-II

NJEC0697S02

- 1) Turn ignition switch "ON" and wait at least 2 seconds.

DTC P1341 P1-CAM POS SEN

YD

DTC Confirmation Procedure (Cont'd)

- 2) Start engine and run it for at least 2 seconds at idle speed. (If engine does not run, turn ignition switch to "START" for at least 2 seconds.)
- 3) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 4) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.
- 5) If DTC is detected, go to "Diagnostic Procedure", EC-656.




DTC P1341 P1-CAM POS SEN

Wiring Diagram

NJEC0698

EC-INJPMP-01



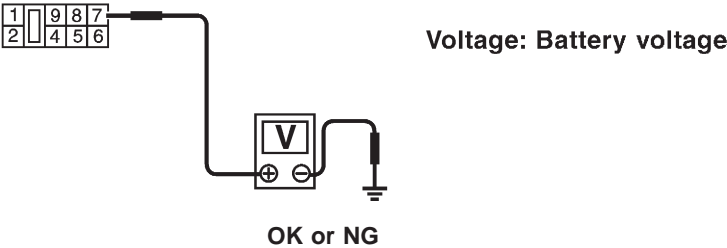
: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

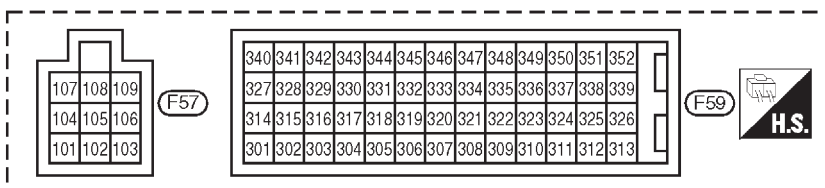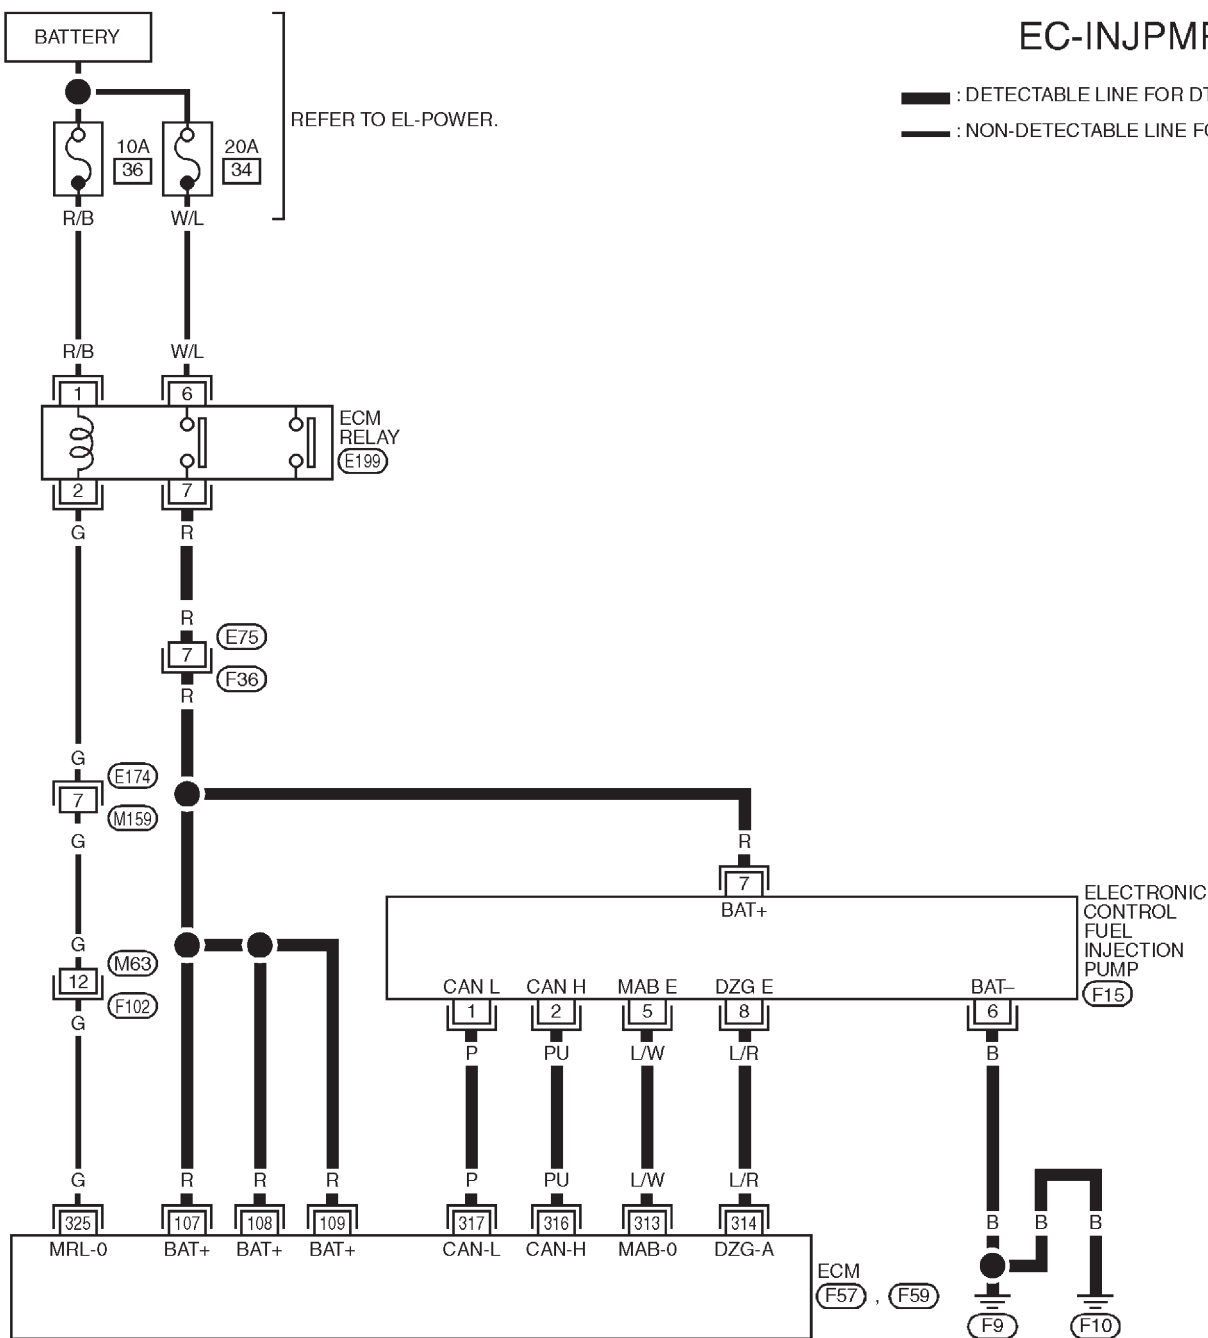

YEC016A

Diagnostic Procedure

NJEC0699

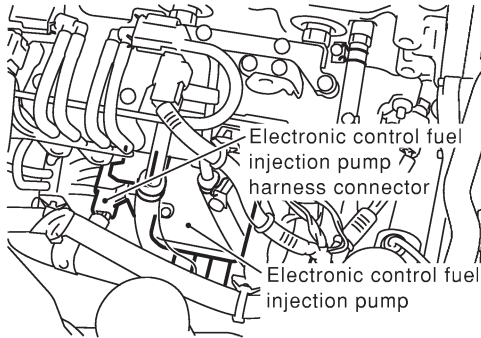1	CHECK ELECTRONIC CONTROL FUEL INJECTION PUMP POWER SUPPLY CIRCUIT	
<p>1. Turn ignition switch "OFF".</p> <p>2. Disconnect electronic control fuel injection pump harness connector.</p>		
		
<small>SEF390Y</small>		
<p>3. Turn ignition switch "ON".</p> <p>4. Check voltage between electronic control fuel injection pump terminal 7 and ground.</p>		
		
		
<small>YEC058A</small>		
OK	▶	GO TO 3.
NG	▶	GO TO 2.

2	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E75, F36 ● Harness for open or short between electronic control fuel injection pump and ECM ● Harness for open or short between electronic control fuel injection pump and ECM relay 		
▶ Repair open circuit or short to ground or short to power in harness or connectors.		

3	CHECK ELECTRONIC CONTROL FUEL INJECTION PUMP GROUND CIRCUIT FOR OPEN AND SHORT	
<p>1. Turn ignition switch "OFF".</p> <p>2. Check harness continuity between electronic control fuel injection pump terminal 6 and ground. Refer to Wiring Diagram.</p> <p style="color: blue;">Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p>		
OK or NG		
OK	▶	GO TO 4.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

DTC P1341 P1-CAM POS SEN

YD


Diagnostic Procedure (Cont'd)

4	CHECK COMMUNICATION LINE FOR OPEN AND SHORT										
1. Check continuity between the following terminals. Refer to Wiring Diagram.											
<table border="1"><thead><tr><th>Electronic control fuel injection pump</th><th>ECM</th></tr></thead><tbody><tr><td>1</td><td>317</td></tr><tr><td>2</td><td>316</td></tr><tr><td>5</td><td>313</td></tr><tr><td>8</td><td>314</td></tr></tbody></table>		Electronic control fuel injection pump	ECM	1	317	2	316	5	313	8	314
Electronic control fuel injection pump	ECM										
1	317										
2	316										
5	313										
8	314										
Continuity should exist.											
2. Also check harness for short to ground and short to power.											
OK or NG											
OK	▶ GO TO 5.										
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.										

MTBL0462

5	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-559.	
OK or NG	
OK	▶ Replace electronic control fuel injection pump.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

Description

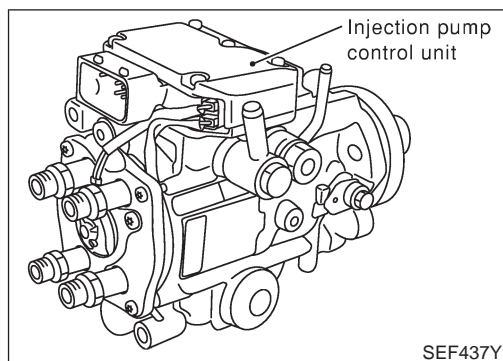

Description

NJEC0707

SYSTEM DESCRIPTION

NJEC0707S01

The ECM and the electronic control fuel injection pump control unit (abbreviated as the injection pump control unit) perform the real time communication (signal exchange).

The ECM transmits the signals of the target fuel injection amount, target fuel injection timing, and engine speed, etc., and receives the signals of the pump speed and fuel temperature, etc. from the injection pump control unit.

By those signals, the injection pump controls the optimum fuel injection amount and injection timing of the spill valve and timing control valve.

Injection pump control unit has an on board diagnostic system, which detects malfunctions related to sensors or actuators built-into electronic control fuel injection pump. These malfunction information are transferred through the line (circuit) from injection pump control unit to ECM.

FUEL INJECTION AMOUNT CONTROL

NJEC0707S02

In accordance with the target fuel injection amount signal from the ECM, the injection amount is controlled by controlling the spill valve in the injection pump and by changing the needle opening time.

FUEL INJECTION TIMING CONTROL

NJEC0707S03

Based on the target fuel injection timing signal from the ECM, the injection timing is controlled in accordance with the timer spring by performing the duty control of the timing control valve in the injection pump and by adjusting the pressure of the timer piston high pressure chamber.

FUEL TEMPERATURE SENSOR

NJEC0707S04

The sensor detects the fuel temperature in the injection pump and calibrates the injection amount change by the fuel temperature.

CAM RING POSITION SENSOR

NJEC0707S05

The sensor detects the passing of the protrusion on the sensor wheel in the injection pump by the semiconductor magnetic resistance element sensor. The cam ring position sensor synchronizes with the cam ring, and detects the actual advance amount. The injection pump control unit measures the injection pump revolution by the signal of the cam ring position sensor.

CONSULT-II Reference Value in Data Monitor Mode

NJEC0708

Remarks: Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
FUEL TEMP SEN	● Engine: After warming up		More than 40°C (104°F)
SPILL/V	● Engine: After warming up		Approx. 12 - 13°C
INT/A VOLUME	● Engine: After warming up, idle the engine.		Approx. 150 - 450 mg/st
F/CUT SIGNAL	● Engine: After warming up	Idle	ON

DTC P1600 P3-PUMP COMM LINE

YD

CONSULT-II Reference Value in Data Monitor Mode (Cont'd)

MONITOR ITEM	CONDITION	SPECIFICATION
BARO SEN	<ul style="list-style-type: none"> ● Ignition switch: ON 	Altitude Approx. 0 m (0 ft): Approx. 100.62 kPa (1.0062 bar, 1.026 kg/cm ² , 14.59 psi) Approx. 1,000 m (3,281 ft): Approx. 88.95 kPa (0.8895 bar, 0.907 kg/cm ² , 12.90 psi) Approx. 1,500 m (4,922 ft): Approx. 83.16 kPa (0.8316 bar, 0.848 kg/cm ² , 12.06 psi) Approx. 2,000 m (6,562 ft): Approx. 78.36 kPa (0.7836 bar, 0.799 kg/cm ² , 11.36 psi)

ECM Terminals and Reference Value

NJEC0709

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
313	L/W	Electronic control fuel injection pump	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	Approximately 0.1V
314	L/R	Electronic control fuel injection pump	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	Approximately 0.4V
316	PU	Electronic control fuel injection pump	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	Approximately 2.5V
317	P	Electronic control fuel injection pump	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	Approximately 2.5V

On Board Diagnosis Logic

NJEC0710

DTC	Malfunction is detected when	Check Items (Possible cause)
P1600 0703	<ul style="list-style-type: none"> ● Injection pump control unit receives incorrect voltage signal from ECM continuously. 	<ul style="list-style-type: none"> ● Harness or connectors (Electronic control fuel injection pump circuit is open or shorted.) ● Electronic control fuel injection pump

DATA MONITOR

MONITOR	NO DTC
CKPS-RPM (TDC) XXX rpm	

SEF817Y

DTC Confirmation Procedure

NJEC0711

Ⓜ WITH CONSULT-II

NJEC0711S01

- 1) Turn ignition switch "ON" and wait at least 2 seconds.
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and run it for at least 2 seconds at idle speed. (If engine does not run, turn ignition switch to "START" for at least 2 seconds.)
- 4) If DTC is detected, go to "Diagnostic Procedure", EC-662.

ⓧ WITHOUT CONSULT-II

NJEC0711S02

- 1) Turn ignition switch "ON" and wait at least 2 seconds.

DTC P1600 P3-PUMP COMM LINE

YD

DTC Confirmation Procedure (Cont'd)

- 2) Start engine and run it for at least 2 seconds at idle speed. (If engine does not run, turn ignition switch to "START" for at least 2 seconds.)
- 3) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 4) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.
- 5) If DTC is detected, go to "Diagnostic Procedure", EC-662.




DTC P1600 P3-PUMP COMM LINE

Wiring Diagram

NJE0712

EC-INJPMP-01



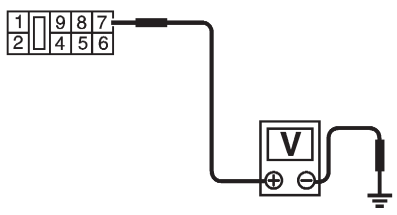
: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

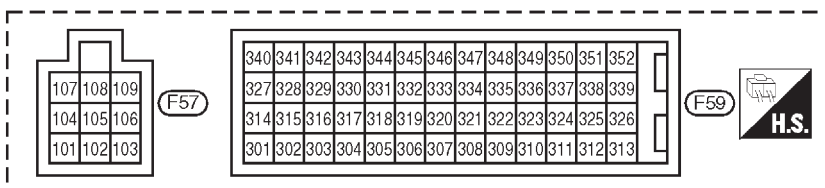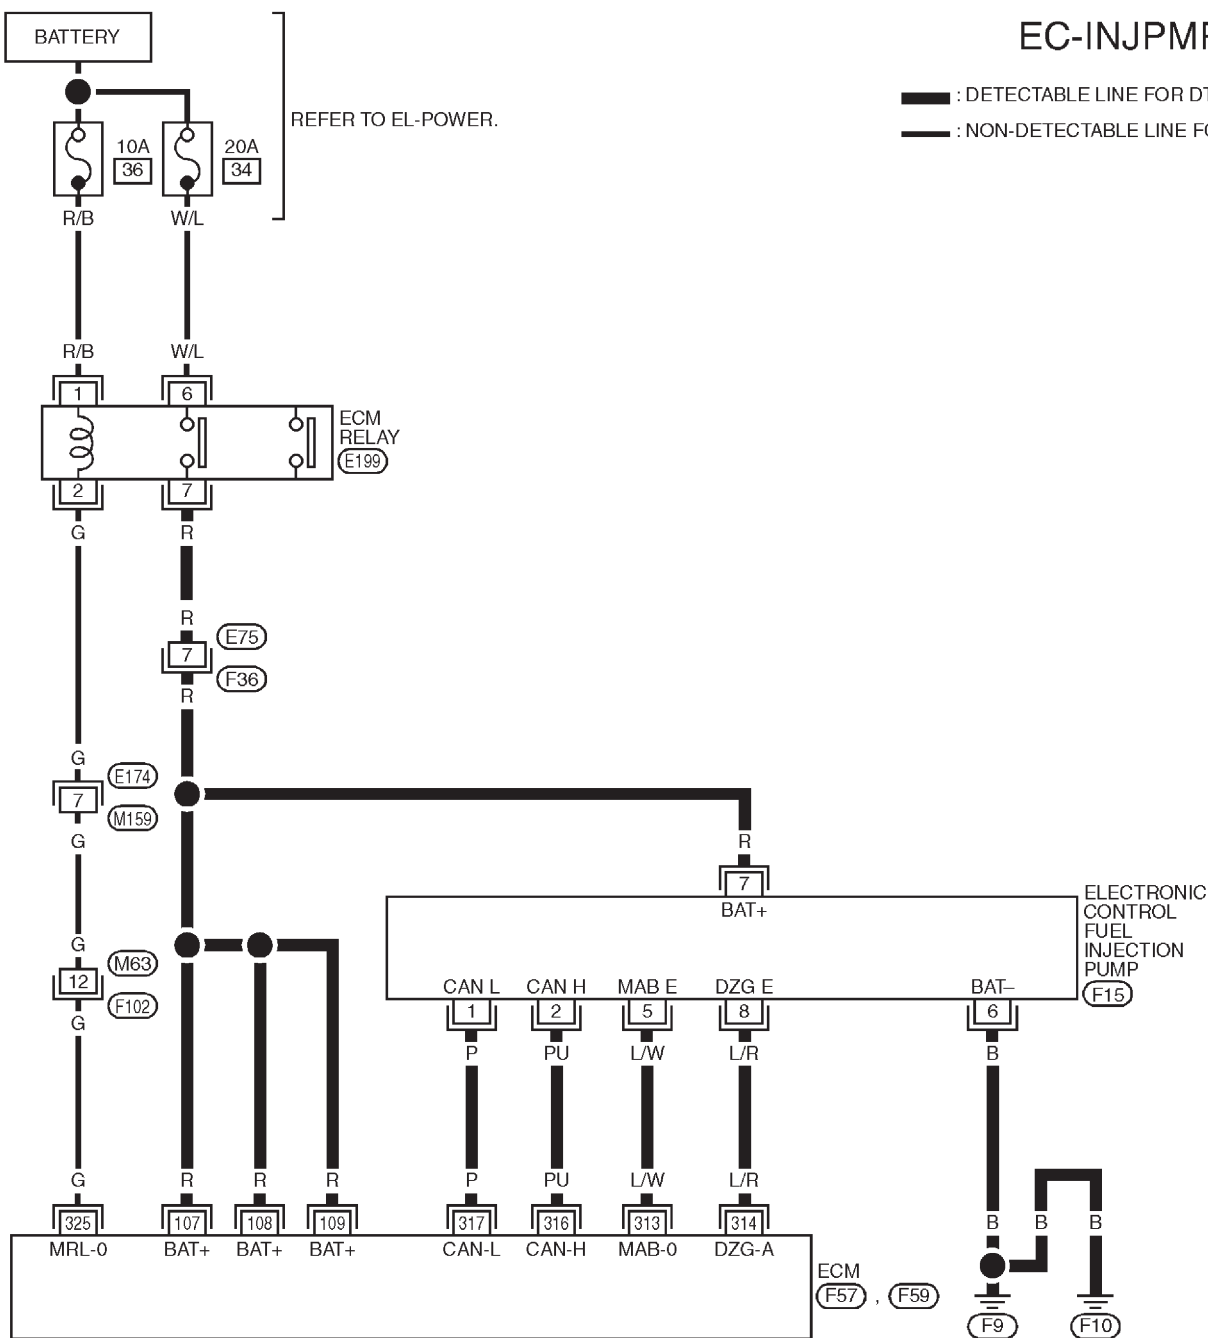

YEC016A

Diagnostic Procedure

NJEC0713

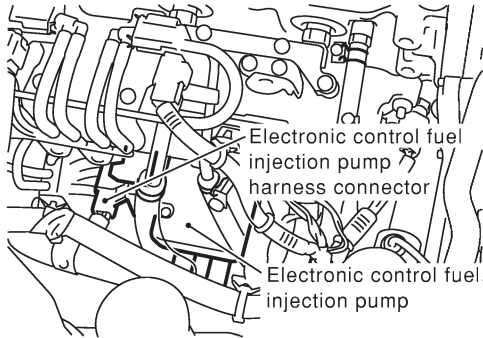1	CHECK ELECTRONIC CONTROL FUEL INJECTION PUMP POWER SUPPLY CIRCUIT	
<p>1. Turn ignition switch "OFF". 2. Disconnect electronic control fuel injection pump harness connector.</p> <div style="text-align: center;">  <p>Electronic control fuel injection pump harness connector Electronic control fuel injection pump</p> </div> <p>3. Turn ignition switch "ON". 4. Check voltage between electronic control fuel injection pump terminal 7 and ground.</p> <div style="text-align: center;">  </div> <div style="text-align: center;">  <p>Voltage: Battery voltage</p> <p>OK or NG</p> </div>		
<small>SEF390Y</small>		
<small>YEC058A</small>		
OK	▶	GO TO 3.
NG	▶	GO TO 2.

2	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E75, F36 ● Harness for open or short between electronic control fuel injection pump and ECM ● Harness for open or short between electronic control fuel injection pump and ECM relay 		
▶ Repair open circuit or short to ground or short to power in harness or connectors.		

3	CHECK ELECTRONIC CONTROL FUEL INJECTION PUMP GROUND CIRCUIT FOR OPEN AND SHORT	
<p>1. Turn ignition switch "OFF". 2. Check harness continuity between electronic control fuel injection pump terminal 6 and ground. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 4.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

DTC P1600 P3-PUMP COMM LINE

YD


Diagnostic Procedure (Cont'd)

4	CHECK COMMUNICATION LINE FOR OPEN AND SHORT										
1. Check continuity between the following terminals. Refer to Wiring Diagram.											
<table border="1"><thead><tr><th>Electronic control fuel injection pump</th><th>ECM</th></tr></thead><tbody><tr><td>1</td><td>317</td></tr><tr><td>2</td><td>316</td></tr><tr><td>5</td><td>313</td></tr><tr><td>8</td><td>314</td></tr></tbody></table>		Electronic control fuel injection pump	ECM	1	317	2	316	5	313	8	314
Electronic control fuel injection pump	ECM										
1	317										
2	316										
5	313										
8	314										
Continuity should exist.											
2. Also check harness for short to ground and short to power.											
OK or NG											
OK	▶ GO TO 5.										
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.										

MTBL0462

5	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-559.	
OK or NG	
OK	▶ Replace electronic control fuel injection pump.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

Description

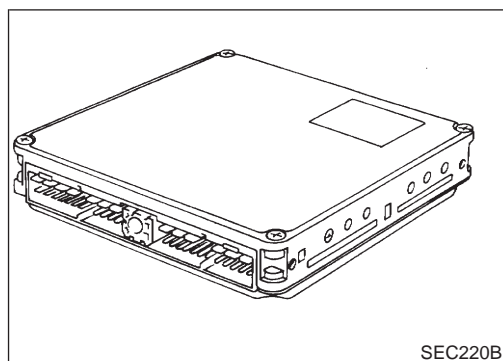


Description

The ECM consists of a microcomputer and connectors for signal input and output and for power supply. The unit controls the engine. NJEC0668

On Board Diagnosis Logic

NJEC0669

DTC	Malfunction is detected when ...	Check Items (Possible Cause)
P1603 0901	<ul style="list-style-type: none"> ECM calculation function is malfunctioning. 	<ul style="list-style-type: none"> ECM (ECCS-D control module)
P1607 0301		

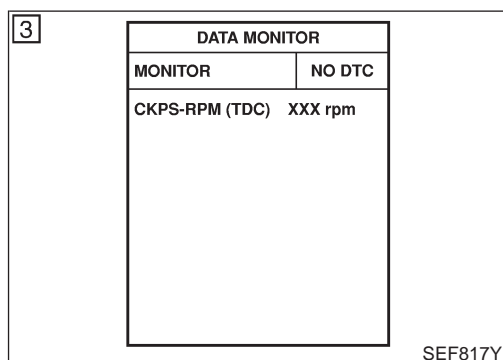

DTC Confirmation Procedure

NJEC0670

WITH CONSULT-II

NJEC0670S01

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and wait at least 2 seconds.
- 4) If DTC is detected, go to "Diagnostic Procedure", EC-665.

WITHOUT CONSULT-II

NJEC0670S02

- 1) Turn ignition switch "ON" and wait at least 2 seconds.
- 2) Start engine and wait at least 2 seconds.
- 3) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 4) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.
- 5) If DTC is detected, go to "Diagnostic Procedure", EC-665.

Diagnostic Procedure

NJEC0671

1	INSPECTION START	
<p><input checked="" type="checkbox"/> With CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch "ON". 2. Select "SELF DIAG RESULTS" mode with CONSULT-II. 3. Touch "ERASE". 4. Perform "DTC Confirmation Procedure", EC-664, again. 5. Is the DTC P1603 or P1607 displayed again? 		
<p><input type="checkbox"/> Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch "ON". 2. Erase the Diagnostic Test Mode II (Self-diagnostic results) memory. 3. Perform "DTC Confirmation Procedure", EC-664, again. 4. Perform "Diagnostic Test Mode II (Self-diagnostic results)". 5. Is the DTC 0301 or 0901 displayed again? 		
Yes or No		
Yes	▶	Replace ECM.
No	▶	INSPECTION END

ECM Terminals and Reference Value

NJEC0744

Specification data are reference values and are measured between each terminal and ground.

CAUTION:


Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA(DC Voltage)
107 108 109	R R R	Power supply for ECM	[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)
325	G	ECM relay (Self-shutoff)	[Ignition switch "ON"] [Ignition switch "OFF"] ● For a few seconds after turning ignition switch "OFF"	0 - 1V
			[Ignition switch "OFF"] ● A few seconds passed after turning ignition switch "OFF"	BATTERY VOLTAGE (11 - 14V)
507	W/R	Ignition switch	[Ignition switch "OFF"]	0V
			[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)

On Board Diagnosis Logic

NJEC0745

DTC	Malfunction is detected when ...	Check Items (Possible Cause)
P1620 0902	● An irregular voltage signal from the ECM relay is sent to ECM.	● Harness or connectors (ECM relay circuit is open or shorted.) ● ECM relay

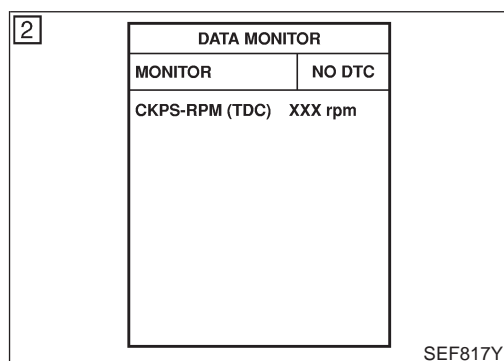

DTC Confirmation Procedure

NJEC0746

WITH CONSULT-II

NJEC0746S01

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Turn ignition switch "OFF", wait at least 20 seconds and then turn "ON".
- 4) If DTC is detected, go to "Diagnostic Procedure", EC-668.

WITHOUT CONSULT-II

NJEC0746S02

- 1) Turn ignition switch "ON".
- 2) Turn ignition switch "OFF", wait at least 20 seconds and then turn "ON".
- 3) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.
- 4) If DTC is detected, go to "Diagnostic Procedure", EC-668.


Wiring Diagram

NJEC0747



EC-ECMRLY-01

REFER TO EL-POWER.

— : DETECTABLE LINE FOR DTC
— : NON-DETECTABLE LINE FOR DTC

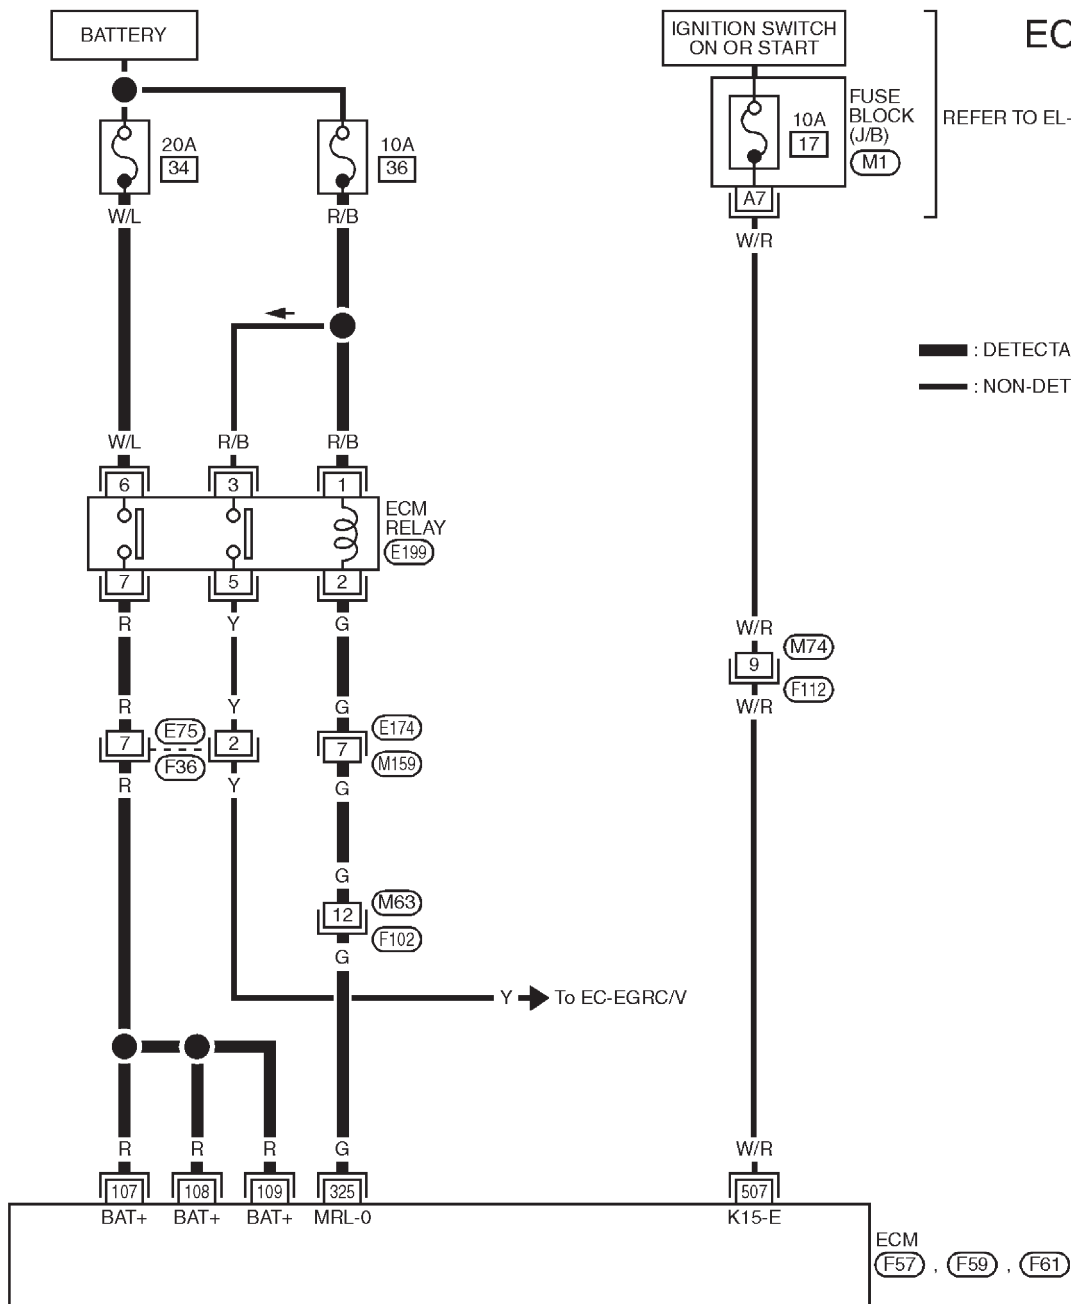


REFER TO THE FOLLOWING.
(M1) - FUSE BLOCK-
JUNCTION BOX (J/B)

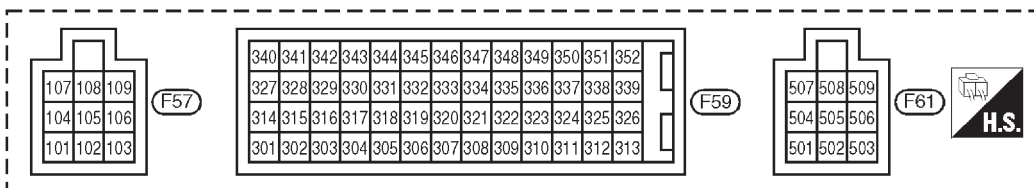

YEC018A

Diagnostic Procedure

NJEC0748

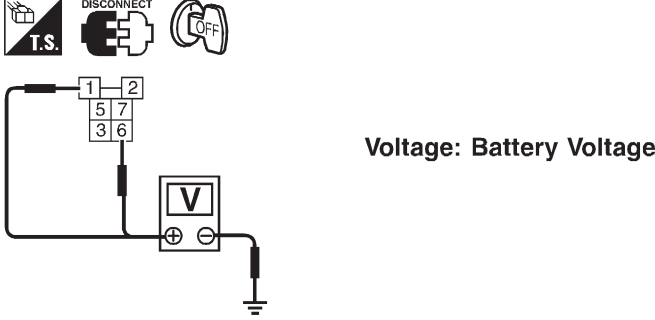1	CHECK ECM POWER SUPPLY CIRCUIT	
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM relay. (For ECM relay location, refer to "Engine Control Component Parts Location".) 3. Check voltage between ECM terminals 1, 6 and ground with CONSULT-II or tester.</p>		
		
SEF399Y		
OK or NG		
OK	▶	GO TO 3.
NG	▶	GO TO 2.

2	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ol style="list-style-type: none"> 1. 20A fuse 2. 10A fuse 3. Harness for open and short between ECM relay and battery 		
▶		Repair open circuit or short to ground or short to power in harness or connectors.

3	CHECK ECM INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminals 107, 108, 109 and ECM relay terminal 7. Refer to Wiring Diagram. Continuity should exist. 4. Also check harness for short to ground and short to power.</p>		
OK or NG		
OK	▶	GO TO 5.
NG	▶	GO TO 4.

4	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ol style="list-style-type: none"> 1. Harness connectors E75, F36 2. Harness for open and short between ECM and ECM relay 		
▶		Repair open circuit or short to ground or short to power in harness or connectors.


5	CHECK ECM OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
<p>1. Check harness continuity between ECM terminal 325 and ECM relay terminal 2. Refer to Wiring Diagram. Continuity should exist. 2. Also check harness for short to ground and short to power.</p>		
OK or NG		
OK	▶	GO TO 7.
NG	▶	GO TO 6.

DTC P1620 ECM RLY

YD


Diagnostic Procedure (Cont'd)

6	DETECT MALFUNCTIONING PART
Check the following. 1. Harness connectors E174, M159 2. Harness connectors M63, F102 3. Harness for open and short between ECM and ECM relay	
▶ Repair open circuit or short to ground or short to power in harness or connectors.	

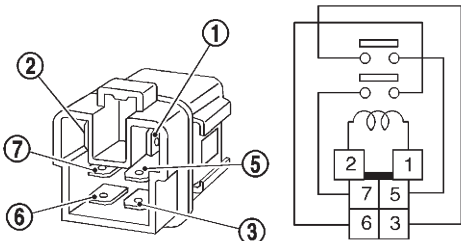7	CHECK ECM RELAY						
1. Apply 12V direct current between ECM relay terminals 1 and 2. 2. Check continuity between ECM relay terminals 3 and 5, 6 and 7.							
							
<table border="1"><thead><tr><th>Condition</th><th>Continuity</th></tr></thead><tbody><tr><td>12V direct current supply between terminals 1 and 2</td><td>Yes</td></tr><tr><td>OFF</td><td>No</td></tr></tbody></table>		Condition	Continuity	12V direct current supply between terminals 1 and 2	Yes	OFF	No
Condition	Continuity						
12V direct current supply between terminals 1 and 2	Yes						
OFF	No						
SEF296X							
OK or NG							
OK	▶ GO TO 8.						
NG	▶ Replace ECM relay.						

8	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-559.	
▶ INSPECTION END	

Description

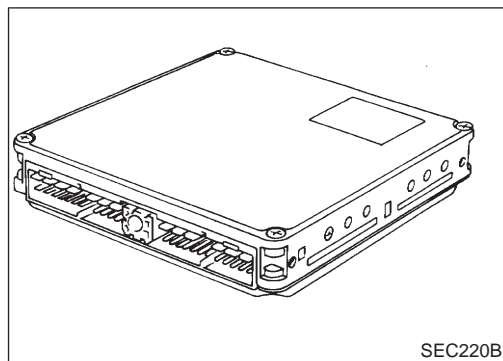


Description

The ECM consists of a microcomputer and connectors for signal input and output and for power supply. The unit controls the engine. NJEC0749

On Board Diagnosis Logic

NJEC0750

DTC	Malfunction is detected when ...	Check Items (Possible Cause)
P1621 0903	<ul style="list-style-type: none"> ECM input signal processing function is malfunctioning. 	<ul style="list-style-type: none"> ECM (ECCS-D control module)

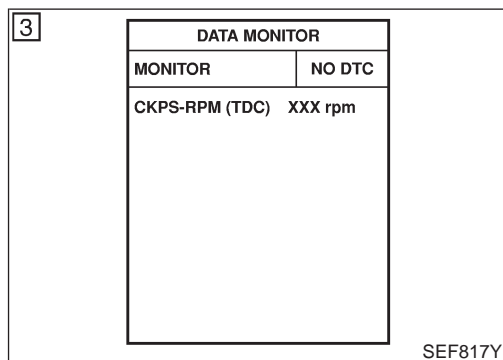

DTC Confirmation Procedure

NJEC0751

WITH CONSULT-II

NJEC0751S01

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Turn ignition switch "OFF", wait at least 20 seconds and then turn "ON".
- 4) If DTC is detected, go to "Diagnostic Procedure", EC-671.

WITHOUT CONSULT-II

NJEC0751S02

- 1) Turn ignition switch "ON" and wait at least 2 seconds.
- 2) Turn ignition switch "OFF", wait at least 20 seconds and then turn "ON".
- 3) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.
- 4) If DTC is detected, go to "Diagnostic Procedure", EC-671.

Diagnostic Procedure

NJEC0752

1	INSPECTION START
<input checked="" type="checkbox"/> With CONSULT-II 1. Turn ignition switch "ON". 2. Select "SELF DIAG RESULTS" mode with CONSULT-II. 3. Touch "ERASE". 4. Perform "DTC Confirmation Procedure", EC-670, again. 5. Is the DTC P1621 displayed again?	
<input type="checkbox"/> Without CONSULT-II 1. Turn ignition switch "ON". 2. Erase the Diagnostic Test Mode II (Self-diagnostic results) memory. 3. Perform "DTC Confirmation Procedure", EC-670, again. 4. Perform "Diagnostic Test Mode II (Self-diagnostic results)". 5. Is the DTC 0903 displayed again?	
Yes or No	
Yes	▶▶ Replace ECM.
No	▶▶ INSPECTION END

DTC P1660 BATTERY VOLTAGE

YD

On Board Diagnosis Logic

On Board Diagnosis Logic

NJE1258

The ECM checks if battery voltage is within the tolerance range for the engine control system.

DTC	Malfunction is detected when ...	Check Items (Possible Cause)
P1660 0502	<ul style="list-style-type: none"> ● An abnormally high or low voltage from the battery is sent to ECM. 	<ul style="list-style-type: none"> ● Incorrect jump starting ● Battery ● Alternator ● ECM

DTC Confirmation Procedure

NJE1259

With CONSULT-II

- 1) Check the following.
 - Jumper cables are connected for jump starting.
 - Battery or alternator has been replaced.
 If the result is "Yes" for one item or more, skip the following steps and go to "Diagnostic Procedure", EC-672.
- 2) Check that the positive battery terminal is connected to battery properly. If NG, reconnect it properly.
- 3) Check that the alternator functions properly. Refer to SC-26, "Trouble Diagnosis".
- 4) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT-II.
- 5) Wait one minute.
- 6) If DTC is detected, go to "Diagnostic Procedure", EC-672.
If DTC is not detected, go to next step.
- 7) Start engine and wait one minute at idle.
- 8) If DTC is detected, go to "Diagnostic Procedure", EC-672.

Without CONSULT-II

- 1) Check the following.
 - Jumper cables are connected for jump starting.
 - Battery or alternator has been replaced.
 If the result is "Yes" for one item or more, skip the following steps and go to "Diagnostic Procedure", EC-672.
- 2) Check that the positive battery terminal is connected to battery properly. If NG, reconnect it properly.
- 3) Check that the alternator functions properly. Refer to SC-26, "Trouble Diagnosis".
- 4) Turn ignition switch "ON" and wait one minute.
- 5) Turn ignition switch "OFF", wait 5 seconds and then turn "ON".
- 6) Perform "Diagnostic Test Mode II (Self-diagnostic result)" with ECM.
- 7) If DTC is detected, go to "Diagnostic Procedure", EC-672.
If DTC is not detected, go to next step.
- 8) Start engine and wait one minute at idle.
- 9) Turn ignition switch "OFF", wait 5 seconds and then turn "ON".
- 10) Perform "Diagnostic Test Mode II (Self-diagnostic result)" with ECM.
- 11) If DTC is detected, go to "Diagnostic Procedure", EC-672.

Diagnostic Procedure

NJE1260


1	INSPECTION START	
Are jumper cables connected for the jump starting?		
Yes or No		
Yes	▶	GO TO 3.
No	▶	GO TO 2.

DTC P1660 BATTERY VOLTAGE

YD

Diagnostic Procedure (Cont'd)

2	CHECK BATTERY AND ALTERNATOR
Check that the proper type of battery and alternator is installed. Refer to SC-34, "Battery" and SC-35, "Alternator".	
OK or NG	
OK	▶ GO TO 5.
NG	▶ Replace with a proper one.

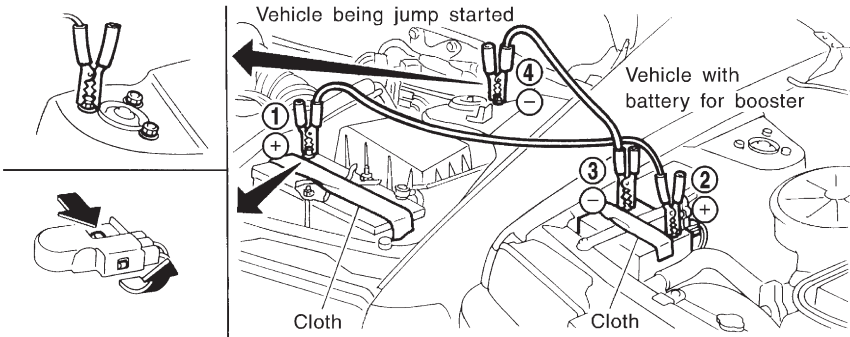3	CHECK JUMPER CABLES INSTALLATION
Check that the jumper cables are connected in the correct sequence.	
	
OK or NG	
OK	▶ GO TO 4.
NG	▶ Reconnect jumper cables properly.


SEF439Z

4	CHECK BATTERY FOR BOOSTER
Check that the battery for the booster is a 12V battery.	
OK or NG	
OK	▶ GO TO 5.
NG	▶ Change the vehicle for booster.

5	PERFORM DTC CONFIRMATION PROCEDURE AGAIN
Perform "DTC Confirmation Procedure", EC-672, again.	
OK or NG	
OK	▶ GO TO 6.
NG	▶ Replace ECM.

6	CHECK ELECTRICAL PARTS DAMAGE
Check the following for damage. <ul style="list-style-type: none">• Wiring harness and harness connectors for burn• Fuses for short	
OK or NG	
OK	▶ INSPECTION END
NG	▶ Repair or replace malfunctioning part.

Description

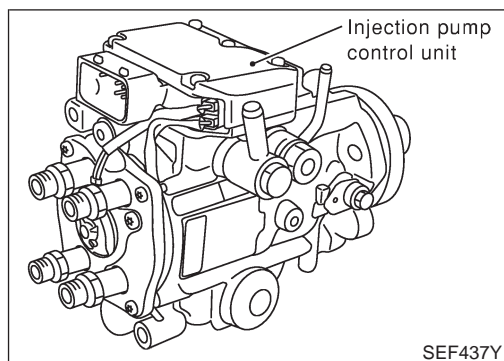

Description

NJEC0721

SYSTEM DESCRIPTION

NJEC0721S01

The ECM and the electronic control fuel injection pump control unit (abbreviated as the injection pump control unit) perform the real time communication (signal exchange).

The ECM transmits the signals of the target fuel injection amount, target fuel injection timing, and engine speed, etc., and receives the signals of the pump speed and fuel temperature, etc. from the injection pump control unit.

By those signals, the injection pump controls the optimum fuel injection amount and injection timing of the spill valve and timing control valve.

Injection pump control unit has an on board diagnostic system, which detects malfunctions related to sensors or actuators built-into electronic control fuel injection pump. These malfunction information are transferred through the line (circuit) from injection pump control unit to ECM.

FUEL INJECTION AMOUNT CONTROL

NJEC0721S02

In accordance with the target fuel injection amount signal from the ECM, the injection amount is controlled by controlling the spill valve in the injection pump and by changing the needle opening time.

FUEL INJECTION TIMING CONTROL

NJEC0721S03

Based on the target fuel injection timing signal from the ECM, the injection timing is controlled in accordance with the timer spring by performing the duty control of the timing control valve in the injection pump and by adjusting the pressure of the timer piston high pressure chamber.

FUEL TEMPERATURE SENSOR

NJEC0721S04

The sensor detects the fuel temperature in the injection pump and calibrates the injection amount change by the fuel temperature.

CAM RING POSITION SENSOR

NJEC0721S05

The sensor detects the passing of the protrusion on the sensor wheel in the injection pump by the semiconductor magnetic resistance element sensor. The cam ring position sensor synchronizes with the cam ring, and detects the actual advance amount. The injection pump control unit measures the injection pump revolution by the signal of the cam ring position sensor.

CONSULT-II Reference Value in Data Monitor Mode

NJEC0722

Remarks: Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
FUEL TEMP SEN	● Engine: After warming up	More than 40°C (104°F)
SPILL/V	● Engine: After warming up, idle the engine.	Approx. 12 - 13°C
INT/A VOLUME	● Engine: After warming up, idle the engine.	Approx. 150 - 450 mg/st
F/CUT SIGNAL	● Engine: After warming up	Idle ON

DTC P1690 P5-PUMP C/MODULE

YD

CONSULT-II Reference Value in Data Monitor Mode (Cont'd)

MONITOR ITEM	CONDITION	SPECIFICATION
BARO SEN	<ul style="list-style-type: none"> ● Ignition switch: ON 	Altitude Approx. 0 m (0 ft): Approx. 100.62 kPa (1.0062 bar, 1.026 kg/cm ² , 14.59 psi) Approx. 1,000 m (3,218 ft): Approx. 88.95 kPa (0.8895 bar, 0.907 kg/cm ² , 12.90 psi) Approx. 1,500 m (4,922 ft): Approx. 83.16 kPa (0.8316 bar, 0.848 kg/cm ² , 12.06 psi) Approx. 2,000 m (6,562 ft): Approx. 78.36 kPa (0.7836 bar, 0.799 kg/cm ² , 11.36 psi)

ECM Terminals and Reference Value

NJEC0723

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
313	L/W	Electronic control fuel injection pump	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0.1V
314	L/R	Electronic control fuel injection pump	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0.4V
316	PU	Electronic control fuel injection pump	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 2.5V
317	P	Electronic control fuel injection pump	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 2.5V

On Board Diagnosis Logic

NJEC0724

DTC	Malfunction is detected when	Check Items (Possible cause)
P1690 0705	<ul style="list-style-type: none"> ● Injection pump control unit does not function properly. 	<ul style="list-style-type: none"> ● Electronic control fuel injection pump

DATA MONITOR

MONITOR	NO DTC
CKPS-RPM (TDC) XXX rpm	

SEF817Y

DTC Confirmation Procedure

NJEC0725

Ⓜ WITH CONSULT-II

NJEC0725S01

- 1) Turn ignition switch "ON" and wait at least 2 seconds.
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and run it for at least 2 seconds at idle speed. (If engine does not run, turn ignition switch to "START" for at least 2 seconds.)
- 4) If DTC is detected, go to "Diagnostic Procedure", EC-676.

ⓧ WITHOUT CONSULT-II

NJEC0725S02

- 1) Turn ignition switch "ON" and wait at least 2 seconds.

DTC P1690 P5-PUMP C/MODULE

YD

DTC Confirmation Procedure (Cont'd)

- 2) Start engine and run it for at least 2 seconds at idle speed. (If engine does not run, turn ignition switch to "START" for at least 2 seconds.)
- 3) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 4) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.
- 5) If DTC is detected, go to "Diagnostic Procedure", EC-676.

Diagnostic Procedure

NJEC0726

1	INSPECTION START	
<input type="checkbox"/> With CONSULT-II		
1. Turn ignition switch "ON".		
2. Select "SELF DIAG RESULTS" mode with CONSULT-II.		
3. Touch "ERASE".		
4. Perform "DTC Confirmation Procedure", EC-675, again.		
5. Is the DTC P1690 displayed again?		
<input checked="" type="checkbox"/> Without CONSULT-II		
1. Turn ignition switch "ON".		
2. Erase the Diagnostic Test Mode II (Self-diagnostic results) memory.		
3. Perform "DTC Confirmation Procedure", EC-675, again.		
4. Perform "Diagnostic Test Mode II (Self-diagnostic results)".		
5. Is the DTC 0705 displayed again?		
Yes or No		
Yes	▶	Replace electronic control fuel injection pump.
No	▶	INSPECTION END

Description

SYSTEM DESCRIPTION

NJEC0760

NJEC0760S01


Sensor	Input Signal to ECM	ECM Function	Actuator
Crankshaft position sensor (TDC)	Engine speed	Glow control	Glow lamp, Glow relay ↓ Glow plugs
Engine coolant temperature sensor	Engine coolant temperature		

When engine coolant temperature is more than approximately 75°C (167°F), the glow relay turns off.

When coolant temperature is lower than approximately 75°C (167°F):

- Ignition switch ON
After ignition switch has turned to ON, the glow relay turns ON for a certain period of time in relation to engine coolant temperature, allowing current to flow through glow plug.
- Cranking
The glow relay turns ON, allowing current to flow through glow plug.
- Starting
After engine has started, current continues to flow through glow plug (after-glow mode) for a certain period in relation to engine coolant temperature.

The glow indicator lamp turns ON for a certain period of time in relation to engine coolant temperature at the time glow relay is turned ON.

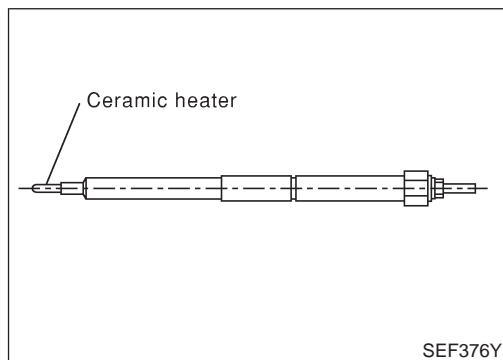

COMPONENT DESCRIPTION

Glow Plug

NJEC0760S02

NJEC0760S0201

The glow plug is provided with a ceramic heating element to obtain a high-temperature resistance. It glows in response to a signal sent from the ECM, allowing current to flow through the glow plug via the glow relay.

GLOW CONTROL SYSTEM

YD

ECM Terminals and Reference Value

ECM Terminals and Reference Value

NJEC0761

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.



TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
214	W/B	Glow relay	Refer to "SYSTEM DESCRIPTION", EC-677.	
508	OR	Glow indicator lamp	[Ignition switch "ON"] <ul style="list-style-type: none">● Glow indicator lamp is "ON"	Approximately 1V
			[Ignition switch "ON"] <ul style="list-style-type: none">● Glow indicator lamp is "OFF"	BATTERY VOLTAGE (11 - 14V)

GLOW CONTROL SYSTEM

Wiring Diagram

NJE0762

EC-GLOW-01

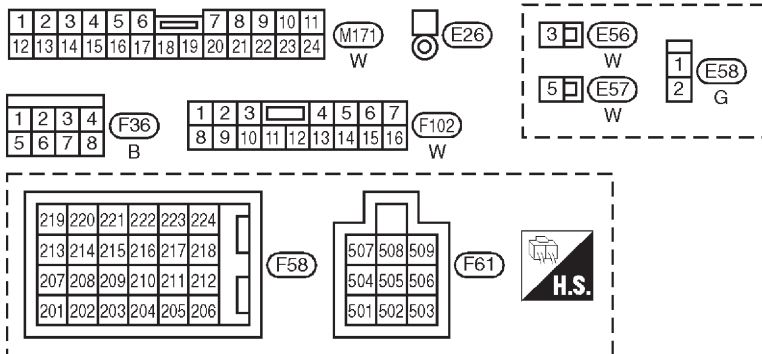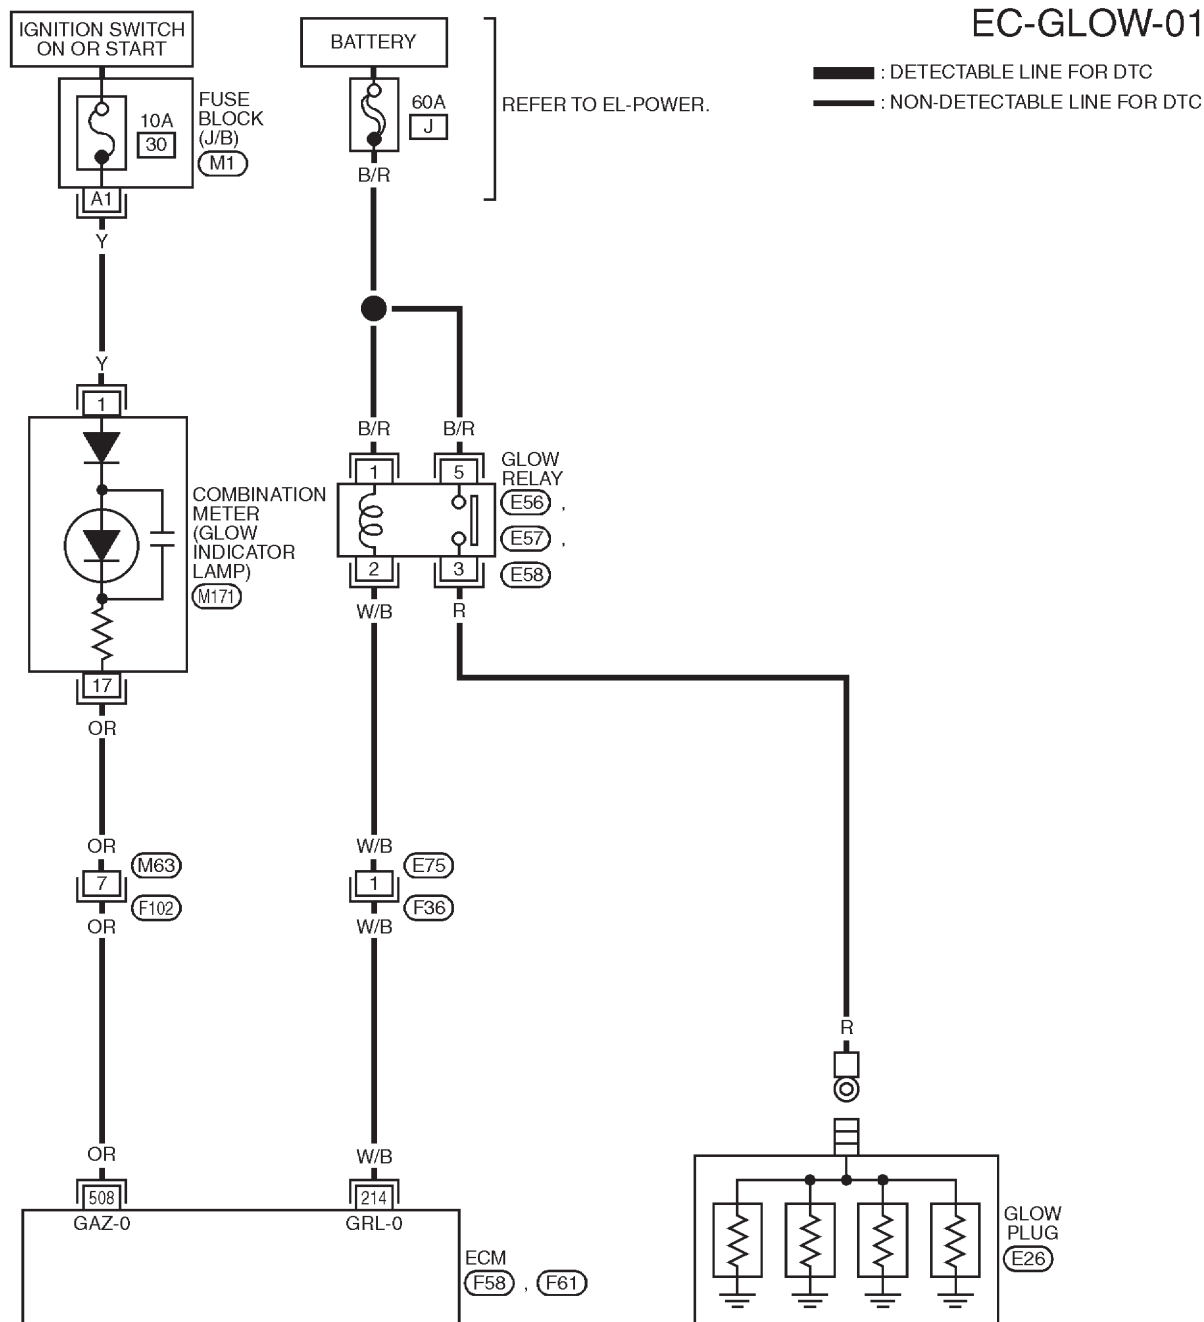


REFER TO THE FOLLOWING.
 (M1) - FUSE BLOCK-
 JUNCTION BOX (J/B)

Diagnostic Procedure

NJEC0763


1	INSPECTION START	
Check fuel level, fuel supplying system, starter motor, etc.		
OK or NG		
OK	▶	GO TO 2.
NG	▶	Correct.

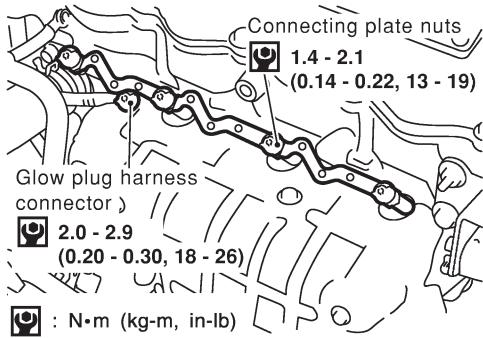
2	CHECK INSTALLATION	
Check that glow plug nut and all glow plug connecting plate nuts are installed properly.		
 <p style="text-align: center;">Connecting plate nuts 1.4 - 2.1 (0.14 - 0.22, 13 - 19)</p> <p style="text-align: center;">Glow plug harness connector 2.0 - 2.9 (0.20 - 0.30, 18 - 26)</p> <p style="text-align: center;">☞ : N·m (kg-m, in-lb)</p>		
OK or NG		
OK (With CONSULT-II)	▶	GO TO 3.
OK (Without CONSULT-II)	▶	GO TO 4.
NG	▶	Install properly.

SEF392YA

3	CHECK GLOW INDICATOR LAMP OPERATION							
<p>☞ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch "ON". 2. Select "COOLAN TEMP/S" in "DATA MONITOR" mode with CONSULT-II. 3. Confirm that "COOLAN TEMP/S" indicates below 75°C (167°F). If it indicates above 75°C (167°F), cool down engine. 								
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2">DATA MONITOR</th> </tr> <tr> <th>MONITOR</th> <th>NO DTC</th> </tr> </thead> <tbody> <tr> <td>COOLAN TEMP/S</td> <td>XXX °C</td> </tr> </tbody> </table>			DATA MONITOR		MONITOR	NO DTC	COOLAN TEMP/S	XXX °C
DATA MONITOR								
MONITOR	NO DTC							
COOLAN TEMP/S	XXX °C							
OK or NG								
OK	▶	GO TO 5.						
NG	▶	GO TO 6.						

SEF013Y

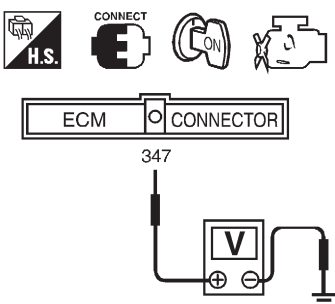
4	CHECK GLOW INDICATOR LAMP OPERATION						
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> Turn ignition switch "ON". Confirm that the voltage between ECM terminal 347 (Engine coolant temperature sensor signal) and ground is above 1.36V. If it is below 1.36V, cool down engine. <div style="text-align: center;">  <p style="margin-left: 200px;">Voltage: More than 1.36V</p> </div> <p style="text-align: right;">SEF442Z</p> <ol style="list-style-type: none"> Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON". Make sure that glow indicator lamp is turned "ON" for 1.5 seconds or more after turning ignition switch "ON", and then turned "OFF". <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td>GO TO 5.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 6.</td> </tr> </table>		OK	▶	GO TO 5.	NG	▶	GO TO 6.
OK	▶	GO TO 5.					
NG	▶	GO TO 6.					

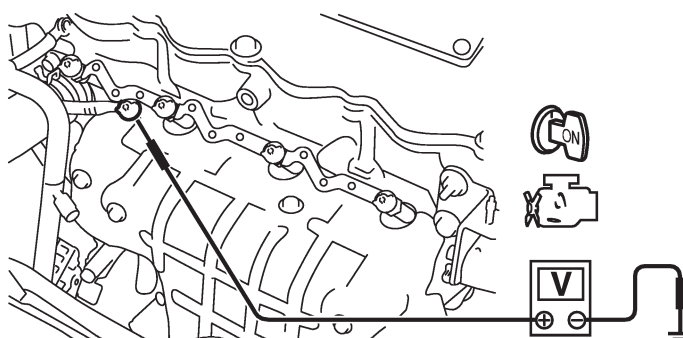5	CHECK GLOW CONTROL SYSTEM OVERALL FUNCTION												
<ol style="list-style-type: none"> Turn ignition switch "OFF". Set voltmeter probe between glow plug and engine body. Turn ignition switch "ON". Check the voltage between glow plug and engine body under the following conditions. <div style="display: flex; align-items: center;"> <div style="flex: 1;">  </div> <div style="flex: 1;"> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Conditions</th> <th style="text-align: center;">Voltage</th> </tr> </thead> <tbody> <tr> <td>For 20 seconds after turning ignition switch "ON"</td> <td style="text-align: center;">Battery voltage</td> </tr> <tr> <td>More than 20 seconds after turning ignition switch "ON"</td> <td style="text-align: center;">Approx. 0V</td> </tr> </tbody> </table> </div> </div> <p style="text-align: right;">SEF431Y</p> <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td>INSPECTION END</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 11.</td> </tr> </table>		Conditions	Voltage	For 20 seconds after turning ignition switch "ON"	Battery voltage	More than 20 seconds after turning ignition switch "ON"	Approx. 0V	OK	▶	INSPECTION END	NG	▶	GO TO 11.
Conditions	Voltage												
For 20 seconds after turning ignition switch "ON"	Battery voltage												
More than 20 seconds after turning ignition switch "ON"	Approx. 0V												
OK	▶	INSPECTION END											
NG	▶	GO TO 11.											

GLOW CONTROL SYSTEM

YD

Diagnostic Procedure (Cont'd)


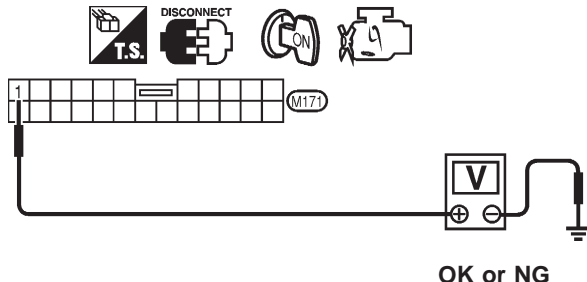
6	CHECK GLOW INDICATOR LAMP POWER SUPPLY CIRCUIT	
<p>1. Turn ignition switch "OFF".</p> <p>2. Disconnect combination meter harness connector M32 or M152 or M171.</p> <p>3. Turn ignition switch "ON".</p> <p>4. Check voltage between combination meter terminal 40 or 17 or 1 and ground with CONSULT-II or tester.</p>		
		
YEC060A		
OK	▶	GO TO 8.
NG	▶	GO TO 7.

7	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <p>1. Fuse block (J/B) connector M1</p> <p>2. 10A fuse</p> <p>3. Harness for open or short between combination meter and fuse</p>		
▶		Repair open circuit or short to ground or short to power in harness or connectors.

8	CHECK GLOW INDICATOR LAMP OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
<p>1. Turn ignition switch "OFF".</p> <p>2. Disconnect ECM harness connector.</p> <p>3. Disconnect combination meter harness connector M171.</p> <p>4. Check harness continuity between ECM terminal 508 and combination meter terminal 17. Refer to Wiring Diagram. Continuity should exist.</p> <p>5. Also check harness for short to ground and short to power.</p>		
OK or NG		
OK	▶	GO TO 10.
NG	▶	GO TO 9.

9	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <p>1. Harness connectors M63, F102</p> <p>2. Harness for open or short between combination meter and ECM</p>		
▶		Repair open circuit or short to ground or short to power in harness or connectors.

10	CHECK COMBINATION METER	
<p>Check combination meter and glow indicator lamp. Refer to EL-89, "Meter and Gauges".</p>		
OK or NG		
OK	▶	GO TO 18.
NG	▶	Repair or replace combination meter or glow indicator lamp.

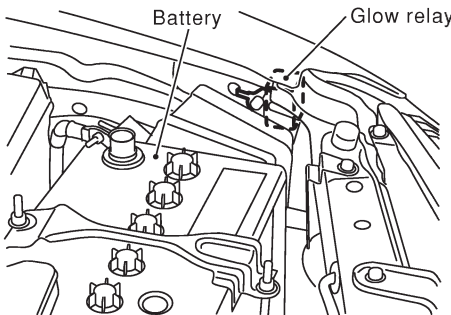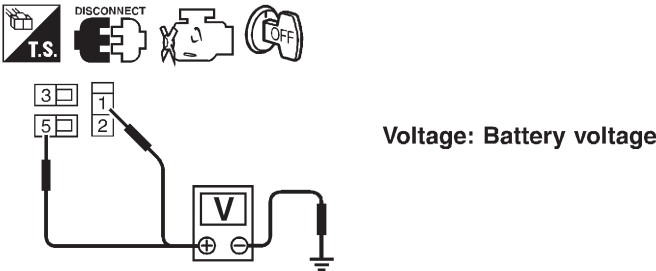11	CHECK GLOW RELAY POWER SUPPLY CIRCUIT		
		<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect glow relay. 	
			SEF391Y
		<ol style="list-style-type: none"> 3. Check voltage between glow relay terminals 1, 5 and ground with CONSULT-II or tester. 	
			SEF420Y
		OK or NG	
OK	▶	GO TO 13.	
NG	▶	GO TO 12.	

12	DETECT MALFUNCTIONING PART		
		Check the following. <ul style="list-style-type: none"> ● 60A fusible link ● Harness for open or short between glow relay and battery 	
		▶	Repair harness or connectors.

13	CHECK GLOW RELAY OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT		
		<ol style="list-style-type: none"> 1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal 214 and glow relay terminal 2. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to ground and short to power. 	
		OK or NG	
OK	▶	GO TO 15.	
NG	▶	GO TO 14.	


14	DETECT MALFUNCTIONING PART		
		Check the following. <ul style="list-style-type: none"> ● Harness connectors E75, F36 ● Harness for open or short between glow relay and ECM 	
		▶	Repair open circuit or short to ground or short to power in harness or connectors.


GLOW CONTROL SYSTEM

YD

Diagnostic Procedure (Cont'd)

15	CHECK HARNESS CONTINUITY BETWEEN GLOW RELAY AND GLOW PLUG FOR OPEN AND SHORT	
1. Disconnect glow plug harness connector. 2. Check harness continuity between glow relay terminal 3 and glow plug harness connector. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to ground and short to power.		
OK or NG		
OK	▶	GO TO 16.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

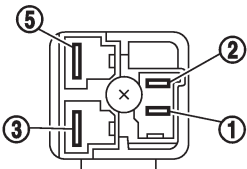16	CHECK GLOW RELAY							
Check continuity between glow relay terminals 3 and 5 under the following conditions.								
								
<table border="1" style="margin-left: auto; border-collapse: collapse;"> <thead> <tr> <th style="width: 60%;">Conditions</th> <th style="width: 40%;">Continuity</th> </tr> </thead> <tbody> <tr> <td>12V direct current supply between terminals 1 and 2</td> <td style="text-align: center;">Yes</td> </tr> <tr> <td>No current supply</td> <td style="text-align: center;">No</td> </tr> </tbody> </table> <p>Operation takes less than 1 second.</p>			Conditions	Continuity	12V direct current supply between terminals 1 and 2	Yes	No current supply	No
Conditions	Continuity							
12V direct current supply between terminals 1 and 2	Yes							
No current supply	No							
SEF433Y								
OK or NG								
OK	▶	GO TO 17.						
NG	▶	Replace glow relay.						

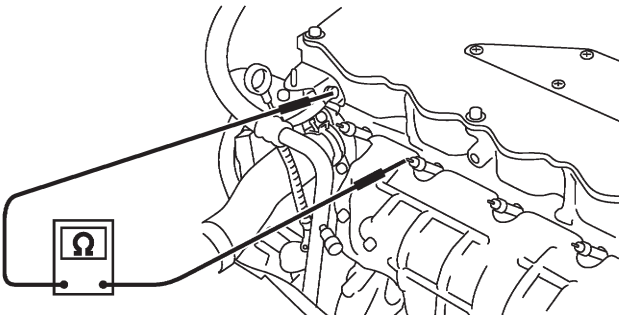17	CHECK GLOW PLUG	
1. Remove glow plug connecting plate. 2. Check glow plug resistance.		
		
Resistance: Approximately 0.8Ω [at 25°C (77°F)]		
SEF434Y		
NOTE:		
<ul style="list-style-type: none"> ● Do not bump glow plug heating element. If it is bumped, replace glow plug with a new one. ● If glow plug is dropped from a height of 10 cm (3.94 in) or higher, replace with a new one. ● If glow plug installation hole is contaminated with carbon, remove it with a reamer or suitable tool. ● Hand-tighten glow plug by turning it two or three times, then tighten using a tool to specified torque. 🔧 : 17.7 - 22.5 N·m (1.8 - 2.3 kg·m, 13 - 16 ft·lb) 		
OK or NG		
OK	▶	GO TO 18.
NG	▶	Replace glow plug.

GLOW CONTROL SYSTEM

YD

Diagnostic Procedure (Cont'd)

18	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-559.	
▶	INSPECTION END

Description

Description SYSTEM DESCRIPTION

NJEC0764



NJEC0764S01

Sensor	Input Signal to ECM	ECM Function	Actuator
Electronic controlled fuel injection pump	Fuel injection signal	EGR volume control	EGR volume control valve
Crankshaft position sensor (TDC)	Engine speed		
Vehicle speed sensor	Vehicle speed		
Engine coolant temperature sensor	Engine coolant temperature		
Ignition switch	Start signal		
Accelerator position sensor	Accelerator position		
Mass air flow sensor	Amount of intake air		
Air conditioner switch	Air conditioner operation		
Electrical load	Electrical load signal		

This system controls flow rate of EGR led from exhaust manifold to intake manifold. The opening of the EGR by-pass passage in the EGR volume control valve changes to control the flow rate. A built-in step motor moves the valve in steps corresponding to the ECM output pulses. The opening of the valve varies for optimum engine control. The optimum value stored in the ECM is determined by considering various engine conditions.

The EGR volume control valve remains close under the following conditions.

- Engine stopped
- Engine starting
- Low engine coolant temperature
- Excessively high engine coolant temperature
- High engine speed
- Wide open throttle

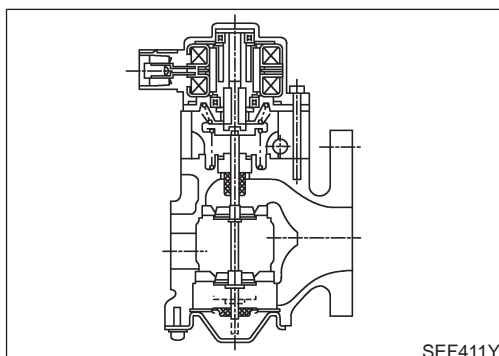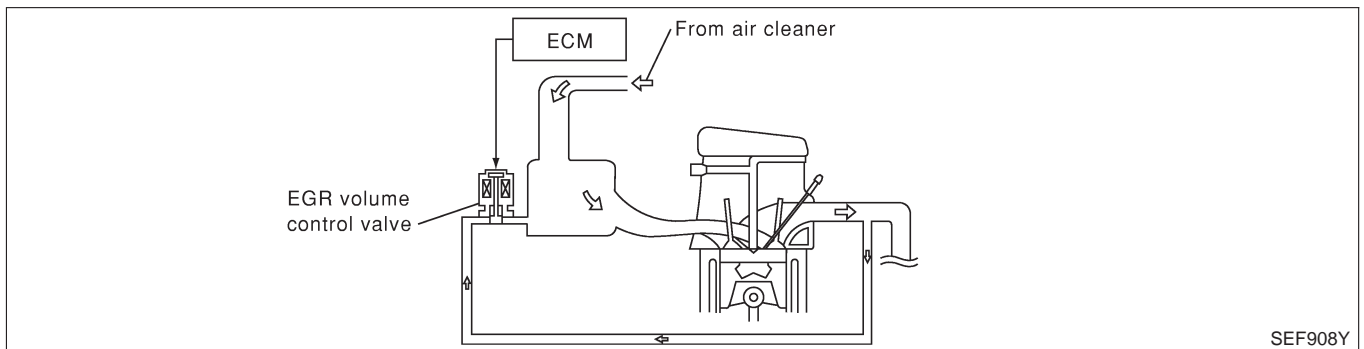

COMPONENT DESCRIPTION EGR Volume Control Valve

NJEC0764S02

NJEC0764S0201

The EGR volume control valve uses a step motor to control the flow rate of EGR from exhaust manifold. This motor has four winding phases. It operates according to the output pulse signal of the ECM. Two windings are turned ON and OFF in sequence. Each time an ON pulse is issued, the valve opens or closes, changing the flow rate. When no change in the flow rate is needed, the ECM does not issue the pulse signal. A certain voltage signal is issued so that the valve remains at that particular opening.

EGR VOLUME CONTROL SYSTEM

YD

CONSULT-II Reference Value in Data Monitor Mode

CONSULT-II Reference Value in Data Monitor Mode

NJEC0765

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
EGR VOL CON/V	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: Neutral position ● No-load 	After one minute at idle
		Reving engine up to 3,200 rpm
		More than 10 step
		0 step

ECM Terminals and Reference Value

NJEC0766

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA(DC Voltage)
337 338 350 351	W/L PU/W GY OR/B	EGR volume control valve	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	0.1 - 14V (Voltage signals of each ECM terminals differ according to the control position of EGR volume control valve.)

EGR VOLUME CONTROL SYSTEM




YD

Wiring Diagram

Wiring Diagram

=NJE0767



EC-EGRC/V-01

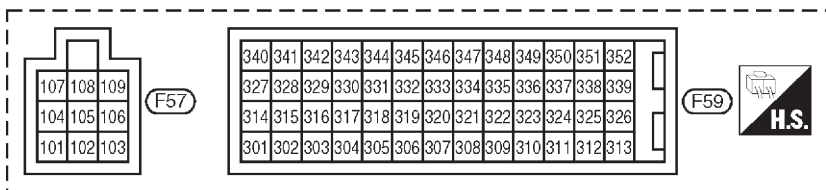
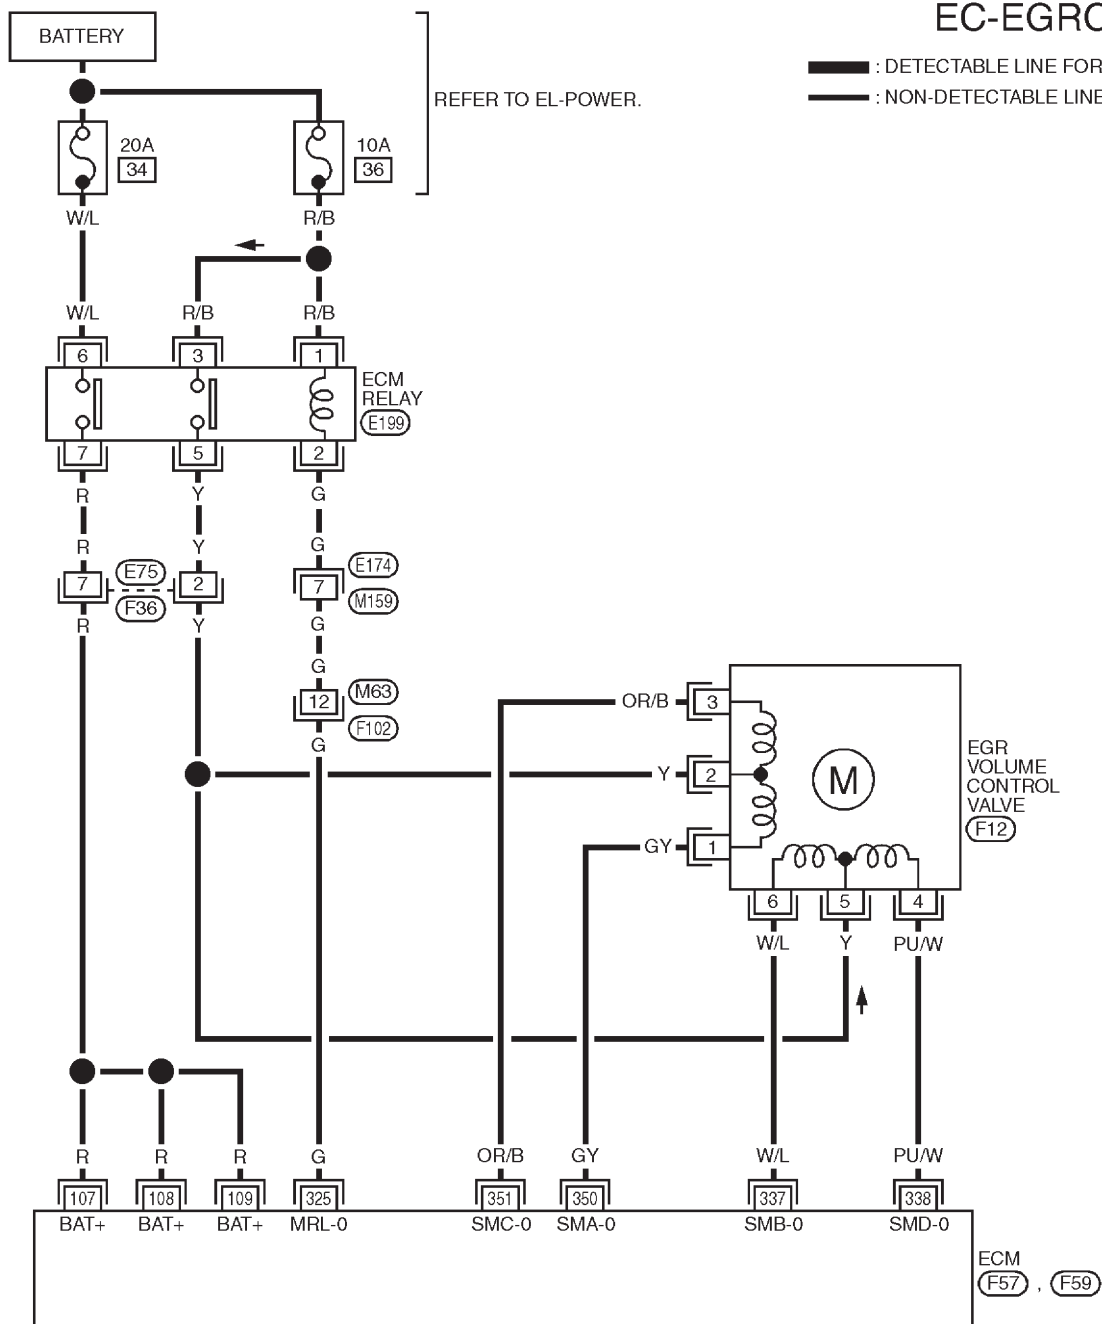


YEC020A

Diagnostic Procedure

NJECD768

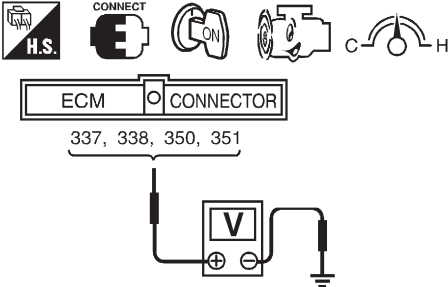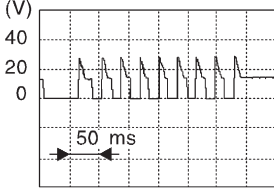1	CHECK EGR VOLUME CONTROL SYSTEM OVERALL FUNCTION
<p>1. Turn ignition switch "OFF". 2. Set the oscilloscope probe between ECM terminals 337, 338, 350, 351 and ground. 3. Start engine and let it idle. 4. Check the oscilloscope screen when revving engine up to 3,200 rpm and return to idle.</p>	
	
	
<p>The pulse signal as shown left should appear.</p>	
SEF247Z	
OK or NG	
OK	▶ INSPECTION END
NG	▶ GO TO 2.

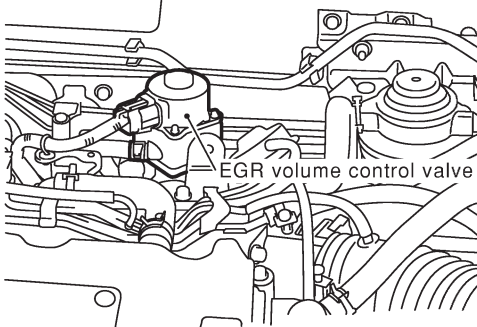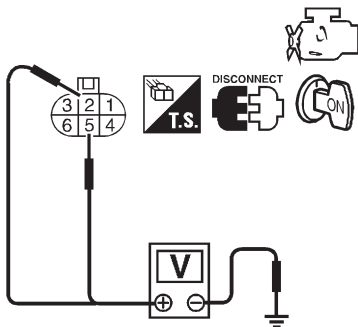
2	CHECK EGR VOLUME CONTROL VALVE POWER SUPPLY CIRCUIT-I
<p>1. Turn ignition switch "OFF". 2. Disconnect EGR volume control valve harness connector.</p>	
	
SEF388Y	
<p>3. Turn ignition switch "ON". 4. Check voltage between EGR volume control valve terminals 2, 5 and ground with CONSULT-II or tester.</p>	
	
<p>Voltage: Battery voltage</p>	
SEF412Y	
OK or NG	
OK	▶ GO TO 7.
NG	▶ GO TO 3.

EGR VOLUME CONTROL SYSTEM


YD

Diagnostic Procedure (Cont'd)

3	CHECK EGR VOLUME CONTROL VALVE POWER SUPPLY CIRCUIT-II
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM relay. (For ECM relay location, refer to "Engine Control Component Parts Location".) 3. Check harness continuity between ECM relay terminal 5 and EGR volume control valve terminals 2 and 5. Refer to Wiring Diagram. Continuity should exist.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 4.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

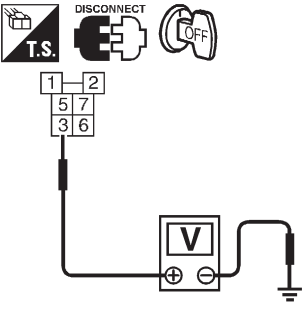4	CHECK EGR VOLUME CONTROL VALVE POWER SUPPLY CIRCUIT-III
<p>Check voltage between ECM relay terminal 3 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  <p style="margin-left: 100px;">Voltage: Battery voltage</p> </div> <p style="text-align: right; margin-right: 50px;">SEF413Y</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 6.
NG	▶ GO TO 5.

5	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● 10A fuse ● Harness for open or short between ECM relay and battery 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

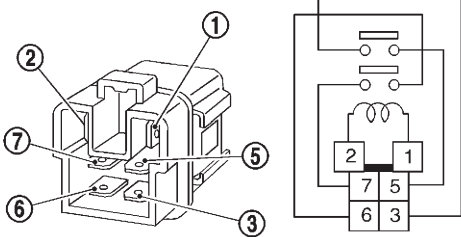
6	CHECK ECM RELAY						
<p>1. Apply 12V direct current between ECM relay terminals 1 and 2. 2. Check continuity between ECM relay terminals 3 and 5, 6 and 7.</p>							
<div style="display: flex; align-items: center; justify-content: space-around;">  <table border="1" style="border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Condition</th> <th style="text-align: center;">Continuity</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">12V direct current supply between terminals 1 and 2</td> <td style="text-align: center;">Yes</td> </tr> <tr> <td style="text-align: center;">OFF</td> <td style="text-align: center;">No</td> </tr> </tbody> </table> </div>		Condition	Continuity	12V direct current supply between terminals 1 and 2	Yes	OFF	No
Condition	Continuity						
12V direct current supply between terminals 1 and 2	Yes						
OFF	No						
SEF296X							
OK or NG							
OK	▶ GO TO 7.						
NG	▶ Replace ECM relay.						

EGR VOLUME CONTROL SYSTEM

YD

Diagnostic Procedure (Cont'd)


7	CHECK EGR VOLUME CONTROL VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT										
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminals and EGR volume control valve terminals as follows. Refer to Wiring Diagram.</p>											
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="padding: 5px;">ECM terminal</th> <th style="padding: 5px;">EGR volume control valve</th> </tr> </thead> <tbody> <tr> <td style="text-align: center; padding: 5px;">337</td> <td style="text-align: center; padding: 5px;">6</td> </tr> <tr> <td style="text-align: center; padding: 5px;">338</td> <td style="text-align: center; padding: 5px;">4</td> </tr> <tr> <td style="text-align: center; padding: 5px;">350</td> <td style="text-align: center; padding: 5px;">1</td> </tr> <tr> <td style="text-align: center; padding: 5px;">351</td> <td style="text-align: center; padding: 5px;">3</td> </tr> </tbody> </table>		ECM terminal	EGR volume control valve	337	6	338	4	350	1	351	3
ECM terminal	EGR volume control valve										
337	6										
338	4										
350	1										
351	3										
MTBL0463											
<p>Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>											
OK	▶ GO TO 8.										
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.										

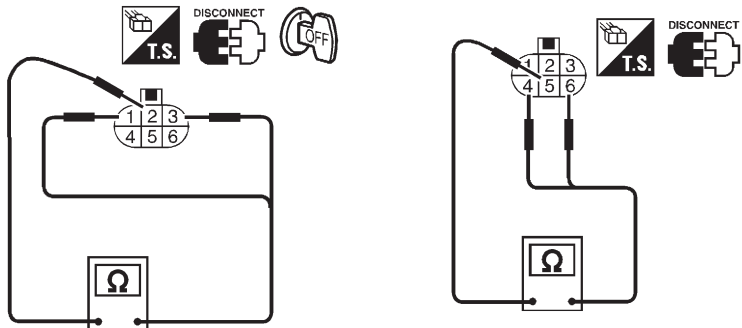
8	CHECK EGR VOLUME CONTROL VALVE-I
<p>Check resistance between EGR volume control valve terminal 2 and terminals 1, 3, terminal 5 and terminals 4, 6.</p>	
	
<p>Resistance: 13 - 17 Ω [At 20°C (68°F)]</p>	
SEF414Y	
OK or NG	
OK (With CONSULT-II)	▶ GO TO 9.
OK (Without CONSULT-II)	▶ GO TO 10.
NG	▶ Replace EGR volume control valve.

EGR VOLUME CONTROL SYSTEM

YD

Diagnostic Procedure (Cont'd)

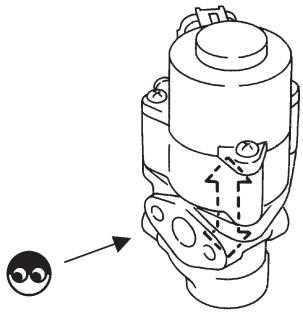9	CHECK EGR VOLUME CONTROL VALVE-II																								
<p>④ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Remove EGR volume control valve. 2. Reconnect ECM harness connector and EGR volume control valve harness connector. 3. Turn ignition switch "ON". 4. Perform "EGR VOL CONT/V" in "ACTIVE TEST" mode with CONSULT-II. 5. Check that EGR volume control valve shaft moves smoothly forward and backward according to the valve opening steps. 																									
<table border="1" style="display: inline-table; border-collapse: collapse;"> <thead> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <th>EGR VOL CONT/V</th> <th>20 step</th> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <th>CKPS-RPM (TDC)</th> <th>XXX rpm</th> </tr> </thead> <tbody> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </tbody> </table> <div style="display: inline-block; vertical-align: middle; margin-left: 20px;">  </div>		ACTIVE TEST		EGR VOL CONT/V	20 step	MONITOR		CKPS-RPM (TDC)	XXX rpm																
ACTIVE TEST																									
EGR VOL CONT/V	20 step																								
MONITOR																									
CKPS-RPM (TDC)	XXX rpm																								
SEF819Y																									
OK or NG																									
OK	▶	GO TO 11.																							
NG	▶	Replace EGR volume control valve.																							

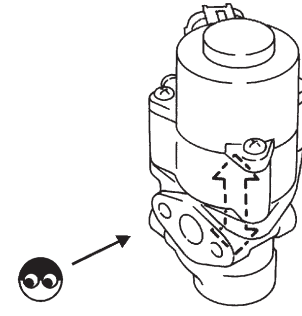10	CHECK EGR VOLUME CONTROL VALVE-II	
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Remove EGR volume control valve. 2. Reconnect ECM harness connector and EGR volume control valve harness connector. 3. Turn ignition switch "ON" and "OFF". 4. Check that EGR volume control valve shaft moves smoothly forward and backward according to the ignition switch position. 		
<div style="display: inline-block; vertical-align: middle;">  </div>		
SEF560W		
OK or NG		
OK	▶	GO TO 11.
NG	▶	Replace EGR volume control valve.

11	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-559.	
▶ INSPECTION END	




START SIGNAL

Wiring Diagram

NJEC0769

EC-S/SIG-01

— : DETECTABLE LINE FOR DTC
— : NON-DETECTABLE LINE FOR DTC

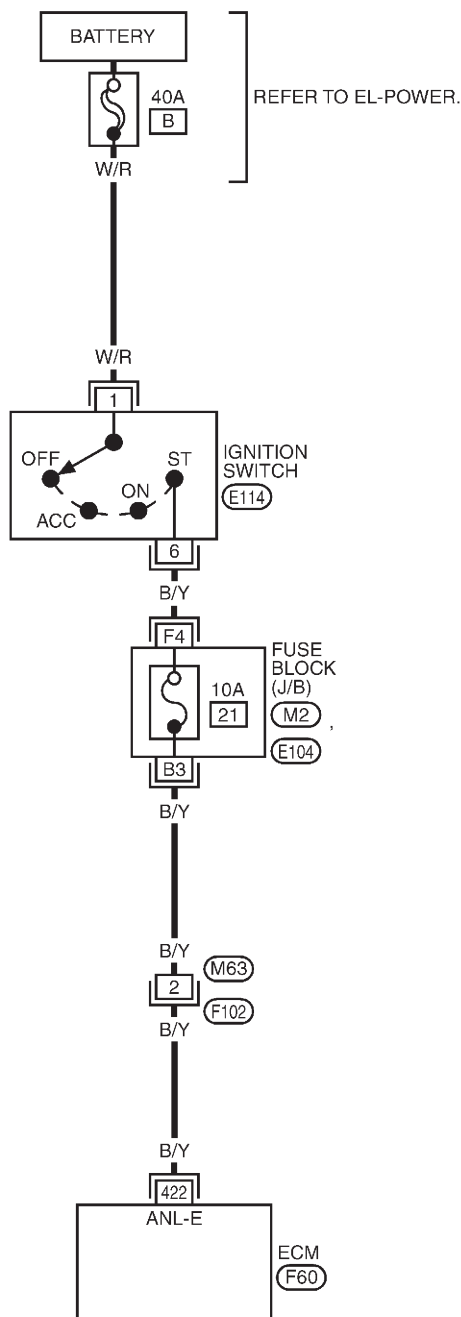

431	432	433	434	435	436	437	438	439	440
421	422	423	424	425	426	427	428	429	430
411	412	413	414	415	416	417	418	419	420
401	402	403	404	405	406	407	408	409	410



REFER TO THE FOLLOWING.
(M2), (E104) - FUSE BLOCK-
JUNCTION BOX (J/B)

Diagnostic Procedure

NJEC0770

1 CHECK START SIGNAL OVERALL FUNCTION

With CONSULT-II

1. Turn ignition switch "ON".
2. Check "START SIGNAL" in "DATA MONITOR" mode with CONSULT-II under the following conditions.


DATA MONITOR	
MONITORING	NO FAIL
START SIGNAL	OFF
CLSD TH/P SW	ON
AIR COND SIG	OFF
P/N POSI SW	ON

Condition	"START SIGNAL"
Ignition switch "ON"	OFF
Ignition switch "START"	ON

SEF604X

Without CONSULT-II

Check voltage between ECM terminal 422 and ground under the following conditions.

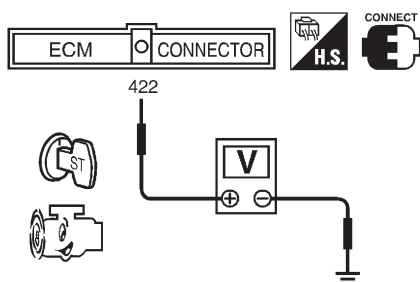

Condition	Voltage
Ignition switch "START"	Battery voltage
Other positions	Approximately 0V

SEF909Y

OK or NG

OK	▶	INSPECTION END
NG	▶	GO TO 2.

2 CHECK START SIGNAL INPUT SIGNAL CIRCUIT

1. Turn ignition switch "OFF".
2. Disconnect ECM harness connector and ignition switch harness connector.
3. Check harness continuity between ECM terminal 422 and ignition switch terminal 6. Refer to Wiring Diagram.
Continuity should exist.
4. Also check harness for short to ground and short to power.

OK or NG

OK	▶	GO TO 4.
NG	▶	GO TO 3.

3 DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M63, F102
- 10A fuse
- Fuse block (J/B) connectors M2, E104
- Harness for open or short between ECM and ignition switch

▶ Repair open circuit or short to ground or short to power in harness or connectors.

START SIGNAL

YD

Diagnostic Procedure (Cont'd)

4	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-559.	
▶	INSPECTION END

PARK/NEUTRAL POSITION (PNP) SWITCH (WHERE FITTED)

YD

Description

Description

When the gear position is in "Neutral", neutral position is "ON". ECM detects the position because the continuity of the line (the "ON" signal) exists. NJE0781

CONSULT-II Reference Value in Data Monitor Mode

Specification data are reference values. NJE0782

MONITOR ITEM	CONDITION		SPECIFICATION
P/N POSI SW	● Ignition switch: ON	Shift lever: Neutral	ON
		Except above	OFF

On models not equipped with park/neutral position (PNP) switch, "OFF" is always displayed regardless of gear shift position.

ECM Terminals and Reference Value

Specification data are reference values and are measured between each terminal and ground. NJE0783

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
418	G/OR	Park/Neutral position switch	[Ignition switch "ON"] ● Gear position is "Neutral"	Approximately 0V
			[Ignition switch "ON"] ● Except the above gear position	BATTERY VOLTAGE (11 - 14V)

PARK/NEUTRAL POSITION (PNP) SWITCH (WHERE FITTED)

YD


Wiring Diagram

Wiring Diagram

NJEC0784

EC-PNP/SW-01

— : DETECTABLE LINE FOR DTC
 — : NON-DETECTABLE LINE FOR DTC

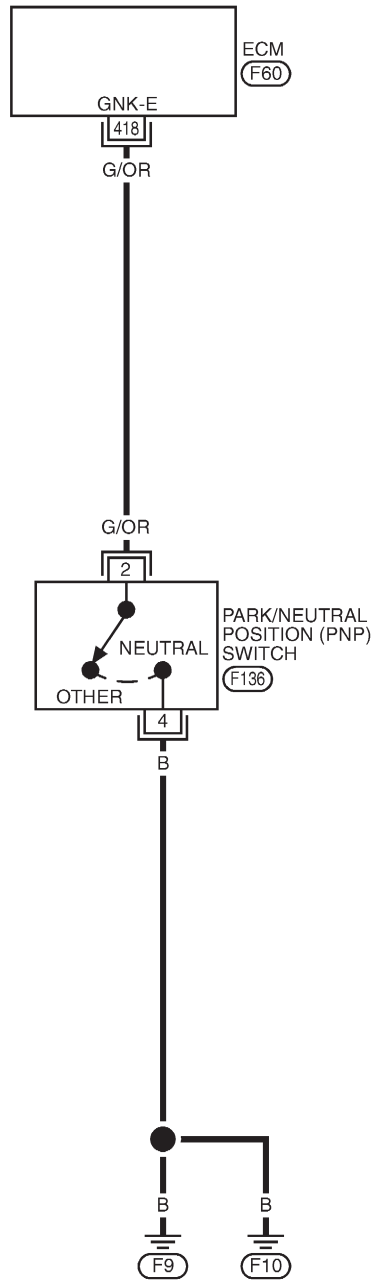

431	432	433	434	435	436	437	438	439	440
421	422	423	424	425	426	427	428	429	430
411	412	413	414	415	416	417	418	419	420
401	402	403	404	405	406	407	408	409	410



YEC022A


PARK/NEUTRAL POSITION (PNP) SWITCH (WHERE FITTED)

YD

Diagnostic Procedure

Diagnostic Procedure


NJECD785

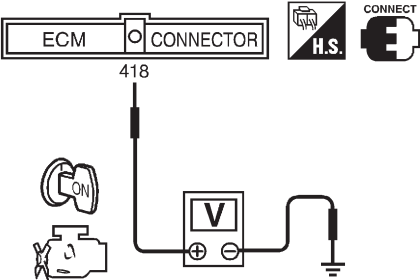1	CHECK OVERALL FUNCTION														
<p>④ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch "ON". 2. Select "P/N POSI SW" in "DATA MONITOR" mode with CONSULT-II. 3. Check "P/N POSI SW" signal under the following conditions. 															
		<table border="1" style="margin: auto;"> <thead> <tr> <th colspan="2">DATA MONITOR</th> </tr> <tr> <th>MONITOR</th> <th>NO DTC</th> </tr> </thead> <tbody> <tr> <td>P/N POSI SW</td> <td>ON</td> </tr> </tbody> </table>	DATA MONITOR		MONITOR	NO DTC	P/N POSI SW	ON	<table border="1" style="margin: auto;"> <tbody> <tr> <td>Shift lever position</td> <td>P/N POSI SW</td> </tr> <tr> <td>Neutral position</td> <td>ON</td> </tr> <tr> <td>Except the above position</td> <td>OFF</td> </tr> </tbody> </table>	Shift lever position	P/N POSI SW	Neutral position	ON	Except the above position	OFF
DATA MONITOR															
MONITOR	NO DTC														
P/N POSI SW	ON														
Shift lever position	P/N POSI SW														
Neutral position	ON														
Except the above position	OFF														
		SEF049Y													
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch "ON". 2. Check voltage between ECM terminal 418 and ground under the following conditions. 															
			<table border="1" style="margin: auto;"> <thead> <tr> <th>Condition (Gear position)</th> <th>Voltage V</th> </tr> </thead> <tbody> <tr> <td>Neutral position</td> <td>Approx. 0V</td> </tr> <tr> <td>Except the above position</td> <td>Battery voltage</td> </tr> </tbody> </table>	Condition (Gear position)	Voltage V	Neutral position	Approx. 0V	Except the above position	Battery voltage						
Condition (Gear position)	Voltage V														
Neutral position	Approx. 0V														
Except the above position	Battery voltage														
		SEF914Y													
OK or NG															
OK	▶	INSPECTION END													
NG	▶	GO TO 2.													

PARK/NEUTRAL POSITION (PNP) SWITCH (WHERE FITTED)

YD

Diagnostic Procedure (Cont'd)

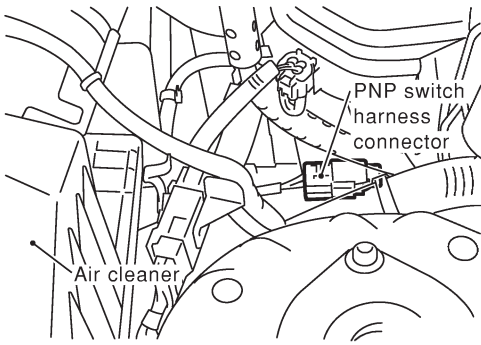2	CHECK PNP SWITCH GROUND CIRCUIT FOR OPEN AND SHORT	
<p>1. Turn ignition switch "OFF".</p> <p>2. Disconnect park/neutral position (PNP) switch harness connector.</p>		
		
SEF393Y		
<p>3. Check harness continuity between PNP switch terminal 4 and body ground. Refer to Wiring Diagram. Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 3.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

3	CHECK PNP SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
<p>1. Disconnect ECM harness connector.</p> <p>2. Check harness continuity between ECM terminal 418 and PNP switch terminal 2. Refer to Wiring Diagram. Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 4.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.



4	CHECK PARK/NEUTRAL POSITION (PNP) SWITCH	
Refer to MT-21, "Position Switch Check".		
OK or NG		
OK	▶	GO TO 5.
NG	▶	Replace park/neutral position (PNP) switch.

5	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-559.		
▶ INSPECTION END		

Wiring Diagram

NJE0786

EC-A/CCUT-01

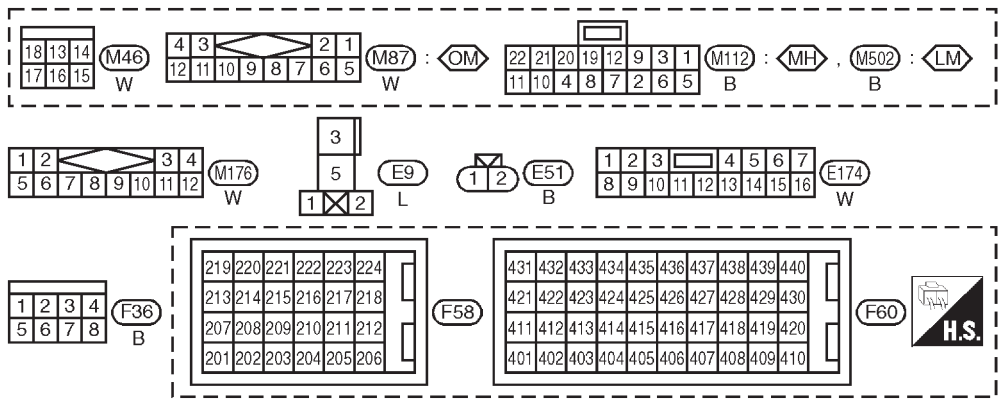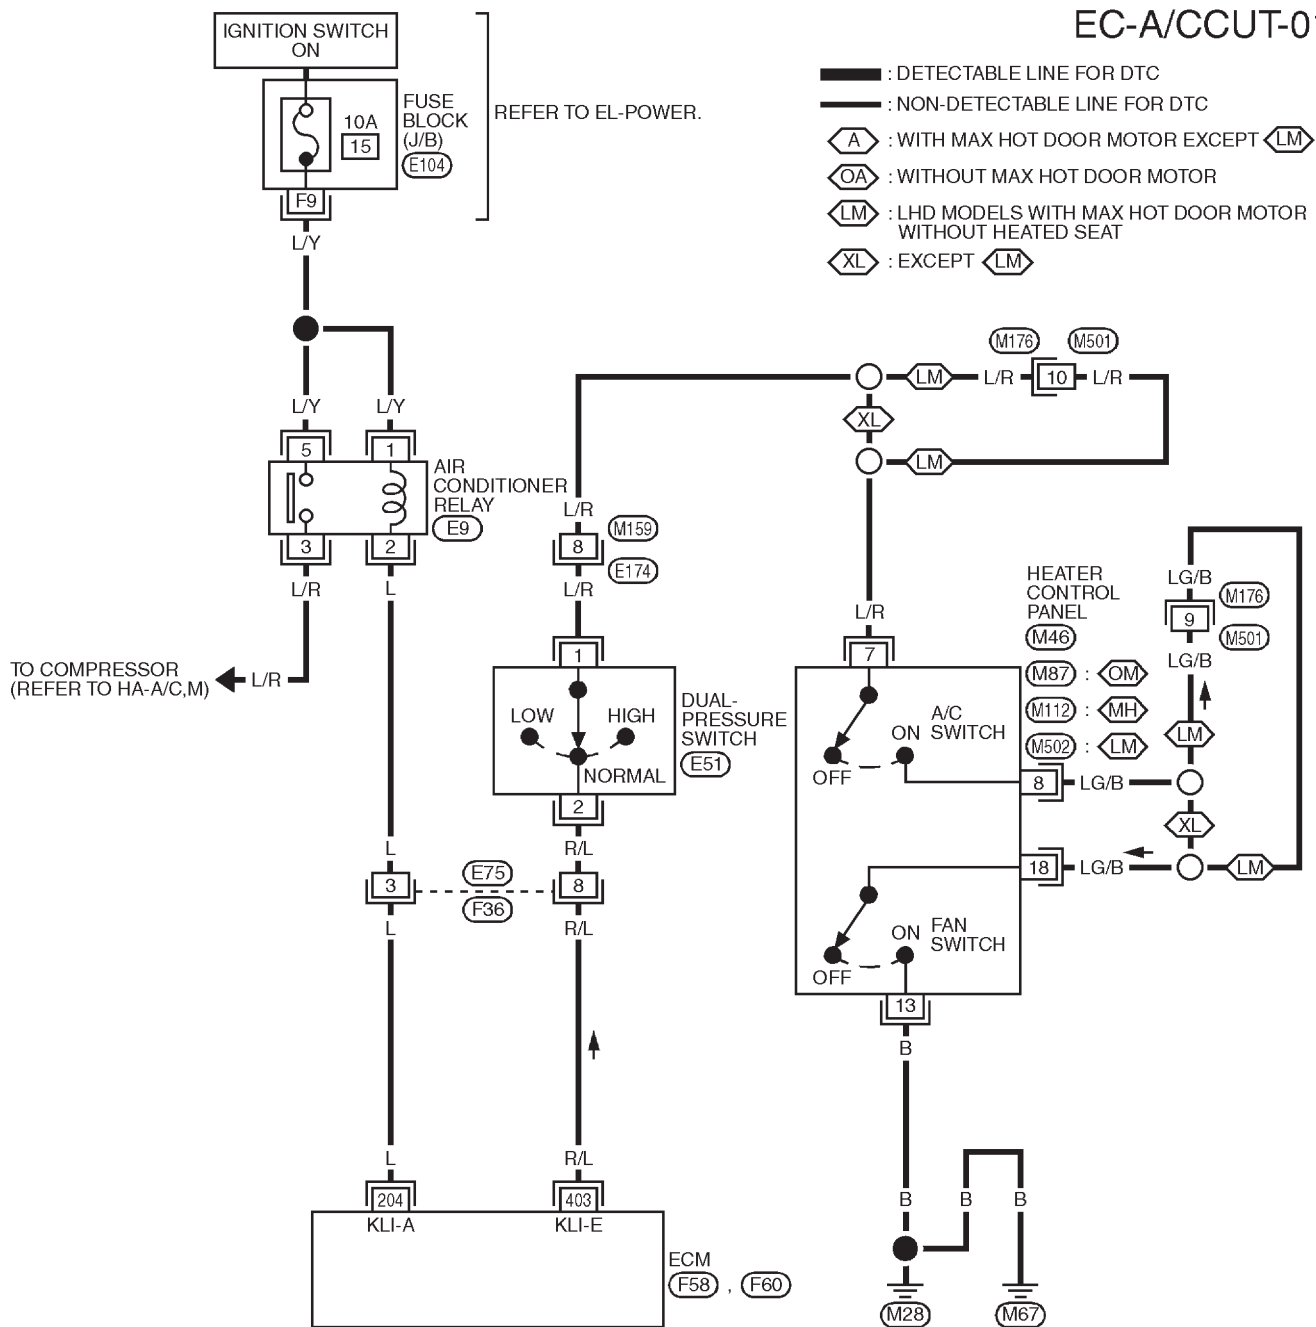

REFER TO THE FOLLOWING.
 (E104) - FUSE BLOCK- JUNCTION BOX (J/B)

MI & DATA LINK CONNECTORS






YD

Wiring Diagram

Wiring Diagram

NJEC0787

EC-MIL/DL-01

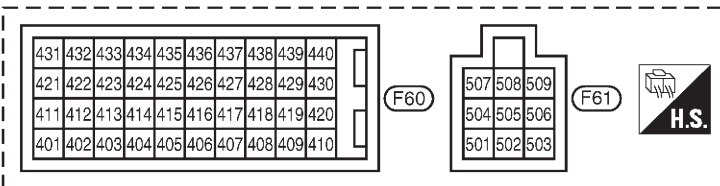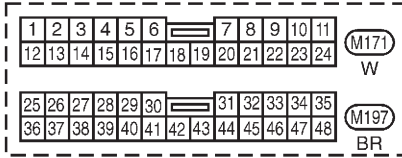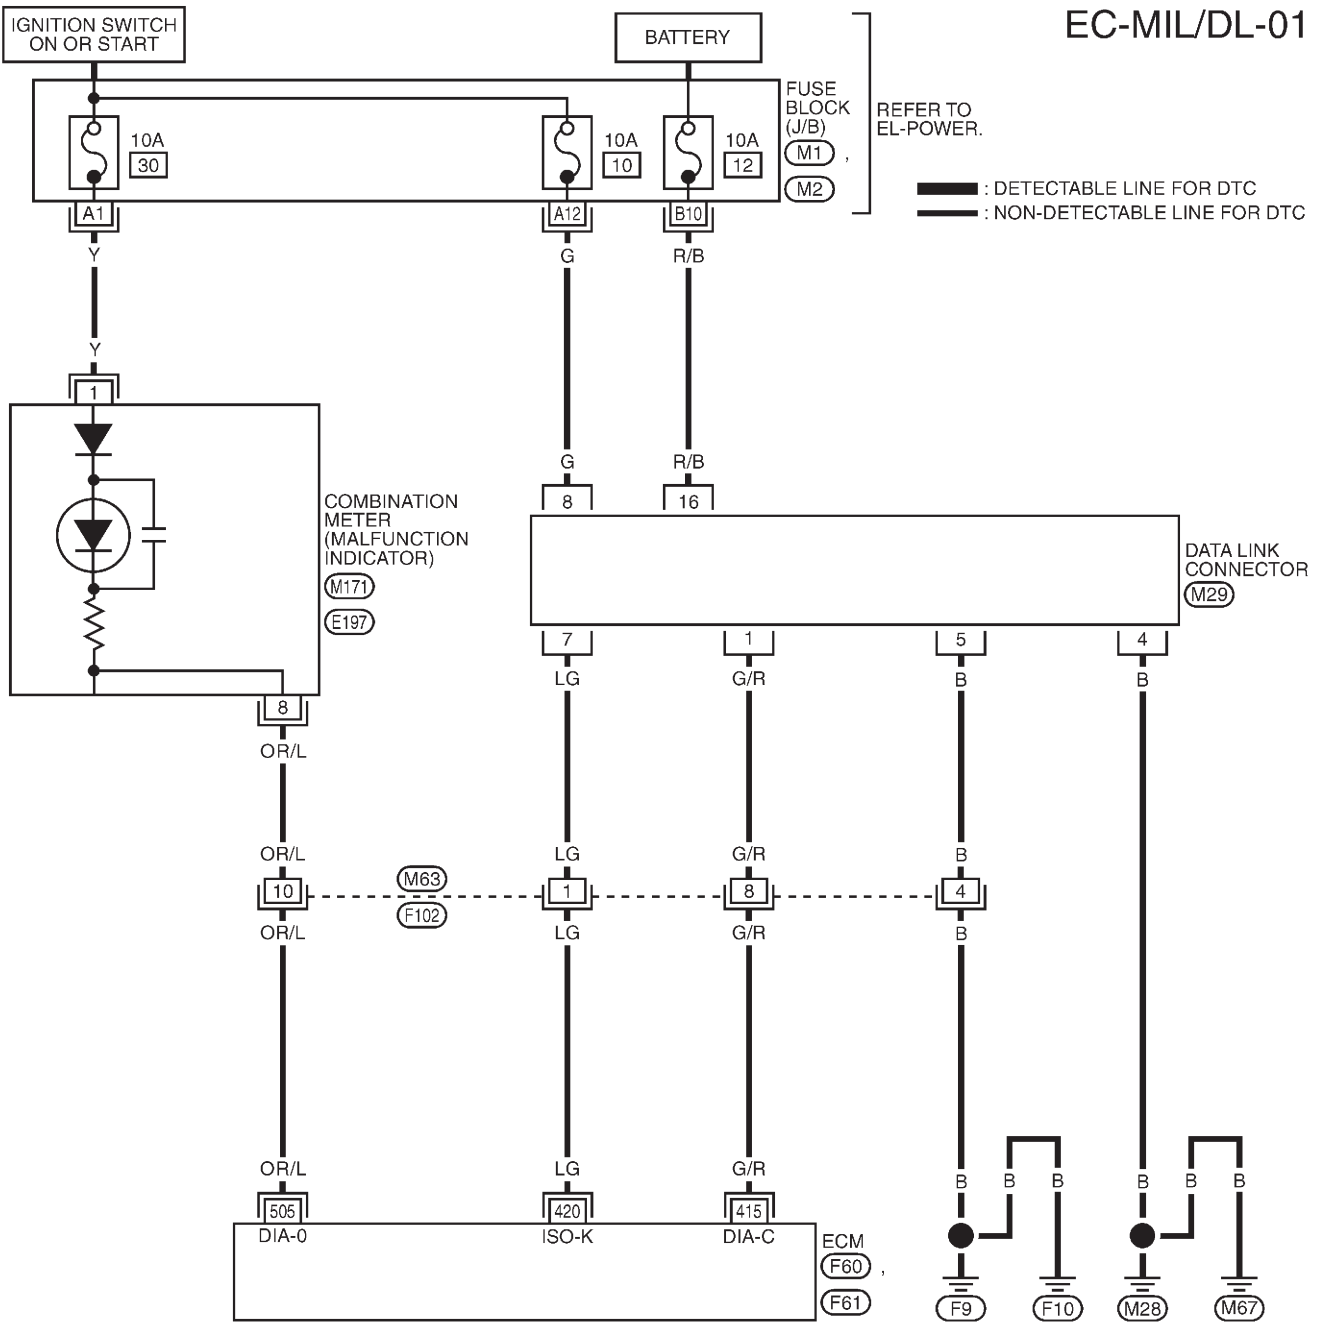

REFER TO THE FOLLOWING.
 (M1), (M2) - FUSE BLOCK-JUNCTION BOX (J/B)

NEF399A

SERVICE DATA AND SPECIFICATIONS (SDS)

YD

General Specifications

General Specifications

NJEC0788
Unit: rpm

Engine	YD22DDT
Idle speed	725±25
Maximum engine speed	4,900

Injection Nozzle

NJEC0790
Unit: kPa (bar, kg/cm², psi)

Initial injection pressure	New	21,476 - 22,457 (214.7 - 224.5, 219 - 229, 3,114 - 3,256)
	Limit	18,275 (182.7, 186, 2,650)

Engine Coolant Temperature Sensor

NJEC0791

Temperature °C (°F)	Resistance kΩ
20 (68)	2.1 - 2.9
50 (122)	0.68 - 1.00
90 (194)	0.236 - 0.260

Crankshaft Position Sensor (TDC)

NJEC0792

Resistance [at 20°C (68°F)] Ω	495 - 605
-------------------------------	-----------

Glow Plug

NJEC0793

Resistance [at 25°C (77°F)] Ω	0.8
-------------------------------	-----

Accelerator Position Sensor

NJEC0794

Throttle valve conditions	Resistance between terminals 2 and 4 kΩ [at 25°C (77°F)]
Completely closed	0.9 - 1.3
Partially open	0.9 - 2.1
Completely open	1.7 - 2.1

EGR Volume Control Valve

NJEC0795

Resistance [at 25°C (77°F)] Ω	13 - 17
-------------------------------	---------