

# MANUAL TRANSAXLE

## SECTION **MT**

### CONTENTS

	<b>RS5F30A</b>	
<b>PREPARATION</b> .....	4	
Special Service Tools .....	4	
Commercial Service Tools .....	6	

	<b>RS5F70A</b>	
<b>PREPARATION</b> .....	7	
Special Service Tools .....	7	
Commercial Service Tools .....	9	

	<b>RS5F50A</b>	
<b>PREPARATION</b> .....	10	
Special Service Tools .....	10	
Commercial Service Tools .....	12	

<b>NOISE, VIBRATION AND HARSHNESS (NVH)</b>	
<b>TROUBLESHOOTING</b> .....	13
NVH Troubleshooting Chart .....	13
MANUAL TRANSAXLE .....	13

	<b>RS5F30A, RS5F70A</b>	
<b>M/T OIL</b> .....	14	
Changing M/T Oil .....	14	
Checking .....	14	
OIL LEAK AND OIL LEVEL .....	14	

	<b>RS5F50A</b>	
<b>M/T OIL</b> .....	15	
Changing M/T Oil .....	15	
Checking .....	15	
OIL LEAK AND OIL LEVEL .....	15	

<b>DESCRIPTION</b> .....	16	
Cross-sectional View - RS5F30A .....	16	

Cross-sectional View - RS5F70A .....	17
Cross-sectional View - RS5F50A .....	18
DOUBLE-CONE SYNCHRONIZER .....	19
<b>ON-VEHICLE SERVICE</b> .....	20
Replacing Oil Seal .....	20
DIFFERENTIAL OIL SEAL .....	20
STRIKING ROD OIL SEAL .....	21
Position Switch Check .....	21
BACK-UP LAMP SWITCH .....	21
PNP SWITCH .....	22
BACK-UP LAMP SWITCH AND PNP SWITCH .....	22

	<b>RS5F30A, RS5F70A</b>	
<b>REMOVAL AND INSTALLATION</b> .....	23	
Removal .....	23	
Installation .....	24	
MODEL QG15DE ENGINE .....	24	
MODEL QG18DE ENGINE .....	25	

	<b>RS5F50A</b>	
<b>REMOVAL AND INSTALLATION</b> .....	26	
Removal .....	26	
Installation .....	28	
MODEL YD ENGINE .....	28	

<b>TRANSAXLE GEAR CONTROL</b> .....	29	
Components .....	29	

	<b>RS5F30A</b>	
<b>OVERHAUL</b> .....	30	
Case Components .....	30	
Gear Components .....	31	
Shift Control Components .....	32	

<b>DISASSEMBLY</b> .....	33
<b>REPAIR FOR COMPONENT PARTS</b> .....	36
Input Shaft and Gears .....	36
DISASSEMBLY .....	36

# CONTENTS (Cont'd)

INSPECTION.....	37
ASSEMBLY.....	37
Mainshaft and Gears.....	39
DISASSEMBLY.....	39
INSPECTION.....	41
ASSEMBLY.....	42
Final Drive.....	43
DISASSEMBLY.....	43
INSPECTION.....	44
ASSEMBLY.....	44
Shift Control Components.....	46
INSPECTION.....	46
Case Components.....	46
DISASSEMBLY AND ASSEMBLY.....	46
<b>ADJUSTMENT</b> .....	49
Differential Side Bearing Preload.....	49
Mainshaft Bearing Preload.....	50
<b>ASSEMBLY</b> .....	51

**RS5F70A**

<b>OVERHAUL</b> .....	54
Case Components.....	54
Gear Components.....	55
Shift Control Components.....	56
Final Drive Components.....	57
<b>DISASSEMBLY</b> .....	58
Transaxle Case.....	58
Clutch Housing.....	60
<b>REPAIR FOR COMPONENT PARTS</b> .....	64
Input Shaft and Gears.....	64
DISASSEMBLY.....	64
INSPECTION.....	65
ASSEMBLY.....	66
Mainshaft and Gears.....	69
DISASSEMBLY.....	69
INSPECTION.....	70
ASSEMBLY.....	72
Final Drive.....	77
PRE-INSPECTION.....	77
DISASSEMBLY.....	78
INSPECTION.....	79
ASSEMBLY.....	79
Shift Control Components.....	81
INSPECTION.....	81
<b>ASSEMBLY</b> .....	82
Clutch Housing.....	82
Transaxle Case.....	86

**RS5F50A**

<b>OVERHAUL</b> .....	92
Case Components.....	92
Gear Components.....	93
Shift Control Components.....	94

<b>DISASSEMBLY</b> .....	95
<b>REPAIR FOR COMPONENT PARTS</b> .....	98
Input Shaft and Gears.....	98
DISASSEMBLY.....	98
INSPECTION.....	99
ASSEMBLY.....	100
Mainshaft and Gears.....	103
DISASSEMBLY.....	103
INSPECTION.....	104
ASSEMBLY.....	105
Final Drive.....	107
DISASSEMBLY.....	107
INSPECTION.....	107
ASSEMBLY.....	108
Shift Control Components.....	109
INSPECTION.....	109
Case Components.....	109
REMOVAL AND INSTALLATION.....	109
<b>ADJUSTMENT</b> .....	111
Input Shaft End Play and Differential Side Bearing Preload.....	111
DIFFERENTIAL SIDE.....	111
INPUT SHAFT SIDE.....	112
Mainshaft Bearing Preload.....	112
<b>ASSEMBLY</b> .....	114

**RS5F30A**

<b>SERVICE DATA AND SPECIFICATIONS (SDS)</b> .....	118
General Specifications.....	118
TRANSAXLE.....	118
FINAL GEAR.....	118
Gear End Play.....	119
Clearance Between Baulk Ring and Gear.....	119
1ST, 2ND, 3RD, 4TH & 5TH BAULK RING.....	119
Available Check Plugs.....	119
REVERSE CHECK PLUGS.....	119
Available Snap Rings.....	119
INPUT SHAFT FRONT BEARING.....	119
INPUT SHAFT 5TH SYNCHRONIZER HUB.....	120
INPUT SHAFT REAR BEARING.....	120
Available C-rings.....	120
MAINSHAFT C-RING.....	120
Available Washers.....	120
DIFFERENTIAL SIDE GEAR THRUST WASHER.....	120
Available Shims - Mainshaft and Differential Side Bearing Preload and Adjusting Shim.....	121
BEARING PRELOAD (REUSED BEARING).....	121
TURNING TORQUE (NEW BEARING).....	121
MAINSHAFT REAR BEARING ADJUSTING SHIMS..	121
DIFFERENTIAL SIDE BEARING ADJUSTING SHIMS.....	122







# CONTENTS (Cont'd)

[ ]	<b>RS5F70A</b>	[ ]
<b>SERVICE DATA AND SPECIFICATIONS (SDS)</b>		123
General Specifications		123
TRANSAXLE		123
FINAL GEAR		123
Gear End Play		124
Clearance Coupling Sleeve		124
1ST, 2ND, 3RD, 4TH, 5TH & REVERSE		
COUPLING SLEEVE		124
Clearance Between Baulk Ring and Gear		124
3RD, 4TH, 5TH, REVERSE BAULK RING		124
1ST AND 2ND DOUBLE BAULK RING		124
Available Snap Rings		125
SNAP RING		125
Available C-rings		125
4TH INPUT GEAR C-RING		125
5TH INPUT GEAR REAR C-RING		125
MAINSHAFT C-RING		126
Available Adjusting Shims		127
INPUT SHAFT REAR BEARING ADJUSTING		
SHIM		127
MAINSHAFT ADJUSTING SHIM		128
MAINSHAFT REAR BEARING ADJUSTING SHIM		128
Available Thrust Washer		129
MAINSHAFT THRUST WASHER		129
Available Washers		129
DIFFERENTIAL SIDE GEAR THRUST WASHER		129
Available Shims - Differential Side Bearing		
Preload and Adjusting Shim		130
BEARING PRELOAD		130
DIFFERENTIAL SIDE BEARING ADJUSTING		
SHIMS		130

[ ]	<b>RS5F50A</b>	[ ]
<b>SERVICE DATA AND SPECIFICATIONS (SDS)</b>		131
General Specifications		131
TRANSAXLE		131
FINAL GEAR		131
Gear End Play		132
Clearance Between Baulk Ring and Gear		132
3RD, 4TH & 5TH BAULK RING		132
1ST AND 2ND DOUBLE BAULK RING		132
REVERSE BAULK RING		132
Available Snap Rings		133
1ST & 2ND SYNCHRONIZER HUB (AT		
MAINSHAFT)		133
3RD & 4TH SYNCHRONIZER HUB (AT INPUT		
SHAFT)		133
5TH MAIN GEAR (AT MAINSHAFT)		133
Available Thrust Washer		133
4TH INPUT GEAR (AT INPUT SHAFT)		133
DIFFERENTIAL SIDE GEAR THRUST WASHER		133
Available Shims		134
BEARING PRELOAD AND END PLAY		134
TOTAL TURNING TORQUE (NEW BEARING)		134
MAINSHAFT BEARING ADJUSTING SHIM		134
TABLE FOR SELECTING MAINSHAFT BEARING		
ADJUSTING SHIM(S)		134
INPUT SHAFT BEARING ADJUSTING SHIM		135
TABLE FOR SELECTING INPUT SHAFT BEARING		
ADJUSTING SHIM(S)		135
DIFFERENTIAL SIDE BEARING ADJUSTING		
SHIM		135
TABLE FOR SELECTING DIFFERENTIAL SIDE		
BEARING ADJUSTING SHIM(S)		136

## Special Service Tools









NJMT0030

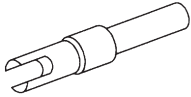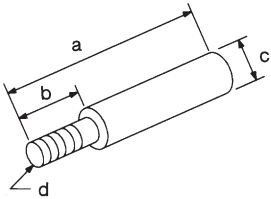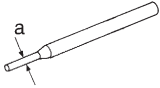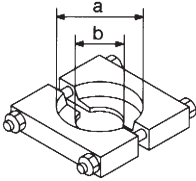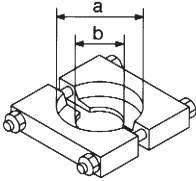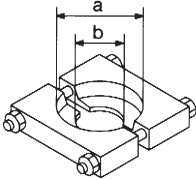Tool number Tool name	Description
KV38105900 Preload adapter	 <p>Measuring turning torque of final drive assembly Measuring total turning torque Measuring clearance between side gear and differential case with washer Selecting differential side bearing adjusting shim (Use with KV38106000.)</p> <p>NT087</p>
KV38106000 Height gauge adapter (differential side bearing)	 <p>Selecting differential side bearing adjusting shim (Use with KV38105900.) <b>a: 140 mm (5.51 in)</b> <b>b: 40 mm (1.57 in)</b> <b>c: 16 mm (0.63 in) dia.</b> <b>d: M8 x 1.25P</b></p> <p>NT418</p>
KV32101000 Pin punch	 <p>Removing and installing retaining pin <b>a: 4 mm (0.16 in) dia.</b></p> <p>NT410</p>
ST22730000 Puller	 <p>Removing mainshaft front and rear bearing inner race Removing 5th main gear <b>a: 82 mm (3.23 in) dia.</b> <b>b: 30 mm (1.18 in) dia.</b></p> <p>NT411</p>
ST30031000 Puller	 <p>Removing differential side bearing inner race <b>a: 90 mm (3.54 in) dia.</b> <b>b: 50 mm (1.97 in) dia.</b></p> <p>NT411</p>
ST30021000 Puller	 <p>Removing 5th synchronizer <b>a: 110 mm (4.33 in) dia.</b> <b>b: 68 mm (2.68 in) dia.</b></p> <p>NT411</p>

# PREPARATION

**RS5F30A**



*Special Service Tools (Cont'd)*

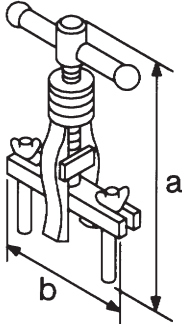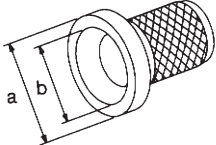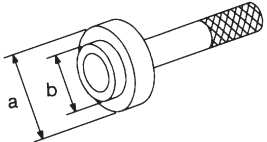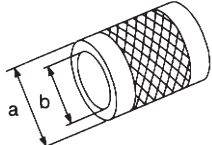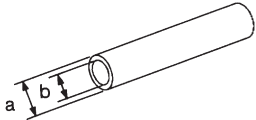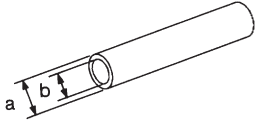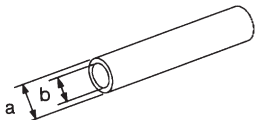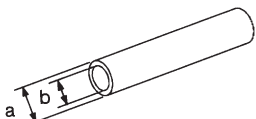Tool number Tool name	Description
ST33290001 Puller	 <p>Removing differential oil seal Removing mainshaft front bearing outer race Removing differential side bearing outer race <b>a: 250 mm (9.84 in)</b> <b>b: 160 mm (6.30 in)</b></p> <p>NT414</p>
ST33400001 Drift	 <p>Installing differential oil seal <b>a: 60 mm (2.36 in) dia.</b> <b>b: 47 mm (1.85 in) dia.</b></p> <p>NT086</p>
KV38102100 Drift	 <p>Installing input shaft rear bearing <b>a: 44 mm (1.73 in) dia.</b> <b>b: 24.5 mm (0.965 in) dia.</b></p> <p>NT427</p>
ST33200000 Drift	 <p>Installing mainshaft front bearing outer race <b>a: 60 mm (2.36 in) dia.</b> <b>b: 44.5 mm (1.752 in) dia.</b></p> <p>NT091</p>
ST22350000 Drift	 <p>Installing input shaft front bearing <b>a: 34 mm (1.34 in) dia.</b> <b>b: 28 mm (1.10 in) dia.</b></p> <p>NT065</p>
ST22452000 Drift	 <p>Installing 1st &amp; 2nd synchronizer <b>a: 45 mm (1.77 in) dia.</b> <b>b: 36 mm (1.42 in) dia.</b></p> <p>NT065</p>
ST37750000 Drift	 <p>Installing 5th main gear Installing 3rd &amp; 4th synchronizer Installing input shaft oil seal Installing 5th synchronizer <b>a: 40 mm (1.57 in) dia.</b> <b>b: 31 mm (1.22 in) dia.</b></p> <p>NT065</p>
ST22360002 Drift	 <p>Installing mainshaft rear bearing inner race <b>a: 29 mm (1.14 in) dia.</b> <b>b: 23 mm (0.91 in) dia.</b></p> <p>NT065</p>

# PREPARATION





**RS5F30A**

*Special Service Tools (Cont'd)*

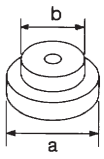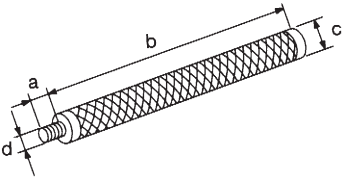Tool number Tool name	Description	
ST30621000 Drift		Installing differential side bearing outer race (Use with ST30611000.) <b>a: 79 mm (3.11 in) dia.</b> <b>b: 59 mm (2.32 in) dia.</b>
	NT073	
ST30611000 Drift handle		Installing differential side bearing outer race (Use with ST30621000.) <b>a: 15 mm (0.59 in)</b> <b>b: 335 mm (13.19 in)</b> <b>c: 25 mm (0.98 in) dia.</b> <b>d: M12 x 1.5P</b>
	NT419	

## Commercial Service Tools

NJMT0031

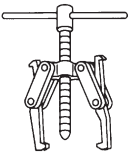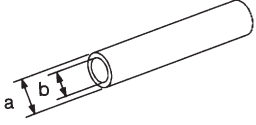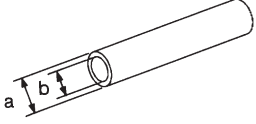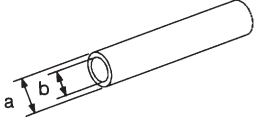Tool name	Description	
Puller		Removing input shaft front bearing
	NT077	
Drift		Installing mainshaft front bearing inner race <b>a: 26 mm (1.02 in) dia.</b> <b>b: 21 mm (0.83 in) dia.</b>
	NT065	
Drift		Installing differential side bearing inner race <b>a: 56 mm (2.20 in) dia.</b> <b>b: 50.5 mm (1.988 in) dia.</b>
	NT065	
Drift		Installing striking rod oil seal <b>a: 38 mm (1.50 in) dia.</b> <b>b: 32 mm (1.26 in) dia.</b>
	NT065	







# PREPARATION

**RS5F70A**

*Special Service Tools*

## Special Service Tools







NJMT0032

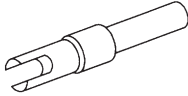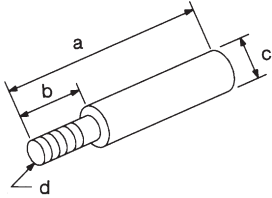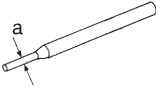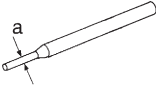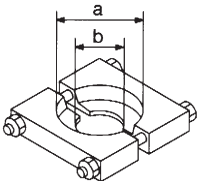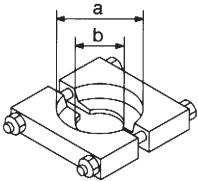Tool number Tool name	Description
KV38107700 Preload adapter	 <p>NT087</p> <p>Measuring turning torque of final drive assembly Measuring total turning torque Measuring clearance between side gear and differential case with washer Selecting differential side bearing adjusting shim (Use with KV38106000.)</p>
KV38106000 Height gauge adapter (differential side bearing)	 <p>NT418</p> <p>Selecting differential side bearing adjusting shim (Use with KV38107700.) <b>a: 140 mm (5.51 in)</b> <b>b: 40 mm (1.57 in)</b> <b>c: 16 mm (0.63 in) dia.</b> <b>d: M8 x 1.25P</b></p>
KV32101000 Pin punch	 <p>NT410</p> <p>Removing and installing retaining pin Removing and installing lock pin Removing selector shaft Removing welch plug <b>a: 4 mm (0.16 in) dia.</b></p>
KV31100300 Pin punch	 <p>NT410</p> <p>Removing and installing retaining pin <b>a: 4.5 mm (0.177 in) dia.</b></p>
ST30031000 Puller	 <p>NT411</p> <p>Removing 3rd, 5th input gear Removing 3rd &amp; 4th and 5th &amp; Rev synchronizer hub Removing mainshaft rear bearing Removing 2nd gear, 5th gear bush Removing 1st &amp; 2nd synchronizer hub, 1st and 4th main gear Removing and installing differential side bearing <b>a: 90 mm (3.54 in) dia.</b> <b>b: 50 mm (1.97 in) dia.</b></p>
ST30021000 Puller	 <p>NT411</p> <p>Removing input shaft front and rear bearing Installing input shaft front and rear bearing Installing 5th input gear, 3rd main gear and 4th main gear Installing 1st &amp; 2nd, 3rd &amp; 4th and 5th &amp; Rev synchronizer hub Installing 2nd gear bush, 5th gear bush, Rev gear bush Installing mainshaft rear bearing <b>a: 110 mm (4.33 in) dia.</b> <b>b: 68 mm (2.68 in) dia.</b></p>

# PREPARATION

RS5F70A

Special Service Tools (Cont'd)

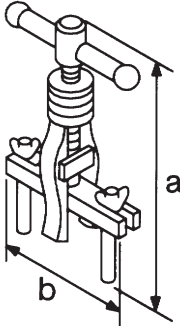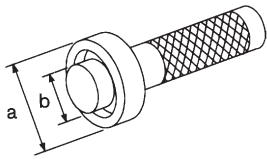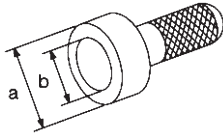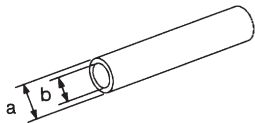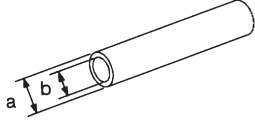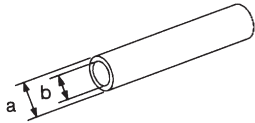Tool number Tool name	Description
ST33290001 Puller	 <p>Removing idler gear bearing outer race  <b>a: 250 mm (9.84 in)</b>  <b>b: 160 mm (6.30 in)</b></p>
NT414	
ST33230000 Drift	 <p>Removing differential oil seal            Installing differential side bearing  <b>a: 51 mm (2.01 in) dia.</b>  <b>b: 28.5 mm (1.122 in) dia.</b></p>
NT084	
ST30720000 Drift	 <p>Installing differential side bearing outer race  <b>a: 77 mm (3.03 in) dia.</b>  <b>b: 55.5 mm (2.185 in) dia.</b></p>
NT115	
ST22350000 Drift	 <p>Installing input shaft front and rear bearing  <b>a: 34 mm (1.34 in) dia.</b>  <b>b: 28 mm (1.10 in) dia.</b></p>
NT065	
ST22452000 Drift	 <p>Installing 3rd and 4th main gear            Installing 5th gear bush            Installing 5th &amp; Rev synchronizer hub            Installing Rev gear bush            Installing mainshaft rear bearing  <b>a: 45 mm (1.77 in) dia.</b>  <b>b: 36 mm (1.42 in) dia.</b></p>
NT065	
ST37750000 Drift	 <p>Installing input shaft oil seal            Installing 5th synchronizer            Installing mainshaft rear bearing            Installing 5th main gear            Installing 3rd &amp; 4th synchronizer hub            Installing striking rod oil seal            Installing clutch housing dust seal  <b>a: 40 mm (1.57 in) dia.</b>  <b>b: 31 mm (1.22 in) dia.</b></p>
NT065	










# PREPARATION

**RS5F70A**

*Commercial Service Tools*







## Commercial Service Tools

NJMT0033

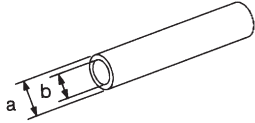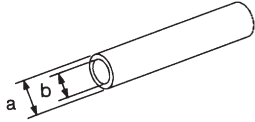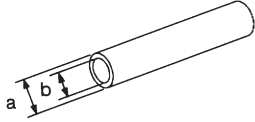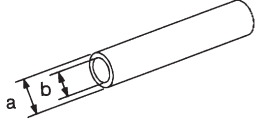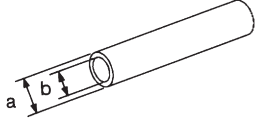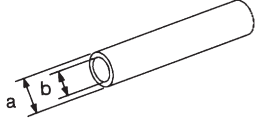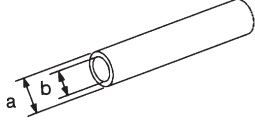Tool name	Description
Drift  NT065	 <p>Installing welch plug  <b>a: 12 mm (0.47 in) dia.</b>  <b>b: 10 mm (0.39 in) dia.</b></p>
Drift  NT065	 <p>Removing input shaft rear bearing                      Removing mainshaft rear bearing  <b>a: 22 mm (0.87 in) dia.</b>  <b>b: 16 mm (0.63 in) dia.</b></p>
Drift  NT065	 <p>Installing differential oil seal  <b>a: 58 mm (2.28 in) dia.</b>  <b>b: 50 mm (1.97 in) dia.</b></p>
Drift  NT065	 <p>Installing differential oil seal  <b>a: 54 mm (2.13 in) dia.</b>  <b>b: 50 mm (1.97 in) dia.</b></p>
Drift  NT065	 <p>Installing 2nd gear bush  <b>a: 38 mm (1.50 in) dia.</b>  <b>b: 33 mm (1.30 in) dia.</b></p>
Drift  NT065	 <p>Installing 3rd &amp; 4th and 1st &amp; 2nd synchronizer hub                      Installing mainshaft front bearing  <b>a: 50 mm (1.97 in) dia.</b>  <b>b: 41 mm (1.61 in) dia.</b></p>
Drift  NT065	 <p>Installing input shaft oil seal                      Installing 5th input gear  <b>a: 39 mm (1.54 in) dia.</b>  <b>b: 30 mm (1.18 in) dia.</b></p>

## Special Service Tools









NJMT0001

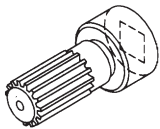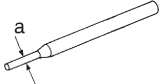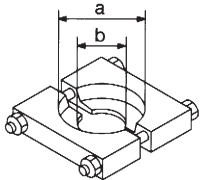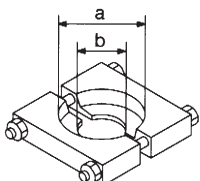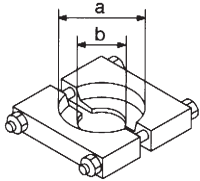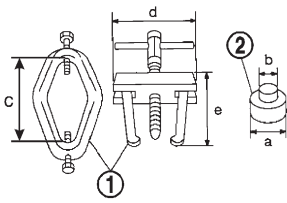Tool number Tool name	Description
KV38105210 Preload adapter	 <p>Measuring turning torque of final drive assembly Measuring total turning torque</p> <p>NT075</p>
KV32101000 Pin punch	 <p>Removing and installing retaining pin <b>a: 4 mm (0.16 in) dia.</b></p> <p>NT410</p>
ST22730000 Puller	 <p>Removing mainshaft front and rear bearing inner race <b>a: 82 mm (3.23 in) dia.</b> <b>b: 30 mm (1.18 in) dia.</b></p> <p>NT411</p>
ST30031000 Puller	 <p>Removing input shaft front and rear bearing Removing 4th &amp; 5th main gear <b>a: 90 mm (3.54 in) dia.</b> <b>b: 50 mm (1.97 in) dia.</b></p> <p>NT411</p>
ST30021000 Puller	 <p>Removing 5th synchronizer Removing 3rd &amp; 4th synchronizer Removing 2nd &amp; 3rd main gear <b>a: 110 mm (4.33 in) dia.</b> <b>b: 68 mm (2.68 in) dia.</b></p> <p>NT411</p>
ST3306S001 Differential side bearing puller set 1 ST33051001 Puller 2 ST33061000 Adapter	 <p>Removing differential side bearing inner race <b>a: 38 mm (1.50 in) dia.</b> <b>b: 28.5 mm (1.122 in) dia.</b> <b>c: 130 mm (5.12 in)</b> <b>d: 135 mm (5.31 in)</b> <b>e: 100 mm (3.94 in)</b></p> <p>NT675</p>

# PREPARATION

**RS5F50A**

*Special Service Tools (Cont'd)*

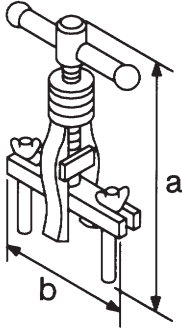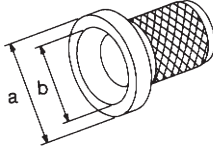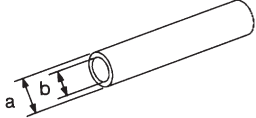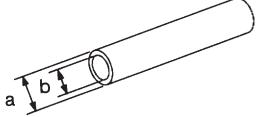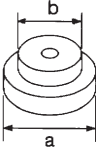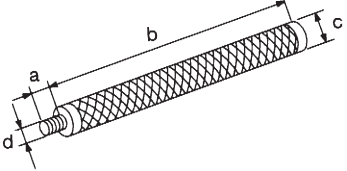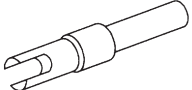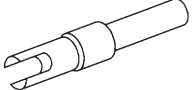Tool number Tool name	Description
ST33290001 Puller	 <p>Removing differential oil seal Removing mainshaft rear bearing outer race Removing differential side bearing outer race <b>a: 250 mm (9.84 in)</b> <b>b: 160 mm (6.30 in)</b></p> <p>NT414</p>
ST33400001 Drift	 <p>Installing differential oil seal <b>a: 60 mm (2.36 in) dia.</b> <b>b: 47 mm (1.85 in) dia.</b></p> <p>NT086</p>
ST30600000 Drift	 <p>Installing input shaft front bearing <b>a: 36 mm (1.42 in) dia.</b> <b>b: 31 mm (1.22 in) dia.</b></p> <p>NT065</p>
ST22452000 Drift	 <p>Installing 3rd, 4th and 5th main gear <b>a: 45 mm (1.77 in) dia.</b> <b>b: 36 mm (1.42 in) dia.</b></p> <p>NT065</p>
ST30621000 Drift	 <p>Installing mainshaft rear bearing outer race (Use with ST30611000.) <b>a: 79 mm (3.11 in) dia.</b> <b>b: 59 mm (2.32 in) dia.</b></p> <p>NT073</p>
ST30611000	 <p>(Use with ST30621000.) <b>a: 15 mm (0.59 in)</b> <b>b: 335 mm (13.19 in)</b> <b>c: 25 mm (0.98 in) dia.</b> <b>d: M12 x 1.5P</b></p> <p>NT419</p>
KV38107700 Preload adapter	 <p>Measuring clearance between side gear and differential case with washer</p> <p>NT087</p>
KV38106500 Preload adapter	 <p>Measuring turning torque of final drive assembly</p> <p>NT087</p>




# PREPARATION

RS5F50A

Commercial Service Tools

## Commercial Service Tools

NJMT0002

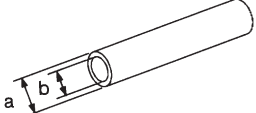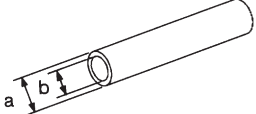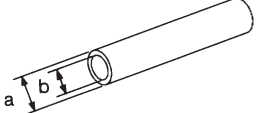Tool name	Description
Drift	 <p>Installing differential side bearing inner race <b>a: 45 mm (1.77 in) dia.</b> <b>b: 41 mm (1.61 in) dia.</b></p> <p>NT065</p>
Drift	 <p>Installing differential side bearing outer race <b>a: 69 mm (2.72 in) dia.</b> <b>b: 64 mm (2.52 in) dia.</b></p> <p>NT065</p>
Drift	 <p>Installing striking rod oil seal <b>a: 38 mm (1.50 in) dia.</b> <b>b: 20 mm (0.79 in) dia.</b></p> <p>NT065</p>

# NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

NJMT0003

NVH Troubleshooting Chart

## NVH Troubleshooting Chart


NJMT0003S01

Use the chart below to help you find the cause of the symptom. The numbers indicate the order of the inspection. If necessary, repair or replace these parts.

### MANUAL TRANSAXLE

NJMT0003S0101

	Reference page													
		MT-15 (RS5F30A, RS5F70A), MT-16 (RS5F50A)	MT-15 (RS5F30A, RS5F70A), MT-16 (RS5F50A)	MT-15 (RS5F30A, RS5F70A), MT-16 (RS5F50A)	MT-93	MT-93	MT-93	MT-30	MT-95	MT-95	MT-94	MT-94	MT-94	MT-94
Symptoms	SUSPECTED PARTS (Possible cause)													
Noise	(Oil level is low.)	1	2											
	(Wrong oil)													
	(Oil level is high.)													
	GASKET (Damaged)													
Oil leakage	OIL SEAL (Worn or damaged)													
	O-RING (Worn or damaged)													
	SHIFT CONTROL ROD (Worn)													
	CHECK PLUG RETURN SPRING AND CHECK BALL (Worn or damaged)													
Hard to shift or will not shift	SHIFT FORK (Worn)													
	GEAR (Worn or damaged)													
	BEARING (Worn or damaged)													
	BAULK RING (Worn or damaged)													
Jumps out of gear	INSERT SPRING (Damaged)													
	(Oil level is low.)													
	(Wrong oil)													
	(Oil level is high.)													

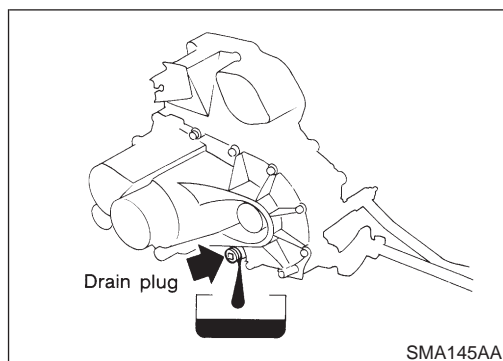

**Changing M/T Oil**

NJMT0086

1. Drain oil from drain plug and refill with new gear oil.
2. Check oil level.

**Oil grade:**

**API GL-4**

**Viscosity:**

**Refer to MA-20, "RECOMMENDED FLUIDS AND LUBRICANTS".**

**Capacity:**

**RS5F30A 2.8 - 3.0 ℓ (4-7/8 - 5-1/4 Imp pt)**

**RS5F70A 3.0 ℓ (5-1/4 Imp pt)**


**Oil level (Reference data):**

**RS5F30A 58 - 66 mm (2.28 - 2.60 in)**

**RS5F70A 75.5 - 80.5 mm (2.969 - 3.166 in)**

**Drain plug:**

**🔧 : 25 - 34 N·m (2.5 - 3.5 kg-m, 18 - 25 ft-lb)**

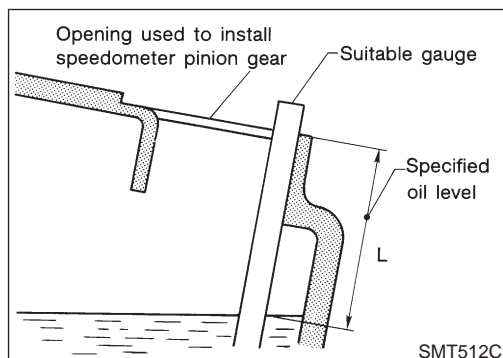

**Checking**

NJMT0087

**OIL LEAK AND OIL LEVEL**


NJMT0087S01


1. Check that oil is not leaking from transaxle or around it.
2. Check oil level.

**Never start engine while checking oil level.**

**Filler plug:**

**🔧 : 10 - 19 N·m (1.0 - 2.0 kg-m, 87 - 173 in-lb)**

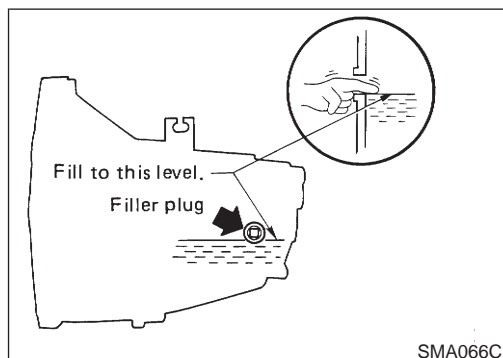

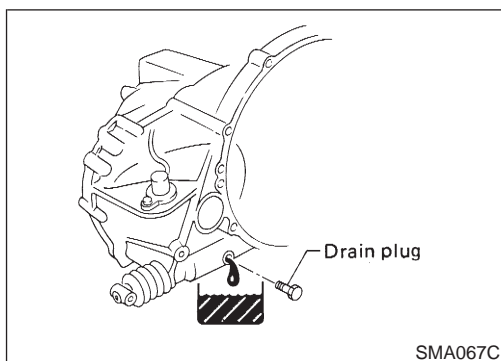

## Changing M/T Oil

NJMT0088

1. Drain oil from drain plug and refill with new gear oil.
2. Check oil level.

### Oil grade:

**API GL-4**


### Viscosity:

**Refer to MA-20, "RECOMMENDED FLUIDS AND LUBRICANTS".**

### Capacity:

**RS5F50A 4.5 - 4.8 ℓ (7-7/8 - 8-1/2 Imp pt)**

### Drain plug:

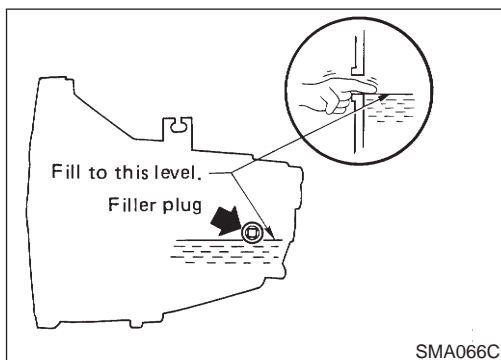**⊗ : 15 - 20 N·m (1.5 - 2.0 kg·m, 11 - 14 ft·lb)**

## Checking

NJMT0089

### OIL LEAK AND OIL LEVEL

NJMT0089S01

Check for oil leakage and oil level.

**Never start engine while checking oil level.**

### Filler plug:

**⊗ : 25 - 34 N·m (2.5 - 3.5 kg·m, 18 - 25 ft·lb)**


**DESCRIPTION**

NJMT0034

Cross-sectional View — RS5F30A

**Cross-sectional View — RS5F30A**

NJMT0034S01

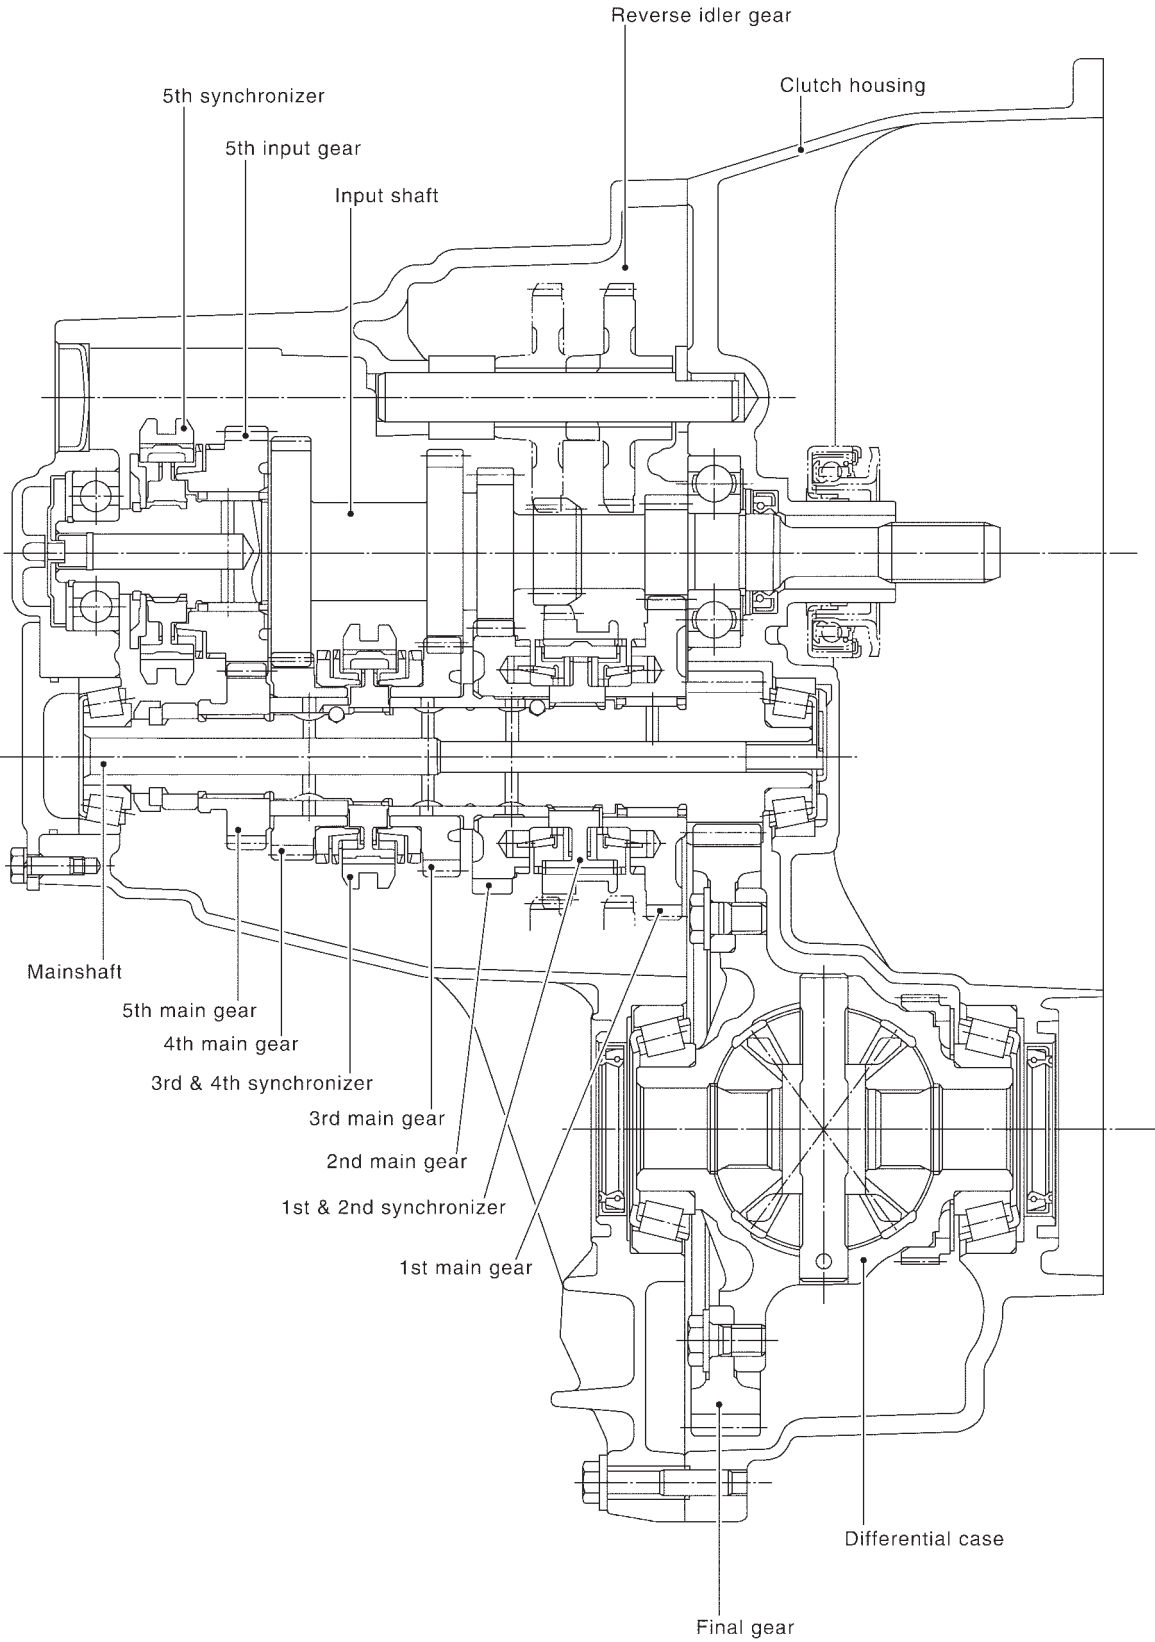

YMT002




# DESCRIPTION

Cross-sectional View — RS5F70A

## Cross-sectional View — RS5F70A

NJMT0034S03

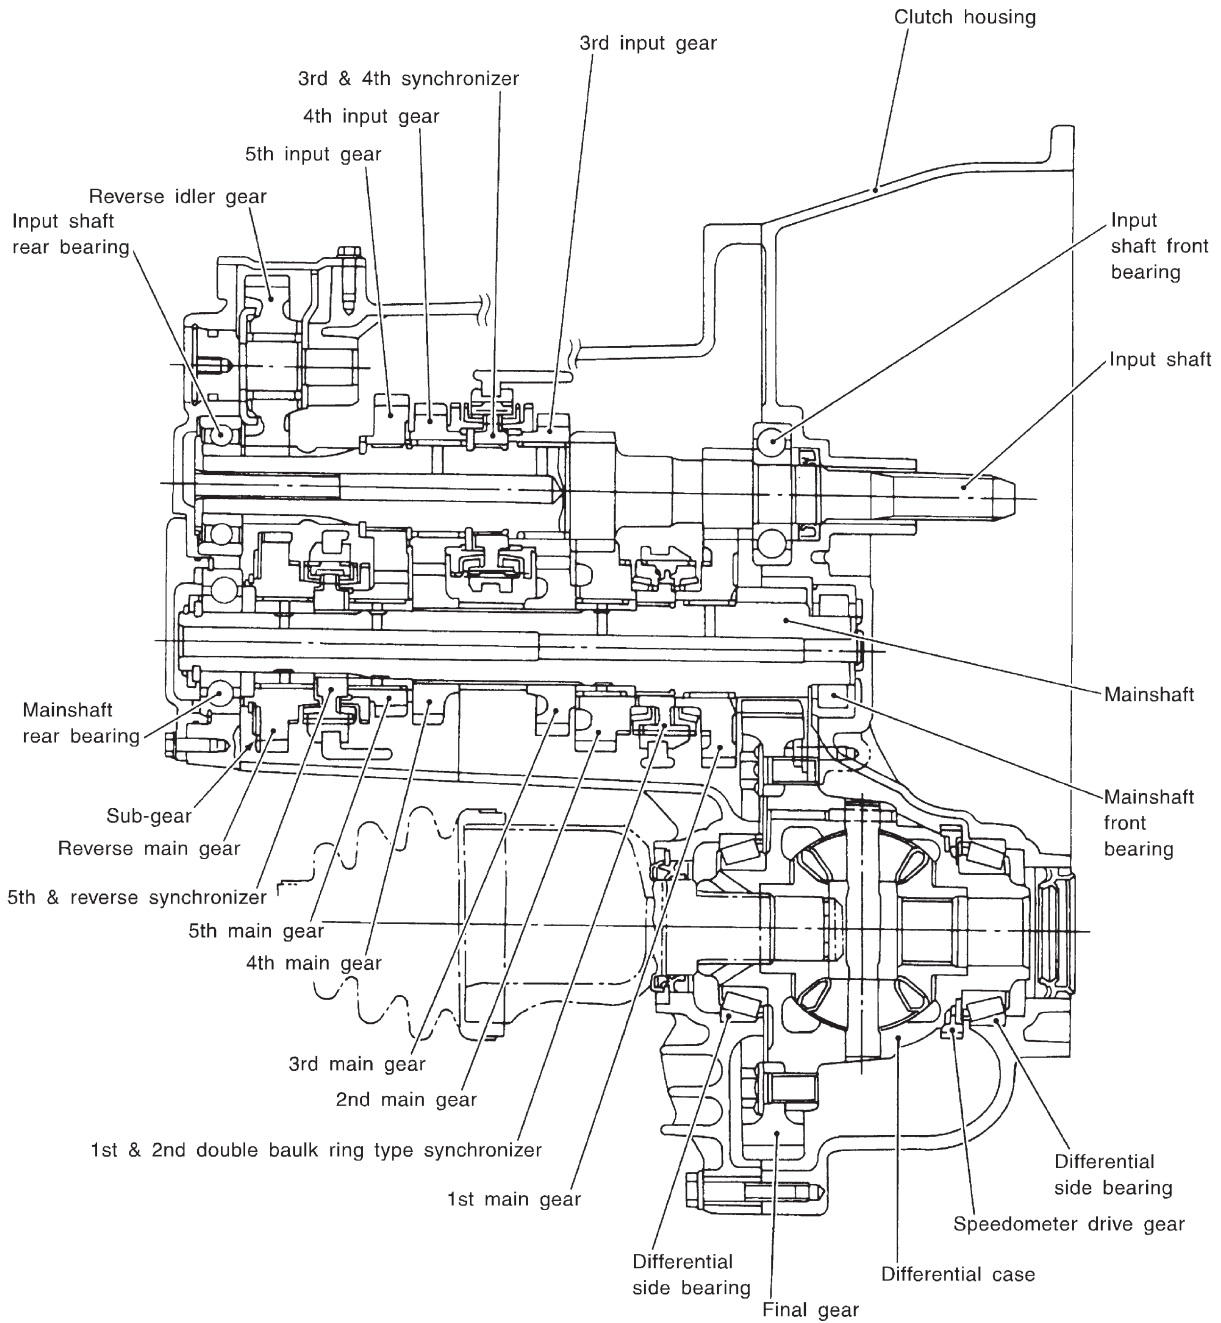


SMT924D

# DESCRIPTION

Cross-sectional View — RS5F50A

## Cross-sectional View — RS5F50A


NJMT0034S04

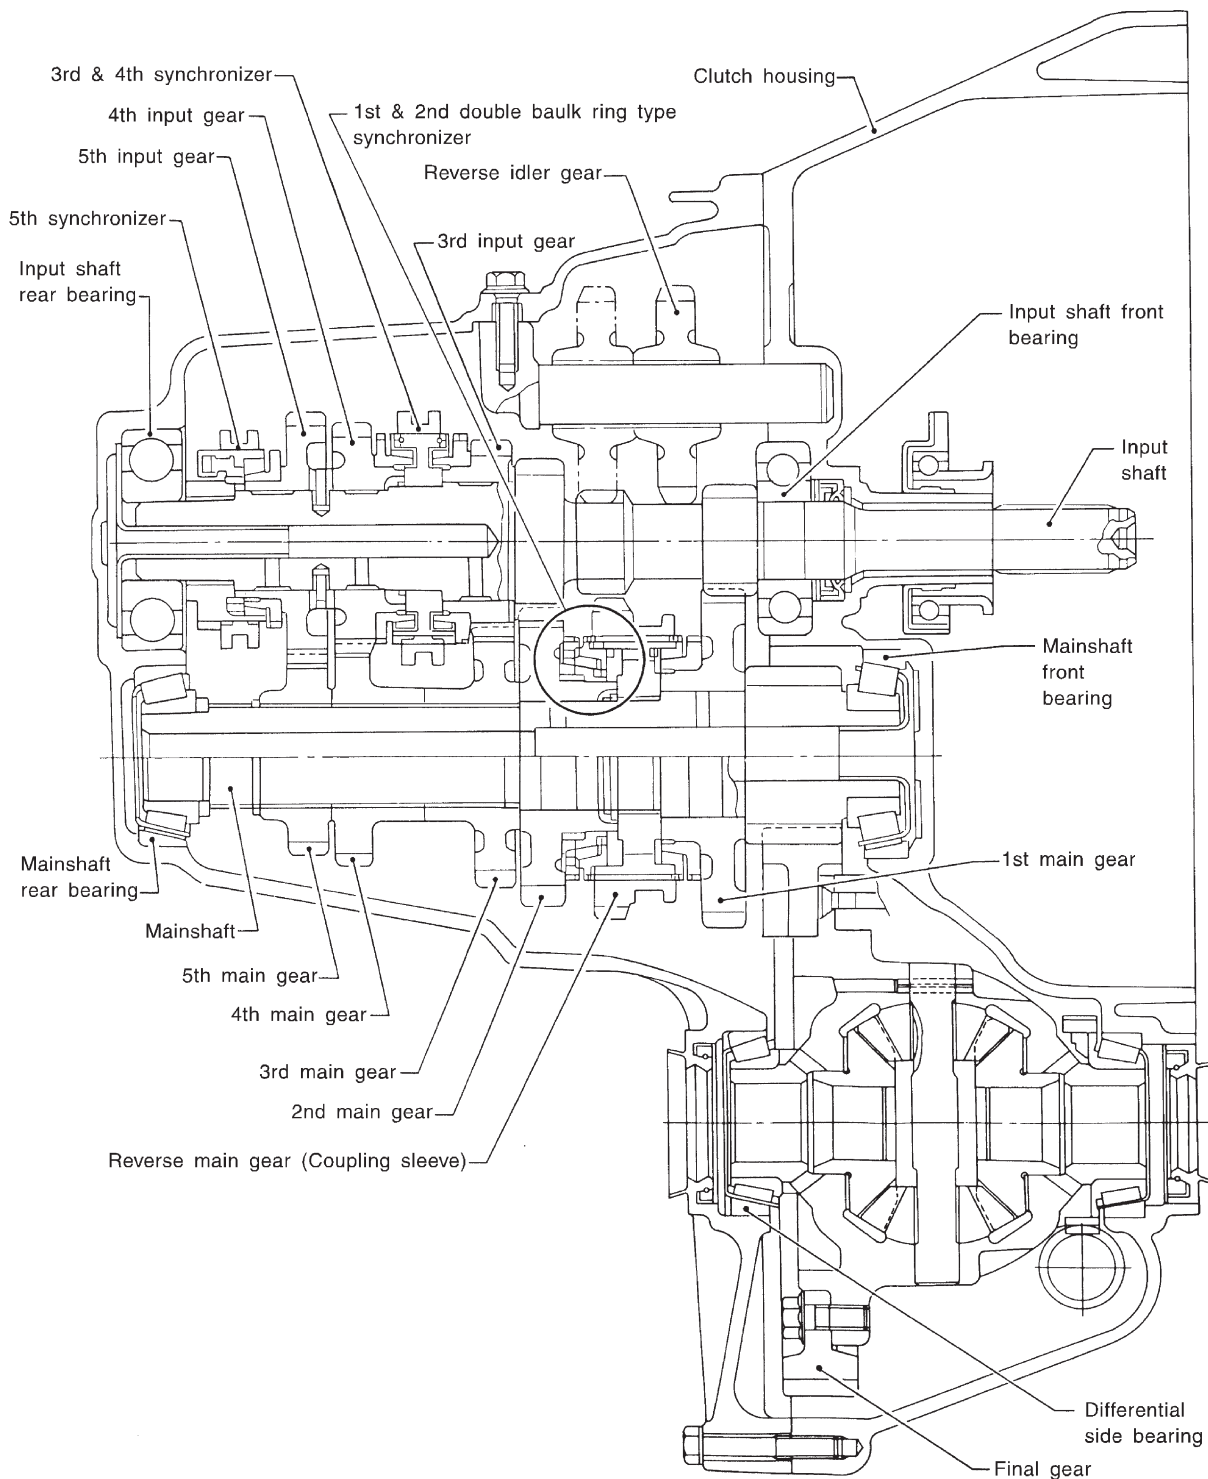

SMT196DA

## DESCRIPTION

*Cross-sectional View — RS5F50A (Cont'd)*

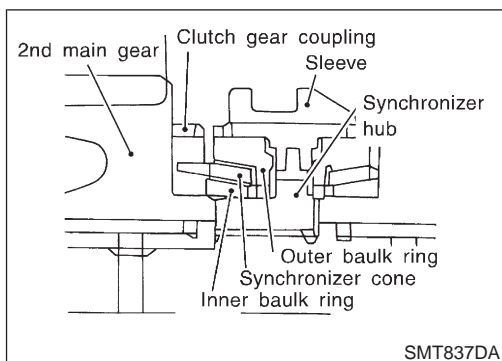

### DOUBLE-CONE SYNCHRONIZER



NJMT0034S0403

#### — RS5F70A and RS5F50A —

Double-cone synchronizer is adopted for 1st and 2nd gears to reduce operating force of the shift lever.

# ON-VEHICLE SERVICE

## Replacing Oil Seal


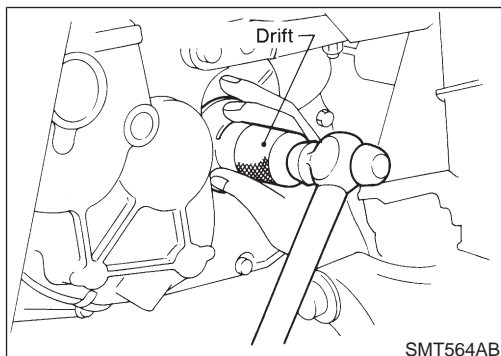
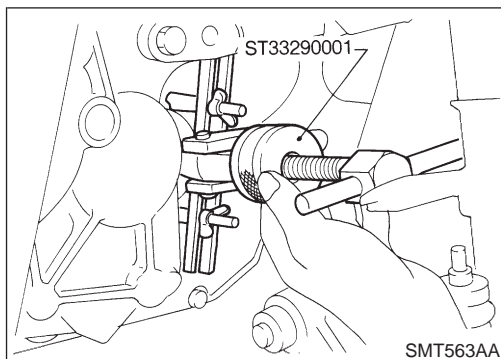


### Replacing Oil Seal DIFFERENTIAL OIL SEAL

NJMT0035

NJMT0035S01


1. Drain gear oil from transaxle.
2. Remove drive shafts. Refer to AX-11, "Removal".
3. Remove differential oil seal.
4. Install differential oil seal.
  - **Apply multi-purpose grease to seal lip of oil seal before installing.**
5. Install drive shafts. Refer to AX-12, "Installation".

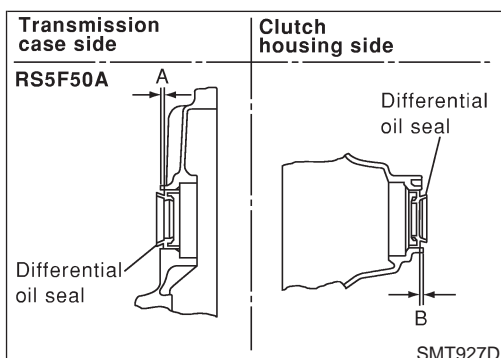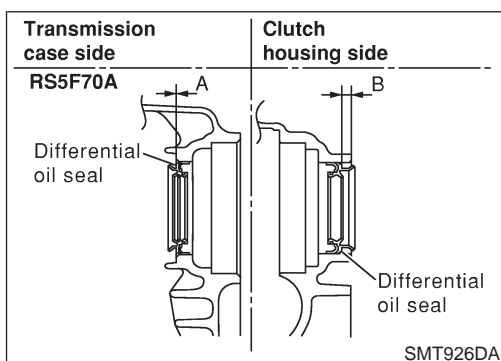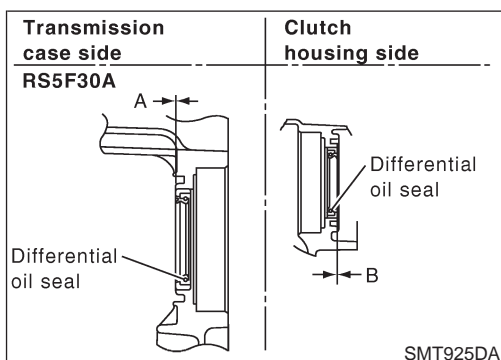

- **Install differential oil seal so that dimension "A" and "B" are within specifications.**

Unit: mm (in)


Item	Model	A	B
Dimension	RS5F30A	-0.5 (-0.020) to 0.5 (0.020)	
	RS5F70A		
	RS5F50A		

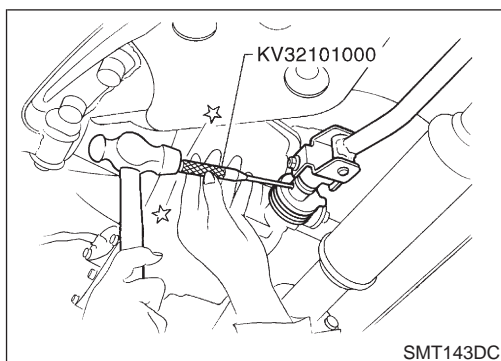


## STRIKING ROD OIL SEAL

NJMT0035S02


1. Remove transaxle control rod from yoke.
2. Remove retaining pin of yoke.
  - Be careful not to damage boot.

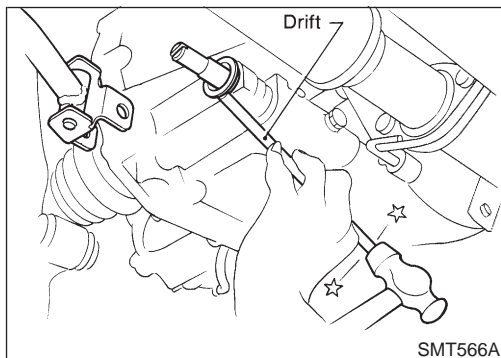


3. Remove striking rod oil seal.

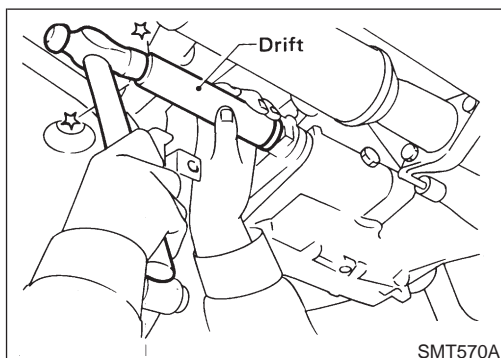

4. Install striking rod oil seal.
  - Apply multi-purpose grease to seal lip of oil seal before installing.

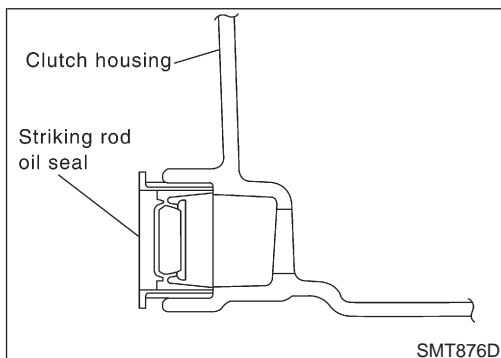

- Drive it in as far as it will go.

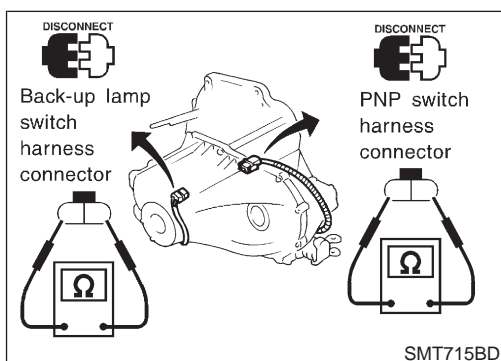

## Position Switch Check

NJMT0036

### BACK-UP LAMP SWITCH

NJMT0036S01

— RS5F30A and RS5F70A —

NJMT0036S0101

- Check continuity.

Gear position	Continuity
Reverse	Yes
Except reverse	No

## ON-VEHICLE SERVICE

Position Switch Check (Cont'd)

### PNP SWITCH


— RS5F70A —

NJMT0036S02

NJMT0036S0201

- Check continuity.

Gear position	Continuity
Neutral	Yes
Except neutral	No

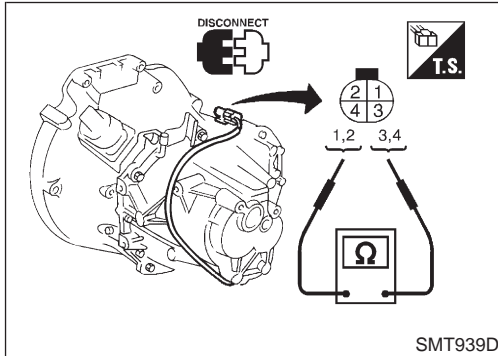

### BACK-UP LAMP SWITCH AND PNP SWITCH



— RS5F50A —

NJMT0036S03

NJMT0036S0301

- Check continuity.

Gear position	Continuity
Reverse	1 - 3
Neutral	2 - 4
Except reverse and neutral	No

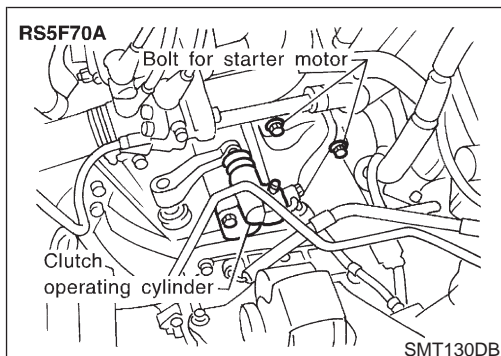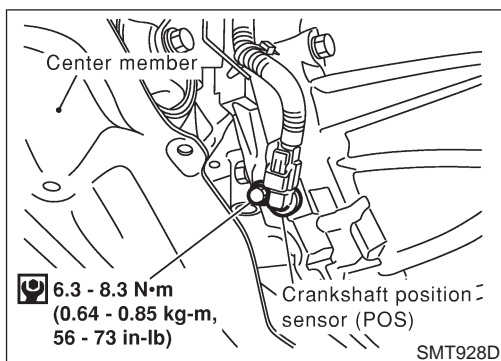



## Removal

NJMT0008S01

### CAUTION:


**Remove the crankshaft position sensor (POS) from transaxle assembly before separating transaxle from engine. Be careful not to damage sensor edge.**

1. Remove battery and its bracket.
  2. Remove air cleaner box with mass air flow sensor.
  3. Remove clutch operating cylinder from transaxle.
  4. Remove clutch hose clamp.
  5. Disconnect speedometer pinion, back-up lamp, PNP switch (F70A) harness connectors and ground harness.
  6. Remove starter motor from transaxle.
  7. Remove crankshaft position sensor (POS) from transaxle front side.
  8. Remove shift control rod and support rod bracket from transaxle.
  9. Drain gear oil from transaxle.
  10. Draw out drive shafts from transaxle. Refer to AX-11, "Removal".
  11. Support engine of transaxle by placing a jack under oil pan.
- CAUTION:**  
**Do not place jack under oil pan drain plug.**
12. Remove bolts securing center member.

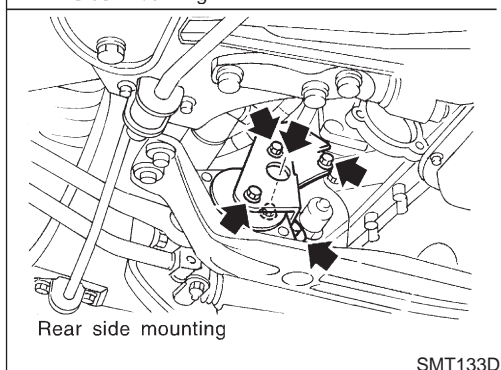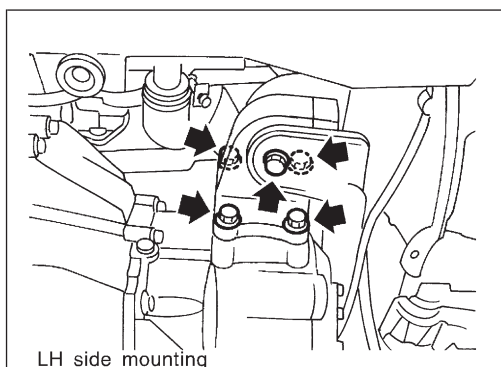

13. Remove LH mount and rear side mounting bolts. Refer to EM-136, "Removal and Installation".
14. Remove bolts securing gusset and transaxle.


## Removal (Cont'd)

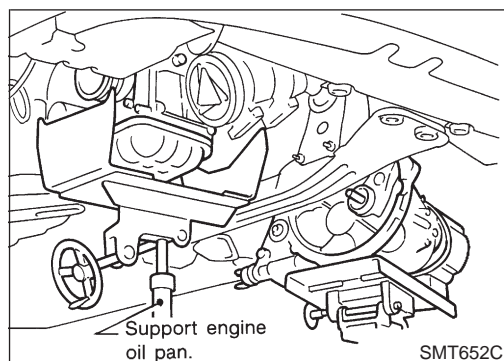

15. Lower transaxle while supporting it with a jack.

## Installation

- Tighten LH mount, rear side mount and center member bolts. Refer to EM-136, "Removal and Installation".
- Tighten clutch operating cylinder bolts. Refer to CL-15, "Installation".
- Tighten starter motor bolts. Refer to SC-19, "Removal and Installation".
- Install drive shafts. Refer to AX-12, "Installation".
- Tighten all transaxle bolts and any part removed.

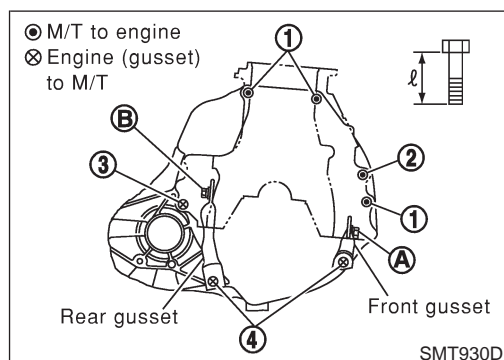

## MODEL QG15DE ENGINE

Bolt No.	Tightening torque	N-m (kg-m, ft-lb)	"ℓ"	
			mm	(in)
1	30 - 40	(3.1 - 4.1, 22 - 30)	70	(2.76)
2	30 - 40	(3.1 - 4.1, 22 - 30)	80	(3.15)
3	30 - 40	(3.1 - 4.1, 22 - 30)	30	(1.18)
4*1	16 - 21	(1.6 - 2.1, 12 - 15)	25	(0.98)
Front gusset A to engine	30 - 40	(3.1 - 4.1, 22 - 30)	20	(0.79)
Rear gusset B to engine	16 - 21	(1.6 - 2.1, 12 - 15)	16	(0.63)


\*1: With gussets



# REMOVAL AND INSTALLATION

**RS5F30A, RS5F70A**

Installation (Cont'd)




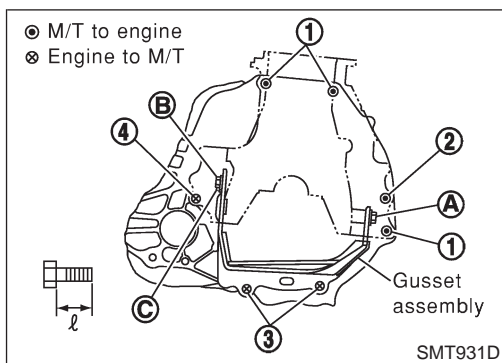


## MODEL QG18DE ENGINE

=NJMT0008S0202

Bolt No.	Tightening torque	N-m (kg-m, ft-lb)	"ℓ"	
			mm	(in)
1	31 - 40	(3.1 - 4.1, 23 - 29)	70	(2.76)
2	31 - 40	(3.1 - 4.1, 23 - 29)	80	(3.15)
3	16 - 21	(1.6 - 2.2, 12 - 15)	25	(0.98)
4	31 - 40	(3.1 - 4.1, 23 - 29)	30	(1.18)
A	31 - 40	(3.1 - 4.1, 23 - 29)	20	(0.79)
B	31 - 40	(3.1 - 4.1, 23 - 29)	20	(0.79)
C	15 - 20	(1.5 - 2.1, 11 - 15)	17.5	(0.69)

## Removal

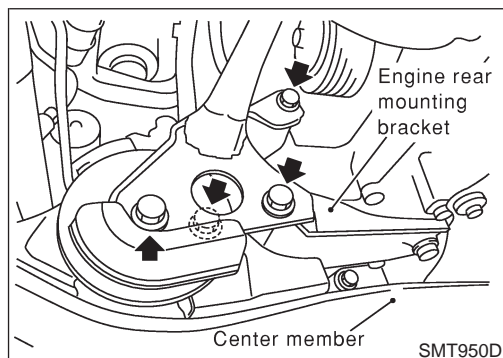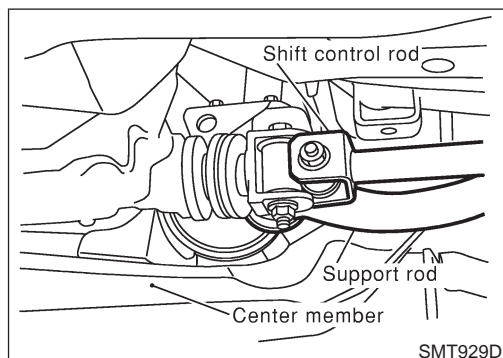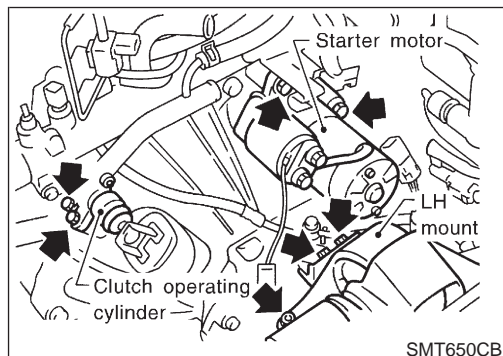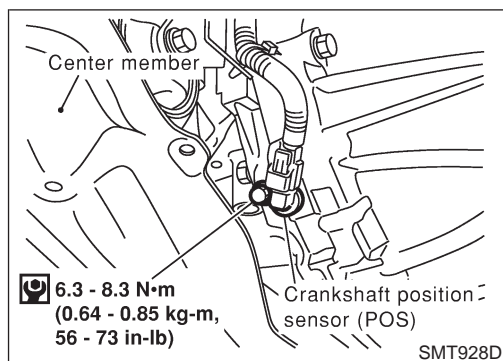

## Removal

NJMT0090S01

### CAUTION:


**Remove the crankshaft position sensor (POS) from transaxle assembly before separating transaxle from engine. Be careful not to damage sensor edge.**

1. Remove battery and its bracket.
2. Remove fuse box from battery bracket.
3. Remove air cleaner box with mass air flow sensor.
4. Remove air breather hose and vacuum pump hose.
5. Remove terminal and connector from starter motor.
6. Remove starter motor from transaxle.
7. Remove clutch hose clamp.
8. Remove clutch operating cylinder from transaxle.
9. Disconnect speedometer pinion, PNP switch harness connectors and ground harness.
10. Remove crankshaft position sensor (POS) from transaxle front side.
11. Remove front exhaust tube.
12. Remove shift control rod and support rod bracket from transaxle.
13. Drain gear oil from transaxle.
14. Draw out drive shafts from transaxle. Refer to AX-11, "Removal".
15. Support engine and transaxle by placing a jack under the transaxle.
16. Remove bolts securing center member.
17. Take out engine mounting bracket and transaxle installation bolts. Refer to EM-136, "Removal and Installation".
18. Remove bolts securing transaxle under side.
19. Temporarily tighten center member.
20. Lower the lift.


## REMOVAL AND INSTALLATION

**RS5F50A**


Removal (Cont'd)

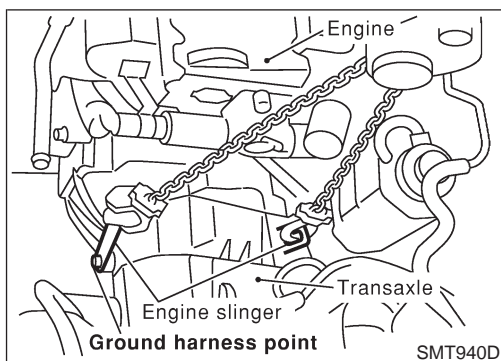



21. Pick up EGI harness clamp and install engine slinger. Next, set chain block.
22. Jack up the air compressor engine bracket.
23. Remove engine front mounting.
24. Remove LH side mounting. Refer to EM-136, "Removal and Installation".

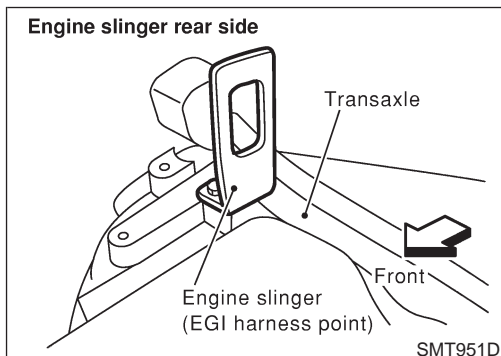


25. Jack up until engine oil filter bracket bolts are just about to touch the side frame.

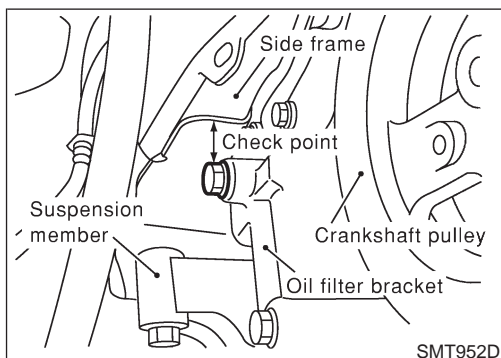

26. Remove bolts securing transaxle.
27. While the transaxle is suspended, withdraw the transaxle case from the engine without hitting suspension member.
  - **Open the front of the transaxle when the clutch cover appears. Then, lower the transaxle pulling it toward the right front.**
  - **The spacer between the engine and transaxle should be left at the engine side.**
28. Remove spacer.

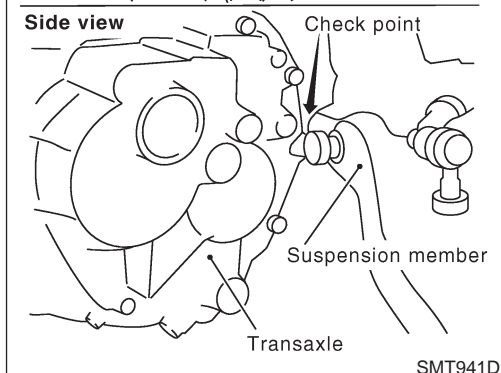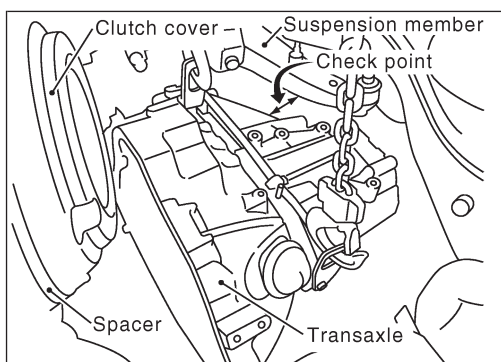


Installation

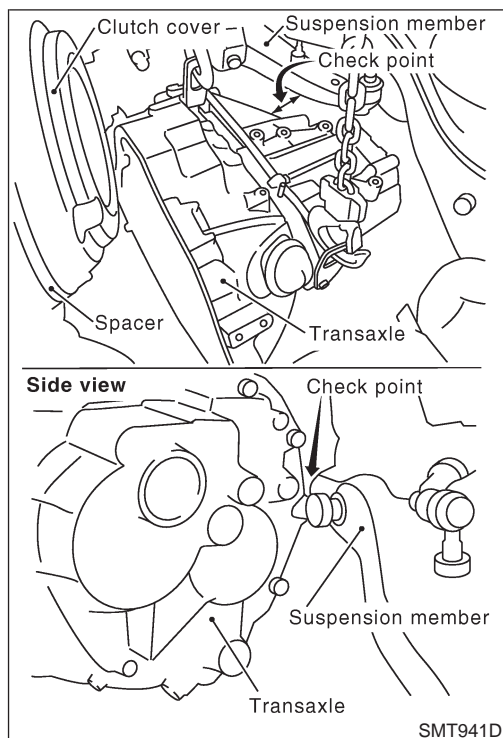

## Installation

NJMT0090S02

1. Put transaxle under the engine compartment.
2. Set chain block on transaxle and hang.
3. Lift up transaxle case so as not to hit against the side frame and suspension member.
4. Assemble transaxle to engine.
  - Tighten LH mount, rear side mount and center member bolts. Refer to EM-136, "Removal and Installation".
  - Tighten clutch operating cylinder bolts. Refer to CL-15, "Installation".
  - Tighten starter motor bolts. Refer to SC-19, "Removal and Installation".
  - Install drive shafts. Refer to AX-12, "Installation".
  - Tighten all transaxle bolts and any part removed.

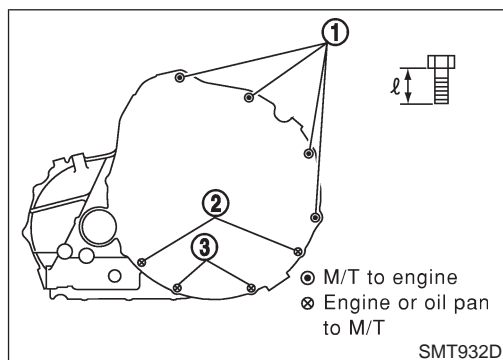

## MODEL YD ENGINE


NJMT0090S0201

Bolt No.	Tightening torque	N-m (kg-m, ft-lb)	"ℓ" mm (in)
1	40 - 49	(4.0 - 5.0, 29 - 36)	70 (2.76)
2	30.4 - 36.3	(3.1 - 3.7, 23 - 26)	60 (2.36)
3	30.4 - 36.3	(3.1 - 3.7, 23 - 26)	55 (2.17)

# TRANSAXLE GEAR CONTROL

## Components


SEC. 341

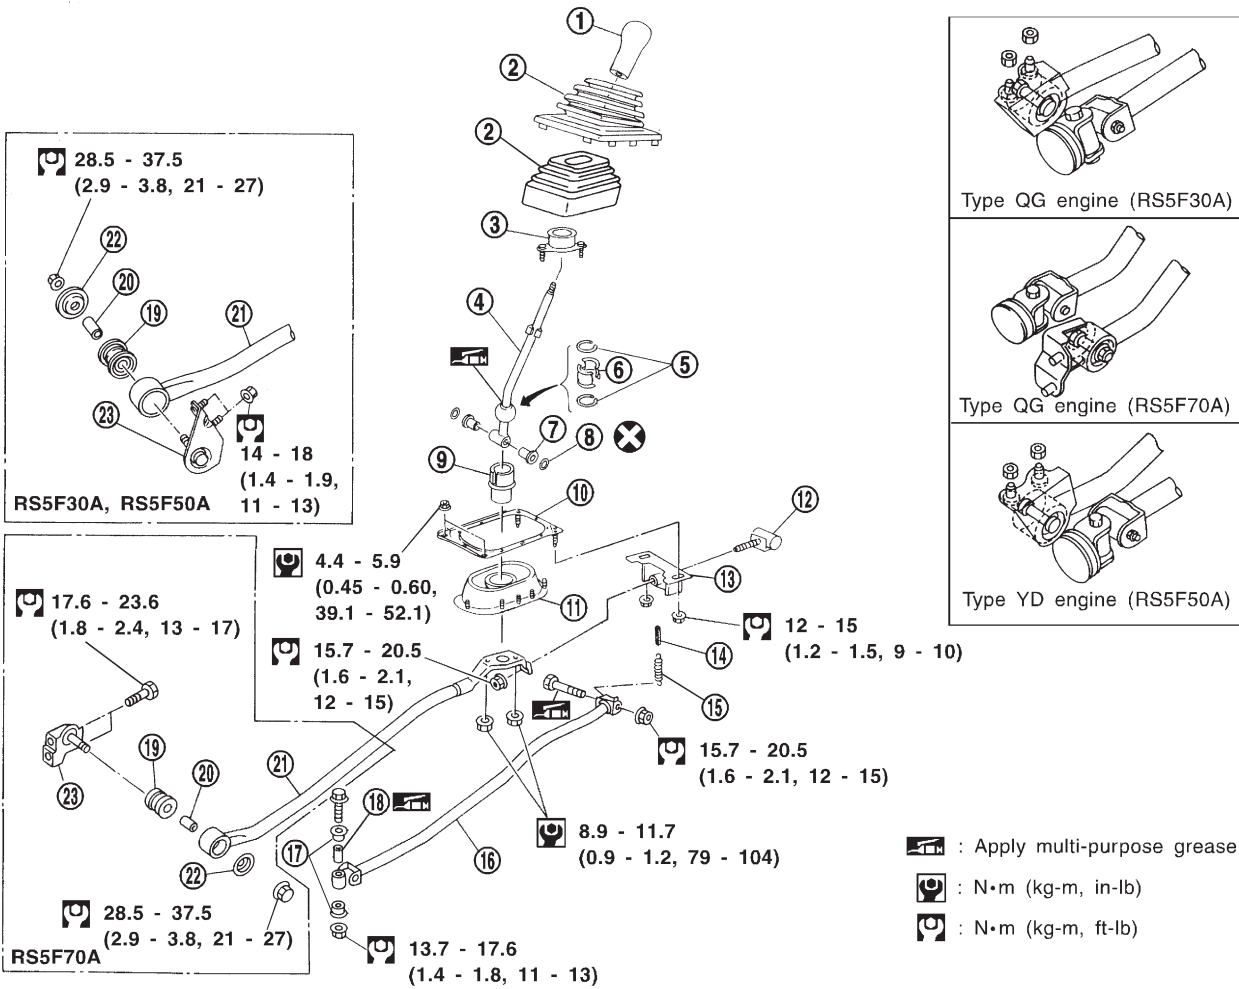

SMT933DA

- |                         |                          |                         |
|-------------------------|--------------------------|-------------------------|
| 1. Control lever knob   | 9. Hand lever socket     | 17. Bush                |
| 2. Boot                 | 10. Plate bolt           | 18. Collar              |
| 3. Control lever socket | 11. Transaxle hole cover | 19. Bush                |
| 4. Control lever        | 12. Mass damper          | 20. Collar              |
| 5. Bearing seat spring  | 13. Holder bracket       | 21. Support rod         |
| 6. Seat                 | 14. Return spring rubber | 22. Plate               |
| 7. Bush                 | 15. Return spring        | 23. Support rod bracket |
| 8. O-ring               | 16. Control rod          |                         |

## Case Components

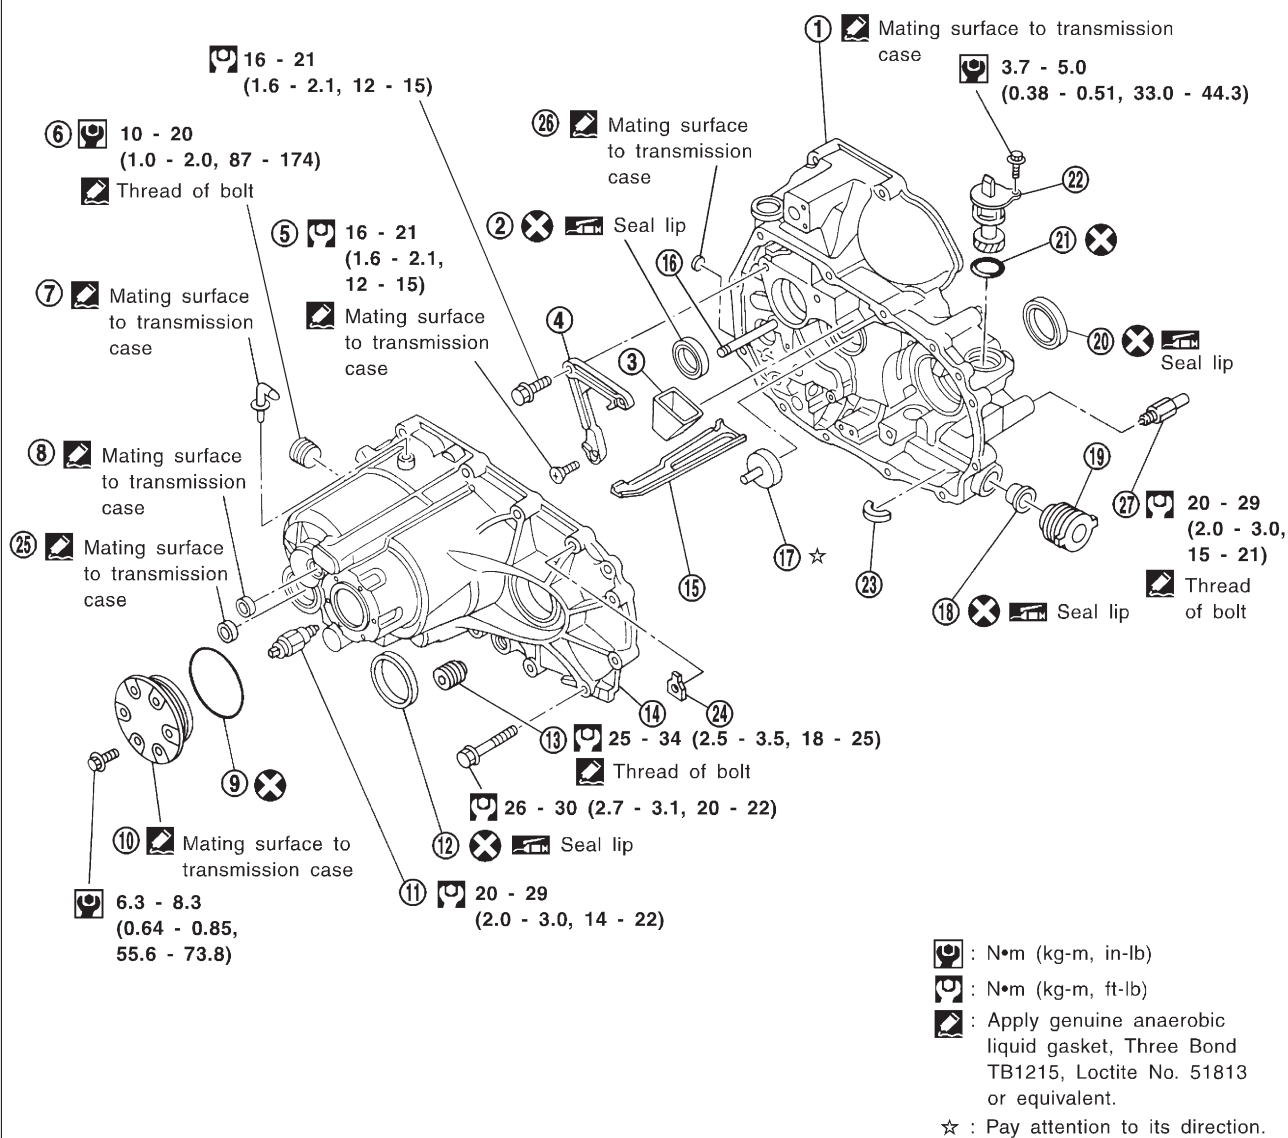
**SEC. 320**


SMT956DA

- |                         |                           |                                 |
|-------------------------|---------------------------|---------------------------------|
| 1. Clutch housing       | 10. Case cover            | 19. Boot                        |
| 2. Input shaft oil seal | 11. Back-up lamp switch   | 20. Differential oil seal       |
| 3. Oil pocket           | 12. Differential oil seal | 21. O-ring                      |
| 4. Bearing retainer     | 13. Drain plug            | 22. Speedometer pinion assembly |
| 5. Torx screw           | 14. Transmission case     | 23. Magnet                      |
| 6. Filler plug          | 15. Oil gutter            | 24. Earth term                  |
| 7. Air breather tube    | 16. Reverse idler shaft   | 25. Welch plug                  |
| 8. Welch plug           | 17. Oil channel           | 26. Welch plug                  |
| 9. O-ring               | 18. Striking rod oil seal | 27. PNP switch                  |

## Gear Components

=NJMT0039S02

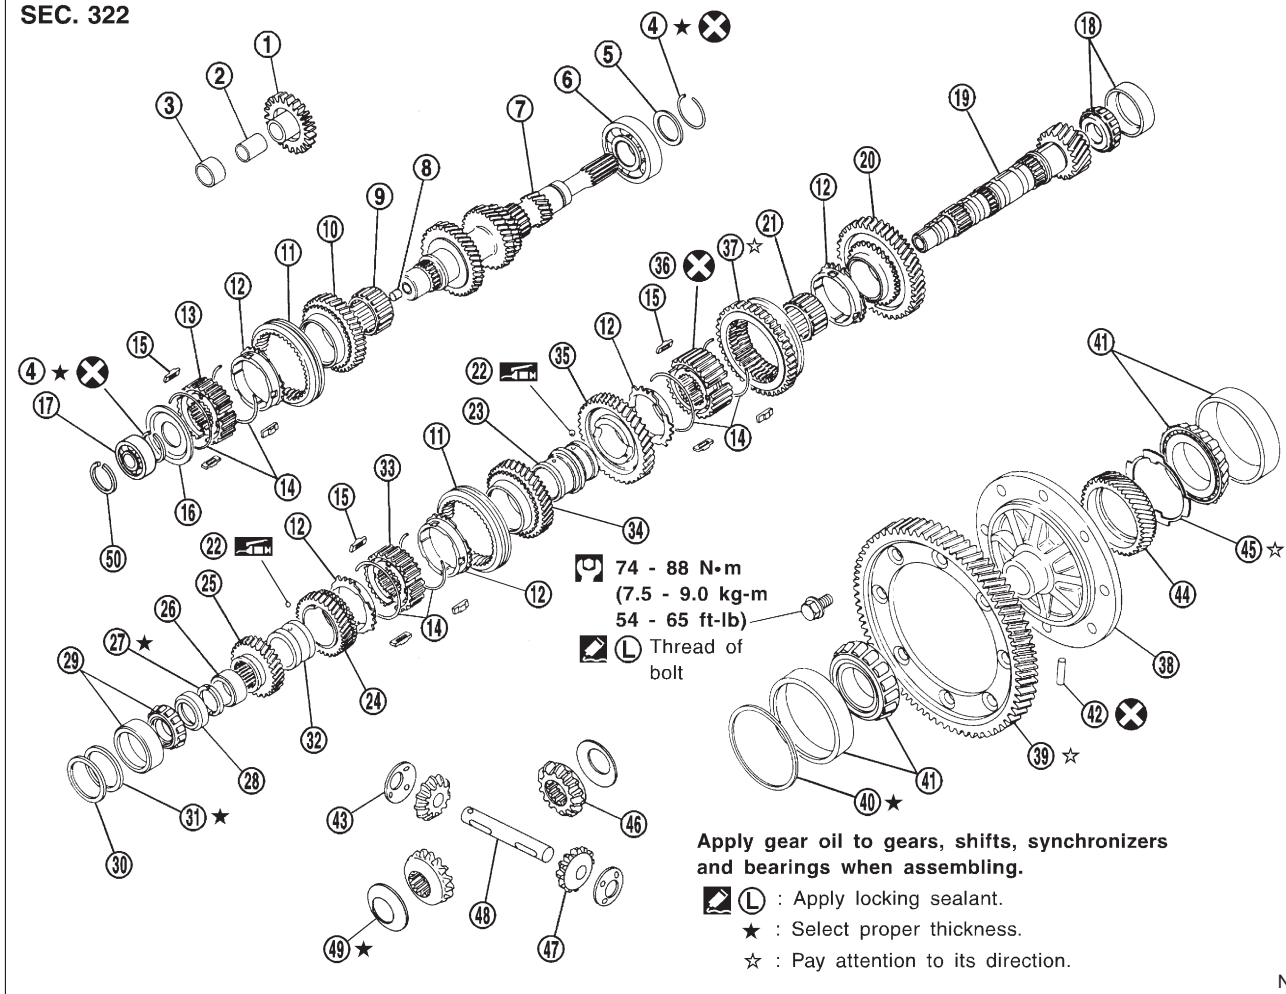**SEC. 322**


NMT135


- |                              |   |  |
|------------------------------|---|--|
| 1. Reverse idler gear        | 20. 1st main gear                         | 38. Differential case                        |
| 2. Reverse idler bushing     | 21. 1st gear needle bearing               | 39. Final gear                               |
| 3. Reverse idler spacer      | 22. Steel ball                            | 40. Differential side bearing adjusting shim |
| 4. Snap ring                 | 23. 2nd & 3rd bushing                     | 41. Differential side bearing                |
| 5. Spacer                    | 24. 4th main gear                         | 42. Retaining pin                            |
| 6. Input shaft front bearing | 25. 5th main gear                         | 43. Pinion mate thrust washer                |
| 7. Input shaft               | 26. Thrust washer                         | 44. Speedometer drive gear                   |
| 8. Oil plug                  | 27. Mainshaft C-ring                      | 45. Speedometer stopper                      |
| 9. 5th gear needle bearing   | 28. C-ring holder                         | 46. Side gear                                |
| 10. 5th input gear           | 29. Mainshaft rear bearing                | 47. Pinion mate gear                         |
| 11. Coupling sleeve          | 30. Spacer                                | 48. Pinion mate shaft                        |
| 12. Baulk ring               | 31. Mainshaft rear bearing adjusting shim | 49. Side gear thrust washer                  |
| 13. 5th synchronizer hub     | 32. 4th bushing                           | 50. Snap ring                                |
| 14. Spread spring            | 33. 3rd & 4th synchronizer hub            | 51. 1st inner baulk ring                     |
| 15. Shifting insert          | 34. 3rd main gear                         | 52. 1st synchronizer cone                    |
| 16. 5th stopper              | 35. 2nd main gear                         | 53. 1st outer baulk ring                     |
| 17. Input shaft rear bearing | 36. 1st & 2nd synchronizer hub            |  |
| 18. Mainshaft front bearing  | 37. Reverse main gear (Coupling sleeve)   |  |
| 19. Mainshaft                |   |  |



## Shift Control Components

=NJMT0039S03

SEC. 328

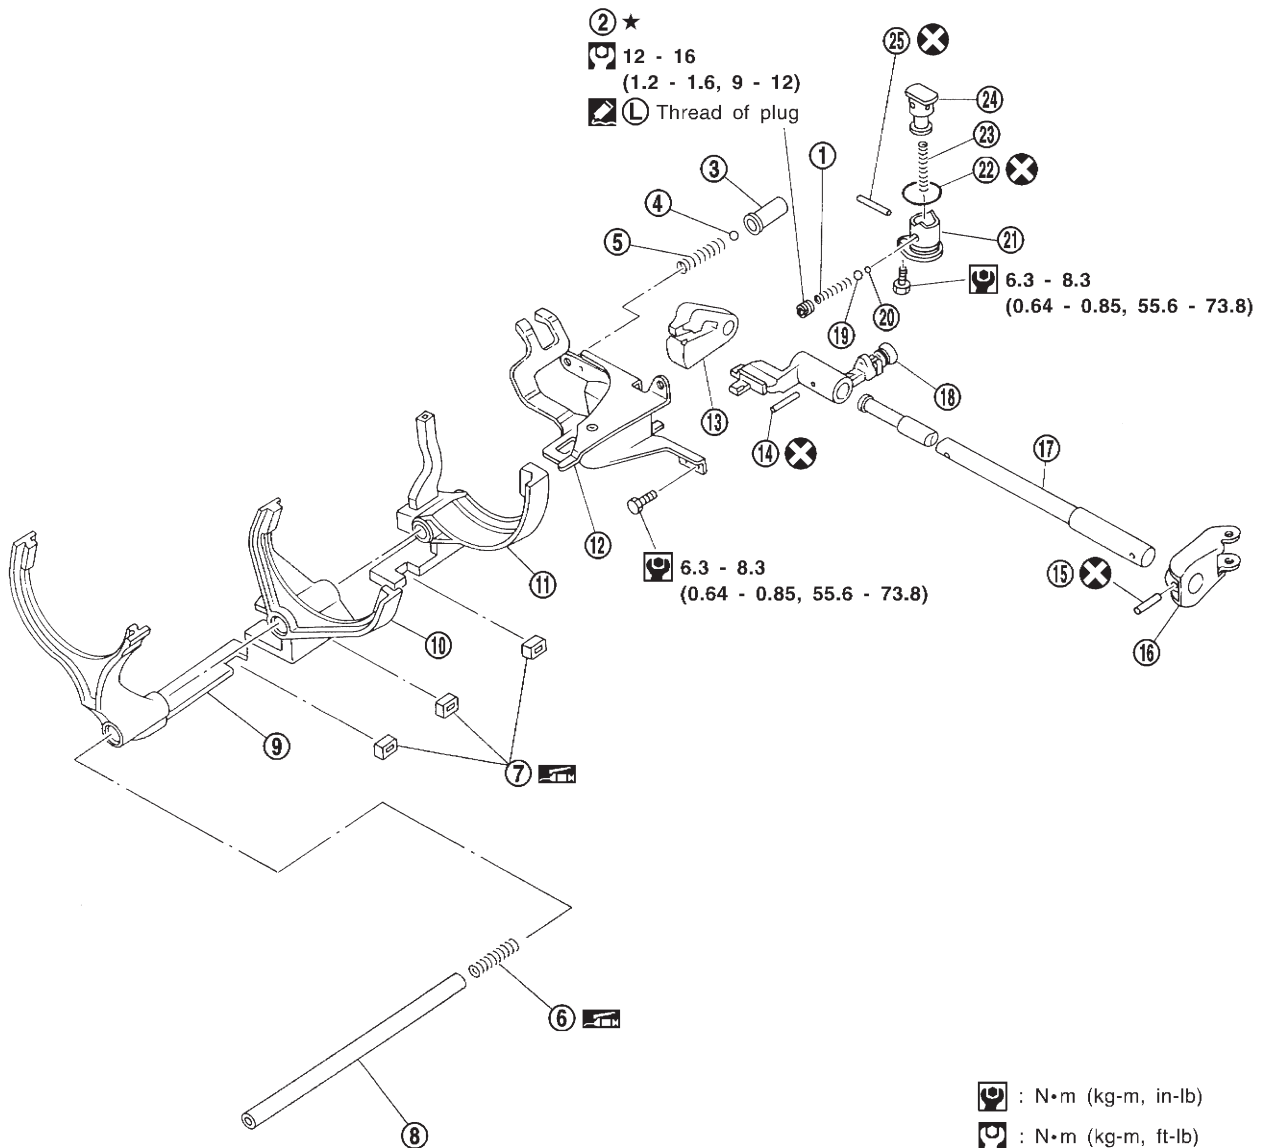


- 6.3 - 8.3 : N·m (kg-m, in-lb)
- 12 - 16 : N·m (kg-m, ft-lb)
- L : Apply locking sealant.
- ★ : Select proper length.


SMT592D

- |  |   |  |
|--|---|--|
| <ul style="list-style-type: none"> <li>1. Reverse check spring</li> <li>2. Reverse check plug</li> <li>3. Check ball plug</li> <li>4. Shift check ball</li> <li>5. Shift check spring</li> <li>6. Fork shaft support spring</li> <li>7. Shifter cap</li> <li>8. Fork shaft</li> <li>9. 5th shift fork</li> </ul> | <ul style="list-style-type: none"> <li>10. 3rd &amp; 4th shift fork</li> <li>11. 1st &amp; 2nd shift fork</li> <li>12. Control bracket</li> <li>13. Striking interlock</li> <li>14. Retaining pin</li> <li>15. Retaining pin</li> <li>16. Yoke</li> <li>17. Striking rod</li> </ul> | <ul style="list-style-type: none"> <li>18. Striking lever</li> <li>19. Check ball (Large)</li> <li>20. Check ball (Small)</li> <li>21. Check sleeve</li> <li>22. O-ring</li> <li>23. Select return spring</li> <li>24. Check plunger</li> <li>25. Stopper pin</li> </ul> |
|--|---|--|



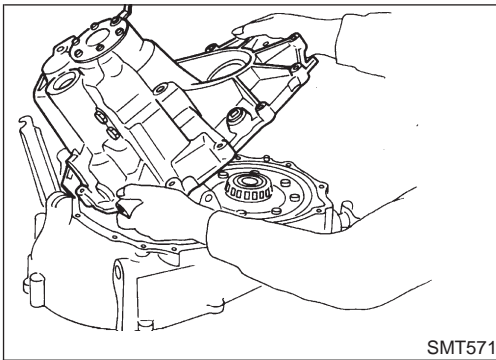


1. Remove transmission case while slightly tilting it to prevent 5th shift fork from interfering with case.

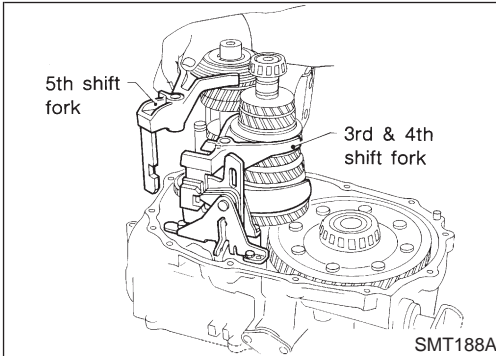


2. Draw out reverse idler spacer and fork shaft, then remove 5th and 3rd & 4th shift forks.

- **Be careful not to lose shifter cap.**

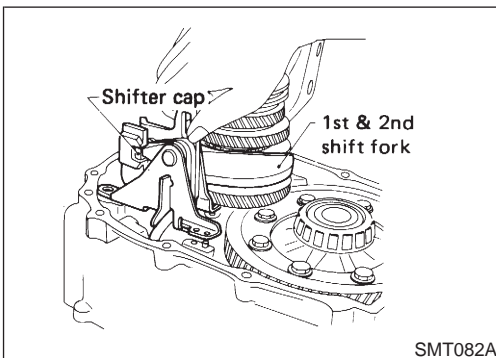

3. Remove control bracket with 1st & 2nd shift fork.


- **Be careful not to lose shifter cap.**

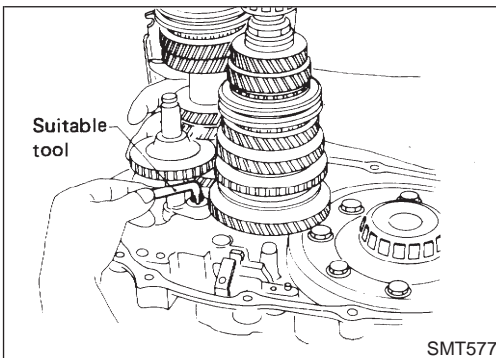

4. Remove gear components from clutch housing.


- a. Remove three screws and detach bearing retainer.

- **One of these three screws is torx type and should be removed with a suitable tool, as shown.**

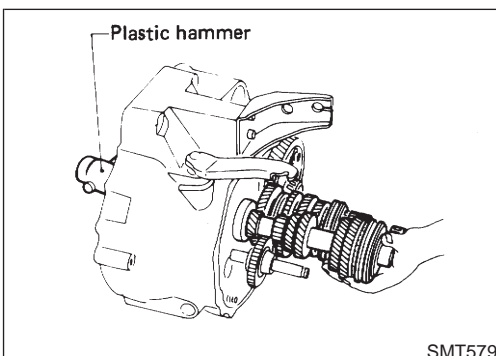


- b. Remove input shaft together with mainshaft by tapping lightly.


- **Always withdraw mainshaft straight out. Failure to do so can damage resin oil channel on clutch housing side.**
- **Do not draw out reverse idler shaft from clutch housing because these fittings will be loose.**
- **When removing input shaft, be careful not to scratch oil seal lip with shaft spline.**

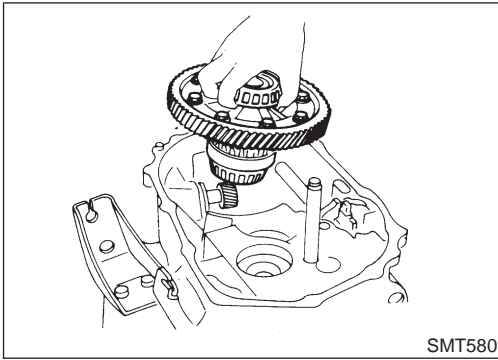

c. Remove reverse idler gear and final drive assembly.

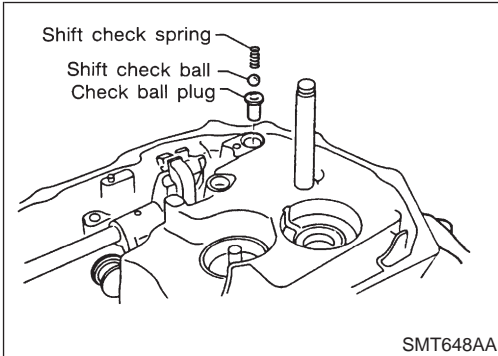


5. Remove oil pocket, shift check ball, shift check spring and check ball plug.

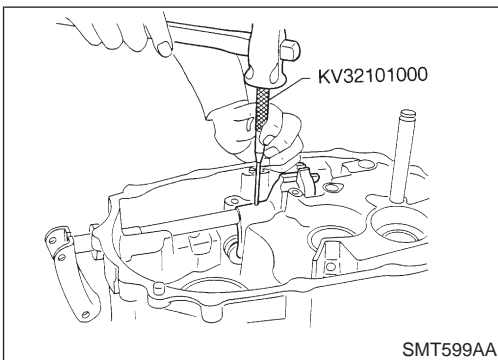


6. Drive retaining pin out of striking lever, then remove striking rod, striking lever and striking interlock.


- **Select a position where retaining pin does not interfere with clutch housing when removing retaining pin.**

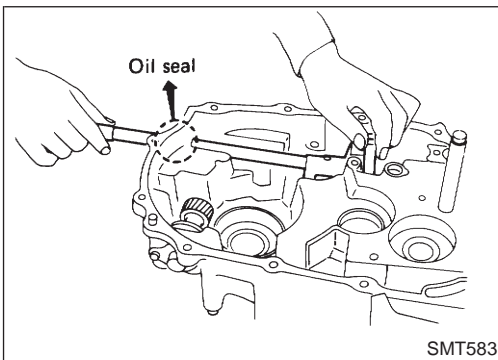


- **Be careful not to damage oil seal lip, when removing striking rod. If necessary, tape edges of striking rod.**

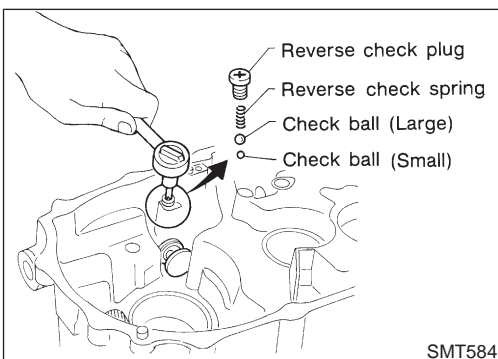

7. Remove reverse check plug, then detach reverse check spring and check balls.

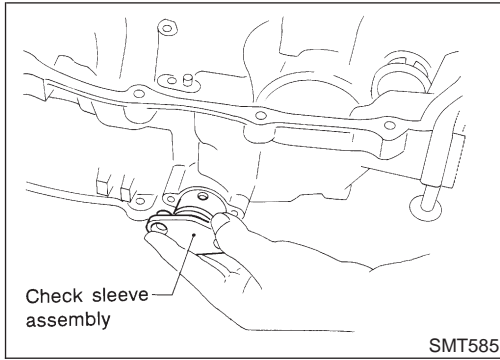

8. Remove check sleeve assembly.

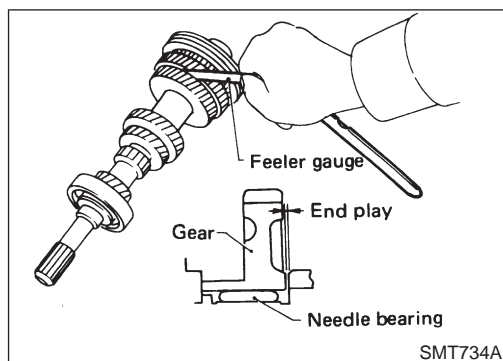

## Input Shaft and Gears DISASSEMBLY


NJMT0042

1. Before disassembly, check 5th input gear end play.


**Gear end play:**

**Refer to SDS, MT-120.**


- If not within specification, disassemble and check contact surface of gear, shaft and hub. Then check clearance of snap ring groove. Refer to "ASSEMBLY", MT-38.

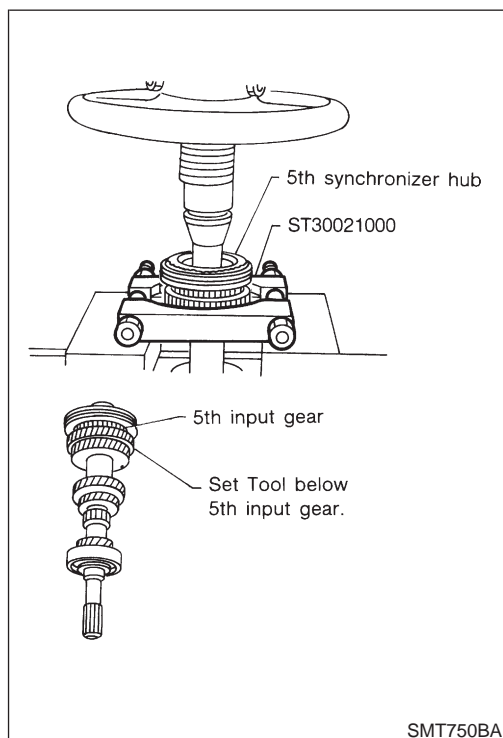


2. Remove snap ring and rear bearing.
3. Remove snap ring and 5th stopper.
4. Remove 5th synchronizer, 5th input gear and 5th gear needle bearing.

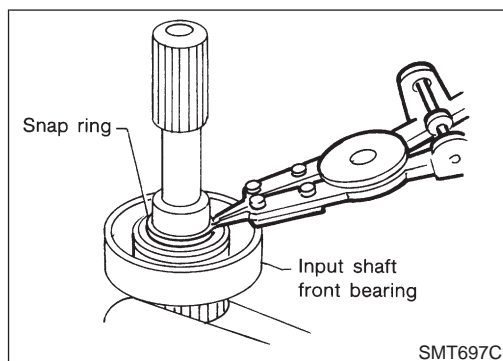

5. Remove snap ring of input shaft front bearing and input gear spacer.

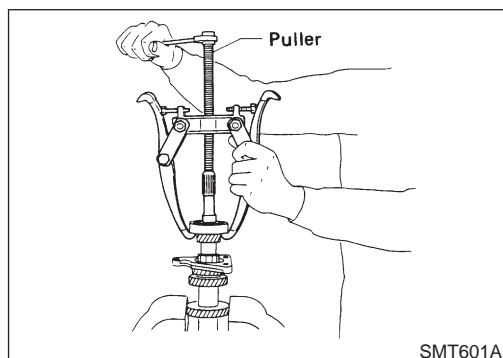

6. Pull out input shaft front bearing.
7. Remove bearing retainer.

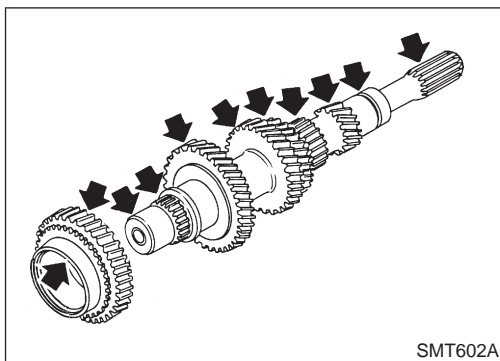


## INSPECTION

### Input Shaft and Gears

NJMT0043

NJMT0043S01


- Check shaft for cracks, wear or bending.
- Check gears for excessive wear, chips or cracks.

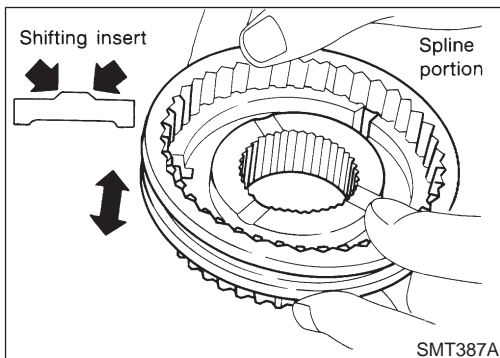

### Synchronizer

NJMT0043S02

- Check spline portion of coupling sleeves, hubs and gears for wear or cracks.
- Check baulk rings for cracks or deformation.
- Check shifting inserts for wear or deformation.

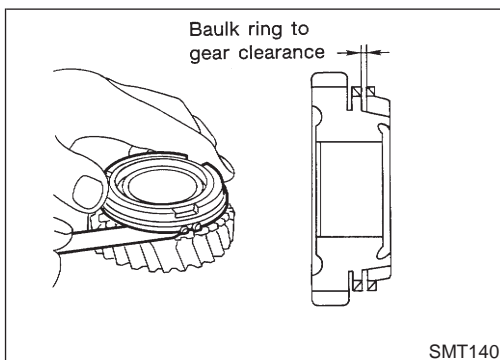

- Measure clearance between baulk ring and 5th input gear.


#### Clearance between baulk ring and 5th input gear:

##### Standard

1.0 - 1.35 mm (0.0394 - 0.0531 in)

##### Wear limit


0.7 mm (0.028 in)

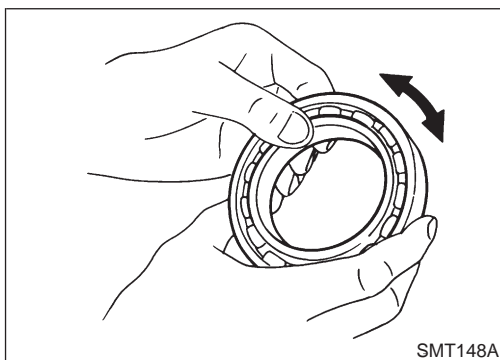

### Bearing

NJMT0043S03

- Make sure bearings roll freely and are free from noise, cracks, pitting or wear.

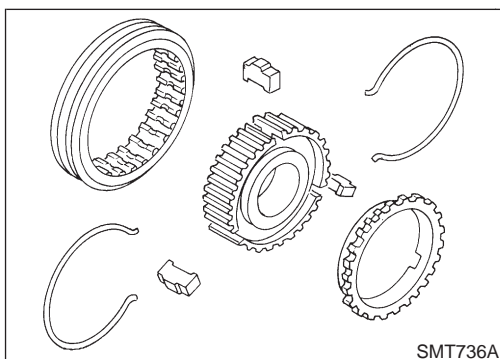


## ASSEMBLY


NJMT0044

1. Assemble 5th synchronizer.


## Input Shaft and Gears (Cont'd)

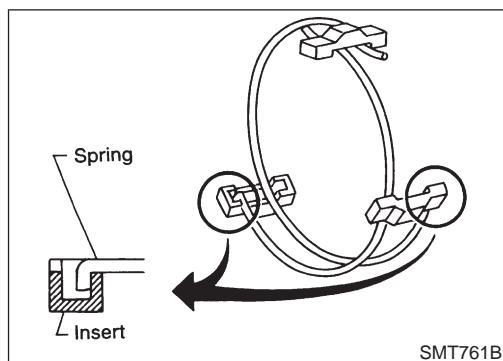

- Be careful not to hook front and rear ends of spread spring to the same insert.

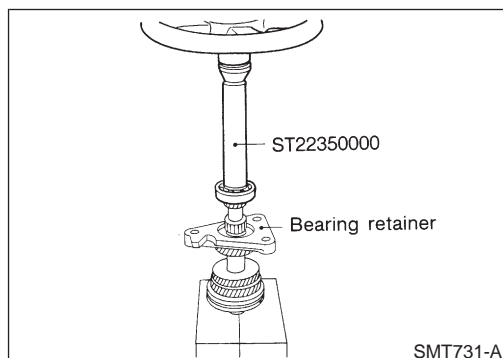

2. Install bearing retainer.
3. Press on input shaft front bearing.
4. Install spacer.

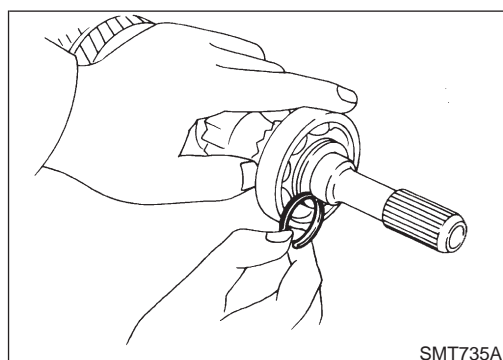


5. Select and install snap ring that gives the proper clearance of input shaft groove.

**Allowable clearance of groove:**


**0 - 0.1 mm (0 - 0.004 in)**

**Snap ring of input shaft front bearing:**

**Refer to SDS, MT-120.**

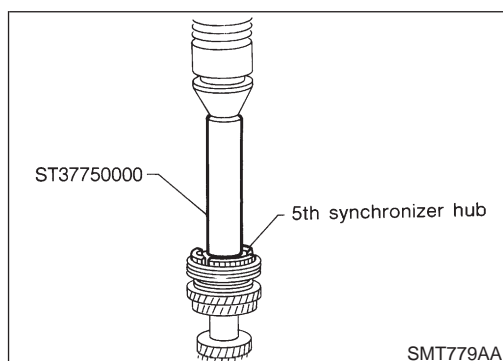

6. Install 5th gear needle bearing, 5th input gear, 5th synchronizer and 5th stopper.
7. Measure gear end play as the final check. Refer to "DISASSEMBLY", MT-36.

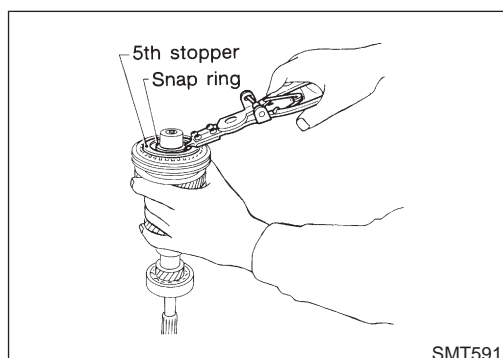


8. Select and install snap ring that gives the proper clearance of input shaft groove.

**Allowable clearance of groove:**

**0 - 0.1 mm (0 - 0.004 in)**

**Snap ring of input shaft 5th synchronizer hub:**

**Refer to SDS, MT-121.**

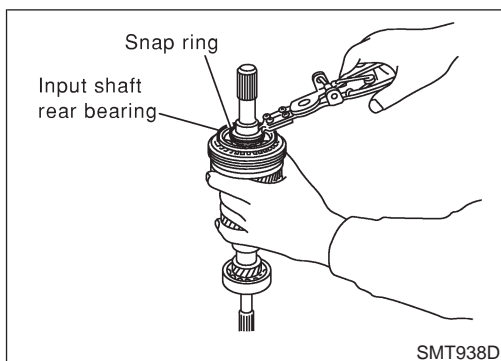


9. Install input shaft rear bearing.
10. Select and install snap ring that gives the proper clearance of input shaft groove.

**Allowable clearance of groove:**

**0 - 0.1 mm (0 - 0.004 in)**

**Snap ring of input shaft rear bearing:**

**Refer to SDS, MT-121.**

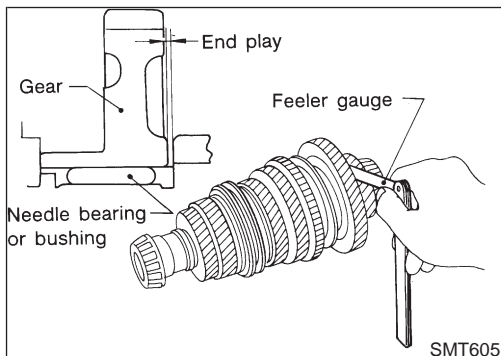

## Mainshaft and Gears DISASSEMBLY


NJMT0045

1. Before disassembly, check 1st, 2nd, 3rd and 4th main gear end plays.


**Gear end play:**

**Refer to SDS, MT-120.**


- If not within specification, disassemble and check contact surface of gear, shaft and hub. Then check clearance of C-ring groove. Refer to "ASSEMBLY", MT-43.

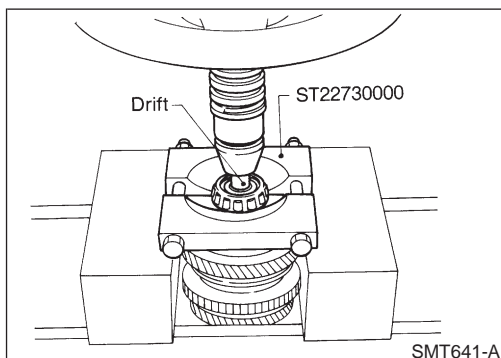


2. Press out mainshaft front bearing.

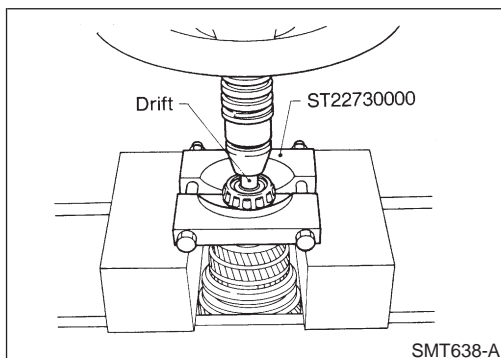


3. Press out mainshaft rear bearing.

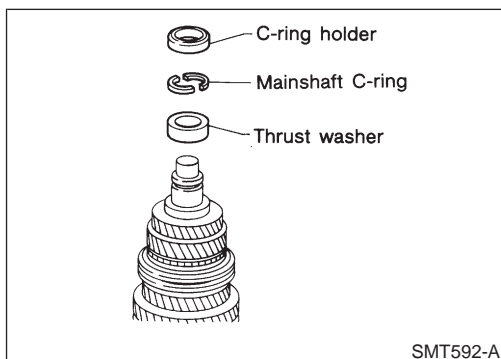

4. Remove C-ring holder, mainshaft C-rings and thrust washer.

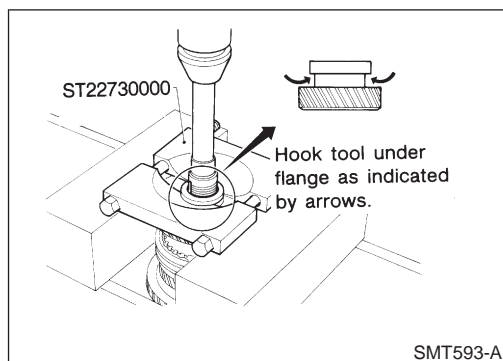


5. Press out 5th main gear.

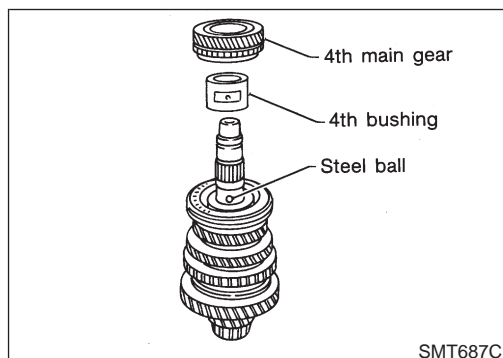


6. Remove 4th main gear, 4th bushing and steel ball.

- **Be careful not to lose steel ball.**

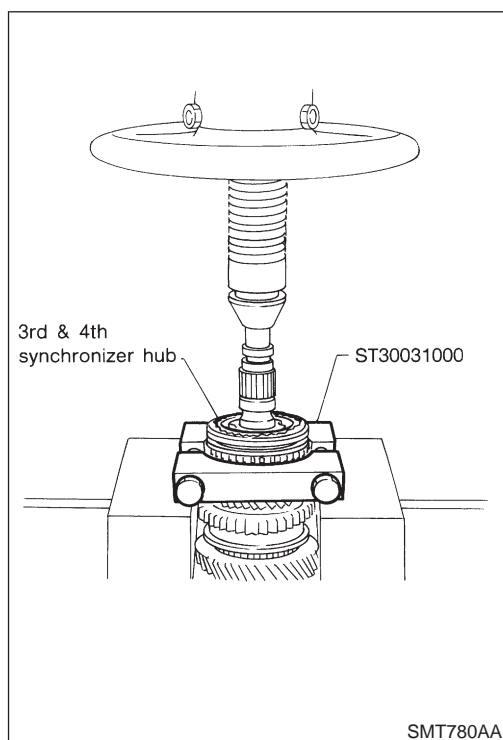


7. Remove 3rd & 4th synchronizer, 3rd main gear, 2nd & 3rd bushing, steel ball and 2nd main gear.

- **Be careful not to lose steel ball.**

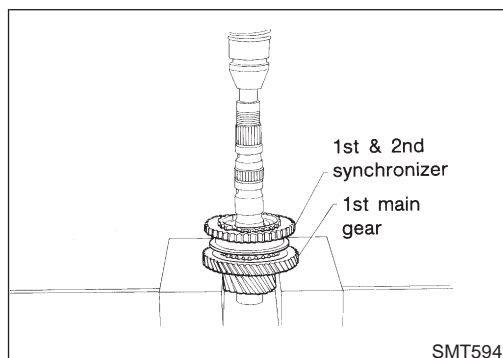

8. Remove 1st & 2nd synchronizer and 1st main gear, then remove 1st gear needle bearing.



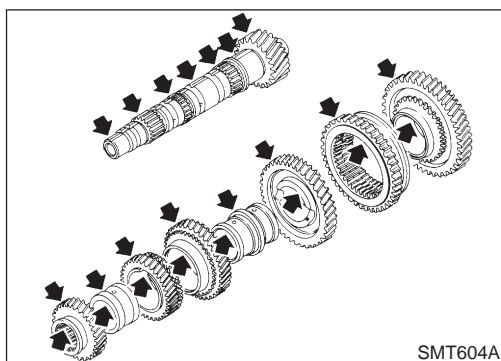


## INSPECTION

### Mainshaft and Gears

NJMT0046
NJMT0046S01


- Check shaft for cracks, wear or bending.
- Check gears for excessive wear, chips or cracks.

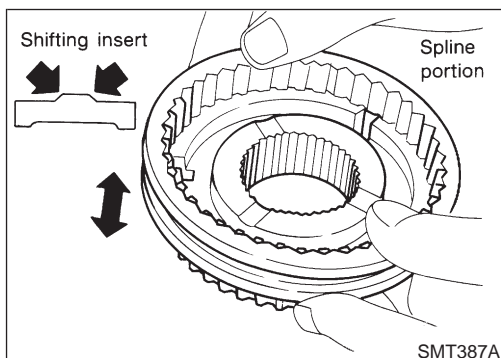

### Synchronizer

NJMT0046S02

- Check spline portion of coupling sleeves, hubs and gears for wear or cracks.
- Check baulk rings for cracks or deformation.
- Check shifting inserts for wear or deformation.

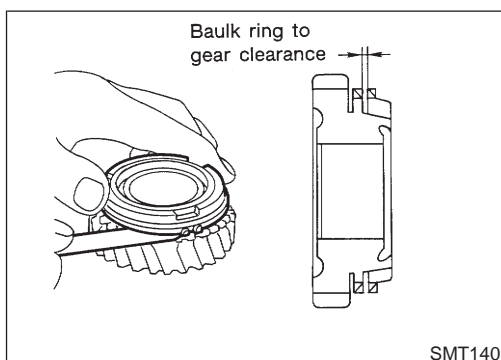

- Measure clearance between baulk ring and 1st-4th main gears.

**Clearance between baulk rings and 1st-4th main gears:**


**Standard**

**1.0 - 1.35 mm (0.0394 - 0.0531 in)**

**Wear limit**

**0.7 mm (0.028 in)**


- If dimension "A" or "B" is smaller than the wear limit, replace outer baulk ring, inner baulk ring and synchronizer cone as a set.

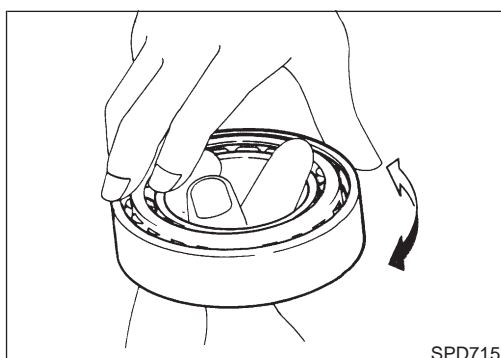

### Bearing

NJMT0046S03


- Make sure bearings roll freely and are free from noise, cracks, pitting or wear.
- **When replacing tapered roller bearing, replace outer and inner race as a set.**

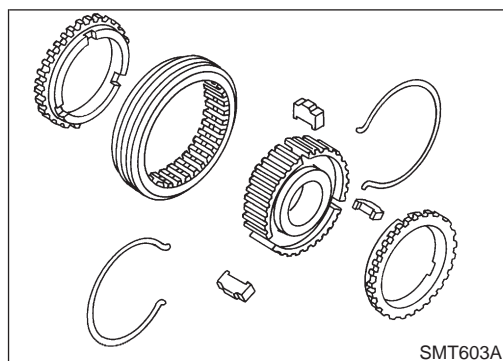


### ASSEMBLY

NJMT0047


1. Assemble 1st & 2nd and 3rd & 4th synchronizers.

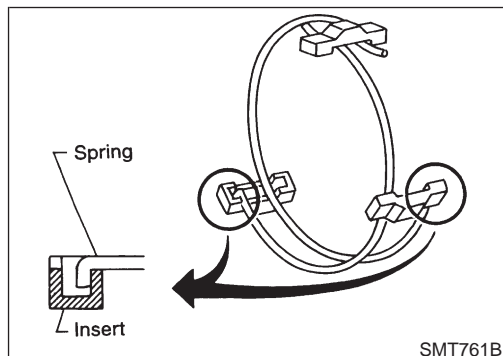

- Be careful not to hook front and rear ends of spread spring to the same insert.

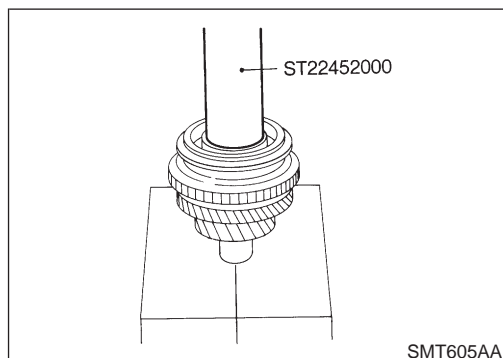


2. Install 1st gear needle bearing and 1st main gear.
3. Press on 1st & 2nd synchronizer.

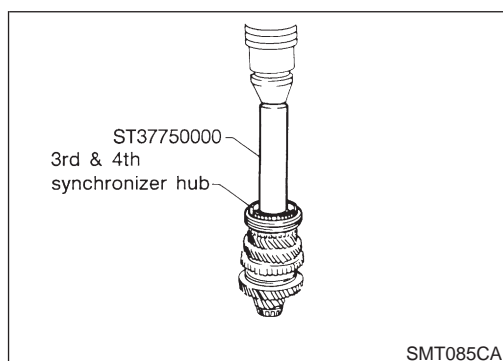


4. Install steel ball, 2nd main gear, 2nd & 3rd bushing, 3rd main gear and 3rd & 4th synchronizer.

- Apply multi-purpose grease to steel ball before installing it.
- 2nd & 3rd bushing has a groove in which steel ball fits.

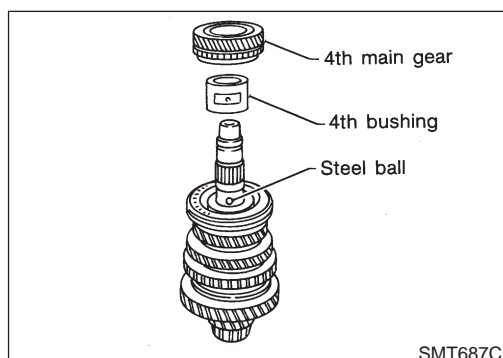


5. Install steel ball, 4th bushing and 4th main gear.

- Apply multi-purpose grease to steel ball before installing it.
- 4th bushing has a groove in which steel ball fits.

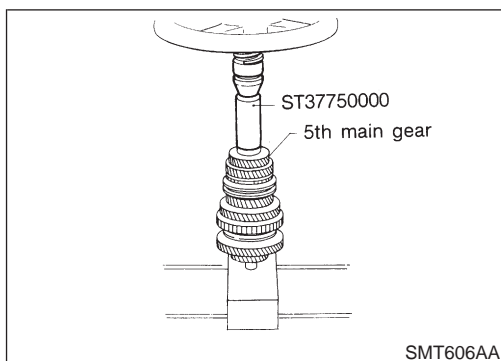

6. Press on 5th main gear.

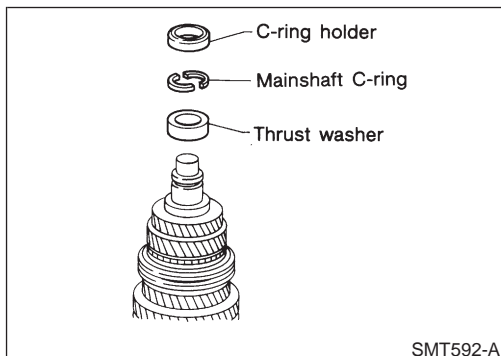

- 7. Install thrust washer.
- 8. Select and install mainshaft C-ring that gives proper clearance of groove in mainshaft.


**Allowable clearance of groove:**

**0 - 0.1 mm (0 - 0.004 in)**


**Mainshaft C-ring:**

**Refer to SDS, MT-121.**


9. Install C-ring holder.

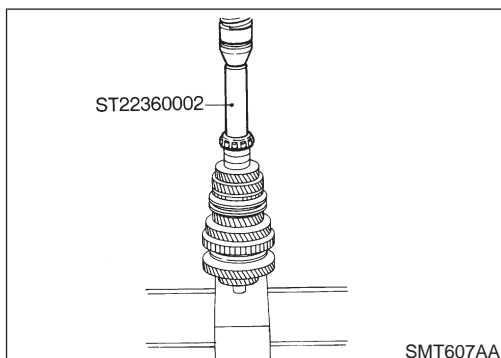

10. Press on mainshaft rear bearing.

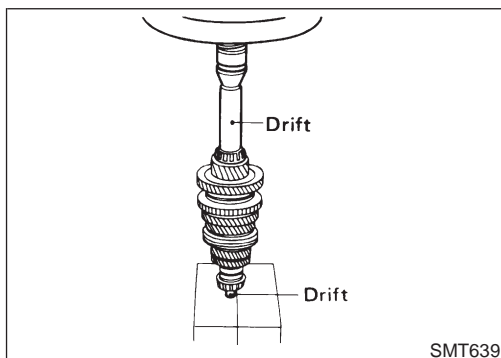

- 11. Press on mainshaft front bearing.
- 12. Measure gear end play as the final check — Refer to "DISASSEMBLY", MT-39.

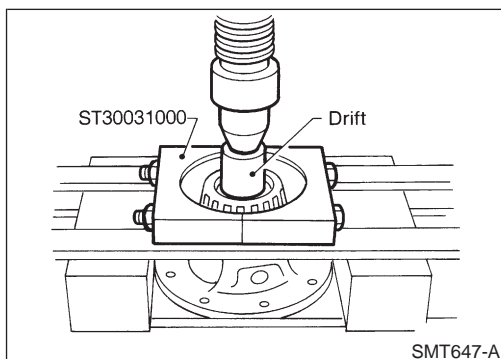


## Final Drive DISASSEMBLY


- 1. Remove final gear.
- 2. Remove speedometer drive gear by cutting it.
- 3. Press out differential side bearings.
- **Be careful not to mix up the right and left bearings.**

NJMT0048

Final Drive (Cont'd)

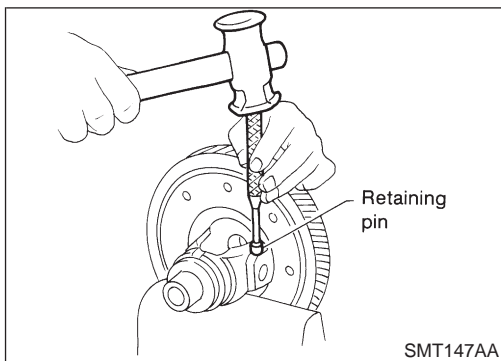

4. Drive out retaining pin and draw out pinion mate shaft.
5. Remove pinion mate gears and side gears.

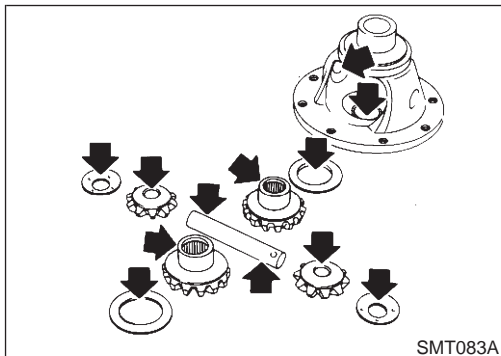


## INSPECTION

### Gear, Washer, Shaft and Case

NJMT0049

NJMT0049S01


- Check mating surfaces of differential case, side gears and pinion mate gears.
- Check washers for wear.

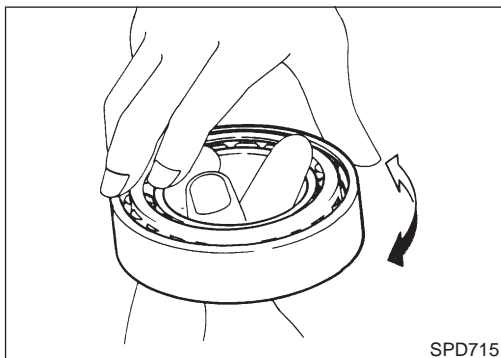

### Bearings

NJMT0049S03


- Make sure bearings roll freely and are free from noise, cracks, pitting or wear.
- **When replacing tapered roller bearing, replace outer and inner race as a set.**

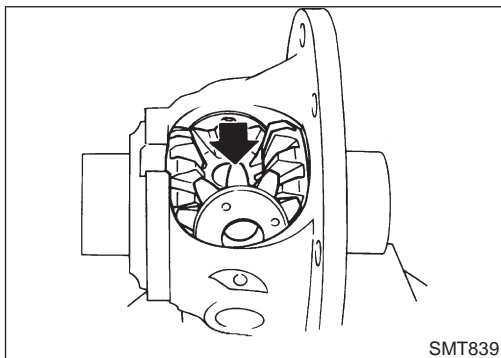

## ASSEMBLY

NJMT0050

1. Attach side gear thrust washers to side gears and install in differential case.
2. Install pinion mate thrust washers and pinion mate gears.





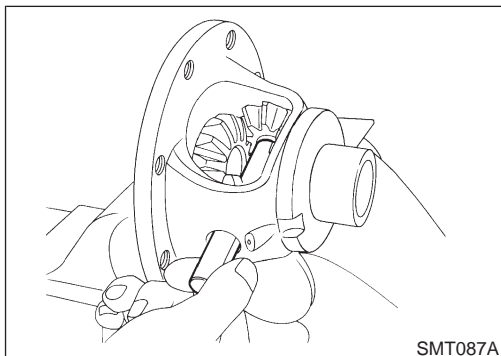


3. Insert pinion mate shaft.
  - **When inserting, be careful not to damage pinion mate thrust washers.**

## REPAIR FOR COMPONENT PARTS

RS5F30A

Final Drive (Cont'd)

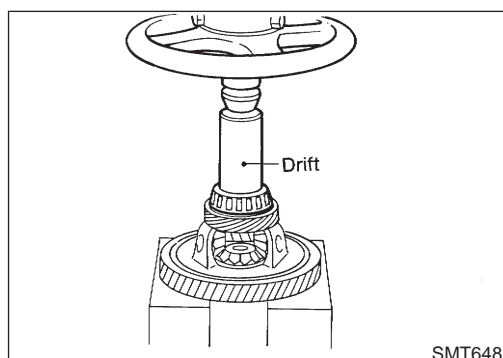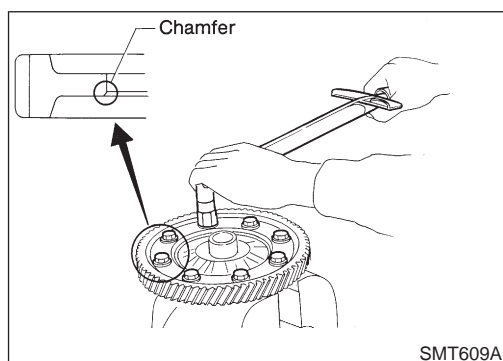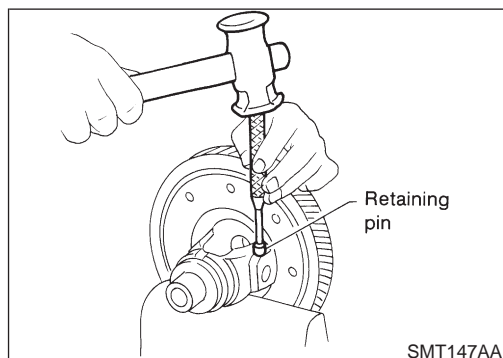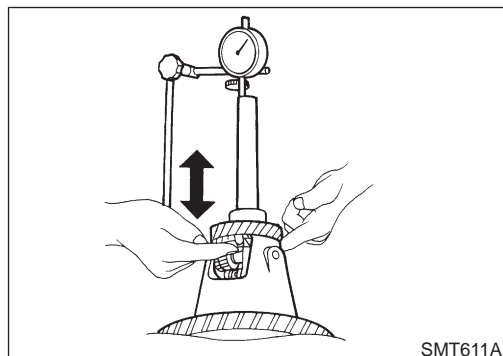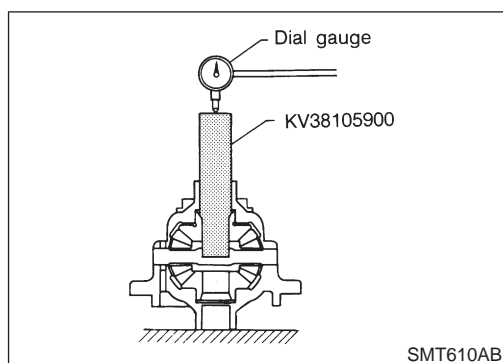

4. Measure clearance between side gear and differential case with washers following the procedure below:
  - a. Set Tool and dial indicator on side gear.

- b. Move side gear up and down to measure dial indicator deflection. Always measure indicator deflection on both side gears.

**Clearance between side gear and differential case with washers:**

**0.1 - 0.2 mm (0.004 - 0.008 in)**

- c. If not within specification, adjust clearance by changing thickness of side gear thrust washers.


**Differential side gear thrust washer:**

**Refer to SDS, MT-121.**

5. Install retaining pin.
  - **Make sure that retaining pin is flush with case.**

6. Install final gear.
  - **Apply locking sealant to final gear fixing bolts before installing them.**
7. Install speedometer drive gear and stopper.


8. Press on differential side bearings.

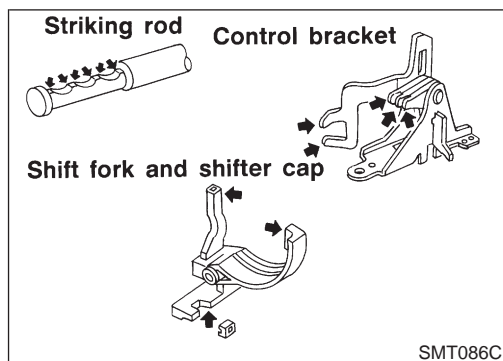

## Shift Control Components INSPECTION

NJMT0051

- Check contact surface and sliding surface for wear, scratches, projections or other damage.

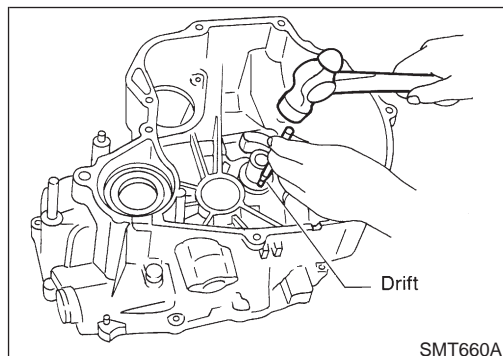


## Case Components DISASSEMBLY AND ASSEMBLY Input Shaft Oil Seal

NJMT0052


NJMT0052S01

1. Drive out input shaft oil seal.

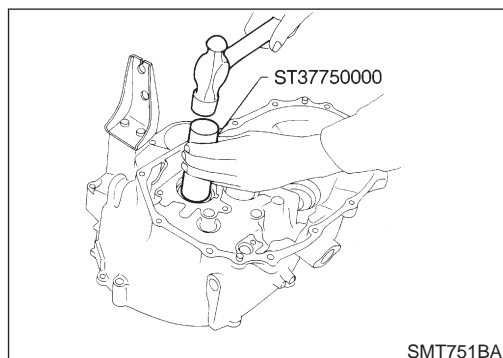

2. Install input shaft oil seal.


- **Apply multi-purpose grease to seal lip of oil seal before installing.**

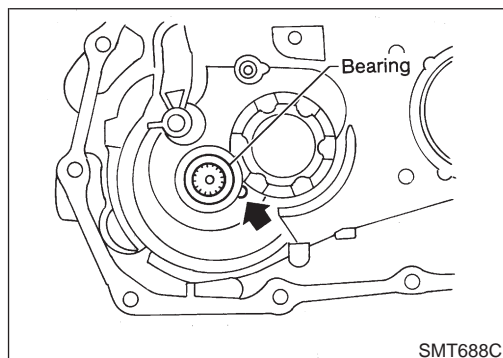


## Input Shaft Rear Bearing

NJMT0052S02


1. Remove welch plug from transmission case.

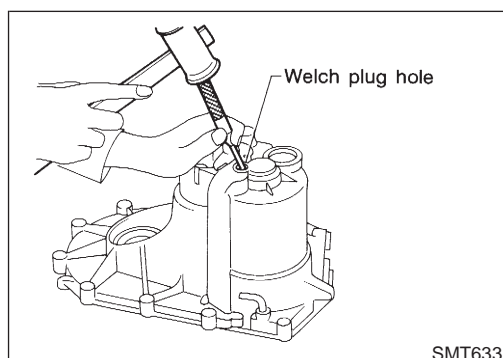


2. Remove input shaft rear bearing by tapping it from welch plug hole.

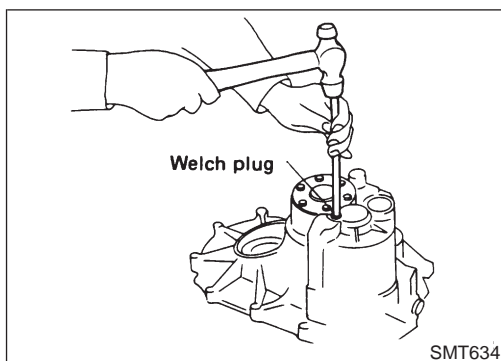

3. Install welch plug.
  - Apply recommended sealant to mating surface of transmission case.

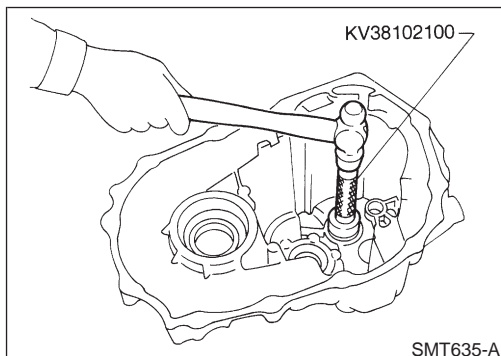


4. Install input shaft rear bearing.

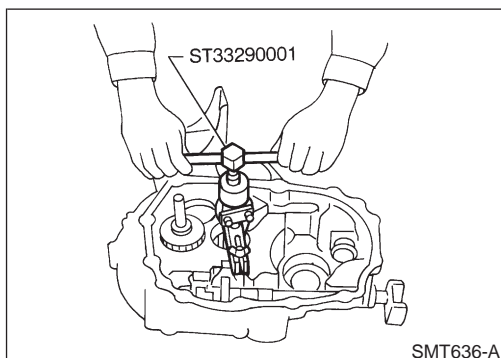


### Mainshaft Front Bearing Outer Race and Oil Channel

NJMT0052S03

1. Remove mainshaft front bearing outer race.
2. Remove oil channel.

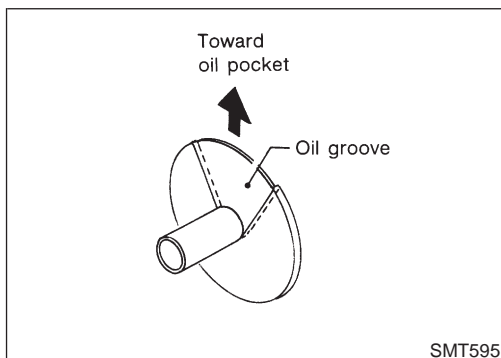

3. Install oil channel.
  - Ensure the oil groove faces the oil pocket.

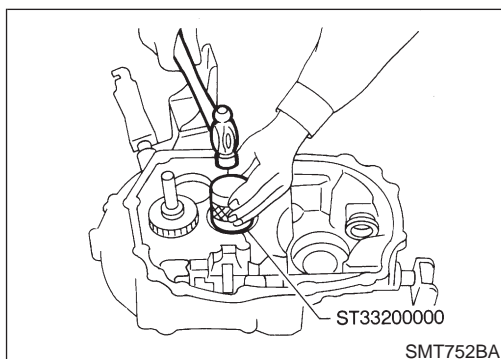

4. Install mainshaft front bearing outer race.

### Mainshaft Rear Bearing Outer Race

- Refer to “Mainshaft Bearing Preload”, MT-122.

NJMT0052S04

### Differential Side Bearing Outer Race

- Refer to “Differential Side Bearing Preload”, MT-122.


NJMT0052S06




## Differential Side Bearing Preload

If any of the following parts are replaced, adjust differential side bearing preload.


- Differential case
- Differential side bearing
- Clutch housing
- Transmission case

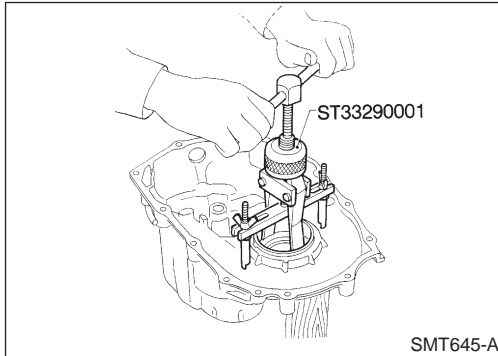

1. Remove differential side bearing outer race (transmission case side) and shim(s).

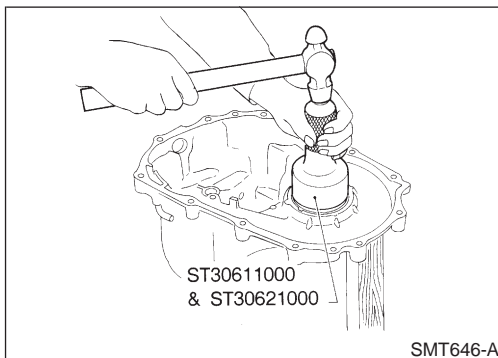

2. Reinstall differential side bearing outer race without shim(s).
3. Install final drive assembly on clutch housing.
4. Install transmission case on clutch housing.
- **Tighten transmission case fixing bolts to the specified torque. Refer to MT-30.**

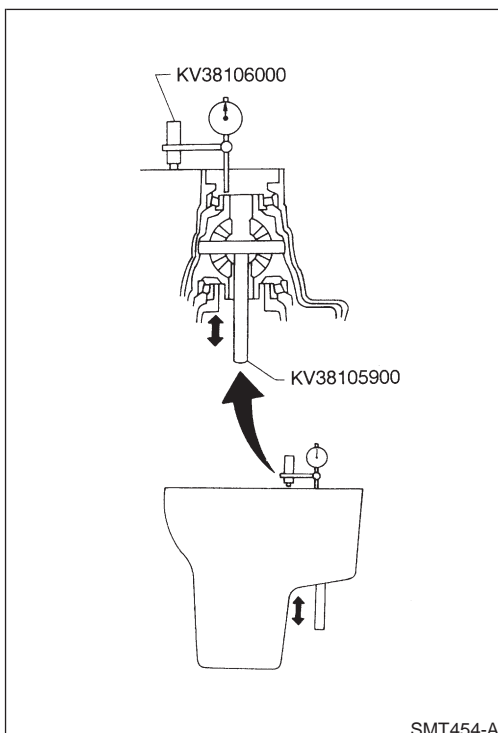

5. Set dial indicator on front end of differential case.
6. Insert Tool all the way into differential side gear.
7. Move Tool up and down and measure dial indicator deflection.
8. Select shim considering bearing preload.

**Suitable shim thickness =**


**Dial indicator deflection + specified bearing preload**

**Differential side bearing preload and adjusting shims:**

**Refer to SDS, MT-122, MT-123.**

9. Install selected shim(s) and differential side bearing outer race.
10. Check differential side bearing turning torque.
  - a. Install final drive assembly on clutch housing.
  - b. Install transmission case on clutch housing.
  - **Tighten transmission case fixing bolts to the specified torque. Refer to MT-30.**

## Differential Side Bearing Preload (Cont'd)

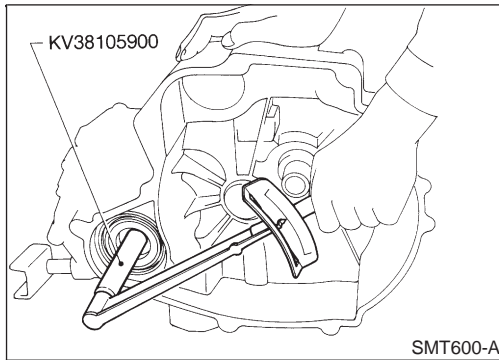

c. Measure turning torque of final drive assembly.


**Turning torque of final drive assembly (New bearing):  
Refer to SDS, MT-122.**

- When old bearing is used again, turning torque will be slightly less than the above.
- Make sure torque is close to the specified range.
- Changes in turning torque of final drive assembly per revolution should be within 1.0 N·m (10 kg·cm, 8.7 in·lb) without binding.


## Mainshaft Bearing Preload

If any of the following parts are replaced, adjust mainshaft bearing preload. NJMT0091S02


- Mainshaft
- Mainshaft bearings
- Clutch housing
- Transmission case

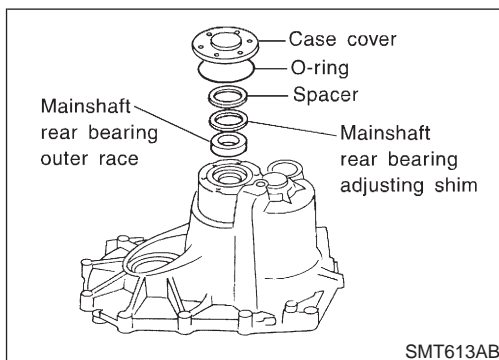


1. Remove case cover, O-ring, spacer, mainshaft rear bearing adjusting shim and mainshaft rear bearing outer race from transmission case.
2. Install mainshaft assembly on clutch housing.
3. Install transmission case on clutch housing.
- **Tighten transmission case fixing bolts to the specified torque. Refer to MT-30.**

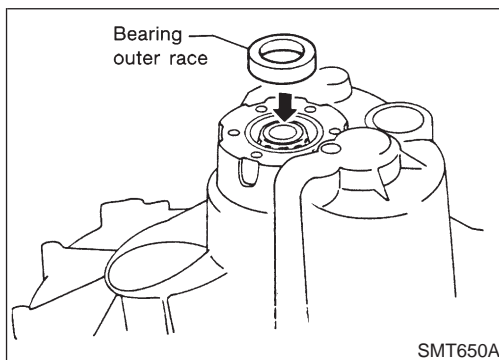


4. Install mainshaft rear bearing outer race on inner race.

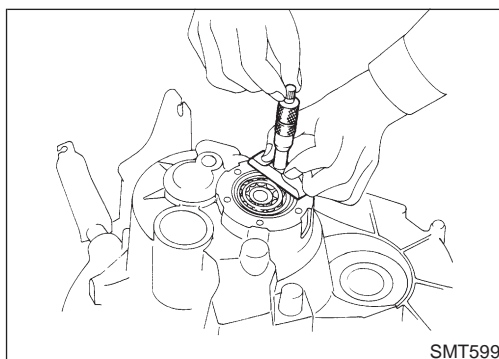


5. Measure distance ("ℓ") from transmission case to bearing outer race.
  - **Make sure that bearing is properly seated.**
6. Select shim considering bearing preload.  
 Suitable shim thickness = measure distance ("ℓ") - 12.5 mm (0.492 in) + (specified bearing preload)  
 Mainshaft rear bearing preload and adjusting shims:  
 Refer to SDS, MT-122, MT-122.
7. Check total turning torque after assembling. Refer to "ASSEMBLY", MT-52.

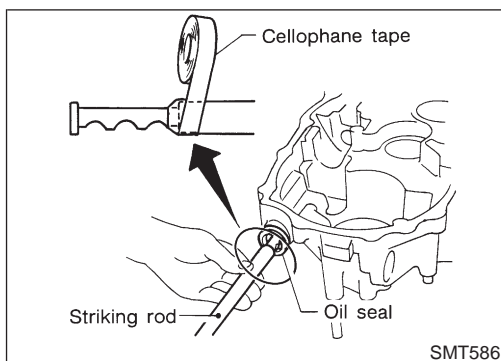


1. Install striking rod, lever and interlock.
  - **Tape edges of striking rod to avoid damaging oil seal lip during installation.**
  - **When taped edges of striking rod are past the oil seal, remove tape.**

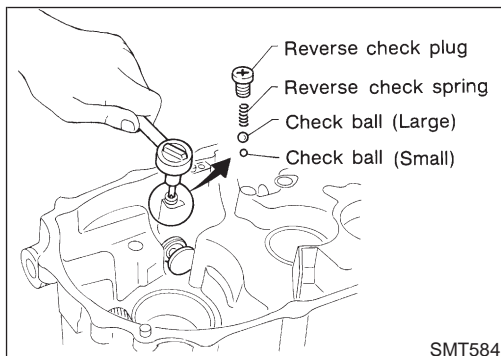


2. Install reverse check sleeve assembly.
3. Install check balls, reverse check spring and check plug.

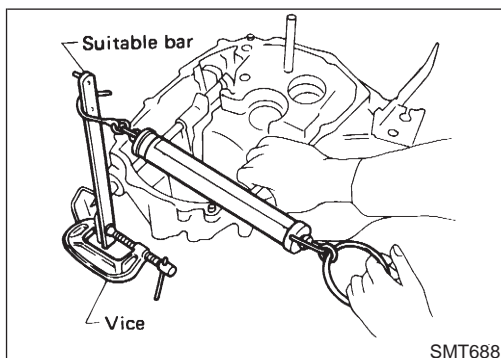


4. Check reverse check turning torque (At striking rod).
  - Reverse check turning torque (At striking rod):**  
**Refer to SDS, MT-120.**
  - If not within specification, select another check plug having a different length and reinstall it.
  - Reverse check plug:**  
**Refer to SDS, MT-120.**
5. Install selected reverse check plug.
  - **Apply locking sealant to thread of plug before installing it.**

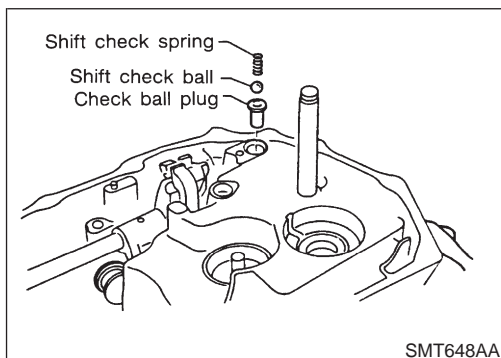


6. Install check ball plug, shift check ball and shift check spring.
7. Install oil pocket.

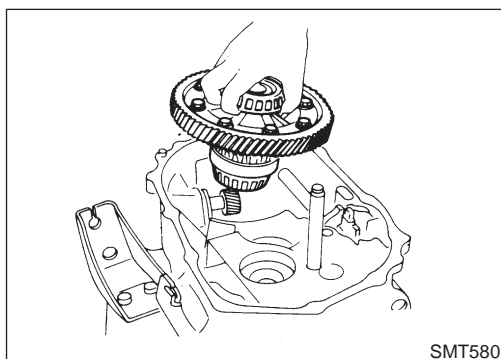


8. Install gear components onto clutch housing.
  - a. Install final drive assembly and reverse idler gear.

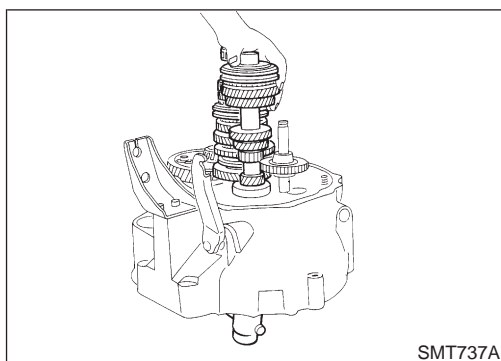


- b. Install mainshaft and input gear as a set.
  - Take care not to damage oil seal lip with splines of input shaft while shaft is being inserted into clutch housing.
  - Take care not to damage oil channel when inserting mainshaft into clutch housing.

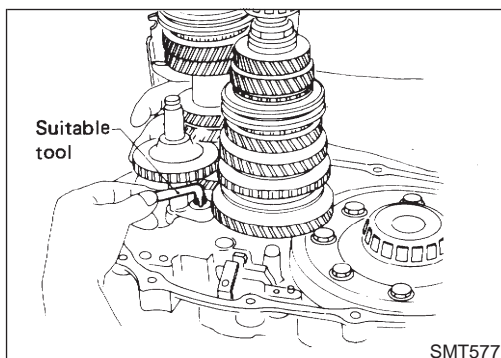


- c. Install bearing retainer.
  - One of these three screws is torx type and should be installed with suitable tool, as shown.

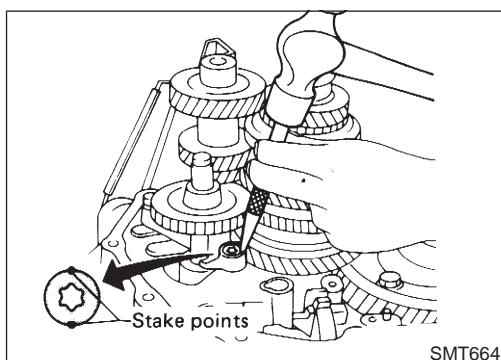


- d. After installing torx screw, stake it at two points.

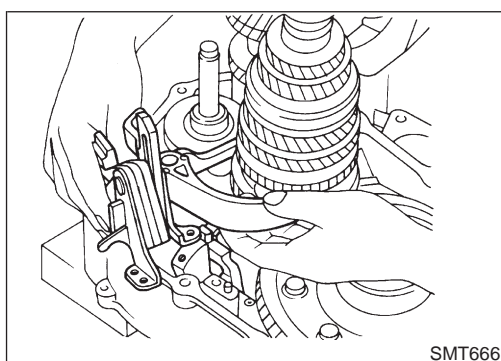


- 9. Apply grease to shifter caps, then install it to control bracket. Install control bracket with 1st & 2nd shift fork.
- 10. Install 3rd & 4th and 5th shift forks.

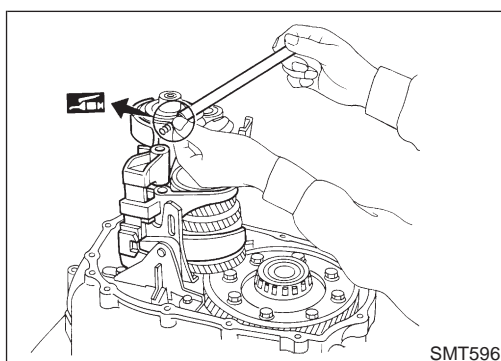

- 11. Insert fork shaft.
  - Apply multi-purpose grease to support spring before installing.
- 12. Install reverse idler spacer.

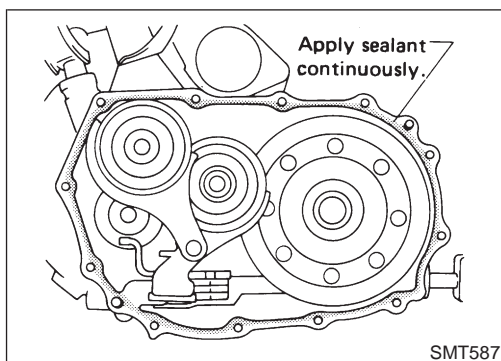


13. Apply recommended sealant to mating surface of clutch housing.
14. Install transmission case on clutch housing.

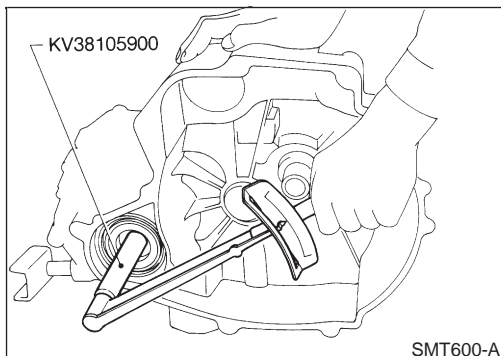

15. Measure total turning torque.
  - Total (Final drive + Mainshaft) turning torque (New bearing):**
  - Refer to SDS, MT-122.**
  - When old bearing is used again, turning torque will be slightly less than the above.
  - Make sure torque is close to the specified range.

## Case Components

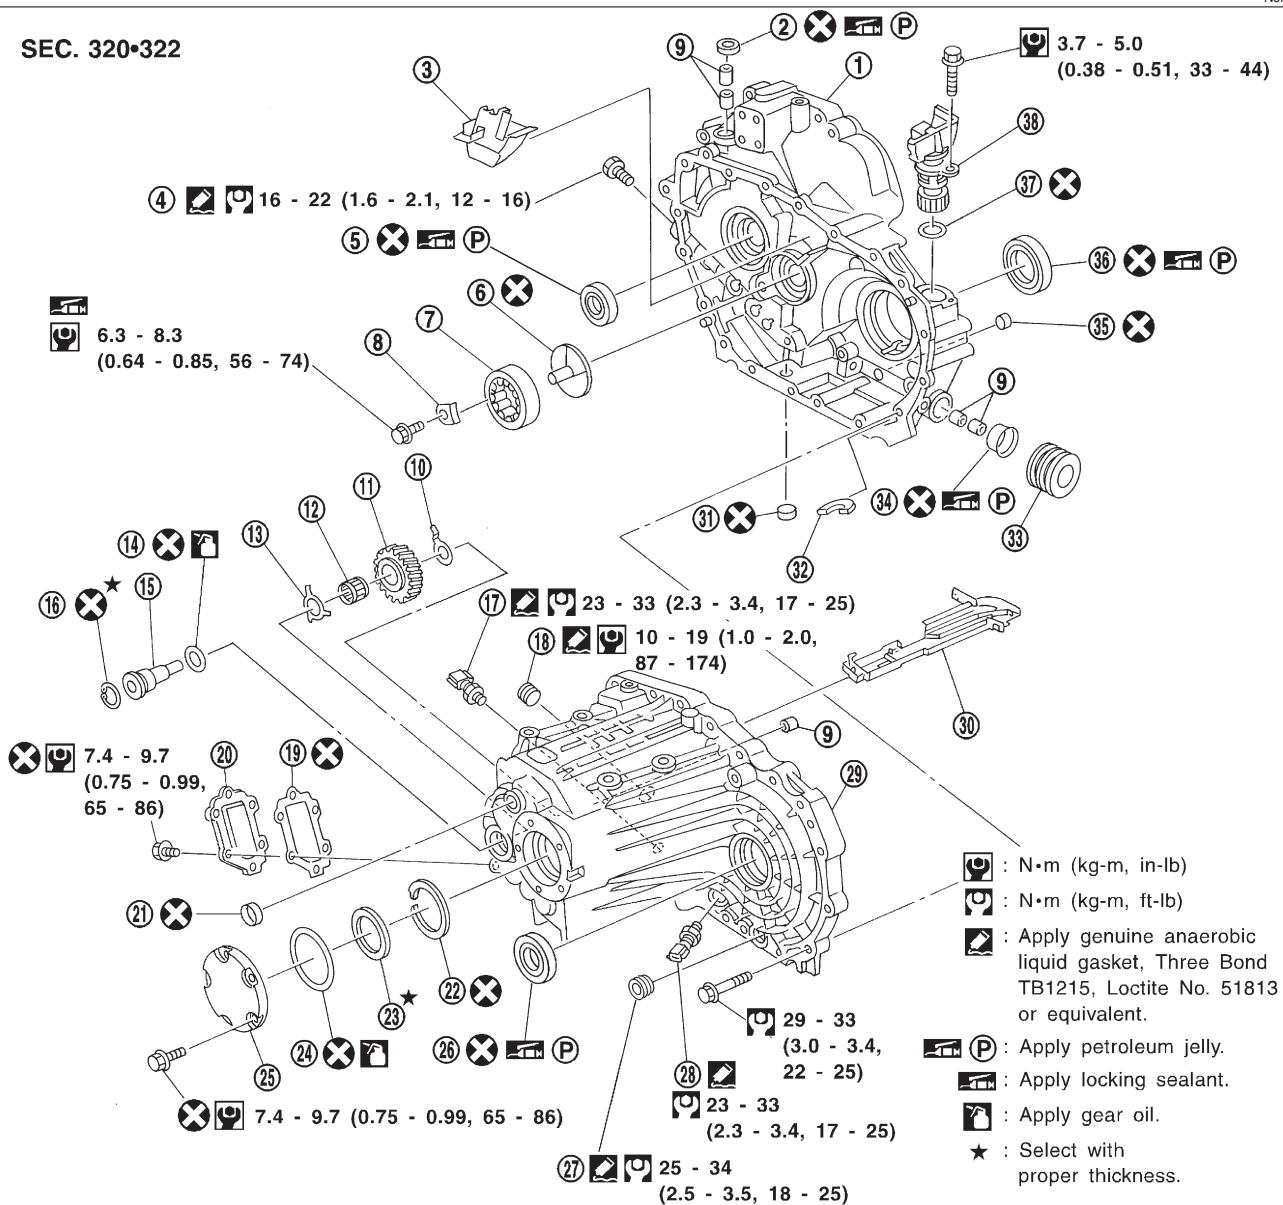**SEC. 320-322**


SMT942D


- |  |   |                           |
|--|---|---------------------------|
| 1. Clutch housing                          | 14. O-ring                                | 26. Differential oil seal |
| 2. Dust seal                               | 15. Reverse idler gear shaft              | 27. Drain plug            |
| 3. Oil pocket                              | 16. Snap ring                             | 28. PNP switch            |
| 4. Check plug                              | 17. Reverse switch                        | 29. Transmission case     |
| 5. Input shaft oil seal                    | 18. Filler plug                           | 30. Oil gutter            |
| 6. Oil channel                             | 19. Side cover gasket                     | 31. Welch plug            |
| 7. Mainshaft front bearing                 | 20. Side cover                            | 32. Magnet                |
| 8. Bearing retainer                        | 21. Welch plug                            | 33. Boot                  |
| 9. Bush                                    | 22. Mainshaft bearing snap ring           | 34. Striking rod oil seal |
| 10. Reverse idler gear front thrust washer | 23. Mainshaft rear bearing adjusting shim | 35. Welch plug            |
| 11. Reverse idler gear                     | 24. O-ring                                | 36. Differential oil seal |
| 12. Reverse idler gear bearing             | 25. Rear cover                            | 37. O-ring                |
| 13. Reverse idler gear rear thrust washer  |   | 38. Speedometer pinion    |



## Gear Components

=NJMT0054S03

SEC. 322

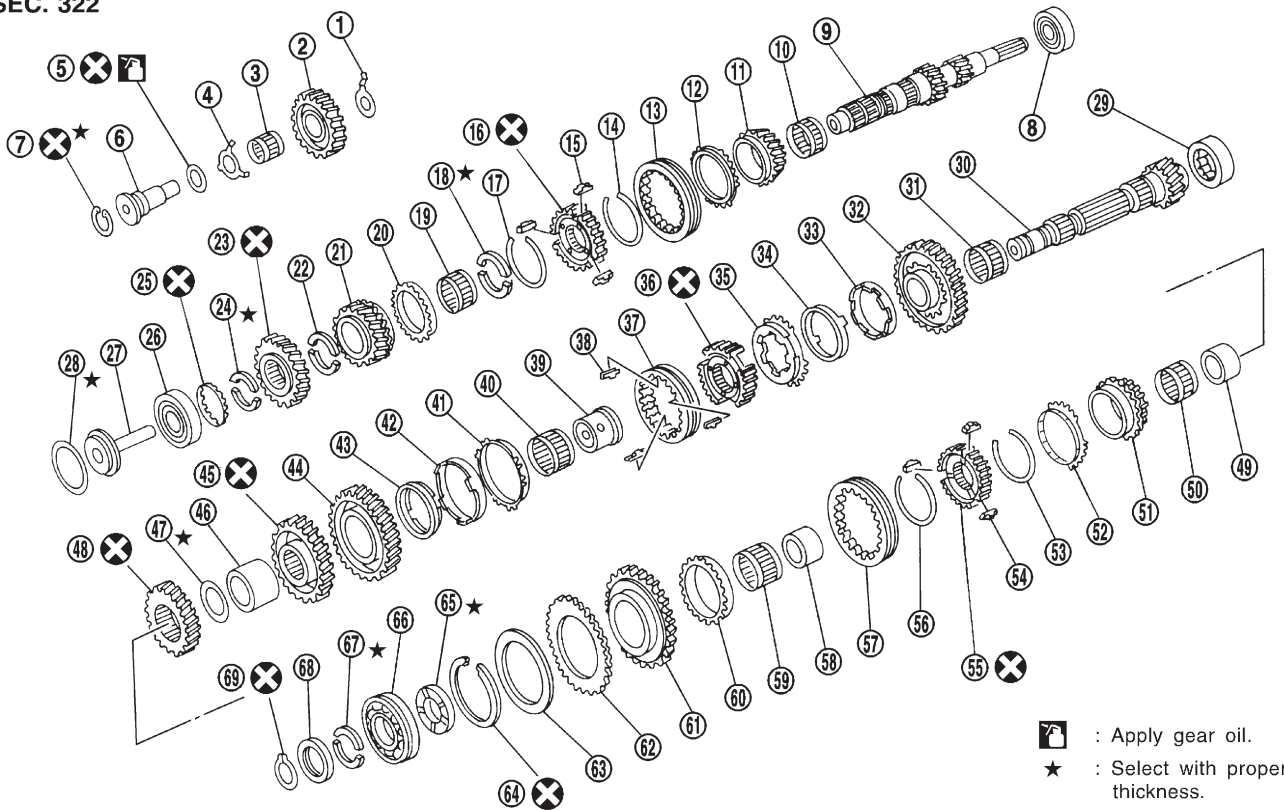


: Apply gear oil.  
 ★ : Select with proper thickness.

SMT641DA

- |  |   |  |
|--|---|--|
| <ul style="list-style-type: none"> <li>1. Reverse idler gear front thrust washer</li> <li>2. Reverse idler gear</li> <li>3. Reverse idler gear bearing</li> <li>4. Reverse idle gear rear thrust washer</li> <li>5. O-ring</li> <li>6. Reverse idler gear shaft</li> <li>7. Snap ring</li> <li>8. Input shaft front bearing</li> <li>9. Input shaft</li> <li>10. 3rd gear needle bearing</li> <li>11. 3rd input gear</li> <li>12. 3rd gear baulk ring</li> <li>13. Coupling sleeve</li> <li>14. Spread spring</li> <li>15. Shifting insert</li> <li>16. 3rd &amp; 4th synchronizer hub</li> <li>17. Spread spring</li> <li>18. 4th gear C-ring</li> <li>19. 4th gear needle bearing</li> <li>20. 4th gear baulk ring</li> <li>21. 4th input gear</li> <li>22. 5th gear front C-ring</li> <li>23. 5th input gear</li> </ul> | <ul style="list-style-type: none"> <li>24. 5th gear rear C-ring</li> <li>25. C-ring holder</li> <li>26. Input shaft rear bearing</li> <li>27. Oil channel</li> <li>28. Input shaft rear bearing adjusting shim</li> <li>29. Mainshaft front bearing</li> <li>30. Mainshaft</li> <li>31. 1st gear needle bearing</li> <li>32. 1st main gear</li> <li>33. 1st inner baulk ring</li> <li>34. 1st synchronizer cone</li> <li>35. 1st outer baulk ring</li> <li>36. 1st &amp; 2nd synchronizer hub</li> <li>37. Coupling sleeve</li> <li>38. Insert spring</li> <li>39. 2nd gear bush</li> <li>40. 2nd gear needle bearing</li> <li>41. 2nd gear outer baulk ring</li> <li>42. 2nd gear synchronizer cone</li> <li>43. 2nd inner baulk ring</li> <li>44. 2nd main gear</li> <li>45. 3rd main gear</li> <li>46. Spacer</li> </ul> | <ul style="list-style-type: none"> <li>47. Mainshaft adjusting shim</li> <li>48. 4th main gear</li> <li>49. 5th gear bush</li> <li>50. 5th gear needle bearing</li> <li>51. 5th main gear</li> <li>52. 5th gear baulk ring</li> <li>53. Spread spring</li> <li>54. Shifting insert</li> <li>55. 5th &amp; reverse synchronizer hub</li> <li>56. Spread spring</li> <li>57. Coupling sleeve</li> <li>58. Reverse gear bush</li> <li>59. Reverse gear needle bearing</li> <li>60. Reverse gear baulk ring</li> <li>61. Reverse main gear</li> <li>62. Sub-gear</li> <li>63. Sub-gear washer</li> <li>64. Snap ring</li> <li>65. Mainshaft thrust washer</li> <li>66. Mainshaft rear bearing</li> <li>67. Mainshaft C-ring</li> <li>68. C-ring holder</li> <li>69. Snap ring</li> </ul> |
|--|---|--|

## Shift Control Components

=NJMT0054S04

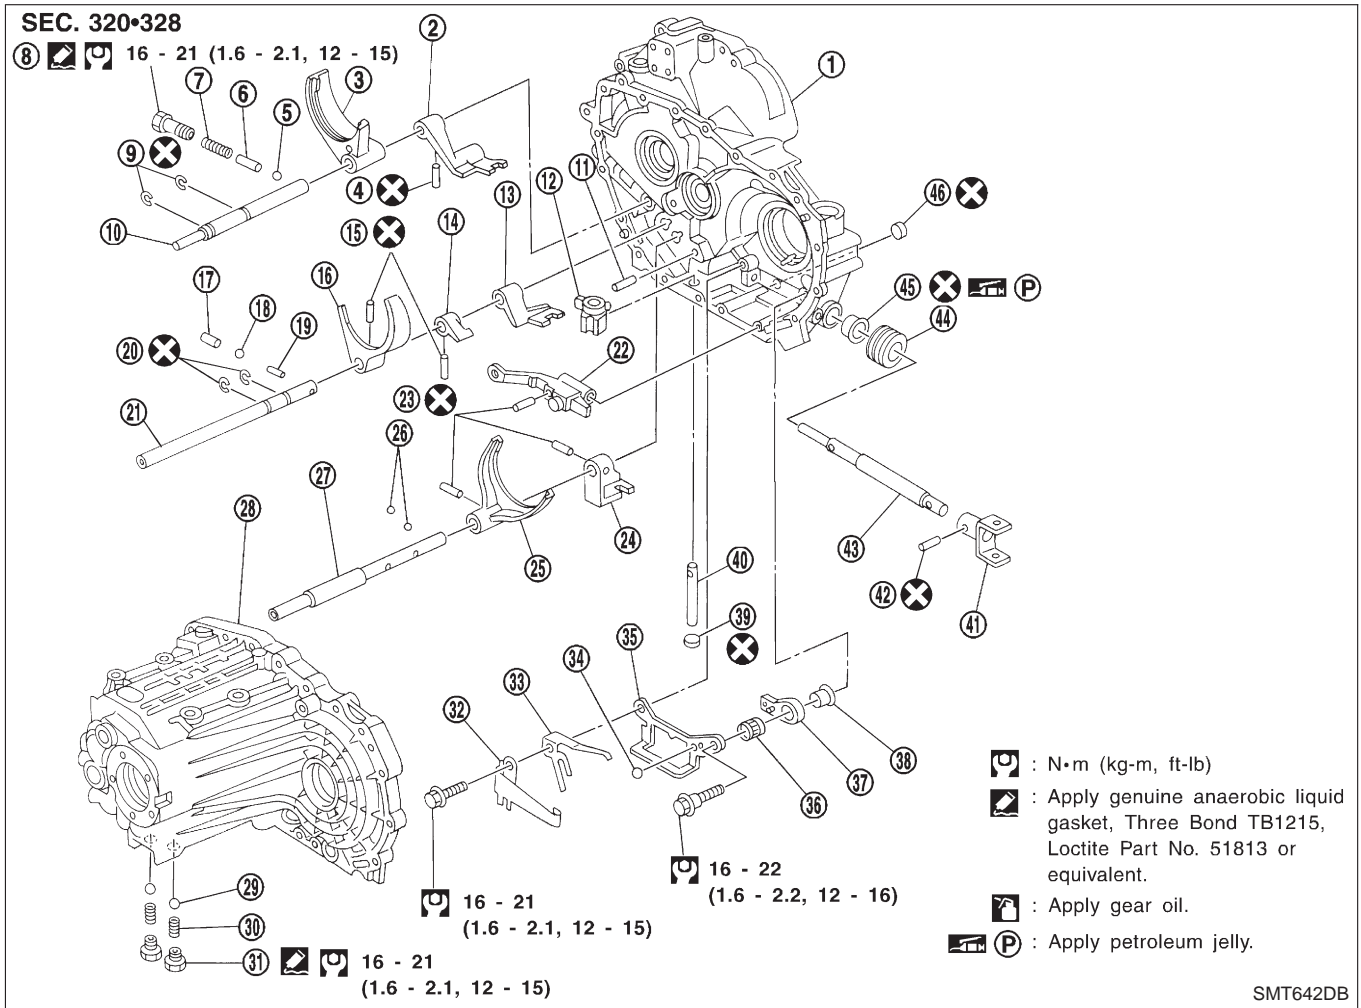


- |  |  |   |
|--|--|---|
| <ul style="list-style-type: none"> <li>1. Clutch housing</li> <li>2. 3rd &amp; 4th bracket</li> <li>3. 3rd &amp; 4th shift fork</li> <li>4. Retaining pin</li> <li>5. Check ball</li> <li>6. Check pin</li> <li>7. Check spring</li> <li>8. Check plug</li> <li>9. Stopper ring</li> <li>10. 3rd &amp; 4th fork rod</li> <li>11. Selector shaft pin</li> <li>12. Selector</li> <li>13. 5th &amp; reverse bracket</li> <li>14. Reverse switch bracket</li> <li>15. Retaining pin</li> <li>16. 5th &amp; reverse shift fork</li> </ul> | <ul style="list-style-type: none"> <li>17. Interlock plunger</li> <li>18. Check ball</li> <li>19. Interlock pin</li> <li>20. Stopper ring</li> <li>21. 5th &amp; reverse fork rod</li> <li>22. Striking lever</li> <li>23. Retaining pin</li> <li>24. 1st &amp; 2nd bracket</li> <li>25. 1st &amp; 2nd shift fork</li> <li>26. Check ball</li> <li>27. 1st &amp; 2nd fork rod</li> <li>28. Transaxle case</li> <li>29. Check ball</li> <li>30. Check spring</li> <li>31. Check plug</li> </ul> | <ul style="list-style-type: none"> <li>32. Select check leaf spring</li> <li>33. Return spring</li> <li>34. Steel ball</li> <li>35. Reverse gate</li> <li>36. Return bearing</li> <li>37. Selector arm</li> <li>38. Bush</li> <li>39. Welch plug</li> <li>40. Selector shaft</li> <li>41. Striking yoke</li> <li>42. Retaining pin</li> <li>43. Striking rod</li> <li>44. Dust boot</li> <li>45. Striking rod oil seal</li> <li>46. Welch plug</li> </ul> |
|--|--|---|



## Final Drive Components

=NJMT0054S05

SEC. 322

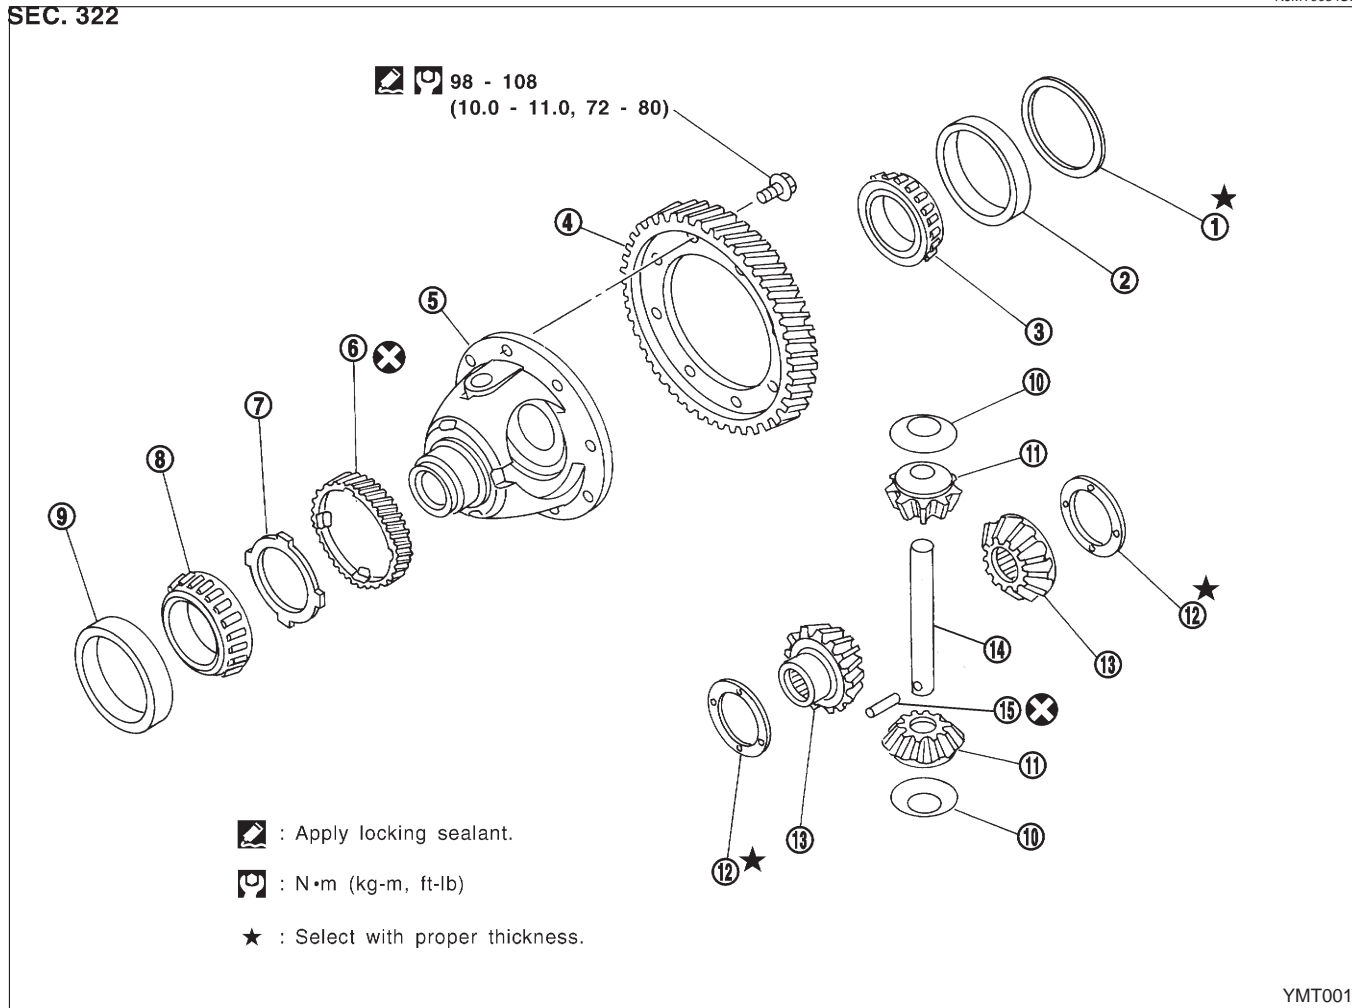


YMT001

- |  |  |  |
|--|--|--|
| <p>1. Differential side bearing adjusting shim</p> <p>2. Differential side bearing outer race</p> <p>3. Differential side bearing</p> <p>4. Final gear</p> <p>5. Differential case</p> | <p>6. Speedometer drive gear</p> <p>7. Speedometer stopper</p> <p>8. Differential side bearing</p> <p>9. Differential side bearing outer race</p> <p>10. Pinion mate thrust washer</p> | <p>11. Pinion mate gear</p> <p>12. Side gear thrust washer</p> <p>13. Side gear</p> <p>14. Pinion mate shaft</p> <p>15. Lock pin</p> |
|--|--|--|


Transaxle Case

## Transaxle Case


NJMT0055S01

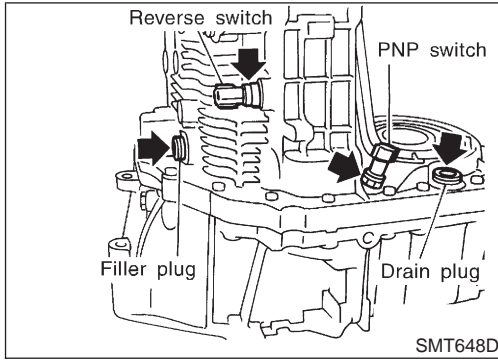


1. Remove reverse switch, PNP switch, drain plug, and filler plug from transaxle case.

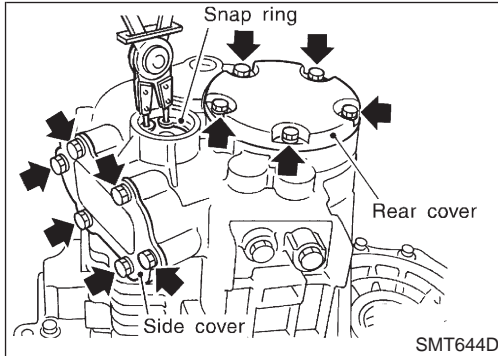


2. Remove snap rings from reverse idler shaft.
3. Remove side cover and rear cover from case.
4. Remove O-ring and mainshaft bearing adjusting shim.

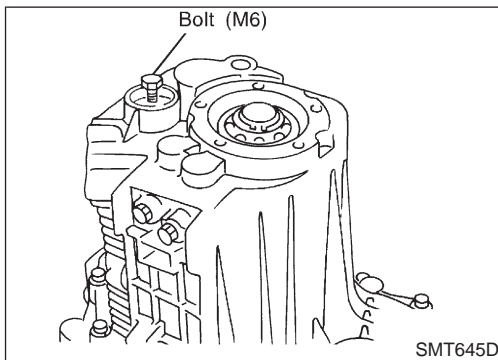

5. Remove reverse idler gear shaft.
  - a. Attach bolt (M6) to thread of reverse idler gear shaft end.
  - b. Pull out the attached bolt, and remove reverse idler gear shaft from case.
6. Remove reverse idler gear, thrust washer (front, rear), and bearing from case.

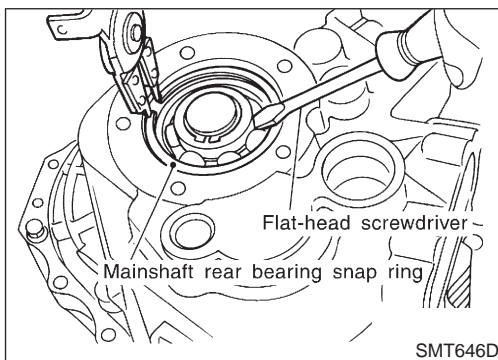

7. Remove snap ring of mainshaft bearing from case.

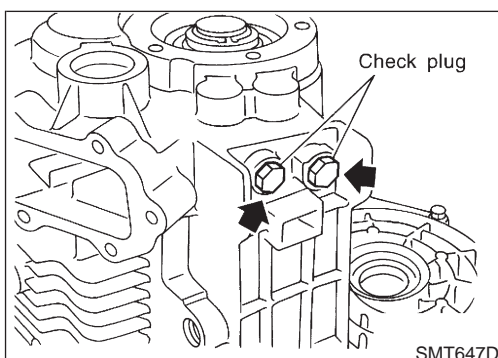


8. Remove check plugs, springs, and check balls from case.


# DISASSEMBLY

**RS5F70A**


Transaxle Case (Cont'd)

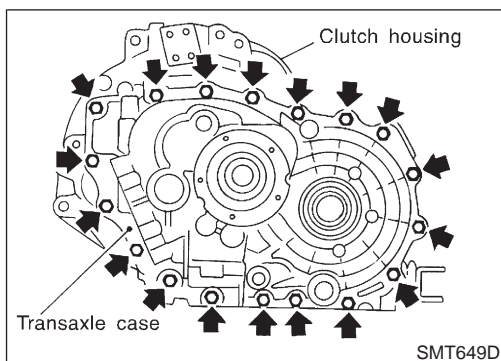


9. Remove mounting bolts.
10. Remove input shaft rear bearing adjusting shim from transaxle case.

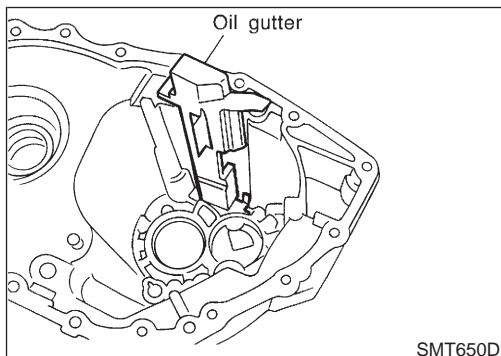


11. Remove oil gutter from case.

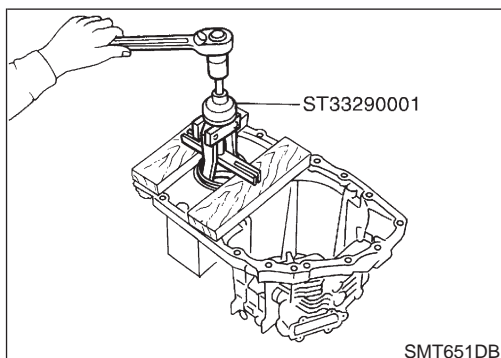

12. Remove differential side bearing outer race and adjusting shim from case.

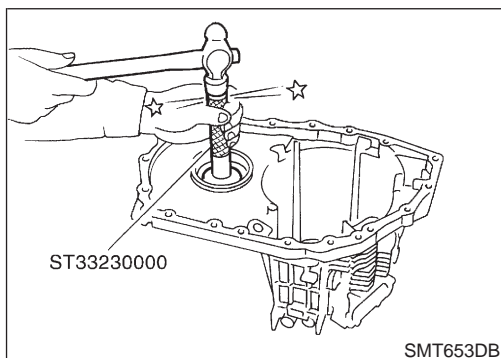

13. Remove differential oil seal from case.

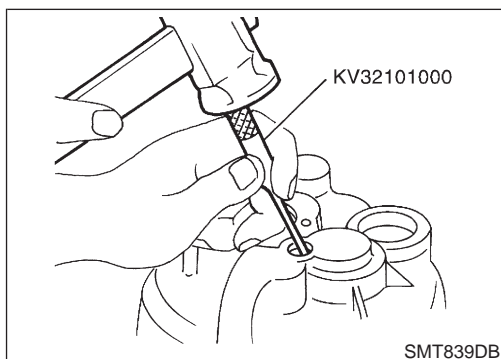


14. Remove Welch plugs from case.


## Clutch Housing

### Clutch Housing


NJMT0055S02

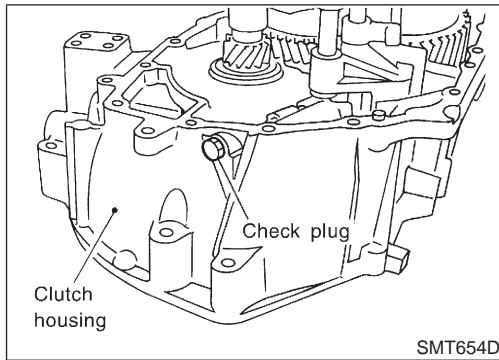


1. Remove transaxle case from clutch housing.
2. Remove magnet from housing.
3. Remove check plugs, check springs, check pins, and check balls from housing.

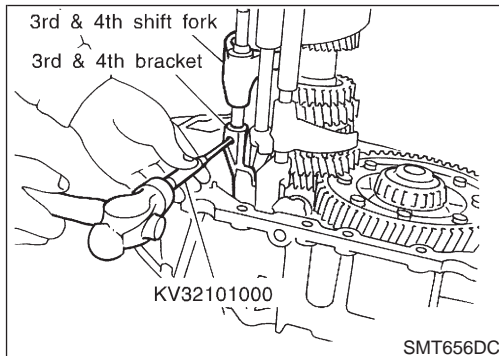


4. Remove 3rd & 4th bracket retaining pin.

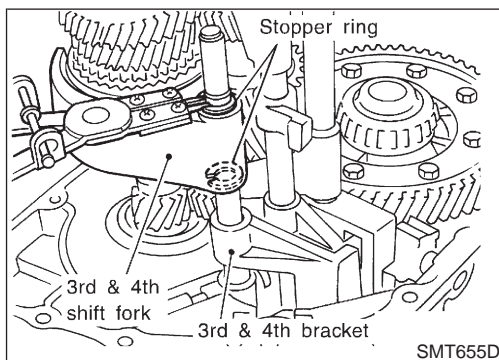

5. Remove 3rd & 4th shift fork stopper ring.
6. Remove 3rd & 4th fork rod.
7. Remove 3rd & 4th shift fork and bracket.

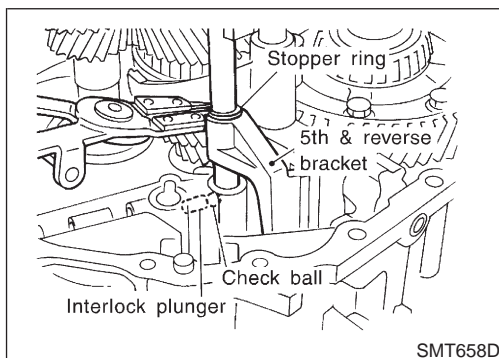

8. Remove interlock plunger and check ball.
9. Remove 5th & reverse bracket stopper ring.

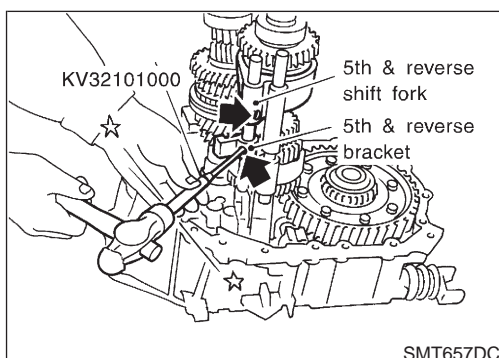


10. Remove retaining pin from 5th & reverse shift fork and reverse switch bracket.
11. Remove 5th & reverse fork rod.
12. Remove interlock pin from 5th & reverse fork rod.
13. Remove reverse switch bracket and 5th & reverse bracket.


## DISASSEMBLY

**RS5F70A**


Clutch Housing (Cont'd)

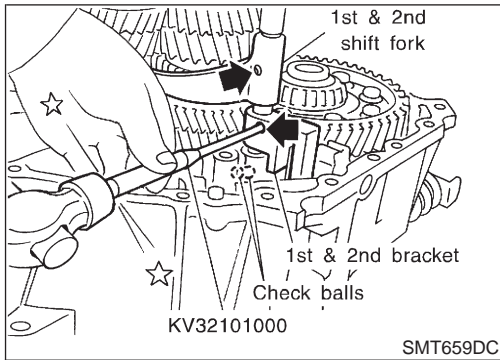


14. Remove check ball from housing.
15. Remove retaining pin for 1st & 2nd shift fork and bracket.
16. Remove 1st & 2nd fork rod.
17. Remove 5th & reverse and 1st & 2nd shift forks, and 1st & 2nd bracket.

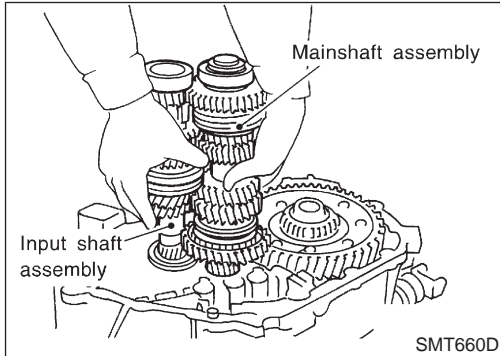


18. Remove both input shaft and mainshaft assemblies from housing.

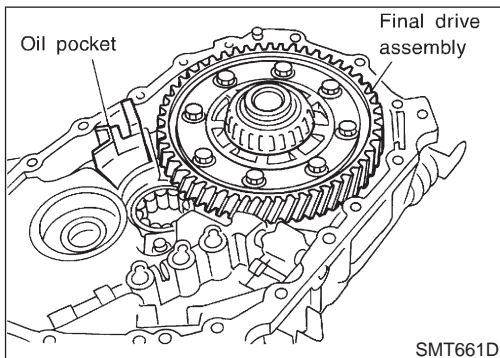

19. Remove final drive assembly from housing.
20. Remove oil pocket from housing.

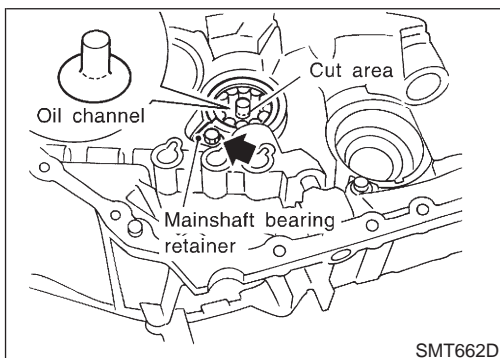


21. Remove mainshaft bearing retainer from housing.
22. Cut off oil channel using a cutter as shown in the figure.

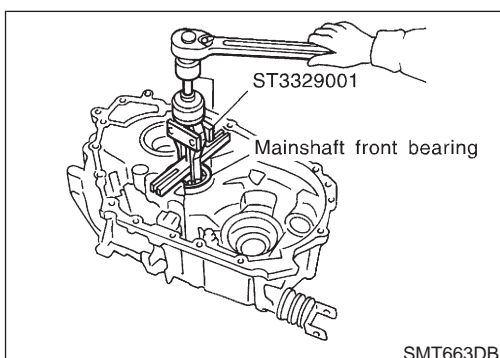


23. Remove mainshaft front bearing from housing.


## Clutch Housing (Cont'd)

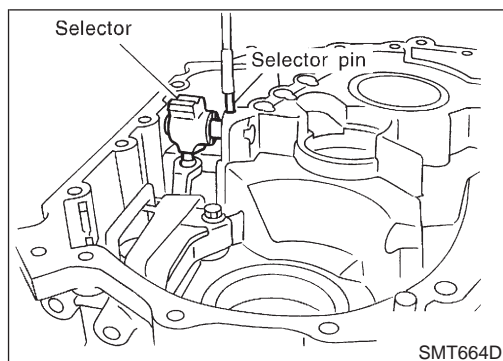

24. Using a magnet or other suitable tool, remove retaining pin from selector shaft.

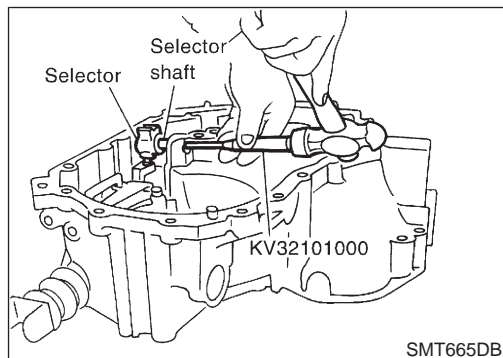


25. Remove selector shaft and plug, then remove selector.

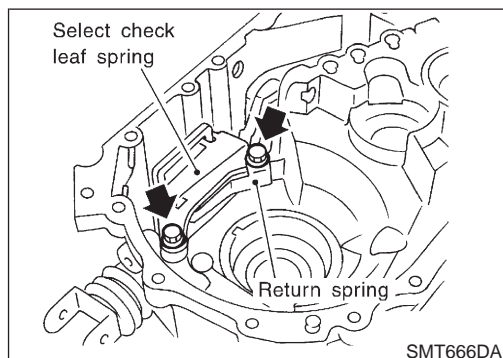


26. Remove reamer bolt, then remove select check leaf spring, return spring, steel ball, reverse gate, selector arm, bearing, and bushing.

**CAUTION:**  
Be careful not to lose the steel ball.

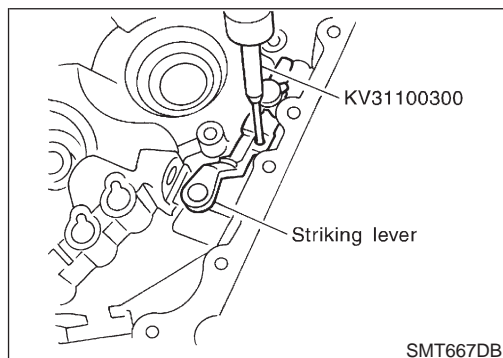

27. Remove retaining pin and plug from striking lever.  
28. Remove striking rod, then striking lever from housing.

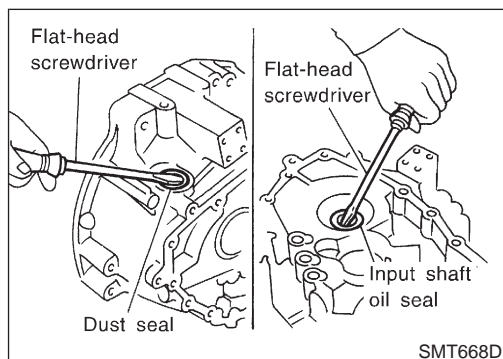


29. Using a flat-head screwdriver or other suitable tool, remove dust seal, input shaft oil seal, and striking rod oil seal from housing.

**CAUTION:**  
When removing dust and oil seals, be careful not to damage mounting surfaces of dust seal and oil seal.


## DISASSEMBLY

**RS5F70A**

Clutch Housing (Cont'd)

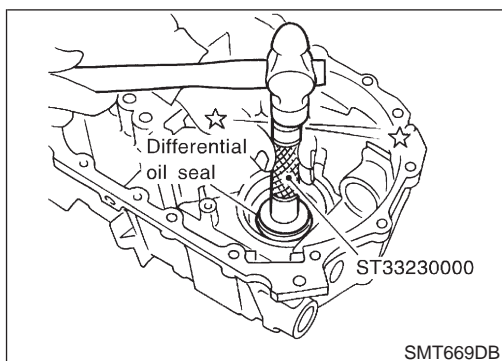






30. Remove differential oil seal from housing.

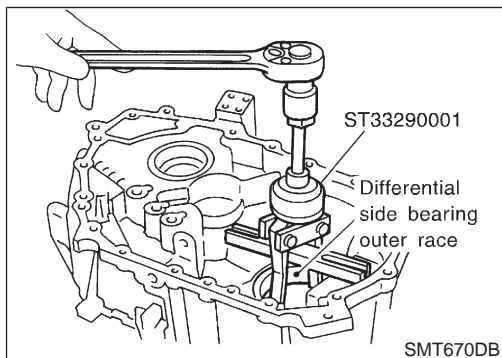

31. Remove differential side bearing outer race from housing.



## Input Shaft and Gears

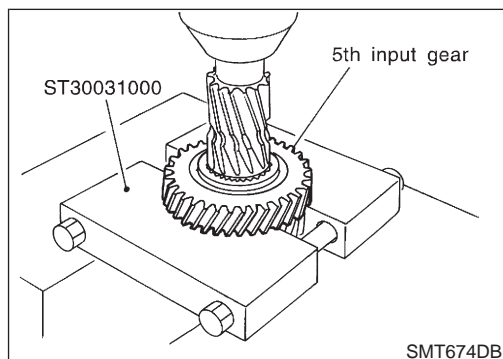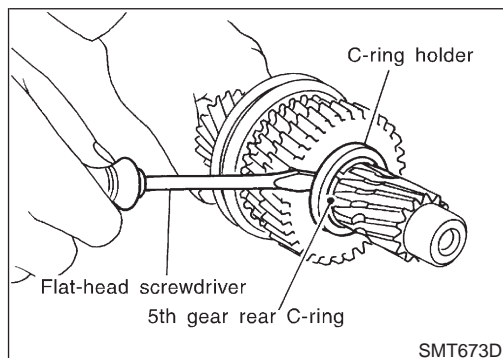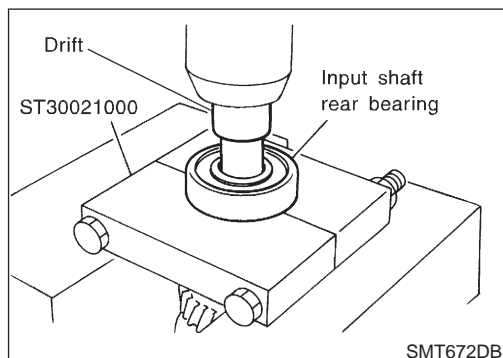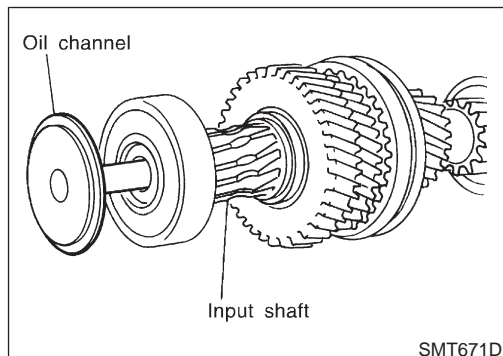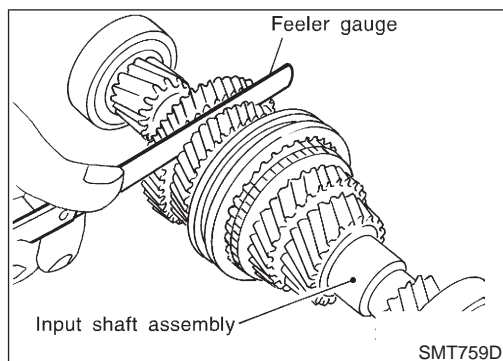

## Input Shaft and Gears

### DISASSEMBLY

NJMT0056

1. Before disassembly, measure the end plays of 3rd and 4th input gears.

**Gear end play:**

**Refer to SDS, MT-125.**

- If end play is not within specification, disassemble and check the parts.


2. Remove oil channel from input shaft rear bearing.

3. Press out input shaft rear bearing.


4. Remove C-ring holder.
5. Remove 5th gear rear C-ring.

6. Remove 5th input gear from input shaft.
7. Remove 5th gear front C-ring.




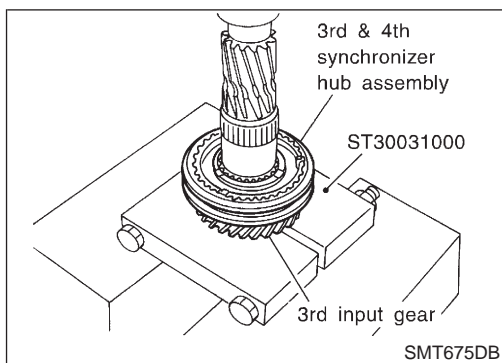

8. Remove 4th input gear, baulk ring, 4th gear needle bearing, and 4th gear C-ring from input shaft.
9. Press out both 3rd & 4th synchronizer hub assembly and 3rd input gear from input shaft.
10. Remove 3rd gear needle bearing.

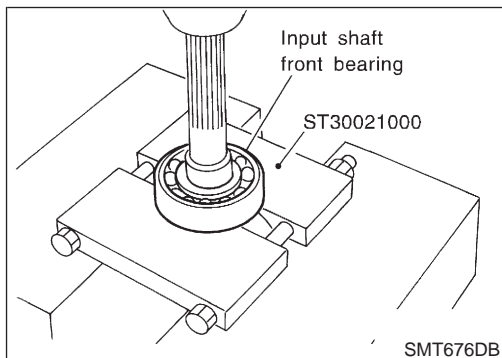

11. Press out input shaft front bearing from input shaft.

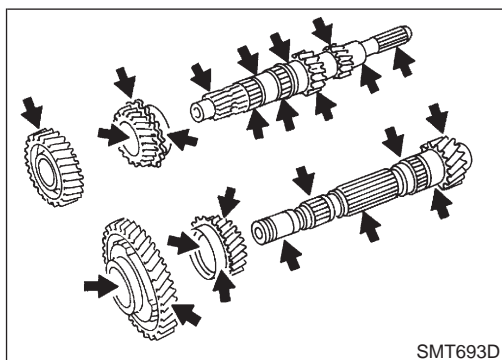


### INSPECTION

#### Input Shaft and Gears

- Check shaft for cracks, wear or bending.
- Check gears for excessive wear, chips or cracks.

NJMT0057


NJMT0057S01

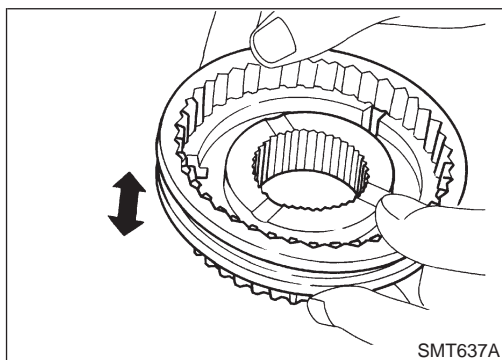

### Synchronizers


- Check spline area of coupling sleeves, hubs and gears for wear or cracks.
- Check baulk rings for cracks or deformation.
- Check insert springs for wear or deformation.

NJMT0057S02

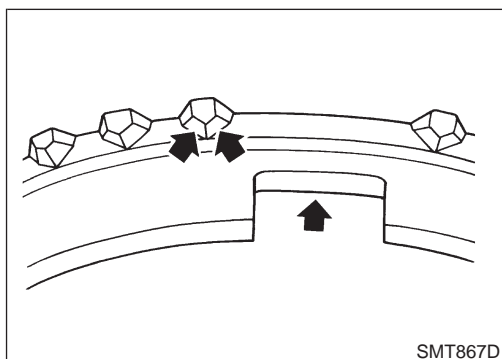


- If any crack, damage, or excessive wear is found on cam face of baulk ring or working face of insert, replace it.

## Input Shaft and Gears (Cont'd)

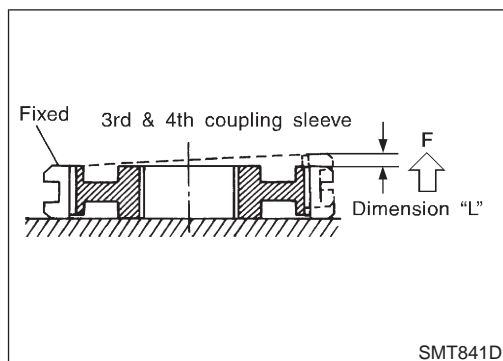


- Measure the movement (play, dimension "L") of 3rd & 4th coupling sleeve with their end fixed and the other end lifted as shown in the figure. If the movement exceeds specification, replace the sleeve.

**Coupling sleeve length "L":**  
Refer to SDS, MT-125.

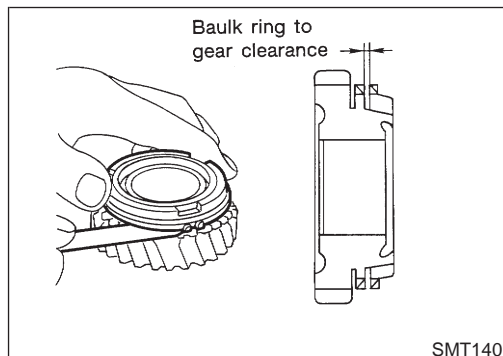

- Measure clearance between baulk ring and gear.


**Clearance between baulk ring and gear:**  
Refer to SDS, MT-125.

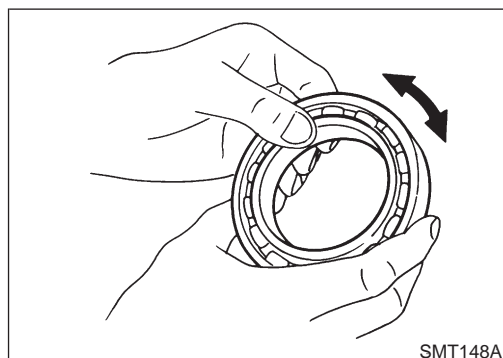

### Bearing

- Make sure bearings roll freely and are free from noise, cracks, pitting or wear.


NJMT0057S03

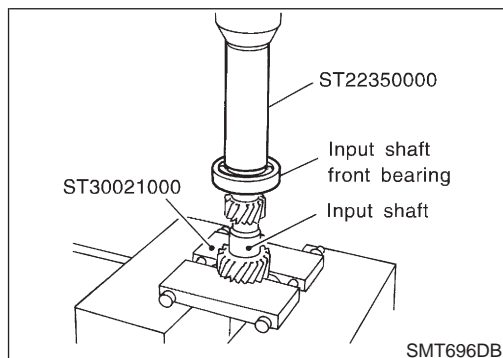

### ASSEMBLY

1. Press on input shaft front bearing.
2. Install 3rd gear needle, 3rd input gear and 3rd gear baulk ring bearing to input shaft.


NJMT0058

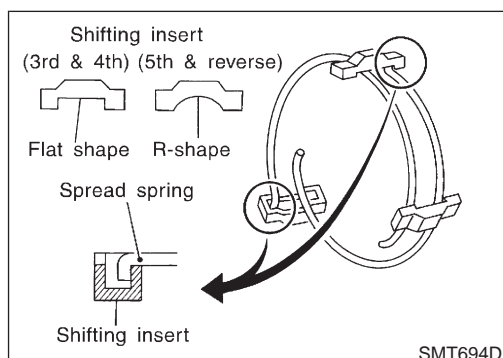


3. Install spread spring, shifting insert, and 3rd & 4th synchronizer hub onto 3rd & 4th coupling sleeve.

- Pay attention to the shape of spread spring and shifting insert for correct assembly.  
Do not install spread spring hook onto the same shifting insert.


**CAUTION:**  
Do not reuse 3rd & 4th synchronizer hub.

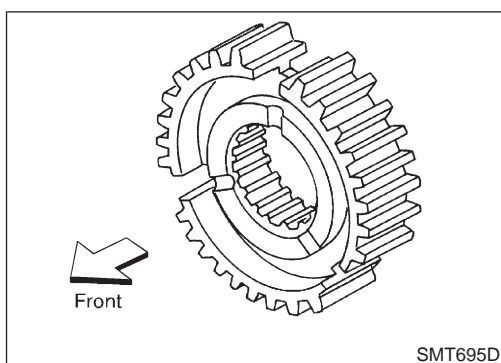


- Install synchronizer hub with its three grooves facing the front side (3rd input gear side).

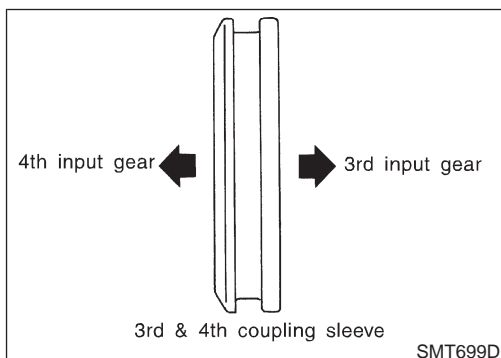

- Install 3rd & 4th coupling sleeve with its chamfered surface facing the 4th input gear side.

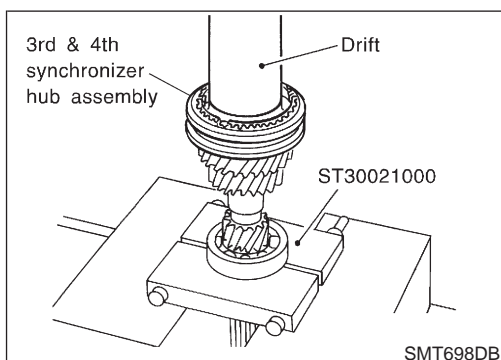

4. Position bearing replacer to the front side of input shaft front bearing.
- Align grooves of shifting insert and 3rd gear baulk ring. Then, press it onto 3rd & 4th synchronizer hub assembly using a drift.
5. Install 4th gear C-ring onto input shaft.

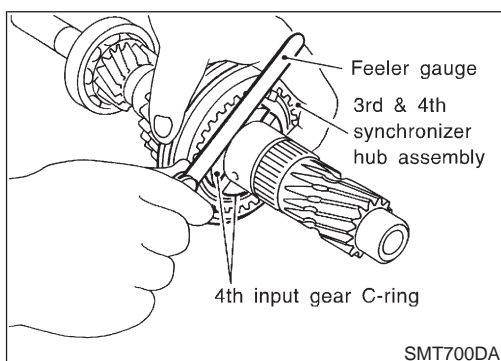


6. Measure the end play of 3rd & 4th synchronizer hub, and check if it is within allowable specification below.

**End play:**  
**0 - 0.06 mm (0 - 0.0024 in)**


7. If not within specification, adjust the end play by changing thickness of 4th input gear C-ring.

**4th input gear C-ring:**  
**Refer to SDS, MT-126.**

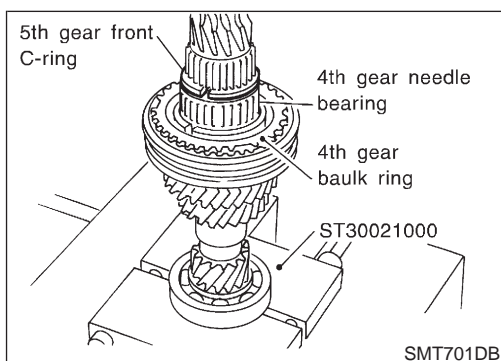


8. Install 4th gear needle bearing, 4th gear baulk ring, and 5th gear front C-ring.
9. Install 4th input gear.

## Input Shaft and Gears (Cont'd)

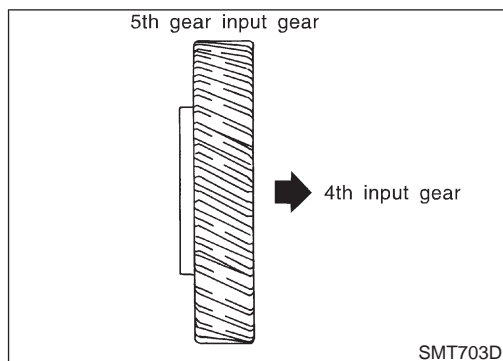


10. Position 5th input gear as shown in the figure, and install it on input shaft.

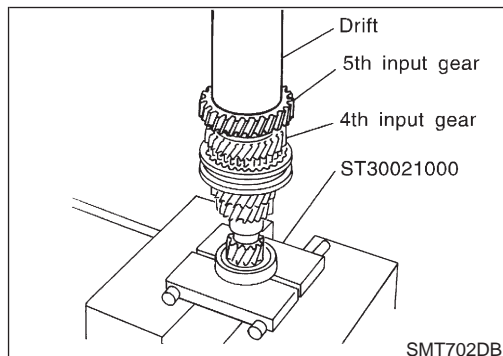

11. Install 5th input gear.

**CAUTION:**  
Do not reuse 5th input gear.

12. Install 5th gear rear C-ring onto input shaft.

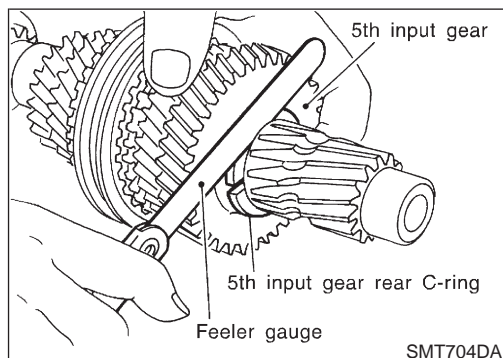


13. Measure the end play of 5th input gear, and check if it is within the allowable specification below.

**End play:**  
**0 - 0.06 mm (0 - 0.0024 in)**

14. If not within specification, adjust the end play by changing thickness of the 5th input gear rear C-ring.

**5th input gear rear C-ring:**  
**Refer to SDS, MT-126.**

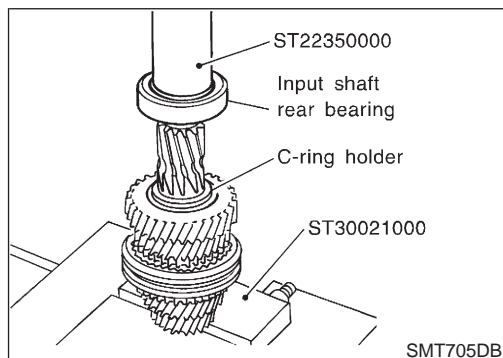


15. Install C-ring holder onto 5th gear rear C-ring.

**CAUTION:**  
Do not reuse C-ring holder.


16. Install input shaft rear bearing.

**CAUTION:**  
Install input shaft rear bearing with its brown surface facing the input gear side.

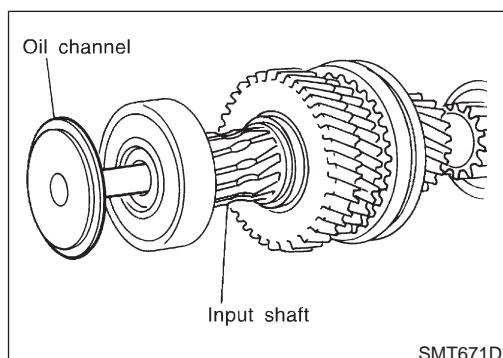

17. Install oil channel onto input shaft.

18. Measure gear end play as a final check. Refer to, MT-64.

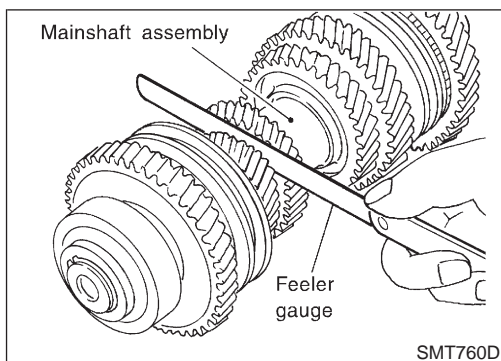


## Mainshaft and Gears


### DISASSEMBLY

NJMT0059


1. Before disassembly, measure gear end play.
  - Gear end play:**
  - Refer to SDS, MT-125.**
  - If end play is not within the specified limit, disassemble and check the parts.

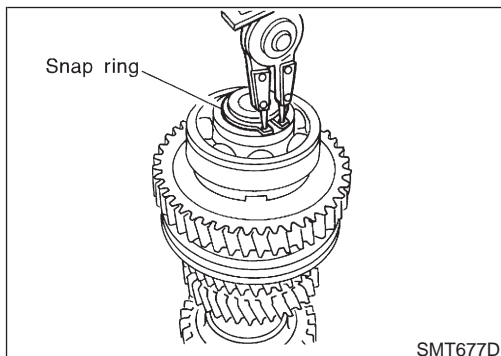


2. Remove snap ring.

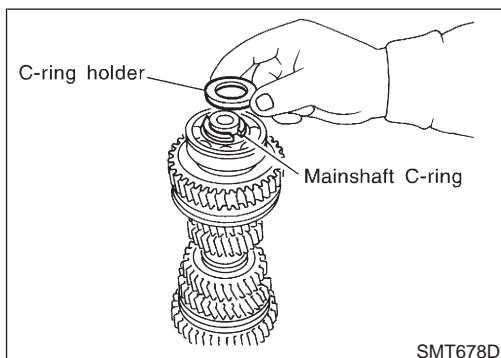

3. Remove C-ring holder and mainshaft C-ring.

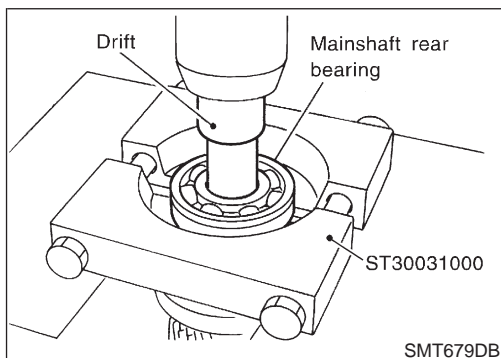


4. Press out mainshaft rear bearing from mainshaft.

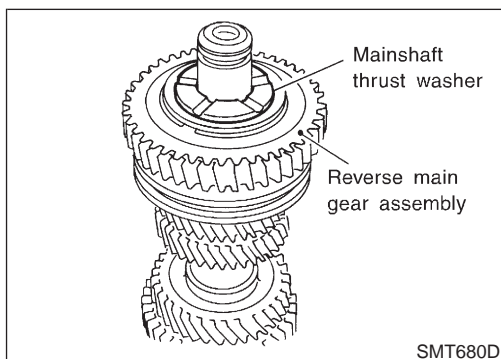


5. Remove mainshaft thrust washer.
6. Remove snap ring from mainshaft. Then, remove reverse main gear assembly, reverse gear needle bearing, and reverse gear baulk ring.


## Mainshaft and Gears (Cont'd)

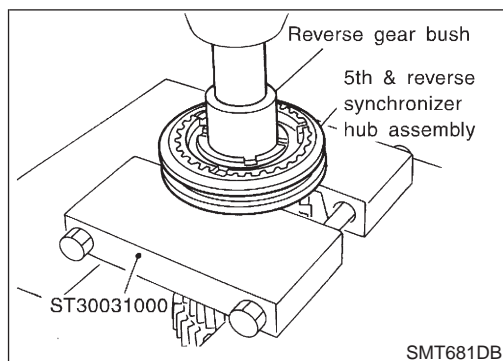


7. Place bearing replacer between 5th & reverse synchronizer hub and 5th main gear, and press out both reverse gear bushing and 5th & reverse synchronizer assembly.
8. Remove 5th main gear, 5th gear baulk ring, and 5th gear needle bearing.

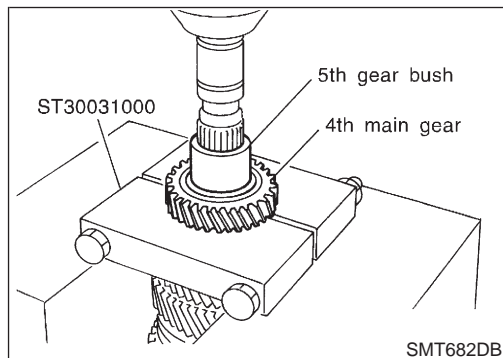


9. Place bearing replacer between 3rd and 4th main gears, and press out both 5th gear bushing and 4th main gear.

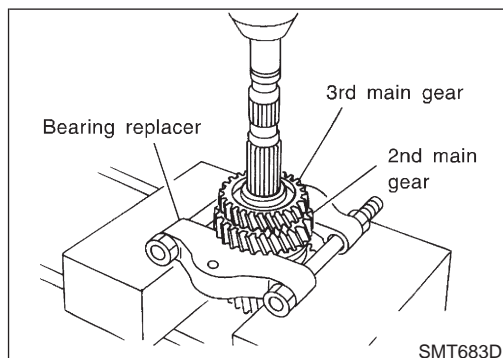

10. Remove mainshaft adjusting shim and spacer.
11. Place bearing replacer between 2nd main gear and 1st & 2nd synchronizer hub, and press out both 3rd and 2nd main gears.

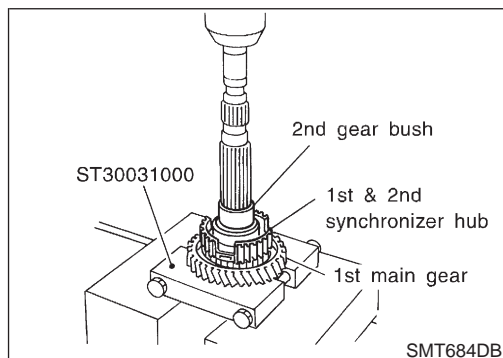

12. Remove 2nd double cone assembly, 2nd gear bushing, and coupling sleeve assembly.
13. Place bearing replacer on 1st gear front side, and press out all of 2nd gear bushing, 1st & 2nd synchronizer hub, 1st main gear, and 1st double cone.
14. Remove 1st gear needle bearing.

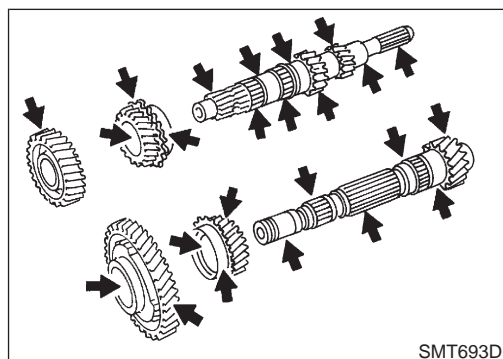


### INSPECTION

#### Mainshaft and Gears

- Check shaft for cracks, wear or bending.
- Check gears for excessive wear, chips or cracks.

NJMT0060


NJMT0060S01

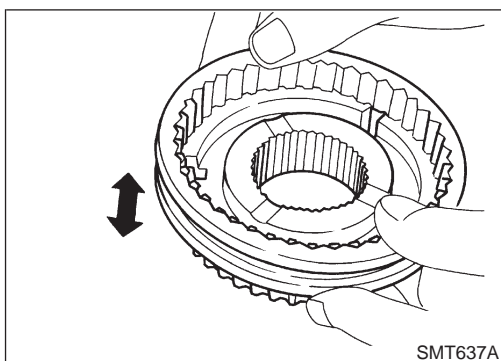


### Synchronizers

NJMT0060S02

- Check spline area of coupling sleeves, hubs and gears for wear or cracks.
- Check baulk rings for cracks or deformation.
- Check insert springs for wear or deformation.

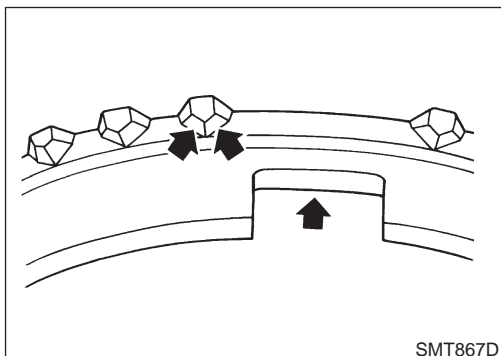


- If any crack, damage, or excessive wear is found on cam face of baulk ring or working face of insert, replace it.

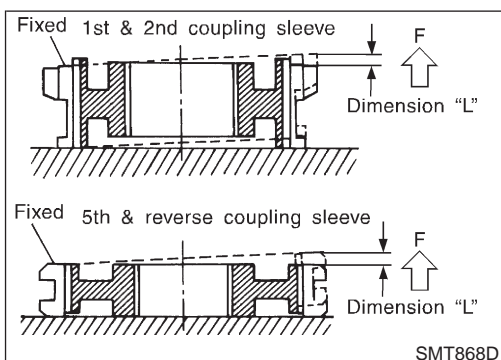


- Measure the movement (play, dimension "L") of 1st & 2nd coupling sleeve and 5th & reverse coupling sleeve with their end fixed and the other end lifted as shown in the figure. If the movement exceeds specification, replace the sleeve.

**Coupling sleeve length "L":**  
**Refer to SDS, MT-125.**

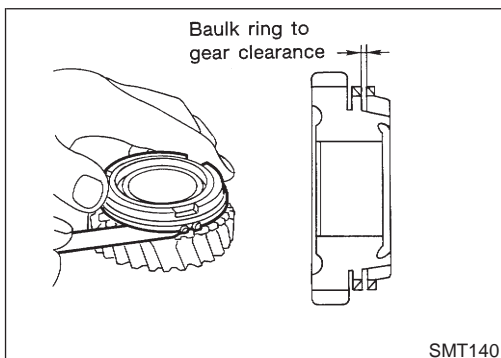

- Measure clearance between baulk ring and gear.  
**Clearance between baulk ring and gear:**  
**Refer to SDS, MT-125.**

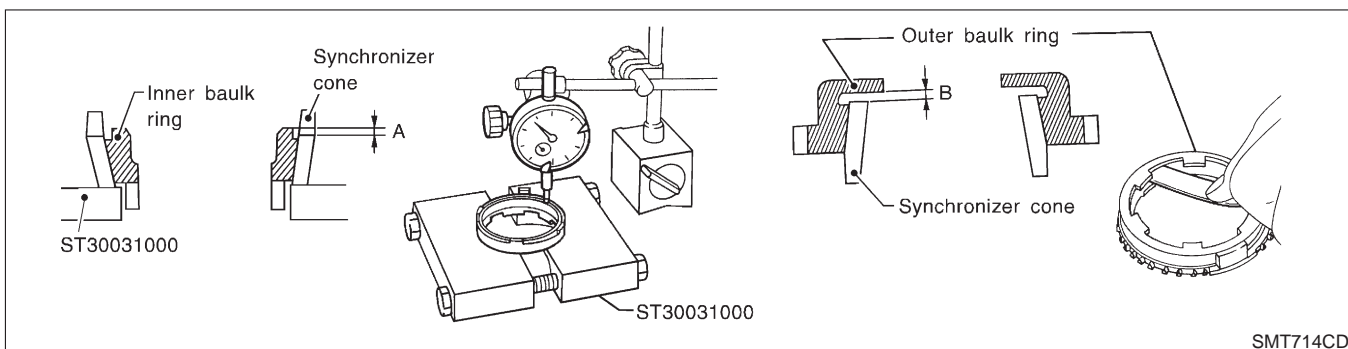



- Measure wear of 1st and 2nd baulk ring.
- a) Place baulk rings in position on synchronizer cone.
- b) While holding baulk ring against synchronizer cone as far as it will go, measure dimensions "A" and "B".

**Standard:**


**A 0.6 - 0.8 mm (0.024 - 0.031 in)**

**B 0.6 - 1.1 mm (0.024 - 0.043 in)**

**Wear limit:**

**0.2 mm (0.008 in)**


- If dimension "A" or "B" is smaller than the wear limit, replace outer baulk ring, inner baulk ring and synchronizer cone as a set.

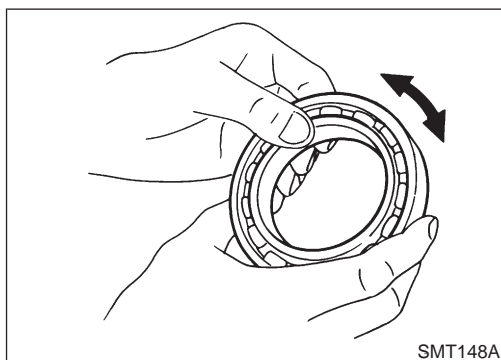

### Bearing

- Make sure bearings roll freely and are free from noise, cracks, pitting or wear.

NJMT0060S03

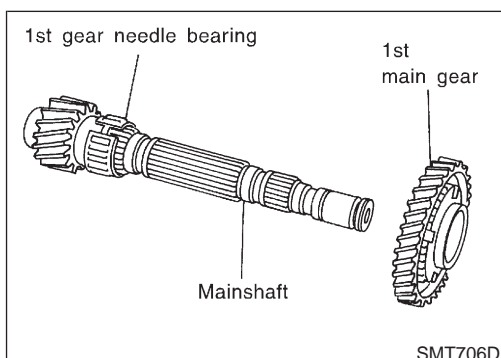

### ASSEMBLY

1. Install 1st gear needle bearing and 1st main gear onto mainshaft.
2. Install 1st double cone assembly onto mainshaft.


NJMT0061



## REPAIR FOR COMPONENT PARTS


RS5F70A

Mainshaft and Gears (Cont'd)

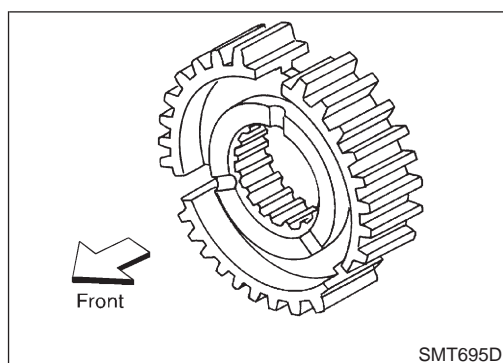


3. Install 1st & 2nd synchronizer hub with its three grooves facing the front side (1st main gear side) onto mainshaft.


**CAUTION:**  
Do not reuse 1st & 2nd synchronizer hub.

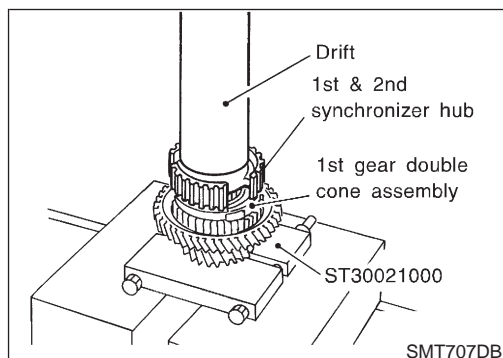


4. Install 1st & 2nd synchronizer hub.

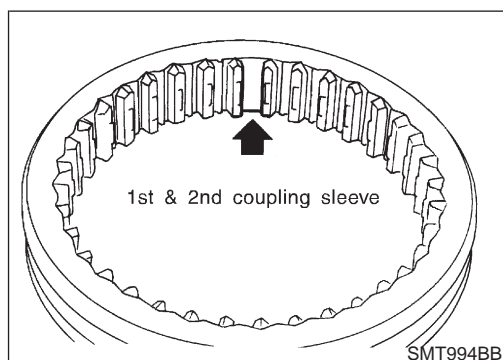

5. Install insert spring onto 1st & 2nd coupling sleeve.

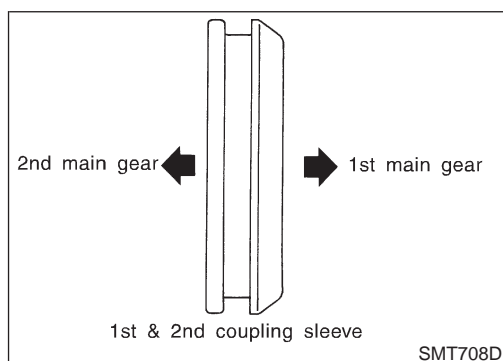


6. Install 1st & 2nd coupling sleeve with its chamfered surface facing the 1st main gear side onto 1st & 2nd synchronizer hub.

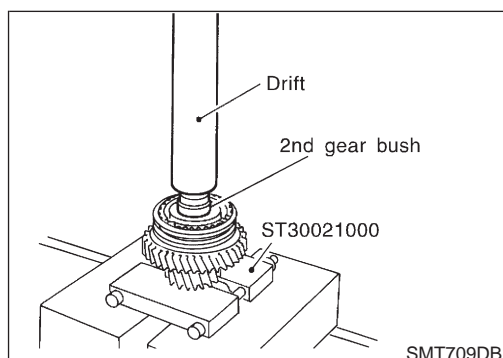


7. Install 2nd gear bushing with its flange surface facing 1st & 2nd synchronizer hub side.

## Mainshaft and Gears (Cont'd)

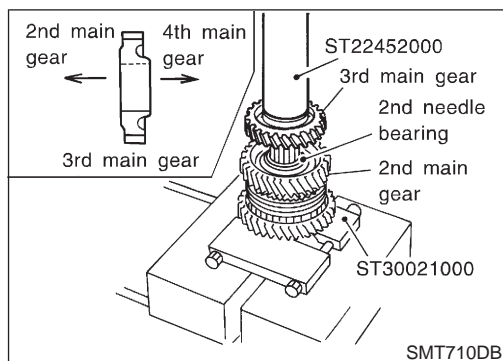


8. Install 2nd needle bearing, 2nd double cone assembly, and 2nd main gear onto mainshaft.
9. Position 3rd main gear as shown in the figure, and install it.

**CAUTION:**  
Do not reuse 3rd main gear.

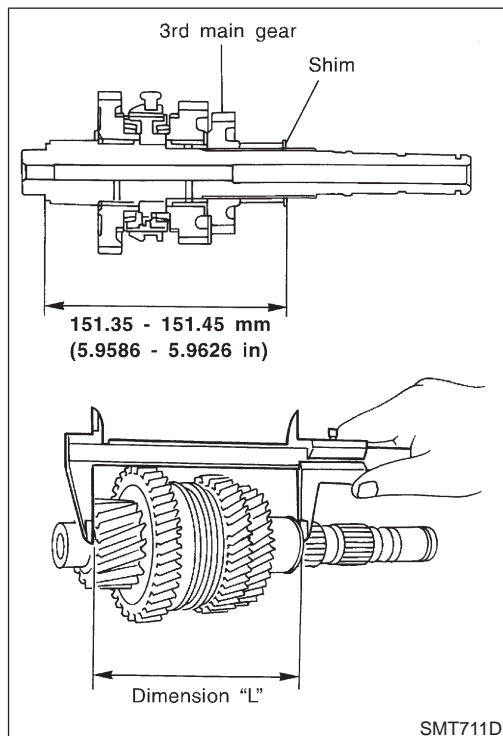


10. Install spacer and mainshaft adjusting shim onto mainshaft.
11. Select a mainshaft adjusting shim suitable to satisfy the following specification of dimension "L" and install it onto mainshaft.

**Specification of dimension "L":**  
151.35 - 151.45 mm (5.9586 - 5.9626 in)  
**Mainshaft adjusting shims:**  
Refer to SDS, MT-129.

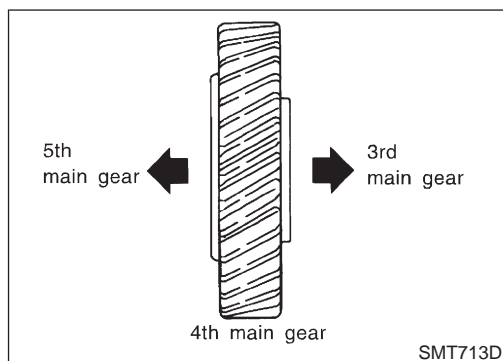


12. Position 4th main gear as shown in the figure, and install it onto mainshaft.

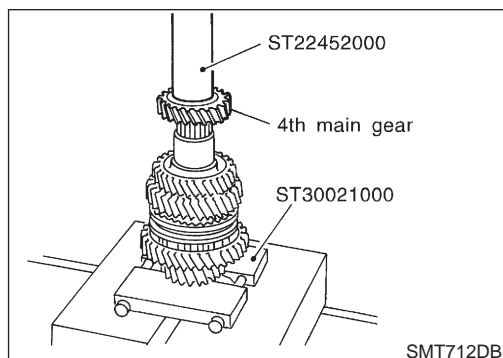


13. Install 4th main gear onto mainshaft.


**CAUTION:**  
Do not reuse 4th main gear.

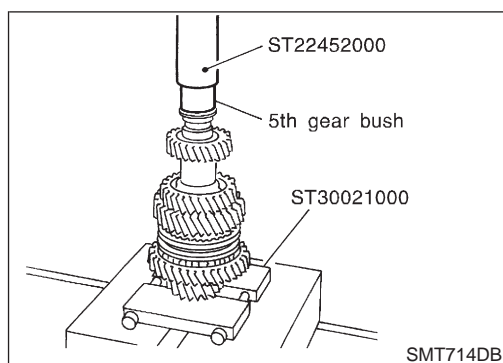

14. Install 5th gear bushing with its flange surface facing the 4th main gear side.

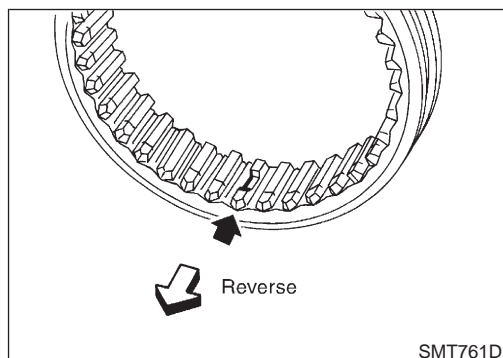


15. Install 5th needle bearing, 5th main gear, and 5th gear baulk ring onto mainshaft.

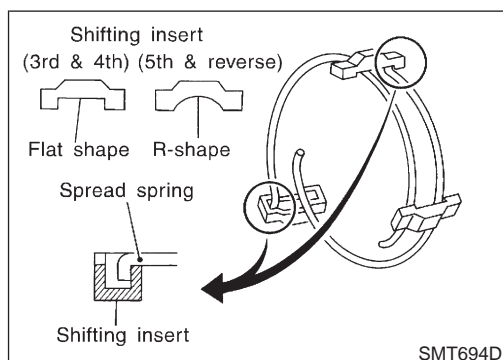


16. Being careful of the following points, install spread spring, shifting insert, and 5th & reverse synchronizer hub onto 5th & reverse coupling sleeve.

- Pay attention to the shape of spread spring and shifting insert for correct assembly. Do not install spread spring hook onto the same shifting insert.

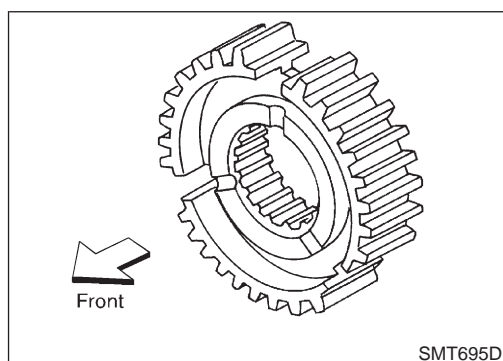


- Install synchronizer hub with its three grooves facing the front side (5th main gear side).

**CAUTION:**  
Do not reuse 5th & reverse synchronizer hub.

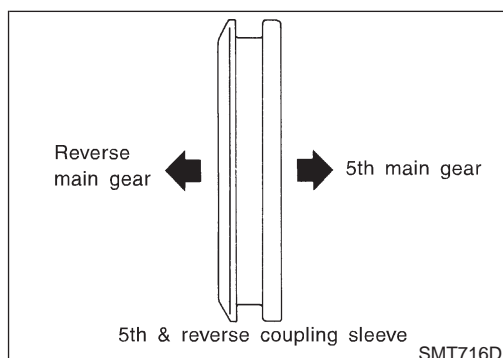


- Install 5th & reverse coupling sleeve with its chamfered surface facing the reverse main gear side.

## Mainshaft and Gears (Cont'd)

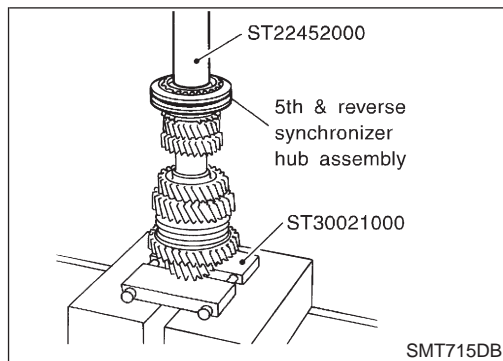


17. Install 5th & reverse synchronizer hub assembly.

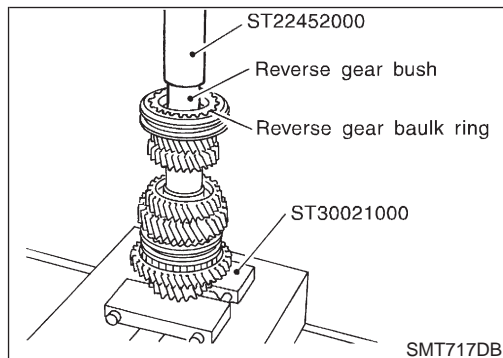

18. Install reverse gear baulk ring.

19. Install reverse gear busing.


20. Install reverse gear needle bearing.

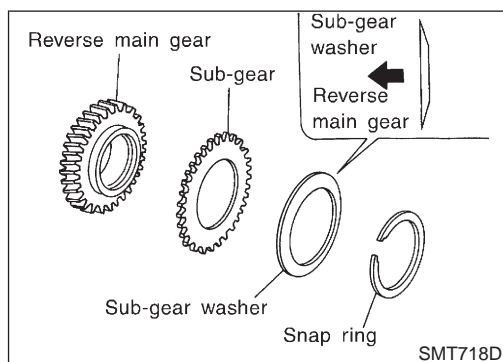

21. Install sub-gear, sub-gear washer, and snap ring onto reverse main gear.

**CAUTION:**

- Pay attention to direction of sub-gear washer.
- Do not reuse snap ring.

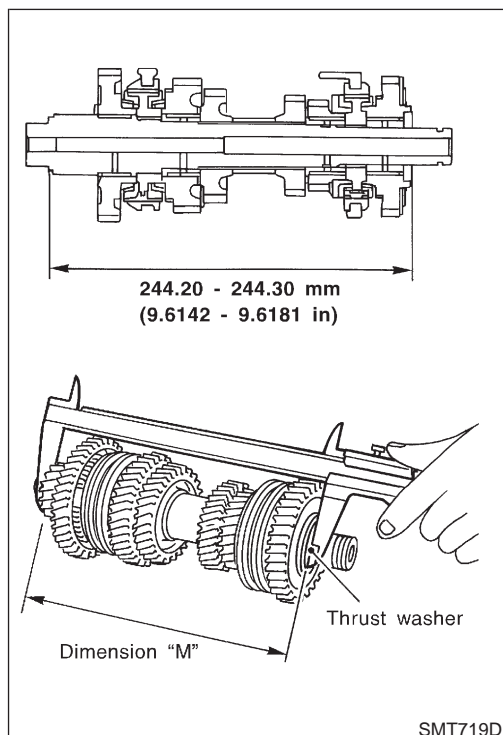

22. Install reverse main gear assembly onto mainshaft.


23. Select a thrust washer suitable to satisfy the following specification of dimension "M" (as shown in the figure), and install it onto mainshaft.

**Specification of dimension "M":**


**244.20 - 244.30 mm (9.6142 - 9.6181 in)**

**Available mainshaft thrust washers:**

**Refer to SDS, MT-130.**

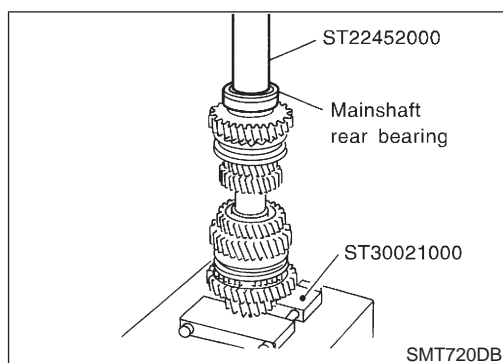

24. Install mainshaft rear bearing.

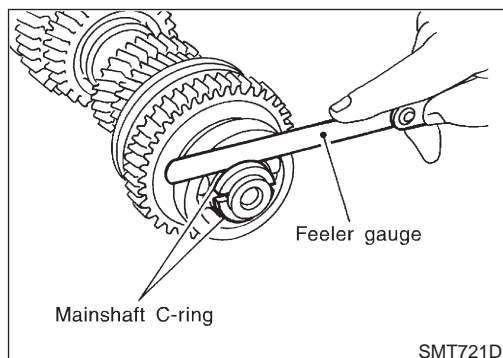

25. Install mainshaft C-ring.


26. Using feeler gauge, measure the end play of mainshaft rear bearing, and check if it satisfies the following specification.

**End play:**


**0 - 0.06 mm (0 - 0.0024 in)**

**Mainshaft C-rings:**

**Refer to SDS, MT-127.**

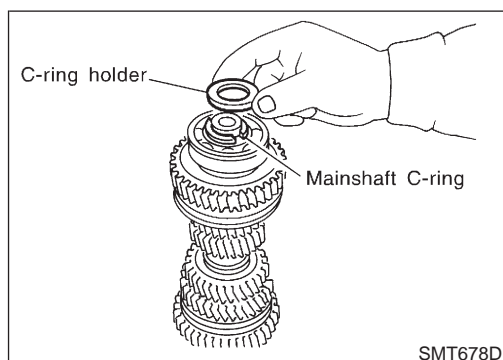


27. Install C-ring holder.

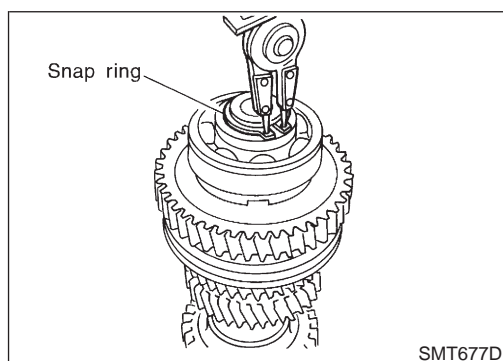

28. Install snap ring.

29. Measure gear end play as a final check. Refer to, MT-69.

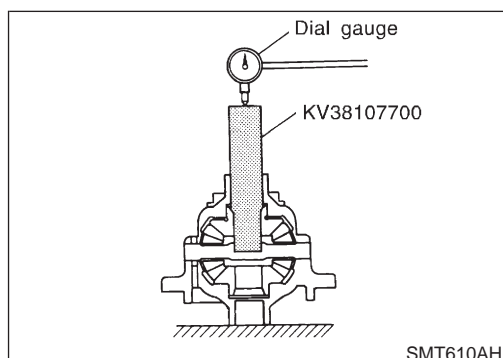


## Final Drive

### PRE-INSPECTION

● Check the clearance between side gear and differential case as follows. NJMT0062

1. Clean final drive assembly sufficiently to prevent side gear thrust washer, differential case, side gear, and other parts from sticking by gear oil.

## Final Drive (Cont'd)

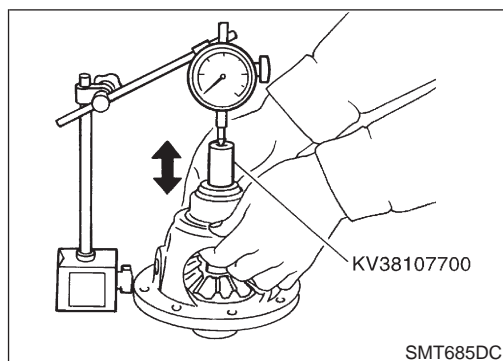


2. Upright the differential case so that the side gear to be measured faces upward.
3. Place final drive adapter and dial gauge onto side gear. Move side gear up and down, and measure the clearance.


**Clearance between side gear and differential case:  
0.1 - 0.2 mm (0.004 - 0.008 in)**

4. If not within specification, adjust the clearance by changing thrust washer thickness.
5. Turn differential case upside down, and measure the clearance between side gear and differential case on the other side in the same way.


### DISASSEMBLY

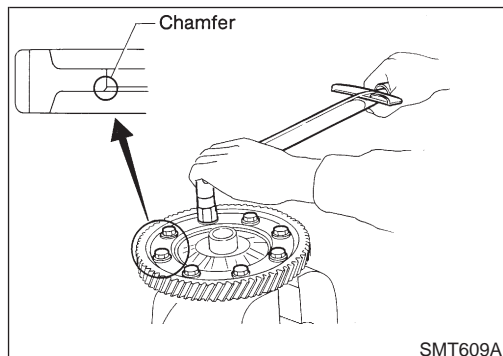


1. Remove mounting bolts. Then, separate the final gear from differential case. NJMT0063
2. Make a notch and remove speedometer drive gear using a scraper or other suitable tool.
- **Bearing replacer cannot be positioned unless speedometer drive gear is removed.**

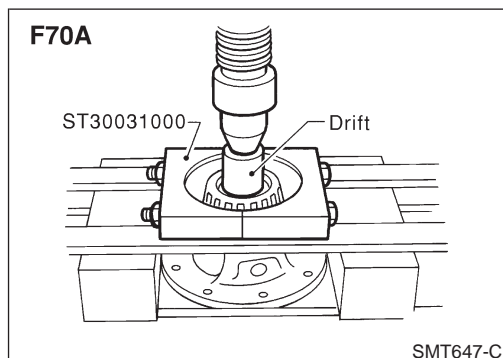


3. Remove differential side bearing of final gear side.
4. Turn differential case upside down, and remove differential side bearing of speedometer drive gear side.
- **Be careful not to mix up the differential side bearings.**
5. Remove speedometer stopper.

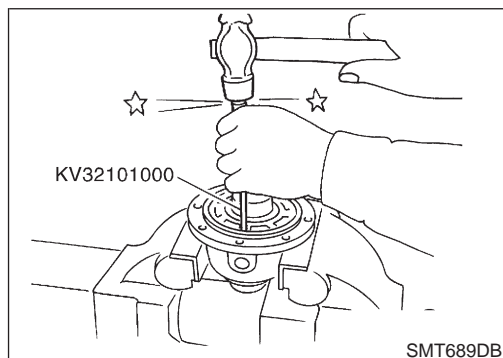

6. Remove lock pins from pinion mate shaft.

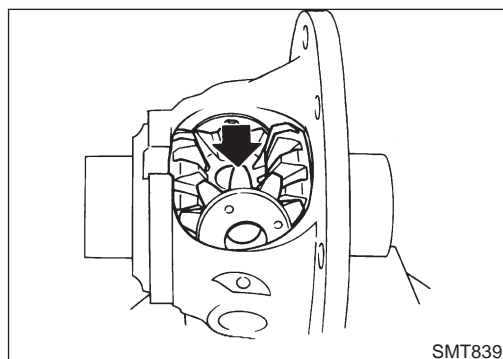

7. Remove pinion mate shaft.
8. Rotate pinion mate gear, and remove pinion mate gear, pinion mate thrust washer, side gear, and side gear thrust washer from differential case.

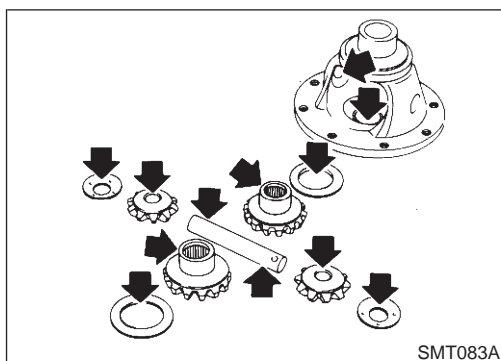


### INSPECTION

#### Gear, Washer, Shaft and Case

NJMT0064

NJMT0064S01


- Check mating surfaces of differential case, side gears and pinion mate gears.
- Check washers for wear.

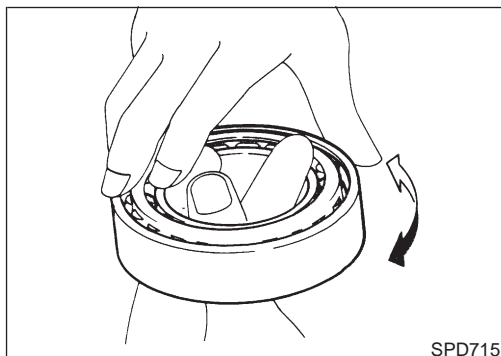

### Bearing

NJMT0064S03


- Make sure bearings roll freely and are free from noise, cracks, pitting or wear.
- **When replacing tapered roller bearing, replace outer and inner race as a set.**

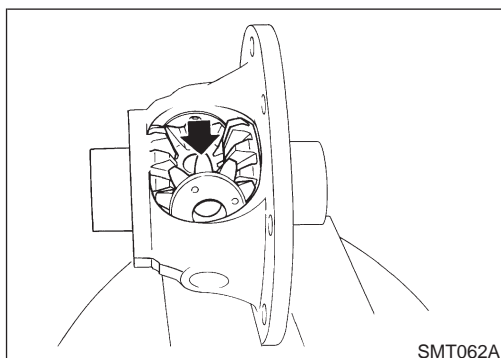


### ASSEMBLY

NJMT0065

1. Apply gear oil to sliding area of differential case, each gear, and thrust washer.
2. Install side gear thrust washer and side gear into differential case.
3. Position pinion mate gear and pinion mate thrust washer diagonally, and install them into differential case while rotating.

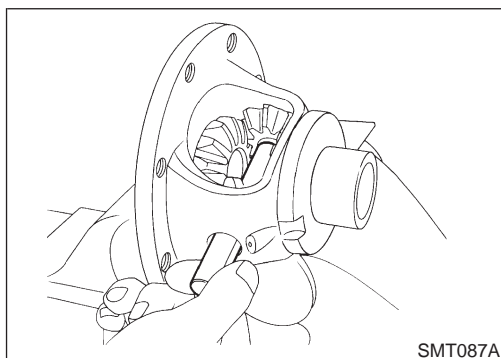

4. Insert pinion mate shaft into differential case.

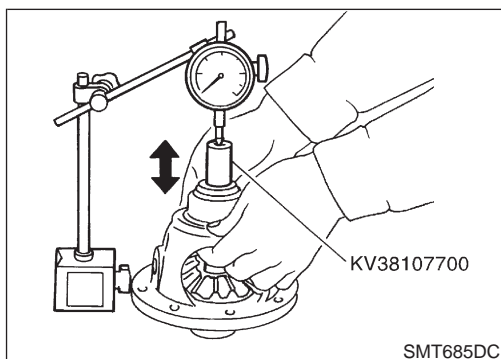

5. Upright the differential case so that its side gear to be measured faces upward.
6. Place preload adapter and dial gauge onto side gear. Move side gear up and down, and measure the clearance.
7. Turn differential case upside down, and measure the clearance between side gear and differential case on the other side in the same way.


**Clearance of side gear and differential case:**

**0.1 - 0.2 mm (0.004 - 0.008 in)**


**Differential side gear thrust washers:**

**Refer to SDS, MT-130.**


## Final Drive (Cont'd)

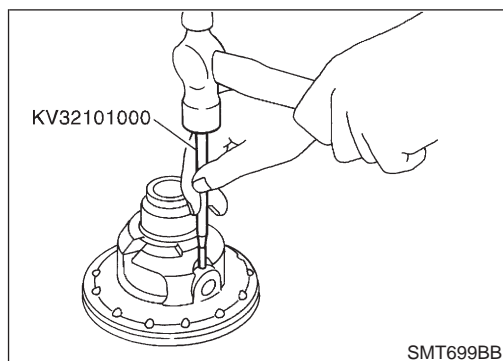


8. Install retaining pin.
  - **Make sure that retaining pin is flush with case.**

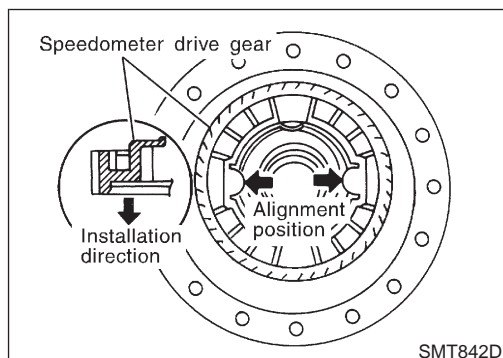

9. Align and install speedometer drive gear into differential case.
10. Install speedometer stopper.

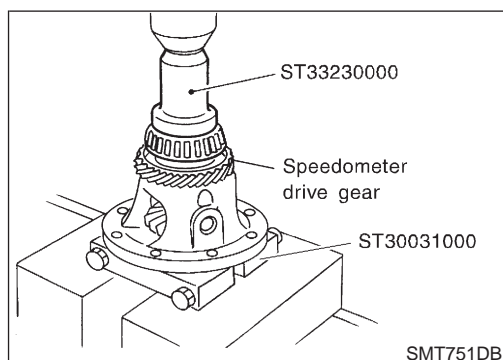


11. Install differential side bearing.
12. Turn differential case upside down, and install another differential side bearing on the other side in the same way.

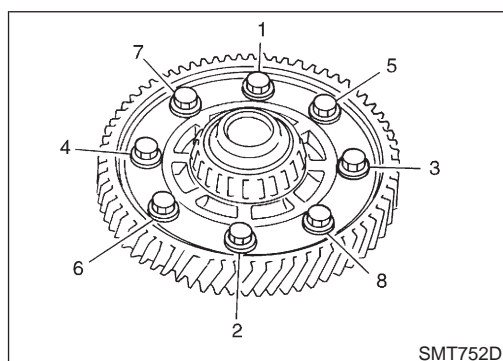

13. Install differential gear into differential case. Apply sealant onto mounting bolts, and tighten them in order as shown in the figure with specified torque.

**Tightening torque:**  
Refer to MT-57.



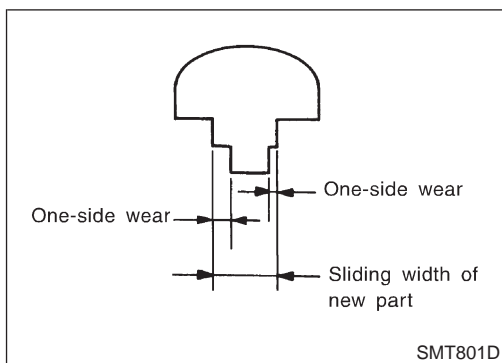


## Shift Control Components

### INSPECTION

=NJMT0066


- Check if the width of shift fork hook (sliding area with coupling sleeve) is within allowable specification below.

Item	One-side wear specification	Sliding width of new part
1st & 2nd	0.2 mm (0.008 in)	7.80 - 7.93 mm (0.3071 - 0.3122 in)
3rd & 4th	0.2 mm (0.008 in)	7.80 - 7.93 mm (0.3071 - 0.3122 in)
5th & reverse	0.2 mm (0.008 in)	7.80 - 7.93 mm (0.3071 - 0.3122 in)

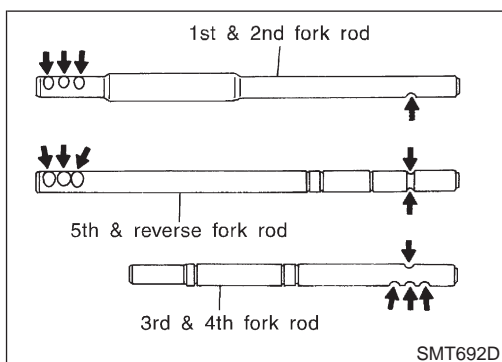

- Check if shift check groove of fork rod or 5th & reverse check groove is worn, or has any other abnormalities.

## Clutch Housing

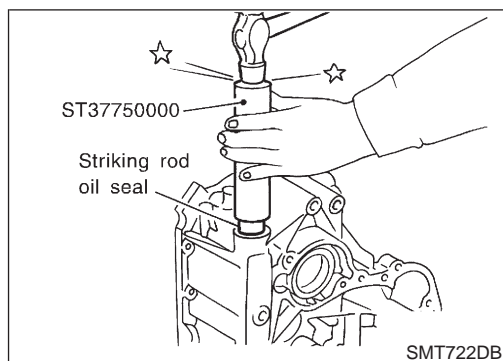


### Clutch Housing

NJMT0067S01


1. Hammer the striking rod oil seal into clutch housing as far as it will go.

**CAUTION:**  
Do not reuse striking rod oil seal.

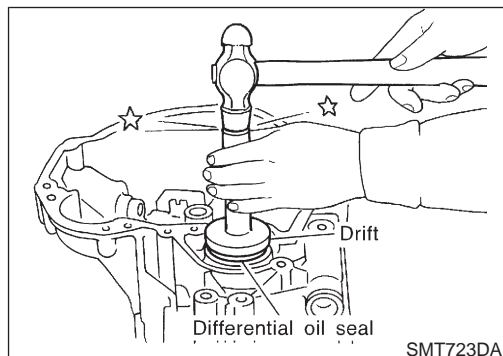


2. Hammer the differential oil seal into clutch housing until it becomes flush with clutch housing end face.

**CAUTION:**  
Do not reuse differential oil seal.

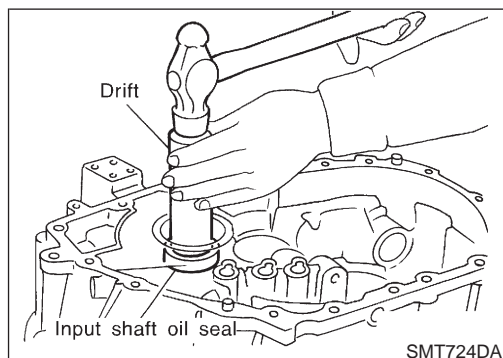


3. Hammer input shaft oil seal into clutch housing as far as it will go.

**CAUTION:**  
Do not reuse input shaft oil seal.

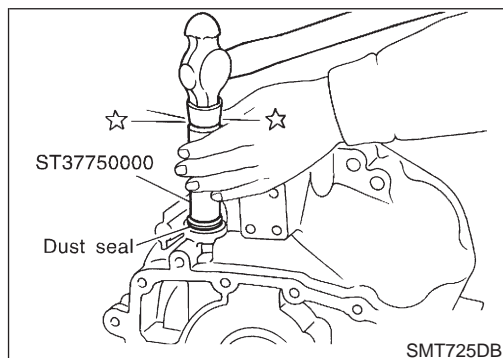


4. Hammer the dust seal into clutch housing as far as it will go.

**CAUTION:**  
Do not reuse dust seal.

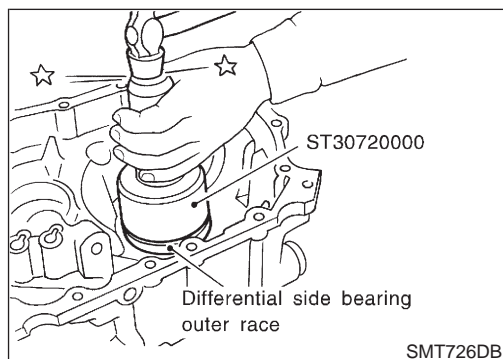


5. Install outer race of differential side bearing.

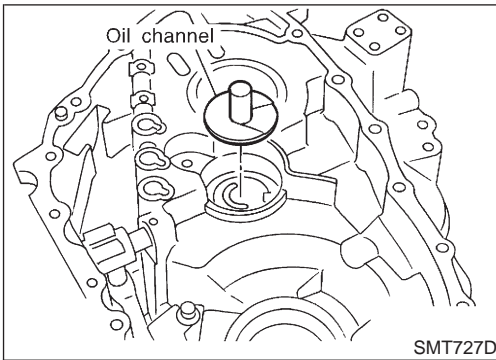


6. Install new oil channel (mainshaft).


**CAUTION:**  
Pay attention to installation direction of oil channel.

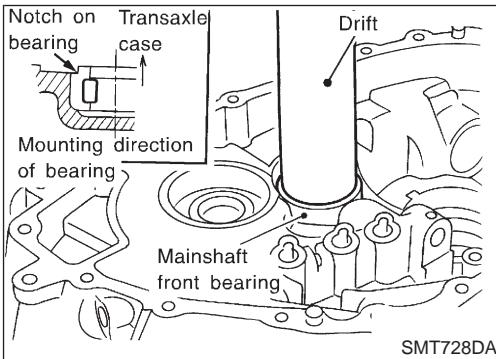

7. Align the notches on mainshaft front bearing and transaxle case. Then, install mainshaft front bearing.

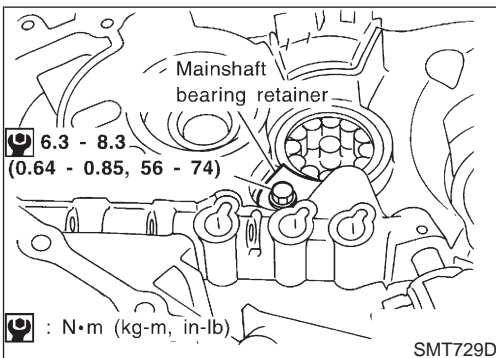


8. Install mainshaft bearing retainer, and tighten bolts with specified torque.

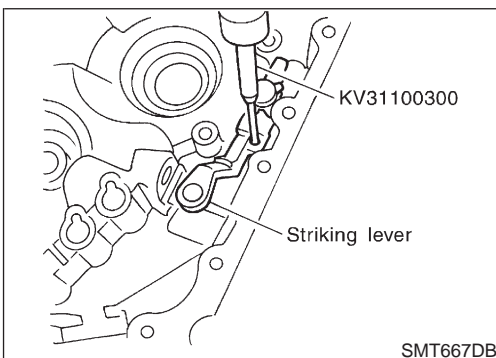

9. Attach boot, striking rod, and striking lever to clutch housing. And install retaining pin for selector lever.

**CAUTION:**


- Before installing striking rod, wrap the end with a vinyl tape or the like to prevent oil seal from being damaged.
- Do not reuse retaining pin.

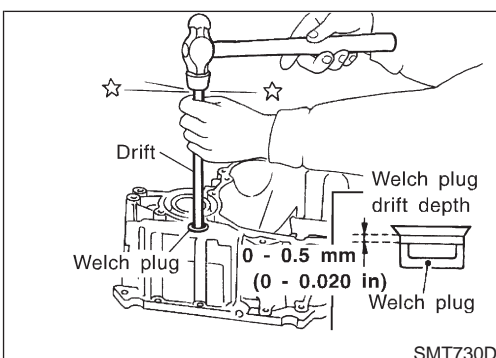


10. Hammer the welch plug (striking lever side) with a general-purpose drift [OD: 12 mm (0.47 in)].

**CAUTION:**  
Do not reuse welch plug.

## Clutch Housing (Cont'd)

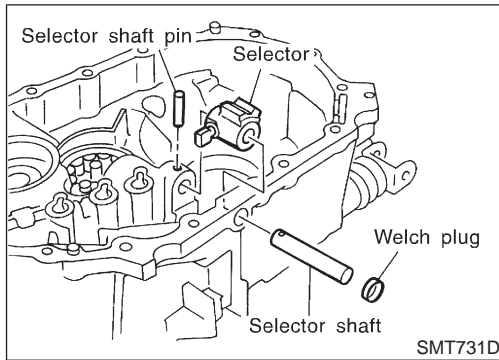


11. Install selector, selector shaft, and selector shaft pin into clutch housing.

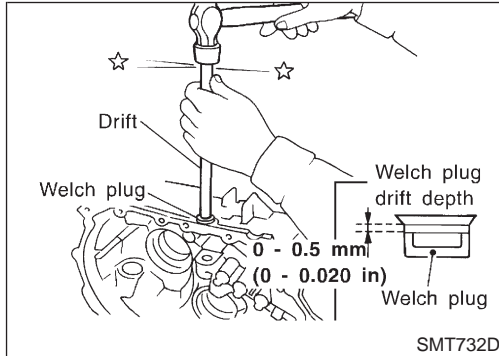


12. Hammer the welch plug (selector shaft side) with a general-purpose drift [OD: 12 mm (0.47 in)].

**CAUTION:**  
Do not reuse welch plug.

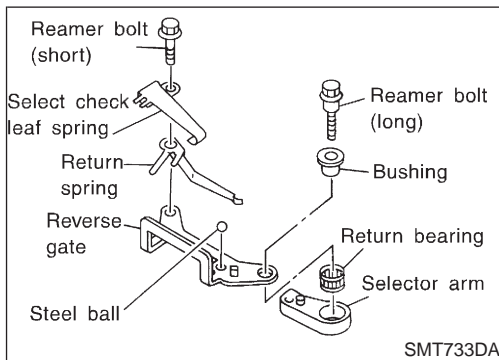



13. Install select check leaf spring, return spring, steel ball, reverse gate, selector arm, bushing, and return bearing. Then, tighten two reamer bolts with specified torque.

**CAUTION:**  
Use correct reamer bolts for each installation point, because each bolt has a different length.

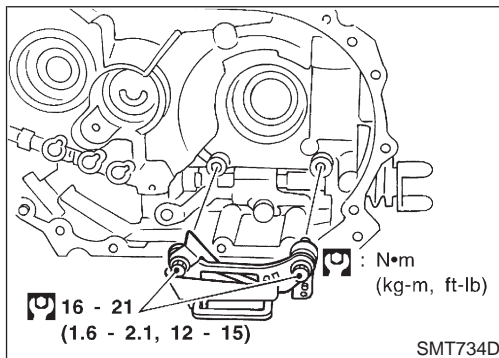

14. Install oil pocket.

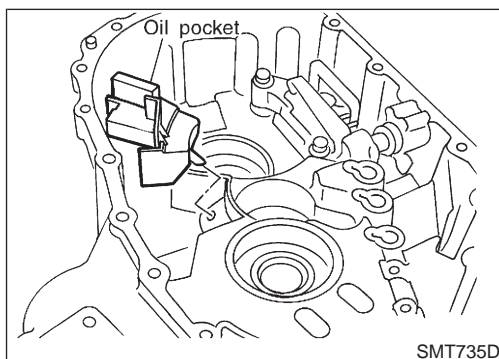


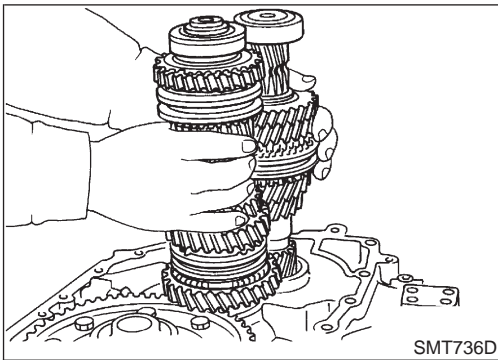

15. Install differential assembly, input shaft assembly, and main shaft assembly into clutch housing.

**CAUTION:**

Be careful not to damage input shaft oil seal during installation of input shaft assembly.

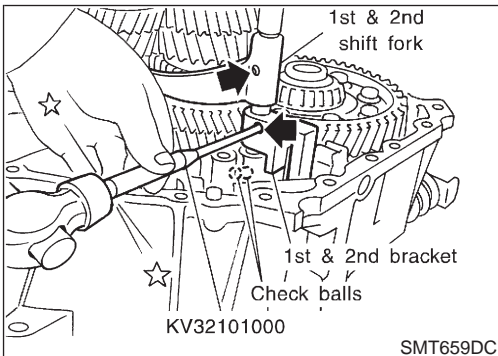

16. Install 5th & reverse shift fork.


17. Install 1st & 2nd shift fork, bracket, and fork rod.

18. Install retaining pin for 1st & 2nd bracket.

**CAUTION:**

Do not reuse retaining pin.

19. Install two check balls.

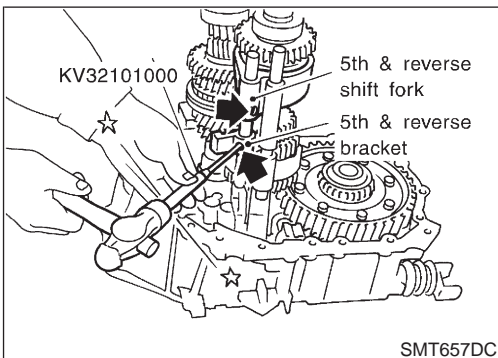

20. Install interlock pin into 5th & reverse fork rod.

21. Install reverse switch bracket, 5th & reverse bracket, and fork rod.

22. Install retaining pin for 5th & reverse shift fork and reverse switch bracket.


**CAUTION:**

Do not reuse retaining pin.

23. Install 5th & reverse bracket stopper ring.

**CAUTION:**

Do not reuse stopper pin.

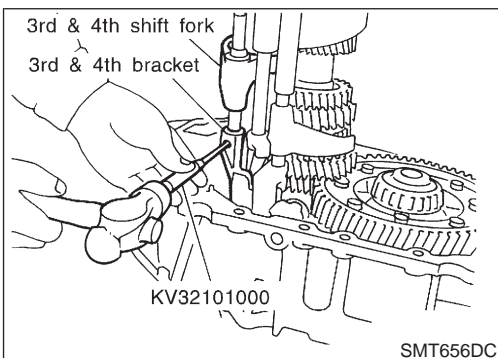


24. Install check ball and interlock plunger.

25. Install 3rd & 4th shift fork, bracket, and fork rod.

26. Install 3rd & 4th bracket retaining pin.

**CAUTION:**

Do not reuse retaining pin.

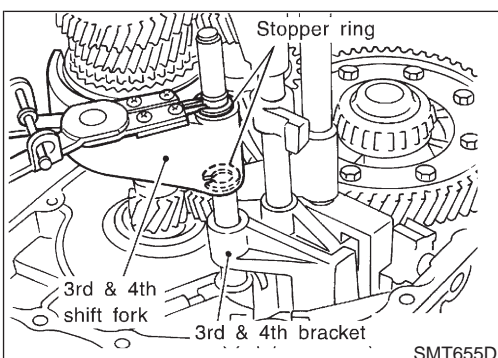

27. Install 3rd & 4th shift fork stopper ring.

**CAUTION:**

Do not reuse stopper ring.


28. Install check ball, check pin, and check spring, and apply Three Bond TB1215, Loctite Part No. 51813 or equivalent onto check plug. Then, tighten it with specified torque.

**Tightening torque:**


Refer to MT-56.

## Transaxle Case


NJMT0067S02

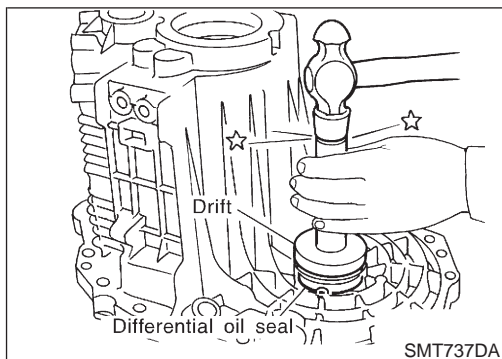

1. Insert differential oil seal into differential case until it becomes flush with case end face.

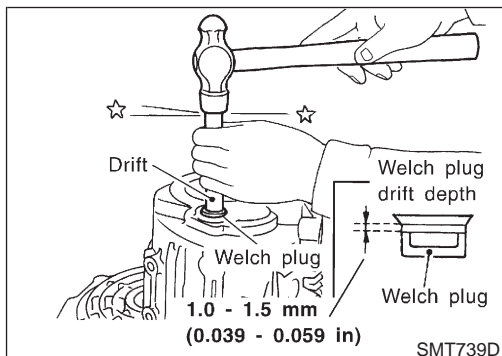

2. Install welch plug into transaxle case.

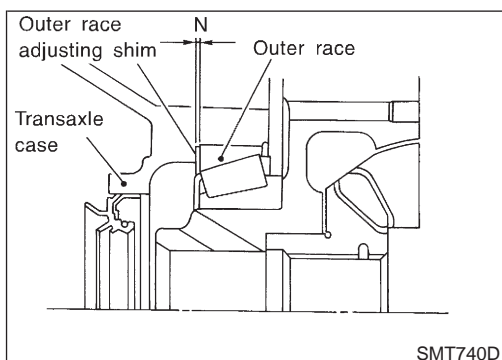

3. Calculate dimension "N" (thickness of adjusting shim) using the following procedure to satisfy specification of end play for differential side bearing.

**End play: 0.15 - 0.21 mm (0.0059 - 0.0083 in)**

**Dimension "N" = (N1 - N2) + End play**


**N: Thickness of adjusting shim**

**N1: Distance between clutch housing case end face and mounting face of adjusting shim**


**N2: Distance between differential side bearing and transaxle case**

**Differential side bearing adjusting shims:**


**Refer to SDS, MT-131.**

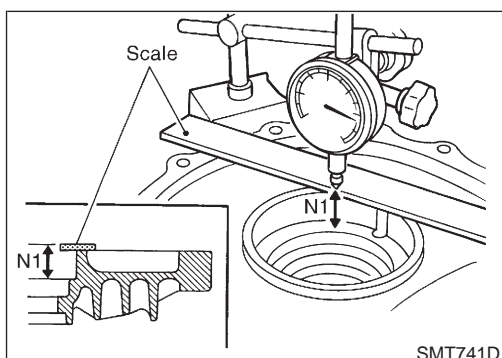


- a. Using dial gauge and scale, measure dimension "N1" between clutch housing case end face and mounting face of adjusting shim.

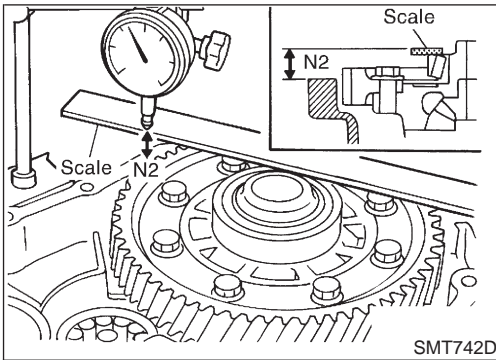

- b. Install outer race onto differential side bearing on final gear side. Holding lightly the outer race horizontally by hand, rotate final gear five times or more (for smooth movement of bearing roller).
- c. Using dial gauge and scale as shown in the figure, measure dimension "N2" between differential side bearing outer race and transaxle case end face.

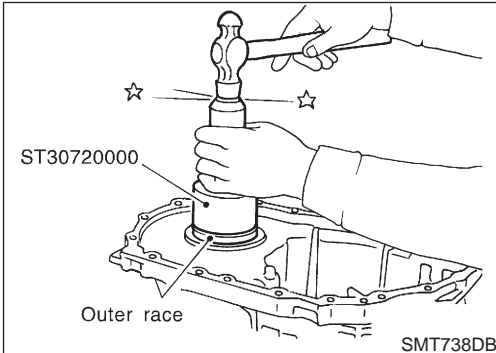

4. Install selected shim and bearing outer race.

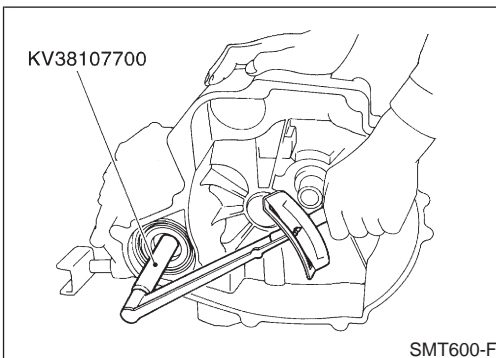


5. Measure turning torque of final drive assembly.

### Turning torque of final drive assembly

#### (New bearing):

**2.9 - 6.9 N-m (30 - 70 kg-cm, 26 - 61 in-lb)**

- When old bearing is used again, turning torque will be slightly less than the above.
- Make sure torque is close to the specified range.
- Changes in turning torque of final drive assembly per revolution should be within 1.0 N-m (10 kg-cm, 8.7 in-lb) without binding.

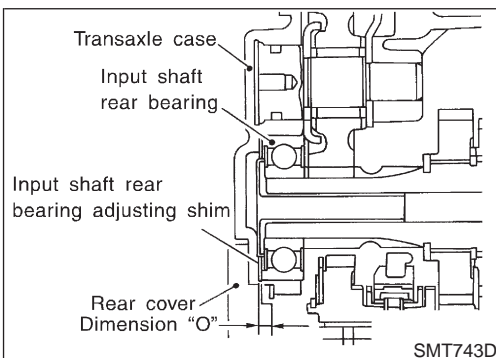

6. Calculate dimension "O" (thickness of adjusting shim) using the following procedure to satisfy specification of end play for input shaft rear bearing.

**End play: 0 - 0.06 mm (0 - 0.0024 in)**

**Dimension "O" = (O1 - O2) + End play**

**O: Thickness of adjusting shim**

**O1: Distance between transaxle case end face and mounting face of adjusting shim**


**O2: Distance between clutch housing case end face and end face of input shaft rear bearing**

**Input shaft rear bearing adjusting shims:**


**Refer to SDS, MT-128.**




Transaxle Case (Cont'd)

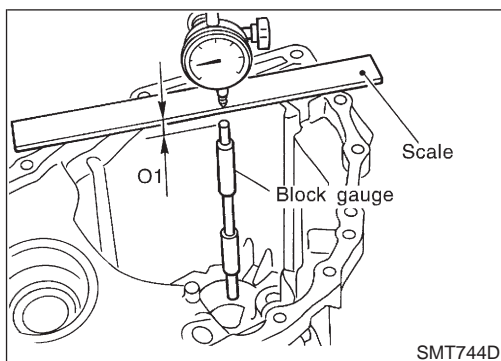


- a. Using block gauge, scale, and dial gauge, measure dimension "O1" between transaxle case end face and mounting face of adjusting shim.

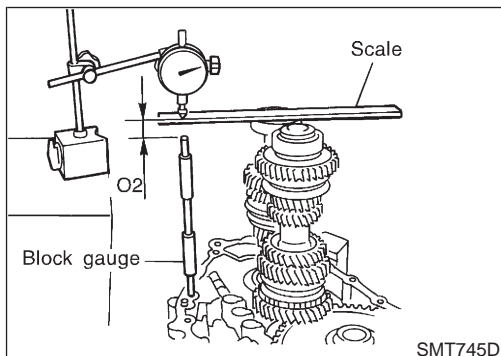


- b. Using gauge block, scale, and dial gauge as shown in the figure, measure dimension "O2" between clutch housing case end face and end face of input shaft rear bearing.
7. Install selected input shaft rear bearing adjusting shim onto input shaft.

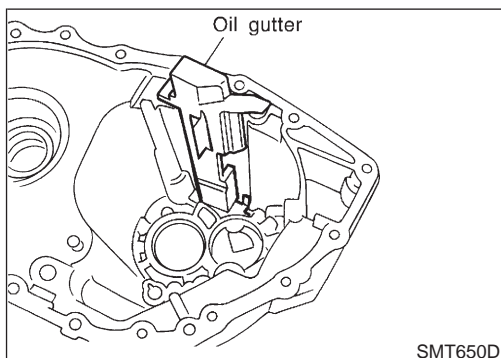

8. Install oil gutter into transaxle case.

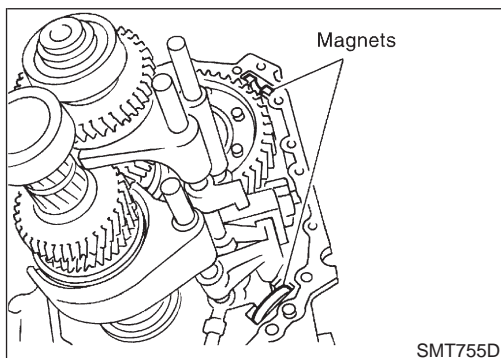


9. Install two magnets.

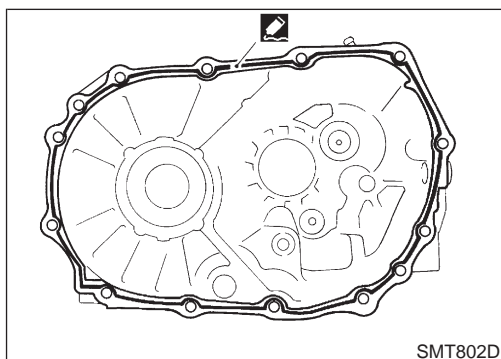


10. Clean mating surfaces of clutch housing and transaxle case. Check for cracks and damage. Then, apply Three Bond TB1215, Loctite Part No. 51813 or equivalent.



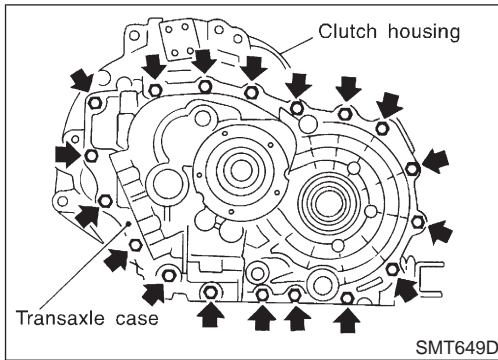

11. Install transaxle case onto clutch housing, and tighten mounting bolts with specified torque.


**Tightening torque:**  
**Refer to MT-54.**

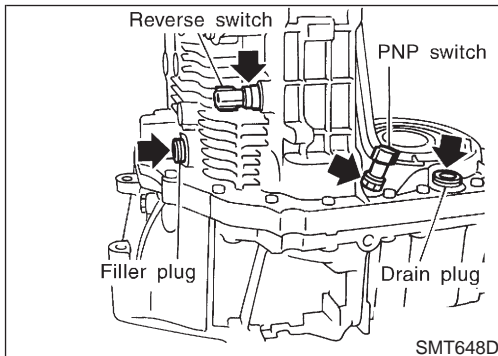


12. Apply Three Bond TB1215, Loctite Part No. 51813 or equivalent to threads of reverse switch, PNP switch, and drain plug, and install them. (Fill the case with oil before installation of filler plug.)

13. Install speedometer pinion assembly.

**CAUTION:**  
**Do not reuse O-ring.**

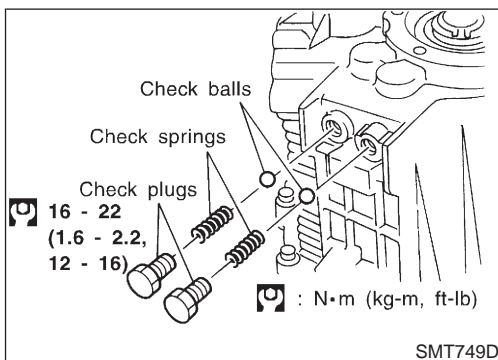

14. Install check springs and check balls. Apply sealant to the thread on the check plug, and install it.

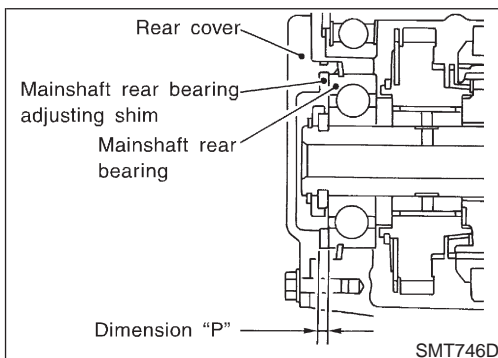

15. Calculate thickness of adjusting shim using the following procedure to satisfy specification of end play for mainshaft rear bearing.

**End play: 0 - 0.06 mm (0 - 0.0024 in)**

**Dimension "P" = (P1 - P2) + End play**

**P: Thickness of adjusting shim**


**P1: Distance between transaxle case end face and mainshaft rear bearing**

**P2: Distance between adjusting shim end face of rear cover and transaxle mounting face**


**Mainshaft rear bearing adjusting shims:**

**Refer to SDS, MT-129.**


## Transaxle Case (Cont'd)

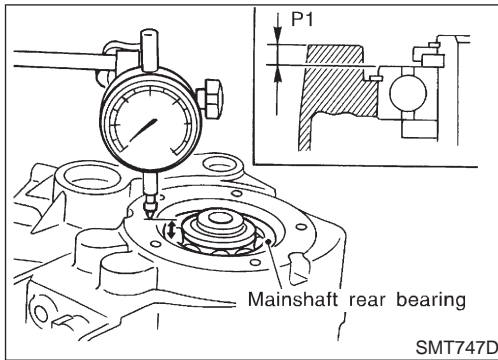


- a. Using dial gauge as shown in the figure, measure dimension "P1" between transaxle case end face and mainshaft rear bearing.

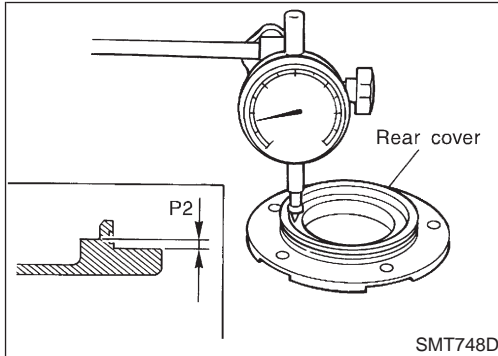

- b. Using dial gauge as shown in the figure, measure dimension "P2" between adjusting shim mounting face of rear cover and transaxle mounting face.

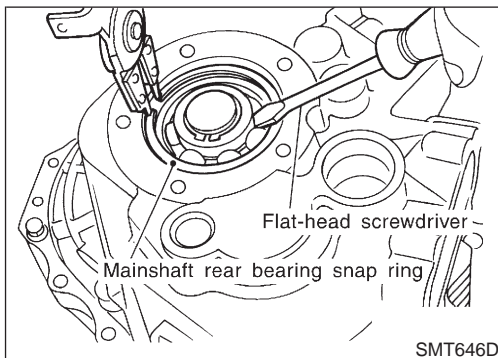


16. Using snap ring pliers as shown in the figure, install snap ring.  
**CAUTION:**  
**Do not reuse snap ring.**  
 17. Install selected mainshaft adjusting shim.

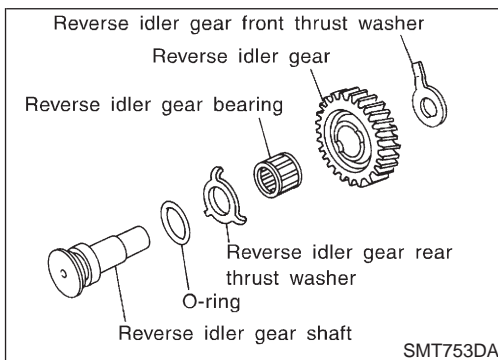

18. Install reverse idler gear, O-ring, thrust washers (front, rear), and bearing onto reverse idler shaft.  
 19. Install snap ring into transaxle case using snap ring pliers.

- CAUTION:**
- Do not reuse snap ring.
  - Do not reuse O-ring.
  - Before installation, apply gear oil to O-ring.

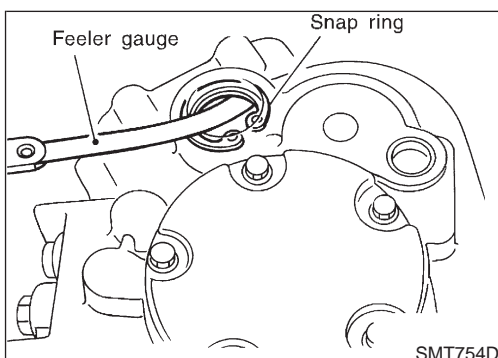


20. Using feeler gauge, measure the end play of snap ring, and select a snap ring suitable to satisfy the following specification.

**End play:**  
**0.05 - 0.25 mm (0.0020 - 0.0098 in)**  
**Available snap ring:**  
**Refer to SDS, MT-126.**

## ASSEMBLY

**RS5F70A**

*Transaxle Case (Cont'd)*

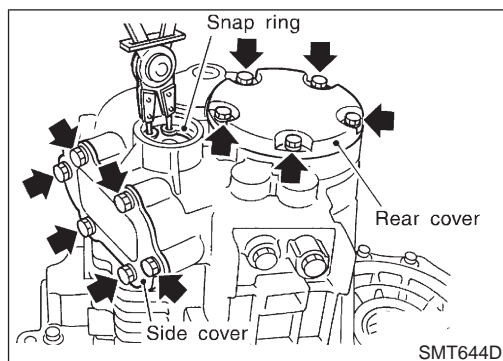

21. Install selected snap ring.

**CAUTION:**

**Do not reuse snap ring.**

22. Apply gear oil to rear cover O-ring, and install rear cover, side cover gasket, and side cover. Then tighten mounting bolts with specified torque.


**Tightening torque:**

**Refer to MT-54.**

**CAUTION:**

**Do not reuse mounting bolts for rear cover and side cover.**


## Case Components

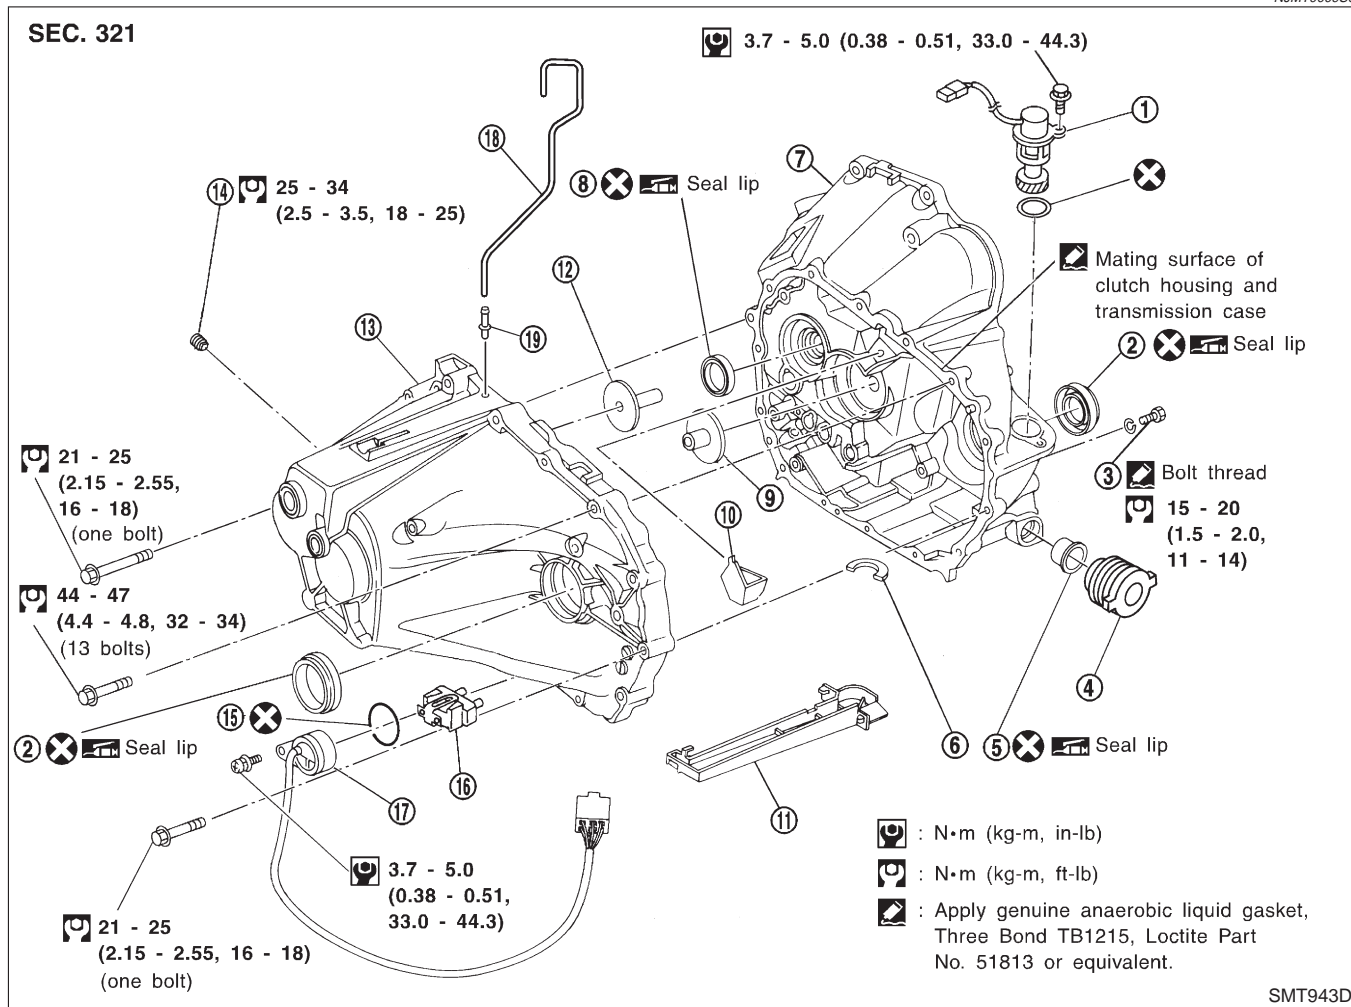

- |                          |                               |                            |
|--------------------------|-------------------------------|----------------------------|
| 1. Speedometer pinion    | 8. Input shaft oil seal       | 14. Filler plug            |
| 2. Differential oil seal | 9. Oil channel (Mainshaft)    | 15. O-ring                 |
| 3. Drain plug            | 10. Oil pocket                | 16. Movable plate assembly |
| 4. Boot                  | 11. Oil gutter                | 17. PNP switch             |
| 5. Striking rod oil seal | 12. Oil channel (Input shaft) | 18. Breather hose          |
| 6. Magnet                | 13. Transmission case         | 19. Breather pipe          |
| 7. Clutch housing        |                               |                            |

## Gear Components

NJMT0009S03

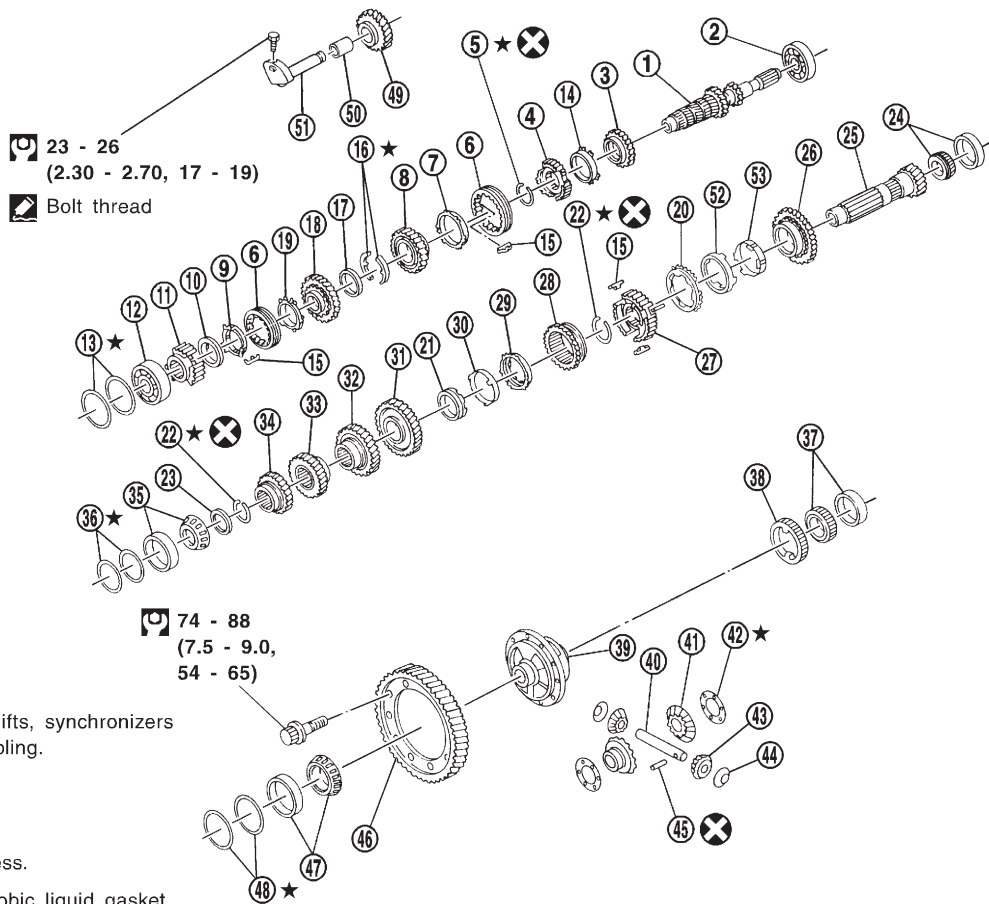**SEC. 322**


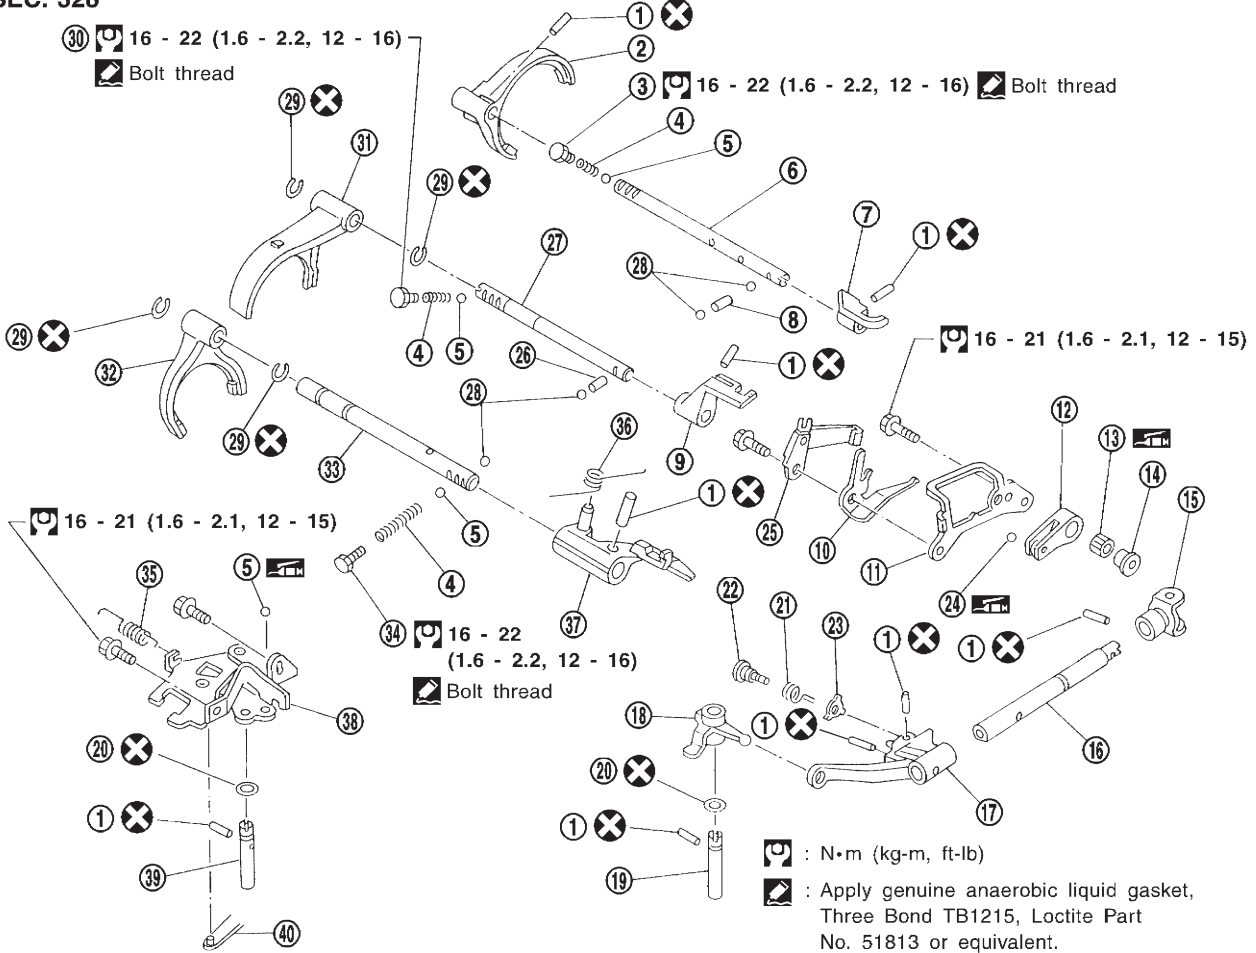
SMT937D

- |   |   |   |
|---|---|---|
| 1. Input shaft<br>2. Input shaft front bearing<br>3. 3rd input gear<br>4. 3rd & 4th synchronizer hub<br>5. Snap ring<br>6. Coupling sleeve<br>7. 4th baulk ring<br>8. 4th input gear<br>9. Reverse baulk ring<br>10. Reverse synchronizer cone<br>11. 5th synchronizer hub<br>12. Input shaft rear bearing<br>13. Input shaft bearing adjusting shim<br>14. 3rd baulk ring<br>15. Insert spring<br>16. 4th input gear thrust washer<br>17. Thrust washer ring<br>18. 5th input gear | 19. 5th baulk ring<br>20. 1st outer baulk ring<br>21. 2nd inner baulk ring<br>22. Snap ring<br>23. Mainshaft bearing spacer<br>24. Mainshaft front bearing<br>25. Mainshaft<br>26. 1st main gear<br>27. 1st & 2nd synchronizer hub<br>28. Reverse main gear & 1st-2nd coupling sleeve<br>29. 2nd outer baulk ring<br>30. 2nd gear synchronizer cone<br>31. 2nd main gear<br>32. 3rd main gear<br>33. 4th main gear<br>34. 5th main gear<br>35. Mainshaft rear bearing<br>36. Mainshaft bearing adjusting shim | 37. Differential side bearing<br>38. Speedometer drive gear<br>39. Differential case<br>40. Pinion mate shaft<br>41. Side gear<br>42. Side gear thrust washer<br>43. Pinion mate gear<br>44. Pinion mate gear thrust washer<br>45. Retaining pin<br>46. Final gear<br>47. Differential side bearing<br>48. Differential side bearing adjusting shim<br>49. Reverse idler gear<br>50. Bushing<br>51. Reverse idler shaft<br>52. 1st gear synchronizer cone<br>53. 1st inner baulk ring |
|---|---|---|

## Shift Control Components


NJMT0009S04

**SEC. 328**




SMT862CA


- |   |   |   |
|---|---|---|
| <ul style="list-style-type: none"> <li>1. Retaining pin</li> <li>2. 1st &amp; 2nd shift fork</li> <li>3. 1st &amp; 2nd check plug</li> <li>4. Return spring</li> <li>5. Check ball</li> <li>6. 1st &amp; 2nd fork rod</li> <li>7. 1st &amp; 2nd bracket</li> <li>8. Interlock plunger</li> <li>9. 3rd &amp; 4th bracket</li> <li>10. Return spring</li> <li>11. Reverse gate</li> <li>12. Select arm</li> <li>13. Return bearing</li> <li>14. Bush</li> </ul> | <ul style="list-style-type: none"> <li>15. Yoke</li> <li>16. Striking rod</li> <li>17. Striking lever</li> <li>18. Selector</li> <li>19. Selector shaft</li> <li>20. O-ring</li> <li>21. Return spring</li> <li>22. Cam pin</li> <li>23. Reverse check cam</li> <li>24. Check ball</li> <li>25. Select check spring</li> <li>26. Interlock plunger</li> <li>27. 3rd &amp; 4th fork rod</li> </ul> | <ul style="list-style-type: none"> <li>28. Interlock ball</li> <li>29. Stopper ring</li> <li>30. 3rd &amp; 4th check plug</li> <li>31. 3rd &amp; 4th shift fork</li> <li>32. 5th shift fork</li> <li>33. 5th fork rod</li> <li>34. 5th &amp; reverse check plug</li> <li>35. Reverse lever spring</li> <li>36. Reverse lock spring</li> <li>37. 5th &amp; reverse bracket</li> <li>38. Reverse lever assembly</li> <li>39. Reverse arm shaft</li> <li>40. Control lever spring</li> </ul> |
|---|---|---|

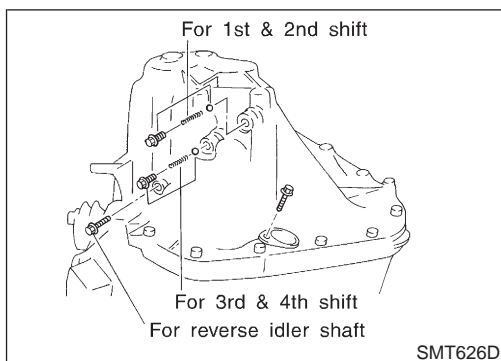


1. Before removing transmission case, remove bolts, check plugs, springs and check balls as shown left.
  - **Be careful not to lose check balls.**
2. Remove transmission case.

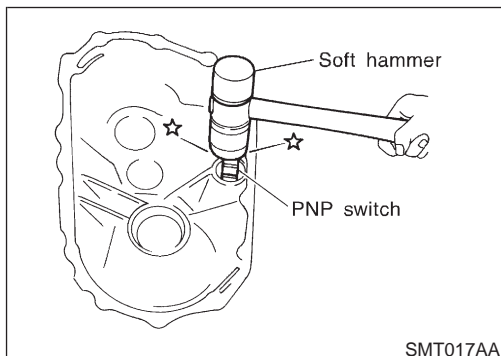


3. Remove PNP switch.

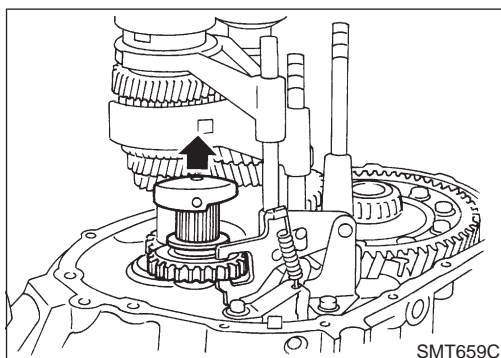

4. Mesh 4th gear, and then remove reverse idler shaft and reverse idler gear.

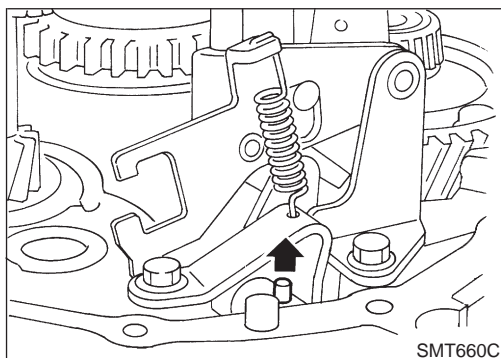


5. Pull out retaining pin.

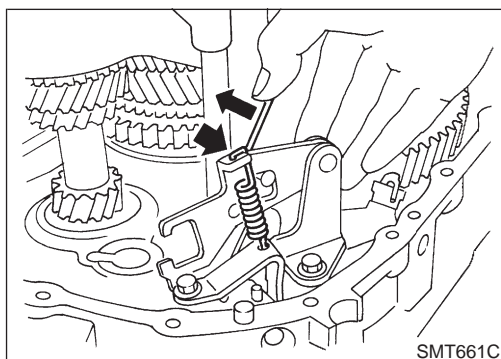


6. Remove reverse lever spring and reverse lock spring from reverse lever assembly.



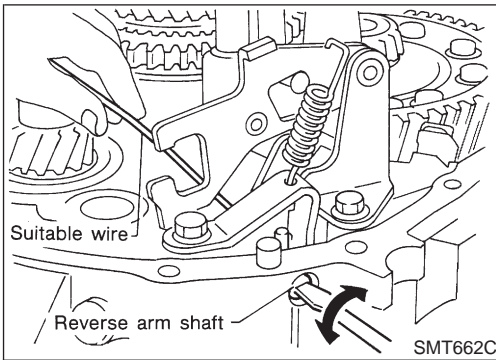


7. Remove reverse arm shaft while rotating it.

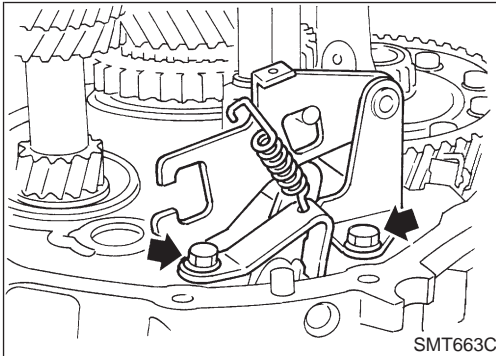


8. Remove reverse lever assembly and check ball.

- **Be careful not to lose check ball.**

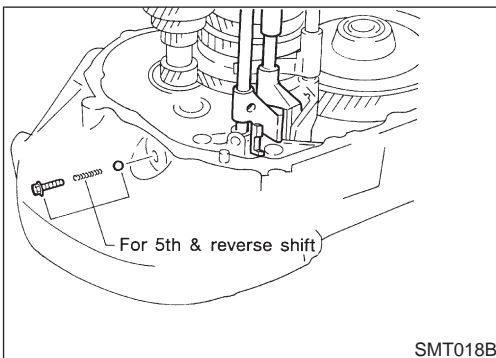


9. Remove 5th & reverse check plug, spring and ball.

- **Be careful not to lose check ball.**

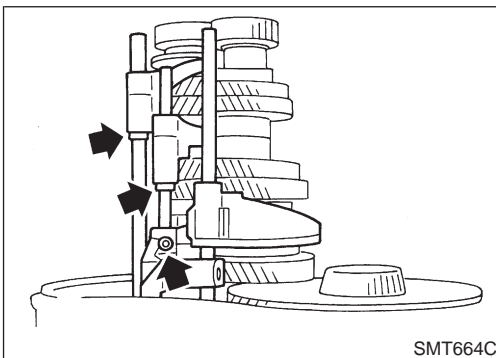

10. Remove stopper rings and retaining pins from 5th and 3rd & 4th fork rods.  
When removing stopper rings. Use snap ring remover and installer.

11. Remove 5th and 3rd & 4th fork rods. Then remove forks and brackets.

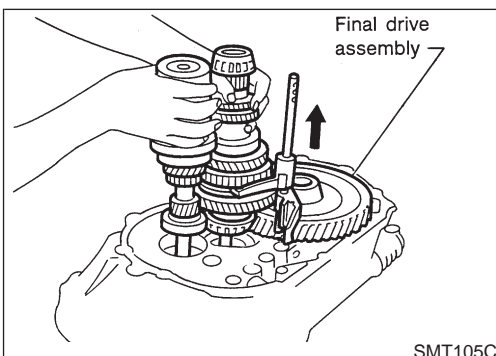


12. Remove both input and mainshafts with 1st & 2nd fork and fork rod as a set.


13. Remove final drive assembly.

- **Always withdraw mainshaft straight out. Failure to do so can damage resin oil channel on clutch housing side.**





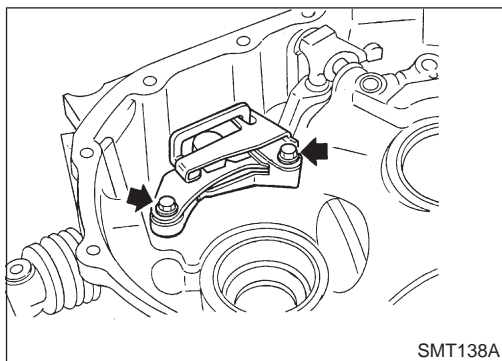


14. Remove reverse check assembly and check ball.
- **Be careful not to lose check ball.**

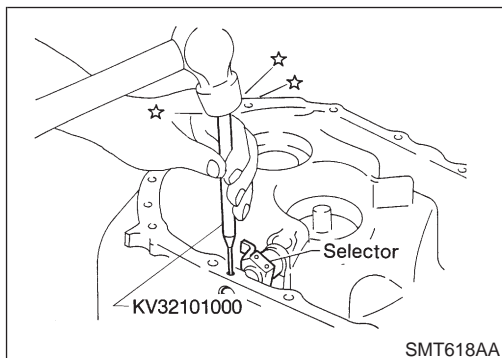

15. Remove retaining pin and detach the selector.




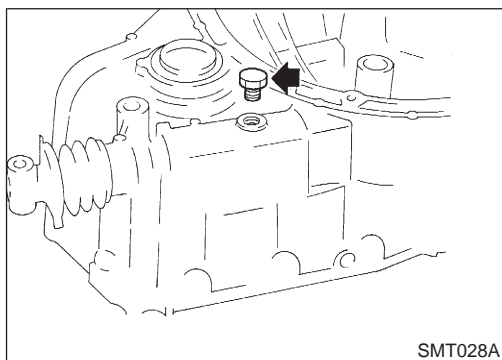
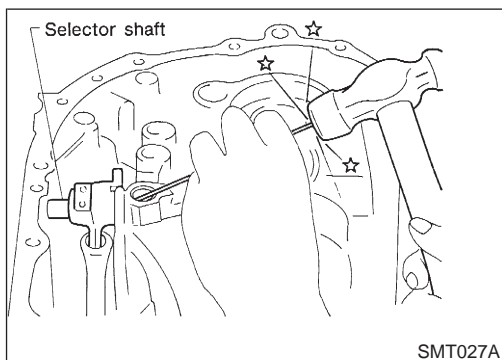


16. Remove drain plug for convenience in removing retaining pin which holds striking lever to striking rod.

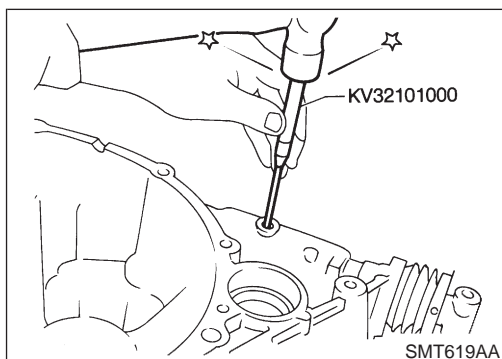

17. Remove retaining pin and then withdraw striking lever and striking rod.

## Input Shaft and Gears

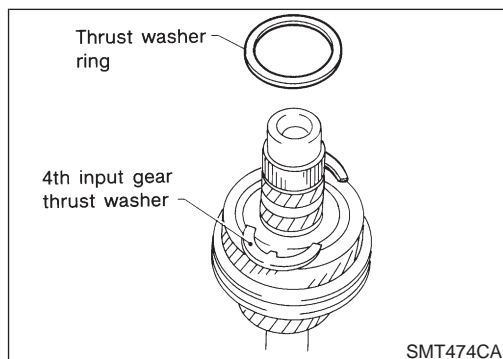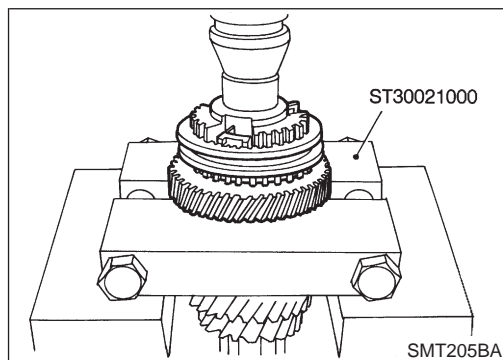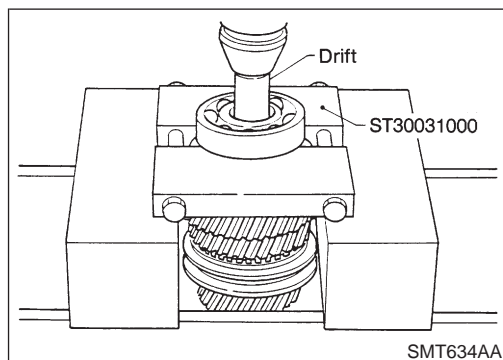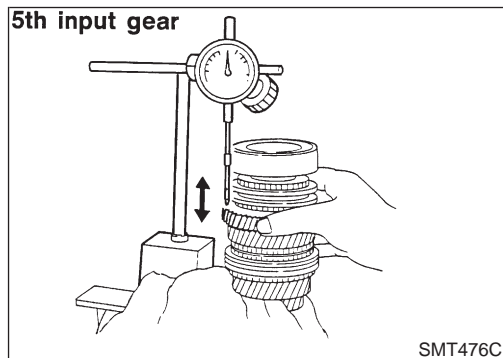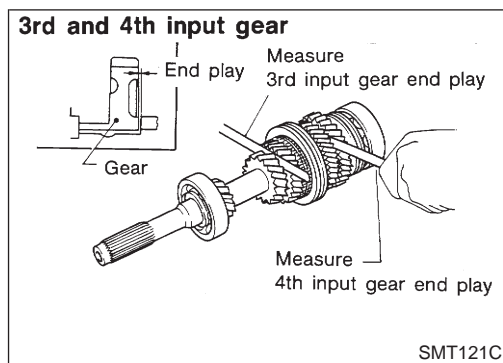

## Input Shaft and Gears

### DISASSEMBLY

NJMT0011

1. Before disassembly, check 3rd, 4th and 5th input gear end plays.


**Gear end play:**  
Refer to SDS, MT-133.

- If not within specification, disassemble and check contact surface of gear, shaft and hub. Check clearance of snap ring groove. Refer to "ASSEMBLY", MT-101.


2. Remove input shaft rear bearing.

3. Remove 5th & reverse synchronizer and 5th input gear.


4. Remove thrust washer ring, 4th input gear thrust washers and 4th input gear.

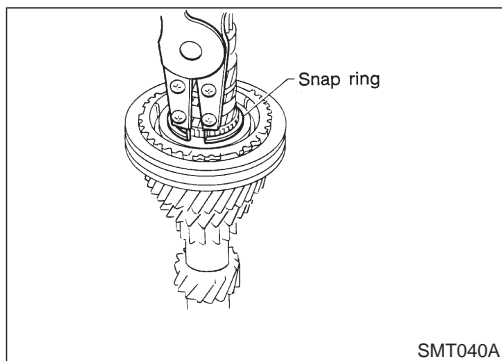


5. Remove snap ring.

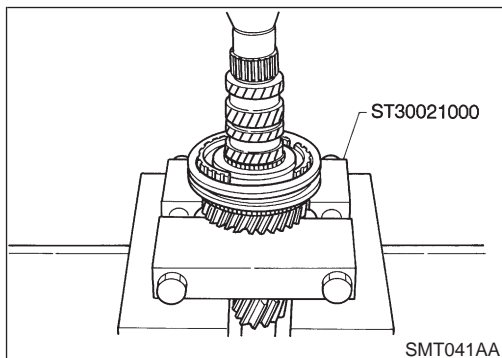

6. Remove 3rd & 4th synchronizer and 3rd input gear.

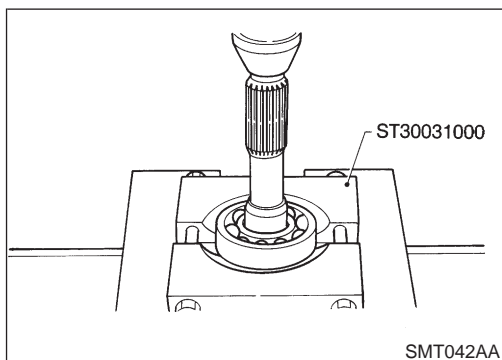

7. Remove input shaft front bearing.

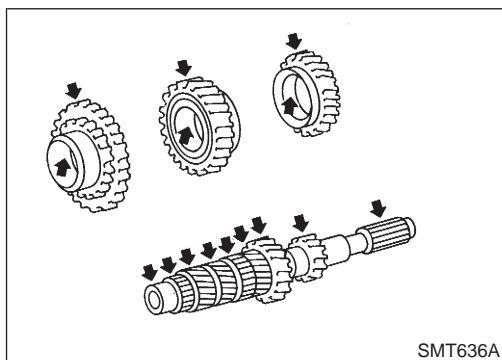


### INSPECTION Input shaft and Gears

NJMT0012

NJMT0012S01

- Check input shaft for cracks, wear or bending.
- Check gears for excessive wear, chips or cracks.

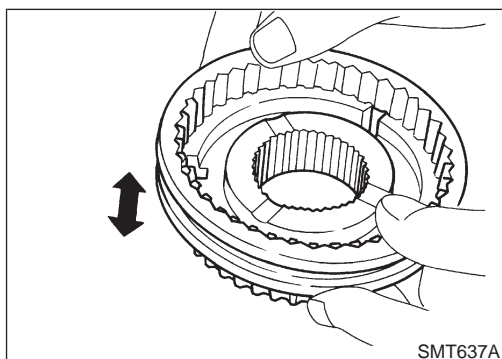


### Synchronizer

NJMT0012S02

- Check spline portion of coupling sleeves, hubs and gears for wear or cracks.
- Check baulk rings for cracks or deformation.
- Check insert springs for wear or deformation.

*Input Shaft and Gears (Cont'd)*

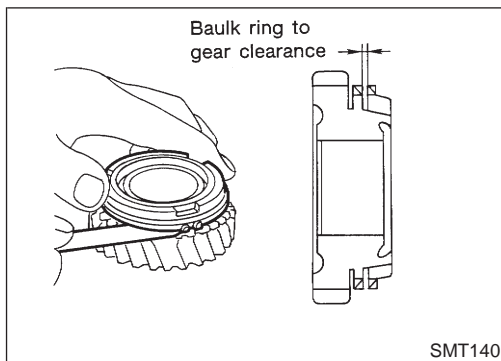

- Measure clearance between baulk ring and gear (3rd, 4th and 5th).


**Clearance between baulk ring and gear:**

**Standard**

**1.0 - 1.35 mm (0.0394 - 0.0531 in)**

**Wear limit**

**0.7 mm (0.028 in)**

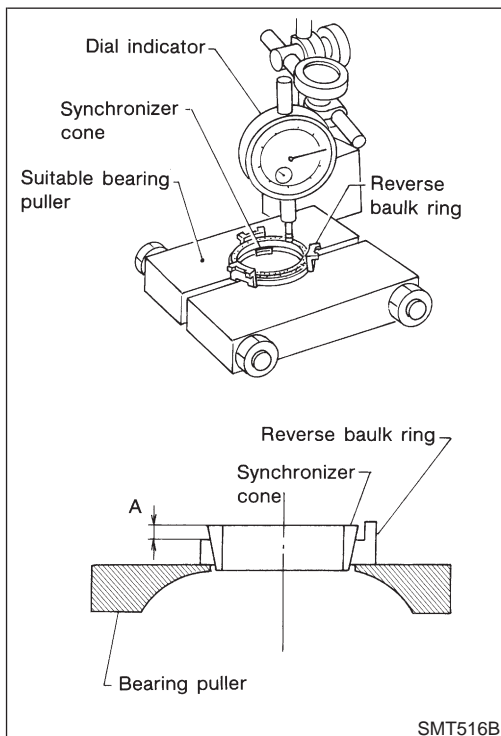

- **Measure wear of reverse baulk ring.**

1. Place reverse baulk ring on Disc and then place reverse synchronizer cone on reverse baulk ring.


- **Make sure projection of synchronizer cone is positioned over the recess on Tool.**

2. While holding reverse synchronizer cone against reverse baulk ring as firmly as possible, measure dimension "A" with dial indicator.

**Wear limit:**


**Dimension "A" 1.2 mm (0.047 in)**

3. If dimension "A" is smaller than the wear limit, replace baulk ring.

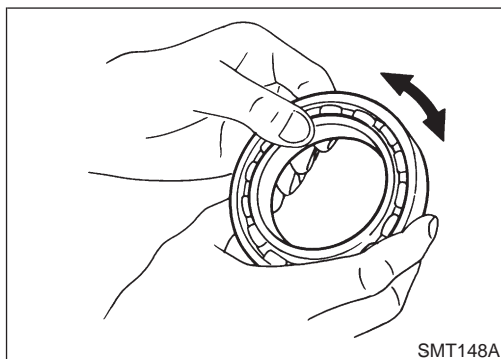

**Bearing**

- Make sure bearings roll freely and are free from noise, cracks, pitting or wear. NJMT0012S03

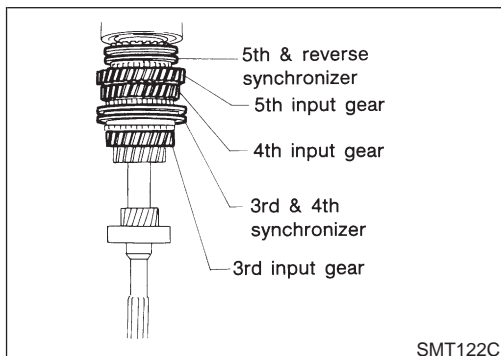


**ASSEMBLY**

NJMT0013


# REPAIR FOR COMPONENT PARTS

**RS5F50A**

*Input Shaft and Gears (Cont'd)*

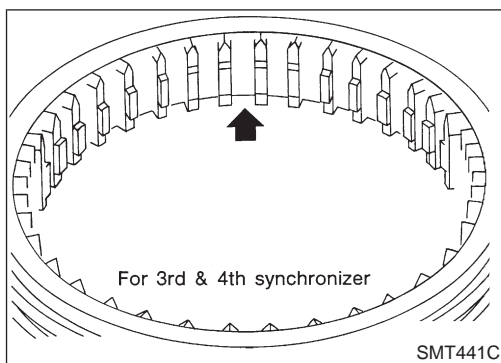

1. Place inserts in three grooves on coupling sleeve (3rd & 4th synchronizer).

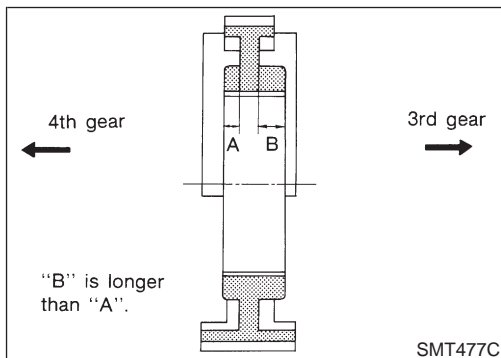


2. Install 3rd input gear and 3rd baulk ring.
3. Press on 3rd & 4th synchronizer hub.
- **Pay attention to its direction.**
4. Select proper snap ring of 3rd & 4th synchronizer hub to minimize clearance of groove, and then install it.

**Allowable clearance of groove:**

**0 - 0.1 mm (0 - 0.004 in)**

**Snap ring of 3rd & 4th synchronizer hub:**

**Refer to SDS, MT-134.**

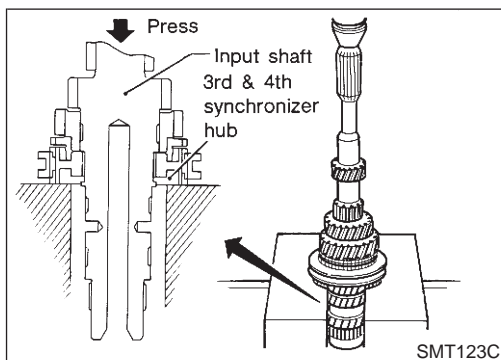


5. Install 4th input gear.
6. Select proper thrust washers to minimize clearance of groove. Then install them and thrust washer ring.

**Allowable clearance of groove:**


**0 - 0.06 mm (0 - 0.0024 in)**

**4th input gear thrust washer:**


**Refer to SDS, MT-134.**

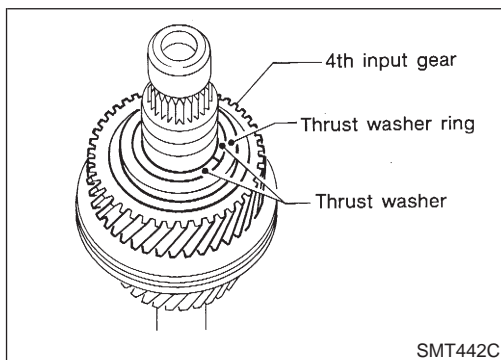


7. Install 5th & reverse synchronizer assembly.
  - a. Hook insert springs on reverse baulk ring.

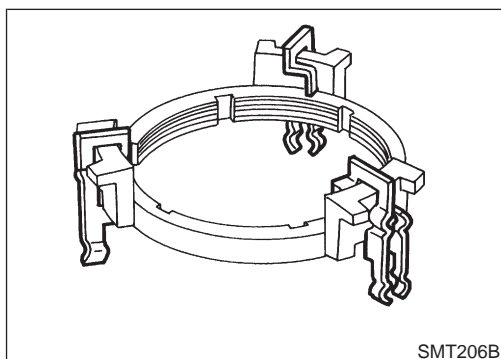


## Input Shaft and Gears (Cont'd)

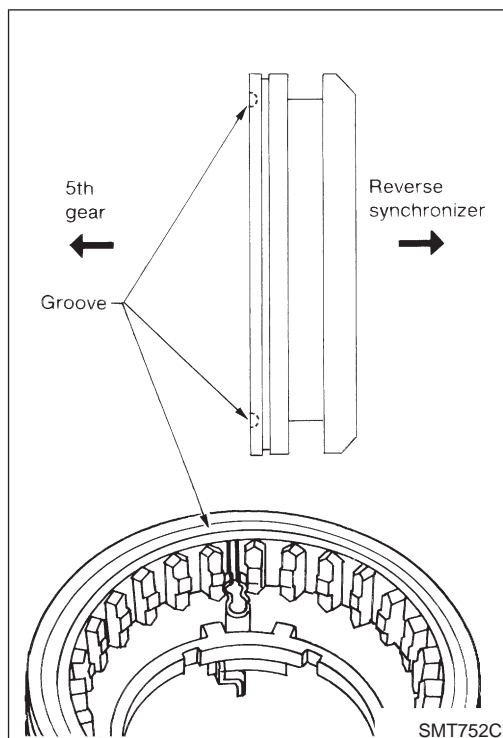


- b. Install insert springs with reverse baulk ring onto coupling sleeve.
  - **Pay attention to position of insert springs.**
- c. Place 5th baulk ring on 5th input gear.
- d. Install reverse synchronizer cone on reverse baulk ring.

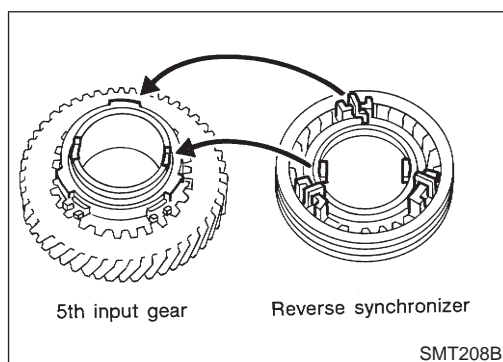


- e. Place reverse synchronizer assembly on 5th input gear.
  - **Mesh recesses of 5th input gear with projections of reverse synchronizer cone.**
  - **Put insert spring mounts on reverse baulk ring upon those on 5th baulk ring.**

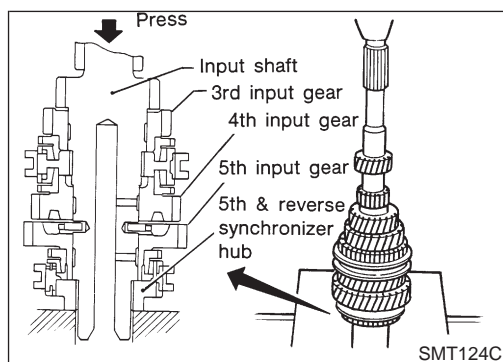

- f. Press on 5th & reverse synchronizer assembly with 5th input gear.

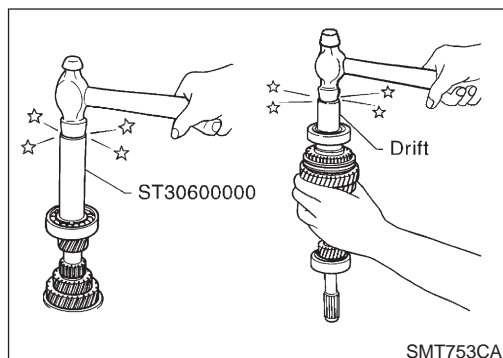

8. Install input shaft front and rear bearings.
9. Measure gear end play as a final check. Refer to "DISASSEMBLY", MT-98.

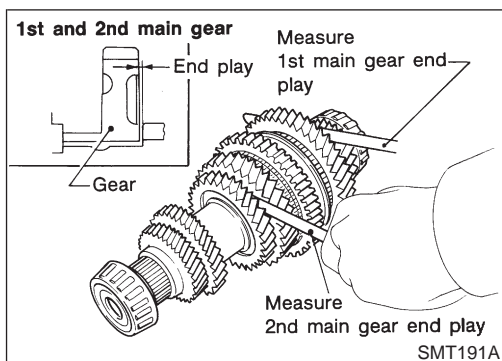

## Mainshaft and Gears

### DISASSEMBLY


NJMT0014

1. Before disassembly, check 1st and 2nd main gear end plays.


**Gear end play:**  
**Refer to SDS, MT-133.**

If not within specification, disassemble and check contact surface of gear, shaft and hub. Check clearance of snap ring groove. Refer to "ASSEMBLY", MT-106.


2. Press out mainshaft rear bearing.

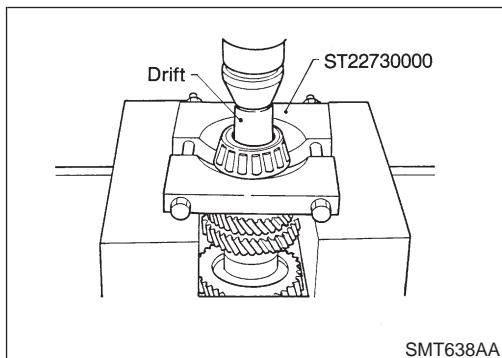


3. Remove thrust washer and snap ring.

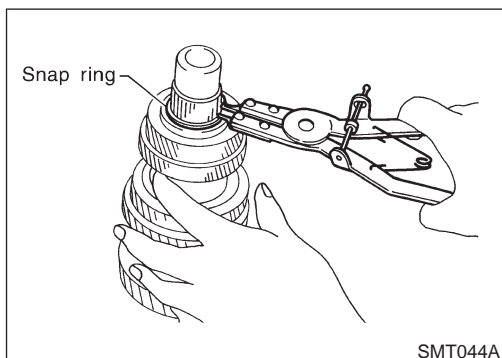


4. Press out 5th main gear and 4th main gear.

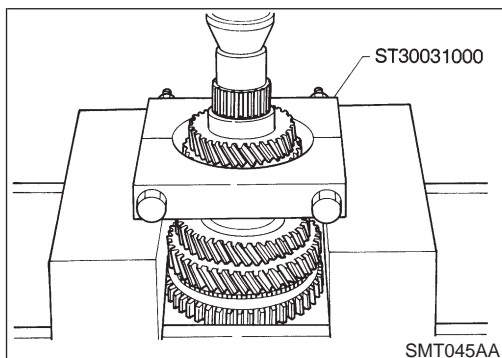


5. Press out 3rd main gear and 2nd main gear.

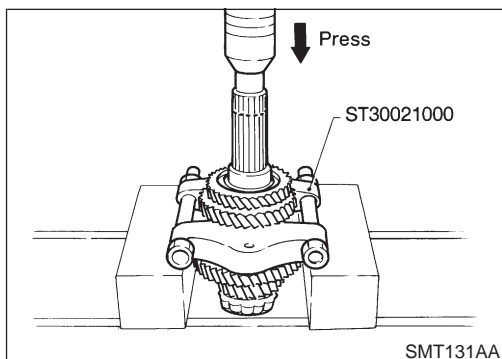


## Mainshaft and Gears (Cont'd)

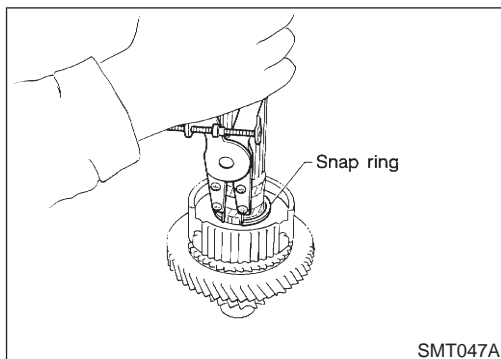


6. Remove snap ring.

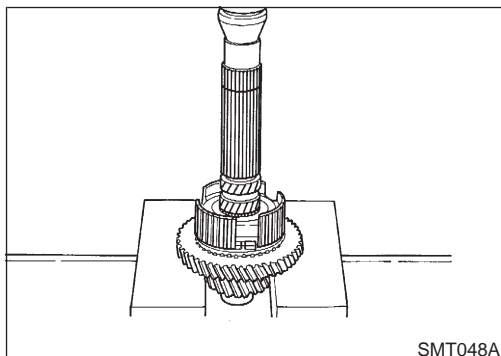

7. Remove 1st & 2nd synchronizer hub and 1st main gear.

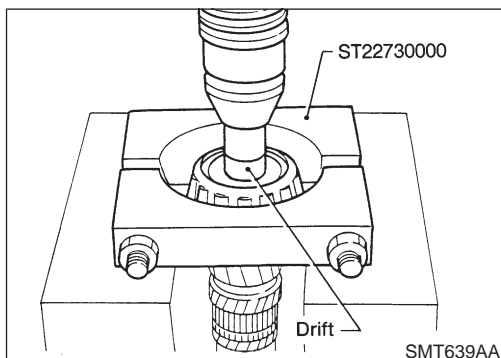

8. Remove mainshaft front bearing.

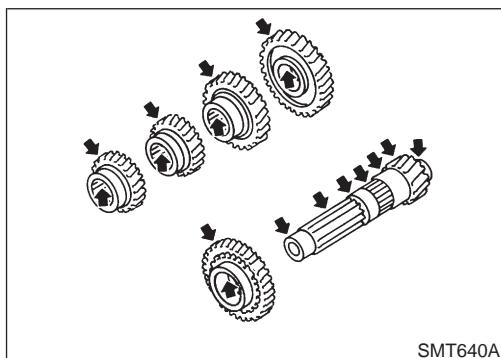


### INSPECTION Mainshaft and Gears

- Check mainshaft for cracks, wear or bending.
- Check gears for excessive wear, chips or cracks.

NJMT0015

NJMT0015S01

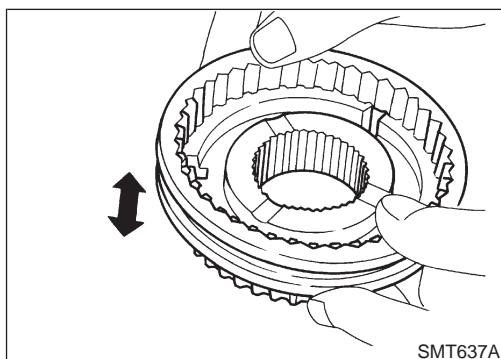

### Synchronizer

- Check spline portion of coupling sleeves, hubs and gears for wear or cracks.
- Check baulk rings for cracks or deformation.
- Check insert springs for deformation.


NJMT0015S02



# REPAIR FOR COMPONENT PARTS

**RS5F50A**

Mainshaft and Gears (Cont'd)

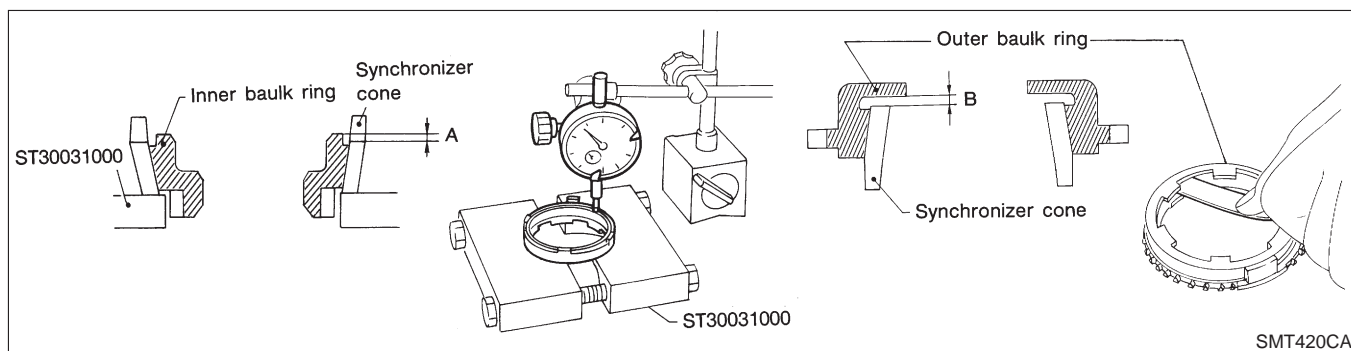

- Measure wear of 1st and 2nd double baulk rings.
- a) Place baulk rings in position on synchronizer cone.
- b) While holding baulk ring against synchronizer cone as far as it will go, measure dimensions "A" and "B".

**Standard:**


**A 0.6 - 0.8 mm (0.024 - 0.031 in)**

**B 0.6 - 1.1 mm (0.024 - 0.043 in)**

**Wear limit:**

**0.2 mm (0.008 in)**


- c) If dimension "A" or "B" is smaller than the wear limit, replace outer baulk ring, inner baulk ring and synchronizer cone as a set.

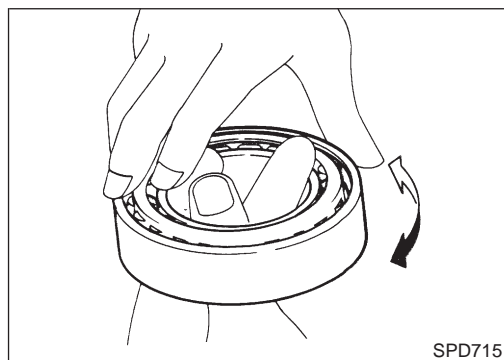

## Bearing

NJMT0015S03

- Make sure bearings roll freely and are free from noise, cracks, pitting or wear.
- **When replacing tapered roller bearing, replace outer and inner race as a set.**

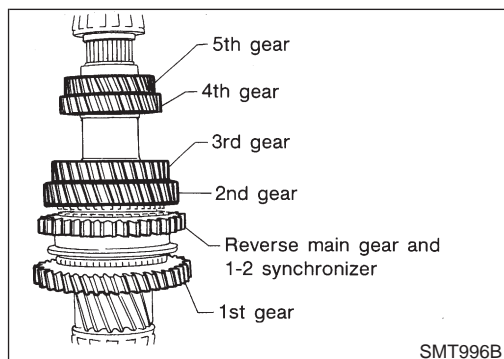


## ASSEMBLY

NJMT0016

## REPAIR FOR COMPONENT PARTS

RS5F50A

### Mainshaft and Gears (Cont'd)

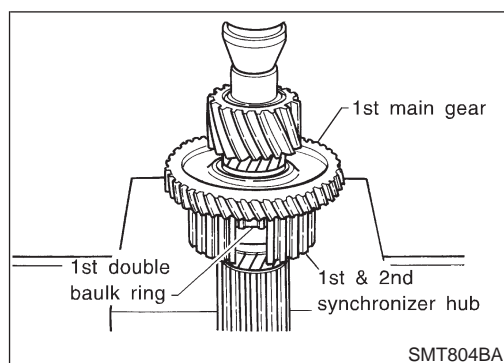

1. Press on 1st main gear, 1st synchronizer cone, inner & outer baulk rings and 1st & 2nd synchronizer hub. Refer to the illustration for step 3.



- **Pay attention to direction of 1st & 2nd synchronizer hub.**
2. Select proper snap ring of 1st & 2nd synchronizer hub to minimize clearance of groove and then install it.

**Allowable clearance of groove:**

**0 - 0.1 mm (0 - 0.004 in)**

**Snap ring of 1st & 2nd synchronizer hub:**


**Refer to SDS, MT-134.**

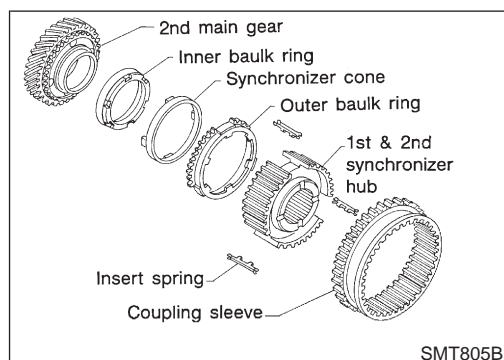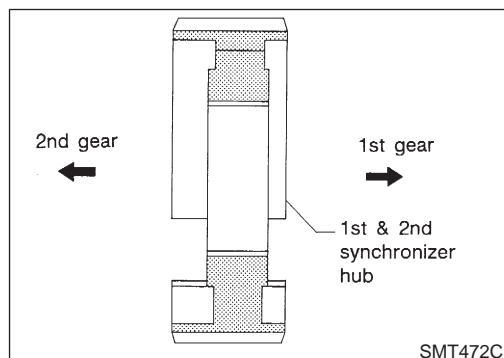


3. Install 2nd synchronizer cone, inner & outer baulk rings. Insert springs and 1st & 2nd coupling sleeve.

4. Install 2nd main gear.

- Ensure four protrusions of 2nd synchronizer cone are set in holes of 2nd main gear.

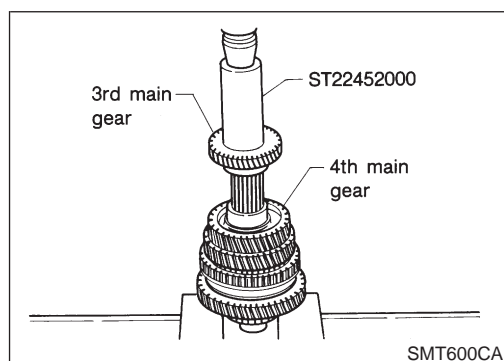

5. Press on 3rd main gear.
6. Press on 4th main gear.

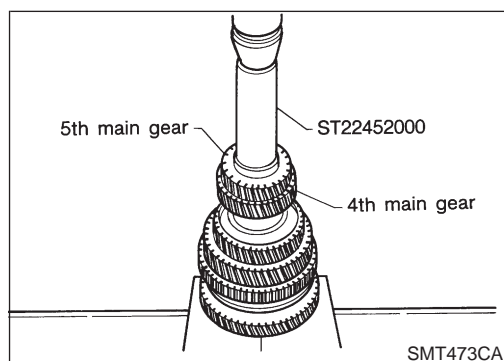


7. Press on 5th main gear.
8. Select proper snap ring of 5th main gear to minimize clearance of groove and then install it.

**Allowable clearance of groove:**


**0 - 0.15 mm (0 - 0.0059 in)**

**Snap ring of 5th main gear:**

**Refer to SDS, MT-134.**

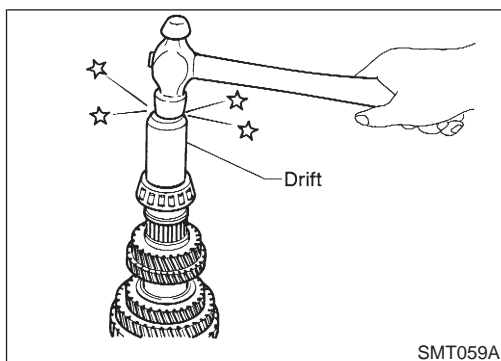


9. Press on thrust washer and press on mainshaft rear bearing.
10. Press on mainshaft front bearing.
11. Measure gear end play as a final check. Refer to "DISASSEMBLY", MT-103.

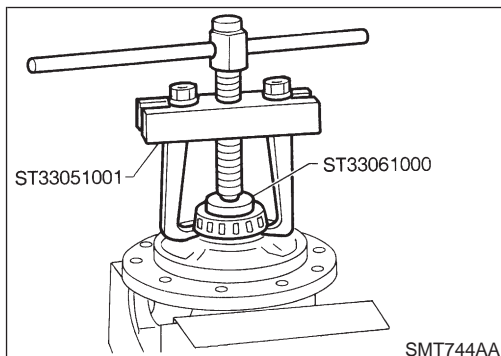


## Final Drive DISASSEMBLY

NJMT0017

1. Remove final gear.
2. Remove speedometer drive gear by cutting it.
3. Press out differential side bearings.
  - **Be careful not to mix up the right and left bearings.**

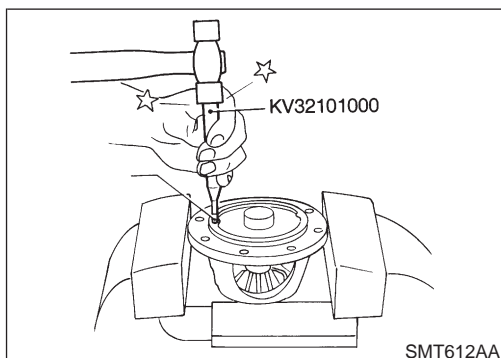

4. Drive out retaining pin and draw out pinion mate shaft.
5. Remove pinion mate gears and side gears.

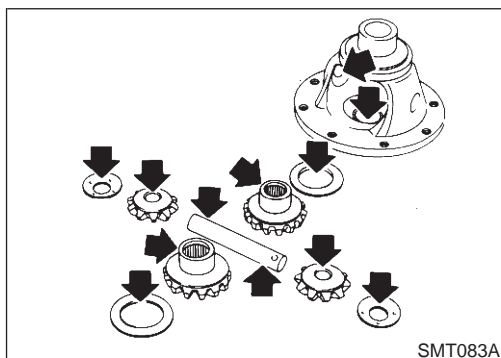


## INSPECTION

NJMT0018

### Gear, Washer, Shaft and Case

NJMT0018S01

- Check mating surfaces of differential case, viscous coupling, side gears and pinion mate gears.
- Check washers for wear.

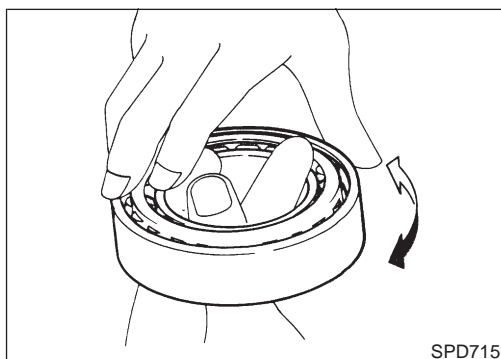


### Bearings

NJMT0018S03


- Make sure bearings roll freely and are free from noise, cracks, pitting or wear.
- **When replacing taper roller bearing, replace outer and inner race as a set.**

## ASSEMBLY


NJMT0019

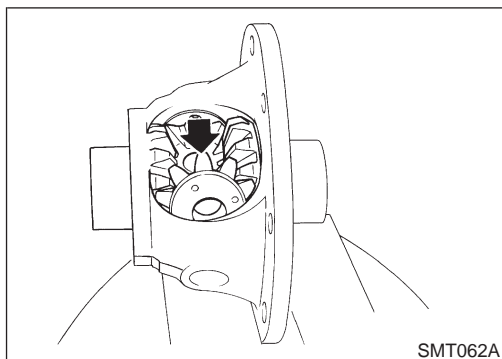

1. Attach side gear thrust washers to side gears, then install pinion mate washers and pinion mate gears in place.

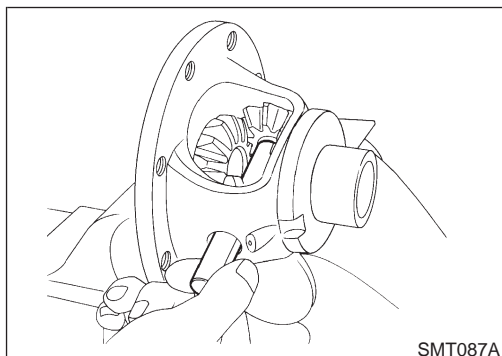


2. Insert pinion mate shaft.
  - **When inserting, be careful not to damage pinion mate thrust washers.**

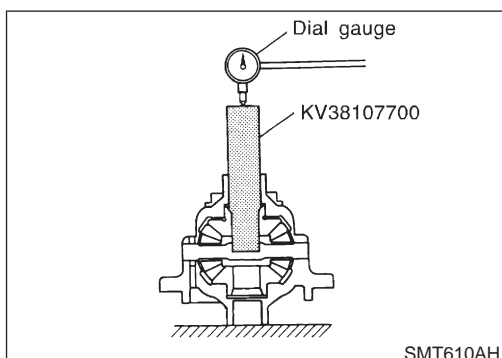

3. Measure clearance between side gear and differential case with washers following the procedure below:
  - a. Set Tool and dial indicator on side gear.
  - b. Move side gear up and down to measure dial indicator deflection. Always measure indicator deflection on both side gears.

**Clearance between side gear and differential case with washers:**


**0.1 - 0.2 mm (0.004 - 0.008 in)**

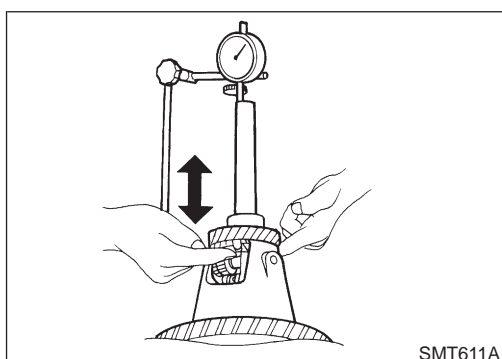


- c. If not within specification, adjust clearance by changing thickness of side gear thrust washers.

**Differential side gear thrust washer:**


**Refer to SDS, MT-134.**

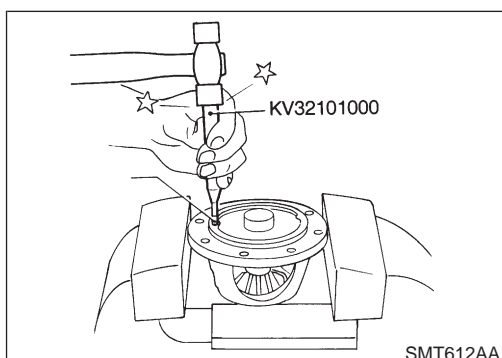


4. Install retaining pin.
  - **Make sure that retaining pin is flush with case.**

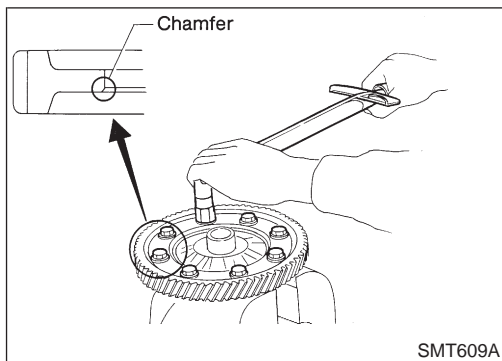

5. Install final gear.
6. Install speedometer drive gear.

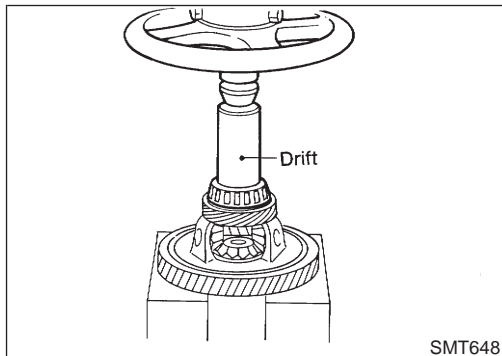


7. Press on differential side bearings.

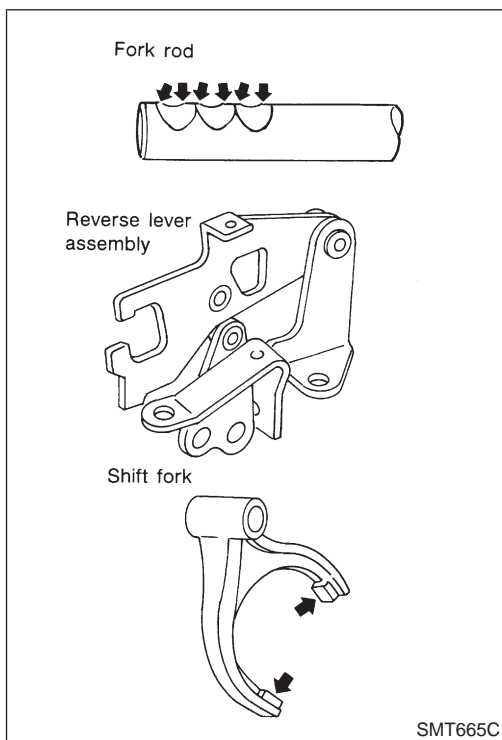

## Shift Control Components INSPECTION


- Check contact surface and sliding surface for wear, scratches, projections or other damage. *NJMT0020*

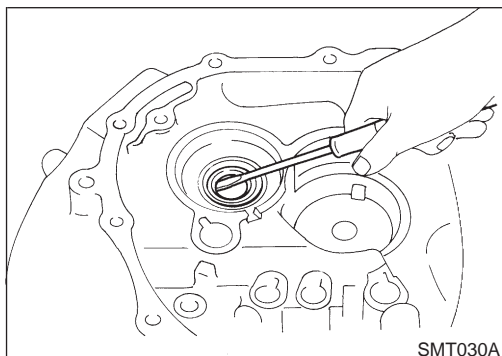


## Case Components REMOVAL AND INSTALLATION Input Shaft Oil Seal

*NJMT0021*  
*NJMT0021S01*

Case Components (Cont'd)

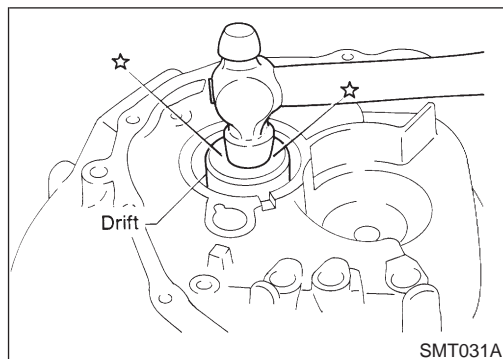

- Apply multi-purpose grease to seal lip of oil seal before installing.

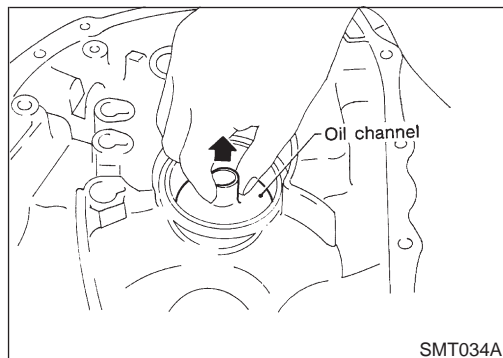

### Mainshaft Front Bearing Outer Race

NJMT0021S02

- Extract the oil channel and remove the mainshaft front bearing outer race.

### Mainshaft Rear Bearing Outer Race

NJMT0021S03

Refer to “Mainshaft Bearing Preload”, MT-135.

### Differential Side Bearing Outer Race

NJMT0021S04

Refer to “Input Shaft End Play and Differential Side Bearing Preload”, MT-135.

## Input Shaft End Play and Differential Side Bearing Preload


NJMT0022S01

If any of the following parts are replaced, adjust input shaft end play.


- Input shaft
- Input shaft bearing
- Clutch housing
- Transmission case

If any of the following parts are replaced, adjust differential side bearing preload.


- Differential case
- Differential side bearing
- Clutch housing
- Transmission case

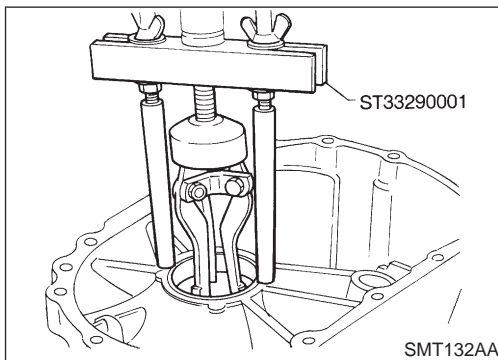

1. Remove differential side bearing outer race (transmission case side) and shim(s).

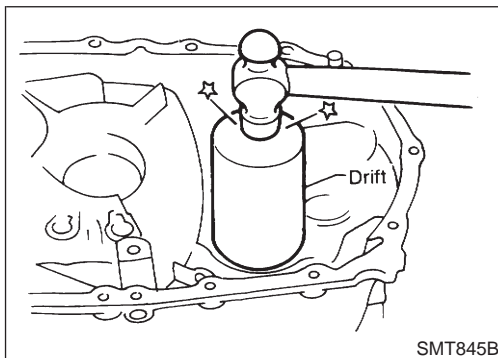

2. Reinstall differential side bearing outer race without shim(s).
3. Install input shaft and final drive assembly on clutch housing.
4. Install transmission case without input shaft bearing shim(s). Then tighten it to the specified torque. Refer to "Case Components", MT-92.

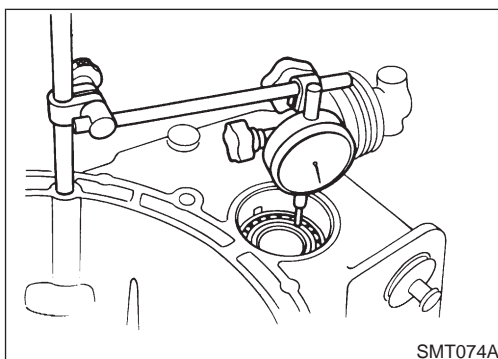


5. Using the following procedures, measure clearance between bearings and transmission case.

### DIFFERENTIAL SIDE


NJMT0022S0101

1. Attach dial indicator. If clamp diameter of dial indicator is too small or too large, attach dial indicator using a magnetic stand.

## Input Shaft End Play and Differential Side Bearing Preload (Cont'd)

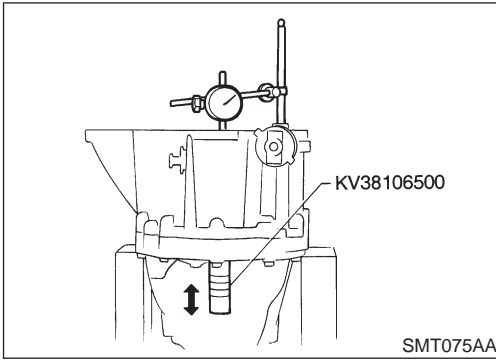


2. Insert Tool all the way into differential side gear. Move Tool up and down and measure dial indicator deflection.

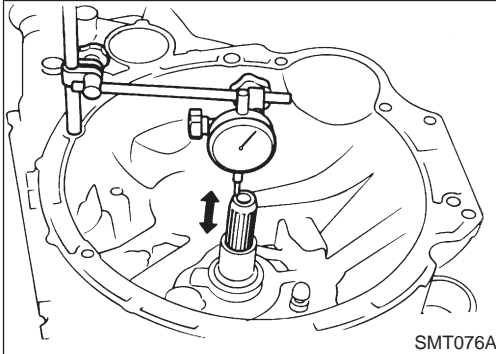

### INPUT SHAFT SIDE

NJMT0022S0102

1. Set dial indicator on end of input shaft.
2. Move input shaft up and down and measure dial indicator deflection.
3. Select shims with proper thickness with SDS table as a guide. Refer to SDS, MT-137.
4. Install selected differential side bearing adjusting shim and differential side bearing outer race.

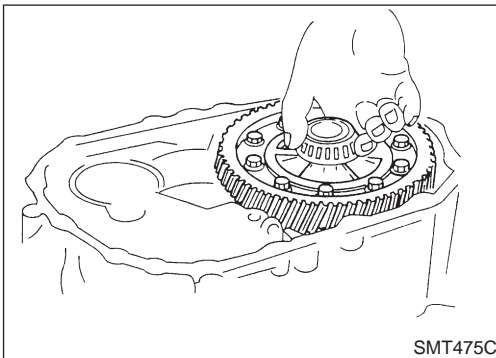


5. Check differential side bearing turning torque.
  - a. Install final drive assembly on clutch housing.
  - b. Install transmission case on clutch housing.
  - **Tighten transmission case fixing bolts to the specified torque. Refer to "Case Components", MT-92.**

### Mainshaft Bearing Preload

NJMT0022S02

If any of the following parts are replaced, adjust mainshaft bearing preload.

- Mainshaft
- Mainshaft bearings
- Clutch housing
- Transmission case

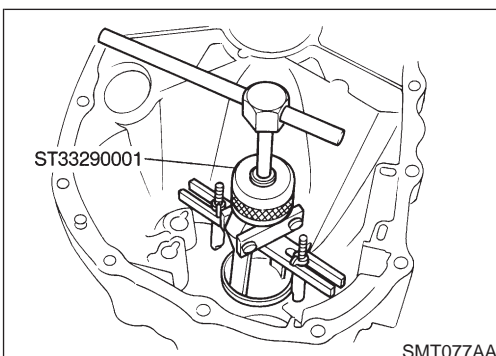




1. Remove mainshaft rear bearing outer race and shim(s).




## ADJUSTMENT

RS5F50A


Mainshaft Bearing Preload (Cont'd)

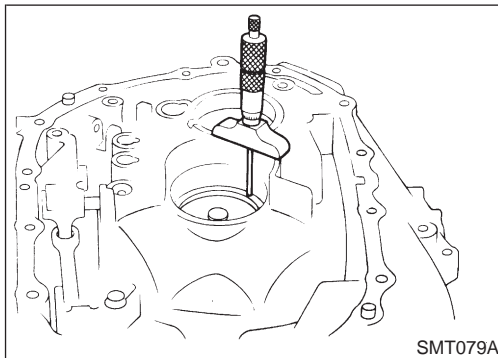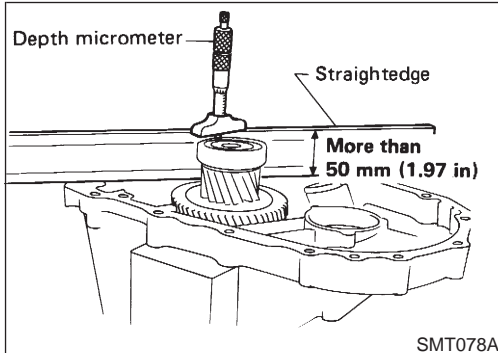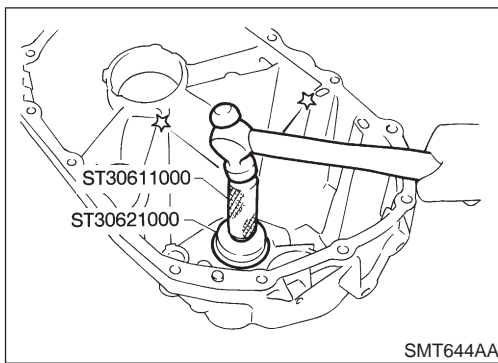


2. Reinstall mainshaft rear bearing outer race without shims.
3. Clean mating surfaces of clutch housing and transmission case with solvent.
4. Install mainshaft and mainshaft front bearing outer race into transmission case. Turn mainshaft while holding bearing outer race so that bearings are properly seated.
5. Put straightedge [width must be more than 50 mm (1.97 in)] on transmission case, and measure the distance from upper surface of straightedge to surface of the bearing outer race using a depth micrometer.
  - **Measure at three places on bearing outer race, and take the average.**
6. Determine dimension A to be used by the following equation.  
**Dimension A = Width of straightedge – measured distance**
7. Measure the distance from mating surface of clutch housing to portion with which mainshaft front bearing outer race is to be mated.
  - **Measure at three places on the portion, and take the average.**  
**Dimension B = Measured distance**
8. Determine dimension C to be used by the following equation.  
**Dimension "C" = B – A**
9. Determine total thickness of shims with SDS table as a guide.  
**Mainshaft bearing adjusting shim:**  
**Refer to SDS, MT-135.**
10. Install selected mainshaft bearing adjusting shim and mainshaft bearing outer race.
11. Check total turning torque after assembly — Refer to "ASSEMBLY", MT-115.

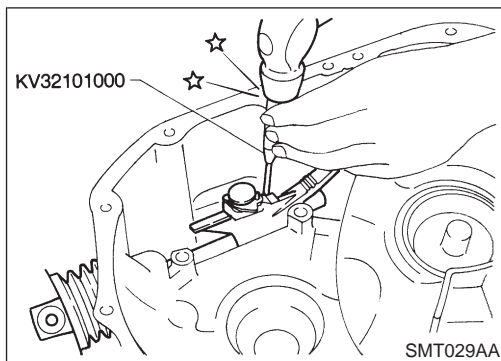

1. Install striking lever and striking rod.

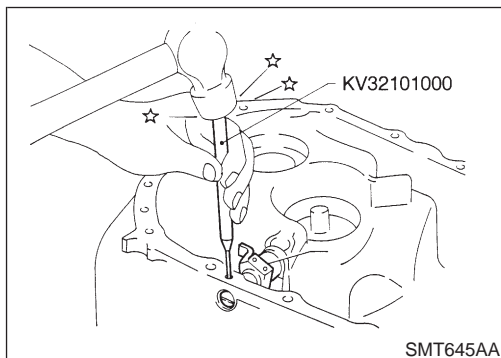


2. Install selector and retaining pin.

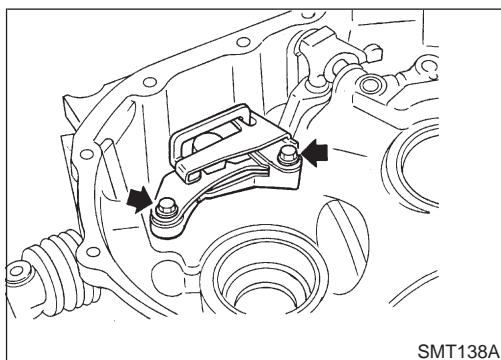

3. Install check ball and reverse check assembly.


- **Before installation, rotate striking rod as shown in the figure to avoid interference.**

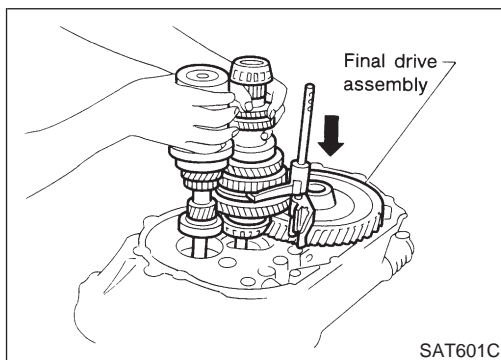


4. Install final drive assembly.

5. Install input shaft and mainshaft with 1st & 2nd shift fork assembly.


- **Be careful not to damage input shaft oil seal.**

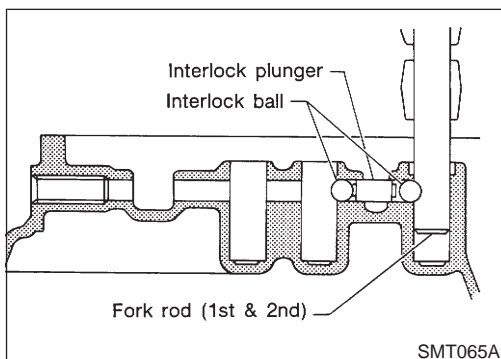


6. Install interlock balls and plunger.

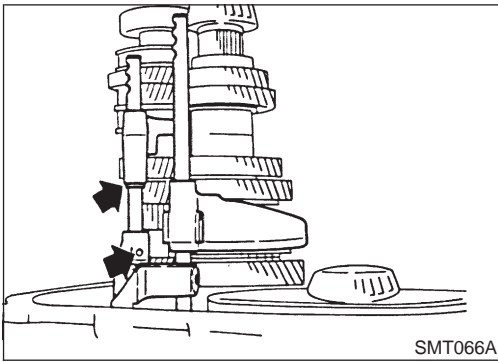


7. Install 3rd & 4th shift fork and bracket, then install 3rd & 4th fork rod, stopper ring and retaining pin.  
When installing stopper rings, use snap ring remover and installer.

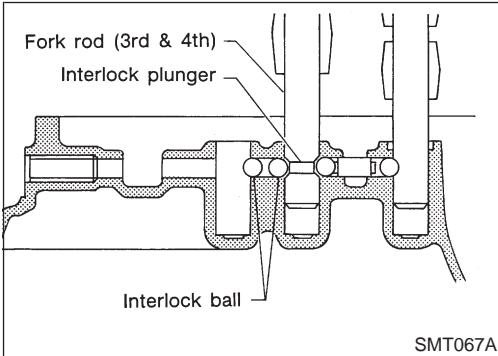


8. Install interlock balls.

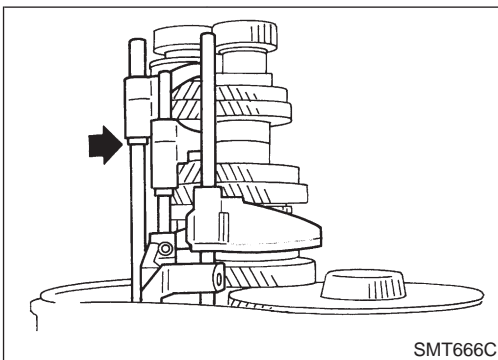


9. Install 5th shift fork, then install fork rod, stopper ring and retaining pin.  
When installing stopper rings, use snap ring remover and installer.

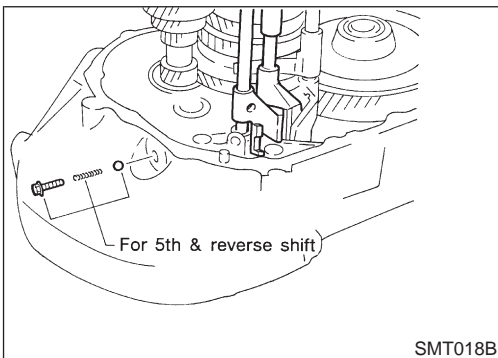


10. Install 5th & reverse check plug, spring and ball.
  - Apply sealant to bolt threads. Refer to "Shift Control Components", MT-94.

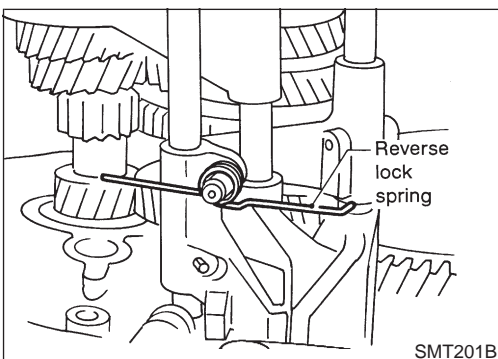


11. Install reverse lock spring on 5th & reverse bracket.
  - Pay attention to its direction.

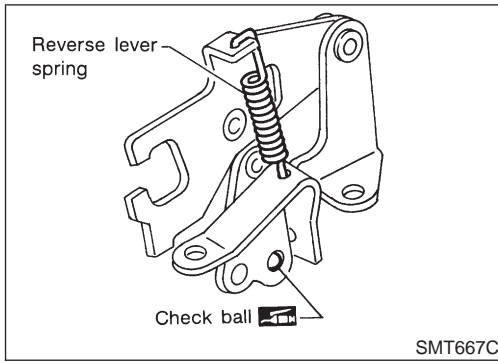


12. Install check ball and reverse lever spring on reverse lever assembly.
  - Apply multi-purpose grease to check ball.
  - Pay attention to direction of reverse lever spring.

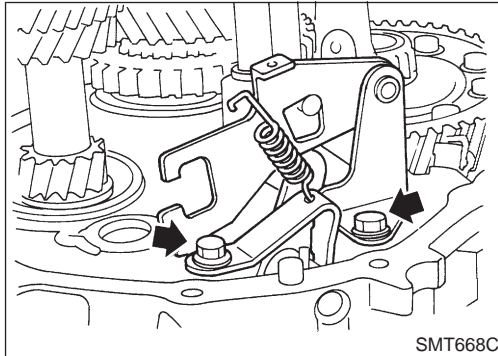


13. Install reverse lever assembly on clutch housing.

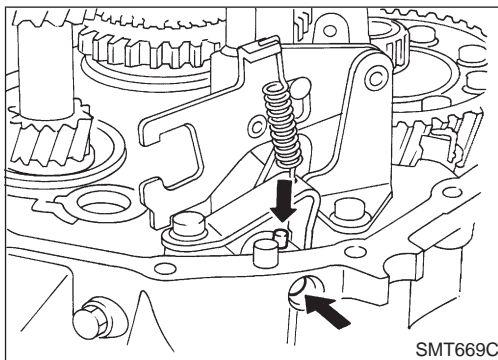


14. Install reverse arm shaft and retaining pin.

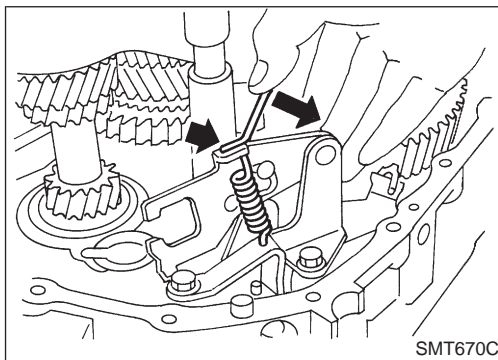


15. Hook reverse lock spring and reverse lever spring on reverse lever assembly.

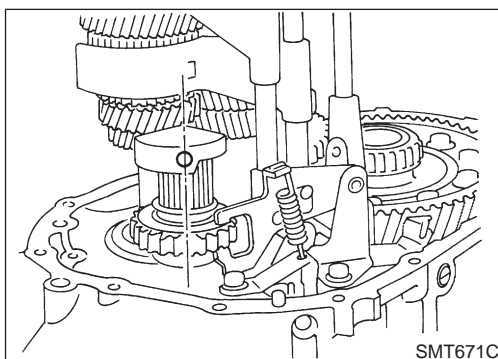

16. Mesh 4th gear, then install reverse idler gear and shaft.
  - Pay attention to direction of tapped hole.

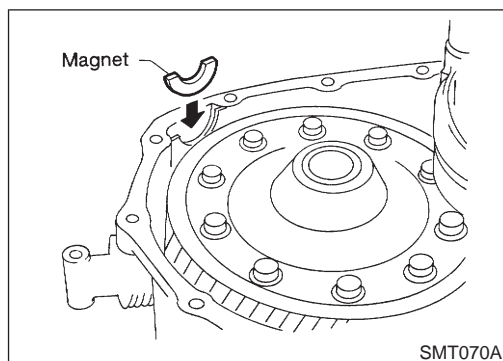

17. Place magnet on clutch housing.

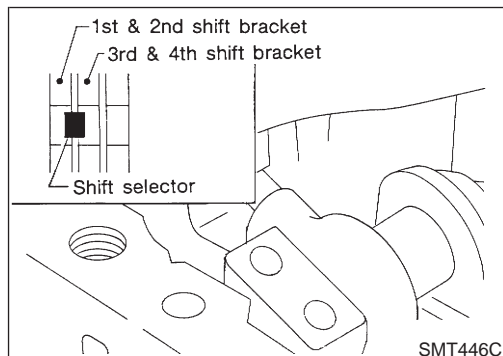


18. If bearing preload of mainshaft was adjusted, install selected shim(s) into transmission case.

- **To aid in installation of transmission case, place shift selector in the 1st and 2nd shift bracket or between 1st and 2nd bracket and 3rd and 4th bracket.**


19. Apply sealant to mating surface of transmission case and install it. Refer to "Case Components", MT-92.

20. Install PNP switch.

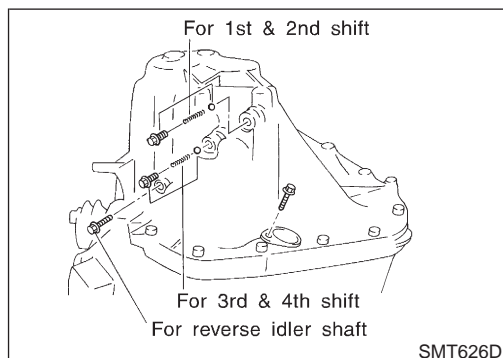

21. Apply sealant to threads of check plugs. Install balls, springs and plugs. Refer to "Shift Control Components", MT-94.

22. After assembly, check that you can shift into each gear smoothly.

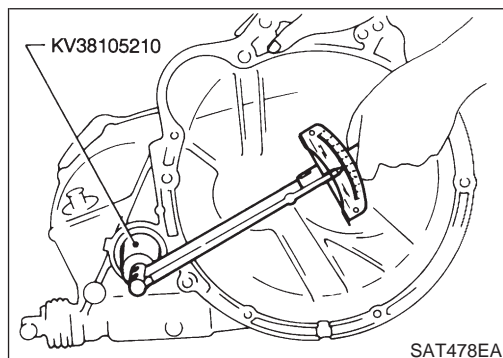

23. Measure total turning torque.

**Total turning torque (New bearing):**

**8.8 - 21.6 N·m (90 - 220 kg·cm, 78 - 191 in·lb)**


- **When old bearing is used again, preload will be slightly less than the above. Make sure torque is close to the specified range.**

## General Specifications

NJMT0068

### TRANSAXLE

NJMT0068S01

Applied model	Europe		
	QG15DE		
Model code number	4M506		
Transaxle model	RS5F30A		
Number of speeds	5		
Synchromesh type	Warner		
Shift pattern			
Gear ratio	1st	3.333	
	2nd	1.782	
	3rd	1.207	
	4th	0.902	
	5th	0.756	
	Reverse	3.417	
Number of teeth	Input gear	1st	15
		2nd	23
		3rd	29
		4th	41
		5th	45
		Rev.	12
	Main gear	1st	50
		2nd	41
		3rd	35
		4th	37
		5th	34
		Rev.	41
	Reverse idler gear	30	
Oil capacity ℓ (Imp pt)	2.8 - 3.0 (4-7/8 - 5-1/4)		
Oil level (Reference data) mm (in)	58 - 66 (2.28 - 2.60)		

### FINAL GEAR

NJMT0068S02

Engine	QG15DE	
Final gear ratio	4.167	
Number of teeth	Final gear/Pinion	75/18
	Side gear/Pinion mate gear	14/10

**Gear End Play**

NJMT0069  
Unit: mm (in)

Gear	End play
1st main gear	0.18 - 0.31 (0.0071 - 0.0122)
2nd main gear	0.20 - 0.30 (0.0079 - 0.0118)
3rd main gear	0.20 - 0.30 (0.0079 - 0.0118)
4th main gear	0.20 - 0.30 (0.0079 - 0.0118)
5th input gear	0.18 - 0.31 (0.0071 - 0.0122)

**Clearance Between Baulk Ring and Gear**

**1ST, 2ND, 3RD, 4TH & 5TH BAULK RING**

NJMT0070  
NJMT0070S02  
Unit: mm (in)

Standard	Wear limit
1.0 - 1.35 (0.0394 - 0.0531)	0.7 (0.028)

**Available Check Plugs**

**REVERSE CHECK PLUGS**

NJMT0071  
NJMT0071S01

Reverse check turning torque (At striking rod) N-m (kg-cm, in-lb)	4.9 - 7.4 (50 - 75, 43 - 65)
Thickness mm (in)	Part number*2
8.3 (0.327)	32188-M8001*1
7.1 (0.280)	32188-M8002
7.7 (0.303)	32188-M8003
8.9 (0.350)	32188-M8004

\*1: Standard size check plug

\*2: Always check with the Parts Department for the latest parts information.

**Available Snap Rings**

**INPUT SHAFT FRONT BEARING**

NJMT0074  
NJMT0074S01

Allowable clearance	0 - 0.1 mm (0 - 0.004 in)
Thickness mm (in)	Part number*
1.27 (0.0500)	32204-M8004
1.33 (0.0524)	32204-M8005
1.39 (0.0547)	32204-M8006
1.45 (0.0571)	32204-M8007

\*: Always check with the Parts Department for the latest parts information.

# SERVICE DATA AND SPECIFICATIONS (SDS)

**RS5F30A**

Available Snap Rings (Cont'd)

## INPUT SHAFT 5TH SYNCHRONIZER HUB

NJMT0074S05

Allowable clearance	0 - 0.1 mm (0 - 0.004 in)
Thickness mm (in)	Part number*
2.00 (0.0787)	32311-M8812
2.05 (0.0807)	32311-M8813
2.10 (0.0827)	32311-M8814
2.15 (0.0846)	32311-M8815
2.20 (0.0866)	32311-M8816
2.25 (0.0886)	32311-M8817
2.30 (0.0906)	32311-M8818

\*: Always check with the Parts Department for the latest parts information.

## INPUT SHAFT REAR BEARING

NJMT0074S06

Allowable clearance	0 - 0.1 mm (0 - 0.004 in)
Thickness mm (in)	Part number*
1.27 (0.0500)	32204-4M400
1.33 (0.0524)	32204-4M401
1.39 (0.0547)	32204-4M402
1.45 (0.0571)	32204-4M403

\*: Always check with the Parts Department for the latest parts information.

## Available C-rings

### MAINSHAFT C-RING

NJMT0075

NJMT0075S01

Allowable clearance		0 - 0.1 mm (0 - 0.004 in)	
Thickness mm (in)	Part number*	Thickness mm (in)	Part number*
3.63 (0.1429)	32348-M8800	4.12 (0.1622)	32348-M8807
3.70 (0.1457)	32348-M8801	4.19 (0.1650)	32348-M8808
3.77 (0.1484)	32348-M8802	4.26 (0.1677)	32348-M8809
3.84 (0.1512)	32348-M8803	4.33 (0.1705)	32348-M8810
3.91 (0.1539)	32348-M8804	4.40 (0.1732)	32348-M8811
3.98 (0.1567)	32348-M8805	4.47 (0.1760)	32348-M8812
4.05 (0.1594)	32348-M8806	4.54 (0.1787)	32348-M8813

\*: Always check with the Parts Department for the latest parts information.

## Available Washers

### DIFFERENTIAL SIDE GEAR THRUST WASHER

NJMT0072

NJMT0072S01

Allowable clearance between side gear and differential case with washer	0.1 - 0.2 mm (0.004 - 0.008 in)
Thickness mm (in)	Part number*
0.76 - 0.81 (0.0299 - 0.0319)	38424-01M10
0.81 - 0.86 (0.0319 - 0.0339)	38424-01M11
0.86 - 0.91 (0.0339 - 0.0358)	38424-01M12
0.91 - 0.96 (0.0358 - 0.0378)	38424-01M13

\*: Always check with the Parts Department for the latest parts information.



# SERVICE DATA AND SPECIFICATIONS (SDS)

**RS5F30A***Available Shims — Mainshaft and Differential Side Bearing Preload and Adjusting Shim*

## Available Shims — Mainshaft and Differential Side Bearing Preload and Adjusting Shim

NJMT0073

### BEARING PRELOAD (REUSED BEARING)

NJMT0073S01  
Unit: mm (in)

Mainshaft bearing	Differential side bearing
0.20 - 0.25 (0.0079 - 0.0098)	0.24 - 0.32 (0.0094 - 0.0126)

### TURNING TORQUE (NEW BEARING)

NJMT0073S02  
Unit: N-m (kg-cm, in-lb)

Final drive only	Total (Final drive + Mainshaft)
2.0 - 7.8 (20 - 80, 17 - 69)	3.9 - 12.3 (40 - 125, 35 - 109)

### MAINSHAFT REAR BEARING ADJUSTING SHIMS

NJMT0073S03

Thickness mm (in)	Part number*
0.10 (0.0039)	32137-M8000
0.15 (0.0059)	32137-M8001
0.20 (0.0079)	32137-M8002
0.25 (0.0098)	32137-M8003
0.30 (0.0118)	32137-M8004
0.35 (0.0138)	32137-M8005
0.40 (0.0157)	32137-M8006
0.45 (0.0177)	32137-M8007
0.50 (0.0197)	32137-M8008
0.55 (0.0217)	32137-M8009
0.60 (0.0236)	32137-M8010
0.65 (0.0256)	32137-M8011
0.70 (0.0276)	32137-M8012
0.75 (0.0295)	32137-M8013
0.80 (0.0315)	32137-M8014
0.85 (0.0335)	32137-M8015
0.90 (0.0354)	32137-M8016
0.95 (0.0374)	32137-M8017
1.00 (0.0394)	32137-M8018

\*: Always check with the Parts Department for the latest parts information.

## SERVICE DATA AND SPECIFICATIONS (SDS)

RS5F30A

Available Shims — Mainshaft and Differential Side Bearing Preload and Adjusting Shim (Cont'd)

### DIFFERENTIAL SIDE BEARING ADJUSTING SHIMS

NJMT0073S07  
Unit: mm (in)

Thickness mm (in)	Part number*
0.44 (0.0173)	38454-M8000
0.48 (0.0189)	38454-M8001
0.56 (0.0220)	38454-M8003
0.60 (0.0236)	38454-M8004
0.64 (0.0252)	38454-M8005
0.68 (0.0268)	38454-M8006
0.72 (0.0283)	38454-M8007
0.76 (0.0299)	38454-M8008
0.80 (0.0315)	38454-M8009
0.84 (0.0331)	38454-M8010
0.88 (0.0346)	38454-M8011


\*: Always check with the Parts Department for the latest parts information.

## General Specifications

NJMT0076

**TRANSAXLE**

NJMT0076S01

Applied model	Europe		
	QG18DE		
Model code number	8E069, 4M469		
Transaxle model	RS5F70A		
Number of speeds	5		
Synchromesh type	Warner		
Shift pattern			
Gear ratio	1st	3.333	
	2nd	1.955	
	3rd	1.286	
	4th	0.926	
	5th	0.733	
	Reverse	3.214	
Number of teeth	Input gear	1st	15
		2nd	22
		3rd	28
		4th	41
		5th	45
		Rev.	14
	Main gear	1st	50
		2nd	43
		3rd	36
		4th	38
		5th	33
		Rev.	45
	Reverse idler gear	37	
Oil capacity ℓ (Imp pt)	3.0 (5-1/4)		
Oil level (Reference data) mm (in)	75.5 - 80.5 (2.969 - 3.166)		
Remarks	1st & 2nd double baulk ring type synchronizer		
	Reverse sub-gear		

**FINAL GEAR**

NJMT0076S02

Engine	QG18DE
Transaxle model	RS5F70A
Final gear ratio	4.437

# SERVICE DATA AND SPECIFICATIONS (SDS)

**RS5F70A**

## Gear End Play

Number of teeth	Final gear/Pinion	71/16
	Side gear/Pinion mate gear	14/10

## Gear End Play

NJMT0077  
Unit: mm (in)

Gear	End play
1st main gear	0.18 - 0.31 (0.0071 - 0.0122)
2nd main gear	
5th main gear	
Reverse main gear	
3rd input gear	
4th input gear	0.17 - 0.44 (0.0067 - 0.0173)

## Clearance Coupling Sleeve

### 1ST, 2ND, 3RD, 4TH, 5TH & REVERSE COUPLING SLEEVE

NJMT0094

NJMT0094S01

Coupling sleeve	Length "L"
1st & 2nd	0 - 0.68 mm (0 - 0.0268 in)
3rd & 4th	0 - 0.95 mm (0 - 0.0374 in)
5th & Reverse	0 - 0.89 mm (0 - 0.0350 in)

## Clearance Between Baulk Ring and Gear

### 3RD, 4TH, 5TH, REVERSE BAULK RING


NJMT0078

NJMT0078S01  
Unit: mm (in)

Gear	Standard	Wear limit
3rd	0.90 - 1.45 (0.0354 - 0.0571)	0.7 (0.028)
4th		
5th		
Reverse	0.9 - 1.35 (0.0354 - 0.0531)	

### 1ST AND 2ND DOUBLE BAULK RING

NJMT0078S02  
Unit: mm (in)

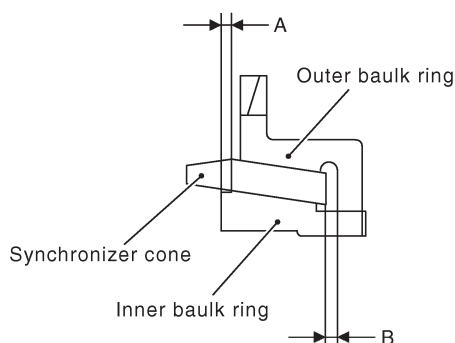

Dimension	Standard	Wear limit
A	0.6 - 0.8 (0.024 - 0.031)	0.2 (0.008)
B	0.6 - 1.1 (0.024 - 0.043)	

**Available Snap Rings**

NJMT0079

**SNAP RING**

NJMT0079S01

End play	0.05 - 0.25 mm (0.0020 - 0.0098 in)
Thickness mm (in)	Part number*
1.45 (0.0571)	32204-6J000
1.55 (0.0610)	32204-6J001
1.65 (0.0650)	32204-6J002
1.75 (0.0689)	32204-6J003
1.85 (0.0728)	32204-6J004

\*: Always check with the parts department for the latest information.

**Available C-rings**

NJMT0080

**4TH INPUT GEAR C-RING**

NJMT0080S01

End play	0 - 0.06 mm (0 - 0.0024 in)
Thickness mm (in)	Part number*
3.00 (0.1181)	32205-6J000
3.03 (0.1193)	32205-6J001
3.06 (0.1205)	32205-6J002
3.09 (0.1217)	32205-6J003
3.12 (0.1228)	32205-6J004

\*: Always check with the parts department for the latest information.

**5TH INPUT GEAR REAR C-RING**

NJMT0080S02

End play	0 - 0.06 mm (0 - 0.0024 in)
Thickness mm (in)	Part number*
2.59 (0.1020)	32205-6J005
2.62 (0.1031)	32205-6J006
2.65 (0.1043)	32205-6J007
2.68 (0.1055)	32205-6J008
2.71 (0.1067)	32205-6J009
2.74 (0.1079)	32205-6J010

\*: Always check with the parts department for the latest information.

# SERVICE DATA AND SPECIFICATIONS (SDS)

RS5F70A

Available C-rings (Cont'd)

## MAINSHAFT C-RING

NJMT0080S03

End play	0 - 0.06 mm (0 - 0.0024 in)
Thickness mm (in)	Part number*
3.48 (0.1370)	32348-6J000
3.51 (0.1382)	32348-6J001
3.54 (0.1394)	32348-6J002
3.57 (0.1406)	32348-6J003
3.60 (0.1417)	32348-6J004
3.63 (0.1429)	32348-6J005
3.66 (0.1441)	32348-6J006
3.69 (0.1453)	32348-6J007
3.72 (0.1465)	32348-6J008
3.75 (0.1476)	32348-6J009
3.78 (0.1488)	32348-6J010
3.81 (0.1500)	32348-6J011
3.84 (0.1512)	32348-6J012
3.87 (0.1524)	32348-6J013
3.90 (0.1535)	32348-6J014
3.93 (0.1547)	32348-6J015
3.96 (0.1559)	32348-6J016

\*: Always check with the parts department for the latest information.

**Available Adjusting Shims**

NJMT0081

**INPUT SHAFT REAR BEARING ADJUSTING SHIM**

NJMT0081S01

End play	0 - 0.06 mm (0 - 0.0024 in)	
	Thickness mm (in)	Part number*
	0.74 (0.0291)	32225-6J003
	0.78 (0.0307)	32225-6J004
	0.82 (0.0323)	32225-6J005
	0.86 (0.0339)	32225-6J006
	0.90 (0.0354)	32225-6J007
	0.94 (0.0370)	32225-6J008
	0.98 (0.0386)	32225-6J009
	1.02 (0.0402)	32225-6J010
	1.06 (0.0417)	32225-6J011
	1.10 (0.0433)	32225-6J012
	1.14 (0.0449)	32225-6J013
	1.18 (0.0465)	32225-6J014
	1.22 (0.0480)	32225-6J015
	1.26 (0.0496)	32225-6J016
	1.30 (0.0512)	32225-6J017
	1.34 (0.0528)	32225-6J018
	1.38 (0.0543)	32225-6J019
	1.42 (0.0559)	32225-6J020
	1.46 (0.0575)	32225-6J021
	1.50 (0.0591)	32225-6J022
	1.54 (0.0606)	32225-6J023
	1.58 (0.0622)	32225-6J024
	1.62 (0.0638)	32225-6J060
	1.66 (0.0654)	32225-6J061

\*: Always check with the parts department for the latest information.


# SERVICE DATA AND SPECIFICATIONS (SDS)

**RS5F70A**

Available Adjusting Shims (Cont'd)

## MAINSHAFT ADJUSTING SHIM

NJMT0081S02

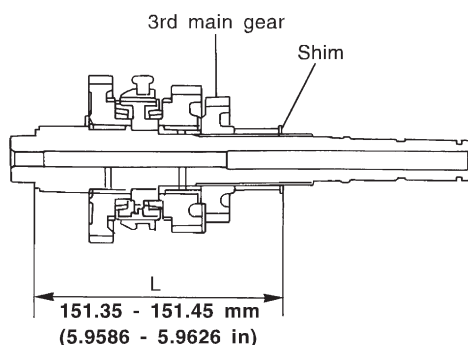

SMT907D

Standard length "L"	151.35 - 151.45 mm (5.9586 - 5.9626 in)
Thickness mm (in)	Part number*
0.48 (0.0189)	32238-6J000
0.56 (0.0220)	32238-6J001
0.64 (0.0252)	32238-6J002
0.72 (0.0283)	32238-6J003
0.80 (0.0315)	32238-6J004
0.88 (0.0346)	32238-6J005

\*: Always check with the parts department for the latest information.

## MAINSHAFT REAR BEARING ADJUSTING SHIM

NJMT0081S03

End play	0 - 0.06 mm (0 - 0.0024 in)
Thickness mm (in)	Part number*
2.99 (0.1177)	32238-6J010
3.03 (0.1193)	32238-6J011
3.07 (0.1209)	32238-6J012
3.11 (0.1224)	32238-6J013
3.15 (0.1240)	32238-6J014
3.19 (0.1256)	32238-6J015
3.23 (0.1272)	32238-6J016
3.27 (0.1287)	32238-6J017
3.31 (0.1303)	32238-6J018
3.35 (0.1319)	32238-6J019
3.39 (0.1335)	32238-6J020
3.43 (0.1350)	32238-6J021
3.47 (0.1366)	32238-6J022
3.51 (0.1382)	32238-6J023

\*: Always check with the parts department for the latest information.




**Available Thrust Washer**

NJMT0082

**MAINSHAFT THRUST WASHER**

NJMT0082S01

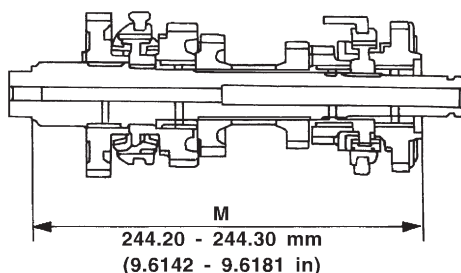

SMT843D

Standard length "M"	244.20 - 244.30 mm (9.6142 - 9.6181 in)
Thickness mm (in)	Part number*
6.04 (0.2378)	32246-6J000
6.12 (0.2409)	32246-6J001
6.20 (0.2441)	32246-6J002
6.28 (0.2472)	32246-6J003
6.36 (0.2504)	32246-6J004

\*: Always check with the parts department for the latest information.

**Available Washers**

NJMT0083

**DIFFERENTIAL SIDE GEAR THRUST WASHER**

NJMT0083S01

Clearance between side gear and differential case	0.1 - 0.2 mm (0.004 - 0.008 in)
Thickness mm (in)	Part number*
0.75 - 0.80 (0.0295 - 0.0315)	38424-D2111
0.80 - 0.85 (0.0315 - 0.0335)	38424-D2112
0.85 - 0.90 (0.0335 - 0.0354)	38424-D2113
0.90 - 0.95 (0.0354 - 0.0374)	38424-D2114
0.95 - 1.00 (0.0374 - 0.0394)	38424-D2115

\*: Always check with the parts department for the latest information.

# SERVICE DATA AND SPECIFICATIONS (SDS)

RS5F70A

Available Shims — Differential Side Bearing Preload and Adjusting Shim

## Available Shims — Differential Side Bearing Preload and Adjusting Shim

### BEARING PRELOAD

=NJMT0084

NJMT0084S01  
Unit: mm (in)

Differential side bearing preload: T*	0.15 - 0.21 (0.0059 - 0.0083)
---------------------------------------	-------------------------------

\*: Install shims which are “deflection of differential case” + “T” in thickness.

### DIFFERENTIAL SIDE BEARING ADJUSTING SHIMS

NJMT0084S02

Thickness mm (in)	Part number*
0.44 (0.0173)	38454-M8000
0.48 (0.0189)	38454-M8001
0.52 (0.0205)	38454-M8002
0.56 (0.0220)	38454-M8003
0.60 (0.0236)	38454-M8004
0.64 (0.0252)	38454-M8005
0.68 (0.0268)	38454-M8006
0.72 (0.0283)	38454-M8007
0.76 (0.0299)	38454-M8008
0.80 (0.0315)	38454-M8009
0.84 (0.0331)	38454-M8010
0.88 (0.0346)	38454-M8011


\*: Always check with the parts department for the latest information.

**General Specifications**

NJMT0024

**TRANSAXLE**

NJMT0024S01

Applied model	Europe		
	YD22DDT		
Model code number	WD807		
Transaxle model	RS5F50A		
Number of speeds	5		
Synchromesh type	Warner		
Shift pattern			
Gear ratio	1st	3.400	
	2nd	1.955	
	3rd	1.206	
	4th	0.829	
	5th	0.641	
	Reverse	3.428	
Number of teeth	Input gear	1st	15
		2nd	22
		3rd	29
		4th	47
		5th	53
		Rev.	14
	Main gear	1st	51
		2nd	32
		3rd	35
		4th	39
		5th	34
		Rev.	48
	Reverse idler gear	29	
Oil capacity ℓ (US pt, Imp pt)	4.5 - 4.8 (9-1/2 - 10-1/8, 7-7/8 - 8-1/2)		
Remarks	1st & 2nd double baulk ring type synchronizer		

**FINAL GEAR**

NJMT0024S02

Engine	YD22DDT	
Transaxle model	RS5F50A	
Final gear ratio	3.823	
Number of teeth	Final gear/Pinion	65/17
	Side gear/Pinion	14/10

## Gear End Play

NJMT0025  
Unit: mm (in)

Gear	End play
1st main gear	0.23 - 0.43 (0.0091 - 0.0169)
2nd main gear	0.23 - 0.58 (0.0091 - 0.0228)
3rd input gear	0.23 - 0.43 (0.0091 - 0.0169)
4th input gear	0.25 - 0.55 (0.0098 - 0.0217)
5th input gear	0.23 - 0.48 (0.0091 - 0.0189)

## Clearance Between Baulk Ring and Gear


### 3RD, 4TH & 5TH BAULK RING

NJMT0026  
NJMT0026S01  
Unit: mm (in)

Gear	Standard	Wear limit
3rd, 4th & 5th	1.0 - 1.35 (0.0394 - 0.0531)	0.7 (0.028)

### 1ST AND 2ND DOUBLE BAULK RING

NJMT0026S02  
Unit: mm (in)

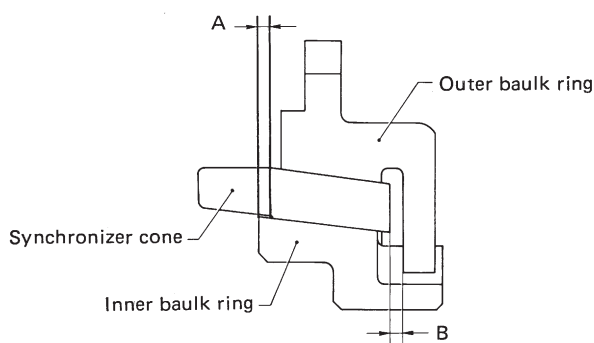


SMT806B

Dimension	Standard	Wear limit
A	0.6 - 0.8 (0.024 - 0.031)	0.2 (0.008)
B	0.6 - 1.1 (0.024 - 0.043)	

### REVERSE BAULK RING

NJMT0026S03

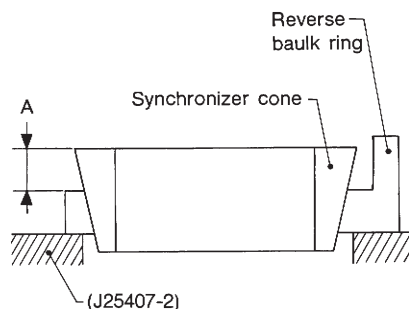

SMT581B

Dimension	Wear limit
A	1.2 mm (0.047 in)

**Available Snap Rings**

=NJMT0027

**1ST & 2ND SYNCHRONIZER HUB (AT MAINSHAFT)**

NJMT0027S01

Allowable clearance	0 - 0.1 mm (0 - 0.004 in)
Thickness mm (in)	Part number*
1.95 (0.0768)	32269-03E03
2.00 (0.0787)	32269-03E00
2.05 (0.0807)	32269-03E01
2.10 (0.0827)	32269-03E02

\*: Always check with the Parts Department for the latest parts information.

**3RD & 4TH SYNCHRONIZER HUB (AT INPUT SHAFT)**

NJMT0027S02

Allowable clearance	0 - 0.1 mm (0 - 0.004 in)
Thickness mm (in)	Part number*
1.95 (0.0768)	32269-03E03
2.00 (0.0787)	32269-03E00
2.05 (0.0807)	32269-03E01
2.10 (0.0827)	32269-03E02

\*: Always check with the Parts Department for the latest parts information.

**5TH MAIN GEAR (AT MAINSHAFT)**

NJMT0027S03

Allowable clearance	0 - 0.15 mm (0 - 0.0059 in)
Thickness mm (in)	Part number*
1.95 (0.0768)	32348-05E00
2.05 (0.0807)	32348-05E01
2.15 (0.0846)	32348-05E02
2.25 (0.0886)	32348-05E03

\*: Always check with the Parts Department for the latest parts information.

**Available Thrust Washer**

NJMT0028

**4TH INPUT GEAR (AT INPUT SHAFT)**

NJMT0028S01

Allowable clearance	0 - 0.06 mm (0 - 0.0024 in)
Thickness mm (in)	Part number*
4.500 (0.1772)	32278-03E01
4.525 (0.1781)	32278-03E02
4.550 (0.1791)	32278-03E03
4.575 (0.1801)	32278-03E04

\*: Always check with the Parts Department for the latest parts information.

**DIFFERENTIAL SIDE GEAR THRUST WASHER**

NJMT0028S02

Allowable clearance between side gear and differential case with washer	0.1 - 0.2 mm (0.004 - 0.008 in)
Thickness mm (in)	Part number*
0.75 - 0.80 (0.0295 - 0.0315)	38424-E3020
0.80 - 0.85 (0.0315 - 0.0335)	38424-E3021
0.85 - 0.90 (0.0335 - 0.0354)	38424-E3022
0.90 - 0.95 (0.0354 - 0.0374)	38424-E3023

\*: Always check with the Parts Department for the latest parts information.

# SERVICE DATA AND SPECIFICATIONS (SDS)

**RS5F50A**

Available Shims

## Available Shims

— INPUT SHAFT END PLAY AND MAINSHAFT AND DIFFERENTIAL SIDE BEARING PRELOAD AND ADJUSTING SHIM =NJMT0029

### BEARING PRELOAD AND END PLAY

NJMT0029S01  
Unit: mm (in)

Mainshaft bearing preload	0.06 - 0.11 (0.0024 - 0.0043)
Input shaft end play	0 - 0.05 (0 - 0.0020)
Differential side bearing preload	0.40 - 0.45 (0.0157 - 0.0177)

### TOTAL TURNING TORQUE (NEW BEARING)

NJMT0029S02  
Unit: N·m (kg·cm, in·lb)

Total turning torque (new bearing)	8.8 - 21.6 (90 - 220, 78 - 191)
------------------------------------	---------------------------------

### MAINSHAFT BEARING ADJUSTING SHIM

NJMT0029S03

Thickness mm (in)	Part number*
0.40 (0.0157)	32139-03E11
0.44 (0.0173)	32139-03E00
0.48 (0.0189)	32139-03E01
0.52 (0.0205)	32139-03E12
0.56 (0.0220)	32139-03E02
0.60 (0.0236)	32139-03E03
0.64 (0.0252)	32139-03E04
0.68 (0.0268)	32139-03E05
0.72 (0.0283)	32139-03E06
0.76 (0.0299)	32139-03E07
0.80 (0.0315)	32139-03E08
1.20 (0.0472)	32139-03E13

\*: Always check with the Parts Department for the latest parts information.

### TABLE FOR SELECTING MAINSHAFT BEARING ADJUSTING SHIM(S)

NJMT0029S04  
Unit: mm (in)

Dimension "C"	Suitable shim(s)
0.30 - 0.34 (0.0118 - 0.0134)	0.40 (0.0157)
0.34 - 0.38 (0.0134 - 0.0150)	0.44 (0.0173)
0.38 - 0.42 (0.0150 - 0.0165)	0.48 (0.0189)
0.42 - 0.46 (0.0165 - 0.0181)	0.52 (0.0205)
0.46 - 0.50 (0.0181 - 0.0197)	0.56 (0.0220)
0.50 - 0.54 (0.0197 - 0.0213)	0.60 (0.0236)
0.54 - 0.58 (0.0213 - 0.0228)	0.64 (0.0252)
0.58 - 0.62 (0.0228 - 0.0244)	0.68 (0.0268)
0.62 - 0.66 (0.0244 - 0.0260)	0.72 (0.0283)
0.66 - 0.70 (0.0260 - 0.0276)	0.76 (0.0299)
0.70 - 0.74 (0.0276 - 0.0291)	0.80 (0.0315)
0.74 - 0.78 (0.0291 - 0.0307)	0.40 + 0.44 (0.0157 + 0.0173)
0.78 - 0.82 (0.0307 - 0.0323)	0.44 + 0.44 (0.0173 + 0.0173)
0.82 - 0.86 (0.0323 - 0.0339)	0.44 + 0.48 (0.0173 + 0.0189)
0.86 - 0.90 (0.0339 - 0.0354)	0.48 + 0.48 (0.0189 + 0.0189)
0.90 - 0.94 (0.0354 - 0.0370)	0.48 + 0.52 (0.0189 + 0.0205)
0.94 - 0.98 (0.0370 - 0.0386)	0.52 + 0.52 (0.0205 + 0.0205)
0.98 - 1.02 (0.0386 - 0.0402)	0.52 + 0.56 (0.0205 + 0.0220)
1.02 - 1.06 (0.0402 - 0.0417)	0.56 + 0.56 (0.0220 + 0.0220)
1.06 - 1.10 (0.0417 - 0.0433)	0.56 + 0.60 (0.0220 + 0.0236)
1.10 - 1.14 (0.0433 - 0.0449)	0.60 + 0.60 (0.0236 + 0.0236)
1.14 - 1.18 (0.0449 - 0.0465)	0.60 + 0.64 (0.0236 + 0.0252)
1.18 - 1.22 (0.0465 - 0.0480)	0.64 + 0.64 (0.0252 + 0.0252)
1.22 - 1.26 (0.0480 - 0.0496)	0.64 + 0.68 (0.0252 + 0.0268)
1.26 - 1.30 (0.0496 - 0.0512)	0.68 + 0.68 (0.0268 + 0.0268)
1.30 - 1.34 (0.0512 - 0.0528)	0.68 + 0.72 (0.0268 + 0.0283)
1.34 - 1.38 (0.0528 - 0.0543)	0.72 + 0.72 (0.0283 + 0.0283)
1.38 - 1.42 (0.0543 - 0.0559)	0.72 + 0.76 (0.0283 + 0.0299)
1.42 - 1.46 (0.0559 - 0.0575)	0.76 + 0.76 (0.0299 + 0.0299)
1.46 - 1.50 (0.0575 - 0.0591)	0.76 + 0.80 (0.0299 + 0.0315)

# SERVICE DATA AND SPECIFICATIONS (SDS)

**RS5F50A**

*Available Shims (Cont'd)*

## INPUT SHAFT BEARING ADJUSTING SHIM

NJMT0029S05

Thickness mm (in)	Part number*
0.40 (0.0157)	32225-08E00
0.44 (0.0173)	32225-08E01
0.48 (0.0189)	32225-08E02
0.52 (0.0205)	32225-08E03
0.56 (0.0220)	32225-08E04
0.60 (0.0236)	32225-08E05
0.64 (0.0252)	32225-08E06
0.68 (0.0268)	32225-08E07
0.72 (0.0283)	32225-08E08
0.76 (0.0299)	32225-08E09
0.80 (0.0315)	32225-08E10
1.20 (0.0472)	32225-08E11

\*: Always check with the Parts Department for the latest parts information.

## TABLE FOR SELECTING INPUT SHAFT BEARING ADJUSTING SHIM(S)

NJMT0029S06  
Unit: mm (in)

Dial indicator indication	Suitable shim(s)
0.65 - 0.69 (0.0256 - 0.0272)	0.64 (0.0252)
0.69 - 0.73 (0.0272 - 0.0287)	0.68 (0.0268)
0.73 - 0.77 (0.0287 - 0.0303)	0.72 (0.0283)
0.77 - 0.81 (0.0303 - 0.0319)	0.76 (0.0299)
0.81 - 0.85 (0.0319 - 0.0335)	0.80 (0.0315)
0.85 - 0.89 (0.0335 - 0.0350)	0.40 + 0.44 (0.0157 + 0.0173)
0.89 - 0.93 (0.0350 - 0.0366)	0.44 + 0.44 (0.0173 + 0.0173)
0.93 - 0.97 (0.0366 - 0.0382)	0.44 + 0.48 (0.0173 + 0.0189)
0.97 - 1.01 (0.0382 - 0.0398)	0.48 + 0.48 (0.0189 + 0.0189)
1.01 - 1.05 (0.0398 - 0.0413)	0.48 + 0.52 (0.0189 + 0.0205)
1.05 - 1.09 (0.0413 - 0.0429)	0.52 + 0.52 (0.0205 + 0.0205)
1.09 - 1.13 (0.0429 - 0.0445)	0.52 + 0.56 (0.0205 + 0.0220)
1.13 - 1.17 (0.0445 - 0.0461)	0.56 + 0.56 (0.0220 + 0.0220)
1.17 - 1.21 (0.0461 - 0.0476)	0.56 + 0.60 (0.0220 + 0.0236)
1.21 - 1.25 (0.0476 - 0.0492)	0.60 + 0.60 (0.0236 + 0.0236)
1.25 - 1.29 (0.0492 - 0.0508)	0.60 + 0.64 (0.0236 + 0.0252)
1.29 - 1.33 (0.0508 - 0.0524)	0.64 + 0.64 (0.0252 + 0.0252)
1.33 - 1.37 (0.0524 - 0.0539)	0.64 + 0.68 (0.0252 + 0.0268)
1.37 - 1.41 (0.0539 - 0.0555)	0.68 + 0.68 (0.0268 + 0.0268)
1.41 - 1.45 (0.0555 - 0.0571)	0.68 + 0.72 (0.0268 + 0.0283)
1.45 - 1.49 (0.0571 - 0.0587)	0.72 + 0.72 (0.0283 + 0.0283)
1.49 - 1.53 (0.0587 - 0.0602)	0.72 + 0.76 (0.0283 + 0.0299)
1.53 - 1.57 (0.0602 - 0.0618)	0.76 + 0.76 (0.0299 + 0.0299)
1.57 - 1.61 (0.0618 - 0.0634)	0.76 + 0.80 (0.0299 + 0.0315)
1.61 - 1.65 (0.0634 - 0.0650)	0.80 + 0.80 (0.0315 + 0.0315)
1.65 - 1.69 (0.0650 - 0.0665)	0.44 + 1.20 (0.0173 + 0.0472)

## DIFFERENTIAL SIDE BEARING ADJUSTING SHIM

NJMT0029S07

Thickness mm (in)	Part number*
0.40 (0.0157)	38453-96E00
0.44 (0.0173)	38453-96E01
0.48 (0.0189)	38453-96E02
0.52 (0.0205)	38453-96E03
0.56 (0.0220)	38453-96E04
0.60 (0.0236)	38453-96E05
0.64 (0.0252)	38453-96E06
0.68 (0.0268)	38453-96E07
0.72 (0.0283)	38453-96E08
0.76 (0.0299)	38453-96E09
0.80 (0.0315)	38453-96E10
0.84 (0.0331)	38453-96E11
0.88 (0.0346)	38453-96E12
1.20 (0.0472)	38453-96E13

\*: Always check with the Parts Department for the latest parts information.

# SERVICE DATA AND SPECIFICATIONS (SDS)

**RS5F50A**

Available Shims (Cont'd)

## TABLE FOR SELECTING DIFFERENTIAL SIDE BEARING ADJUSTING SHIM(S)

=NJMT0029S08  
Unit: mm (in)

Dial indicator deflection	Suitable shim(s)
0.47 - 0.51 (0.0185 - 0.0201)	0.44 + 0.48 (0.0173 + 0.0189)
0.51 - 0.55 (0.0201 - 0.0217)	0.48 + 0.48 (0.0189 + 0.0189)
0.55 - 0.59 (0.0217 - 0.0232)	0.48 + 0.52 (0.0189 + 0.0205)
0.59 - 0.63 (0.0232 - 0.0248)	0.52 + 0.52 (0.0205 + 0.0205)
0.63 - 0.67 (0.0248 - 0.0264)	0.52 + 0.56 (0.0205 + 0.0220)
0.67 - 0.71 (0.0264 - 0.0280)	0.56 + 0.56 (0.0220 + 0.0220)
0.71 - 0.75 (0.0280 - 0.0295)	0.56 + 0.60 (0.0220 + 0.0236)
0.75 - 0.79 (0.0295 - 0.0311)	0.60 + 0.60 (0.0236 + 0.0236)
0.79 - 0.83 (0.0311 - 0.0327)	0.60 + 0.64 (0.0236 + 0.0252)
0.83 - 0.87 (0.0327 - 0.0343)	0.64 + 0.64 (0.0252 + 0.0252)
0.87 - 0.91 (0.0343 - 0.0358)	0.64 + 0.68 (0.0252 + 0.0268)
0.91 - 0.95 (0.0358 - 0.0374)	0.68 + 0.68 (0.0268 + 0.0268)
0.95 - 0.99 (0.0374 - 0.0390)	0.68 + 0.72 (0.0268 + 0.0283)
0.99 - 1.03 (0.0390 - 0.0406)	0.72 + 0.72 (0.0283 + 0.0283)
1.03 - 1.07 (0.0406 - 0.0421)	0.72 + 0.76 (0.0283 + 0.0299)
1.07 - 1.11 (0.0421 - 0.0437)	0.76 + 0.76 (0.0299 + 0.0299)
1.11 - 1.15 (0.0437 - 0.0453)	0.76 + 0.80 (0.0299 + 0.0315)
1.15 - 1.19 (0.0453 - 0.0469)	0.80 + 0.80 (0.0315 + 0.0315)
1.19 - 1.23 (0.0469 - 0.0484)	0.44 + 1.20 (0.0173 + 0.0472)
1.23 - 1.27 (0.0484 - 0.0500)	0.48 + 1.20 (0.0189 + 0.0472)
1.27 - 1.31 (0.0500 - 0.0516)	0.52 + 1.20 (0.0205 + 0.0472)