

SECTION **PR**  
PROPELLER SHAFT

A  
B  
C

PR

CONTENTS

E

|   |   |  |           |   |
|---|---|--|-----------|---|
| <b>PREPARATION</b> .....                    | 2 | Removal and Installation .....                     | 5         | F |
| Special Service Tools .....                 | 2 | REMOVAL .....                                      | 5         |   |
| Commercial Service Tools .....              | 2 | INSPECTION .....                                   | 6         |   |
| <b>NOISE, VIBRATION AND HARSHNESS (NVH)</b> |   | INSTALLATION .....                                 | 7         | G |
| <b>TROUBLESHOOTING</b> .....                | 3 | Disassembly and Assembly of Center Bearing .....   | 8         |   |
| NVH Troubleshooting Chart .....             | 3 | DISASSEMBLY .....                                  | 8         |   |
| <b>REAR PROPELLER SHAFT</b> .....           | 4 | ASSEMBLY .....                                     | 9         | H |
| On-Vehicle Inspection .....                 | 4 | <b>SERVICE DATA AND SPECIFICATIONS (SDS) .....</b> | <b>10</b> |   |
| APPEARANCE AND NOISE INSPECTION .....       | 4 | General Specifications .....                       | 10        |   |
| PROPELLER SHAFT VIBRATION .....             | 4 | Journal Axial Play .....                           | 10        | I |
| Components .....                            | 5 | Propeller Shaft Runout .....                       | 10        |   |

H

J

K

L

M

# PREPARATION

## PREPARATION


PFP:00002

### Special Service Tools


NDS00015

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

| Tool number<br>(Kent-Moore No.)<br>Tool name   | Description                                    |
|--|--|
| ST38060002<br>(J-34311)<br>Flange wrench   | Removing and installing center flange lock nut |
| ST30031000<br>(J-22912-01)<br>Puller<br>a: 90 mm (3.54 in) dia.<br>b: 50 mm (1.97 in) dia. | Remove rear propeller shaft center bearing     |

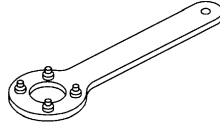

NT113

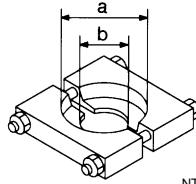


NT411

### Commercial Service Tools

NDS00016

| Tool name  | Description              |
|------------|--------------------------|
| Power tool | Loosening bolts and nuts |

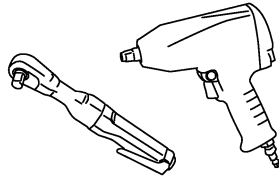

PBIC0190E

# NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

## NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

PFP:00003

### NVH Troubleshooting Chart

NDS00017

Use the chart below to help you find the cause of the symptom. If necessary, repair or replace these parts.

| Reference page                     |           | <a href="#">PR-4</a>   | <a href="#">PR-7</a>                 | —                                       | <a href="#">PR-5</a>  | —                     | <a href="#">PR-4</a> | <a href="#">PR-6</a> | NVH in RFD section | NVH in FAX, RAX, FSU, and RSU section | NVH in WT section | NVH in WT section | NVH in RAX section | NVH in BR section | NVH in PS section |
|------------------------------------|-----------|------------------------|--------------------------------------|---|---|-----------------------|----------------------|----------------------|--------------------|---------------------------------------|-------------------|-------------------|--------------------|-------------------|-------------------|
| Possible cause and SUSPECTED PARTS |           | Uneven rotating torque | Center bearing improper installation | Excessive center bearing axial end play | Center bearing mounting (insulator) cracks, damage or deterioration | Excessive joint angle | Rotation imbalance   | Excessive runout     | DIFFERENTIAL       | AXLE AND SUSPENSION                   | TIRES             | ROAD WHEEL        | DRIVE SHAFT        | BRAKES            | STEERING          |
| Symptom                            | Noise     | x                      | x                                    | x                                       | x   | x                     | x                    | x                    | x                  | x                                     | x                 | x                 | x                  | x                 | x                 |
|                                    | Shake     |                        | x                                    |   |   | x                     |                      |                      |                    | x                                     | x                 | x                 | x                  | x                 | x                 |
|                                    | Vibration | x                      | x                                    | x                                       | x   | x                     | x                    | x                    |                    | x                                     | x                 |                   | x                  |                   | x                 |

x: Applicable

A  
B  
C  
**PR**  
E  
F  
G  
H  
I  
J  
K  
L  
M

# REAR PROPELLER SHAFT

## REAR PROPELLER SHAFT

PFP:37000

### On-Vehicle Inspection

NDS00018

#### APPEARANCE AND NOISE INSPECTION


- Check the propeller shaft tube surface for dents or cracks. If damaged, replace propeller shaft assembly.
- If center bearing is noisy or damaged, replace center bearing.

#### PROPELLER SHAFT VIBRATION

If vibration is present at high speed, inspect propeller shaft runout first.

1. Measure propeller shaft runout at runout measuring points by rotating final drive companion flange with hands.

**Propeller shaft runout limit : 0.8 mm (0.031 in) or less**

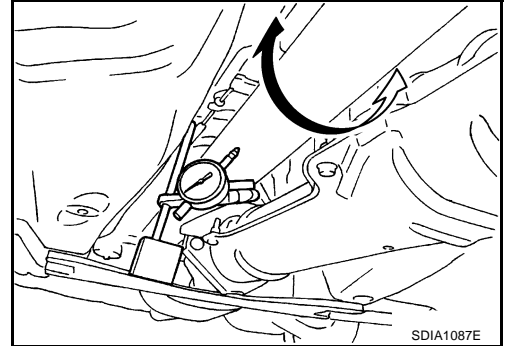


#### Propeller shaft runout measuring points

**Dimension A: 192 mm (7.56 in)**

**B: 172 mm (6.77 in)**

**C: 170 mm (6.69 in)**


2. If runout still exceeds specifications, separate propeller shaft at final drive companion flange; then rotate companion flange 90, 180, 270 degrees and install propeller shaft.
3. Check runout again. If runout still exceeds specifications, replace propeller shaft assembly.
4. Check the vibration by driving vehicle.

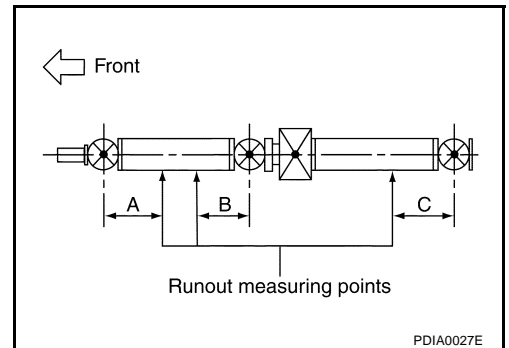

# REAR PROPELLER SHAFT

## Components

NDS00019

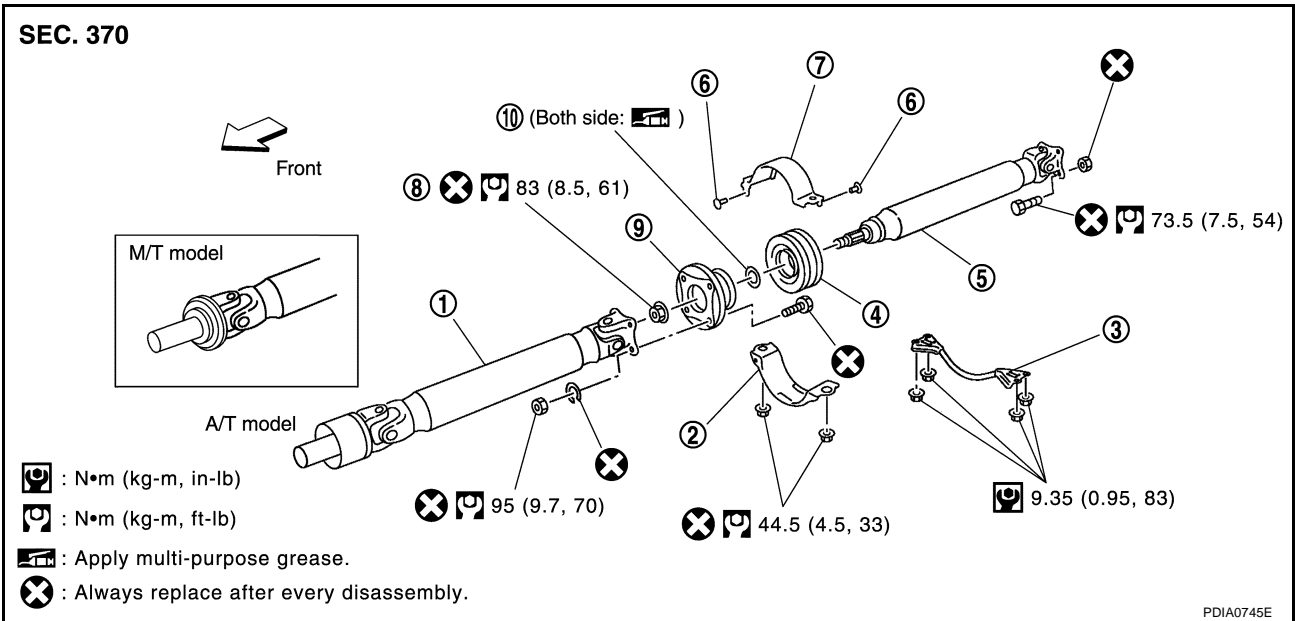

- |  |  |                     |
|--|--|---------------------|
| 1. Propeller shaft (1st shaft)             | 2. Center bearing mounting bracket (Lower) | 3. Floor rain force |
| 4. Center bearing                          | 5. Propeller shaft (2nd shaft)             | 6. Clip             |
| 7. Center bearing mounting bracket (Upper) | 8. Lock nut                                | 9. Center flange    |
| 10. Washer                                 |  |                     |

### NOTE:

- The joint cannot be disassembled.
- The center bearing can be disassembled. Refer to [PR-8, "Disassembly and Assembly of Center Bearing"](#).

## Removal and Installation

### REMOVAL

NDS0001A

1. Move A/T selector lever to N position or set M/T shift lever to neutral position.
2. Release parking brake.
3. Remove the center muffler with power tool. Refer to [EX-3, "Removal and Installation"](#).
4. Loosen mounting nuts of center bearing mounting brackets with power tool.

### CAUTION:


**Tighten mounting nuts temporarily.**

5. Put matching marks on propeller shaft flange yoke with final drive companion flange.

### CAUTION:

**For matching mark, use paint. Do not damage propeller shaft flange yoke and companion flange.**

6. Remove propeller shaft fixing bolts and nuts.
7. Remove center bearing mounting bracket fixing nuts.
8. Remove propeller shaft.

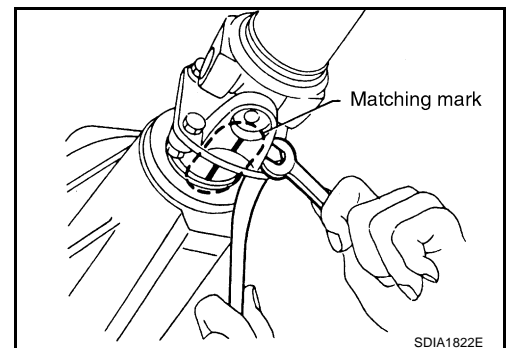


# REAR PROPELLER SHAFT

## INSPECTION

- Inspect propeller shaft runout at measuring points. If runout exceeds specifications, replace propeller shaft assembly.

**Propeller shaft runout limit : 0.8 mm (0.031 in) or less**

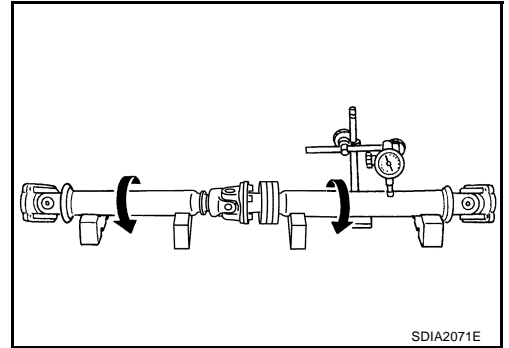


### Propeller shaft runout measuring points

**Dimension A: 192 mm (7.56 in)**

**B: 172 mm (6.77 in)**

**C: 170 mm (6.69 in)**

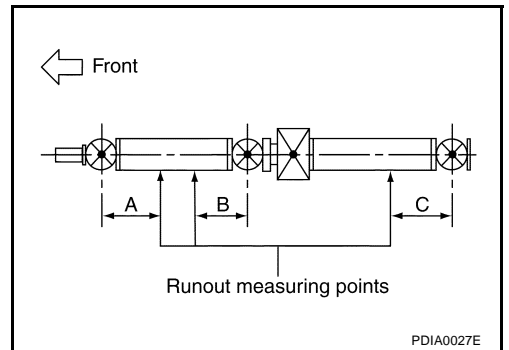

- As shown in the figure, while fixing yoke on one side, check axial play of joint. If outside the standard, replace relevant propeller shaft.


**Journal axial play : 0 mm (0 in)**

- Check propeller shaft for bend and damage. If damage is detected, replace relevant propeller shaft.

### **CAUTION:**

**Do not disassemble joints.**

- Check center bearing for noise and damage. If noise or damage is detected, replace center bearing. Refer to [PR-8, "Disassembly and Assembly of Center Bearing"](#).

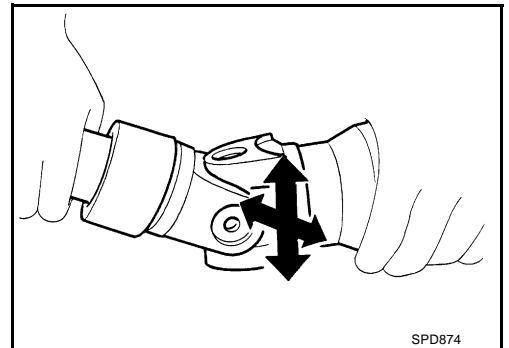


# REAR PROPELLER SHAFT

## INSTALLATION


Note the following, and install in the reverse order of removal.

- Align matching marks to install propeller shaft to final drive companion flange, and then tighten to specified torque. Refer to [PR-5, "Components"](#).
- Install center bearing mounting bracket (Upper) with its arrow mark facing forward.
- Adjust position of mounting bracket sliding back and forth to prevent play in thrust direction of center bearing insulator. Install bracket to vehicle.
- After assembly, perform a driving test to check propeller shaft vibration. If vibration occurred, separate propeller shaft from final drive. Reinstall companion flange after rotating it by 90, 180, 270 degrees. Then perform driving test and check propeller shaft vibration again at each point.

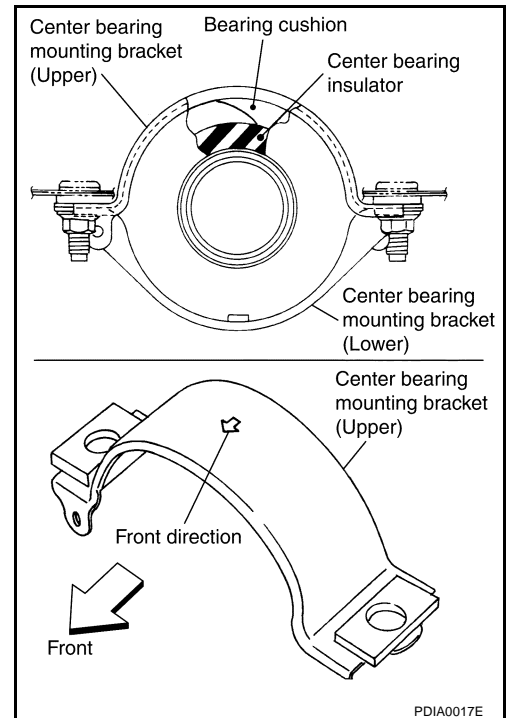


- If propeller shaft or final drive has been replaced, connect them as follows:

1. Install propeller shaft while aligning its matching mark A with the matching mark B on the joint as close as possible.
2. Temporarily tighten bolts and nuts.

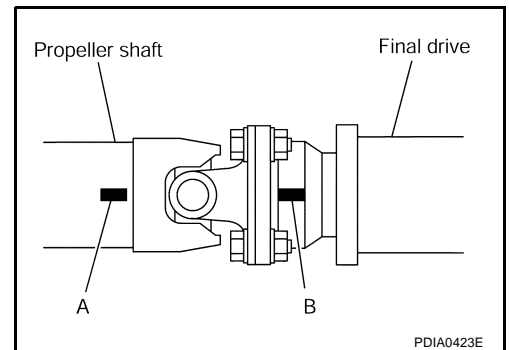

3. Press down propeller shaft with matching mark C facing upward. Then tighten fixing bolts and nuts to the specified torque. Refer to [PR-5, "Components"](#).

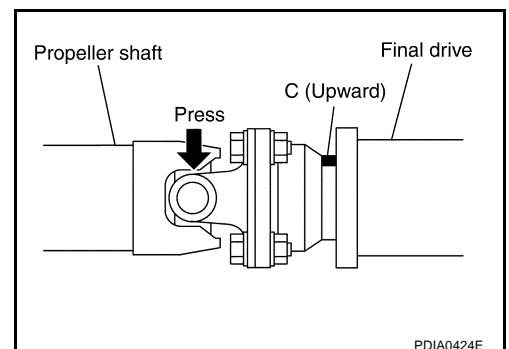

# REAR PROPELLER SHAFT


NDS0001B

## Disassembly and Assembly of Center Bearing DISASSEMBLY

1. Put matching marks on propeller shaft and center flange, then disassemble the 1st and 2nd propeller shaft.

**CAUTION:**


For matching mark, use paint. Do not damage the propeller shaft flange and center flange.

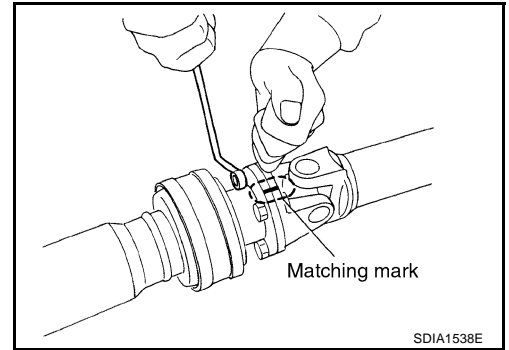

2. Put matching marks onto the center flange and propeller shaft end as shown.

**CAUTION:**


For matching mark, use paint. Do not damage propeller shaft end and center flange.

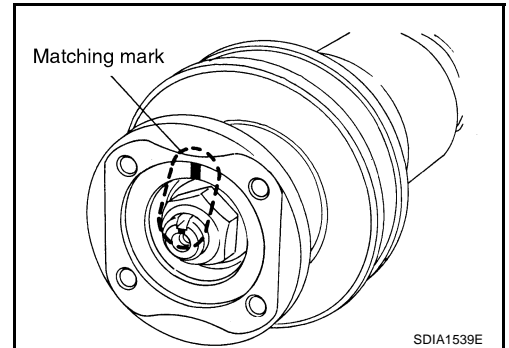

3. Hold the center flange using the flange wrench, and remove the lock nut.


**Tool number : ST38060002 (J-34311)**

4. Remove the center flange using a commercial available bearing puller then remove washer.

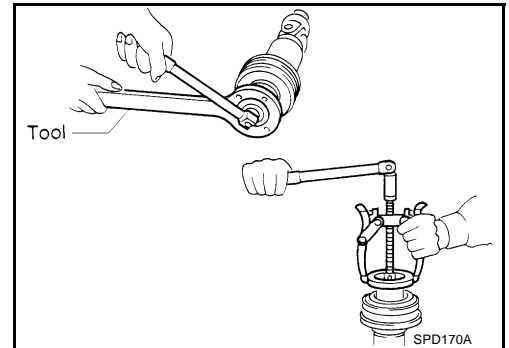

5. Press out the center bearing using the puller and hydraulic press.

**Tool number : ST30031000 (J-22912-01)**

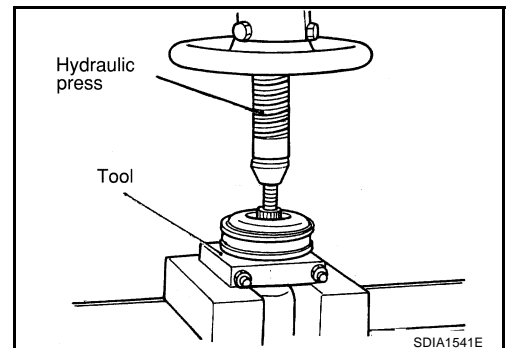



# REAR PROPELLER SHAFT

## ASSEMBLY

1. Install the center bearing with its "F" mark facing the rear of the vehicle.
2. Apply multi-purpose grease to the each face of the washer, then install washer.
3. Install the center flange onto the propeller shaft with aligning the marks that are marked while removal.
4. Install and tighten the lock nut to specified torque. Refer to [PR-5, "Components"](#).

**CAUTION:**




**Do not use the lock nut.**

5. Place a piece of wood under the center flange, stake the lock nut against the propeller shaft groove.

6. Assemble the 1st and 2nd shaft propeller shafts while aligning the matching marks that are marked during removal.
7. Install and tighten the bolts/nuts and tighten them to specified torque. Refer to [PR-5, "Components"](#).

**CAUTION:**

**Do not reuse the bolts, nuts and washers.**

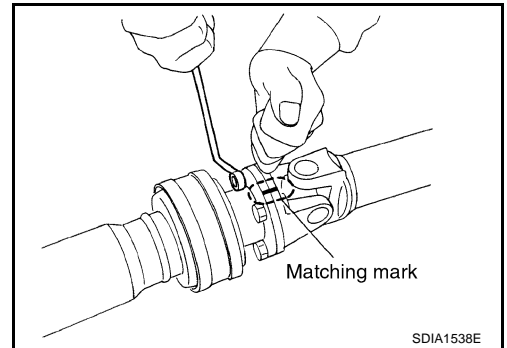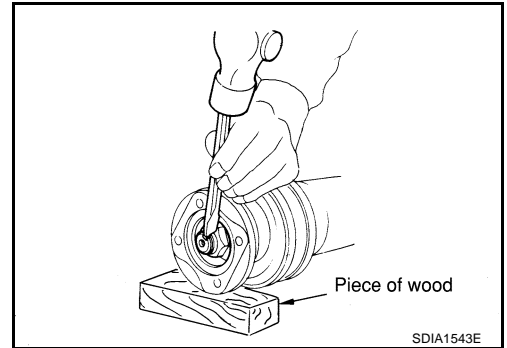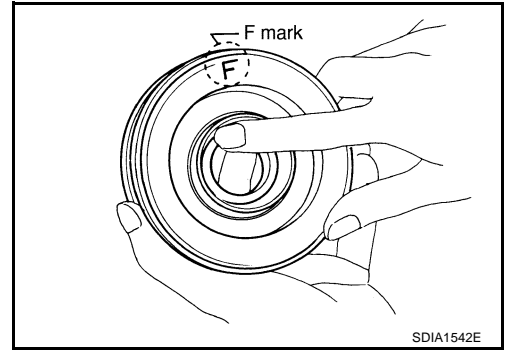

A

B

C

PR

E

F

G

H

I

J

K

L

M

# SERVICE DATA AND SPECIFICATIONS (SDS)

## SERVICE DATA AND SPECIFICATIONS (SDS)

PFP:00030

### General Specifications

NDS0001C

|                                   |                        |                   |                   |
|-----------------------------------|------------------------|-------------------|-------------------|
| Applied model                     |                        | VQ35DE            |                   |
|                                   |                        | M/T               | A/T               |
| Propeller shaft model             |                        | 3S80A             |                   |
| Number of joints                  |                        | 3                 |                   |
| Coupling method with transmission |                        | Sleeve type       |                   |
| Shaft length                      | 1st (Spider to spider) | 619 mm (24.37 in) | 581 mm (22.87 in) |
|                                   | 2nd (Spider to spider) | 902 mm (35.51 in) |                   |
| Shaft outer diameter              | 1st                    | 82.6 mm (3.25 in) |                   |
|                                   | 2nd                    | 82.6 mm (3.25 in) |                   |

### Journal Axial Play

NDS0001D

|                    |             |
|--------------------|-------------|
| Model              | 3S80A       |
| Journal axial play | 0 mm (0 in) |

### Propeller Shaft Runout

NDS0001E

|                              |                           |
|------------------------------|---------------------------|
| Model                        | 3S80A                     |
| Propeller shaft runout limit | 0.8 mm (0.031 in) or less |