

## CONTENTS

<b>PRECAUTIONS AND PREPARATION</b> .....	3	<b>TROUBLE DIAGNOSIS — Work Flow</b> .....	65
Supplemental Restraint System (SRS) "AIR BAG".....	3	Work Flow.....	65
Precautions for On Board Diagnostic (OBD) System of Engine and A/T.....	3	Description for Work Flow.....	66
Engine Fuel & Emission Control System.....	4	<b>TROUBLE DIAGNOSIS — Basic Inspection</b> .....	67
Special Service Tools.....	5	Basic Inspection.....	67
Precautions.....	6	<b>TROUBLE DIAGNOSIS — General Description</b> .....	70
<b>ENGINE AND EMISSION CONTROL OVERALL SYSTEM</b> .....	8	Diagnostic Trouble Code (DTC) Chart.....	70
Circuit Diagram.....	8	Fail-Safe Chart.....	85
System Diagram.....	10	Symptom Matrix Chart.....	87
ECCS Component Parts Location.....	12	CONSULT Reference Value in Data Monitor Mode.....	90
Vacuum Hose Drawing.....	15	Major Sensor Reference Graph in Data Monitor Mode.....	93
System Chart.....	17	ECM Terminals and Reference Value.....	95
<b>ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION</b> .....	18	<b>TROUBLE DIAGNOSIS FOR POWER SUPPLY</b> .....	103
Multiport Fuel Injection (MFI) System.....	18	Main Power Supply and Ground Circuit.....	103
Electronic Ignition (EI) System.....	21	<b>TROUBLE DIAGNOSIS FOR DTC P0100</b> .....	108
Air Conditioning Cut Control.....	22	Mass Air Flow Sensor (MAFS) (DTC: 0102).....	108
Fuel Cut Control (at no load & high engine speed).....	22	<b>TROUBLE DIAGNOSIS FOR DTC P0110</b> .....	113
<b>EVAPORATIVE EMISSION SYSTEM</b> .....	23	Intake Air Temperature Sensor (DTC: 0401).....	113
Description.....	23	<b>TROUBLE DIAGNOSIS FOR DTC P0115</b> .....	118
Inspection.....	23	Engine Coolant Temperature Sensor (ECTS) (DTC: 0103).....	118
<b>POSITIVE CRANKCASE VENTILATION</b> .....	25	<b>TROUBLE DIAGNOSIS FOR DTC P0120</b> .....	122
Description.....	25	Throttle Position Sensor (DTC: 0403).....	122
Inspection.....	25	<b>TROUBLE DIAGNOSIS FOR DTC P0125</b> .....	127
<b>BASIC SERVICE PROCEDURE</b> .....	26	Engine Coolant Temperature (ECT) Sensor (DTC: 0908).....	127
Fuel Pressure Release.....	26	<b>TROUBLE DIAGNOSIS FOR DTC P0130, P0150</b> .....	132
Fuel Pressure Check.....	26	Closed Loop Control (DTC: 0307, 0308).....	132
Injector Removal and Installation.....	27	<b>TROUBLE DIAGNOSIS FOR DTC P0130</b> .....	133
Direct Ignition System — How to Check Idle Speed and Ignition Timing.....	28	Front Heated Oxygen Sensor (Front HO2S) (Right bank) (DTC: 0503).....	133
Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment.....	30	<b>TROUBLE DIAGNOSIS FOR DTC P0135</b> .....	138
<b>ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION</b> .....	37	Front Heated Oxygen Sensor Heater (Right bank) (DTC: 0901).....	138
Introduction.....	37	<b>TROUBLE DIAGNOSIS FOR DTC P0136</b> .....	141
Two Trip Detection Logic.....	37	Rear Heated Oxygen Sensor (Rear HO2S) (Right bank) (DTC: 0707).....	141
Diagnostic Trouble Code (DTC).....	37	<b>TROUBLE DIAGNOSIS FOR DTC P0141</b> .....	146
Freeze Frame Data.....	39	Rear Heated Oxygen Sensor Heater (Right bank) (DTC: 0902).....	146
Malfunction Indicator Lamp (MIL).....	39	<b>TROUBLE DIAGNOSIS FOR DTC P0150</b> .....	150
OBD System Operation Chart.....	44	Front Heated Oxygen Sensor (Front HO2S) (Left bank) (DTC: 0303).....	150
CONSULT.....	49	<b>TROUBLE DIAGNOSIS FOR DTC P0155</b> .....	155
Generic Scan Tool (GST).....	61	Front Heated Oxygen Sensor Heater (Left bank) (DTC: 1001).....	155
<b>TROUBLE DIAGNOSIS — Introduction</b> .....	63		
Introduction.....	63		
Diagnostic Worksheet.....	64		

# CONTENTS (Cont'd)

<b>TROUBLE DIAGNOSIS FOR DTC P0156</b> .....	158	<b>TROUBLE DIAGNOSIS FOR DTC P0605</b> .....	244
Rear Heated Oxygen Sensor (Rear HO2S) (Left bank) (DTC: 0708).....	158	Engine Control Module (ECM)-ECCS Control Module (DTC: 0301).....	244
<b>TROUBLE DIAGNOSIS FOR DTC P0161</b> .....	163	<b>TROUBLE DIAGNOSIS FOR DTC P0705</b> .....	246
Rear Heated Oxygen Sensor Heater (Left bank) (DTC: 1002).....	163	Park/Neutral Position Switch (DTC: 1003).....	246
<b>TROUBLE DIAGNOSIS FOR DTC P0171</b> .....	167	<b>TROUBLE DIAGNOSIS FOR DTC P1150, P1155</b> .....	250
Fuel Injection System Function (Right bank) (Lean side) (DTC: 0115).....	167	Wastegate Valve Control Solenoid Valve (DTC: 1306, 1307).....	250
<b>TROUBLE DIAGNOSIS FOR DTC P0172</b> .....	173	<b>TROUBLE DIAGNOSIS FOR DTC P1160</b> .....	254
Fuel Injection System Function (Right bank) (Rich side) (DTC: 0114).....	173	Turbocharger Boost Sensor (DTC: 0206).....	254
<b>TROUBLE DIAGNOSIS FOR DTC P0174</b> .....	179	<b>TROUBLE DIAGNOSIS FOR DTC P1220</b> .....	260
Fuel Injection System Function (Left bank) (Lean side) (DTC: 0210).....	179	Fuel Pump Control Module (FPCM) (DTC: 1305).....	260
<b>TROUBLE DIAGNOSIS FOR DTC P0175</b> .....	185	<b>TROUBLE DIAGNOSIS FOR DTC P1320</b> .....	266
Fuel Injection System Function (Left bank) (Rich side) (DTC: 0209).....	185	Ignition Signal (DTC: 0201).....	266
<b>TROUBLE DIAGNOSIS FOR DTC P0180</b> .....	191	<b>TROUBLE DIAGNOSIS FOR DTC P1336</b> .....	275
Fuel Temperature Sensor (DTC: 0402).....	191	Crankshaft Position Sensor (CKPS) (OBD) (COG) (DTC: 0905).....	275
<b>TROUBLE DIAGNOSIS FOR DTC P0300 - P0306</b> .....	194	<b>TROUBLE DIAGNOSIS FOR DTC P1400</b> .....	279
Multiple Cylinder Misfire, No. 1 - 6 Cylinder Misfire (DTC: 0701 - 0603).....	194	EGRC-Solenoid Valve (DTC: 1005).....	279
<b>TROUBLE DIAGNOSIS FOR DTC P0325</b> .....	199	<b>TROUBLE DIAGNOSIS FOR DTC P1401</b> .....	283
Knock Sensor (KS) (DTC: 0304).....	199	EGR Temperature Sensor (DTC: 0305).....	283
<b>TROUBLE DIAGNOSIS FOR DTC P0335</b> .....	202	<b>TROUBLE DIAGNOSIS FOR DTC P1443</b> .....	288
Crankshaft Position Sensor (CKPS) (OBD) (DTC: 0802).....	202	Canister Control Vacuum Check Switch (DTC: 0113).....	288
<b>TROUBLE DIAGNOSIS FOR DTC P0340</b> .....	206	<b>TROUBLE DIAGNOSIS FOR DTC P1605</b> .....	293
Camshaft Position Sensor (CMPS)(DTC: 0101).....	206	A/T Diagnosis Communication Line (DTC: 0804).....	293
<b>TROUBLE DIAGNOSIS FOR DTC P0400</b> .....	211	<b>TROUBLE DIAGNOSIS FOR DTC P1900</b> .....	296
EGR Function (DTC: 0302).....	211	Cooling Fan (DTC: 1308).....	296
<b>TROUBLE DIAGNOSIS FOR DTC P0420, P0430</b> .....	220	<b>TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS</b> .....	311
Three Way Catalyst Function (DTC: 0702, 0703).....	220	Injector.....	311
<b>TROUBLE DIAGNOSIS FOR DTC P0443</b> .....	223	Start Signal.....	314
Evaporative Emission (EVAP) Canister Purge Control Solenoid Valve (DTC: 0807).....	223	Fuel Pump Control.....	316
<b>TROUBLE DIAGNOSIS FOR DTC P0500</b> .....	233	IACV-Air Regulator.....	322
Vehicle Speed Sensor (VSS) (DTC: 0104).....	233	Fuel Pressure Regulator Control.....	325
<b>TROUBLE DIAGNOSIS FOR DTC P0505</b> .....	237	Power Steering Oil Pressure Switch.....	330
Idle Air Control Valve (IACV) — Auxiliary Air Control (AAC) Valve (DTC: 0205).....	237	IACV-FICD Solenoid Valve.....	333
<b>TROUBLE DIAGNOSIS FOR DTC P0600</b> .....	241	MIL & Data Link Connectors.....	337
A/T Control (DTC: P0600).....	241	<b>TROUBLE DIAGNOSIS — Index</b> .....	338
		Alphabetical & P No. Index for DTC.....	338
		<b>SERVICE DATA AND SPECIFICATIONS (SDS)</b> .....	340
		General Specifications.....	340
		Inspection and Adjustment.....	340

## When you read wiring diagrams:

- Read GI section, “HOW TO READ WIRING DIAGRAMS”.
- See EL section, “POWER SUPPLY ROUTING” for power distribution circuit.

When you perform trouble diagnoses, read GI section, “HOW TO FOLLOW FLOW CHART IN TROUBLE DIAGNOSES” and “HOW TO PERFORM EFFICIENT DIAGNOSIS FOR AN ELECTRICAL INCIDENT”.

## Supplemental Restraint System (SRS) "AIR BAG"

The Supplemental Restraint System "Air Bag", used along with a seat belt, helps to reduce the risk or severity of injury to the driver and front passenger in a frontal collision. The Supplemental Restraint System consists of air bag modules (located in the center of the steering wheel and on the instrument panel on the passenger side), sensors, a diagnosis unit, warning lamp, wiring harness and spiral cable. Information necessary to service the system safely is included in the **RS section** of this Service Manual.

### WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses are covered with yellow insulation either just before the harness connectors or for the complete harness, for easy identification.

## Precautions for On Board Diagnostic (OBD) System of Engine and A/T

The ECM (ECCS control module) has an on board diagnostic system. It will light up the malfunction indicator lamp (MIL) to warn the driver of a malfunction causing emission deterioration.

### CAUTION:

- Be sure to turn the ignition switch "OFF" and disconnect the negative battery terminal before the repair or inspection work. The open/short circuit of the related switches, sensors, solenoid valves, etc. will cause the MIL to light up.
- Be sure to connect and lock the connectors securely after the work. The loose (unlocked) connector will cause the MIL to light up due to the open circuit. (Be sure to connect the connector without water, grease, dirt, bent terminals, etc. in it.)
- Be sure to route and clamp the harnesses properly after work. The interference of the harness with a bracket, etc. may cause the MIL to light up due to the short circuit.
- Be sure to connect rubber tubes properly after the work. The misconnected or disconnected rubber tube may cause the MIL to light up due to the malfunction of the EGR system or the fuel injection system, etc.
- Be sure to erase the unnecessary (already fixed) malfunction information in the ECM or A/T control unit before returning the vehicle to the customer.

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

## Engine Fuel & Emission Control System

### ECM

- Do not disassemble ECM (ECCS control module).
- Do not turn diagnosis test mode selector forcibly.
- If a battery terminal is disconnected, the memory will return to the ECM value.


The ECCS will now start to self-control at its initial value. Engine operation can vary slightly when the terminal is disconnected. However, this is not an indication of a problem. Do not replace parts because of a slight variation.

### WIRELESS EQUIPMENT

- When installing CB ham radio or a mobile phone, be sure to observe the following as it may adversely affect electronic control systems depending on its installation location.
  - 1) Keep the antenna as far away as possible from the ECM.
  - 2) Keep the antenna feeder line more than 20 cm (7.9 in) away from the harness of electronic controls. Do not let them run parallel for a long distance.
  - 3) Adjust the antenna and feeder line so that the standing-wave ratio can be kept smaller.
  - 4) Be sure to ground the radio to vehicle body.

### BATTERY

- Always use a 12 volt battery as power source.
- Do not attempt to disconnect battery cables while engine is running.

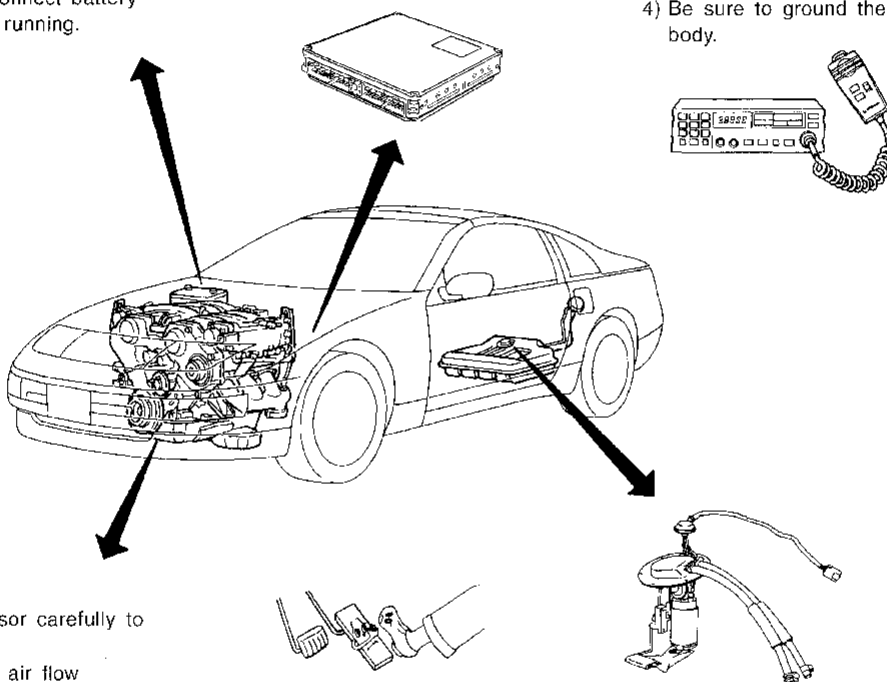

### ECCS PARTS HANDLING

- Handle mass air flow sensor carefully to avoid damage.
- Do not disassemble mass air flow sensor.
- Do not clean mass air flow sensor with any type of detergent.
- Do not disassemble IACV-AAC valve.
- Even a slight leak in the air intake system can cause serious problems.
- Do not shock or jar the camshaft position sensor or crankshaft position sensor (OBD).

### WHEN STARTING

- Do not depress accelerator pedal when starting.
- Immediately after starting, do not rev up engine unnecessarily.
- Do not rev up engine just prior to shutdown.

### FUEL PUMP

- Do not operate fuel pump when there is no fuel in lines.
- Tighten fuel hose clamps to the specified torque.



### ECCS HARNESS HANDLING

- Securely connect ECCS harness connectors. A poor connection can cause an extremely high (surge) voltage to develop in coil and condenser, thus resulting in damage to ICs.
- Keep ECCS harness at least 10 cm (3.9 in) away from adjacent harnesses, to prevent an ECCS system malfunction due to receiving external noise, degraded operation of ICs, etc.
- Keep ECCS parts and harnesses dry.
- Before removing parts, turn off ignition switch and then disconnect battery ground cable.

# PRECAUTIONS AND PREPARATION






## Special Service Tools

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

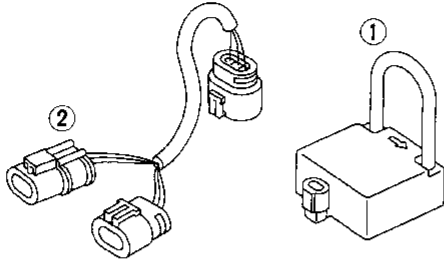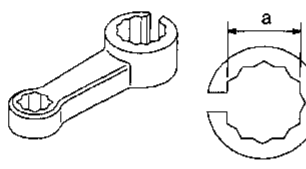Tool number (Kent-Moore No.) Tool name	Description
① KV109D0010 (J-36777-1) Ignition timing adapter coil  ② KV10114200 (J-36777-4) Adapter harness	Measuring ignition timing   NT054
KV10114400 (J-38365) Heated oxygen sensor wrench	Loosening or tightening heated oxygen sensor   NT636  a: 22 mm (0.87 in)

GI  
MA  
EM  
LC  
**EC**  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

## PRECAUTIONS AND PREPARATION

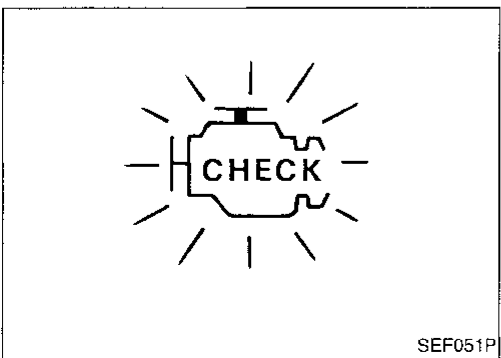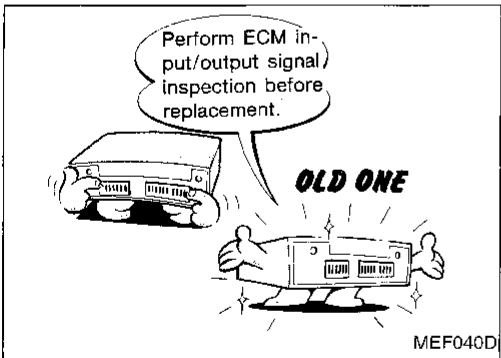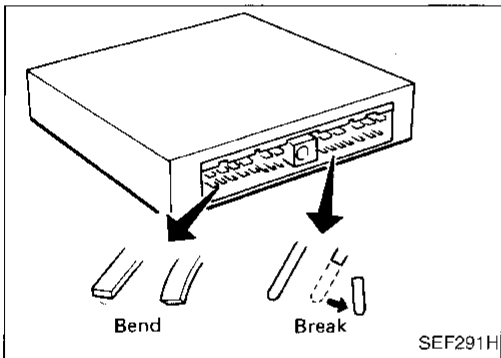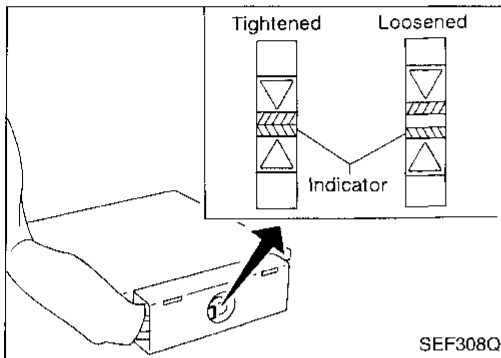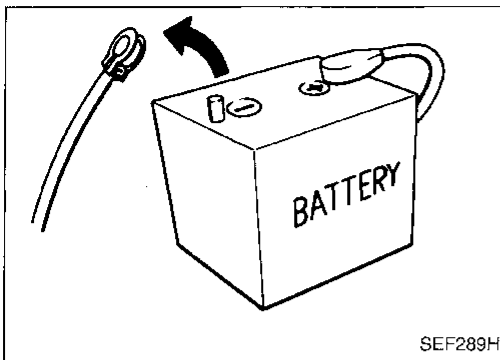


### Precautions

- Before connecting or disconnecting the ECM harness connector, turn ignition switch OFF and disconnect negative battery terminal. Failure to do so may damage the ECM. Because battery voltage is applied to ECM even if ignition switch is turned off.
- When connecting ECM harness connector, tighten securing bolt until the gap between the orange indicators disappears.
- When connecting or disconnecting pin connectors into or from ECM, take care not to damage pin terminals (bend or break). Make sure that there are not any bends or breaks on ECM pin terminal, when connecting pin connectors.
- Before replacing ECM, perform ECM input/output signal inspection and make sure whether ECM functions properly or not. (See page EC-95.)
- After performing each TROUBLE DIAGNOSIS, perform "OVERALL FUNCTION CHECK" or "DTC (Diagnostic Trouble Code) CONFIRMATION PROCEDURE". The DTC should not be displayed in the "DTC CONFIRMATION PROCEDURE" if the repair is completed. The "OVERALL FUNCTION CHECK" should be a good result if the repair is completed.

# PRECAUTIONS AND PREPARATION

## Precautions (Cont'd)

- When measuring ECM signals with a circuit tester, never bring the two tester probes into contact. Accidental contact of probes will cause a short circuit and damage the ECM power transistor.

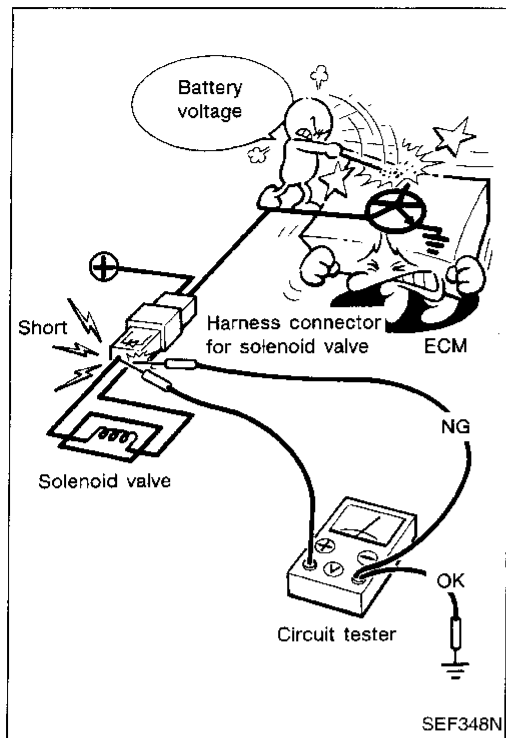

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

PA

BR

ST

RS

BT


HA

EL

IDX

# ENGINE AND EMISSION CONTROL OVERALL SYSTEM


## Circuit Diagram

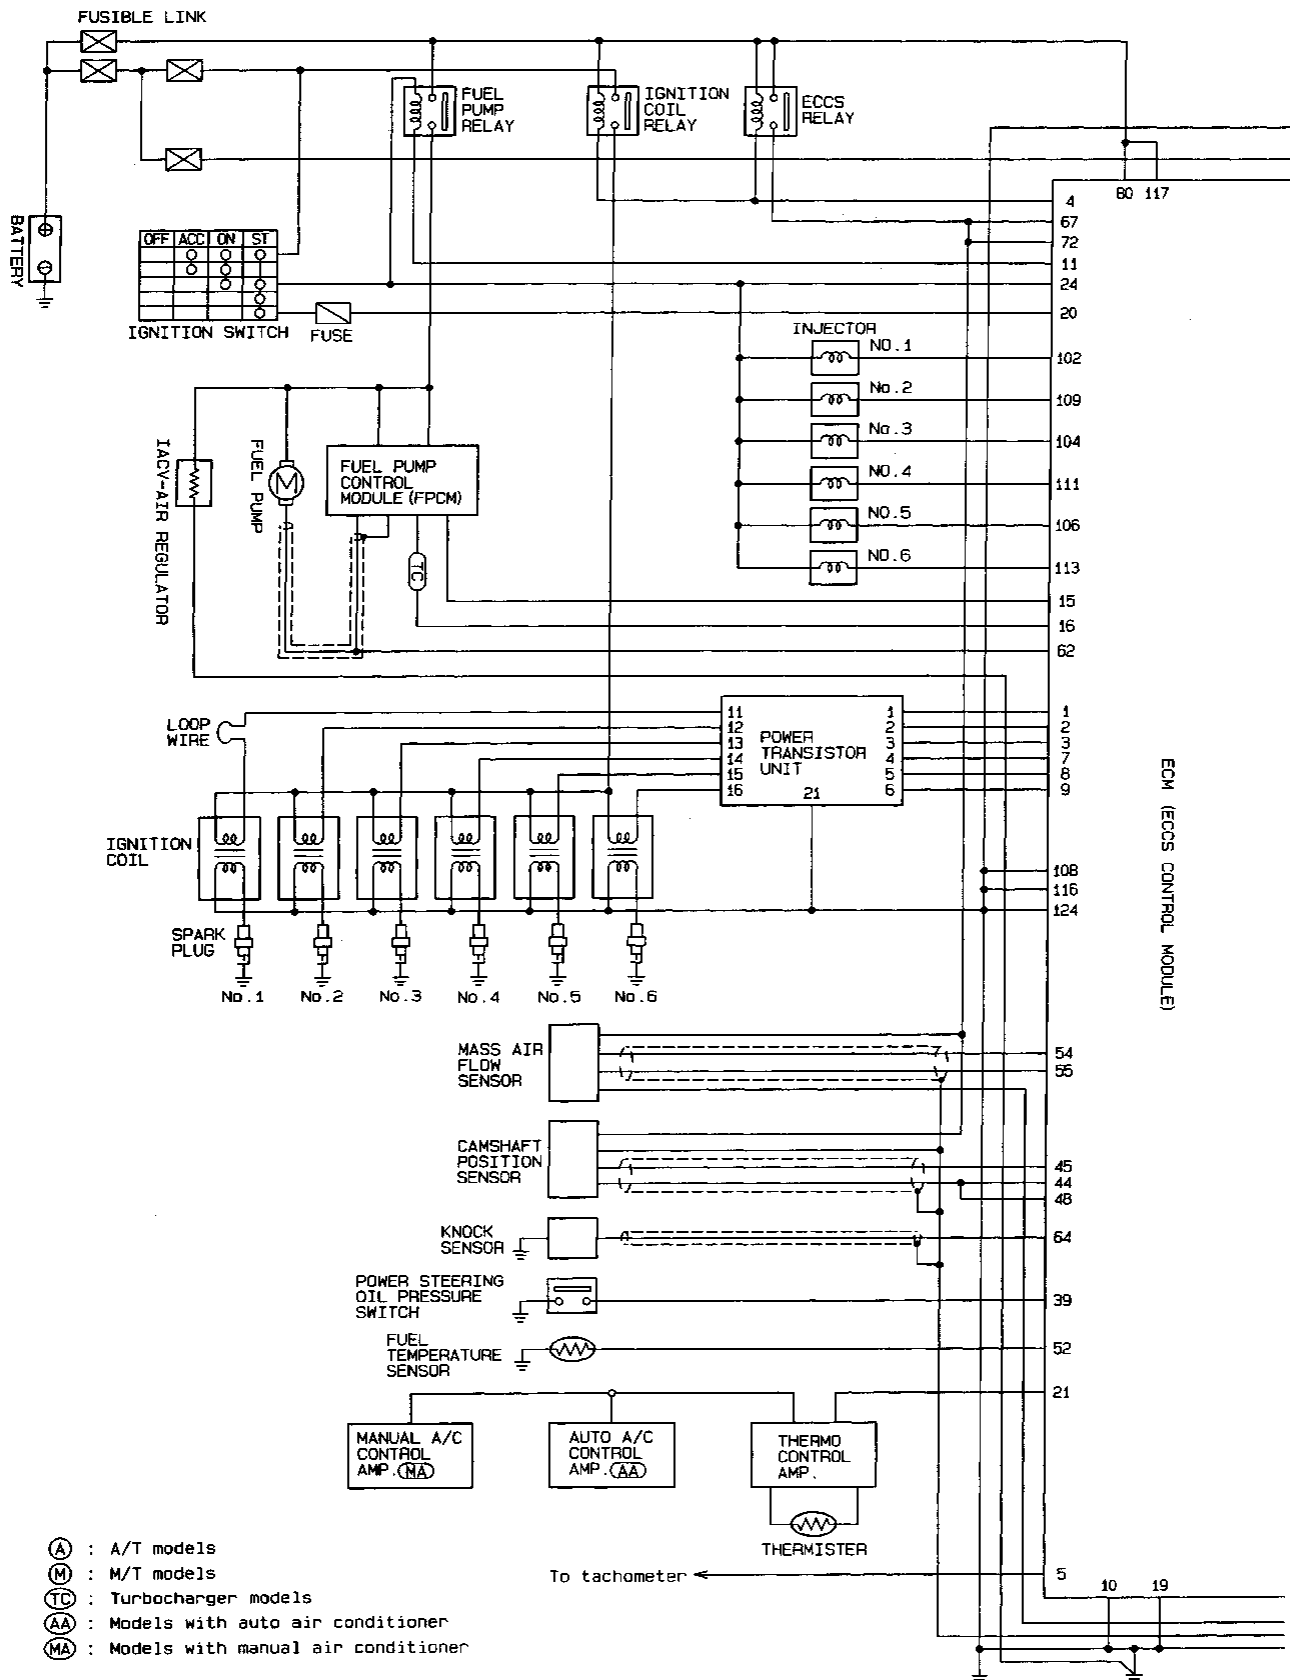



# ENGINE AND EMISSION CONTROL OVERALL SYSTEM


## Circuit Diagram (Cont'd)

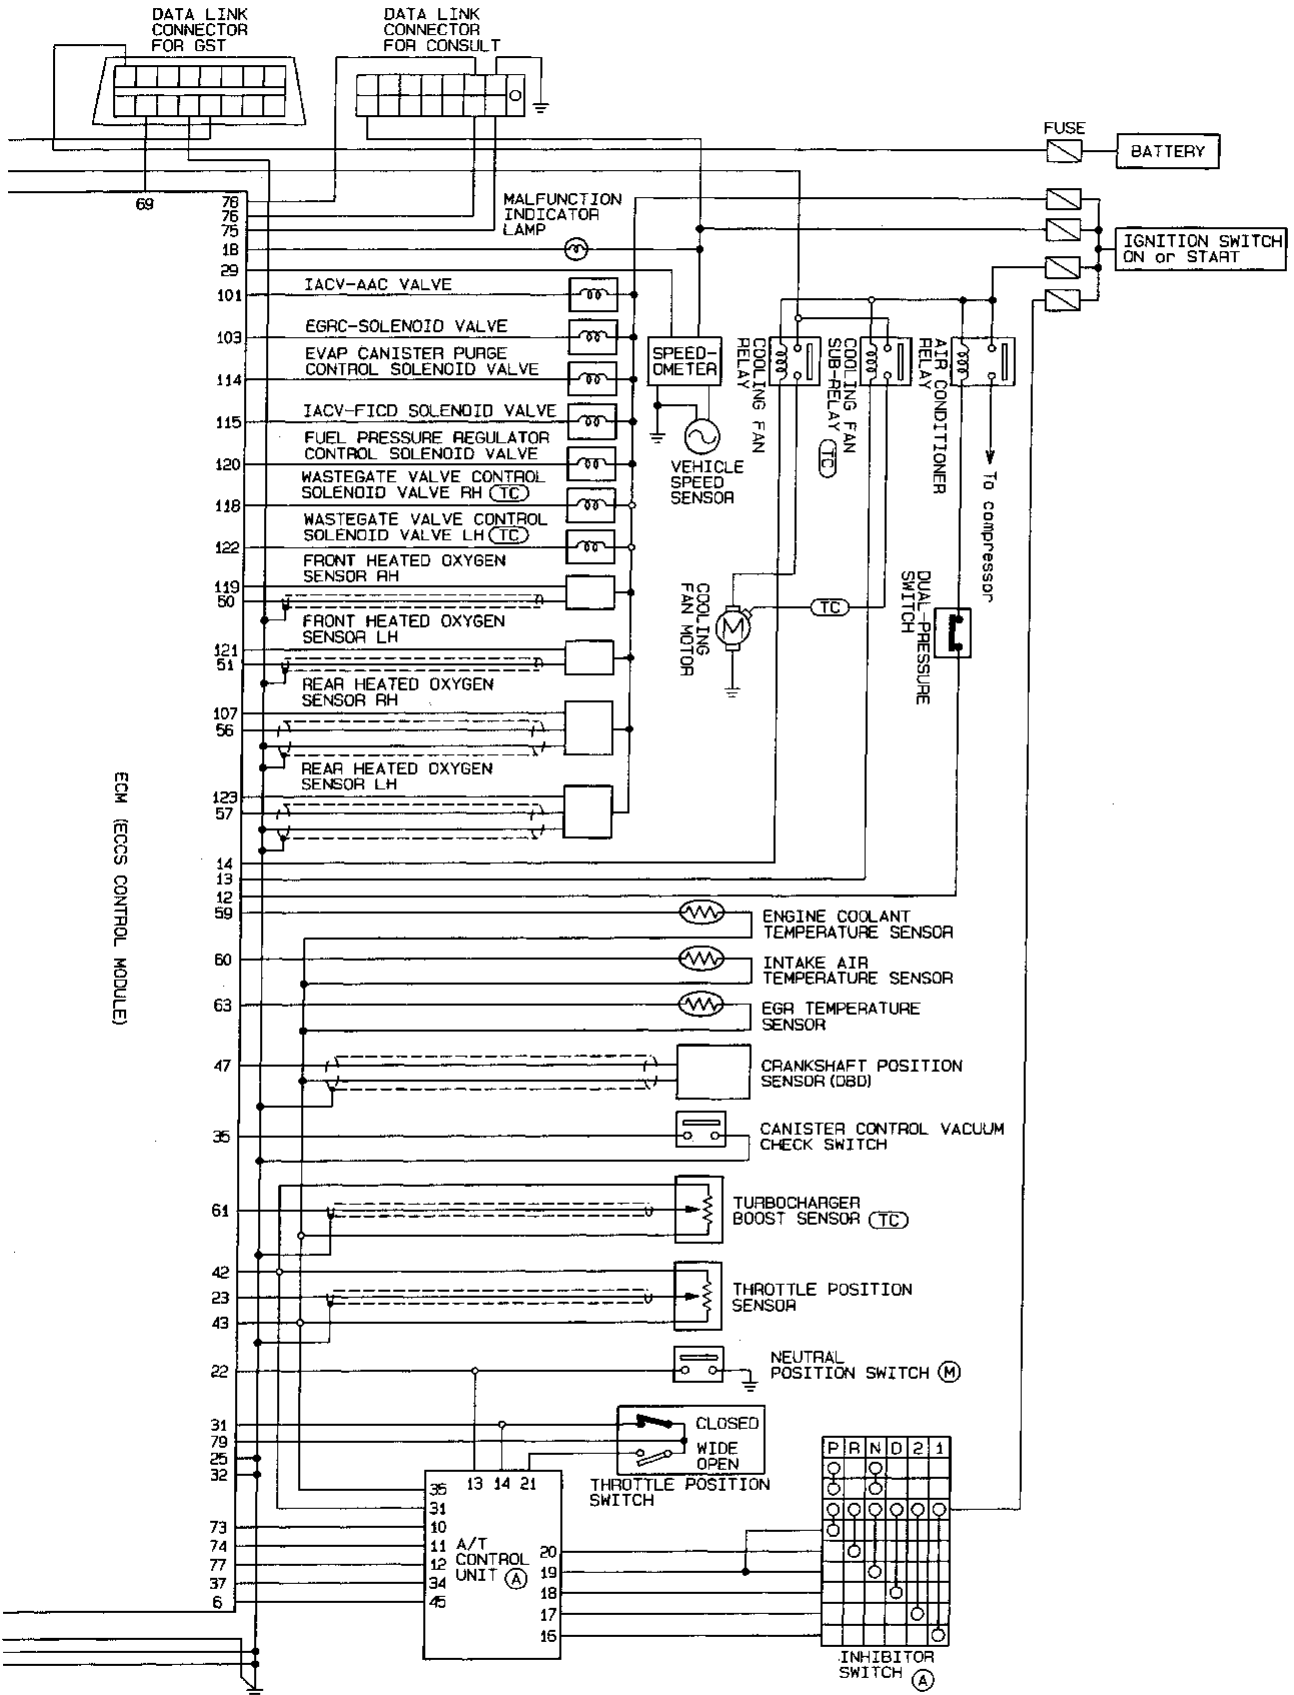

GI  
MA  
EM  
LC  
**EC**  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

## System Diagram



### NON-TURBOCHARGER MODELS

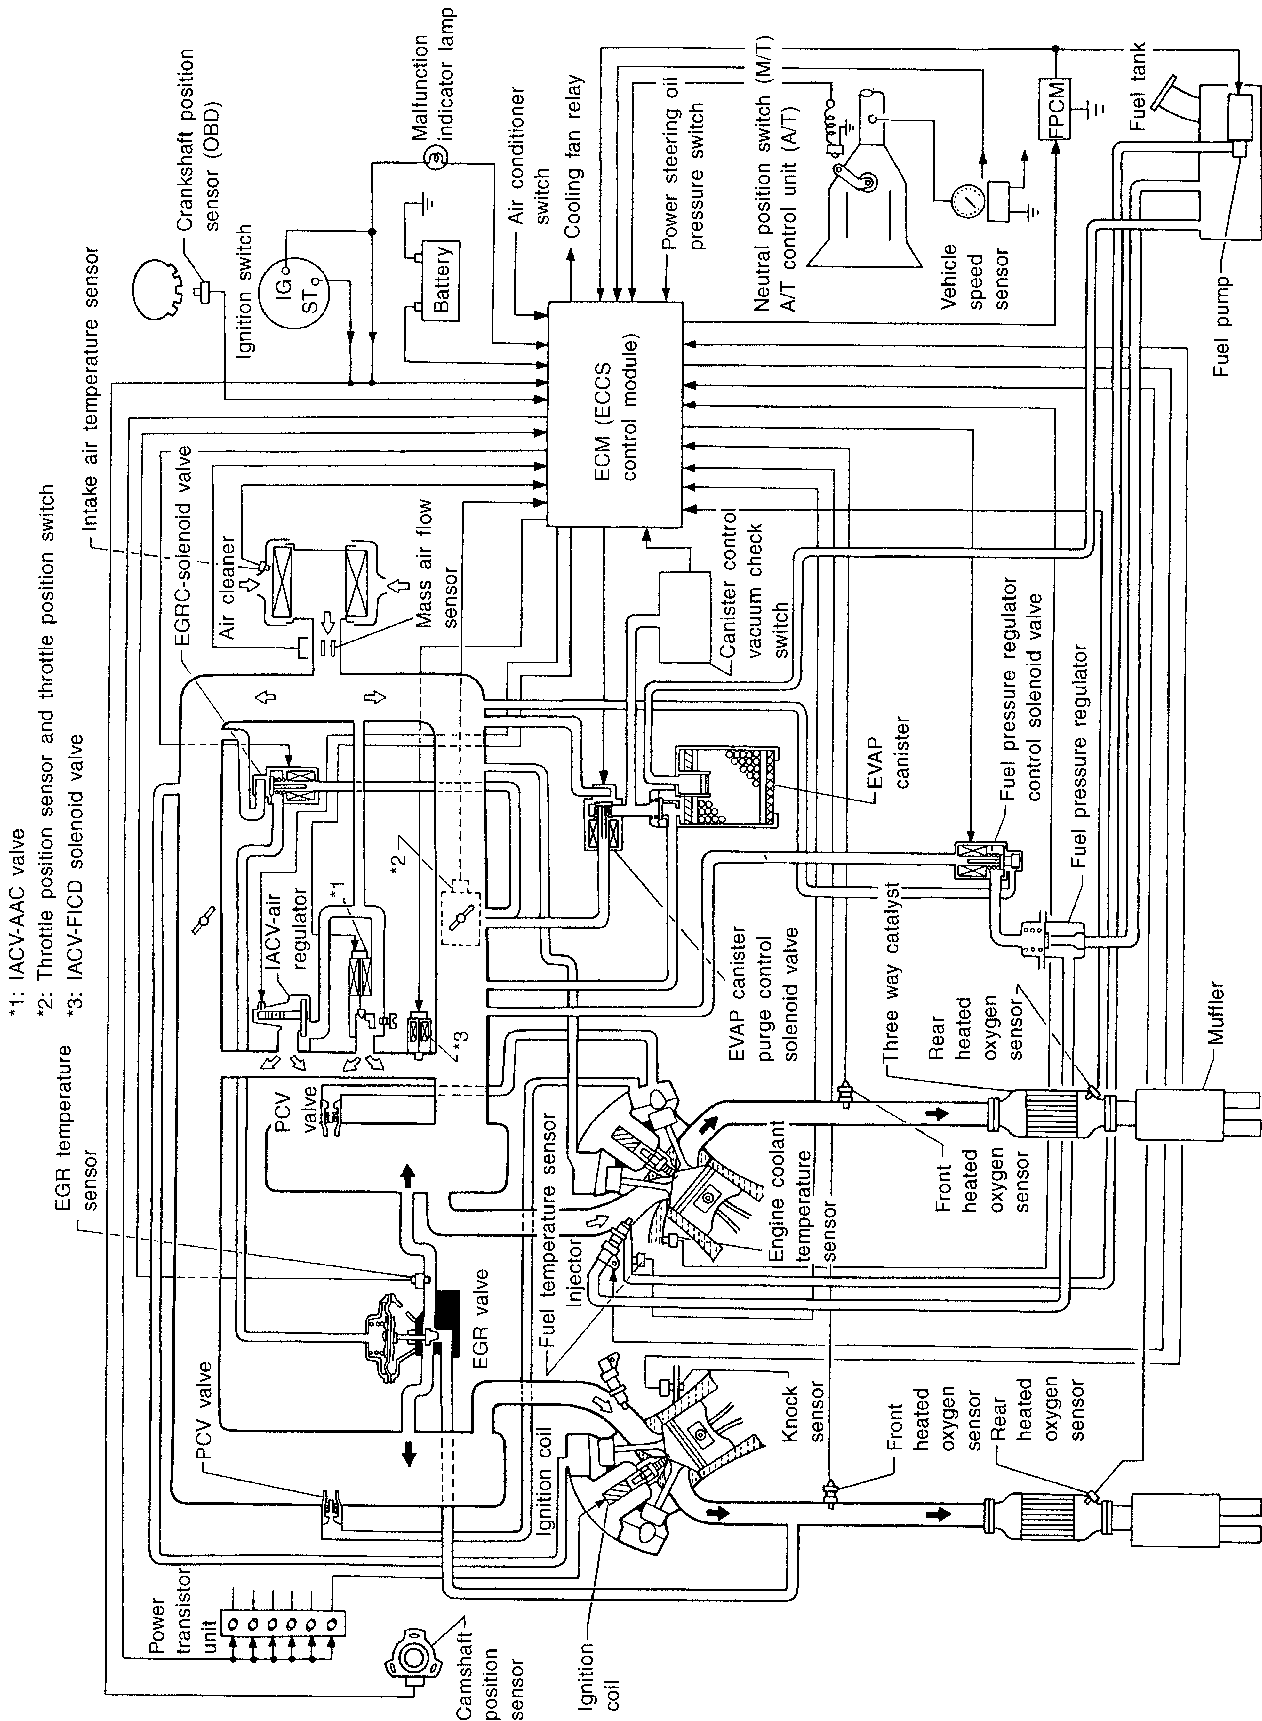




## ECCS Component Parts Location

### NON-TURBOCHARGER MODELS

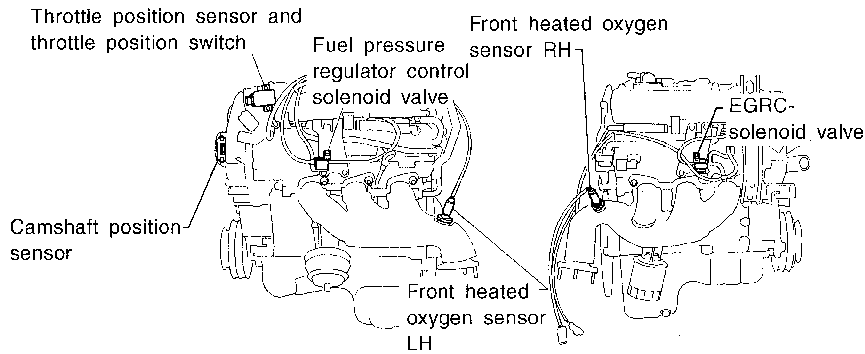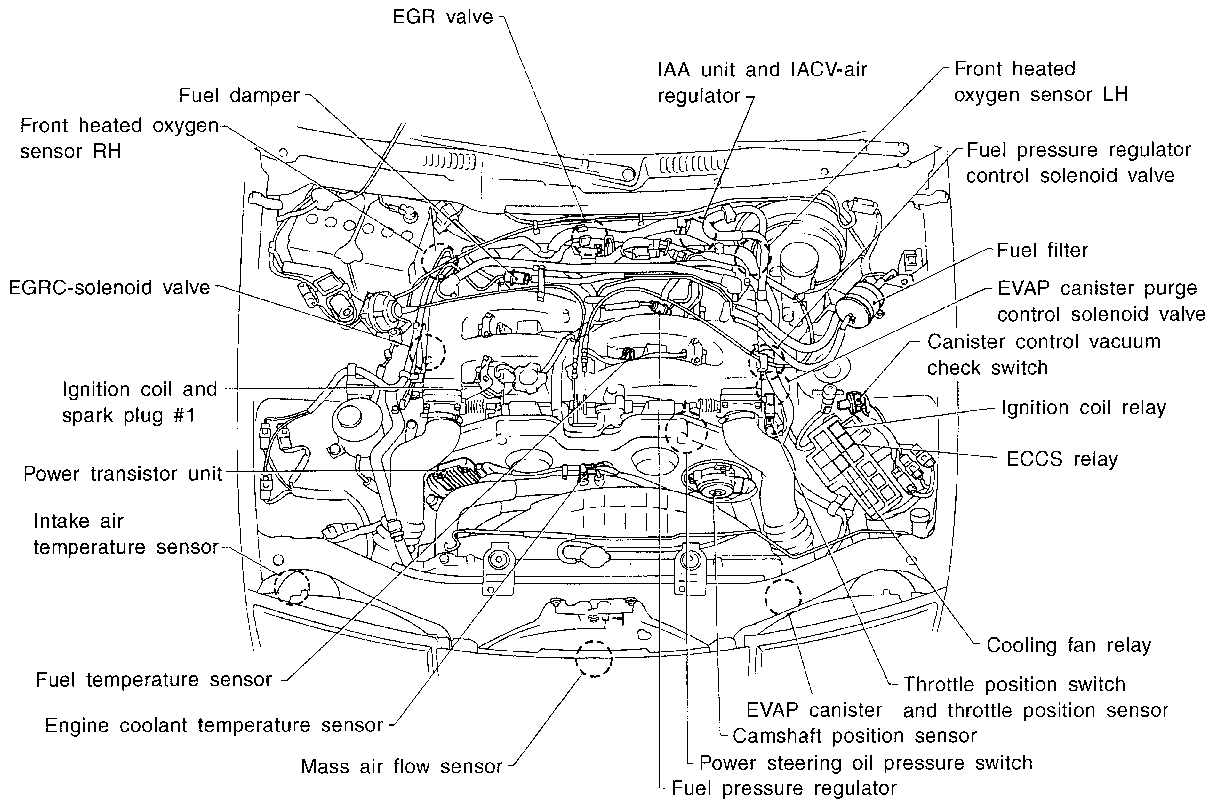


IACV-AAC valve and IACV-FICD solenoid valve

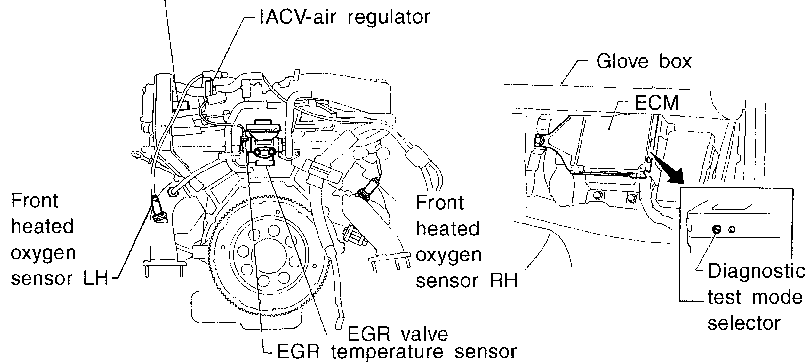

# ENGINE AND EMISSION CONTROL OVERALL SYSTEM

## ECCS Component Parts Location (Cont'd)





### TURBOCHARGER MODELS

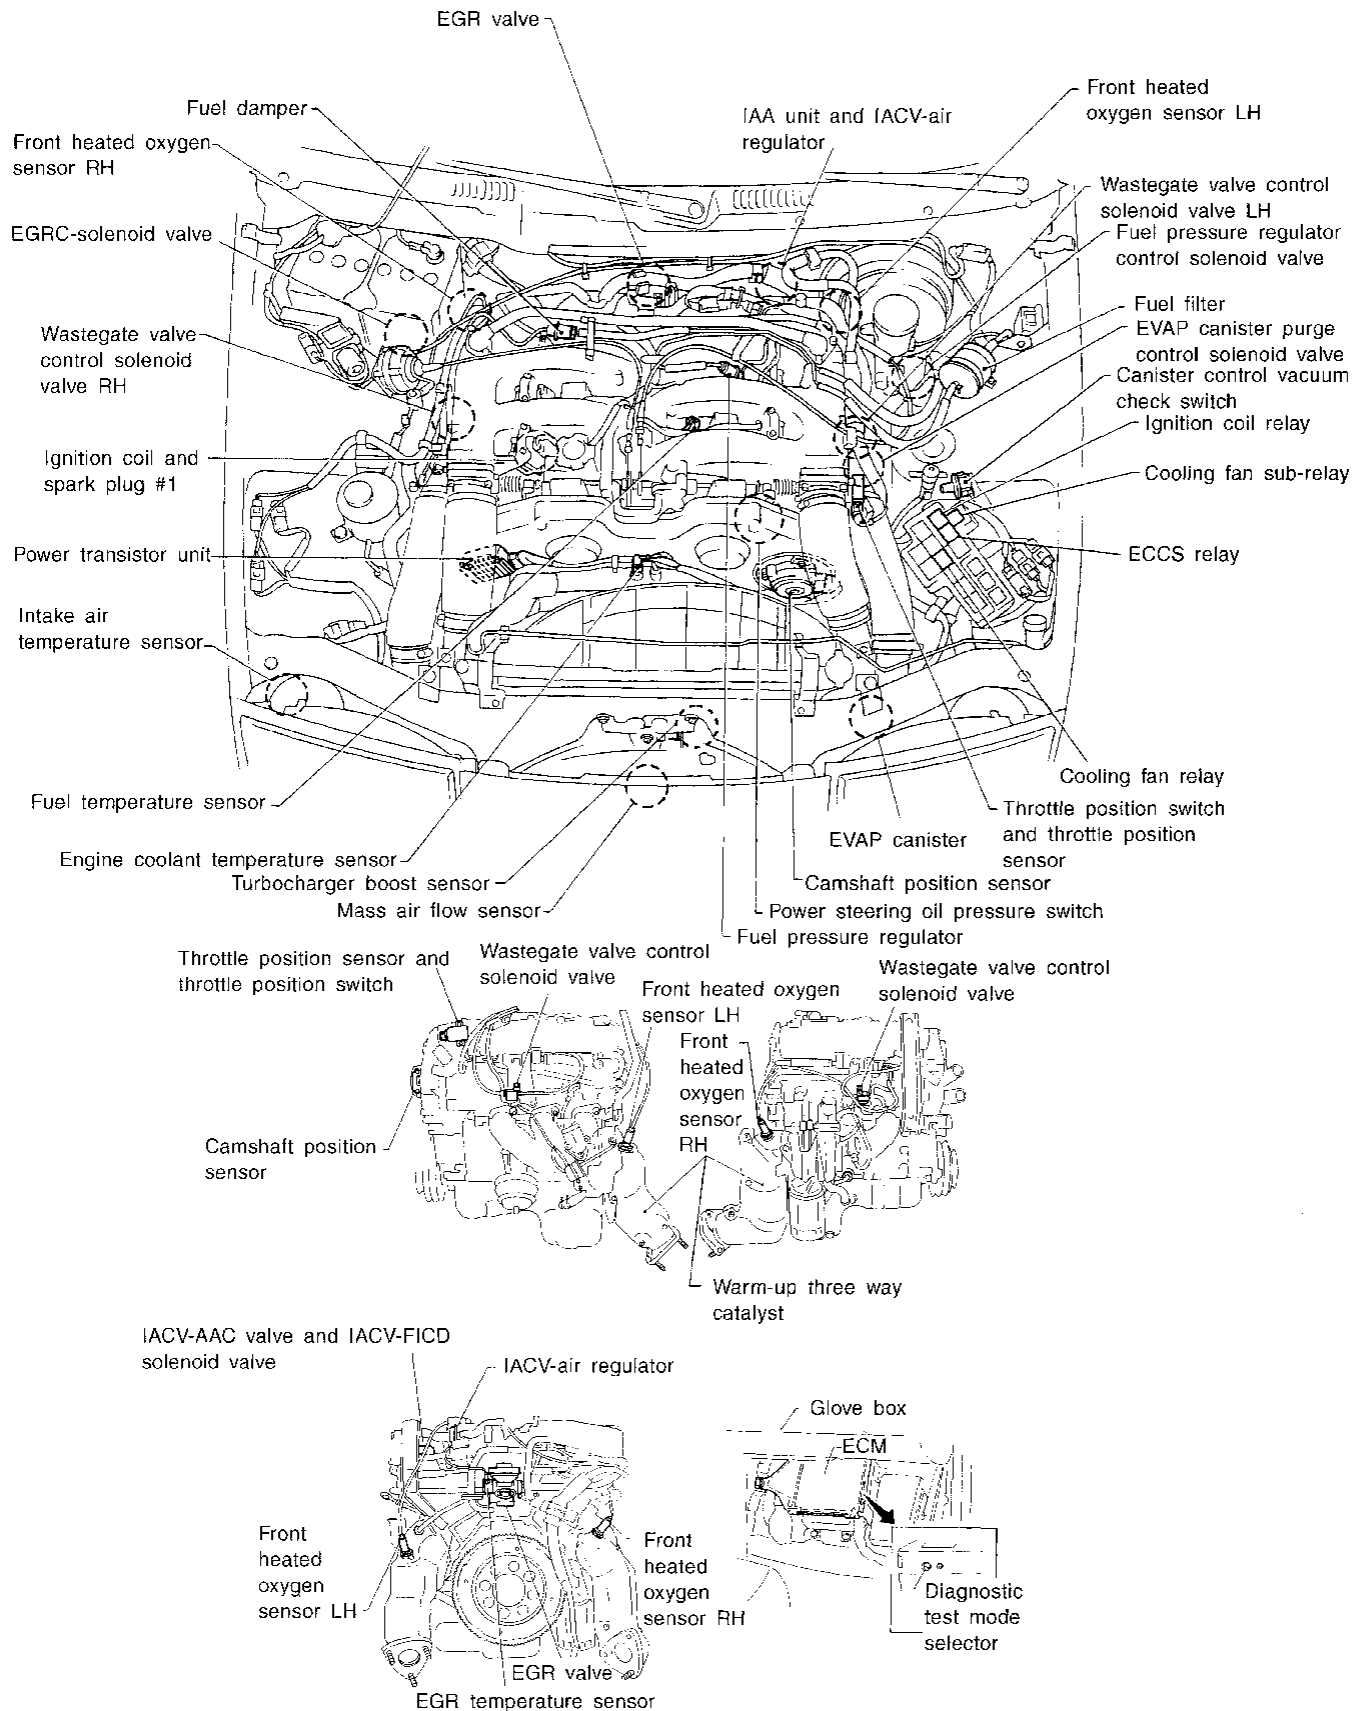

GI  
MA  
EM  
LC  
**EC**  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX


# ENGINE AND EMISSION CONTROL OVERALL SYSTEM

## ECCS Component Parts Location (Cont'd)

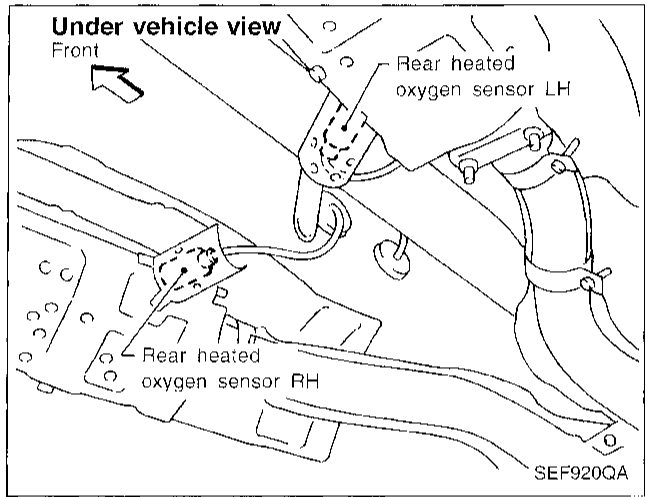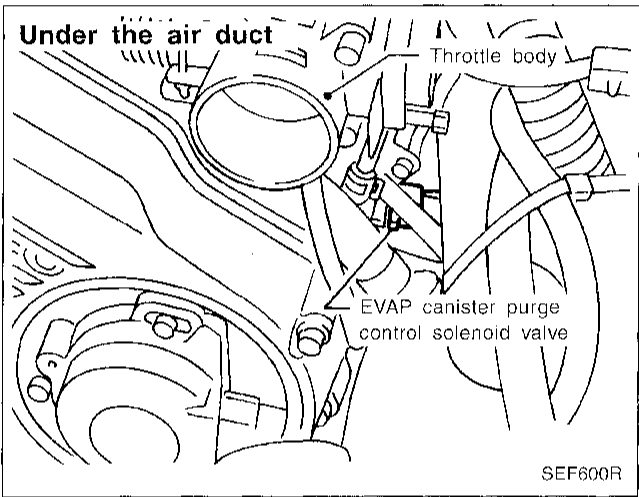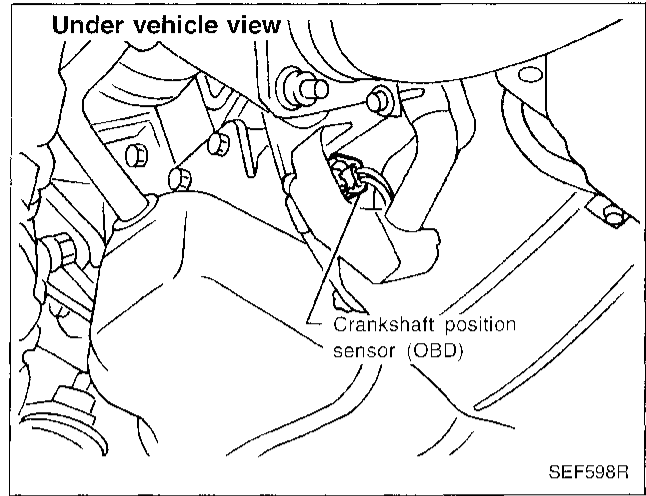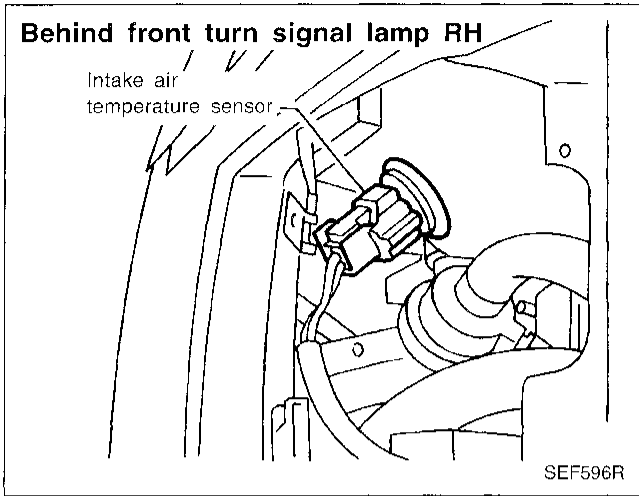

Vacuum Hose Drawing

NON-TURBOCHARGER MODELS

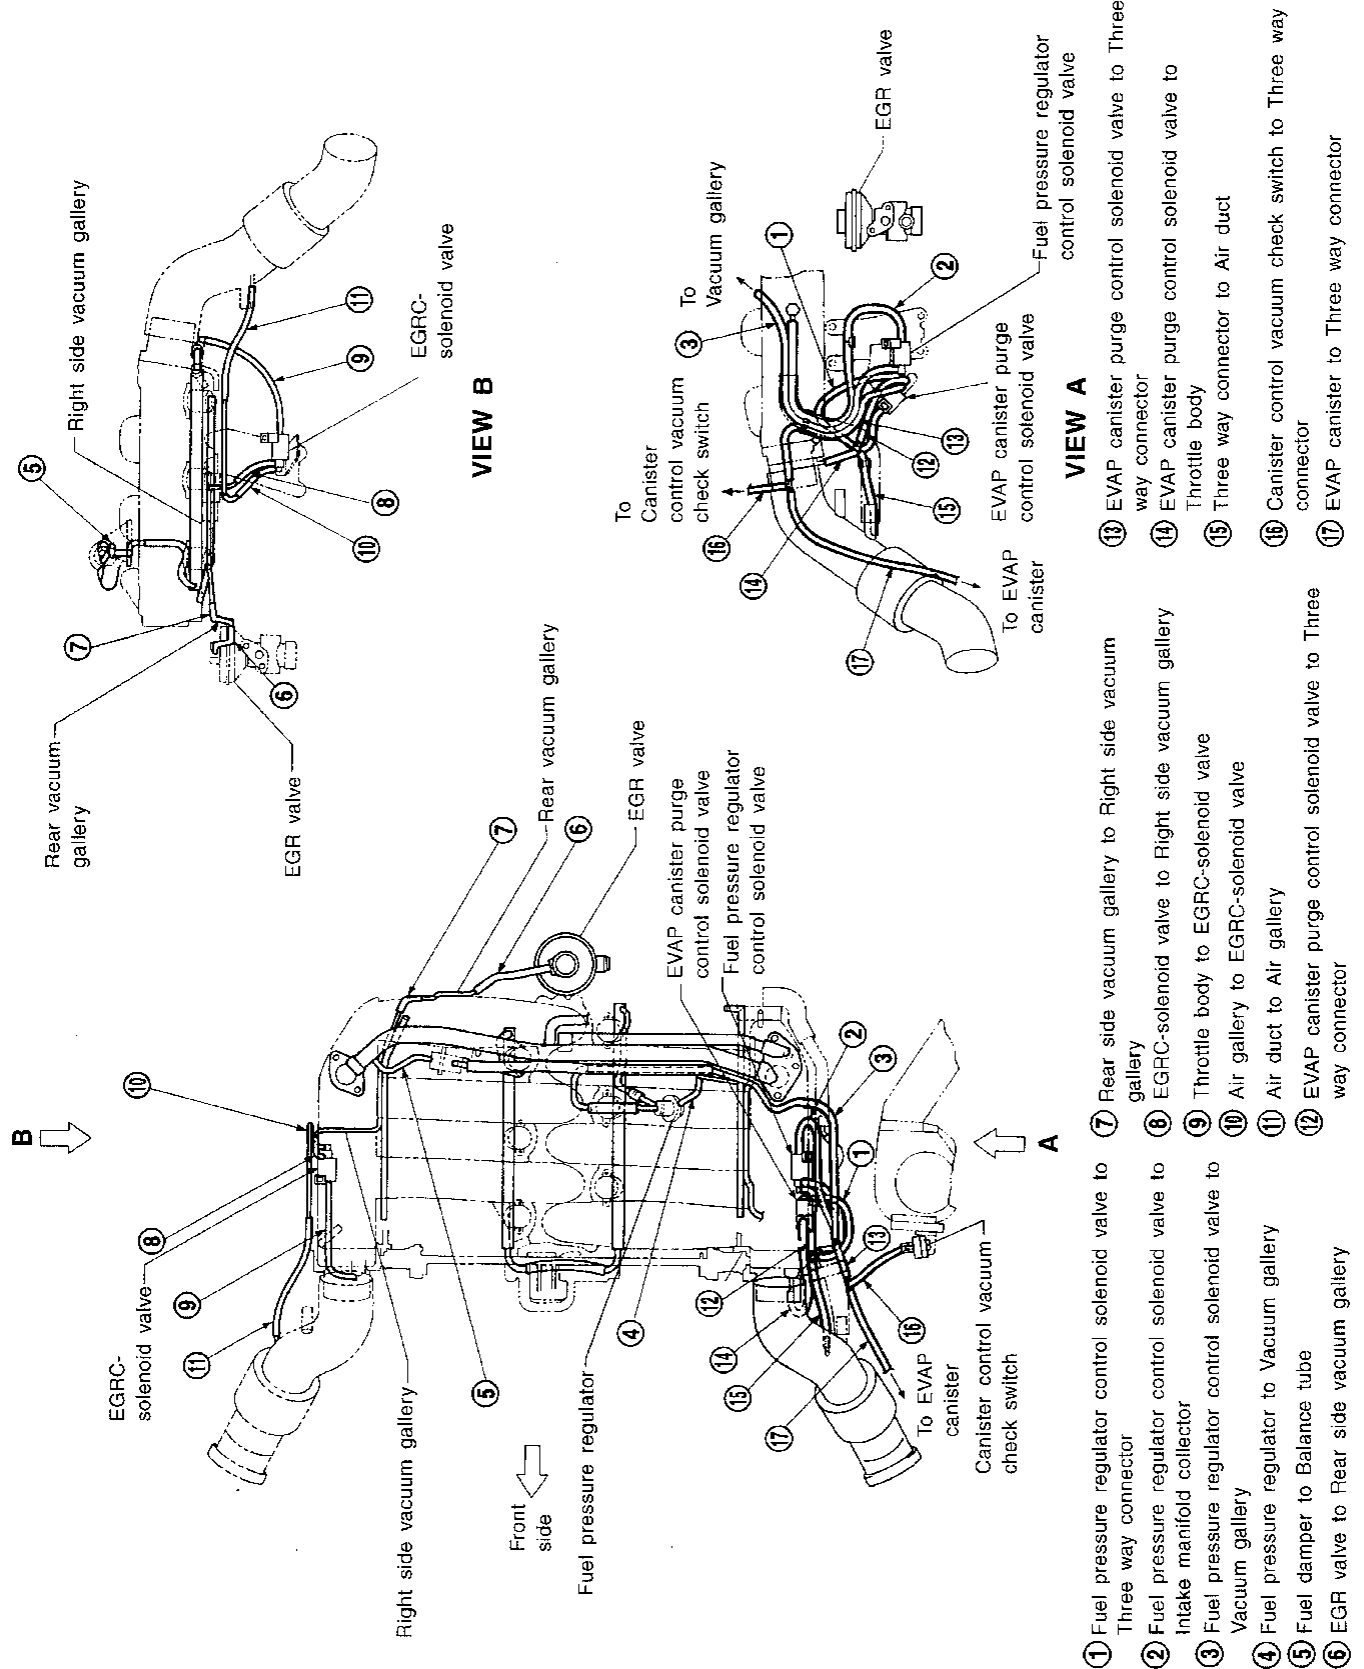

Refer to "System Diagram" in ENGINE AND EMISSION CONTROL SYSTEM for vacuum control system.

SEF594R


CI MA EM LC EC FE CL MT AT PD FA RA BR ST PS BT HA FL IDX





# ENGINE AND EMISSION CONTROL OVERALL SYSTEM

## System Chart

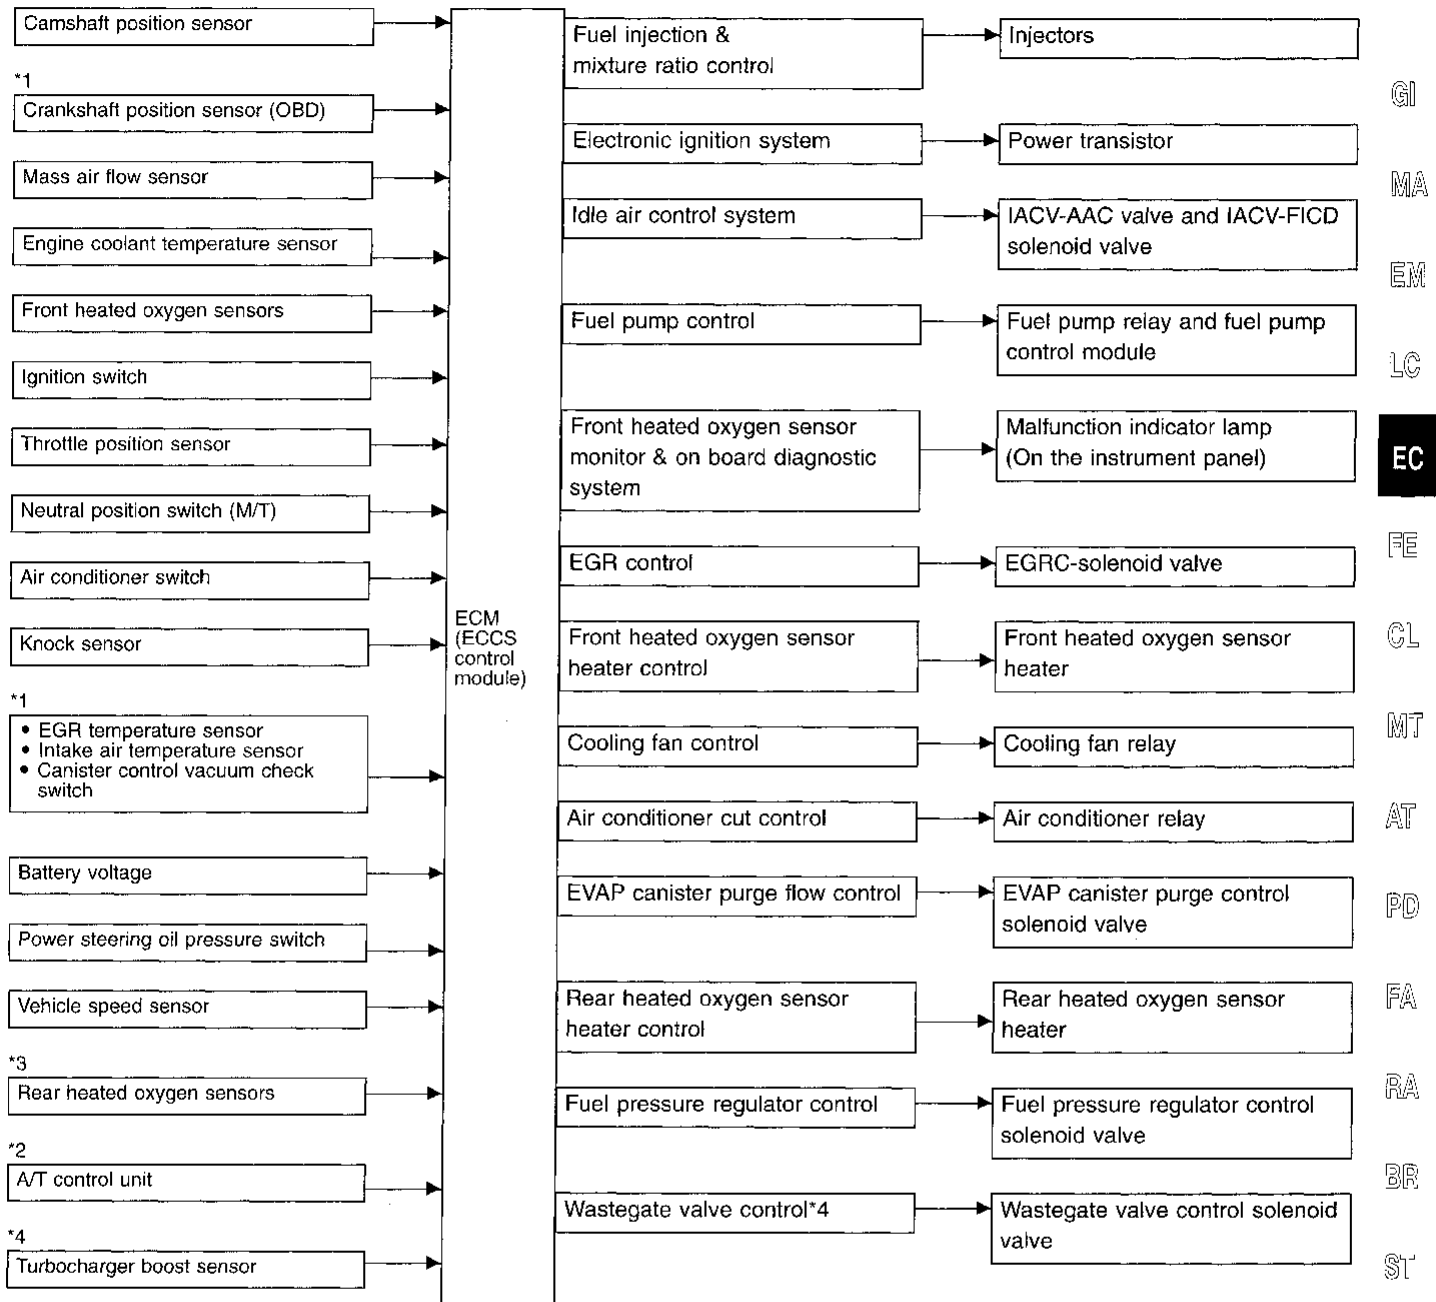

\*1: These sensors are not used to control the engine system. They are used only for the on board diagnosis.


\*2: The DTC related to A/T and gear position will be sent to ECM.

\*3: This sensor is not used to control the engine system under normal conditions.

\*4: Turbocharger models only

## Multipoint Fuel Injection (MFI) System

### INPUT/OUTPUT SIGNAL LINE

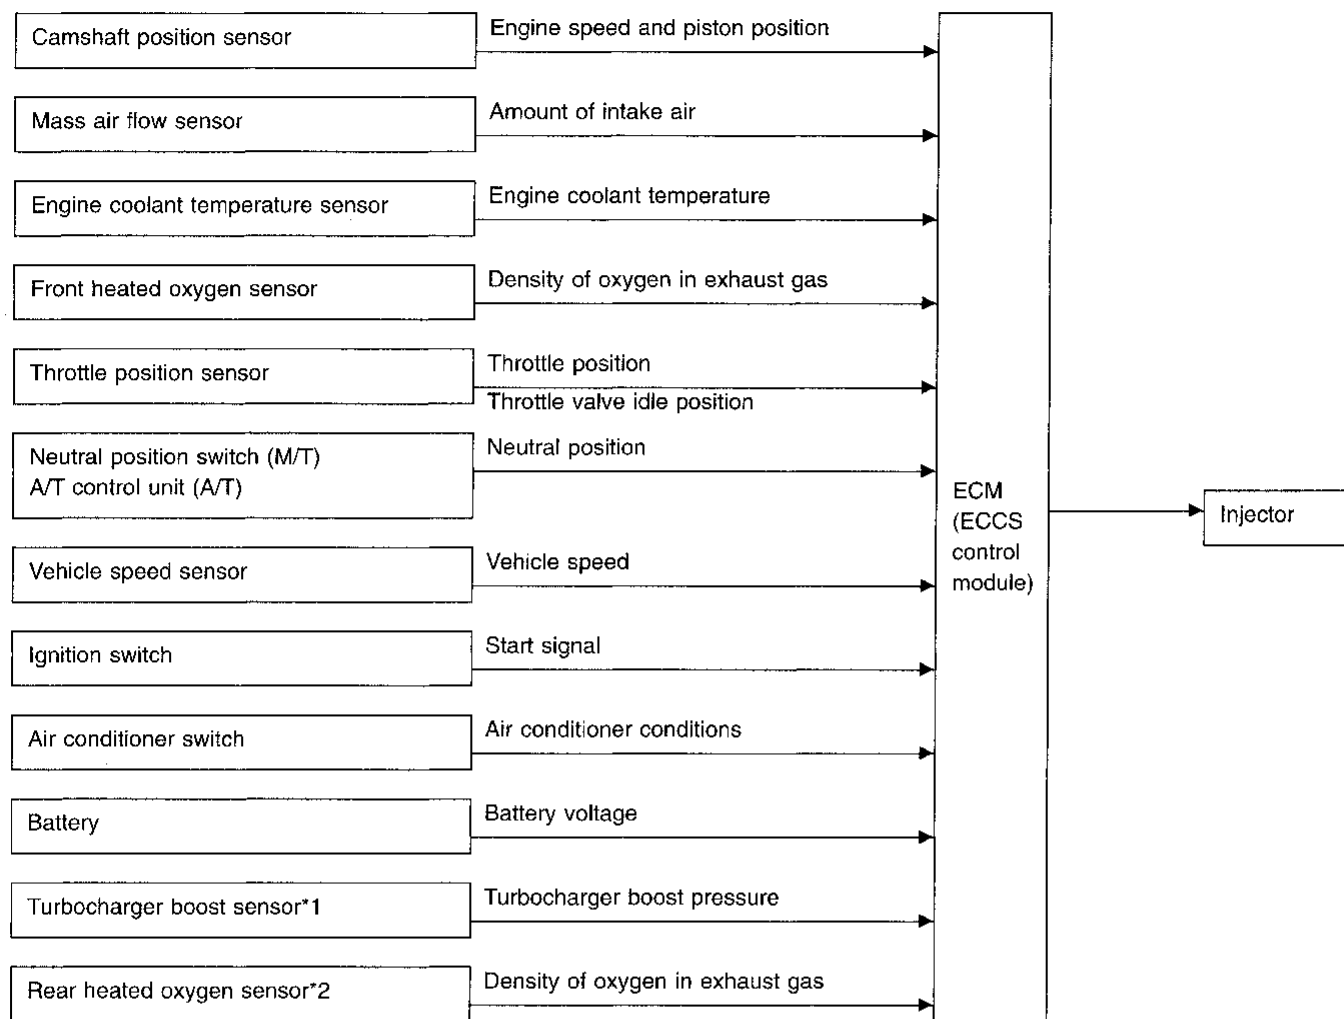

\*1: Turbocharger models only

\*2: This sensor is not used to control the engine system under normal conditions.

### BASIC MULTIPOINT FUEL INJECTION SYSTEM

The amount of fuel injected from the fuel injector is determined by the ECM. The ECM controls the length of time the valve remains open (injection pulse duration). The amount of fuel injected is a program value in the ECM memory. The program value is preset by engine operating conditions. These conditions are determined by input signals (for engine speed and intake air) from both the camshaft position sensor and the mass air flow sensor.

### VARIOUS FUEL INJECTION INCREASE/DECREASE COMPENSATION

The amount of fuel injected is compensated for to improve engine performance. This will be made under various operating conditions as listed below.


⟨Fuel increase⟩

- During warm-up
- When starting the engine
- During acceleration
- Hot-engine operation
- High-load, high-speed operation

⟨Fuel decrease⟩

- During deceleration
- During high speed operation

# ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION

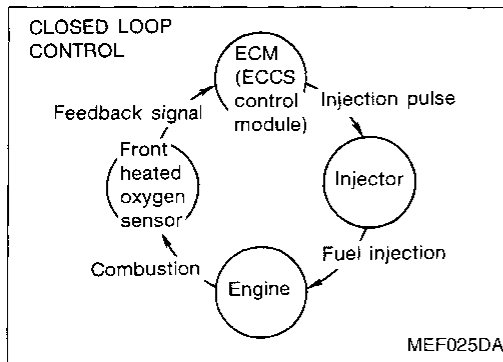

## Multiport Fuel Injection (MFI) System (Cont'd)

### MIXTURE RATIO FEEDBACK CONTROL

The mixture ratio feedback system provides the best air-fuel mixture ratio for driveability and emission control. The three way catalyst can then better reduce CO, HC and NOx emissions. This system uses a front heated oxygen sensor in the exhaust manifold to monitor if the engine is rich or lean. The ECM adjusts the injection pulse width according to the sensor voltage signal. For more information about front heated oxygen sensor, refer to EC-133, 150. This maintains the mixture ratio within the range of stoichiometric (ideal air-fuel mixture).

This stage is referred to as the closed loop control condition.

Rear heated oxygen sensor is located downstream of the three way catalyst. Even if the switching characteristics of the front heated oxygen sensor shift, the air-fuel ratio is controlled to stoichiometric by the signal from the rear heated oxygen sensor.

### OPEN LOOP CONTROL

The open loop system condition refers to when the ECM detects any of the following conditions. Feedback control stops in order to maintain stabilized fuel combustion.

- Deceleration and acceleration
- High-load, high-speed operation
- Engine idling
- Malfunction of front heated oxygen sensor or its circuit
- Insufficient activation of front heated oxygen sensor at low engine coolant temperature
- High-engine coolant temperature
- During warm-up
- When starting the engine
- When fuel pressure regulator control solenoid valve is "ON"

### MIXTURE RATIO SELF-LEARNING CONTROL

The mixture ratio feedback control system monitors the mixture ratio signal transmitted from the front heated oxygen sensor. This feedback signal is then sent to the ECM. The ECM controls the basic mixture ratio as close to the theoretical mixture ratio as possible. However, the basic mixture ratio is not necessarily controlled as originally designed. Both Manufacturing differences (i.e. mass air flow sensor hot film) and characteristic changes during operation (i.e. injector clogging) directly affect mixture ratio.

Accordingly, the difference between the basic and theoretical mixture ratios is monitored in this system. This is then computed in terms of "injection pulse duration" to automatically compensate for the difference between the two ratios.

"Fuel trim" refers to the feedback compensation value compared against the basic injection duration. Fuel trim includes short term fuel trim and long term fuel trim.

"Short term fuel trim" is the short-term fuel compensation used to maintain the mixture ratio at its theoretical value. The signal from the front heated oxygen sensor indicates whether the mixture ratio is RICH or LEAN compared to the theoretical value. The signal then triggers a reduction in fuel volume if the mixture ratio is rich, and an increase in fuel volume if it is lean.

"Long term fuel trim" is overall fuel compensation carried out long-term to compensate for continual deviation of the short term fuel trim from the central value. Such deviation will occur due to individual engine differences, wear over time and changes in the usage environment.

# ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION

## Multiport Fuel Injection (MFI) System (Cont'd)

### FUEL INJECTION SYSTEM

Two types of systems are used.

#### Sequential multiport fuel injection system

Fuel is injected into each cylinder during each engine cycle according to the firing order. This system is used when the engine is running.

#### Simultaneous multiport fuel injection system


Fuel is injected simultaneously into all six cylinders twice each engine cycle. In other words, pulse signals of the same width are simultaneously transmitted from the ECM.

The six injectors will then receive the signals two times for each engine cycle.

This system is used when the engine is being started and/or if the fail-safe mode (CPU) is operating.



### FUEL SHUT-OFF

Fuel to each cylinder is cut off during deceleration or operation of the engine at excessively high speeds.

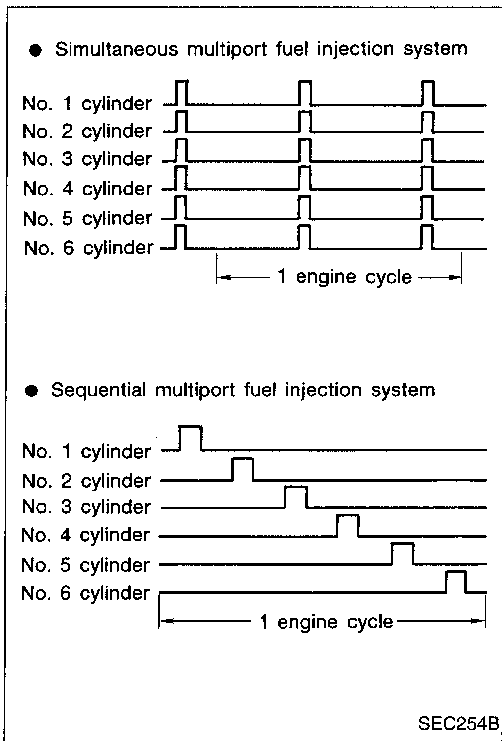

## Electronic Ignition (EI) System

### INPUT/OUTPUT SIGNAL LINE

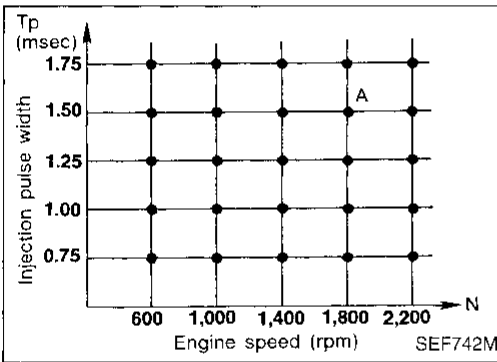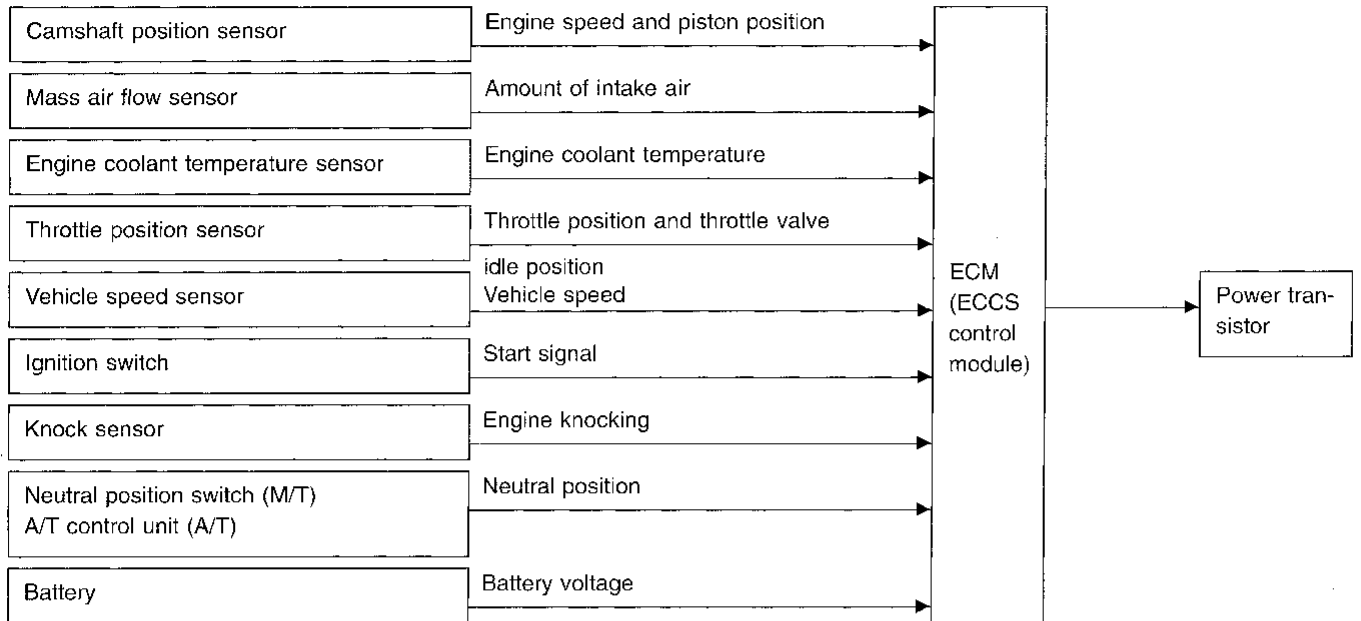

### SYSTEM DESCRIPTION

The ignition timing is controlled by the ECM to maintain the best air-fuel ratio for every running condition of the engine.

The ignition timing data is stored in the ECM. This data forms the map shown.

The ECM detects information such as the injection pulse width and camshaft position sensor signal. Responding to this information, ignition signals are transmitted to the power transistor.

e.g. N: 1,800 rpm, Tp: 1.50 msec  
A °BTDC

During the following conditions, the ignition timing is revised by the ECM according to the other data stored in the ECM.


- 1 At starting
- 2 During warm-up
- 3 At idle
- 4 Hot engine operation
- 5 At acceleration

The knock sensor retard system is designed only for emergencies. The basic ignition timing is programmed within the anti-knocking zone, if recommended fuel is used under dry conditions. The retard system does not operate under normal driving conditions.

If engine knocking occurs, the knock sensor monitors the condition. The signal is transmitted to the ECM (ECCS control module). The ECM retards the ignition timing to eliminate the knocking condition.

## Air Conditioning Cut Control

### INPUT/OUTPUT SIGNAL LINE

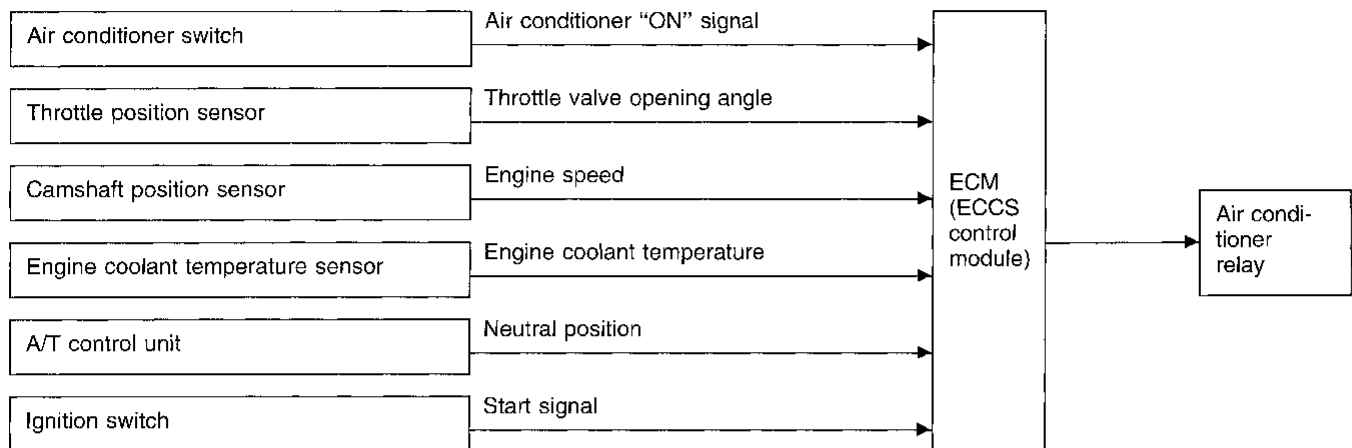

### SYSTEM DESCRIPTION


This system improves engine operation when the air conditioner is used.

Under the following conditions, the air conditioner is turned off.

- When the accelerator pedal is fully depressed.
- When cranking the engine.
- At high engine speeds.
- When engine coolant temperature is excessively high.

## Fuel Cut Control (at no load & high engine speed)

### INPUT/OUTPUT SIGNAL LINE

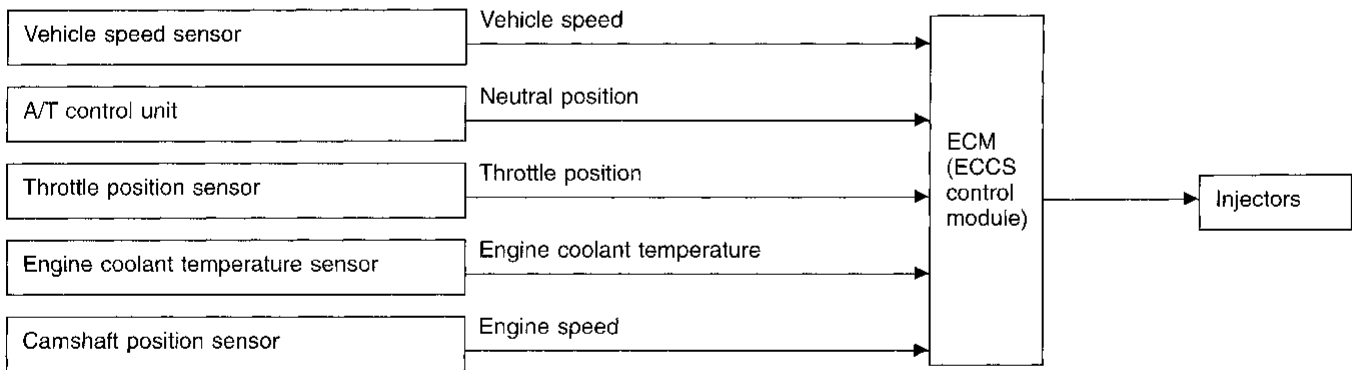


If the engine speed is above 3,000 rpm with no load (for example, in neutral and engine speed over 3,000 rpm) fuel will be cut off after some time. The exact time when the fuel is cut off varies based on engine speed.

Fuel cut will operate until the engine speed reaches 1,500 rpm, then fuel cut is cancelled.

**NOTE:**

**This function is different than deceleration control listed under multiport fuel injection on EC-18.**

## Description

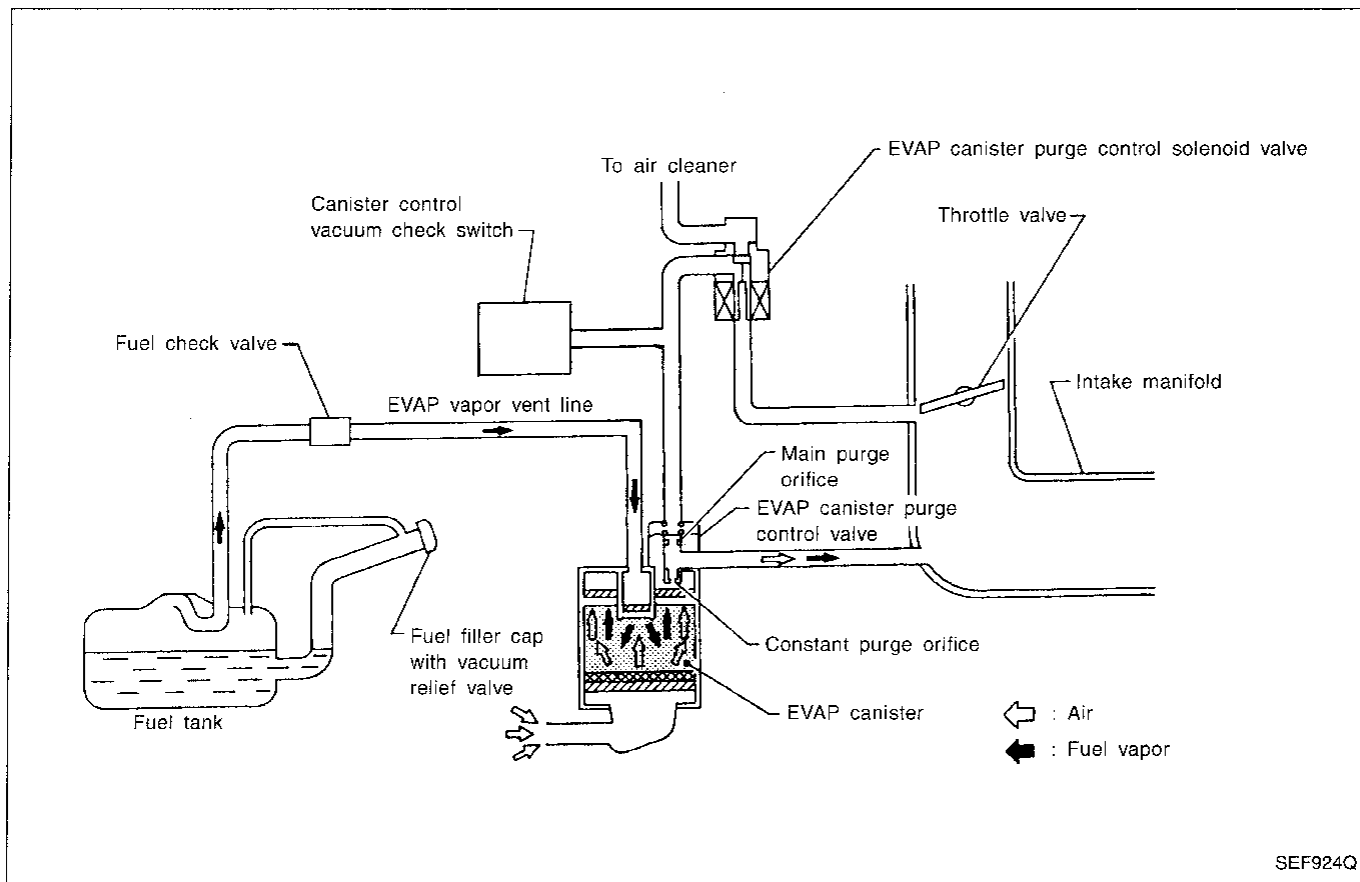

The evaporative emission system is used to reduce hydrocarbons emitted into the atmosphere from the fuel system. This reduction of hydrocarbons is accomplished by activated charcoals in the EVAP canister.

The fuel vapor from sealed fuel tank is led into the EVAP canister when the engine is off. The fuel vapor is then stored in the EVAP canister. The EVAP canister retains the fuel vapor until the EVAP canister is purged by air.

When the engine is running, the air is drawn through the bottom of the EVAP canister. The fuel vapor will then be led to the intake manifold.

When the engine runs at idle, the EVAP canister purge control valve is closed. Only a small amount of vapor flows into the intake manifold through the constant purge orifice.


As the engine speed increases and the throttle vacuum rises, the EVAP canister purge control valve opens. The vapor is sucked through both main purge and constant purge orifices.

## Inspection




### EVAP CANISTER

Check EVAP canister as follows:

1. Blow air in port (A) and check that there is no leakage.
2.
  - Apply vacuum to port (A). [Approximately  $-13.3$  to  $-20.0$  kPa ( $-100$  to  $-150$  mmHg,  $-3.94$  to  $-5.91$  inHg)]
  - Cover port (D) by hand.
  - Blow air in port (C) and check that it flows freely out of port (B).

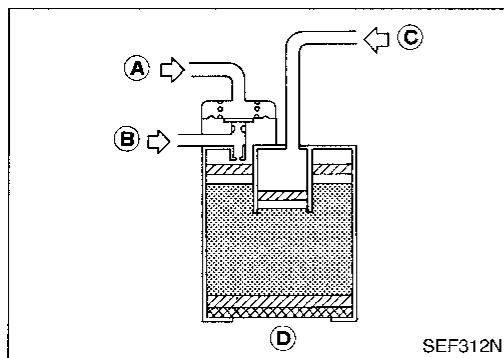

# EVAPORATIVE EMISSION SYSTEM

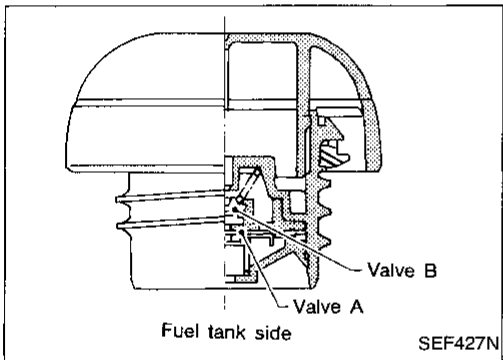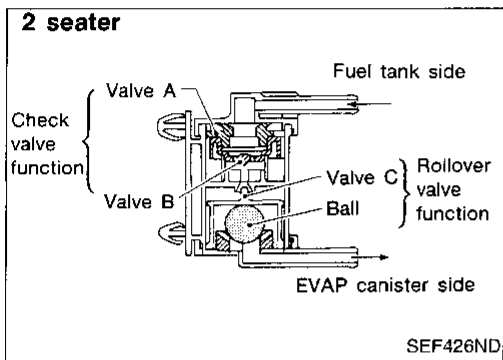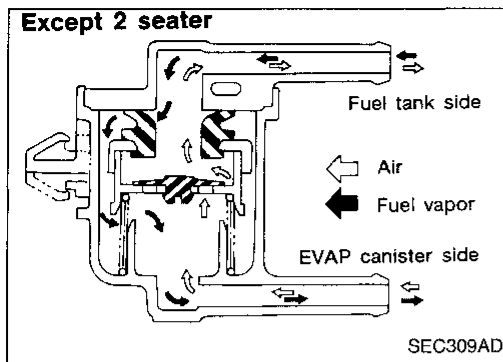

## Inspection (Cont'd)

### FUEL CHECK VALVE (With rollover valve)

#### Check valve operation

1. Blow air through connector on fuel tank side.  
A considerable resistance should be felt and a portion of air flow should be directed toward the EVAP canister side.
2. Blow air through connector on EVAP canister side.  
Air flow should be smoothly directed toward fuel tank side.
3. If fuel check valve is suspected of not properly functioning in steps 1 and 2 above, replace it.

#### Rollover valve operation

Ensure that continuity of air passage does not exist when the installed rollover valve is tilted to 90° or 180°.

### FUEL TANK VACUUM RELIEF VALVE

1. Wipe clean valve housing.
2. Suck air through the cap. A slight resistance accompanied by valve clicks indicates that valve A is in good mechanical condition. Note also that, by further sucking air, the resistance should disappear with valve clicks.
3. Blow air on fuel tank side and ensure that continuity of air passage exists through valve B.
4. If valve is clogged or if no resistance is felt, replace cap as an assembly.

### EVAP CANISTER PURGE CONTROL SOLENOID VALVE

Refer to EC-232.

### CANISTER CONTROL VACUUM CHECK SWITCH

Refer to EC-292.



# POSITIVE CRANKCASE VENTILATION

## Description

This system returns blow-by gas to both the intake manifold and air inlet tubes.

The positive crankcase ventilation (PCV) valve is provided to conduct crankcase blow-by gas to the intake manifold.



During partial throttle operation of the engine, the intake manifold sucks the blow-by gas through the PCV valve.

Normally, the capacity of the valve is sufficient to handle any blow-by and a small amount of ventilating air.

The ventilating air is then drawn from air inlet tubes into crankcase through a hose. The hose connects the air inlet tubes and the rocker cover.

Under full-throttle condition, the manifold vacuum is insufficient to draw the blow-by flow through the valve. Flow then goes through the hose connection in the reverse direction.


Under any condition, some of the flow goes through the hose connection to the air inlet tubes. This will occur on vehicles with an excessively high blow-by.

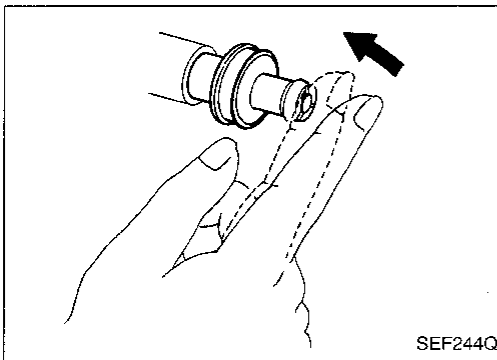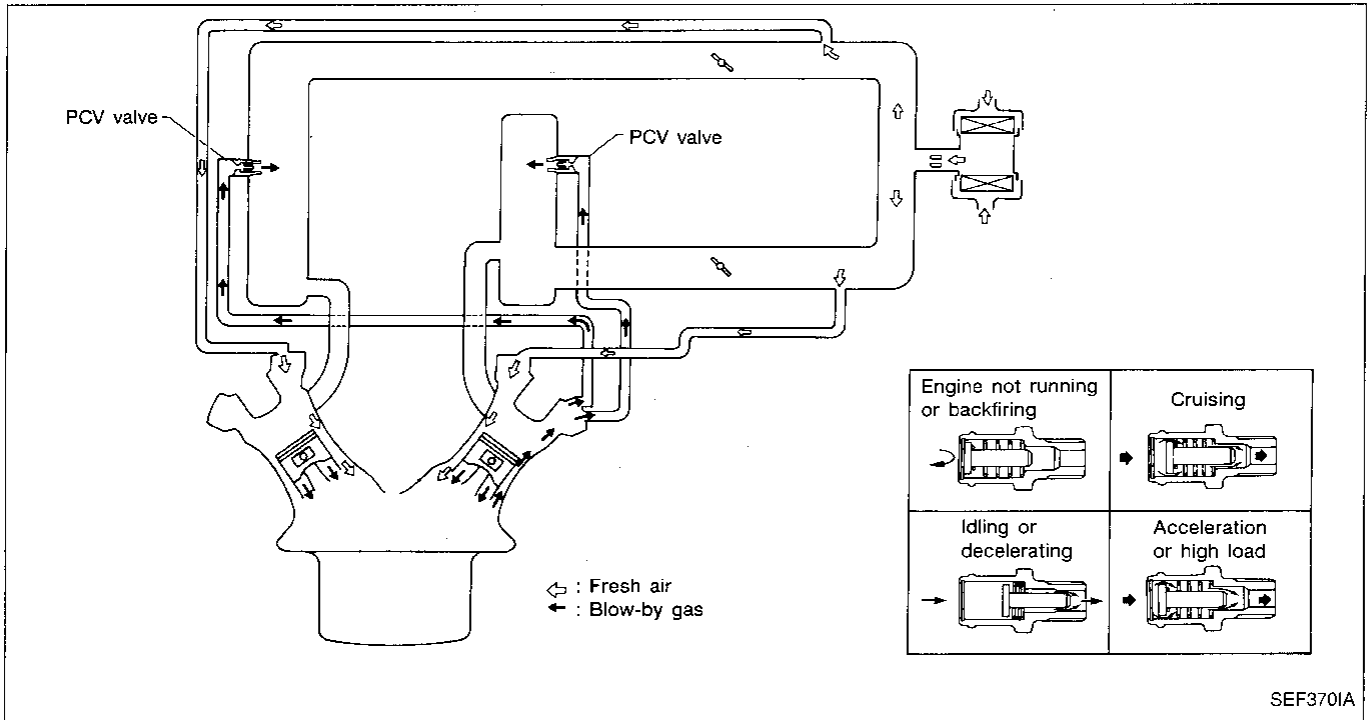

## Inspection



### PCV (Positive Crankcase Ventilation) VALVE

With engine running at idle, remove PCV hose from PCV valve; if valve is working properly, a hissing noise will be heard as air passes through it and a strong vacuum should be felt immediately when a finger is placed over valve inlet.

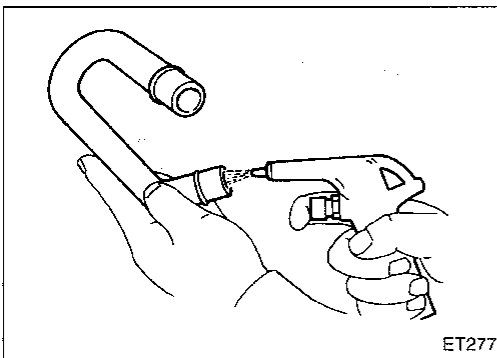

### PCV HOSE

1. Check hoses and hose connections for leaks.
2. Disconnect all hoses and clean with compressed air. If any hose cannot be freed of obstructions, replace.

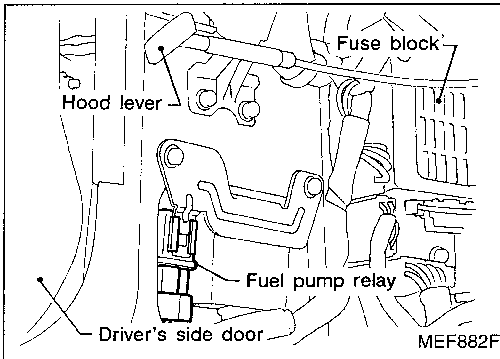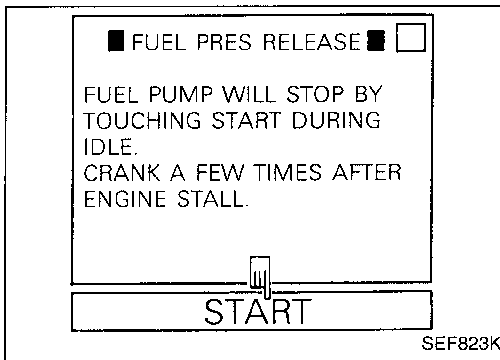

## Fuel Pressure Release

Before disconnecting fuel line, release fuel pressure from fuel line to eliminate danger.

1. Start engine.
  2. Perform "FUEL PRESSURE RELEASE" in "WORK SUPPORT" mode with CONSULT.  
(Touch "START" and after engine stalls, crank it two or three times to release all fuel pressure.)
  3. Turn ignition switch off.
1. Disconnect fuel pump relay.
  2. Start engine.
  3. After engine stalls, crank it two or three times to release all fuel pressure.
  4. Turn ignition switch off and reconnect fuel pump relay.

## Fuel Pressure Check

- When reconnecting fuel line, always use new clamps.
  - Make sure that clamp screw does not contact adjacent parts.
  - Use a torque driver to tighten clamps.
  - Use Pressure Gauge to check fuel pressure.
1. Release fuel pressure to zero.
  2. Disconnect fuel hose between fuel filter and fuel tube (engine side).
  3. Install pressure gauge between fuel filter and fuel tube.
  4. Start engine and check for fuel leakage.
  5. Read the indication of fuel pressure gauge.

### At idling:

When fuel pressure regulator valve vacuum hose is connected.



Approximately 250.1 kPa  
(2.55 kg/cm<sup>2</sup>, 36.3 psi)





When fuel pressure regulator valve vacuum hose is disconnected.

Approximately 299.1 kPa  
(3.05 kg/cm<sup>2</sup>, 43.4 psi)

6. Stop engine and disconnect fuel pressure regulator vacuum hose from intake manifold.
7. Plug intake manifold with a rubber cap.
8. Connect variable vacuum source to fuel pressure regulator.
9. Start engine and read indication of fuel pressure gauge as vacuum is changed.

**Fuel pressure should decrease as vacuum increases. If results are unsatisfactory, replace fuel pressure regulator.**

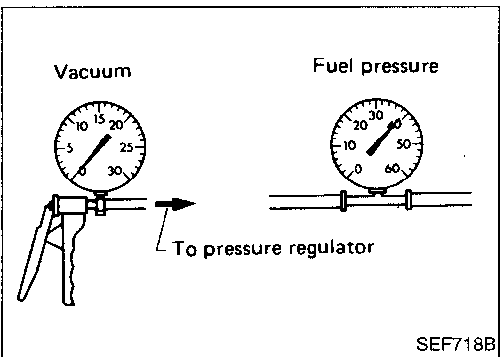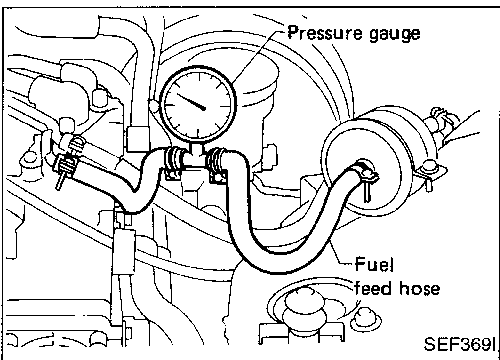

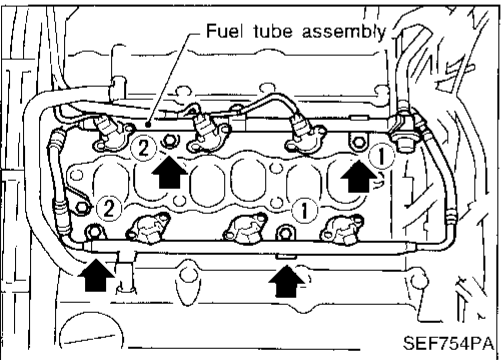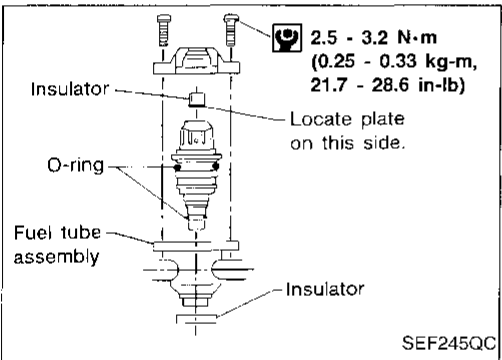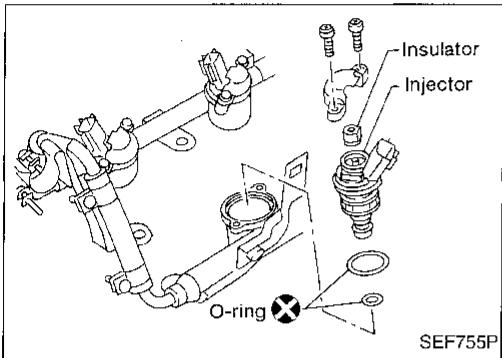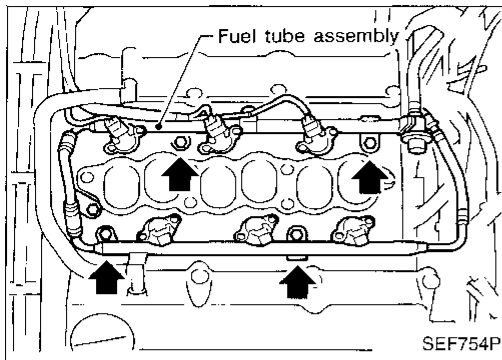

## Injector Removal and Installation

1. Release fuel pressure to zero.
  2. Remove intake manifold collector (Refer to TIMING CHAIN in EM section).
  3. Disconnect vacuum hose from fuel pressure regulator.
  4. Disconnect fuel hoses from fuel tube assembly.
  5. Disconnect injector harness connectors.
  6. Remove injectors with fuel tube assembly.
  7. Push out any malfunctioning injector from fuel tube assembly.
- Do not extract injector by pinching connector.**
8. Replace or clean injector as necessary.

9. Install injector to fuel tube assembly.
- Always replace O-rings and insulators with new ones. Lubricate O-rings with a smear of engine oil.**

10. Install injectors with fuel tube assembly to intake manifold. **Tighten in numerical order shown in the figure.**
    - a) First, tighten all bolts to 9.3 to 10.8 N·m (0.95 to 1.1 kg-m, 6.9 to 8.0 ft-lb).
    - b) Then, tighten all bolts to 16 to 25 N·m (1.6 to 2.0 kg-m, 12 to 19 ft-lb).
  11. Install fuel hoses to fuel tube assembly. **Lubricate fuel hoses with a smear of engine oil.**
  12. Reinstall any parts removed in reverse order of removal.
- CAUTION:**  
**After properly connecting fuel hose to injector and fuel tube assembly, check connection for fuel leakage.**

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST


RS

BT

HA

EL

DX

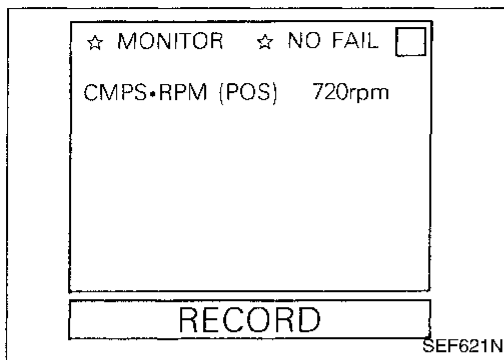


## Direct Ignition System — How to Check Idle Speed and Ignition Timing

### IDLE SPEED

- **Using CONSULT**

Check idle speed in "DATA MONITOR" mode with CONSULT.

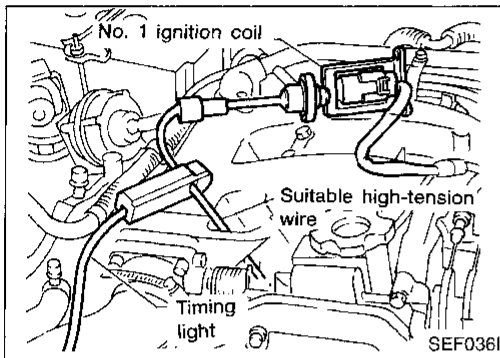


### IGNITION TIMING


Any of following three methods may be used.

- **Method A (Without SST)**

1. Remove No. 1 ignition coil.
2. Connect No. 1 ignition coil and No. 1 spark plug with a suitable high-tension wire. Attach timing light as in the above procedures. Enlarge the end of the suitable high-tension wire with insulating tape as shown.
3. Check ignition timing.

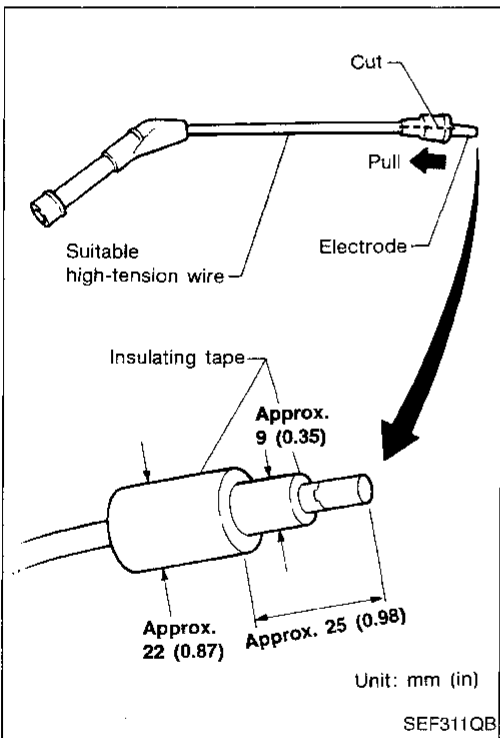

4. For the above procedures, enlarge the end of a suitable high-tension wire with insulating tape as shown.

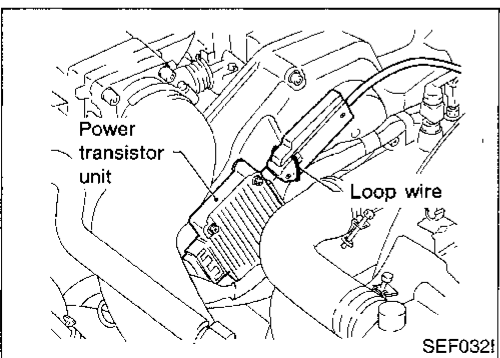

- **Method B (Without SST)**



1. Attach timing light to loop wire as shown.
2. Check ignition timing.

## BASIC SERVICE PROCEDURE


### Direct Ignition System — How to Check Idle Speed and Ignition Timing (Cont'd)

- Method C (With SST)

1. Disconnect No. 1 ignition coil harness connector.

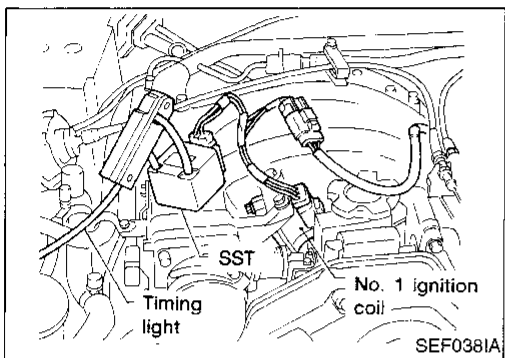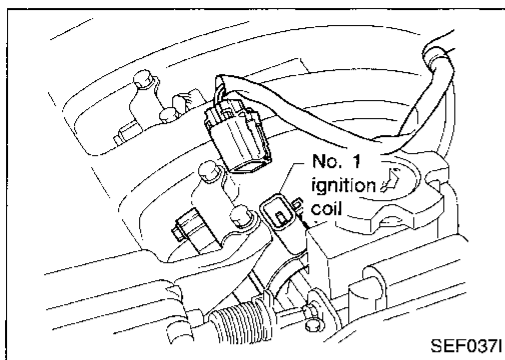

2. Connect SST and clamp wire with timing light as shown.
3. Check ignition timing.

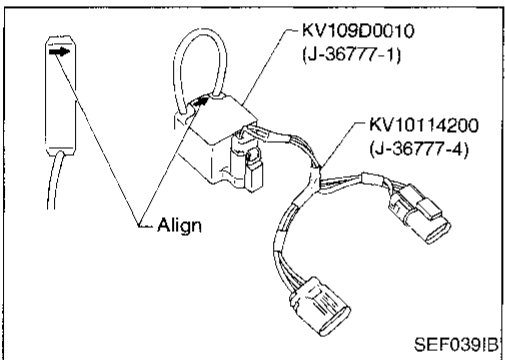

Align direction marks on SST and timing light clamp if aligning mark is punched.

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX


## Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment

### PREPARATION

1. Make sure that the following parts are in good order.
  - Battery
  - Ignition system
  - Engine oil and coolant levels
  - Fuses
  - ECM harness connector
  - Vacuum hoses
  - Air intake system (Oil filler cap, oil level gauge, etc.)
  - Fuel pressure
  - Engine compression
  - EGR valve operation
  - Throttle valve
  - EVAP canister purge control valve







2. On air conditioner equipped models, checks should be carried out while the air conditioner is "OFF".
3. On automatic transmission equipped models, when checking idle rpm, ignition timing and mixture ratio, checks should be carried out while shift lever is in "N" position.
4. When measuring "CO" percentage, insert probe more than 40 cm (15.7 in) into tail pipe.
5. Turn off headlamps, heater blower, rear defogger.
6. Keep front wheels pointed straight ahead.
7. Make the check after the cooling fan has stopped.

### Overall inspection sequence

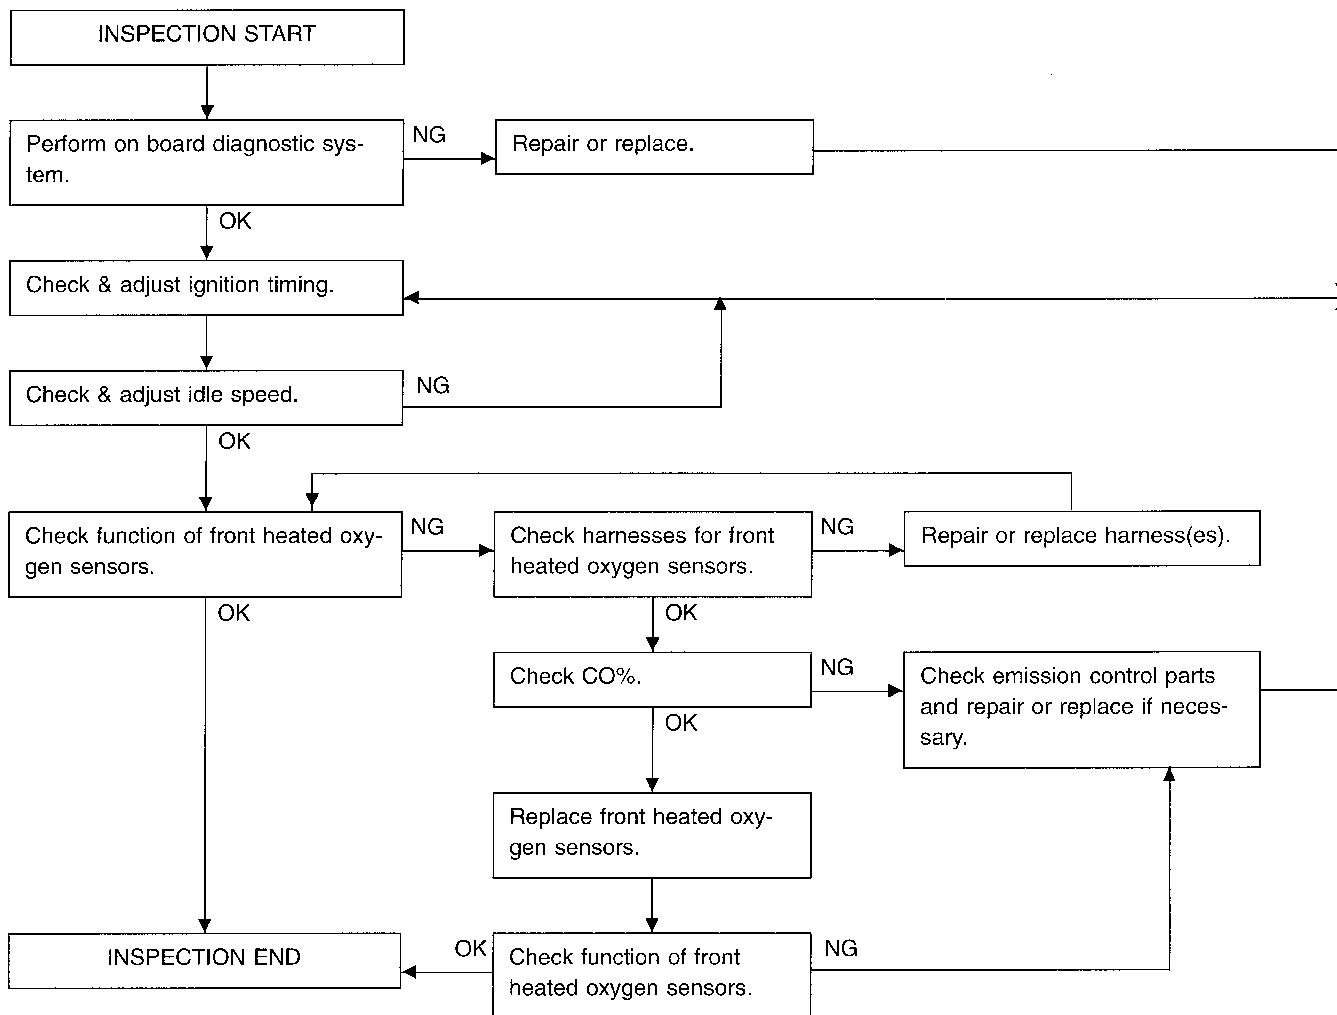

# BASIC SERVICE PROCEDURE







## Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)

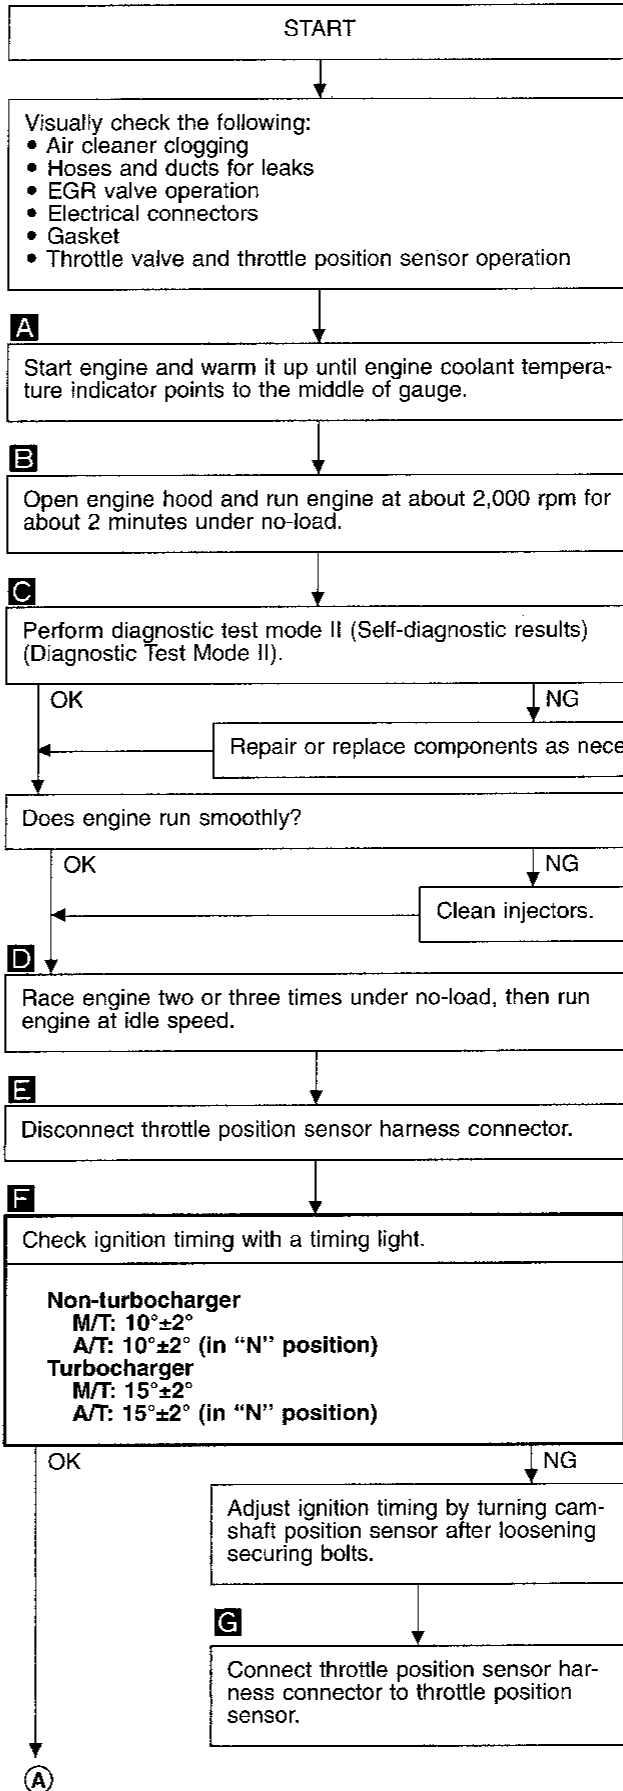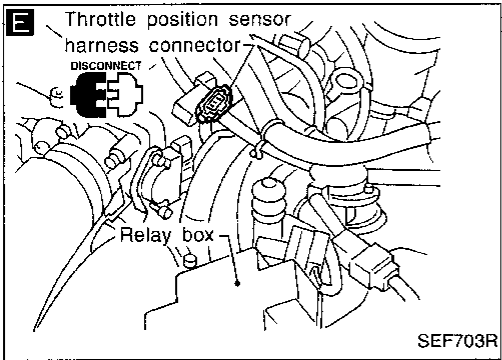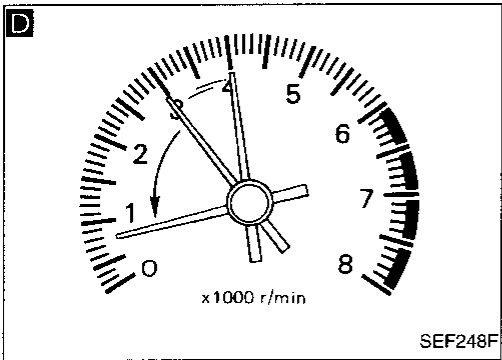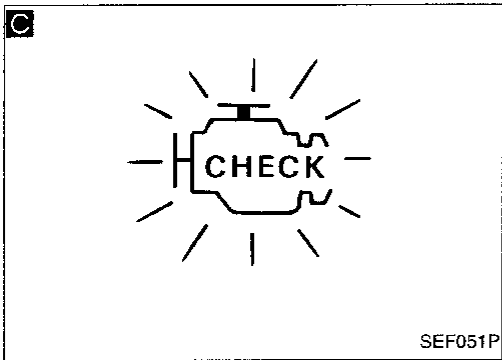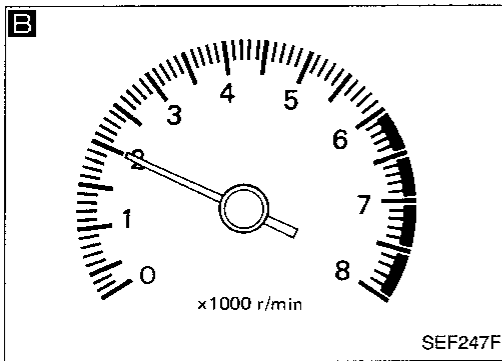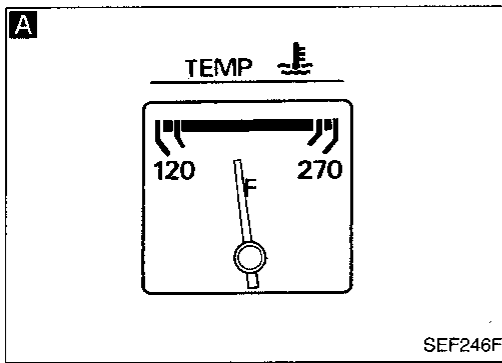

GI  
MA  
EM  
LC  
EC  
FE  
CL  
WT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

# BASIC SERVICE PROCEDURE






## Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)

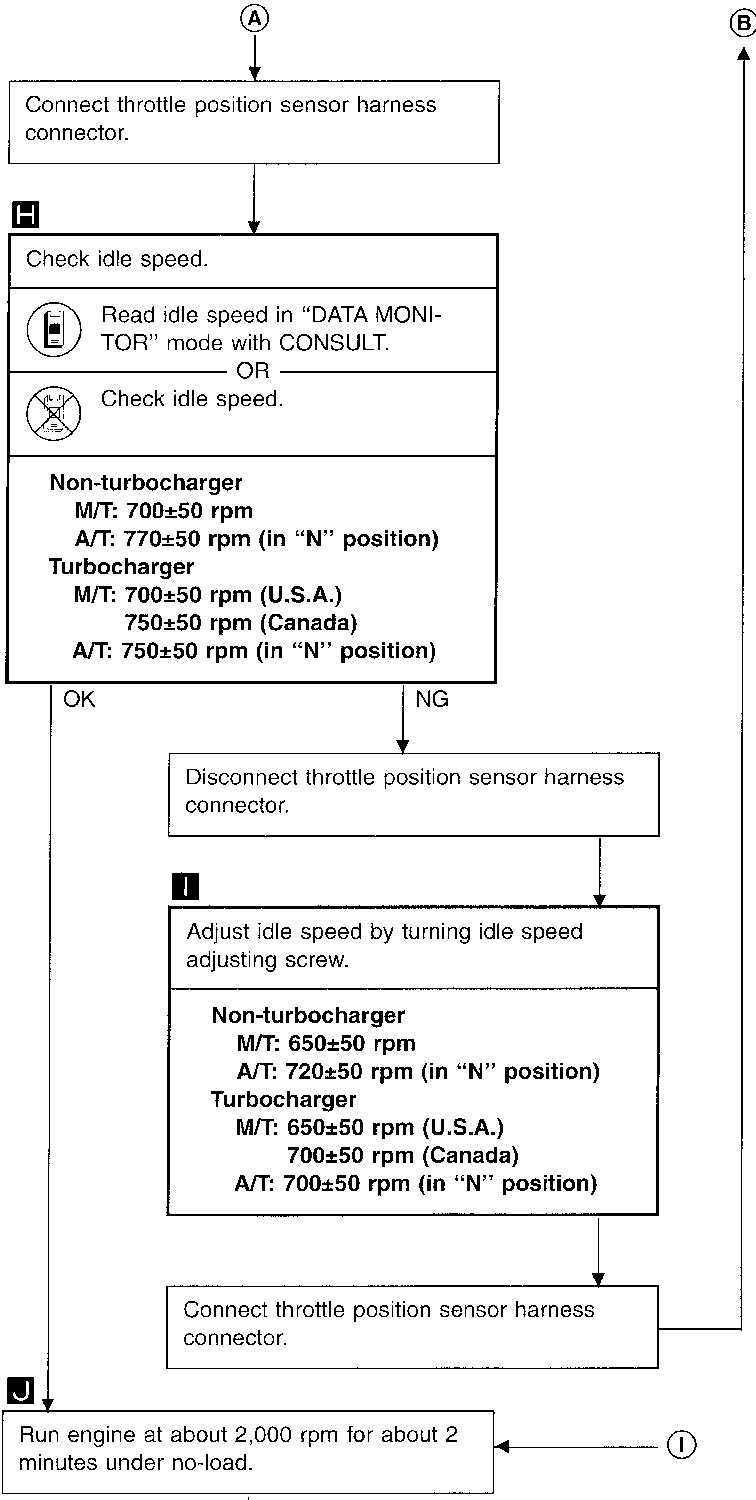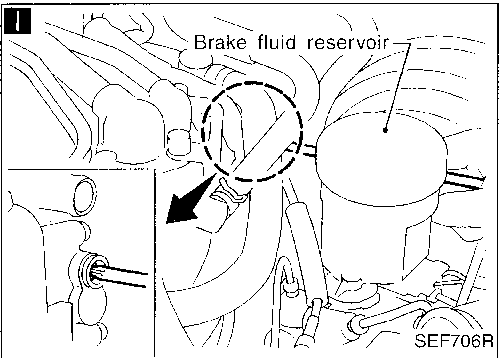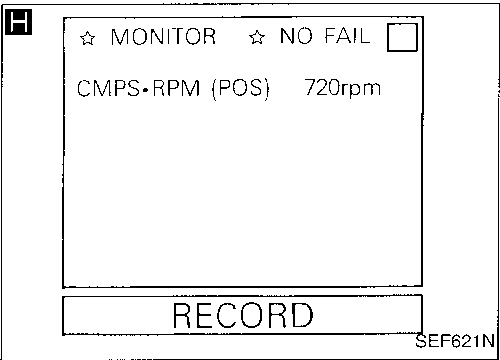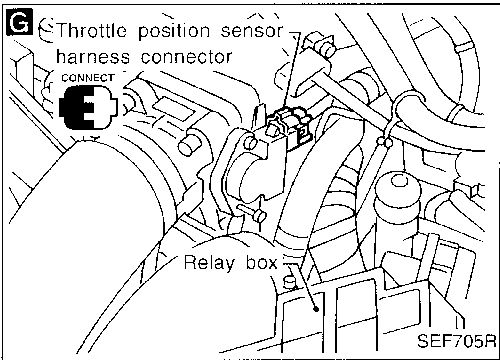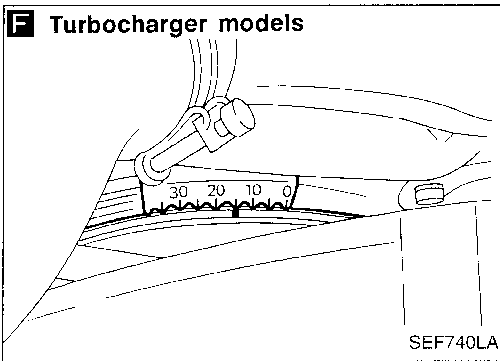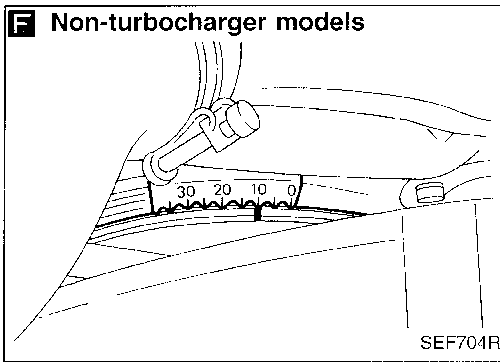



# BASIC SERVICE PROCEDURE

## Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)

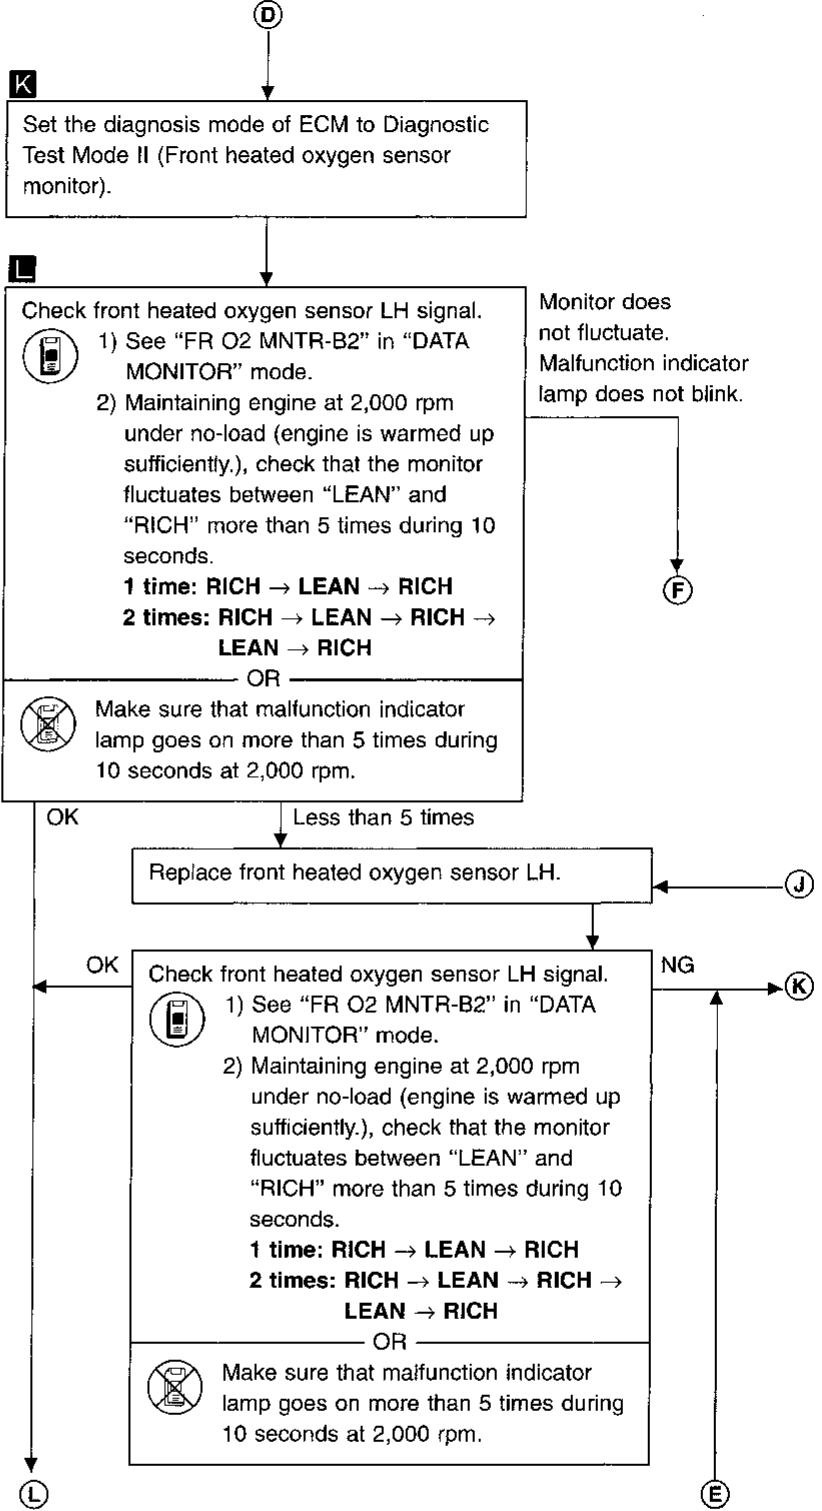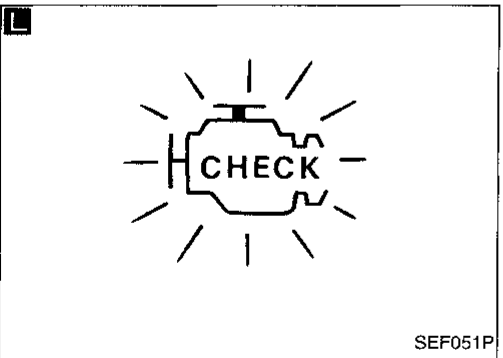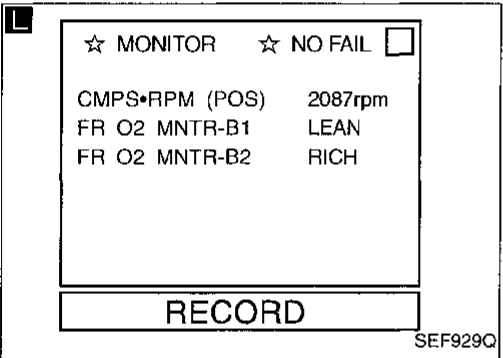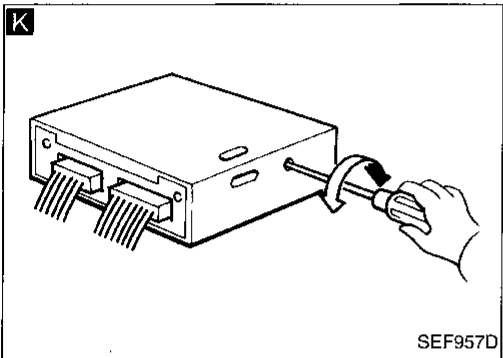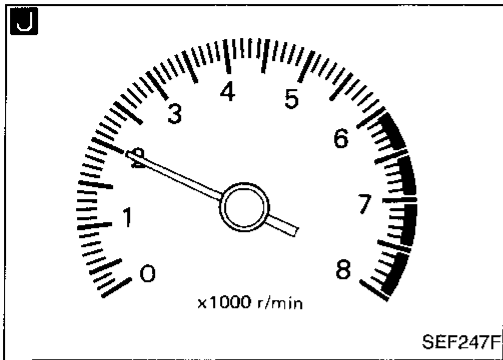

GI  
MA  
EM  
LC  
**EC**  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

# BASIC SERVICE PROCEDURE

## Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)

**M**

☆ MONITOR ☆ NO FAIL


CMPS•RPM (POS)	2087rpm
FR O2 MNTR-B1	LEAN
FR O2 MNTR-B2	RICH

**RECORD**

SEF929Q




**M**

SEF051P

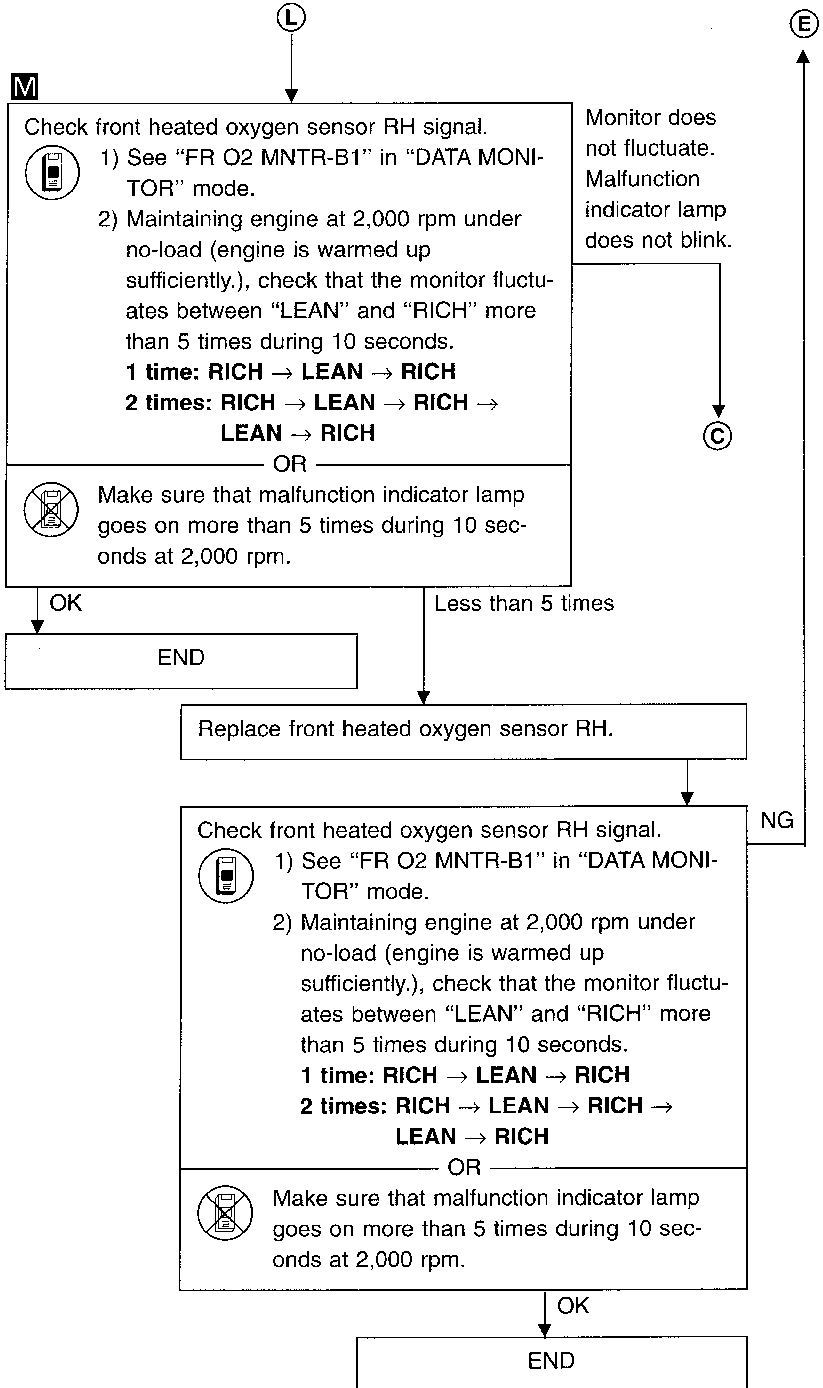

# BASIC SERVICE PROCEDURE





## Idle Speed/Idle Mixture Ratio Adjustment (Cont'd)

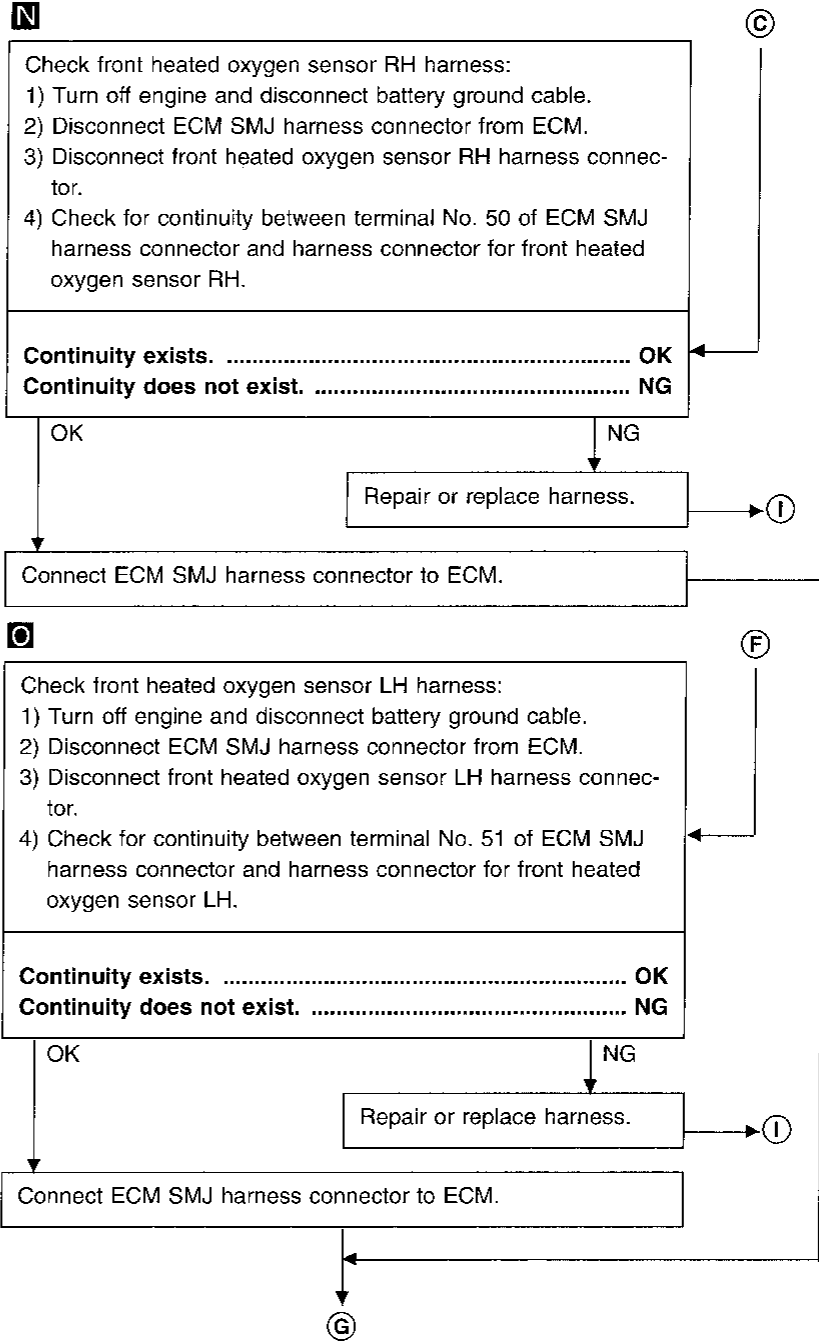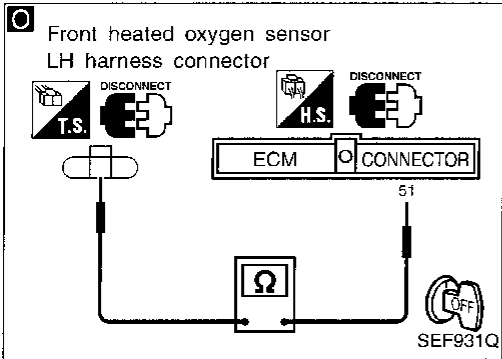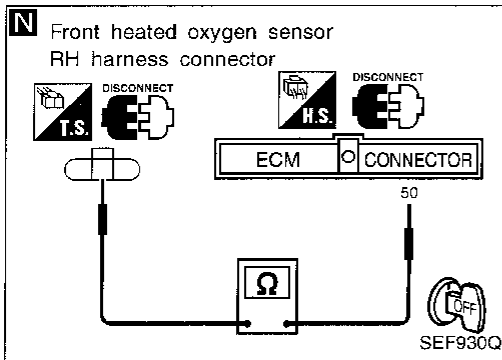

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

# BASIC SERVICE PROCEDURE

## Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)

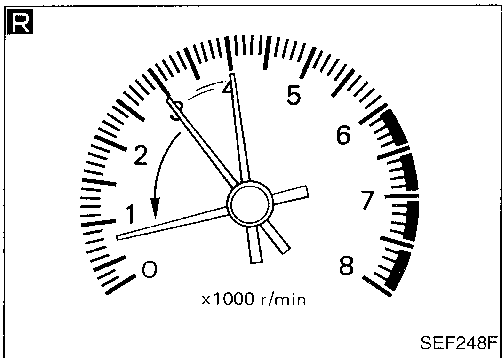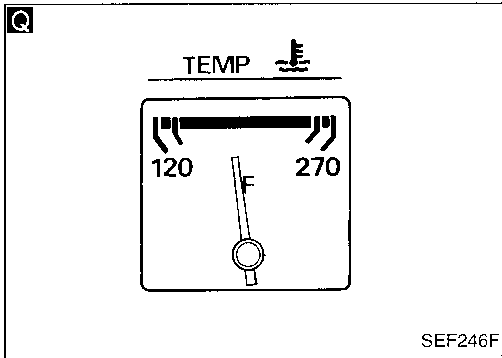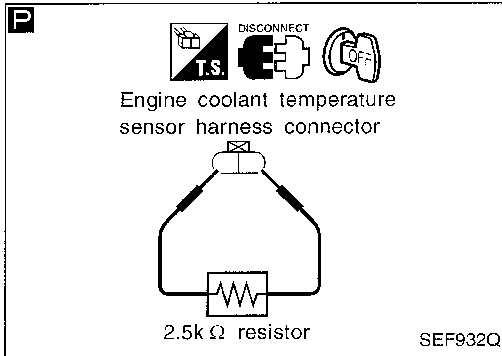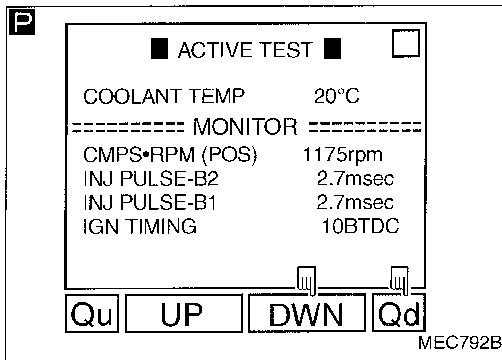

- Ⓐ
- Ⓟ
- 1) Select "COOLANT TEMP" in "ACTIVE TEST" mode.
  - 2) Set "COOLANT TEMP" to 20°C (68°F) by touching "DWN" and "Qd".
- OR
- 1) Disconnect engine coolant temperature sensor harness connector.
  - 2) Connect a resistor (2.5 kΩ) between terminals of engine coolant temperature sensor harness connector.

Ⓠ

Start engine and warm it up until engine coolant temperature indicator points to the middle of gauge.

Ⓡ

Face engine two or three times under no-load, then run engine at idle speed.

Check "CO" %.

Idle CO: 0.2 - 8%

After checking CO%,

- 1) Disconnect the resistor from terminals of engine coolant temperature sensor.
- 2) Connect engine coolant temperature sensor harness connector to engine coolant temperature sensor.

OK → Ⓣ

NG

Connect front heated oxygen sensor harness connectors to front heated oxygen sensor.

Check fuel pressure regulator. ← Ⓚ

Check mass air flow sensor.

Check injector.  
Clean or replace if necessary.

Check engine coolant temperature sensor.

Check ECM function\* by substituting another known good ECM. → Ⓢ

\*: ECM may be the cause of a problem, but this is rarely the case.

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

## Introduction

The ECM (ECCS control module) has an on board diagnostic system, which detects engine system malfunctions related to sensors or actuators. The malfunction indicator lamp (MIL) on the instrument panel lights up when the same malfunction is detected in two consecutive trips (two trip detection logic).

## Two Trip Detection Logic

When a malfunction is detected for the first time, the malfunction (DTC and freeze frame data) is stored in the ECM memory. (1st trip) The malfunction indicator lamp will not light up at this stage.

If the same malfunction is detected again during next drive, this second detection causes the malfunction indicator lamp to light up. (2nd trip) (See EC-44.)

The "trip" in the "Two Trip Detection Logic" means performing of the "DTC CONFIRMATION PROCEDURE". Specific on board diagnostic items will light up or blink the MIL even in the 1st trip as below.

Items	MIL		
	1st trip		2nd trip lighting up
	Blinking	Lighting up	
Misfire (Possible three way catalyst damage) — DTC: P0300 - P0306 (0701 - 0603) is being detected	X		
Misfire (Possible three way catalyst damage) — DTC: P0300 - P0306 (0701 - 0603) has been detected		X	
Three way catalyst function — DTC: P0420 (0702), P0430 (0703)		X	
Closed loop control — DTC: P0130 (0307), P0150 (0308)		X	
Except above			X

## Diagnostic Trouble Code (DTC)


### HOW TO READ DTC

The diagnostic trouble code can be read by the following methods.  
(Either code for the 1st trip or the 2nd trip can be read.)

1. The number of blinks of the malfunction indicator lamp in the Diagnostic Test Mode II (Self-Diagnostic Results) Examples: 0101, 0201, 1003, 1104, etc.  
These DTCs are controlled by NISSAN.
  2. CONSULT or GST (Generic Scan Tool) Examples: P0340, P1320, P0705, P0750, etc.  
These DTCs are prescribed by SAE J2012.  
(CONSULT also displays the malfunctioning component or system.)
- **Output of the diagnostic trouble code indicates that the indicated circuit has a malfunction. However, in case of the Mode II and GST they do not indicate whether the malfunction is still occurring or occurred in the past and returned to normal. CONSULT can identify them. Therefore, using CONSULT (if available) is recommended.**

### HOW TO ERASE DTC

The diagnostic trouble code can be erased by the following methods.

- ① Selecting "ERASE" in the "SELF-DIAG RESULTS" mode with CONSULT
  - ② Selecting Mode 4 with GST (Generic Scan Tool)
  - ③  Changing the diagnostic test mode from Diagnostic Test Mode II to Mode I by turning the mode selector on the ECM (Refer to EC-41.)
- **If the battery terminal is disconnected, the diagnostic trouble code will be lost within 24 hours.**
  - **When you erase the DTC, using CONSULT or GST is easier and quicker than switching the mode selector on the ECM.**

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

## Diagnostic Trouble Code (DTC) (Cont'd)



### HOW TO ERASE DTC (With CONSULT)

**Note:** If the diagnostic trouble code is not for A/T related items (see EC-82), skip steps 2 through 4.

1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 5 seconds and then turn it "ON" (engine stopped) again.
  2. Turn CONSULT "ON" and touch "A/T".
  3. Touch "SELF-DIAG RESULTS".
  4. Touch "ERASE". (The DTC in the A/T control unit will be erased.) And touch "BACK" twice.
  5. Touch "ENGINE".
  6. Touch "SELF-DIAG RESULTS".
  7. Touch "ERASE". (The DTC in the ECM will be erased.)
- If DTCs are displayed for both ECM and A/T control unit, they need to be erased individually for both ECM and A/T control unit.

#### How to erase DTC (With CONSULT)

1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 5 seconds and then turn it "ON" (engine stopped) again.

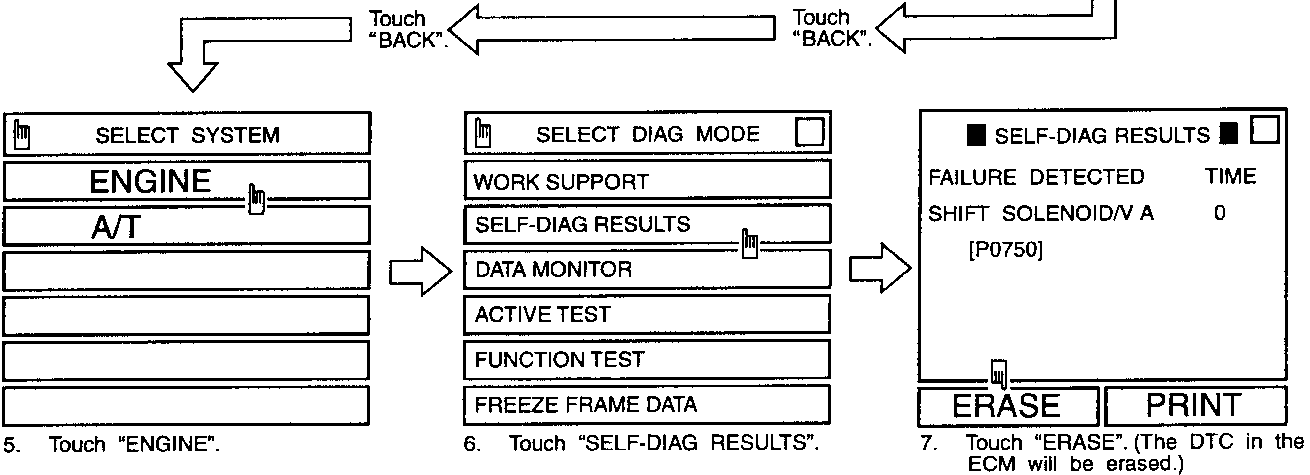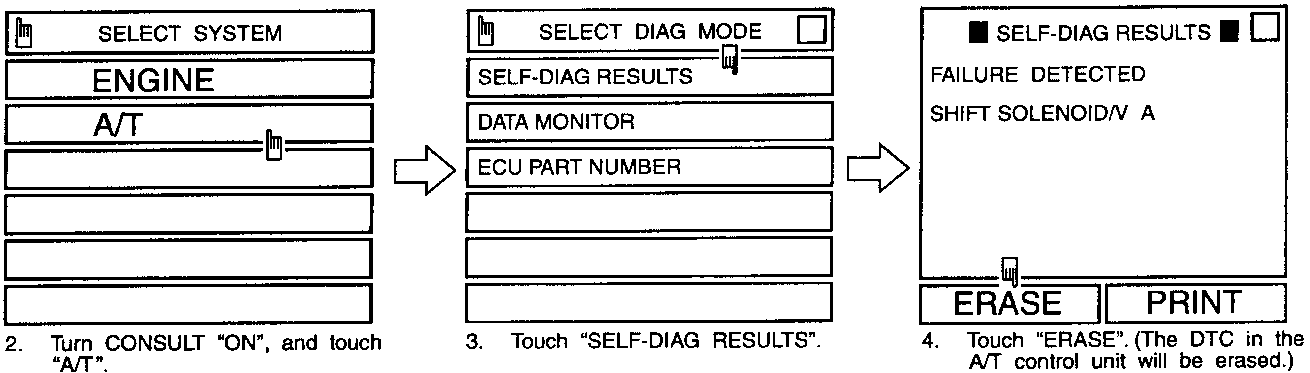

SEF338QA

### HOW TO ERASE DTC (With GST)

**Note:** If the diagnostic trouble code is not for A/T related items (see page EC-82), skip step 2.

1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait for at least 5 seconds and then turn it "ON" (engine stopped) again.
2. Perform "SELF-DIAGNOSTIC PROCEDURE (Without CONSULT)" in AT section titled "TROUBLE DIAGNOSIS", "Self-diagnosis". (The engine warm-up step can be skipped when performing the diagnosis only to erase the DTC.)
3. Select Mode 4 with GST (Generic Scan Tool)

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

## Diagnostic Trouble Code (DTC) (Cont'd)



### HOW TO ERASE DTC (No Tools)

**Note:** If the diagnostic trouble code is not for A/T related items (see EC-82), skip step 2.

1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 5 seconds and then turn it "ON" again.
2. Perform "SELF-DIAGNOSTIC PROCEDURE (Without CONSULT)" in AT section titled "TROUBLE DIAGNOSIS", "Self-diagnosis". (The engine warm-up step can be skipped when performing the diagnosis only to erase the DTC.)
3. Change the diagnostic test mode from Mode II to Mode I by turning the mode selector on the ECM. (See EC-41.)

### Freeze Frame Data

The ECM has a memory function, which stores the driving condition such as fuel system status, calculated load value, engine coolant temperature, short fuel trim, long fuel trim, engine speed, vehicle speed at the moment the ECM detects a malfunction.

Stored data is called Freeze Frame Data.


This data is useful for determining whether the vehicle was running or stopped, the engine warmed up or not, the air-fuel ratio lean or rich, etc. at the time of the malfunction.

This data can be utilized to duplicate the malfunction and to diagnose the trouble.

This data will be erased at the same time with the diagnostic trouble code by the above mentioned methods. The data can be stored only at the 1st trip. It can not be renewed even at the 2nd trip. The freeze frame data can be stored for only one item. Therefore, the ECM has the following priorities to update the data.

Priority	Detected items
1	Misfires — DTC: P0300-P0306 (0701-0603) Fuel Injection System Function — DTC: P0171 (0115), P0172 (0114), P0174 (0210), P0175 (0209)
2	Except the above items (includes A/T items)

For example, the EGR malfunction (Priority: 2) was detected and the freeze frame data was stored in the 1st trip. After that when the misfire (Priority: 1) is detected in another trip, the freeze frame data will be updated from the EGR malfunction for the misfire.

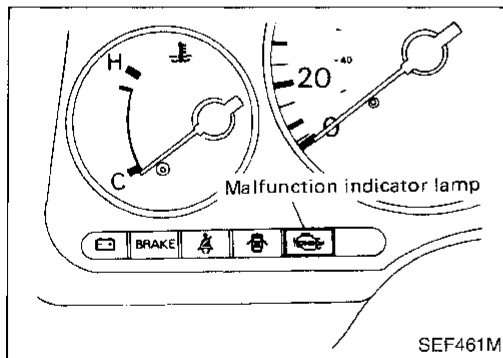

### Malfunction Indicator Lamp (MIL)

1. The malfunction indicator lamp will light up when the ignition switch is turned ON without the engine running. This is for checking the blown lamp.
  - If the malfunction indicator lamp does not light up, see the WARNING LAMPS AND CHIME in the EL section. (Or see EC-337.)
2. When the engine is started, the malfunction indicator lamp should go off. If the lamp remains on, the on board diagnostic system has detected an engine system malfunction.

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION




## Malfunction Indicator Lamp (MIL) (Cont'd)

### ON BOARD DIAGNOSTIC SYSTEM FUNCTION

The on board diagnostic system has the following four functions.

1. **BULB CHECK** : This function checks the bulb for damage (blown, open circuit, etc.) of the malfunction indicator lamp.
2. **MALFUNCTION WARNING** : This is a usual driving condition. When a malfunction is detected twice (2 trip detection logic), the malfunction indicator lamp will light up to inform the driver that a malfunction has been detected.  
Only the following malfunctions will light up or blink the MIL even in the 1st trip.
  - "Misfire (possible three way catalyst damage)"
  - "Three way catalyst function"
  - "Closed loop control"
3. **SELF-DIAGNOSTIC RESULTS** : By using this function, the diagnostic trouble codes can be read.
4. **FRONT HEATED OXYGEN SENSOR MONITOR** : In this mode, the fuel mixture condition (lean or rich) monitored by front heated oxygen sensor can be read.


How to switch the diagnostic test (function) modes and details of the above functions are described later. (See EC-41.)

Condition		Diagnostic Test Mode I	Diagnostic Test Mode II
Ignition switch in "ON" position 	Engine stopped 	BULB CHECK	SELF-DIAGNOSTIC RESULTS
	Engine running 	MALFUNCTION WARNING	FRONT HEATED OXYGEN SENSOR MONITOR



# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

## Malfunction Indicator Lamp (MIL) (Cont'd) HOW TO SWITCH DIAGNOSTIC TEST MODES

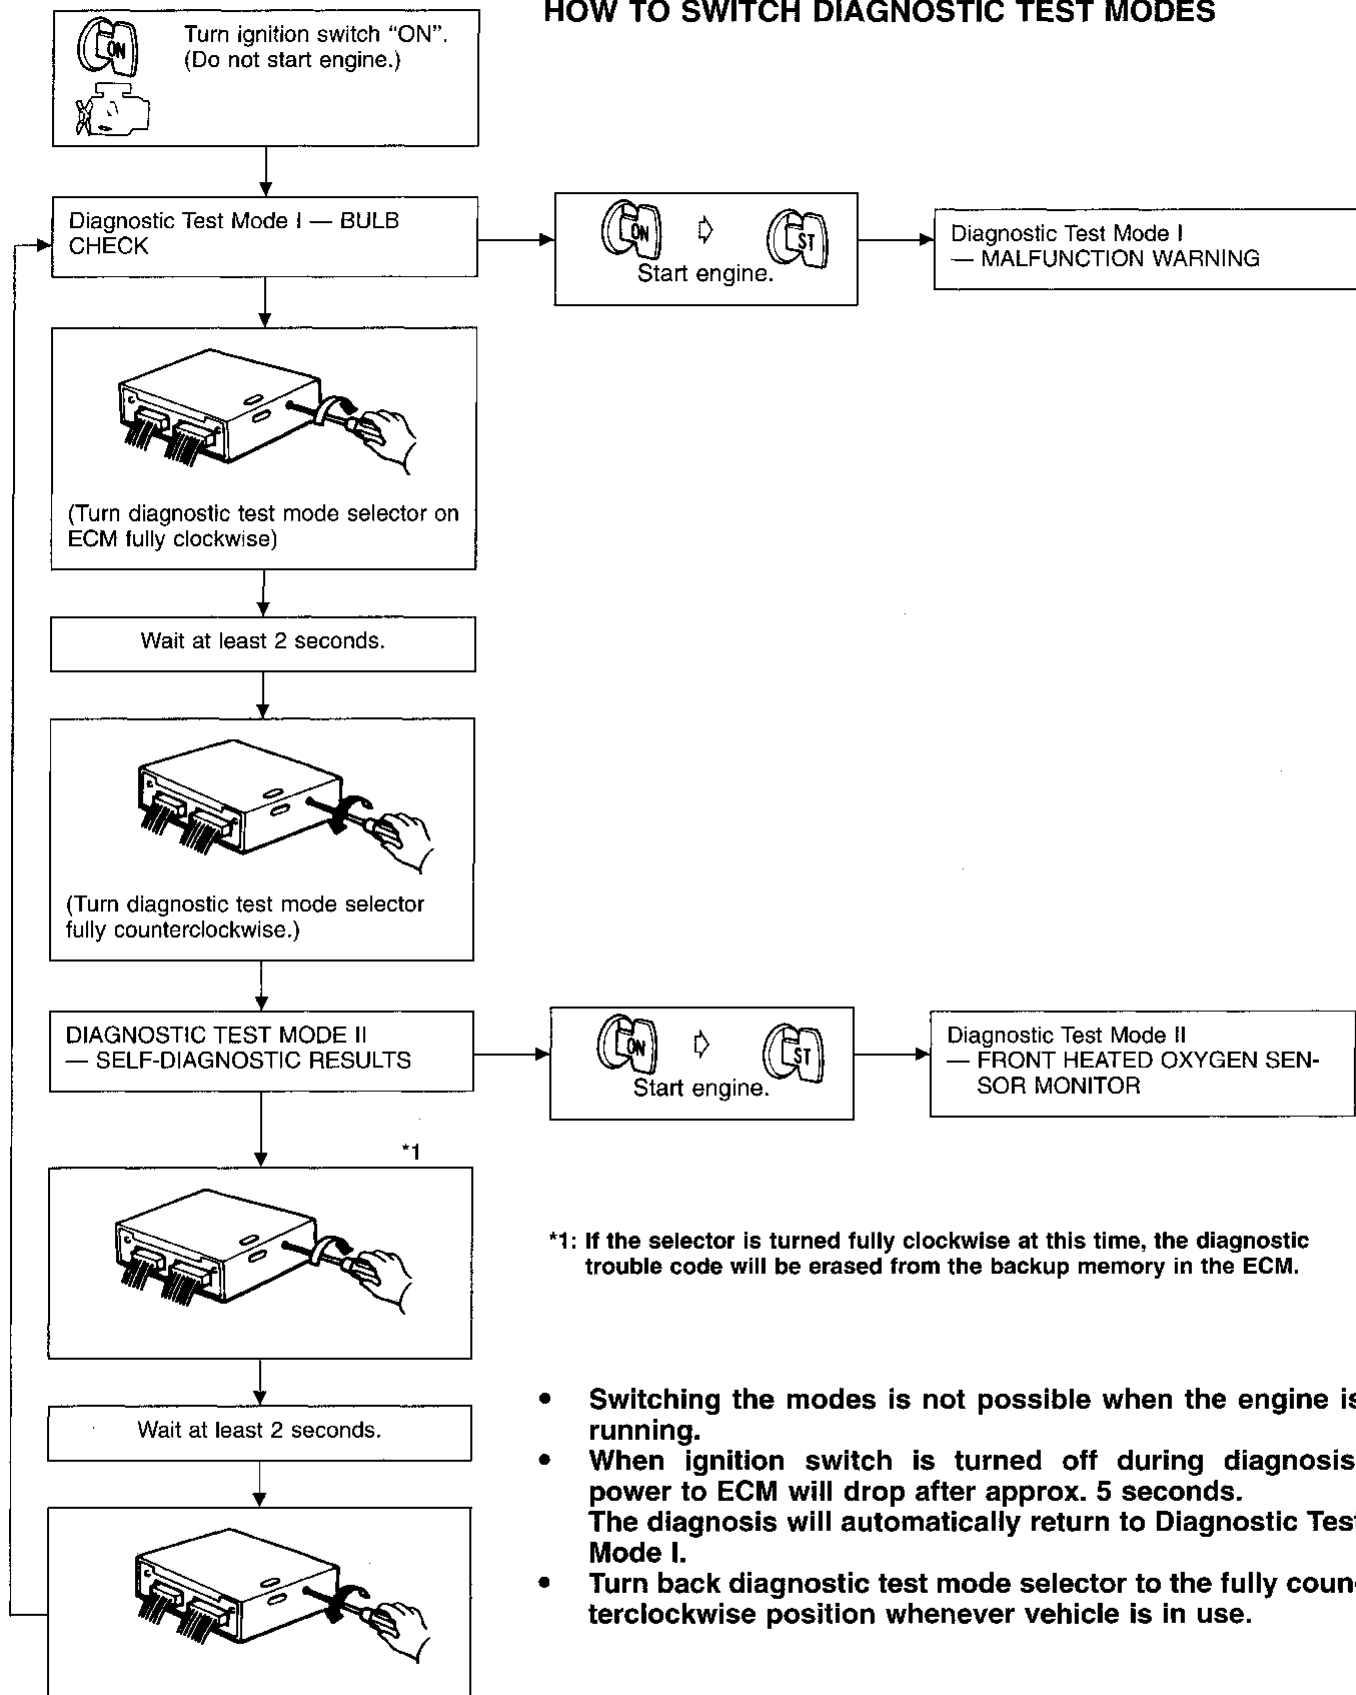

\*1: If the selector is turned fully clockwise at this time, the diagnostic trouble code will be erased from the backup memory in the ECM.

- Switching the modes is not possible when the engine is running.
- When ignition switch is turned off during diagnosis, power to ECM will drop after approx. 5 seconds. The diagnosis will automatically return to Diagnostic Test Mode I.
- Turn back diagnostic test mode selector to the fully counterclockwise position whenever vehicle is in use.

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

## Malfunction Indicator Lamp (MIL) (Cont'd)

### DIAGNOSTIC TEST MODE I—BULB CHECK

In this mode, the MALFUNCTION INDICATOR LAMP on the instrument panel should stay ON. If it remains OFF, check the bulb. (See the WARNING LAMPS AND CHIME in the EL section. Or see EC-337.)



### DIAGNOSTIC TEST MODE I—MALFUNCTION WARNING

MALFUNCTION INDICATOR LAMP	Condition
ON	When the malfunction (The "1 trip" or "2 trip" is shown in the "MIL Illumination" of the "DTC Chart". See EC-70.) is detected or the ECM's CPU is malfunctioning.
OFF	No malfunction

- These Diagnostic Trouble Code Numbers are clarified in Diagnostic Test Mode II (SELF-DIAGNOSTIC RESULTS).

### DIAGNOSTIC TEST MODE II—SELF-DIAGNOSTIC RESULTS

In this mode, a diagnostic trouble code is indicated by the number of blinks of the MALFUNCTION INDICATOR LAMP as shown below.

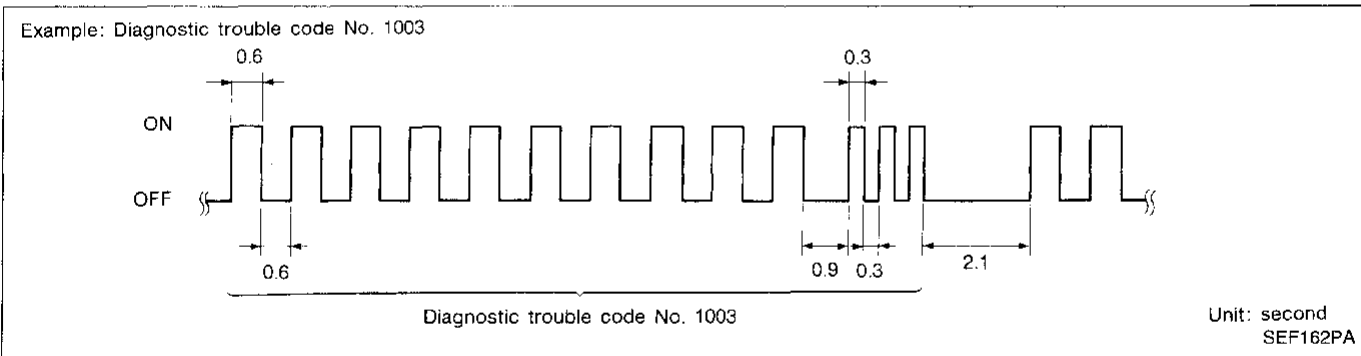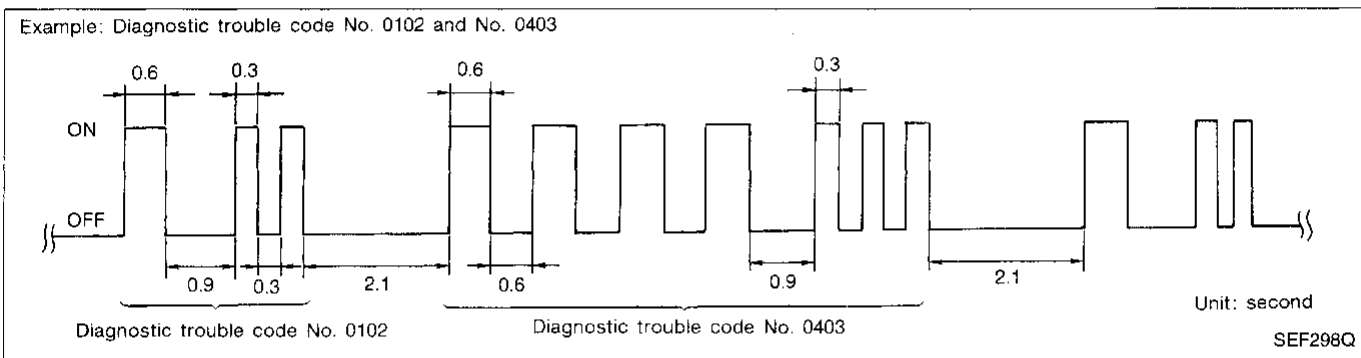

Long (0.6 second) blinking indicates the two LH digits of number and short (0.3 second) blinking indicates the two RH digits of number. For example, the malfunction indicator lamp blinks 10 times for 6 seconds (0.6 sec x 10 times) and then it blinks three times for about 1 second (0.3 sec x 3 times). This indicates the DTC "1003" and refers to the malfunction of the park/neutral position switch.

In this way, all the detected malfunctions are classified by their diagnostic trouble code numbers. The DTC "0505" refers to no malfunction. (See DIAGNOSTIC TROUBLE CODE CHART, EC-70.)

### HOW TO ERASE DIAGNOSTIC TEST MODE II (Self-diagnostic results)

The diagnostic trouble code can be erased from the backup memory in the ECM when the diagnostic test mode is changed from Diagnostic Test Mode II to Diagnostic Test Mode I. (Refer to "HOW TO SWITCH DIAGNOSTIC TEST MODES".)

- If the battery terminal is disconnected, the diagnostic trouble code will be lost from the backup memory within 24 hours.
- Be careful not to erase the stored memory before starting trouble diagnoses.

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

## Malfunction Indicator Lamp (MIL) (Cont'd)

### DIAGNOSTIC TEST MODE II—FRONT HEATED OXYGEN SENSOR MONITOR

In this mode, the MALFUNCTION INDICATOR LAMP displays the condition of the fuel mixture (lean or rich) which is monitored by the front heated oxygen sensor.

MALFUNCTION INDICATOR LAMP	Fuel mixture condition in the exhaust gas	Air fuel ratio feedback control condition
ON	Lean	Closed loop control
OFF	Rich	
*Remains ON or OFF	Any condition	Open loop control

\*: Maintains conditions just before switching to open loop.


To check the front heated oxygen sensor function, start engine in the Diagnostic Test Mode II and warm it up until engine coolant temperature indicator points to the middle of the gauge.

Next run engine at about 2,000 rpm for about 2 minutes under no-load conditions. Then make sure that the MALFUNCTION INDICATOR LAMP comes ON more than 5 times every 10 seconds when measured at 2,000 rpm under no-load.

### How to switch monitored sensor from left bank to right bank or vice versa

• The following procedure should be performed while the engine is running.

1. Turn diagnostic test mode selector on ECM fully clockwise.
2. Wait at least 2 seconds.
3. Turn diagnostic test mode selector on ECM fully counterclockwise.

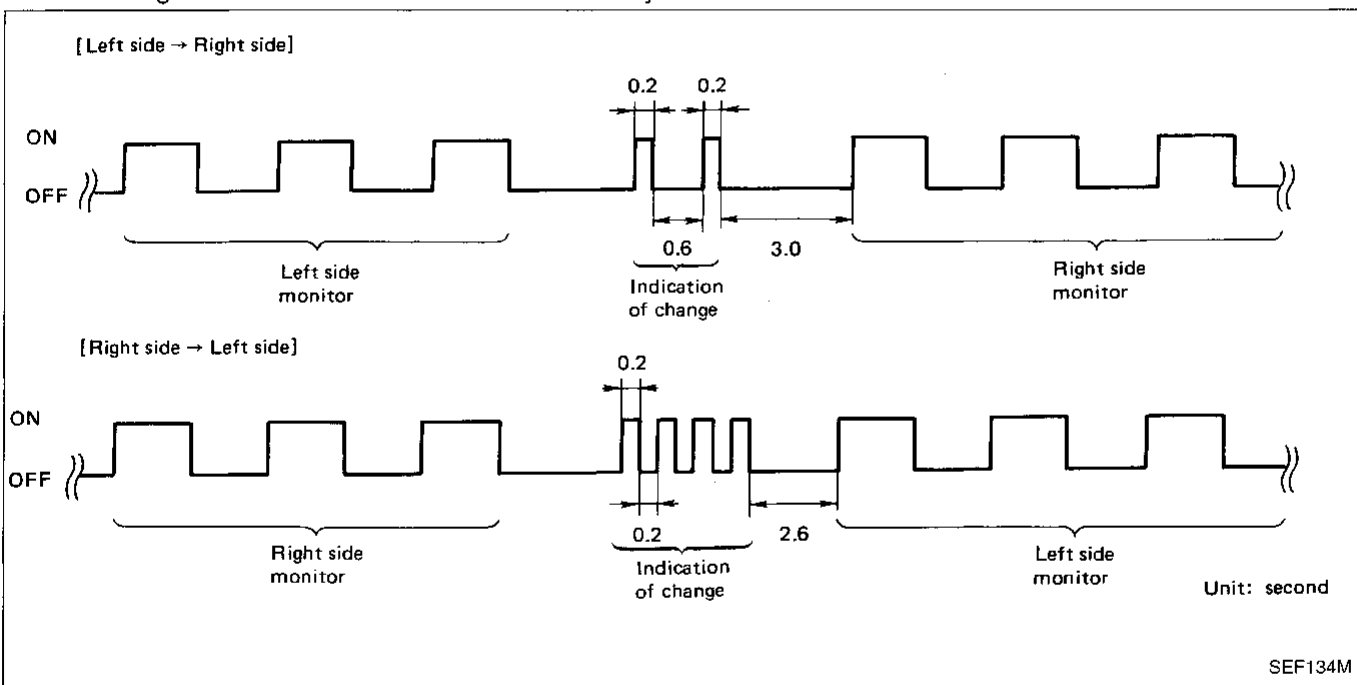

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

## OBD System Operation Chart

### RELATIONSHIP BETWEEN MIL, DTC, CONSULT AND DETECTABLE ITEMS

- When a malfunction is detected for the first time, the DTC and the freeze frame data are stored in the ECM memory.
- When the same malfunction is detected in two consecutive trips, the MIL will come on. For details, refer to “Two Trip Detection Logic” on EC-37.
- The MIL will go off after the vehicle is driven 3 times with no malfunction. The drive is counted only when the recorded driving pattern is met (as stored in the ECM). If another malfunction occurs while counting, the counter will reset. The MIL will remain on until the vehicle is driven (in the recorded driving pattern) 3 times with no malfunction.
- The DTC and the freeze frame data can be displayed until the vehicle is driven 40 times (except for Misfire and Fuel Injection System). For Misfire and Fuel Injection System, the DTC and freeze frame data can be displayed until the vehicle is driven 80 times. The “TIME” IN “SELF-DIAGNOSTIC RESULTS” mode of CONSULT will count in response to the number of times the vehicle is driven.

### SUMMARY CHART


Items	MIL (goes off)	DTC, Freeze Frame Data (no display)
Fuel Injection System	3 (pattern C)	80 (pattern B)
Misfire	3 (pattern C)	80 (pattern B)
Except the above	3 (pattern B)	40 (pattern A)

Details about patterns “A”, “B”, and “C” are on EC-46.

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

## OBD System Operation Chart (Cont'd)

### RELATIONSHIP BETWEEN MIL, DTC, CONSULT AND DRIVING PATTERNS FOR "MISFIRE" <EXHAUST QUALITY DETERIORATION>, "FUEL INJECTION SYSTEM"

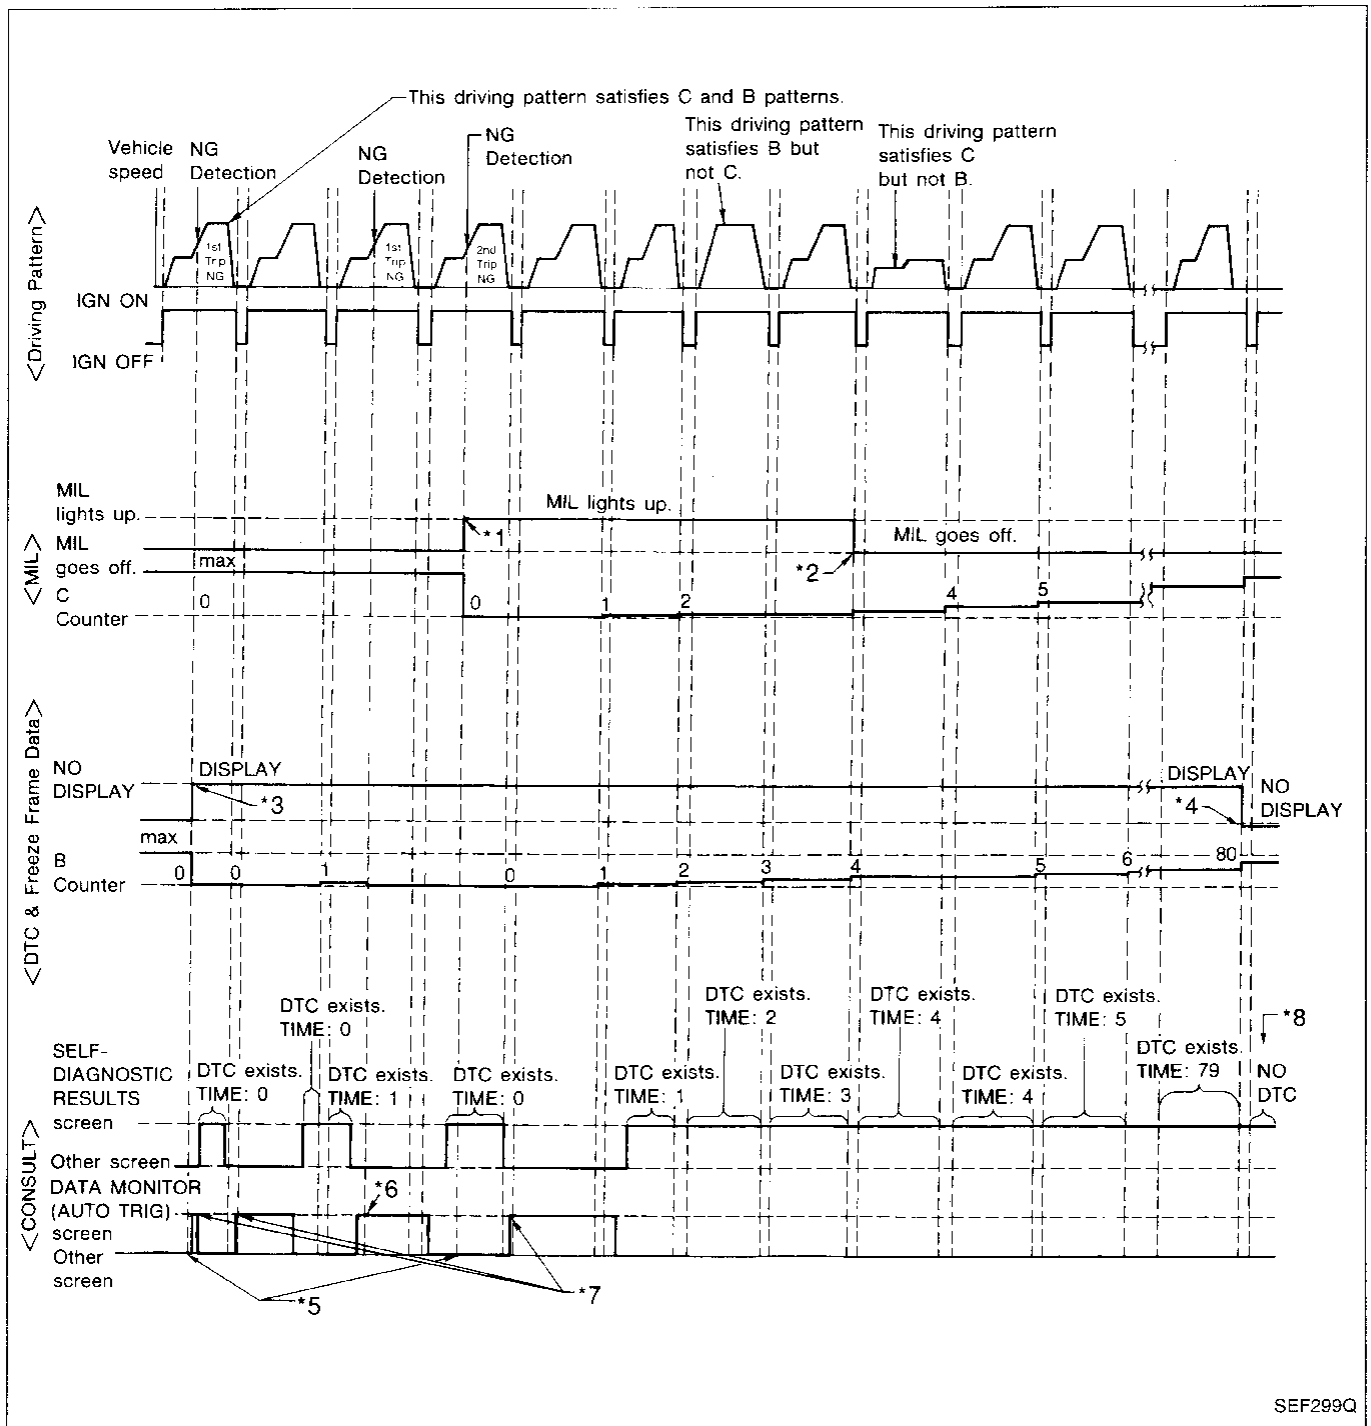

- \*1: When the same malfunction is detected in two consecutive trips, MIL will light up.
- \*2: MIL will go off after vehicle is driven 3 times (pattern C) without any malfunctions.
- \*3: When a malfunction is detected for the first time, the DTC and the freeze frame data will be stored in ECM.
- \*4: The DTC and the freeze frame data will not be displayed any longer after vehicle is driven 80 times (pattern B) without the same malfunction. (The DTC and the freeze frame data still remain in ECM.)
- \*5: Other screen except DATA MONITOR (AUTO TRIG) can not display the malfunction.

- \*6: DATA MONITOR (AUTO TRIG) can display the malfunction at the moment it is detected.
- \*7: The malfunction can not be displayed because the timing to set DATA MONITOR (AUTO TRIG) screen was missed against the NG detection.
- \*8: The DTC and the freeze frame data will not be displayed any longer after vehicle is driven 80 times (pattern B) without the same malfunction. (The DTC and the freeze frame data still remain in ECM.)


CI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
PD  
FA  
FA  
BR  
ST  
RS  
BT  
FA  
EL  
IDX

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

## OBD System Operation Chart (Cont'd)

### EXPLANATION FOR DRIVING PATTERNS FOR "MISFIRE <EXHAUST QUALITY DETERIORATION>", "FUEL INJECTION SYSTEM"

#### <Driving pattern A>

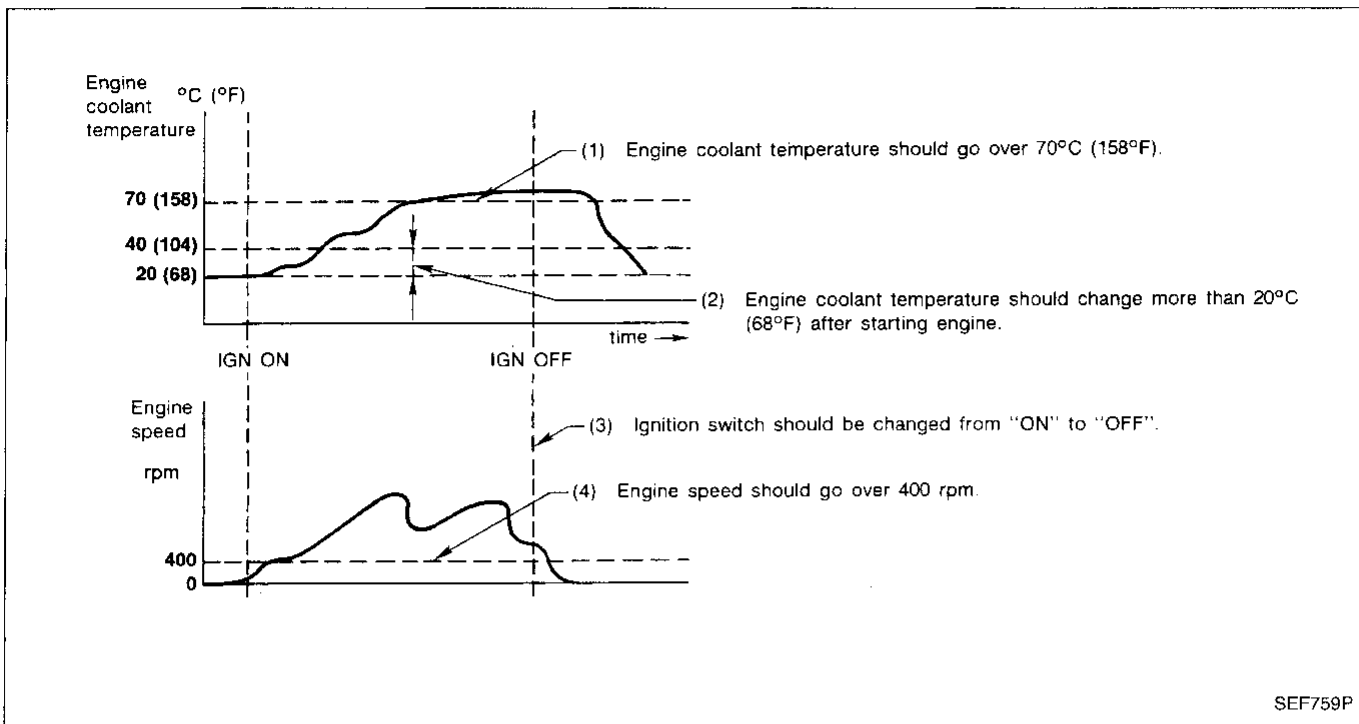

#### <Driving pattern B>

Driving pattern B means the vehicle operation as follows:

All components and systems should be monitored at least once by the OBD system.

- The B counter will reset when the malfunction is detected twice regardless of the driving pattern.
- The B counter will count the number of times driving pattern B is satisfied without the malfunction.
- The DTC will not be displayed after the B counter reaches 80.

#### <Driving pattern C>

Driving pattern C means the vehicle operation as follows:

(1) Driving pattern A should be satisfied.

(2) The following conditions should be satisfied at the same time:

Engine speed: (Engine speed in the freeze frame data)  $\pm 375$  rpm

Calculated load value: (Calculated load value in the freeze frame data)  $\times (1 \pm 0.1)$  [%]

Engine coolant temperature (T) condition:

- When the freeze frame data shows lower than 70°C (158°F), "T" should be lower than 70°C (158°F).
- When the freeze frame data shows higher than or equal to 70°C (158°F), "T" should be higher than or equal to 70°C (158°F).

Example:

If the stored freeze frame data is as follows:

Engine speed: 850 rpm, Calculated load value: 30%, Engine coolant temperature: 80°C (176°F)

To be satisfied with driving pattern C, the vehicle should run under the following conditions:


Engine speed: 475 - 1,225 rpm, Calculated load value: 27 - 33%, Engine coolant temperature: more than  $\geq 70^\circ\text{C}$  (158°F)

- The C counter will be cleared when the malfunction is detected regardless of (1), (2). (\*1 in "OBD SYSTEM OPERATION CHART")
- The C counter will be counted up when (1), (2) are satisfied without the same malfunction.
- The MIL will go off when the C counter reaches 3. (\*2 in "OBD SYSTEM OPERATION CHART")

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

## OBD System Operation Chart (Cont'd)

### RELATIONSHIP BETWEEN MIL, DTC, CONSULT AND DRIVING PATTERNS EXCEPT FOR "MISFIRE" <EXHAUST QUALITY DETERIORATION>, "FUEL INJECTION SYSTEM"

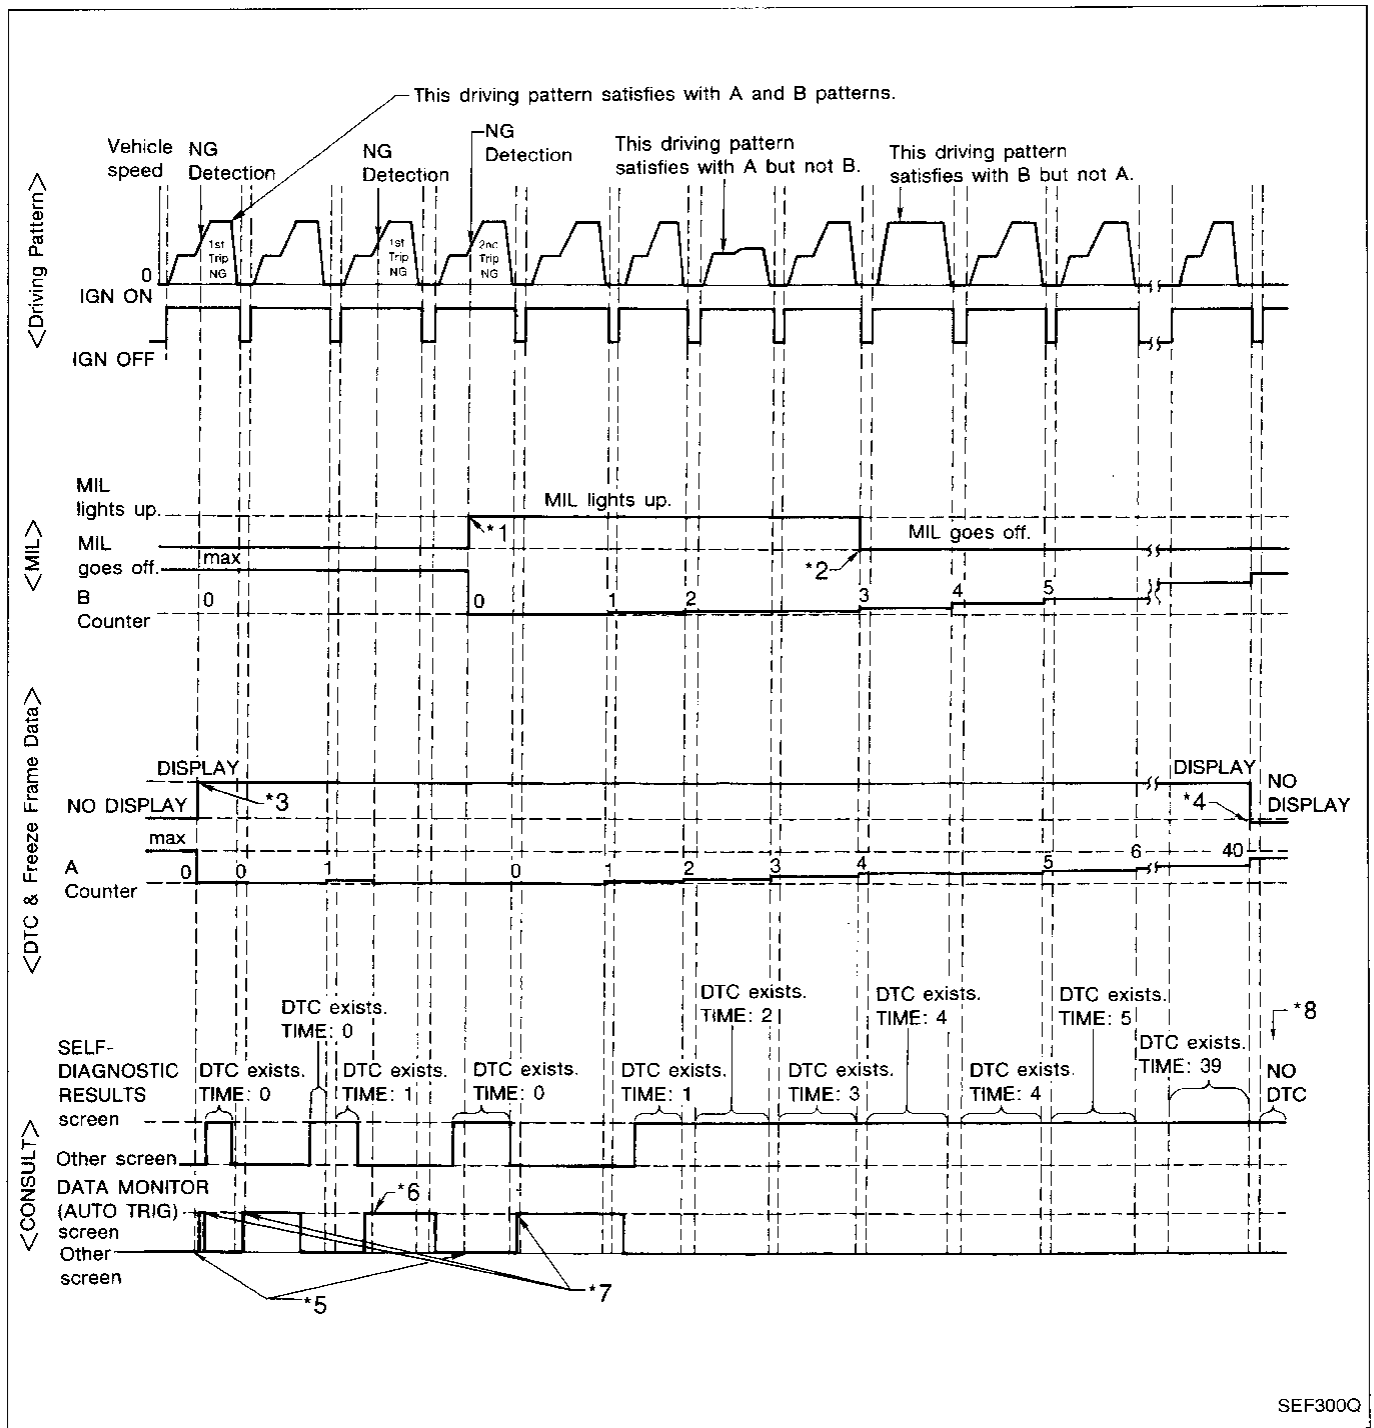

- \*1: When the same malfunction is detected in two consecutive trips, MIL will light up.
- \*2: MIL will go off after vehicle is driven 3 times (pattern B) without any malfunctions.
- \*3: When a malfunction is detected for the first time, the DTC and the freeze frame data will be stored in ECM.
- \*4: The DTC and the freeze frame data will not be displayed any longer after vehicle is driven 40 times (pattern A) without the same malfunction. (The DTC and the freeze frame data still remain in ECM.)
- \*5: Other screen except DATA MONITOR (AUTO TRIG) can not display the malfunction.


- \*6: DATA MONITOR (AUTO TRIG) can display the malfunction at the moment it is detected.
- \*7: The malfunction can not be displayed because the timing to set DATA MONITOR (AUTO TRIG) screen was missed against the NG detection.
- \*8: The DTC and the freeze frame data will not be displayed any longer after vehicle is driven 40 times (pattern A) without the same malfunction. (The DTC and the freeze frame data still remain in ECM.)

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

## OBD System Operation Chart (Cont'd)

### EXPLANATION FOR DRIVING PATTERNS EXCEPT FOR "MISFIRE <EXHAUST QUALITY DETERIORATION>", "FUEL INJECTION SYSTEM"

(Driving pattern A)

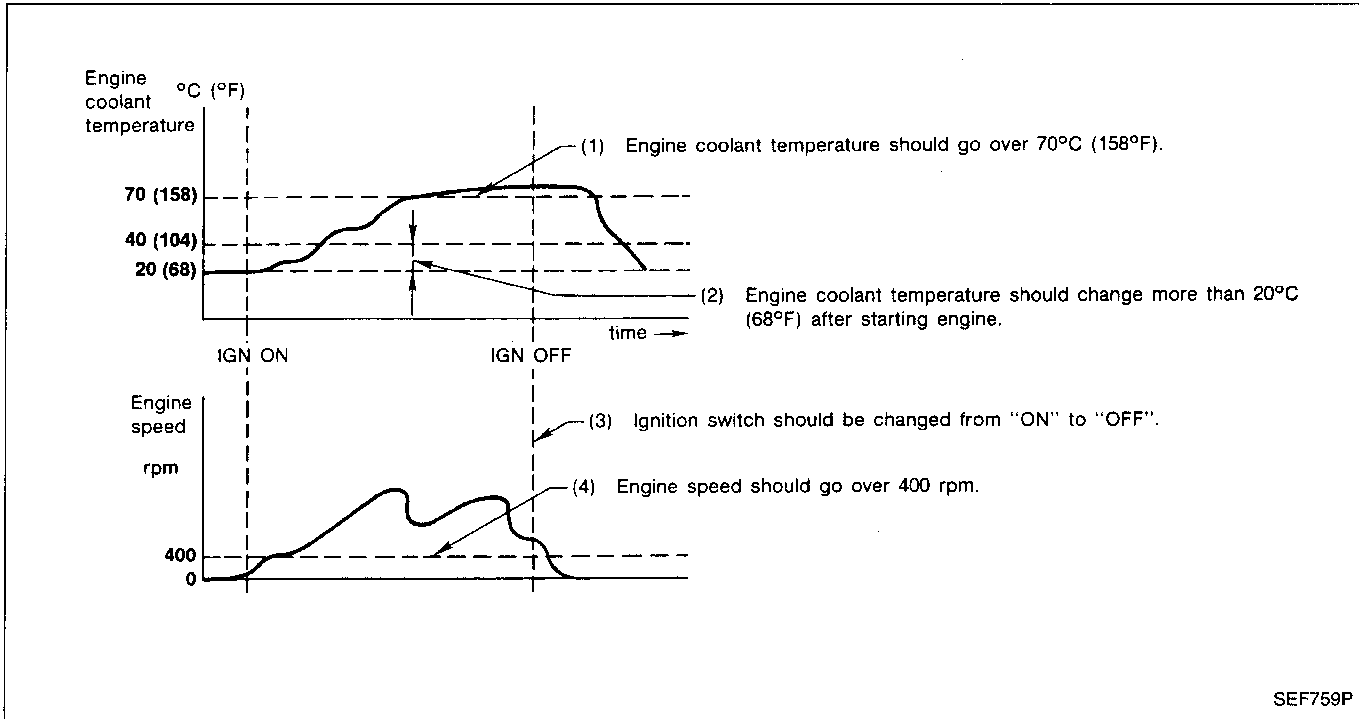

- The A counter will be cleared when the malfunction is detected regardless of (1) - (4).
- The A counter will be counted up when (1) - (4) are satisfied without the same malfunction.
- The DTC will not be displayed after the A counter reaches 40.

(Driving pattern B)


Driving pattern B means the vehicle operation as follows:

All components and systems should be monitored at least once by the OBD system.

- The B counter will be cleared when the malfunction is detected twice regardless of the driving pattern (\*1 in "OBD SYSTEM OPERATION CHART").
- The B counter will be counted up when driving pattern B is satisfied without any malfunctions.
- The MIL will go off when the B counter reaches 3 (\*2 in "OBD SYSTEM OPERATION CHART").




# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

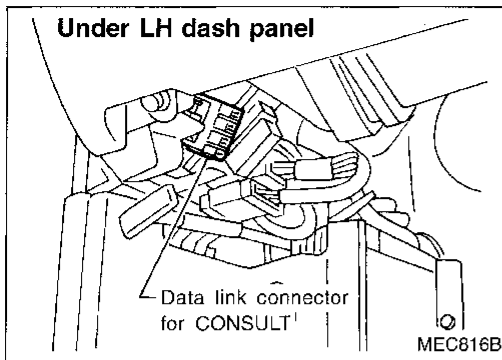


## CONSULT

### CONSULT INSPECTION PROCEDURE


1. Turn off ignition switch.
2. Connect "CONSULT" to data link connector for CONSULT. (Data link connector for CONSULT is located under LH dash panel.)

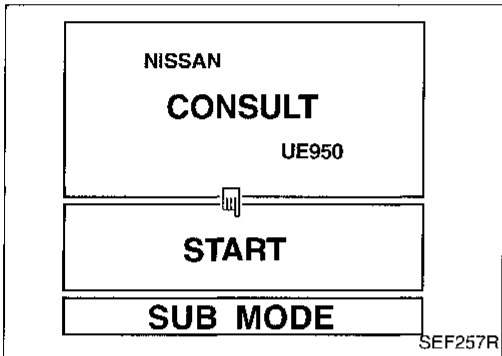

3. Turn on ignition switch.
4. Touch "START".

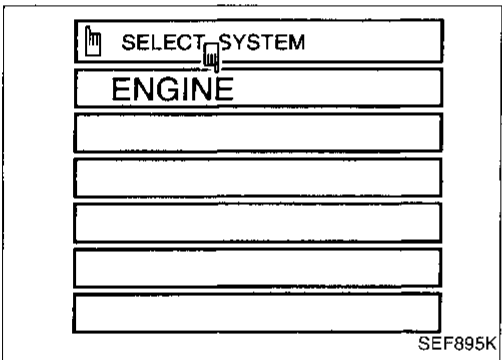


5. Touch "ENGINE".

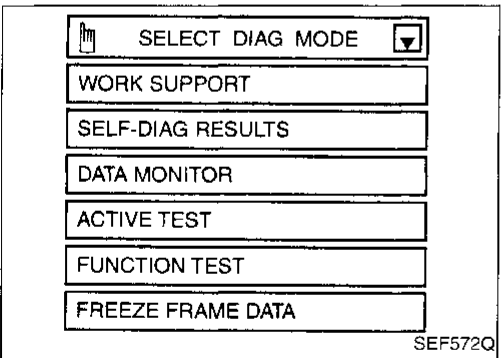

6. Perform each diagnostic test mode according to each service procedure.

**For further information, see the CONSULT Operation Manual.**

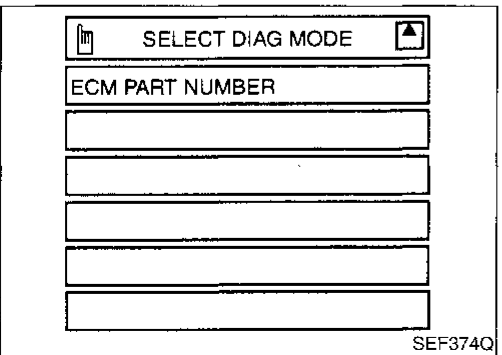

GI  
MA  
EM  
LC  
**EC**  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

## CONSULT (Cont'd)

### ECCS COMPONENT PARTS/CONTROL SYSTEMS APPLICATION

		Item	DIAGNOSTIC TEST MODE					
			WORK SUP-PORT	SELF-DIAG-NOSTIC RESULTS	DATA MONITOR	ACTIVE TEST	FUNCTION TEST	FREEZE FRAME DATA*1
<b>ECCS COMPONENT PARTS</b>	<b>INPUT</b>	Crankshaft position sensor (OBD)		X				
		Camshaft position sensor		X	X			X
		Mass air flow sensor		X	X			
		Engine coolant temperature sensor		X	X	X		X
		Front heated oxygen sensors		X	X		X	
		Rear heated oxygen sensors		X	X			
		Vehicle speed sensor		X	X		X	X
		Throttle position sensor	X	X	X		X	
		EGR temperature sensor		X	X			
		Intake air temperature sensor		X	X			
		Knock sensor		X				
		Fuel temperature sensor		X	X			
		Turbocharger boost sensor		X	X			
		Ignition switch (start signal)			X		X	
		Closed throttle position (throttle position sensor signal)			X		X	
		Air conditioner switch			X			
		Park/Neutral position switch		X	X		X	
		Power steering oil pressure switch			X		X	
	Canister control vacuum check switch		X	X				
	Battery voltage			X				
	<b>OUTPUT</b>	Injectors			X	X	X	
		Power transistor (Ignition timing)		X (Ignition signal)	X	X	X	
		IACV-AAC valve	X	X	X	X	X	
		IACV-FICD solenoid valve			X	X	X	
		Air conditioner relay			X			
		Fuel pump relay	X		X	X	X	
		Cooling fan		X	X	X	X	
		EGRC-solenoid valve		X	X	X	X	
		Front heated oxygen sensor heaters		X	X			
		EVAP canister purge control solenoid valve		X	X	X		
		Fuel pressure regulator control solenoid valve			X	X	X	
		Wastegate valve control solenoid valve*2		X	X			
		Rear heated oxygen sensor heaters		X	X			
FPCM			X	X	X			
Calculated load value				X			X	

X: Applicable

\*1: The items appear on CONSULT screen in FREEZE FRAME DATA mode only if a diagnostic trouble code (DTC) is detected. For details, refer to EC-59.

\*2: Turbocharger models

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

## CONSULT (Cont'd)

### FUNCTION

Diagnostic test mode	Function
Work support	This mode enables a technician to adjust some devices faster and more accurately by following the indications on the CONSULT unit.
Self-diagnostic results	Self-diagnostic results can be read and erased quickly.
Data monitor	Input/Output data in the ECM can be read.
Active test	Diagnostic Test Mode in which CONSULT drives some actuators apart from the ECMs and also shifts some parameters in a specified range.
Function test	Conducted by CONSULT instead of a technician to determine whether each system is "OK" or "NG".
Freeze frame data	ECM stores the driving condition at the moment a malfunction is detected, and the stored data can be read. [Regarding the details, refer to "Freeze Frame Data" (EC-39).]
ECM part numbers	ECM part numbers can be read.

### WORK SUPPORT MODE

WORK ITEM	CONDITION	USAGE
THRTL POS SEN ADJ	CHECK THE THROTTLE POSITION SENSOR SIGNAL. ADJUST IT TO THE SPECIFIED VALUE BY ROTATING THE SENSOR BODY UNDER THE FOLLOWING CONDITIONS. <ul style="list-style-type: none"> <li>• IGN SW "ON"</li> <li>• ENG NOT RUNNING</li> <li>• ACC PEDAL NOT PRESSED</li> </ul>	When adjusting throttle position sensor initial position
IACV-AAC/V ADJ	SET ENGINE SPEED AT THE SPECIFIED VALUE UNDER THE FOLLOWING CONDITIONS. <ul style="list-style-type: none"> <li>• ENGINE WARMED UP</li> <li>• NO-LOAD</li> </ul>	When adjusting idle speed
FUEL PRESSURE RELEASE	<ul style="list-style-type: none"> <li>• FUEL PUMP WILL STOP BY TOUCHING "START" DURING IDLING.</li> <li>• CRANK A FEW TIMES AFTER ENGINE STALLS.</li> </ul>	When releasing fuel pressure from fuel line

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

## CONSULT (Cont'd)

### SELF-DIAGNOSTIC MODE

Regarding items detected in "SELF-DIAG RESULTS" mode, refer to "Diagnostic Trouble Code (DTC) chart". (See EC-70.)

### DATA MONITOR MODE

Monitored item [Unit]	ECM input signals	Main signals	Description	Remarks
CMPS-RPM (POS) [rpm]	○	○	<ul style="list-style-type: none"> <li>Indicates the engine speed computed from the POS signal (1° signal) of the camshaft position sensor.</li> </ul>	
CMPS-RPM (REF) [rpm]	○		<ul style="list-style-type: none"> <li>Indicates the engine speed computed from the REF signal (120° signal) of the camshaft position sensor.</li> </ul>	<ul style="list-style-type: none"> <li>The accuracy of detection becomes poor if engine speed drops below the idle rpm.</li> <li>If the signal is interrupted while the engine is running, an abnormal value may be indicated.</li> </ul>
MAS AIR/FL SE [V]	○	○	<ul style="list-style-type: none"> <li>The signal voltage of the mass air flow sensor is displayed.</li> </ul>	<ul style="list-style-type: none"> <li>When the engine is stopped, a certain value is indicated.</li> </ul>
COOLAN TEMP/S [°C] or [°F]	○	○	<ul style="list-style-type: none"> <li>The engine coolant temperature (determined by the signal voltage of the engine coolant temperature sensor) is displayed.</li> </ul>	<ul style="list-style-type: none"> <li>When the engine coolant temperature sensor is open or short-circuited, ECM enters fail-safe mode. The engine coolant temperature determined by the ECM is displayed.</li> </ul>
FR O2 SEN-B2 [V]	○	○	<ul style="list-style-type: none"> <li>The signal voltage of the front heated oxygen sensor is displayed.</li> </ul>	
FR O2 SEN-B1 [V]	○			
RR O2 SEN-B1 [V]	○	○	<ul style="list-style-type: none"> <li>The signal voltage of the rear heated oxygen sensor is displayed.</li> </ul>	
RR O2 SEN-B2 [V]	○			
FR O2 MNTR-B2 [RICH/LEAN]	○	○	<ul style="list-style-type: none"> <li>Display of front heated oxygen sensor signal during air-fuel ratio feedback control: RICH ... means the mixture became "rich", and control is being affected toward a leaner mixture. LEAN ... means the mixture became "lean", and control is being affected toward a rich mixture.</li> </ul>	<ul style="list-style-type: none"> <li>After turning ON the ignition switch, "RICH" is displayed until air-fuel mixture ratio feedback control begins.</li> <li>When the air-fuel ratio feedback is clamped, the value just before the clamping is displayed continuously.</li> </ul>
FR O2 MNTR-B1 [RICH/LEAN]	○	○		
RR O2 MNTR-B1 [RICH/LEAN]	○		<ul style="list-style-type: none"> <li>Display of rear heated oxygen sensor signal: RICH ... means the amount of oxygen after three way catalyst is relatively large. LEAN ... means the amount of oxygen after three way catalyst is relatively small.</li> </ul>	<ul style="list-style-type: none"> <li>When the engine is stopped, a certain value is indicated.</li> </ul>
RR O2 MNTR-B2 [RICH/LEAN]	○	○		
VHCL SPEED SE [km/h] or [mph]	○	○	<ul style="list-style-type: none"> <li>The vehicle speed computed from the vehicle speed sensor signal is displayed.</li> </ul>	
BATTERY VOLT [V]	○	○	<ul style="list-style-type: none"> <li>The power supply voltage of ECM is displayed.</li> </ul>	
THRTL POS SEN [V]	○	○	<ul style="list-style-type: none"> <li>The throttle position sensor signal voltage is displayed.</li> </ul>	

**NOTE:**

Any monitored item that does not match the vehicle being diagnosed is deleted from the display automatically. Regarding Z32 model, "B1" indicates right bank and "B2" indicates left bank.

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

## CONSULT (Cont'd)

Monitored item [Unit]	ECM input signals	Main signals	Description	Remarks
FUEL TEMP SEN [°C] or [°F]			<ul style="list-style-type: none"> <li>The fuel temperature determined by the signal voltage of the fuel temperature sensor is indicated.</li> </ul>	
EGR TEMP SEN [V]	○		<ul style="list-style-type: none"> <li>The signal voltage of the EGR temperature sensor is displayed.</li> </ul>	
INT/A TEMP SE [°C] or [°F]	○		<ul style="list-style-type: none"> <li>The intake air temperature determined by the signal voltage of the intake air temperature sensor is indicated.</li> </ul>	
START SIGNAL [ON/OFF]	○	○	<ul style="list-style-type: none"> <li>Indicates [ON/OFF] condition from the starter signal.</li> </ul>	<ul style="list-style-type: none"> <li>After starting the engine, [OFF] is displayed regardless of the starter signal.</li> </ul>
CLSD THL/P SW [ON/OFF]	○	○	<ul style="list-style-type: none"> <li>Indicates [ON/OFF] condition from the throttle position sensor signal.</li> </ul>	
AIR COND SIG [ON/OFF]	○	○	<ul style="list-style-type: none"> <li>Indicates [ON/OFF] condition of the air conditioner switch as determined by the air conditioner signal.</li> </ul>	
P/N POSI SW [ON/OFF]	○	○	<ul style="list-style-type: none"> <li>Indicates [ON/OFF] condition from the park/neutral position switch signal.</li> </ul>	
PW/ST SIGNAL [ON/OFF]	○	○	<ul style="list-style-type: none"> <li>[ON/OFF] condition of the power steering oil pressure switch determined by the power steering oil pressure signal is indicated.</li> </ul>	
TURBO BST SEN*2 [V]			<ul style="list-style-type: none"> <li>The signal voltage of the turbocharger boost sensor is displayed.</li> </ul>	
IGNITION SW [ON/OFF]	○		<ul style="list-style-type: none"> <li>Indicates [ON/OFF] condition from ignition switch.</li> </ul>	
INJ PULSE-B2 [msec]		○	<ul style="list-style-type: none"> <li>Indicates the actual fuel injection pulse width compensated by ECM according to the input signals.</li> </ul>	<ul style="list-style-type: none"> <li>When the engine is stopped, a certain computed value is indicated.</li> </ul>
INJ PULSE-B1 [msec]				
B/FUEL SCHDL [msec]		○	<ul style="list-style-type: none"> <li>"Base fuel schedule" indicates the fuel injection pulse width programmed into ECM, prior to any learned on board correction.</li> </ul>	
IGN TIMING [BTDC]		○	<ul style="list-style-type: none"> <li>Indicates the ignition timing computed by ECM according to the input signals.</li> </ul>	<ul style="list-style-type: none"> <li>When the engine is stopped, a certain value is indicated.</li> </ul>
IACV-AAC/V [%]		○	<ul style="list-style-type: none"> <li>Indicates the IACV-AAC valve control value computed by ECM according to the input signals.</li> </ul>	
A/F ALPHA-B2 [%]			<ul style="list-style-type: none"> <li>The mean value of the air-fuel ratio feedback correction factor per cycle is indicated.</li> </ul>	<ul style="list-style-type: none"> <li>When the engine is stopped, a certain value is indicated.</li> </ul>
A/F ALPHA-B1 [%]				<ul style="list-style-type: none"> <li>This data also includes the data for the air-fuel ratio learning control.</li> </ul>
AIR COND RLY [ON/OFF]		○	<ul style="list-style-type: none"> <li>The air conditioner relay control condition (determined by ECM according to the input signals) is indicated.</li> </ul>	
FUEL PUMP RLY [ON/OFF]		○	<ul style="list-style-type: none"> <li>Indicates the fuel pump relay control condition determined by ECM according to the input signals.</li> </ul>	
COOLING FAN [ON/OFF]*1 [HI/LOW/OFF]*2		○	<ul style="list-style-type: none"> <li>The control condition of the cooling fan (determined by ECM according to the input signals) is indicated.</li> </ul>	

\*1: Non-turbocharger models

\*2: Turbocharger models

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

## CONSULT (Cont'd)

Monitored item [Unit]	ECM input signals	Main signals	Description	Remarks
P/REG CONT/V [ON/OFF]			<ul style="list-style-type: none"> <li>Indicates [ON/OFF] condition of the fuel pressure regulator control solenoid valve determined by ECM according to the input signals. ON ... High fuel pressure OFF ... Low fuel pressure</li> </ul>	
W/G SOL/V-B1*2 [ON/OFF]			<ul style="list-style-type: none"> <li>Indicates [ON/OFF] condition of the wastegate valve control solenoid valve determined by ECM according to the input signals. ON ... High turbocharger pressure OFF ... Low turbocharger pressure</li> </ul>	
W/G SOL/V-B2*2 [ON/OFF]				
IACV-FICD S/V [ON/OFF]			<ul style="list-style-type: none"> <li>Indicates [ON/OFF] condition of IACV-FICD solenoid valve determined by ECM according to the input signal.</li> </ul>	
EGRC SOL/V [ON/OFF]			<ul style="list-style-type: none"> <li>The control condition of the EGRC-solenoid valve (determined by ECM according to the input signals) is indicated.</li> <li>ON ... EGR operation is cut-off OFF ... EGR is operational</li> </ul>	
PURG CONT S/V [ON/OFF]			<ul style="list-style-type: none"> <li>The control condition of the EVAP canister purge control solenoid valve (computed by ECM according to the input signals) is indicated.</li> <li>ON ... EVAP canister purge is operational OFF ... EVAP canister purge operation is cut-off</li> </ul>	
CANI CON VC SW [ON/OFF]			<ul style="list-style-type: none"> <li>Indicates [ON/OFF] condition of the canister control vacuum check switch. ON ... EVAP canister purge is cut-off OFF ... EVAP canister purge is operational</li> </ul>	
FR O2 HTR-B1 [ON/OFF]			<ul style="list-style-type: none"> <li>Indicates [ON/OFF] condition of front heated oxygen sensor heater determined by ECM according to the input signals.</li> </ul>	
FR O2 HTR-B2 [ON/OFF]				
RR O2 HTR-B1 [ON/OFF]			<ul style="list-style-type: none"> <li>Indicates [ON/OFF] condition of rear heated oxygen sensor heater determined by ECM according to the input signals.</li> </ul>	
RR O2 HTR-B2 [ON/OFF]				
CAL/LD VALUE [%]			<ul style="list-style-type: none"> <li>"Calculated load value" indicates the value of the current airflow divided by peak airflow.</li> </ul>	
ABSOL TH/P/S [%]			<ul style="list-style-type: none"> <li>"Absolute throttle position sensor" indicates the throttle opening computed by ECM according to the signal voltage of the throttle position sensor.</li> </ul>	
MASS AIRFLOW [g·m/s]			<ul style="list-style-type: none"> <li>Indicates the mass airflow computed by ECM according to the signal voltage of the mass airflow sensor.</li> </ul>	
FPCM F/P VOLT [V]			<ul style="list-style-type: none"> <li>The voltage between fuel pump and fuel pump control module (FPCM) is displayed.</li> </ul>	

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

## CONSULT (Cont'd)

Monitored item [Unit]	ECM input signals	Main signals	Description	Remarks
FPCM [HI/LOW]*1 [HI/MID/LOW]*2			<ul style="list-style-type: none"> <li>The control condition of the fuel pump control module (FPCM) (determined by ECM according to the input signals) is indicated. HI ... High amount of fuel flow MID ... Middle amount of fuel flow LOW ... Low amount of fuel flow</li> </ul>	
VOLTAGE [V]			<ul style="list-style-type: none"> <li>Voltage measured by the voltage probe.</li> </ul>	
PULSE [msec] or [Hz] or [%]			<ul style="list-style-type: none"> <li>Pulse width, frequency or duty cycle measured by the pulse probe.</li> </ul>	<ul style="list-style-type: none"> <li>Only “#” is displayed if item is unable to be measured.</li> <li>Figures with “#”s are temporary ones. They are the same figures as an actual piece of data which was just previously measured.</li> </ul>

\*1: Non-turbocharger models

\*2: Turbocharger models

GI  
 MA  
 EM  
 EC  
 EC  
 FE  
 CL  
 MT  
 AT  
 PD  
 FA  
 RA  
 BR  
 ST  
 RS  
 BT  
 HA  
 EL  
 IDX

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

## CONSULT (Cont'd)

### ACTIVE TEST MODE

TEST ITEM	CONDITION	JUDGEMENT	CHECK ITEM (REMEDY)
FUEL INJECTION	<ul style="list-style-type: none"> <li>Engine: Return to the original trouble condition</li> <li>Change the amount of fuel injection using CONSULT.</li> </ul>	If trouble symptom disappears, see CHECK ITEM.	<ul style="list-style-type: none"> <li>Harness and connector</li> <li>Fuel injectors</li> <li>Front heated oxygen sensor</li> </ul>
IACV-AAC/V OPENING	<ul style="list-style-type: none"> <li>Engine: After warming up, idle the engine.</li> <li>Change the IACV-AAC valve opening percent using CONSULT.</li> </ul>	Engine speed changes according to the opening percent.	<ul style="list-style-type: none"> <li>Harness and connector</li> <li>IACV-AAC valve</li> </ul>
ENG COOLANT TEMP	<ul style="list-style-type: none"> <li>Engine: Return to the original trouble condition</li> <li>Change the engine coolant temperature using CONSULT.</li> </ul>	If trouble symptom disappears, see CHECK ITEM.	<ul style="list-style-type: none"> <li>Harness and connector</li> <li>Engine coolant temperature sensor</li> <li>Fuel injectors</li> </ul>
IGNITION TIMING	<ul style="list-style-type: none"> <li>Engine: Return to the original trouble condition</li> <li>Timing light: Set</li> <li>Retard the ignition timing using CONSULT.</li> </ul>	If trouble symptom disappears, see CHECK ITEM.	<ul style="list-style-type: none"> <li>Adjust initial ignition timing</li> </ul>
POWER BALANCE	<ul style="list-style-type: none"> <li>Engine: After warming up, idle the engine.</li> <li>A/C switch "OFF"</li> <li>Shift lever "N"</li> <li>Cut off each injector signal one at a time using CONSULT.</li> </ul>	Engine runs rough or dies.	<ul style="list-style-type: none"> <li>Harness and connector</li> <li>Compression</li> <li>Injectors</li> <li>Power transistor</li> <li>Spark plugs</li> <li>Ignition coils</li> </ul>
COOLING FAN	<ul style="list-style-type: none"> <li>Ignition switch: ON</li> <li>Turn the cooling fan "ON" and "OFF" using CONSULT.</li> </ul>	Cooling fan moves and stops.	<ul style="list-style-type: none"> <li>Harness and connector</li> <li>Cooling fan motor</li> </ul>
IACV-FICD SOL/V	<ul style="list-style-type: none"> <li>Engine: After warming up, idle the engine.</li> <li>A/C switch "OFF"</li> <li>Shift lever "N"</li> <li>Turn the IACV-FICD solenoid valve "ON" with the CONSULT.</li> </ul>	Engine speed will increase momentarily by approx. 200 rpm.	<ul style="list-style-type: none"> <li>Harness and connector</li> <li>IACV-FICD solenoid valve</li> </ul>
FUEL PUMP RELAY	<ul style="list-style-type: none"> <li>Ignition switch: ON (Engine stopped)</li> <li>Turn the fuel pump relay "ON" and "OFF" using CONSULT and listen to operating sound.</li> </ul>	Fuel pump relay makes the operating sound.	<ul style="list-style-type: none"> <li>Harness and connector</li> <li>Fuel pump relay</li> </ul>
EGRC SOLENOID VALVE	<ul style="list-style-type: none"> <li>Ignition switch: ON</li> <li>Turn solenoid valve "ON" and "OFF" with the CONSULT and listen to operating sound.</li> </ul>	Solenoid valve makes an operating sound.	<ul style="list-style-type: none"> <li>Harness and connector</li> <li>Solenoid valve</li> </ul>
P/REG CONT SOL/V	<ul style="list-style-type: none"> <li>Ignition switch: ON</li> <li>Turn solenoid valve "ON" and "OFF" with the CONSULT and listen to operating sound.</li> </ul>	Solenoid valve makes an operating sound.	<ul style="list-style-type: none"> <li>Harness and connector</li> <li>Solenoid valve</li> </ul>
SELF-LEARNING CONT	<ul style="list-style-type: none"> <li>In this test, the coefficient of self-learning control mixture ratio returns to the original coefficient by touching "CLEAR" on the screen.</li> </ul>		
PURG CONT S/V	<ul style="list-style-type: none"> <li>Start engine.</li> <li>Turn the EVAP canister purge control solenoid valve "ON" and "OFF" using CONSULT and listen for operating sound.</li> </ul>	EVAP canister purge control solenoid valve makes an operating sound. Check vacuum signal for EVAP canister purge control valve. S/V ON ... Vacuum does not exist. S/V OFF ... Vacuum exists.	<ul style="list-style-type: none"> <li>Harness and connector</li> <li>EVAP canister purge control solenoid valve</li> <li>Vacuum hose</li> </ul>
FPCM	<ul style="list-style-type: none"> <li>Start engine.</li> <li>Turn the FPCM between "LOW", "MID" and "HI" using CONSULT and check that "FPCM F/P VOLT" of CONSULT changes.</li> </ul>	"FPCM F/P VOLT" of CONSULT changes as follows; HI ... Approx. 0V MID ... Approx. 6.5V*2 LOW ... Approx. 5.5V*1, 7.5V*2	<ul style="list-style-type: none"> <li>Harness and connector</li> <li>FPCM</li> </ul>

\*1: Non-turbocharger models

\*2: Turbocharger models



# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

## CONSULT (Cont'd)

### FUNCTION TEST MODE

FUNCTION TEST ITEM	CONDITION	JUDGEMENT		CHECK ITEM (REMEDY)	
SELF-DIAG RESULTS	<ul style="list-style-type: none"> <li>Ignition switch: ON (Engine stopped)</li> <li>Displays the results of on-board diagnostic system.</li> </ul>	—		Objective system	GI
CLOSED THROTTLE POSI	<ul style="list-style-type: none"> <li>Ignition switch: ON (Engine stopped)</li> <li>Throttle position sensor circuit is tested when throttle is opened and closed fully. ("IDLE POSITION" is the test item name for the vehicles in which idle is selected by throttle position sensor.)</li> </ul>	Throttle valve: opened	OFF	<ul style="list-style-type: none"> <li>Harness and connector</li> <li>Throttle position sensor (Closed throttle position)</li> <li>Throttle position sensor (Closed throttle position) adjustment</li> <li>Throttle linkage</li> <li>Verify operation in DATA MONITOR mode.</li> </ul>	MA
		Throttle valve: closed	ON		EM
THROTTLE POSI SEN CKT	<ul style="list-style-type: none"> <li>Ignition switch: ON (Engine stopped)</li> <li>Throttle position sensor circuit is tested when throttle is opened and closed fully.</li> </ul>	Range (Throttle valve fully opened — Throttle valve fully closed)	More than 3.0V	<ul style="list-style-type: none"> <li>Harness and connector</li> <li>Throttle position sensor</li> <li>Throttle position sensor adjustment</li> <li>Throttle linkage</li> <li>Verify operation in DATA MONITOR mode.</li> </ul>	LC
PARK/NEUT POSI SW CKT	<ul style="list-style-type: none"> <li>Ignition switch: ON (Engine stopped)</li> <li>Inhibitor/Neutral position switch circuit is tested when shift lever is manipulated.</li> </ul>	Out of N/P positions	OFF	<ul style="list-style-type: none"> <li>Harness and connector</li> <li>Neutral position switch or Inhibitor switch</li> <li>Linkage or Inhibitor switch adjustment</li> </ul>	EC
		In N/P positions	ON		FE
FUEL PUMP CIRCUIT	<ul style="list-style-type: none"> <li>Ignition switch: ON (Engine stopped)</li> <li>Fuel pump circuit is tested by checking the pulsation in fuel pressure when fuel tube is pinched.</li> </ul>	There is pressure pulsation on the fuel feed hose.		<ul style="list-style-type: none"> <li>Harness and connector</li> <li>Fuel pump</li> <li>Fuel pump relay</li> <li>Fuel filter clogging</li> <li>Fuel level</li> <li>FPCM</li> </ul>	CL
EGRC SOL/V CIRCUIT	<ul style="list-style-type: none"> <li>Ignition switch: ON (Engine stopped)</li> <li>EGRC-solenoid valve circuit is tested by checking solenoid valve operating noise.</li> </ul>	The solenoid valve makes an operating sound every 3 seconds.		<ul style="list-style-type: none"> <li>Harness and connector</li> <li>EGRC-solenoid valve</li> </ul>	MT
P/REG CONT S/V CKT	<ul style="list-style-type: none"> <li>Ignition switch: ON (Engine stopped)</li> <li>Fuel pressure regulator control solenoid valve circuit is tested by checking solenoid valve operating noise.</li> </ul>	The solenoid valve makes an operating sound every 3 seconds.		<ul style="list-style-type: none"> <li>Harness and connector</li> <li>Fuel pressure regulator control solenoid valve</li> </ul>	AT
COOLING FAN CIRCUIT	<ul style="list-style-type: none"> <li>Ignition switch: ON (Engine stopped)</li> <li>Cooling fan circuit is tested when cooling fan is rotated.</li> </ul>	The cooling fan rotates and stops every 3 seconds.		<ul style="list-style-type: none"> <li>Harness and connector</li> <li>Cooling fan motor</li> <li>Cooling fan relay</li> </ul>	PD
START SIGNAL CIRCUIT	<ul style="list-style-type: none"> <li>Ignition switch: ON → START</li> <li>Start signal circuit is tested when engine is started by operating the starter. Battery voltage and engine coolant temperature before cranking, and average battery voltage, mass air flow sensor output voltage and cranking speed during cranking are displayed.</li> </ul>	Start signal: OFF → ON		<ul style="list-style-type: none"> <li>Harness and connector</li> <li>Ignition switch</li> </ul>	FA

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

## CONSULT (Cont'd)

FUNCTION TEST ITEM	CONDITION	JUDGEMENT		CHECK ITEM (REMEDY)
PW/ST SIGNAL CIRCUIT	<ul style="list-style-type: none"> <li>Ignition switch: ON (Engine running)</li> <li>Power steering circuit is tested when steering wheel is rotated fully and then set to a straight line running position.</li> </ul>	Locked position	ON	<ul style="list-style-type: none"> <li>Harness and connector</li> <li>Power steering oil pressure switch</li> <li>Power steering oil pump</li> </ul>
		Neutral position	OFF	
VEHICLE SPEED SEN CKT	<ul style="list-style-type: none"> <li>Vehicle speed sensor circuit is tested when vehicle is running at a speed of 10 km/h (6 MPH) or higher.</li> </ul>	Vehicle speed sensor input signal is greater than 4 km/h (2 MPH)		<ul style="list-style-type: none"> <li>Harness and connector</li> <li>Vehicle speed sensor</li> <li>Speedometer</li> </ul>
IGN TIMING ADJ	<ul style="list-style-type: none"> <li>After warming up, idle the engine.</li> <li>Ignition timing is checked by reading ignition timing with a timing light and checking whether it agrees with specifications.</li> </ul>	The timing light indicates the same value on the screen.		<ul style="list-style-type: none"> <li>Adjust ignition timing (by moving camshaft position sensor or distributor)</li> <li>Camshaft position sensor drive mechanism</li> </ul>
MIXTURE RATIO TEST	<ul style="list-style-type: none"> <li>Air-fuel ratio feedback circuit (injection system, ignition system, vacuum system, etc.) is tested by examining the front heated oxygen sensor output at 2,000 rpm under non-loaded state.</li> </ul>	Front heated oxygen sensor COUNT: More than 5 times during 10 seconds		<ul style="list-style-type: none"> <li>INJECTION SYS (Injector, fuel pressure regulator, harness or connector)</li> <li>IGNITION SYS (Spark plug, power transistor, ignition coil, harness or connector)</li> <li>VACUUM SYS (Intake air leaks)</li> <li>Front heated oxygen sensor circuit</li> <li>Front heated oxygen sensor operation</li> <li>Fuel pressure high or low</li> <li>Mass air flow sensor</li> </ul>
POWER BALANCE	<ul style="list-style-type: none"> <li>After warming up, idle the engine.</li> <li>Injector operation of each cylinder is stopped one after another, and resultant change in engine rotation is examined to evaluate combustion of each cylinder. (This is only displayed for models where a sequential multiport fuel injection system is used.)</li> </ul>	Difference in engine speed is greater than 25 rpm before and after cutting off the injector of each cylinder.		<ul style="list-style-type: none"> <li>Injector circuit (Injector, harness or connector)</li> <li>Ignition circuit (Spark plug, power transistor, ignition coil, harness or connector)</li> <li>Compression</li> <li>Valve timing</li> </ul>
IACV-AAC/V SYSTEM	<ul style="list-style-type: none"> <li>After warming up, idle the engine.</li> <li>IACV-AAC valve system is tested by detecting change in engine speed when IACV-AAC valve opening is changed to 0%, 20% and 80%.</li> </ul>	Difference in engine speed is greater than 150 rpm between when valve opening is at 80% and 20%.		<ul style="list-style-type: none"> <li>Harness and connector</li> <li>IACV-AAC valve</li> <li>Air passage restriction between air inlet and IACV-AAC valve</li> <li>IAS (Idle adjusting screw) adjustment</li> </ul>
IACV-FICD S/V SYSTEM	<ul style="list-style-type: none"> <li>After warming up, idle the engine.</li> <li>A/C switch: OFF</li> <li>Light switch: OFF</li> <li>FICD system is tested by detecting change in engine speed when IACV-FICD solenoid valve is ON and OFF.</li> </ul>	Difference in engine speed is greater than 50 rpm between IACV-FICD solenoid valve "ON" and "OFF".		<ul style="list-style-type: none"> <li>Harness and connector</li> <li>IACV-FICD solenoid valve</li> <li>Air passage</li> </ul>

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

## CONSULT (Cont'd)

### FREEZE FRAME DATA

Freeze frame data item	Description	
DIAG TROUBLE CODE [PXXXX]	<ul style="list-style-type: none"> <li>ECCS component part/control system has a trouble code, it is displayed as "PXXXX". [Refer to "Alphabetical &amp; P No. Index for DTC (EC-338).]</li> </ul>	GI
FUEL SYS-B1*1	<ul style="list-style-type: none"> <li>"Fuel injection system status" at the moment a malfunction is detected is displayed.</li> <li>One mode in the following is displayed.                             <ul style="list-style-type: none"> <li>"MODE 2": Open loop due to detected system malfunction</li> <li>"MODE 3": Open loop due to driving conditions (power enrichment, deceleration enrichment)</li> <li>"MODE 4": Closed loop - using heated oxygen sensor(s) as feedback for fuel control</li> <li>"MODE 5": Open loop - has not yet satisfied condition to go to closed loop</li> </ul> </li> </ul>	MA EM
FUEL SYS-B2*1	<ul style="list-style-type: none"> <li>"MODE 4": Closed loop - using heated oxygen sensor(s) as feedback for fuel control</li> <li>"MODE 5": Open loop - has not yet satisfied condition to go to closed loop</li> </ul>	LC
CAL/LD VALUE [%]	<ul style="list-style-type: none"> <li>The calculated load value at the moment a malfunction is detected is displayed.</li> </ul>	
COOLANT TEMP [°C] or [°F]	<ul style="list-style-type: none"> <li>The engine coolant temperature at the moment a malfunction is detected is displayed.</li> </ul>	<b>EC</b>
S-FUEL TRIM-B1 [%]	<ul style="list-style-type: none"> <li>"Short term fuel trim" at the moment a malfunction is detected is displayed.</li> </ul>	
S-FUEL TRIM-B2 [%]	<ul style="list-style-type: none"> <li>The short term fuel trim indicates dynamic or instantaneous feedback compensation to the base fuel schedule.</li> </ul>	FE
L-FUEL TRIM-B1 [%]	<ul style="list-style-type: none"> <li>"Long term fuel trim" at the moment a malfunction is detected is displayed.</li> </ul>	
L-FUEL TRIM-B2 [%]	<ul style="list-style-type: none"> <li>The long term fuel trim indicates much more gradual feedback compensation to the base fuel schedule than short term fuel trim.</li> </ul>	CL
ENGINE SPEED [rpm]	<ul style="list-style-type: none"> <li>The engine speed at the moment a malfunction is detected is displayed.</li> </ul>	MT
VHCL SPEED [km/h] or [mph]	<ul style="list-style-type: none"> <li>The vehicle speed at the moment a malfunction is detected is displayed.</li> </ul>	AT

\*1: Regarding Z32 model, "B1" indicates right bank and "B2" indicates left bank.

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

## CONSULT (Cont'd)


### REAL TIME DIAGNOSIS IN DATA MONITOR MODE

CONSULT has two kinds of triggers and they can be selected by touching "SETTING" in "DATA MONITOR" mode.


1. "AUTO TRIG" (Automatic trigger):
  - The malfunction will be identified on the CONSULT screen in real time.  
In other words, DTC and malfunction item will be displayed at the moment the malfunction is detected by ECM.
  - DATA MONITOR can be performed continuously until a malfunction is detected. However, DATA MONITOR cannot continue any longer after the malfunction detection.
2. "MANU TRIG" (Manual trigger):
  - DTC and malfunction item will not be displayed automatically on CONSULT screen even though a malfunction is detected by ECM.
  - DATA MONITOR can be performed continuously even though a malfunction is detected.

Use these triggers as follows:

1. "AUTO TRIG"
  - While trying to detect the DTC by performing the "DTC CONFIRMATION PROCEDURE", be sure to select to "DATA MONITOR (AUTO TRIG)" mode. You can confirm the malfunction at the moment it is detected.
  - While narrowing down the possible causes, CONSULT should be set in "DATA MONITOR (AUTO TRIG)" mode, especially in case the incident is intermittent.  
When you are inspecting the circuit by gently shaking (or twisting) the suspicious connectors, components and harness in the "DTC CONFIRMATION PROCEDURE", the moment a malfunction is found the DTC will be displayed. (Refer to GI section, "Incident Simulation Tests" in "HOW TO PERFORM EFFICIENT DIAGNOSIS FOR AN ELECTRICAL INCIDENT".)
2. "MANU TRIG"
  - If the malfunction is displayed as soon as "DATA MONITOR" is selected, reset CONSULT to "MANU TRIG". By selecting "MANU TRIG" you can monitor and store the data. The data can be utilized for further diagnosis, such as a comparison with the value for the normal operating condition.

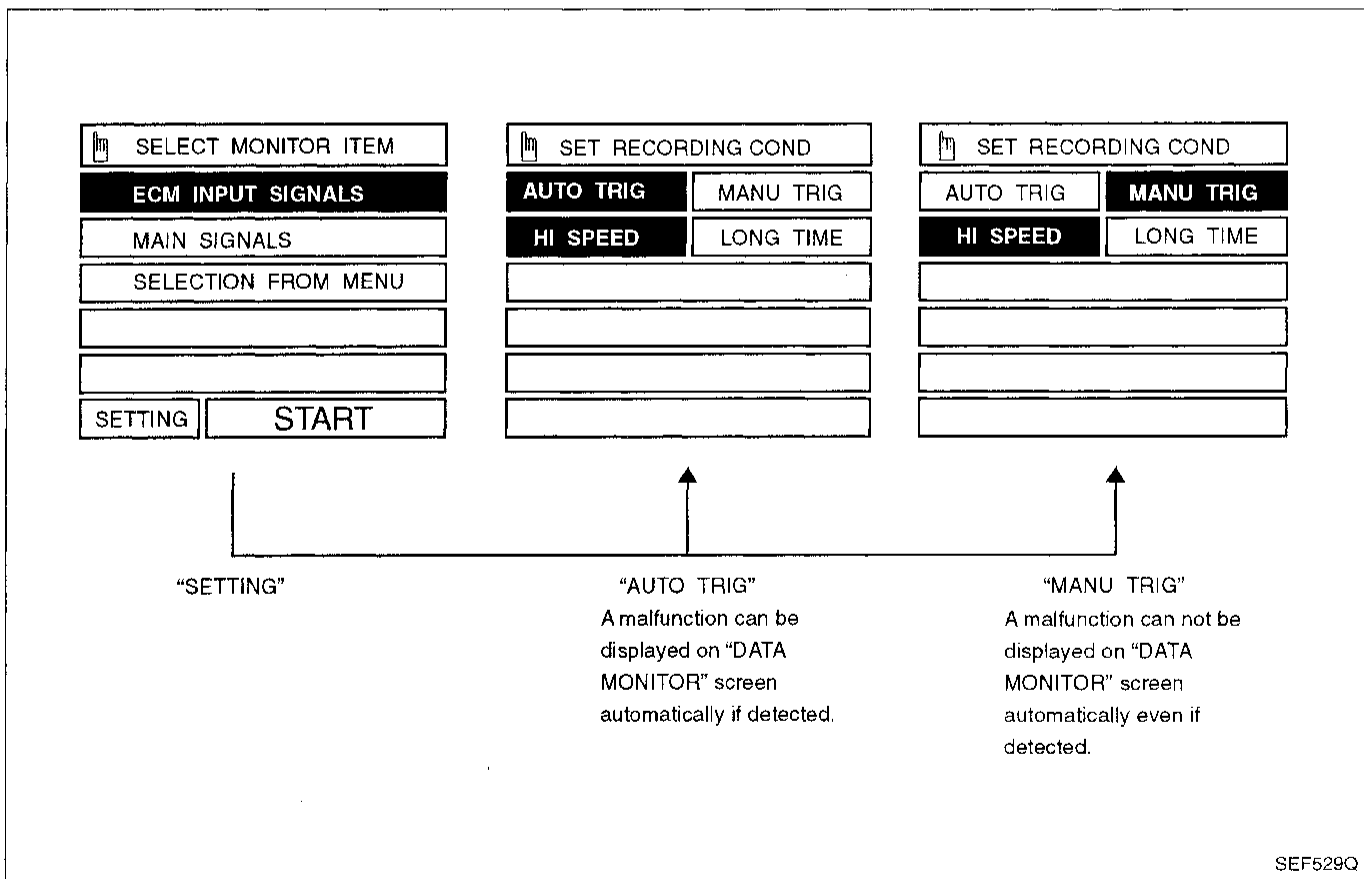

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

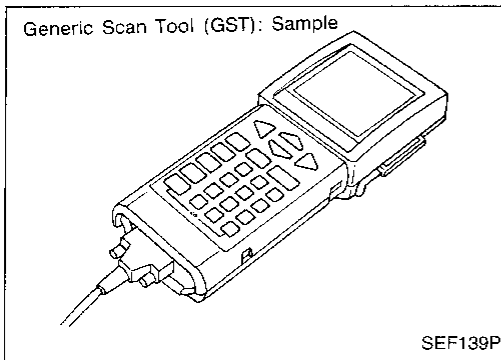

## Generic Scan Tool (GST)

### DESCRIPTION

Generic Scan Tool (OBDII scan tool) complying with SAE J1978 has five different functions explained on the next page. ISO9141 is used as the protocol. The name "GST" or "Generic Scan Tool" is used in this service manual.

CI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST


RS

BT

HA


EL

IDX

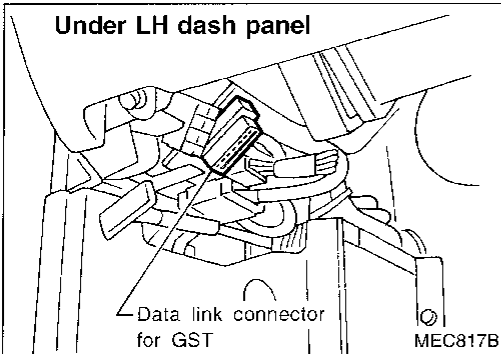


### GST INSPECTION PROCEDURE

1. Turn off ignition switch.
2. Connect "GST" to data link connector for GST. (Data link connector for GST is located under LH dash panel.)

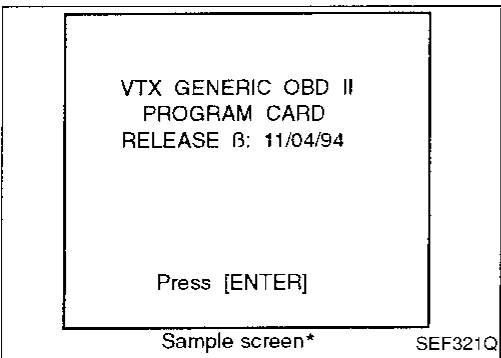

3. Turn ON ignition switch.
4. Enter the program according to instruction on the screen or in the operation manual.

(\*: Regarding GST screens in this section, sample screens are shown.)

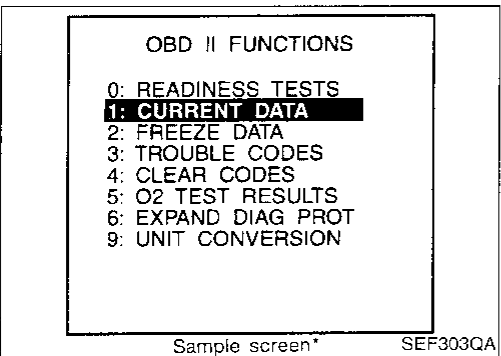

5. Perform each diagnostic mode according to each service procedure.




For further information, see the GST Operation Manual of the tool maker.

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

## Generic Scan Tool (GST) (Cont'd)

### FUNCTION

Diagnostic test mode		Function
MODE 1	(CURRENT DATA)	This mode accesses to current emission-related data values, including analog inputs and outputs, digital inputs and outputs, and system status information.
MODE 2	(FREEZE DATA)	This mode accesses to emission-related data value which were stored by ECM during the freeze frame. [For details, refer to "Freeze Frame Data" (EC-59).]
MODE 3	(TROUBLE CODES)	This mode accesses to emission-related power train trouble codes which were stored by ECM.
MODE 4	(CLEAR CODES)	This mode can clear all emission-related diagnostic information. This includes: <ul style="list-style-type: none"><li>• Clear number of diagnostic trouble codes (MODE 1)</li><li>• Clear diagnostic trouble codes (MODE 3)</li><li>• Clear trouble code for freeze frame data (MODE 1)</li><li>• Clear freeze frame data (MODE 2)</li><li>• Clear heated oxygen sensor test data (MODE 5)</li><li>• Reset status of system monitoring test (MODE 1)</li></ul>
MODE 5	(O2 TEST RESULTS)	This mode accesses to the on board heated oxygen sensor monitoring test results.

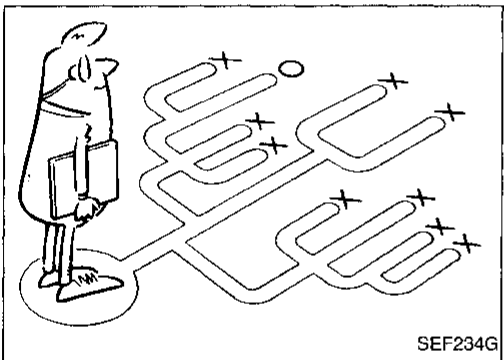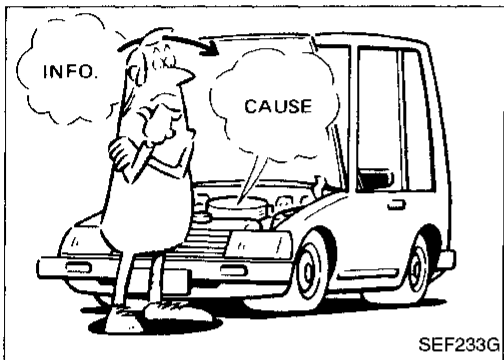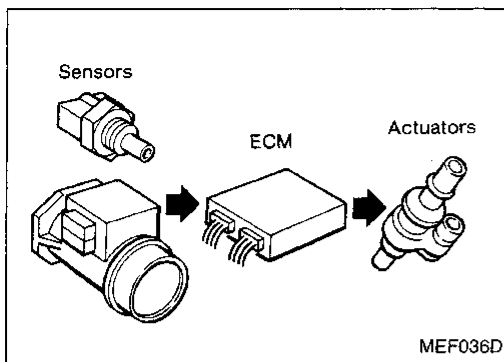

### Introduction

The engine has an ECM to control major systems such as fuel control, ignition control, idle air control system, etc. The ECM accepts input signals from sensors and instantly drives actuators. It is essential that both input and output signals are proper and stable. At the same time, it is important that there are no problems such as vacuum leaks, fouled spark plugs, or other problems with the engine.

It is much more difficult to diagnose a problem that occurs intermittently rather than continuously. Most intermittent problems are caused by poor electric connections or improper wiring. In this case, careful checking of suspected circuits may help prevent the replacement of good parts.

A visual check only may not find the cause of the problems. A road test with CONSULT (or GST) or a circuit tester connected should be performed. Follow the "Work Flow" on the next page.

Before undertaking actual checks, take a few minutes to talk with a customer who approaches with a driveability complaint. The customer can supply good information about such problems, especially intermittent ones. Find out what symptoms are present and under what conditions they occur. A "Diagnostic Worksheet" like the example on next page should be used.

Start your diagnosis by looking for "conventional" problems first. This will help troubleshoot driveability problems on an electronically controlled engine vehicle.

CI  
MA  
EM  
LC  
**EC**  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

# TROUBLE DIAGNOSIS — Introduction

## KEY POINTS

**WHAT** ..... Vehicle & engine model  
**WHEN** ..... Date, Frequencies  
**WHERE**..... Road conditions  
**HOW** ..... Operating conditions, Weather conditions, Symptoms

SEF907L

## Diagnostic Worksheet



There are many operating conditions that lead to the malfunctions of engine components.

A good knowledge of such conditions can make trouble-shooting faster and more accurate.

In general, each customer may feel differently about a given problem. It is important to fully understand the symptoms or conditions for a customer complaint.

Utilize a diagnostic worksheet like the one shown below in order to organize all the information for troubleshooting.


### WORKSHEET SAMPLE

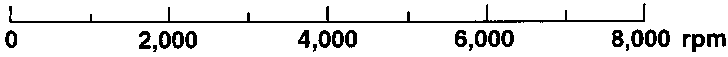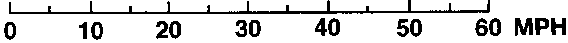Customer name MR/MS		Model & Year	VIN
Engine #		Trans.	Mileage
Incident Date		Manuf. Date	In Service Date
Symptoms	<input type="checkbox"/> Startability	<input type="checkbox"/> Impossible to start <input type="checkbox"/> No combustion <input type="checkbox"/> Partial combustion <input type="checkbox"/> Partial combustion affected by throttle position <input type="checkbox"/> Partial combustion NOT affected by throttle position <input type="checkbox"/> Possible but hard to start <input type="checkbox"/> Others [    ]	
	<input type="checkbox"/> Idling	<input type="checkbox"/> No fast idle <input type="checkbox"/> Unstable <input type="checkbox"/> High idle <input type="checkbox"/> Low idle <input type="checkbox"/> Others [    ]	
	<input type="checkbox"/> Driveability	<input type="checkbox"/> Stumble <input type="checkbox"/> Surge <input type="checkbox"/> Knock <input type="checkbox"/> Lack of power <input type="checkbox"/> Intake backfire <input type="checkbox"/> Exhaust backfire <input type="checkbox"/> Others [    ]	
	<input type="checkbox"/> Engine stall	<input type="checkbox"/> At the time of start <input type="checkbox"/> While idling <input type="checkbox"/> While accelerating <input type="checkbox"/> While decelerating <input type="checkbox"/> Just after stopping <input type="checkbox"/> While loading	
Incident occurrence		<input type="checkbox"/> Just after delivery <input type="checkbox"/> Recently <input type="checkbox"/> In the morning <input type="checkbox"/> At night <input type="checkbox"/> In the daytime	
Frequency		<input type="checkbox"/> All the time <input type="checkbox"/> Under certain conditions <input type="checkbox"/> Sometimes	
Weather conditions		<input type="checkbox"/> Not affected	
	Weather	<input type="checkbox"/> Fine <input type="checkbox"/> Raining <input type="checkbox"/> Snowing <input type="checkbox"/> Others [    ]	
	Temperature	<input type="checkbox"/> Hot <input type="checkbox"/> Warm <input type="checkbox"/> Cool <input type="checkbox"/> Cold <input type="checkbox"/> Humid    °F	
Engine conditions		<input type="checkbox"/> Cold <input type="checkbox"/> During warm-up <input type="checkbox"/> After warm-up  Engine speed 	
Road conditions		<input type="checkbox"/> In town <input type="checkbox"/> In suburbs <input type="checkbox"/> Highway <input type="checkbox"/> Off road (up/down)	
Driving conditions		<input type="checkbox"/> Not affected <input type="checkbox"/> At starting <input type="checkbox"/> While idling <input type="checkbox"/> At racing <input type="checkbox"/> While accelerating <input type="checkbox"/> While cruising <input type="checkbox"/> While decelerating <input type="checkbox"/> While turning (RH/LH)  Vehicle speed 	
Malfunction indicator lamp		<input type="checkbox"/> Turned on <input type="checkbox"/> Not turned on	



# TROUBLE DIAGNOSIS — Work Flow

## Work Flow

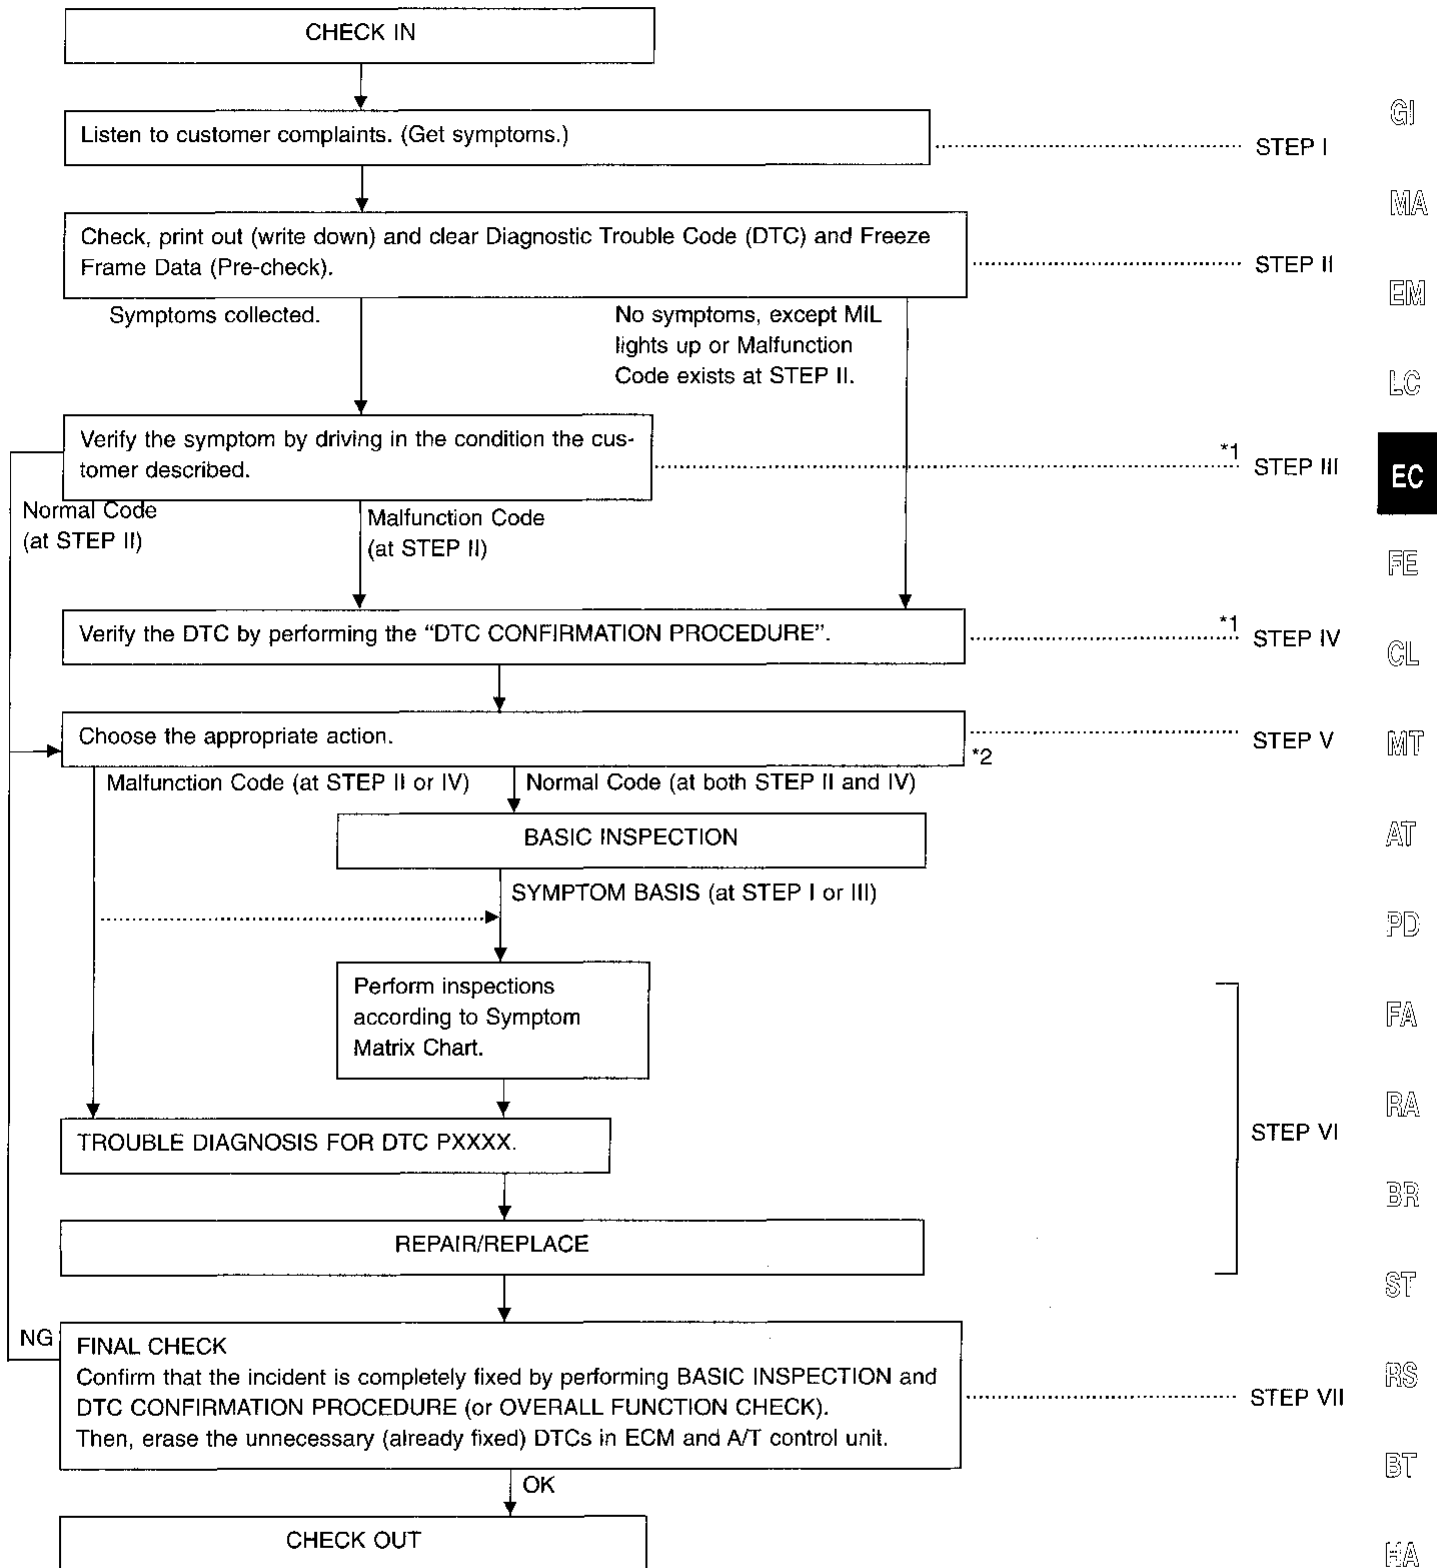






\*1: If the incident cannot be duplicated, see "Incident Simulation Tests" of "HOW TO PERFORM EFFICIENT DIAGNOSIS FOR AN ELECTRICAL INCIDENT" in GI section.

\*2: If the on board diagnostic system cannot be performed, check main power supply and ground circuit (See TROUBLE DIAGNOSIS FOR POWER SUPPLY, EC-103).

## TROUBLE DIAGNOSIS — Work Flow

### Description for Work Flow

STEP	DESCRIPTION
STEP I	Get detailed information about the conditions and the environment when the incident/symptom occurred using the "DIAGNOSTIC WORK SHEET", EC-64.
STEP II	Before confirming the concern, check and write down (print out using CONSULT or Generic Scan Tool) the Diagnostic Trouble Code (DTC) and the freeze frame data, then erase the code and the data. (Refer to EC-37.) The DTC and the freeze frame data can be used when duplicating the incident at STEP III & IV. Study the relationship between the cause, specified by DTC, and the symptom described by the customer. (The "Symptom Matrix Chart" will be useful. See EC-87.)
STEP III	Try to confirm the symptom and under what conditions the incident occurs. The "DIAGNOSTIC WORK SHEET" and the freeze frame data are useful to verify the incident. Connect CONSULT to the vehicle in DATA MONITOR (AUTO TRIG) mode and check real time diagnosis results. If the incident cannot be verified, perform INCIDENT SIMULATION TESTS. (Refer to GI section.) If the malfunction code is detected, skip STEP IV and perform STEP V.
STEP IV	Try to detect the Diagnostic Trouble Code (DTC) by driving in (or performing) the "DTC CONFIRMATION PROCEDURE". Check and read the DTC and freeze frame data by using CONSULT or Generic Scan Tool. During the DTC verification, be sure to connect CONSULT to the vehicle in DATA MONITOR (AUTO TRIG) mode and check real time diagnosis results. If the incident cannot be verified, perform INCIDENT SIMULATION TESTS. (Refer to GI section.) In case the "DTC CONFIRMATION PROCEDURE" is not available, perform the "OVERALL FUNCTION CHECK" instead. The DTC cannot be displayed by this check, however, this simplified "check" is an effective alternative. The "NG" result of the "OVERALL FUNCTION CHECK" is the same as the DTC detection.
STEP V	Take the appropriate action based on the results of STEP I through IV. If the malfunction code is indicated, proceed to TROUBLE DIAGNOSIS FOR DTC PXXXX. If the normal code is indicated, proceed to the BASIC INSPECTION, on next page. Then perform inspections according to the Symptom Matrix Chart. (Refer to EC-87.)
STEP VI	Identify where to begin diagnosis based on the relationship study between symptom and possible causes. Inspect the system for mechanical binding, loose connectors or wiring damage using (tracing) "Harness Layouts". Gently shake the related connectors, components or wiring harness with CONSULT set in "DATA MONITOR (AUTO TRIG)" mode. Check the voltage of the related ECM terminals or monitor the output data from the related sensors with CONSULT. Refer to EC-90. The "DIAGNOSTIC PROCEDURE" in EC section contains a description based on open circuit inspection. A short circuit inspection is also required for the circuit check in the DIAGNOSTIC PROCEDURE. For details, refer to GI section ("HOW TO PERFORM EFFICIENT DIAGNOSIS FOR AN ELECTRICAL INCIDENT", "Circuit Inspection"). Repair or replace the malfunction parts.
STEP VII	Once you have repaired the circuit or replaced a component, you need to run the engine in the same conditions and circumstances which resulted in the customer's initial complaint. Perform the "DTC CONFIRMATION PROCEDURE" and confirm the normal code (Diagnostic trouble code No. P0000 or 0505) is detected. If the incident is still detected in the final check, perform STEP VI by using a different method from the previous one. Before returning the vehicle to the customer, be sure to erase the unnecessary (already fixed) DTC in ECM and A/T control unit. (Refer to EC-37.)

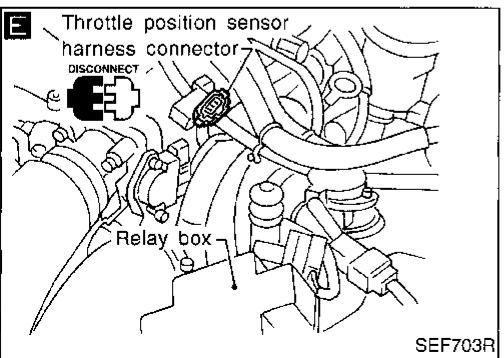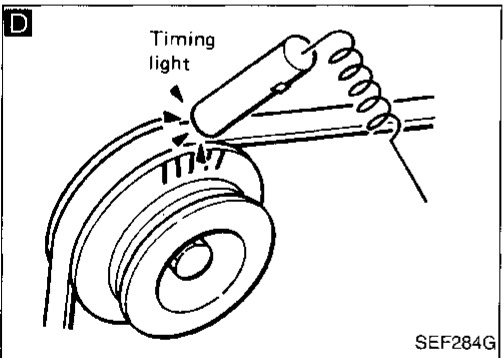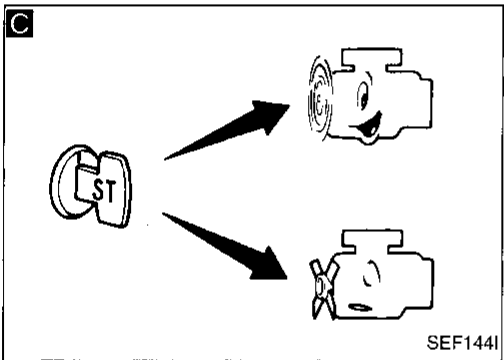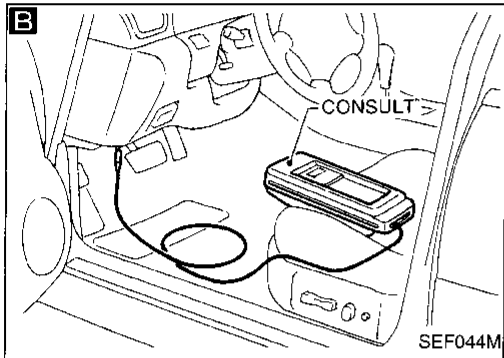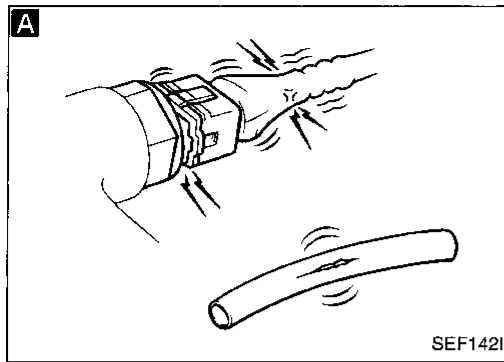

## Basic Inspection

### Precaution:

Perform Basic Inspection without electrical or mechanical loads applied;

- Headlamp switch is OFF,
- Air conditioner switch is OFF,
- Rear defogger switch is OFF,
- Steering wheel is in the straight-ahead position, etc.

**A**

**BEFORE STARTING**

1. Check service records for any recent repairs of related problems, or the current need for scheduled maintenance.
2. Open engine hood and check the following:
  - Harness connectors for improper connections
  - Vacuum hoses for splits, kinks, or improper connections
  - Wiring for improper connections, pinches, or cuts

**B**

**CONNECT CONSULT TO THE VEHICLE.**  
Connect "CONSULT" to the data link connector for CONSULT and select "ENGINE" from the menu. (Refer to page EC-49.)

**C**

**DOES ENGINE START?**

No → Go to **F**

**D**

**CHECK IGNITION TIMING.**  
Warm up engine sufficiently and check ignition timing at idle using timing light. (Refer to page EC-28.)

**Ignition timing:**

**Non-turbocharger**  
M/T:  $10^{\circ} \pm 2^{\circ}$   
A/T:  $10^{\circ} \pm 2^{\circ}$  (in "N" position)

**Turbocharger**  
M/T:  $15^{\circ} \pm 2^{\circ}$   
A/T:  $15^{\circ} \pm 2^{\circ}$  (in "N" position)

NG → Adjust ignition timing by turning camshaft position sensor.

**E**

**CHECK IDLE ADJ. SCREW INITIAL SET RPM.**  
When disconnecting throttle position sensor harness connector, does engine speed fall to the following speed? (Refer to EC-28.)

**Non-turbocharger**  
M/T:  $650 \pm 50$  rpm  
A/T:  $720 \pm 50$  rpm (in "N" position)

**Turbocharger**  
M/T:  $650 \pm 50$  rpm (U.S.A.)  
700  $\pm$  50 rpm (Canada)  
A/T:  $700 \pm 50$  rpm (in "N" position)




No → Adjust engine speed by turning idle adjusting screw.

Yes  
↓  
(Go to **A**) on next page.)

CI  
 MA  
 EM  
 LC  
**EC**  
 FE  
 CL  
 MT  
 AT  
 PD  
 FA  
 RA  
 BR  
 ST  
 RS  
 BT  
 HA  
 EL  
 IDX

# TROUBLE DIAGNOSIS — Basic Inspection

## Basic Inspection (Cont'd)

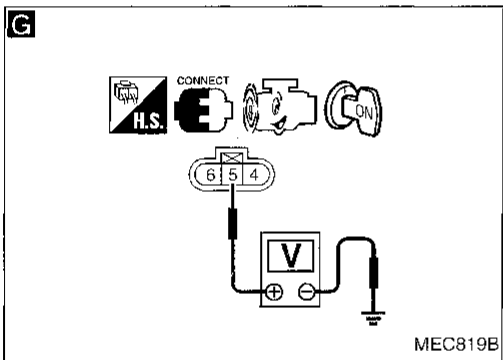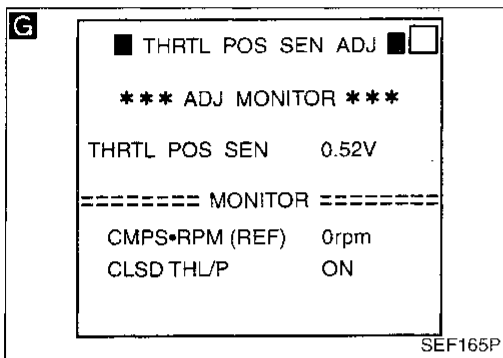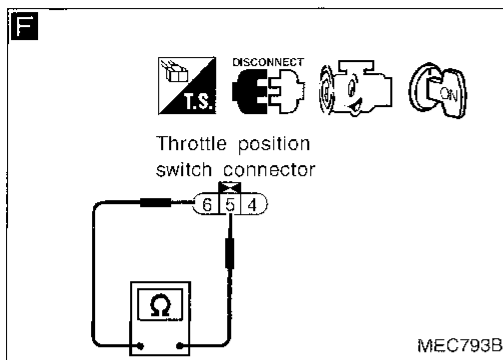

**F**

**CHECK CLOSED THROTTLE POSITION SWITCH IDLE POSITION (A/T models only).**

1. Disconnect throttle position sensor harness connector and throttle position switch harness connector.
2. Check continuity between throttle position switch connector terminals ⑤ and ⑥ under the following conditions.
  - Raise engine speed to 2,000 rpm.
  - Gradually lower engine speed.

**Continuity should exist (closed throttle position switch closes) at 970±150 rpm (Transmission in "N" position) for non-turbocharger models, at 950±150 rpm (Transmission in "N" position) for turbocharger models.**

NG → Adjust continuity signal by rotating throttle position sensor body. Then go to ③.

OK → Reconnect throttle position sensor harness connector and throttle position switch harness connector.

**G**

**CHECK THROTTLE POSITION SENSOR IDLE POSITION (M/T models only).**

1. Perform "THRTL POS SEN ADJ" in "WORK SUPPORT" mode.
2. Check that output voltage of throttle position sensor is 0.35 to 0.65V. (Throttle valve fully closes.) and "CLSD THL/P SW" stays "ON".

OR

⊗ Measure output voltage of throttle position sensor using voltmeter, and check that it is 0.35 to 0.65V. (Throttle valve fully closed.)

NG → Adjust output voltage to 0.50V by rotating throttle position sensor body. Then go to ③.

③


**RESETTING IDLE POSITION MEMORY**

1. Warm up engine sufficiently.
2. Turn ignition switch "OFF" and wait at least 5 seconds.
3. Disconnect throttle position harness connector.
4. Start engine and wait at least 3 seconds in "N" position.
5. Reconnect throttle position harness connector while running engine.

OK → ②

# TROUBLE DIAGNOSIS — Basic Inspection

## Basic Inspection (Cont'd)

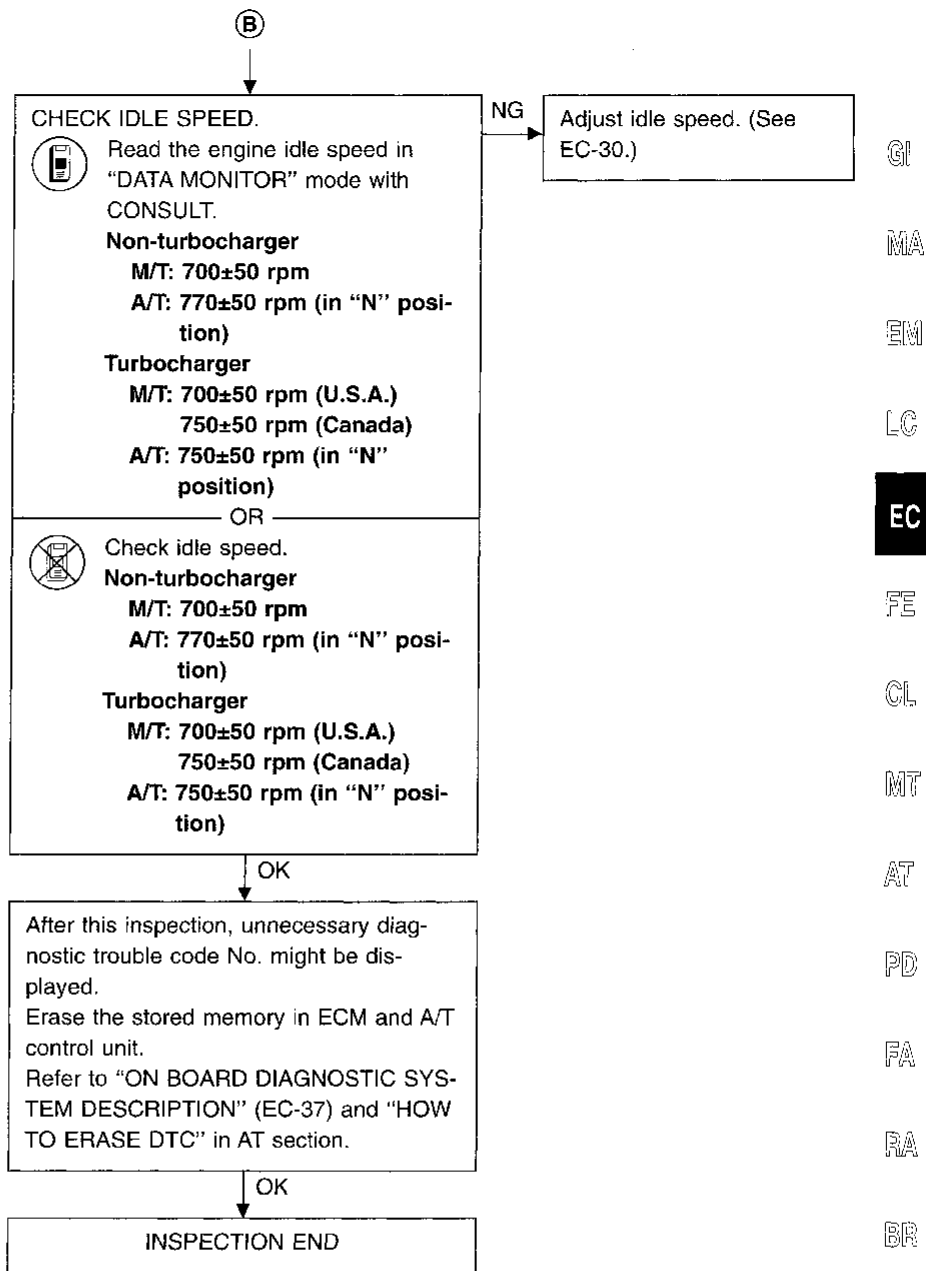

# TROUBLE DIAGNOSIS — General Description

## Diagnostic Trouble Code (DTC) Chart

### ENGINE RELATED ITEMS

Diagnostic trouble code No.		Detected items (Screen terms for CONSULT, "SELF-DIAG RESULTS" mode)	Malfunction is detected when ...
CONSULT GST	MIL		
(P0000)	0505	No failure (NO SELF DIAGNOSTIC FAILURE INDICATED...)	<ul style="list-style-type: none"> <li>• No malfunction related to OBD system is detected by both ECM and A/T control unit.</li> </ul>
P0100	0102	Mass air flow sensor circuit (MASS AIR FLOW SEN)	<ul style="list-style-type: none"> <li>• An excessively high or low voltage from the sensor is sent to ECM.</li> <li>• Voltage sent to ECM is not practical when compared with the camshaft position sensor and throttle position sensor signals.</li> </ul>
P0110	0401	Intake air temperature sensor circuit (INT AIR TEMP SEN)	<ul style="list-style-type: none"> <li>• An excessively low or high voltage from the sensor is sent to ECM.</li> </ul> <hr/> <ul style="list-style-type: none"> <li>• Rationally incorrect voltage from the sensor is sent to ECM, compared with the voltage signal from engine coolant temperature sensor.</li> </ul>
P0115	0103	Engine coolant temperature sensor circuit (COOLANT TEMP SEN)	<ul style="list-style-type: none"> <li>• An excessively high or low voltage from the sensor is sent to ECM.</li> </ul>
P0120	0403	Throttle position sensor circuit (THROTTLE POSI SEN)	<ul style="list-style-type: none"> <li>• An excessively low or high voltage from the sensor is sent to ECM.</li> <li>• Rationally incorrect voltage from the sensor is sent to ECM compared with the voltage signals from mass air flow sensor, camshaft position sensor and IACV-AAC valve.</li> </ul>
P0125	0908	Engine coolant temperature sensor function (*COOLANT TEMP SEN)	<ul style="list-style-type: none"> <li>• Voltage sent to ECM from the sensor is not practical, even when some time has passed after starting the engine.</li> <li>• Engine coolant temperature is insufficient for closed loop fuel control.</li> </ul>
P0130	0307	Closed loop control (right bank) (CLOSED LOOP-B1)	<ul style="list-style-type: none"> <li>• The closed loop control function for right bank does not operate even when vehicle is driving in the specified condition.</li> </ul>
P0130	0503	Front heated oxygen sensor (right bank) circuit (FRONT O2 SENSOR-B1)	<ul style="list-style-type: none"> <li>• An excessively high voltage from the sensor is sent to ECM.</li> <li>• The voltage from the sensor is constantly approx. 0.3V.</li> <li>• The maximum and minimum voltages from the sensor are not reached to the specified voltages.</li> <li>• It takes more time for the sensor to respond between rich and lean than the specified time.</li> </ul>
P0135	0901	Front heated oxygen sensor heater (right bank) circuit (FR O2 SEN HTR-B1)	<ul style="list-style-type: none"> <li>• The current amperage in the heater circuit is out of the normal range. (An improper voltage drop signal is sent to ECM through the heater.)</li> </ul>

**Note: A dead (weak) battery will reduce the accuracy of the on board diagnosis and may cause the MIL to light up without any malfunctions.**

#### Abbreviations for Quick Reference of "DTC CONFIRMATION PROCEDURE"

IGN: ON : Turning the ignition switch ON is required for checking the function of the sensor, switch, solenoid and circuit.

RUNNING : Running engine is required for checking the function of the sensor, switch, solenoid and circuit.

LIFTING : Lifting up the vehicle, running engine and spinning wheels are required.

DRIVING : Driving the vehicle in the specified pattern is required.

#### Abbreviations for Quick Reference of "OVERALL FUNCTION CHECK"

IGN: ON : Turning the ignition switch ON is required for the ECM to detect a malfunction (if one exists).

RUNNING : Running engine is required for the ECM to detect a malfunction (if one exists).

LIFTING : Lifting up the vehicle, running engine and spinning wheels are required for the ECM to detect a malfunction (if one exists).

DRIVING : Driving the vehicle in the specified pattern is required for the ECM to detect a malfunction (if one exists).

# TROUBLE DIAGNOSIS — General Description

## Diagnostic Trouble Code (DTC) Chart (Cont'd)

X: Applicable  
—: Not applicable

Check Items (Possible Cause)	"DTC CONFIRMATION PROCEDURE" Quick Ref. *1	"OVERALL FUNCTION CHECK" Quick Ref. *2	Fail Safe System	MIL Illumination	Reference Page
• No failure	—	—	—	—	—
• Harness or connectors (The sensor circuit is open or shorted.) • Mass air flow sensor	RUNNING	RUNNING	X	2 trip	EC-108
• Harness or connectors (The sensor circuit is open or shorted.) • Intake air temperature sensor	IGN: ON	—	—	2 trip	EC-113
• Intake air temperature sensor	LIFTING	—	—	—	—
• Harness or connectors (The sensor circuit is open or shorted.) • Engine coolant temperature sensor	IGN: ON	—	X	2 trip	EC-118
• Harness or connectors (The sensor circuit is open or shorted.) • Throttle position sensor	—	IGN: ON	X	2 trip	EC-122
• Harness or connectors (High resistance in the sensor circuit) • Engine coolant temperature sensor • Thermostat	—	RUNNING	—	2 trip	EC-127
• The front heated oxygen sensor (right bank) circuit is open or shorted. • Front heated oxygen sensor (right bank) • Front heated oxygen sensor heater (right bank)	—	RUNNING	—	1 trip	EC-132
• Harness or connectors (The sensor circuit is open or shorted.) • Front heated oxygen sensor (right bank) • Injectors • Intake air leaks • Fuel pressure	—	RUNNING	—	2 trip	EC-133
• Harness or connectors (The heater circuit is open or shorted.) • Front heated oxygen sensor heater (right bank)	RUNNING	—	—	2 trip	EC-138

\*1: • This is Quick Reference of "DTC CONFIRMATION PROCEDURE".

Details are described in each TROUBLE DIAGNOSIS FOR DTC PXXXX.

\*2: • The "OVERALL FUNCTION CHECK" is a simplified and effective way to inspect a component or circuit.

In some cases, the "OVERALL FUNCTION CHECK" is used rather than a "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE".

When no DTC CONFIRMATION PROCEDURE is available, the "NG" result of the OVERALL FUNCTION CHECK can be considered to mean the same as a DTC detection.

• During an "NG" OVERALL FUNCTION CHECK, the DTC might not be confirmed.

• This is Quick Reference of "OVERALL FUNCTION CHECK".

Details are described in each TROUBLE DIAGNOSIS FOR DTC PXXXX.

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

# TROUBLE DIAGNOSIS — General Description

## Diagnostic Trouble Code (DTC) Chart (Cont'd)

### ENGINE RELATED ITEMS

Diagnostic trouble code No.		Detected items (Screen terms for CONSULT, "SELF-DIAG RESULTS" mode)	Malfunction is detected when ...
CONSULT GST	MIL		
P0136	0707	Rear heated oxygen sensor (right bank) circuit (REAR O2 SENSOR-B1)	<ul style="list-style-type: none"> <li>• An excessively high voltage from the sensor is sent to ECM.</li> <li>• The voltage from the sensor is constantly approx. 0.3V.</li> <li>• The maximum and minimum voltages from the sensor are not reached to the specified voltages.</li> <li>• It takes more time for the sensor to respond between rich and lean than the specified time.</li> </ul>
P0141	0902	Rear heated oxygen sensor heater (right bank) circuit (RR O2 SEN HTR-B1)	<ul style="list-style-type: none"> <li>• The current amperage in the heater circuit is out of the normal range. (An improper voltage drop signal is sent to ECM through the heater.)</li> </ul>
P0150	0303	Front heated oxygen sensor (left bank) circuit (FRONT O2 SENSOR-B2)	<ul style="list-style-type: none"> <li>• An excessively high voltage from the sensor is sent to ECM.</li> <li>• The voltage from the sensor is constantly approx. 0.3V.</li> <li>• The maximum and minimum voltages from the sensor are not reached to the specified voltages.</li> <li>• It takes more time for the sensor to respond between rich and lean than the specified time.</li> </ul>
P0150 (*3)	0308	Closed loop control (left bank) (CLOSED LOOP-B2)	<ul style="list-style-type: none"> <li>• The closed loop control function does not operate even when vehicle is driving in the specified condition.</li> </ul>
P0155	1001	Front heated oxygen sensor heater (left bank) circuit (FR O2 SEN HTR-B2)	<ul style="list-style-type: none"> <li>• The current amperage in the heater circuit is out of the normal range. (An improper voltage drop signal is sent to ECM through the heater.)</li> </ul>
P0156	0708	Rear heated oxygen sensor (left bank) circuit (REAR O2 SENSOR-B2)	<ul style="list-style-type: none"> <li>• An excessively high voltage from the sensor is sent to ECM.</li> <li>• The voltage from the sensor is constantly approx. 0.3V.</li> <li>• The maximum and minimum voltages from the sensor are not reached to the specified voltages.</li> <li>• It takes more time for the sensor to respond between rich and lean than the specified time.</li> </ul>
P0161	1002	Rear heated oxygen sensor heater (left bank) circuit (RR O2 SEN HTR-B2)	<ul style="list-style-type: none"> <li>• The current amperage in the heater circuit is out of the normal range. (An improper voltage drop signal is sent to ECM through the heater.)</li> </ul>
P0171	0115	Fuel injection system function (right bank) (lean side) (FUEL SYS LEAN/BK1)	<ul style="list-style-type: none"> <li>• Fuel injection system does not operate properly.</li> <li>• The amount of mixture ratio compensation is too large. (The mixture ratio is too lean.)</li> </ul>

**Note: A dead (weak) battery will reduce the accuracy of the on board diagnosis and may cause the MIL to light up without any malfunctions.**

#### Abbreviations for Quick Reference of "DTC CONFIRMATION PROCEDURE"

IGN: ON : Turning the ignition switch ON is required for checking the function of the sensor, switch, solenoid and circuit.

RUNNING : Running engine is required for checking the function of the sensor, switch, solenoid and circuit.

LIFTING : Lifting up the vehicle, running engine and spinning wheels are required.

DRIVING : Driving the vehicle in the specified pattern is required.

#### Abbreviations for Quick Reference of "OVERALL FUNCTION CHECK"

IGN: ON : Turning the ignition switch ON is required for the ECM to detect a malfunction (if one exists).

RUNNING : Running engine is required for the ECM to detect a malfunction (if one exists).

LIFTING : Lifting up the vehicle, running engine and spinning wheels are required for the ECM to detect a malfunction (if one exists).

DRIVING : Driving the vehicle in the specified pattern is required for the ECM to detect a malfunction (if one exists).

\*3: Using CONSULT, "P0130" will be displayed.



# TROUBLE DIAGNOSIS — General Description

## Diagnostic Trouble Code (DTC) Chart (Cont'd)

X: Applicable  
—: Not applicable

Check Items (Possible Cause)	“DTC CONFIRMATION PROCEDURE” Quick Ref. *1	“OVERALL FUNCTION CHECK” Quick Ref. *2	Fail Safe System	MIL Illumination	Reference Page
<ul style="list-style-type: none"> <li>• Harness or connectors (The sensor circuit is open or shorted.)</li> <li>• Rear heated oxygen sensor (right bank)</li> <li>• Fuel pressure</li> <li>• Injectors</li> <li>• Intake air leaks</li> </ul>	—	RUNNING (DRIVING)	—	2 trip	EC-141
<ul style="list-style-type: none"> <li>• Harness or connectors (The heater circuit is open or shorted.)</li> <li>• Rear heated oxygen sensor heater (right bank)</li> </ul>	RUNNING	—	—	2 trip	EC-146
<ul style="list-style-type: none"> <li>• Harness or connectors (The sensor circuit is open or shorted.)</li> <li>• Front heated oxygen sensor (left bank)</li> <li>• Injectors</li> <li>• Intake air leaks</li> <li>• Fuel pressure</li> </ul>	—	RUNNING	—	2 trip	EC-150
<ul style="list-style-type: none"> <li>• The front heated oxygen sensor (left bank) circuit is open or shorted.</li> <li>• Front heated oxygen sensor (left bank)</li> <li>• Front heated oxygen sensor heater (left bank)</li> </ul>	—	RUNNING	—	1 trip	EC-132
<ul style="list-style-type: none"> <li>• Harness or connectors (The heater circuit is open or shorted.)</li> <li>• Front heated oxygen sensor heater (left bank)</li> </ul>	RUNNING	—	—	2 trip	EC-155
<ul style="list-style-type: none"> <li>• Harness or connectors (The sensor circuit is open or shorted.)</li> <li>• Rear heated oxygen sensor (left bank)</li> <li>• Fuel pressure</li> <li>• Injectors</li> <li>• Intake air leaks</li> </ul>	—	RUNNING (DRIVING)	—	2 trip	EC-158
<ul style="list-style-type: none"> <li>• Harness or connectors (The heater circuit is open or shorted.)</li> <li>• Rear heated oxygen sensor heater (left bank)</li> </ul>	RUNNING	—	—	2 trip	EC-163
<ul style="list-style-type: none"> <li>• Intake air leaks</li> <li>• Front heated oxygen sensor (right bank)</li> <li>• Injector (right bank)</li> <li>• Exhaust gas leaks</li> <li>• Incorrect fuel pressure</li> <li>• Lack of fuel</li> <li>• Mass air flow sensor</li> </ul>	RUNNING	—	—	2 trip	EC-167

\*1: • This is Quick Reference of “DTC CONFIRMATION PROCEDURE”.  
Details are described in each TROUBLE DIAGNOSIS FOR DTC PXXXX.

\*2: • The “OVERALL FUNCTION CHECK” is a simplified and effective way to inspect a component or circuit.  
In some cases, the “OVERALL FUNCTION CHECK” is used rather than a “DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE”.  
When no DTC CONFIRMATION PROCEDURE is available, the “NG” result of the OVERALL FUNCTION CHECK can be considered to mean the same as a DTC detection.

- During an “NG” OVERALL FUNCTION CHECK, the DTC might not be confirmed.
- This is Quick Reference of “OVERALL FUNCTION CHECK”.  
Details are described in each TROUBLE DIAGNOSIS FOR DTC PXXXX.

# TROUBLE DIAGNOSIS — General Description

## Diagnostic Trouble Code (DTC) Chart (Cont'd)

### ENGINE RELATED ITEMS

Diagnostic trouble code No.		Detected items (Screen terms for CONSULT, "SELF-DIAG RESULTS" mode)	Malfunction is detected when ...	
CONSULT GST	MIL			
P0172	0114	Fuel injection system function (right bank) (rich side) (FUEL SYS RICH/BK1)	<ul style="list-style-type: none"> <li>Fuel injection system does not operate properly.</li> <li>The amount of mixture ratio compensation is too large. (The mixture ratio is too rich.)</li> </ul>	
P0174	0210	Fuel injection system function (left bank) (lean side) (FUEL SYS LEAN/BK2)	<ul style="list-style-type: none"> <li>Fuel injection system does not operate properly.</li> <li>The amount of mixture ratio compensation is too large. (The mixture ratio is too lean.)</li> </ul>	
P0175	0209	Fuel injection system function (left bank) (rich side) (FUEL SYS RICH/BK2)	<ul style="list-style-type: none"> <li>Fuel injection system does not operate properly.</li> <li>The amount of mixture ratio compensation is too large. (The mixture ratio is too rich.)</li> </ul>	
P0180 (*4)	0402	Fuel temperature sensor circuit (FUEL TEMP SENSOR)	<ul style="list-style-type: none"> <li>An excessively low or high voltage signal from the fuel temperature sensor is sent to ECM.</li> </ul>	
P0300	0701	Multiple cylinders' misfire (MULTI CYL MISFIRE)	(Three way catalyst damage) The misfire occurs, which will damage three way catalyst by overheating.	(Exhaust quality deterioration) The misfire occurs, which will not damage three way catalyst but will affect emission deterioration.
P0301	0608	No. 1 cylinder's misfire (CYL 1 MISFIRE)		
P0302	0607	No. 2 cylinder's misfire (CYL 2 MISFIRE)		
P0303	0606	No. 3 cylinder's misfire (CYL 3 MISFIRE)		
P0304	0605	No. 4 cylinder's misfire (CYL 4 MISFIRE)		
P0305	0604	No. 5 cylinder's misfire (CYL 5 MISFIRE)		
P0306	0603	No. 6 cylinder's misfire (CYL 6 MISFIRE)		
P0325 (*4)	0304	Knock sensor circuit (KNOCK SENSOR)	<ul style="list-style-type: none"> <li>An excessively low or high voltage from the sensor is sent to ECM.</li> </ul>	
P0335	0802	Crankshaft position sensor (OBD) circuit [CRANK POS SEN (OBD)]	<ul style="list-style-type: none"> <li>The proper pulse signal from the sensor is not sent to ECM while the engine is running with the specified engine speed.</li> </ul>	
P0340	0101	Camshaft position sensor circuit (CAMSHAFT POSI SEN)	<ul style="list-style-type: none"> <li>Either 1° or 120° signal is not sent to ECM for the first few seconds during engine cranking.</li> <li>Either 1° or 120° signal is not sent to ECM often enough while the engine speed is higher than the specified engine speed.</li> <li>The relation between 1° and 120° signal is not in the normal range during the specified engine speed.</li> </ul>	

**Note: A dead (weak) battery will reduce the accuracy of the on board diagnosis and may cause the MIL to light up without any malfunctions.**

**Abbreviations for Quick Reference of "DTC CONFIRMATION PROCEDURE"**

- IGN: ON : Turning the ignition switch ON is required for checking the function of the sensor, switch, solenoid and circuit.
- RUNNING : Running engine is required for checking the function of the sensor, switch, solenoid and circuit.
- LIFTING : Lifting up the vehicle, running engine and spinning wheels are required.
- DRIVING : Driving the vehicle in the specified pattern is required.

**Abbreviations for Quick Reference of "OVERALL FUNCTION CHECK"**

- IGN: ON : Turning the ignition switch ON is required for the ECM to detect a malfunction (if one exists).
- RUNNING : Running engine is required for the ECM to detect a malfunction (if one exists).
- LIFTING : Lifting up the vehicle, running engine and spinning wheels are required for the ECM to detect a malfunction (if one exists).
- DRIVING : Driving the vehicle in the specified pattern is required for the ECM to detect a malfunction (if one exists).

\*4: Freeze frame data is not stored in the ECM for these malfunctions. The MIL will not light up for these malfunctions.

# TROUBLE DIAGNOSIS — General Description

## Diagnostic Trouble Code (DTC) Chart (Cont'd)

X: Applicable  
—: Not applicable

Check Items (Possible Cause)	“DTC CONFIRMATION PROCEDURE” Quick Ref. *1	“OVERALL FUNCTION CHECK” Quick Ref. *2	Fail Safe System	MIL Illumination	Reference Page	
<ul style="list-style-type: none"> <li>• Front heated oxygen sensor (right bank)</li> <li>• Injectors (right bank)</li> <li>• Exhaust gas leaks</li> <li>• Incorrect fuel pressure</li> <li>• Mass air flow sensor</li> </ul>	RUNNING	—	—	2 trip	EC-173	GI MA EM
<ul style="list-style-type: none"> <li>• Intake air leaks</li> <li>• Front heated oxygen sensor (left bank)</li> <li>• Injectors (left bank)</li> <li>• Exhaust gas leaks</li> <li>• Incorrect fuel pressure</li> <li>• Lack of fuel</li> <li>• Mass air flow sensor</li> </ul>	RUNNING	—	—	2 trip	EC-179	LC
<ul style="list-style-type: none"> <li>• Front heated oxygen sensor (left bank)</li> <li>• Injectors (left bank)</li> <li>• Exhaust gas leaks</li> <li>• Incorrect fuel pressure</li> <li>• Mass air flow sensor</li> </ul>	RUNNING	—	—	2 trip	EC-185	<b>EC</b>
<ul style="list-style-type: none"> <li>• Harness or connectors (Fuel temperature sensor circuit is open or shorted.)</li> <li>• Fuel temperature sensor</li> </ul>	IGN: ON	—	—	—	EC-191	FE CL
<ul style="list-style-type: none"> <li>• Improper spark plug</li> <li>• The secondary ignition control circuit is open or shorted.</li> <li>• Insufficient compression</li> <li>• Incorrect fuel pressure</li> <li>• EGR valve</li> <li>• The injector circuit is open or shorted.</li> <li>• Injectors</li> <li>• Intake air leaks</li> <li>• Lack of fuel</li> <li>• Magnetized drive plate (Flywheel)</li> </ul>	DRIVING	—	—	(Three way catalyst damage)  1 trip  (Exhaust quality deterioration)  2 trip	EC-194	MT AT PD FA
<ul style="list-style-type: none"> <li>• Harness or connectors (The sensor circuit is open or shorted.)</li> <li>• Knock sensor</li> </ul>	RUNNING	—	—	—	EC-199	RA
<ul style="list-style-type: none"> <li>• Harness or connectors (The sensor circuit is open or shorted.)</li> <li>• Crankshaft position sensor (OBD)</li> <li>• Dead (Weak) battery</li> </ul>	RUNNING	—	—	2 trip	EC-202	BR
<ul style="list-style-type: none"> <li>• Harness or connectors (The sensor circuit is open or shorted.)</li> <li>• Camshaft position sensor</li> <li>• Starter motor (EL section)</li> <li>• Starting system circuit (EL section)</li> <li>• Dead (Weak) battery</li> </ul>	RUNNING	—	—	2 trip	EC-206	ST RS

\*1: • This is Quick Reference of “DTC CONFIRMATION PROCEDURE”.

Details are described in each TROUBLE DIAGNOSIS FOR DTC PXXXX.

\*2: • The “OVERALL FUNCTION CHECK” is a simplified and effective way to inspect a component or circuit.

In some cases, the “OVERALL FUNCTION CHECK” is used rather than a “DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE”.

When no DTC CONFIRMATION PROCEDURE is available, the “NG” result of the OVERALL FUNCTION CHECK can be considered to mean the same as a DTC detection.

• During an “NG” OVERALL FUNCTION CHECK, the DTC might not be confirmed.

• This is Quick Reference of “OVERALL FUNCTION CHECK”.

Details are described in each TROUBLE DIAGNOSIS FOR DTC PXXXX.

BT

HA

EL

IDX

# TROUBLE DIAGNOSIS — General Description

## Diagnostic Trouble Code (DTC) Chart (Cont'd)

### ENGINE RELATED ITEMS

Diagnostic trouble code No.		Detected items (Screen terms for CONSULT, "SELF-DIAG RESULTS" mode)	Malfunction is detected when ...
CONSULT GST	MIL		
P0400	0302	EGR function (EGR SYSTEM)	<ul style="list-style-type: none"> <li>The EGR flow is excessively low or high during the specified driving condition.</li> </ul>
P0420	0702	Three way catalyst function (right bank) (TW CATALYST SYS-B1)	<ul style="list-style-type: none"> <li>Three way catalyst does not operate properly.</li> <li>Three way catalyst does not have enough oxygen storage capacity.</li> </ul>
P0430	0703	Three way catalyst function (left bank) (TW CATALYST SYS-B2)	<ul style="list-style-type: none"> <li>Three way catalyst does not operate properly.</li> <li>Three way catalyst does not have enough oxygen storage capacity.</li> </ul>
P0443	0807	EVAP canister purge control solenoid valve circuit (PURG CONT/V & S/V)	<ul style="list-style-type: none"> <li>An improper voltage signal is sent to ECM through the EVAP canister purge control solenoid valve.</li> </ul> <hr/> <ul style="list-style-type: none"> <li>The vacuum signal is not sent to EVAP canister purge control valve under the specified driving condition even though EVAP canister purge control solenoid valve is OFF.</li> </ul> <hr/> <ul style="list-style-type: none"> <li>The vacuum signal is sent to EVAP canister purge control valve even though EVAP canister purge control solenoid valve is ON.</li> </ul>

**Note: A dead (weak) battery will reduce the accuracy of the on board diagnosis and may cause the MIL to light up without any malfunctions.**

#### Abbreviations for Quick Reference of "DTC CONFIRMATION PROCEDURE"

- IGN: ON : Turning the ignition switch ON is required for checking the function of the sensor, switch, solenoid and circuit.  
 RUNNING : Running engine is required for checking the function of the sensor, switch, solenoid and circuit.  
 LIFTING : Lifting up the vehicle, running engine and spinning wheels are required.  
 DRIVING : Driving the vehicle in the specified pattern is required.

#### Abbreviations for Quick Reference of "OVERALL FUNCTION CHECK"

- IGN: ON : Turning the ignition switch ON is required for the ECM to detect a malfunction (if one exists).  
 RUNNING : Running engine is required for the ECM to detect a malfunction (if one exists).  
 LIFTING : Lifting up the vehicle, running engine and spinning wheels are required for the ECM to detect a malfunction (if one exists).  
 DRIVING : Driving the vehicle in the specified pattern is required for the ECM to detect a malfunction (if one exists).

# TROUBLE DIAGNOSIS — General Description

## Diagnostic Trouble Code (DTC) Chart (Cont'd)

X: Applicable  
—: Not applicable

Check Items (Possible Cause)	*1 "DTC CONFIRMATION PROCEDURE" Quick Ref.	*2 "OVERALL FUNCTION CHECK" Quick Ref.	Fail Safe System	MIL Illumination	Reference Page	
<ul style="list-style-type: none"> <li>• EGR valve stuck closed, open or leak</li> <li>• Passage obstructed</li> <li>• EGRC-solenoid valve</li> <li>• EGR valve vacuum tube leaks</li> <li>• EGR temperature sensor</li> </ul>	—	RUNNING	—	2 trip	EC-211	GI MA EM
<ul style="list-style-type: none"> <li>• Three way catalyst</li> <li>• Exhaust tube</li> <li>• Injectors</li> <li>• Injector leaks</li> <li>• Intake air leaks</li> </ul>	—	RUNNING	—	1 trip	EC-220	LC
<ul style="list-style-type: none"> <li>• Three way catalyst</li> <li>• Exhaust tube</li> <li>• Injectors</li> <li>• Injector leaks</li> <li>• Intake air leaks</li> </ul>	—	RUNNING	—	1 trip	EC-220	<b>EC</b>
<ul style="list-style-type: none"> <li>• Harness or connectors (The EVAP canister purge control solenoid valve circuit is open or shorted.)</li> </ul>	IGN: ON					EE CL
<ul style="list-style-type: none"> <li>• Harness or connectors (The EVAP canister purge control solenoid valve circuit is shorted.)</li> <li>• EVAP canister purge control solenoid valve</li> <li>• Mass air flow sensor</li> <li>• Throttle position sensor</li> <li>• Engine coolant temperature sensor</li> <li>• EGR valve</li> <li>• Intake air system (Intake air leaks)</li> <li>• Hoses</li> <li>• EVAP canister purge control valve (built into EVAP canister)</li> <li>• Canister control vacuum check switch</li> </ul>	RUNNING	—	—	2 trip	EC-223	MT AT PD FA
<ul style="list-style-type: none"> <li>• Harness or connectors (The EVAP canister purge control solenoid valve circuit is open.)</li> <li>• EVAP canister purge control solenoid valve</li> <li>• Hoses (Hoses are connected incorrectly.)</li> <li>• Canister control vacuum check switch</li> </ul>	—	RUNNING				RA BR

- \*1: • This is Quick Reference of "DTC CONFIRMATION PROCEDURE".  
Details are described in each TROUBLE DIAGNOSIS FOR DTC PXXXX.
- \*2: • The "OVERALL FUNCTION CHECK" is a simplified and effective way to inspect a component or circuit.  
In some cases, the "OVERALL FUNCTION CHECK" is used rather than a "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE".  
When no DTC CONFIRMATION PROCEDURE is available, the "NG" result of the OVERALL FUNCTION CHECK can be considered to mean the same as a DTC detection.
- During an "NG" OVERALL FUNCTION CHECK, the DTC might not be confirmed.
  - This is Quick Reference of "OVERALL FUNCTION CHECK".  
Details are described in each TROUBLE DIAGNOSIS FOR DTC PXXXX.

GI

MA

EM

LC

**EC**

EE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

DX

# TROUBLE DIAGNOSIS — General Description

## Diagnostic Trouble Code (DTC) Chart (Cont'd)

### ENGINE RELATED ITEMS

Diagnostic trouble code No.		Detected items (Screen terms for CONSULT, "SELF-DIAG RESULTS" mode)	Malfunction is detected when ...
CONSULT GST	MIL		
P0500	0104	Vehicle speed sensor circuit (VEHICLE SPEED SEN)	<ul style="list-style-type: none"> <li>The almost 0 km/h (0 MPH) signal from the sensor is sent to ECM even when vehicle is driving.</li> </ul>
P0505	0205	Idle speed control function (IACV-AAC VALVE)	<ul style="list-style-type: none"> <li>The idle speed control function does not operate properly.</li> </ul>
P0600 (*5)	—	Signal circuit from A/T control unit to ECM (A/T COMM LINE)	<ul style="list-style-type: none"> <li>ECM receives incorrect voltage from A/T control unit continuously.</li> <li>* This DTC can be detected using "DATA MONITOR (AUTO TRIG)" with CONSULT.</li> </ul>
P0605	0301	ECM (ECM)	<ul style="list-style-type: none"> <li>ECM calculation function is malfunctioning.</li> </ul>
P0705	1003	Park/Neutral position switch circuit (PARK/NEUT POSI SW)	<ul style="list-style-type: none"> <li>The signal of the park/neutral position switch is not changed in the process of engine starting and driving.</li> </ul>
P1150 (*4)	1306	Wastegate valve control solenoid valve circuit (Right bank) (W/G CONT S/V-BANK1)	<ul style="list-style-type: none"> <li>An excessively low or high voltage signal from the wastegate valve control solenoid valve for right bank is sent to ECM.</li> </ul>
P1155 (*4)	1307	Wastegate valve control solenoid valve circuit (Left bank) (W/G CONT S/V-BANK2)	<ul style="list-style-type: none"> <li>An excessively low or high voltage signal from the wastegate valve control solenoid valve for left bank is sent to ECM.</li> </ul>
P1160	0206	Turbocharger boost sensor circuit (TURBO BOOST SENSOR)	<ul style="list-style-type: none"> <li>An excessively low or high voltage from the sensor is sent to ECM.</li> <li>There is little difference between the sensor output voltage when under high boost pressure conditions and when under low boost pressure conditions.</li> </ul>

**Note: A dead (weak) battery will reduce the accuracy of the on board diagnosis and may cause the MIL to light up without any malfunctions.**

#### Abbreviations for Quick Reference of "DTC CONFIRMATION PROCEDURE"

IGN: ON : Turning the ignition switch ON is required for checking the function of the sensor, switch, solenoid and circuit.

RUNNING : Running engine is required for checking the function of the sensor, switch, solenoid and circuit.

LIFTING : Lifting up the vehicle, running engine and spinning wheels are required.

DRIVING : Driving the vehicle in the specified pattern is required.

#### Abbreviations for Quick Reference of "OVERALL FUNCTION CHECK"

IGN: ON : Turning the ignition switch ON is required for the ECM to detect a malfunction (if one exists).

RUNNING : Running engine is required for the ECM to detect a malfunction (if one exists).

LIFTING : Lifting up the vehicle, running engine and spinning wheels are required for the ECM to detect a malfunction (if one exists).

DRIVING : Driving the vehicle in the specified pattern is required for the ECM to detect a malfunction (if one exists).

\*5: In case of this diagnostic item, the freeze frame data will not be stored in ECM.

This diagnosis does not have the 2 trip detection logic, and will not light up the MIL.

# TROUBLE DIAGNOSIS — General Description

## Diagnostic Trouble Code (DTC) Chart (Cont'd)

X: Applicable  
—: Not applicable

Check Items (Possible Cause)	"DTC CONFIRMATION PROCEDURE" Quick Ref. *1	"OVERALL FUNCTION CHECK" Quick Ref. *2	Fail Safe System	MIL Illumination	Reference Page	
<ul style="list-style-type: none"> <li>• Harness or connectors (The sensor circuit is open or shorted.)</li> <li>• Vehicle speed sensor</li> </ul>	DRIVING	LIFTING	—	2 trip	EC-233	GI MA
<ul style="list-style-type: none"> <li>• Harness or connectors (The IACV-AAC valve circuit is shorted.)</li> <li>• IACV-AAC valve</li> </ul>	IGN: ON	—	—	2 trip	EC-237	EM LC
<ul style="list-style-type: none"> <li>• Harness or connectors (The IACV-AAC valve circuit is open.)</li> <li>• IACV-AAC valve</li> </ul>	RUNNING	—	—	—	EC-241	EC
<ul style="list-style-type: none"> <li>• Harness or connectors (The circuit between ECM and A/T control unit is open or shorted.)</li> <li>• A/T control unit</li> </ul>	—	RUNNING	—	—	EC-244	FE
<ul style="list-style-type: none"> <li>• ECM (ECCS control module)</li> </ul>	RUNNING	—	X	2 trip	EC-246	CL
<ul style="list-style-type: none"> <li>• Harness or connectors (The switch circuit is open or shorted.)</li> <li>• Harness or connectors (The circuit between ECM and A/T control unit is open or shorted.)</li> <li>• Neutral position switch</li> <li>• Inhibitor switch</li> <li>• A/T control unit</li> </ul>	—	IGN: ON	—	2 trip	EC-250	MT AT
<ul style="list-style-type: none"> <li>• Harness or connectors (Wastegate valve control solenoid valve circuit is open or shorted.)</li> <li>• Wastegate valve control solenoid valve (Right bank).</li> </ul>	IGN: ON	—	—	—	EC-250	PD
<ul style="list-style-type: none"> <li>• Harness or connectors (Wastegate valve control solenoid valve circuit is open or shorted.)</li> <li>• Wastegate valve control solenoid valve (Left bank).</li> </ul>	IGN: ON	—	—	—	EC-254	EA RA
<ul style="list-style-type: none"> <li>• Harness or connectors (Turbocharger boost sensor circuit is open or shorted.)</li> <li>• Turbocharger boost sensor</li> </ul>	IGN: ON	—	—	2 trip	EC-254	BR ST
<ul style="list-style-type: none"> <li>• Harness or connectors (Turbocharger boost sensor circuit is open or shorted.)</li> <li>• Hose (Hose to the turbocharger boost sensor is disconnected or clogged.)</li> <li>• Intake system (Air leaks from intake air system.)</li> <li>• Exhaust system (Exhaust gas leaks from exhaust system.)</li> <li>• Turbocharger</li> <li>• Turbocharger boost sensor</li> </ul>	—	RUNNING	—	2 trip	EC-254	RS BT HA

\*1: • This is Quick Reference of "DTC CONFIRMATION PROCEDURE".

Details are described in each TROUBLE DIAGNOSIS FOR DTC PXXXX.

\*2: • The "OVERALL FUNCTION CHECK" is a simplified and effective way to inspect a component or circuit.

In some cases, the "OVERALL FUNCTION CHECK" is used rather than a "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE".

When no DTC CONFIRMATION PROCEDURE is available, the "NG" result of the OVERALL FUNCTION CHECK can be considered to mean the same as a DTC detection.

• During an "NG" OVERALL FUNCTION CHECK, the DTC might not be confirmed.

• This is Quick Reference of "OVERALL FUNCTION CHECK".

Details are described in each TROUBLE DIAGNOSIS FOR DTC PXXXX.

\*4: Freeze frame data is not stored in the ECM for these malfunctions. The MIL will not light up for these malfunctions.

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

EA

RA

BR

ST

RS

BT

HA

EL

DX

# TROUBLE DIAGNOSIS — General Description

## Diagnostic Trouble Code (DTC) Chart (Cont'd)

### ENGINE RELATED ITEMS

Diagnostic trouble code No.		Detected items (Screen terms for CONSULT, "SELF-DIAG RESULTS" mode)	Malfunction is detected when ...
CONSULT GST	MIL		
P1220	1305	FPCM circuit (FPCM)	<ul style="list-style-type: none"> <li>An improper voltage signal from the FPCM, which is supplied to the fuel pump, is detected by ECM.</li> </ul>
P1320	0201	Ignition signal circuit (IGN SIGNAL-PRIMARY)	<ul style="list-style-type: none"> <li>The ignition signal in the primary circuit is not sent to ECM during engine cranking or running.</li> </ul>
P1336	0905	Crankshaft position sensor (OBD) [CRANK P/S (OBD)-COG]	<ul style="list-style-type: none"> <li>Chipping of the drive plate (Flywheel) gear tooth (cog) is detected by ECM.</li> </ul>
P1400	1005	EGRC-solenoid valve (EGRC SOLENOID/V)	<ul style="list-style-type: none"> <li>An improper voltage signal is sent to ECM through the solenoid valve.</li> </ul>
P1401	0305	EGR temperature sensor circuit (EGR TEMP SENSOR)	<ul style="list-style-type: none"> <li>An excessively low or high voltage from the sensor is sent to ECM, even when engine coolant temperature is low or high.</li> </ul>
P1443	0113	Canister control vacuum check switch circuit (CAN CONT VC CHK SW)	<ul style="list-style-type: none"> <li>The canister control vacuum check switch remains "OFF" even though no vacuum is supplied to the EVAP canister purge control valve.</li> </ul>
P1605	0804	A/T diagnosis communication line (A/T DIAG COMM LINE)	<ul style="list-style-type: none"> <li>An incorrect signal from A/T control unit is sent to ECM.</li> </ul>
P1900	1308	Cooling fan circuit (COOLING FAN)	<ul style="list-style-type: none"> <li>Cooling fan does not operate properly. (Overheat)</li> <li>Cooling system does not operate properly. (Overheat)</li> <li>Engine coolant was not added to the system using the proper filling method.</li> </ul>

**Note: A dead (weak) battery will reduce the accuracy of the on board diagnosis and may cause the MIL to light up without any malfunctions.**

#### Abbreviations for Quick Reference of "DTC CONFIRMATION PROCEDURE"

IGN: ON : Turning the ignition switch ON is required for checking the function of the sensor, switch, solenoid and circuit.

RUNNING : Running engine is required for checking the function of the sensor, switch, solenoid and circuit.

LIFTING : Lifting up the vehicle, running engine and spinning wheels are required.

DRIVING : Driving the vehicle in the specified pattern is required.

#### Abbreviations for Quick Reference of "OVERALL FUNCTION CHECK"

IGN: ON : Turning the ignition switch ON is required for the ECM to detect a malfunction (if one exists).

RUNNING : Running engine is required for the ECM to detect a malfunction (if one exists).

LIFTING : Lifting up the vehicle, running engine and spinning wheels are required for the ECM to detect a malfunction (if one exists).

DRIVING : Driving the vehicle in the specified pattern is required for the ECM to detect a malfunction (if one exists).



# TROUBLE DIAGNOSIS — General Description

## Diagnostic Trouble Code (DTC) Chart (Cont'd)

X: Applicable  
—: Not applicable

Check Items (Possible Cause)	*1 “DTC CONFIRMATION PROCEDURE” Quick Ref.	*2 “OVERALL FUNCTION CHECK” Quick Ref.	Fail Safe System	MIL Illumination	Reference Page	
<ul style="list-style-type: none"> <li>• Harness or connectors (The FPCM circuit is open or shorted.)</li> <li>• FPCM</li> </ul>	—	RUNNING	—	2 trip	EC-260	GI NA
<ul style="list-style-type: none"> <li>• Harness or connectors (The primary ignition control circuit is open or shorted.)</li> <li>• Power transistor unit</li> <li>• Ignition coil</li> <li>• Camshaft position sensor</li> <li>• Camshaft position sensor circuit</li> </ul>	RUNNING	—	—	2 trip	EC-266	EM LC
<ul style="list-style-type: none"> <li>• Harness or connectors</li> <li>• Crankshaft position sensor (OBD)</li> <li>• Drive plate (Flywheel)</li> </ul>	RUNNING	—	—	2 trip	EC-275	EC
<ul style="list-style-type: none"> <li>• Harness or connectors (The EGRC-solenoid valve circuit is open or shorted.)</li> <li>• EGRC-solenoid valve</li> </ul>	—	IGN: ON	—	2 trip	EC-279	FE
<ul style="list-style-type: none"> <li>• Harness or connectors (The EGR temperature sensor circuit is open or shorted.)</li> <li>• EGR temperature sensor</li> <li>• Malfunction of EGR or EGRC-solenoid valve</li> </ul>	—	RUNNING	—	2 trip	EC-283	CL
<ul style="list-style-type: none"> <li>• Harness or connectors (The canister control vacuum check switch circuit is open.)</li> <li>• Hoses (Hoses are connected incorrectly.)</li> <li>• Throttle position sensor</li> <li>• Engine coolant temperature sensor</li> <li>• EVAP canister purge control solenoid valve</li> <li>• Canister control vacuum check switch</li> </ul>	RUNNING	—	—	2 trip	EC-288	MT AT
<ul style="list-style-type: none"> <li>• Harness or connectors (The communication line circuit is open or shorted.)</li> <li>• A/T control unit</li> <li>• Dead (Weak) battery</li> </ul>	IGN: ON	—	—	2 trip	EC-293	PD
<ul style="list-style-type: none"> <li>• Harness or connectors. (The cooling fan circuit is open or shorted.)</li> <li>• Cooling fan</li> <li>• Radiator hose</li> <li>• Radiator</li> <li>• Radiator cap</li> <li>• Water pump</li> <li>• Thermostat</li> </ul> <p>For more information, refer to “MAIN 12 CAUSES OF OVERHEATING”, (EC-309).</p>	—	IGN: ON (RUNNING)	—	2 trip	EC-296	FA RA BR

\*1: • This is Quick Reference of “DTC CONFIRMATION PROCEDURE”.

Details are described in each TROUBLE DIAGNOSIS FOR DTC PXXXX.

\*2: • The “OVERALL FUNCTION CHECK” is a simplified and effective way to inspect a component or circuit.

In some cases, the “OVERALL FUNCTION CHECK” is used rather than a “DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE”.

When no DTC CONFIRMATION PROCEDURE is available, the “NG” result of the OVERALL FUNCTION CHECK can be considered to mean the same as a DTC detection.

• During an “NG” OVERALL FUNCTION CHECK, the DTC might not be confirmed.

• This is Quick Reference of “OVERALL FUNCTION CHECK”.

Details are described in each TROUBLE DIAGNOSIS FOR DTC PXXXX.

## TROUBLE DIAGNOSIS — General Description

### Diagnostic Trouble Code (DTC) Chart (Cont'd)

**A/T RELATED ITEMS (Be sure to erase the DTC stored in ECM after the A/T related repair.)**

Diagnostic trouble code No.		Detected items  (Screen terms for CONSULT, "SELF-DIAG RESULTS" mode)	Malfunction is detected when ...
CONSULT GST	MIL		
P0705	1101	Inhibitor switch circuit (INHIBITOR SWITCH)	• A/T control unit does not receive the correct voltage signal from the switch based on the gear position.
P0710	1208	Fluid temperature sensor (FLUID TEMP SENSOR)	• A/T control unit receives an excessively low or high voltage from the sensor.
P0720	1102	Revolution sensor (VHCL SPEED SEN·A/T)	• A/T control unit does not receive the proper voltage signal from the sensor.
P0725	1207	Engine speed signal (ENGINE SPEED SIG)	• A/T control unit does not receive the proper voltage signal from the ECM.
P0731	1103	Improper shifting to 1st gear position (A/T 1ST SIGNAL)	• A/T cannot be shifted to the 1st gear position even electrical circuit is good.
P0732	1104	Improper shifting to 2nd gear position (A/T 2ND SIGNAL)	• A/T cannot be shifted to the 2nd gear position even electrical circuit is good.
P0733	1105	Improper shifting to 3rd gear position (A/T 3RD SIGNAL)	• A/T cannot be shifted to the 3rd gear position even electrical circuit is good.
P0734	1106	Improper shifting to 4th gear position or TCC (A/T 4TH SIGNAL OR TCC)	• A/T cannot be shifted to the 4th gear position or perform lock-up even electrical circuit is good.
P0740	1204	T/C clutch solenoid valve (TOR CONV CLUTCH SV)	• A/T control unit detects the improper voltage drop when it tries to operate the solenoid valve.
P0745	1205	Line pressure solenoid valve (LINE PRESSURE S/V)	• A/T control unit detects the improper voltage drop when it tries to operate the solenoid valve.
P0750	1108	Shift solenoid valve A (SHIFT SOLENOID/V A)	• A/T control unit detects the improper voltage drop when it tries to operate the solenoid valve.
P0755	1201	Shift solenoid valve B (SHIFT SOLENOID/V B)	• A/T control unit detects the improper voltage drop when it tries to operate the solenoid valve.
P1705	1206	Throttle position sensor Throttle position switch (THRTL POSI SEN·A/T)	• A/T control unit receives an excessively low or high voltage from the sensor.
P1760	1203	Overrun clutch solenoid valve (OVERRUN CLUTCH S/V)	• A/T control unit detects the improper voltage drop when it tries to operate the solenoid valve.

\*1: DRIVING pattern 1-6 means as follows:

- Pattern 1 should meet b and c.
- Pattern 2 should meet a and c.
- Pattern 3 should meet a through e.
- Pattern 4 should meet a and b.
- Pattern 5 should meet a through c.
- Pattern 6 should meet a through d.

a: Selector lever is in "D" position.

b: Vehicle speed is over 10 km/h (6 MPH).

c: Throttle opening is over 1/8.

d: Engine speed is over 450 rpm.

e: A/T fluid temperature is 20 - 120°C (68 - 248°F).

\*: For details, refer to each DTC CONFIRMATION PROCEDURE in AT section.

# TROUBLE DIAGNOSIS — General Description

## Diagnostic Trouble Code (DTC) Chart (Cont'd)

X: Applicable  
—: Not applicable

Check Items (Possible Cause)	“DTC CONFIRMATION PROCEDURE” Quick Ref.	“OVERALL FUNCTION CHECK” Quick Ref.	Fail Safe System	MIL Illumination	Reference Page
<ul style="list-style-type: none"> <li>• Harness or connectors (The switch circuit is open or shorted.)</li> <li>• Inhibitor switch</li> </ul>	DRIVING (pattern 1)	—	—	2 trip	See “Self-diagnosis”, “TROUBLE DIAGNOSES” in AT section.
<ul style="list-style-type: none"> <li>• Harness or connectors (The sensor circuit is open or shorted.)</li> <li>• Fluid temperature sensor</li> </ul>	DRIVING (pattern 6)	—	X	2 trip	
<ul style="list-style-type: none"> <li>• Harness or connectors (The sensor circuit is open or shorted.)</li> <li>• Revolution sensor</li> </ul>	DRIVING (pattern 2)	—	X	2 trip	
<ul style="list-style-type: none"> <li>• Harness or connectors (The signal circuit is open or shorted.)</li> </ul>	DRIVING (pattern 5)	—	X	2 trip	
<ul style="list-style-type: none"> <li>• Shift solenoid valve A</li> <li>• Shift solenoid valve B</li> <li>• Overrun clutch solenoid valve</li> <li>• Line pressure solenoid valve</li> <li>• Each clutch</li> <li>• Hydraulic control circuit</li> </ul>	DRIVING (pattern 3)	—	—	2 trip	
<ul style="list-style-type: none"> <li>• T/C clutch solenoid valve</li> </ul>					
<ul style="list-style-type: none"> <li>• Harness or connectors (The solenoid circuit is open or shorted.)</li> <li>• T/C clutch solenoid valve</li> </ul>	IGN: ON	—	X	2 trip	
<ul style="list-style-type: none"> <li>• Harness or connectors (The solenoid circuit is open or shorted.)</li> <li>• Line pressure solenoid valve</li> </ul>	IGN: ON	—	X	2 trip	
<ul style="list-style-type: none"> <li>• Harness or connectors (The solenoid circuit is open or shorted.)</li> <li>• Shift solenoid valve A</li> </ul>	IGN: ON	—	X	2 trip	
<ul style="list-style-type: none"> <li>• Harness or connectors (The solenoid circuit is open or shorted.)</li> <li>• Shift solenoid valve B</li> </ul>	IGN: ON	—	X	2 trip	
<ul style="list-style-type: none"> <li>• Harness or connectors (The sensor circuit is open or shorted.)</li> <li>• Throttle position sensor</li> <li>• Throttle position switch</li> </ul>	DRIVING (pattern 4)	—	X	2 trip	
<ul style="list-style-type: none"> <li>• Harness or connectors (The solenoid circuit is open or shorted.)</li> <li>• Overrun clutch solenoid valve</li> </ul>	IGN: ON	—	X	2 trip	

\*1: • This is Quick Reference of “DTC CONFIRMATION PROCEDURE”.  
Details are described in each TROUBLE DIAGNOSIS FOR DTC PXXXX.

\*2: • The “OVERALL FUNCTION CHECK” is a simplified and effective way to inspect a component or circuit.  
In some cases, the “OVERALL FUNCTION CHECK” is used rather than a “DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE”.  
When no DTC CONFIRMATION PROCEDURE is available, the “NG” result of the OVERALL FUNCTION CHECK can be considered to mean the same as a DTC detection.

- During an “NG” OVERALL FUNCTION CHECK, the DTC might not be confirmed.
- This is Quick Reference of “OVERALL FUNCTION CHECK”.  
Details are described in each TROUBLE DIAGNOSIS FOR DTC PXXXX.

GI  
MA  
EM  
LC  
**EC**  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

## TROUBLE DIAGNOSIS — General Description

### Diagnostic Trouble Code (DTC) Chart (Cont'd)

#### INSPECTION PRIORITY

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	Detected items (DTC)		
1	<ul style="list-style-type: none"> <li>• ECM (P0605, 0301)</li> <li>• Mass air flow sensor circuit (P0100, 0102)</li> <li>• Throttle position sensor circuit (P0120, 0403)</li> <li>• EGRC-solenoid valve circuit (P1400, 1005)</li> <li>• A/T diagnosis communication line (P1605, 0804)</li> <li>• Wastegate valve control solenoid valve circuit (P1150, 1306) (P1155, 1307)</li> </ul>	<ul style="list-style-type: none"> <li>• Camshaft position sensor circuit (P0340, 0101)</li> <li>• Vehicle speed sensor circuit (P0500, 0104)</li> <li>• Intake air temperature sensor circuit (P0110, 0401)</li> <li>• Knock sensor circuit (P0325, 0304)</li> <li>• Crankshaft position sensor (OBD) circuit (P0335, 0802) (P1336, 0905)</li> <li>• Turbocharger boost sensor circuit (P1160, 0206)</li> </ul>	<ul style="list-style-type: none"> <li>• Engine coolant temperature sensor circuit (P0115, 0103) (P0125, 0908)</li> <li>• Ignition signal circuit (P1320, 0201)</li> <li>• Park/Neutral position switch circuit (P0705, 1003)</li> <li>• Canister control vacuum check switch circuit (P1443, 1505)</li> <li>• Fuel temperature sensor circuit (P0180, 0402)</li> </ul>
2	<ul style="list-style-type: none"> <li>• EGR temperature sensor circuit (P1401, 0305)</li> <li>• EVAP canister purge control solenoid valve circuit (P0443, 0807)</li> <li>• A/T related sensors, solenoid valves and switches (P0705-P0710, 1101-1208)</li> </ul>	<ul style="list-style-type: none"> <li>• Front heated oxygen sensor heater circuit (P0135, 0901) (P0155, 1001)</li> <li>• Cooling fan circuit (P1900, 1308)</li> </ul>	<ul style="list-style-type: none"> <li>• Front heated oxygen sensor circuit (P0130, 0503) (P0150, 0303)</li> <li>• Rear heated oxygen sensor circuit (P0136, 0707) (P0156, 0708)</li> <li>• Rear heated oxygen sensor heater circuit (P0141, 0902) (P0161, 1002)</li> </ul>
3	<ul style="list-style-type: none"> <li>• EGR function (P0400, 0302)</li> <li>• IACV-AAC valve circuit (P0505, 0205)</li> </ul>	<ul style="list-style-type: none"> <li>• Misfire (P0306 - P0300, 0603 - 0701)</li> <li>• Closed loop control (P0130, 0307) (P0150, 0308)</li> <li>• Improper shifting (P0731 - P0734, 1103 - 1106)</li> <li>• Fuel pump control module (FPCM) circuit (P1220, 1305)</li> </ul>	<ul style="list-style-type: none"> <li>• Fuel injection system function (P0172, 0114), (P0171, 0115), (P0175, 0209), (P0174, 0210)</li> <li>• Three way catalyst function (P0420, 0702) (P0430, 0703)</li> <li>• Signal circuit from A/T control unit to ECM (P0600)</li> </ul>

# TROUBLE DIAGNOSIS — General Description

## Fail-Safe Chart

The ECM enters fail-safe mode, if any of the following DTCs is recorded due to the open or short circuit.

DTC No.		Detected items	Engine operating condition in fail-safe mode									
CONSULT GST	MIL											
P0100	0102	Mass air flow sensor circuit	Engine speed will not rise more than 2,400 rpm due to the fuel cut.									
P0115	0103	Engine coolant temperature sensor circuit	Engine coolant temperature will be determined based on the time after turning ignition switch "ON" or "START". <table border="1" style="width: 100%; margin-top: 10px;"> <thead> <tr> <th style="text-align: center;">Condition</th> <th style="text-align: center;">Engine coolant temperature decided</th> </tr> </thead> <tbody> <tr> <td>Just as ignition switch is turned ON or Start</td> <td style="text-align: center;">40°C (104°F)</td> </tr> <tr> <td>More than 4 minutes after ignition Start</td> <td style="text-align: center;">80°C (176°F)</td> </tr> <tr> <td>Except as shown above</td> <td style="text-align: center;">40 - 80°C (104 - 176°F) (Depends on the time)</td> </tr> </tbody> </table>		Condition	Engine coolant temperature decided	Just as ignition switch is turned ON or Start	40°C (104°F)	More than 4 minutes after ignition Start	80°C (176°F)	Except as shown above	40 - 80°C (104 - 176°F) (Depends on the time)
Condition	Engine coolant temperature decided											
Just as ignition switch is turned ON or Start	40°C (104°F)											
More than 4 minutes after ignition Start	80°C (176°F)											
Except as shown above	40 - 80°C (104 - 176°F) (Depends on the time)											
P0120	0403	Throttle position sensor circuit	Throttle position will be determined based on the amount of mass air flow and the engine speed. Therefore, acceleration will be poor. <table border="1" style="width: 100%; margin-top: 10px;"> <thead> <tr> <th style="text-align: center;">Driving condition</th> </tr> </thead> <tbody> <tr> <td>When engine is idling</td> <td style="text-align: center;">Normal</td> </tr> <tr> <td>When accelerating</td> <td style="text-align: center;">Poor acceleration</td> </tr> </tbody> </table>		Driving condition	When engine is idling	Normal	When accelerating	Poor acceleration			
Driving condition												
When engine is idling	Normal											
When accelerating	Poor acceleration											
P0180	0402	Fuel temperature sensor circuit	Fuel temperature will be determined based on the time after turning ignition switch "ON" or "START". <table border="1" style="width: 100%; margin-top: 10px;"> <thead> <tr> <th style="text-align: center;">Condition</th> <th style="text-align: center;">Fuel temperature decided</th> </tr> </thead> <tbody> <tr> <td>Just as ignition switch is turned ON or Start</td> <td style="text-align: center;">40°C (104°F)</td> </tr> <tr> <td>More than 4 minutes after ignition Start</td> <td style="text-align: center;">80°C (176°F)</td> </tr> <tr> <td>Except as shown above</td> <td style="text-align: center;">40 - 80°C (104 - 176°F) (Depends on the time)</td> </tr> </tbody> </table>		Condition	Fuel temperature decided	Just as ignition switch is turned ON or Start	40°C (104°F)	More than 4 minutes after ignition Start	80°C (176°F)	Except as shown above	40 - 80°C (104 - 176°F) (Depends on the time)
Condition	Fuel temperature decided											
Just as ignition switch is turned ON or Start	40°C (104°F)											
More than 4 minutes after ignition Start	80°C (176°F)											
Except as shown above	40 - 80°C (104 - 176°F) (Depends on the time)											
—	—	Start signal circuit	If the ECM always receives a start signal, the ECM will judge the start signal "OFF" when engine speed is above 1,000 rpm. This prevents extra enrichment. After the engine speed is below 200 rpm, start-up enrichment will be allowed until the engine speed reaches 1,000 rpm.									

GI  
 MA  
 EM  
 LC  
**EC**  
 FE  
 CL  
 MT  
 AT  
 PD  
 FA  
 RA  
 BR  
 ST  
 RS  
 BT  
 HA  
 EL  
 DX

# TROUBLE DIAGNOSIS — General Description

## Fail-Safe Chart (Cont'd)

DTC No.		Detected items	Engine operating condition in fail-safe mode														
CONSULT GST	MIL																
—	—	ECM	<p><b>Fail-safe system activating condition when ECM is malfunctioning</b>                      The computing function of the ECM was judged to be malfunctioning.                      When the fail-safe system activates, i.e. if the ECM detects a malfunction condition in the CPU of ECM, the MALFUNCTION INDICATOR LAMP on the instrument panel lights to warn the driver.</p> <p><b>Engine control, with fail-safe system, operates when ECM is malfunctioning</b>                      When the fail-safe system is operating, fuel injection, ignition timing, fuel pump operation, IACV-AAC valve operation and cooling fan operation are controlled under certain limitations.</p> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <thead> <tr> <th colspan="2" style="text-align: center;">Operation</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;"><b>Engine speed</b></td> <td style="text-align: center;"><b>Engine speed will not rise more than 3,000 rpm.</b></td> </tr> <tr> <td style="text-align: center;">Fuel injection</td> <td style="text-align: center;">Simultaneous multiport fuel injection system</td> </tr> <tr> <td style="text-align: center;">Ignition timing</td> <td style="text-align: center;">Ignition timing is fixed at the preset value.</td> </tr> <tr> <td style="text-align: center;">Fuel pump</td> <td style="text-align: center;">Fuel pump relay is "ON" when engine is running and "OFF" when engine stalls.</td> </tr> <tr> <td style="text-align: center;">IACV-AAC valve</td> <td style="text-align: center;">Fully open</td> </tr> <tr> <td style="text-align: center;">Cooling fan</td> <td style="text-align: center;">Cooling fan relay "ON" when engine is running, and "OFF" when engine stalls.</td> </tr> </tbody> </table>	Operation		<b>Engine speed</b>	<b>Engine speed will not rise more than 3,000 rpm.</b>	Fuel injection	Simultaneous multiport fuel injection system	Ignition timing	Ignition timing is fixed at the preset value.	Fuel pump	Fuel pump relay is "ON" when engine is running and "OFF" when engine stalls.	IACV-AAC valve	Fully open	Cooling fan	Cooling fan relay "ON" when engine is running, and "OFF" when engine stalls.
Operation																	
<b>Engine speed</b>	<b>Engine speed will not rise more than 3,000 rpm.</b>																
Fuel injection	Simultaneous multiport fuel injection system																
Ignition timing	Ignition timing is fixed at the preset value.																
Fuel pump	Fuel pump relay is "ON" when engine is running and "OFF" when engine stalls.																
IACV-AAC valve	Fully open																
Cooling fan	Cooling fan relay "ON" when engine is running, and "OFF" when engine stalls.																

# TROUBLE DIAGNOSIS — General Description

## Symptom Matrix Chart

SYSTEM — Basic engine control system		SYMPTOM												Reference page	
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEAT/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION		BATTERY DEAD (UNDER CHARGE)
		AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM		HA
Fuel	Fuel pump circuit	●	●	●	○	●		○	○			○		EC-260, 316	
	Fuel pressure regulator system	●	●	○	○	○	○	○	○			○		EC-26	
	Injector circuit	●	●	●	○	●		●	●			●		EC-311	
	Evaporative emission system	○	○	○	○	○	○	○	○	○		○		EC-23	
Air	Positive crankcase ventilation system	○	○	○	○	○	○	○	○	○		○	○	EC-25	
	Incorrect idle speed adjustment	○	○				●	○	○	●		○		EC-30	
	IACV-AAC valve circuit	●	●				●	●	●	●				EC-237	
	IACV-FICD solenoid valve circuit		○				●	○	○	●				EC-333	
Ignition	Incorrect ignition timing adjustment	○	○	●	●	●		●	●			●		EC-30	
	Ignition circuit	●	●	●	●	●		●	●			●		EC-266	
EGR	EGRC-solenoid valve circuit	○	○	●	○	○						○		EC-279	
	EGR system	○	○	●	●	○	○	●	●	○		○		EC-211	
Main power supply and ground circuit		●	○	○	○	○		●	●		○	○	○	EC-103	
Cooling	Cooling fan circuit	○	○	○	○	○	○	○	○	○	●	○	○	EC-296	
Air conditioner circuit		○	○	○	○	○	○	○	○	○		○	○	HA section	

● ; High Possibility Item  
○ ; Low Possibility Item

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

DX

# TROUBLE DIAGNOSIS — General Description

## Symptom Matrix Chart (Cont'd)

SYSTEM — ECCS system		SYMPTOM												Reference page	
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION		BATTERY DEAD (UNDER CHARGE)
		AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM		HA
ECCS	Camshaft position sensor circuit	●												EC-206	
	Mass air flow sensor circuit	●	●	●	○	●		●	●			●		EC-108	
	Front heated oxygen sensor circuit		○	●	○	●		●	●			●		EC-133, 150	
	Engine coolant temperature sensor circuit	●	●	●	○	○	○	●	●	○		○		EC-118, 127	
	Throttle position sensor circuit		●	●		●	○	●	●	○		●		EC-122	
	Incorrect throttle position sensor adjustment		●	○		○	●	○	○	●		○		EC-67	
	Vehicle speed sensor circuit		○	○		○						○		EC-233	
	Knock sensor circuit			●	○	○						○		EC-199	
	ECM	○	○	○	○	○	○	○	○	○	○	○		EC-85, 244	
	Start signal circuit	○												EC-314	
	Park/Neutral position switch circuit			○		○		○	○			○		EC-246	
	Power steering oil pressure switch circuit		○					○	○					EC-330	

● ; High Possibility Item  
○ ; Low Possibility Item



# TROUBLE DIAGNOSIS — General Description

## Symptom Matrix Chart (Cont'd)

SYSTEM — Engine mechanical & other		SYMPTOM													Reference page							
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)								
		AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	HA								
Fuel	Fuel tank	○	○												—	EC						
	Fuel piping	●	○	○	○	○		○	○			○					—	FE				
	Vapor lock		○																—	CL		
	Valve deposit	○	○	○	○	○		○	○			○									—	MT
	Poor fuel (Heavy weight gasoline, Low octane)	○	○	○	○	○		○	○			○										
Air	Air duct		○	○				○	○			○		—	PD							
Air cleaner		○	○					○	○			○				AT section	FA					
Air leakage from air duct (Mass air flow sensor — throttle body)	○	○	○	○	○	○	○	○	○			○						—	BR			
Throttle body, Throttle wire	●	●	●		●	●	○	○	●			○								ST	RS	
Air leakage from intake manifold/Collector/Gasket	●	●	●	○	●	○	●	●	○			●										EL section
Cranking	Battery	○	○	○				○	○			○	○	—	HA							
Alternator circuit	○	○	○					○	○			○	○			EL section	EL					
Starter circuit	●																	—	EC			
Drive plate (Flywheel)	●																			FE section	CL	
Inhibitor switch	●																					AT section
Theft warning circuit	○													EL section	AT							
Engine	Cylinder head	●	○	●	○	●		●	●			○				—	FA					
Cylinder head gasket	○	○	●	●	●		●	●			○	○	○					RA	RA			
Cylinder block	●	●	○	○	○		○	○			○	○	○							—	BR	
Piston	●	○	○	○	○		○	○			○	○	○									ST
Piston ring	●	○	○	○	○		○	○			○	○	○	—	RS							
Connecting rod	○	○	○	○	○		○	○			○	○	○			BT	BT					
Bearing	●	●	○	○	○		○	○			○	○	○					—	HA			
Crankshaft	●	●	○	○	○		○	○			○	○	○							EL section	EL	
Valve mechanism	Timing belt	●	●	●	○	●		●	●			○										—
Camshaft	○	●	●	○	●		●	●			○			FE section	CL							
Intake valve	●	○	○	○	●		●	●			○	○				AT section	MT					
Exhaust valve	○	○	○	○	○		○	○			○	○						EL section	AT			
Exhaust	Exhaust manifold/Tube/Muffler/Gasket	●	●	●	●	○		●	●			○	○							—	PD	
Three way catalyst	○	○	○	○	○		○	○			○											AT section
Lubrication	Oil pan/Oil strainer/Oil pump/Oil filter/Oil gallery	●	●	○	○	○		●	●			○	●	—	BR							
Oil level (Low)/Filthy oil	○	○	○	○	○		○	○			○	○				ST	ST					
Cooling	Radiator/Hose/Radiator filler cap	○	○	○	○	○		○	○			○	○					—	RS			
Thermostat	○	○	○	○	○	○		○	○	○		○	○							BT	BT	
Water pump	○	○	○	○	○	○		○	○			○	○									—
Water gallery	○	○	○	○	○		○	○			○	○	○	EL section	EL							
Cooling fan	○	○	○	○	○	○		○	○	○		○	○			—	EC					
Coolant level (low)/Contaminated coolant	○	○	○	○	○	○		○	○			○	○					FE section	CL			

● ; High Possibility Item  
○ ; Low Possibility Item

GI  
 MA  
 EM  
 LC  
**EC**  
 FE  
 CL  
 MT  
 AT  
 PD  
 FA  
 RA  
 BR  
 ST  
 RS  
 BT  
 HA  
 EL  
 IDX

## CONSULT Reference Value in Data Monitor Mode

**Remarks:**

- Specification data are reference values.
- Specification data are output/input values which are detected or supplied by the ECM at the connector.
- \* Specification data may not be directly related to their components signals/values/operations.
- i.e. Adjust ignition timing with a timing light before monitoring IGN TIMING, because the monitor may show the specification data in spite of the ignition timing not being adjusted to the specification data. This IGN TIMING monitors the data calculated by the ECM according to the signals input from the camshaft position sensor and other ignition timing related sensors.
- If the real-time diagnosis results are NG and the on board diagnostic system results are OK when diagnosing the mass air flow sensor, first check to see if the fuel pump control circuit is normal.

MONITOR ITEM	CONDITION		SPECIFICATION
CMPS-RPM (POS) ..... CMPS-RPM (REF)	<ul style="list-style-type: none"> <li>• Tachometer: Connect</li> <li>• Run engine and compare tachometer indication with the CONSULT value.</li> </ul>		Almost the same speed as the CONSULT value.
MAS AIR/FL SE	<ul style="list-style-type: none"> <li>• Engine: After warming up</li> <li>• Air conditioner switch: "OFF"</li> <li>• Shift lever: "N"</li> <li>• No-load</li> </ul>	Idle	1.0 - 1.7V
		2,000 rpm	1.5 - 2.1V
COOLAN TEMP/S	<ul style="list-style-type: none"> <li>• Engine: After warming up</li> </ul>		More than 70°C (158°F)
FR O2 SEN-B2 ..... FR O2 SEN-B1	<ul style="list-style-type: none"> <li>• Engine: After warming up</li> </ul>	Maintaining engine speed at 2,000 rpm	0 - 0.3V ↔ Approx. 0.6 - 1.0V
FR O2 MNTR-B2 ..... FR O2 MNTR-B1			LEAN ↔ RICH Changes more than 5 times during 10 seconds.
RR O2 SEN-B1 ..... RR O2 SEN-B2			0 - 0.3V ↔ Approx. 0.6 - 1.0V
RR O2 MNTR-B1 ..... RR O2 MNTR-B2			LEAN ↔ RICH
VHCL SPEED SE	<ul style="list-style-type: none"> <li>• Turn drive wheels and compare speedometer indication with the CONSULT value</li> </ul>		Almost the same speed as the CONSULT value
BATTERY VOLT	<ul style="list-style-type: none"> <li>• Ignition switch: ON (Engine stopped)</li> </ul>		11 - 14V
THRTL POS SEN	<ul style="list-style-type: none"> <li>• Ignition switch: ON (Engine stopped)</li> </ul>	Throttle valve: fully closed	0.35 - 0.65V
		Throttle valve: fully opened	Approx. 4.0V
EGR TEMP SEN	<ul style="list-style-type: none"> <li>• Engine: After warming up</li> </ul>		Less than 4.5V
START SIGNAL	<ul style="list-style-type: none"> <li>• Ignition switch: ON → START → ON</li> </ul>		OFF → ON → OFF
CLSD THL/P SW	<ul style="list-style-type: none"> <li>• Ignition switch: ON (Engine stopped)</li> </ul>	Throttle valve: Idle position	ON
		Throttle valve: Slightly open	OFF
AIR COND SIG	<ul style="list-style-type: none"> <li>• Engine: After warming up, idle the engine</li> </ul>	Air conditioner switch: "OFF"	OFF
		Air conditioner switch: "ON" (Compressor operates.)	ON
P/N POSI SW	<ul style="list-style-type: none"> <li>• Ignition switch: ON</li> </ul>	Shift lever: "P" or "N"	ON
		Except above	OFF
PW/ST SIGNAL	<ul style="list-style-type: none"> <li>• Engine: After warming up, idle the engine</li> </ul>	Steering wheel in neutral position (forward direction)	OFF
		The steering wheel is turned	ON
TURBO BST SEN	<ul style="list-style-type: none"> <li>• Engine: After warming up</li> </ul>	Idle	Approximately 2.7V
		Revvng engine up to 5,000 rpm from idle with wide open throttle.	Approximately 3.0V

## TROUBLE DIAGNOSIS — General Description

### CONSULT Reference Value in Data Monitor Mode (Cont'd)

MONITOR ITEM	CONDITION		SPECIFICATION	
IGNITION SW	• Ignition switch: ON → OFF		ON → OFF	
INJ PULSE-B2	<ul style="list-style-type: none"> <li>• Engine: After warming up</li> <li>• Air conditioner switch: "OFF"</li> <li>• Shift lever: "N"</li> <li>• No-load</li> </ul>	Idle	2.4 - 3.2 msec.	GI
INJ PULSE-B1		2,000 rpm	1.9 - 2.8 msec.	MA
B/FUEL SCHDL	ditto	Idle	1.0 - 1.6 msec	EM
		2,000 rpm	0.7 - 1.3 msec	
IGN TIMING	ditto	Idle	10° BTDC*1 15° BTDC*2	LC
		2,000 rpm	More than 25° BTDC	
IACV-AAC/V	ditto	Idle	10 - 50%	EC
		2,000 rpm	—	
A/F ALPHA-B2	<ul style="list-style-type: none"> <li>• Engine: After warming up</li> </ul>	Maintaining engine speed at 2,000 rpm	52 - 159%*1 50 - 159%*2	FE
A/F ALPHA-B1				
AIR COND RLY	• Air conditioner switch: OFF → ON		OFF → ON	
FUEL PUMP RLY	<ul style="list-style-type: none"> <li>• Ignition switch is turned ON (Operates for 5 seconds)</li> <li>• Engine running and cranking</li> </ul>		ON	CL
	Except as shown above		OFF	
COOLING FAN	<ul style="list-style-type: none"> <li>• After warming up engine, idle the engine.</li> <li>• Air conditioner switch: "OFF"</li> </ul>	Engine coolant temperature is 104°C (219°F) or less	OFF*1	MT
		Engine coolant temperature is 105°C (221°F) or more	ON*1	
	<ul style="list-style-type: none"> <li>• After warming up engine, idle the engine.</li> <li>• Air conditioner switch: "ON"</li> </ul>	Engine coolant temperature is 94°C (201°F) or less	OFF*2	AT
		Engine coolant temperature is between 95°C (203°F) and 99°C (210°F)	LOW*2	
		Engine coolant temperature is 100°C (212°F) or more	HIGH*2	PD
W/G SOL/V-B1	<ul style="list-style-type: none"> <li>• Engine: After warming up</li> </ul>	Idle	OFF	FA
W/G SOL/V-B2				
P/REG CONT/V	For 30 seconds after starting engine when fuel temperature is above 75°C (167°F)		ON	RA
	Except as shown above		OFF	
IACV FICD S/V	Engine: Running	Air conditioner switch: OFF	OFF	BR
		Air conditioner switch: ON (Compressor operates)	ON	
EGRC SOL/V	<ul style="list-style-type: none"> <li>• Engine: After warming up</li> <li>• Air conditioner switch: "OFF"</li> <li>• Shift lever: "N"</li> <li>• No-load</li> </ul>	Idle	ON	ST
		Engine speed is 2,000 rpm.	OFF	
CAN CON VC SW	<ul style="list-style-type: none"> <li>• Engine: After warming up</li> </ul>	Idle	ON	RS
PURG CONT S/V	• Ignition switch: ON		OFF	
FR O2 HTR-B1	• Engine speed: Idle		ON	
FR O2 HTR-B2	• Engine speed: Above 2,900 rpm*1, Above 2,800 rpm*2		OFF	BT
RR O2 HTR-B1	• Engine speed: Idle		ON	
RR O2 HTR-B2	• Engine speed: Above 3,600 rpm		OFF	HA
CAL/LD VALUE	<ul style="list-style-type: none"> <li>• Engine: After warming up</li> <li>• Air conditioner switch: "OFF"</li> <li>• Shift lever: "N"</li> <li>• No-load</li> </ul>	Idle	M/T	14.1 - 29.3%*1 12.6 - 26.4%*2
			A/T	15.3 - 32.0%*1 13.9 - 29.1%*2
		2,500 rpm	M/T	13.6 - 26.6%*1 10.1 - 19.8%*2
			A/T	14.1 - 27.5%*1 10.0 - 19.5%*2
ABSOL TH-P/S	<ul style="list-style-type: none"> <li>• Ignition switch: ON (Engine stopped)</li> </ul>	Throttle valve: fully closed	0.0%	IDX
		Throttle valve: fully opened	Approx. 88%	

\*1: Non-turbocharger models

\*2: Turbocharger models

## TROUBLE DIAGNOSIS — General Description

### CONSULT Reference Value in Data Monitor Mode (Cont'd)

MONITOR ITEM	CONDITION		SPECIFICATION	
MASS AIRFLOW	<ul style="list-style-type: none"> <li>• Engine: After warming up</li> <li>• Air conditioner switch: "OFF"</li> <li>• Shift lever: "N"</li> <li>• No-load</li> </ul>	Idle	M/T	2.3 - 4.8 g·m/sec*1    2.6 - 5.3 g·m/sec*2
			A/T	2.9 - 6.0 g·m/sec*1    2.9 - 6.0 g·m/sec*2
		2,500 rpm	M/T	7.9 - 15.5 g·m/sec*1    9.3 - 18.1 g·m/sec*2
			A/T	8.7 - 16.9 g·m/sec*1    8.8 - 17.2 g·m/sec*2
FPCM	ditto	Within 30 seconds after starting engine	HI*1	
		For a period of 10 seconds, 30 seconds after starting engine	HI or LOW*1	
		More than 40 seconds after starting engine	LOW*1	
		Within 5 seconds after starting engine	MID*2	
		For a period of 10 seconds, 5 seconds after starting engine	LOW, MID or HI*2	
		More than 15 seconds after starting engine	LOW*2	

\*1: Non-turbocharger models

\*2: Turbocharger models


**Major Sensor Reference Graph in Data Monitor Mode**

The following are the major sensor reference graphs in "DATA MONITOR" mode.  
(Select "HI SPEED" in "DATA MONITOR" with CONSULT.)

**THRTL POS SEN, ABSOL TH•P/S, CLSD THL/P SW**

Below is the data for "THRTL POS SEN", "ABSOL TH•P/S" and "CLSD THL/P SW" when depressing the accelerator pedal with the ignition switch "ON".


The signal of "THRTL POS SEN" and "ABSOL TH•P/S" should rise gradually without any intermittent drop or rise after "CLSD THL/P SW" is changed from "ON" to "OFF".

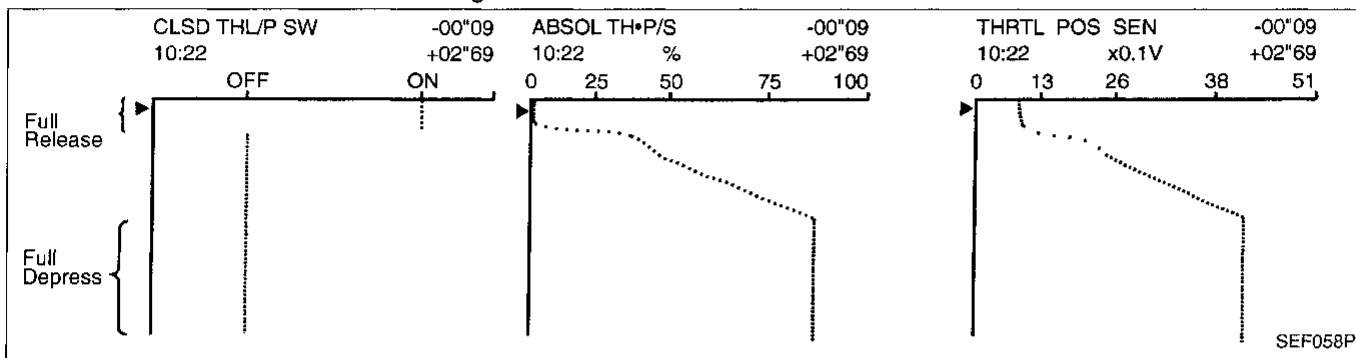

**CMPS•RPM (POS), MAS AIR/FL SE, THRTL POS SEN, RR O2 SEN-B1, FR O2 SEN-B1, INJ PULSE-B1**


Below is the data for "CMPS•RPM (POS)", "MAS AIR/FL SE", "THRTL POS SEN", "RR O2 SEN-B1", "FR O2 SEN-B1" and "INJ PULSE-B1" when revving engine quickly up to 4,800 rpm under no load after warming up engine sufficiently.

Each value is for reference, the exact value may vary.

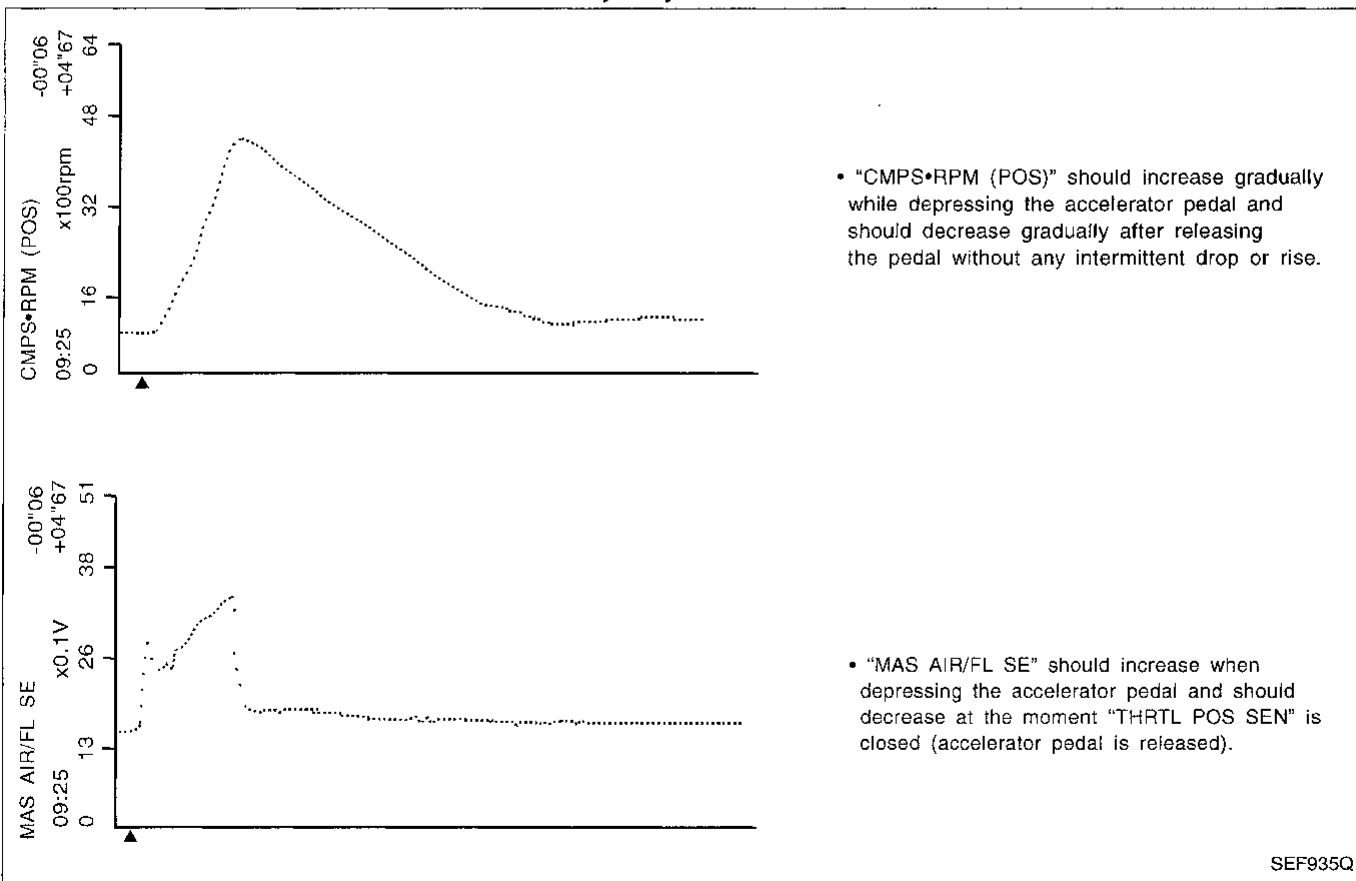


# TROUBLE DIAGNOSIS — General Description


## Major Sensor Reference Graph in Data Monitor Mode (Cont'd)

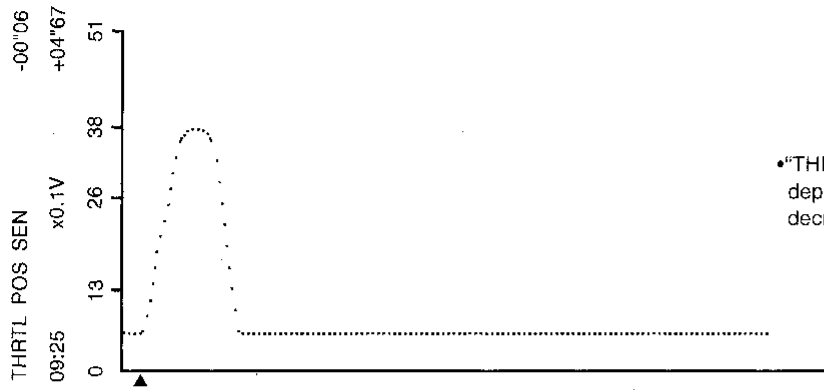


•“THRTL POS SEN” should increase while depressing the accelerator pedel and should decrease while releasing it.

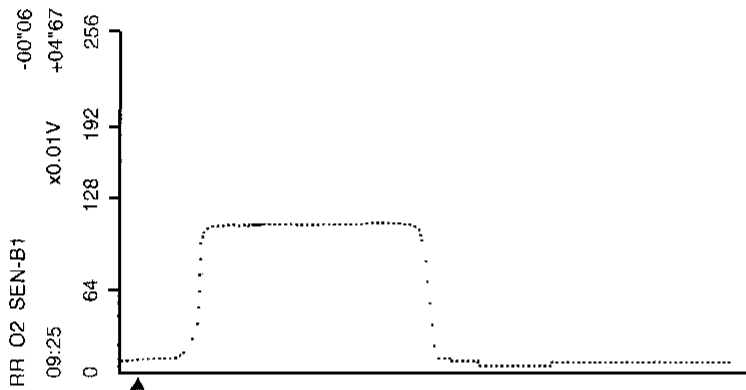


•“RR O2 SEN-B1” may increase immediately after depressing the accelerator pedel and may decrease after releasing the pedal.

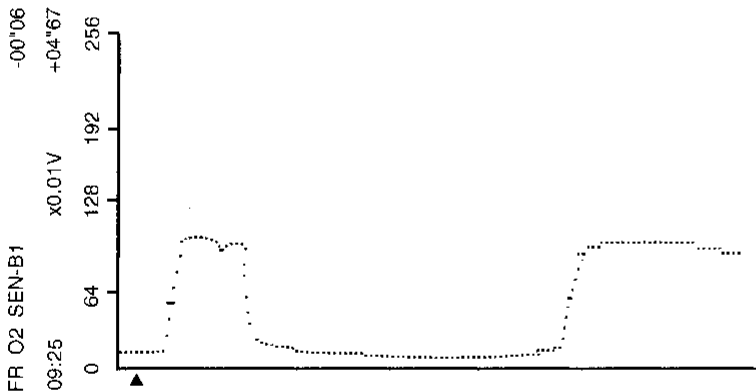

•“FR O2 SEN-B1” may increase immediately after depressing the accelerator pedel and may decrease after releasing the pedal.

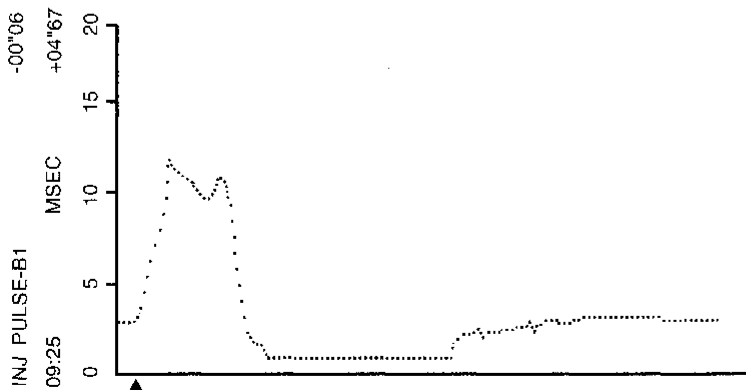

•“INJ PULSE-B1” should increase when depressing the accelerator pedel and should decrease when the pedal is released.

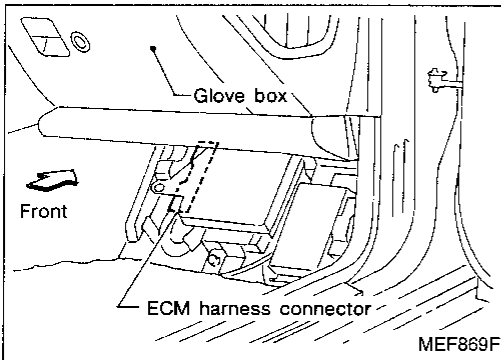

## ECM Terminals and Reference Value

### PREPARATION

1. ECM is located behind the front passenger side dash. For this inspection, remove the front passenger side dash.

GI

MA

EM

LC

**EC**

FE

CL

WT

AT

PD

FA

RA

BR

ST


RS

BT


HA

EL

IDX

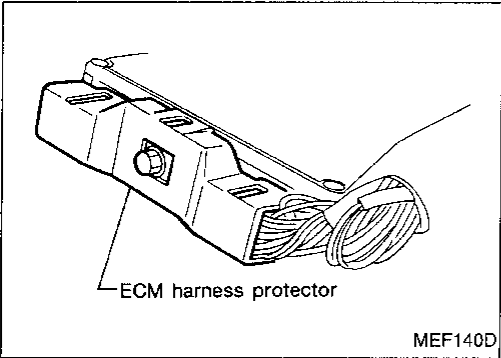


2. Remove ECM harness protector.

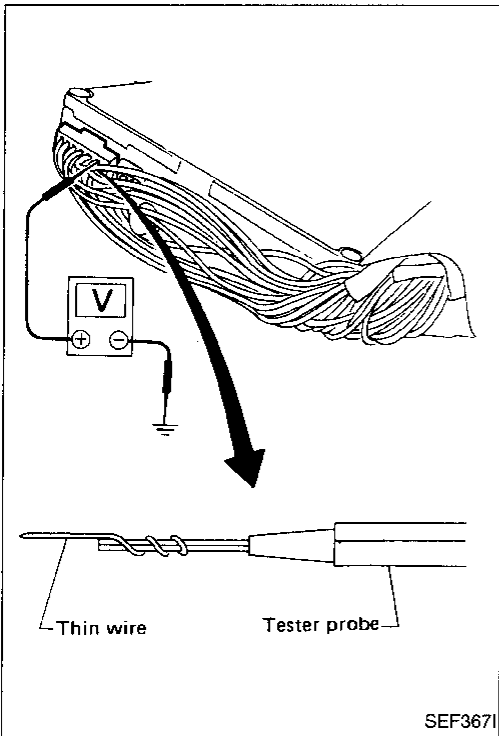

3. Perform all voltage measurements with the connectors connected. Extend tester probe as shown to perform tests easily.

### ECM HARNESS CONNECTOR TERMINAL LAYOUT

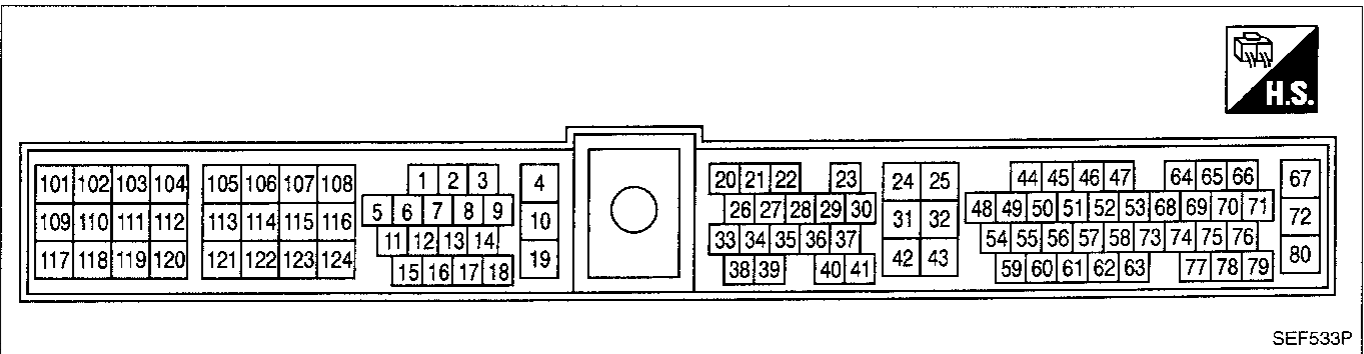

# TROUBLE DIAGNOSIS — General Description

## ECM Terminals and Reference Value (Cont'd)

### ECM INSPECTION TABLE

Remarks: Specification data are reference values, and are measured between each terminal and ②⑤ (ECCS ground) with a voltmeter.

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
1 2 3	L	Ignition signal (No. 1)	Engine is running. └ Idle speed	Approximately 0.4 - 0.5V★ (AC voltage)
	L/OR	Ignition signal (No. 2)	Engine is running.	Approximately 0.5 - 0.6V★ (AC voltage)
	L/R	Ignition signal (No. 3)	└ Engine speed is 2,000 rpm.	
4	OR	ECCS relay (Self-shutoff)	Engine is running. Ignition switch "OFF" └ For a few seconds after turning ignition switch "OFF"	0 - 1V
			Ignition switch "OFF" └ A few seconds passed after turning ignition switch "OFF"	BATTERY VOLTAGE (11 - 14V)
5	Y/R	Tachometer	Engine is running. └ Idle speed	Approximately 1V★
6	R	A/T diagnosis signal	Ignition switch "ON" Engine is running.	0 - 3.0V
7 8 9	L/W	Ignition signal (No. 4)	Engine is running. └ Idle speed	Approximately 0.4 - 0.5V★ (AC voltage)
	L/B	Ignition signal (No. 5)	Engine is running.	Approximately 0.5 - 0.6V★ (AC voltage)
	L/Y	Ignition signal (No. 6)	└ Engine speed is 2,000 rpm	
10	B	ECCS ground	Engine is running. └ Idle speed	Engine ground
11	B/P	Fuel pump relay	Ignition switch "ON" └ For 5 seconds after turning ignition switch "ON"	0 - 1V
			Engine is running. Ignition switch "ON" └ 5 seconds after turning ignition switch "ON"	BATTERY VOLTAGE (11 - 14V)
12	OR	Air conditioner relay	Engine is running. └ Air conditioner switch is "ON".	0 - 0.5V
			Engine is running. └ Air conditioner switch is "OFF".	BATTERY VOLTAGE (11 - 14V)
13	W	Cooling fan sub-relay (High speed)	Engine is running. └ Cooling fan is not operating. └ Cooling fan is operating at low speed.	BATTERY VOLTAGE (11 - 14V)
			Engine is running. └ Cooling fan is operating at high speed.	0 - 0.5V

★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)



## TROUBLE DIAGNOSIS — General Description

### ECM Terminals and Reference Value (Cont'd)

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)	
14	L	Cooling fan relay (Low speed)	Engine is running. └ Cooling fan is not operating.	BATTERY VOLTAGE (11 - 14V)	GI
			Engine is running. └ Cooling fan is operating.	0 - 0.5V	MA
15*1	B/P	Fuel pump control module (FPCM)	Engine is running. (Warm-up condition) └ Idle speed (Within 30 seconds after starting engine)	Approximately 5V	EM
			Engine is running. (Warm-up condition) └ Idle speed (For a period of 10 seconds, 30 seconds after starting engine)	Approximately 2 ↔ 5V	LC
			Engine is running. (Warm-up condition) └ Idle speed (More than 40 seconds after starting engine)	Approximately 2V	EC
15*2	B/P	Fuel pump control module (FPCM)	Engine is running. (Warm-up condition) └ Idle speed (Within 5 seconds after starting engine)	Approximately 5V	CL
			Engine is running. (Warm-up condition) └ Idle speed (For a period of 10 seconds, 5 seconds after starting engine)	Approximately 2 ↔ 5V	MT
			Engine is running. (Warm-up condition) └ Idle speed (More than 15 seconds after starting engine)	Approximately 2V	AT
16*2	PU	Fuel pump control module (FPCM)	Engine is running. (Warm-up condition) └ Idle speed (Within 5 seconds after starting engine)	Approximately 2V	PD
			Engine is running. (Warm-up condition) └ Idle speed (For a period of 10 seconds, 5 seconds after starting engine)	Approximately 2 ↔ 5V	FA
			Engine is running. (Warm-up condition) └ Idle speed (More than 15 seconds after starting engine)	Approximately 2V	FA
18	Y/G	Malfunction indicator lamp	Ignition switch "ON"	Approximately 0V	BR
			Engine is running. └ Idle speed	BATTERY VOLTAGE (11 - 14V)	ST
19	B	ECCS ground	Engine is running. └ Idle speed	Engine ground	RS
20	B/Y	Start signal	Ignition switch "ON"	Approximately 0V	BT
			Ignition switch "START"	BATTERY VOLTAGE (11 - 14V)	HA

\*1: Non-turbocharger models

\*2: Turbocharger models

## TROUBLE DIAGNOSIS — General Description

### ECM Terminals and Reference Value (Cont'd)

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
21	SB	Air conditioner switch	Engine is running. └ Air conditioner switch is "ON". (Compressor operates.)	0 - 1V
			Engine is running. └ Air conditioner switch is "OFF".	BATTERY VOLTAGE (11 - 14V)
22	Y/L	Inhibitor switch/Neutral position switch	Ignition switch "ON" └ Gear position is "N" or "P". (A/T models) └ Gear position is neutral. (M/T models)	Approximately 0V
			Ignition switch "ON" └ Except the above gear position	Approximately 5V
23	W	Throttle position sensor	Ignition switch "ON" (Warm-up condition) └ Accelerator pedal released	0.35 - 0.65V
			Ignition switch "ON" └ Accelerator pedal fully depressed	Approximately 4V
24	B/R	Ignition switch	Ignition switch "OFF"	0V
			Ignition switch "ON"	BATTERY VOLTAGE (11 - 14V)
25	B	ECCS ground	Engine is running. └ Idle speed	Engine ground
29	Y/G	Vehicle speed sensor	Engine is running. └ Jack up front wheels and run engine at idle in "1" position.	Approximately 2.5V★ (AC voltage)
31	LG/R	Throttle position switch (Closed position)	Ignition switch "ON" └ Accelerator pedal released	Approximately 8V
			Ignition switch "ON" └ Accelerator pedal depressed	Approximately 0V
32	B	ECCS ground	Engine is running. └ Idle speed	Engine ground
35	LG	Canister control vacuum check switch	Ignition switch "ON"	0V
37	Y/R	Throttle position sensor signal	Ignition switch "ON" (Warm-up condition) └ Accelerator pedal released	0.3 - 0.4V
			Ignition switch "ON" └ Accelerator pedal fully depressed	Approximately 3V
39	G	Power steering oil pressure switch	Engine is running. └ Steering wheel is being turned.	0V
			Engine is running. └ Steering wheel is not being turned.	Approximately 5V

★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

## TROUBLE DIAGNOSIS — General Description

### ECM Terminals and Reference Value (Cont'd)

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)	
42	OR/L	Sensor's power supply	Ignition switch "ON"	Approximately 5V	GI
43	B	Sensor's ground	Engine is running. (Warm-up condition) └ Idle speed	0V	MA
44 48	G/B B	Camshaft position sensor (REF)	Engine is running. └ Idle speed	Approximately 2.1V★ (AC voltage)	EM
45	W	Camshaft position sensor (POS)	Engine is running. └ Idle speed	Approximately 2.5V★ (AC voltage)	LC
47	OR	Crankshaft position sensor (OBD)	Engine is running. └ Idle speed	Approximately 1.0 - 1.4V★ (AC voltage)	EC
50 51	W W	Front heated oxygen sensor (Right bank) Front heated oxygen sensor (Left bank)	Engine is running. └ After warming up sufficiently and engine speed is 2,000 rpm.	0 - Approximately 1.0V (periodically change)	FE CL
52	BR	Fuel temperature sensor	Engine is running.	0 - 5.0V Output voltage varies with fuel temperature.	MT
54	W	Mass air flow sensor	Engine is running. (Warm-up condition) └ Idle speed	1.0 - 1.7V	AT
			Engine is running. (Warm-up condition) └ Engine speed is 2,000 rpm.	1.5 - 2.1V	PD
55	B	Mass air flow sensor ground	Engine is running. (Warm-up condition) └ Idle speed	Approximately 0V	FA
56 57	W L	Rear heated oxygen sensor (Right bank) Rear heated oxygen sensor (Left bank)	Engine is running. └ After warming up sufficiently and engine speed is 2,000 rpm.	0 - Approximately 1.0V	PA BR
59	Y/G	Engine coolant temperature sensor	Engine is running.	0 - 5.0V Output voltage varies with engine coolant temperature.	ST
60	L	Intake air temperature sensor	Engine is running.	0 - 5.0V Output voltage varies with intake air temperature.	RS
61*2	W	Turbocharger boost sensor	Engine is running. (Warm-up condition) └ Idle speed	Approximately 2.7V	BT
			Engine is running. (Warm-up condition) └ Revving engine up to 5,000 rpm from idle with wide open throttle.	Approximately 3.0V	HA EL

★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

\*2: Turbocharger models

## TROUBLE DIAGNOSIS — General Description

### ECM Terminals and Reference Value (Cont'd)

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
62*1	W	Fuel pump control module (FPCM) check	Engine is running. (Warm-up condition) └ Idle speed (Within 30 seconds after starting engine)	Approximately 0V
			Engine is running. (Warm-up condition) └ Idle speed (For a period of 10 seconds, 30 seconds after starting engine)	Approximately 0 ↔ 5V
			Engine is running. (Warm-up condition) └ Idle speed (More than 40 seconds after starting engine)	Approximately 5V
62*2	W	Fuel pump control module (FPCM) check	Engine is running. (Warm-up condition) └ Idle speed (Within 5 seconds after starting engine)	Approximately 6.5V
			Engine is running. (Warm-up condition) └ Idle speed (For a period of 10 seconds, 5 seconds after starting engine)	Approximately 0 ↔ 7.5V
			Engine is running. (Warm-up condition) └ Idle speed (More than 15 seconds after starting engine)	Approximately 7.5V
63	OR/B	EGR temperature sensor	Engine is running. (Warm-up condition) └ Idle speed	Less than 4.5V
			Engine is running. (Warm-up condition) └ EGR system is operating.	0 - 1.0V
64	W	Knock sensor	Engine is running. └ Idle speed	2.0 - 3.0V
67 72	W W	Power supply for ECM	Ignition switch "ON"	BATTERY VOLTAGE (11 - 14V)
69	PU	Data link connector for GST	Ignition switch "ON" └ GST is disconnected.	6 - 10V
73	PU	A/T signal No. 1	Ignition switch "ON"	6 - 8V
74	P/B	A/T signal No. 2	Ignition switch "ON"	6 - 8V
75	L	Data link connector for CONSULT	Engine is running.	Approximately 0V
76	W		└ Idle speed	Approximately 5V
78	OR		└ Connect CONSULT and select DATA MONITOR mode.	Approximately 3.5V
77	P	A/T signal No. 3	Ignition switch "ON"	0V

\*1: Non-turbocharger models

\*2: Turbocharger models

## TROUBLE DIAGNOSIS — General Description

### ECM Terminals and Reference Value (Cont'd)

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)	
79	G/R	Throttle position switch power supply	Ignition switch "ON" └ Accelerator pedal released	Approximately 8V	GI
			Ignition switch "ON" └ Accelerator pedal depressed halfway	BATTERY VOLTAGE (11 - 14V)	MA
			Ignition switch "ON" └ Accelerator pedal fully depressed	0V	EM
80	W/B	Power supply (Back-up)	Ignition switch "OFF"	BATTERY VOLTAGE (11 - 14V)	LC
101	G/L	IACV-AAC valve	Engine is running. └ Idle speed	7 - 14V	<b>EC</b>
			Engine is running. └ Steering wheel is being turned. └ Air conditioner is operating. └ Rear window defogger is "ON". └ Headlamps are "ON".	2 - 10V	FE CL
102	W	Injector No. 1	Engine is running. └ Idle speed	BATTERY VOLTAGE (11 - 14V)	MT
104	W/R	Injector No. 3			
106	L	Injector No. 5			
109	W/G	Injector No. 2			
111	W/B	Injector No. 4			
113	W/L	Injector No. 6			AT PD
103	BR	EGRC-solenoid valve	Engine is running. └ Idle speed	0 - 0.5V	FA
			Engine is running. └ Engine speed is 2,000 rpm.	BATTERY VOLTAGE (11 - 14V)	RA
107	R/L	Rear heated oxygen sensor heater (Right bank)	Engine is running. └ Engine speed is below 3,600 rpm.	0 - 0.5V	BR
			Engine is running. └ Engine speed is above 3,600 rpm.	BATTERY VOLTAGE (11 - 14V)	ST
108	B	ECCS ground	Engine is running. └ Idle speed	Engine ground	RS
114	B/L	EVAP canister purge control solenoid valve	Ignition switch "ON"	BATTERY VOLTAGE (11 - 14V)	BT
115	R	IACV-FICD solenoid valve	Engine is running. └ Air conditioner switch is "ON". (Compressor operates.)	0 - 0.5V	HA
			Engine is running. └ Air conditioner switch is "OFF".	BATTERY VOLTAGE (11 - 14V)	EL IDX

## TROUBLE DIAGNOSIS — General Description

### ECM Terminals and Reference Value (Cont'd)

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
116	B	ECCS ground	Engine is running. └ Idle speed	Engine ground
117	W/B	Counter current return	Ignition switch "ON"	BATTERY VOLTAGE (11 - 14V)
118*2 122*2	SB SB	Wastegate valve control solenoid valve RH Wastegate valve control solenoid valve LH	Engine is running. └ Idle speed	BATTERY VOLTAGE (11 - 14V)
119	B	Front heated oxygen sensor heater (Right bank)	Engine is running. └ Engine speed is below 2,900 rpm*1, 2,800 rpm*2.	0 - 0.5V
			Engine is running. └ Engine speed is above 2,900 rpm*1, 2,800 rpm*2.	BATTERY VOLTAGE (11 - 14V)
120	Y	Fuel pressure regulator control solenoid valve	Engine is running. [Fuel temperature is above 75°C (167°F).] └ Idle speed (Within 30 seconds after starting engine)	0 - 0.5V
			Engine is running. └ Except above condition	BATTERY VOLTAGE (11 - 14V)
121	B	Front heated oxygen sensor heater (Left bank)	Engine is running. └ Engine speed is below 2,900 rpm*1, 2,800 rpm*2.	0 - 0.5V
			Engine is running. └ Engine speed is above 2,900 rpm*1, 2,800 rpm*2.	BATTERY VOLTAGE (11 - 14V)
123	R/W	Rear heated oxygen sensor heater (Left bank)	Engine is running. └ Engine speed is below 3,600 rpm.	0 - 0.5V
			Engine is running. └ Engine speed is above 3,600 rpm.	BATTERY VOLTAGE (11 - 14V)
124	B	ECCS ground	Engine is running. └ Idle speed	Engine ground




\*1: Non-turbocharger models

\*2: Turbocharger models

# TROUBLE DIAGNOSIS FOR POWER SUPPLY

## Main Power Supply and Ground Circuit

EC-MAIN-01

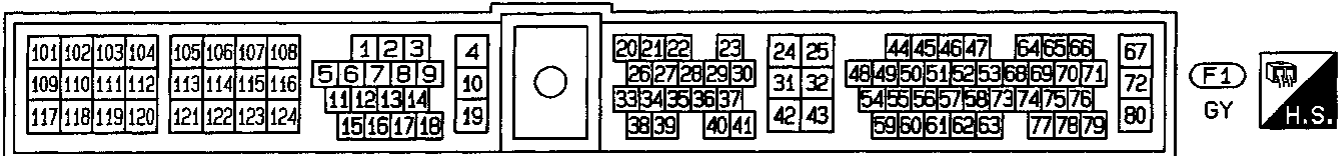
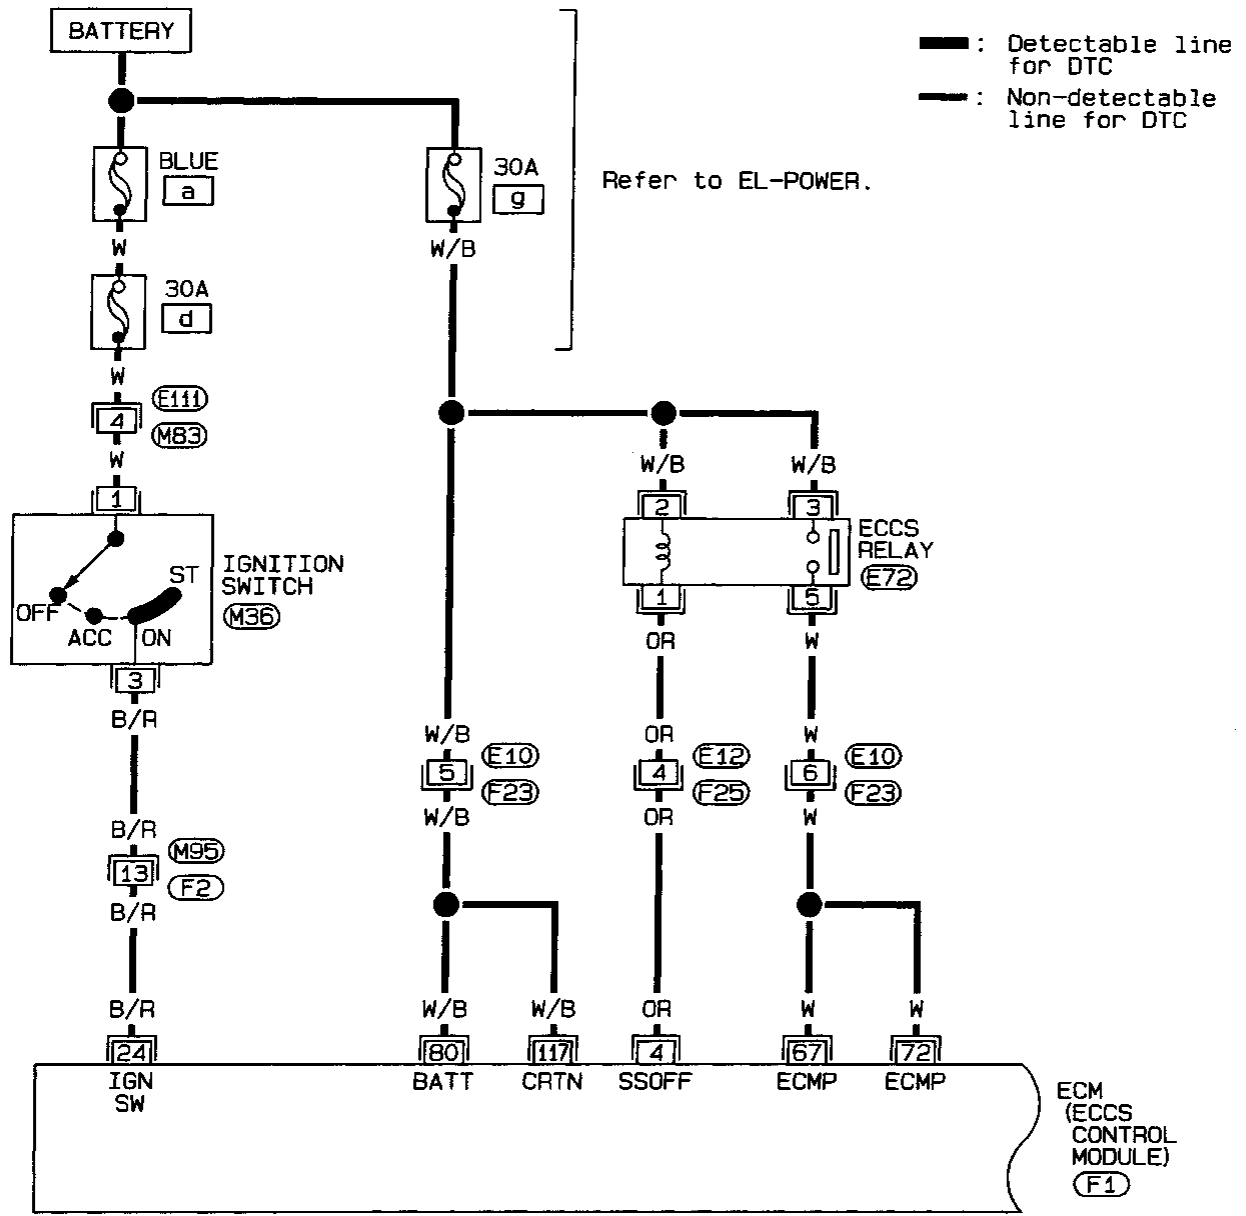


# TROUBLE DIAGNOSIS FOR POWER SUPPLY

## Main Power Supply and Ground Circuit (Cont'd)

EC-MAIN-02

- : Detectable line for DTC
- - -** : Non-detectable line for DTC


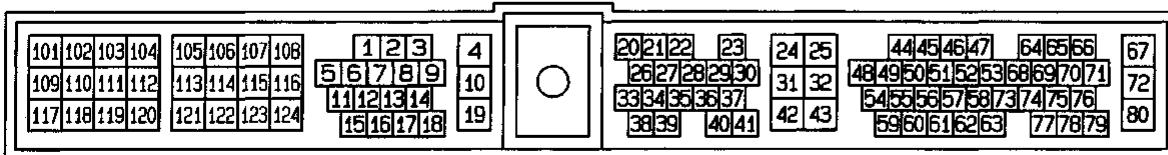
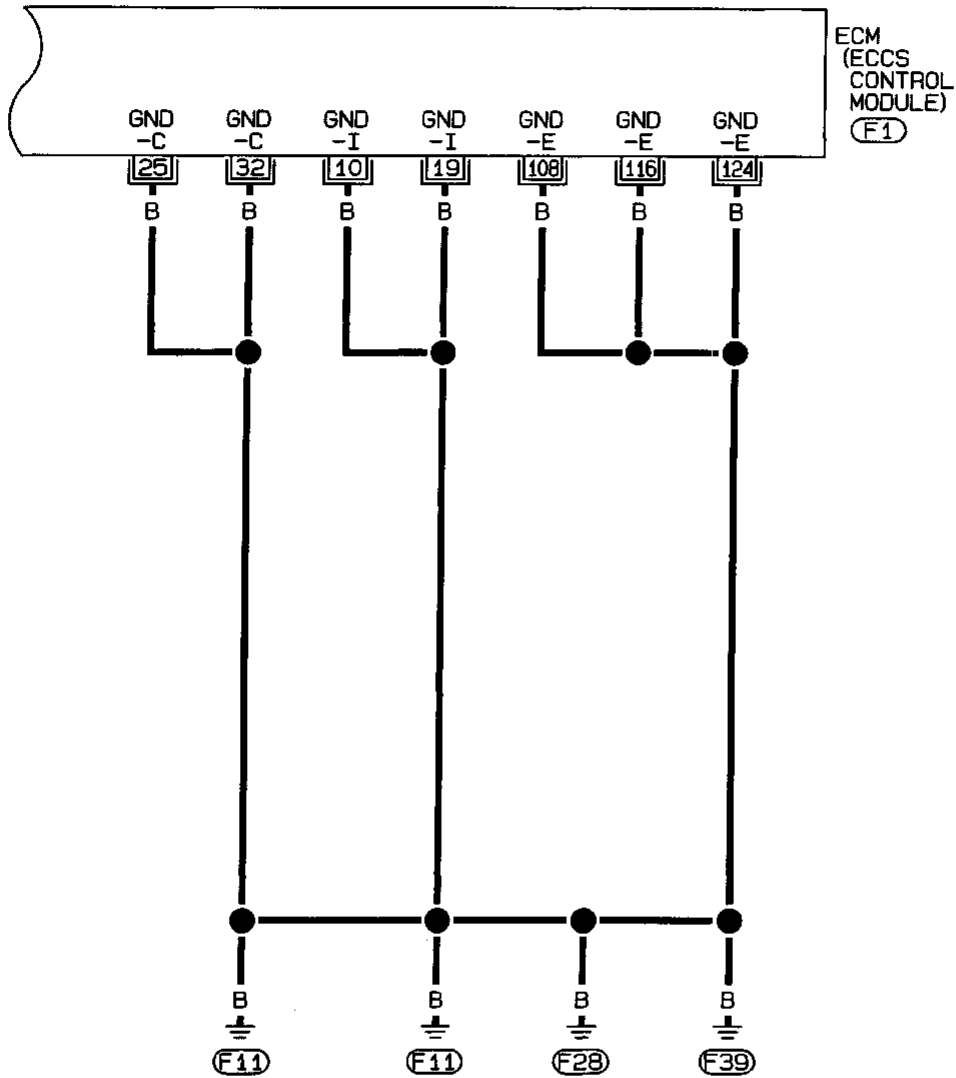




# TROUBLE DIAGNOSIS FOR POWER SUPPLY

## Main Power Supply and Ground Circuit (Cont'd)


### DIAGNOSTIC PROCEDURE

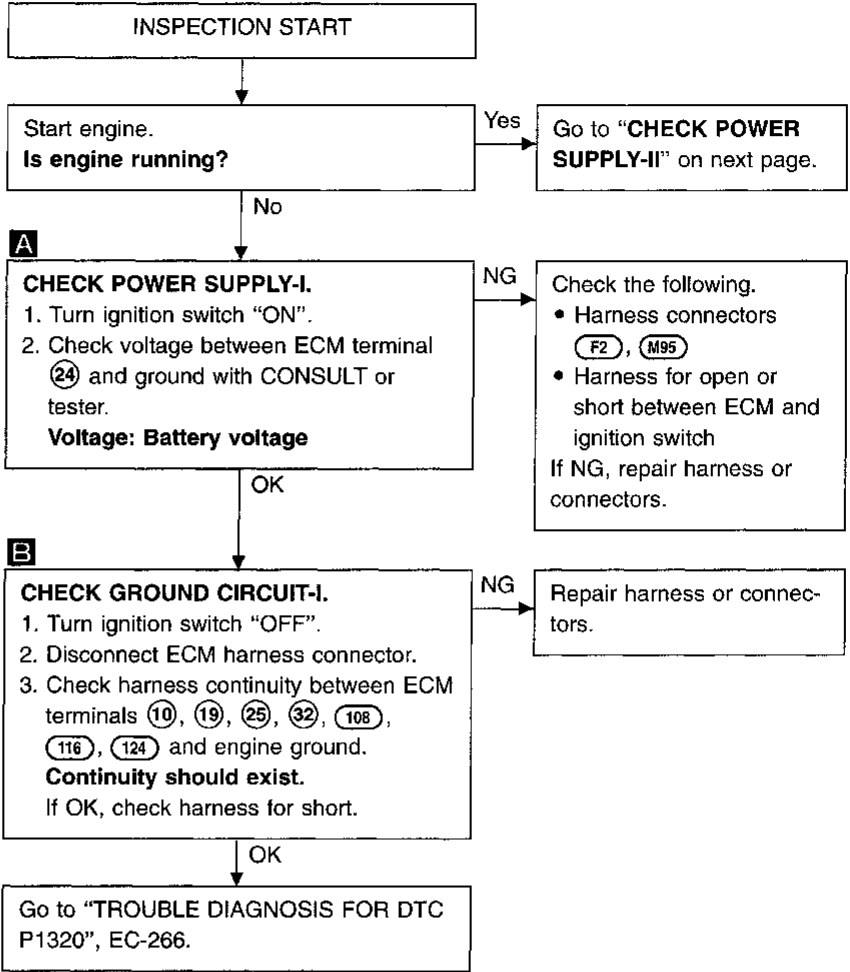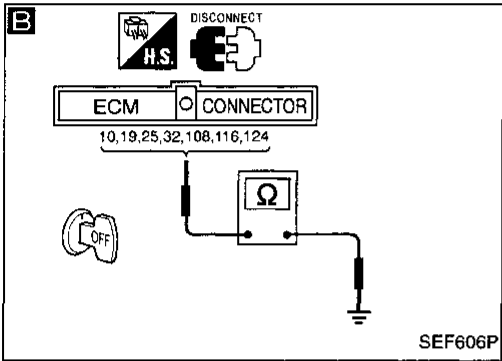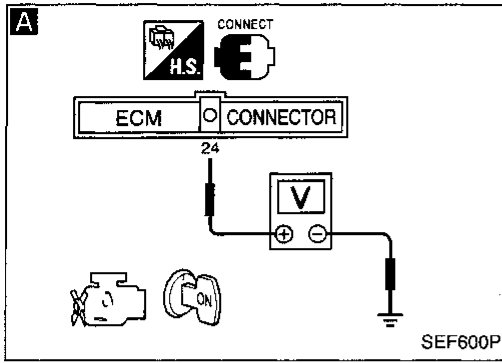

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

# TROUBLE DIAGNOSIS FOR POWER SUPPLY

## Main Power Supply and Ground Circuit (Cont'd)

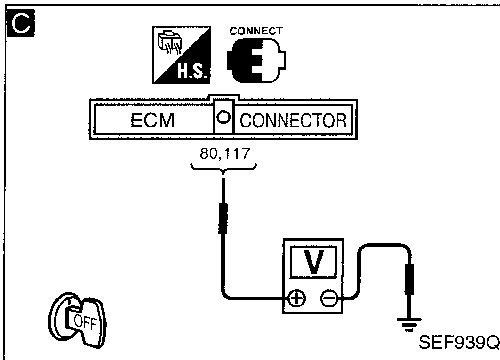

**C**

**CHECK POWER SUPPLY-II.**

1. Stop engine.
2. Check voltage between ECM terminals (80), (117) and ground with CONSULT or tester.


**Voltage: Battery voltage**

NG

Check the following.

- Harness connectors (E10), (F23)
- 30A fusible link
- Harness for open or short between ECM and battery

If NG, repair harness or connectors.

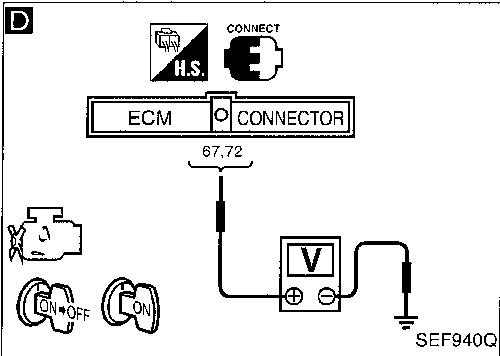

**D**

**CHECK POWER SUPPLY-III.**

1. Turn ignition switch "ON" and then "OFF".
2. Check voltage between ECM terminals (67), (72) and ground with CONSULT or tester.

**Voltage:**


**After turning ignition switch "OFF", battery voltage will exist for a few seconds, then drop to approximately 0V.**

OK

Go to "**CHECK GROUND CIRCUIT-II**" on next page.

Case-1: Battery voltage does not exist.

Case-2: Battery voltage exists for more than a few seconds.

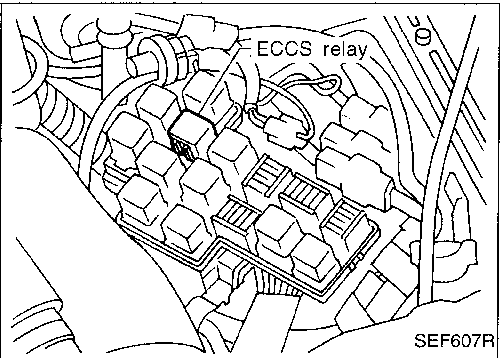


NG

Case-1

Case-2

Go to "**CHECK ECSS RELAY**" on next page.

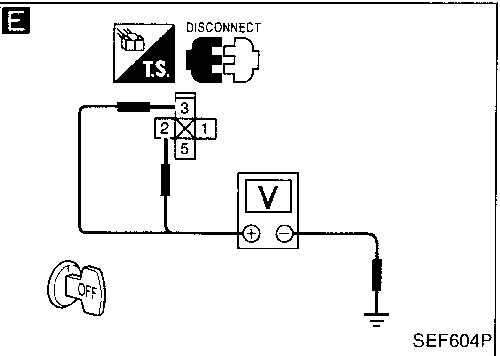

**E**

**CHECK POWER SUPPLY-IV.**

1. Disconnect ECSS relay.
2. Check voltage between terminals (2), (3) and ground with CONSULT or tester.


**Voltage: Battery voltage**

NG

Check the following.

- Harness for open or short between ECSS relay and 30A fusible link

If NG, repair harness or connectors.

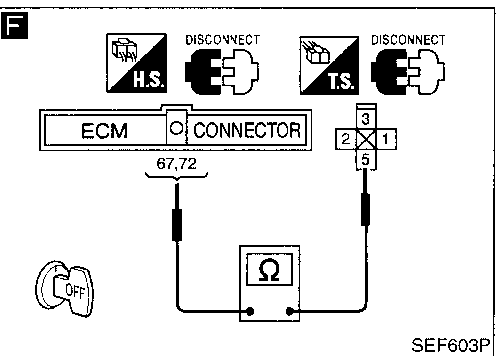

**F**

**CHECK HARNESS CONTINUITY BETWEEN ECSS RELAY AND ECM.**

1. Disconnect ECM harness connector.
2. Check harness continuity between ECM terminals (67), (72) and terminal (5).

**Continuity should exist.**

If OK, check harness for short.

NG

Check the following.

- Harness connectors (E10), (F23)
- Harness for open or short between ECM and ECSS relay







If NG, repair harness or connectors.

OK

(A)

# TROUBLE DIAGNOSIS FOR POWER SUPPLY

## Main Power Supply and Ground Circuit (Cont'd)

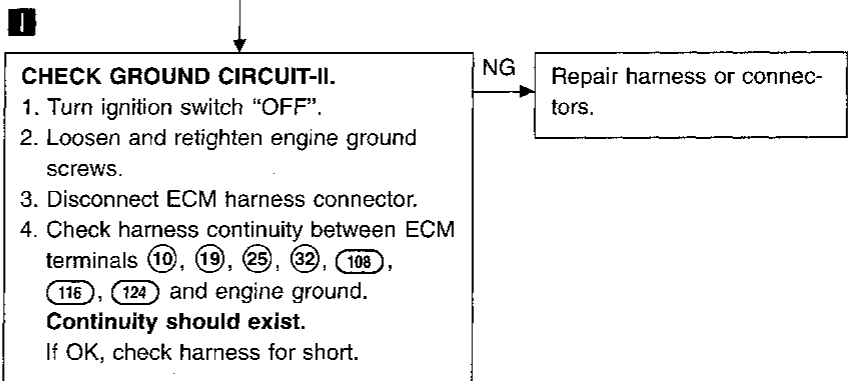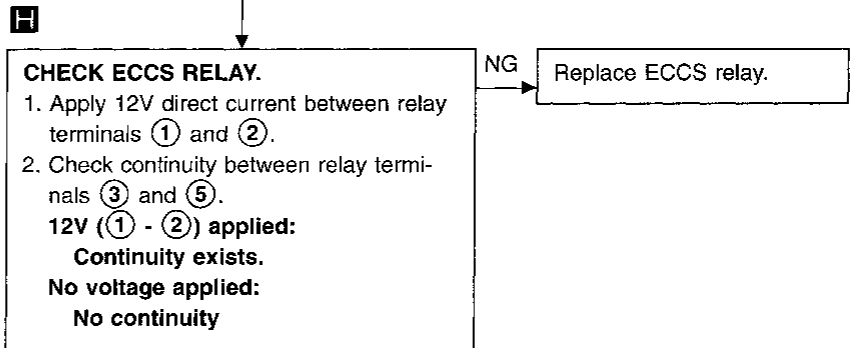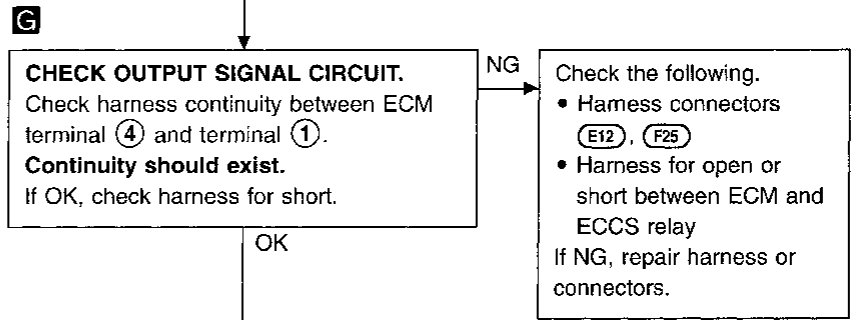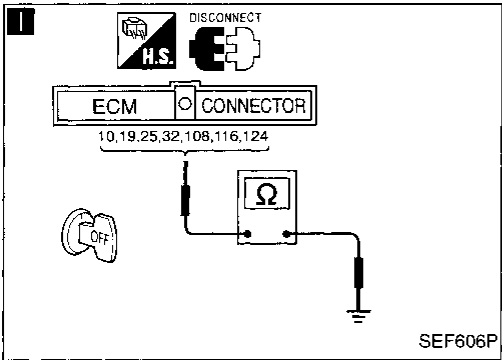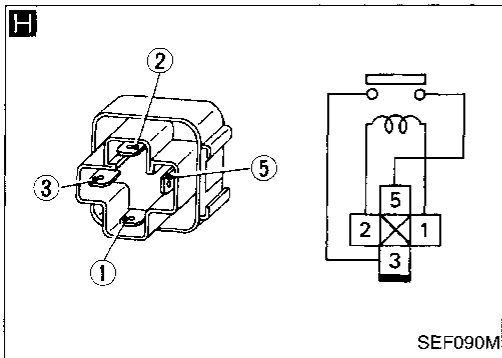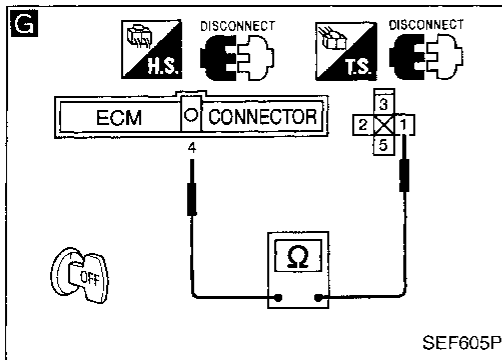

Disconnect and reconnect harness connectors in the circuit. Then retest.

Trouble is not fixed.

Check ECM pin terminals for damage and check the connection of ECM harness connector. Reconnect ECM harness connector and retest.

INSPECTION END

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST


RS

BT

HA

EL

IDX

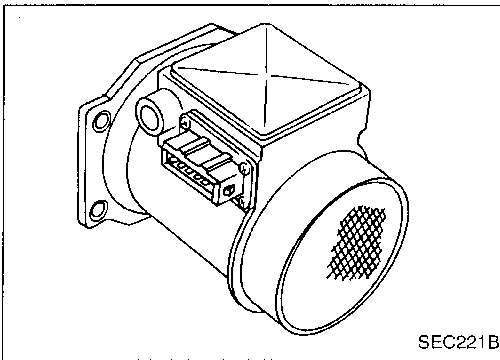

## Mass Air Flow Sensor (MAFS) (DTC: 0102)

The mass air flow sensor is placed in the stream of intake air. It measures the intake flow rate by measuring a part of the entire intake flow. It consists of a hot film that is supplied with electric current from the ECM. The temperature of the hot film is controlled by the ECM a certain amount. The heat generated by the hot film is reduced as the intake air flows around it. The more air, the greater the heat loss.

Therefore, the ECM must supply more electric current to the hot film as air flow increases. This maintains the temperature of the hot film. The ECM detects the air flow by means of this current change.

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0100 0102	A) An excessively high or low voltage from the sensor is sent to ECM.  B) C) Voltage sent to ECM is not practical when compared with the camshaft position sensor and throttle position sensor signals.	<ul style="list-style-type: none"> <li>• Harness or connectors (The sensor circuit is open or shorted.)</li> <li>• Mass air flow sensor</li> </ul>

### DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

#### Procedure for malfunction A



- 1) Turn ignition switch "ON", and wait at least 6 seconds.
- 2) Select "DATA MONITOR" mode with CONSULT.
- 3) Start engine and wait at least 3 seconds.

OR



- 1) Turn ignition switch "ON", and wait at least 6 seconds.
- 2) Start engine and wait at least 3 seconds.
- 3) Select "MODE 3" with GST.


OR



- 1) Turn ignition switch "ON", and wait at least 6 seconds.
- 2) Start engine and wait at least 3 seconds.
- 3) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 4) Perform diagnostic test mode II (Self-diagnostic results) with ECM.


# TROUBLE DIAGNOSIS FOR DTC P0100

## Mass Air Flow Sensor (MAFS) (DTC: 0102) (Cont'd)

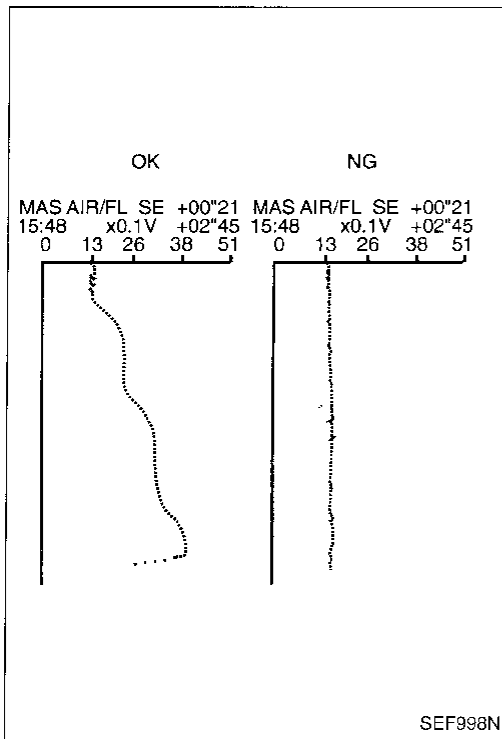

CALC LOAD	20%
COOLANT TEMP	95°C
SHORT FT #1	2%
LONG FT #1	0%
SHORT FT #2	4%
LONG FT #2	0%
ENGINE SPD	2637RPM
VEHICLE SPD	0MPH
IGN ADVANCE	41.0°
INTAKE AIR	41°C
<b>MAF</b>	<b>14.1gm/sec</b>
THROTTLE POS	3%

SEF534P

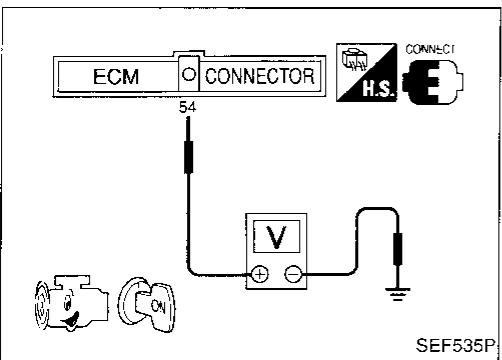

### Procedure for malfunction B

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT.
- 3) Start engine and warm it up sufficiently.
- 4) Wait at least 10 seconds at idle speed.

OR

- 1) Turn ignition switch "ON".
- 2) Start engine and warm it up sufficiently.
- 3) Wait at least 10 seconds at idle speed.
- 4) Select "MODE 3" with GST.

OR

- 1) Turn ignition switch "ON".
- 2) Start engine and warm it up sufficiently.
- 3) Wait at least 10 seconds at idle speed.
- 4) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 5) Perform diagnostic test mode II (Self-diagnostic results) with ECM.

### OVERALL FUNCTION CHECK

Use this procedure to check the overall function of the mass air flow sensor circuit. During this check, a DTC might not be confirmed.

### Procedure for malfunction C

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT.
- 3) Start engine and warm it up sufficiently.
- 4) Check the voltage of mass air flow sensor with "DATA MONITOR".
- 5) Check for linear voltage rise in response to increases to about 4,000 rpm in engine speed.

OR

- 1) Turn ignition switch "ON".
- 2) Start engine and warm it up sufficiently.
- 3) Select "MODE 1" with GST.
- 4) Check the mass air flow with "MODE 1".
- 5) Check for linear mass air flow rise in response to increases to about 4,000 rpm in engine speed.




OR

- 1) Turn ignition switch "ON".
- 2) Start engine and warm it up sufficiently.
- 3) Check the voltage between ECM terminal 54 and ground.
- 4) Check for linear voltage rise in response to increases to about 4,000 rpm in engine speed.

# TROUBLE DIAGNOSIS FOR DTC P0100

## Mass Air Flow Sensor (MAFS) (DTC: 0102) (Cont'd)







EC-MAFS-01

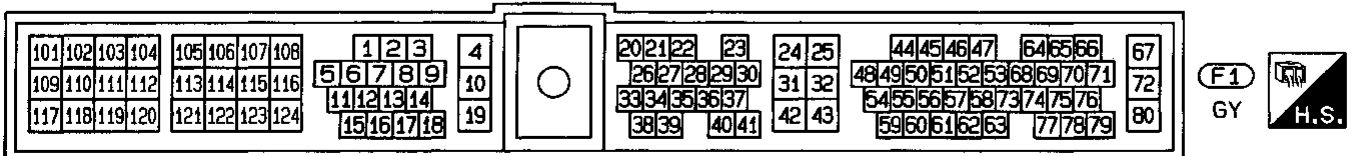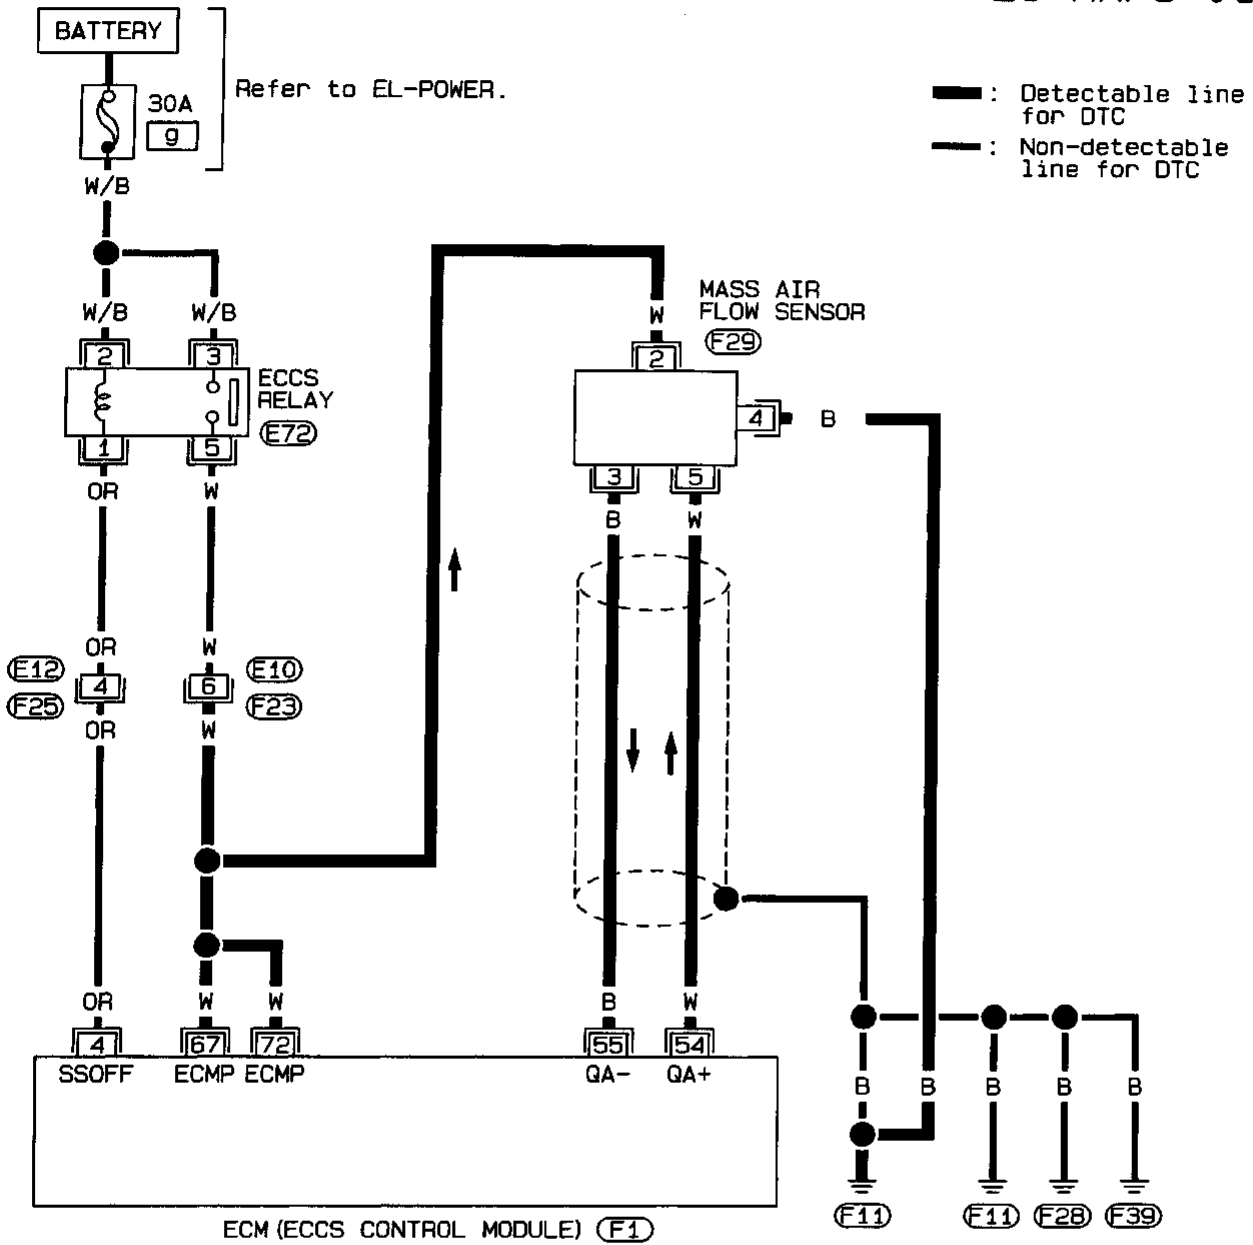

# TROUBLE DIAGNOSIS FOR DTC P0100

## Mass Air Flow Sensor (MAFS) (DTC: 0102) (Cont'd)

### DIAGNOSTIC PROCEDURE

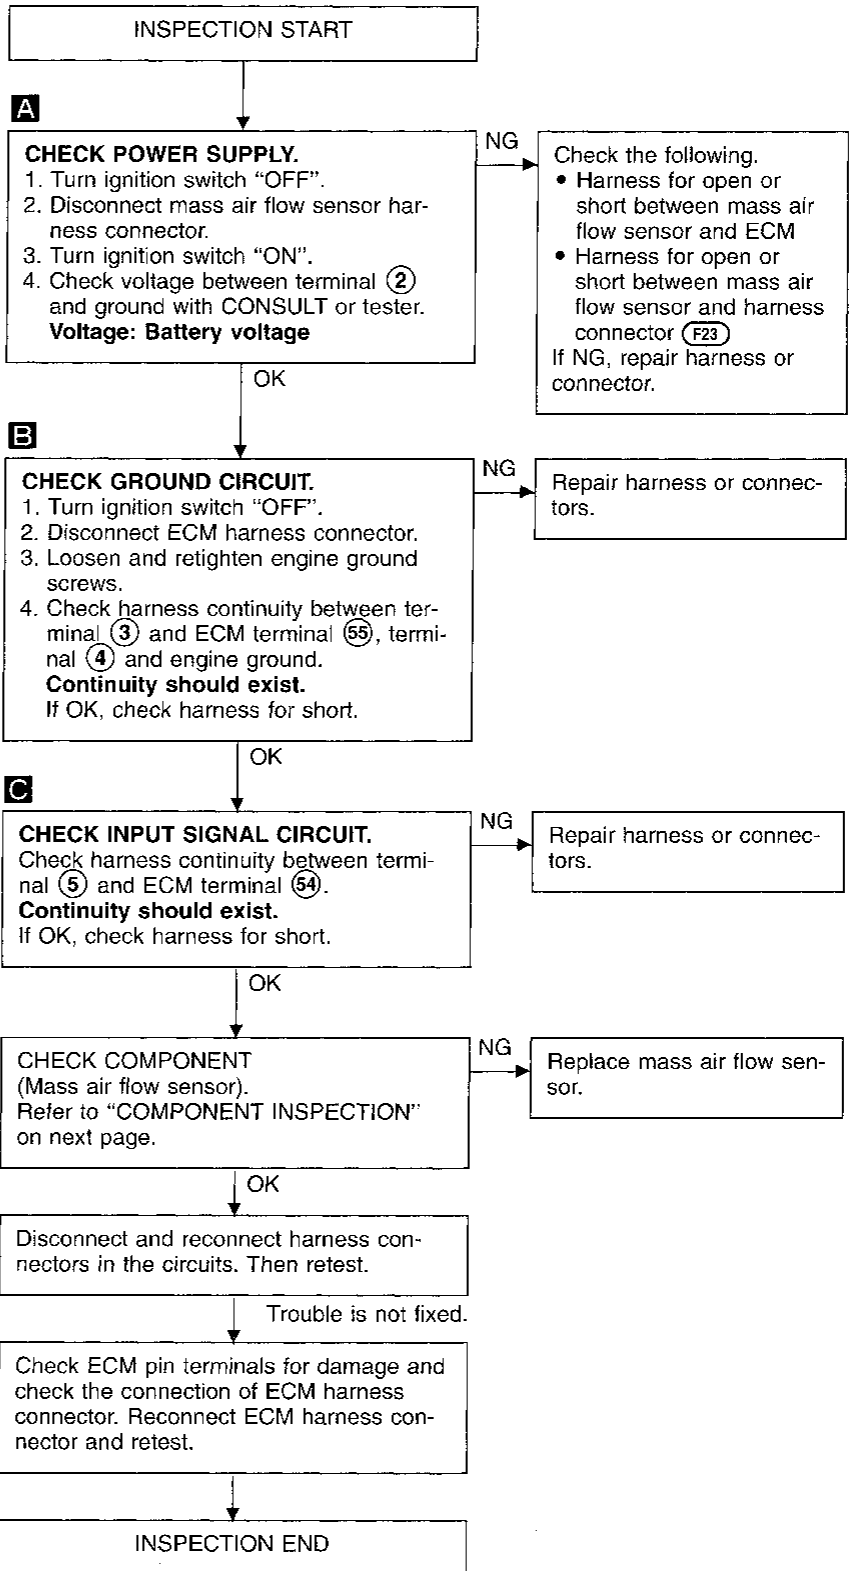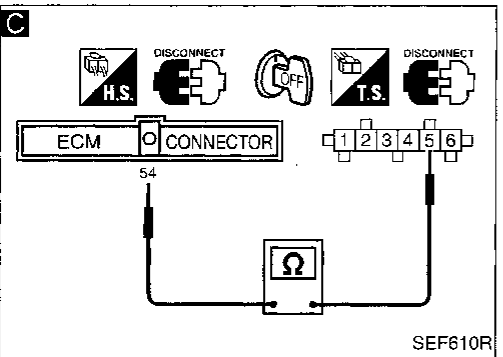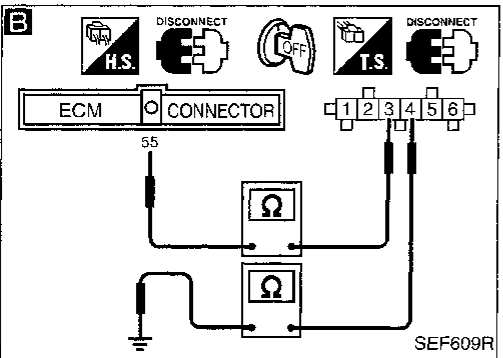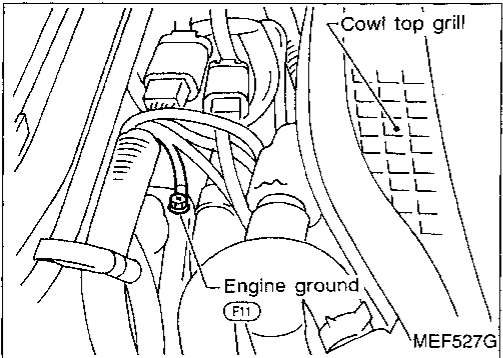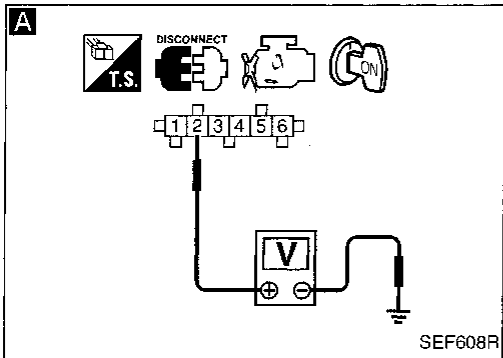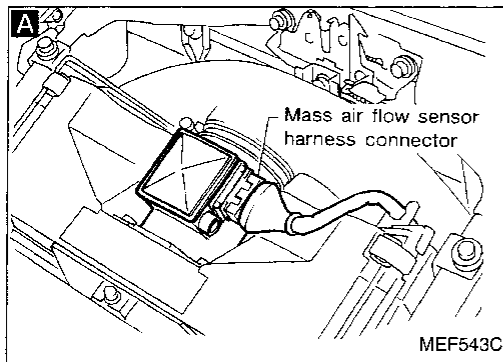

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

## TROUBLE DIAGNOSIS FOR DTC P0100

### Mass Air Flow Sensor (MAFS) (DTC: 0102) (Cont'd)

#### COMPONENT INSPECTION


##### Mass air flow sensor

1. Turn ignition switch "ON".
2. Start engine and warm it up sufficiently.
3. Check voltage between terminal ⑤ and ground.


Conditions	Voltage (V)
Ignition switch "ON" (Engine stopped.)	Less than 1.0
Idle (Engine is warmed-up sufficiently.)	1.0 - 1.7
Idle to about 4,000 rpm*	1.0 - 1.7 to Approx. 4.0

\*: Check for linear voltage rise in response to increase to about 4,000 rpm in engine speed.

4. If NG, remove mass air flow sensor from air duct. Check hot film for damage or dust.

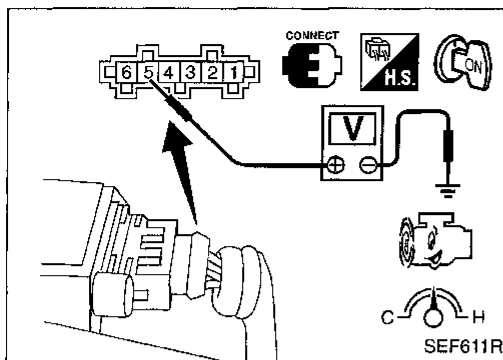


SEF611R

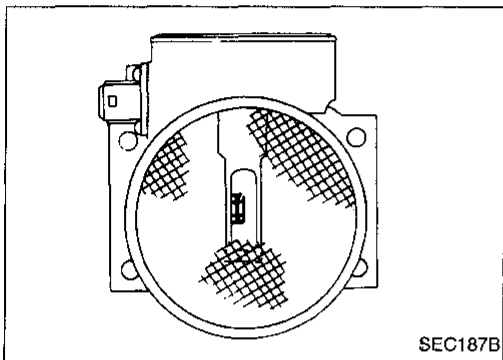

SEC187B



# TROUBLE DIAGNOSIS FOR DTC P0110

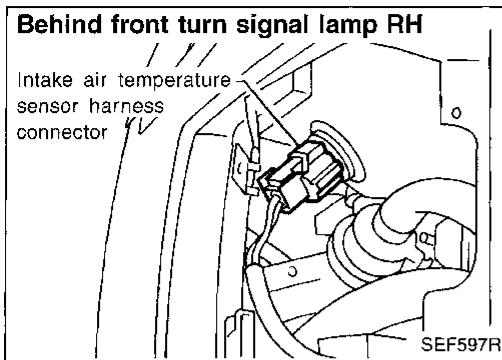


## Intake Air Temperature Sensor (DTC: 0401)

The intake air temperature sensor is mounted to the air duct (behind front turn signal lamp RH). The sensor detects intake air temperature and transmits a signal to the ECM.

The temperature sensing unit uses a thermistor, which is sensitive to the change in temperature. Electrical resistance of the thermistor decreases in response to the temperature rise.


This sensor is not used to control the engine system. It is used only for the on board diagnosis.

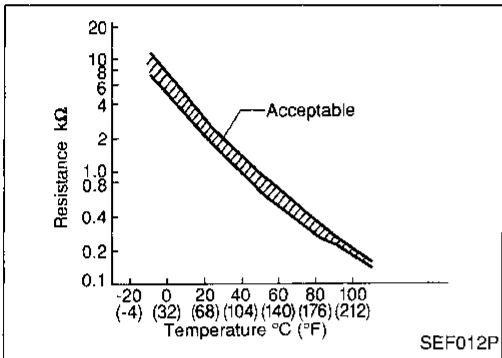

### (Reference data)

Intake air temperature °C (°F)	Resistance (kΩ)
-10 (14)	7.0 - 11.4
20 (68)	2.1 - 2.9
80 (176)	0.27 - 0.38


Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0110 0401	<p>A) An excessively low or high voltage from the sensor is sent to ECM.</p> <p>B) Rationally incorrect voltage from the sensor is sent to ECM, compared with the voltage signal from engine coolant temperature sensor.</p>	<ul style="list-style-type: none"> <li>Harness or connectors (The sensor circuit is open or shorted.)</li> <li>Intake air temperature sensor</li> </ul>

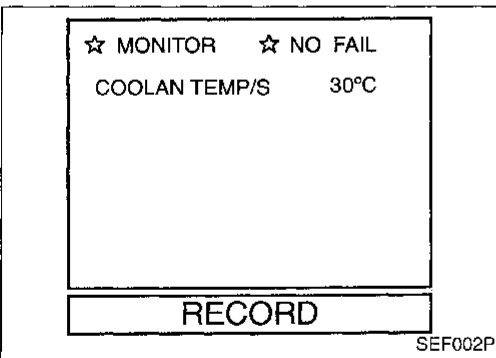

## DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

### Procedure for malfunction A


- 1) Turn ignition switch "ON".
  - 2) Select "DATA MONITOR" mode with CONSULT.
  - 3) Wait at least 5 seconds.
- OR
- 1) Turn ignition switch "ON" and wait at least 5 seconds.
  - 2) Select MODE 3 with GST.
- OR
- 1) Turn ignition switch "ON" and wait at least 5 seconds.
  - 2) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
  - 3) Perform diagnostic test mode II (Self-diagnostic results) with ECM.

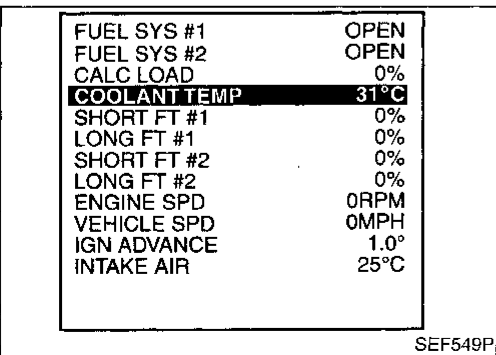

## TROUBLE DIAGNOSIS FOR DTC P0110

### Intake Air Temperature Sensor (DTC: 0401) (Cont'd)

#### Procedure for malfunction B

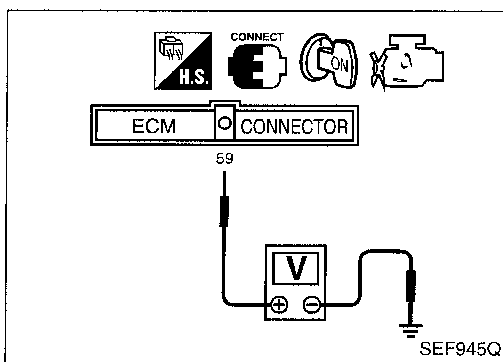

- 1) Lift up vehicle and open engine hood.
- 2) Wait until engine coolant temperature is less than 90°C (194°F).
  - (a) Turn ignition switch "ON".
  - (b) Select "DATA MONITOR" mode with CONSULT.
  - (c) Check the engine coolant temperature.
  - (d) If the engine coolant temperature is not less than 90°C (194°F), turn ignition switch "OFF" and cool down engine.
- Perform the following steps before engine coolant temperature is above 90°C (194°F).
- 3) Turn ignition switch "ON".
- 4) Select "DATA MONITOR" mode with CONSULT.
- 5) Start engine.
- 6) Shift selector lever to "D" position (A/T), or set shift lever to 4th gear position (M/T).
- 7) Hold vehicle speed at 70 to 80 km/h (43 to 50 MPH) for 2 minutes.

OR

- 1) Lift up vehicle and open engine hood.
- 2) Wait until engine coolant temperature is less than 90°C (194°F).
  - (a) Turn ignition switch "ON".
  - (b) Select MODE 1 with GST.
  - (c) Check the engine coolant temperature.
  - (d) If the engine coolant temperature is not less than 90°C (194°F), turn ignition switch "OFF" and cool down engine.
- Perform the following steps before engine coolant temperature is above 90°C (194°F).
- 3) Start engine.
- 4) Shift selector lever to "D" position (A/T), or set shift lever to 4th gear position (M/T).
- 5) Hold vehicle speed at 70 to 80 km/h (43 to 50 MPH) for 2 minutes.
- 6) Select MODE 3 with GST.



OR

- 1) Lift up vehicle and open engine hood.
- 2) Wait until engine coolant temperature is less than 90°C (194°F).
  - (a) Turn ignition switch "ON".
  - (b) Check voltage between ECM terminal 59 and ground.  
**Voltage: More than 1.0 (V)**
  - (c) If the voltage is not more than 1.0 (V), turn ignition switch "OFF" and cool down engine.
- Perform the following steps before the voltage is below 1.0V.
- 3) Start engine.
- 4) Shift selector lever to "D" position (A/T), or set shift lever to 4th gear position (M/T).
- 5) Hold vehicle speed at 70 to 80 km/h (43 to 50 MPH) for 2 minutes.
- 6) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 7) Perform diagnostic test mode II (Self-diagnostic results) with ECM.


# TROUBLE DIAGNOSIS FOR DTC P0110

## Intake Air Temperature Sensor (DTC: 0401) (Cont'd)

EC-IATS-01

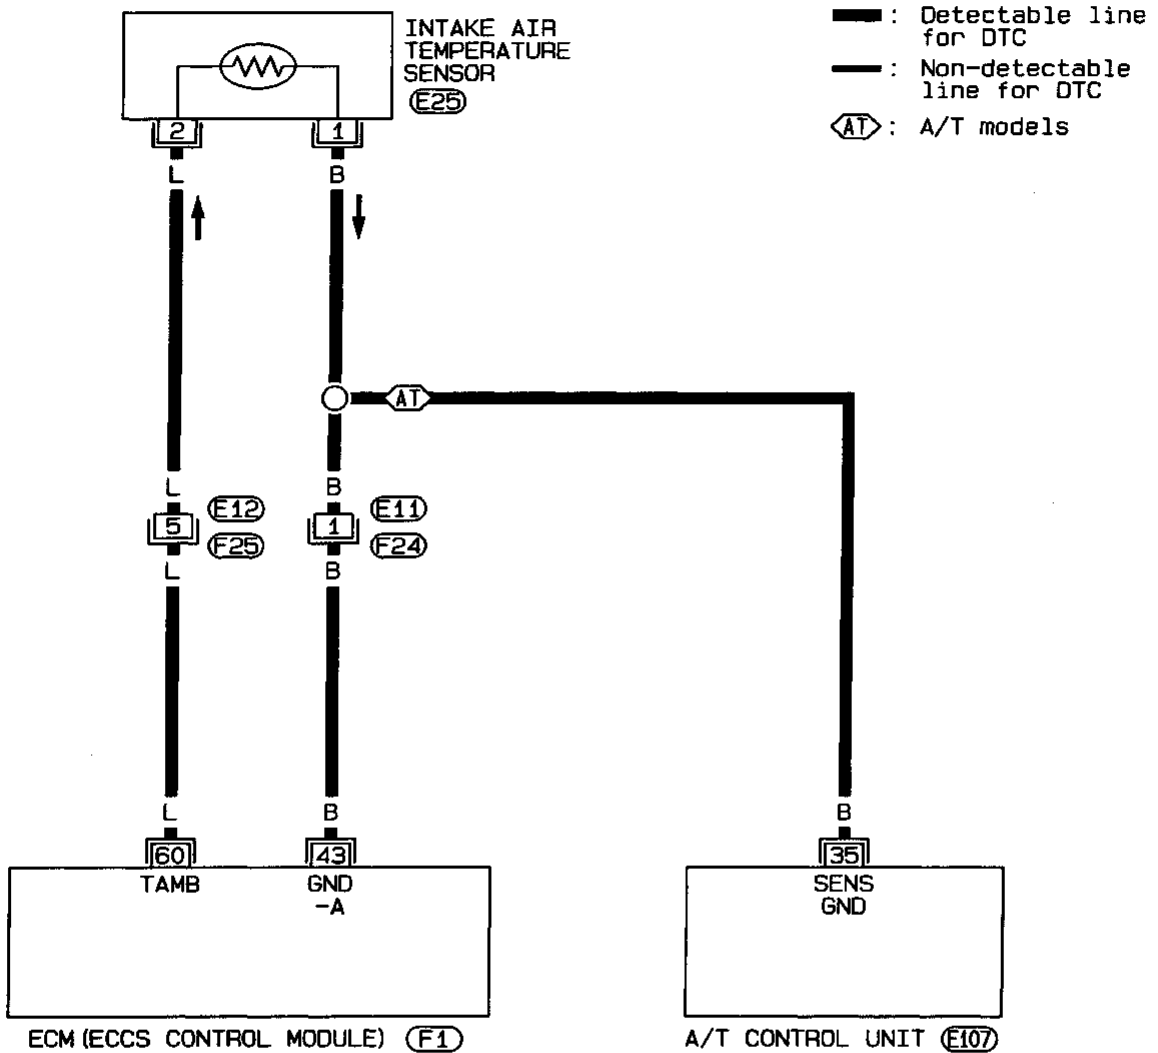

(E107)  
W

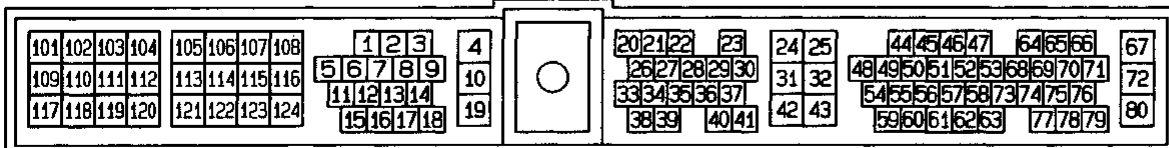

(F1)  
GY



GI  
MA  
EM  
LC  
**EC**  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

# TROUBLE DIAGNOSIS FOR DTC P0110

## Intake Air Temperature Sensor (DTC: 0401) (Cont'd)

### DIAGNOSTIC PROCEDURE

INSPECTION START

**A**

#### CHECK POWER SUPPLY.

1. Turn ignition switch "OFF".
2. Disconnect intake air temperature sensor harness connector.
3. Turn ignition switch "ON".
4. Check voltage between terminal ② and ground.

**Voltage:**

**Approximately 5V**


NG

Check the following.

- Harness connectors (E12, F25)
- Harness for open or short between ECM and intake air temperature sensor


If NG, repair harness or connectors.

Behind front turn signal lamp RH

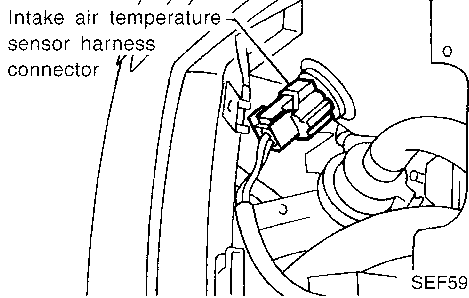


SEF597R

**A**

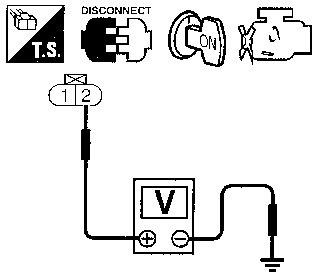

MEC810B

**B**

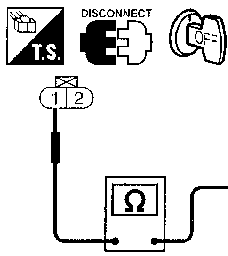

MEC811B

**B**

#### CHECK GROUND CIRCUIT.

1. Turn ignition switch "OFF".
2. Check harness continuity between terminal ① and engine ground.

**Continuity should exist.**

If OK, check harness for short.

NG

Check the following.

- Harness connectors (E11, F24)
- Harness for open or short between ECM and intake air temperature sensor
- Harness for open or short between A/T control unit and intake air temperature sensor

If NG, repair harness or connectors.

OK

OK

#### CHECK COMPONENT

(Intake air temperature sensor). Refer to "COMPONENT INSPECTION" on next page.

NG

Replace intake air temperature sensor.

OK

Disconnect and reconnect harness connectors in the circuit. Then retest.

Trouble is not fixed.

Check ECM pin terminals for damage and check the connection of ECM harness connector. Reconnect ECM harness connector and retest.

INSPECTION END



# TROUBLE DIAGNOSIS FOR DTC P0110

## Intake Air Temperature Sensor (DTC: 0401) (Cont'd)

### COMPONENT INSPECTION

#### Intake air temperature sensor

Check resistance as shown in the figure.

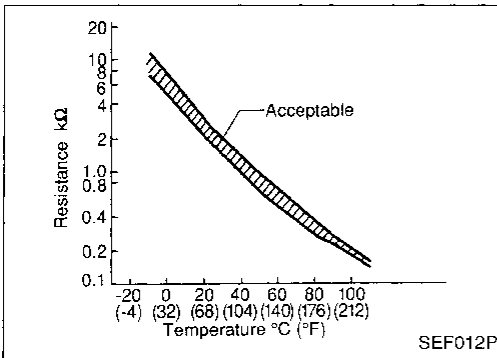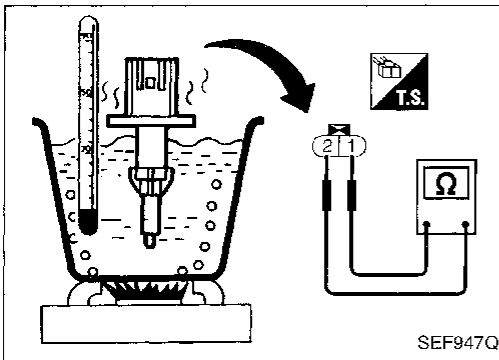

<Reference data>

Intake air temperature °C (°F)	Resistance kΩ
20 (68)	2.1 - 2.9
80 (176)	0.27 - 0.38

CI

MA

EM

LC

EC

FE

GL

MT

AT

PD

FA

RA

BR

ST


RS

BT

HA


EL

IDX

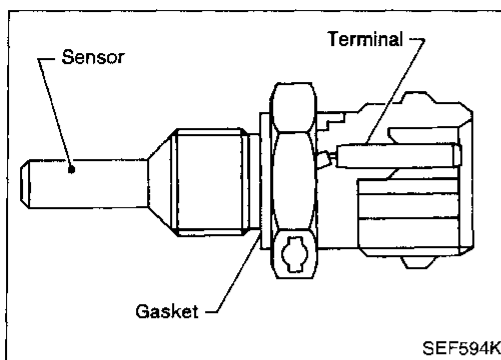

## Engine Coolant Temperature Sensor (ECTS) (DTC: 0103)

The engine coolant temperature sensor is used to detect the engine coolant temperature. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the engine coolant temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

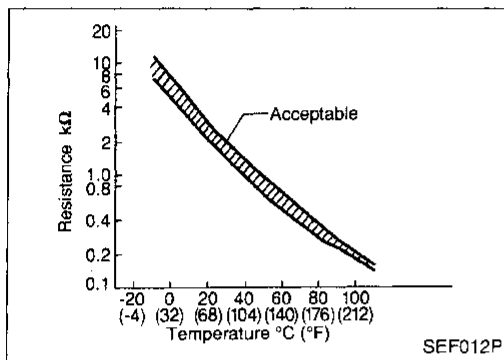

### ⟨Reference data⟩

Engine coolant temperature °C (°F)	Voltage (V)	Resistance (kΩ)
-10 (14)	4.4	7.0 - 11.4
20 (68)	3.5	2.1 - 2.9
50 (122)	2.2	0.68 - 1.00
90 (194)	0.98	0.236 - 0.260
110 (230)	0.64	0.143 - 0.153

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0115 0103	<ul style="list-style-type: none"> <li>An excessively high or low voltage from the sensor is sent to ECM.</li> </ul>	<ul style="list-style-type: none"> <li>Harness or connectors (The sensor circuit is open or shorted.)</li> <li>Engine coolant temperature sensor</li> </ul>





### DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

- 1) Turn ignition switch "ON".
  - 2) Select "DATA MONITOR" mode with CONSULT.
  - 3) Wait at least 5 seconds.
- OR
- 1) Turn ignition switch "ON" and wait at least 5 seconds.
  - 2) Select "MODE 3" with GST.
- OR
- 1) Turn ignition switch "ON" and wait at least 5 seconds.
  - 2) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
  - 3) Perform diagnostic test mode II (Self-diagnostic results) with ECM.

# TROUBLE DIAGNOSIS FOR DTC P0115

## Engine Coolant Temperature Sensor (ECTS) (DTC: 0103) (Cont'd)

EC-ECTS-01

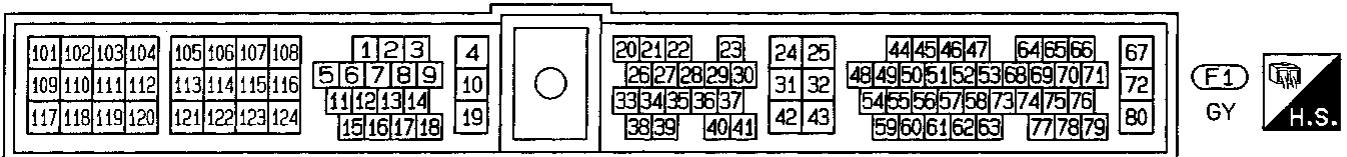

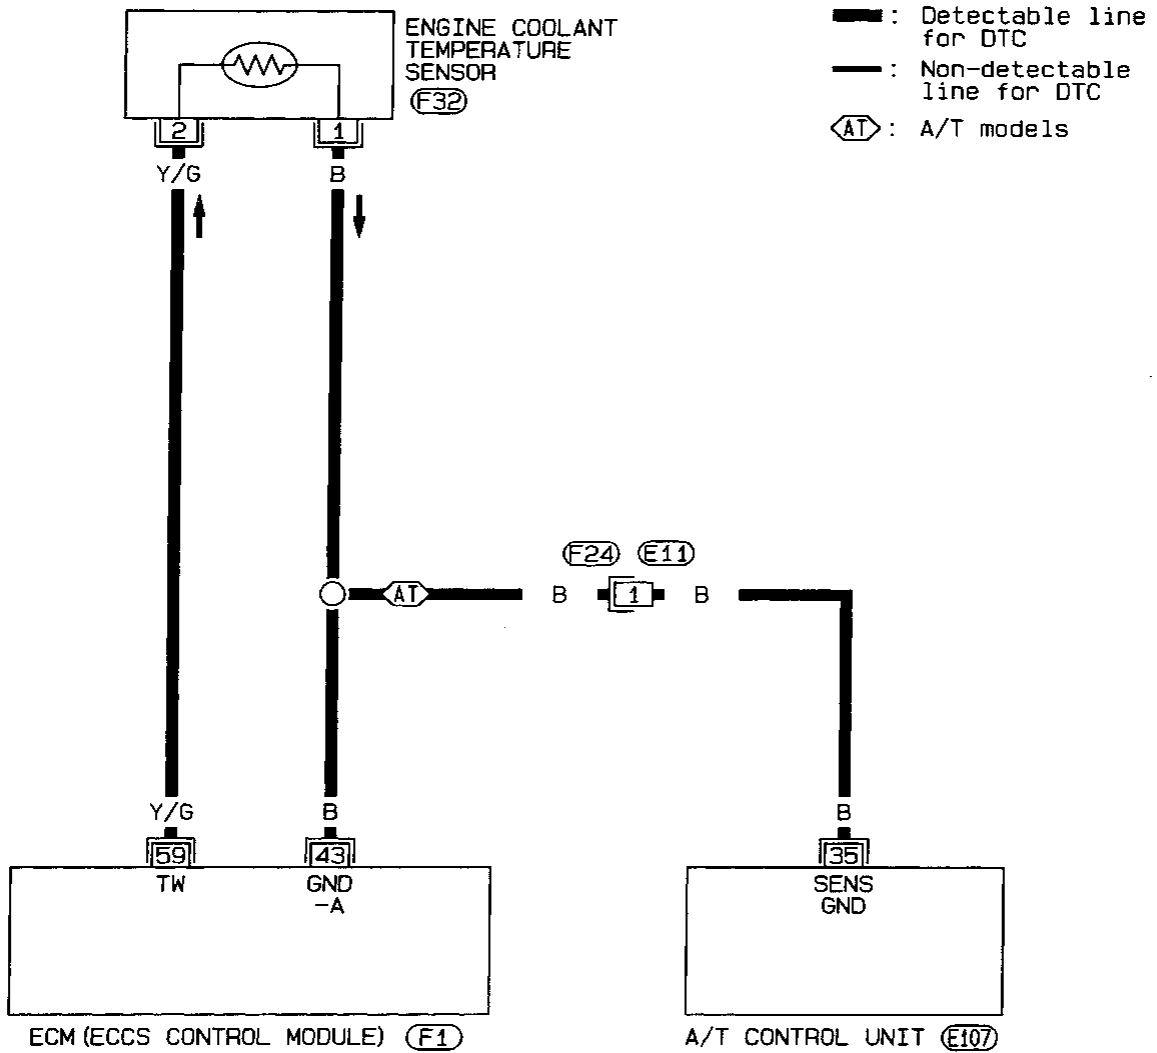


# TROUBLE DIAGNOSIS FOR DTC P0115

## Engine Coolant Temperature Sensor (ECTS) (DTC: 0103) (Cont'd)

### DIAGNOSTIC PROCEDURE

INSPECTION START

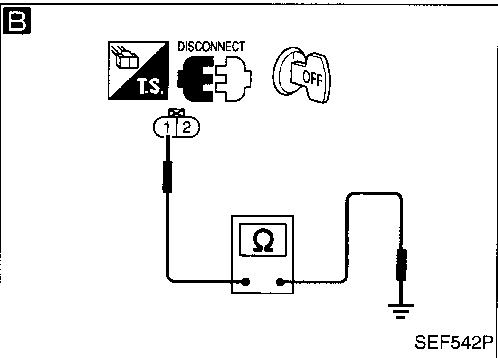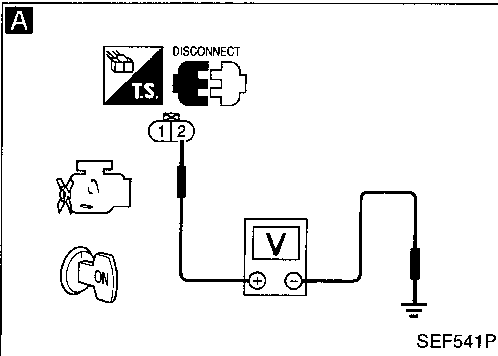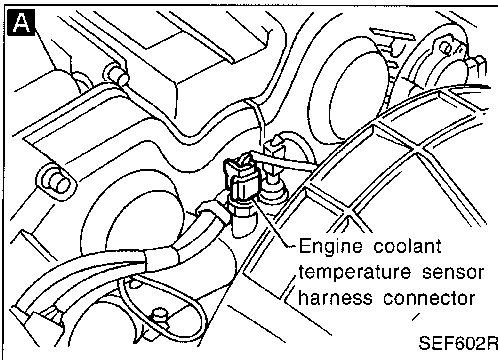

**A**

**CHECK POWER SUPPLY.**

1. Turn ignition switch "OFF".
2. Disconnect engine coolant temperature sensor harness connector.
3. Turn ignition switch "ON".
4. Check voltage between terminal ② and ground with CONSULT or tester.

**Voltage:**  
**Approximately 5V**

NG → Repair harness or connectors.

**B**

**CHECK GROUND CIRCUIT.**

1. Turn ignition switch "OFF".
2. Check harness continuity between terminal ① and engine ground.

**Continuity should exist.**  
If OK, check harness for short.

NG → Check the following.

- Harness connectors (E11), (F24)
- Harness for open or short between ECM and engine coolant temperature sensor
- Harness for open or short between A/T control unit and engine coolant temperature sensor

If NG, repair harness or connectors.

**CHECK COMPONENT**  
(Engine coolant temperature sensor). Refer to "COMPONENT INSPECTION" on next page.

NG → Replace engine coolant temperature sensor.

Disconnect and reconnect harness connectors in the circuit. Then retest.

Trouble is not fixed.

Check ECM pin terminals for damage and check the connection of ECM harness connector. Reconnect ECM harness connector and retest.

INSPECTION END




# TROUBLE DIAGNOSIS FOR DTC P0115

## Engine Coolant Temperature Sensor (ECTS) (DTC: 0103) (Cont'd)


### COMPONENT INSPECTION

#### Engine coolant temperature sensor

Check resistance as shown in the figure.  
(Reference data)

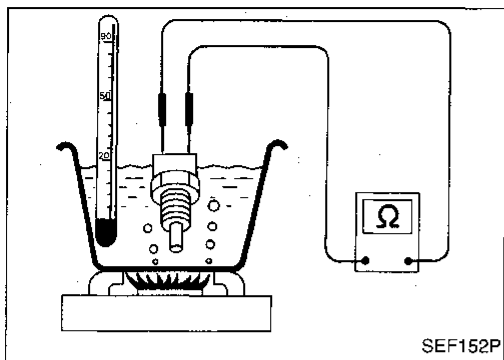

SEF152P

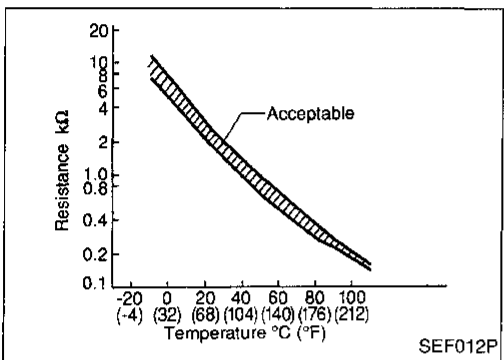

SEF012P

Temperature °C (°F)	Resistance kΩ
20 (68)	2.1 - 2.9
50 (122)	0.68 - 1.00
90 (194)	0.236 - 0.260

If NG, replace engine coolant temperature sensor.

GI

MA

EM

LC

**EC**

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL


IDX

# TROUBLE DIAGNOSIS FOR DTC P0120

## Throttle Position Sensor (DTC: 0403)

The throttle position sensor responds to the accelerator pedal movement. This sensor is a kind of potentiometer which transforms the throttle position into output voltage, and emits the voltage signal to the ECM. In addition, the sensor detects the opening and closing speed of the throttle valve and feeds the voltage signal to the ECM.

Idle position of the throttle valve is determined by the ECM receiving the signal from the throttle position sensor. This one controls engine operation such as fuel cut. In addition, a "Wide open and closed throttle position switch" is built into the throttle position sensor unit.


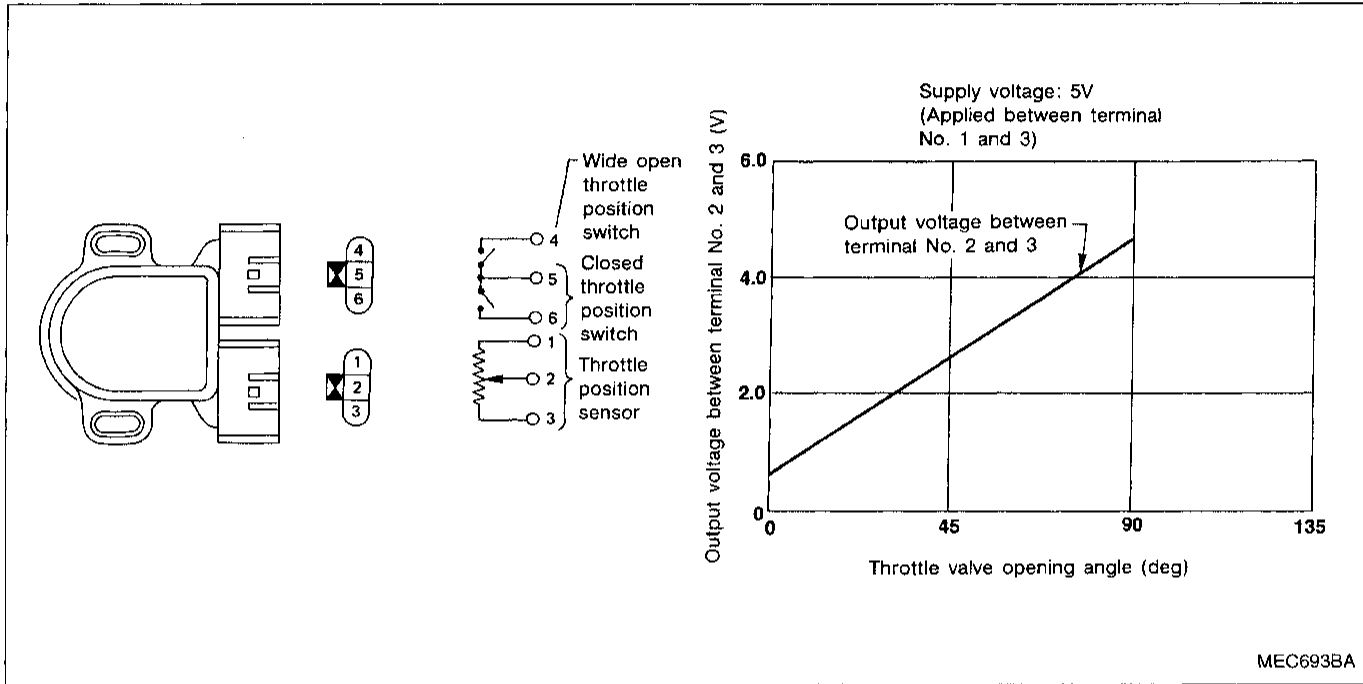


Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0120 0403	<ul style="list-style-type: none"> <li>An excessively low or high voltage from the sensor is sent to ECM.</li> <li>Rationally incorrect voltage is sent to ECM compared with the signals from mass air flow sensor, camshaft position sensor and IACV-AAC valve.</li> </ul>	<ul style="list-style-type: none"> <li>Harness or connectors (The sensor circuit is open or shorted.)</li> <li>Throttle position sensor</li> </ul>

# TROUBLE DIAGNOSIS FOR DTC P0120

## Throttle Position Sensor (DTC: 0403) (Cont'd) OVERALL FUNCTION CHECK

Use this procedure to check the overall function of the throttle position sensor circuit. During this check, a DTC might not be confirmed.

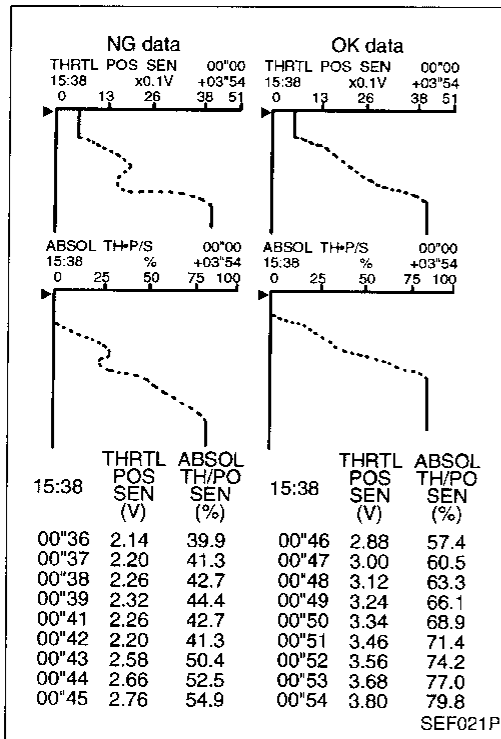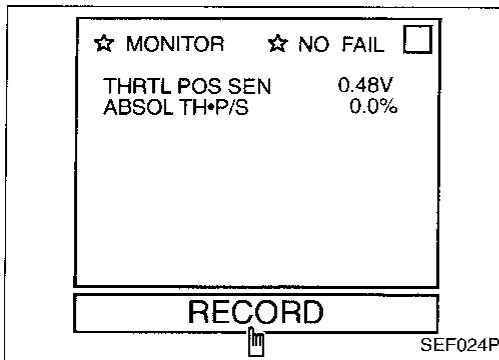


- 1) Start engine and warm it up sufficiently.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Turn ignition switch "ON".
- 4) Select "MANU TRIG" and "HI SPEED" in "DATA MONITOR" mode with CONSULT.
- 5) Select "THRTL POS SEN" and "ABSOL TH+P/S" in "DATA MONITOR" mode with CONSULT.
- 6) Press RECORD on CONSULT SCREEN at the same time accelerator pedal is depressed.
- 7) Print out the recorded data and check the following:

- The voltage when accelerator pedal fully released is approximately 0.35 - 0.65V.
- The voltage rise is linear in response to accelerator pedal depression.
- The voltage when accelerator pedal fully depressed is approximately 4V.

OR







- 1) Start engine and warm it up sufficiently.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Turn ignition switch "ON".
- 4) Check the voltage between ECM terminal ②③ and ②⑤ (ground) and check the following:
  - The voltage when accelerator pedal fully released is approximately 0.35 - 0.65V.
  - The voltage rise is linear in response to accelerator pedal depression.
  - The voltage when accelerator pedal fully depressed is approximately 4V.

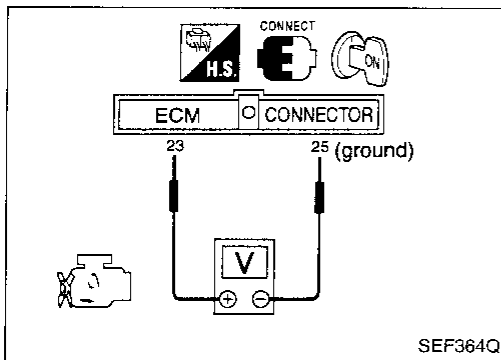

# TROUBLE DIAGNOSIS FOR DTC P0120


## Throttle Position Sensor (DTC: 0403) (Cont'd)

EC-TPS-01

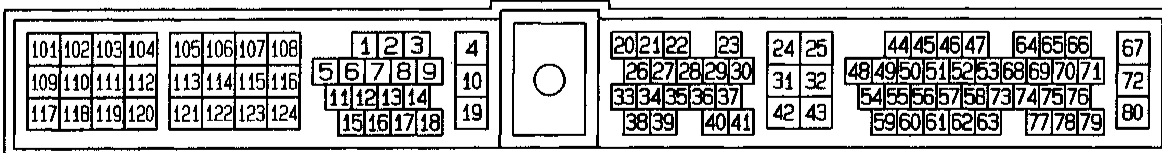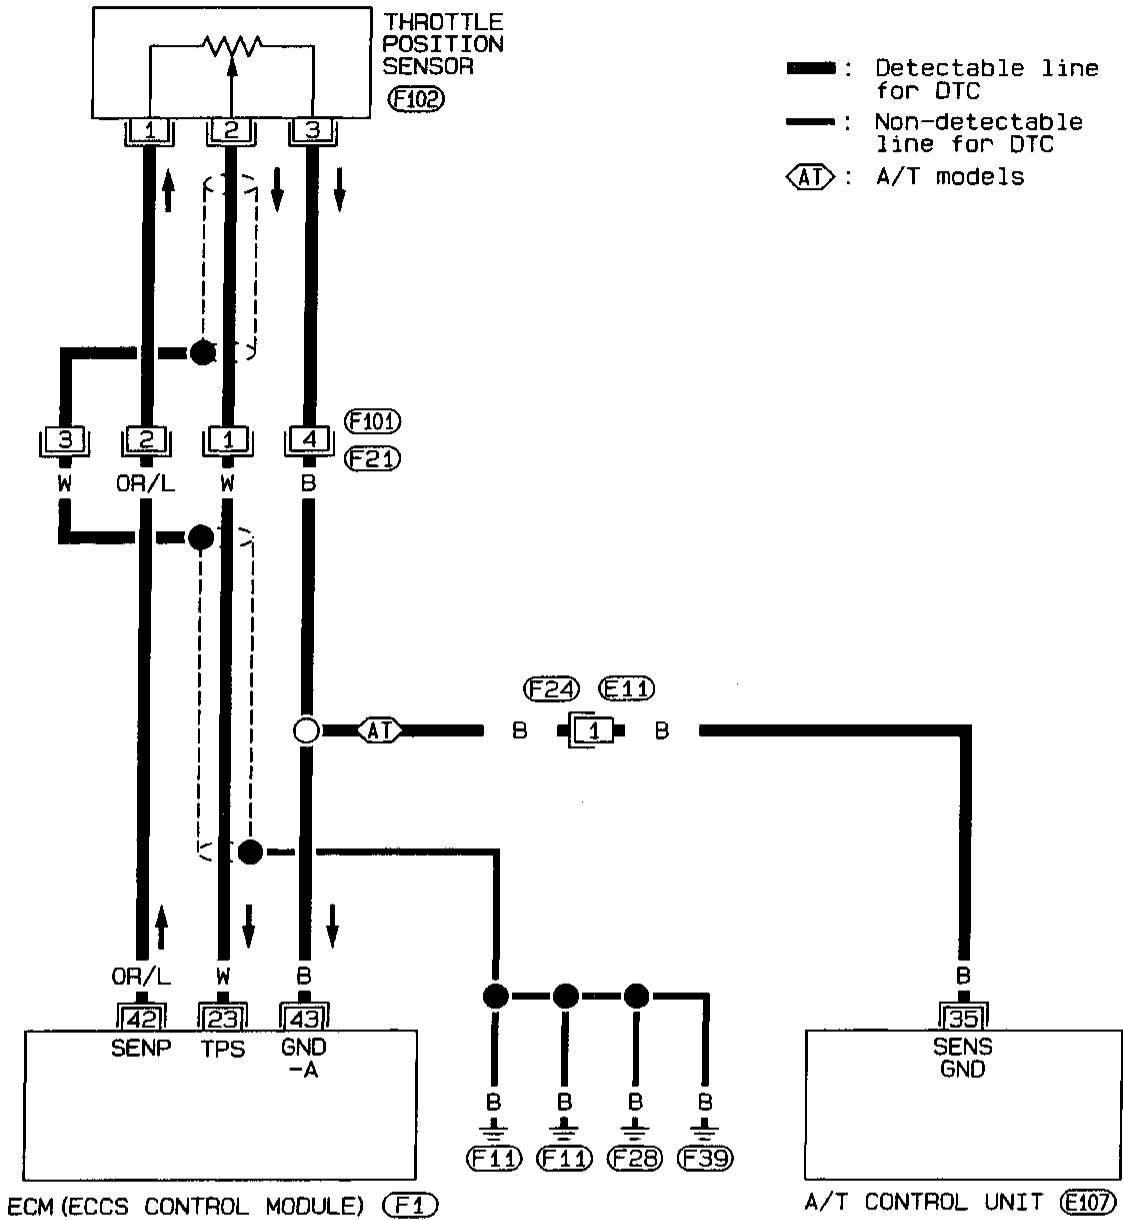

# TROUBLE DIAGNOSIS FOR DTC P0120

## Throttle Position Sensor (DTC: 0403) (Cont'd) DIAGNOSTIC PROCEDURE

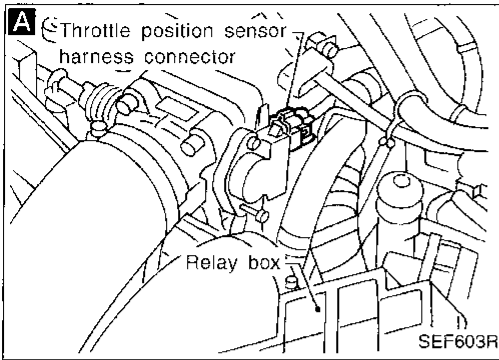

INSPECTION START

**A**

**CHECK POWER SUPPLY.**

1. Turn ignition switch "OFF".
2. Disconnect throttle position sensor harness connector.
3. Turn ignition switch "ON".
4. Check voltage between terminal ① and ground with CONSULT or tester.  
**Voltage: Approximately 5V**


NG

Check the following.

- Harness connectors (F21, F101)
- Harness for open or short between ECM and throttle position sensor

If NG, repair harness or connectors.

GI  
MA  
EM

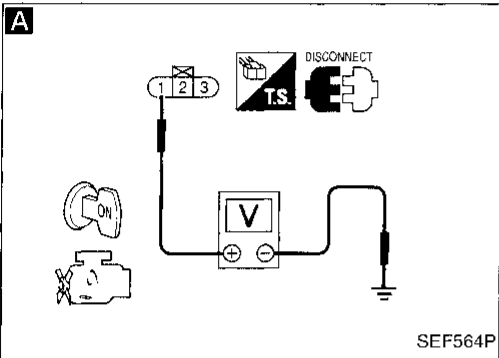

**B**

**CHECK GROUND CIRCUIT.**

1. Turn ignition switch "OFF".
2. Loosen and retighten engine ground screw.
3. Check harness continuity between terminal ③ and engine ground.  
**Continuity should exist.**  
If OK, check harness for short.


NG

Check the following.

- Harness connectors (F21, F101)
- Harness connectors (F24, E11)
- Harness for open or short between throttle position sensor and ECM
- Harness for open or short between throttle position sensor and A/T control unit

If NG, repair harness or connectors.

LC  
EC  
FE  
CL

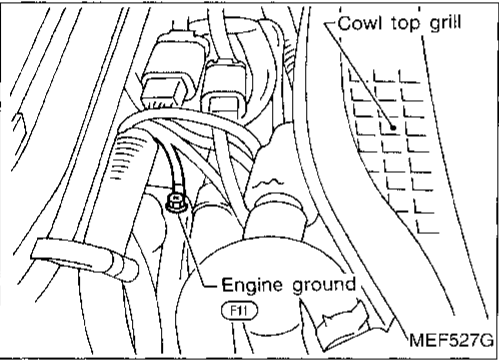

**C**

**CHECK INPUT SIGNAL CIRCUIT.**

1. Disconnect ECM harness connector.
2. Check harness continuity between ECM terminal ②③ and terminal ②.  
**Continuity should exist.**  
If OK, check harness for short.

NG

Check the following.


- Harness connectors (F21, F101)
- Harness for open or short between ECM and throttle position sensor

If NG, repair harness or connectors.

MT  
AT  
PD

ADJUST THROTTLE POSITION SENSOR.  
Perform BASIC INSPECTION, EC-67.

FA  
RA

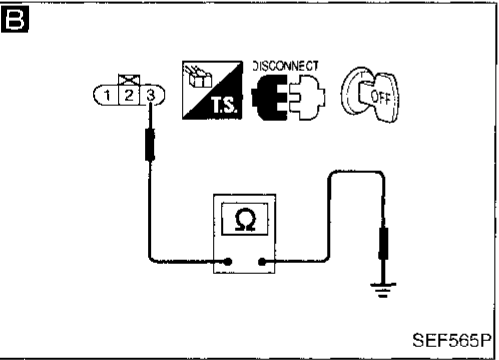

**CHECK COMPONENT**  
(Throttle position sensor).  
Refer to "COMPONENT INSPECTION" on next page.

NG

Replace throttle position sensor. To adjust it, perform BASIC INSPECTION, EC-67.

BR  
ST

Disconnect and reconnect harness connectors in the circuit. Then retest.

RS


Trouble is not fixed.

Check ECM pin terminals for damage and check the connection of ECM harness connector.  
Reconnect ECM harness connector and retest.

BT  
HA

INSPECTION END


EL

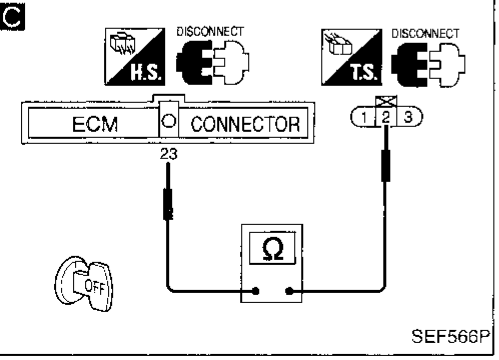

IDX

## TROUBLE DIAGNOSIS FOR DTC P0120

### Throttle Position Sensor (DTC: 0403) (Cont'd) COMPONENT INSPECTION

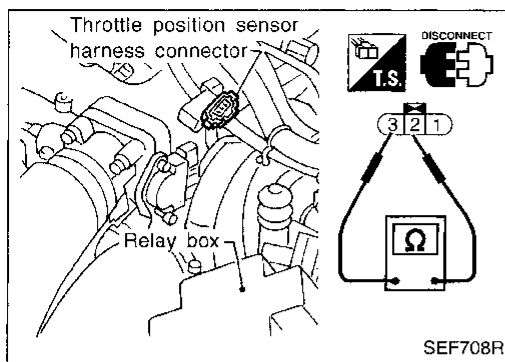


#### Throttle position sensor

1. Start engine and warm it up sufficiently.
2. Turn ignition switch "OFF".
3. Disconnect throttle position sensor harness connector.
4. Make sure that resistance between terminals ② and ③ changes when opening throttle valve manually.

Throttle valve conditions	Resistance at 25°C (77°F)
Completely closed	Approximately 0.5 kΩ
Partially open	0.5 - 4.0 kΩ
Completely open	Approximately 4.0 kΩ


If NG, replace throttle position sensor.

To adjust throttle position sensor, perform "BASIC INSPECTION", EC-67.

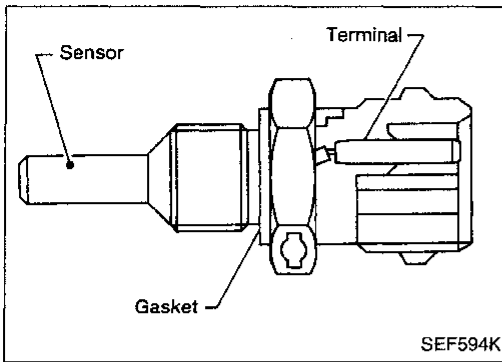

### Engine Coolant Temperature (ECT) Sensor (DTC: 0908)

The engine coolant temperature sensor is used to detect the engine coolant temperature. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the engine coolant temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

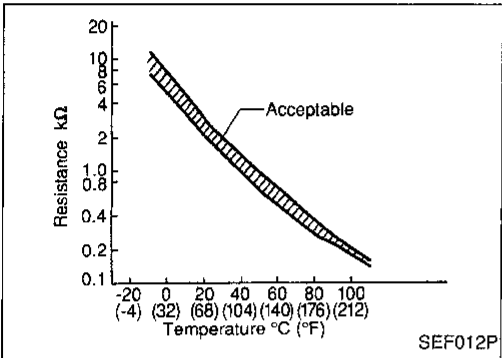

<Reference data>


Engine coolant temperature °C (°F)	Voltage (V)	Resistance (kΩ)
-10 (14)	4.4	7.0 - 11.4
20 (68)	3.5	2.1 - 2.9
50 (122)	2.2	0.68 - 1.00
90 (194)	0.98	0.236 - 0.260
110 (230)	0.64	0.143 - 0.153

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0125 0908	<ul style="list-style-type: none"> <li>• Voltage sent to ECM from the sensor is not practical, even when some time has passed after starting the engine.</li> <li>• Engine coolant temperature is insufficient for closed loop fuel control.</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connectors (High resistance in the circuit)</li> <li>• Engine coolant temperature sensor</li> <li>• Thermostat</li> </ul>

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX


## TROUBLE DIAGNOSIS FOR DTC P0125

### Engine Coolant Temperature (ECT) Sensor (DTC: 0908) (Cont'd)

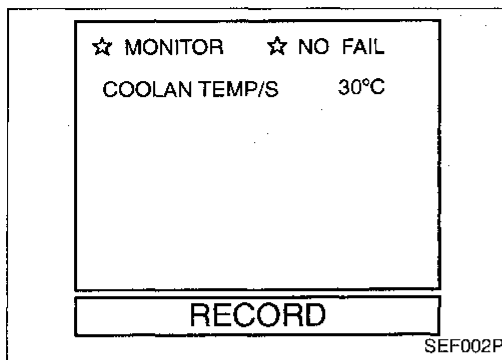

FUEL SYS #1	OPEN
FUEL SYS #2	OPEN
CALC LOAD	15%
<b>COOLANT TEMP</b>	<b>31°C</b>
SHORT FT #1	0%
LONG FT #1	0%
SHORT FT #2	0%
LONG FT #2	0%
ENGINE SPD	1065RPM
VEHICLE SPD	0MPH
IGN ADVANCE	15.0°
INTAKE AIR	25°C

SEF729P

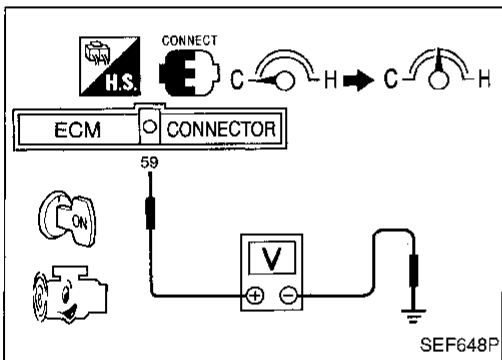

#### OVERALL FUNCTION CHECK

Use this procedure to check the overall function of the engine coolant temperature sensor circuit. During this check, a DTC might not be confirmed.

**Note:** If both DTC P0115 (0103) and P0125 (0908) are displayed, first perform TROUBLE DIAGNOSIS FOR DTC P0115 (0103), EC-118.



- 1) Turn ignition switch "ON".
- 2) Select "COOLANT TEMP/S" in "DATA MONITOR" mode with CONSULT.
- 3) Start engine and run it at idle speed.
- 4) Check that the engine coolant temperature rises to 25°C (77°F) or more within 15 minutes. (Be careful not to overheat engine.)

OR



- 1) Turn ignition switch "ON".
- 2) Select "MODE 1" with GST.
- 3) Start engine and run it at idle speed.
- 4) Check that the engine coolant temperature rises to 25°C (77°F) or more within 15 minutes. (Be careful not to overheat engine.)

OR







- 1) Turn ignition switch "ON".
- 2) Probe voltage meter between ECM terminal 59 and ground.
- 3) Start engine and run it at idle speed.
- 4) Check that voltage of engine coolant temperature changes to less than 3.3 (V) within 15 minutes. (Be careful not to overheat engine.)



# TROUBLE DIAGNOSIS FOR DTC P0125

## Engine Coolant Temperature (ECT) Sensor (DTC: 0908) (Cont'd)

EC-ECTS-01

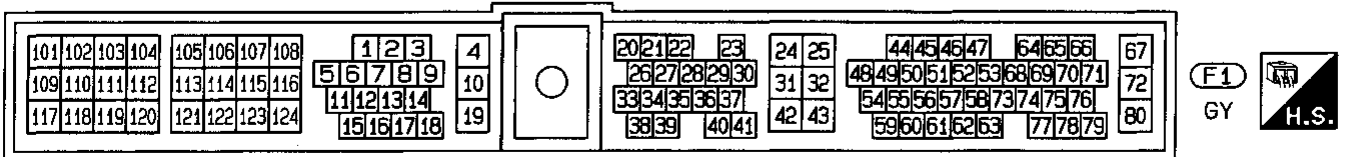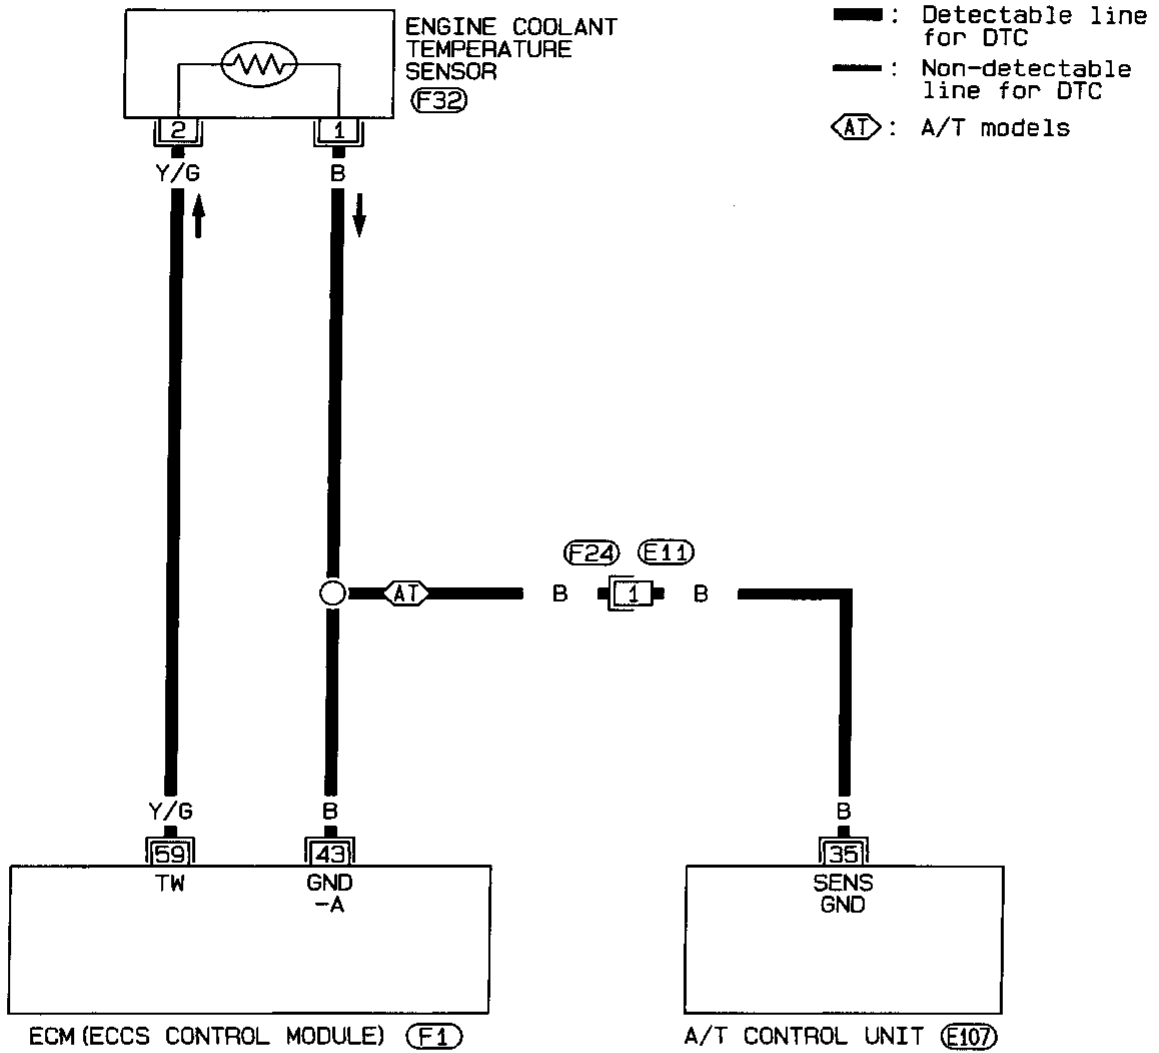


GI  
 MA  
 EM  
 LC  
**EC**  
 FE  
 CL  
 MT  
 AT  
 PD  
 FA  
 RA  
 BR  
 ST  
 RS  
 BT  
 HA  
 EL  
 IDX

# TROUBLE DIAGNOSIS FOR DTC P0125

## Engine Coolant Temperature (ECT) Sensor (DTC: 0908) (Cont'd)

### DIAGNOSTIC PROCEDURE

INSPECTION START

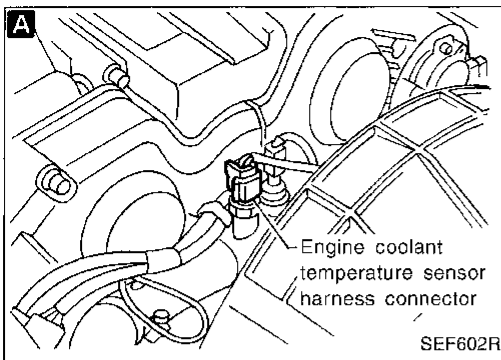


**A**

**CHECK POWER SUPPLY.**

1. Turn ignition switch "OFF".
2. Disconnect engine coolant temperature sensor harness connector.
3. Turn ignition switch "ON".
4. Check voltage between terminal ② and ground with CONSULT or tester.

**Voltage:**  
Approximately 5V

NG → Repair harness or connectors.

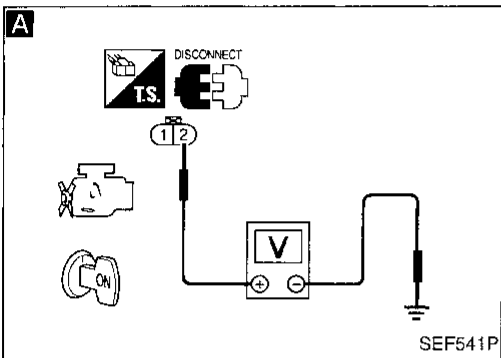

**B**

**CHECK GROUND CIRCUIT.**


1. Turn ignition switch "OFF".
2. Check harness continuity between terminal ① and engine ground.

**Continuity should exist.**  
If OK, check harness for short.

NG → Check the following.

- Harness connectors (E11), (F24)
- Harness for open or short between ECM and engine coolant temperature sensor
- Harness for open or short between A/T control unit and engine coolant temperature sensor

If NG, repair harness or connectors.

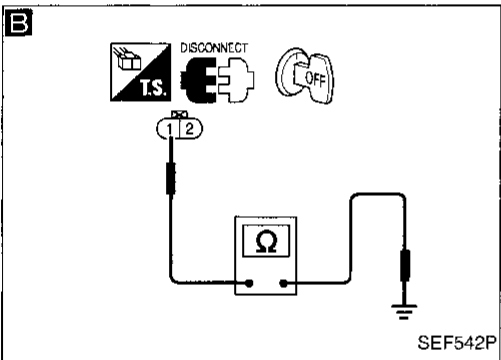

**CHECK COMPONENT**  
(Engine coolant temperature sensor).  
Refer to "COMPONENT INSPECTION" on next page.

NG → Replace engine coolant temperature sensor.

**CHECK THERMOSTAT OPERATION.**  
When the engine is cold [lower than 70°C (158°F)], grasp lower radiator hose and confirm the engine coolant does not flow.

NG → **CHECK COMPONENT.**  
(Thermostat)  
Refer to LC section ("Thermostat").  
If NG, replace it.

Disconnect and reconnect harness connectors in the circuit. Then retest.



Trouble is not fixed.

Check ECM pin terminals for damage and check the connection of ECM harness connector. Reconnect ECM harness connector and retest.

INSPECTION END

# TROUBLE DIAGNOSIS FOR DTC P0125

## Engine Coolant Temperature (ECT) Sensor (DTC: 0908) (Cont'd)

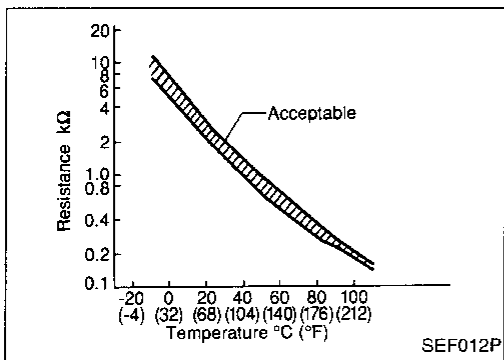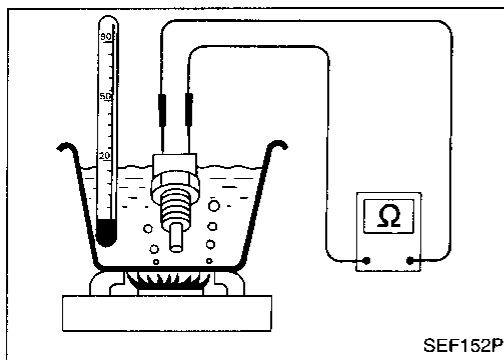

### COMPONENT INSPECTION

#### Engine coolant temperature sensor

Check resistance as shown in the figure.  
(Reference data)

Temperature °C (°F)	Resistance (kΩ)
20 (68)	2.1 - 2.9
50 (122)	0.68 - 1.0
90 (194)	0.236 - 0.260

If NG, replace engine coolant temperature sensor.

GI

MA

EM

LC

**EC**

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX


# TROUBLE DIAGNOSIS FOR DTC P0130, P0150

## Closed Loop Control (DTC: 0307, 0308)

★ The closed loop control has the one trip detection logic.

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0130 0307	<ul style="list-style-type: none"> <li>The closed loop control function for right bank does not operate even when vehicle is driving in the specified condition.</li> </ul>	<ul style="list-style-type: none"> <li>The front heated oxygen sensor (right bank) circuit is open or shorted.</li> <li>Front heated oxygen sensor (right bank)</li> <li>Front heated oxygen sensor heater (right bank)</li> </ul>
P0150* 0308	<ul style="list-style-type: none"> <li>The closed loop control function for left bank does not operate even when vehicle is driving in the specified condition.</li> </ul>	<ul style="list-style-type: none"> <li>The front heated oxygen sensor (left bank) circuit is open or shorted.</li> <li>Front heated oxygen sensor (left bank)</li> <li>Front heated oxygen sensor heater (left bank)</li> </ul>

\*: Using CONSULT, "P0130" will be displayed in this case.

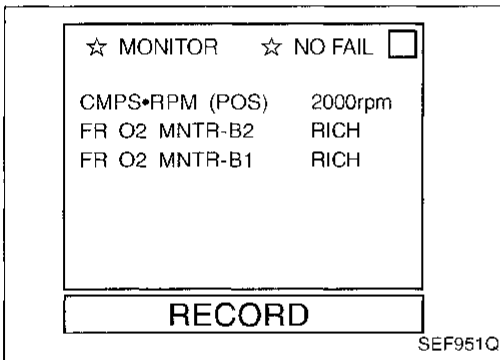

### OVERALL FUNCTION CHECK

Use this procedure to check the overall function of the closed loop control. During this check, a DTC might not be confirmed.

- 1) Start engine and warm it up sufficiently.
  - 2) Select "MANU TRIG" and "HI SPEED" in "DATA MONITOR" mode with CONSULT, and select "FRO2 MNTR-B1(B2)".
  - 3) Hold engine speed at 2,000 rpm under no load during the following steps.
  - 4) Touch "RECORD" on CONSULT screen.
  - 5) Check the following.
    - "FR O2 MNTR-B1(B2)" in "DATA MONITOR" mode changes from "RICH" to "LEAN" to "RICH" 5 times in 10 seconds.
- 5 times (cycles) are counted as shown below:

cycle | 1 | 2 | 3 | 4 | 5 |  
FR O2 MNTR-B1(B2) R-L-R-L-R-L-R-L-R-L-R

R = "FR O2 MNTR-B1(B2)", "RICH"  
L = "FR O2 MNTR-B1(B2)", "LEAN"

OR

- 1) Start engine and warm it up sufficiently.
- 2) Make sure that malfunction indicator lamp goes on more than 5 times within 10 seconds while keeping at 2,000 rpm in Diagnostic Test Mode II (Front heated oxygen sensor monitor).


### DIAGNOSTIC PROCEDURE

#### For right bank

Refer to TROUBLE DIAGNOSIS FOR DTC P0130, EC-133.  
Refer to TROUBLE DIAGNOSIS FOR DTC P0135, EC-138.


#### For left bank

Refer to TROUBLE DIAGNOSIS FOR DTC P0150, EC-150.  
Refer to TROUBLE DIAGNOSIS FOR DTC P0155, EC-155.

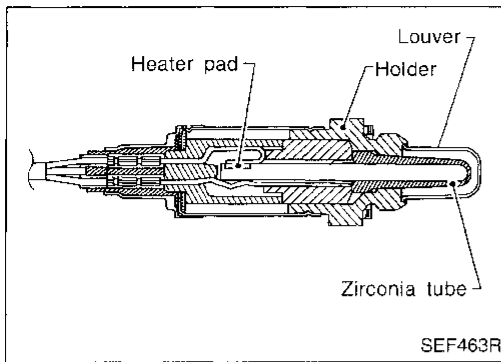


### Front Heated Oxygen Sensor (Front HO2S) (Right bank) (DTC: 0503)

The front heated oxygen sensor (right bank) is placed into the front tube (right bank). It detects the amount of oxygen in the exhaust gas compared to the outside air. The front heated oxygen sensor (right bank) has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The front heated oxygen sensor (right bank) signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

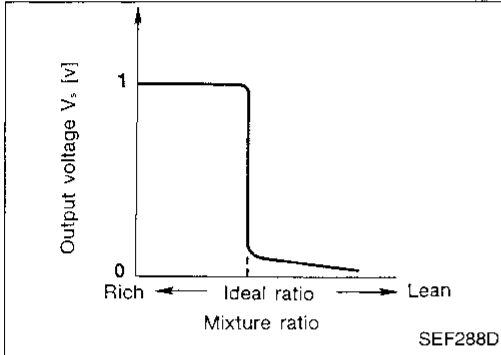

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0130 0503	<ul style="list-style-type: none"> <li>An excessively high voltage from the sensor is sent to ECM.</li> <li>The voltage from the sensor is constantly approx. 0.3V.</li> <li>The maximum and minimum voltages from the sensor are not reached to the specified voltages.</li> <li>It takes more time for the sensor to respond between rich and lean than the specified time.</li> </ul>	<ul style="list-style-type: none"> <li>Harness or connectors (The sensor circuit is open or shorted.)</li> <li>Front heated oxygen sensor (right bank)</li> <li>Fuel pressure</li> <li>Injectors</li> <li>Intake air leaks</li> </ul>

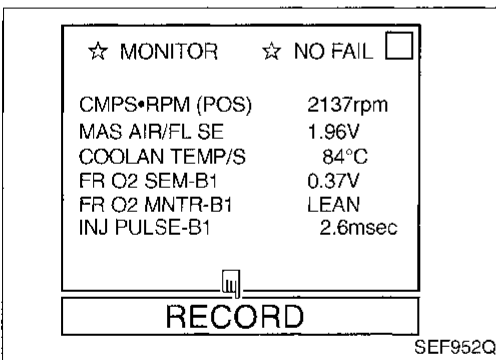

### OVERALL FUNCTION CHECK

Use this procedure to check the overall function of the front heated oxygen sensor circuit. During this check, a DTC might not be confirmed.

- Start engine and warm it up sufficiently.
- Select "MANU TRIG" and "HI SPEED" in "DATA MONITOR" mode with CONSULT, and select "FR O2 SEN-B1" and "FR O2 MNTR-B1".
- Hold engine speed at 2,000 rpm under no load during the following steps.
- Touch "RECORD" on CONSULT screen.
- Check the following.
  - "FR O2 MNTR-B1" in "DATA MONITOR" mode changes from "RICH" to "LEAN" to "RICH" 5 times in 10 seconds.

5 times (cycles) are counted as shown below:

cycle | 1 | 2 | 3 | 4 | 5 |

FR O2 MNTR-B1 R-L-R-L-R-L-R-L-R



R = "FR O2 MNTR-B1", "RICH"

L = "FR O2 MNTR-B1", "LEAN"

## TROUBLE DIAGNOSIS FOR DTC P0130

### Front Heated Oxygen Sensor (Front HO2S) (Right bank) (DTC: 0503) (Cont'd)

- "FR O2 SEN-B1" voltage goes above 0.6V at least once.
- "FR O2 SEN-B1" voltage goes below 0.35V at least once.
- The voltage never exceeds 1.0V.

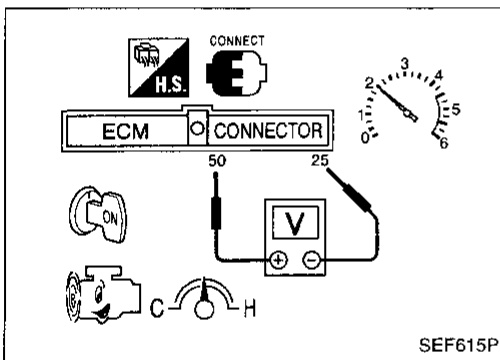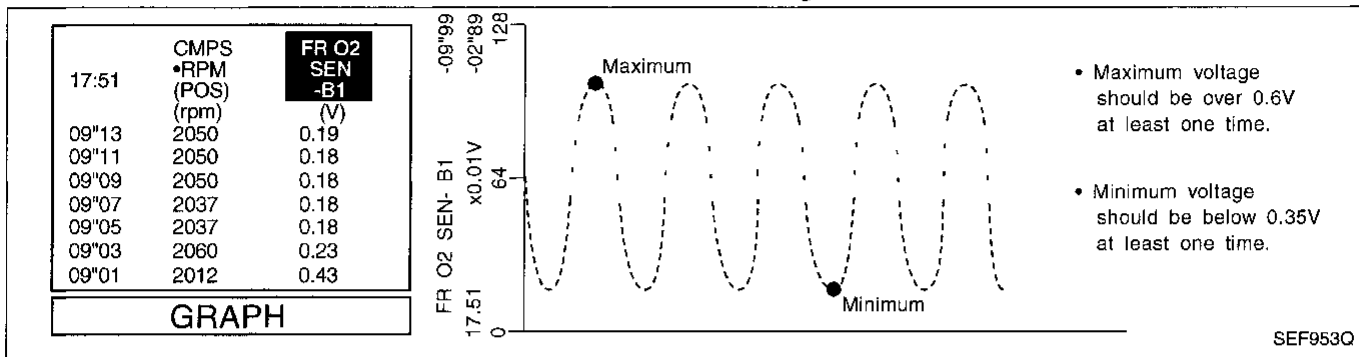




OR

- 1) Start engine and warm it up sufficiently.
- 2) Set voltmeter probes between ECM terminal ⑤⑩ (sensor signal) and ②⑤ (engine ground).
- 3) Check the following with engine speed held at 2,000 rpm constant under no load.
  - Malfunction indicator lamp goes on more than 5 times within 10 seconds in Diagnostic Test Mode II (FRONT HEATED OXYGEN SENSOR MONITOR).
  - The maximum voltage is over 0.6V at least one time.
  - The minimum voltage is below 0.35V at least one time.
  - The voltage never exceeds 1.0V.

# TROUBLE DIAGNOSIS FOR DTC P0130

## Front Heated Oxygen Sensor (Front HO2S) (Right bank) (DTC: 0503) (Cont'd)

EC-FR02RH-01

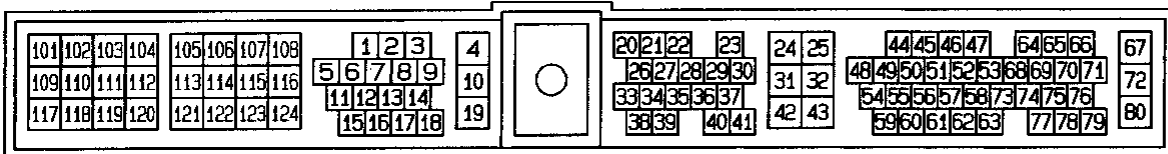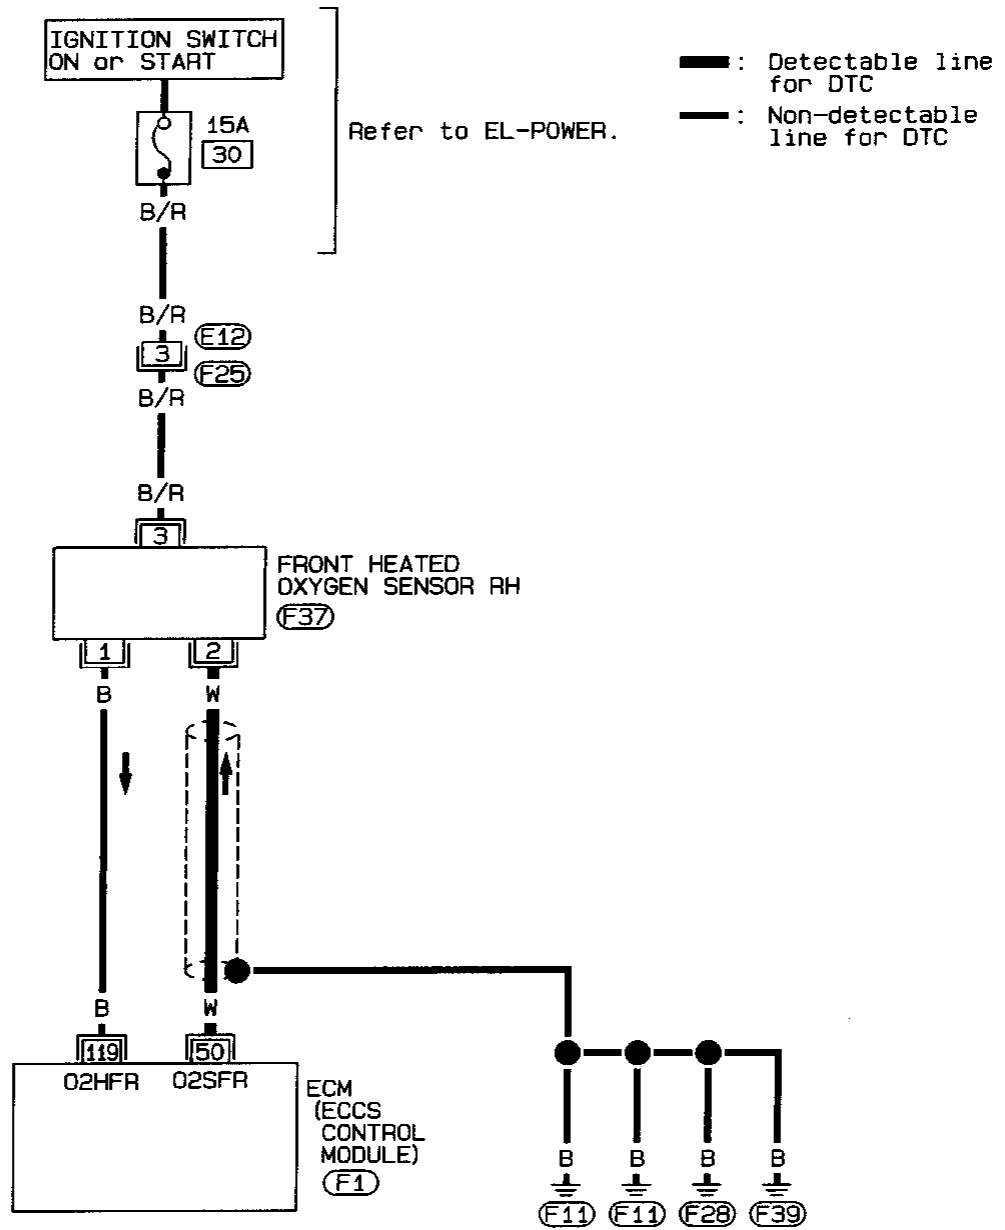


GI  
MA  
EM  
LC  
**EC**  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

# TROUBLE DIAGNOSIS FOR DTC P0130

## Front Heated Oxygen Sensor (Front HO2S) (Right bank) (DTC: 0503) (Cont'd)

### DIAGNOSTIC PROCEDURE

INSPECTION START

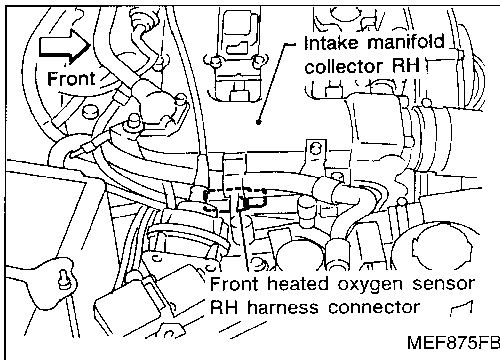


**A**

#### CHECK INPUT SIGNAL CIRCUIT.

1. Turn ignition switch "OFF".
2. Disconnect front heated oxygen sensor RH harness connector and ECM harness connector.
3. Check harness continuity between ECM terminal (50) and terminal (2). **Continuity should exist.**
4. Check harness continuity between ECM terminal (50) (or terminal (2)) and ground. **Continuity should not exist.**  
If OK, check harness for short.

NG

Repair harness or connectors.

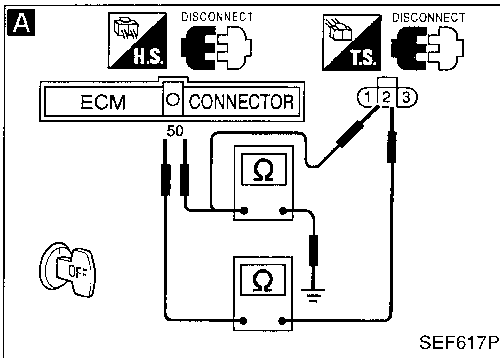

OK

Loosen and retighten engine ground screws.



**B**

#### CLEAR THE SELF-LEARNING DATA

1. Start engine and warm it up sufficiently.
2. Select "SELF-LEARNING CONT" in "ACTIVE TEST" mode with CONSULT.
3. Clear the self-learning control coefficient by touching "CLEAR".
4. Run engine for at least 10 minutes at idle speed.  
**Are the DTCs P0171, P0172 detected? Is it difficult to start engine?**

Yes

Go to "TROUBLE DIAGNOSIS FOR DTC P0171, P0172", EC-167, 173.

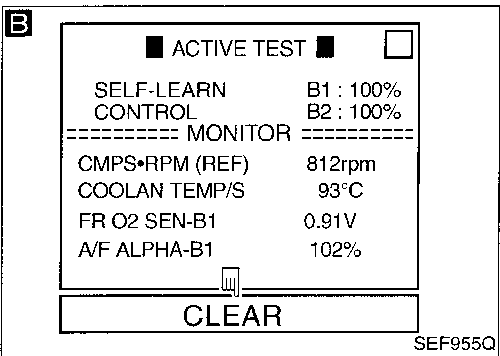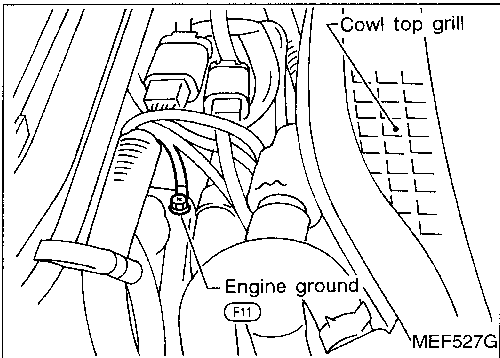


OR

2. Turn ignition switch "OFF".
3. Disconnect mass air flow sensor harness connector, and restart and run engine for at least 3 seconds at idle speed.
4. Stop engine and reconnect mass air flow sensor harness connector.
5. Make sure diagnostic trouble code No. 0102 is displayed in Diagnostic Test Mode II.
6. Erase the diagnostic test mode II (Self-diagnostic results) memory. Make sure diagnostic trouble code No. 0505 is displayed in Diagnostic Test Mode II.
7. Run engine for at least 10 minutes at idle speed.  
**Are the DTCs 0114, 0115 detected? Is it difficult to start engine?**

No


**A**

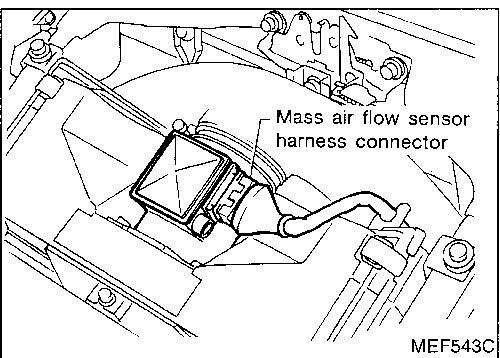



# TROUBLE DIAGNOSIS FOR DTC P0130

## Front Heated Oxygen Sensor (Front HO2S) (Right bank) (DTC: 0503) (Cont'd)

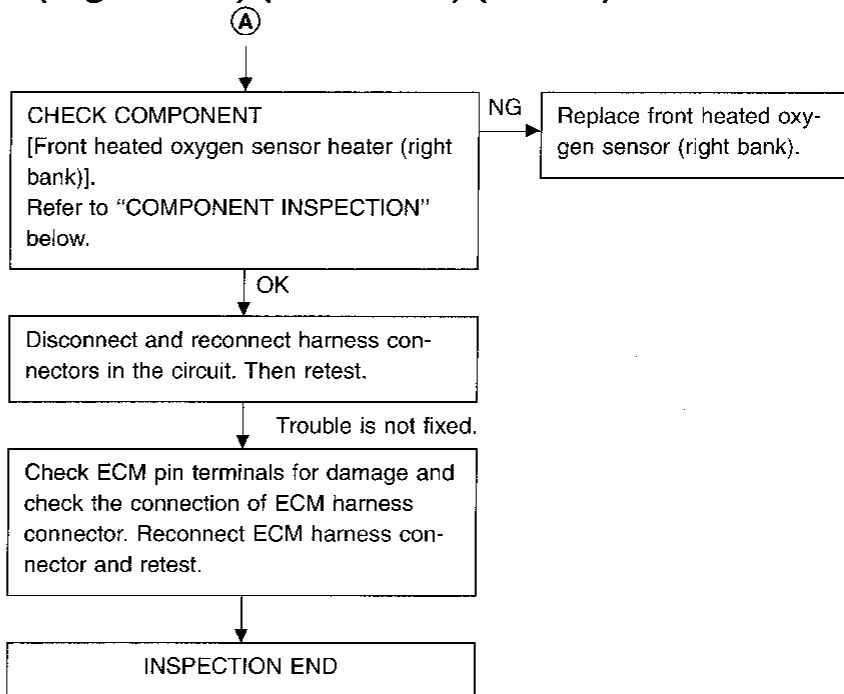

GI

MA

EM

LC

EC

FE

CL

WT

AT

PD

FA

RA

BR

ST


RS

BT

HA

EL

DX

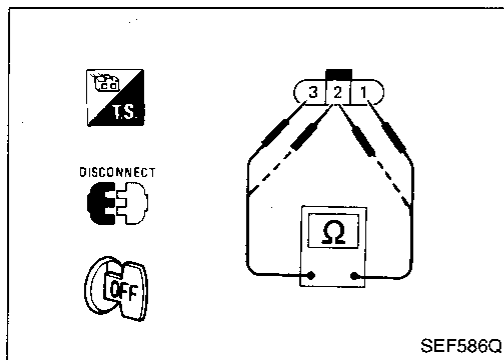

### COMPONENT INSPECTION

#### Front heated oxygen sensor heater

Check resistance between terminals ③ and ①.

**Resistance: 2.3 - 4.3Ω at 25°C (77°F)**

Check continuity between terminals ② and ①, ③ and ②.

**Continuity should not exist.**

If NG, replace the front heated oxygen sensor.


#### CAUTION:

Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

# TROUBLE DIAGNOSIS FOR DTC P0135

## Front Heated Oxygen Sensor Heater (Right bank) (DTC: 0901)

### SYSTEM DESCRIPTION

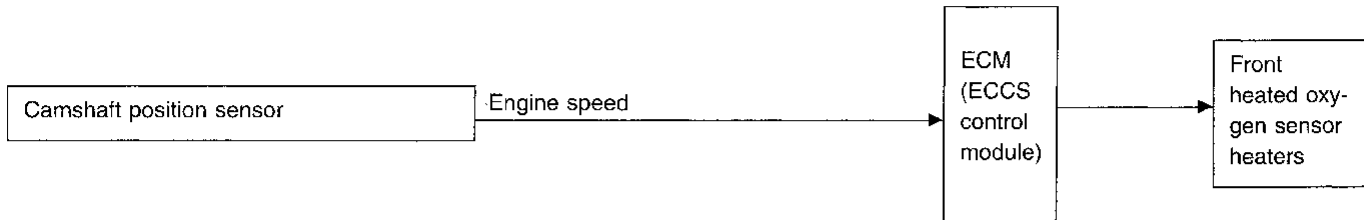




The ECM performs ON/OFF control of the front heated oxygen sensor heaters corresponding to the engine speed.

### OPERATION

Engine	Engine speed rpm	Front heated oxygen sensor heaters
Non-turbocharger	Above 2,900	OFF
	Below 2,900	ON
Turbocharger	Above 2,800	OFF
	Below 2,800	ON

Diagnostic Trouble Code No.	Malfunction is detected when ....	Check Items (Possible Cause)
P0135 0901	<ul style="list-style-type: none"> <li>The current amperage in the front heated oxygen sensor heater (Right bank) circuit is out of the normal range. (The improper voltage drop signal is sent to ECM through the front heated oxygen sensor heater.)</li> </ul>	<ul style="list-style-type: none"> <li>Harness or connectors (The front heated oxygen sensor heater circuit is open or shorted.)</li> <li>Front heated oxygen sensor heater (Right bank)</li> </ul>




### DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

- 
 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT.
- 2) Start engine and run it for at least 5 seconds at idle speed.
- OR
- 
 1) Start engine and run it for at least 5 seconds at idle speed.
- 2) Select "MODE 3" with GST.
- OR
- 
 1) Start engine and run it for at least 5 seconds at idle speed.
- 2) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 3) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

# TROUBLE DIAGNOSIS FOR DTC P0135

## Front Heated Oxygen Sensor Heater (Right bank) (DTC: 0901) (Cont'd)

EC-F02H-R-01



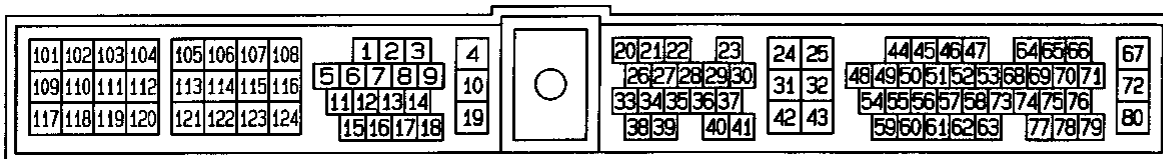

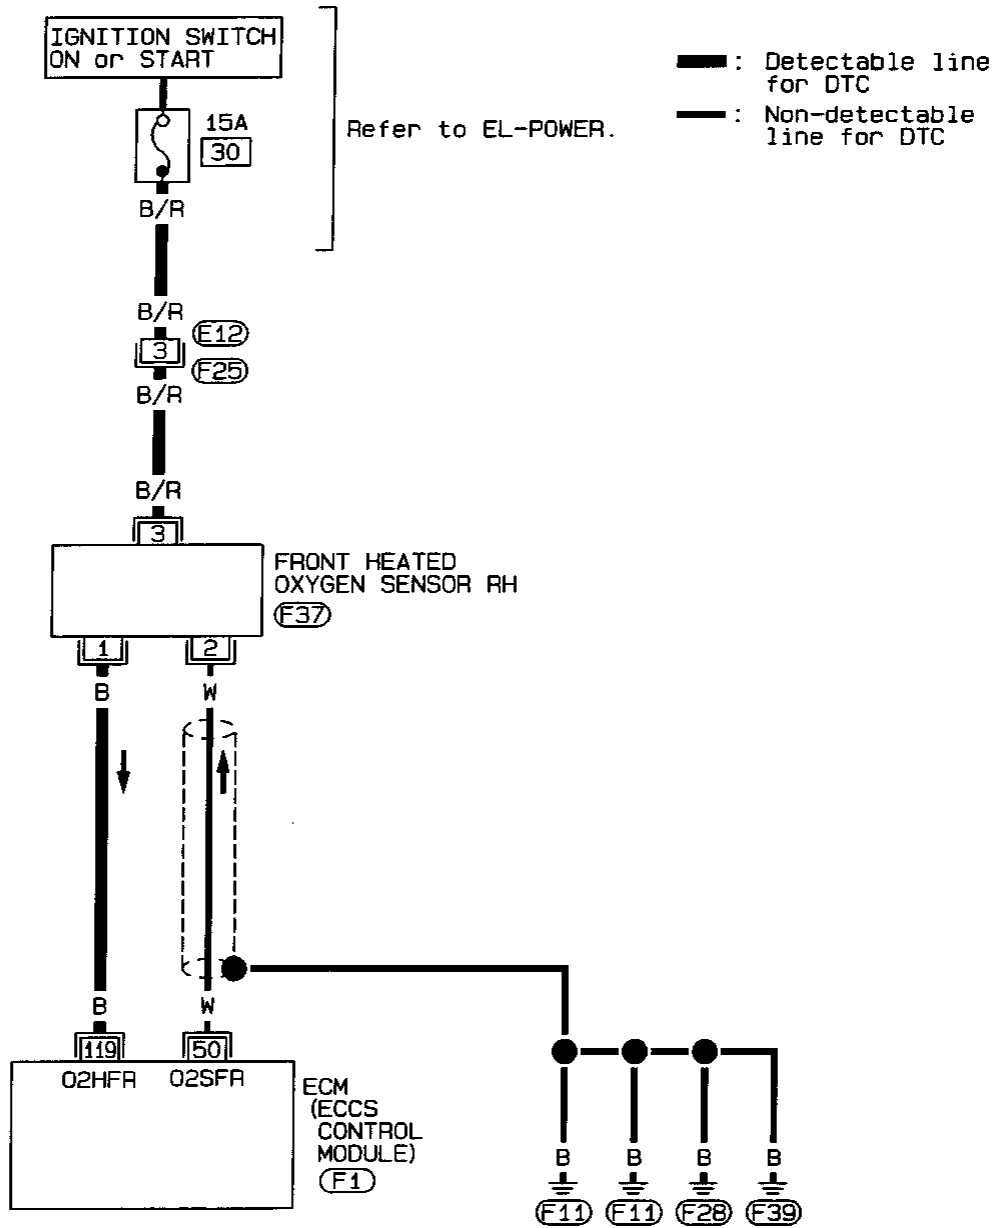


GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

# TROUBLE DIAGNOSIS FOR DTC P0135

## Front Heated Oxygen Sensor Heater (Right bank) (DTC: 0901) (Cont'd)

### DIAGNOSTIC PROCEDURE

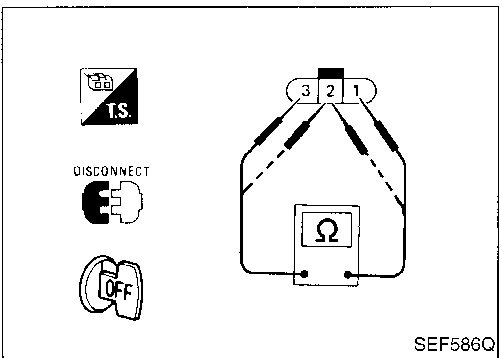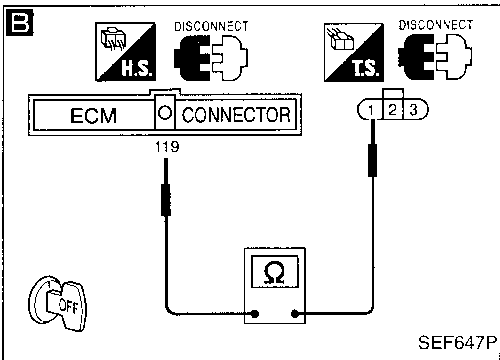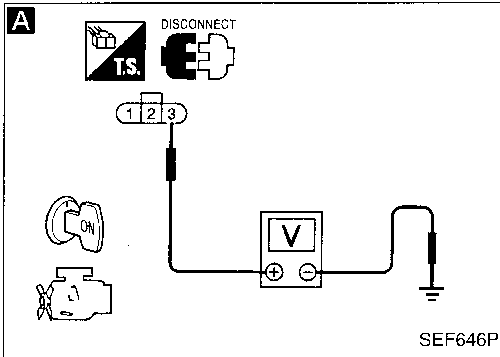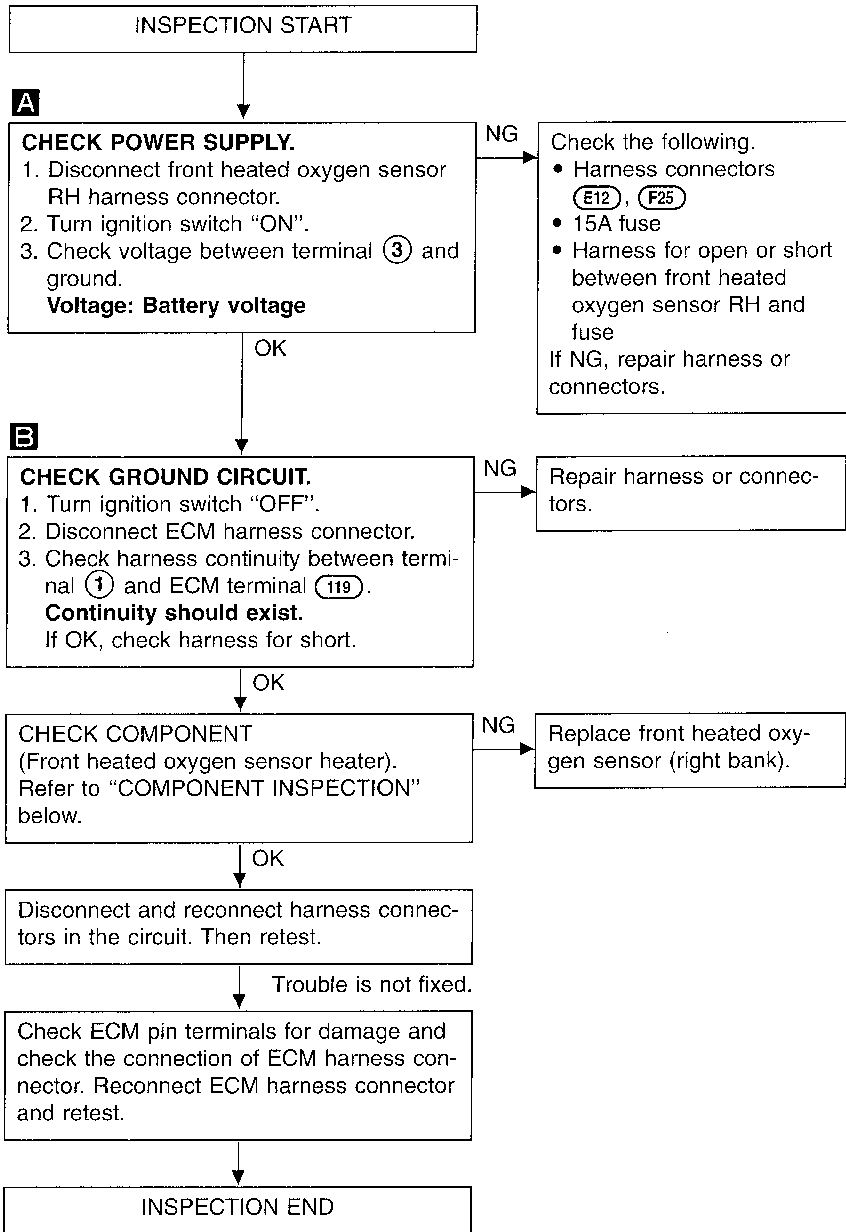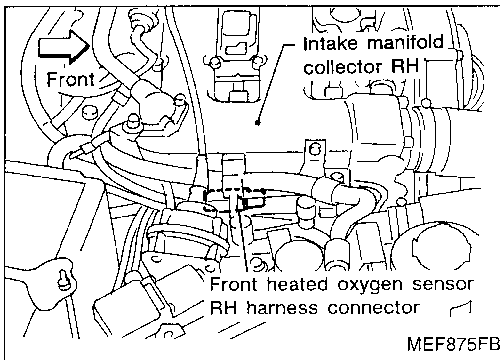

### COMPONENT INSPECTION

#### Front heated oxygen sensor heater

Check resistance between terminals ③ and ①.

**Resistance: 2.3 - 4.3Ω at 25°C (77°F)**


Check continuity between terminals ② and ①, ③ and ②.

**Continuity should not exist.**

If NG, replace the front heated oxygen sensor.

#### CAUTION:

Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

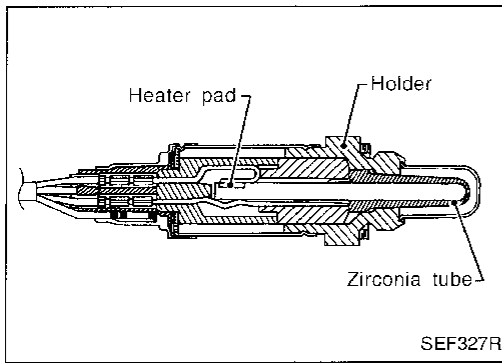

**Rear Heated Oxygen Sensor (Rear HO2S)  
(Right bank) (DTC: 0707)**

The rear heated oxygen sensor (Rear HO2S), after three way catalyst, monitors the oxygen level in the exhaust gas.

Even if switching characteristics of the front heated oxygen sensor are shifted, the air fuel ratio is controlled to stoichiometric, by the signal from the rear heated oxygen sensor.

This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions.

Under normal conditions the rear heated oxygen sensor is not used for engine control operation.

CI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
PD  
FA  
BA  
BR  
ST  
RS  
BT  
EA  
EL  
DX

**ON BOARD DIAGNOSIS LOGIC**

The rear heated oxygen sensor has a much longer switching time between rich and lean than the front heated oxygen sensor. The oxygen storage capacity before the three way catalyst causes the longer switching time. To judge the malfunctions of rear heated oxygen sensor, ECM monitors the sensor's voltage value and the switching response during the various driving condition such as fuel-cut.

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0136 0707	<ul style="list-style-type: none"> <li>An excessively high voltage from the sensor is entered to ECM.</li> <li>The voltage from the sensor is constantly approx. 0.3V.</li> <li>The maximum and minimum voltages from the sensor are not reached to the specified voltages.</li> <li>It takes more time for the sensor to respond between rich and lean than the specified time.</li> </ul>	<ul style="list-style-type: none"> <li>Harness or connectors (The sensor circuit is open or shorted.)</li> <li>Rear heated oxygen sensor (Right bank)</li> <li>Fuel pressure</li> <li>Injectors</li> <li>Intake air leaks</li> </ul>

# TROUBLE DIAGNOSIS FOR DTC P0136

## Rear Heated Oxygen Sensor (Rear HO2S) (Right bank) (DTC: 0707) (Cont'd)

### OVERALL FUNCTION CHECK

This procedure can be used for checking the overall function of the rear heated oxygen sensor circuit. During this check, a DTC might not be confirmed.

- 1) Start engine and warm it up sufficiently.
- 2) Select "FUEL INJECTION" in "ACTIVE TEST" mode, and select "RR O2 SEN-B1" as the monitor item with CONSULT.
- 3) Check "RR O2 SEN-B1" at idle speed when adjusting "FUEL INJECTION" to  $\pm 25\%$ .  
**"RR O2 SEN-B1" should be above 0.48V at least once when the "FUEL INJECTION" is +25%.**  
**"RR O2 SEN-B1" should be below 0.43V at least once when the "FUEL INJECTION" is -25%.**

OR




- 1) Start engine and warm it up sufficiently.
- 2) Set voltmeter probes between ECM terminals 56 (sensor signal) and 25 (engine ground).
- 3) Check the voltage when racing up to 4,000 rpm under no load at least 10 times.  
(depress and release accelerator pedal as soon as possible)

**The voltage should be above 0.48V and below 0.43V at least once during this procedure.**

**If the voltage can be confirmed in step 3, step 4 is not necessary.**

- 4) Keep vehicle at idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in 3rd gear position.





**The voltage should be above 0.48V and below 0.43V at least once during this procedure.**

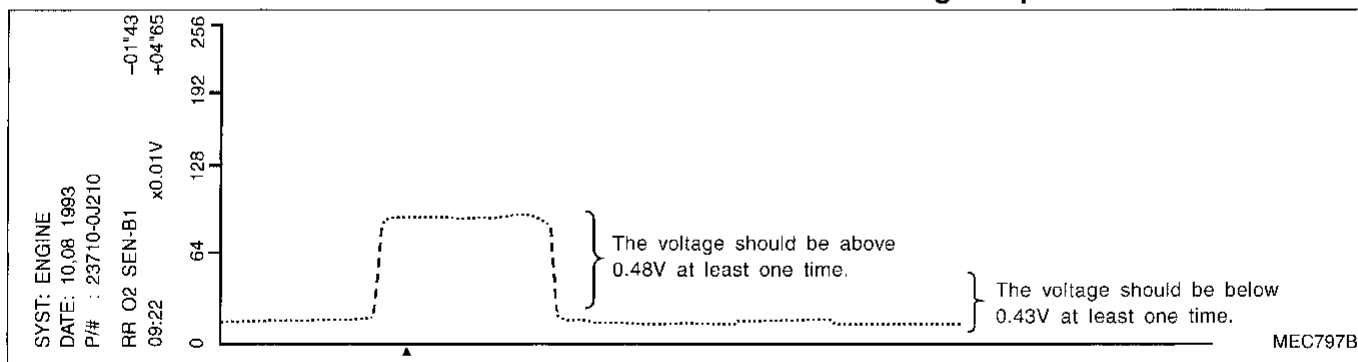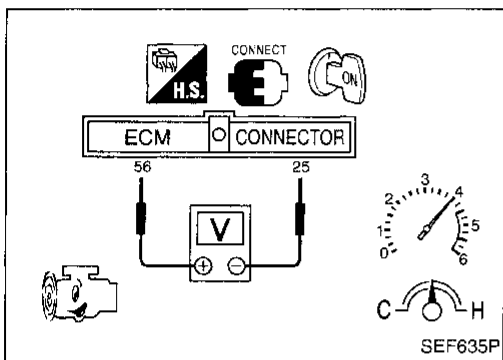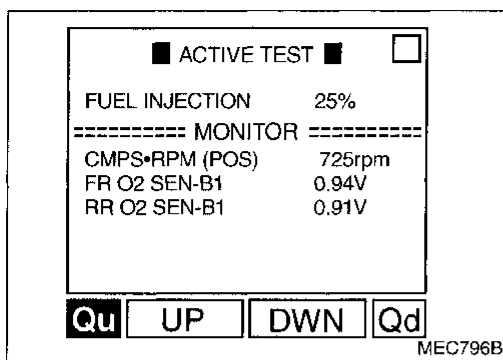

# TROUBLE DIAGNOSIS FOR DTC P0136

## Rear Heated Oxygen Sensor (Rear HO2S) (Right bank) (DTC: 0707) (Cont'd)

EC-RR02RH-01

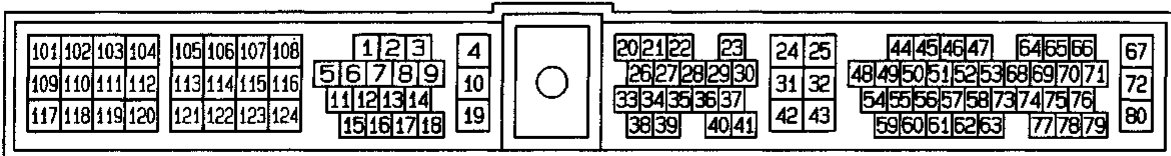
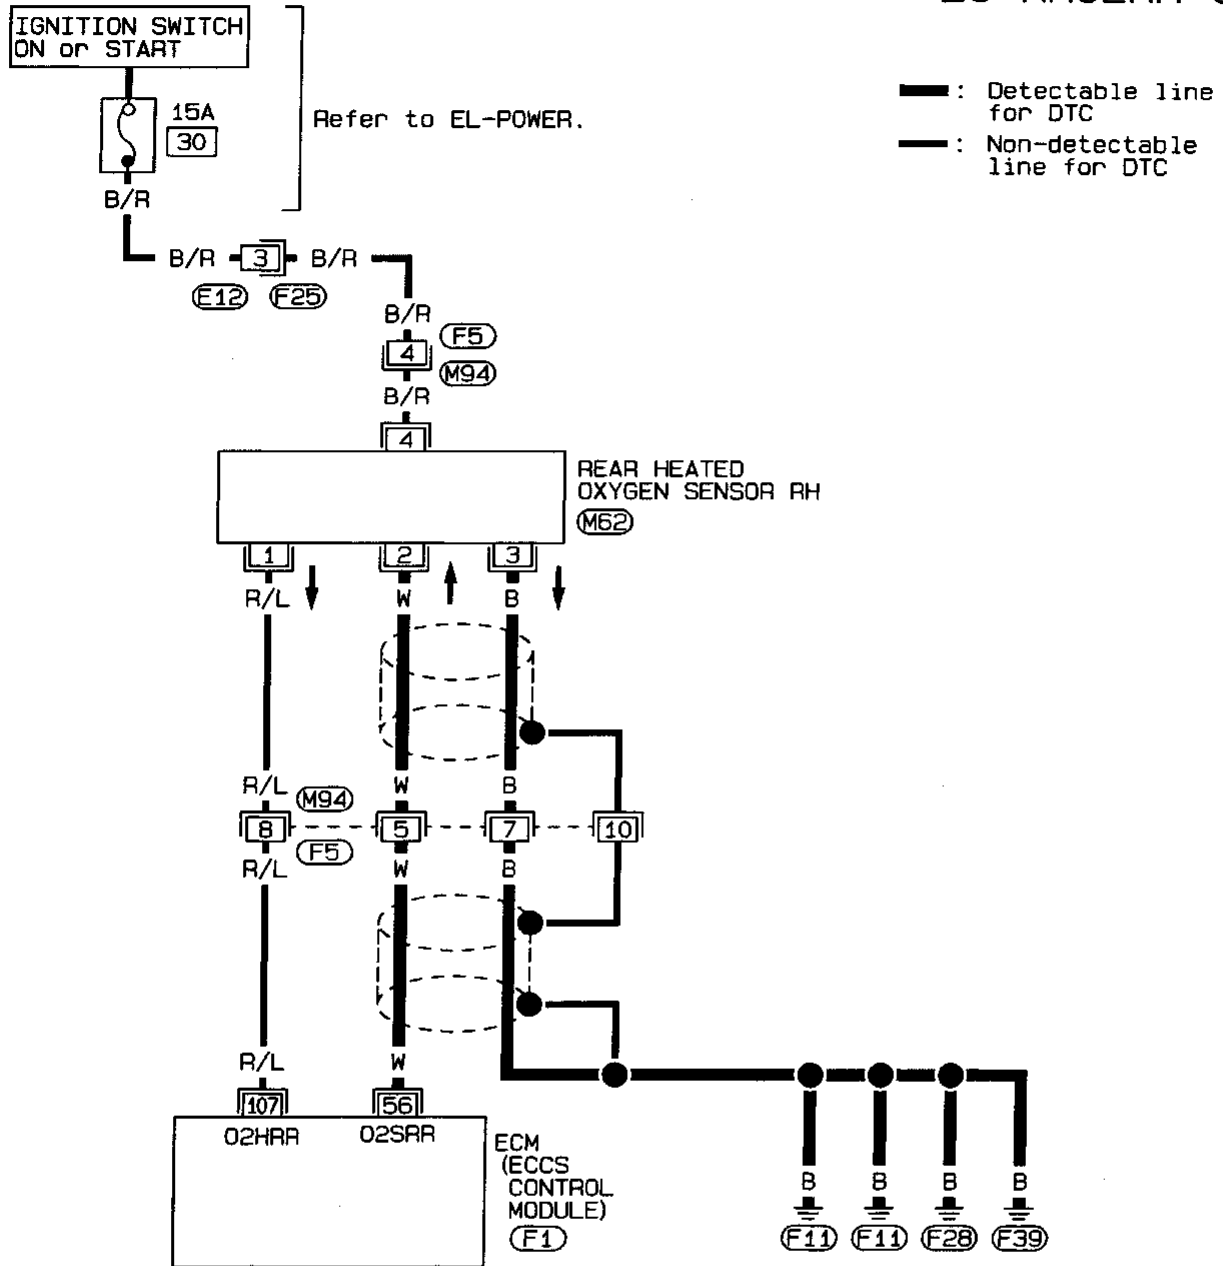


# TROUBLE DIAGNOSIS FOR DTC P0136

## Rear Heated Oxygen Sensor (Rear HO2S) (Right bank) (DTC: 0707) (Cont'd)

### DIAGNOSTIC PROCEDURE

INSPECTION START

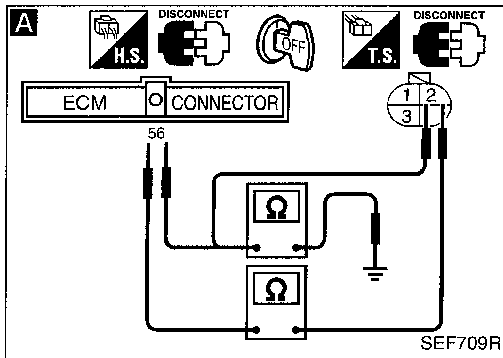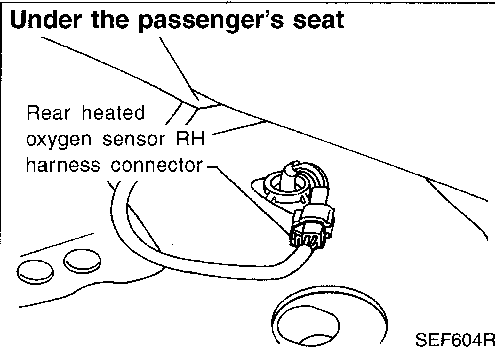

**A**

#### CHECK INPUT SIGNAL CIRCUIT.


1. Turn ignition switch "OFF".
  2. Remove passenger's seat. Refer to BT section ("SEAT").
  3. Disconnect rear heated oxygen sensor RH harness connector and ECM harness connector.
  4. Check harness continuity between ECM terminal (56) and terminal (2).  
**Continuity should exist.**
  5. Check harness continuity between ECM terminal (56) (or terminal (2)) and ground.  
**Continuity should not exist.**
- If OK, check harness for short.

NG

Check the following.

- Harness connectors (F5), (M94)
- Harness for open or short between ECM and rear heated oxygen sensor RH

If NG, repair harness or connectors.

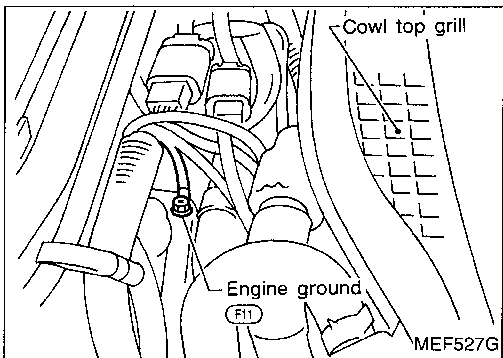

**B**

#### CHECK GROUND CIRCUIT.


1. Loosen and retighten engine ground screws.
  2. Check harness continuity between terminal (3) and engine ground.  
**Continuity should exist.**
- If OK, check harness for short.

NG

Check the following.

- Harness connectors (F5), (M94)
- Harness for open or short between rear heated oxygen sensor RH and engine ground

If NG, repair harness or connectors.

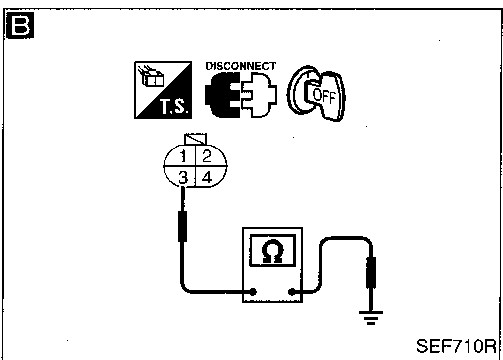

#### CHECK COMPONENT

(Rear heated oxygen sensor heater). Refer to "COMPONENT INSPECTION" on next page.

NG

Replace rear heated oxygen sensor RH.

OK

Disconnect and reconnect harness connectors in the circuit. Then retest.

Trouble is not fixed.

Check ECM pin terminals for damage and check the connection of ECM harness connector. Reconnect ECM harness connector and retest.

INSPECTION END



# TROUBLE DIAGNOSIS FOR DTC P0136

## Rear Heated Oxygen Sensor (Rear HO2S) (Right bank) (DTC: 0707) (Cont'd)

### COMPONENT INSPECTION

#### Rear heated oxygen sensor heater

Check the following.


1. Check resistance between terminals ④ and ①.  
**Resistance: 2.3 - 4.3Ω at 25°C (77°F)**
2. Check continuity.

Terminal No.	Continuity
② and ①, ③, ④	No
③ and ①, ②, ④	

If NG, replace the rear heated oxygen sensor.

#### CAUTION:

Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

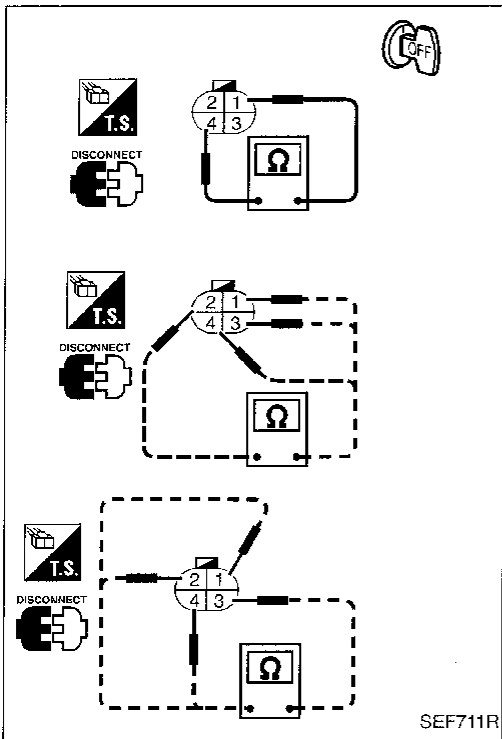

CI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA


EL

IDX

# TROUBLE DIAGNOSIS FOR DTC P0141

## Rear Heated Oxygen Sensor Heater (Right bank) (DTC: 0902)

### SYSTEM DESCRIPTION

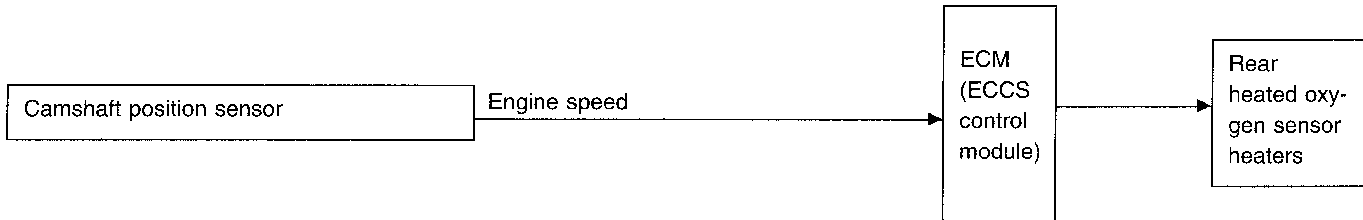

The ECM performs ON/OFF control of the rear heated oxygen sensor heaters corresponding to the engine speed.

### OPERATION

Engine speed rpm	Rear heated oxygen sensor heaters
Above 3,600	OFF
Below 3,600	ON

Diagnostic Trouble Code No.	Malfunction is detected when ....	Check Items (Possible Cause)
P0141 0902	<ul style="list-style-type: none"> <li>The current amperage in the rear heated oxygen sensor heater (Right bank) circuit is out of the normal range. (The improper voltage drop signal is sent to ECM through the rear heated oxygen sensor heater.)</li> </ul>	<ul style="list-style-type: none"> <li>Harness or connectors (The rear heated oxygen sensor heater circuit is open or shorted.)</li> <li>Rear heated oxygen sensor heater (Right bank)</li> </ul>

### DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE



- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT.
- 2) Start engine and run it for at least 5 seconds at idle speed.

OR



- 1) Start engine and run it for at least 5 seconds at idle speed.
- 2) Select "MODE 3" with GST.

OR








- 1) Start engine and run it for at least 5 seconds at idle speed.
- 2) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 3) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

# TROUBLE DIAGNOSIS FOR DTC P0141

## Rear Heated Oxygen Sensor Heater (Right bank) (DTC: 0902) (Cont'd)





EC-R02H-R-01

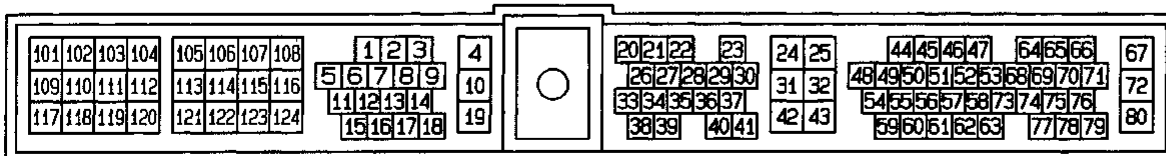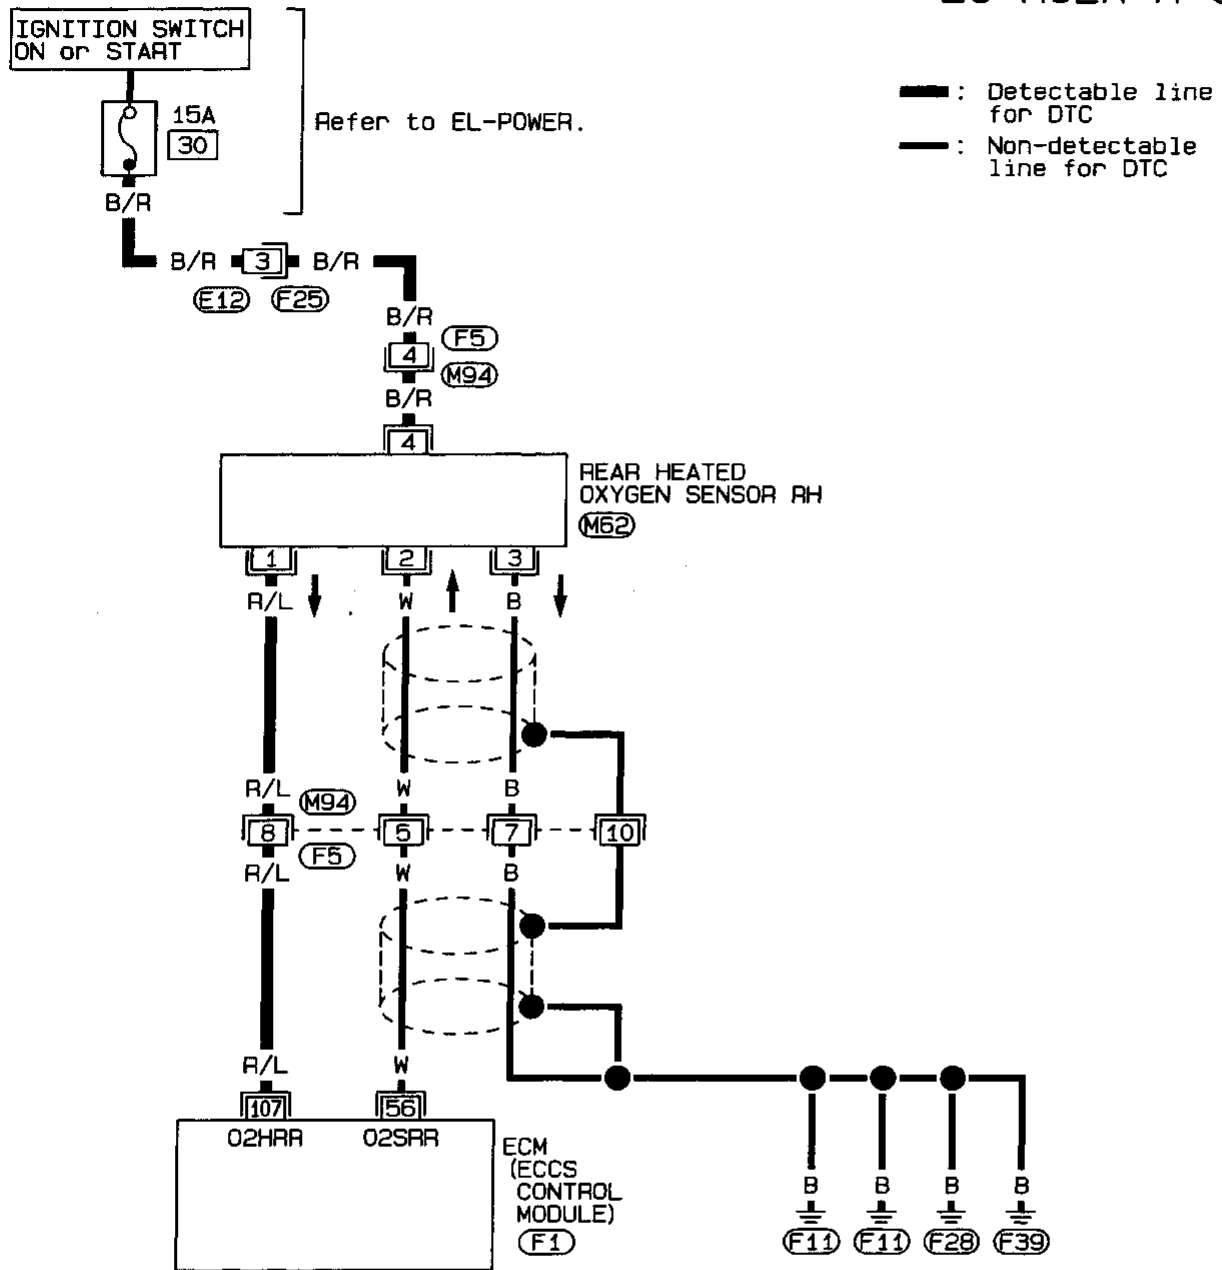

# TROUBLE DIAGNOSIS FOR DTC P0141

## Rear Heated Oxygen Sensor Heater (Right bank) (DTC: 0902) (Cont'd)

### DIAGNOSTIC PROCEDURE

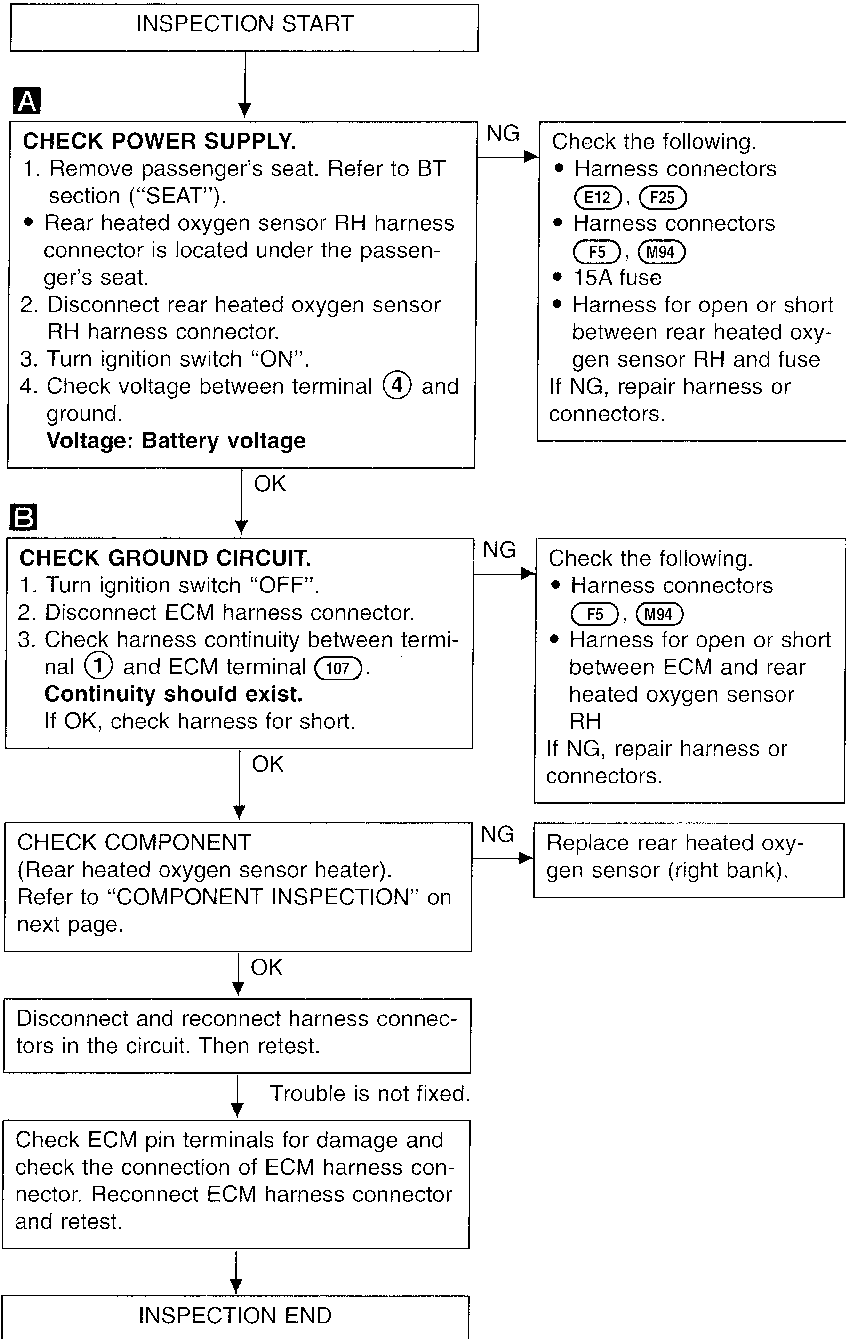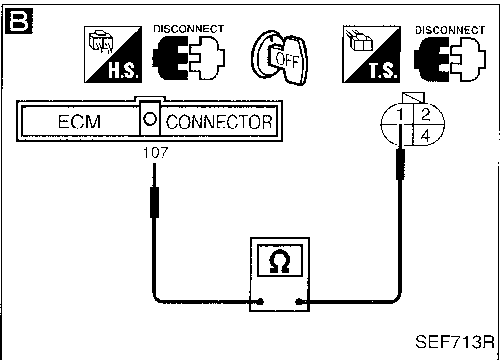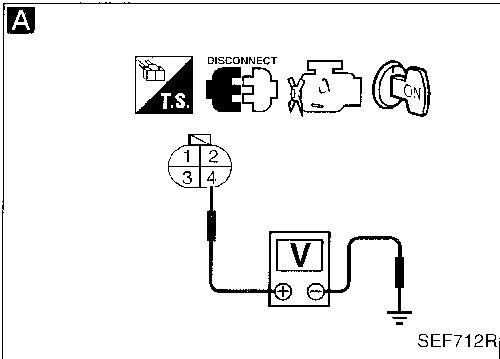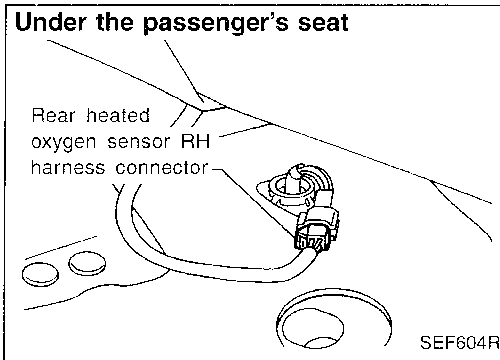

# TROUBLE DIAGNOSIS FOR DTC P0141

## Rear Heated Oxygen Sensor Heater (Right bank) (DTC: 0902) (Cont'd)

### COMPONENT INSPECTION

#### Rear heated oxygen sensor heater

Check the following.


1. Check resistance between terminals ④ and ①.  
**Resistance: 2.3 - 4.3Ω at 25°C (77°F)**
2. Check continuity.

Terminal No.	Continuity
② and ①, ③, ④	No
③ and ①, ②, ④	


If NG, replace the rear heated oxygen sensor.

#### CAUTION:

Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

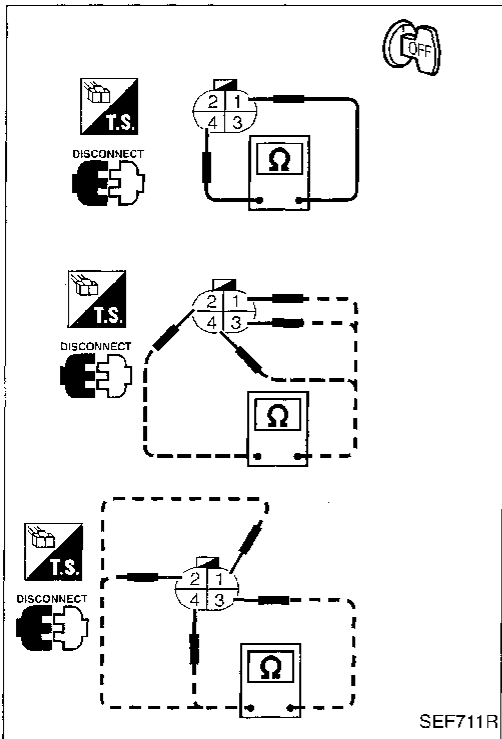


GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

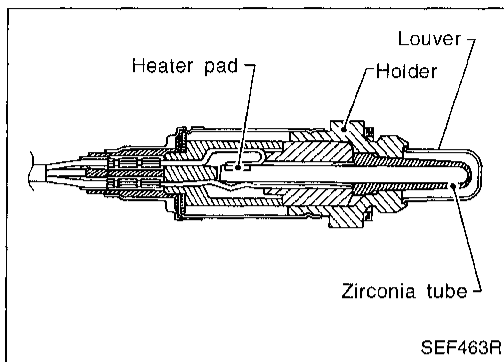


## Front Heated Oxygen Sensor (Front HO2S) (Left bank) (DTC: 0303)

The front heated oxygen sensor (left bank) is placed into the front tube (left bank). It detects the amount of oxygen in the exhaust gas compared to the outside air. The front heated oxygen sensor (left bank) has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The front heated oxygen sensor (left bank) signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

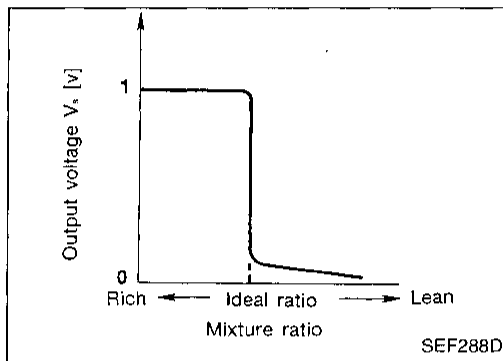

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0150 0303	<ul style="list-style-type: none"> <li>• An excessively high voltage from the sensor is sent to ECM.</li> <li>• The voltage from the sensor is constantly approx. 0.3V.</li> <li>• The maximum and minimum voltages from the sensor are not reached to the specified voltages.</li> <li>• It takes more time for the sensor to respond between rich and lean than the specified time.</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connectors (The sensor circuit is open or shorted.)</li> <li>• Front heated oxygen sensor (left bank)</li> <li>• Fuel pressure</li> <li>• Injectors</li> <li>• Intake air leaks</li> </ul>

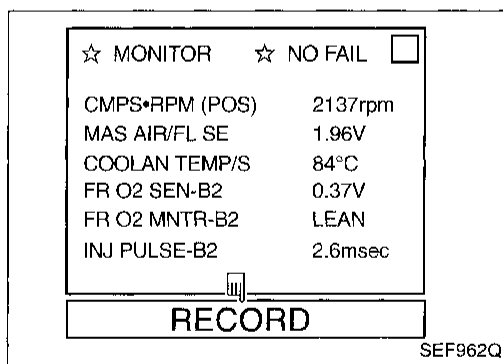

## OVERALL FUNCTION CHECK

Use this procedure to check the overall function of the front heated oxygen sensor circuit. During this check, a DTC might not be confirmed.

- 1) Start engine and warm it up sufficiently.
  - 2) Select "MANU TRIG" and "HI SPEED" in "DATA MONITOR" mode with CONSULT, and select "FR O2 SEN-B2" and "FR O2 MNTR-B2".
  - 3) Hold engine speed at 2,000 rpm under no load during the following steps.
  - 4) Touch "RECORD" on CONSULT screen.
  - 5) Check the following.
    - "FR O2 MNTR-B2" in "DATA MONITOR" mode changes from "RICH" to "LEAN" to "RICH" 5 times in 10 seconds.
- 5 times (cycles) are counted as shown below:

cycle | 1 | 2 | 3 | 4 | 5 |



FR O2 MNTR-B2 R-L-R-L-R-L-R-L-R

R = "FR O2 MNTR-B2", "RICH"  
L = "FR O2 MNTR-B2", "LEAN"

# TROUBLE DIAGNOSIS FOR DTC P0150

## Front Heated Oxygen Sensor (Front HO2S) (Left bank) (DTC: 0303) (Cont'd)

- "FR O2 SEN-B2" voltage goes above 0.6V at least once.
- "FR O2 SEN-B2" voltage goes below 0.35V at least once.
- The voltage never exceeds 1.0V.

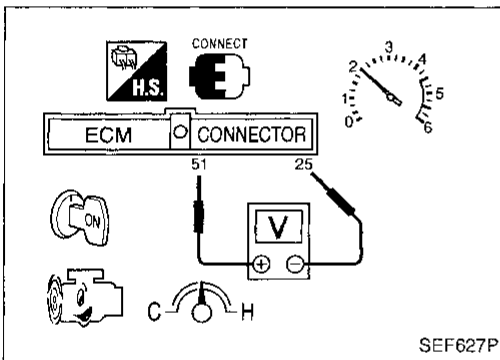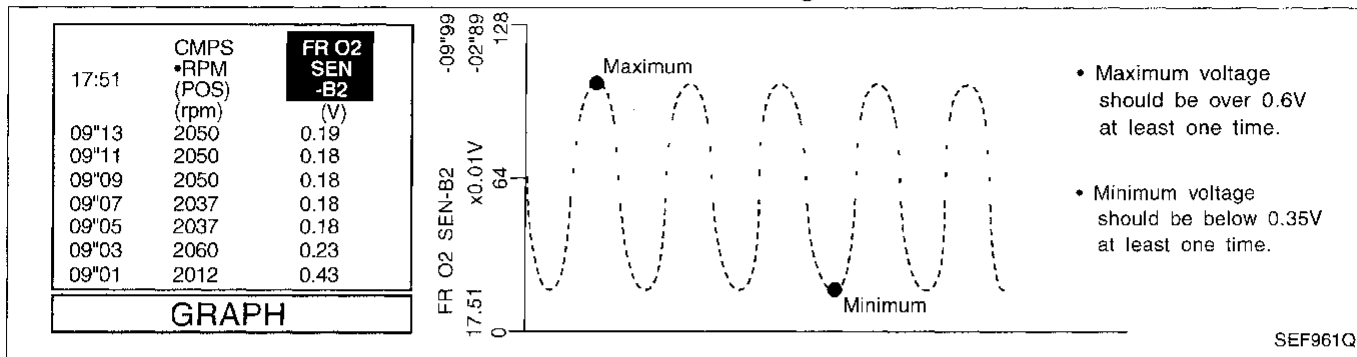




OR

- 1) Start engine and warm it up sufficiently.
- 2) Set voltmeter probes between ECM terminal ⑤1 (sensor signal) and ②5 (engine ground).
- 3) Check the following with engine speed held at 2,000 rpm constant under no load.
  - Malfunction indicator lamp goes on more than 5 times within 10 seconds in Diagnostic Test Mode II (FRONT HEATED OXYGEN SENSOR MONITOR).
  - The maximum voltage is over 0.6V at least one time.
  - The minimum voltage is below 0.35V at least one time.
  - The voltage never exceeds 1.0V.

# TROUBLE DIAGNOSIS FOR DTC P0150

## Front Heated Oxygen Sensor (Front HO2S) (Left bank) (DTC: 0303) (Cont'd)

EC-FR02LH-01

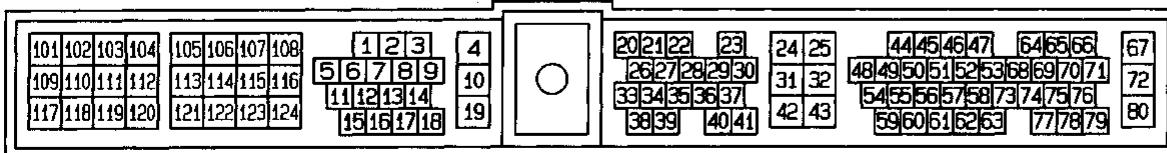

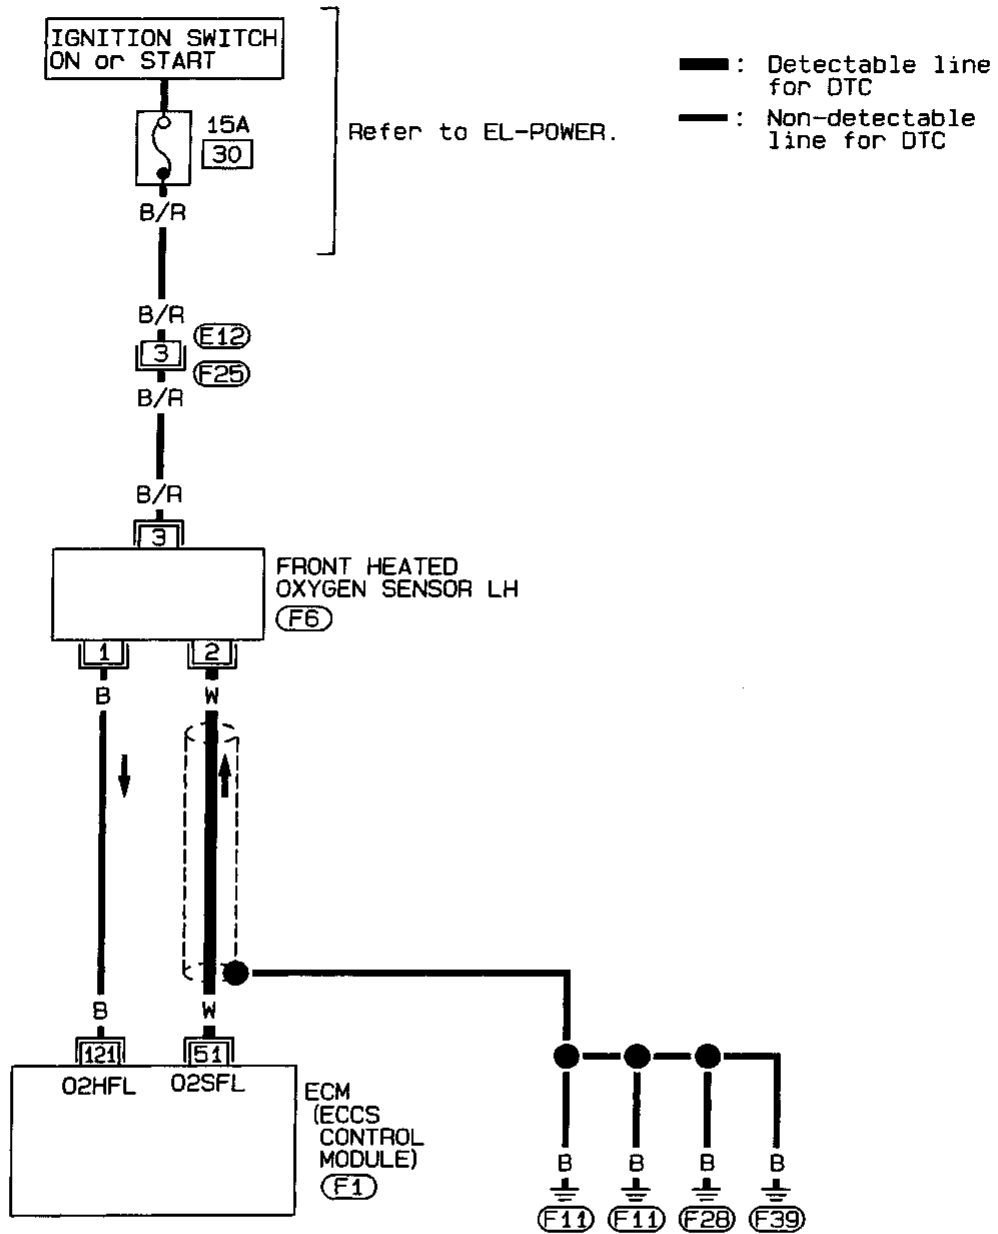




# TROUBLE DIAGNOSIS FOR DTC P0150

## Front Heated Oxygen Sensor (Front HO2S) (Left bank) (DTC: 0303) (Cont'd)


### DIAGNOSTIC PROCEDURE

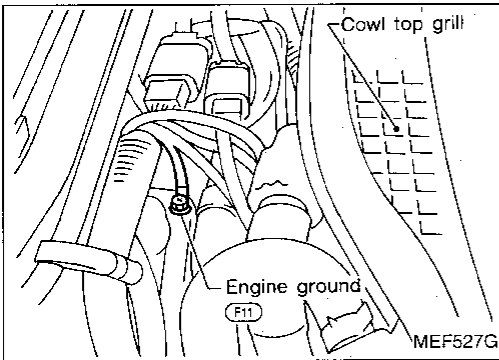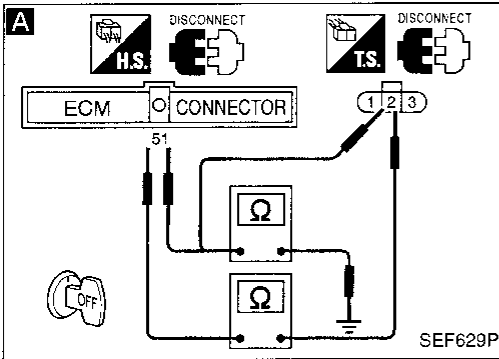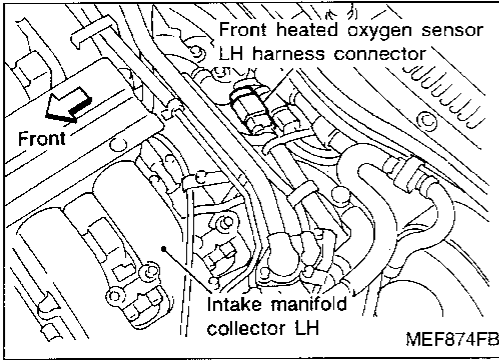

**B**

■ ACTIVE TEST ■	
SELF-LEARN CONTROL	B1: 100% B2: 100%
----- MONITOR -----	
CMPS•RPM (POS)	812rpm
COOLAN TEMP/S	93°C
FR O2 SEN-B2	0.91V
A/F ALPHA-B2	102%
CLEAR	

MEC818B

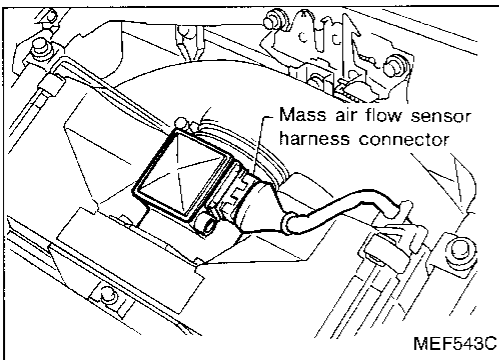

INSPECTION START

**A**

**CHECK INPUT SIGNAL CIRCUIT.**

1. Turn ignition switch "OFF".
2. Disconnect front heated oxygen sensor LH harness connector and ECM harness connector.
3. Check harness continuity between ECM terminal (51) and terminal (2).  
**Continuity should exist.**
4. Check harness continuity between ECM terminal (51) (or terminal (2)) and ground.  
**Continuity should not exist.**  
If OK, check harness for short.

NG → Repair harness or connectors.

OK

Loosen and retighten engine ground screws.

**B**

**CLEAR THE SELF-LEARNING DATA.**

1. Start engine and warm it up sufficiently.
2. Select "SELF-LEARNING CONT" in "ACTIVE TEST" mode with CONSULT.
3. Clear the self-learning control coefficient by touching "CLEAR".
4. Run engine for at least 10 minutes at idle speed.

**Are the DTCs P0174, P0175 detected? Is it difficult to start engine?**

Yes → Go to "TROUBLE DIAGNOSIS FOR DTC P0174, P0175", EC-179, 185.

OR

2. Turn ignition switch "OFF".
3. Disconnect mass air flow sensor harness connector, and restart and run engine for at least 3 seconds at idle speed.
4. Stop engine and reconnect mass air flow sensor harness connector.
5. Make sure diagnostic trouble code No. 0102 is displayed in Diagnostic Test Mode II.
6. Erase the diagnostic test mode II (Self-diagnostic results) memory. Make sure diagnostic trouble code No. 0505 is displayed in Diagnostic Test Mode II.
7. Run engine for at least 10 minutes at idle speed.



**Are the DTCs 0209, 0210 detected? Is it difficult to start engine?**

No  
A

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IOX

## TROUBLE DIAGNOSIS FOR DTC P0150

### Front Heated Oxygen Sensor (Front HO2S) (Left bank) (DTC: 0303) (Cont'd)

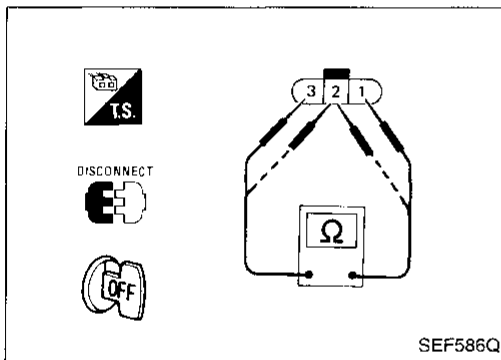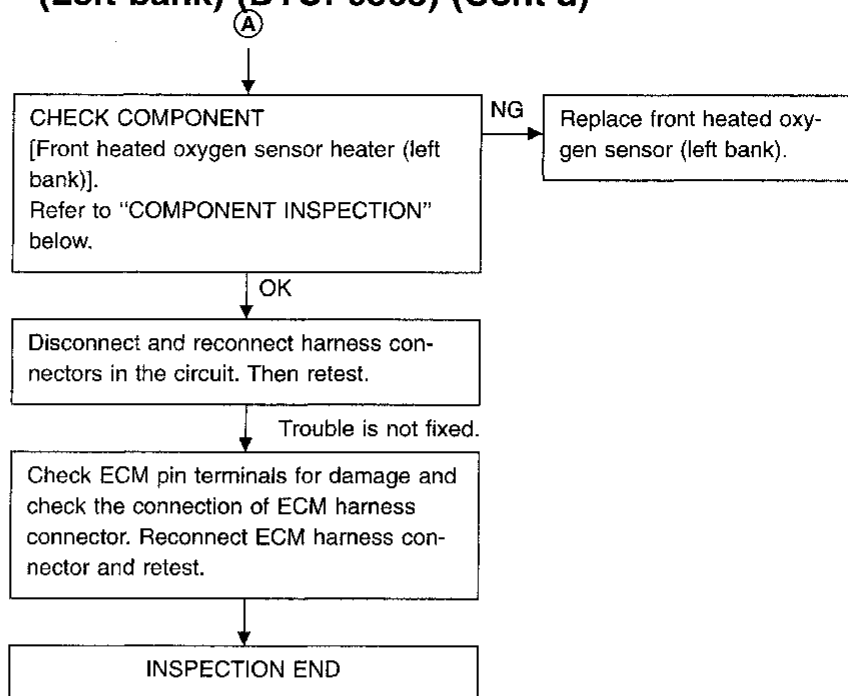

#### COMPONENT INSPECTION

##### Front heated oxygen sensor heater

Check resistance between terminals ③ and ①.

**Resistance: 2.3 - 4.3Ω at 25°C (77°F)**

Check continuity between terminals ② and ①, ③ and ②.

**Continuity should not exist.**

If NG, replace the front heated oxygen sensor.


##### CAUTION:

**Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.**

# TROUBLE DIAGNOSIS FOR DTC P0155

## Front Heated Oxygen Sensor Heater (Left bank) (DTC: 1001)

### SYSTEM DESCRIPTION

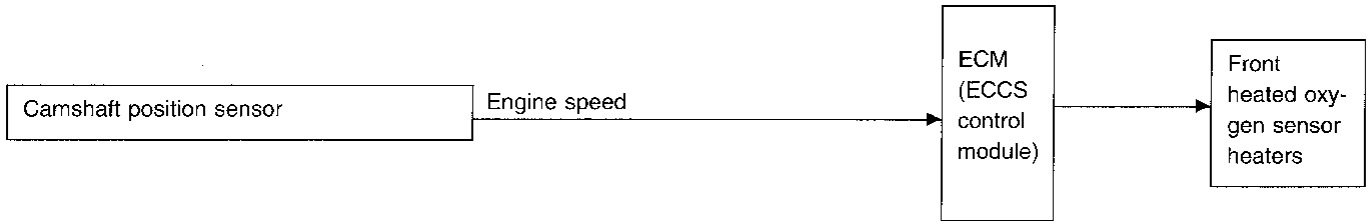




The ECM performs ON/OFF control of the front heated oxygen sensor heaters corresponding to the engine speed.

### OPERATION

Engine	Engine speed rpm	Front heated oxygen sensor heaters
Non-turbocharger	Above 2,900	OFF
	Below 2,900	ON
Turbocharger	Above 2,800	OFF
	Below 2,800	ON

Diagnostic Trouble Code No.	Malfunction is detected when ....	Check Items (Possible Cause)
P0155 1001	<ul style="list-style-type: none"> <li>The current amperage in the front heated oxygen sensor heater (Left bank) circuit is out of the normal range. (The improper voltage drop signal is sent to ECM through the front heated oxygen sensor heater.)</li> </ul>	<ul style="list-style-type: none"> <li>Harness or connectors (The front heated oxygen sensor heater circuit is open or shorted.)</li> <li>Front heated oxygen sensor heater (Left bank)</li> </ul>




### DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

- 
 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT.
- 2) Start engine and run it for at least 5 seconds at idle speed.
- OR
- 
 1) Start engine and run it for at least 5 seconds at idle speed.
- 2) Select "MODE 3" with GST.
- OR
- 
 1) Start engine and run it for at least 5 seconds at idle speed.
- 2) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 3) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

# TROUBLE DIAGNOSIS FOR DTC P0155

## Front Heated Oxygen Sensor Heater (Left bank) (DTC: 1001) (Cont'd)






EC-F02H-L-01

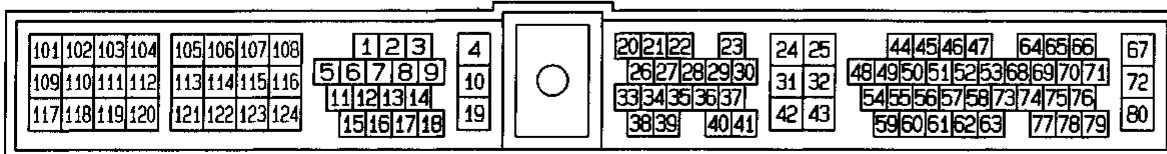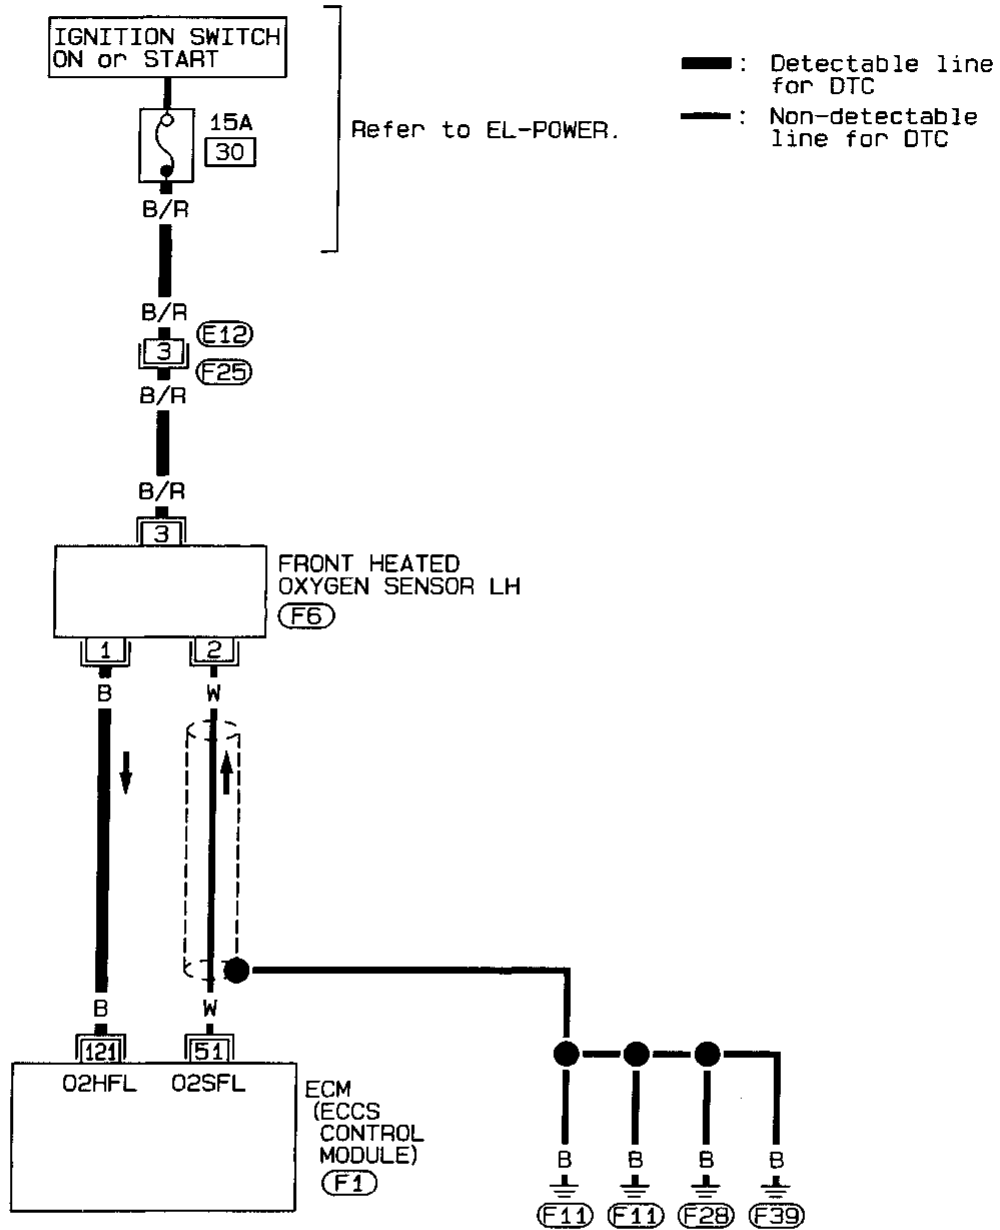

# TROUBLE DIAGNOSIS FOR DTC P0155

## Front Heated Oxygen Sensor Heater (Left bank) (DTC: 1001) (Cont'd)

### DIAGNOSTIC PROCEDURE

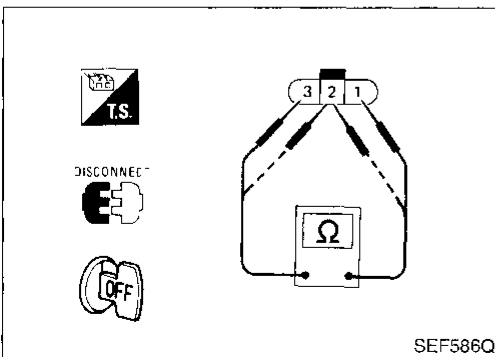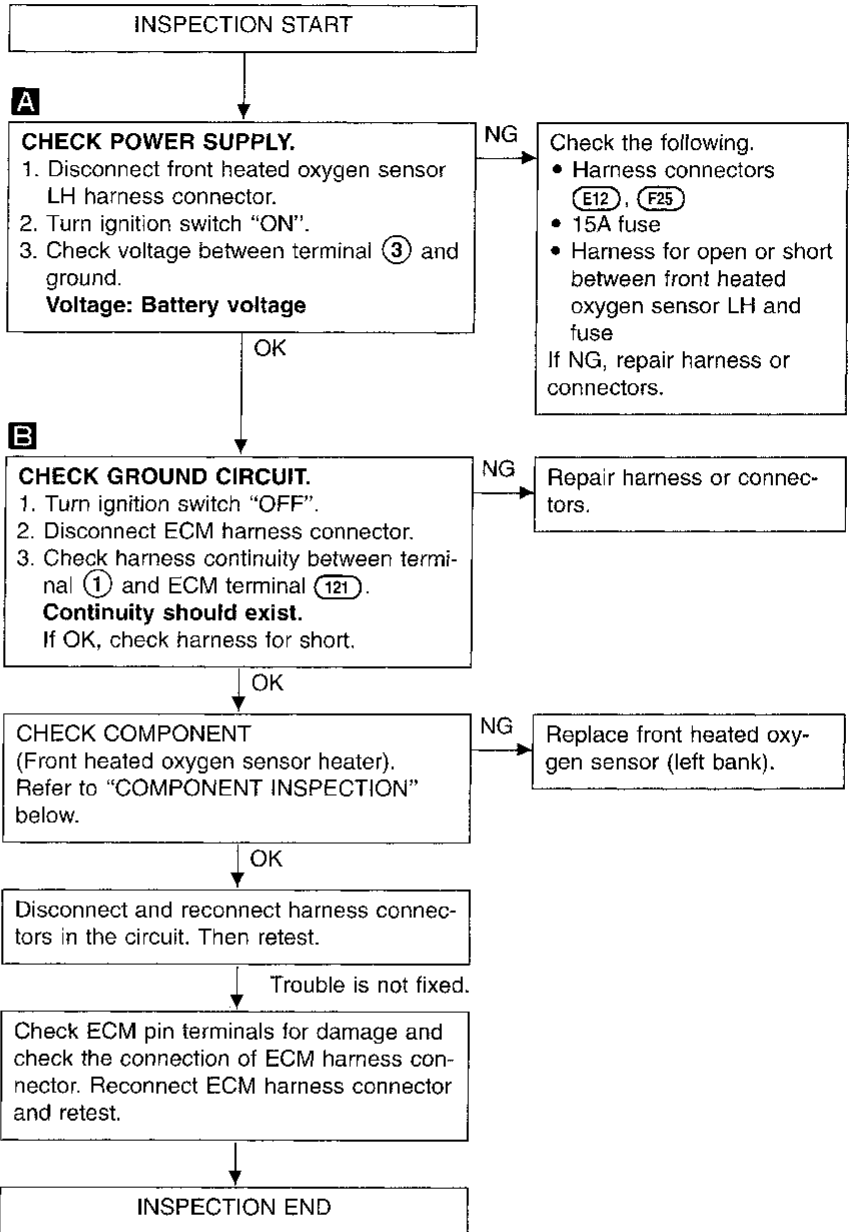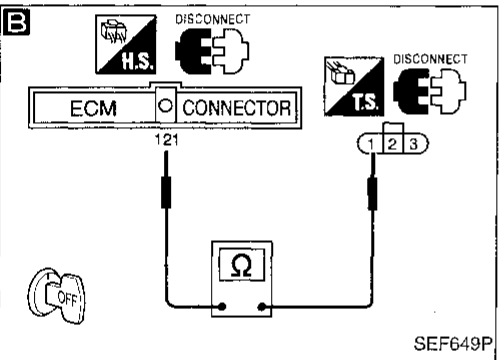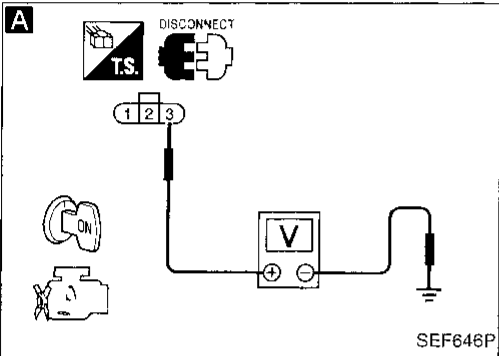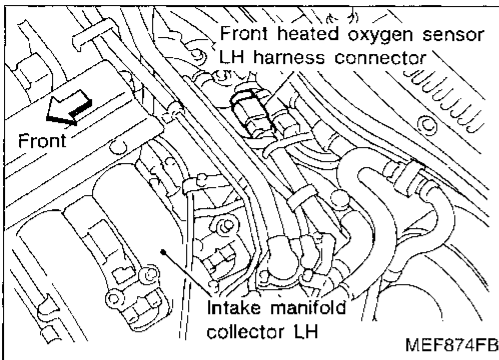

### COMPONENT INSPECTION

#### Front heated oxygen sensor heater

Check resistance between terminals ③ and ①.

**Resistance: 2.3 - 4.3Ω at 25°C (77°F)**

Check continuity between terminals ② and ①, ③ and ②.


**Continuity should not exist.**

If NG, replace the front heated oxygen sensor.

#### CAUTION:

Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

GI  
MA  
EM  
LC  
EC  
FE  
CL  
WT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

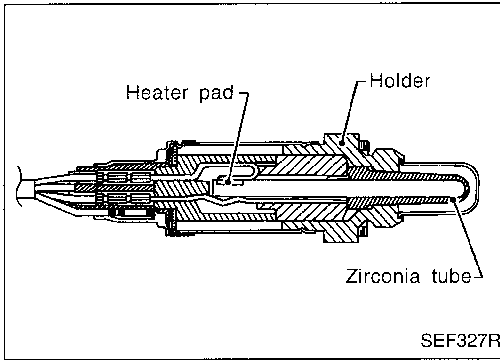

## Rear Heated Oxygen Sensor (Rear HO2S) (Left bank) (DTC: 0708)

The rear heated oxygen sensor (Rear HO2S), after three way catalyst, monitors the oxygen level in the exhaust gas.

Even if switching characteristics of the front heated oxygen sensor are shifted, the air fuel ratio is controlled to stoichiometric, by the signal from the rear heated oxygen sensor.

This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions.

Under normal conditions the rear heated oxygen sensor is not used for engine control operation.

### ON BOARD DIAGNOSIS LOGIC

The rear heated oxygen sensor has a much longer switching time between rich and lean than the front heated oxygen sensor. The oxygen storage capacity before the three way catalyst causes the longer switching time. To judge the malfunctions of rear heated oxygen sensor, ECM monitors the sensor's voltage value and the switching response during the various driving condition such as fuel-cut.



Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0156 0708	<ul style="list-style-type: none"> <li>• An excessively high voltage from the sensor is entered to ECM.</li> <li>• The voltage from the sensor is constantly approx. 0.3V.</li> <li>• The maximum and minimum voltages from the sensor are not reached to the specified voltages.</li> <li>• It takes more time for the sensor to respond between rich and lean than the specified time.</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connectors (The sensor circuit is open or shorted.)</li> <li>• Rear heated oxygen sensor (Left bank)</li> <li>• Fuel pressure</li> <li>• Injectors</li> <li>• Intake air leaks</li> </ul>

# TROUBLE DIAGNOSIS FOR DTC P0156

## Rear Heated Oxygen Sensor (Rear HO2S) (Left bank) (DTC: 0708) (Cont'd)

### OVERALL FUNCTION CHECK

This procedure can be used for checking the overall function of the rear heated oxygen sensor circuit. During this check, a DTC might not be confirmed.

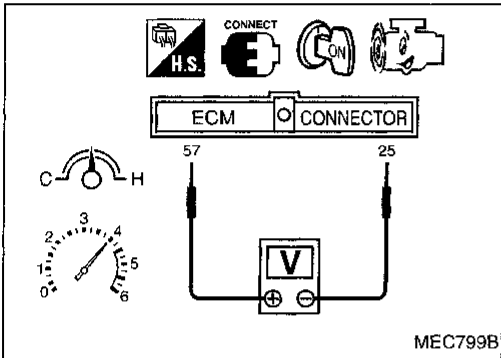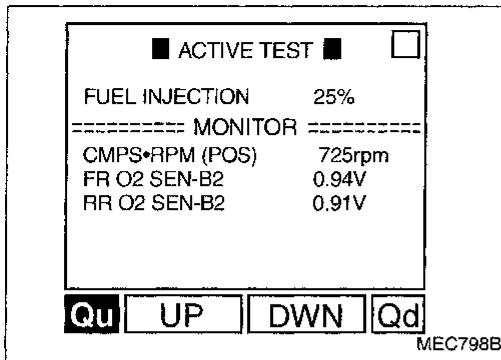

- 1) Start engine and warm it up sufficiently.
- 2) Select "FUEL INJECTION" in "ACTIVE TEST" mode, and select "RR O2 SEN-B2" as the monitor item with CONSULT.
- 3) Check "RR O2 SEN-B2" at idle speed when adjusting "FUEL INJECTION" to  $\pm 25\%$ .  
**"RR O2 SEN-B2" should be above 0.48V at least once when the "FUEL INJECTION" is +25%.**  
**"RR O2 SEN-B2" should be below 0.43V at least once when the "FUEL INJECTION" is -25%.**

OR


- 1) Start engine and warm it up sufficiently.
- 2) Set voltmeter probes between ECM terminals 57 (sensor signal) and 25 (engine ground).
- 3) Check the voltage when racing up to 4,000 rpm under no load at least 10 times.  
 (depress and release accelerator pedal as soon as possible)

**The voltage should be above 0.48V and below 0.43V at least once during this procedure.**

**If the voltage can be confirmed in step 3, step 4 is not necessary.**

- 4) Keep vehicle at idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in 3rd gear position.





**The voltage should be above 0.48V and below 0.43V at least once during this procedure.**

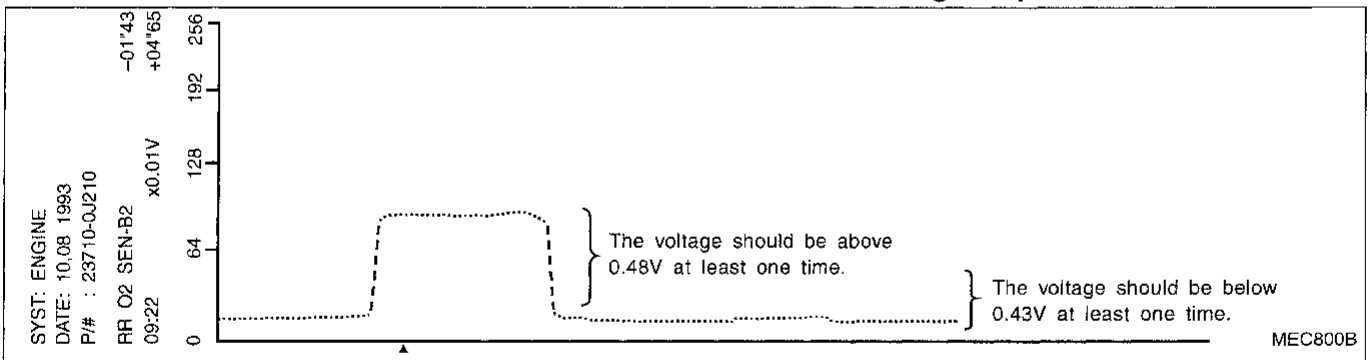

# TROUBLE DIAGNOSIS FOR DTC P0156

## Rear Heated Oxygen Sensor (Rear HO2S) (Left bank) (DTC: 0708) (Cont'd)

EC-RR02LH-01


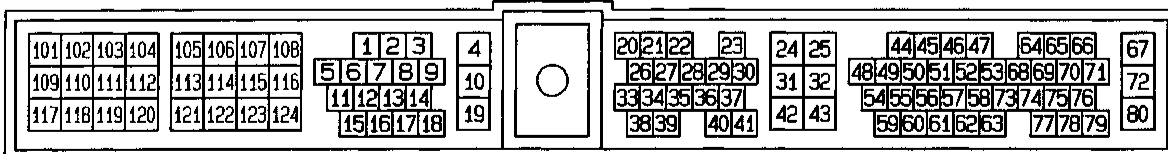


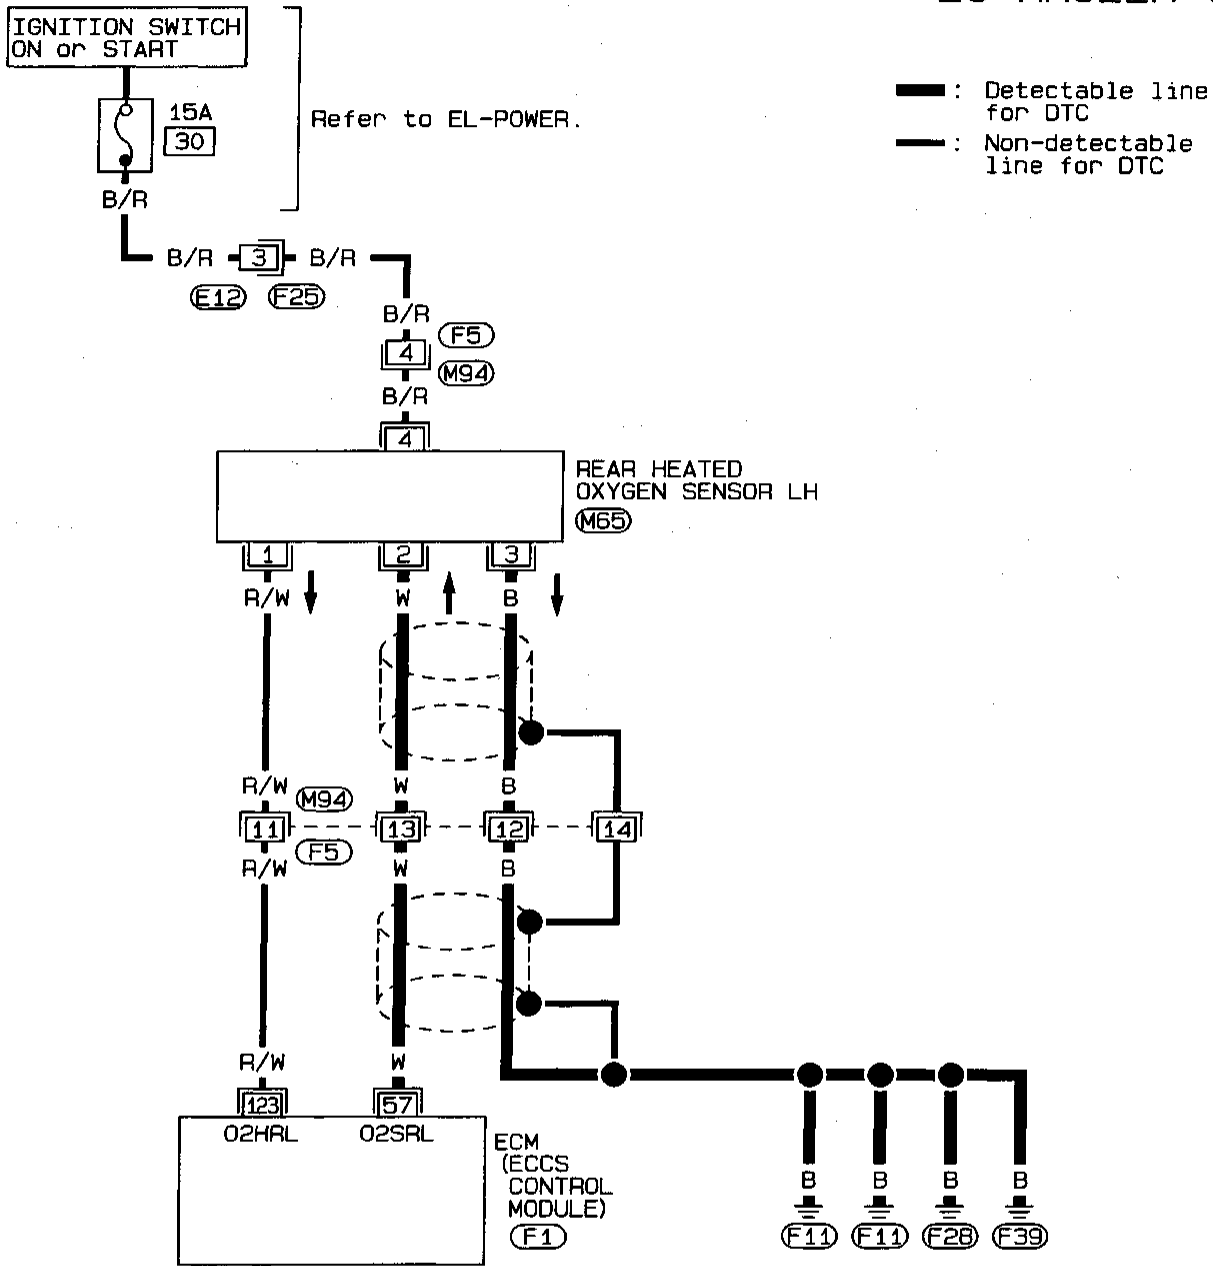




# TROUBLE DIAGNOSIS FOR DTC P0156

## Rear Heated Oxygen Sensor (Rear HO2S) (Left bank) (DTC: 0708) (Cont'd)

### DIAGNOSTIC PROCEDURE

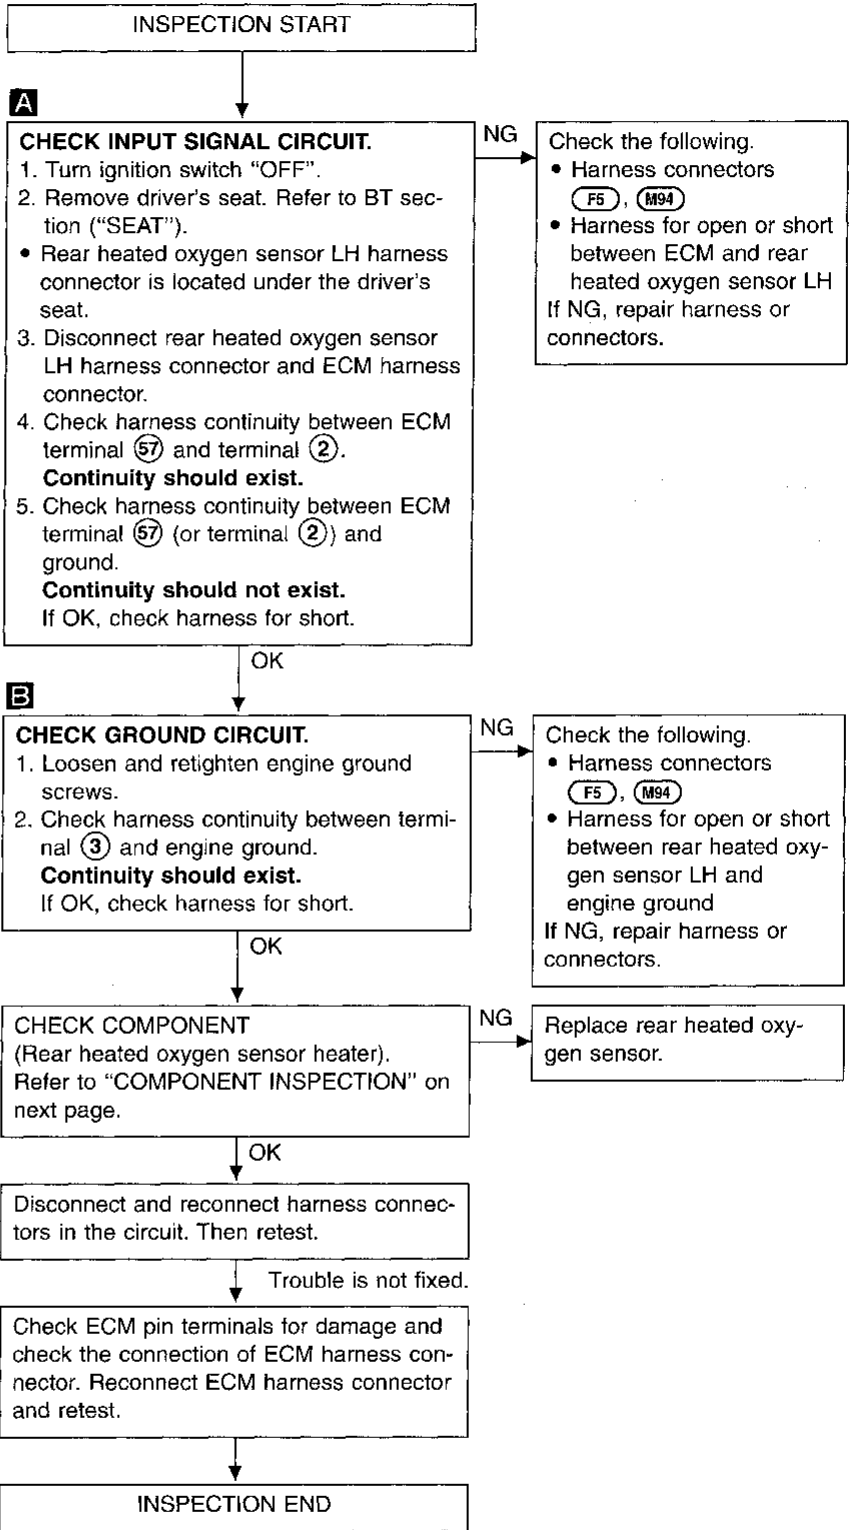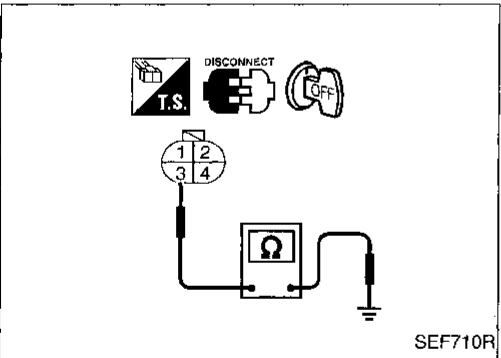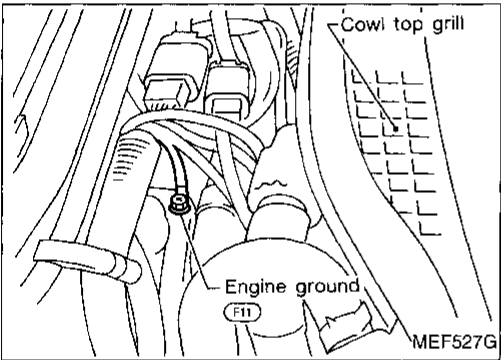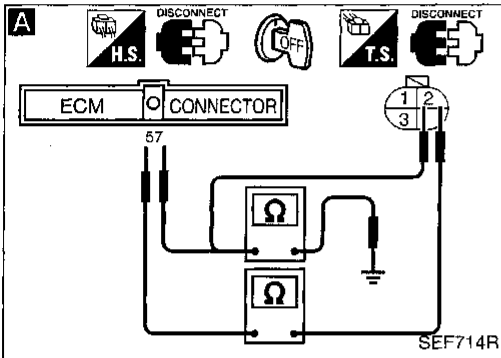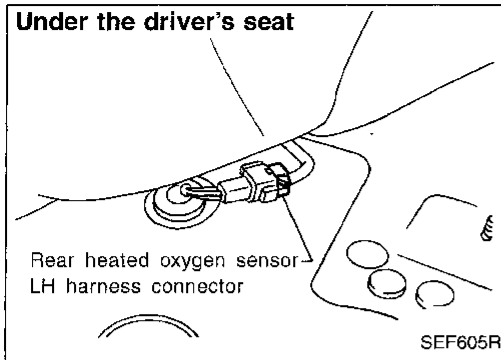

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

## TROUBLE DIAGNOSIS FOR DTC P0156

### Rear Heated Oxygen Sensor (Rear HO2S) (Left bank) (DTC: 0708) (Cont'd)

#### COMPONENT INSPECTION

#### Rear heated oxygen sensor heater

Check the following.


1. Check resistance between terminals ④ and ①.  
**Resistance: 2.3 - 4.3Ω at 25°C (77°F)**
2. Check continuity.

Terminal No.	Continuity
② and ①, ③, ④	No
③ and ①, ②, ④	

If NG, replace the rear heated oxygen sensor.

#### CAUTION:


Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

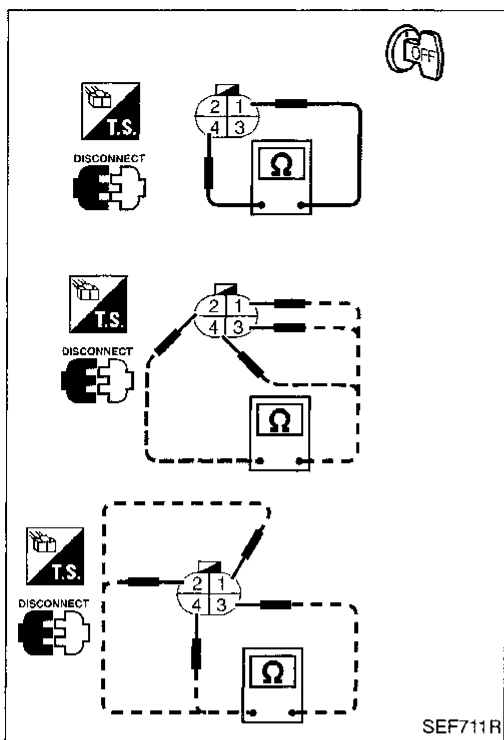

# TROUBLE DIAGNOSIS FOR DTC P0161

## Rear Heated Oxygen Sensor Heater (Left bank) (DTC: 1002)

### SYSTEM DESCRIPTION

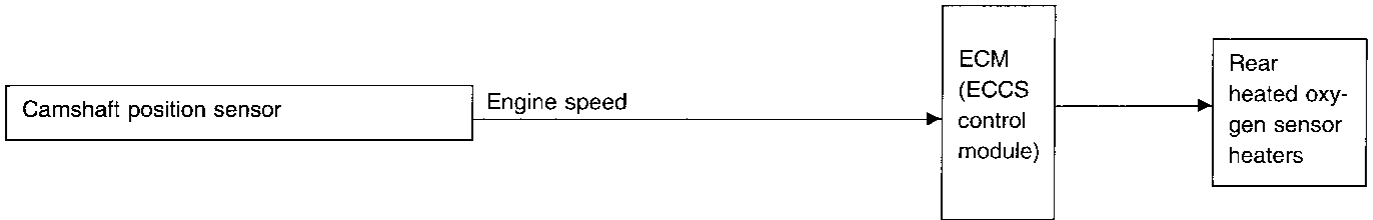




The ECM performs ON/OFF control of the rear heated oxygen sensor heaters corresponding to the engine speed.

### OPERATION

Engine speed rpm	Rear heated oxygen sensor heaters
Above 3,600	OFF
Below 3,600	ON

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0161 1002	<ul style="list-style-type: none"> <li>The current amperage in the rear heated oxygen sensor heater (Left bank) circuit is out of the normal range. (The improper voltage drop signal is sent to ECM through the rear heated oxygen sensor heater.)</li> </ul>	<ul style="list-style-type: none"> <li>Harness or connectors (The rear heated oxygen sensor heater circuit is open or shorted.)</li> <li>Rear heated oxygen sensor heater (Left bank)</li> </ul>





### DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

- 
 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT.
- 2) Start engine and run it for at least 5 seconds at idle speed.
- \_\_\_\_\_ OR \_\_\_\_\_
- 
 1) Start engine and run it for at least 5 seconds at idle speed.
- 2) Select "MODE 3" with GST.
- \_\_\_\_\_ OR \_\_\_\_\_
- 
 1) Start engine and run it for at least 5 seconds at idle speed.
- 2) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 3) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

# TROUBLE DIAGNOSIS FOR DTC P0161

## Rear Heated Oxygen Sensor Heater (Left bank) (DTC: 1002) (Cont'd)





EC-R02H-L-01

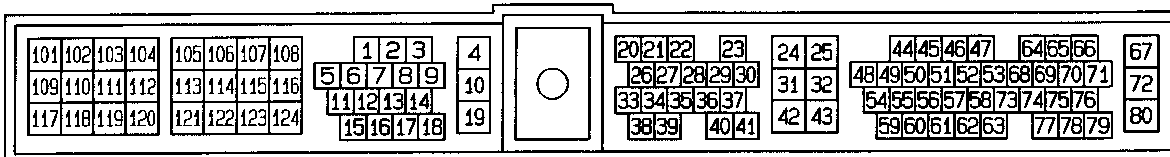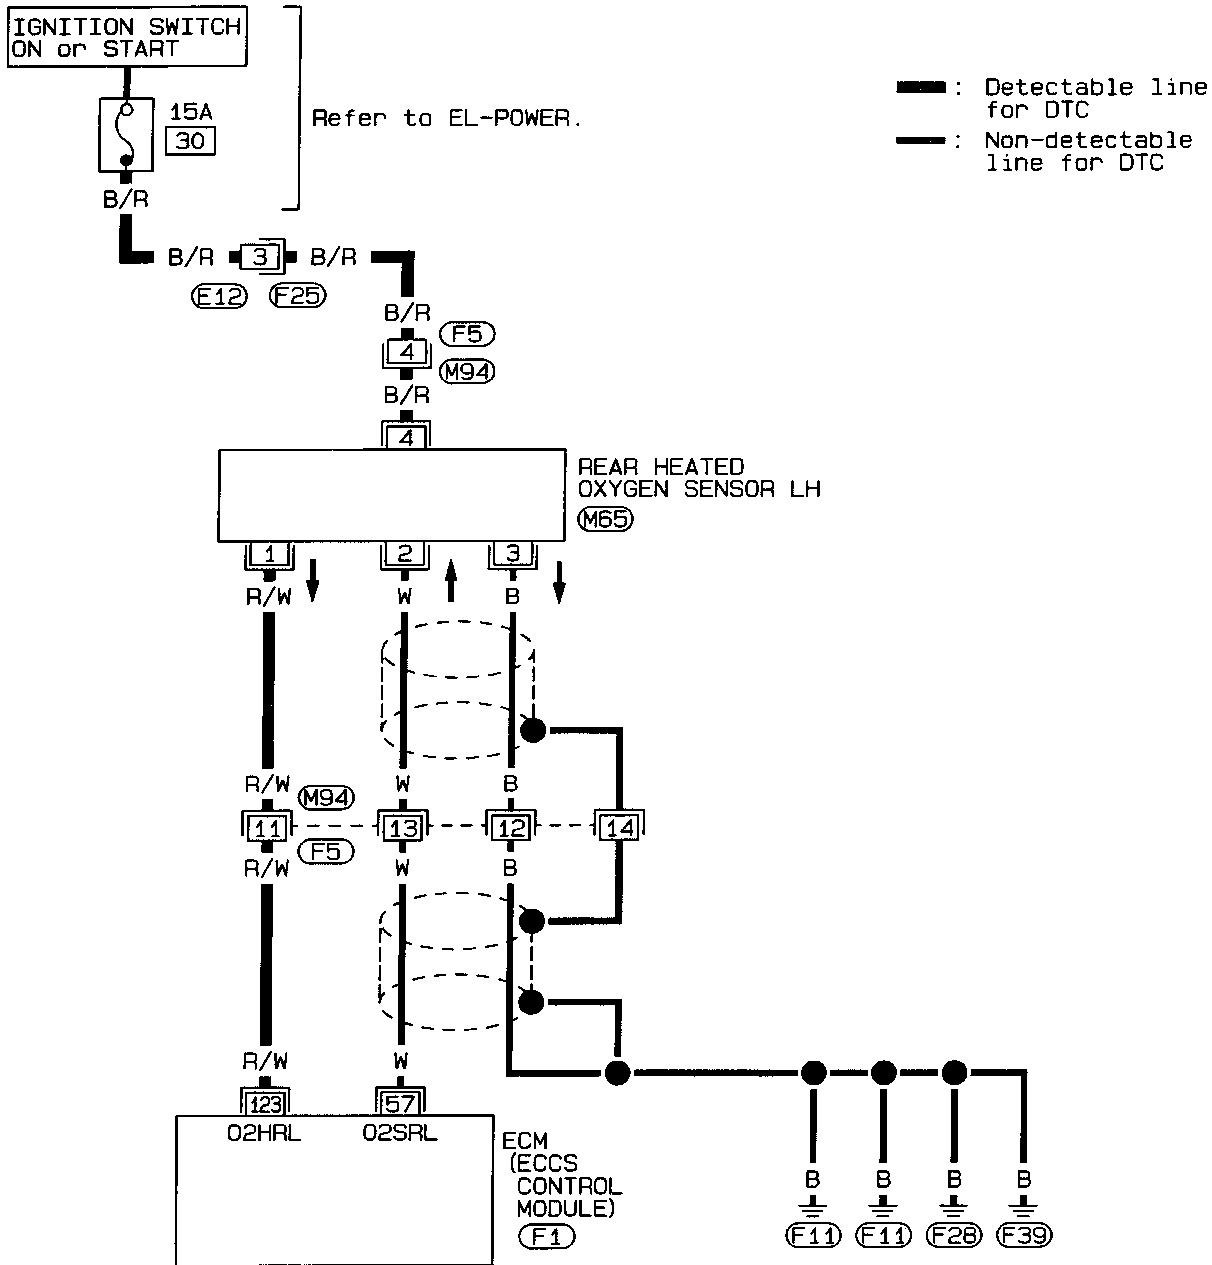

# TROUBLE DIAGNOSIS FOR DTC P0161

## Rear Heated Oxygen Sensor Heater (Left bank) (DTC: 1002) (Cont'd)

### DIAGNOSTIC PROCEDURE

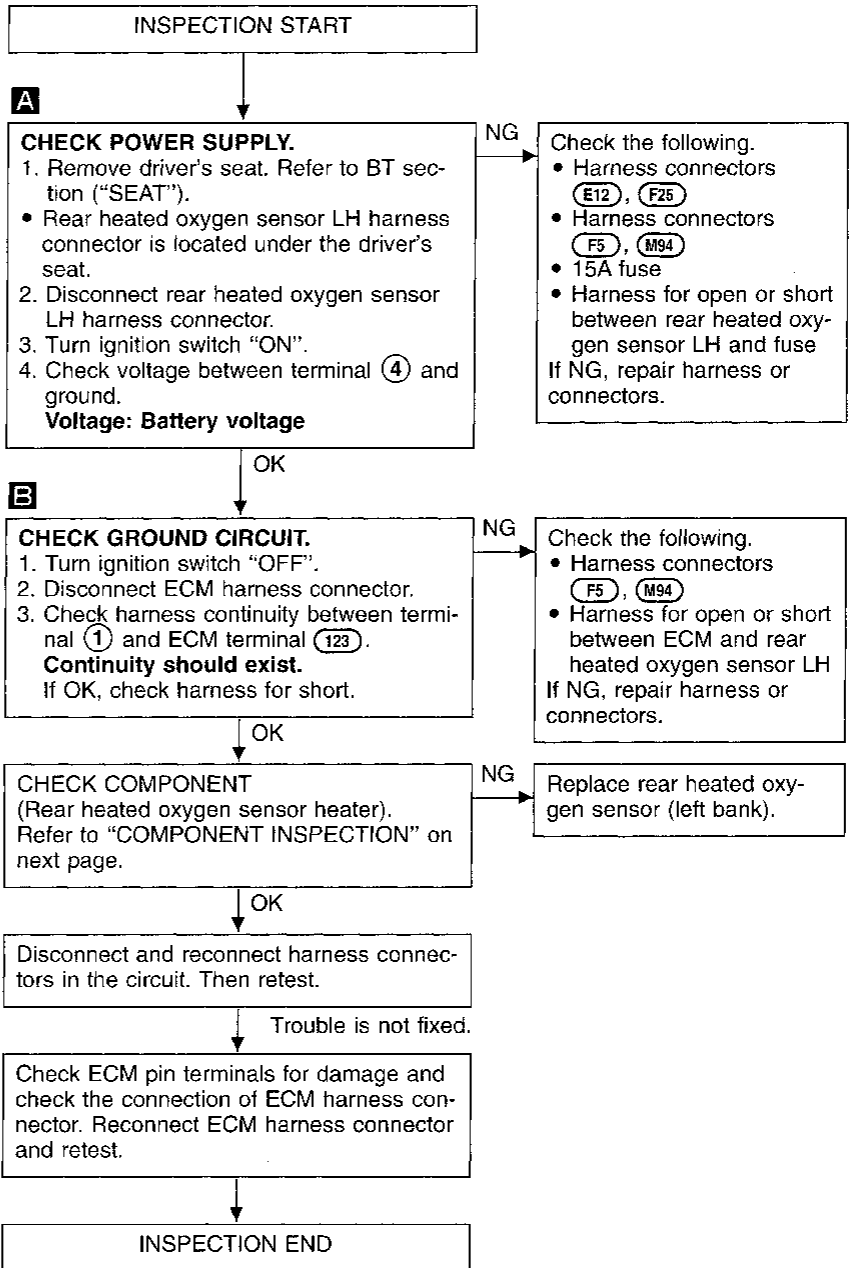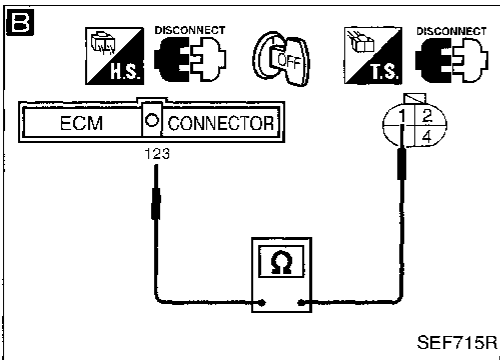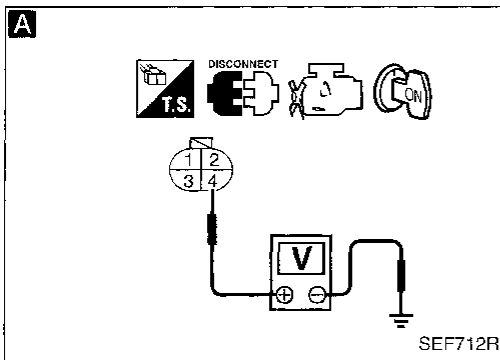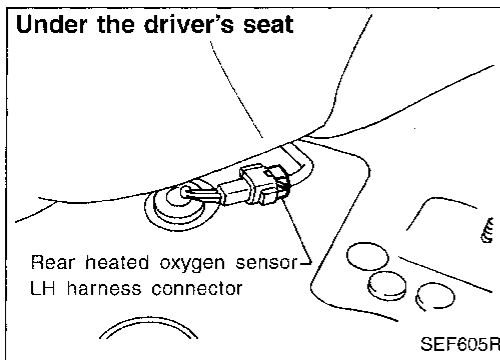

GI  
NA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

# TROUBLE DIAGNOSIS FOR DTC P0161

## Rear Heated Oxygen Sensor Heater (Left bank) (DTC: 1002) (Cont'd)

### COMPONENT INSPECTION

#### Rear heated oxygen sensor heater

Check the following.


1. Check resistance between terminals ④ and ①.  
**Resistance: 2.3 - 4.3Ω at 25°C (77°F)**
2. Check continuity.

Terminal No.	Continuity
② and ①, ③, ④	No
③ and ①, ②, ④	

If NG, replace the rear heated oxygen sensor.

#### CAUTION:


Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

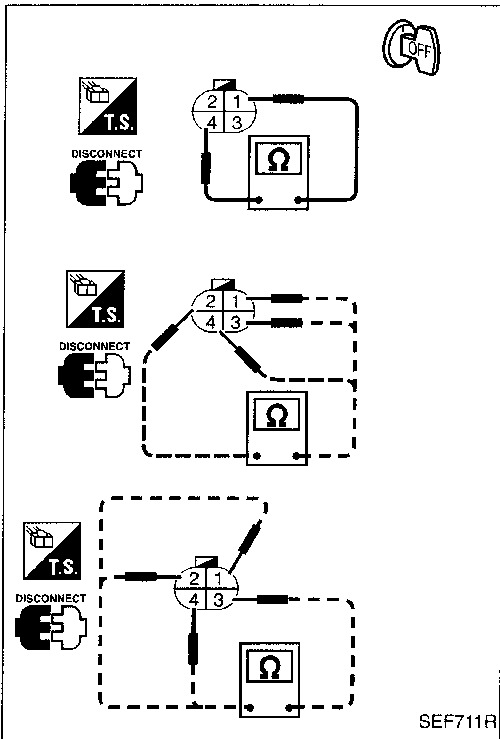


**Fuel Injection System Function (Right bank)  
(Lean side) (DTC: 0115)**

**ON BOARD DIAGNOSIS LOGIC**

With the Air/Fuel Mixture Ratio Self-Learning Control, the actual mixture ratio can be brought closely to the theoretical mixture ratio based on the mixture ratio feedback signal from the front heated oxygen sensors. The ECM calculates the necessary compensation to correct the offset between the actual and the theoretical ratios. In case the amount of the compensation value is extremely large (The actual mixture ratio is too lean.), the ECM judges the condition as the fuel injection system malfunction and light up the MIL (2 trip detection logic).

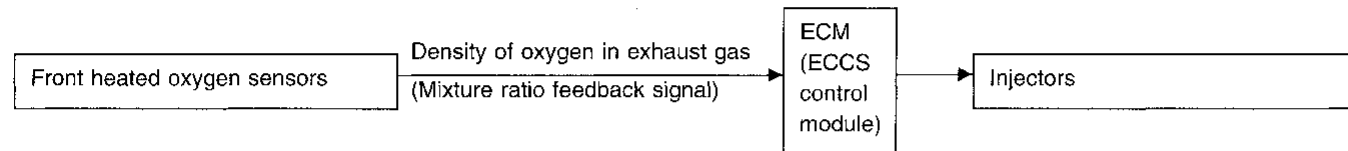

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0171 0115	<ul style="list-style-type: none"> <li>Fuel injection system does not operate properly.</li> <li>The amount of mixture ratio compensation is too large. (The mixture ratio is too lean.)</li> </ul>	<ul style="list-style-type: none"> <li>Intake air leaks</li> <li>Front heated oxygen sensor (right bank)</li> <li>Injectors (right bank)</li> <li>Exhaust gas leaks</li> <li>Incorrect fuel pressure</li> <li>Lack of fuel</li> <li>Mass air flow sensor</li> </ul>

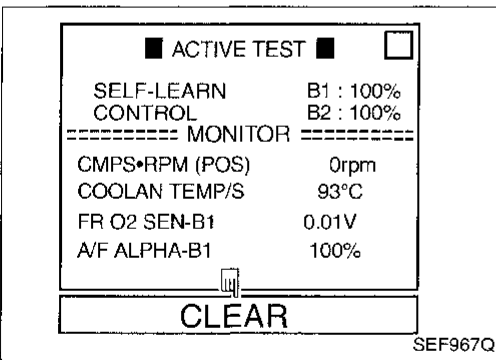


**DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE (Overall)**

- 1) Start engine and warm it up sufficiently.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Turn ignition switch "ON" and select "SELF-LEARN CONTROL" in "ACTIVE TEST" mode with CONSULT.
- 4) Clear the self-learning control coefficient by touching "CLEAR".
- 5) Select "DATA MONITOR" mode with CONSULT.
- 6) Start engine again and run it for at least 10 minutes at idle speed.  
The DTC P0171 should be detected at this stage, if a malfunction exists.
- 7) If it is difficult to start engine at step 6, the fuel injection system has a malfunction, too.

OR

## TROUBLE DIAGNOSIS FOR DTC P0171

### Fuel Injection System Function (Right bank) (Lean side) (DTC: 0115) (Cont'd)

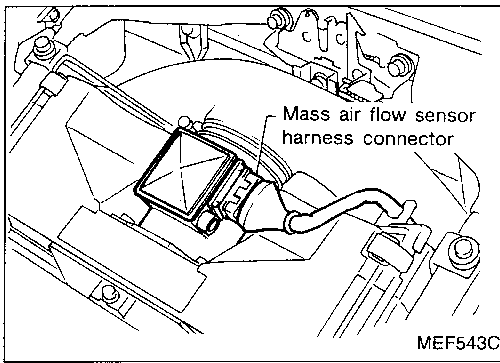




- 1) Disconnect mass air flow sensor harness connector.
- 2) Start engine and run it for at least 3 seconds at idle speed.
- 3) Stop engine and reconnect mass air flow sensor harness connector.
- 4) Turn ignition switch "ON".
- 5) Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM. Make sure DTC 0102 is detected.
- 6) Erase the DTC 0102 by changing from Diagnostic Test Mode II to Diagnostic Test Mode I.
- 7) Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM. Make sure DTC 0505 is detected.
- 8) Start engine again and run it for at least 10 minutes at idle speed.  
The DTC 0115 should be detected at this stage, if a malfunction exists.
- 9) If it is difficult to start engine at step 8, the fuel injection system also has a malfunction.



# TROUBLE DIAGNOSIS FOR DTC P0171

## Fuel Injection System Function (Right bank) (Lean side) (DTC: 0115) (Cont'd)

EC-FUELRH-01

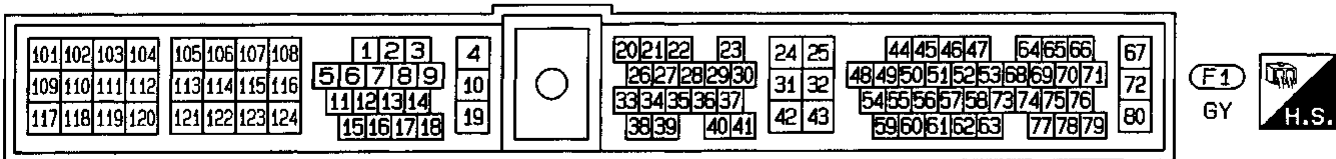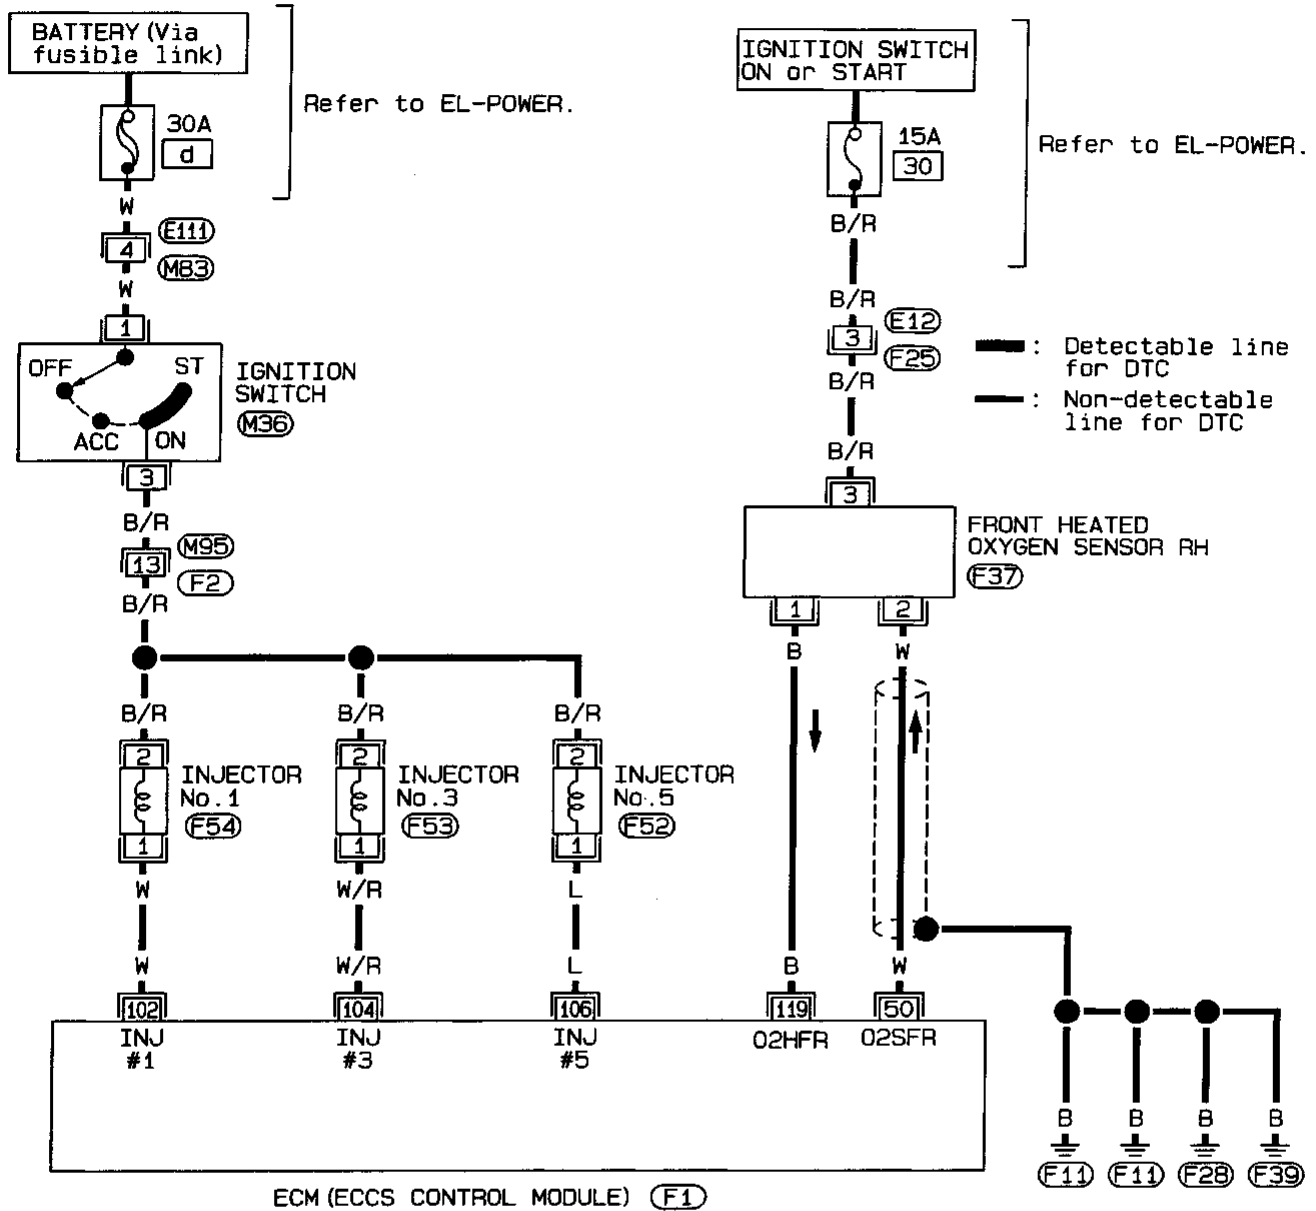


# TROUBLE DIAGNOSIS FOR DTC P0171

## Fuel Injection System Function (Right bank) (Lean side) (DTC: 0115) (Cont'd)


### DIAGNOSTIC PROCEDURE

INSPECTION START

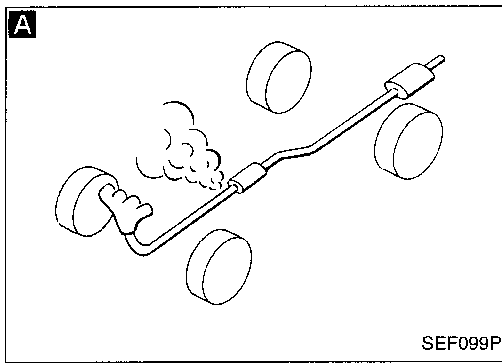


**A**  
**CHECK EXHAUST AIR LEAK.**  
Start engine and run it at idle. Listen for an exhaust air leak before three way catalyst.

NG → Repair or replace.

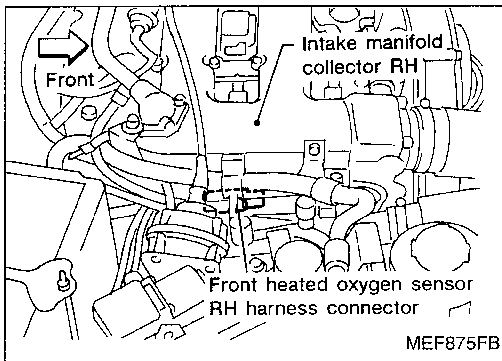

**CHECK FOR INTAKE AIR LEAK.**  
Start engine and run it at idle. Listen for an intake air leak after the mass air flow sensor.

NG → Repair or replace.

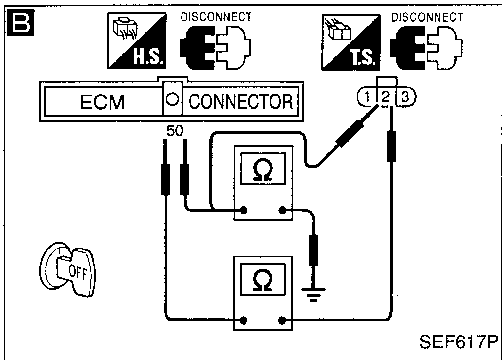

**B**  
**CHECK FRONT HEATED OXYGEN SENSOR (RIGHT BANK).**  
1. Turn ignition switch "OFF".  
2. Disconnect front heated oxygen sensor RH harness connector and ECM harness connector.  
3. Check harness continuity between ECM terminal (50) and terminal (2).  
**Continuity should exist.**  
4. Check harness continuity between ECM terminal (50) (or terminal (2)) and ground.  
**Continuity should not exist.**  
If OK, check harness for short.

NG → Repair harness or connectors.

**CHECK FUEL PRESSURE.**  
1. Release fuel pressure to zero. Refer to EC-26.  
2. Install fuel pressure gauge and check fuel pressure.  
**At idling:**  
**When fuel pressure regulator valve vacuum hose is connected.**  
Approximately 250.1 kPa (2.55 kg/cm<sup>2</sup>, 36.3 psi)  
**When fuel pressure regulator valve vacuum hose is disconnected.**  
Approximately 299.1 kPa (3.05 kg/cm<sup>2</sup>, 43.4 psi)

NG → Check fuel pump and circuit. Refer to EC-260, 316.

OK  
A

# TROUBLE DIAGNOSIS FOR DTC P0171

## Fuel Injection System Function (Right bank) (Lean side) (DTC: 0115) (Cont'd)

(A)

### CHECK MASS AIR FLOW SENSOR.



Check "MASS AIR FLOW" in "DATA MONITOR" mode with CONSULT.

#### At idling:

- 2.3 - 4.8 g-m/sec (Non-turbo-charger models with M/T)
- 2.9 - 6.0 g-m/sec (Non-turbo-charger models with A/T)
- 2.6 - 5.3 g-m/sec (Turbocharger models with M/T)
- 2.9 - 6.0 g-m/sec (Turbocharger models with A/T)

#### At 2,500 rpm:

- 7.9 - 15.5 g-m/sec (Non-turbo-charger models with M/T)
- 8.7 - 16.9 g-m/sec (Non-turbo-charger models with A/T)
- 9.3 - 18.1 g-m/sec (Turbo-charger models with M/T)
- 8.8 - 17.2 g-m/sec (Turbo-charger models with A/T)

OR



Check "mass air flow" in MODE 1 with GST.

#### At idling:

- 2.3 - 4.8 g-m/sec (Non-turbo-charger models with M/T)
- 2.9 - 6.0 g-m/sec (Non-turbo-charger models with A/T)
- 2.6 - 5.3 g-m/sec (Turbocharger models with M/T)
- 2.9 - 6.0 g-m/sec (Turbocharger models with A/T)

#### At 2,500 rpm:

- 7.9 - 15.5 g-m/sec (Non-turbo-charger models with M/T)
- 8.7 - 16.9 g-m/sec (Non-turbo-charger models with A/T)
- 9.3 - 18.1 g-m/sec (Turbo-charger models with M/T)
- 8.8 - 17.2 g-m/sec (Turbo-charger models with A/T)

NG

Check connectors for rusted terminals or loose connections in the mass air flow sensor circuit or engine grounds. Refer to EC-108.




OK

(B)

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

# TROUBLE DIAGNOSIS FOR DTC P0171

## Fuel Injection System Function (Right bank) (Lean side) (DTC: 0115) (Cont'd)

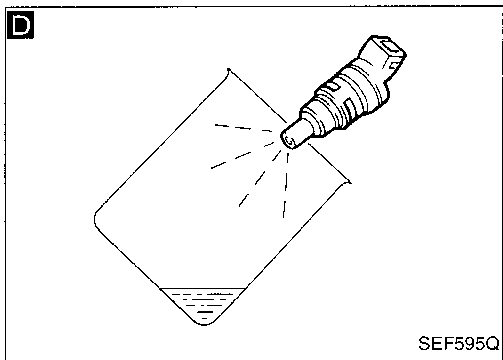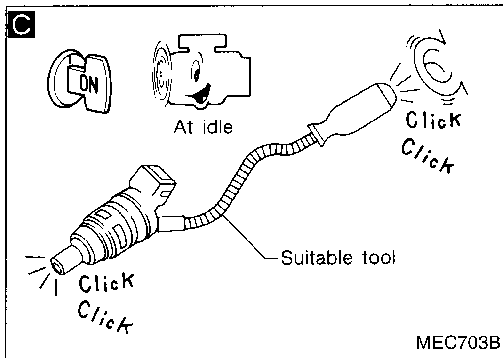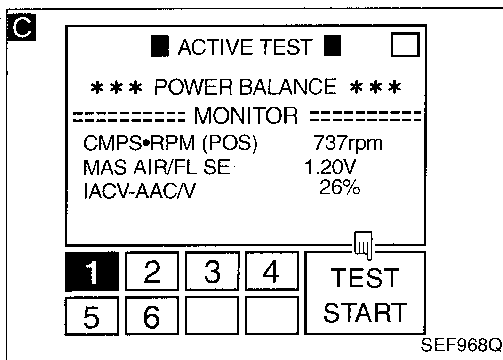

**C**

**CHECK FUNCTION OF INJECTORS (RIGHT BANK).**

1. Install all parts removed.
2. Start engine.
3. Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT.
4. Make sure that each circuit produces a momentary engine speed drop.

OR

3. Listen to each injector operating sound.  
**Clicking noise should be heard.**

NG → Perform TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS, "Injectors", EC-311. Repair harness or connectors.

OK → Confirm that the engine is cooled down and there are no fire hazards near the vehicle.

1. Turn ignition switch "OFF".
2. Disconnect injector harness connectors on left bank.
3. Remove injector gallery on right bank. Refer to EC-27.  
Keep fuel hose and all injectors connected to injector gallery.  
The injector harness connectors on right bank should remain connected.

**D**

1. Disconnect all ignition coil harness connectors.
2. Crank engine for about 3 seconds. Make sure that fuel sprays out from injectors.

NG → Replace injectors from which fuel does not spray out.


OK → Check ECM pin terminals for damage and check the connection of ECM harness connector. Reconnect ECM harness connector and retest.

INSPECTION END


**Fuel Injection System Function (Right bank)  
(Rich side) (DTC: 0114)**

**ON BOARD DIAGNOSIS LOGIC**

With the Air/Fuel Mixture Ratio Self-Learning Control, the actual mixture ratio can be brought closely to the theoretical mixture ratio based on the mixture ratio feedback signal from the front heated oxygen sensors. The ECM calculates the necessary compensation to correct the offset between the actual and the theoretical ratios. In case the amount of the compensation value is extremely large (The actual mixture ratio is too rich.), the ECM judges the condition as the fuel injection system malfunction and light up the MIL (2 trip detection logic).

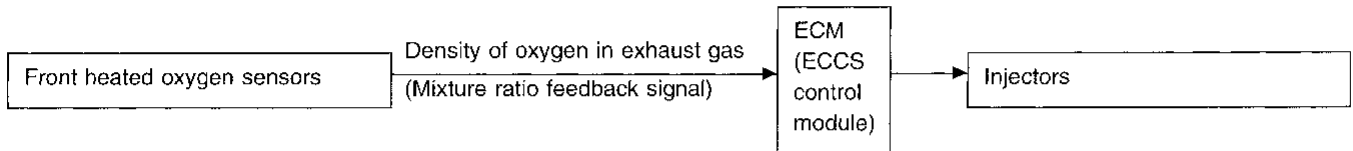

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0172 0114	<ul style="list-style-type: none"> <li>Fuel injection system does not operate properly.</li> <li>The amount of mixture ratio compensation is too large. (The mixture ratio is too rich.)</li> </ul>	<ul style="list-style-type: none"> <li>Front heated oxygen sensor (right bank)</li> <li>Injectors (right bank)</li> <li>Exhaust gas leaks</li> <li>Incorrect fuel pressure</li> <li>Mass air flow sensor</li> </ul>

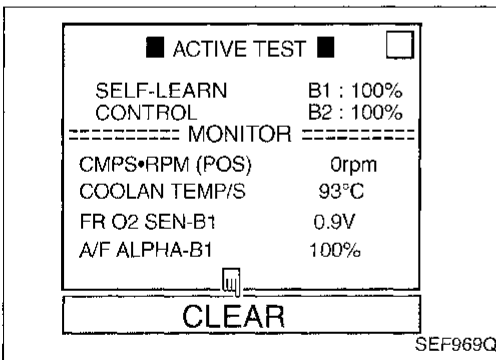


**DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE (Overall)**

- 1) Start engine and warm it up sufficiently.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Turn ignition switch "ON" and select "SELF-LEARN CONTROL" in "ACTIVE TEST" mode with CONSULT.
- 4) Clear the self-learning control coefficient by touching "CLEAR".
- 5) Select "DATA MONITOR" mode with CONSULT.
- 6) Start engine again and run it for at least 10 minutes at idle speed.  
The DTC P0172 should be detected at this stage, if a malfunction exists.
- 7) If it is difficult to start engine at step 6, the fuel injection system has a malfunction, too.

OR

## TROUBLE DIAGNOSIS FOR DTC P0172

### Fuel Injection System Function (Right bank) (Rich side) (DTC: 0114) (Cont'd)



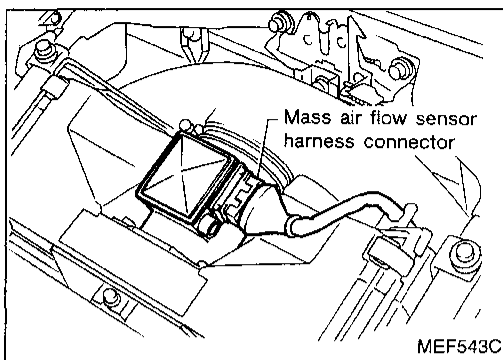


- 1) Disconnect mass air flow sensor harness connector.
- 2) Start engine and run it for at least 3 seconds at idle speed.
- 3) Stop engine and reconnect mass air flow sensor harness connector.
- 4) Turn ignition switch "ON".
- 5) Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM. Make sure DTC 0102 is detected.
- 6) Erase the DTC 0102 by changing from Diagnostic Test Mode II to Diagnostic Test Mode I.
- 7) Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM. Make sure DTC 0505 is detected.
- 8) Start engine again and run it for at least 10 minutes at idle speed.  
The DTC 0114 should be detected at this stage, if a malfunction exists.
- 9) If it is difficult to start engine at step 8, the fuel injection system also has a malfunction.

# TROUBLE DIAGNOSIS FOR DTC P0172

## Fuel Injection System Function (Right bank) (Rich side) (DTC: 0114) (Cont'd)

EC-FUELRH-01

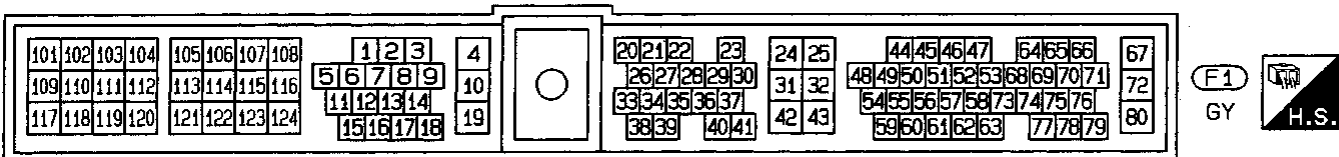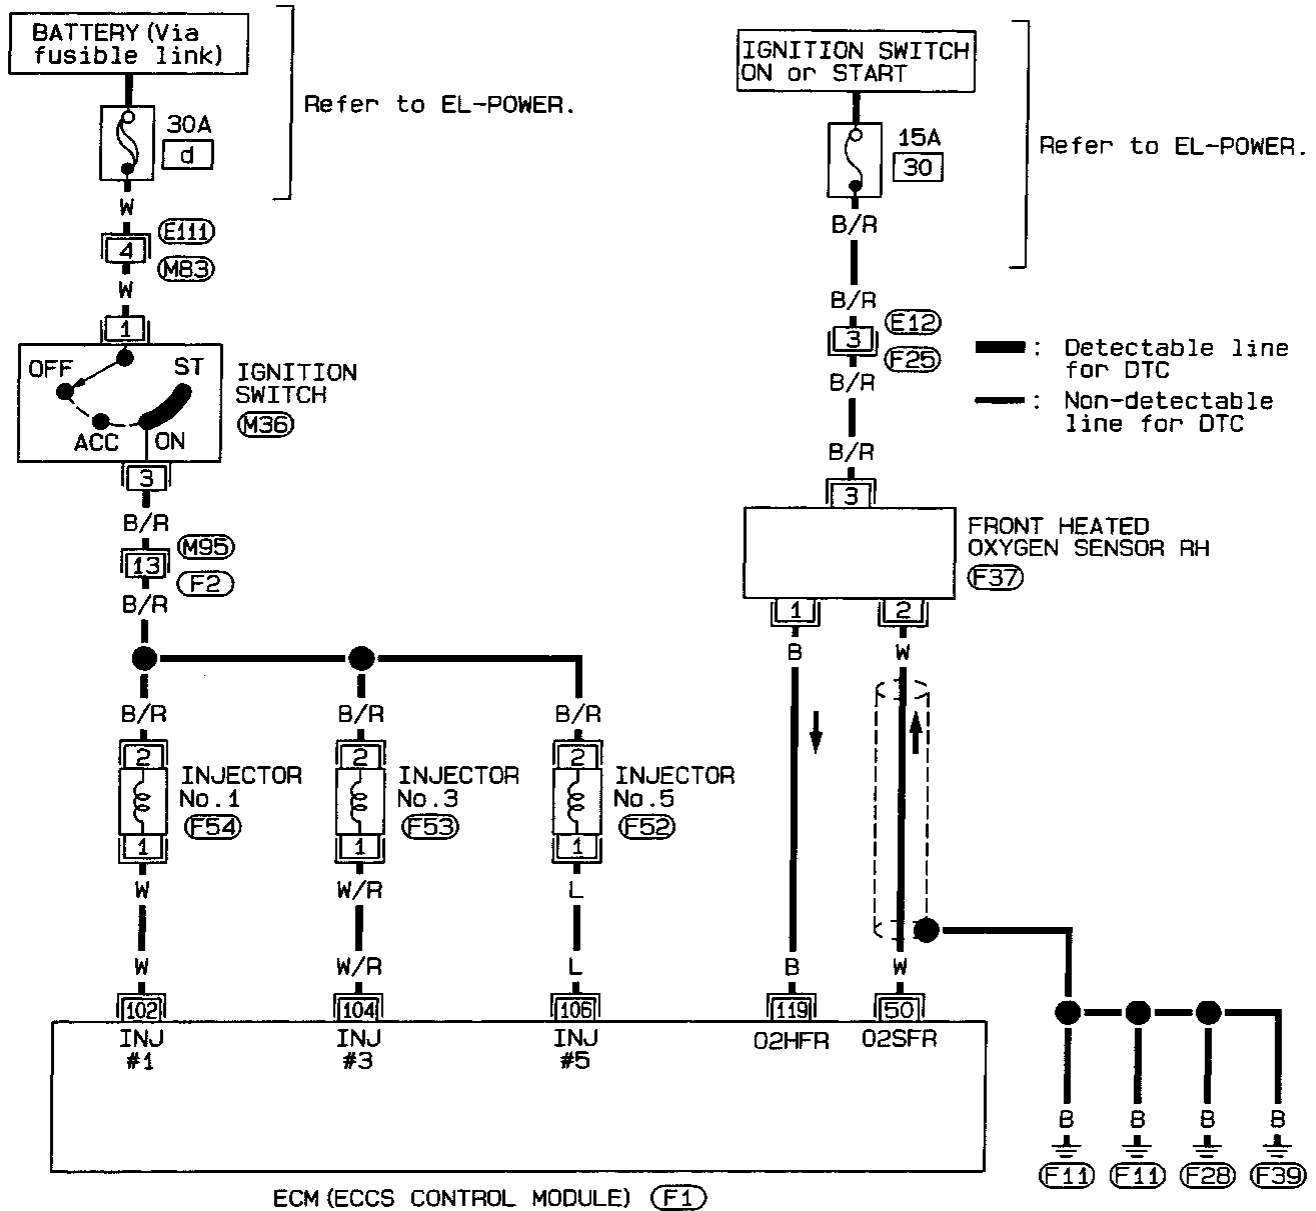


# TROUBLE DIAGNOSIS FOR DTC P0172

## Fuel Injection System Function (Right bank) (Rich side) (DTC: 0114) (Cont'd)


### DIAGNOSTIC PROCEDURE

INSPECTION START

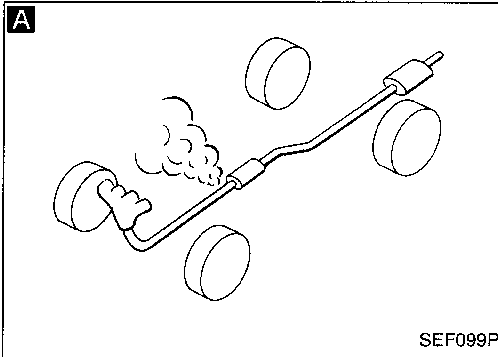


**A**  
**CHECK FOR EXHAUST AIR LEAK.**  
Start engine and run it at idle. Listen for an exhaust air leak before the three way catalyst.

NG → Repair or replace.

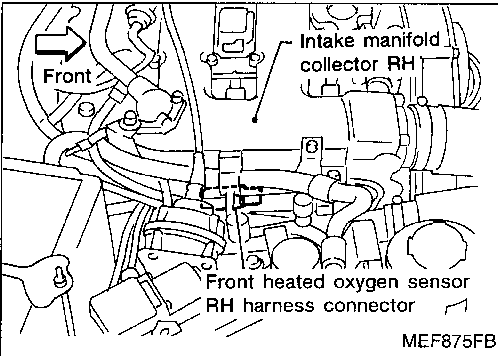

**B**  
**CHECK FRONT HEATED OXYGEN SENSOR (RIGHT BANK).**  
1. Turn ignition switch "OFF".  
2. Disconnect front heated oxygen sensor RH harness connector and ECM harness connector.  
3. Check harness continuity between ECM terminal (50) and terminal (2).  
**Continuity should exist.**  
4. Check harness continuity between ECM terminal (50) (or terminal (2)) and ground.  
**Continuity should not exist.**  
If OK, check harness for short.

NG → Repair harness or connectors.

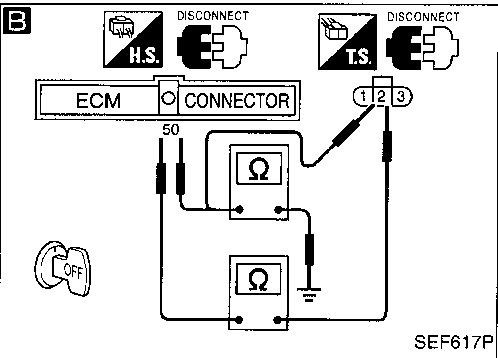

**CHECK FUEL PRESSURE.**  
1. Release fuel pressure to zero. Refer to EC-26.  
2. Install fuel pressure gauge and check fuel pressure.  
**At idling:**  
**When fuel pressure regulator valve vacuum hose is connected.**  
Approximately 250.1 kPa (2.55 kg/cm<sup>2</sup>, 36.3 psi)  
**When fuel pressure regulator valve vacuum hose is disconnected.**  
Approximately 299.1 kPa (3.05 kg/cm<sup>2</sup>, 43.4 psi)

NG → Check fuel pump and circuit. Refer to EC-260, 316.


OK  
A



# TROUBLE DIAGNOSIS FOR DTC P0172

## Fuel Injection System Function (Right bank) (Rich side) (DTC: 0114) (Cont'd)

Ⓐ

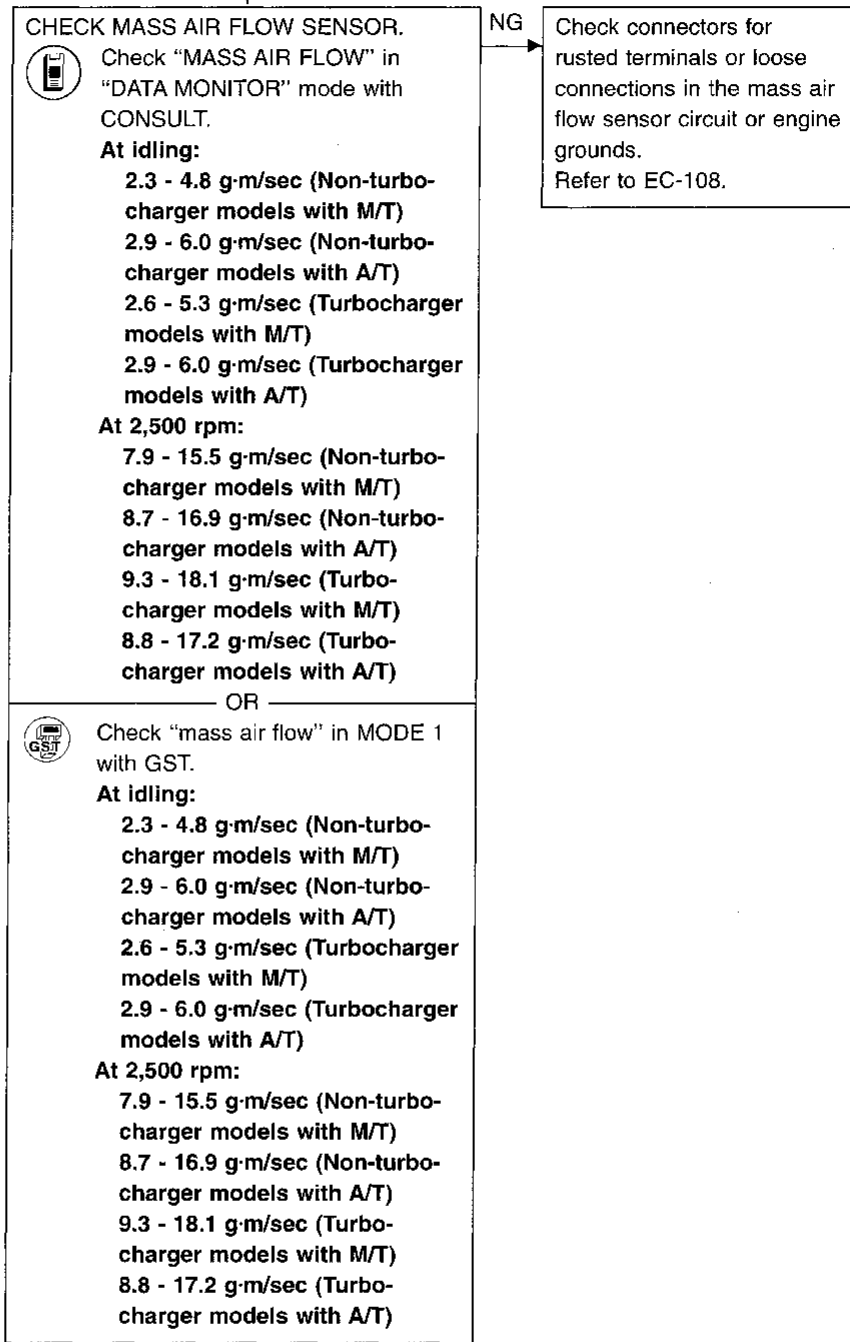

NG

Check connectors for rusted terminals or loose connections in the mass air flow sensor circuit or engine grounds. Refer to EC-108.




OK

Ⓑ

- GI
- MA
- EM
- LC
- EC**
- FE
- CL
- MT
- AT
- PD
- FA
- RA
- BR
- ST
- RS
- BT
- HA
- EL
- IDX

# TROUBLE DIAGNOSIS FOR DTC P0172


## Fuel Injection System Function (Right bank) (Rich side) (DTC: 0114) (Cont'd)

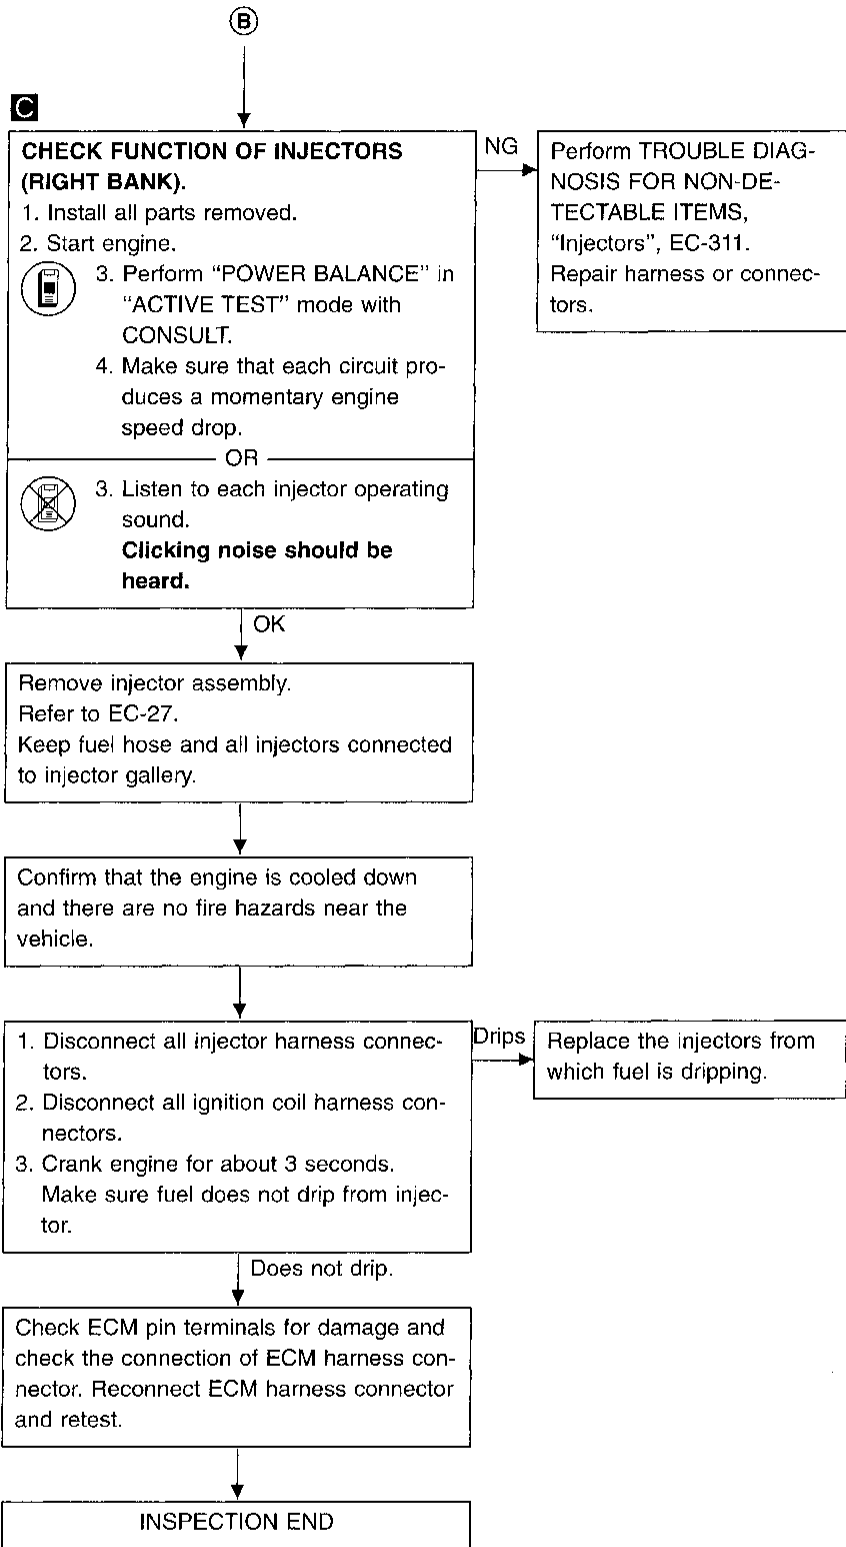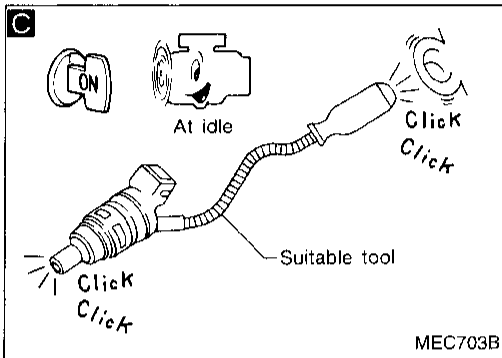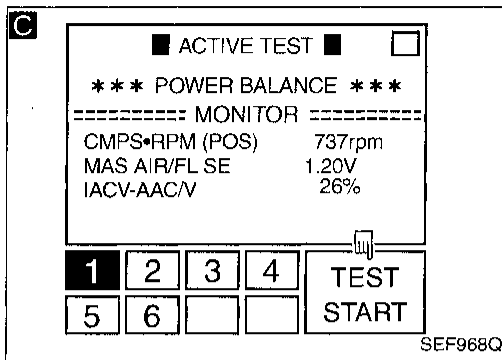


**Fuel Injection System Function (Left bank)  
(Lean side) (DTC: 0210)**

**ON BOARD DIAGNOSIS LOGIC**

With the Air/Fuel Mixture Ratio Self-Learning Control, the actual mixture ratio can be brought closely to the theoretical mixture ratio based on the mixture ratio feedback signal from the front heated oxygen sensors. The ECM calculates the necessary compensation to correct the offset between the actual and the theoretical ratios. In case the amount of the compensation value is extremely large (The actual mixture ratio is too lean.), the ECM judges the condition as the fuel injection system malfunction and light up the MIL (2 trip detection logic).

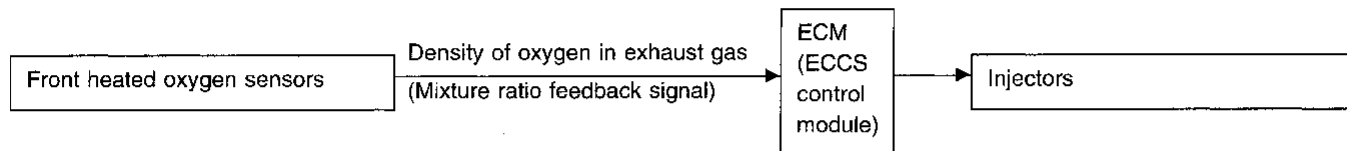

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0174 0210	<ul style="list-style-type: none"> <li>Fuel injection system does not operate properly.</li> <li>The amount of mixture ratio compensation is too large. (The mixture ratio is too lean.)</li> </ul>	<ul style="list-style-type: none"> <li>Intake air leaks</li> <li>Front heated oxygen sensor (left bank)</li> <li>Injectors (left bank)</li> <li>Exhaust gas leaks</li> <li>Incorrect fuel pressure</li> <li>Lack of fuel</li> <li>Mass air flow sensor</li> </ul>

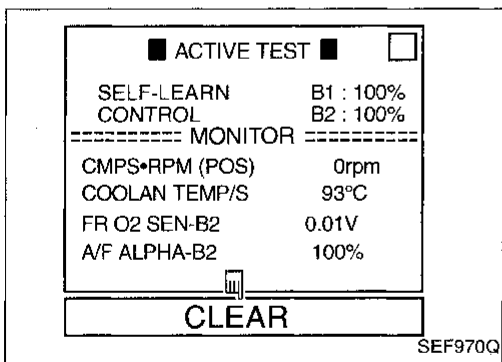


**DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE (Overall)**

- 1) Start engine and warm it up sufficiently.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Turn ignition switch "ON" and select "SELF-LEARN CONTROL" in "ACTIVE TEST" mode with CONSULT.
- 4) Clear the self-learning control coefficient by touching "CLEAR".
- 5) Select "DATA MONITOR" mode with CONSULT.
- 6) Start engine again and run it for at least 10 minutes at idle speed.  
The DTC P0174 should be detected at this stage, if a malfunction exists.
- 7) If it is difficult to start engine at step 6, the fuel injection system has a malfunction, too.

OR

## TROUBLE DIAGNOSIS FOR DTC P0174

### Fuel Injection System Function (Left bank) (Lean side) (DTC: 0210) (Cont'd)

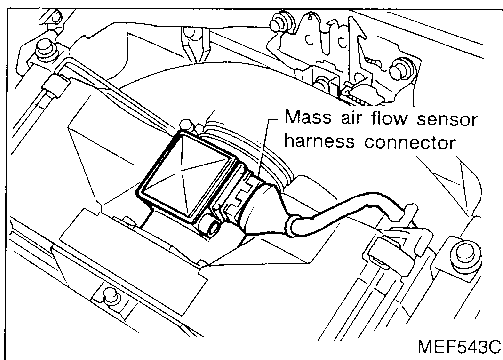

- 1) Disconnect mass air flow sensor harness connector.
- 2) Start engine and run it for at least 3 seconds at idle speed.
- 3) Stop engine and reconnect mass air flow sensor harness connector.
- 4) Turn ignition switch "ON".
- 5) Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM. Make sure DTC 0102 is detected.
- 6) Erase the DTC 0102 by changing from Diagnostic Test Mode II to Diagnostic Test Mode I.
- 7) Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM. Make sure DTC 0505 is detected.
- 8) Start engine again and run it for at least 10 minutes at idle speed.




The DTC 0210 should be detected at this stage, if a malfunction exists.

- 9) If it is difficult to start engine at step 8, the fuel injection system also has a malfunction.

# TROUBLE DIAGNOSIS FOR DTC P0174

## Fuel Injection System Function (Left bank) (Lean side) (DTC: 0210) (Cont'd)

EC-FUELLH-01

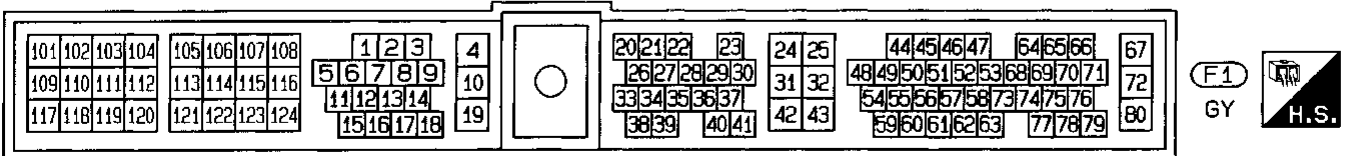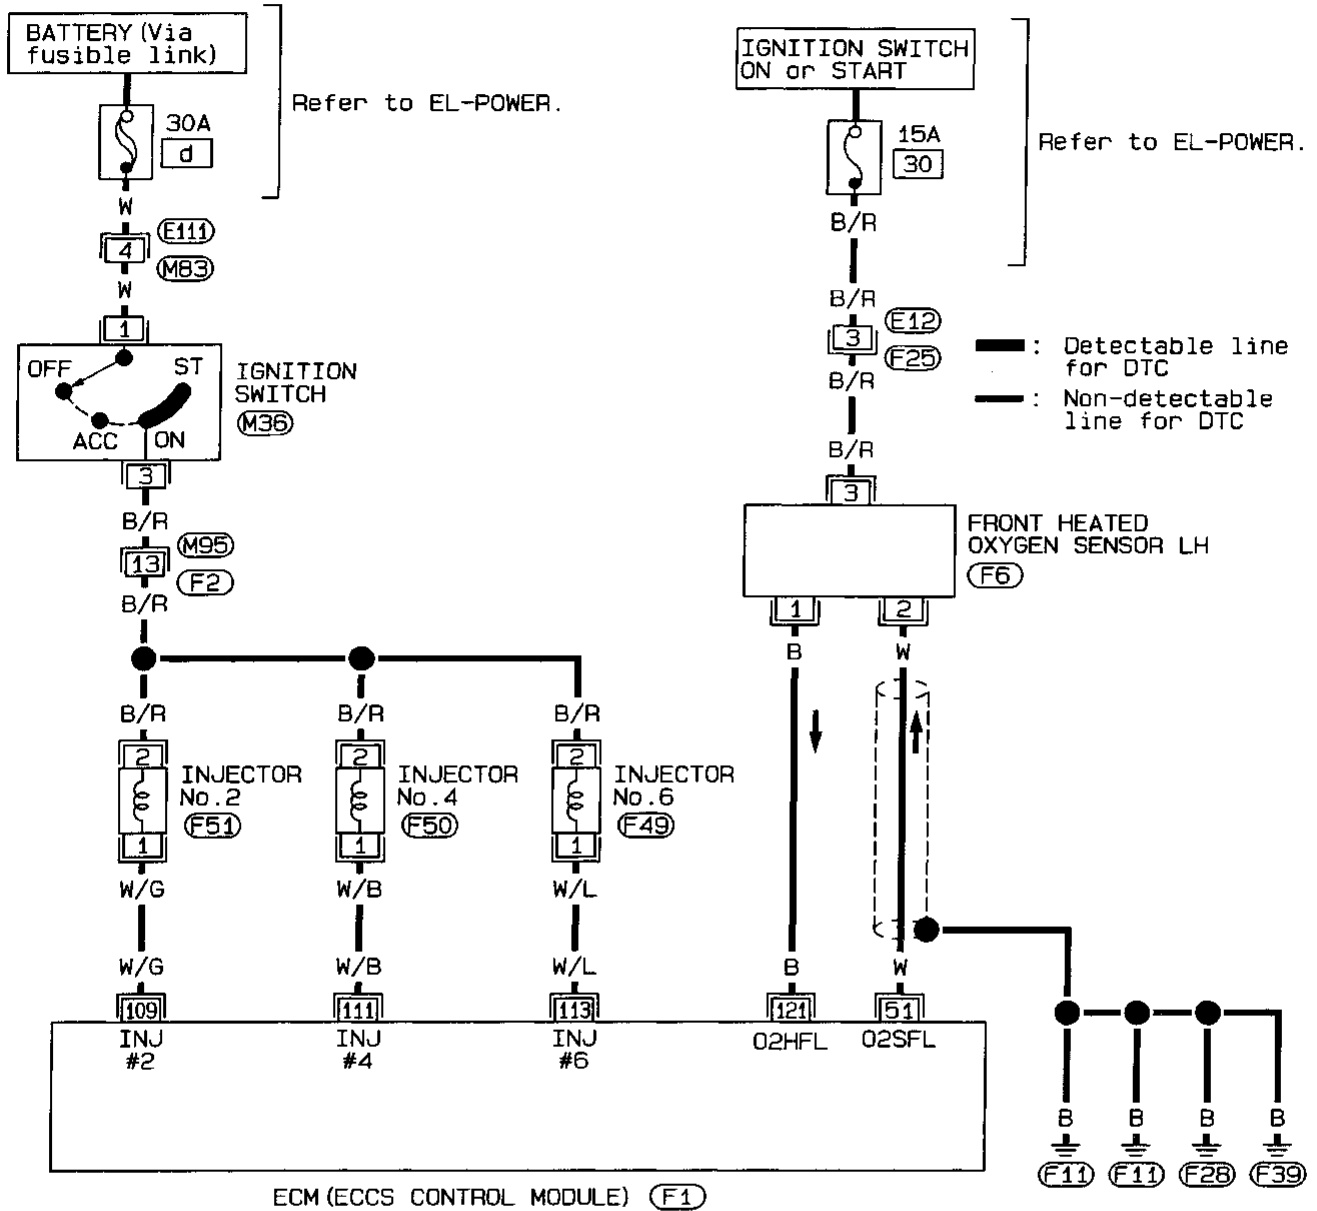


# TROUBLE DIAGNOSIS FOR DTC P0174

## Fuel Injection System Function (Left bank) (Lean side) (DTC: 0210) (Cont'd)


### DIAGNOSTIC PROCEDURE

INSPECTION START

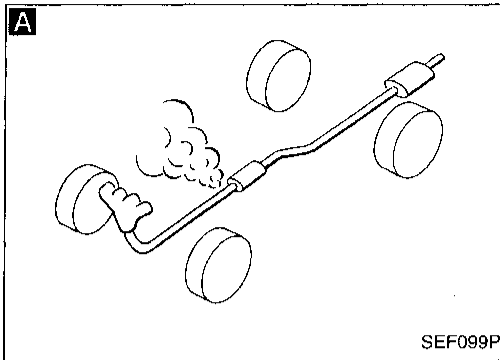


**A**  
**CHECK EXHAUST AIR LEAK.**  
Start engine and run it at idle. Listen for an exhaust air leak before three way catalyst.

NG → Repair or replace.

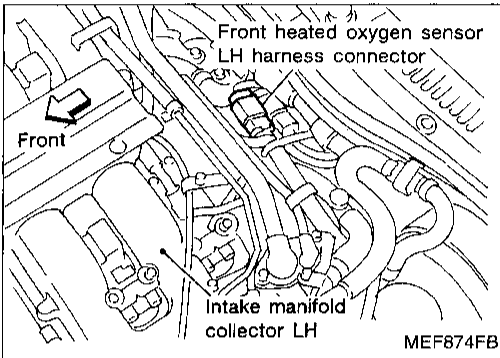

OK  
**CHECK FOR INTAKE AIR LEAK.**  
Start engine and run it at idle. Listen for an intake air leak after mass air flow sensor.

NG → Repair or replace.

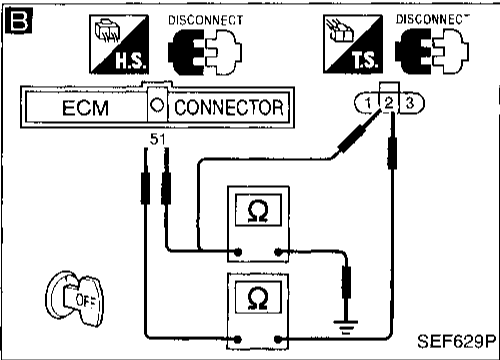

**B**  
**CHECK FRONT HEATED OXYGEN SENSOR (LEFT BANK).**  
1. Turn ignition switch "OFF".  
2. Disconnect front heated oxygen sensor LH harness connector and ECM harness connector.  
3. Check harness continuity between ECM terminal (51) and terminal (2).  
**Continuity should exist.**  
4. Check harness continuity between ECM terminal (51) (or terminal (2)) and ground.  
**Continuity should not exist.**  
If OK, check harness for short.

NG → Repair harness or connectors.

OK  
**CHECK FUEL PRESSURE.**  
1. Release fuel pressure to zero. Refer to EC-26.  
2. Install fuel pressure gauge and check fuel pressure.  
**At idling:**  
**When fuel pressure regulator valve vacuum hose is connected.**  
Approximately 250.1 kPa (2.55 kg/cm<sup>2</sup>, 36.3 psi)  
**When fuel pressure regulator valve vacuum hose is disconnected.**  
Approximately 299.1 kPa (3.05 kg/cm<sup>2</sup>, 43.4 psi)

NG → Check fuel pump and circuit. Refer to EC-260, 316.

OK  
A

# TROUBLE DIAGNOSIS FOR DTC P0174

## Fuel Injection System Function (Left bank) (Lean side) (DTC: 0210) (Cont'd)

Ⓐ

### CHECK MASS AIR FLOW SENSOR.



Check "MASS AIR FLOW" in "DATA MONITOR" mode with CONSULT.

#### At idling:

- 2.3 - 4.8 g-m/sec (Non-turbo-charger models with M/T)
- 2.9 - 6.0 g-m/sec (Non-turbo-charger models with A/T)
- 2.6 - 5.3 g-m/sec (Turbocharger models with M/T)
- 2.9 - 6.0 g-m/sec (Turbocharger models with A/T)

#### At 2,500 rpm:

- 7.9 - 15.5 g-m/sec (Non-turbo-charger models with M/T)
- 8.7 - 16.9 g-m/sec (Non-turbo-charger models with A/T)
- 9.3 - 18.1 g-m/sec (Turbo-charger models with M/T)
- 8.8 - 17.2 g-m/sec (Turbo-charger models with A/T)

OR



Check "mass air flow" in MODE 1 with GST.

#### At idling:

- 2.3 - 4.8 g-m/sec (Non-turbo-charger models with M/T)
- 2.9 - 6.0 g-m/sec (Non-turbo-charger models with A/T)
- 2.6 - 5.3 g-m/sec (Turbocharger models with M/T)
- 2.9 - 6.0 g-m/sec (Turbocharger models with A/T)

#### At 2,500 rpm:

- 7.9 - 15.5 g-m/sec (Non-turbo-charger models with M/T)
- 8.7 - 16.9 g-m/sec (Non-turbo-charger models with A/T)
- 9.3 - 18.1 g-m/sec (Turbo-charger models with M/T)
- 8.8 - 17.2 g-m/sec (Turbo-charger models with A/T)

NG

Check connectors for rusted terminals or loose connections in the mass air flow sensor circuit or engine grounds.  
Refer to EC-108.

OK

Ⓑ

GI

MA

EM

LC

**EC**

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT




HA

EL

IDX

# TROUBLE DIAGNOSIS FOR DTC P0174

## Fuel Injection System Function (Left bank) (Lean side) (DTC: 0210) (Cont'd)

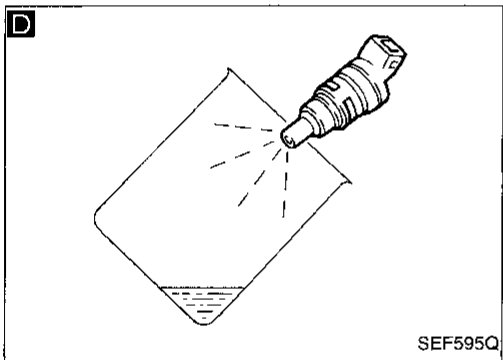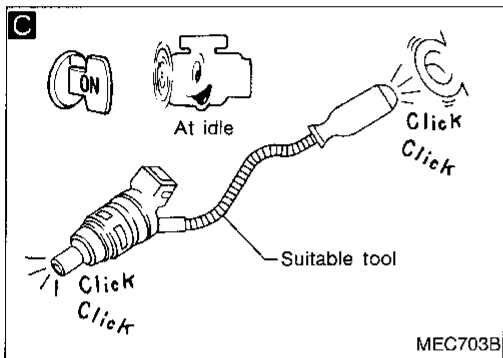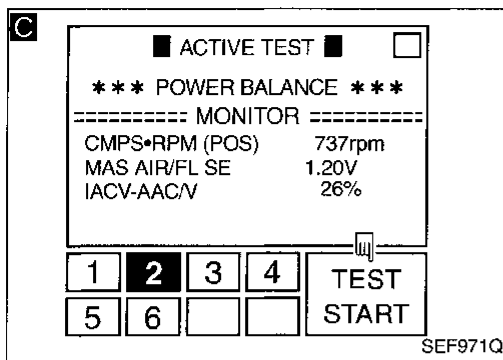

**C**

**CHECK FUNCTION OF INJECTORS (LEFT BANK).**

1. Install all parts removed.
2. Start engine.
3. Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT.
4. Make sure that each circuit produces a momentary engine speed drop.

OR

3. Listen to each injector operating sound.  
**Clicking noise should be heard.**

NG → Perform TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS, "Injectors", EC-311. Repair harness or connectors.

OK → Confirm that the engine is cooled down and there are no fire hazards near the vehicle.

1. Turn ignition switch "OFF".
2. Disconnect injector harness connectors on right bank.
3. Remove injector gallery on left bank. Refer to EC-27. Keep fuel hose and all injectors connected to injector gallery. The injector harness connectors on left bank should remain connected.

**D**

1. Disconnect all ignition coil harness connectors.
2. Crank engine for about 3 seconds. Make sure that fuel sprays out from injector.

NG → Replace injectors from which fuel does not spray out.

OK → Check ECM pin terminals for damage and check the connection of ECM harness connector. Reconnect ECM harness connector and retest.

INSPECTION END




**Fuel Injection System Function (Left bank)  
(Rich side) (DTC: 0209)**

**ON BOARD DIAGNOSIS LOGIC**


With the Air/Fuel Mixture Ratio Self-Learning Control, the actual mixture ratio can be brought closely to the theoretical mixture ratio based on the mixture ratio feedback signal from the front heated oxygen sensors. The ECM calculates the necessary compensation to correct the offset between the actual and the theoretical ratios. In case the amount of the compensation value is extremely large (The actual mixture ratio is too rich.), the ECM judges the condition as the fuel injection system malfunction and light up the MIL (2 trip detection logic).

GI  
MA  
EM  
LC

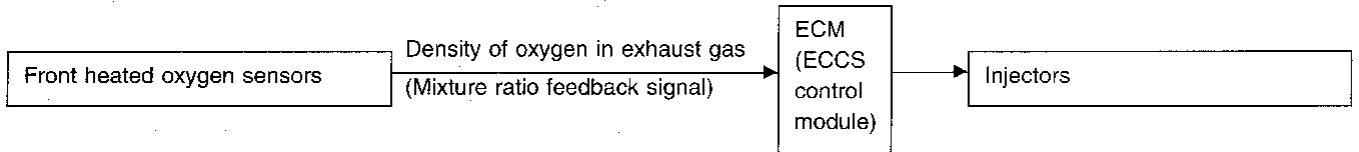

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0175 0209	<ul style="list-style-type: none"> <li>Fuel injection system does not operate properly.</li> <li>The amount of mixture ratio compensation is too large. (The mixture ratio is too rich.)</li> </ul>	<ul style="list-style-type: none"> <li>Front heated oxygen sensor (left bank)</li> <li>Injectors (left bank)</li> <li>Exhaust gas leaks</li> <li>Incorrect fuel pressure</li> <li>Mass air flow sensor</li> </ul>

EC  
FE  
CL

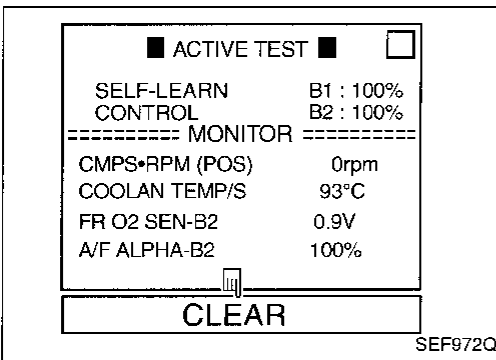

**DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE (Overall)**

- 1) Start engine and warm it up sufficiently.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Turn ignition switch "ON" and select "SELF-LEARN CONTROL" in "ACTIVE TEST" mode with CONSULT.
- 4) Clear the self-learning control coefficient by touching "CLEAR".
- 5) Select "DATA MONITOR" mode with CONSULT.
- 6) Start engine again and run it for at least 10 minutes at idle speed.  
The DTC P0175 should be detected at this stage, if a malfunction exists.
- 7) If it is difficult to start engine at step 6, the fuel injection system has a malfunction, too.


OR

MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA

EL  
IDX

## TROUBLE DIAGNOSIS FOR DTC P0175

### Fuel Injection System Function (Left bank) (Rich side) (DTC: 0209) (Cont'd)

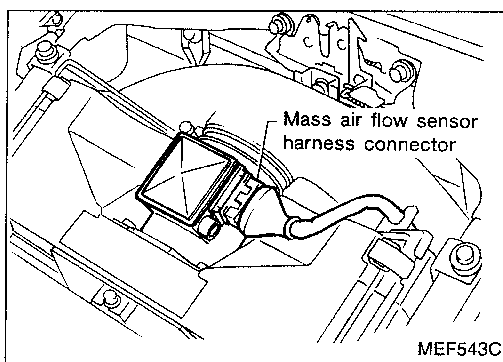

- 1) Disconnect mass air flow sensor harness connector.
- 2) Start engine and run it for at least 3 seconds at idle speed.
- 3) Stop engine and reconnect mass air flow sensor harness connector.
- 4) Turn ignition switch "ON".
- 5) Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM. Make sure DTC 0102 is detected.
- 6) Erase the DTC 0102 by changing from Diagnostic Test Mode II to Diagnostic Test Mode I.
- 7) Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM. Make sure DTC 0505 is detected.
- 8) Start engine again and run it for at least 10 minutes at idle speed.




The DTC 0209 should be detected at this stage, if a malfunction exists.

- 9) If it is difficult to start engine at step 8, the fuel injection system also has a malfunction.

# TROUBLE DIAGNOSIS FOR DTC P0175

## Fuel Injection System Function (Left bank) (Rich side) (DTC: 0209) (Cont'd)

EC-FUELLH-01

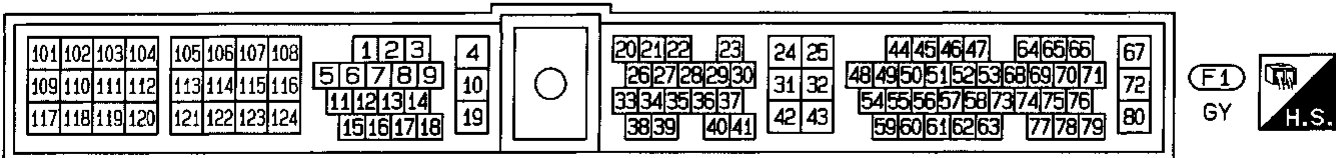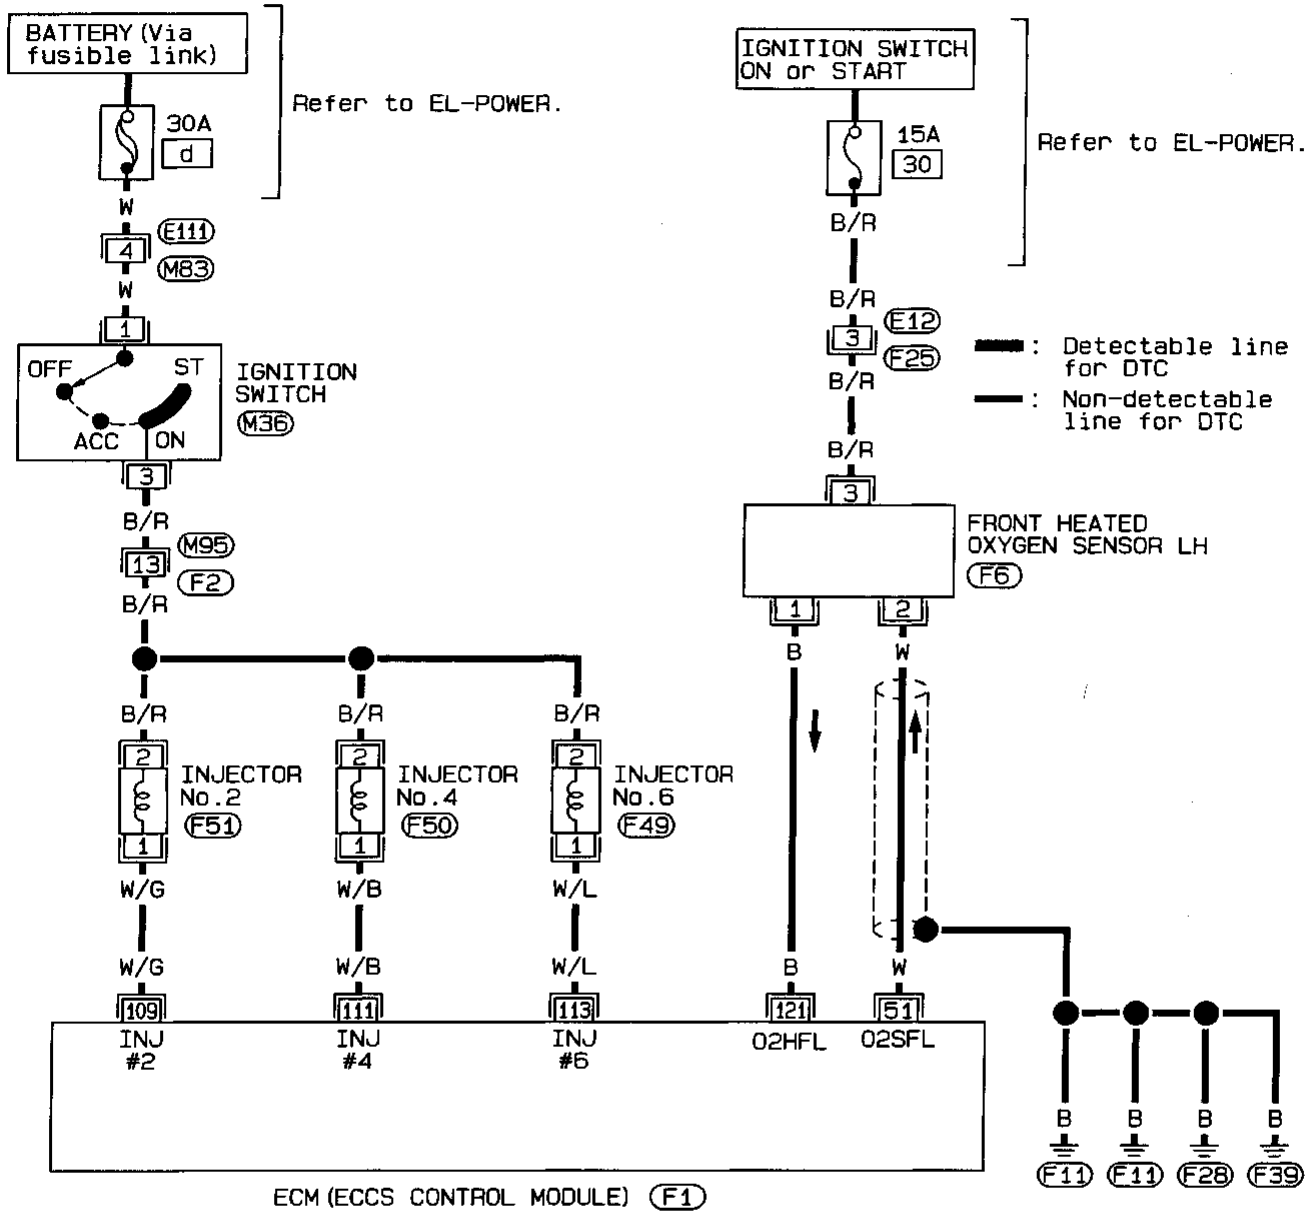


# TROUBLE DIAGNOSIS FOR DTC P0175

## Fuel Injection System Function (Left bank) (Rich side) (DTC: 0209) (Cont'd)

### DIAGNOSTIC PROCEDURE


INSPECTION START

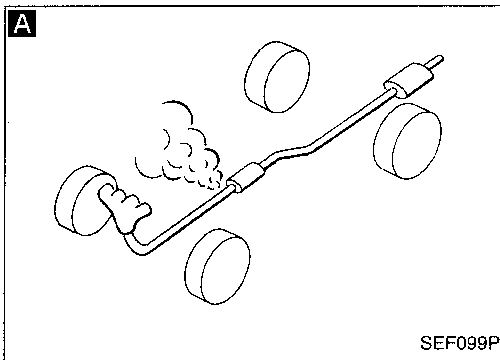

**A**

**CHECK FOR EXHAUST AIR LEAK.**  
Start engine and run it at idle. Listen for an exhaust air leak before the three way catalyst.

NG → Repair or replace.

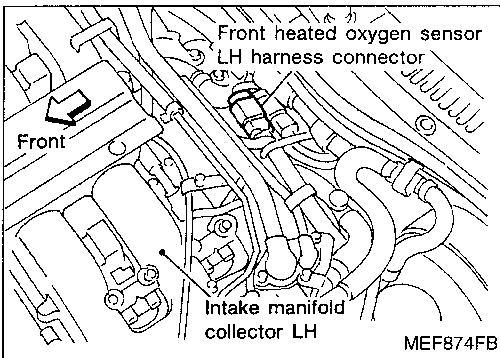


**B**

**CHECK FRONT HEATED OXYGEN SENSOR (LEFT BANK).**

1. Turn ignition switch "OFF".
2. Disconnect front heated oxygen sensor LH harness connector and ECM harness connector.
3. Check harness continuity between ECM terminal (51) and terminal (2).  
**Continuity should exist.**
4. Check harness continuity between ECM terminal (51) (or terminal (2)) and ground.  
**Continuity should not exist.**  
If OK, check harness for short.

NG → Repair harness or connectors.

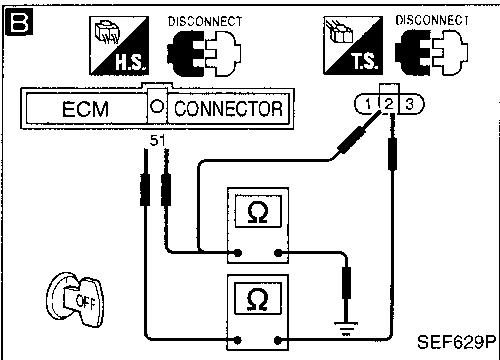

OK

**CHECK FUEL PRESSURE.**

1. Release fuel pressure to zero.  
Refer to EC-26.
2. Install fuel pressure gauge and check fuel pressure.

**At idling:**

**When fuel pressure regulator valve vacuum hose is connected.**  
Approximately 250.1 kPa  
(2.55 kg/cm<sup>2</sup>, 36.3 psi)

**When fuel pressure regulator valve vacuum hose is disconnected.**  
Approximately 299.1 kPa  
(3.05 kg/cm<sup>2</sup>, 43.4 psi)

NG → Check fuel pump and circuit. Refer to EC-260, 316.

OK  
A


# TROUBLE DIAGNOSIS FOR DTC P0175

## Fuel Injection System Function (Left bank) (Rich side) (DTC: 0209) (Cont'd)

Ⓐ



**CHECK MASS AIR FLOW SENSOR.**

 Check "MASS AIR FLOW" in "DATA MONITOR" mode with CONSULT.

**At idling:**

- 2.3 - 4.8 g·m/sec (Non-turbo-charger models with M/T)
- 2.9 - 6.0 g·m/sec (Non-turbo-charger models with A/T)
- 2.6 - 5.3 g·m/sec (Turbocharger models with M/T)
- 2.9 - 6.0 g·m/sec (Turbocharger models with A/T)


**At 2,500 rpm:**

- 7.9 - 15.5 g·m/sec (Non-turbo-charger models with M/T)
- 8.7 - 16.9 g·m/sec (Non-turbo-charger models with A/T)
- 9.3 - 18.1 g·m/sec (Turbo-charger models with M/T)
- 8.8 - 17.2 g·m/sec (Turbo-charger models with A/T)

NG

Check connectors for rusted terminals or loose connections in the mass air flow sensor circuit or engine grounds.  
Refer to EC-108.

OR

 Check "mass air flow" in MODE 1 with GST.

**At idling:**

- 2.3 - 4.8 g·m/sec (Non-turbo-charger models with M/T)
- 2.9 - 6.0 g·m/sec (Non-turbo-charger models with A/T)
- 2.6 - 5.3 g·m/sec (Turbocharger models with M/T)
- 2.9 - 6.0 g·m/sec (Turbocharger models with A/T)

**At 2,500 rpm:**

- 7.9 - 15.5 g·m/sec (Non-turbo-charger models with M/T)
- 8.7 - 16.9 g·m/sec (Non-turbo-charger models with A/T)
- 9.3 - 18.1 g·m/sec (Turbo-charger models with M/T)
- 8.8 - 17.2 g·m/sec (Turbo-charger models with A/T)



OK

Ⓑ

GI  
MA  
EM  
LC  
**EC**  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

# TROUBLE DIAGNOSIS FOR DTC P0175

## Fuel Injection System Function (Left bank) (Rich side) (DTC: 0209) (Cont'd)

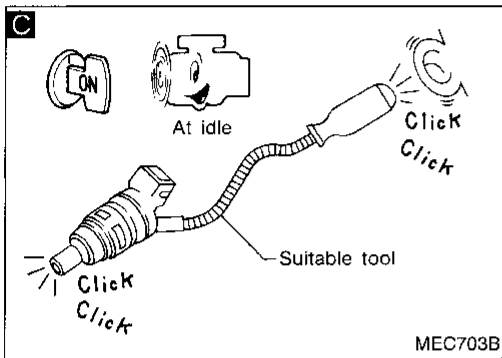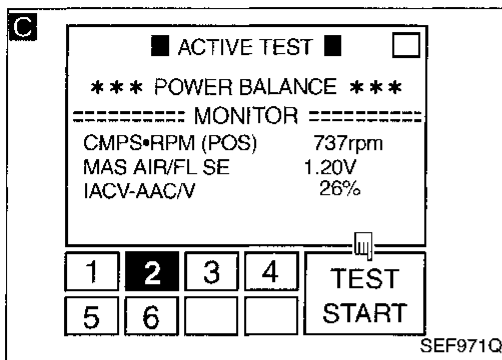

**C**

**CHECK FUNCTION OF INJECTORS (LEFT BANK).**

1. Install all parts removed.
2. Start engine.
3. Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT.
4. Make sure that each circuit produces a momentary engine speed drop.

OR

3. Listen to each injector operating sound. **Clicking noise should be heard.**

NG → Perform TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS, "Injectors", EC-311. Repair harness or connectors.

OK ↓

Remove injector assembly. Refer to EC-27. Keep fuel hose and all injectors connected to injector gallery.

Confirm that the engine is cooled down and there are no fire hazards near the vehicle.


1. Disconnect all injector harness connectors.
2. Disconnect all ignition coil harness connectors.
3. Crank engine for about 3 seconds. Make sure fuel does not drip from injector.

Drips → Replace the injectors from which fuel is dripping.

Does not drip. ↓

Check ECM pin terminals for damage and check the connection of ECM harness connector. Reconnect ECM harness connector and retest.

INSPECTION END

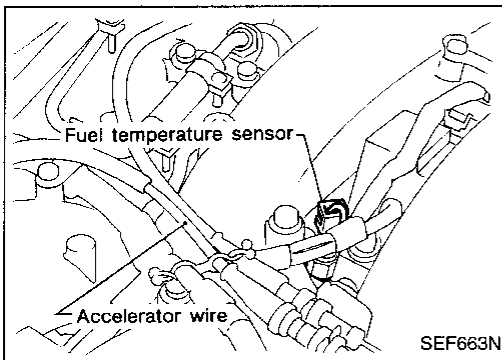




**Fuel Temperature Sensor (DTC: 0402)**

The fuel temperature sensor, built into the fuel tube, senses fuel temperature. When the fuel temperature is higher than specified, the ECM (ECCS control module) turns the fuel pressure regulator control solenoid valve ON and raises fuel pressure.

\* Freeze frame data is not stored in the ECM for fuel temperature sensor. The MIL will not light up for a fuel temperature sensor malfunction.

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Causes)
P0180 0402	<ul style="list-style-type: none"> <li>An excessively low or high voltage signal from the fuel temperature sensor is sent to ECM.</li> </ul>	<ul style="list-style-type: none"> <li>Harness or connectors (Fuel temperature sensor circuit is open or shorted.)</li> <li>Fuel temperature sensor</li> </ul>


**DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE**

- 
 1) Turn ignition switch "ON".  
 2) Select "DATA MONITOR" mode with CONSULT.  
 3) Wait at least 5 seconds.
- OR
- 
 1) Turn ignition switch "ON" and wait at least 5 seconds.  
 2) Select "MODE 3" with GST.
- OR
- 
 1) Turn ignition switch "ON" and wait at least 5 seconds.  
 2) Turn ignition switch "OFF" and wait at least 5 seconds, and then turn "ON".  
 3) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.


# TROUBLE DIAGNOSIS FOR DTC P0180

## Fuel Temperature Sensor (DTC: 0402) (Cont'd)

EC-FTS-01

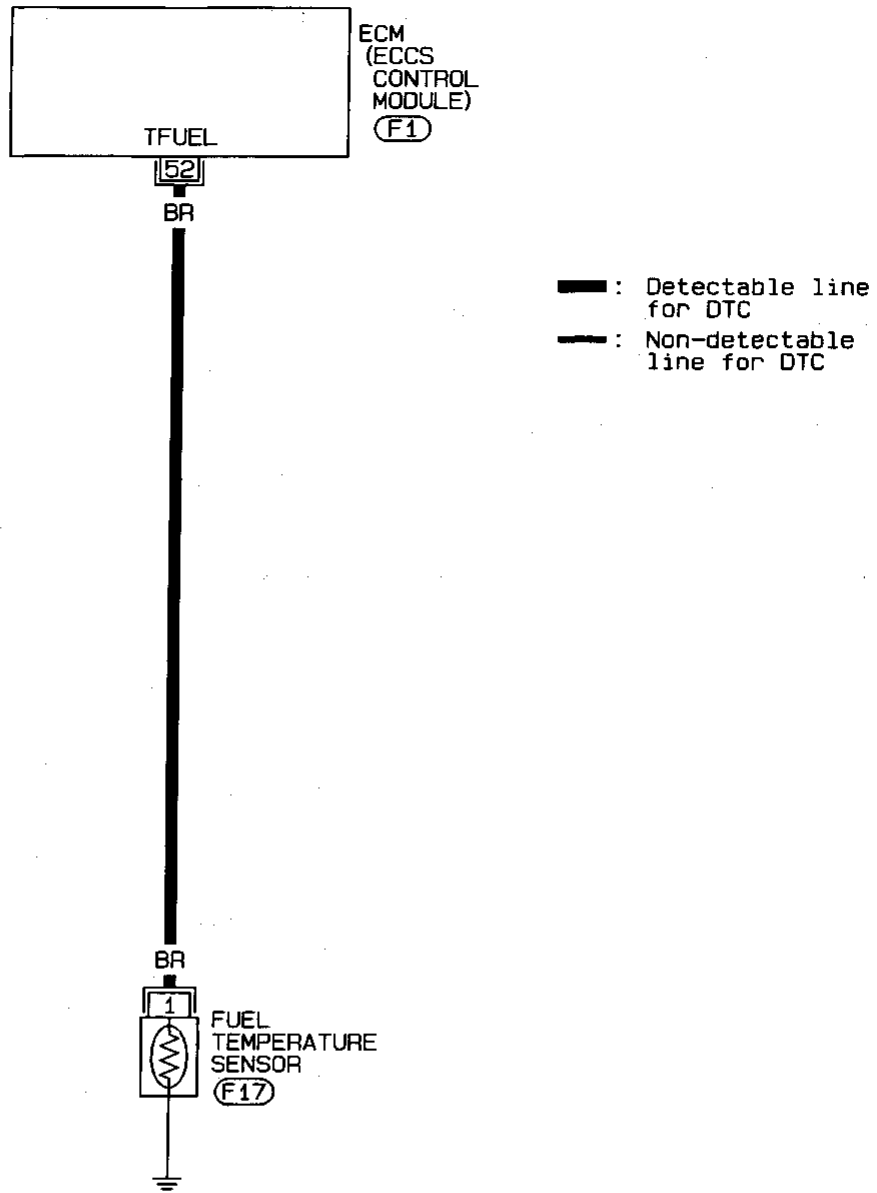

1 (F17) B




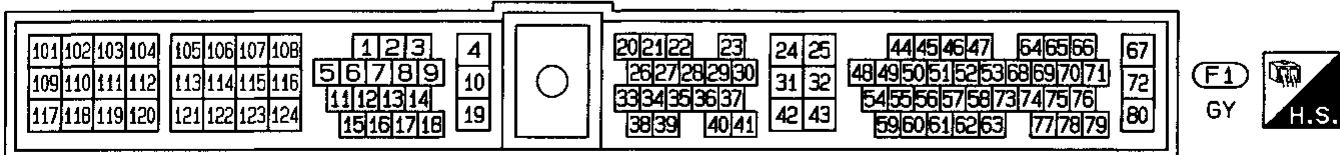




# TROUBLE DIAGNOSIS FOR DTC P0180

## Fuel Temperature Sensor (DTC: 0402) (Cont'd)

### DIAGNOSTIC PROCEDURE

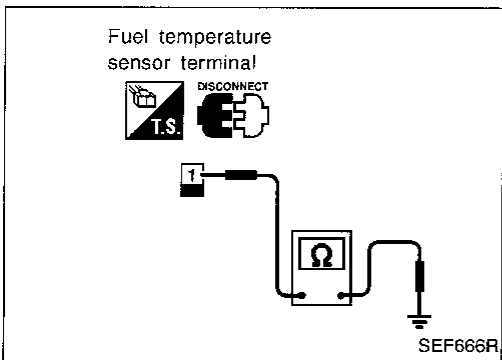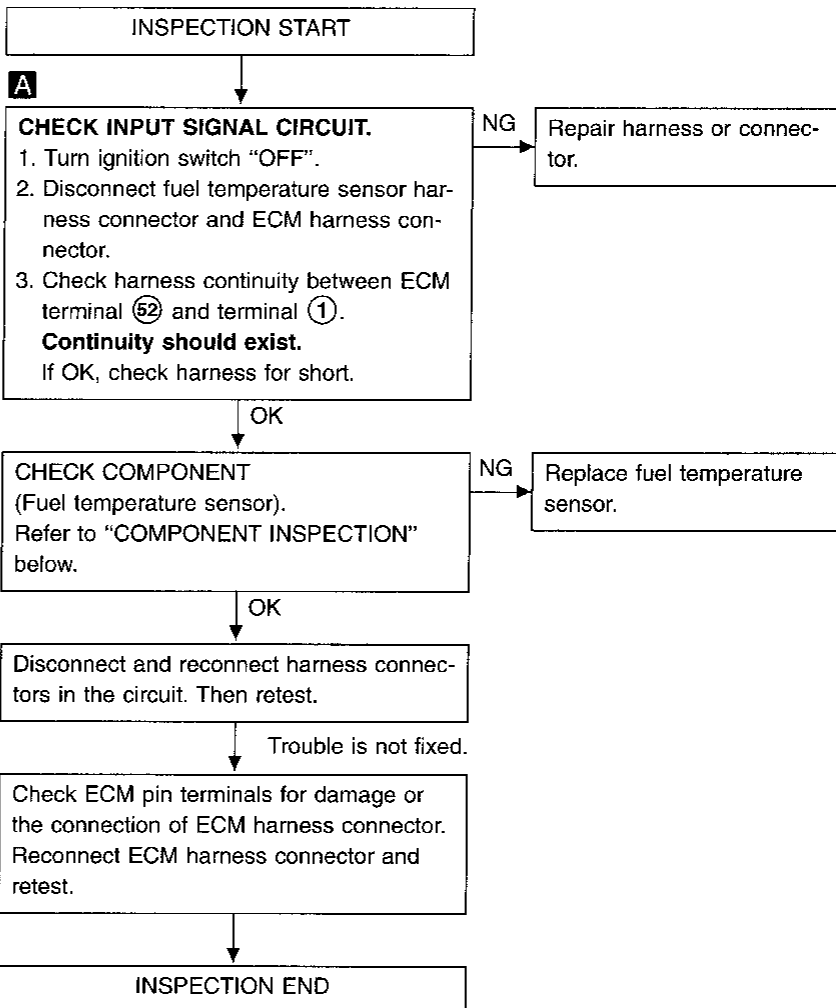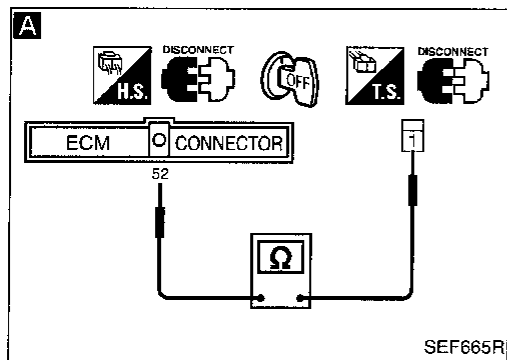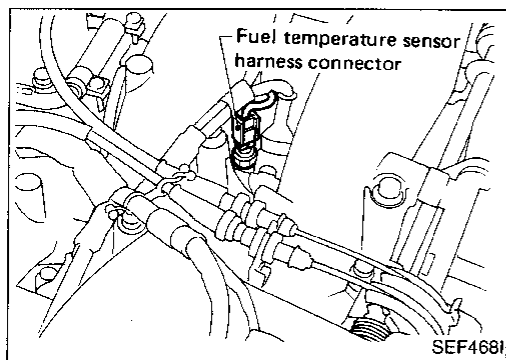

### COMPONENT INSPECTION

#### Fuel temperature sensor

1. Disconnect fuel temperature sensor harness connector.
2. Check resistance between terminal and ground as shown in the figure.

Temperature °C (°F)	Resistance kΩ
20 (68)	2.1 - 2.9
50 (122)	0.68 - 1.00
80 (176)	0.30 - 0.33

If NG, replace fuel temperature sensor.


GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

## Multiple Cylinder Misfire, No. 1 - 6 Cylinder Misfire (DTC: 0701 - 0603)

### ON BOARD DIAGNOSIS LOGIC

If misfire occurs, the engine speed will fluctuate. If the fluctuation is detected by the crankshaft position sensor (OBD), the misfire is diagnosed.

The misfire detection logic consists of the following two conditions.



#### 1. One Trip Detection Logic (Three Way Catalyst Damage)

When a misfire is detected which will overheat and damage the three way catalyst, the malfunction indicator lamp (MIL) will start blinking; even during the first trip. In this condition, ECM monitors the misfire every 200 engine revolutions.

If the misfire frequency decreases to a level that will not damage the three way catalyst, the MIL will change from blinking to lighting up.

(After the first trip detection, the MIL will light up from engine starting. If a misfire is detected that will cause three way catalyst damage, the MIL will start blinking.)

#### 2. Two Trip Detection Logic (Exhaust quality deterioration)

When a misfire that will not damage the three way catalyst (but will affect exhaust emission) occurs, the malfunction indicator lamp will light up based on the second consecutive trip detection logic. In this condition, ECM monitors the misfire for each 1,000 revolutions of the engine.

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0300 (0701)	• Multiple cylinders misfire.	<ul style="list-style-type: none"> <li>• Improper spark plug</li> <li>• Insufficient compression</li> <li>• Incorrect fuel pressure</li> <li>• EGR valve</li> <li>• The injector circuit is open or shorted.</li> <li>• Injectors</li> <li>• Intake air leaks</li> <li>• The secondary ignition control circuit is open or shorted.</li> <li>• Lack of fuel</li> <li>• Magnetized drive plate (Flywheel)</li> </ul>
P0301 (0608)	• No. 1 cylinder misfires.	
P0302 (0607)	• No. 2 cylinder misfires.	
P0303 (0606)	• No. 3 cylinder misfires.	
P0304 (0605)	• No. 4 cylinder misfires.	
P0305 (0604)	• No. 5 cylinder misfires.	
P0306 (0603)	• No. 6 cylinder misfires.	

### DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE (Overall)



- 1) Turn ignition switch "ON", and select "DATA MONITOR" mode with CONSULT.
- 2) Start engine and warm it up sufficiently.
- 3) Turn ignition switch "OFF" and wait at least 5 seconds.
- 4) Start engine again and drive at 1,500 - 3,000 rpm for at least 5 minutes.

OR



- 1) Start engine and warm it up sufficiently.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Start engine again and drive at 1,500 - 3,000 rpm for at least 5 minutes.
- 4) Select "MODE 3" with GST.

OR









- 1) Start engine and warm it up sufficiently.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Start engine again and drive at 1,500 - 3,000 rpm for at least 5 minutes.
- 4) Turn ignition switch "OFF", wait at least 5 seconds, and then turn "ON".
- 5) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

# TROUBLE DIAGNOSIS FOR DTC P0300 - P0306

## Multiple Cylinder Misfire, No. 1 - 6 Cylinder Misfire (DTC: 0701 - 0603) (Cont'd)

### DIAGNOSTIC PROCEDURE

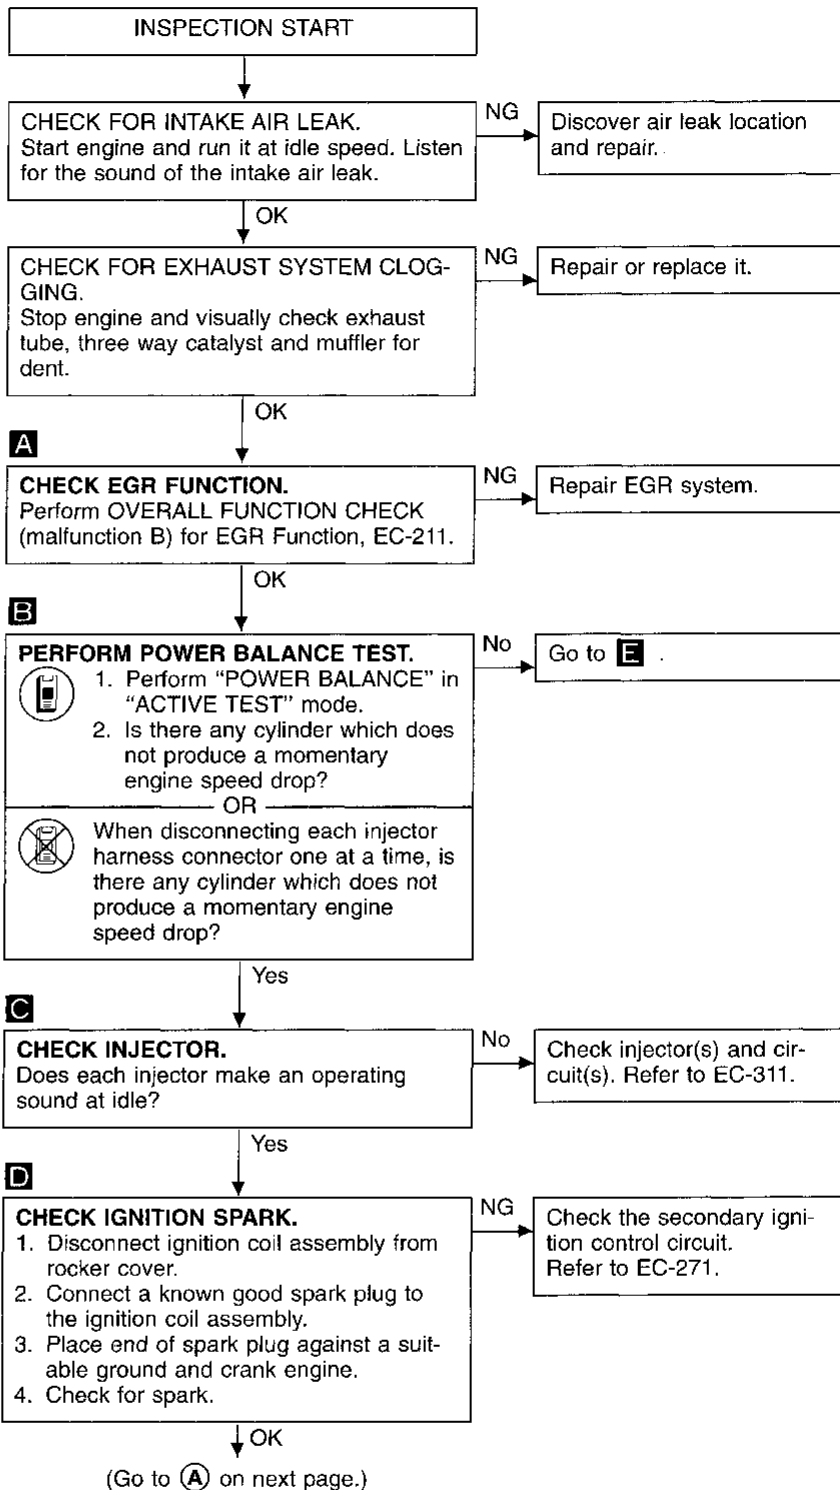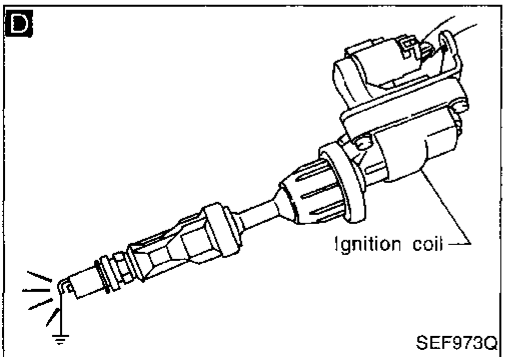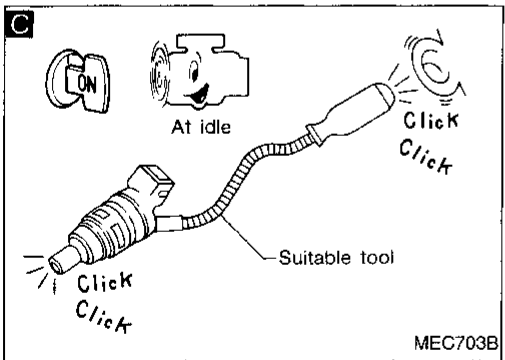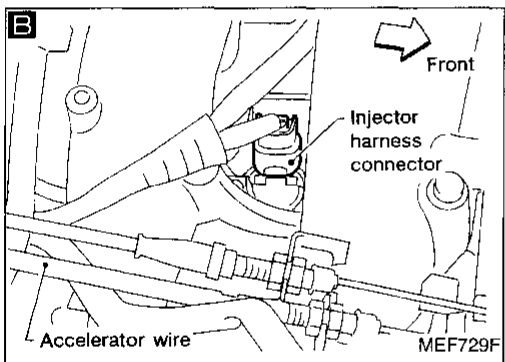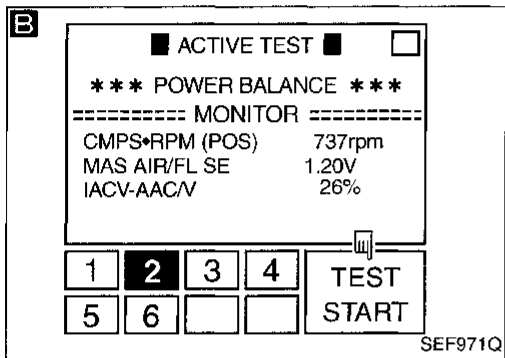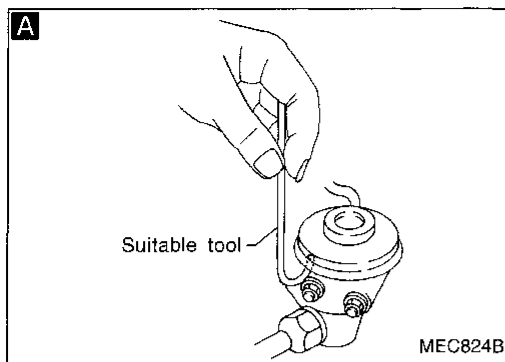

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT




HA

EL

IDX

# TROUBLE DIAGNOSIS FOR DTC P0300 - P0306

## Multiple Cylinder Misfire, No. 1 - 6 Cylinder Misfire (DTC: 0701 - 0603) (Cont'd)

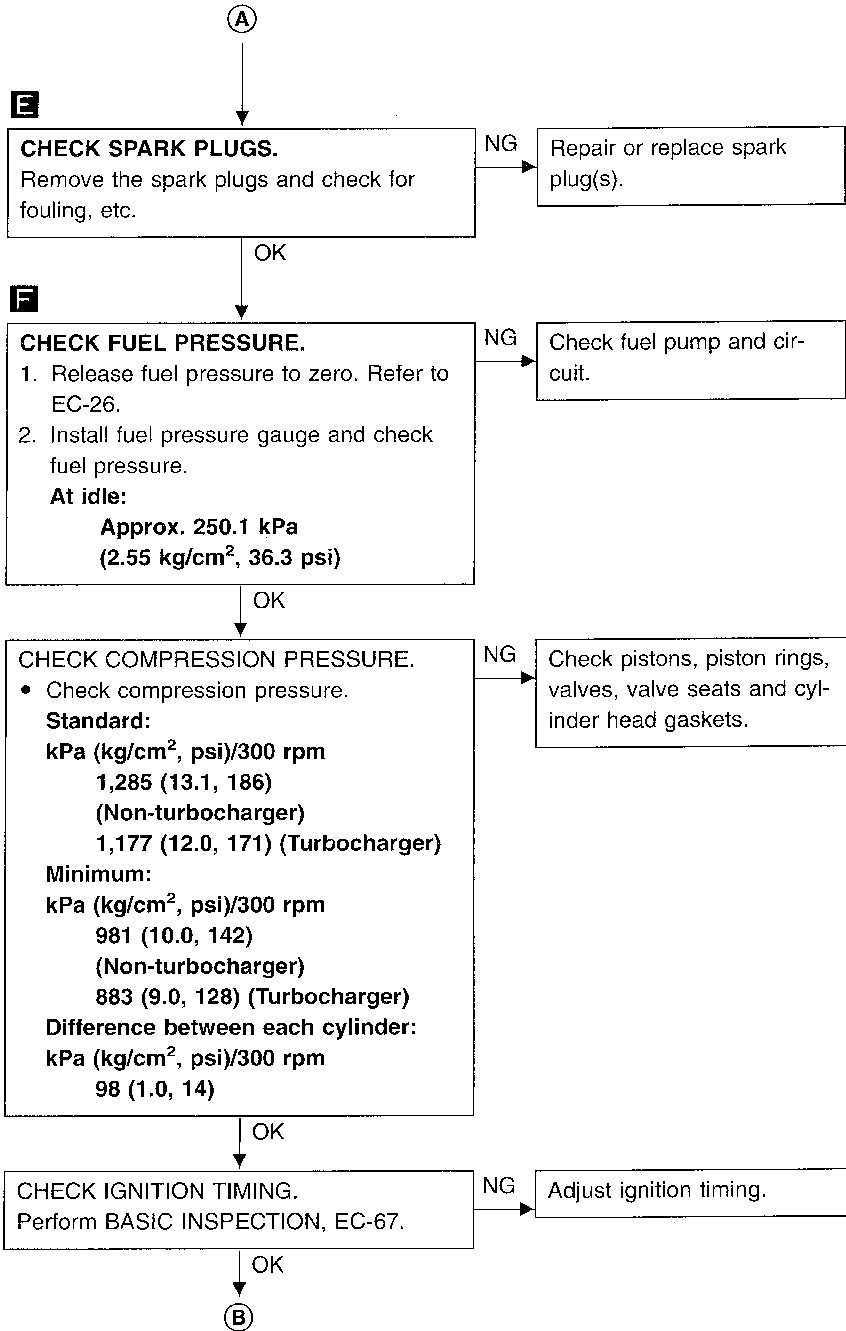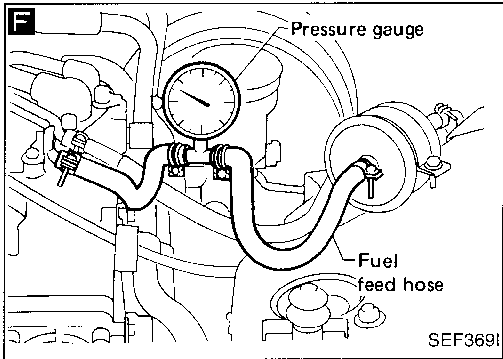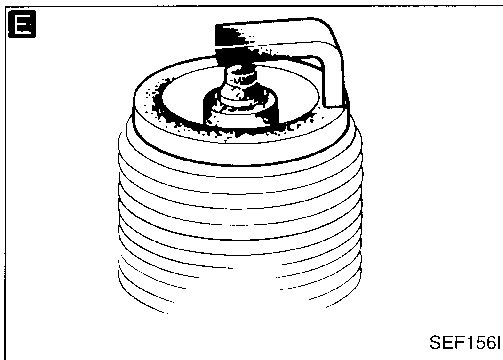


# TROUBLE DIAGNOSIS FOR DTC P0300 - P0306

## Multiple Cylinder Misfire, No. 1 - 6 Cylinder Misfire (DTC: 0701 - 0603) (Cont'd)

ⓑ

**CHECK MASS AIR FLOW SENSOR.**

 Check "MASS AIR FLOW" in "DATA MONITOR" mode with CONSULT.


**At idling:**

- 2.3 - 4.8 g·m/sec (Non-turbo-charger models with M/T)
- 2.9 - 6.0 g·m/sec (Non-turbo-charger models with A/T)
- 2.6 - 5.3 g·m/sec (Turbocharger models with M/T)
- 2.9 - 6.0 g·m/sec (Turbocharger models with A/T)

**At 2,500 rpm:**

- 7.9 - 15.5 g·m/sec (Non-turbo-charger models with M/T)
- 8.7 - 16.9 g·m/sec (Non-turbo-charger models with A/T)
- 9.3 - 18.1 g·m/sec (Turbo-charger models with M/T)
- 8.8 - 17.2 g·m/sec (Turbo-charger models with A/T)

OR

 Check "mass air flow" in MODE 1 with GST.

**At idling:**

- 2.3 - 4.8 g·m/sec (Non-turbo-charger models with M/T)
- 2.9 - 6.0 g·m/sec (Non-turbo-charger models with A/T)
- 2.6 - 5.3 g·m/sec (Turbocharger models with M/T)
- 2.9 - 6.0 g·m/sec (Turbocharger models with A/T)

**At 2,500 rpm:**

- 7.9 - 15.5 g·m/sec (Non-turbo-charger models with M/T)
- 8.7 - 16.9 g·m/sec (Non-turbo-charger models with A/T)
- 9.3 - 18.1 g·m/sec (Turbo-charger models with M/T)
- 8.8 - 17.2 g·m/sec (Turbo-charger models with A/T)

NG → Check connectors for rusted terminals or loose connections in the mass air flow sensor circuit or engine grounds. Refer to EC-108. If NG, repair or replace it.

OK ↓

(Go to Ⓒ on next page.)

GI

MA

EM

LC

**EC**

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT


HA


EL

IDX

## TROUBLE DIAGNOSIS FOR DTC P0300 - P0306

### Multiple Cylinder Misfire, No. 1 - 6 Cylinder Misfire (DTC: 0701 - 0603) (Cont'd)

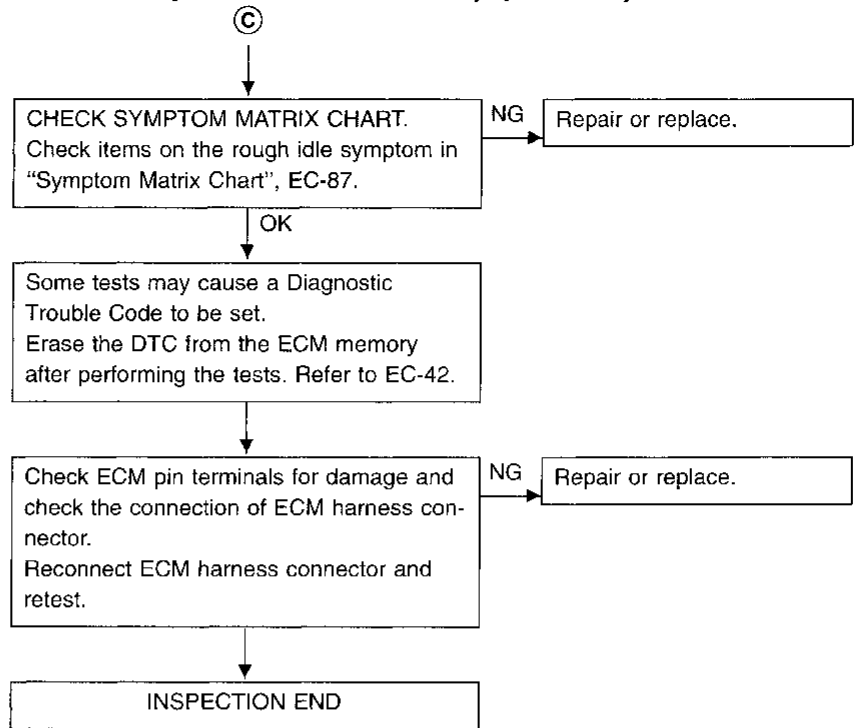

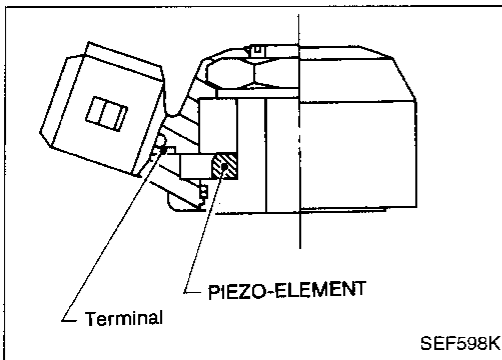

## Knock Sensor (KS) (DTC: 0304)

The knock sensor is attached to the cylinder block. It senses engine knocking using a piezoelectric element. A knocking vibration from the cylinder block is sensed as vibrational pressure. This pressure is converted into a voltage signal and sent to the ECM.

**\* Freeze frame data is not stored in the ECM for the knock sensor.  
The MIL will not light for knock sensor malfunction.**

Diagnostic Trouble Code No.	Malfunction is detected when ....	Check Items (Possible Cause)
P0325 0304	<ul style="list-style-type: none"> <li>• An excessively low or high voltage from the knock sensor is sent to ECM.</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connectors (The knock sensor circuit is open or shorted.)</li> <li>• Knock sensor</li> </ul>




### DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT.  
 2) Start engine and run it for at least 5 seconds at idle speed.
- OR
- 1) Start engine and run it for at least 5 seconds at idle speed.  
 2) Select "MODE 3" with GST.
- OR
- 1) Start engine and run it for at least 5 seconds at idle speed.  
 2) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".  
 3) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

# TROUBLE DIAGNOSIS FOR DTC P0325

## Knock Sensor (KS) (DTC: 0304) (Cont'd)






EC-KS-01

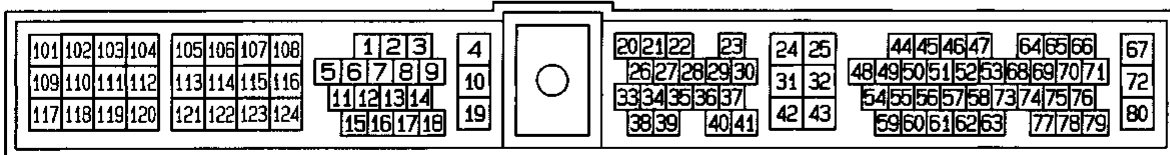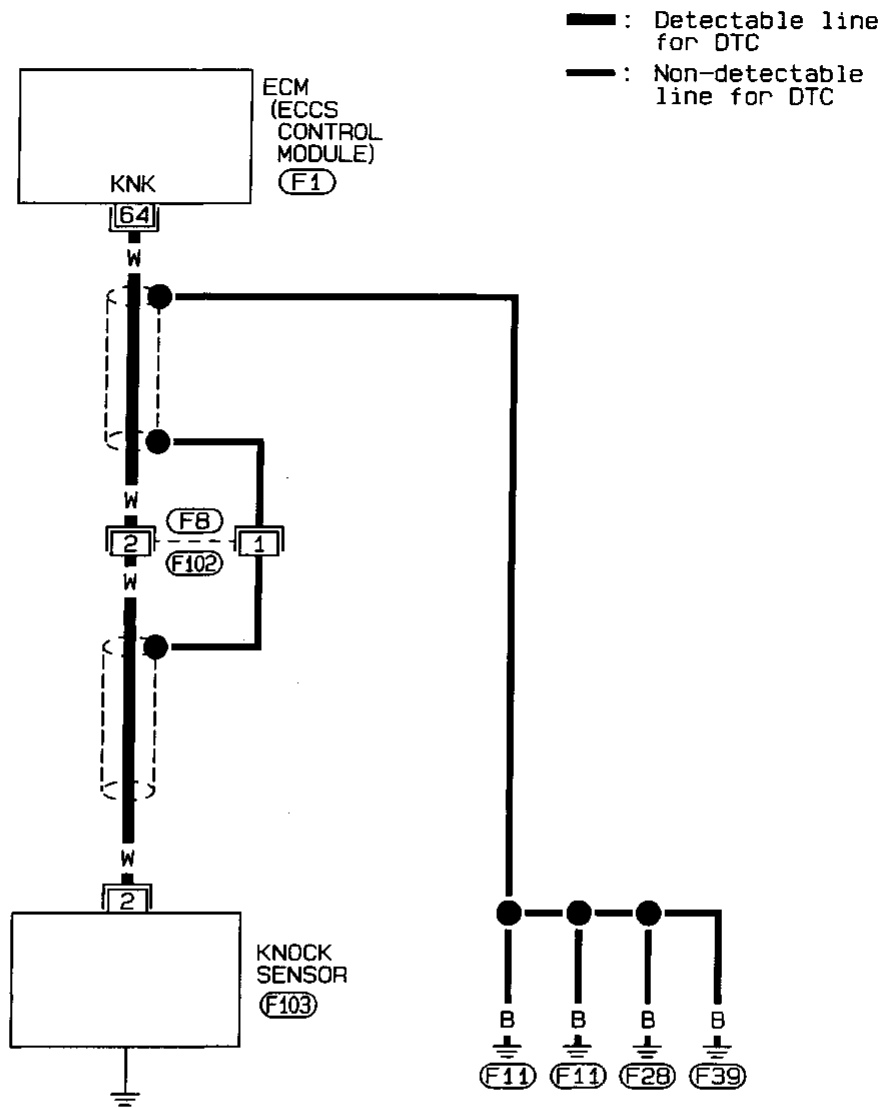



# TROUBLE DIAGNOSIS FOR DTC P0325

## Knock Sensor (KS) (DTC: 0304) (Cont'd) DIAGNOSTIC PROCEDURE

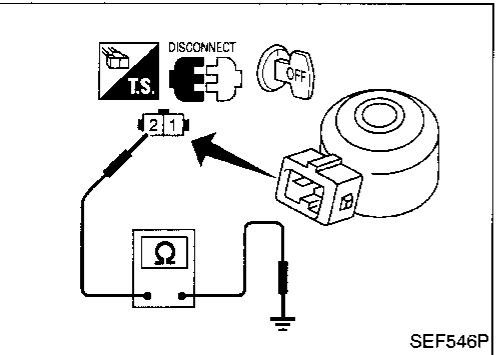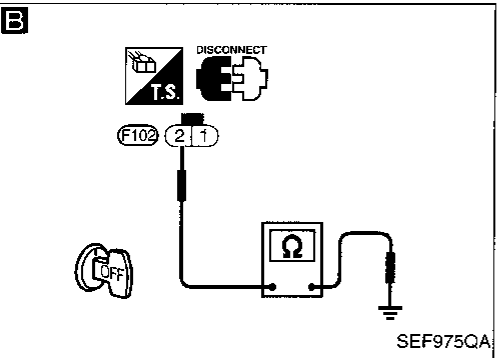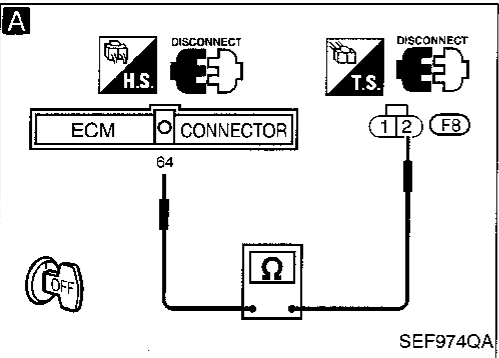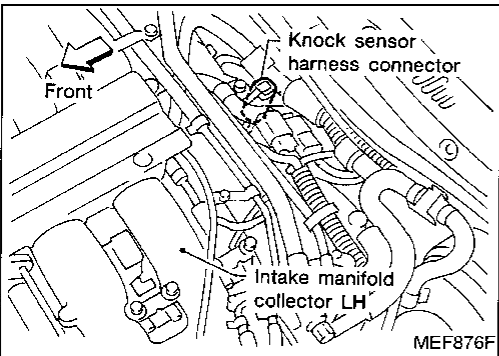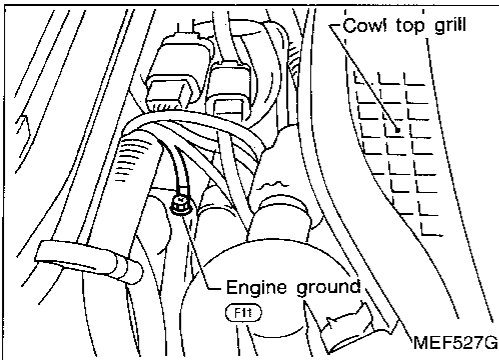

INSPECTION START

Loosen and retighten engine ground screws.

**A**  
**CHECK INPUT SIGNAL CIRCUIT-1.**  
1. Turn ignition switch "OFF".  
2. Disconnect ECM harness connector and knock sensor sub-harness connector.  
3. Check harness continuity between terminal ② and ECM terminal ⑥4 .  
**Continuity should exist.**  
If OK, check harness for short.

NG → Repair harness or connectors.

**B**  
**CHECK INPUT SIGNAL CIRCUIT-2.**  
Check harness continuity between terminal ② and engine ground.  
**Continuity should exist.**  
If OK, check harness for short.  
**It is necessary to use an ohmmeter which can measure more than 10 MΩ.**

NG → Check the following.  
• Harness for open or short between knock sensor sub-harness connector and knock sensor  
If NG, repair harness or connectors.  
• Knock sensor (Component inspection)  
If NG, replace knock sensor.

OK → Disconnect and reconnect harness connectors in the circuit. Then retest.

Trouble is not fixed.  
Check ECM pin terminals for damage and check the connection of ECM harness connector. Reconnect ECM harness connector and retest.

INSPECTION END

### COMPONENT INSPECTION

#### Knock sensor

1. Disconnect knock sensor harness connector.
2. Check resistance between terminal ② and ground.



Approximately 500 - 620 kΩ [at 25°C (77°F)]

- It is necessary to use an ohmmeter which can measure more than 10 MΩ.

#### CAUTION:

Do not use any knock sensors that have been dropped or physically damaged. Use a new one.

GI  
MA  
EM  
LC  
EC  
FE  
CL  
NT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
YA  
EL  
IDX

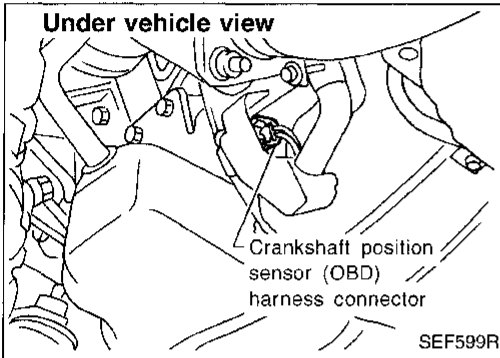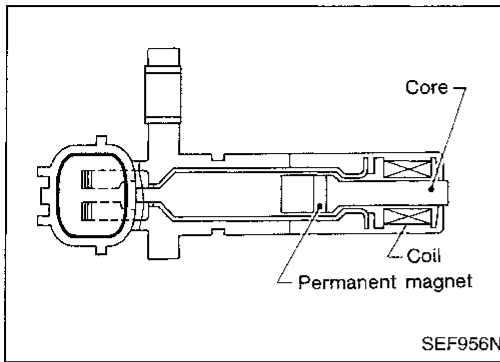

## Crankshaft Position Sensor (CKPS) (OBD) (DTC: 0802)

The crankshaft position sensor (OBD) is located on the transmission housing facing the gear teeth (cogs) of the drive plate (fly-wheel). It detects the fluctuation of the engine revolution.

The sensor consists of a permanent magnet, core and coil.

When the engine is running, the high and low parts of the teeth cause the gap with the sensor to change.

The changing gap causes the magnetic field near the sensor to change.

Due to the changing magnetic field, the voltage from the sensor changes.

The ECM receives the voltage signal and detects the fluctuation of the engine revolution.

This sensor is not used to control the engine system. It is used only for the on board diagnosis of misfire.

Diagnostic Trouble Code No.	Malfunction is detected when ....	Check Items (Possible Cause)
P0335 0802	<ul style="list-style-type: none"> <li>The proper pulse signal from the crankshaft position sensor (OBD) is not sent to ECM while the engine is running at the specified engine speed.</li> </ul>	<ul style="list-style-type: none"> <li>Harness or connectors [The crankshaft position sensor (OBD) circuit is open.]</li> <li>Crankshaft position sensor (OBD)</li> <li>Dead (Weak) battery</li> </ul>

### DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

**Before performing the following procedure, confirm that battery voltage is more than 10.5V.**



1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT.

2) Start engine and run it for at least 15 seconds at idle speed.

OR



1) Start engine and run it for at least 15 seconds at idle speed.

2) Select "MODE 3" with GST.

OR



1) Start engine and run it for at least 15 seconds at idle speed.




2) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".

3) Perform "Diagnostic Test Mode II" (Self-diagnostic results) with ECM.

# TROUBLE DIAGNOSIS FOR DTC P0335

## Crankshaft Position Sensor (CKPS) (OBD) (DTC: 0802) (Cont'd)

EC-CKPS-01

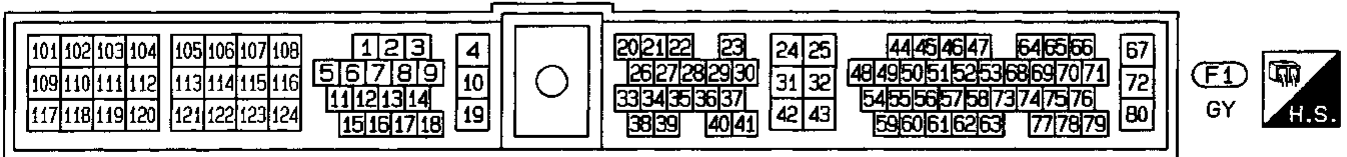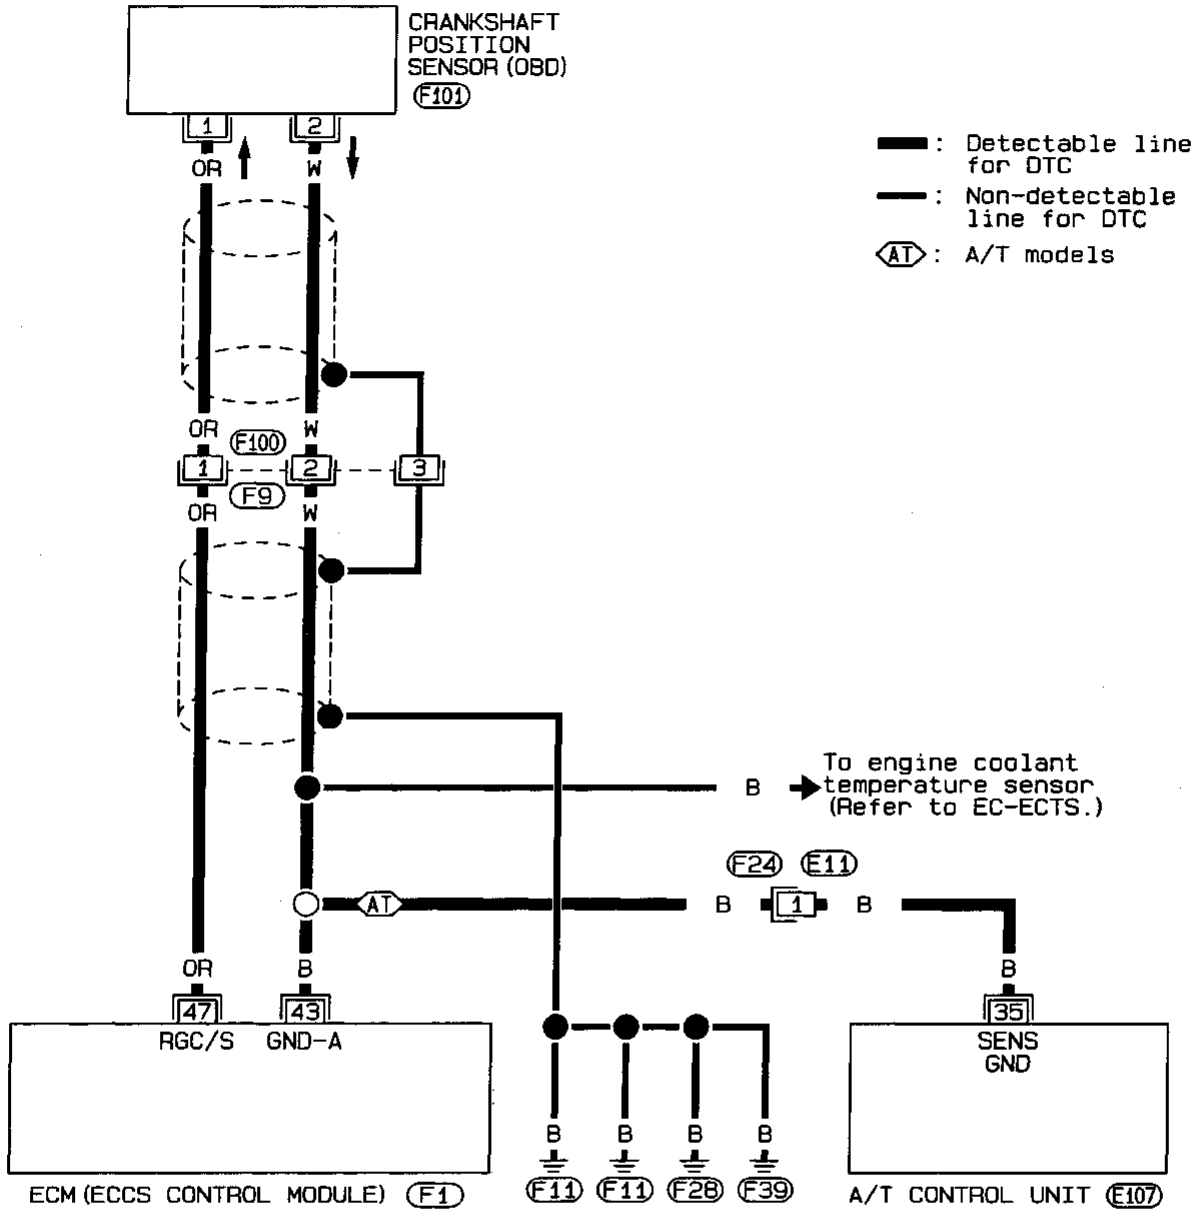


# TROUBLE DIAGNOSIS FOR DTC P0335

## Crankshaft Position Sensor (CKPS) (OBD) (DTC: 0802) (Cont'd)

### DIAGNOSTIC PROCEDURE

INSPECTION START

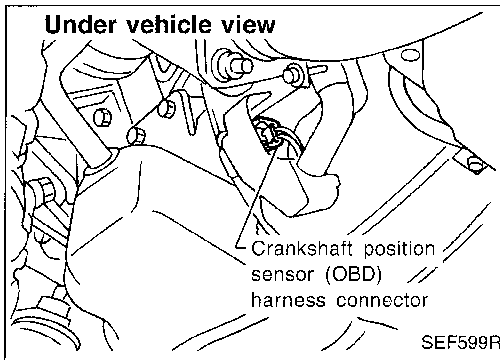

**A**

#### CHECK INPUT SIGNAL CIRCUIT.

1. Turn ignition switch "OFF".
2. Disconnect crankshaft position sensor (OBD) and ECM harness connectors.
3. Check continuity between ECM terminal ④7 and terminal ①.

**Continuity should exist.**


If OK, check harness for short.

NG

Check the following.

- Harness connectors (F9), (F100)
- Harness for open or short between ECM and crankshaft position sensor (OBD)

If NG, repair harness or connectors.

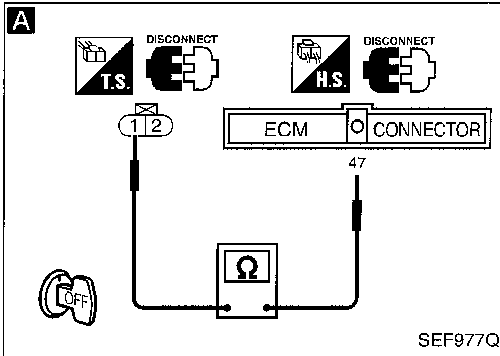

**B**

#### CHECK GROUND CIRCUIT.

1. Loosen and retighten engine ground screws.
2. Check harness continuity between terminal ② and engine ground.

**Continuity should exist.**


If OK, check harness for short.

NG

Check the following.

- Harness connectors (F9), (F100)
- Harness connectors (E11), (F24)
- Harness for open or short between ECM and crankshaft position sensor (OBD)
- Harness for open or short between A/T control unit and crankshaft position sensor (OBD)

If NG, repair harness or connectors.

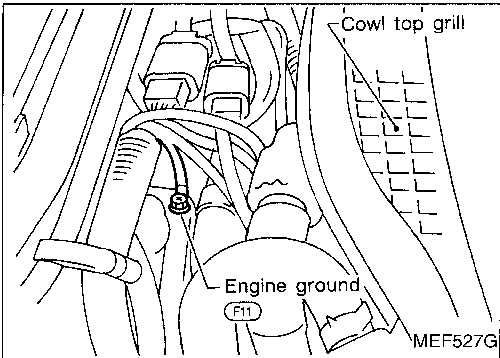


#### CHECK COMPONENT

{Crankshaft position sensor (OBD)}. Refer to "COMPONENT INSPECTION" on next page.

NG

Replace crankshaft position sensor (OBD).

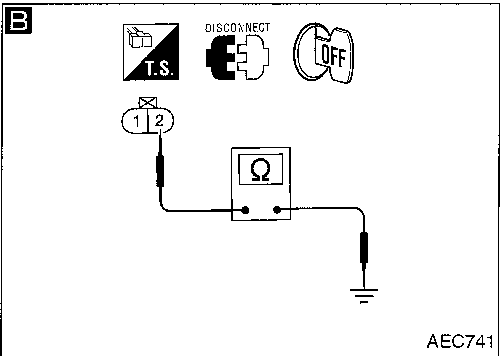

**B**

Disconnect and reconnect harness connectors in the circuit. Then retest.

Trouble is not fixed.

Check ECM pin terminals for damage and check the connection of ECM harness connector. Reconnect ECM harness connector and retest.

INSPECTION END



## TROUBLE DIAGNOSIS FOR DTC P0335

### Crankshaft Position Sensor (CKPS) (OBD) (DTC: 0802) (Cont'd)

#### COMPONENT INSPECTION

##### Crankshaft position sensor (OBD)

1. Disconnect crankshaft position sensor (OBD) harness connector.
2. Loosen the fixing bolt of the sensor.
3. Remove the sensor.
4. Visually check the sensor for chipping.

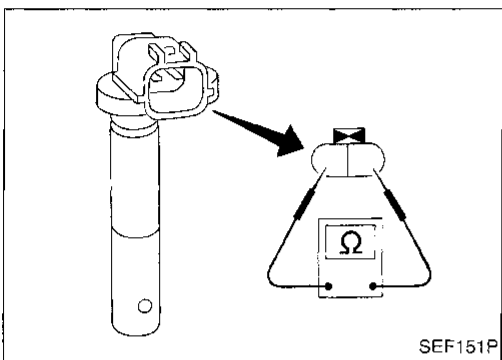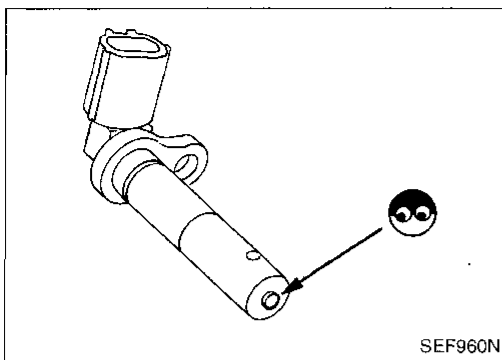

5. Check resistance as shown in the figure.  
**Resistance: Approximately 166 - 204Ω**  
**[at 20°C (68°F)]**

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS



BT

HA

EL

IDX

## TROUBLE DIAGNOSIS FOR DTC P0340

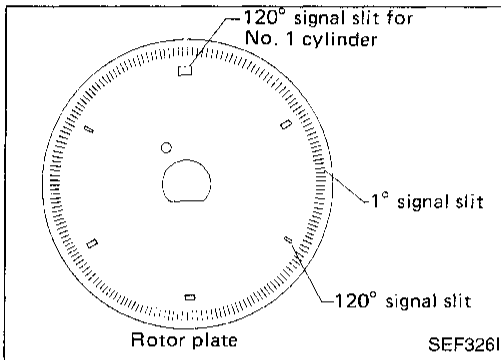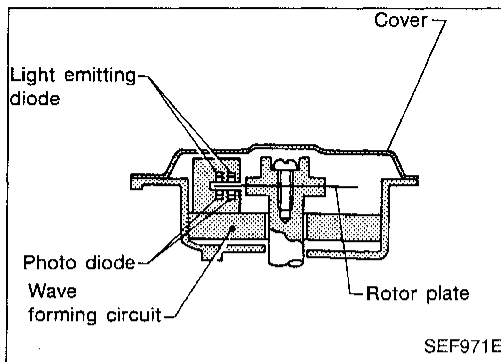

### Camshaft Position Sensor (CMPS)(DTC: 0101)

The camshaft position sensor is a basic component of the ECCS. It monitors engine speed and piston position. These input signals to the ECM are used to control fuel injection, ignition timing and other functions.

The camshaft position sensor has a rotor plate and a wave-forming circuit. The rotor plate has 360 slits for a 1° (POS) signal and 6 slits for a 120° (REF) signal. The wave-forming circuit consists of Light Emitting Diodes (LED) and photo diodes.

The rotor plate is positioned between the LED and the photo diode. The LED transmits light to the photo diode. As the rotor plate turns, the slits cut the light to generate rough-shaped pulses. These pulses are converted into on-off signals by the wave-forming circuit and sent to the ECM.

Diagnostic Trouble Code No.	Malfunction is detected when ....	Check Items (Possible Cause)
P0340 0101	<ul style="list-style-type: none"> <li>• Either 1° or 120° signal is not sent to ECM for the first few seconds during engine cranking.</li> <li>• Either 1° or 120° signal is not sent to ECM often enough while the engine speed is higher than the specified engine speed.</li> <li>• The relation between 1° and 120° signal is not in the normal range during the specified engine speed.</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connectors (The camshaft position sensor circuit is open or shorted.)</li> <li>• Camshaft position sensor</li> <li>• Starter motor (Refer to EL section.)</li> <li>• Starting system circuit (Refer to EL section.)</li> <li>• Dead (Weak) battery</li> </ul>

### DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE


**Before performing the following procedure, confirm that battery voltage is more than 10.5V.**

- |    |   |
|----|---|
|    | <ol style="list-style-type: none"> <li>1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT.</li> <li>2) Crank engine for at least 2 seconds.</li> </ol>  |
| OR |   |
|    | <ol style="list-style-type: none"> <li>1) Crank engine for at least 2 seconds.</li> <li>2) Select "MODE 3" with GST.</li> </ol>   |
| OR |   |
|    | <ol style="list-style-type: none"> <li>1) Crank engine for at least 2 seconds.</li> <li>2) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".</li> <li>3) Perform "Diagnostic Test Mode II" (Self-diagnostic results) with ECM.</li> </ol> |



# TROUBLE DIAGNOSIS FOR DTC P0340

## Camshaft Position Sensor (CMPS)(DTC: 0101) (Cont'd)

EC-CMPS-01

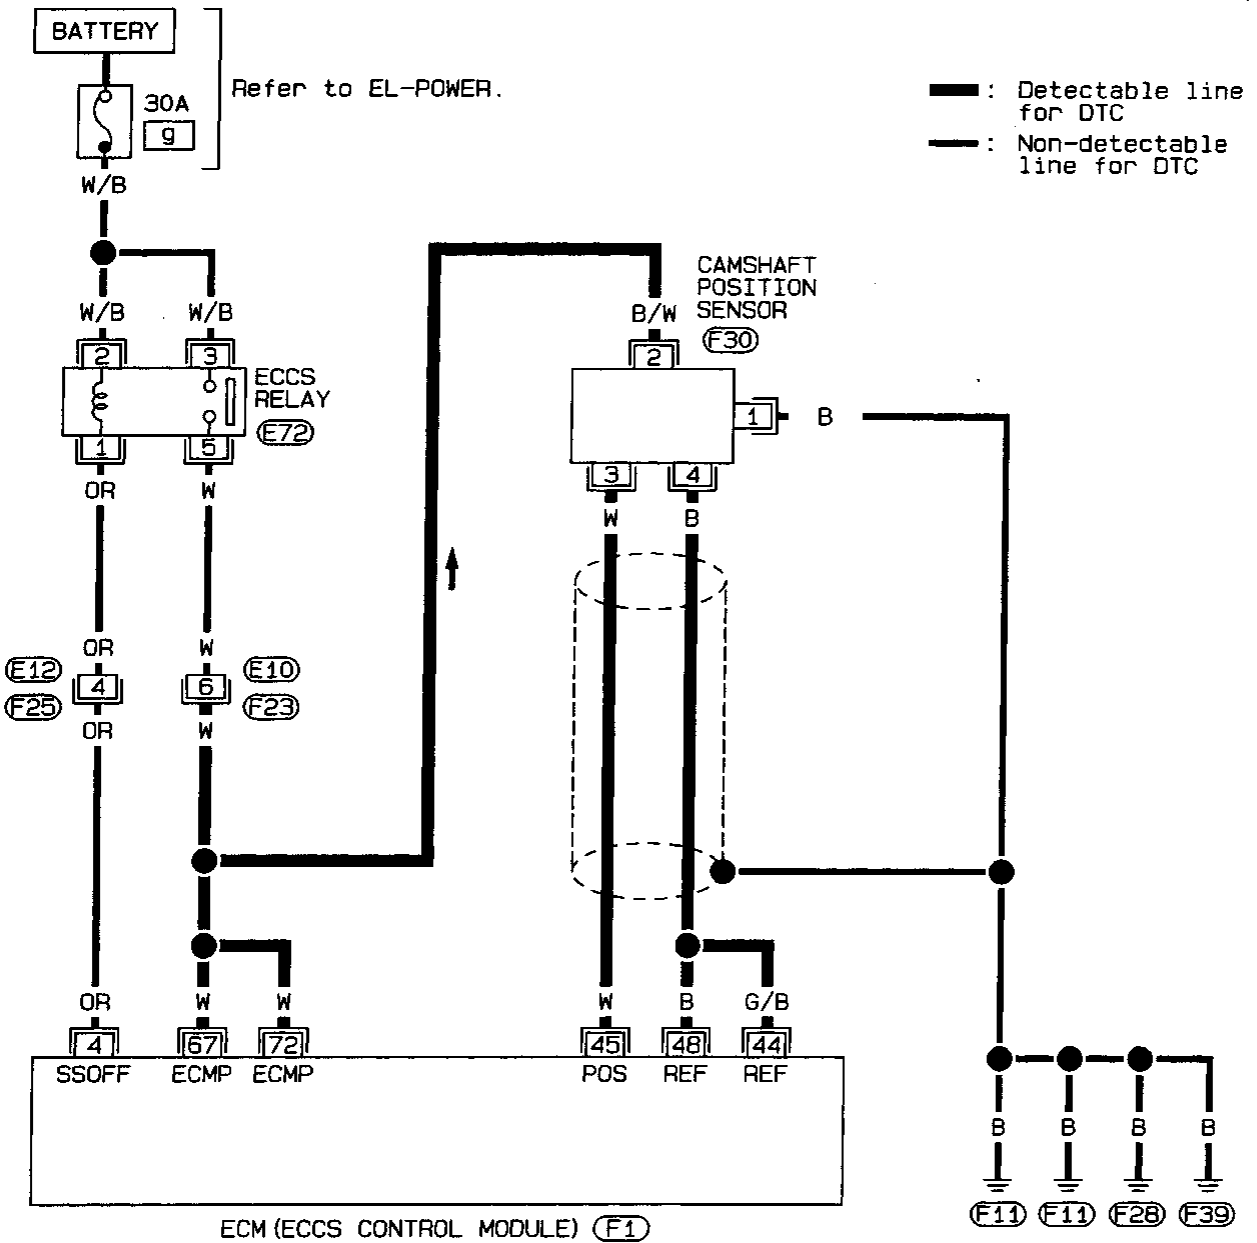

GI  
 MA  
 EM  
 LC  
**EC**  
 FE  
 GL  
 NT  
 AT  
 PD  
 FA  
 RA  
 BR  
 ST  
 RS  
 BT  
 HA  
 EL  
 IDX

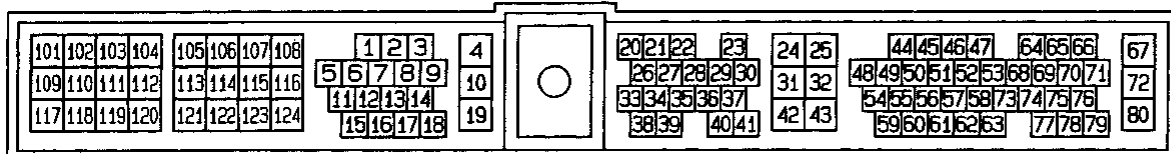

# TROUBLE DIAGNOSIS FOR DTC P0340

## Camshaft Position Sensor (CMPS)(DTC: 0101) (Cont'd)

### DIAGNOSTIC PROCEDURE (DETECTABLE CIRCUIT)

INSPECTION START

**A**

#### CHECK POWER SUPPLY.

1. Turn ignition switch "OFF".
2. Disconnect camshaft position sensor harness connector.
3. Turn ignition switch "ON".
4. Check voltage between terminal ② and ground with CONSULT or tester.

**Voltage: Battery voltage**

NG

Check the following.

- Harness for open or short between camshaft position sensor and harness connector (F23)
  - Harness for open or short between camshaft position sensor and ECM
- If NG, repair harness or connectors.

OK

Loosen and retighten engine ground screws.

**B**

#### CHECK INPUT SIGNAL CIRCUIT.

1. Turn ignition switch "OFF".
  2. Disconnect ECM harness connector.
  3. Check harness continuity between terminal ③ and ECM terminal ④⑤, terminal ④ and ECM terminals ④④, ④⑧.
- Continuity should exist.**  
If OK, check harness for short.

NG

Repair harness or connectors.

OK

#### CHECK COMPONENT

(Camshaft position sensor).  
Refer to "COMPONENTS INSPECTION", EC-210.

NG

Replace camshaft position sensor.





OK

Disconnect and reconnect harness connectors in the circuit. Then retest.

Trouble is not fixed.

Check ECM pin terminals for damage and check the connection of ECM harness connector. Reconnect ECM harness connector and retest.

INSPECTION END

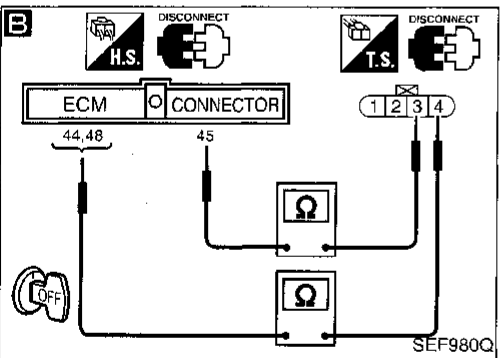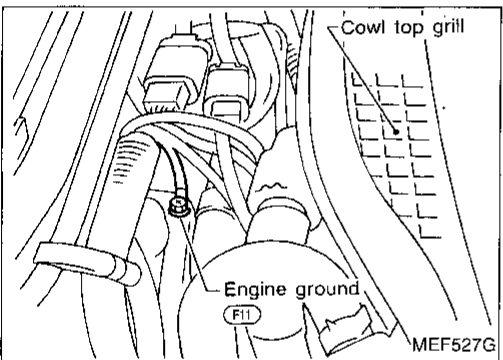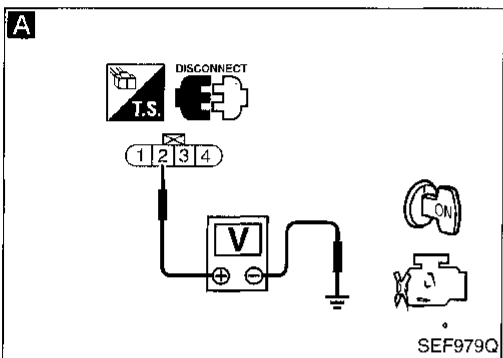
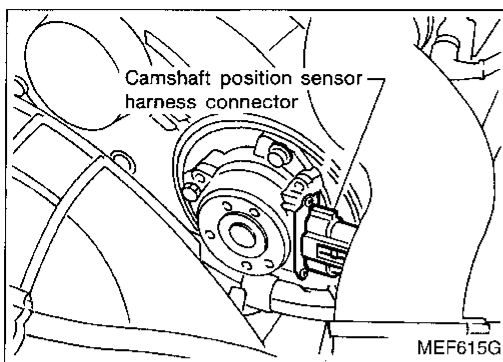




# TROUBLE DIAGNOSIS FOR DTC P0340

## Camshaft Position Sensor (CMPS)(DTC: 0101) (Cont'd)

### DIAGNOSTIC PROCEDURE (NON-DETECTABLE CIRCUIT)

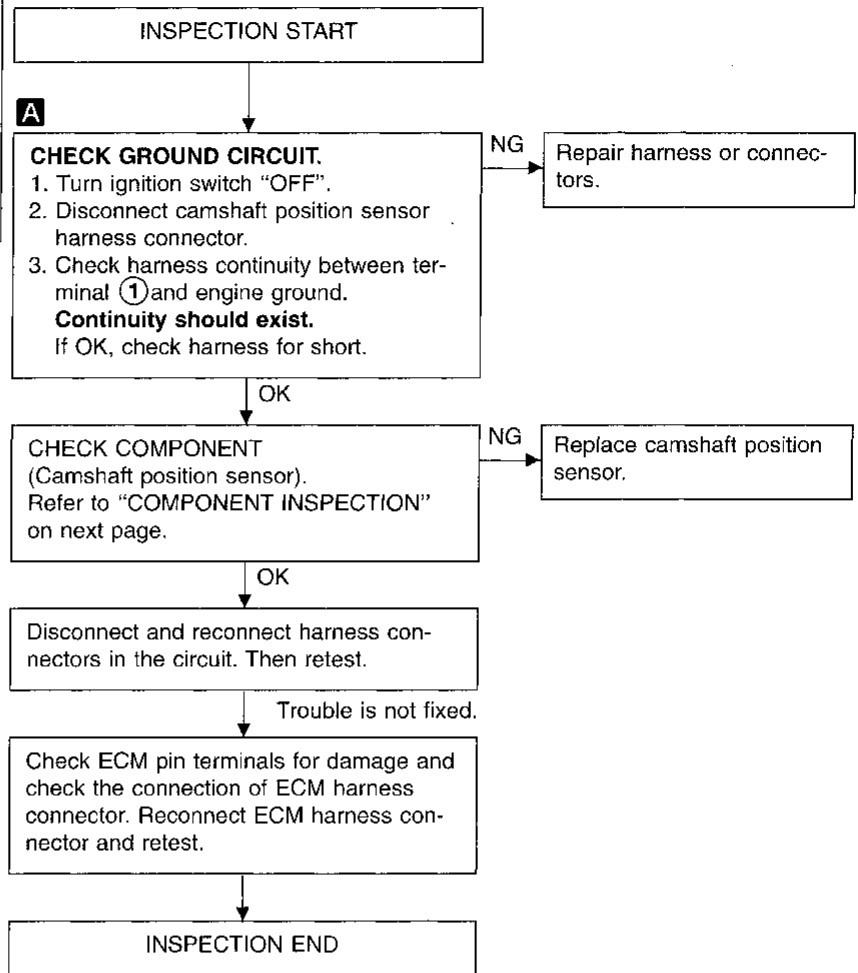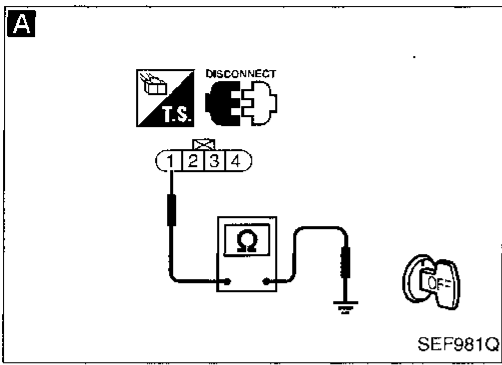

CI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX


## TROUBLE DIAGNOSIS FOR DTC P0340

### Camshaft Position Sensor (CMPS)(DTC: 0101) (Cont'd)

#### COMPONENT INSPECTION

##### Camshaft position sensor


1. Start engine.
2. Check voltage between camshaft position sensor terminals ③, ④ and ground with AC range.

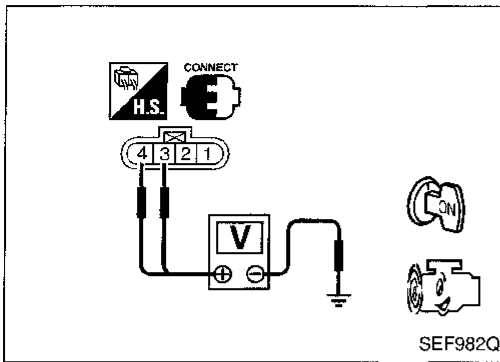

Condition	Terminal	Voltage
Engine running at idle	③ and ground	Approximately 2.5V* (AC)
	④ and ground	Approximately 2.1V* (AC)

\*: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

If NG, replace camshaft position sensor.

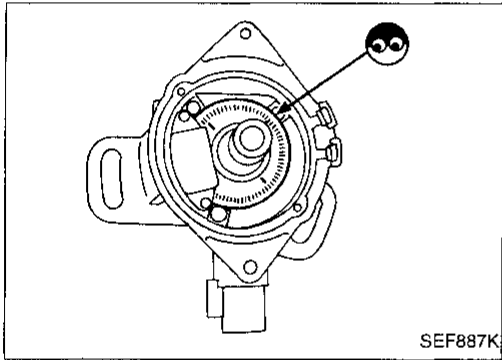


3. Remove distributor cap. Visually check signal plate for damage or dust.

**After this inspection, diagnostic trouble code No. P0340 might be displayed with camshaft position sensor functioning properly. Erase the stored memory.**



EGR Function (DTC: 0302)

SYSTEM DESCRIPTION

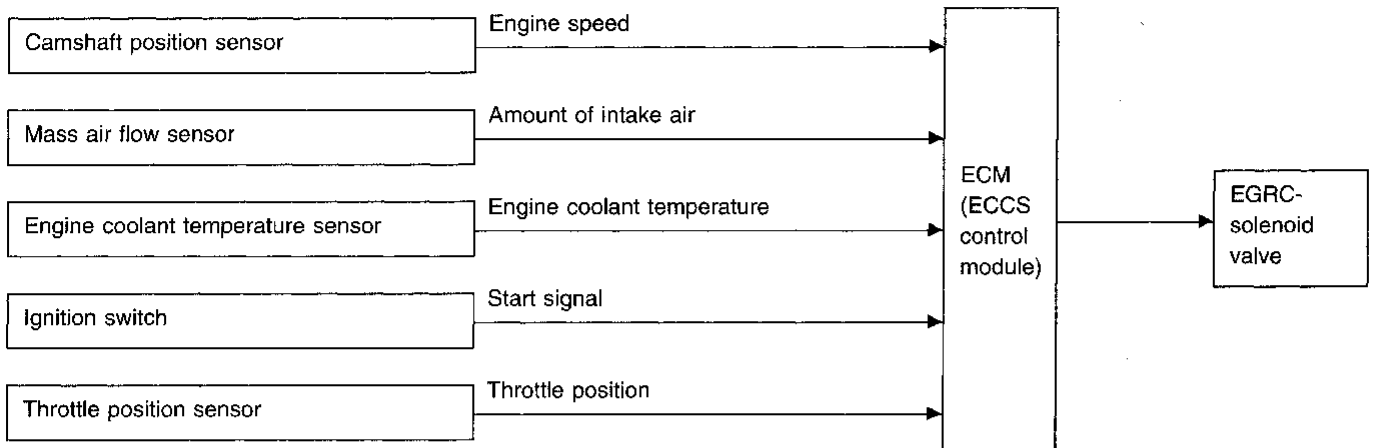

This system cuts and controls vacuum applied to the EGR valve to suit engine operating conditions. This cut-and-control operation is accomplished through the ECM and the EGRC-solenoid valve. When the ECM detects any of the following conditions, current flows through the solenoid valve. This causes the port vacuum to be discharged into the atmosphere. The EGR valve remains closed.

- Low engine coolant temperature
- Engine starting
- Engine stopped
- Engine idling
- Excessively high engine coolant temperature
- Mass air flow sensor malfunction
- High engine speed

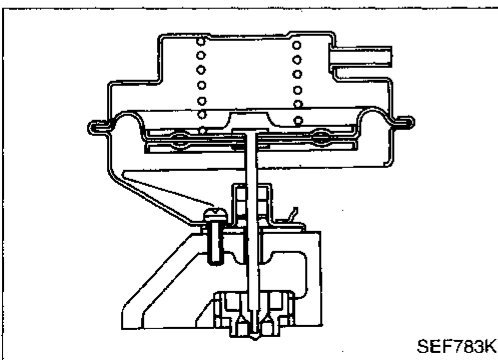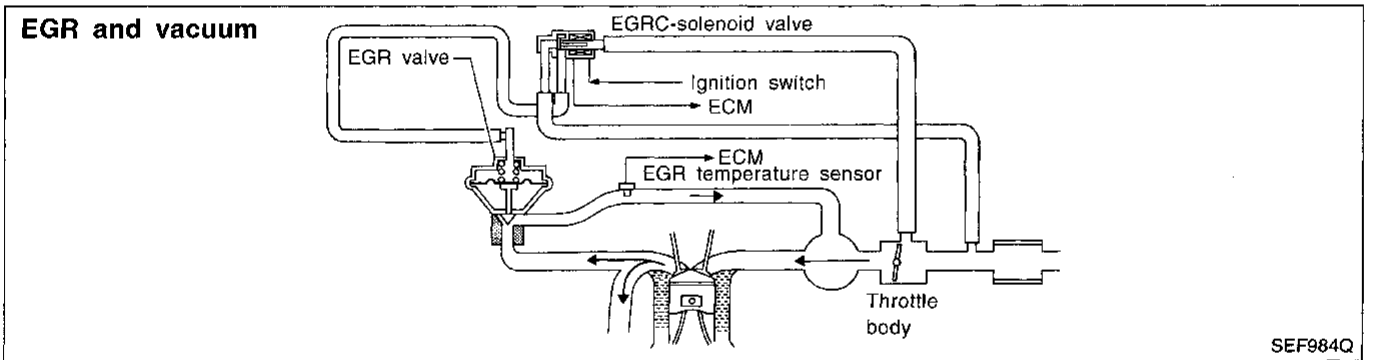

COMPONENT DESCRIPTION

Exhaust gas recirculation (EGR) valve

The EGR valve controls the amount of exhaust gas routed to the intake manifold. Vacuum is applied to the EGR valve in response to throttle valve opening. The vacuum controls the movement of a taper valve connected to the vacuum diaphragm in the EGR valve.



## TROUBLE DIAGNOSIS FOR DTC P0400

### EGR Function (DTC: 0302) (Cont'd)

#### EGRC-solenoid valve

The EGRC-solenoid valve responds to signals from the ECM. When the ECM sends an ON (ground) signal, the coil in the solenoid valve is energized. A plunger will then move to cut the vacuum signal from the throttle body to the EGR valve.

When the ECM sends an OFF signal, the vacuum signal passes through the solenoid valve. The signal then reaches the EGR valve.

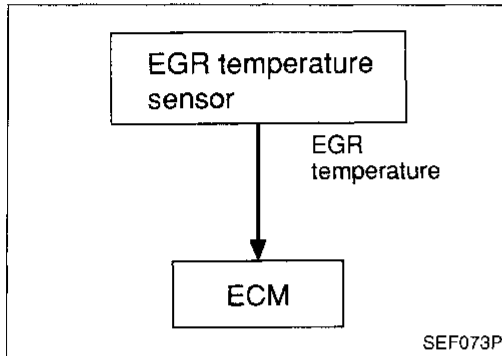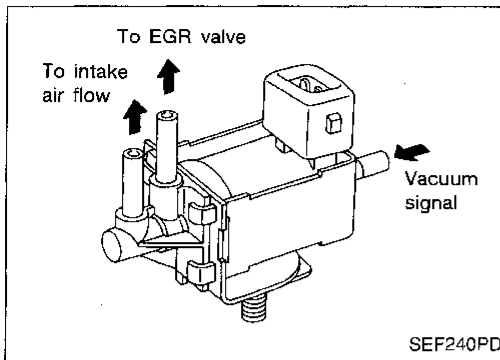

#### ON BOARD DIAGNOSIS LOGIC

If the absence of EGR flow is detected by EGR temperature sensor under the condition that calls for EGR, a low-flow malfunction is diagnosed.

If EGR temperature sensor detects EGR flow under the condition that does not call for EGR, a high-flow malfunction is diagnosed.

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0400 0302	A) The exhaust gas recirculation (EGR) flow is excessively low during the specified driving condition.	<ul style="list-style-type: none"> <li>• EGR valve stuck closed</li> <li>• Passage blocked</li> <li>• EGRC-solenoid valve</li> <li>• Tube leaking for EGR valve</li> <li>• EGR temperature sensor</li> </ul>
	B) The exhaust gas recirculation (EGR) flow is excessively high during the specified driving condition.	<ul style="list-style-type: none"> <li>• EGRC-solenoid valve</li> <li>• EGR valve leaking or stuck open</li> <li>• EGR temperature sensor</li> </ul>

### OVERALL FUNCTION CHECK

Use this procedure to check the overall EGR function. During this check, a DTC might not be confirmed.

Before starting with the following procedure, check the engine coolant temperature of the freeze frame data with CONSULT or Generic Scan Tool.

If the engine coolant temperature is higher than or equal to 75°C (167°F), perform only "Procedure for malfunction A".






If the engine coolant temperature is lower than 75°C (167°F), perform both "Procedure for malfunction A" and "Procedure for malfunction B".

If the freeze frame data for another malfunction is stored in the ECM, perform both "Procedure for malfunction A" and "Procedure for malfunction B". In this case, check DTCs in the ECM and perform inspections one by one based on "INSPECTION PRIORITY", EC-84.

# TROUBLE DIAGNOSIS FOR DTC P0400

## EGR Function (DTC: 0302) (Cont'd)

### Procedure for malfunction A

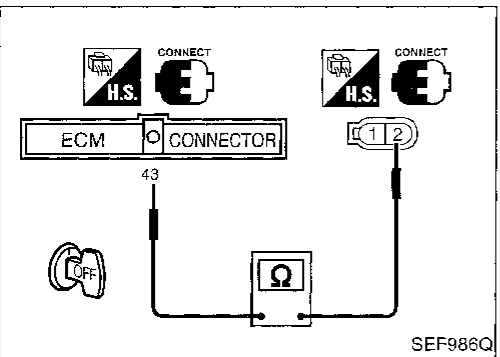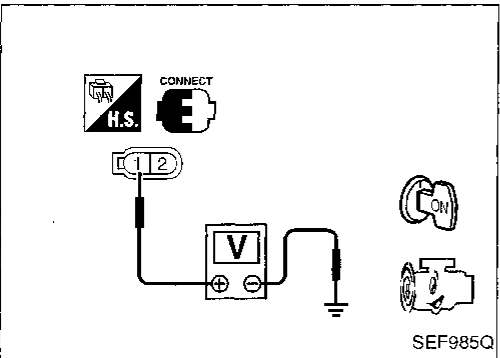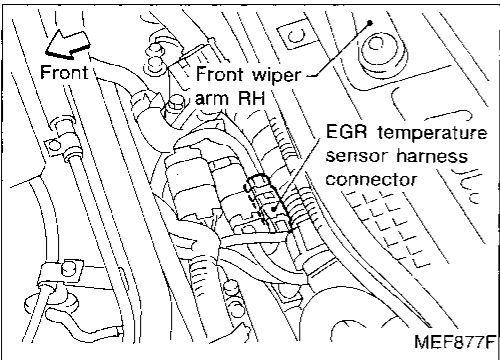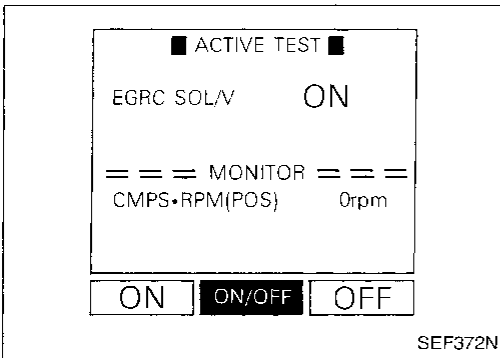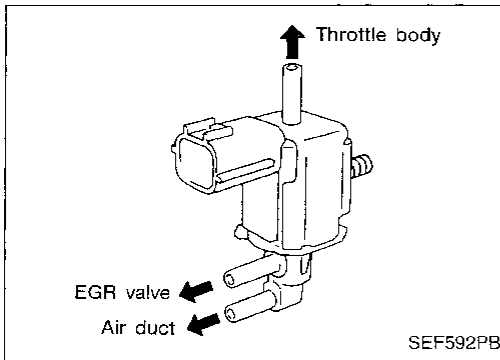

- 1) Start engine and warm it up sufficiently.
- 2) Select "EGRC SOLENOID VALVE" in "ACTIVE TEST" mode with CONSULT and turn the solenoid valve "OFF".
- 3) Check the EGR valve lifting when revving engine from 3,000 rpm up to 4,000 rpm under no load. (If necessary, check it using a suitable tool.) **EGR valve should lift up and down without sticking.**
- 4) Check voltage between EGR temperature sensor harness connector terminal ① and ground at idle speed. **Less than 4.5V should exist.**
- 5) Turn ignition switch "OFF".
- 6) Check harness continuity between EGR temperature sensor harness connector terminal ② and ECM terminal ④③.
- 7) Perform "COMPONENT CHECK", "EGR temperature sensor", EC-219.


OR

- 1) Disconnect EGRC-solenoid valve harness connector. (The DTC for EGRC-solenoid valve will be displayed, however, ignore it.)
- 2) Start engine and warm it up sufficiently.
- 3) Check the EGR valve lifting when revving engine from 3,000 rpm up to 4,000 rpm under no load. (If necessary, check it using with a suitable tool.) **EGR valve should lift up and down without sticking.**
- 4) Reconnect EGRC-solenoid valve harness connector.
- 5) Check voltage between EGR temperature sensor harness connector terminal ① and ground at idle speed. **Less than 4.5V should exist.**
- 6) Turn ignition switch "OFF".
- 7) Check harness continuity between EGR temperature sensor harness connector terminal ② and ECM terminal ④③.
- 8) Perform "COMPONENT CHECK", "EGR temperature sensor", EC-219.


# TROUBLE DIAGNOSIS FOR DTC P0400

## EGR Function (DTC: 0302) (Cont'd)



### Non-turbocharger models

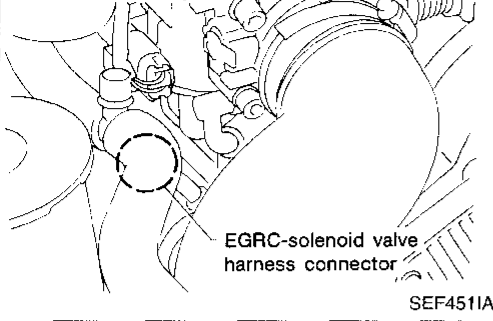

### Turbocharger models

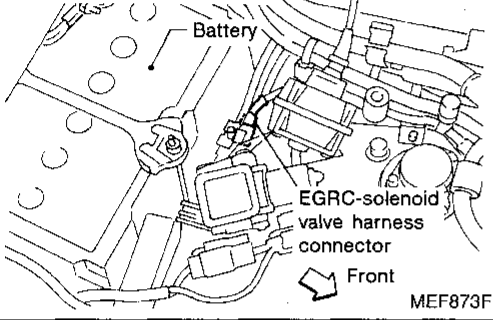

### Overall function check

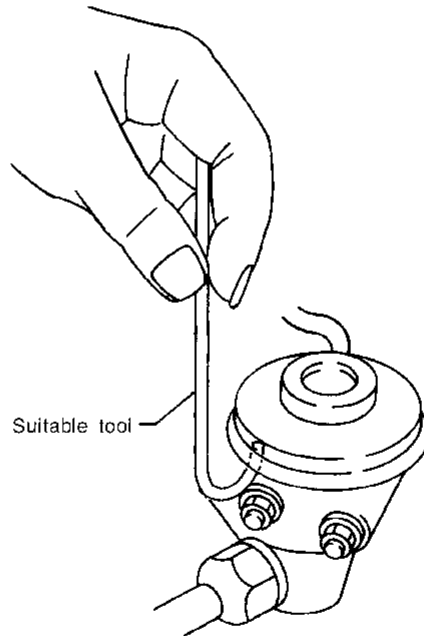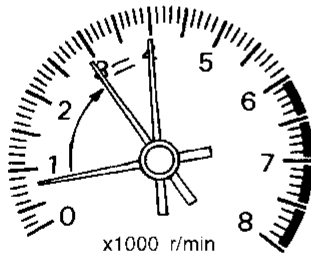


Check the EGR valve lifting when revving engine from 3,000 rpm up to 4,000 rpm.

# TROUBLE DIAGNOSIS FOR DTC P0400


## EGR Function (DTC: 0302) (Cont'd)

### Procedure for malfunction B

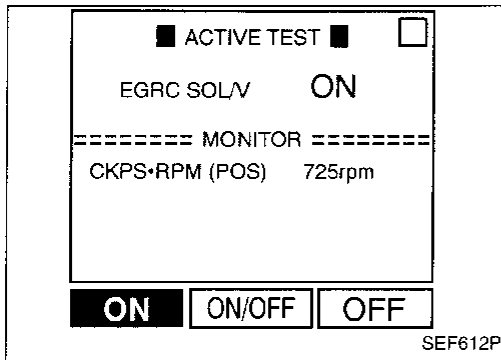


- 1) Start engine.
  - 2) Select "EGRC SOLENOID VALVE" in "ACTIVE TEST" mode with CONSULT and turn the solenoid valve "ON".
  - 3) Check for the EGR valve lifting when revving engine from 3,000 rpm up to 4,000 rpm under no load. (If necessary, check it using a suitable tool.)
- EGR valve should be closed and should not lift up.**

GI  
MA

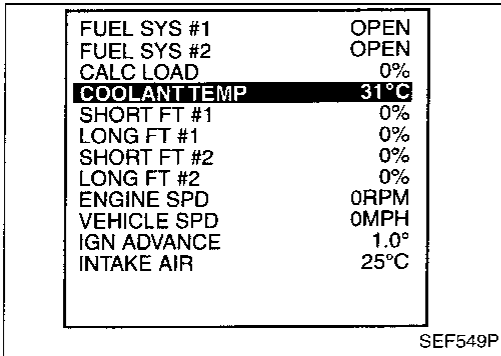

- OR
- 1) Turn ignition switch "ON".
  - 2) Confirm the engine coolant temperature is lower than 55°C (131°F) in "Mode 1" with GST. Perform the following steps before its temperature becomes higher than 55°C (131°F).
  - 3) Start engine.
  - 4) Check for the EGR valve lifting when revving engine from 3,000 rpm up to 4,000 rpm under no load. (If necessary, check it using a suitable tool.)
- EGR valve should be closed and should not lift up.**



EM  
LC  
EC

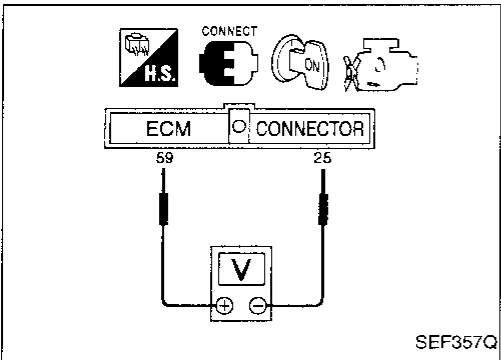

- OR
- 1) Turn ignition switch "ON".
  - 2) Confirm the voltage between ECM terminals (59) and (25) is higher than 2.1V. Perform the following steps before the voltage becomes lower than 2.1V.
  - 3) Start engine.
  - 4) Check for the EGR valve lifting when revving engine from 3,000 rpm up to 4,000 rpm under no load. (If necessary, check it using a suitable tool.)
- EGR valve should be closed and should not lift up.**

FE  
CL  
MT  
AT  
PD  
FA

### Overall function check

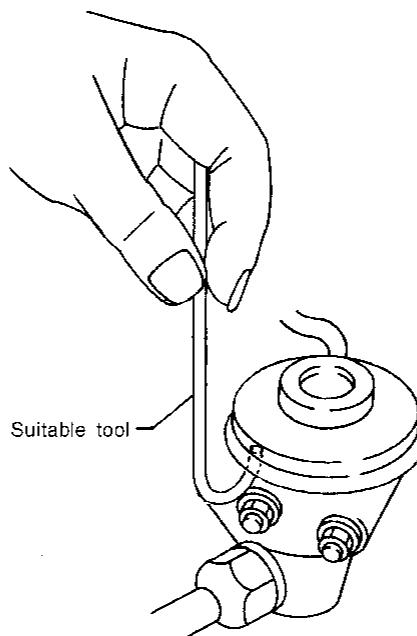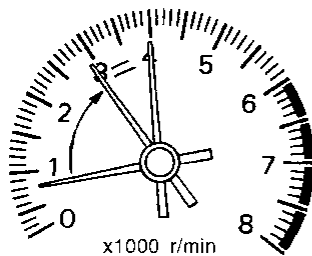

Check the EGR valve lifting when revving engine from 3,000 rpm up to 4,000 rpm.





MEC820B

RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

# TROUBLE DIAGNOSIS FOR DTC P0400

## EGR Function (DTC: 0302) (Cont'd)

EC-EGRC-01


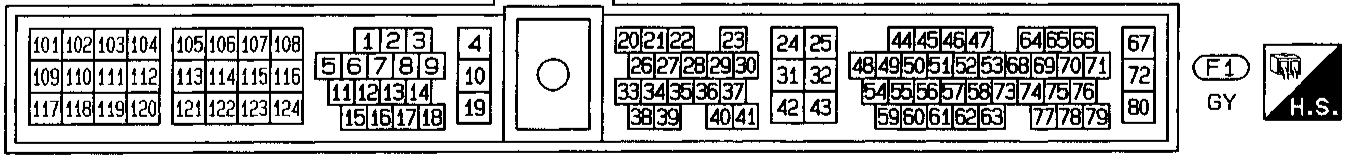


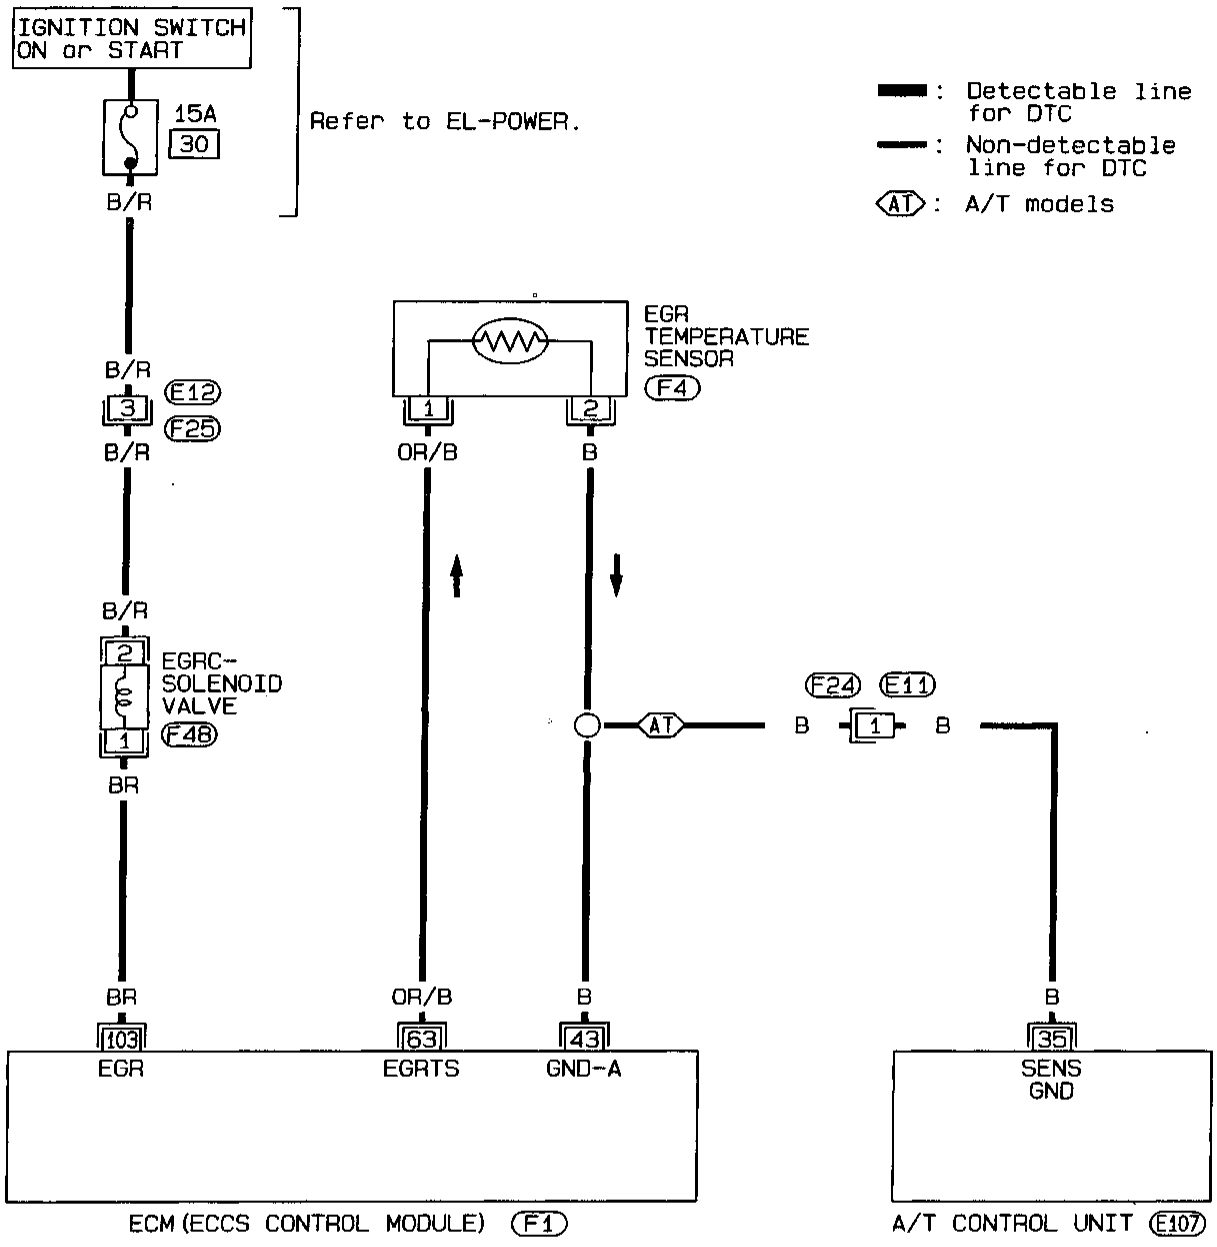




# TROUBLE DIAGNOSIS FOR DTC P0400

## EGR Function (DTC: 0302) (Cont'd)


### DIAGNOSTIC PROCEDURE

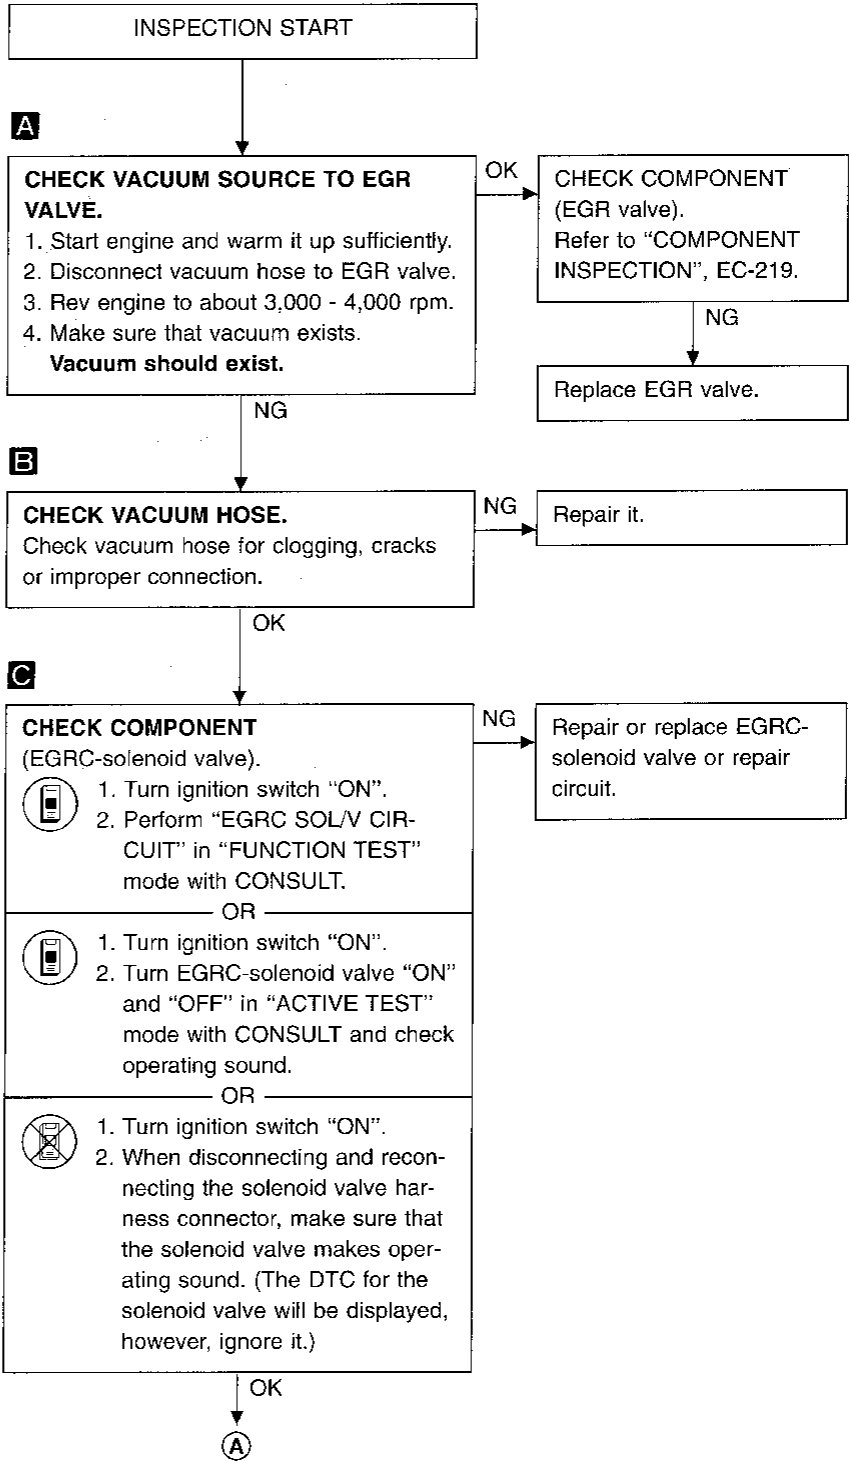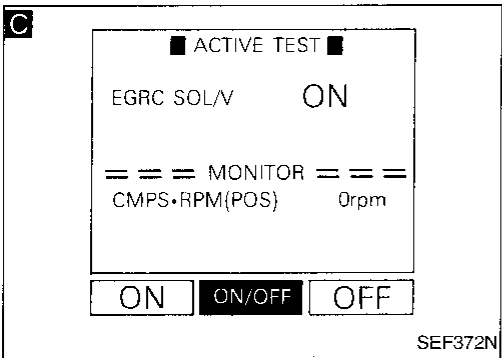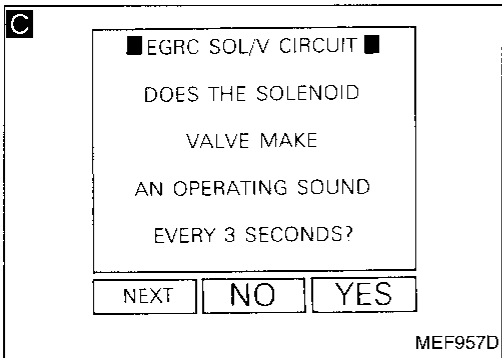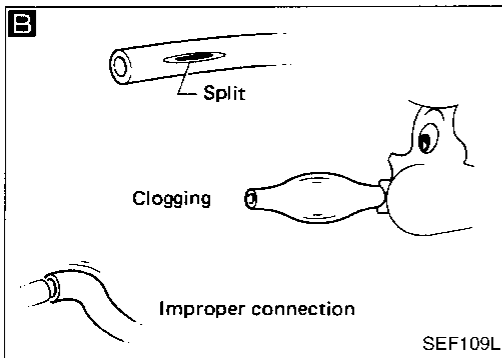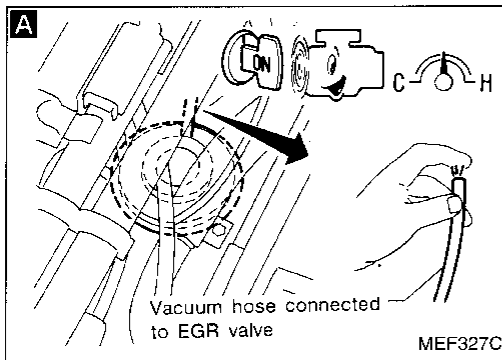

GI  
 MA  
 EM  
 LC  
**EC**  
 FE  
 CL  
 MT  
 AT  
 PD  
 FA  
 RA  
 BR  
 ST  
 RS  
 BT  
 HA  
 EL  
 IDX

# TROUBLE DIAGNOSIS FOR DTC P0400

## EGR Function (DTC: 0302) (Cont'd)

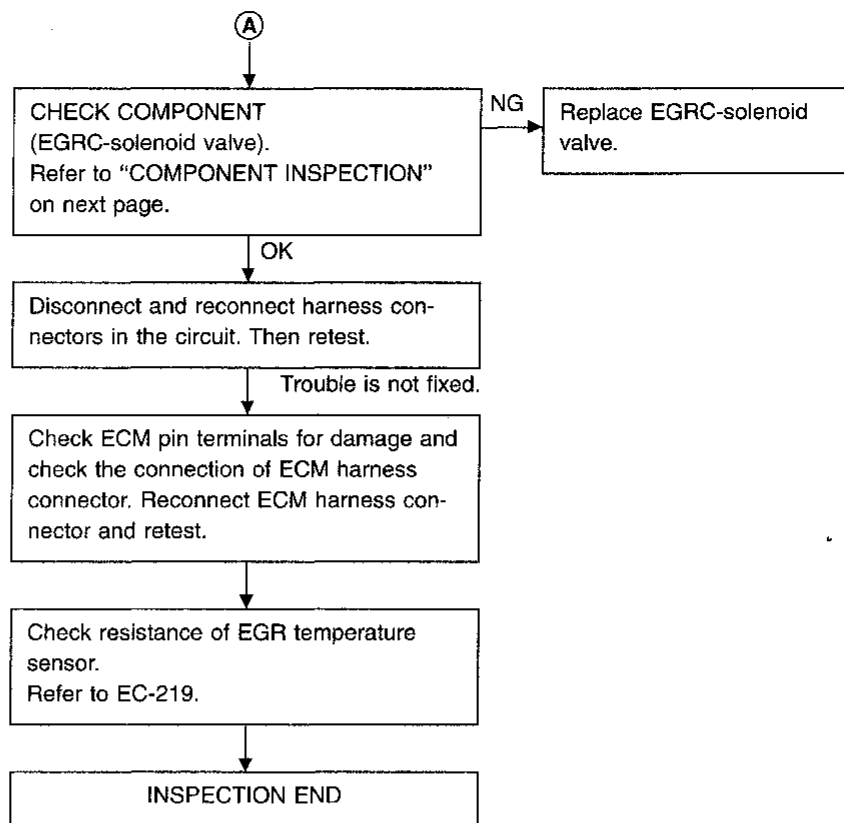

# TROUBLE DIAGNOSIS FOR DTC P0400

## EGR Function (DTC: 0302) (Cont'd)


### COMPONENT INSPECTION

#### EGR valve

Apply vacuum to EGR valve vacuum port with a hand vacuum pump.


**EGR valve spring should lift.**

If NG, replace EGR valve.

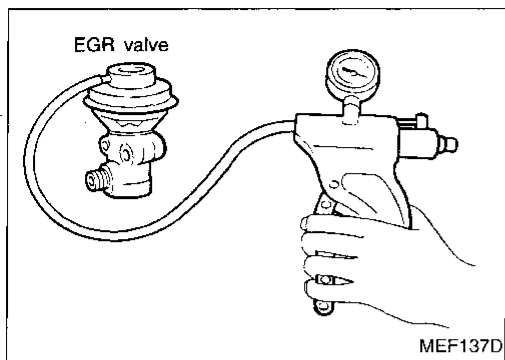

#### EGRC-solenoid valve

Check solenoid valve, following the table as shown below:

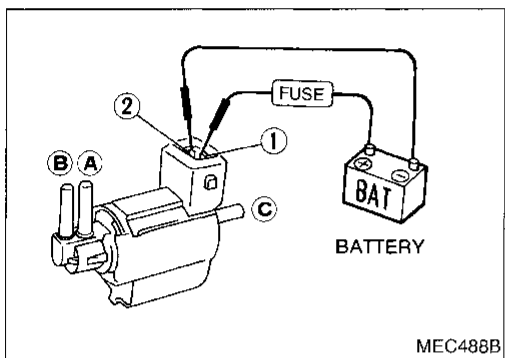


Conditions	Air passage continuity between (A) and (B)	Air passage continuity between (A) and (C)
12V direct current supply between terminals ① and ②	Yes	No
No supply	No	Yes

If NG, replace the solenoid valve.

#### EGR temperature sensor


Check resistance as shown in the figure.

(Reference data)

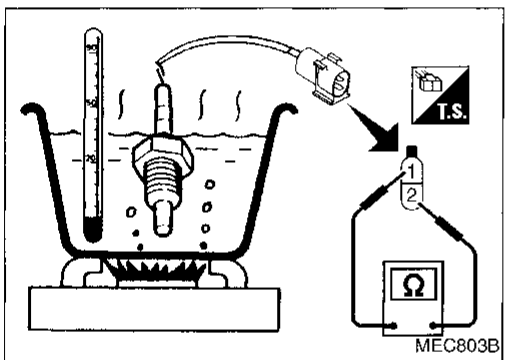


EGR temperature °C (°F)	Voltage (V)	Resistance (MΩ)
0 (32)	4.81	7.9 - 9.7
50 (122)	2.82	0.57 - 0.70
100 (212)	0.8	0.08 - 0.10

If NG, replace EGR temperature sensor.

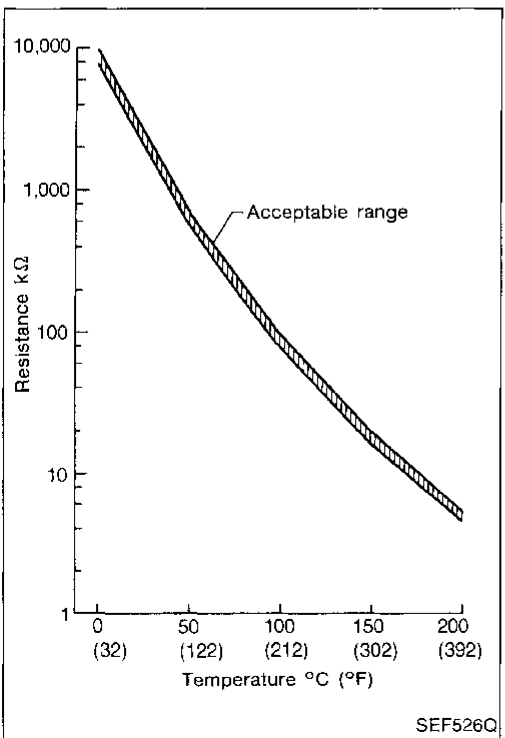

## Three Way Catalyst Function (DTC: 0702, 0703)

### ON BOARD DIAGNOSIS LOGIC

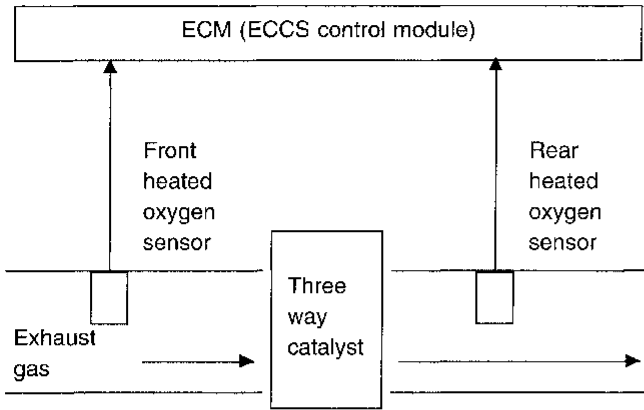

The ECM monitors the switching frequency ratio of front and rear heated oxygen sensors.

A three way catalyst with high oxygen storage capacity will indicate a low switching frequency of rear heated oxygen sensor. As oxygen storage capacity decreases, the rear heated oxygen sensor switching frequency will increase.

When the frequency ratio of front and rear heated oxygen sensors approaches a specified limit value, the second stage diagnosis is applied.

The second stage diagnosis switches the mixture ratio feedback control using front heated oxygen sensor to rear heated oxygen sensor.

Then the ECM measures the switching lag time between front and rear heated oxygen sensors.

The longer lag time indicates the greater oxygen storage capacity. If the lag time is within the specified level, the three way catalyst malfunction is diagnosed.

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
For right bank P0420 0702	<ul style="list-style-type: none"> <li>• Three way catalyst does not operate properly.</li> <li>• Three way catalyst does not have enough oxygen storage capacity.</li> </ul>	<ul style="list-style-type: none"> <li>• Three way catalyst</li> <li>• Exhaust tube</li> <li>• Intake air leaks</li> <li>• Injectors</li> <li>• Injector leaks</li> </ul>
For left bank P0430 0703		

### OVERALL FUNCTION CHECK



Use this procedure to check the overall function of the three way catalyst. During this check, a DTC might not be confirmed.

# TROUBLE DIAGNOSIS FOR DTC P0420, P0430

## Three Way Catalyst Function (DTC: 0702, 0703) (Cont'd)

☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>
CMPS•RPM (POS)	2037rpm	
FR O2 SEN-B2	0.68V	
FR O2 SEN-B1	0.08V	
RR O2 SEN-B1	0.05V	
RR O2 SEN-B2	0.04V	
FR O2 MNTR-B2	RICH	
FR O2 MNTR-B1	LEAN	
RR O2 MNTR-B1	LEAN	
RR O2 MNTR-B2	LEAN	
<b>RECORD</b>		

SEF988Q

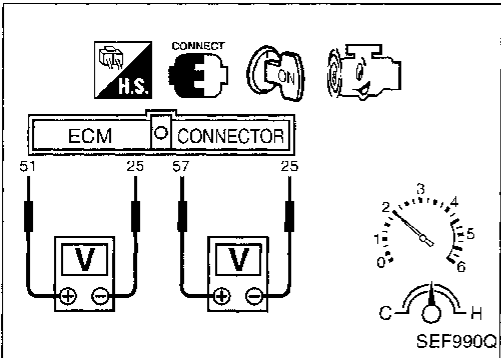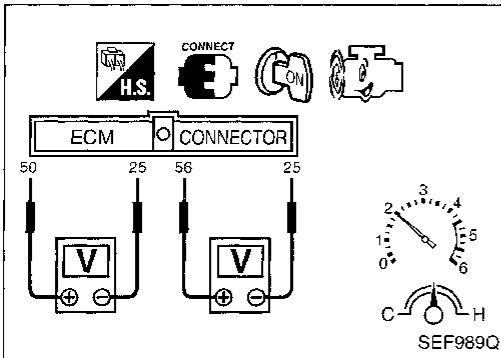

- 1) Start engine and warm it up sufficiently.
- 2) Set "MANU TRIG" and "HI SPEED", then select "FR O2 SEN-B1", "FR O2 SEN-B2", "RR O2 SEN-B1", "RR O2 SEN-B2", "FR O2 MNTR-B2", "FR O2 MNTR-B1", "RR O2 MNTR-B1", "RR O2 MNTR-B2" in "DATA MONITOR" mode with CONSULT.
- 3) Touch "RECORD" on CONSULT screen with engine speed held at 2,000 rpm constant under no load.
- 4) Make sure that the switching frequency between "RICH" and "LEAN" of "RR O2 MNTR-B1" or "RR O2 MNTR-B2" is very less than that of "FR O2 MNTR-B1" or "FR O2 MNTR-B2".

**Switching frequency ratio =**

**Rear heated oxygen sensor switching frequency**

**Front heated oxygen sensor switching frequency**

**This ratio should be less than 0.7.**

If the ratio is greater than above, the three way catalyst is not operating properly.

Note: If the "FR O2 MNTR-B1" or "FR O2 MNTR-B2" does not indicate "RICH" and "LEAN" periodically more than 5 times within 10 seconds at step 3, perform TROUBLE DIAGNOSIS FOR DTC P0130 or P0150 first. (See EC-133 or EC-150.)

OR



- 1) Start engine and warm it up sufficiently.
- 2) Set voltmeters probes between ECM terminals 50 [front heated oxygen sensor (right bank) signal], 51 [front heated oxygen sensor (left bank) signal] and 25 (engine ground), and ECM terminals 56 [rear heated oxygen sensor (right bank) signal], 57 [rear heated oxygen sensor (left bank) signal] and 25 (engine ground).
- 3) Keep engine speed at 2,000 rpm constant under no load.
- 4) Make sure that the voltage switching frequency (high & low) between ECM terminals 56 and 25, or 57 and 25 is very less than that of ECM terminals 50 and 25, or 51 and 25.

**Switching frequency ratio =**

**Rear heated oxygen sensor voltage switching frequency**

**Front heated oxygen sensor voltage switching frequency**

**This ratio should be less than 0.7.**

If the ratio is greater than above, it means three way catalyst does not operate properly.

Note: If the voltage at terminal 50 or 51 does not switch periodically more than 5 times within 10 seconds at step 3, perform TROUBLE DIAGNOSIS FOR DTC P0130 or P0150 first. (See EC-133 or EC-150.)

# TROUBLE DIAGNOSIS FOR DTC P0420, P0430

## Three Way Catalyst Function (DTC: 0702, 0703) (Cont'd)

### DIAGNOSTIC PROCEDURE

INSPECTION START

**CHECK EXHAUST SYSTEM.**  
Visually check exhaust tubes and muffler for dent.

NG → Repair or replace it.

OK

**CHECK FOR EXHAUST AIR LEAK.**  
Start engine and run it at idle. Listen for an exhaust air leak before the three way catalyst.

NG → Repair or replace.

OK

**CHECK FOR INTAKE AIR LEAK.**  
Start engine and run it at idle. Listen for an intake air leak after the mass air flow sensor.

NG → Repair or replace.

OK

**CHECK INJECTORS.**  
1. Refer to WIRING DIAGRAM for Injectors, EC-311.  
2. Turn ignition switch "ON".  
3. Check voltage between ECM terminals (102), (104), (106), (109), (111) or (113) and ground with CONSULT or tester.  
**Battery voltage should exist.**

NG → Perform TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS, "Injectors", EC-311. Repair harness or connectors.

OK

1. Turn ignition switch "OFF".  
2. Remove injector assembly. Refer to EC-27. Keep fuel hose and all injectors connected to injector gallery.

1. Disconnect camshaft position sensor harness connector.  
2. Turn ignition switch "ON". Make sure fuel does not drip from injector.



Drips → Replace the injectors from which fuel is dripping.


Does not drip.

Check ECM pin terminals for damage and check the connection of ECM harness connector. Reconnect ECM harness connector and retest.

Replace three way catalyst.

INSPECTION END

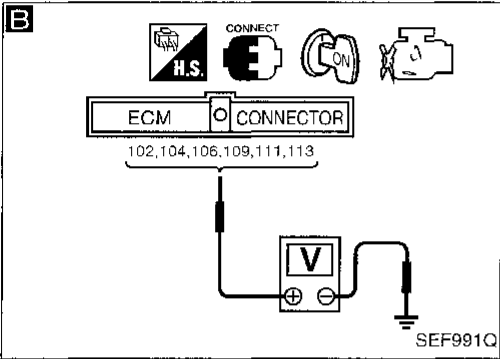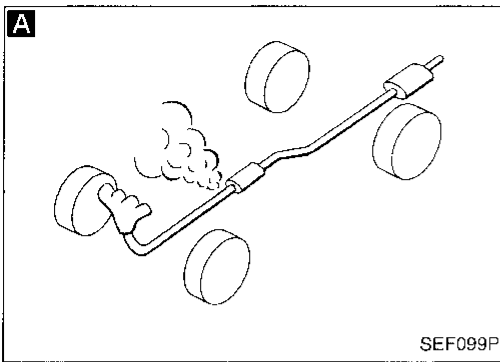

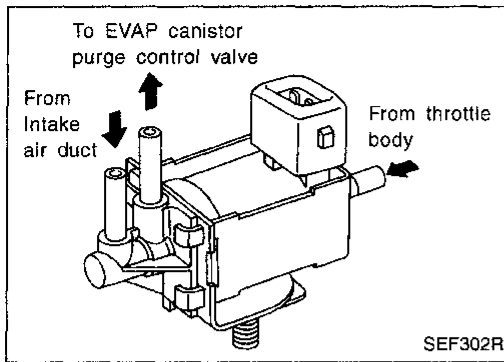

## Evaporative Emission (EVAP) Canister Purge Control Solenoid Valve (DTC: 0807)


### COMPONENT DESCRIPTION

#### EVAP canister purge control solenoid valve

The EVAP canister purge control solenoid valve responds to signals from the ECM. When the ECM sends an ON (ground) signal, the vacuum signal (from the throttle body to the EVAP canister purge control valve) is cut.

When the ECM sends an OFF signal, the vacuum signal passes through the EVAP canister purge control solenoid valve. The signal then reaches the EVAP canister purge control valve.

The EVAP canister purge control solenoid valve is not used to control the engine system. It is used only for on board diagnosis.

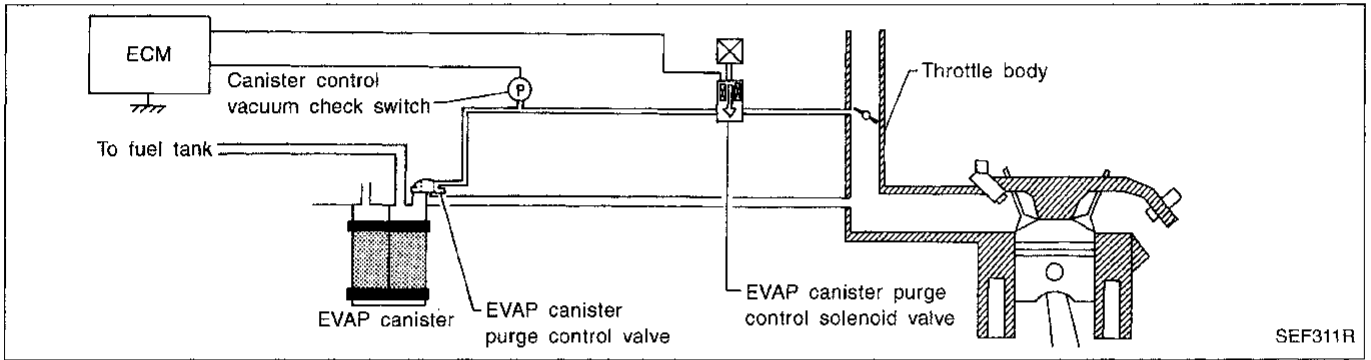

Diagnostic Trouble Code No.	Malfunction is detected when ....	Check Items (Possible Cause)
P0443 0807	A) An improper voltage signal is sent to ECM through EVAP canister purge control solenoid valve.	<ul style="list-style-type: none"> <li>• Harness or connector (The EVAP canister purge control solenoid valve circuit is open or shorted.)</li> </ul>
	B) The vacuum signal is not sent to EVAP canister purge control valve under the specified driving condition, even though EVAP canister purge control solenoid valve is OFF.	<ul style="list-style-type: none"> <li>• Harness or connector (The EVAP canister purge control solenoid valve circuit is shorted.)</li> <li>• EVAP canister purge control solenoid valve</li> <li>• Mass air flow sensor</li> <li>• Throttle position sensor</li> <li>• Engine coolant temperature sensor</li> <li>• EGR valve</li> <li>• Intake air system (Intake air leaks)</li> <li>• Hoses</li> <li>• EVAP canister purge control valve (built into EVAP canister)</li> <li>• Canister control vacuum check switch</li> </ul>
	C) The vacuum signal is sent to EVAP canister purge control valve even though EVAP canister purge control solenoid valve is ON.	<ul style="list-style-type: none"> <li>• Harness or connector (The EVAP canister purge control solenoid valve circuit is open.)</li> <li>• EVAP canister purge control solenoid valve</li> <li>• Hoses (Hoses are connected incorrectly.)</li> <li>• Canister control vacuum check switch</li> </ul>


## TROUBLE DIAGNOSIS FOR DTC P0443

### Evaporative Emission (EVAP) Canister Purge Control Solenoid Valve (DTC: 0807) (Cont'd)

#### DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

Perform "Procedure for malfunction A" first. If the DTC cannot be confirmed, perform "Procedure for malfunction B". If there is no problem on "Procedure for malfunction B", perform "OVERALL FUNCTION CHECK", "Procedure for malfunction C".

#### Procedure for malfunction A

- 1) Turn ignition switch "ON".
  - 2) Select "DATA MONITOR" mode with CONSULT.
  - 3) Wait at least 6 seconds.
- 
- OR
- 1) Turn ignition switch "ON" and wait at least 6 seconds.
  - 2) Select "MODE 3" with GST.
- 
- OR
-  1) Turn ignition switch "ON" and wait at least 6 seconds.
- 2) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
  - 3) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

#### Procedure for malfunction B

- 1) Start engine and warm it up sufficiently.
  - 2) Turn ignition switch "OFF" and wait at least 5 seconds.
  - 3) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT.
  - 4) Start engine and run it for at least 11 seconds at idle speed.
  - 5) Maintain the following conditions for at least 6 seconds.  
**Air conditioner switch: ON**  
**Steering wheel: Fully turned**  
**Headlamp switch: ON**  
**Rear window defogger switch: ON**  
**Engine speed: 2,900 - 3,300 rpm**  
**Gear position: "P" or "N"**
- 
- OR
- 1) Start engine and warm it up sufficiently.
  - 2) Turn ignition switch "OFF" and wait at least 5 seconds.
  - 3) Turn ignition switch "ON" and select "MODE 1" with GST.
  - 4) Start engine and run it for at least 11 seconds at idle speed.
  - 5) Maintain the following conditions for at least 6 seconds.  
**Air conditioner switch: ON**  
**Steering wheel: Fully turned**  
**Headlamp switch: ON**  
**Rear window defogger switch: ON**  
**Engine speed: 2,900 - 3,300 rpm**  
**Gear position: "P" or "N"**
  - 6) Select "MODE 3" with GST.
- 
- OR



# TROUBLE DIAGNOSIS FOR DTC P0443

## Evaporative Emission (EVAP) Canister Purge Control Solenoid Valve (DTC: 0807) (Cont'd)



- 1) Start engine and warm it up sufficiently.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Start engine and run it for at least 11 seconds at idle speed.
- 4) Maintain the following conditions for at least 6 seconds.
  - Air conditioner switch: ON**
  - Steering wheel: Fully turned**
  - Headlamp switch: ON**
  - Rear window defogger switch: ON**
  - Engine speed: 2,900 - 3,300 rpm**
  - Gear position: "P" or "N"**
- 5) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 6) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST


RS

BT

HA

EL

IDX

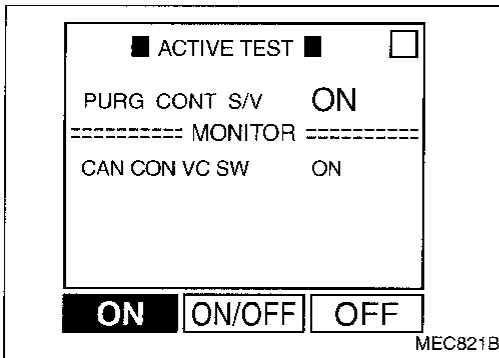

### OVERALL FUNCTION CHECK

Use this procedure to check the overall monitoring function of the EVAP canister purge control solenoid valve. During this check, a DTC might not be confirmed.

#### Procedure for malfunction C





- 1) Start engine and warm it up sufficiently.
- 2) Select "PURG CONT S/V" in "ACTIVE TEST" mode, and select "CAN CON VC SW" as the monitor item with CONSULT.
- 3) Touch "ON" and check "CAN CON VC SW" is now "ON".

OR



- 1) Start engine.
- 2) Supply battery voltage between EVAP canister purge control solenoid valve terminals ① and ②.
- 3) Check voltage between ECM terminal ③⑤ and engine ground.



**Voltage: Battery voltage**

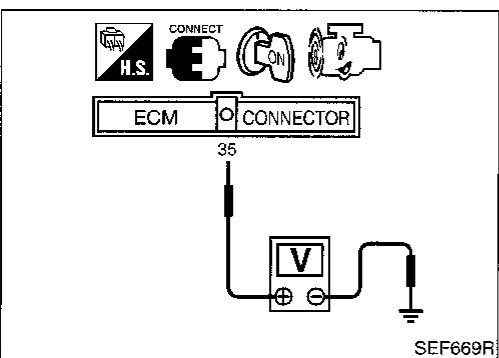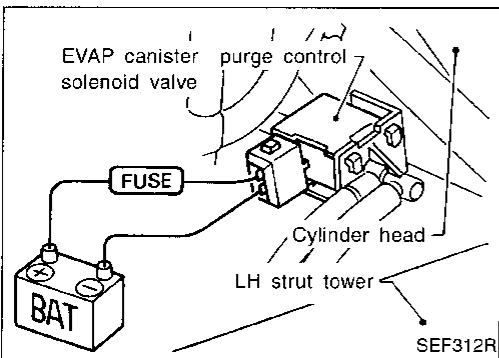

# TROUBLE DIAGNOSIS FOR DTC P0443


## Evaporative Emission (EVAP) Canister Purge Control Solenoid Valve (DTC: 0807) (Cont'd)

EC-CANI/V-01

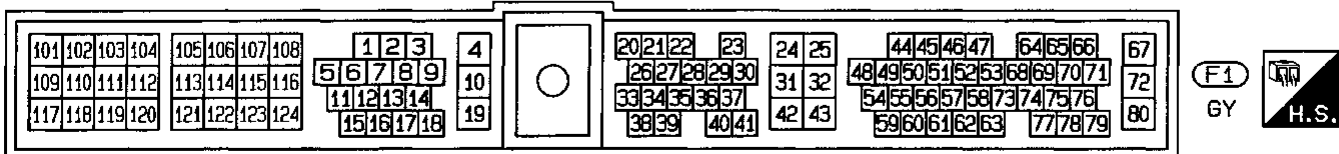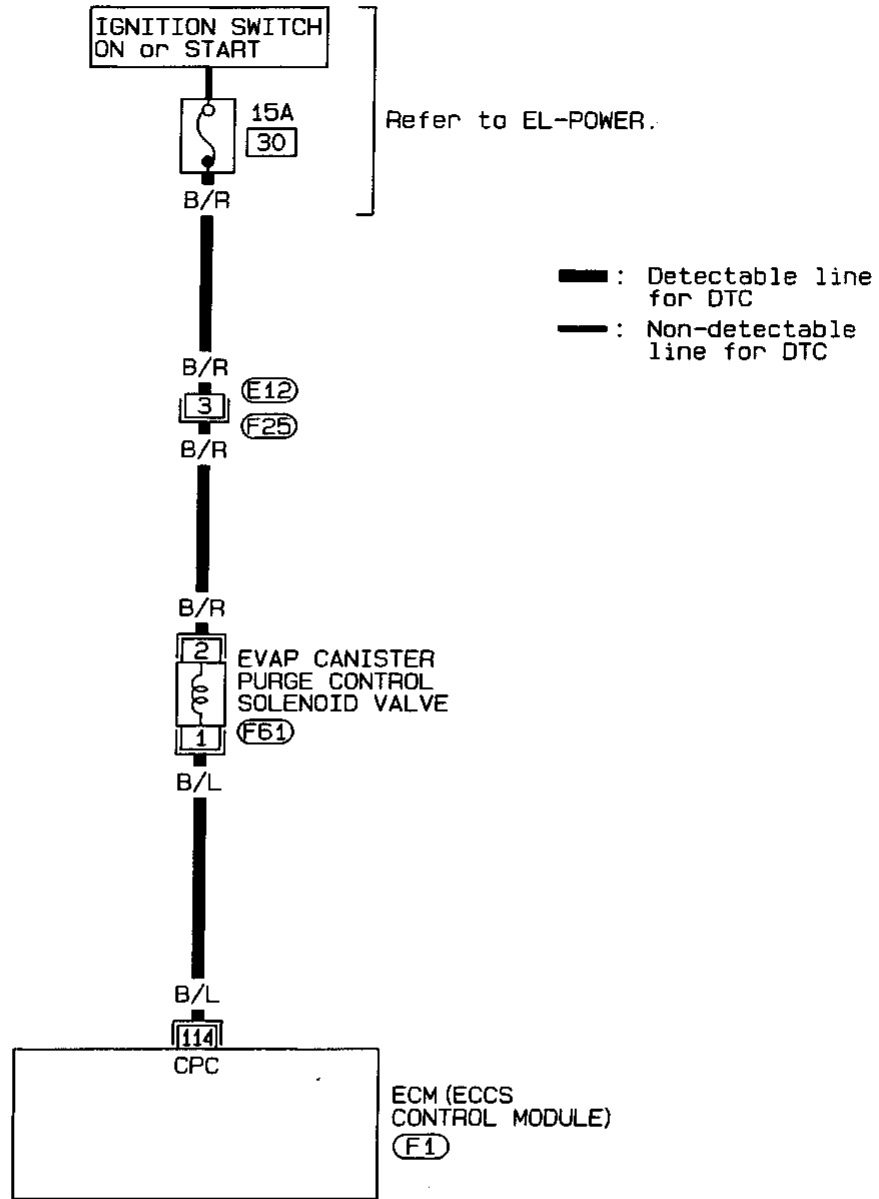

# TROUBLE DIAGNOSIS FOR DTC P0443




## Evaporative Emission (EVAP) Canister Purge Control Solenoid Valve (DTC: 0807) (Cont'd)

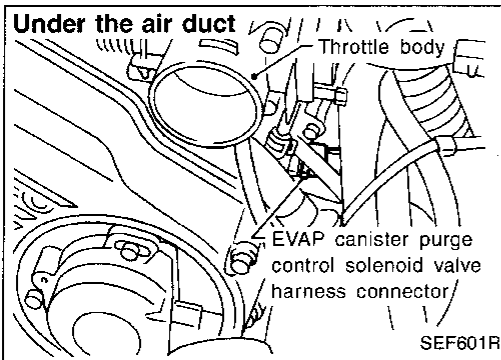

### DIAGNOSTIC PROCEDURE

If the trouble is duplicated after "Procedure for malfunction A", perform "Procedure A" below. If the trouble is duplicated after "Procedure for malfunction B", perform "Procedure B" on next page. If the trouble is duplicated after "Procedure for malfunction C", perform "Procedure C" on EC-230.




#### Procedure A

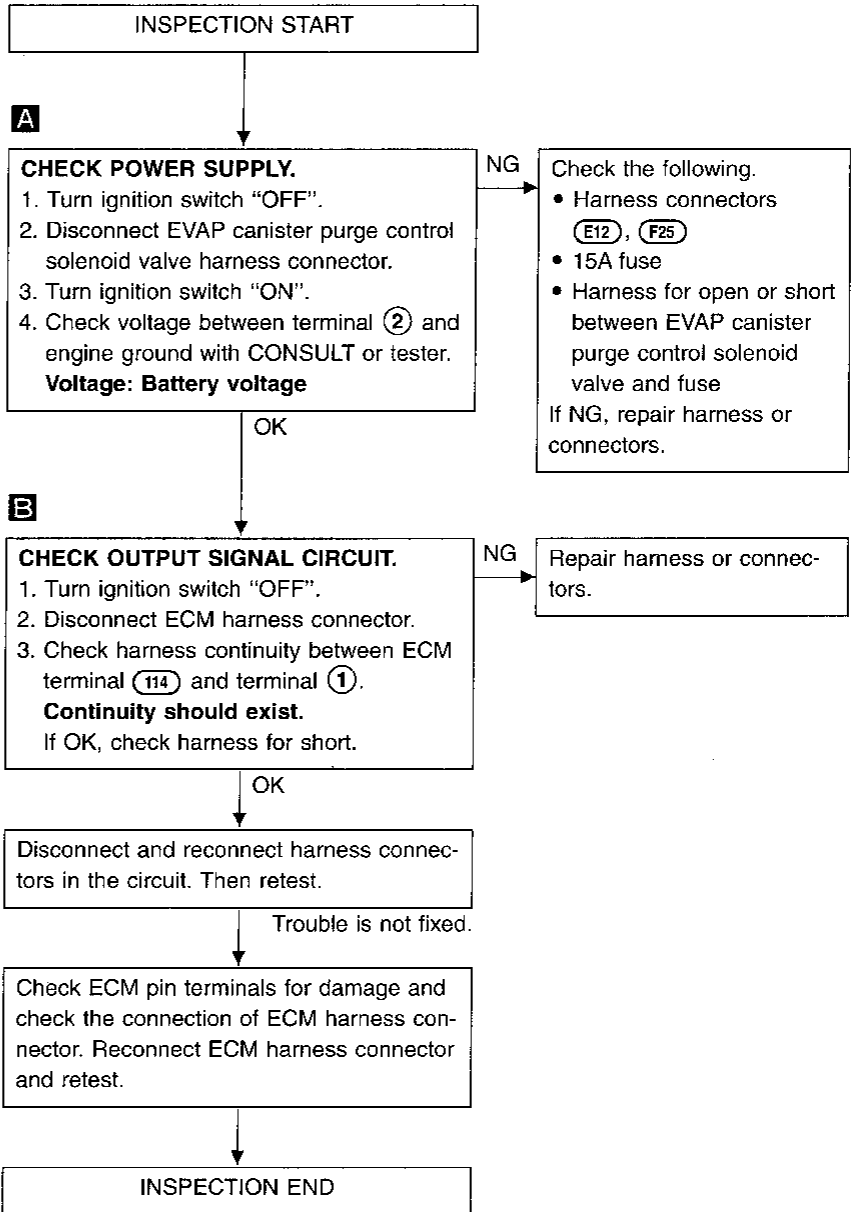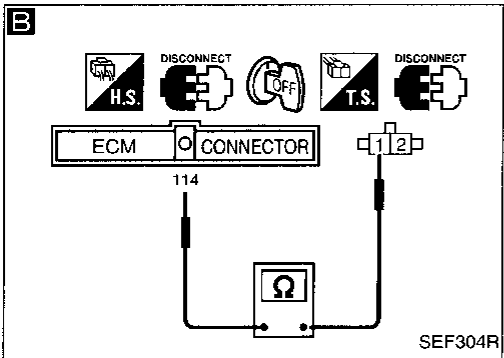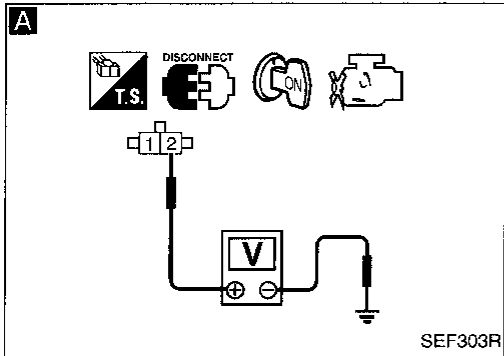


GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

# TROUBLE DIAGNOSIS FOR DTC P0443

## Evaporative Emission (EVAP) Canister Purge Control Solenoid Valve (DTC: 0807) (Cont'd)

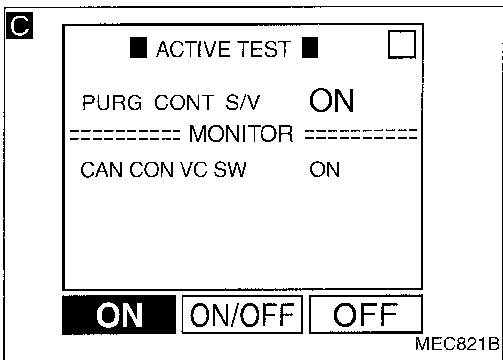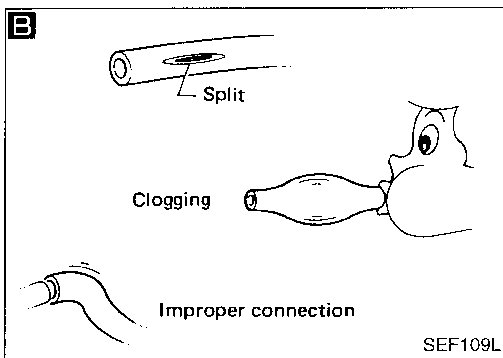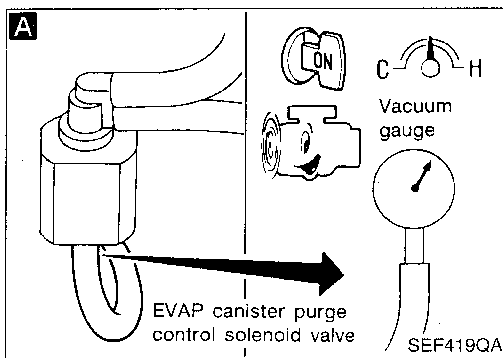


### Procedure B

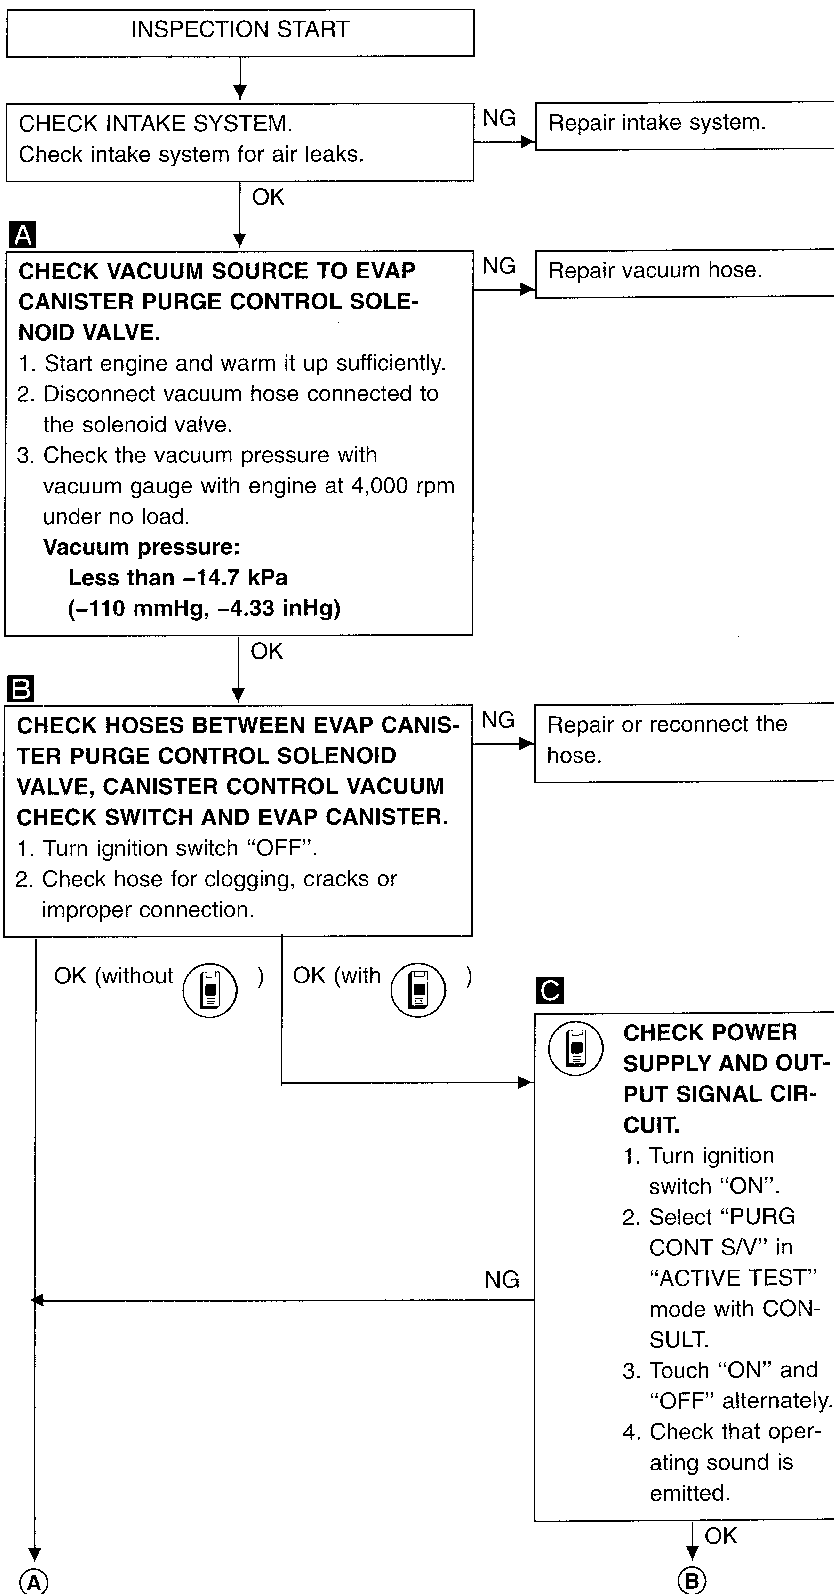

# TROUBLE DIAGNOSIS FOR DTC P0443

## Evaporative Emission (EVAP) Canister Purge Control Solenoid Valve (DTC: 0807) (Cont'd)

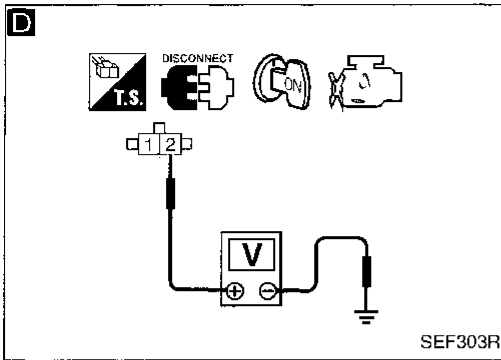

**D**

**CHECK POWER SUPPLY.**

1. Turn ignition switch "OFF".
2. Disconnect EVAP canister purge control solenoid valve harness connector.
3. Turn ignition switch "ON".
4. Check voltage between terminal ② and engine ground with CONSULT or tester.


**Voltage: Battery voltage**  
If OK, check harness for short.

NG

Check the following.

- Harness connectors (E12), (F25)
- 15A fuse
- Harness for open or short between EVAP canister purge control solenoid valve and fuse

If NG, repair harness or connectors.

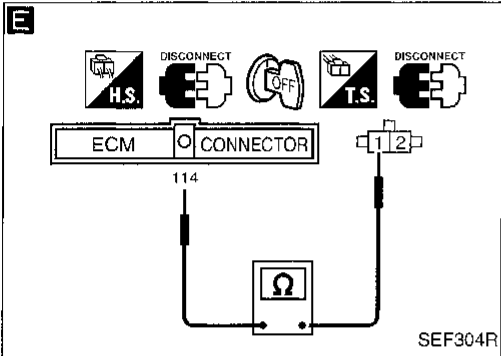

**E**

**CHECK OUTPUT SIGNAL CIRCUIT.**

1. Turn ignition switch "OFF".
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal ①④ and terminal ①.

**Continuity should exist.**  
If OK, check harness for short.

NG

Repair harness or connectors.

**CHECK COMPONENT**  
(Mass air flow sensor).  
Refer to "COMPONENT INSPECTION", "TROUBLE DIAGNOSIS FOR DTC P0100", EC-112.

NG

Replace mass air flow sensor.

**CHECK COMPONENT**  
(Throttle position sensor).  
Refer to "COMPONENT INSPECTION", "TROUBLE DIAGNOSIS FOR DTC P0120", EC-126.

NG

Replace throttle position sensor.

**CHECK COMPONENT**  
(Engine coolant temperature sensor).  
Refer to "COMPONENT INSPECTION", "TROUBLE DIAGNOSIS FOR DTC P0115", EC-121.

NG

Replace engine coolant temperature sensor.


OK

**C**


GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

# TROUBLE DIAGNOSIS FOR DTC P0443

## Evaporative Emission (EVAP) Canister Purge Control Solenoid Valve (DTC: 0807) (Cont'd)




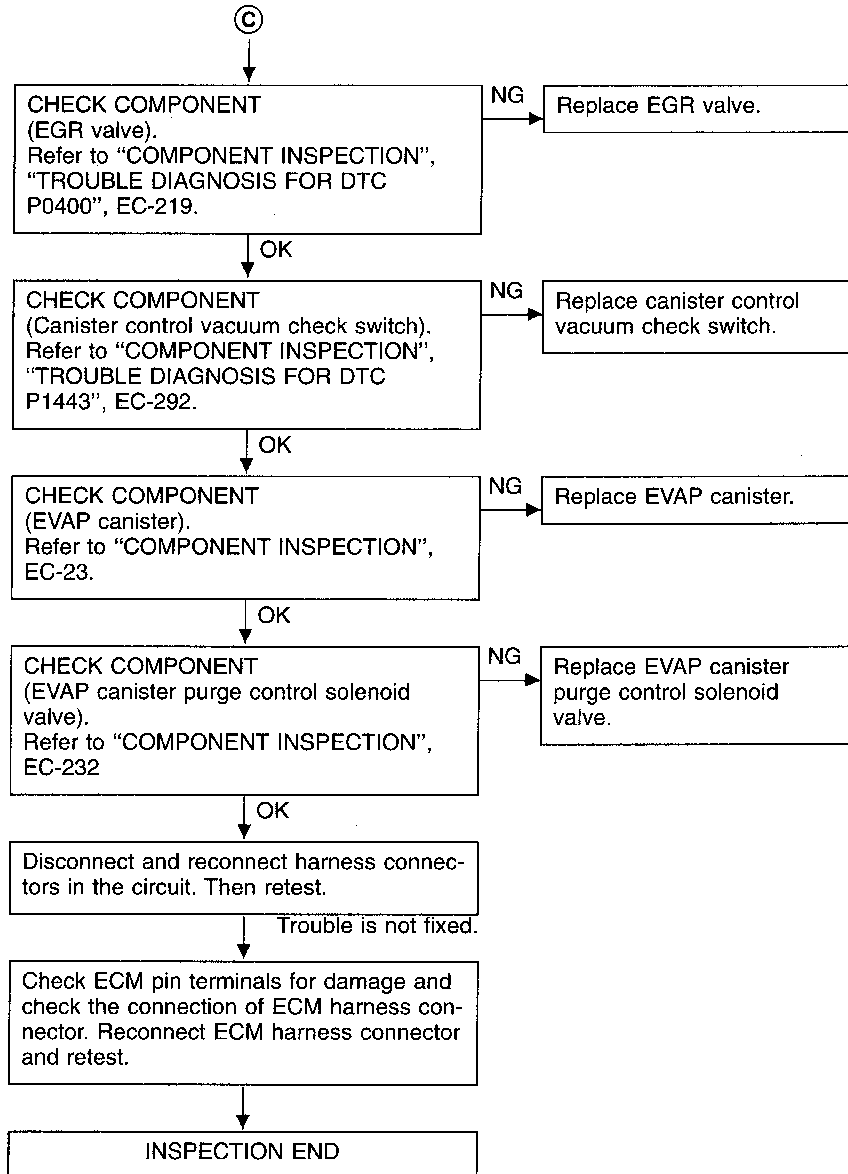


### Procedure C

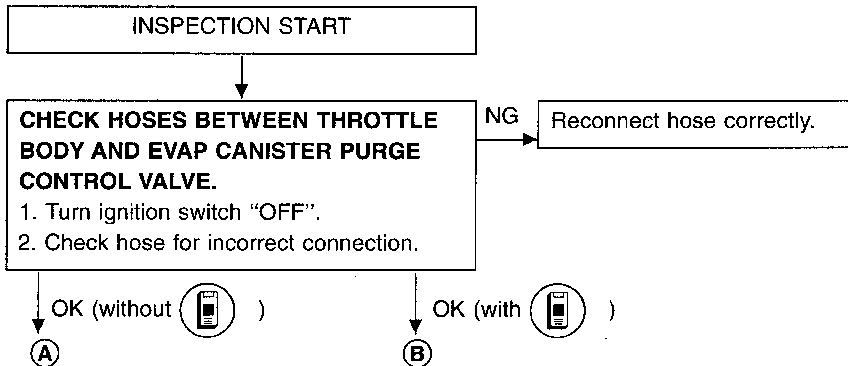

# TROUBLE DIAGNOSIS FOR DTC P0443

## Evaporative Emission (EVAP) Canister Purge Control Solenoid Valve (DTC: 0807) (Cont'd)

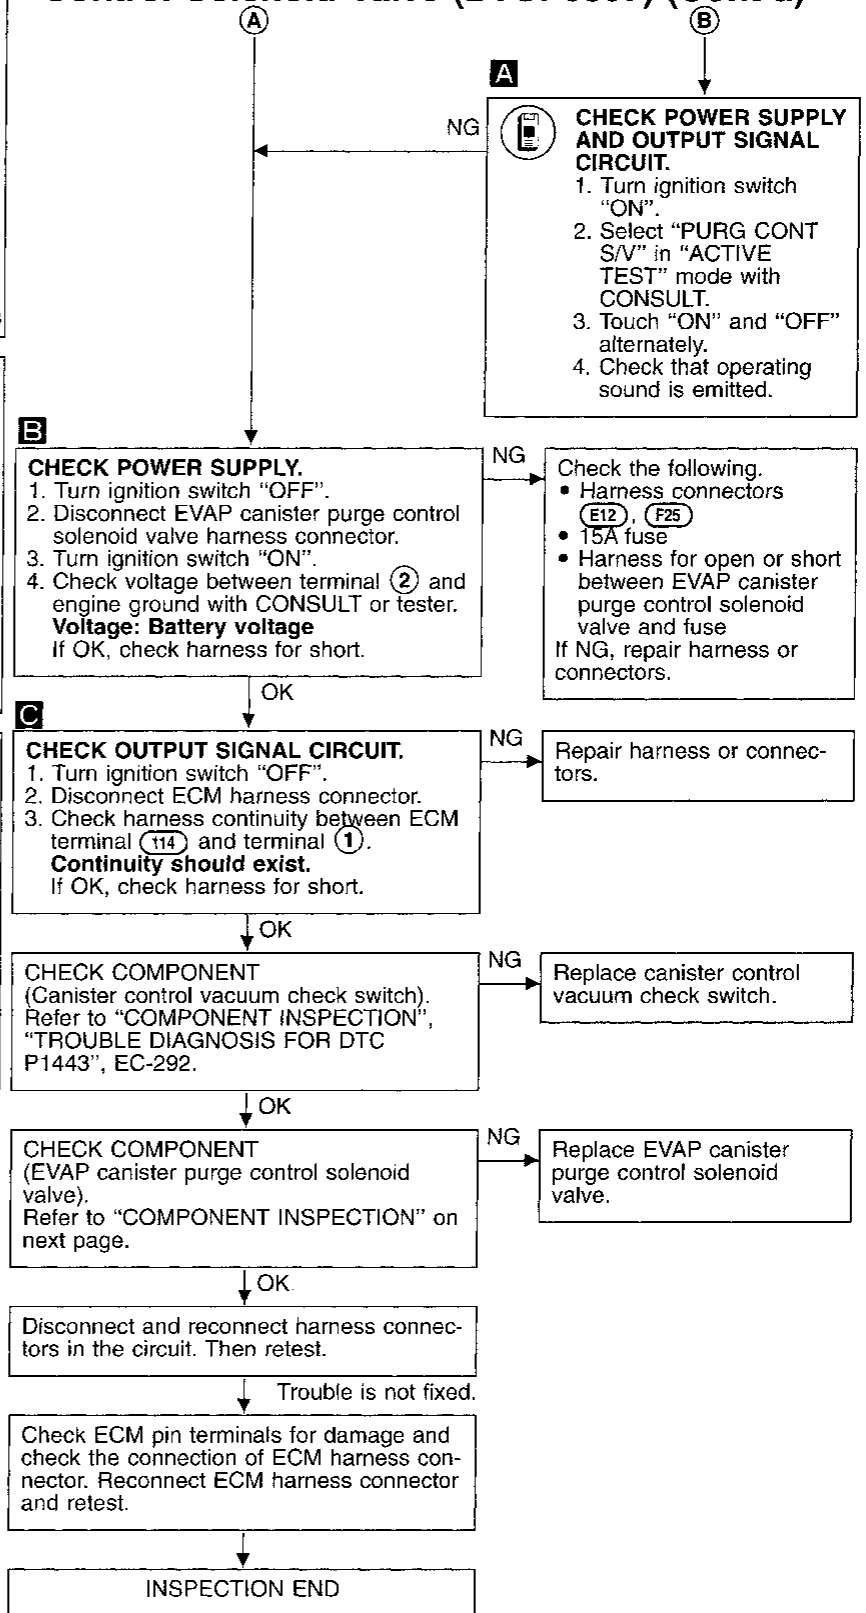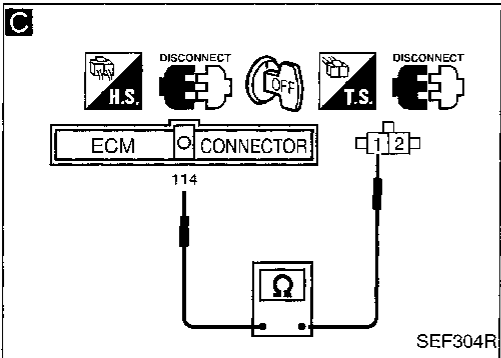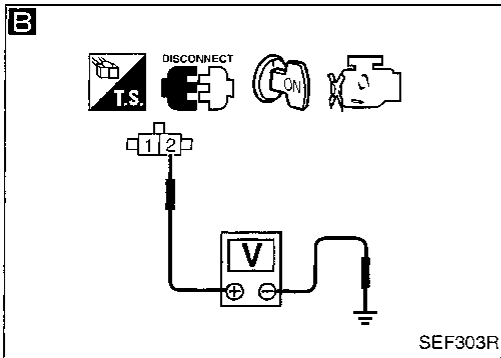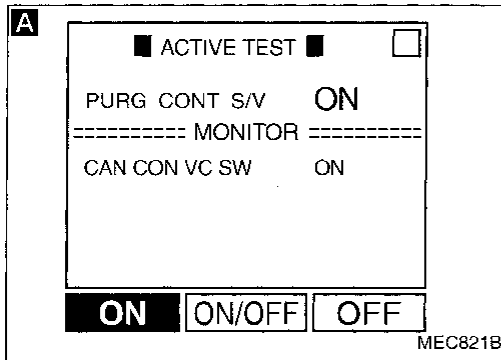

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX


## TROUBLE DIAGNOSIS FOR DTC P0443

### Evaporative Emission (EVAP) Canister Purge Control Solenoid Valve (DTC: 0807) (Cont'd)

#### COMPONENT INSPECTION


#### EVAP canister purge control solenoid valve

Check air passage continuity.

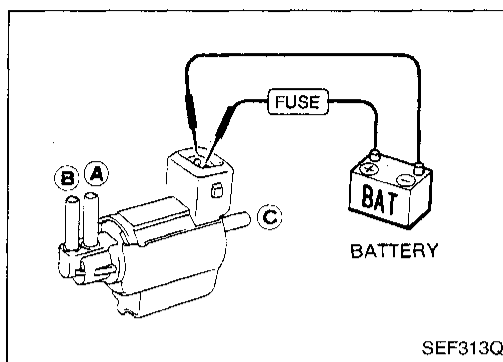

Condition	Air passage continuity between (A) and (B)	Air passage continuity between (A) and (C)
12V direct current supply between terminals	Yes	No
No supply	No	Yes

If NG, replace solenoid valve.

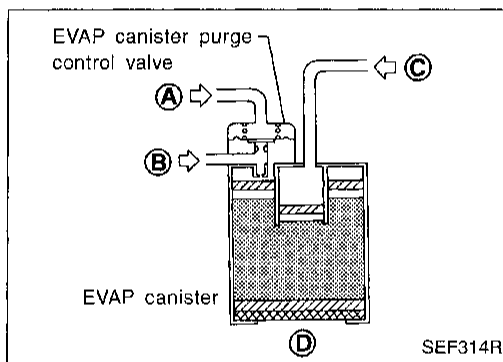


#### EVAP canister purge control valve (built into EVAP canister)

Check EVAP canister purge control valve as follows:

1. Blow air in port (A) and check that there is no leakage.
2.
  - Apply vacuum to port (A). [Approximately  $-13.3$  to  $-20.0$  kPa ( $-100$  to  $-150$  mmHg,  $-3.94$  to  $-5.91$  inHg)]
  - Cover port (D) by hand.
  - Blow air in port (C) and check that it flows freely out of port (B).




# TROUBLE DIAGNOSIS FOR DTC P0500

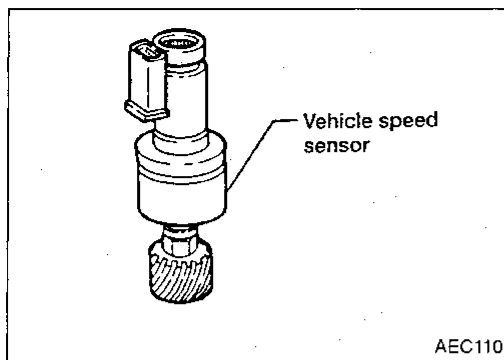

## Vehicle Speed Sensor (VSS) (DTC: 0104)

The vehicle speed sensor is installed in the transmission. It contains a pulse generator which provides a vehicle speed signal to the speedometer. The speedometer then sends a signal to the ECM.

Diagnostic Trouble Code No.	Malfunction is detected when ....	Check Items (Possible Cause)
P0500 0104	<ul style="list-style-type: none"> <li>The almost 0 km/h (0 MPH) signal from the vehicle speed sensor is sent to ECM even when the vehicle is driving.</li> </ul>	<ul style="list-style-type: none"> <li>Harness or connector (The vehicle speed sensor circuit is open or shorted.)</li> <li>Vehicle speed sensor</li> </ul>

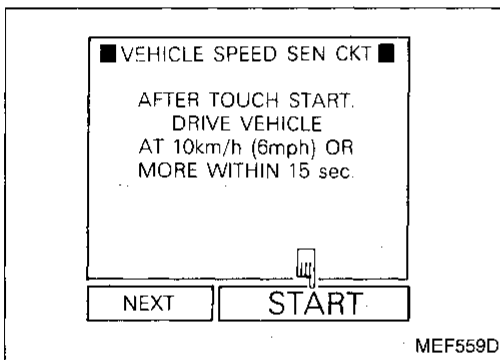

## OVERALL FUNCTION CHECK

Use this procedure to check the overall function of the vehicle speed sensor circuit. During this check, a DTC might not be confirmed.

- 1) Jack up drive wheels.
- 2) Start engine.
- 3) Perform "VEHICLE SPEED SEN CKT" in "FUNCTION TEST" mode with CONSULT.

OR

- 2) Start engine.
- 3) Read vehicle speed sensor signal in "DATA MONITOR" mode with CONSULT.



**The vehicle speed on CONSULT should be able to exceed 10 km/h (6 MPH) when rotating wheels with suitable gear position.**

OR

- 2) Start engine.
- 3) Read vehicle speed sensor signal in "MODE 1" with GST.

**The vehicle speed on GST should be able to exceed 10 km/h (6 MPH) when rotating wheels with suitable gear position.**

OR

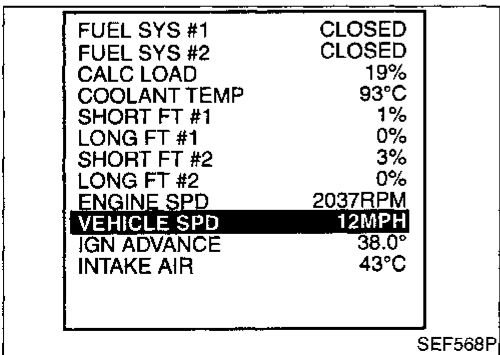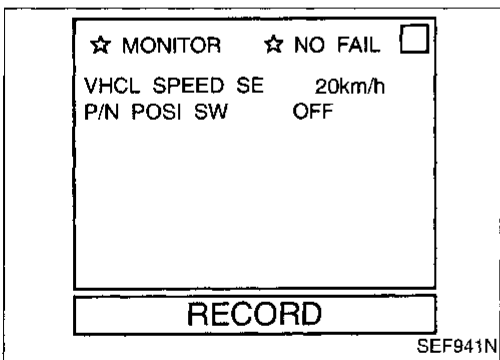

## TROUBLE DIAGNOSIS FOR DTC P0500

### Vehicle Speed Sensor (VSS) (DTC: 0104) (Cont'd)

#### DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE



- 1) Start engine and warm it up sufficiently.
- 2) Perform test drive for at least 10 seconds continuously under the following recommended conditions.

Engine speed : Non-turbocharger  
M/T 2,200 - 2,600 rpm  
A/T 1,600 - 2,500 rpm  
Turbocharger  
M/T 2,000 - 2,500 rpm  
A/T 1,600 - 2,500 rpm

Intake

manifold vacuum: Non-turbocharger  
M/T -37.3 to -48.0 kPa  
(-280 to -360 mmHg,  
-11.02 to -14.17 inHg)  
A/T -48.0 to -61.3 kPa  
(-360 to -460 mmHg,  
-14.17 to -18.11 inHg)

Turbocharger

M/T -33.3 to -46.7 kPa  
(-250 to -350 mmHg,  
-9.84 to -13.78 inHg)  
A/T -53.3 to -66.7 kPa  
(-400 to -500 mmHg,  
-15.75 to -19.69 inHg)

Gear position : Suitable position (except "N" or  
"P" position)


- 3) Stop the vehicle, turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 4) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

**Even if a Diagnostic Trouble Code is not detected, perform the above test drive at least one more time.**







# TROUBLE DIAGNOSIS FOR DTC P0500

## Vehicle Speed Sensor (VSS) (DTC: 0104) (Cont'd)

EC-VSS-01

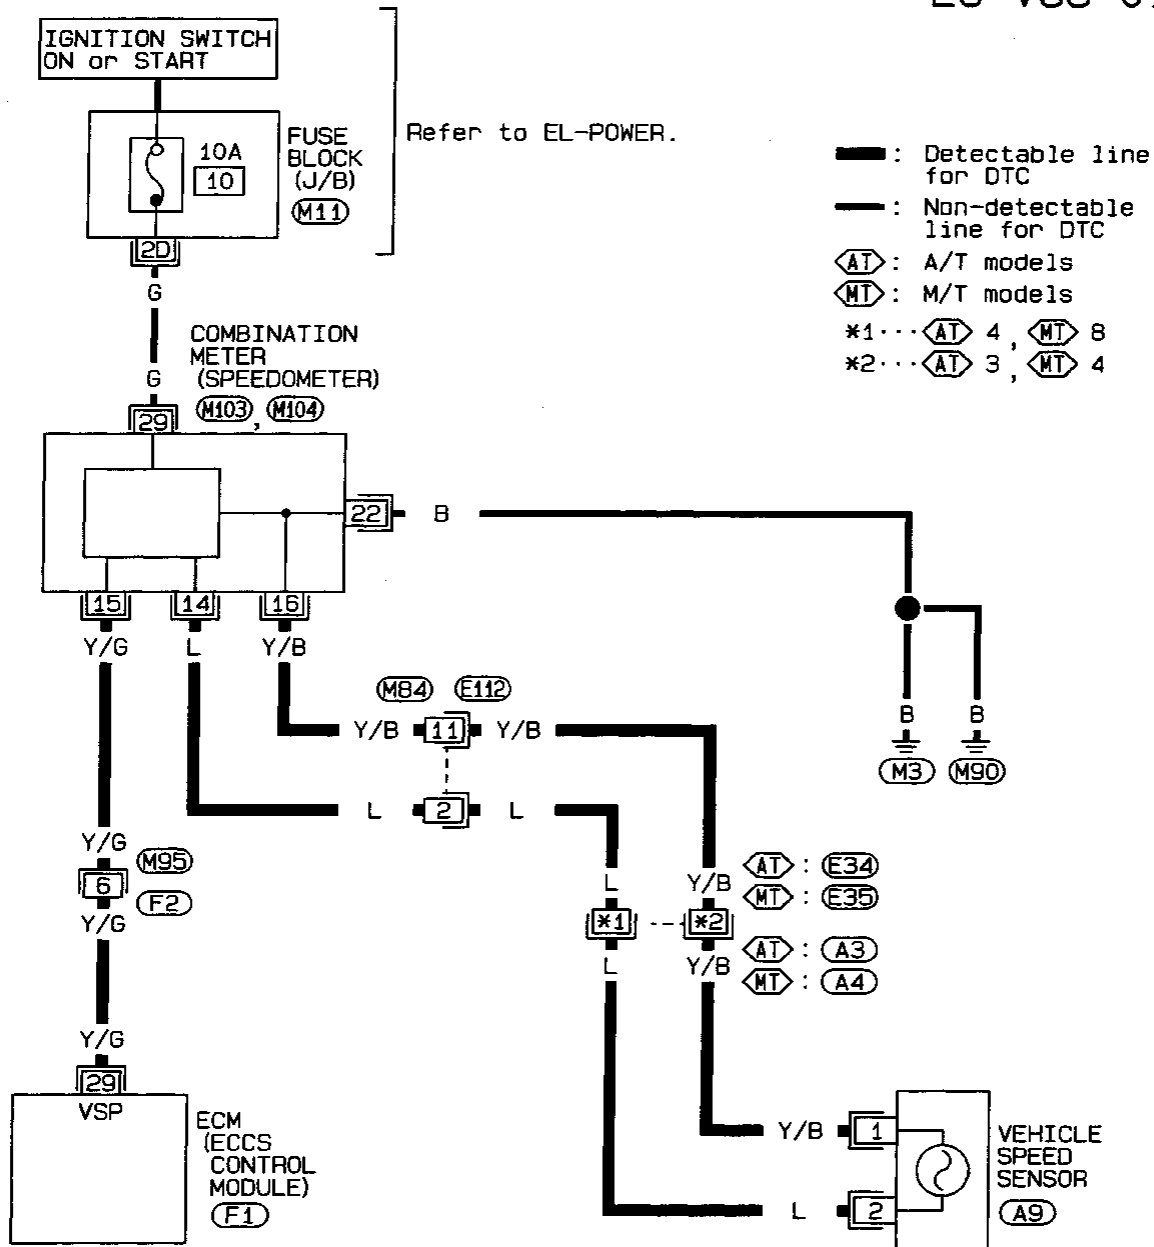


GI  
MA  
EM  
LC  
**EC**  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

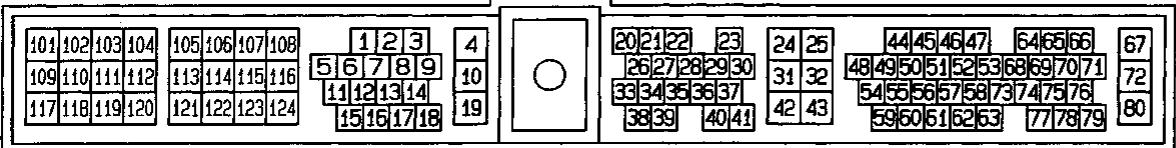


# TROUBLE DIAGNOSIS FOR DTC P0500

## Vehicle Speed Sensor (VSS) (DTC: 0104) (Cont'd)

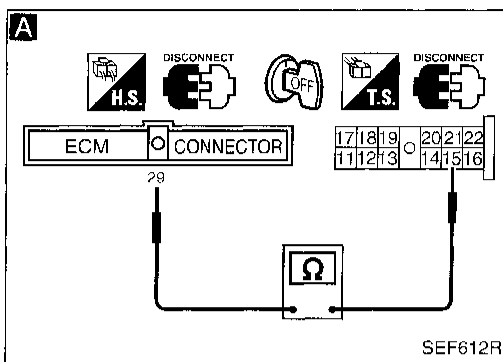


### DIAGNOSTIC PROCEDURE

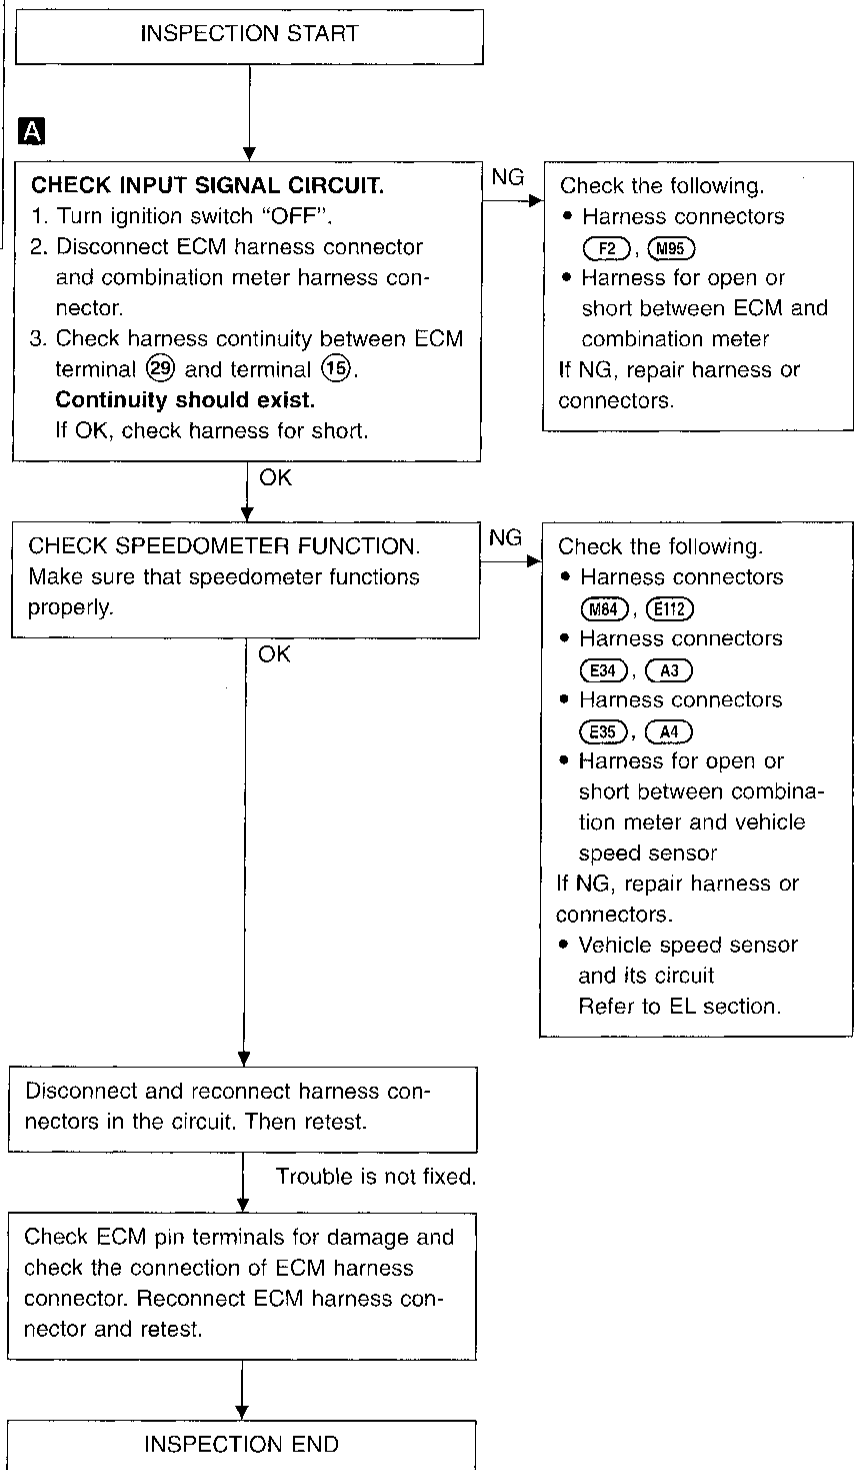


**Idle Air Control Valve (IACV) — Auxiliary Air Control (AAC) Valve (DTC: 0205)**

**SYSTEM DESCRIPTION**

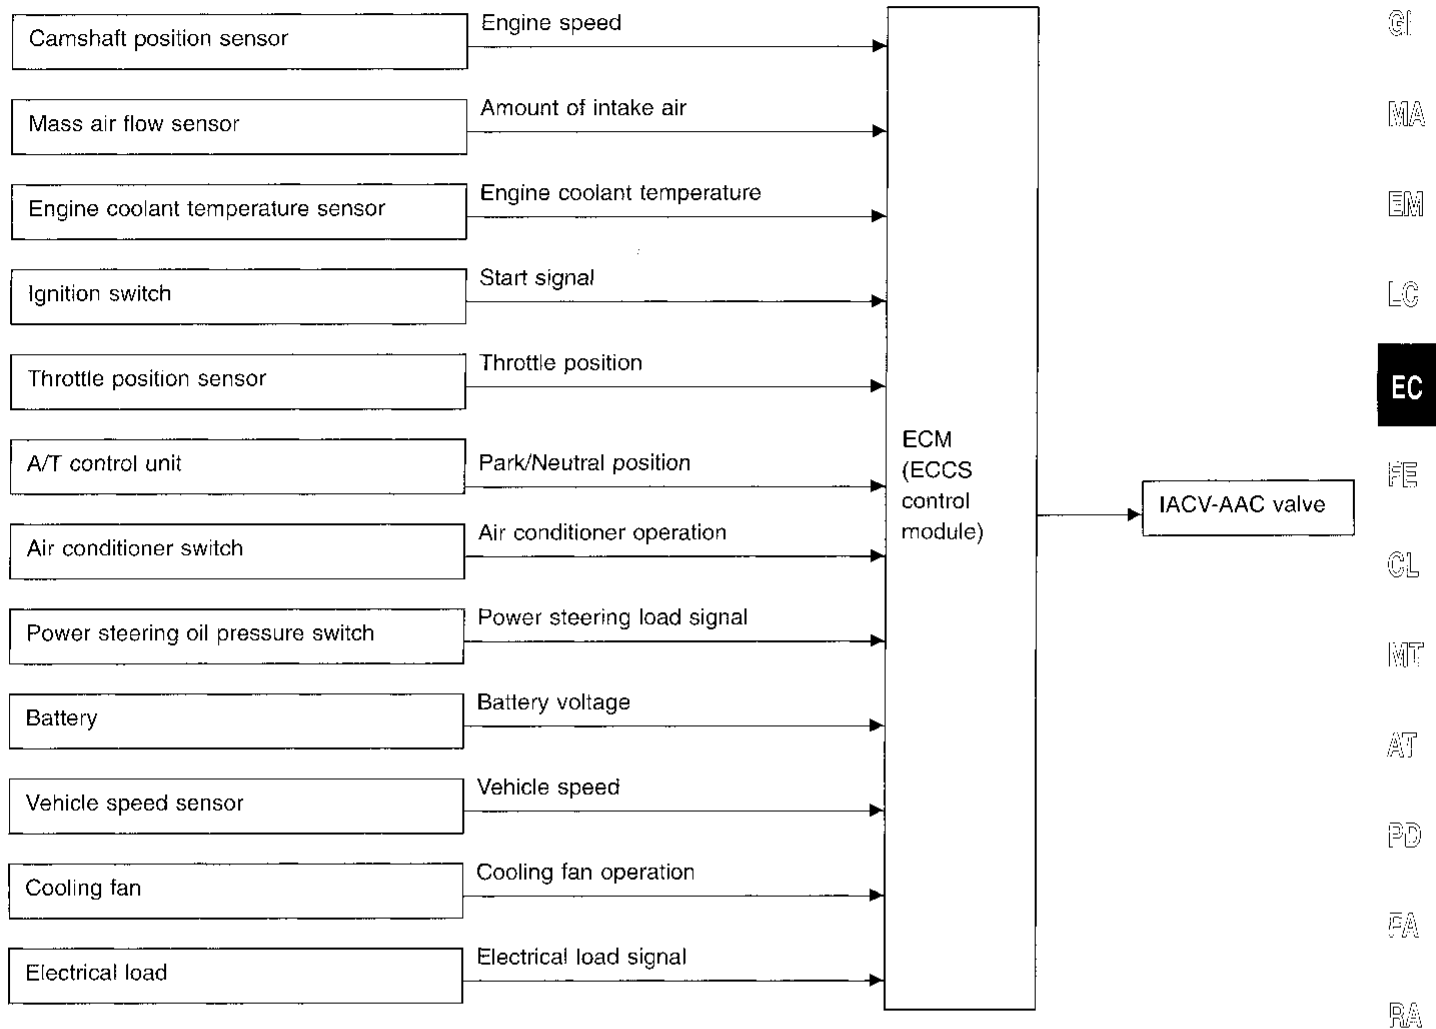

This system automatically controls engine idle speed to a specified level. Idle speed is controlled through fine adjustment of the amount of air which by-passes the throttle valve via IACV-AAC valve. The IACV-AAC valve repeats ON/OFF operation according to the signal sent from the ECM. The camshaft position sensor detects the actual engine speed and sends a signal to the ECM. The ECM then controls the ON/OFF time of the IACV-AAC valve so that engine speed coincides with the target value memorized in ECM. The target engine speed is the lowest speed at which the engine can operate steadily. The optimum value stored in the ECM is determined by taking into consideration various engine conditions, such as during warm up, deceleration, and engine load (air conditioner, power steering and cooling fan operation).

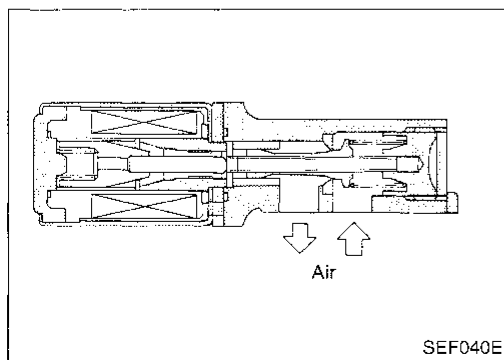

**COMPONENT DESCRIPTION**  
**IACV-AAC valve**

The IACV-AAC valve is moved by ON/OFF pulses from the ECM. The longer the ON pulse, the greater the amount of air that will flow through the valve. The more air that flows through the valve, the higher the idle speed.


## TROUBLE DIAGNOSIS FOR DTC P0505

### Idle Air Control Valve (IACV) — Auxiliary Air Control (AAC) Valve (DTC: 0205) (Cont'd)


Diagnostic Trouble Code No.	Malfunction is detected when ....	Check Items (Possible Cause)
P0505 0205	A) The IACV-AAC valve does not operate properly.	<ul style="list-style-type: none"> <li>• Harness or connectors (The IACV-AAC valve circuit is open.)</li> <li>• IACV-AAC valve</li> </ul>
	B) The IACV-AAC valve does not operate properly.	<ul style="list-style-type: none"> <li>• Harness or connectors (The IACV-AAC valve circuit is shorted.)</li> <li>• IACV-AAC valve</li> </ul>

### DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE


#### Procedure for malfunction A

-  1) Turn ignition switch "ON".  
 2) Select "DATA MONITOR" mode with CONSULT.  
 3) Wait at least 2 seconds.


OR

-  1) Turn ignition switch "ON" and wait at least 2 seconds.  
 2) Select "MODE 3" with GST.


OR

-  1) Turn ignition switch "ON" and wait at least 2 seconds.  
 2) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".  
 3) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.


#### Procedure for malfunction B

-  1) Start engine and warm it up sufficiently.  
 2) Turn ignition switch "OFF" and wait at least 5 seconds.  
 3) Turn ignition switch "ON" again and select "DATA MONITOR" mode with CONSULT.  
 4) Start engine and run it for at least 1 minute at idle speed.

OR

-  1) Start engine and warm it up sufficiently.  
 2) Turn ignition switch "OFF" and wait at least 5 seconds.  
 3) Start engine again and run it for at least 1 minute at idle speed.  
 4) Select "MODE 3" with GST.




OR

-  1) Start engine and warm it up sufficiently.  
 2) Turn ignition switch "OFF" and wait at least 5 seconds.  
 3) Start engine again and run it for at least 1 minute at idle speed.  
 4) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".  
 5) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

# TROUBLE DIAGNOSIS FOR DTC P0505

## Idle Air Control Valve (IACV) — Auxiliary Air Control (AAC) Valve (DTC: 0205) (Cont'd)

EC-AAC/V-01

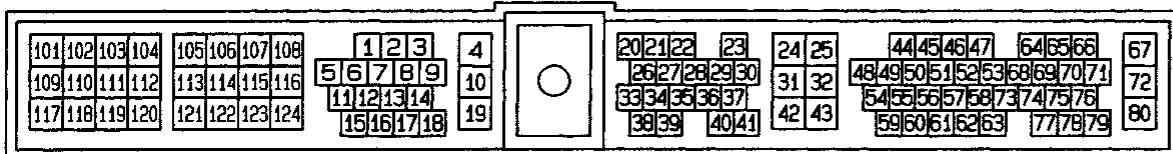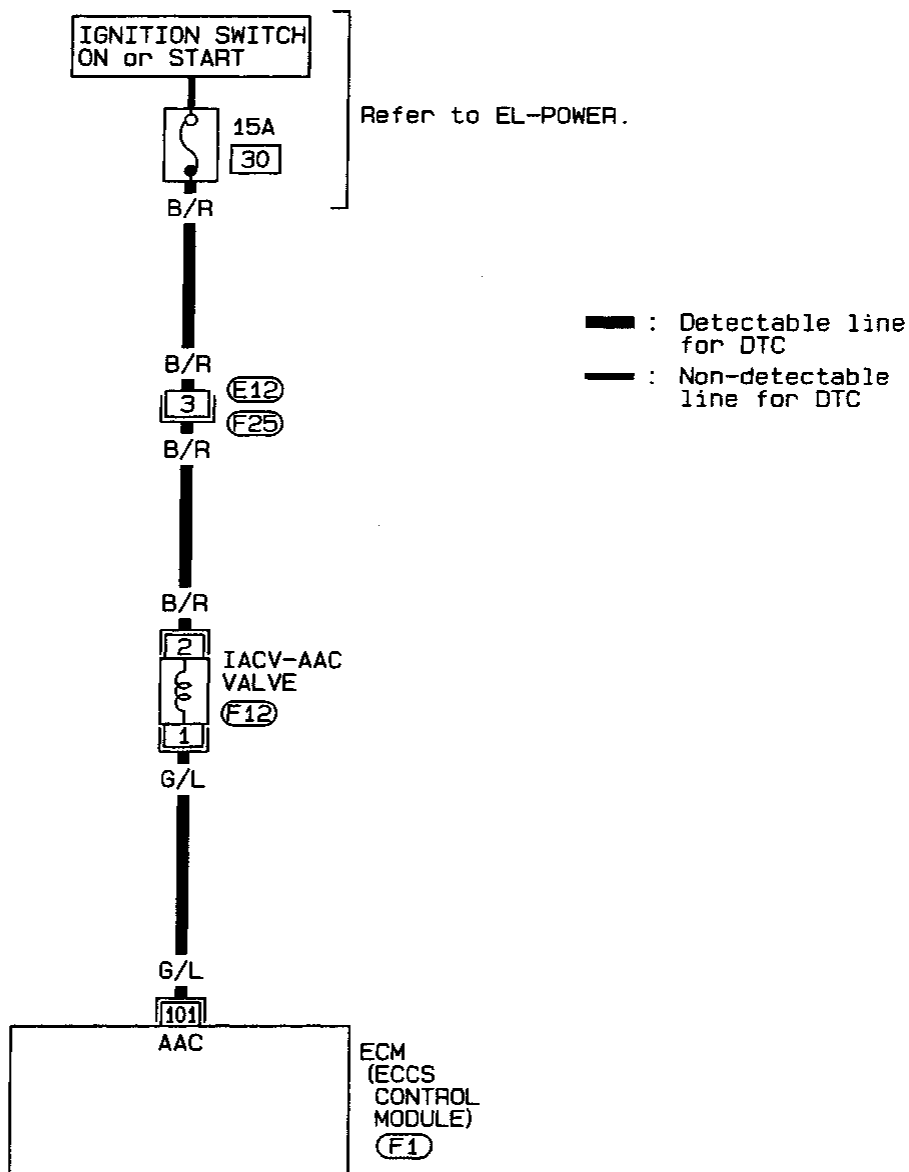


CI  
 MA  
 EM  
 LC  
**EC**  
 FE  
 CL  
 MT  
 AT  
 PD  
 FA  
 RA  
 BR  
 ST  
 RS  
 BT  
 HA  
 EL  
 DX

# TROUBLE DIAGNOSIS FOR DTC P0505

## Idle Air Control Valve (IACV) — Auxiliary Air Control (AAC) Valve (DTC: 0205) (Cont'd)

### DIAGNOSTIC PROCEDURE

INSPECTION START

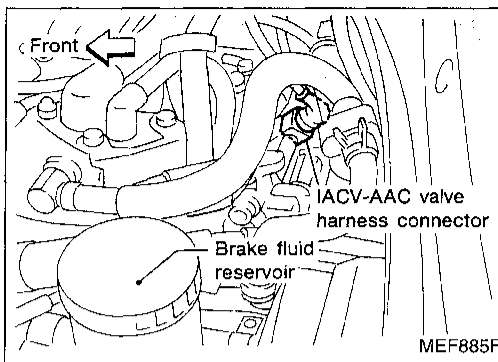

**A**

**CHECK POWER SUPPLY.**

1. Stop engine.
2. Disconnect IACV-AAC valve harness connector.
3. Turn ignition switch "ON".
4. Check voltage between terminal ② and ground with CONSULT or tester.


**Voltage: Battery voltage**

NG

Check the following.

- Harness connectors (E12, F25)
- 15A fuse
- Harness for open or short between IACV-AAC valve and fuse

If NG, repair harness or connectors.

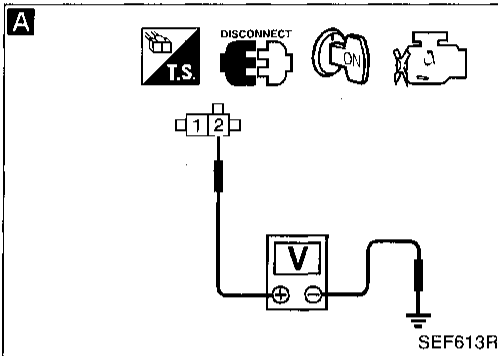

**B**

**CHECK OUTPUT SIGNAL CIRCUIT.**


1. Turn ignition switch "OFF".
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal ⑩ and terminal ①.

**Continuity should exist.**

If OK, check harness for short.

NG

Repair harness or connectors.

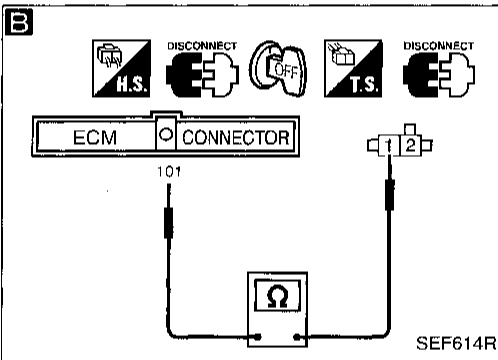

**CHECK COMPONENT (IACV-AAC valve).**

Refer to "COMPONENT INSPECTION" below.

NG

Replace IACV-AAC valve.

OK

Disconnect and reconnect harness connectors in the circuit. Then retest.

Trouble is not fixed.

Check ECM pin terminals for damage and check the connection of ECM harness connector. Reconnect ECM harness connector and retest.

INSPECTION END

### COMPONENT INSPECTION

#### IACV-AAC valve


Disconnect IACV-AAC valve harness connector.

- Check IACV-AAC valve resistance.

**Resistance:**

**Approximately 10Ω [at 25°C (77°F)]**

- Check plunger for seizing or sticking.
- Check for broken spring.

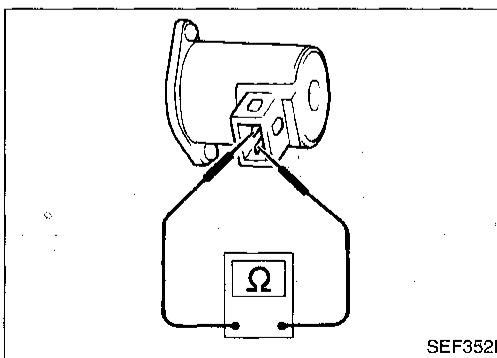




# TROUBLE DIAGNOSIS FOR DTC P0600

## A/T Control (DTC: P0600)

These circuit lines are used to control the smooth shifting up and down of A/T during the hard acceleration/deceleration.  
Voltage signals are exchanged between ECM and A/T control unit.

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0600	<ul style="list-style-type: none"> <li>• ECM receives incorrect voltage from A/T control unit continuously.</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connectors (The circuit between ECM and A/T control unit is open or shorted.)</li> <li>• A/T control unit</li> </ul>

\*: This DTC can be detected only by "DATA MONITOR (AUTO TRIG)" with CONSULT.

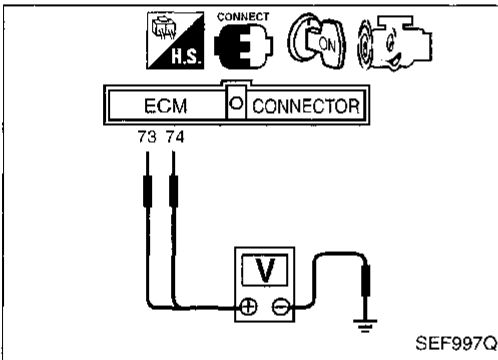

### OVERALL FUNCTION CHECK

Use this procedure to check the overall function of the A/T control. During this check, a DTC might not be confirmed.

- 1) Turn ignition switch "ON".
- 2) Start engine and let it idle.
- 3) Check voltage between  
ECM terminal ⑦③ and ground.  
ECM terminal ⑦④ and ground.





**Voltage: Approximately 7V**

GI  
 MA  
 EM  
 LC  
**EC**  
 FE  
 CL  
 MT  
 AT  
 PD  
 FA  
 RA  
 BR  
 ST  
 PS  
 BT  
 HA  
 EL  
 DX

# TROUBLE DIAGNOSIS FOR DTC P0600

## A/T Control (DTC: P0600) (Cont'd)





EC-AT/C-01

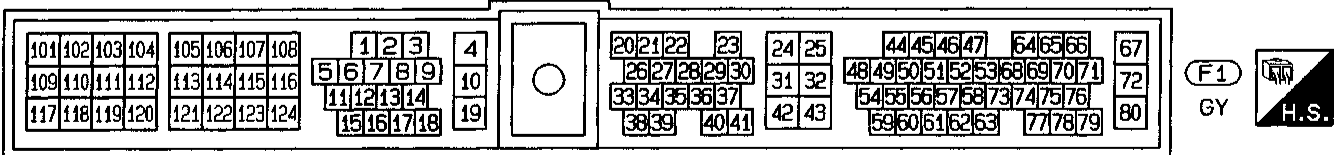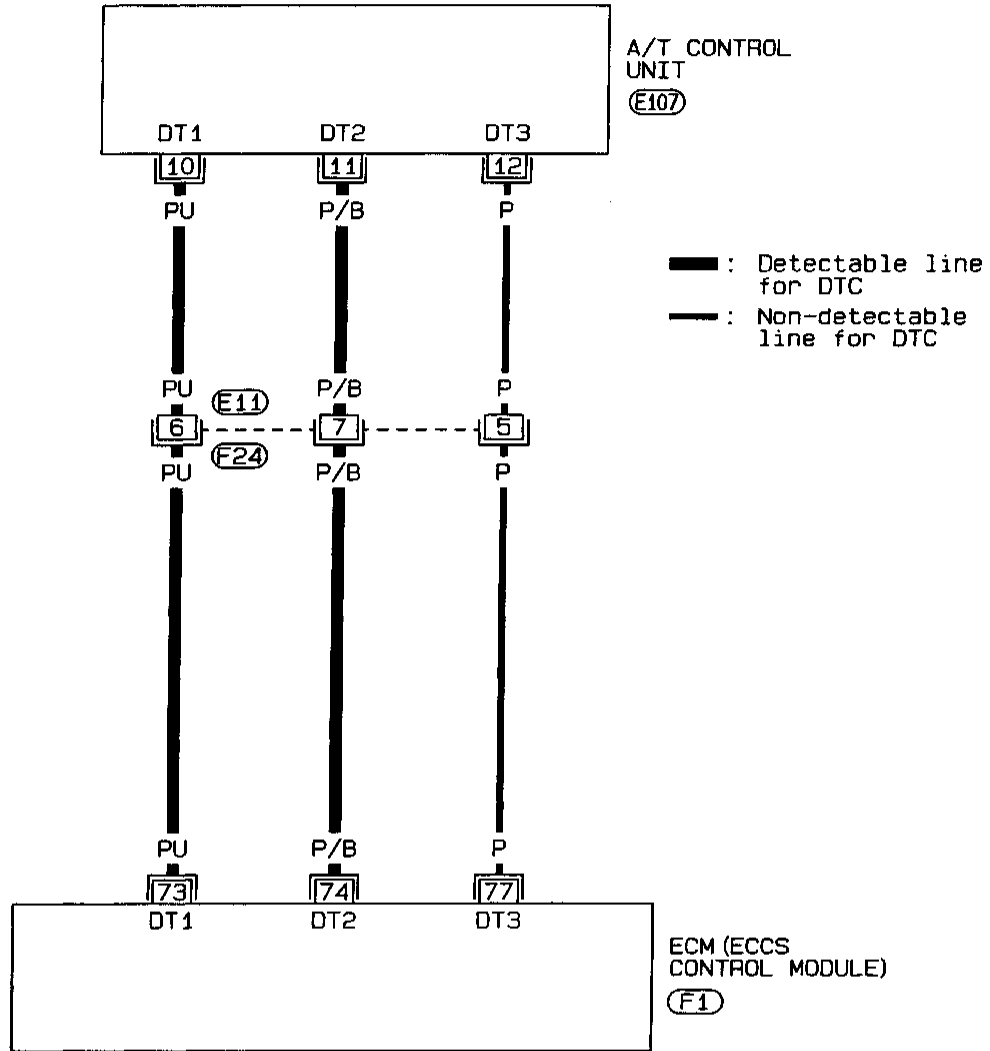

# TROUBLE DIAGNOSIS FOR DTC P0600

## A/T Control (DTC: P0600) (Cont'd)

### DIAGNOSTIC PROCEDURE

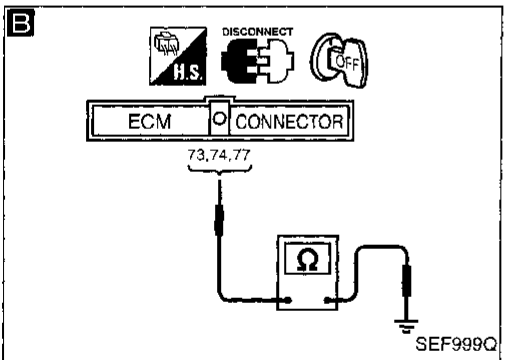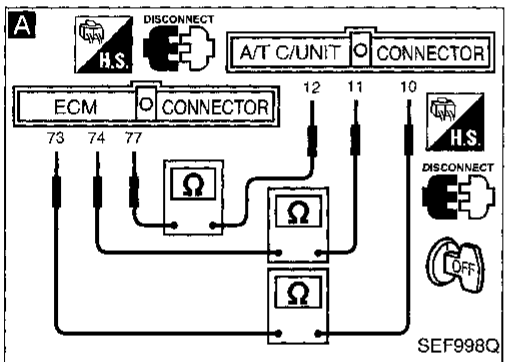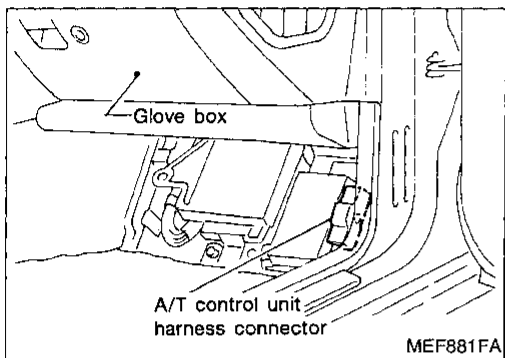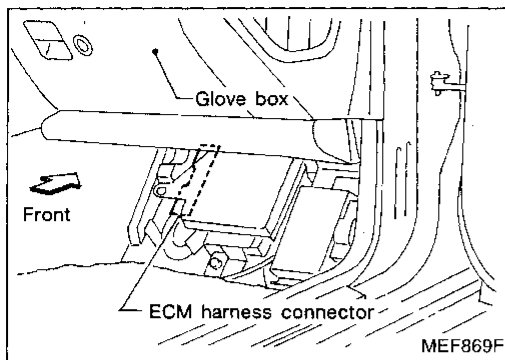

INSPECTION START

**A**  
**CHECK INPUT SIGNAL CIRCUIT.**  
 1. Turn ignition switch "OFF".  
 2. Disconnect ECM harness connector and A/T control unit harness connector.  
 3. Check harness continuity between ECM terminal (73) and terminal (10), ECM terminal (74) and terminal (11), ECM terminal (77) and terminal (12).  
**Continuity should exist.**  
 If OK, check harness for short.

NG  
 Check the following.  
 • Harness connectors (E11), (F24)  
 • Harness for open or short between ECM and A/T control unit  
 If NG, repair harness or connectors.

**B**  
**CHECK INPUT SIGNAL CIRCUIT.**  
 Check harness continuity between ECM terminal (73) and ground, ECM terminal (74) and ground, ECM terminal (77) and ground.  
**Continuity should not exist.**  
 If OK, check harness for short.

NG  
 Repair harness or connectors.


OK  
 Disconnect and reconnect harness connectors in the circuit. Then retest.

Trouble is not fixed.  
 Check ECM and A/T control unit pin terminals for damage and check the connection of ECM and A/T control unit harness connectors. Reconnect ECM and A/T control unit harness connectors and retest.

INSPECTION END

GI  
 MA  
 EM  
 LC  
**EC**  
 FE  
 CL  
 MT  
 AT  
 PD  
 FA  
 RA  
 BR  
 ST  
 RS  
 BT  
 HA  
 EL  
 IDX

# TROUBLE DIAGNOSIS FOR DTC P0605

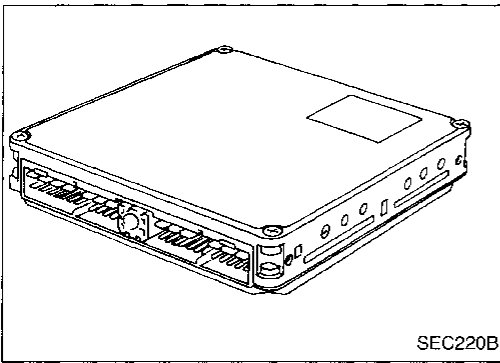

## Engine Control Module (ECM)-ECCS Control Module (DTC: 0301)

The ECM consists of a microcomputer, diagnostic test mode selector, and connector for signal input and output and for power supply. The unit controls the engine.

Diagnostic Trouble Code No.	Malfuction is detected when ....	Check Item (Possible Cause)
P0605 0301	<ul style="list-style-type: none"> <li>• ECM calculation function is malfunctioning.</li> </ul>	<ul style="list-style-type: none"> <li>• ECM (ECCS control module)</li> </ul>

### DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE



- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT.
- 3) Start engine and wait at least 30 seconds.

OR




- 1) Turn ignition switch "ON".
- 2) Select "Mode 3" with GST.
- 3) Start engine and wait at least 30 seconds.

OR




- 1) Turn ignition switch "ON".
- 2) Start engine and wait at least 30 seconds.
- 3) Turn ignition switch "OFF" and wait at least 5 seconds.
- 4) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

### DIAGNOSTIC PROCEDURE

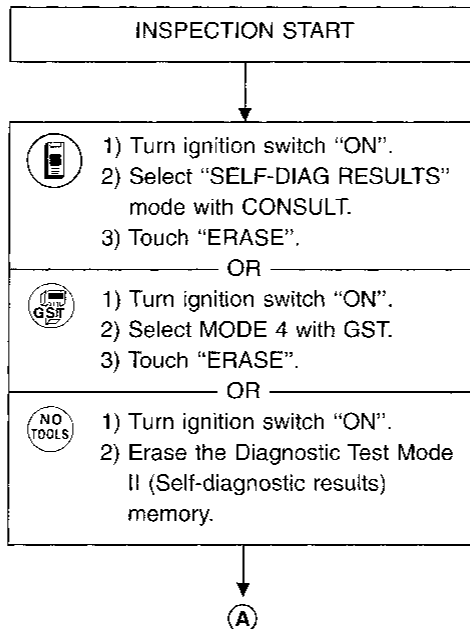

# TROUBLE DIAGNOSIS FOR DTC P0605

## Engine Control Module (ECM)-ECCS Control Module (DTC: 0301) (Cont'd)

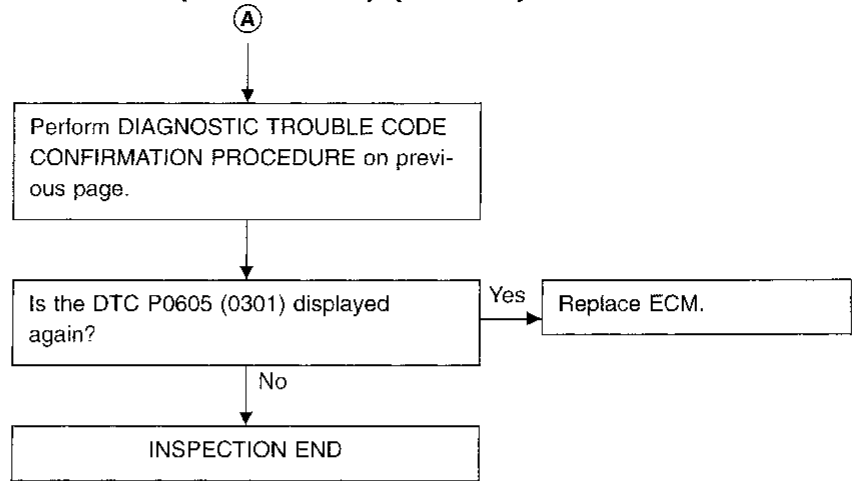

GI

MA

EM

LC

**EC**

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL




IDX

# TROUBLE DIAGNOSIS FOR DTC P0705

## Park/Neutral Position Switch (DTC: 1003)

When the gear position is in "P" (A/T models only) or "N", park/neutral position is "ON". For M/T models, the "ON" signal (or line continuity) is detected by the ECM, whereas the A/T control unit detects it for A/T models. The A/T control unit then sends the park/neutral signal to ECM.

Diagnostic Trouble Code No.	Malfunction is detected when ....	Check Items (Possible Cause)
P0705 1003	<ul style="list-style-type: none"> <li>The signal of the park/neutral position switch is not changed in the process of engine starting and driving.</li> </ul>	<ul style="list-style-type: none"> <li>Harness or connectors (The neutral position switch or inhibitor switch circuit is open or shorted.)</li> <li>Harness or connectors (The circuit between ECM and A/T control unit is open or shorted.)</li> <li>Neutral position switch</li> <li>Inhibitor switch</li> <li>A/T control unit</li> </ul>

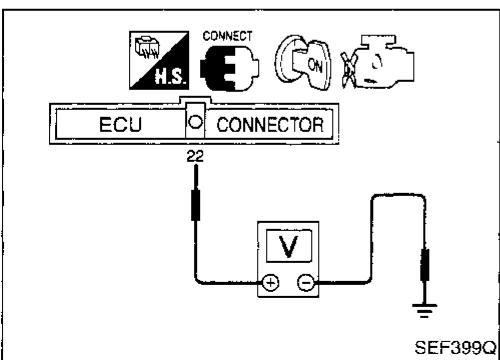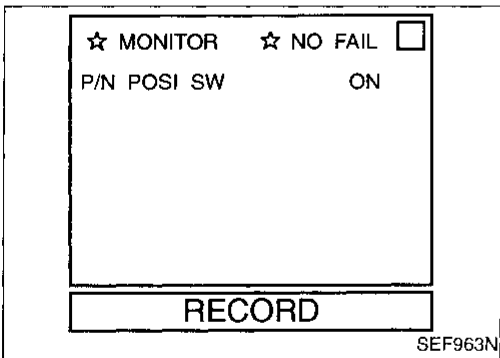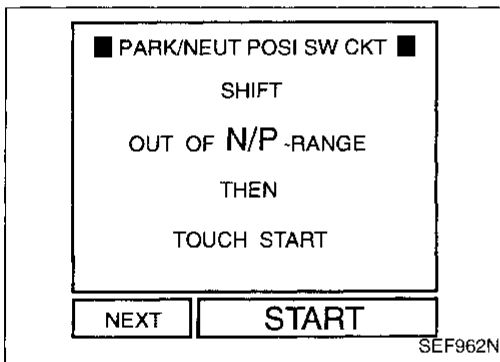

### OVERALL FUNCTION CHECK

Use this procedure to check the overall function of the park/neutral position switch circuit. During this check, a DTC might not be confirmed.

- Turn ignition switch "ON".
- Perform "PARK/NEUT POSI SW CKT" in "FUNCTION TEST" mode with CONSULT.

OR

- Select "P/N POSI SW" in "DATA MONITOR" mode with CONSULT.
- Check the "P/N POSI SW" signal in the following conditions.

Condition (Gear position)	Known good signal
"P" (A/T only) and "N" position	ON
Except the above position	OFF

OR




- Turn ignition switch "ON".
- Check voltage between ECM terminal ②② and body ground in the following conditions.

Condition (Gear position)	Voltage (V) (Known good data)
"P" (A/T only) and "N" position	Approx. 0
Except the above position	Approx. 5

# TROUBLE DIAGNOSIS FOR DTC P0705

## Park/Neutral Position Switch (DTC: 1003) (Cont'd)

### EC-PNP/SW-01

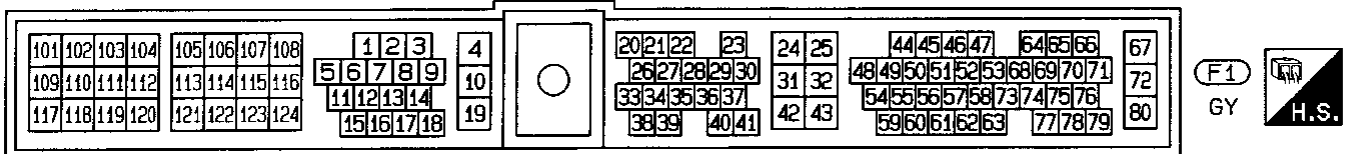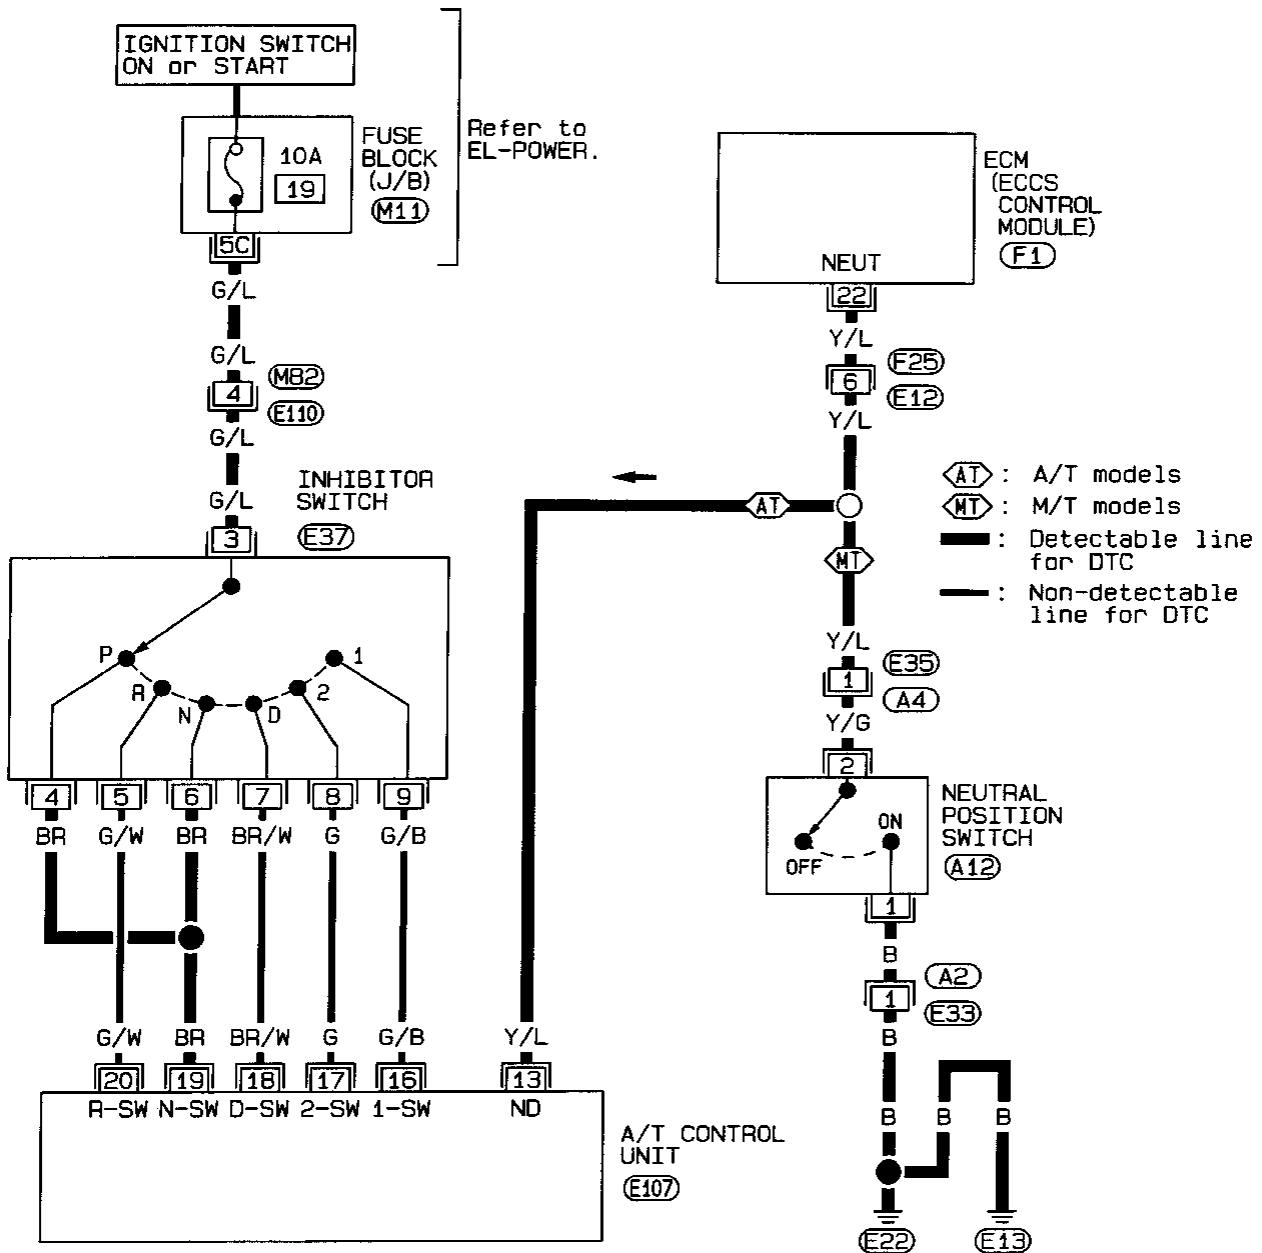

GI  
MA  
EM  
LC  
**EC**  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

# TROUBLE DIAGNOSIS FOR DTC P0705

## Park/Neutral Position Switch (DTC: 1003) (Cont'd)

### DIAGNOSTIC PROCEDURE

#### Inhibitor switch (A/T models)

INSPECTION START

**A**

#### CHECK POWER SUPPLY.

1. Disconnect inhibitor switch harness connector.
2. Turn ignition switch "ON".
3. Check voltage between terminal (3) and ground with CONSULT or tester.  
**Voltage: Battery voltage**

NG

Check the following.

- Harness connector (M82, E110)
  - Harness connector (M11)
  - 10A fuse
  - Harness for open or short between inhibitor switch and fuse
- If NG, repair harness or connectors.

OK

**B**

#### CHECK INPUT SIGNAL CIRCUIT-I.

1. Turn ignition switch "OFF".
  2. Disconnect A/T control unit harness connector.
  3. Check harness continuity between A/T control unit terminal (19) and terminals (4, 6).  
**Continuity should exist.**
- If OK, check harness for short.

NG

Repair harness or connectors.

OK

**C**

#### CHECK INPUT SIGNAL CIRCUIT-II.

1. Disconnect ECM harness connector.
  2. Check harness continuity between ECM terminal (22) and terminal (13).  
**Continuity should exist.**
- If OK, check harness for short.

NG

Check the following.

- Harness connectors (E12, F25)
  - Harness for open or short between ECM and A/T control unit
- If NG, repair harness or connectors.

OK

#### CHECK COMPONENT

(Inhibitor switch).  
Refer to AT section.

NG

Replace inhibitor switch.





OK

Disconnect and reconnect harness connectors in the circuit. Then retest.

Trouble is not fixed.

Check ECM pin terminals for damage and check the connection of ECM harness connector. Reconnect ECM harness connector and retest.

INSPECTION END

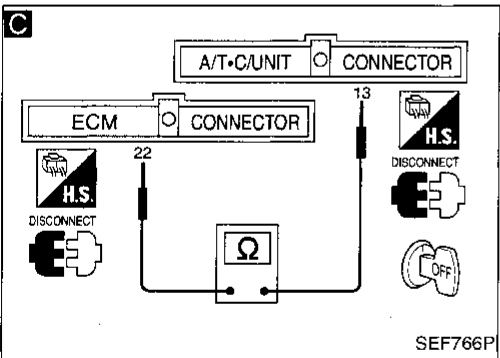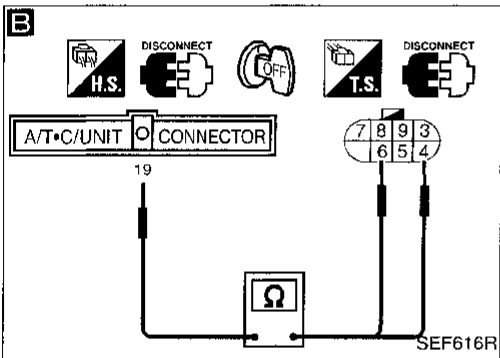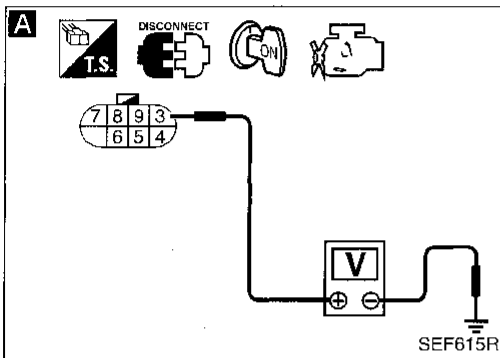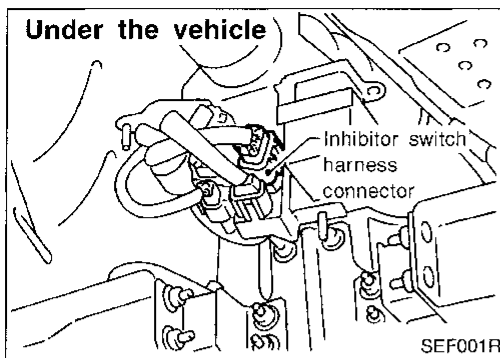





# TROUBLE DIAGNOSIS FOR DTC P0705

## Park/Neutral Position Switch (DTC: 1003) (Cont'd)

### DIAGNOSTIC PROCEDURE

Neutral position switch (M/T models)

INSPECTION START

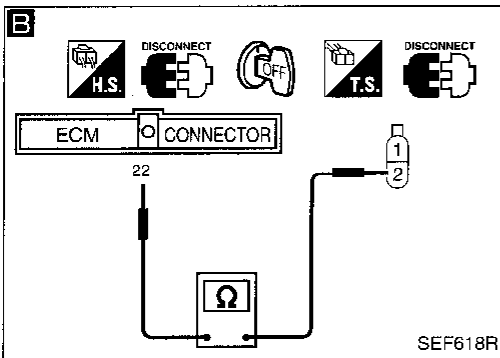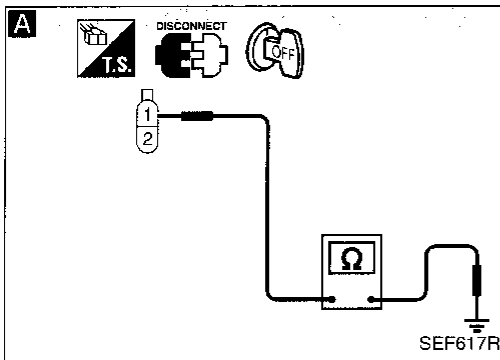

**A**  
CHECK GROUND CIRCUIT.  
1. Disconnect neutral position switch harness connector.  
2. Check harness continuity between terminal ① and body ground.  
**Continuity should exist.**  
If OK, check harness for short.

NG → Check the following.  
• Harness connectors (A2), (E33)  
• Harness for open or short between neutral position switch and body ground  
If NG, repair harness or connectors.

**B**  
CHECK INPUT SIGNAL CIRCUIT.  
1. Disconnect ECM harness connector.  
2. Check harness continuity between ECM terminal ② and terminal ②.  
**Continuity should exist.**  
If OK, check harness for short.

NG → Check the following.  
• Harness connectors (F25), (E12)  
• Harness connectors (E35), (A4)  
• Harness for open or short between ECM and neutral position switch  
If NG, repair harness or connectors.

CHECK COMPONENT (Neutral position switch). Refer to MT section.

NG → Replace neutral position switch.

OK → Disconnect and reconnect harness connectors in the circuit. Then retest.


Trouble is not fixed.  
Check ECM pin terminals for damage and check the connection of ECM harness connector. Reconnect ECM harness connector and retest.

INSPECTION END

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
DX


**Wastegate Valve Control Solenoid Valve (DTC: 1306, 1307)**

**SYSTEM DESCRIPTION**

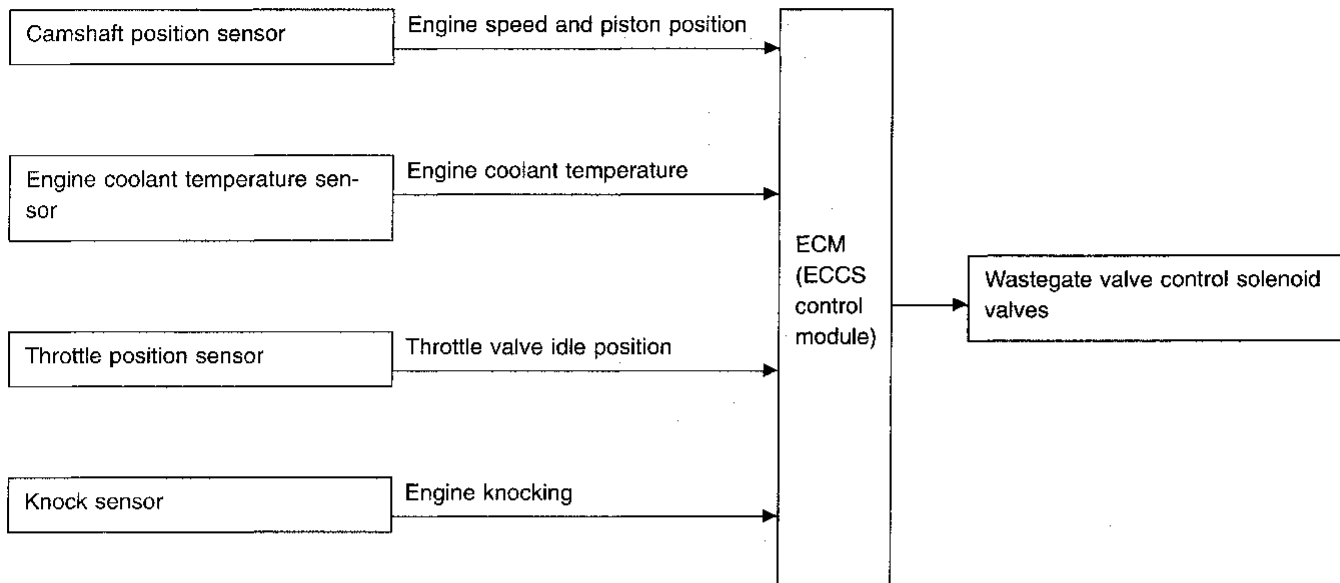

**OPERATION**

Engine conditions	Wastegate valve control solenoid valves	Wastegate valve actuators	Turbocharger pressure
<ul style="list-style-type: none"> <li>• Engine running or cranking</li> <li>• Throttle position sensor output voltage: more than 0.1V</li> <li>• Judged fuel quality: hi octane (Detecting no sign of knock)</li> <li>• Engine coolant temperature is more than 55°C (131°F)</li> </ul>	ON	Lead to suction pipe or turbocharger compressor outlet	HIGH
<ul style="list-style-type: none"> <li>• Except the above</li> </ul>	OFF	Lead to turbocharger compressor outlet	LOW

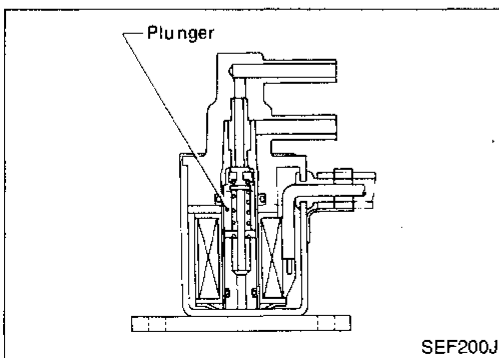

**COMPONENT DESCRIPTION**

The solenoid valve responds to the ON/OFF signal from the ECM. When it is ON, a vacuum signal from the suction pipe or compressor outlet is fed into the wastegate valve actuator. The actuator is hard to open at this time. When the control module sends an OFF signal, the coil pulls the plunger upward and cuts the route to the suction pipe.

## TROUBLE DIAGNOSIS FOR DTC P1150, P1155

### Wastegate Valve Control Solenoid Valve (DTC: 1306, 1307) (Cont'd)

\* Freeze frame data is not stored in the ECM for the wastegate valve control solenoid valve. The MIL will not light up for a wastegate valve solenoid valve malfunction.

Diagnostic Trouble Code No.	Malfunction is detected when ....	Check Items (Possible Cause)
P1150 1306	<ul style="list-style-type: none"> <li>An excessively low or high voltage signal from the wastegate valve control solenoid valve for right bank is sent to ECM.</li> </ul>	<ul style="list-style-type: none"> <li>Harness or connectors (Wastegate valve control solenoid valve circuit is open or shorted.)</li> <li>Wastegate valve control solenoid valve (Right bank)</li> </ul>
P1155 1307	<ul style="list-style-type: none"> <li>An excessively low or high voltage signal from the wastegate valve control solenoid valve for left bank is sent to ECM.</li> </ul>	<ul style="list-style-type: none"> <li>Harness or connectors (Wastegate valve control solenoid valve circuit is open or shorted.)</li> <li>Wastegate valve control solenoid valve (Left bank)</li> </ul>

### DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE



- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT.
- 3) Wait at least 5 seconds.

OR



- 1) Turn ignition switch "ON" and wait at least 5 seconds.
- 2) Select "MODE 3" with GSF.

OR






- 1) Turn ignition switch "ON" and wait at least 5 seconds.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds, and then turn "ON".
- 3) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

# TROUBLE DIAGNOSIS FOR DTC P1150, P1155

## Wastegate Valve Control Solenoid Valve (DTC: 1306, 1307) (Cont'd)







EC-WG/V-01

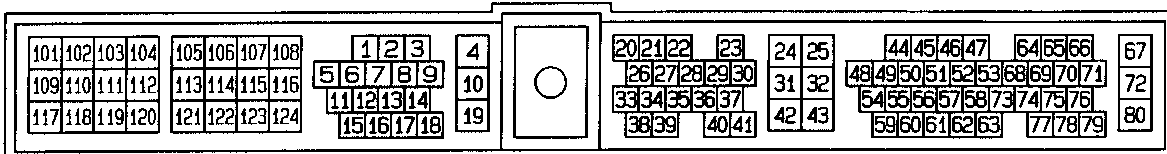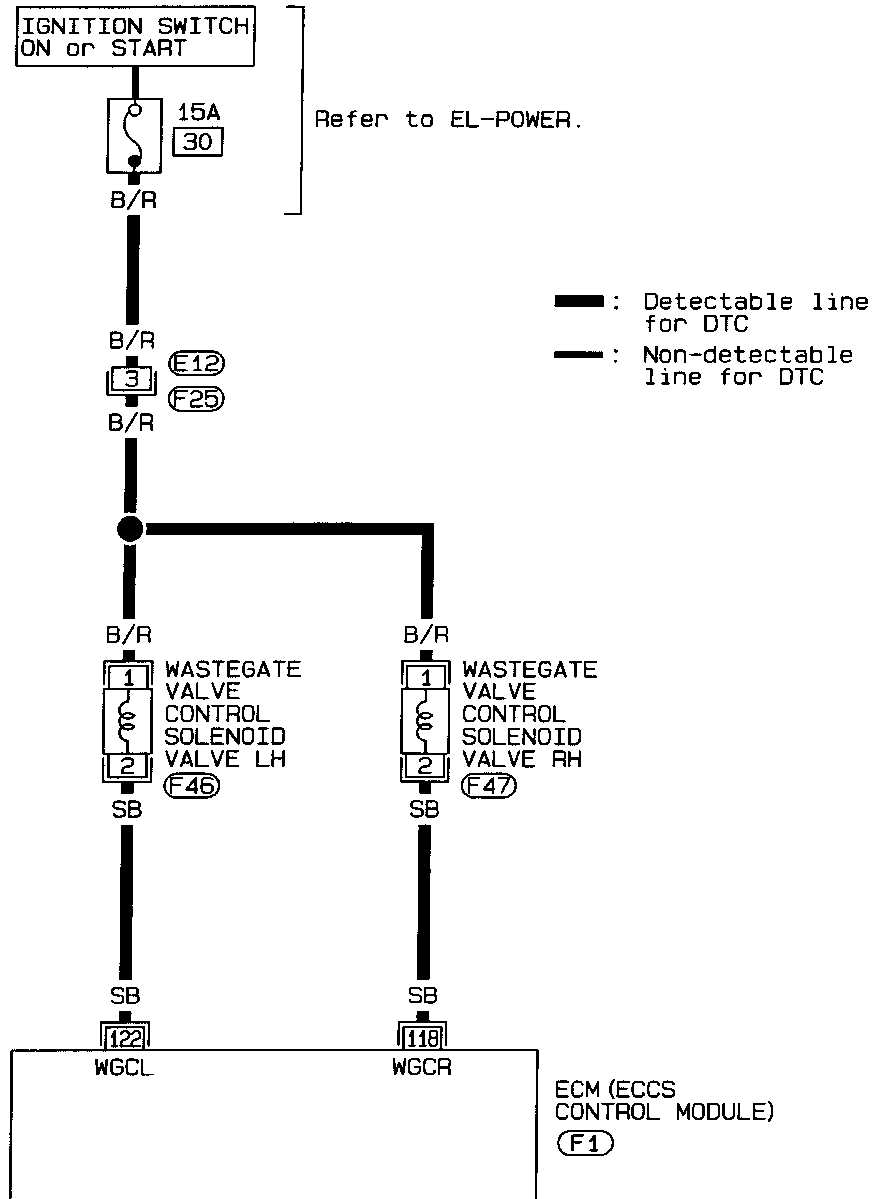

# TROUBLE DIAGNOSIS FOR DTC P1150, P1155

## Wastegate Valve Control Solenoid Valve (DTC: 1306, 1307) (Cont'd)

### DIAGNOSTIC PROCEDURE

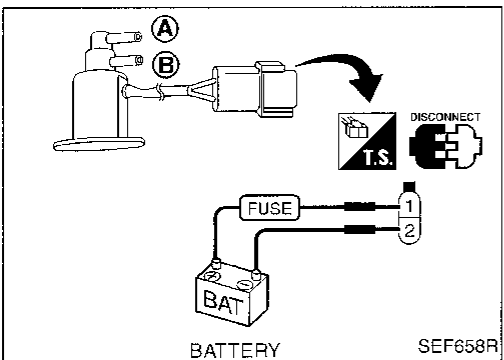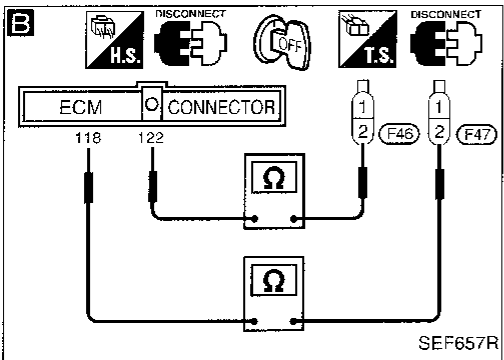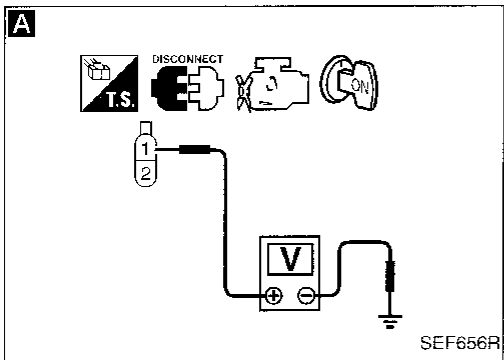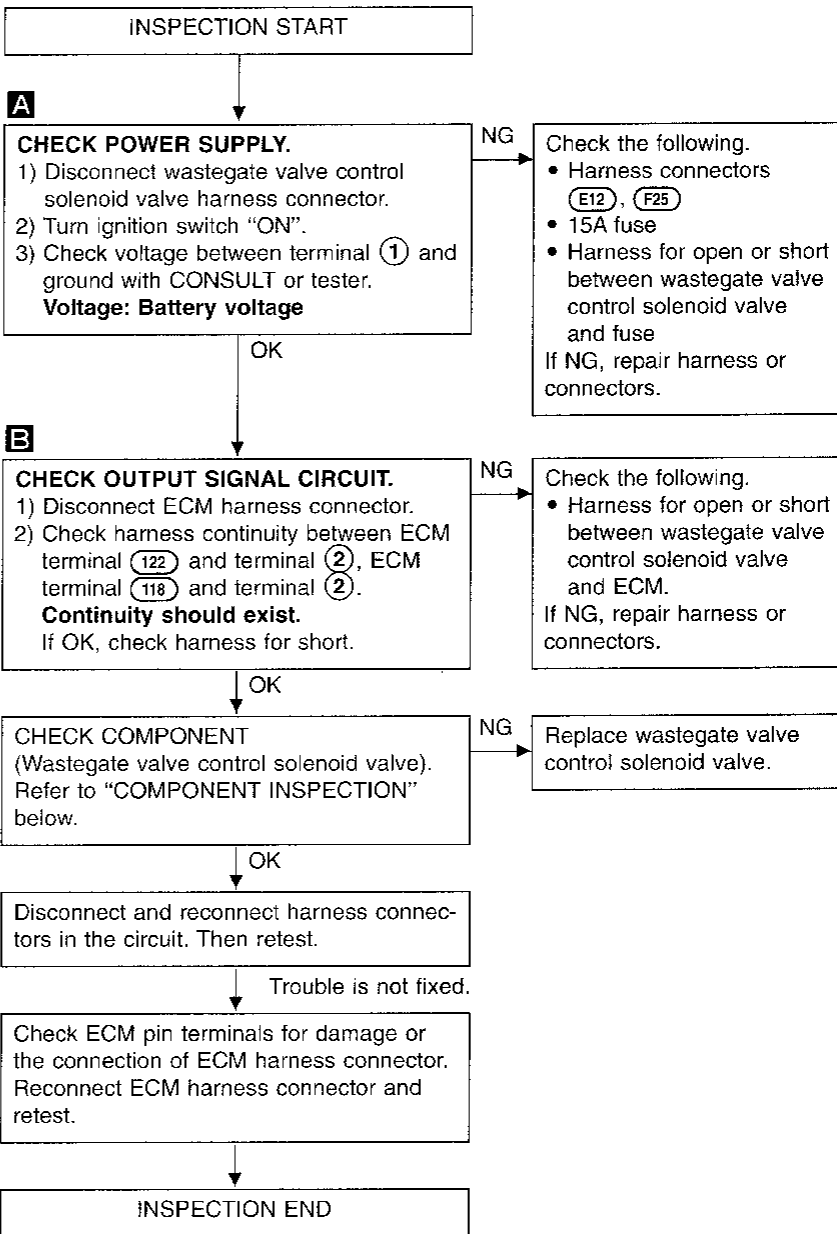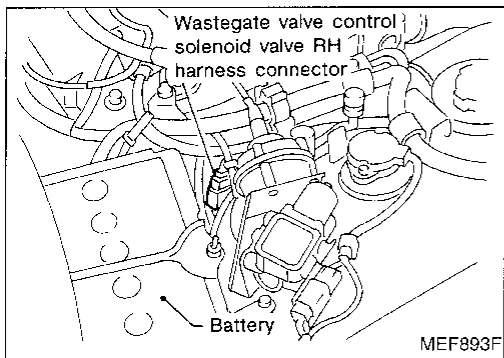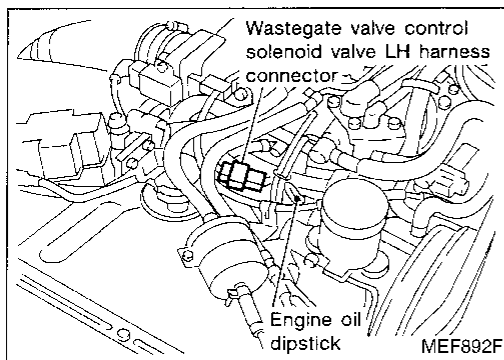

### COMPONENT INSPECTION

#### Wastegate valve control solenoid valve


Check air passage continuity.

Condition	Air passage continuity between ① and ②
12V direct current supply between terminals ① and ②	Yes
No supply	No

If NG, replace solenoid valve.

GI  
WA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX


# TROUBLE DIAGNOSIS FOR DTC P1160

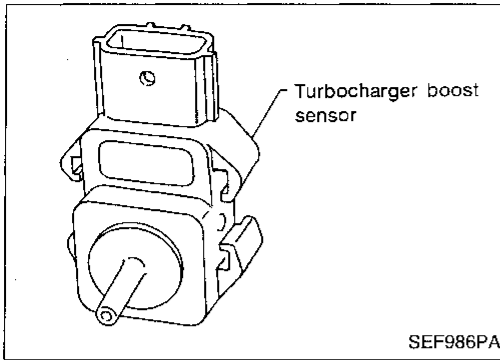

## Turbocharger Boost Sensor (DTC: 0206)

### COMPONENT DESCRIPTION

The turbocharger boost sensor detects boost pressure upstream of the throttle body. The pressure signal is transmitted to the ECM for engine control.

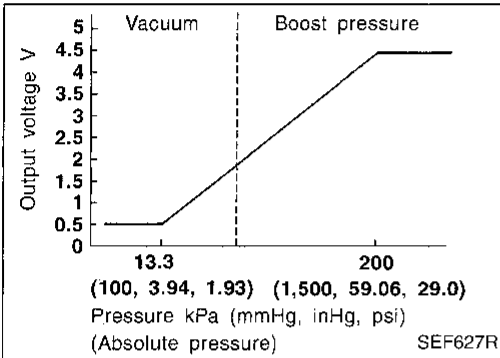




Diagnostic Trouble Code No.	Malfunction is detected when ....	Check Items (Possible Cause)
P1160 0206	A) An excessively low or high voltage from the sensor is sent to ECM.	<ul style="list-style-type: none"> <li>• Harness or connectors (Turbocharger boost sensor circuit is open or shorted.)</li> <li>• Turbocharger boost sensor</li> </ul>
	B) There is little difference between the sensor output voltage when under high boost pressure conditions and when under low boost pressure conditions.	<ul style="list-style-type: none"> <li>• Harness or connectors (Turbocharger boost sensor circuit is open or shorted.)</li> <li>• Hose (Hose to the turbocharger boost sensor is disconnected or clogged.)</li> <li>• Intake system (Air leaks from intake air system.)</li> <li>• Exhaust system (Exhaust gas leaks from exhaust system.)</li> <li>• Turbocharger</li> <li>• Turbocharger boost sensor</li> </ul>

# TROUBLE DIAGNOSIS FOR DTC P1160

## Turbocharger Boost Sensor (DTC: 0206) (Cont'd)

### DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE



#### Procedure for malfunction A

- |   |   |    |
|---|---|----|
|  | <ol style="list-style-type: none"><li>1) Turn ignition switch "ON".</li><li>2) Select "DATA MONITOR" mode with CONSULT.</li><li>3) Wait at least 5 seconds.</li></ol>   | CI |
| OR  |   | MA |
|  | <ol style="list-style-type: none"><li>1) Turn ignition switch "ON" and wait at least 5 seconds.</li><li>2) Select "MODE 3" with GST.</li></ol>  | EM |
| OR  |   | LC |
|  | <ol style="list-style-type: none"><li>1) Turn ignition switch "ON" and wait at least 5 seconds.</li><li>2) Turn ignition switch "OFF" and wait at least 5 seconds, and then turn "ON".</li><li>3) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.</li></ol> | EC |

#### OVERALL FUNCTION CHECK

This procedure can be used for checking the overall function of turbocharger boost sensor circuit. During this check, a DTC might not be confirmed.



#### Procedure for malfunction B

- |   |   |  |
|---|---|--|
|    | <ol style="list-style-type: none"><li>1) Turn ignition switch "ON".</li><li>2) Select "TURBO BST SEN" in "DATA MONITOR" mode with CONSULT.</li><li>3) Check "TURBO BST SEN" voltage when idling.<br/><b>The voltage should be 1.9 to 3.0 [V].</b></li><li>4) Check "TURBO BST SEN" voltage when revving engine up to 5,000 rpm with wide open throttle under no load.<br/><b>The voltage should increase 0.1 [V] or more momentarily.</b></li></ol> | FE<br>CL<br>MT<br>AT<br>PD<br>FA             |
| OR  |   | FA   |
|  | <ol style="list-style-type: none"><li>1) Turn ignition switch "ON".</li><li>2) Check the voltage.<br/><b>The voltage should be 1.9 to 3.0 [V].</b></li><li>3) Check the voltage between ECM terminal (61) and ground when revving engine up to 5,000 rpm with wide open throttle under no load.<br/><b>The voltage should increase 0.1 [V] or more momentarily.</b></li></ol>   | RA<br>BR<br>ST<br>RS<br>BT<br>HA<br>EL<br>DX |

# TROUBLE DIAGNOSIS FOR DTC P1160

## Turbocharger Boost Sensor (DTC: 0206) (Cont'd)

EC-BOOST-01

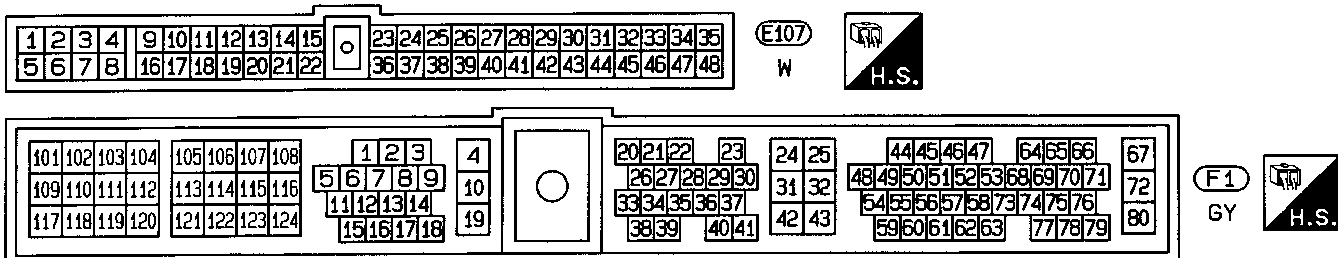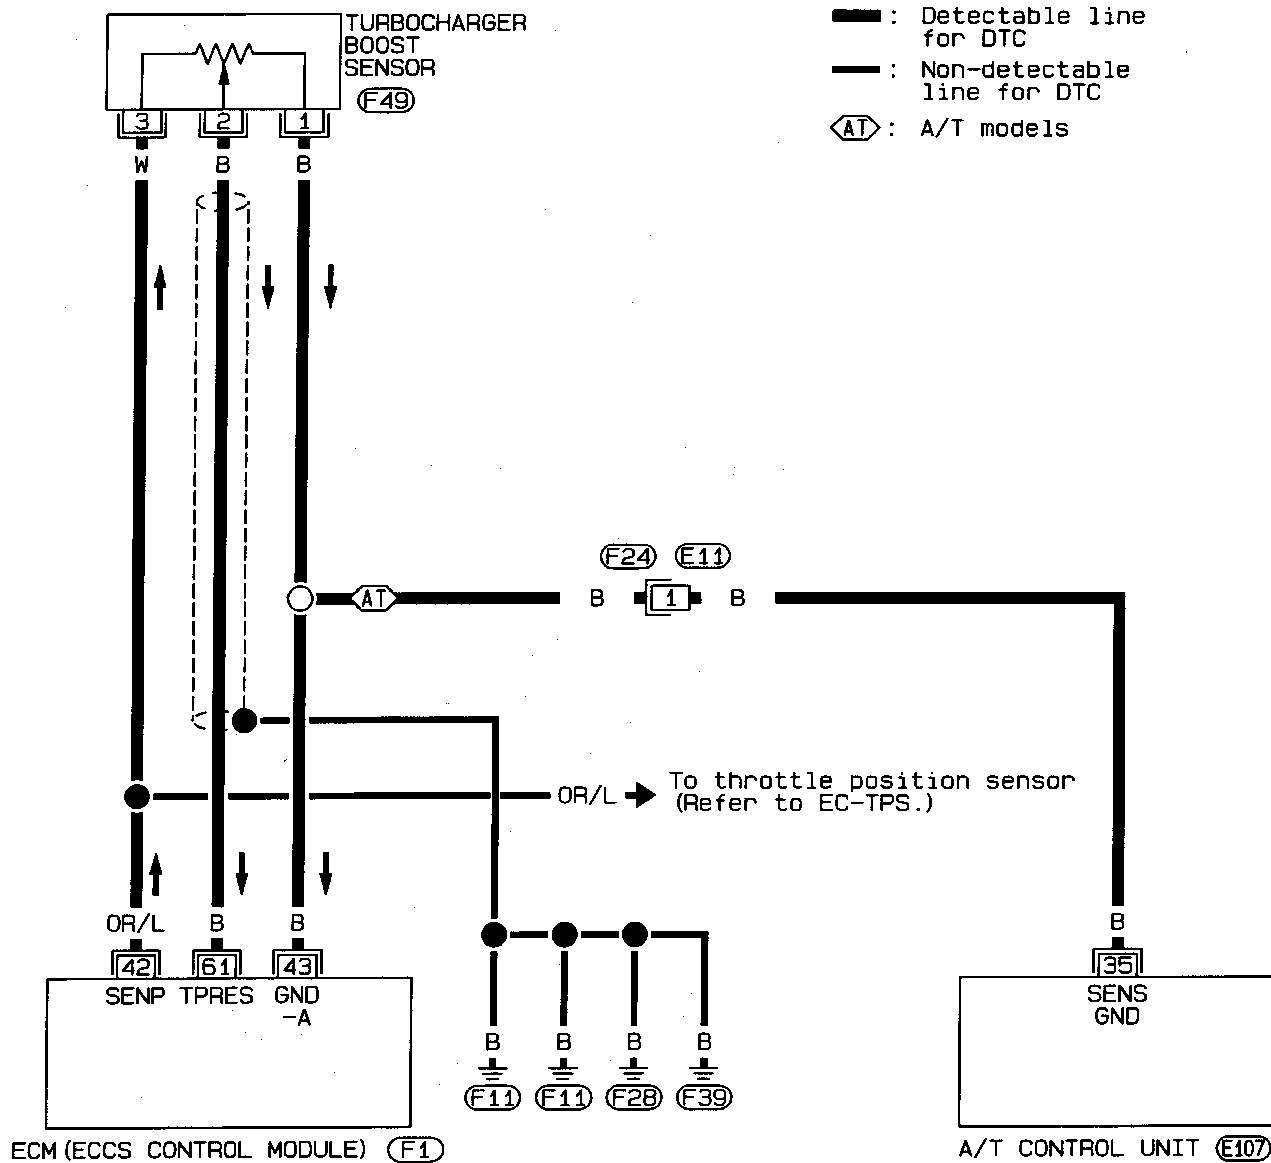








# TROUBLE DIAGNOSIS FOR DTC P1160

## Turbocharger Boost Sensor (DTC: 0206) (Cont'd)

### DIAGNOSTIC PROCEDURE

If the trouble is duplicated after "Procedure for malfunction A", perform "Procedure A". If the trouble is duplicated after "Procedure for malfunction B", perform "Procedure B".

#### Procedure A

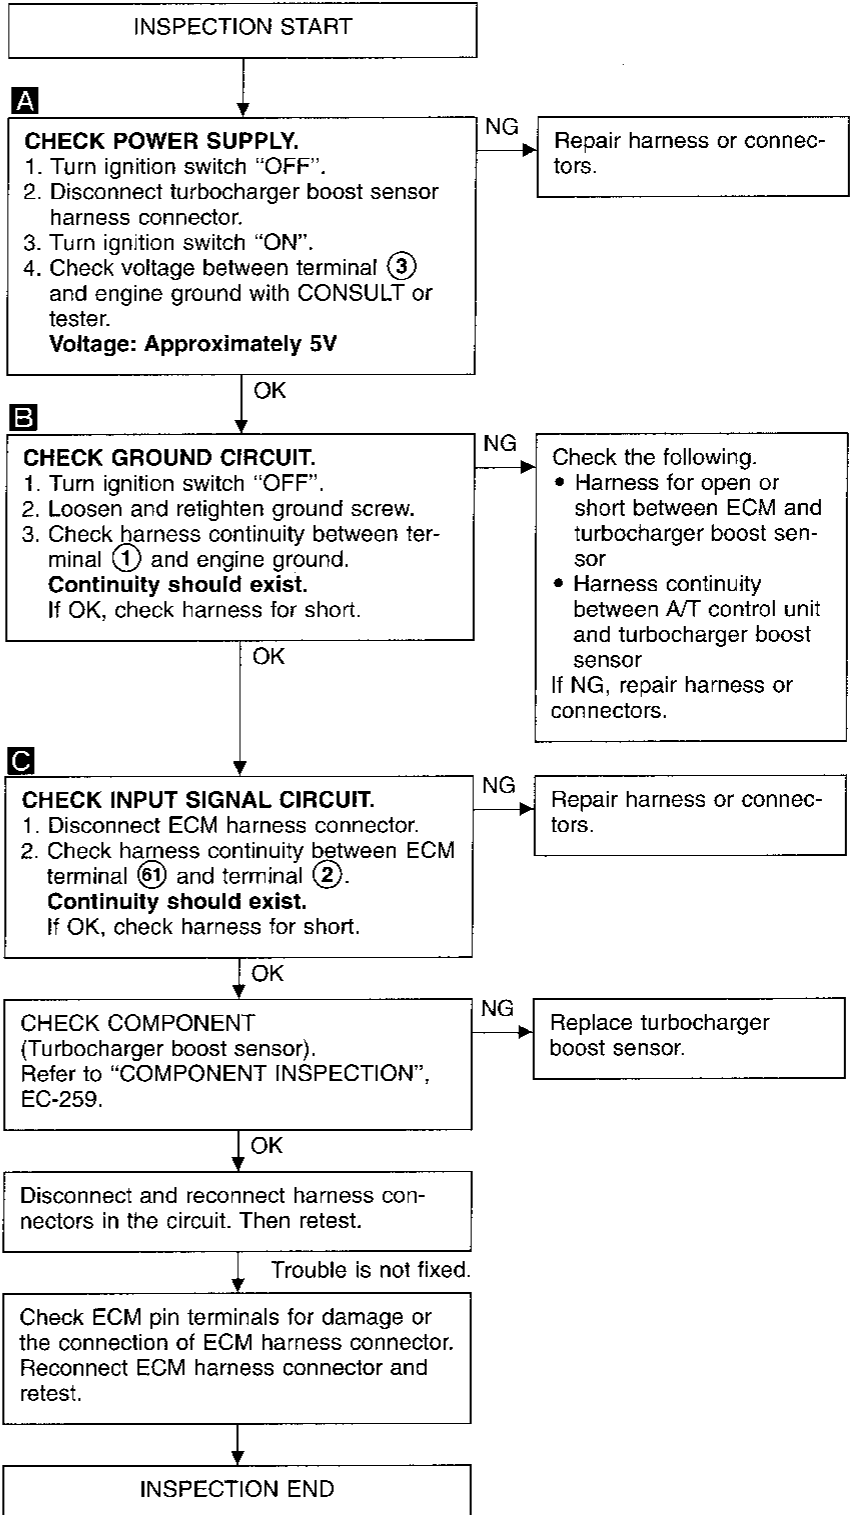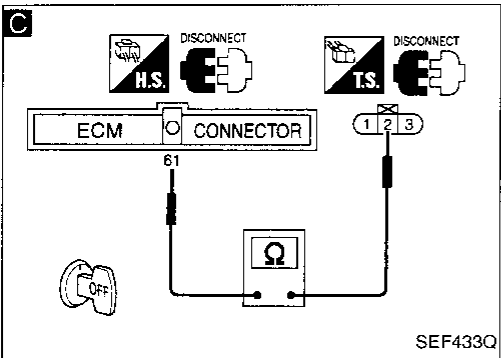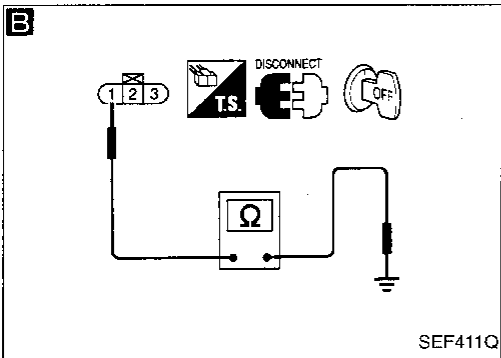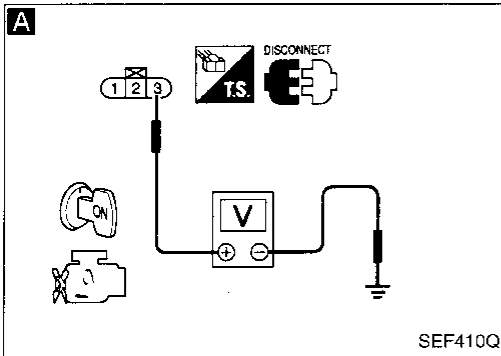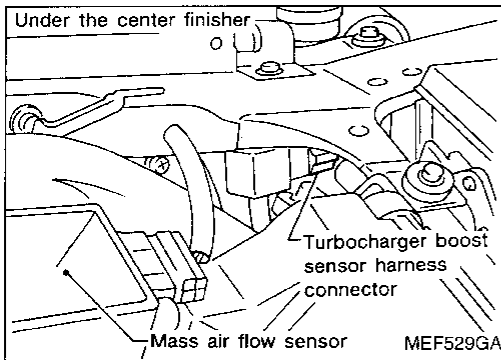

CI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

# TROUBLE DIAGNOSIS FOR DTC P1160

## Turbocharger Boost Sensor (DTC: 0206) (Cont'd)

### Procedure B

INSPECTION START

**CHECK INTAKE SYSTEM.**  
Check intake system for air leaks.

NG

Repair intake system.

OK

**CHECK HOSES BETWEEN TURBOCHARGER BOOST SENSOR, RIGHT SIDE AIR PIPE AND LEFT SIDE AIR PIPE.**  
Check hose for clogging, cracks or improper connection.

NG

Repair or reconnect hose.

OK

**CHECK EXHAUST SYSTEM.**  
Check exhaust system for gas leaks.

NG

Repair exhaust system.

OK

**CHECK POWER SUPPLY.**

1. Turn ignition switch "OFF".
2. Disconnect turbocharger boost sensor harness connector.
3. Turn ignition switch "ON".
4. Check voltage between terminal ③ and engine ground with CONSULT or tester.

**Voltage: Approximately 5V**

NG

Repair harness or connectors.

OK

**CHECK GROUND CIRCUIT.**

1. Turn ignition switch "OFF".
  2. Loosen and retighten ground screw.
  3. Check harness continuity between terminal ① and engine ground.
- Continuity should exist.**  
If OK, check harness for short.

NG





Check the following.

- Harness for open or short between ECM and turbocharger boost sensor
- Harness continuity between A/T control unit and turbocharger boost sensor

If NG, repair harness or connectors.




OK

Ⓐ

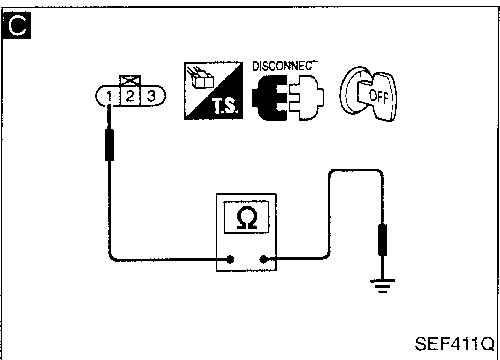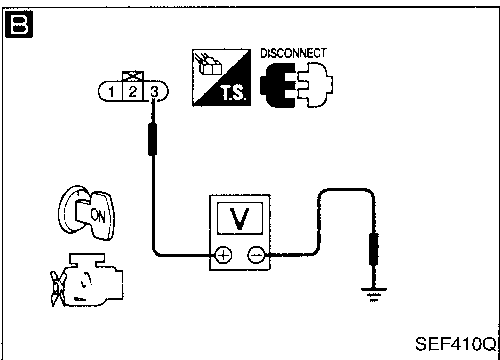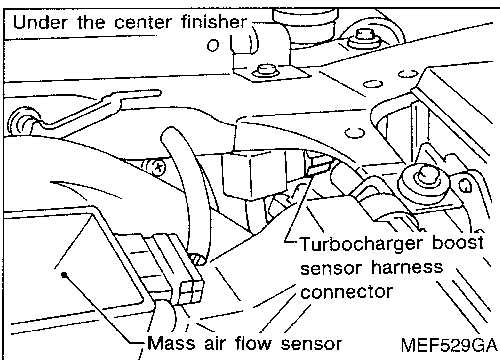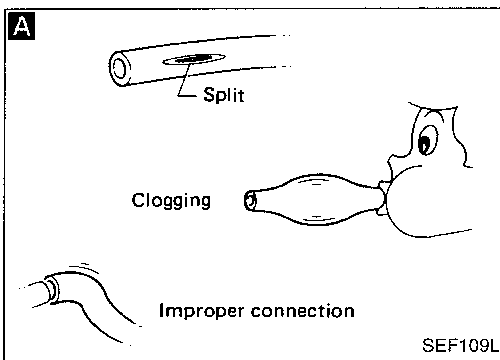

# TROUBLE DIAGNOSIS FOR DTC P1160

## Turbocharger Boost Sensor (DTC: 0206) (Cont'd)

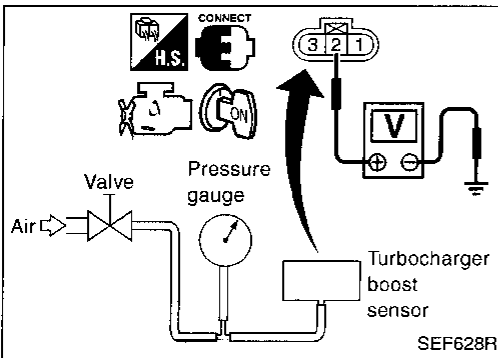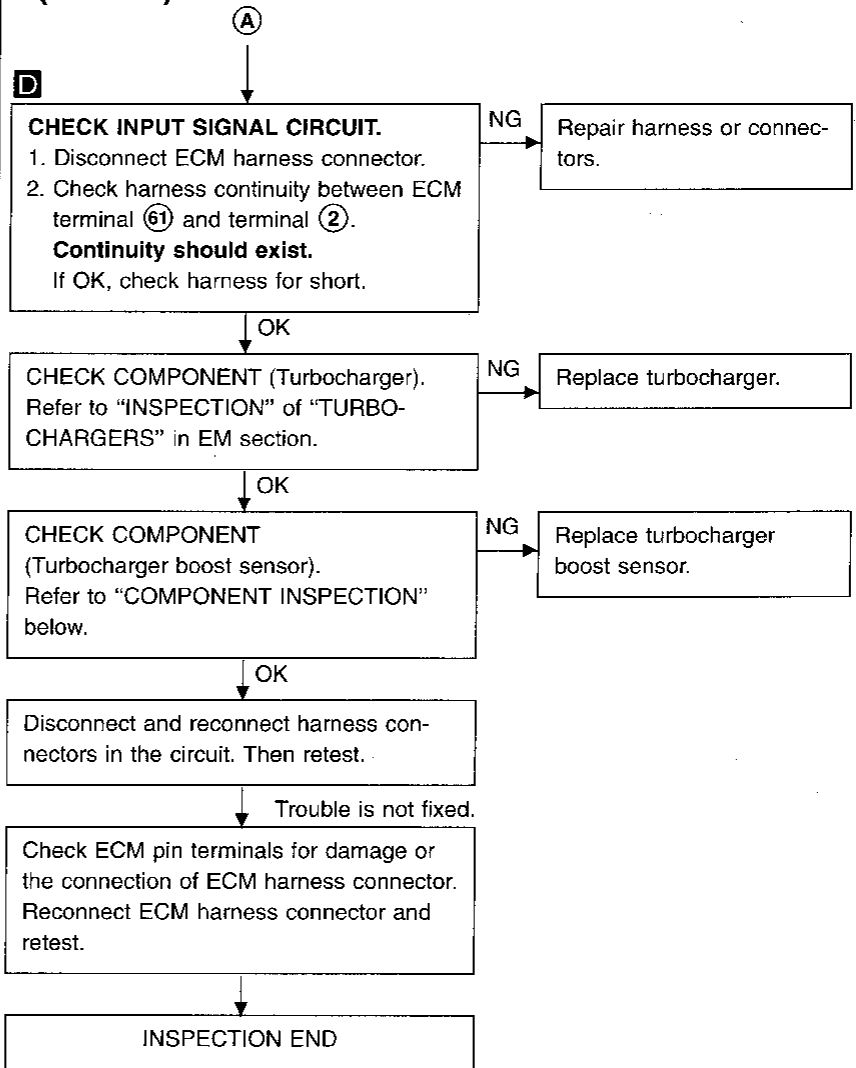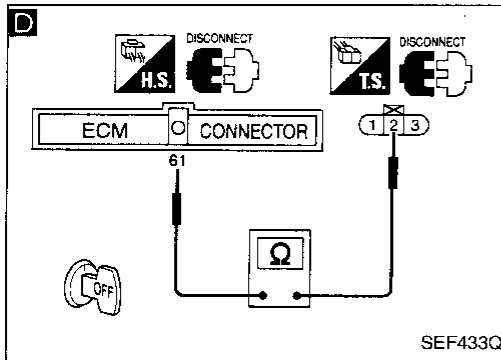

### COMPONENT INSPECTION

#### Turbocharger boost sensor


1. Remove hose from sensor.
2. Turn ignition switch "ON" and check output voltage between terminal ② and engine ground.  
**The voltage should be 1.9 to 3.0 V.**
3. Apply air pressure of +40.0 kPa (300 mmHg, 11.81 inHg, 5.80 psi) to turbocharger boost sensor as shown in figure and check the output voltage.  
**The voltage should be 0.6 to 1.0 V higher than the value measured in step 2.**

#### CAUTION:

- Always calibrate the pressure gauge when using it.
- Inspection should be done at room temperature [10 - 30°C (50 - 86°F)].
- 4. If NG, replace turbocharger boost sensor.


## Fuel Pump Control Module (FPCM) (DTC: 1305)

### SYSTEM DESCRIPTION

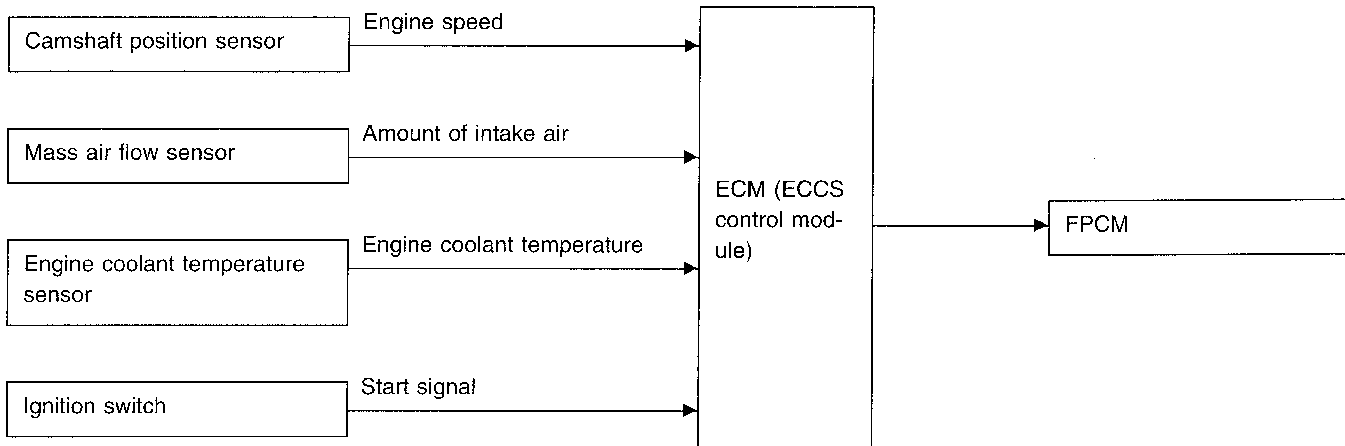

This system controls the fuel pump operation. The amount of fuel flow delivered from the fuel pump is altered between two flow rates (Non-turbocharger models) or three flow rates (Turbocharger models) by the FPCM operation. The FPCM determines the voltage applied to the fuel pump (and therefore fuel flow) according to the following conditions.

Conditions	Amount of fuel flow	Supplied voltage
<ul style="list-style-type: none"> <li>• Engine cranking</li> <li>• Engine coolant temperature below 0°C (32°F)</li> <li>• Engine is running under heavy load and high speed conditions</li> <li>• Within 30 seconds after starting engine [above 50°C (122°F)] (Non-turbocharger models only)</li> </ul>	high	Battery voltage (11 - 14V)
<ul style="list-style-type: none"> <li>• Within 5 seconds after starting engine [above 50°C (122°F)] (Turbocharger models only)</li> <li>• Engine is running under medium load and medium speed conditions (Turbocharger models only)</li> </ul>	medium	Approximately 7V
Except the above	low	Approximately 8V (Non-turbocharger models) Approximately 6V (Turbocharger models)

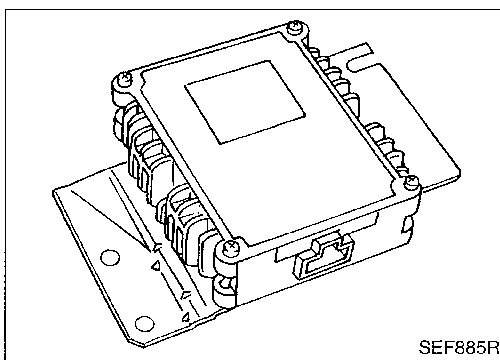

### COMPONENT DESCRIPTION

The FPCM adjusts the voltage supplied to the fuel pump to control the amount of fuel flow. When the FPCM increases the voltage supplied to the fuel pump, the fuel flow is raised. When the FPCM decreases the voltage, the fuel flow is lowered.

# TROUBLE DIAGNOSIS FOR DTC P1220

## Fuel Pump Control Module (FPCM) (DTC: 1305) (Cont'd)

Diagnostic Trouble Code No.	Malfunction is detected when ....	Check Items (Possible Cause)
P1220 1305	<ul style="list-style-type: none"> <li>• An improper voltage signal from the FPCM, which is supplied to the fuel pump, is detected by ECM.</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connectors (FPCM circuit is open or shorted.)</li> <li>• FPCM</li> </ul>

### DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE



- 1) Start engine and warm it up sufficiently.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT.
- 4) Start engine and run it for at least 60 seconds at idle speed.

OR



- 1) Start engine and warm it up sufficiently.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Start engine and run it for at least 60 seconds at idle speed.
- 4) Select MODE 3 with GST.

OR




- 1) Start engine and warm it up sufficiently.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Start engine and run it for at least 60 seconds at idle speed.
- 4) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 5) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

# TROUBLE DIAGNOSIS FOR DTC P1220

## Fuel Pump Control Module (FPCM) (DTC: 1305) (Cont'd)






EC-FPCM-01

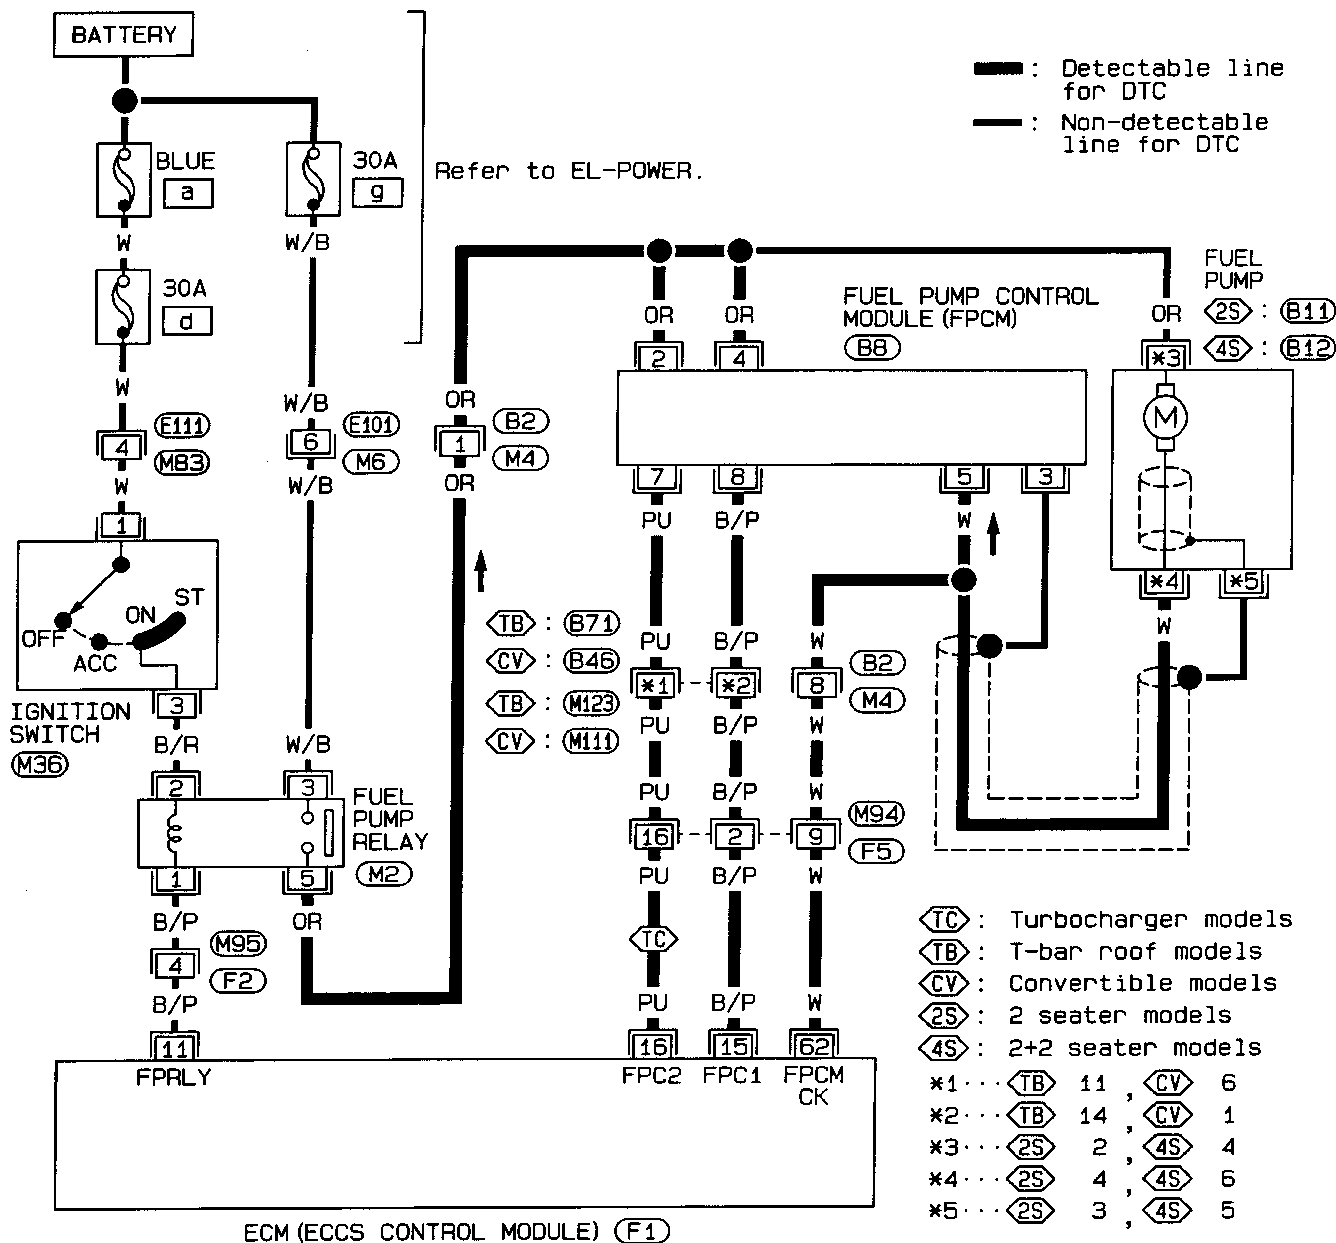

# TROUBLE DIAGNOSIS FOR DTC P1220

## Fuel Pump Control Module (FPCM) (DTC: 1305) (Cont'd)





### DIAGNOSTIC PROCEDURE

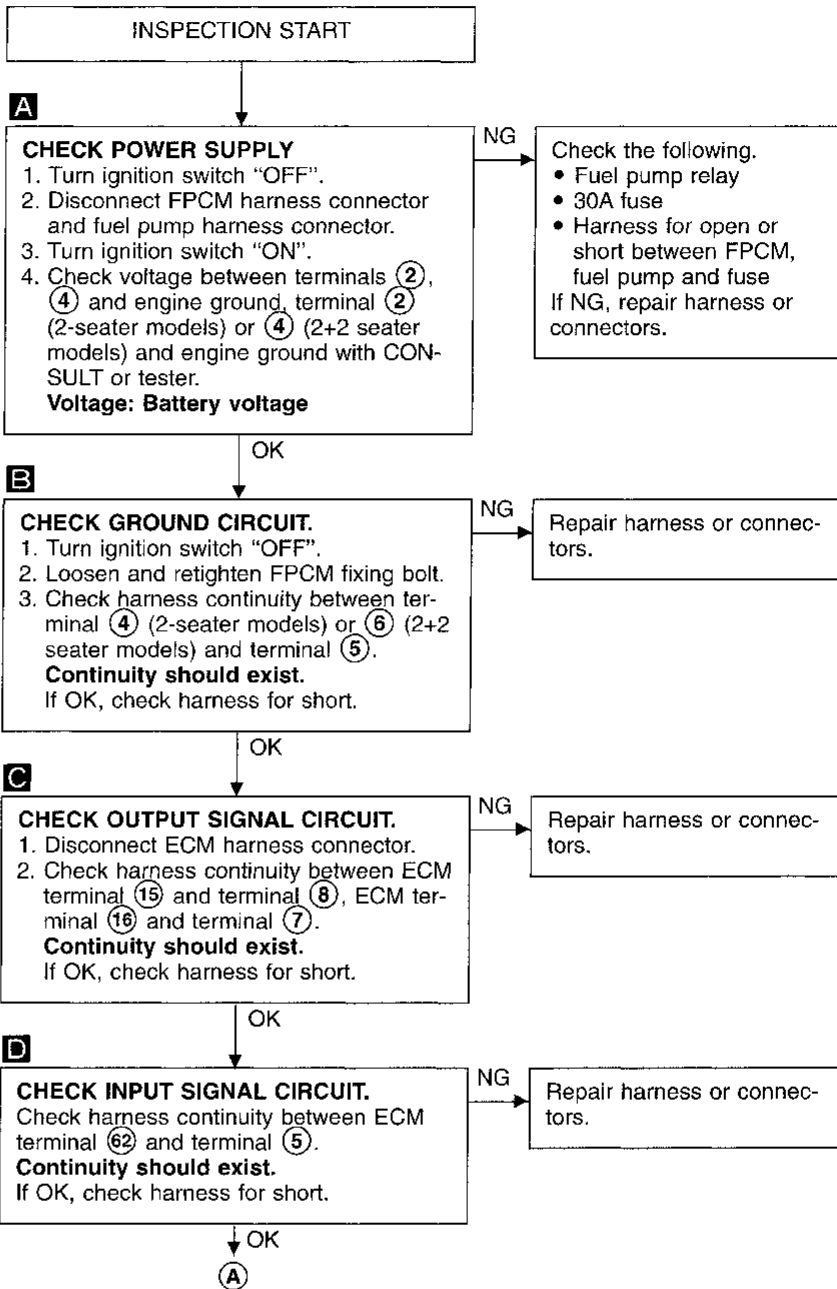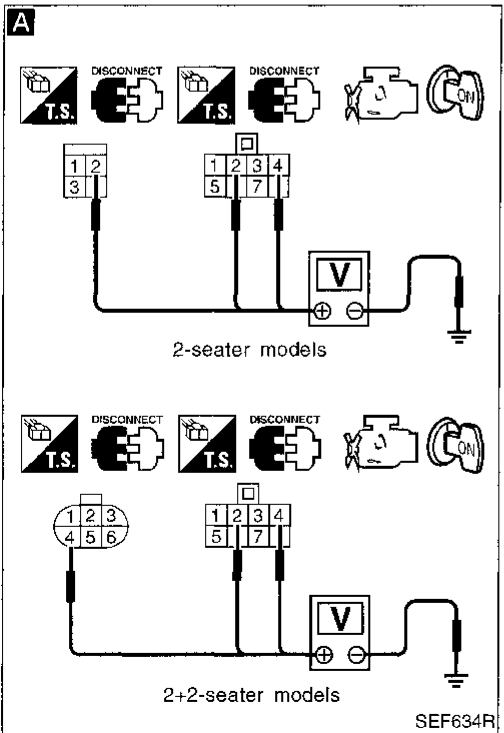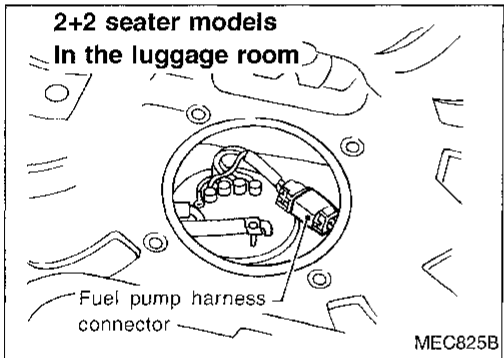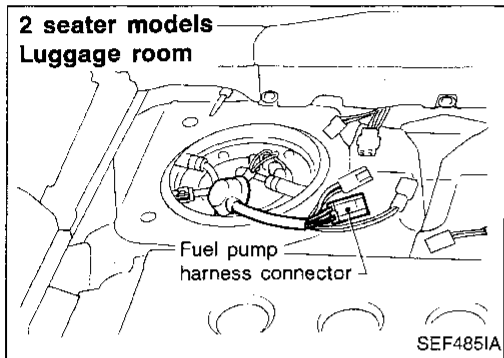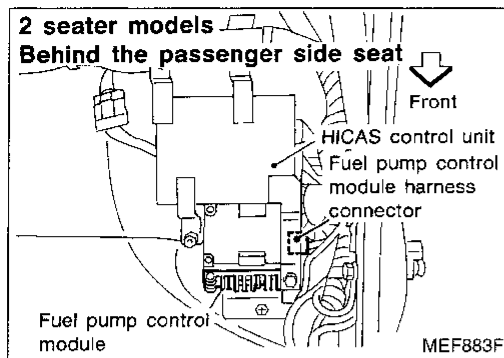

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

# TROUBLE DIAGNOSIS FOR DTC P1220





## Fuel Pump Control Module (FPCM) (DTC: 1305) (Cont'd)

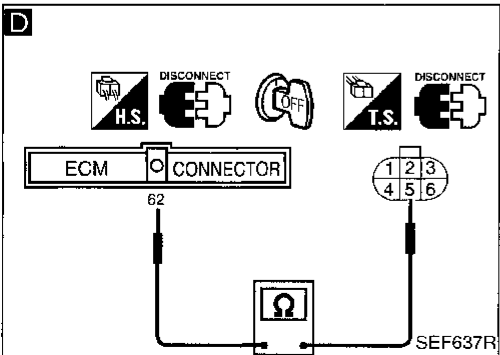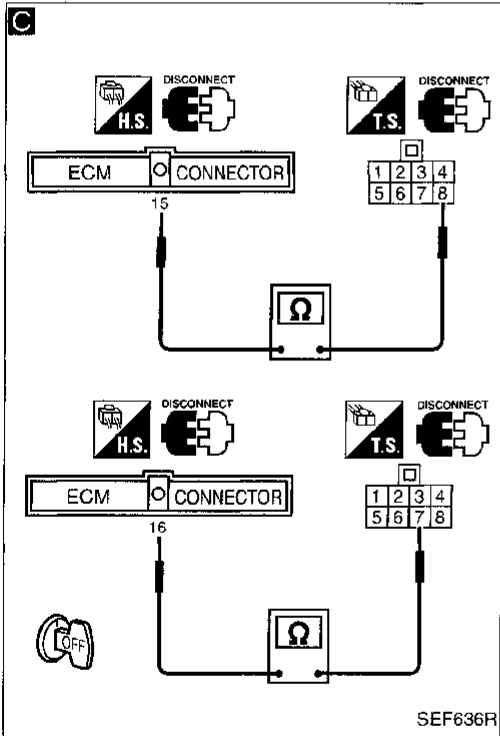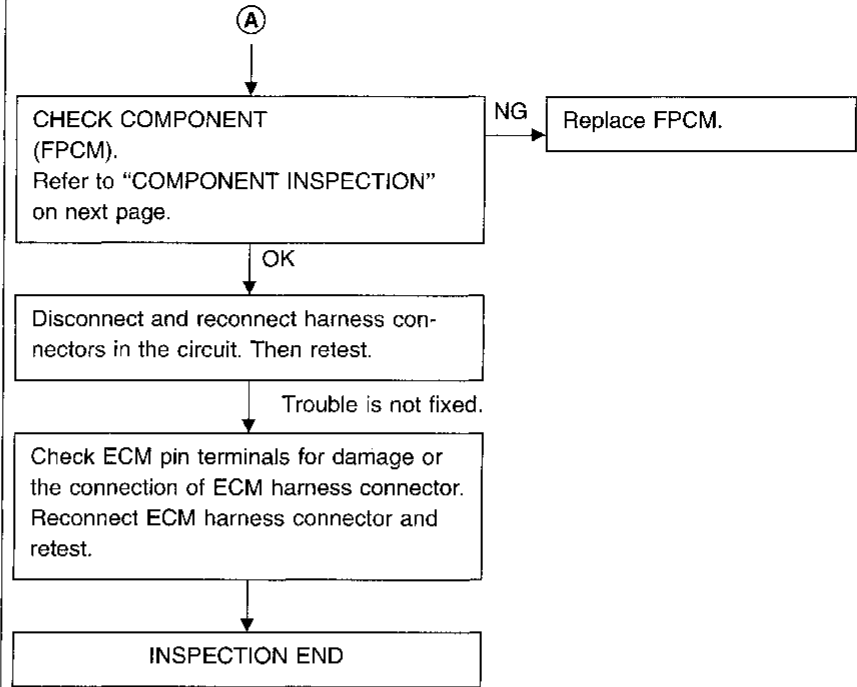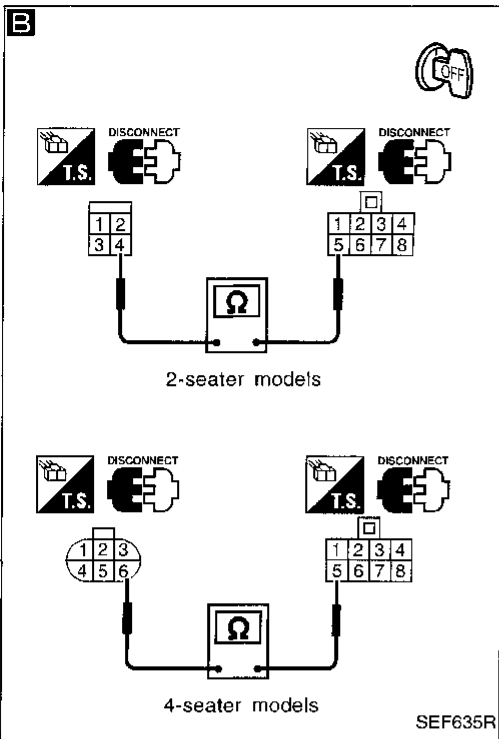



# TROUBLE DIAGNOSIS FOR DTC P1220

## Fuel Pump Control Module (FPCM) (DTC: 1305) (Cont'd)

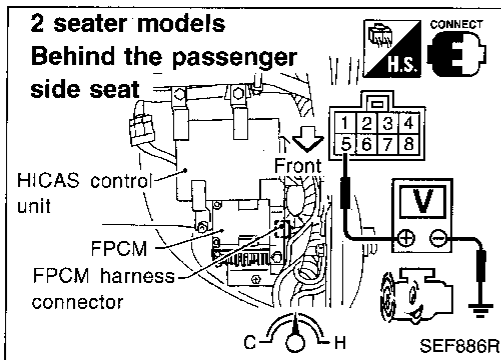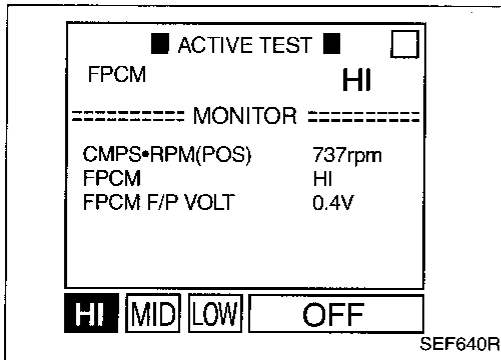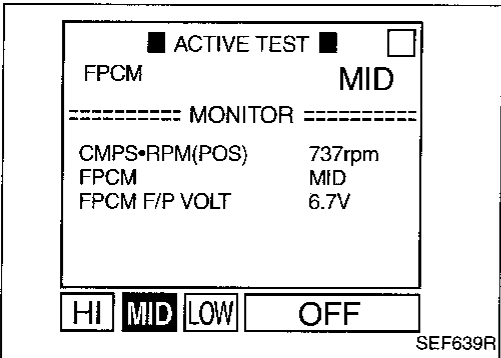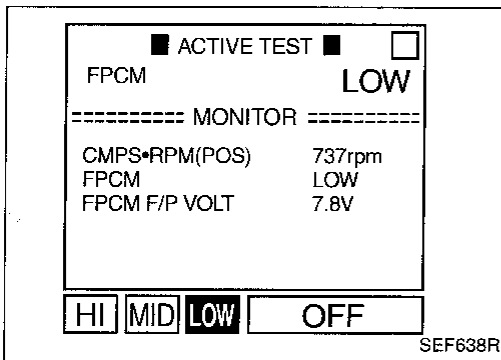

### COMPONENT INSPECTION

#### FPCM

1. Start engine and let it idle.
2. Perform "FPCM" in "ACTIVE TEST" mode with CONSULT.
3. Make sure of the following.

Position	"FPCM F/P VOLT" value	
	Non-turbocharger models	Turbocharger models
"LOW"	5.0 - 6.0 [V]	7.1 - 8.0 [V]
"MID"	—	6.0 - 6.9 [V]
"HI"	0 - 1.0 [V]	0 - 0.9 [V]

4. If NG, replace FPCM.

OR

1. Start engine and warm it up sufficiently.
2. Turn ignition switch "OFF" and wait for at least 5 seconds.
3. Start engine and let it idle.
4. Check voltage between terminals ① and ②.  
The voltage should be within each of the following ranges at least one time within 60 seconds of starting engine.



Voltage	Non-turbocharger models	Turbocharger models
	5.0 - 6.0 [V]	7.1 - 8.0 [V]
	0 - 1.0 [V]	6.0 - 6.9 [V]
	—	0 - 0.9 [V]

5. If NG, replace FPCM.

#### CAUTION:

Connect a suitable wire between the FPCM body and ground during inspection because the FPCM is body grounded type.

# TROUBLE DIAGNOSIS FOR DTC P1320

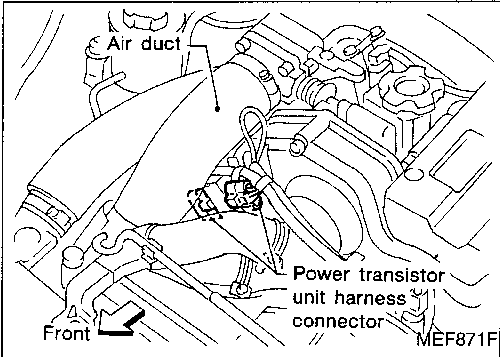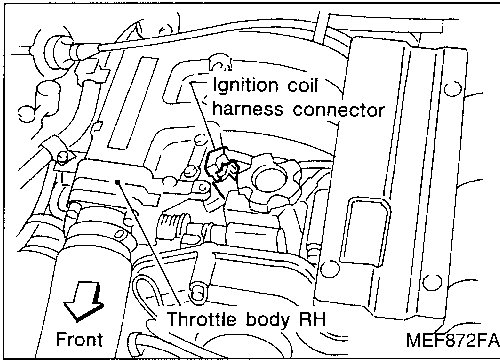

## Ignition Signal (DTC: 0201)

### COMPONENT DESCRIPTION




#### Ignition coil & power transistor

The ignition signal from the ECM is sent to and amplified by the power transistor. The power transistor turns on and off the ignition coil primary circuit. This on-off operation induces the proper high voltage in the coil secondary circuit.

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P1320 0201	<ul style="list-style-type: none"> <li>The ignition signal in the primary circuit is not sent to ECM during engine cranking or running.</li> </ul>	<ul style="list-style-type: none"> <li>Harness or connectors (The primary ignition control circuit is open or shorted.)</li> <li>Power transistor unit</li> <li>Camshaft position sensor</li> <li>Camshaft position sensor circuit</li> </ul>

### DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE




**Note:** If both DTC P1320 (0201) and DTC P0335 (0802), P0340 (0101) or P1336 (0905) are displayed, perform TROUBLE DIAGNOSIS FOR DTC P0335, P0340 or P1336 first. (See EC-202, 206 or 275.)

- 
  - Turn ignition switch "ON".
  - Select "DATA MONITOR" mode with CONSULT.
  - Start engine and wait at least 3 seconds. (If engine does not run, turn ignition switch to "START" for at least 5 seconds.)
- OR
- 
  - Turn ignition switch "ON".
  - Start engine and wait at least 3 seconds. (If engine does not run, turn ignition switch to "START" for at least 5 seconds.)
  - Select MODE 3 with GST.
- OR
- 
  - Turn ignition switch "ON".
  - Start engine and wait at least 3 seconds. (If engine does not run, turn ignition switch to "START" for at least 5 seconds.)
  - Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
  - Perform diagnostic test mode II (Self-diagnostic results) with ECM.

# TROUBLE DIAGNOSIS FOR DTC P1320

## Ignition Signal (DTC: 0201) (Cont'd)

### EC-IGN/SG-01



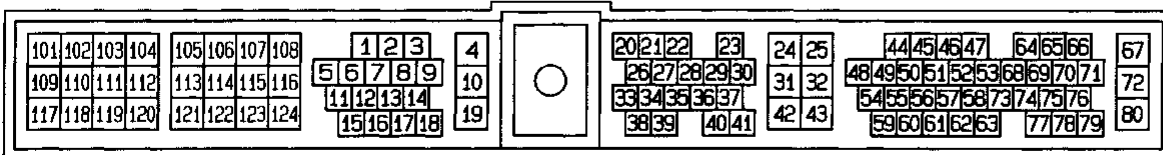

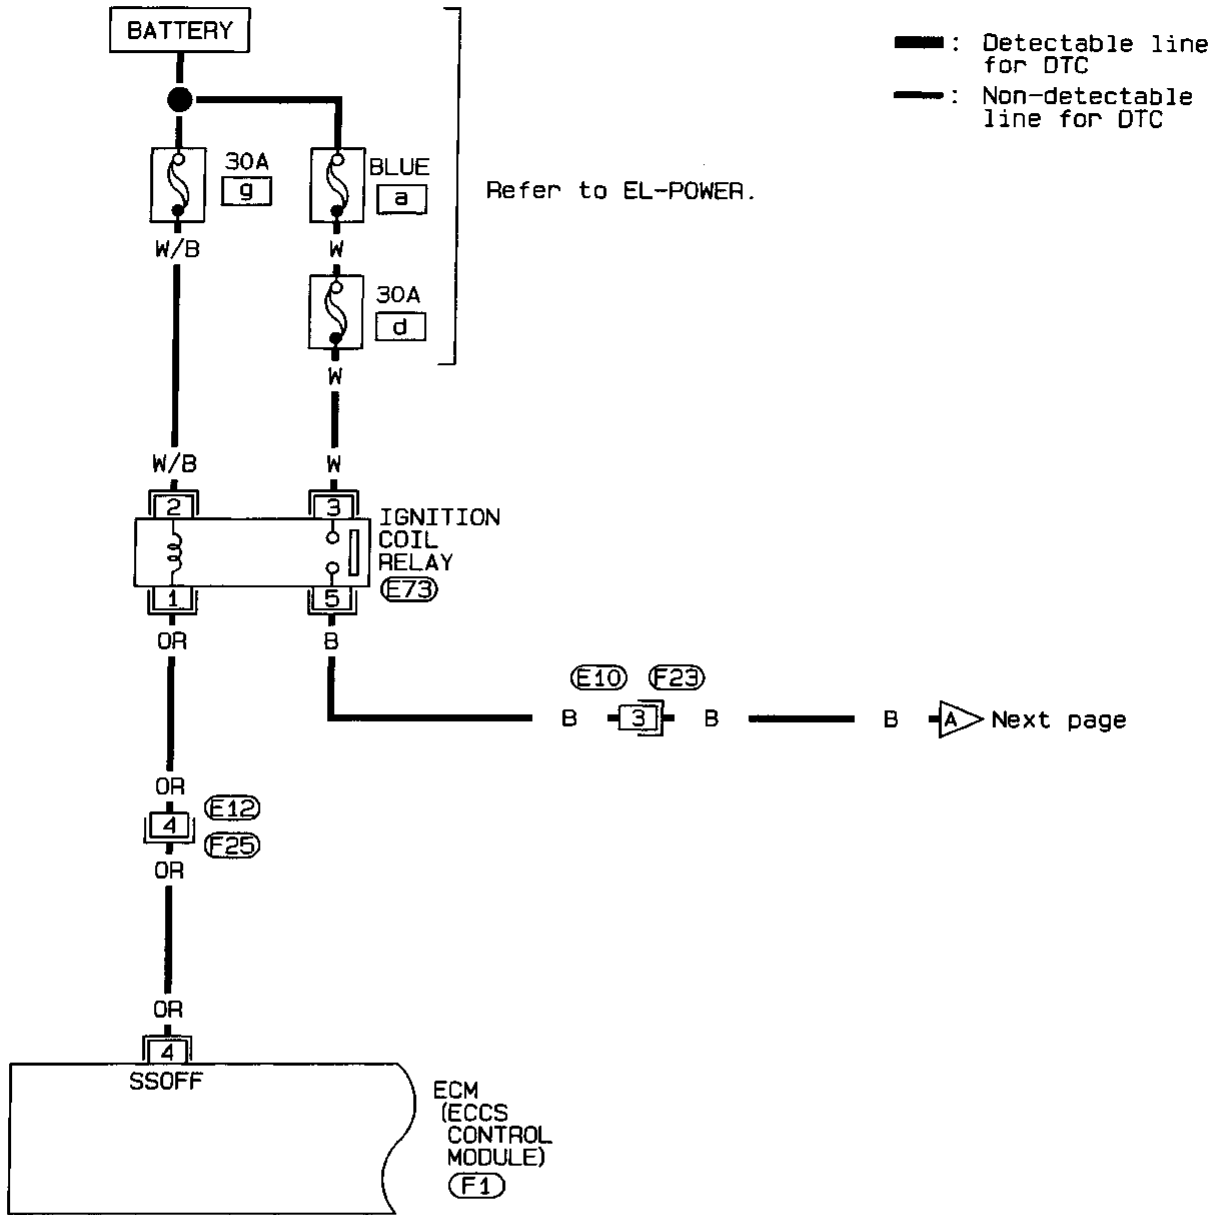


GI  
 MA  
 EM  
 LC  
**EC**  
 FE  
 CL  
 MT  
 AT  
 PD  
 FA  
 RA  
 BR  
 ST  
 RS  
 BT  
 HA  
 EL  
 IDX

# TROUBLE DIAGNOSIS FOR DTC P1320

## Ignition Signal (DTC: 0201) (Cont'd)





EC-IGN/SG-02

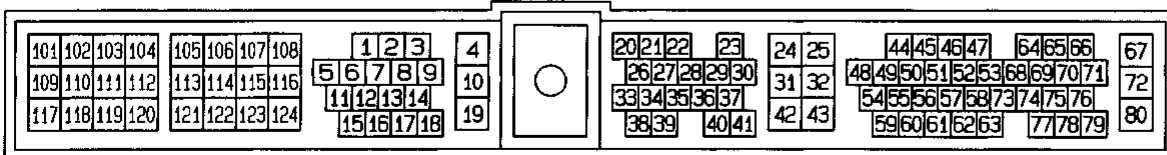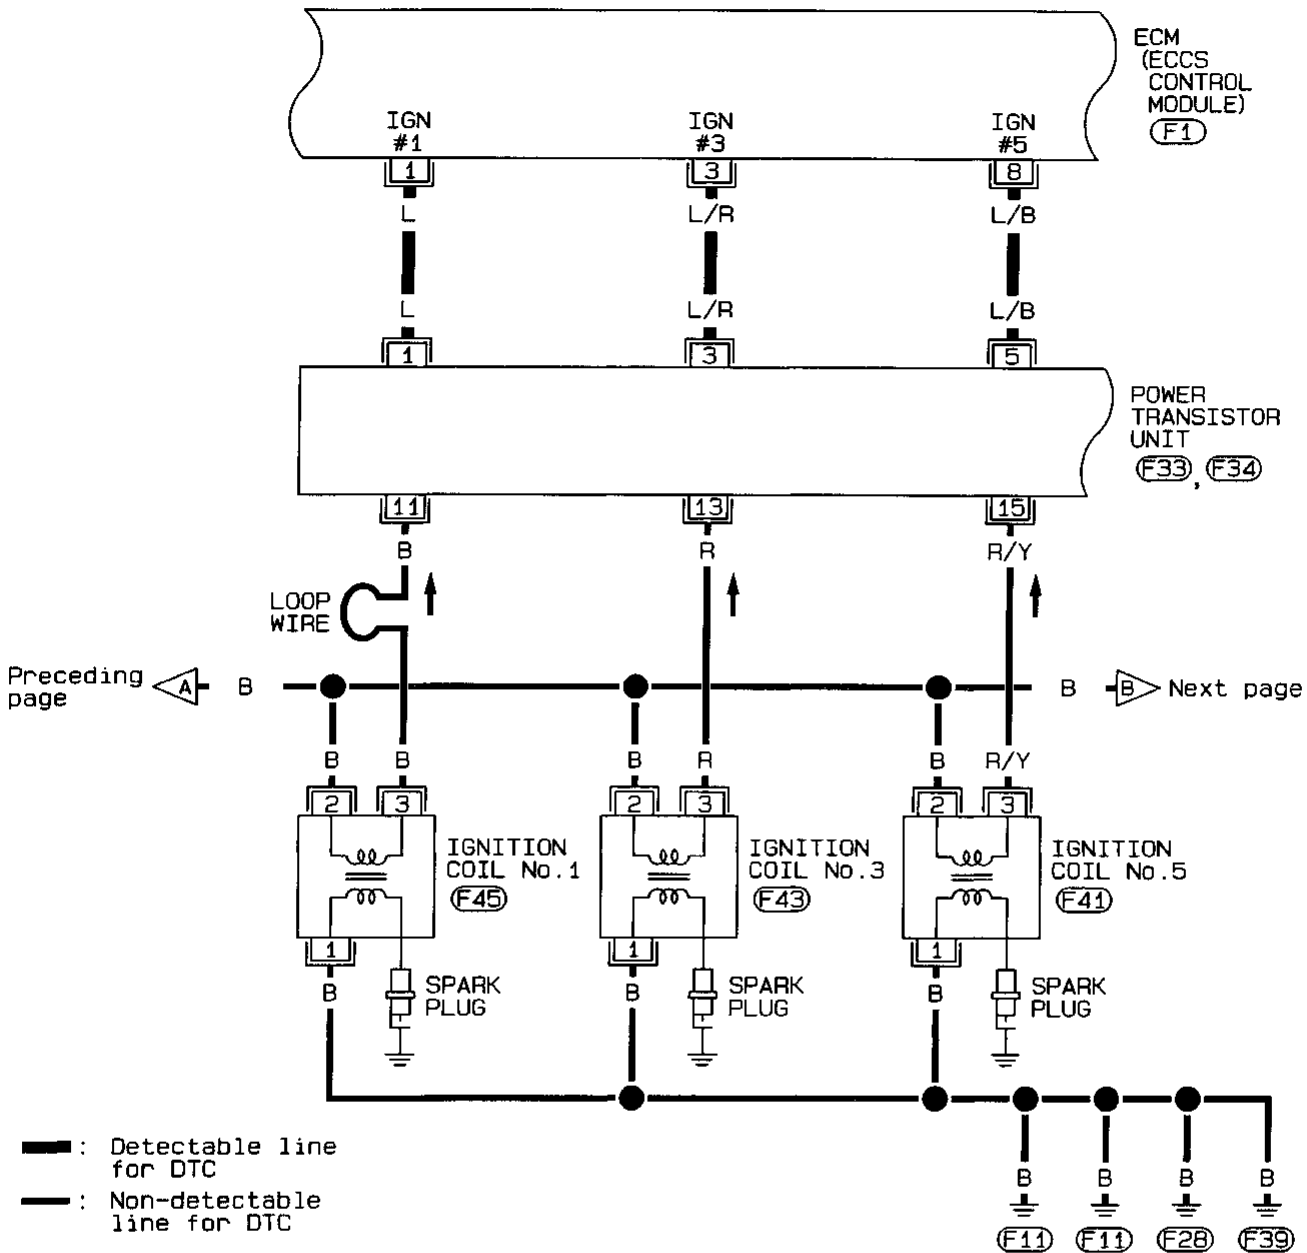

# TROUBLE DIAGNOSIS FOR DTC P1320


## Ignition Signal (DTC: 0201) (Cont'd)

### EC-IGN/SG-03

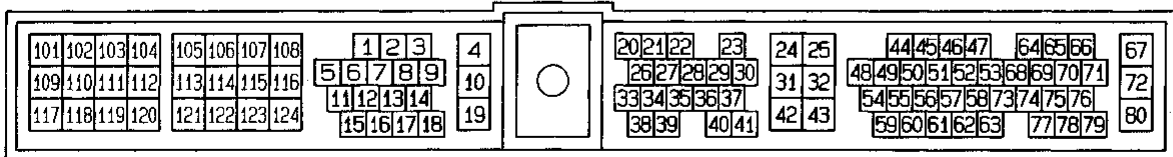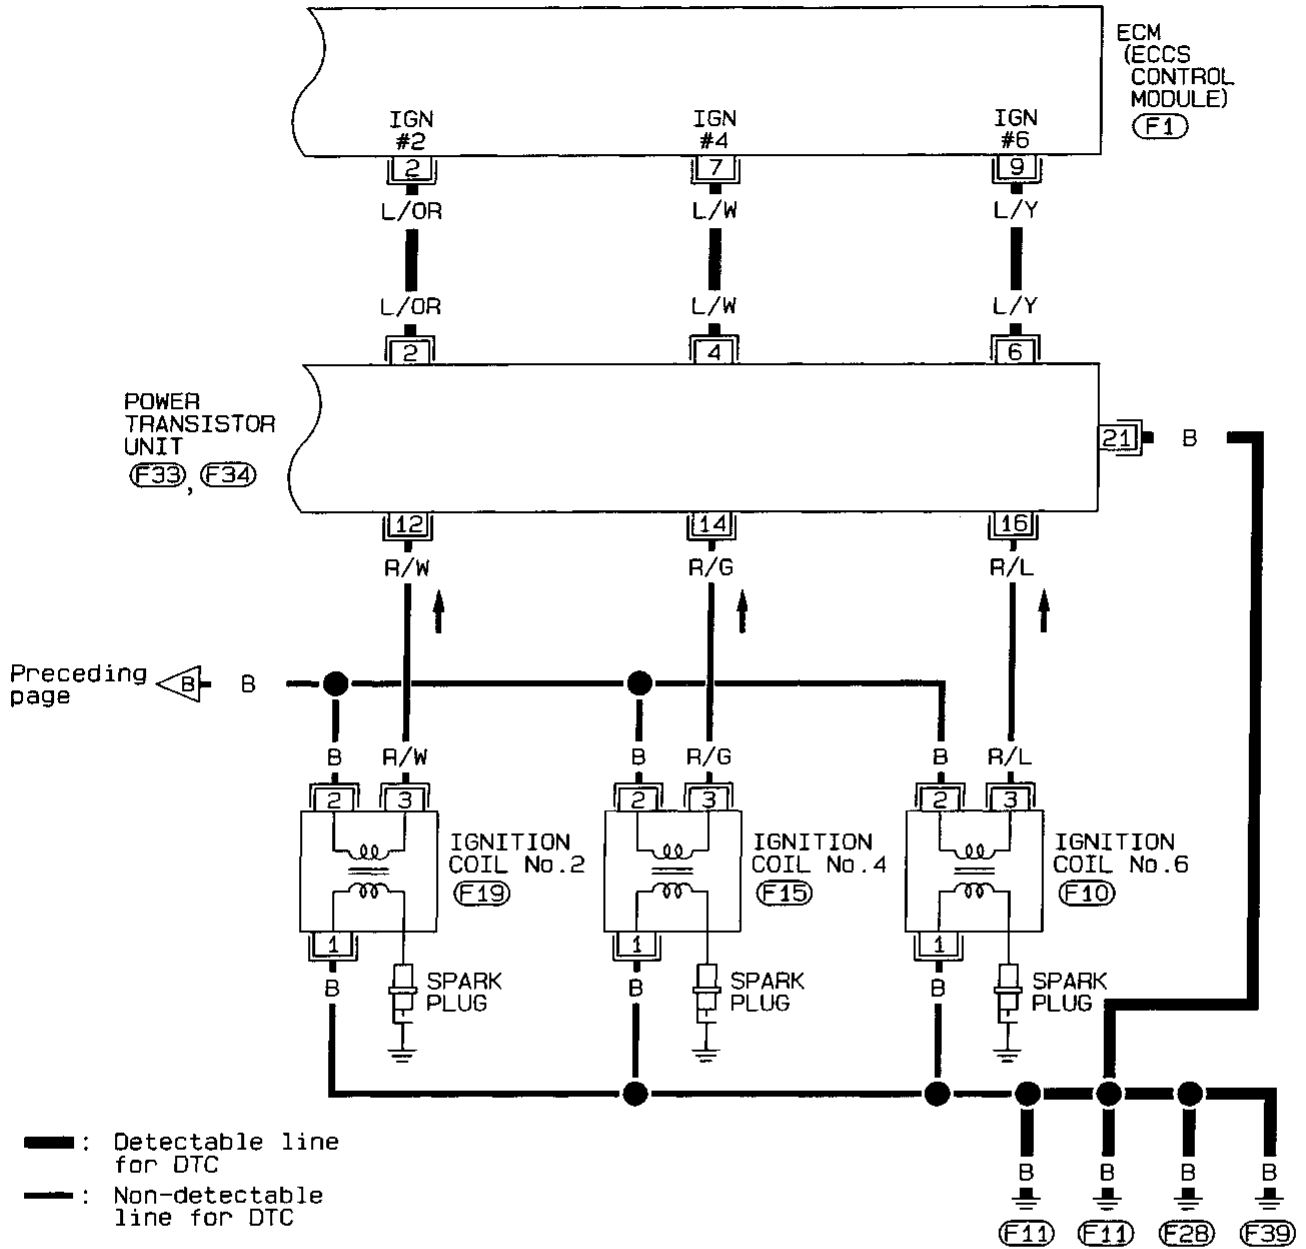


# TROUBLE DIAGNOSIS FOR DTC P1320

## Ignition Signal (DTC: 0201) (Cont'd) DIAGNOSTIC PROCEDURE (DETECTABLE CIRCUIT)

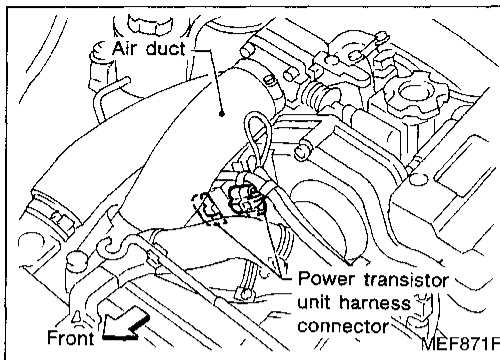

INSPECTION START

Turn ignition switch "OFF" and then turn to "START".  
**Is engine running?**





**A**  
**CHECK GROUND CIRCUIT-I.**  
1. Turn ignition switch "OFF".  
2. Disconnect power transistor unit harness connector (F33).  
3. Check harness continuity between terminal (21) and engine ground.  
**Continuity should exist.**  
If OK, check harness for short.  
If NG, repair harness or connectors.

**B**  
**SEARCH FOR MALFUNCTIONING CIRCUIT.**  
1. Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT.  
2. Search for circuit which does not produce a momentary engine speed drop.

**C**  
**CHECK OUTPUT SIGNAL CIRCUIT-I.**  
1. Turn ignition switch "OFF".  
2. Disconnect ECM harness connector and power transistor unit harness connector (F33).  
3. Check harness continuity between ECM terminal (1) and terminal (1), ECM terminal (2) and terminal (2), ECM terminal (3) and terminal (3), ECM terminal (7) and terminal (4), ECM terminal (8) and terminal (5), ECM terminal (9) and terminal (6).  
**Continuity should exist.**  
If OK, check harness for short.

NG → Repair harness or connectors.

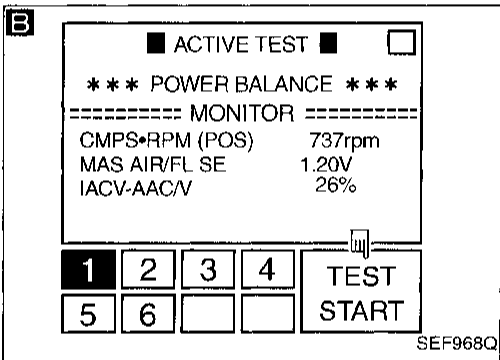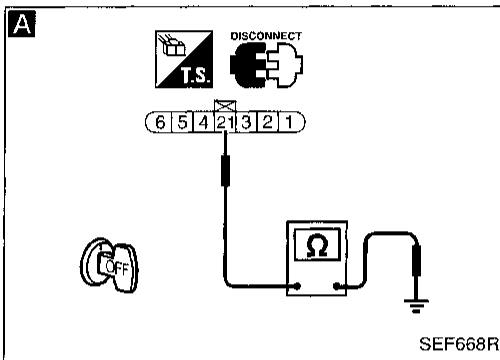


**CHECK COMPONENT**  
(Power transistor unit).  
Refer to "COMPONENT INSPECTION", EC-274.

NG → Replace power transistor unit.

Disconnect and reconnect harness connectors in the circuit. Then retest.

Check ECM pin terminals for damage and check the connection of ECM harness connector. Reconnect ECM harness connector and retest.







INSPECTION END

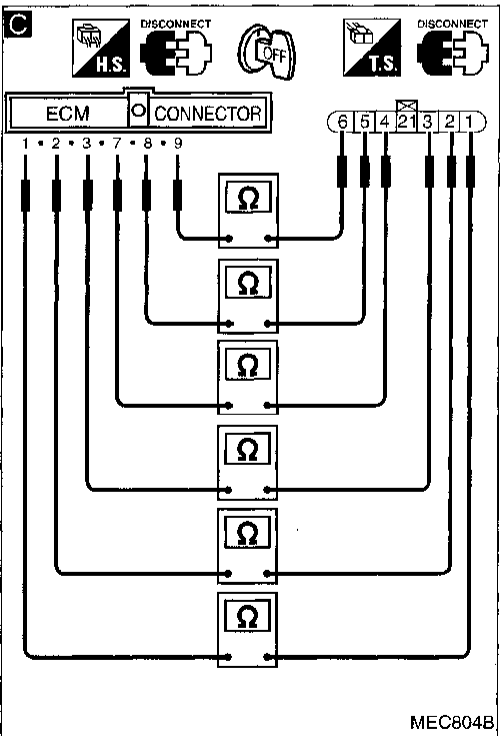

# TROUBLE DIAGNOSIS FOR DTC P1320

## Ignition Signal (DTC: 0201) (Cont'd)


### DIAGNOSTIC PROCEDURE [NON-DETECTABLE CIRCUIT (THE SECONDARY IGNITION CONTROL CIRCUIT)]

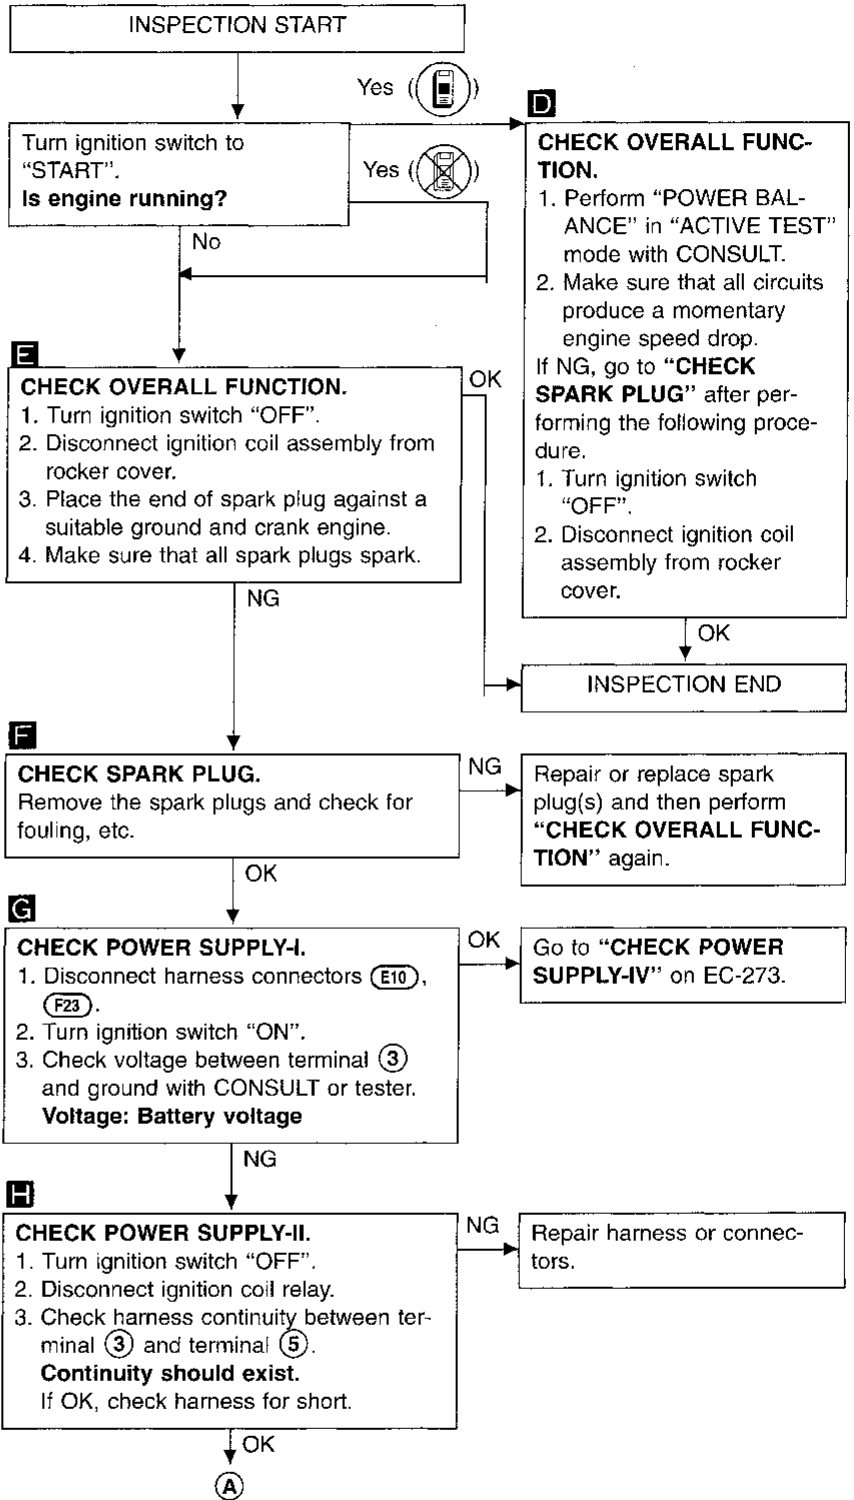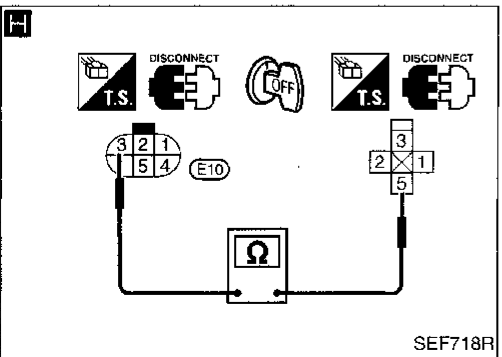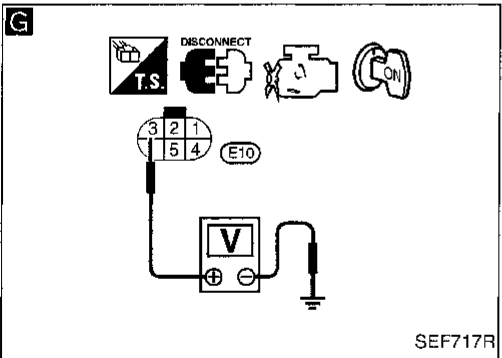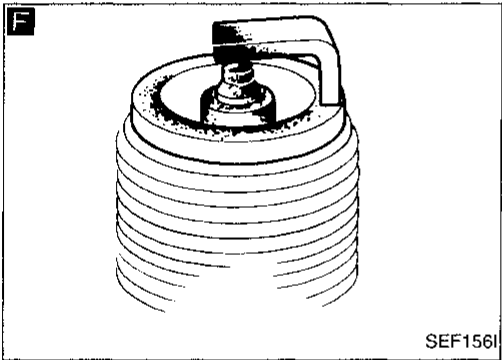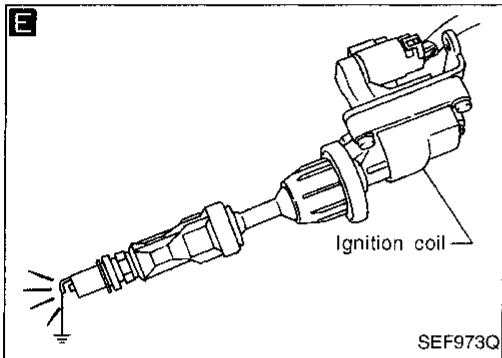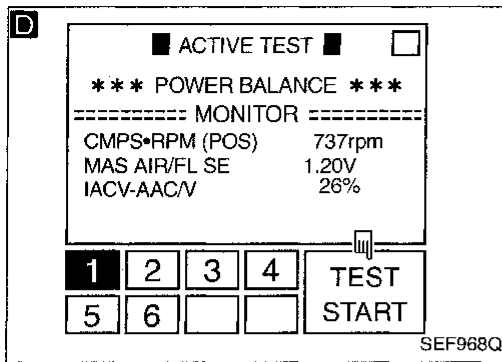

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

# TROUBLE DIAGNOSIS FOR DTC P1320

## Ignition Signal (DTC: 0201) (Cont'd)

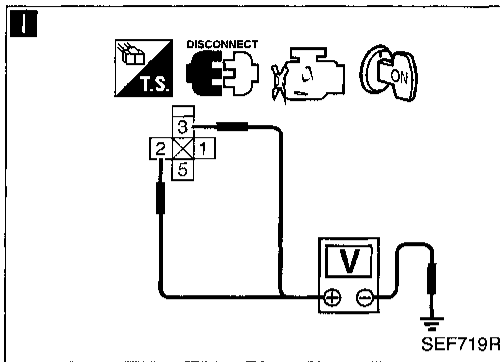

**I**

**CHECK POWER SUPPLY-III.**


1. Turn ignition switch "ON".
2. Check voltage between terminals ②, ③ and ground with CONSULT or tester.

**Voltage: Battery voltage**

NG → Check the following.

- 30A fusible links
- "Blue" fusible link
- Harness for open or short between ignition coil relay and fusible link

If NG, repair harness or connectors.

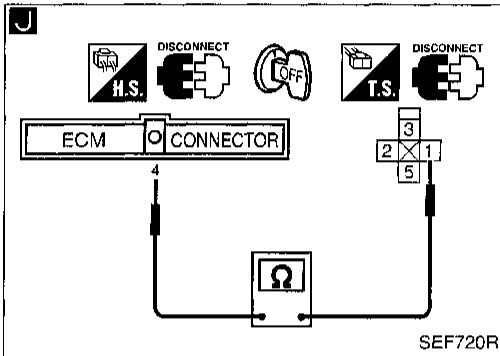


**J**

**CHECK OUTPUT SIGNAL CIRCUIT-II.**

1. Turn ignition switch "OFF".
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal ④ and terminal ①.

**Continuity should exist.**  
If OK, check harness for short.

NG → Repair harness or connectors.

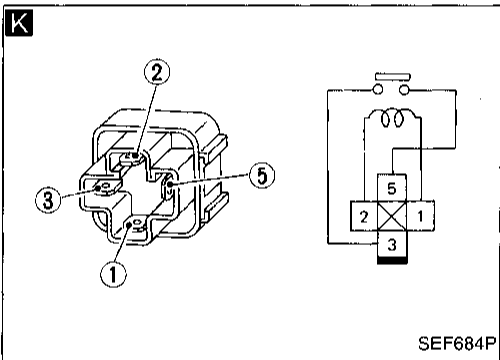

**K**

**CHECK ECCS RELAY.**

1. Apply 12V direct current between relay terminals ① and ②.
2. Check continuity between relay terminals ③ and ⑤.

**12V (① - ②) applied:**  
**Continuity exists.**  
**No voltage applied:**  
**No continuity**

NG → Replace ignition coil relay.

OK → Disconnect and reconnect harness connectors in the circuit. Then retest.

Trouble is not fixed.


Check ECM pin terminals for damage and check the connection of ECM harness connector. Reconnect ECM harness connector and retest.

INSPECTION END



# TROUBLE DIAGNOSIS FOR DTC P1320

## Ignition Signal (DTC: 0201) (Cont'd)

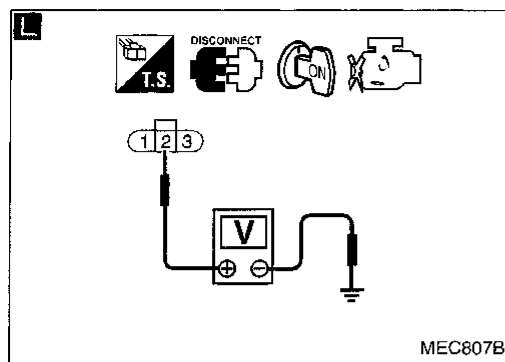

**L**

**CHECK POWER SUPPLY-IV.**


1. Turn ignition switch "OFF".
2. Disconnect ignition coil harness connector.
3. Reconnect harness connectors (E10), (F23).
4. Turn ignition switch "ON".
5. Check voltage between terminal (2) and ground with CONSULT or tester.

**Voltage: Battery voltage**

NG → Check the following.

- Harness for open or short between ignition coil and harness connector (F23)

If NG, repair harness or connectors.

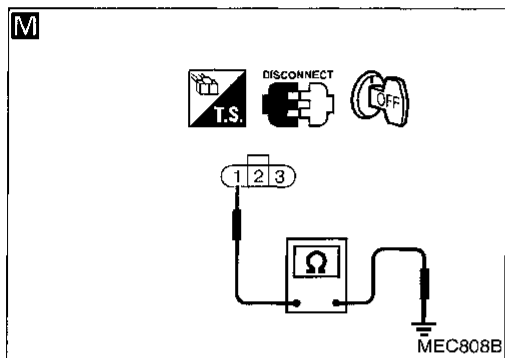


**M**

**CHECK GROUND CIRCUIT-II.**

1. Turn ignition switch "OFF".
2. Check harness continuity between terminal (1) and ground.

**Continuity should exist.**  
If OK, check harness for short.

NG → Repair harness or connectors.

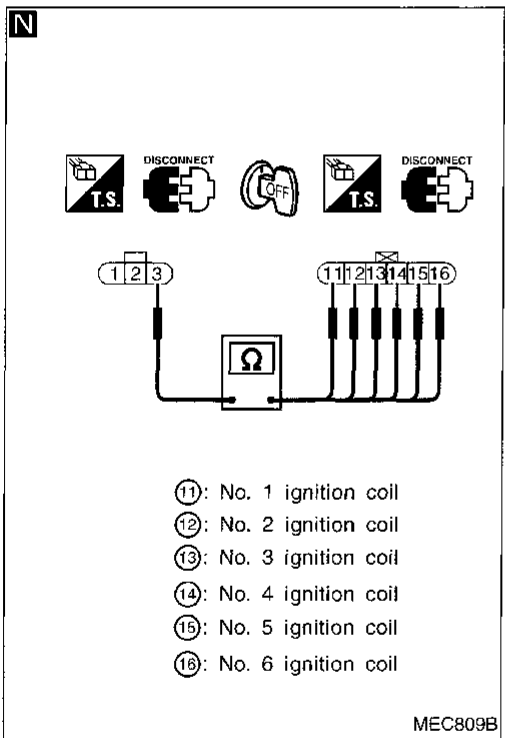

**N**

**CHECK OUTPUT SIGNAL CIRCUIT-III.**

1. Disconnect power transistor unit harness connector (F34).
2. Check harness continuity between terminal (3) and terminals (11), (12), (13), (14), (15), (16).

**Continuity should exist.**  
If OK, check harness for short.

NG → Repair harness or connectors.

**CHECK COMPONENT (Ignition coil).**  
Refer to "COMPONENT INSPECTION" on next page.

NG → Replace ignition coil.

**CHECK COMPONENT (Power transistor unit).**  
Refer to "COMPONENT INSPECTION" on next page.

NG → Replace power transistor unit.

Disconnect and reconnect harness connectors in the circuit. Then retest.

INSPECTION END

- (11): No. 1 ignition coil
- (12): No. 2 ignition coil
- (13): No. 3 ignition coil
- (14): No. 4 ignition coil
- (15): No. 5 ignition coil
- (16): No. 6 ignition coil

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX


# TROUBLE DIAGNOSIS FOR DTC P1320

## Ignition Signal (DTC: 0201) (Cont'd)

### COMPONENT INSPECTION

#### Ignition coil

1. Disconnect ignition coil harness connector.
2. Check resistance as shown in the figure.

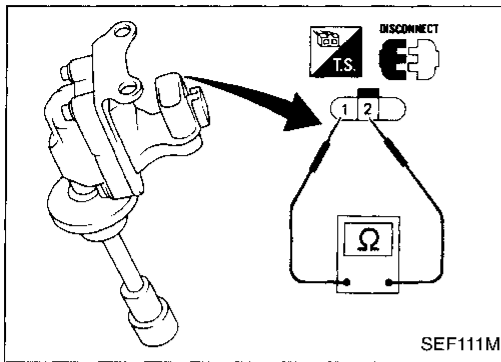


Terminal	Resistance [AT 20°C (68°F)]
① - ②	Approximately 0.9Ω

If NG, replace ignition coil.



#### Power transistor

1. Disconnect power transistor harness connector.
2. Check power transistor continuity between terminals as shown in the figure.

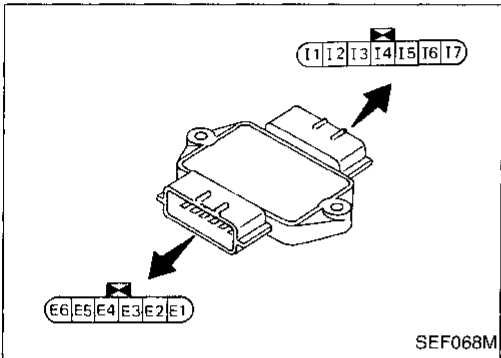

Terminal combination						Tester polarity	Con-tinuity	Tester polarity	Con-tinuity
G	G	G	G	G	G	⊕	No	⊖	Yes
E1	E2	E3	E4	E5	E6	⊖		⊕	
G	G	G	G	G	G	⊕	Yes	⊖	Yes
I1	I2	I3	I4	I5	I6	⊖		⊕	
E1	E2	E3	E4	E5	E6	⊕	Yes	⊖	No
I1	I2	I3	I4	I5	I6	⊖		⊕	

If NG, replace power transistor.

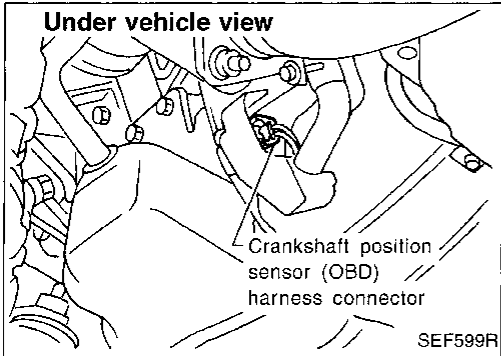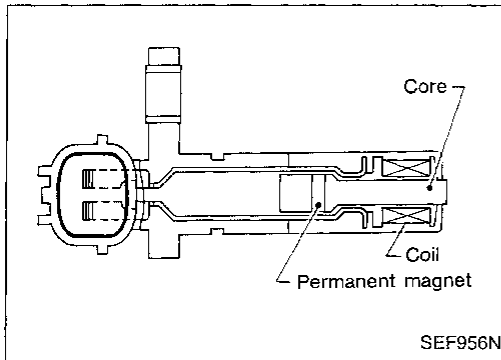

### Crankshaft Position Sensor (CKPS) (OBD) (COG) (DTC: 0905)

The crankshaft position sensor (OBD) is located on the transmission housing facing the gear teeth (cogs) of the drive plate. It detects the fluctuation of the engine revolution.

The sensor consists of a permanent magnet, core and coil.

When the engine is running, the high and low parts of the teeth cause the gap with the sensor to change.

The changing gap causes the magnetic field near the sensor to change.

Due to the changing magnetic field, the voltage from the sensor changes.

The ECM receives the voltage signal and detects the fluctuation of the engine revolution.

This sensor is not used to control the engine system. It is used only for the on board diagnosis of misfire.

GI  
MA  
EM  
LC  
EC

FE  
CL

MT  
AT  
PD

FA  
RA  
BR  
ST  
RS  
BT

HA  
EL  
DX

Diagnostic Trouble Code No.	Malfunction is detected when ....	Check Items (Possible Cause)
P1336 0905	<ul style="list-style-type: none"> <li>A chipping of the drive plate gear tooth (cog) is detected by the ECM.</li> </ul>	<ul style="list-style-type: none"> <li>Harness or connectors</li> <li>Crankshaft position sensor (OBD)</li> <li>Drive plate</li> </ul>

### DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT.
- 2) Start engine and run it for at least 2 minutes at idle speed.

OR

- 1) Start engine and run it for at least 2 minutes at idle speed.
- 2) Select "MODE 3" with GST.




OR

- 1) Start engine and run it for at least 2 minutes at idle speed.
- 2) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 3) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

# TROUBLE DIAGNOSIS FOR DTC P1336

## Crankshaft Position Sensor (CKPS) (OBD) (COG) (DTC: 0905) (Cont'd)






EC-CKPS-01

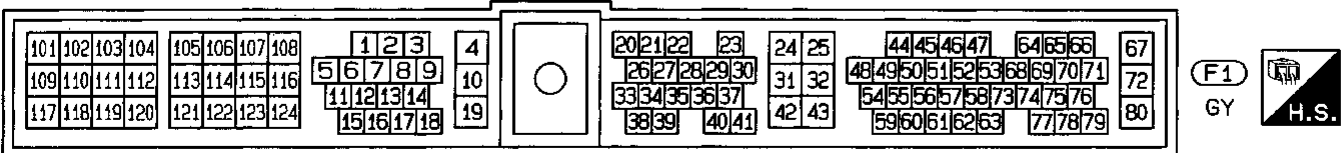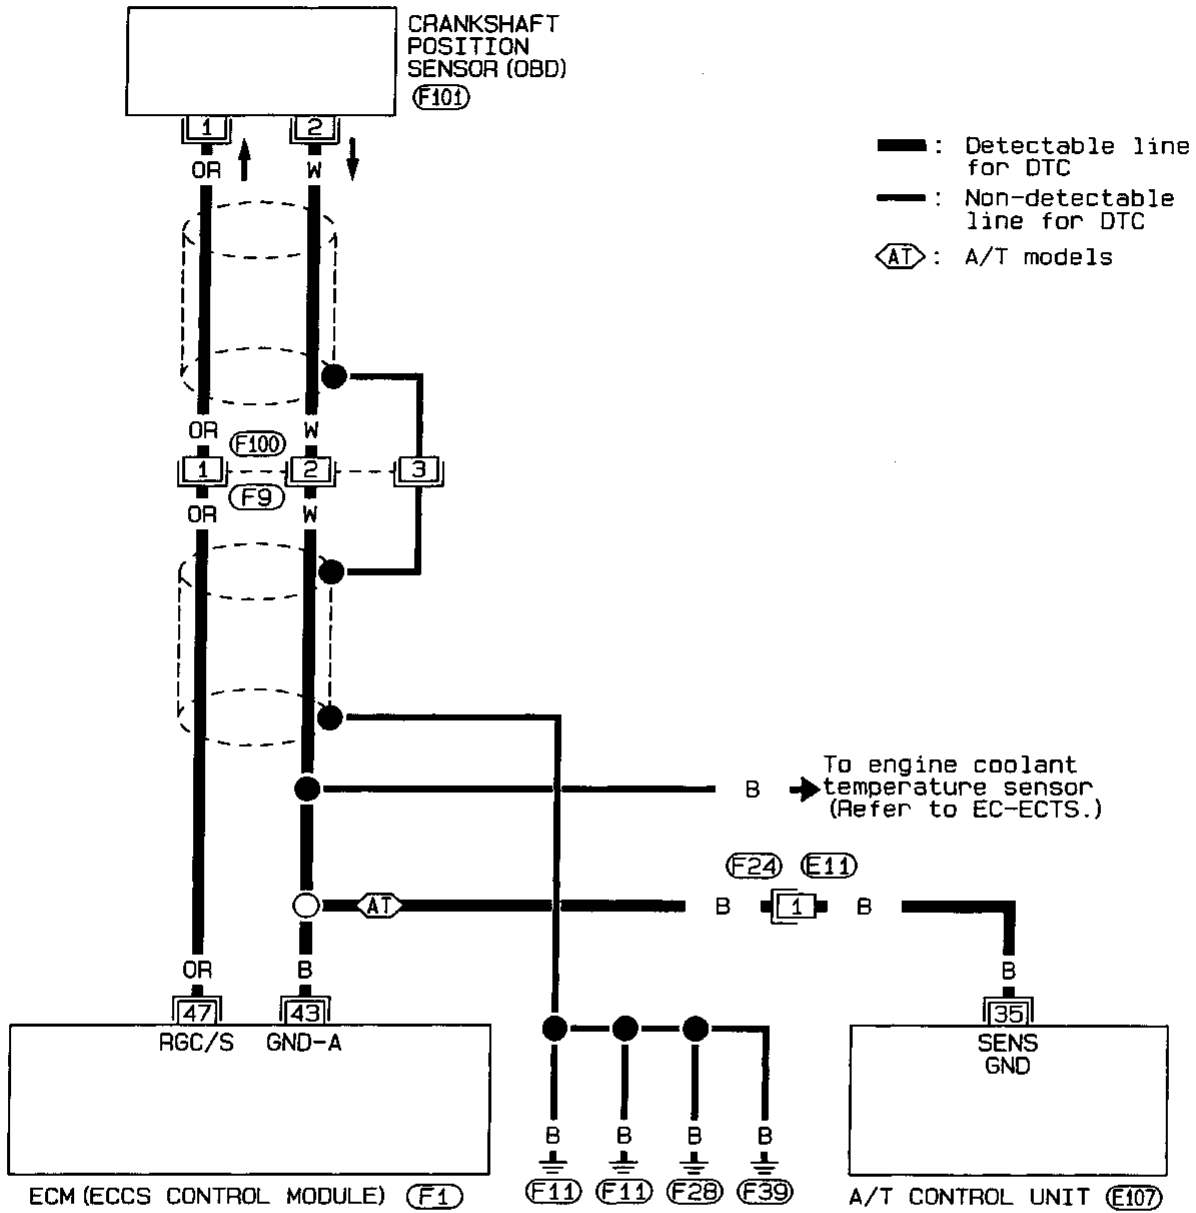

# TROUBLE DIAGNOSIS FOR DTC P1336

## Crankshaft Position Sensor (CKPS) (OBD) (COG) (DTC: 0905) (Cont'd)

### DIAGNOSTIC PROCEDURE

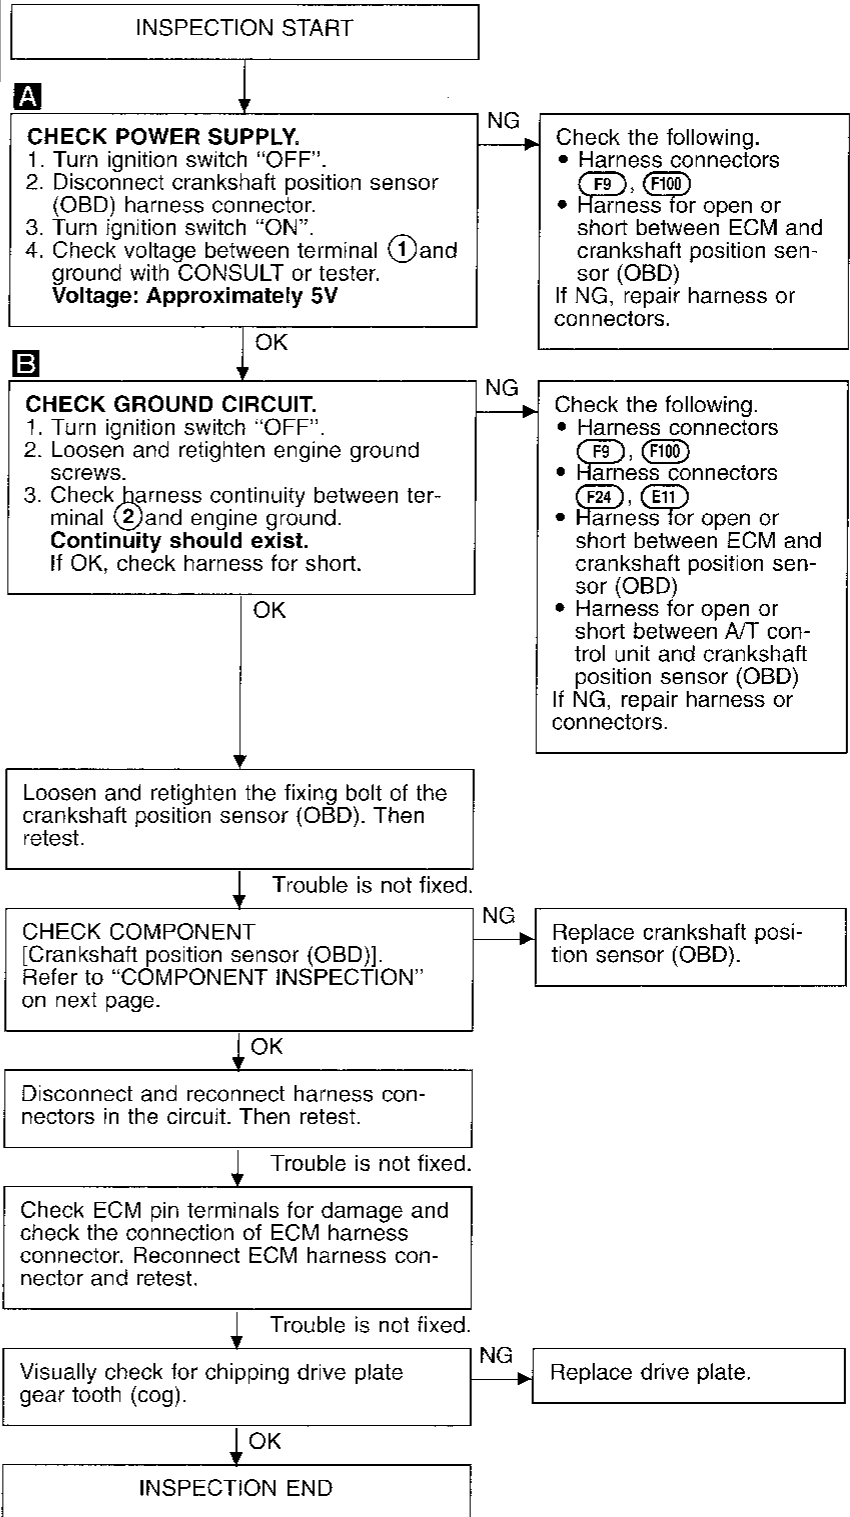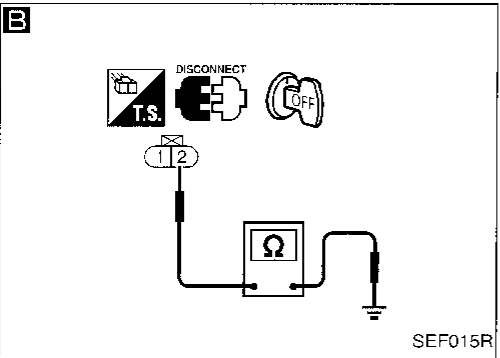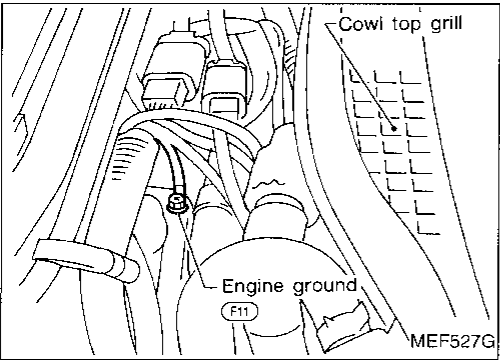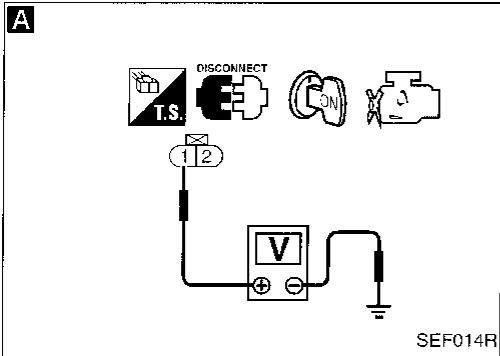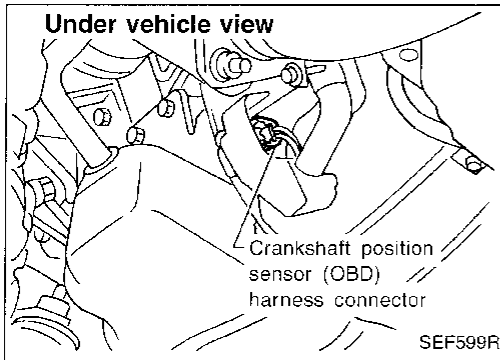

GI  
WA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
PD  
EA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX



## TROUBLE DIAGNOSIS FOR DTC P1336


### Crankshaft Position Sensor (CKPS) (OBD) (COG) (DTC: 0905) (Cont'd)

#### COMPONENT INSPECTION

##### Crankshaft position sensor (OBD)

1. Disconnect crankshaft position sensor (OBD) harness connector.
2. Loosen the fixing bolt of the sensor.
3. Remove the sensor.
4. Visually check the sensor for chipping.
5. Check resistance as shown in the figure.  
**Resistance: Approximately 166 - 204 $\Omega$**   
**[at 20°C (68°F)]**

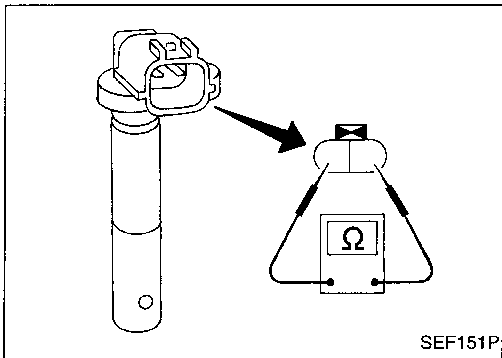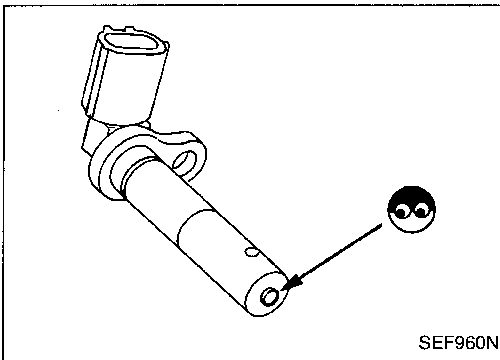

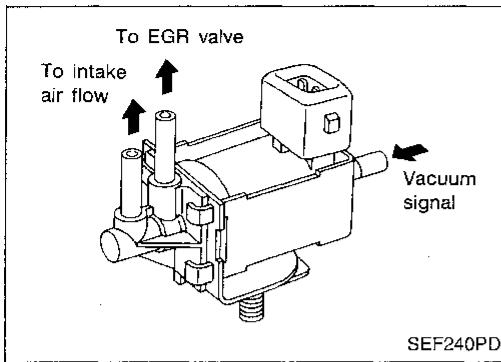

## EGRC-Solenoid Valve (DTC: 1005)

The EGRC-solenoid valve responds to signals from the ECM. When the ECM sends an ON (ground) signal, the coil in the solenoid valve is energized. A plunger will then move to cut the vacuum signal from the throttle body to the EGR valve.

When the ECM sends an OFF signal, the vacuum signal passes through the solenoid valve. The signal then reaches the EGR valve.

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS


BT

HA

EL

DX

Diagnostic Trouble Code No.	Malfunction is detected when ....	Check Items (Possible Cause)
P1400 1005	<ul style="list-style-type: none"> <li>The improper voltage signal is sent to ECM through EGRC-solenoid valve.</li> </ul>	<ul style="list-style-type: none"> <li>Harness or connectors (The EGRC-solenoid valve circuit is open or shorted.)</li> <li>EGRC-solenoid valve</li> </ul>

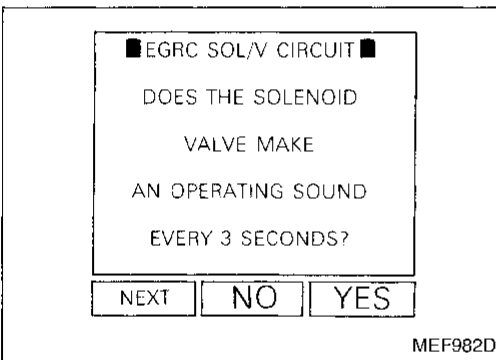

## OVERALL FUNCTION CHECK

Use this procedure to check the overall function of the EGRC-solenoid valve circuit.

During this check, a DTC might not be confirmed.


- 1) Turn ignition switch "ON".
- 2) Perform "EGRC SOL/V CIRCUIT" in "FUNCTION TEST" mode with CONSULT.

OR

- 1) Turn ignition switch "ON".
- 2) Perform "EGRC SOLENOID VALVE" in "ACTIVE TEST" mode with CONSULT and check the operating sound, according to ON/OFF switching.

OR



- 1) Turn ignition switch "ON".
- 2) When disconnecting and reconnecting the EGRC-solenoid valve harness connector, make sure that the solenoid valve makes operating sound.

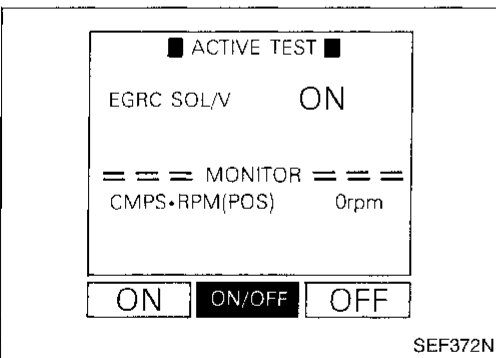

# TROUBLE DIAGNOSIS FOR DTC P1400

## EGRC-Solenoid Valve (DTC: 1005) (Cont'd)






EC-EGRC/V-01

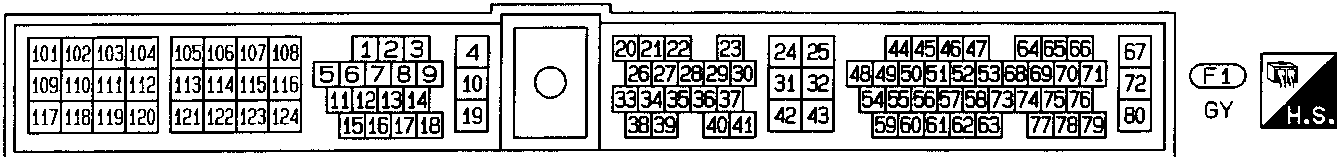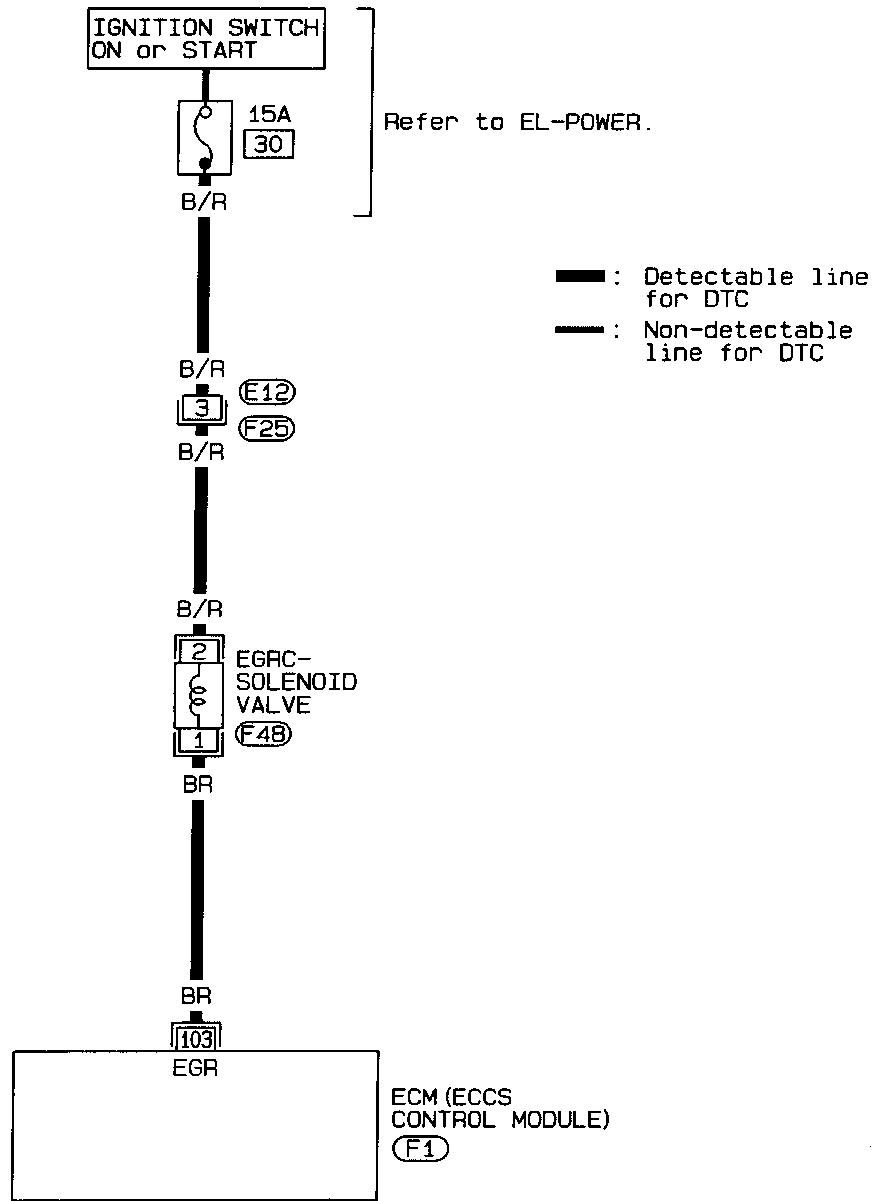



# TROUBLE DIAGNOSIS FOR DTC P1400

## EGRC-Solenoid Valve (DTC: 1005) (Cont'd) DIAGNOSTIC PROCEDURE

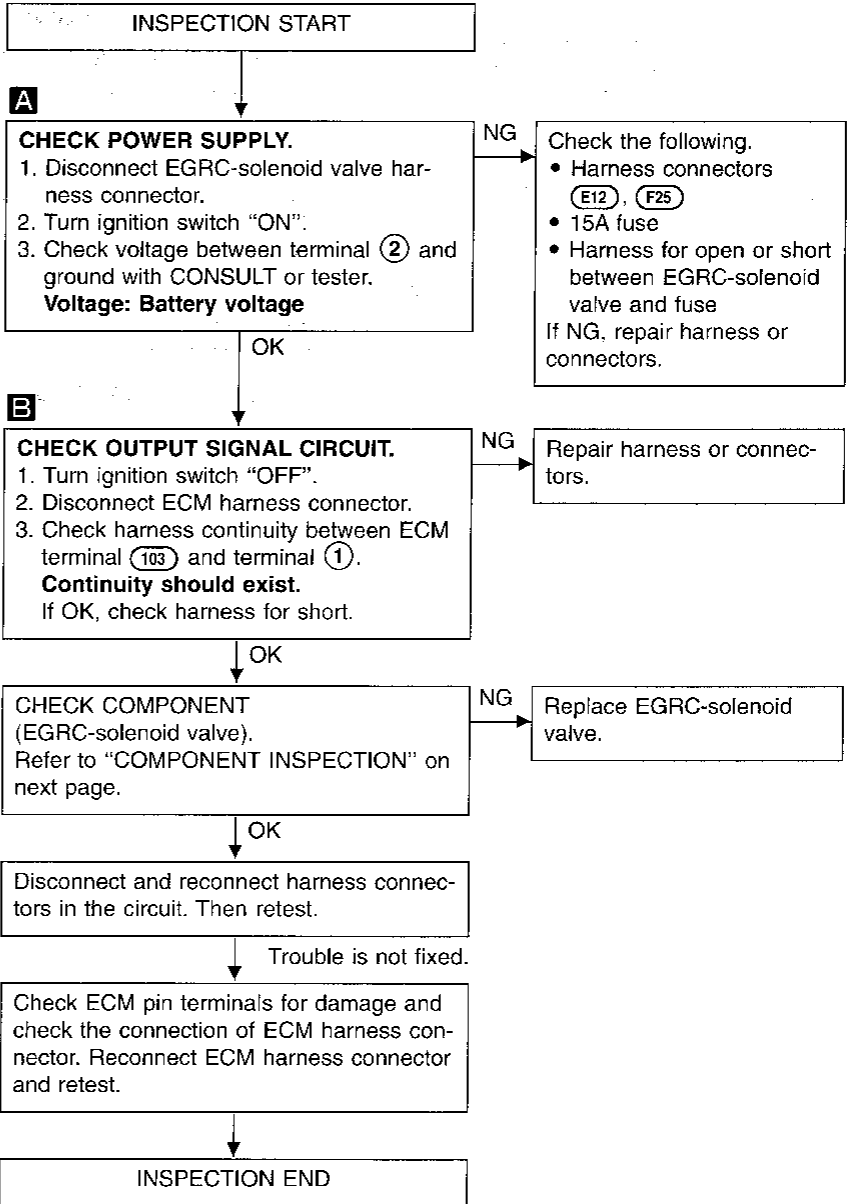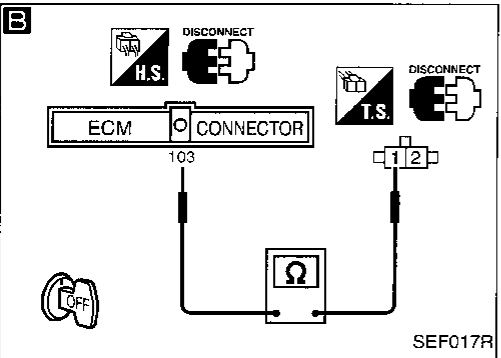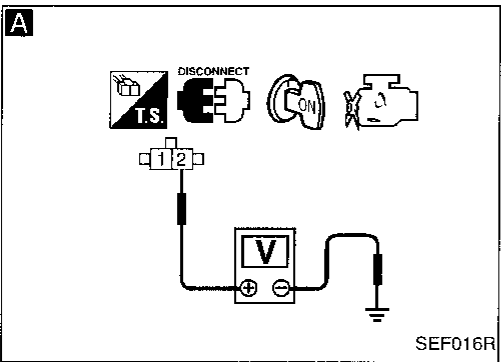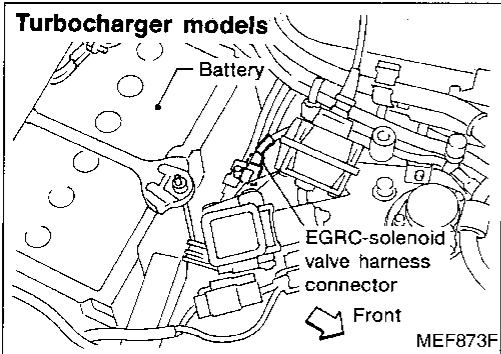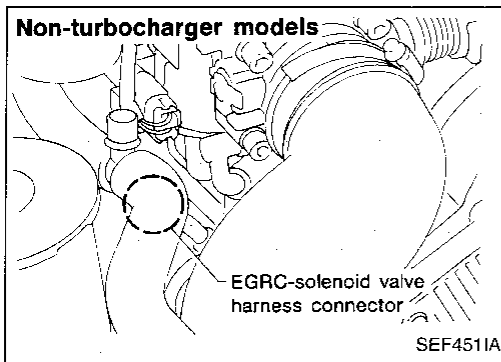

GI  
MA  
EM  
LC  
EC  
FE  
CL  
WT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
DX


## TROUBLE DIAGNOSIS FOR DTC P1400

### EGRC-Solenoid Valve (DTC: 1005) (Cont'd)

#### COMPONENT INSPECTION


#### EGRC-solenoid valve

Check air passage continuity.

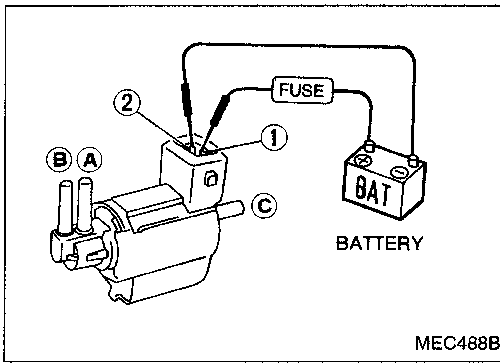

Condition	Air passage continuity between (A) and (B)	Air passage continuity between (A) and (C)
12V direct current supply between terminals ① and ②	Yes	No
No supply	No	Yes

If NG, replace solenoid valve.

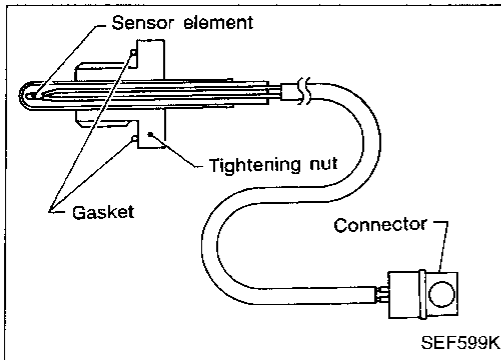


### EGR Temperature Sensor (DTC: 0305)

The EGR temperature sensor detects temperature changes in the EGR passage way. When the EGR valve opens, hot exhaust gases flow, and the temperature in the passage way changes. The EGR temperature sensor is a thermistor that modifies a voltage signal sent from the ECM. This modified signal then returns to the ECM as an input signal. As the temperature increases, EGR temperature sensor resistance decreases.

This sensor is not used to control the engine system. It is used only for the on board diagnosis.

GI  
MA  
EM

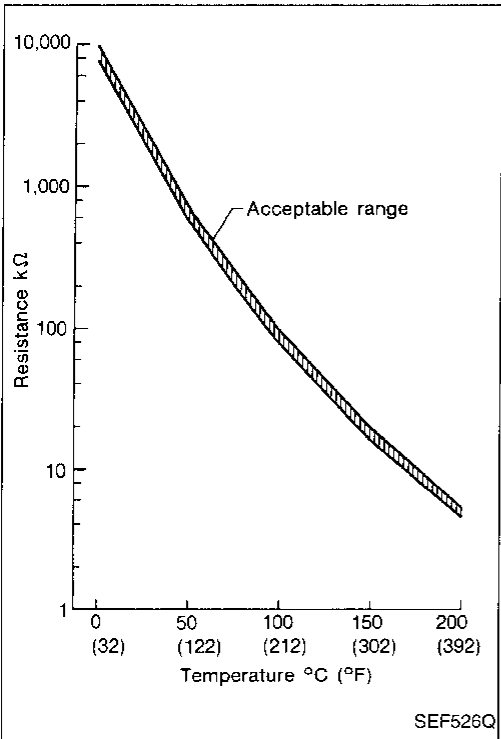

<Reference data>

EGR temperature °C (°F)	Voltage (V)	Resistance (MΩ)
0 (32)	4.81	7.9 - 9.7
50 (122)	2.82	0.57 - 0.70
100 (212)	0.8	0.08 - 0.10
150 (302)	0.16	0.01 - 0.02

LC  
EC  
FE

Diagnostic Trouble Code No.	Malfunction is detected when ....	Check Items (Possible Cause)
P1401 0305	A) An excessively low voltage from the EGR temperature sensor is sent to ECM, even when engine coolant temperature is low.	<ul style="list-style-type: none"> <li>• Harness or connectors (The EGR temperature sensor circuit is shorted.)</li> <li>• EGR temperature sensor</li> <li>• Malfunction of EGR function or EGRC-solenoid valve</li> </ul>
	B) An excessively high voltage from the EGR temperature sensor is sent to ECM, even when engine coolant temperature is high.	<ul style="list-style-type: none"> <li>• Harness or connectors (The EGR temperature sensor circuit is open.)</li> <li>• EGR temperature sensor</li> <li>• Malfunction of EGR function or EGRC-solenoid valve</li> </ul>

CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT

HA  
EL  
IDX

# TROUBLE DIAGNOSIS FOR DTC P1401

## EGR Temperature Sensor (DTC: 0305) (Cont'd) OVERALL FUNCTION CHECK

Use this procedure to check the overall function of the EGR temperature sensor. During this check, a DTC might not be confirmed.

### Procedure for malfunctions A and B




- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT.
- 2) Confirm that engine coolant temperature and intake air temperature are lower than 40°C (104°F). (If necessary, wait until the temperatures equal atmospheric temperature.)
- 3) Confirm that "EGR TEMP SEN" reading is between 3.0V and 5.0V.
- 4) Start engine and warm it up sufficiently.
- 5) Run engine at idle for at least 2 minutes.
- 6) Confirm that EGR valve is not lifting. (If necessary, try lifting with a suitable tool.) If NG, go to TROUBLE DIAGNOSES FOR DTC P0400, EC-211.
- 7) Read "EGR TEMP SEN" at about 1,500 rpm with EGR valve lifted up to the full position using a suitable tool. (When lifting up, place the tool as near to valve center as possible. Also, take care not to damage diaphragm.)  
**Voltage should decrease to less than 1.0V.**
- 8) If step 7 is OK, perform TROUBLE DIAGNOSES FOR DTC P0400 and P1400, EC-211 and 279.

OR

- 1) Turn ignition switch "ON".
- 2) Confirm that voltage between ECM terminals ⑤⑨, ⑥⑩ and ground are more than 2.72V. (If necessary, wait until engine coolant temperature and intake air temperature equal atmospheric temperature.)
- 3) Confirm that voltage between ECM terminal ⑥③ and ground is between 3.0V and 5.0V.
- 4) Start engine and warm it up sufficiently.
- 5) Run engine at idle for at least 2 minutes.
- 6) Confirm that EGR valve is not lifting. (If necessary, try lifting with a suitable tool.) If NG, go to TROUBLE DIAGNOSES FOR DTC P0400, EC-211.
- 7) Check voltage between ECM terminal ⑥③ and ground at about 1,500 rpm with EGR valve lifted up to the full position using a suitable tool. (When lifting up, place the tool as near to valve center as possible. Also, take care not to damage diaphragm.)  
**Voltage should decrease to less than 1.0V.**
- 8) If step 7 is OK, perform TROUBLE DIAGNOSES FOR DTC P0400 and P1400, EC-211 and 279.

☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>
CMPS•RPM (POS)	0rpm	
COOLAN TEMP/S	20°C	
EGR TEMP SEN	4.3V	
INT/A TEMP SE	22°C	





MEC823B

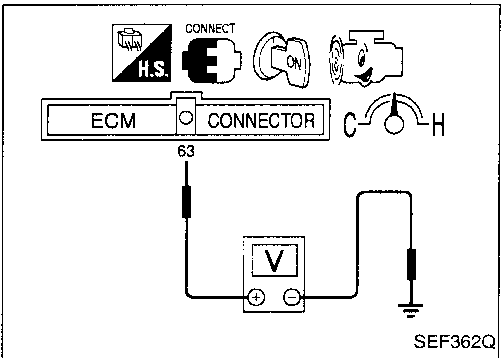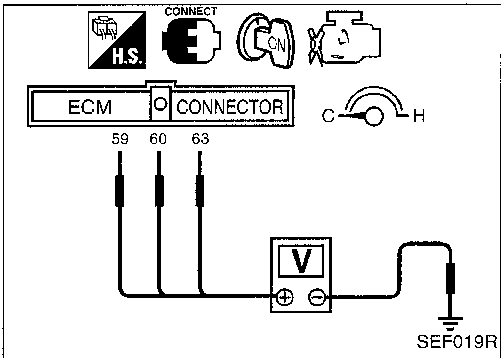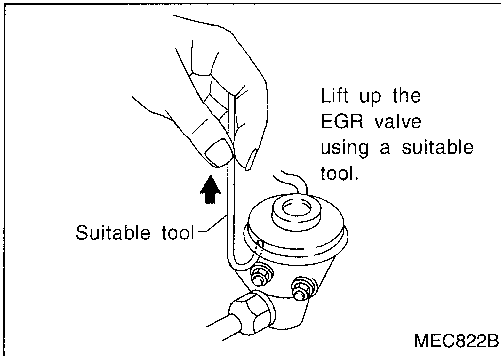

# TROUBLE DIAGNOSIS FOR DTC P1401

## EGR Temperature Sensor (DTC: 0305) (Cont'd)


### EC-EGR/TS-01

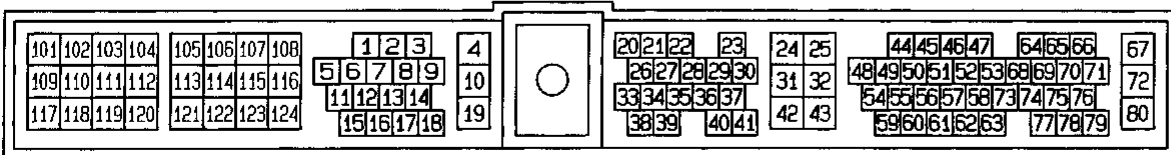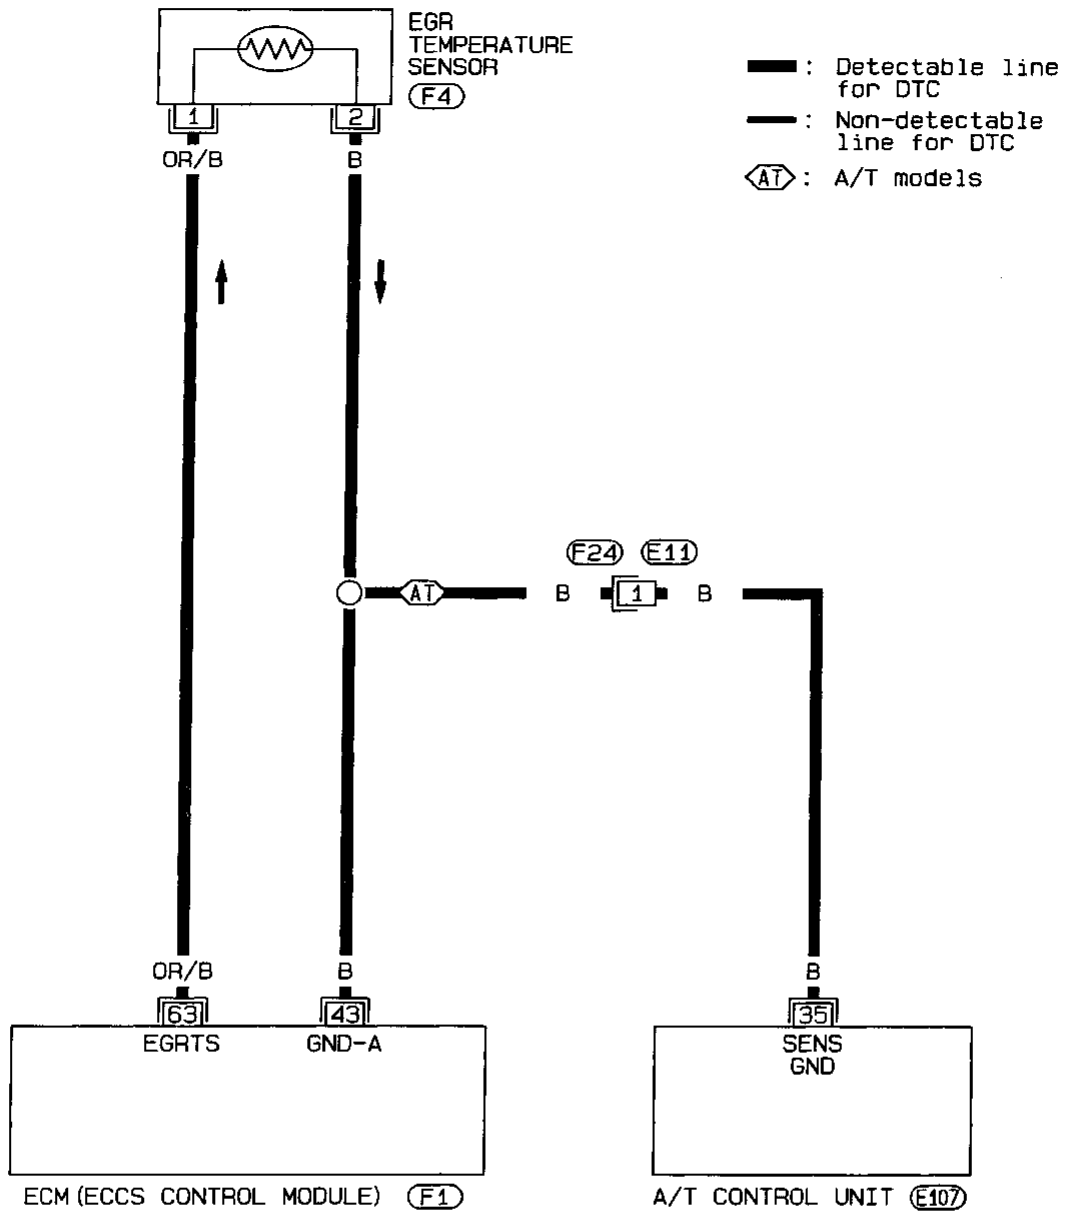

GI  
MA  
EM  
LC  
**EC**  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
DX

# TROUBLE DIAGNOSIS FOR DTC P1401

## EGR Temperature Sensor (DTC: 0305) (Cont'd) DIAGNOSTIC PROCEDURE

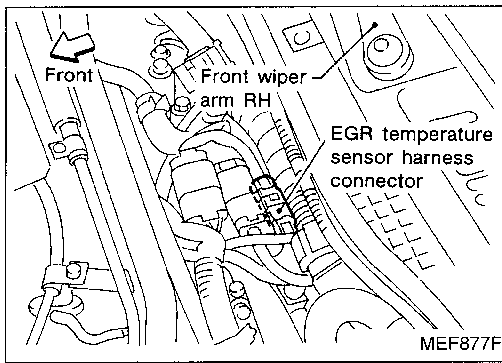

INSPECTION START

**A**

### CHECK POWER SUPPLY.

1. Disconnect EGR temperature sensor harness connector.
  2. Turn ignition switch "ON".
  3. Check voltage between terminal ① and ground with CONSULT or tester.
- Voltage: Approximately 5V**

NG → Repair harness or connectors.

OK

**B**

### CHECK GROUND CIRCUIT.

1. Turn ignition switch "OFF".
  2. Check harness continuity between terminal ② and engine ground.
- Continuity should exist.**  
If OK, check harness for short.

NG → Check the following.

- Harness connectors (F24, E11)
- Harness for open or short between ECM and EGR temperature sensor
- Harness for open or short between A/T control unit and EGR temperature sensor

If NG, repair harness or connector.

OK

### CHECK COMPONENT

(EGR temperature sensor). Refer to "COMPONENT INSPECTION" on next page.

NG → Replace EGR temperature sensor.



OK

Disconnect and reconnect harness connectors in the circuit. Then retest.

Trouble is not fixed.

Check ECM pin terminals for damage and check the connection of ECM harness connector. Reconnect ECM harness connector and retest.

INSPECTION END

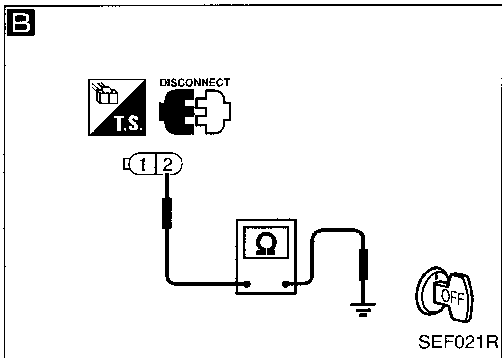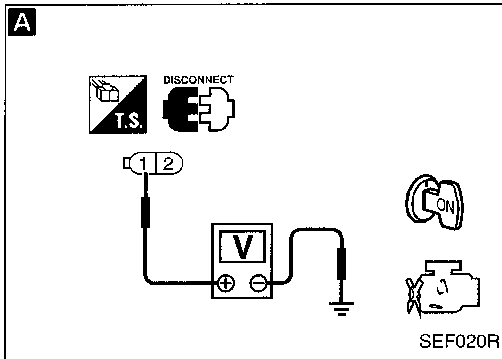


# TROUBLE DIAGNOSIS FOR DTC P1401

## EGR Temperature Sensor (DTC: 0305) (Cont'd) COMPONENT INSPECTION


### EGR temperature sensor

Check resistance as shown in the figure.  
(Reference data)

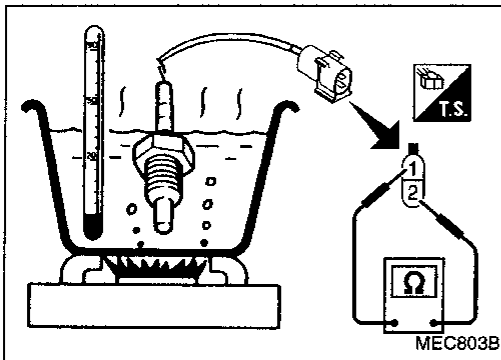


EGR temperature °C (°F)	Voltage (V)	Resistance (MΩ)
0 (32)	4.81	7.9 - 9.7
50 (122)	2.82	0.57 - 0.70
100 (212)	0.8	0.08 - 0.10

If NG, replace EGR temperature sensor.

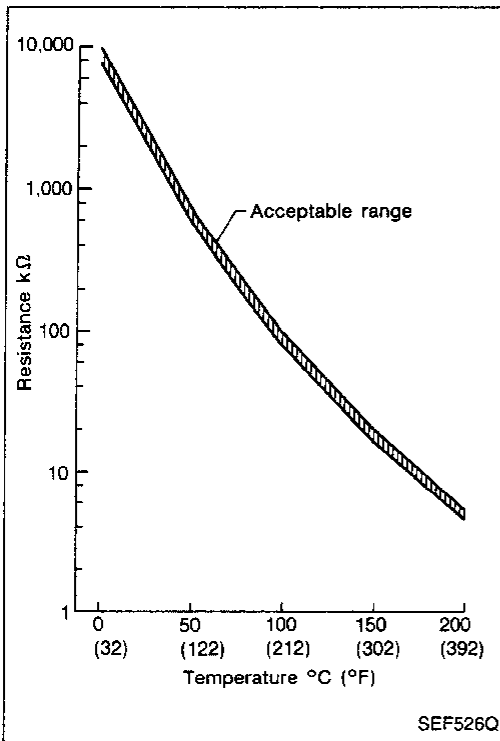

- GI
- MA
- EM
- LC
- EC**
- FE
- CL
- MT
- AT
- PD
- FA
- RA
- BR
- ST
- RS
- BT
- HA
- EL
- IDX

## TROUBLE DIAGNOSIS FOR DTC P1443

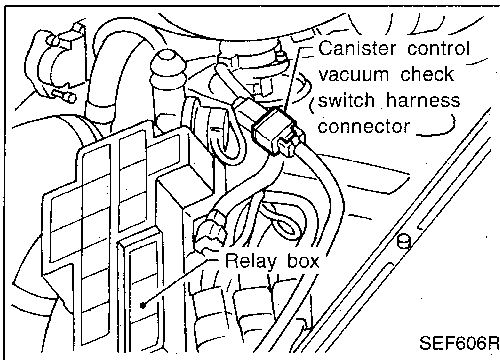


### Canister Control Vacuum Check Switch (DTC: 0113)

#### COMPONENT DESCRIPTION

##### Canister control vacuum check switch

The canister control vacuum check switch is installed in the vacuum line between EVAP canister purge control solenoid valve and EVAP canister purge control valve (built into EVAP canister). The switch detects vacuum signal to the EVAP canister purge control valve, and sends an "ON" or "OFF" signal to the ECM. When no vacuum is supplied to the valve, the canister control vacuum check switch sends an "ON" signal to the ECM. When vacuum is supplied to the valve, canister control vacuum check switch sends "OFF" signal to the ECM.

The canister control vacuum check switch is not used to control the engine system. It is used only for on board diagnosis.

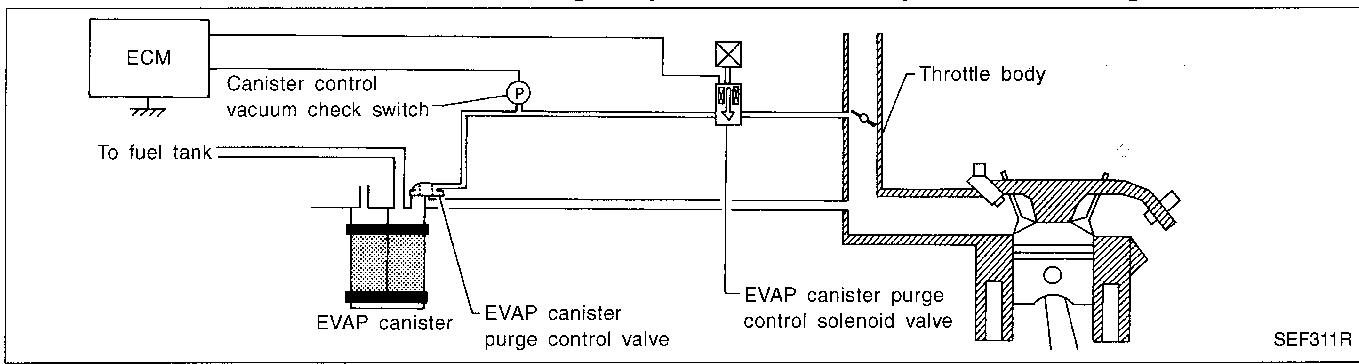

Diagnostic Trouble Code No.	Malfunction is detected when ....	Check Items (Possible Cause)
P1443 0113	The canister control vacuum check switch remains "OFF" even though no vacuum is supplied to the EVAP canister purge control valve.	<ul style="list-style-type: none"> <li>• Harness or connectors (The canister control vacuum check switch circuit is open.)</li> <li>• Hoses (Hoses are connected incorrectly.)</li> <li>• Throttle position sensor</li> <li>• Engine coolant temperature sensor</li> <li>• EVAP canister purge control solenoid valve</li> <li>• Canister control vacuum check switch</li> </ul>



# TROUBLE DIAGNOSIS FOR DTC P1443

## Canister Control Vacuum Check Switch (DTC: 0113) (Cont'd)

### DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE



- 1) Start engine and warm it up sufficiently.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Turn ignition switch "ON".
- 4) Select "DATA MONITOR" mode with CONSULT.
- 5) Start engine and warm it up sufficiently.
- 6) Wait at least 6 seconds.

GI

MA

OR



- 1) Start engine and warm it up sufficiently.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Start engine and warm it up sufficiently.
- 4) Wait at least 6 seconds.
- 5) Select "MODE 3" with GST.

EM

LC

OR



- 1) Start engine and warm it up sufficiently.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Start engine and warm it up sufficiently.
- 4) Wait at least 6 seconds, and turn ignition switch "OFF".
- 5) Wait at least 5 seconds, and then turn ignition switch "ON".
- 6) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA



EL

IDX

# TROUBLE DIAGNOSIS FOR DTC P1443

## Canister Control Vacuum Check Switch (DTC: 0113) (Cont'd)


EC-C/VCSW-01

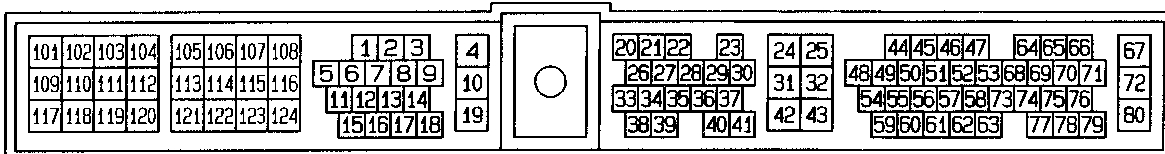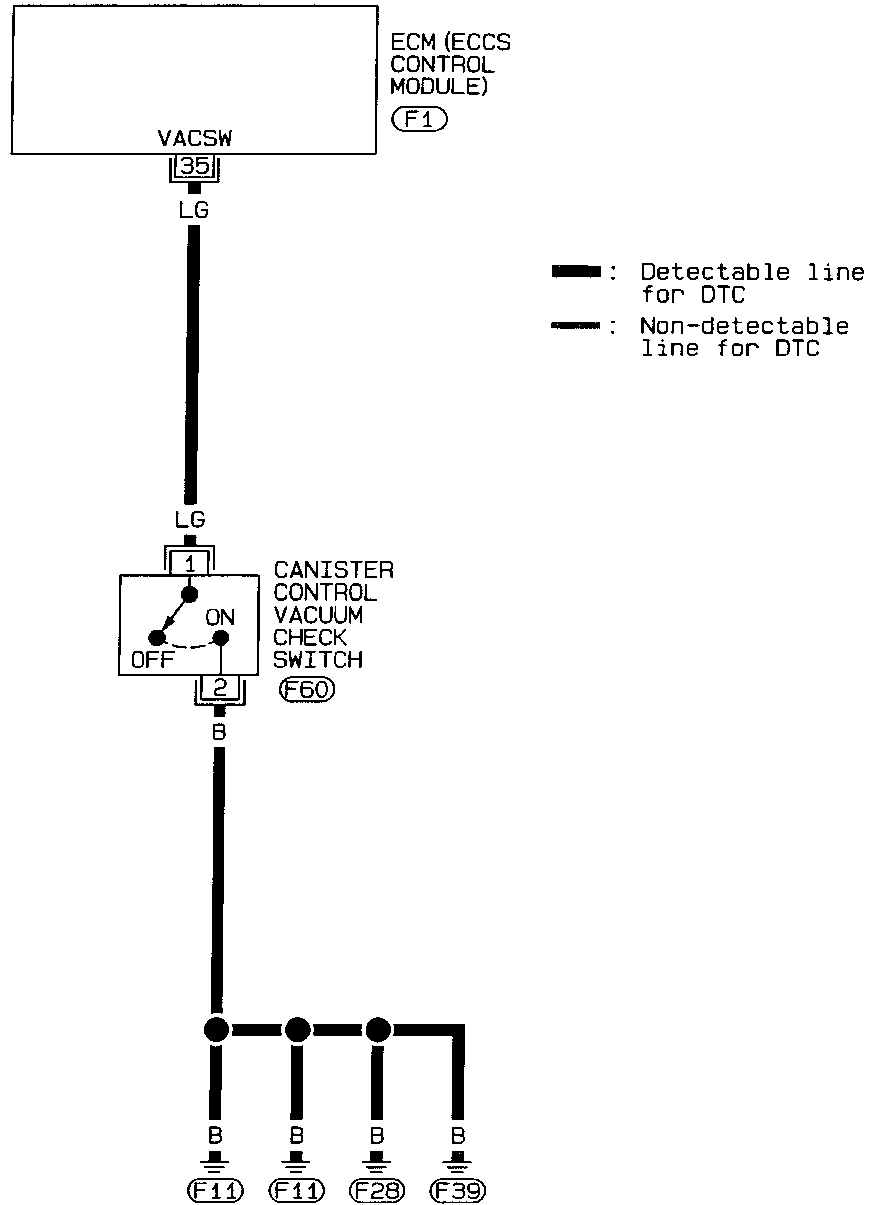

# TROUBLE DIAGNOSIS FOR DTC P1443

## Canister Control Vacuum Check Switch (DTC: 0113) (Cont'd)

### DIAGNOSTIC PROCEDURE

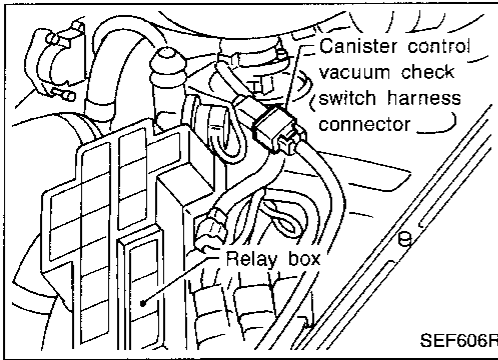


INSPECTION START

**CHECK HOSE BETWEEN THROTTLE BODY AND EVAP CANISTER PURGE CONTROL VALVE.**  
 1. Turn ignition switch "OFF".  
 2. Check hose for improper connection.

NG → Reconnect hose correctly.


OK

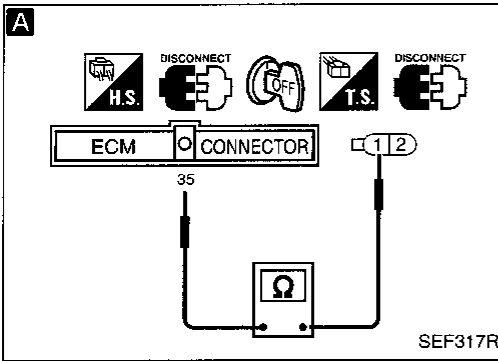

**CHECK INPUT SIGNAL CIRCUIT.**  
 1. Turn ignition switch "OFF".  
 2. Disconnect canister control vacuum check switch harness connector and ECM harness connector.  
 3. Check harness continuity between terminal ① and ECM terminal ③5.  
**Continuity should exist.**  
 If OK, check harness for short.

NG → Repair harness or connectors.

OK

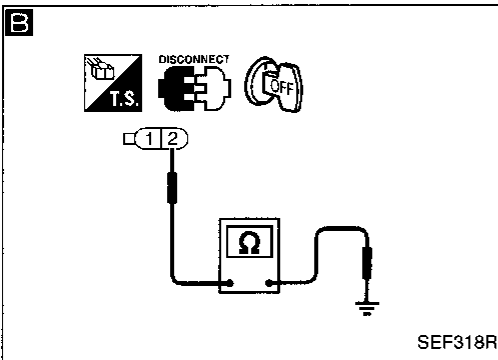

**CHECK GROUND CIRCUIT.**  
 Check harness continuity between terminal ② and engine ground.  
**Continuity should exist.**  
 If OK, check harness for short.

NG → Repair harness or connectors.

OK

**CHECK COMPONENT (Throttle position sensor).**  
 Refer to "COMPONENT INSPECTION", "TROUBLE DIAGNOSIS FOR DTC P0120", EC-126.

NG → Replace throttle position sensor.

OK

**CHECK COMPONENT (Engine coolant temperature sensor).**  
 Refer to "COMPONENT INSPECTION", "TROUBLE DIAGNOSIS FOR DTC P0115", EC-121.

NG → Replace engine coolant temperature sensor.



OK

Ⓐ

GI  
 MA  
 EM  
 LC  
**EC**  
 FE  
 CL  
 MT  
 AT  
 PD  
 FA  
 RA  
 BR  
 ST  
 RS  
 BT  
 HA  
 EL  
 DX

# TROUBLE DIAGNOSIS FOR DTC P1443

## Canister Control Vacuum Check Switch (DTC: 0113) (Cont'd)

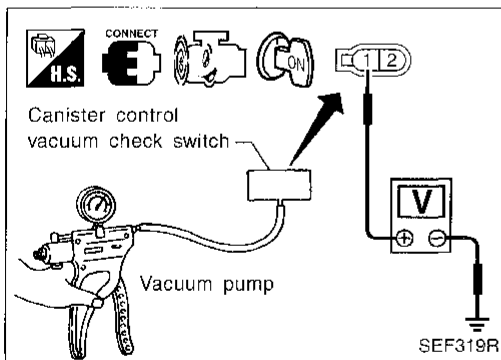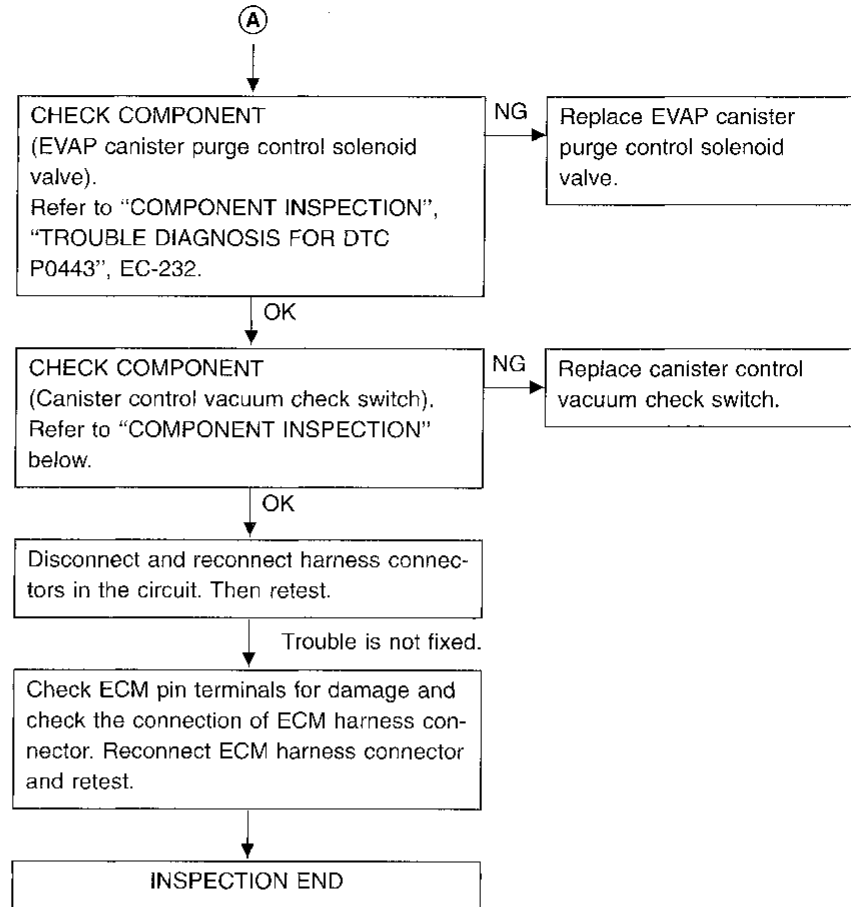

### COMPONENT INSPECTION

#### Canister control vacuum check switch

1. Disconnect hose from canister control vacuum check switch.
2. Use vacuum pump to apply vacuum to canister control vacuum check switch as shown in figure.
3. Start engine.
4. Check voltage between terminal ① and engine ground with CONSULT or tester.

Pressure	Voltage (V)
More than -10.7 kPa (-80 mmHg, -3.15 inHg)	Engine ground
-10.7 to -14.7 kPa (-80 to -110 mmHg, -3.15 to -4.33 inHg)	Engine ground or Approx. 8.5
Less than -14.7 kPa (-110 mmHg, -4.33 inHg)	Approx. 8.5

5. If NG, replace canister control vacuum check switch.

**A/T Diagnosis Communication Line (DTC: 0804)**




The malfunction information related to A/T (Automatic Transmission) is transferred through the line (circuit) from A/T control unit to ECM. Therefore, be sure to erase the malfunction information such as DTC not only in A/T control unit but also ECM after the A/T related repair.

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P1605 0804	<ul style="list-style-type: none"> <li>An incorrect signal from A/T control unit is sent to ECM.</li> </ul>	<ul style="list-style-type: none"> <li>Harness or connectors (The communication line circuit between ECM and A/T control unit is open or shorted.)</li> <li>A/T control unit</li> <li>Dead (Weak) battery</li> </ul>

CI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

**DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE**





**Before performing the following procedure, confirm that battery voltage is more than 10.5V.**

- 
  - Turn ignition switch "ON".
  - Select "DATA MONITOR" mode with CONSULT.
  - Start engine and let it idle for at least 40 seconds.
- OR
- 
  - Start engine and let it idle for at least 40 seconds.
  - Select "MODE 3" with GST.
- OR
- 
  - Start engine and let it idle for at least 40 seconds.
  - Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
  - Perform diagnostic test mode II (self-diagnostic results) with ECM.

# TROUBLE DIAGNOSIS FOR DTC P1605

## A/T Diagnosis Communication Line (DTC: 0804) (Cont'd)




EC-ATDIAG-01

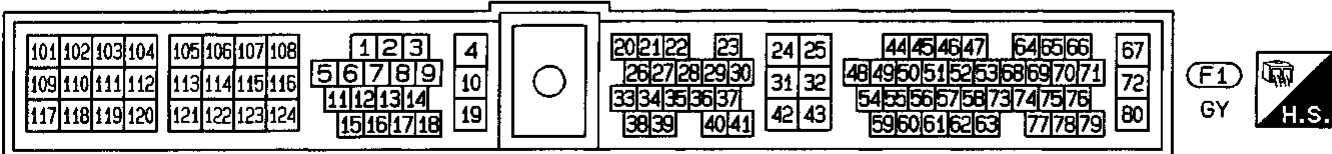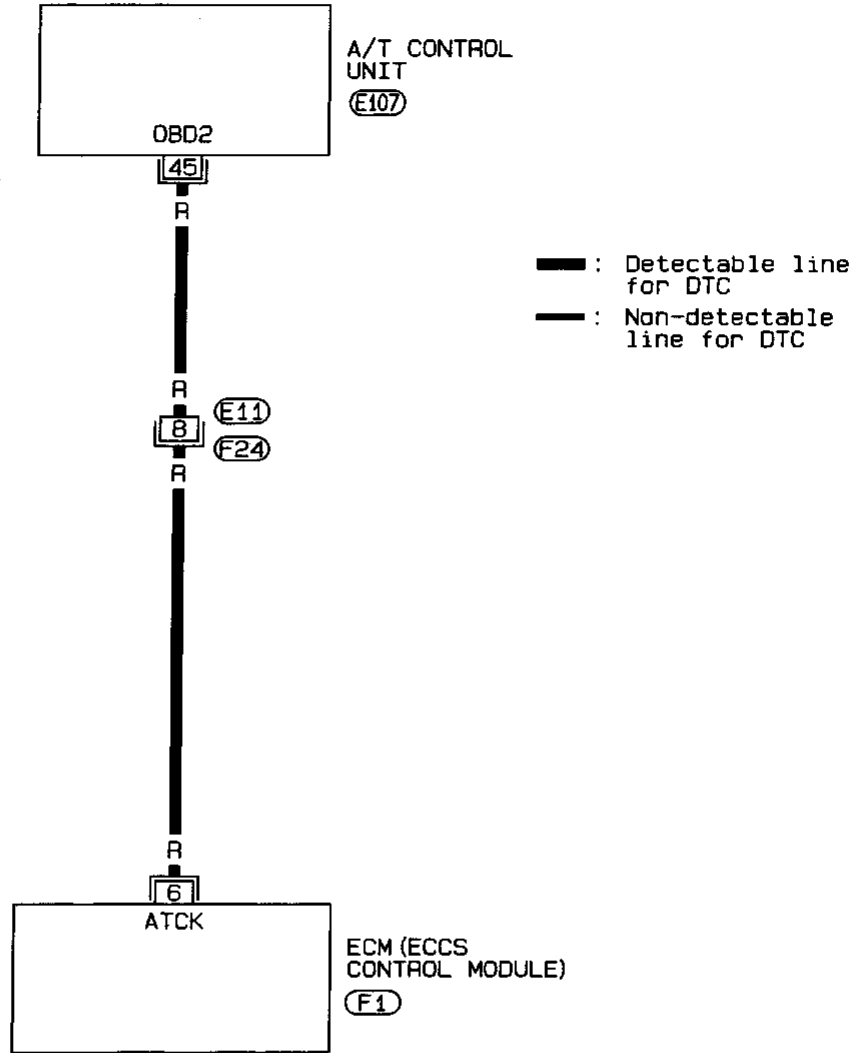

# TROUBLE DIAGNOSIS FOR DTC P1605

## A/T Diagnosis Communication Line (DTC: 0804) (Cont'd)

### DIAGNOSTIC PROCEDURE

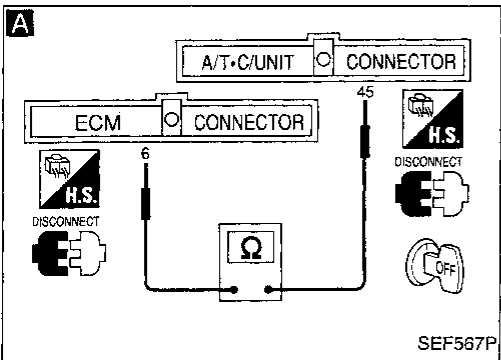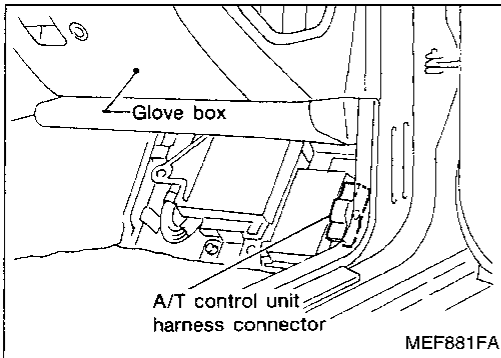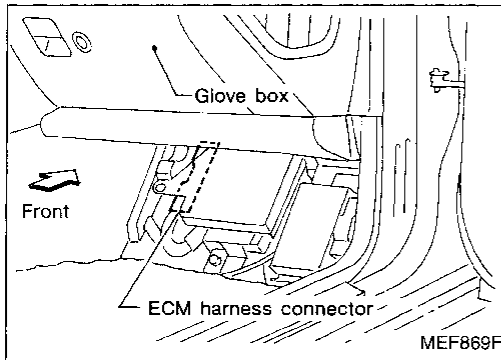

INSPECTION START

**A**  
**CHECK INPUT SIGNAL CIRCUIT.**  
 1. Turn ignition switch "OFF".  
 2. Disconnect ECM harness connector and A/T control unit harness connector.  
 3. Check harness continuity between ECM terminal (6) and terminal (45).  
**Continuity should exist.**  
 If OK, check harness for short.

NG → Check the following.  
 • Harness connectors (E11), (F24)  
 • Harness for open or short between ECM and A/T control unit  
 If NG, repair harness or connectors.

OK  
 Disconnect and reconnect harness connectors in the circuit. Then retest.


Trouble is not fixed.  
 Check ECM and A/T control unit pin terminals for damage and check the connection of ECM and A/T control unit harness connectors. Reconnect ECM and A/T control unit harness connectors and retest.

INSPECTION END

GI  
 MA  
 EM  
 LC  
 EC  
 FE  
 CL  
 MT  
 AT  
 PD  
 FA  
 RA  
 BR  
 ST  
 RS  
 BT  
 HA  
 EL  
 IDX


## Cooling Fan (DTC: 1308)

### SYSTEM DESCRIPTION

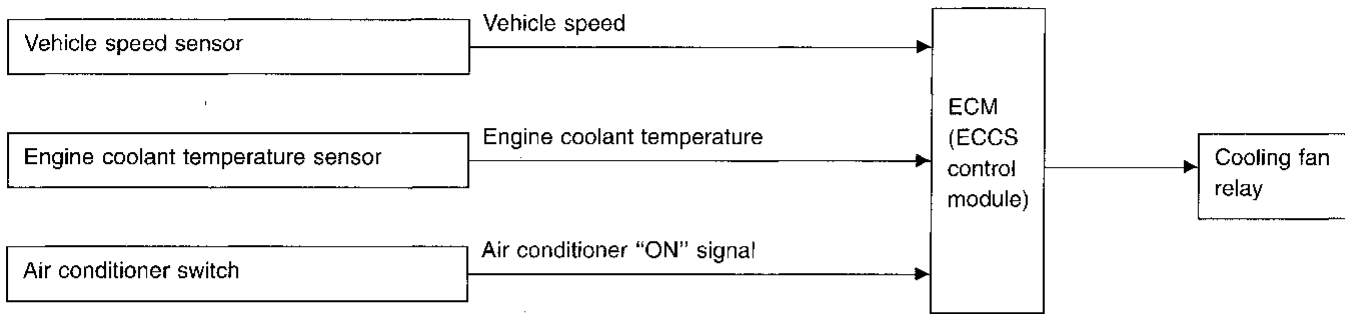

The ECM controls the cooling fan corresponding to the vehicle speed, engine coolant temperature and air conditioner ON signal. The control system has a 2-step control [ON/OFF] (Non-turbocharger models), or a 3-step control [HIGH/LOW/OFF] (Turbocharger models).

### Operation

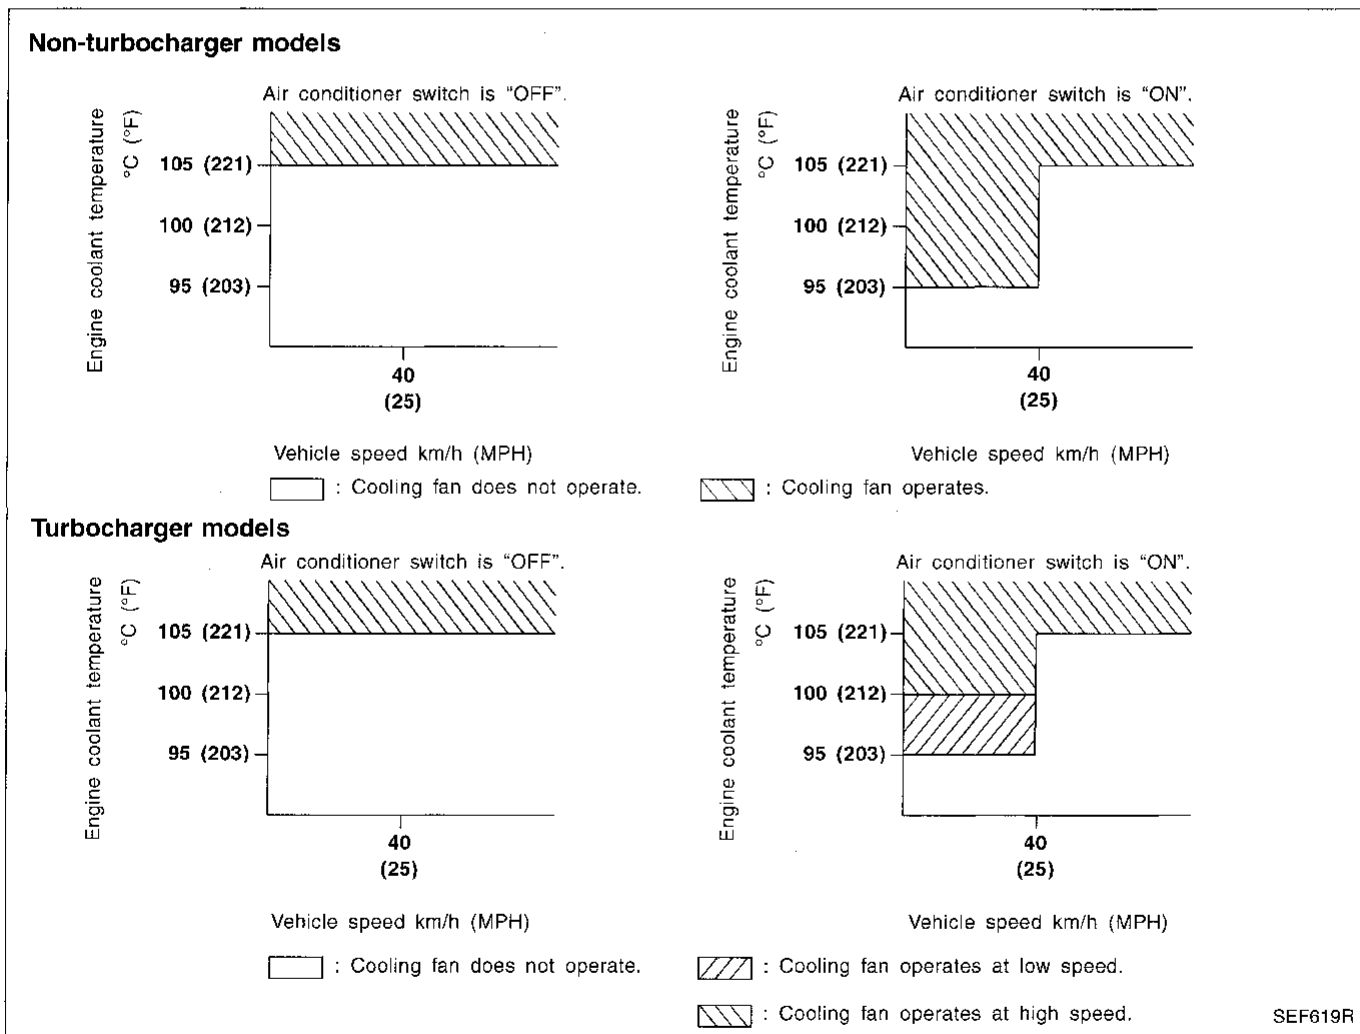

### ON BOARD DIAGNOSIS LOGIC

This diagnosis continuously monitors the engine coolant temperature.

If the cooling fan or another component in the cooling system malfunctions, the engine coolant temperature will rise.

When the engine coolant temperature reaches an abnormally high temperature condition, a malfunction is indicated.



# TROUBLE DIAGNOSIS FOR DTC P1900




## Cooling Fan (DTC: 1308) (Cont'd)

Diagnostic trouble code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P1900 1308	<ul style="list-style-type: none"> <li>• Cooling fan does not operate properly (Overheat).</li> <li>• Cooling system does not operate properly (Overheat).</li> <li>• Engine coolant was not added to the system using the proper filling method.</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connectors. (The cooling fan circuit is open or shorted.)</li> <li>• Cooling fan</li> <li>• Radiator hose</li> <li>• Radiator</li> <li>• Radiator cap</li> <li>• Water pump</li> <li>• Thermostat</li> </ul> <p>For more information, refer to "MAIN 12 CAUSES OF OVERHEATING", EC-309.</p>

**CAUTION:**

When a malfunction is indicated, be sure to replace the coolant following the procedure in the MA section ("Changing Engine Coolant", "ENGINE MAINTENANCE"). Also, replace the engine oil.

- a. Fill radiator with coolant up to specified level with a filling speed of 2 liters per minute like pouring coolant by kettle. Be sure to use coolant with the proper mixture ratio. Refer to MA section ("Anti-freeze Coolant Mixture Ratio", "RECOMMENDED FLUIDS AND LUBRICANTS").
- b. After refilling coolant, run engine to ensure that no water-flow noise is emitted.

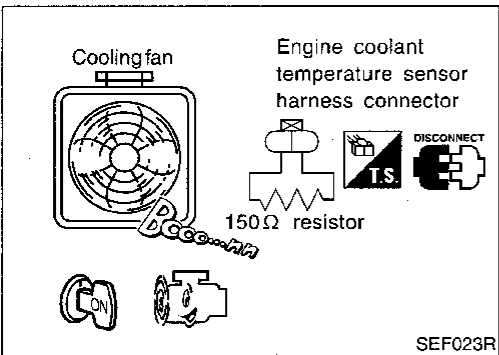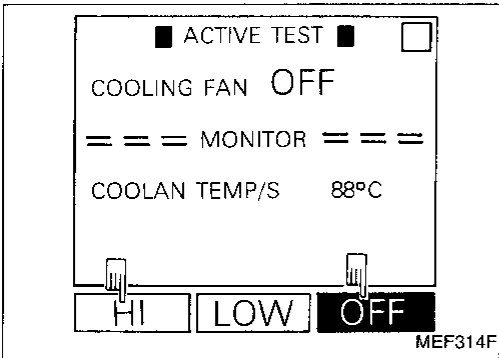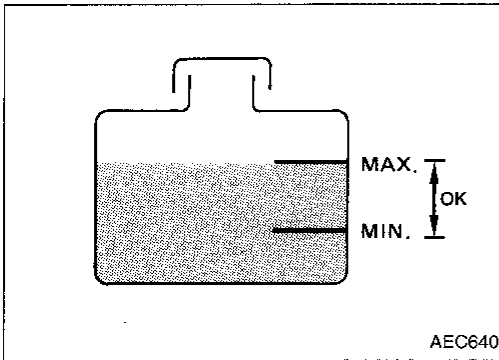

**OVERALL FUNCTION CHECK**

Use this procedure to check the overall function of the cooling fan. During this check, a DTC might not be confirmed.

**WARNING:**

**Never remove the radiator cap when the engine is hot. Serious burns could be caused by high pressure fluid escaping from the radiator.**






**Wrap a thick cloth around cap. Carefully remove the cap by turning it a quarter turn to allow built-up pressure to escape. Then turn the cap all the way off.**

- 1) Check the coolant level in the reservoir tank and radiator.  
**Allow engine to cool before checking coolant level.**  
If the coolant level in the reservoir tank and/or radiator is below the proper range, skip the following steps and go to "DIAGNOSTIC PROCEDURE", EC-299.
  - 2) Confirm whether customer filled the coolant or not. If customer filled the coolant, skip the following steps and go to "DIAGNOSTIC PROCEDURE", EC-299.
  - 3) Turn ignition switch "ON".
  - 4) Perform "COOLING FAN" in "ACTIVE TEST" mode with CONSULT (LOW speed and HI speed).
- OR
- 3) Disconnect engine coolant temperature sensor harness connector.
  - 4) Connect 150Ω resistor to engine coolant temperature sensor harness connector.
  - 5) Start engine and make sure that cooling fan operates.  
**Be careful not to overheat engine.**

# TROUBLE DIAGNOSIS FOR DTC P1900

## Cooling Fan (DTC: 1308) (Cont'd)

EC-COOL/F-01

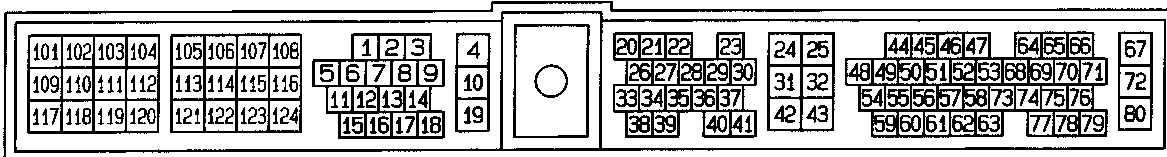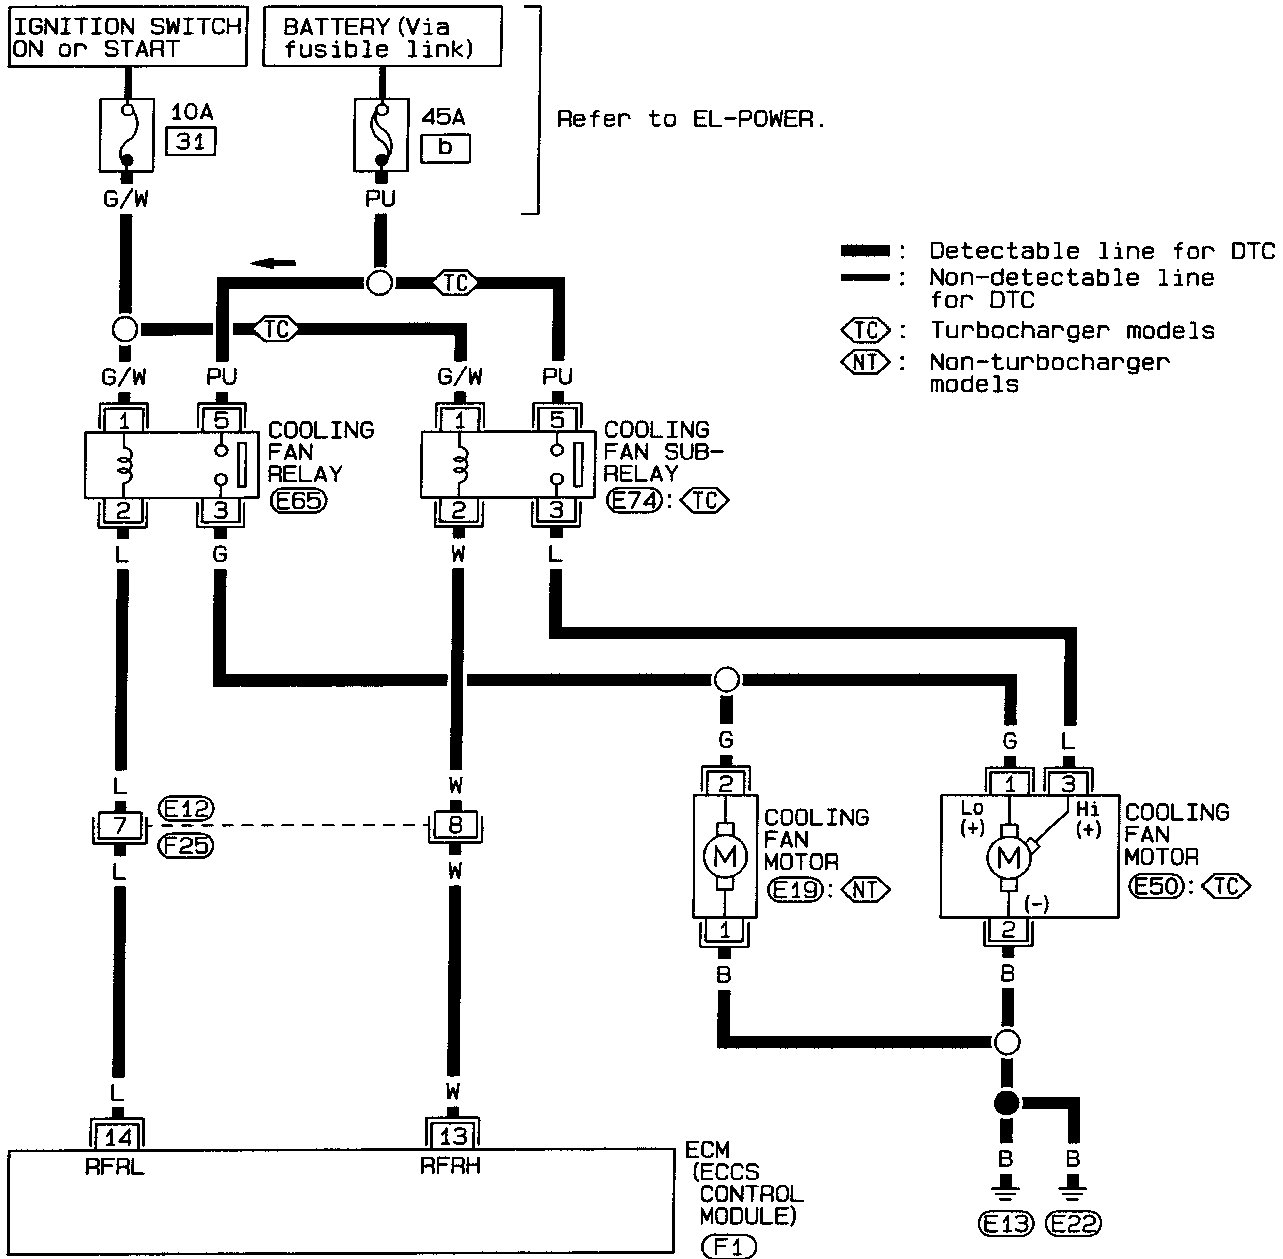

# TROUBLE DIAGNOSIS FOR DTC P1900

## Cooling Fan (DTC: 1308) (Cont'd)

### DIAGNOSTIC PROCEDURE

**A**

■ COOLING FAN CIRCUIT ■

DOES  
COOLING FAN  
ROTATE AND STOP  
EVERY 3 SECONDS ?

NEXT NO YES

MEF311F

**A**

■ ACTIVE TEST ■

COOLING FAN ON

=== MONITOR ===

COOLAN TEMP/S 78°C

ON OFF

MEF694F

**A**

Cooling fan

Engine coolant temperature sensor harness connector

150Ω resistor

DISCONNECT T.S.

SEF023R

**Non-turbocharger models**

Cooling fan relay

SEF735MA

**B**

DISCONNECT T.S.

3 2 1 5

V

SEF721R

Non-turbocharger models

INSPECTION START

**A**

**CHECK COOLING FAN OPERATION.**

1. Turn ignition switch "ON".

2. Perform "COOLING FAN CIRCUIT" in "FUNCTION TEST" mode with CONSULT.

OR

1. Turn ignition switch "ON".

2. Perform "COOLING FAN" in "ACTIVE TEST" mode with CONSULT.

3. Select "OFF" or "ON" and check the cooling fan operation.

OR

1. Disconnect engine coolant temperature sensor harness connector.

2. Connect 150Ω resistor to engine coolant temperature sensor harness connector.

3. Start engine and make sure that cooling fan operates.

OK → Go to **B** on EC-301.

NG

**B**

**CHECK POWER SUPPLY.**

1. Turn ignition switch "OFF".

2. Disconnect cooling fan relay.

3. Turn ignition switch "ON".

4. Check voltage between terminals ①, ⑤ and ground with CONSULT or tester.

**Voltage: Battery voltage**

NG → Check the following.

- 10A fuse
- 45A fusible link
- Harness for open or short between cooling fan relay and fuse
- Harness for open or short between cooling fan relay and fusible link

If NG, repair harness or connectors.





OK

**A**

CI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX


# TROUBLE DIAGNOSIS FOR DTC P1900

## Cooling Fan (DTC: 1308) (Cont'd)

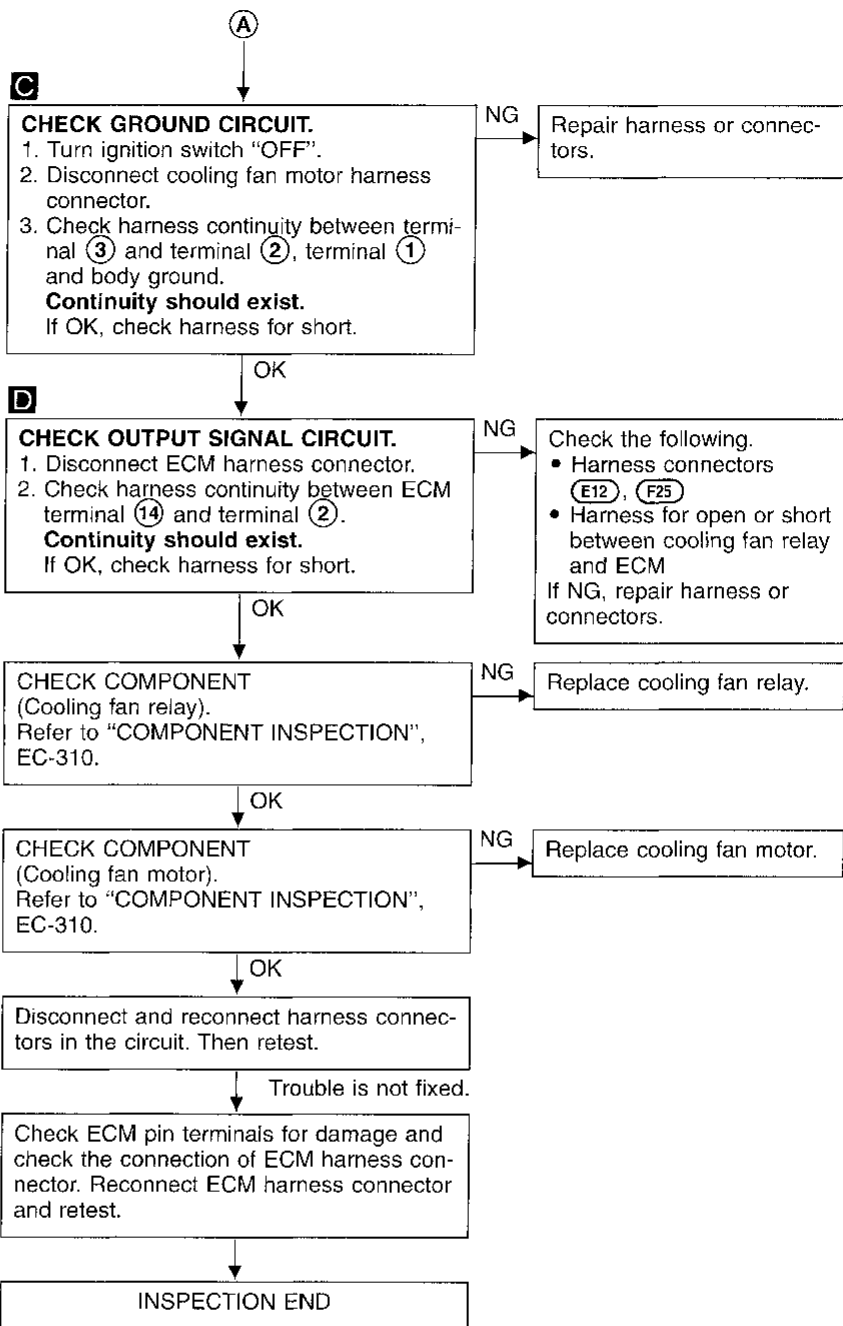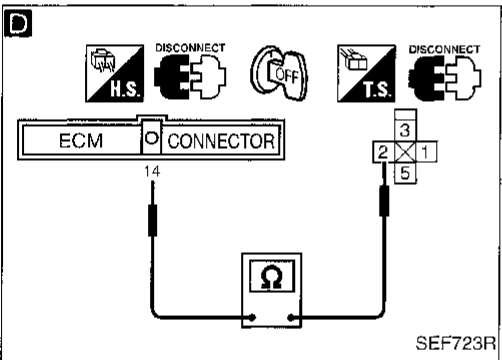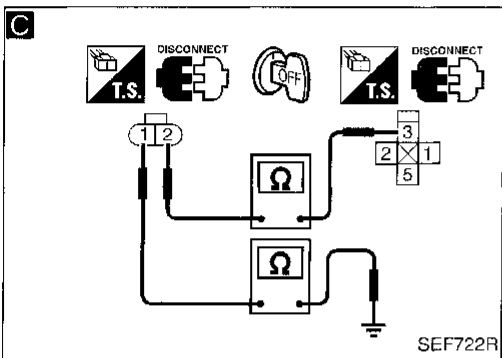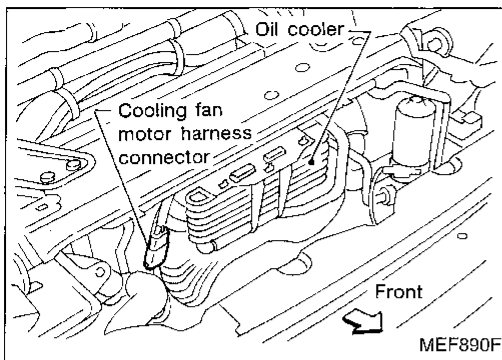

# TROUBLE DIAGNOSIS FOR DTC P1900


## Cooling Fan (DTC: 1308) (Cont'd)

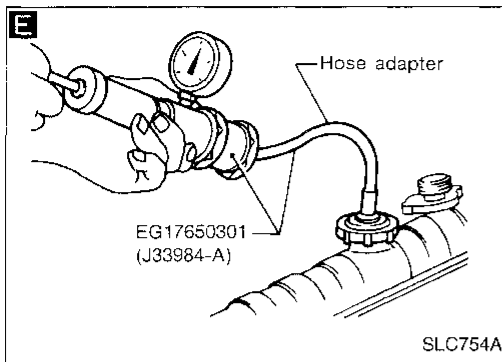

**E**

**CHECK COOLING SYSTEM FOR LEAK.**  
Apply pressure to the cooling system with a tester, and check if the pressure drops.  
**Testing pressure:**  
157 kPa (1.6 kg/cm<sup>2</sup>, 23 psi)  
**Pressure should not drop.**  
**CAUTION:**  
Higher than the specified pressure may cause radiator damage.


NG → Check the following for leak.  
• Hose  
• Radiator  
• Water pump  
Refer to LC section ("Water Pump").

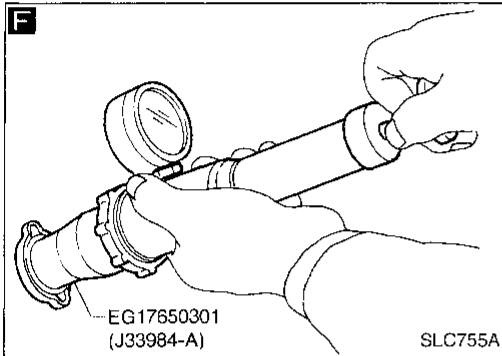

**F**

**CHECK RADIATOR CAP.**  
Apply pressure to cap with a tester.  
**Radiator cap relief pressure:**  
78 - 98 kPa (0.8 - 1.0 kg/cm<sup>2</sup>, 11 - 14 psi)

NG → Replace radiator cap.

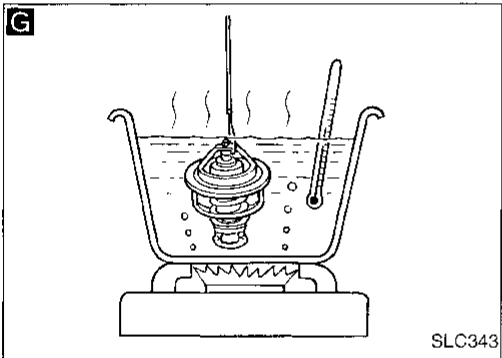

**G**

**CHECK THERMOSTAT.**

1. Check valve seating condition at normal room temperatures. It should seat tightly.
2. Check valve opening temperature and maximum valve lift.  
**Valve opening temperature:**  
76.5°C (170°F) [standard]  
**Maximum valve lift:**  
More than 10 mm/90°C (0.39 in/194°F)
3. Check if valve is closed at 5°C (41°F) below valve opening temperature. For details, refer to LC section ("Thermostat").

NG → Replace thermostat.

OK → Check engine coolant temperature sensor. Refer to "COMPONENT INSPECTION", EC-121.

NG → Replace engine coolant temperature sensor.

If the cause can not be isolated, go to "MAIN 12 CAUSES OF OVERHEATING", EC-309.

INSPECTION END





**Perform FINAL CHECK by the following procedure after repair is completed.**

1. Warm up engine. Run the vehicle for at least 20 minutes. Pay attention to engine coolant temperature gauge on the instrument panel. If the reading shows an abnormally high temperature, another part may be malfunctioning.
2. Stop vehicle and let engine idle. Check the intake and exhaust systems for leaks by listening for noise or visually inspecting the components.
3. Allow engine to cool and visually check for oil and coolant leaks. Then, perform "OVERALL FUNCTION CHECK".

# TROUBLE DIAGNOSIS FOR DTC P1900

## Cooling Fan (DTC: 1308) (Cont'd)

### DIAGNOSTIC PROCEDURE

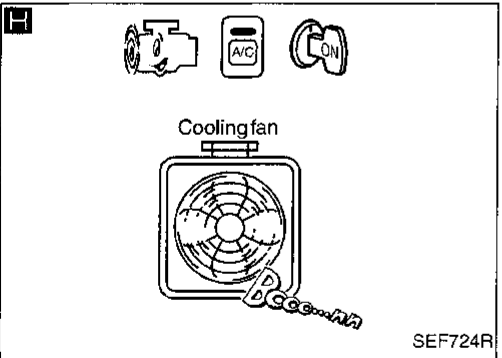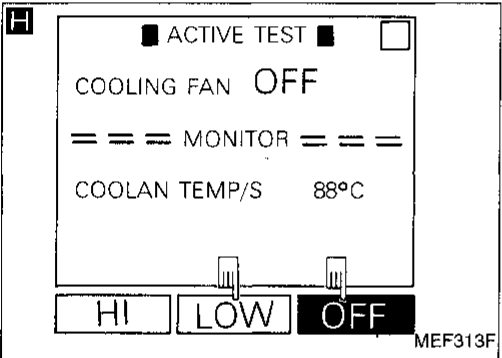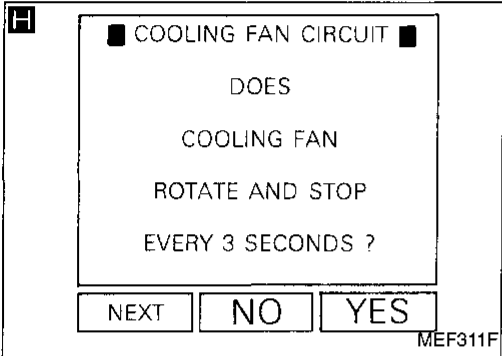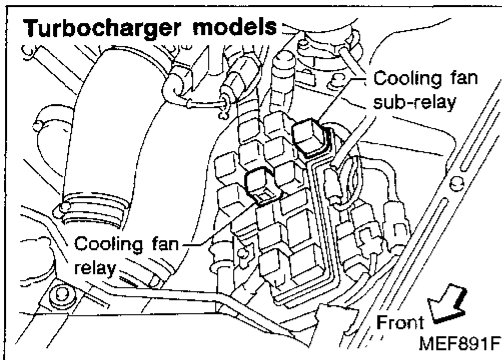

Turbocharger models

INSPECTION START

**H** CHECK COOLING FAN LOW SPEED OPERATION.

1. Disconnect cooling fan sub-relay.
2. Turn ignition switch "ON".
3. Perform "COOLING FAN CIRCUIT" in "FUNCTION TEST" mode with CONSULT.

OR

2. Turn ignition switch "ON".
3. Perform "COOLING FAN" in "ACTIVE TEST" mode with CONSULT.

OR

2. Start engine.
3. Set temperature lever at full cold position.
4. Turn air conditioner switch "ON".
5. Turn blower fan switch "ON".
6. Run engine at idle for a few minutes with air conditioner operating.
7. Make sure that cooling fan operates at low speed.

NG → Check cooling fan low speed control circuit. (Go to PROCEDURE A.)

OK  
C

# TROUBLE DIAGNOSIS FOR DTC P1900

## Cooling Fan (DTC: 1308) (Cont'd)

**I**

■ COOLING FAN CIRCUIT ■

DOES  
COOLING FAN  
ROTATE AND STOP  
EVERY 3 SECONDS ?

NEXT NO YES

MEF311F

**I**

■ ACTIVE TEST ■

COOLING FAN OFF

=== MONITOR ===

COOLANT TEMP/S 88°C

HI LOW OFF

MEF314F

**I**

Cooling fan

Engine coolant temperature sensor harness connector

150Ω resistor

DISCONNECT

SEF023R

**J**

Hose adapter

EG17650301 (J33984-A)

SLC754A

**K**

EG17650301 (J33984-A)

SLC755A

**C**

**I**

**CHECK COOLING FAN HIGH SPEED OPERATION.**

1. Turn ignition switch "OFF".

2. Reconnect cooling fan sub-relay.

3. Turn ignition switch "ON".

4. Perform "COOLING FAN CIRCUIT" in "FUNCTION TEST" mode with CONSULT.

OR

3. Turn ignition switch "ON".

4. Perform "COOLING FAN" in "ACTIVE TEST" mode with CONSULT.

OR

3. Turn air conditioner switch and blower fan switch "OFF".

4. Disconnect engine coolant temperature sensor harness connector.

5. Connect 150Ω resistor to engine coolant temperature sensor harness connector.

6. Restart engine and make sure that cooling fan operates at higher speed than low speed.

NG → Check cooling fan high speed control circuit. (Go to **PROCEDURE B**)

**J**

**CHECK COOLING SYSTEM FOR LEAK.**

Apply pressure to the cooling system with a tester, and check if the pressure drops.

**Testing pressure:**  
157 kPa (1.6 kg/cm<sup>2</sup>, 23 psi)

**Pressure should not drop.**

**CAUTION:**  
Higher than the specified pressure may cause radiator damage.

NG → Check the following for leak.  
• Hose  
• Radiator  
• Water pump  
Refer to LC section ("Water Pump").

**K**

**CHECK RADIATOR CAP.**

Apply pressure to cap with a tester.

**Radiator cap relief pressure:**  
78 - 98 kPa (0.8 - 1.0 kg/cm<sup>2</sup>, 11 - 14 psi)

NG → Replace radiator cap.



OK

**D**

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

# TROUBLE DIAGNOSIS FOR DTC P1900

## Cooling Fan (DTC: 1308) (Cont'd)

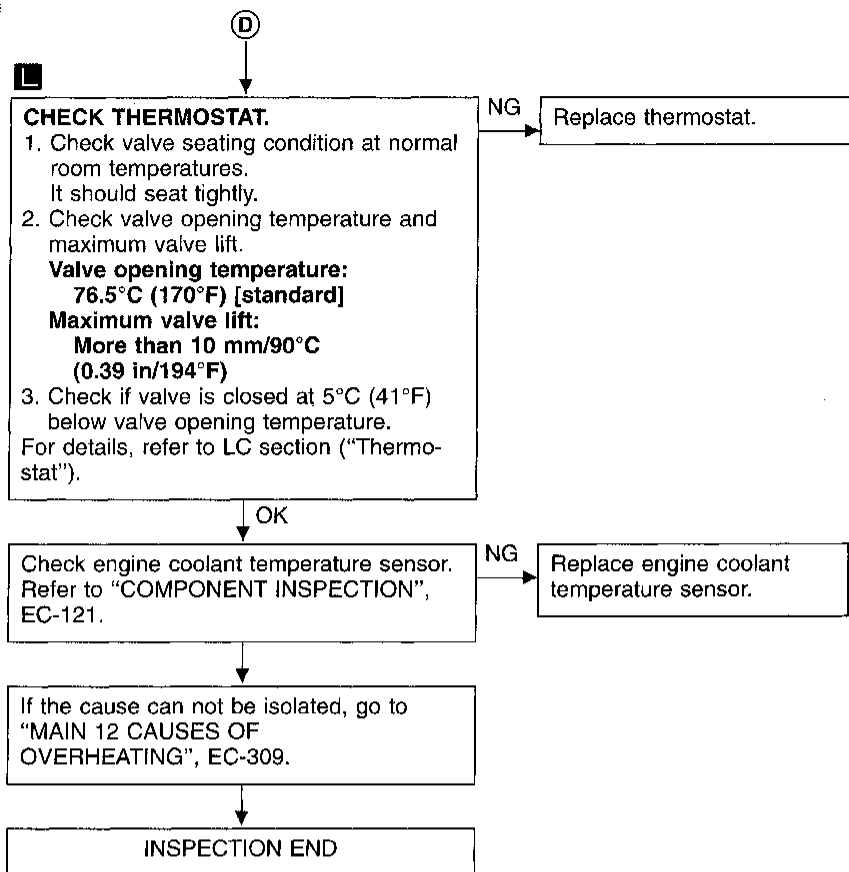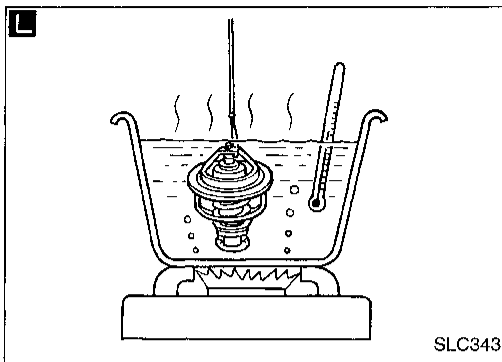






**Perform FINAL CHECK by the following procedure after repair is completed.**

1. Warm up engine. Run the vehicle for at least 20 minutes. Pay attention to engine coolant temperature gauge on the instrument panel. If the reading shows an abnormally high temperature, another part may be malfunctioning.
2. Stop vehicle and let engine idle. Check the intake and exhaust systems for leaks by listening for noise or visually inspecting the components.
3. Allow engine to cool and visually check for oil and coolant leaks. Then, perform "OVERALL FUNCTION CHECK".



# TROUBLE DIAGNOSIS FOR DTC P1900

## Cooling Fan (DTC: 1308) (Cont'd)

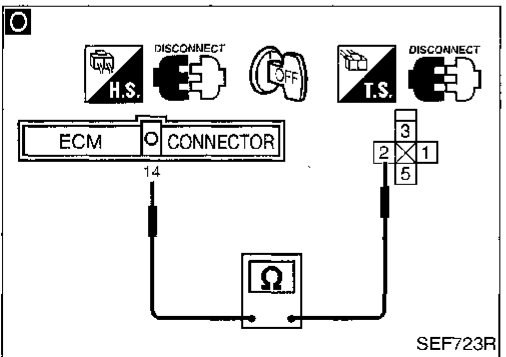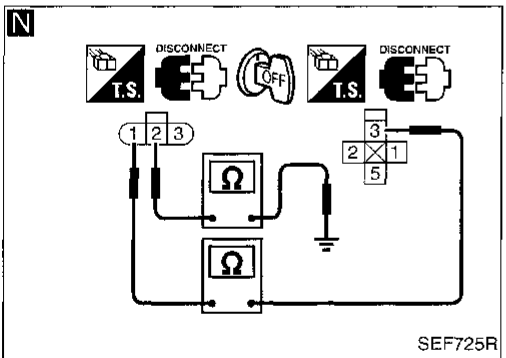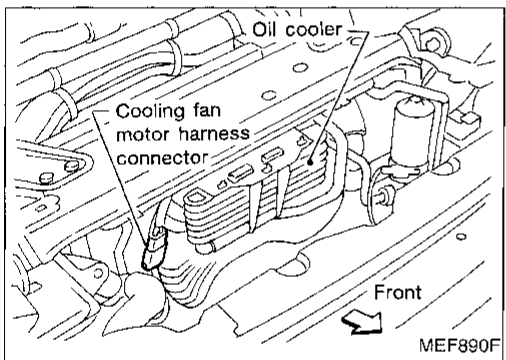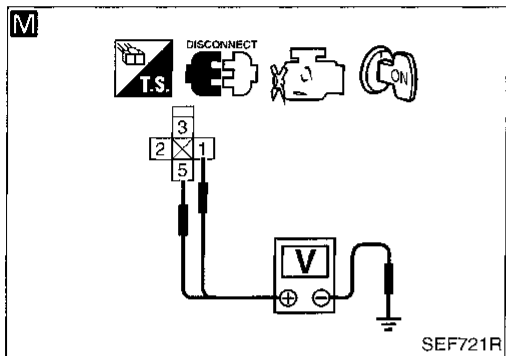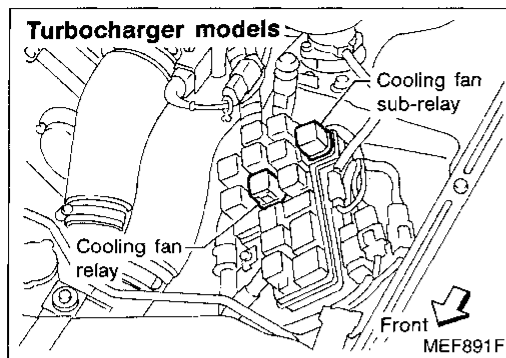

### PROCEDURE A

INSPECTION START

**M**  
**CHECK POWER SUPPLY.**  
 1. Turn ignition switch "OFF".  
 2. Disconnect cooling fan relay.  
 3. Turn ignition switch "ON".  
 4. Check voltage between terminals ①, ⑤ and ground with CONSULT or tester.  
**Voltage: Battery voltage**

NG  
 Check the following.  
 • 10A fuse  
 • 45A fusible link  
 • Harness for open or short between cooling fan relay and fuse  
 • Harness for open or short between cooling fan relay and fusible link  
 If NG, repair harness or connectors.

OK

**N**  
**CHECK GROUND CIRCUIT.**  
 1. Turn ignition switch "OFF".  
 2. Disconnect cooling fan motor harness connector.  
 3. Check harness continuity between terminal ③ and terminal ①, terminal ② and body ground.  
**Continuity should exist.**  
 If OK, check harness for short.

NG  
 Repair harness or connectors.

OK

**O**  
**CHECK OUTPUT SIGNAL CIRCUIT.**  
 1. Disconnect ECM harness connector.  
 2. Check harness continuity between ECM terminal ⑭ and terminal ②.  
**Continuity should exist.**  
 If OK, check harness for short.

NG  
 Check the following.  
 • Harness connectors  
 • (E12), (F25)  
 • Harness for open or short between cooling fan relay and ECM  
 If NG, repair harness or connectors.

OK

**CHECK COMPONENT**  
 (Cooling fan relay).  
 Refer to "COMPONENT INSPECTION", EC-310.

NG  
 Replace cooling fan relay.


OK

(E)

EC  
 MA  
 EM  
 LC  
 EC  
 FE  
 CL  
 MT  
 AT  
 PD  
 FA  
 RA  
 BR  
 ST  
 RS  
 BT  
 HA  
 EL  
 IDX






# TROUBLE DIAGNOSIS FOR DTC P1900

## Cooling Fan (DTC: 1308) (Cont'd)

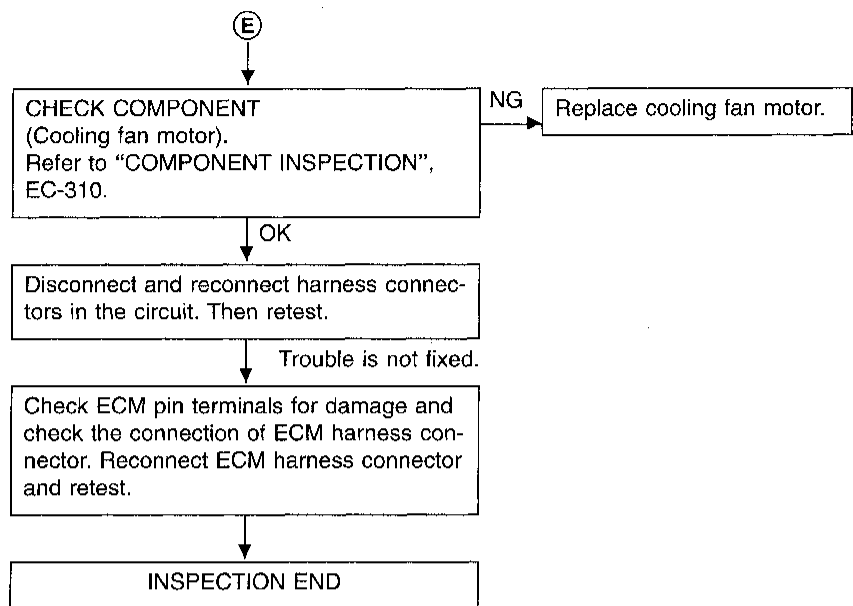

# TROUBLE DIAGNOSIS FOR DTC P1900

## Cooling Fan (DTC: 1308) (Cont'd)

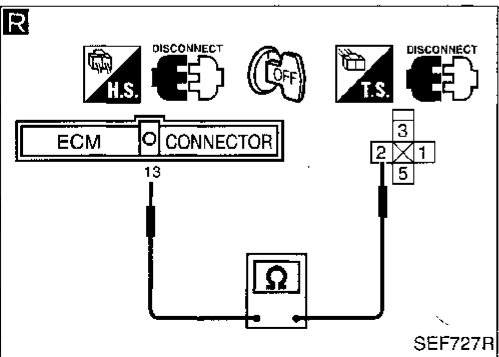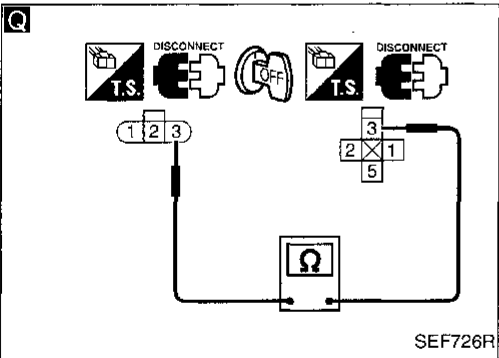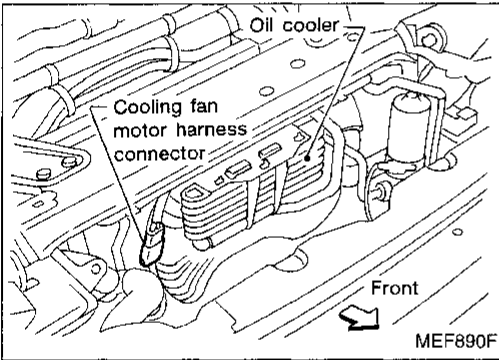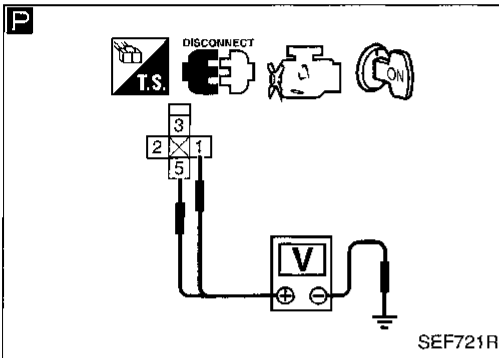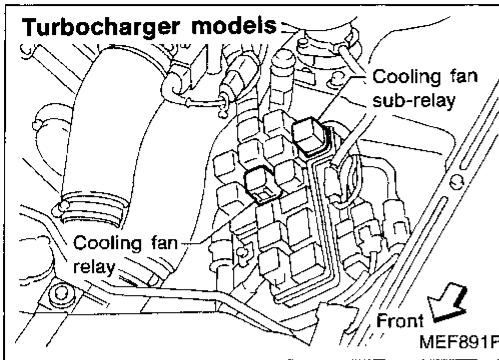

### PROCEDURE B

#### INSPECTION START

**P**

#### CHECK POWER SUPPLY.

1. Turn ignition switch "OFF".
2. Disconnect cooling fan sub-relay.
3. Turn ignition switch "ON".
4. Check voltage between terminals ①, ⑤ and ground with CONSULT or tester.  
**Voltage: Battery voltage**

NG

Check the following.

- Harness for open or short between cooling fan sub-relay and fuse
  - Harness for open or short between cooling fan sub-relay and fusible link
- If NG, repair harness or connectors.

OK

**Q**

#### CHECK GROUND CIRCUIT.

1. Turn ignition switch "OFF".
  2. Disconnect cooling fan motor harness connector.
  3. Check harness continuity between terminal ③ and terminal ③.  
**Continuity should exist.**
- If OK, check harness for short.

NG

Repair harness or connectors.

OK

**R**

#### CHECK OUTPUT SIGNAL CIRCUIT.

1. Disconnect ECM harness connector.
  2. Check harness continuity between ECM terminal ⑬ and terminal ②.  
**Continuity should exist.**
- If OK, check harness for short.

NG

Check the following.

- Harness connectors (E12, F25)
  - Harness for open or short between cooling fan relay and ECM
- If NG, repair harness or connectors.

OK

#### CHECK COMPONENT

(Cooling fan sub-relay).  
Refer to "COMPONENT INSPECTION", EC-310.

NG

Replace cooling fan sub-relay.

OK

**F**

GI

MA

EM

LC

**EC**

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT


HA

EL

IDX

# TROUBLE DIAGNOSIS FOR DTC P1900

## Cooling Fan (DTC: 1308) (Cont'd)

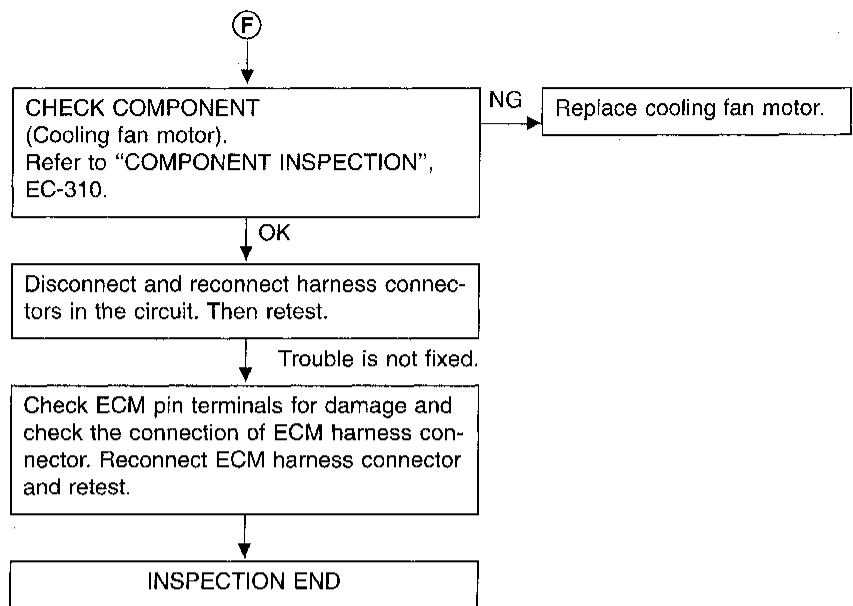

# TROUBLE DIAGNOSIS FOR DTC P1900

## Cooling Fan (DTC: 1308) (Cont'd)

### MAIN 12 CAUSES OF OVERHEATING

Engine	Step	Inspection item	Equipment	Standard	Reference page
OFF	1	<ul style="list-style-type: none"> <li>Blocked radiator</li> <li>Blocked condenser</li> <li>Blocked radiator grille</li> <li>Blocked bumper</li> </ul>	<ul style="list-style-type: none"> <li>Visual</li> </ul>	No blocking	—
	2	<ul style="list-style-type: none"> <li>Coolant mixture</li> </ul>	<ul style="list-style-type: none"> <li>Coolant tester</li> </ul>	50 - 50% coolant mixture	See "RECOMMENDED FLUIDS AND LUBRICANTS" in MA section
	3	<ul style="list-style-type: none"> <li>Coolant level</li> </ul>	<ul style="list-style-type: none"> <li>Visual</li> </ul>	Coolant up to MAX level in reservoir tank and radiator filler neck	See "Changing Engine Coolant", "ENGINE MAINTENANCE" in MA section
	4	<ul style="list-style-type: none"> <li>Radiator cap</li> </ul>	<ul style="list-style-type: none"> <li>Pressure tester</li> </ul>	78 - 98 kPa (0.8 - 1.0 kg/cm <sup>2</sup> , 11 - 14 psi) 59 - 98 kPa (0.6 - 1.0 kg/cm <sup>2</sup> , 9 - 14 psi) (Limit)	See "System Check" "ENGINE COOLING SYSTEM" in LC section
ON* <sup>2</sup>	5	<ul style="list-style-type: none"> <li>Coolant leaks</li> </ul>	<ul style="list-style-type: none"> <li>Visual</li> </ul>	No leaks	See "System Check" "ENGINE COOLING SYSTEM" in LC section
ON* <sup>2</sup>	6	<ul style="list-style-type: none"> <li>Thermostat</li> </ul>	<ul style="list-style-type: none"> <li>Touch the upper and lower radiator hoses</li> </ul>	Both hoses should be hot	See "Thermostat" and "Radiator", "ENGINE COOLING SYSTEM" in LC section
ON* <sup>1</sup>	7	<ul style="list-style-type: none"> <li>Cooling fan</li> </ul>	<ul style="list-style-type: none"> <li>CONSULT</li> </ul>	Operating	See "TROUBLE DIAGNOSIS FOR DTC P1900", EC-296.
OFF	8	<ul style="list-style-type: none"> <li>Combustion gas leak</li> </ul>	<ul style="list-style-type: none"> <li>Color checker chemical tester 4 Gas analyzer</li> </ul>	Negative	—
ON* <sup>3</sup>	9	<ul style="list-style-type: none"> <li>Coolant temperature gauge</li> </ul>	<ul style="list-style-type: none"> <li>Visual</li> </ul>	Gauge less than 3/4 when driving	—
		<ul style="list-style-type: none"> <li>Coolant overflow to reservoir tank</li> </ul>	<ul style="list-style-type: none"> <li>Visual</li> </ul>	No overflow during driving and idling	See "Changing Engine Coolant", "ENGINE MAINTENANCE" in MA section
OFF* <sup>4</sup>	10	<ul style="list-style-type: none"> <li>Coolant return from reservoir tank to radiator</li> </ul>	<ul style="list-style-type: none"> <li>Visual</li> </ul>	Should be initial level in reservoir tank	See "ENGINE MAINTENANCE" in MA section
OFF	11	<ul style="list-style-type: none"> <li>Cylinder head</li> </ul>	<ul style="list-style-type: none"> <li>Straight gauge feeler gauge</li> </ul>	0.1 mm (0.004 in) Maximum distortion (warping)	See "Inspection", "CYLINDER HEAD" in EM section
	12	<ul style="list-style-type: none"> <li>Cylinder block and pistons</li> </ul>	<ul style="list-style-type: none"> <li>Visual</li> </ul>	No scuffing on cylinder walls or piston	See "Inspection", "CYLINDER BLOCK" in EM section

\*1: Turn the ignition switch ON.

\*2: Engine running at 3,000 rpm for 10 minutes.

\*3: Drive at 90 km/h (55 MPH) for 30 minutes and then let idle for 10 minutes.

\*4: After 60 minutes of cool down time.

For more information, refer to "OVERHEATING CAUSE ANALYSIS" in LC section.


# TROUBLE DIAGNOSIS FOR DTC P1900

## Cooling Fan (DTC: 1308) (Cont'd)


### COMPONENT INSPECTION

#### Cooling fan relay and cooling fan sub-relay

Check continuity between terminals ③ and ⑤.

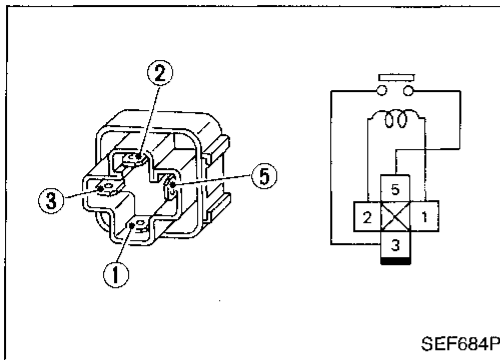

Conditions	Continuity
12V direct current supply between terminals ① and ②	Yes
No current supply	No

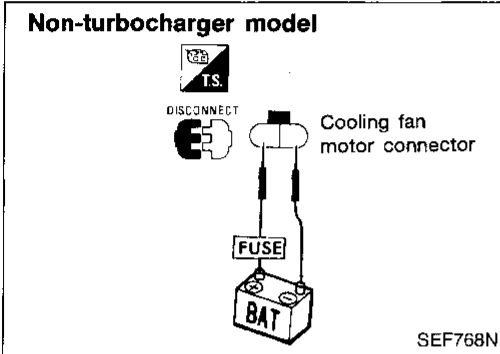


#### Cooling fan motor

1. Disconnect cooling fan motor harness connector.
2. Supply cooling fan motor terminals with battery voltage and check operation.

#### Non-turbocharger models

##### Cooling fan motor should operate.

If NG, replace cooling fan motor.

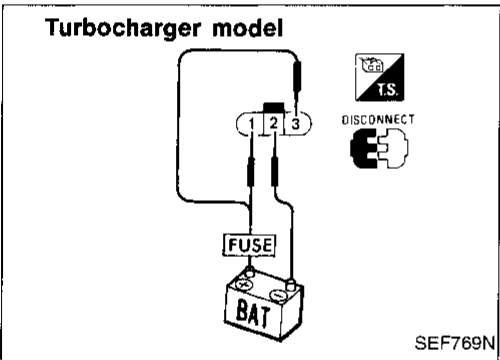

#### Turbocharger model

Cooling fan motor operation	Terminals	
	⊕	⊖
Low speed	①	②
High speed	① and ③	②




##### Cooling fan motor should operate.

If NG, replace cooling fan motor.

# TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS

## Injector

### EC-INJECT-01

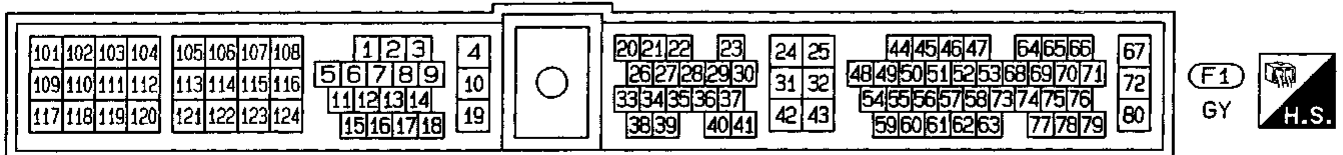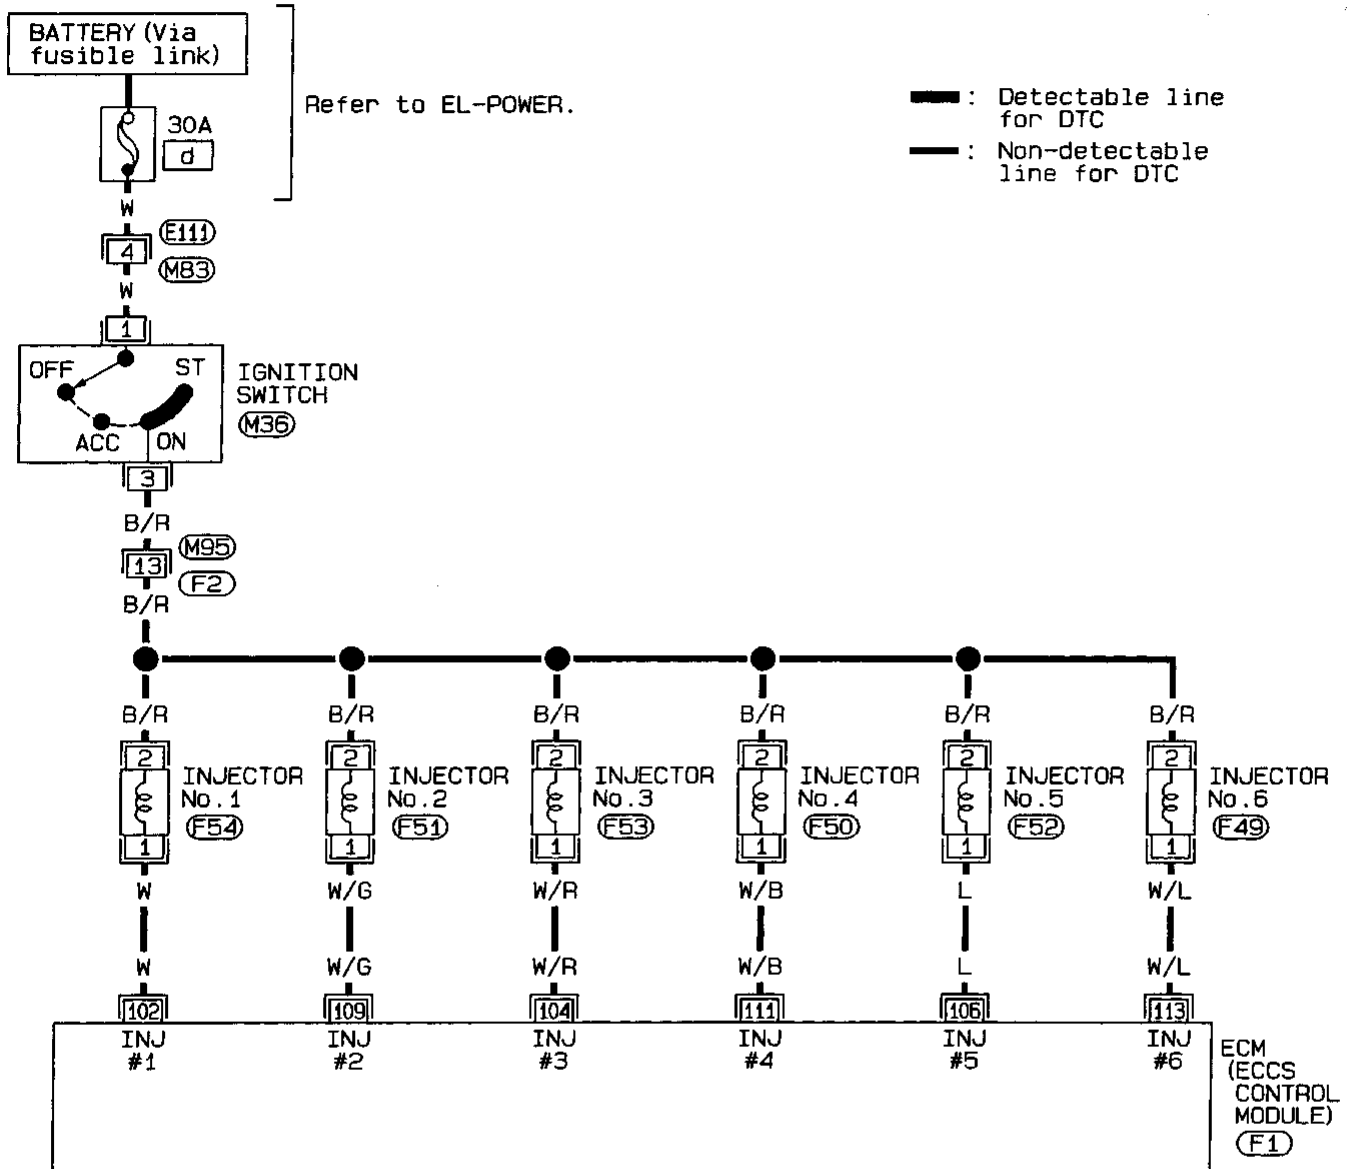


# TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS






## Injector (Cont'd)

### COMPONENT DESCRIPTION

The fuel injector is a small, precise solenoid valve. When the ECM supplies a ground to the injector circuit, the coil in the injector is energized. The energized coil pulls the needle valve back and allows fuel to flow through the injector into the intake manifold. The amount of fuel injected depends upon the injection pulse duration. Pulse duration is the length of time the injector remains open. The ECM controls the injection pulse duration based on engine fuel needs.

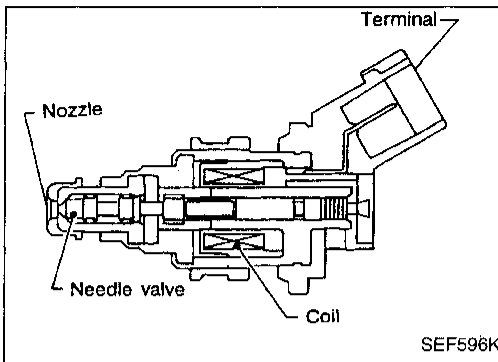




### DIAGNOSTIC PROCEDURE

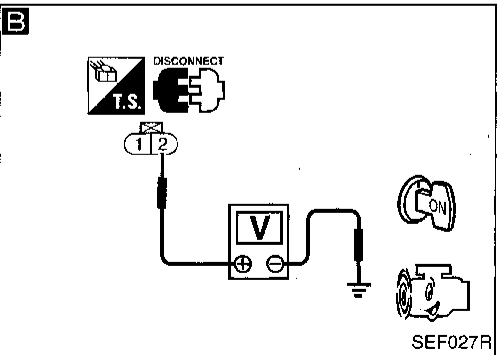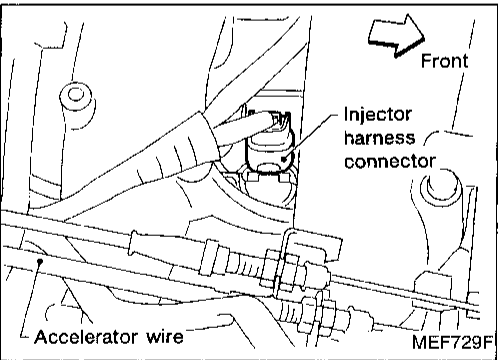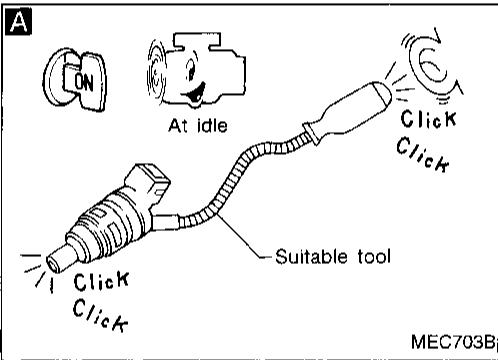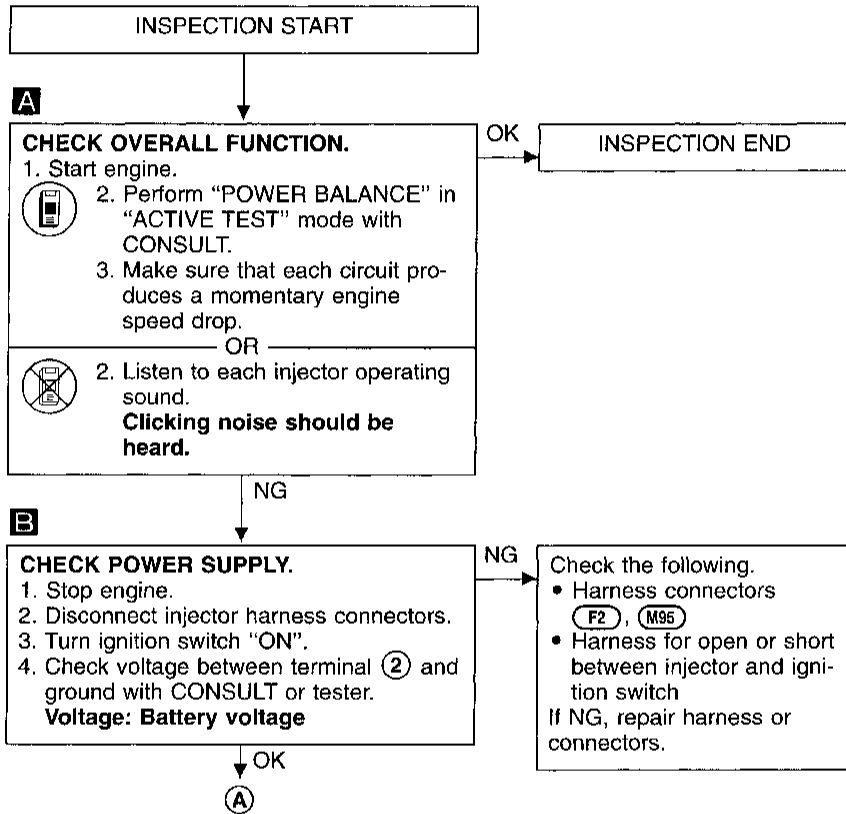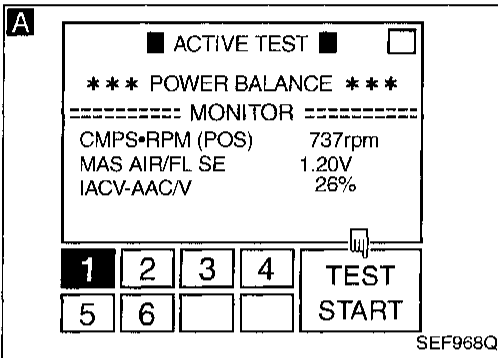



# TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS

## Injector (Cont'd)

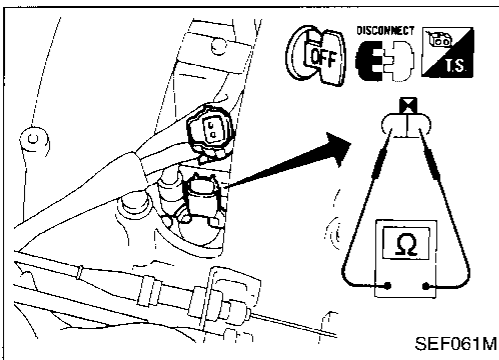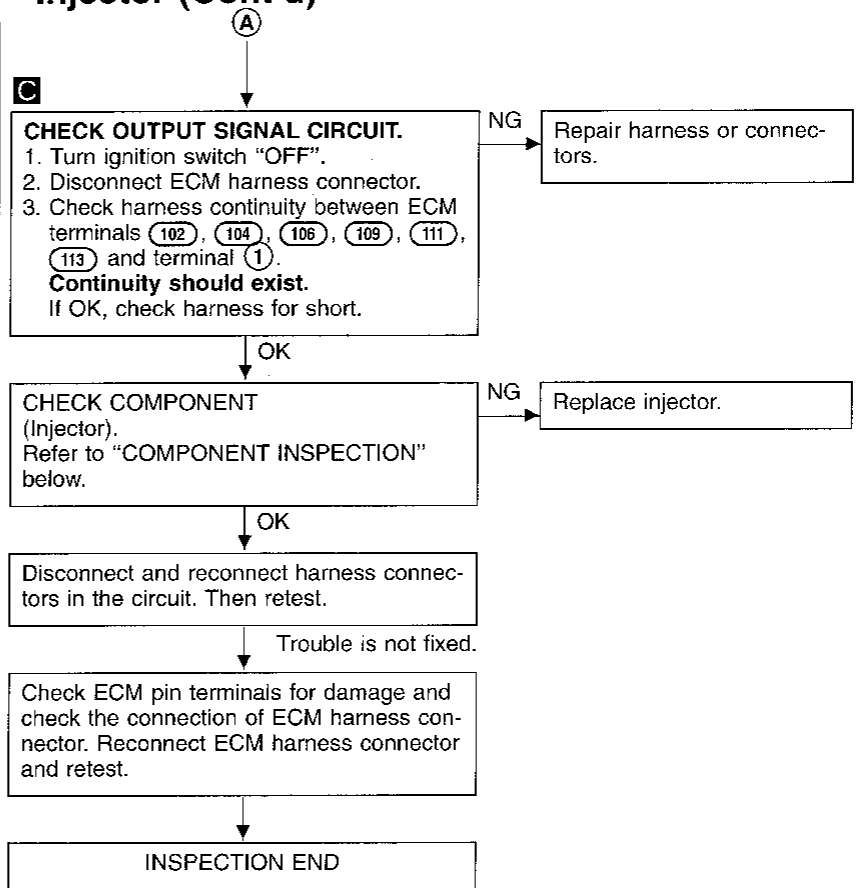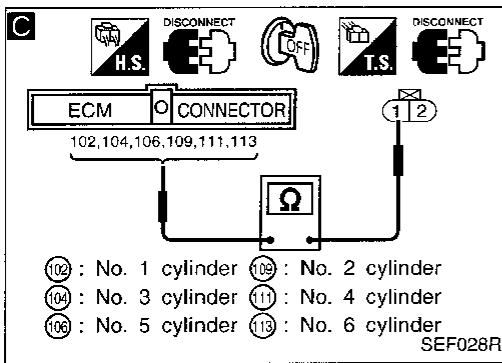

## COMPONENT INSPECTION




### Injector

1. Disconnect injector harness connector.
2. Check resistance between terminals as shown in the figure.  
**Resistance: 10 - 14Ω at 25°C (77°F)**  
If NG, replace injector.

# TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS

## Start Signal

EC-S/SIG-01

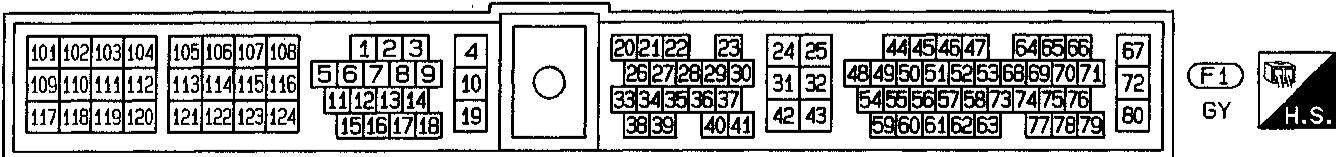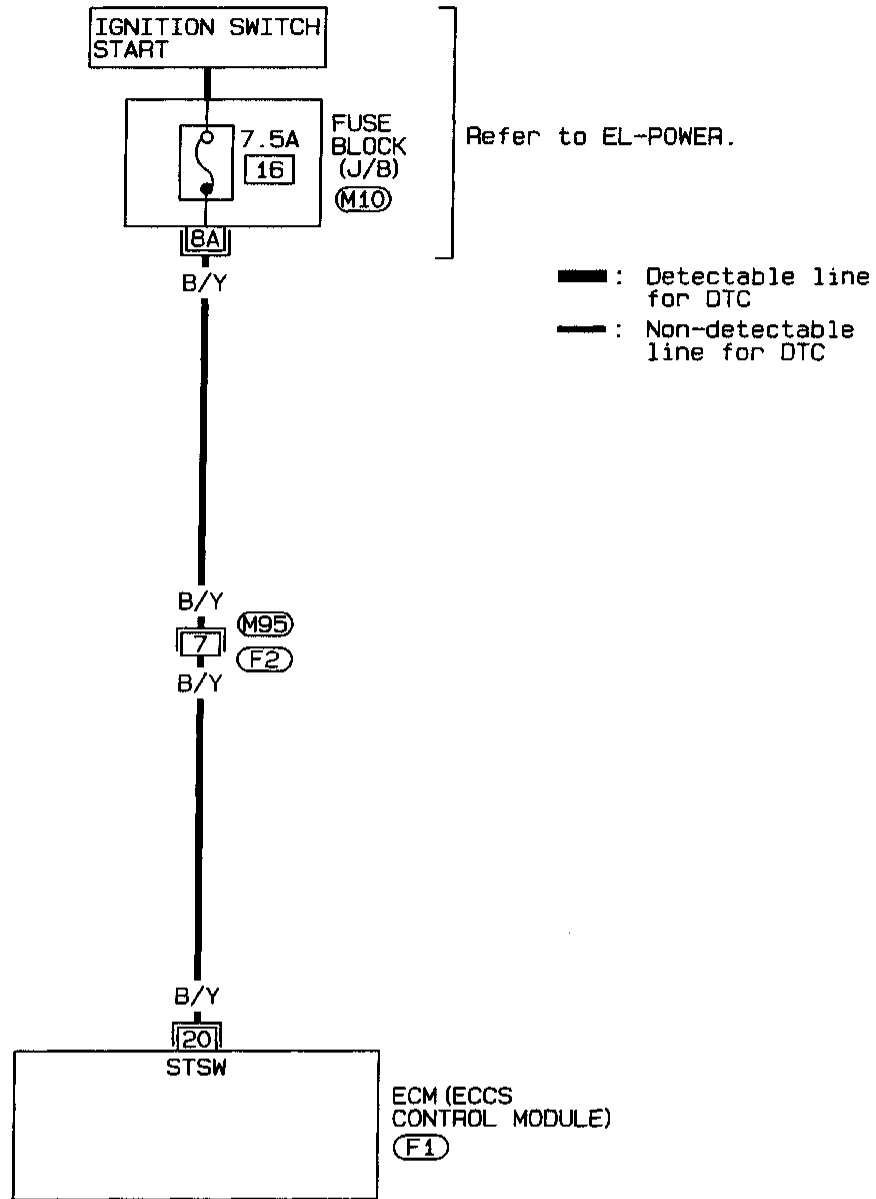

# TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS

## Start Signal (Cont'd) DIAGNOSTIC PROCEDURE

**A**

■ START SIGNAL CKT ■

1. CLOSE THROTTLE, SHIFT TO P OR N RANGE.
2. TOUCH START AND START ENGINE IMMEDIATELY.

NEXT
START

SEF191L




**A**

☆ MONITOR
☆ NO FAIL

START SIGNAL	OFF
CLSD TH/P SW	ON
AIR COND SIG	OFF
P/N POSI SW	ON

RECORD


SEF111P

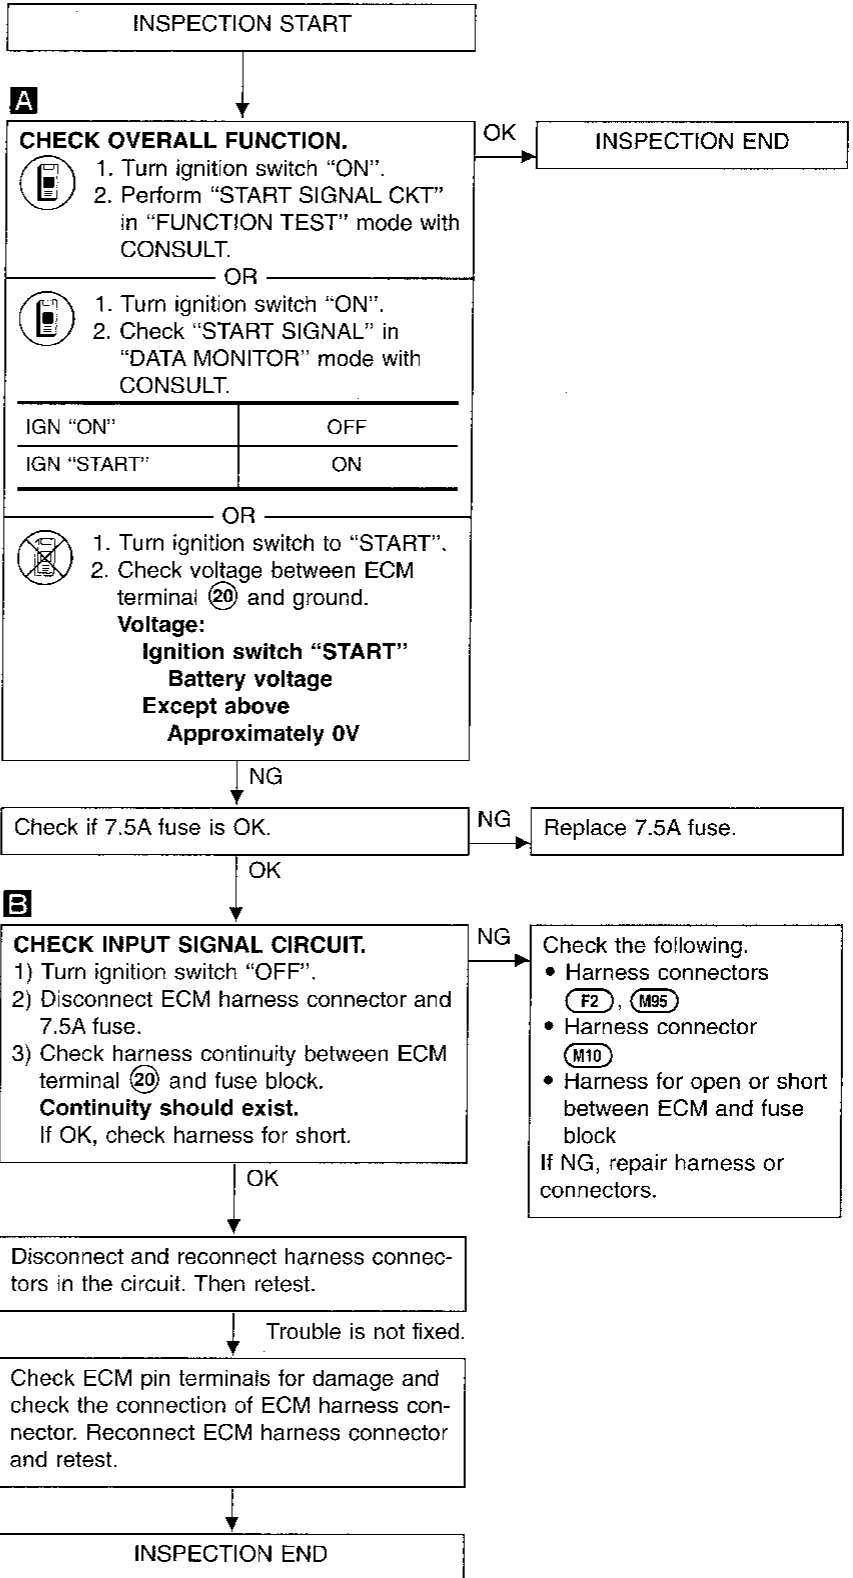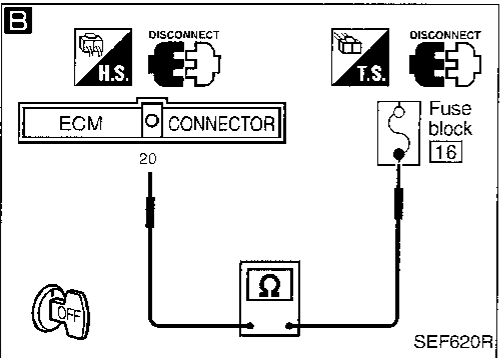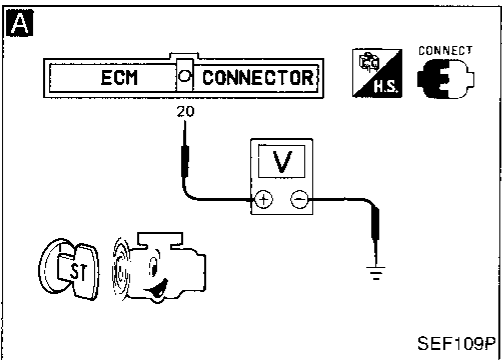

GI  
 MA  
 EM  
 LC  
**EC**  
 FE  
 CL  
 MT  
 AT  
 PD  
 FA  
 RA  
 BR  
 ST  
 RS  
 BT  
 HA  
 EL  
 DX

## Fuel Pump Control

### SYSTEM DESCRIPTION

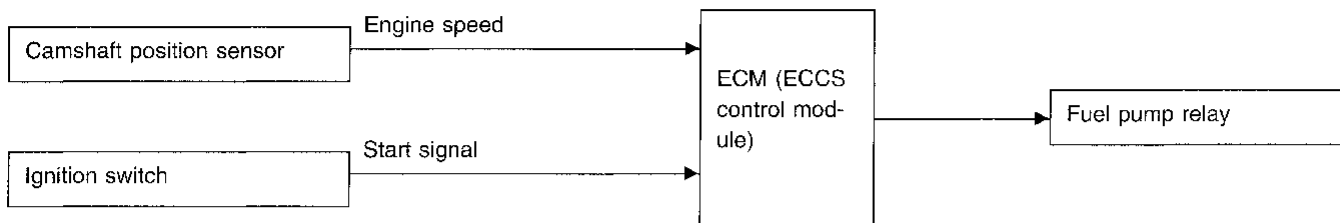

### Fuel pump ON-OFF control





The ECM activates the fuel pump for several seconds after the ignition switch is turned ON to improve engine start-up. If the ECM receives a 120° signal from the camshaft position sensor, it knows that the engine is rotating, and causes the pump to activate. If the 120° signal is not received when the ignition switch is ON, the engine stalls. The ECM stops pump operation and prevents the battery from discharging, thereby improving safety. The ECM does not directly drive the fuel pump. It controls the ON/OFF fuel pump relay, which in turn controls the fuel pump.

Condition	Fuel pump operation
Ignition switch is turned to ON.	Operates for 5 seconds
Engine running and cranking	Operates
When engine is stopped	Stops in 1.5 seconds
Except as shown above	Stops

# TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS


## Fuel Pump Control (Cont'd)

EC-F/PUMP-01

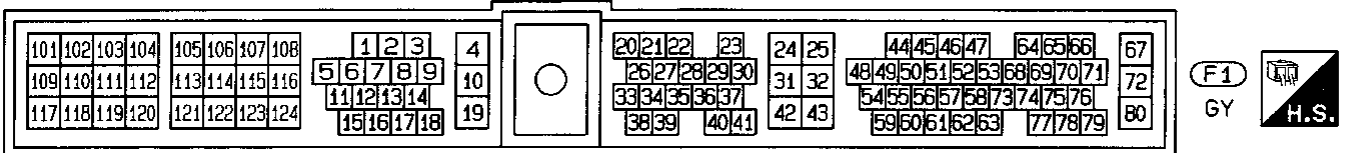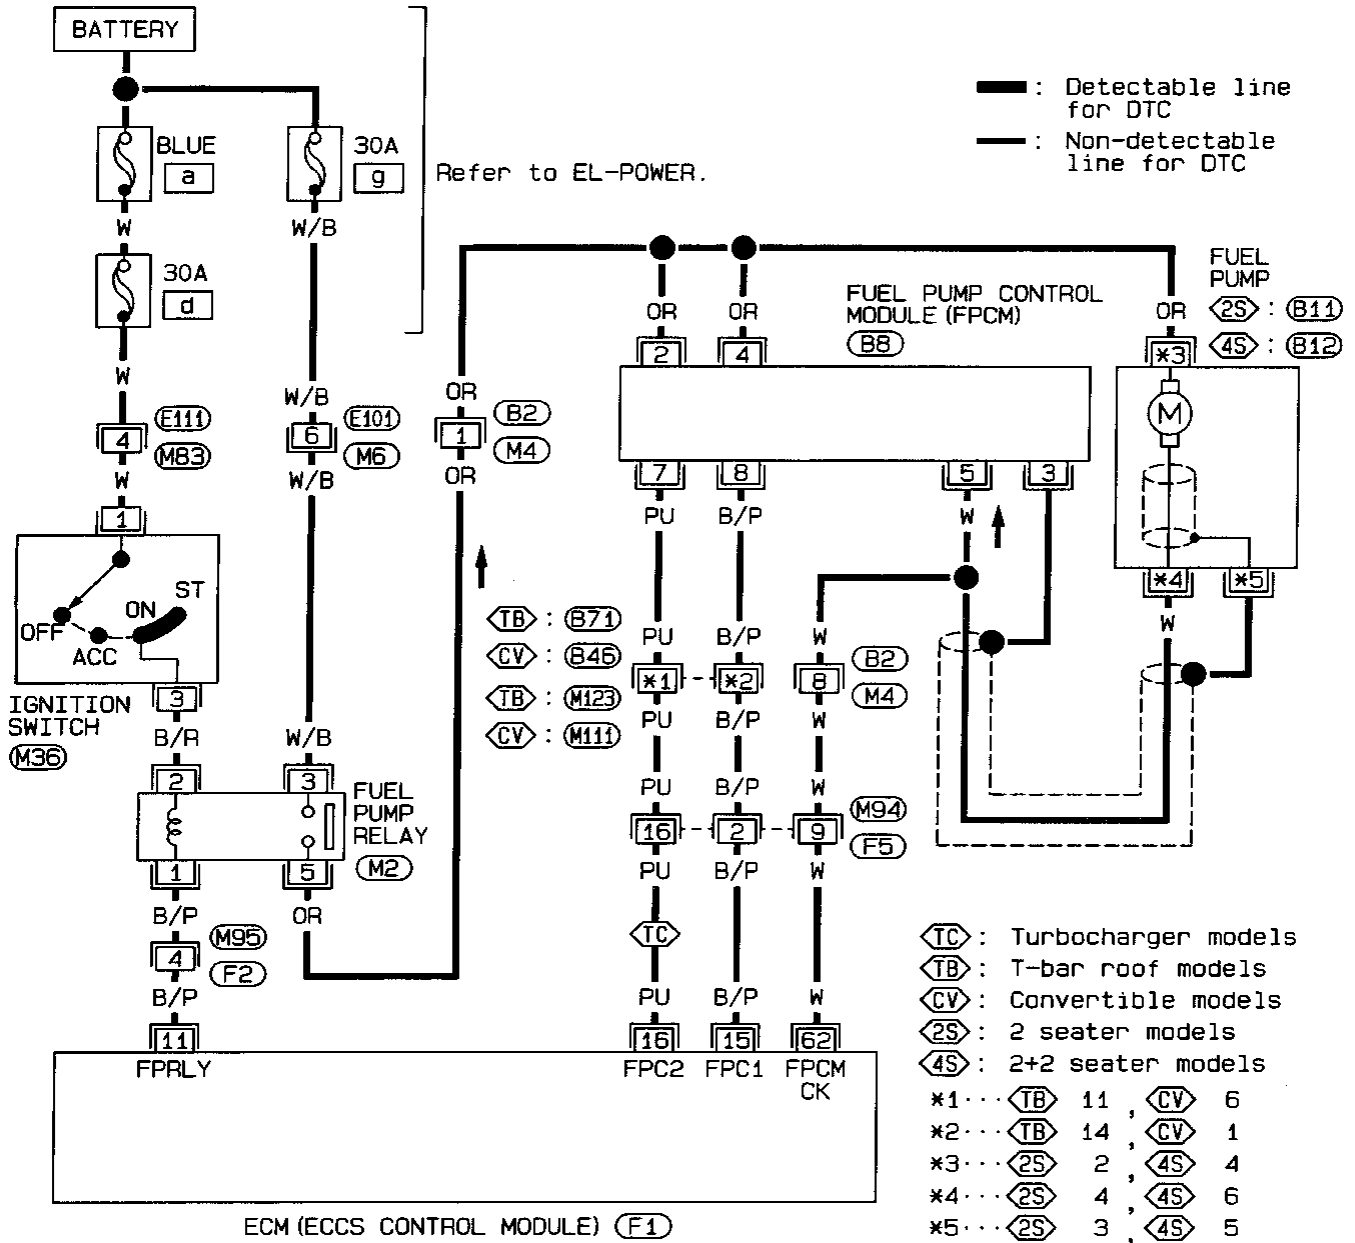

# TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS


## Fuel Pump Control (Cont'd) DIAGNOSTIC PROCEDURE

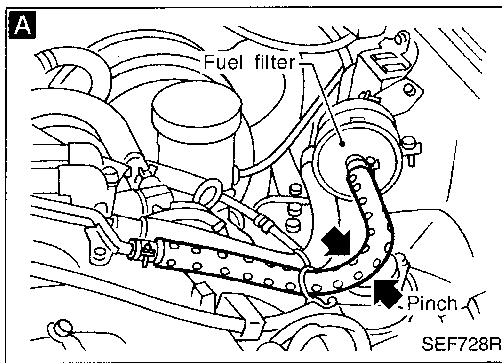

INSPECTION START


**A**  
**CHECK OVERALL FUNCTION.**  
1. Turn ignition switch "ON".  
2. Pinch fuel feed hose with fingers.  
**Fuel pressure pulsation should be felt on the fuel feed hose for 5 seconds after ignition switch is turned "ON".**

OK → INSPECTION END

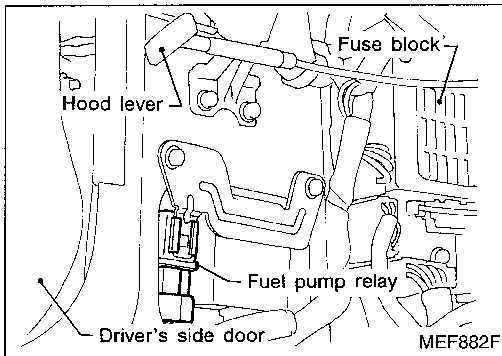



NG  
**B**  
**CHECK POWER SUPPLY.**  
1. Turn ignition switch "OFF".  
2. Disconnect fuel pump relay.  
3. Turn ignition switch "ON".  
4. Check voltage between terminals (2), (3) and ground with CONSULT or tester.  
**Voltage: Battery voltage**

NG → Check the following.  
• Harness connectors (M6), (E101)  
• 30A fusible link  
• Harness for open or short between fuel pump relay and ignition switch  
• Harness for open or short between fuel pump relay and fusible link  
If NG, repair harness or connectors.

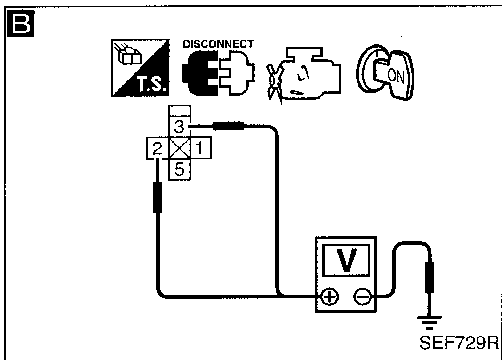

**C**  
**CHECK GROUND CIRCUIT.**  
1. Turn ignition switch "OFF".  
2. Disconnect fuel pump harness connector and FPCM harness connector.  
3. Check harness continuity between terminal (5) and terminal (2) (2 seater models) or terminal (4) (2+2 seater models), terminal (5) and terminal (4) (2 seater models) or terminal (6) (2+2 seater models).  
**Continuity should exist.**  
If OK, check harness for short.





NG → Check the following.  
• Harness connectors (B2), (M4)  
• Harness for open or short between fuel pump relay and fuel pump  
• Harness for open or short between fuel pump and FPCM  
If NG, repair harness or connectors.

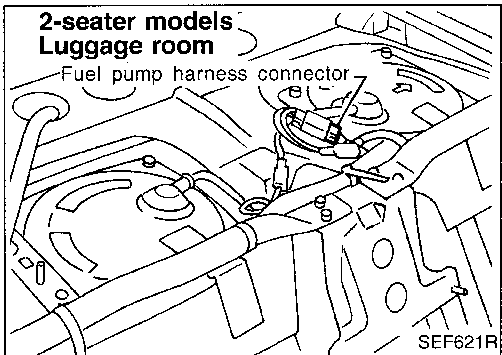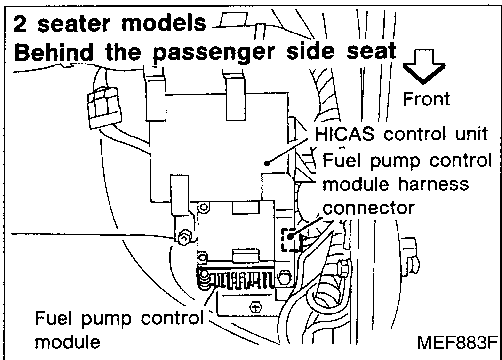

OK  
→ (A)

# TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS

## Fuel Pump Control (Cont'd)

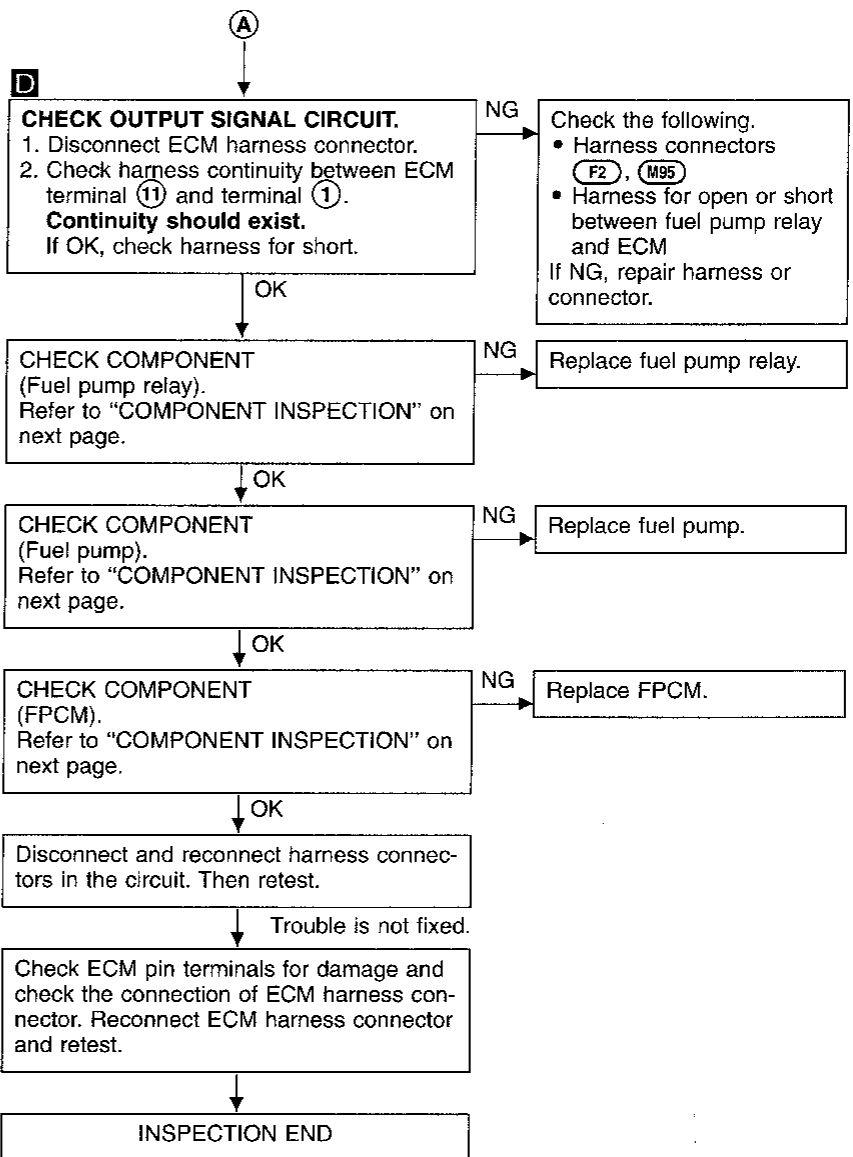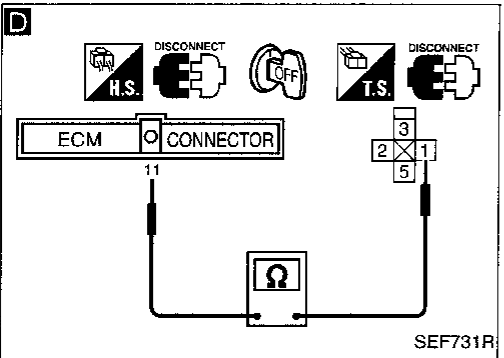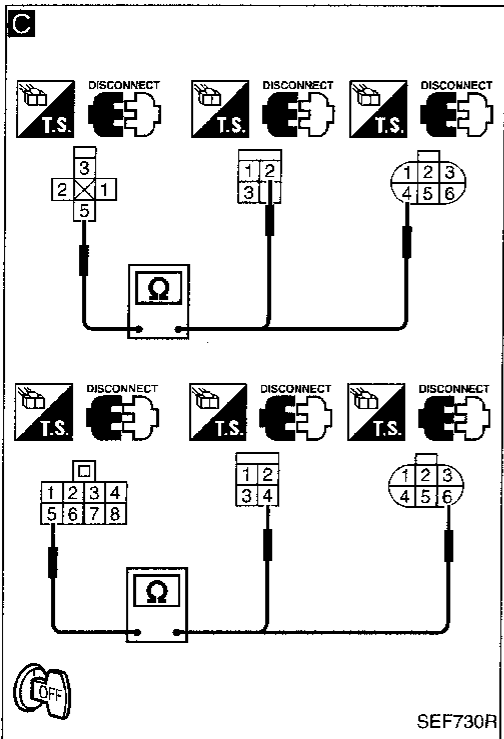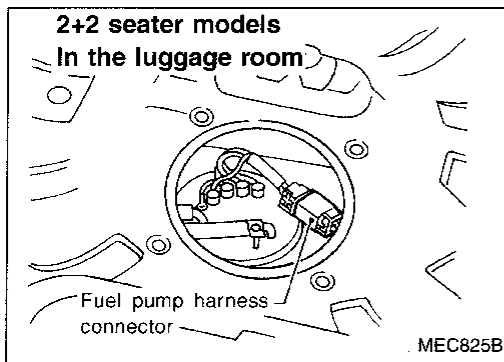

GI

MA

EM

LC

**EC**

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

# TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS

## Fuel Pump Control (Cont'd)


### COMPONENT INSPECTION

#### Fuel pump relay


Check continuity between terminals ③ and ⑤.

Conditions	Continuity
12V direct current supply between terminals ① and ②	Yes
No current supply	No

If NG, replace relay.

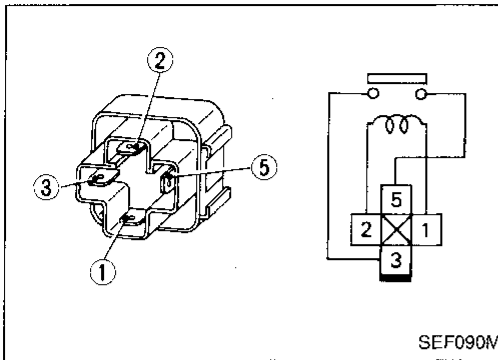

#### Luggage room

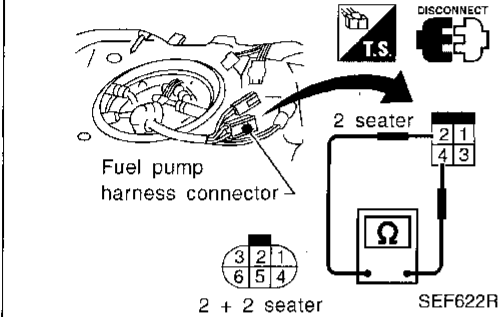

#### Fuel pump

1. Disconnect fuel pump harness connector.
2. Check resistance between terminals ② and ④ (Non-turbo-charger models), terminals ④ and ⑥ (Turbocharger models).  
**Resistance: 0.2 - 5.0Ω at 25°C (77°F)**

If NG, replace fuel pump.6/27

#### FPCM






1. Start engine and let it idle.
2. Perform "FPCM" in "ACTIVE TEST" mode with CONSULT.
3. Make sure of the following.

Position	"FPCM F/P VOLT" value	
	Non-turbocharger models	Turbocharger models
"LOW"	5.0 - 6.0 [V]	7.1 - 8.0 [V]
"MID"	—	6.0 - 6.9 [V]
"HI"	0 - 1.0 [V]	0 - 0.9 [V]

4. If NG, replace FPCM:


OR

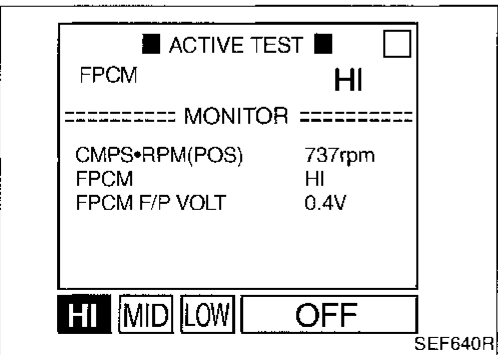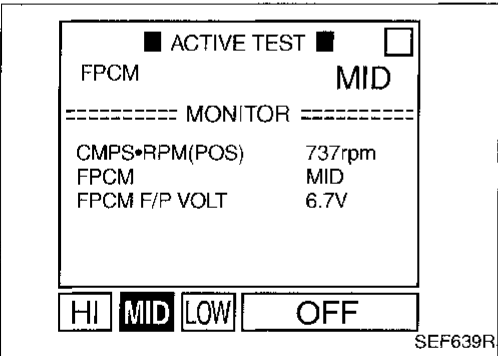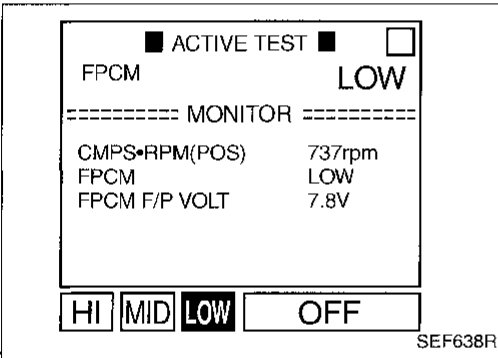



# TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS

## Fuel Pump Control (Cont'd)

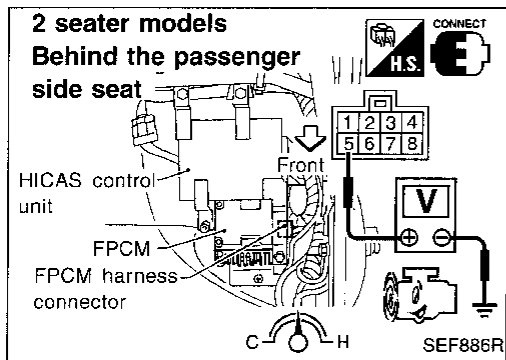

1. Start engine and warm it up sufficiently.
2. Turn ignition switch "OFF" and wait for at least 5 seconds.
3. Start engine and let it idle.
4. Check voltage between terminals ① and ②.  
The voltage should be within each of following ranges at least one time within 60 seconds of starting engine.

	Non-turbocharger models	Turbocharger models
Voltage	5.0 - 6.0 [V]	7.1 - 8.0 [V]
	0 - 1.0 [V]	6.0 - 6.9 [V]
	—	0 - 0.9 [V]

5. If NG, replace FPCM.

GI

MA

EM

LC

**EC**

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT




HA

EL

DX

IACV-Air Regulator

EC-AIRREG-01

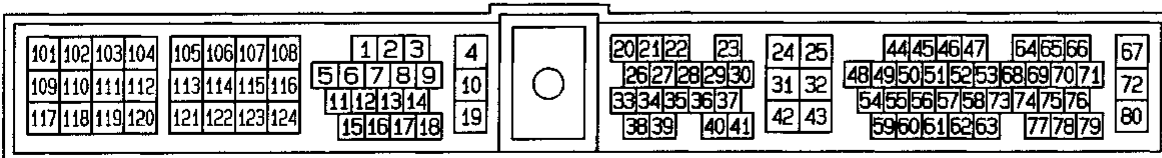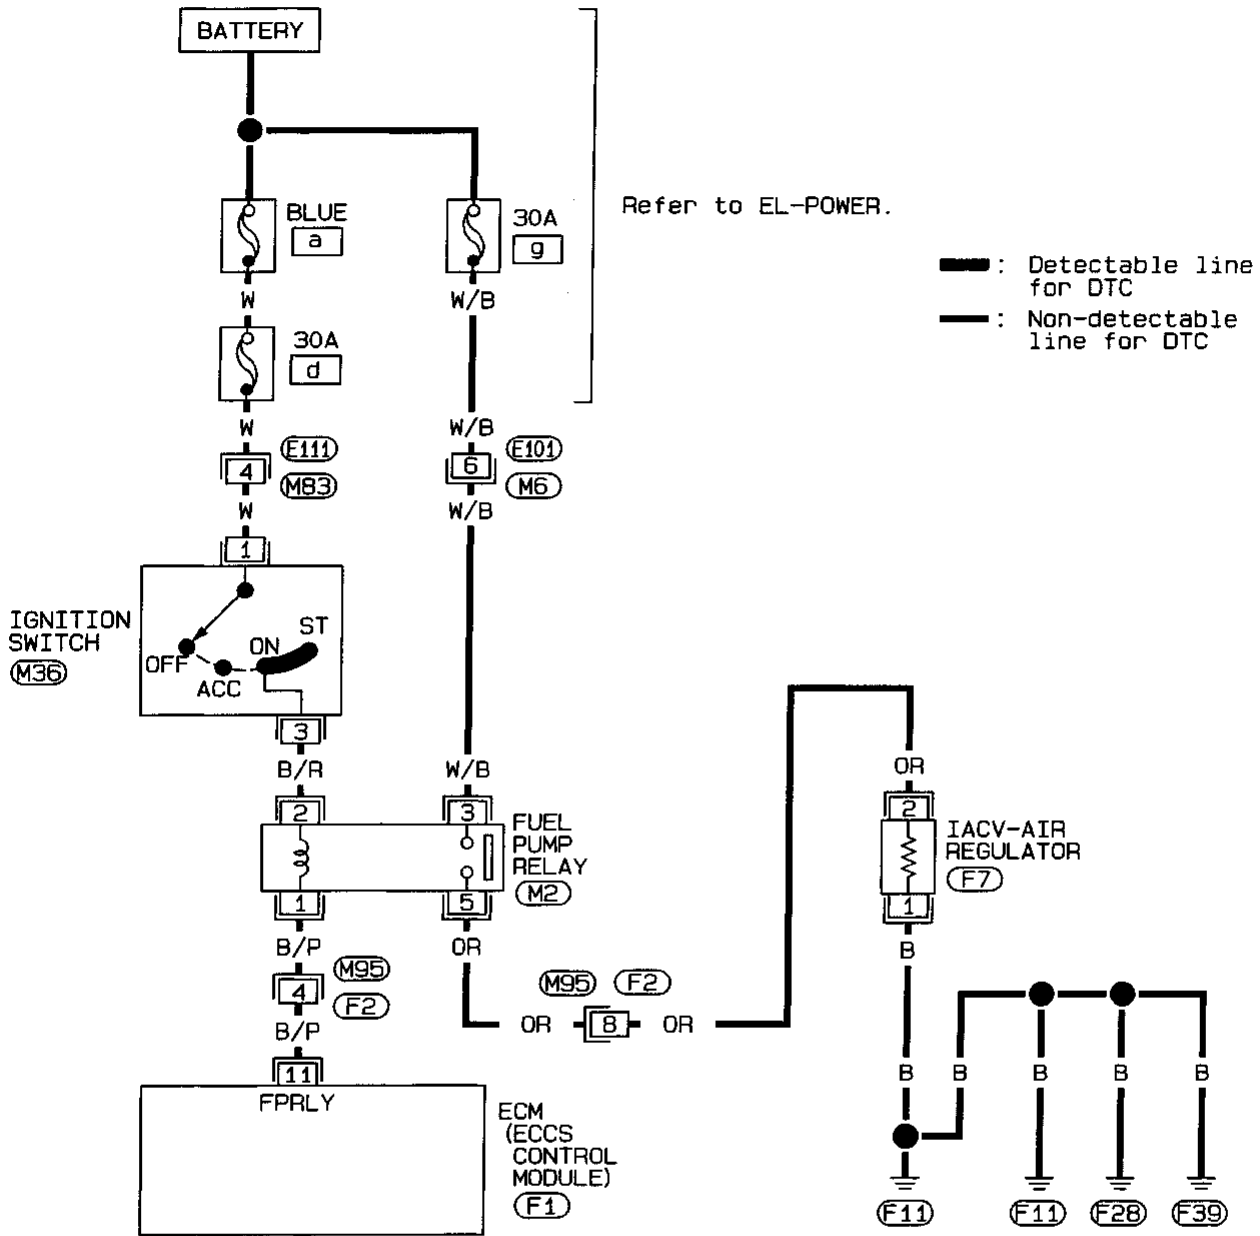

# TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS






## IACV-Air Regulator (Cont'd)

### COMPONENT DESCRIPTION


The IACV-air regulator provides an air by-pass when the engine is cold for a fast idle during warm-up.

A bimetal, heater and rotary shutter are built into the IACV-air regulator. When the bimetal temperature is low, the air by-pass port opens. As the engine starts and electric current flows through a heater, the bimetal begins to turn the shutter to close the by-pass port. The air passage remains closed until the engine stops and the bimetal temperature drops.

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

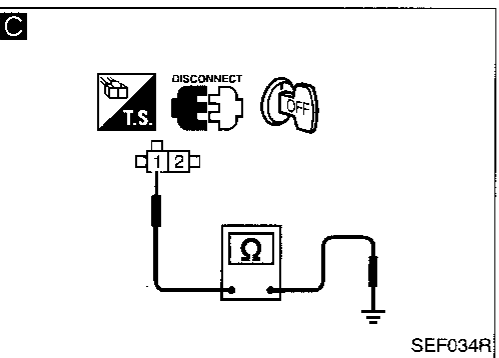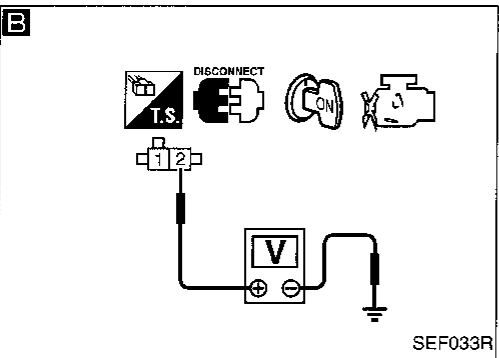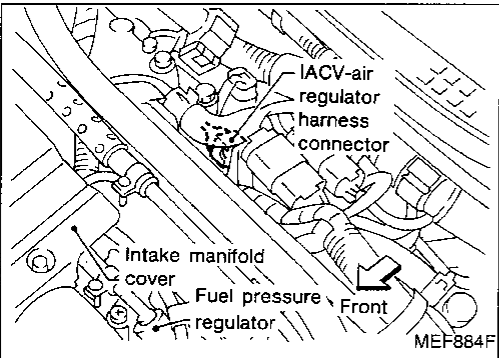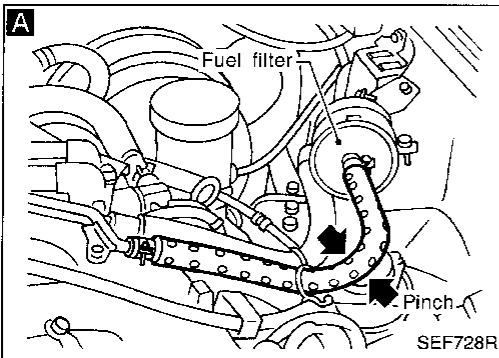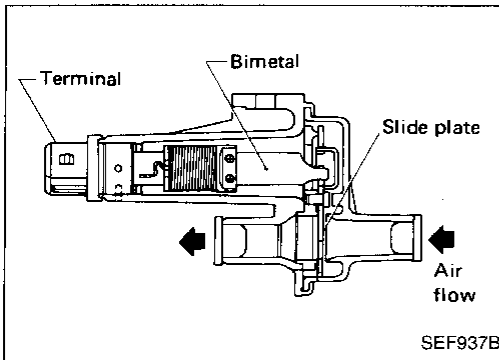

### DIAGNOSTIC PROCEDURE

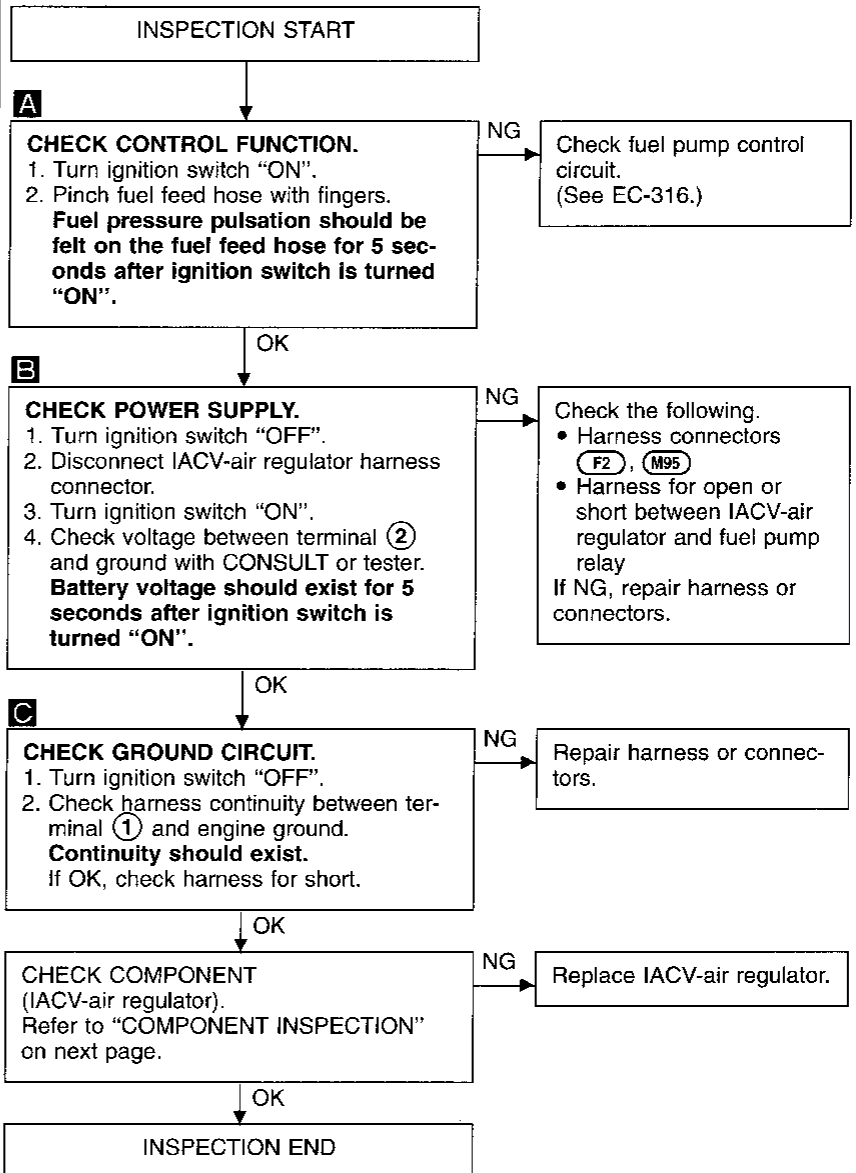

## TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS

### IACV-Air Regulator (Cont'd)

#### COMPONENT INSPECTION


##### IACV-air regulator

- Check IACV-air regulator resistance.

**Resistance:**


**Approximately 70 - 80 $\Omega$  [at 20°C (68°F)]**

- Check IACV-air regulator for clogging.


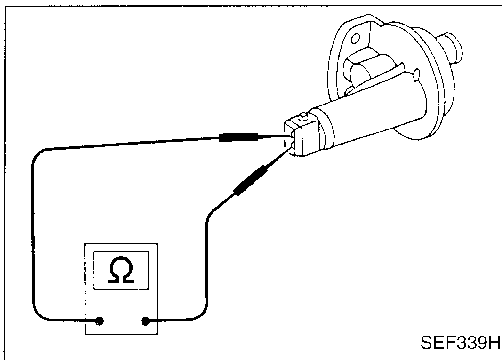


## Fuel Pressure Regulator Control

### SYSTEM DESCRIPTION

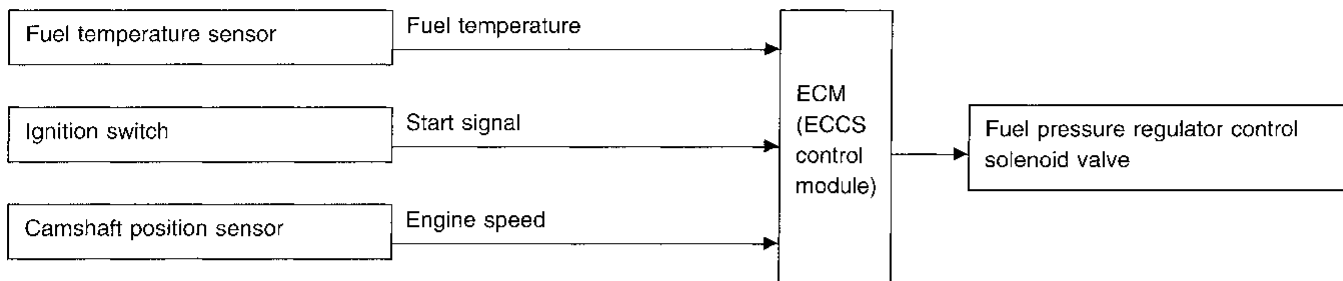


The fuel "pressure-up" control system briefly increases fuel pressure for improved starting performance of a hot engine. Under normal operating conditions, manifold vacuum is applied to the fuel pressure regulator. When starting the engine, however, the ECM allows current to flow through the ON/OFF solenoid valve in the control vacuum line, opening this line to the atmosphere. As a result, atmospheric pressure is applied, restricting the fuel return line so as to increase fuel pressure.

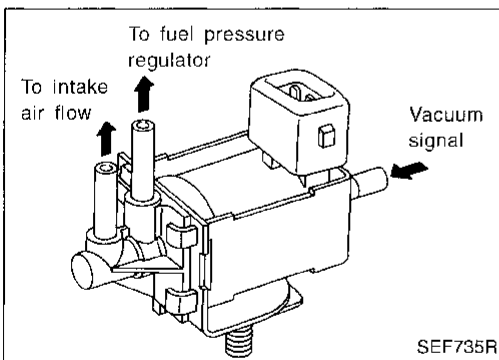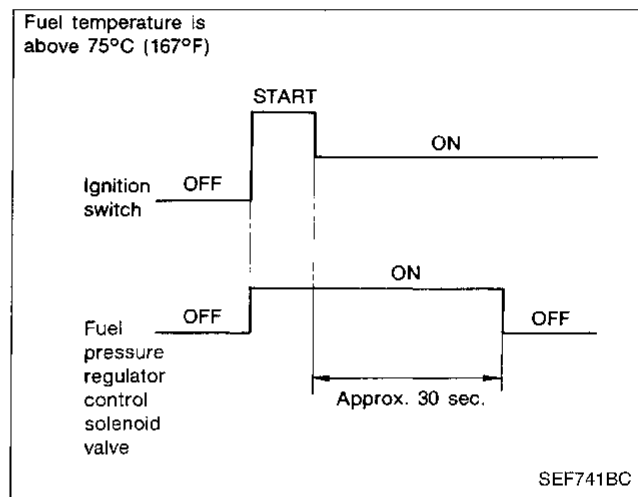

### COMPONENT DESCRIPTION

#### Fuel pressure regulator control solenoid valve

The solenoid valve responds to the ON/OFF signal from the ECM. When it is off, a vacuum signal from the intake manifold is fed into the fuel pressure regulator. When the ECM sends an ON signal, the coil pulls the plunger downward and cuts the vacuum signal.

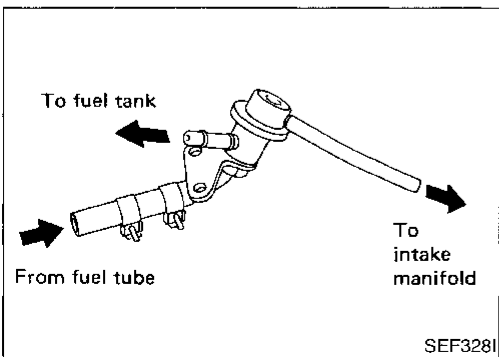




#### Fuel pressure regulator

The fuel pressure regulator maintains the fuel pressure at 299.1 kPa (3.05 kg/cm<sup>2</sup>, 43.4 psi). Since the injected fuel amount depends on injection pulse duration, it is necessary to maintain the pressure at the above value.

# TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS

## Fuel Pressure Regulator Control (Cont'd)



EC-PRVR-01

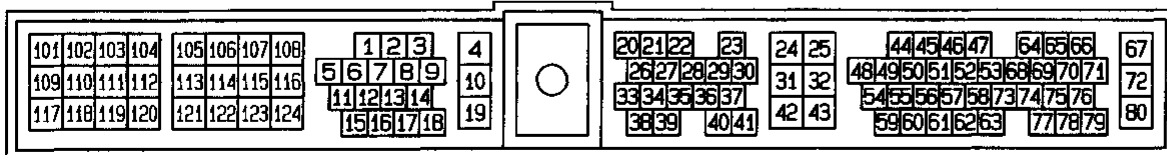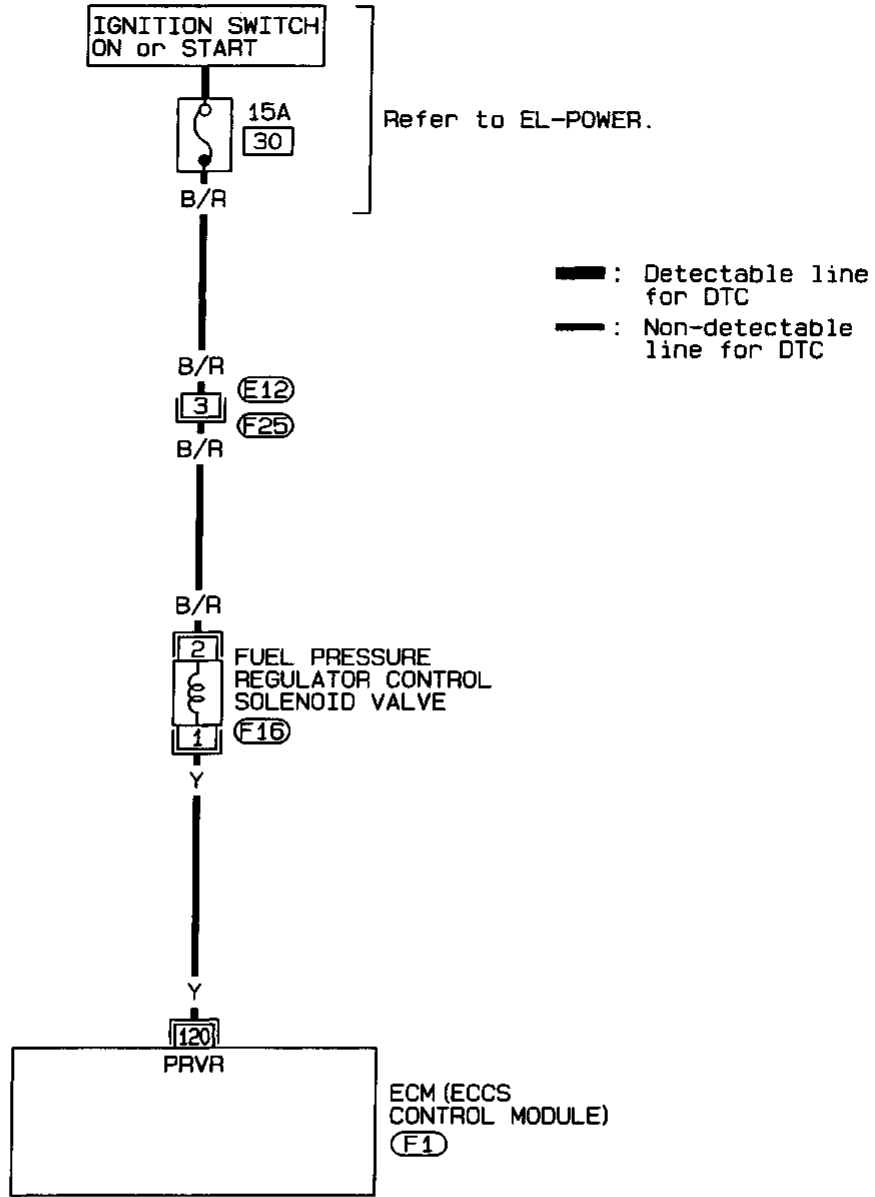

# TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS

## Fuel Pressure Regulator Control (Cont'd)

### DIAGNOSTIC PROCEDURE

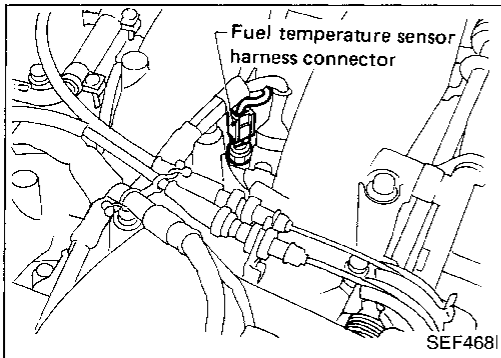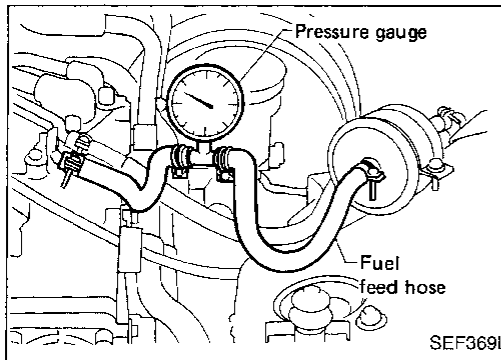

INSPECTION START

**A**

**CHECK OVERALL FUNCTION.**

1. Install fuel pressure gauge in fuel feed hose. (Refer to EC-26.)
2. Start engine and warm it up sufficiently.
3. Stop engine.
4. Disconnect fuel temperature sensor harness connector and connect a suitable resistor (0.35 kΩ) between fuel temperature sensor harness connector terminal and ground.
5. Restart engine and let it idle.
6. Check fuel pressure.


**Fuel pressure:**  
**Approximately 299.1 kPa (3.05 kg/cm<sup>2</sup>, 43.4 psi)**

7. Make sure that fuel pressure decreases after approximately 30 seconds.

**Fuel pressure:**  
**Approximately 250.1 kPa (2.55 kg/cm<sup>2</sup>, 36.3 psi)**

OK → INSPECTION END

GI  
MA  
EM  
LC  
**EC**

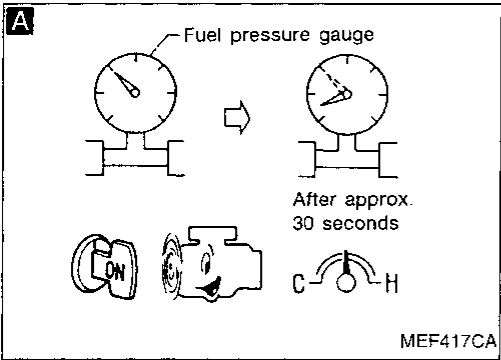


**B**

**CHECK VACUUM SOURCE TO FUEL PRESSURE REGULATOR.**

1. Stop engine.
2. Disconnect vacuum hose connected to fuel pressure regulator.
3. Restart engine.
4. Make sure that vacuum exists for more than approximately 30 seconds after starting engine.

NG → CHECK COMPONENT (Fuel pressure regulator). Refer to "Fuel Pressure Check", EC-26.

WT  
AT  
PD  
FA

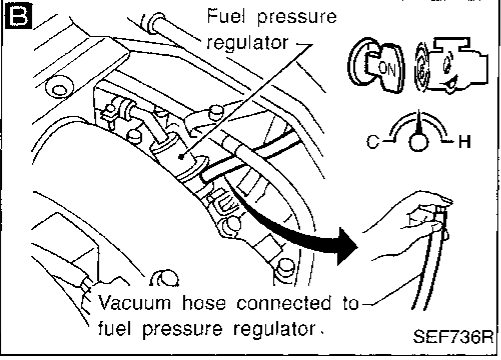

**C**

**CHECK CONTROL FUNCTION.**


1. Stop engine and reconnect vacuum hose to fuel pressure regulator.
2. Restart engine.
3. Check voltage between ECM terminal (120) and ground with CONSULT or tester.
4. In a few minutes, recheck voltage between ECM terminal (120) and ground with CONSULT or tester.

**Voltage: Approximately 0V**

**Voltage: Battery voltage**

NG → **D** CHECK VACUUM HOSE. Check vacuum hose for clogging, cracks or improper connection.

RA  
BR  
ST  
RS





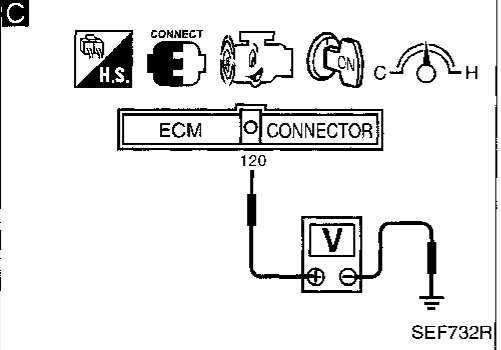


OK → (A)

BT  
HA  
EL  
IDX

# TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS

## Fuel Pressure Regulator Control (Cont'd)

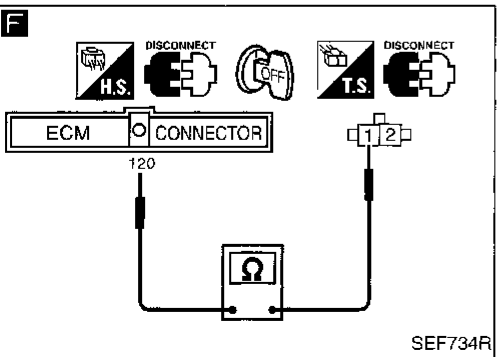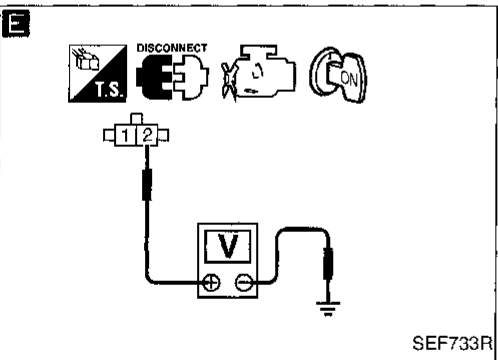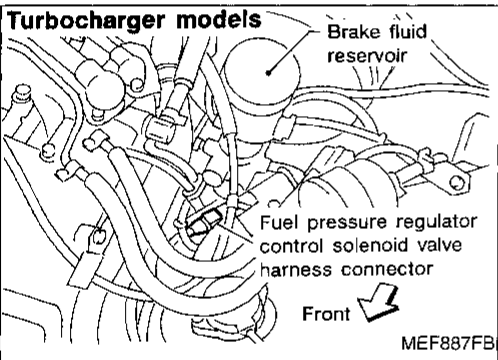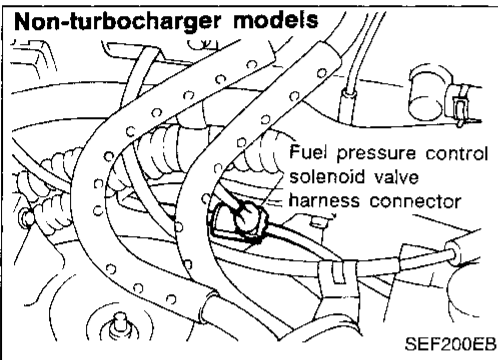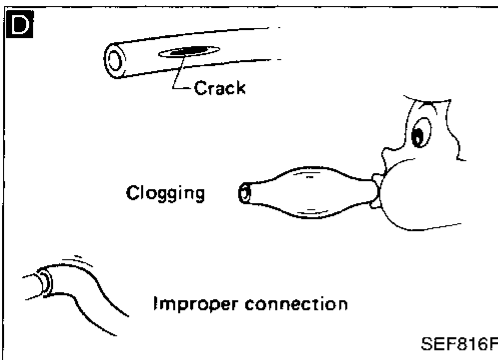

**A**

**E**

**CHECK POWER SUPPLY.**

1. Stop engine.
2. Disconnect fuel pressure regulator control solenoid valve harness connector.
3. Turn ignition switch "ON".
4. Check voltage between terminal ② and ground with CONSULT or tester.

**Voltage: Battery voltage**

NG → Check the following.

- Harness connectors
- E12, F25
- 15A fuse
- Harness for open or short between fuel pressure regulator control solenoid valve and fuse

If NG, repair harness or connectors.

OK →

**F**

**CHECK OUTPUT SIGNAL CIRCUIT.**

1. Turn ignition switch "OFF".
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal ⑫ and terminal ①.

**Continuity should exist.**

If OK, check harness for short.

NG → Repair harness or connectors.

OK →

**CHECK COMPONENT**  
(Fuel pressure regulator control solenoid valve).

Refer to "COMPONENT INSPECTION" on next page.

NG → Replace fuel pressure regulator control solenoid valve.

OK →

Disconnect and reconnect harness connectors in the circuit. Then retest.

↓

Trouble is not fixed.

Check ECM pin terminals for damage and check the connection of ECM harness connector. Reconnect ECM harness connector and retest.




# TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS

## Fuel Pressure Regulator Control (Cont'd) COMPONENT INSPECTION

### Fuel pressure regulator control solenoid valve

Check air passage continuity.

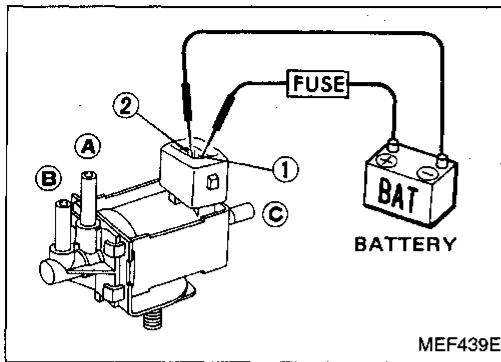



Condition	Air passage continuity between (A) and (B)	Air passage continuity between (A) and (C)
12V direct current supply between terminals ① and ②	Yes	No
No supply	No	Yes

If NG, replace solenoid valve.

- CI
- MA
- EM
- LC
- EC**
- FE
- CL
- MT
- AT
- PD
- FA
- RA
- BR
- ST
- RS
- BT
- HA
- EL
- IDX


Power Steering Oil Pressure Switch

EC-PST/SW-01

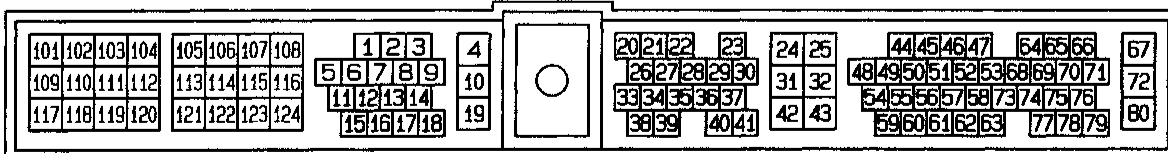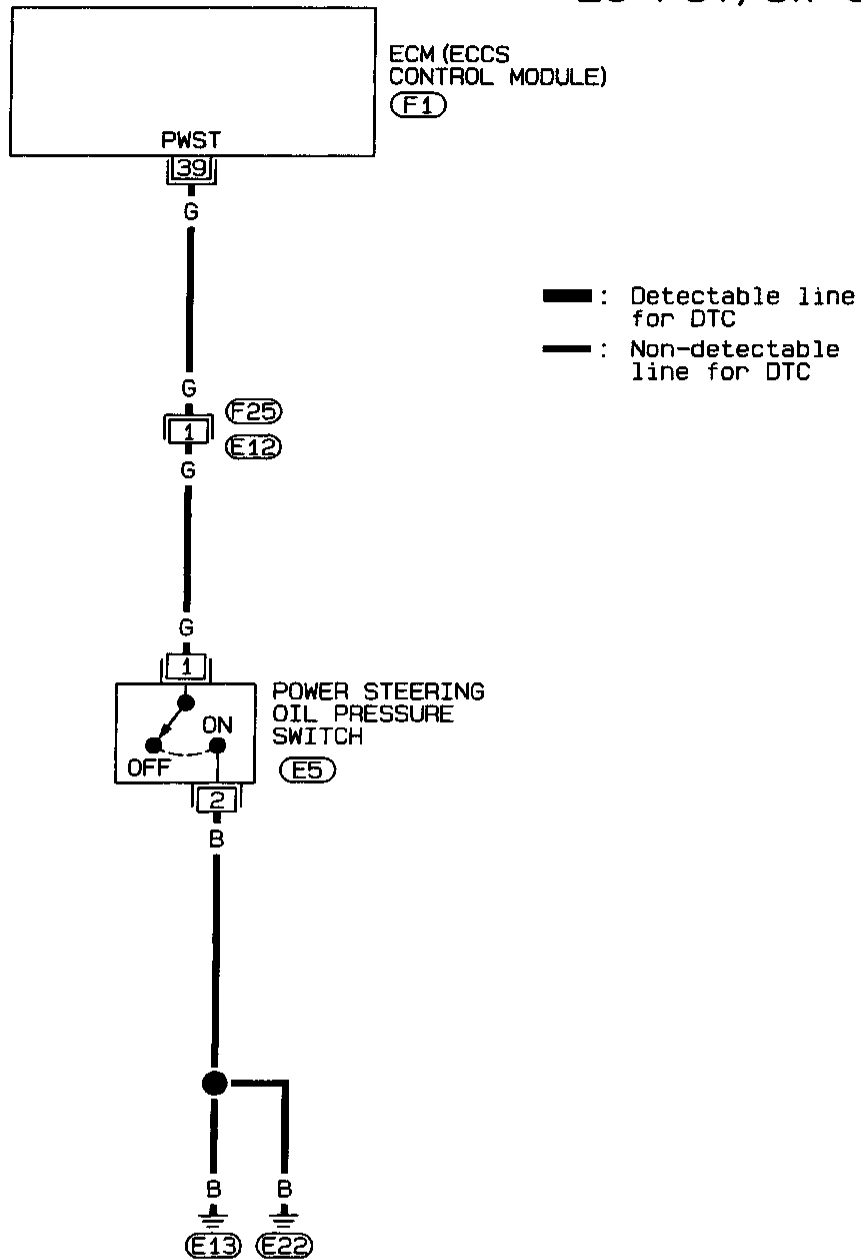

# TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS

## Power Steering Oil Pressure Switch (Cont'd) COMPONENT DESCRIPTION

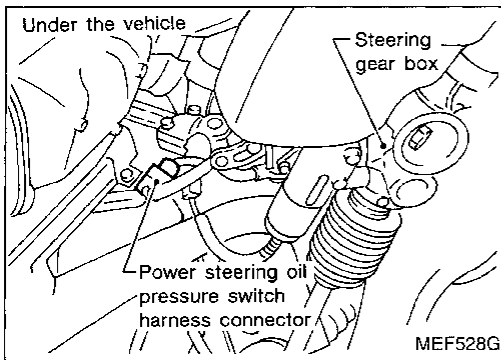

The power steering oil pressure switch is attached to the power steering high-pressure tube and detects a power steering load. When a power steering load is detected, it signals the ECM. The ECM adjusts the IACV-AAC valve to increase the idle speed and adjust for the increased load.

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

## DIAGNOSTIC PROCEDURE

**A**

■ PW/ST SIGNAL CIRCUIT ■

HOLD STEERING WHEEL  
IN A FULL  
LOCKED POSITION  
THEN  
TOUCH START

NEXT    START

MEF023E

**A**

☆ MONITOR ☆ NO FAIL

PW/ST SIGNAL      OFF

RECORD

SEF591I

**A**

CONNECT

H.S.

ECM    CONNECTOR

39

V

+

-

SEF662P

**B**

DISCONNECT


T.S.

1

2




Ω

SEF623R

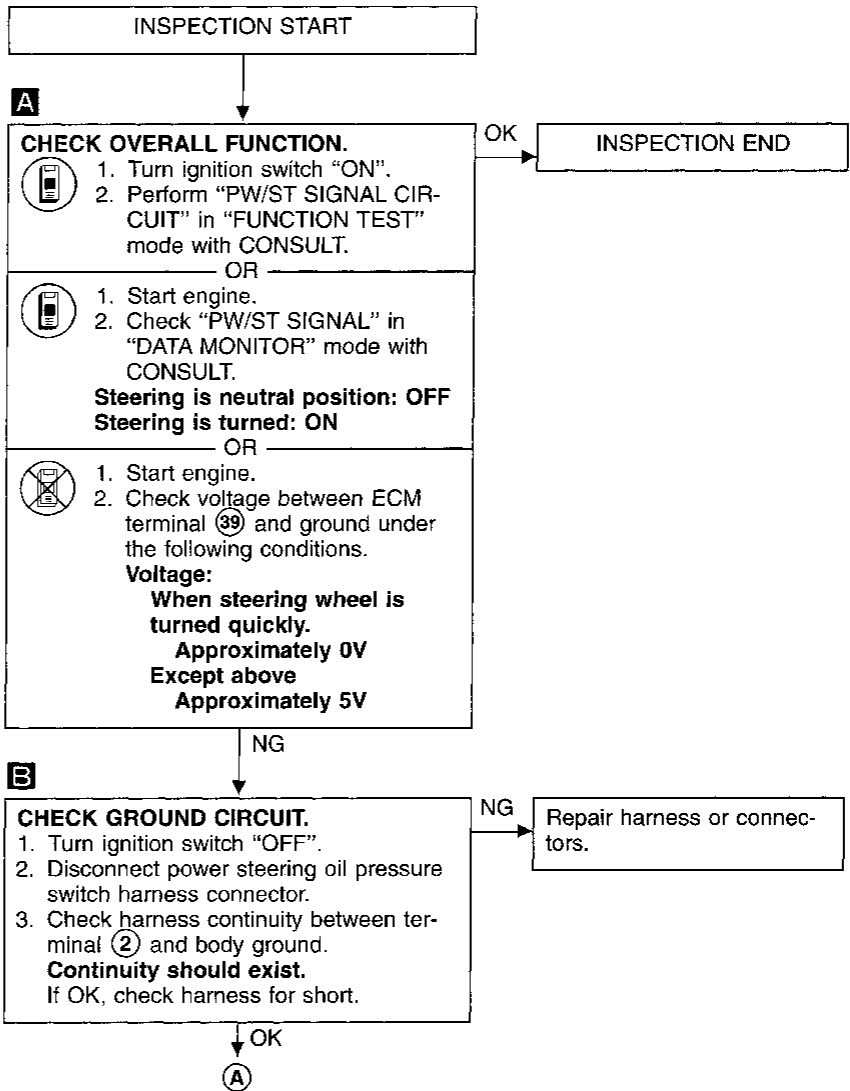

# TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS

## Power Steering Oil Pressure Switch (Cont'd)

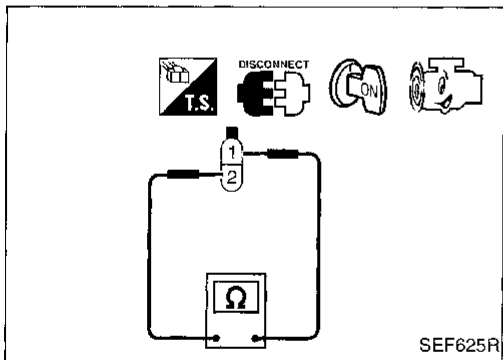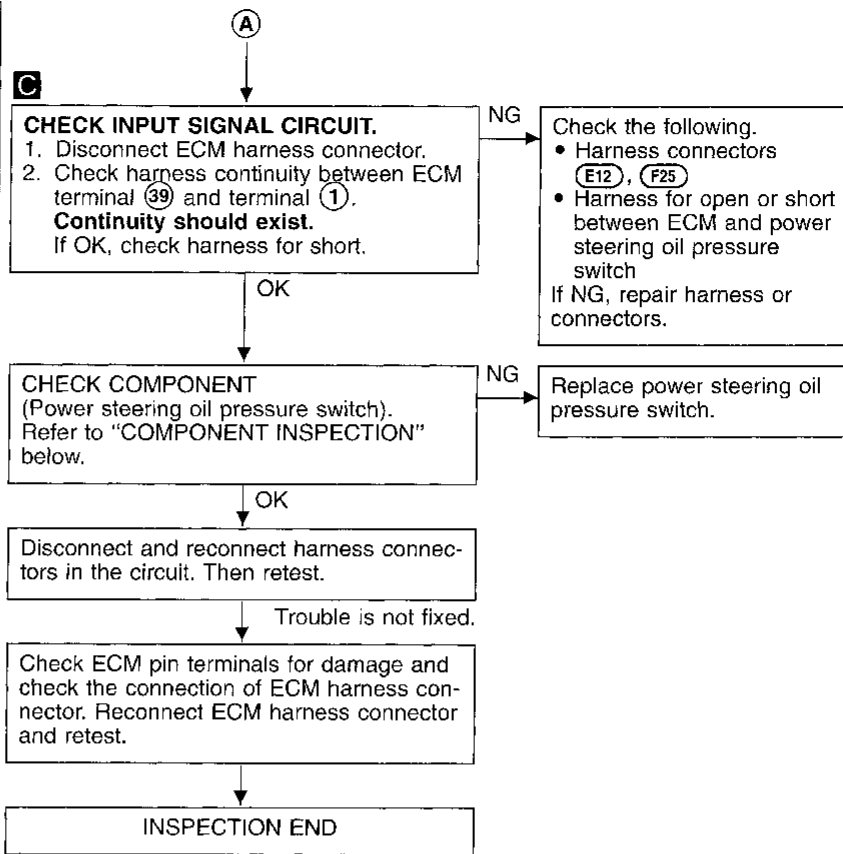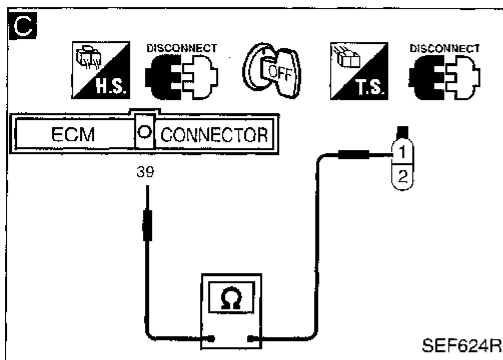

### COMPONENT INSPECTION

#### Power steering oil pressure switch


1. Disconnect power steering oil pressure switch harness connector then start engine.
2. Check continuity between terminals ① and ②.

Conditions	Continuity
Steering wheel is being turned	Yes
Steering wheel is not being turned	No

If NG, replace power steering oil pressure switch.


IACV-FICD Solenoid Valve

EC-FICD-01

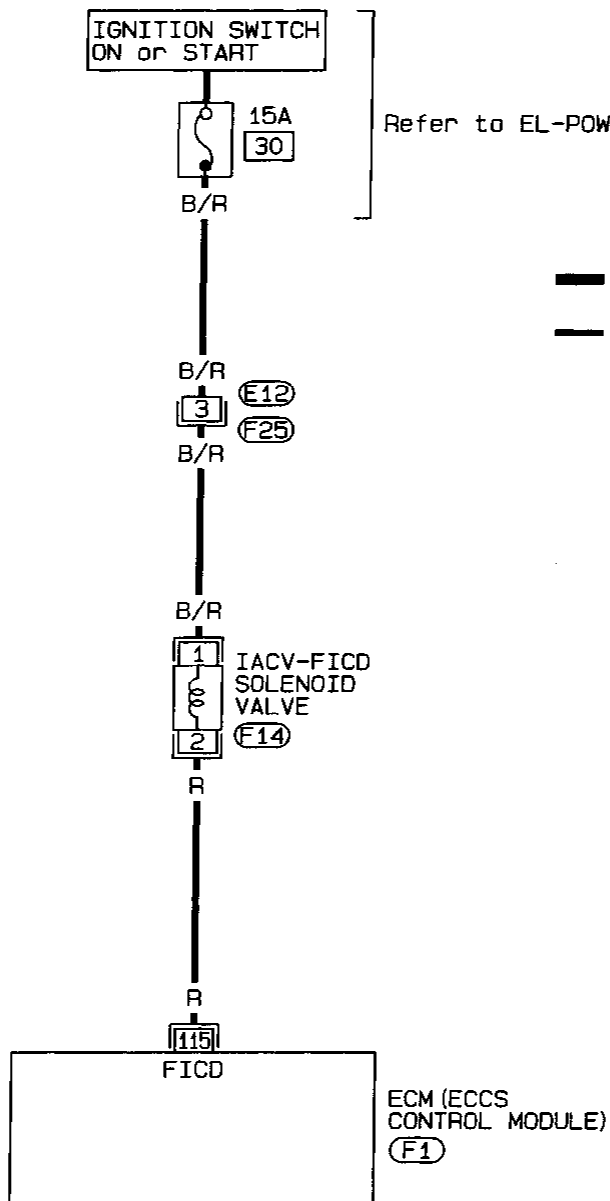

— : Detectable line for DTC  
— : Non-detectable line for DTC

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
PS  
BT  
HA  
EL  
DX

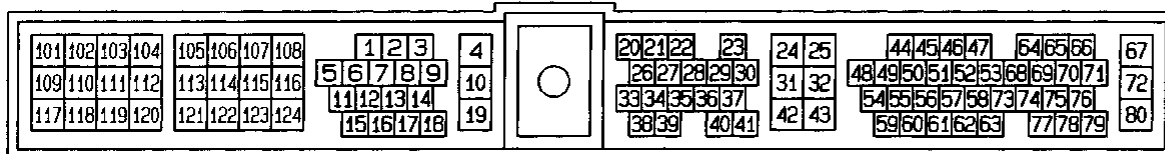


# TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS





## IACV-FICD Solenoid Valve (Cont'd)

### COMPONENT DESCRIPTION

The idle air adjusting (IAA) unit is made up of the IACV-AAC valve, IACV-FICD solenoid valve and idle adjusting screw. It receives the signal from the ECM and controls the idle speed at the preset value.



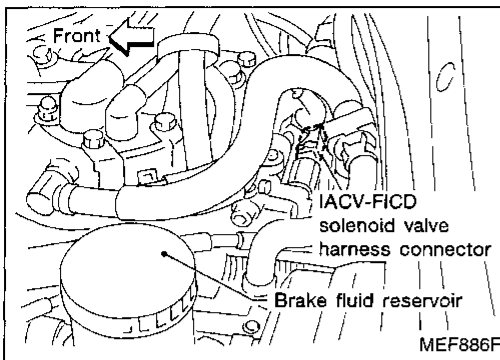


### DIAGNOSTIC PROCEDURE

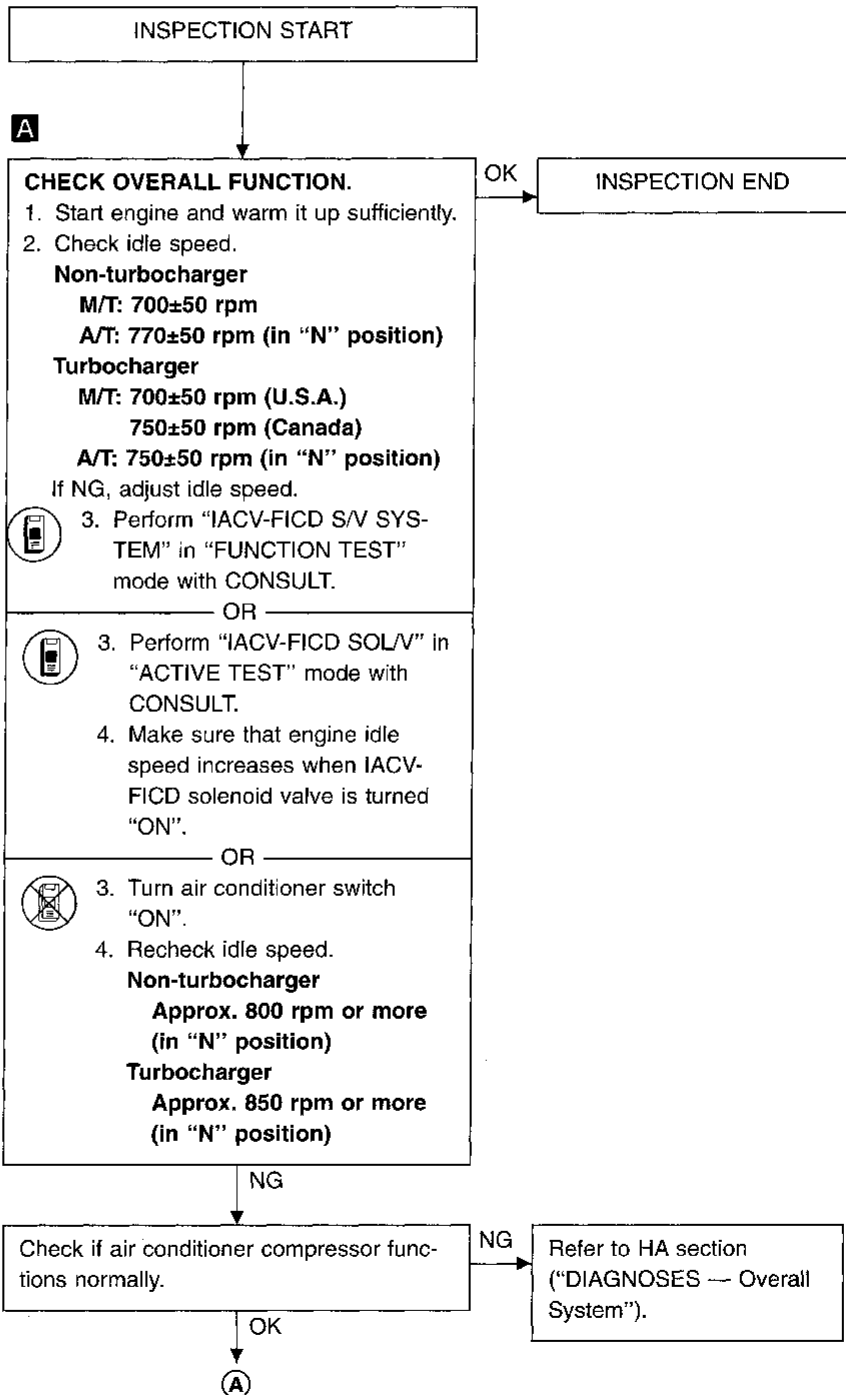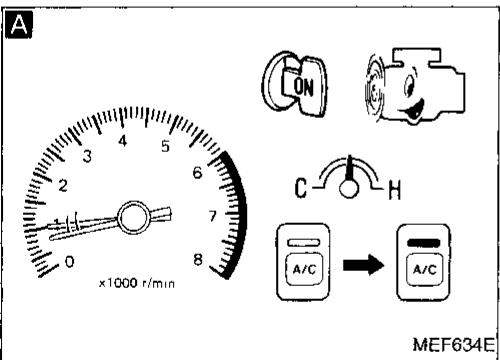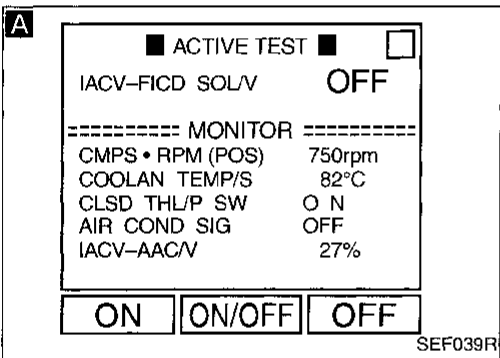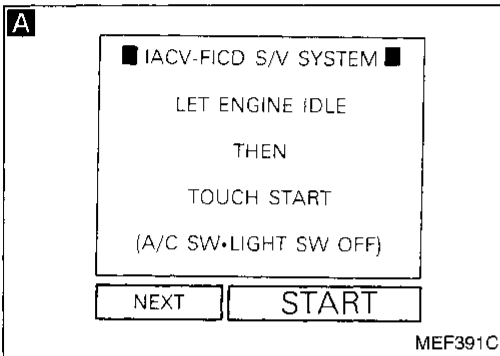

# TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS

## IACV-FICD Solenoid Valve (Cont'd)

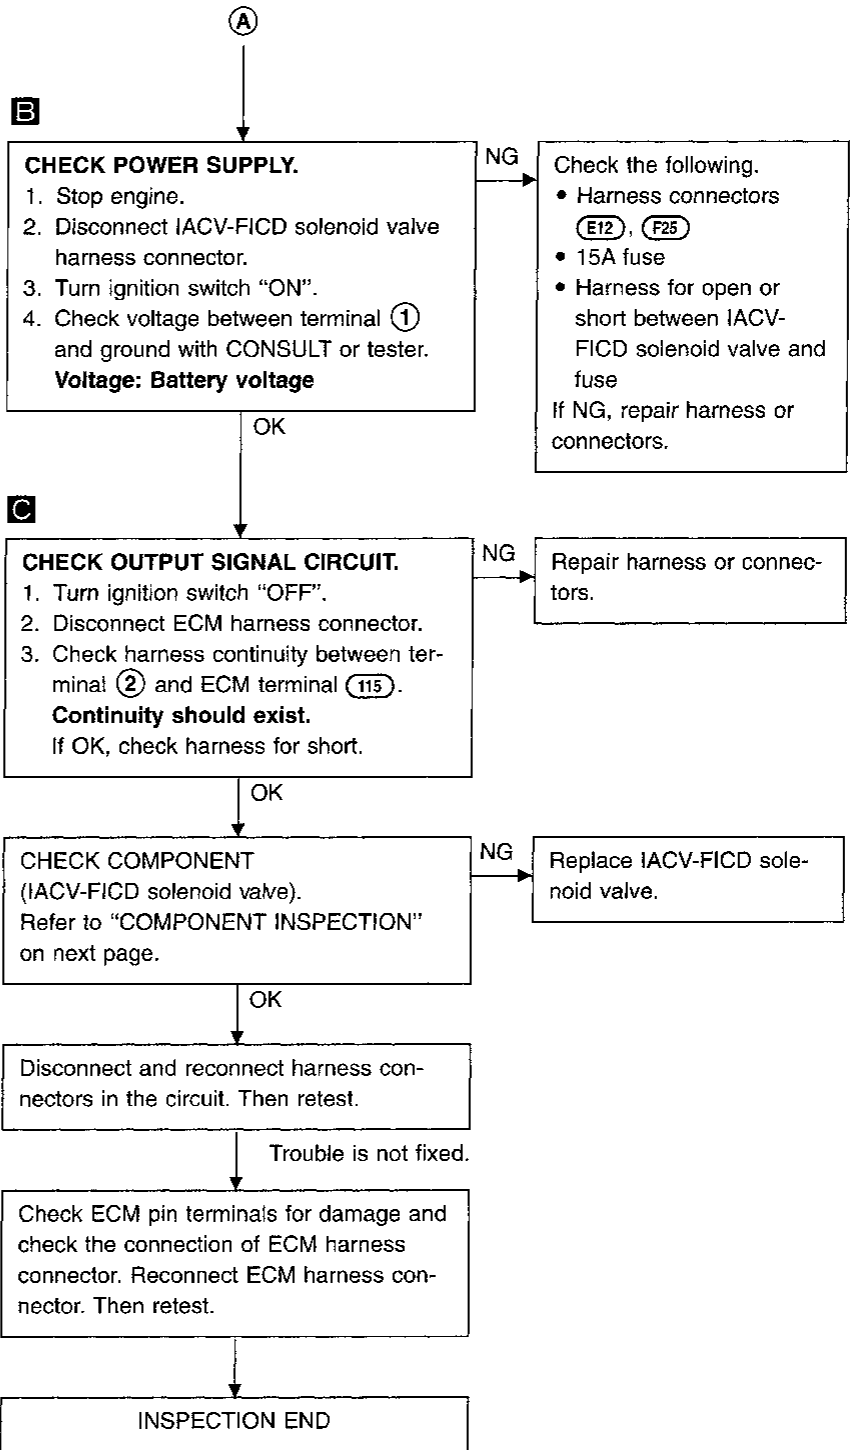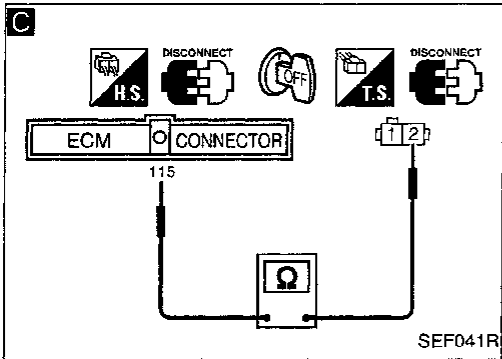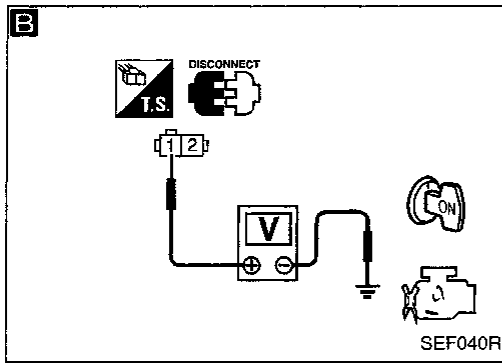

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

## TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS



### IACV-FICD Solenoid Valve (Cont'd)

#### COMPONENT INSPECTION

#### IACV-FICD solenoid valve

Disconnect IACV-FICD solenoid valve harness connector:

- Check for clicking sound when applying 12V direct current to terminals.

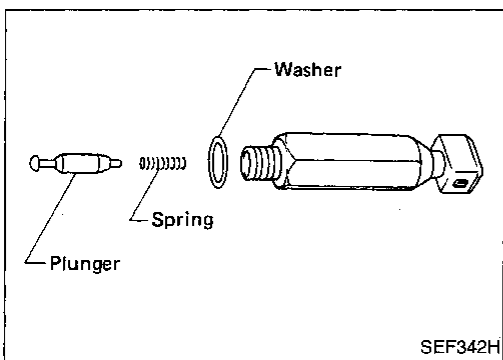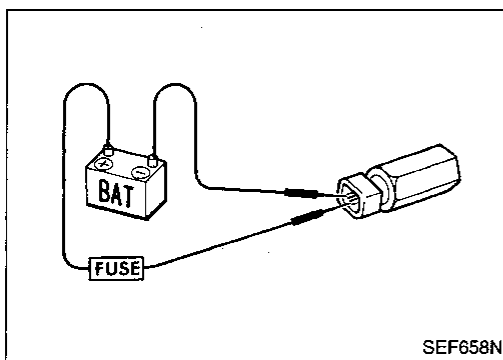


- Check plunger for seizing or sticking.
- Check for broken spring.




# TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS

## MIL & Data Link Connectors

EC-MIL-01

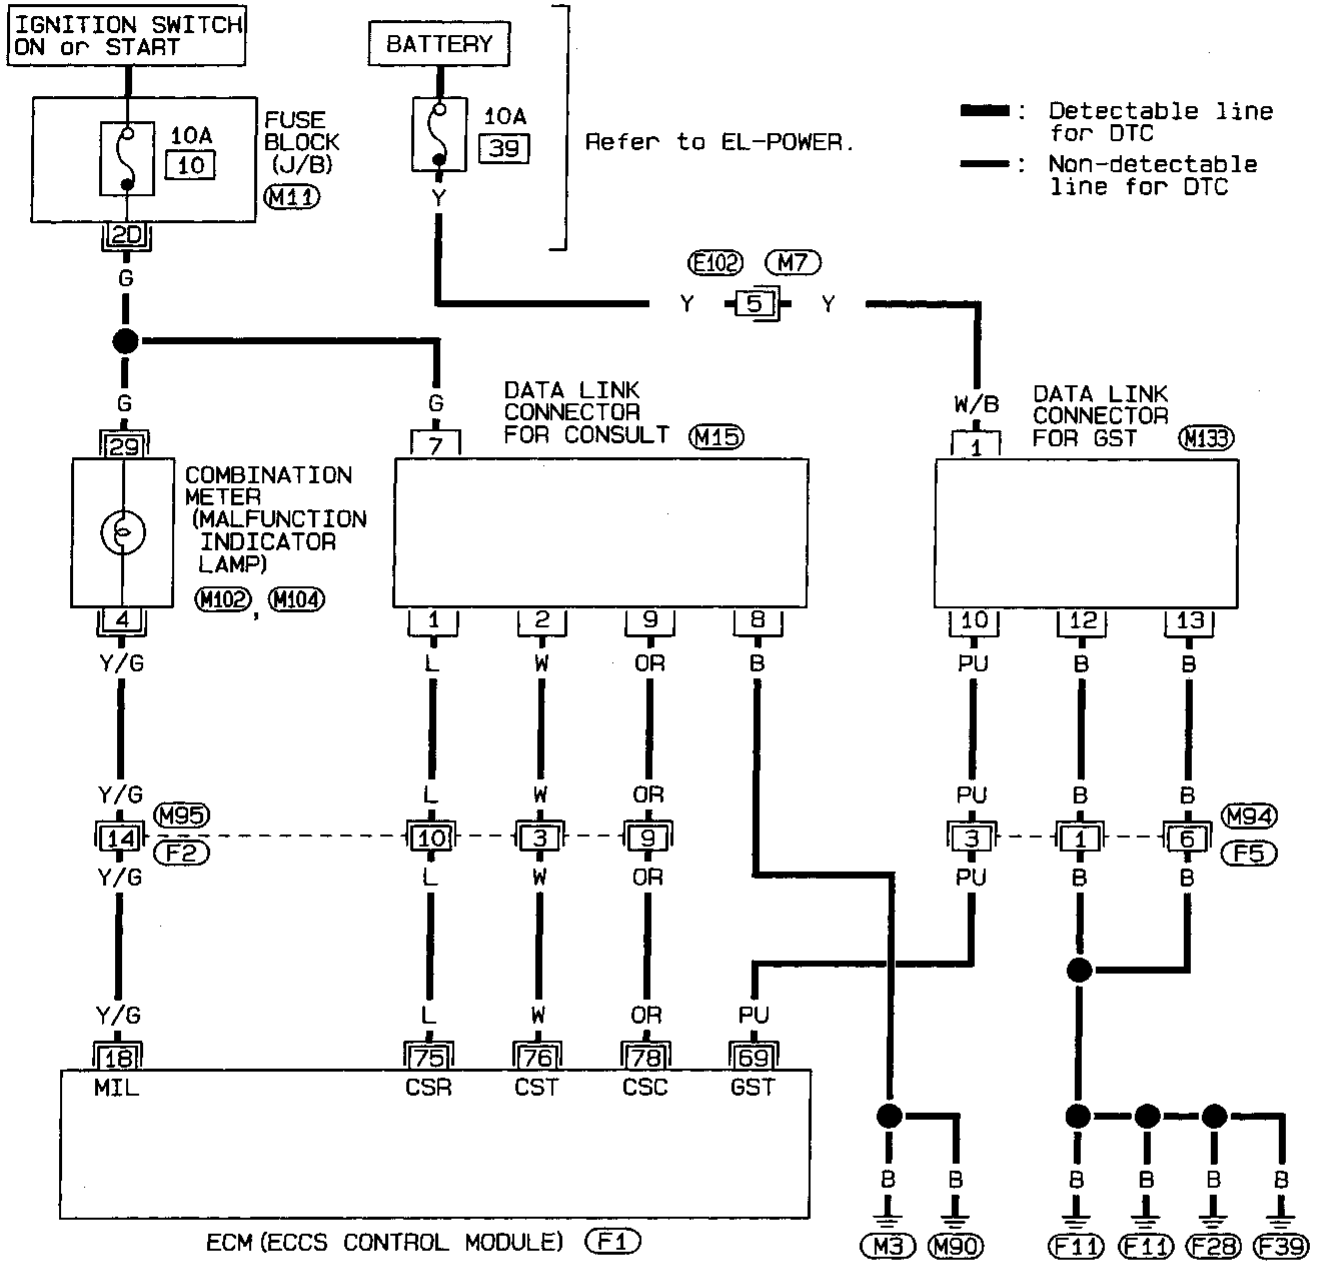

GI  
MA  
EM  
LC  
**EC**  
FE  
CL  
MT  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

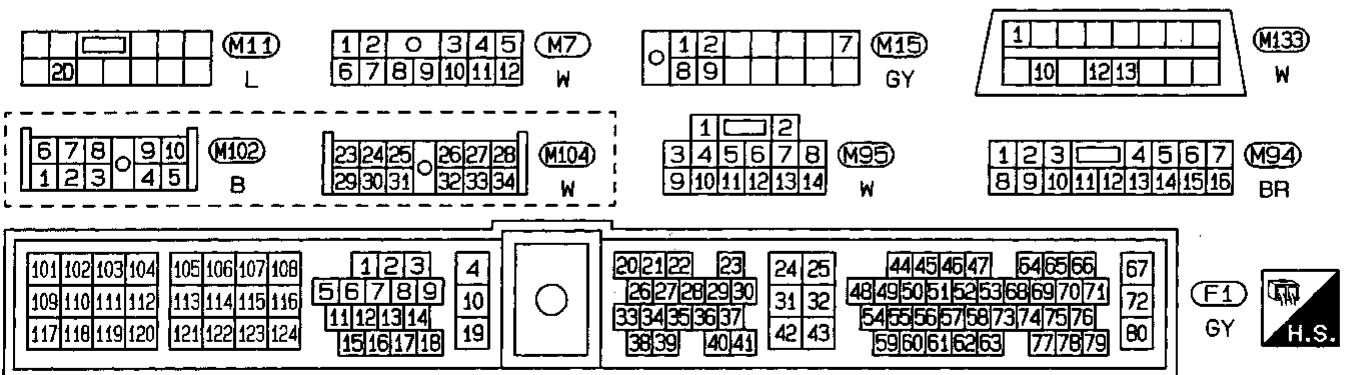

**Alphabetical & P No. Index for DTC**

**ALPHABETICAL INDEX FOR DTC**

Items (CONSULT screen terms)	DTC		Reference page
	MIL*1	CONSULT GST*2	
*COOLANT TEMP SEN	0908	P0125	EC-127
A/T 1ST SIGNAL	1103	P0731	AT section
A/T 2ND SIGNAL	1104	P0732	AT section
A/T 3RD SIGNAL	1105	P0733	AT section
A/T 4TH SIG OR TCC	1106	P0734	AT section
A/T COMM LINE	—	P0600	EC-241
A/T DIAG COMM LINE	0804	P1605	EC-293
CAMSHAFT POSI SEN	0101	P0340	EC-206
CAN CONT VC CHK SW	0113	P1443	EC-288
CLOSED LOOP-B1	0307	P0130	EC-132
CLOSED LOOP-B2	0308	P0150*3	EC-132
COOLANT TEMP SEN	0103	P0115	EC-118
COOLING FAN	1308	P1900	EC-296
CRANK P/S (OBD) COG	0905	P1336	EC-275
CRANK POS SEN (OBD)	0802	P0335	EC-202
CYL 1 MISFIRE	0608	P0301	EC-194
CYL 2 MISFIRE	0607	P0302	EC-194
CYL 3 MISFIRE	0606	P0303	EC-194
CYL 4 MISFIRE	0605	P0304	EC-194
CYL 5 MISFIRE	0604	P0305	EC-194
CYL 6 MISFIRE	0603	P0306	EC-194
ECM	0301	P0605	EC-244
EGR SYSTEM	0302	P0400	EC-211
EGR TEMP SENSOR	0305	P1401	EC-283
EGRC SOLENOID/V	1005	P1400	EC-279
ENGINE SPEED SIG	1207	P0725	AT section
FLUID TEMP SENSOR	1208	P0710	AT section
FPCM	1305	P1220	EC-260
FR O2 SEN HTR-B1	0901	P0135	EC-138

Items (CONSULT screen terms)	DTC		Reference page
	MIL*1	CONSULT GST*2	
FR O2 SEN HTR-B2	1001	P0155	EC-155
FRONT O2 SENSOR-B1	0503	P0130	EC-133
FRONT O2 SENSOR-B2	0303	P0150	EC-150
FUEL SYS LEAN/BK1	0115	P0171	EC-167
FUEL SYS LEAN/BK2	0210	P0174	EC-179
FUEL SYS RICH/BK1	0114	P0172	EC-173
FUEL SYS RICH/BK2	0209	P0175	EC-185
FUEL TEMP SENSOR	0402	P0180	EC-191
IACV-AAC VALVE	0205	P0505	EC-237
IGN SIGNAL-PRIMARY	0201	P1320	EC-266
INHIBITOR SWITCH	1101	P0705	AT section
INT AIR TEMP SEN	0401	P0110	EC-113
KNOCK SENSOR	0304	P0325	EC-199
LINE PRESSURE S/V	1205	P0745	AT section
MASS AIR FLOW SEN	0102	P0100	EC-108
OVERRUN CLUTCH S/V	1203	P1760	AT section
PARK/NEUT POSI SW	1003	P0705	EC-246
PURG CONT/V & S/V	0807	P0443	EC-223
MULTI CYL MISFIRE	0701	P0300	EC-194
REAR O2 SENSOR-B1	0707	P0136	EC-141
REAR O2 SENSOR-B2	0708	P0156	EC-158
RR O2 SEN HTR-B1	0902	P0141	EC-146
RR O2 SEN HTR-B2	1002	P0161	EC-163
SHIFT SOLENOID/V A	1108	P0750	AT section
SHIFT SOLENOID/V B	1201	P0755	AT section
THROTTLE POSI SEN	0403	P0120	EC-122
THRTL POSI SEN A/T	1206	P1705	AT section
TOR CONV CLUTCH SV	1204	P0740	AT section
TURBO BOOST SEN- SOR	0206	P1160	EC-254
TW CATALYST SYS-B1	0702	P0420	EC-220
TW CATALYST SYS-B2	0703	P0430	EC-220
VEHICLE SPEED SEN	0104	P0500	EC-233
VHCL SPEED SEN A/T	1102	P0720	AT section
W/G CONT S/V-BANK1	1306	P1150	EC-250
W/G CONT S/V-BANK2	1307	P1155	EC-250

\*1: These are controlled by NISSAN.

\*2: These are prescribed by SAE J2012.

\*3: Using CONSULT, "P0130" will be displayed in this case.

# TROUBLE DIAGNOSIS — Index

## Alphabetical & P No. Index for DTC (Cont'd)

### P NO. INDEX FOR DTC

DTC		Items (CONSULT screen terms)	Reference page	DTC		Items (CONSULT screen terms)	Reference page		
CONSULT GST*2	MIL*1			CONSULT GST*2	MIL*1				
<b>P0000</b>	<b>0505</b>	<b>NO SELF-DIAGNOSTIC FAILURE INDICATED</b>	—	P0443	0807	PURG CONT/V & S/V	EC-223	GI	
P0100	0102	MASS AIR FLOW SEN	EC-108	P0500	0104	VEHICLE SPEED SEN	EC-233	MA	
P0110	0401	INT AIR TEMP SEN	EC-113	P0505	0205	IACV-AAC VALVE	EC-237	EM	
P0115	0103	COOLANT TEMP SEN	EC-118	P0600	—	A/T COMM LINE	EC-241	EM	
P0120	0403	THROTTLE POSI SEN	EC-122	P0605	0301	ECM	EC-244	LC	
P0125	0908	*COOLANT TEMP SEN	EC-127	P0705	1003	PARK/NEUT POSI SW	EC-246	LC	
P0130	0307	CLOSED LOOP-B1	EC-132	P0705	1101	INHIBITOR SWITCH	AT section	<b>EC</b>	
P0130	0503	FRONT O2 SENSOR-B1	EC-133	P0710	1208	FLUID TEMP SENSOR	AT section		
P0135	0901	FR O2 SEN HTR-B1	EC-138	P0720	1102	VHCL SPEED SEN A/T	AT section	FE	
P0136	0707	REAR O2 SENSOR-B1	EC-141	P0725	1207	ENGINE SPEED SIG	AT section	FE	
P0141	0902	RR O2 SEN HTR-B1	EC-146	P0731	1103	A/T 1ST SIGNAL	AT section	CL	
P0150*3	0308	CLOSED LOOP-B2	EC-132	P0732	1104	A/T 2ND SIGNAL	AT section	CL	
P0150	0303	FRONT O2 SENSOR-B2	EC-150	P0733	1105	A/T 3RD SIGNAL	AT section	CL	
P0155	1001	FR O2 SEN HTR-B2	EC-155	P0734	1106	A/T 4TH SIG OR TCC	AT section	MT	
P0156	0708	REAR O2 SENSOR-B2	EC-158	P0740	1204	TOR CONV CLUTCH SV	AT section	MT	
P0161	1002	RR O2 SEN HTR-B2	EC-163	P0745	1205	LINE PRESSURE S/V	AT section	AT	
P0171	0115	FUEL SYS LEAN/BK1	EC-167	P0750	1108	SHIFT SOLENOID/V A	AT section	AT	
P0172	0114	FUEL SYS RICH/BK1	EC-173	P0755	1201	SHIFT SOLENOID/V B	AT section	AT	
P0174	0210	FUEL SYS LEAN/BK2	EC-179	P1150	1306	W/G CONT S/V-BANK1	EC-250	PD	
P0175	0209	FUEL SYS RICH/BK2	EC-185	P1155	1307	W/G CONT S/V-BANK2	EC-250	PD	
P0180	0402	FUEL TEMP SENSOR	EC-191	P1160	0206	TURBO BOOST SEN- SOR	EC-254	FA	
P0300	0701	MULTI CYL MISFIRE	EC-194	P1220	1305	FPCM	EC-260	FA	
P0301	0608	CYL 1 MISFIRE	EC-194	P1320	0201	IGN SIGNAL-PRIMARY	EC-266	RA	
P0302	0607	CYL 2 MISFIRE	EC-194	P1336	0905	CRANK P/S (OBD) COG	EC-275	RA	
P0303	0606	CYL 3 MISFIRE	EC-194	P1400	1005	EGRC SOLENOID/V	EC-279	BR	
P0304	0605	CYL 4 MISFIRE	EC-194	P1401	0305	EGR TEMP SENSOR	EC-283	BR	
P0305	0604	CYL 5 MISFIRE	EC-194	P1443	0113	CAN CONT VC CHK SW	EC-288	ST	
P0306	0603	CYL 6 MISFIRE	EC-194	P1605	0804	A/T DIAG COMM LINE	EC-293	ST	
P0325	0304	KNOCK SENSOR	EC-199	P1705	1206	THRTL POSI SEN A/T	AT section	RS	
P0335	0802	CRANK POS SEN (OBD)	EC-202	P1760	1203	OVERRUN CLUTCH S/V	AT section	RS	
P0340	0101	CAMSHAFT POSI SEN	EC-206	P1900	1308	COOLING FAN	EC-296	BT	
P0400	0302	EGR SYSTEM	EC-211	*1: These are controlled by NISSAN. *2: These are prescribed by SAE J2012. *3: Using CONSULT, "P0130" will be displayed in this case.					BT
P0420	0702	TW CATALYST SYS-B1	EC-220						HA
P0430	0703	TW CATALYST SYS-B2	EC-220						EL

# SERVICE DATA AND SPECIFICATIONS (SDS)

## General Specifications

FUEL PRESSURE REGULATOR	
Fuel pressure at idling kPa (kg/cm <sup>2</sup> , psi)	
Vacuum hose is connected	Approximately 250.1 (2.55, 36.3)
Vacuum hose is disconnected	Approximately 299.1 (3.05, 43.4)

## Inspection and Adjustment

Idle speed*1	rpm	
No-load*2	(in "N" position)	Non-turbocharger M/T: 700±50 A/T: 770±50 Turbocharger M/T: 700±50 (U.S.A.) 750±50 (Canada) A/T: 750±50
Air conditioner: ON	(in "N" position)	Non-turbocharger 800 or more Turbocharger 850 or more
Ignition timing		Non-turbocharger 10°±2° BTDC Turbocharger 15°±2° BTDC
Throttle position sensor idle position	V	0.35 - 0.65

\*1: Feedback controlled and needs no adjustments

\*2: Under the following conditions:

- Air conditioner switch: OFF
- Electric load: OFF (Lights, heater, fan & rear defogger)

## MASS AIR FLOW SENSOR

Supply voltage	V	Battery voltage (11 - 14)
Output voltage	V	1.0 - 1.7 at idle*
Mass air flow (Using CONSULT or GST)	g/m/sec	At idle*: 2.3 - 4.8 (Non-turbocharger models with M/T) 2.9 - 6.0 (Non-turbocharger models with A/T) 2.6 - 5.3 (Turbocharger models with M/T) 2.9 - 6.0 (Turbocharger models with A/T) At 2,500 rpm*: 7.9 - 15.5 (Non-turbocharger models with M/T) 8.7 - 16.9 (Non-turbocharger models with A/T) 9.3 - 18.1 (Turbocharger models with M/T) 8.8 - 17.2 (Turbocharger models with A/T)

\*: Engine is warmed up sufficiently and idling under no-load.

## ENGINE COOLANT TEMPERATURE SENSOR

Temperature °C (°F)	Resistance
-10 (14)	7.0 - 11.4 kΩ
20 (68)	2.1 - 2.9 kΩ
50 (122)	0.68 - 1.00 kΩ
90 (194)	0.236 - 0.260 kΩ
110 (230)	0.143 - 0.153 kΩ

## IGNITION COIL

Primary voltage	V	12
Primary resistance [at 20°C (68°F)]	Ω	Approximately 0.9
Secondary resistance [at 20°C (68°F)]	Ω	Approximately 8

## EGR TEMPERATURE SENSOR

Temperature °C (°F)	Resistance
0 (32)	7.9 - 9.7 MΩ
50 (122)	0.57 - 0.70 MΩ
100 (212)	0.08 - 0.10 MΩ
150 (302)	0.01 - 0.01 MΩ

## FRONT HEATED OXYGEN SENSOR HEATER

Resistance [at 25°C (77°F)]	Ω	2.3 - 4.3
-----------------------------	---	-----------

## FUEL PUMP

Resistance [at 25°C (77°F)]	Ω	0.2 - 5.0
-----------------------------	---	-----------

## IACV-AAC VALVE

Resistance [at 25°C (77°F)]	Ω	Approximately 10
-----------------------------	---	------------------

## INJECTOR

Resistance [at 25°C (77°F)]	Ω	10 - 14
-----------------------------	---	---------

# SERVICE DATA AND SPECIFICATIONS (SDS)

## Inspection and Adjustment (Cont'd)

### THROTTLE POSITION SENSOR

Accelerator pedal conditions	Resistance [at 25°C (77°F)]
Completely released	Approximately 0.5 kΩ
Partially released	0.5 - 4.0 kΩ
Completely depressed	Approximately 4.0 kΩ

### CALCULATED LOAD VALUE

			Calculated load value % (Using CONSULT or GST)
At idle	Non-turbo-charger	M/T	14.1 - 29.3
		A/T	15.3 - 32.0
	Turbo-charger	M/T	12.6 - 26.4
		A/T	13.9 - 29.1
At 2,500 rpm	Non-turbo-charger	M/T	13.6 - 26.6
		A/T	14.1 - 27.5
	Turbo-charger	M/T	10.1 - 19.8
		A/T	10.0 - 19.5

### INTAKE AIR TEMPERATURE SENSOR

Temperature °C (°F)	Resistance
-10 (14)	7.0 - 11.4 kΩ
20 (68)	2.1 - 2.9 kΩ
80 (176)	0.27 - 0.38 kΩ
-10 (14)	7.0 - 11.4 kΩ

### FUEL TEMPERATURE SENSOR

Temperature °C (°F)	Resistance
20 (68)	2.1 - 2.9 kΩ
50 (122)	0.68 - 1.00 kΩ
80 (176)	0.30 - 0.33 kΩ

### IACV-AIR REGULATOR

Resistance [at 20°C (68°F)]	Ω	70 - 80
-----------------------------	---	---------

### REAR HEATED OXYGEN SENSOR HEATER

Resistance [at 25°C (77°F)]	Ω	2.3 - 4.3
-----------------------------	---	-----------

### CRANKSHAFT POSITION SENSOR (OBD)

Resistance [at 20°C (68°F)]	Ω	166 - 204
-----------------------------	---	-----------

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

DX