

SECTION **FSU**  
FRONT SUSPENSION

A  
B  
C  
D

FSU

CONTENTS

<b>SYMPTOM DIAGNOSIS</b> .....	3	<b>WHEEL ALIGNMENT</b> .....	9	F
<b>NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING</b> .....	3	Inspection .....	9	
NVH Troubleshooting Chart .....	3	<b>ON-VEHICLE REPAIR</b> .....	10	G
<b>PRECAUTION</b> .....	4	<b>FRONT COIL SPRING AND STRUT</b> .....	10	
<b>PRECAUTIONS</b> .....	4	Exploded View .....	10	H
<b>FOR USA AND CANADA</b> .....	4	Removal and Installation .....	10	
FOR USA AND CANADA : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	4	Disassembly and Assembly .....	11	I
FOR USA AND CANADA : Precaution Necessary for Steering Wheel Rotation after Battery Disconnect .....	4	Inspection .....	12	
FOR USA AND CANADA : Precaution for Procedure without Cowl Top Cover .....	5	Disposal .....	12	J
FOR USA AND CANADA : Precautions for Suspension .....	5	<b>TRANSVERSE LINK</b> .....	13	
<b>FOR MEXICO</b> .....	5	Exploded View .....	13	K
FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	5	Removal and Installation .....	13	
FOR MEXICO : Precaution Necessary for Steering Wheel Rotation after Battery Disconnect .....	5	Inspection .....	13	L
FOR MEXICO : Precaution for Procedure without Cowl Top Cover .....	6	<b>FRONT STABILIZER</b> .....	15	
FOR MEXICO : Precautions for Suspension .....	6	Exploded View .....	15	M
<b>PREPARATION</b> .....	7	Removal and Installation .....	15	
<b>PREPARATION</b> .....	7	Inspection .....	16	N
Special Service Tool .....	7	<b>REMOVAL AND INSTALLATION</b> .....	17	
Commercial Service Tool .....	7	<b>FRONT SUSPENSION MEMBER</b> .....	17	O
<b>ON-VEHICLE MAINTENANCE</b> .....	8	Exploded View .....	17	
<b>FRONT SUSPENSION ASSEMBLY</b> .....	8	Removal and Installation .....	17	P
Inspection .....	8	Inspection .....	17	
		<b>SERVICE DATA AND SPECIFICATIONS (SDS)</b> .....	19	
		<b>SERVICE DATA AND SPECIFICATIONS (SDS)</b> .....	19	
		<b>APPLICATION NOTICE</b> .....	19	
		APPLICATION NOTICE : How to Check Vehicle Type .....	19	
		<b>TYPE A</b> .....	19	
		TYPE A : Wheel Alignment .....	19	
		TYPE A : Ball Joint .....	19	

---

TYPE A : Wheelarch Height .....	20	TYPE B : Ball Joint .....	21
<b>TYPE B .....</b>	<b>20</b>	TYPE B : Wheelarch Height .....	21
TYPE B : Wheel Alignment .....	20		

# NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

< SYMPTOM DIAGNOSIS >

## SYMPTOM DIAGNOSIS

### NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

#### NVH Troubleshooting Chart

INFOID:000000003451884

Use chart below to find the cause of the symptom. If necessary, repair or replace these parts.

Symptom	FRONT SUSPENSION	Possible cause and SUSPECTED PARTS																Reference page
		Improper installation, looseness	Shock absorber deformation, damage or deflection	Bushing or mounting deterioration	Parts interference	Spring fatigue	Suspension looseness	Incorrect wheel alignment	Stabilizer bar fatigue	PROPELLER SHAFT (AWD)	DIFFERENTIAL (AWD)	FRONT AXLE AND FRONT SUSPENSION	TIRE	ROAD WHEEL	DRIVE SHAFT	BRAKE	STEERING	
Noise		x	x	x	x	x	x	x			x	x	x	x	x	x	x	FSU-10, FSU-13, FSU-15, FSU-17
Shake		x	x	x	x		x			x		x	x	x	x	x	x	FSU-12
Vibration		x	x	x	x	x				x		x	x		x			
Shimmy		x	x	x	x				x			x	x			x		
Judder		x	x	x							x	x	x			x		
Poor quality ride or handling		x	x	x	x	x		x	x			x	x	x				

x: Applicable

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P



# PRECAUTIONS

< PRECAUTION >

## PRECAUTION

### PRECAUTIONS

#### FOR USA AND CANADA

#### FOR USA AND CANADA : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000004755091

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIRBAG" and "SEAT BELT" of this Service Manual.

#### **WARNING:**

- **To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.**
- **Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIRBAG".**
- **Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.**

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors while ignition switch is ON or engine is running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration may activate the sensor(s), deploy the airbag(s), possibly cause serious injury.

When using air or electric power tools or hammers, always turn OFF ignition switch, disconnect the battery, and wait 3 minutes or more before performing any service.

#### FOR USA AND CANADA : Precaution Necessary for Steering Wheel Rotation after Battery Disconnect

INFOID:000000004755093

#### **NOTE:**

- Before removing and installing any control units, first turn the push-button ignition switch to the LOCK position, then disconnect both battery cables.
- After finishing work, confirm that all control unit connectors are connected properly, then re-connect both battery cables.
- Always use CONSULT-III to perform self-diagnosis as a part of each function inspection after finishing work. If a DTC is detected, perform trouble diagnosis according to self-diagnosis results.

This vehicle is equipped with a push-button ignition switch and a steering lock unit.

If the battery is disconnected or discharged, the steering wheel will lock and cannot be turned.

If turning the steering wheel is required with the battery disconnected or discharged, follow the procedure below before starting the repair operation.

#### OPERATION PROCEDURE

1. Connect both battery cables.

#### **NOTE:**

Supply power using jumper cables if battery is discharged.

2. Turn the push-button ignition switch to ACC position.  
(At this time, the steering lock will be released.)
3. Disconnect both battery cables. The steering lock will remain released with both battery cables disconnected and the steering wheel can be turned.
4. Perform the necessary repair operation.

# PRECAUTIONS


## < PRECAUTION >

5. When the repair work is completed, re-connect both battery cables. With the brake pedal released, turn the push-button ignition switch from ACC position to ON position, then to LOCK position. (The steering wheel will lock when the push-button ignition switch is turned to LOCK position.)
6. Perform self-diagnosis check of all control units using CONSULT-III.

## FOR USA AND CANADA : Precaution for Procedure without Cowl Top Cover

INFOID:000000004755095

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc.

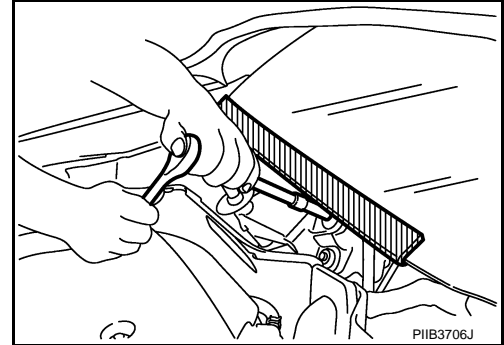

## FOR USA AND CANADA : Precautions for Suspension

INFOID:000000003451888

- When installing rubber bushings, the final tightening must be carried out under unladen conditions with tires on ground. Spilled oil might shorten the life of rubber bushings. Be sure to wipe off any spilled oil.
- Unladen conditions mean that fuel, engine coolant and lubricant are full. Spare tire, jack, hand tools and mats are in designated positions.
- After servicing suspension parts, be sure to check wheel alignment.
- Self-lock nuts are not reusable. Always use new ones when installing. Since new self-lock nuts are pre-oiled, tighten as they are.

## FOR MEXICO

## FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000004755092

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIRBAG" and "SEAT BELT" of this Service Manual.

### **WARNING:**

- **To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.**
- **Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIRBAG".**
- **Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.**

## PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors while ignition switch is ON or engine is running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration may activate the sensor(s), deploy the airbag(s), possibly cause serious injury.

When using air or electric power tools or hammers, always turn OFF ignition switch, disconnect the battery, and wait 3 minutes or more before performing any service.

## FOR MEXICO : Precaution Necessary for Steering Wheel Rotation after Battery Dis-

# PRECAUTIONS

## < PRECAUTION >

### connect

INFOID:000000004755094

#### NOTE:

- Before removing and installing any control units, first turn the push-button ignition switch to the LOCK position, then disconnect both battery cables.
- After finishing work, confirm that all control unit connectors are connected properly, then re-connect both battery cables.
- Always use CONSULT-III to perform self-diagnosis as a part of each function inspection after finishing work. If a DTC is detected, perform trouble diagnosis according to self-diagnosis results.

This vehicle is equipped with a push-button ignition switch and a steering lock unit.

If the battery is disconnected or discharged, the steering wheel will lock and cannot be turned.

If turning the steering wheel is required with the battery disconnected or discharged, follow the procedure below before starting the repair operation.

### OPERATION PROCEDURE

1. Connect both battery cables.

#### NOTE:


Supply power using jumper cables if battery is discharged.

2. Turn the push-button ignition switch to ACC position.  
(At this time, the steering lock will be released.)
3. Disconnect both battery cables. The steering lock will remain released with both battery cables disconnected and the steering wheel can be turned.
4. Perform the necessary repair operation.
5. When the repair work is completed, re-connect both battery cables. With the brake pedal released, turn the push-button ignition switch from ACC position to ON position, then to LOCK position. (The steering wheel will lock when the push-button ignition switch is turned to LOCK position.)
6. Perform self-diagnosis check of all control units using CONSULT-III.

### FOR MEXICO : Precaution for Procedure without Cowl Top Cover

INFOID:000000004755096

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc.

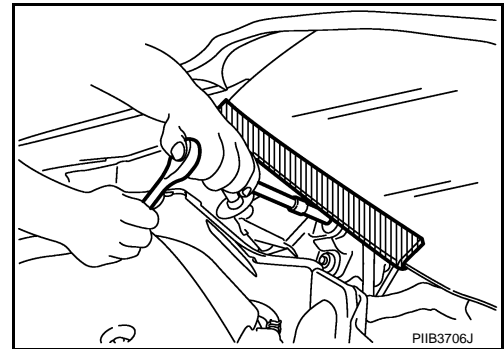

### FOR MEXICO : Precautions for Suspension

INFOID:000000004755090

- When installing rubber bushings, the final tightening must be carried out under unladen conditions with tires on ground. Spilled oil might shorten the life of rubber bushings. Be sure to wipe off any spilled oil.
- Unladen conditions mean that fuel, engine coolant and lubricant are full. Spare tire, jack, hand tools and mats are in designated positions.
- After servicing suspension parts, be sure to check wheel alignment.
- Self-lock nuts are not reusable. Always use new ones when installing. Since new self-lock nuts are pre-oiled, tighten as they are.

# PREPARATION

< PREPARATION >

## PREPARATION


### PREPARATION

#### Special Service Tool

INFOID:000000003451893

The actual shapes of Kent-More tools may differ from those of special service tools illustrated here.

Tool number (Kent-More No.) Tool name	Description
ST35652000 ( — ) Strut attachment	Disassembling and assembling strut

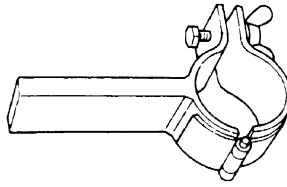


ZZA0807D


#### Commercial Service Tool

INFOID:000000003451894

Tool name	Description
Spring compressor	Removing and installing coil spring
Power tool	Loosening bolts and nuts

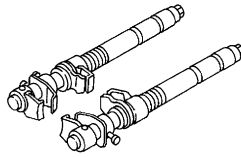

S-NT717

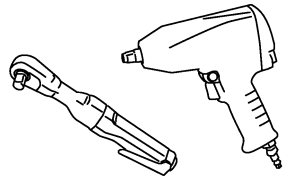

PBIC0190E

A  
B  
C  
D  
FSU  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# FRONT SUSPENSION ASSEMBLY

< ON-VEHICLE MAINTENANCE >

## ON-VEHICLE MAINTENANCE

### FRONT SUSPENSION ASSEMBLY

#### Inspection

INFOID:000000003451895

#### MOUNTING INSPECTION

Make sure the mounting conditions (looseness, backlash) of each component and component conditions (wear, damage) are normal.

#### BALL JOINT AXIAL END PLAY

1. Set front wheels in a straight-ahead position.
2. Measure axial end play by prying it up/down with iron bar or equivalent between transverse link and steering knuckle.

**NOTE:**

About TYPE A and TYPE B, refer to [FSU-19, "APPLICATION NOTICE : How to Check Vehicle Type"](#).

**Standard**

**Axial end play** : Refer to [FSU-19, "TYPE A : Ball Joint"](#), [FSU-21, "TYPE B : Ball Joint"](#).

**CAUTION:**

- Never depress brake pedal when measuring.
- Never perform with tires on level ground.
- Be careful not to damage ball joint boot. Never damage the installation position by applying excessive force.

#### STRUT ASSEMBLY

Check for oil leakage, damage, and replace if necessary.



# WHEEL ALIGNMENT

< ON-VEHICLE MAINTENANCE >

## WHEEL ALIGNMENT

### Inspection

INFOID:000000003451896

### DESCRIPTION

#### CAUTION:

- **Camber, caster, kingpin inclination angles cannot be adjusted.**
- **If camber, caster, or kingpin inclination angle is outside the standard, check front suspension parts for wear and damage. Replace suspect parts if a malfunction is detected.**
- **Kingpin inclination angle is reference value, no inspection is required.**
- **Measure wheel alignment under unladen conditions.**

#### NOTE:

“Unladen conditions” means that fuel, engine coolant, and lubricant are full. Spare tire, jack, hand tools and mats are in designated positions.

### PRELIMINARY CHECK

Check the following:

- Tires for improper air pressure and wear.
- Road wheels for runout. Refer to [WT-104, "Inspection"](#).
- Wheel bearing axial end play. Refer to [FAX-8, "Inspection"](#) (2WD), [FAX-35, "Inspection"](#) (AWD).
- Transverse link ball joint axial end play. Refer to [FSU-13, "Inspection"](#).
- Strut operation.
- Each mounting part of axle and suspension for looseness and deformation.
- Each of suspension member, shock absorber, upper link and transverse link for cracks, deformation and other damage.
- Vehicle height (posture).

### GENERAL INFORMATION AND RECOMMENDATIONS

- A four-wheel thrust alignment should be performed.
- This type of alignment is recommended for any NISSAN/INFINITI vehicle.
- The four-wheel “thrust” process helps ensure that the vehicle is properly aligned and the steering wheel is centered.
- The alignment rack itself should be capable of accepting any NISSAN/INFINITI vehicle.
- The rack should be checked to ensure that it is level.
- Make sure the machine is properly calibrated.
- Your alignment equipment should be regularly calibrated in order to give correct information.
- Check with the manufacturer of your specific equipment for their recommended Service/Calibration Schedule.

### ALIGNMENT PROCESS

#### IMPORTANT:

Use only the alignment specifications listed in this Service Manual.

- When displaying the alignment settings, many alignment machines use “indicators”: (Green/red, plus or minus, Go/No Go). **Never use these indicators.**
- The alignment specifications programmed into your machine that operate these indicators may not be correct.
- This may result in an ERROR.
- Some newer alignment machines are equipped with an “optional Rolling Compensation” method to “compensate” the sensors (alignment targets or head units). **Never use this “Rolling Compensation” method.**
- Use the “Jacking Compensation Method”. After installing the alignment targets or head units, raise the vehicle and rotate the wheels 1/2 turn both ways.
- See Instructions in the alignment machine you're using for more information on this.

# FRONT COIL SPRING AND STRUT


< ON-VEHICLE REPAIR >

## ON-VEHICLE REPAIR

### FRONT COIL SPRING AND STRUT

Exploded View

INFOID:000000003451897

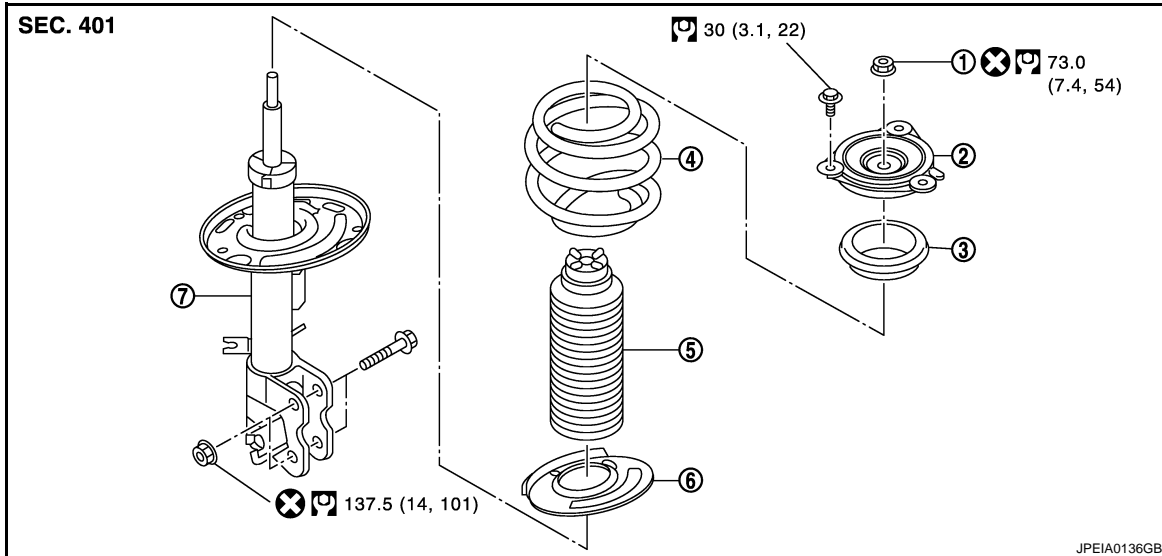

- |                        |                             |                           |
|------------------------|-----------------------------|---------------------------|
| 1. Piston rod lock nut | 2. Strut mounting insulator | 3. Strut mounting bearing |
| 4. Coil spring         | 5. Bound bumper             | 6. Lower rubber seat      |
| 7. Strut               |                             |                           |

Refer to [GI-4, "Components"](#) for symbols in the figure.

## Removal and Installation

INFOID:000000003451898

### REMOVAL

1. Remove tires with power tool.
2. Remove lock plate. Refer to [BR-22, "FRONT : Exploded View"](#).
3. Remove wheel sensor. Refer to [BRC-114, "FRONT WHEEL SENSOR : Exploded View"](#).
4. Remove stabilizer connecting rod from strut assembly. Refer to [FSU-15, "Exploded View"](#).
5. Remove strut assembly from steering knuckle.
6. Remove cowl top cover. Refer to [EXT-20, "Exploded View"](#).
7. Remove mounting bolts of strut mounting insulator with power tool, and then remove strut assembly.


### INSTALLATION

Note the following, and install in the reverse order of removal.

- Become it in projection (A) an illustration to the body outside.

← : Vehicle front

- Perform final tightening of bolts and nuts, under unladen conditions with tires on level ground.

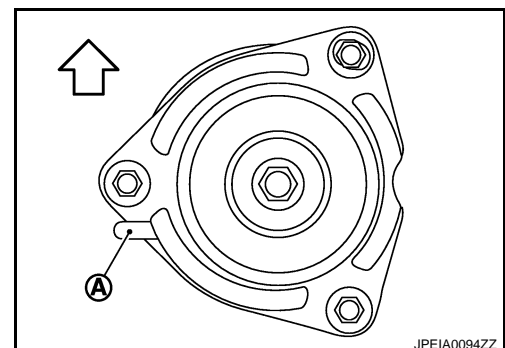

# FRONT COIL SPRING AND STRUT

< ON-VEHICLE REPAIR >

## Disassembly and Assembly

INFOID:000000003451899

### DISASSEMBLY


#### CAUTION:

Never damage strut assembly piston rod when removing components from strut assembly.

1. Install strut attachment (A) [SST: ST35652000 ( — )] to strut assembly and secure it in a vise.

#### CAUTION:

When installing the strut attachment to strut assembly, wrap a shop cloth around strut to protect from damage.

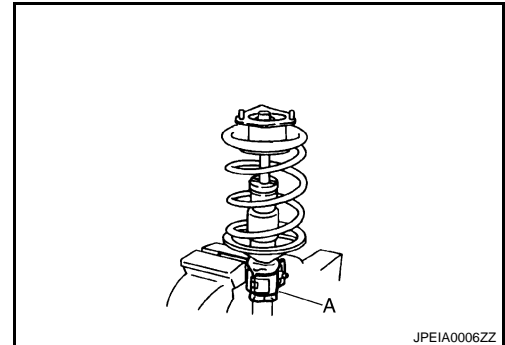


2. Using a spring compressor (A) (commercial service tool), compress coil spring between strut mounting bearing and lower rubber seat (on strut assembly) until coil spring with a spring compressor is free.

#### CAUTION:

Be sure a spring compressor is securely attached to coil spring. Compress coil spring.

3. Make sure coil spring with a spring compressor between strut mounting bearing and lower rubber seat (strut assembly) is free. And then remove piston rod lock nut while securing the piston rod tip so that piston rod does not turn.

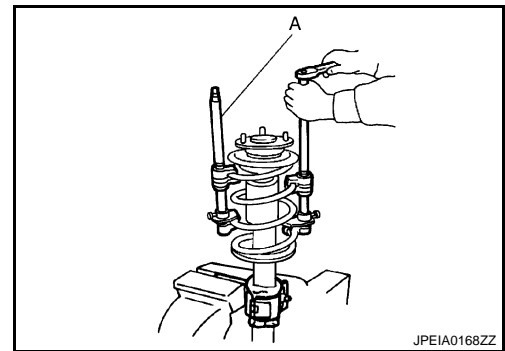

4. Remove strut mounting insulator and strut mounting bearing, and bound bumper from strut.
5. After removing coil spring with a spring compressor, then gradually release a spring compressor.

#### CAUTION:

Loosen while making sure coil spring attachment position does not move.

6. Remove lower rubber seat from strut.
7. Remove the strut attachment [SST: ST35652000 ( — )] from strut.

### ASSEMBLY

1. Install strut attachment [SST: ST35652000 ( — )] to strut and secure it in a vise.


#### CAUTION:

When installing the strut attachment to strut assembly, wrap a shop cloth around strut to protect from damage.

2. Install lower rubber seat.
3. Install bound bumper onto strut mounting insulator.
4. Compress coil spring using a spring compressor (commercial service tool), and install it onto strut assembly.

#### CAUTION:

- Face tube side of coil spring (1) downward. Align the lower end (A) to lower rubber seat (2).
- Be sure a compressor is securely attached to coil spring. Compress coil spring.
- Set coil spring so that its paint marks are aligned with the positions of 1.25 turns and 2.25 turns from the bottom end of the coil spring.

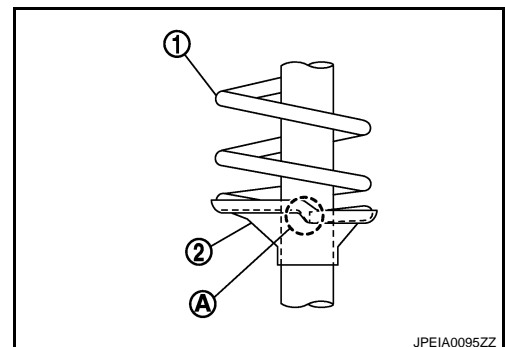

# FRONT COIL SPRING AND STRUT

## < ON-VEHICLE REPAIR >

- Install strut mounting bearing and strut mounting insulator with bound bumper to strut.
  - Installation position of strut mounting insulator is shown in the figure.

A : Projection  
 ⇐ : Vehicle front


- Secure piston rod tip so that piston rod does not turn, then tighten piston rod lock nut with specified torque.

**CAUTION:**  
**Never reuse piston rod lock nut.**

- Gradually release a spring compressor, and remove coil spring.

**CAUTION:**  
**Loosen while making sure coil spring attachment position does not move.**

- Remove the strut attachment from strut assembly.

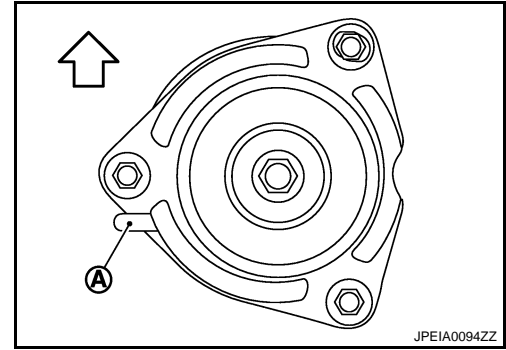

## Inspection

INFOID:000000003451900

### INSPECTION AFTER DISASSEMBLY

#### Strut

Check the following items, and replace the parts if necessary.

- Strut for deformation, cracks or damage
- Piston rod for damage, uneven wear or distortion
- Oil leakage

#### Strut Mounting Insulator and Rubber Parts Inspection

Check strut mounting insulator for cracks and rubber parts for wear. Replace it if necessary.

#### Coil Spring

Check coil spring for cracks, wear or damage. Replace it if necessary.

### INSPECTION AFTER INSTALLATION

- Check wheel sensor harness for proper connector. Refer to [BRC-114. "FRONT WHEEL SENSOR : Exploded View"](#).
- Check wheel alignment. Refer to [FSU-9. "Inspection"](#).
- Adjust neutral position of steering angle sensor. Refer to [BRC-9. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

## Disposal

INFOID:000000004685226

- Set strut assembly horizontally to the ground with the piston rod fully extracted.
- Drill 2 – 3 mm (0.08 – 0.12 in) hole at the position (●) from top as shown in the figure to release gas gradually.

#### NOTE:

- Drill vertically in this direction (⇓).
- Directly to the outer tube avoiding brackets.

**A: 20 – 30 mm (0.79 – 1.18 in)**


- Position the drilled hole downward and drain oil by moving the piston rod several times.

#### CAUTION:

- Wear eye protection (safety glasse).
- Wear gloves.
- Be careful with metal chips or oil blown out by the compressed gas.
- Handle drained oil apporopriately to the law and other local regulations.

#### NOTE:

The gas is clear, colorless, odorless, and harmless.

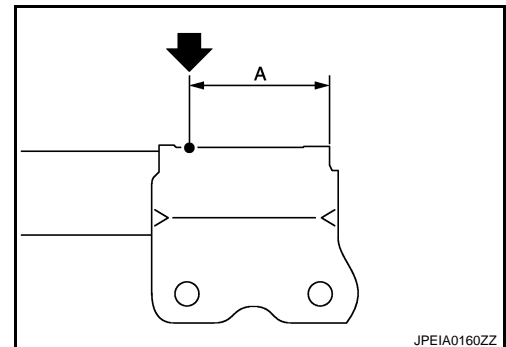


# TRANSVERSE LINK

< ON-VEHICLE REPAIR >

## TRANSVERSE LINK

### Exploded View

INFOID:000000003539892

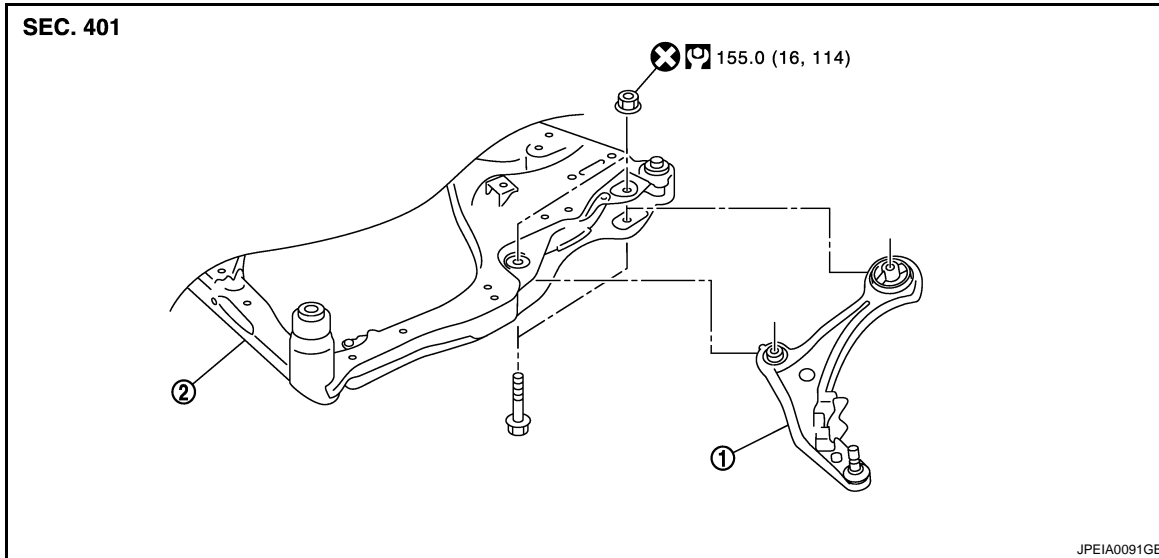

1. Transverse link
2. Front suspension member

Refer to [GI-4, "Components"](#) for symbols in the figure.

### Removal and Installation

INFOID:000000003451902

#### REMOVAL

1. Remove tires with power tool.
2. Remove drive shaft of wheel side from wheel hub and bearing assembly. Refer to [FAX-17, "Exploded View"](#) (2WD), [FAX-44, "Exploded View"](#) (AWD).
3. Remove transverse link from steering knuckle.
4. Remove transverse link from suspension member.

#### INSTALLATION

Note the following, and install in the reverse order of removal.

- Perform final tightening of bolts and nuts at the front suspension member, under unladen conditions with tires on level ground.

#### Inspection

INFOID:000000003451903

#### INSPECTION AFTER REMOVAL

##### Appearance

Check the following items, and replace the part it necessary.

- Transverse link and bushing for deformation, cracks or damage.
- Ball joint boot for cracks or other damage, and also for grease leakage.

##### Ball Joint Inspection

Manually move ball stud to confirm it moves smoothly with no binding.

##### Swing Torque Inspection

1. Move ball stud at least ten times by hand to check for smooth movement.

## TRANSVERSE LINK

### < ON-VEHICLE REPAIR >

- Hook a spring balance (A) at cotter pin mounting hole. Confirm spring balance measurement value is within specifications when ball stud begins moving.


**NOTE:**

About TYPE A and TYPE B, refer to [FSU-19, "APPLICATION NOTICE : How to Check Vehicle Type"](#).

**Standard**

**Swing torque** :Refer to [FSU-19, "TYPE A : Ball Joint"](#), [FSU-21, "TYPE B : Ball Joint"](#).

**Spring balance measurement** :Refer to [FSU-19, "TYPE A : Ball Joint"](#), [FSU-21, "TYPE B : Ball Joint"](#).

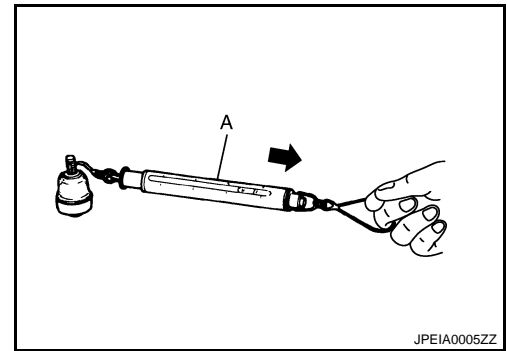

- If swing torque exceeds standard range, replace transverse link assembly.

#### Axial End Play Inspection

- Move ball stud at least ten times by hand to check for smooth movement.
- Move tip of ball stud in axial direction to check for looseness.

**NOTE:**

About TYPE A and TYPE B, refer to [FSU-19, "APPLICATION NOTICE : How to Check Vehicle Type"](#).

**Standard**

**Axial end play** :Refer to [FSU-19, "TYPE A : Ball Joint"](#), [FSU-21, "TYPE B : Ball Joint"](#).

- If axial end play exceeds the standard value, replace transverse link assembly.

#### INSPECTION AFTER INSTALLATION

- Check wheel alignment. Refer to [FSU-9, "Inspection"](#).
- Adjust neutral position of steering angle sensor. Refer to [BRC-9, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).


# FRONT STABILIZER

< ON-VEHICLE REPAIR >

## FRONT STABILIZER

### Exploded View

INFOID:000000003539893

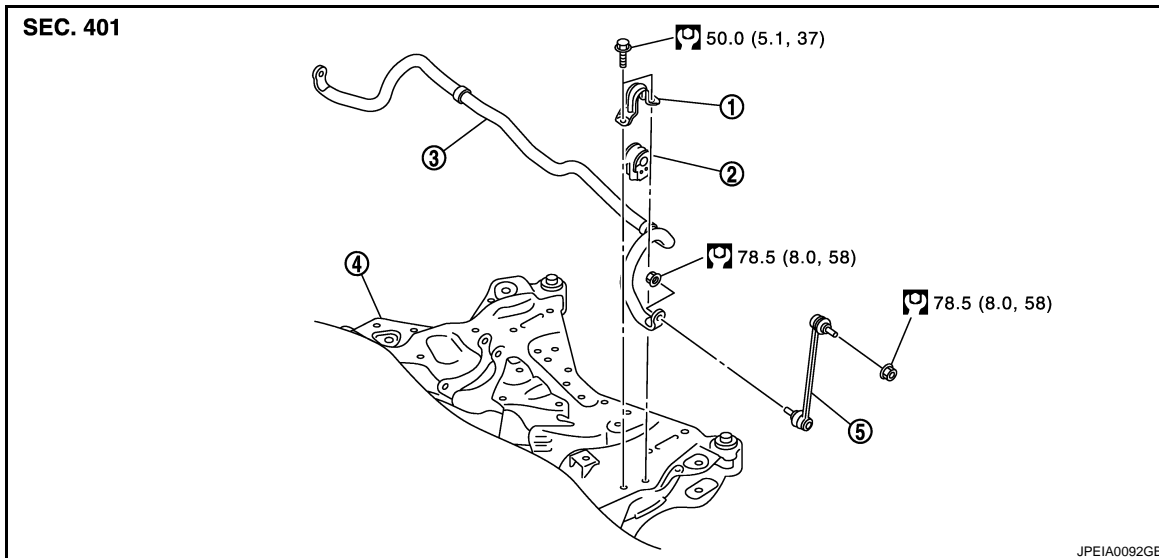

1. Stabilizer clamp
2. Stabilizer bushing
3. Stabilizer bar
4. Front suspension member
5. Stabilizer connecting rod


Refer to [GI-4, "Components"](#) for symbols in the figure.

### Removal and Installation

INFOID:000000003451905

#### REMOVAL

1. Remove tires power tool.
2. Remove front exhaust tube. Refer to [EX-5, "Exploded View"](#).
3. Remove rear propeller shaft from transfer. (AWD models) Refer to [DLN-80, "Exploded View"](#).
4. Remove lock plate. Refer to [BR-22, "FRONT : Exploded View"](#).
5. Remove wheel sensor harness from strut assembly. Refer to [BRC-114, "FRONT WHEEL SENSOR : Exploded View"](#).
6. Disconnect power steering solenoid valve harness connector. Refer to [ST-26, "Removal and Installation"](#).
7. Remove steering outer socket from steering knuckle. Refer to [ST-24, "Exploded View"](#).
8. Remove stabilizer connecting rod.
9. Remove mounting bolts (←) of stabilizer clamp, and then remove stabilizer clamp and stabilizer bushing from front suspension member.
10. Remove stabilizer bar.

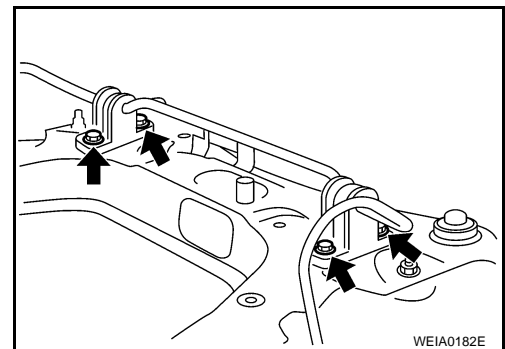


#### INSTALLATION

Note the following, and install in the reverse order of removal.

## FRONT STABILIZER

### < ON-VEHICLE REPAIR >

- Install stabilizer clamp that notch (A) becomes vehicle front side (←).
- Install stabilizer bushing that slit (B) becomes vehicle front side (←).

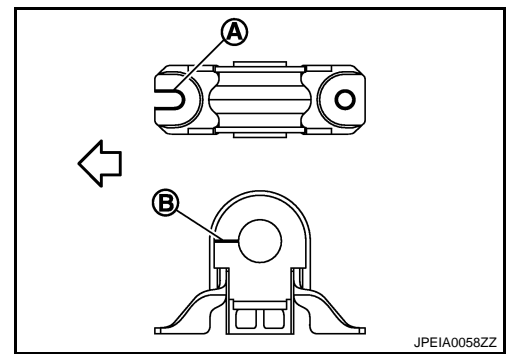

### Inspection

INFOID:000000003451906

### INSPECTION AFTER REMOVAL

Check stabilizer bar, stabilizer connecting rod, stabilizer bushing and stabilizer clamp for deformation, cracks or damage. Replace it if necessary.



# FRONT SUSPENSION MEMBER


< REMOVAL AND INSTALLATION >

## REMOVAL AND INSTALLATION

### FRONT SUSPENSION MEMBER

Exploded View

INFOID:000000003539894

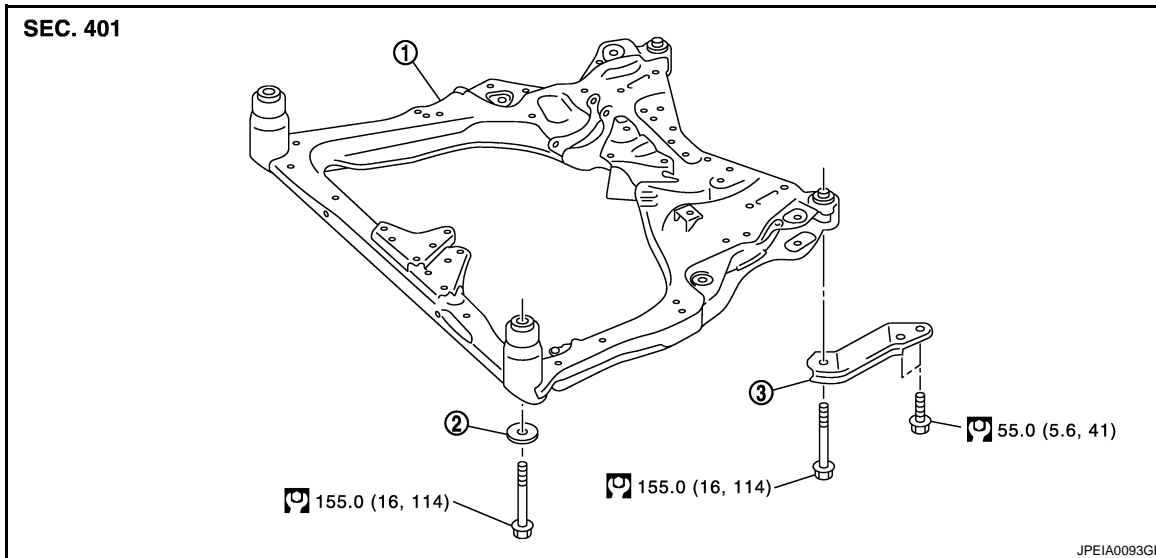

1. Front suspension member
2. Rebound stopper
3. Front suspension member stay


Refer to [GI-4, "Components"](#) for symbols in the figure.

### Removal and Installation

INFOID:000000003451908

#### REMOVAL

1. Remove tires with power tool.
2. Remove air guide mounting nuts (←) and air guide (1).
3. At first, remove the engine and the transaxle assembly with front suspension member downward. Then separate the engine, transaxle and drive shaft. Refer to [EM-68, "2WD : Exploded View"](#) (2WD), [EM-77, "AWD : Exploded View"](#) (AWD).
4. Remove the following parts.
  - Steering knuckle and wheel hub and bearing assembly: refer to [FAX-10, "Exploded View"](#) (2WD), [FAX-37, "Exploded View"](#).
  - Steering gear assembly and hydraulic line: refer to [ST-24, "Exploded View"](#) and [ST-42, "Exploded View"](#).
  - Stabilizer bar: refer to [FSU-15, "Exploded View"](#).
  - Transverse link: refer to [FSU-13, "Exploded View"](#).

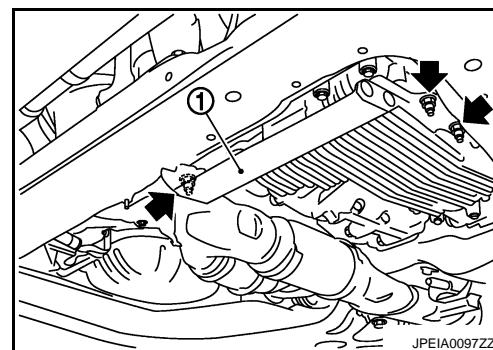

#### INSTALLATION

Note the following, and install in the reverse order of removal.

- Perform final tightening of installation position between front suspension member and transverse links (rubber bushing) under unladen condition with tires on level ground.

#### Inspection

INFOID:000000003451909

#### INSPECTION AFTER REMOVAL

Check the front suspension member for significant deformation, cracks, or damages. Replace it if necessary.

#### INSPECTION AFTER INSTALLATION

1. Check wheel sensor harness for proper connection. Refer to [BRC-114, "FRONT WHEEL SENSOR : Exploded View"](#).

## FRONT SUSPENSION MEMBER

### < REMOVAL AND INSTALLATION >

---

2. Check wheel alignment. Refer to [FSU-9, "Inspection"](#).
3. Adjust the neutral position of the steering angle sensor. Refer to [BRC-9, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

# SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

## SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

APPLICATION NOTICE

APPLICATION NOTICE : How to Check Vehicle Type

INFOID:000000004679439

Check the vehicle type to confirm the service information in FSU section.

Service information	Vehicle identification number
TYPE A	JN8AZ18U*9W 000001 – 100000 & 700001 – 710000
	JN8AZ18W*9W 100001 – 200000 & 800001 – 810000
TYPE B	JN8AZ18U*9W 100001 – 200000 & 710001 – 800000
	JN8AZ18W*9W 200001 – 300000 & 810001 – 900000

\*: Check digit (0 to 9 or X); The code for the check digit is determined by mathematical computation.

### TYPE A

#### TYPE A : Wheel Alignment

INFOID:000000003451913

Item		Standard		
		Left side	Right side	
Measurement wheel				
Camber Degree minute (Decimal degree)	Minimum	-1° 00' (-1.00°)	-1° 15' (-1.25°)	
	Nominal	-0° 15' (-0.25°)	-0° 30' (-0.50°)	
	Maximum	0° 30' (0.50°)	0° 15' (0.25°)	
	Left and right difference*1	-0° 48' (-0.80°) - 0° 18' (0.30°)		
Caster Degree minute (Decimal degree)	Minimum	3° 55' (3.92°)	4° 15' (4.25°)	
	Nominal	4° 40' (4.67°)	5° 00' (5.00°)	
	Maximum	5° 25' (5.41°)	5° 45' (5.75°)	
	Left and right difference*1	-0° 18' (-0.30°) - 0° 48' (0.80°)		
Kingpin inclination Degree minute (Decimal degree)	Minimum	11° 55' (11.92°)		
	Nominal	12° 40' (12.67°)		
	Maximum	13° 25' (13.41°)		
Total toe-in	Distance	Minimum	In 0.5 mm (0.020 in)	
		Nominal	In 1.5 mm (0.059 in)	
		Maximum	In 2.5 mm (0.098 in)	
	Angle (left wheel or right wheel) Degree minute (Decimal degree)	Minimum	In 0° 02' (0.04°)	
		Nominal	In 0° 04' (0.07°)	
		Maximum	In 0° 06' (0.10°)	

Measure value under unladen\*2 conditions.

\*1: A difference when I assumed the right side a standard (right side – left side = difference).

\*2: Fuel, engine coolant and lubricant are full. Spare tire, jack, hand tools and mats are in designated positions.

#### TYPE A : Ball Joint

INFOID:000000003451914

Item		Standard
Swing torque	Transverse link	0.5 – 4.9 N·m (0.06 – 0.49 kg·m, 5 – 43 in·lb)
Measurement on spring balance	Transverse link	11.1 – 108.9 N (1.2 – 11.1 kg, 3 – 24 lb)
Axial end play		0 mm (0 in)

# SERVICE DATA AND SPECIFICATIONS (SDS)


## < SERVICE DATA AND SPECIFICATIONS (SDS)

### TYPE A : Wheelarch Height

INFOID:000000003451915

#### FOR USA, MEXICO MODELS

Item	Standard				
	2WD		AWD		
Axle					
Tire size	235/65R18			235/55R20	
Grade	S	SL	S	SL	LE
Front (Hr)	845 mm (33.27 in)			844 mm (33.23 in)	
Rear (Hr)	859 mm (33.82 in)	858 mm (33.78 in)		857 mm (33.74 in)	856 mm (33.70 in)

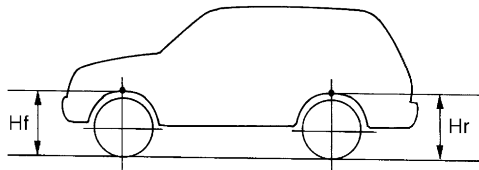


SFA746B

Measure value under unladen\* conditions.

\*: Fuel, engine coolant and lubricant are full. Spare tire, jack, hand tools and mats are in designated positions.

#### FOR CANADA MODELS

Item	Standard		
	Tire size	235/65R18	
Grade	S	SL	LE
Front (Hr)	845 mm (33.27 in)		844 mm (33.23 in)
Rear (Hr)	859 mm (33.82 in)	858 mm (33.78 in)	857 mm (33.74 in)

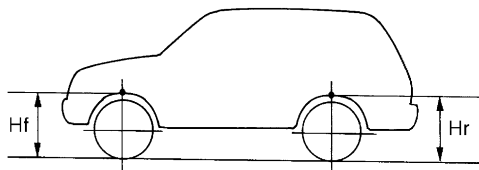

SFA746B

Measure value under unladen\* conditions.

\*: Fuel, engine coolant and lubricant are full. Spare tire, jack, hand tools and mats are in designated positions.

### TYPE B

#### TYPE B : Wheel Alignment

INFOID:000000004639330

Item	Standard	
	Measurement wheel	Left side

# SERVICE DATA AND SPECIFICATIONS (SDS)

## < SERVICE DATA AND SPECIFICATIONS (SDS)

Item		Standard		
Camber Degree minute (Decimal degree)	Minimum	-1° 00' (-1.00°)	-1° 15' (-1.25°)	
	Nominal	-0° 15' (-0.25°)	-0° 30' (-0.50°)	
	Maximum	0° 30' (0.50°)	0° 15' (0.25°)	
	Left and right difference*1	-0° 48' (-0.80°) - 0° 18' (0.30°)		
Caster Degree minute (Decimal degree)	Minimum	3° 55' (3.92°)	4° 15' (4.25°)	
	Nominal	4° 40' (4.67°)	5° 00' (5.00°)	
	Maximum	5° 25' (5.41°)	5° 45' (5.75°)	
	Left and right difference*1	-0° 18' (-0.30°) - 0° 48' (0.80°)		
Kingpin inclination Degree minute (Decimal degree)	Minimum	11° 55' (11.92°)		
	Nominal	12° 40' (12.67°)		
	Maximum	13° 25' (13.41°)		
Total toe-in	Distance	Minimum	In 0.5 mm (0.020 in)	
		Nominal	In 1.5 mm (0.059 in)	
		Maximum	In 2.5 mm (0.098 in)	
	Angle (left wheel or right wheel) Degree minute (Decimal degree)	Minimum	In 0° 02' (0.04°)	
		Nominal	In 0° 04' (0.07°)	
		Maximum	In 0° 06' (0.10°)	

Measure value under unladen\*2 conditions.

\*1: A difference when I assumed the right side a standard (right side – left side = difference).

\*2: Fuel, engine coolant and lubricant are full. Spare tire, jack, hand tools and mats are in designated positions.

### TYPE B : Ball Joint

INFOID:000000004639331

Item		Standard
Swing torque	Transverse link	0.5 – 4.9 N·m (0.06 – 0.49 kg·m, 5 – 43 in·lb)
Measurement on spring balance	Transverse link	11.1 – 108.9 N (1.2 – 11.1 kg, 3 – 24 lb)
Axial end play		0 mm (0 in)

### TYPE B : Wheelarch Height

INFOID:000000004639332


#### FOR USA MODELS

Item	Standard				
	2WD		AWD		
Axle					
Tire size	235/65R18		235/65R18		235/55R20
Grade	S	SL	S	SL	LE
Front (Hr)	845 mm (33.27 in)		845 mm (33.27 in)	844 mm (33.23 in)	

# SERVICE DATA AND SPECIFICATIONS (SDS)

## < SERVICE DATA AND SPECIFICATIONS (SDS)

Item	Standard				
Axle	2WD		AWD		
Tire size	235/65R18		235/65R18		235/55R20
Grade	S	SL	S	SL	LE
Rear (Hr)	859 mm (33.82 in)	858 mm (33.78 in)	858 mm (33.78 in)	857 mm (33.74 in)	856 mm (33.70 in)

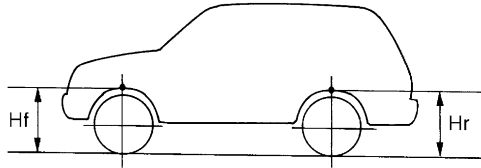


SFA746B

Measure value under unladen\* conditions.

\*: Fuel, engine coolant and lubricant are full. Spare tire, jack, hand tools and mats are in designated positions.

### FOR CANADA MODELS

Item	Standard		
Tire size	235/65R18		235/55R20
Grade	S	SL	LE
Front (Hr)	845 mm (33.27 in)		844 mm (33.23 in)
Rear (Hr)	859 mm (33.82 in)	858 mm (33.78 in)	857 mm (33.74 in)

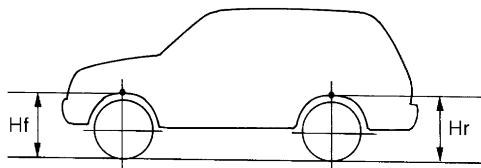

SFA746B

Measure value under unladen\* conditions.

\*: Fuel, engine coolant and lubricant are full. Spare tire, jack, hand tools and mats are in designated positions.


### FOR MEXICO MODELS

Item	Standard		
Axle	2WD		4WD
Tire size	235/65R18		
Grade	S	SL	LE
Front (Hr)	846 mm (33.31 in)		845 mm (33.27 in)

# SERVICE DATA AND SPECIFICATIONS (SDS)

## < SERVICE DATA AND SPECIFICATIONS (SDS)

Item	Standard		
Axle	2WD		4WD
Tire size	235/65R18		
Grade	S	SL	LE
Rear (Hr)	858 mm (33.78 in)		857 mm (33.74 in)

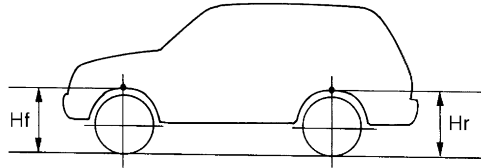

SFA746B

Measure value under unladen\* conditions.

\*: Fuel, engine coolant and lubricant are full. Spare tire, jack, hand tools and mats are in designated positions.

A  
B  
C  
D  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

**FSU**