

A  
B  
C

# WW

## SECTION

## WIPER & WASHER

### CONTENTS

<p><b>PRECAUTION</b> ..... 3</p> <p><b>PRECAUTIONS</b> ..... 3</p> <p style="padding-left: 20px;">Precaution for Technicians Using Medical Electric.....3</p> <p style="padding-left: 20px;">Point to Be Checked Before Starting Maintenance Work .....3</p> <p style="padding-left: 20px;">Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....3</p> <p><b>SYSTEM DESCRIPTION</b> ..... 5</p> <p><b>COMPONENT PARTS</b> ..... 5</p> <p style="padding-left: 20px;">Component Parts Location .....5</p> <p style="padding-left: 20px;">Washer Switch .....6</p> <p><b>SYSTEM</b> ..... 7</p> <p><b>FRONT WIPER AND WASHER SYSTEM</b> .....7</p> <p style="padding-left: 20px;">FRONT WIPER AND WASHER SYSTEM : System Description .....7</p> <p style="padding-left: 20px;">FRONT WIPER AND WASHER SYSTEM : Schematic ..... 10</p> <p style="padding-left: 20px;">FRONT WIPER AND WASHER SYSTEM : Fail-safe ..... 10</p> <p><b>REAR WIPER AND WASHER SYSTEM</b> ..... 11</p> <p style="padding-left: 20px;">REAR WIPER AND WASHER SYSTEM : System Description ..... 11</p> <p style="padding-left: 20px;">REAR WIPER AND WASHER SYSTEM : Schematic ..... 13</p> <p style="padding-left: 20px;">REAR WIPER AND WASHER SYSTEM : Fail-safe ..... 13</p> <p><b>DIAGNOSIS SYSTEM (BCM)</b> ..... 15</p> <p><b>COMMON ITEM</b> ..... 15</p> <p style="padding-left: 20px;">COMMON ITEM : CONSULT Function (BCM - COMMON ITEM) ..... 15</p> <p><b>WIPER</b> ..... 16</p> <p style="padding-left: 20px;">WIPER : CONSULT Function - WIPER ..... 17</p>	<p style="text-align: right;">D E F G H I J K</p> <p><b>DIAGNOSIS SYSTEM (IPDM E/R)</b> ..... 18</p> <p style="padding-left: 20px;">Diagnosis Description ..... 18</p> <p style="padding-left: 20px;">CONSULT Function (IPDM E/R) ..... 19</p> <p><b>ECU DIAGNOSIS INFORMATION</b> ..... 22</p> <p><b>BCM, IPDM E/R</b> ..... 22</p> <p style="padding-left: 20px;">List of ECU Reference ..... 22</p> <p><b>WIRING DIAGRAM</b> ..... 23</p> <p><b>WIPER AND WASHER SYSTEM</b> ..... 23</p> <p style="padding-left: 20px;">Wiring Diagram ..... 23</p> <p><b>BASIC INSPECTION</b> ..... 28</p> <p><b>DIAGNOSIS AND REPAIR WORKFLOW</b> ..... 28</p> <p style="padding-left: 20px;">Work Flow ..... 28</p> <p><b>DTC/CIRCUIT DIAGNOSIS</b> ..... 30</p> <p><b>WIPER AND WASHER FUSE</b> ..... 30</p> <p style="padding-left: 20px;">Diagnosis Procedure ..... 30</p> <p><b>FRONT WIPER MOTOR LO CIRCUIT</b> ..... 31</p> <p style="padding-left: 20px;">Component Function Check ..... 31</p> <p style="padding-left: 20px;">Diagnosis Procedure ..... 31</p> <p><b>FRONT WIPER MOTOR HI CIRCUIT</b> ..... 32</p> <p style="padding-left: 20px;">Component Function Check ..... 32</p> <p style="padding-left: 20px;">Diagnosis Procedure ..... 32</p> <p><b>FRONT WIPER AUTO STOP SIGNAL CIRCUIT</b> ..... 33</p> <p style="padding-left: 20px;">Component Function Check ..... 33</p> <p style="padding-left: 20px;">Diagnosis Procedure ..... 33</p> <p><b>FRONT WIPER MOTOR GROUND CIRCUIT</b> ... 34</p> <p style="padding-left: 20px;">Diagnosis Procedure ..... 34</p> <p><b>WASHER SWITCH</b> ..... 35</p> <p style="padding-left: 20px;">Component Inspection ..... 35</p>
--	--



A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

<b>REAR WIPER MOTOR CIRCUIT</b> .....	<b>36</b>	Removal and Installation .....	46
Component Function Check .....	36	Inspection and Adjustment .....	47
Diagnosis Procedure .....	36		
<b>REAR WIPER AUTO STOP SIGNAL CIRCUIT</b> .....	<b>38</b>	<b>FRONT WIPER ARM</b> .....	<b>49</b>
Component Function Check .....	38	Exploded View .....	49
Diagnosis Procedure .....	38	Removal and Installation .....	49
<b>SYMPTOM DIAGNOSIS</b> .....	<b>39</b>	Adjustment .....	49
<b>WIPER AND WASHER SYSTEM SYMPTOMS</b> .....	<b>39</b>	<b>FRONT WIPER BLADE</b> .....	<b>51</b>
Symptom Table .....	39	Exploded View .....	51
<b>NORMAL OPERATING CONDITION</b> .....	<b>41</b>	Removal and Installation .....	51
Description .....	41	Replacement .....	51
<b>FRONT WIPER DOES NOT OPERATE</b> .....	<b>42</b>	<b>FRONT WIPER DRIVE ASSEMBLY</b> .....	<b>53</b>
Description .....	42	Exploded View .....	53
Diagnosis Procedure .....	42	Removal and Installation .....	54
<b>REMOVAL AND INSTALLATION</b> .....	<b>44</b>	Disassembly and Assembly .....	54
<b>WASHER TANK</b> .....	<b>44</b>	<b>WIPER AND WASHER SWITCH</b> .....	<b>55</b>
Exploded View .....	44	Exploded View .....	55
Removal and Installation .....	44	<b>REAR WIPER ARM</b> .....	<b>56</b>
<b>WASHER PUMP</b> .....	<b>45</b>	Exploded View .....	56
Exploded View .....	45	Removal and Installation .....	56
Removal and Installation .....	45	Adjustment .....	56
<b>FRONT WASHER NOZZLE AND TUBE</b> .....	<b>46</b>	<b>REAR WIPER MOTOR</b> .....	<b>58</b>
Exploded View .....	46	Exploded View .....	58
Hydraulic Layout .....	46	Removal and Installation .....	58
		<b>REAR WASHER NOZZLE AND TUBE</b> .....	<b>59</b>
		Hydraulic Layout .....	59
		Removal and Installation .....	59
		Inspection and Adjustment .....	60

# PRECAUTIONS

< PRECAUTION >

## PRECAUTION

### PRECAUTIONS

#### Precaution for Technicians Using Medical Electric

INFOID:000000007079162

##### OPERATION PROHIBITION

###### **WARNING:**

- Parts with strong magnet is used in this vehicle.
- Technicians using a medical electric device such as pacemaker must never perform operation on the vehicle, as magnetic field can affect the device function by approaching to such parts.

##### NORMAL CHARGE PRECAUTION

###### **WARNING:**

- If a technician uses a medical electric device such as an implantable cardiac pacemaker or an implantable cardioverter defibrillator, the possible effects on the devices must be checked with the device manufacturer before starting the charge operation.
- As radiated electromagnetic wave generated by on board charger at normal charge operation may effect medical electric devices, a technician using a medical electric device such as implantable cardiac pacemaker or an implantable cardioverter defibrillator must not enter the vehicle compartment (including luggage room) during normal charge operation.

##### Precaution at telematics system operation

###### **WARNING:**

- If a technician uses implantable cardiac pacemaker or implantable cardioverter defibrillator (ICD), avoid the device implanted part from approaching within approximately 220 mm (8.66 in) from interior/exterior antenna.
- The electromagnetic wave of TCU might affect the function of the implantable cardiac pacemaker or the implantable cardioverter defibrillator (ICD), when using the service, etc.
- If a technician uses other medical electric devices than implantable cardiac pacemaker or implantable cardioverter defibrillator(ICD), the electromagnetic wave of TCU might affect the function of the device. The possible effects on the devices must be checked with the device manufacturer before TCU use.

##### Precaution at intelligent key system operation

###### **WARNING:**

- If a technician uses implantable cardiac pacemaker or implantable cardioverter defibrillator (ICD), avoid the device implanted part from approaching within approximately 220 mm (8.66 in) from interior/exterior antenna.
- The electromagnetic wave of intelligent key might affect the function of the implantable cardiac pacemaker or the implantable cardioverter defibrillator (ICD), at door operation, at each request switch operation, or at engine starting.
- If a technician uses other medical electric devices than implantable cardiac pacemaker or implantable cardioverter defibrillator (ICD), the electromagnetic wave of intelligent key might affect the function of the device. The possible effects on the devices must be checked with the device manufacturer before intelligent key use.

#### Point to Be Checked Before Starting Maintenance Work

INFOID:000000007079478

The high voltage system may starts automatically. It is required to check that the timer air conditioner and timer charge (during EVSE connection) are not set before starting maintenance work.

###### **NOTE:**

If the timer air conditioner or timer charge (during EVSE connection) is set, the high voltage system starts automatically even when the power switch is in OFF state.

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000007036787

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

## PRECAUTIONS

### < PRECAUTION >

system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

#### **WARNING:**

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the power switch ON, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the power switch OFF, disconnect the 12V battery, and wait at least 3 minutes before performing any service.

# COMPONENT PARTS


< SYSTEM DESCRIPTION >

## SYSTEM DESCRIPTION

### COMPONENT PARTS

#### Component Parts Location

INFOID:000000006930210

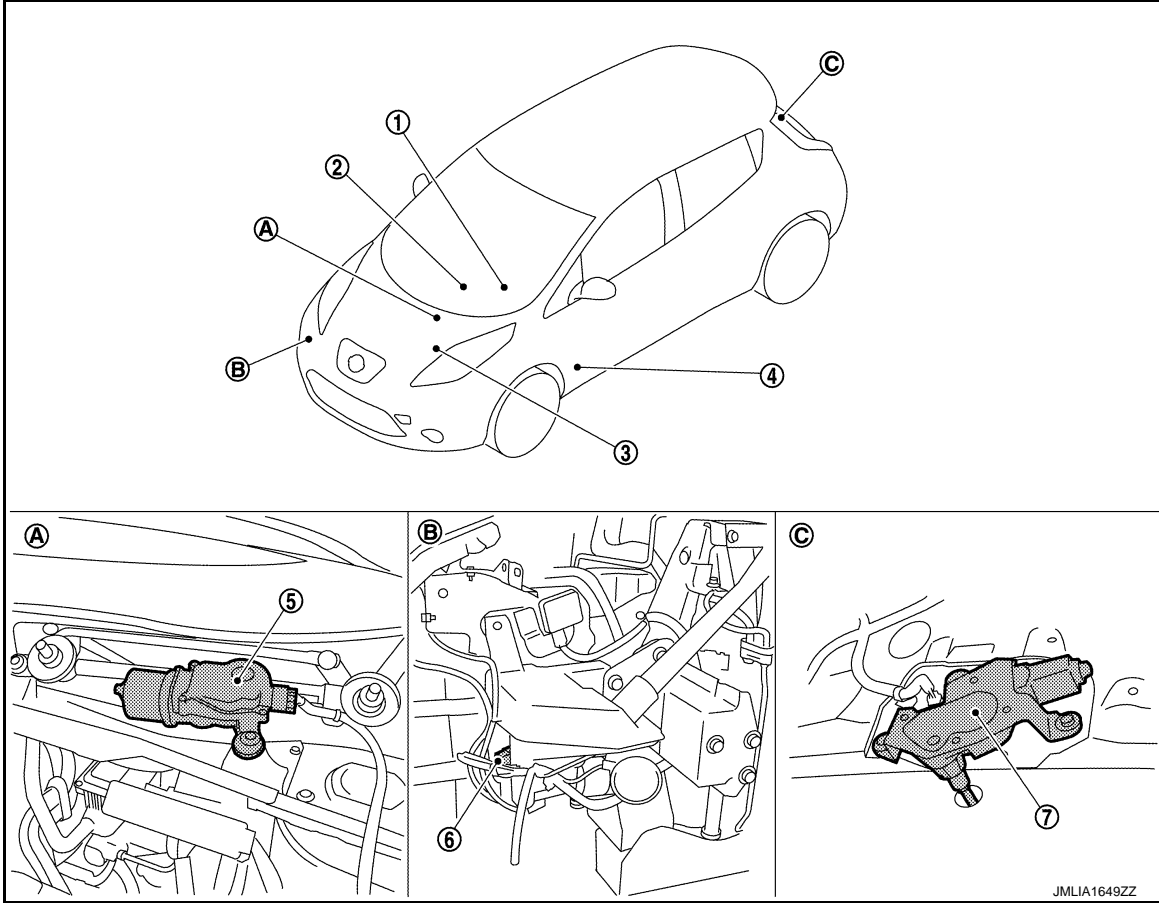

A. Cowl top, left side of motor room    B. Behind front fender protector (RH)    C. Back door lower finisher inside

WW

No.	Component	Function
1.	Combination switch (Wiper & washer switch)	Refer to <a href="#">BCS-7, "COMBINATION SWITCH READING SYSTEM : System Description"</a> . Refer to <a href="#">WW-6, "Washer Switch"</a> .
2.	Combination meter	Transmits the vehicle speed signal to BCM via CAN communication.
3.	IPDM E/R	<ul style="list-style-type: none"> <li>Controls the integrated relay according to the request (via CAN communication) from BCM.</li> <li>Performs the auto stop control of the front wiper.</li> </ul> Refer to <a href="#">PCS-5, "Component Parts Location"</a> .
4.	BCM	<ul style="list-style-type: none"> <li>Judges each switch status by the combination switch reading function.</li> <li>Requests (via CAN communication) the front wiper relay and the front wiper HI/LO relay ON to IPDM E/R.</li> <li>Supplies power to the wiper motor.</li> <li>Performs the auto stop control of the rear wiper.</li> </ul> Refer to <a href="#">BCS-5, "BODY CONTROL SYSTEM : Component Parts Location"</a> .
5.	Front wiper motor	<ul style="list-style-type: none"> <li>IPDM E/R controls front wiper operation.</li> <li>Front wiper auto stop signal is transmitted to IPDM E/R.</li> </ul>

M

N

O

P

# COMPONENT PARTS


## < SYSTEM DESCRIPTION >

No.	Component	Function
6.	Washer pump	<ul style="list-style-type: none"> <li>Washer fluid is sprayed according to washer switch states.</li> <li>Switching between front washer and rear washer is performed according to the voltage polarity change to washer pump.</li> </ul>
7.	Rear wiper motor	<ul style="list-style-type: none"> <li>BCM controls rear wiper operation.</li> <li>Rear wiper auto stop signal is transmitted to BCM.</li> </ul>

## Washer Switch

INFOID:000000006930211

- Washer switch is integrated with combination switch.
- Combination switch switches polarity between front washer operating and rear washer operating to supply power to the washer pump on ground.

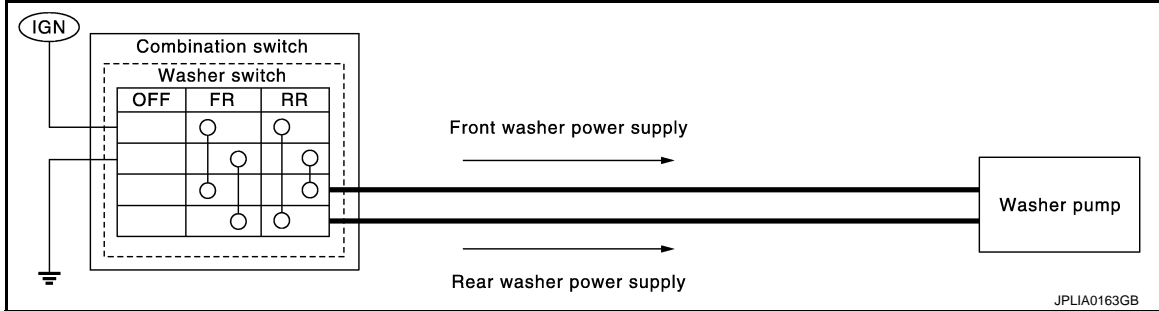

# SYSTEM

< SYSTEM DESCRIPTION >


## SYSTEM

### FRONT WIPER AND WASHER SYSTEM

#### FRONT WIPER AND WASHER SYSTEM : System Description

INFOID:000000006930212

#### SYSTEM DIAGRAM

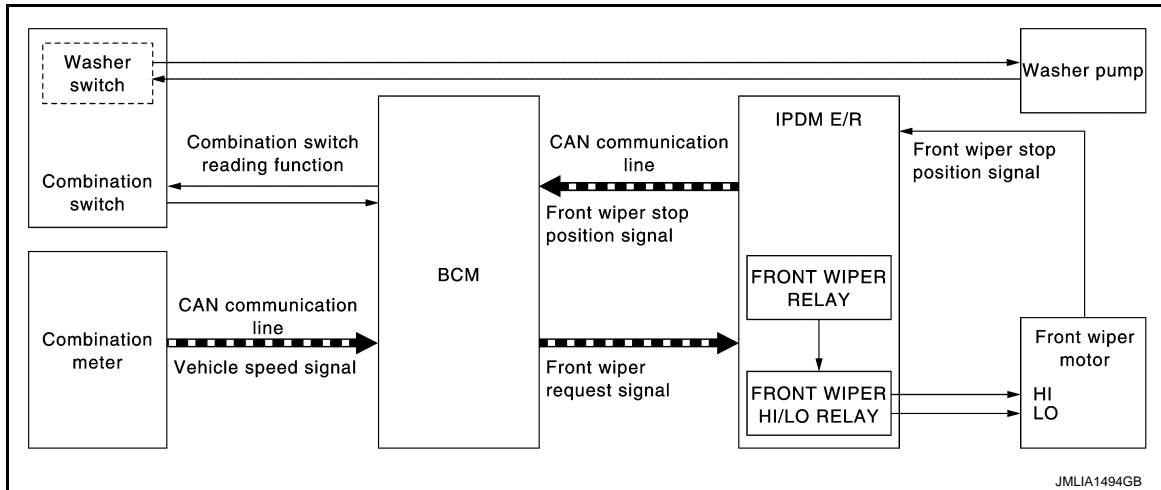

#### OUTLINE

The front wiper is controlled by each function of BCM and IPDM E/R.

Control by BCM

- Combination switch reading function
- Front wiper control function

Control by IPDM E/R

- Front wiper control function
- Relay control function

#### FRONT WIPER BASIC OPERATION

- BCM detects the combination switch condition by the combination switch reading function.
- BCM transmits the front wiper request signal to IPDM E/R via CAN communication depending on each operating condition of the front wiper.
- IPDM E/R turns ON/OFF the integrated front wiper relay and the front wiper HI/LO relay according to the front wiper request signal. IPDM E/R provides the power supply to operate the front wiper HI/LO operation.

#### FRONT WIPER LO OPERATION

- BCM transmits the front wiper request signal (LO) to IPDM E/R via CAN communication according to the front wiper LO operating condition.

Front wiper LO operating condition

- Power switch ON
- Front wiper switch LO or front wiper switch MIST (while pressing)
- IPDM E/R turns ON the integrated front wiper relay according to the front wiper request signal (LO).

#### FRONT WIPER HI OPERATION

- BCM transmits the front wiper request signal (HI) to IPDM E/R via CAN communication according to the front wiper HI operating condition.

Front wiper HI operating condition

- Power switch ON
- Front wiper switch HI
- IPDM E/R turns ON the integrated front wiper relay and the front wiper high relay according to the front wiper request signal (HI).

#### FRONT WIPER INT OPERATION


# SYSTEM

## < SYSTEM DESCRIPTION >

- BCM transmits the front wiper request signal (INT) to IPDM E/R via CAN communication depending on the front wiper INT operating condition and intermittent operation delay interval according to the wiper intermittent dial position.

Front wiper INT operating condition

- Power switch ON
- Front wiper switch INT
- IPDM E/R turns ON the integrated front wiper relay so that the front wiper is operated only once according to the front wiper request signal (INT).
- BCM detects stop position/except stop position of the front wiper motor according to the front wiper stop position signal received from IPDM E/R via CAN communication.
- BCM transmits the front wiper request signal (INT) again after the intermittent operation delay interval.

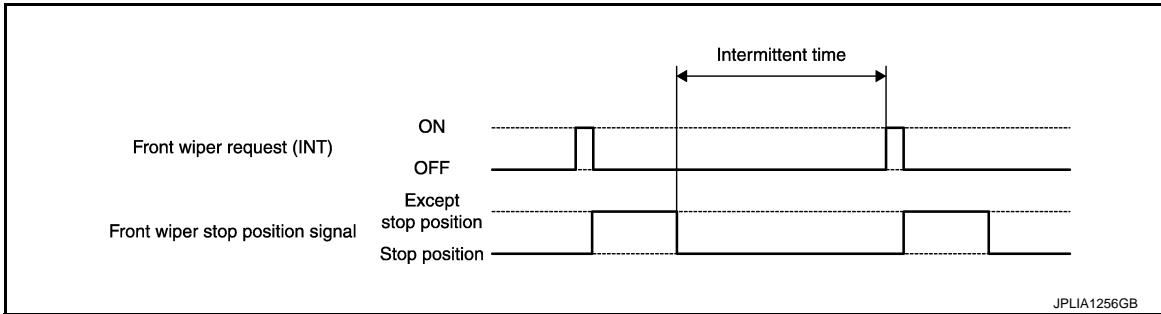

### NOTE:

Factory setting of the front wiper intermittent operation is operation linked with vehicle speed. Front wiper intermittent operation can be set to operation linked or not linked with vehicle speed using CONSULT. Refer to [WW-17, "WIPER : CONSULT Function - WIPER"](#).

Front wiper intermittent operation with vehicle speed

- BCM calculates the intermittent operation delay interval from the following
  - Vehicle speed signal
  - Wiper intermittent dial position

Unit: Second

Wiper intermittent dial position	Intermittent operation interval	Intermittent operation delay Interval		
		Vehicle speed		
		0 – 5 km/h (0 – 3.1 MPH)	5 – 65 km/h (3.1 – 40.4 MPH)*	65 km/h (40.4 MPH) or more
1	Short ↑	1	0.4	0.24
2		2.5	1	0.6
3		5	2	1.2
4		7.5	3	1.8
5		12.5	5	3
6	Long ↓	25	10	6
7		40	16	9.6

\*: When operation setting is not linked with vehicle speed.

### FRONT WIPER AUTO STOP OPERATION


- BCM stops transmitting the front wiper request signal when the front wiper switch is turned OFF.
- IPDM E/R detects the front wiper stop position signal from the front wiper motor and detects the front wiper motor position (stop position/except stop position).



# SYSTEM

## < SYSTEM DESCRIPTION >

- When the front wiper request signal is stopped, IPDM E/R turns ON the front wiper relay until the front wiper motor returns to the stop position.

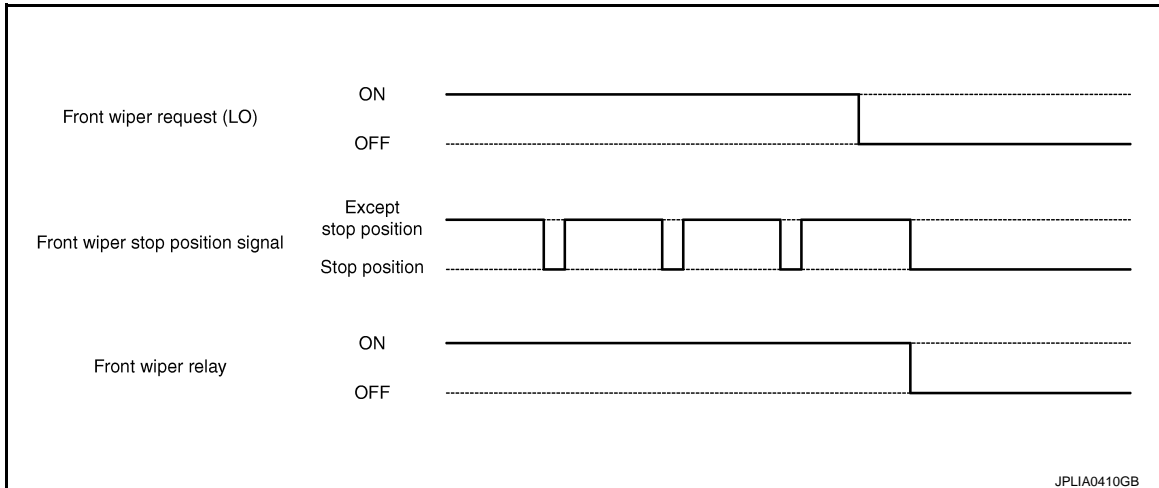

### NOTE:

- BCM stops the transmitting of the front wiper request signal when the power switch is OFF.
- IPDM E/R turns the front wiper relay OFF when the power switch is OFF.

### FRONT WIPER OPERATION LINKED WITH WASHER

- BCM transmits the front wiper request signal (LO) to IPDM E/R via CAN communication according to the washer linked operating condition of the front wiper.
- BCM transmits the front wiper request signal (LO) so that the front wiper operates approximately 2 times when the front washer switch OFF is detected.

#### Washer linked operating condition of front wiper

- Turn power switch ON
- Front washer switch ON (0.4 second or more)
- IPDM E/R turns ON the integrated front wiper relay according to the front wiper request signal (LO).
- The washer pump is grounded through the combination switch with the front washer switch ON.

### FRONT WIPER SERVICE POSITION OPERATION

- Front wiper operates in LO, stops, and then stays in lock back position when front washer switch is turned ON while power switch is OFF.
- BCM transmits front wiper service position signal via CAN communication according to the front wiper service position function operating conditions.

#### Operation conditions of front wiper service position function

- Turn power switch OFF (within 1 minutes)
- Front wiper switch ON (0.4 second or more)
- Front wiper operates at LO and then stops when IPDM E/R detects front wiper service position signal.
- Front wiper service position function is cancelled when front wiper washer switch is turned ON within 1 minute after turning power switch OFF. Front wiper service position function when front wiper switch (INT, LO, HI, MIST or WASHER) is turned ON within 1 minute or more after turning power switch OFF.

### NOTE:


Front wiper does not operate even if front wiper switch (INT, LO, or HI) is ON when power switch is turned ON while front wiper is stopped according to front wiper service position function.

# SYSTEM

< SYSTEM DESCRIPTION >

## FRONT WIPER AND WASHER SYSTEM : Schematic

INFOID:0000000069302.13

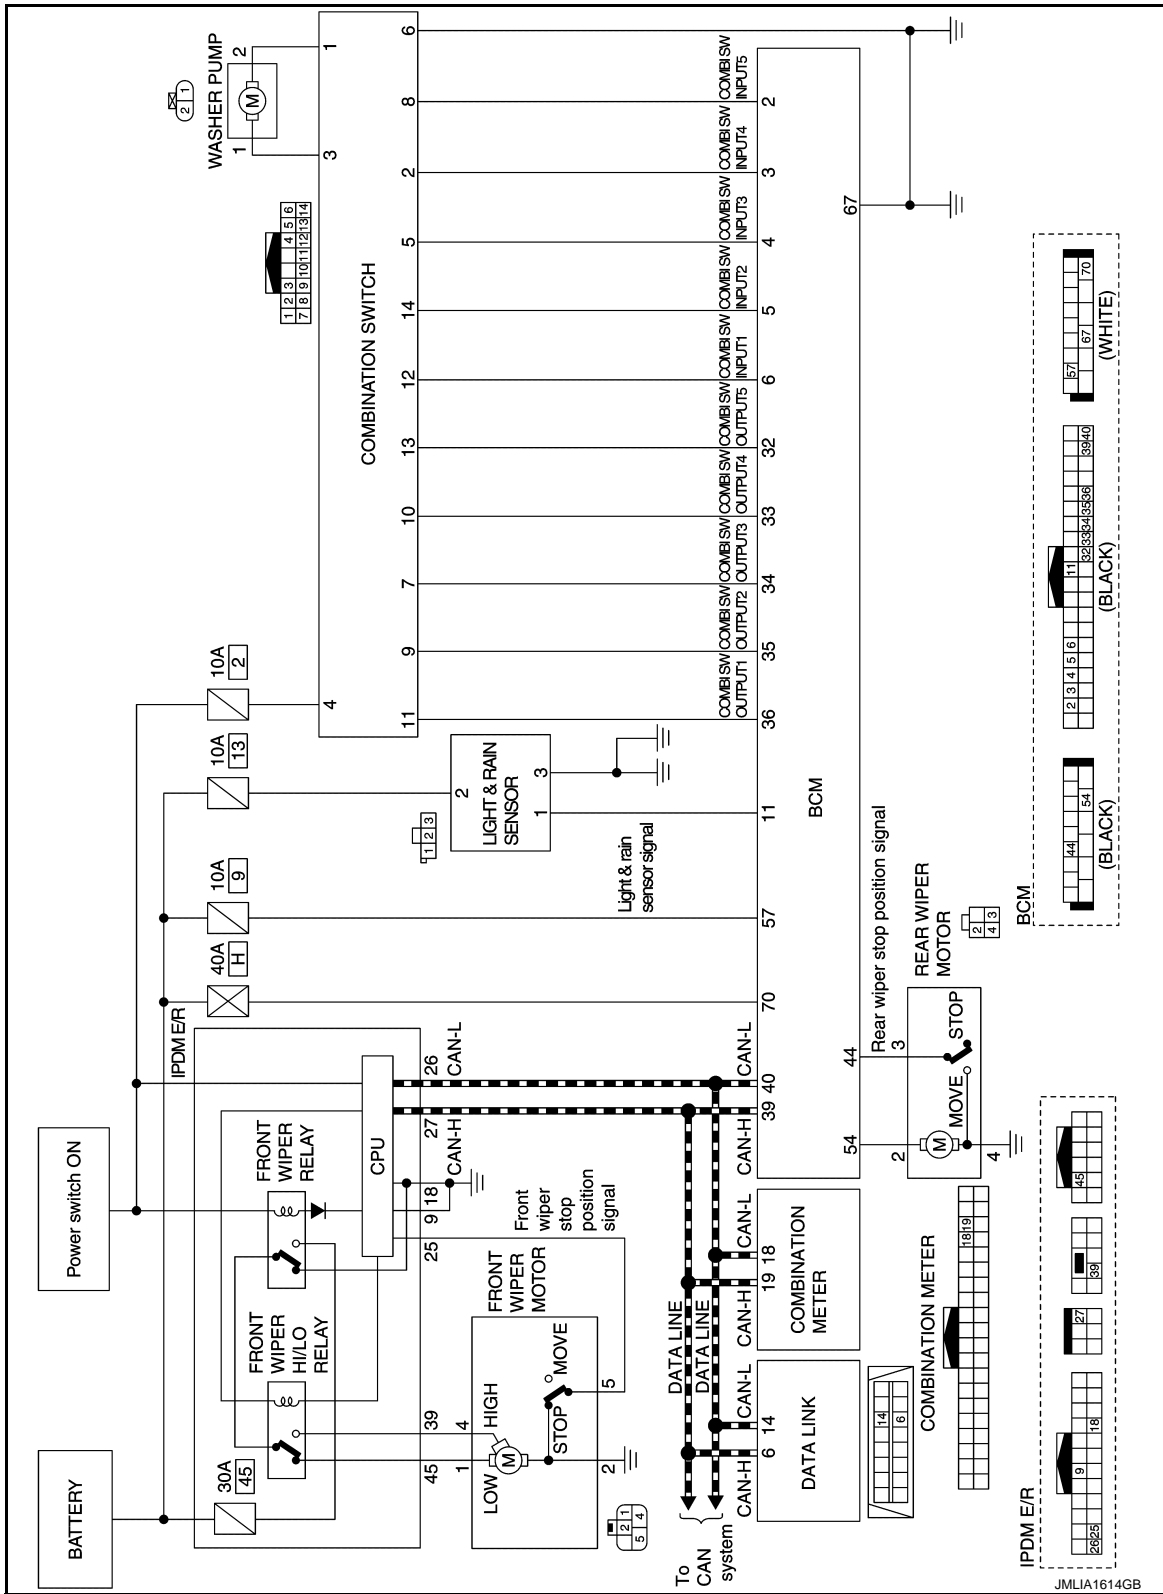

## FRONT WIPER AND WASHER SYSTEM : Fail-safe

INFOID:0000000069302.14

### IPDM E/R

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With BCM

# SYSTEM

## < SYSTEM DESCRIPTION >

Control part	Fail-safe operation
Front wiper	<ul style="list-style-type: none"> <li>The status just before activation of fail-safe control is maintained until the power switch is turned OFF while the front wiper is operating at LO or HI speed.</li> <li>The wiper is operated at LO speed until the power switch is turned OFF if the fail-safe control is activated while the front wiper is set in the AUTO mode and the front wiper motor is operating.</li> </ul>

IPDM E/R detects front wiper stop position by a front wiper stop position signal.  
When a front wiper stop position signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 seconds activation and 20 seconds stop five times.

Power switch	Front wiper switch	Front wiper stop position signal
ON	OFF	The front wiper stop position signal (stop position) cannot be input for 10 seconds.
	ON	The front wiper stop position signal does not change for 10 seconds.

### NOTE:

This operation status can be confirmed on the IPDM E/R "Data Monitor" that displays "BLOCK" for the item "WIP PROT" while the wiper is stopped.

### BCM

BCM detects the rain sensor serial link error and the rain sensor malfunction.  
BCM controls the following fail-safe when rain sensor has a malfunction.

#### Fail-safe Control


- Front wiper control
  - Front wiper switch AUTO and sensing rain drop: The condition just before the activation of fail-safe is maintained until the front wiper switch is turned OFF.
  - Front wiper switch AUTO and not sensing rain drop: Front wiper is LO operation until the front wiper switch is turned off.

## REAR WIPER AND WASHER SYSTEM

### REAR WIPER AND WASHER SYSTEM : System Description

INFOID:000000006930215

#### SYSTEM DIAGRAM

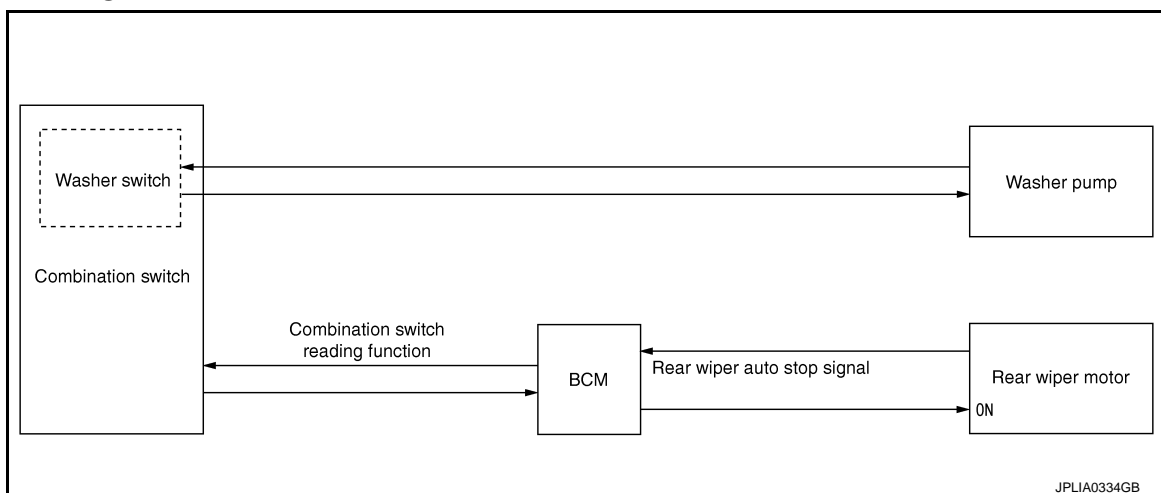

### OUTLINE

The rear wiper is controlled by each function of BCM.

#### Control by BCM

- Combination switch reading function
- Rear wiper control function

# SYSTEM

## < SYSTEM DESCRIPTION >

### REAR WIPER BASIC OPERATION

- BCM detects the combination switch condition by the combination switch reading function.
- BCM controls the rear wiper to start or stop.

### REAR WIPER ON OPERATION

- BCM supplies power to the rear wiper motor according to the rear wiper ON operating condition.

Rear wiper ON operating condition


- Power switch ON
- Rear wiper switch ON

### REAR WIPER INT OPERATION

- BCM supplies power to the rear wiper motor according to the INT operating condition.


Rear wiper INT operating condition

- Power switch ON
- Rear wiper switch INT
- BCM controls the rear wiper to operate once.
- BCM detects the rear wiper motor stopping position.
- BCM supplies power to the rear wiper motor after an intermittent from the stop of the rear wiper motor.

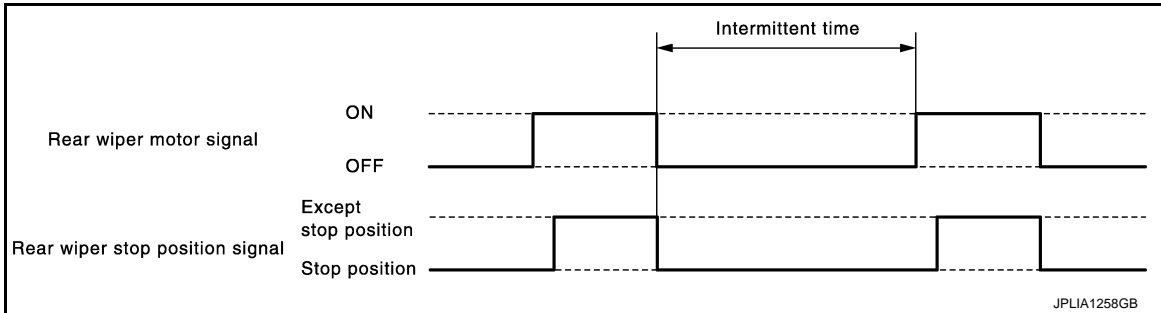

### REAR WIPER AUTO STOP OPERATION

- BCM stops supplying power to the rear wiper motor when the rear wiper switch is turned OFF.
- BCM reads a rear wiper stop position signal from the rear wiper motor to detect a rear wiper motor position.
- When the rear wiper motor is at other than the stopping position, BCM continues to supply power to the rear wiper motor until it returns to the stopping position.

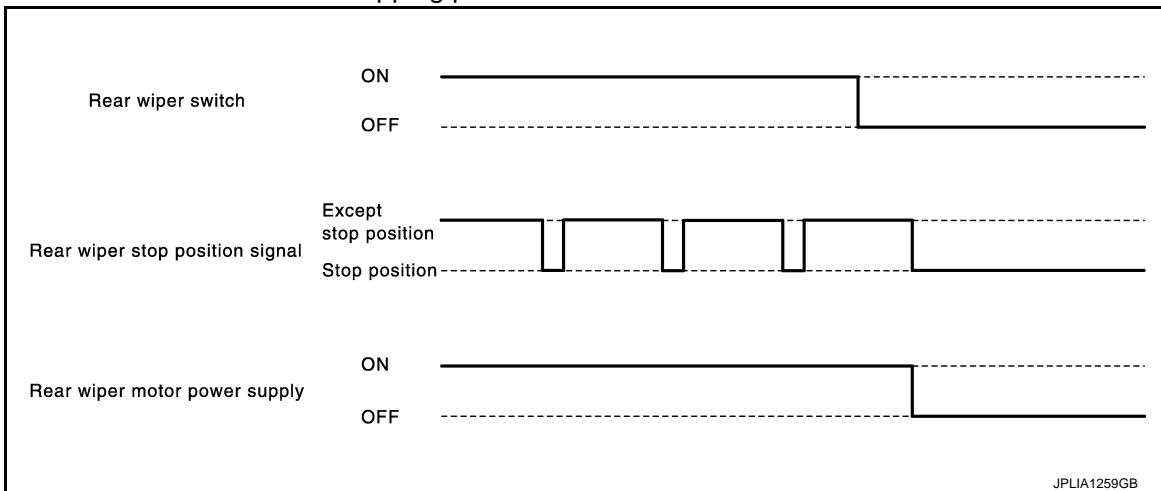

#### NOTE:

BCM stops supplying power to the rear wiper motor when the power switch is turned OFF.

### REAR WIPER OPERATION LINKED WITH WASHER

- BCM supplies power to the rear wiper motor according to the washer linked operating condition of rear wiper. When the rear washer switch is turned OFF, BCM controls rear wiper to operate approximately 3 times.

Washer linked operating condition of rear wiper

- Power switch ON
- Rear washer switch ON (0.4 second or more)


# SYSTEM

## < SYSTEM DESCRIPTION >

- The washer pump is grounded through the combination switch with the rear washer switch ON.

## REAR WIPER AND WASHER SYSTEM : Schematic

INFOID:000000006930216

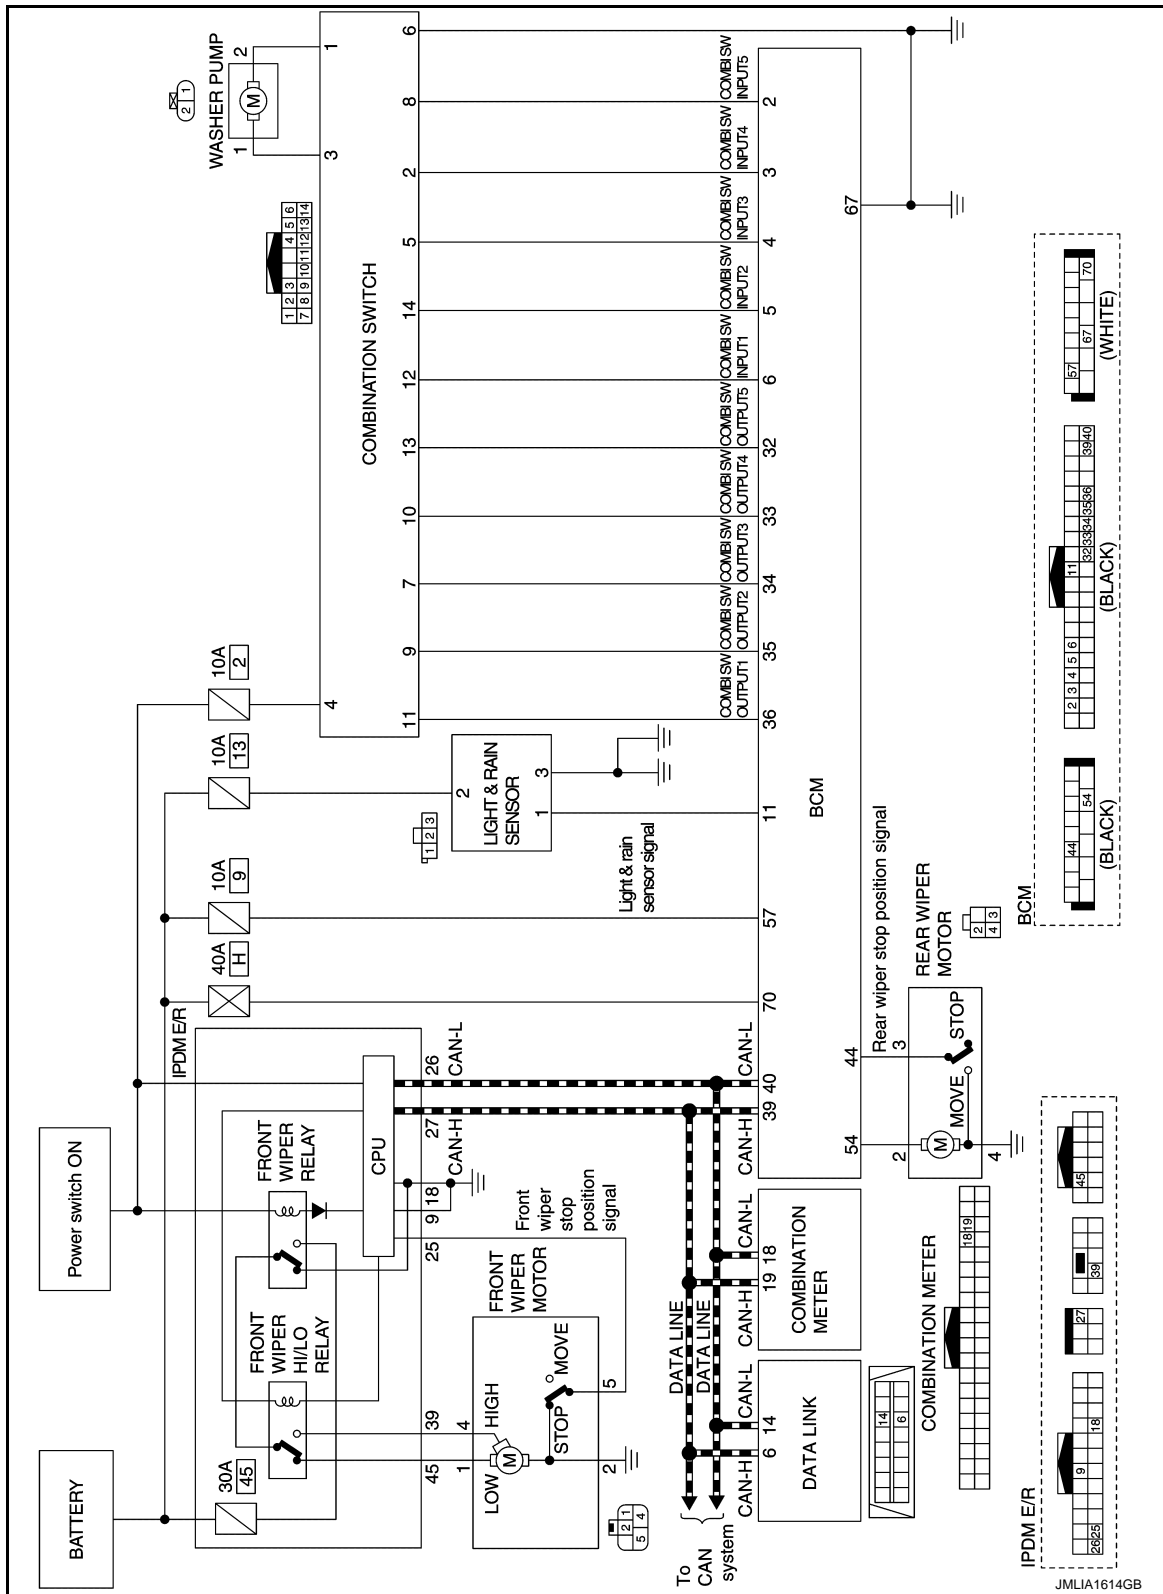

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

WW

## REAR WIPER AND WASHER SYSTEM : Fail-safe

INFOID:000000006930217

### REAR WIPER MOTOR PROTECTION

BCM detects the rear wiper stopping position according to the rear wiper stop position signal.

## SYSTEM

### < SYSTEM DESCRIPTION >

---

When the rear wiper stop position signal does not change for more than 5 seconds while driving the rear wiper, BCM stops power supply to protect the rear wiper motor.

Condition of cancellation

1. More than 1 minute is passed after the rear wiper stop.
2. Turn rear wiper switch OFF.
3. Operate the rear wiper switch or rear washer switch.

# DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

## DIAGNOSIS SYSTEM (BCM)

### COMMON ITEM

### COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:000000007013456

### APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
Work Support	Changes the setting for each system function.
Self Diagnostic Result	Displays the diagnosis results judged by BCM.
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM.
Data Monitor	The BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Ecu Identification	The BCM part number is displayed.
Configuration	<ul style="list-style-type: none"> <li>Read and save the vehicle specification.</li> <li>Write the vehicle specification when replacing BCM.</li> </ul>

### SYSTEM APPLICATION

BCM can perform the following functions for each system.

#### NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

×: Applicable item

System	Sub system selection item	Diagnosis mode		
		Work Support	Data Monitor	Active Test
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	×
Warning chime	BUZZER		×	×
Interior room lamp timer	INT LAMP	×	×	×
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×	×	×
Turn signal and hazard warning lamps	FLASHER	×	×	×
—	AIR CONDITONER*		×	×
Intelligent Key system	INTELLIGENT KEY	×	×	×
Combination switch	COMB SW		×	
Body control system	BCM	×		
NVIS - NATS	IMMU	×	×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
Back door open	TRUNK		×	
Theft warning alarm	THEFT ALM	×	×	×
RAP system	RETAINED PWR		×	
Signal buffer system	SIGNAL BUFFER		×	×
TPMS	AIR PRESSURE MONITOR	×	×	×

\*: This item is displayed, but not used.

### FREEZE FRAME DATA (FFD)

The BCM records the following vehicle condition at the time a particular DTC is detected, and displays on CONSULT.

# DIAGNOSIS SYSTEM (BCM)

## < SYSTEM DESCRIPTION >

CONSULT screen item	Indication/Unit	Description	
Vehicle Speed	km/h	Vehicle speed of the moment a particular DTC is detected	
Odo/Trip Meter	km	Total mileage (Odometer value) of the moment a particular DTC is detected	
Vehicle Condition	SLEEP>LOCK	Power supply position status of the moment a particular DTC is detected*	While turning BCM status from low power consumption mode to normal mode [Power supply position is OFF (LOCK)]
	SLEEP>OFF		While turning BCM status from low power consumption mode to normal mode [Power supply position is OFF (OFF)]
	LOCK>ACC		While turning power supply position from OFF (LOCK) to ACC
	ACC>ON		While turning power supply position from ACC to ON
	RUN>ACC		While turning power supply position from READY (RUN) to ACC (Except emergency stop operation)
	CRANK>RUN		While turning power supply position from READY (CRANK) to READY (RUN)
	RUN>URGENT		While turning power supply position from READY (RUN) to ACC (Emergency stop operation)
	ACC>OFF		While turning power supply position from ACC to OFF (OFF)
	OFF>LOCK		While turning power supply position from OFF (OFF) to OFF (LOCK)
	OFF>ACC		While turning power supply position from OFF (OFF) to ACC
	ON>CRANK		While turning power supply position from ON to READY (CRANK)
	OFF>SLEEP		While turning BCM status from normal mode [Power supply position is OFF (OFF)] to low power consumption mode
	LOCK>SLEEP		While turning BCM status from normal mode [Power supply position is OFF (LOCK)] to low power consumption mode
	LOCK		Power supply position is OFF (LOCK)
	OFF		Power supply position is OFF (OFF)
	ACC		Power supply position is ACC
	ON		Power supply position is ON
	ENGINE RUN		Power supply position is READY (RUN)
CRANKING	Power supply position is READY (CRANK)		
IGN Counter	0 - 39	<p>The number of times that power switch is turned ON after DTC is detected</p> <ul style="list-style-type: none"> <li>• The number is 0 when a malfunction is detected now.</li> <li>• The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever power switch OFF → ON.</li> <li>• The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.</li> </ul>	

### NOTE:

\*: Refer to the following for details of the power supply position.

- OFF (OFF, LOCK): Power switch OFF
- ACC: Power switch ACC
- ON: Power switch ON
- READY (CRANK): Shifting to vehicle condition READY (Transmitting the READY signal from BCM to VCM)
- READY (RUN): Vehicle condition READY

Power supply position shifts to "OFF (LOCK)" from "OFF (OFF)", when power switch is in the OFF position, shift position is in the P position, and any of the following conditions are met.

- Closing door
- Opening door
- Door is locked using door request switch
- Door is locked using Intelligent Key

The power supply position shifts to "ACC" when the power switch (push switch) is pushed at "OFF (LOCK)".

## WIPER



# DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

## WIPER : CONSULT Function - WIPER

INFOID:000000006930219

### WORK SUPPORT

Service item	Setting item	Description
WIPER SPEED SETTING	On	With vehicle speed (Front wiper intermittent time linked with the vehicle speed and wiper intermittent dial position)
	Off*	Without vehicle speed (Front wiper intermittent time linked with the wiper intermittent dial position)

\*: Factory setting

### DATA MONITOR

Monitor Item [Unit]	Description
PUSH SW [Off/On]	The switch status input from power switch (push switch)
VEH SPEED 1 [km/h]	Displays the value of the vehicle speed signal received from combination meter via CAN communication
FR WIPER HI [Off/On]	Status of each switch judged by BCM using the combination switch reading function
FR WIPER LOW [Off/On]	
FR WASHER SW [Off/On]	
FR WIPER INT [Off/On]	
FR WIPER STOP [Off/On]	Displays the status of the front wiper stop position signal received from IPDM E/R via CAN communication.
INT VOLUME [1 - 7]	Status of each switch judged by BCM using the combination switch reading function
RR WIPER ON [Off/On]	Status of each switch judged by BCM using the combination switch reading function
RR WIPER INT [Off/On]	
RR WASHER SW [Off/On]	
RR WIPER STOP [Off/On]	Rear wiper motor (stop position) status input from the rear wiper motor
H/L WASH SW [Off/On]	<b>NOTE:</b> The item is indicated, but not monitored

### ACTIVE TEST

Test item	Operation	Description
FR WIPER	Hi	Transmits the front wiper request signal (HI) to IPDM E/R via CAN communication to operate the front wiper HI operation.
	Lo	Transmits the front wiper request signal (LO) to IPDM E/R via CAN communication to operate the front wiper LO operation.
	INT	Transmits the front wiper request signal (INT) to IPDM E/R via CAN communication to operate the front wiper INT operation.
	Off	Stops transmitting the front wiper request signal to stop the front wiper operation.
RR WIPER	On	Output the voltage to operate the rear wiper motor.
	Off	Stops the voltage to stop the rear wiper motor.

# DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

## DIAGNOSIS SYSTEM (IPDM E/R)

### Diagnosis Description

INFOID:000000007013457

#### AUTO ACTIVE TEST

##### Description

In auto active test mode, the IPDM E/R sends a drive signal to the following systems to check their operation.

- Rear window defogger
- Front wiper motor
- Parking lamp
- License plate lamp
- Tail lamp
- Front fog lamp
- Headlamp (LO, HI)

##### Operation Procedure

###### NOTE:

Never perform auto active test in the following conditions.

- CONSULT is connected.
  - Passenger door is open.
1. Turn the power switch OFF.
  2. Turn the power switch ON, and within 20 seconds, press the driver door switch 10 times. Then turn the power switch OFF.
  3. Turn the power switch ON within 10 seconds. After that the horn sounds once and the auto active test starts.

###### NOTE:

Never depress brake pedal while operating power switch so that auto active test is not activated.

4. After a series of the following operations is repeated 3 times, auto active test is completed.

###### NOTE:

- When auto active test mode has to be cancelled halfway through test, turn the power switch OFF.
- When auto active test is not activated, door switch may be the cause. Check door switch. Refer to [DLK-92, "Component Function Check"](#).

##### Inspection in Auto Active Test Mode


When auto active test mode is actuated, the following operation sequence is repeated 3 times.

Operation sequence	Inspection location	Operation
1	Rear window defogger	10 seconds
2	Front wiper motor	LO for 5 seconds → HI for 5 seconds
3	<ul style="list-style-type: none"><li>• Parking lamp</li><li>• License plate lamp</li><li>• Tail lamp</li><li>• Front fog lamp</li><li>• Side marker lamp</li></ul>	10 seconds
4	Headlamp	LO for 10 seconds → HI ON ⇔ OFF 5 times

# DIAGNOSIS SYSTEM (IPDM E/R)

## < SYSTEM DESCRIPTION >

Concept of auto active test

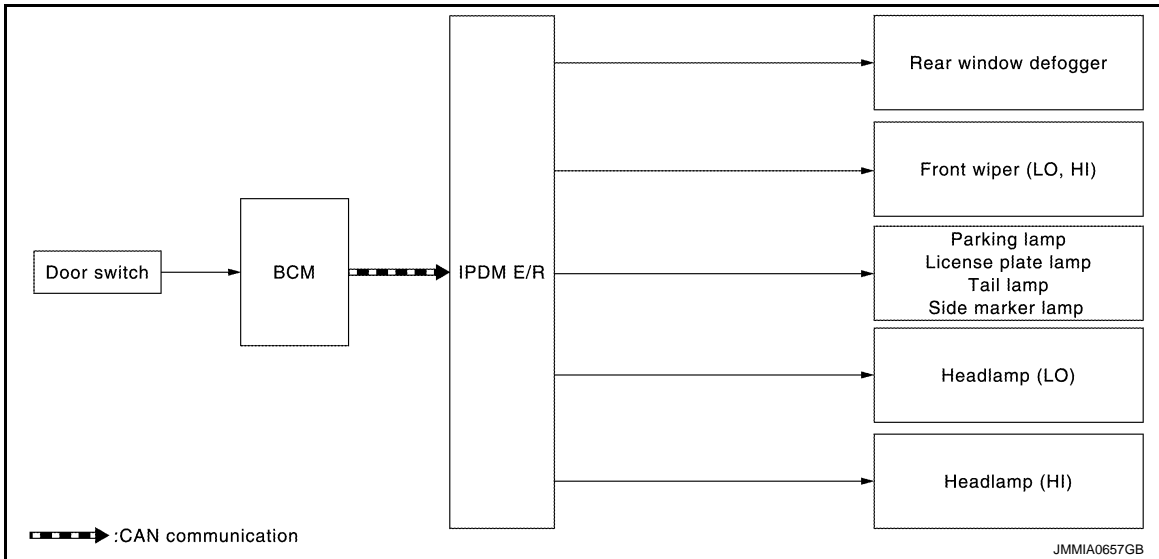

- IPDM E/R starts the auto active test with the door switch signals transmitted by BCM via CAN communication. Therefore, the CAN communication line between IPDM E/R and BCM is considered normal if the auto active test starts successfully.
- The auto active test facilitates troubleshooting if any systems controlled by IPDM E/R cannot be operated.

Diagnosis chart in auto active test mode

Symptom	Inspection contents	Possible cause
Rear window defogger does not operate	Perform auto active test. Does the rear window defogger operate?	YES BCM signal input circuit
		NO <ul style="list-style-type: none"> <li>• Rear window defogger</li> <li>• Rear window defogger ground circuit</li> <li>• Harness or connector between IPDM E/R and rear window defogger</li> <li>• IPDM E/R</li> </ul>
Any of the following components do not operate <ul style="list-style-type: none"> <li>• Parking lamp</li> <li>• License plate lamp</li> <li>• Tail lamp</li> <li>• Front fog lamp</li> <li>• Headlamp (HI, LO)</li> <li>• Side marker lamp</li> <li>• Front wiper motor</li> </ul>	Perform auto active test. Does the applicable system operate?	YES BCM signal input circuit
		NO <ul style="list-style-type: none"> <li>• Lamp or motor</li> <li>• Lamp or motor ground circuit</li> <li>• Harness or connector between IPDM E/R and applicable system</li> <li>• IPDM E/R</li> </ul>

## CONSULT Function (IPDM E/R)

INFOID:000000007013458

### APPLICATION ITEM

CONSULT performs the following functions via CAN communication with IPDM E/R.

Diagnosis mode	Description
Ecu Identification	Allows confirmation of IPDM E/R part number.
Self Diagnostic Result	Displays the diagnosis results judged by IPDM E/R.
Data Monitor	Displays the real-time input/output data from IPDM E/R input/output data.
Active Test	IPDM E/R can provide a drive signal to electronic components to check their operations.
CAN Diag Support Monitor	The results of transmit/receive diagnosis of CAN communication can be read.

### SELF DIAGNOSTIC RESULT

Refer to [PCS-18, "DTC Index"](#).

### DATA MONITOR

## DIAGNOSIS SYSTEM (IPDM E/R)

### < SYSTEM DESCRIPTION >

#### Monitor item

Monitor Item [Unit]	MAIN SIGNALS	Description
AC COMP REQ [Off/On]	×	<b>NOTE:</b> The item is indicated, but not monitored.
TAIL&CLR REQ [Off/On]	×	Displays the status of the position light request signal received from BCM via CAN communication.
HL LO REQ [Off/On]	×	Displays the status of the low beam request signal received from BCM via CAN communication.
HL HI REQ [Off/On]	×	Displays the status of the high beam request signal received from BCM via CAN communication.
FR FOG REQ [Off/On]	×	Displays the status of the front fog light request signal received from BCM via CAN communication.
FR WIP REQ [Stop/1LOW/Low/Hi]	×	Displays the status of the front wiper request signal received from BCM via CAN communication.
WIP AUTO STOP [STOP P/ACT P]	×	Displays the status of the front wiper auto stop signal judged by IPDM E/R.
WIP PROT [Off/BLOCK]	×	Displays the status of the front wiper fail-safe operation judged by IPDM E/R.
IGN RLY1 -REQ [Off/On]		Displays the status of the power switch ON signal received from BCM via CAN communication.
IGN RLY [Off/On]	×	Displays the status of the ignition relay judged by IPDM E/R.
PUSH SW [Off/On]		Displays the status of the power switch judged by IPDM E/R.
INTER/NP SW [Off/On]		<b>NOTE:</b> The item is indicated, but not monitored.
ST RLY CONT [Off/On]		<b>NOTE:</b> The item is indicated, but not monitored.
IHBT RLY -REQ [Off/On]		<b>NOTE:</b> The item is indicated, but not monitored.
ST/INHI RLY [Off/ ST ON/INHI ON/UNKWN]		<b>NOTE:</b> The item is indicated, but not monitored.
DETENT SW [Off/On]		Displays the status of the P position signal judged by IPDM E/R.
S/L RLY -REQ [Off/On]		<b>NOTE:</b> The item is indicated, but not monitored.
S/L STATE [LOCK/UNLK/UNKWN]		<b>NOTE:</b> The item is indicated, but not monitored.
DTRL REQ [Off/On]		<b>NOTE:</b> The item is indicated, but not monitored.
OIL P SW [Open/Close]		<b>NOTE:</b> The item is indicated, but not monitored.
HOOD SW [Off/On]		Displays the status of the hood switch judged by IPDM E/R.
HL WASHER REQ [Off/On]		<b>NOTE:</b> The item is indicated, but not monitored.
THFT HRN REQ [Off/On]		Displays the status of the theft warning horn request signal received from BCM via CAN communication.
HORN CHIRP [Off/On]		Displays the status of the horn reminder signal received from BCM via CAN communication.

#### ACTIVE TEST

##### Test item

# DIAGNOSIS SYSTEM (IPDM E/R)

## < SYSTEM DESCRIPTION >

Test item	Operation	Description
HORN	On	Operates horn relay for 20 ms.
REAR DEFOGGER	Off	OFF
	On	Operates the rear window defogger relay.
FRONT WIPER	Off	OFF
	Lo	Operates the front wiper relay.
	Hi	Operates the front wiper relay and front wiper high relay.
MOTOR FAN	1	<b>NOTE:</b> This item is indicated, but cannot be tested.
	2	
	3	
	4	
HEAD LAMP WASHER	On	<b>NOTE:</b> This item is indicated, but cannot be tested.
EXTERNAL LAMPS	Off	OFF
	TAIL	Operates the tail lamp relay.
	Lo	Operates the headlamp low relay.
	Hi	Operates the headlamp low relay and ON/OFF the headlamp high relay at 1 second intervals.
	Fog	Operates the front fog lamp relay.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

WW

# BCM, IPDM E/R

< ECU DIAGNOSIS INFORMATION >

## ECU DIAGNOSIS INFORMATION

BCM, IPDM E/R

List of ECU Reference

INFOID:000000006930222

ECU	Reference
BCM	<a href="#">BCS-32, "Reference Value"</a>
	<a href="#">BCS-52, "Fail-safe"</a>
	<a href="#">BCS-53, "DTC Inspection Priority Chart"</a>
	<a href="#">BCS-54, "DTC Index"</a>
IPDM E/R	<a href="#">PCS-14, "Reference Value"</a>
	<a href="#">PCS-17, "Fail-Safe"</a>
	<a href="#">PCS-18, "DTC Index"</a>

# WIPER AND WASHER SYSTEM


< WIRING DIAGRAM >

## WIRING DIAGRAM

### WIPER AND WASHER SYSTEM

Wiring Diagram

INFOID:000000006930223

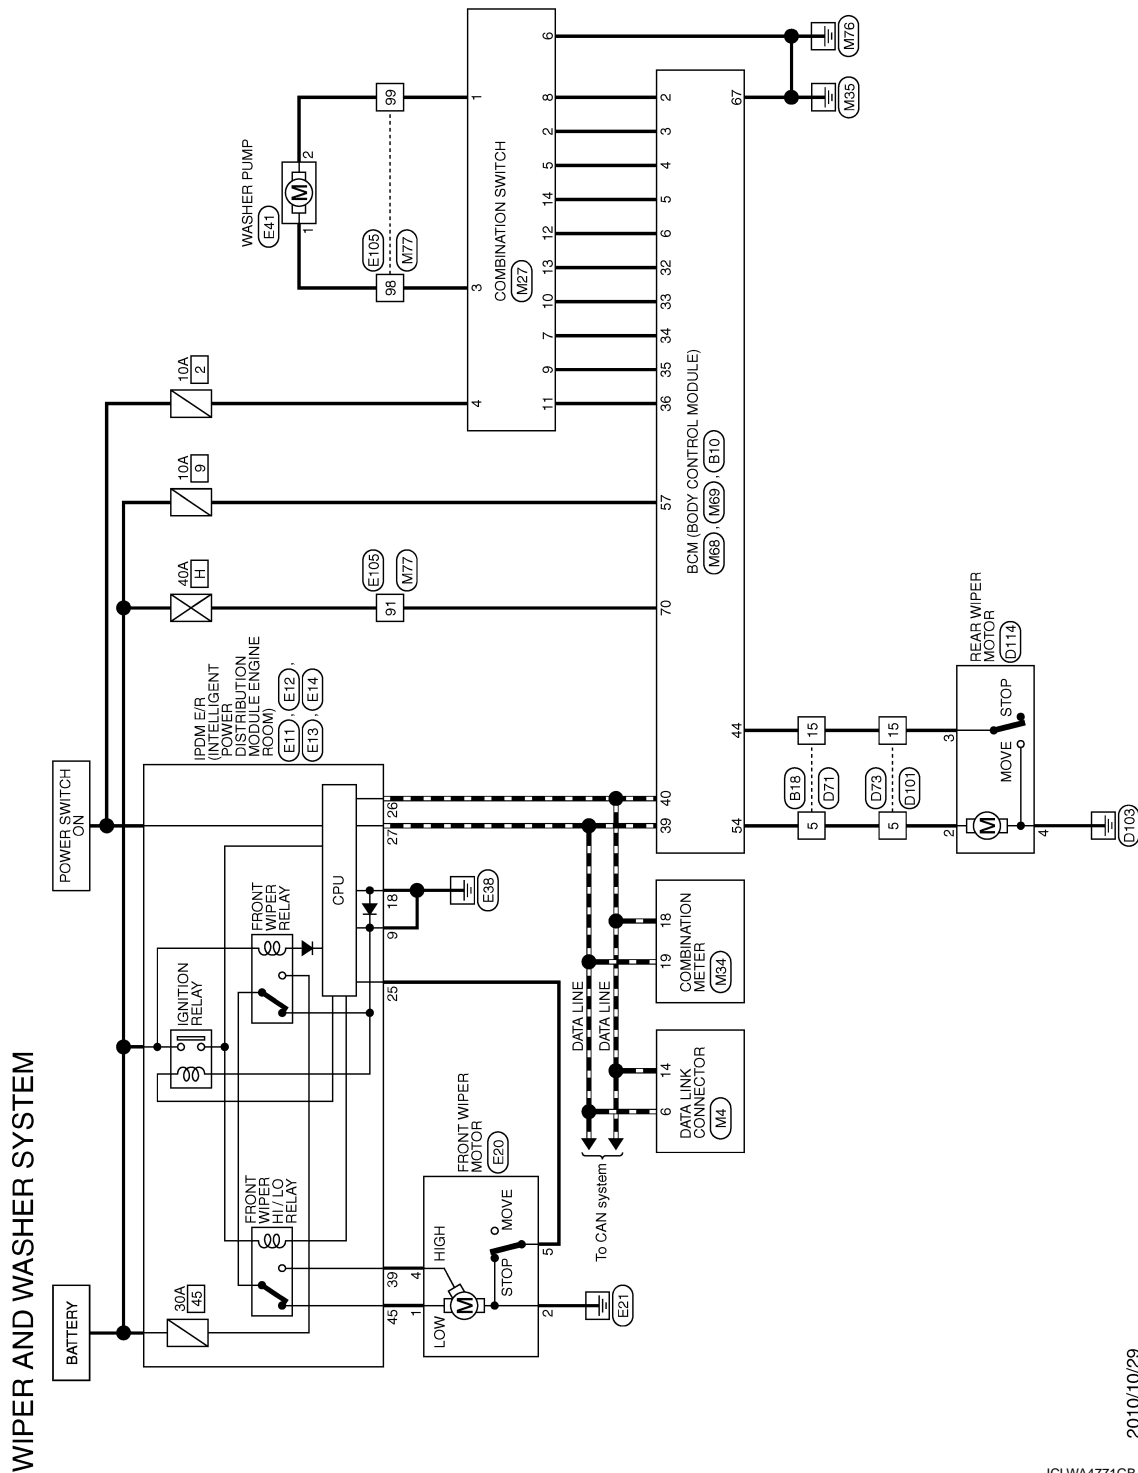

WIPER AND WASHER SYSTEM

2010/10/29

JCLWA4771GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

# WIPER AND WASHER SYSTEM

< WIRING DIAGRAM >

## WIPER AND WASHER SYSTEM

Connector No.	B10
Connector Name	BCM BODY CONTROL MODULE
Connector Type	FE03FBE-FTA6-SA



41	42	43	44	45	46	47	48	49
50	51	52	53	54	55			

Terminal No.	Color of Wire	Signal Name [Specification]
43	Y	BACK DOOR SW
44	LG	REAR WIPER STOP POSITION
45	BR	PASSENGER DOOR SW
46	R	REAR RH DOOR SW
47	SB	DRIVER DOOR SW
48	W	REAR LH DOOR SW
49	L	LUGGAGE LAMP OUTPUT
51	P	BACK DOOR REG SW
53	GR	BK DOOR OPEN OUTPUT
54	P	REAR WIPER OUTPUT
55	GR	PASS. RR DOOR UNLK OUTPUT

Connector No.	B18
Connector Name	WIRE TO WIRE
Connector Type	NH10MW-CS10



1	2	3	4	5	6								
7	8	9	10	11	12	13	14	15	16	17	18	19	20

Terminal No.	Color of Wire	Signal Name [Specification]
5	P	
6	R	
7	P	
9	P	
10	Y	
11	B	
12	W	
13	R	
14	L	
15	LG	
17	SHIELD	

18	B		
20	GR		

Connector No.	D71
Connector Name	WIRE TO WIRE
Connector Type	NH10PW-CS10



6	5	4	3	2	1			
20	19	18	17	16	15	14	8	7

Terminal No.	Color of Wire	Signal Name [Specification]
5	W	
6	R	
7	P	
9	P	
10	P	
11	B	
12	W	
13	R	
14	L	
15	LG	
17	SHIELD	
18	Y	
20	GR	

Connector No.	D73
Connector Name	WIRE TO WIRE
Connector Type	NH10PW-CS10



6	5	4	3	2	1			
20	19	18	17	16	15	14	8	7

Terminal No.	Color of Wire	Signal Name [Specification]
5	W	
6	R	
7	P	
9	P	
10	P	
11	B	
12	W	
13	R	
14	L	
15	LG	
17	SHIELD	

12	W		
13	R		
14	L		
15	LG		
17	SHIELD		
18	Y		
20	GR		

Connector No.	D101
Connector Name	WIRE TO WIRE
Connector Type	NH10MW-CS10



1	2	3	4	5	6								
7	8	9	10	11	12	13	14	15	16	17	18	19	20

Terminal No.	Color of Wire	Signal Name [Specification]
5	P	
6	R	
7	P	
9	P	
10	P	
12	W	
13	R	
14	L	
15	LG	
17	SHIELD	
18	B	
20	GR	

Connector No.	D114
Connector Name	REAR WIPER MOTOR
Connector Type	3J0MFV-TV



2	1
4	3

Terminal No.	Color of Wire	Signal Name [Specification]
2	P	

3	LG		
4	B		

Connector No.	E11
Connector Name	IPWLE P.R. INTELLIGENT POWER DISTRIBUTION MODULE (POWER PWSM)
Connector Type	IM0FBF-LC



11	10	9
14	13	12

Terminal No.	Color of Wire	Signal Name [Specification]
9	B	
14	R	

Connector No.	E12
Connector Name	IPWLE P.R. INTELLIGENT POWER DISTRIBUTION MODULE (POWER PWSM)
Connector Type	NS03FBR-CS



17	16	15		
22	21	20	19	18

Terminal No.	Color of Wire	Signal Name [Specification]
18	B/W	
19	W	
20	V	




# WIPER AND WASHER SYSTEM

< WIRING DIAGRAM >


## WIPER AND WASHER SYSTEM

Connector No.	E13
Connector Name	SMALL INTELLIGENT POWER DISTRIBUTION MODULE (SMIPDM)
Connector Type	TH12FN-NH




Terminal No.	Color of Wire	Signal Name [Specification]
25	R	-
26	P	-
27	L	-
34	W	-

Connector No.	E14
Connector Name	SMALL INTELLIGENT POWER DISTRIBUTION MODULE (SMIPDM)
Connector Type	NS12FBR-OS



Terminal No.	Color of Wire	Signal Name [Specification]
35	G	-
36	GR	-
38	V	-
41	W	-
42	R	-
43	O	-
44	LG	-
45	Y	-

Connector No.	E20
Connector Name	FRONT WIPER MOTOR
Connector Type	H53GFGY




Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-
2	B/Y	-
4	L	-
5	R	-

Connector No.	E41
Connector Name	WASHER PUMP
Connector Type	E02FGY-RS



Terminal No.	Color of Wire	Signal Name [Specification]
1	SB	-
2	O	-

Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS1G-TM4

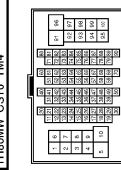

Terminal No.	Color of Wire	Signal Name [Specification]
1	SB	-
2	O	-

61	GR	-
62	BR	-
64	R	-
65	Y	-
66	G	-
67	V	-
68	W	-
69	SB	-
71	Y	-
72	L	-
73	R	-
74	L	-
75	Y	-
76	P	-
80	O	-
81	L	-
82	SB	-
83	G	-
84	BR	-
85	LG	-
86	GR	-
88	B	-
89	W	-
90	SHIELD	-
91	Y	-
92	BR	-
93	W	-
94	R	-
95	V	-
96	P	-
97	G	-
98	SB	-
99	O	-

1	BR	-
2	R	-
3	GR	-
4	LG	-
5	W	-
6	V	-
7	Y	-
8	P	-
9	G	-
10	R	-
11	O	-
12	W	-
13	B	-
14	Y	-
15	BR	-
16	LG	-
17	L	-
18	G	-
19	V	-
20	P	-
21	B	-
22	LG	-
23	GR	-
24	L	-
25	R	-
26	SB	-
27	B	-
28	BR	-
29	W	-
30	W	-
31	V	-
32	LG	-
33	O	-
34	L	-
35	BR	-
36	SB	-
38	GR	-
39	Y	-
40	R	-
41	R	-
42	W	-
43	SB	-
44	GR	-
45	G	-
46	P	-
47	LG	-
48	V	-
49	G	-
50	L	-
51	W	-
54	P	-
55	O	-
56	Y	-
57	P	-
58	LG	-
60	LG	-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


WW

# WIPER AND WASHER SYSTEM

< WIRING DIAGRAM >


## WIPER AND WASHER SYSTEM

Connector No.	M4
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FV



Terminal No.	Color of Wire	Signal Name [Specification]
3	LG	-
4	B	-
5	B	-
6	L	-
7	GR	-
8	G	-
11	SB	-
12	G	-
13	L	-
14	P	-
16	Y	-

Connector No.	M27
Connector Name	COMBINATION SWITCH
Connector Type	TH16FV-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	WASHER (RR)
2	GR	OUTPUT 4
3	R	WASHER (FR)
4	W	IGN
5	BR	OUTPUT 3
6	B	GND
7	W	OUTPUT 3
8	L	OUTPUT 5
9	R	INPUT 2
10	Y	INPUT 4
11	P	INPUT 1

12	V	OUTPUT 1
13	LG	INPUT 5
14	G	OUTPUT 2

Connector No.	M34
Connector Name	COMBINATION METER
Connector Type	TH40FV-NH




Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	BATTERY POWER SUPPLY
2	R	BATTERY POWER SUPPLY (FOR UPPER METER)
3	GR	POWER SWITCH SUPPLY
4	BR	POWER SWITCH SUPPLY (FOR UPPER METER)
5	B	GROUND
6	B	GROUND
7	V	ELECTRIC SHIFT WARNING SIGNAL
9	G	PLUG IN SIGNAL
10	L	COMMUNICATION SIGNAL (METER → VSP)
11	P	COMMUNICATION SIGNAL (VSP → METER)
12	V	METER CONTROL SWITCH GROUND
13	LG	ENTER SWITCH SIGNAL
14	W	SELECT SWITCH SIGNAL
15	BR	TRIP RESET SWITCH SIGNAL
16	BR	ILLUMINATION CONTROL SWITCH SIGNAL
17	V	ILLUMINATION CONTROL SIGNAL (FOR UPPER METER)
18	P	CAN-L
19	L	CAN-H
20	Y	SEAT BELT BUCKLE SWITCH SIGNAL (PASSENGER SIDE)
22	GR	GROUND (FOR UPPER METER)
24	BR	ELECTRIC PARKING BRAKE CONTROL MODULE WAKEUP SIGNAL
25	SB	BRAKE FLUID LEVEL SWITCH SIGNAL
26	B	ILLUMINATION CONTROL SIGNAL
27	R	AIR BAG SIGNAL
28	R	SECURITY SIGNAL
30	GR	VEHICLE SPEED SIGNAL (8-PULSE)
32	W	COMMUNICATION SIGNAL (METER → UPPER)
33	LG	COMMUNICATION SIGNAL (UPPER → METER)
34	L	PLUG IN INDICATOR LAMP SIGNAL
38	V	LED HEADLAMP (RH) WARNING SIGNAL
39	LG	LED HEADLAMP (LH) WARNING SIGNAL
40	Y	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)

Connector No.	M68
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FV-NH



Terminal No.	Color of Wire	Signal Name [Specification]
2	L	COMBI SW INPUT 5
3	GR	COMBI SW INPUT 4
4	BR	COMBI SW INPUT 3
5	G	COMBI SW INPUT 2
6	V	COMBI SW INPUT 1
7	GR	KEY CYL UNLK SW
8	R	KEY CYL LOCK SW
9	BR	STOP LAMP SW 1
12	Y	DOOR LK & UNLK SW LOCK
13	BR	DOOR LK & UNLK SW UNLOCK
14	G	OPTICAL SENS
15	W	REAR WINDOW DEF SW
16	R	DIMMER
17	Y	OPTICAL SENS PWR SPLY
18	V	SENS/RECEV GND
21	P	NATS ANTENNA AMP
23	R	SECURITY IND LAMP CONT
25	LG	NATS ANTENNA AMP
29	P	HAZARD SW
30	L	BK DOOR OPENER SW
31	W	DR DOOR UNLK SENS
32	LG	COMBI SW OUTPUT 5
33	Y	COMBI SW OUTPUT 4
34	W	COMBI SW OUTPUT 3
35	R	COMBI SW OUTPUT 2
36	P	COMBI SW OUTPUT 1
37	W	P POSITION
38	SB	RECEIVER COMM
39	L	CAN-H
40	P	CAN-L

Connector No.	M69
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FEA09FV-THA6-SA



Terminal No.	Color of Wire	Signal Name [Specification]
56	P	INT ROOM LAMP PWR SPLY
57	P	BAT FUSE
59	LG	PASS DOOR UNLK OUTPUT
60	V	TURN SIG LH OUTPUT
61	W	TURN SIG RH OUTPUT
63	BR	INT ROOM LAMP CONT
65	V	ALL DOOR LOCK OUTPUT
66	G	DR DOOR UNLK OUTPUT
67	B	GND
68	L	PW PWR SPLY (GN)
69	P	PW PWR SPLY (BAT)
70	Y	BAT (F/L)

# WIPER AND WASHER SYSTEM

< WIRING DIAGRAM >

## WIPER AND WASHER SYSTEM

Connector No.	MT7
Connector Name	WIRE TO WIRE
Connector Type	TH80PV-CS1.6-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
1	GR	-
2	V	-
3	GR	-
4	LG	-
5	W	-
6	W	-
7	V	-
8	P	-
9	SB	-
10	L	-
11	LG	-
12	W	-
13	R	-
14	Y	-
15	R	-
16	GR	-
17	BR	-
18	G	-
19	G	-
20	G	-
21	P	-
22	LG	-
23	GR	-
24	L	-
25	V	-
26	W	-
27	L	-
28	V	-
29	W	-
30	W	-
31	SB	-
32	LG	-
33	V	-
34	L	-
35	SB	-
36	LG	-
37	GR	-
38	GR	-
39	GR	-
40	Y	-
41	R	-
42	W	-
43	SB	-
44	GR	-
45	P	-
46	R	-
47	W	-
48	L	-

44	GR	-
45	P	-
46	R	-
47	W	-
48	L	-
49	G	-
50	L	-
51	L	-
54	W	-
55	G	-
56	BR	-
57	P	-
58	R	-
60	Y	-
61	GR	-
62	SB	-
64	G	-
65	V	-
66	P	-
67	Y	-
68	P	-
69	BR	-
71	Y	-
72	L	-
73	G	-
74	L	-
75	V	-
76	R	-
80	W	-
81	L	-
82	SB	-
83	R	-
84	BR	-
85	R	-
86	GR	-
88	R	-
89	W	-
90	SHIELD	-
91	Y	-
92	BR	-
93	W	-
94	P	-
95	V	-
96	P	-
97	G	-
98	R	-
99	LG	-

JCLWA4775GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

WW

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000006930224

#### OVERALL SEQUENCE

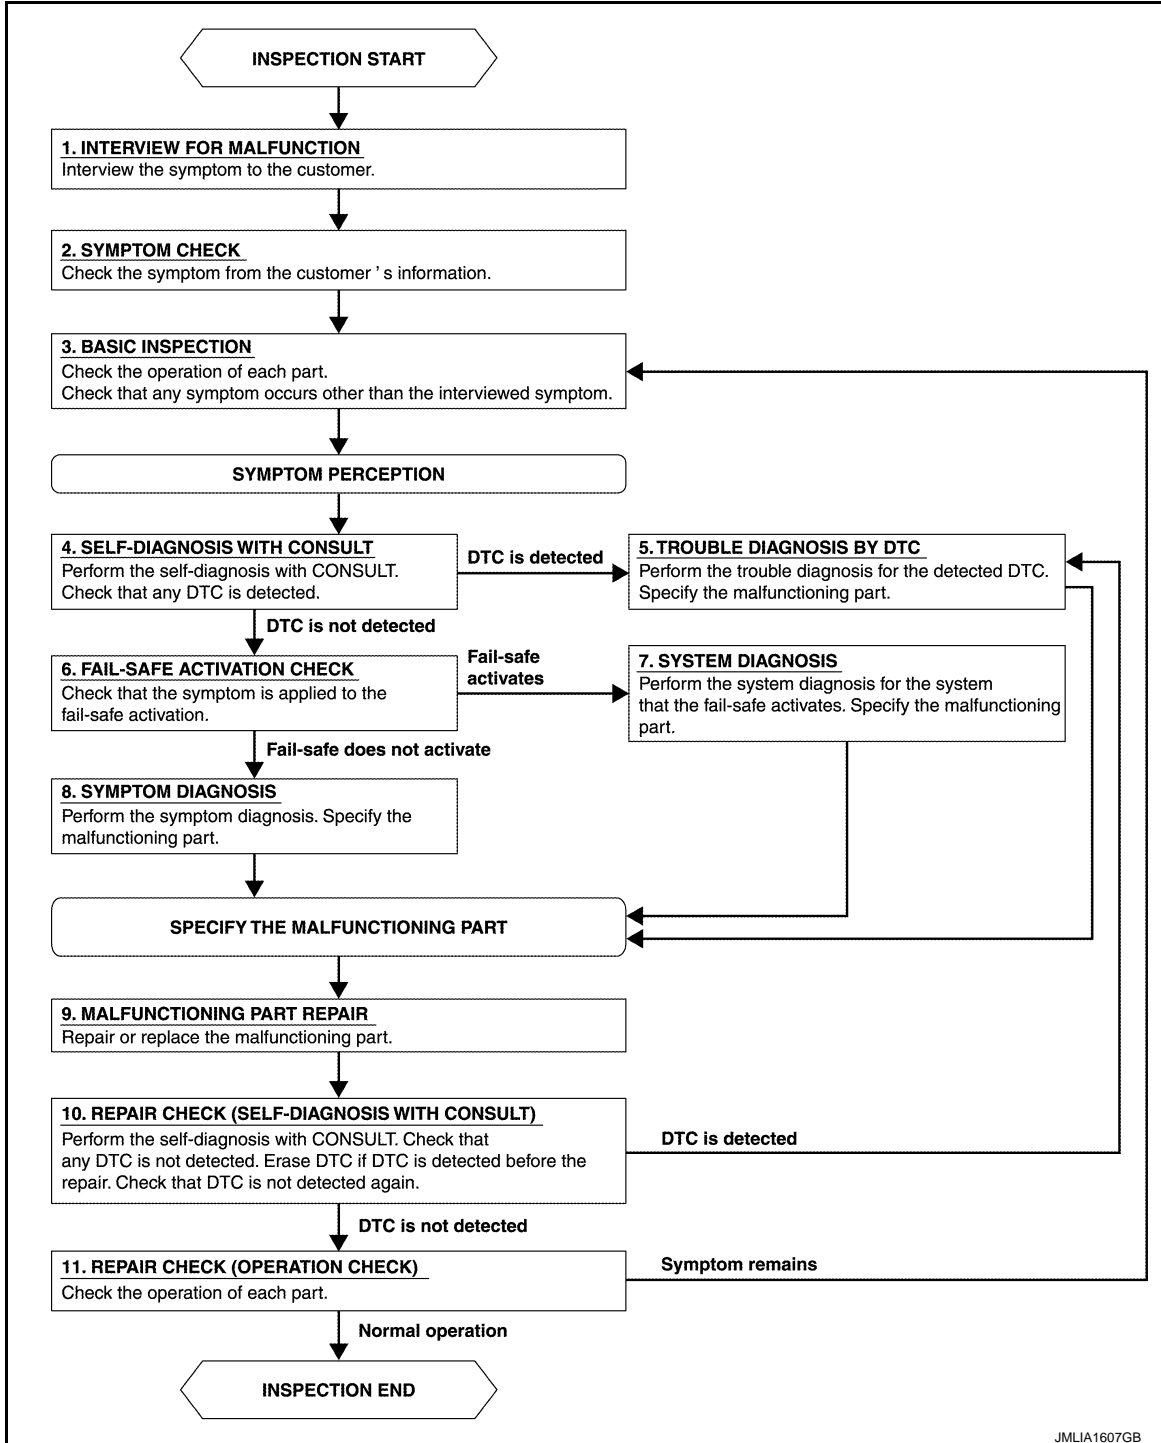

#### DETAILED FLOW

##### 1. INTERVIEW FOR MALFUNCTION

Interview the symptom to the customer.

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

---

>> GO TO 2.

## 2. SYMPTOM CHECK

---

Check the symptom from the customer's information.

>> GO TO 3.

## 3. BASIC INSPECTION

---

Check the operation of each part. Check that any symptom occurs other than the interviewed symptom.

>> GO TO 4.

## 4. SELF-DIAGNOSIS WITH CONSULT

---

Perform the self-diagnosis with CONSULT. Check that any DTC is detected.

Is any DTC detected?

YES >> GO TO 5.

NO >> GO TO 6.

## 5. TROUBLE DIAGNOSIS BY DTC

---

Perform the trouble diagnosis for the detected DTC. Specify the malfunctioning part.

>> GO TO 9.

## 6. FAIL-SAFE ACTIVATION CHECK

---

Check that the symptom is applied to the fail-safe activation.

Does the fail-safe activate?

YES >> GO TO 7.

NO >> GO TO 8.

## 7. SYSTEM DIAGNOSIS

---

Perform the system diagnosis for the system that the fail-safe activates. Specify the malfunctioning part.

>> GO TO 9.

## 8. SYMPTOM DIAGNOSIS

---

Perform the symptom diagnosis. Specify the malfunctioning part.

>> GO TO 9.

## 9. MALFUNCTION PART REPAIR

---

Repair or replace the malfunctioning part.

>> GO TO 10.

## 10. REPAIR CHECK (SELF-DIAGNOSIS WITH CONSULT)

---

Perform the self-diagnosis with CONSULT. Check that any DTC is not detected. Erase DTC if DTC is detected before the repair. Check that DTC is not detected again.

Is any DTC detected?

YES >> GO TO 5.

NO >> GO TO 11.

## 11. REPAIR CHECK (OPERATION CHECK)

---

Check the operation of each part.

Does it operate normally?

YES >> INSPECTION END

NO >> GO TO 3.

A

B

C

D

E

F

G

H

I

J

K

WW

M

N

O

P

# WIPER AND WASHER FUSE

< DTC/CIRCUIT DIAGNOSIS >

## DTC/CIRCUIT DIAGNOSIS

### WIPER AND WASHER FUSE

#### Diagnosis Procedure

INFOID:000000006930225

#### 1. CHECK FUSES

Check that the following fuses is not fusing.

Unit	Location	No.	Capacity
Front wiper motor	IPDM E/R	45	30 A
Washer pump	Fuse block (J/B)	2	10 A

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace the fuse with a new one after repairing the applicable circuit.

# FRONT WIPER MOTOR LO CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## FRONT WIPER MOTOR LO CIRCUIT

### Component Function Check

INFOID:000000006930226

#### 1. CHECK FRONT WIPER LO OPERATION

④ With CONSULT

1. Select "FRONT WIPER" of IPDM E/R active test item.
2. With operating the test item, check front wiper operation.

**Lo** : Front wiper (LO) operation

**Off** : Stop the front wiper.

Is front wiper (LO) operation normally?

- YES >> Front wiper motor LO circuit is normal.  
 NO >> Refer to [WW-31, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000006930227

#### 1. CHECK FRONT WIPER MOTOR (LO) OUTPUT VOLTAGE

④ With CONSULT

1. Turn power switch OFF.
2. Disconnect front wiper motor connector.
3. Turn power switch ON.
4. Select "FRONT WIPER" of IPDM E/R active test item.
5. With operating the test item, check voltage between front wiper motor harness connector and ground.

(+)		(-)	Condition	Voltage (Approx.)	
Front wiper motor					
Connector	Terminal				
E20	1	Ground	FRONT WIPER	Lo	Battery voltage
				Off	0 V

Is the inspection result normal?

- YES >> Replace front wiper motor.  
 NO >> GO TO 2.

#### 2. CHECK FRONT WIPER MOTOR (LO) CIRCUIT

1. Turn power switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front wiper motor harness connector.

IPDM E/R		Front wiper motor		Continuity
Connector	Terminal	Connector	Terminal	
E14	45	E20	1	Existed

4. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E14	45		Not existed

Is the inspection result normal?

- YES >> Replace IPDM E/R.  
 NO >> Repair or replace harness.

# FRONT WIPER MOTOR HI CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## FRONT WIPER MOTOR HI CIRCUIT

### Component Function Check

INFOID:000000006930228

#### 1. CHECK FRONT WIPER HI OPERATION

④ With CONSULT

1. Select "FRONT WIPER" of IPDM E/R active test item.
2. With operating the test item, check front wiper operation.

**Hi** : Front wiper (HI) operation

**Off** : Stop the front wiper.

Is front wiper (HI) operation normally?

- YES >> Front wiper motor HI circuit is normal.  
NO >> Refer to [WW-32, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000006930229

#### 1. CHECK FRONT WIPER MOTOR (HI) OUTPUT VOLTAGE

④ With CONSULT

1. Turn power switch OFF.
2. Disconnect front wiper motor connector.
3. Turn power switch ON.
4. Select "FRONT WIPER" of IPDM E/R active test item.
5. With operating the test item, check voltage between front wiper motor harness connector and ground.

(+)		(-)	Condition		Voltage (Approx.)
Front wiper motor					
Connector	Terminal				
E20	4	Ground	FRONT WIPER	Hi	Battery voltage
				Off	0 V

Is the inspection result normal?

- YES >> Replace front wiper motor.  
NO >> GO TO 2.

#### 2. CHECK FRONT WIPER MOTOR (HI) CIRCUIT

1. Turn power switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front wiper motor harness connector.

IPDM E/R		Front wiper motor		Continuity
Connector	Terminal	Connector	Terminal	
E14	39	E20	4	Existed

4. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E14	39		Not existed

Is the inspection result normal?

- YES >> Replace IPDM E/R.  
NO >> Repair or replace harness.



# FRONT WIPER AUTO STOP SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## FRONT WIPER AUTO STOP SIGNAL CIRCUIT

### Component Function Check

INFOID:000000006930230

#### 1. CHECK FRONT WIPER (AUTO STOP) SIGNAL

④ With CONSULT

1. Select "WIP AUTO STOP" of IPDM E/R data monitor item.
2. Operate the front wiper.
3. With the front wiper operation, check the monitor status.

Monitor item	Condition		Monitor status
WIP AUTO STOP	Front wiper motor	Stop position	STOP P
		Except stop position	ACT P

Is the status of item normal?

- YES >> Auto stop signal circuit is normal.  
 NO >> Refer to [WW-33. "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000006930231

#### 1. CHECK IPDM E/R OUTPUT VOLTAGE

1. Turn power switch OFF.
2. Disconnect front wiper motor connector.
3. Turn power switch ON.
4. Check voltage between front wiper motor harness connector and ground.

(+)		(-)	Voltage (Approx.)
Front wiper motor			
Connector	Terminal	Ground	Battery voltage
E20	5		

Is the inspection result normal?

- YES >> Replace front wiper motor.  
 NO >> GO TO 2.

#### 2. CHECK FRONT WIPER MOTOR (AUTO STOP) CIRCUIT

1. Turn power switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front wiper motor harness connector.

IPDM E/R		Front wiper motor		Continuity
Connector	Terminal	Connector	Terminal	
E13	25	E20	5	Existed

4. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E13	25		Not existed

Is the inspection result normal?

- YES >> Replace IPDM E/R.  
 NO >> Repair or replace harness.

# FRONT WIPER MOTOR GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## FRONT WIPER MOTOR GROUND CIRCUIT

### Diagnosis Procedure

INFOID:000000006930232

#### 1. CHECK FRONT WIPER MOTOR GROUND CIRCUIT

1. Turn power switch OFF.
2. Disconnect front wiper motor connector.
3. Check continuity between front wiper motor harness connector and ground.

Front wiper motor		Ground	Continuity
Connector	Terminal		Existed
E20	2		Existed

Is the inspection result normal?

- YES >> INSPECTION END  
NO >> Repair or replace harness.

# WASHER SWITCH

< DTC/CIRCUIT DIAGNOSIS >

## WASHER SWITCH


### Component Inspection

INFOID:000000006930235

### 1. CHECK WASHER SWITCH

1. Turn power switch OFF.
2. Disconnect combination switch connector.
3. Check continuity between the combination switch terminals.

- A : Terminal 4
- B : Terminal 6
- C : Terminal 3
- D : Terminal 1

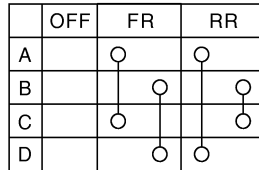

JPLIA0164GB

Combination switch		Condition	Continuity
Terminal			
3	4	Front washer switch ON	Existed
1	6		
1	4	Rear washer switch ON	
6	3		

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace combination switch (Wiper and washer switch).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K

WW

M  
N  
O  
P

# REAR WIPER MOTOR CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## REAR WIPER MOTOR CIRCUIT

### Component Function Check

INFOID:000000006930236

#### 1. CHECK REAR WIPER ON OPERATION

④ With CONSULT

1. Select "RR WIPER" of BCM active test item.
2. With operating the test item, check rear wiper operation.

**On** : Rear wiper ON operation

**Off** : Stop the rear wiper.

Is rear wiper operation normal?

- YES >> Rear wiper motor circuit is normal.  
NO >> Refer to [WW-36, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000006930237

#### 1. CHECK REAR WIPER MOTOR OUTPUT VOLTAGE

④ With CONSULT

1. Turn power switch OFF.
2. Disconnect rear wiper motor connector.
3. Turn power switch ON.
4. Select "RR WIPER" of BCM active test item.
5. With operating the test item, check voltage between rear wiper motor harness connector and ground.

(+)		(-)	Condition		Voltage (Approx.)
Rear wiper motor					
Connector	Terminal	Ground	REAR WIPER	On	Battery voltage
D114	2				

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> GO TO 2.

#### 2. CHECK REAR WIPER MOTOR CIRCUIT

1. Turn power switch OFF.
2. Disconnect BCM connector.
3. Check continuity between BCM harness connector and rear wiper motor harness connector.

BCM		Rear wiper motor		Continuity
Connector	Terminal	Connector	Terminal	
B10	54	D114	2	Existed

4. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
B10	54		Not existed

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-76, "Removal and Installation"](#).  
NO >> Repair or replace harness.

#### 3. CHECK REAR WIPER MOTOR GROUND OPEN CIRCUIT

Check continuity between rear wiper motor harness connector and ground.

# REAR WIPER MOTOR CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

Rear wiper motor		Ground	Continuity
Connector	Terminal		
D114	4		Existed

Is the inspection result normal?

- YES >> Replace rear wiper motor.
- NO >> Repair or replace harness.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

# REAR WIPER AUTO STOP SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## REAR WIPER AUTO STOP SIGNAL CIRCUIT

### Component Function Check

INFOID:000000006930238

#### 1. CHECK REAR WIPER (AUTO STOP) OPERATION

④ With CONSULT

1. Select "WIPER" of BCM data monitor item.
2. Operate the rear wiper.
3. Check that "RR WIPER STOP" changes to "On" and "Off" linked with the wiper operation.

Monitor item	Condition		Monitor status
RR WIPER STOP	Rear wiper motor	Stop position	On
		Except stop position	Off

Is the status of item normal?

- YES >> Rear wiper auto stop signal circuit is normal.  
NO >> Refer to [WW-38, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000006930239

#### 1. CHECK REAR WIPER MOTOR (AUTO STOP) OUTPUT VOLTAGE

1. Turn power switch OFF.
2. Disconnect rear wiper motor connector.
3. Turn power switch ON.
4. Check voltage between rear wiper motor harness connector and ground.

(+)		(-)	Voltage (Approx.)
Rear wiper motor			
Connector	Terminal		
D114	3	Ground	Battery voltage

Is the inspection result normal?

- YES >> Replace rear wiper motor.  
NO >> GO TO 2.

#### 2. CHECK REAR WIPER MOTOR (AUTO STOP) CIRCUIT

1. Turn power switch OFF.
2. Disconnect BCM connector.
3. Check continuity between BCM harness connector and rear wiper motor harness connector.

BCM		Rear wiper motor		Continuity
Connector	Terminal	Connector	Terminal	
B10	44	D114	3	Existed

4. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
B10	44		Not existed

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-76, "Removal and Installation"](#).  
NO >> Repair or replace harness.

# WIPER AND WASHER SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

## SYMPTOM DIAGNOSIS

### WIPER AND WASHER SYSTEM SYMPTOMS

#### Symptom Table

INFOID:000000007034960

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K

WW

M  
N  
O  
P

Symptom		Probable malfunction location	Inspection item	
Front wiper does not operate	HI only	<ul style="list-style-type: none"> <li>Combination switch</li> <li>Harness between combination switch and BCM</li> <li>BCM</li> </ul>	Combination switch Refer to <a href="#">BCS-75, "Symptom Table"</a> .	
		<ul style="list-style-type: none"> <li>IPDM E/R</li> <li>Harness between IPDM E/R and front wiper motor</li> <li>Front wiper motor</li> </ul>	Front wiper motor (HI) circuit Refer to <a href="#">WW-32, "Component Function Check"</a> .	
		Front wiper request signal <ul style="list-style-type: none"> <li>BCM</li> <li>IPDM E/R</li> </ul>	IPDM E/R Data monitor "FR WIP REQ"	
	LO and INT	<ul style="list-style-type: none"> <li>Combination switch</li> <li>Harness between combination switch and BCM</li> <li>BCM</li> </ul>	Combination switch Refer to <a href="#">BCS-75, "Symptom Table"</a> .	
		<ul style="list-style-type: none"> <li>IPDM E/R</li> <li>Harness between IPDM E/R and front wiper motor</li> <li>Front wiper motor</li> </ul>	Front wiper motor (LO) circuit Refer to <a href="#">WW-31, "Component Function Check"</a> .	
		Front wiper request signal <ul style="list-style-type: none"> <li>BCM</li> <li>IPDM E/R</li> </ul>	IPDM E/R Data monitor "FR WIP REQ"	
	INT only	<ul style="list-style-type: none"> <li>Combination switch</li> <li>Harness between combination switch and BCM</li> <li>BCM</li> </ul>	Combination switch Refer to <a href="#">BCS-75, "Symptom Table"</a> .	
		Front wiper request signal <ul style="list-style-type: none"> <li>BCM</li> <li>IPDM E/R</li> </ul>	IPDM E/R Data monitor "FR WIP REQ"	
	HI, LO and INT	SYMPTOM DIAGNOSIS Refer to <a href="#">WW-42, "Diagnosis Procedure"</a> .		
	Front wiper does not stop	HI only	<ul style="list-style-type: none"> <li>Combination switch</li> <li>BCM</li> </ul>	Combination switch Refer to <a href="#">BCS-75, "Symptom Table"</a> .
Front wiper request signal <ul style="list-style-type: none"> <li>BCM</li> <li>IPDM E/R</li> </ul>			IPDM E/R Data monitor "FR WIP REQ"	
IPDM E/R			—	
LO only		<ul style="list-style-type: none"> <li>Combination switch</li> <li>BCM</li> </ul>	Combination switch Refer to <a href="#">BCS-75, "Symptom Table"</a> .	
		Front wiper request signal <ul style="list-style-type: none"> <li>BCM</li> <li>IPDM E/R</li> </ul>	IPDM E/R Data monitor "FR WIP REQ"	
		IPDM E/R	—	
INT only		<ul style="list-style-type: none"> <li>Combination switch</li> <li>BCM</li> </ul>	Combination switch refer to <a href="#">BCS-75, "Symptom Table"</a> .	
		Front wiper request signal <ul style="list-style-type: none"> <li>BCM</li> <li>IPDM E/R</li> </ul>	IPDM E/R Data monitor "FR WIP REQ"	

# WIPER AND WASHER SYSTEM SYMPTOMS

## < SYMPTOM DIAGNOSIS >

Symptom		Probable malfunction location	Inspection item
Front wiper does not operate normally	Intermittent adjustment cannot be performed	<ul style="list-style-type: none"> <li>• Combination switch</li> <li>• Harness between combination switch and BCM</li> <li>• BCM</li> </ul>	Combination switch Refer to <a href="#">BCS-75, "Symptom Table"</a> .
		BCM	—
	Intermittent control linked with vehicle speed cannot be performed	Check the wiper setting is linked with vehicle speed. Refer to <a href="#">WW-17, "WIPER : CONSULT Function - WIPER"</a> .	
	Service positioning operation does not operate	<ul style="list-style-type: none"> <li>• Combination switch</li> <li>• BCM</li> <li>• IPDM E/R</li> </ul>	Combination switch Refer to <a href="#">BCS-75, "Symptom Table"</a> .
	Wiper is not linked to the washer operation	<ul style="list-style-type: none"> <li>• Combination switch</li> <li>• Harness between combination switch and BCM</li> <li>• BCM</li> </ul>	Combination switch Refer to <a href="#">BCS-75, "Symptom Table"</a> .
BCM		—	
Rear wiper does not operate	ON only	<ul style="list-style-type: none"> <li>• IPDM E/R</li> <li>• Harness between IPDM E/R and front wiper motor</li> <li>• Front wiper motor</li> </ul>	Front wiper auto stop signal circuit Refer to <a href="#">WW-33, "Component Function Check"</a> .
		<ul style="list-style-type: none"> <li>• Combination switch</li> <li>• Harness between combination switch and BCM</li> <li>• BCM</li> </ul>	Combination switch Refer to <a href="#">BCS-75, "Symptom Table"</a> .
	INT only	<ul style="list-style-type: none"> <li>• Combination switch</li> <li>• Harness between combination switch and BCM</li> <li>• BCM</li> </ul>	Combination switch Refer to <a href="#">BCS-75, "Symptom Table"</a> .
		<ul style="list-style-type: none"> <li>• Combination switch</li> <li>• Harness between combination switch and BCM</li> <li>• BCM</li> </ul>	Combination switch Refer to <a href="#">BCS-75, "Symptom Table"</a> .
	ON and INT	<ul style="list-style-type: none"> <li>• BCM</li> <li>• Harness between rear wiper motor and BCM</li> <li>• Harness between rear wiper motor and ground</li> <li>• Rear wiper motor</li> </ul>	Combination switch Refer to <a href="#">BCS-75, "Symptom Table"</a> .
Rear wiper does not stop	ON only	<ul style="list-style-type: none"> <li>• Combination switch</li> <li>• BCM</li> </ul>	Rear wiper motor circuit Refer to <a href="#">WW-36, "Component Function Check"</a> .
	INT only	<ul style="list-style-type: none"> <li>• Combination switch</li> <li>• BCM</li> </ul>	Combination switch Refer to <a href="#">BCS-75, "Symptom Table"</a> .
Rear wiper does not operate normally	Wiper is not linked to the washer operation	<ul style="list-style-type: none"> <li>• Combination switch</li> <li>• Harness between rear wiper motor and BCM</li> <li>• BCM</li> </ul>	Combination switch Refer to <a href="#">BCS-75, "Symptom Table"</a> .
		BCM	—
	Rear wiper does not return to the stop position. [Stops after a five-second operation. (Fail-safe)]	<ul style="list-style-type: none"> <li>• BCM</li> <li>• Harness between rear wiper motor and BCM</li> <li>• Rear wiper motor</li> </ul>	Rear wiper auto stop signal circuit Refer to <a href="#">WW-38, "Component Function Check"</a> .



# NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

## NORMAL OPERATING CONDITION

### Description

INFOID:000000006930242

#### FRONT WIPER MOTOR PROTECTION FUNCTION

- IPDM E/R may stop the front wiper to protect the front wiper motor if any obstruction (operation resistance) such as a large amount of snow is detected during the front wiper operation.
- At that time turn OFF the front wiper and remove the foreign object. Then wait for approximately 20 seconds or more and reactivate the front wiper. The wiper will operate normally.

#### REAR WIPER MOTOR PROTECTION FUNCTION

- BCM may stop rear wiper to protect the rear wiper motor when the rear wiper is stopped for 5 seconds or more due to a snowfall.
- Rear wiper operates normally one minute after the obstacles are removed with rear wiper OFF.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

# FRONT WIPER DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

## FRONT WIPER DOES NOT OPERATE

### Description

INFOID:000000007038024

The front wiper does not operate under any operation conditions.

### Diagnosis Procedure

INFOID:000000007038025

#### 1. CHECK WIPER RELAY OPERATION

④ With CONSULT

1. Select "FRONT WIPER" of IPDM E/R active test item.
2. With operating the test item, check front wiper operation.

**Lo** : Front wiper LO operation

**Hi** : Front wiper HI operation

**Off** : Stop the front wiper.

Is front wiper operation normally?

YES >> GO TO 5.

NO >> GO TO 2.

#### 2. CHECK FRONT WIPER MOTOR FUSE

Check that the following fuses is not fusing.

Unit	Location	No.	Capacity
Front wiper motor	IPDM E/R	45	30 A
Washer pump	Fuse block (J/B)	2	10 A

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the fuse after repairing the applicable circuit.

#### 3. CHECK FRONT WIPER MOTOR GROUND CIRCUIT

Check front wiper motor ground circuit. Refer to [WW-34, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness.

#### 4. CHECK FRONT WIPER MOTOR INPUT VOLTAGE

④ With CONSULT

1. Turn power switch OFF.
2. Disconnect front wiper motor connector.
3. Turn power switch ON.
4. Select "FRONT WIPER" of IPDM E/R active test item.
5. With operating the test item, check voltage between front wiper motor harness connector and ground.

(+)		(-)	Condition	Voltage (Approx.)	
Connector	Terminal				
E20	1	Ground	FRONT WIPER	Lo	Battery voltage
			Off	0 V	
	4		FRONT WIPER	Hi	Battery voltage
			Off	0 V	

Is the inspection result normal?

YES >> Replace front wiper motor.

NO >> Replace IPDM E/R.

# FRONT WIPER DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

## 5. CHECK FRONT WIPER REQUEST SIGNAL INPUT

④ With CONSULT

1. Select "FR WIP REQ" of IPDM E/R data monitor item.
2. Switch the front wiper switch to HI and LO.
3. With operating the front wiper switch, check the status of "FR WIP REQ".

Monitor item	Condition		Monitor status
FR WIP REQ	Front wiper switch HI	On	Hi
		Off	Stop
	Front wiper switch LO	On	Low
		Off	Stop

Is the inspection result normal?

YES >> Replace IPDM E/R.

NO >> GO TO 6.

## 6. CHECK COMBINATION SWITCH

Perform the inspection of the combination switch. Refer to [BCS-75, "Symptom Table"](#).

Is combination switch normal?

YES >> Replace BCM. Refer to [BCS-76, "Removal and Installation"](#).

NO >> Repair or replace the applicable parts.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

# WASHER TANK


< REMOVAL AND INSTALLATION >


## REMOVAL AND INSTALLATION

### WASHER TANK

Exploded View

INFOID:000000006930245

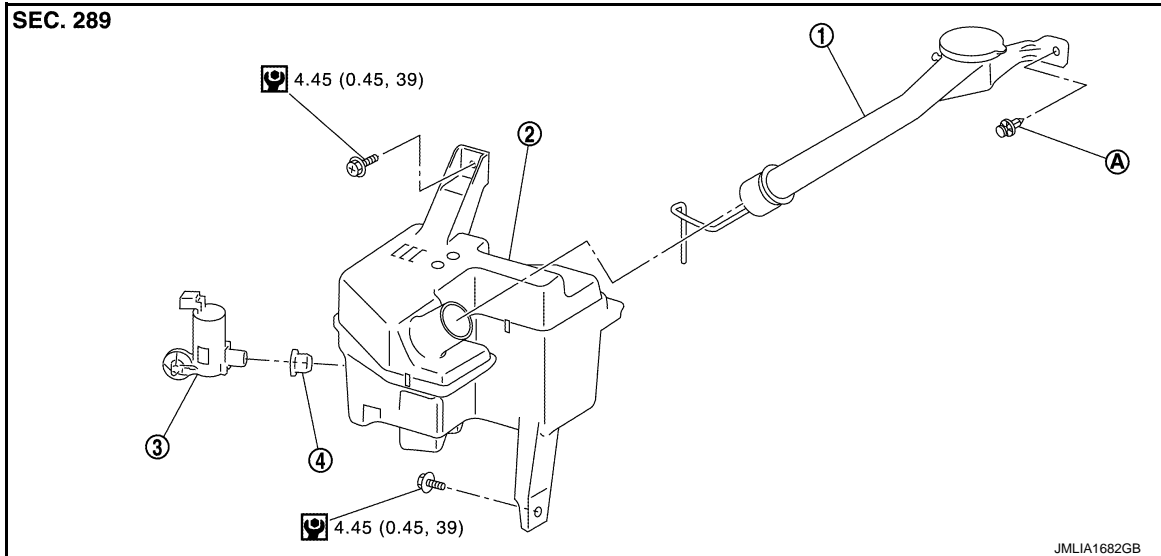

1. Washer tank inlet
2. Washer tank
3. Washer pump
4. Packing
- A : Clip
-  : N·m (kg·m, in·lb)

### Removal and Installation

INFOID:000000006930246

#### REMOVAL

1. Fully open hood.
2. Remove washer tank inlet fixing clip.
3. Pull out washer tank inlet from washer tank.
4. Remove front bumper fascia. Refer to [EXT-12, "Removal and Installation"](#).
5. Disconnect washer pump harness connector and remove the fixing clip.
6. Disconnect front washer tube and rear washer tube.
7. Remove washer tank mounting bolts.
8. Remove washer tank.

#### INSTALLATION

Note the following item, and then install in the reverse order of removal.

#### **CAUTION:**

**Add water up to the top of washer tank inlet after installing and check that there is no leakage.**


# WASHER PUMP


< REMOVAL AND INSTALLATION >

## WASHER PUMP

### Exploded View

INFOID:000000006930247

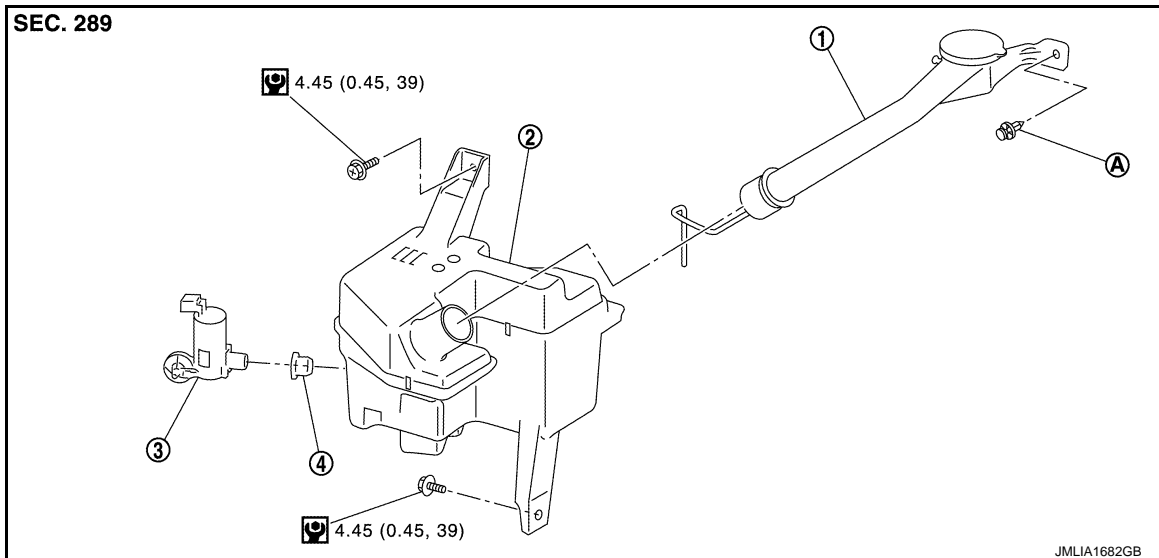

1. Washer tank inlet                      2. Washer tank                      3. Washer pump
4. Packing
- A : Clip
-  : N·m (kg·m, in·lb)

### Removal and Installation

INFOID:000000006930248

#### REMOVAL

1. Remove front bumper fascia. Refer to [EXT-12. "Removal and Installation"](#).
2. Disconnect washer pump harness connector.
3. Disconnect front washer tube and rear washer tube.
4. Remove washer pump from the washer tank.
5. Remove packing from washer tank.

#### INSTALLATION

Note the following items, and then install in the reverse order of removal.

#### CAUTION:

- Check that there is no leakage after installation or replace packing with new part if it has been damaged.
- Never twist the packing when installing the washer pump to prevent damage to the part.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW


# FRONT WASHER NOZZLE AND TUBE

< REMOVAL AND INSTALLATION >

## FRONT WASHER NOZZLE AND TUBE

Exploded View


INFOID:000000006930249

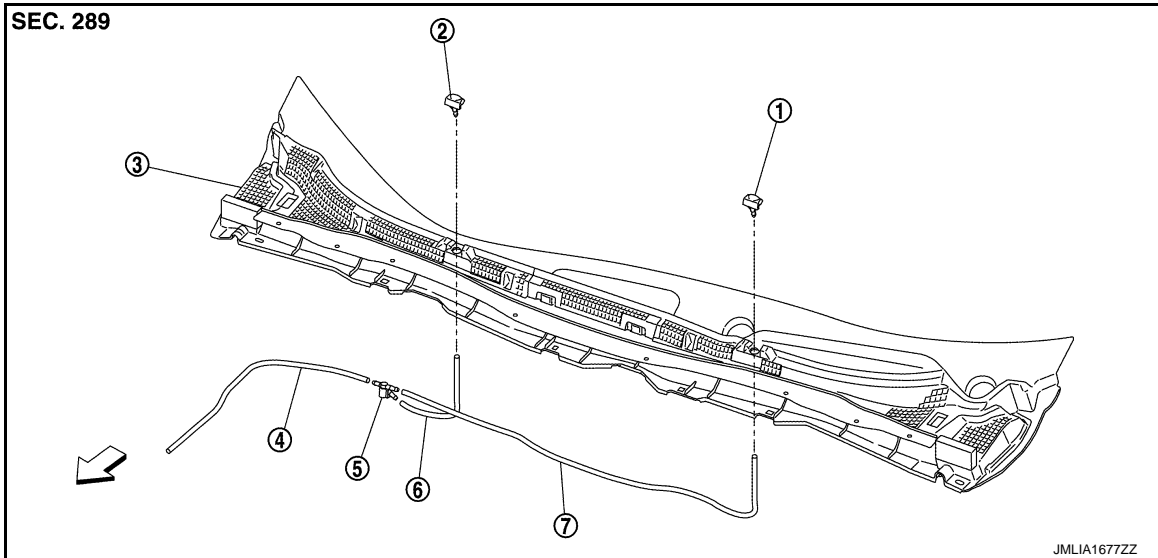

- |                                  |                           |                         |
|----------------------------------|---------------------------|-------------------------|
| 1. Front washer nozzle LH        | 2. Front washer nozzle RH | 3. Cowl top cover       |
| 4. Front washer tube (tank side) | 5. Check valve            | 6. Front washer tube RH |
| 7. Front washer tube LH          |                           |                         |
- ← : Vehicle front

Hydraulic Layout

INFOID:000000006930250

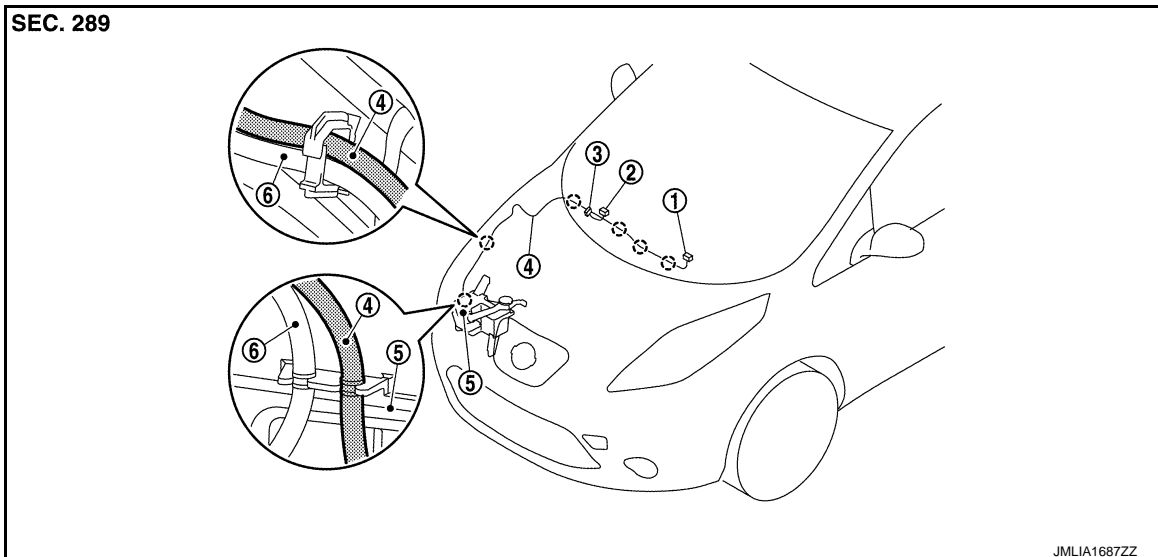

- |                           |                           |                     |
|---------------------------|---------------------------|---------------------|
| 1. Front washer nozzle LH | 2. Front washer nozzle RH | 3. Check valve      |
| 4. Front washer tube      | 5. Washer tank            | 6. Rear washer tube |
- ⊖ : Clip

Removal and Installation

INFOID:000000006930251


### REMOVAL

1. Fully open hood assembly.

# FRONT WASHER NOZZLE AND TUBE

## < REMOVAL AND INSTALLATION >

2. Remove cowl top cover (2). Refer to [EXT-17, "Removal and Installation"](#).
3. Remove front washer tube (3) from front washer nozzle (1).
4. Press front washer nozzle fixing pawls toward the direction shown by the arrows 2 and pull up to remove.

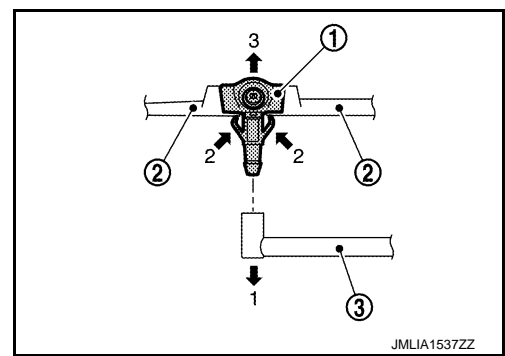

## INSTALLATION

1. Install front washer nozzle into the cowl top cover.  
**CAUTION:**  
**The spray positions differ, check that left and right nozzles are installed correctly.**
2. Connect front washer tube to the front washer nozzle.
3. Adjust the front washer nozzle spray position. Refer to [WW-47, "Inspection and Adjustment"](#).


## Inspection and Adjustment

INFOID:000000006930252

## INSPECTION

### Washer Nozzle Inspection

Check that air can pass through the hose by blowing forward (toward the nozzle), and check that air cannot pass through by sucking.

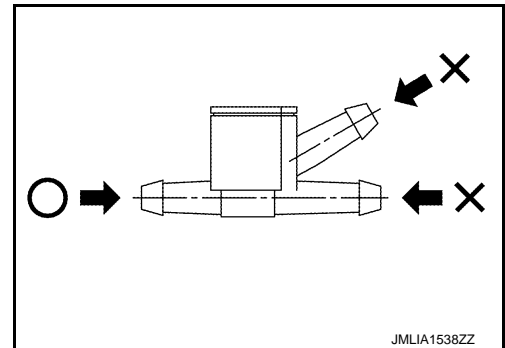

## ADJUSTMENT

### Washer Nozzle Spray Position Adjustment

Adjust spray positions to match the positions shown in the figure.


#### **NOTE:**

The spray position in the passenger side is similar to the one in the driver side.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
WW  
M  
N  
O  
P

# FRONT WASHER NOZZLE AND TUBE

## < REMOVAL AND INSTALLATION >

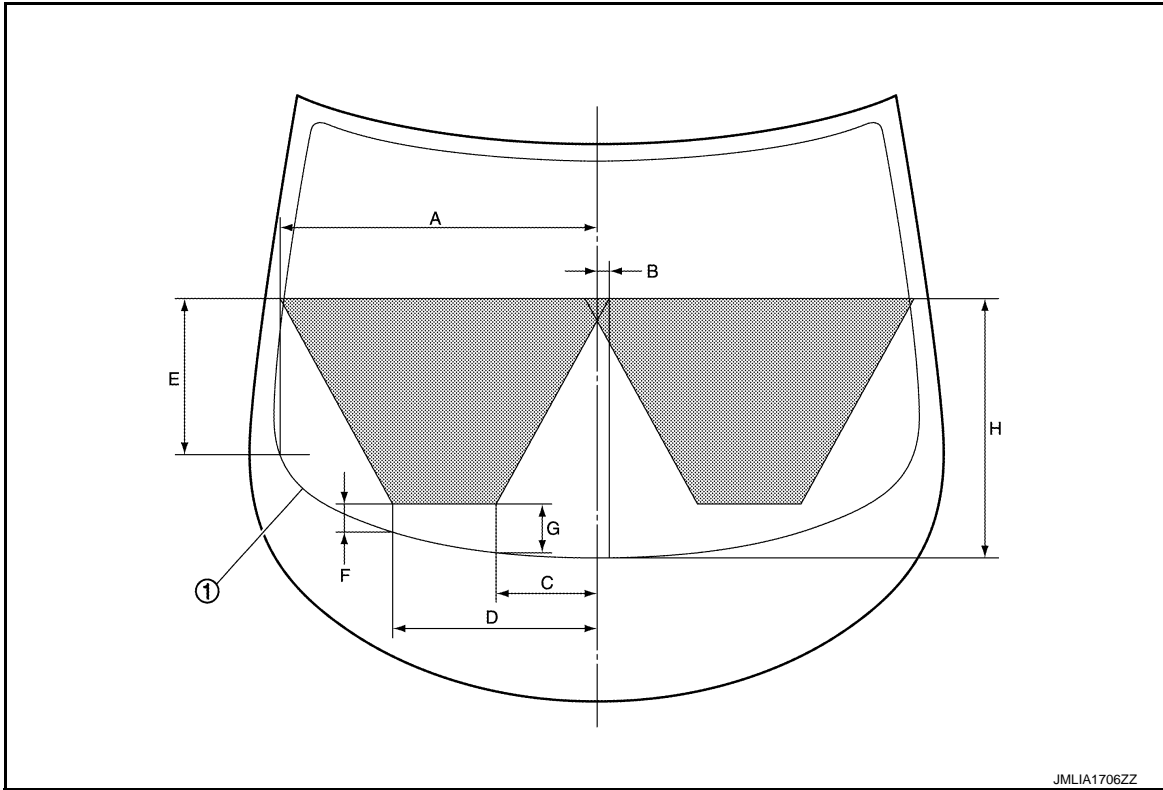

1. Black printed frame line

 : Spray area

Unit: mm (in)

Driver and Passenger side

A	B	C	D	E	F	G	H
626.0 (24.65)	29.2 (1.15)	193.1 (7.60)	399.7 (15.74)	344.0 (13.54)	58.4 (2.30)	105.4 (4.15)	547.3 (21.55)

### CAUTION:


- Use washer nozzle adjuster\* (A) for nozzle adjustment.

- Never use needle or small pin.

(Washer nozzle adjuster is included with shipment of nozzle)

### NOTE:

If wax or dust gets into the front washer nozzle (1), remove wax or dust with a needle or small pin.

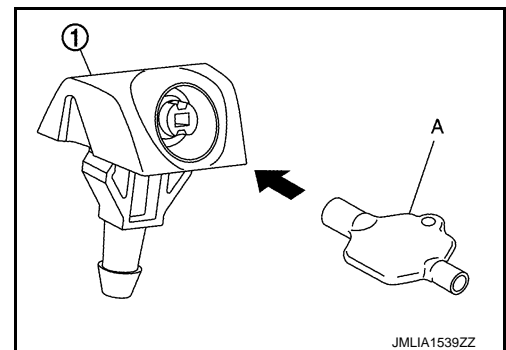




# FRONT WIPER ARM

< REMOVAL AND INSTALLATION >


## FRONT WIPER ARM


Exploded View


INFOID:000000006930253

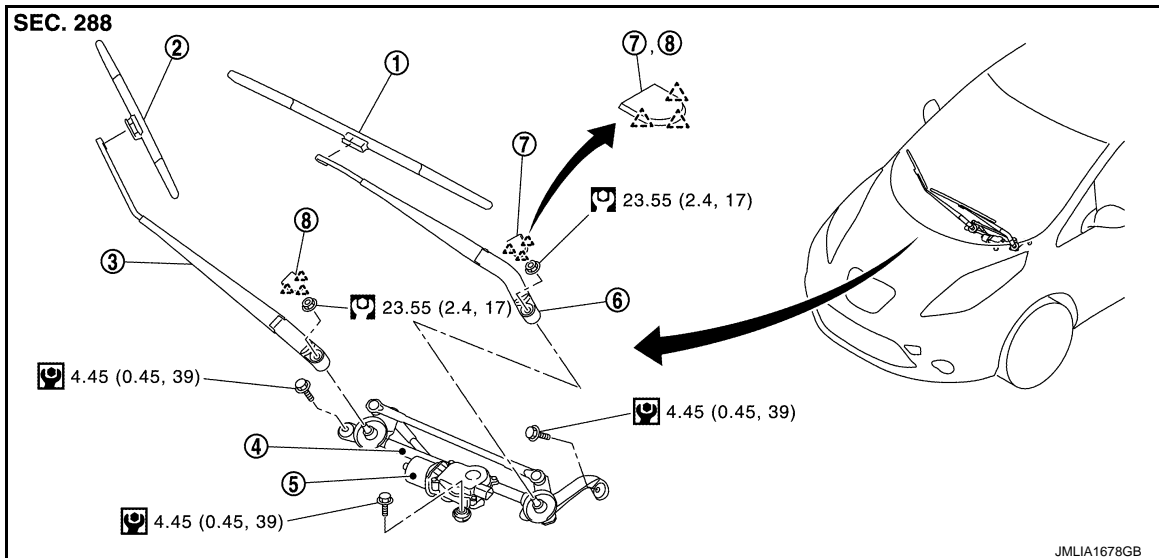

- |                               |                           |                       |
|-------------------------------|---------------------------|-----------------------|
| 1. Front wiper blade LH       | 2. Front wiper blade RH   | 3. Front wiper arm RH |
| 4. Front wiper drive assembly | 5. Front wiper motor      | 6. Front wiper arm LH |
| 7. Front wiper arm cap LH     | 8. Front wiper arm cap RH |                       |

 : Pawl

 : N-m (kg-m, in-lb)

 : N-m (kg-m, ft-lb)

## Removal and Installation


INFOID:000000006930254

### REMOVAL

1. Operate front wiper to move it to the auto stop position.
2. Open the hood.
3. Remove front wiper arm caps.
4. Remove front wiper arm mounting nuts.
5. Raise front wiper arm, and then remove front wiper arm from the vehicle.

### INSTALLATION

1. Clean wiper arm mount as shown in the figure to prevent nuts from being loosened.
2. Operate front wiper motor to move the front wiper to the auto stop position.
3. Adjust front wiper blade position. Refer to [WW-49, "Adjustment"](#).
4. Install front wiper arm by tightening the mounting nuts.
5. Inject the washer fluid.
6. Operate front wiper to move it to the auto stop position.
7. Check that the front wiper blades stop at the specified position.
8. Install front wiper arm caps.

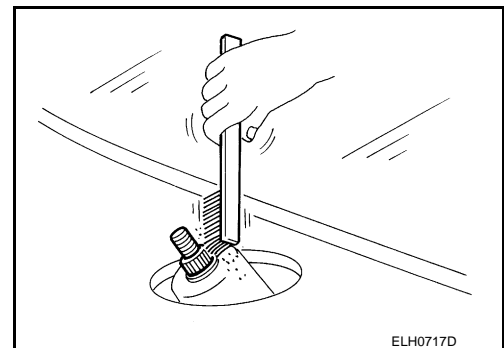

## Adjustment


INFOID:000000006930255

### WIPER BLADE POSITION ADJUSTMENT

# FRONT WIPER ARM

## < REMOVAL AND INSTALLATION >

Clearance between the end of cowl top cover/ front fender protector and the top of wiper blade center

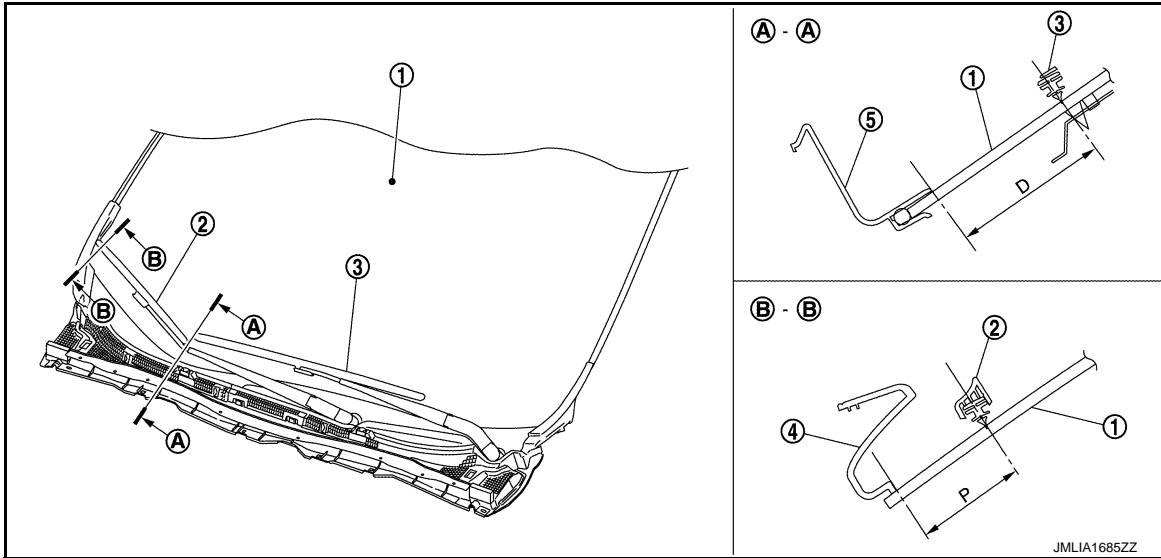

1. Windshield glass assembly

2. Front wiper blade RH

3. Front wiper blade LH

4. Front fender cover

5. Cowl top cover

Standard clearance

**D : 86.2 ± 7.5 mm (3.394 ± 0.295 in)**

**P : 48.5 ± 7.5 mm (1.909 ± 0.295 in)**


# FRONT WIPER BLADE

< REMOVAL AND INSTALLATION >

## FRONT WIPER BLADE

Exploded View

INFOID:000000006930256

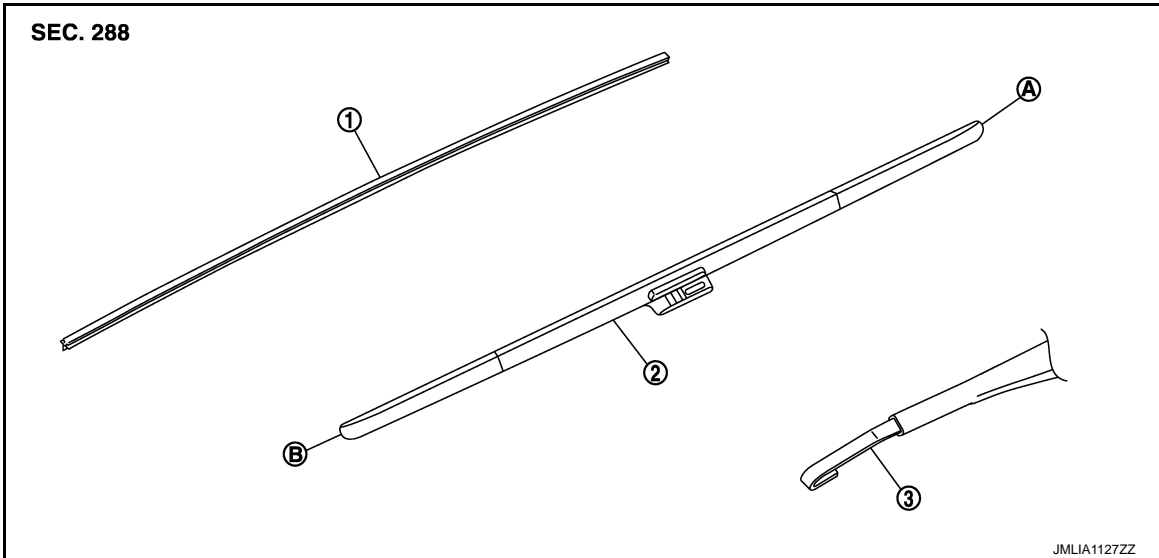

1. Wiper refill  
A : Wiper blade end

2. Wiper blade  
B : Wiper blade tip

3. Wiper arm

## Removal and Installation


INFOID:000000006930257

### REMOVAL

1. Push up the lever (A) of wiper blade (1), while sliding wiper blade toward the direction of the arrow, to remove it from wiper arm (2).

**CAUTION:**

**Be careful not to drop the wiper blade onto the windshield glass to prevent damage to the windshield glass.**

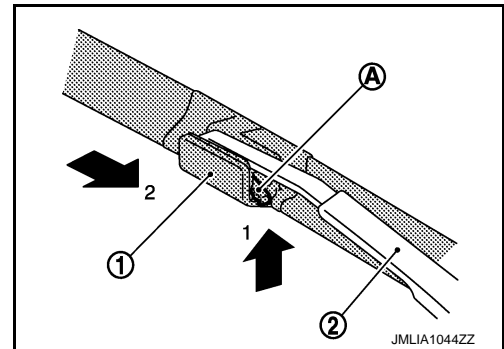


### INSTALLATION

1. Install wiper blade into wiper arm.
2. Install wiper arm.

### Replacement

INFOID:000000006930258

1. Hold the rip of old wiper refill (1) at the rear end of the wiper blade with long-nose pliers, and pull out the wiper refill to the direction (A).

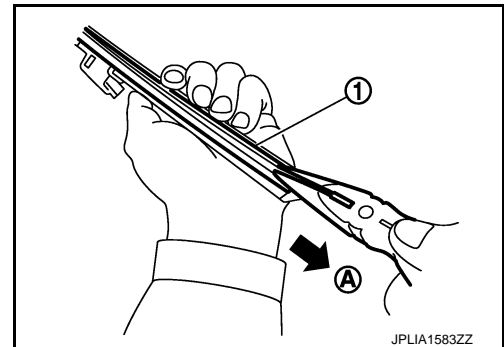

## FRONT WIPER BLADE


### < REMOVAL AND INSTALLATION >

2. Insert the tip of new wiper refill (1) into the rear end of wiper blade (2). Slide the new wiper refill to the direction shown by the arrow while pressing the new wiper refill onto the wiper blade rear end.

**NOTE:**

- Insert the wiper refill to be held securely by tab of wiper blade as shown in section.
- After the wiper refill is fully inserted, remove the holder\* (3).

\*: Attached to service parts.


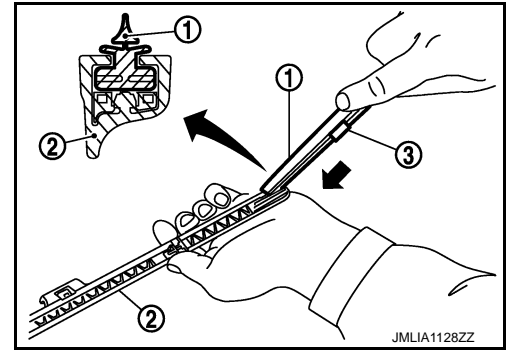


3. Insert the new wiper refill toward the direction shown by the mark "←" until the stopper at the rear end of wiper refill fits in the "SET" mark tab on wiper blade.
4. Untwist the twisted wiper refill at the rear end of wiper blade, if any.
5. Check the following items after replacing wiper refill.
  - Wiper refill is not twisted at all.
  - Wiper refill thoroughly fits in the tab on wiper blade.
  - Wiper refill is inserted from the proper direction.

**NOTE:**

When the vertebra is detached.

- Insert the vertebra (1) into the wiper blade to the same bending direction.
- If a vertebra has a notch, fit it to a protrusion inside the wiper refill.

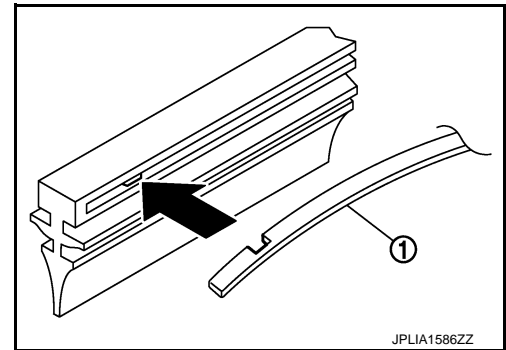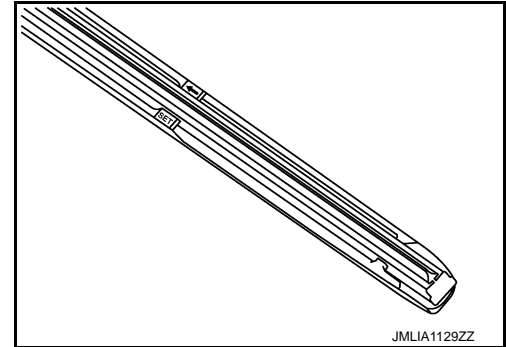

# FRONT WIPER DRIVE ASSEMBLY


< REMOVAL AND INSTALLATION >

## FRONT WIPER DRIVE ASSEMBLY

Exploded View

INFOID:000000006930259

### REMOVAL

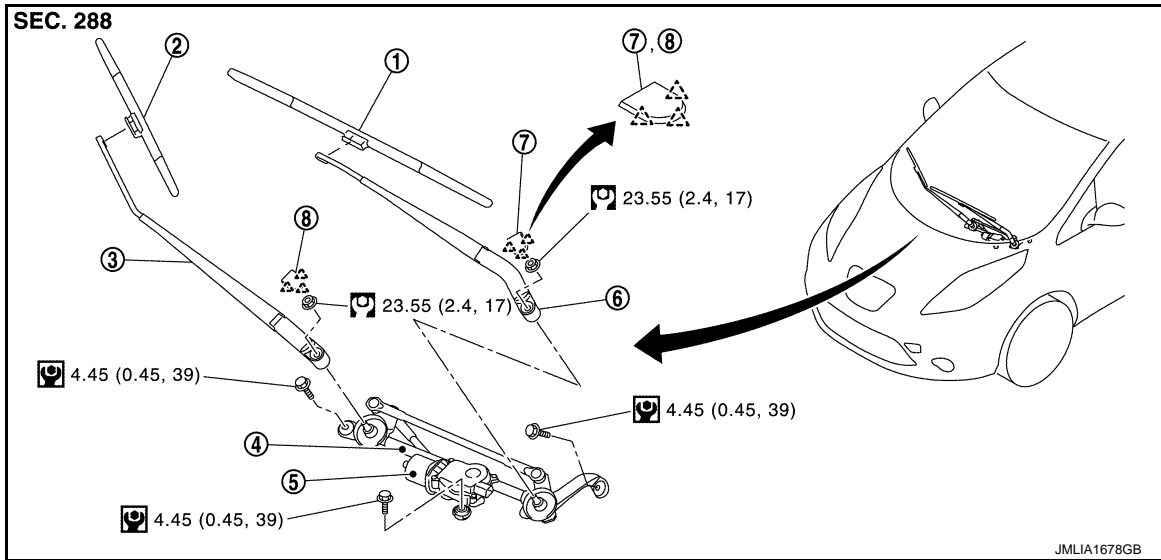


- |                               |                           |                       |
|-------------------------------|---------------------------|-----------------------|
| 1. Front wiper blade LH       | 2. Front wiper blade RH   | 3. Front wiper arm RH |
| 4. Front wiper drive assembly | 5. Front wiper motor      | 6. Front wiper arm LH |
| 7. Front wiper arm cap LH     | 8. Front wiper arm cap RH |                       |

: Pawl

: N-m (kg-m, in-lb)

: N-m (kg-m, ft-lb)

### DISASSEMBLY

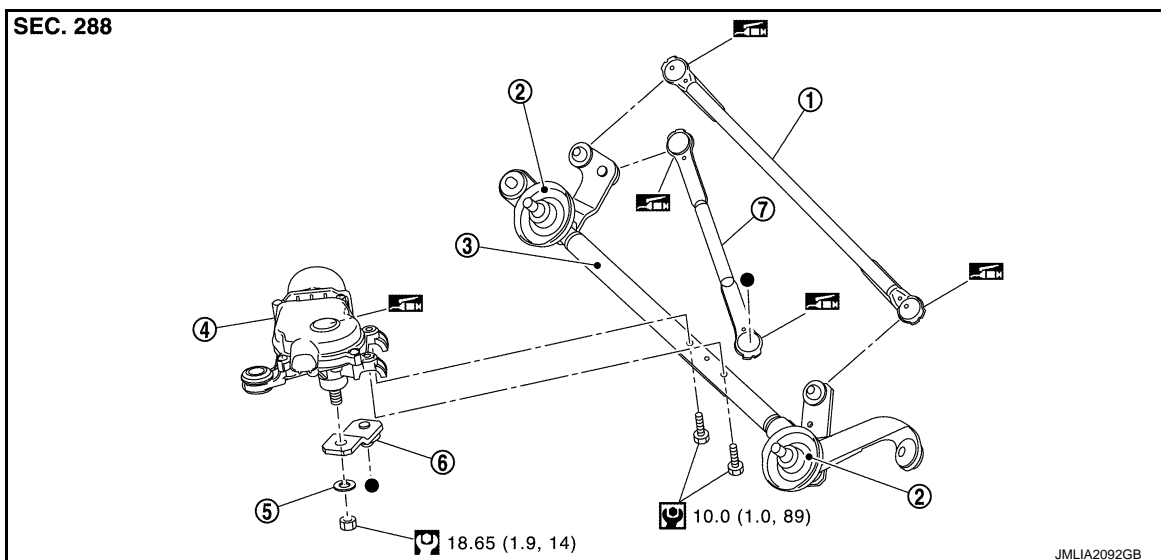

- |                          |                     |                          |
|--------------------------|---------------------|--------------------------|
| 1. Front wiper linkage 2 | 2. Shaft seal       | 3. Front wiper frame     |
| 4. Front wiper motor     | 5. Retaining washer | 6. Front wiper motor arm |
| 7. Front wiper linkage 1 |                     |                          |

: N-m (kg-m, in-lb)


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


WW

# FRONT WIPER DRIVE ASSEMBLY

## < REMOVAL AND INSTALLATION >

---

 : N·m (kg-m, ft-lb)

 : Nissan MP special grease No.2

## Removal and Installation

INFOID:000000006930260

### REMOVAL

1. Remove front wiper arms (LH and RH). Refer to [WW-49, "Removal and Installation"](#).
2. Remove cowl top cover. Refer to [EXT-17, "Removal and Installation"](#).
3. Disconnect the front wiper motor connector.
4. Remove the mounting bolts from front wiper drive assembly.
5. Remove the front wiper drive assembly from the vehicle.

### INSTALLATION

1. Install the front wiper drive assembly to the vehicle.
2. Connect front wiper motor connector.
3. Operate front wiper to move it to the auto stop position.
4. Install cowl top cover. Refer to [EXT-17, "Removal and Installation"](#).
5. Install front wiper arms. Refer to [WW-49, "Removal and Installation"](#).

## Disassembly and Assembly

INFOID:000000006930261

### DISASSEMBLY

1. Remove the front wiper linkage 1 and 2 from the front wiper drive assembly.  
**CAUTION:**  
**Never bend the linkage or damage the plastic part of the ball joint when removing the wiper linkage.**
2. Remove the front wiper motor mounting screws, and then remove the front wiper motor from the front wiper frame.

### ASSEMBLY

1. Connect the front wiper motor connector.
2. Operate the front wiper to move it to the auto stop position.
3. Disconnect the front wiper motor connector.
4. Install the front wiper motor to the front wiper frame.
5. Install the front wiper linkage 2 to the front wiper motor and to the front wiper frame.
6. Install the front wiper linkage 1 to the front wiper frame.  
**CAUTION:**
  - **Never drop front wiper motor or cause it to come into contact with other parts, to prevent damage to the wiper motor or to other parts around it.**
  - **Be careful for the grease condition at the front wiper motor and front wiper linkage joint (retainer). Apply Multi-purpose grease or an equivalent if necessary.**

# WIPER AND WASHER SWITCH

< REMOVAL AND INSTALLATION >

---

## WIPER AND WASHER SWITCH

### Exploded View

INFOID:000000006930264

Wiper and washer switch is integrated in the combination switch. Refer to [BCS-77. "Exploded View"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW


# REAR WIPER ARM

< REMOVAL AND INSTALLATION >


## REAR WIPER ARM


### Exploded View

INFOID:000000006930265

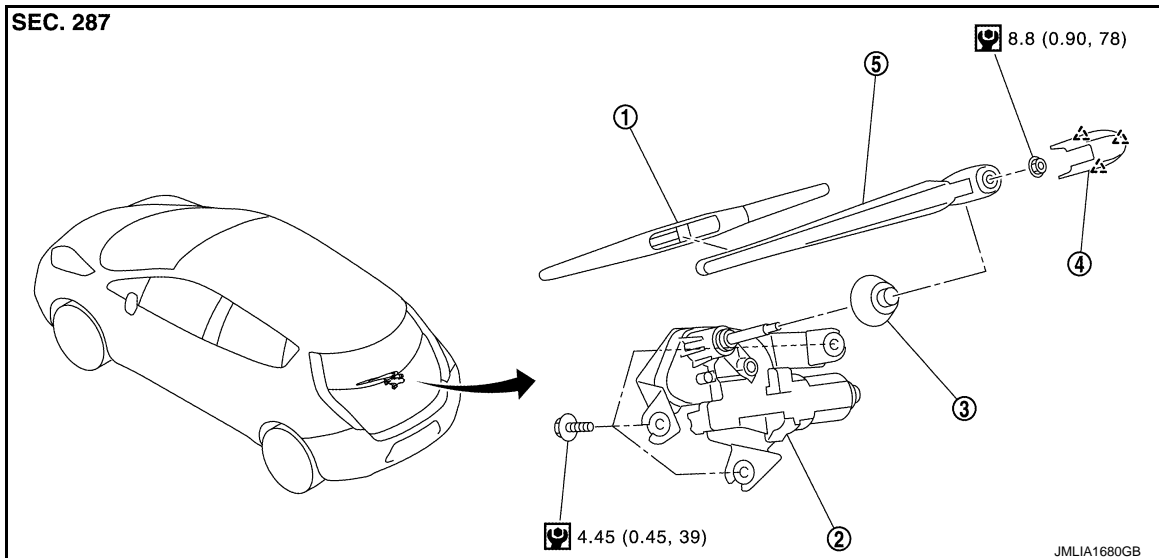

- |                         |                     |                          |
|-------------------------|---------------------|--------------------------|
| 1. Rear wiper blade     | 2. Rear wiper motor | 3. Rear wiper pivot seal |
| 4. Rear wiper arm cover | 5. Rear wiper arm   |                          |

 : Pawl

 : N·m (kg·m, in·lb)

## Removal and Installation


INFOID:000000006930266

### REMOVAL

1. Operate rear wiper to the auto stop position.
2. Remove rear wiper arm cover.
3. Remove rear wiper arm mounting nut.
4. Remove wiper arm from the vehicle.

### INSTALLATION

1. Clean wiper arm mount as shown in the figure to prevent nut from being loosened.
2. Operate the rear wiper motor to the auto stop position.
3. Adjust the rear wiper blade position. Refer to [WW-56. "Adjustment"](#).
4. Install the rear wiper arm by tightening the mounting nut.
5. Inject the washer fluid.
6. Operate the rear wiper to the auto stop position.
7. Check that the rear wiper blades stop at the specified position.
8. Install the rear wiper arm cover.

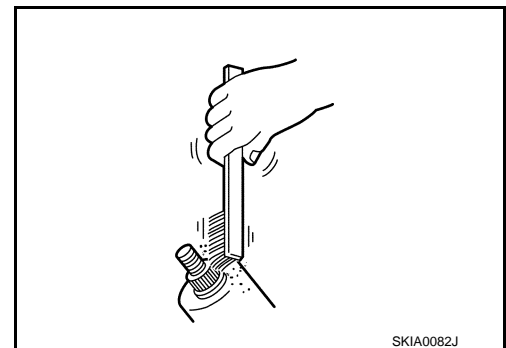

## Adjustment

INFOID:000000006930267

### REAR WIPER BLADE POSITION ADJUSTMENT

Set the wiper blade top on the defrosting wire (A) (clearance between the end of back door glass and the top of wiper blade center).




# REAR WIPER ARM

## < REMOVAL AND INSTALLATION >

Standard clearance

1. Back door window glass
  2. Rear wiper blade
  3. Back door outer panel
- A : Rear defogger wire print  
L :  $53.1 \pm 7.5 \text{ mm}$  ( $2.091 \pm 0.295 \text{ in}$ )

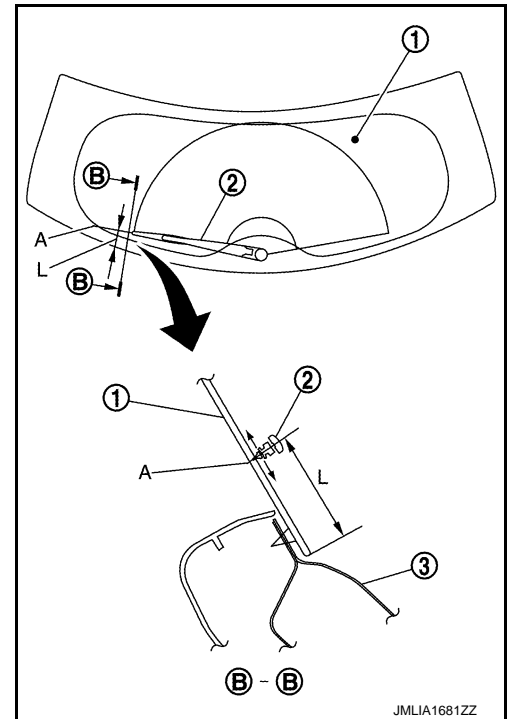

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K

WW

M  
N  
O  
P


# REAR WIPER MOTOR

< REMOVAL AND INSTALLATION >


## REAR WIPER MOTOR


Exploded View

INFOID:000000006930268

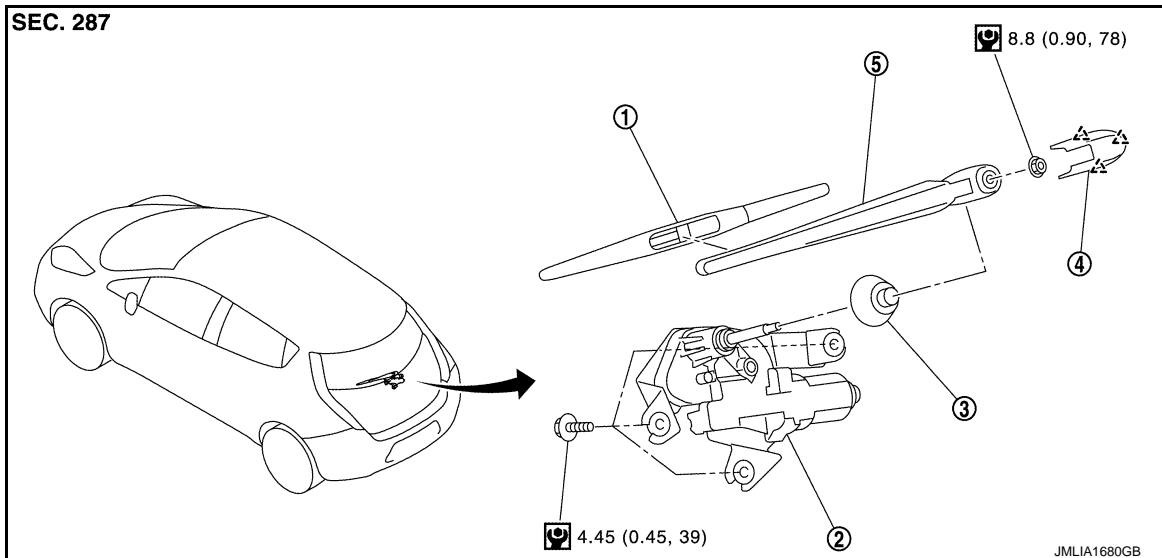

- |                         |                     |                          |
|-------------------------|---------------------|--------------------------|
| 1. Rear wiper blade     | 2. Rear wiper motor | 3. Rear wiper pivot seal |
| 4. Rear wiper arm cover | 5. Rear wiper arm   |                          |

 : Pawl

 : N·m (kg-m, in-lb)

## Removal and Installation

INFOID:000000006930269

### REMOVAL

1. Remove rear wiper arm. Refer to [WW-56. "Removal and Installation"](#).
2. Remove back door lower finisher. Refer to [INT-39. "BACK DOOR LOWER FINISHER : Removal and Installation"](#).
3. Disconnect rear wiper motor connector.
4. Remove rear wiper motor mounting bolts.
5. Remove rear wiper motor from the vehicle.
6. Remove the pivot seal.

### INSTALLATION

Install in the reverse order of removal.


# REAR WASHER NOZZLE AND TUBE

< REMOVAL AND INSTALLATION >


## REAR WASHER NOZZLE AND TUBE

Hydraulic Layout

INFOID:000000006930270

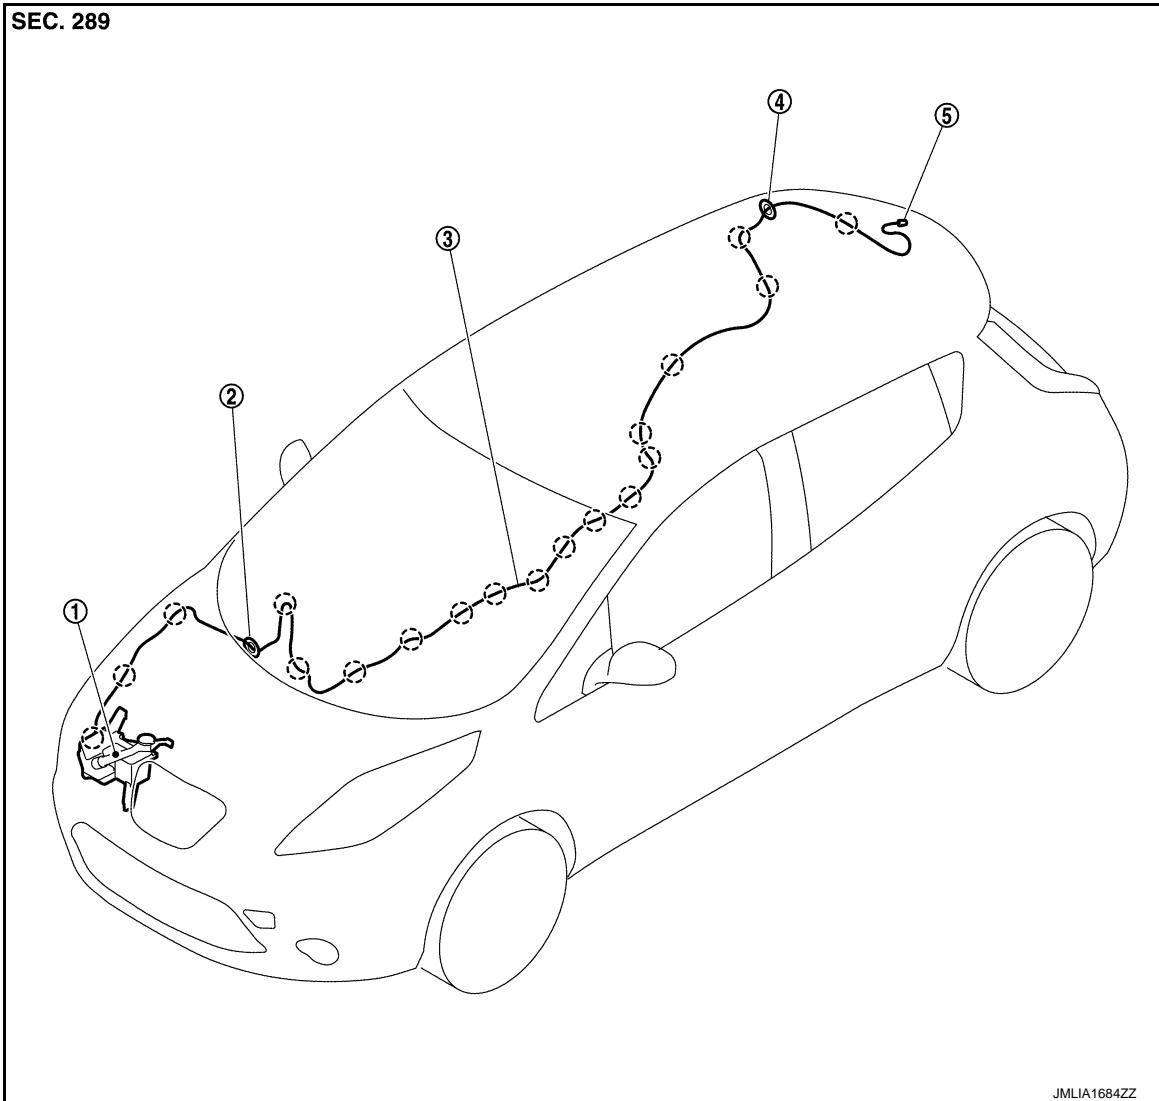

- 1. Washer tank
- 2. Front grommet
- 3. Rear washer tube
- 4. Rear grommet
- 5. Rear washer nozzle

 : Clip

### Removal and Installation

INFOID:000000006930271

#### REMOVAL


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

# REAR WASHER NOZZLE AND TUBE

## < REMOVAL AND INSTALLATION >

1. Remove rear spoiler (1). Refer to [EXT-34. "Removal and Installation"](#).
2. Remove high-mounted stop lamp cover (2) mounting screws (A), and then remove the bracket.
3. Disconnect rear washer nozzle tube and remove rear washer nozzle (3) from the bracket.

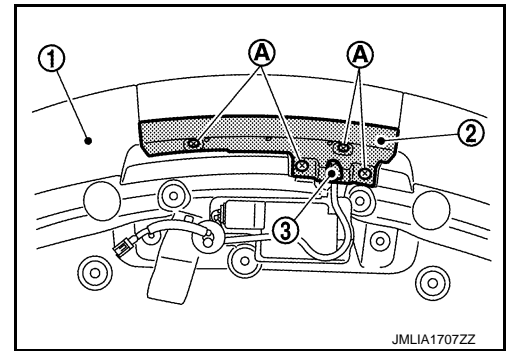

## INSTALLATION

Install in the reverse order of removal.


## Inspection and Adjustment

INFOID:000000006930272

## INSPECTION

### Washer Nozzle Inspection


Check that air can pass through the hose by blowing forward (toward the nozzle), and check that air cannot pass through by sucking.

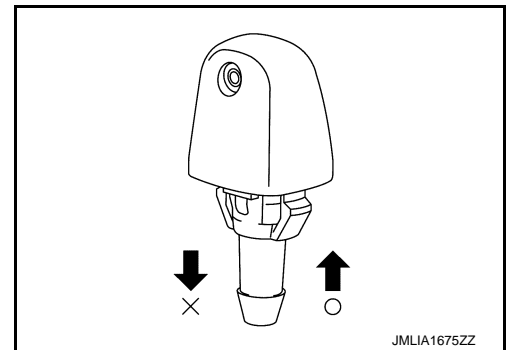

## ADJUSTMENT

### Washer Nozzle Spray Position adjustment

Adjust spray positions to match the positions shown in the figure.

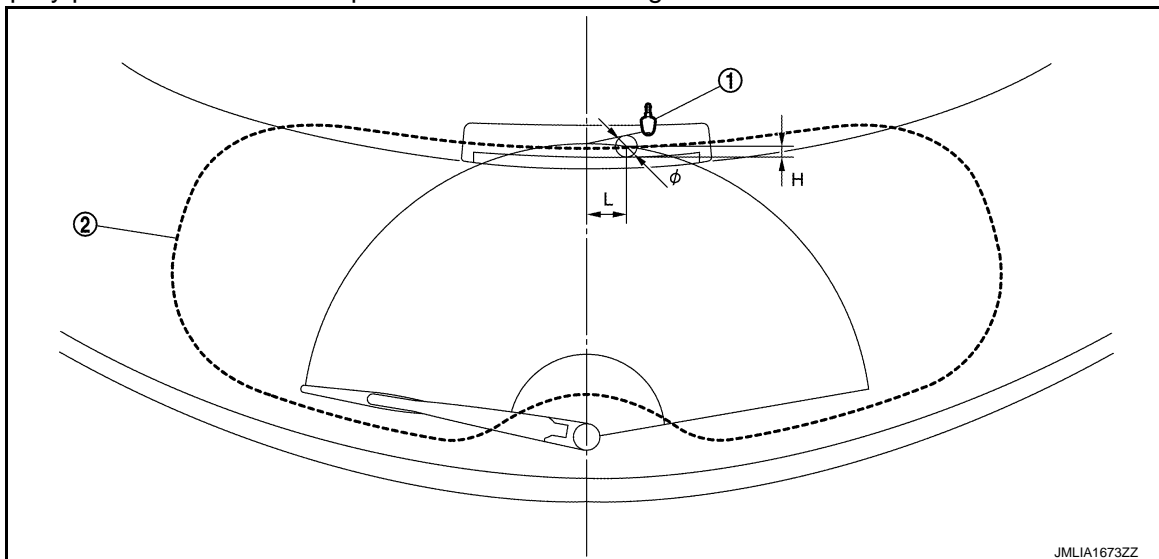

- |                       |                           |
|-----------------------|---------------------------|
| 1. Rear washer nozzle | 2. Black print frame line |
| H : 10.7 (0.42)       | $\phi$ : 30 (1.18)        |
| L : 31.6 (1.24)       |                           |
| Unit: mm (in)         |                           |


# REAR WASHER NOZZLE AND TUBE

## < REMOVAL AND INSTALLATION >

Insert a needle or similar object (A) into the spray opening (1) and move up/down and left/right to adjust the spray position.

**NOTE:**

If wax or dust gets into the spray opening of rear washer nozzle (2), remove wax or dust with a needle or small pin.

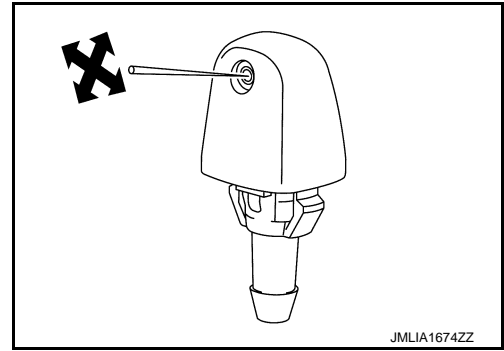

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW