


# Mass Air Flow and Intake Air Temperature Sensor

FUEL INJECTION (FUEL SYSTEMS)


## 13. Mass Air Flow and Intake Air Temperature Sensor

### A: REMOVAL

- 1) Disconnect the ground cable from battery.

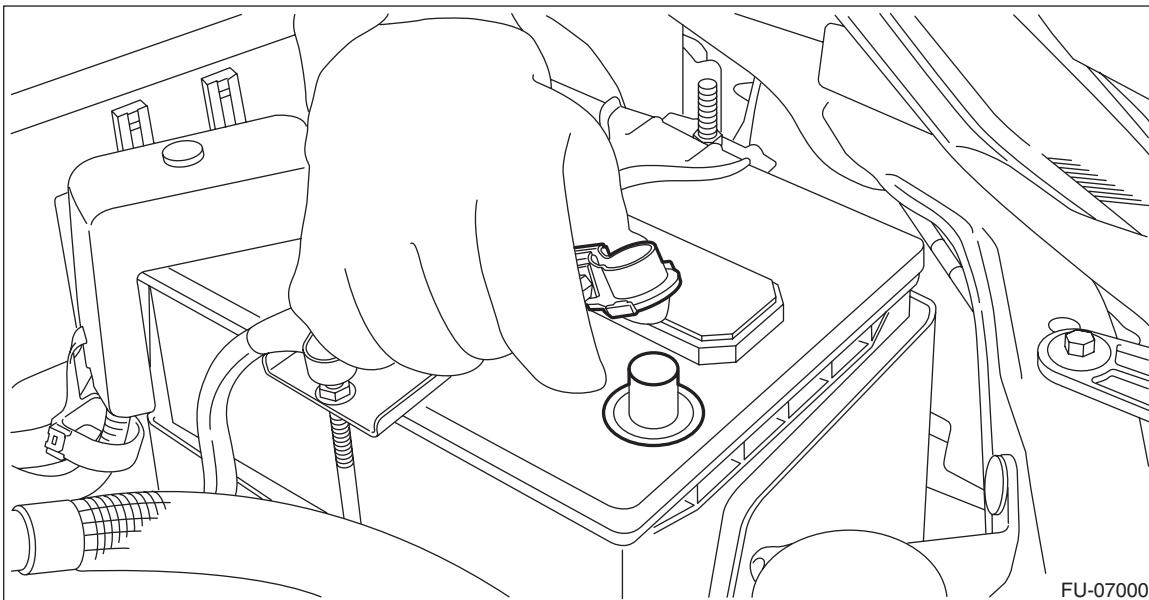

- 2) Disconnect the connector (A) from the mass air flow and intake air temperature sensor, and remove the mass air flow and intake air temperature sensor.

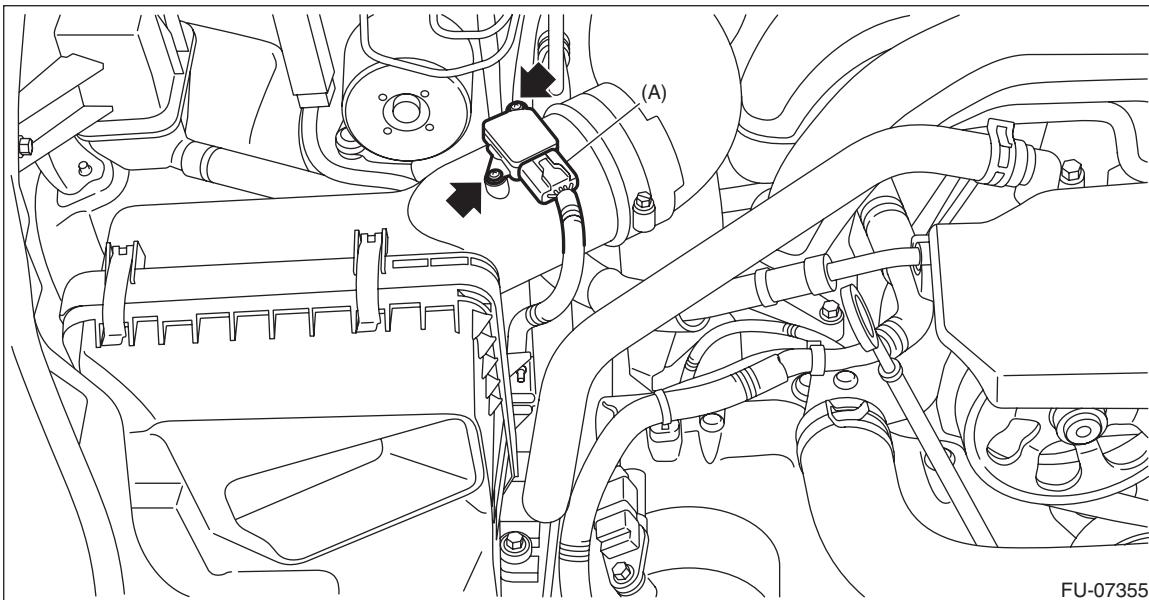

### B: INSTALLATION

Install in the reverse order of removal.


**Tightening torque:**

1 N·m (0.1 kgf-m, 0.7 ft-lb)


## C: INSPECTION

### 1. CHECK THE MASS AIR FLOW SENSOR UNIT

- 1) Connect the battery positive terminal to terminal No. 3 and the battery ground terminal to terminal No. 4, the circuit tester positive terminal to terminal No. 5 and the circuit tester ground terminal to terminal No. 4.

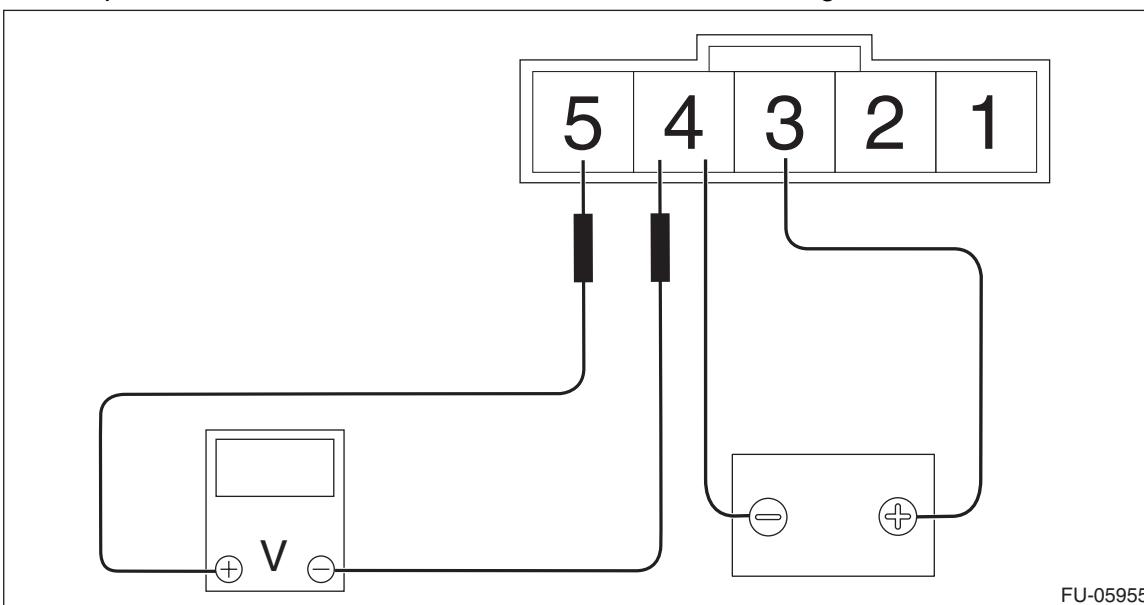

- 2) Check the voltage changes when air is blown to the mass air flow sensor unit in arrow direction.

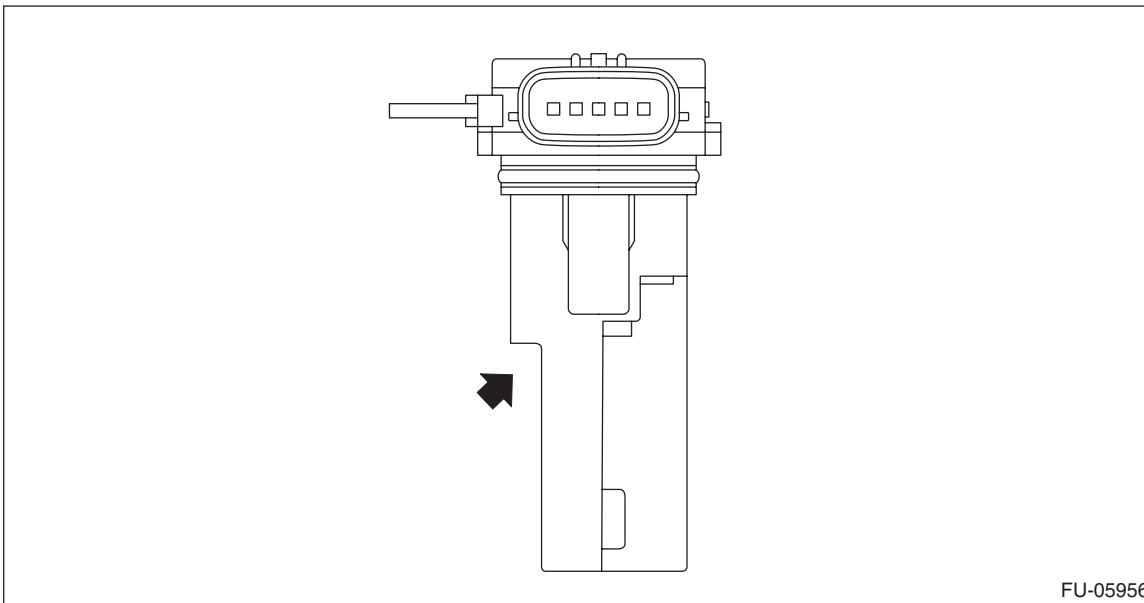


# Mass Air Flow and Intake Air Temperature Sensor

FUEL INJECTION (FUEL SYSTEMS)

## 2. CHECK THE INTAKE AIR TEMPERATURE SENSOR UNIT

Measure the resistance between intake air temperature sensor terminals.

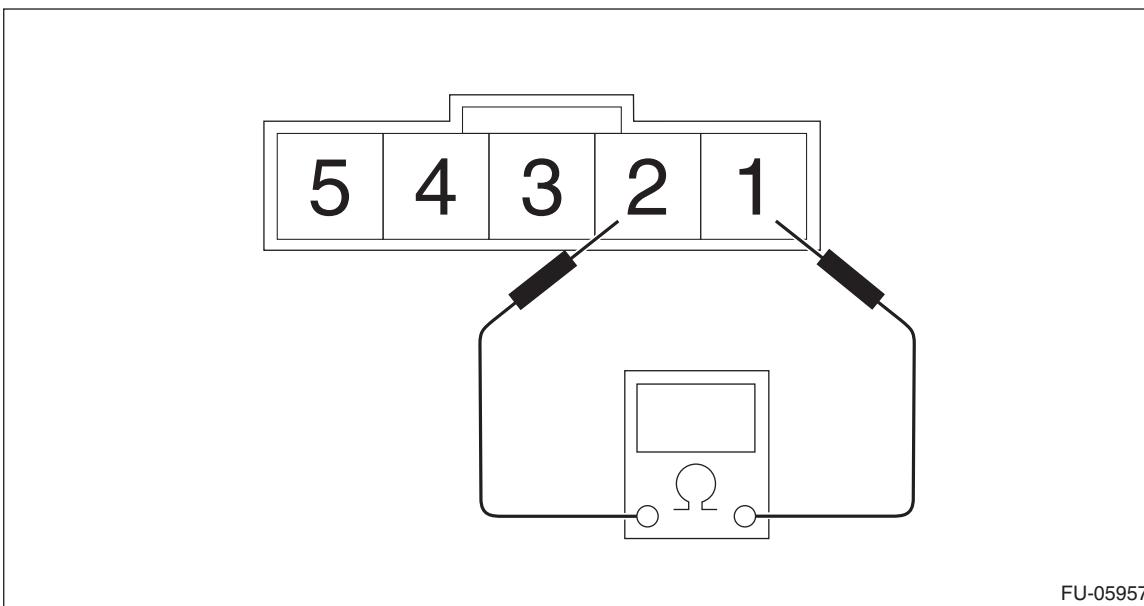

FU-05957

Temperature	Terminal No.	Standard
-20°C (-4°F)	1 and 2	16.0±2.4 kΩ
20°C (68°F)		2.45±0.24 kΩ
60°C (140°F)		0.58±0.087 kΩ

## 3. OTHER INSPECTIONS

- 1) Check that the mass air flow and intake air temperature sensor has no deformation, cracks or other damages.
- 2) Check that the mass air flow and intake air temperature sensor has no dirt.