



## 6. Rear Disc Rotor

### A: REMOVAL

- 1) Lift up the vehicle, and then remove the rear wheels.
- 2) Release the parking brake.
- 3) Remove the caliper body assembly from the rear axle housing.
  - (1) Remove the bolt from the brake hose bracket.
  - (2) Remove the mounting bolt, and remove the caliper body assembly.

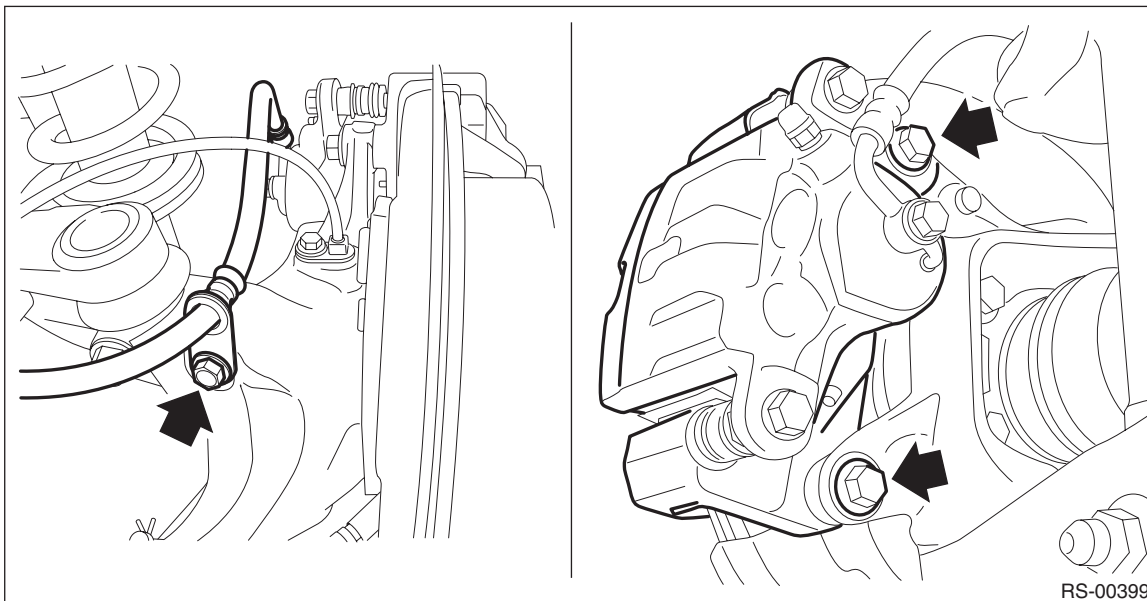

- (3) Prepare wiring harnesses etc. to be discarded, and suspend the caliper body assembly from the shock absorber with the harnesses.

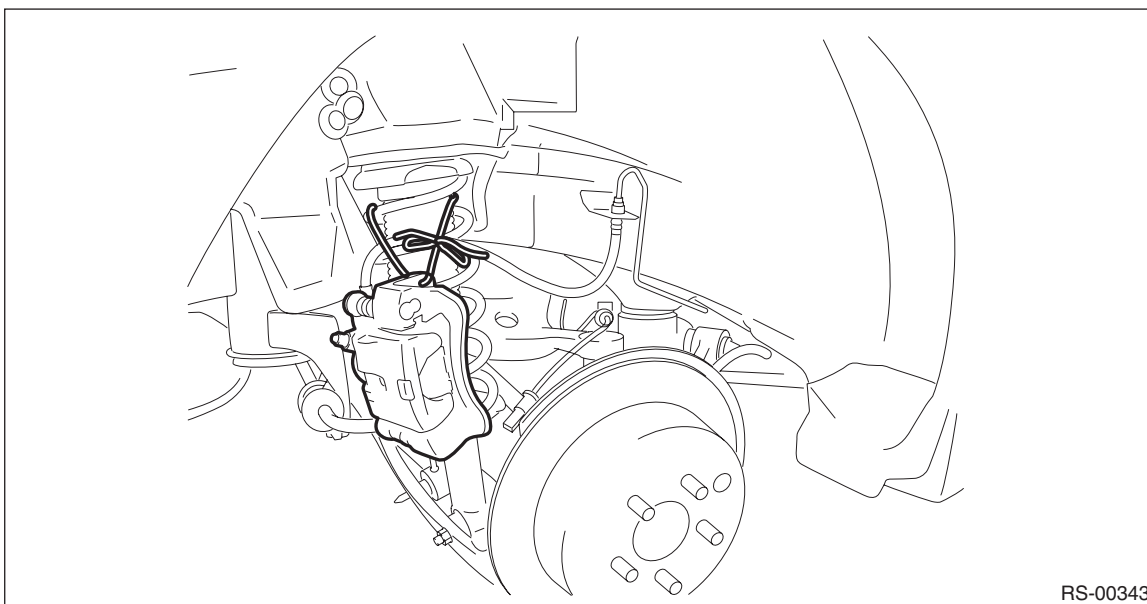


4) Remove the rear disc rotor.

**NOTE:**

If it is difficult to remove the disc rotor, perform the following two methods in order.


1. Remove the adjusting hole cover (A), insert the flat tip screwdriver, and rotate the adjusting screw until the brake shoe moves far enough to remove the disc rotor.

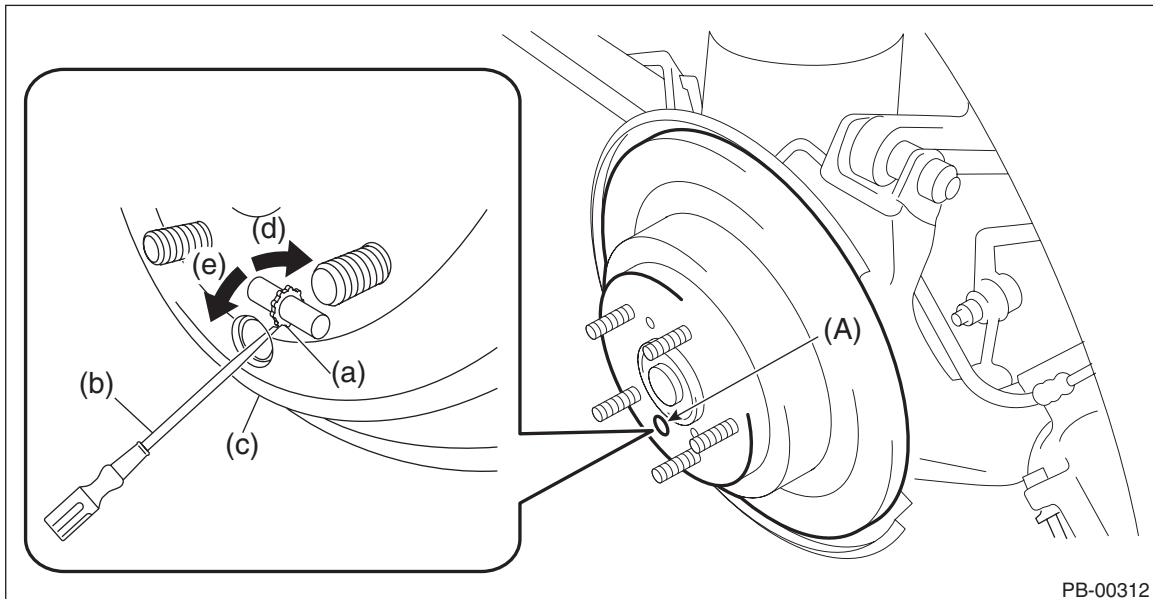

PB-00312

- |                          |                                |                                 |
|--------------------------|--------------------------------|---------------------------------|
| (a) Adjusting screw      | (c) Disc rotor                 | (e) Shorten the adjusting screw |
| (b) Flat tip screwdriver | (d) Extend the adjusting screw |                                 |

2. When the disc rotor is difficult to be removed from the rear hub unit bearing, screw in 8 mm (0.31 in) bolt to the threaded part of the disc rotor (A), and remove the disc rotor.

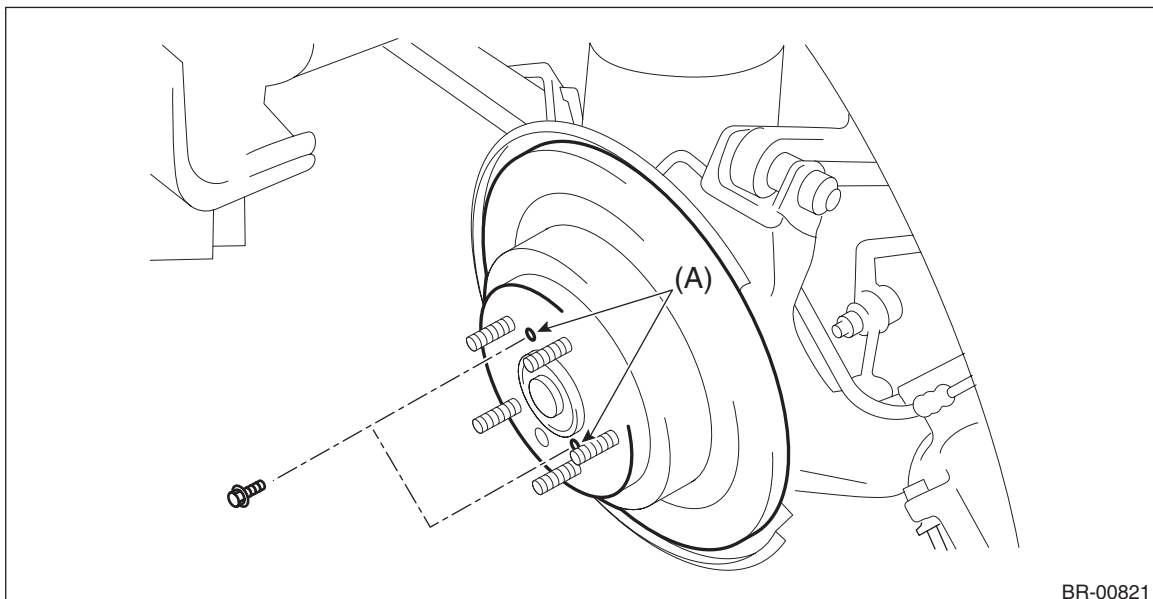

BR-00821

# Rear Disc Rotor

BRAKE

## B: INSTALLATION

NOTE:

Before installation, remove mud and foreign matter from the caliper body assembly.

- 1) Before installation, check the rear disc rotor. <Ref. to BR-32, INSPECTION, Rear Disc Rotor.>
- 2) Install each part in the reverse order of removal.
- 3) Adjust the parking brake. <Ref. to PB-17, ADJUSTMENT, Parking Brake Assembly (Rear Disc Brake).>

**Tightening torque:**

**Brake hose bracket: 33 N·m (3.36 kgf-m, 24.3 ft-lb)**

**Mounting bolt: 66 N·m (6.73 kgf-m, 48.7 ft-lb)**


## C: INSPECTION

### 1. DISC ROTOR RUNOUT CHECK

- 1) Check the rear hub unit bearing for free play and runout before the inspection of disc rotor runout limit. <Ref. to DS-47, INSPECTION, Rear Hub Unit Bearing.>
- 2) Secure the disc rotor by tightening the five wheel nuts.
- 3) Set a dial gauge 10 mm (0.39 in) inward from the disc rotor outer circumference, and check the disc rotor runout while rotating the disc rotor.

**Disc rotor runout limit:**


**0.05 mm (0.0020 in)**

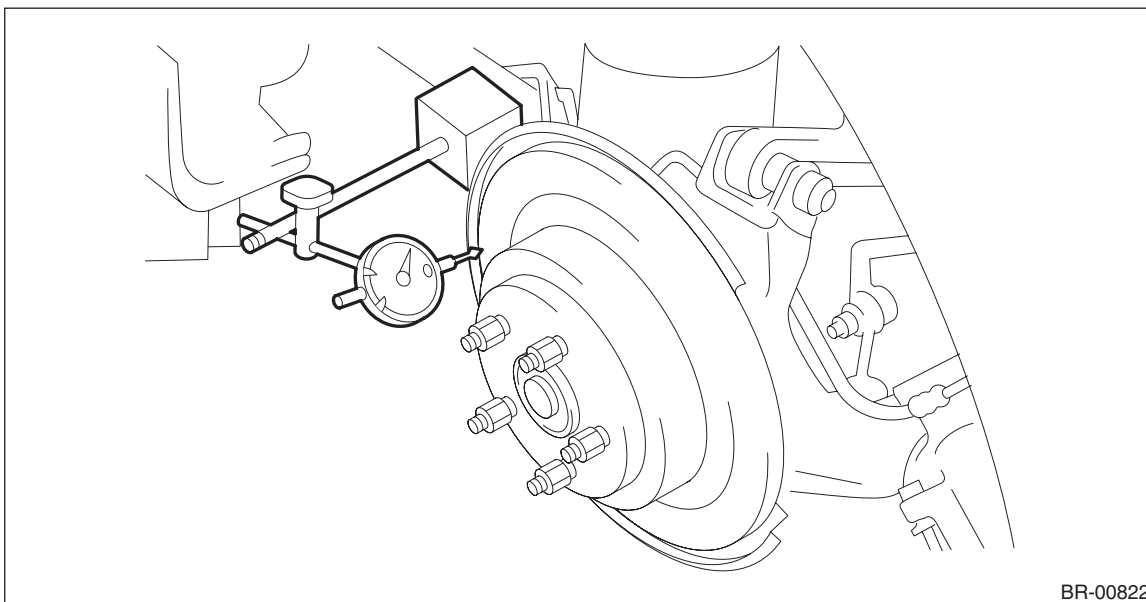

- 4) If the runout limit is exceeded in the inspection, replace the disc rotor.

## 2. DISC ROTOR THICKNESS CHECK

1) Set a micrometer 10 mm (0.39 in) inward from the disc rotor outer perimeter, and then measure the disc rotor thickness (A).

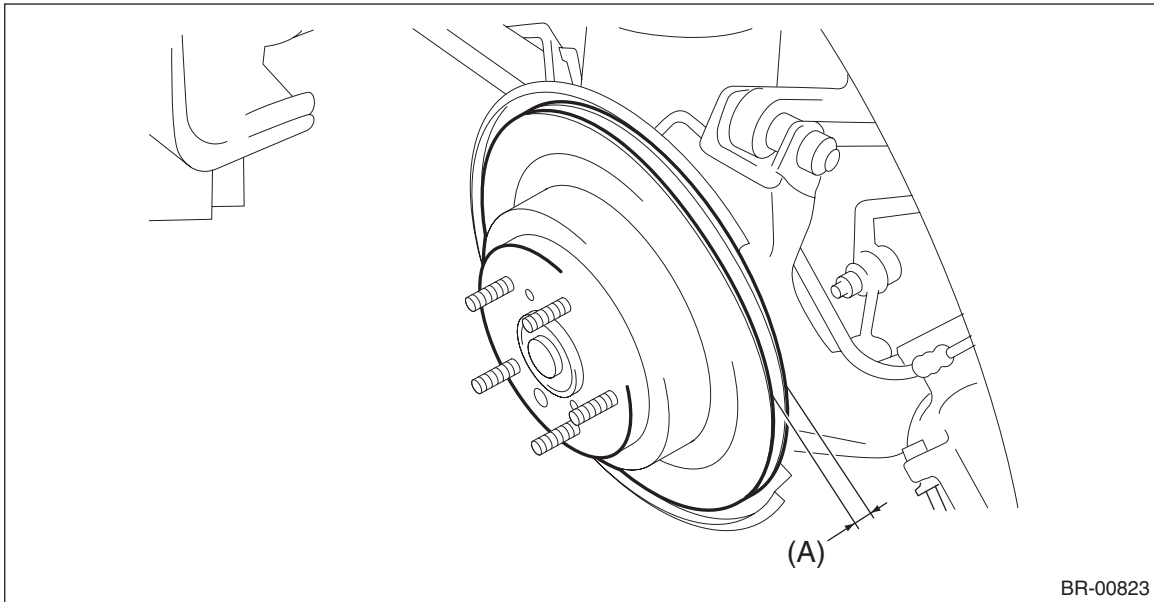

	Disc rotor type	Standard	Wear limit	Disc rotor outer diameter
Disc rotor thickness (A)	Solid disc	10 mm (0.39 in)	8.5 mm (0.33 in)	286 mm (11.26 in)
	Ventilated disc	18 mm (0.71 in)	16 mm (0.63 in)	290 mm (11.42 in)

2) If the wear limit is exceeded in the inspection, replace the disc rotor.