

DTC P0171: System too Lean (bank 1)

⚠ CAUTION

If DTC P0171 has been set, TCL related DTC U1120 is also set. After P0171 has been diagnosed, don't forget to erase DTC U1120.

Fuel Trim Circuit

- Refer to DTC P0201– Injector Circuit – Cylinder 1 [P.13B-481](#), P0203– Injector Circuit – Cylinder 3 [P.13B-504](#), P0205– Injector Circuit – Cylinder 5 [P.13B-527](#)

CIRCUIT OPERATION

- Refer to DTC P0201 [P.13B-481](#), P0203 [P.13B-504](#), P0205 [P.13B-527](#) – Injector Circuit.

TECHNICAL DESCRIPTION

- If a malfunction occurs in the fuel system, the fuel trim value becomes too large.
- The PCM checks whether the fuel trim value is within a specified range.

DESCRIPTIONS OF MONITOR METHODS

Right bank air/fuel learning value (long time fuel trim) and air/fuel feedback integral value (short time fuel trim) are too lean.

MONITOR EXECUTION

Continuous

**MONITOR EXECUTION CONDITIONS
(Other monitor and Sensor)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- Misfire monitor

Sensor (The sensor below is determined to be normal)

- Mass airflow sensor
- Engine coolant temperature sensor
- Intake air temperature sensor
- Barometric pressure sensor
- Throttle position sensor

DTC SET CONDITIONS

Logic Flow Chart

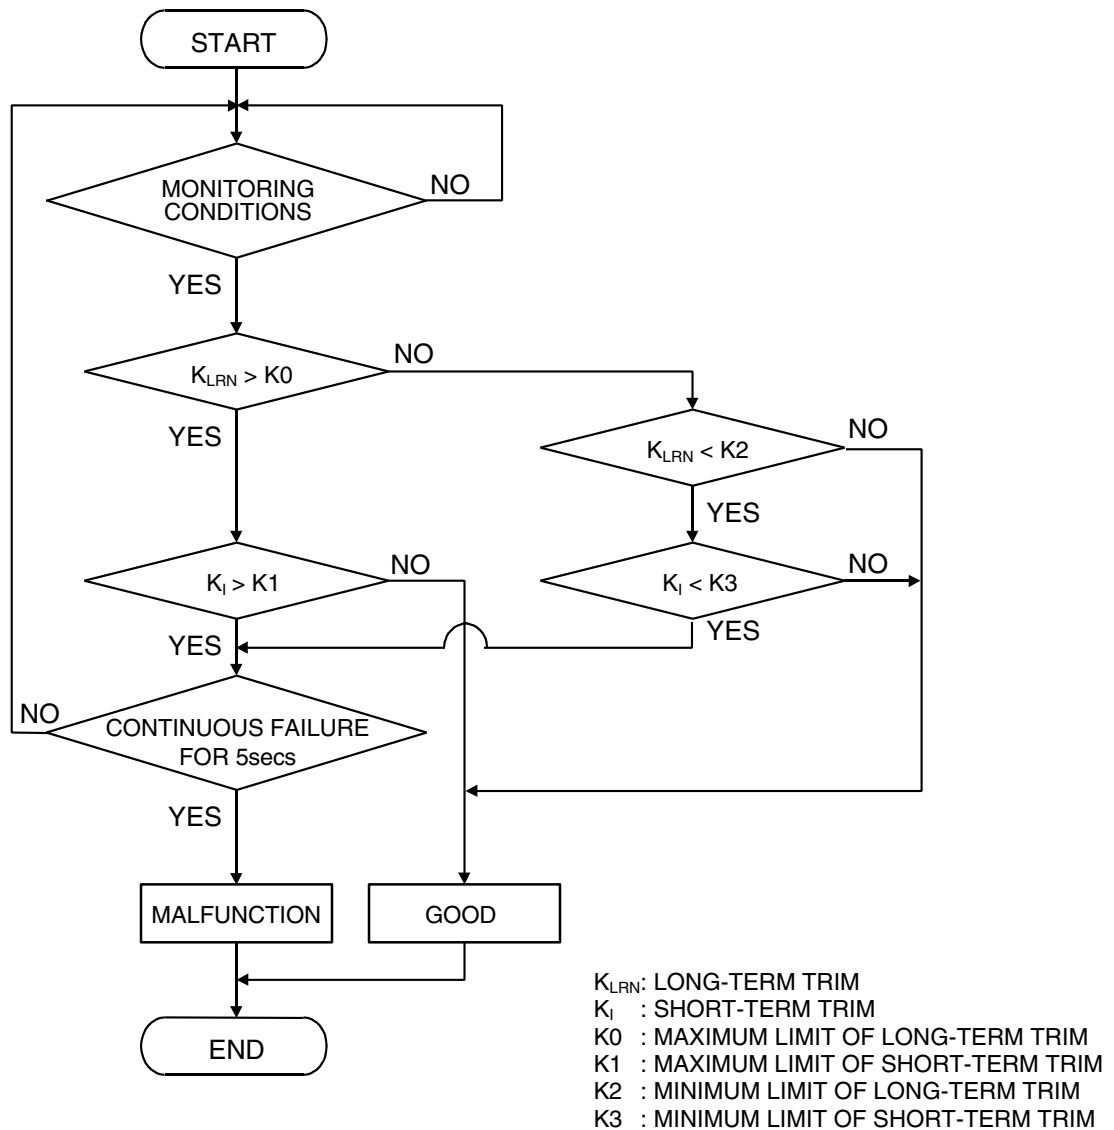

AK204050

Check Conditions

- Engine coolant temperature is lower than 100°C (212°F) when the engine is started.
- Intake air temperature is lower than 60°C (140°F) when the engine is started.
- Under the closed loop air/fuel ratio control.
- Engine coolant temperature is higher than 76°C (169°F).

- Mass airflow sensor output is 8 g/sec or more.

Judgment Criteria

- Long-term fuel trim has continued to be higher than +12.5 percent for 5 seconds.
- or
- Short-term fuel trim has continued to be higher than +7.4 percent for 5 seconds.

Check Conditions

- Engine coolant temperature is lower than 100°C (212°F) when the engine is started.
- Intake air temperature is lower than 60°C (140°F) when the engine is started.
- Under the closed loop air/fuel ratio control.
- Engine coolant temperature is higher than 76°C (169°F).
- Mass airflow sensor output is 8 g/sec or less.

Judgment Criteria

- Long-term fuel trim has continued to be higher than +12.5 percent for 5 seconds.

or

- Short-term fuel trim has continued to be higher than +7.4 percent for 5 seconds.

Check Conditions

- Engine coolant temperature is higher than 100°C (212°F) when the engine is started.
- Intake air temperature is higher than 60°C (140°F) when the engine is started.
- Under the closed loop air/fuel ratio control.
- Engine coolant temperature is higher than 76°C (169°F).
- Mass airflow sensor output is 8 g/sec or more.

Judgment Criteria

- Long-term fuel trim has continued to be higher than +12.5 percent or 5 seconds.

or

- Short-term fuel trim has continued to be higher than +17.6 percent for 5 seconds.

Check Conditions

- Engine coolant temperature is higher than 100°C (212°F) when the engine is started.
- Intake air temperature is higher than 60°C (140°F) when the engine is started.
- Under the closed loop air/fuel ratio control.
- Engine coolant temperature is higher than 76°C (169°F).

- Mass airflow sensor output is 8 g/sec or less.

Judgment Criteria

- Long-term fuel trim has continued to be higher than +12.5 percent or 5 seconds.

or

- Short-term fuel trim has continued to be higher than +17.6 percent for 5 seconds.

Check Conditions

- Engine coolant temperature is higher than 76°C (169°F).
- Under the closed loop air/fuel ratio control.

Judgment Criteria

- Long-term fuel trim has continued to be +12.5 percent for 2 seconds.

or

- Short-term fuel trim has continued to be +25.0 percent for 2 seconds.

OBD-II DRIVE CYCLE PATTERN

Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 2 – Fuel Trim Monitor [P.13B-6](#).

TROUBLESHOOTING HINTS (The most likely causes for this code to be set are:)

- Mass airflow sensor failed.
- Injector (Number 1, 3, 5) failed.
- Incorrect fuel pressure.
- Air drawn in from gaps in gasket, seals, etc.
- Engine coolant temperature sensor failed.
- Intake air temperature sensor failed.
- Barometric pressure sensor failed.
- Manifold absolute pressure sensor failed.
- Exhaust leak.
- Use of incorrect or contaminated fuel.
- Harness damage in right bank injector circuit, or connector damage.
- PCM failed.

DIAGNOSIS

Required Special Tools:

- MB991958: Scan Tool (MUT-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: USB Cable
 - MB991910: Main Harness A

STEP 1. Check for exhaust leak.

Q: Are there any abnormalities?

- YES** : Repair it. Then go to Step 17.
NO : Go to Step 2.

STEP 2. Check for intake system vacuum leak.

Q: Are there any abnormalities?

- YES** : Repair it. Then go to Step 17.
NO : Go to Step 3.

STEP 3. Using scan tool MB991958, check data list item 12: Mass Airflow Sensor.


⚠ CAUTION


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958 to the data link connector.
- (2) Start the engine and run at idle.
- (3) Set scan tool MB991958 to the data reading mode for item 12, Mass Airflow Sensor.
- (4) Warm up the engine to normal operating temperature: 80°C to 95°C (176°F to 203°F).
 - When idling, between 2.0 and 6.0 g/sec.
 - When 2,500 r/min, between 8.0 and 16.0 g/sec.
- (5) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the sensor operating properly?

- YES** : Go to Step 4.
NO : Refer to, DTC P0101 – Mass Airflow Circuit Range/Performance Problem [P.13B-46](#), DTC P0102 – Mass Airflow Circuit Low Input [P.13B-57](#), DTC P0103 – Mass Airflow Circuit High Input [P.13B-67](#).

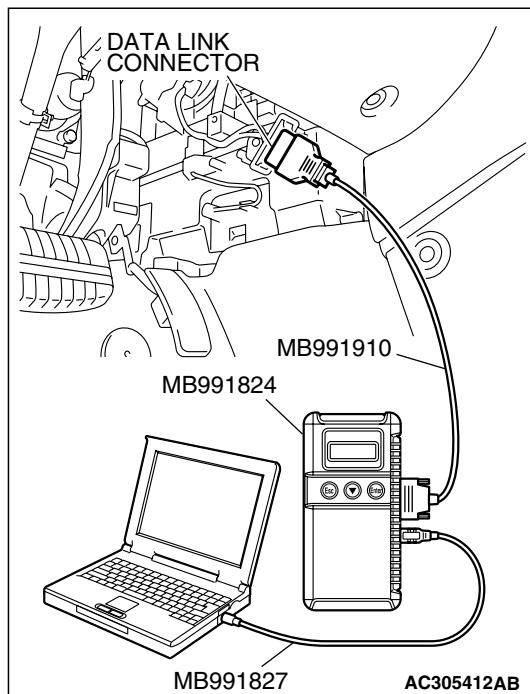

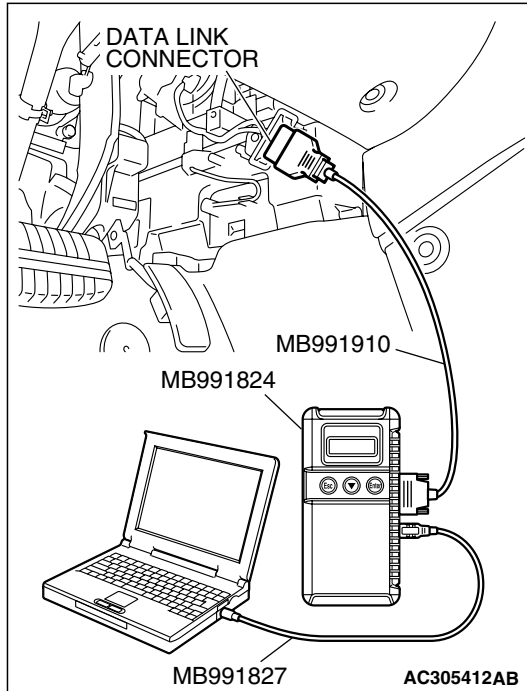


STEP 4. Using scan tool MB991958, check data list item 13: Intake Air Temperature Sensor.

- (1) Turn the ignition switch to the "ON" position.
- (2) Set scan tool MB991958 to the data reading mode for item 13, Intake Air Temperature Sensor.
 - The intake air temperature and temperature shown with the scan tool should approximately match.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the sensor operating properly?

YES : Go to Step 5.

NO : Refer to DTC P0111 – Intake Air Temperature Circuit Range/Performance Problem [P.13B-109](#), DTC P0112 – Intake Air Temperature Circuit Low Input [P.13B-118](#), DTC P0113 – Intake Air Temperature Circuit High Input [P.13B-125](#).

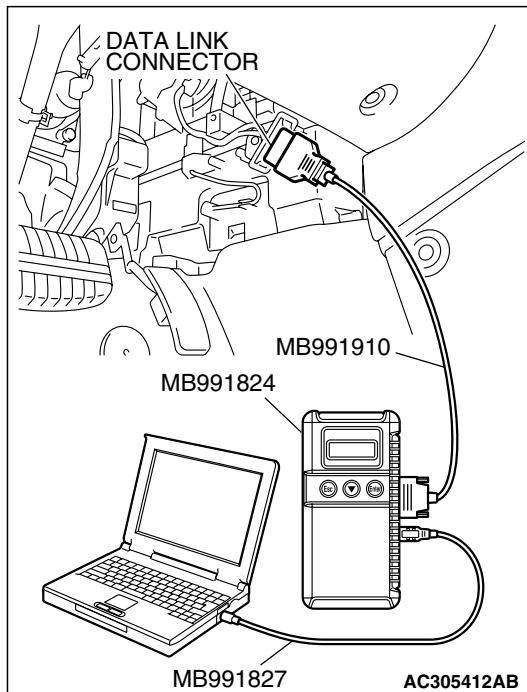


STEP 5. Using scan tool MB991958, check data list item 21: Engine Coolant Temperature Sensor.

- (1) Turn the ignition switch to the "ON" position.
- (2) Set scan tool MB991958 to the data reading mode for item 21, Engine Coolant Temperature Sensor.
 - The engine coolant temperature and temperature shown with the scan tool should approximately match.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the sensor operating properly?

YES : Go to Step 6.

NO : Refer to DTC P0116 – Engine Coolant Temperature Circuit Range/Performance Problem [P.13B-135](#), DTC P0117 – Engine Coolant Temperature Circuit Low Input [P.13B-144](#), DTC P0118 – Engine Coolant Temperature Circuit High Input [P.13B-151](#).

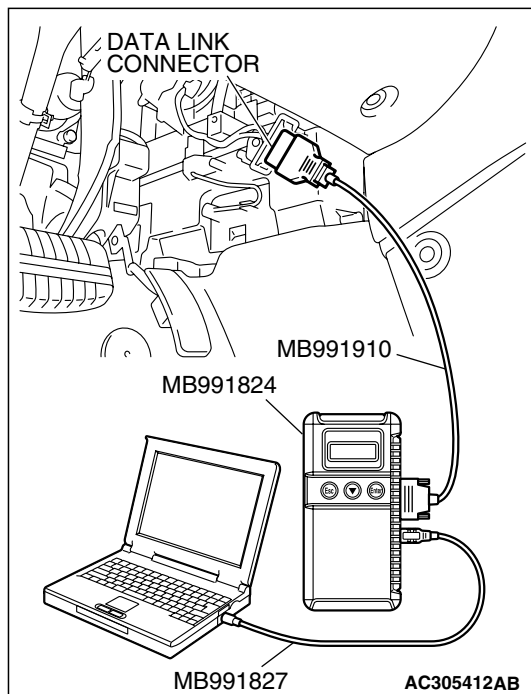


STEP 6. Using scan tool MB991958, check data list item 25: Barometric Pressure Sensor.

- (1) Turn the ignition switch to the "ON" position.
- (2) Set scan tool MB991958 to the data reading mode for item 25, Barometric Pressure Sensor.
 - When altitude is 0 m (0 foot), 101 kPa (29.8 in.Hg).
 - When altitude is 600 m (1,969 feet), 95 kPa (28.1 in.Hg).
 - When altitude is 1,200 m (3,937 feet), 88 kPa (26.0 in.Hg).
 - When altitude is 1,800 m (5,906 feet), 81 kPa (23.9 in.Hg).
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the sensor operating properly?

YES : Go to Step 7.

NO : Refer to DTC P2228 – Barometric Pressure Circuit Low Input [P.13B-992](#), DTC P2229 – Barometric Pressure Circuit High Input [P.13B-994](#).

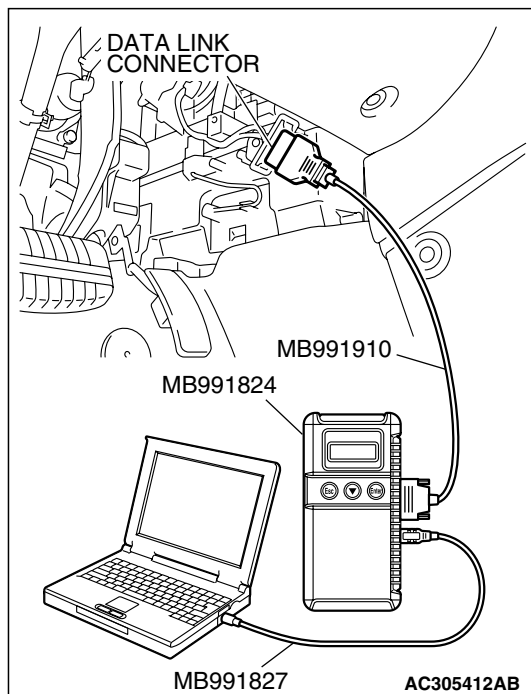


STEP 7. Using scan tool MB991958, check data list item 95: Manifold Absolute Pressure Sensor.

- (1) Connect scan tool MB991958 to the data link connector.
- (2) Turn the ignition switch to the "ON" position.
- (3) Set scan tool MB991958 to the data reading mode for item 95, Manifold Absolute Pressure Sensor.
 - When altitude is 0 m (0 foot), 101 kPa (29.8 in.Hg).
 - When altitude is 600 m (1,969 feet), 95 kPa (28.1 in.Hg).
 - When altitude is 1,200 m (3,937 feet), 88 kPa (26.0 in.Hg).
 - When altitude is 1,800 m (5,906 feet), 81 kPa (23.9 in.Hg).
- (4) Start the engine.
 - When the engine is idling, 16 – 36 kPa (4.7 – 10.6 in.Hg).
 - When the engine is suddenly revved, manifold absolute pressure varies.
- (5) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the sensor operating properly?

YES : Go to Step 8.

NO : Refer to DTC P0106 – Manifold Absolute Pressure Circuit Range / Performance Problem [P.13B-74](#), DTC P0107 – Manifold Absolute Pressure Circuit Low Input [P.13B-88](#), DTC P0108 – Manifold Absolute Pressure Circuit High Input [P.13B-100](#).

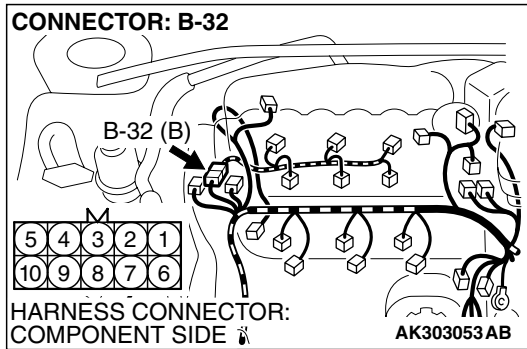


STEP 8. Check harness connector B-32 at intermediate connector for damage.

Q: Is the harness connector in good condition?


YES : Go to Step 9.

NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 17.

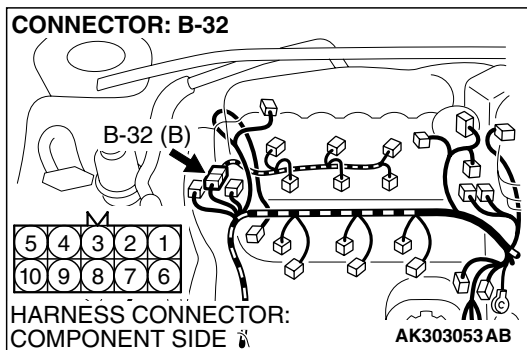

STEP 9. Check the right bank injector resistance at intermediate connector B-32.

(1) Disconnect the intermediate connector B-32.

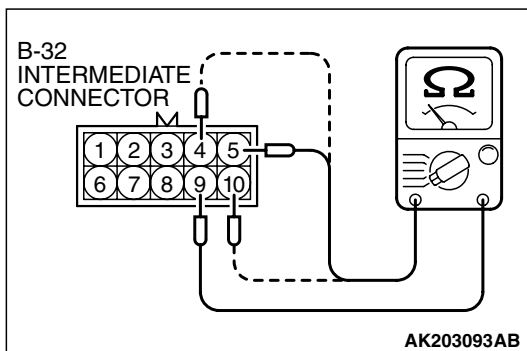


(2) Measure the resistance between each male connector side terminal.

- Measure the resistance between terminal No. 5 and No. 9 at No. 1 cylinder injector.
- Measure the resistance between terminal No. 9 and No. 10 at No.3 cylinder injector.
- Measure the resistance between terminal No. 4 and No. 9 at No. 5 cylinder injector.
 - Resistance should be between 10.5 and 13.5 ohms [at 20°C (68°F)].

Q: Is the measured resistance between 10.5 and 13.5 ohms [at 20°C (68°F)]?

YES : Go to Step 12.

NO : Go to Step 10.

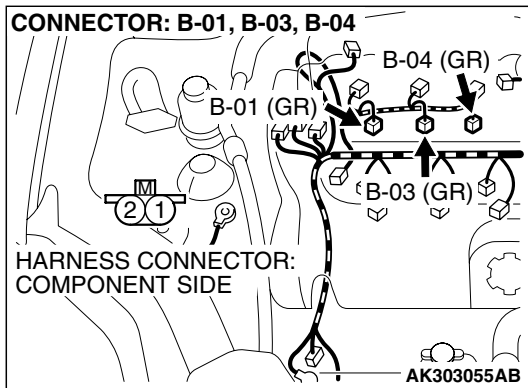


STEP 10. Check harness connector B-03, B-04, B-01 at right bank injector for damage.

Q: Is the harness connector in good condition?


YES : Go to Step 11.

NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 17.

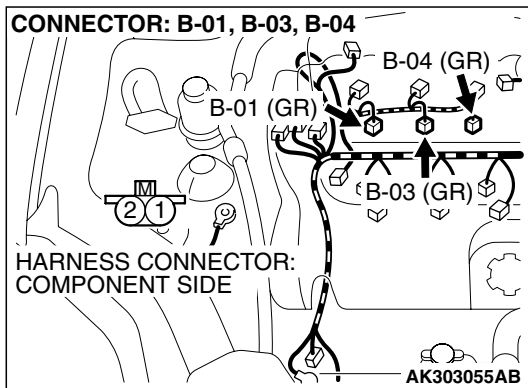

STEP 11. Check the right bank injector.

- (1) Remove the intake manifold.
- (2) Disconnect the right bank injector connector.

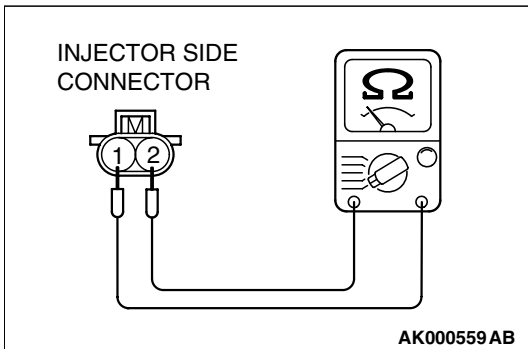


- (3) Measure the resistance between injector side connector terminal No. 1 and No. 2.

Standard value: 10.5 – 13.5 ohms [at 20°C (68°F)]

Q: Is the measured resistance between 10.5 and 13.5 ohms [at 20°C (68°F)]?

YES : Repair harness wire between injector intermediate connector and right bank injector connector because of harness damage. Then go to Step 17.

NO : Replace the injector. Then go to Step 17.

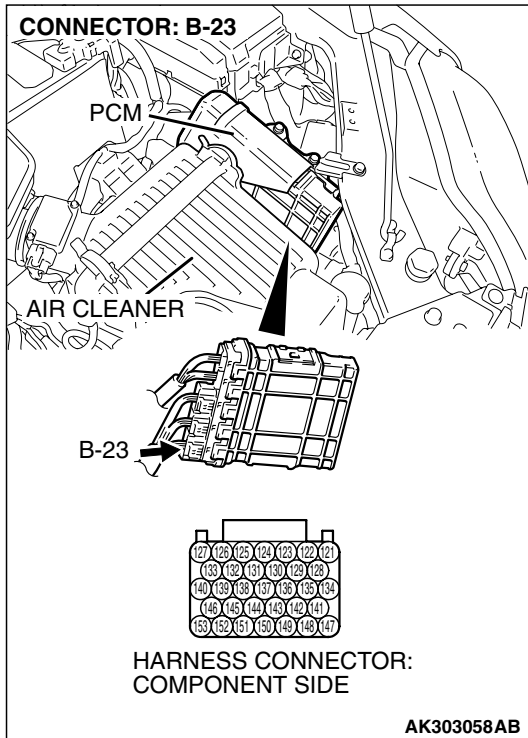


STEP 12. Check harness connector B-23 at PCM for damage.

Q: Is the harness connector in good condition?

YES : Go to Step 13.

NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 17.

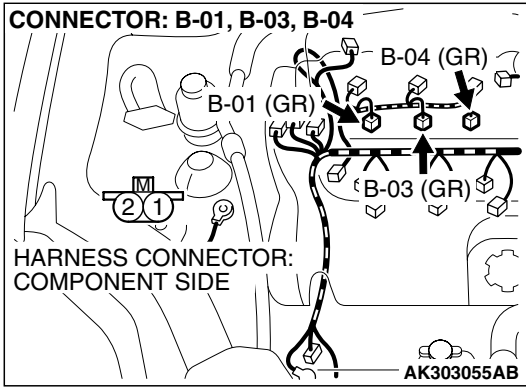


STEP 13. Check for harness damage between right bank injector connector and PCM connector.


- a. Check the harness wire between injector connector B-01 (terminal No. 2) and PCM connector B-23 (terminal No. 153) at No. 1 cylinder injector.
- b. Check the harness wire between injector connector B-03 (terminal No. 2) and PCM connector B-23 (terminal No. 140) at No. 3 cylinder injector.
- c. Check the harness wire between injector connector B-04 (terminal No. 2) and PCM connector B-23 (terminal No. 133) at No. 5 cylinder injector.

Q: Is the harness wire in good condition?

YES : Go to Step 14.

NO : Repair it. Then go to Step 17.

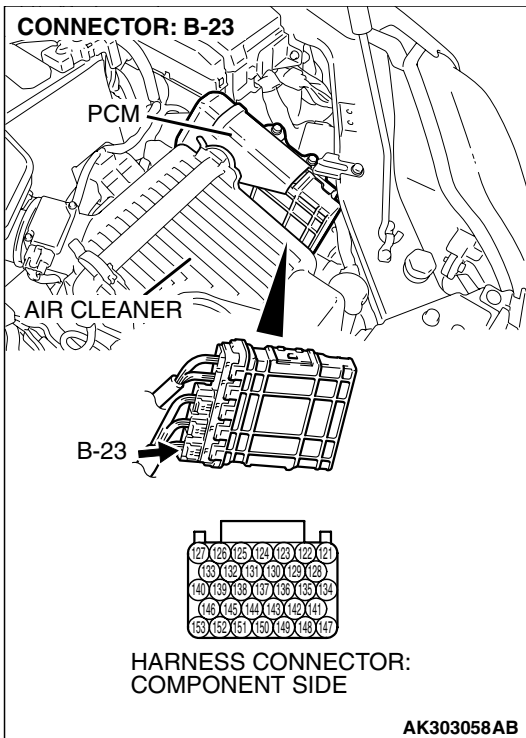

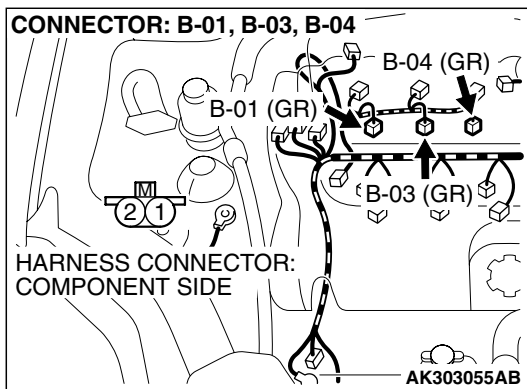**STEP 14. Check the fuel pressure.**

Refer to On-vehicle Service – Fuel Pressure Test [P.13B-1179](#).

Q: Is the fuel pressure normal?

YES : Go to Step 15.

NO : Repair it. Then go to Step 17.

STEP 15. Check for entry of foreign matter (water, kerosene, etc.) into fuel.**Q: Are there any abnormalities?**

YES : Go to Step 16.

NO : Replace the fuel. Then go to Step 17.

STEP 16. Replace the right bank injector.

(1) Replace the right bank injector.

(2) Carry out a test drive with the drive cycle pattern. Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 2 – Fuel Trim Monitor [P.13B-6](#).

(3) Check the diagnostic trouble code (DTC).

Q: Is DTC P0171 set?

YES : Replace the PCM. Then go to Step 17.

NO : The inspection is complete.

STEP 17. Test the OBD-II drive cycle.

(1) Carry out a test drive with the drive cycle pattern. Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 2 – Fuel Trim Monitor [P.13B-6](#).

(2) Check the diagnostic trouble code (DTC).

Q: Is DTC P0171 set?

YES : Retry the troubleshooting.

NO : The inspection is complete.

DTC P0172: System too Rich (bank 1)

⚠ CAUTION

If DTC P0172 has been set, TCL related DTC U1120 is also set. After P0172 has been diagnosed, don't forget to erase DTC U1120.

Fuel Trim Circuit

- Refer to DTC P0201– Injector Circuit – Cylinder
1.P.13B-481, P0203– Injector Circuit – Cylinder
3.P.13B-504, P0205– Injector Circuit – Cylinder
5.P.13B-527

CIRCUIT OPERATION

- Refer to DTC P0201– Injector Circuit – Cylinder
1.P.13B-481, P0203– Injector Circuit – Cylinder
3.P.13B-504, P0205– Injector Circuit – Cylinder
5.P.13B-527

TECHNICAL DESCRIPTION

- If a malfunction occurs in the fuel system, the fuel trim value becomes too small.
- The PCM checks whether the fuel trim value is within a specified range.

DESCRIPTIONS OF MONITOR METHODS

Right bank air/fuel learning value (long time fuel trim) and air/fuel feedback integral value (short time fuel trim) are too rich.

MONITOR EXECUTION

Continuous

**MONITOR EXECUTION CONDITIONS
(Other monitor and Sensor)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- Misfire monitor

Sensor (The sensor below is determined to be normal)

- Mass airflow sensor
- Engine coolant temperature sensor
- Intake air temperature sensor
- Barometric pressure sensor
- Throttle position sensor

DTC SET CONDITIONS

Logic Flow Chart

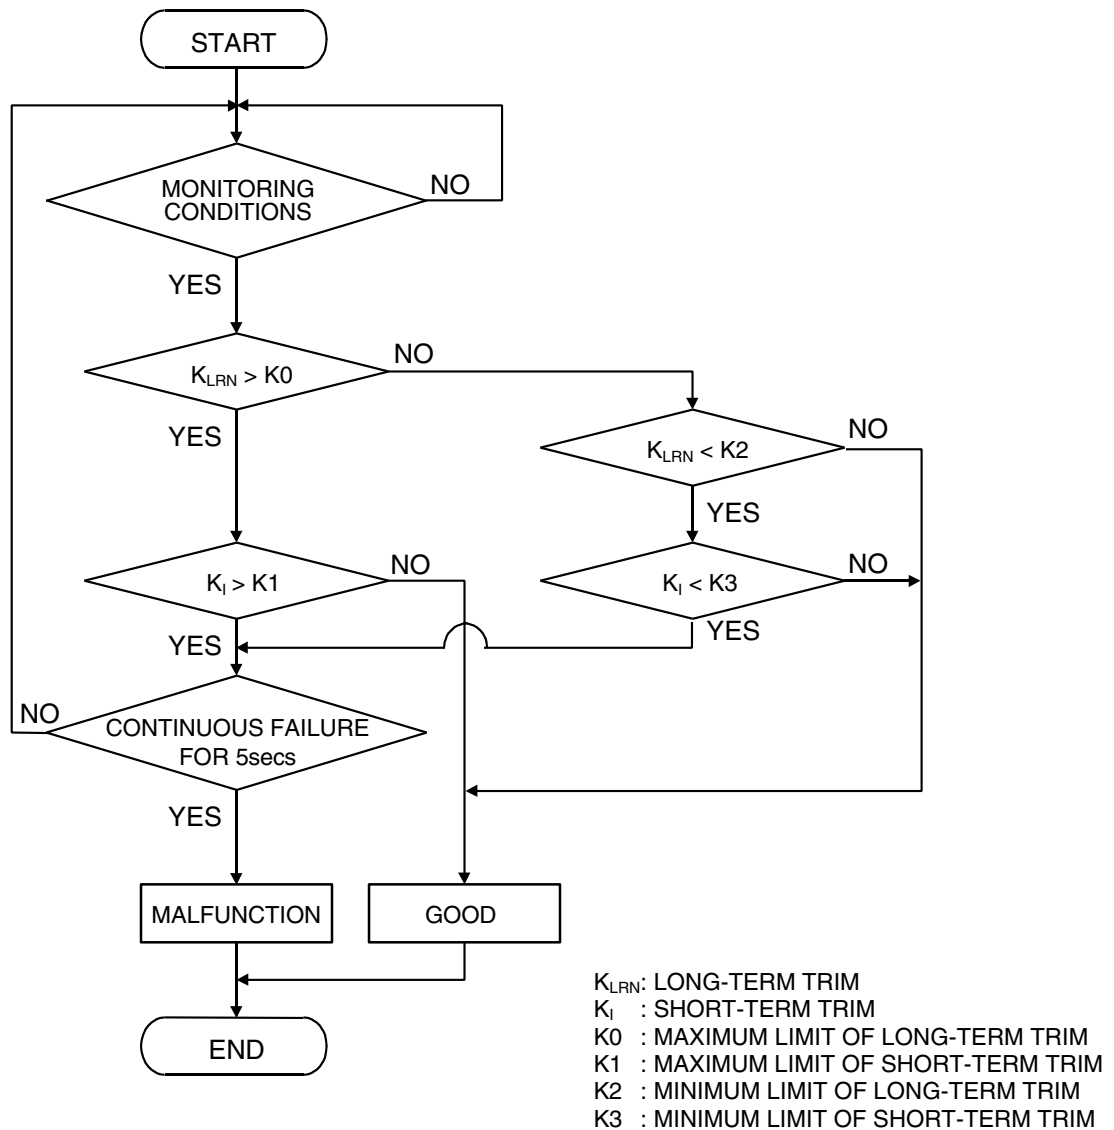

AK204050

Check Conditions

- Under the closed loop air/fuel ratio control.
- Engine coolant temperature is higher than 76°C (169°F).
- Mass airflow sensor output is 8 g/sec or more.

Judgment Criteria

- Long-term fuel trim has continued to be lower than -12.5 percent for 5 seconds.

or

- Short-term fuel trim has continued to be lower than -7.4 percent for 5 seconds.

Check Conditions

- Under the closed loop air/fuel ratio control.
- Engine coolant temperature is higher than 76°C (169°F).
- Mass airflow sensor output is 8 g/sec or less.

Judgment Criteria

- Long-term fuel trim has continued to be lower than -12.5 percent for 5 seconds.

or

- Short-term fuel trim has continued to be lower than -12.5 percent for 5 seconds.

Check Conditions

- Engine coolant temperature is higher than 76°C (169°F).
- Under the closed loop air/fuel ratio control.

Judgment Criteria

- Long-term fuel trim has continued to be -12.5 percent for 2 seconds.

or

- Short-term fuel trim has continued to be -30.0 percent for 2 seconds.

OBD-II DRIVE CYCLE PATTERN

Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 2 – Fuel Trim Monitor [P.13B-6](#).

TROUBLESHOOTING HINTS (The most likely causes for this code to be set are:)

- Mass airflow sensor failed.
- Injector (Number 1, 3, 5) failed.
- Incorrect fuel pressure.
- Engine coolant temperature sensor failed.
- Intake air temperature sensor failed.
- Barometric pressure sensor failed.
- Manifold absolute pressure sensor failed.
- Harness damage in right bank injector circuit, or connector damage.
- PCM failed.

DIAGNOSIS

Required Special Tools:

- MB991958: Scan Tool (MUT-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: USB Cable
 - MB991910: Main Harness A

STEP 1. Using scan tool MB991958, check data list item 12: Mass Airflow Sensor.

CAUTION


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.


- (1) Connect scan tool MB991958 to the data link connector.
- (2) Start the engine and run at idle.
- (3) Set scan tool MB991958 to the data reading mode for item 12, Mass Airflow Sensor.
- (4) Warm up the engine to normal operating temperature: 80°C to 95°C (176°F to 203°F).
 - When idling, between 2.0 and 6.0 g/sec.
 - When 2,500 r/min, between 8.0 and 16.0 g/sec.
- (5) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the sensor operating properly?

YES : YES: Go to Step 2.

NO : Refer to DTC P0101 – Mass Airflow Circuit Range/Performance Problem [P. 13B-46](#), DTC P0102 – Mass Airflow Circuit Low Input [P. 13B-57](#), DTC P0103 – Mass Airflow Circuit High Input [P.13B-67](#).

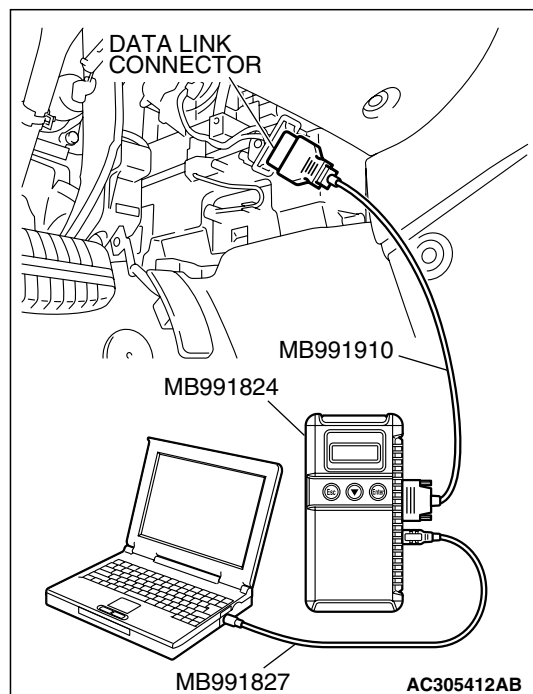

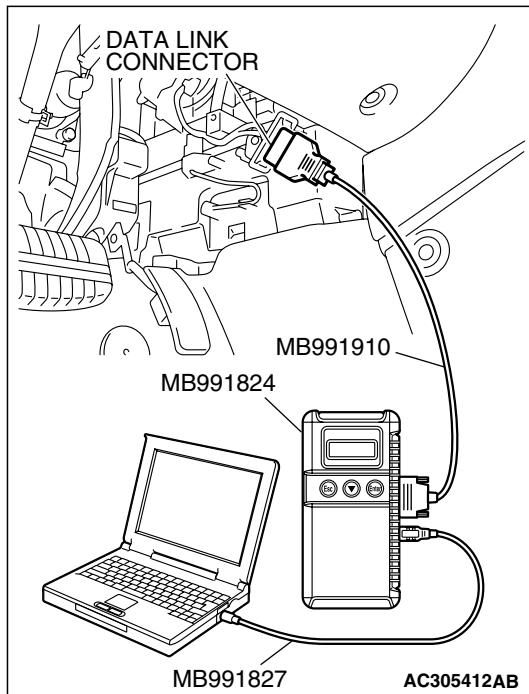


STEP 2. Using scan tool MB991958, check data list item 13: Intake Air Temperature Sensor.

- (1) Turn the ignition switch to the "ON" position.
- (2) Set scan tool MB991958 to the data reading mode for item 13, Intake Air Temperature Sensor.
 - The intake air temperature and temperature shown with the scan tool should approximately match.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the sensor operating properly?

YES : Go to Step 3.

NO : Refer to DTC P0111 – Intake Air Temperature Circuit Range/Performance Problem [P.13B-109](#), DTC P0112 – Intake Air Temperature Circuit Low Input [P.13B-118](#), DTC P0113 – Intake Air Temperature Circuit High Input [P.13B-125](#).

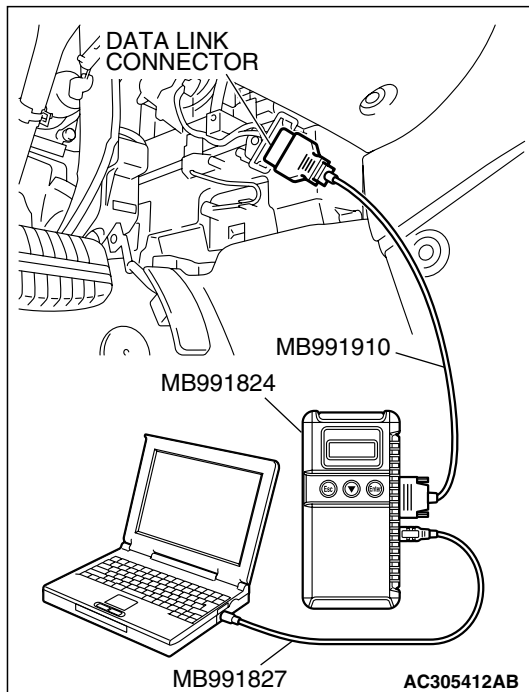


STEP 3. Using scan tool MB991958, check data list item 21: Engine Coolant Temperature Sensor.

- (1) Turn the ignition switch to the "ON" position.
- (2) Set scan tool MB991958 to the data reading mode for item 21, Engine Coolant Temperature Sensor.
 - The engine coolant temperature and temperature shown with the scan tool should approximately match.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the sensor operating properly?

YES : Go to Step 4.

NO : Refer to DTC P0116 – Engine Coolant Temperature Circuit Range/Performance Problem [P.13B-135](#), DTC P0117 – Engine Coolant Temperature Circuit Low Input [P.13B-144](#), DTC P0118 – Engine Coolant Temperature Circuit High Input [P.13B-151](#).

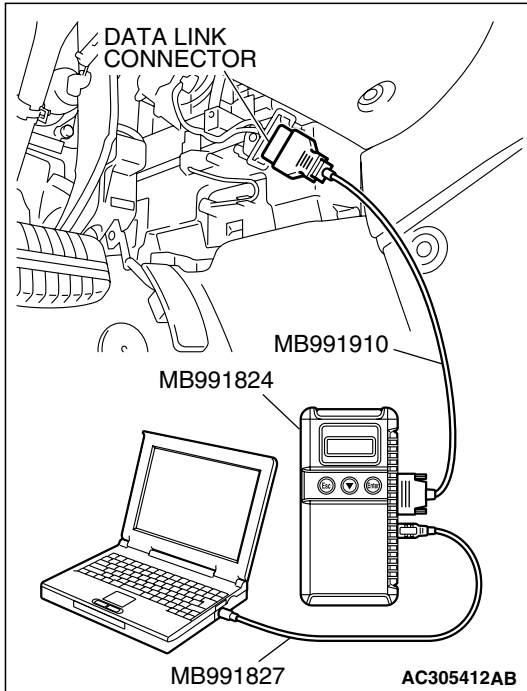


STEP 4. Using scan tool MB991958, check data list item 25: Barometric Pressure Sensor.

- (1) Turn the ignition switch to the "ON" position.
- (2) Set scan tool MB991958 to the data reading mode for item 25, Barometric Pressure Sensor.
 - When altitude is 0 m (0 foot), 101 kPa (29.8 in.Hg).
 - When altitude is 600 m (1,969 feet), 95 kPa (28.1 in.Hg).
 - When altitude is 1,200 m (3,937 feet), 88 kPa (26.0 in.Hg).
 - When altitude is 1,800 m (5,906 feet), 81 kPa (23.9 in.Hg).
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the sensor operating properly?

YES : Go to Step 5.

NO : Refer to DTC P2228 – Barometric Pressure Circuit Low Input [P.13B-992](#), DTC P2229 – Barometric Pressure Circuit High Input [P.13B-994](#).

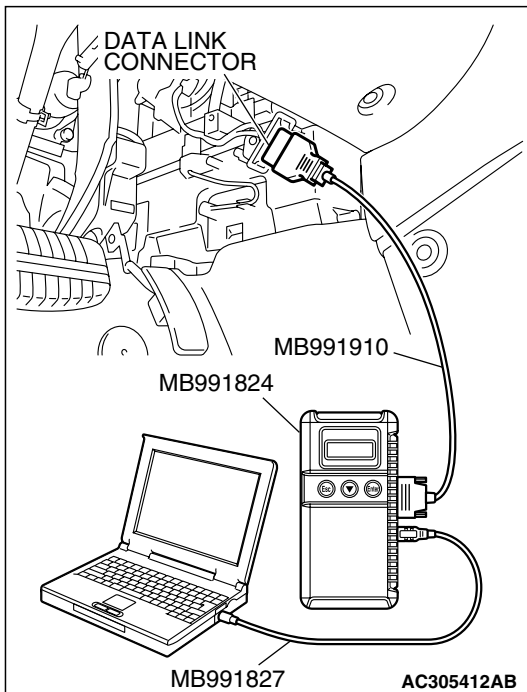


STEP 5. Using scan tool MB991958, check data list item 95: Manifold Absolute Pressure Sensor.

- (1) Connect scan tool MB991958 to the data link connector.
- (2) Turn the ignition switch to the "ON" position.
- (3) Set scan tool MB991958 to the data reading mode for item 95, Manifold Absolute Pressure Sensor.
 - When altitude is 0 m (0 foot), 101 kPa (29.8 in.Hg).
 - When altitude is 600 m (1,969 feet), 95 kPa (28.1 in.Hg).
 - When altitude is 1,200 m (3,937 feet), 88 kPa (26.0 in.Hg).
 - When altitude is 1,800 m (5,906 feet), 81 kPa (23.9 in.Hg).
- (4) Start the engine.
 - When the engine is idling, 16 – 36 kPa (4.7 – 10.6 in.Hg).
 - When the engine is suddenly revved, manifold absolute pressure varies.
- (5) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the sensor operating properly?

YES : Go to Step 6.

NO : Refer to DTC P0106 – Manifold Absolute Pressure Circuit Range / Performance Problem [P.13B-74](#), DTC P0107 – Manifold Absolute Pressure Circuit Low Input [P.13B-88](#), DTC P0108 – Manifold Absolute Pressure Circuit High Input [P.13B-100](#).

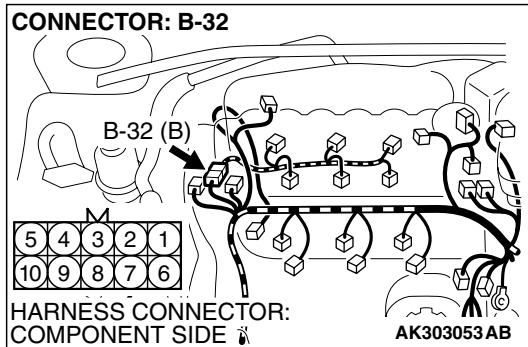


STEP 6. Check harness connector B-32 at intermediate connector for damage.

Q: Is the harness connector in good condition?


YES : Go to Step 7.

NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 11.

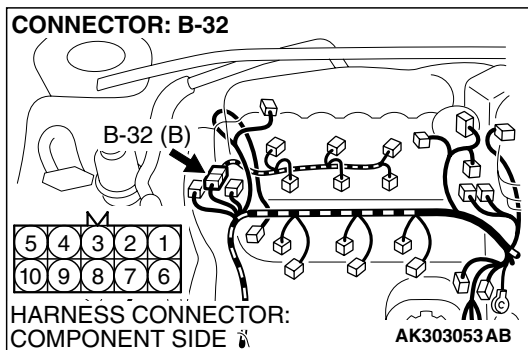

STEP 7. Check the right bank injector resistance at intermediate connector B-32.

(1) Disconnect the intermediate connector B-32.

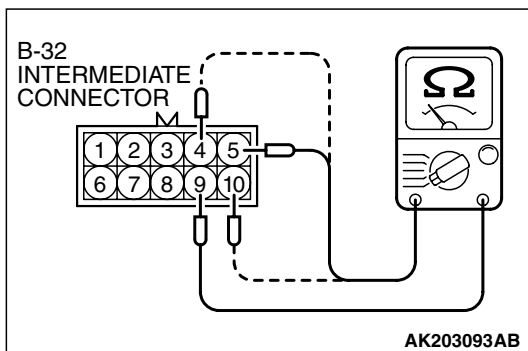



(2) Measure the resistance between each male connector side terminal.

- Measure the resistance between terminal No. 5 and No. 9 at No. 1 cylinder injector.
- Measure the resistance between terminal No. 9 and No. 10 at No. 3 cylinder injector.
- Measure the resistance between terminal No. 4 and No. 9 at No. 5 cylinder injector.
 - Resistance should be between 10.5 and 13.5 ohms [at 20°C (68°F)].

Q: Is the measured resistance between 10.5 and 13.5 ohms [at 20°C (68°F)]?

YES : Go to Step 9.

NO : Go to Step 8.

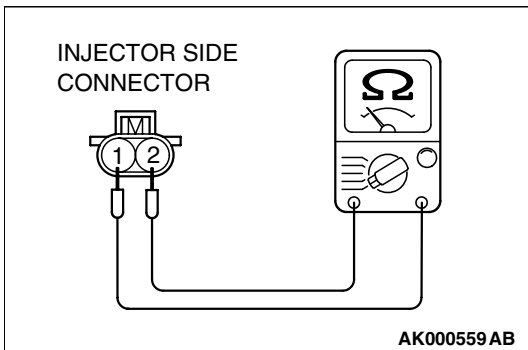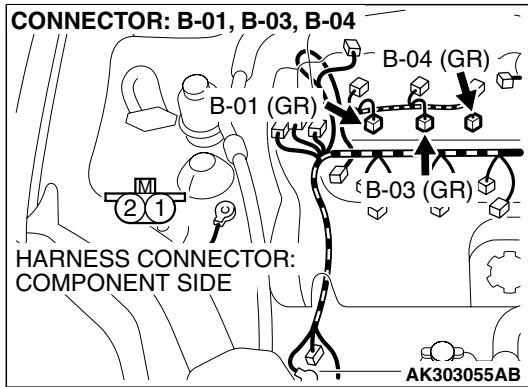

STEP 8. Check the right bank injector.

- (1) Remove the intake manifold.
- (2) Disconnect the right bank injector connector, which deviates from the standard value at Step 6.

- (3) Measure the resistance between injector side connector terminal No. 1 and No. 2.

Standard value: 10.5 – 13.5 ohms [at 20°C (68°F)]

Q: Is the measured resistance between 10.5 and 13.5 ohms [at 20°C (68°F)]?

YES : Repair harness wire between injector intermediate connector and right bank injector connector because of harness damage. Then go to Step 11.

NO : Replace the injector. Then go to Step 11.


STEP 9. Check the fuel pressure.

Refer to On-vehicle Service – Fuel Pressure Test [P.13B-1179](#).

Q: Is the fuel pressure normal?

YES : Go to Step 10.

NO : Repair it. Then go to Step 11.

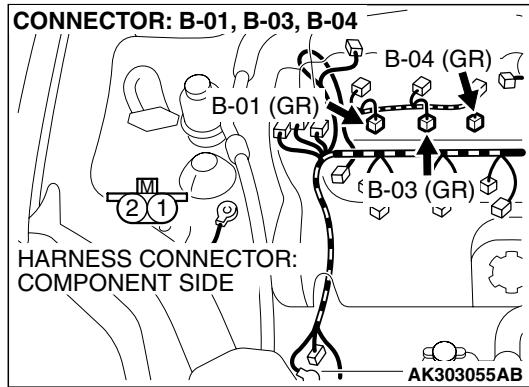**STEP 10. Replace the right bank injector.**

- (1) Replace the right bank injector.
- (2) Carry out a test drive with the drive cycle pattern. Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 2 – Fuel Trim Monitor [P.13B-6](#).
- (3) Check the diagnostic trouble code (DTC).

Q: Is DTC P0172 set?

YES : Replace the PCM. Then go to Step 11.

NO : The inspection is complete.

STEP 11. Test the OBD-II drive cycle.

- (1) Carry out a test drive with the drive cycle pattern. Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 2 – Fuel Trim Monitor [P.13B-6](#).
- (2) Check the diagnostic trouble code (DTC).

Q: Is DTC P0172 set?

YES : Retry the troubleshooting.

NO : The inspection is complete.

DTC P0174: System too Lean (bank 2)**CAUTION**

If DTC P0174 has been set, TCL related DTC U1120 is also set. After P0174 has been diagnosed, don't forget to erase DTC U1120.

Fuel Trim Circuit

- Refer to DTC P0202– Injector Circuit – Cylinder 2. [P.13B-493](#), P0204– Injector Circuit – Cylinder 4. [P.13B-516](#), P0206– Injector Circuit – Cylinder 6. [P.13B-539](#)

CIRCUIT OPERATION

- Refer to DTC P0202– Injector Circuit – Cylinder 2. [P.13B-493](#), P0204– Injector Circuit – Cylinder 4. [P.13B-516](#), P0206– Injector Circuit – Cylinder 6. [P.13B-539](#)

TECHNICAL DESCRIPTION

- If a malfunction occurs in the fuel system, the fuel trim value becomes too large.
- The PCM checks whether the fuel trim value is within a specified range.

DESCRIPTIONS OF MONITOR METHODS

Left bank air/fuel learning value (long time fuel trim) and air/fuel feedback integral value (short time fuel trim) are too lean.

MONITOR EXECUTION

Continuous

**MONITOR EXECUTION CONDITIONS
(Other monitor and Sensor)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- Misfire monitor

Sensor (The sensor below is determined to be normal)

- Mass airflow sensor
- Engine coolant temperature sensor
- Intake air temperature sensor
- Barometric pressure sensor
- Throttle position sensor

DTC SET CONDITIONS

Logic Flow Chart

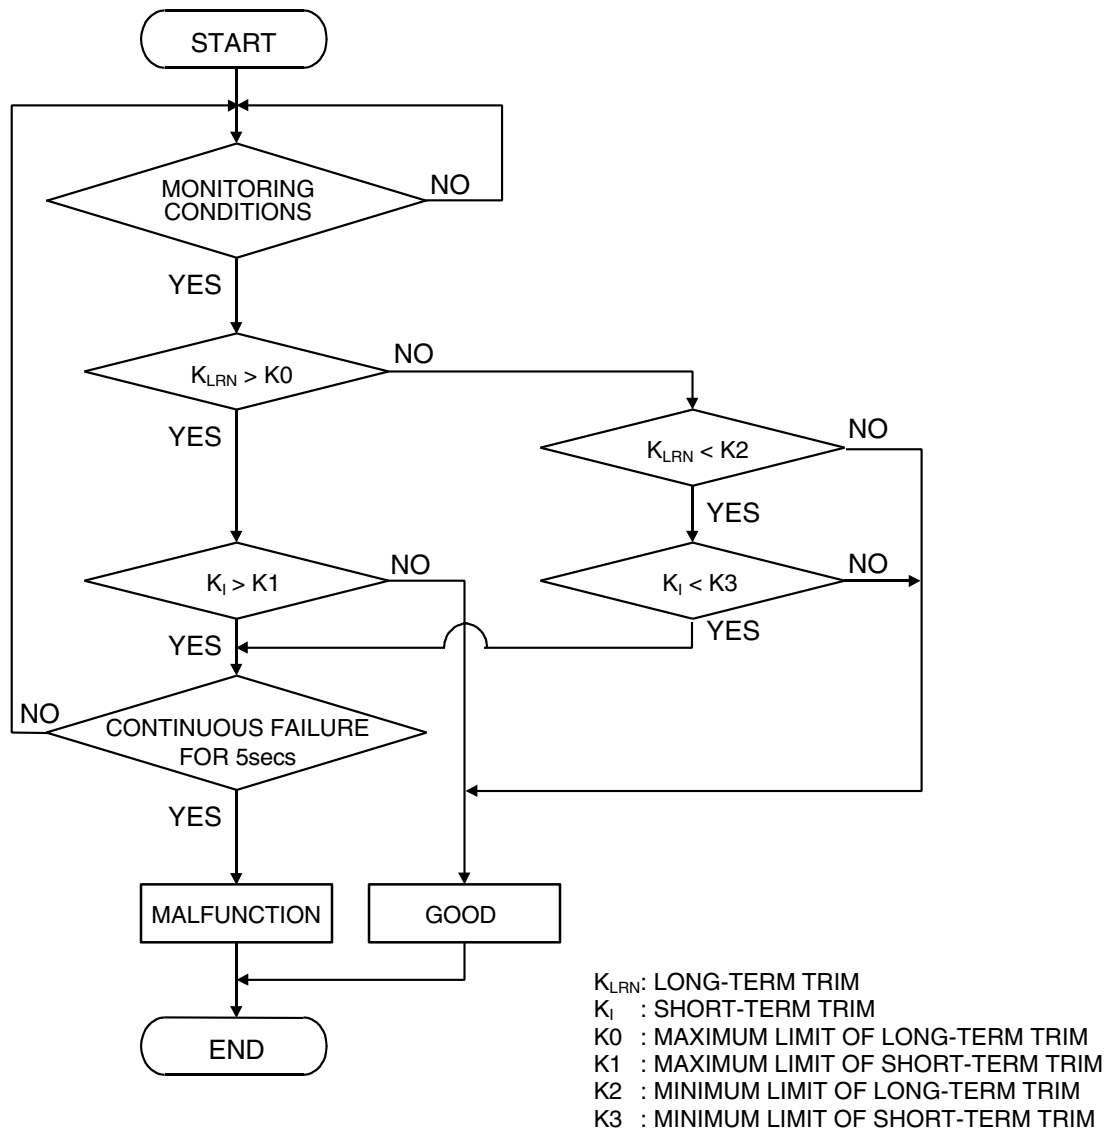

AK204050

Check Conditions

- Engine coolant temperature is lower than approximately 100°C (212°F) when the engine is started.
- Intake air temperature is lower than 60°C (140°F) when the engine is started.
- Under the closed loop air/fuel ratio control.

- Engine coolant temperature is higher than 76°C (169°F).
- Mass airflow sensor output is 8 g/sec or more.

Judgment Criteria

- Long-term fuel trim has continued to be higher than +12.5 percent for 5 seconds.
- or
- Short-term fuel trim has continued to be higher than +7.4 percent for 5 seconds.

Check Conditions

- Engine coolant temperature is lower than 100°C (212°F) when the engine is started.
- Intake air temperature is lower than 60°C (140°F) when the engine is started.
- Under the closed loop air/fuel ratio control.
- Engine coolant temperature is higher than 76°C (169°F).
- Mass airflow sensor output is 8 g/sec or less.

Judgment Criteria

- Long-term fuel trim has continued to be higher than +12.5 percent for 5 seconds.

or

- Short-term fuel trim has continued to be higher than +7.4 percent for 5 seconds.

Check Conditions

- Engine coolant temperature is higher than 100°C (212°F) when the engine is started.
- Intake air temperature is higher than 60°C (140°F) when the engine is started.
- Under the closed loop air/fuel ratio control.
- Engine coolant temperature is higher than 76°C (169°F).
- Mass airflow sensor output is 8 g/sec or more.

Judgment Criteria

- Long-term fuel trim has continued to be higher than +12.5 percent for 5 seconds.

or

- Short-term fuel trim has continued to be higher than +17.6 percent for 5 seconds.

Check Conditions

- Engine coolant temperature is higher than 100°C (212°F) when the engine is started.
- Intake air temperature is higher than 60°C (140°F) when the engine is started.
- Under the closed loop air/fuel ratio control.
- Engine coolant temperature is higher than 76°C (169°F).

- Mass airflow sensor output is 8 g/sec or less.

Judgment Criteria

- Long-term fuel trim has continued to be higher than +12.5 percent for 5 seconds.

or

- Short-term fuel trim has continued to be higher than +17.6 percent for 5 seconds.

Check Conditions

- Engine coolant temperature is higher than 76°C (169°F).
- Under the closed loop air/fuel ratio control.

Judgment Criteria

- Long-term fuel trim has continued to be +12.5 percent for 2 seconds.

or

- Short-term fuel trim has continued to be +25.0 percent for 2 seconds.

OBD-II DRIVE CYCLE PATTERN

Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 2 – Fuel Trim Monitor [P.13B-6](#).

TROUBLESHOOTING HINTS (The most likely causes for this code to be set are:)

- Mass airflow sensor failed.
- Injector (Number 2, 4, 6) failed.
- Incorrect fuel pressure.
- Air drawn in from gaps in gasket, seals, etc.
- Engine coolant temperature sensor failed.
- Intake air temperature sensor failed.
- Barometric pressure sensor failed.
- Manifold absolute pressure sensor failed.
- Exhaust leak.
- Use of incorrect or contaminated fuel.
- Harness damage in left bank injector circuit or connector damage.
- PCM failed.

DIAGNOSIS

Required Special Tools:

- MB991958: Scan Tool (MUT-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: USB Cable
 - MB991910: Main Harness A

STEP 1. Check for exhaust leak.

Q: Are there any abnormalities?

YES : Repair it. Then go to Step 15.

NO : Go to Step 2.

STEP 2. Check for intake system vacuum leak.

Q: Are there any abnormalities?

YES : Repair it. Then go to Step 15.

NO : Go to Step 3.

STEP 3. Using scan tool MB991958, check data list item 12: Mass Airflow Sensor.

⚠ CAUTION


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.


- (1) Connect scan tool MB991958 to the data link connector.
- (2) Start the engine and run at idle.
- (3) Set scan tool MB991958 to the data reading mode for item 12, Mass Airflow Sensor.
- (4) Warm up the engine to normal operating temperature: 80°C to 95°C (176°F to 203°F).
 - When idling, between 2.0 and 6.0 g/sec.
 - When 2,500 r/min, between 8.0 and 16.0 g/sec.
- (5) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the sensor operating properly?

YES : Go to Step 4.

NO : Refer to DTC P0101 – Mass Airflow Circuit Range/Performance Problem [P.13B-46](#), DTC P0102 – Mass Airflow Circuit Low Input [P.13B-57](#), DTC P0103 – Mass Airflow Circuit High Input [P.13B-67](#).

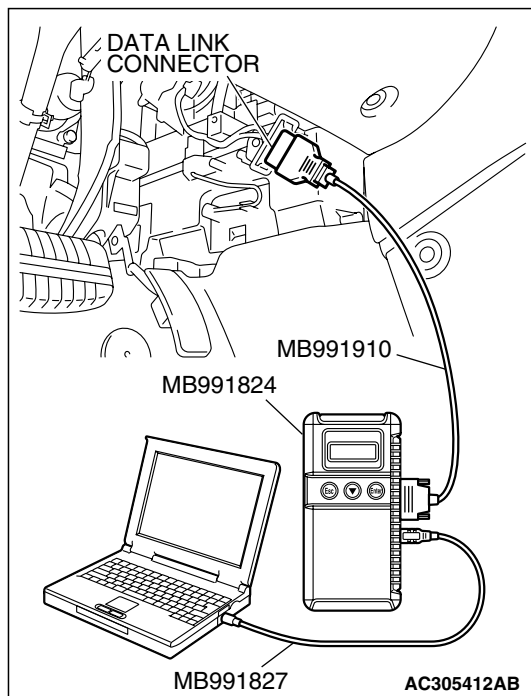

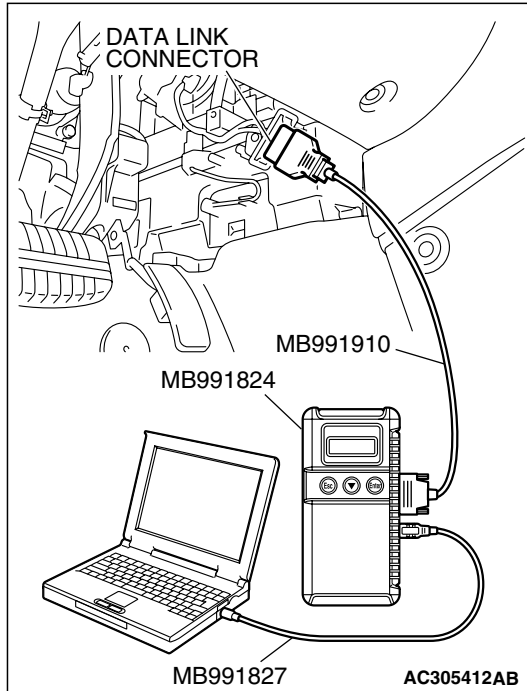


STEP 4. Using scan tool MB991958, check data list item 13: Intake Air Temperature Sensor.

- (1) Turn the ignition switch to the "ON" position.
- (2) Set scan tool MB991958 to the data reading mode for item 13, Intake Air Temperature Sensor.
 - The intake air temperature and temperature shown with the scan tool should approximately match.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the sensor operating properly?

YES : Go to Step 5.

NO : Refer to DTC P0111 – Intake Air Temperature Circuit Range/Performance Problem [P.13B-109](#), DTC P0112 – Intake Air Temperature Circuit Low Input [P.13B-118](#), DTC P0113 – Intake Air Temperature Circuit High Input [P.13B-125](#).

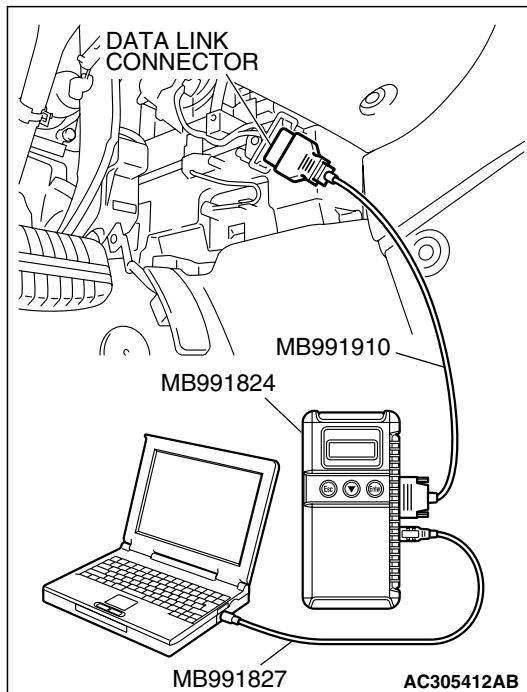


STEP 5. Using scan tool MB991958, check data list item 21: Engine Coolant Temperature Sensor.

- (1) Turn the ignition switch to the "ON" position.
- (2) Set scan tool MB991958 to the data reading mode for item 21, Engine Coolant Temperature Sensor.
 - The engine coolant temperature and temperature shown with the scan tool should approximately match.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the sensor operating properly?

YES : Go to Step 6.

NO : Refer to DTC P0116 – Engine Coolant Temperature Circuit Range/Performance Problem [P.13B-135](#), DTC P0117 – Engine Coolant Temperature Circuit Low Input [P.13B-144](#), DTC P0118 – Engine Coolant Temperature Circuit High Input [P.13B-151](#).

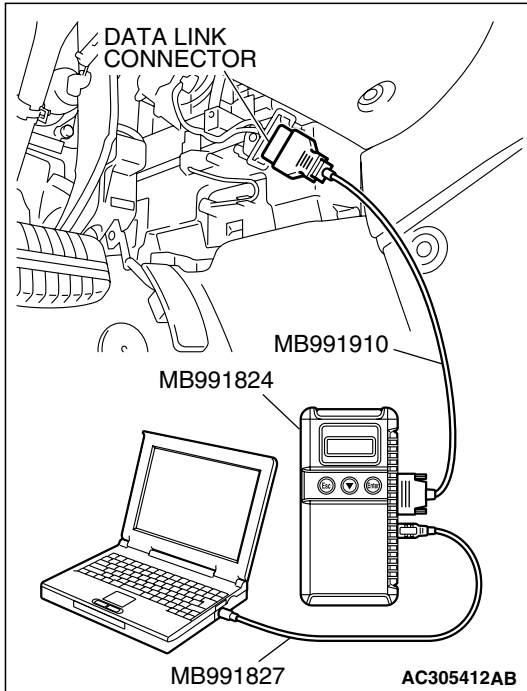


STEP 6. Using scan tool MB991958, check data list item 25: Barometric Pressure Sensor.

- (1) Turn the ignition switch to the "ON" position.
- (2) Set scan tool MB991958 to the data reading mode for item 25, Barometric Pressure Sensor.
 - When altitude is 0 m (0 foot), 101 kPa (29.8 in.Hg).
 - When altitude is 600 m (1,969 feet), 95 kPa (28.1 in.Hg).
 - When altitude is 1,200 m (3,937 feet), 88 kPa (26.0 in.Hg).
 - When altitude is 1,800 m (5,906 feet), 81 kPa (23.9 in.Hg).
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the sensor operating properly?

YES : Go to Step 7.

NO : Refer to DTC P2228 – Barometric Pressure Circuit Low Input [P.13B-992](#), DTC P2229 – Barometric Pressure Circuit High Input [P.13B-994](#).

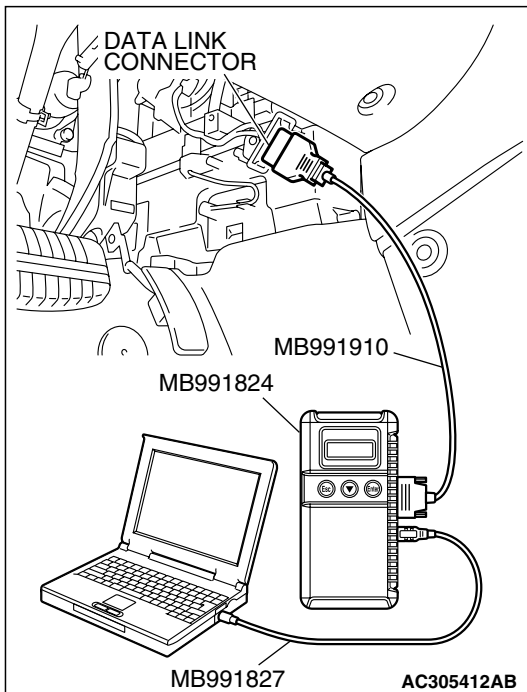


STEP 7. Using scan tool MB991958, check data list item 95: Manifold Absolute Pressure Sensor.

- (1) Connect scan tool MB991958 to the data link connector.
- (2) Turn the ignition switch to the "ON" position.
- (3) Set scan tool MB991958 to the data reading mode for item 95, Manifold Absolute Pressure Sensor.
 - When altitude is 0 m (0 foot), 101 kPa (29.8 in.Hg).
 - When altitude is 600 m (1,969 feet), 95 kPa (28.1 in.Hg).
 - When altitude is 1,200 m (3,937 feet), 88 kPa (26.0 in.Hg).
 - When altitude is 1,800 m (5,906 feet), 81 kPa (23.9 in.Hg).
- (4) Start the engine.
 - When the engine is idling, 16 – 36 kPa (4.7 – 10.6 in.Hg).
 - When the engine is suddenly revved, manifold absolute pressure varies.
- (5) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the sensor operating properly?

YES : Go to Step 8.

NO : Refer to DTC P0106 – Manifold Absolute Pressure Circuit Range / Performance Problem [P.13B-74](#), DTC P0107 – Manifold Absolute Pressure Circuit Low Input [P.13B-88](#), DTC P0108 – Manifold Absolute Pressure Circuit High Input [P.13B-100](#).

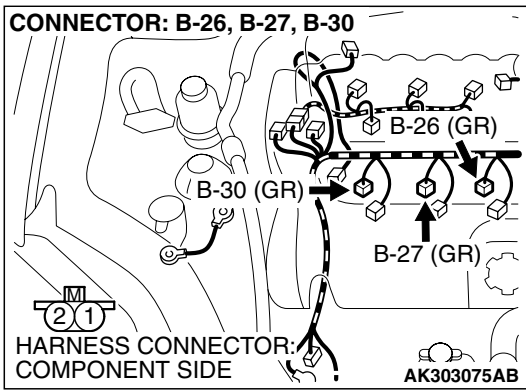


STEP 8. Check harness connector B-27, B-26, B-309 at left bank injector for damage.

Q: Is the harness connector in good condition?

YES : Then go to Step 9.

NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 15.

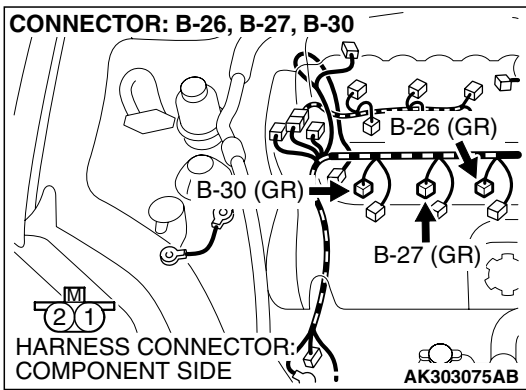

STEP 9. Check the left bank injector.

(1) Disconnect the left bank injector connector B-27, B-26, B-30.


(2) Measure the resistance between each injector side connector terminal No. 1 and No. 2.

Standard value: 10.5 – 13.5 ohms [at 20°C (68°F)]

Q: Is the measured resistance between 10.5 and 13.5 ohms [at 20°C (68°F)]?

YES : Go to Step 10.

NO : Replace the injector. Then go to Step 15.

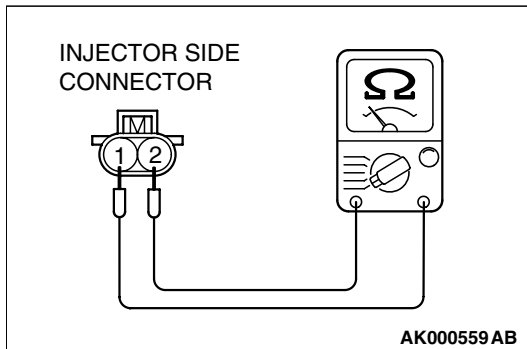



STEP 10. Check harness connector B-23 at PCM for damage.

Q: Is the harness connector in good condition?

YES : Go to Step 11.

NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 15.

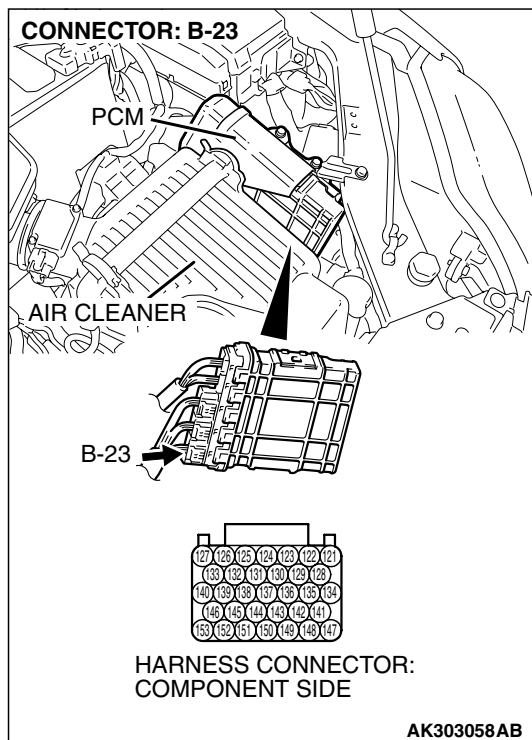

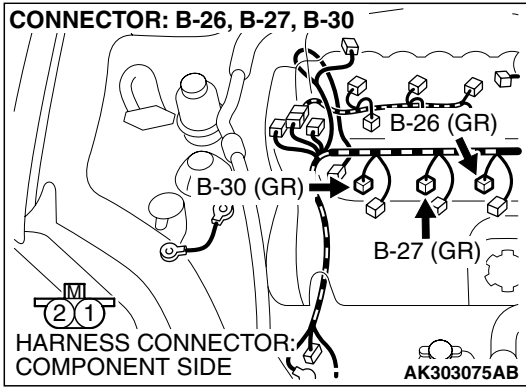


STEP 11. Check for harness damage between left bank injector connector and PCM connector.

- a. Check the harness wire between injector connector B-30 (terminal No. 2) and PCM connector B-23 (terminal No. 146) at No. 2 cylinder injector.
- b. Check the harness wire between injector connector B-27 (terminal No. 2) and PCM connector B-23 (terminal No. 139) at No. 4 cylinder injector.
- c. Check the harness wire between injector connector B-26 (terminal No. 2) and PCM connector B-23 (terminal No. 127) at No. 6 cylinder injector.

Q: Is the harness wire in good condition?

YES : Go to Step 12.

NO : Repair it. Then go to Step 15.

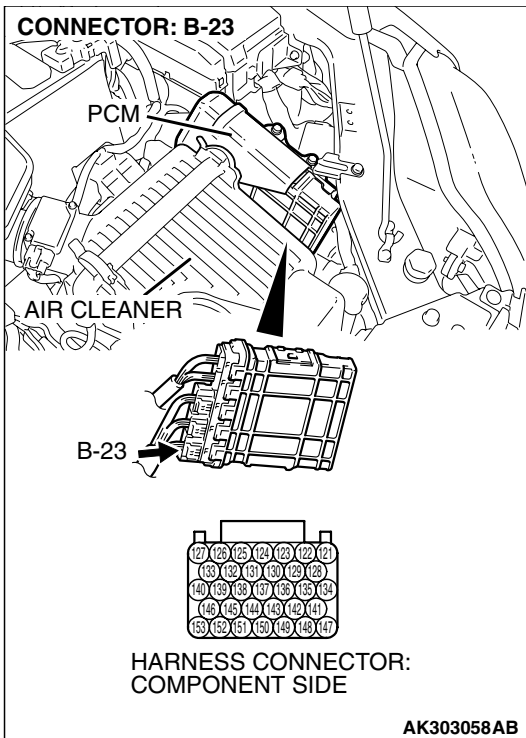

STEP 12. Check the fuel pressure.

Refer to On-vehicle Service – Fuel Pressure Test [P.13B-1179](#).

Q: Is the fuel pressure normal?

YES : Go to Step 13.

NO : Repair it. Then go to Step 15.

STEP 13. Check for entry of foreign matter (water, kerosene, etc.) into fuel.

Q: Are there any abnormalities?

YES : Replace the fuel. Then go to Step 15.

NO : Go to Step 14.

STEP 14. Replace the left bank injector.

(1) Replace the left bank injector.


(2) Carry out a test drive with the drive cycle pattern. Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 2 – Fuel Trim Monitor [P.13B-6](#).

(3) Check the diagnostic trouble code (DTC).

Q: Is DTC P0174 set?

YES : Replace the PCM. Then go to Step 15.

NO : The inspection is complete.

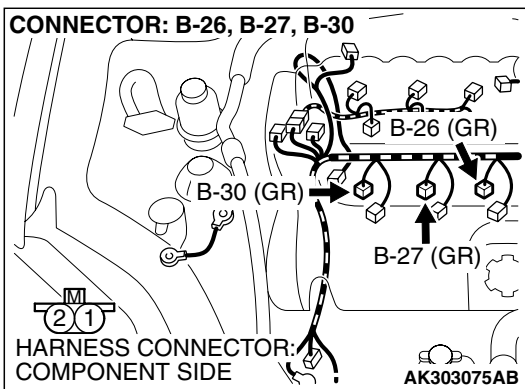

STEP 15. Test the OBD-II drive cycle.

(1) Carry out a test drive with the drive cycle pattern. Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 2 – Fuel Trim Monitor [P.13B-6](#).

(2) Check the diagnostic trouble code (DTC).

Q: Is DTC P0174 set?

YES : Retry the troubleshooting.

NO : The inspection is complete.

DTC P0175: System too Rich (bank 2)

⚠ CAUTION

If DTC P0175 has been set, TCL related DTC U1120 is also set. After P0175 has been diagnosed, don't forget to erase DTC U1120.

Fuel Trim Circuit

- Refer to DTC P0202– Injector Circuit – Cylinder 2.P.13B-493, P0204– Injector Circuit – Cylinder 4.P.13B-516, P0206– Injector Circuit – Cylinder 6.P.13B-539.

CIRCUIT OPERATION

- Refer to DTC P0202– Injector Circuit – Cylinder 2.P.13B-493, P0204– Injector Circuit – Cylinder 4.P.13B-516, P0206– Injector Circuit – Cylinder 6.P.13B-539.

TECHNICAL DESCRIPTION

- If a malfunction occurs in the fuel system, the fuel trim value becomes too small.
- The PCM checks whether the fuel trim value is within a specified range.

DESCRIPTIONS OF MONITOR METHODS

Left bank air/fuel learning value (long time fuel trim) and air/fuel feedback integral value (short time fuel trim) are too rich.

MONITOR EXECUTION

Continuous

**MONITOR EXECUTION CONDITIONS
(Other monitor and Sensor)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- Misfire monitor

Sensor (The sensor below is determined to be normal)

- Mass airflow sensor
- Engine coolant temperature sensor
- Intake air temperature sensor
- Barometric pressure sensor
- Throttle position sensor

DTC SET CONDITIONS

Logic Flow Chart

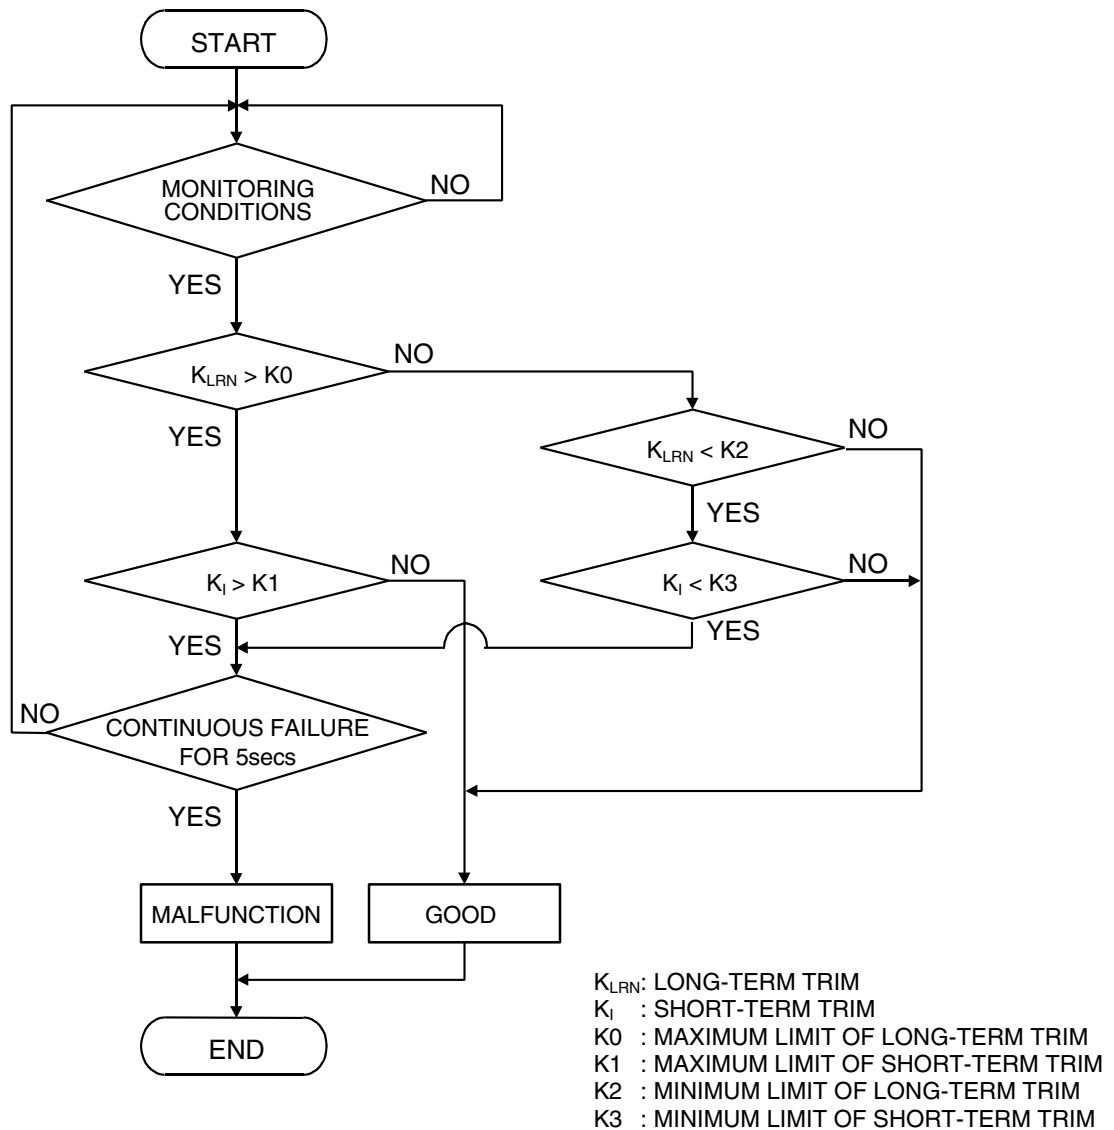

AK204050

Check Conditions

- Under the closed loop air/fuel ratio control.
- Engine coolant temperature is higher than 76°C (169°F).
- Mass airflow sensor output is 8 g/sec or more.

Judgment Criteria

- Long-term fuel trim has continued to be lower than -12.5 percent for 5 seconds.

or

- Short-term fuel trim has continued to be lower than -7.4 percent for 5 seconds.

Check Conditions

- Under the closed loop air/fuel ratio control.
- Engine coolant temperature is higher than 76°C (169°F).
- Mass airflow sensor output is 8 g/sec or less.

Judgment Criteria

- Long-term fuel trim has continued to be lower than -12.5 percent for 5 seconds.

or

- Short-term fuel trim has continued to be lower than -12.5 percent for 5 seconds.

Check Conditions

- Engine coolant temperature is higher than 76°C (169°F).
- Under the closed loop air/fuel ratio control.

Judgment Criteria

- Long-term fuel trim has continued to be -12.5 percent for 2 seconds.

or

- Short-term fuel trim has continued to be -30.0 percent for 2 seconds.

OBD-II DRIVE CYCLE PATTERN

Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 2 – Fuel Trim Monitor [P.13B-6](#).

TROUBLESHOOTING HINTS (The most likely causes for this code to be set are:)

- Mass airflow sensor failed.
- Injector (Number 2, 4, 6) failed.
- Incorrect fuel pressure.
- Engine coolant temperature sensor failed.
- Intake air temperature sensor failed.
- Barometric pressure sensor failed.
- Manifold absolute pressure sensor failed.
- Harness damage in left bank injector circuit or connector damage.
- PCM failed.

DIAGNOSIS**Required Special Tools:**

- MB991958: Scan Tool (MUT-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: USB Cable
 - MB991910: Main Harness A

STEP 1. Using scan tool MB991958, check data list item 12: Mass Airflow Sensor.**CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958 to the data link connector.
- (2) Start the engine and run at idle.
- (3) Set scan tool MB991958 to the data reading mode for item 12, Mass Airflow Sensor.
- (4) Warm up the engine to normal operating temperature: 80°C to 95°C (176°F to 203°F).
 - When idling, between 2.0 and 6.0 g/sec.
 - When 2,500 r/min, between 8.0 and 16.0 g/sec.
- (5) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the sensor operating properly?

YES : YES: Go to Step 2.

NO : Refer to, DTC P0101 – Mass Airflow Circuit Range/Performance Problem [P. 13B-46](#), DTC P0102 – Mass Airflow Circuit Low Input [P. 13B-57](#), DTC P0103 – Mass Airflow Circuit High Input [P.13B-67](#).

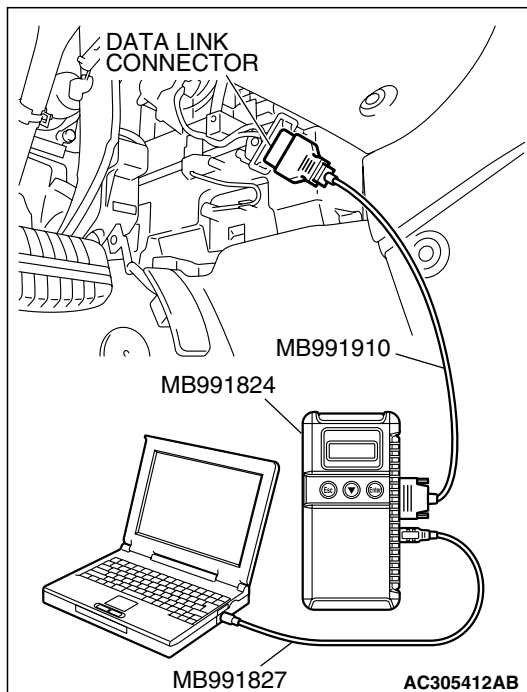


STEP 2. Using scan tool MB991958, check data list item 13: Intake Air Temperature Sensor.

- (1) Turn the ignition switch to the "ON" position.
- (2) Set scan tool MB991958 to the data reading mode for item 13, Intake Air Temperature Sensor.
 - The intake air temperature and temperature shown with the scan tool should approximately match.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the sensor operating properly?

YES : Go to Step 3.

NO : Refer to DTC P0111 – Intake Air Temperature Circuit Range/Performance Problem [P. 13B-109](#) DTC P0112 – Intake Air Temperature Circuit Low Input [P. 13B-118](#), DTC P0113 – Intake Air Temperature Circuit High Input [P. 13B-125](#).

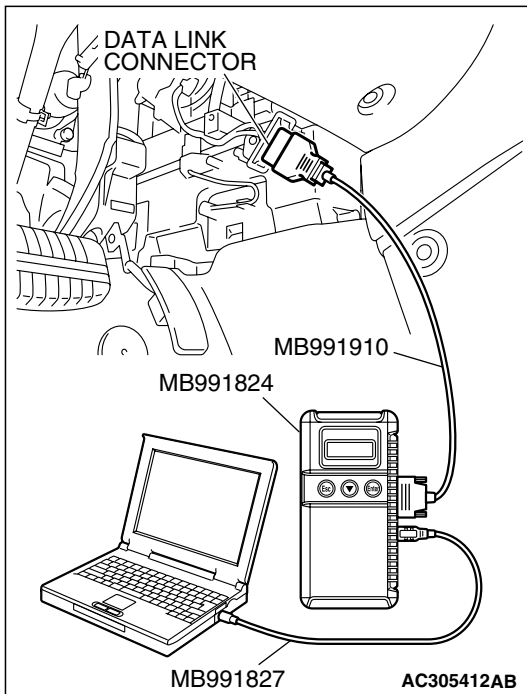


STEP 3. Using scan tool MB991958, check data list item 21: Engine Coolant Temperature Sensor.


- (1) Turn the ignition switch to the "ON" position.
- (2) Set scan tool MB991958 to the data reading mode for item 21, Engine Coolant Temperature Sensor.
 - The engine coolant temperature and temperature shown with the scan tool should approximately match.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the sensor operating properly?

YES : Go to Step 4.

NO : Refer to DTC P0116 – Engine Coolant Temperature Circuit Range/Performance Problem [P. 13B-135](#), DTC P0117 – Engine Coolant Temperature Circuit Low Input [P. 13B-144](#), DTC P0118 – Engine Coolant Temperature Circuit High Input [P. 13B-151](#).

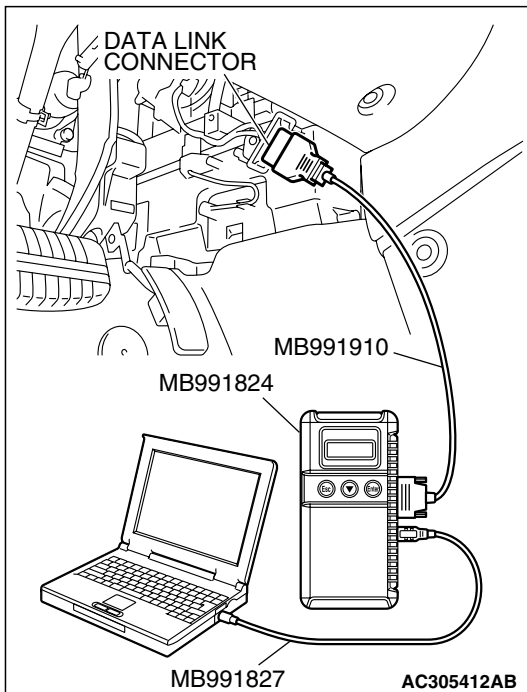

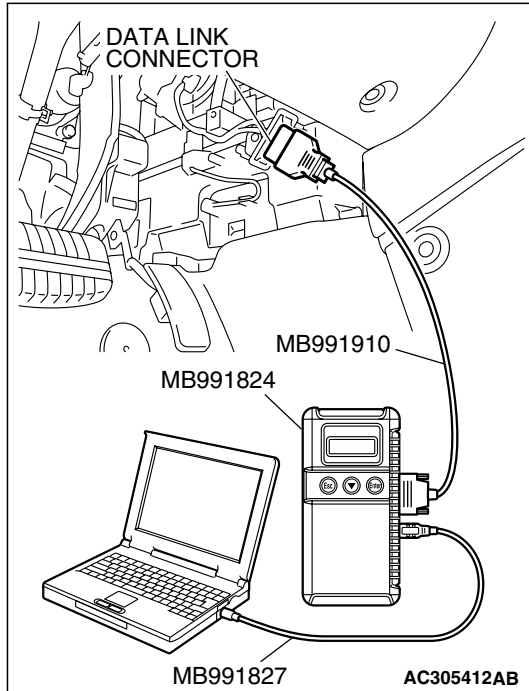


STEP 4. Using scan tool MB991958, check data list item 25: Barometric Pressure Sensor.

- (1) Turn the ignition switch to the "ON" position.
- (2) Set scan tool MB991958 to the data reading mode for item 25, Barometric Pressure Sensor.
 - When altitude is 0 m (0 foot), 101 kPa (29.8 in.Hg).
 - When altitude is 600 m (1,969 feet), 95 kPa (28.1 in.Hg).
 - When altitude is 1,200 m (3,937 feet), 88 kPa (26.0 in.Hg).
 - When altitude is 1,800 m (5,906 feet), 81 kPa (23.9 in.Hg)
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the sensor operating properly?

YES : Go to Step 5.

NO : Refer to DTC P2228 – Barometric Pressure Circuit Low Input [P.13B-992](#), DTC P2229 – Barometric Pressure Circuit High Input [P.13B-994](#).

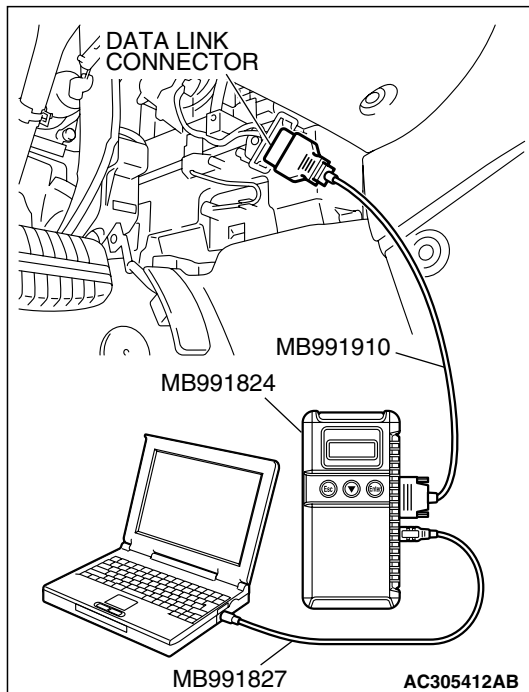



STEP 5. Using scan tool MB991958, check data list item 95: Manifold Absolute Pressure Sensor.

- (1) Connect scan tool MB991958 to the data link connector.
- (2) Turn the ignition switch to the "ON" position.
- (3) Set scan tool MB991958 to the data reading mode for item 95, Manifold Absolute Pressure Sensor.
 - When altitude is 0 m (0 foot), 101 kPa (29.8 in.Hg).
 - When altitude is 600 m (1,969 feet), 95 kPa (28.1 in.Hg).
 - When altitude is 1,200 m (3,937 feet), 88 kPa (26.0 in.Hg).
 - When altitude is 1,800 m (5,906 feet), 81 kPa (23.9 in.Hg).
- (4) Start the engine.
 - When the engine is idling, 16 – 36 kPa (4.7 – 10.6 in.Hg).
 - When the engine is suddenly revved, manifold absolute pressure varies.
- (5) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the sensor operating properly?

YES : Go to Step 6.

NO : Refer to DTC P0106 – Manifold Absolute Pressure Circuit Range / Performance Problem [P.13B-74](#), DTC P0107 – Manifold Absolute Pressure Circuit Low Input [P.13B-88](#), DTC P0108 – Manifold Absolute Pressure Circuit High Input [P.13B-100](#).

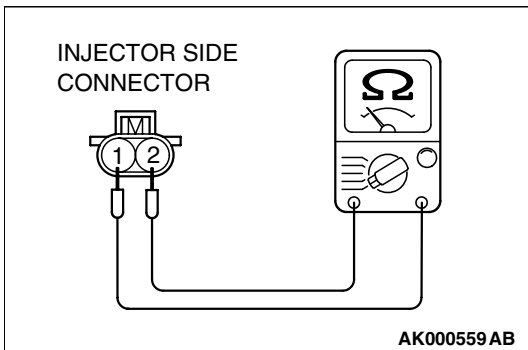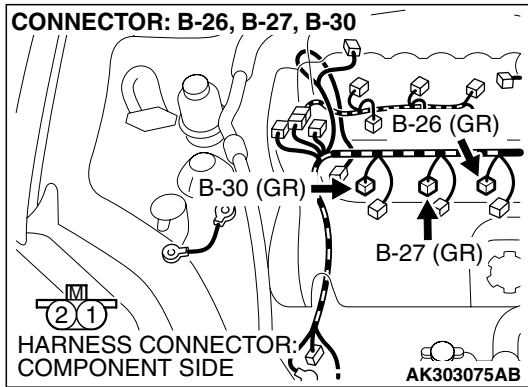

STEP 6. Check the left bank injector.

(1) Disconnect the left bank injector connector B-30, B-27 , B-26.

(2) Measure the resistance between each injector side connector terminal No. 1 and No. 2.

Standard value: 10.5 – 13.5 ohms [at 20°C (68°F)]

Q: Is the measured resistance between 10.5 and 13.5 ohms [at 20°C (68°F)]?

YES : Go to Step 7.

NO : Replace the injector. Then go to Step 9.


STEP 7. Check the fuel pressure.

Refer to On-vehicle Service – Fuel Pressure Test [P.13B-1179](#).

Q: Is the fuel pressure normal?

YES : Go to Step 8.

NO : Repair it. Then go to Step 9.

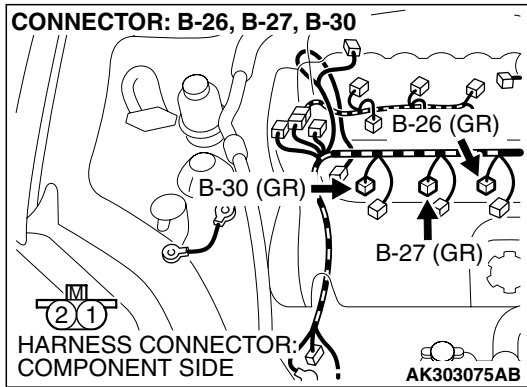**STEP 8. Replace the left bank injector.**

- (1) Replace the left bank injector.
- (2) Carry out a test drive with the drive cycle pattern. Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 2 – Fuel Trim Monitor [P.13B-6](#).
- (3) Check the diagnostic trouble code (DTC).

Q: Is DTC P0175 set?

- YES** : Replace the PCM. Then go to Step 9.
NO : The inspection is complete.

STEP 9. Test the OBD-II drive cycle.


- (1) Carry out a test drive with the drive cycle pattern. Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 2 – Fuel Trim Monitor [P.13B-6](#).
- (2) Check the diagnostic trouble code (DTC).

Q: Is DTC P0175 output?



- YES** : Retry the troubleshooting.
NO : The inspection is complete.


DTC P0181: Fuel Tank Temperature Sensor Circuit Range/Performance

Fuel Tank Temperature Sensor Circuit

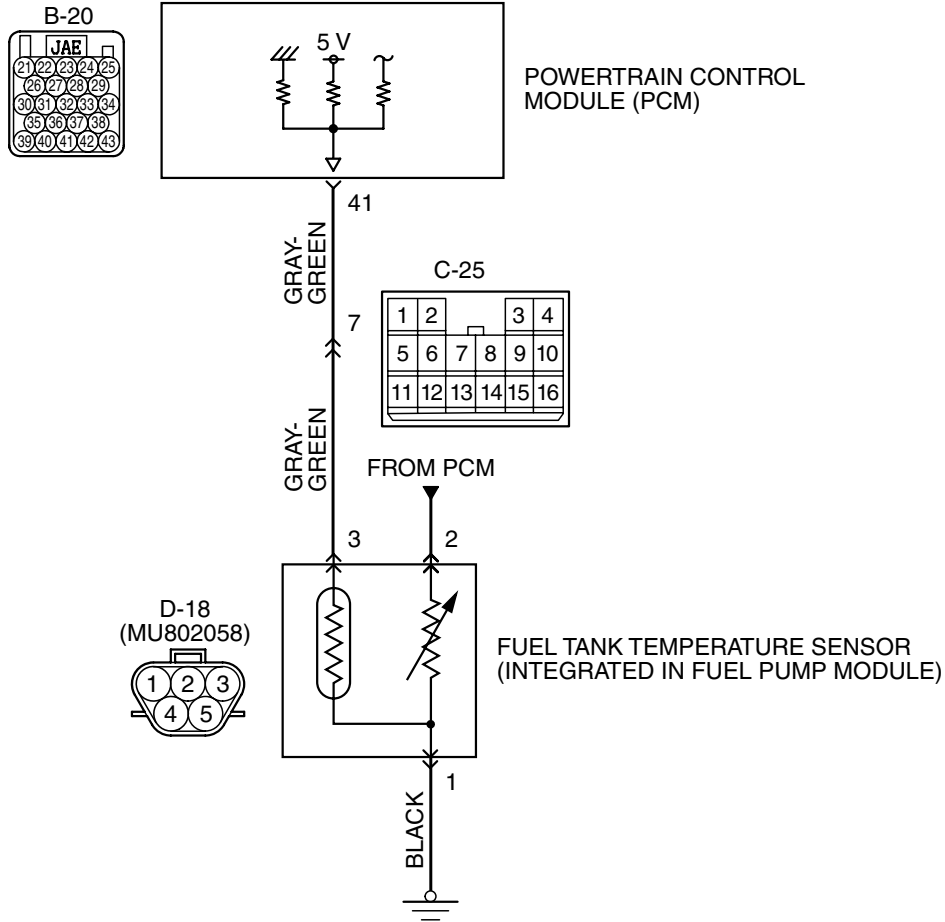

AK400883

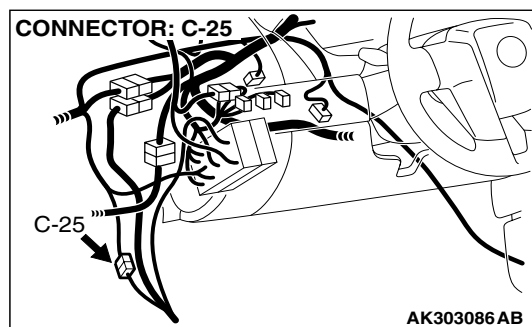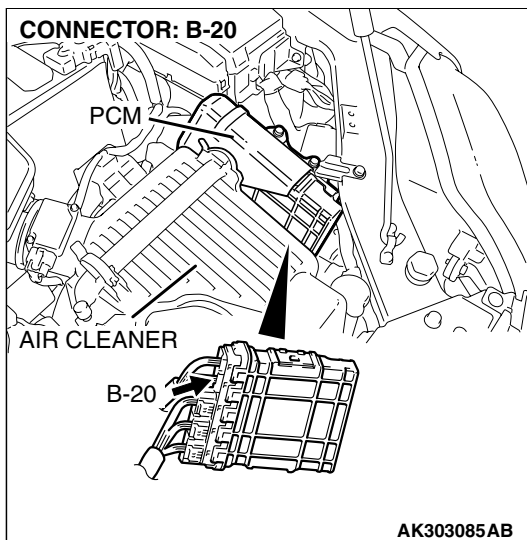

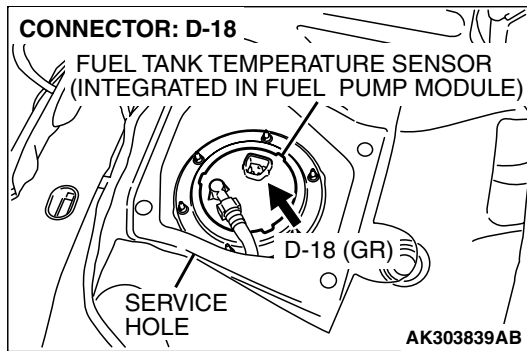

CIRCUIT OPERATION

- 5-volt voltage is applied to the fuel tank temperature sensor output terminal (terminal No. 3) from the PCM (terminal No. 41) via the resistor in the PCM.
- The fuel tank temperature sensor output voltage increases when the resistance increases and decreases when the resistance decreases. The ground terminal (terminal No. 1) is grounded to the vehicle body.

TECHNICAL DESCRIPTION

- The fuel tank temperature sensor converts the fuel tank temperature to a voltage.
- The PCM detects the fuel tank temperature with this output voltage.

DESCRIPTIONS OF MONITOR METHODS

Fuel tank temperature at engine start is higher than engine coolant temperature at engine start by specified value when engine is cold start condition.

MONITOR EXECUTION

Continuous

MONITOR EXECUTION CONDITIONS (Other monitor and Sensor)

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- Not applicable

Sensor (The sensor below is determined to be normal)

- Engine coolant temperature sensor
- Intake air temperature sensor

DTC SET CONDITIONS

Logic Flow Chart

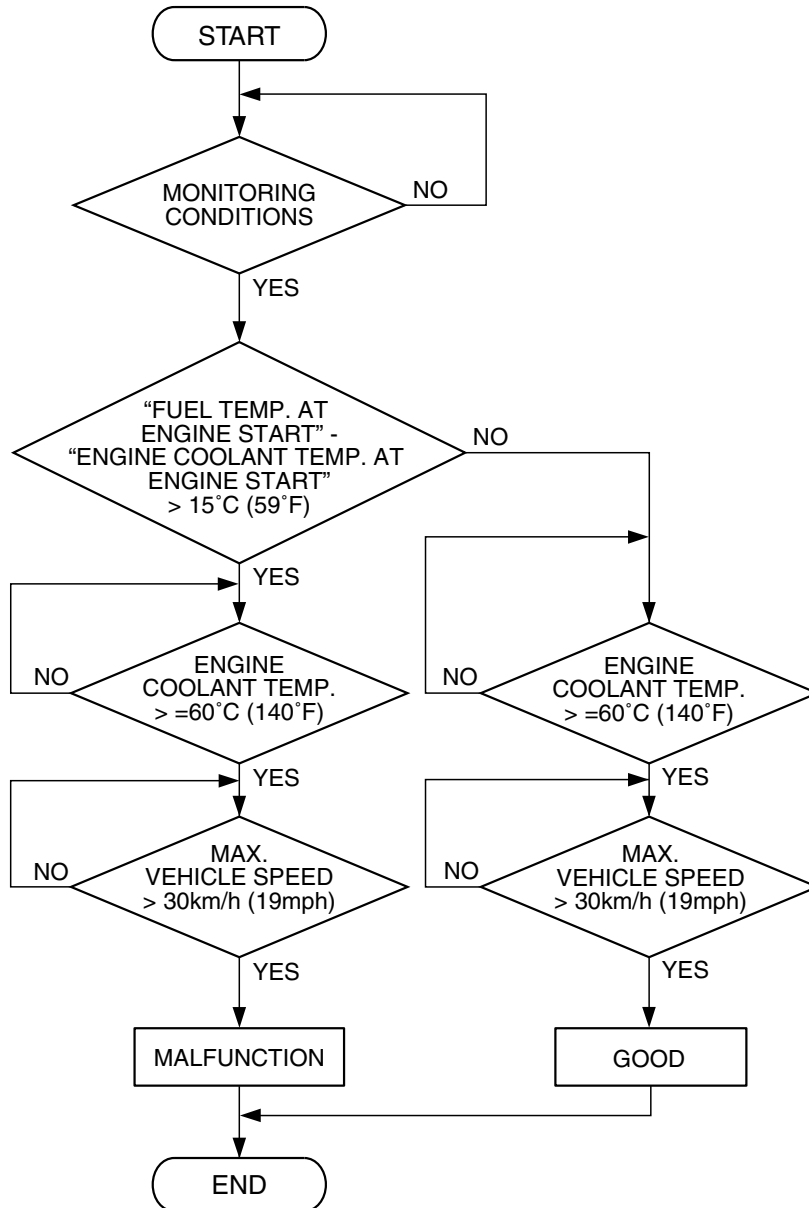

AK401537

Check Conditions

- The engine coolant temperature – intake air temperature is 5°C (9°F) or less when the engine is started.
- The engine coolant temperature is between –10°C (14°F) and 36°C (97°F) when the engine is started.
- The engine coolant temperature is higher than 60°C (140°F).
- Maximum vehicle speed is higher than 30 km/h (19 mph) after the engine starting sequence has been completed.

Judgement Criteria

- The fuel tank temperature – engine coolant temperature is 15°C (27°F) or more when the engine is started.

OBD-II DRIVE CYCLE PATTERN

Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.13B-6](#).

TROUBLESHOOTING HINTS (The most likely causes for this code to be set are:)

- Fuel tank temperature sensor failed.

- Open or shorted fuel tank temperature sensor circuit, harness damage, or connector damage.
- PCM failed.

NOTE: A diagnostic trouble code (DTC) could be output if the engine and the radiator have been flushed repeatedly when the engine coolant temperature was high (or the fuel tank temperature was high). Because this is not a failure, the DTC must be erased.

Make sure to test drive the vehicle in accordance with the OBD-II drive cycle pattern in order to verify that a DTC will not be output.

DIAGNOSIS**Required Special Tools:**

- MB991958: Scan Tool (MUT-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: USB Cable
 - MB991910: Main Harness A
- MB991923: Power Plant ECU Check Harness

STEP 1. Using scan tool MB991958, check data list item 4A: Fuel Tank Temperature Sensor.

⚠ CAUTION


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.


- (1) Connect scan tool MB991958 to the data link connector.
- (2) Turn the ignition switch to the "ON" position.
- (3) Set scan tool MB991958 to the data reading mode for item 4A, Fuel Tank Temperature Sensor.
 - Approximately the same as the ambient air temperature when the engine is cooled.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the sensor operating properly?

YES : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points – How to Cope with Intermittent Malfunctions [P.00-14](#).

NO : Go to Step 2.

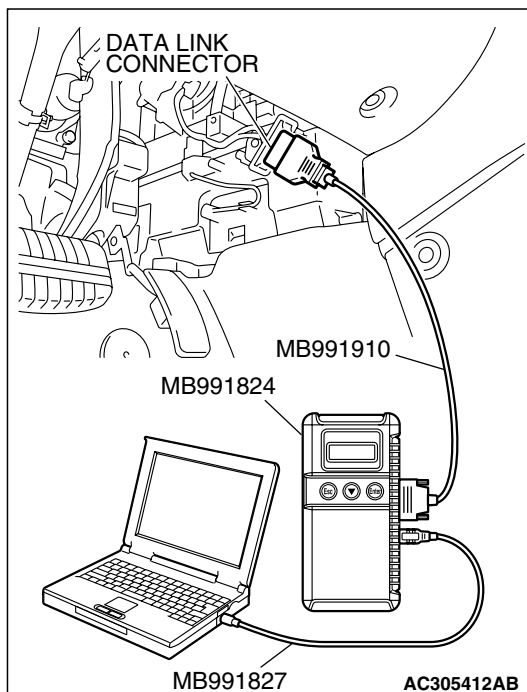

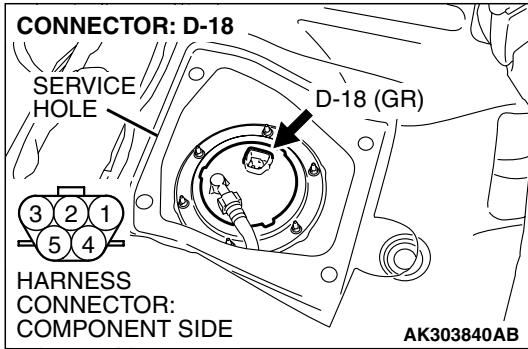


STEP 2. Check harness connector D-18 at the fuel tank temperature sensor for damage.

Q: Is the harness connector in good condition?


YES : Go to Step 3.

NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 12.

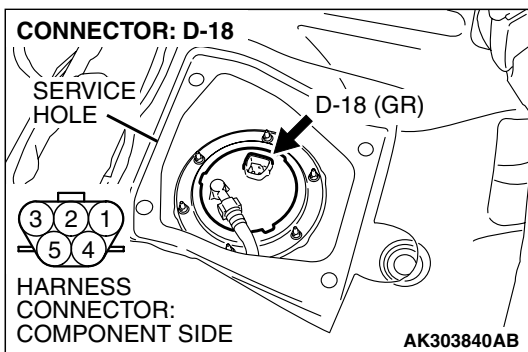

STEP 3. Check the fuel tank temperature sensor.

(1) Disconnect the fuel tank temperature sensor connector D-18.

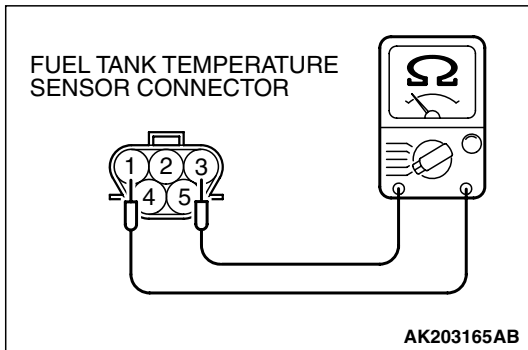

(2) Measure the resistance between terminal No. 1 and No. 3 of the fuel tank temperature sensor.



Standard value:

0.5 – 12.0 kΩ

Q: Is the measured resistance between 0.5 and 12.0 kΩ?

YES : Go to Step 4.

NO : Replace the fuel tank temperature sensor. Then go to Step 12.

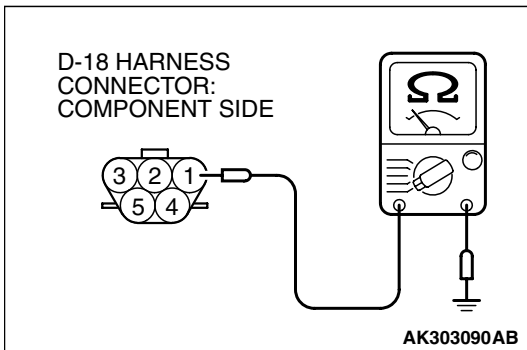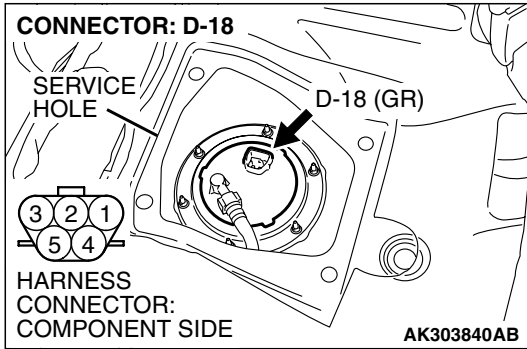

STEP 4. Check the continuity at fuel tank temperature sensor harness side connector D-18.

(1) Disconnect the connector D-18 and measure at the harness side.



(2) Check for the continuity between terminal No. 1 and ground.

- Should be less than 2 ohms.

Q: Does continuity exist?

YES : Go to Step 5.

NO : Repair harness wire between fuel tank temperature sensor connector D-18 (terminal No. 1) and ground because of open circuit or harness damage. Then go to Step 12.

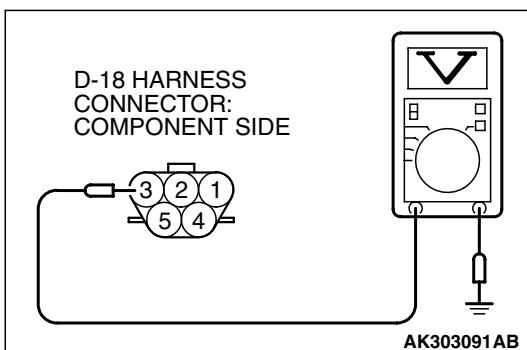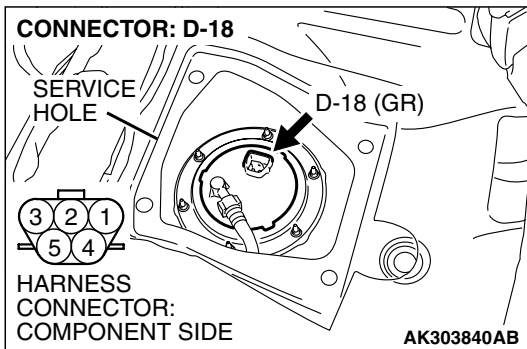

STEP 5. Measure the sensor supply voltage at fuel tank temperature sensor harness side connector D-18.

(1) Disconnect the connector D-18 and measure at the harness side.

(2) Turn the ignition switch to the "ON" position.

(3) Measure the voltage between terminal No. 3 and ground.

- Voltage should be between 4.5 and 4.9 volts

(4) Turn the ignition switch to the "LOCK" (OFF) position.



Q: Is the measured voltage between 4.5 and 4.9 volts?


YES : Go to Step 6.

NO : Go to Step 10.

STEP 6. Measure the sensor supply voltage at PCM connector B-20 by using power plant ECU check harness special tool MB991923.

- (1) Disconnect the all PCM connectors and connect power plant ECU check harness special tool MB991923 between the separated connectors.
- (2) Turn the ignition switch to the "ON" position.

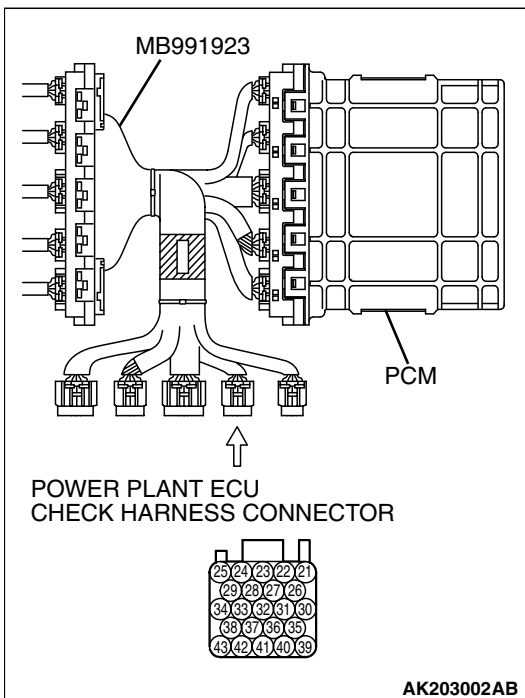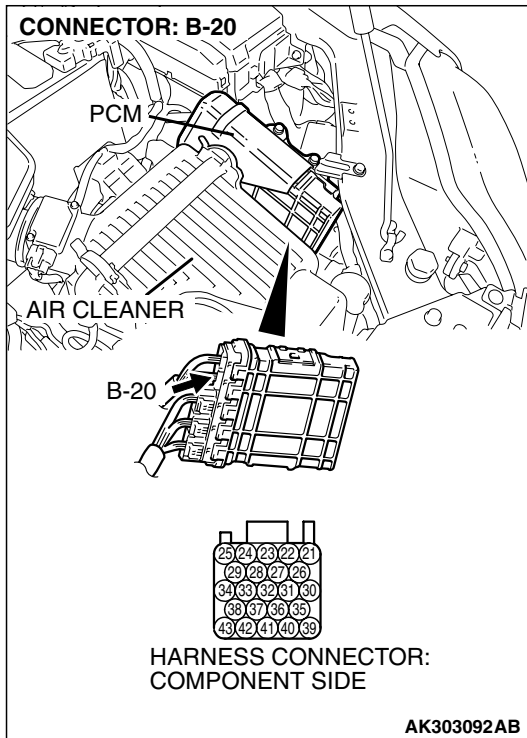

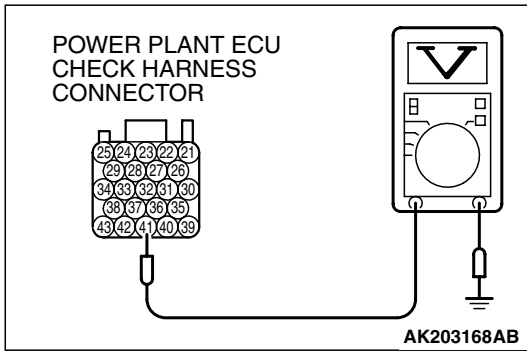

- (3) Measure the voltage between terminal No. 41 and ground.
- When fuel tank temperature is 0°C (32°F), voltage should be between 2.7 and 3.1 volts.
 - When fuel tank temperature is 20°C (68°F), voltage should be between 2.1 and 2.5 volts.
 - When fuel tank temperature is 40°C (104°F), voltage should be between 1.6 and 2.0 volts.
 - When fuel tank temperature is 80°C (176°F), voltage should be between 0.8 and 1.2 volts.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the measured voltage normal?

YES : Go to Step 7.


NO : Go to Step 8.


STEP 7. Check harness connector B-20 at PCM for damage.

Q: Is the harness connector in good condition?

YES : Check harness connector C-25 at intermediate connector for damage, and repair or replace as required. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). If intermediate connector is in good condition, repair harness wire between fuel tank temperature sensor connector D-18 (terminal No. 3) and PCM connector B-20 (terminal No. 41) because of open circuit. Then go to Step 12.

NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 12.

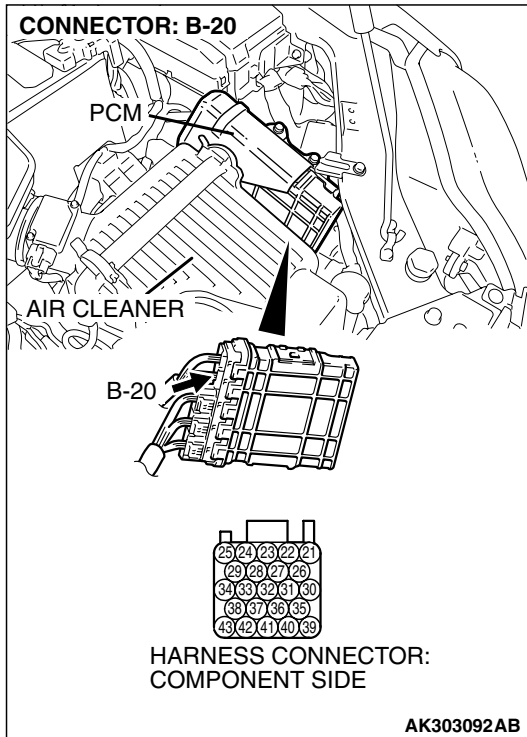

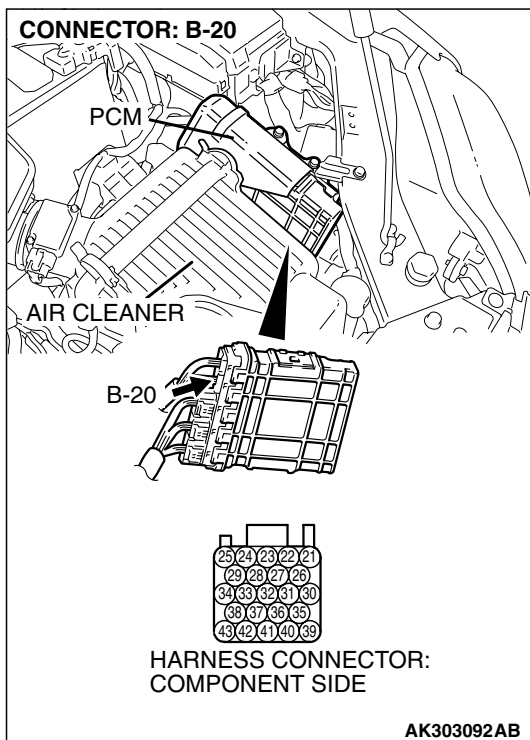



STEP 8. Check harness connector B-20 at PCM for damage.

Q: Is the harness connector in good condition?

YES : Go to Step 9.

NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 12.

STEP 9. Check for short circuit to ground between fuel tank temperature sensor connector D-18 (terminal No. 3) and PCM connector B-20 (terminal No. 41).

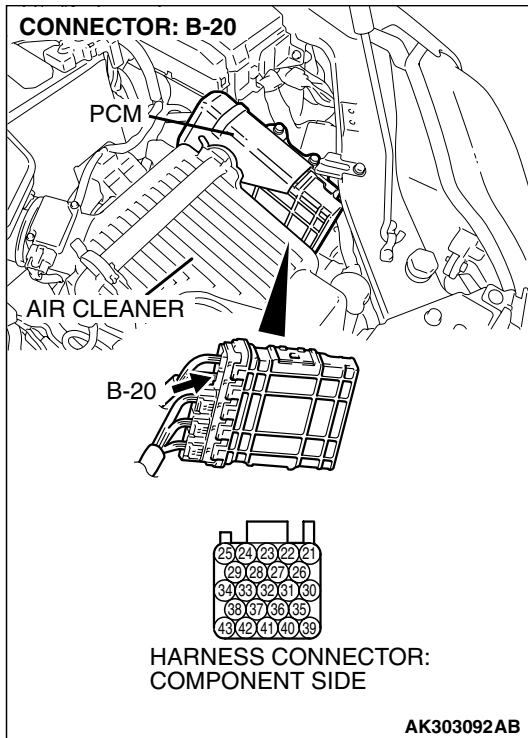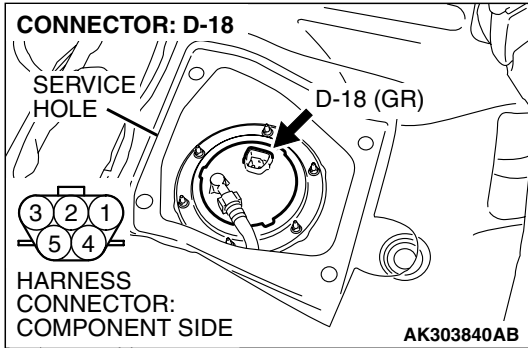

NOTE: Check harness after checking intermediate connector C-25. If intermediate connector is damaged, repair or replace it. Refer to GROUP 00E, Harness Connector Inspection P. 00E-2. Then go to Step 12.

Q: Is the harness wire in good condition?

YES : Replace the PCM. Then go to Step 12.


NO : Repair it. Then go to Step 12.

STEP 10. Check harness connector B-20 at PCM for damage.



Q: Is the harness connector in good condition?

YES : Go to Step 11.

NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 12.

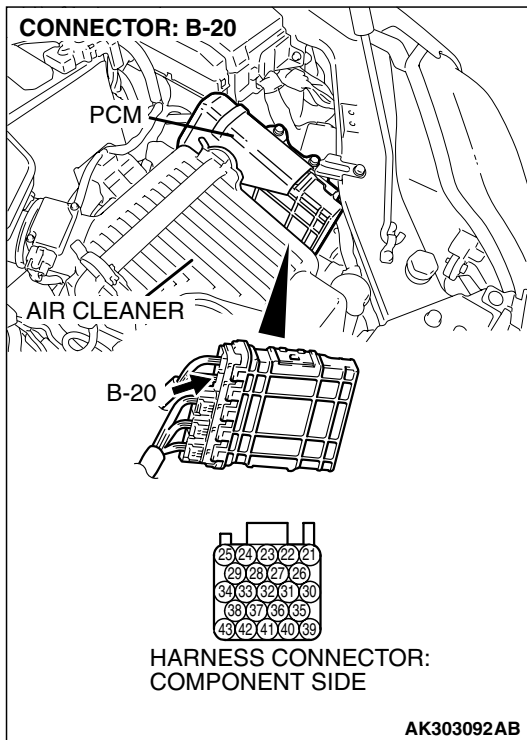

STEP 11. Check for harness damage between fuel tank temperature sensor connector D-18 (terminal No. 3) and PCM connector B-20 (terminal No. 41).

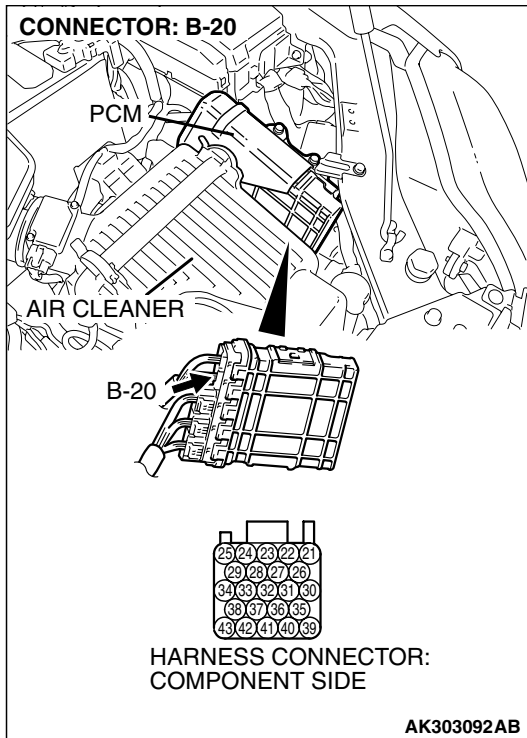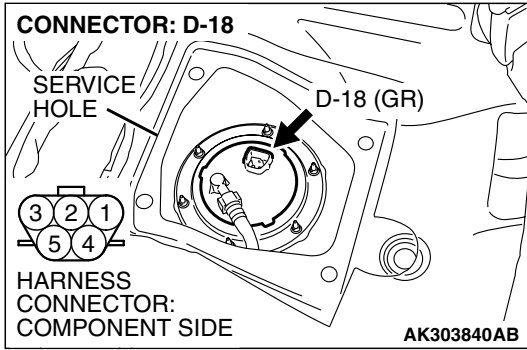

NOTE: Check harness after checking intermediate connector C-25. If intermediate connector is damaged, repair or replace it. Refer to GROUP 00E, Harness Connector Inspection P.00E-2. Then go to Step 12.

Q: Is the harness wire in good condition?

YES : Replace the PCM. Then go to Step 12.

NO : Repair it. Then go to Step 12.

STEP 12. Test the OBD-II drive cycle.

- (1) Carry out a test drive with the drive cycle pattern. Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.13B-6](#).
- (2) Check the diagnostic trouble code (DTC).


Q: Is DTC P0181 set?

YES : Retry the troubleshooting.



NO : The inspection is complete.


DTC P0182: Fuel Tank Temperature Sensor Circuit Low Input

Fuel Tank Temperature Sensor Circuit

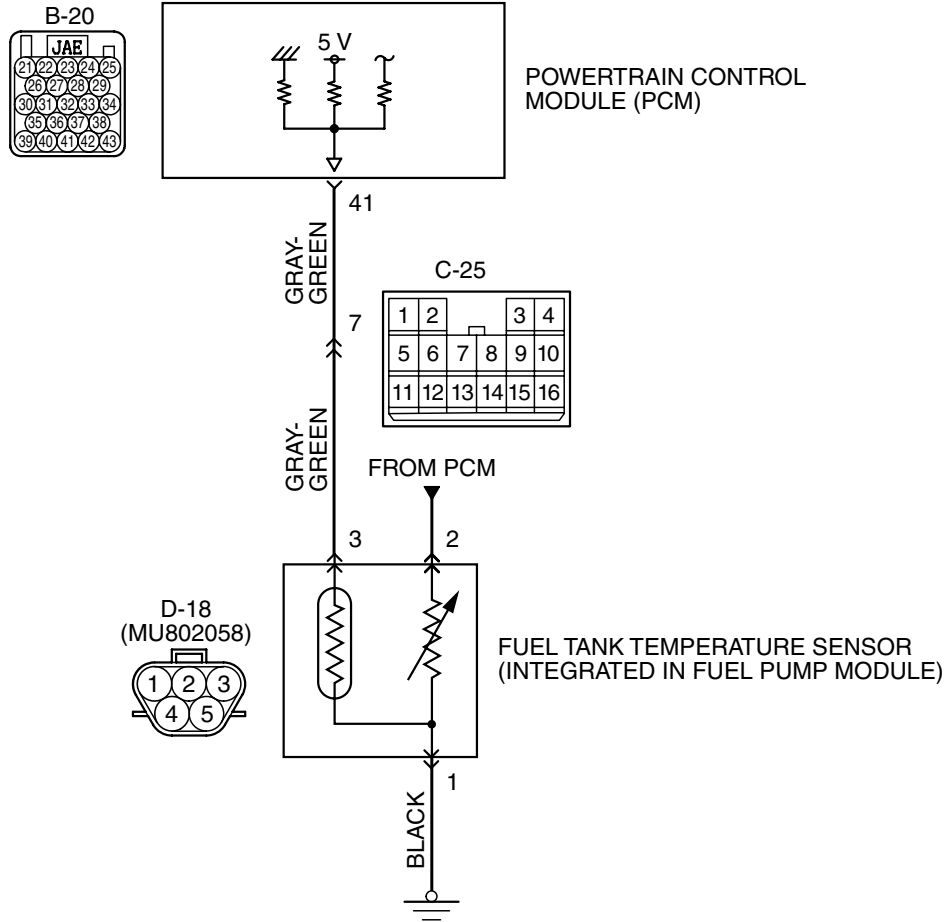

AK400883

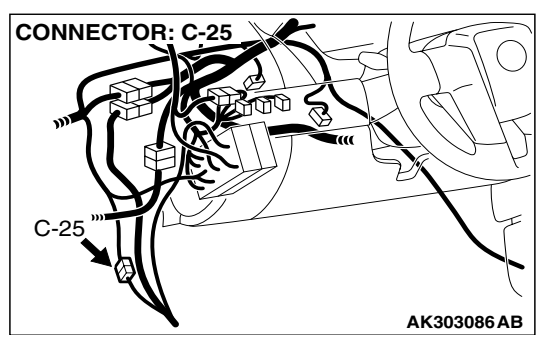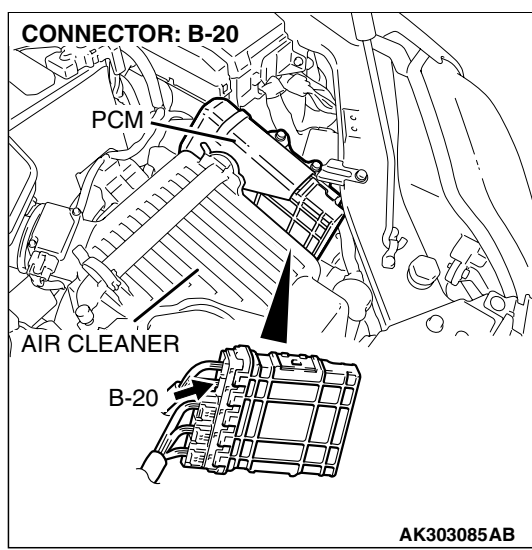

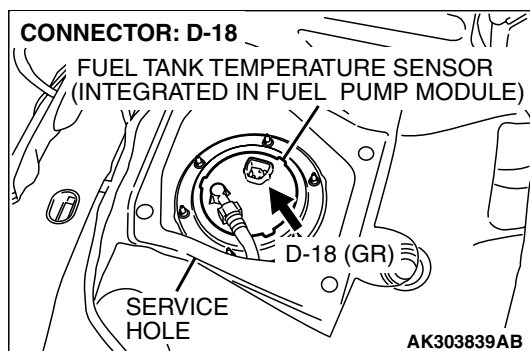

CIRCUIT OPERATION

- 5-volt voltage is applied to the fuel tank temperature sensor output terminal (terminal No. 3) from the PCM (terminal No. 41) via the resistor in the PCM.
- The fuel tank temperature sensor output voltage increases when the resistance increases and decreases when the resistance decreases. The ground terminal (terminal No. 1) is grounded to the vehicle body.

TECHNICAL DESCRIPTION

- The fuel tank temperature sensor converts the fuel tank temperature to a voltage.
- The PCM detects the fuel tank temperature with this output voltage.

DESCRIPTIONS OF MONITOR METHODS

Fuel tank temperature sensor output voltage is out of specified range.

MONITOR EXECUTION

Continuous

MONITOR EXECUTION CONDITIONS (Other monitor and Sensor)

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- Not applicable

Sensor (The sensor below is determined to be normal)

- Engine coolant temperature sensor
- Intake air temperature sensor

DTC SET CONDITIONS

Logic Flow Chart

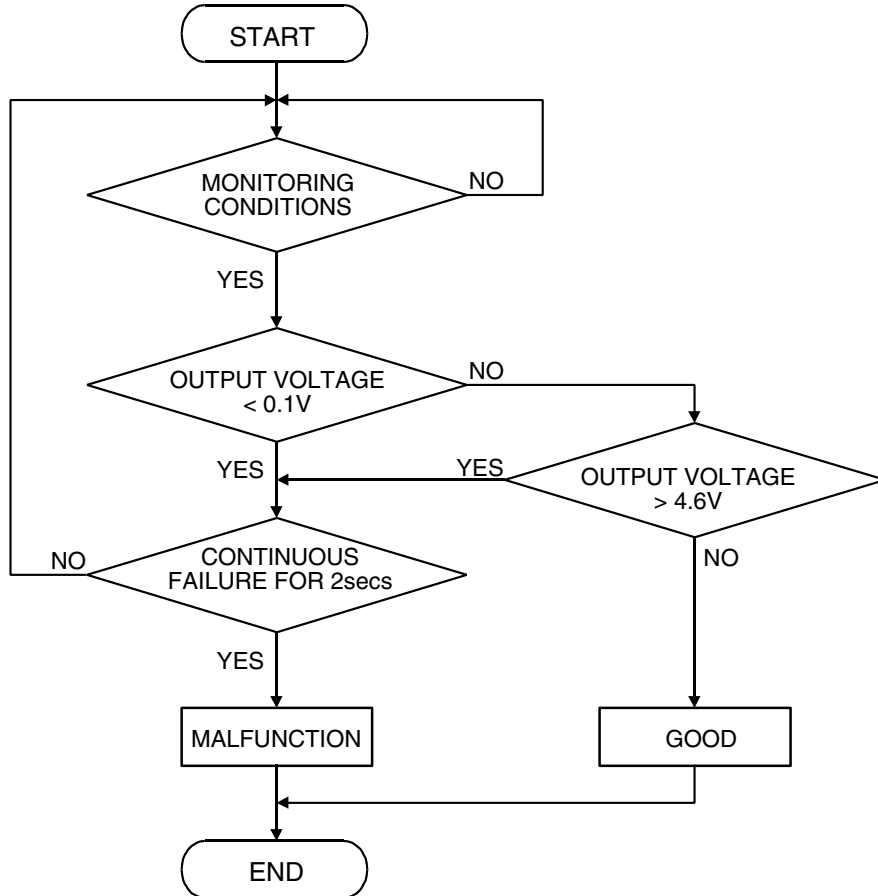

AK302403

Check Conditions

- 2 seconds or more have passed since the engine starting sequence was completed.

Judgement Criteria

- Sensor output voltage has continued to be 0.1 volt or lower for 2 seconds.

OBD-II DRIVE CYCLE PATTERN

Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.13B-6](#).

TROUBLESHOOTING HINTS (The most likely causes for this code to be set are:)

- Fuel tank temperature sensor failed.
- Shorted fuel tank temperature sensor circuit or connector damage.
- PCM failed.

DIAGNOSIS

Required Special Tools:

- MB991958: Scan Tool (MUT-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: USB Cable
 - MB991910: Main Harness A

STEP 1. Using scan tool MB991958, check data list item 4A: Fuel Tank Temperature Sensor.


⚠ CAUTION



To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958 to the data link connector.
- (2) Turn the ignition switch to the "ON" position.
- (3) Set scan tool MB991958 to the data reading mode for item 4A, Fuel Tank Temperature Sensor.
 - Approximately the same as the ambient air temperature when the engine is cooled.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the sensor operating properly?

- YES :** It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points – How to Cope with Intermittent Malfunctions [P.00-14](#).
- NO :** Go to Step 2.

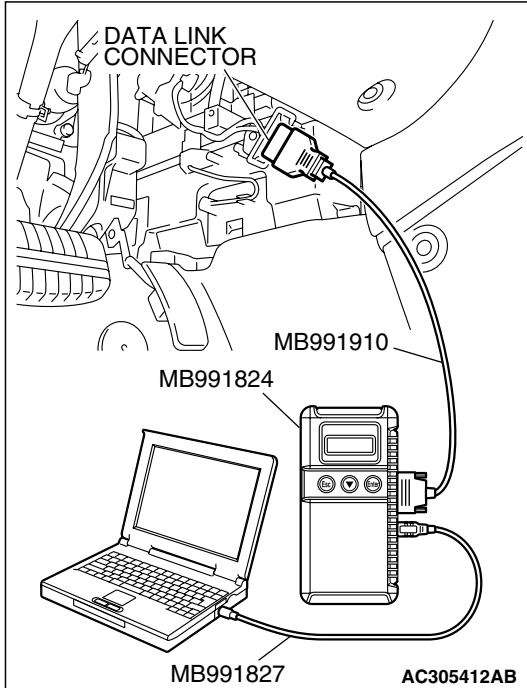

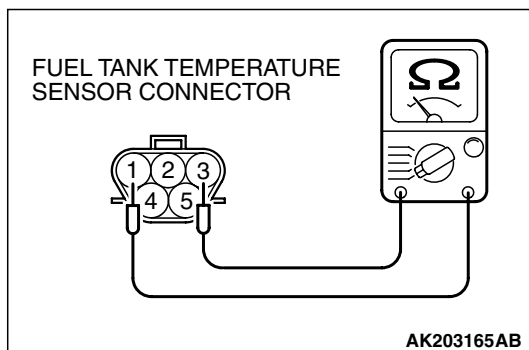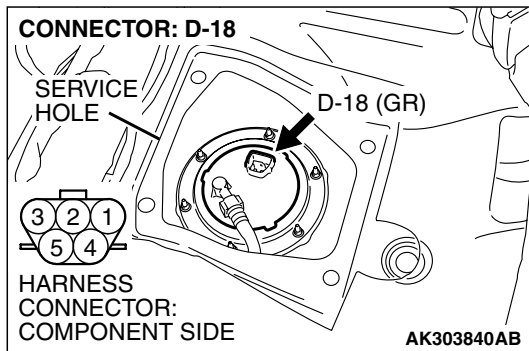**STEP 2. Check the fuel tank temperature sensor.**

(1) Disconnect the fuel tank temperature sensor connector D-18.

(2) Measure the resistance between terminal No. 1 and No. 3 of the fuel tank temperature sensor.

Standard value:

0.5 – 12.0 kΩ

Q: Is the measured resistance between 0.5 and 12.0 kΩ?

YES : Go to Step 3.



NO : Replace the fuel tank temperature sensor. Then go to Step 5.

STEP 3. Check harness connector D-18 at the fuel tank temperature sensor and harness connector B-20 at PCM for damage.



Q: Is the harness connector in good condition?

YES : Go to Step 4.

NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 5.

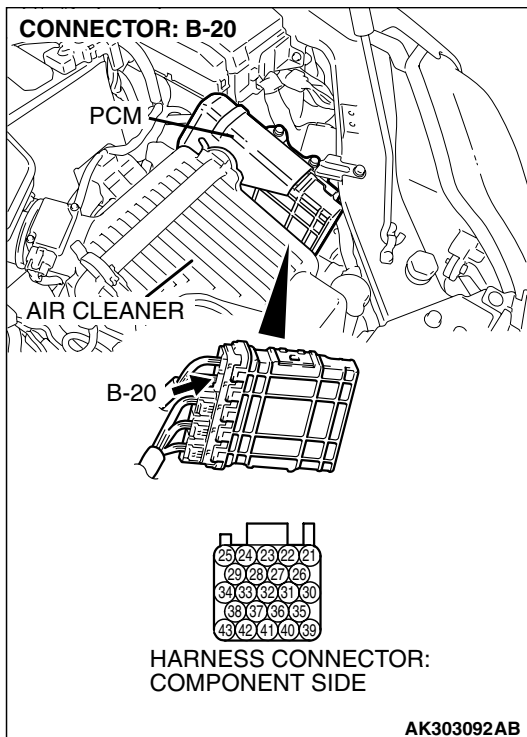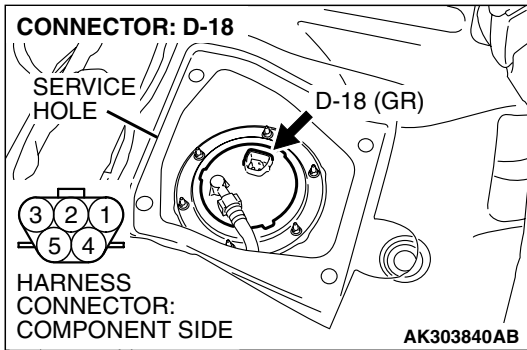

STEP 4. Check for short circuit to ground between fuel tank temperature sensor connector D-18 and PCM connector B-20.

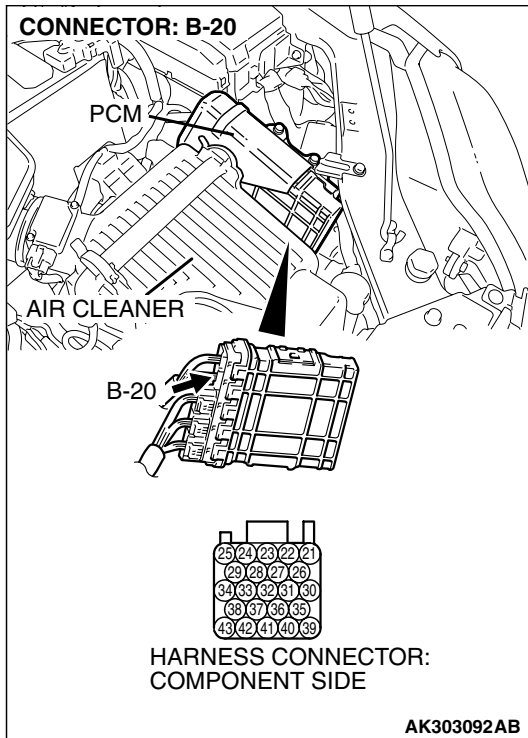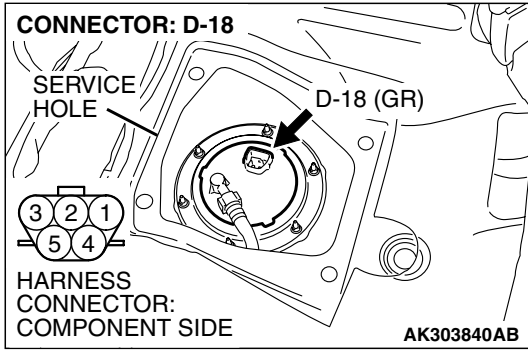

NOTE: Check harness after checking intermediate connector C-25. If the intermediate connector is damaged, repair or replace it. Refer to GROUP 00E, Harness Connector Inspection P.00E-2. Then go to Step 5.

Q: Is the harness wire in good condition?

YES : Replace the PCM. Then go to Step 5.

NO : Repair it. Then go to Step 5.

STEP 5. Test the OBD-II drive cycle.

- (1) Carry out a test drive with the drive cycle pattern. Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.13B-6](#).
- (2) Check the diagnostic trouble code (DTC).


Q: Is DTC P0182 set?

YES : Retry the troubleshooting.



NO : The inspection is complete.


DTC P0183: Fuel Tank Temperature Sensor Circuit High Input

Fuel Tank Temperature Sensor Circuit

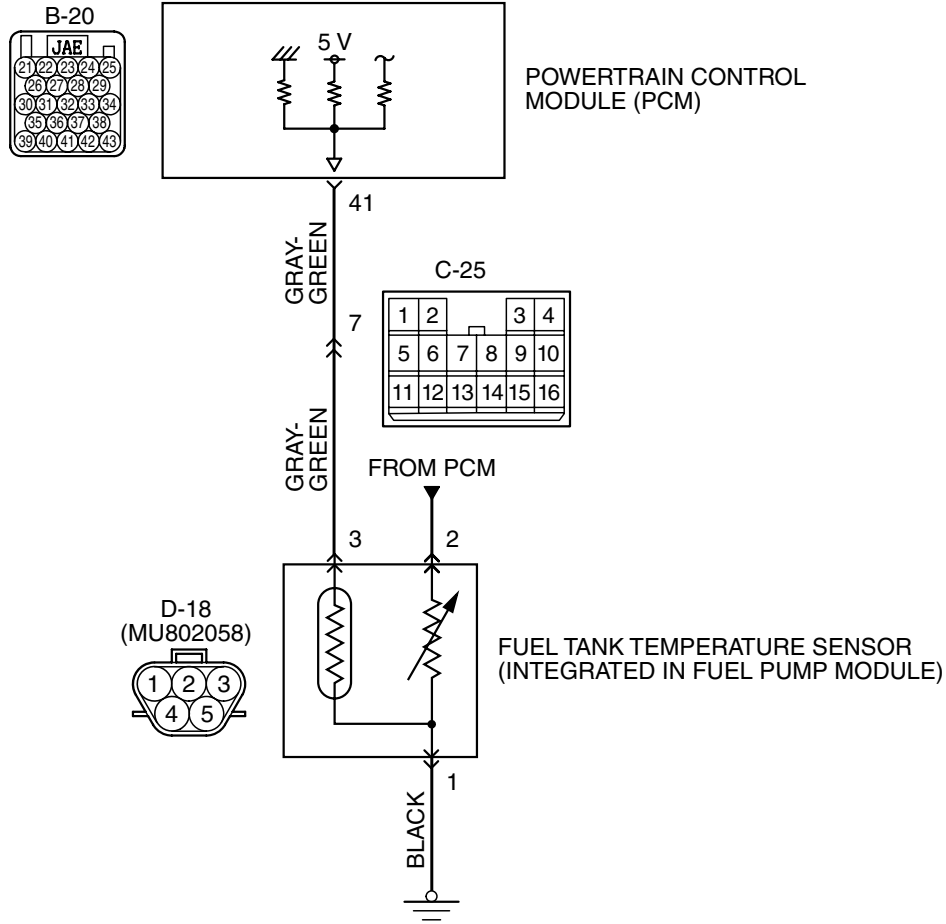

AK400883

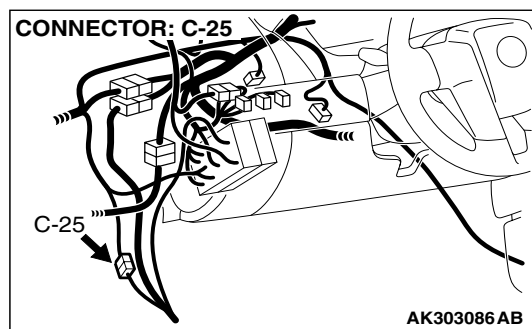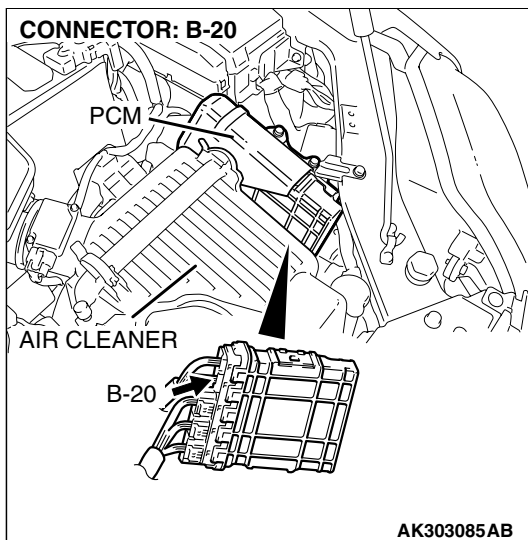

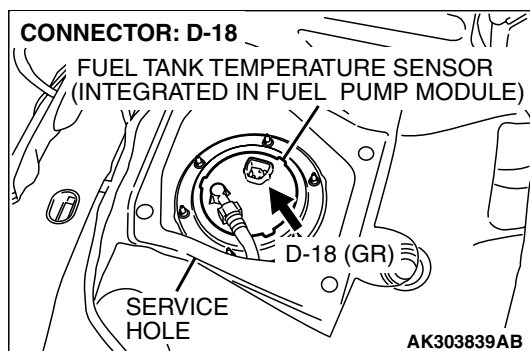

CIRCUIT OPERATION

- 5-volt voltage is applied to the fuel tank temperature sensor output terminal (terminal No. 3) from the PCM (terminal No. 41) via the resistor in the PCM.
- The fuel tank temperature sensor output voltage increases when the resistance increases and decreases when the resistance decreases. The ground terminal (terminal No. 1) is grounded to the vehicle body.

TECHNICAL DESCRIPTION

- The fuel tank temperature sensor converts the fuel tank temperature to a voltage.
- The PCM detects the fuel tank temperature with this output voltage.

DESCRIPTIONS OF MONITOR METHODS

Fuel tank temperature sensor output voltage is out of specified range.

MONITOR EXECUTION

Continuous

MONITOR EXECUTION CONDITIONS (Other monitor and Sensor)

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- Not applicable

Sensor (The sensor below is determined to be normal)

- Engine coolant temperature sensor
- Intake air temperature sensor

DTC SET CONDITIONS

Logic Flow Chart

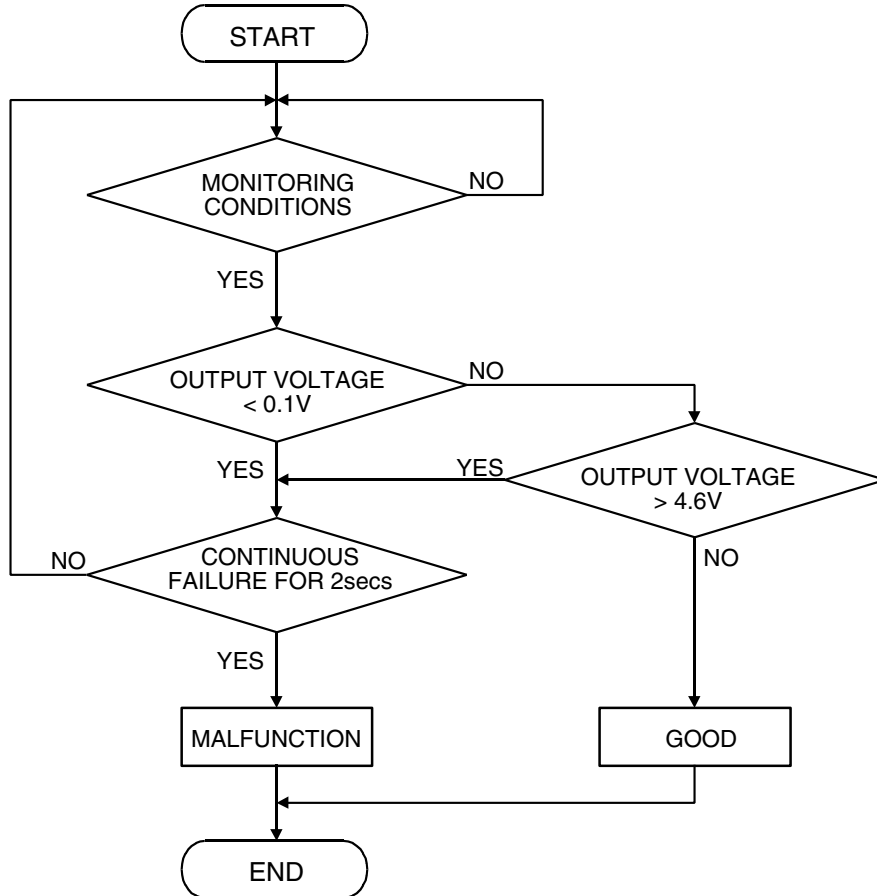

AK302403

Check Conditions

- 2 seconds or more have passed since the engine starting sequence was completed.

Judgement Criteria

- Sensor output voltage has continued to be 4.6 volts or higher for 2 seconds.

OBD-II DRIVE CYCLE PATTERN

Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.13B-6](#).

TROUBLESHOOTING HINTS (The most likely causes for this code to be set are:)

- Fuel tank temperature sensor failed.
- Open fuel tank temperature sensor circuit, harness damage, or connector damage.
- PCM failed.

DIAGNOSIS

Required Special Tools:

- MB991958: Scan Tool (MUT-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: USB Cable
 - MB991910: Main Harness A
- MB991923: Power Plant ECU Check Harness

STEP 1. Using scan tool MB991958, check data list item 4A: Fuel Tank Temperature Sensor.

⚠ CAUTION


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958 to the data link connector.
- (2) Turn the ignition switch to the "ON" position.
- (3) Set scan tool MB991958 to the data reading mode for item 4A, Fuel Tank Temperature Sensor.
 - Approximately the same as the ambient air temperature when the engine is cooled.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the sensor operating properly?

YES : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points – How to Cope with Intermittent Malfunctions P.00-14.

NO : Go to Step 2.

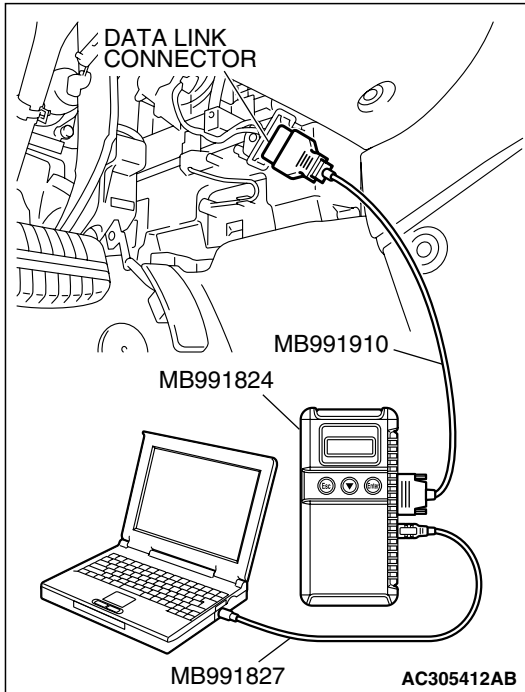




STEP 2. Check harness connector D-18 at the fuel tank temperature sensor for damage.

Q: Is the harness connector in good condition?

YES : Go to Step 3.

NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection P.00E-2. Then go to Step 11.

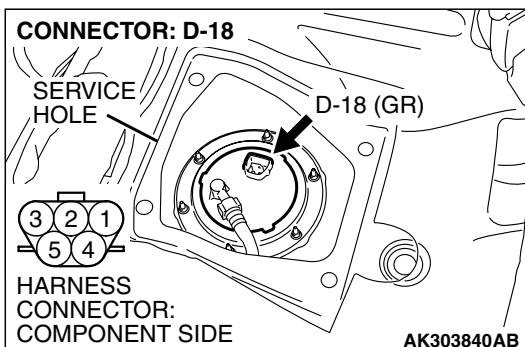

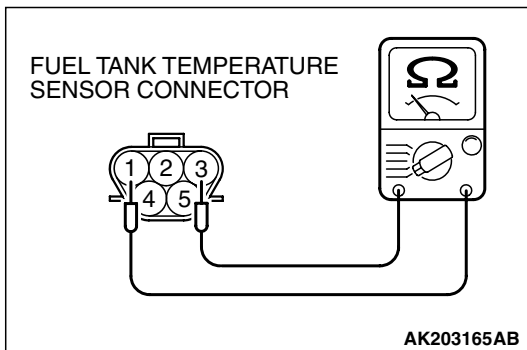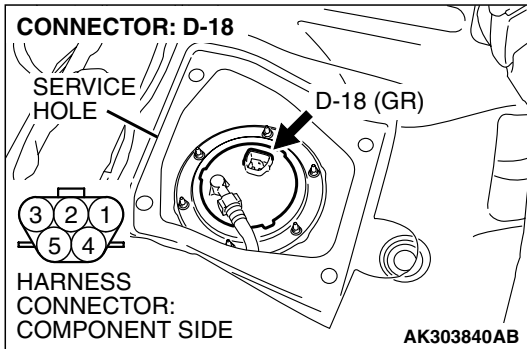**STEP 3. Check the fuel tank temperature sensor.**

- (1) Disconnect the fuel tank temperature sensor connector D-18.

- (2) Measure the resistance between terminal No. 1 and No. 3 of the fuel tank temperature sensor.



Standard value:

0.5 – 12.0 k Ω

Q: Is the measured resistance between 0.5 and 12.0 k Ω ?

YES : Go to Step 4.

NO : Replace the fuel tank temperature sensor. Then go to Step 11.

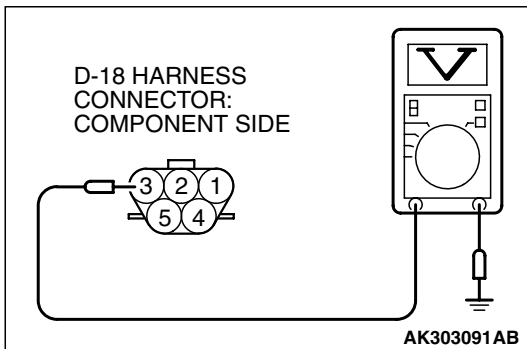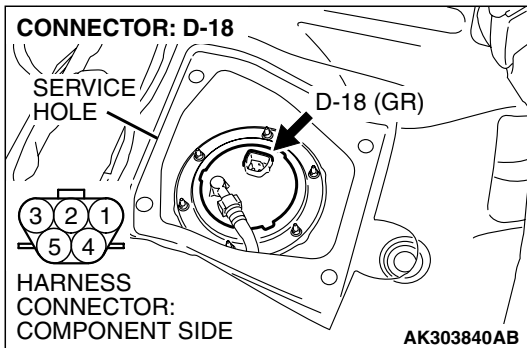**STEP 4. Check the sensor supply voltage at fuel tank temperature sensor harness side connector D-18.**

- (1) Disconnect the connector D-18 and measure at the harness side.

- (2) Turn the ignition switch to the "ON" position.

- (3) Measure the voltage between terminal No. 3 and ground.

- Voltage should be between 4.5 and 4.9 volts.

- (4) Turn the ignition switch to the "LOCK" (OFF) position.



Q: Is the measured voltage between 4.5 and 4.9 volts?


YES : Go to Step 8.

NO : Go to Step 5.

STEP 5. Check the sensor supply voltage at PCM connector B-20 by using power plant ECU check harness special tool MB991923.

- (1) Disconnect the all PCM connectors and connect power plant ECU check harness special tool MB991923 between the separated connectors.
- (2) Disconnect the fuel tank temperature sensor connector D-18.
- (3) Turn the ignition switch to the "ON" position.

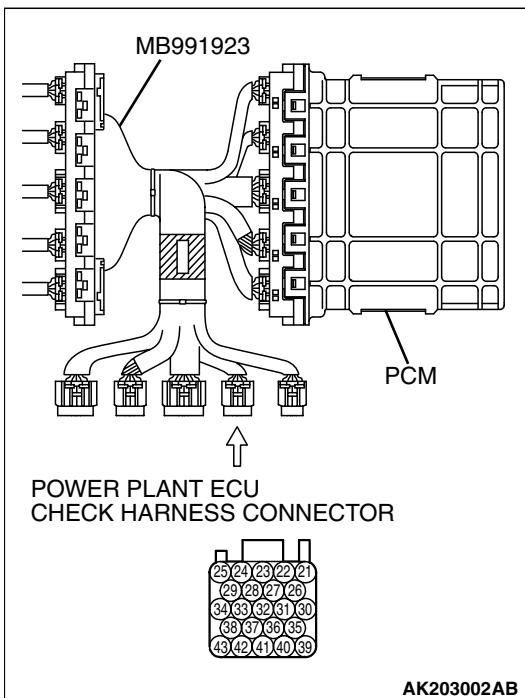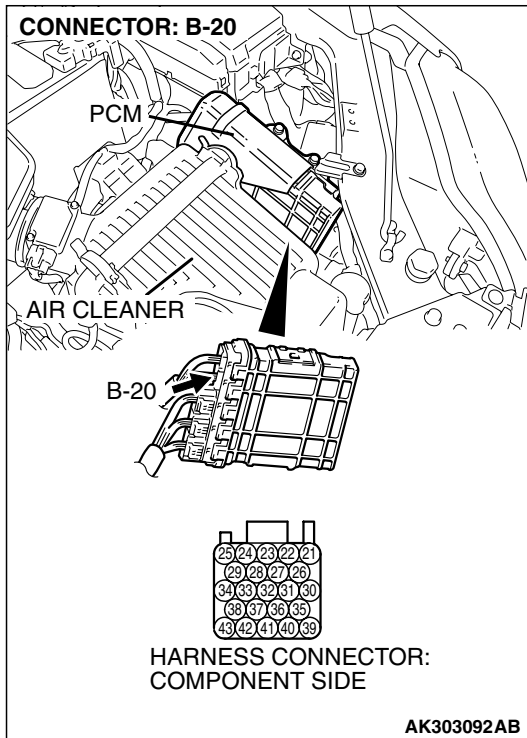


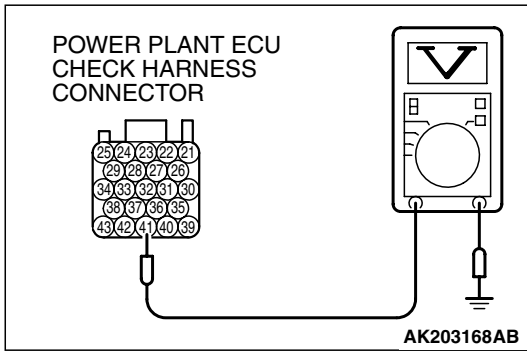

- (4) Measure the voltage between terminal No. 41 and ground.
 • Voltage should be between 4.5 and 4.9 volts.
 (5) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the measured voltage between 4.5 and 4.9 volts?


- YES :** Go to Step 6.
NO : Go to Step 7.

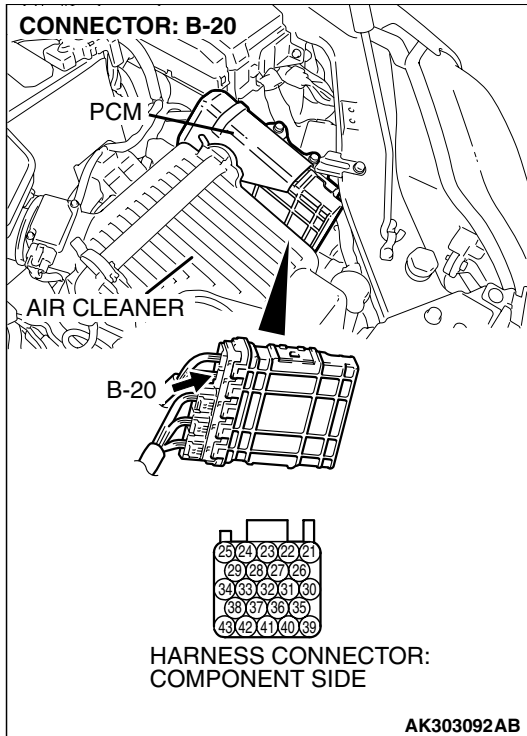

STEP 6. Check harness connector B-20 at PCM for damage.

Q: Is the harness connector in good condition?

- YES :** Check harness connector C-25 at intermediate connector for damage, and repair or replace as required. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). If the intermediate connector is in good condition, repair the harness wire between fuel tank temperature sensor connector D-18 and PCM connector B-20 because of open circuit. Then go to Step 11.
NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 11.

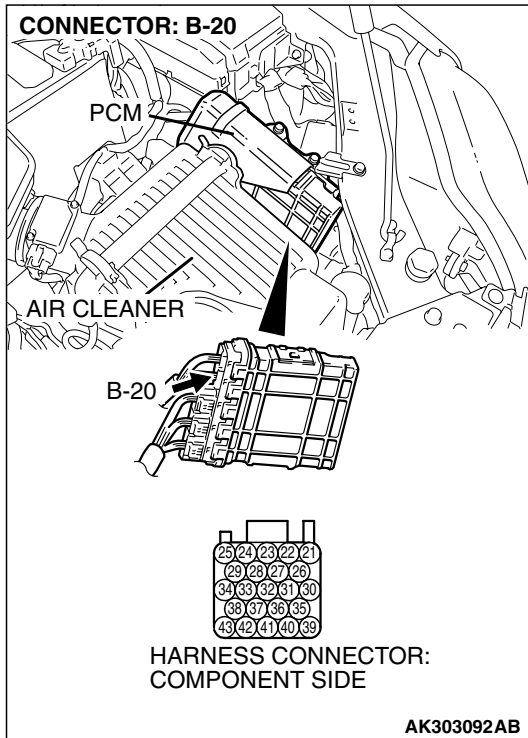


STEP 7. Check harness connector B-20 at PCM for damage.

Q: Is the harness connector in good condition?


YES : Replace the PCM. Then go to Step 11.

NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 11.

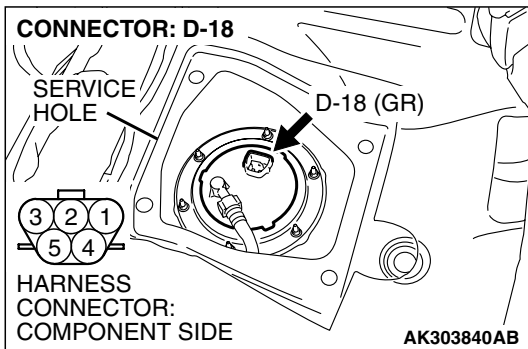

STEP 8. Check the continuity at fuel tank temperature sensor harness side connector D-18.

(1) Disconnect the connector D-18 and measure at the harness side.

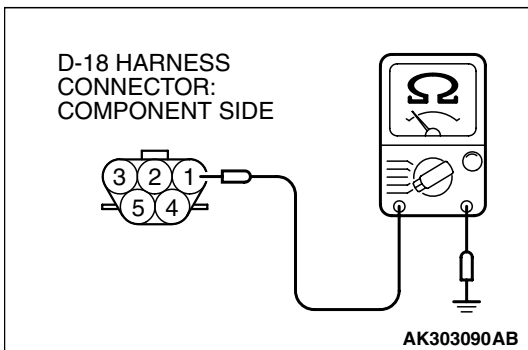


(2) Check for the continuity between terminal No. 1 and ground.

- Should be less than 2 ohms.

Q: Does continuity exist?

YES : Go to Step 9.

NO : Repair harness wire between fuel tank temperature sensor connector D-18 (terminal No. 1) and ground because of open circuit or harness damage. Then go to Step 11.

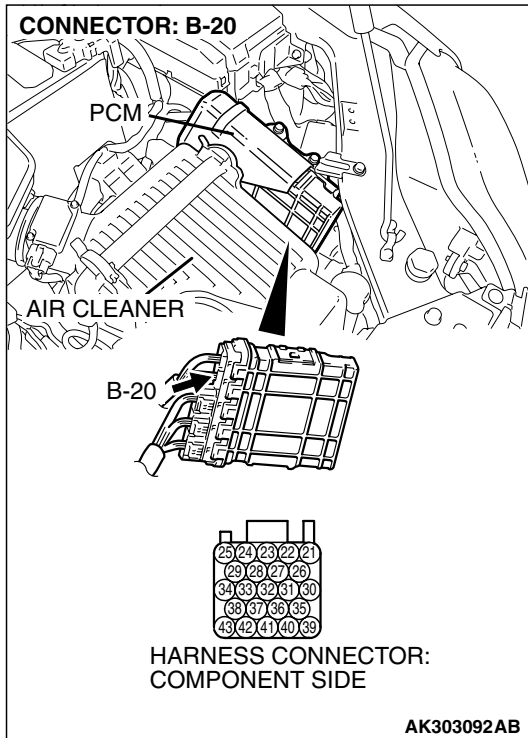



STEP 9. Check harness connector B-20 at PCM for damage.

Q: Is the harness connector in good condition?

YES : Go to Step 10.

NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 11.

STEP 10. Check for open circuit and harness damage between fuel tank temperature sensor connector D-18 and PCM connector B-20.

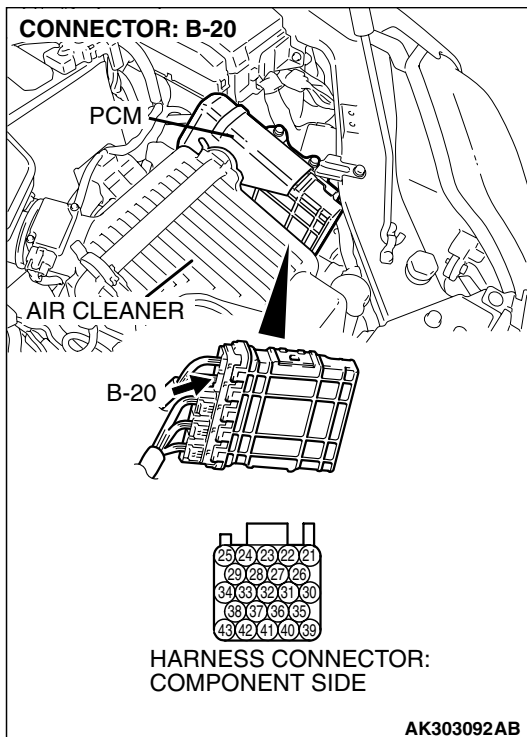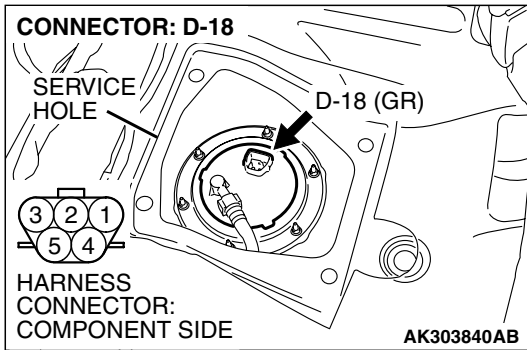

NOTE: Check harness after checking intermediate connector C-25. If the intermediate connector is damaged, repair or replace it. Refer to GROUP 00E, Harness Connector Inspection P.00E-2. Then go to Step 11.

Q: Is the harness wire in good condition?

YES : Replace the PCM. Then go to Step 11 .

NO : Repair it. Then go to Step 11.

STEP 11. Test the OBD-II drive cycle.

- (1) Carry out a test drive with the drive cycle pattern. Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.00E-2](#).
- (2) Check the diagnostic trouble code (DTC).

Q: Is DTC P0183 set?

YES : Retry the troubleshooting.


NO : The inspection is complete.

DTC P0201: Injector Circuit Malfunction - Cylinder 1





CAUTION

If DTC P0201 has been set, TCL related DTC U1120 is also set. After P0201 has been diagnosed, don't forget to erase DTC U1120.

Injector Circuit - Cylinder 1

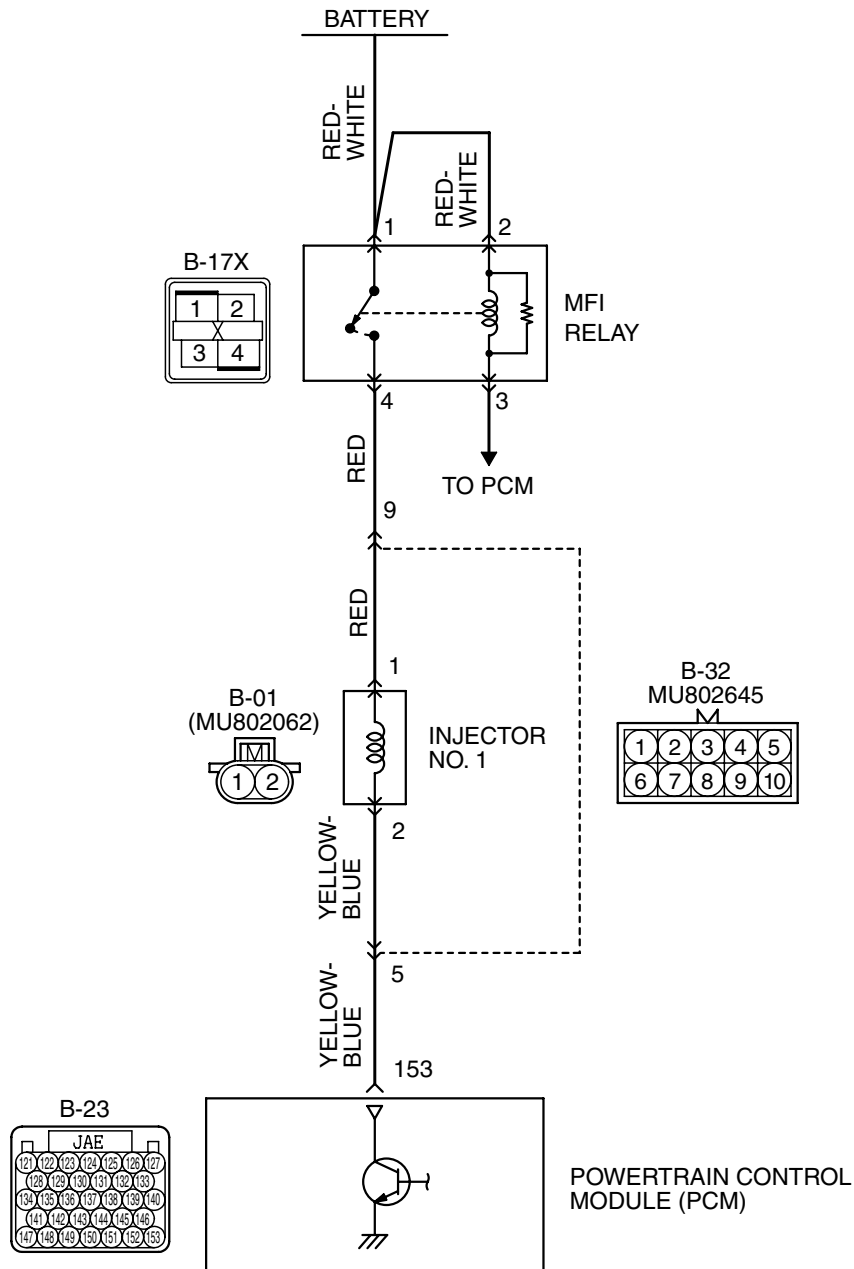

AK400907

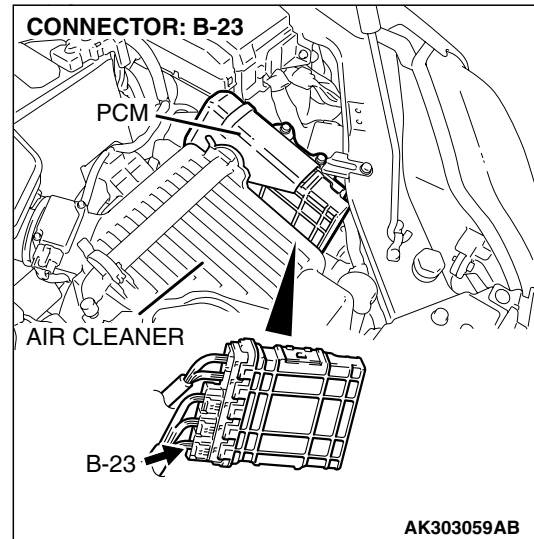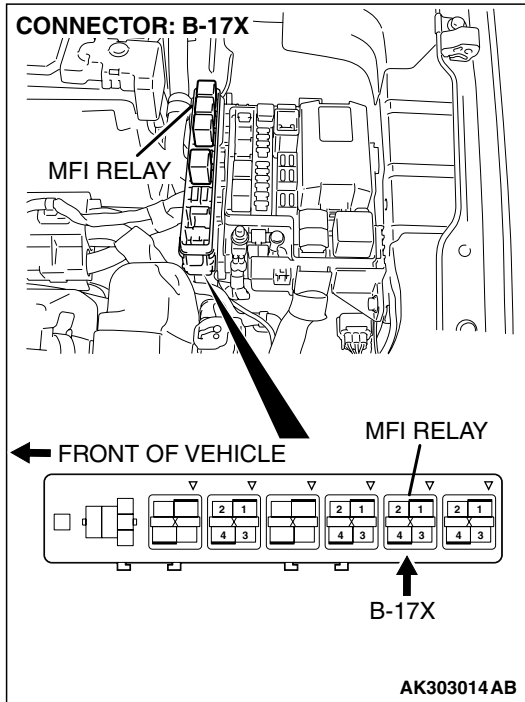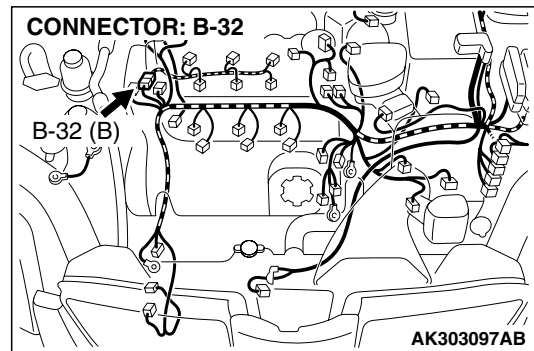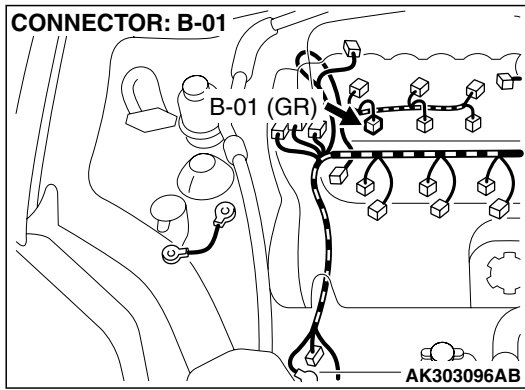

CIRCUIT OPERATION

- The injector power is supplied from the MFI relay (terminal No. 4).
- The PCM controls the injector by turning the power transistor in the PCM "ON" and "OFF".

TECHNICAL DESCRIPTION

- The amount of fuel injected by the injector is controlled by the amount of continuity time the coil is grounded by the PCM.
- A surge voltage is generated when the injectors are driven and the current flowing to the injector coil is shut off.
- The PCM checks this surge voltage.

DESCRIPTIONS OF MONITOR METHODS

Off-surge does not occur after injector is operated.

MONITOR EXECUTION

Continuous

MONITOR EXECUTION CONDITIONS (Other monitor and Sensor)

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- Not applicable

Sensor (The sensor below is determined to be normal)

- Not applicable

DTC SET CONDITIONS <Circuit continuity – open circuit and shorted low>

Logic Flow Chart

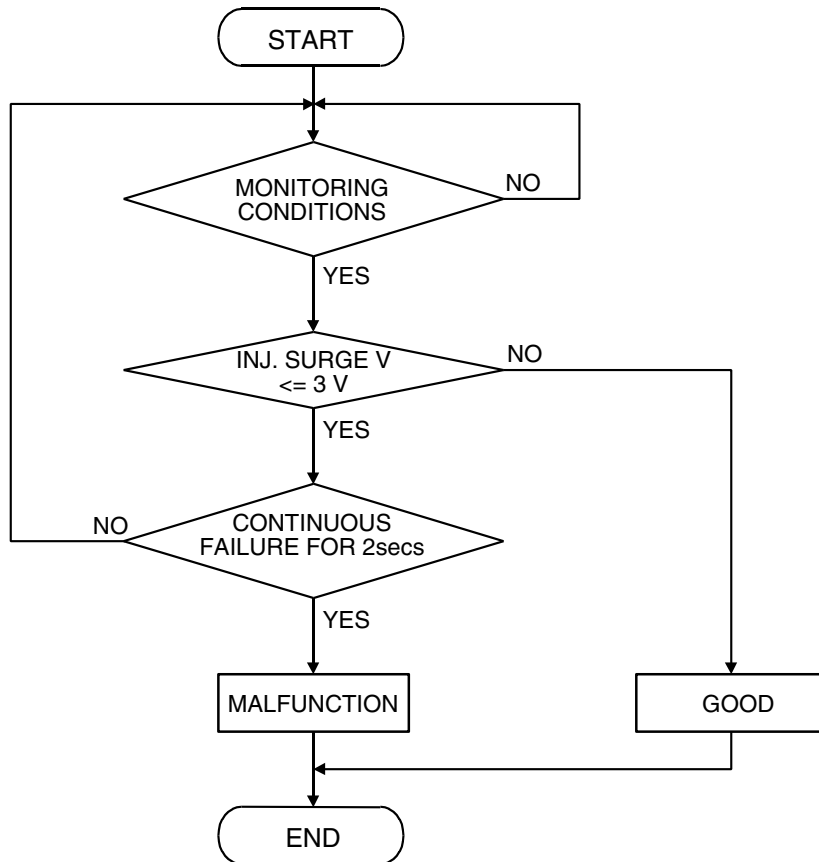

AK401614

Check Conditions


- Engine is running.

Judgment Criteria

- The supply voltage is 3 volts or less without the injector driving.

DTC SET CONDITIONS <Circuit continuity – shorted high>

Logic Flow Chart

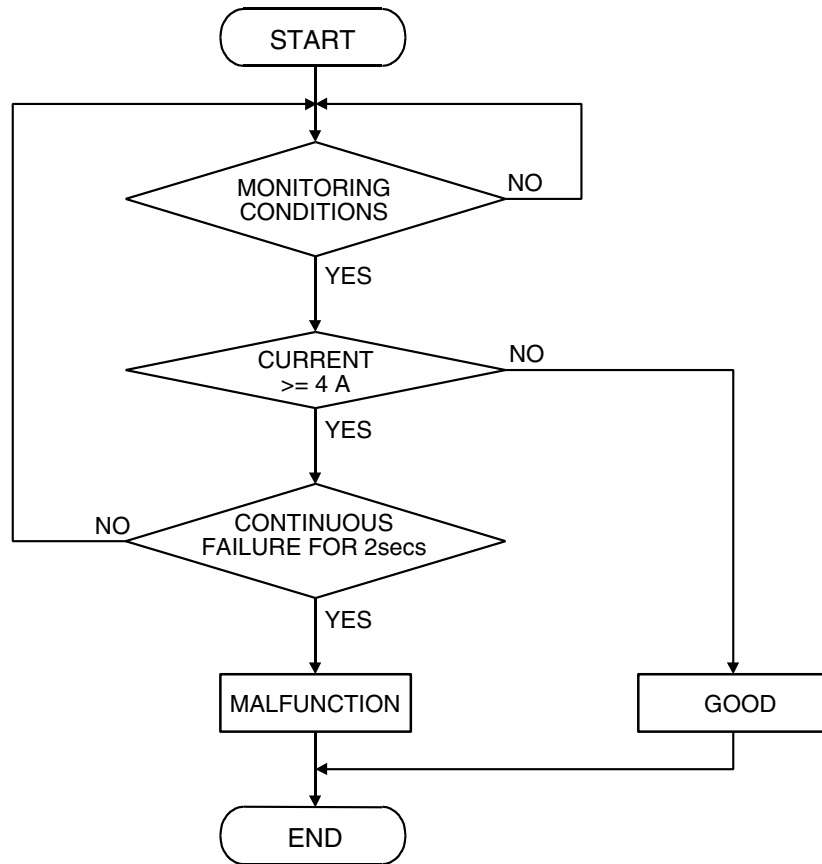

AK401592

Check Conditions

- Engine is running.

Judgment Criteria

- The coil current is 4 ampere or more with the injector driving.

OBD-II DRIVE CYCLE PATTERN

Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.13B-6](#).

TROUBLESHOOTING HINTS (The most likely causes for this code to be set are:)

- No. 1 cylinder injector failed.
- Open or shorted No. 1 cylinder injector circuit, harness damage, or connector damage.
- PCM failed.

DIAGNOSIS

Required Special Tools:

- MB991958: Scan Tool (MUT-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: USB Cable
 - MB991910: Main Harness A
- MB991658: Test Harness
- MB991923: Power Plant ECU Check Harness

STEP 1. Using scan tool MB991958, check actuator test item 01: No. 1 Injector.


CAUTION

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958 to the data link connector.
- (2) Start the engine and run at idle.
- (3) Set scan tool MB991958 to the actuator testing mode for item 01, No. 1 injector.
- (4) Warm up the engine to normal operating temperature: 80°C to 95°C (176°F to 203°F).
 - The idle should become slightly rougher.
- (5) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the actuator operating properly?


- YES** : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points – How to Cope with Intermittent Malfunctions [P.00-14](#).
- NO** : Go to Step 2.

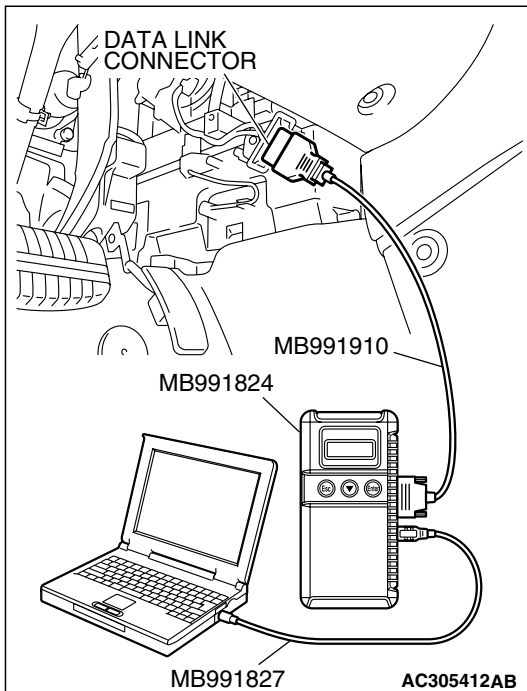

STEP 2. Check harness connector B-32 at intermediate connector for damage.


Q: Is the harness connector in good condition?

- YES** : Go to Step 3.
- NO** : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 12.

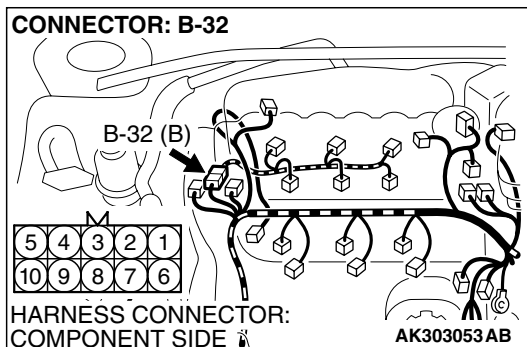

STEP 3. Check the No.1 cylinder injector resistance at intermediate connector B-32.

(1) Disconnect the intermediate connector B-32.

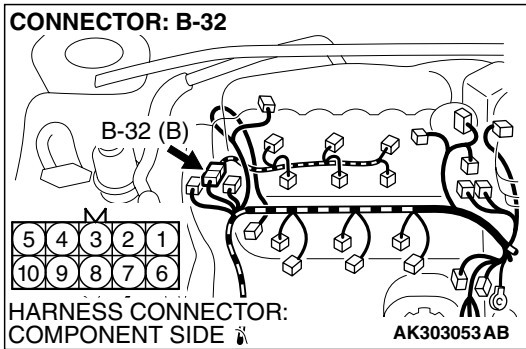


(2) Measure the resistance between terminal No. 5 and No. 9.
 • Resistance should be between 10.5 and 13.5 ohms.

Q: Is the measured resistance between 10.5 and 13.5 ohms?

YES : Go to Step 6.

NO : Go to Step 4.

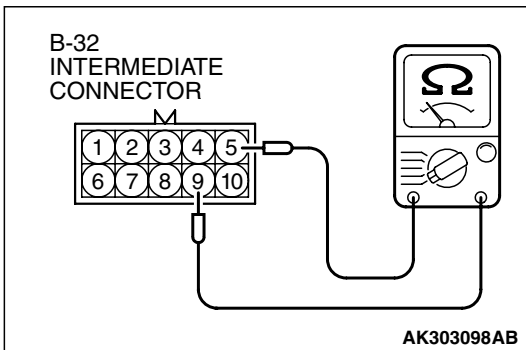


STEP 4. Check the harness connector B-01 at No. 1 cylinder injector for damage.



Remove the intake manifold.

Q: Is the harness connector in good condition?

YES : Go to Step 5.

NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 12.

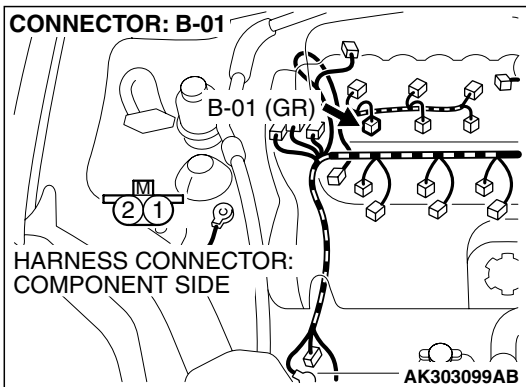

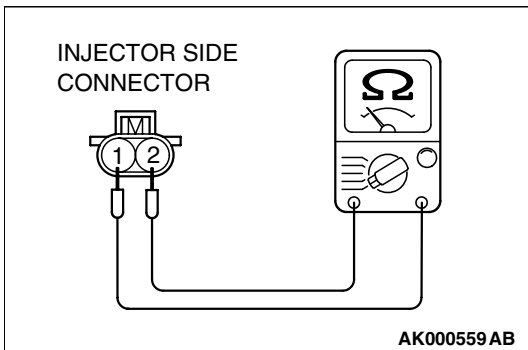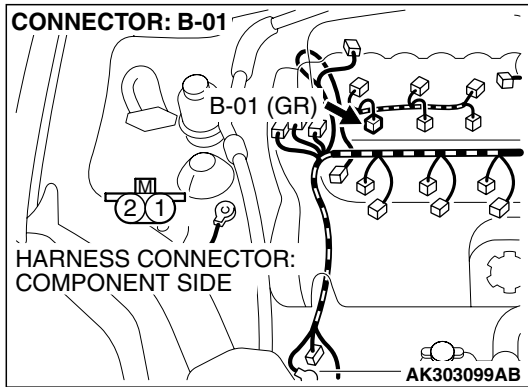

STEP 5. Check the No. 1 cylinder injector B-01.

(1) Disconnect the No. 1 cylinder injector connector B-01.

(2) Measure the resistance between injector side connector terminal No. 1 and No. 2.



Standard value: 10.5 – 13.5 ohms [at 20°C (68°F)]

Q: Is the measured resistance between 10.5 and 13.5 ohms [at 20°C (68°F)]?

YES : Repair harness wire between intermediate connector B-32 (terminal No. 9) and injector connector B-01 (terminal No. 1) and harness wire between No.1 cylinder injector connector B-01 (terminal No. 2) and intermediate connector B-32 (terminal No. 5) because of open circuit or short circuit to ground or harness damage.

Then go to Step 12.

NO : Replace the No.1 cylinder injector. Then go to Step 12.

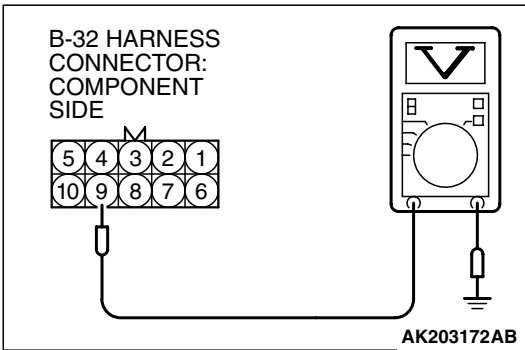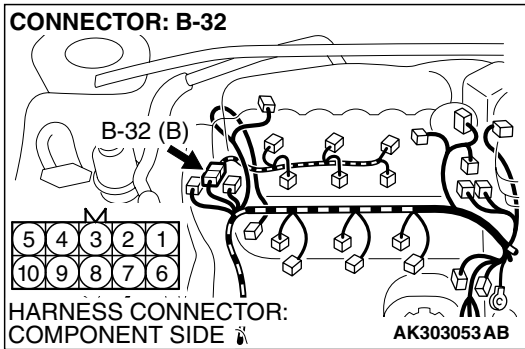


STEP 6. Measure the power supply voltage at intermediate connector B-32.

- (1) Disconnect the connector B-32 and measure at the female connector side.
- (2) Turn the ignition switch to the "ON" position.

- (3) Measure the voltage between terminal No. 9 and ground.
 - Voltage should be battery positive voltage.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is battery positive voltage (approximately 12 volts) present?

- YES :** Go to Step 8.
NO : Go to Step 7.

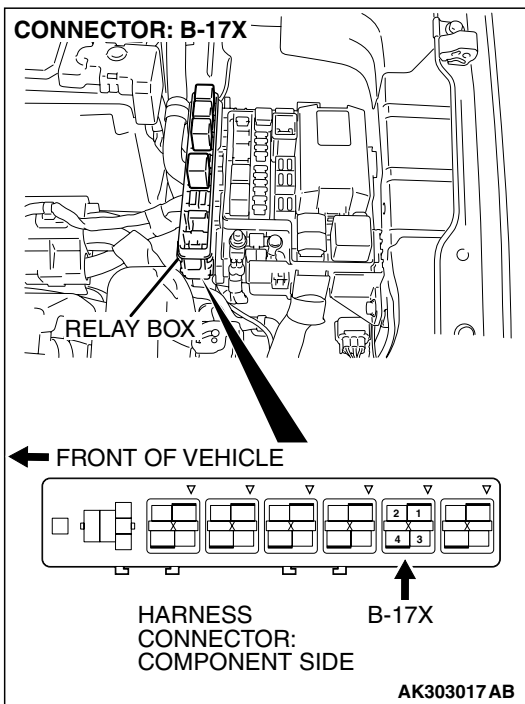

STEP 7. Check harness connector B-17X at MFI relay for damage.

Q: Is the harness connector in good condition?



- YES :** Repair harness wire between MFI relay connector B-17X (terminal No. 4) and intermediate connector B-32 (terminal No. 9) because of open circuit or short circuit to ground. Then go to Step 12.
- NO :** Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection P.00E-2. Then go to Step 12.


STEP 8. Check for harness damage between MFI relay connector B-17X (terminal No. 4) and intermediate connector B-32 (terminal No. 9).

Q: Is the harness wire in good condition?

YES : Go to Step 9.

NO : Repair it. Then go to Step 12.

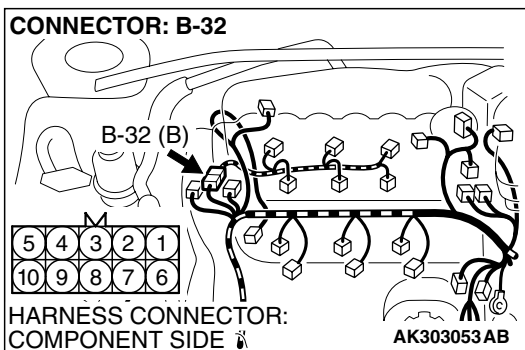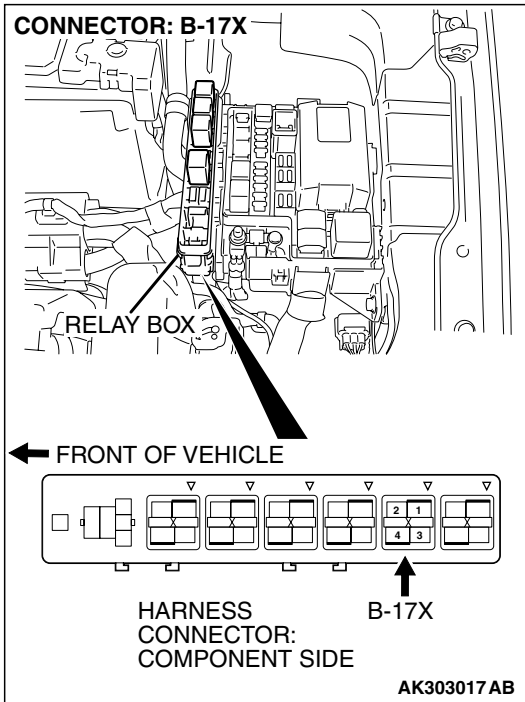

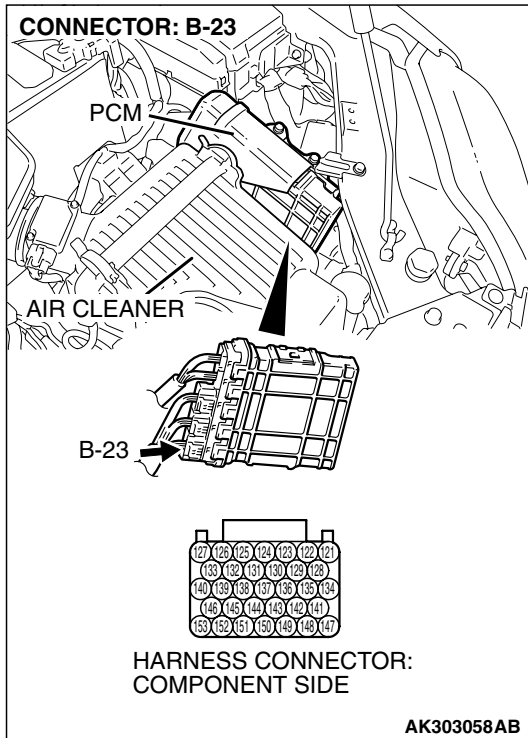

STEP 9. Check harness connector B-23 at PCM for damage.

Q: Is the harness connector in good condition?

YES : Go to Step 10.



NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 12.




STEP 10. Check for open circuit and short circuit to ground and harness damage between intermediate connector B-32 (terminal No. 5) and PCM connector B-23 (terminal No. 153).

Q: Is the harness wire in good condition?

YES : Go to Step 11.

NO : Repair it. Then go to Step 12.

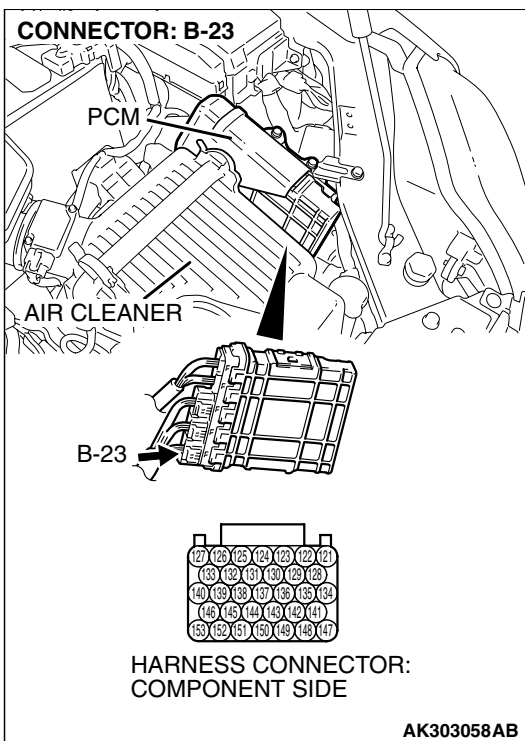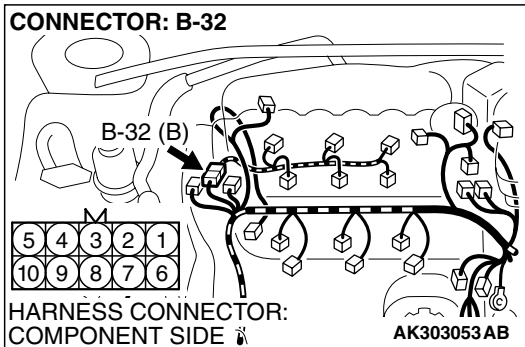

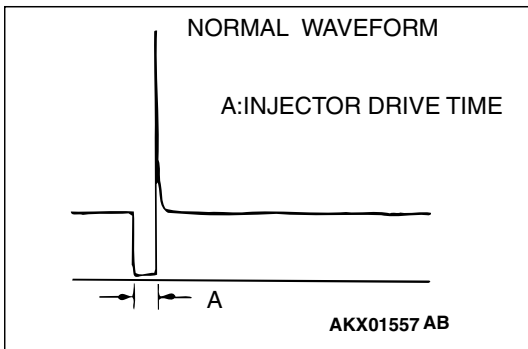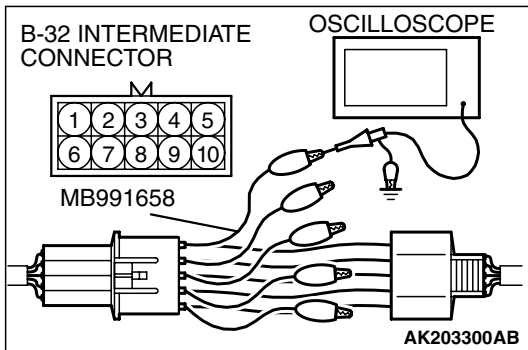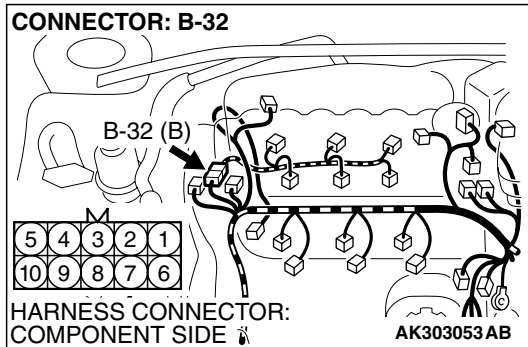

STEP 11. Using the oscilloscope, check the No. 1 cylinder injector.

(1) Disconnect the intermediate connector B-32 and connect the test harness MB991658 between the separated connectors.

(2) Connect the oscilloscope probe to injector intermediate connector terminal to No.5.

NOTE: When measuring with the PCM side connector, disconnect the all PCM connectors and connect check harness special tool (MB991923) between the separated connectors. Then connect an oscilloscope probe to the check harness connector terminal No.153.

(3) Start the engine and run at idle.

(4) Measure the waveform.

- The waveform should show a normal pattern similar to the illustration.

(5) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the waveform normal?

YES : It can be assumed that this malfunction is intermittent. Refer to 00, How to Use Troubleshooting/Inspection Service Points – How to Cope with Intermittent Malfunctions [P.00-14](#).

NO : Replace the PCM. Then go to Step 12.

STEP 12. Test the OBD-II drive cycle.

(1) Carry out a test drive with the drive cycle pattern. Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.13B-6](#).

(2) Check the diagnostic trouble code (DTC).

Q: Is DTC P0201 set?

YES : Retry the troubleshooting.


NO : The inspection is complete.

DTC P0202: Injector Circuit Malfunction - Cylinder 2




CAUTION

If DTC P0202 has been set, TCL related DTC U1120 is also set. After P0202 has been diagnosed, don't forget to erase DTC U1120.

Injector Circuit - Cylinder 2

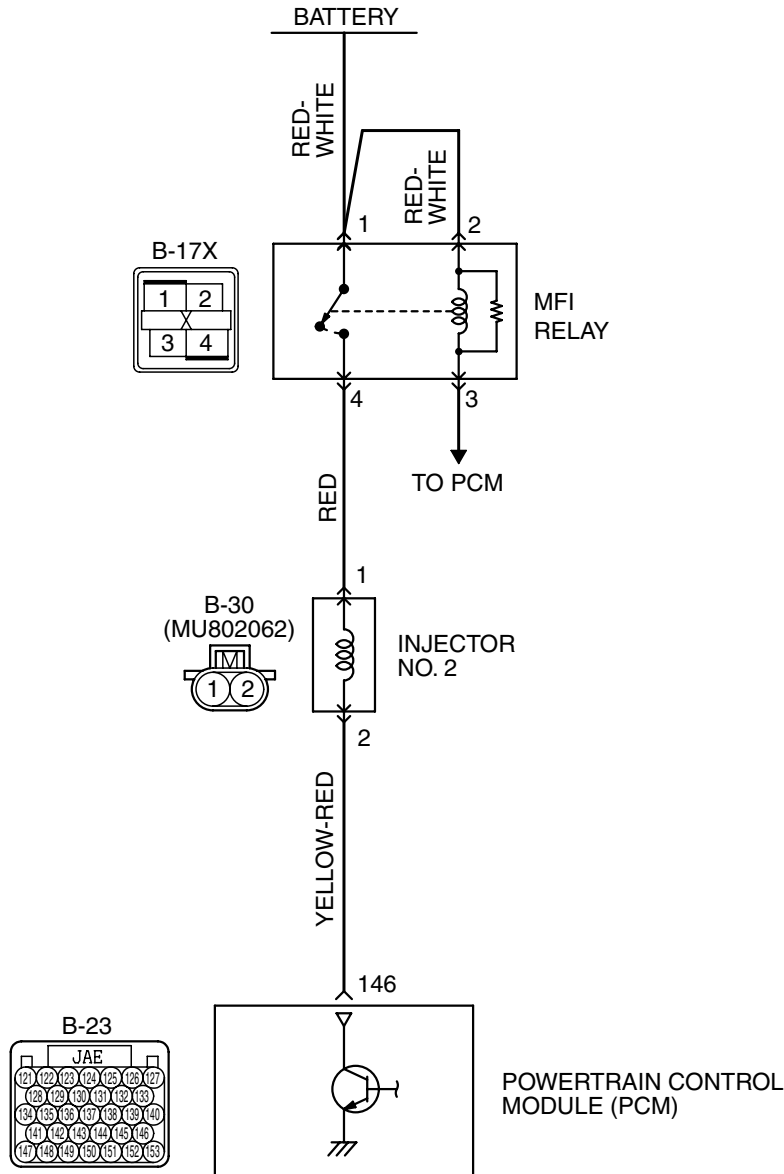

AK400908

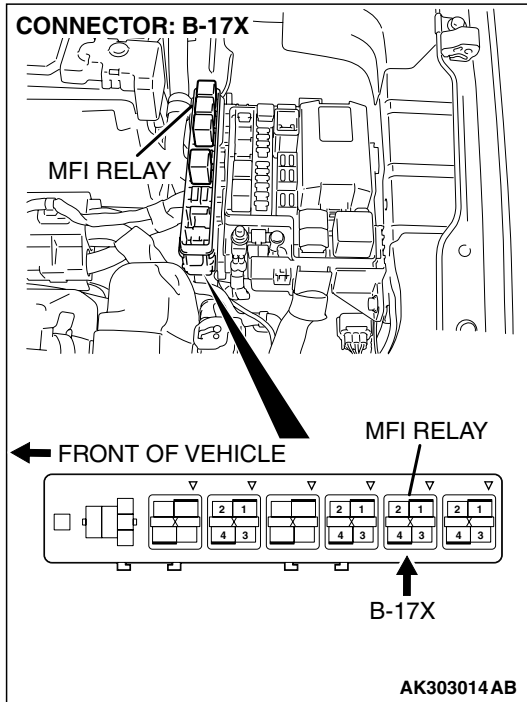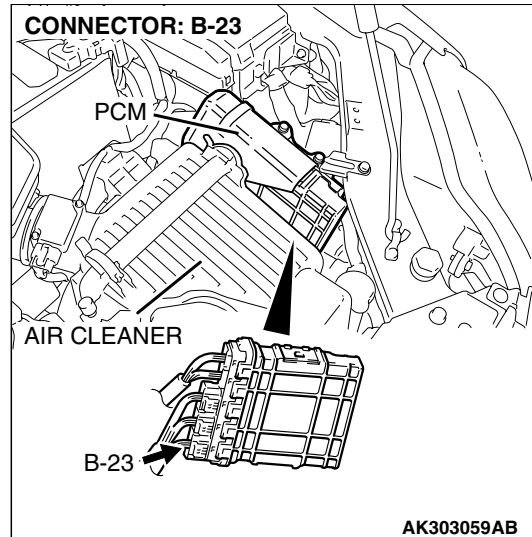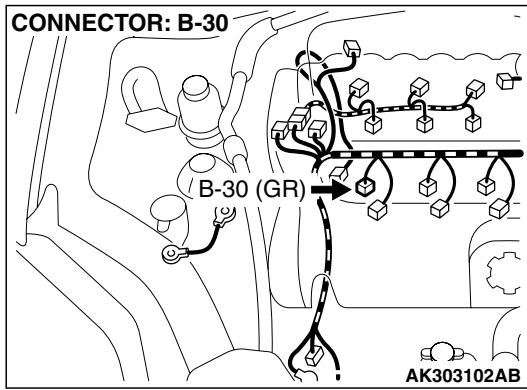

CIRCUIT OPERATION

- The injector power is supplied from the MFI relay (terminal No. 4).
- The PCM controls the injector by turning the power transistor in the PCM "ON" and "OFF".

TECHNICAL DESCRIPTION

- The amount of fuel injected by the injector is controlled by the amount of continuity time the coil is grounded by the PCM.
- A surge voltage is generated when the injectors are driven and the current flowing to the injector coil is shut off.
- The PCM checks this surge voltage.

DESCRIPTIONS OF MONITOR METHODS

Off-surge does not occur after injector is operated.

MONITOR EXECUTION

Continuous

**MONITOR EXECUTION CONDITIONS
(Other monitor and Sensor)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- Not applicable

Sensor (The sensor below is determined to be normal)

- Not applicable

DTC SET CONDITIONS <Circuit continuity – open circuit and shorted low>

Logic Flow Chart

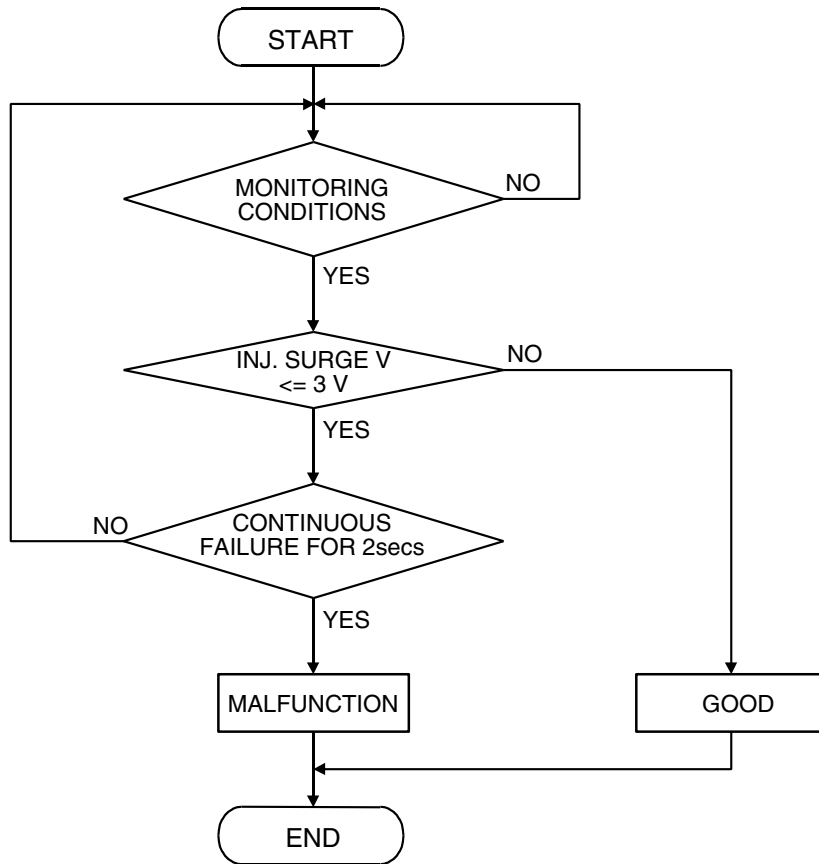

AK401614

Check Conditions


- Engine is running.

Judgment Criteria

- The supply voltage is 3 volts or less without the injector driving.

DTC SET CONDITIONS <Circuit continuity – shorted high>

Logic Flow Chart

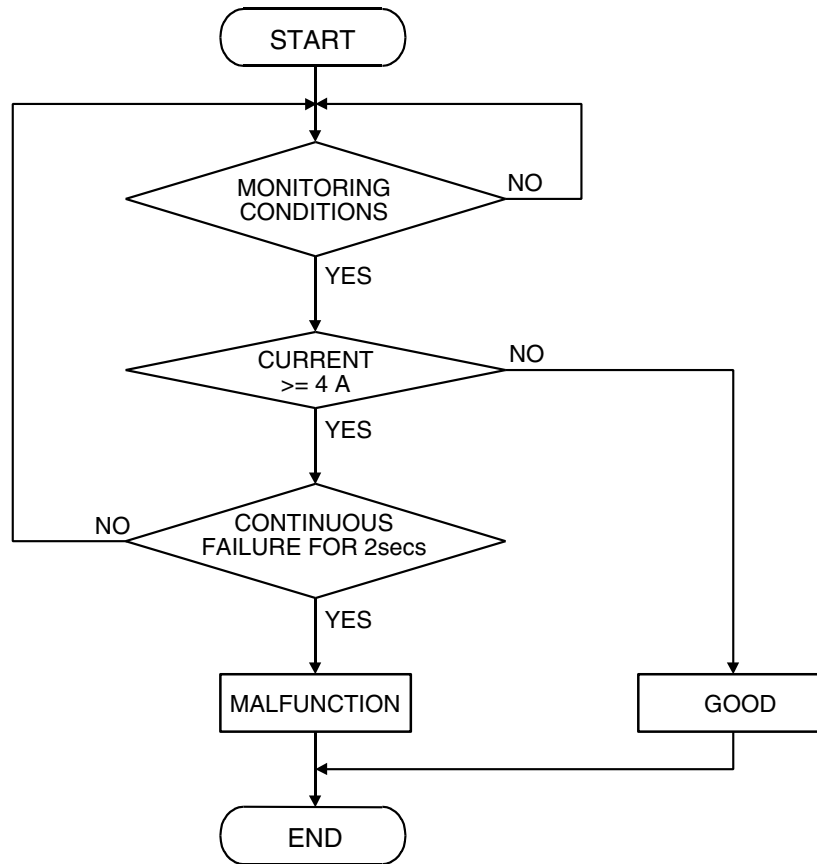

AK401592

Check Conditions

- Engine is running.

Judgment Criteria

- The coil current is 4 ampere or more with the injector driving.

TROUBLESHOOTING HINTS (The most likely causes for this code to be set are:)

- No. 2 cylinder injector failed.
- Open or shorted No. 2 cylinder injector circuit, harness damage, or connector damage.
- PCM failed.

OBD-II DRIVE CYCLE PATTERN

Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.13B-6](#).

DIAGNOSIS

Required Special Tools:

- MB991958: Scan Tool (MUT-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: USB Cable
 - MB991910: Main Harness A
- MB991658: Test Harness
- MB991923: Power Plant ECU Check Harness

STEP 1. Using scan tool MB991958, check actuator test item 02: No. 2 injector.


⚠ CAUTION

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958 to the data link connector.
- (2) Start the engine and run at idle.
- (3) Set scan tool MB991958 to the actuator testing mode for item 02, No. 2 injector.
- (4) Warm up the engine to normal operating temperature: 80°C to 95°C (176°F to 203°F).
 - The idle should become slightly rougher.
- (5) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the actuator operating properly?


- YES :** It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points – How to Cope with Intermittent Malfunctions [P.00-14](#).
- NO :** Go to Step 2.


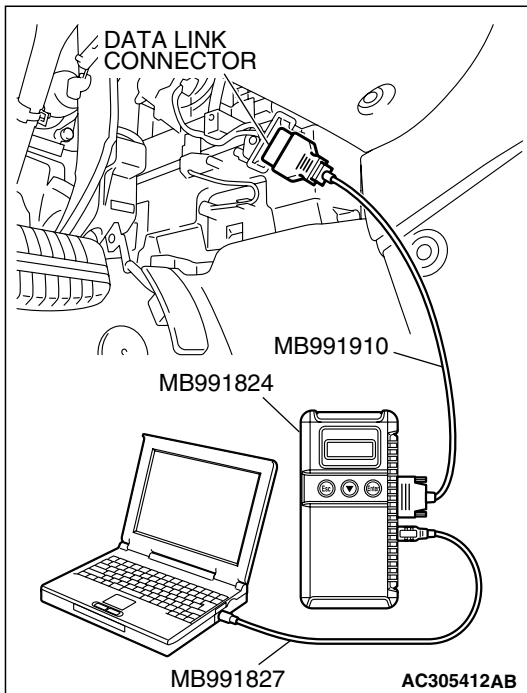


STEP 2. Check the harness connector B-30 at No. 2 cylinder injector for damage.

Q: Is the harness connector in good condition?

- YES :** Go to Step 3.
- NO :** Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 10.

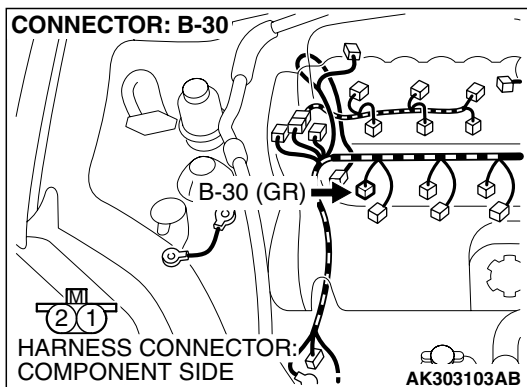

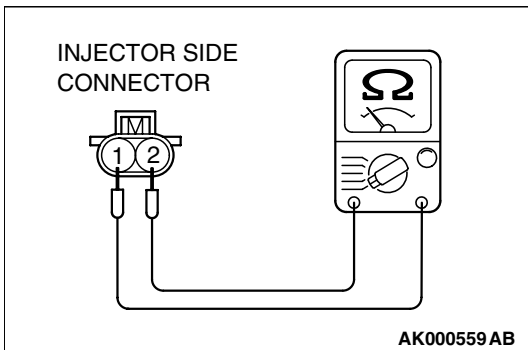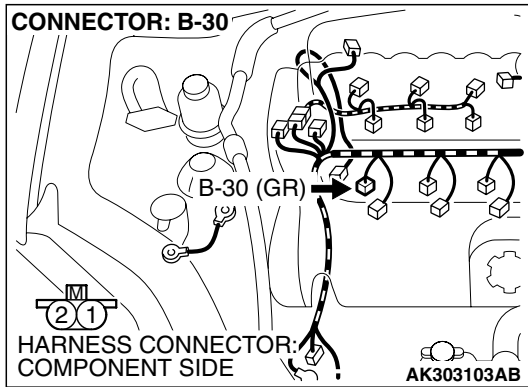

STEP 3. Check the No. 2 cylinder injector.

(1) Disconnect the No. 2 cylinder injector connector B-30.



(2) Measure the resistance between injector side connector terminal No. 1 and No. 2.

Standard value: 10.5 – 13.5 ohms [at 20°C (68°F)]

Q: Is the measured resistance between 10.5 and 13.5 ohms [at 20°C (68°F)]?

YES : Go to Step 4.

NO : Replace the No. 2 cylinder injector. Then go to Step 10.

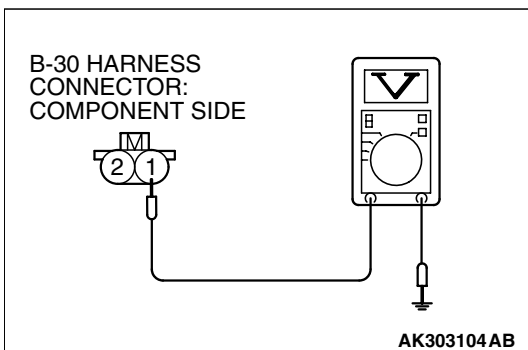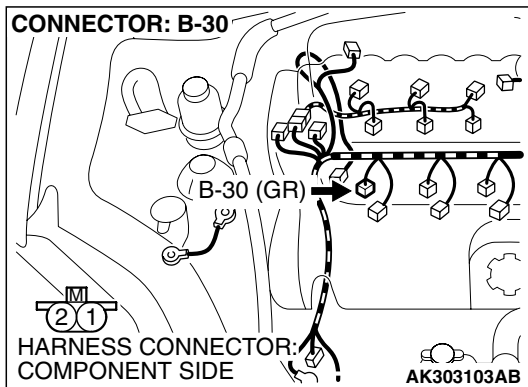

STEP 4. Measure the power supply voltage at No.2 cylinder injector connector B-30.

(1) Disconnect connector B-30 and measure at the harness side.

(2) Turn the ignition switch to the "ON" position.

(3) Measure the voltage between terminal No. 1 and ground.
• Voltage should be battery positive voltage.

(4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is battery positive voltage (approximately 12 volts) present?

YES : Go to Step 6.


NO : Go to Step 5.

STEP 5. Check harness connector B-17X at MFI relay for damage.

Q: Is the harness connector in good condition?

YES : Repair hamess wire between MFI relay connector B-17X (terminal No. 4) and No.2 cylinder injector connector B-30 (terminal No. 1) because of open circuit or short circuit to ground.
Then go to Step 10.

NO : Repair or replace it. Refer to GROUP 00E, Hamess Connector Inspection [P.00E-2](#). Then go to Step 10.


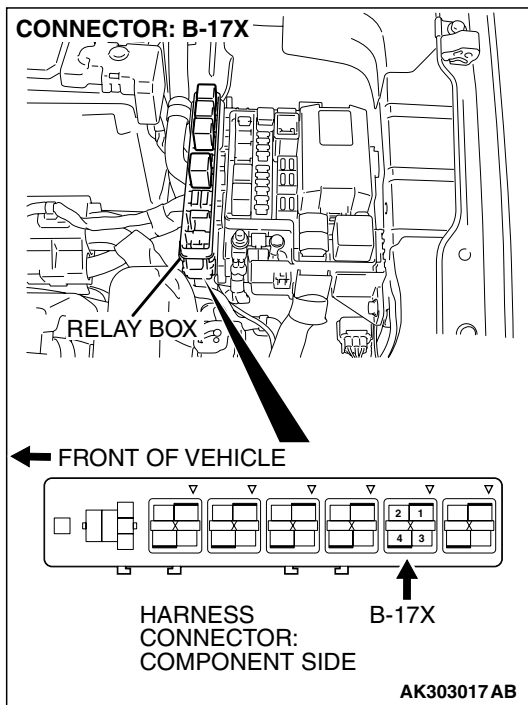


STEP 6. Check for harness damage between MFI relay connector B-17X (terminal No.4) and No. 2 cylinder injector connector B-30.

Q: Is the harness wire in good condition?

YES : Go to Step 7.

NO : Repair it. Then go to Step 10.

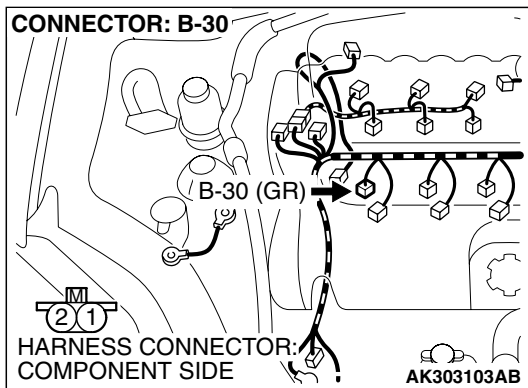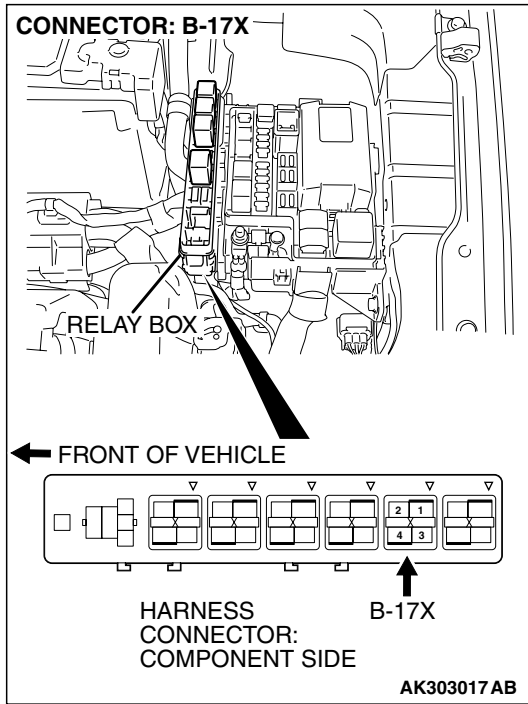


STEP 7. Check harness connector B-23 at PCM for damage.

Q: Is the connector in good condition?

YES : Go to Step 8.

NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 10.


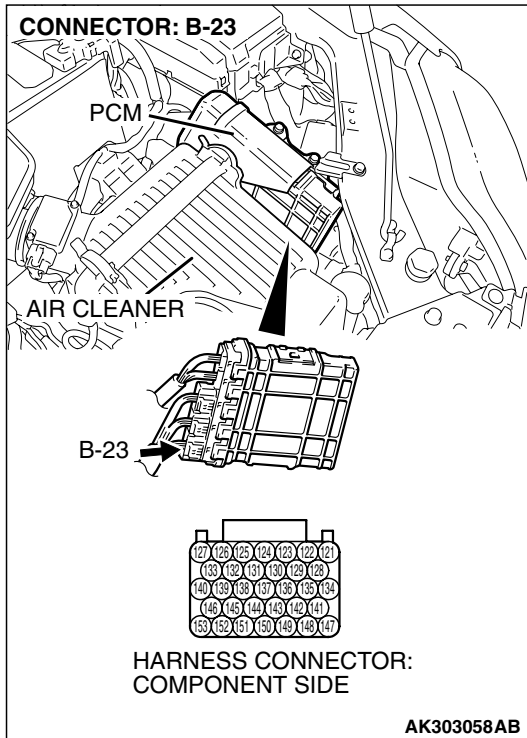





STEP 8. Check for open circuit and short circuit to ground and harness damage between No.2 cylinder injector connector B-30 (terminal No. 2) and PCM connector B-23 (terminal No. 146).

Q: Is the harness wire in good condition?

YES : Go to Step 9.

NO : Repair it. Then go to Step 10.

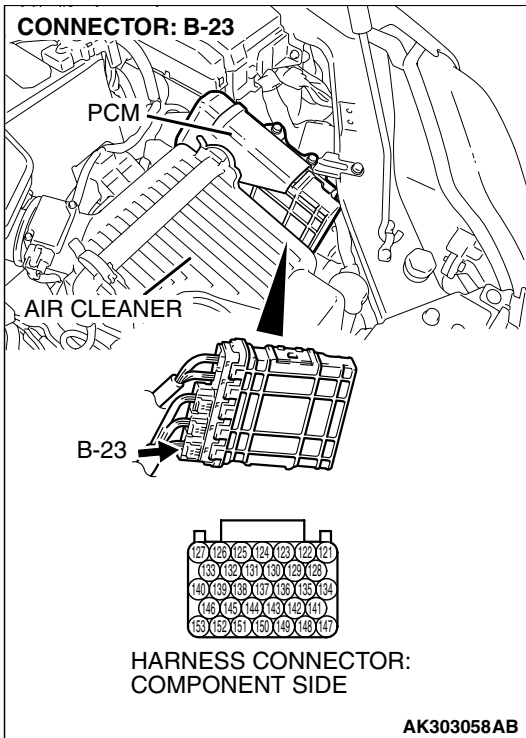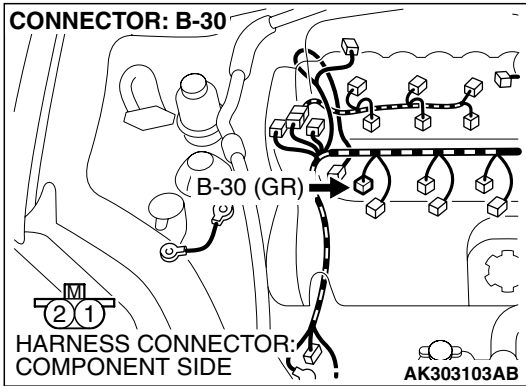

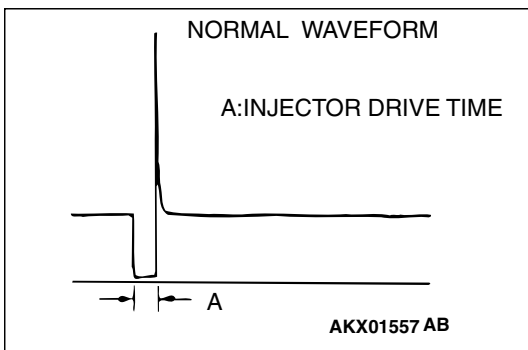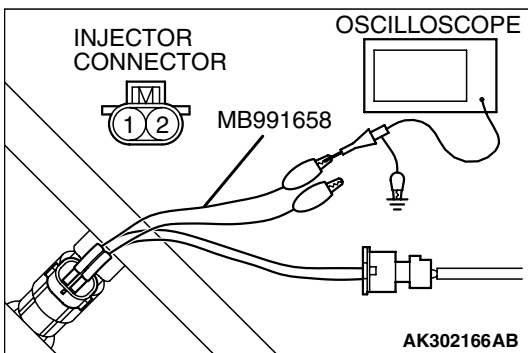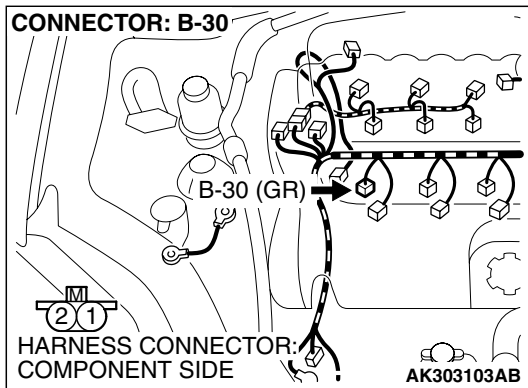

STEP 9. Using the oscilloscope, check the No.2 cylinder injector.

(1) Disconnect the No. 2 cylinder injector connector B-30 and connect the test harness special tool (MB991658) between the separated connectors. (All terminals should be connected)

(2) Connect the oscilloscope probe to the injector side connector terminal No. 2.

NOTE: When measuring with the PCM side connector, disconnect the all PCM connectors and connect check harness special tool (MB991923) between the separated connectors. Then connect an oscilloscope probe to the check harness connector terminal No. 146.

(3) Start the engine and run at idle.

(4) Measure the waveform.

- The waveform should show a normal pattern similar to the illustration.

(5) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the waveform normal?

YES : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points – How to Cope with Intermittent Malfunctions [P.00-14](#).

NO : Replace the PCM. Then go to Step 10.

STEP 10. Test the OBD-II drive cycle.

(1) Carry out a test drive with the drive cycle pattern. Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.13B-6](#).

(2) Check the diagnostic trouble code (DTC).

Q: Is DTC P0202 set?

YES : Retry the troubleshooting.


NO : The inspection is complete.

DTC P0203: Injector Circuit Malfunction - Cylinder 3





CAUTION

If DTC P0203 has been set, TCL related DTC U1120 is also set. After P0203 has been diagnosed, don't forget to erase DTC U1120.

Injector Circuit - Cylinder 3

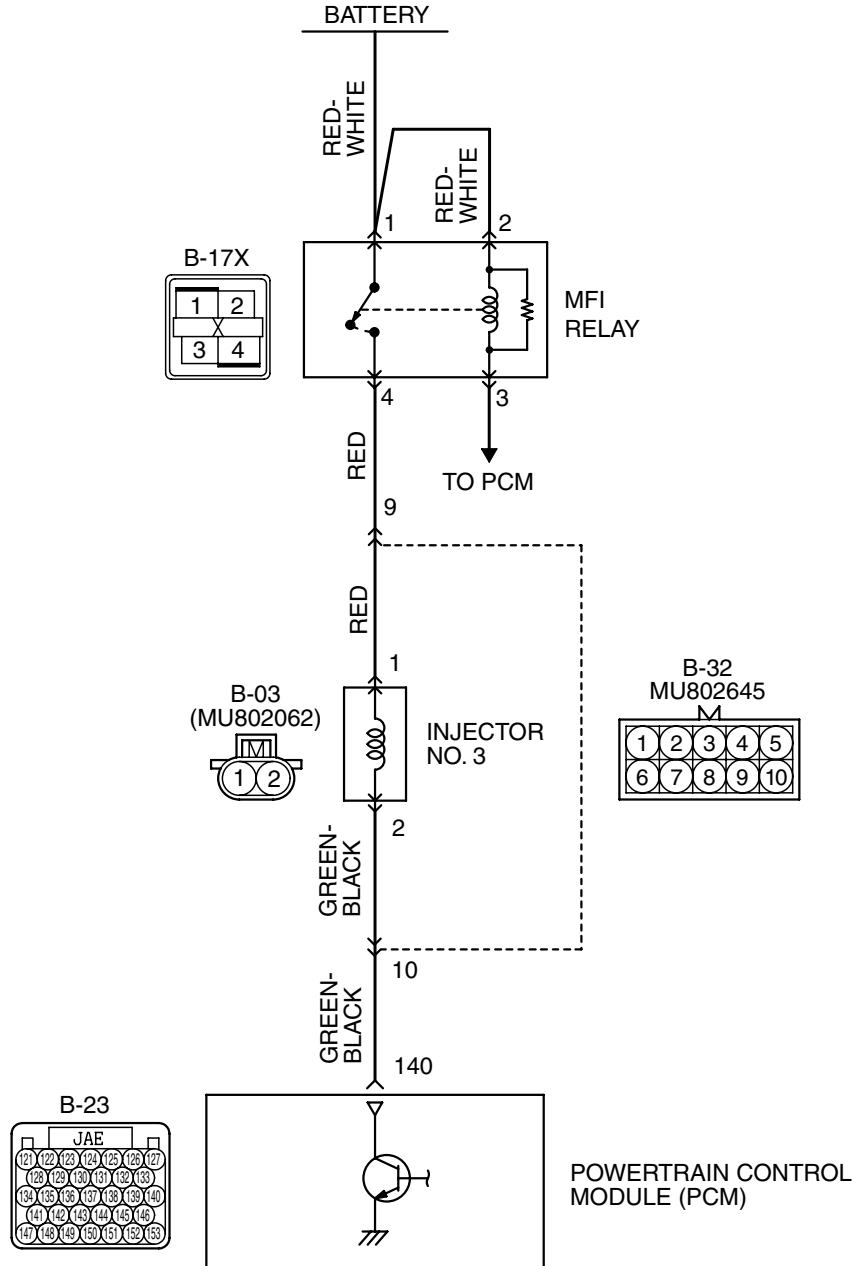

AK400909

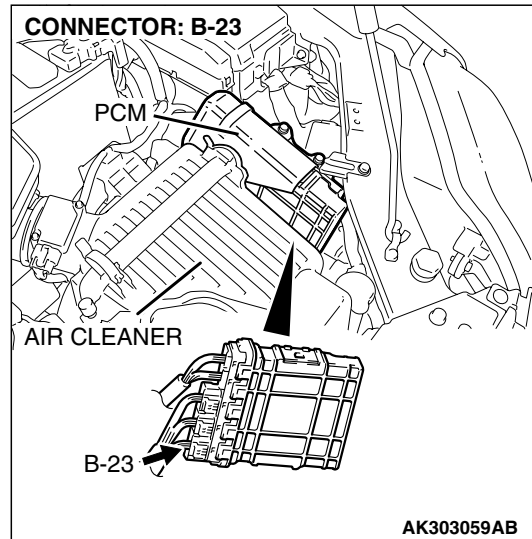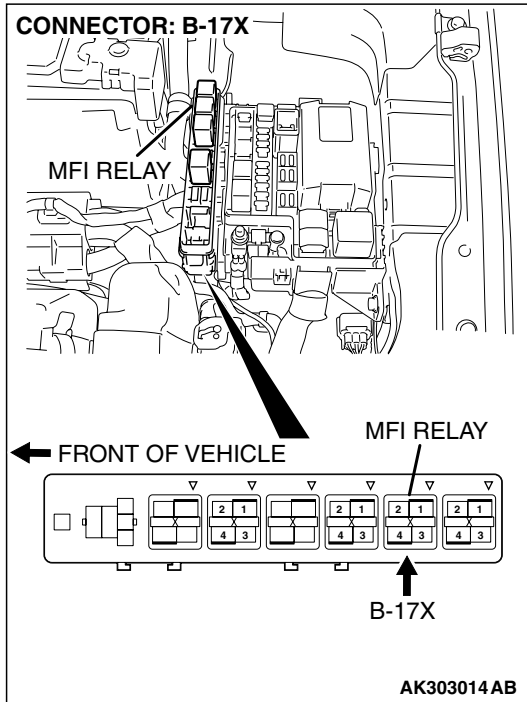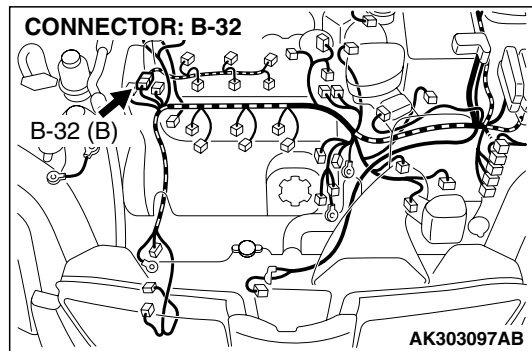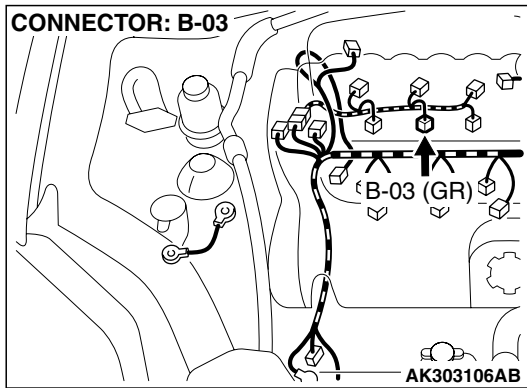

CIRCUIT OPERATION

- The injector power is supplied from the MFI relay (terminal No. 4).
- The PCM controls the injector by turning the power transistor in the PCM "ON" and "OFF".

TECHNICAL DESCRIPTION

- The amount of fuel injected by the injector is controlled by the amount of continuity time the coil is grounded by the PCM.
- A surge voltage is generated when the injectors are driven and the current flowing to the injector coil is shut off.
- The PCM checks this surge voltage.

DESCRIPTIONS OF MONITOR METHODS

Off-surge does not occur after injector is operated.

MONITOR EXECUTION

Continuous

MONITOR EXECUTION CONDITIONS (Other monitor and Sensor)

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- Not applicable

Sensor (The sensor below is determined to be normal)

- Not applicable

DTC SET CONDITIONS <Circuit continuity – open circuit and shorted low>

Logic Flow Chart

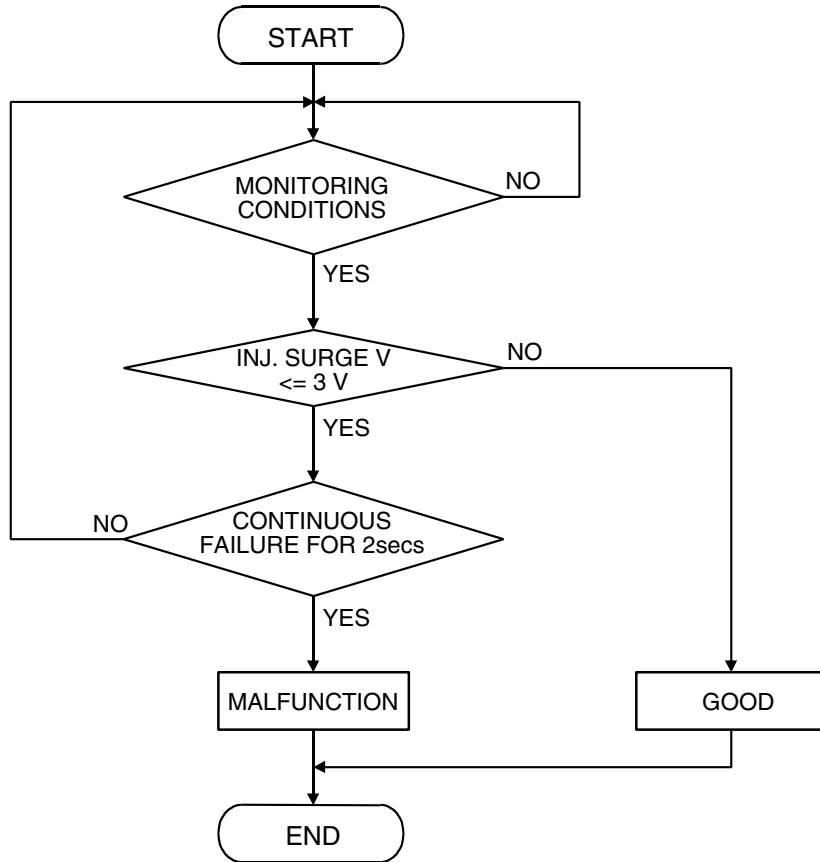

AK401614

Check Conditions


- Engine is running.

Judgment Criteria

- The supply voltage is 3 volts or less without the injector driving.

DTC SET CONDITIONS <Circuit continuity – shorted high>

Logic Flow Chart

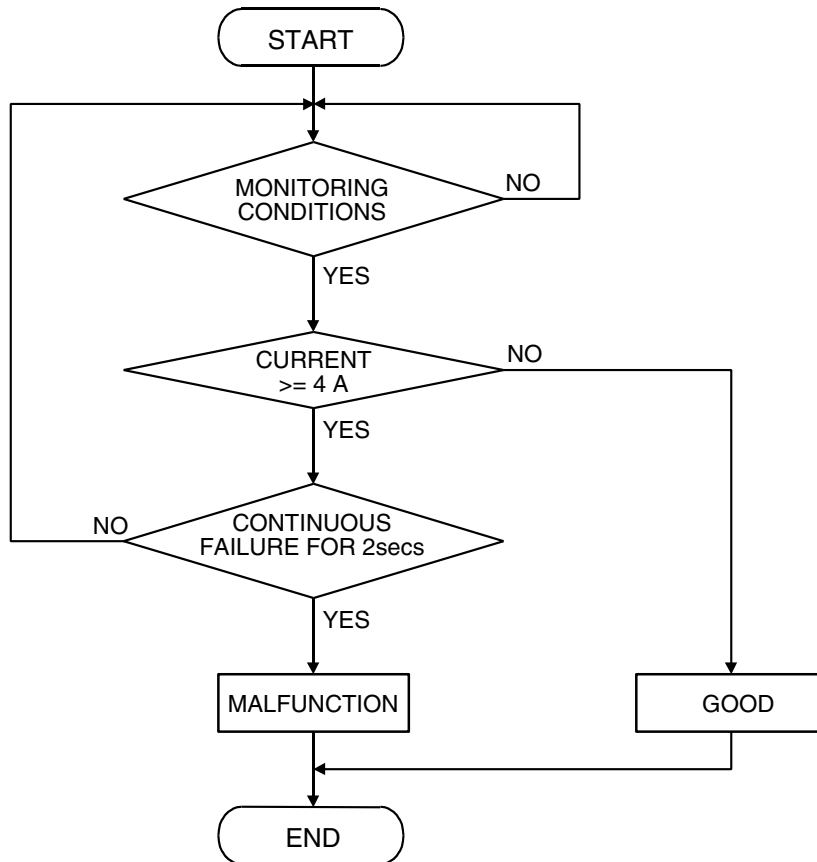

AK401592

Check Conditions

- Engine is running.

Judgment Criteria

- The coil current is 4 ampere or more with the injector driving.

OBD-II DRIVE CYCLE PATTERN

Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.13B-6](#).

TROUBLESHOOTING HINTS (The most likely causes for this code to be set are:)

- No. 3 cylinder injector failed.
- Open or shorted No. 3 cylinder injector circuit, harness damage, or connector damage.
- PCM failed.

DIAGNOSIS**Required Special Tools:**

- MB991958: Scan Tool (MUT-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: USB Cable
 - MB991910: Main Harness A
- MB991658: Test Harness
- MB991923: Power Plant ECU Check Harness


STEP 1. Using scan tool MB991958, check actuator test item 03: No. 3 injector.**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.


- (1) Connect scan tool MB991958 to the data link connector.
- (2) Start the engine and run at idle.
- (3) Set scan tool MB991958 to the actuator testing mode for item 03, No. 3 injector.
- (4) Warm up the engine to normal operating temperature: 80°C to 95°C (176°F to 203°F).
 - The idle should become slightly rougher.
- (5) Turn the ignition switch to the "LOCK" (OFF) position.



Q: Is the actuator operating properly?

- YES** : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points – How to Cope with Intermittent Malfunctions [P.00-14](#).
- NO** : Go to Step 2.

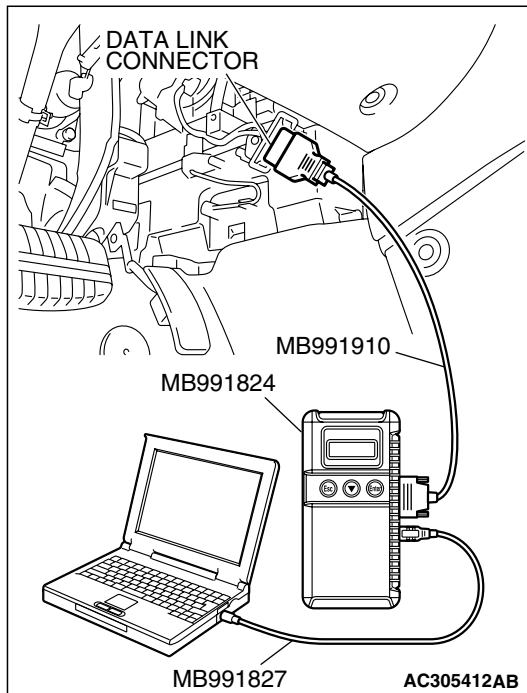**STEP 2. Check harness connector B-32 at intermediate connector for damage.****Q: Is the harness connector in good condition?**

- YES** : Go to Step 3.
- NO** : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 12.

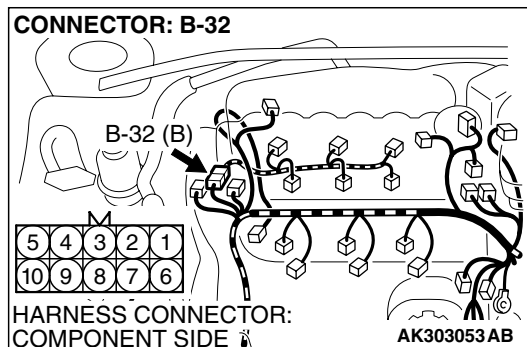

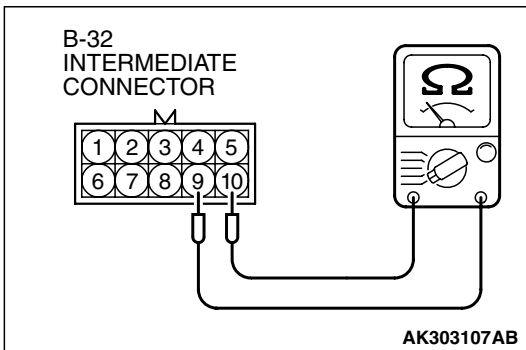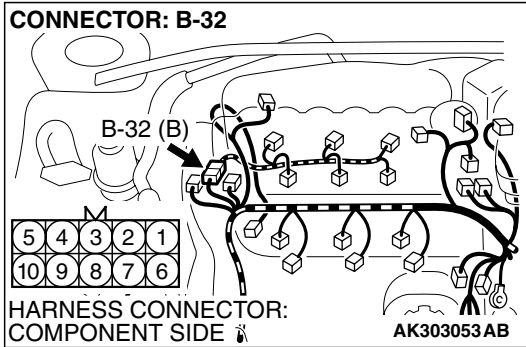

STEP 3. Check the No. 3 cylinder injector resistance at intermediate connector B-32.


(1) Disconnect the intermediate connector B-32.

(2) Measure the resistance between terminal No. 9 and No. 10.
• Resistance should be between 10.5 and 13.5 ohms.

Q: Is the measured resistance between 10.5 and 13.5 ohms?

YES : Go to Step 6.

NO : Go to Step 4.

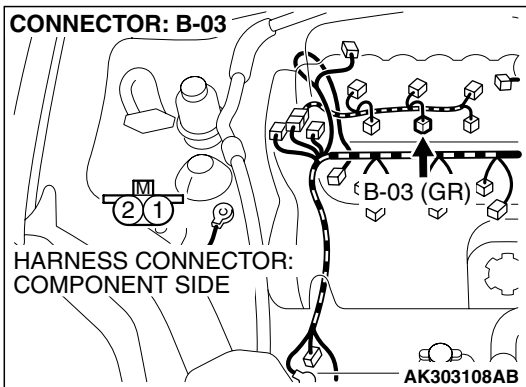



STEP 4. Check the connector B-03 at No. 3 cylinder injector for damage.

Remove the intake manifold.

Q: Is the harness connector in good condition?

YES : Go to Step 5.

NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 12.

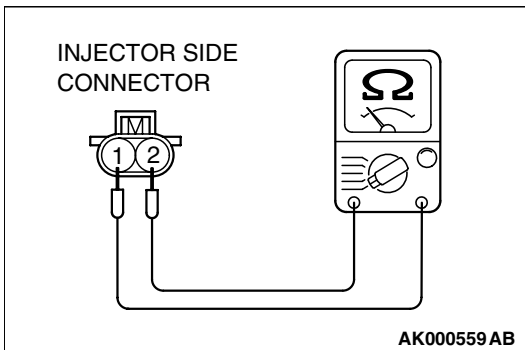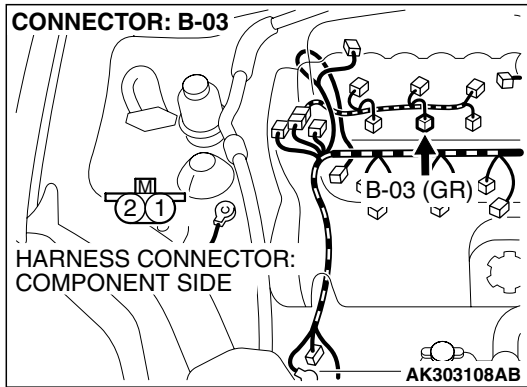**STEP 5. Check the No. 3 cylinder injector.**

(1) Disconnect the No. 3 cylinder injector connector B-03.

(2) Measure the resistance between injector side connector terminal No. 1 and No. 2.



Standard value: 10.5 – 13.5 ohms [at 20°C (68°F)]

Q: Is the measured resistance between 10.5 and 13.5 ohms [at 20°C (68°F)]?

YES : Repair harness wire between intermediate connector B-32 (terminal No. 9) and injector connector B-03 (terminal No. 1) and harness wire between No.3 cylinder injector connector B-03 (terminal No. 2) and intermediate connector B-32 (terminal No. 10) because of open circuit or short circuit to ground or harness damage.

Then go to Step 12.

NO : Replace the No.3 cylinder injector. Then go to Step 12.

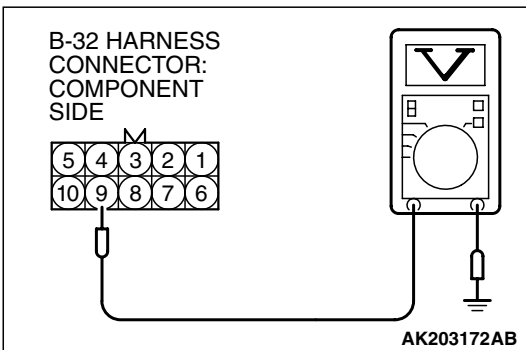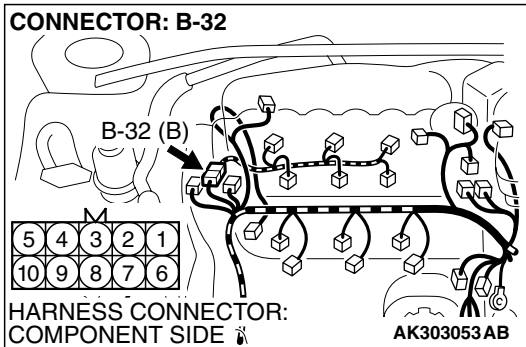


STEP 6. Measure the power supply voltage at intermediate connector B-32.

- (1) Disconnect the connector B-32 and measure at the female connector side.
- (2) Turn the ignition switch to the "ON" position.

- (3) Measure the voltage between terminal No. 9 and ground.
 - Voltage should be battery positive voltage.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is battery positive voltage (approximately 12 volts) present?

- YES :** Go to Step 8.
NO : Go to Step 7.

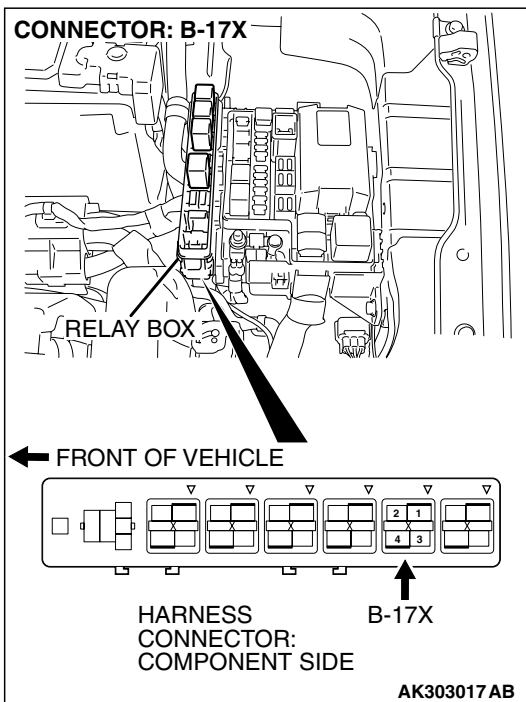

STEP 7. Check harness connector B-17X at MFI relay for damage.

Q: Is the harness connector in good condition?



- YES :** Repair harness wire between MFI relay connector B-17X (terminal No. 4) and intermediate connector B-32 (terminal No. 9) because of open circuit or short circuit to ground. Then go to Step 12.
- NO :** Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 12.

STEP 8. Check for harness damage between MFI relay connector B-17X (terminal No. 4) and intermediate connector B-32 (terminal No. 9).

Q: Is the harness wire in good condition?

YES : Go to Step 9.

NO : Repair it. Then go to Step 12.

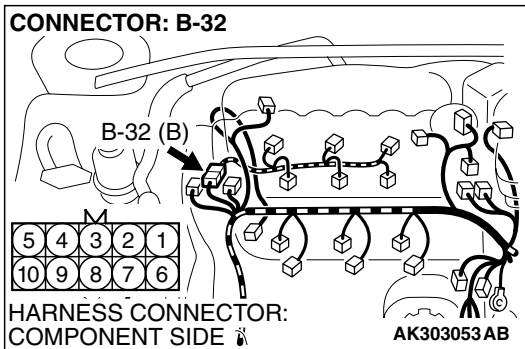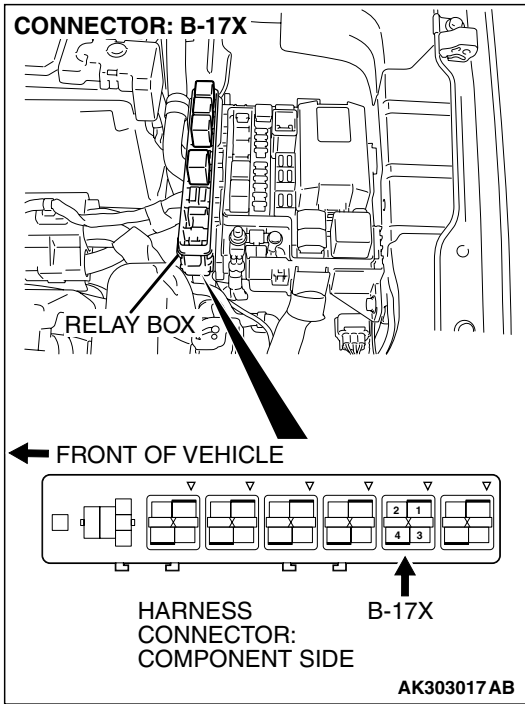


STEP 9. Check harness connector B-23 at PCM for damage.

Q: Is the harness connector in good condition?

YES : Go to Step 10.

NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 12.


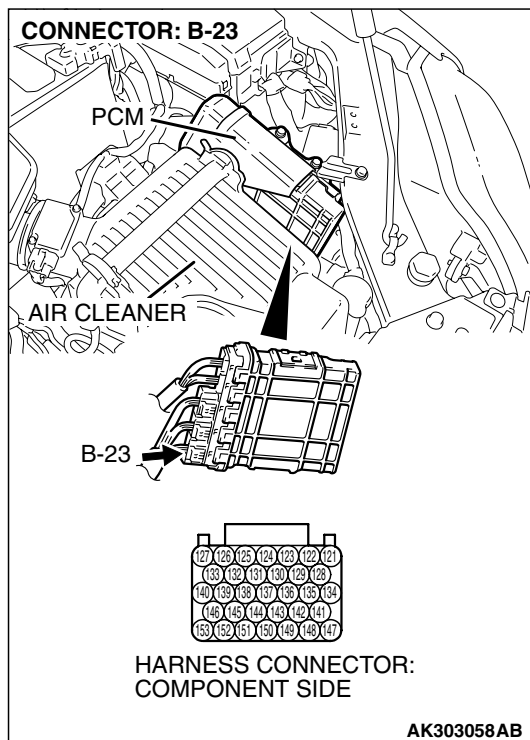





STEP 10. Check for open circuit and short circuit to ground and harness damage between intermediate connector B-32 (terminal No. 10) and PCM connector B-23 (terminal No. 140).

Q: Is the harness wire in good condition?

YES : Go to Step 11.

NO : Repair it. Then go to Step 12.

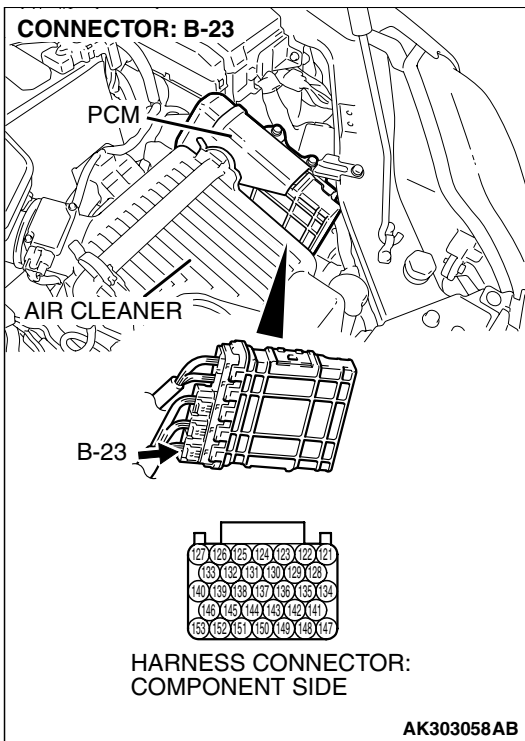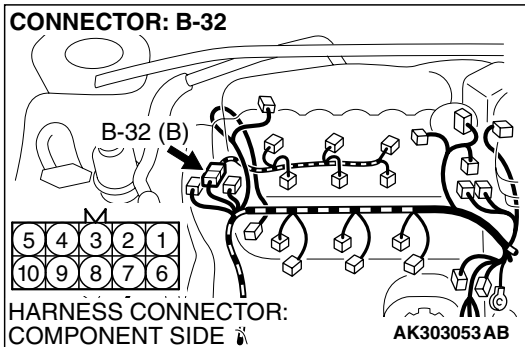

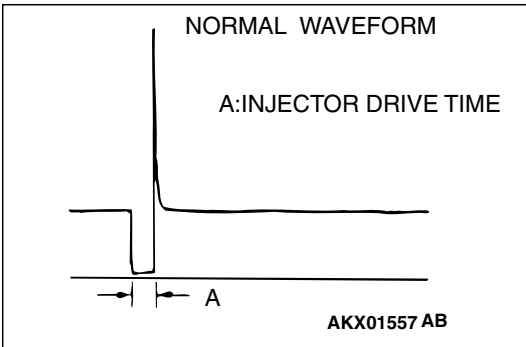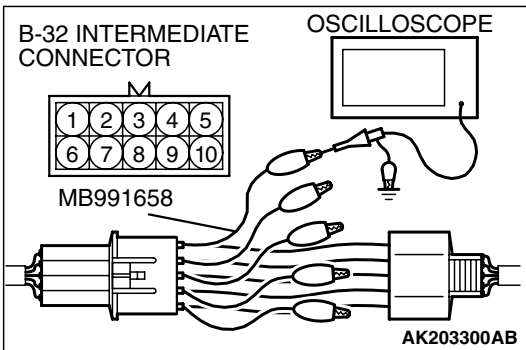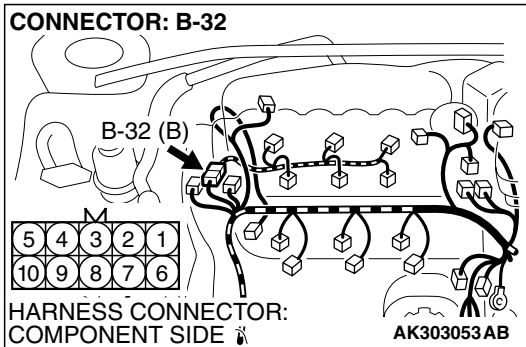

STEP 11. Using the oscilloscope, check the No. 3 cylinder injector.

(1) Disconnect the intermediate connector B-32 and connect the test harness MB991658 between the separated connectors.

(2) Connect the oscilloscope probe to injector intermediate connector terminal No. 10.

NOTE: When measuring with the PCM side connector, disconnect the all PCM connectors and connect check harness special tool (MB991923) between the separated connectors. Then connect an oscilloscope probe to the check harness connector terminal No. 140.

(3) Start the engine and run at idle.

(4) Measure the waveform.

- The waveform should show a normal pattern similar to the illustration.

(5) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the waveform normal?

YES : It can be assumed that this malfunction is intermittent. Refer to 00E, How to Use Troubleshooting/Inspection Service Points – How to Cope with Intermittent Malfunctions [P.00-14](#).

NO : Replace the PCM. Then go to Step 12.

STEP 12. Test the OBD-II drive cycle.

(1) Carry out a test drive with the drive cycle pattern. Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.13B-6](#).

(2) Check the diagnostic trouble code (DTC).

Q: Is DTC P0203 set?

YES : Retry the troubleshooting.


NO : The inspection is complete.

DTC P0204: Injector Circuit Malfunction - Cylinder 4




CAUTION

If DTC P0204 has been set, TCL related DTC U1120 is also set. After P0204 has been diagnosed, don't forget to erase DTC U1120.

Injector Circuit - Cylinder 4

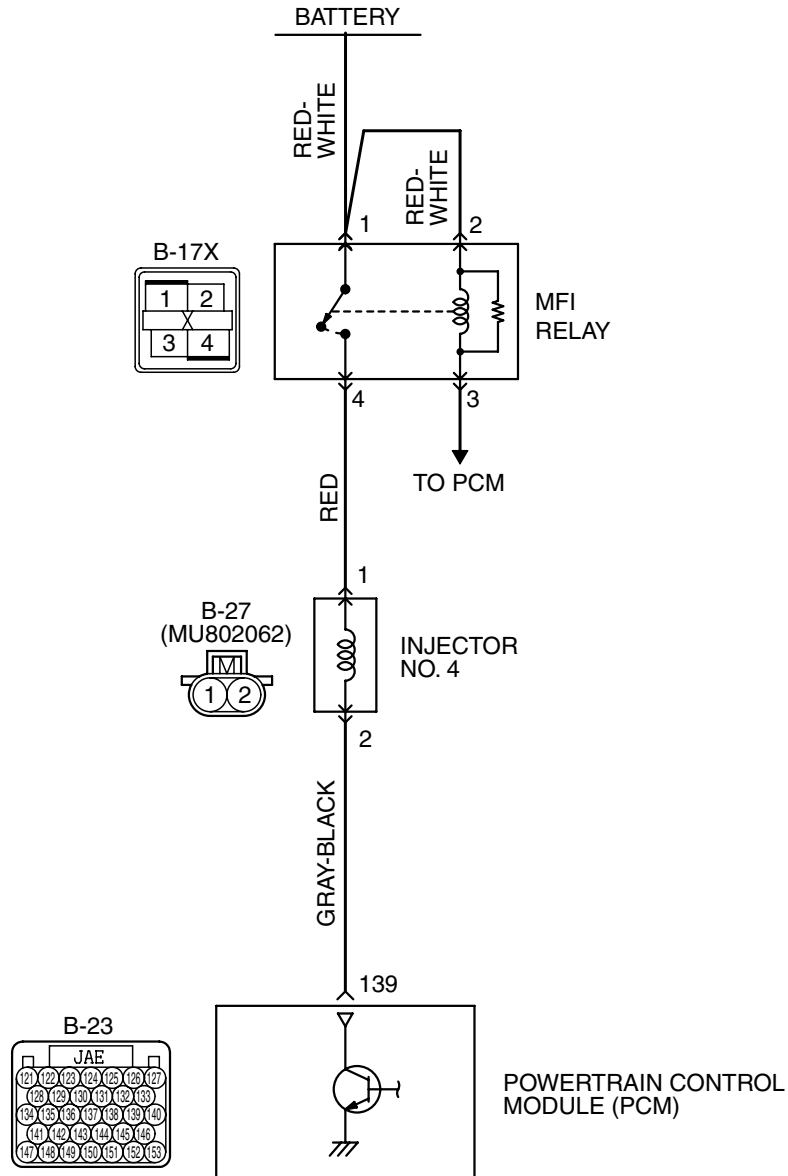

AK400910

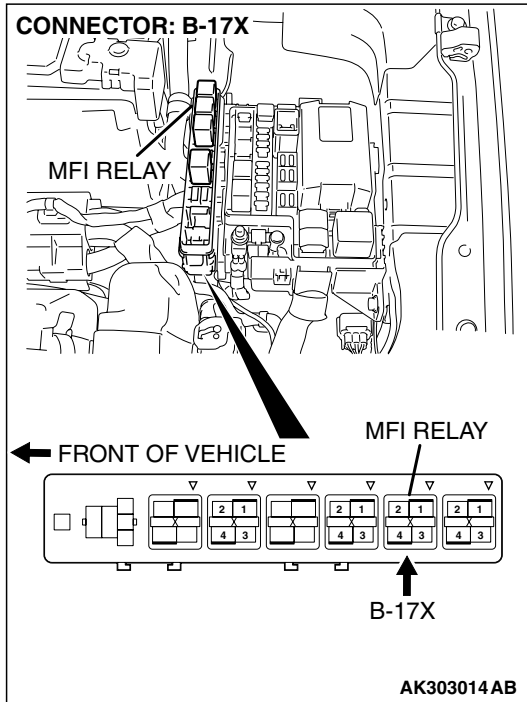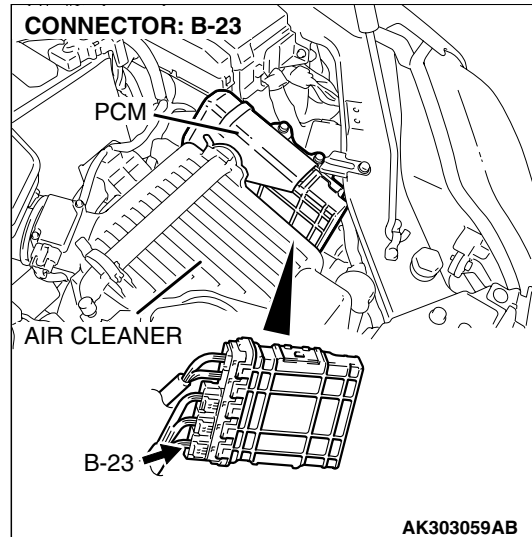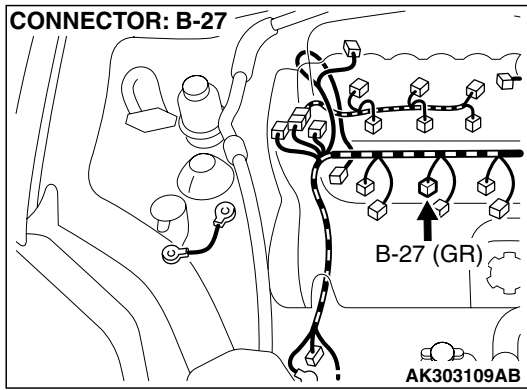

CIRCUIT OPERATION

- The injector power is supplied from the MFI relay (terminal No. 4).
- The PCM controls the injector by turning the power transistor in the PCM "ON" and "OFF".

TECHNICAL DESCRIPTION

- The amount of fuel injected by the injector is controlled by the amount of continuity time the coil is grounded by the PCM.
- A surge voltage is generated when the injectors are driven and the current flowing to the injector coil is shut off.
- The PCM checks this surge voltage.

DESCRIPTIONS OF MONITOR METHODS

Off-surge does not occur after injector is operated.

MONITOR EXECUTION

Continuous

MONITOR EXECUTION CONDITIONS (Other monitor and Sensor)

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- Not applicable

Sensor (The sensor below is determined to be normal)

- Not applicable

DTC SET CONDITIONS <Circuit continuity – open circuit and shorted low>

Logic Flow Chart

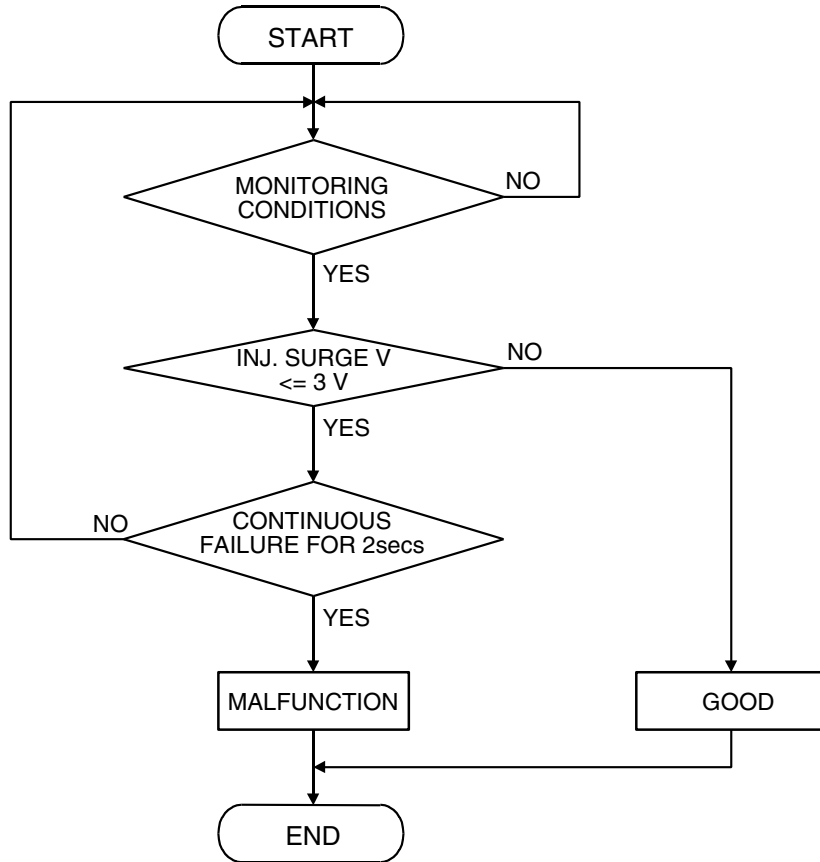

AK401614

Check Conditions


- Engine is running.

Judgment Criteria

- The supply voltage is 3 volts or less without the injector driving.

DTC SET CONDITIONS <Circuit continuity – shorted high>

Logic Flow Chart

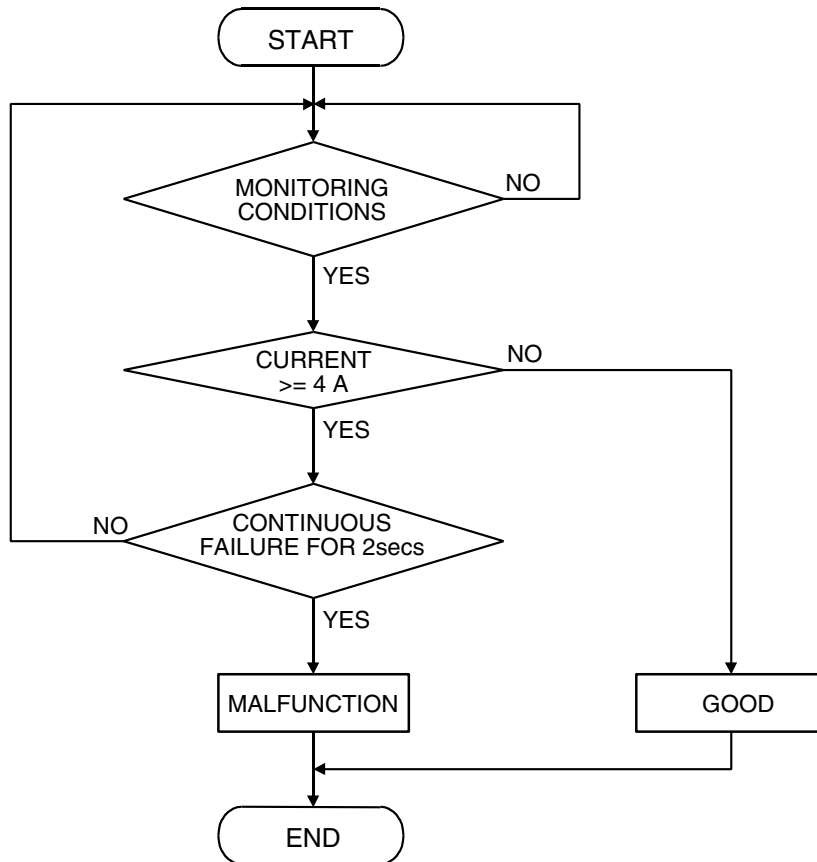

AK401592

Check Conditions

- Engine is running.

Judgment Criteria

- The coil current is 4 ampere or more with the injector driving.

OBD-II DRIVE CYCLE PATTERN

Refer to Diagnostic Function – OBD-II Drive Cycle –
Procedure 6 – Other Monitor [P.13B-6](#).

TROUBLESHOOTING HINTS (The most likely causes for this code to be set are:)

- No.4 cylinder injector failed.
- Open or shorted No.4 cylinder injector circuit, harness damage, or connector damage.
- PCM failed.

DIAGNOSIS**Required Special Tools:**

- MB991958: Scan Tool (MUT-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: USB Cable
 - MB991910: Main Harness A
- MB991658: Test Harness Set
- MB991923: Power Plant ECU Check Harness


STEP 1. Using scan tool MB991958, check actuator test item 04: No. 4 injector.**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.


- (1) Connect scan tool MB991958 to the data link connector.
- (2) Start the engine and run at idle.
- (3) Set scan tool MB991958 to the actuator testing mode for item 04, No. 4 injector.
 - The idle should become slightly rougher.
- (5) Turn the ignition switch to the "LOCK" (OFF) position.



Q: Is the actuator operating properly?

- YES** : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points – How to Cope with Intermittent Malfunctions [P.00-14](#).
- NO** : Go to Step 2.

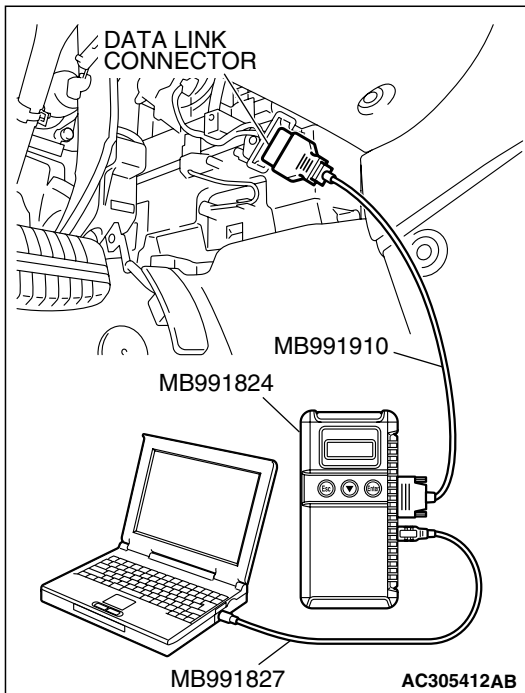**STEP 2. Check the harness connector B-27 at No. 4 cylinder injector for damage.****Q: Is the harness connector in good condition?**

- YES** : Go to Step 3.
- NO** : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 10.

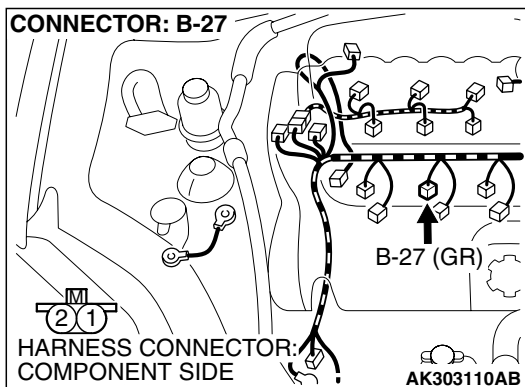

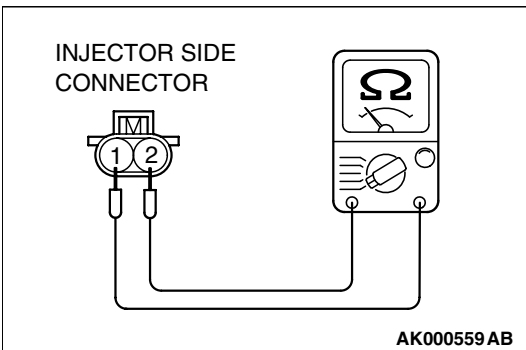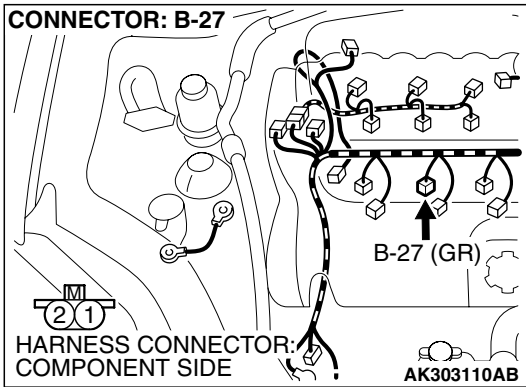

STEP 3. Check the No. 4 cylinder injector.

(1) Disconnect the No.4 cylinder injector connector B-27.



(2) Measure the resistance between injector side connector terminal No. 1 and No. 2.

Standard value: 10.5 – 13.5 ohms [at 20°C (68°F)]

Q: Is the measured resistance between 10.5 and 13.5 ohms [at 20°C (68°F)]?

YES : Go to Step 4.

NO : Replace the No. 4 cylinder injector. Then go to Step 10.

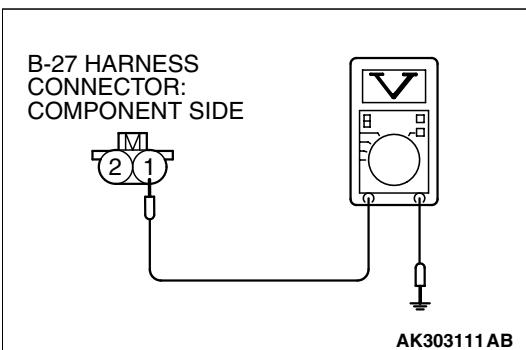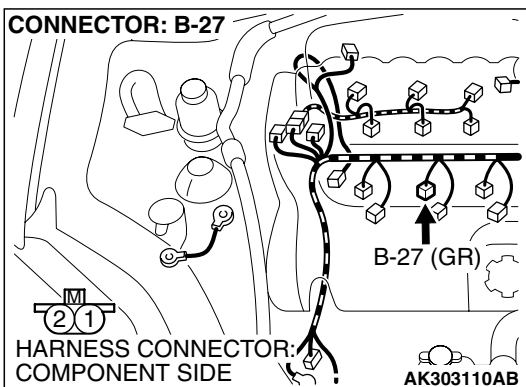

STEP 4. Measure the power supply voltage at No. 4 cylinder injector connector B-27.

(1) Disconnect connector B-27 and measure at the harness side.

(2) Turn the ignition switch to the "ON" position.


(3) Measure the voltage between terminal No. 1 and ground.
• Voltage should be battery positive voltage.

(4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is battery positive voltage (approximately 12 volts) present?

YES : Go to Step 6.

NO : Go to Step 5.

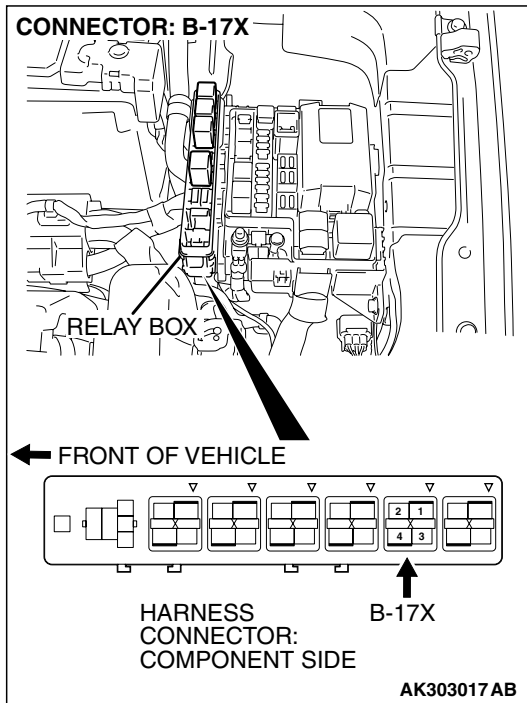

STEP 5. Check harness connector B-17X at MFI relay for damage.

Q: Is the harness connector in good condition?

YES : Repair harness wire between MFI relay connector B-17X (terminal No. 4) and No. 4 cylinder injector connector B-27 (terminal No. 1) because of open circuit or short circuit to ground.

Then go to Step 10.



NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 10.


STEP 6. Check for harness damage between MFI relay connector B-17X (terminal No. 4) and No. 4 cylinder injector connector B-27 (terminal No. 1).

Q: Is the harness wire in good condition?

YES : Go to Step 7.

NO : Repair it. Then go to Step 10.

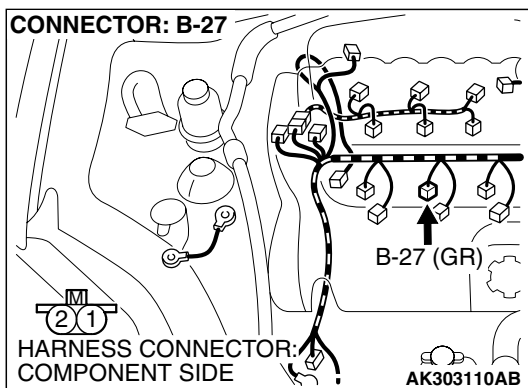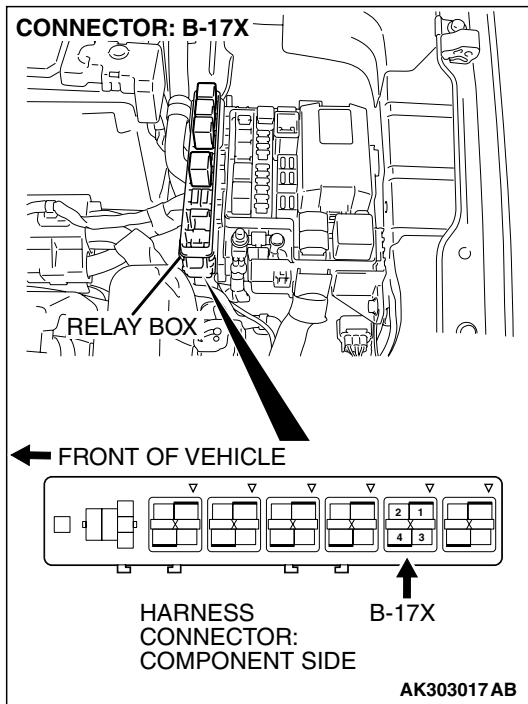

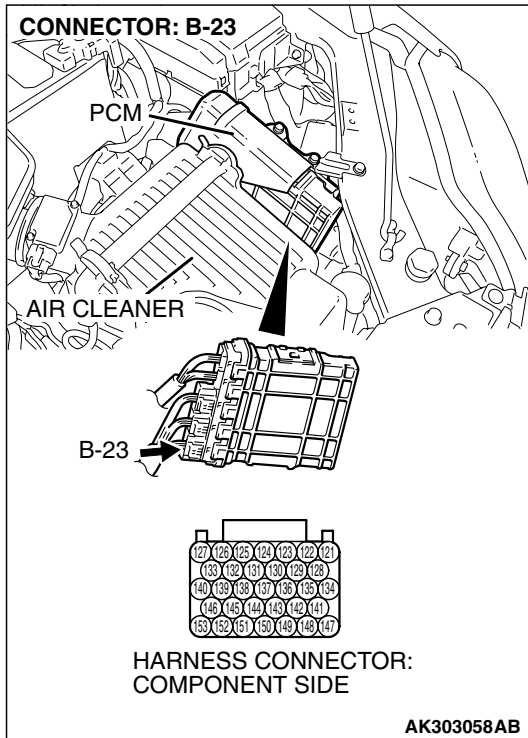

STEP 7. Check harness connector B-23 at PCM for damage.

Q: Is the connector in good condition?

YES : Go to Step 8.



NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 10.




STEP 8. Check for open circuit and short circuit to ground and harness damage between No. 4 cylinder injector connector B-27 (terminal No. 2) and PCM connector B-23 (terminal No. 139).

Q: Is the harness wire in good condition?

YES : Go to Step 9.

NO : Repair it. Then go to Step 10.

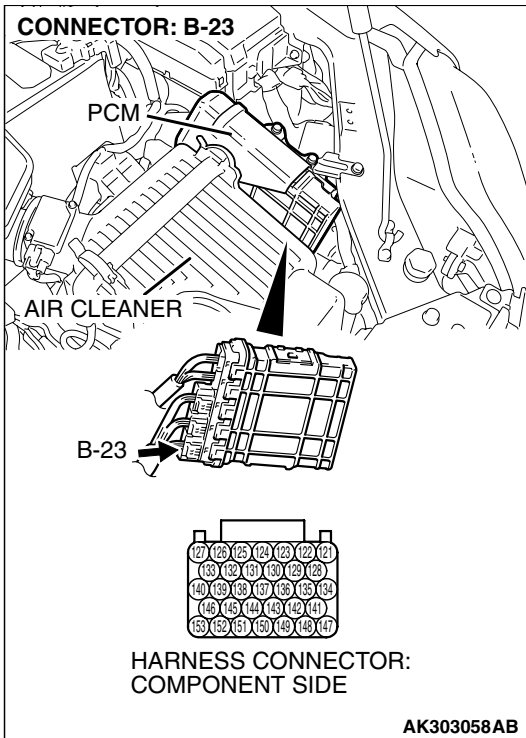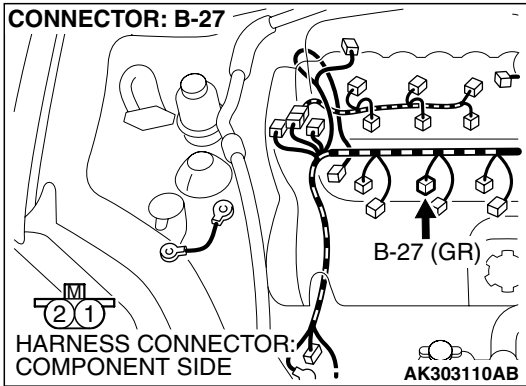

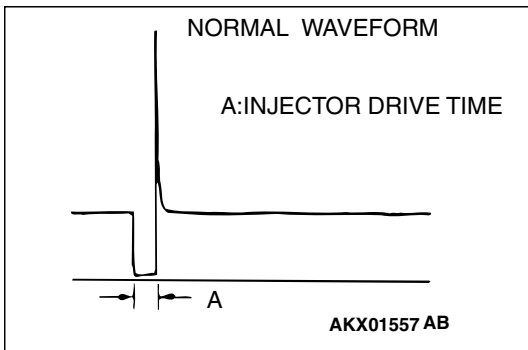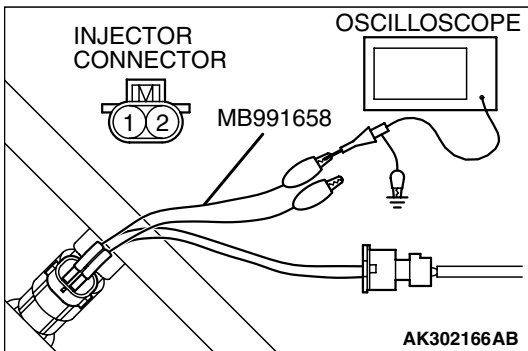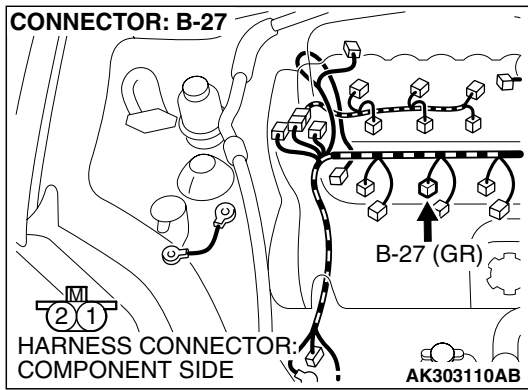

STEP 9. Using the oscilloscope, check the No. 4 cylinder injector.

(1) Disconnect the No. 4 cylinder injector B-27 and connect the test harness special tool (MB991658) between the separated connectors. (All terminals should be connected)

(2) Connect the oscilloscope probe to the injector side connector terminal No. 2.

NOTE: When measuring with the PCM side connector, disconnect the all PCM connectors and connect check harness special tool (MB991923) between the separated connectors. Then connect an oscilloscope probe to the check harness connector terminal No. 139.

(3) Start the engine and run at idle.

(4) Measure the waveform.

- The waveform should show a normal pattern similar to the illustration.

(5) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the waveform normal?

YES : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points – How to Cope with Intermittent Malfunctions P.00-14.

NO : Replace the PCM. Then go to Step 10.

STEP 10. Test the OBD-II drive cycle.

(1) Carry out a test drive with the drive cycle pattern. Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor P.13B-6.

(2) Check the diagnostic trouble code (DTC).

Q: Is DTC P0204 set?

YES : Retry the troubleshooting.


NO : The inspection is complete.

DTC P0205: Injector Circuit Malfunction - Cylinder 5





CAUTION

If DTC P0205 has been set, TCL related DTC U1120 is also set. After P0205 has been diagnosed, don't forget to erase DTC U1120.

Injector Circuit - Cylinder 5

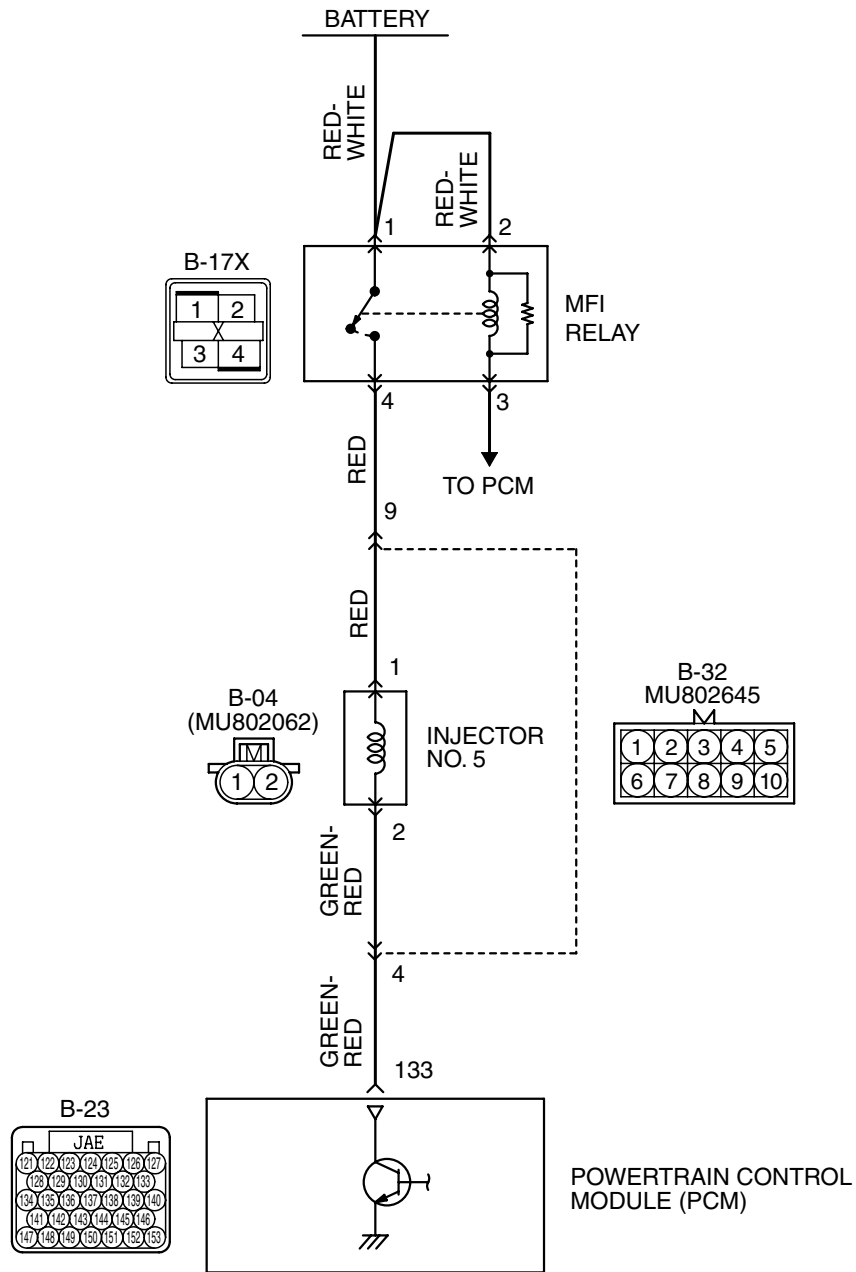

AK400911

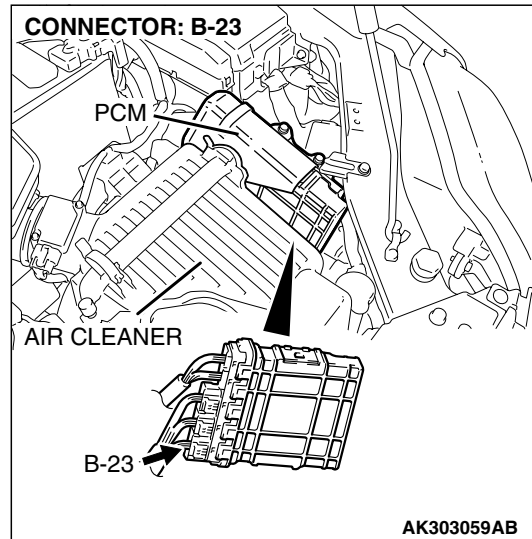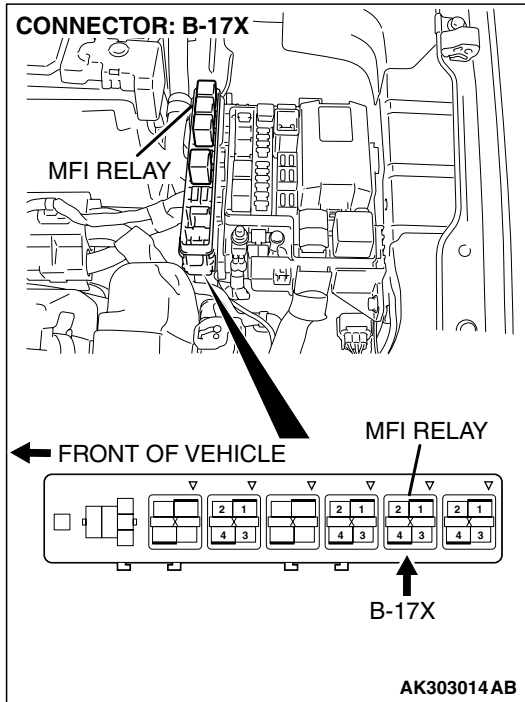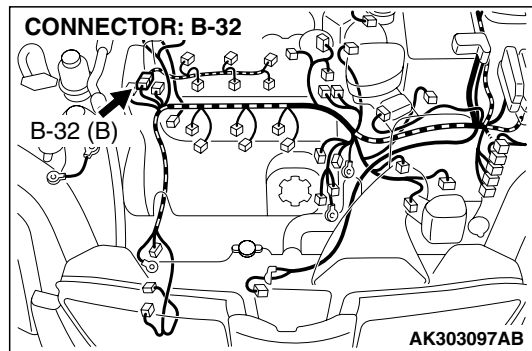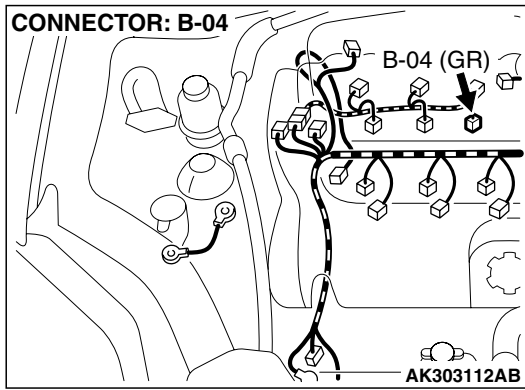

CIRCUIT OPERATION

- The injector power is supplied from the MFI relay (terminal No. 4).
- The PCM controls the injector by turning the power transistor in the PCM "ON" and "OFF".

TECHNICAL DESCRIPTION

- The amount of fuel injected by the injector is controlled by the amount of continuity time the coil is grounded by the PCM.
- A surge voltage is generated when the injectors are driven and the current flowing to the injector coil is shut off.
- The PCM checks this surge voltage.

DESCRIPTIONS OF MONITOR METHODS

Off-surge does not occur after injector is operated.

MONITOR EXECUTION

Continuous

**MONITOR EXECUTION CONDITIONS
(Other monitor and Sensor)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- Not applicable

Sensor (The sensor below is determined to be normal)

- Not applicable

DTC SET CONDITIONS <Circuit continuity – open circuit and shorted low>

Logic Flow Chart

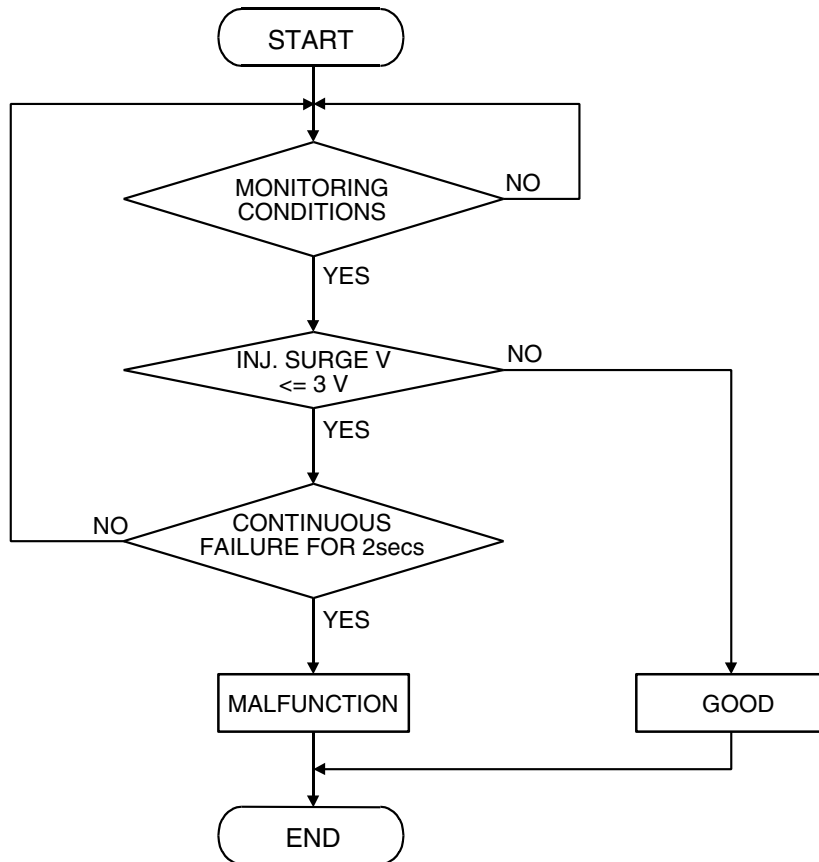

AK401614

Check Conditions


- Engine is running.

Judgment Criteria

- The supply voltage is 3 volts or less without the injector driving.

DTC SET CONDITIONS <Circuit continuity – shorted high>

Logic Flow Chart

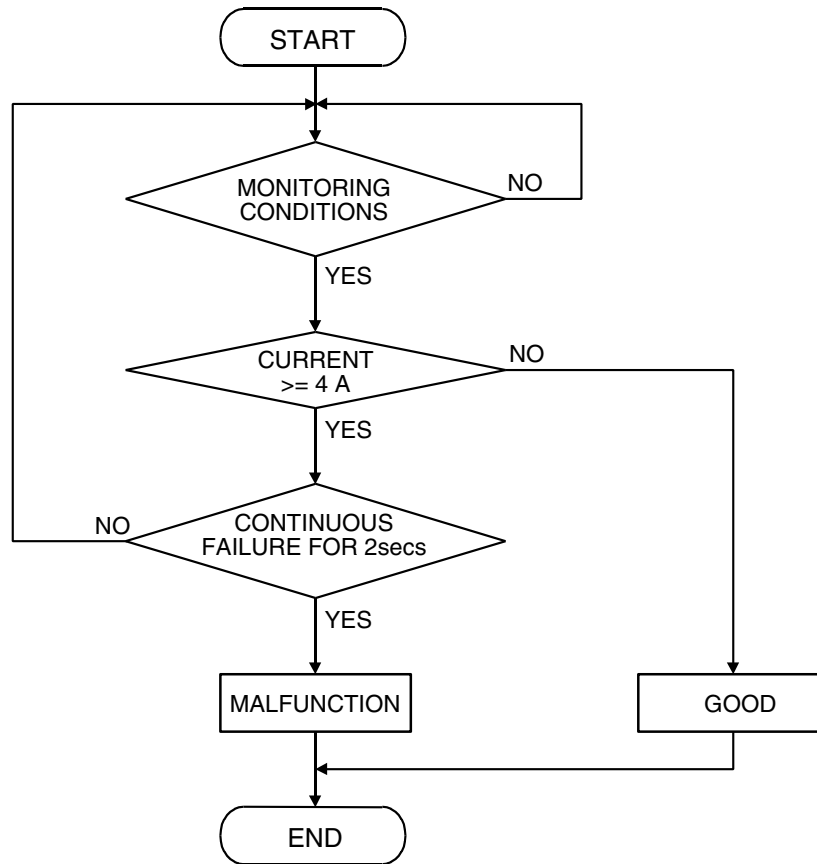

AK401592

Check Conditions

- Engine is running.

Judgment Criteria

- The coil current is 4 ampere or more with the injector driving.

TROUBLESHOOTING HINTS (The most likely causes for this code to be set are:)

- No. 5 cylinder injector failed.
- Open or shorted No. 5 cylinder injector circuit, harness damage, or connector damage.
- PCM failed.

OBD-II DRIVE CYCLE PATTERN

Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.13B-6](#).

DIAGNOSIS

Required Special Tools:

- MB991958: Scan Tool (MUT-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: USB Cable
 - MB991910: Main Harness A
- MB991658: Test Harness
- MB991923: Power Plant ECU Check Harness

STEP 1. Using scan tool MB991958, check actuator test item 05: No. 5 injector.


⚠ CAUTION

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958 to the data link connector.
- (2) Start the engine and run at idle.
- (3) Set scan tool MB991958 to the actuator testing mode for item 05 No. 5 cylinder injectors.
- (4) Warm up the engine to normal operating temperature: 80°C to 95°C (176°F to 203°F).
 - The idle should become slightly rougher.
- (5) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the actuator operating properly?


- YES** : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points – How to Cope with Intermittent Malfunctions [P.00-14](#).
- NO** : Go to Step 2.


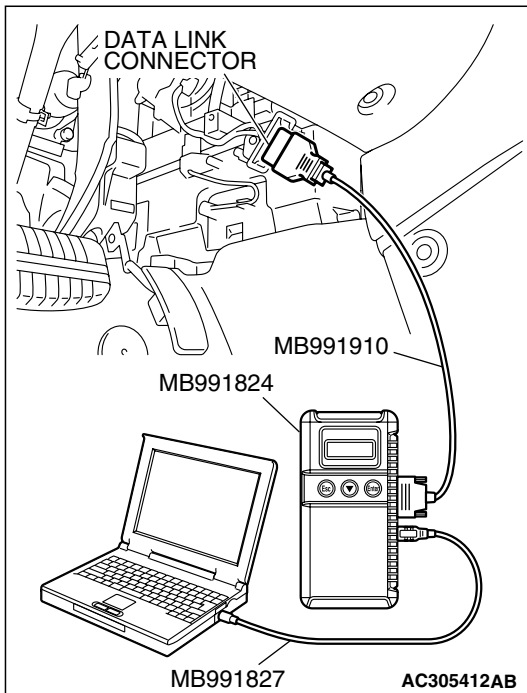


STEP 2. Check harness connector B-32 at intermediate connector for damage.

Q: Is the harness connector in good condition?

- YES** : Go to Step 3.
- NO** : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 12.

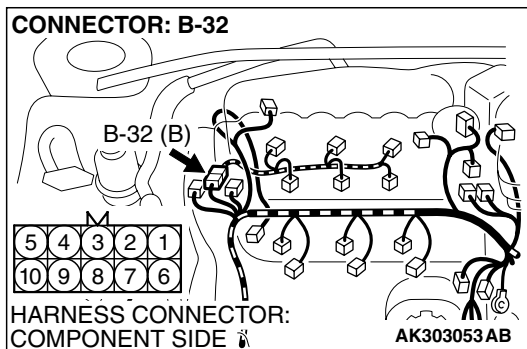

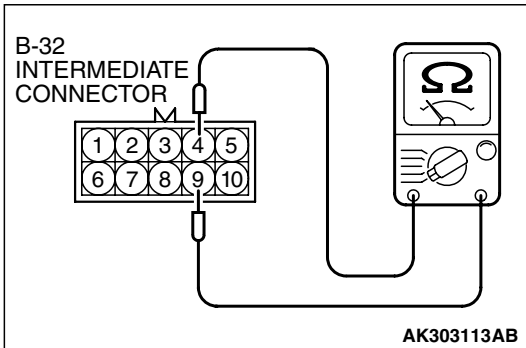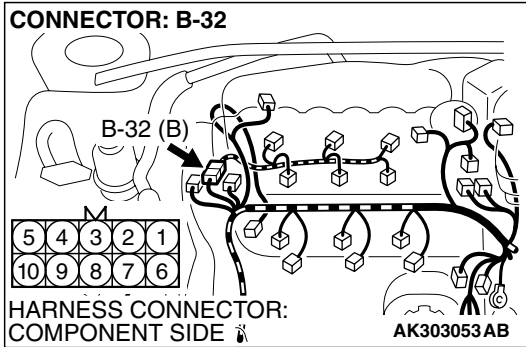

STEP 3. Check the No. 5 cylinder injector resistance at intermediate connector B-32.

(1) Disconnect the intermediate connector B-32.


(2) Measure the resistance between terminal No. 4 and No. 9.

- Resistance should be between 10.5 and 13.5 ohms.

Q: Is the measured resistance between 10.5 and 13.5 ohms?

YES : Go to Step 6.

NO : Go to Step 4.

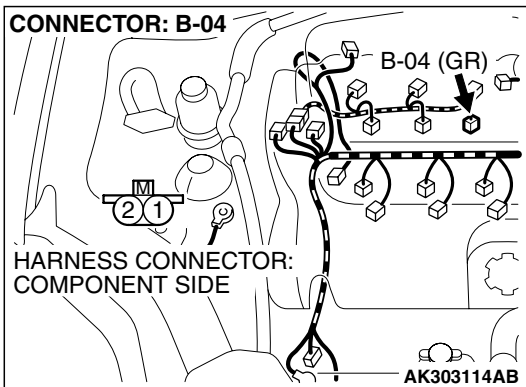



STEP 4. Check the harness connector B-04 at No. 5 cylinder injector for damage.

Remove the intake manifold.

Q: Is the harness connector in good condition?

YES : Go to Step 5.

NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 12.

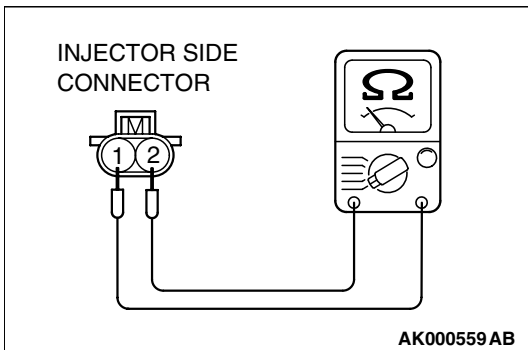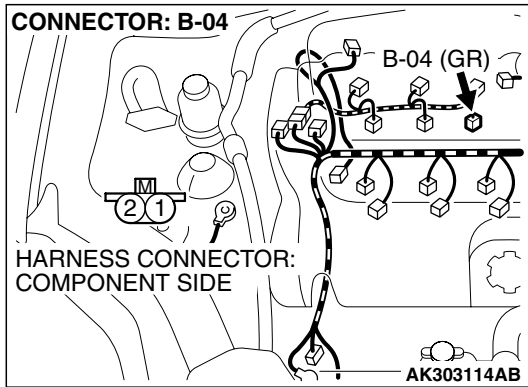

STEP 5. Check the No.5 cylinder injector.

(1) Disconnect the No. 5 cylinder injector connector B-04.

(2) Measure the resistance between injector side connector terminal No. 1 and No. 2.



Standard value: 10.5 – 13.5 ohms [at 20°C (68°F)]

Q: Is the measured resistance between 10.5 and 13.5 ohms [at 20°C (68°F)]?

YES : Repair harness wire between intermediate connector B-32 (terminal No. 9) and injector connector B-04 (terminal No. 1) and harness wire between No. 5 cylinder injector connector B-04 (terminal No. 2) and intermediate connector B-32 (terminal No. 4) because of open circuit or short circuit to ground or harness damage.

Then go to Step 12.

NO : Replace the No. 5 cylinder injector. Then go to Step 12.

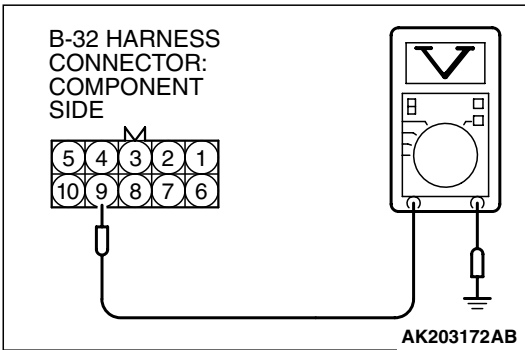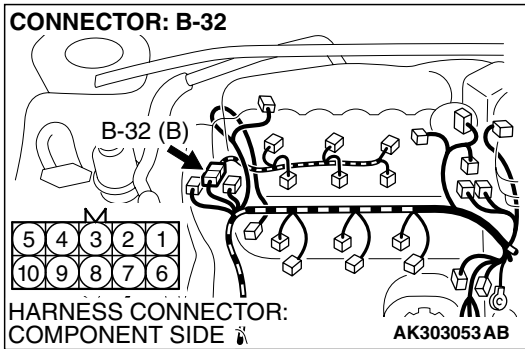


STEP 6. Measure the power supply voltage at intermediate connector B-32.

- (1) Disconnect the connector B-32 and measure at the female connector side.
- (2) Turn the ignition switch to the "ON" position.

- (3) Measure the voltage between terminal No. 9 and ground.
 - Voltage should be battery positive voltage.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is battery positive voltage (approximately 12 volts) present?

- YES :** Go to Step 8.
NO : Go to Step 7.

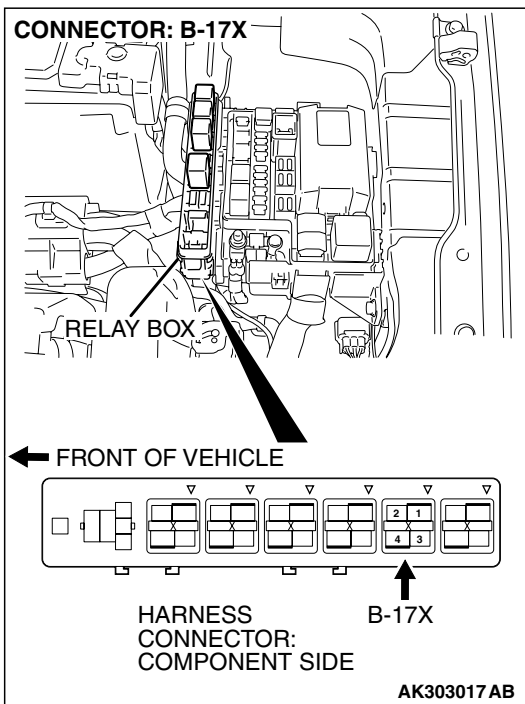

STEP 7. Check harness connector B-17X at MFI relay for damage.

Q: Is the harness connector in good condition?



- YES :** Repair harness wire between MFI relay connector B-17X (terminal No. 4) and intermediate connector B-32 (terminal No. 9) because of open circuit or short circuit to ground. Then go to Step 12.
- NO :** Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection P.00E-2. Then go to Step 12.


STEP 8. Check for harness damage between MFI relay connector B-17X (terminal No. 4) and intermediate connector B-32 (terminal No. 9).

Q: Is the harness wire in good condition?

YES : Go to Step 9.

NO : Repair it. Then go to Step 12.

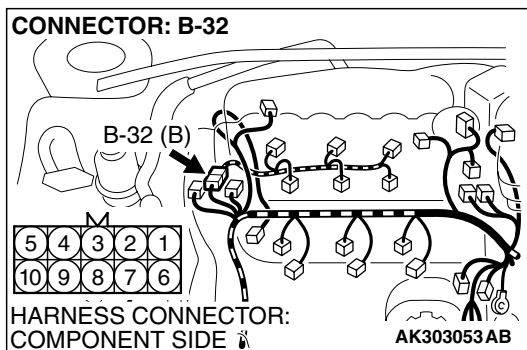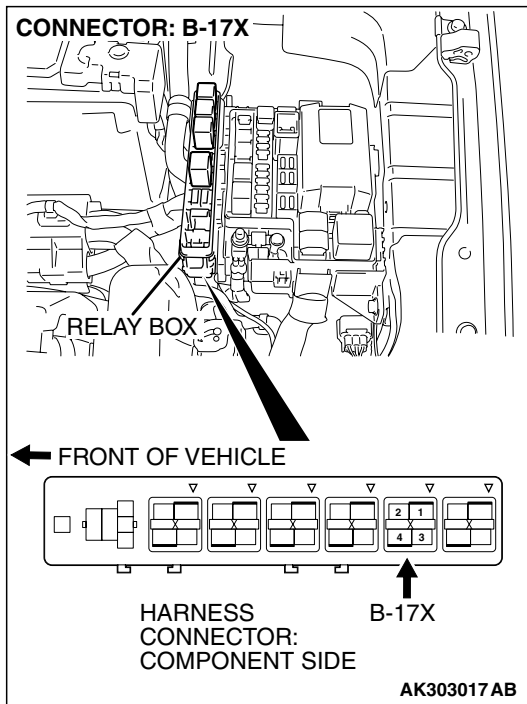

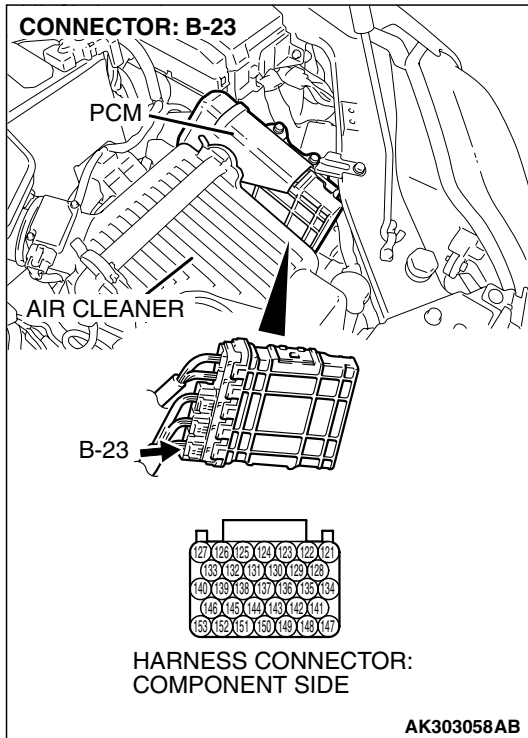

STEP 9. Check harness connector B-23 at PCM for damage.

Q: Is the harness connector in good condition?

YES : Go to Step 10.



NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 12.




STEP 10. Check for open circuit and short circuit to ground and harness damage between intermediate connector B-32 (terminal No. 4) and PCM connector B-23 (terminal No. 133).

Q: Is the harness wire in good condition?

YES : Go to Step 11.

NO : Repair it. Then go to Step 12.

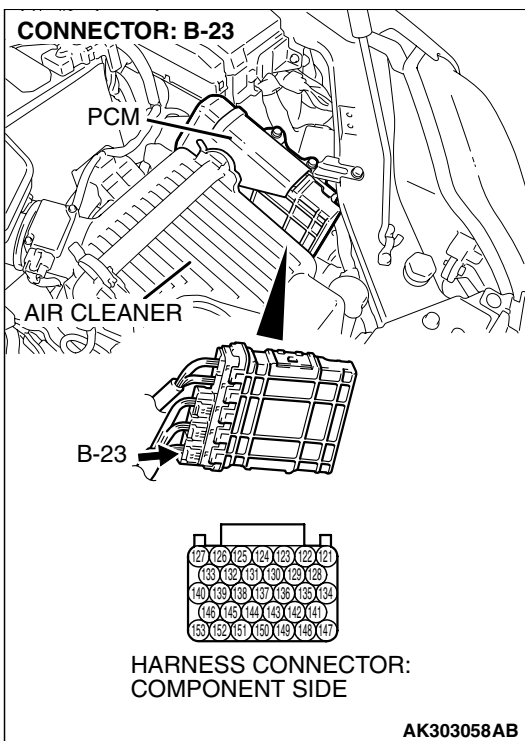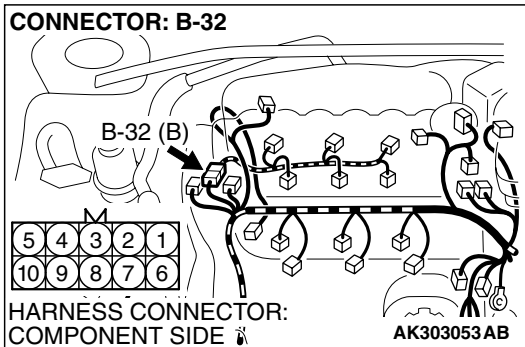

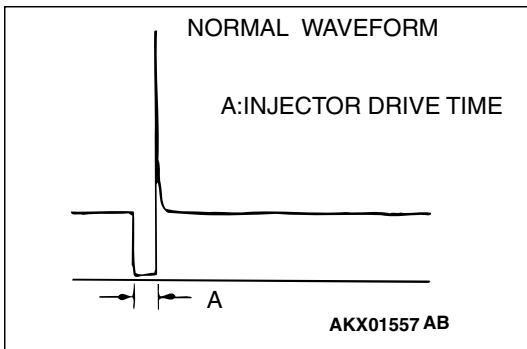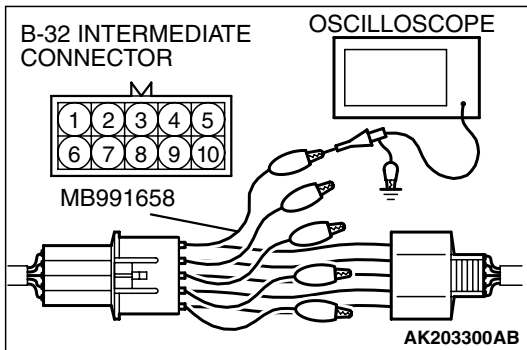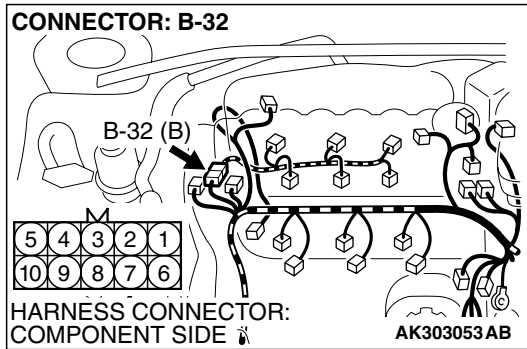

STEP 11. Using the oscilloscope, check the No. 5 cylinder injector.

(1) Disconnect the intermediate connector B-32 and connect the test harness MB991658 between the separated connectors.

(2) Connect the oscilloscope probe to injector intermediate connector terminal No. 4.

NOTE: When measuring with the PCM side connector, disconnect the all PCM connectors and connect check harness special tool (MB991923) between the separated connectors. Then connect an oscilloscope probe to the check harness connector terminal No. 133.

(3) Start the engine and run at idle.

(4) Measure the waveform.

- The waveform should show a normal pattern similar to the illustration.

(5) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the waveform normal?

YES : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points – How to Cope with Intermittent Malfunctions P.00-14.

NO : Replace the PCM. Then go to Step 12.

STEP 12. Test the OBD-II drive cycle.

(1) Carry out a test drive with the drive cycle pattern. Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor P.13B-6.

(2) Check the diagnostic trouble code (DTC).

Q: Is DTC P0205 set?

YES : Retry the troubleshooting.


NO : The inspection is complete.

DTC P0206: Injector Circuit Malfunction - Cylinder 6




CAUTION

If DTC P0206 has been set, TCL related DTC U1120 is also set. After P0206 has been diagnosed, don't forget to erase DTC U1120.

Injector Circuit - Cylinder 6

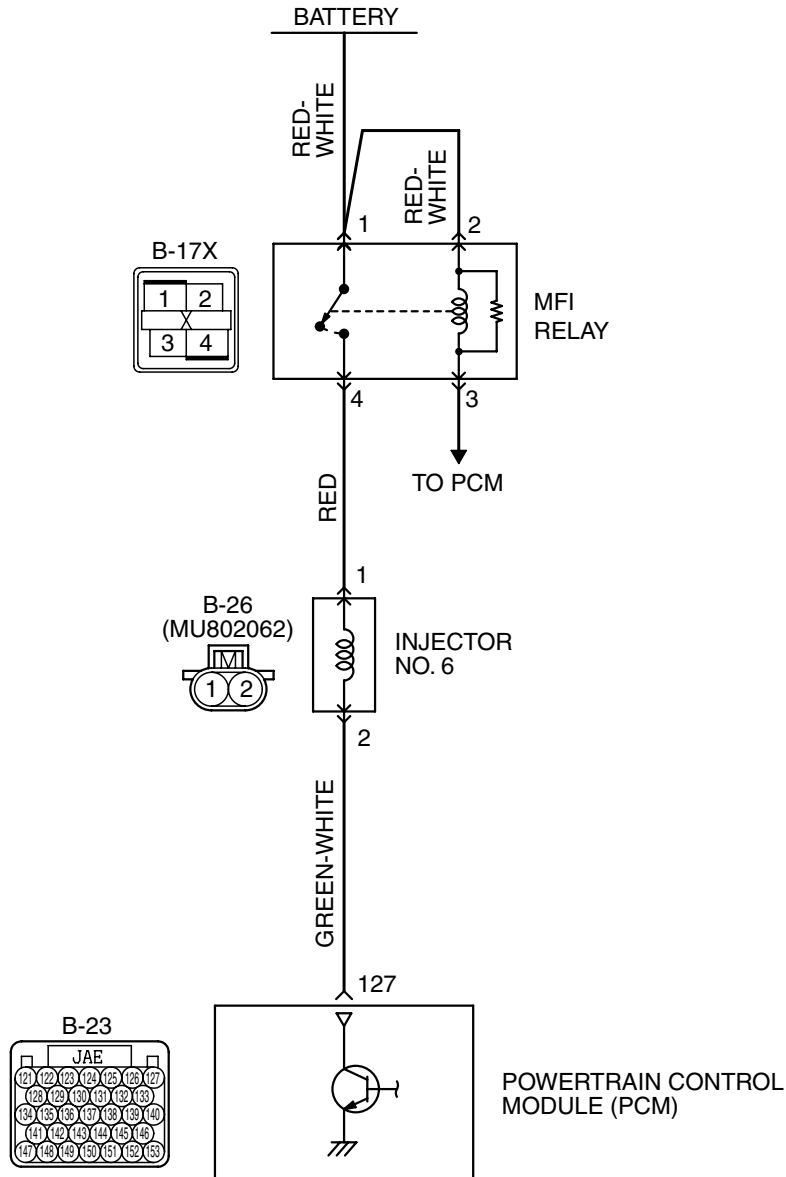

AK400912

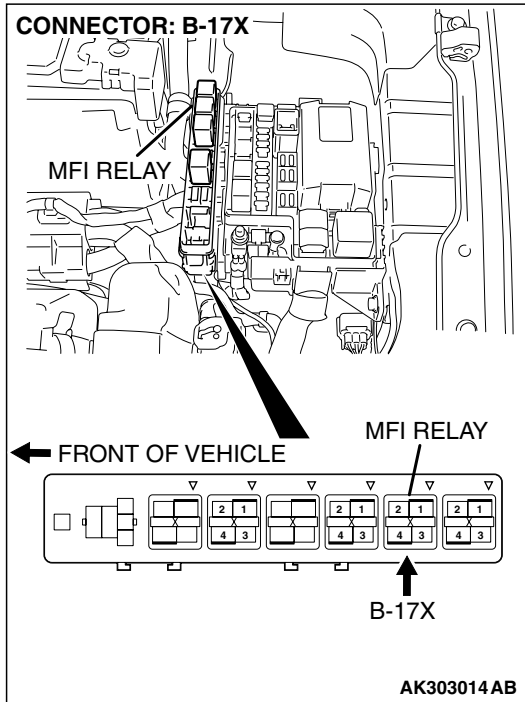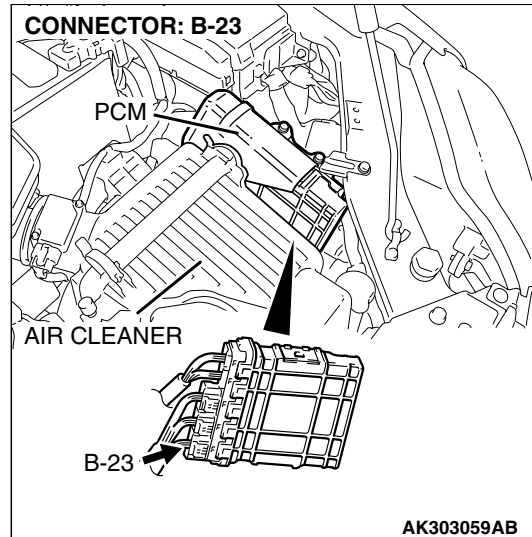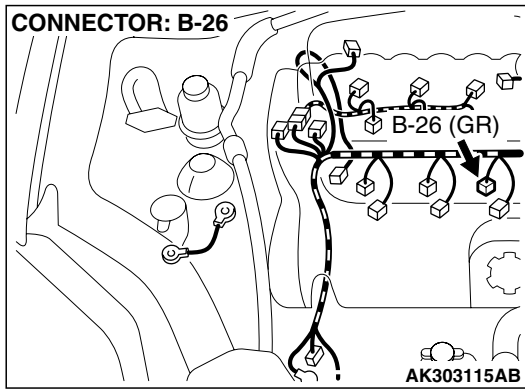

CIRCUIT OPERATION

- The injector power is supplied from the MFI relay (terminal No. 4).
- The PCM controls the injector by turning the power transistor in the PCM "ON" and "OFF".

TECHNICAL DESCRIPTION

- The amount of fuel injected by the injector is controlled by the amount of continuity time the coil is grounded by the PCM.
- A surge voltage is generated when the injectors are driven and the current flowing to the injector coil is shut off.
- The PCM checks this surge voltage.

DESCRIPTIONS OF MONITOR METHODS

Off-surge does not occur after injector is operated.

MONITOR EXECUTION

Continuous

**MONITOR EXECUTION CONDITIONS
(Other monitor and Sensor)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- Not applicable

Sensor (The sensor below is determined to be normal)

- Not applicable

DTC SET CONDITIONS <Circuit continuity – open circuit and shorted low>

Logic Flow Chart

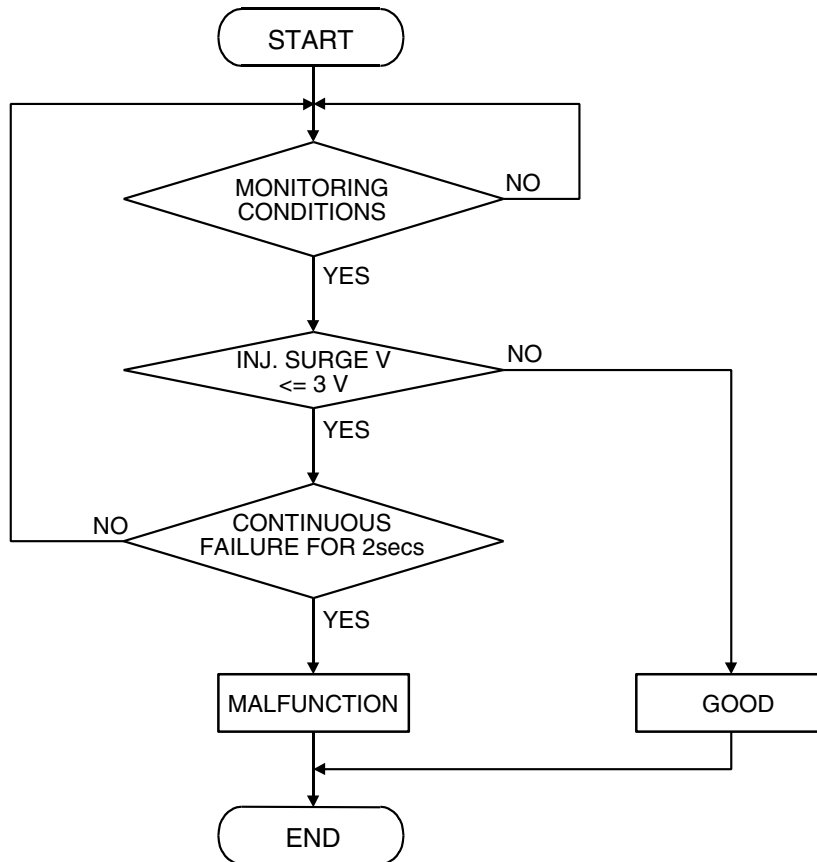

AK401614

Check Conditions


- Engine is running.

Judgment Criteria

- The supply voltage is 3 volts or less without the injector driving.

DTC SET CONDITIONS <Circuit continuity – shorted high>

Logic Flow Chart

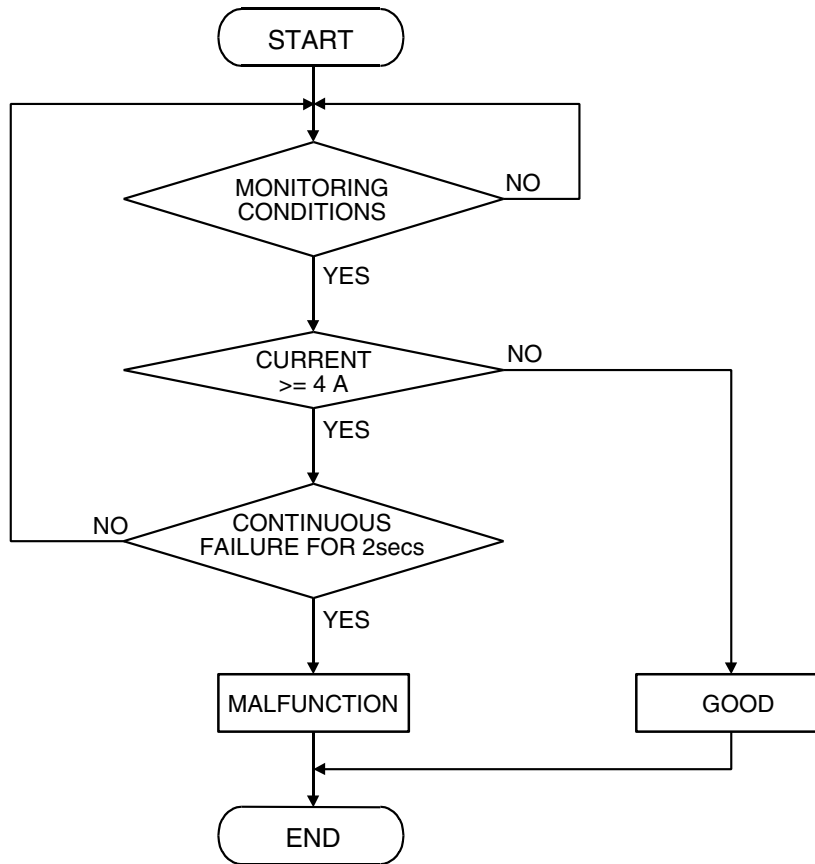

AK401592

Check Conditions

- Engine is running.

Judgment Criteria

- The coil current is 4 ampere or more with the injector driving.

TROUBLESHOOTING HINTS (The most likely causes for this code to be set are:)

- No. 6 cylinder injector failed.
- Open or shorted No. 6 cylinder injector circuit, harness damage, or connector damage.
- PCM failed.

OBD-II DRIVE CYCLE PATTERN

Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.13B-6](#).

DIAGNOSIS

Required Special Tools:

- MB991958: Scan Tool (MUT-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: USB Cable
 - MB991910: Main Harness A
- MB991658: Test Harness
- MB991923: Power Plant ECU Check Harness

STEP 1. Using scan tool MB991958, check actuator test item 02, 04, 06: No. 6 injector.


⚠ CAUTION

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958 to the data link connector.
- (2) Start the engine and run at idle.
- (3) Set scan tool MB991958 to the actuator testing mode for item 06, No. 6 Injector.
 - The idle should become slightly rougher.
- (4) Warm up the engine to normal operating temperature: 80°C to 95°C (176°F to 203°F).
- (5) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the actuator operating properly?


- YES** : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points – How to Cope with Intermittent Malfunctions [P.00-14](#).
- NO** : Go to Step 2.


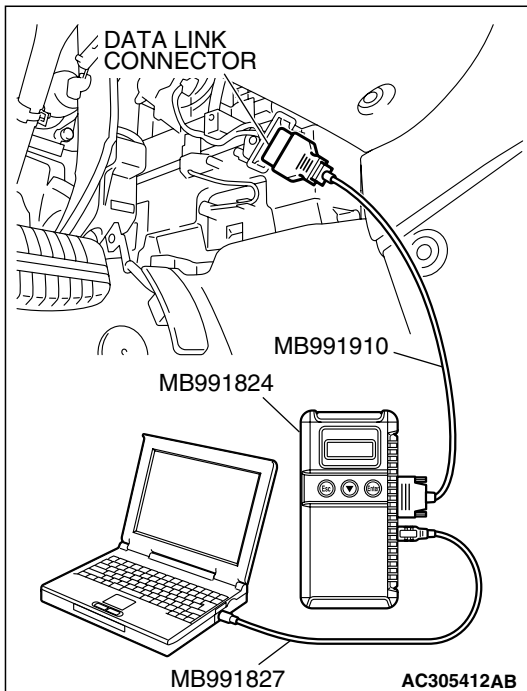


STEP 2. Check the harness connector B-26 at No. 6 cylinder injector for damage.

Q: Is the harness connector in good condition?

- YES** : Go to Step 3.
- NO** : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 10.

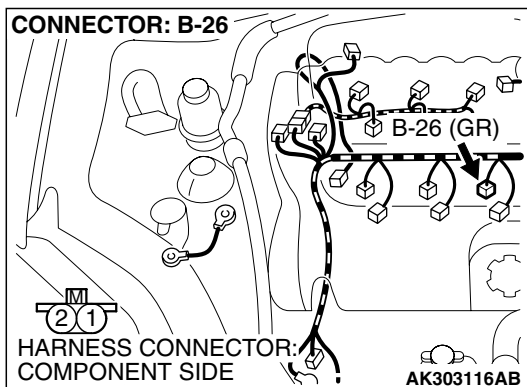

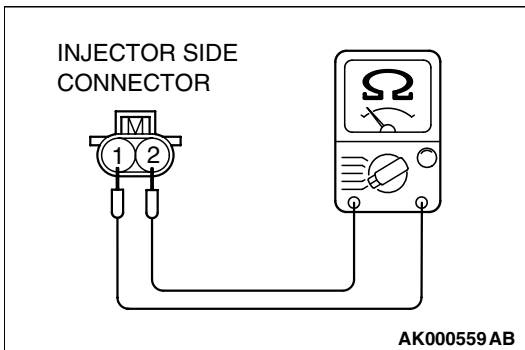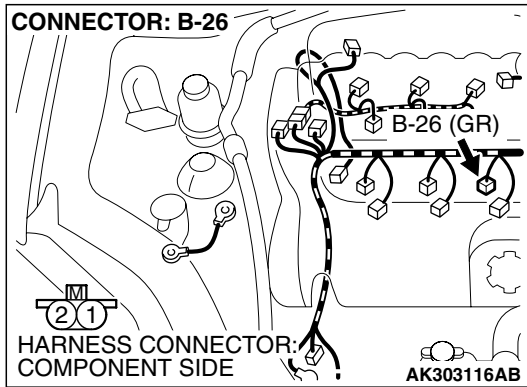**STEP 3. Check the No. 6 cylinder injector.**

(1) Disconnect the No.6 cylinder injector connector B-26.



(2) Measure the resistance between injector side connector terminal No. 1 and No. 2.

Standard value: 10.5 – 13.5 ohms [at 20°C (68°F)]

Q: Is the measured resistance between 10.5 and 13.5 ohms [at 20°C (68°F)]?

YES : Go to Step 4.

NO : Replace the No. 6 cylinder injector. Then go to Step 10.

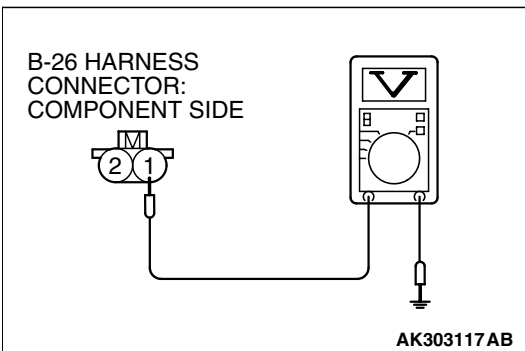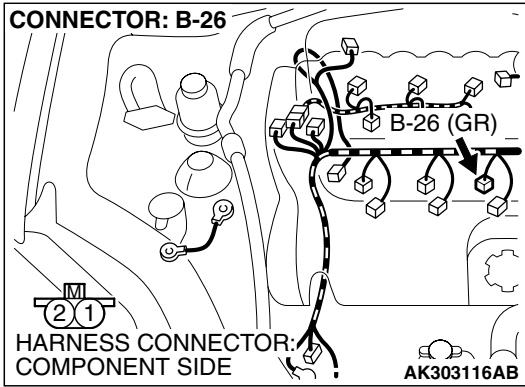


STEP 4. Measure the power supply voltage at No. 6 cylinder injector connector B-26.

- (1) Disconnect connector B-26 and measure at the harness side.
- (2) Turn the ignition switch to the "ON" position.

- (3) Measure the voltage between terminal No. 1 and ground.
 - Voltage should be battery positive voltage.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is battery positive voltage (approximately 12 volts) present?

- YES :** Go to Step 6.
NO : Go to Step 5.

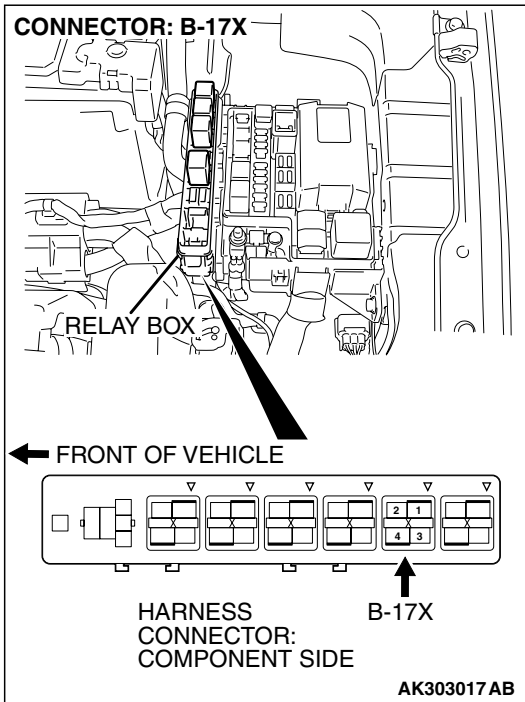

STEP 5. Check harness connector B-17X at MFI relay for damage.

Q: Is the harness connector in good condition?



- YES :** Repair harness wire between MFI relay connector B-17X (terminal No. 4) and injector connector B-26 (terminal No. 1) because of open circuit or short circuit to ground.
Then go to Step 10.
- NO :** Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 10.

STEP 6. Check for harness damage between MFI relay connector B-17X and No. 6 cylinder injector connector B-26 (terminal No. 1).

Q: Is the harness wire in good condition?

YES : Go to Step 7.

NO : Repair it. Then go to Step 10.

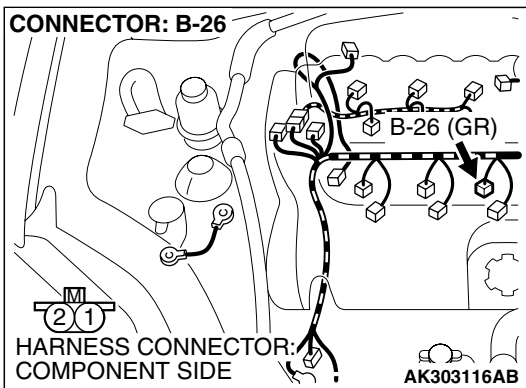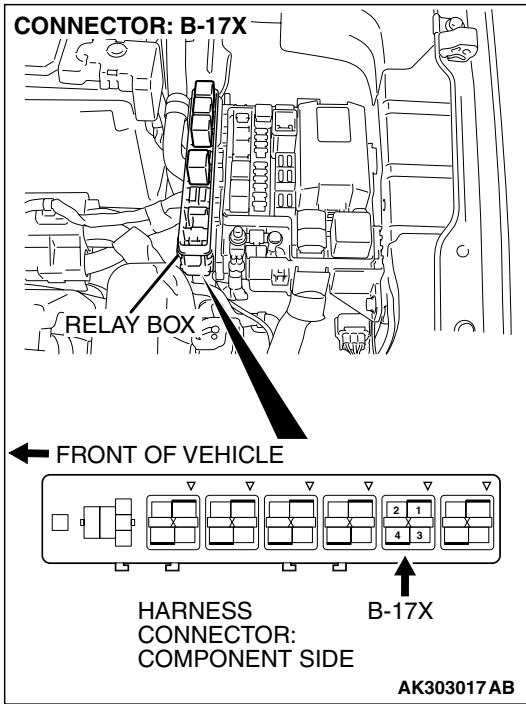


STEP 7. Check harness connector B-23 at PCM for damage.

Q: Is the harness connector in good condition?

YES : Go to Step 8.

NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 10.


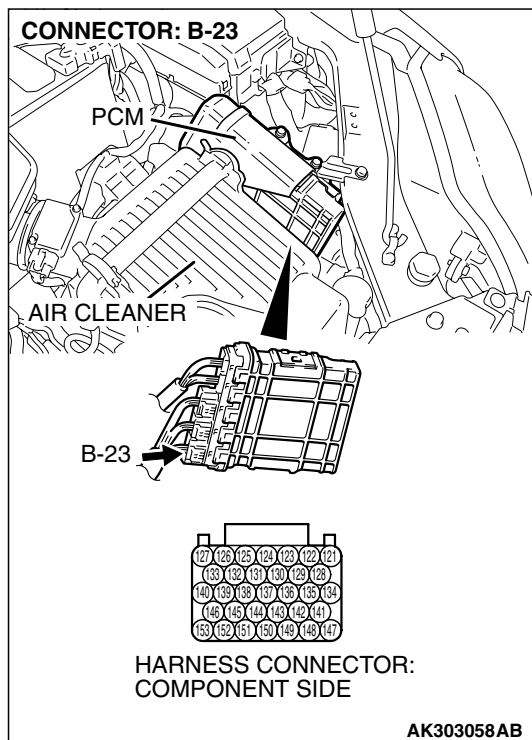





STEP 8. Check for open circuit and short circuit to ground and harness damage between No. 6 cylinder injector connector B-26 (terminal No. 2) and PCM connector B-23 (terminal No. 127).

Q: Is the harness wire in good condition?

YES : Go to Step 9.

NO : Repair it. Then go to Step 10.

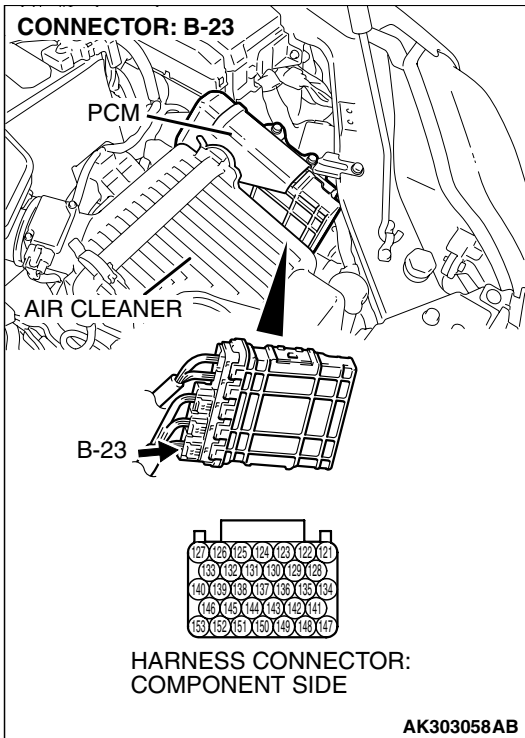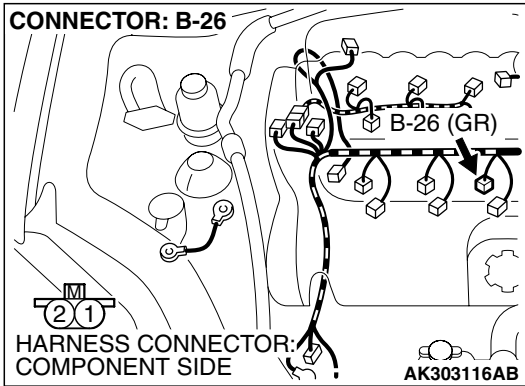

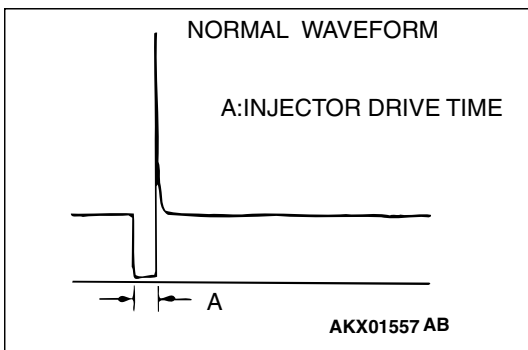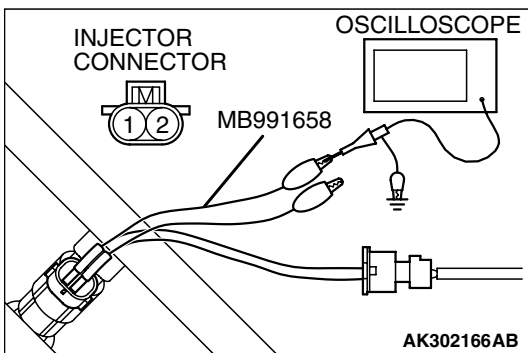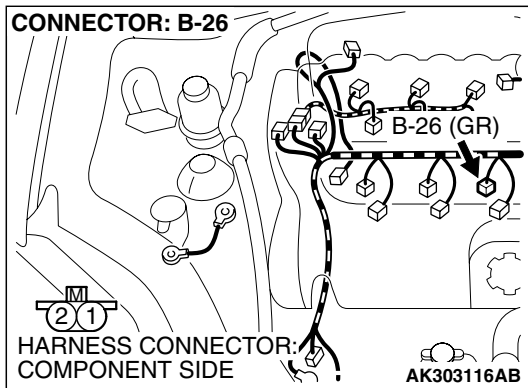

STEP 9. Using the oscilloscope, check the No. 6 cylinder injector.

(1) Disconnect the No. 6 cylinder injector connector B-26 and connect the test harness special tool (MB991658) between the separated connectors. (All terminals should be connected)

(2) Connect the oscilloscope probe to the injector side connector terminal No. 2.

NOTE: When measuring with the PCM side connector, disconnect the all PCM connectors and connect check harness special tool (MB991923) between the separated connectors. Then connect an oscilloscope probe to the check harness connector terminal No. 127.

(3) Start the engine and run at idle.

(4) Measure the waveform.

- The waveform should show a normal pattern similar to the illustration.

(5) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the waveform normal?

YES : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points – How to Cope with Intermittent Malfunctions P.00-14.

NO : Replace the PCM. Then go to Step 10.

STEP 10. Test the OBD-II drive cycle.

(1) Carry out a test drive with the drive cycle pattern. Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor P.13B-6.

(2) Check the diagnostic trouble code (DTC).

Q: Is DTC P0206 set?

YES : Retry the troubleshooting.


NO : The inspection is complete.

DTC P0222: Throttle Position Sensor (Sub) Circuit Low Input



CAUTION

If DTC P0222 has been set, TCL related DTC U1120 is also set. After P0222 has been diagnosed, don't forget to erase DTC U1120.

Throttle Position Sensor (sub) Circuit

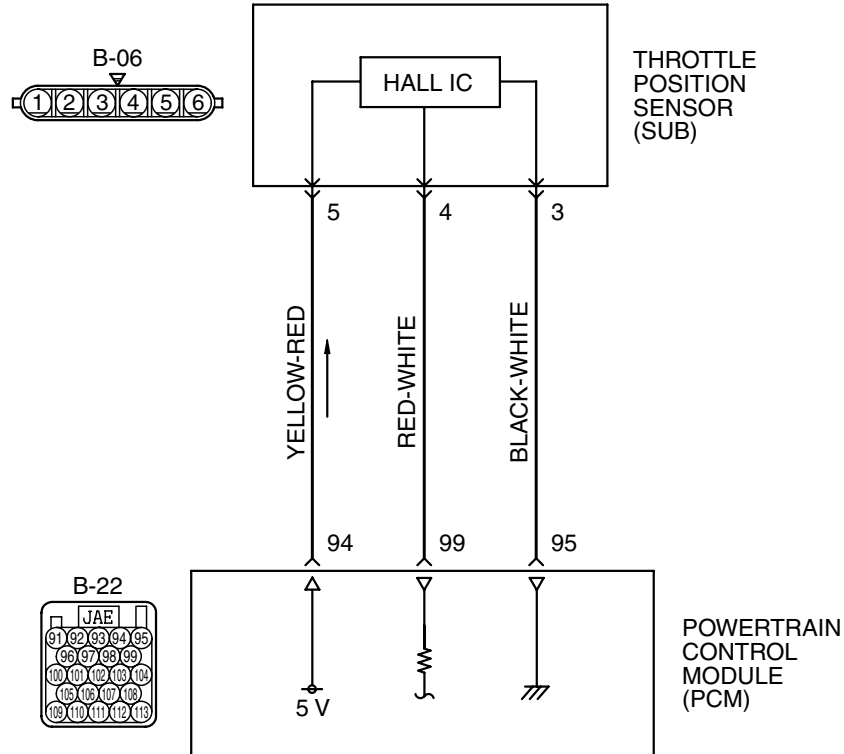

AK400888

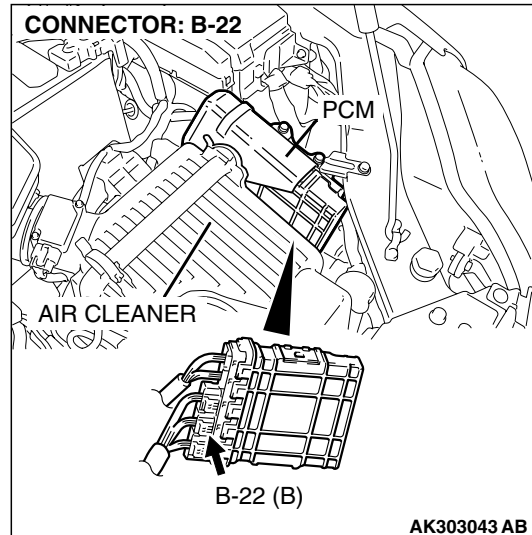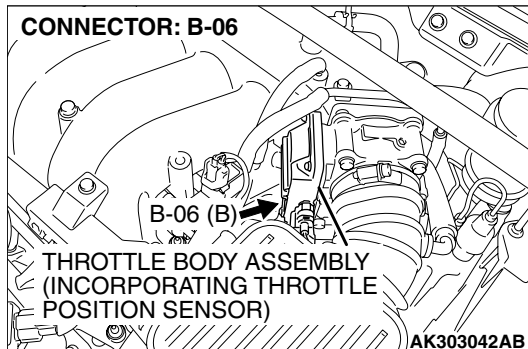

CIRCUIT OPERATION

- A 5-volt power supply is applied on the throttle position sensor (sub) power terminal (terminal No. 5) from the PCM (terminal No. 94). The ground terminal (terminal No. 3) is grounded with PCM (terminal No. 95).

TECHNICAL DESCRIPTION

- The throttle position sensor (sub) outputs voltage which corresponds to the throttle valve opening angle.
- The PCM checks whether the voltage is within a specified range.

DESCRIPTIONS OF MONITOR METHODS

Throttle position sensor (sub) output voltage is out of specified range.

MONITOR EXECUTION

Continuous

MONITOR EXECUTION CONDITIONS (Other monitor and Sensor)

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- Not applicable

Sensor (The sensor below is determined to be normal)

- Not applicable

DTC SET CONDITIONS

Logic Flow Chart

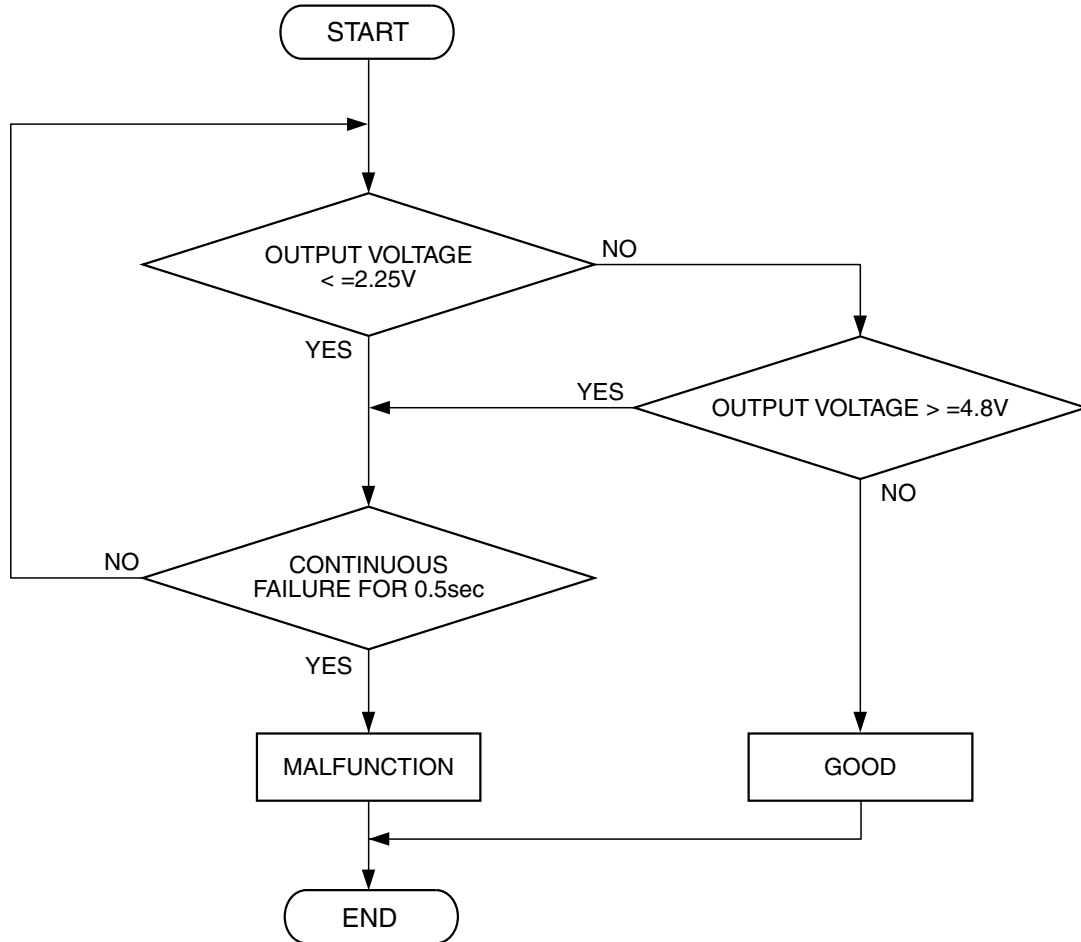

AK302390

Check Conditions

- Ignition switch is "ON" position.

Judgement Criteria

- Throttle position sensor (sub) output voltage should be 2.25 volts or less for 0.5 second.

TROUBLESHOOTING HINTS (The most likely causes for this code to be set are:)

- Throttle position sensor failed.
- Open or shorted throttle position sensor (sub) circuit, harness damage, or connector damage.
- PCM failed.

OBD-II DRIVE CYCLE PATTERN

None.

DIAGNOSIS

Required Special Tools:

- MB991958: Scan tool (MUT-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: USB Cable
 - MB991910: Main Harness A
- MB991658: Test Harness

STEP 1. Using scan tool MB991958, check data list item 14: Throttle Position Sensor (sub).

⚠ CAUTION

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK"(OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958 to the data link connector.
- (2) Turn the ignition switch to the "ON" position.
- (3) Detach the intake air hose at the throttle body.
- (4) Disconnect the connector of the throttle position sensor.
- (5) Use test harness special tool (MB991658) to connect only terminals No. 3, No. 4, No. 5, and No. 6.
- (6) Set scan tool MB991958 to the data reading mode for item 14, Throttle Position Sensor (sub).
 - Output voltage should be between 2.2 and 2.8 volts when the throttle valve is fully closed with your finger.
 - Output voltage should be 4.0 volts or more when the throttle valve is fully open with your finger.
- (7) Turn the ignition switch to the "LOCK"(OFF) position.



Q: Is the sensor operating properly?


- YES** : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points – How to Cope with Intermittent Malfunctions [P.00-14](#).
- NO** : Go to Step 2.

STEP 2. Check harness connector B-06 at throttle position sensor for damage.

Q: Is the harness connector in good condition?

- YES** : Go to Step 3.
- NO** : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 11.

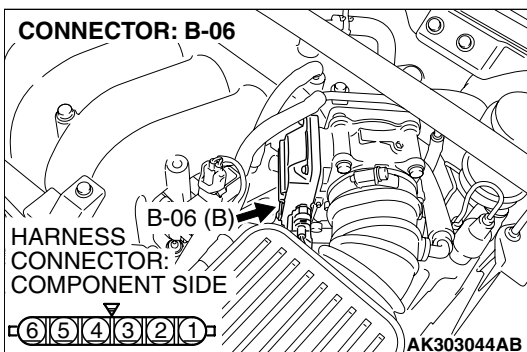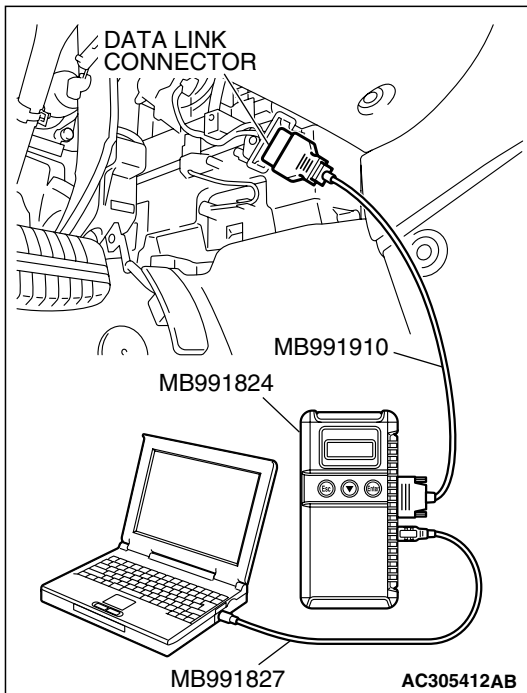

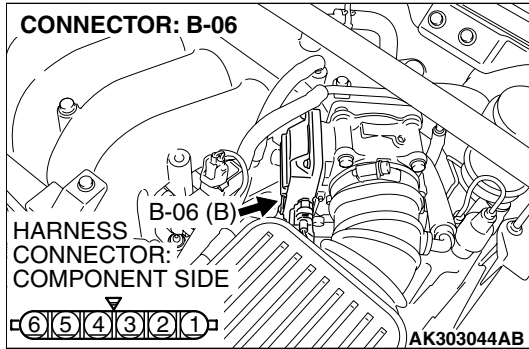


STEP 3. Measure the sensor supply voltage at throttle position sensor harness side connector B-06.

- (1) Disconnect the connector B-06 and measure at the harness side.
- (2) Turn the ignition switch to the "ON" position.
- (3) Measure the voltage between terminal No. 5 and ground
 - Voltage should be between 4.9 and 5.1 volts.
- (4) Turn the ignition switch to the "LOCK"(OFF) position.

Q: Is the measured voltage between 4.9 and 5.1 volts?

- YES :** Go to Step 7.
NO : Go to Step 4.

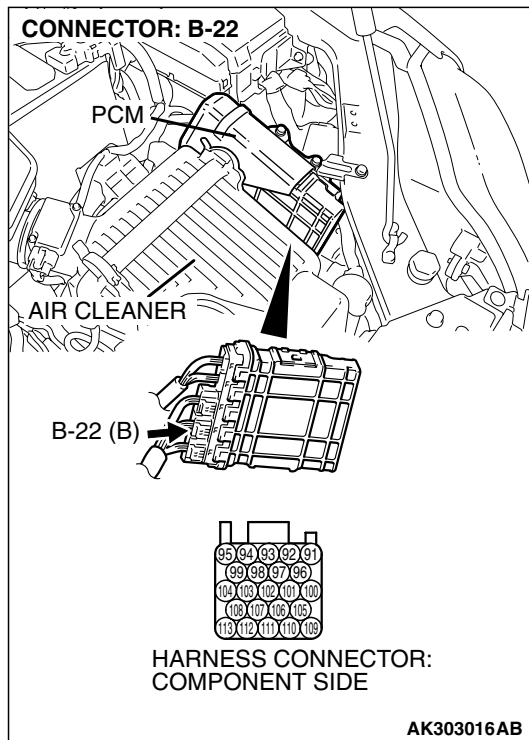

STEP 4. Check harness connector B-22 at PCM for damage.

Q: Is the harness connector in good condition?



- YES :** Go to Step 5.
NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 11.

STEP 5. Check for open circuit and short circuit to ground between throttle position sensor connector B-06 (terminal No. 5) and PCM connector B-22 (terminal No. 94).

Q: Is the harness wire in good condition?

YES : Go to Step 6.

NO : Repair it. Then go to Step 11.

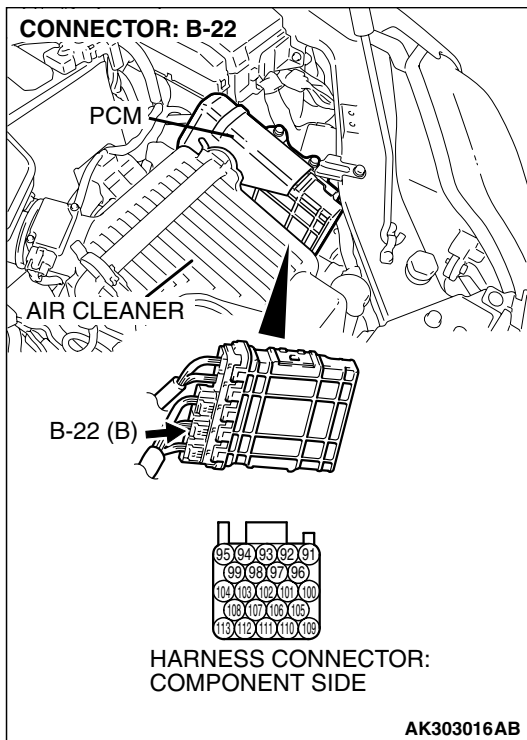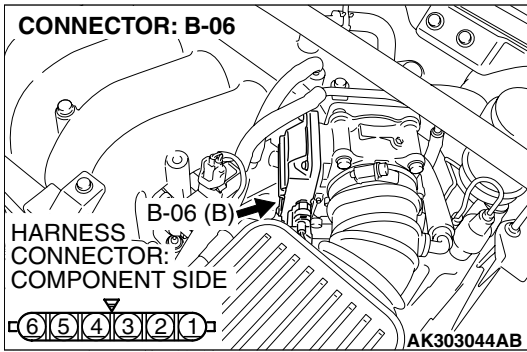

STEP 6. Using scan tool MB991958, check data list item 14: Throttle Position Sensor (sub).

⚠ CAUTION

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK"(OFF) position before connecting or disconnecting scan tool MB991958.


- (1) Connect scan tool MB991958 to the data link connector.
- (2) Turn the ignition switch to the "ON" position.
- (3) Detach the intake air hose at the throttle body.
- (4) Disconnect the connector of the throttle position sensor.
- (5) Use test harness special tool (MB991658) to connect only terminals No. 3, No. 4, No. 5, and No. 6.
- (6) Set scan tool MB991958 to the data reading mode for item 14, Throttle Position Sensor (sub).
 - Output voltage should be between 2.2 and 2.8 volts when the throttle valve is fully closed with your finger.
 - Output voltage should be 4.0 volts or more when the throttle valve is fully open with your finger.
- (7) Turn the ignition switch to the "LOCK"(OFF) position.

Q: Is the sensor operating properly?

YES : It can be assumed that this malfunction is intermittent.

Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points – How to Cope with Intermittent Malfunctions P.00-14.

NO : Replace the PCM. Then go to Step 11.

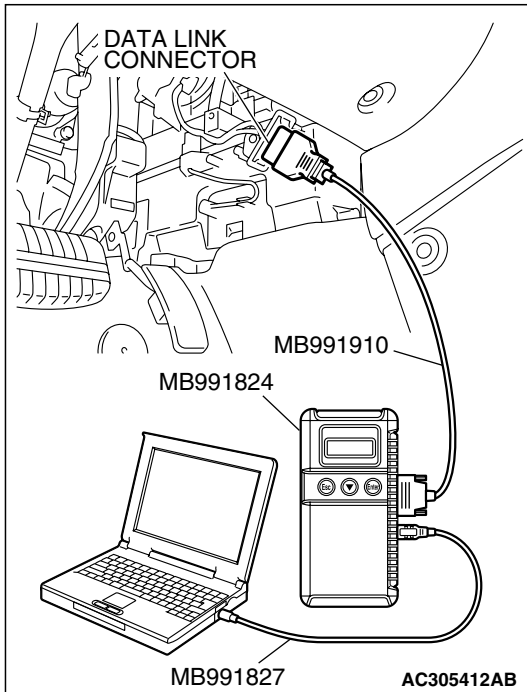


STEP 7. Check harness connector B-22 at PCM for damage.

Q: Is the harness connector in good condition?

YES : Go to Step 8.

NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection P.00E-2. Then go to Step 11.


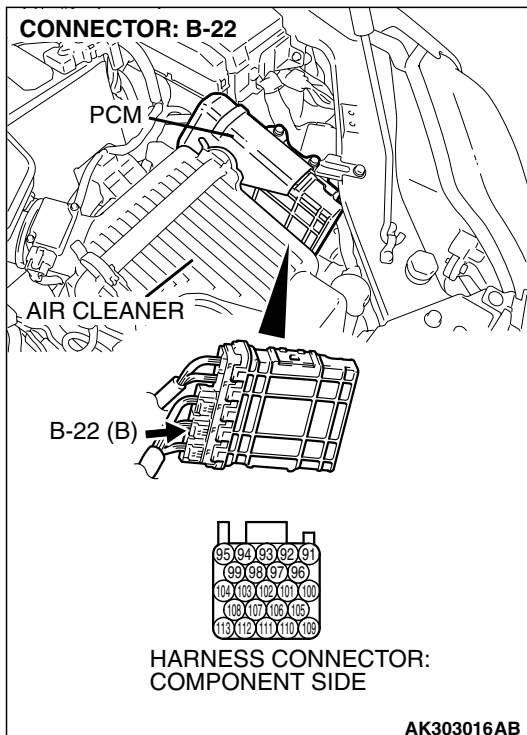


STEP 8. Check for harness damage between throttle position sensor connector B-06 (terminal No. 5) and PCM connector B-22 (terminal No. 94).

Q: Is the harness wire in good condition?

YES : Go to Step 9.

NO : Repair it. Then go to Step 11.

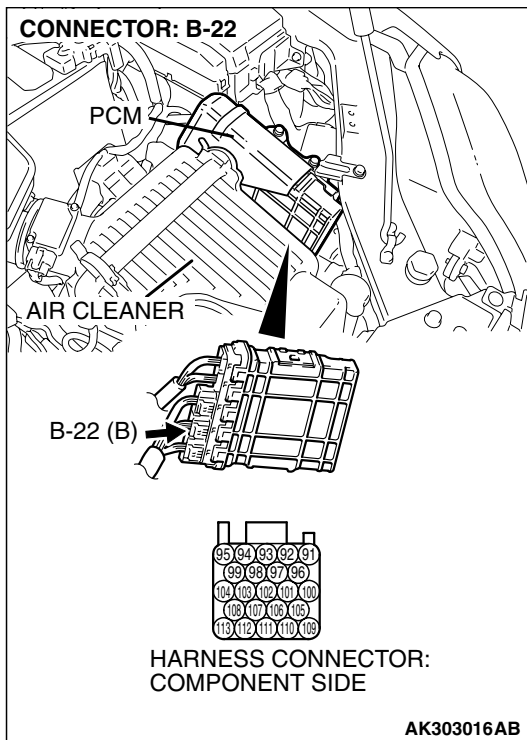
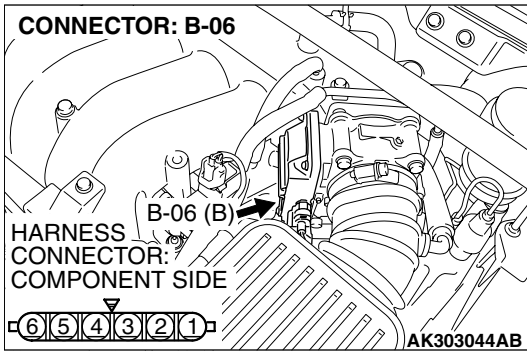


STEP 9. Check for open circuit, short circuit to ground and harness damage between throttle position sensor connector B-06 (terminal No. 4) and PCM connector B-22 (terminal No. 99).

Q: Is the harness wire in good condition?

YES : Go to Step 10.

NO : Repair it. Then go to Step 11.

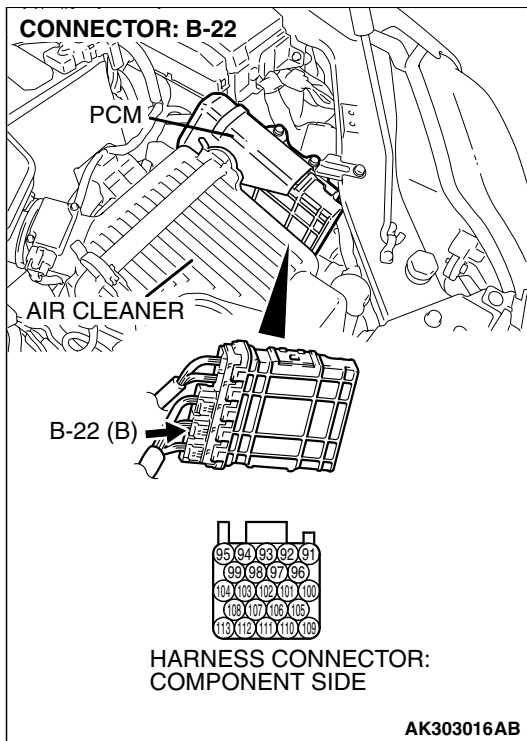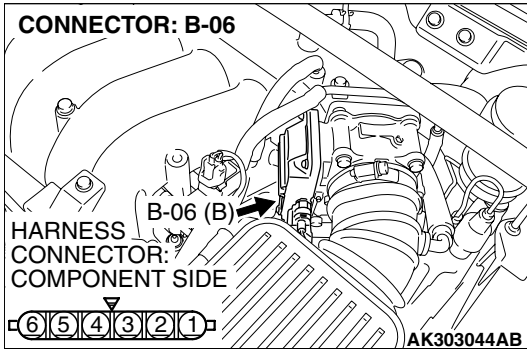


STEP 10. Replace the throttle body assembly.

- (1) Replace the throttle body assembly.
- (2) Turn the ignition switch to the "ON" position.
- (3) After the DTC has been deleted, read the DTC again.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is DTC P0222 set?

YES : Replace the PCM. Then go to Step 11.

NO : The inspection is complete.

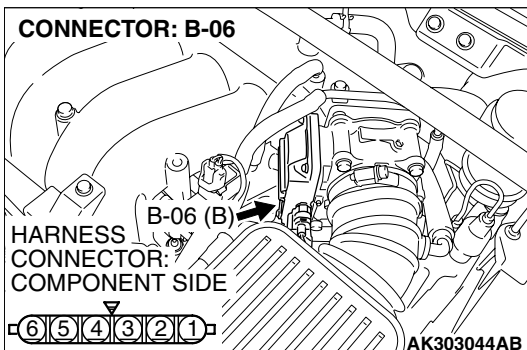

STEP 11. Using scan tool MB991958, read the diagnostic trouble code (DTC).

⚠ CAUTION


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK"(OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958 to the data link connector.
- (2) Turn the ignition switch to the "ON" position.
- (3) After the DTC has been deleted, read the DTC again.
- (4) Turn the ignition switch to the "LOCK"(OFF) position.

Q: Is DTC P0222 set?

YES : Retry the troubleshooting.

NO : The inspection is complete.

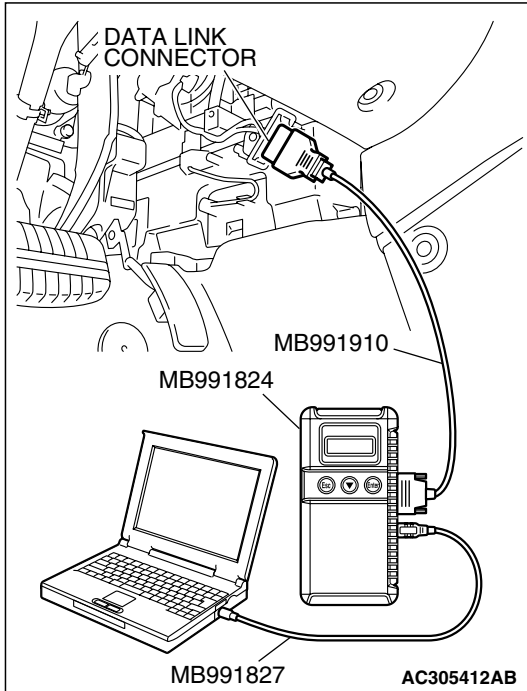


DTC P0223: Throttle Position Sensor (Sub) Circuit High Input



CAUTION

If DTC P0223 has been set, TCL related DTC U1120 is also set. After P0223 has been diagnosed, don't forget to erase DTC U1120.

Throttle Position Sensor (sub) Circuit

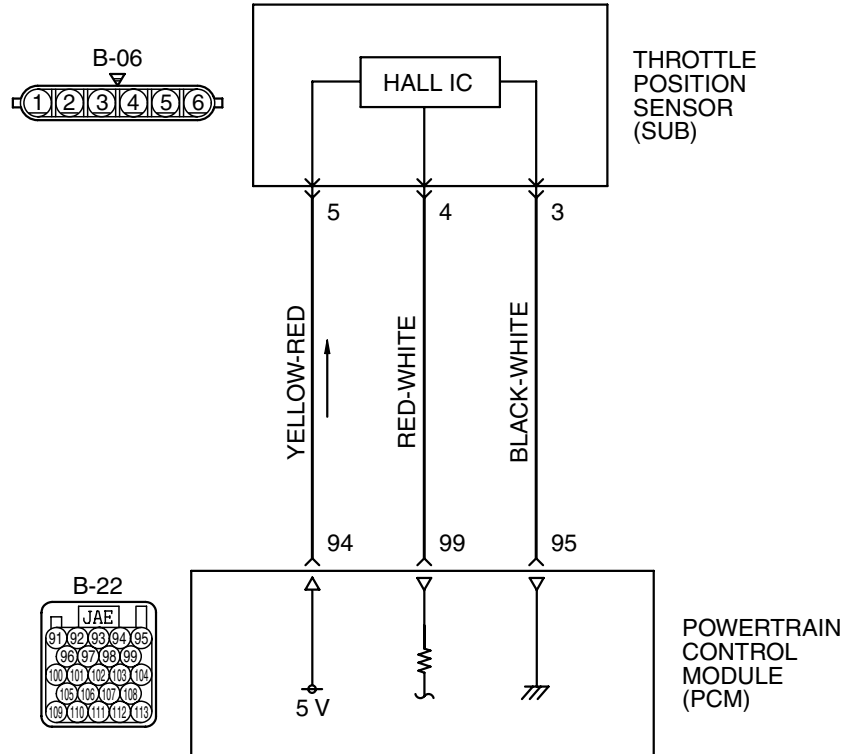

AK400888

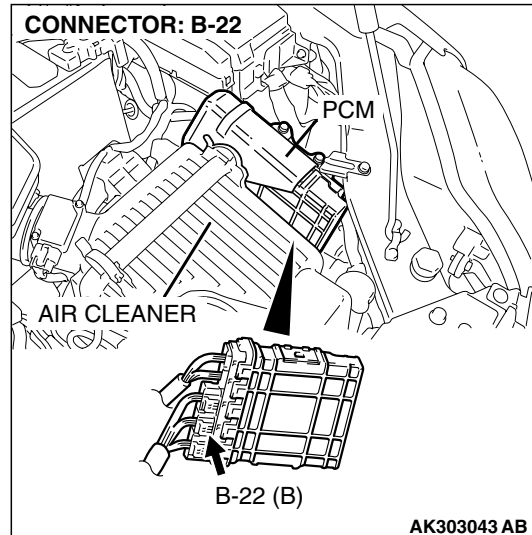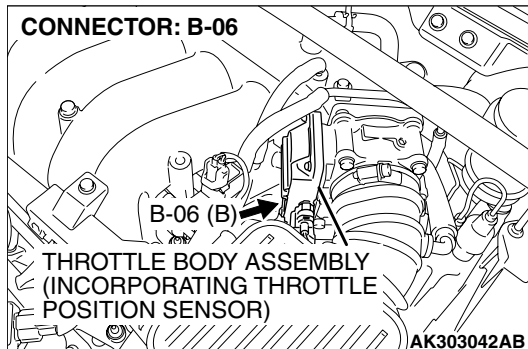

CIRCUIT OPERATION

- A 5-volt power supply is applied on the throttle position sensor (sub) power terminal (terminal No. 5) from the PCM (terminal No. 94).
The ground terminal (terminal No. 3) is grounded with PCM (terminal No. 95).

TECHNICAL DESCRIPTION

- The throttle position sensor (sub) outputs voltage which corresponds to the throttle valve opening angle.
- The PCM checks whether the voltage is within a specified range.

DESCRIPTIONS OF MONITOR METHODS

Throttle position sensor (sub) output voltage is out of specified range.

MONITOR EXECUTION

Continuous

MONITOR EXECUTION CONDITIONS (Other monitor and Sensor)

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- Not applicable

Sensor (The sensor below is determined to be normal)

- Not applicable

DTC SET CONDITIONS

Logic Flow Chart

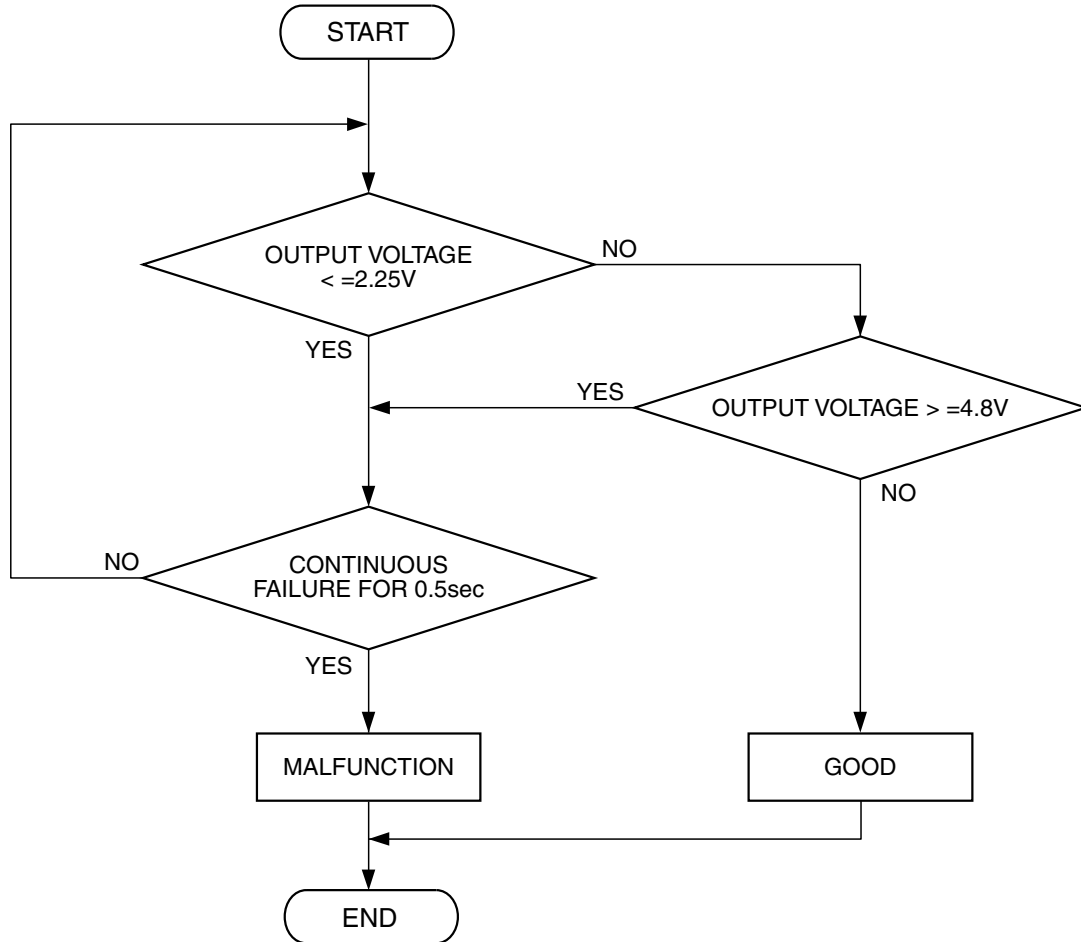

AK302390

Check Conditions

- Ignition switch is "ON" position.

Judgement Criteria

- Throttle position sensor (sub) output voltage should be 4.8 volts or more for 0.5 second.

TROUBLESHOOTING HINTS (The most likely causes for this code to be set are:)

- Throttle position sensor failed.
- Open throttle position sensor (sub) circuit, harness damage, or connector damage.
- PCM failed.

OBD-II DRIVE CYCLE PATTERN

None.

DIAGNOSIS

Required Special Tools:

- MB991958: Scan tool (MUT-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: USB Cable
 - MB991910: Main Harness A
- MB991658: Test Harness

STEP 1. Using scan tool MB991958, check data list item 14: Throttle Position Sensor (sub).

⚠ CAUTION

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK"(OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958 to the data link connector.
- (2) Turn the ignition switch to the "ON" position.
- (3) Detach the intake air hose at the throttle body.
- (4) Disconnect the connector of the throttle position sensor.
- (5) Use test harness special tool (MB991658) to connect only terminals No. 3, No. 4, No. 5, and No. 6.
- (6) Set scan tool MB991958 to the data reading mode for item 14, Throttle Position Sensor (sub).
 - Output voltage should be between 2.2 and 2.8 volts when the throttle valve is fully closed with your finger.
 - Output voltage should be 4.0 volts or more when the throttle valve is fully open with your finger.
- (7) Turn the ignition switch to the "LOCK"(OFF) position.

Q: Is the sensor operating properly?

YES : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points – How to Cope with Intermittent Malfunctions [P.00-14](#).



NO : Go to Step 2.



STEP 2. Check harness connector B-06 at throttle position sensor for damage.

Q: Is the harness connector in good condition?

YES : Go to Step 3.

NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 8.

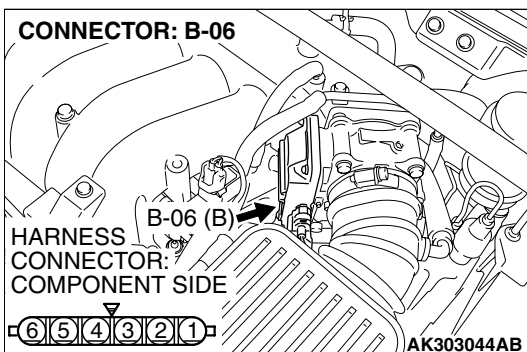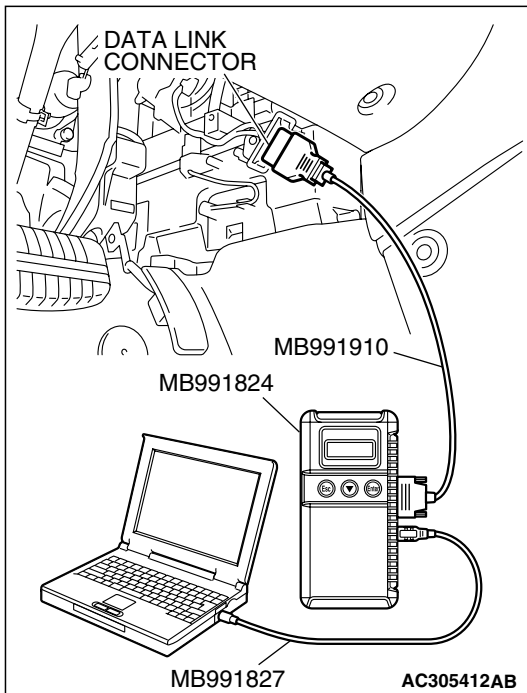

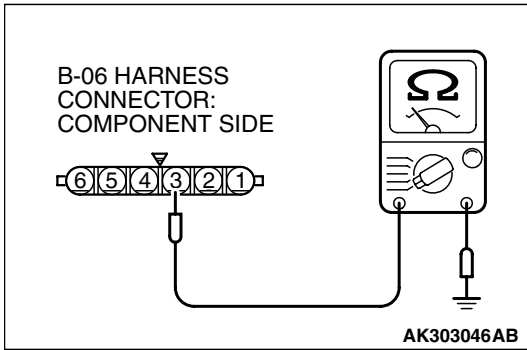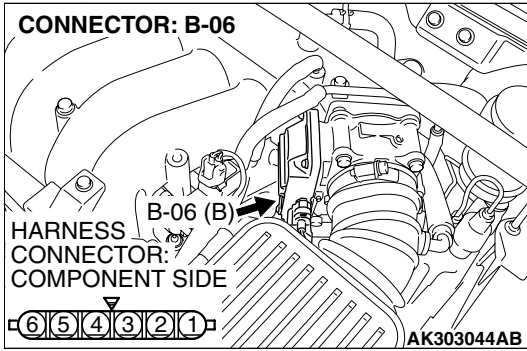

STEP 3. Check the continuity at throttle position sensor harness side connector B-06.

(1) Disconnect the connector B-06 and measure at the harness side.


(2) Measure the continuity between terminal No. 3 and ground

- Should be less than 2 ohms.

Q: Does continuity exist?

YES : Go to Step 7.

NO : Go to Step 4.

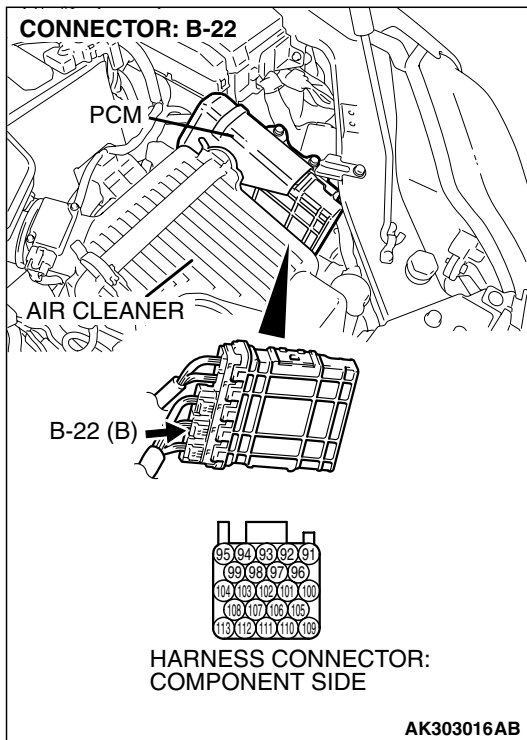

STEP 4. Check harness connector B-22 at PCM for damage.

Q: Is the harness connector in good condition?

YES : Go to Step 5.



NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 8.

STEP 5. Check for open circuit and harness damage between throttle position sensor connector B-06 (terminal No. 3) and PCM connector B-22 (terminal No. 95).

Q: Is the harness wire in good condition?

YES : Go to Step 6.

NO : Repair it. Then go to Step 8.

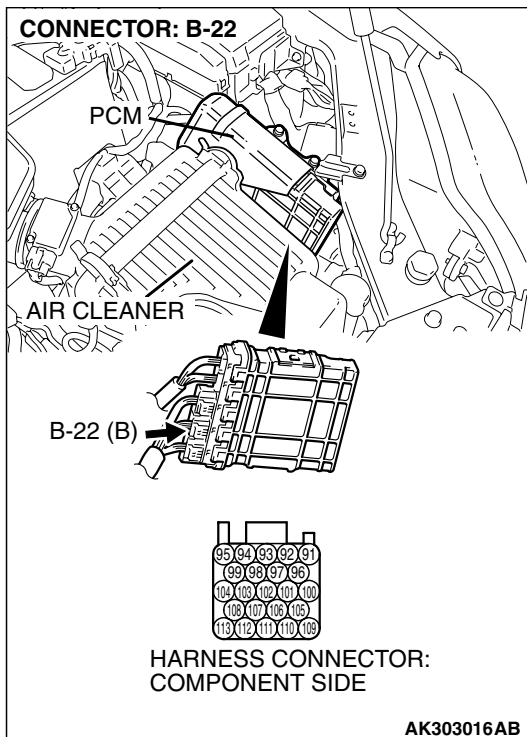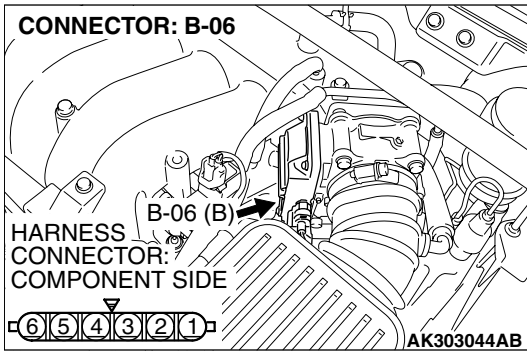

STEP 6. Using scan tool MB991958, check data list item 14: Throttle Position Sensor (sub).

⚠ CAUTION


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK"(OFF) position before connecting or disconnecting scan tool MB991958

- (1) Connect scan tool MB991958 to the data link connector.
- (2) Turn the ignition switch to the "ON" position.
- (3) Detach the intake air hose at the throttle body.
- (4) Disconnect the connector of the throttle position sensor.
- (5) Use test harness special tool (MB991658) to connect only terminals No. 3, No. 4, No. 5, and No. 6.
- (6) Set scan tool MB991958 to the data reading mode for item 14, Throttle Position Sensor (sub).
 - Output voltage should be between 2.2 and 2.8 volts when the throttle valve is fully closed with your finger.
 - Output voltage should be 4.0 volts or more when the throttle valve is fully open with your finger.
- (7) Turn the ignition switch to the "LOCK"(OFF) position.

Q: Is the sensor operating properly?

YES : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points – How to Cope with Intermittent Malfunctions [P.00-14](#).

NO : Replace the PCM. Then go to Step 8.

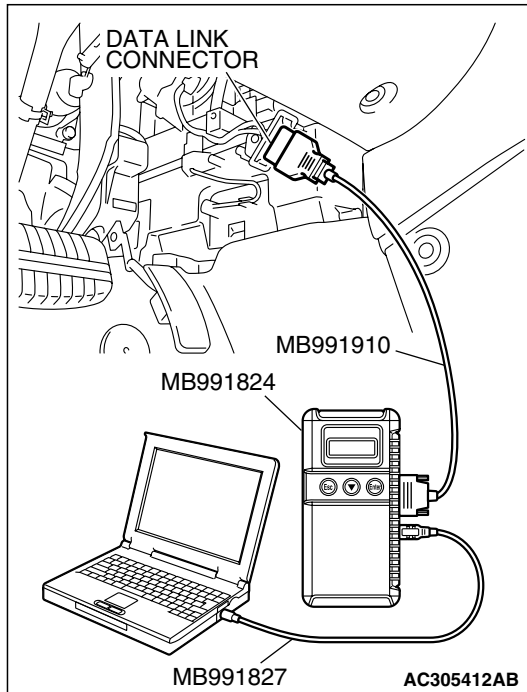


STEP 7. Replace the throttle body assembly.

- (1) Replace the throttle body assembly.
- (2) Turn the ignition switch to the "ON" position.
- (3) After the DTC has been deleted, read the DTC again.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is DTC P0223 set?

YES : Replace the PCM. Then go to Step 8.

NO : The inspection is complete.

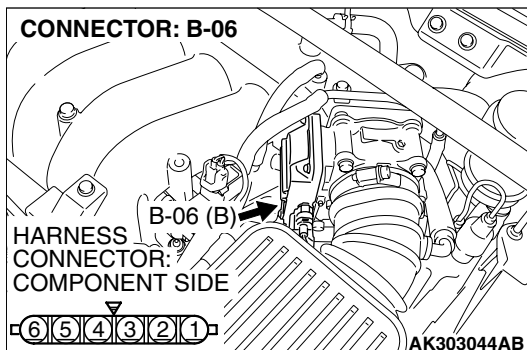

STEP 8. Using scan tool MB991958, read the diagnostic trouble code (DTC).

⚠ CAUTION


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK"(OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958 to the data link connector.
- (2) Turn the ignition switch to the "ON" position.
- (3) After the DTC has been deleted, read the DTC again.
- (4) Turn the ignition switch to the "LOCK"(OFF) position.

Q: Is DTC P0223 set?

YES : Retry the troubleshooting.

NO : The inspection is complete.

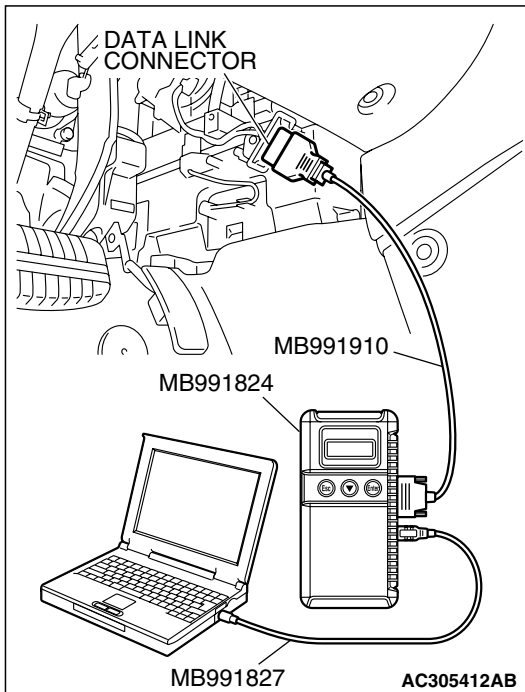

DTC P0300: Random/Multiple Cylinder Misfire Detected

⚠ CAUTION

If DTC P0300 has been set, TCL related DTC U1120 is also set. After P0300 has been diagnosed, don't forget to erase DTC U1120.

TECHNICAL DESCRIPTION

- If a misfire occurs while the engine is running, the engine speed changes for an instant.
- The PCM checks for such changes in engine speed.

DESCRIPTIONS OF MONITOR METHODS

Monitor angular acceleration of crankshaft and detect malfunction when negative variation of the angular acceleration is large.

MONITOR EXECUTION

Continuous

MONITOR EXECUTION CONDITIONS (Other monitor and Sensor)

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- Not applicable

Sensor (The sensor below is determined to be normal)

- Camshaft position sensor
- Mass airflow sensor
- Engine coolant temperature sensor
- Intake air temperature sensor
- Barometric pressure sensor
- Throttle position sensor

DTC SET CONDITIONS

Logic Flow Chart

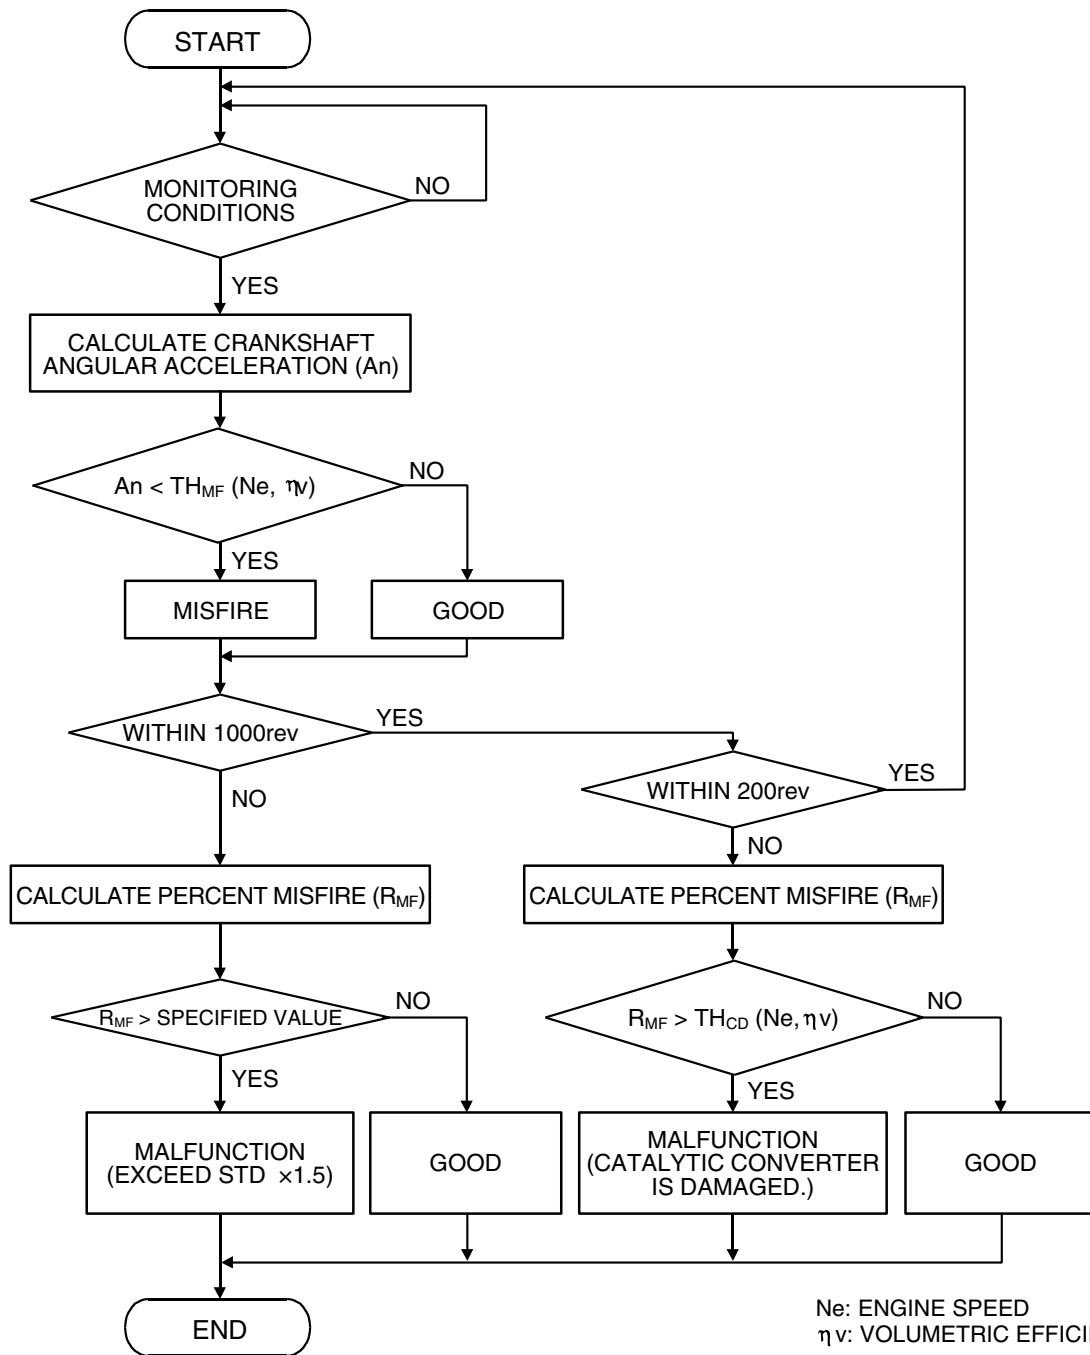

Ne: ENGINE SPEED
η v: VOLUMETRIC EFFICIENCY

AK204053

Check Conditions

- Engine speed is between 440 and 6,200 r/min.
- Engine coolant temperature is higher than -10°C (14°F).
- Barometric pressure is higher than 76 kPa (22.4 in.Hg).
- Volumetric efficiency is between 30 and 60 per cent.
- Adaptive learning is complete for the vane which generates a crankshaft position signal.
- While the engine is running, excluding gear shifting, deceleration, sudden acceleration/deceleration and A/C compressor switching.
- The throttle deviation is -0.06 V/10 ms to $+0.06$ V/10 ms.

Judgement Criteria (change in the angular acceleration of the crankshaft is used for misfire detection).

- Misfire has occurred more frequently than allowed during the last 200 revolutions [when the catalyst temperature is higher than 950°C (1742°F)].

or

- Misfire has occurred in 20 or more of the last 1,000 revolutions (corresponding to 1.5 times the limit of emission standard).

OBD-II DRIVE CYCLE PATTERN

Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.13B-6](#).

TROUBLESHOOTING HINTS (The most likely causes for this code to be set are:)

- Ignition system related part(s) failed.
- Poor crankshaft position sensor.
- Incorrect air/fuel ratio.
- Low compression pressure.
- Skipping of timing belt teeth.
- EGR system and EGR valve failed.
- PCM failed.

DIAGNOSIS

Required Special Tools:

- MB991958: Scan tool (MUT-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: USB Cable
 - MB991910: Main Harness A

STEP 1. Using scan tool MB991958, check data list item 22: Crankshaft Position Sensor.

CAUTION


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.


- (1) Connect scan tool MB991958 to the data link connector.
- (2) Start the engine and run at idle.
- (3) Set scan tool MB991958 to the data reading mode for item 22, Crankshaft Position Sensor.
- (4) Check the waveform of the crankshaft position sensor while keeping the engine speed constant.
 - The pulse width should be constant.

Q: Is the sensor operating properly?

YES : Go to Step 2.

NO : Refer to, DTC P0335 – Crankshaft Position Sensor Circuit Malfunction. [P.13B-604](#)

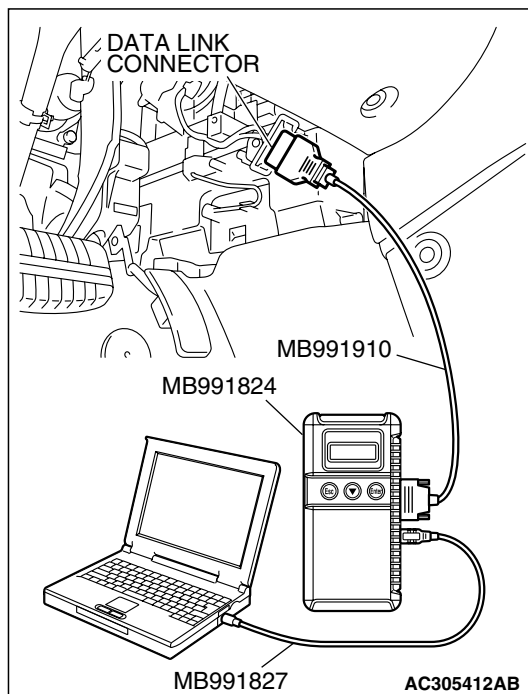

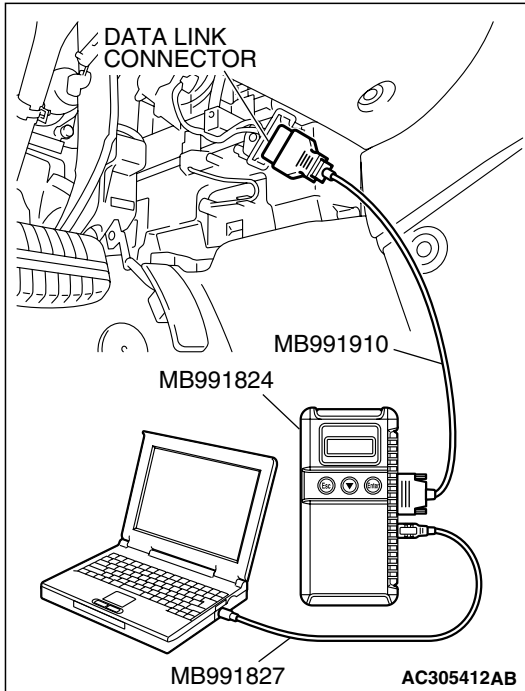

STEP 2. Using scan tool MB991958, check data list item 81 <bank 1> and 83 <bank2>: Long-Term Fuel Trim.

- (1) Start the engine and run at idle.
- (2) Set scan tool MB991958 to the data reading mode for item 81 <bank 1> and 83 <bank2>, Long-Term Fuel Trim.
 - The fuel trim should be between -12.5 and +12.5 percent when the load is 2,500 r/min (during closed loop) after the engine is warmed.

Q: Is the specification normal?

YES : Go to Step 3.


NO : Refer to, DTC P0171 – System too Lean (bank 1)

[P.13B-414](#), DTC P0172 – System too Rich (bank 1)

[P.13B-425](#), DTC P0174 – System too Lean (bank 2)

[P.13B-432](#), DTC P0175 – System too Rich (bank 2)

[P.13B-442](#).

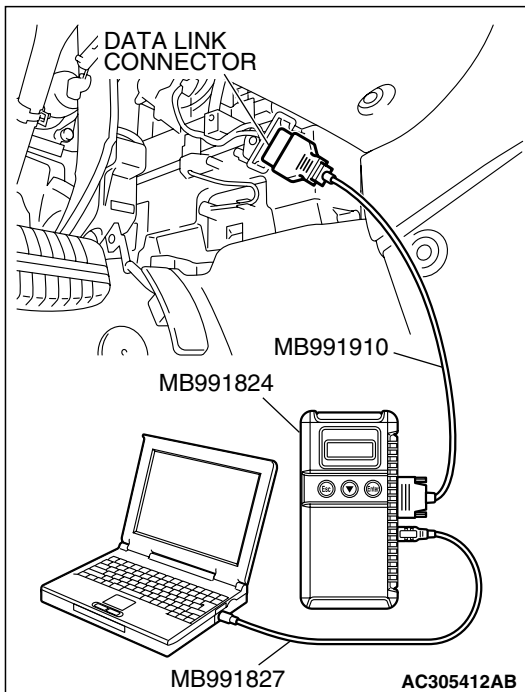

STEP 3. Using scan tool MB991958, check data list item 82 <bank 1> and 84 <bank2>: Short-Term Fuel Trim.

- (1) Start the engine and run at idle.
- (2) Set scan tool MB991958 to the data reading mode for item 82 <bank 1> and 84 <bank2>, Short-Term Fuel Trim.
 - The fuel trim should be between -7.4 and +7.4 percent when the load is 2,500 r/min (during closed loop) after the engine is warmed.

Q: Is the specification normal?

YES : Go to Step 4.


NO : Refer to, DTC P0171 – System too Lean (bank 1)

[P.13B-414](#), DTC P0172 – System too Rich (bank 1)

[P.13B-425](#), DTC P0174 – System too Lean (bank 2)

[P.13B-432](#), DTC P0175 – System too Rich (bank 2)

[P.13B-442](#).

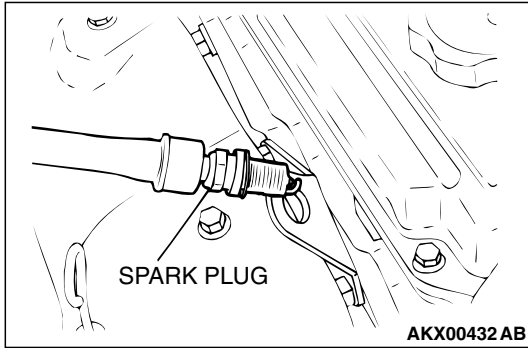


STEP 4. Check the each ignition coil spark.

- (1) Remove the intake manifold.
- (2) Remove the ignition coil.
- (3) Remove the spark plug and connect to the ignition coil.
- (4) Ground the spark plug side electrode securely.
 - When the engine is cranked, the spark plug should spark.

Q: Did it spark?

- YES** : Go to Step 6.
NO : Go to Step 5.

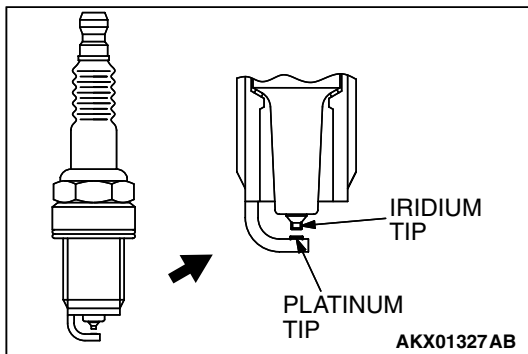

STEP 5. Check the spark plugs.

⚠ CAUTION

Do not attempt to adjust the gap of the iridium plug. Cleaning of the iridium plug may result in damage to the iridium and platinum tips. Therefore, if carbon deposits must be removed, use a plug cleaner and complete cleaning within 20 seconds to protect the electrode. Do not use a wire brush.

- (1) Check the plug gap and replace if the limit is exceeded.
 - Standard value: 0.7 – 0.8 mm (0.028 – 0.031 inch)**
 - Limit: 1.0 mm (0.039 inch)**

Q: Is the plug gap at the standard value?

- YES** : Refer to, INSPECTION PROCEDURE 31 – Ignition Circuit System [P.13B-1125](#).
NO : Replace the faulty spark plug. Then go to Step 8.

STEP 6. Check the following items.

- (1) Check the following items, and repair or replace the defective component.
 - a. Check for skipped timing belt teeth.
 - b. Check compression.
 - c. EGR valve failed.

Q: Are there any abnormalities?

- YES** : Repair or replace it. Then go to Step 8.
NO : Go to Step 7.

STEP 7. Check the trouble symptoms.

- (1) Carry out a test drive with the drive cycle pattern. Refer to Procedure 6 – Other Monitor [P.13B-6](#).
- (2) Check the diagnostic trouble code (DTC).

Q: Is DTC P0300 set?

- YES** : Replace the PCM. Then go to Step 8.
- NO** : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points – How to Cope with Intermittent Malfunctions [P.00-14](#).

STEP 8. Test the OBD-II drive cycle.

- (1) Carry out a test drive with the drive cycle pattern. Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.13B-6](#).
- (2) Check the diagnostic trouble code (DTC).

Q: Is DTC P0300 set?

- YES** : Retry the troubleshooting.
- NO** : The inspection is complete.

DTC P0301: Cylinder 1 Misfire Detected**⚠ CAUTION**

If DTC P0301 has been set, TCL related DTC U1120 is also set. After P0301 has been diagnosed, don't forget to erase DTC U1120.

TECHNICAL DESCRIPTION

- If a misfire occurs while the engine is running, the engine speed changes for an instant.
- The PCM checks for such changes in engine speed.

DESCRIPTIONS OF MONITOR METHODS

Monitor angular acceleration of crankshaft and detect malfunction when negative variation of the angular acceleration is large.

MONITOR EXECUTION

Continuous

**MONITOR EXECUTION CONDITIONS
(Other monitor and Sensor)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- Not applicable

Sensor (The sensor below is determined to be normal)

- Camshaft position sensor
- Mass airflow sensor
- Engine coolant temperature sensor
- Intake air temperature sensor
- Barometric pressure sensor
- Throttle position sensor

DTC SET CONDITIONS

Logic Flow Chart

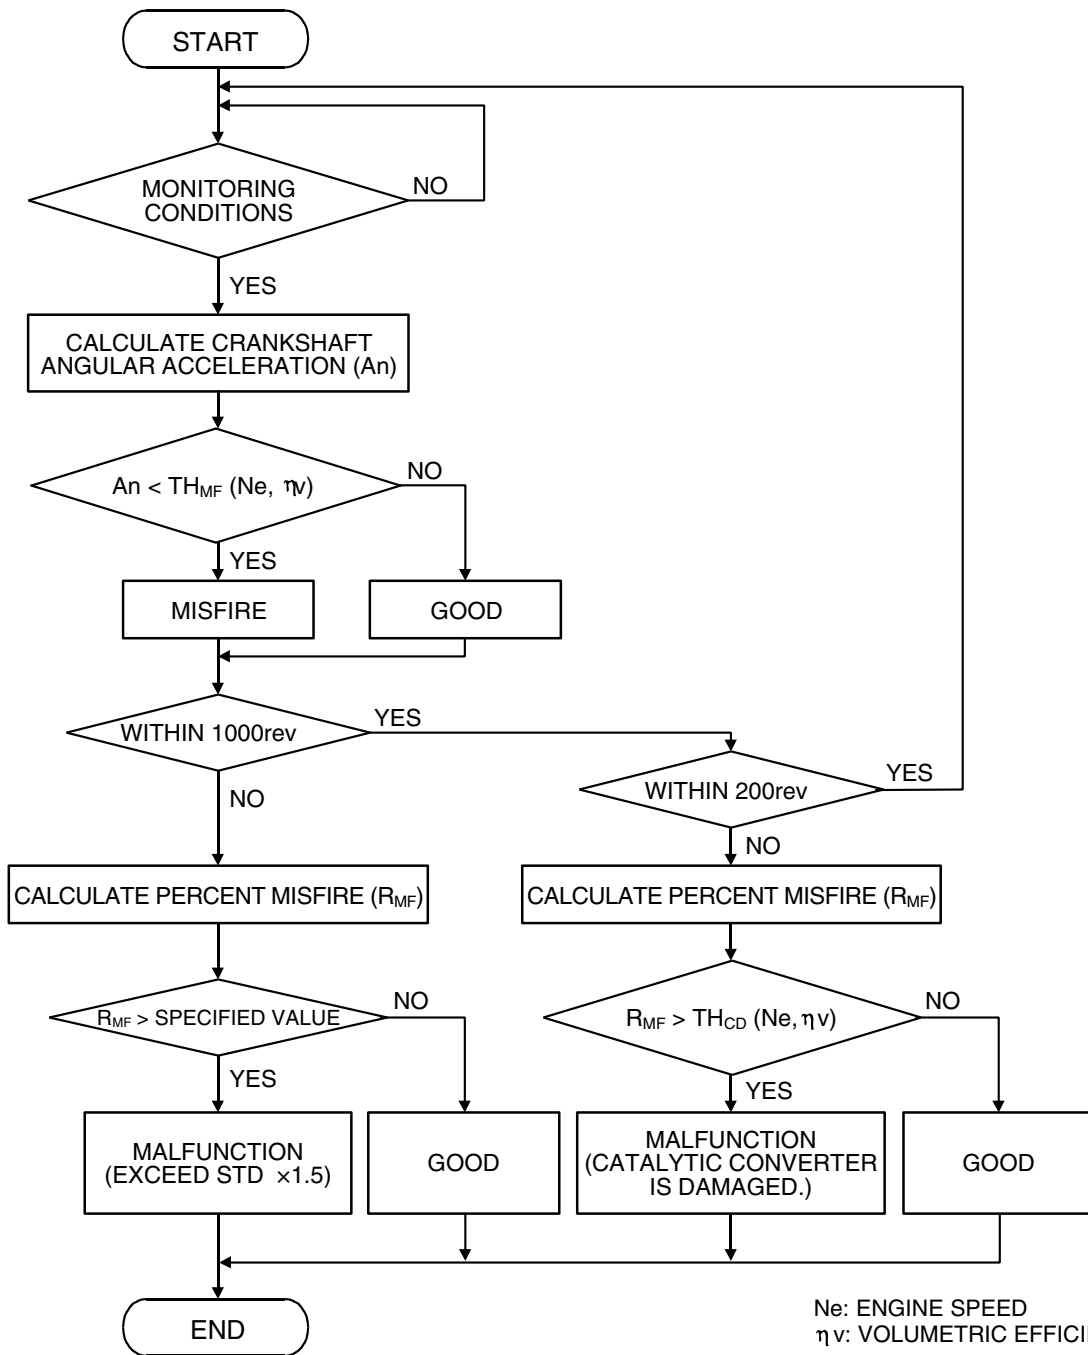

AK204053

Check Conditions

- Engine speed is between 440 and 6,200 r/min.
- Engine coolant temperature is higher than -10°C (14°F).
- Barometric pressure is higher than 76 kPa (22.4 in.Hg).
- Volumetric efficiency is at between 30 and 60 percent.
- Adaptive learning is complete for the vane which generates a crankshaft position signal.
- While the engine is running, excluding gear shifting, deceleration, sudden acceleration/deceleration and A/C compressor switching.
- The throttle deviation is -0.06 V/10 ms to $+0.06$ V/10 ms.

Judgement Criteria (change in the angular acceleration of the crankshaft is used for misfire detection).

- Misfire has occurred more frequently than allowed during the last 200 revolutions [when the catalyst temperature is higher than 950°C ($1,742^{\circ}\text{F}$)].
- or
- Misfire has occurred in 20 or more of the last 1,000 revolutions (corresponding to 1.5 times the limit of emission standard).

OBD-II DRIVE CYCLE PATTERN

Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.13B-6](#).

TROUBLESHOOTING HINTS (The most likely causes for this code to be set are:)

- Ignition system related part(s) failed.
- Low compression pressure.
- PCM failed.


DIAGNOSIS**STEP 1. Check the No.1 cylinder ignition coil spark.**


- (1) Remove the No.1 cylinder intake manifold.
- (2) Remove the No.1 cylinder ignition coil.
- (3) Remove the spark plug and connect to the No.1 cylinder ignition coil.
- (4) Ground the spark plug side electrode securely.
 - When the engine is cranked, the spark plug should spark.

Q: Did it spark?

YES : Go to Step 3.

NO : Go to Step 2.

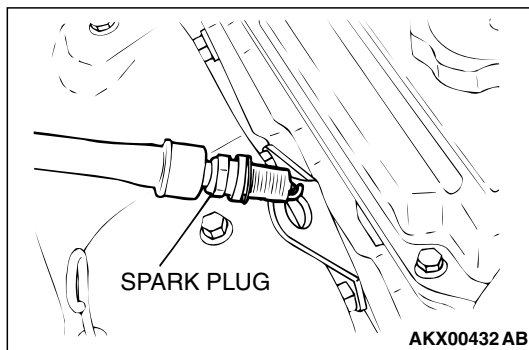

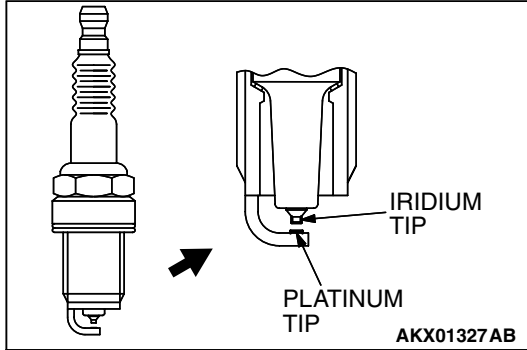

STEP 2. Check the No.1 cylinder spark plugs.

⚠ CAUTION

Do not attempt to adjust the gap of the iridium plug. Cleaning of the iridium plug may result in damage to the iridium and platinum tips. Therefore, if carbon deposits must be removed, use a plug cleaner and complete cleaning within 20 seconds to protect the electrode. Do not use a wire brush.

- (1) Remove the intake manifold.
- (2) Check the plug gap and replace if the limit is exceeded.

Standard value: 0.7 – 0.8 mm (0.028 – 0.031 inch)

Limit: 1.0 mm (0.039 inch)

Q: Is the plug gap at the standard value?

YES : Refer to, INSPECTION PROCEDURE 31 – Ignition Circuit System [P.13B-1125](#).

NO : Replace the No.1 cylinder spark plug. Then go to Step 5.

STEP 3. Check the compression.

Refer to GROUP 11C, On-Vehicle Service – Compression Pressure Check [P.11C-11](#).

Q: Are there any abnormalities?

YES : Repair or replace it. Then go to Step 5.

NO : Go to Step 4.

STEP 4. Check the trouble symptoms.

- (1) Carry out a test drive with the drive cycle pattern. Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.13B-6](#).
- (2) Check the diagnostic trouble code (DTC).

Q: Is DTC P0301 set?

YES : Replace the PCM. Then go to Step 5.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points – How to Copewith Intermittent Malfunctions [P.00-14](#).

STEP 5. Test the OBD-II drive cycle.

- (1) Carry out a test drive with the drive cycle pattern. Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.13B-6](#).
- (2) Check the diagnostic trouble code (DTC).

Q: Is DTC P0301 set?

YES : Retry the troubleshooting.

NO : The inspection is complete.

DTC P0302: Cylinder 2 Misfire Detected

⚠ CAUTION

If DTC P0302 has been set, TCL related DTC U1120 is also set. After P0302 has been diagnosed, don't forget to erase DTC U1120.

TECHNICAL DESCRIPTION

- If a misfire occurs while the engine is running, the engine speed changes for an instant.
- The PCM checks for such changes in engine speed.

DESCRIPTIONS OF MONITOR METHODS

Monitor angular acceleration of crankshaft and detect malfunction when negative variation of the angular acceleration is large.

MONITOR EXECUTION

Continuous

**MONITOR EXECUTION CONDITIONS
(Other monitor and Sensor)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- Not applicable

Sensor (The sensor below is determined to be normal)

- Camshaft position sensor
- Mass airflow sensor
- Engine coolant temperature sensor
- Intake air temperature sensor
- Barometric pressure sensor
- Throttle position sensor

DTC SET CONDITIONS

Logic Flow Chart

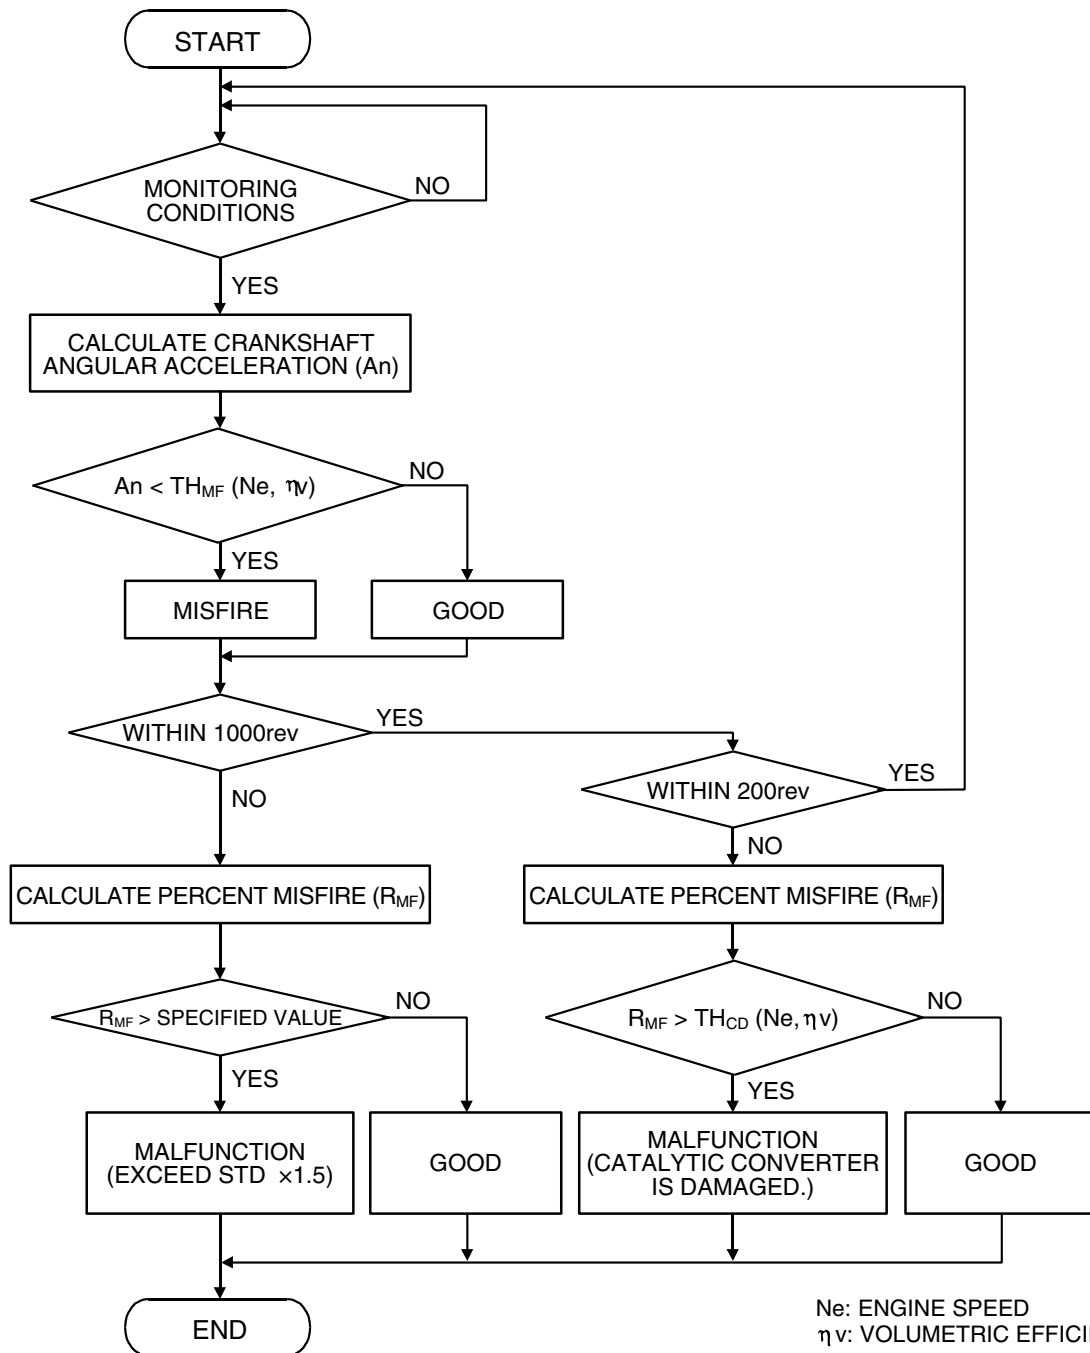

AK204053

Check Conditions

- Engine speed is between 440 and 6,200 r/min.
- Engine coolant temperature is higher than -10°C (14°F).
- Barometric pressure is higher than 76 kPa (22.4 in.Hg).
- Volumetric efficiency is at between 30 and 60 percent.
- Adaptive learning is complete for the vane which generates a crankshaft position signal.
- While the engine is running, excluding gear shifting, deceleration, sudden acceleration/deceleration and A/C compressor switching.
- The throttle deviation is -0.06 V/10 ms to $+0.06$ V/10 ms.

Judgement Criteria (change in the angular acceleration of the crankshaft is used for misfire detection).

- Misfire has occurred more frequently than allowed during the last 200 revolutions [when the catalyst temperature is higher than 950°C ($1,742^{\circ}\text{F}$)].
- or
- Misfire has occurred in 17 or more of the last 1,000 revolutions (corresponding to 1.5 times the limit of emission standard).

OBD-II DRIVE CYCLE PATTERN

Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.13B-6](#).

TROUBLESHOOTING HINTS (The most likely causes for this code to be set are:)

- Ignition system related part(s) failed.
- Low compression pressure.
- PCM failed.


DIAGNOSIS**STEP 1. Check the No.2 cylinder ignition coil spark.**


- (1) Remove the No.2 cylinder ignition coil.
- (2) Remove the No.2 cylinder spark plug and connect to the ignition coil.
- (3) Ground the No.2 cylinder spark plug side electrode securely.
 - When the engine is cranked, the spark plug should spark.

Q: Did it spark?

YES : Go to Step 3.

NO : Go to Step 2.

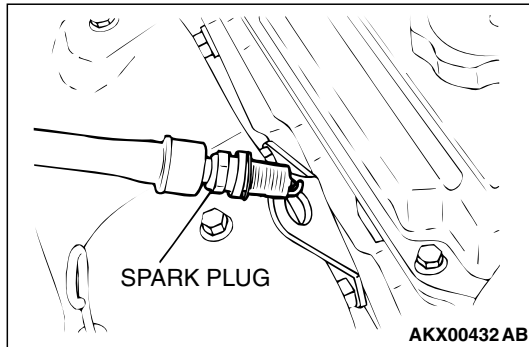

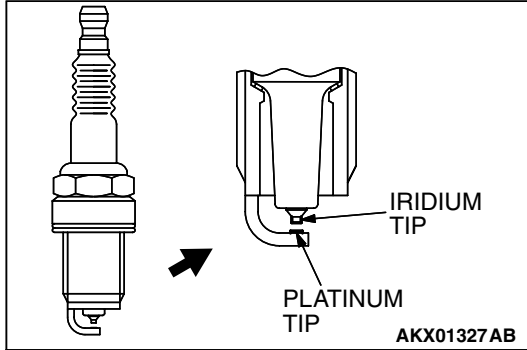

STEP 2. Check the No.2 cylinder spark plugs.

⚠ CAUTION

Do not attempt to adjust the gap of the iridium plug. Cleaning of the iridium plug may result in damage to the iridium and platinum tips. Therefore, if carbon deposits must be removed, use a plug cleaner and complete cleaning within 20 seconds to protect the electrode. Do not use a wire brush.

Check the plug gap and replace if the limit is exceeded.

Standard value: 0.7 – 0.8 mm (0.028 – 0.031 inch)

Limit: 1.0 mm (0.039 inch)

Q: Is the plug gap at the standard value?

YES : Refer to, INSPECTION PROCEDURE 31 – Ignition Circuit System [P.13B-1125](#).

NO : Replace the No.2 cylinder spark plug. Then go to Step 5.

STEP 3. Check the compression.

Refer to GROUP 11C, On-Vehicle Service – Compression Pressure Check [P.11C-11](#).

Q: Are there any abnormalities?

YES : Repair or replace it. Then go to Step 5.

NO : Go to Step 4.

STEP 4. Check the trouble symptoms.

(1) Carry out a test drive with the drive cycle pattern. Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.13B-6](#).

(2) Check the diagnostic trouble code (DTC).

Q: Is DTC P0302 set?

YES : Replace the PCM. Then go to Step 5.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points – How to Cope with Intermittent Malfunctions [P.00-14](#).

STEP 5. Test the OBD-II drive cycle.

(1) Carry out a test drive with the drive cycle pattern. Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.13B-6](#).

(2) Check the diagnostic trouble code (DTC).

Q: Is DTC P0302 set?

YES : Retry the troubleshooting.

NO : The inspection is complete.

DTC P0303: Cylinder 3 Misfire Detected

⚠ CAUTION

If DTC P0303 has been set, TCL related DTC U1120 is also set. After P0303 has been diagnosed, don't forget to erase DTC U1120.

TECHNICAL DESCRIPTION

- If a misfire occurs while the engine is running, the engine speed changes for an instant.
- The PCM checks for such changes in engine speed.

DESCRIPTIONS OF MONITOR METHODS

Monitor angular acceleration of crankshaft and detect malfunction when negative variation of the angular acceleration is large.

MONITOR EXECUTION

Continuous

**MONITOR EXECUTION CONDITIONS
(Other monitor and Sensor)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- Not applicable

Sensor (The sensor below is determined to be normal)

- Camshaft position sensor
- Mass airflow sensor
- Engine coolant temperature sensor
- Intake air temperature sensor
- Barometric pressure sensor
- Throttle position sensor

DTC SET CONDITIONS

Logic Flow Chart

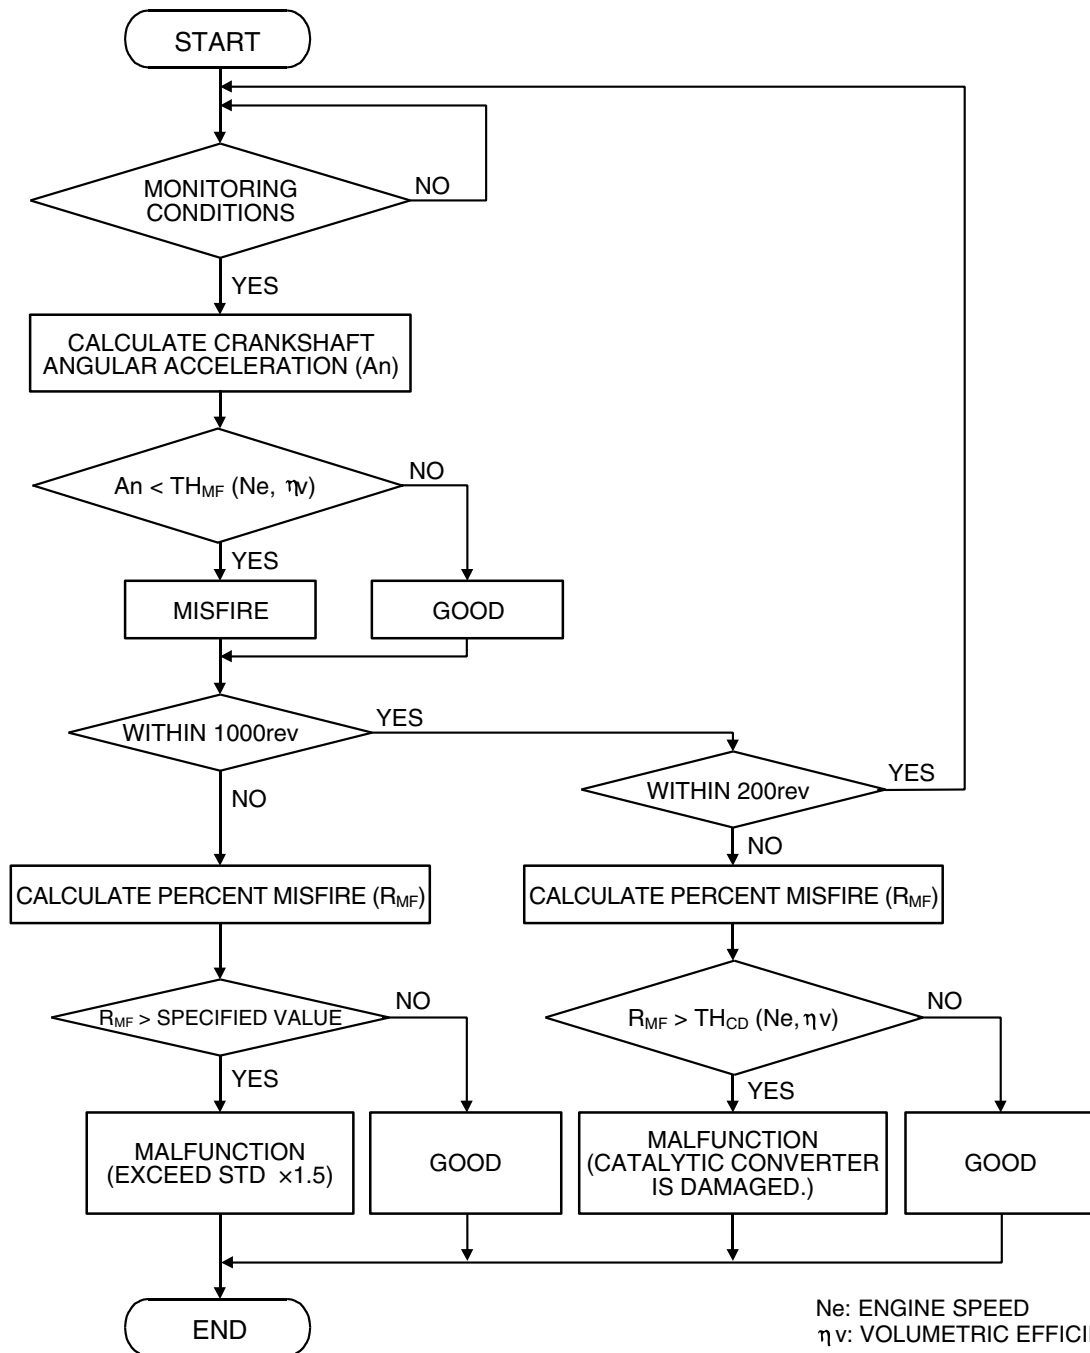

AK204053

Check Conditions

- Engine speed is between 440 and 6,200 r/min.
- Engine coolant temperature is higher than -10°C (14°F).
- Barometric pressure is higher than 76 kPa (22.4 in.Hg).
- Volumetric efficiency is at between 30 and 60 percent.
- Adaptive learning is complete for the vane which generates a crankshaft position signal.
- While the engine is running, excluding gear shifting, deceleration, sudden acceleration/deceleration and A/C compressor switching.
- The throttle deviation is -0.06 V/10 ms to $+0.06$ V/10 ms.

Judgement Criteria (change in the angular acceleration of the crankshaft is used for misfire detection).

- Misfire has occurred more frequently than allowed during the last 200 revolutions [when the catalyst temperature is higher than 950°C ($1,742^{\circ}\text{F}$)].
- or
- Misfire has occurred in 20 or more of the last 1,000 revolutions (corresponding to 1.5 times the limit of emission standard).

OBD-II DRIVE CYCLE PATTERN

Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.13B-6](#).

TROUBLESHOOTING HINTS (The most likely causes for this code to be set are:)

- Ignition system related part(s) failed.
- Low compression pressure.
- PCM failed.


DIAGNOSIS**STEP 1. Check the No.3 cylinder ignition coil spark.**


- (1) Remove the No.3 cylinder intake manifold.
- (2) Remove the No.3 cylinder ignition coil.
- (3) Remove the spark plug and connect to the No.3 cylinder ignition coil.
- (4) Ground the spark plug side electrode securely.
 - When the engine is cranked, the spark plug should spark.

Q: Did it spark?

YES : Go to Step 3.

NO : Go to Step 2.

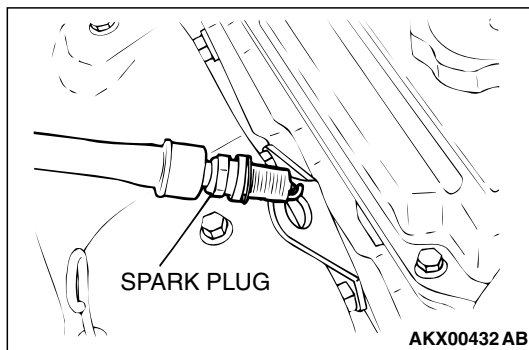

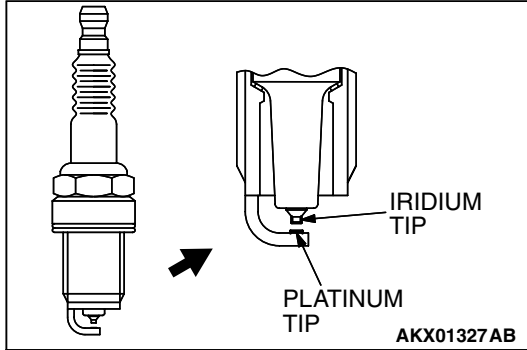

STEP 2. Check the No.3 cylinder spark plugs.

⚠ CAUTION

Do not attempt to adjust the gap of the iridium plug. Cleaning of the iridium plug may result in damage to the iridium and platinum tips. Therefore, if carbon deposits must be removed, use a plug cleaner and complete cleaning within 20 seconds to protect the electrode. Do not use a wire brush.

- (1) Remove the intake manifold.
- (2) Check the plug gap and replace if the limit is exceeded.

Standard value: 0.7 – 0.8 mm (0.028 – 0.031 inch)

Limit: 1.0 mm (0.039 inch)

Q: Is the plug gap at the standard value?

YES : Refer to, INSPECTION PROCEDURE 31 – Ignition Circuit System [P.13B-1125](#).

NO : Replace the No.3 cylinder spark plug. Then go to Step 5.

STEP 3. Check the compression.

Refer to GROUP 11C, On-Vehicle Service – Compression Pressure Check [P.11C-11](#).

Q: Are there any abnormalities?

YES : Repair or replace it. Then go to Step 5.

NO : Go to Step 4.

STEP 4. Check the trouble symptoms.

- (1) Carry out a test drive with the drive cycle pattern. Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.13B-6](#).
- (2) Check the diagnostic trouble code (DTC).

Q: Is DTC P0303 set?

YES : Replace the PCM. Then go to Step 5.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points – How to Cope with Intermittent Malfunctions [P.00-14](#).

STEP 5. Test the OBD-II drive cycle.

- (1) Carry out a test drive with the drive cycle pattern. Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.13B-6](#).
- (2) Check the diagnostic trouble code (DTC).

Q: Is DTC P0303 set?

YES : Retry the troubleshooting.

NO : The inspection is complete.

DTC P0304: Cylinder 4 Misfire Detected

⚠ CAUTION

If DTC P0304 has been set, TCL related DTC U1120 is also set. After P0304 has been diagnosed, don't forget to erase DTC U1120.

TECHNICAL DESCRIPTION

- If a misfire occurs while the engine is running, the engine speed changes for an instant.
- The PCM checks for such changes in engine speed.

DESCRIPTIONS OF MONITOR METHODS

Monitor angular acceleration of crankshaft and detect malfunction when negative variation of the angular acceleration is large.

MONITOR EXECUTION

Continuous

**MONITOR EXECUTION CONDITIONS
(Other monitor and Sensor)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- Not applicable

Sensor (The sensor below is determined to be normal)

- Camshaft position sensor
- Mass airflow sensor
- Engine coolant temperature sensor
- Intake air temperature sensor
- Barometric pressure sensor
- Throttle position sensor

DTC SET CONDITIONS

Logic Flow Chart

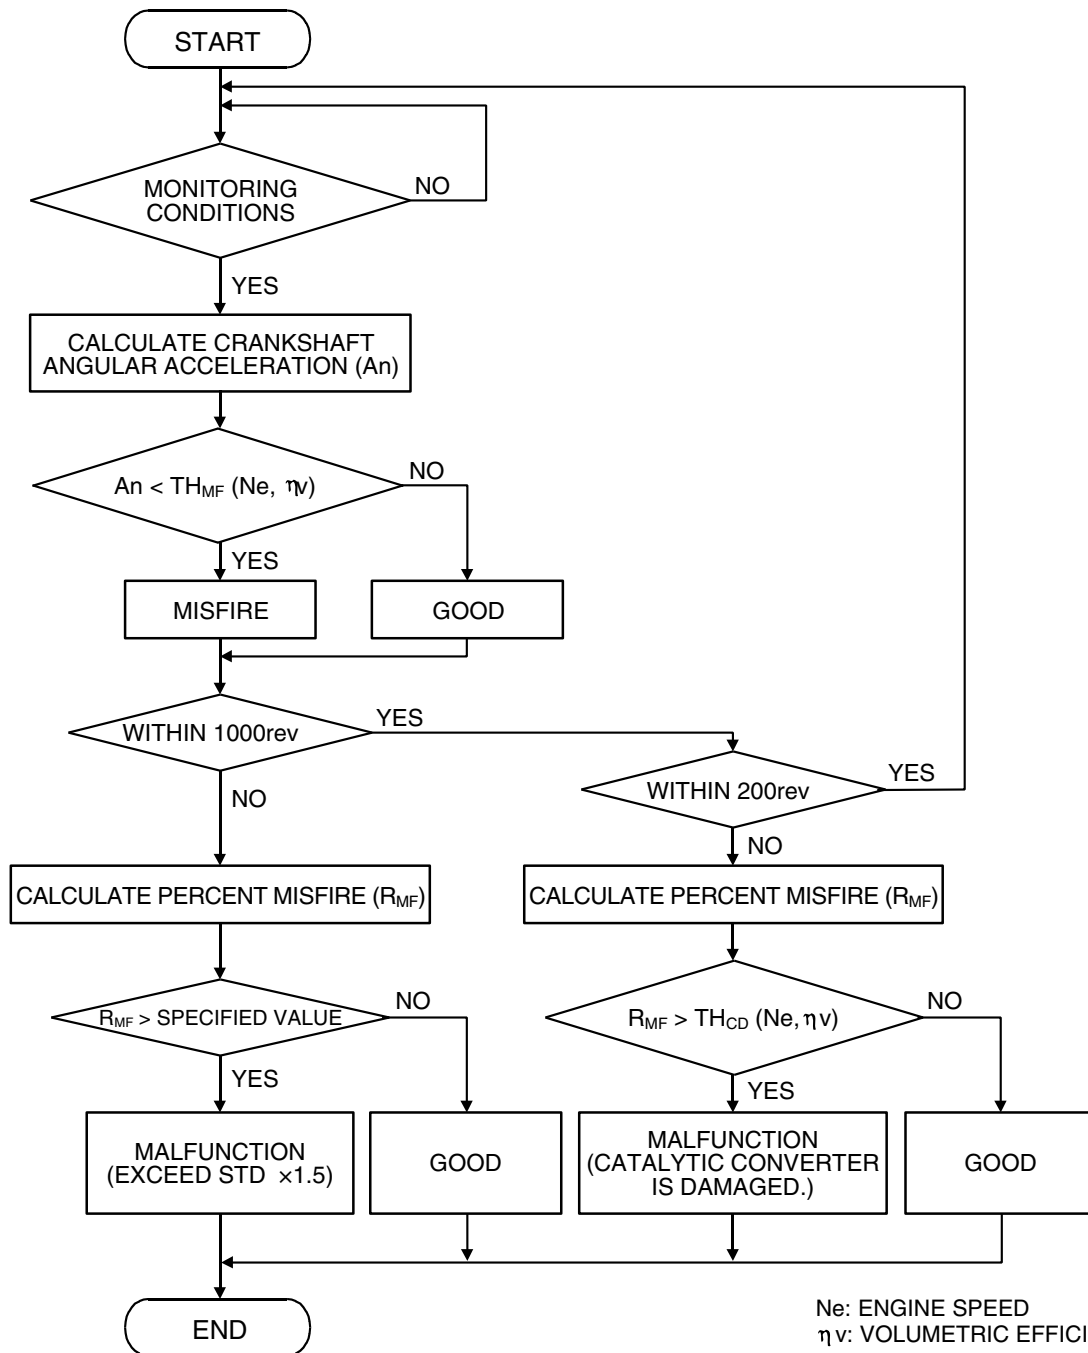

Ne: ENGINE SPEED
 ηv: VOLUMETRIC EFFICIENCY

AK204053

Check Conditions

- Engine speed is between 440 and 6,200 r/min.
- Engine coolant temperature is higher than -10°C (14°F).
- Barometric pressure is higher than 76 kPa (22.4 in.Hg).
- Volumetric efficiency is at between 30 and 60 percent.
- Adaptive learning is complete for the vane which generates a crankshaft position signal.
- While the engine is running, excluding gear shifting, deceleration, sudden acceleration/deceleration and A/C compressor switching.
- The throttle deviation is -0.06 V/10 ms to $+0.06$ V/10 ms.

Judgement Criteria (change in the angular acceleration of the crankshaft is used for misfire detection).

- Misfire has occurred more frequently than allowed during the last 200 revolutions [when the catalyst temperature is higher than 950°C ($1,742^{\circ}\text{F}$)].
- or
- Misfire has occurred in 20 or more of the last 1,000 revolutions (corresponding to 1.5 times the limit of emission standard).

OBD-II DRIVE CYCLE PATTERN

Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.13B-6](#).

TROUBLESHOOTING HINTS (The most likely causes for this code to be set are:)

- Ignition system related part(s) failed.
- Low compression pressure.
- PCM failed.


DIAGNOSIS**STEP 1. Check the No.4 cylinder ignition coil spark.**


- (1) Remove the No.4 cylinder ignition coil.
- (2) Remove the No.4 cylinder spark plug and connect to the ignition coil.
- (3) Ground the No.4 cylinder spark plug side electrode securely.
 - When the engine is cranked, the spark plug should spark.

Q: Did it spark?

YES : Go to Step 3.

NO : Go to Step 2.

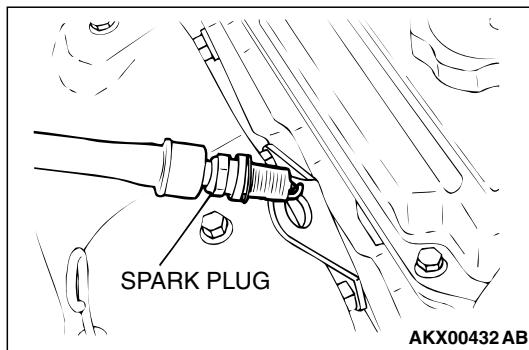

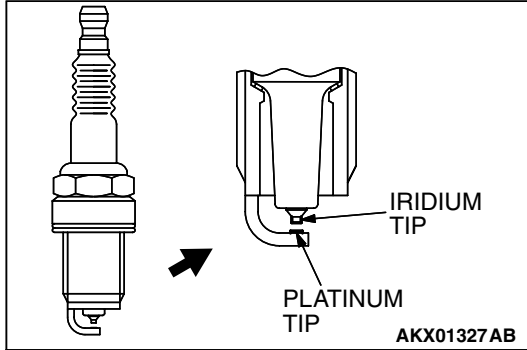

STEP 2. Check the No.4 cylinder spark plugs.

⚠ CAUTION

Do not attempt to adjust the gap of the iridium plug. Cleaning of the iridium plug may result in damage to the iridium and platinum tips. Therefore, if carbon deposits must be removed, use a plug cleaner and complete cleaning within 20 seconds to protect the electrode. Do not use a wire brush.

Check the plug gap and replace if the limit is exceeded.

Standard value: 0.7 – 0.8 mm (0.028 – 0.031 inch)

Limit: 1.0 mm (0.039 inch)

Q: Is the plug gap at the standard value?

YES : Refer to, INSPECTION PROCEDURE 31 – Ignition Circuit System [P.13B-1125](#).

NO : Replace the No.4 cylinder spark plug. Then go to Step 5.

STEP 3. Check the compression.

Refer to GROUP 11C, On-Vehicle Service – Compression Pressure Check [P.11C-11](#).

Q: Are there any abnormalities?

YES : Repair or replace it. Then go to Step 5.

NO : Go to Step 4.

STEP 4. Check the trouble symptoms.

(1) Carry out a test drive with the drive cycle pattern. Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.13B-6](#).

(2) Check the diagnostic trouble code (DTC).

Q: Is DTC P0304 set?

YES : Replace the PCM. Then go to Step 5.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points – How to Cope with Intermittent Malfunctions [P.00-14](#).

STEP 5. Test the OBD-II drive cycle.

(1) Carry out a test drive with the drive cycle pattern. Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.13B-6](#).

(2) Check the diagnostic trouble code (DTC).

Q: Is DTC P0304 set?

YES : Retry the troubleshooting.

NO : The inspection is complete.

DTC P0305: Cylinder 5 Misfire Detected

⚠ CAUTION

If DTC P0305 has been set, TCL related DTC U1120 is also set. After P0305 has been diagnosed, don't forget to erase DTC U1120.

TECHNICAL DESCRIPTION

- If a misfire occurs while the engine is running, the engine speed changes for an instant.
- The PCM checks for such changes in engine speed.

DESCRIPTIONS OF MONITOR METHODS

Monitor angular acceleration of crankshaft and detect malfunction when negative variation of the angular acceleration is large.

MONITOR EXECUTION

Continuous

**MONITOR EXECUTION CONDITIONS
(Other monitor and Sensor)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- Not applicable

Sensor (The sensor below is determined to be normal)

- Camshaft position sensor
- Mass airflow sensor
- Engine coolant temperature sensor
- Intake air temperature sensor
- Barometric pressure sensor
- Throttle position sensor

DTC SET CONDITIONS

Logic Flow Chart

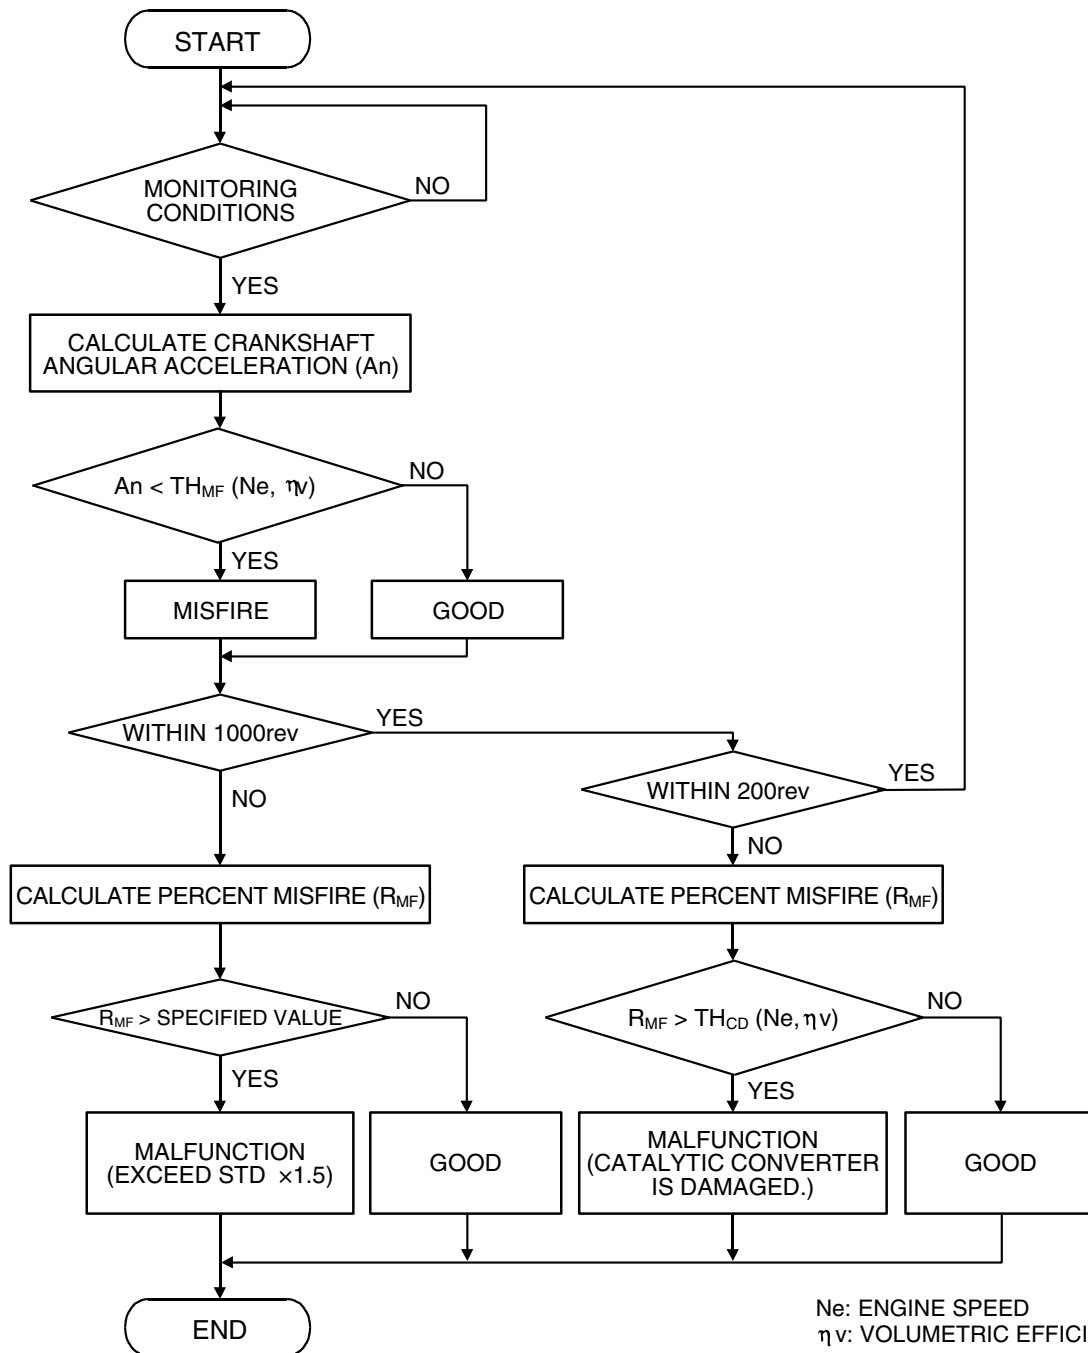

AK204053

Check Conditions

- Engine speed is between 440 and 6,200 r/min.
- Engine coolant temperature is higher than -10°C (14°F).
- Barometric pressure is higher than 76 kPa (22.4 in.Hg).
- Volumetric efficiency is at between 30 and 60 percent.
- Adaptive learning is complete for the vane which generates a crankshaft position signal.
- While the engine is running, excluding gear shifting, deceleration, sudden acceleration/deceleration and A/C compressor switching.
- The throttle deviation is -0.06 V/10 ms to $+0.06$ V/10 ms.

Judgement Criteria (change in the angular acceleration of the crankshaft is used for misfire detection).

- Misfire has occurred more frequently than allowed during the last 200 revolutions [when the catalyst temperature is higher than 950°C ($1,742^{\circ}\text{F}$)].
- or
- Misfire has occurred in 20 or more of the last 1,000 revolutions (corresponding to 1.5 times the limit of emission standard).

OBD-II DRIVE CYCLE PATTERN

Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.13B-6](#).

TROUBLESHOOTING HINTS (The most likely causes for this code to be set are:)

- Ignition system related part(s) failed.
- Low compression pressure.
- PCM failed.


DIAGNOSIS**STEP 1. Check the No.5 cylinder ignition coil spark.**


- (1) Remove the No.5 cylinder intake manifold.
- (2) Remove the No.5 cylinder ignition coil.
- (3) Remove the No.5 cylinder spark plug and connect to the ignition coil.
- (4) Ground the spark plug side electrode securely.
 - When the engine is cranked, the spark plug should spark.

Q: Did it spark?

YES : Go to Step 3.

NO : Go to Step 2.

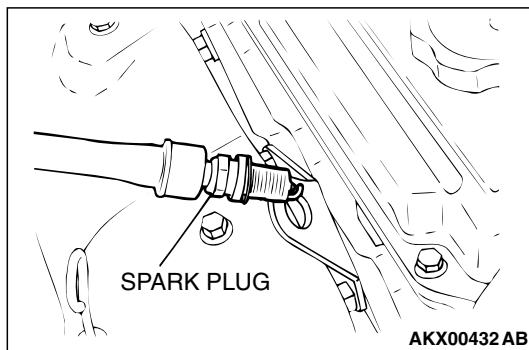

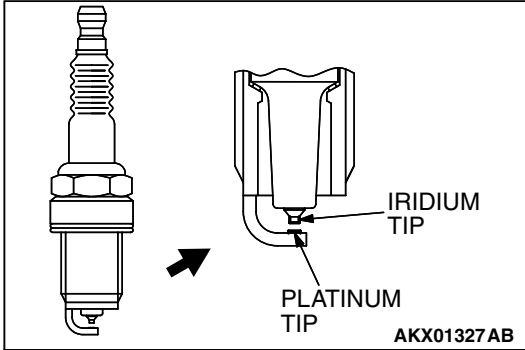

STEP 2. Check the No.5 cylinder spark plugs.

⚠ CAUTION

Do not attempt to adjust the gap of the iridium plug. Cleaning of the iridium plug may result in damage to the iridium and platinum tips. Therefore, if carbon deposits must be removed, use a plug cleaner and complete cleaning within 20 seconds to protect the electrode. Do not use a wire brush.

- (1) Remove the intake manifold.
- (2) Check the plug gap and replace if the limit is exceeded.

Standard value: 0.7 – 0.8 mm (0.028 – 0.031 inch)

Limit: 1.0 mm (0.039 inch)

Q: Is the plug gap at the standard value?

YES : Refer to, INSPECTION PROCEDURE 31 – Ignition Circuit System [P.13B-1125](#).

NO : Replace the No.5 cylinder spark plug. Then go to Step 5.

STEP 3. Check the compression.

Refer to GROUP 11C, On-Vehicle Service – Compression Pressure Check [P.11C-11](#).

Q: Are there any abnormalities?

YES : Repair or replace it. Then go to Step 5.

NO : Go to Step 4.

STEP 4. Check the trouble symptoms.

- (1) Carry out a test drive with the drive cycle pattern. Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.13B-6](#).
- (2) Check the diagnostic trouble code (DTC).

Q: Is DTC P0305 set?

YES : Replace the PCM. Then go to Step 5.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points – How to Copewith Intermittent Malfunctions [P.00-14](#).

STEP 5. Test the OBD-II drive cycle.

- (1) Carry out a test drive with the drive cycle pattern. Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.13B-6](#).
- (2) Check the diagnostic trouble code (DTC).

Q: Is DTC P0305 set?

YES : Retry the troubleshooting.

NO : The inspection is complete.

DTC P0306: Cylinder 6 Misfire Detected

⚠ CAUTION

If DTC P0306 has been set, TCL related DTC U1120 is also set. After P0306 has been diagnosed, don't forget to erase DTC U1120.

TECHNICAL DESCRIPTION

- If a misfire occurs while the engine is running, the engine speed changes for an instant.
- The PCM checks for such changes in engine speed.

DESCRIPTIONS OF MONITOR METHODS

Monitor angular acceleration of crankshaft and detect malfunction when negative variation of the angular acceleration is large.

MONITOR EXECUTION

Continuous

**MONITOR EXECUTION CONDITIONS
(Other monitor and Sensor)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- Not applicable

Sensor (The sensor below is determined to be normal)

- Camshaft position sensor
- Mass airflow sensor
- Engine coolant temperature sensor
- Intake air temperature sensor
- Barometric pressure sensor
- Throttle position sensor

DTC SET CONDITIONS

Logic Flow Chart

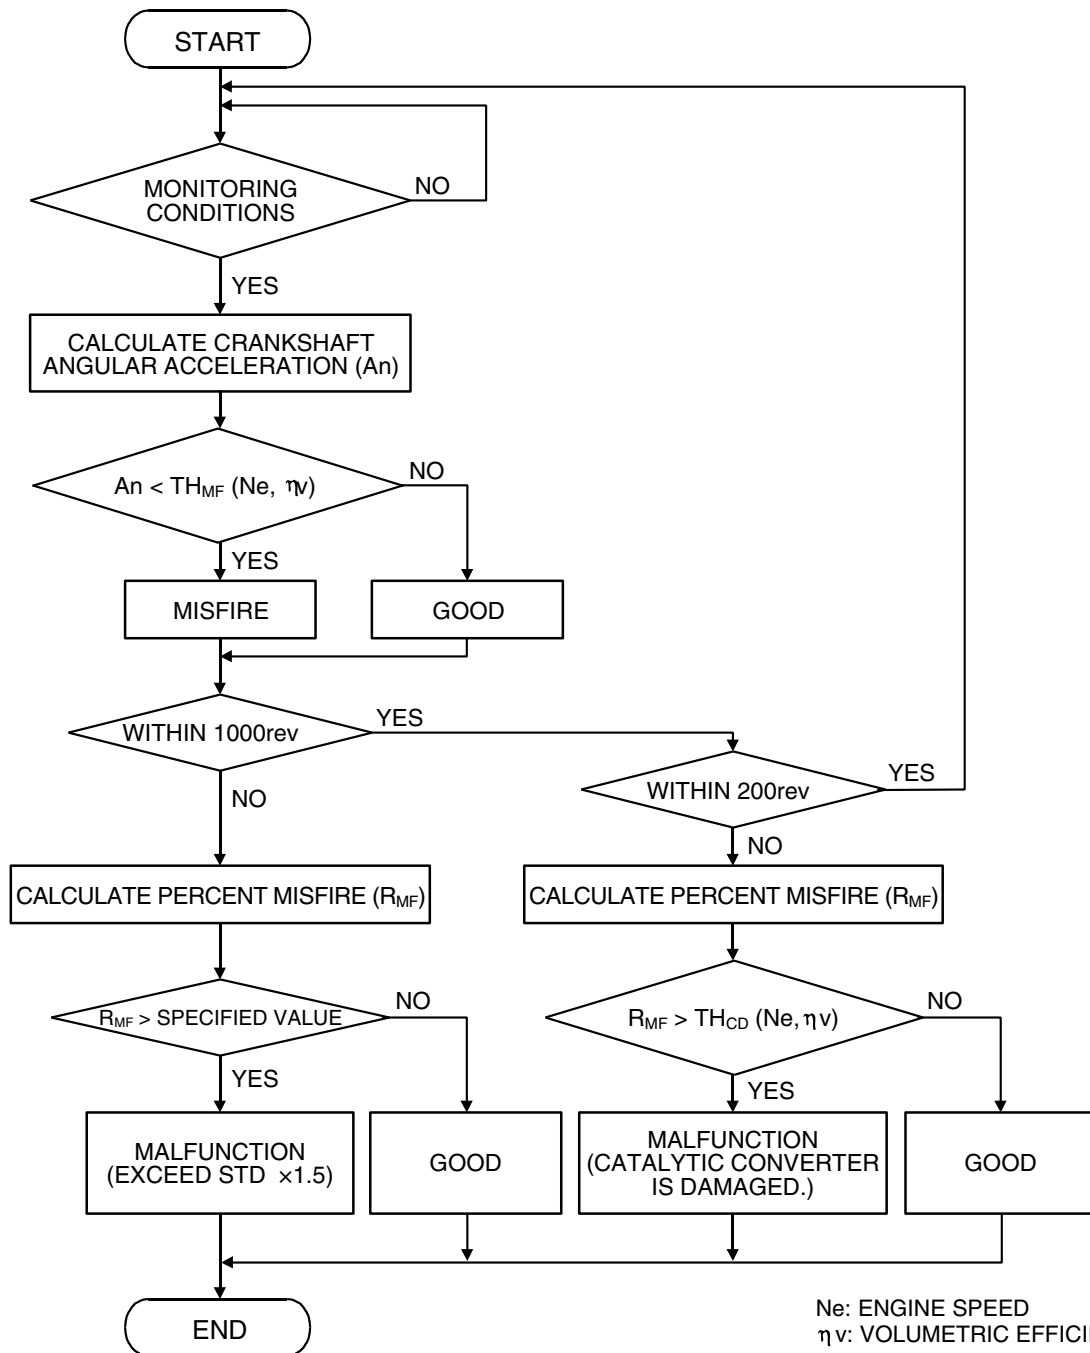

AK204053

Check Conditions

- Engine speed is between 440 and 6,200 r/min.
- Engine coolant temperature is higher than -10°C (14°F).
- Barometric pressure is higher than 76 kPa (22.4 in.Hg).
- Volumetric efficiency is at between 30 and 60 percent.
- Adaptive learning is complete for the vane which generates a crankshaft position signal.
- While the engine is running, excluding gear shifting, deceleration, sudden acceleration/deceleration and A/C compressor switching.
- The throttle deviation is -0.06 V/10 ms to $+0.06$ V/10 ms.

Judgement Criteria (change in the angular acceleration of the crankshaft is used for misfire detection).

- Misfire has occurred more frequently than allowed during the last 200 revolutions [when the catalyst temperature is higher than 950°C ($1,742^{\circ}\text{F}$)].
- or
- Misfire has occurred in 20 or more of the last 1,000 revolutions (corresponding to 1.5 times the limit of emission standard).

OBD-II DRIVE CYCLE PATTERN

Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.13B-6](#).

TROUBLESHOOTING HINTS (The most likely causes for this code to be set are:)

- Ignition system related part(s) failed.
- Low compression pressure.
- PCM failed.


DIAGNOSIS**STEP 1. Check the No.6 cylinder ignition coil spark.**


- (1) Remove the No.6 cylinder ignition coil.
- (2) Remove the No.6 cylinder spark plug and connect to the No.6 cylinder ignition coil.
- (3) Ground the spark plug side electrode securely.
 - When the engine is cranked, the spark plug should spark.

Q: Did it spark?

YES : Go to Step 3.

NO : Go to Step 2.

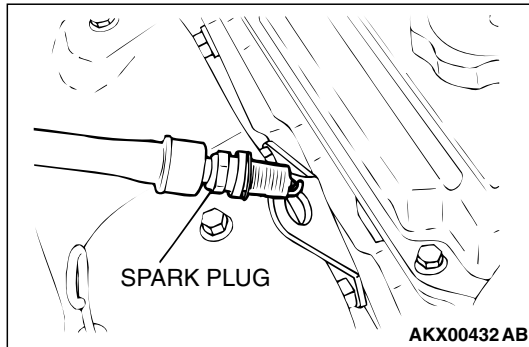

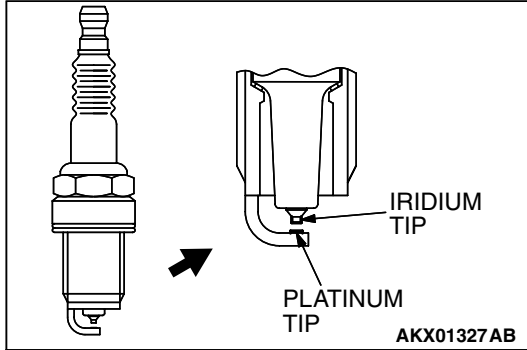

STEP 2. Check the No.6 cylinder spark plugs.

⚠ CAUTION

Do not attempt to adjust the gap of the iridium plug. Cleaning of the iridium plug may result in damage to the iridium and platinum tips. Therefore, if carbon deposits must be removed, use a plug cleaner and complete cleaning within 20 seconds to protect the electrode. Do not use a wire brush.

Check the plug gap and replace if the limit is exceeded.

Standard value: 0.7 – 0.8 mm (0.028 – 0.031 inch)

Limit: 1.0 mm (0.039 inch)

Q: Is the plug gap at the standard value?

YES : Refer to, INSPECTION PROCEDURE 31 – Ignition Circuit System [P.13B-1125](#).

NO : Replace the No.6 cylinder spark plug. Then go to Step 5.

STEP 3. Check the compression.

Refer to GROUP 11C, On-Vehicle Service – Compression Pressure Check [P.11C-11](#).

Q: Are there any abnormalities?

YES : Repair or replace it. Then go to Step 5.

NO : Go to Step 4.

STEP 4. Check the trouble symptoms.

(1) Carry out a test drive with the drive cycle pattern. Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.13B-6](#).

(2) Check the diagnostic trouble code (DTC).

Q: Is DTC P0306 set?

YES : Replace the PCM. Then go to Step 5.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points – How to Cope with Intermittent Malfunctions [P.00-14](#).

STEP 5. Test the OBD-II drive cycle.

(1) Carry out a test drive with the drive cycle pattern. Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.13B-6](#).

(2) Check the diagnostic trouble code (DTC).

Q: Is DTC P0306 set?

YES : Retry the troubleshooting.


NO : The inspection is complete.

DTC P0325: Knock Sensor Circuit Malfunction



CAUTION

If DTC P0325 has been set, TCL related DTC U1120 is also set. After P0325 has been diagnosed, don't forget to erase DTC U1120.

Knock Sensor Circuit

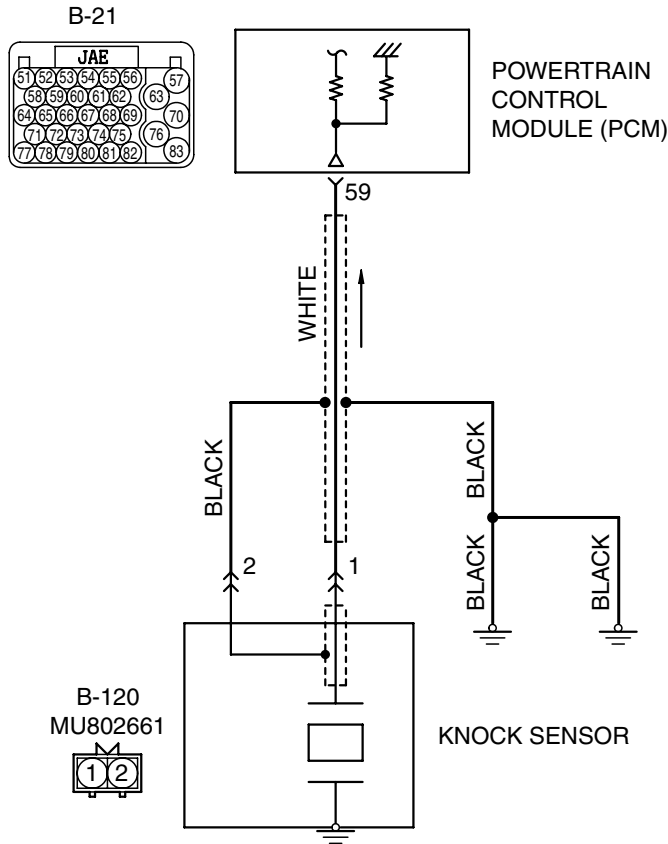

AK400913

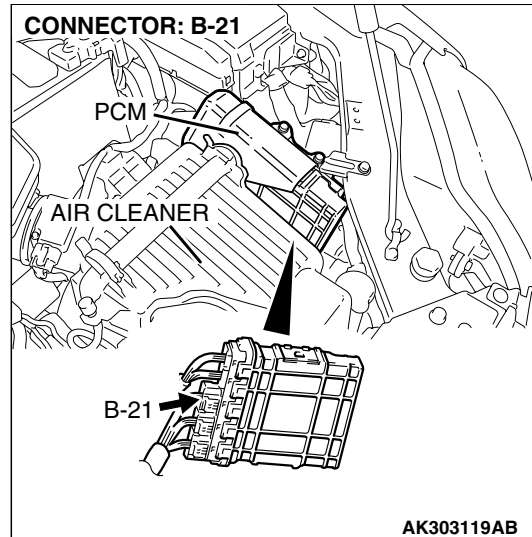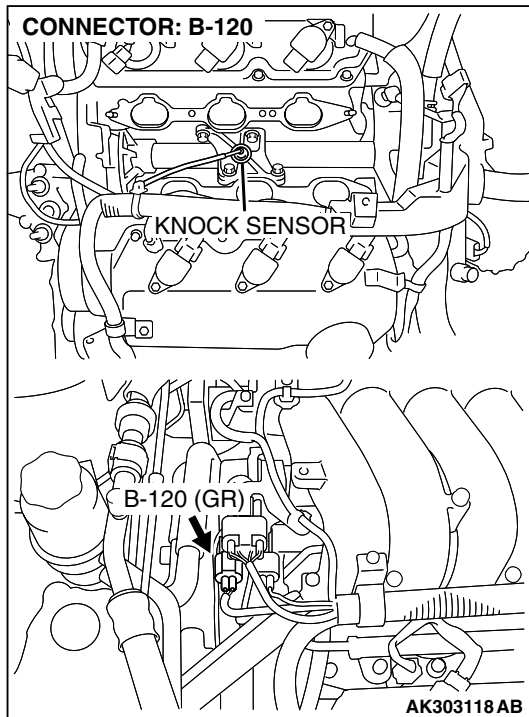

CIRCUIT OPERATION

- The knock sensor sends a signal voltage to the PCM (terminal No. 59).

TECHNICAL DESCRIPTION

- The knock sensor converts the vibration of the cylinder block into a voltage and outputs it. If there is a malfunction of the knock sensor, the voltage output will not change.
- The PCM checks whether the voltage output changes.

DTC SET CONDITIONS

Check Conditions

- Engine speed is higher than 2,500 r/min.

- Volumetric efficiency is 40 percent or higher.

Judgment Criteria

- Knock sensor output voltage (knock sensor peak voltage in each 1/3 turn of the crankshaft) has not changed more than 0.06 volt in the last consecutive 200 periods.

TROUBLESHOOTING HINTS (The most likely causes for this code to be set are:)

- Knock sensor failed.
- Open or shorted knock sensor circuit, or harness damage, or connector damage.
- PCM failed.

DIAGNOSIS**Required Special Tools:**


- MB991958: Scan Tool (MUT-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: USB Cable
 - MB991910: Main Harness A

STEP 1. Check harness connector B-120 at the knock sensor for damage.

Q: Is the harness connector in good condition?



YES : Go to Step 2.

NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 6.

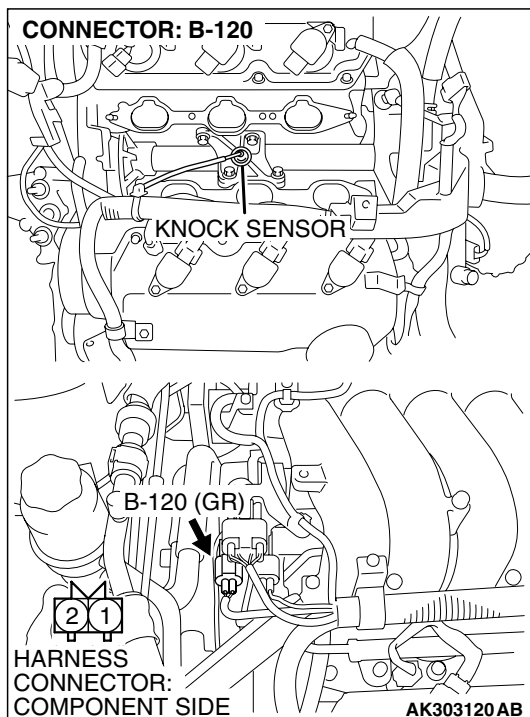

STEP 2. Check the continuity at knock sensor harness side connector B-120.

(1) Disconnect the connector B-120 and measure at the harness side.

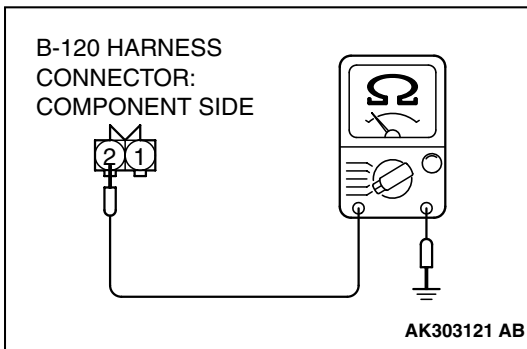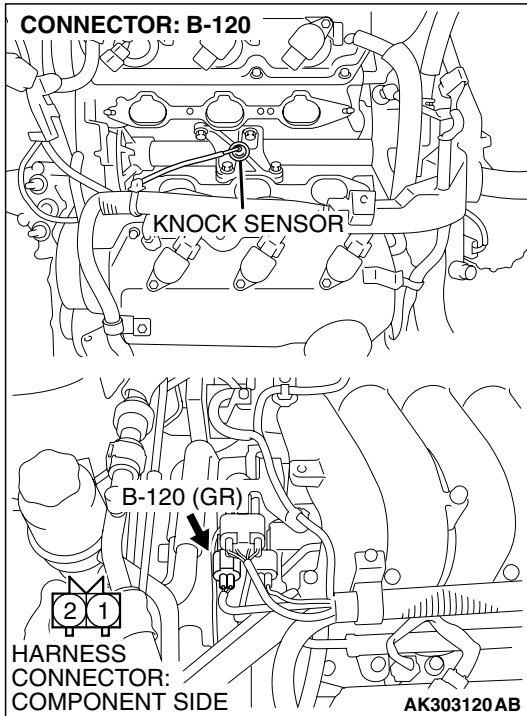


(2) Check for the continuity between terminal No. 2 and ground.

- Should be less than 2 ohms.

Q: Does continuity exist?

YES : Go to Step 3.

NO : Repair an open circuit or harness damage between knock sensor connector B-120 (terminal No. 2) and ground. Then go to Step 6.

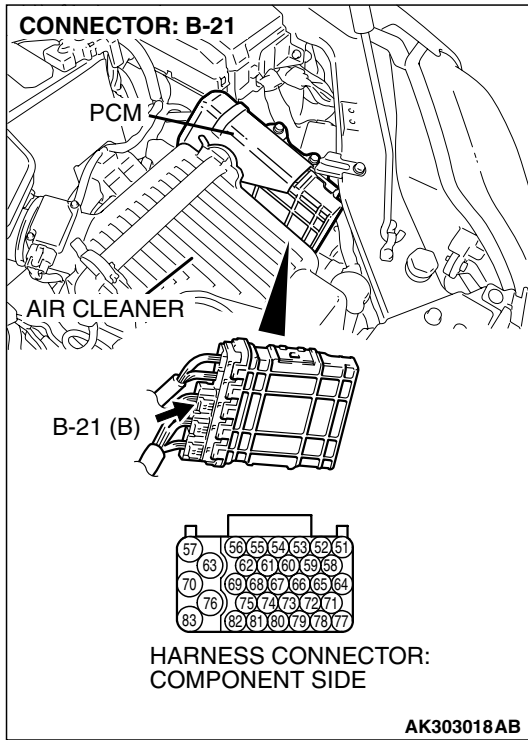

STEP 3. Check harness connector B-21 at PCM for damage.

Q: Is the harness connector in good condition?



YES : Go to Step 4.



NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 6.

STEP 4. Check for open circuit, short circuit to ground and harness damage between knock sensor connector B-120 (terminal No. 1) and PCM connector B-21 (terminal No. 59).
Q: Is the harness wire in good condition?

YES : Go to Step 5.

NO : Repair it. Then go to Step 6.

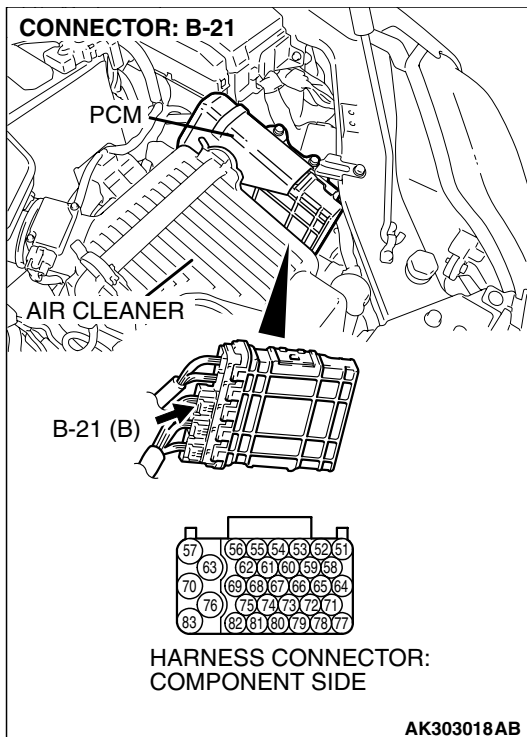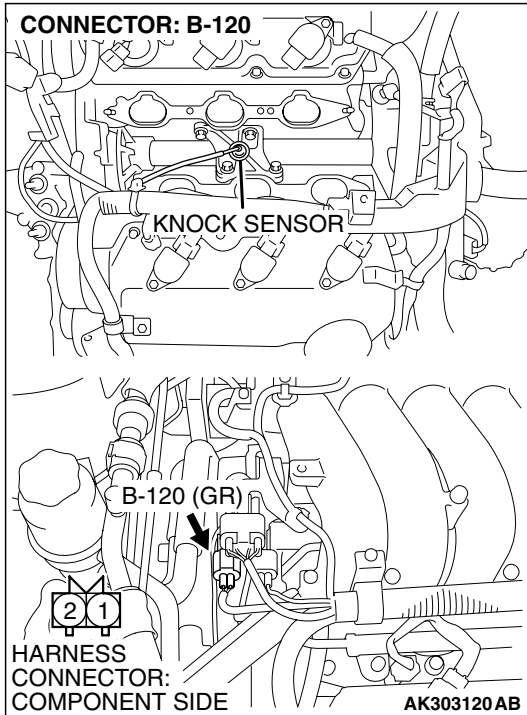

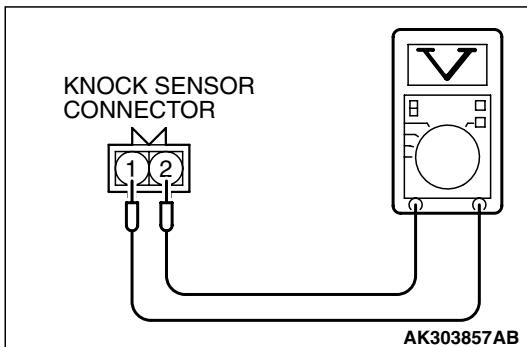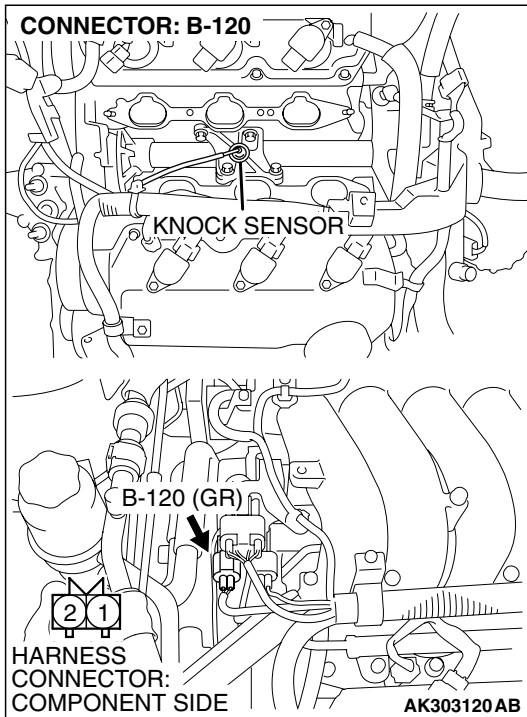**STEP 5. Check the knock sensor.**

- (1) Disconnect the knock sensor connector B-120.
- (2) Start the engine and run at idle.

- (3) Measure the voltage between knock sensor side connector terminal No. 1 (output) and No. 2 (ground).
- (4) Gradually increase the engine speed.
 - The voltage increases with the increase in the engine speed.
- (5) Turn the ignition switch to the "LOCK"(OFF) position.

Q: Is the sensor operating properly?

YES : Replace the PCM. Then go to Step 6.

NO : Replace the knock sensor. Then go to Step 6.

STEP 6. Using scan tool MB991958, read the diagnostic trouble code (DTC).

⚠ CAUTION


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958 to the data link connector.
- (2) Turn the ignition switch to the "ON" position.
- (3) Erase the DTC.
- (4) Test drive under the following conditions:
 - Engine speed: 3000 – 5000r/min
 - Engine load: 40% or more
 - Drive a minimum of 3 seconds after the above conditions have been met.
- (5) After completing the test drive, read the DTC. Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is DTC P0325 set?

YES : Retry the troubleshooting.

NO : The inspection is complete.

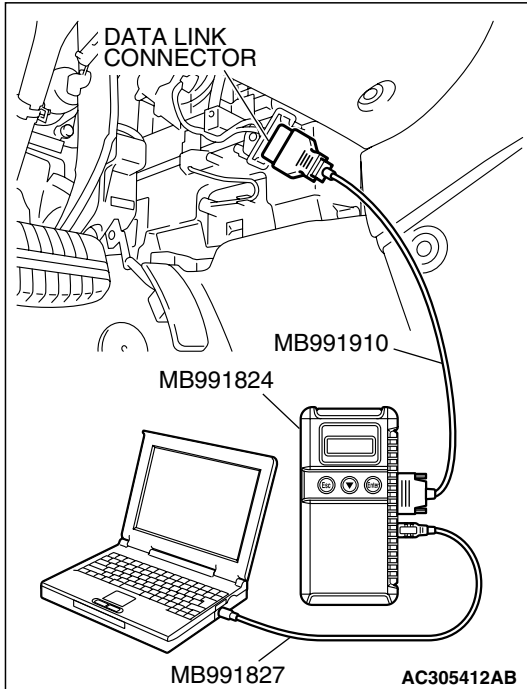


DTC P0335: Crankshaft Position Sensor Circuit




CAUTION

If DTC P0335 has been set, TCL related DTC U1120 is also set. After P0335 has been diagnosed, don't forget to erase DTC U1120.

Crankshaft Position Sensor Circuit

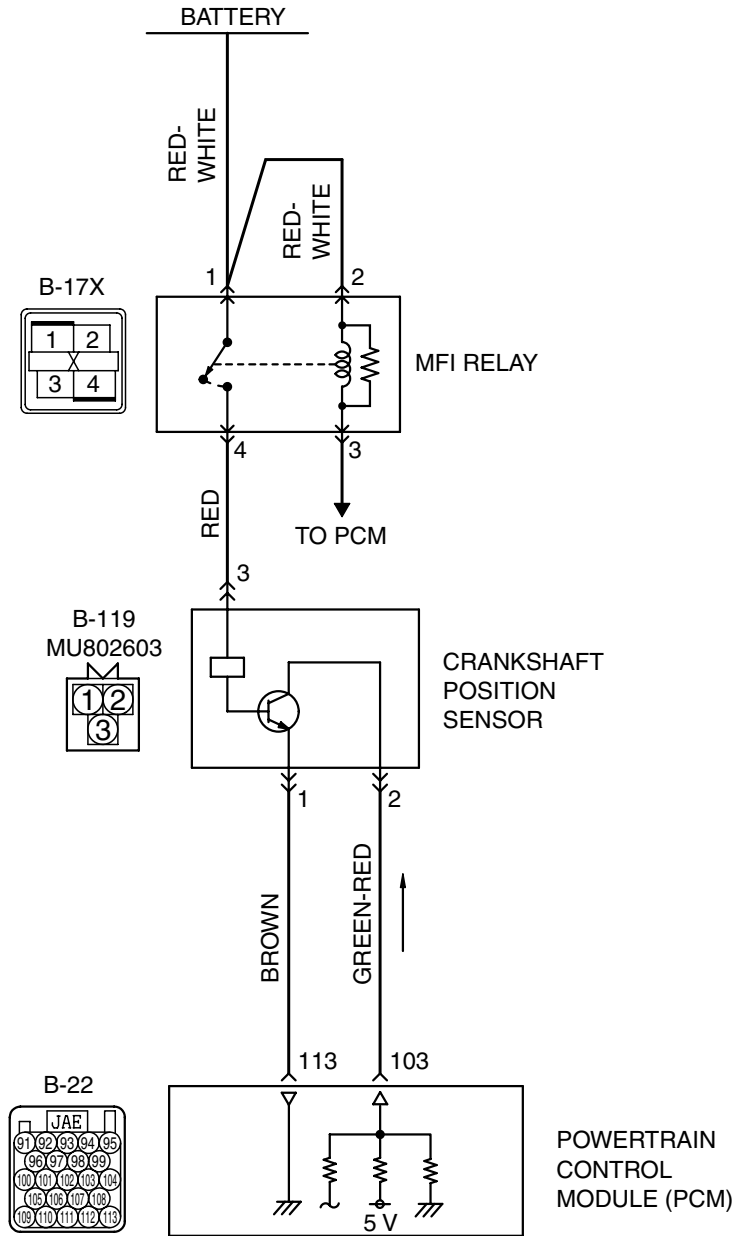

AK400914

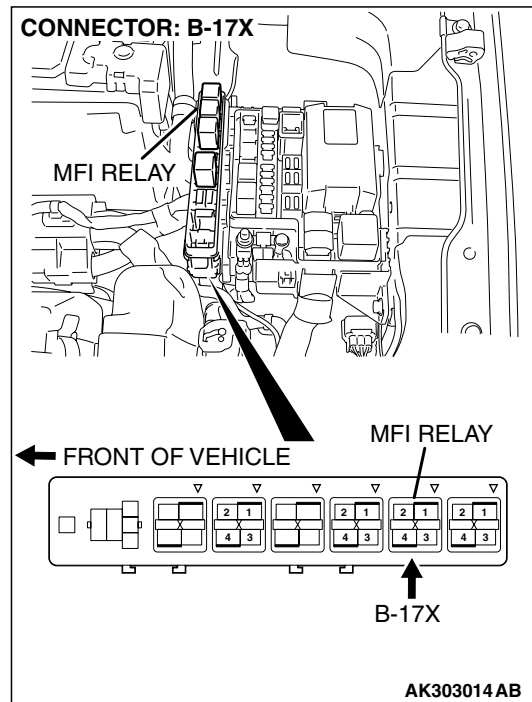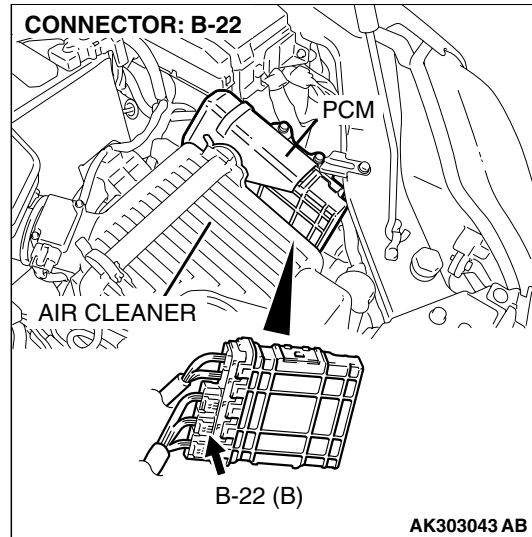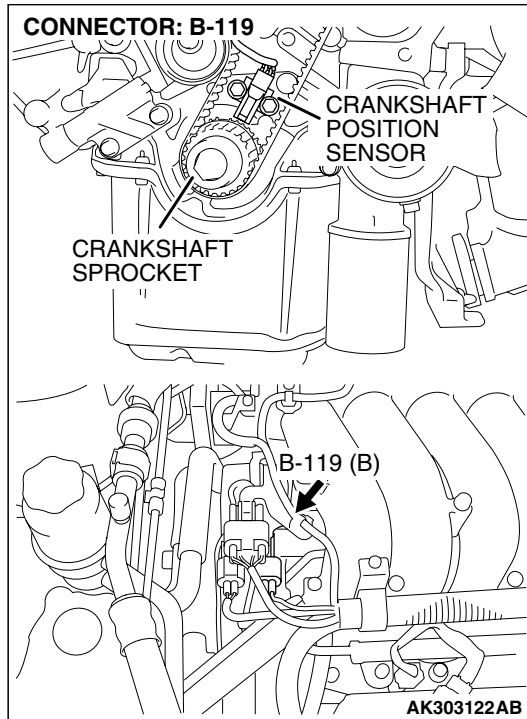

CIRCUIT OPERATION

- The crankshaft position sensor power is supplied from the MFI relay (terminal No. 4).
- Terminal No. 1 of the crankshaft position sensor is grounded with PCM (terminal No. 113).
- A 5-volt voltage is applied on the crankshaft position sensor output terminal (terminal No. 2) from the PCM (terminal No. 103). The crankshaft position sensor generates a pulse signal when the output terminal is opened and grounded.

TECHNICAL DESCRIPTION

- The crankshaft position sensor detects the crank angle (position) of each cylinder, and converts that data to pulse signals, then which are input to the PCM.
- When the engine is running, the crankshaft position sensor outputs a pulse signal.
- The PCM checks whether pulse signal is input while the engine is cranking.

DESCRIPTIONS OF MONITOR METHODS

- Crankshaft position sensor signal does not change.
- Crankshaft position sensor signal is not normal pattern.

MONITOR EXECUTION

Continuous

**MONITOR EXECUTION CONDITIONS
(Other monitor and Sensor)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- Not applicable

Sensor (The sensor below is determined to be normal)

- Not applicable

DTC SET CONDITIONS <Range/Performance problem - Alignment>

Logic Flow Chart

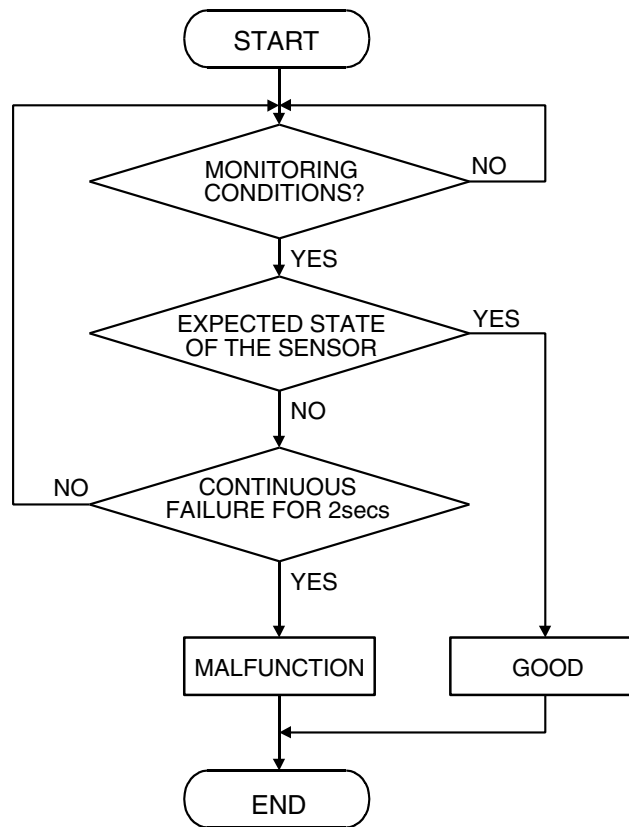


AK302393

Check Conditions, Judgment Criteria

- Normal signal pattern has not been input for cylinder identification from the crankshaft position sensor signal and camshaft position sensor signal for 2 seconds.

DTC SET CONDITIONS <Range/Performance problem - Circuit continuity>

Logic Flow Chart

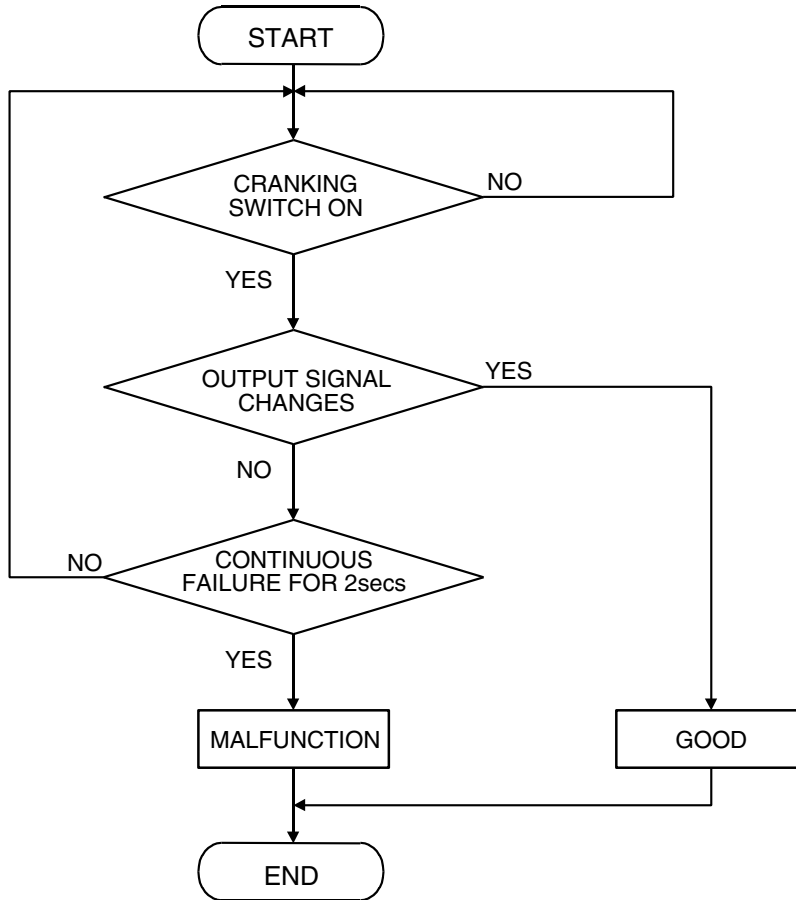

AK302402

Check Conditions

- Engine is being cranked.

Judgment Criteria

- Crankshaft position sensor output voltage has not changed (no pulse signal is input) for 2 seconds.

OBD-II DRIVE CYCLE PATTERN

Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.13B-6](#).

TROUBLESHOOTING HINTS (The most likely causes for this code to be set are:)

- Crankshaft position sensor failed.
- Open or shorted crankshaft position sensor circuit, or harness damage, or connector damage.
- PCM failed.

DIAGNOSIS**Required Special Tools:**

- Scan Tool (MUT-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: USB Cable
 - MB991910: Main Harness A
- MD998478: Test Harness (3pin, triangle)
- MB991923: Power Plant ECU Check Harness

STEP 1. Using scan tool MB991958, check data list item 22: Crankshaft Position Sensor.**⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958 to the data link connector.
- (2) Start the engine and run at idle.
- (3) Set scan tool MB991958 to the data reading mode for item 22, Crankshaft Position Sensor.
 - The tachometer and engine speed indicated on the scan tool should match.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the sensor operating properly?




YES : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points – How to Cope with Intermittent Malfunctions [P.00-14](#).

NO : Go to Step 2.

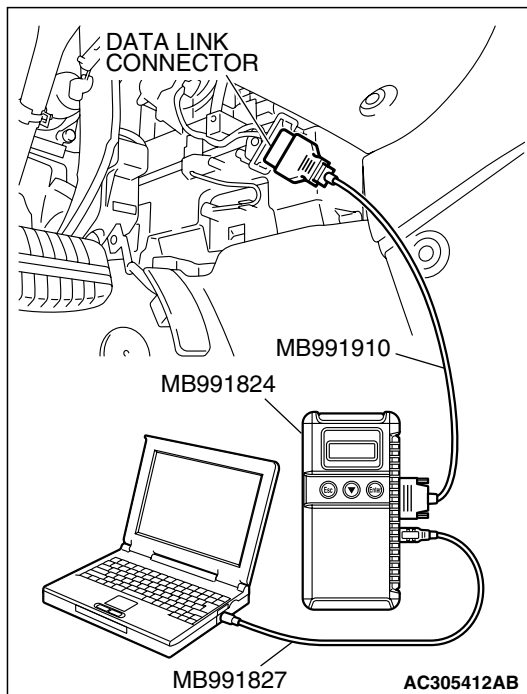

STEP 2. Using the oscilloscope, check the crankshaft position sensor.

- (1) Disconnect the crankshaft position sensor connector B-119, and connect the test harness special tool (MD998478) between the separated connectors.

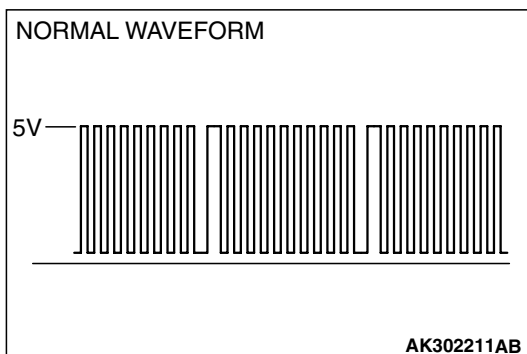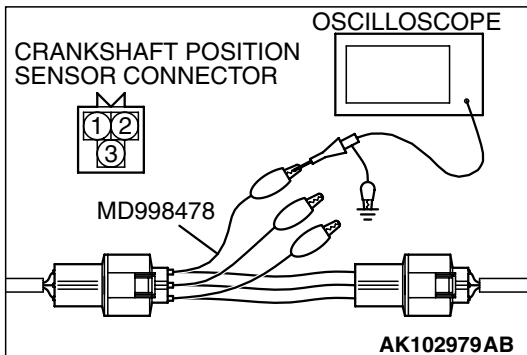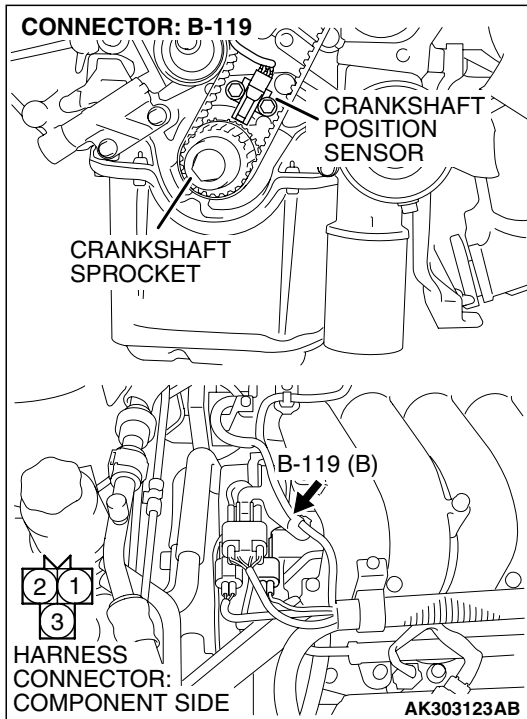

- (2) Connect the oscilloscope probe to crankshaft position sensor connector terminal No. 2 (black clip of special tool).
NOTE: When measuring with the PCM side connector, disconnect the all PCM connectors and connect check harness special tool (MB991923) between the separated connectors. then connector the oscilloscope probe to the check harness connector terminal No. 103.

- (3) Start the engine and run at idle.


- (4) Check the waveform.
• The waveform should show a pattern similar to the illustration.

- (5) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the waveform normal?

YES : Go to Step 3.

NO : Go to Step 5.

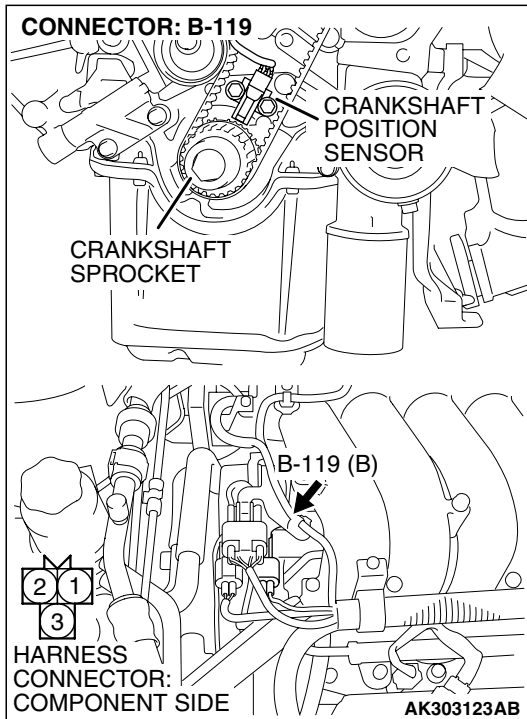

STEP 3. Check harness connector B-119 at the crankshaft position sensor for damage.

Q: Is the harness connector in good condition?

YES : Go to Step 4.

NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 20.

STEP 4. Using scan tool MB991958, check data list item 22: Crankshaft Position Sensor.

⚠ CAUTION


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958 to the data link connector.
- (2) Turn the ignition switch to the "ON" position.
- (3) Set scan tool MB991958 to the data reading mode for item 22, Crankshaft Position Sensor.
 - The tachometer and engine speed indicated on the scan tool should match.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the sensor operating properly?

YES : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points – How to Cope with Intermittent Malfunctions [P.00-14](#).

NO : Replace the PCM. Then go to Step 20.

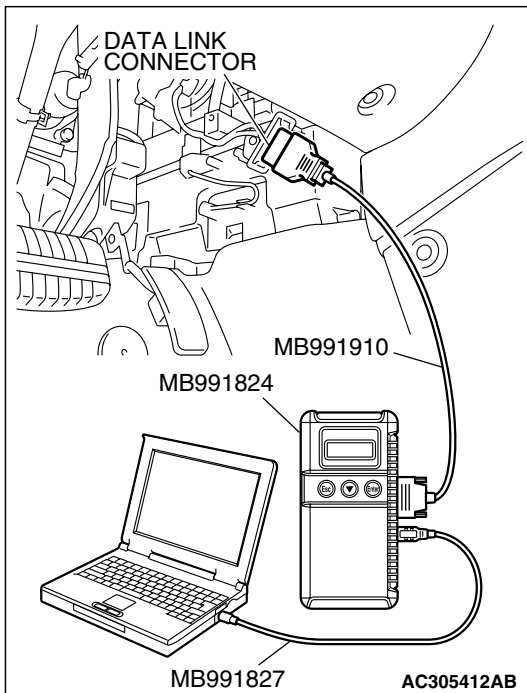




STEP 5. Check harness connector B-119 at the crankshaft position sensor for damage.

Q: Is the harness connector in good condition?

YES : Go to Step 6.

NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 20.

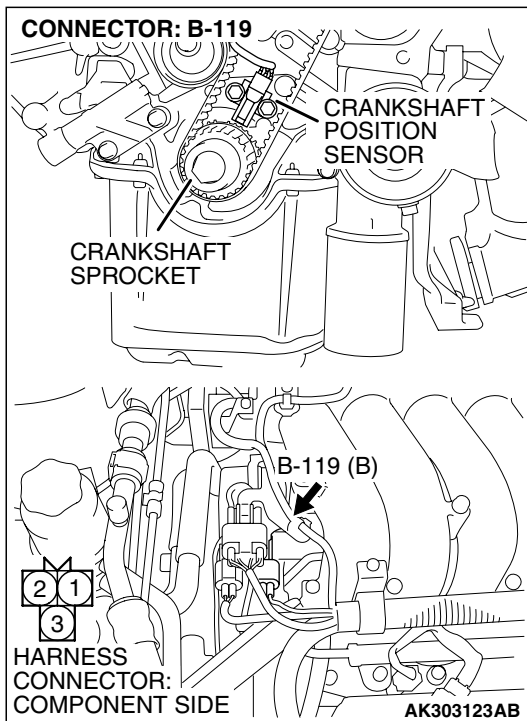

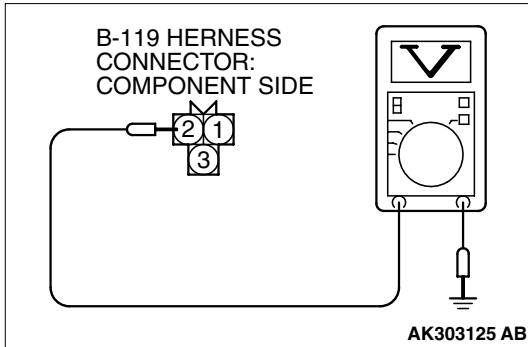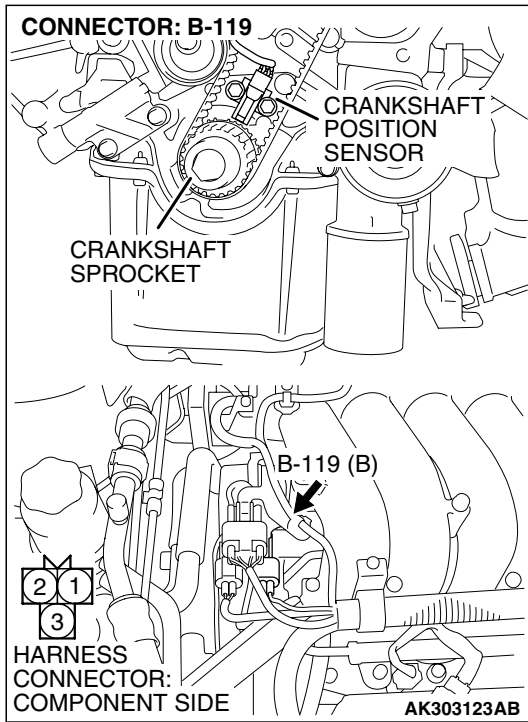

STEP 6. Measure the sensor supply voltage at crankshaft position sensor harness side connector B-119.

- (1) Disconnect the connector B-119 and measure at the harness side.
- (2) Turn the ignition switch to the "ON" position.



- (3) Measure the voltage between terminal No. 2 and ground.
 - Voltage should be between 4.9 and 5.1 volts.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.


Q: Is the measured voltage between 4.9 and 5.1 volts?

- YES :** Go to Step 11.
NO : Go to Step 7.

STEP 7. Measure the sensor supply voltage at PCM connector B-22 by using power plant ECU check harness special tool MB991923.


- (1) Disconnect the all PCM connectors and connect power plant ECU check harness special tool MB991923 between the separated connectors.
- (2) Disconnect the crankshaft position sensor connector B-119.
- (3) Turn the ignition switch to the "ON" position.

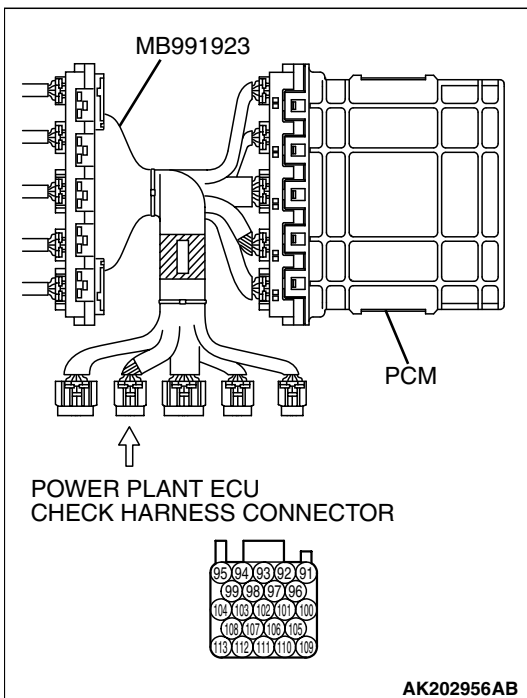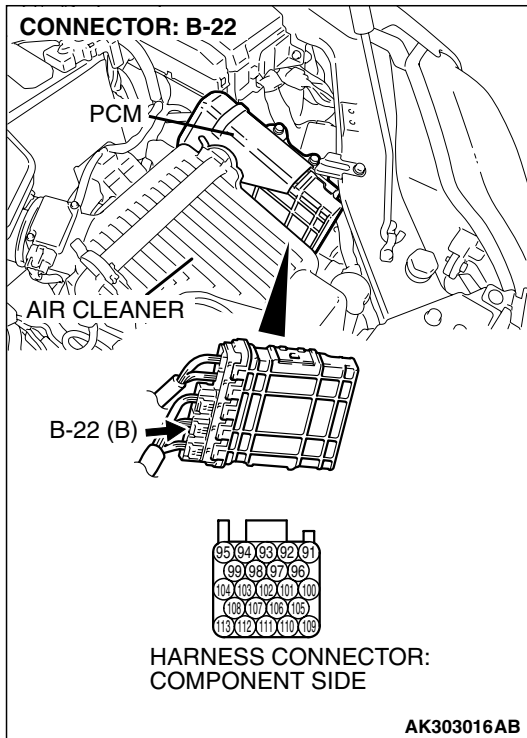

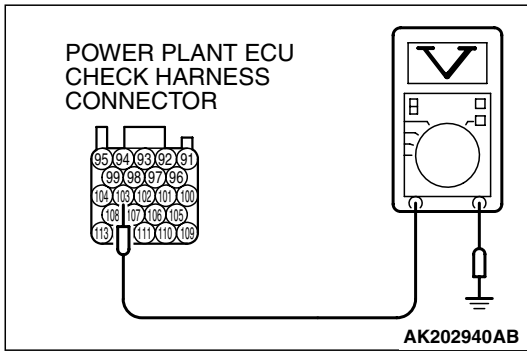

- (4) Measure the voltage between terminal No. 103 and ground.
 - Voltage should be between 4.9 and 5.1 volts.
- (5) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the measured voltage between 4.9 and 5.1 volts?
YES : Go to Step 8.
NO : Go to Step 9.

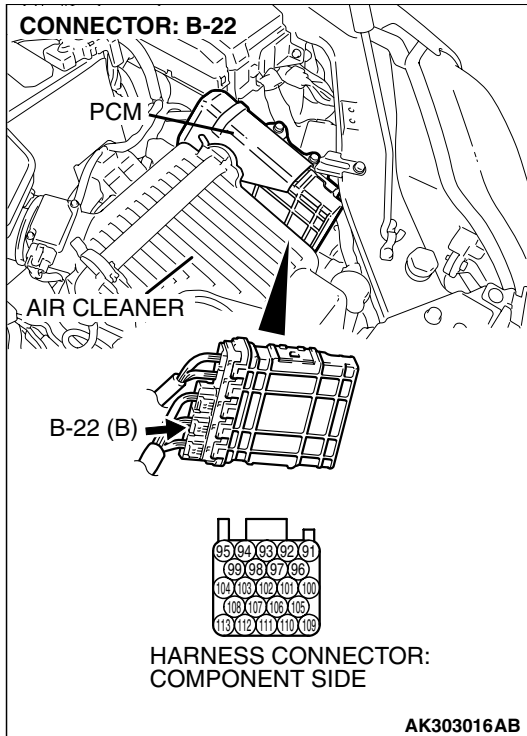

STEP 8. Check harness connector B-22 at PCM for damage.

Q: Is the harness connector in good condition?


- YES :** Repair harness wire between crankshaft position sensor connector B-119 (terminal No. 2) and PCM connector B-22 (terminal No. 103) because of open circuit. Then go to Step 20.
- NO :** Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 20.

STEP 9. Check harness connector B-22 at PCM for damage.

Q: Is the harness connector in good condition?

YES : Go to Step 10.



NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 20.


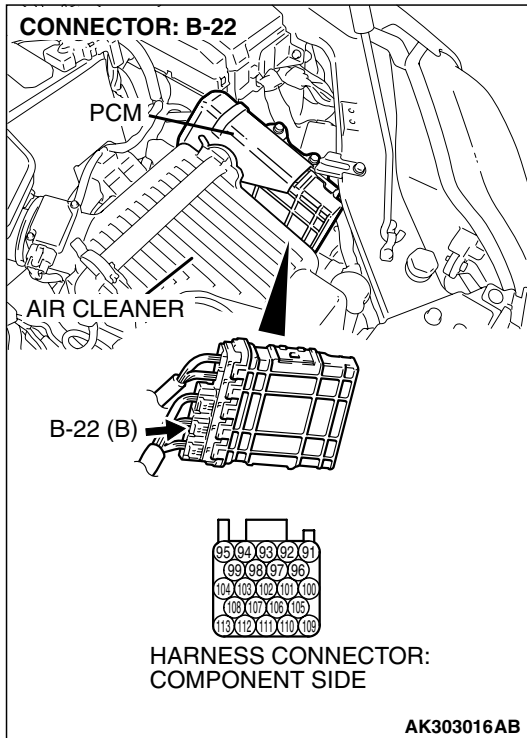


STEP 10. Check for short circuit to ground between crankshaft position sensor connector B-119 (terminal No. 2) and PCM connector B-22 (terminal No. 103).

Q: Is the harness wire in good condition?

- YES :** Replace the PCM. Then go to Step 20.
- NO :** Repair it. Then go to Step 20.

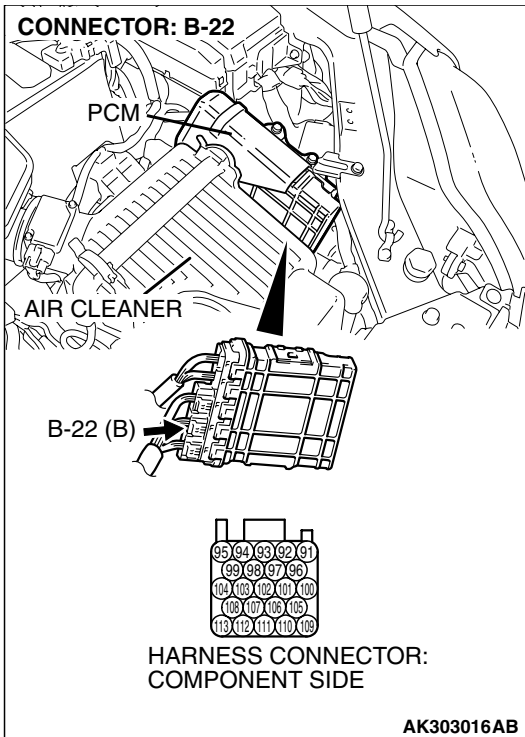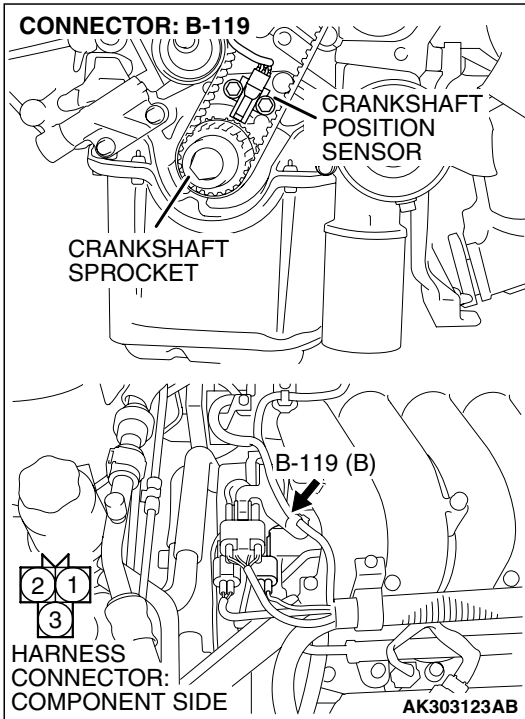

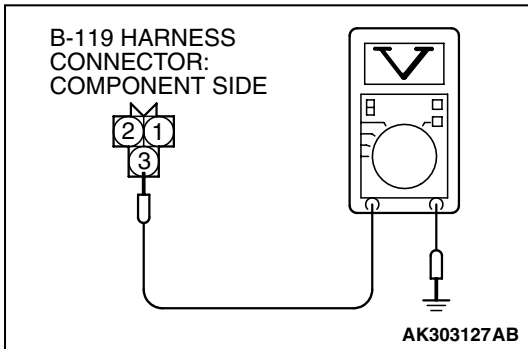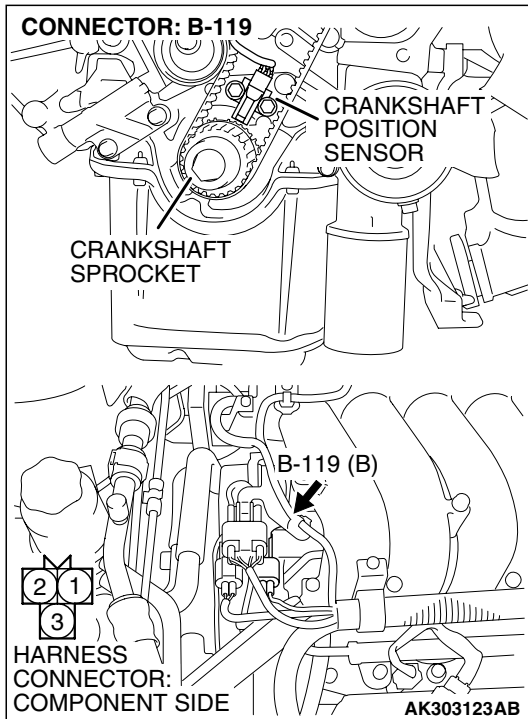


STEP 11. Measure the power supply voltage at crankshaft position sensor harness side connector B-119.

- (1) Disconnect the connector B-119 and measure at the harness side.
- (2) Turn the ignition switch to the "ON" position.

- (3) Measure the voltage between terminal No. 3 and ground.
 - Voltage should be battery positive voltage.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is battery positive voltage (approximately 12 volts) present?

- YES :** Go to Step 13.
NO : Go to Step 12.

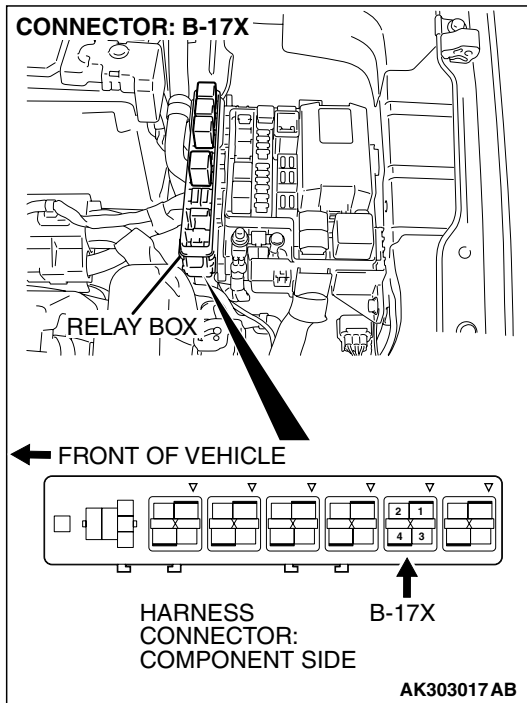



STEP 12. Check harness connector B-17X at MFI relay for damage.

Q: Is the harness connector in good condition?

- YES :** Repair harness wire between MFI relay connector B-17X (terminal No. 4) and crankshaft position sensor connector B-119 (terminal No. 3) because of open circuit or short circuit to ground. Then go to Step 20.
- NO :** Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 20.

STEP 13. Check for continuity at crankshaft position sensor harness side connector B-119.

(1) Disconnect the connector B-119 and measure at the harness side.

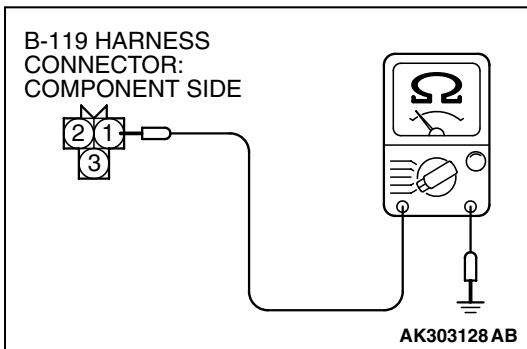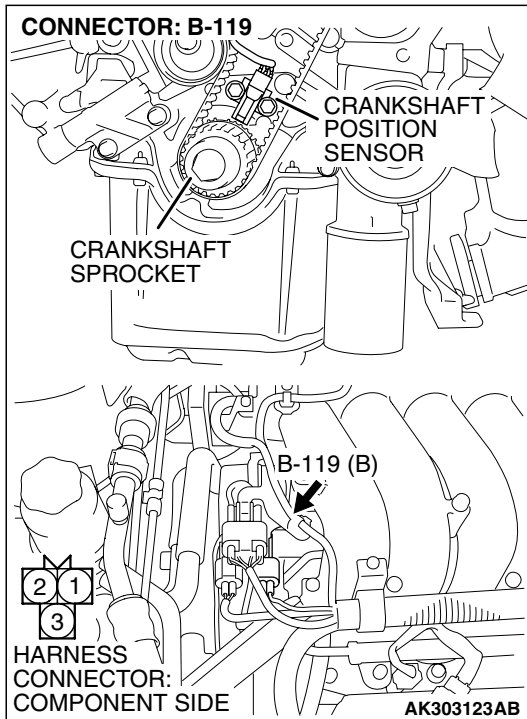


(2) Check for the continuity between terminal No. 1 and ground.

- Should be less than 2 ohms.

Q: Does continuity exist?

YES : Go to Step 16.

NO : Go to Step 14.

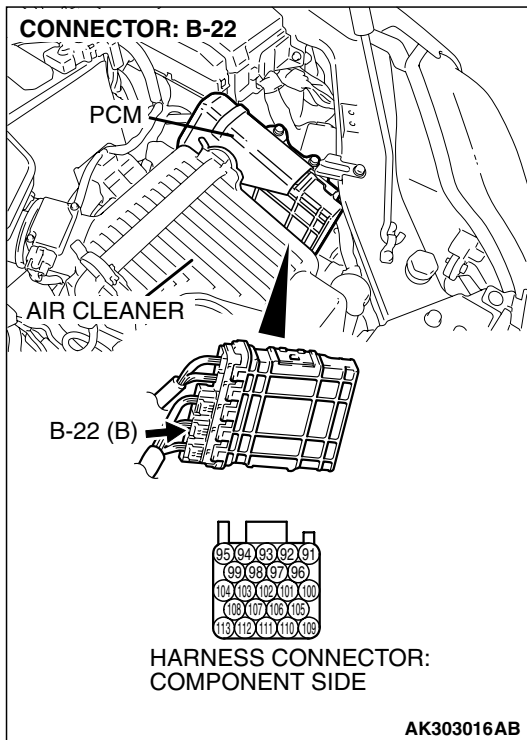

STEP 14. Check harness connector B-22 at PCM for damage.

Q: Is the harness connector in good condition?

YES : Go to Step 15.



NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 20.

STEP 15. Check for open circuit and harness damage between crankshaft position sensor connector B-119 (terminal No. 1) and PCM connector B-22 (terminal No. 113).

Q: Is the harness wire in good condition?

YES : Replace the PCM. Then go to Step 20.

NO : Repair it. Then go to Step 20.

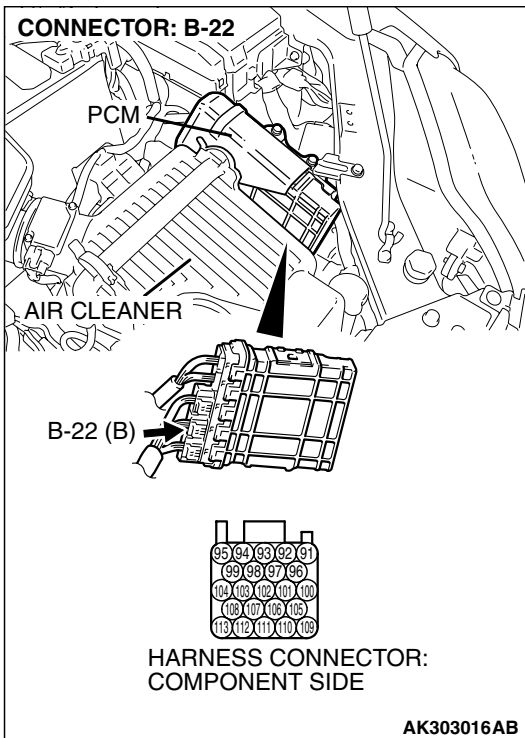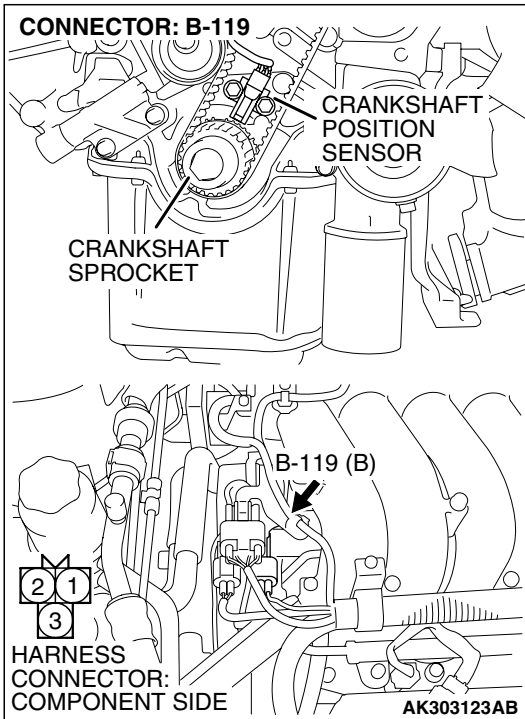


STEP 16. Check harness connector B-17X at the MFI relay for damage.

Q: Is the harness connector in good condition?

YES : Go to Step 17.

NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 20.

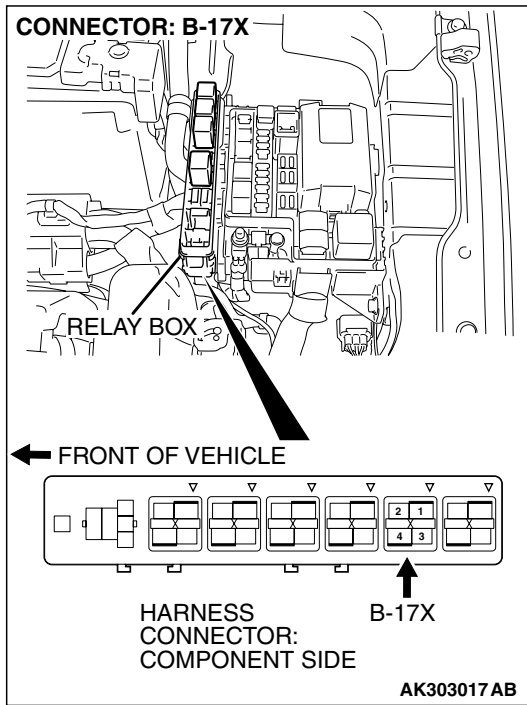


STEP 17. Check harness connector B-22 at PCM for damage.

Q: Is the harness connector in good condition?

YES : Go to Step 18.

NO : Repair or replace it. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Then go to Step 20.


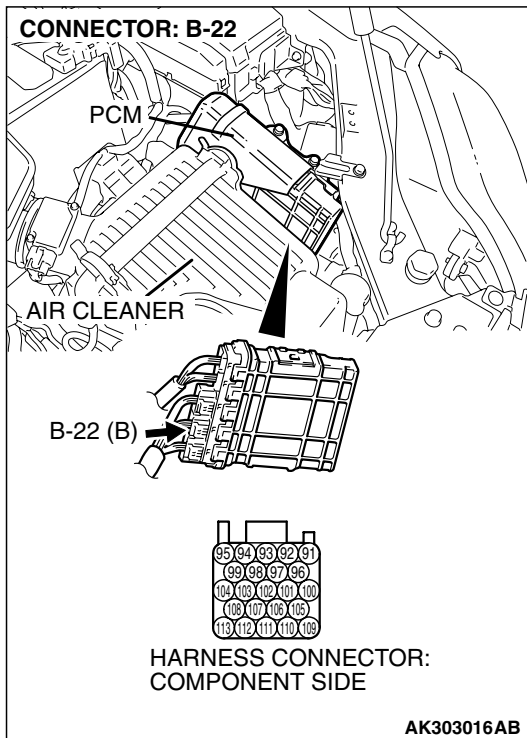


STEP 18. Check for harness damage between MFI relay connector B-17X (terminal No. 4) and crankshaft position sensor connector B-119 (terminal No. 3).

Q: Is the harness wire in good condition?

YES : Go to Step 19.

NO : Repair it. Then go to Step 20.

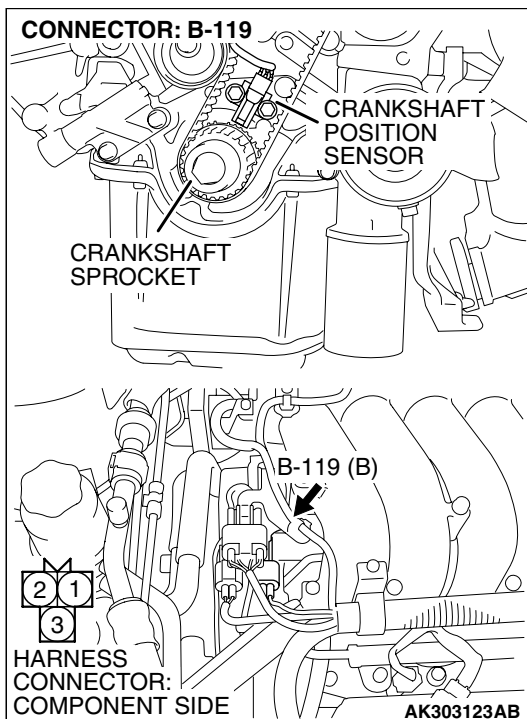
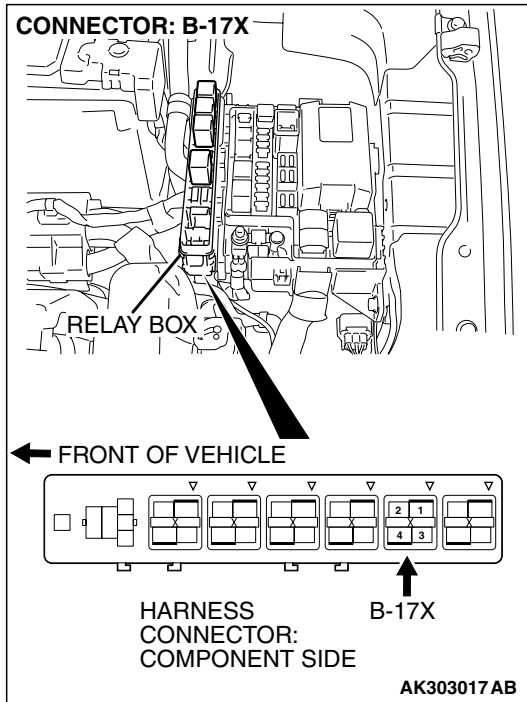


STEP 19. Check for harness damage between crankshaft position sensor connector B-119 (terminal No. 2) and PCM connector B-22 (terminal No. 103).

Q: Is the harness wire in good condition?

YES : Go to Step 20.

NO : Repair it. Then go to Step 20.

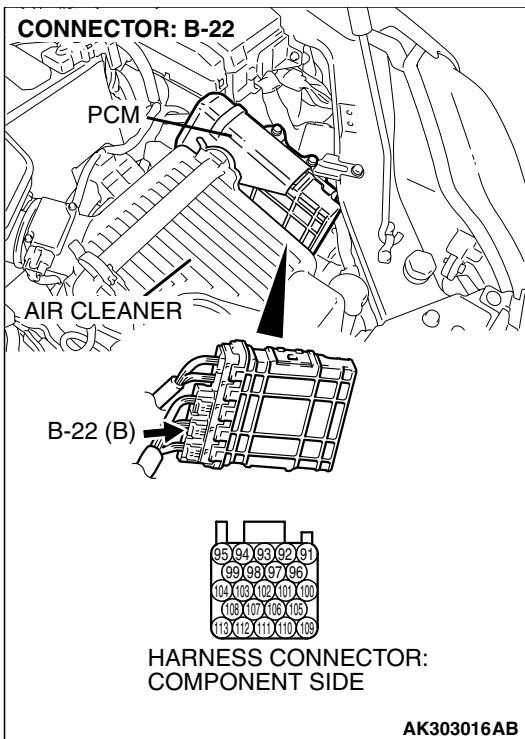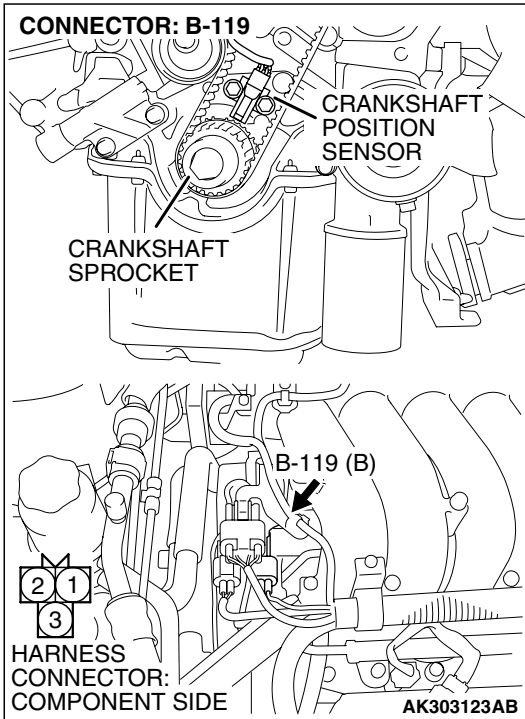

STEP 20. Test the OBD-II drive cycle.

- (1) Carry out a test drive with the drive cycle pattern. Refer to Diagnostic Function – OBD-II Drive Cycle – Procedure 6 – Other Monitor [P.13B-6](#).
- (2) Check the diagnostic trouble code (DTC).

Q: Is DTC P0335 set?

YES : Retry the troubleshooting.

NO : The inspection is complete.

NEXT>>