

SECTION **DI**

DRIVER INFORMATION SYSTEM

A
B
C

CONTENTS

| | |
|--|---|
| <p>PRECAUTION 3</p> <p style="padding-left: 20px;">Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" 3</p> <p>PREPARATION 4</p> <p style="padding-left: 20px;">Commercial Service Tool 4</p> <p>COMBINATION METERS 5</p> <p style="padding-left: 20px;">System Description 5</p> <p style="padding-left: 40px;">UNIFIED METER CONTROL UNIT 5</p> <p style="padding-left: 40px;">POWER SUPPLY AND GROUND CIRCUIT 6</p> <p style="padding-left: 40px;">WATER TEMPERATURE GAUGE 6</p> <p style="padding-left: 40px;">ENGINE OIL PRESSURE GAUGE 6</p> <p style="padding-left: 40px;">A/T OIL TEMPERATURE GAUGE (IF EQUIPPED) 6</p> <p style="padding-left: 40px;">VOLTAGE GAUGE 6</p> <p style="padding-left: 40px;">TACHOMETER 6</p> <p style="padding-left: 40px;">FUEL GAUGE 6</p> <p style="padding-left: 40px;">SPEEDOMETER 6</p> <p style="padding-left: 20px;">CAN Communication System Description 7</p> <p style="padding-left: 20px;">Component Parts and Harness Connector Location... 7</p> <p style="padding-left: 20px;">Combination Meter 8</p> <p style="padding-left: 40px;">CHECK 8</p> <p style="padding-left: 20px;">Schematic 9</p> <p style="padding-left: 20px;">Wiring Diagram — METER — 10</p> <p style="padding-left: 20px;">Terminals and Reference Value for Combination Meter 12</p> <p style="padding-left: 20px;">Meter/Gauge Operation and Odo/Trip Meter 13</p> <p style="padding-left: 40px;">SELF-DIAGNOSIS FUNCTION 13</p> <p style="padding-left: 40px;">HOW TO INITIATE COMBINATION METER SELF-DIAGNOSIS MODE 13</p> <p style="padding-left: 40px;">COMBINATION METER SELF-DIAGNOSIS MODE FUNCTIONS 13</p> <p style="padding-left: 20px;">How to Proceed With Trouble Diagnosis 17</p> <p style="padding-left: 20px;">Diagnosis Flow 17</p> <p style="padding-left: 20px;">Power Supply and Ground Circuit Inspection 18</p> <p style="padding-left: 20px;">Symptom Chart 19</p> <p style="padding-left: 20px;">Vehicle Speed Signal Inspection 19</p> <p style="padding-left: 20px;">Water Temperature Signal Inspection 19</p> <p style="padding-left: 20px;">Engine Speed Signal Inspection 19</p> <p style="padding-left: 20px;">Engine Oil Pressure Signal Inspection 20</p> | <p style="padding-left: 20px;">Fuel Level Sensor Unit Inspection 22</p> <p style="padding-left: 40px;">FUEL LEVEL SENSOR UNIT 22</p> <p style="padding-left: 40px;">LOW-FUEL WARNING LAMP 22</p> <p style="padding-left: 20px;">Fuel Gauge Fluctuates, Indicates Wrong Value, or Varies 24</p> <p style="padding-left: 20px;">Fuel Gauge Does Not Move to Full-position 24</p> <p style="padding-left: 20px;">Electrical Components Inspection 25</p> <p style="padding-left: 40px;">FUEL LEVEL SENSOR UNIT CHECK 25</p> <p style="padding-left: 20px;">Removal and Installation of Combination Meter 25</p> <p>COMPASS AND THERMOMETER 26</p> <p style="padding-left: 20px;">System Description 26</p> <p style="padding-left: 40px;">OUTSIDE TEMPERATURE DISPLAY 26</p> <p style="padding-left: 40px;">DIRECTION DISPLAY 26</p> <p style="padding-left: 20px;">Wiring Diagram — COMPAS — 27</p> <p style="padding-left: 20px;">Trouble Diagnoses 28</p> <p style="padding-left: 40px;">PRELIMINARY CHECK FOR THERMOMETER.. 28</p> <p style="padding-left: 40px;">INSPECTION/COMPASS AND THERMOMETER 28</p> <p style="padding-left: 20px;">Calibration Procedure for Compass 29</p> <p style="padding-left: 40px;">CORRECTION FUNCTIONS OF COMPASS 29</p> <p style="padding-left: 40px;">INITIAL CORRECTION PROCEDURE FOR COMPASS 29</p> <p>WARNING LAMPS 30</p> <p style="padding-left: 20px;">Schematic 30</p> <p style="padding-left: 20px;">Wiring Diagram — WARN — 31</p> <p style="padding-left: 20px;">Oil Pressure Warning Lamp Stays Off (Ignition Switch ON) 37</p> <p style="padding-left: 20px;">Oil Pressure Warning Lamp Does Not Turn Off (Oil Pressure Is Normal) 39</p> <p>A/T INDICATOR 40</p> <p style="padding-left: 20px;">Wiring Diagram — AT/IND — 40</p> <p style="padding-left: 20px;">A/T Indicator Does Not Illuminate 41</p> <p>WARNING CHIME 42</p> <p style="padding-left: 20px;">Component Parts and Harness Connector Location.. 42</p> <p style="padding-left: 20px;">System Description 43</p> <p style="padding-left: 40px;">FUNCTION 43</p> <p style="padding-left: 40px;">IGNITION KEY WARNING CHIME 43</p> <p style="padding-left: 40px;">LIGHT WARNING CHIME 43</p> <p style="padding-left: 40px;">SEAT BELT WARNING CHIME 44</p> <p style="padding-left: 20px;">CAN Communication System Description 44</p> |
|--|---|

D
E
F
G
H
I
J
DI
L
M

| | | | |
|---|-----------|---|----|
| Wiring Diagram — CHIME — | 45 | SONAR BUZZER | 60 |
| Terminals and Reference Value for BCM | 47 | REAR SONAR SENSOR | 61 |
| Terminals and Reference Value for Combination Meter | 48 | Wiring Diagram — SONAR — | 62 |
| How to Proceed With Trouble Diagnosis | 48 | Terminals And Reference Value For Sonar Control Unit | 64 |
| Preliminary Check | 49 | How to Proceed With Trouble Diagnosis | 64 |
| INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT | 49 | Pre-diagnosis Inspection | 65 |
| CONSULT-II Function (BCM) | 50 | SENSOR STATUS CHECK | 65 |
| CONSULT-IIBASICOPERATIONPROCEDURE | 50 | Self-diagnosis Function | 65 |
| DATA MONITOR | 51 | ENTERING DIAGNOSTICS MODE | 65 |
| ACTIVE TEST | 51 | REQUESTING NUMBER OF FAULT CODES MODE | 65 |
| SELF-DIAGNOSTIC RESULTS | 52 | REQUESTING FAULT CODES MODE | 66 |
| All Warning Chimes Do Not Operate | 52 | IDLING OR CLEARING FAULT CODES MODE... .. | 66 |
| Key Warning Chime and Light Warning Chime Do Not Operate (Seat Belt Warning Chime Does Oper- ate) | 53 | Preliminary Check | 67 |
| Key Warning Chime Does Not Operate | 54 | INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT | 67 |
| Light Warning Chime Does Not Operate | 56 | Symptom Chart | 68 |
| Seat Belt Warning Chime Does Not Operate | 57 | Component Inspection | 69 |
| REAR SONAR SYSTEM | 59 | SONAR BUZZER | 69 |
| Component Parts and Harness Connector Location.. | 59 | REAR SONAR SYSTEM OFF SWITCH | 69 |
| System Description | 60 | REAR SONAR SYSTEM OFF INDICATOR | 70 |
| FUNCTION | 60 | Removal and Installation | 70 |
| REAR SONAR SYSTEM OFF SWITCH | 60 | REAR SONAR SENSORS | 70 |
| | | SONAR CONTROL UNIT | 70 |

PRECAUTION

PRECAUTION

PFP:00011

Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

EKS00ACO

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

A

B

C

D

E

F

G

H

I

J

DI

L

M


PREPARATION

PREPARATION

PF0:00002

Commercial Service Tool

EKS00ACQ
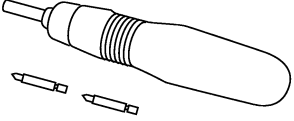
| Tool name | Description |
|--|--|
| <p data-bbox="162 298 272 323">Power tool</p>  <p data-bbox="852 499 925 516">PBIC0191E</p> | <p data-bbox="1015 298 1274 323">Loosening bolts and nuts.</p> |

COMBINATION METERS

COMBINATION METERS

PFP:24814

System Description

EKS00ACR

UNIFIED METER CONTROL UNIT

- Speedometer, odometer, tachometer, fuel gauge, oil pressure gauge, voltage gauge, A/T oil temperature gauge (if equipped), and water temperature gauge are controlled by the unified meter control unit, which is built into the combination meter.
- Warning indicators are controlled by signals drawn from the CAN communication system, and components connected directly to the combination meter.
- Digital meter is adopted for odometer/trip meters*, as well as the A/T position indicator display.
*The record of the odometer is kept even if the battery cable is disconnected.
- Odometer/trip meters and A/T indicator segments can be checked in diagnosis mode.
- Meters/gauges can be checked in diagnosis mode.

Illumination control

The unified meter control unit outputs the speedometer, odometer/trip meters, tachometer, engine oil pressure gauge, voltage meter, A/T indicator, A/T oil temperature gauge (if equipped), fuel and temperature gauge lighting when the ignition switch is turned on. When the headlamp (combination) switch is turned on, the illumination control switch can be used to adjust the brightness of the combination meter illumination and the odometer/trip meters and meter illumination. When the ignition switch is turned from the OFF to the ON position, the combination meter dial lighting will remain off for 0.7 seconds. For additional combination meter illumination control information, refer to [LT-156, "System Description"](#).

A

B

C

D

E

F

G

H

I

J

DI

L

M

COMBINATION METERS

POWER SUPPLY AND GROUND CIRCUIT

Power is supplied at all times

- through 10A fuse [No.19, located in the fuse block (J/B)]
- to combination meter terminal 8.

With the ignition switch in the ON or START position, power is supplied

- through 10A fuse [No.14, located in the fuse block (J/B)]
- to combination meter terminal 24.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No.4, located in the fuse block (J/B)]
- to combination meter terminal 1.

Ground is supplied

- to combination meter terminal 17
- through body grounds M57, M61 and M79.

WATER TEMPERATURE GAUGE

The water temperature gauge indicates the engine coolant temperature.

ECM provides an engine coolant temperature signal to combination meter via CAN communication lines.

ENGINE OIL PRESSURE GAUGE

The engine oil pressure gauge indicates the engine oil pressure.

With the ignition switch in the ON or START position, power is supplied

- through combination meter terminal 22
- to oil pressure sensor terminal 1.

Ground is supplied

- to combination meter terminal 16
- through oil pressure sensor terminal 3.

The combination meter receives the oil pressure signal from oil pressure sensor

- through oil pressure sensor terminal 2
- to combination meter terminal 20.

NOTE:

This gauge is not designed to indicate low oil level. Use the oil level gauge to check the oil level.

A/T OIL TEMPERATURE GAUGE (IF EQUIPPED)

The A/T oil temperature gauge indicates the A/T fluid temperature.

TCM provides a A/T oil temperature signal to combination meter via CAN communication lines.

VOLTAGE GAUGE

The voltage gauge indicates the battery/charging system voltage.

The voltage gauge is regulated by the unified meter control unit.

TACHOMETER

The tachometer indicates engine speed in revolutions per minute (rpm).

ECM provides an engine speed signal to combination meter via CAN communication lines.

FUEL GAUGE

The fuel gauge indicates the approximate fuel level in the fuel tank.

The fuel gauge is regulated by the unified meter control unit and a variable resistor signal supplied

- to combination meter terminal 15
- through fuel level sensor unit and fuel pump terminal 2
- through fuel level sensor unit and fuel pump terminal 5
- from combination meter terminal 16.

SPEEDOMETER

ABS actuator and electric unit (control unit) provides a vehicle speed signal to the combination meter via CAN communication lines.

COMBINATION METERS


CAN Communication System Description

EKS00ACS

Refer to [LAN-25, "CAN COMMUNICATION"](#).

Component Parts and Harness Connector Location

EKS00ACT

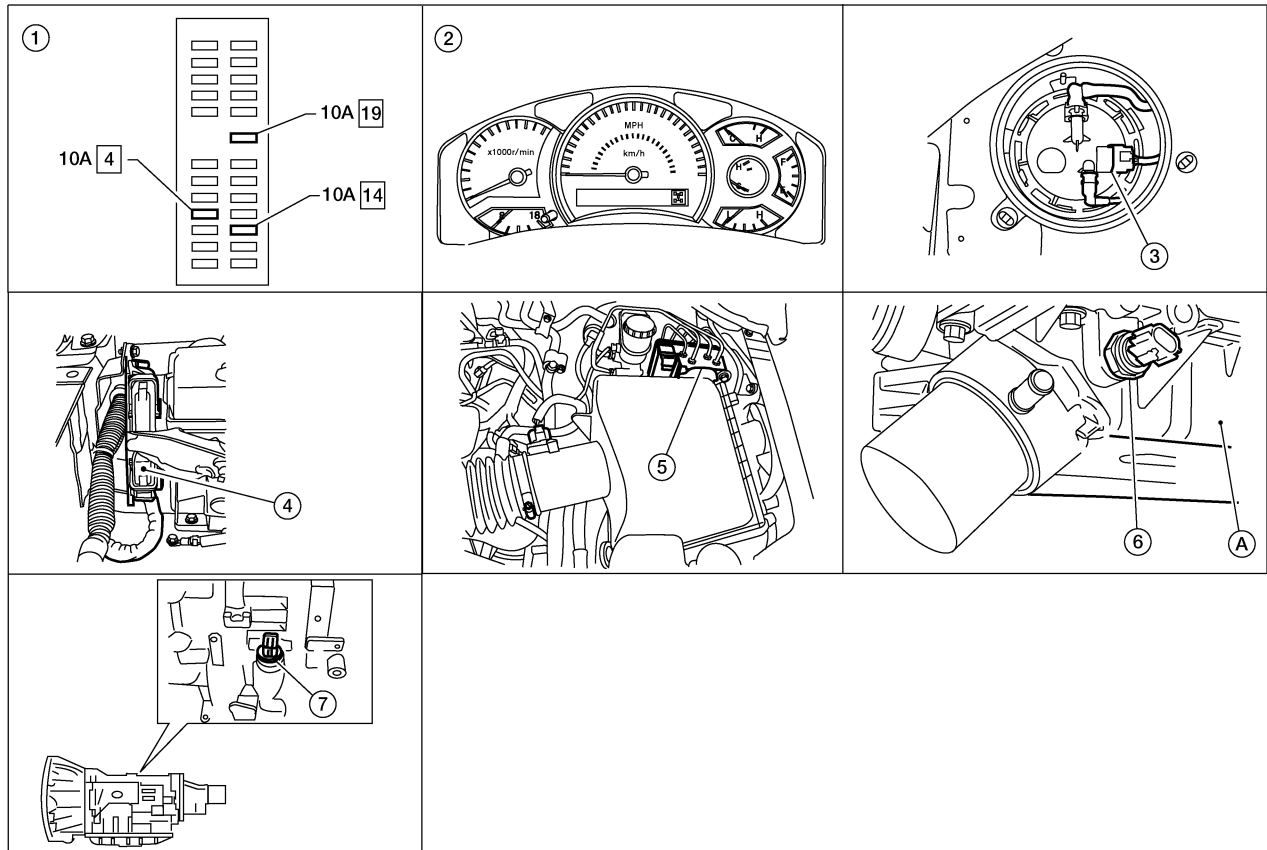



- WKIA4400E
- | | | |
|--|--|---|
| <p>1. Fuse block (J/B)</p> <p>4. ECM E16 (view with battery removed)</p> <p>7. A/T assembly F9</p> | <p>2. Combination meter M24</p> <p>5. ABS actuator and electric unit (control unit) E125</p> | <p>3. Fuel level sensor unit and fuel pump C5 (view with fuel tank removed)</p> <p>6. Oil pressure sensor F4 A. Oil pan (upper)</p> |
|--|--|---|

A
B
C
D
E
F
G
H
I
J
DI
L
M

COMBINATION METERS

Combination Meter CHECK

EKS00ACU

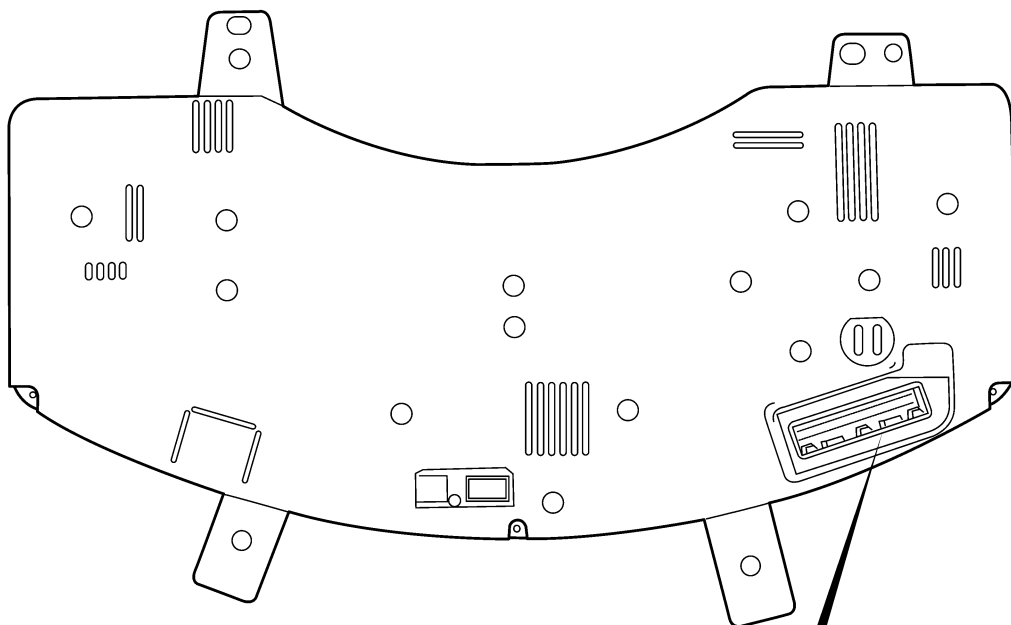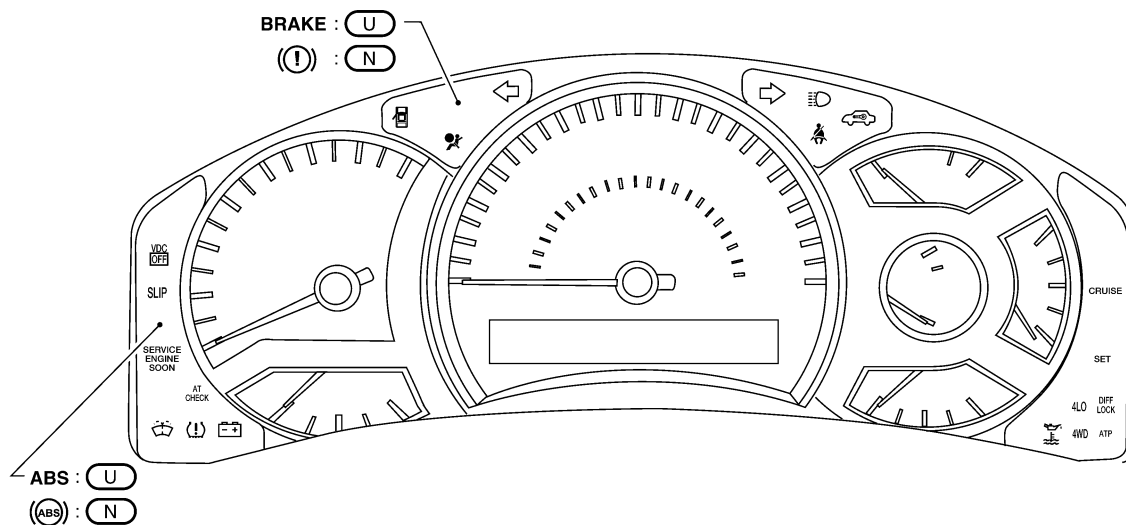


N : CANADA
U : USA

| | | | | | | | | | | | | | | | | | | | | |
|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|-----|
| 20 | 19 | 18 | 17 | 16 | 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | M24 |
| 40 | 39 | 38 | 37 | 36 | 35 | 34 | 33 | 32 | 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | |

COMBINATION METERS

Schematic

EKS00ACV

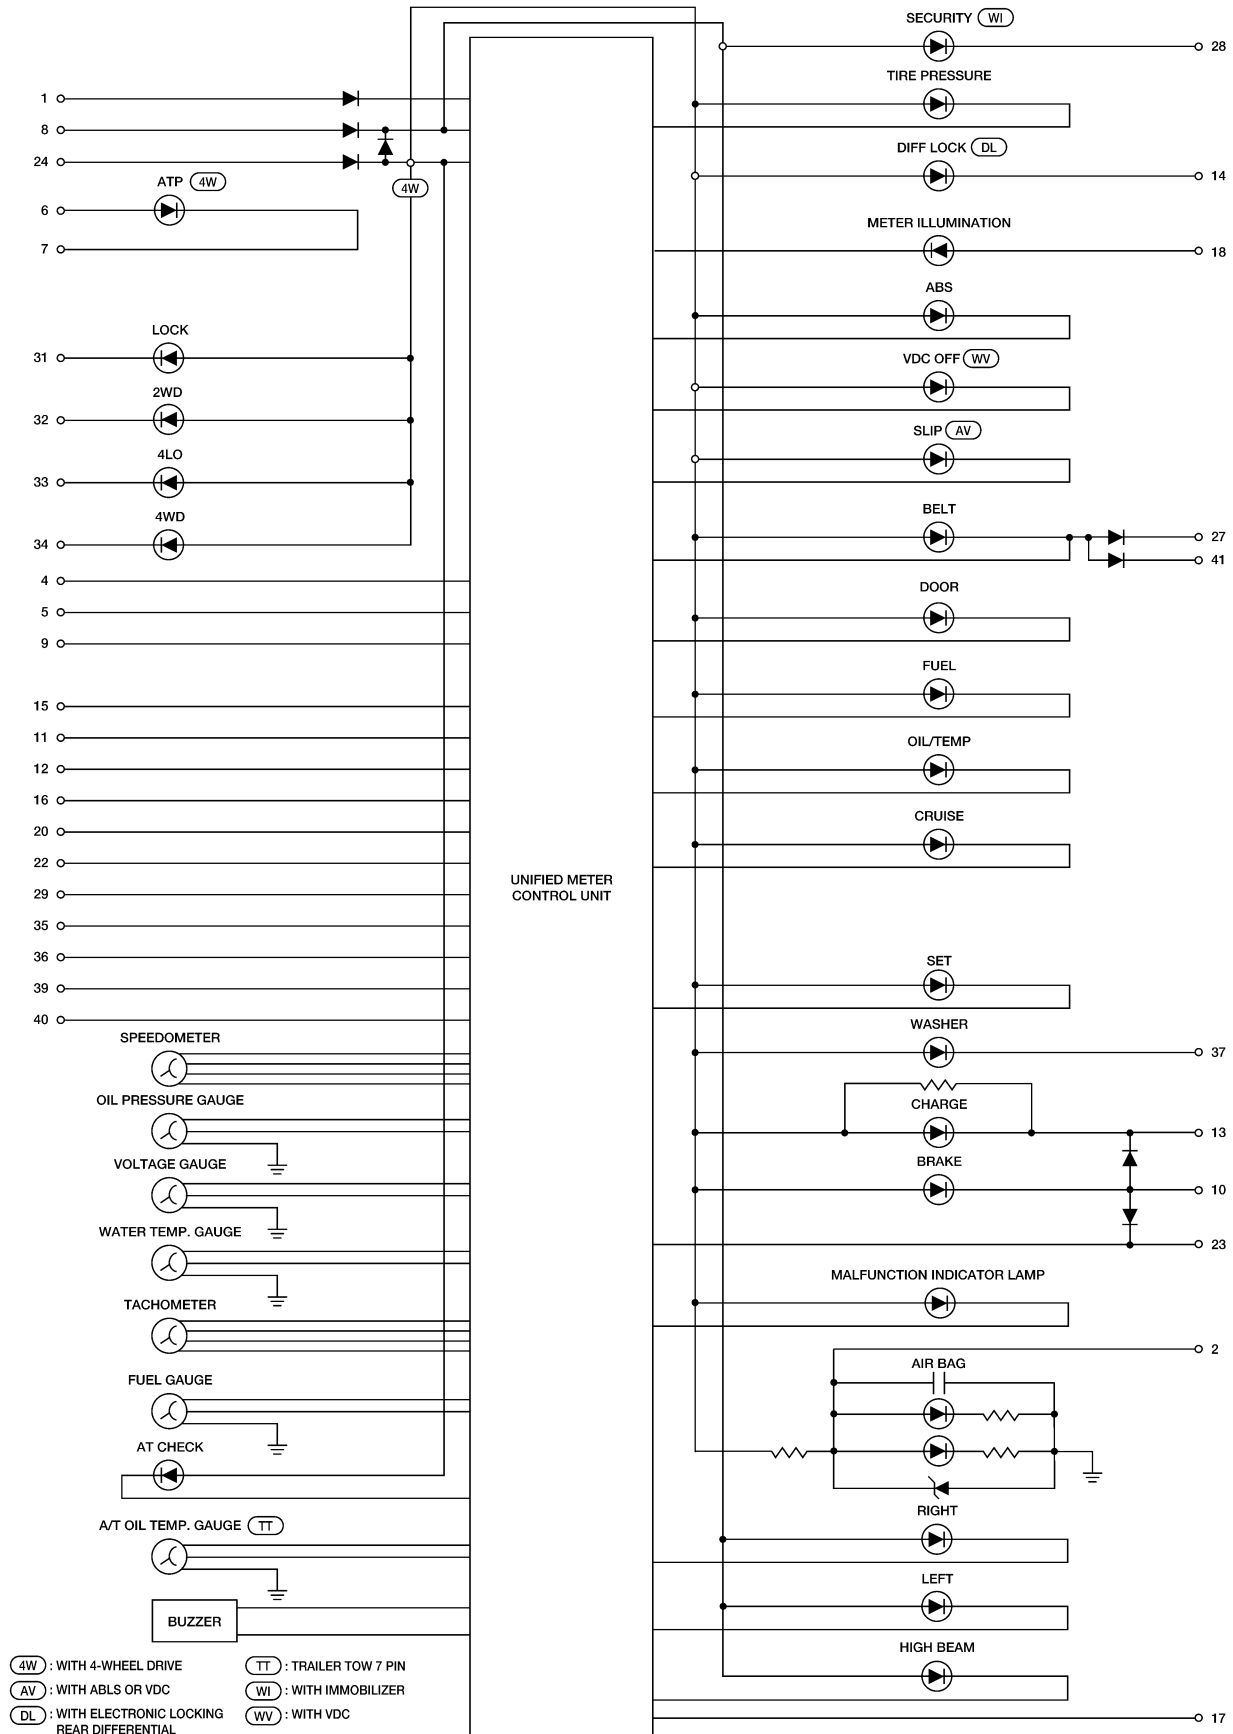

A
B
C
D
E
F
G
H
I
J
DI
L
M

WKWA3707E



COMBINATION METERS

Wiring Diagram — METER —



EKS00ACW

DI-METER-01

— : DATA LINE

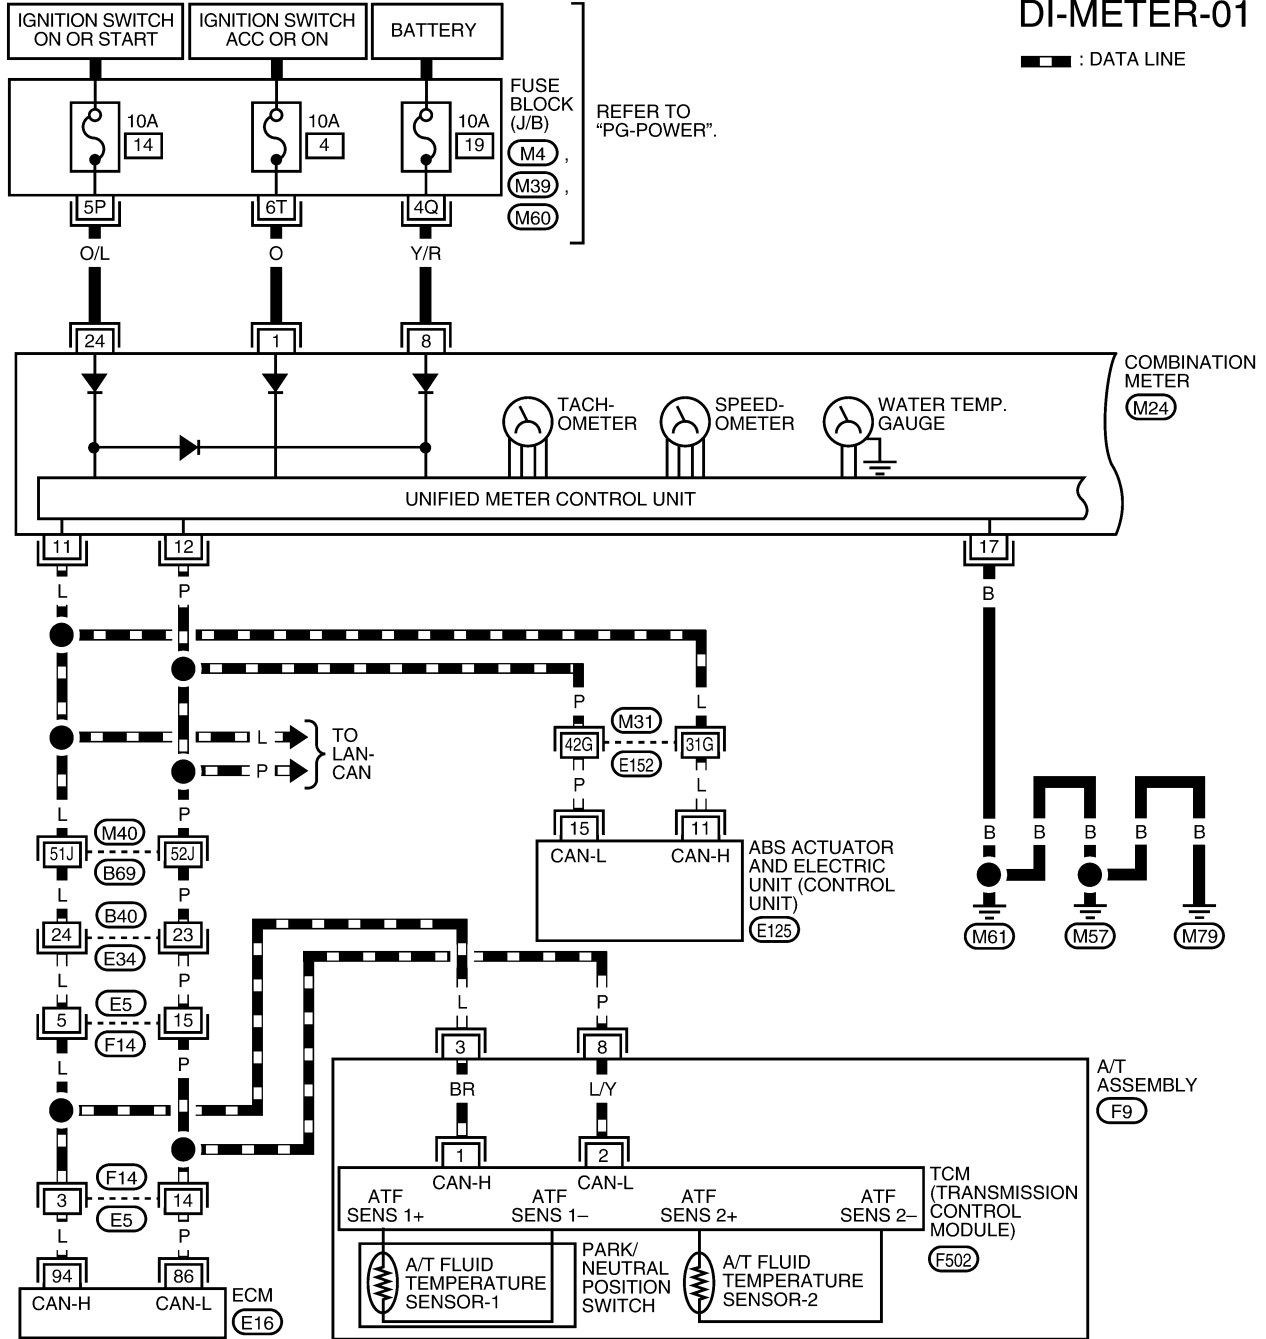

REFER TO THE FOLLOWING.
 (E16), (E125) - ELECTRICAL UNITS
 (M31), (M40) - SUPER MULTIPLE JUNCTION (SMJ)





*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

WKWA3708E

COMBINATION METERS

DI-METER-02

⏏: TRAILER TOW 7 PIN

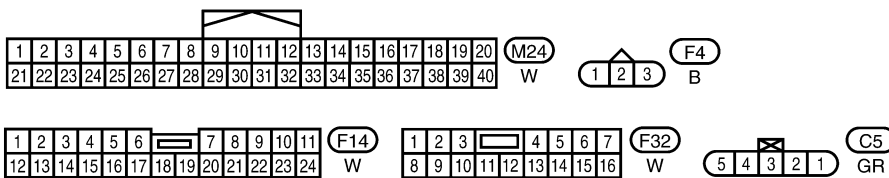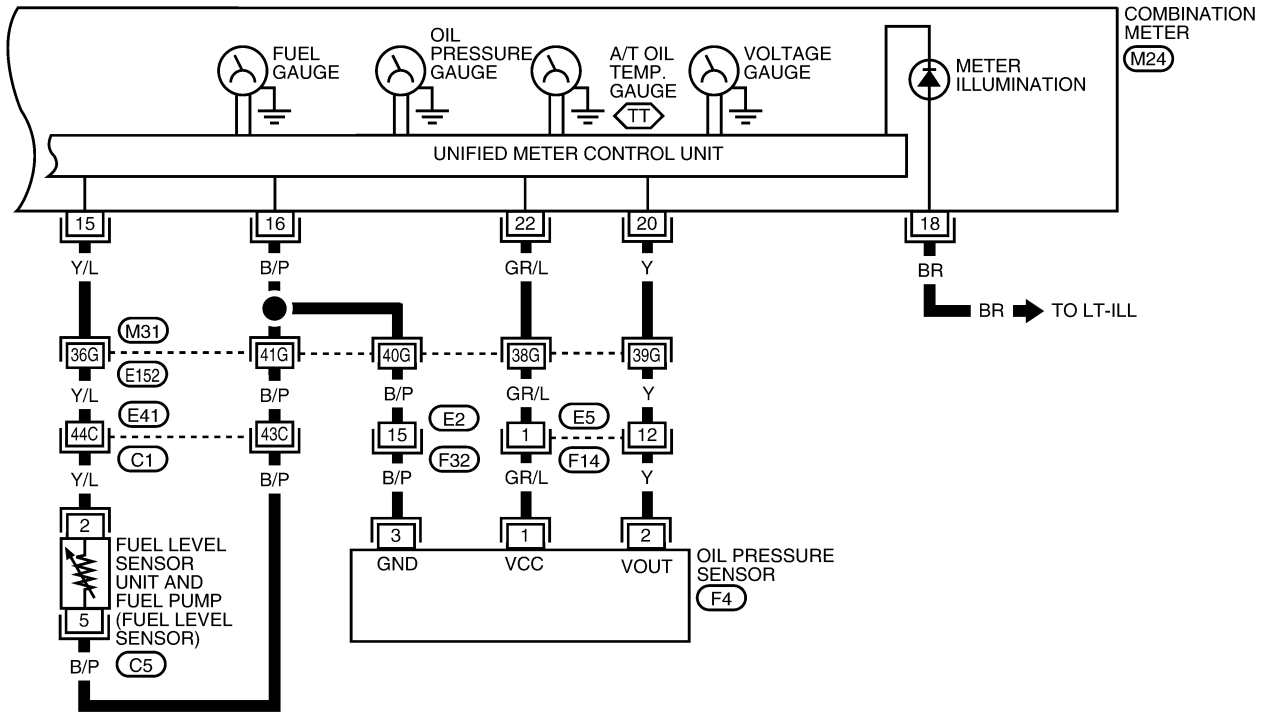

REFER TO THE FOLLOWING
 (M31), (C1) - SUPER
 MULTIPLE JUNCTION (SMJ)

WKWA3709E

COMBINATION METERS

Terminals and Reference Value for Combination Meter

EKS00ACX

| Terminal No. | Wire color | Item | Condition | | Reference value (V) (Approx.) |
|--------------|------------|--|-----------------|------------------------|--|
| | | | Ignition switch | Operation or condition | |
| 1 | O | Ignition switch ACC or ON | ACC | — | Battery voltage |
| 8 | Y/R | Battery power supply | OFF | — | Battery voltage |
| 11 | L | CAN-H | — | — | — |
| 12 | P | CAN-L | — | — | — |
| 15 | Y/L | Fuel level sensor signal | — | — | Refer to DI-22, "Fuel Level Sensor Unit Inspection" . |
| 16 | B/P | Fuel level sensor and oil pressure sensor ground | ON | — | Refer to DI-22, "Fuel Level Sensor Unit Inspection" . |
| 17 | B | Ground | — | — | 0V |
| 18 | BR | Illumination control switch | — | Lighting switch ON | Refer to LT-157, "ILLUMINATION OPERATION BY LIGHTING SWITCH" . |
| 20 | Y | Oil pressure sensor signal | ON | — | 0 - 5V |
| 22 | GR/L | Oil pressure sensor power supply | ON | — | 5V |
| 24 | O/L | Ignition switch ON or START | ON | — | Battery voltage |

COMBINATION METERS

EKS00ACY

Meter/Gauge Operation and Odo/Trip Meter SELF-DIAGNOSIS FUNCTION

The following items can be checked during Combination Meter Self-Diagnosis Mode.

- Gauge sweep and present gauge values.
- Illuminates all odometer, fuel, and engine temperature segments.
- Illuminates all micro controlled lamps/LEDs regardless of switch configuration.
- Displays estimated present battery voltage.
- Displays seat belt buckle switch LH status.

HOW TO INITIATE COMBINATION METER SELF- DIAGNOSIS MODE

NOTE:

Once entered, Combination Meter Self-Diagnosis Mode will function with the ignition switch in ON or START. Combination Meter Self-Diagnosis Mode will exit upon turning the ignition switch to OFF or ACC. To initiate Combination Meter Self-Diagnosis Mode, refer to the following procedure.

1. Turn the ignition switch ON, while holding the odometer/trip meter switch for 5 - 8 seconds.

NOTE:

If the diagnosis function is activated the odometer/trip meter will display tESt.

COMBINATION METER SELF-DIAGNOSIS MODE FUNCTIONS

To interpret Combination Meter Self-Diagnosis Mode functions, refer to the following table.

| Event | Odometer Display | Description of Test/Data | Notes: |
|---|------------------|--|---|
| Odometer/trip meter A/B switch held from 5 to 8 seconds (or until released) | tESt | | Initiating self-diagnosis mode |
| Odometer/trip meter A/B switch engaged and released = next test requested | rXXXX, FAIL | Return to normal operation of all lamps/LEDs and displays hex ROM rev. If a ROM checksum fault exists, display alternates between "r XXXX" and "FAIL". | |
| Next test requested | nrXXXX | Displays hex ROM rev as stored in NVM. | |
| Next test requested | Sc1XX | Displays 8-bit software configuration value in Hex format. | Bit Coding 7-3 = reserved for future use 2 = TCS/VDC 0 = not present 1 = present 1 = Shift type 0 = Column shift 1 = Floor shift 0 = ICC 0 = not present 1 = present |
| Next test requested | Sc2XX | Displays 8-bit software configuration value in Hex format. | Bit coding 7-0 = Reserved for future use |
| Next test requested | EprXX | Displays 8-bit software configuration value in Hex format. | Bit Coding 7-2 = reserved for future use 1 = A/T Oil Temp (gauge) 0 = not present 1 = present 1 = Odo Units 0 = kilometers 1 = miles |
| Next test requested | 1nFXX | Displays 8-bit market info value in Hex format. | \$31 = USA \$2A = Canada |
| Next test requested | cYLXX | Displays 8-bit engine configuration value in Hex format. | \$08 = 8 cylinder \$06 = 6 cylinder |

COMBINATION METERS

| Event | Odometer Display | Description of Test/Data | Notes: |
|---------------------|----------------------------|--|---|
| Next test requested | bulb | Illuminates all micro-controlled lamps/LEDs regardless of SW configuration. | |
| Next test requested | D-HI | Meter/LCD Illumination. | |
| Next test requested | (All segments illuminated) | Lights all odometer/trip meter, fuel, and engine temperature display segments. | Full daytime brightness all LCD segments active |
| Next test requested | N-HI | Meter/LCD Illumination. | |
| Next test requested | (All segments illuminated) | Lights all odometer/trip meter, fuel, and engine temperature display segments. | Full nighttime brightness all LCD segments active |
| Next test requested | N-LO | Meter/LCD Illumination. | |
| Next test requested | (All segments illuminated) | Lights all odometer/trip meter, fuel, and engine temperature display segments. | Min. nighttime brightness all LCD segments active |
| Next test requested | dS XX | Current dimming step. | 1-21 |
| Next test requested | EE XX, FAIL | Hex EE level. If EE checksum fault exists, display alternates between "EE XX" and "FAIL". | |
| Next test requested | dtXXXX | Hex coding of final manufacturing test date. | |
| Next test requested | GAGE | Performs sweep of all gauges, then displays present gauge values. Performs checksum tests on ROM and EE. | Gauges sweep within 10 seconds |
| Next test requested | FFXXXX | Displays 16-bit fuel flow constant "Q" in tenths of cc/min in Hex format. | \$0000 - \$FFFF |
| Next test requested | tF | Displays 16-bit tire factor "A" in hundredths in Hex format. | \$0000 - \$FFFF |
| Next test requested | oP | Current oil pressure value in A/D counts in hex format. | \$00 - \$FF |
| Next test requested | ot1XX | Displays oil pressure tell-tale "on" threshold in A/D counts in Hex format. | \$00 - \$FF |
| Next test requested | ot0XX | Displays oil pressure tell-tale "off" threshold in A/D counts in Hex format. | \$00 - \$FF |
| Next test requested | XXXXXX | Raw uncompensated english speed value in hundredths of MPH. Speedometer indicates present speed. | Will display "-----" if message is not received. Will display "99999" if data received is invalid |
| Next test requested | XXXXXX | Raw uncompensated metric speed value in hundredths of KPH. Speedometer indicates present speed. | Will display "-----" if message is not received. Will display "99999" if data received is invalid |

COMBINATION METERS

| Event | Odometer Display | Description of Test/Data | Notes: | |
|---------------------|------------------|--|--|----|
| Next test requested | tXXXX | Tachometer value in RPM. Tachometer indicates present RPM. | Will display "-----" if message is not received. | A |
| Next test requested | F1 XXXX | Present ratioed fuel level A/D input 1 in decimal format. Fuel gauge indicates present filtered level. | 000-009 = Short circuit 010-254 = Normal range 255 = Open circuit --- = Missing 5 seconds | B |
| Next test requested | F2 XXX | Present FLPS. | 010-254 normal range | C |
| Next test requested | FS X | Fuel filter rate | 0 = Normal 1 = Fast | D |
| Next test requested | XXXX | Last temperature gauge input value in degrees C. Temperature gauge indicates present filtered temperature. | Will display "---"C if message is not received. Will display "999" if data received is invalid. | E |
| Next test requested | BAtXX.X | Estimated present battery voltage. | | F |
| Next test requested | rES -X | Seat belt buckle switch LH status. | 0 = Unbuckled 1 = Buckled | |
| Next test requested | PA -XX | Hex value port A. | | G |
| Next test requested | Pb -XX | Hex value port B. | | |
| Next test requested | PE -XX | Hex value port E. | | |
| Next test requested | PL -XX | Hex value port L. | | H |
| Next test requested | P6 -XX | Hex value port K. | | |
| Next test requested | Pn -XX | Hex value port M. | | I |
| Next test requested | PP -XX | Hex value port P. | | |
| Next test requested | PS -XX | Hex value port S. | | J |
| Next test requested | Pt -XX | Hex value port T. | | |
| Next test requested | Pu -XX | Hex value port U. | | |
| Next test requested | P4 -XX | Hex value port V. | | DI |
| Next test requested | Puu -XX | Hex value port W. | | |
| Next test requested | A00XXX | A/D port A/D value (non-ratioed). | 0-255 | L |
| Next test requested | A01XXX | A/D port A/D value (non-ratioed). | 0-255 | |
| Next test requested | A02XXX | A/D port A/D value (non-ratioed). | 0-255 | M |
| Next test requested | A03XXX | A/D port A/D value (non-ratioed). | 0-255 | |
| Next test requested | A04XXX | A/D port A/D value (non-ratioed). | 0-255 | |
| Next test requested | A05XXX | A/D port A/D value (non-ratioed). | 0-255 | |
| Next test requested | A06XXX | A/D port A/D value (non-ratioed). | 0-255 | |
| Next test requested | A07XXX | A/D port A/D value (non-ratioed). | 0-255 | |
| Next test requested | A08XXX | A/D port A/D value (non-ratioed). | 0-255 | |
| Next test requested | A09XXX | A/D port A/D value (non-ratioed). | 0-255 | |

COMBINATION METERS

| Event | Odometer Display | Description of Test/Data | Notes: |
|---------------------|------------------|--|--|
| Next test requested | A10XXX | A/D port A/D value (non-ratioed). | 0-255 |
| Next test requested | A11XXX | A/D port A/D value (non-ratioed). | 0-255 |
| Next test requested | A12XXX | A/D port A/D value (non-ratioed). | 0-255 |
| Next test requested | A13XXX | A/D port A/D value (non-ratioed). | 0-255 |
| Next test requested | A14XXX | A/D port A/D value (non-ratioed). | 0-255 |
| Next test requested | A15XXX | A/D port A/D value (non-ratioed). | 0-255 |
| Next test requested | PA0-XX | Hex value representing state of A/D ports 0-7. | |
| Next test requested | PA1-XX | Hex value representing state of A/D ports 0-7. | |
| Next test requested | Thr-XXX | Decimal value of thermistor A/D reading. | 0-255 |
| Next test requested | rXXXX, FAIL | | Return to beginning of self-diagnosis. |

COMBINATION METERS

How to Proceed With Trouble Diagnosis

EKS00ACZ

1. Confirm the symptom or customer complaint.
2. Perform diagnosis according to diagnosis flow. Refer to [DI-17, "Diagnosis Flow"](#) .
3. According to the symptom chart, repair or replace the cause of the symptom.
4. Does the meter operate normally? If so, go to 5. If not, go to 2.
5. Inspection End.

Diagnosis Flow

EKS00AD0

1. CHECK WARNING INDICATOR ILLUMINATION

1. Turn ignition switch ON.
2. Make sure warning indicators (such as malfunction indicator lamp and oil pressure low/coolant temperature high warning indicator) illuminate.

Do warning indicators illuminate?

YES >> GO TO 2.

NO >> Check ignition power supply system of combination meter. Refer to [DI-18, "Power Supply and Ground Circuit Inspection"](#) .

2. CHECK SELF-DIAGNOSIS OPERATION OF COMBINATION METER

Perform combination meter self-diagnosis. Refer to [DI-13, "SELF-DIAGNOSIS FUNCTION"](#) .

Does self-diagnosis function operate?

YES >> GO TO 3.

NO >> Check combination meter power supply and ground circuit. Refer to [DI-18, "Power Supply and Ground Circuit Inspection"](#) .


3. CHECK ODOMETER OPERATION

Check segment display status of odometer.

Is the display normal?

YES >> GO TO 4.

NO >> Replace the combination meter. Refer to [IP-13, "COMBINATION METER"](#) .

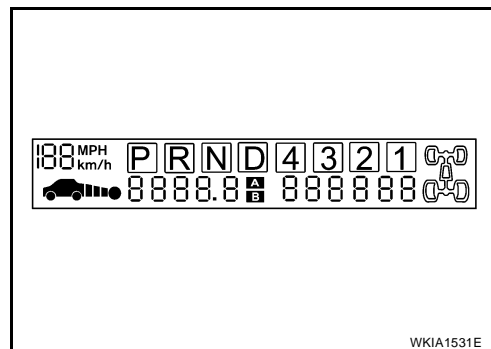


4. CHECK COMBINATION METER CIRCUIT

Check indication of each meter/gauge in self-diagnosis mode.

OK or NG

OK >> Go to [DI-19, "Symptom Chart"](#) .

NG >> Replace the combination meter. Refer to [IP-13, "COMBINATION METER"](#) .

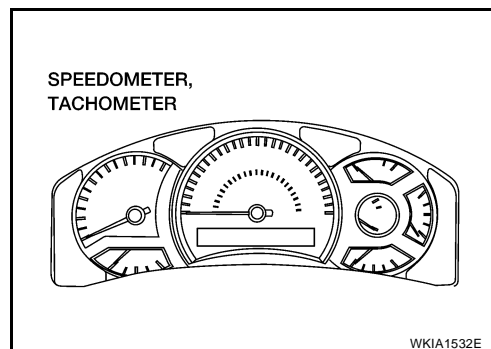

COMBINATION METERS

Power Supply and Ground Circuit Inspection

EKS00AD1

1. CHECK FUSES

Check for blown combination meter fuses.

| Unit | Power source | Fuse No. |
|-------------------|-----------------------------|----------|
| Combination meter | Battery | 19 |
| | Ignition switch ON or START | 14 |
| | Ignition switch ACC or ON | 4 |

Refer to [DI-10, "Wiring Diagram — METER —"](#).

OK or NG


OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).

2. CHECK POWER SUPPLY CIRCUIT

1. Disconnect combination meter connector.
2. Check voltage between combination meter harness connector terminals and ground.

| Terminals | | (-) | Ignition switch position | | |
|-----------|----------|--------|--------------------------|-----------------|-----------------|
| (+) | | | OFF | ACC | ON |
| Connector | Terminal | | | | |
| M24 | 1 | Ground | 0V | Battery voltage | Battery voltage |
| | 8 | | Battery voltage | Battery voltage | Battery voltage |
| | 24 | | 0V | 0V | Battery voltage |

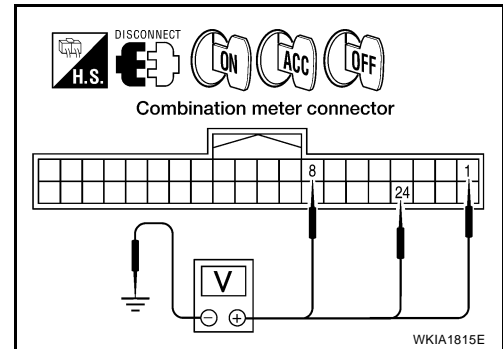

OK or NG


OK >> GO TO 3.

NG >> Check the harness for open between combination meter and fuse.

3. CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between combination meter harness connector terminal and ground.

| Terminals | | (-) | Continuity |
|-----------|----------|--------|------------|
| (+) | | | |
| Connector | Terminal | | |
| M24 | 17 | Ground | Yes |

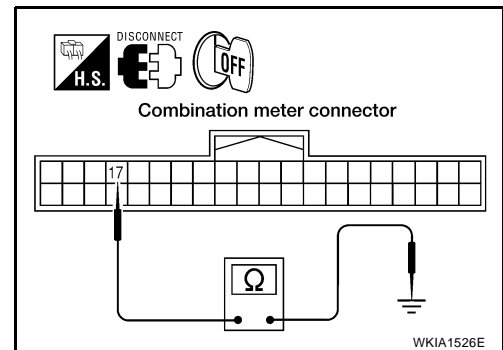

OK or NG

OK >> Inspection End.

NG >> Repair harness or connector.

COMBINATION METERS

Symptom Chart

EKS00AD2

| Trouble phenomenon | Possible cause |
|--|--|
| Improper tachometer indication. | Refer to DI-19, "Engine Speed Signal Inspection" . |
| Improper water temperature gauge indication. | Refer to DI-19, "Water Temperature Signal Inspection" . |
| Improper speedometer or odometer. | Refer to DI-19, "Vehicle Speed Signal Inspection" . |
| Improper engine oil pressure gauge indication. | Refer to DI-20, "Engine Oil Pressure Signal Inspection" . |
| Improper A/T oil temperature gauge indication. | Refer to AT-129, "DTC P1710 A/T FLUID TEMPERATURE SENSOR CIRCUIT" . |
| Improper voltage meter indication. | Refer to IP-13, "COMBINATION METER" . |
| Improper fuel gauge indication. | Refer to DI-22, "Fuel Level Sensor Unit Inspection" . |
| Fuel warning lamp indication is irregular. | |
| More than one gauge does not give proper indication. | Replace the combination meter. Refer to IP-13, "COMBINATION METER" . |
| Improper A/T position indication. | Refer to DI-40, "A/T INDICATOR" . |
| Illumination control does not operate properly. | Refer to LT-156, "ILLUMINATION" . |

Vehicle Speed Signal Inspection

EKS00AD3

1. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF-DIAGNOSIS

Perform ABS actuator and electric unit (control unit) self-diagnosis. Refer to [BRC-23, "SELF-DIAGNOSIS"](#) .
Self-diagnostic result content

No malfunction detected>>Replace the combination meter. Refer to [IP-13, "COMBINATION METER"](#) .
 Malfunction detected>>Perform "Diagnostic Procedure" for displayed DTC.

Water Temperature Signal Inspection

EKS00AD4

1. CHECK ECM SELF-DIAGNOSIS

Perform ECM self-diagnosis. Refer to [EC-124, "SELF-DIAG RESULTS MODE"](#) .
Self-diagnostic result content

No malfunction detected>>Replace the combination meter. Refer to [IP-13, "COMBINATION METER"](#) .
 Malfunction detected>>Perform "Diagnostic procedure" for displayed DTC.

Engine Speed Signal Inspection

EKS00AD5

1. CHECK ECM SELF-DIAGNOSIS

Perform ECM self-diagnosis. Refer to [EC-124, "SELF-DIAG RESULTS MODE"](#) .
Self-diagnostic result content

No malfunction detected>>Replace the combination meter. Refer to [IP-13, "COMBINATION METER"](#) .
 Malfunction detected>>Perform "Diagnostic procedure" for displayed DTC.

COMBINATION METERS


EKS00AD6

Engine Oil Pressure Signal Inspection

1. CHECK OIL PRESSURE SENSOR SIGNAL

1. Turn ignition switch ON.
2. Check voltage between combination meter harness connector M24 terminal 20 and ground.

| Terminals | | (-) | Condition | Voltage (V) |
|-----------|----------|--------|---|-------------|
| (+) | | | | |
| Connector | Terminal | | | |
| M24 | 20 | Ground | When ignition switch is in ON position. (Engine stopped.) | Yes |
| | | | Engine running. (Idle speed) | Yes |

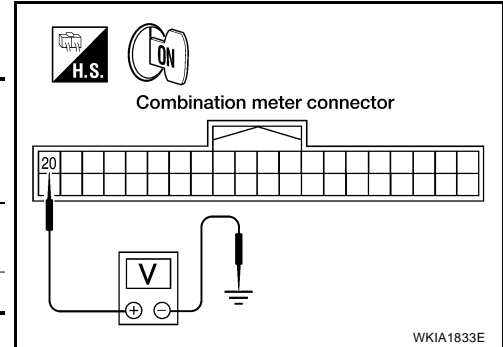

OK or NG

- OK >> Replace combination meter. Refer to [IP-13, "COMBINATION METER"](#).
- NG >> GO TO 2.


2. CHECK OIL PRESSURE SENSOR SIGNAL

1. Turn ignition switch OFF.
2. Disconnect oil pressure sensor connector F4.
3. Turn ignition switch ON.
4. Check voltage between combination meter harness connector M24 terminal 22 and ground.

Voltage : Approx. 5V

OK or NG

- OK >> GO TO 3.
- NG >> Replace combination meter. Refer to [IP-13, "COMBINATION METER"](#).

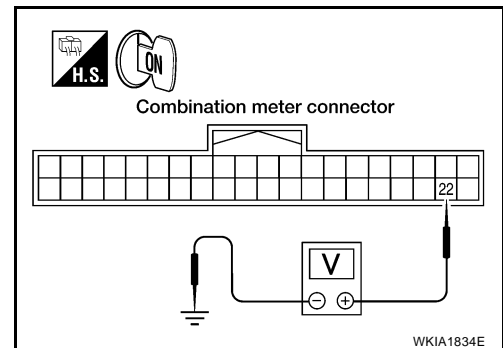

3. CHECK OIL PRESSURE SENSOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination connector M24.
3. Check continuity between combination meter harness connector M24 terminal 22 and oil pressure sensor harness connector F4 terminal 1.


Continuity should exist.

4. Check continuity between combination meter harness connector M24 terminal 22 and ground.

Continuity should not exist.

OK or NG

- OK >> GO TO 4.
- NG >> Repair harness or connector.

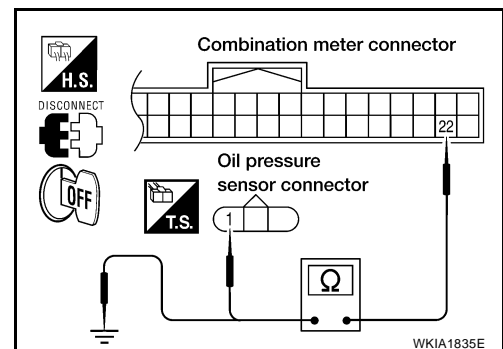

COMBINATION METERS

4. CHECK OIL PRESSURE SENSOR SIGNAL CIRCUIT

1. Check continuity between combination meter harness connector M24 terminal 20 and oil pressure sensor harness connector F4 terminal 2.


Continuity should exist.

2. Check continuity between combination meter harness connector M24 terminal 20 and ground.

Continuity should not exist.

OK or NG

- OK >> GO TO 5.
- NG >> Repair harness or connector.

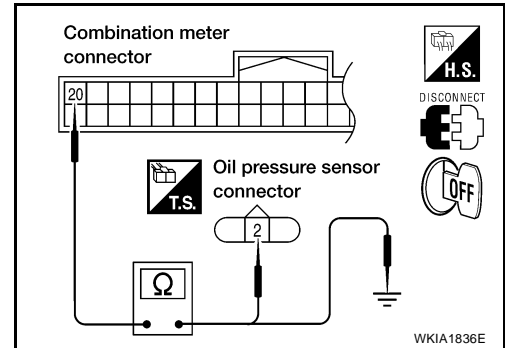


5. CHECK OIL PRESSURE SENSOR GROUND CIRCUIT

Check continuity between combination meter harness connector M24 terminal 16 and oil pressure sensor harness connector F4 terminal 3.

Continuity should exist.

OK or NG

- OK >> Replace oil pressure sensor.
- NG >> Repair harness or connector.

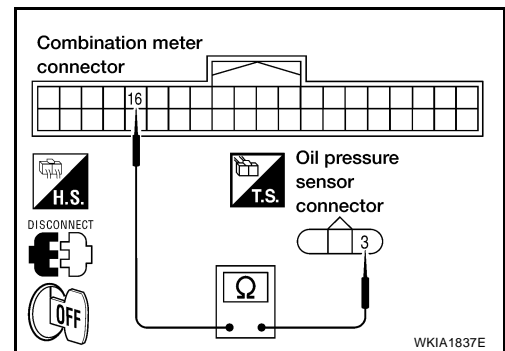

A
B
C
D
E
F
G
H
I
J
L
M

DI

COMBINATION METERS

EKS00AD7

Fuel Level Sensor Unit Inspection

FUEL LEVEL SENSOR UNIT

The following symptoms do not indicate a malfunction.

- Depending on vehicle position or driving circumstance, the fuel in the tank shifts and the indication may fluctuate.
- If the vehicle is fueled with the ignition switch ON, the indication will update slowly.
- If the vehicle is tilted when the ignition switch is turned ON, fuel in the tank may flow to one direction resulting in a change of reading.

LOW-FUEL WARNING LAMP

Depending on vehicle posture or driving circumstances, the fuel level in the tank varies, and the warning lamp ON timing may be changed.

1. CHECK HARNESS CONNECTOR

Check combination meter and fuel level sensor unit and fuel pump terminals (meter-side, and harness-side) for poor connection.

OK or NG

- OK >> GO TO 2.
- NG >> Repair or replace terminals or connectors.


2. CHECK HARNESS CONNECTOR OUTPUT SIGNAL

1. Disconnect fuel level sensor unit and fuel pump connector.
2. Turn ignition switch ON.
3. Check voltage between combination meter harness connector M24 terminal 15 and ground.

Battery voltage should exist.

OK or NG

- OK >> GO TO 3.
- NG >> Replace the combination meter. Refer to [IP-13, "COMBINATION METER"](#).

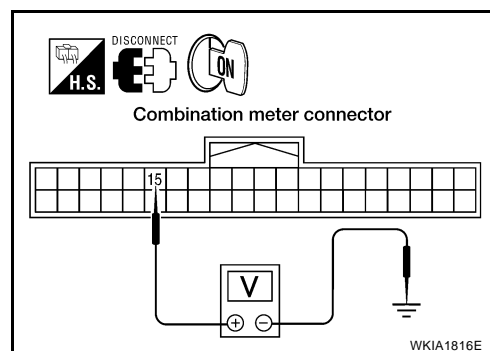

3. CHECK HARNESS FOR OPEN OR SHORT CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector M24.
3. Check continuity between combination meter harness connector M24 (B) terminal 15 and fuel level sensor unit and fuel pump harness connector C5 (A) terminal 2.


Continuity should exist.

4. Check continuity between fuel level sensor unit and fuel pump harness connector C5 (A) terminal 2 and ground.

Continuity should not exist.

OK or NG

- OK >> GO TO 4.
- NG >> Repair harness or connector.

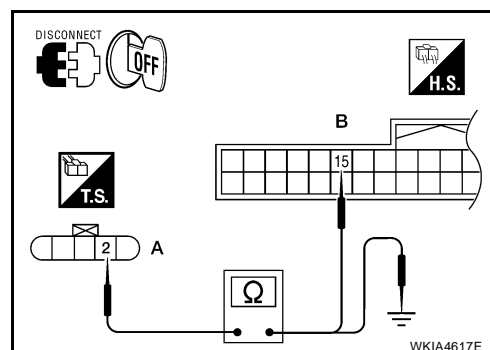

COMBINATION METERS

4. CHECK FUEL LEVEL SENSOR CIRCUIT

1. Check continuity between combination meter harness connector M24 (B) terminal 16 and fuel level sensor unit and fuel pump harness connector C5 (A) terminal 5.


Continuity should exist.

2. Check continuity between fuel level sensor unit and fuel pump harness connector C5 (A) terminal 5 and ground.

Continuity should not exist.

OK or NG

- OK >> GO TO 5.
- NG >> Repair harness or connector.

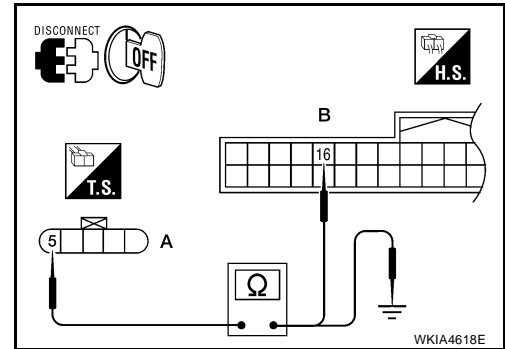

5. CHECK FUEL LEVEL SENSOR UNIT

Check the fuel level sensor unit. Refer to [DI-25, "FUEL LEVEL SENSOR UNIT CHECK"](#).

OK or NG

- OK >> GO TO 6.
- NG >> Replace the fuel level sensor unit. Refer to [FL-6, "Removal and Installation"](#).

6. CHECK INSTALLATION CONDITION

Check fuel level sensor unit installation, and determine whether the float arm interferes or binds with any of the internal components in the fuel tank.

OK or NG

- OK >> Replace the combination meter. Refer to [IP-13, "COMBINATION METER"](#).
- NG >> Install the fuel level sensor unit properly.

A
B
C
D
E
F
G
H
I
J
L
M

DI

COMBINATION METERS

Fuel Gauge Fluctuates, Indicates Wrong Value, or Varies

EKS00AD8

1. CHECK FUEL GAUGE FLUCTUATION

Test drive vehicle to see if gauge fluctuates only during driving or just before or just after stopping.

Does the indication value vary only during driving or just before or just after stopping?

YES >> The fluctuation may be caused by fuel level change in the fuel tank. Condition is normal.

NO >> Ask the customer about the situation when the symptom occurs in detail, Refer to [DI-22, "Fuel Level Sensor Unit Inspection"](#).

Fuel Gauge Does Not Move to Full-position

EKS00AD9

1. CHECK POINTER MOVEMENT TO FULL-POSITION

Does it take a long time for the pointer to move to full-position?

YES or NO

YES >> GO TO 2.

NO >> GO TO 3.

2. CHECK IGNITION SWITCH POSITION

Was the vehicle fueled with the ignition switch ON?

YES or NO

YES >> Be sure to fuel the vehicle with the ignition switch OFF. Otherwise, it will take a long time for the pointer to move to full-position because of the characteristic of the fuel gauge.

NO >> GO TO 3.

3. OBSERVE VEHICLE POSITION

Is the vehicle parked on an incline?

YES or NO

YES >> Check the fuel level indication with vehicle on a level surface.

NO >> GO TO 4.

4. CHECK POINTER MOVEMENT TO EMPTY-POSITION

During driving, does the fuel gauge move gradually toward empty-position?

YES or NO

YES >> Check the fuel level sensor unit. Refer to [DI-25, "FUEL LEVEL SENSOR UNIT CHECK"](#).

NO >> Check fuel level sensor unit installation, and determine whether the float arm interferes or binds with any of the internal components in the fuel tank.

COMBINATION METERS

Electrical Components Inspection FUEL LEVEL SENSOR UNIT CHECK

EKS00ADA


For removal, refer to [FL-6, "Removal and Installation"](#) .

Check Fuel Level Sensor Unit and Fuel Pump

Check resistance between fuel level sensor unit and fuel pump connector terminals 2 and 5.

| Terminals | | Float position | | mm (in) | Resistance value Ω (Approx.) |
|-----------|---|----------------|-------|---------------|-------------------------------------|
| 2 | 5 | *1 | Empty | 25.86 (1.02) | 81.66 |
| | | *2 | Full | 254.6 (10.02) | 6.98 |

*1 and *2: When float rod is in contact with stopper.

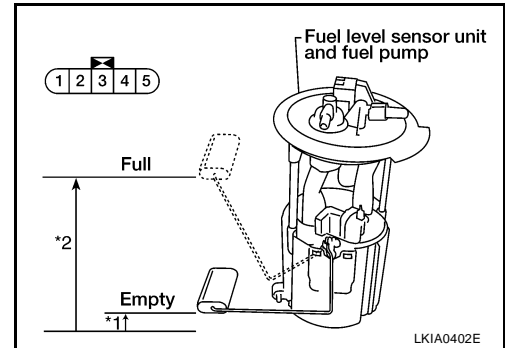

Removal and Installation of Combination Meter

EKS00ADB

Refer to [IP-13, "COMBINATION METER"](#) .

A
B
C
D
E
F
G
H
I
J
DI
L
M

DI

COMPASS AND THERMOMETER

COMPASS AND THERMOMETER


PF2:24835

System Description

EKS00D78

This unit displays the following items:

- Earth magnetism and heading direction of vehicle.
- Outside air temperature.
- Caution for frozen road surfaces.

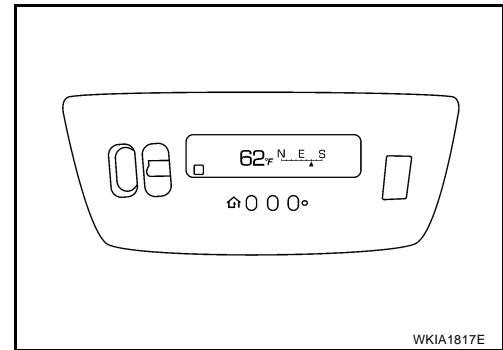

OUTSIDE TEMPERATURE DISPLAY

Push the mode switch when the ignition switch is in the ON position. The outside temperature will be displayed in "°F".

- Selecting the indication range
Push the mode switch to change from °F → °C → OFF → °F.
- The indicated temperature on the thermometer is not readily affected by engine heat. It changes only when one of the following conditions is present.
 - The temperature detected by the ambient sensor is lower than the indicated temperature on the thermometer.
 - The vehicle speed is greater than 20 km/h (12 MPH).
(This is to prevent the indicated temperature from being affected by engine heat during low-speed driving.)
 - The ignition switch has been turned to the OFF position for more than 2 hours. (The engine is cold.)

DIRECTION DISPLAY








Push the mode switch when the ignition switch is in the ON position. The direction will be displayed.

COMPASS AND THERMOMETER

Wiring Diagram — COMPAS —

EKS00D79

DI-COMPAS-01

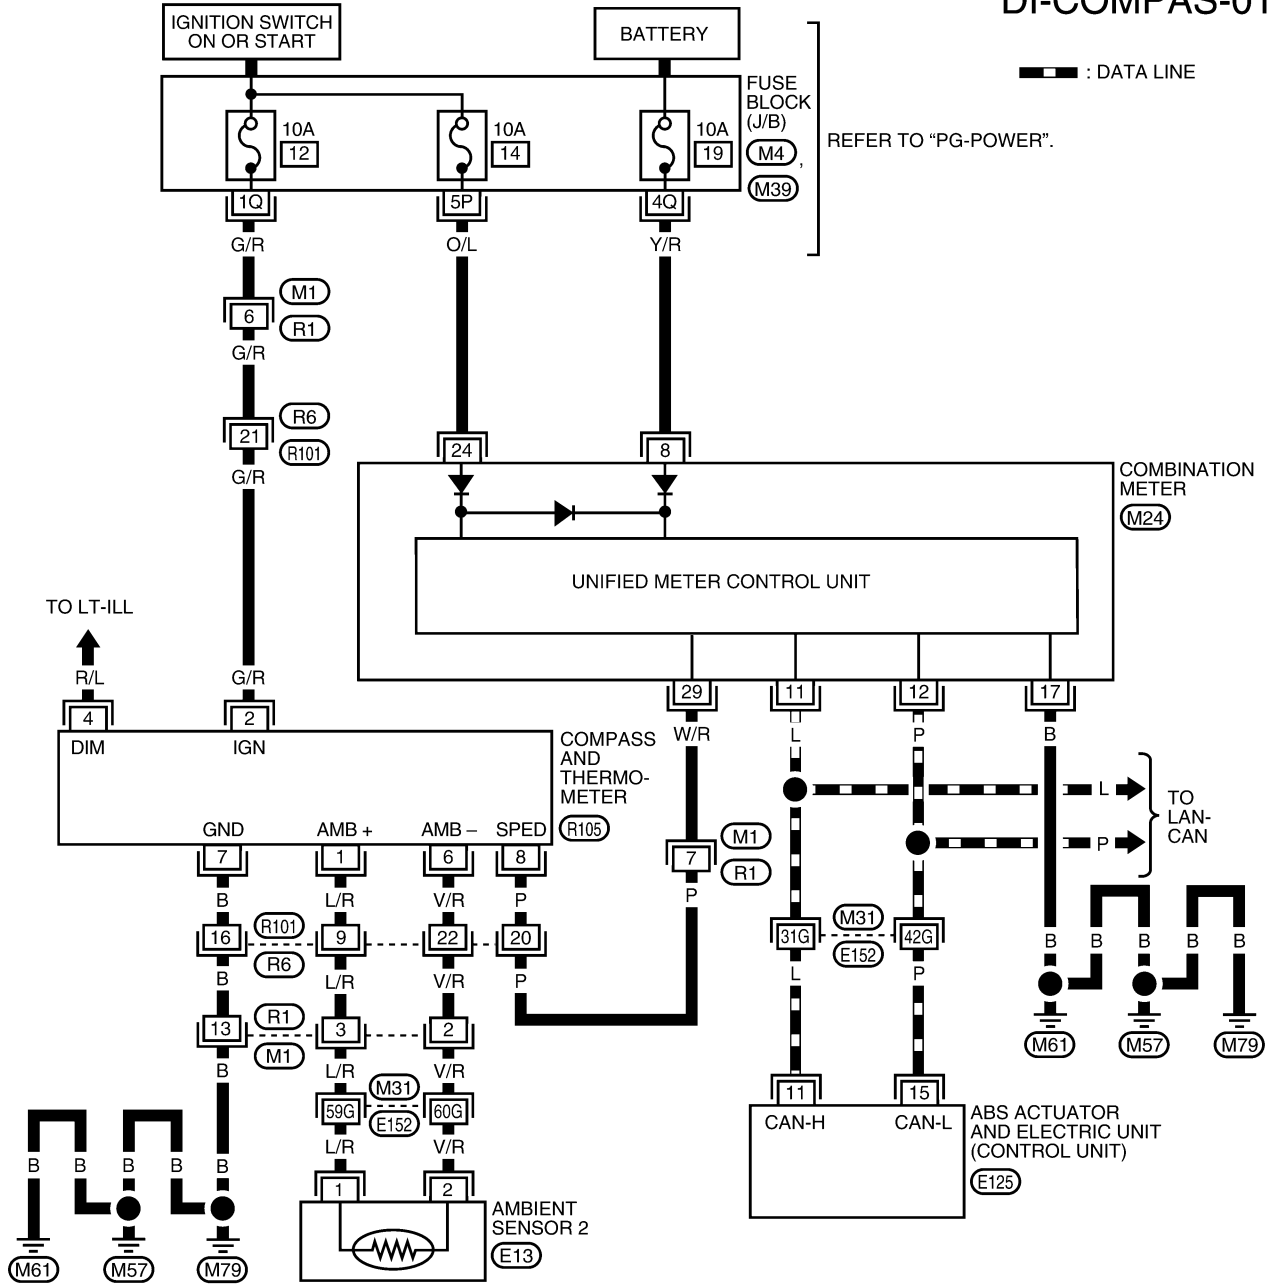

REFER TO THE FOLLOWING.

(M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3710E

COMPASS AND THERMOMETER

EKS00D7A

Trouble Diagnoses

PRELIMINARY CHECK FOR THERMOMETER

1. COOL DOWN CHECK

1. Turn the ignition switch to the ON position.
2. Cool down ambient sensor 2 with water or ice.

Does the indicated temperature drop?

YES >> GO TO 2.

NO >> The system is malfunctioning. Refer to [DI-28, "INSPECTION/COMPASS AND THERMOMETER"](#)

2. WARM UP CHECK

1. Leave the vehicle for 10 minutes.
2. With the ignition switch in the ON position, disconnect and reconnect ambient sensor 2 connector.

Does the indicated temperature rise?

YES >> The system is OK.

NO >> The system is malfunctioning. Refer to [DI-28, "INSPECTION/COMPASS AND THERMOMETER"](#)

NOTE:

The indicated temperature on the thermometer is not readily affected by engine heat. It changes only when one of the following conditions is present.

- The temperature detected by ambient sensor 2 is lower than the indicated temperature on the thermometer.
- The vehicle speed is greater than 20 km/h (13 MPH).
(This is to prevent the indicated temperature from being affected by engine heat during low-speed driving.)
- The ignition switch has been turned to the OFF position for more than 2 hours. (The engine is cold.)

INSPECTION/COMPASS AND THERMOMETER

| Symptom | Possible causes | Repair order |
|--|--|--|
| No display at all | 1. 10A fuse 2. Ground circuit 3. Compass and thermometer | 1. Check 10A fuse [No. 12, located in fuse block (J/B)]. Turn the ignition switch ON and verify that battery positive voltage is at terminal 2 of compass and thermometer. 2. Check ground circuit for compass and thermometer. 3. Replace compass and thermometer. |
| Forward direction indication slips off the mark or incorrect | 1. In manual correction mode (Bar and display vanish) 2. Zone variation change is not done | 1. Drive the vehicle and turn at an angle of 90°. 2. Perform the zone variation change. |
| Compass reading remains unchanged | 1. Vehicle speed signal is not entered 2. Compass and thermometer | 1. Check harness for open or short between combination meter terminal 29 and compass and thermometer terminal 8. 2. Replace compass and thermometer. |
| Displays wrong temperature when ambient temperature is between -40°C (-40°F) and 55°C (130°F) (See NOTE above) | 1. Check operation 2. Ambient sensor circuit 3. Vehicle speed signal is not entered 4. Ambient sensor 2 5. Compass and thermometer | 1. Perform preliminary check shown above. 2. Check harness for open or short between ambient sensor 2 and compass and thermometer. 3. Check harness for open or short between combination meter terminal 29 and compass and thermometer terminal 8. 4. Replace ambient sensor 2. 5. Replace compass and thermometer. |
| Displays SC or OC | 1. Ambient sensor circuit 2. Ambient sensor 2 3. Compass and thermometer | 1. Check harness for open or short between ambient sensor 2 and compass and thermometer. 2. Replace ambient sensor 2. 3. Replace compass and thermometer. |


COMPASS AND THERMOMETER

EKS00D7B

Calibration Procedure for Compass

The difference between magnetic North and geographical North can sometimes be great enough to cause false compass readings. In order for the compass to operate accurately in a particular zone, it must be calibrated using the following procedure.

Zone Variation Chart

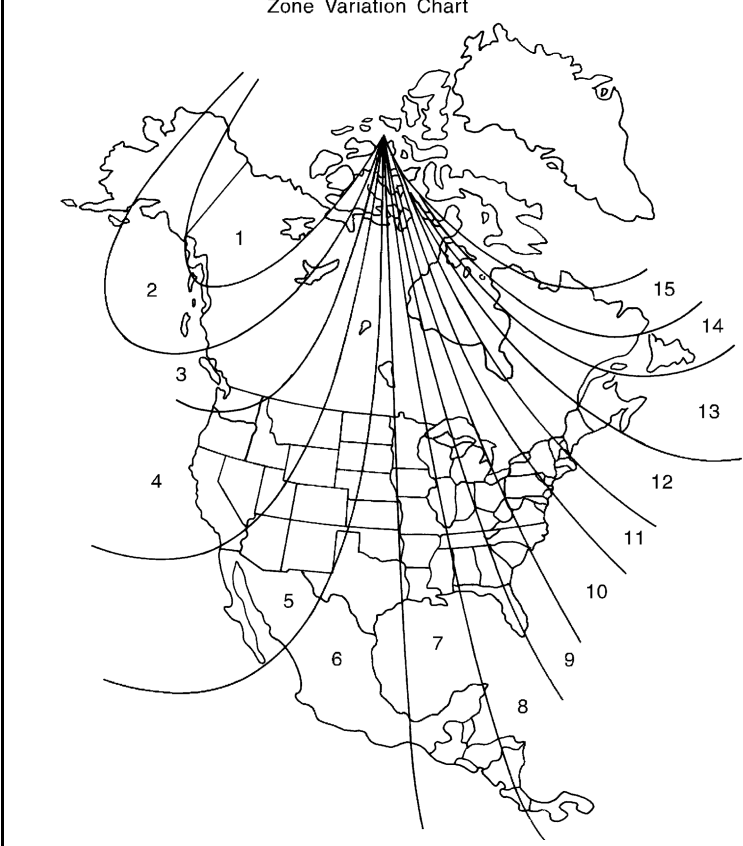

1. Determine your location on the zone map. Record your zone number.

2. Turn the ignition switch to the ON position.

3. Press and hold the mode switch for about 5 seconds. The current zone number will appear in the display.

4. Press the mode switch repeatedly until the desired number appears in the display.


Once the desired zone number is displayed, stop pressing the mode switch and the display will show a compass direction after a few seconds.

NOTE: Use zone number 5 for Hawaii.

WKIA3604E

CORRECTION FUNCTIONS OF COMPASS

The direction display is equipped with automatic correction function. If the direction is not shown correctly, carry out initial correction.

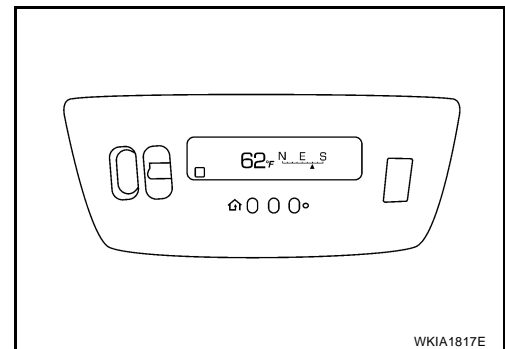

INITIAL CORRECTION PROCEDURE FOR COMPASS

1. Pushing the mode switch for about 10 seconds will enter the initial correction mode. The compass display will begin to flash.
2. Turn the vehicle slowly in an open, safe place. The initial correction is completed in approximately one and a half turns.

NOTE:

In places where the terrestrial magnetism is extremely disturbed, the initial correction may start automatically.


WARNING LAMPS

WARNING LAMPS

PF:24814

Schematic

EKS00ADG

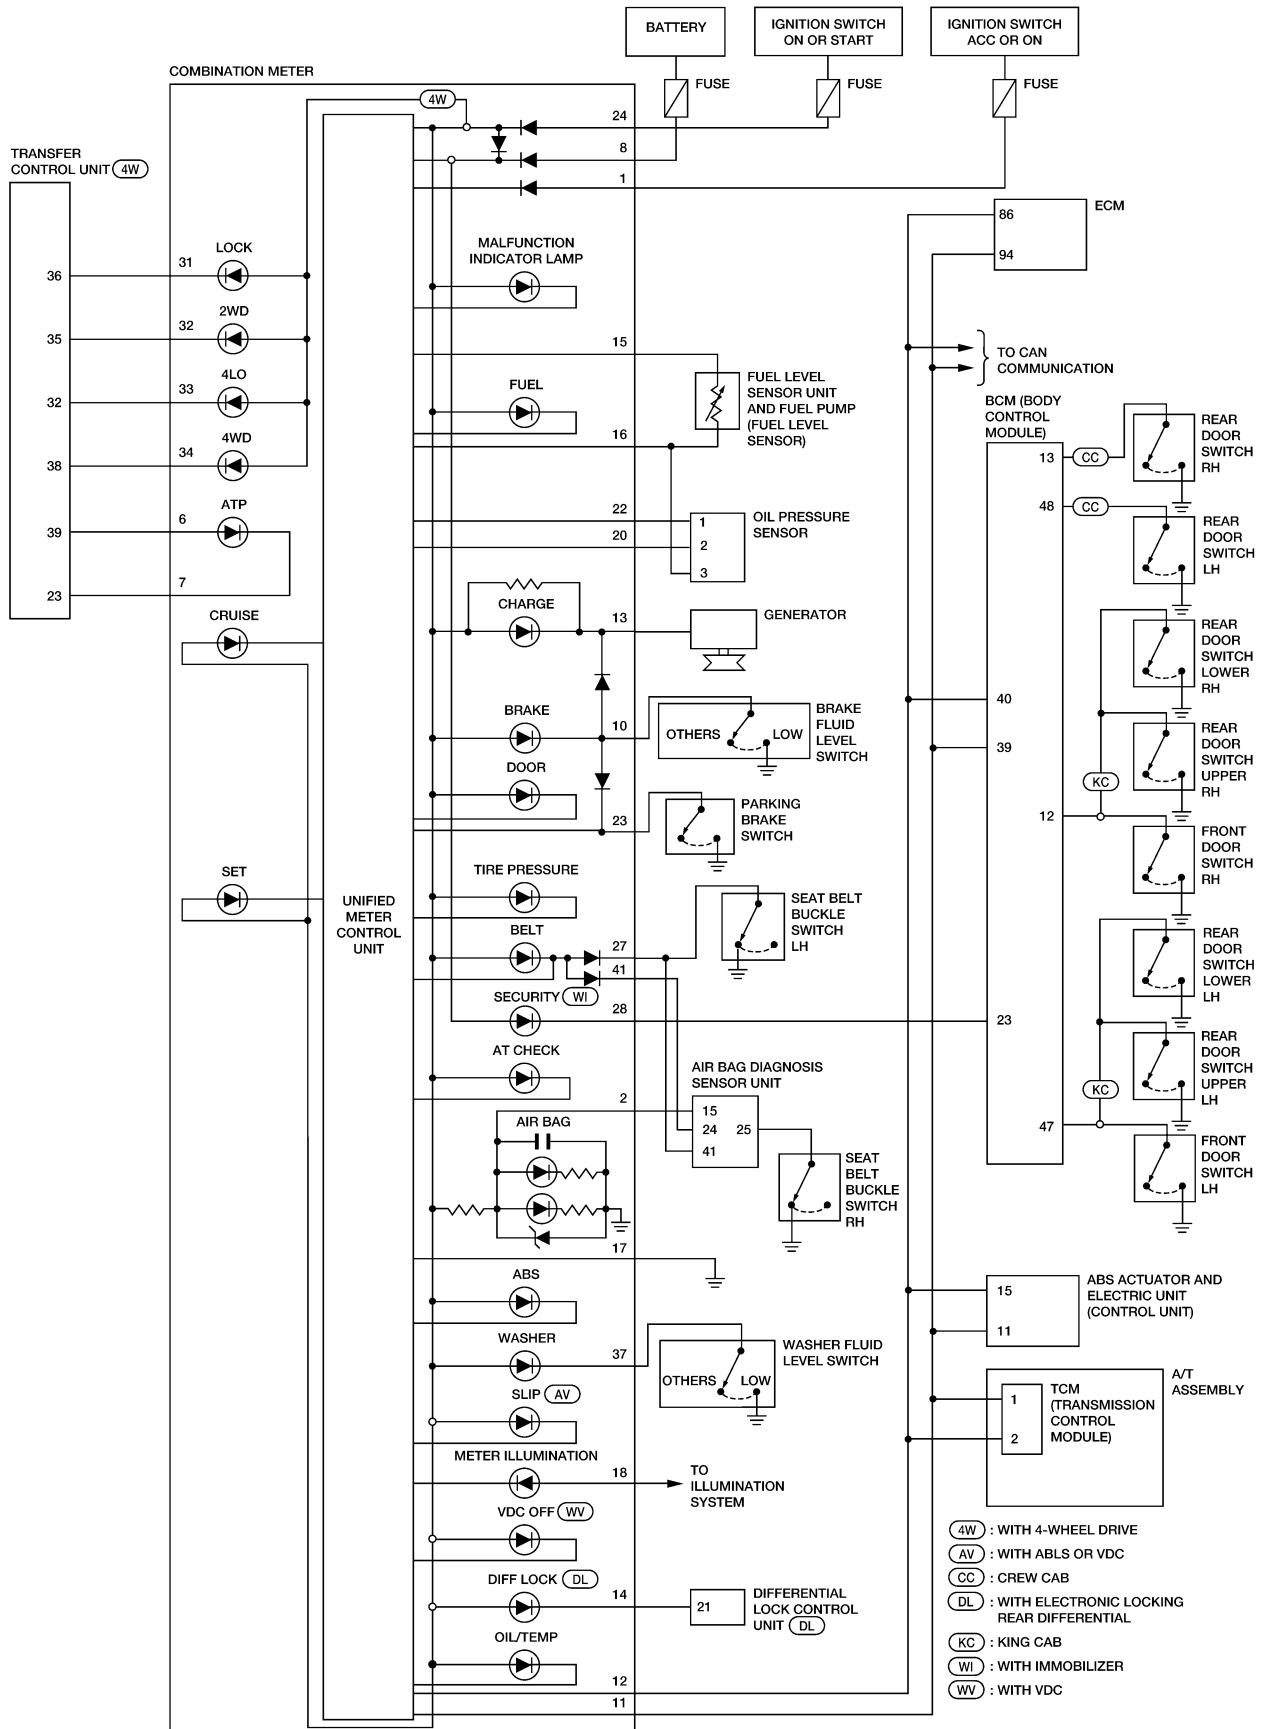


WKWA3711E

WARNING LAMPS

Wiring Diagram — WARN —





EKS00ADH

DI-WARN-01

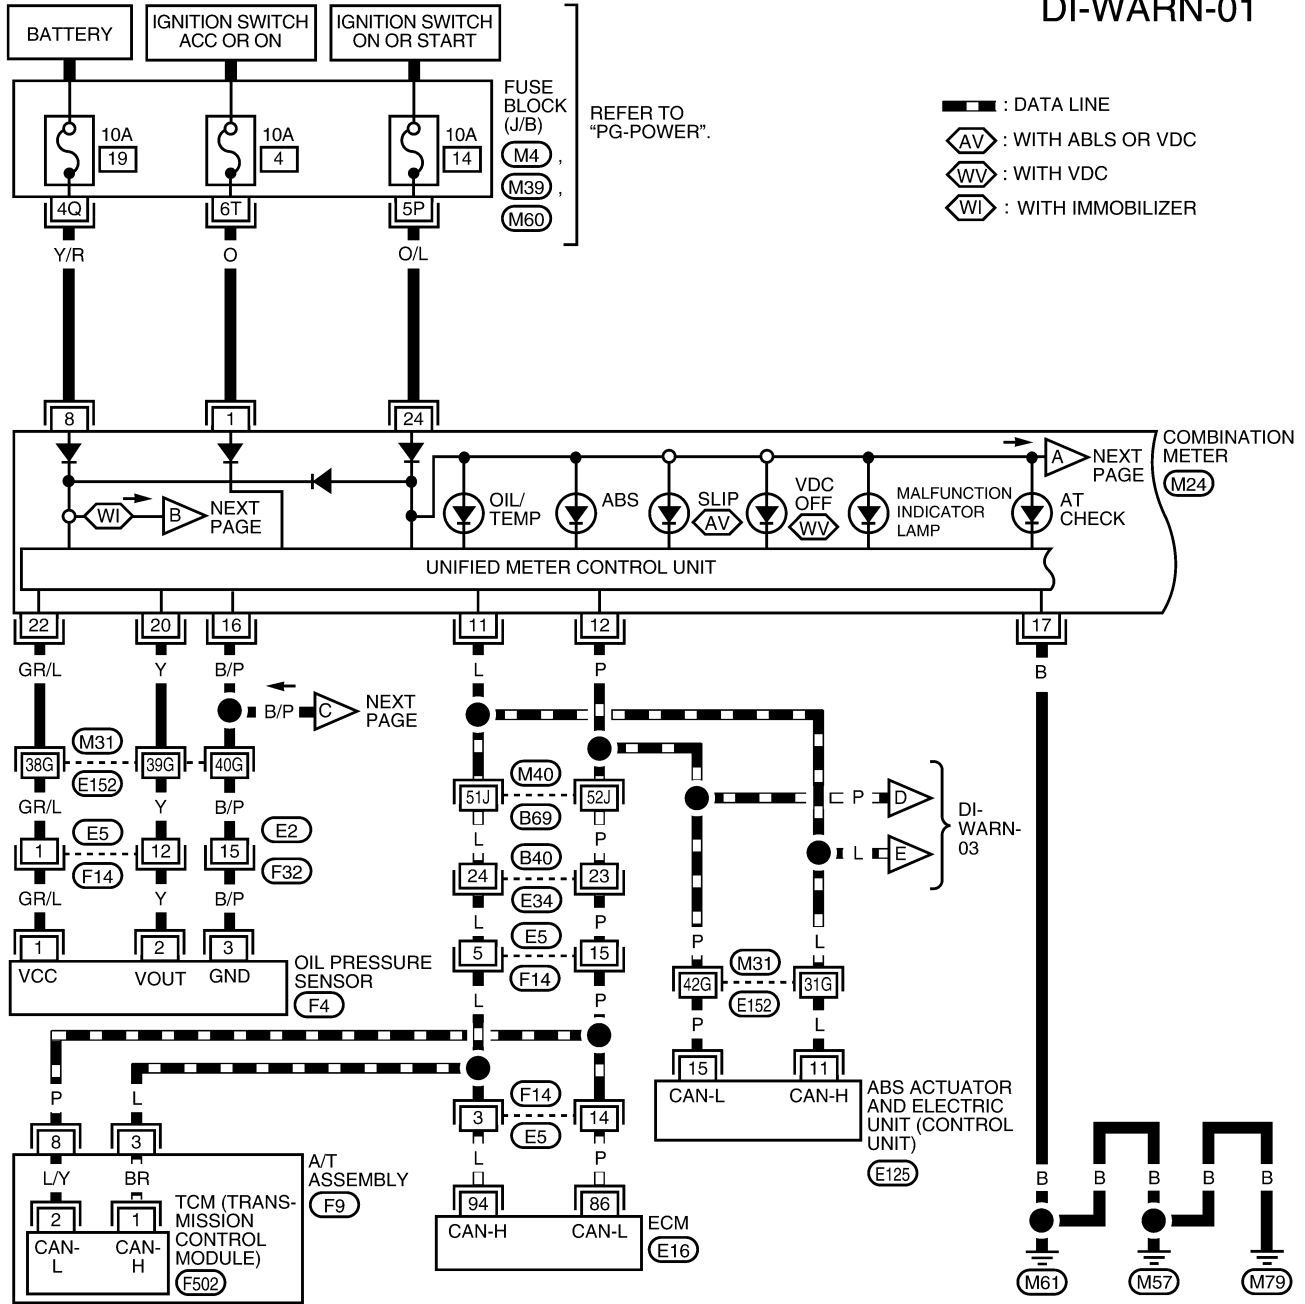

A
B
C
D
E
F
G
H
I
J
K
L
M


DI




*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

WARNING LAMPS

DI-WARN-02

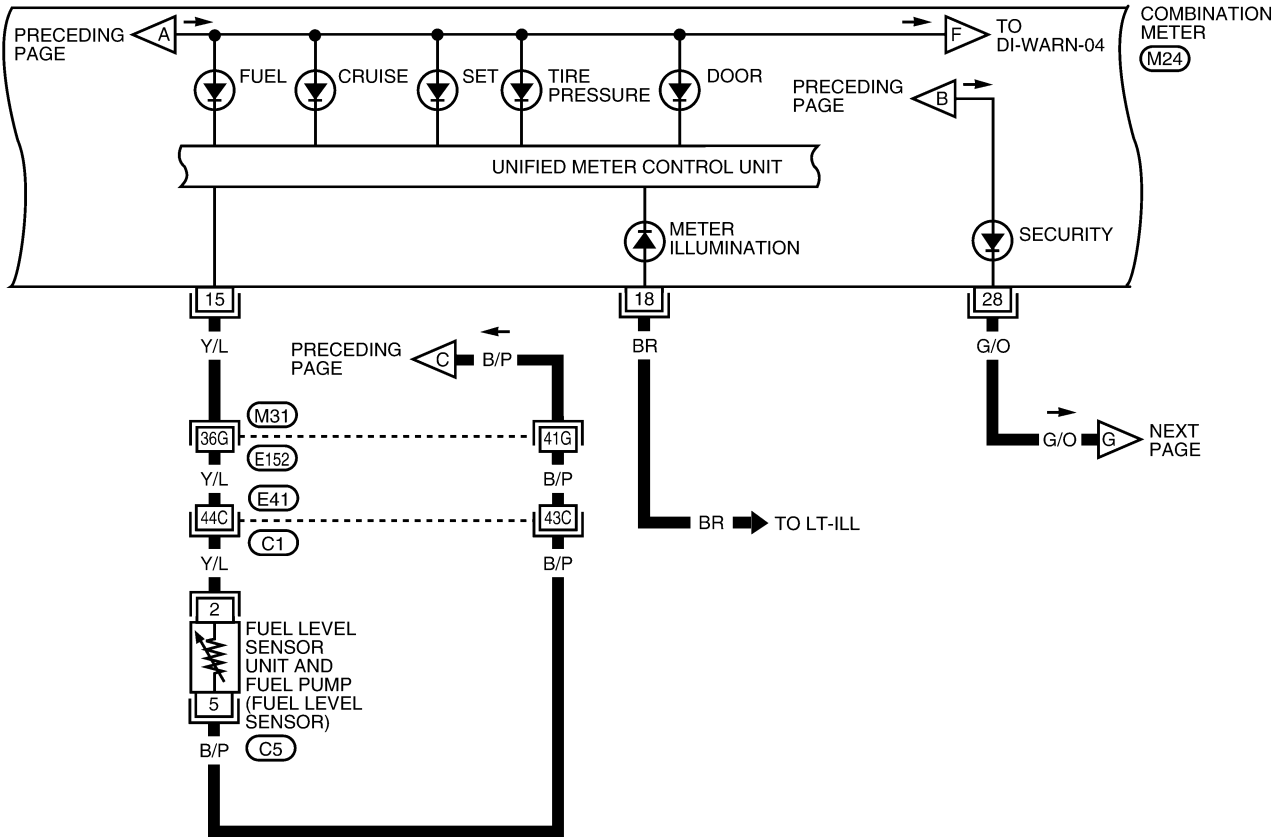

| | | | | | | | | | | | | | | | | | | | | |
|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|-----|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | M24 |
| 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 | W |





REFER TO THE FOLLOWING.
 (M31), (C1) - SUPER
 MULTIPLE JUNCTION (SMJ)

WKWA3713E

WARNING LAMPS

DI-WARN-04

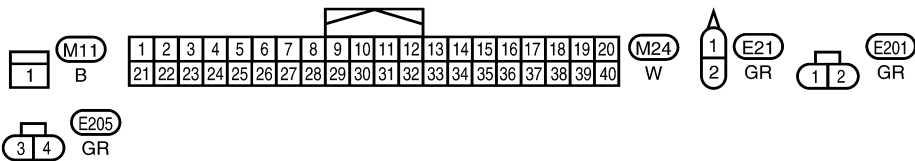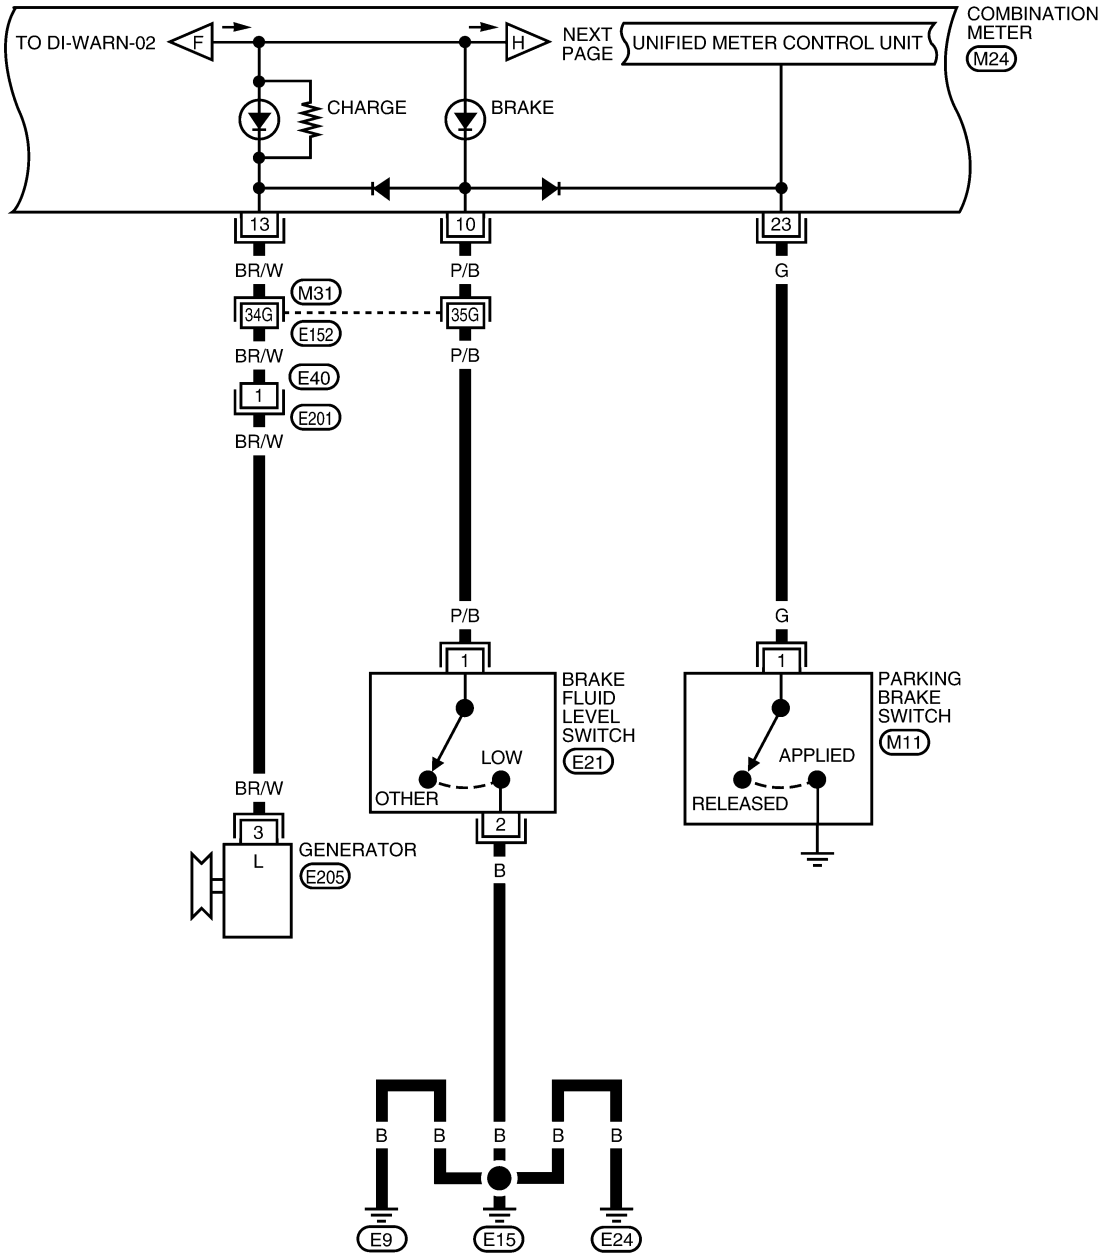



REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3715E

WARNING LAMPS

DI-WARN-05

DL : WITH ELECTRONIC LOCKING REAR DIFFERENTIAL
 4W : WITH 4-WHEEL DRIVE

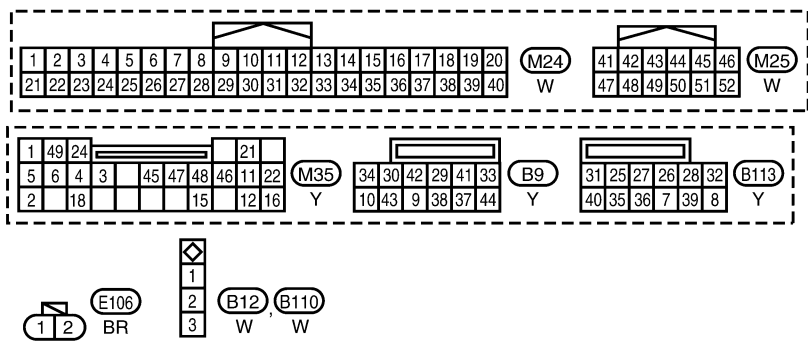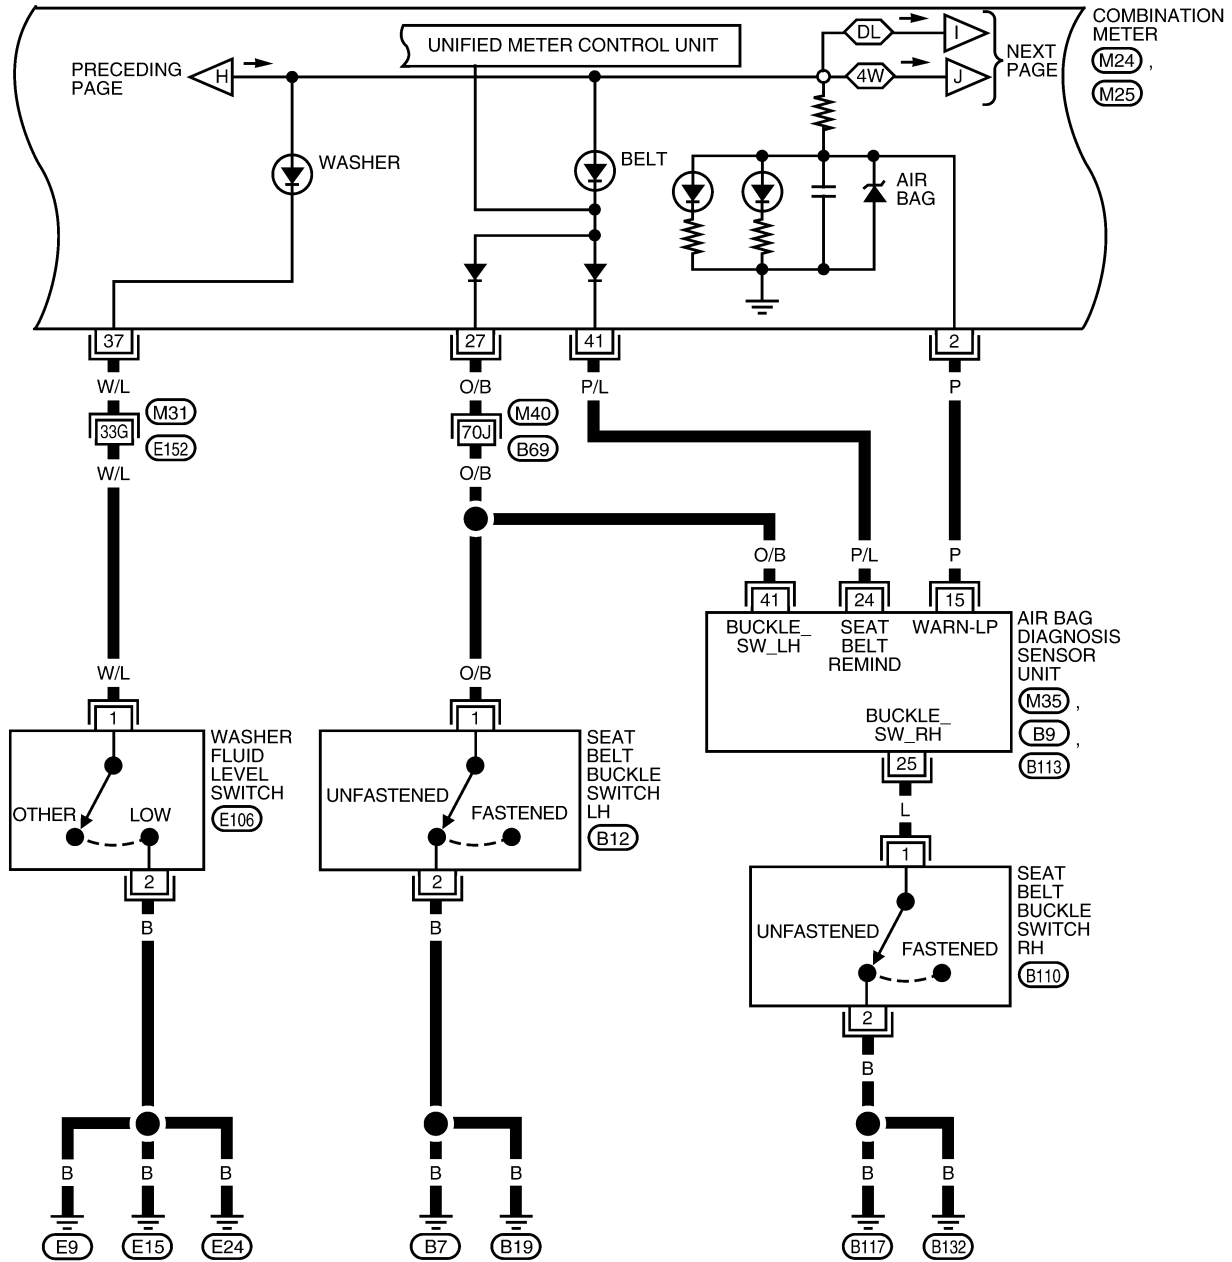



REFER TO THE FOLLOWING.
 M31, M40 - SUPER
 MULTIPLE JUNCTION (SMJ)

WKWA3716E

WARNING LAMPS

4WD Models

DI-WARN-06

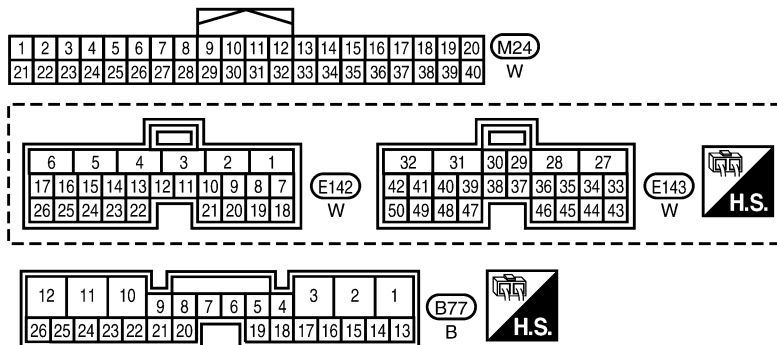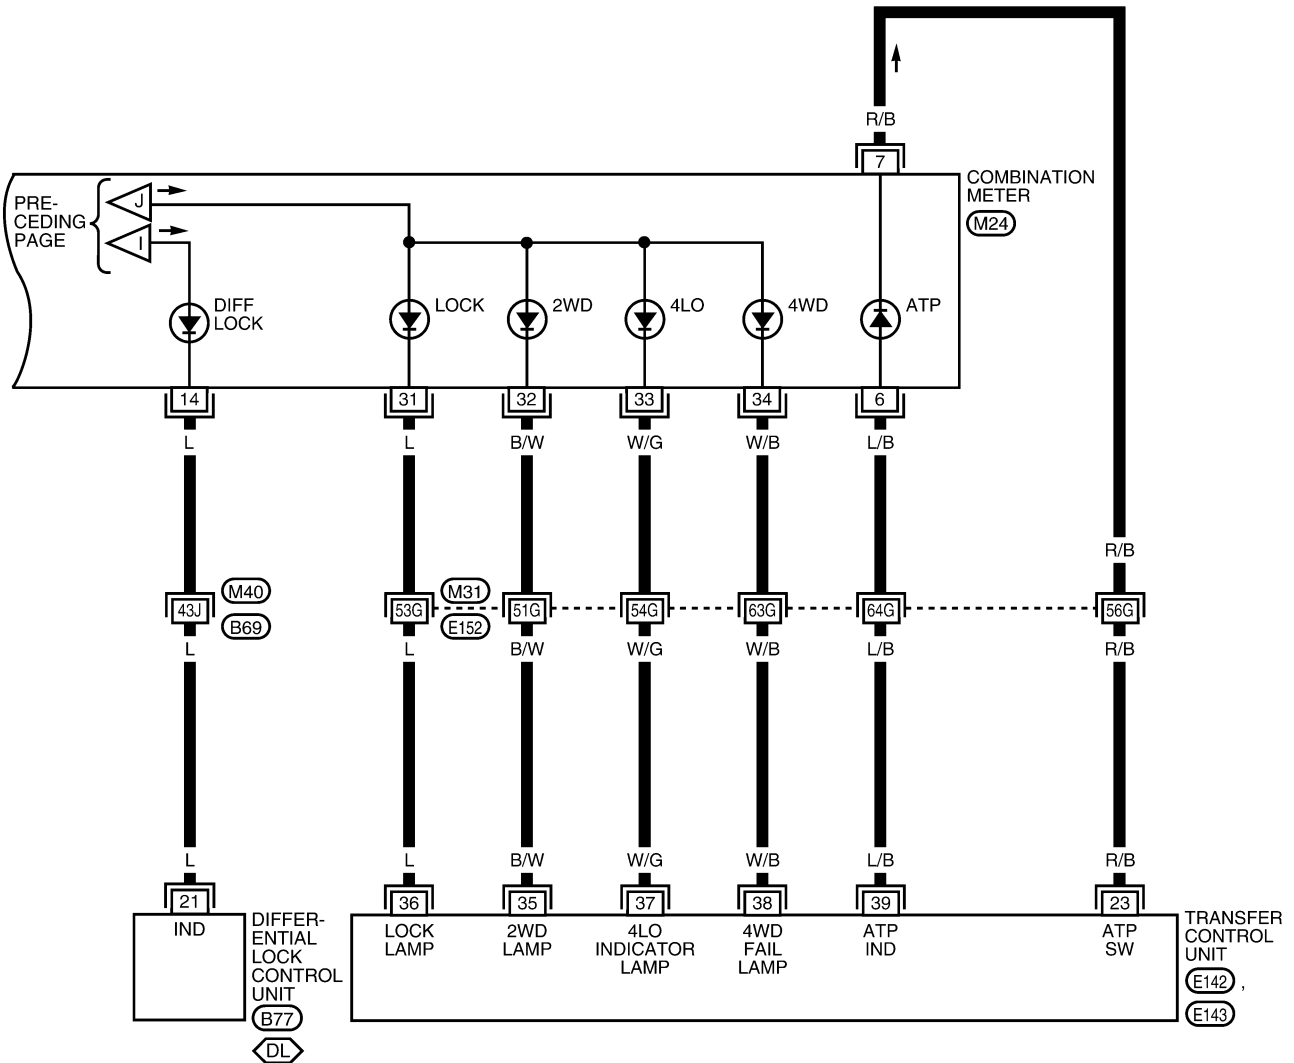

REFER TO THE FOLLOWING.
 (M31), (M40) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3717E

WARNING LAMPS


EKS00D7C

Oil Pressure Warning Lamp Stays Off (Ignition Switch ON)

1. CHECK OIL PRESSURE SENSOR SIGNAL

1. Turn ignition switch ON.
2. Check voltage between combination meter harness connector M24 terminal 20 and ground.

| Terminals | | Condition | Voltage (V) |
|-----------|----------|--|-------------|
| (+) | (-) | | |
| Connector | Terminal | | |
| M24 | 20 | When ignition switch is in ON position. (Engine stopped) | Yes |
| | | Engine running. (Idle speed) | Yes |

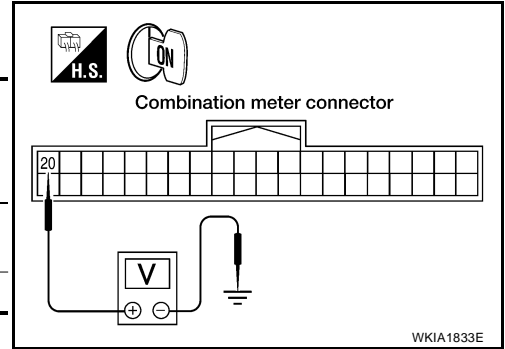

OK or NG

- OK >> GO TO 2.
- NG >> GO TO 3.


2. CHECK OIL PRESSURE SENSOR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector M24 and oil pressure sensor connector F4.
3. Check continuity between combination meter harness connector M24 terminal 16 and oil pressure sensor harness connector F4 terminal 3.

Continuity should exist.

OK or NG

- OK >> Replace the combination meter. Refer to [IP-13, "COMBINATION METER"](#).
- NG >> Repair harness or connector.

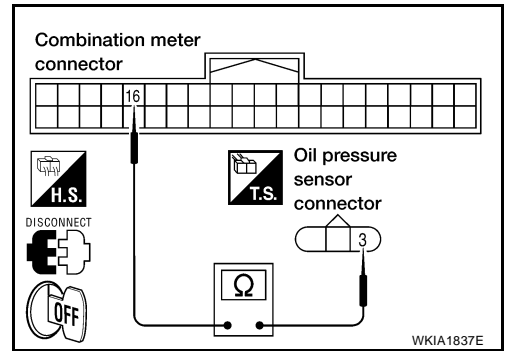


3. CHECK OIL PRESSURE SENSOR REFERENCE VOLTAGE

1. Turn ignition switch OFF.
2. Disconnect oil pressure sensor connector F4.
3. Turn ignition switch ON.
4. Check voltage between combination meter harness connector M24 terminal 22 and ground.

Voltage : Approx. 5V

OK or NG

- OK >> GO TO 4.
- NG >> Replace the combination meter. Refer to [IP-13, "COMBINATION METER"](#).

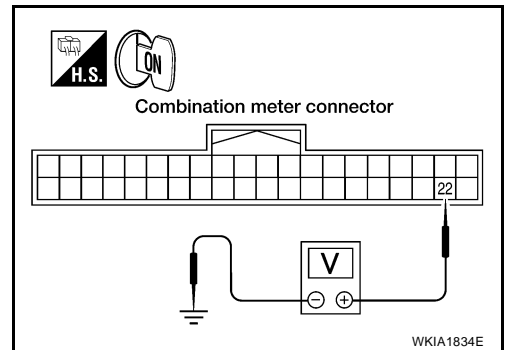

WARNING LAMPS

4. CHECK OIL PRESSURE SENSOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector M24.
3. Check continuity between combination meter harness connector M24 terminal 22 and oil pressure sensor harness connector F4 terminal 1.

Continuity should exist.


4. Check continuity between combination meter harness connector M24 terminal 22 and ground.

Continuity should not exist.

OK or NG

OK >> GO TO 5.

NG >> Repair harness or connector.

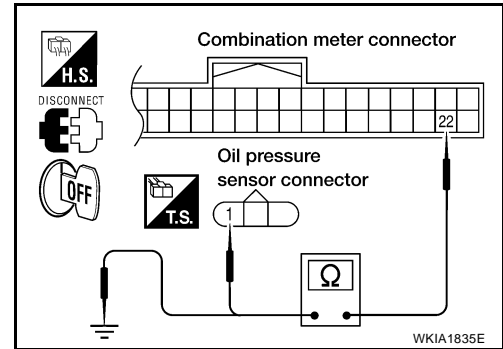

5. CHECK OIL PRESSURE SENSOR SIGNAL CIRCUIT

1. Check continuity between combination meter harness connector M24 terminal 20 and oil pressure sensor harness connector F4 terminal 2.

Continuity should exist.


2. Check continuity between combination meter harness connector M24 terminal 20 and ground.

Continuity should not exist.

OK or NG

OK >> GO TO 6.

NG >> Repair harness or connector.

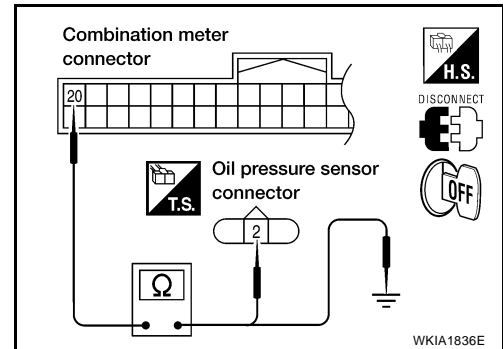

6. CHECK OIL PRESSURE SENSOR GROUND CIRCUIT


Check continuity between combination meter harness connector M24 terminal 16 and ground.

Continuity should not exist.

OK or NG

OK >> Replace oil pressure sensor.

NG >> Repair harness or connector.

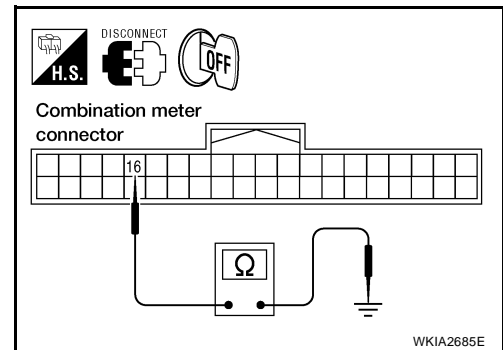

WARNING LAMPS

Oil Pressure Warning Lamp Does Not Turn Off (Oil Pressure Is Normal)

EKS00D7D

NOTE:

For oil pressure inspection, refer to [LU-7, "OIL PRESSURE CHECK"](#) .

1. CHECK ENGINE OIL PRESSURE GAUGE OPERATION

Observe operation of engine oil pressure gauge.

Does engine oil pressure gauge function properly?

YES >> Replace the combination meter. Refer to [IP-13, "COMBINATION METER"](#) .

NO >> Go to [DI-20, "Engine Oil Pressure Signal Inspection"](#) .

A

B

C

D

E

F

G

H

I

J

DI

L

M

A/T INDICATOR

PF:24814



EKS00ADI

A/T INDICATOR

Wiring Diagram — AT/IND —

DI-AT/IND-01

▬ : DATA LINE

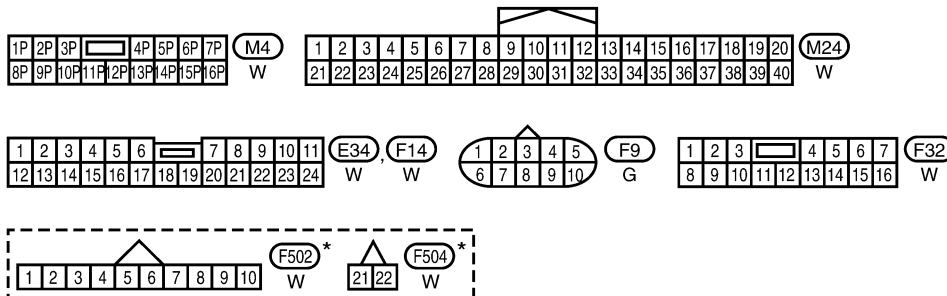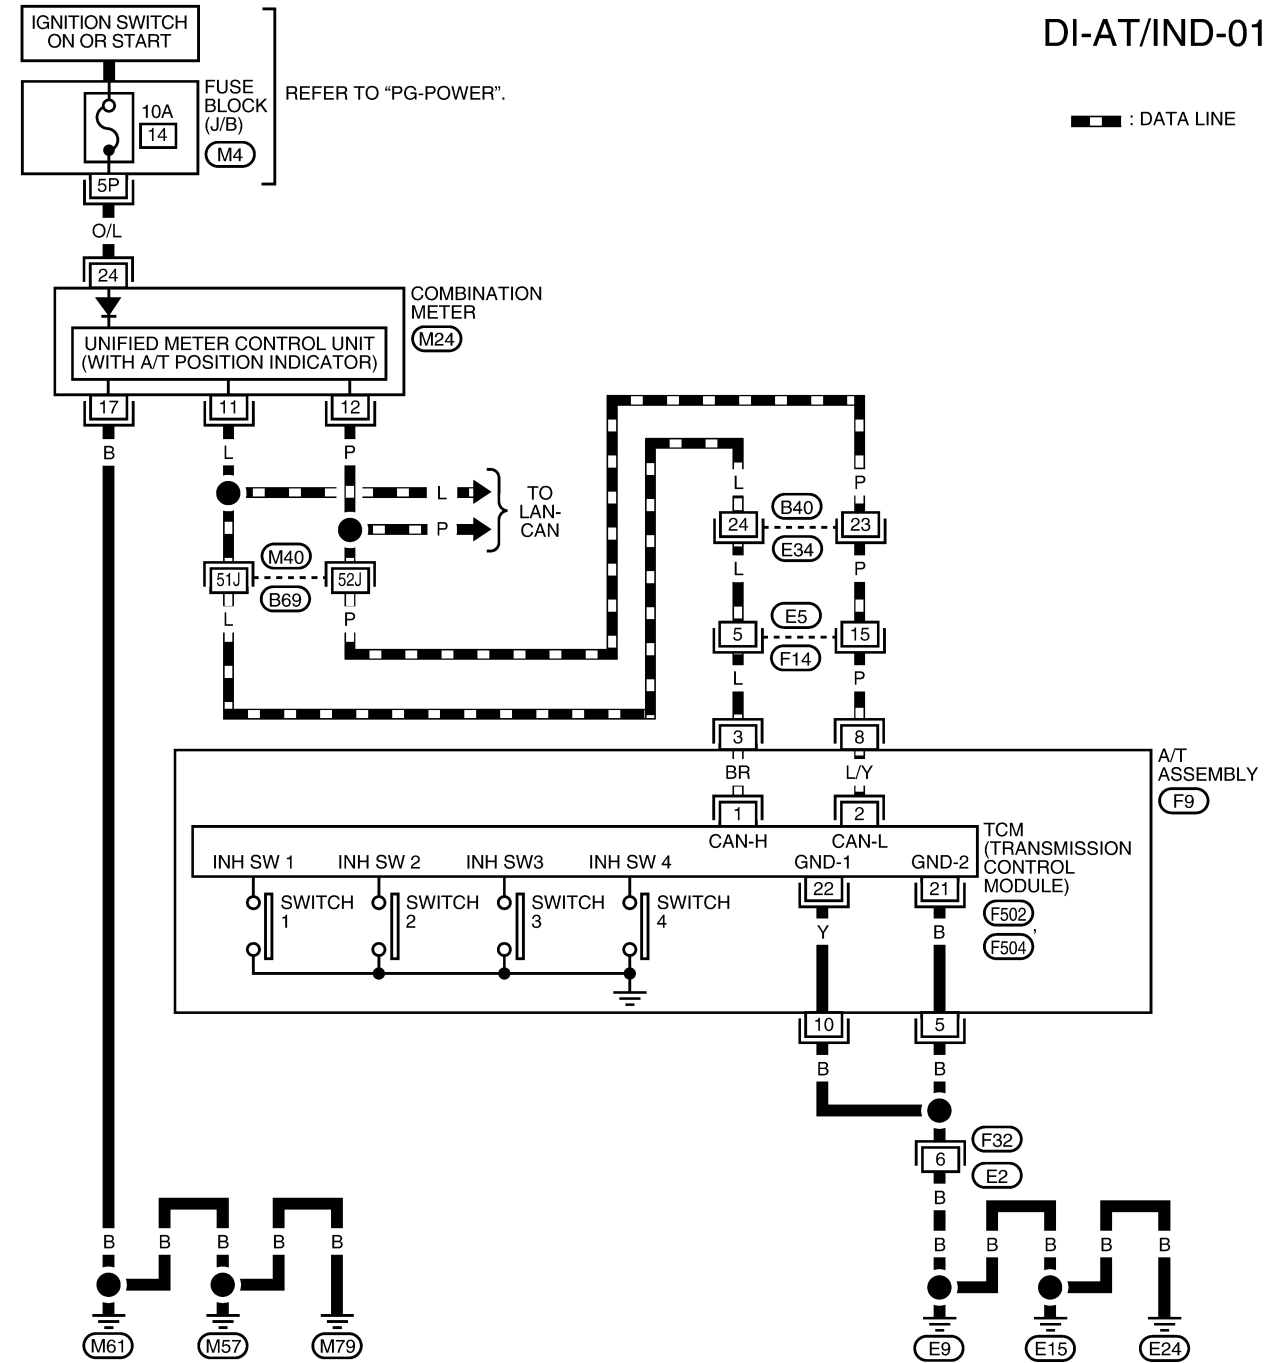

REFER TO THE FOLLOWING.

(M40) - SUPER MULTIPLE JUNCTION (SMJ)

* : THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

WKWA3718E

A/T INDICATOR

A/T Indicator Does Not Illuminate

EKS00ADJ

1. CHECK SELF-DIAGNOSIS OF COMBINATION METER

Perform combination meter self-diagnosis. Refer to [DI-13, "SELF-DIAGNOSIS FUNCTION"](#) .

OK or NG

OK >> GO TO 2.

NG >> Replace combination meter. Refer to [IP-13, "COMBINATION METER"](#) .

2. CHECK TCM

Perform self-diagnosis of TCM. Refer to [AT-89, "SELF-DIAGNOSTIC RESULT MODE"](#) .

OK or NG

OK >> Replace combination meter. Refer to [IP-13, "COMBINATION METER"](#) .

NG >> Refer to [DI-13, "SELF-DIAGNOSIS FUNCTION"](#) .

A

B

C

D

E

F

G

H

I

J

DI

L

M


WARNING CHIME

WARNING CHIME

PFP:24814

Component Parts and Harness Connector Location

EKS00ADK

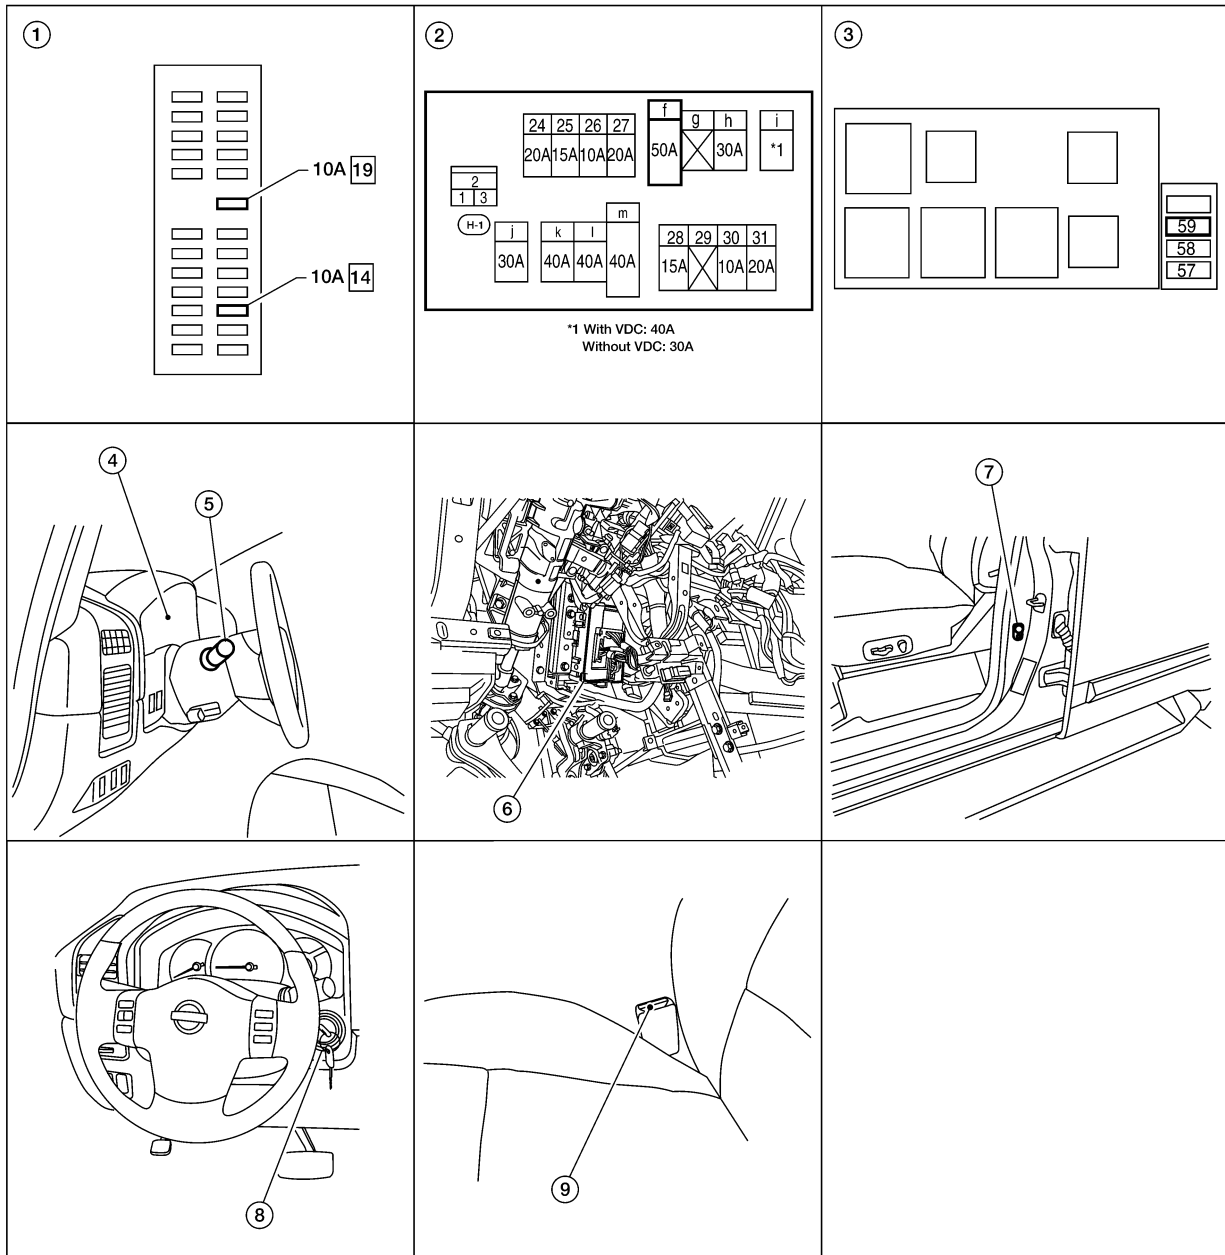

- | | | |
|----------------------------|--|---|
| 1. Fuse block (J/B) | 2. Fuse and fusible link box | 3. Fuse and relay box |
| 4. Combination meter M24 | 5. Combination switch (lighting switch) M28 | 6. BCM M18, M20 (view with instrument lower panel LH removed) |
| 7. Front door switch LH B8 | 8. Key switch and key lock solenoid M27 (floor shift) Key switch M80 (column shift) | 9. Seat belt buckle switch LH B12 |

WKIA4619E

WARNING CHIME

EKS00ADL

System Description

FUNCTION

Power is supplied at all times

- through 50A fusible link (letter f , located in the fuse and fusible link box)
- to BCM terminal 70, and
- through 10A fuse [No. 19, located in the fuse block (J/B)]
- to key switch and key lock solenoid terminal 3 (floor shift) or key switch terminal 3 (column shift).

With ignition switch in ON or START position, power is supplied

- through 10A fuse (No. 59, located in the fuse and relay box)
- to BCM terminal 38, and
- through 10A fuse [No. 14, located in the fuse block (J/B)]
- to combination meter terminal 24.

Ground is supplied

- to BCM terminal 67, and
- to combination meter terminal 17
- through body grounds M57, M61, and M79.

NOTE:

When ignition key warning chime, light warning chime, and seat belt warning chime are required at the same time, the priorities for each chime are the following.

1. Light warning chime
2. Ignition key warning chime
3. Seat belt warning chime

IGNITION KEY WARNING CHIME

With the key inserted in the ignition switch, the ignition switch in OFF position, and the driver's door open, the warning chime will sound.

Power is supplied

- through key switch and key lock solenoid terminal 4 (floor shift) or key switch terminal 4 (column shift)
- to BCM terminal 37.

Ground is supplied

- to BCM terminal 47
- through front door switch LH terminal 2
- through body grounds B7 and B19 (king cab) or through front door switch LH case ground (crew cab).

BCM detects key inserted into the ignition switch, and sends key warning signal to combination meter via CAN communication lines. When the combination meter receives key warning signal, it sounds warning chime.

LIGHT WARNING CHIME

With the key removed from the ignition switch, the driver's door open, and the lighting switch (part of the combination switch) in 1st or 2nd position, the warning chime will sound. [Except when headlamp battery saver control operates (5 minutes after ignition switch is turned to OFF or ACC position) and headlamps do not illuminate.]

Signal is supplied

- from combination switch (lighting switch) terminals 1, 2, 3, 4, 5, 6, 7, 8, 9 and 10
- to BCM terminals 2, 3, 4, 5, 6, 32, 33, 34, 35 and 36.

NOTE:

BCM detected lighting switch in 1st or 2nd position. Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#).

Ground is supplied

- to BCM terminal 47
- through front door switch LH terminal 2.
- through body grounds B7 and B19 (king cab) or through front door switch LH case ground (crew cab).

BCM detects headlamps are illuminated, and sends light warning signal to combination meter CAN communication lines. When the combination meter receives light warning signal, it sounds warning chime.

A
B
C
D
E
F
G
H
I
J
L
M



WARNING CHIME

SEAT BELT WARNING CHIME

When the ignition switch is turned ON with the seat belt unfastened (seat belt buckle switch LH unfastened), warning chime will sound for approximately 6 seconds.

Ground is supplied

- to combination meter terminal 27
- through seat belt buckle switch LH terminal 1.

Seat belt buckle switch LH terminal 2 is grounded through body grounds B7 and B19.

The combination meter sends seat belt buckle switch LH unfastened signal to BCM via CAN communication line.

BCM receives seat belt buckle switch LH unfastened signal from combination meter via CAN communication line, and sends seat belt warning signal to the combination meter via CAN communication line. When the combination meter receives the seat belt warning signal, it sounds the warning chime. The BCM controls the (6 second) duration of the seat belt warning chime.

CAN Communication System Description


EKS00ADM

Refer to [LAN-25, "CAN COMMUNICATION"](#) .

WARNING CHIME

Wiring Diagram — CHIME —


EKS00ADN

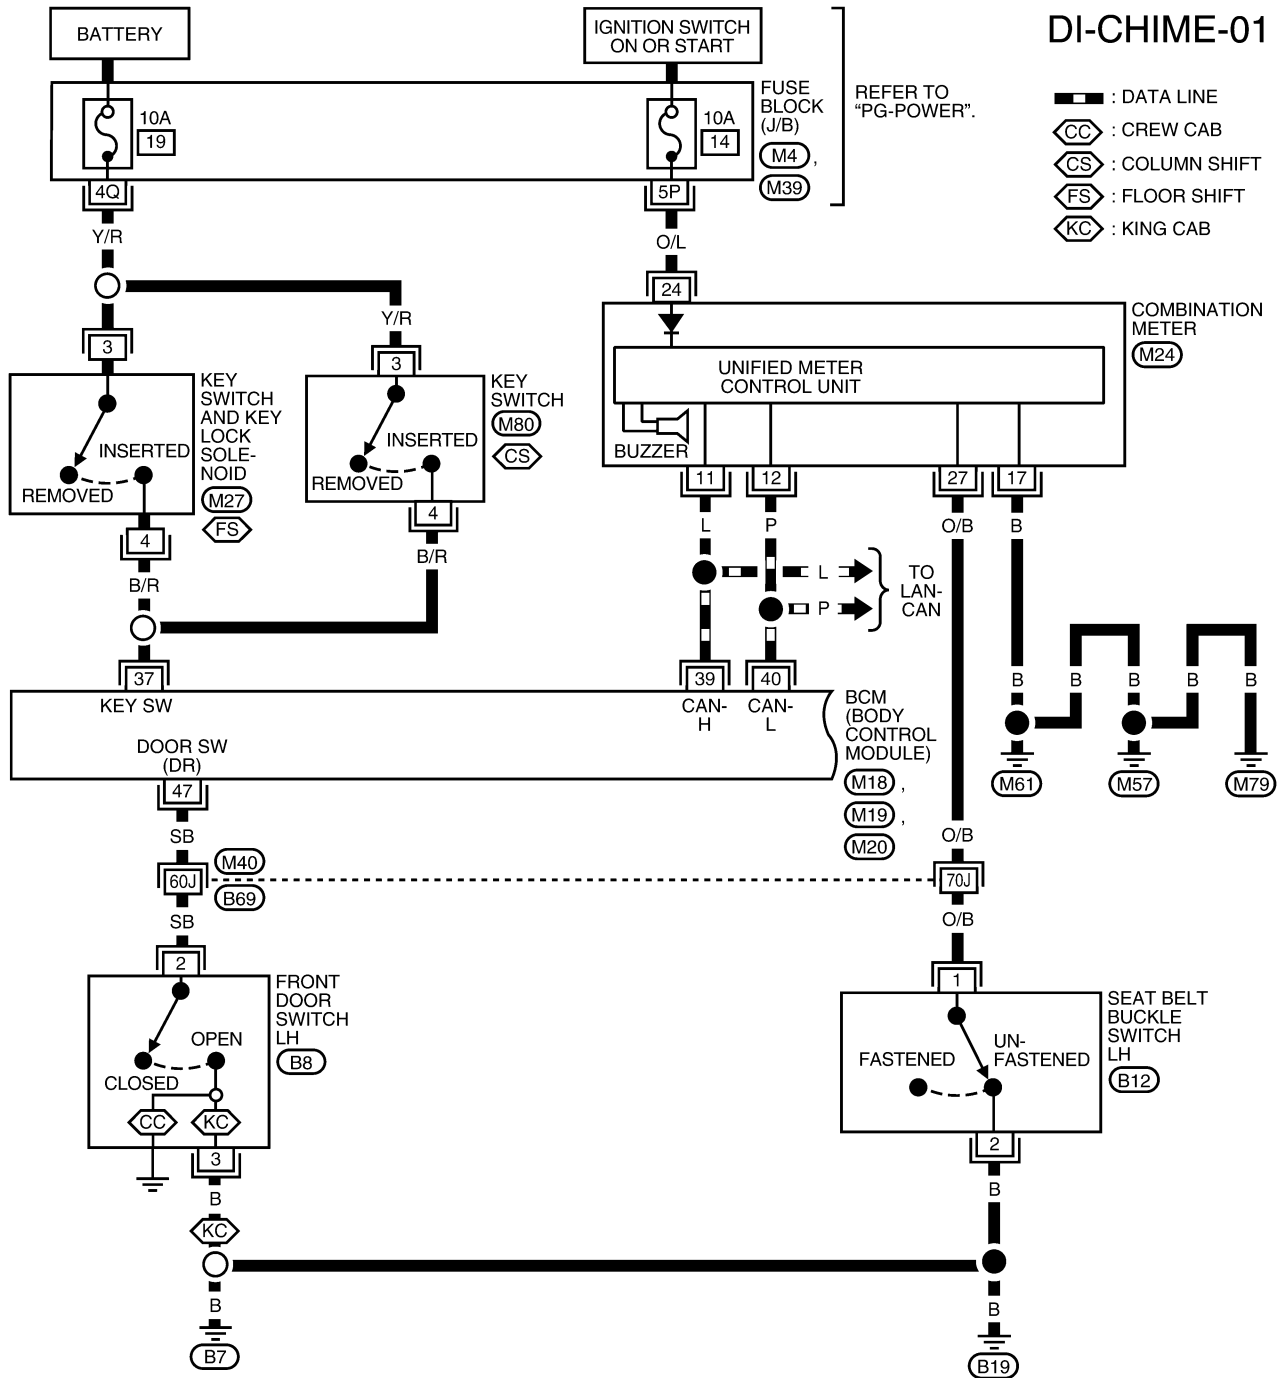

DI-CHIME-01

- : DATA LINE
- CC : CREW CAB
- CS : COLUMN SHIFT
- FS : FLOOR SHIFT
- KC : KING CAB

REFER TO "PG-POWER".


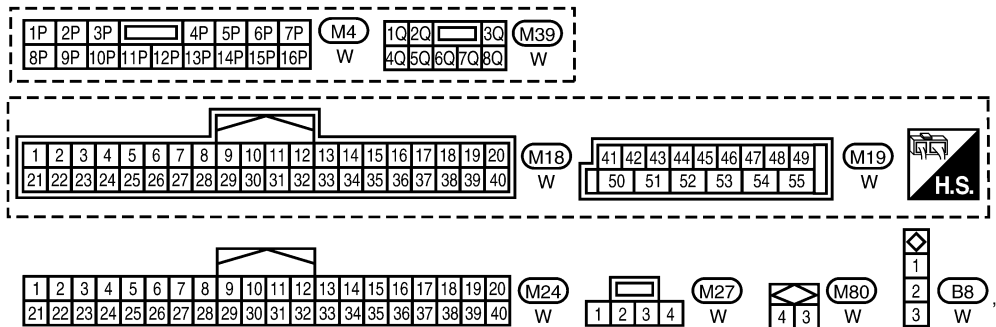


REFER TO THE FOLLOWING.
 M40 - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3719E

WARNING CHIME

DI-CHIME-02

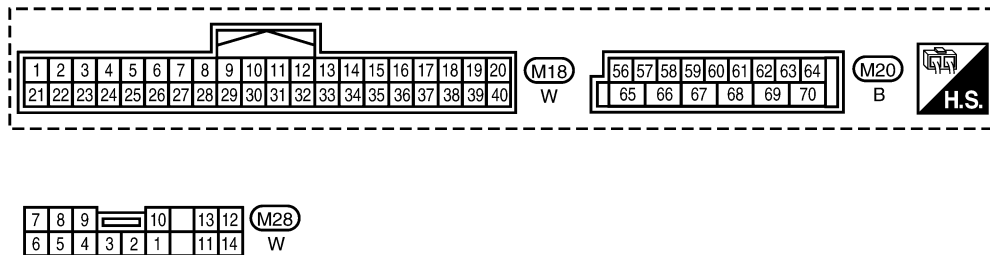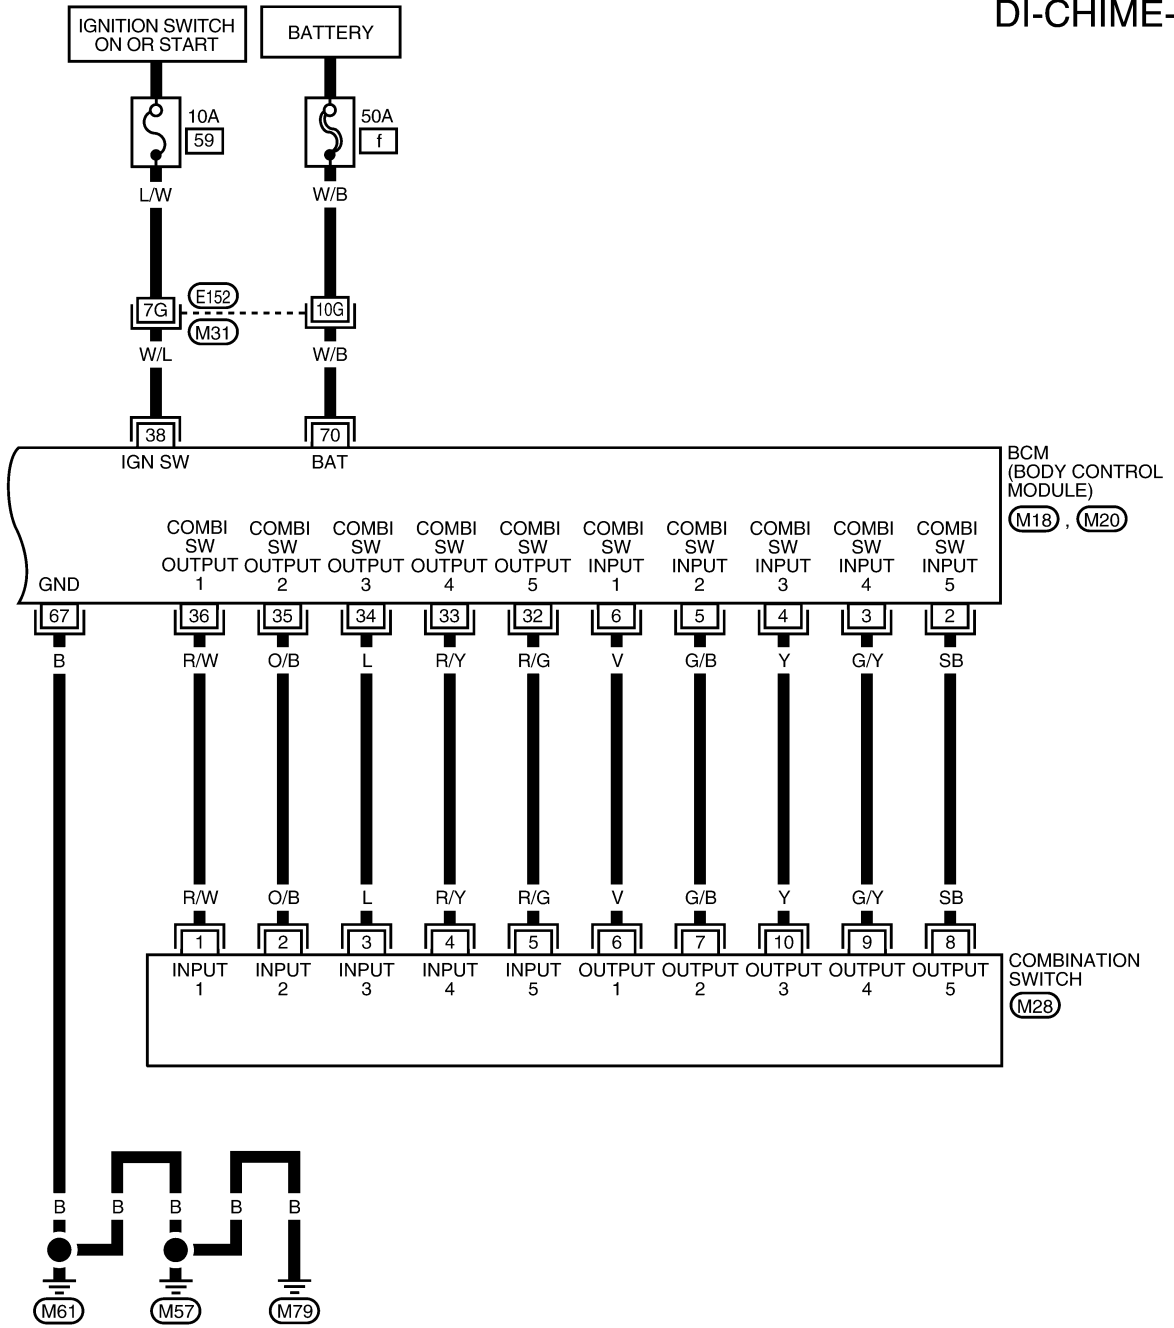








REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE
 JUNCTION (SMJ)

WKWA3720E

WARNING CHIME

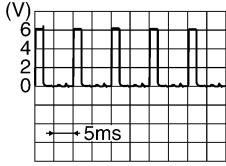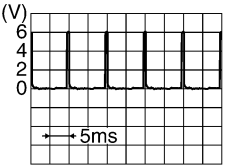
Terminals and Reference Value for BCM

EKS00ADO

| Terminal No. | Wire color | Item | Condition | | Reference value (V) (Approx.) |
|--------------|------------|-----------------------------|-----------------|--|---|
| | | | Ignition switch | Measurement method | |
| 2 | SB | Combination switch input 5 | ON | <ul style="list-style-type: none"> Light switch and wiper switch OFF Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5291E</p> |
| 3 | G/Y | Combination switch input 4 | ON | <ul style="list-style-type: none"> Light switch and wiper switch OFF Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5292E</p> |
| 4 | Y | Combination switch input 3 | ON | <ul style="list-style-type: none"> Light switch and wiper switch OFF Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5291E</p> |
| 5 | G/B | Combination switch input 2 | ON | <ul style="list-style-type: none"> Light switch and wiper switch OFF Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5292E</p> |
| 6 | V | Combination switch input 1 | | | |
| 32 | R/G | Combination switch output 5 | ON | <ul style="list-style-type: none"> Light switch and wiper switch OFF Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5291E</p> |
| 33 | R/Y | Combination switch output 4 | ON | <ul style="list-style-type: none"> Light switch and wiper switch OFF Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5292E</p> |
| 34 | L | Combination switch output 3 | ON | <ul style="list-style-type: none"> Light switch and wiper switch OFF Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5291E</p> |

A
B
C
D
E
F
G
H
I
J
DI
L
M

WARNING CHIME
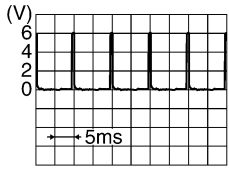
| Terminal No. | Wire color | Item | Condition | | Reference value (V) (Approx.) |
|--------------|------------|-----------------------------|-----------------|--|---|
| | | | Ignition switch | Measurement method | |
| 35 | O/B | Combination switch output 2 | ON | <ul style="list-style-type: none"> ● Light switch and wiper switch OFF ● Wiper dial position 4 |  |
| 36 | R/W | Combination switch output 1 | | | |
| 37 | B/R | Key switch signal | OFF | Key is removed | 0 |
| | | | | Key is inserted | Battery voltage |
| 38 | W/L | Ignition switch ON or START | ON | — | Battery voltage |
| 39 | L | CAN-H | — | — | — |
| 40 | P | CAN-L | — | — | — |
| 47 | SB | Front door switch LH signal | OFF | ON (open) | 0 |
| | | | | OFF (closed) | 5 |
| 67 | B | Ground | ON | — | 0 |
| 70 | W/B | Battery power supply | OFF | — | Battery voltage |

SKIA5292E

Terminals and Reference Value for Combination Meter

EKS00ADP

| Terminal No. | Wire color | Item | Condition | | Reference value (V) (Approx.) |
|--------------|------------|-----------------------------|-----------------|--------------------|----------------------------------|
| | | | Ignition switch | Measurement method | |
| 11 | L | CAN-H | — | — | — |
| 12 | P | CAN-L | — | — | — |
| 17 | B | Ground | OFF | — | 0 |
| 24 | O/L | Ignition switch ON or START | ON | — | Battery voltage |
| 27 | O/B | Seat belt buckle switch LH | ON | Unfastened (ON) | 0 |
| | | | | Fastened (OFF) | Battery voltage |

EKS00ADQ

How to Proceed With Trouble Diagnosis

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [DI-43, "System Description"](#) .
3. Perform the preliminary check. Refer to [DI-49, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Does the warning chime operate properly? If so, go to 6. If not, go to 3.
6. Inspection End.

WARNING CHIME

Preliminary Check INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT

EKS00ADR

1. CHECK FUSE AND FUSIBLE LINK

Check for blown BCM fuse or fusible link.

| Unit | Power source | Fuse or fusible link No. |
|------|-----------------------------|--------------------------|
| BCM | Battery | f |
| | Ignition switch ON or START | 59 |

Refer to [DI-45. "Wiring Diagram — CHIME —"](#) .

OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

2. CHECK POWER SUPPLY CIRCUIT


1. Disconnect BCM connectors M18 and M20.
2. Check voltage between BCM harness connector terminals and ground.

| Terminals | | Ignition switch position |
|-----------|----------|--------------------------|
| (+) | (-) | |
| Connector | Terminal | OFF |
| M20 | 70 | Battery voltage |
| M18 | 38 | 0V |
| | | Battery voltage |

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between BCM and fuse.

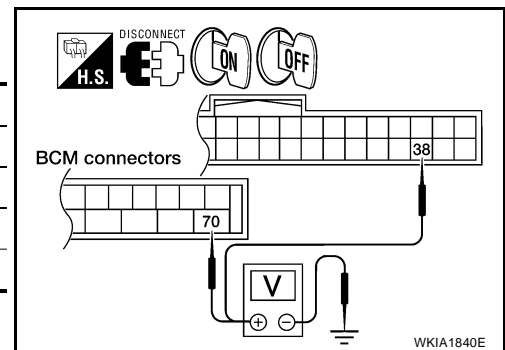

3. CHECK GROUND CIRCUIT


1. Turn ignition switch OFF.
2. Check continuity between BCM harness connector M20 terminal 67 and ground.

Continuity should exist.

OK or NG

OK >> Inspection End.

NG >> Repair harness or connector.

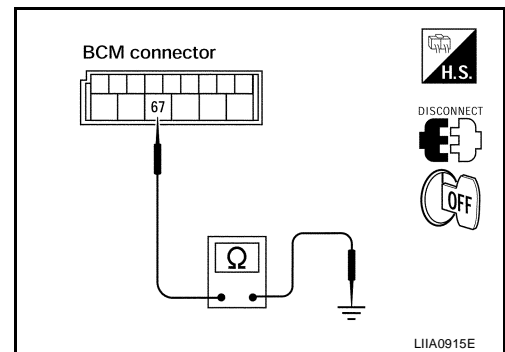

WARNING CHIME

EKS00ADS

CONSULT-II Function (BCM)

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


| BCM diagnostic test item | Diagnostic mode | Description |
|--------------------------|-----------------------|--|
| Inspection by part | WORK SUPPORT | Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed. |
| | DATA MONITOR | Displays BCM input/output data in real time. |
| | ACTIVE TEST | Operation of electrical loads can be checked by sending drive signal to them. |
| | SELF-DIAG RESULTS | Displays BCM self-diagnosis results. |
| | CAN DIAG SUPPORT MNTR | The result of transmit/receive diagnosis of CAN communication can be read. |
| | ECU PART NUMBER | BCM part number can be read. |
| | CONFIGURATION | Performs BCM configuration read/write functions. |

CONSULT-II BASIC OPERATION PROCEDURE


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, and turn ignition switch ON.

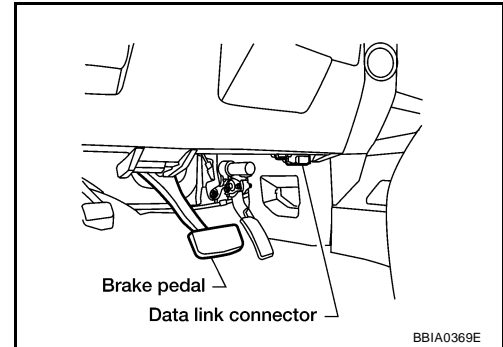

2. Touch "START (NISSAN BASED VHCL)".

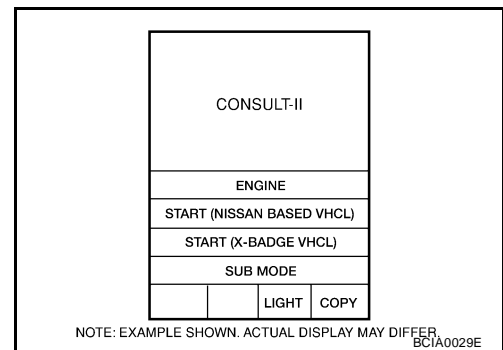


3. Touch "BCM" on "SELECT SYSTEM" screen. If "BCM" is not indicated, go to [GI-39, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

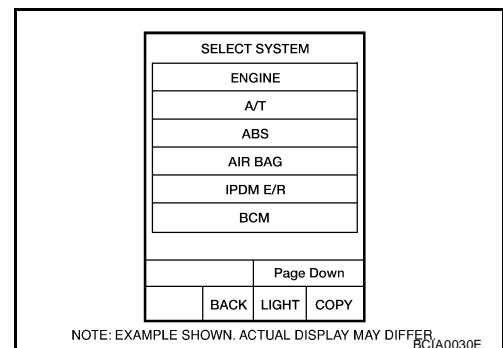


WARNING CHIME

4. Touch "BUZZER" or "BCM".

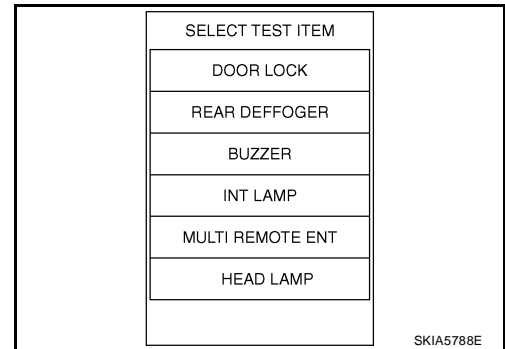

5. Select "DATA MONITOR", "ACTIVE TEST" or "SELF-DIAG RESULTS".

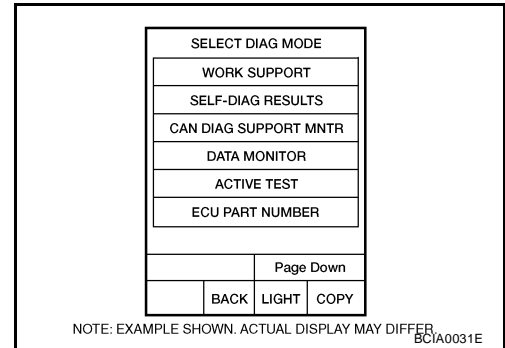

DATA MONITOR

Operation Procedure

1. Touch "BUZZER" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch "ALL SIGNALS" or "SELECTION FROM MENU" on "DATA MONITOR" screen.

| | |
|---------------------|-----------------------------|
| ALL SIGNALS | Monitors main items. |
| SELECTION FROM MENU | Selects and monitors items. |

4. If "SELECTION FROM MENU" is selected, touch the item you desire to monitor. If "ALL SIGNALS" is selected, all control items are monitored.
5. Touch "START".
6. During monitoring, touching "RECORD" can start recording the monitored item status.

Display Item List

| Monitored item | Description |
|----------------|--|
| IGN ON SW | Indicates [ON/OFF] condition of ignition switch. |
| KEY ON SW | Indicates [ON/OFF] condition of key switch. |
| DOOR SW-DR | Indicates [ON/OFF] condition of front door switch (driver side). |
| LIGHT SW 1ST | Indicates [ON/OFF] condition of lighting switch. |

ACTIVE TEST

Operation Procedure

1. Touch "BUZZER" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch the item to be tested, and check the operation.
4. During the operation check, touching "OFF" deactivates the operation.

WARNING CHIME

Display Item List

| Test item | Malfunction is detected when |
|---------------------|--|
| LIGHT WARN ALM | This test is able to check light warning chime operation. Light warning chime sounds for 2 seconds after touching "ON" on CONSULT-II screen. |
| IGN KEY WARN ALM | This test is able to check key warning chime operation. Key warning chime sounds for 2 seconds after touching "ON" on CONSULT-II screen. |
| SEAT BELT WARN TEST | This test is able to check seat belt warning chime operation. Seat belt warning chime sounds for 2 seconds after touching "ON" on CONSULT-II screen. |

SELF-DIAGNOSTIC RESULTS

Operation Procedure

1. Touch "BCM" on "SELECT TEST ITEM" screen.
2. Touch "SELF-DIAG RESULTS" on "SELECT DIAG MODE" screen.
3. Self-diagnostic results are displayed.

Display Item List

| Monitored Item | CONSULT-II display | Description |
|-------------------|---------------------------|---|
| CAN communication | CAN communication [U1000] | Malfunction is detected in CAN communication. |

NOTE:

If "CAN communication [U1000]" is displayed, after printing the monitor item, go to "CAN System". Refer to [LAN-25, "CAN COMMUNICATION"](#).

All Warning Chimes Do Not Operate


EKS00ADT

1. CHECK BCM CHIME OPERATION

Select "BUZZER" on CONSULT-II, and perform "LIGHT WARN ALM", "IGN KEY WARN ALM", OR "SEAT BELT WARN TEST" active test.

Does chime sound?

- YES >> Replace the BCM. Refer to [BCS-20, "BCM"](#).
- NO >> Replace the combination meter. Refer to [IP-13, "COMBINATION METER"](#).

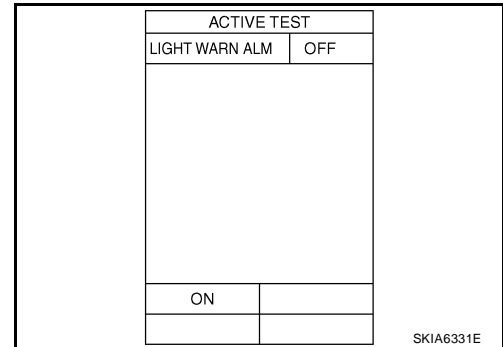

WARNING CHIME

Key Warning Chime and Light Warning Chime Do Not Operate (Seat Belt Warning Chime Does Operate)

EKS00ADU


1. CHECK BCM INPUT SIGNAL

④ With CONSULT-II

1. Select "BCM" on CONSULT-II.
2. With "DATA MONITOR" of "BUZZER", confirm "DOOR SW-DR" changes with the status of front door LH.

When front door LH is opened : DOOR SW-DR ON

When front door LH is closed : DOOR SW-DR OFF

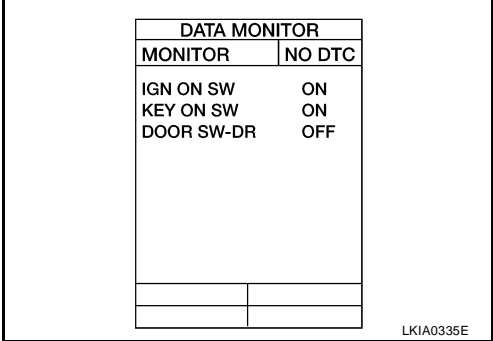

| DATA MONITOR | |
|--------------|--------|
| MONITOR | NO DTC |
| IGN ON SW | ON |
| KEY ON SW | ON |
| DOOR SW-DR | OFF |


LKIA0335E

⊗ Without CONSULT-II

Check voltage between BCM harness connector M19 terminal 47 and ground.

When front door LH is opened : Approx. 0V

When front door LH is closed : Approx. 5V

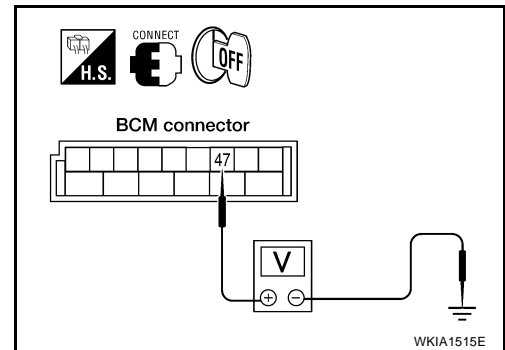

OK or NG

- OK >> Replace the BCM. Refer to [BCS-20, "BCM"](#).
- NG >> GO TO 2.

2. CHECK FRONT DOOR SWITCH LH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector M19 and front door switch LH connector B8.
3. Check continuity between BCM harness connector M19 terminal 47 and front door switch LH harness connector B8 terminal 2.


Continuity should exist.

4. Check continuity between BCM harness connector M19 terminal 47 and ground.

Continuity should not exist.

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness or connector.

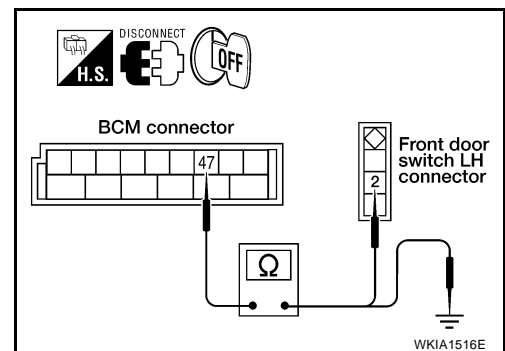


WARNING CHIME

3. CHECK FRONT DOOR SWITCH LH

CREW CAB MODELS

Check continuity between front door switch LH terminal 2 and exposed metal of switch while pushing and releasing switch.

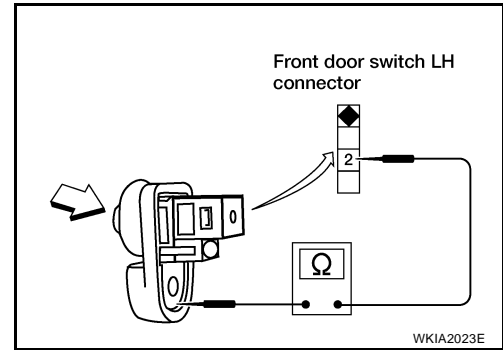

KING CAB MODELS


Check continuity between front door switch LH terminal 2 and terminal 3 of switch while pushing and releasing switch.

When front door switch LH is released : Continuity should exist.

When front door switch LH is pushed : Continuity should not exist.

OK or NG

- OK >> Replace the BCM. Refer to [BCS-20, "BCM"](#) .
- NG >> Replace the front door switch LH.

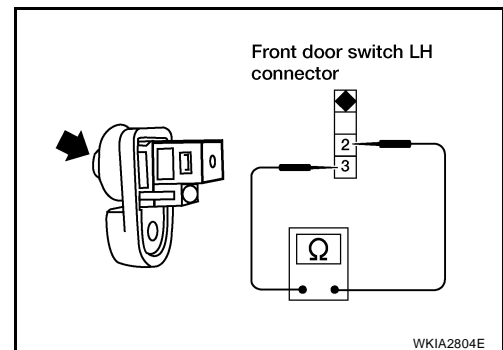

Key Warning Chime Does Not Operate

1. CHECK FUSE

Check if the key switch fuse [No. 19, located in the fuse block (J/B)] is blown. Refer to [DI-45, "Wiring Diagram — CHIME —"](#) .

Is the fuse blown?

- YES >> Replace the fuse. Be sure to repair the cause of malfunction before installing new fuse.
- NO >> GO TO 2.

2. CHECK WARNING CHIME OPERATION

With key removed from the ignition and the front door LH open, turn the lighting switch to 1st or 2nd position.

Does warning chime sound?

- YES >> GO TO 3.
- NO >> Go to [DI-52, "All Warning Chimes Do Not Operate"](#) or [DI-53, "Key Warning Chime and Light Warning Chime Do Not Operate \(Seat Belt Warning Chime Does Operate\)"](#) .

WARNING CHIME


3. CHECK BCM INPUT SIGNAL

With CONSULT-II

With "DATA MONITOR" of "BUZZER", confirm "KEY ON SW" changes when the key is inserted/removed from the ignition key cylinder.

When key is inserted in ignition key cylinder : KEY ON SW ON

When key is removed from ignition key cylinder : KEY ON SW OFF

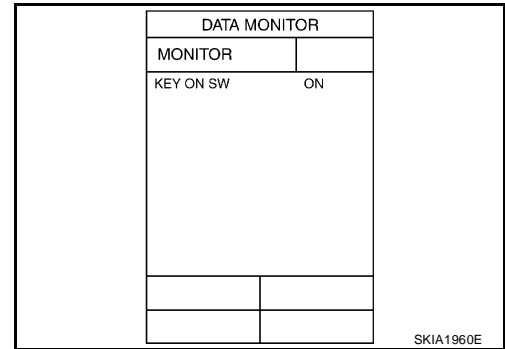

Without CONSULT-II


Check voltage between BCM harness connector M18 terminal 37 and ground.

When key is inserted in ignition key cylinder : Approx. 12V

When key is removed from ignition key cylinder : Approx. 0V

OK or NG

- OK >> Replace the BCM. Refer to [BCS-20, "BCM"](#).
- NG >> GO TO 4.

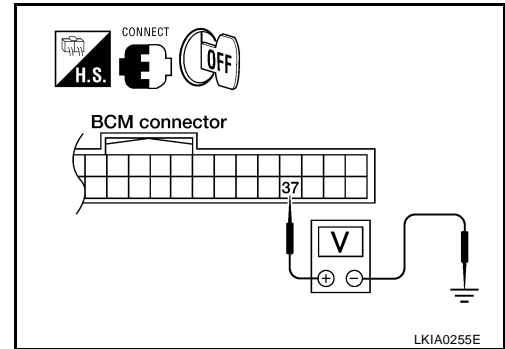

4. CHECK KEY SWITCH


- Turn ignition switch OFF.
- Disconnect key switch and key lock solenoid connector (floor shift) or key switch connector (column shift).
- Check continuity between key switch and key lock solenoid (floor shift) or key switch (column shift) terminals 3 and 4.

When key is inserted in ignition key cylinder : Continuity should exist.

When key is removed from ignition key cylinder : Continuity should not exist.

OK or NG

- OK >> GO TO 5.
- NG >> Replace the key switch and key lock solenoid (floor shift) or key switch (column shift).

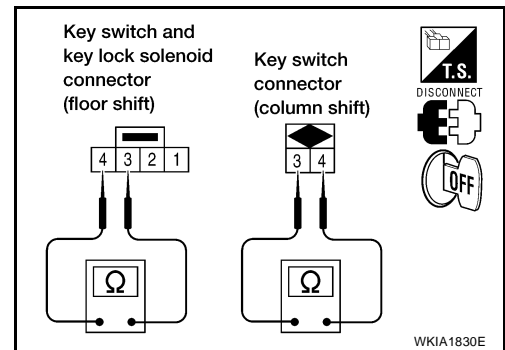

WARNING CHIME

5. CHECK KEY SWITCH CIRCUIT

1. Disconnect BCM connector M18.
2. Check continuity between BCM harness connector M18 terminal 37 and key switch and key lock solenoid harness connector M27 (floor shift) or key switch harness connector M80 (column shift) terminal 4.


Continuity should exist.

3. Check continuity between BCM harness connector M18 terminal 37 and ground.

Continuity should not exist.

OK or NG

- OK >> GO TO 6.
NG >> Repair harness or connector.

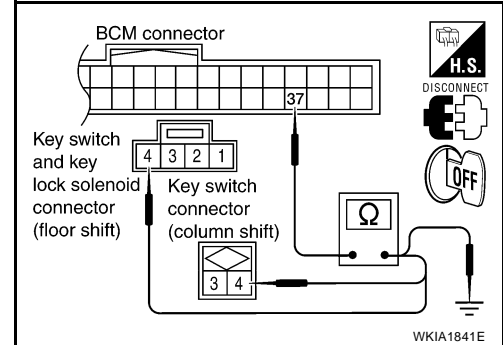


6. CHECK KEY SWITCH POWER SUPPLY CIRCUIT

Check voltage between key switch and key lock solenoid harness connector M27 (floor shift) or key switch harness connector M80 (column shift) terminal 3 and ground.

Battery voltage should exist.

OK or NG

- OK >> Replace the BCM. Refer to [BCS-20, "BCM"](#) .
NG >> Check harness for open or short between fuse and key switch and key lock solenoid connector (floor shift) or key switch connector (column shift).

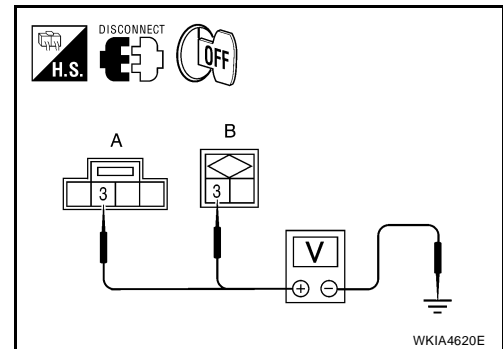

Light Warning Chime Does Not Operate

1. CHECK WARNING CHIME OPERATION

Check key warning chime and seat belt warning chime functions.

Do key warning chime and seat belt warning chime sound?

- YES >> GO TO 2.
NO >> Go to [DI-52, "All Warning Chimes Do Not Operate"](#) .

2. CHECK BCM INPUT SIGNAL

With CONSULT-II

1. Select "BCM".
2. With "DATA MONITOR" of "BUZZER", confirm "LIGHT SW 1ST" status changes when the lighting switch is moved from ON (1st position) to OFF.

Lighting switch ON (1st position) : LIGHT SW 1ST ON


Lighting switch OFF : LIGHT SW 1ST OFF

Without CONSULT-II

Check combination switch. Refer to [LT-97, "Combination Switch Reading Function"](#) .

OK or NG

- OK >> Replace the BCM. Refer to [BCS-20, "BCM"](#) .
NG >> Check lighting switch. Refer to [LT-97, "Combination Switch Reading Function"](#) .

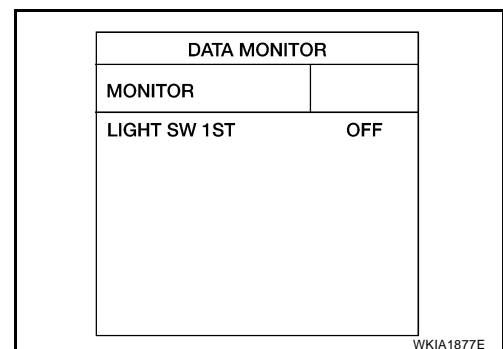

WARNING CHIME

EKS00ADX

Seat Belt Warning Chime Does Not Operate

1. CHECK WARNING CHIME OPERATION

1. With key removed from the ignition and the front door LH open, turn the lighting switch to 1st or 2nd position.
2. Return lighting switch to OFF position, and insert key into ignition.

Does warning chime sound for both steps?

- YES >> GO TO 2.
NO >> Go to [DI-52, "All Warning Chimes Do Not Operate"](#).

2. CHECK SEAT BELT WARNING LAMP OPERATION

Turn ignition switch ON. Buckle and unbuckle the driver seat belt while watching seat belt warning lamp.

- When seat belt is fastened : Warning lamp OFF**
When seat belt is unfastened : Warning lamp ON

OK or NG

- OK >> Replace the BCM. Refer to [BCS-20, "BCM"](#).
NG >> GO TO 3.


3. CHECK COMBINATION METER INPUT SIGNAL

1. Turn ignition switch ON.
2. Check voltage between combination meter harness connector M24 terminal 27 and ground.

- When seat belt is fastened : Approx. 12V**
When seat belt is unfastened : Approx. 0V

OK or NG

- OK >> Replace the combination meter. Refer to [IP-13, "COMBINATION METER"](#).
NG >> GO TO 4.

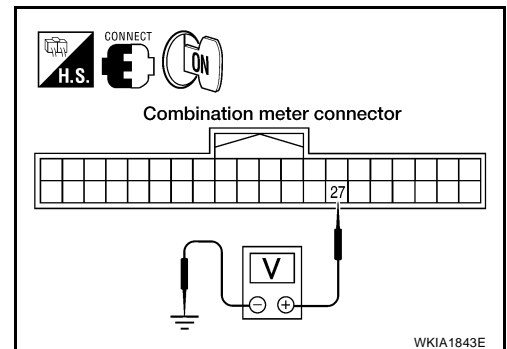


4. CHECK SEAT BELT BUCKLE SWITCH

1. Turn ignition switch OFF.
2. Disconnect seat belt buckle switch LH connector.
3. Check continuity between seat belt buckle switch LH terminals 1 and 2.

- When seat belt is fastened : Continuity should not exist.**
When seat belt is unfastened : Continuity should exist.

OK or NG

- OK >> GO TO 5.
NG >> Replace the seat belt buckle switch LH.

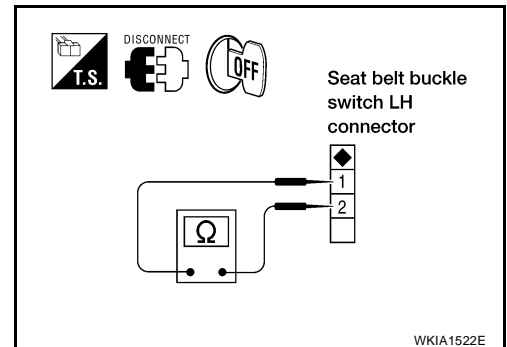

WARNING CHIME

5. CHECK SEAT BELT BUCKLE SWITCH CIRCUIT

1. Disconnect combination meter connector.
2. Check continuity between combination meter harness connector M24 terminal 27 and seat belt buckle switch LH harness connector B12 terminal 1.

Continuity should exist.


3. Check continuity between combination meter harness connector M24 terminal 27 and ground.

Continuity should not exist.

OK or NG

OK >> GO TO 6.

NG >> Repair harness or connector.

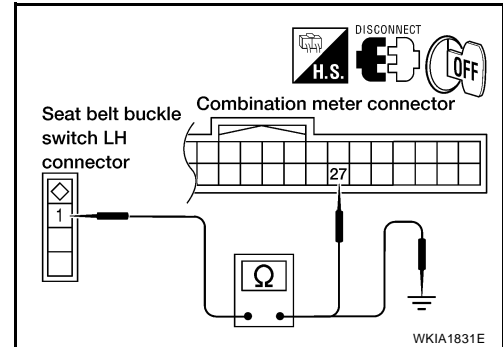

6. CHECK SEAT BELT BUCKLE SWITCH GROUND CIRCUIT


Check continuity between seat belt buckle switch LH harness connector B12 terminal 2 and ground.

Continuity should exist.

OK or NG

OK >> Replace combination meter. Refer to [IP-13, "COMBINATION METER"](#).

NG >> Repair harness or connector.

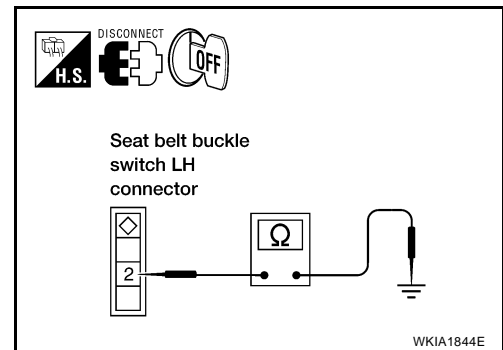


REAR SONAR SYSTEM

REAR SONAR SYSTEM

Component Parts and Harness Connector Location

PF:28532

EKS00ADY

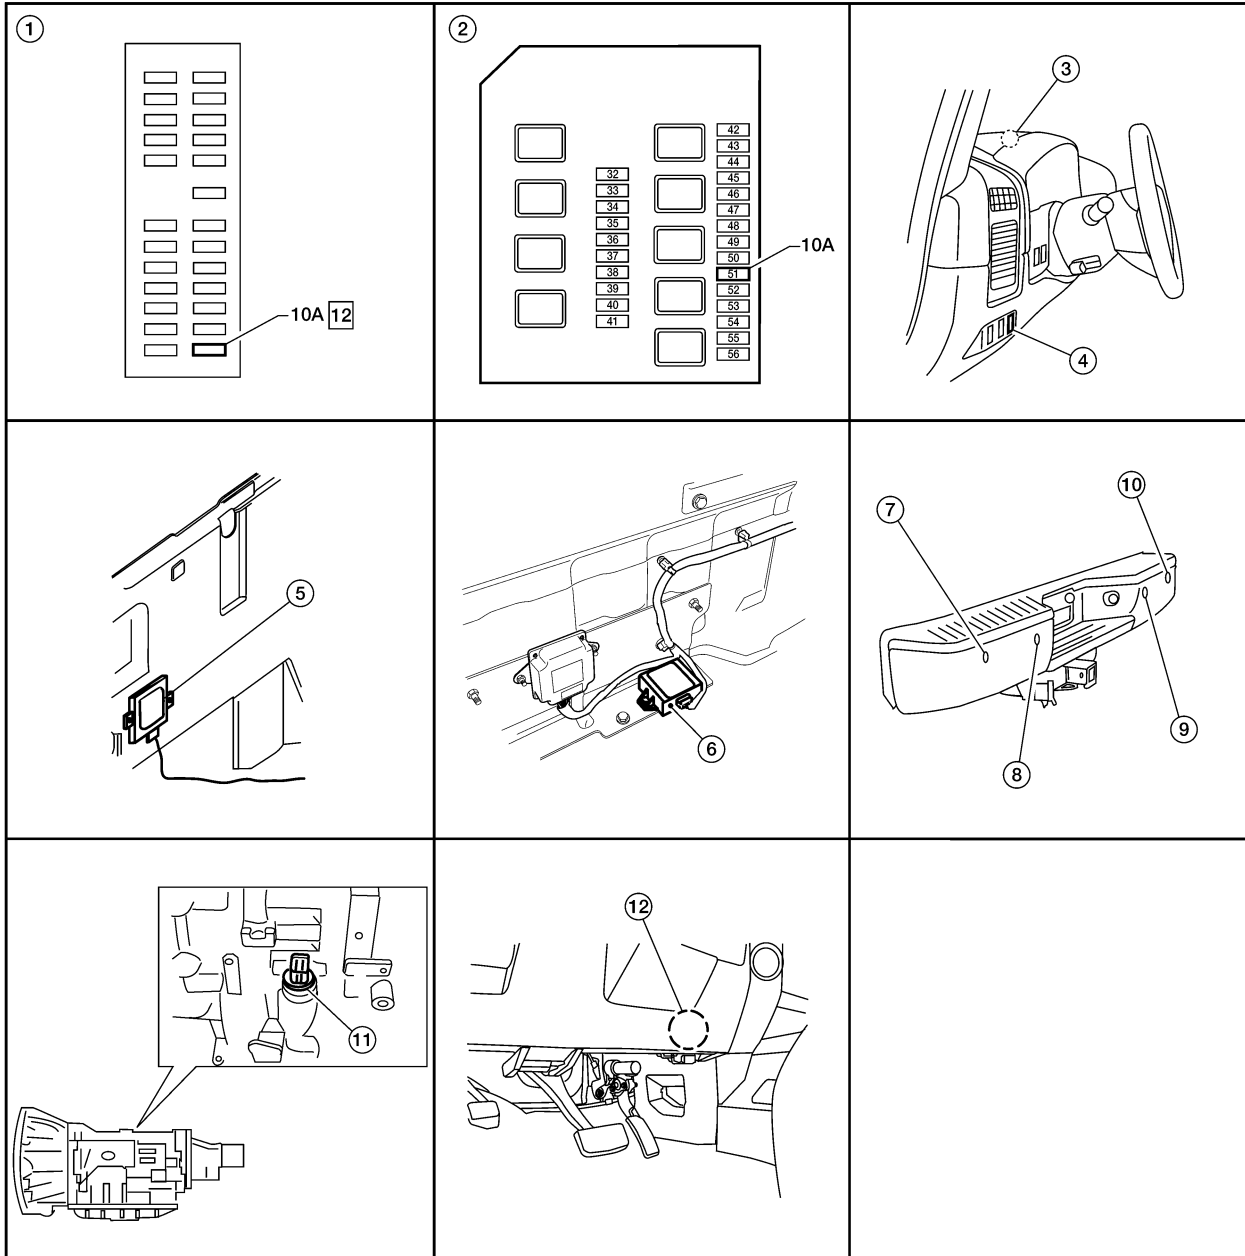

- | | | |
|--------------------------------------|--------------------------------------|--------------------------------------|
| 1. Fuse block (J/B) | 2. IPDM E/R E119 | 3. Sonar buzzer M117 |
| 4. Rear sonar system OFF switch M116 | 5. Sonar control unit B56 (crew cab) | 6. Sonar control unit B56 (king cab) |
| | (view of rear cab) | (view of rear cab) |
| 7. Rear sonar sensor LH outer C102 | 8. Rear sonar sensor LH inner C103 | 9. Rear sonar sensor RH inner C104 |
| 10. Rear sonar sensor RH outer C105 | 11. A/T assembly F9 | 12. Back-up lamp relay M73 |

WKIA4621E

REAR SONAR SYSTEM

EKS00ADZ

System Description

FUNCTION

With the ignition switch in the ON or START position, power is supplied

- through 10A fuse [No. 12 , located in the fuse block (J/B)]
- to sonar control unit terminal 8, and
- through 10A fuse (No. 51, located in the IPDM E/R)
- to back-up lamp relay terminals 1 and 3.

Ground is supplied

- to sonar control unit terminal 6
- through body grounds B7 and B19.

With the ignition switch in the ON or START position, and the transmission gear selector lever in the R position, power is supplied

- to sonar control unit terminal 5
- from back-up lamp relay terminal 5.

With power and ground supplied, transmission gear selector lever in R position, and the rear sonar system OFF switch ON, the rear sonar system will detect obstacles within 1.8 m (5.9 ft.) of the rear sonar sensors. The vehicle operator is notified of obstacles by varied rate of tone from the sonar buzzer depending on distance of obstacle being sensed.

REAR SONAR SYSTEM OFF SWITCH

With power and ground supplied to the sonar control unit, transmission gear selector lever in R position, the sonar system can be disabled and the sonar buzzer silenced by momentarily pressing the rear sonar system OFF switch. The rear sonar system OFF indicator lamp will be illuminated in the rear sonar system OFF switch.

To disable the rear sonar system, ground is supplied

- to sonar control unit terminal 13
- through rear sonar system OFF switch terminal 1
- through rear sonar system OFF switch terminal 2
- from body grounds M57, M61, and M79.

To light the rear sonar system OFF indicator, power is supplied

- from sonar control unit terminal 4
- to the rear sonar system OFF switch terminal 5.

Ground is supplied

- to the rear sonar system OFF switch terminal 6
- from body grounds M57, M61, and M79.

The rear sonar system and buzzer will be disabled and the rear sonar system OFF indicator will be illuminated until the ignition switch is turned OFF. When the ignition is turned ON, the rear sonar system will be enabled. Depressing the rear sonar system OFF switch momentarily will enable the rear sonar system also. Enabling the rear sonar system will cause the rear sonar system OFF indicator to go out.

SONAR BUZZER

With the power supplied to the sonar control unit and the transmission gear selector lever in R position, a stationary object that is at least 7.0 cm (2.8 in.) wide and 1.0 m (39.0 in.) tall and that is closer than 1.8 meters (5.9 ft.) will be detected by the rear sonar sensors, causing the sonar buzzer to sound a tone. As the vehicle moves closer to the object, the rate of the tone will increase. When the object is less than 25.0 cm (10 in.) from the rear bumper, the tone will sound continuously.

Power is supplied

- to sonar buzzer terminal 1
- from sonar control unit terminal 7.

Ground is supplied

- to sonar buzzer terminal 2
- from sonar control unit terminal 3.

REAR SONAR SYSTEM

REAR SONAR SENSOR

With power and ground supplied to the rear sonar sensors, the sonar sensors transmit a 38.4 kHz ultrasonic signal. This signal is reflected back to the sensor by objects large enough and close enough to be detected. The rear sonar sensors measure the time from the transmitted signal to the time the signal is reflected back and sends this information to the sonar control unit.

Power is supplied

- to each rear sonar sensor terminal 1
- from sonar control unit terminal 16.

Ground is supplied

- to each rear sonar sensor terminal 3
- from sonar control unit terminal 15.

Signal is supplied

- to sonar control unit terminals 9, 10, 11 and 12.
- from each rear sonar sensor terminal 2

A

B

C

D

E

F

G

H

I

J

DI

L



M

REAR SONAR SYSTEM

EKS00AEO

Wiring Diagram — SONAR —

DI-SONAR-01

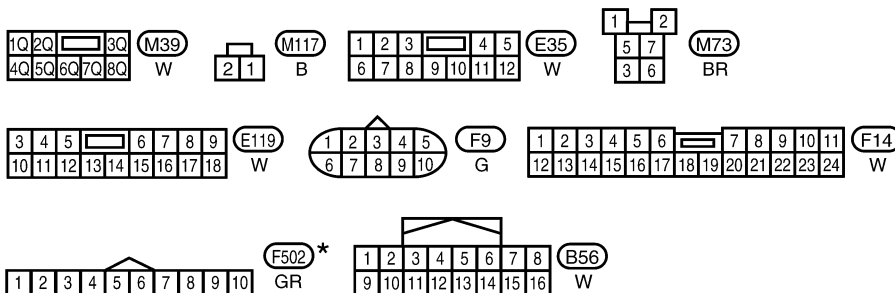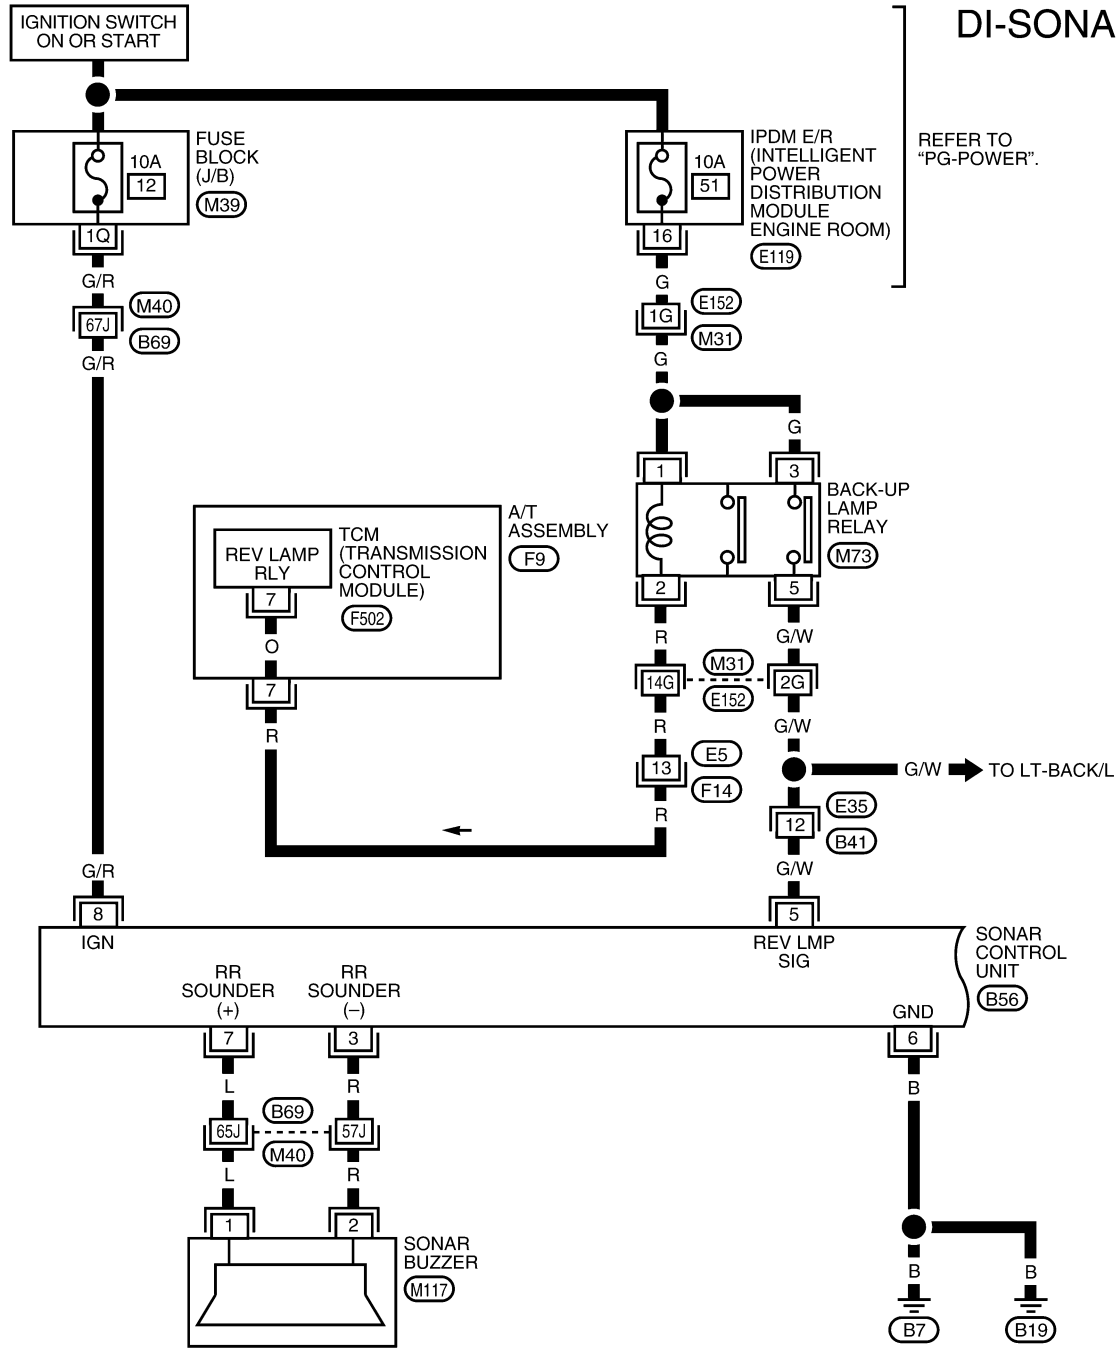


REFER TO THE FOLLOWING.
(M31), (M40) - SUPER
MULTIPLE JUNCTION (SMJ)


*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

WKWA3721E

REAR SONAR SYSTEM

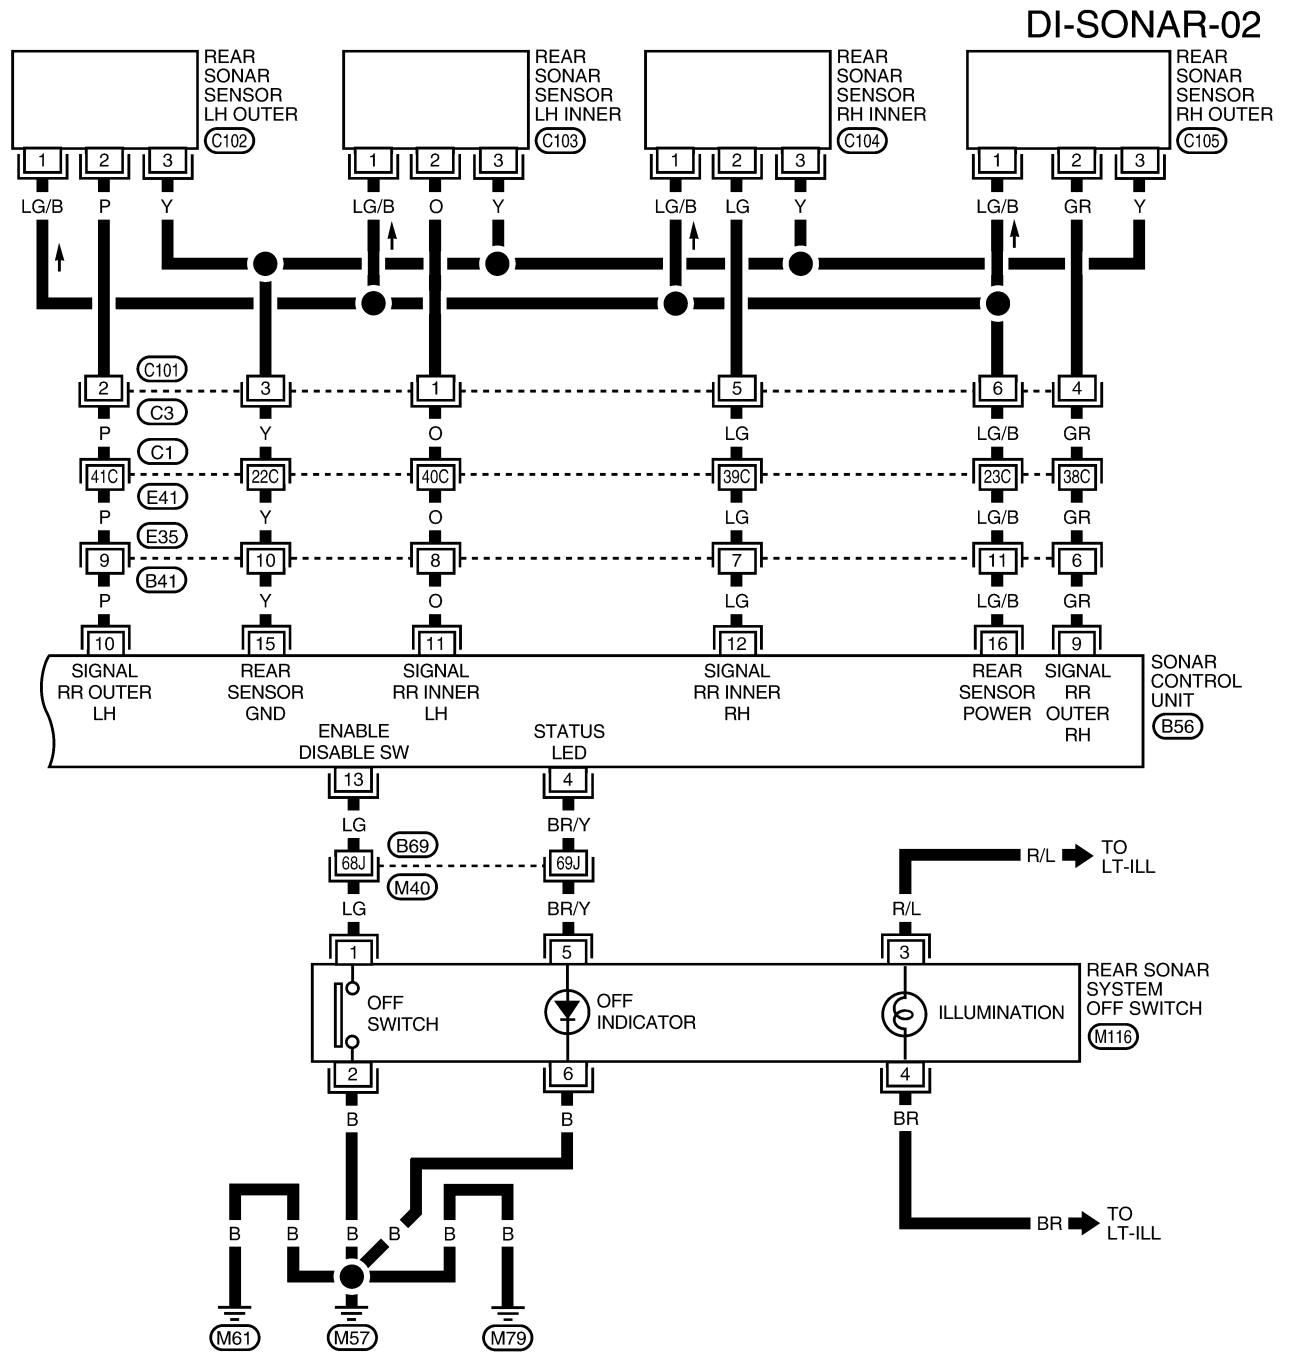

A
B
C
D
E
F
G
H
I
J
DI
L
M

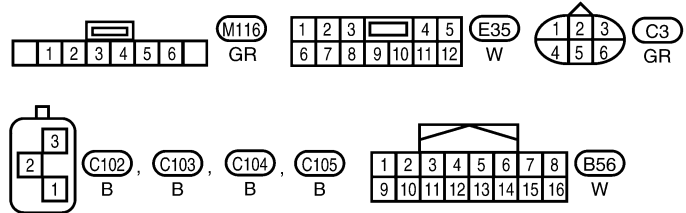

REFER TO THE FOLLOWING.
 (M40), (C1) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3722E

REAR SONAR SYSTEM

Terminals And Reference Value For Sonar Control Unit

EKS00AE1

| Terminal (color) | Item | Condition | | Reference value (V) (Approx.) | |
|---------------------|---|--------------------|--|----------------------------------|-----------------|
| | | Ignition switch | Operation | | |
| 3 (R) | Sonar buzzer return | ON | — | 0 - 12 (variable) | |
| 4 (BR/Y) | Rear sonar system OFF indicator output | ON | Rear sonar system OFF switch | ON | 0 |
| | | | | OFF | Battery voltage |
| 5 (G/W) | Reverse signal | ON | Transmission gear selector lever | R position | Battery voltage |
| | | | Transmission gear selector lever | Not R position | 0 |
| 6 (B) | Sonar control unit ground | — | — | 0 | |
| 7 (L) | Sonar buzzer drive signal | ON | — | Battery voltage | |
| 8 (G/R) | Sonar control unit power | ON | — | Battery voltage | |
| 9 (GR) | Rear sonar sensor signal - RH outer | ON | <ul style="list-style-type: none"> ● Rear sonar system OFF switch ON ● Transmission gear selector lever in R position ● Distant or no obstacles | Battery voltage | |
| 10 (P) | Rear sonar sensor signal - LH outer | ON | <ul style="list-style-type: none"> ● Rear sonar system OFF switch ON ● Transmission gear selector lever in R position ● Distant or no obstacles | Battery voltage | |
| 11 (O) | Rear sonar sensor signal - LH inner | ON | <ul style="list-style-type: none"> ● Rear sonar system OFF switch ON ● Transmission gear selector lever in R position ● Distant or no obstacles | Battery voltage | |
| 12 (LG) | Rear sonar sensor signal - RH inner | ON | <ul style="list-style-type: none"> ● Rear sonar system OFF switch ON ● Transmission gear selector lever in R position ● Distant or no obstacles | Battery voltage | |
| 13 (LG) | Rear sonar system OFF switch signal | ON | Rear sonar system OFF switch | ON | 0 |
| | | | | OFF | Battery voltage |
| 15 (Y) | Rear sonar sensor ground | ON | — | 0 | |
| 16 (LG/B) | Rear sonar sensor power | ON | Ignition switch ON | Battery voltage | |

How to Proceed With Trouble Diagnosis

EKS00AE2

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [DI-60, "System Description"](#) .
3. Perform pre-diagnosis inspection. Refer to [DI-65, "Pre-diagnosis Inspection"](#) .
4. Perform self-diagnosis. Refer to [DI-65, "Self-diagnosis Function"](#) .
5. Perform the preliminary check. Refer to [DI-67, "Preliminary Check"](#) .
6. Check symptom and repair or replace the cause of malfunction. Refer to [DI-68, "Symptom Chart"](#) .
7. Clear fault codes. Refer to [DI-66, "IDLING OR CLEARING FAULT CODES MODE"](#) .
8. Does the rear sonar system operate properly? If so, go to 9. If not, go to 3.
9. Inspection End.

REAR SONAR SYSTEM

EKS00AE3

Pre-diagnosis Inspection SENSOR STATUS CHECK

- Check that the rear sonar sensors are properly aligned (bumper is not misaligned, no deformation in sensor mounting area).
- Check that snow, mud, or other foreign objects are not adhering to the rear sonar sensors.
- Check that there is no deformation, scratches, or other damage to the rear sonar sensors.
- Check that water has not accumulated in the rear sonar sensors.

CAUTION:

Use water, cotton swab, or other soft material for cleaning the sensors.

1. Check that there are no obstacles within each rear sonar sensor's detection range.

| | Detection range |
|--------------------|---------------------------------|
| Rear sonar sensors | Approx. 1.8 m (5.9 ft.) maximum |

2. Check that there are no nearby ultrasound sources (such as the sounds of vehicle horns, motorcycle engines, or truck air brakes).
3. Check that the vehicle is on a level surface.


Self-diagnosis Function

EKS00AE4

There are four modes of self-diagnosis; entering diagnostics, requesting number of fault codes, requesting fault codes, and idling or clearing fault codes. These steps must be followed in order. Self-diagnosis can be manually exited by turning the ignition OFF, or selecting reverse gear. Self-diagnosis will exit unless a fault code request occurs before a message is repeated five times without acknowledgement.

ENTERING DIAGNOSTICS MODE

1. Turn ignition switch ON. Rear sonar system OFF switch indicator lamp illuminates for three seconds and then turns off.
2. Immediately push rear sonar system OFF switch ten times within five seconds.
3. The sonar buzzer will sound once and the rear sonar system OFF indicator will flash once.

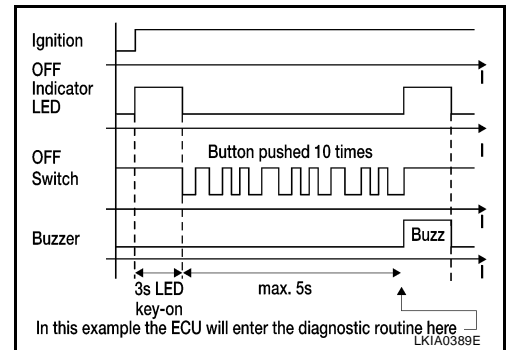


REQUESTING NUMBER OF FAULT CODES MODE

1. While in diagnostic mode, push rear sonar system OFF switch once.
2. The sonar buzzer will sound once.
3. Rear sonar system OFF indicator will flash once and sonar buzzer will sound once for each fault code detected.
4. There will be a four second pause.
5. The number of fault codes will repeat five times then pause.

NOTE:

Self-diagnosis will exit unless requesting fault codes occurs before five repeats ends.

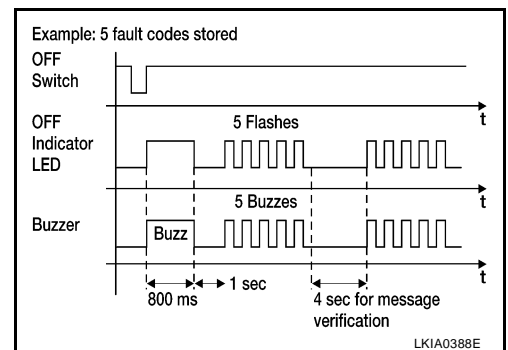

REAR SONAR SYSTEM


REQUESTING FAULT CODES MODE

1. While in "requesting number of fault codes" mode, push rear sonar system OFF switch once.
2. The sonar buzzer will sound once.
3. Rear sonar system OFF indicator will flash and sonar buzzer will sound the first digit of the fault code followed by a one second pause.
4. Rear sonar system OFF indicator will flash and sonar buzzer will sound the second digit of the fault code followed by a four second pause.
5. The fault codes will repeat five times then pause.

NOTE:

Requesting fault codes will exit unless the fault code is acknowledged before five repeats ends.

The fault code is acknowledged by pushing the rear sonar system OFF switch once (the sonar buzzer may sound). When all fault codes have been indicated, idle mode will be entered. See the following table for fault code identification.

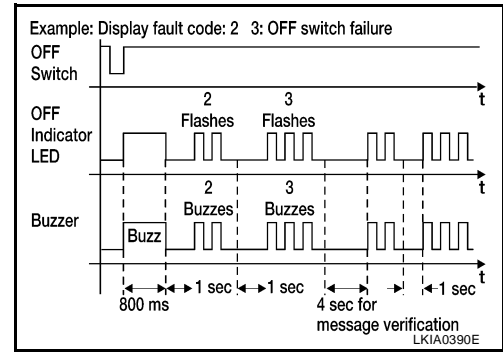


| Fault Code | Malfunction | Page Reference |
|------------|---------------------------------|--|
| 1 1 | Rear sonar sensor LH outer | Check harness for open or short. If NG repair or replace harness. If OK replace sensor. Refer to DI-70, "REAR SONAR SENSORS" . |
| 1 2 | Rear sonar sensor LH inner | |
| 1 3 | Rear sonar sensor RH inner | |
| 1 4 | Rear sonar sensor RH outer | |
| 2 1 | Sonar buzzer | DI-69, "SONAR BUZZER" |
| 2 2 | Rear sonar system OFF indicator | DI-70, "REAR SONAR SYSTEM OFF INDICATOR" |
| 2 3 | Rear sonar system OFF switch | DI-69, "REAR SONAR SYSTEM OFF SWITCH" |
| 2 4 | Sonar control unit | Replace sonar control unit. Refer to DI-70, "SONAR CONTROL UNIT" . |

IDLING OR CLEARING FAULT CODES MODE

NOTE:

While in idle mode, self-diagnosis will automatically exit if no activity occurs for thirty seconds.

1. Push and hold rear sonar system OFF switch for three seconds to reset time-out counter.
2. Push and hold rear sonar system OFF switch for three seconds to clear codes.

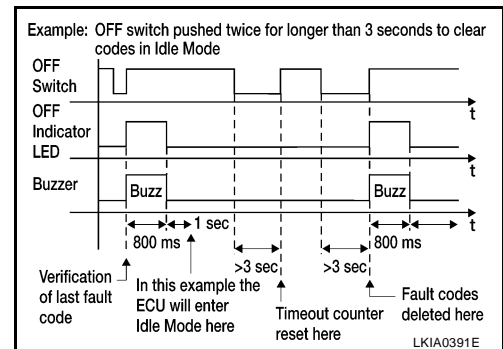

REAR SONAR SYSTEM

EKS00AE5

Preliminary Check INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES

Check for blown rear sonar system fuses.

| Unit | Power Source | Fuse |
|--------------------|--------------|------|
| Sonar control unit | ON or START | 12 |

Refer to [DI-62, "Wiring Diagram — SONAR —"](#) .

OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of problem before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

2. CHECK POWER SUPPLY CIRCUIT


1. Disconnect sonar control unit connector.
2. Check voltage between sonar control unit connector B56 terminal 8 and ground.

| Terminals | | (-) | Ignition switch position |
|-----------|----------|--------|--------------------------|
| (+) | | | ON or START |
| Connector | Terminal | | |
| B56 | 8 | Ground | Battery voltage |

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between sonar control unit and fuse.

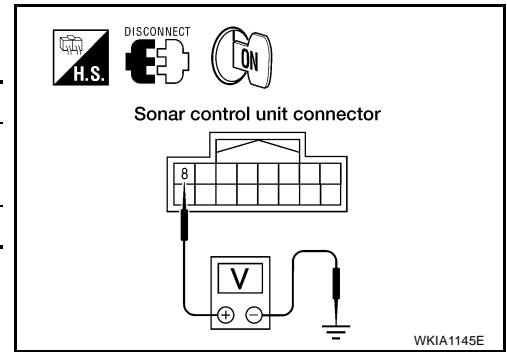

3. CHECK GROUND CIRCUIT


1. Turn ignition switch OFF.
2. Check continuity between sonar control unit B56 terminal 6 and ground.

| Terminals | | (-) | Continuity |
|-----------|----------|--------|------------|
| (+) | | | |
| Connector | Terminal | | |
| B56 | 6 | Ground | Yes |

OK or NG

OK >> Inspection End.

NG >> Check harness ground circuit.

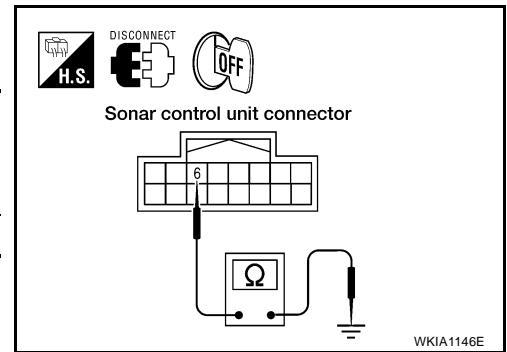

REAR SONAR SYSTEM

EKS00AE6

Symptom Chart

| Symptom | Repair order |
|---|--|
| When the rear sonar system OFF switch is OFF, the indicator lamp does not light and the buzzer does not sound. | <ol style="list-style-type: none"> 1. Check rear sonar system OFF switch for malfunction. Refer to DI-69, "REAR SONAR SYSTEM OFF SWITCH" . 2. Check rear sonar system OFF switch ground circuit. 3. Check harness and connections between rear sonar system OFF switch and sonar control unit. 4. Replace sonar control unit. Refer to DI-70, "SONAR CONTROL UNIT" . |
| When the rear sonar system OFF switch is OFF, the indicator lamp does not light but buzzer sounds. | <ol style="list-style-type: none"> 1. Check rear sonar system OFF indicator for malfunction. Refer to DI-70, "REAR SONAR SYSTEM OFF INDICATOR" . 2. Check harness and connections between rear sonar system OFF indicator and sonar control unit. 3. Replace sonar control unit. Refer to DI-70, "SONAR CONTROL UNIT" . |
| When the rear sonar system OFF switch is OFF, the sonar buzzer does not sound but indicator lamp illuminates. | <ol style="list-style-type: none"> 1. Check sonar buzzer. Refer to DI-69, "SONAR BUZZER" . 2. Check harness and connections between sonar buzzer and sonar control unit. 3. Replace sonar control unit. Refer to DI-70, "SONAR CONTROL UNIT" . |
| When rear sonar system OFF switch is ON, the rear sonar system OFF indicator lamp lights up and the sonar buzzer sounds intermittently (for about 4 seconds). | <ol style="list-style-type: none"> 1. Check harness between rear sonar sensors and sonar control unit for an open condition. 2. Check rear sonar sensors for malfunction. 3. Replace sonar control unit. Refer to DI-70, "SONAR CONTROL UNIT" . |
| The rear sonar system operates with the rear sonar system OFF switch OFF. | <ol style="list-style-type: none"> 1. Check rear sonar system OFF switch for malfunction. Refer to DI-69, "REAR SONAR SYSTEM OFF SWITCH" . 2. Check rear sonar system OFF switch ground circuit. 3. Check harness and connections between rear sonar system OFF switch and sonar control unit. 4. Replace sonar control unit. Refer to DI-70, "SONAR CONTROL UNIT" . |
| When the transmission gear selector lever is in the R position and the rear sonar system OFF switch is OFF, the sonar system does not operate. | <ol style="list-style-type: none"> 1. Check for PNP switch failure. Refer to AT-89, "SELF-DIAGNOSTIC RESULT MODE" . 2. Check harness and connections between sonar control unit and PNP/reverse lamp circuits. 3. Replace sonar control unit. Refer to DI-70, "SONAR CONTROL UNIT" . |

REAR SONAR SYSTEM


| Symptom | Repair order |
|---|--|
| <p>When the rear sonar system OFF switch is OFF, the indicator lamp lights up and buzzer sounds although there is no obstacle within the detection range.</p> | <ol style="list-style-type: none"> 1. Check for adhesion of snow, mud, or other foreign objects to rear sonar sensors; dew condensation; etc. Refer to DI-65, "Pre-diagnosis Inspection" . 2. Check that the rear sonar sensors are properly aligned (bumper is not misaligned, no deformation in sensor mounting area). 3. Check harness and connections between rear sonar sensors and sonar control unit. 4. Check rear sonar sensors for malfunction. 5. Replace sonar control unit. Refer to DI-70, "SONAR CONTROL UNIT" . |
| <p>The rear sonar sensors do not operate according to the distance between each sensor and the obstacle. (There is a large error in the obstacle detection distance.)</p> | <ol style="list-style-type: none"> 1. Check rear sonar sensors for malfunction. 2. Replace sonar control unit. Refer to DI-70, "SONAR CONTROL UNIT" . 3. Check for adhesion of snow, mud, or other foreign objects to rear sonar sensors; dew condensation; etc. Refer to DI-65, "Pre-diagnosis Inspection" . 4. Check that the rear sonar sensors are properly aligned (bumper is not misaligned, no deformation in sensor mounting area). |

Component Inspection SONAR BUZZER

EKS00AE7

1. Disconnect the sonar buzzer connector.
2. Check continuity between buzzer connector M117 terminal 1 and terminal 2


1 - 2 : Continuity should exist

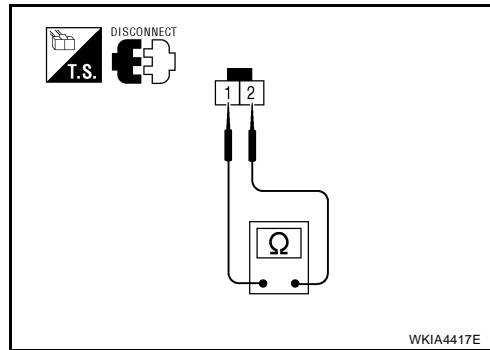

REAR SONAR SYSTEM OFF SWITCH

Disconnect the rear sonar system OFF switch M116. Check the continuity between following terminals.

| Rear sonar system OFF switch | Terminal to be inspected | Continuity |
|------------------------------|--------------------------|------------|
| Depressed | 1 - 2 | Yes |
| Released | | No |

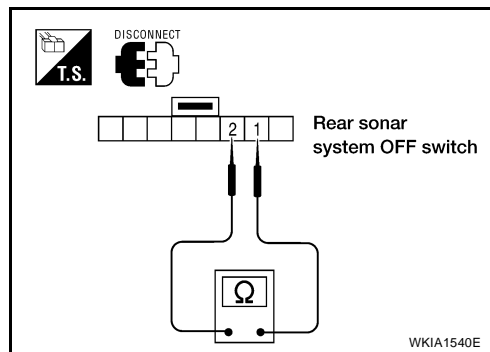


REAR SONAR SYSTEM

REAR SONAR SYSTEM OFF INDICATOR

Disconnect the rear sonar system OFF switch connector M116, and apply battery voltage (approx. 12V) to terminal 5. Check the rear sonar system OFF indicator operation when terminal 6 is connected to battery ground.

| | Terminal to be inspected | Condition | Operation |
|------------------------------|--------------------------|-------------|--|
| Rear sonar system OFF switch | 5 | Approx. 12V | Rear sonar system OFF indicator lights |
| | 6 | Ground | |

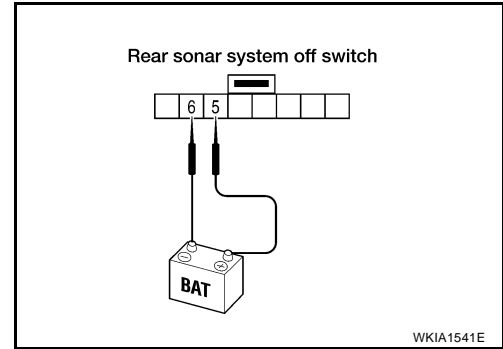

Removal and Installation REAR SONAR SENSORS

Refer to [EI-18, "REAR BUMPER"](#).

SONAR CONTROL UNIT

Removal

1. Remove the rear panel. Refer to [EI-39, "REAR"](#).
2. For king cab models only, pull up the carpet to gain access to the sonar control unit.
3. Disconnect the sonar control unit connector.
4. Remove the sonar control unit bolts and remove sonar control unit.

Installation

Installation is in the reverse order of removal.

EKS00AEB