

TROUBLE DIAGNOSIS FOR POWER SUPPLY	75
Main Power Supply and Ground Circuit.....	75
TROUBLE DIAGNOSIS FOR “CAMSHAFT POSI SEN” (DTC 11)	82
Camshaft Position Sensor (CMPS).....	82
TROUBLE DIAGNOSIS FOR “MASS AIR FLOW SEN” (DTC 12)	89
Mass Air Flow Sensor (MAFS).....	89
TROUBLE DIAGNOSIS FOR “COOLANT TEMP SEN” (DTC 13)	95
Engine Coolant Temperature Sensor (ECTS).....	95
TROUBLE DIAGNOSIS FOR “IGN SIGNAL-PRIMARY” (DTC 21)	99
Ignition Signal.....	99
TROUBLE DIAGNOSIS FOR “OVER HEAT” (DTC 28)	106
Overheat.....	106
TROUBLE DIAGNOSIS FOR “INT AIR TEMP SEN” (DTC 41)	109
Intake Air Temperature Sensor.....	109
TROUBLE DIAGNOSIS FOR “THROTTLE POSI SEN” (DTC 43)	113
Throttle Position Sensor.....	113
TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS	118
Vehicle Speed Sensor (VSS).....	118
Heated Oxygen Sensor (HO2S)	
- LHD Models -	123
Heated Oxygen Sensor Heater	
- LHD Models -	127
Idle Air Control Valve (IACV) - Auxiliary Air Control (AAC) Valve.....	131
Neutral Position Switch.....	136
EVAP Canister Purge Control Solenoid Valve..	140
Injector.....	144
Start Signal.....	149
Fuel Pump.....	151
Power Steering Oil Pressure Switch.....	157
Swirl Control Valve Control Solenoid Valve.....	161
IACV-FICD Solenoid Valve.....	168
MIL & Data Link Connectors.....	173

<input type="text"/>	TD	<input type="text"/>
INJECTION SYSTEM	176	
Fuel System.....	176	
INJECTION PUMP	178	
Inspection.....	178	
Removal.....	178	
Installation and Adjustment.....	180	
Disassembly.....	183	
Load Timer Adjustment.....	183	
Start Q Adjustment Lever.....	184	
INJECTION NOZZLE	186	

Removal and Installation.....	186
Disassembly.....	186
Inspection.....	187
Cleaning.....	187
Assembly.....	189
Test and Adjustment.....	189
FUEL SYSTEM CHECK	191
Bleeding Fuel System.....	191
Bleeding Fuel Filter.....	192
Checking Priming Pump.....	192
Checking Fuel Filter Switch.....	192
POSITIVE CRANKCASE VENTILATION	193
Description.....	193
Inspection.....	193
QUICK-GLOW SYSTEM	194
Component Parts Location.....	194
Circuit Diagram.....	195
Description.....	196
Wiring Diagram.....	197
Glow Control Unit Circuit Inspection (For Cold Areas).....	203
Glow Control Unit Circuit Inspection (Except for Cold Areas).....	206
Component Inspection.....	208
EGR SYSTEM	210
Component Parts Location.....	210
Description.....	211
Operation.....	212
Wiring Diagram.....	213
System Inspection.....	217
Component Inspection.....	218
SOLENOID TIMER	220
Description.....	220
Operation.....	220
Wiring Diagram.....	222
Inspection.....	224
FUEL CUT SYSTEM	225
Wiring Diagram.....	225
FUEL HEATER SYSTEM	226
Description.....	226
Wiring Diagram.....	227
System Inspection.....	228
Component Inspection.....	228
FAST IDLE CONTROL CIRCUIT	230
Wiring Diagram.....	230
Electrical Components Inspection.....	231

<input type="text"/>	KA	<input type="text"/>
SERVICE DATA AND SPECIFICATIONS (SDS)	232	
General Specifications.....	232	
Inspection and Adjustment.....	232	

	TD	
SERVICE DATA AND SPECIFICATIONS (SDS) .233		
VE-type Injection Pump		233

Injection Nozzle.....	233
Injection Pump Calibration Standard	234

When you read wiring diagrams:

- Read GI section, “HOW TO READ WIRING DIAGRAMS”.
 - See EL section, “POWER SUPPLY ROUTING” for power distribution circuit.
- When you perform trouble diagnoses, read GI section, “HOW TO FOLLOW FLOW CHART IN TROUBLE DIAGNOSES” and “HOW TO PERFORM EFFICIENT DIAGNOSIS FOR AN ELECTRICAL INCIDENT”.**

DIAGNOSTIC TROUBLE CODE INDEX

Alphabetical & Numerical Index for DTC (KA engine)

ALPHABETICAL INDEX FOR DTC

X: Applicable
—: Not applicable

Items (CONSULT screen terms)	DTC	MIL illumination	Reference page
CAMSHAFT POSI SEN	11	—	EC-82
COOLANT TEMP SEN	13	X	EC-95
IGN SIGNAL-PRIMARY	21	—	EC-99
INT AIR TEMP SEN	41	—	EC-109
MASS AIR FLOW SEN	12	—	EC-89
NATS MALFUNCTION	141 - 148	X	EL section*
NO SELF DIAGNOSTIC FAILURE INDICATED	55	—	—
OVER HEAT	28	X	EC-106
THROTTLE POSI SEN	43	—	EC-113

NUMERICAL INDEX FOR DTC

X: Applicable
—: Not applicable

DTC	MIL illumination	Items (CONSULT screen terms)	Reference page
11	—	CAMSHAFT POSI SEN	EC-82
12	—	MASS AIR FLOW SEN	EC-89
13	X	COOLANT TEMP SEN	EC-95
21	—	IGN SIGNAL-PRIMARY	EC-99
28	X	OVER HEAT	EC-106
41	—	INT AIR TEMP SEN	EC-109
43	—	THROTTLE POSI SEN	EC-113
55	—	NO SELF DIAGNOSTIC FAILURE INDICATED	—
141 - 148	X	NATS MALFUNCTION	EL section*

*Refer to "NATS (Nissan Anti-Theft System)" in EL section.

PRECAUTIONS AND PREPARATION

Special Service Tools

FOR DIESEL ENGINE INJECTION PUMP

Tool number Tool name	Description	Engine application
		TD
KV11229352 Measuring device ① KV11229350 Holder ② KV11229360 Nut ③ KV11229370 Pin ④ KV11254410 Dial gauge	<p style="text-align: center;">Measuring plunger lift</p> <p style="text-align: center;">NT570</p>	X
KV11103000 Pulley puller	<p style="text-align: center;">Removing injection pump drive gear</p> <p style="text-align: center;">NT676</p>	X
KV10111100 Seal cutter	<p style="text-align: center;">Removing injection pump drive gear cover</p> <p style="text-align: center;">NT046</p>	X
WS39930000 Tube presser	<p style="text-align: center;">Pressing the tube of liquid gasket</p> <p style="text-align: center;">NT052</p>	X

X: Applicable

PRECAUTIONS AND PREPARATION

Special Service Tools (Cont'd)

FOR DIESEL ENGINE INJECTION NOZZLE


Tool number Tool name	Description	Engine application
		TD
KV11289004 Nozzle cleaning kit ① KV11290012 Box ② KV11290110 Brush ③ KV11290122 Nozzle oil sump scraper ④ KV11290140 Nozzle needle tip ⑤ KV11290150 Nozzle seat scraper ⑥ KV11290210 Nozzle holder ⑦ KV11290220 Nozzle hole cleaning needle	<p style="text-align: center;">NT296</p>	X
KV11292210 Nozzle cleaning device	<p style="text-align: center;">NT293</p>	X
KV11290632 Nozzle oil sump scraper	<p style="text-align: center;">NT294</p>	X
KV11290620 Nozzle seat scraper	<p style="text-align: center;">NT295</p>	X

X: Applicable

PRECAUTIONS AND PREPARATION

Commercial Service Tool

FOR KA ENGINE MODELS

Tool name	Description
Fuel filler cap adapter	Checking fuel tank vacuum relief valve opening pressure  NT653

Supplemental Restraint System (SRS) “AIR BAG” (4WD models)

The Supplemental Restraint System “AIR BAG”, used along with a seat belt, helps to reduce the risk or severity of injury to the driver in a frontal collision. The Supplemental Restraint System consists of an air bag module (located in the center of the steering wheel), a diagnosis sensor unit, warning lamp, wiring harness and spiral cable. Information necessary to service the system safely is included in the **RS section** of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses are covered with yellow insulation either just before the harness connectors or for the complete harness, for easy identification.

Supplemental Restraint System (SRS) “AIR BAG” (2WD models)

The Supplemental Restraint System “AIR BAG”, used along with a seat belt, helps to reduce the risk or severity of injury to the driver in a frontal collision. The Supplemental Restraint System consists of an air bag module (located in the center of the steering wheel), a diagnosis sensor unit, warning lamp, wiring harness and spiral cable. Information necessary to service the system safely is included in the **RS section** of this Service Manual.


WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system.
- Do not use electrical test equipment on any circuit related to the SRS.

Engine Fuel & Emission Control System



FUEL PUMP

- Do not operate fuel pump when there is no fuel in lines.
- Tighten fuel hose clamps to the specified torque. (Refer to MA section.)



BATTERY

- Always use a 12 volt battery as power source.
- Do not attempt to disconnect battery cables while engine is running.

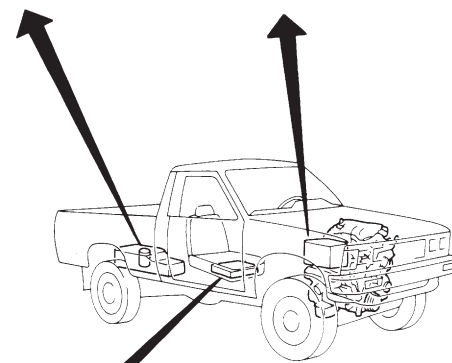

ECM

- Do not disassemble ECCS control module (ECM).
- Do not turn diagnosis mode selector forcibly.
- If a battery terminal is disconnected, the memory will return to the ECM value.


The ECCS will now start to self-control at its initial value. Engine operation can vary slightly when the terminal is disconnected. However, this is not an indication of a problem. Do not replace parts because of a slight variation.

WHEN STARTING

- Do not depress accelerator pedal when starting.
- Immediately after starting, do not rev up engine unnecessarily.
- Do not rev up engine just prior to shutdown.

WIRELESS EQUIPMENT

- When installing CB ham radio or a mobile phone, be sure to observe the following as it may adversely affect electronic control systems depending on its installation location.
 - 1) Keep the antenna as far away as possible from the electronic control units.
 - 2) Keep the antenna feeder line more than 20 cm (7.9 in) away from the harness of electronic controls. Do not let them run parallel for a long distance.
 - 3) Adjust the antenna and feeder line so that the standing-wave ratio can be kept smaller.
 - 4) Be sure to ground the radio to vehicle body.








ECCS PARTS HANDLING

- Handle mass air flow sensor carefully to avoid damage.
- Do not disassemble mass air flow sensor.
- Do not clean mass air flow sensor with any type of detergent.
- Do not disassemble IACV-AAC valve.
- Even a slight leak in the air intake system can cause serious problems.
- Do not shock or jar the camshaft position sensor.

ECCS HARNESS HANDLING

- Securely connect ECCS harness connectors. A poor connection can cause an extremely high (surge) voltage to develop in coil and condenser, thus resulting in damage to ICs.
- Keep ECCS harness at least 10 cm (3.9 in) away from adjacent harnesses, to prevent an ECCS system malfunction due to receiving external noise.
- Keep ECM parts and harnesses dry.
- Before removing parts, turn off ignition switch and then disconnect battery ground cable.

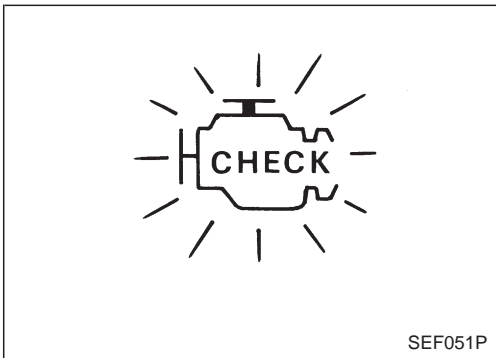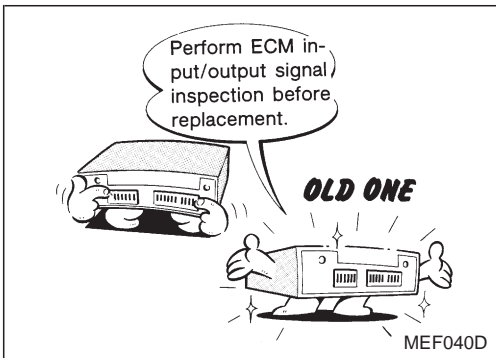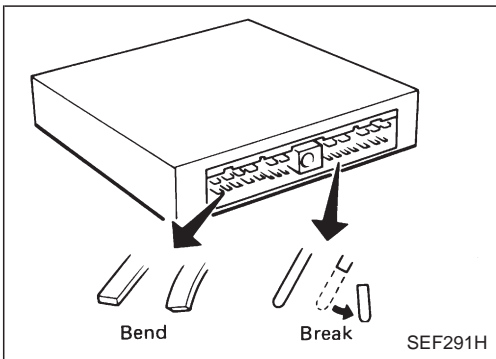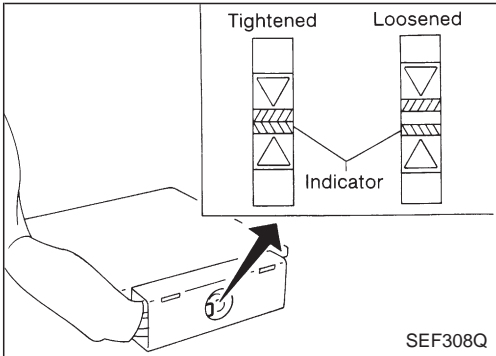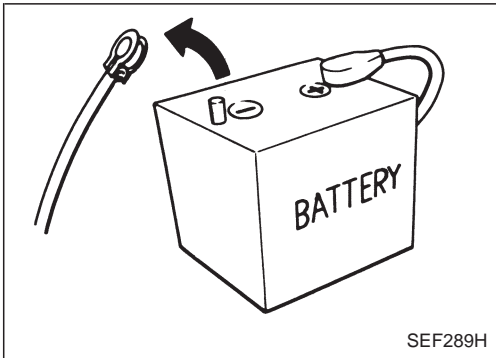

Precautions

- Before connecting or disconnecting the ECM harness connector, turn ignition switch OFF and disconnect negative battery terminal. Failure to do so may damage the ECM. Because battery voltage is applied to ECM even if ignition switch is turned off.

- When connecting ECM harness connector, tighten securing bolt until the gap between the orange indicators disappears.

: 3.0 - 5.0 N·m (0.3 - 0.5 kg·m, 26 - 43 in·lb)

- When connecting or disconnecting pin connectors into or from ECM, take care not to damage pin terminals (bend or break).

Make sure that there are not any bends or breaks on ECM pin terminal, when connecting pin connectors.


- Before replacing ECM, perform ECM input/output signal inspection and make sure whether ECM functions properly or not. (See page EC-68.)

- After performing each TROUBLE DIAGNOSIS, perform "OVERALL FUNCTION CHECK" or "DTC (Diagnostic Trouble Code) CONFIRMATION PROCEDURE".


The DTC should not be displayed in the "DTC CONFIRMATION PROCEDURE" if the repair is completed. The "OVERALL FUNCTION CHECK" should be a good result if the repair is completed.

Precautions (Cont'd)

- When measuring ECM signals with a circuit tester, never bring the two tester probes into contact. Accidental contact of probes will cause a short circuit and damage the ECM power transistor.

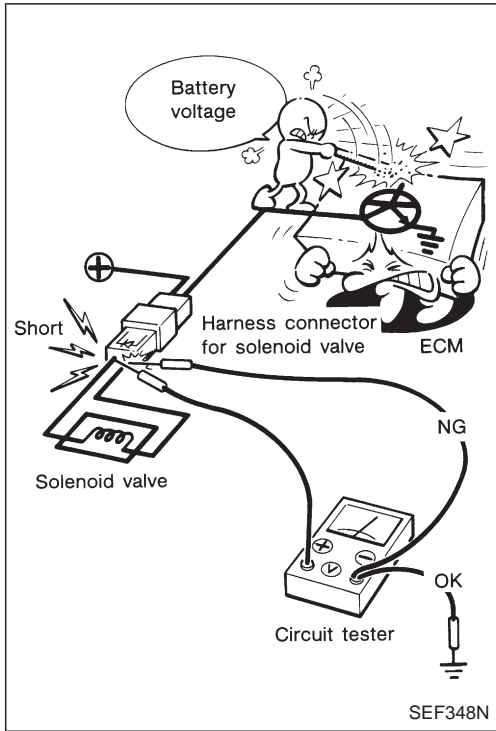


Circuit Diagram

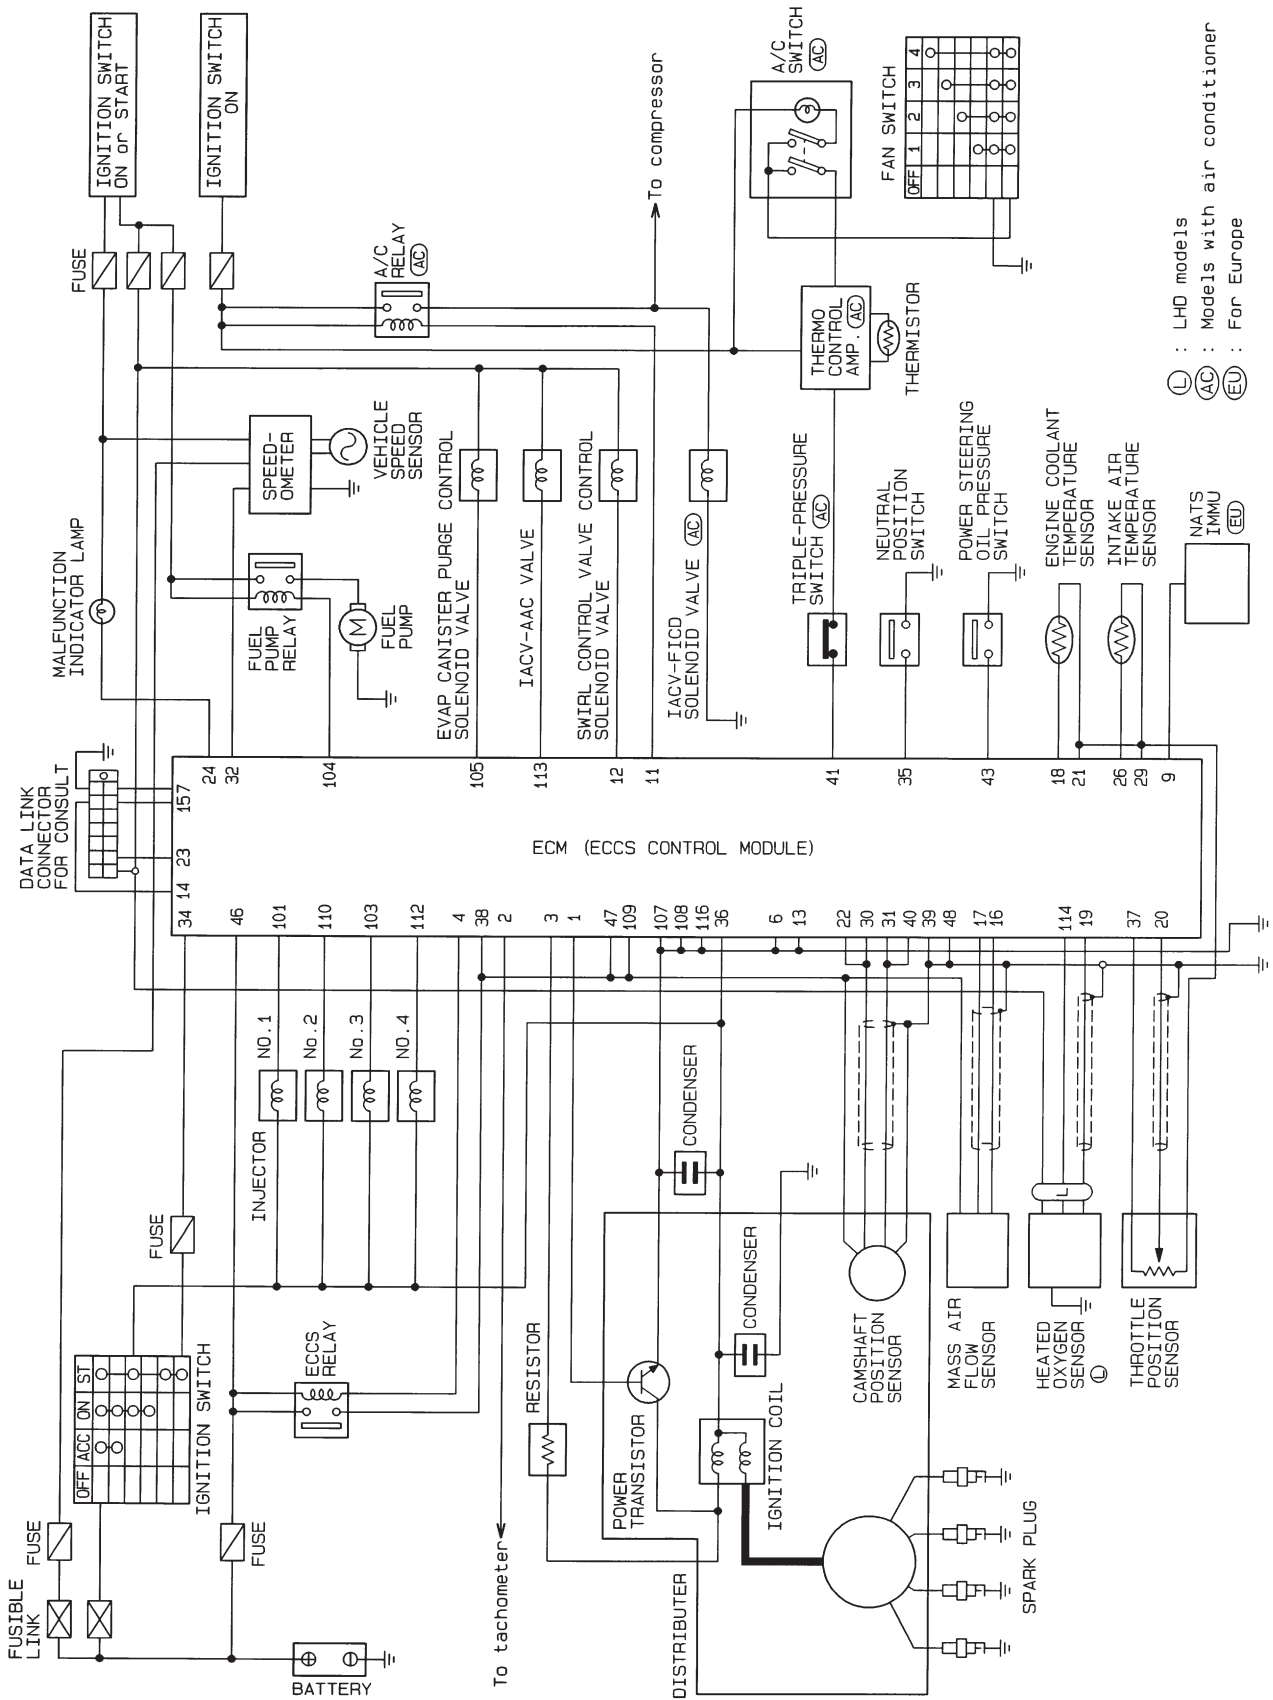


HEC557

System Diagram

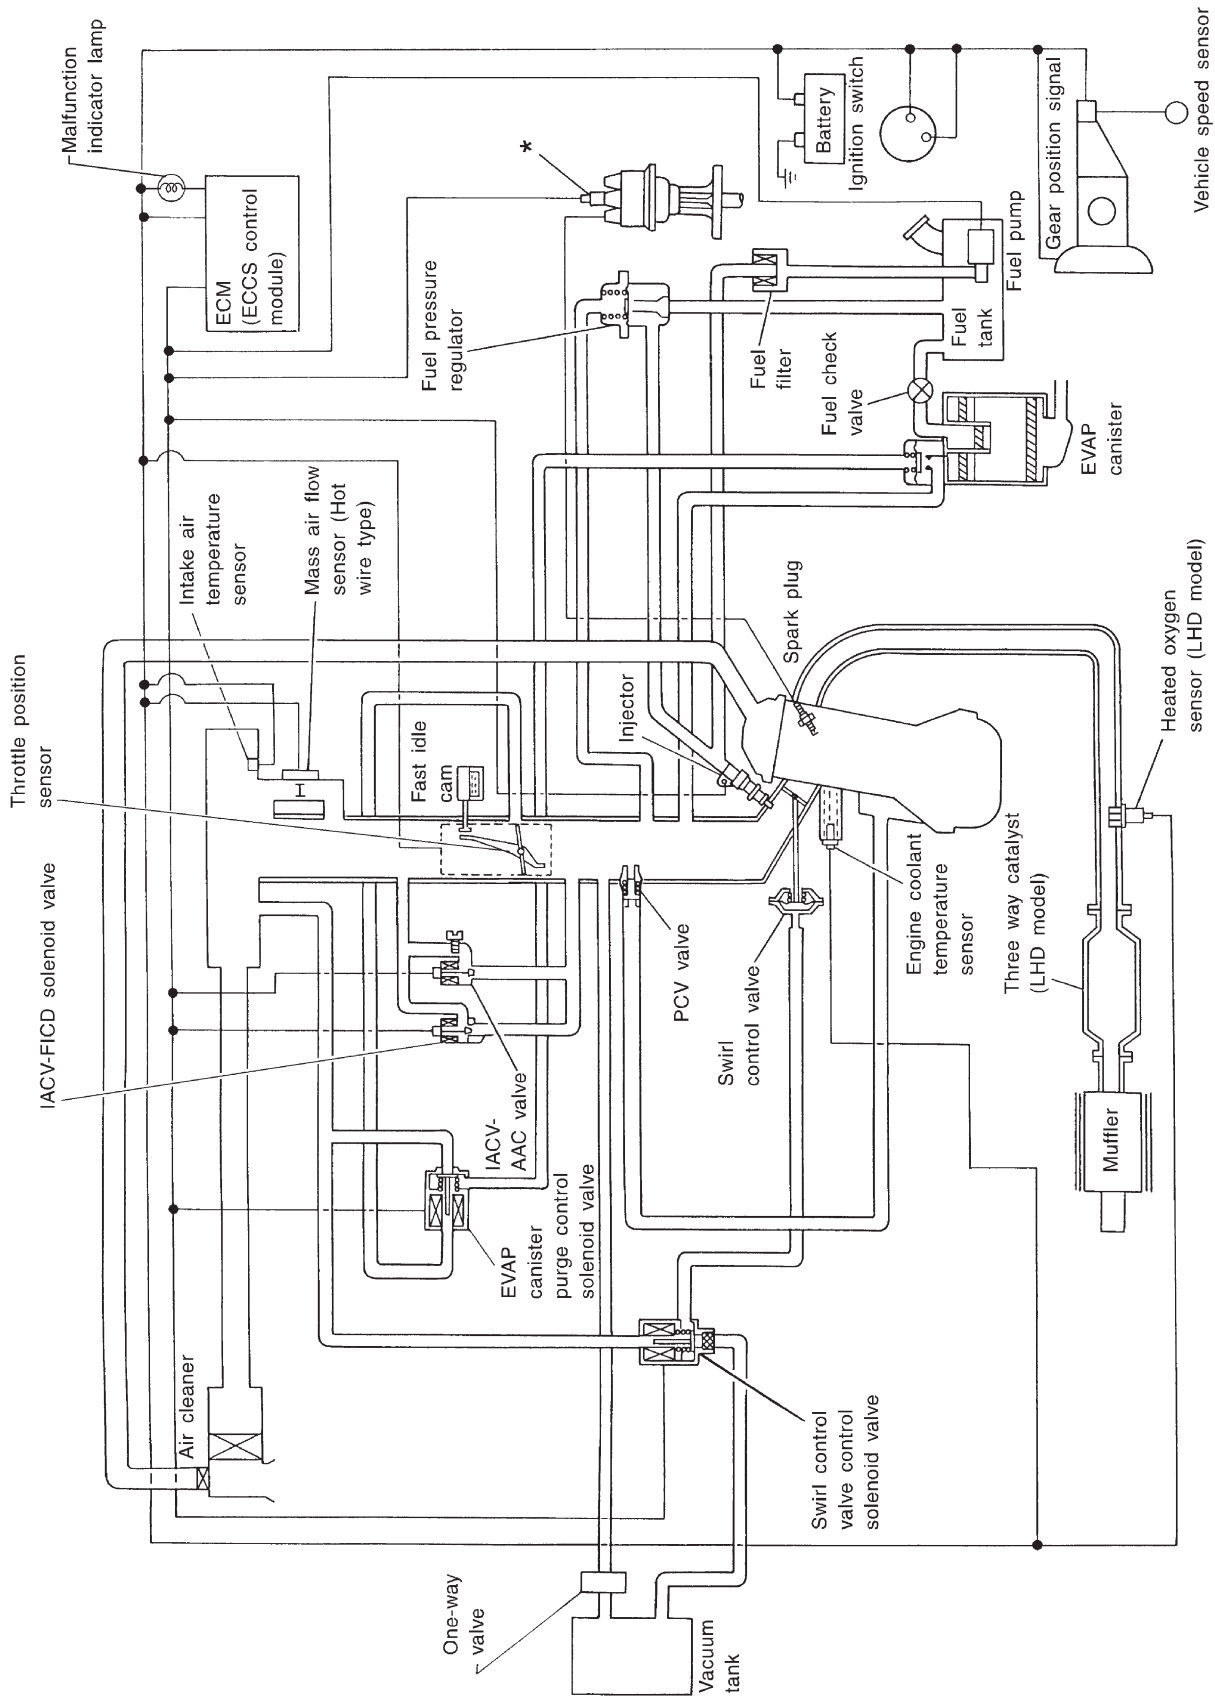




*: Ignition coil, power transistor and camshaft position sensor built into distributor

ECCS Component Parts Location

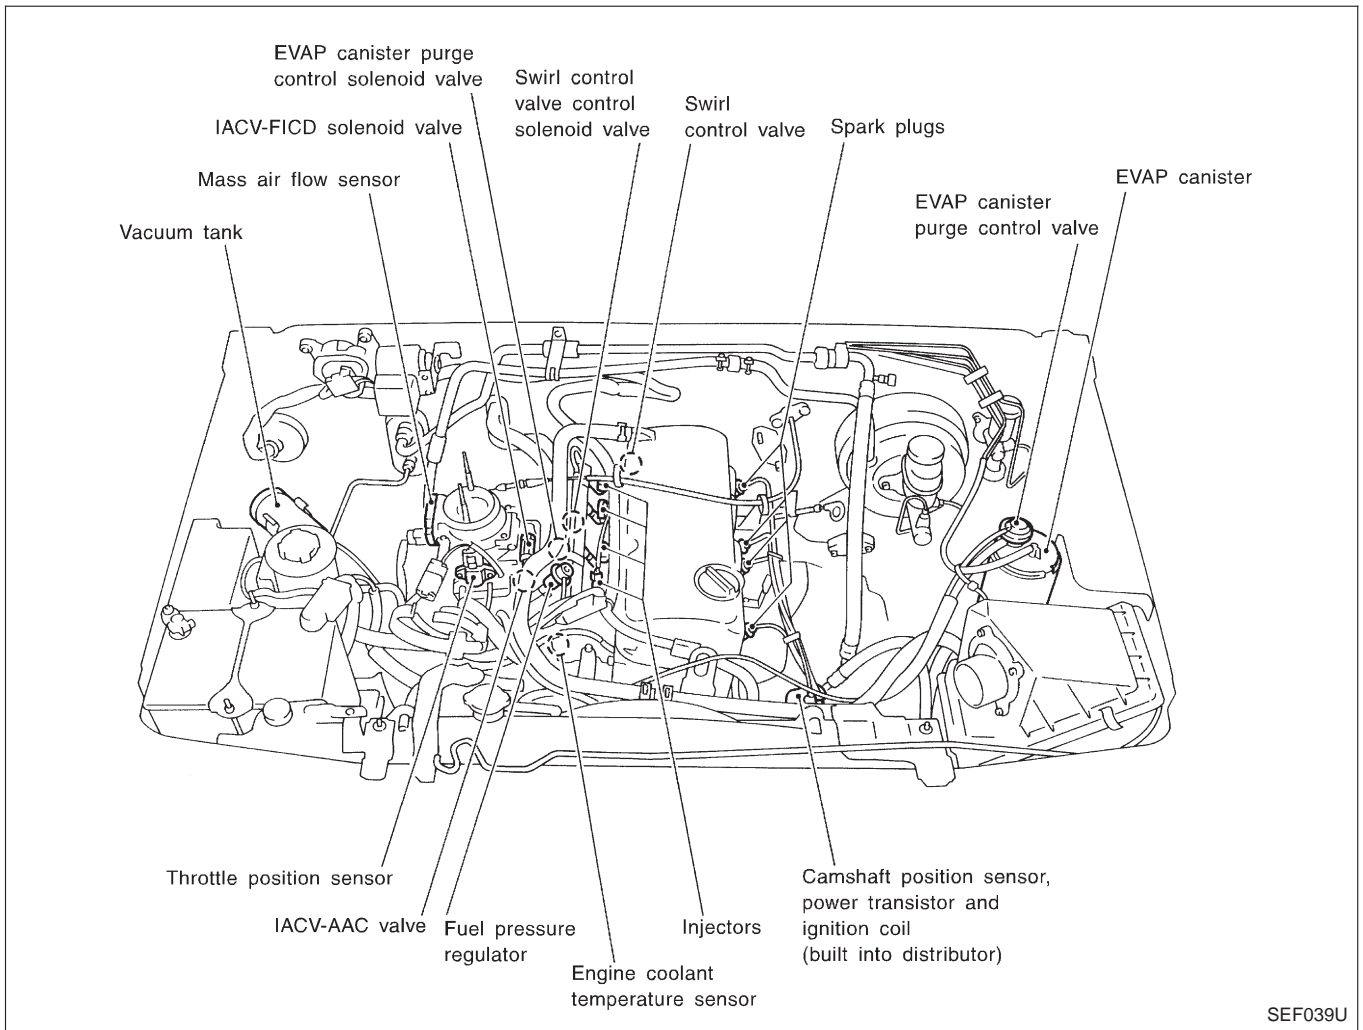


SEF039U

ECCS Component Parts Location (Cont'd)

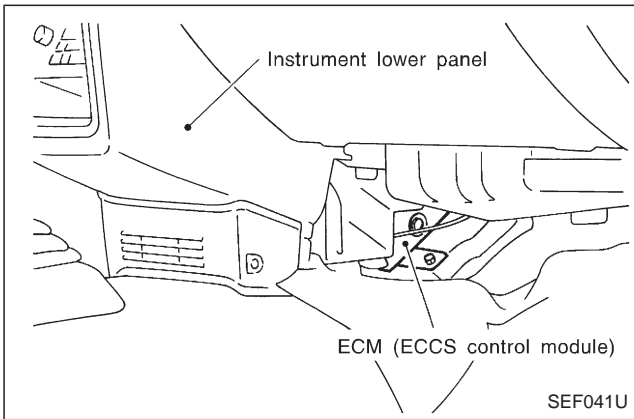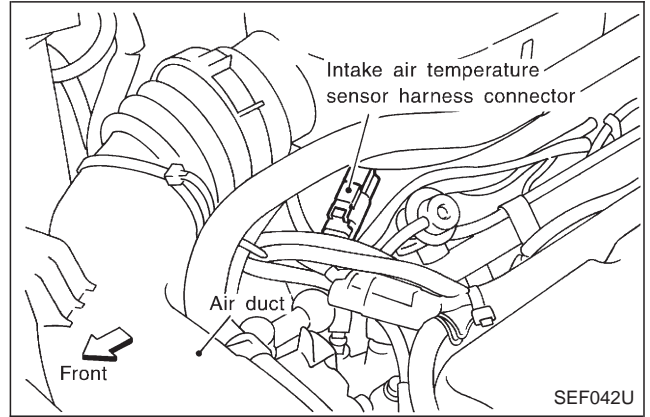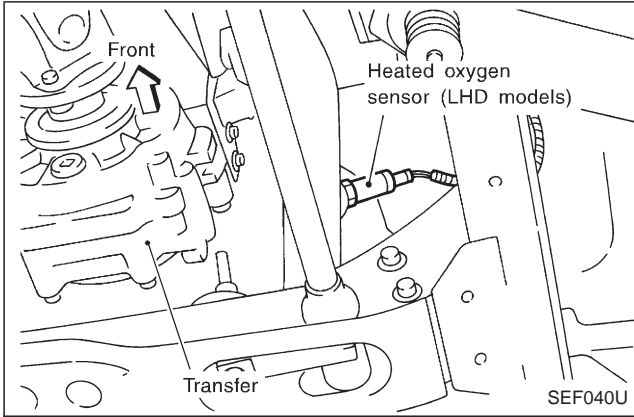

Vacuum Hose Drawing

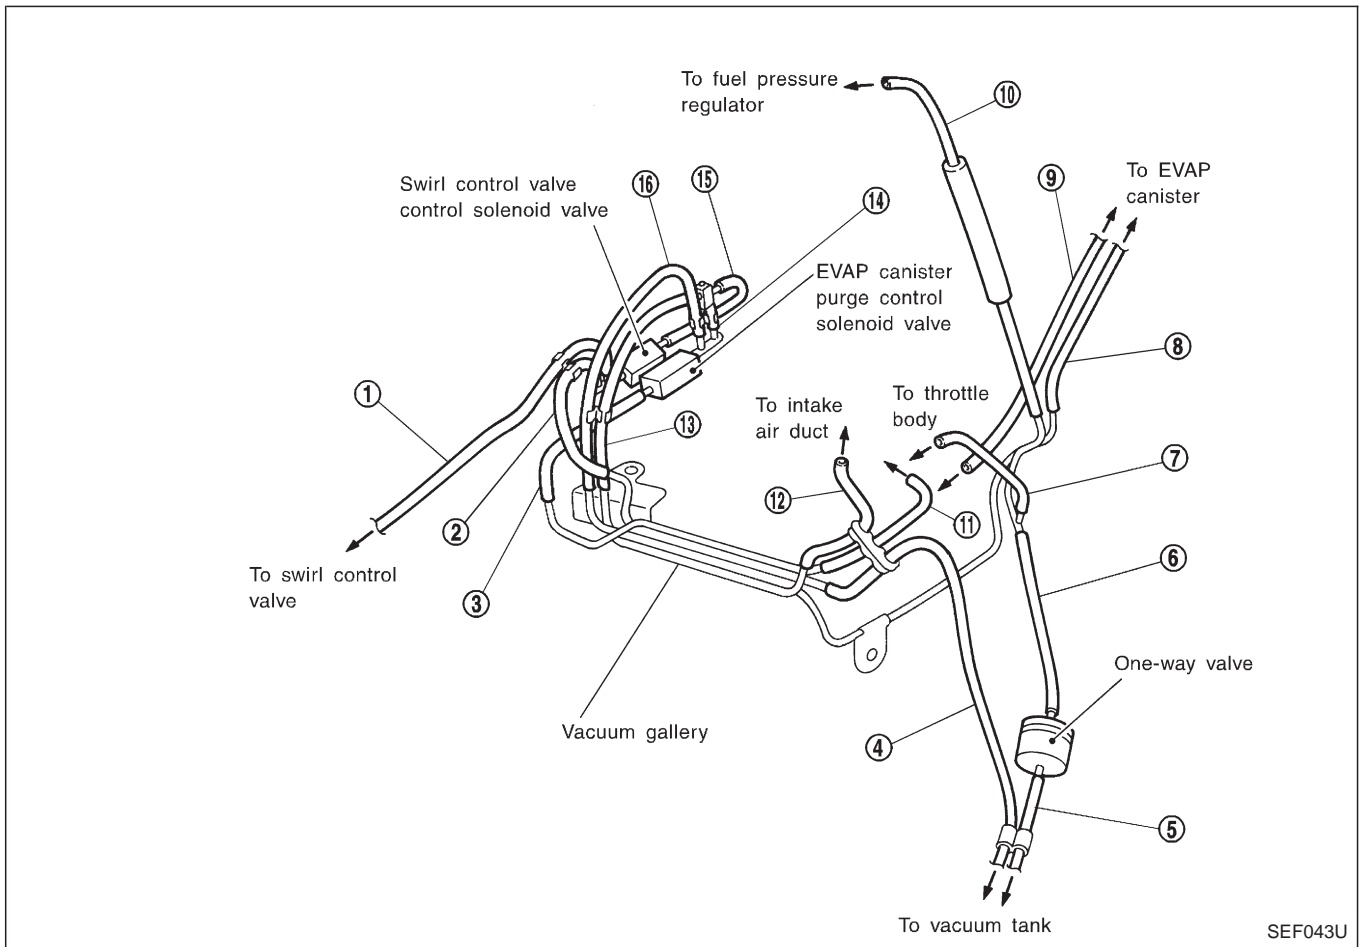


SEF043U

- | | | |
|---|---|---|
| ① Swirl control valve control solenoid valve to swirl control valve | ⑥ One-way valve to vacuum gallery | ⑬ Vacuum gallery to 3-way connector |
| ② Swirl control valve control solenoid valve to vacuum gallery | ⑦ Throttle body to vacuum gallery | ⑭ EVAP canister purge control solenoid valve to 3-way connector |
| ③ EVAP canister purge control solenoid valve to vacuum gallery | ⑧ EVAP canister to vacuum gallery | ⑮ Swirl control valve control solenoid valve to 3-way connector |
| ④ Vacuum tank to vacuum gallery | ⑨ EVAP canister to throttle body | ⑯ EVAP canister purge control solenoid valve to vacuum gallery |
| ⑤ Vacuum tank to one-way valve | ⑩ Fuel pressure regulator to vacuum gallery | |
| | ⑪ Throttle body to vacuum gallery | |
| | ⑫ Intake air duct to vacuum gallery | |

Refer to "System Diagram", EC-9, for vacuum control system.


System Chart

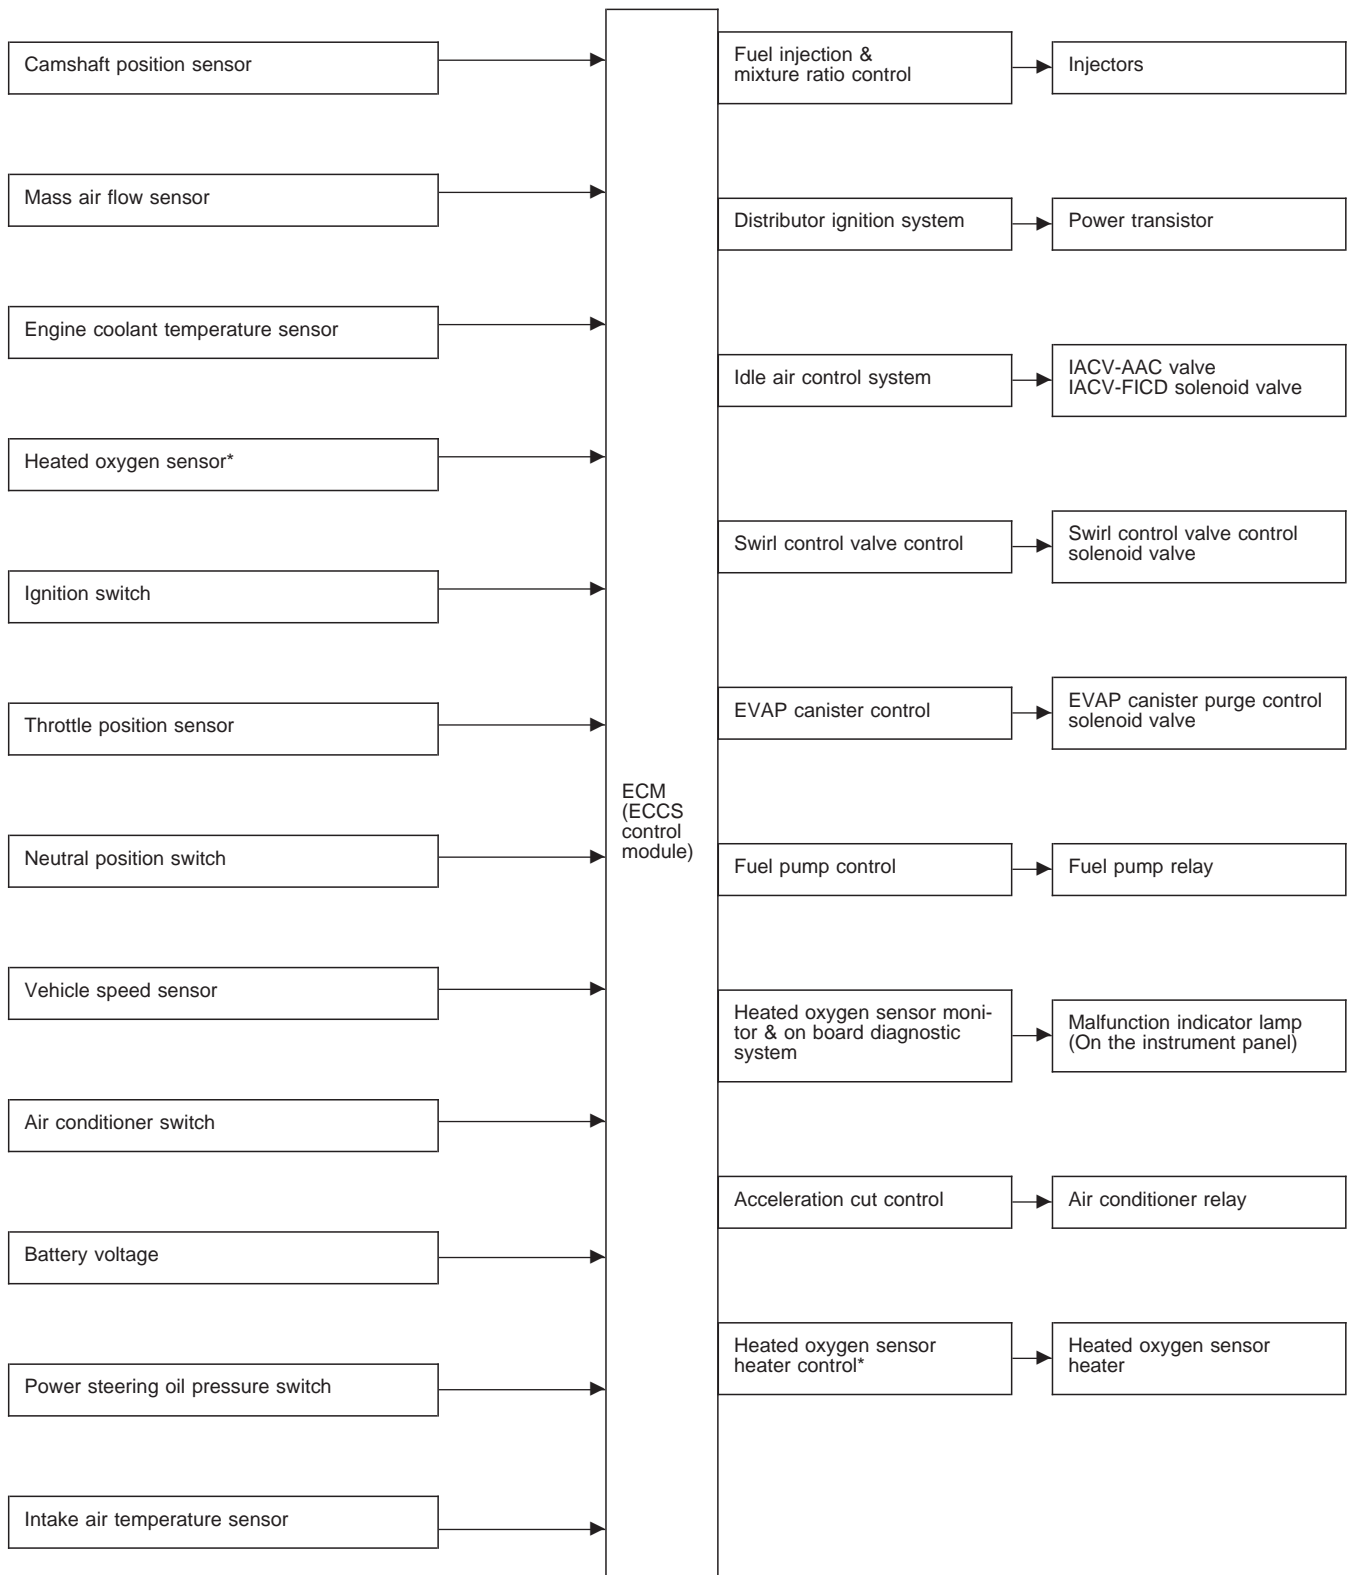

*: LHD models

Multiport Fuel Injection (MFI) System

INPUT/OUTPUT SIGNAL LINE

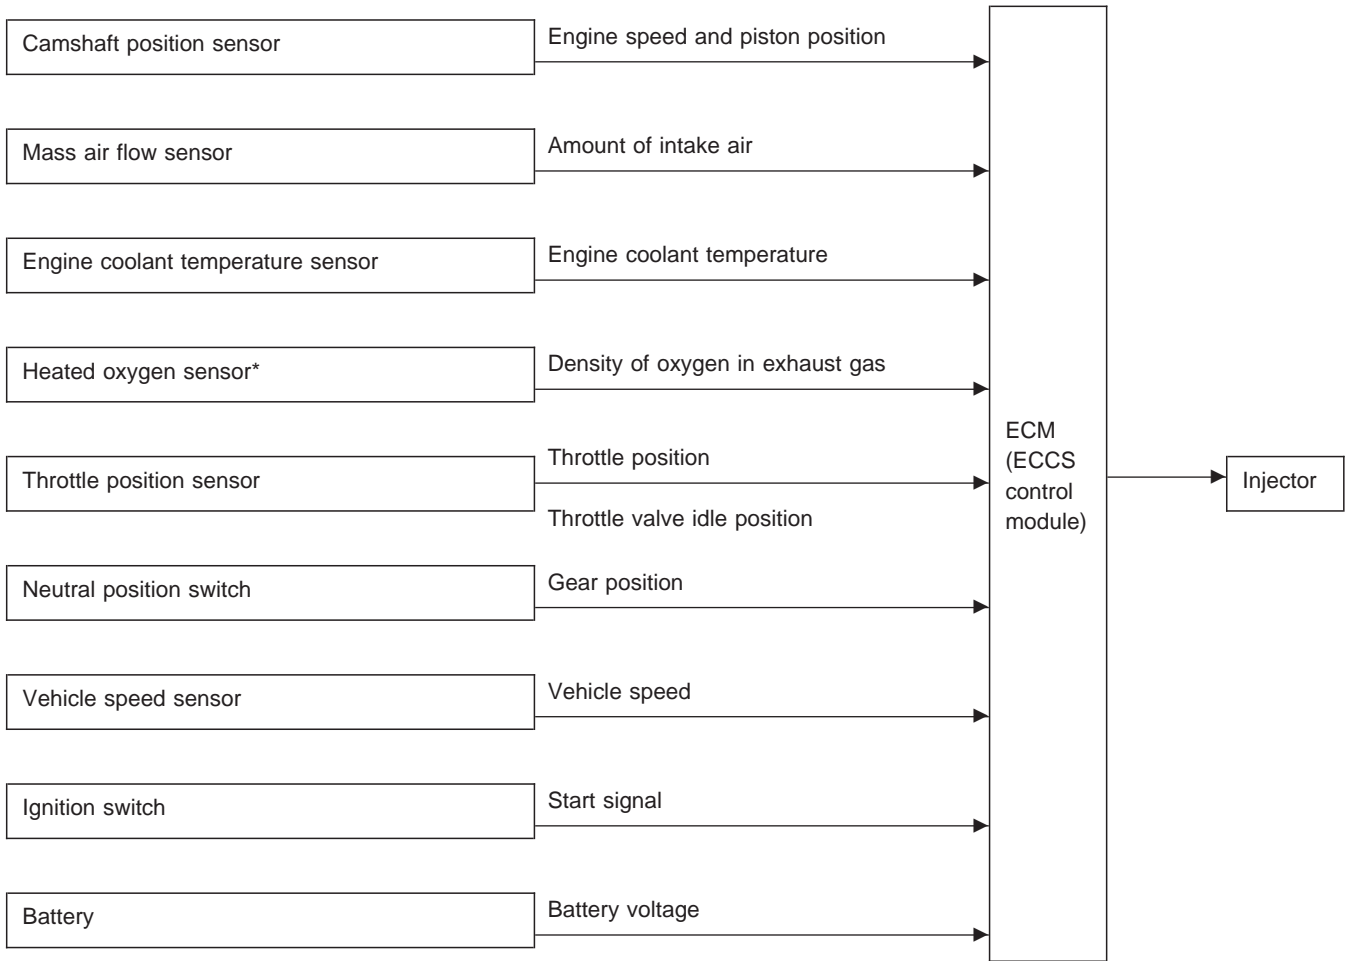

*: LHD models

BASIC MULTIPOINT FUEL INJECTION SYSTEM

The amount of fuel injected from the fuel injector is determined by the ECM. The ECM controls the length of time the valve remains open (injection pulse duration). The amount of fuel injected is a program value in the ECM memory. The program value is preset by engine operating conditions. These conditions are determined by input signals (for engine speed and intake air) from both the camshaft position sensor and the mass air flow sensor.

VARIOUS FUEL INJECTION INCREASE/DECREASE COMPENSATION

The amount of fuel injected is compensated for to improve engine performance. This will be made under various operating conditions as listed below.

<Fuel increase>

- During warm-up
- When starting the engine
- During acceleration
- Hot-engine operation
- High-load, high-speed operation
- When swirl control valve operates

<Fuel decrease>

- During deceleration
- During high-engine speed operation
- Extremely high-engine coolant temperature

Multipoint Fuel Injection (MFI) System (Cont'd)

MIXTURE RATIO FEEDBACK CONTROL

The mixture ratio feedback system provides the best air-fuel mixture ratio for driveability and emission control. The three way catalyst can then better reduce CO, HC and NOx emissions. This system uses a heated oxygen sensor in the exhaust manifold to monitor if the engine is rich or lean. The ECM adjusts the injection pulse width according to the sensor voltage signal. For more information about heated oxygen sensor, refer to page EC-123. This maintains the mixture ratio within the range of stoichiometric (ideal air-fuel mixture).

This stage is referred to as the closed loop control condition.

OPEN LOOP CONTROL



The open loop system condition refers to when the ECM detects any of the following conditions. Feedback control stops in order to maintain stabilized fuel combustion.

- Deceleration and acceleration
- High-load, high-speed operation
- Engine idling
- Malfunction of heated oxygen sensor or its circuit
- Insufficient activation of heated oxygen sensor at low engine coolant temperature
- High-engine coolant temperature
- During warm-up
- When starting the engine

MIXTURE RATIO SELF-LEARNING CONTROL

The mixture ratio feedback control system monitors the mixture ratio signal transmitted from the heated oxygen sensor. This feedback signal is then sent to the ECM. The ECM controls the basic mixture ratio as close to the theoretical mixture ratio as possible. However, the basic mixture ratio is not necessarily controlled as originally designed. Both Manufacturing differences (i.e. mass air flow sensor hot wire) and characteristic changes during operation (i.e. injector clogging) directly affect mixture ratio.

Accordingly, the difference between the basic and theoretical mixture ratios is monitored in this system. This is then computed in terms of "injection pulse duration" to automatically compensate for the difference between the two ratios.

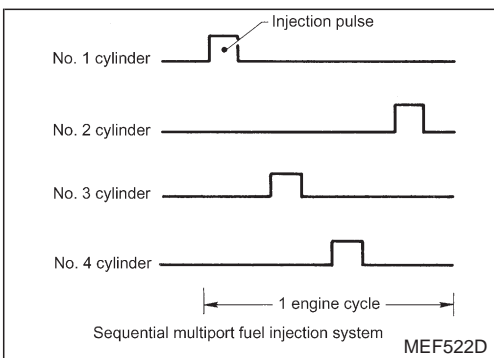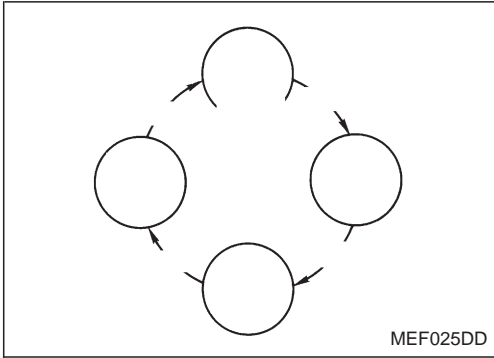

FUEL INJECTION SYSTEM

Two types of systems are used.

Sequential multipoint fuel injection system

Fuel is injected into each cylinder during each engine cycle according to the firing order. This system is used when the engine is running.

Multiport Fuel Injection (MFI) System (Cont'd)

Simultaneous multipoint fuel injection system


Fuel is injected simultaneously into all four cylinders twice each engine cycle. In other words, pulse signals of the same width are simultaneously transmitted from the ECM.

The four injectors will then receive the signals two times for each engine cycle.

This system is used when the engine is being started and/or if the fail-safe mode (CPU) is operating.



FUEL SHUT-OFF

Fuel to each cylinder is cut off during deceleration or operation of the engine at excessively high speeds.

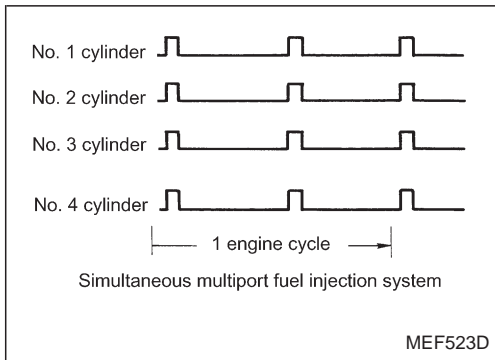

Distributor Ignition (DI) System

INPUT/OUTPUT SIGNAL LINE

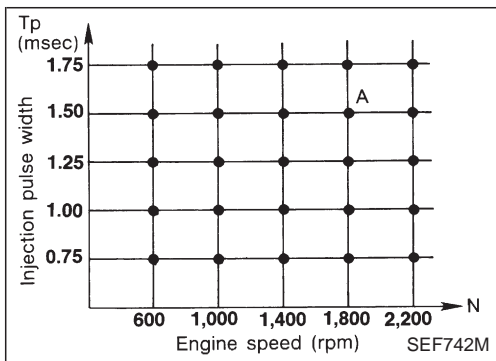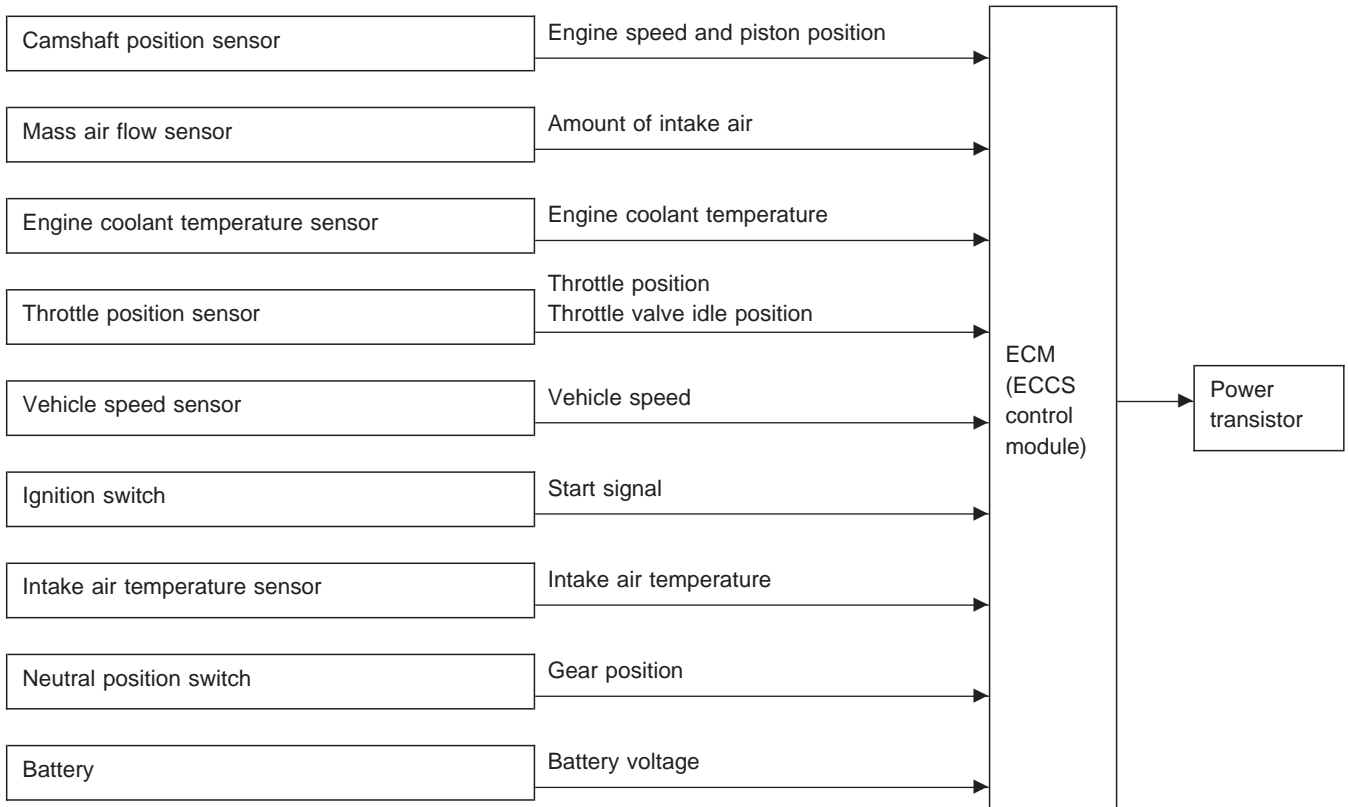

SYSTEM DESCRIPTION

The ignition timing is controlled by the ECM to maintain the best air-fuel ratio for every running condition of the engine.

The ignition timing data is stored in the ECM. This data forms the map shown left.

The ECM detects information such as the injection pulse width and camshaft position sensor signal. Responding to this information, ignition signals are transmitted to the power transistor.


e.g. N: 1,800 rpm, Tp: 1.50 msec
A °BTDC

During the following conditions, the ignition timing is revised by the ECM according to the other data stored in the ECM.

- 1 At starting
- 2 During warm-up
- 3 At idle
- 4 When swirl control valve operates
- 5 Hot-engine operation
- 6 At acceleration

Air Conditioning Cut Control

INPUT/OUTPUT SIGNAL LINE

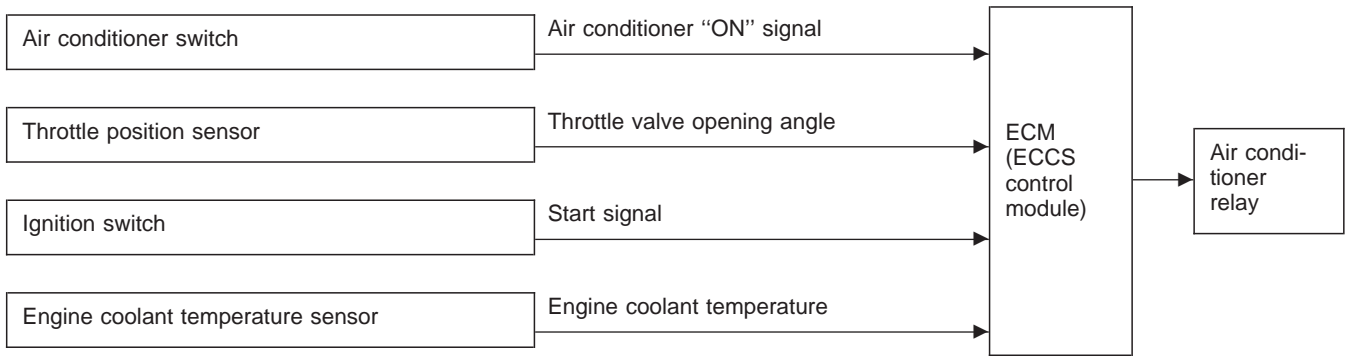


SYSTEM DESCRIPTION

This system improves engine operation when the air conditioner is used. Under the following conditions, the air conditioner is turned off.

- When the accelerator pedal is fully depressed
- When cranking the engine
- When the engine coolant temperature becomes excessively high

Fuel Cut Control (at no load & high engine speed)

INPUT/OUTPUT SIGNAL LINE

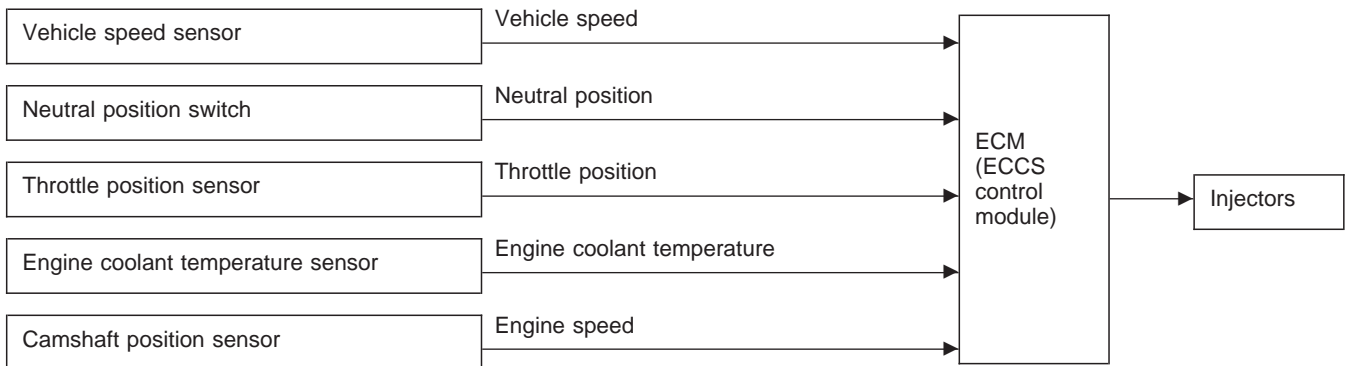


If the engine speed is above 3,500 rpm with no load (for example, in neutral and engine speed over 3,500 rpm) fuel will be cut off after some time. The exact time when the fuel is cut off varies based on engine speed.

Fuel cut will operate until the engine speed reaches 1,500 rpm, then fuel cut is cancelled.

NOTE:

This function is different than deceleration control listed under multiport fuel injection on EC-14.

Description

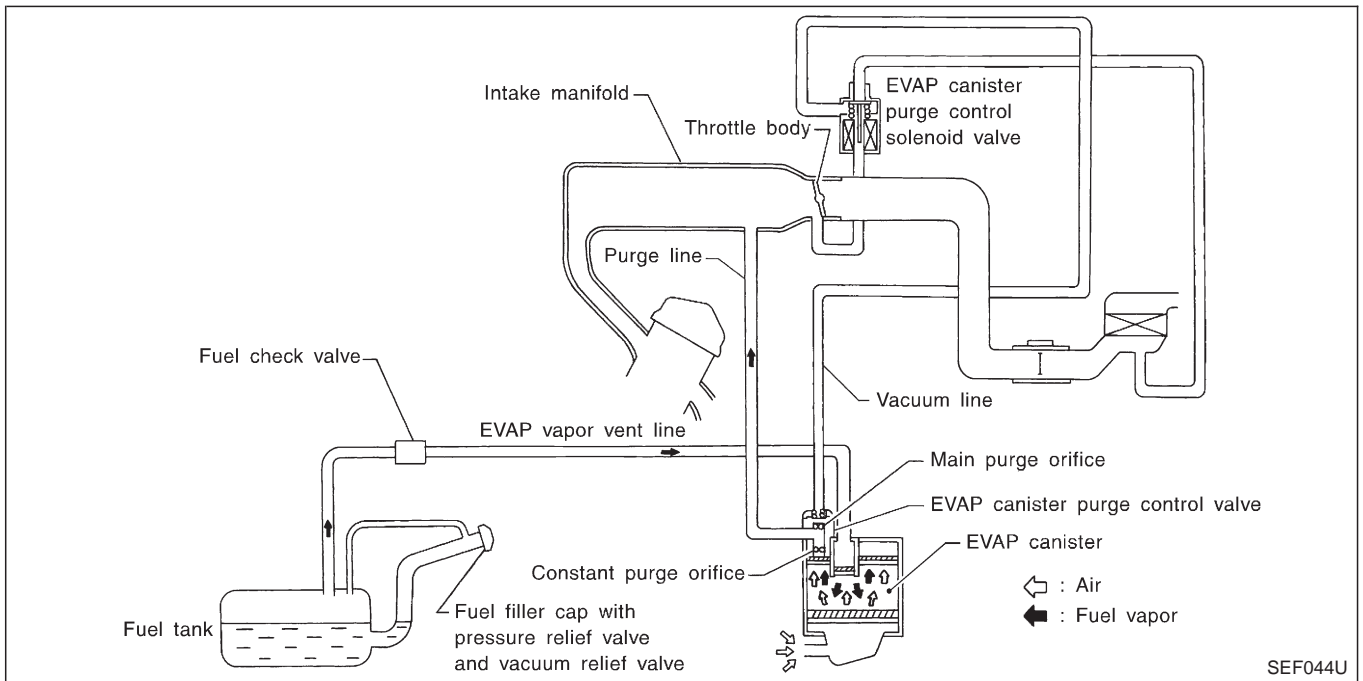


The evaporative emission system is used to reduce hydrocarbons emitted into the atmosphere from the fuel system. This reduction of hydrocarbons is accomplished by activated charcoals in the EVAP canister.

The fuel vapor from sealed fuel tank is led into the EVAP canister when the engine is off. The fuel vapor is then stored in the EVAP canister. The EVAP canister retains the fuel vapor until the EVAP canister is purged by air.

When the engine is running, the air is drawn through the bottom of the EVAP canister. The fuel vapor will then be led to the intake manifold.

When the engine runs at idle, the EVAP canister purge control valve is closed. Only a small amount of vapor flows into the intake manifold through the constant purge orifice.

As the engine speed increases and the throttle vacuum rises, the EVAP canister purge control valve opens. The vapor is sucked through both main purge and constant purge orifices.

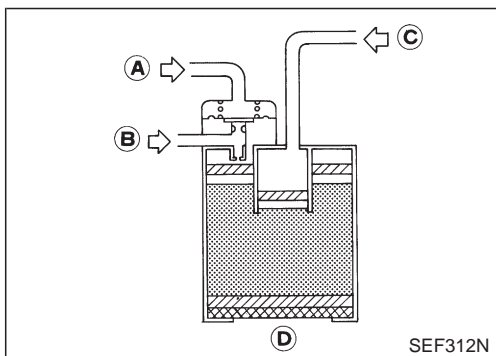

Inspection

EVAP CANISTER

Check EVAP canister as follows:

1. Blow air in port (A) and check that there is no leakage.
2. Apply vacuum to port (A). [Approximately -13.3 to -20.0 kPa (-133 to -200 mbar, -100 to -150 mmHg, -3.94 to -5.91 inHg)]
3. Cover port (D) by hand.
4. Blow air in port (C) and check that it flows freely out of port (B).




Inspection (Cont'd)

FUEL CHECK VALVE

1. Blow air through connector on fuel tank side.
A considerable resistance should be felt and a portion of air flow should be directed toward the EVAP canister side.
2. Blow air through connector on EVAP canister side.
Air flow should be smoothly directed toward fuel tank side.
3. If fuel check valve is suspected of not properly functioning in steps 1 and 2 above, replace it.

Rollover valve operation (RHD models only)

Ensure that continuity of air passage does not exist when the installed rollover valve is tilted to 90° or 180°.

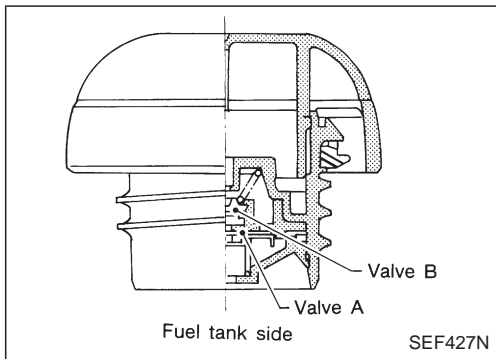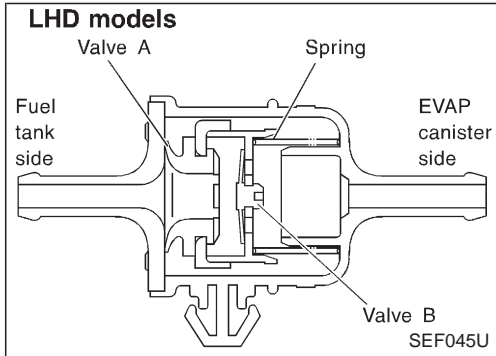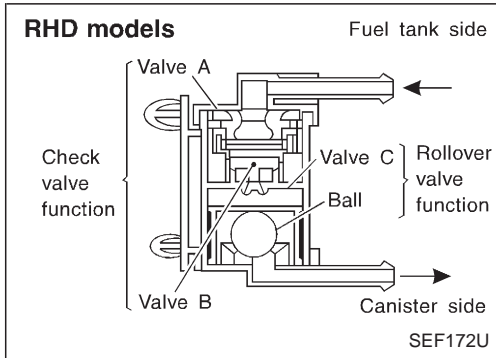

FUEL TANK VACUUM RELIEF VALVE

1. Wipe clean valve housing.
2. Check valve opening pressure and vacuum.

Pressure:

15.3 - 20.0 kPa (0.1530 - 0.2001 bar, 0.156 - 0.204 kg/cm², 2.22 - 2.90 psi)


Vacuum:

-6.0 to -3.3 kPa (-0.0598 to -0.0333 bar, -0.061 to -0.034 kg/cm², -0.87 to -0.48 psi)

3. If out of specification, replace fuel filler cap as an assembly.


CAUTION:

Use only a genuine fuel filler cap as a replacement.

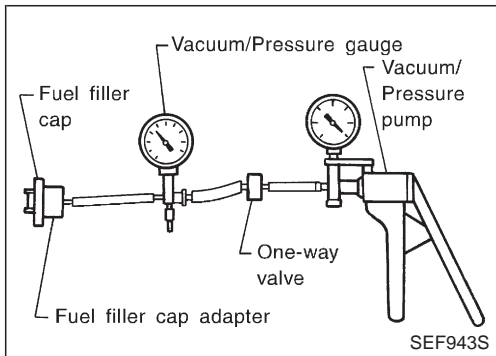


EVAP CANISTER PURGE CONTROL SOLENOID VALVE

Refer to EC-140.

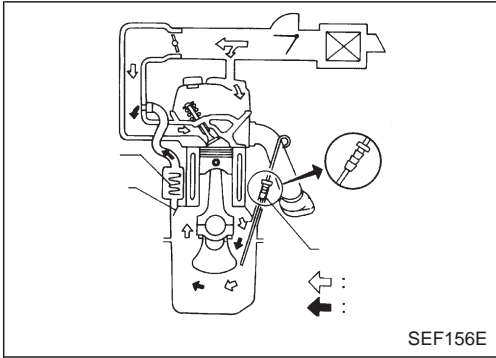


Description

This system returns blow-by gas to the intake manifold collector. The positive crankcase ventilation (PCV) valve is provided to conduct crankcase blow-by gas to the intake manifold. During partial throttle operation of the engine, the intake manifold sucks the blow-by gas through the PCV valve. Normally, the capacity of the valve is sufficient to handle any blow-by and a small amount of ventilating air. The ventilating air is then drawn from the air duct into the crankcase. In this process the air passes through the hose connecting air inlet tubes to the rocker cover.

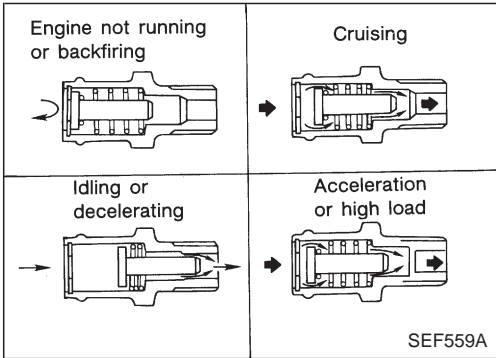

Under full-throttle condition, the manifold vacuum is insufficient to draw the blow-by flow through the valve. The flow goes through the hose connection in the reverse direction.


On vehicles with an excessively high blow-by, the valve does not meet the requirement. This is because some of the flow will go through the hose connection to the intake collector under all conditions.

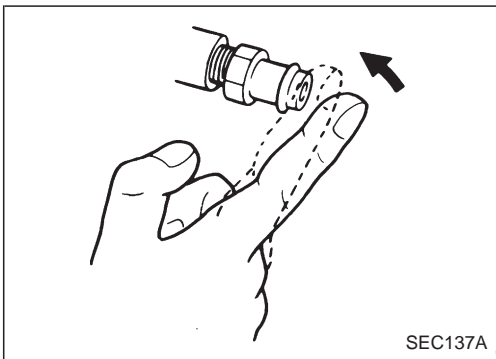

Inspection


PCV (Positive Crankcase Ventilation) VALVE

With engine running at idle, remove PCV valve from breather separator. A properly working valve makes a hissing noise as air passes through it. A strong vacuum should be felt immediately when a finger is placed over the valve inlet.

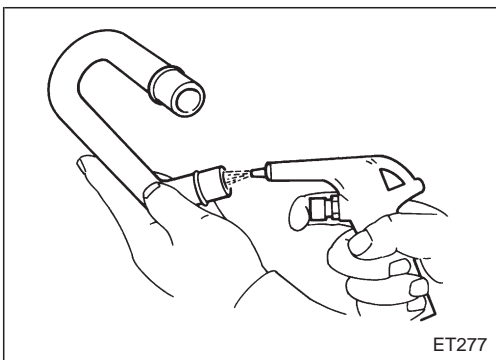

PCV HOSE


1. Check hoses and hose connections for leaks.
2. Disconnect all hoses and clean with compressed air. If any hose cannot be freed of obstructions, replace.

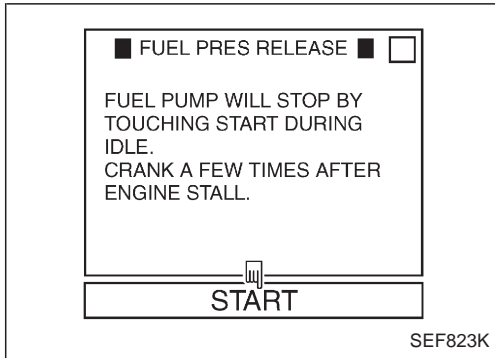

Fuel Pressure Release


Before disconnecting fuel line, release fuel pressure from fuel line to eliminate danger.

1. Start engine.
2. Perform "FUEL PRESSURE RELEASE" in "WORK SUPPORT" mode with CONSULT.
(Touch "START" and after engine stalls, crank it two or three times to release all fuel pressure.)
3. Turn ignition switch off.

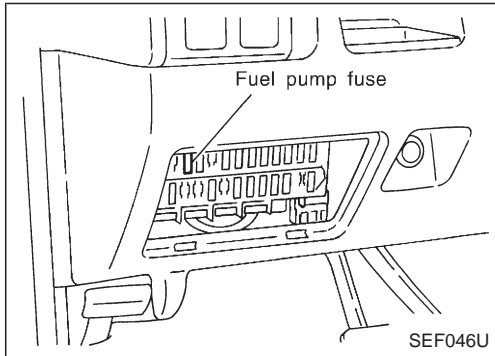

OR

1. Remove fuse for fuel pump.
2. Start engine.
3. After engine stalls, crank it two or three times to release all fuel pressure.
4. Turn ignition switch off and reconnect fuel pump fuse.

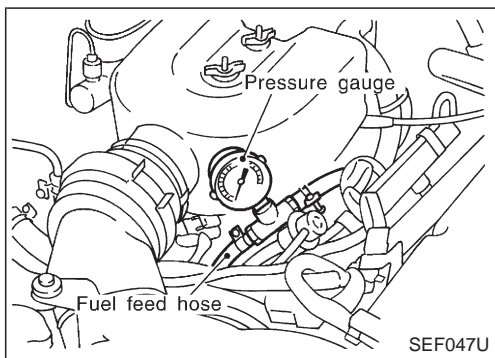

Fuel Pressure Check

- When reconnecting fuel line, always use new clamps.
 - Make sure that clamp screw does not contact adjacent parts.
 - Use a torque driver to tighten clamps.
 - Use Pressure Gauge to check fuel pressure.
1. Release fuel pressure to zero, refer to above.
 2. Disconnect fuel hose between fuel filter and fuel tube (engine side).
 3. Install pressure gauge between fuel filter and fuel tube.
 4. Start engine and check for fuel leakage.
 5. Read the indication of fuel pressure gauge.

At idling:


Approximately 235 kPa (2.35 bar, 2.4 kg/cm², 34 psi)

A few seconds after ignition switch is turned OFF to ON:




Approximately 294 kPa (2.94 bar, 3.0 kg/cm², 43 psi)

6. Stop engine and disconnect fuel pressure regulator vacuum hose from intake manifold.
7. Plug intake manifold with a rubber cap.
8. Connect variable vacuum source to fuel pressure regulator.
9. Start engine and read indication of fuel pressure gauge as vacuum is changed.

Fuel pressure should decrease as vacuum increases. If results are unsatisfactory, replace fuel pressure regulator.

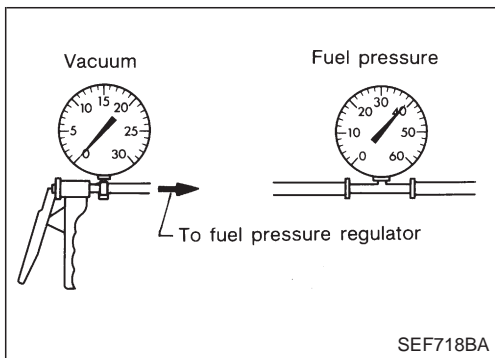

Injector Removal and Installation

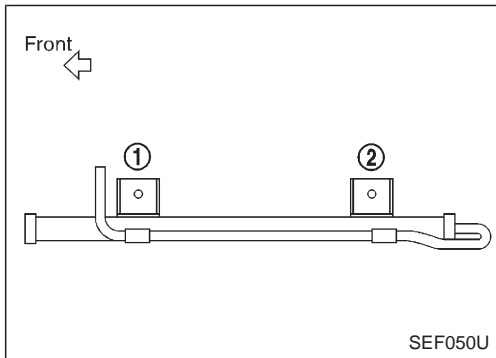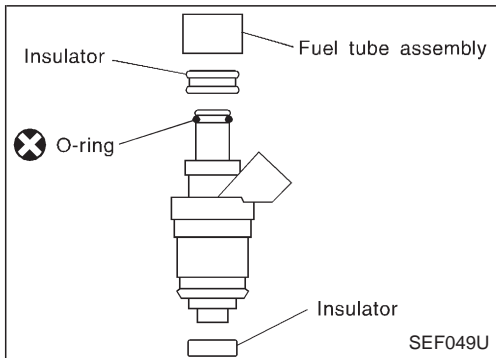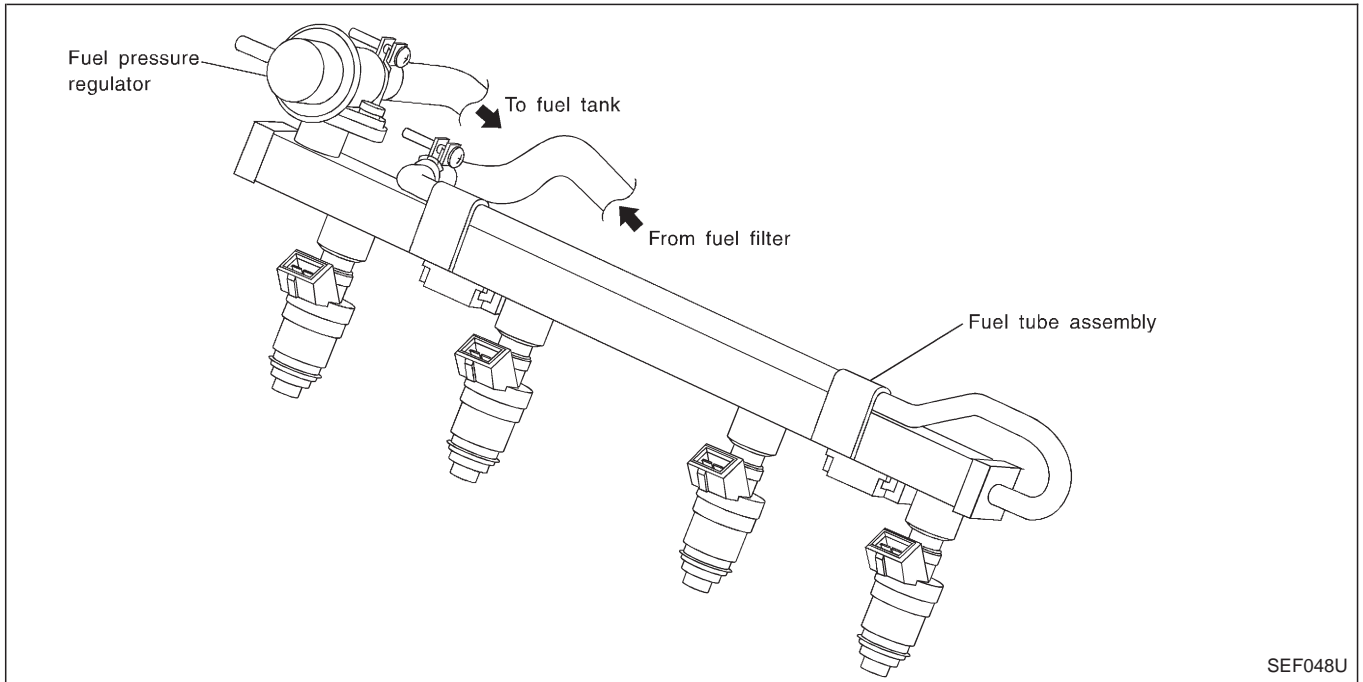

1. Release fuel pressure to zero.
2. Remove injector tube assembly with injectors from intake manifold.
3. Remove injectors from injector tube assembly.
 - Do not pull on the connector.
4. Install injector to fuel tube assembly.
 - a. Clean exterior of injector tail piece.
 - b. Use new O-rings.

Always replace O-rings with new ones.

Lubricate O-rings with a smear of engine oil.


5. Install injectors with fuel tube assembly to intake manifold.

Tighten in numerical order shown in the figure.

 - a. First, tighten all bolts to 7.8 to 10.8 N·m (0.8 to 1.1 kg-m, 5.8 to 8.0 ft-lb).
 - b. Then, tighten all bolts to 16 to 21 N·m (1.6 to 2.1 kg-m, 12 to 15 ft-lb).
6. Install fuel hoses to fuel tube assembly.
7. Reinstall any parts removed in reverse order of removal.


CAUTION:

After properly connecting injectors to fuel tube assembly, check connections for fuel leakage.

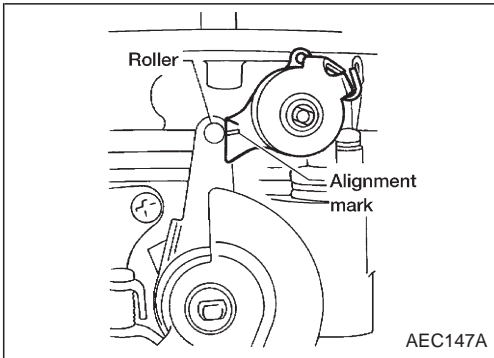


Fast Idle Cam (FIC) Inspection and Adjustment

1. Remove air cleaner assembly.
2. Make sure the FIC alignment mark is centered on the lever roller as shown in the figure.
 - An alignment mark is stamped on the FIC so that the top of the cam will face in the correct direction.

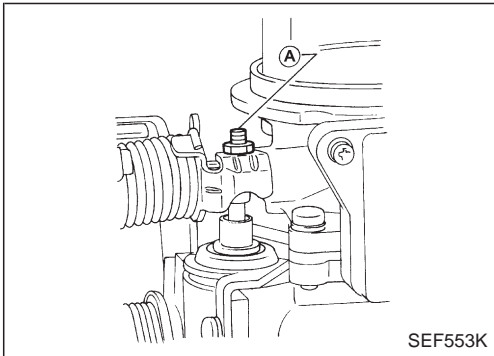


- If necessary, adjust the FIC screw (A) until the alignment mark is centered on the lever roller.

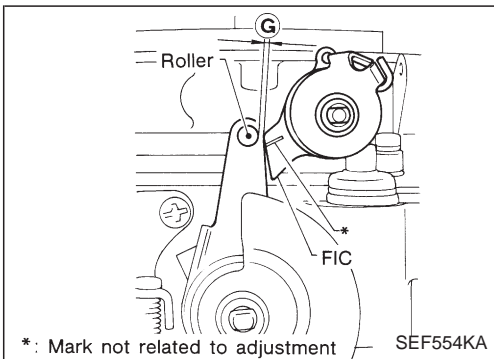

3. Start engine and warm up to operating temperature.
4. Measure clearance (G) between the lever roller and the top of the FIC using a feeler gauge as shown in the figure.

Clearance (G):
2.0 - 2.6 mm (0.079 - 0.102 in)

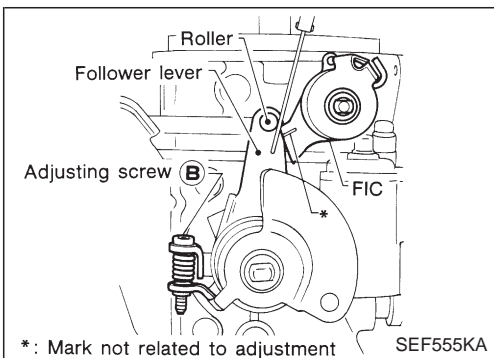

- If clearance (G) is out of specification, adjust clearance (G) using adjusting screw (B) to 2.3 mm (0.091 in).

Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment

PREPARATION

- Make sure that the following parts are in good order.
- (1) Battery
- (2) Ignition system
- (3) Engine oil and coolant levels
- (4) Fuses
- (5) ECM harness connector
- (6) Vacuum hoses
- (7) Air intake system
(Oil filler cap, oil level gauge, etc.)
- (8) Fuel pressure


(9) Engine compression

(10) Throttle valve





- On air conditioner equipped models, checks should be carried out while the air conditioner is "OFF".
- When measuring "CO" percentage, insert probe more than 40 cm (15.7 in) into tail pipe.
- Turn off headlamps, heater blower, rear window defogger.
- Keep front wheels pointed straight ahead.

LHD MODELS

Overall inspection sequence

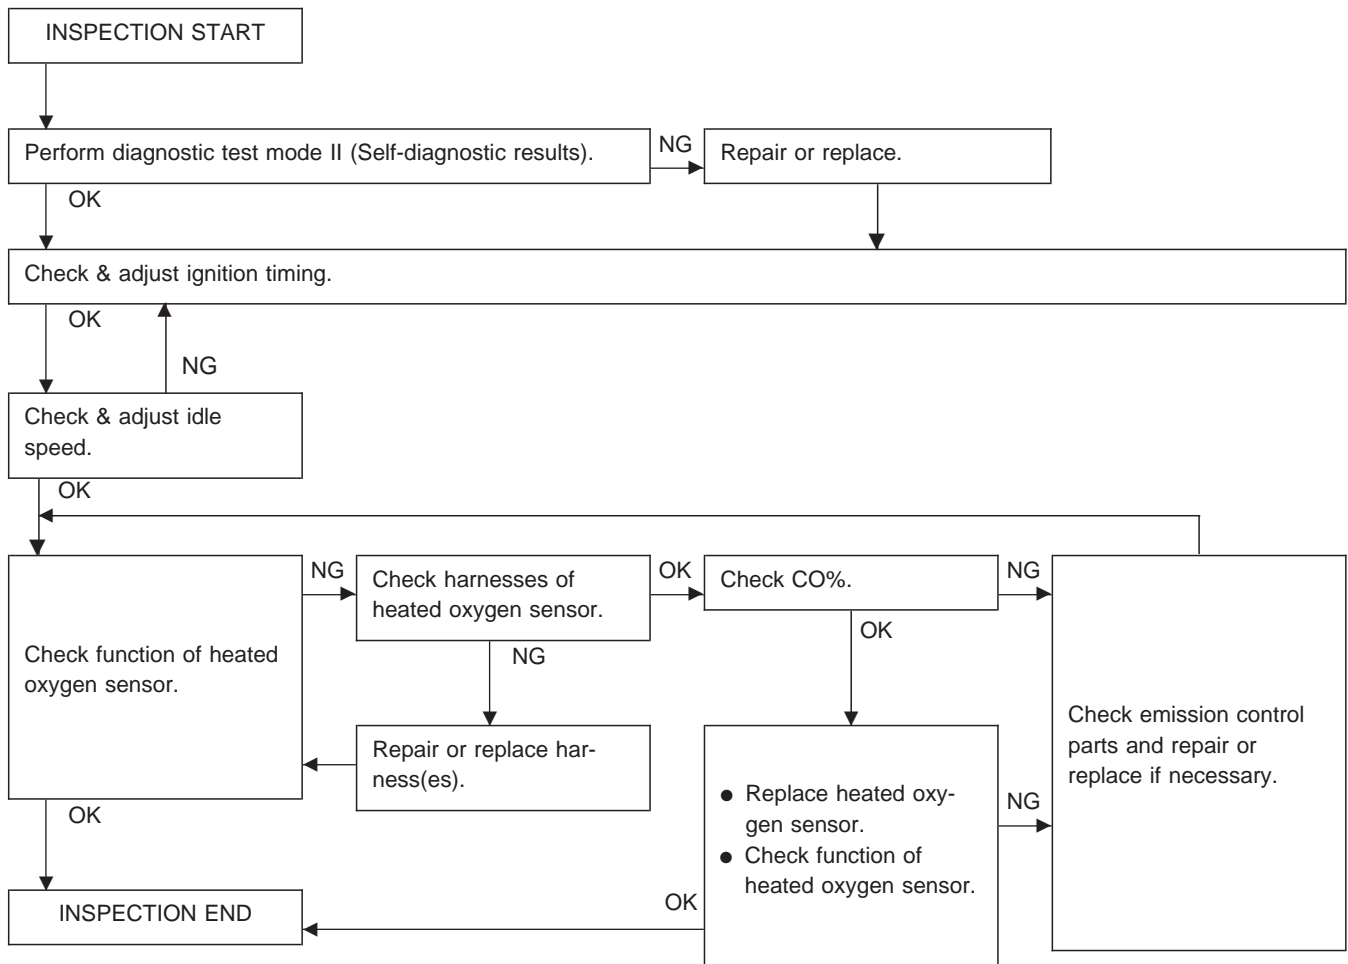

Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)

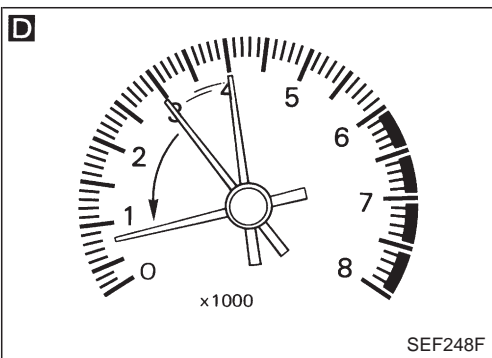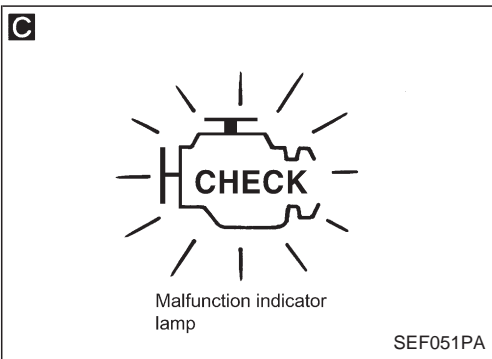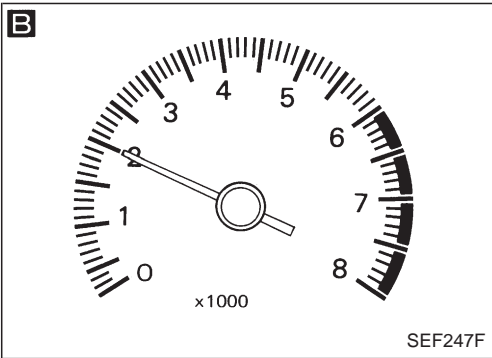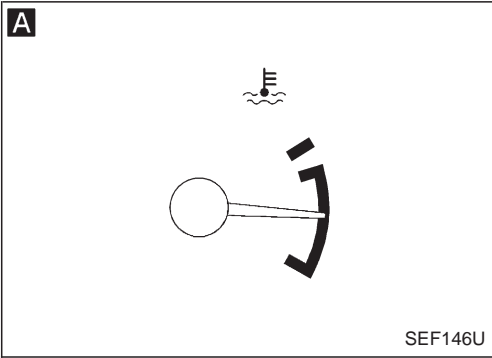


E ■ IGN TIMING ADJ ■ □


IGNITION TIMING FEEDBACK CONTROL WILL BE HELD BY TOUCHING START. AFTER DOING SO, ADJUST IGNITION TIMING WITH A TIMING LIGHT BY TURNING THE CAMSHAFT POSITION SENSOR.

START

SEF546N

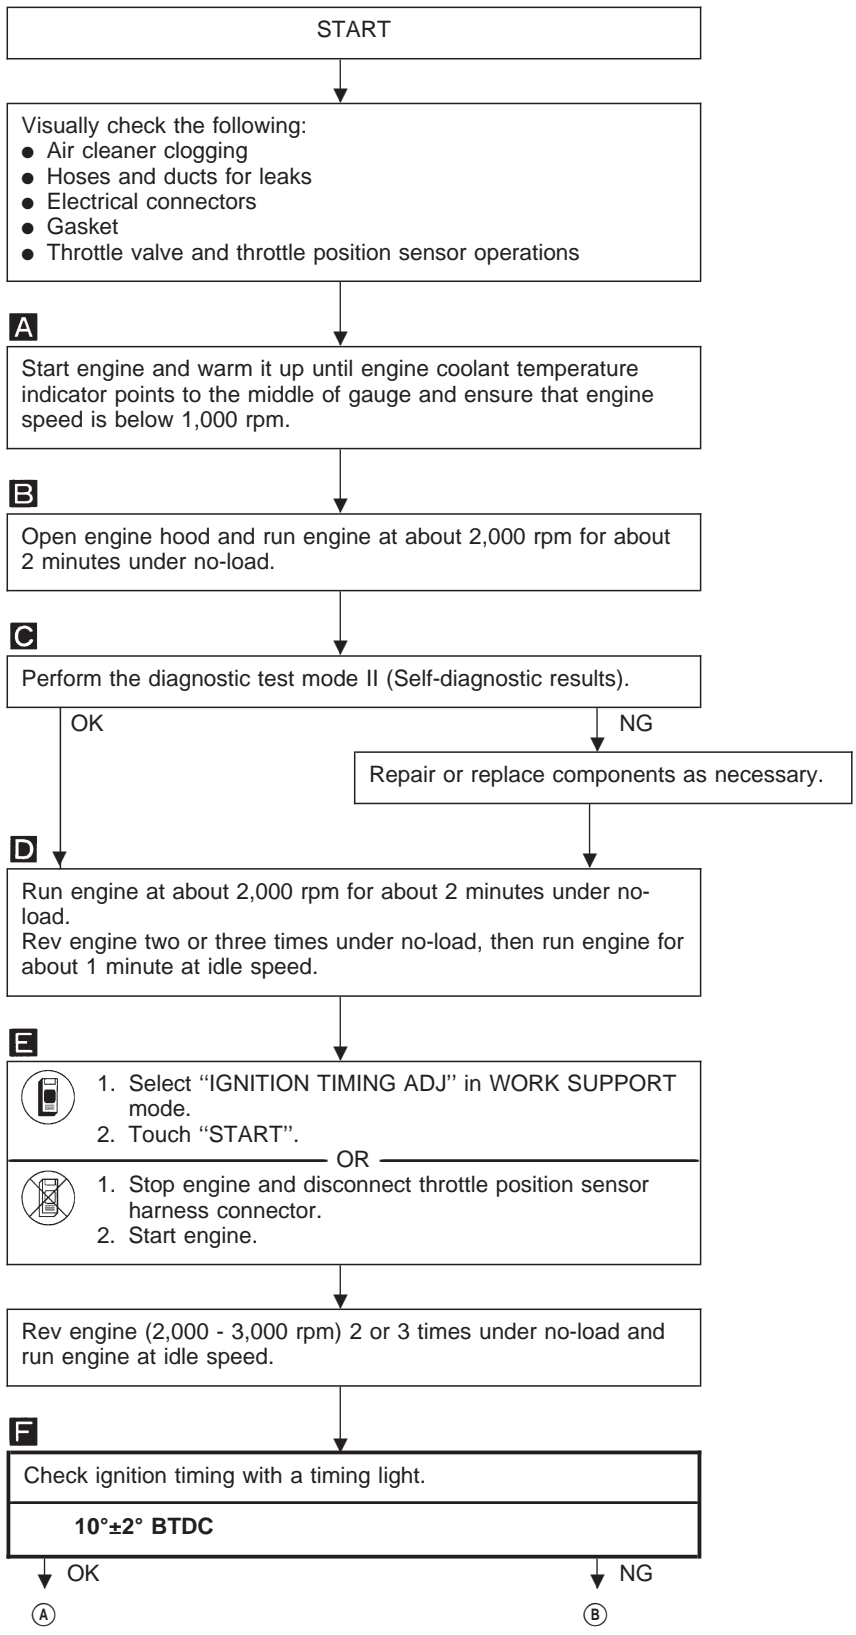

Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)




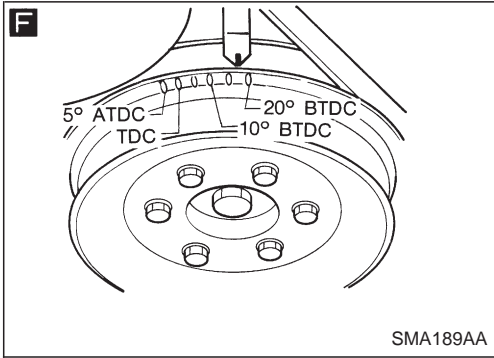


G ■ IGN TIMING ADJ ■ □

IGNITION TIMING FEEDBACK CONTROL WILL BE HELD BY TOUCHING START. AFTER DOING SO, ADJUST IGNITION TIMING WITH A TIMING LIGHT BY TURNING THE CAMSHAFT POSITION SENSOR.

START

SEF546N

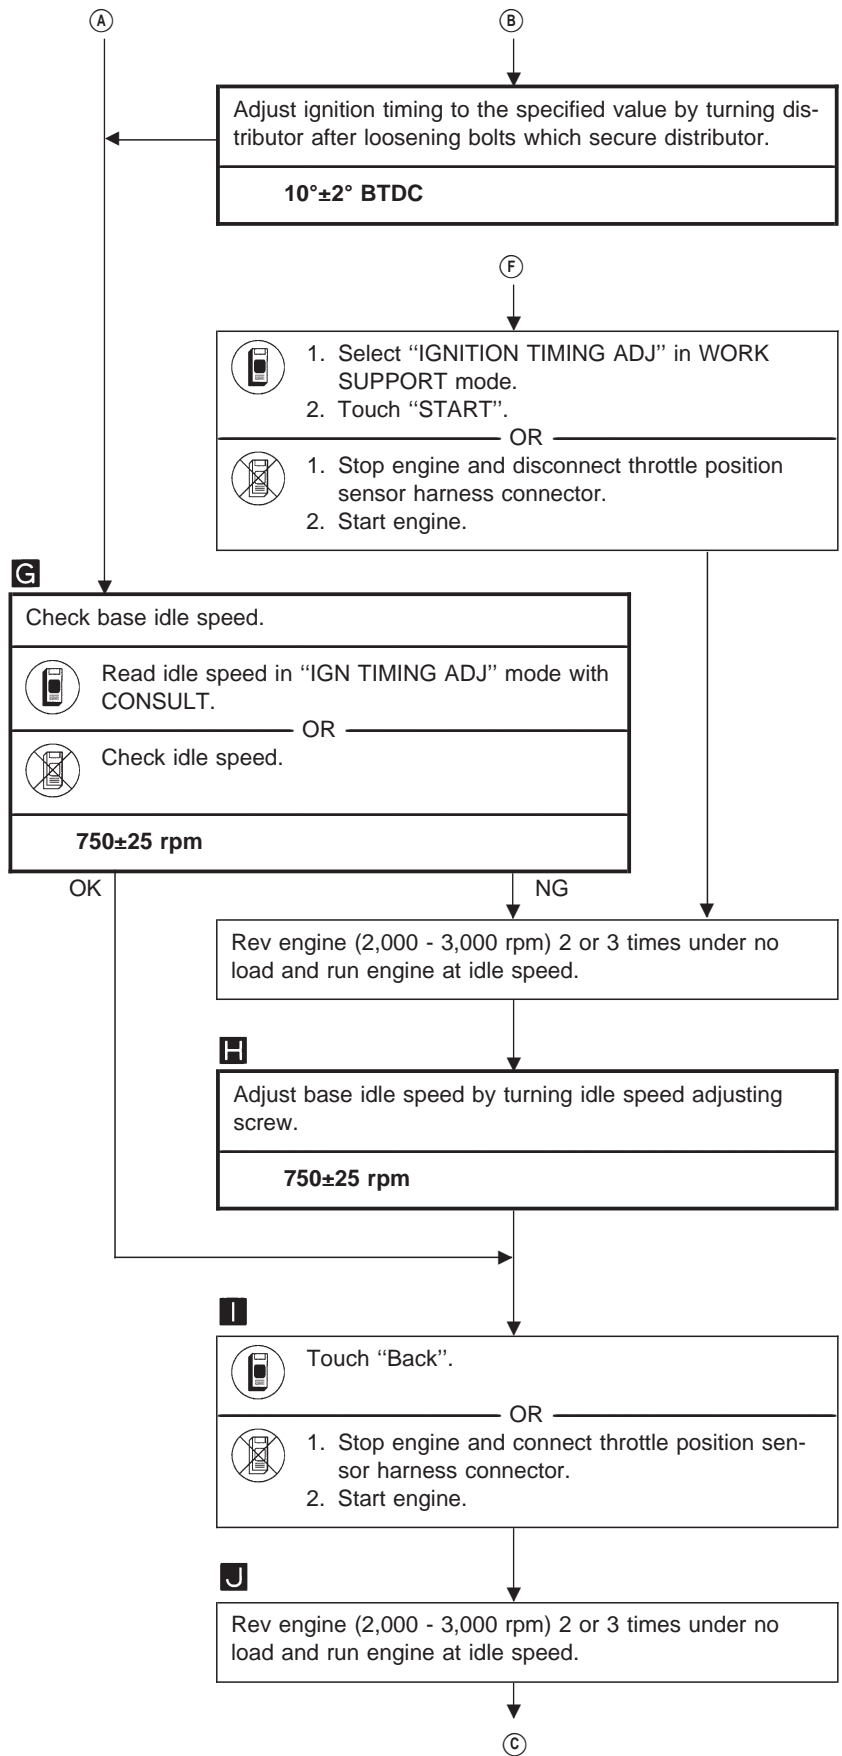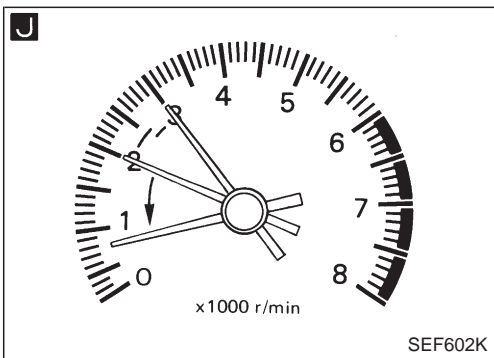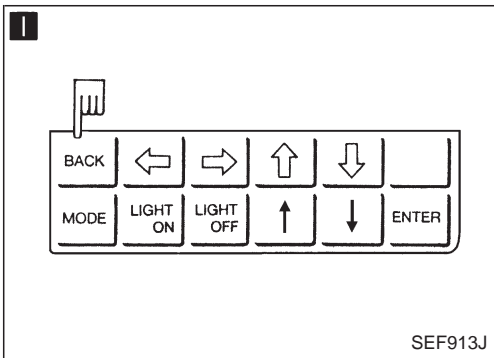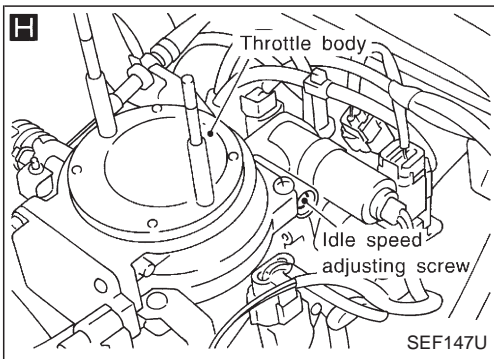

Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)

K

☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>
CMPS•RPM (POS)	800rpm	

RECORD

SEF051U

L

CHK IGN

Data link connector for CONSULT
(Connect CHK and IGN terminals with a suitable harness.)

SEF909P

M

☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>
CMPS•RPM (POS)	2000rpm	
M/R F/C MNT	RICH	


RECORD

SEF052U



N

CHECK

SEF051P

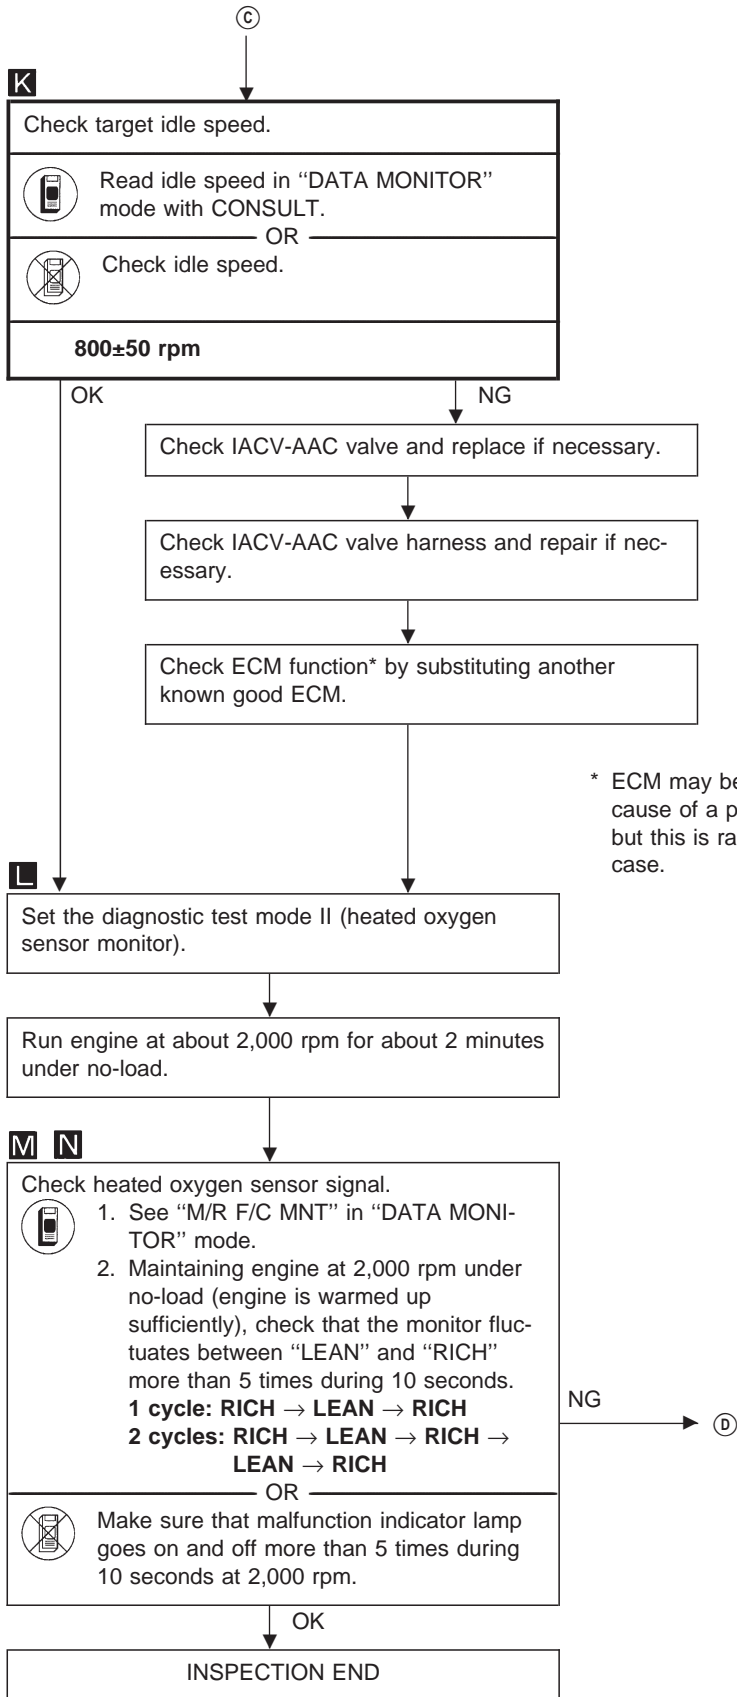

Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)

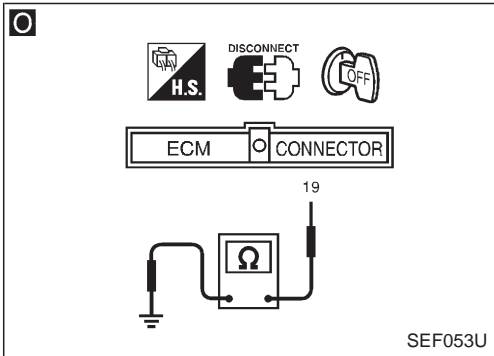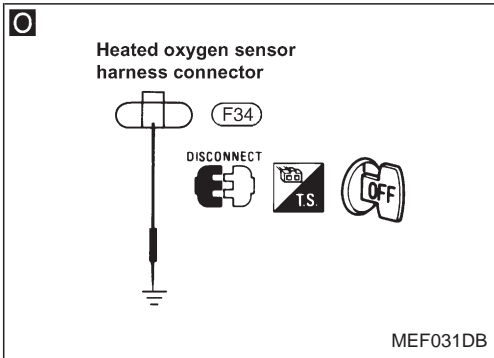

- Check heated oxygen sensor harness:
1. Turn off engine and disconnect battery ground cable.
 2. Disconnect ECM harness connector from ECM.
 3. Disconnect heated oxygen sensor harness connector and connect terminal for heated oxygen sensor to ground with a jumper wire.
 4. Check for continuity between terminal ⑰ of ECM harness connector and ground metal on vehicle body.

Continuity exists ... OK
Continuity does not exist ... NG

OK

NG

Repair harness.

⑱

Connect ECM harness connector to ECM.

1. Select "ENG COOLANT TEMP" in "ACTIVE TEST" mode.
 2. Set "COOLANT TEMP" at 20°C (68°F).
- OR


- Disconnect engine coolant temperature sensor harness connector.
- Connect a resistor (2.5 kΩ) between terminals of engine coolant temperature sensor harness connector.

Start engine and warm it up until engine coolant temperature indicator points to the middle of gauge. (Be careful to start engine after setting "COOLANT TEMP" or installing a 2.5 kΩ resistor.)

Rev engine two or three times under no-load then run engine at idle speed.

⑲


Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)

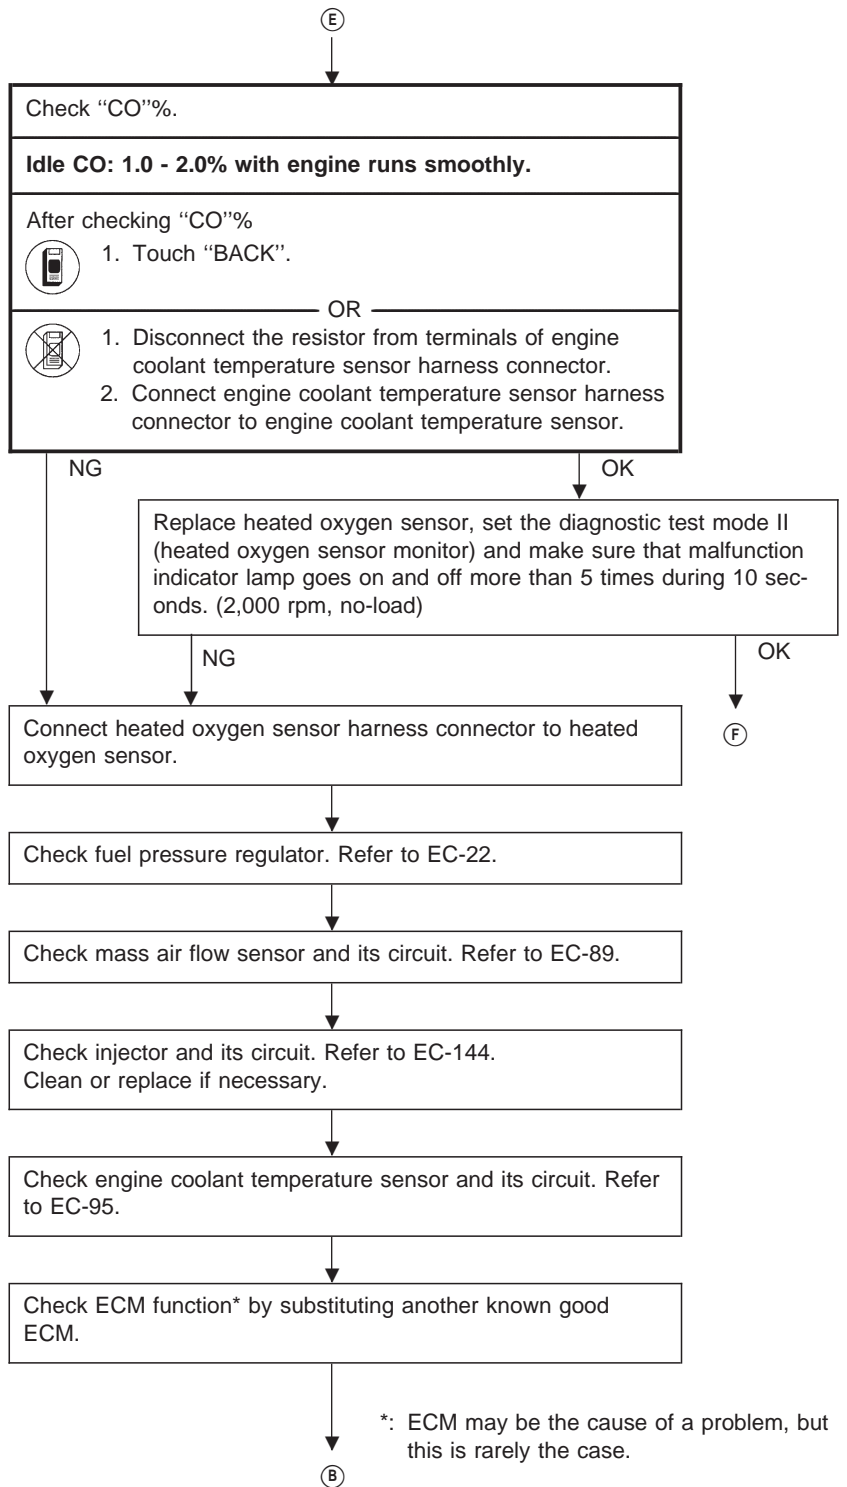

Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)







RHD MODELS

Overall inspection sequence

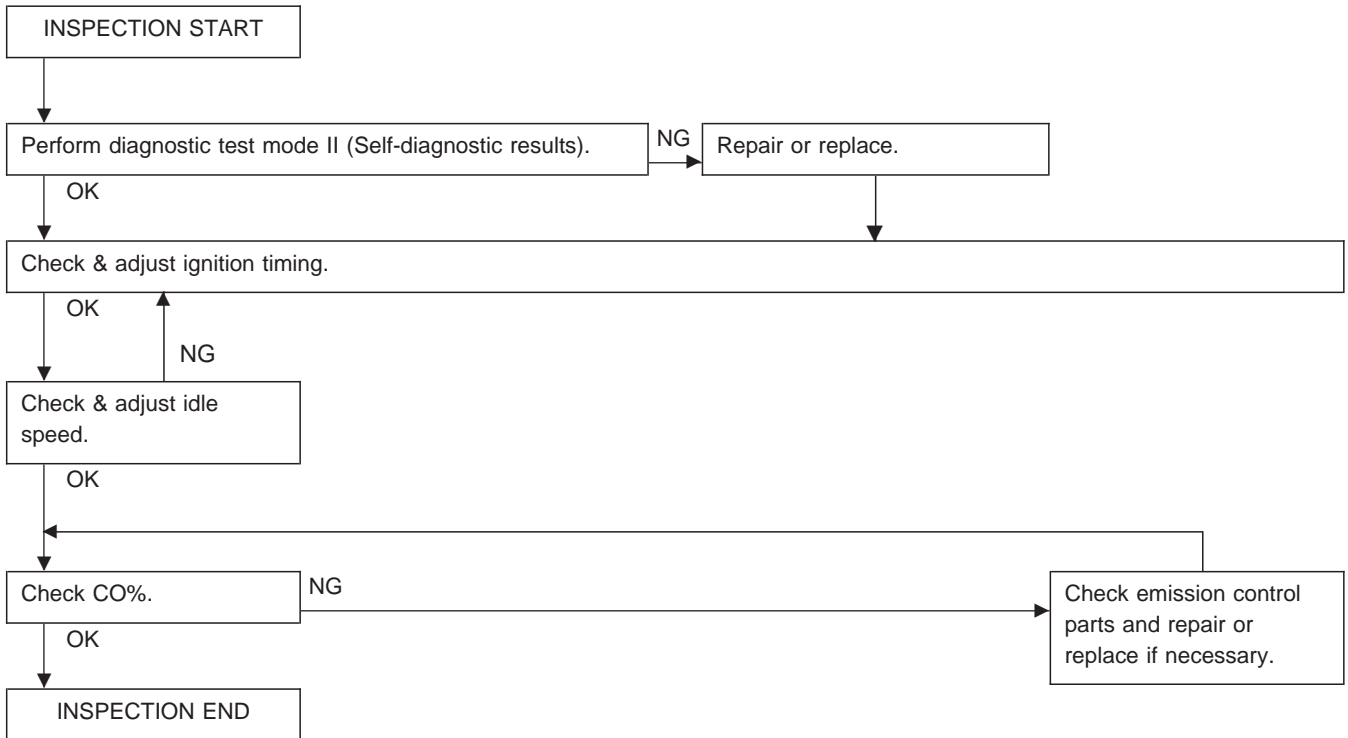


Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)

Checking and adjusting idle speed, ignition timing

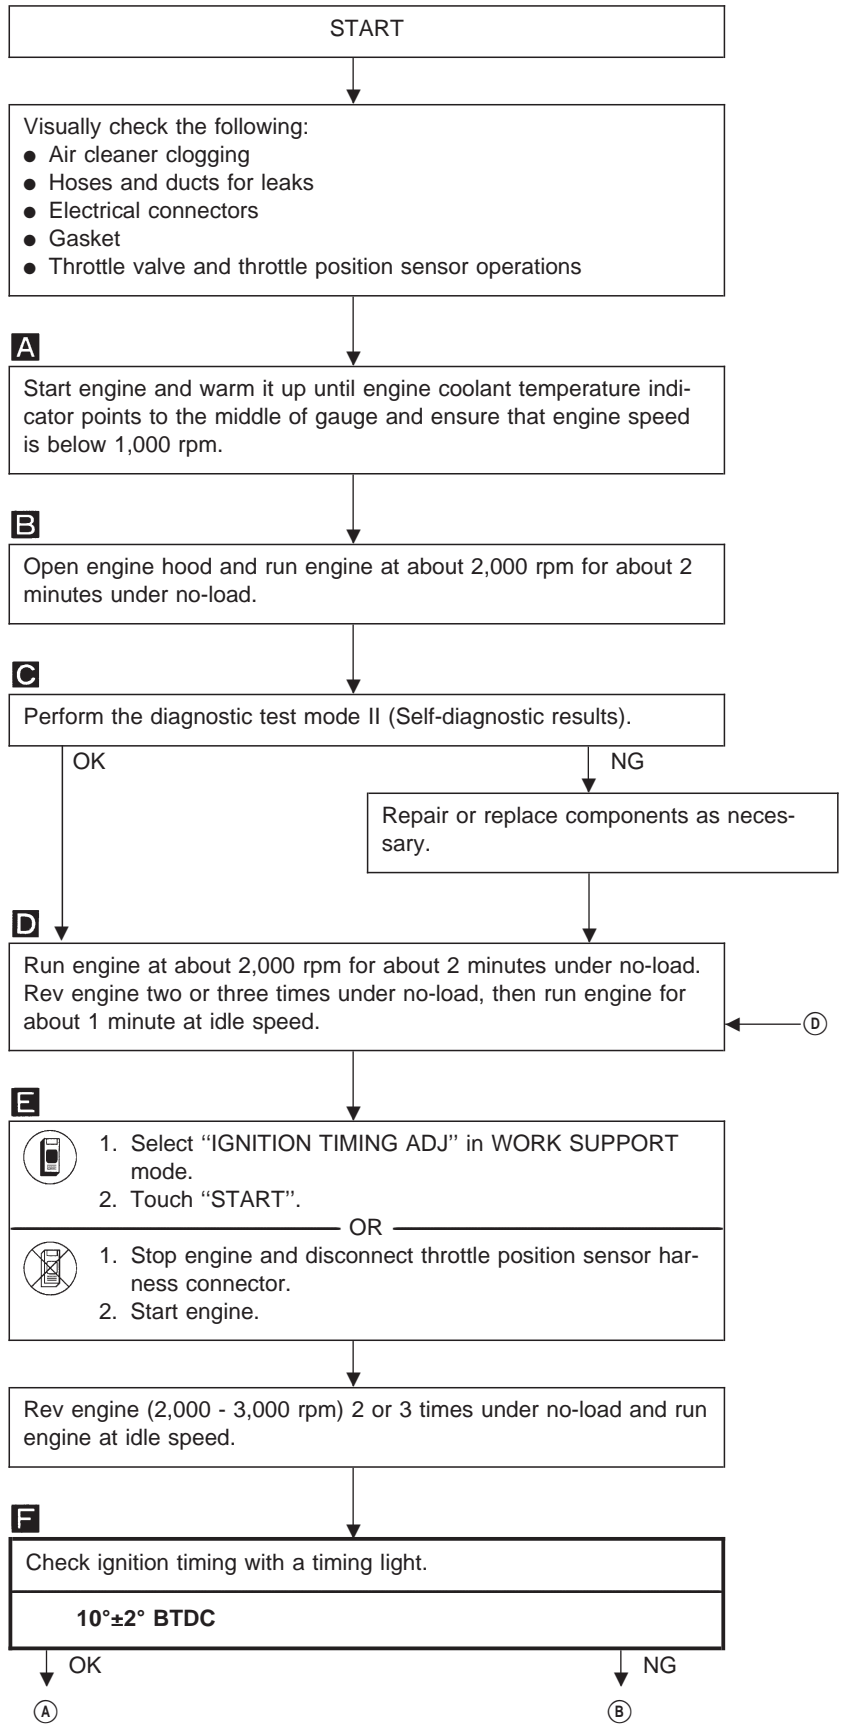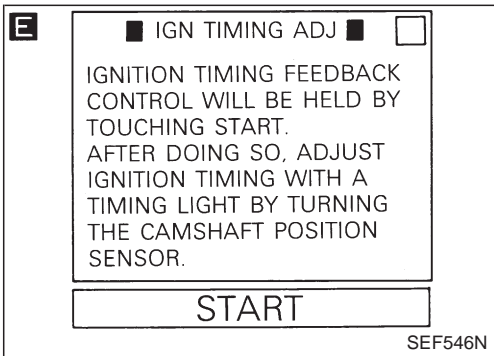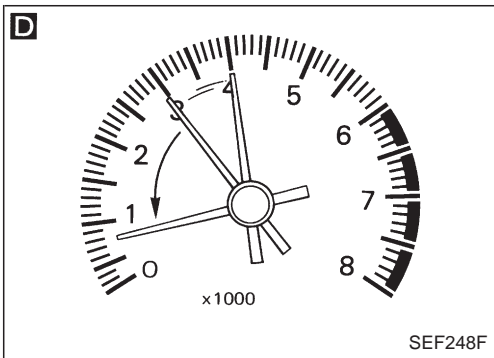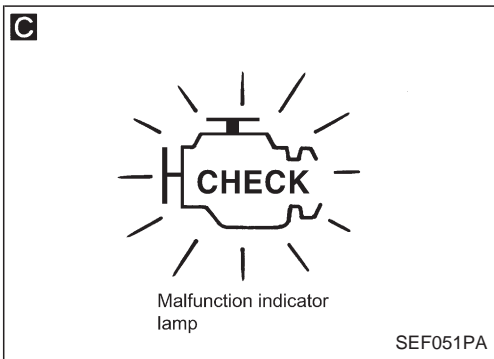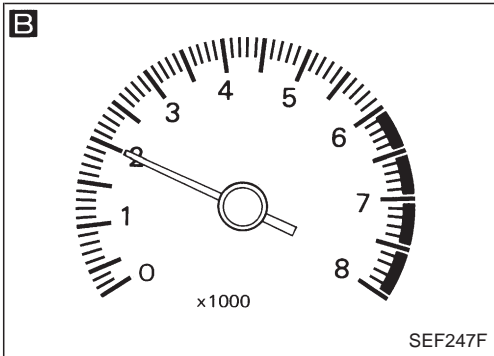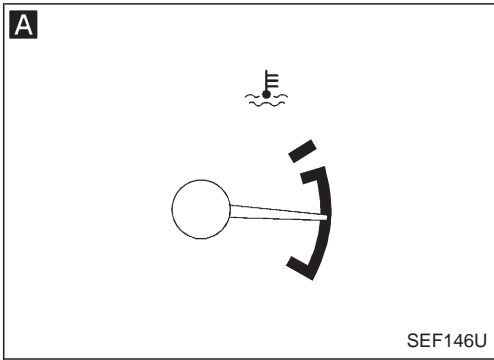

Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)

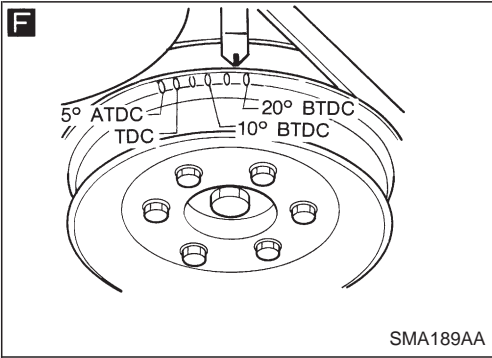


G ■ IGN TIMING ADJ ■ □

IGNITION TIMING FEEDBACK CONTROL WILL BE HELD BY TOUCHING START. AFTER DOING SO, ADJUST IGNITION TIMING WITH A TIMING LIGHT BY TURNING THE CAMSHAFT POSITION SENSOR.

START


SEF546N

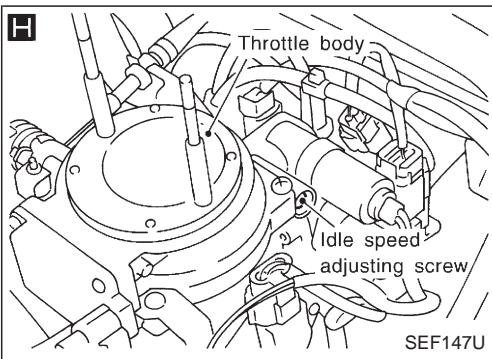

I

BACK	←	→	↑	↓	
MODE	LIGHT ON	LIGHT OFF	↑	↓	ENTER

SEF913J

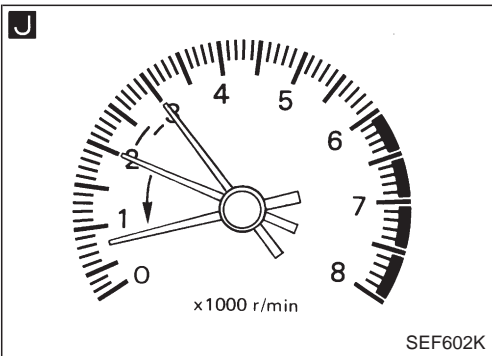

A →

B ↓

Adjust ignition timing to the specified value by turning distributor after loosening bolts which secure distributor.

10°±2° BTDC

G ↓

Check base idle speed.

☎ Read idle speed in "IGN TIMING ADJ" mode with CONSULT. — OR —

⌚ Check idle speed.

750±25 rpm

OK

NG

Rev engine (2,000 - 3,000 rpm) 2 or 3 times under no-load and run engine at idle speed.

H

Adjust base idle speed by turning idle speed adjusting screw.

750±25 rpm

I

☎ Touch "Back". — OR —


⌚ 1. Stop engine and connect throttle position sensor harness connector.
2. Start engine.

J

Rev engine (2,000 - 3,000 rpm) 2 or 3 times under no-load and run engine at idle speed.

Ⓒ

Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)

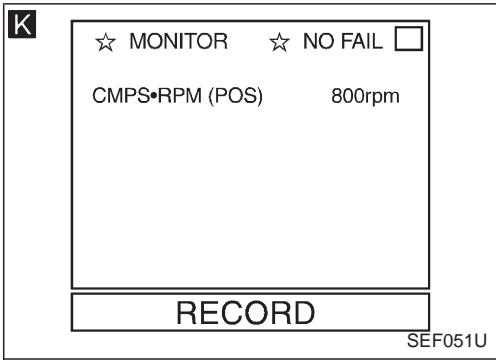


ⓐ

K

Check target idle speed.

Read idle speed in "DATA MONITOR" mode with CONSULT. OR Check idle speed.





800±50 rpm

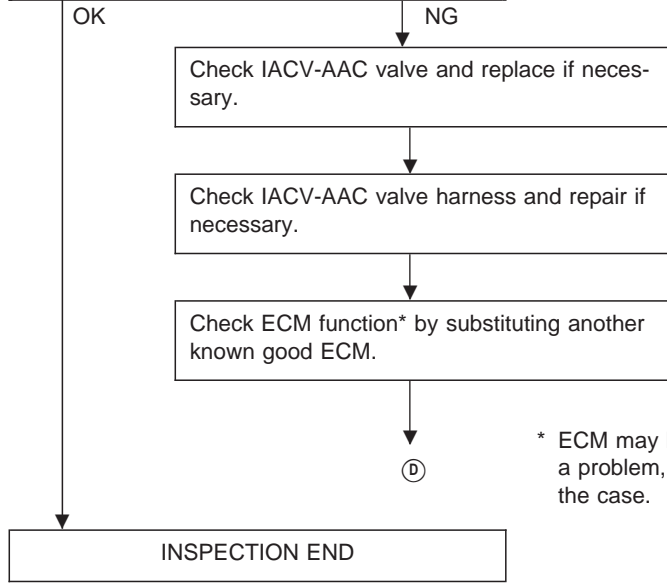

* ECM may be the cause of a problem, but this is rarely the case.

Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)

Checking and adjusting mixture ratio

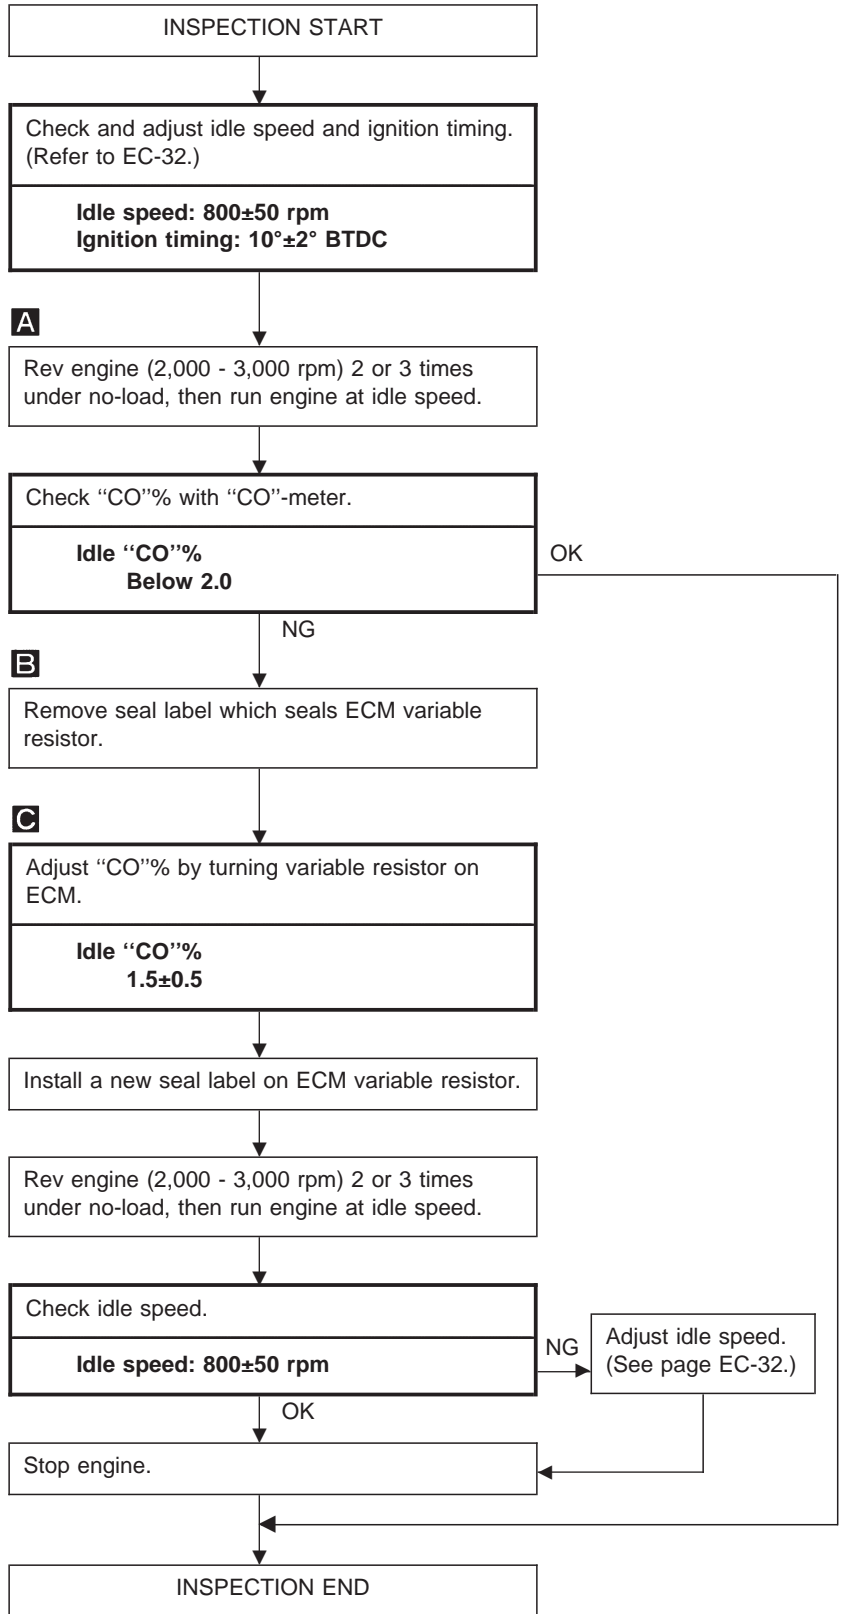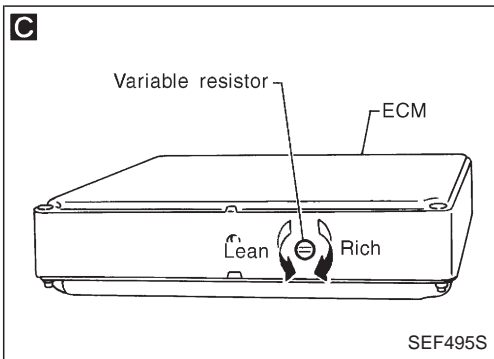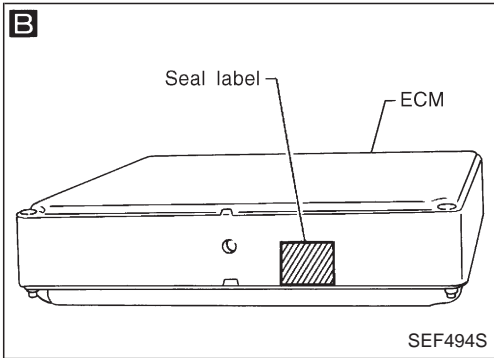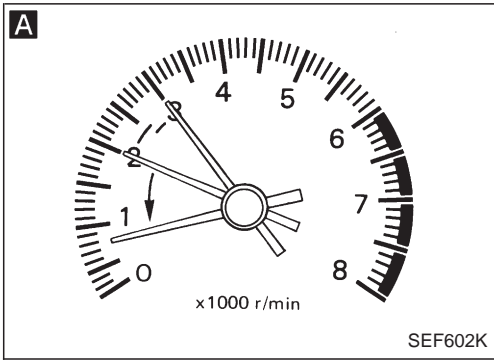

Introduction

The ECM (ECCS control module) has an on board diagnostic system, which detects malfunctions related to engine sensors or actuators. Self-diagnosis items are listed in “DIAGNOSTIC TROUBLE CODE INDEX”, EC-1.


The malfunction indicator lamp (MIL) on the instrument panel lights up when a malfunction is detected, or when the ECM enters fail-safe mode (Refer to EC-61).

Diagnostic Trouble Code (DTC)

HOW TO CONFIRM MALFUNCTION ITEMS

Malfunction items can be confirmed by the following methods.

1. The number of blinks of the malfunction indicator lamp in the Diagnostic Test Mode II (Self-Diagnostic Results) indicates the DTC. Examples: 11, 21 etc.
 2. CONSULT displays the malfunctioning component or system in “SELF DIAGNOSTIC RESULTS” mode.
- **Output of a DTC indicates a malfunction. However, Mode II does not indicate whether the malfunction is still occurring or has occurred in the past and has returned to normal. CONSULT can identify malfunction status as shown below. Therefore, using CONSULT (if available) is recommended.**

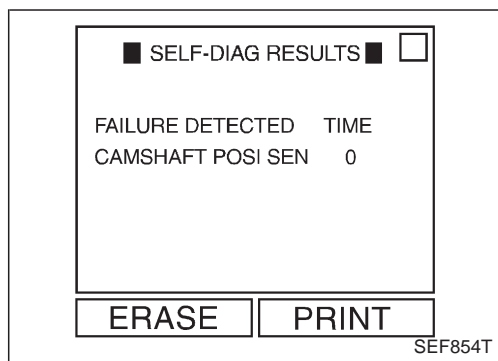

A sample of CONSULT display is shown at left. The malfunction is displayed in SELF-DIAGNOSTIC RESULTS mode of CONSULT. Time data indicates how many times the vehicle was driven after the last detection of a malfunction. If the malfunction is being detected currently, the time data will be “0”.

HOW TO ERASE DTC

The DTC can be erased from the back-up memory in the ECM by the following methods.

1. Selecting “ERASE” in the SELF-DIAG RESULTS” mode with CONSULT
 2. Changing the diagnostic test mode from Diagnostic Test Mode II to Mode I by turning the mode selector on the ECM (RHD model only) or connecting the data link connector for CONSULT terminals. (Refer to EC-39, 41)
- **If the battery terminal is disconnected, the DTC will be lost within 24 hours.**
 - **Erasing the DTC, using CONSULT is easier and quicker than switching the mode selector on the ECM (RHD model only) or connecting the data link connector for CONSULT terminals.**

Diagnostic Trouble Code (DTC) (Cont'd)



How to erase DTC (With CONSULT)

1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 5 seconds and then turn it "ON" (engine stopped) again.
2. Turn CONSULT "ON" and touch "ENGINE".
3. Touch "SELF-DIAG RESULTS".
4. Touch "ERASE". (The DTC in the ECM will be erased.)

How to erase DTC (With CONSULT)

1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 5 seconds and then turn it "ON" (engine stopped) again.

2. Turn CONSULT "ON" and touch "ENGINE".

3. Touch "SELF-DIAG RESULTS".


4. Touch "ERASE". (The DTC in the ECM will be erased.)

SEF054U



How to erase DTC (Without CONSULT)

1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 5 seconds and then turn it "ON" again.
2. Change the diagnostic test mode from Mode II to Mode I by turning the mode selector on the ECM (RHD model only) or connecting the data link connector for CONSULT terminals. (See EC-39, 41)

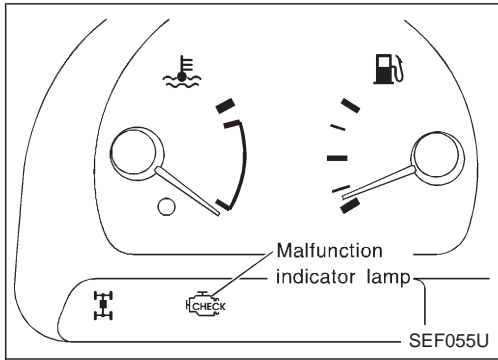

Malfunction Indicator Lamp (MIL)

The malfunction indicator lamp is located on the instrument panel.

1. The malfunction indicator lamp will light up when the ignition switch is turned ON without the engine running. This is for checking the blown lamp.
 - If the malfunction indicator lamp does not light up, see the WARNING LAMPS AND CHIME in the EL section. (Or see EC-173, 174.)
2. When the engine is started, the malfunction indicator lamp should go off. If the lamp remains on, the on board diagnostic system has detected an engine system malfunction.

ON BOARD DIAGNOSTIC SYSTEM FUNCTION

The on board diagnostic system has the following four functions.

Diagnostic Test Mode I




1. BULB CHECK : This function checks the bulb for damage (blown, open circuit, etc.) of the malfunction indicator lamp. If the MIL does not come on, check MIL circuit and ECM test mode selector. (See next page.)
2. MALFUNCTION WARNING : This is a usual driving condition. When a malfunction is detected, the MIL will light up to inform the driver that a malfunction has been detected.

Diagnostic Test Mode II

3. SELF-DIAGNOSTIC RESULTS : This function allows DTCs to be read.
4. HEATED OXYGEN SENSOR MONITOR : This function allows the fuel mixture condition (lean or rich), monitored by heated oxygen sensor, to be read.


MIL Flashing without DTC

If the ECM is in Diagnostic Test Mode II, the MIL may flash when the engine is running. In this case, check ECM test mode selector following "HOW TO SWITCH DIAGNOSTIC TEST MODES" on next page. How to switch the diagnostic test (function) modes and details of the above functions are described later. (See page EC-39, 41.)


Condition		Diagnostic Test Mode I	Diagnostic Test Mode II
Ignition switch in "ON" position 	Engine stopped 	BULB CHECK	SELF-DIAGNOSTIC RESULTS
	Engine running 	MALFUNCTION WARNING	HEATED OXYGEN SENSOR MONITOR

Malfunction Indicator Lamp (MIL) (Cont'd)

HOW TO SWITCH DIAGNOSTIC TEST MODES (LHD models)

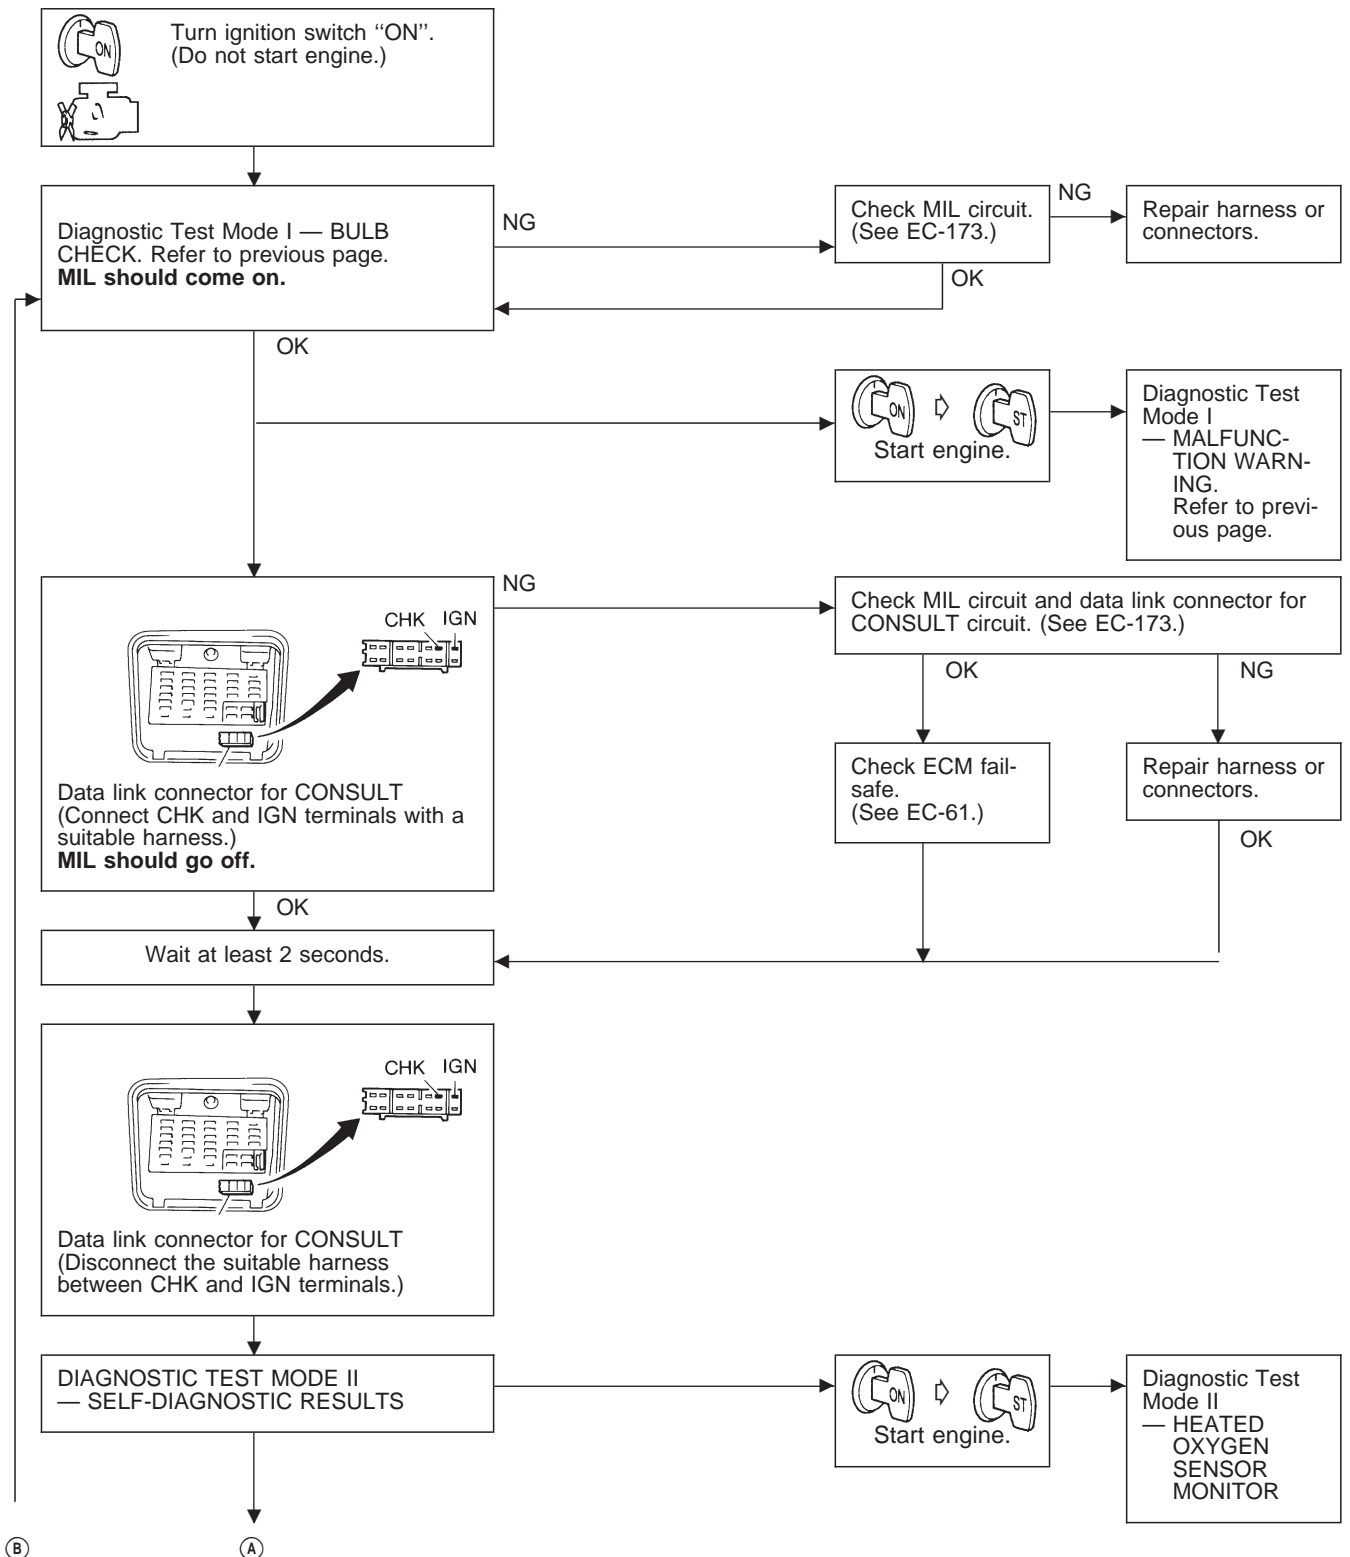

Malfunction Indicator Lamp (MIL) (Cont'd)

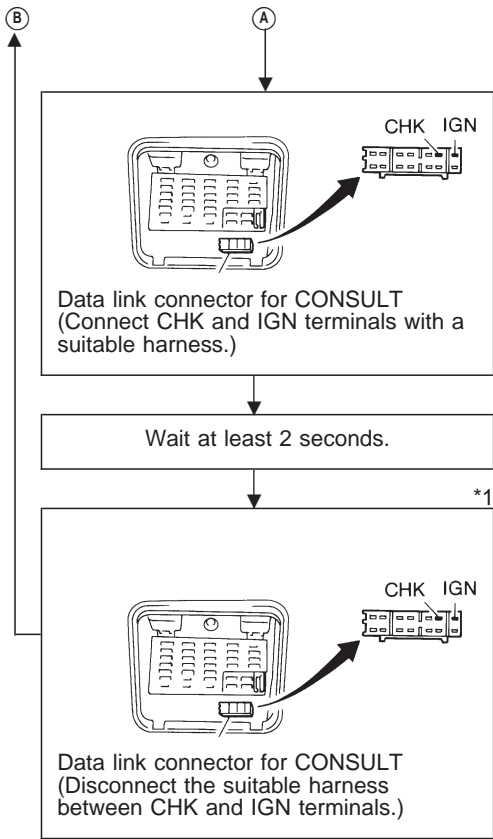


- Switching the modes is not possible when the engine is running.
- When ignition switch is turned OFF during diagnosis, power to ECM will drop after approx. 5 seconds. The diagnosis will automatically return to Diagnostic Test Mode I.

*1: If the suitable harness is disconnected at this time, the diagnostic trouble code will be erased from the backup memory in the ECM.

Malfunction Indicator Lamp (MIL) (Cont'd)

HOW TO SWITCH DIAGNOSTIC TEST MODES (RHD models)

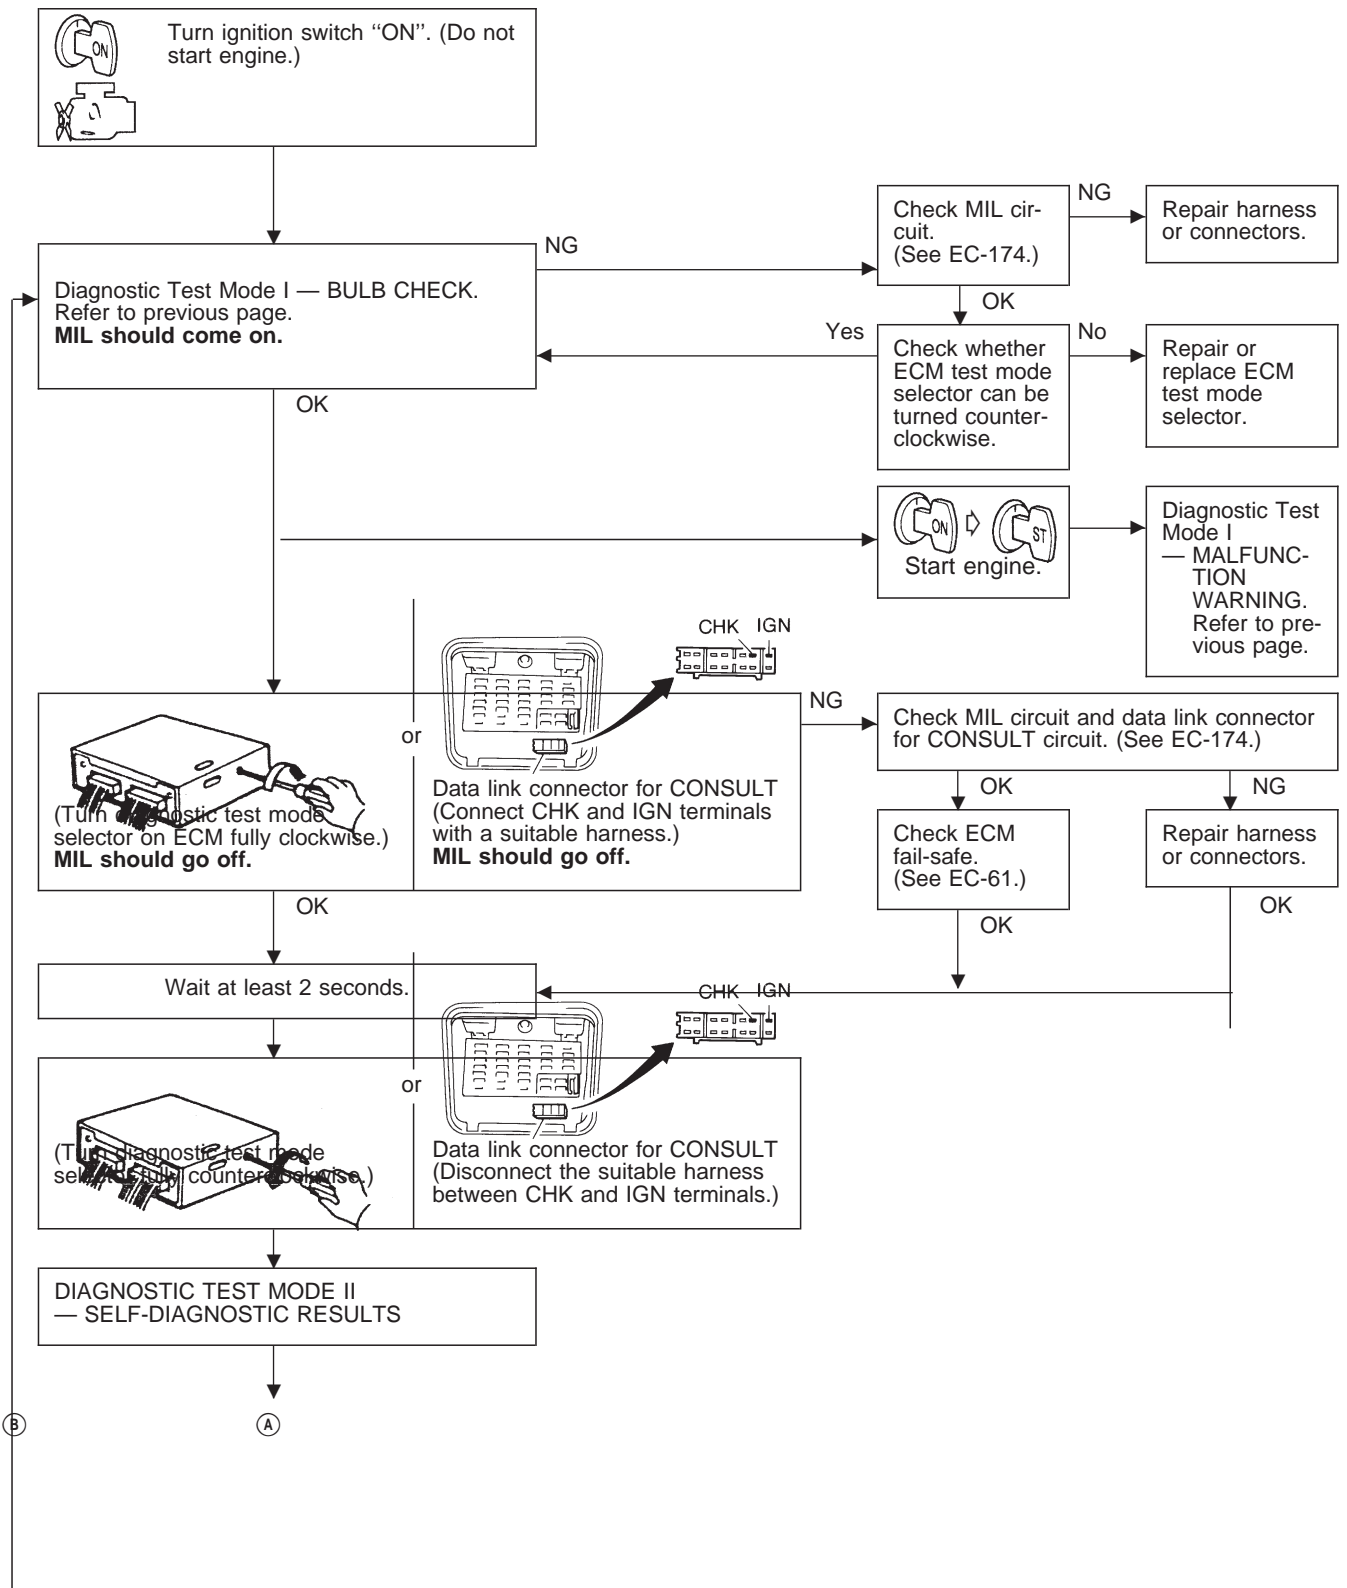

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION


Malfunction Indicator Lamp (MIL) (Cont'd)

Switching the modes is not possible when the engine is running.

When Ignition Switch is turned off during diagnosis, power to ECM will drop after approx. 5 seconds.

The diagnosis will automatically return to Diagnostic Test Mode I.

- Turn back diagnostic test mode selector to the fully counterclockwise position whenever vehicle is in use.

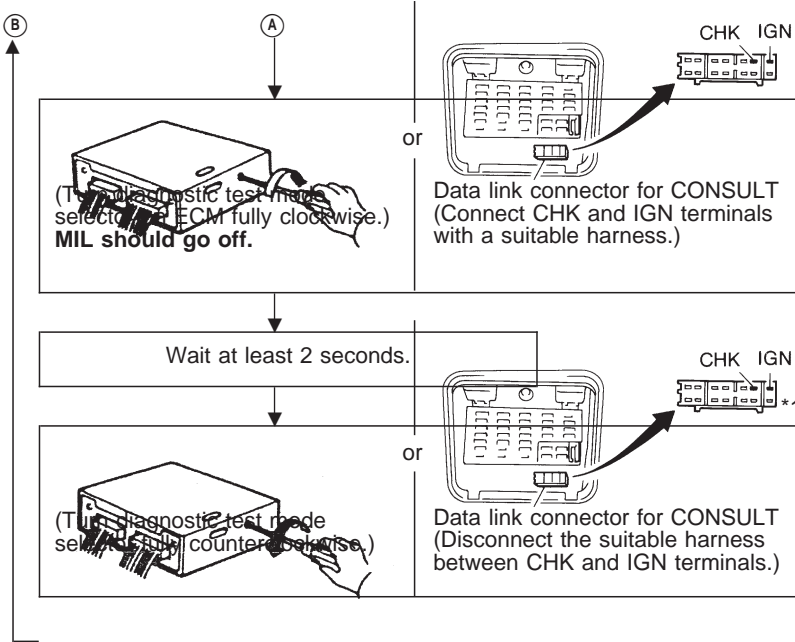

*1: If the selector is turned fully counterclockwise or suitable harness is disconnected at this time, the diagnostic trouble code will be erased from the backup memory in the ECM.

Malfunction Indicator Lamp (MIL) (Cont'd)

DIAGNOSTIC TEST MODE I—BULB CHECK

In this mode, the MALFUNCTION INDICATOR LAMP on the instrument panel should stay ON. If it remains OFF, check the bulb. (See the WARNING LAMPS AND CHIME in the EL section. Or see EC-173, 174.)


DIAGNOSTIC TEST MODE I—MALFUNCTION WARNING

MALFUNCTION INDICATOR LAMP	Condition
ON	When the malfunction is detected (Refer to EC-1.) or the ECM's CPU is malfunctioning.
OFF	No malfunction

- These Diagnostic Trouble Code Numbers are clarified in Diagnostic Test Mode II (SELF-DIAGNOSTIC RESULTS).

DIAGNOSTIC TEST MODE II—SELF-DIAGNOSTIC RESULTS

In this mode, a diagnostic trouble code is indicated by the number of blinks of the MALFUNCTION INDICATOR LAMP as shown below.

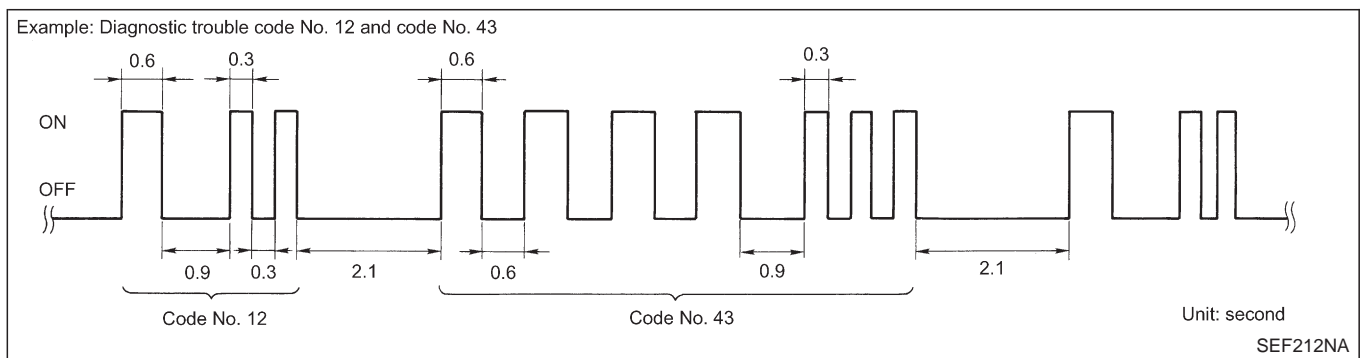


Long (0.6 second) blinking indicates the number of ten digits, and short (0.3 second) blinking indicates the number of single digits. For example, the malfunction indicator lamp blinks 4 times for about 5 seconds (0.6 sec x 8 times) and then it blinks three times for about 1 second (0.3 sec x 3 times). This indicates the DTC "43" and refers to the malfunction of the throttle position sensor.

In this way, all the detected malfunctions are classified by their diagnostic trouble code numbers. The DTC "55" refers to no malfunction. (See DIAGNOSTIC TROUBLE CODE INDEX, refer to page EC-1.)

How to erase diagnostic test mode II (Self-diagnostic results)

The diagnostic trouble code can be erased from the backup memory in the ECM when the diagnostic test mode is changed from Diagnostic Test Mode II to Diagnostic Test Mode I. (Refer to "HOW TO SWITCH DIAGNOSTIC TEST MODES".)

- If the battery terminal is disconnected, the diagnostic trouble code will be lost from the backup memory within 24 hours.
- Be careful not to erase the stored memory before starting trouble diagnoses.

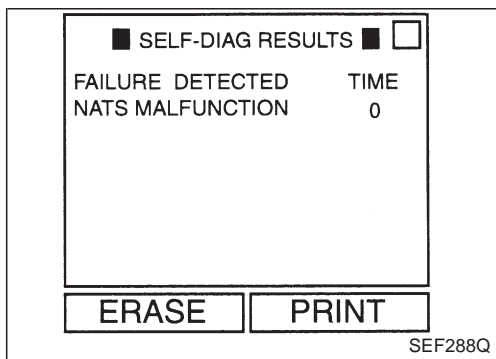

- If the MIL blinks or "NATS MALFUNCTION" is displayed on "SELF-DIAG RESULTS" screen, perform self-diagnostic results mode with CONSULT using NATS program card (NATS-E940). Refer to EL section.
- Confirm no self-diagnostic results of NATS is displayed before touching "ERASE" in "SELF-DIAG RESULTS" mode with CONSULT.
- When replacing ECM, initialisation of NATS V2.0 system and registration of all NATS V2.0 ignition key IDs must be carried out with CONSULT using NATS program card (NATS-E940).

Therefore, be sure to receive all keys from vehicle owner.

Regarding the procedures of NATS initialisation and NATS ignition key ID registration, refer to CONSULT operation manual, NATS V2.0.

Malfunction Indicator Lamp (MIL) (Cont'd)

DIAGNOSTIC TEST MODE II—HEATED OXYGEN SENSOR MONITOR






In this mode, the MALFUNCTION INDICATOR LAMP displays the condition of the fuel mixture (lean or rich) which is monitored by the heated oxygen sensor.

MALFUNCTION INDICATOR LAMP	Fuel mixture condition in the exhaust gas	Air fuel ratio feedback control condition
ON	Lean	Closed loop control
OFF	Rich	
*Remains ON or OFF	Any condition	Open loop control

*: Maintains conditions just before switching to open loop.

To check the heated oxygen sensor function, start engine in the Diagnostic Test Mode II and warm it up until engine coolant temperature indicator points to the middle of the gauge.

Next run engine at about 2,000 rpm for about 2 minutes under no-load conditions. Then make sure that the MALFUNCTION INDICATOR LAMP comes ON more than 5 times every 10 seconds when measured at 2,000 rpm under no-load.

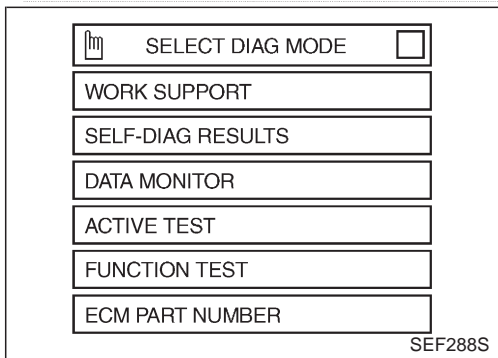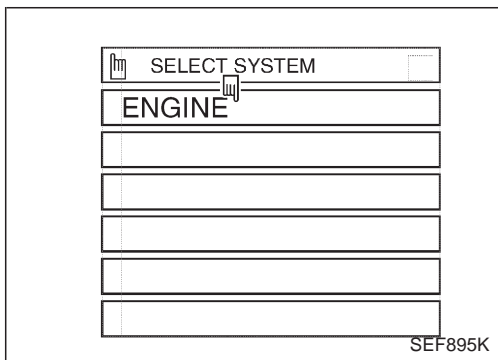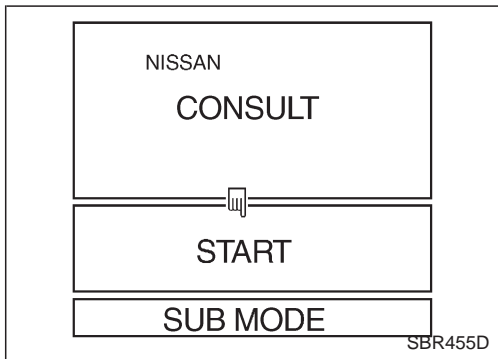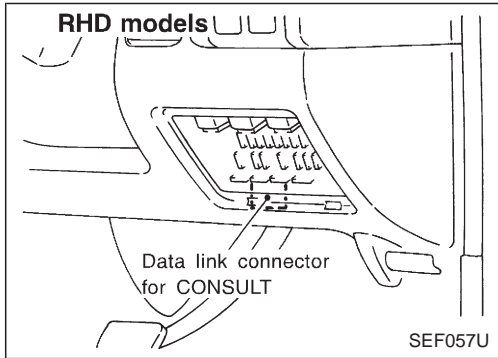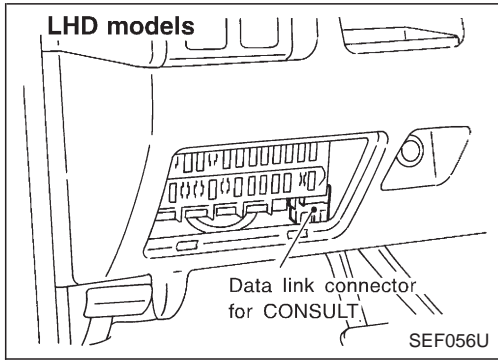

CONSULT

CONSULT INSPECTION PROCEDURE

1. Turn ignition switch OFF.
2. Connect "CONSULT" to data link connector for CONSULT. (Data link connector for CONSULT is located behind the fuse box cover.)

3. Turn ignition switch ON.
4. Touch "START".

5. Touch "ENGINE".

6. Perform each diagnostic test mode according to each service procedure.

For further information, see the CONSULT Operation Manual.

CONSULT (Cont'd)

FUNCTION

Diagnostic test mode	Function
Work support	A technician can adjust some devices faster and more accurately by following indications on CONSULT.
Self-diagnostic results	Self-diagnostic results can be read and erased quickly.
Data monitor	Input/Output data in the ECM can be read.
Active test	CONSULT drives some actuators apart from the ECM's and also shifts some parameters in a specified range.
Function test	Conducted by CONSULT instead of a technician to determine whether each system is "OK" or "NG".
ECM part number	ECM part number can be read.

WORK SUPPORT MODE

WORK ITEM	CONDITION	USAGE
THRTL POS SEN ADJ	CHECK THE THROTTLE POSITION SENSOR SIGNAL. ADJUST IT TO THE SPECIFIED VALUE BY ROTATING THE SENSOR BODY UNDER THE FOLLOWING CONDITIONS. <ul style="list-style-type: none"> ● IGN SW "ON" ● ENG NOT RUNNING ● ACC PEDAL NOT PRESSED 	When adjusting throttle position sensor initial position
IGNITION TIMING ADJ	<ul style="list-style-type: none"> ● IGNITION TIMING FEEDBACK CONTROL WILL BE HELD BY TOUCHING "START". AFTER DOING SO, ADJUST IGNITION TIMING WITH A TIMING LIGHT BY TURNING THE CRANKSHAFT POSITION SENSOR. 	When adjusting initial ignition timing
IACV-AAC VALVE ADJ	SET ENGINE SPEED AT THE SPECIFIED VALUE UNDER THE FOLLOWING CONDITIONS. <ul style="list-style-type: none"> ● ENGINE WARMED UP ● NO-LOAD 	
FUEL PRESSURE RELEASE	<ul style="list-style-type: none"> ● FUEL PUMP WILL STOP BY TOUCHING "START" DURING IDLING. CRANK A FEW TIMES AFTER ENGINE STALLS. 	When releasing fuel pressure from fuel line

CONSULT (Cont'd)

ECCS COMPONENT PARTS/CONTROL SYSTEMS APPLICATION

		Item	DIAGNOSTIC TEST MODE				
			WORK SUPPORT	SELF-DIAG-NOSTIC RESULTS	DATA MONITOR	ACTIVE TEST	FUNCTION TEST
ECCS COMPONENT PARTS	INPUT	Camshaft position sensor		X	X		
		Mass air flow sensor		X	X		
		Engine coolant temperature sensor		X	X	X	
		Heated oxygen sensor			X		
		Vehicle speed sensor			X		X
		Throttle position sensor	X	X	X		X
		Intake air temperature sensor		X	X		
		Ignition switch (start signal)			X		X
		Closed throttle position switch			X		X
		Air conditioner switch			X		
		Neutral position switch			X		X
		Power steering oil pressure switch			X		X
		Battery voltage			X		
	OUTPUT	Injectors			X	X	X
		Power transistor (Ignition timing)	X	X (Ignition signal)	X	X	X
		IACV-AAC valve	X		X	X	X
		Air conditioner relay			X		
		Fuel pump relay	X		X	X	X
		Swirl control valve control solenoid valve			X	X	X
		EVAP canister purge control solenoid valve*			X	X	X

X: Applicable

* : This item is indicated as "EGRC SOL/V" on the CONSULT screen.

CONSULT (Cont'd)

SELF-DIAGNOSTIC MODE

Regarding items detected in "SELF-DIAG RESULTS" mode, refer to "DIAGNOSTIC TROUBLE CODE INDEX", EC-1.

DATA MONITOR MODE

Monitored item [Unit]	ECM input signals	Main signals	Description	Remarks
CMPSRPM (POS) [rpm]	<input type="radio"/>	<input type="radio"/>	<ul style="list-style-type: none"> Indicates the engine speed computed from the POS signal (1° signal) of the camshaft position sensor. 	
MAS AIR/FL SE [V]	<input type="radio"/>	<input type="radio"/>	<ul style="list-style-type: none"> The signal voltage of the mass air flow sensor is displayed. 	<ul style="list-style-type: none"> When the engine is stopped, a certain value is indicated.
COOLAN TEMP/S [°C] or [°F]	<input type="radio"/>	<input type="radio"/>	<ul style="list-style-type: none"> The engine coolant temperature (determined by the signal voltage of the engine coolant temperature sensor) is displayed. 	<ul style="list-style-type: none"> When the engine coolant temperature sensor is open or short-circuited, ECM enters fail-safe mode. The engine coolant temperature determined by the ECM is displayed.
O2 SEN [V]	<input type="radio"/>	<input type="radio"/>	<ul style="list-style-type: none"> The signal voltage of the heated oxygen sensor is displayed. 	<ul style="list-style-type: none"> LHD models only
M/R F/C MNT [RICH/LEAN]	<input type="radio"/>	<input type="radio"/>	<ul style="list-style-type: none"> Display of heated oxygen sensor signal during air-fuel ratio feedback control: RICH ... means the mixture became "rich", and control is being affected toward a leaner mixture. LEAN ... means the mixture became "lean", and control is being affected toward a rich mixture. 	<ul style="list-style-type: none"> After turning ON the ignition switch, "RICH" is displayed until air-fuel mixture ratio feedback control begins. When the air-fuel ratio feedback is clamped, the value just before the clamping is displayed continuously. LHD models only
VHCL SPEED SE [km/h] or [mph]	<input type="radio"/>	<input type="radio"/>	<ul style="list-style-type: none"> The vehicle speed computed from the vehicle speed sensor signal is displayed. 	
BATTERY VOLT [V]	<input type="radio"/>	<input type="radio"/>	<ul style="list-style-type: none"> The power supply voltage of ECM is displayed. 	
THRTL POS SEN [V]	<input type="radio"/>	<input type="radio"/>	<ul style="list-style-type: none"> The throttle position sensor signal voltage is displayed. 	
INT/A TEMP SE [°C] or [°F]	<input type="radio"/>		<ul style="list-style-type: none"> The intake air temperature (determined by the signal voltage of the intake air temperature sensor) is indicated. 	
START SIGNAL [ON/OFF]	<input type="radio"/>	<input type="radio"/>	<ul style="list-style-type: none"> Indicates [ON/OFF] condition from the starter signal. 	<ul style="list-style-type: none"> After starting the engine, [OFF] is displayed regardless of the starter signal.
CLSD THL/POSI [ON/OFF]	<input type="radio"/>	<input type="radio"/>	<ul style="list-style-type: none"> Indicates [ON/OFF] condition from the throttle position sensor signal. 	
AIR COND SIG [ON/OFF]	<input type="radio"/>	<input type="radio"/>	<ul style="list-style-type: none"> Indicates [ON/OFF] condition of the air conditioner switch as determined by the air conditioner signal. 	
P/N POSI SW [ON/OFF]	<input type="radio"/>	<input type="radio"/>	<ul style="list-style-type: none"> Indicates [ON/OFF] condition from the park/neutral position switch signal. 	
PW/ST SIGNAL [ON/OFF]	<input type="radio"/>	<input type="radio"/>	<ul style="list-style-type: none"> [ON/OFF] condition of the power steering oil pressure switch determined by the power steering oil pressure signal is indicated. 	

NOTE:

Any monitored item that does not match the vehicle being diagnosed is deleted from the display automatically.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

KA

CONSULT (Cont'd)

Monitored item [Unit]	ECM input signals	Main signals	Description	Remarks
INJ PULSE [msec]		○	<ul style="list-style-type: none"> Indicates the actual fuel injection pulse width compensated by ECM according to the input signals. 	<ul style="list-style-type: none"> When the engine is stopped, a certain computed value is indicated.
IGN TIMING [BTDC]		○	<ul style="list-style-type: none"> Indicates the ignition timing computed by ECM according to the input signals. 	<ul style="list-style-type: none"> When the engine is stopped, a certain value is indicated.
IACV-AAC/V [%]		○	<ul style="list-style-type: none"> Indicates the idle air control valve (AAC valve) control value computed by ECM according to the input signals. 	
A/F ALPHA [%]		○	<ul style="list-style-type: none"> The mean value of the air-fuel ratio feedback correction factor per cycle is indicated. 	<ul style="list-style-type: none"> When the engine is stopped, a certain value is indicated. This data also includes the data for the air-fuel ratio learning control.
AIR COND RLY [ON/OFF]		○	<ul style="list-style-type: none"> The air conditioner relay control condition (determined by ECM according to the input signal) is indicated. 	
FUEL PUMP RLY [ON/OFF]		○	<ul style="list-style-type: none"> Indicates the fuel pump relay control condition determined by ECM according to the input signals. 	
SWRL CONT S/V [ON/OFF]		○	<ul style="list-style-type: none"> The control condition of the swirl control valve control solenoid valve (determined by the ECM according to the input signal) is indicated. ON ... Swirl control valve is closed OFF ... Swirl control valve is open 	
EGRC SOL/V (EVAP canister purge control solenoid valve) [ON/OFF]		○	<ul style="list-style-type: none"> The control condition of the EVAP canister purge control solenoid valve (determined by ECM according to the input signal) is indicated. ON ... EVAP canister purge control is not operating OFF ... EVAP canister purge control is operational. 	
VOLTAGE [V]			<ul style="list-style-type: none"> Voltage measured by the voltage probe. 	
PULSE [msec] or [Hz] or [%]			<ul style="list-style-type: none"> Pulse width, frequency or duty cycle measured by the pulse probe. 	<ul style="list-style-type: none"> Only “#” is displayed if item is unable to be measured. Figures with “#”s are temporary ones. They are the same figures as an actual piece of data which was just previously measured.

CONSULT (Cont'd)

ACTIVE TEST MODE

TEST ITEM	CONDITION	JUDGEMENT	CHECK ITEM (REMEDY)
FUEL INJECTION	<ul style="list-style-type: none"> ● Engine: Return to the original trouble condition ● Change the amount of fuel injection using CONSULT. 	If trouble symptom disappears, see CHECK ITEM.	<ul style="list-style-type: none"> ● Harness and connector ● Fuel injectors ● Heated oxygen sensor
IACV-AAC/V OPENING	<ul style="list-style-type: none"> ● Engine: After warming up, idle the engine. ● Change the IACV-AAC valve opening percent using CONSULT. 	Engine speed changes according to the opening percent.	<ul style="list-style-type: none"> ● Harness and connector ● IACV-AAC valve
ENG COOLANT TEMP	<ul style="list-style-type: none"> ● Engine: Return to the original trouble condition ● Change the engine coolant temperature using CONSULT. 	If trouble symptom disappears, see CHECK ITEM.	<ul style="list-style-type: none"> ● Harness and connector ● Engine coolant temperature sensor ● Fuel injectors
IGNITION TIMING	<ul style="list-style-type: none"> ● Engine: Return to the original trouble condition ● Timing light: Set ● Retard the ignition timing using CONSULT. 	If trouble symptom disappears, see CHECK ITEM.	<ul style="list-style-type: none"> ● Adjust ignition timing (by moving camshaft position sensor)
POWER BALANCE	<ul style="list-style-type: none"> ● Engine: After warming up, idle the engine. ● A/C switch "OFF" ● Shift lever "N" ● Cut off each injector signal one at a time using CONSULT. 	Engine runs rough or dies.	<ul style="list-style-type: none"> ● Harness and connector ● Compression ● Injectors ● Ignition coil with power transistor ● Spark plugs
FUEL PUMP RELAY	<ul style="list-style-type: none"> ● Ignition switch: ON (Engine stopped) ● Turn the fuel pump relay "ON" and "OFF" using CONSULT and listen to operating sound. 	Fuel pump relay makes the operating sound.	<ul style="list-style-type: none"> ● Harness and connector ● Fuel pump relay
EGRC SOLENOID VALVE (EVAP canister purge control solenoid valve)	<ul style="list-style-type: none"> ● Ignition switch: ON ● Turn solenoid valve "ON" and "OFF" with CONSULT and listen to operating sound. 	Solenoid valve makes an operating sound.	<ul style="list-style-type: none"> ● Harness and connector ● EVAP canister purge control solenoid valve
SWIRL CONT SOL VALVE	<ul style="list-style-type: none"> ● Ignition switch: ON (Engine stopped) ● Turn solenoid valve "ON" and "OFF" with CONSULT and listen to operating sound. 	Solenoid valve makes an operating sound.	<ul style="list-style-type: none"> ● Harness and connector ● Swirl control valve control solenoid valve
SELF-LEARNING CONT	<ul style="list-style-type: none"> ● In this test, the coefficient of self-learning control mixture ratio returns to the original coefficient by touching "CLEAR" on the screen. 		

CONSULT (Cont'd)

FUNCTION TEST MODE

FUNCTION TEST ITEM	CONDITION	JUDGEMENT		CHECK ITEM (REMEDY)
SELF-DIAG RESULTS	<ul style="list-style-type: none"> ● Ignition switch: ON (Engine stopped) ● Displays the results of on board diagnostic system. 	—		Objective system
CLOSED THROTTLE POSI	<ul style="list-style-type: none"> ● Ignition switch: ON (Engine stopped) ● Throttle position sensor circuit is tested when throttle is opened and closed fully. ("IDLE POSITION" is the test item name for the vehicles in which idle is selected by throttle position sensor.) 	Throttle valve: opened	OFF	<ul style="list-style-type: none"> ● Harness and connector ● Throttle position sensor (Closed throttle position) ● Throttle position sensor (Closed throttle position) adjustment ● Throttle linkage ● Verify operation in DATA MONITOR mode.
		Throttle valve: closed	ON	
THROTTLE POSI SEN CKT	<ul style="list-style-type: none"> ● Ignition switch: ON (Engine stopped) ● Throttle position sensor circuit is tested when throttle is opened and closed fully. 	Range (Throttle valve fully opened — Throttle valve fully closed)	More than 3.0V	<ul style="list-style-type: none"> ● Harness and connector ● Throttle position sensor ● Throttle position sensor adjustment ● Throttle linkage ● Verify operation in DATA MONITOR mode.
PARK/NEUT POSI SW CKT	<ul style="list-style-type: none"> ● Ignition switch: ON (Engine stopped) ● Neutral position switch circuit is tested when shift lever is manipulated. 	Out of N/P positions	OFF	<ul style="list-style-type: none"> ● Harness and connector ● Neutral position switch ● Linkage adjustment
		In N/P positions	ON	
FUEL PUMP CIRCUIT	<ul style="list-style-type: none"> ● Ignition switch: ON (Engine stopped) ● Fuel pump circuit is tested by checking the pulsation in fuel pressure when fuel tube is pinched. 	There is pressure pulsation on the fuel feed hose.		<ul style="list-style-type: none"> ● Harness and connector ● Fuel pump ● Fuel pump relay ● Fuel filter clogging ● Fuel level
EGRC SOL/V CIRCUIT (EVAP canister purge control solenoid valve circuit)	<ul style="list-style-type: none"> ● Ignition switch: ON (Engine stopped) ● EVAP canister purge control solenoid valve circuit is tested by checking solenoid valve operating noise. 	The solenoid valve makes an operating sound every 3 seconds.		<ul style="list-style-type: none"> ● Harness and connector ● EVAP canister purge control solenoid valve
START SIGNAL CIRCUIT	<ul style="list-style-type: none"> ● Ignition switch: ON → START ● Start signal circuit is tested when engine is started by operating the starter. Battery voltage and water temperature before cranking, and average battery voltage, mass air flow sensor output voltage and cranking speed during cranking are displayed. 	Start signal: OFF → ON		<ul style="list-style-type: none"> ● Harness and connector ● Ignition switch

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

KA

CONSULT (Cont'd)

FUNCTION TEST ITEM	CONDITION	JUDGEMENT	CHECK ITEM (REMEDY)	
PW/ST SIGNAL CIRCUIT	<ul style="list-style-type: none"> ● Ignition switch: ON (Engine running) ● Power steering oil pressure switch circuit is tested when steering wheel is rotated fully and then set to a straight line running position. 	Locked position	ON	<ul style="list-style-type: none"> ● Harness and connector ● Power steering oil pressure switch ● Power steering oil pump
		Neutral position	OFF	
SWRL CONT S/V CIRCUIT	<ul style="list-style-type: none"> ● Ignition switch: ON (Engine stopped) ● Swirl control valve control solenoid valve circuit is tested by checking solenoid valve operating sound. 	The solenoid valve makes an operating sound every 3 seconds.		<ul style="list-style-type: none"> ● Harness and connector ● Solenoid valve ● Swirl control valve ● Vacuum hose
VEHICLE SPEED SEN CKT	<ul style="list-style-type: none"> ● Vehicle speed sensor circuit is tested when vehicle is running at a speed of 10 km/h (6 MPH) or higher. 	Vehicle speed sensor input signal is greater than 4 km/h (2 MPH).		<ul style="list-style-type: none"> ● Harness and connector ● Vehicle speed sensor ● Speedometer
IGN TIMING ADJ	<ul style="list-style-type: none"> ● After warming up, idle the engine. ● Ignition timing is checked by reading ignition timing with a timing light and checking whether it agrees with specifications. 	The timing light indicates the same value on the screen.		<ul style="list-style-type: none"> ● Adjust ignition timing (by moving camshaft position sensor or distributor) ● Camshaft position sensor drive mechanism
MIXTURE RATIO TEST	<ul style="list-style-type: none"> ● Air-fuel ratio feedback circuit (injection system, ignition system, vacuum system, etc.) is tested by examining the heated oxygen sensor output at 2,000 rpm under non-loaded state. 	Heated oxygen sensor COUNT: More than 5 times during 10 seconds		<ul style="list-style-type: none"> ● INJECTION SYS (Injector, fuel pressure regulator, harness or connector) ● IGNITION SYS (Spark plug, ignition coil, power transistor harness or connector) ● VACUUM SYS (Intake air leaks) ● Heated oxygen sensor circuit ● Heated oxygen sensor operation ● Fuel pressure high or low ● Mass air flow sensor
POWER BALANCE	<ul style="list-style-type: none"> ● After warming up, idle the engine. ● Injector operation of each cylinder is stopped one after another, and resultant change in engine rotation is examined to evaluate combustion of each cylinder. (This is only displayed for models where a sequential multiport fuel injection system is used.) 	Difference in engine speed is greater than 25 rpm before and after cutting off the injector of each cylinder.		<ul style="list-style-type: none"> ● Injector circuit (Injector, harness or connector) ● Ignition circuit (Spark plug, ignition coil, power transistor harness or connector) ● Compression ● Valve timing
IACV-AAC/V SYSTEM	<ul style="list-style-type: none"> ● After warming up, idle the engine. ● IACV-AAC valve system is tested by detecting change in engine speed when IACV-AAC valve opening is changed to 0%, 20% and 80%. 	Difference in engine speed is greater than 150 rpm between when valve opening is at 80% and at 20%.		<ul style="list-style-type: none"> ● Harness and connector ● IACV-AAC valve ● Air passage restriction between air inlet and IACV-AAC valve ● IAS (Idle adjusting screw) adjustment

CONSULT (Cont'd)


REAL TIME DIAGNOSIS IN DATA MONITOR MODE

CONSULT has two kinds of triggers and they can be selected by touching "SETTING" in "DATA MONITOR" mode.




1. "AUTO TRIG" (Automatic trigger):
 - The malfunction will be identified on the CONSULT screen in real time. In other words, malfunction item will be displayed at the moment the malfunction is detected by ECM. DATA MONITOR can be performed continuously until a malfunction is detected. However, DATA MONITOR cannot continue any longer after the malfunction detection.
2. "MANU TRIG" (Manual trigger):
 - Malfunction item will not be displayed automatically on CONSULT screen even though a malfunction is detected by ECM. DATA MONITOR can be performed continuously even though a malfunction is detected.

Use these triggers as follows:

1. "AUTO TRIG"
 - While trying to detect the DTC by performing the "DTC CONFIRMATION PROCEDURE", be sure to select to "DATA MONITOR (AUTO TRIG)" mode. You can confirm the malfunction at the moment it is detected.
 - While narrowing down the possible causes, CONSULT should be set in "DATA MONITOR (AUTO TRIG)" mode, especially in case the incident is intermittent. When you are inspecting the circuit by gently shaking (or twisting) the suspicious connectors, components and harness in the "DTC CONFIRMATION PROCEDURE", the moment a malfunction is found the malfunction item will be displayed. (Refer to GI section, "Incident Simulation Tests" in "HOW TO PERFORM EFFICIENT DIAGNOSIS FOR AN ELECTRICAL INCIDENT".)
2. "MANU TRIG"
 - If the malfunction is displayed as soon as "DATA MONITOR" is selected, reset CONSULT to "MANU TRIG". By selecting "MANU TRIG" you can monitor and store the data. The data can be utilized for further diagnosis, such as a comparison with the value for the normal operating condition.

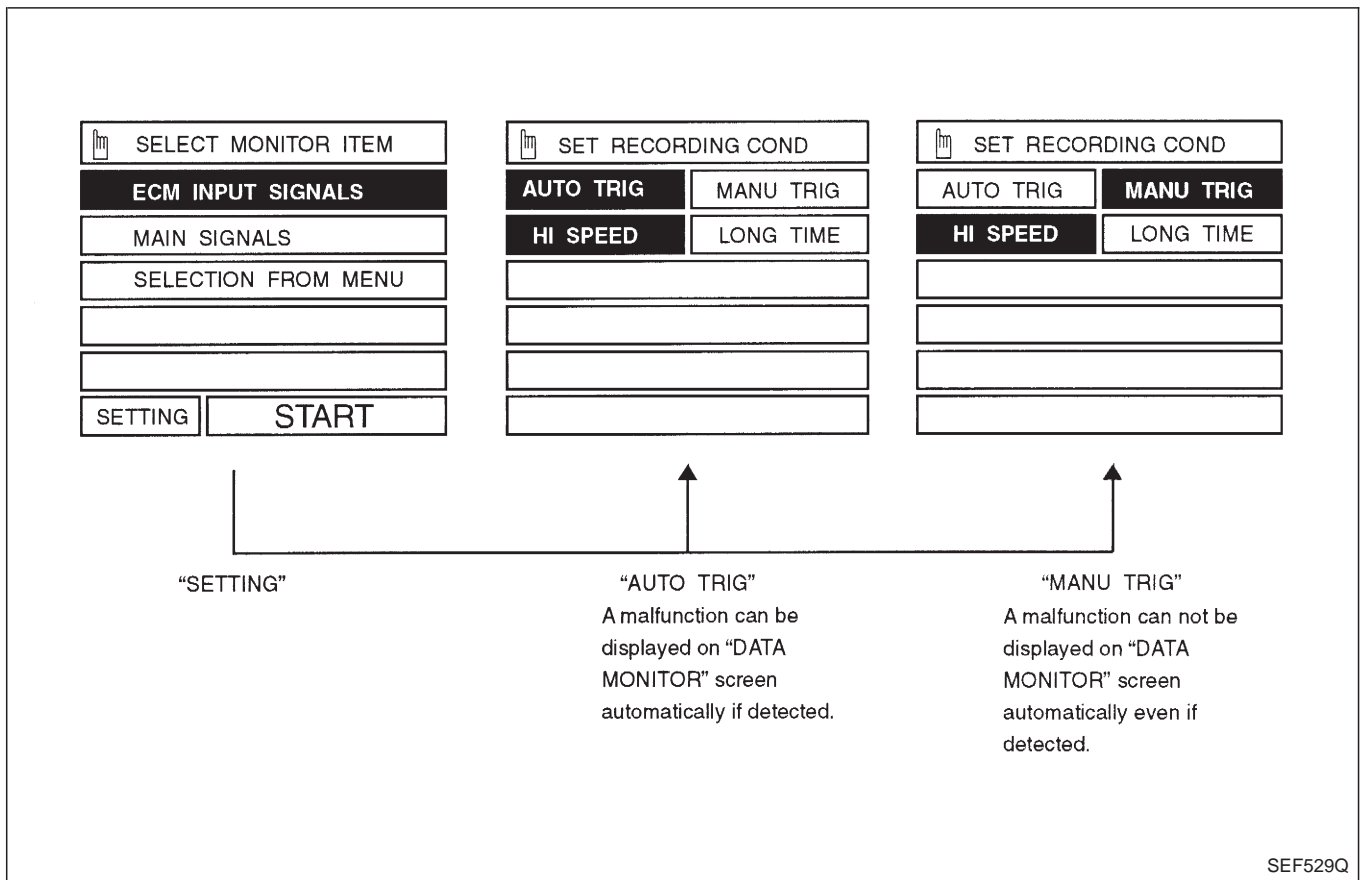

SEF529Q

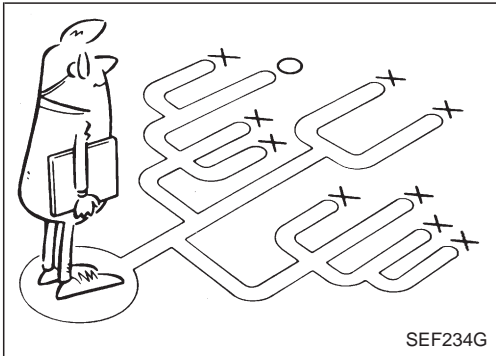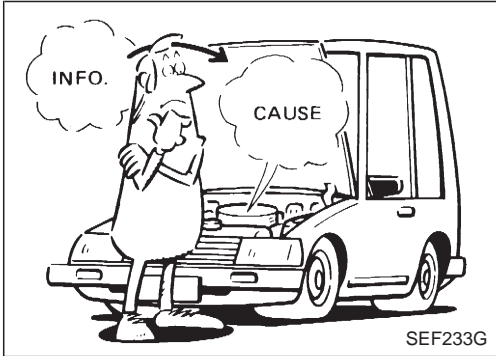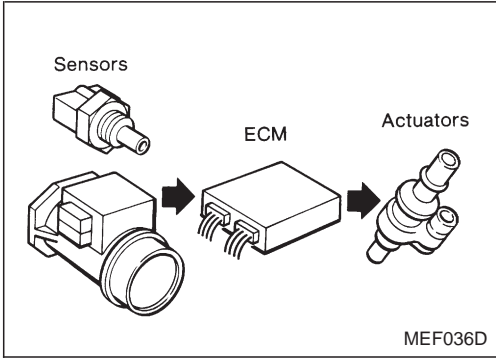

KEY POINTS

WHAT Vehicle & engine model
WHEN Date, Frequencies
WHERE..... Road conditions
HOW Operating conditions,
 Weather conditions,
 Symptoms

SEF907L

Introduction

The engine has an ECM to control major systems such as fuel control, ignition control, idle air control system, etc. The ECM accepts input signals from sensors and instantly drives actuators. It is essential that both input and output signals are proper and stable. At the same time, it is important that there are no problems such as vacuum leaks, fouled spark plugs, or other problems with the engine.

It is much more difficult to diagnose a problem that occurs intermittently rather than continuously. Most intermittent problems are caused by poor electric connections or improper wiring. In this case, careful checking of suspected circuits may help prevent the replacement of good parts.

A visual check only may not find the cause of the problems. A road test with CONSULT or a circuit tester connected should be performed. Follow the "Work Flow" on EC-56.

Before undertaking actual checks, take just a few minutes to talk with a customer who approaches with a driveability complaint. The customer can supply good information about such problems, especially intermittent ones. Find out what symptoms are present and under what conditions they occur. A "Diagnostic Worksheet" like the example on next page should be used.

Start your diagnosis by looking for "conventional" problems first. This will help troubleshoot driveability problems on an electronically controlled engine vehicle.


Diagnostic Worksheet

There are many operating conditions that lead to the malfunctions of engine components. A good knowledge of such conditions can make troubleshooting faster and more accurate.

In general, each customer may feel differently about a given problem. It is important to fully understand the symptoms or conditions for a customer complaint.

Utilize a diagnostic worksheet like the one on next page in order to organize all the information for troubleshooting.

Work Flow





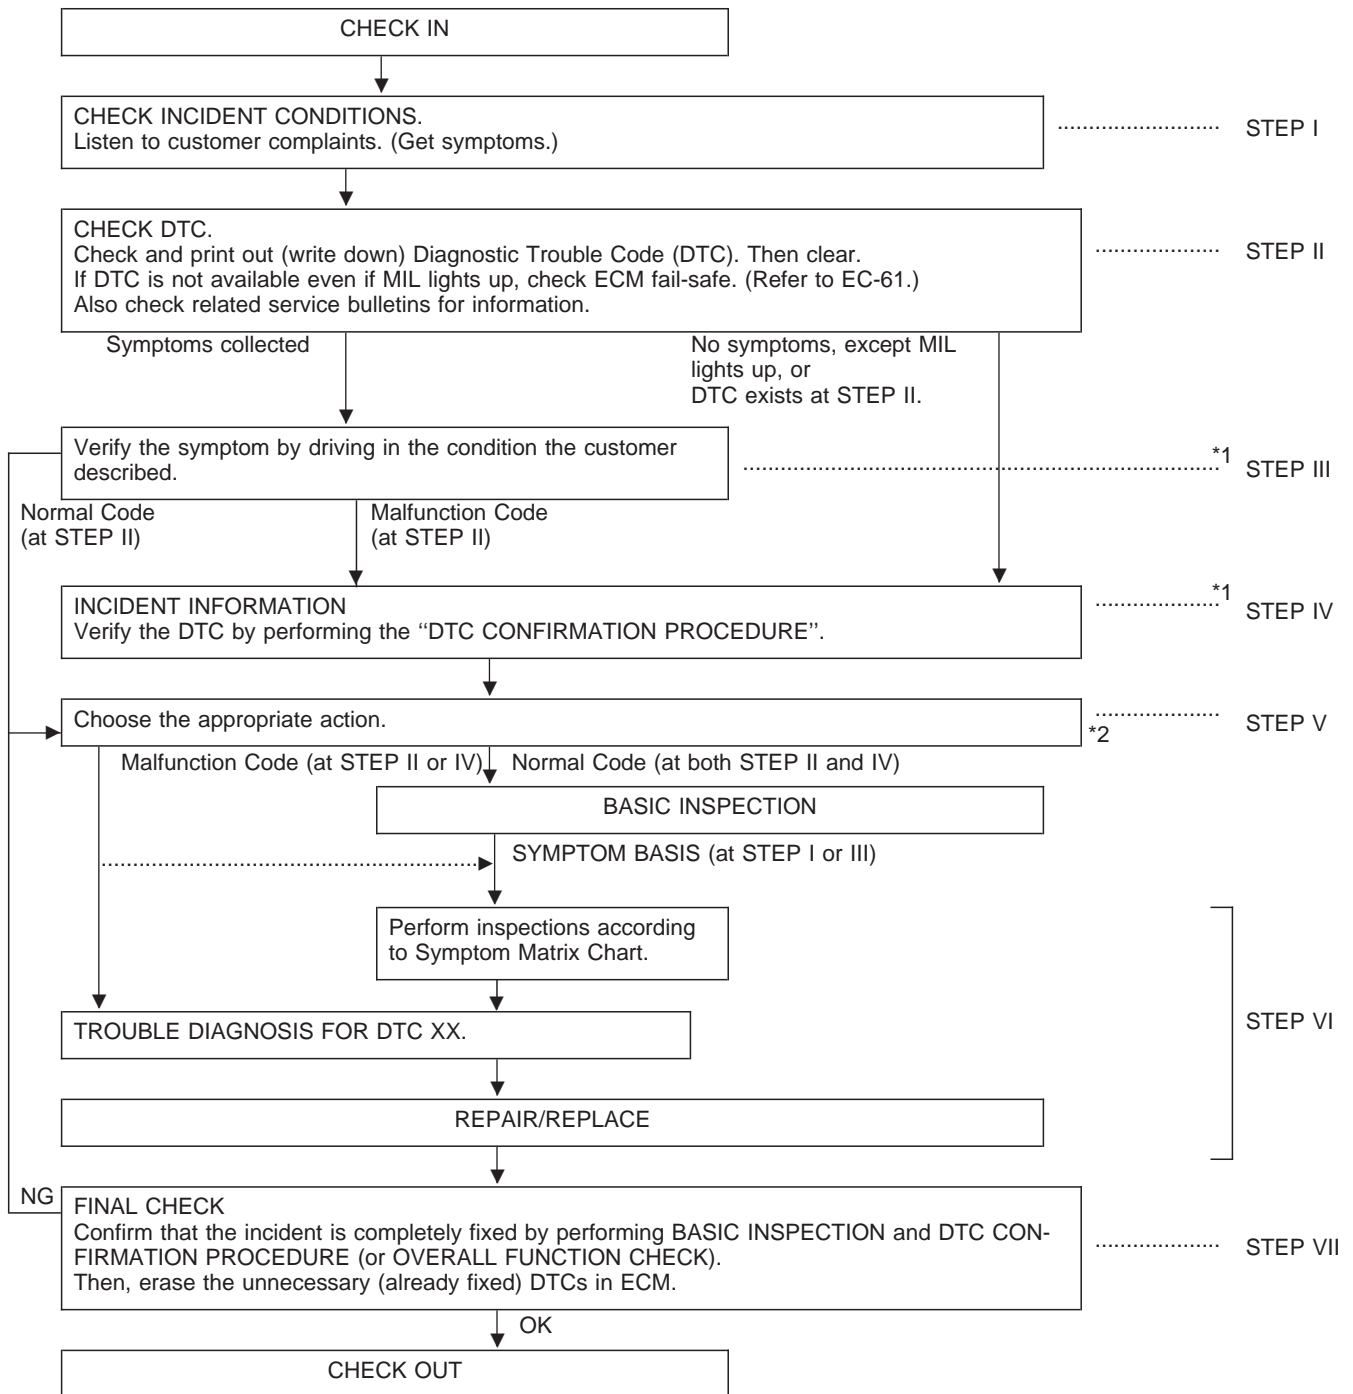


*1: If the incident cannot be duplicated, see “Incident Simulation Tests” of “HOW TO PERFORM EFFICIENT DIAGNOSIS FOR AN ELECTRICAL INCIDENT” in G1 section.

*2: If the on board diagnostic system cannot be performed, check main power supply and ground circuit (See TROUBLE DIAGNOSIS FOR POWER SUPPLY, EC-75).

Description for Work Flow

STEP	DESCRIPTION
STEP I	Get detailed information about the conditions and the environment when the incident/symptom occurred using the "DIAGNOSTIC WORK SHEET", EC-54.
STEP II	<p>Before confirming the concern, check and write down (print out using CONSULT) the Diagnostic Trouble Code (DTC), then erase the code. (Refer to EC-36.) The DTC can be used when duplicating the incident at STEP III & IV.</p> <p>Study the relationship between the cause, specified by DTC, and the symptom described by the customer. (The "Symptom Matrix Chart" will be useful. See page EC-62.)</p> <p>Also check related service bulletins for information.</p>
STEP III	<p>Try to confirm the symptom and under what conditions the incident occurs.</p> <p>The "DIAGNOSTIC WORK SHEET" is useful to verify the incident. Connect CONSULT to the vehicle in DATA MONITOR (AUTO TRIG) mode and check real time diagnosis results.</p> <p>If the incident cannot be verified, perform INCIDENT SIMULATION TESTS. (Refer to GI section.)</p> <p>If the malfunction code is detected, skip STEP IV and perform STEP V.</p>
STEP IV	<p>Try to detect the Diagnostic Trouble Code by driving in (or performing) the "DTC CONFIRMATION PROCEDURE". Check and read the DTC by using CONSULT.</p> <p>During the DTC verification, be sure to connect CONSULT to the vehicle in DATA MONITOR (AUTO TRIG) mode and check real time diagnosis results.</p> <p>If the incident cannot be verified, perform INCIDENT SIMULATION TESTS. (Refer to GI section.)</p> <p>In case the "DTC CONFIRMATION PROCEDURE" is not available, perform the "OVERALL FUNCTION CHECK" instead. The DTC cannot be displayed by this check, however, this simplified "check" is an effective alternative. The "NG" result of the "OVERALL FUNCTION CHECK" is the same as the DTC detection.</p>
STEP V	<p>Take the appropriate action based on the results of STEP I through IV.</p> <p>If the malfunction code is indicated, proceed to TROUBLE DIAGNOSIS FOR DTC XX.</p> <p>If the normal code is indicated, proceed to the BASIC INSPECTION on next page. Then perform inspections according to the Symptom Matrix Chart. (Refer to EC-62.)</p>
STEP VI	<p>Identify where to begin diagnosis based on the relationship study between symptom and possible causes. Inspect the system for mechanical binding, loose connectors or wiring damage using (tracing) "Harness Layouts". Gently shake the related connectors, components or wiring harness with CONSULT set in "DATA MONITOR (AUTO TRIG)" mode.</p> <p>Check the voltage of the related ECM terminals or monitor the output data from the related sensors with CONSULT. Refer to EC-64, EC-68.</p> <p>The "DIAGNOSTIC PROCEDURE" in EC section contains a description based on open circuit inspection. A short circuit inspection is also required for the circuit check in the DIAGNOSTIC PROCEDURE. For details, refer to GI section ("HOW TO PERFORM EFFICIENT DIAGNOSIS FOR AN ELECTRICAL INCIDENT", "Circuit Inspection"). Repair or replace the malfunction parts.</p>
STEP VII	<p>Once you have repaired the circuit or replaced a component, you need to run the engine in the same conditions and circumstances which resulted in the customer's initial complaint.</p> <p>Perform the "DTC CONFIRMATION PROCEDURE" and confirm the normal code (Diagnostic trouble code No. 55) is detected. If the incident is still detected in the final check, perform STEP VI by using a different method from the previous one.</p> <p>Before returning the vehicle to the customer, be sure to erase the unnecessary (already fixed) DTC in ECM. (Refer to EC-36.)</p>

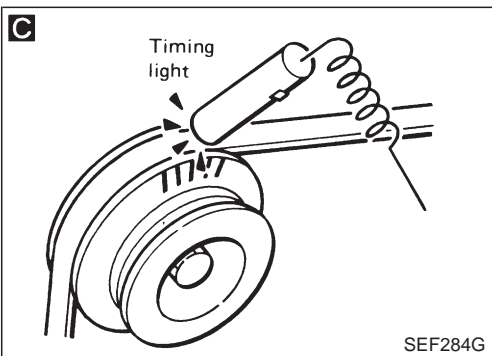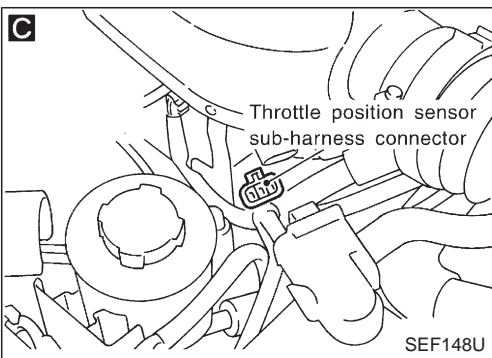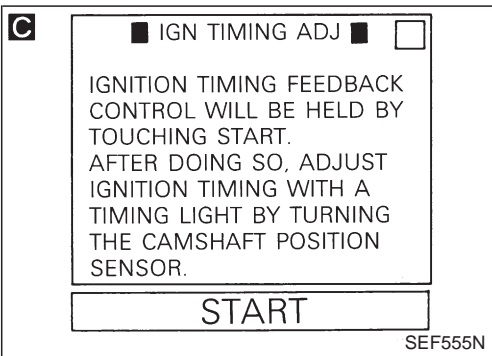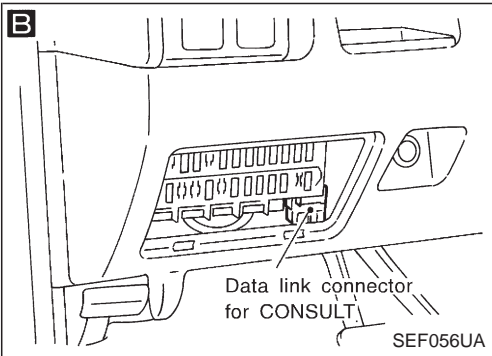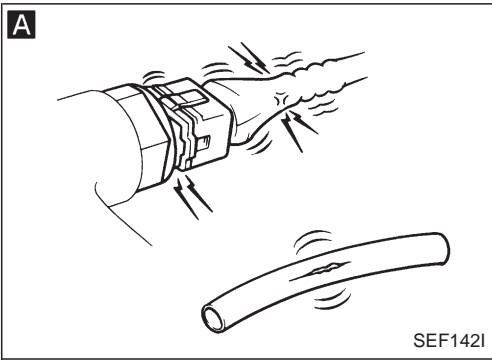

Basic Inspection

Precaution:

Perform Basic Inspection without electrical or mechanical loads applied;

- Headlamp switch is OFF,
- Air conditioner switch is OFF,
- Rear window defogger switch is OFF,
- Steering wheel is in the straight-ahead position, etc.

A

BEFORE STARTING

1. Check service records for any recent repairs that may indicate a related problem, or the current need for scheduled maintenance.
2. Open engine hood and check the following:
 - Harness connectors for improper connections
 - Vacuum hoses for splits, kinks, or improper connections
 - Wiring for improper connections, pinches, or cuts

B

CONNECT CONSULT TO THE VEHICLE.

Connect "CONSULT" to the data link connector for CONSULT and select "ENGINE" from the menu. Refer to EC-45.

C

CHECK IGNITION TIMING.

1. Warm up engine sufficiently.
2. Select "IGN TIMING ADJ" in "WORK SUPPORT" mode.
3. Touch "START".
4. Check ignition timing at idle using timing light.

Ignition timing:
10°±2° BTDC

OR

1. Warm up engine sufficiently.
2. Stop engine and disconnect throttle position sensor sub-harness connector.
3. Start engine.
4. Check ignition timing at idle using timing light.

Ignition timing:
10°±2° BTDC

NG → Adjust ignition timing by turning camshaft position sensor.

OK

Ⓐ

(Go to next page.)



Basic Inspection (Cont'd)

D ■ IGN TIMING ADJ ■ □


IGNITION TIMING FEEDBACK CONTROL WILL BE HELD BY TOUCHING START. AFTER DOING SO, ADJUST IGNITION TIMING WITH A TIMING LIGHT BY TURNING THE CAMSHAFT POSITION SENSOR.

START

SEF546N

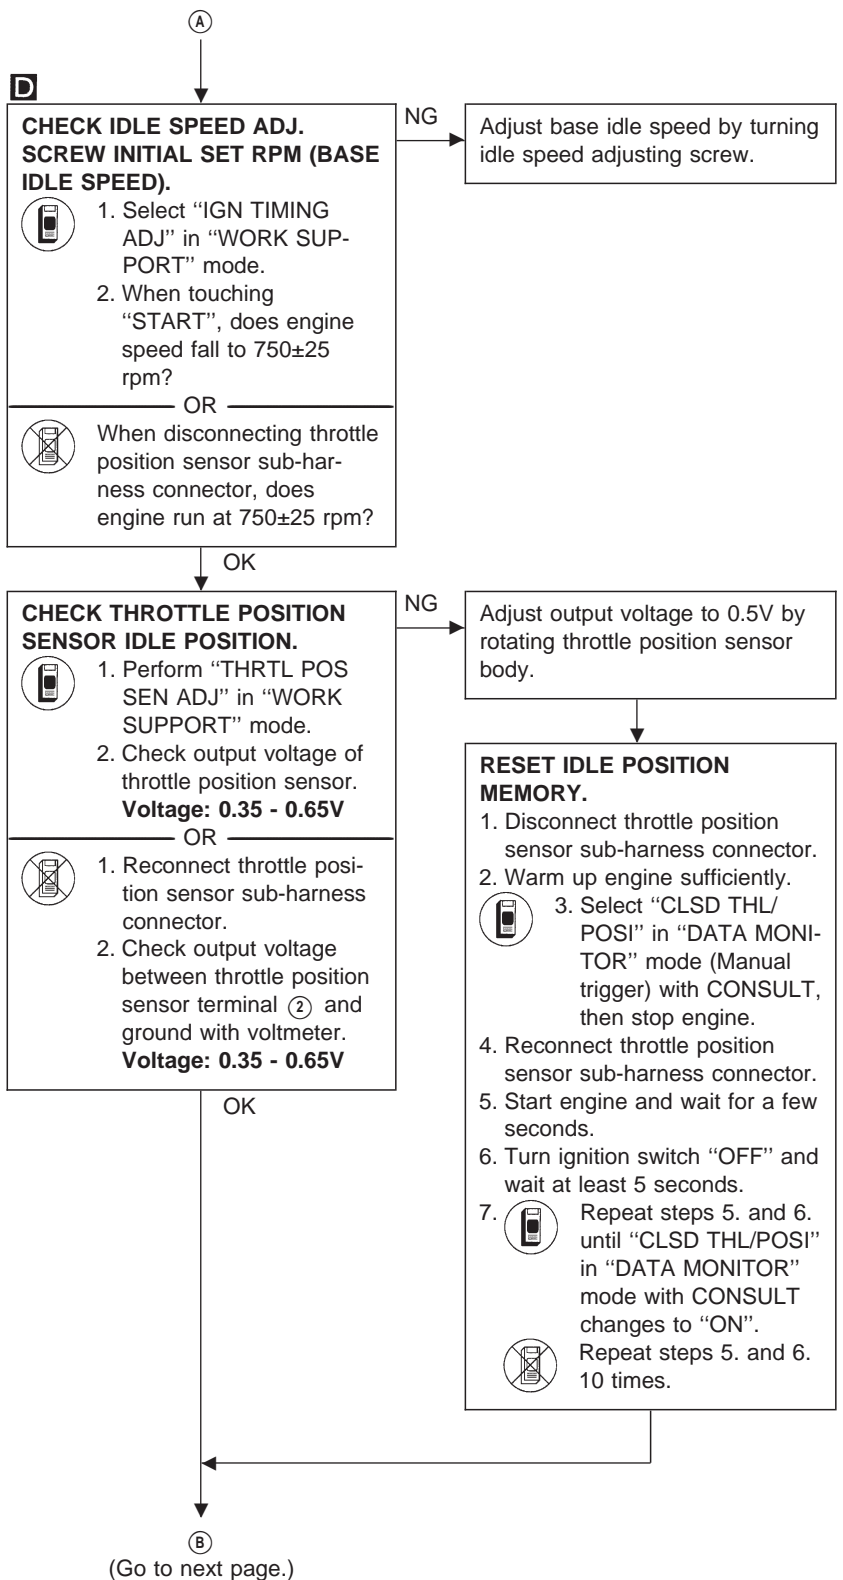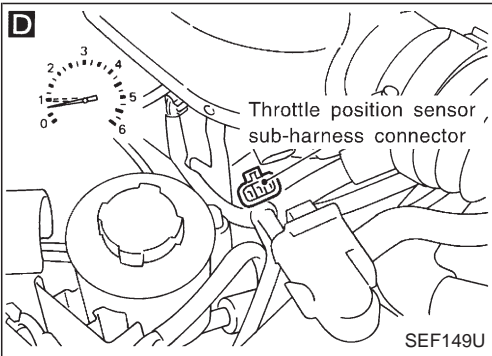

Basic Inspection (Cont'd)

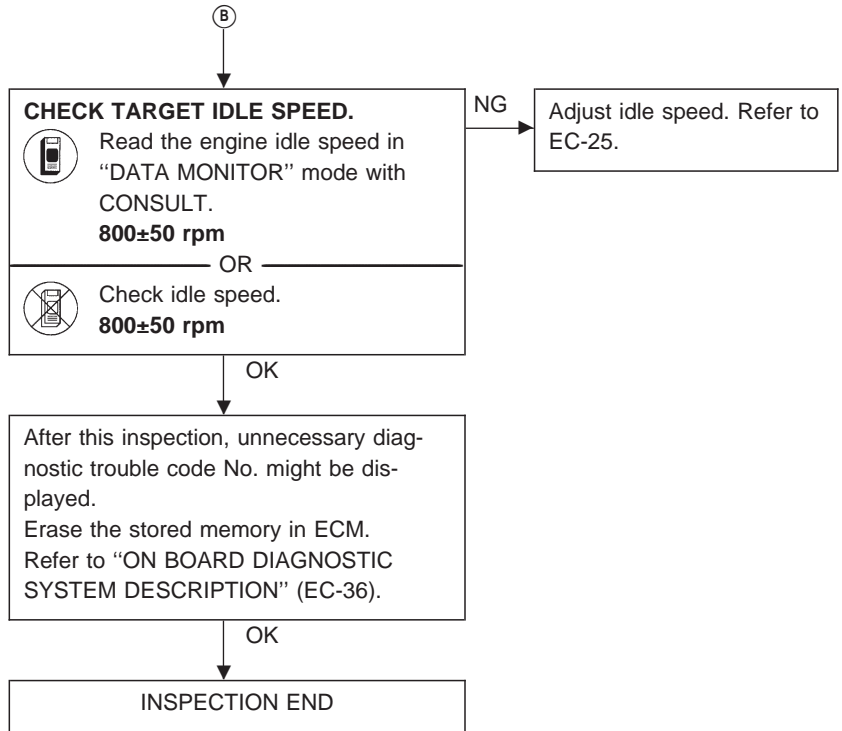

Fail-Safe Chart

The ECM enters fail-safe mode, if any of the following malfunctions are detected due to the open or short circuit.

When the ECM enters the ECM fail-safe mode listed in the last column below, the MIL illuminates.

DTC No.	Detected items	Engine operating condition in fail-safe mode												
12	Mass air flow sensor circuit	Engine speed will not rise more than 2,400 rpm due to the fuel cut.												
13	Engine coolant temperature sensor circuit	<p>Engine coolant temperature will be determined by ECM based on the time after turning ignition switch "ON" or "START". CONSULT displays the engine coolant temperature decided by ECM.</p> <table border="1"> <thead> <tr> <th>Condition</th> <th>Engine coolant temperature decided (CONSULT display)</th> </tr> </thead> <tbody> <tr> <td>Just as ignition switch is turned ON or START</td> <td>20°C (68°F)</td> </tr> <tr> <td>More than 6 minutes after ignition START</td> <td>80°C (176°F)</td> </tr> <tr> <td>Except as shown above</td> <td>20 - 80°C (68 - 176°F) (Depends on the time)</td> </tr> </tbody> </table>	Condition	Engine coolant temperature decided (CONSULT display)	Just as ignition switch is turned ON or START	20°C (68°F)	More than 6 minutes after ignition START	80°C (176°F)	Except as shown above	20 - 80°C (68 - 176°F) (Depends on the time)				
Condition	Engine coolant temperature decided (CONSULT display)													
Just as ignition switch is turned ON or START	20°C (68°F)													
More than 6 minutes after ignition START	80°C (176°F)													
Except as shown above	20 - 80°C (68 - 176°F) (Depends on the time)													
41	Intake air temperature sensor circuit	The ECM controls on the assumption that the intake air temperature is 20°C (68°F).												
43	Throttle position sensor circuit	<p>Throttle position will be determined based on the amount of mass air flow and the engine speed. Therefore, acceleration will be poor.</p> <table border="1"> <thead> <tr> <th></th> <th>Driving condition</th> </tr> </thead> <tbody> <tr> <td>When engine is idling</td> <td>Normal</td> </tr> <tr> <td>When accelerating</td> <td>Poor acceleration</td> </tr> </tbody> </table>		Driving condition	When engine is idling	Normal	When accelerating	Poor acceleration						
	Driving condition													
When engine is idling	Normal													
When accelerating	Poor acceleration													
Unable to access Diagnostic Test Mode II	ECM	<p>ECM fail-safe activating condition The computing function of the ECM was judged to be malfunctioning. When the fail-safe system activates, i.e. if the ECM detects a malfunction condition in the CPU of ECM, the MALFUNCTION INDICATOR LAMP on the instrument panel lights to warn the driver. However, it is not possible to access ECCS and DTC cannot be confirmed.</p> <p>Engine control with ECM fail-safe When the fail-safe system is operating, fuel injection, ignition timing, fuel pump operation and IACV-AAC valve operation are controlled under certain limitations.</p> <table border="1"> <thead> <tr> <th></th> <th>ECM fail-safe operation</th> </tr> </thead> <tbody> <tr> <td>Engine speed</td> <td>Engine speed will not rise more than 3,000 rpm.</td> </tr> <tr> <td>Fuel injection</td> <td>Simultaneous multiport fuel injection system</td> </tr> <tr> <td>Ignition timing</td> <td>Ignition timing is fixed at the preset value.</td> </tr> <tr> <td>Fuel pump</td> <td>Fuel pump relay is "ON" when engine is running and "OFF" when engine stalls.</td> </tr> <tr> <td>IACV-AAC valve</td> <td>Full open</td> </tr> </tbody> </table> <p>Replace ECM, if ECM fail-safe condition is confirmed.</p>		ECM fail-safe operation	Engine speed	Engine speed will not rise more than 3,000 rpm.	Fuel injection	Simultaneous multiport fuel injection system	Ignition timing	Ignition timing is fixed at the preset value.	Fuel pump	Fuel pump relay is "ON" when engine is running and "OFF" when engine stalls.	IACV-AAC valve	Full open
	ECM fail-safe operation													
Engine speed	Engine speed will not rise more than 3,000 rpm.													
Fuel injection	Simultaneous multiport fuel injection system													
Ignition timing	Ignition timing is fixed at the preset value.													
Fuel pump	Fuel pump relay is "ON" when engine is running and "OFF" when engine stalls.													
IACV-AAC valve	Full open													

Symptom Matrix Chart

		SYMPTOM														Reference page			
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)	OVERCOOLS		OVERCHARGING		
Warranty Symptom Code		AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	HA	1P	1X			
Basic engine control system	Fuel	Fuel pump circuit	●	●	●	○	●		●	○		○		○				EC-151	
		Fuel pressure regulator system	●	●	●	○	●	○	●	○			●						EC-22
		Injector circuit	●	●	●	○	●		●	●			●			○			EC-144
		Evaporative emission system	○	○	○	○	●	○	○	○	○		○						EC-19
	Air	Positive crankcase ventilation system	○	○	○	○	●	○	○	○	○		○	○					EC-21
		Incorrect idle speed adjustment	○	○				○	○	○	○		○						EC-25
		Swirl control valve circuit		○	○					●									EC-161
		IACV-AAC valve circuit	●	●	●	○	●	●	●	●	●		○		○				EC-131
		IACV-FICD solenoid valve circuit	○	○	○	○	○	○	○	○	○		○						EC-168
	Ignition	Incorrect ignition timing adjustment	○	○	●	●	●		●	●			●						EC-25
Ignition circuit		●	●	●	●	●		●	●			●						EC-99	
EVAP	EVAP canister purge control solenoid valve circuit	●	○	○	○	○		○				○						EC-140	
	Main power supply and ground circuit	●	●	●	○	○		○	○		○			○				EC-75	
	Air conditioner circuit	○	○	○	○	○	○	○	○	○		○		○				HA section	
ECCS system	ECCS	Camshaft position sensor circuit	●	●	●	●	●		○	○		○						EC-82	
		Mass air flow sensor circuit	●	●	●	●	●		●	○			○					EC-89	
		Heated oxygen sensor circuit		●	●	○	●		●	○			●						EC-123, 127
		Engine coolant temperature sensor circuit	●	●	●	○	●	●	●	○	○		●						EC-95
		Throttle position sensor circuit		●	●		●	●	●	●	●		●						EC-113
		Incorrect throttle position sensor adjustment		●	○		○	●	○	○	●		○						EC-58
		Vehicle speed sensor circuit		○	○		○						○						EC-118
		ECM	○	○	○	○	○	○	○	○	○	○	○						EC-61
		Start signal circuit	○																EC-149
		Neutral position switch circuit			○		○		○	○			○						EC-136
	Power steering oil pressure switch circuit		○					○	○									EC-157	

●; High Possibility Item
○; Low Possibility Item

(continued on next page)

Symptom Matrix Chart (Cont'd)

SYSTEM — Engine mechanical & other		SYMPTOM														Reference page	
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)	OVERCOOLS		OVERCHARGING
Warranty Symptom Code		AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	HA	1P	1X	
Fuel	Fuel tank	●	●														—
	Fuel piping	●	●	○	○	●		○	○			○					
	Vapor lock																
	Valve deposit	○	○	○	○	○			○	○			○				
	Poor fuel (Heavy weight gasoline, Low octane)	○	○	○	○	○		○	○			○					
Air	Air duct		○	○		○		○	○			○					FE section
	Air cleaner		○	●		●		●	○			○					
	Air leakage from air duct (Mass air flow sensor — throttle body)	○	○	○	○	○	○	○	○	○			○				
	Throttle body, Throttle wire	○	●	●		○	●	●	○	○			○				
	Air leakage from intake manifold/Collector/Gasket	○	●	○	○	○	○	●	○	○			●				
Cranking	Battery	○	○	○		○		○	○			○		○		○	EL section
	Alternator circuit	○	○	○		○		○	○			○		○		○	
	Starter circuit	●															
	Flywheel	●															
Engine	Cylinder head	●	○	●	○	○		●	○			○					—
	Cylinder head gasket	○	○	○	○	○		●	○		●	○	○				
	Cylinder block	○	○	○	○	●		○	○			○	○				
	Piston	○	○	○	○	○		○	●			○	●				
	Piston ring	○	○	○	○	●		●	○			○	●				
	Connecting rod	●	○	○	○	○		○	○			○					
	Bearing	●	●	○	●	○		○	●			○					
	Crankshaft	○	○	○	○	○		○	○			○					
Valve mechanism	Timing chain	●	○	●	○	●		○	○			○					
	Camshaft	●	○	○	○	○		○	○			○					
	Intake valve	○	●	●	○	○		●	○			○	○				
	Exhaust valve	●	○	●	○	●		●	○			○	●				
Exhaust	Exhaust manifold/Tube/Muffler/Gasket	○	●	●	●	●		●	○			●					
	Three way catalyst	○	●	○	○	●		○	○			○					
Lubrication	Oil pan/Oil strainer/Oil pump/Oil filter/Oil gallery	●	○	○	●	●		○	○			○	●				
	Oil level (Low)/Filthy oil	○	○	○	○	○		○	○			○	○				
Cooling	Radiator/Hose/Radiator filler cap	○	○	○	○	○		○	○		●	○					
	Thermostat	○	○	○	○	○	○	●	○	○		●	○		○		
	Water pump	●	○	○	○	○		○	○		●	○					
	Water gallery	○	○	○	○	○		○	○		○	○					
	Cooling fan	○	○	○	○	●	○	●	○	○		○			○		
	Coolant level (low)/Contaminated coolant	○	○	○	○	○		○	○			○					

●; High Possibility Item
○; Low Possibility Item

CONSULT Reference Value in Data Monitor Mode

Remarks:

- Specification data are reference values.
- Specification data are output/input values which are detected or supplied by the ECM at the connector.
- * Specification data may not be directly related to their components signals/values/operations.
- i.e. Adjust ignition timing with a timing light before monitoring IGN TIMING, because the monitor may show the specification data in spite of the ignition timing not being adjusted to the specification data. This IGN TIMING monitors the data calculated by the ECM according to the signals input from the camshaft position sensor and other ignition timing related sensors.
- If the real-time diagnosis results are NG and the on board diagnostic system results are OK when diagnosing the mass air flow sensor, first check to see if the fuel pump control circuit is normal.

MONITOR ITEM	CONDITION	SPECIFICATION
CMPS•RPM (POS)	<ul style="list-style-type: none"> ● Tachometer: Connect ● Run engine and compare tachometer indication with the CONSULT value. 	Almost the same speed as the CONSULT value.
MAS AIR/FL SE	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: Neutral position ● No-load 	Idle 1.3 - 1.7V
		2,500 rpm 1.7 - 2.1V
COOLAN TEMP/S	<ul style="list-style-type: none"> ● Engine: After warming up 	More than 70°C (158°F)
O2 SEN		0 - 0.3V ↔ 0.6 - 1.0V
M/R F/C MNTR	<ul style="list-style-type: none"> ● Engine: After warming up 	Maintaining engine speed at 2,000 rpm LEAN ↔ RICH Changes more than 5 times during 10 seconds.
VHCL SPEED SE	<ul style="list-style-type: none"> ● Turn drive wheels and compare speedometer indication with the CONSULT value 	Almost the same speed as the CONSULT value
BATTERY VOLT	<ul style="list-style-type: none"> ● Ignition switch: ON (Engine stopped) 	11 - 14V
THRTL POS SEN	<ul style="list-style-type: none"> ● Ignition switch: ON (Engine stopped) 	Throttle valve: fully closed 0.35 - 0.65V
		Throttle valve: fully opened Approx. 4.0V
START SIGNAL	<ul style="list-style-type: none"> ● Ignition switch: ON → START → ON 	OFF → ON → OFF
CLSD THL/POSI	<ul style="list-style-type: none"> ● Ignition switch: ON (Engine stopped) 	Throttle valve: Idle position ON
		Throttle valve: Slightly open OFF
AIR COND SIG	<ul style="list-style-type: none"> ● Engine: After warming up, idle the engine 	Air conditioner switch: "OFF" OFF
		Air conditioner switch: "ON" (Compressor operates.) ON
P/N POSI SW	<ul style="list-style-type: none"> ● Ignition switch: ON 	Shift lever: Neutral position ON
		Except above OFF
PW/ST SIGNAL	<ul style="list-style-type: none"> ● Engine: After warming up, idle the engine 	Steering wheel in neutral position (forward direction) OFF
		The steering wheel is turned ON

TROUBLE DIAGNOSIS — General Description

KA

CONSULT Reference Value in Data Monitor Mode (Cont'd)

MONITOR ITEM	CONDITION	SPECIFICATION
INJ PULSE	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: Neutral position ● No-load 	Idle 2,000 rpm
		2.4 - 3.2 msec. 1.9 - 3.2 msec.
IGN TIMING	ditto	Idle 2,000 rpm
		10° BTDC More than 25° BTDC
IACV-AAC/V	ditto	Idle 2,000 rpm
		20 - 40% —
A/F ALPHA	● Engine: After warming up	Maintaining engine speed at 2,000 rpm 65 - 140%
AIR COND RLY	● Air conditioner switch: OFF → ON	OFF → ON
FUEL PUMP RLY	<ul style="list-style-type: none"> ● Ignition switch is turned to ON (Operates for 5 seconds) ● Engine running and cranking ● When engine is stopped (Stops in 1 second) 	ON
	Except as shown above	OFF
SWRL CONT S/V	● Engine is running at a speed of less than 3,600 rpm.	ON
	● Except above	OFF
EGRC SOL/V	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: OFF ● Shift lever: Neutral position ● No-load 	Idle Above 3,800 rpm
		OFF ON


Major Sensor Reference Graph in Data Monitor Mode

The following are the major sensor reference graphs in "DATA MONITOR" mode.
(Select "HI SPEED" in "DATA MONITOR" with CONSULT.)

THRTL POS SEN, CLSD THL/POSI

Below is the data for "THRTL POS SEN" and "CLSD THL/POSI" when depressing the accelerator pedal with the ignition switch "ON".


The signal of "THRTL POS SEN" should rise gradually without any intermittent drop or rise after "CLSD THL/POSI" is changed from "ON" to "OFF".

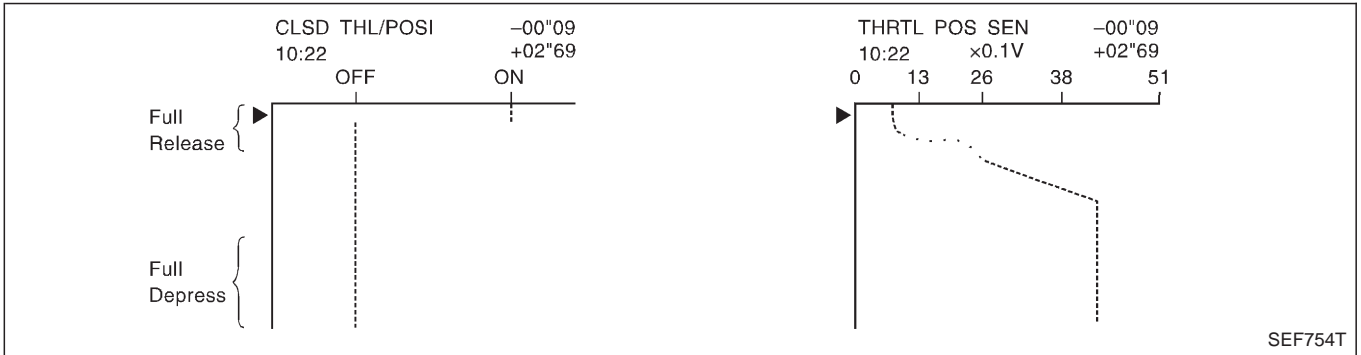

SEF754T


CMPS•RPM (POS), MAS AIR/FL SE, THRTL POS SEN, O2 SEN, INJ PULSE

Below is the data for "CMPSRPM (POS)", "MAS AIR/FL SE", "THRTL POS SEN", "O2 SEN" and "INJ PULSE" when revving engine quickly up to 4,800 rpm under no load after warming up engine sufficiently. Each value is for reference, the exact value may vary.

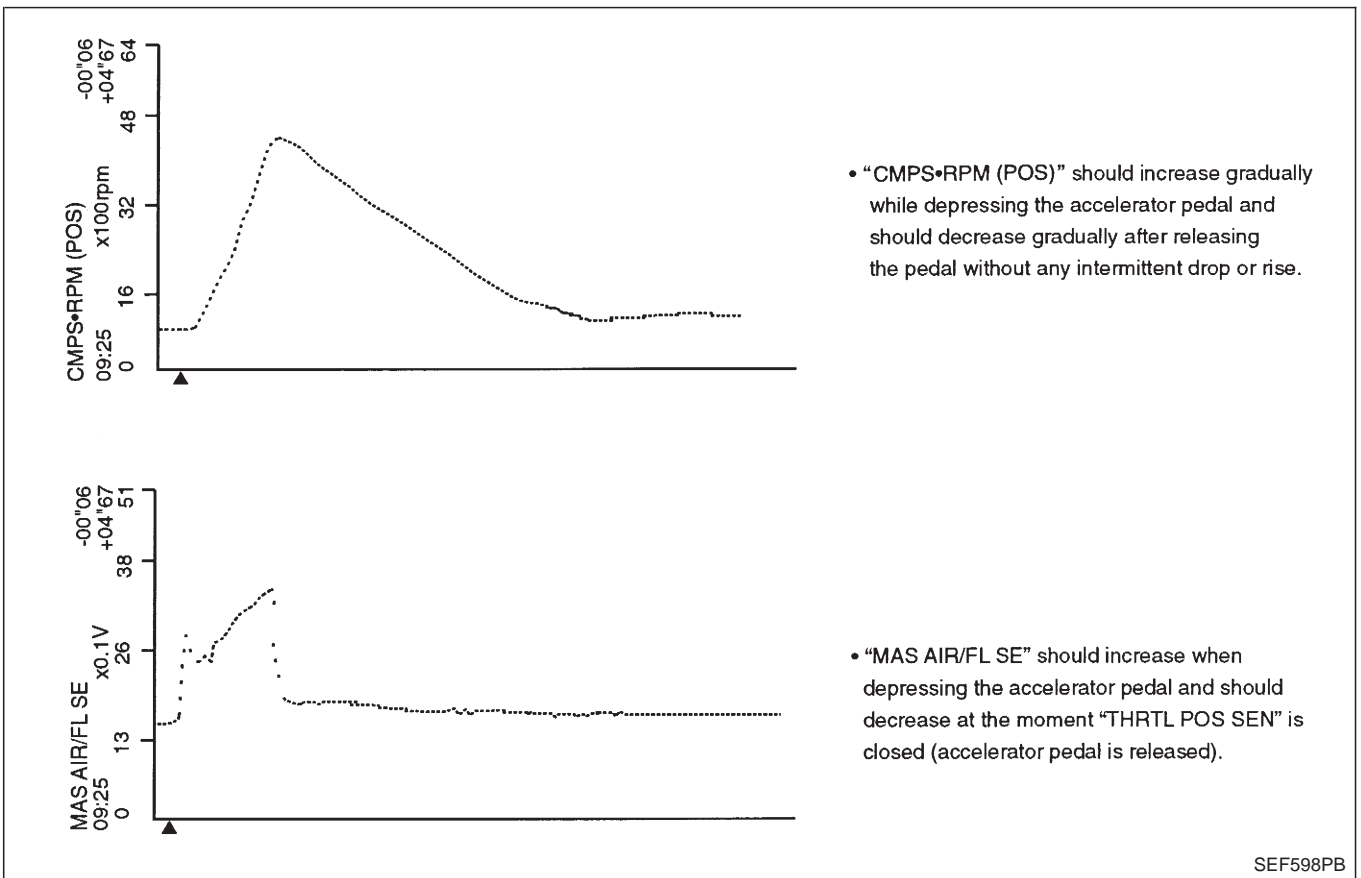


SEF598PB


Major Sensor Reference Graph in Data Monitor Mode (Cont'd)

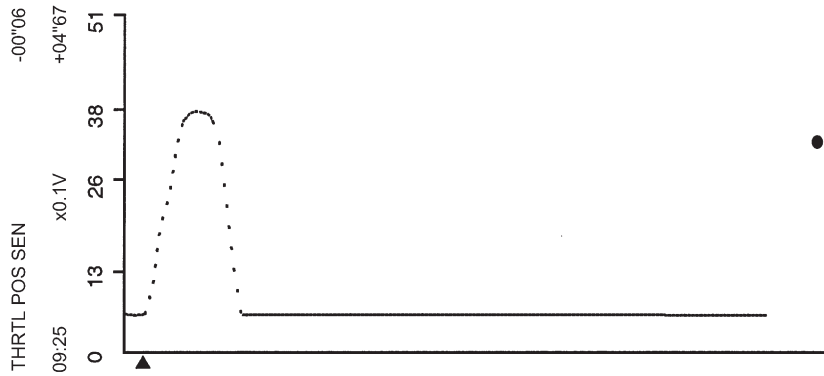

- "THRTL POS SEN" should increase while depressing the accelerator pedal and should decrease while releasing it.



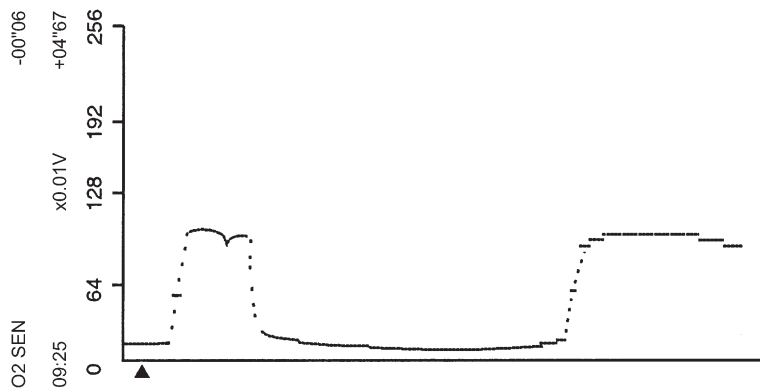


- "O2 SEN" may increase immediately after depressing the accelerator pedal and may decrease after releasing the pedal.

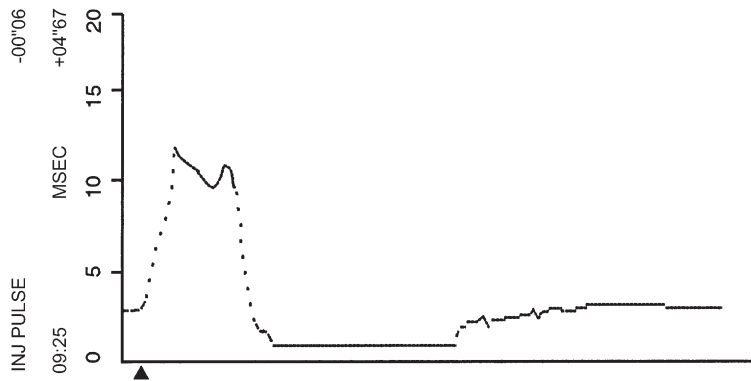

- "INJ PULSE" should increase when depressing the accelerator pedal and should decrease when the pedal is released.

SEF259QA

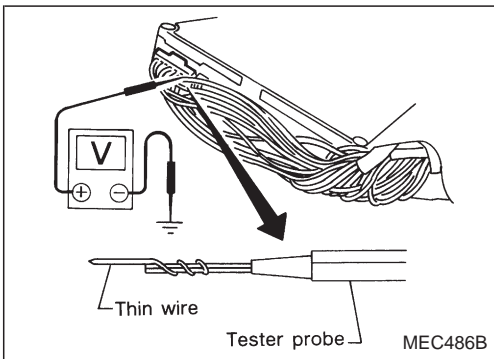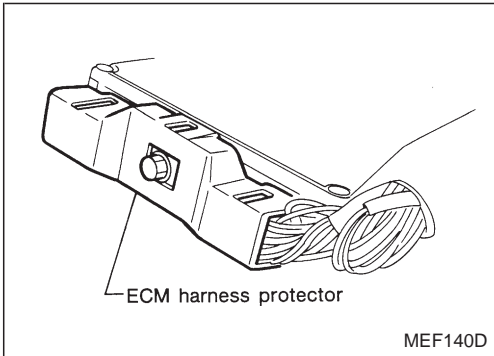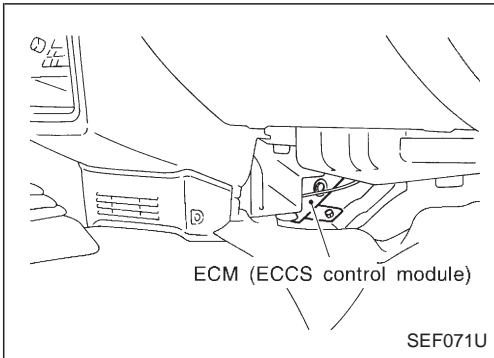

ECM Terminals and Reference Value

PREPARATION

1. ECM is located behind the instrument lower panel.
2. Remove ECM harness protector.
3. Perform all voltage measurements with the connectors connected. Extend tester probe as shown to perform tests easily.

ECM HARNESS CONNECTOR TERMINAL LAYOUT

101	102	103	104	105	106	107	108	1	2	3	4	5	6	7	15	16	17	18	19	20	21	22	31	32	33	34	35	36	37	38	39
109	110	111	112	113	114	115	116	8	9	10	11	12	13	14	23	24	25	26	27	28	29	30	40	41	42	43	44	45	46	47	48

SEF419H

ECM Terminals and Reference Value
(Cont'd)

ECM INSPECTION TABLE





Remarks: Specification data are reference values, and are measured between each terminal and Ⓣ (ECCS ground) with a voltmeter.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
1	W/PU	Ignition signal	<p>Engine is running.</p> <p>└ Idle speed</p>	<p>Approximately 0.3V</p>
			<p>Engine is running.</p> <p>└ Engine speed is 2,000 rpm.</p>	<p>Approximately 0.7V</p>
2	W	Tachometer (Models with tachometer)	<p>Engine is running.</p> <p>└ Idle speed</p>	<p>Approximately 0.7V</p>
			<p>Engine is running.</p> <p>└ Engine speed is 2,000 rpm.</p>	<p>Approximately 1.6V</p>
3	W/G	Ignition check	<p>Engine is running.</p> <p>└ Idle speed</p>	<p>Approximately 13V</p>
			<p>Engine is running.</p> <p>└ Engine speed is 2,000 rpm.</p>	<p>Approximately 13V</p>


ECM Terminals and Reference Value
(Cont'd)

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
4	L/R	ECCS relay (Self-shutoff)	Engine is running. Ignition switch "OFF" └ For a few seconds after turning ignition switch "OFF"	0 - 1V
			Ignition switch "OFF" └ A few seconds passed after turning ignition switch "OFF"	BATTERY VOLTAGE (11 - 14V)
6	B/P	ECCS ground	Engine is running. └ Idle speed	Engine ground
7	W	Data link connector for CONSULT	Engine is running.	Approximately 0.1V
14	Y/R		└ Idle speed	Approximately 3.5V
15	L		└ Connect CONSULT and select DATA MONITOR mode.	Approximately 4 - 6V
23	L			Approximately 0V
11	G/R	Air conditioner relay	Engine is running. └ Both air conditioner switch and blower fan switch are "ON". (Compressor operates.)	Approximately 1V
			Engine is running. └ Air conditioner switch is "OFF".	BATTERY VOLTAGE (11 - 14V)
12	G/Y	Swirl control valve control solenoid valve	Engine is running. └ Idle speed	0 - 1V
			Engine is running. └ Engine speed is above 3,600 rpm.	BATTERY VOLTAGE (11 - 14V)
13	B/P	ECCS ground	Engine is running. └ Idle speed	Engine ground
16	B	Mass air flow sensor	Engine is running. (Warm-up condition) └ Idle speed	1.3 - 1.7V
			Engine is running. (Warm-up condition) └ Engine speed is 2,500 rpm.	1.7 - 2.1V
17	W	Mass air flow sensor ground	Engine is running. (Warm-up condition) └ Idle speed	0.005 - 0.02V
18	LG/R	Engine coolant temperature sensor	Engine is running.	Approximately 0 - 4.8V Output voltage varies with engine coolant temperature.
19	W	Heated oxygen sensor	Engine is running. └ After warming up sufficiently and engine speed is 2,000 rpm	0 - Approximately 1.0V (periodically change)
20	LG	Throttle position sensor	Ignition switch "ON" (Warm-up condition) └ Accelerator pedal released	0.35 - 0.65V
			Ignition switch "ON" └ Accelerator pedal fully depressed	Approximately 4V
21 29	B/G B/G	Sensors' ground	Engine is running. (Warm-up condition) └ Idle speed	0.001 - 0.02V

ECM Terminals and Reference Value
(Cont'd)

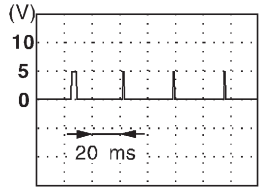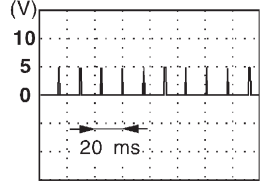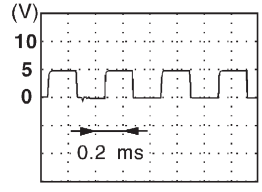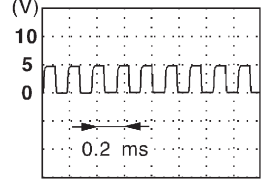TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
22 30	W	Camshaft position sensor (REF) (180° signal)	<p>Engine is running. (Warm-up condition)</p> <p>└ Idle speed</p>	<p>Approximately 0.4V</p>  <p>SEF064U</p>
			<p>Engine is running. (Warm-up condition)</p> <p>└ Engine speed is 2,000 rpm.</p>	<p>Approximately 0.4V</p>  <p>SEF065U</p>
24	R/W	Malfunction indicator lamp	<p>Ignition switch "ON"</p>	Approximately 1.5V
			<p>Engine is running.</p> <p>└ Idle speed</p>	BATTERY VOLTAGE (11 - 14V)
26	Y/L	Intake air temperature sensor	Engine is running.	Approximately 0 - 4.8V Output voltage varies with intake air temperature.
31 40	B	Camshaft position sensor (POS) (1° signal)	<p>Engine is running. (Warm-up condition)</p> <p>└ Idle speed</p>	<p>Approximately 2.5V</p>  <p>SEF066U</p>
			<p>Engine is running. (Warm-up condition)</p> <p>└ Engine speed is 2,000 rpm.</p>	<p>Approximately 2.5V</p>  <p>SEF067U</p>

ECM Terminals and Reference Value
(Cont'd)

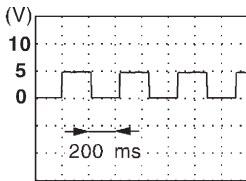TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
32	W/L	Vehicle speed sensor	Ignition switch "ON" └ Jack up all wheels and run engine at idle in 1st position.	Varies from 0 to 5V 
				SEF068U
34	B/Y	Start signal	Ignition switch "ON"	Approximately 0V
			Ignition switch "START"	BATTERY VOLTAGE (11 - 14V)
35	L/B	Neutral position switch	Ignition switch "ON" └ Neutral position	0V
			Ignition switch "ON" └ Except the above gear position	Approximately 5V
36	B/L	Ignition switch	Ignition switch "OFF"	0V
			Ignition switch "ON"	BATTERY VOLTAGE (11 - 14V)
37	PU	Throttle position sensor power supply	Ignition switch "ON"	Approximately 5V
38 47	B/W	Power supply for ECM	Ignition switch "ON"	BATTERY VOLTAGE (11 - 14V)
39	B	ECCS ground	Engine is running. └ Idle speed	Engine ground
41	Y	Air conditioner switch	Engine is running. └ Both air conditioner switch and blower fan switch are "ON". (Compressor operates.)	Approximately 0V
			Engine is running. └ Air conditioner switch is "OFF".	BATTERY VOLTAGE (11 - 14V)
43	G	Power steering oil pressure switch	Engine is running. └ Steering wheel is being turned.	0V
			Engine is running. └ Steering wheel is not being turned.	Approximately 5V
46	GY/L	Power supply (Back-up)	Ignition switch "OFF"	BATTERY VOLTAGE (11 - 14V)
48	B	ECCS ground	Engine is running. └ Idle speed	Engine ground

ECM Terminals and Reference Value
(Cont'd)

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
101 103 110 112	W/B W/R W/L W/G	Injector No. 1 Injector No. 3 Injector No. 2 Injector No. 4	<p>Engine is running. (Warm-up condition)</p> <p>└ Idle speed</p>	<p>BATTERY VOLTAGE (11 - 14V)</p> <p>SEF069U</p>
			<p>Engine is running.</p> <p>└ Engine speed is 2,000 rpm.</p>	<p>BATTERY VOLTAGE (11 - 14V)</p> <p>SEF070U</p>
104	W/R	Fuel pump relay	<p>Ignition switch "ON"</p> <p>└ For 5 seconds after turning ignition switch "ON"</p> <p>Engine is running.</p>	Approximately 1V
			<p>Ignition switch "ON"</p> <p>└ 5 seconds after turning ignition switch "ON"</p>	BATTERY VOLTAGE (11 - 14V)
105	W/L	EVAP canister purge control solenoid valve	<p>Engine is running. (Warm-up condition)</p> <p>└ Idle speed</p>	BATTERY VOLTAGE (11 - 14V)
			<p>Engine is running. (Warm-up condition)</p> <p>└ Engine is above 3,800 rpm.</p>	Approximately 1V
107 108	B/P	ECCS ground	<p>Engine is running.</p> <p>└ Idle speed</p>	Engine ground
109	B/W	Current return	<p>Engine is running.</p> <p>└ Idle speed</p>	BATTERY VOLTAGE (11 - 14V)
113	W/G	IACV-AAC valve	<p>Engine is running.</p> <p>└ Idle speed</p>	10 - 13V
			<p>Engine is running.</p> <p>└ Steering wheel is being turned.</p> <p>└ Air conditioner is operating.</p> <p>└ Rear window defogger switch is "ON".</p> <p>└ Lighting switch is "ON".</p>	5 - 10V
114	R	Heated oxygen sensor heater	<p>Engine is running.</p> <p>└ Engine speed is below 3,200 rpm.</p>	Approximately 0V
			<p>Engine is running.</p> <p>└ Engine speed is above 3,200 rpm.</p>	BATTERY VOLTAGE (11 - 14V)

TROUBLE DIAGNOSIS — General Description

KA

ECM Terminals and Reference Value (Cont'd)

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
116	B/P	ECCS ground	Engine is running. └ Idle speed	Engine ground

Main Power Supply and Ground Circuit

ECM TERMINALS AND REFERENCE VALUE



Remarks: Specification data are reference values, and are measured between each terminal and ③ (ECCS ground) with a voltmeter.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
4	L/R	ECCS relay (Self-shutoff)	Engine is running. Ignition switch "OFF" └ For a few seconds after turning ignition switch "OFF"	0 - 1V
			Ignition switch "OFF" └ A few seconds passed after turning ignition switch "OFF"	BATTERY VOLTAGE (11 - 14V)
36	B/L	Ignition switch	Ignition switch "OFF"	0V
			Ignition switch "ON"	BATTERY VOLTAGE (11 - 14V)
38 47	B/W	Power supply for ECM	Ignition switch "ON"	BATTERY VOLTAGE (11 - 14V)
46	GY/L	Power supply (Back-up)	Ignition switch "OFF"	BATTERY VOLTAGE (11 - 14V)
109	B/W	Current return	Engine is running. └ Idle speed	BATTERY VOLTAGE (11 - 14V)

Main Power Supply and Ground Circuit
(Cont'd)


LHD MODELS

EC-MAIN-01

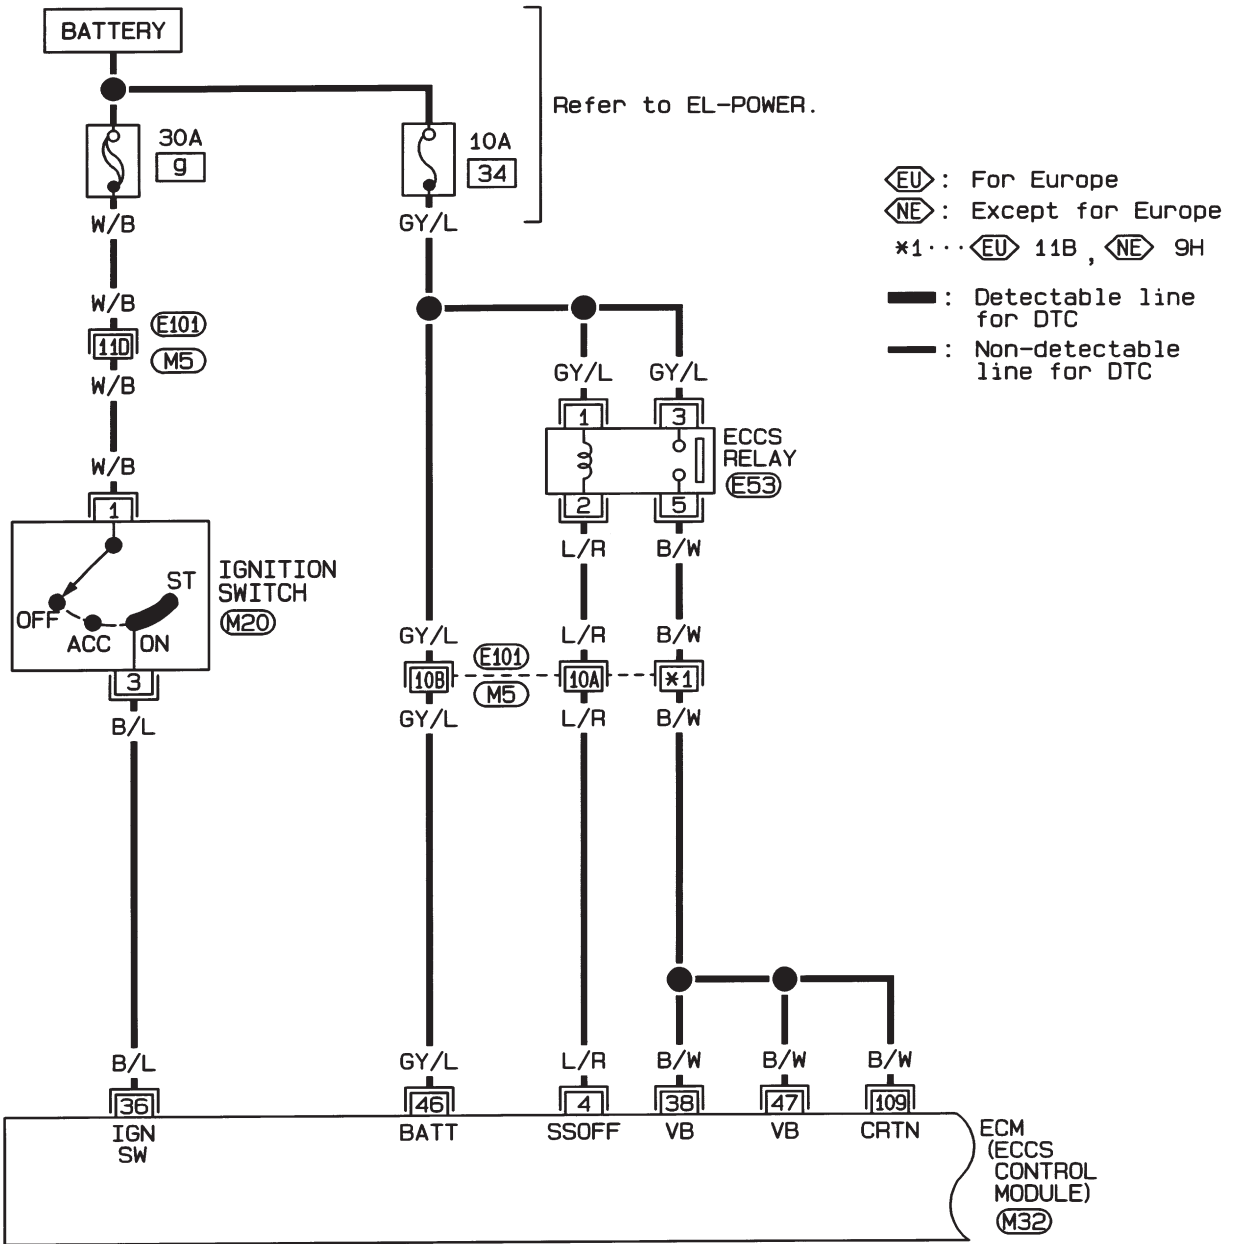

Refer to last page (Foldout page).

(M5), (E101)





(M32)
W



Main Power Supply and Ground Circuit
(Cont'd)

EC-MAIN-02



— : Detectable line for DTC
 - - - : Non-detectable line for DTC

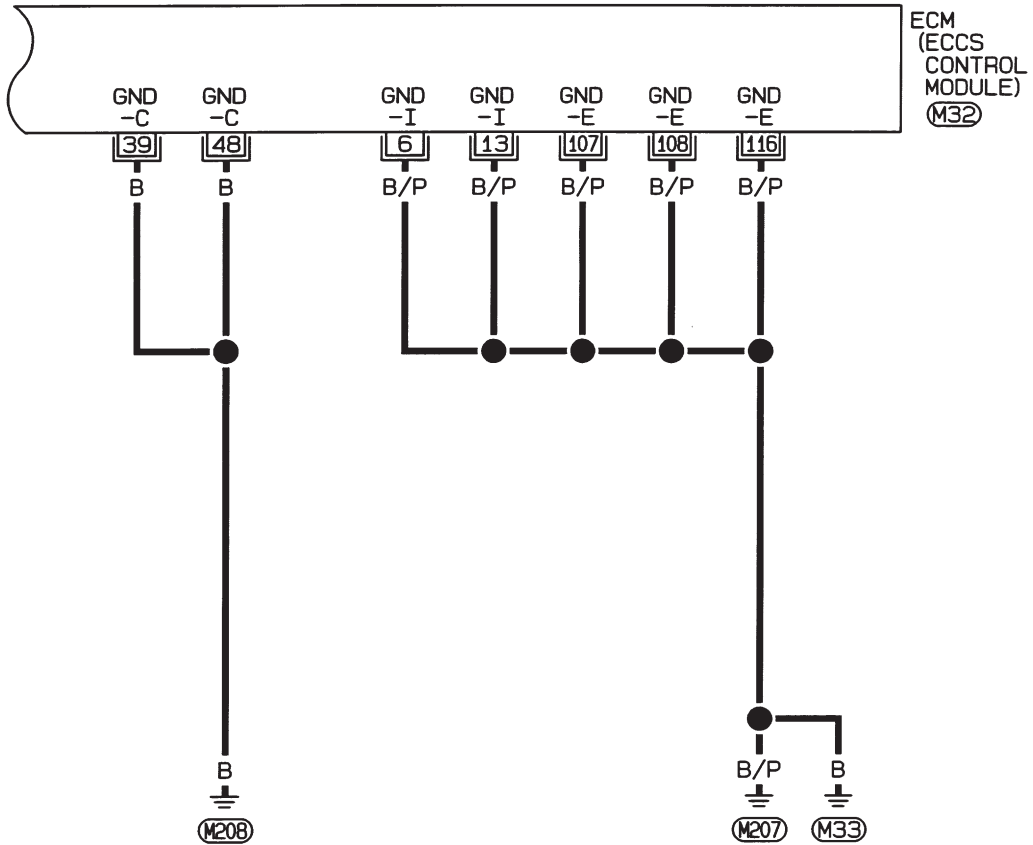

Main Power Supply and Ground Circuit
(Cont'd)

RHD MODELS

EC-MAIN-03

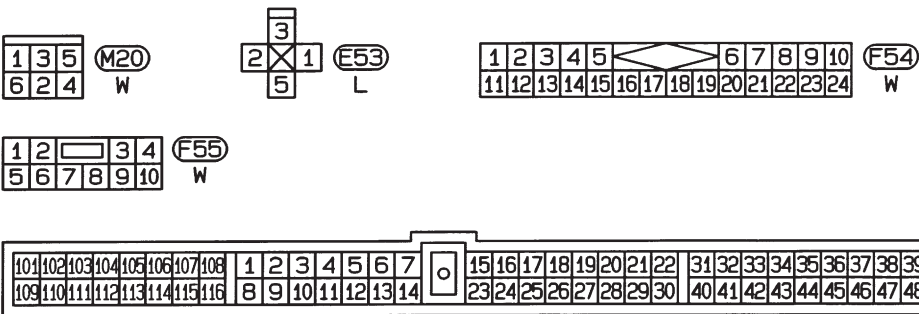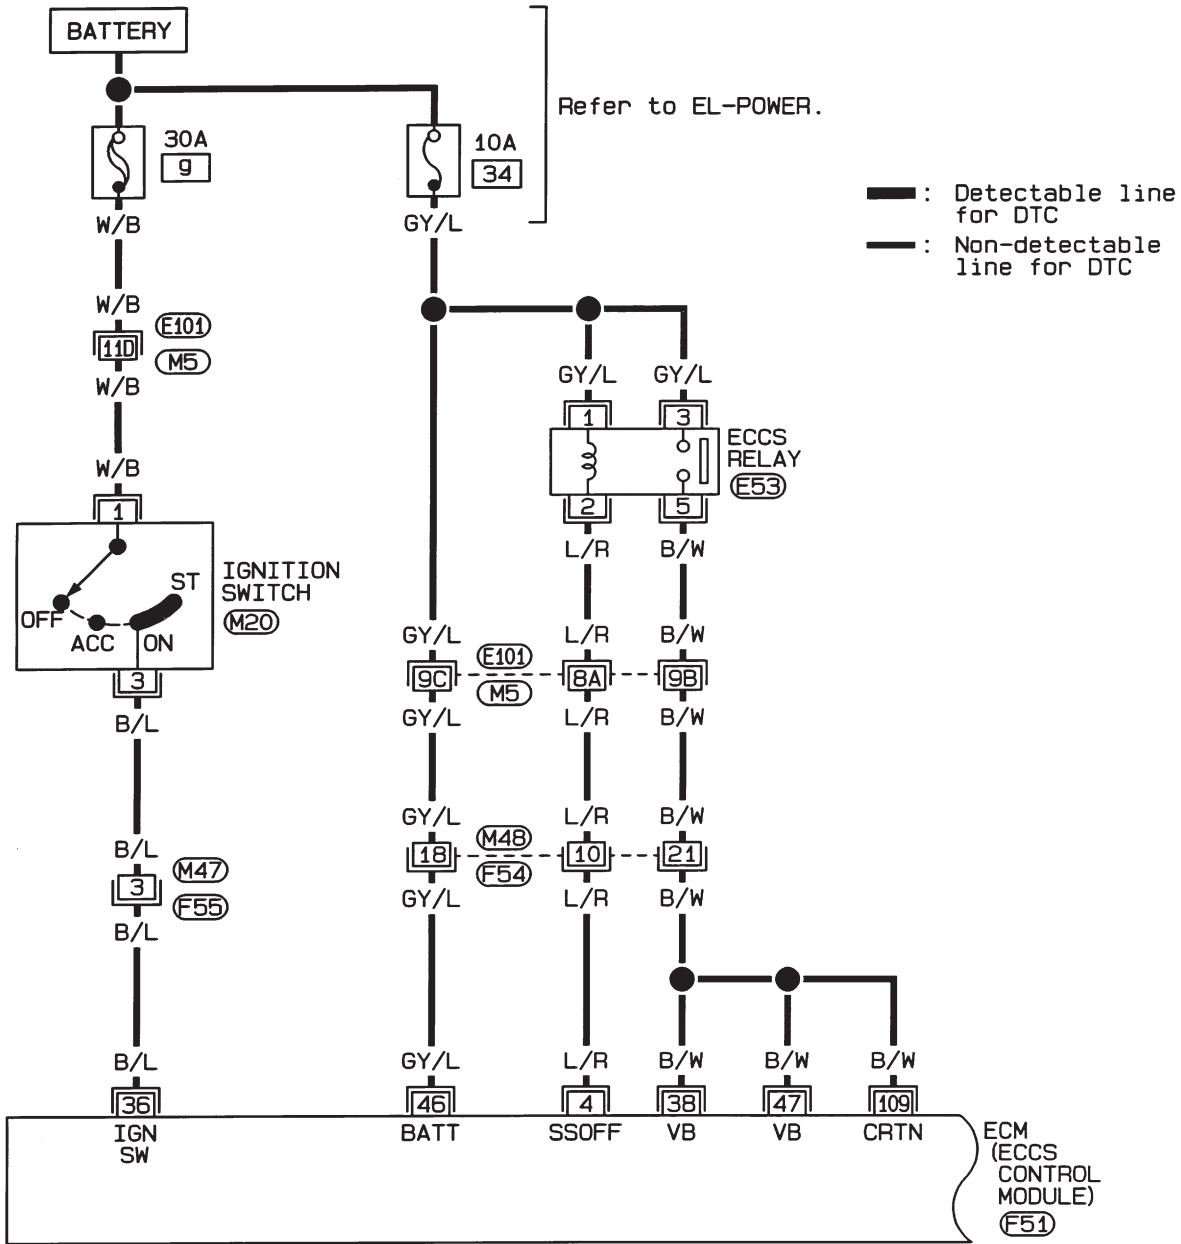

Refer to last page (Foldout page).


(M5), (E101)



Main Power Supply and Ground Circuit
(Cont'd)

EC-MAIN-04

— : Detectable line for DTC
 - - - : Non-detectable line for DTC





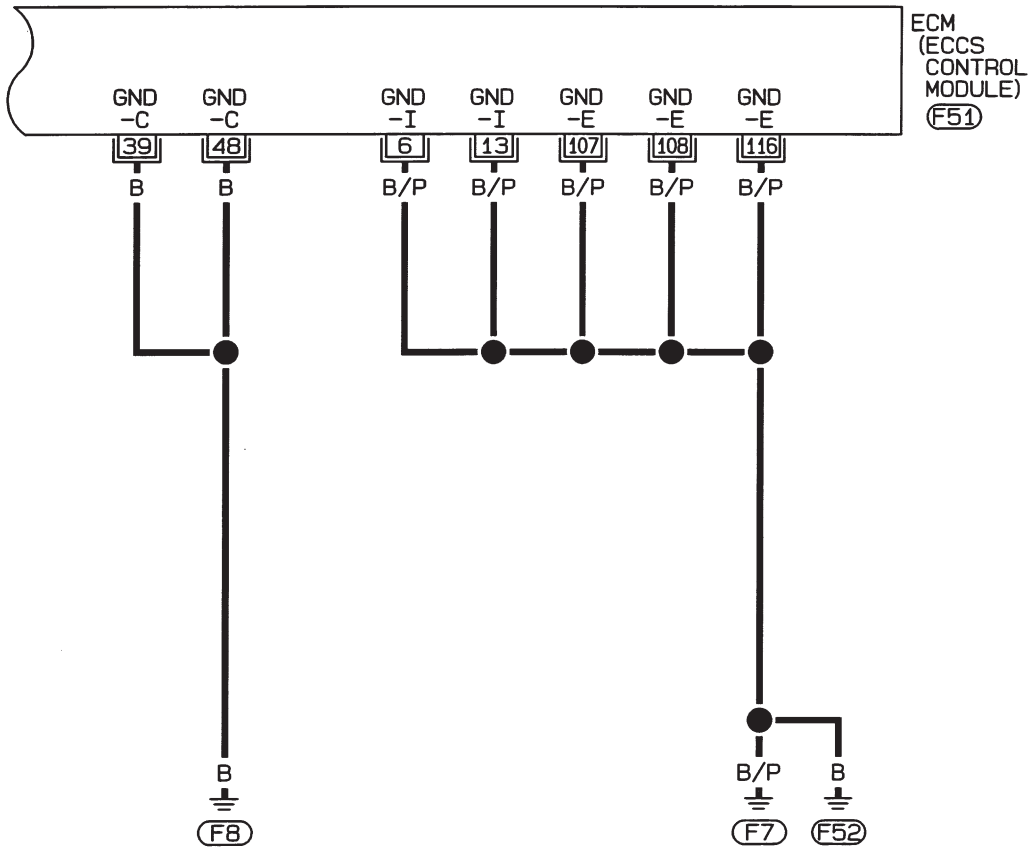


101	102	103	104	105	106	107	108	1	2	3	4	5	6	7	8	15	16	17	18	19	20	21	22	31	32	33	34	35	36	37	38	39
109	110	111	112	113	114	115	116	8	9	10	11	12	13	14	23	24	25	26	27	28	29	30	40	41	42	43	44	45	46	47	48	


(F51)
W



Main Power Supply and Ground Circuit (Cont'd)

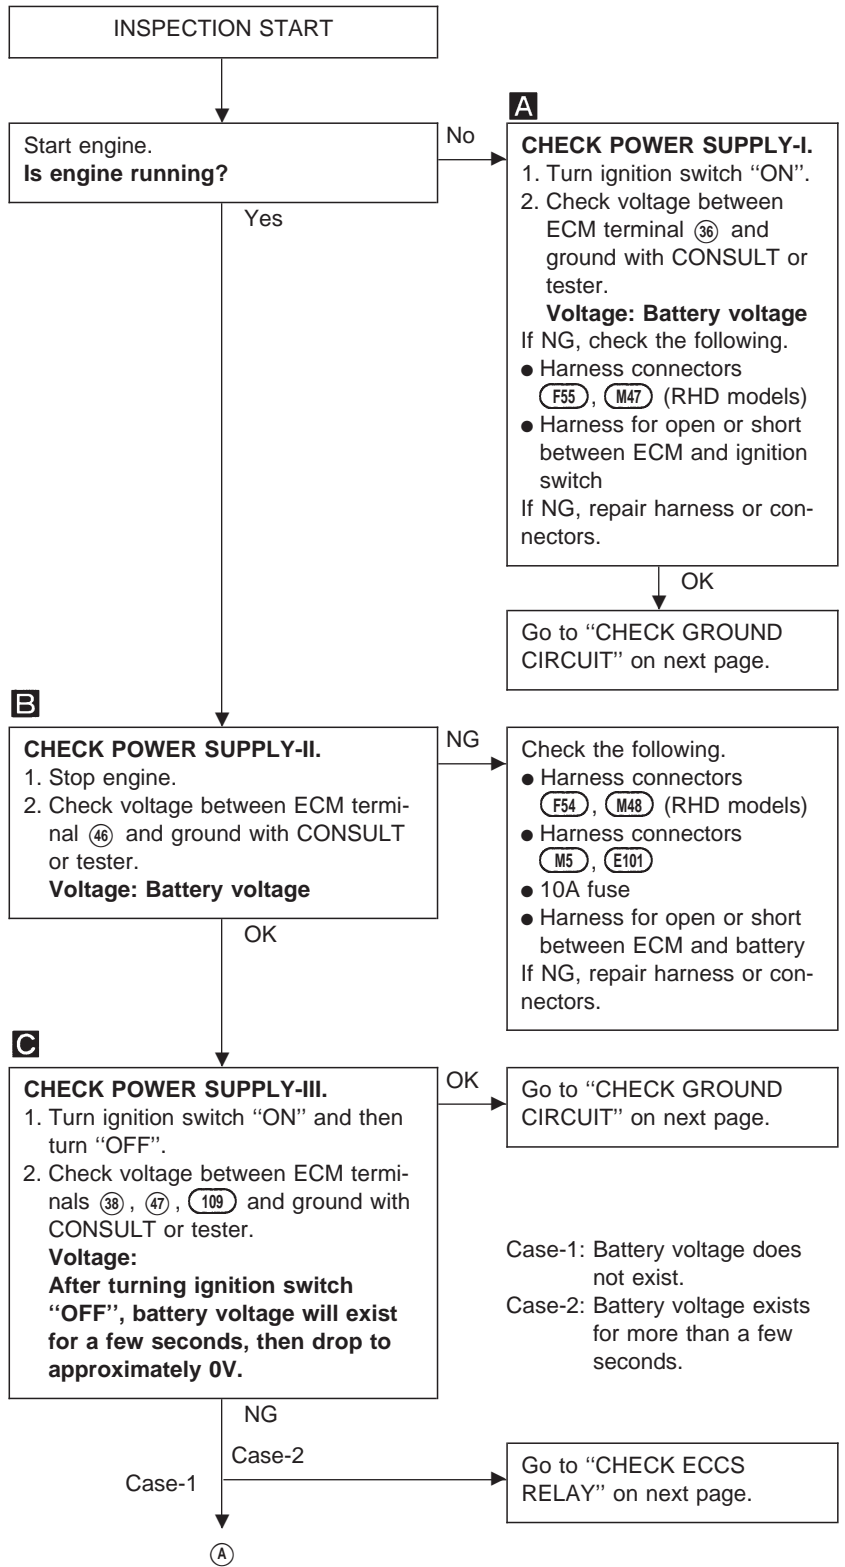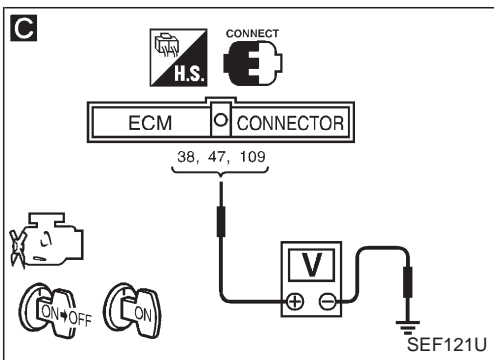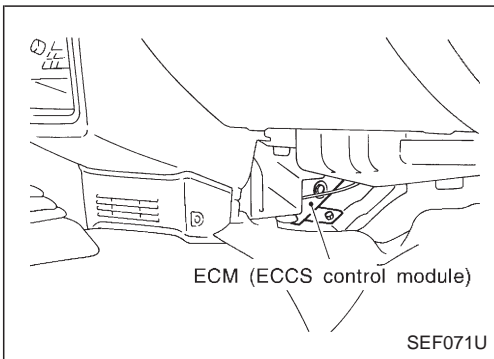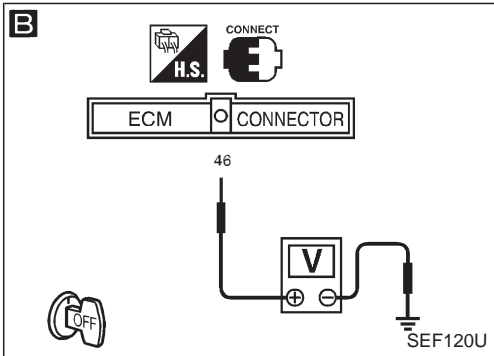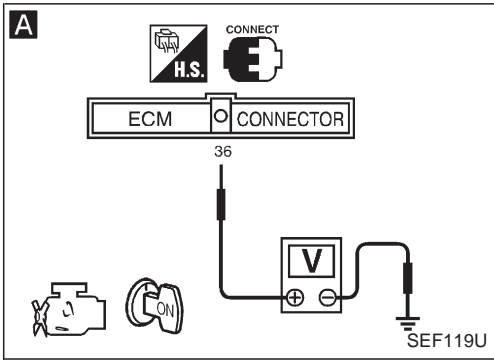

Main Power Supply and Ground Circuit (Cont'd)

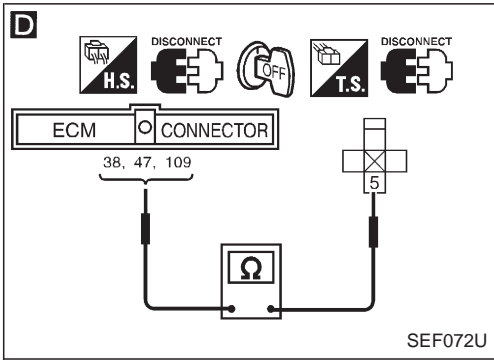

D


CHECK HARNESS CONTINUITY BETWEEN ECSS RELAY AND ECM.

1. Disconnect ECM harness connector.
2. Disconnect ECSS relay.
3. Check harness continuity between ECM terminals (38), (47), (109) and terminal (5).
Continuity should exist.
If OK, check harness for short to ground and short to power.

NG → Check the following.

- Harness connectors (F54), (M48) (RHD models)
- Harness connectors (M5), (E101)
- Harness for open or short between ECM and ECSS relay

If NG, repair open circuit, short to ground or short to power in harness or connectors.

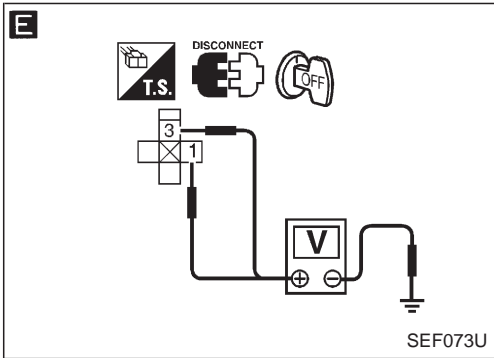

E


CHECK VOLTAGE BETWEEN ECSS RELAY AND GROUND.

Check voltage between terminals (1), (3) and ground with CONSULT or tester.
Voltage: Battery voltage

NG → Check the following.

- Harness for open or short between ECSS relay and fuse

If NG, repair harness or connectors.

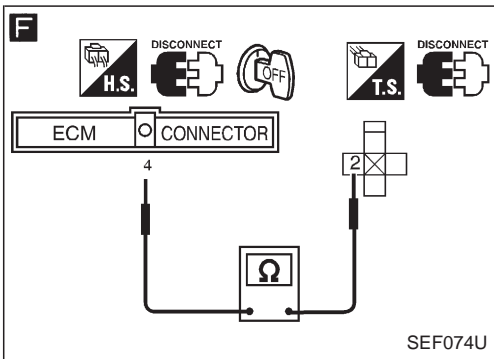

F


CHECK OUTPUT SIGNAL CIRCUIT.

Check harness continuity between ECM terminal (4) and relay terminal (2).
Continuity should exist.
If OK, check harness for short to ground and short to power.

NG → Check the following.

- Harness connectors (F54), (M48) (RHD models)
- Harness connectors (M5), (E101)
- Harness for open or short between ECM and ECSS relay

If NG, repair open circuit, short to ground or short to power in harness or connectors.

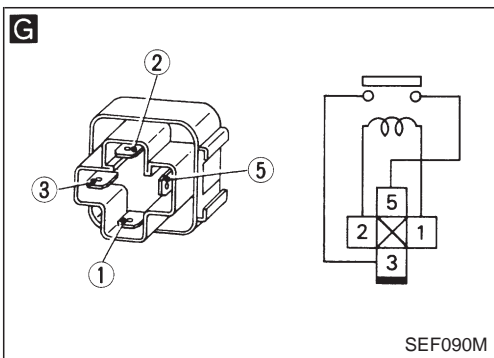


G

CHECK ECSS RELAY.

1. Apply 12V direct current between relay terminals (1) and (2).
2. Check continuity between relay terminals (3) and (5).
12V (1 - 2) applied:
Continuity exists.
No voltage applied:
No continuity

NG → Replace ECSS relay.

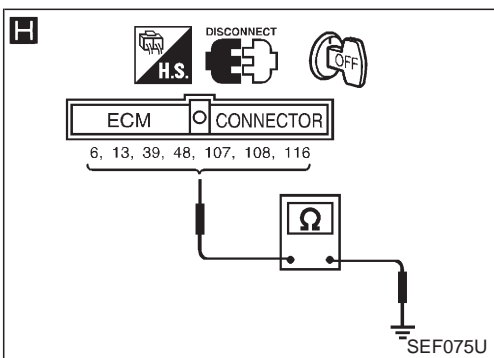

H



CHECK GROUND CIRCUIT.

1. Turn ignition switch "OFF".
2. Loosen and retighten engine ground screws.
3. Disconnect ECM harness connector.
4. Check harness continuity between ECM terminals (6), (13), (39), (48), (107), (108), (116) and engine ground.
Continuity should exist.
If OK, check harness for short to ground and short to power.

NG → Repair open circuit, short to ground or short to power in harness or connectors.

Check ECM pin terminals for damage and check the connection of ECM harness connector.

INSPECTION END

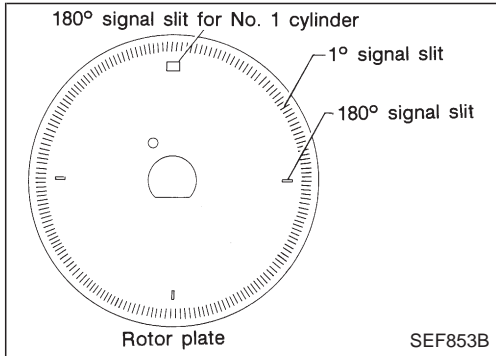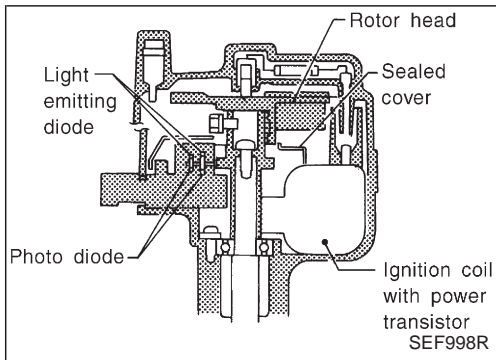

Camshaft Position Sensor (CMPS)

COMPONENT DESCRIPTION

The camshaft position sensor is a basic component of the ECCS. It monitors engine speed and piston position. These input signals to the ECM are used to control fuel injection, ignition timing and other functions.

The camshaft position sensor has a rotor plate and a wave-forming circuit. The rotor plate has 360 slits for a 1° signal and 4 slits for a 180° signal. The wave-forming circuit consists of Light Emitting Diodes (LED) and photo diodes.

The rotor plate is positioned between the LED and the photo diode. The LED transmits light to the photo diode. As the rotor plate turns, the slits cut the light to generate rough-shaped pulses. These pulses are converted into on-off signals by the wave-forming circuit and sent to the ECM.

The distributor is not repairable and must be replaced as an assembly, except distributor cap.





TROUBLE DIAGNOSIS FOR "CAMSHAFT POSI SEN" (DTC 11)

KA

Camshaft Position Sensor (CMPS) (Cont'd)

ECM TERMINALS AND REFERENCE VALUE

Remarks: Specification data are reference values, and are measured between each terminal and Ⓒ³⁹ (ECCS ground) with a voltmeter.

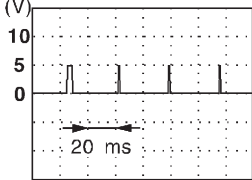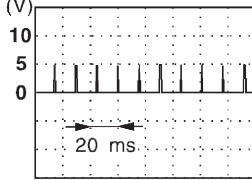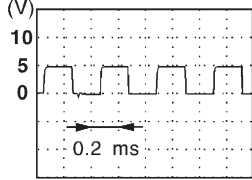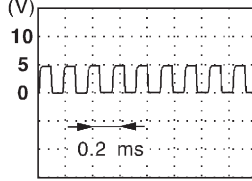
TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
22 30	W	Camshaft position sensor (REF) (180° signal)	<div style="border: 1px solid black; padding: 2px; display: inline-block;">Engine is running.</div> (Warm-up condition) ↳ Idle speed	Approximately 0.4V 
	W		<div style="border: 1px solid black; padding: 2px; display: inline-block;">Engine is running.</div> (Warm-up condition) ↳ Engine speed is 2,000 rpm.	Approximately 0.4V 
31 40	B	Camshaft position sensor (POS) (1° signal)	<div style="border: 1px solid black; padding: 2px; display: inline-block;">Engine is running.</div> (Warm-up condition) ↳ Idle speed	Approximately 2.5V 
	B		<div style="border: 1px solid black; padding: 2px; display: inline-block;">Engine is running.</div> (Warm-up condition) ↳ Engine speed is 2,000 rpm.	Approximately 2.5V 

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when	Check Items (Possible Cause)

Camshaft Position Sensor (CMPS) (Cont'd)

11	<ul style="list-style-type: none"> ● Either 1° or 180° signal is not sent to ECM for the first few seconds during engine cranking. ● Either 1° or 180° signal is not sent to ECM during engine running. ● Either 1° or 180° signal is not in the normal pattern during engine running. 	<ul style="list-style-type: none"> ● Harness or connectors (The camshaft position sensor circuit is open or shorted.) ● Camshaft position sensor ● Starter motor (Refer to EL section.) ● Starting system circuit (Refer to EL section.) ● Dead (Weak) battery
----	---	---

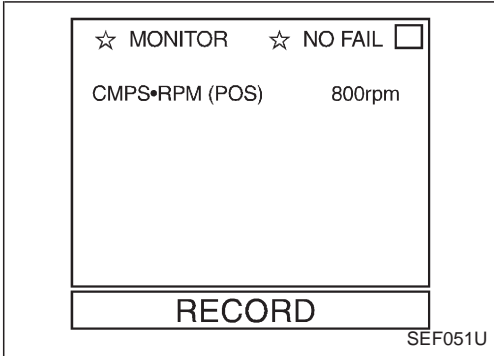

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

Before performing the following procedure, confirm that battery voltage is more than 10V.

- 1) Turn ignition switch “ON” and select “DATA MONITOR” mode with CONSULT.
- 2) Start engine and run it for at least 2 seconds at idle speed.
(If engine does not run, turn ignition switch to “START” for at least 2 seconds.)




OR

- 1) Start engine and run it for at least 2 seconds at idle speed.
(If engine does not run, turn ignition switch to “START” for at least 2 seconds.)
- 2) Turn ignition switch “OFF”, wait at least 5 seconds and then turn “ON”.
- 3) Perform “Diagnostic Test Mode II (Self-diagnostic results)” with ECM.

Camshaft Position Sensor (CMPS) (Cont'd)

LHD MODELS

EC-CMPS-01

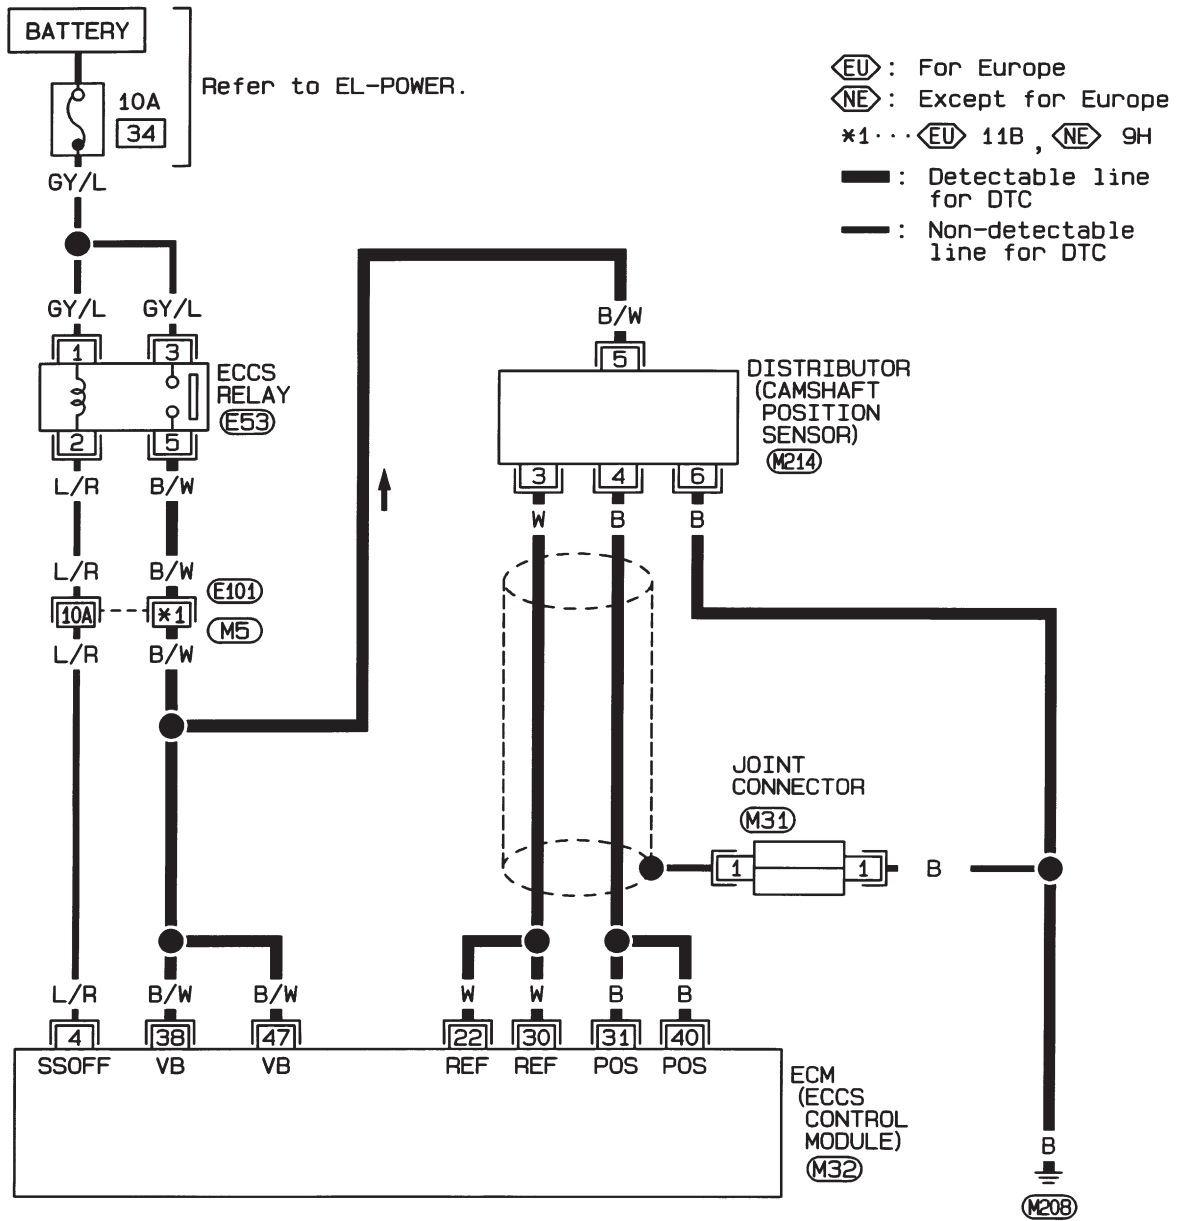

Refer to last page (Foldout page).

M5, E101

101	102	103	104	105	106	107	108	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	31	32	33	34	35	36	37	38	39	
109	110	111	112	113	114	115	116	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	40	41	42	43	44	45	46	47	48





M32
W



Camshaft Position Sensor (CMPS) (Cont'd)

RHD MODELS

EC-CMPS-02

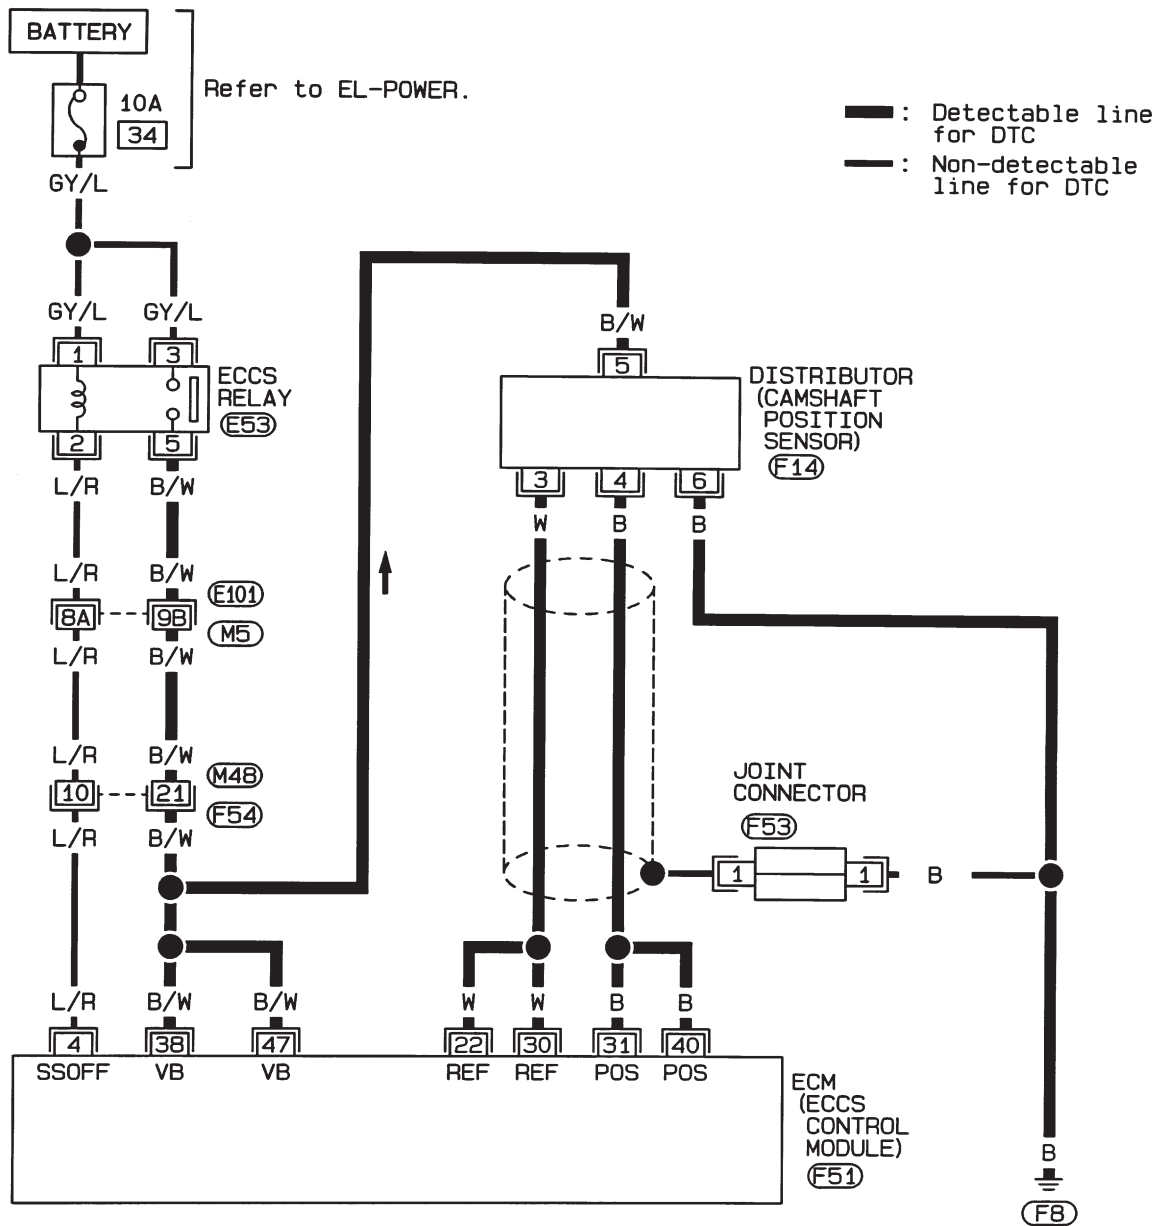





Refer to last page (Foldout page).

(M5), (E101)

(F51)
W



**Camshaft Position Sensor (CMPS) (Cont'd)
DIAGNOSTIC PROCEDURE**

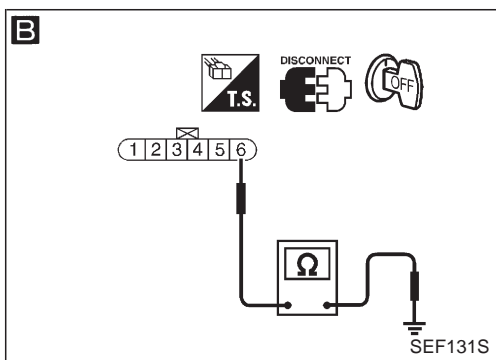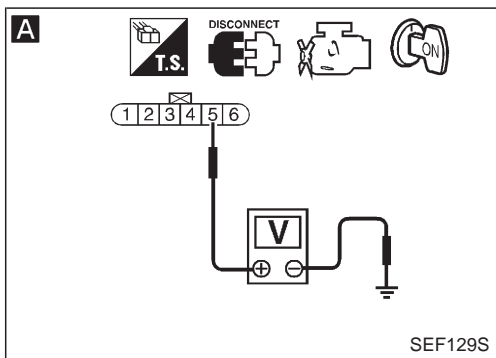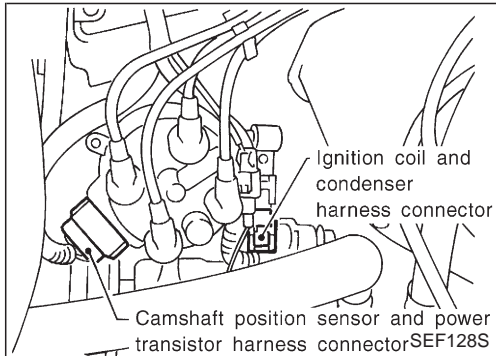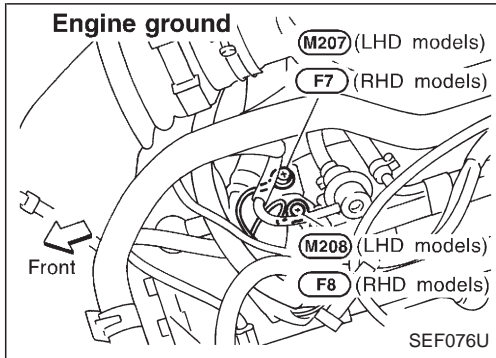

INSPECTION START

CHECK STARTING SYSTEM.
Does the engine turn over?
(Does the starter motor operate?)

No → Check starting system.
(Refer to EL section.)

CHECK SHIELD CIRCUIT.
1. Turn ignition switch "OFF".
2. Loosen and retighten engine ground screws.
3. Remove joint connector (M31) or (F53).
4. Check the following.
● Continuity between joint connector terminal ① and ground
● Joint connector (Refer to "HARNESS LAYOUT" in EL section.)
Continuity should exist.
If OK, check harness for short to ground and short to power. Then reconnect joint connector.

NG → Repair open circuit, short to ground or short to power in harness or connectors.

CHECK POWER SUPPLY.
1. Disconnect camshaft position sensor harness connector.
2. Turn ignition switch "ON".
3. Check voltage between terminal ⑤ and ground with CONSULT or tester.
Voltage: Battery voltage


NG → Check the following.
● Harness connectors (M5), (E101)
● Harness connectors (F54), (M48) (RHD models)
● Harness for open or short between camshaft position sensor and ECM
● Harness for open or short between camshaft position sensor and ECCS relay
If NG, repair harness or connectors.

CHECK GROUND CIRCUIT.
1. Disconnect camshaft position sensor harness connector.
2. Check harness continuity between terminal ⑥ and engine ground.
Continuity should exist.
If OK, check harness for short.

NG → Repair open circuit, short to ground or short to power in harness or connectors.

OK → A

Camshaft Position Sensor (CMPS) (Cont'd)

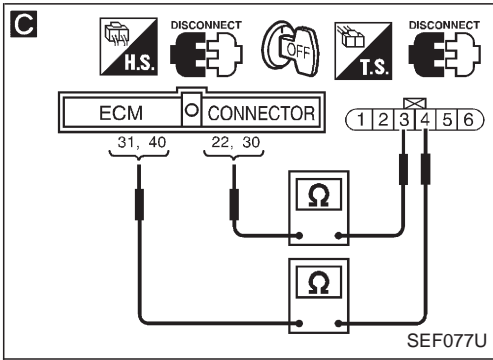

C

CHECK INPUT SIGNAL CIRCUIT.
 1. Turn ignition switch "OFF".
 2. Disconnect ECM harness connector.
 3. Check harness continuity between terminal ④ and ECM terminals ③①, ④① (1° signal), terminal ③ and ECM terminals ②②, ③① (180° signal).
Continuity should exist.
 If OK, check harness for short to ground and short to power.

NG → Repair open circuit, short to ground or short to power in harness or connectors.

OK →

CHECK COMPONENT
 (Camshaft position sensor).
 Refer to "COMPONENT INSPECTION" below.

NG → Replace camshaft position sensor.


OK →

Disconnect and reconnect harness connectors in the circuit. Then retest.

Trouble is not fixed.

Check ECM pin terminals for damage and check the connection of ECM harness connector. Reconnect ECM harness connector and retest.

INSPECTION END

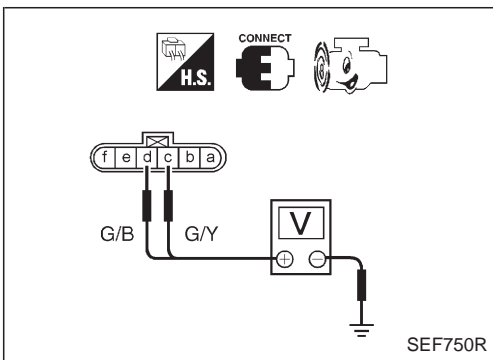

COMPONENT INSPECTION


Camshaft position sensor


1. Start engine.
2. Check voltage between terminals ③, ④ and ground with DC range.

Condition	Terminals	Voltage
Engine running at idle	③ and ground	Approximately 0.4V*
	④ and ground	Approximately 2.5V*

*: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

- If NG, replace distributor assembly with camshaft position sensor.
3. Visually check signal plate for damage or dust.

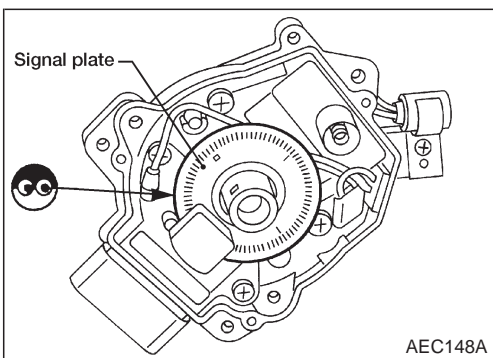

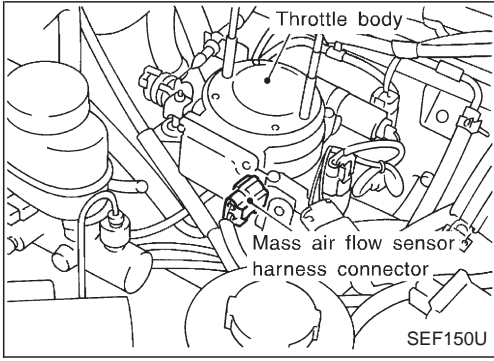

Mass Air Flow Sensor (MAFS)

COMPONENT DESCRIPTION

The mass air flow sensor is placed in the stream of intake air. It measures the intake flow rate by measuring a part of the entire intake flow. It consists of a hot wire that is supplied with electric current from the ECM. The temperature of the hot wire is controlled by the ECM a certain amount. The heat generated by the hot wire is reduced as the intake air flows around it. The more air, the greater the heat loss.

Therefore, the ECM must supply more electric current to the hot wire as air flow increases. This maintains the temperature of the hot wire. The ECM detects the air flow by means of this current change.

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Remarks: Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
MAS AIR/FL SE	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: “OFF” ● Shift lever: Neutral position ● No-load Idle	1.3 - 1.7V
	2,500 rpm	1.7 - 2.1V

ECM TERMINALS AND REFERENCE VALUE

Remarks: Specification data are reference values, and are measured between each terminal and Ⓣ (ECCS ground) with a voltmeter.

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
16	B	Mass air flow sensor	Engine is running. (Warm-up condition) └ Idle speed	1.3 - 1.7V
			Engine is running. (Warm-up condition) └ Engine speed is 2,500 rpm.	1.7 - 2.1V
17	W	Mass air flow sensor ground	Engine is running. (Warm-up condition) └ Idle speed	0.005 - 0.02V

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
12	<ul style="list-style-type: none"> ● An excessively high or low voltage from the sensor is sent to ECM.* 	<ul style="list-style-type: none"> ● Harness or connectors (The sensor circuit is open or shorted.) ● Mass air flow sensor

*: When this malfunction is detected, the ECM enters fail-safe mode.

Engine operating condition in fail-safe mode	Engine speed will not rise more than 2,400 rpm due to the fuel cut.
--	---

**Mass Air Flow Sensor (MAFS) (Cont'd)
DIAGNOSTIC TROUBLE CODE CONFIRMATION
PROCEDURE**

☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>
CMPS•RPM (POS)	800rpm	
MAS AIR FL/SE	1.5V	
RECORD		

SEF078U



- 1) Turn ignition switch "ON", and wait at least 6 seconds.
- 2) Select "DATA MONITOR" mode with CONSULT.
- 3) Start engine and wait at least 3 seconds.

OR





- 1) Turn ignition switch "ON", and wait at least 6 seconds.
- 2) Start engine and wait at least 3 seconds.
- 3) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 4) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

Mass Air Flow Sensor (MAFS) (Cont'd)

LHD MODELS

EC-MAFS-01

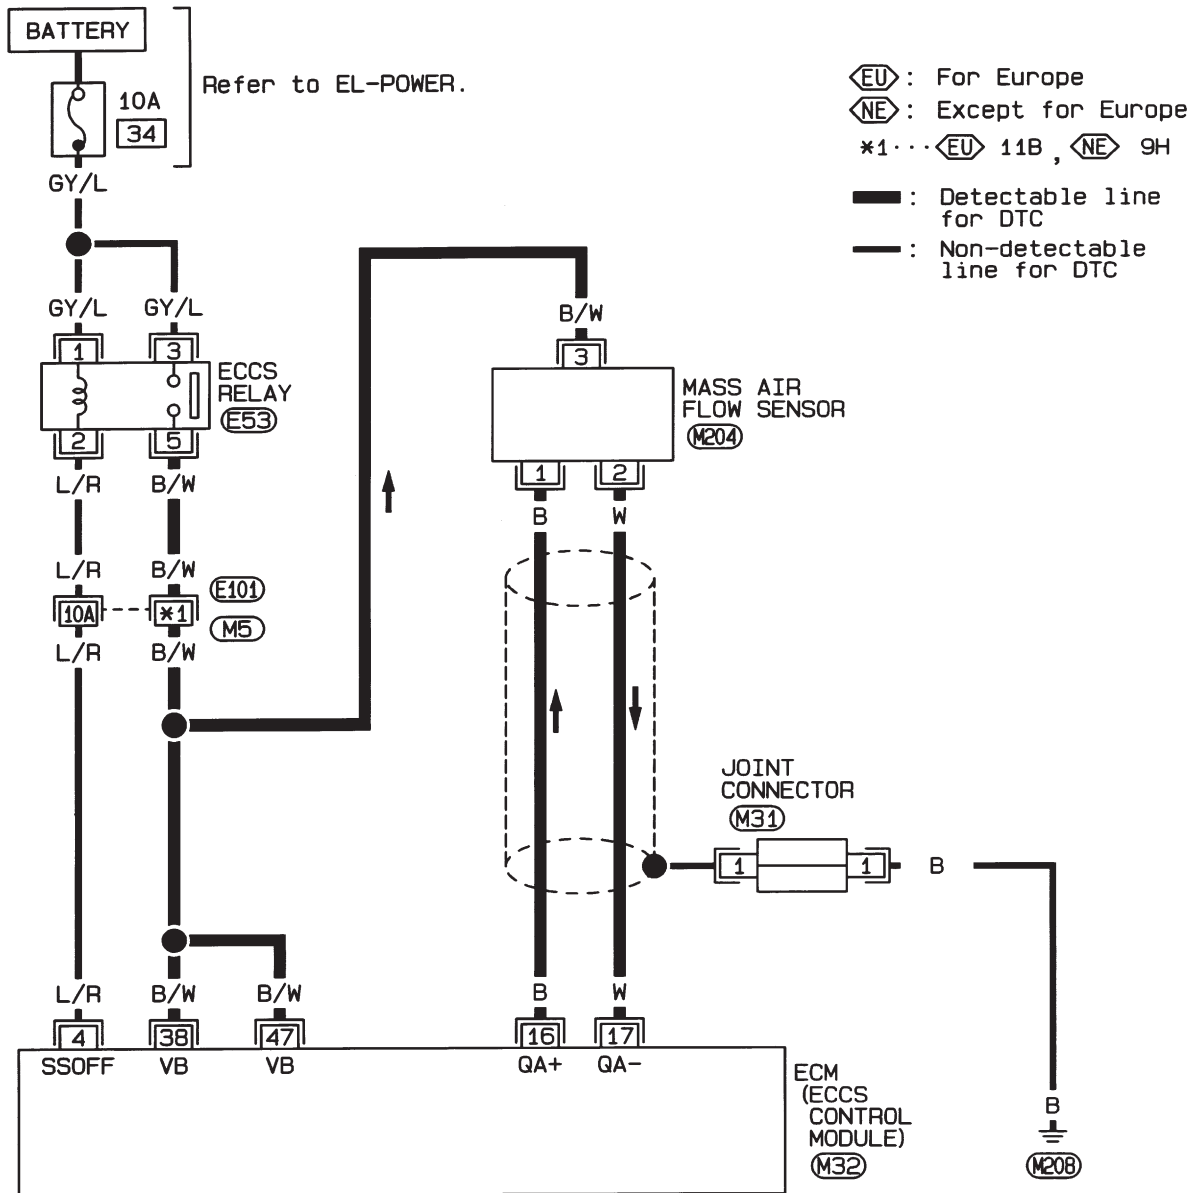

Refer to last page (Foldout page).

M5, E101

101	102	103	104	105	106	107	108	1	2	3	4	5	6	7	8	15	16	17	18	19	20	21	22	31	32	33	34	35	36	37	38	39
109	110	111	112	113	114	115	116	8	9	10	11	12	13	14	14	23	24	25	26	27	28	29	30	40	41	42	43	44	45	46	47	48





M32
W



Mass Air Flow Sensor (MAFS) (Cont'd)

RHD MODELS






EC-MAFS-02

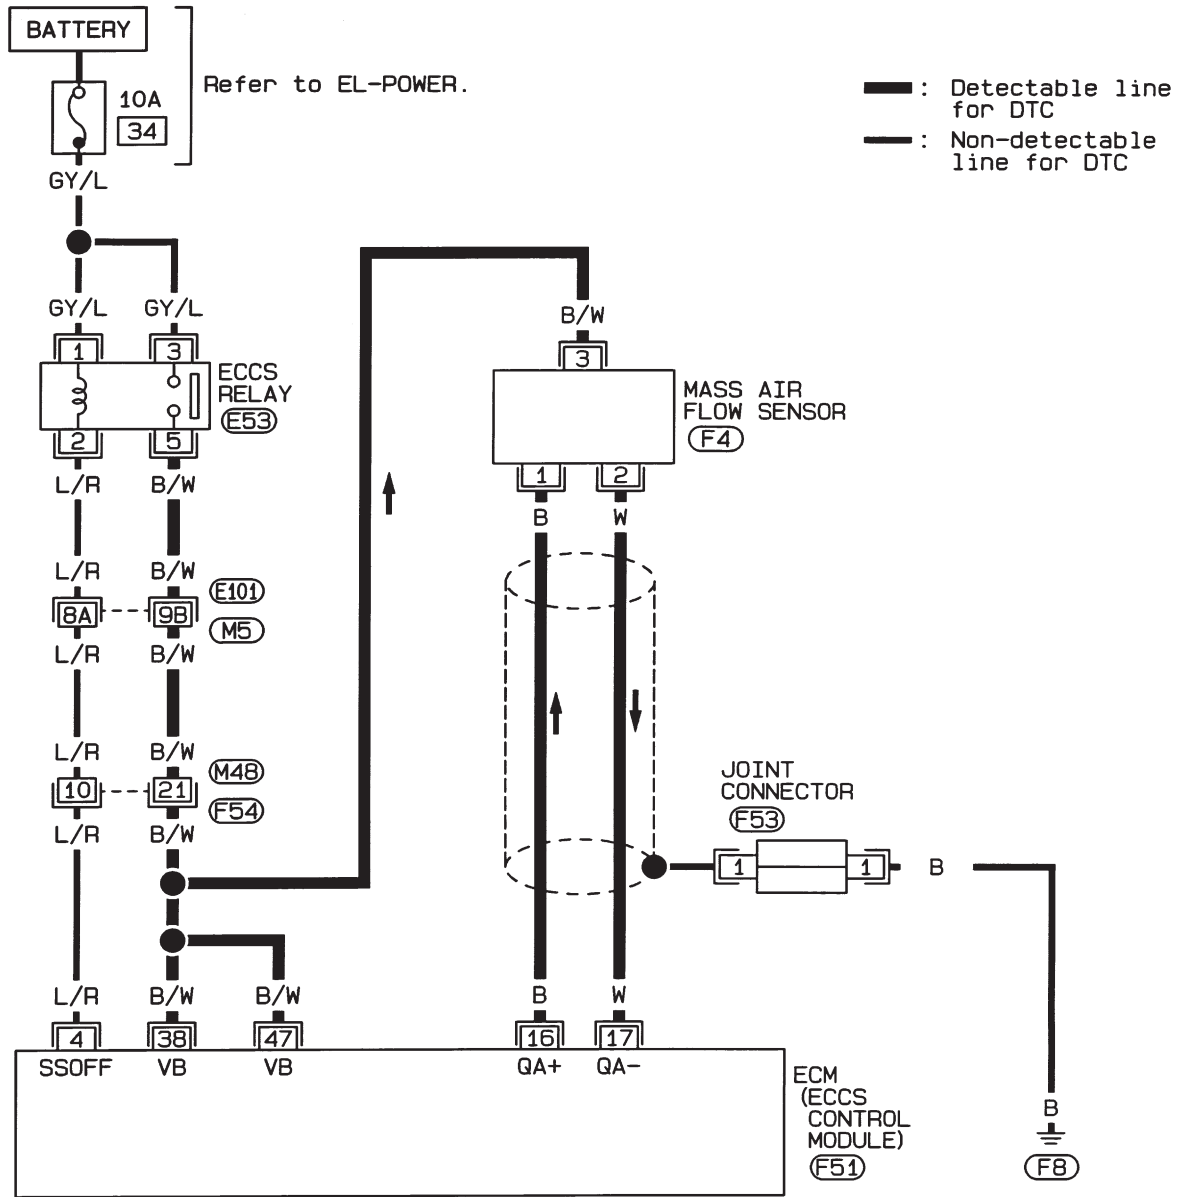

Refer to last page (Foldout page).

M5, E101

Mass Air Flow Sensor (MAFS) (Cont'd)
DIAGNOSTIC PROCEDURE

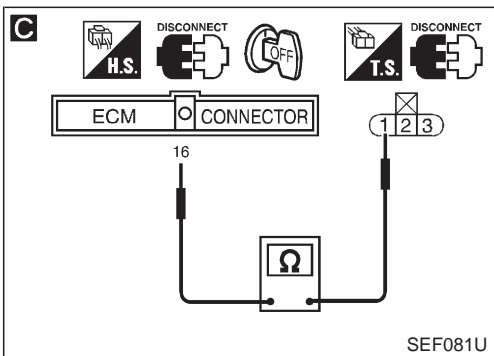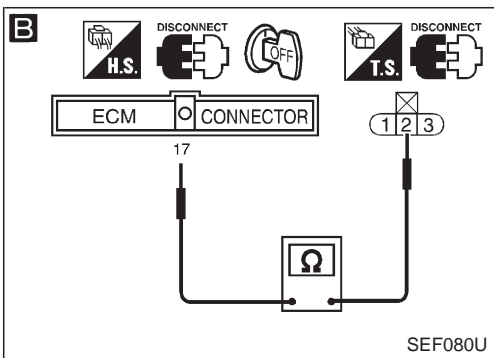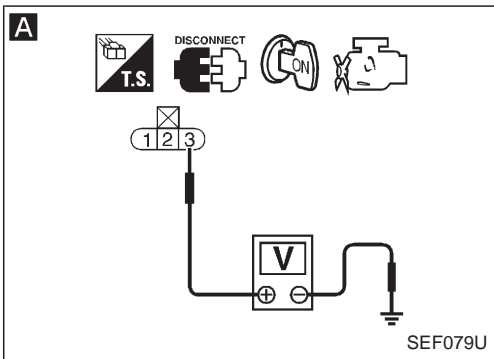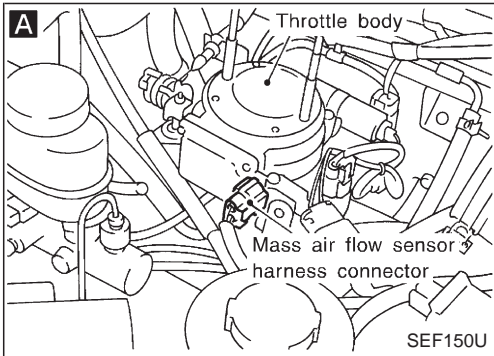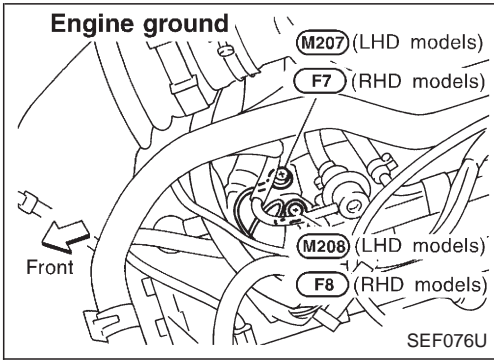

INSPECTION START

CHECK SHIELD CIRCUIT.

1. Turn ignition switch "OFF".
2. Loosen and retighten engine ground screws.
3. Remove joint connector (M31) or (F53).
4. Check the following.

- Continuity between joint connector terminal ① and ground
- Joint connector (Refer to "HARNESS LAYOUT" in EL section.)

Continuity should exist.

If OK, check harness for short to ground and short to power. Then reconnect joint connector.

NG

Repair open circuit, short to ground or short to power in harness or connectors.

OK

A

CHECK POWER SUPPLY.

1. Disconnect mass air flow sensor harness connector.
2. Turn ignition switch "ON".
3. Check voltage between terminal ③ and ground with CONSULT or tester.

Voltage: Battery voltage

NG

Check the following.

- Harness connectors (M5), (E101)
- Harness connectors (F54), (M48) (RHD models)
- Harness for open or short between mass air flow sensor and ECM
- Harness for open or short between mass air flow sensor and ECCS relay

If NG, repair harness or connectors.

OK

B

CHECK GROUND CIRCUIT.

1. Turn ignition switch "OFF".
2. Disconnect ECM harness connector.
3. Check harness continuity between terminal ② and ECM terminal ⑰.

Continuity should exist.

If OK, check harness for short to ground and short to power.

NG

Repair open circuit, short to ground or short to power in harness or connectors.

OK

C

CHECK INPUT SIGNAL CIRCUIT.

Check harness continuity between terminal ① and ECM terminal ⑱.

Continuity should exist.

If OK, check harness for short to ground and short to power.




NG

Repair open circuit, short to ground or short to power in harness or connectors.

OK

Ⓐ

Mass Air Flow Sensor (MAFS) (Cont'd)

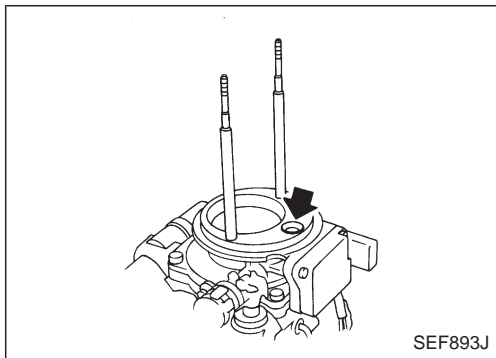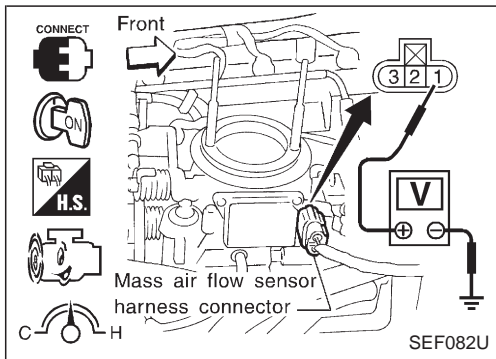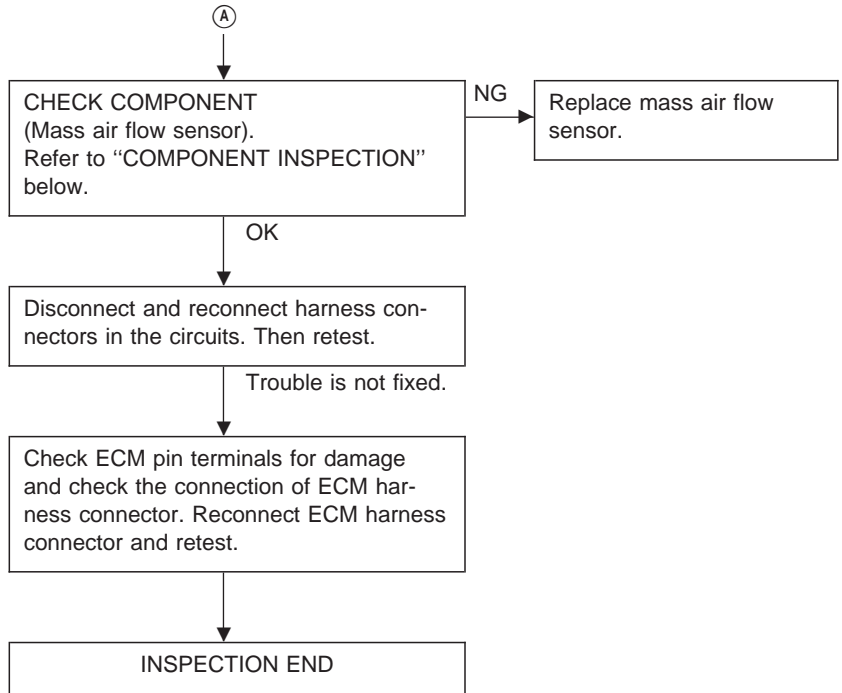

COMPONENT INSPECTION


Mass air flow sensor

1. Turn ignition switch “ON”.
2. Start engine and warm it up sufficiently.
3. Check voltage between terminal ① and ground.

Conditions	Voltage V
Ignition switch “ON” (Engine stopped.)	Less than 1.0
Idle (Engine is warmed-up sufficiently.)	1.3 - 1.7
2,500 rpm	1.7 - 2.1
Idle to about 4,000 rpm*	1.3 - 1.7 to Approx. 4.0

*: Check for linear voltage rise in response to increase to about 4,000 rpm in engine speed.


4. If NG, remove mass air flow sensor from air duct. Check hot wire for damage or dust.

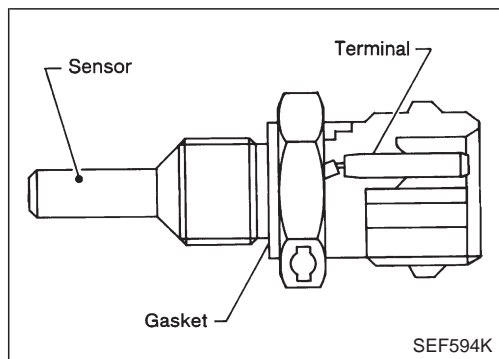

Engine Coolant Temperature Sensor (ECTS)

COMPONENT DESCRIPTION

The engine coolant temperature sensor is used to detect the engine coolant temperature. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the engine coolant temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

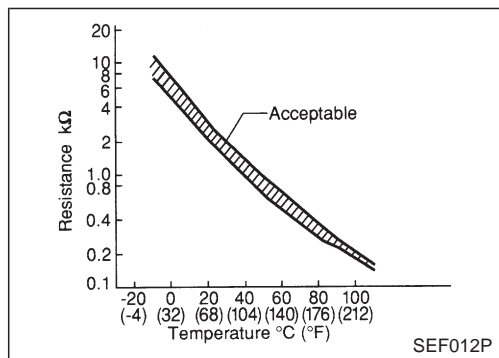

<Reference data>

Engine coolant temperature °C (°F)	Voltage* (V)	Resistance (kΩ)
-10 (14)	4.4	7.0 - 11.4
20 (68)	3.5	2.1 - 2.9
50 (122)	2.2	0.68 - 1.00
90 (194)	1.0	0.236 - 0.260


*: These data are reference values and are measured between ECM terminal ⑱ (Engine coolant temperature sensor) and ECM terminal ⑳ (ECCS ground).

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
13	<ul style="list-style-type: none"> An excessively high or low voltage from the sensor is sent to ECM.* 	<ul style="list-style-type: none"> Harness or connectors (The sensor circuit is open or shorted.) Engine coolant temperature sensor

*: When this malfunction is detected, the ECM enters fail-safe mode.

Engine operating condition in fail-safe mode	Condition	Engine coolant temperature decided (CONSULT DISPLAY)
Engine coolant temperature will be determined by ECM based on the time after turning ignition switch “ON” or “START”. CONSULT displays the engine coolant temperature decided by ECM.	Just as ignition switch is turned ON or START	20°C (68°F)
	More than 6 minutes after ignition START	80°C (176°F)
	Except as shown above	20 - 80°C (68 - 176°F) (Depends on the time)


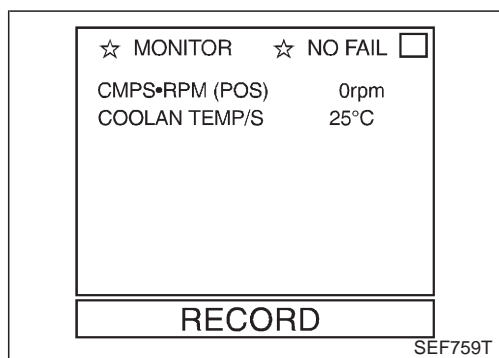


DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

- 1) Turn ignition switch “ON”.
 - 2) Select “DATA MONITOR” mode with CONSULT.
 - 3) Wait at least 5 seconds.
- OR
- 1) Turn ignition switch “ON” and wait at least 5 seconds.
 - 2) Turn ignition switch “OFF”, wait at least 5 seconds and then turn “ON”.
 - 3) Perform “Diagnostic Test Mode II (Self-diagnostic results)” with ECM.




Engine Coolant Temperature Sensor (ECTS)
(Cont'd)

EC-ECTS-01

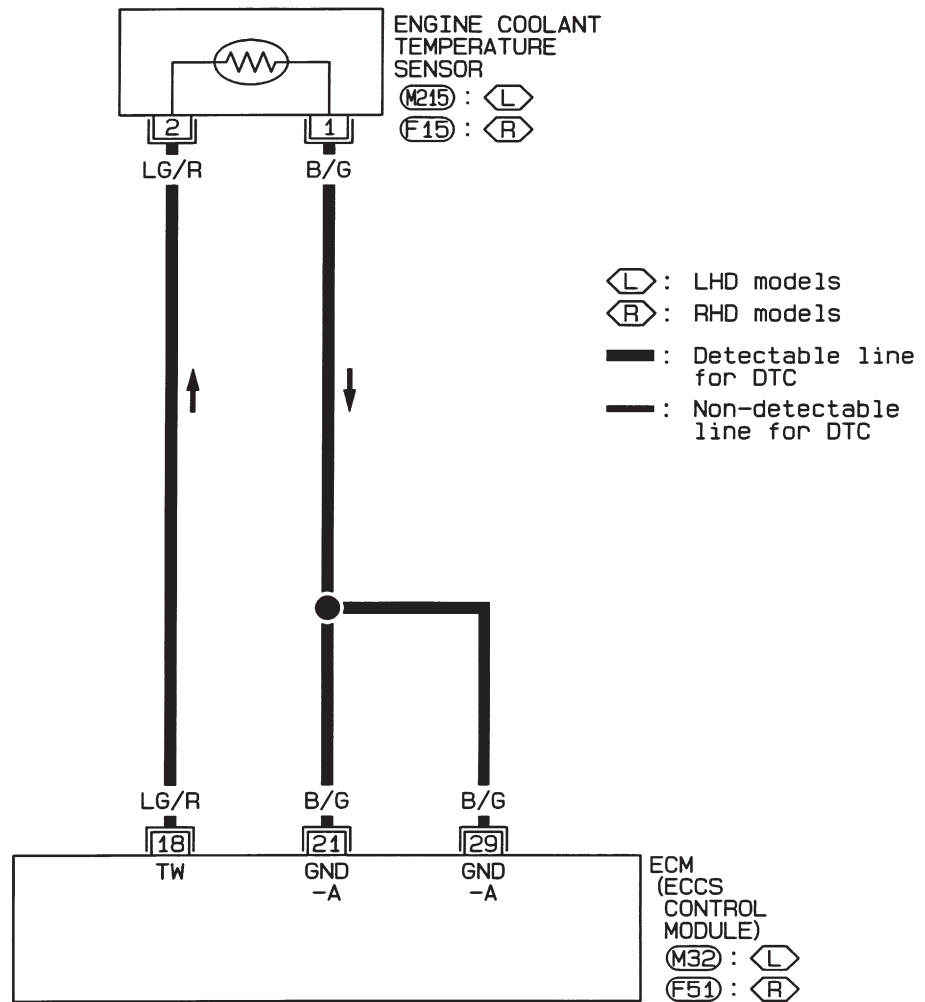

Engine Coolant Temperature Sensor (ECTS) (Cont'd)

DIAGNOSTIC PROCEDURE

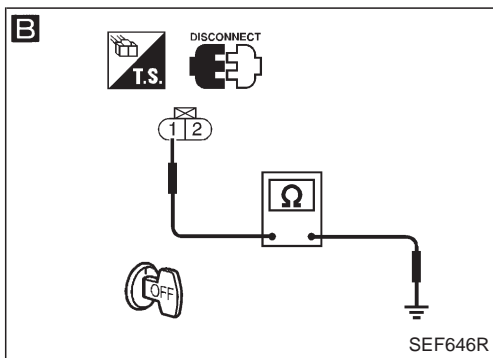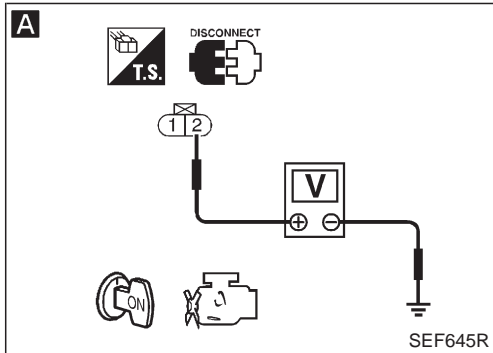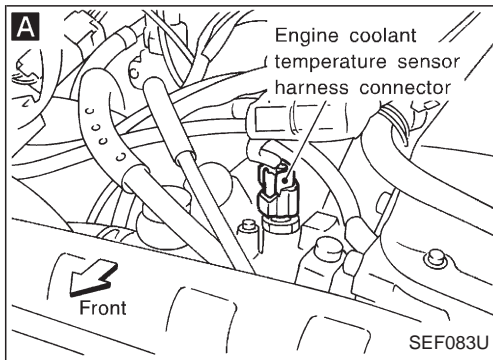

INSPECTION START

A
CHECK POWER SUPPLY.
1. Turn ignition switch "OFF".
2. Disconnect engine coolant temperature sensor harness connector.
3. Turn ignition switch "ON".
4. Check voltage between terminal ② and ground with CONSULT or tester.
Voltage:
Approximately 5V

NG → Repair harness or connectors.

B
CHECK GROUND CIRCUIT.
1. Turn ignition switch "OFF".
2. Check harness continuity between terminal ① and engine ground.
Continuity should exist.
If OK, check harness for short to ground and short to power.

NG → Check the following.
● Harness for open or short between ECM and engine coolant temperature sensor
If NG, repair open circuit, short to ground or short to power in harness or connectors.

CHECK COMPONENT
(Engine coolant temperature sensor). Refer to "COMPONENT INSPECTION" on next page.

NG → Replace engine coolant temperature sensor.

Disconnect and reconnect harness connectors in the circuit. Then retest.

Trouble is not fixed.

Check ECM pin terminals for damage and check the connection of ECM harness connector. Reconnect ECM harness connector and retest.



INSPECTION END

**Engine Coolant Temperature Sensor (ECTS)
(Cont'd)**

COMPONENT INSPECTION

Engine coolant temperature sensor


Check resistance as shown in the figure.

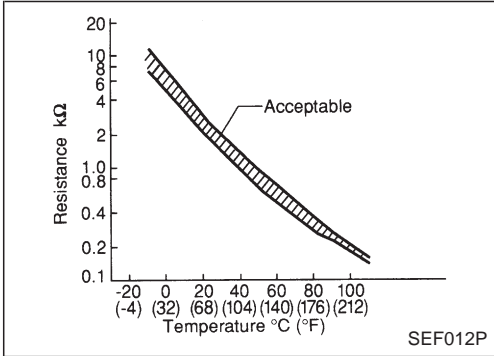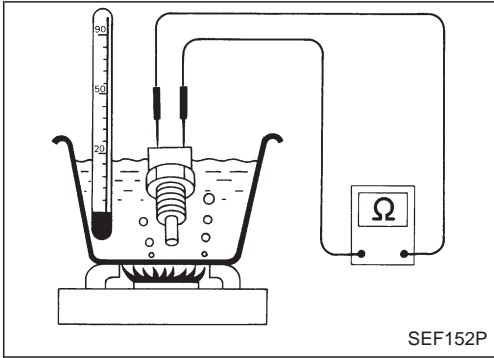

<Reference data>

Temperature °C (°F)	Resistance kΩ
20 (68)	2.1 - 2.9
50 (122)	0.68 - 1.00
90 (194)	0.236 - 0.260

If NG, replace engine coolant temperature sensor.

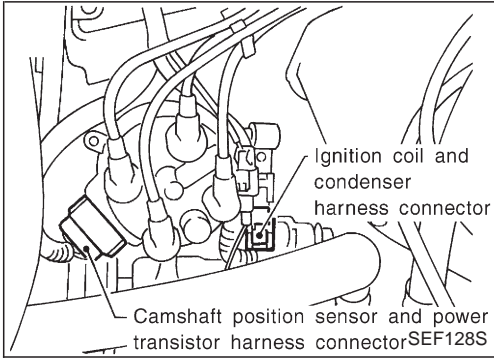

Ignition Signal

COMPONENT DESCRIPTION

Ignition coil & power transistor (Built into distributor)

The ignition signal from the ECM is sent to and amplified by the power transistor. The power transistor turns on and off the ignition coil primary circuit. This on-off operation induces the proper high voltage in the coil secondary circuit.



CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Remarks: Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
IGN TIMING	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: Neutral position ● No-load Idle	10° BTDC
	2,000 rpm	More than 25° BTDC

ECM TERMINALS AND REFERENCE VALUE



Remarks: Specification data are reference values, and are measured between each terminal and Ⓣ (ECCS ground) with a voltmeter.

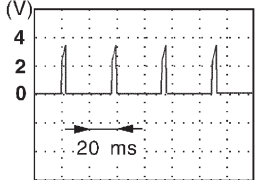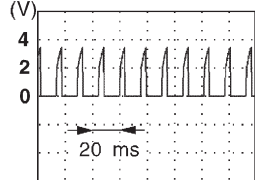TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
1	W/PU	Ignition signal	Engine is running. Idle speed	Approximately 0.3V  SEF058U
			Engine is running. Engine speed is 2,000 rpm.	Approximately 0.7V  SEF059U

TROUBLE DIAGNOSIS FOR "IGN SIGNAL-PRIMARY" (DTC 21)


KA

Ignition Signal (Cont'd)

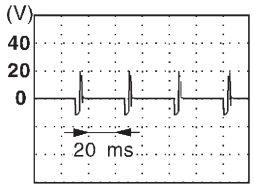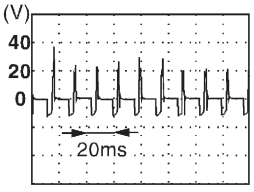TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
3	W/G	Ignition check	<div style="border: 1px solid black; padding: 2px; display: inline-block;">Engine is running.</div> └ Idle speed	Approximately 13V 
			SEF062U	Approximately 13V 
			<div style="border: 1px solid black; padding: 2px; display: inline-block;">Engine is running.</div> └ Engine speed is 2,000 rpm.	SEF063U



ON BOARD DIAGNOSIS LOGIC

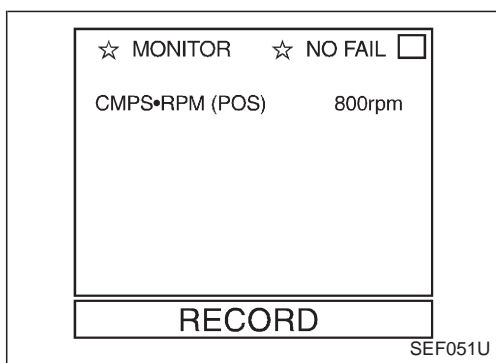Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
21	<ul style="list-style-type: none"> ● The ignition signal in the primary circuit is not sent during engine cranking or running. 	<ul style="list-style-type: none"> ● Harness or connectors (The ignition primary circuit is open or shorted.) ● Power transistor ● Resistor ● Camshaft position sensor ● Camshaft position sensor circuit



DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE




Note: If both DTC 21 and DTC 11 are displayed, perform TROUBLE DIAGNOSIS FOR DTC 11 first. (See EC-82.)

- | | |
|---|---|
|  | <ol style="list-style-type: none"> 1) Turn ignition switch "ON". 2) Select "DATA MONITOR" mode with CONSULT. 3) Start engine and wait at least 2 seconds. (If engine does not run, turn ignition switch to "START" for at least 5 seconds.) |
| _____ OR _____ | |
|  | <ol style="list-style-type: none"> 1) Turn ignition switch "ON". 2) Start engine and wait at least 2 seconds. (If engine does not run, turn ignition switch to "START" for at least 5 seconds.) 3) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON". 4) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM. |

Ignition Signal (Cont'd)


LHD MODELS

EC-IGN/SG-01

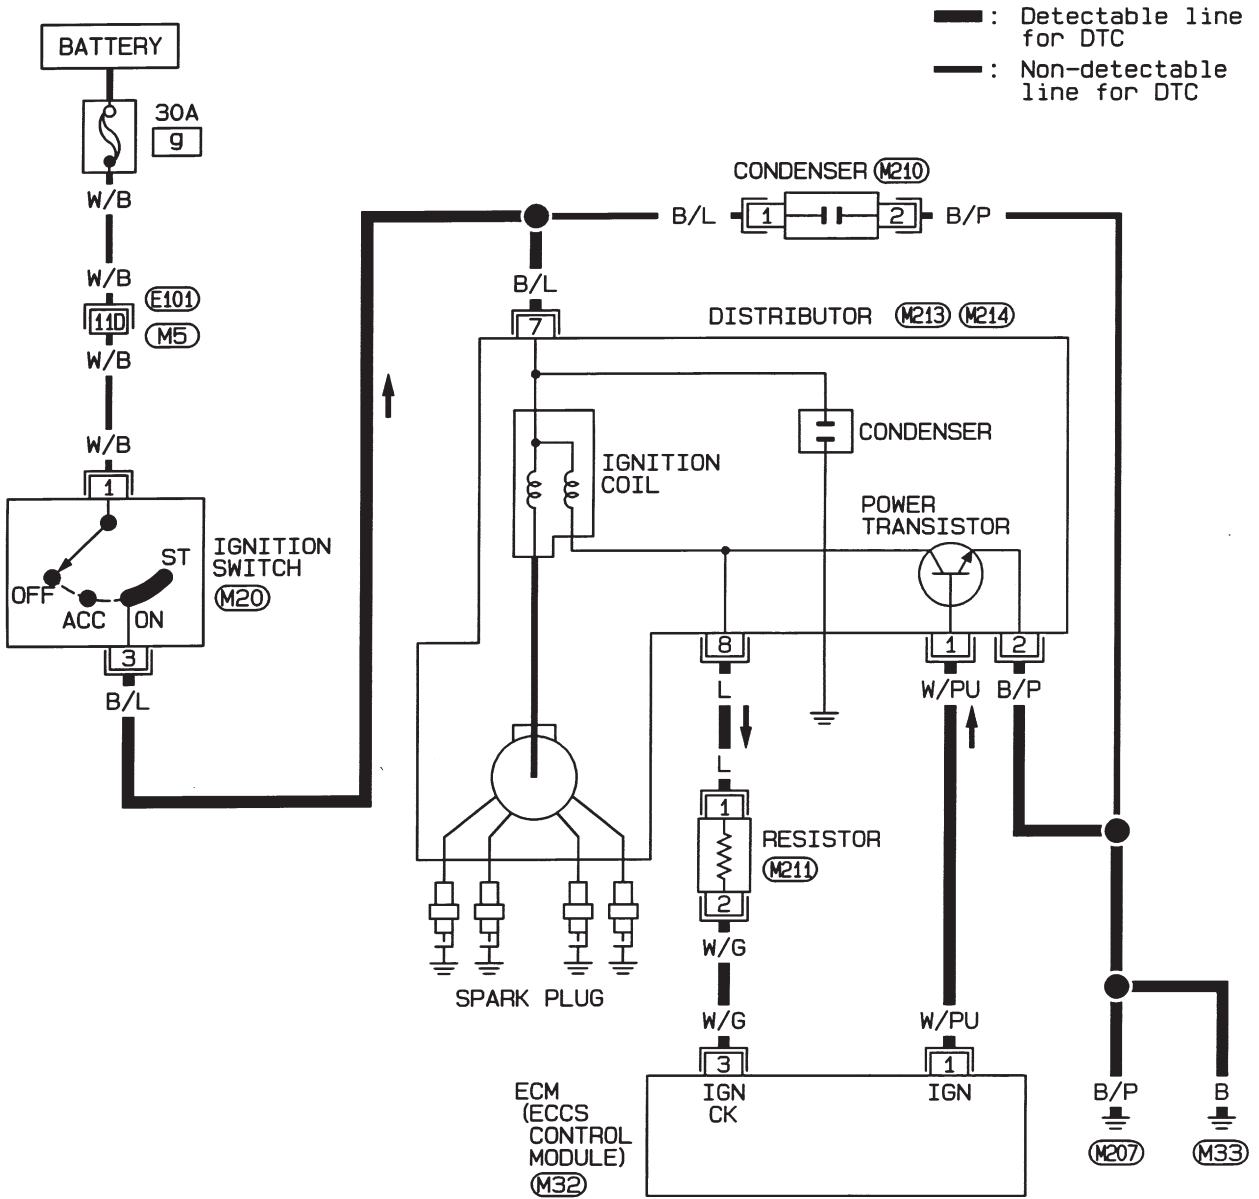

Refer to last page (Foldout page).






M5, E101







M32
W



**Ignition Signal (Cont'd)
DIAGNOSTIC PROCEDURE**

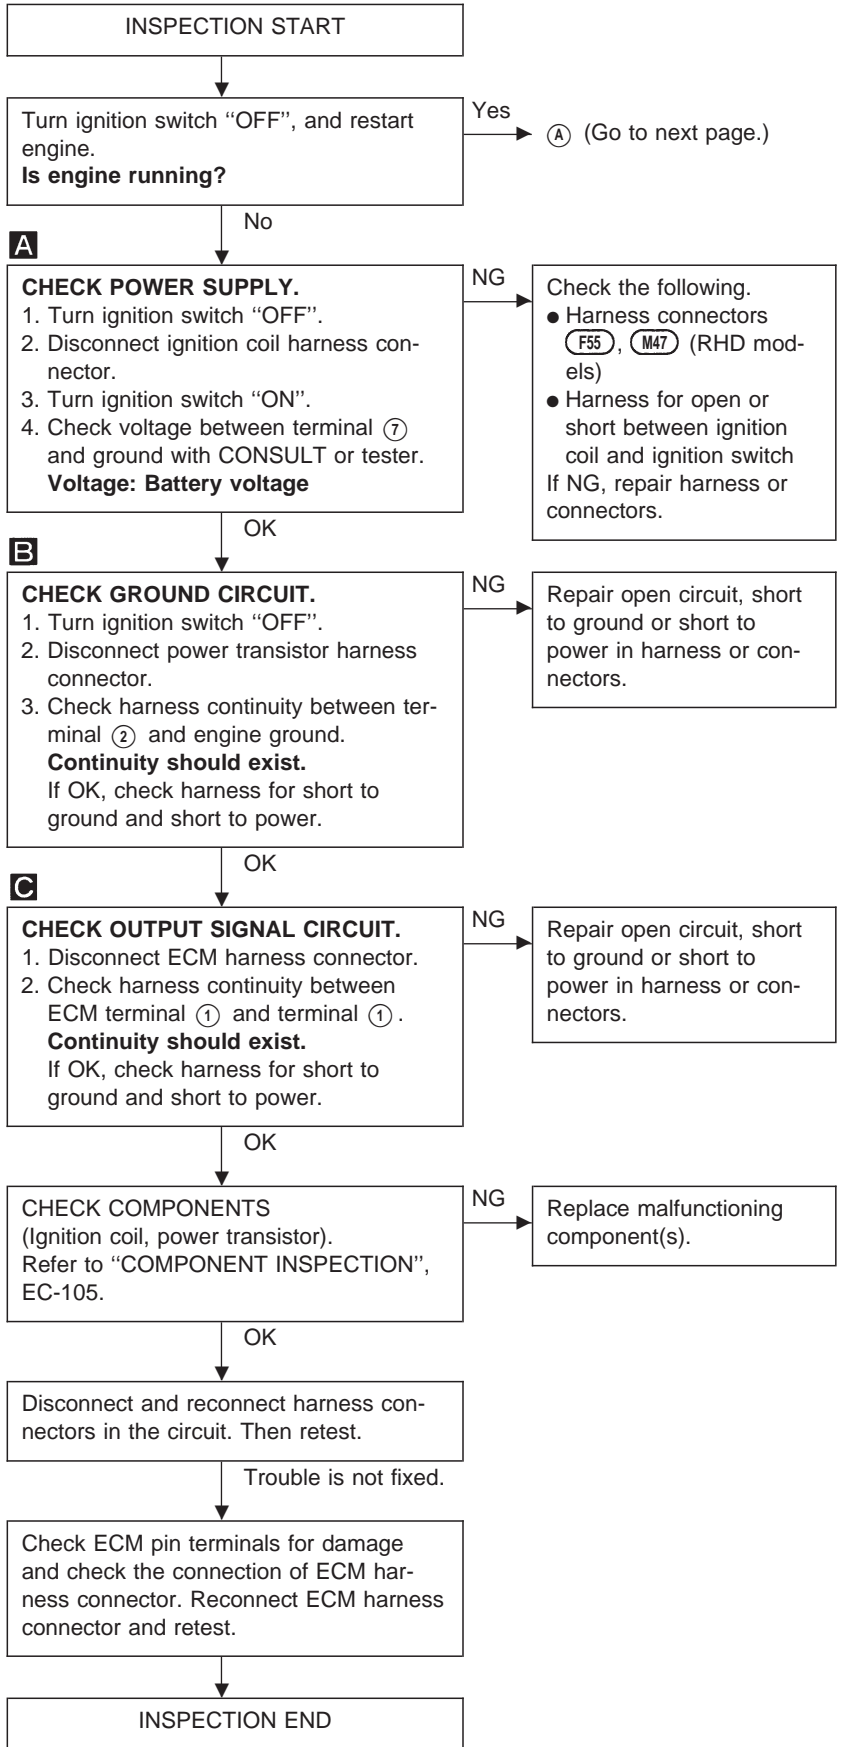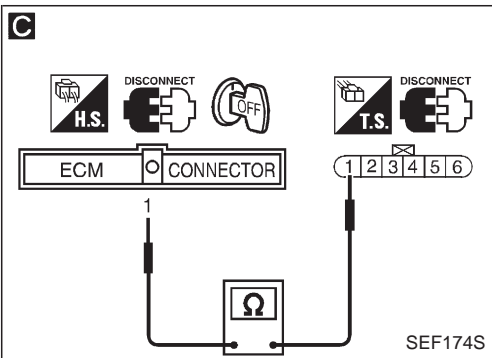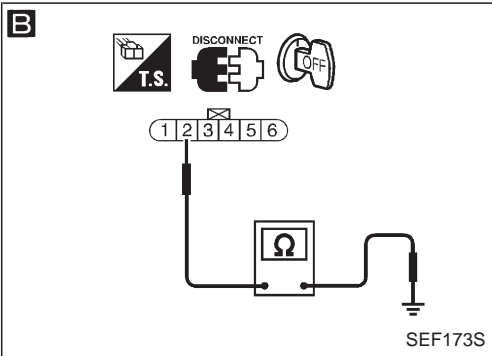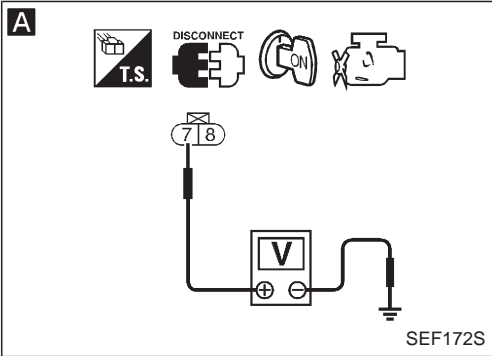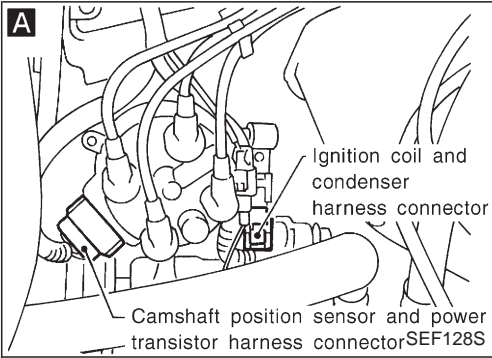

Ignition Signal (Cont'd)

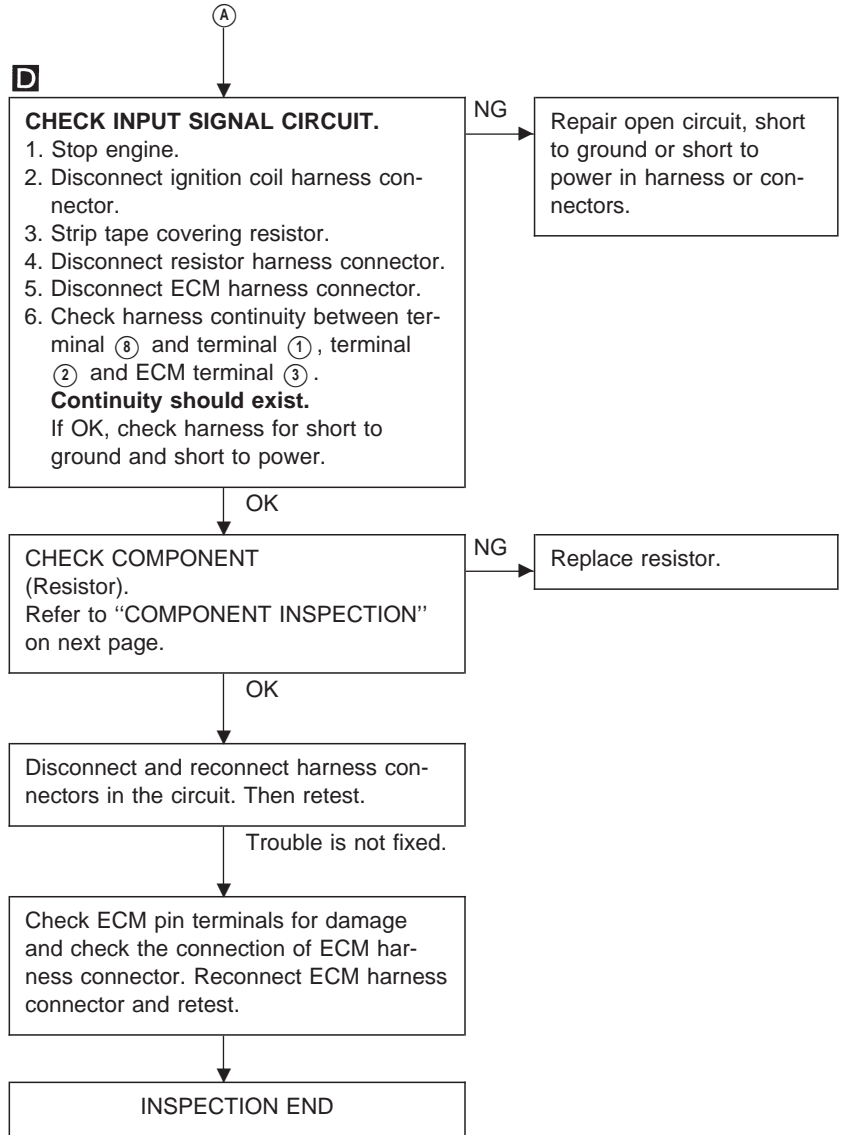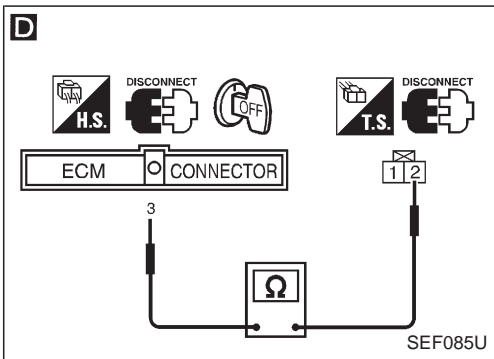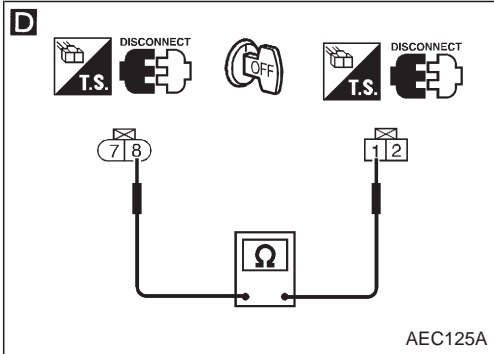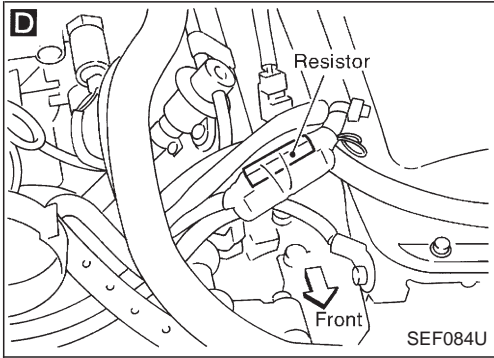




Ignition Signal (Cont'd)
COMPONENT INSPECTION

Ignition coil

1. Disconnect ignition coil harness connector.
2. Remove distributor cap.
3. Check resistance as shown in the figure.

Terminal	Resistance [at 25°C (77°F)]
⑦ - ⑧	Less than 1Ω
⑦ - ⑨	7 - 13 kΩ

If NG, replace distributor assembly.

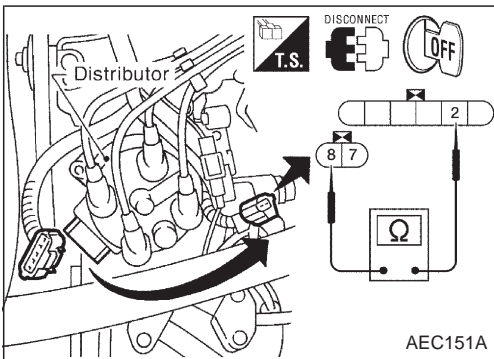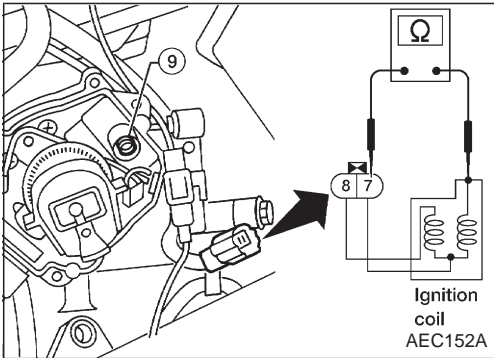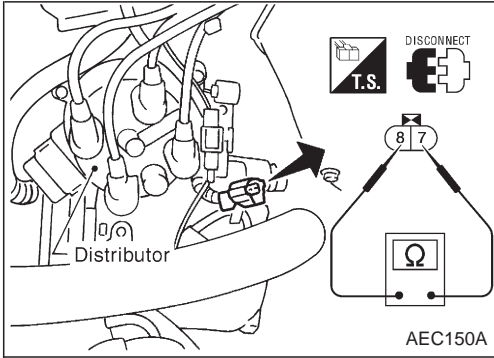

Power transistor


1. Disconnect camshaft position sensor & power transistor harness connector and ignition coil harness connector.
2. Check power transistor resistance between terminals ② and ⑧.

Terminals	Resistance	Result
② and ⑧	Except 0Ω	OK
	0Ω	NG

If NG, replace distributor assembly.

Resistor

1. Disconnect resistor harness connector.
2. Check resistance between terminals ① and ②.
Resistance: Approximately 2.2 kΩ
If NG, replace resistor.

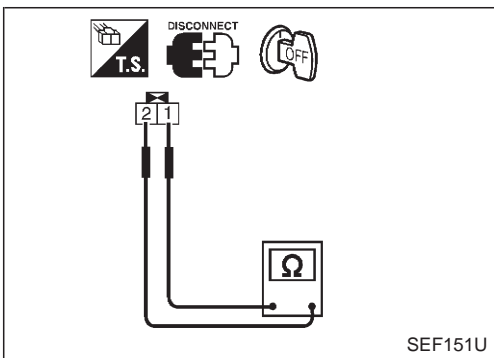

Overheat

ON BOARD DIAGNOSIS LOGIC

If the cooling fan or another component in the cooling system malfunctions, the engine coolant temperature will rise.


When the engine coolant temperature reaches an abnormally high temperature condition, a malfunction is indicated.

Diagnostic trouble code No.	Malfunction is detected when ...	Check Items (Possible Cause)
28	<ul style="list-style-type: none"> ● Engine coolant temperature reaches an abnormally high temperature. 	<ul style="list-style-type: none"> ● Cooling fan ● Radiator hose ● Radiator ● Radiator cap ● Water pump ● Thermostat <p>For more information, refer to “MAIN 12 CAUSES OF OVERHEATING”, EC-108.</p>

CAUTION:

When a malfunction is indicated, be sure to replace the coolant following the procedure in MA section (“Changing Engine Coolant”, “ENGINE MAINTENANCE”). Also, replace the engine oil.

- Fill radiator with coolant up to specified level with a filling speed of 2 liters per minute like pouring coolant by kettle. Be sure to use coolant with the proper mixture ratio. Refer to MA section (“Anti-freeze Coolant Mixture Ratio”, “RECOMMENDED FLUIDS AND LUBRICANTS”).
- After refilling coolant, run engine to ensure that no water-flow noise is emitted.

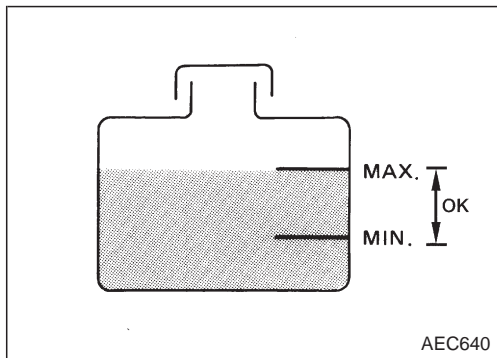

OVERALL FUNCTION CHECK

WARNING:

Never remove the radiator cap when the engine is hot. Serious burns could be caused by high pressure fluid escaping from the radiator.

Wrap a thick cloth around cap. Carefully remove the cap by turning it a quarter turn to allow built-up pressure to escape. Then turn the cap all the way off.





1. Check the coolant level in the reservoir tank and radiator.

Allow engine to cool before checking coolant level.

If the coolant level in the reservoir tank and/or radiator is below the proper range, skip the following step and go to “DIAGNOSTIC PROCEDURE” on next page.

2. Confirm whether customer filled the coolant or not. If customer filled the coolant, go to “DIAGNOSTIC PROCEDURE” on next page.

**Overheat (Cont'd)
DIAGNOSTIC PROCEDURE**

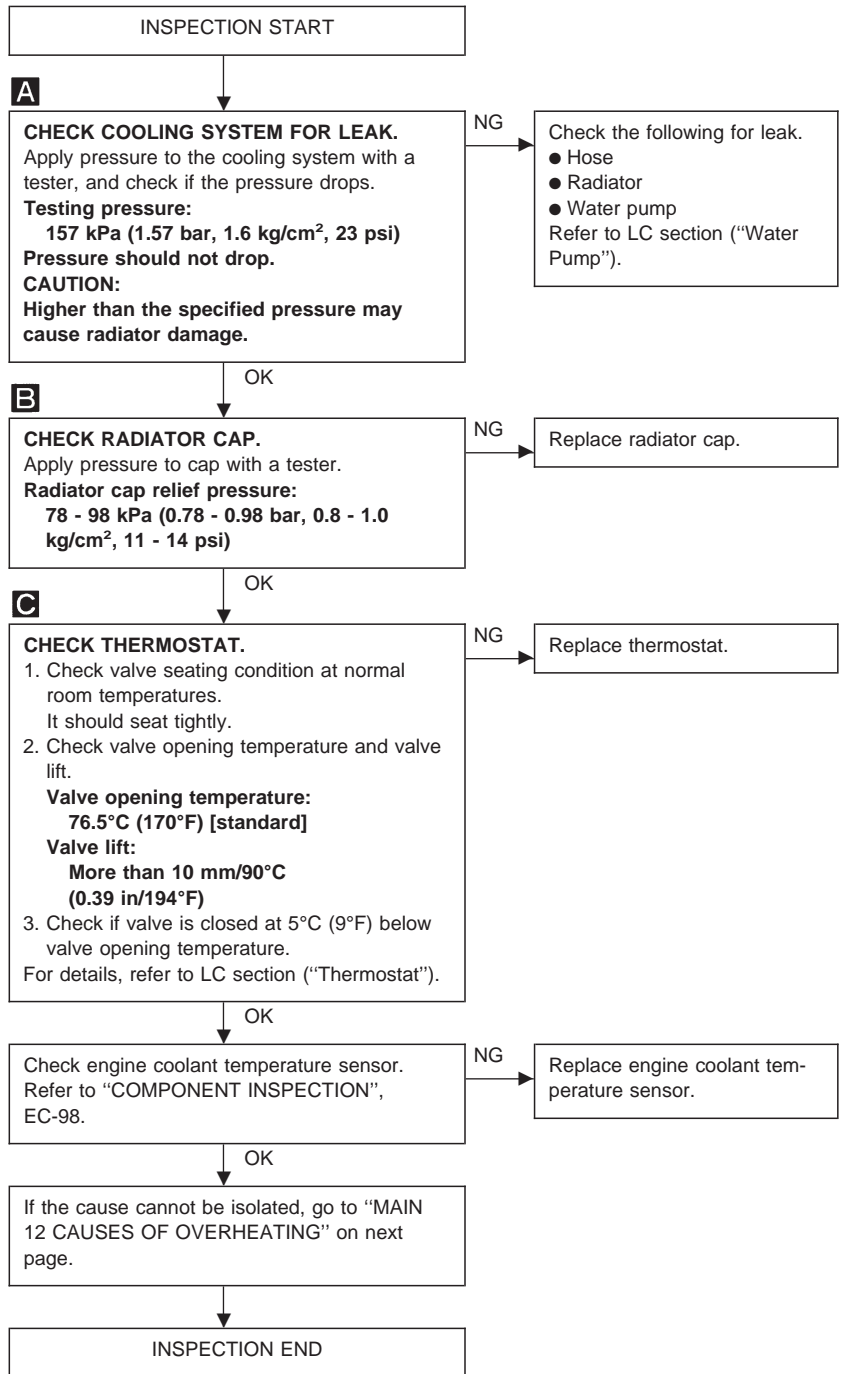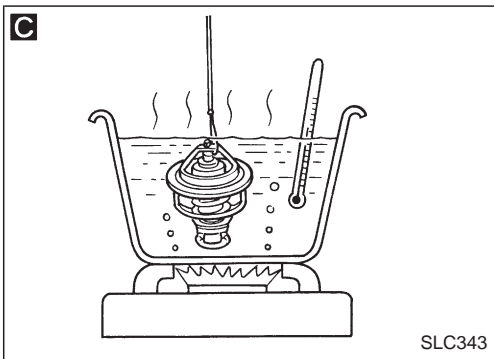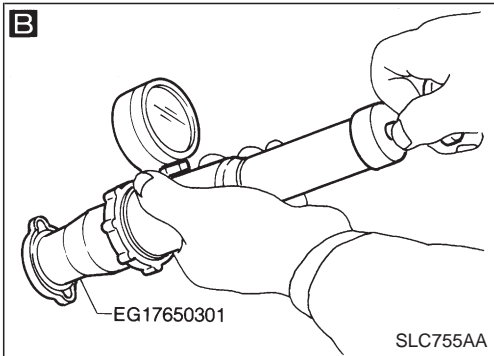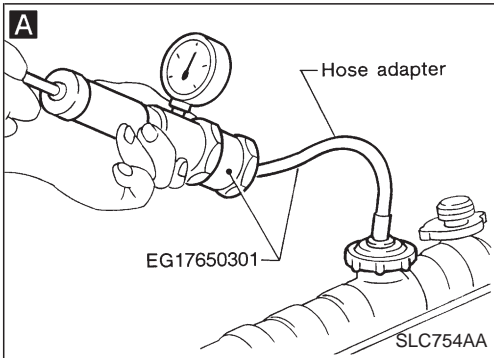

Perform FINAL CHECK by the following procedure after repair is completed.

1. Warm up engine. Run the vehicle for at least 20 minutes. Pay attention to engine coolant temperature gauge on the instrument panel. If the reading shows an abnormally high temperature, another part may be malfunctioning.
2. Stop vehicle and let engine idle. Check the intake and exhaust systems for leaks by listening for noise or visually inspecting the components.
3. Allow engine to cool and visually check for oil and coolant leaks. Then, perform "OVERALL FUNCTION CHECK".

Overheat (Cont'd)

MAIN 12 CAUSES OF OVERHEATING

Engine	Step	Inspection item	Equipment	Standard	Reference page
OFF	1	<ul style="list-style-type: none"> ● Blocked radiator ● Blocked condenser ● Blocked radiator grille ● Blocked bumper 	● Visual	No blocking	—
	2	● Coolant mixture	● Coolant tester	50 - 50% coolant mixture	See “RECOMMENDED FLUIDS AND LUBRICANTS” in MA section.
	3	● Coolant level	● Visual	Coolant up to MAX level in reservoir tank and radiator filler neck	See “Changing Engine Coolant”, “ENGINE MAINTENANCE” in MA section.
	4	● Radiator cap	● Pressure tester	78 - 98 kPa (0.78 - 0.98 bar, 0.8 - 1.0 kg/cm ² , 11 - 14 psi) 59 - 98 kPa (0.59 - 0.98 bar, 0.6 - 1.0 kg/cm ² , 9 - 14 psi) (Limit)	See “System Check”, “ENGINE COOLING SYSTEM” in LC section.
ON*2	5	● Coolant leaks	● Visual	No leaks	See “System Check”, “ENGINE COOLING SYSTEM” in LC section.
ON*2	6	● Thermostat	● Touch the upper and lower radiator hoses	Both hoses should be hot.	See “Thermostat” and “Radiator”, “ENGINE COOLING SYSTEM” in LC section.
ON*1	7	● Cooling fan	● Visual	Operating	See “Cooling Fan”, “ENGINE COOLING SYSTEM” in LC section.
OFF	8	● Combustion gas leak	● Color checker chemical tester 4 gas analyzer	Negative	—
ON*3	9	● Coolant temperature gauge	● Visual	Gauge less than 3/4 when driving	—
		● Coolant overflow to reservoir tank	● Visual	No overflow during driving and idling	See “Changing Engine Coolant”, “ENGINE MAINTENANCE” in MA section.
OFF*4	10	● Coolant return from reservoir tank to radiator	● Visual	Should be initial level in reservoir tank	See “ENGINE MAINTENANCE” in MA section.
OFF	11	● Cylinder head	● Straight gauge feeler gauge	0.1 mm (0.004 in) Maximum distortion (warping)	See “Inspection”, “CYLINDER HEAD” in EM section.
	12	● Cylinder block and pistons	● Visual	No scuffing on cylinder walls or piston	See “Inspection”, “CYLINDER BLOCK” in EM section.


*1: Engine running at idle.

*2: Engine running at 3,000 rpm for 10 minutes.

*3: Drive at 90 km/h (55 MPH) for 30 minutes and then let idle for 10 minutes.

*4: After 60 minutes of cool down time.


For more information, refer to “OVERHEATING CAUSE ANALYSIS” in LC section.

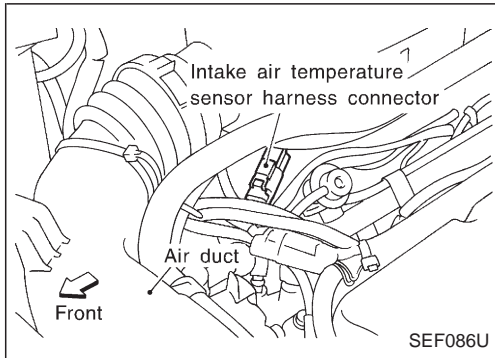

Intake Air Temperature Sensor

The intake air temperature sensor is mounted to the air duct. The sensor detects intake air temperature and transmits a signal to the ECM.

The temperature sensing unit uses a thermistor, which is sensitive to the change in temperature. Electrical resistance of the thermistor decreases in response to the temperature rise.

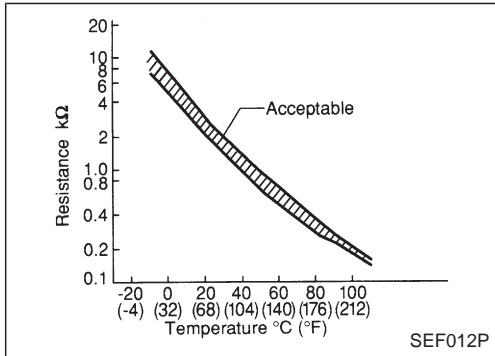

<Reference data>


Intake air temperature °C (°F)	Resistance kΩ
-10 (14)	7.0 - 11.4
20 (68)	2.1 - 2.9
80 (176)	0.27 - 0.38

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
41	<ul style="list-style-type: none"> An excessively low or high voltage from the sensor is sent to ECM*. 	<ul style="list-style-type: none"> Harness or connectors (The sensor circuit is open or shorted.) Intake air temperature sensor

*: When this malfunction is detected, the ECM enters fail-safe mode.

Engine operating condition in fail-safe mode	The ECM controls on the assumption that the intake temperature is 20°C (68°F).
--	--

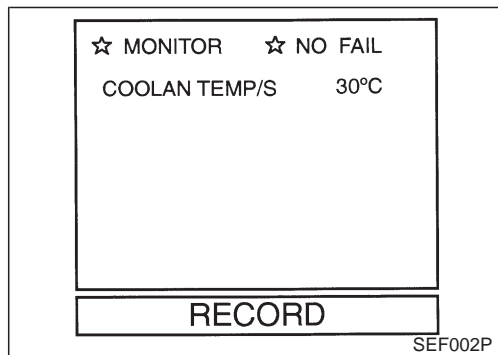

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE



- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT.
- 3) Wait at least 2 seconds.

OR




- 1) Turn ignition switch "ON" and wait at least 2 seconds.
- 2) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 3) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

Intake Air Temperature Sensor (Cont'd)

EC-IATS-01

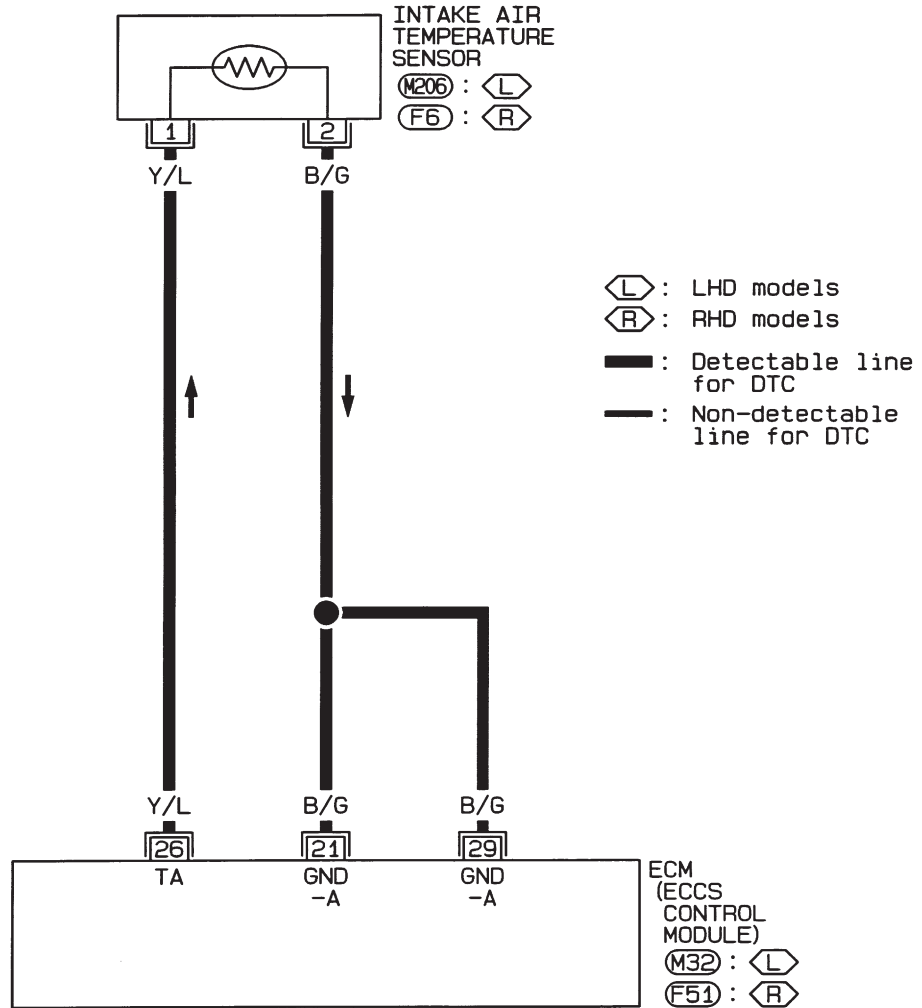

**Intake Air Temperature Sensor (Cont'd)
DIAGNOSTIC PROCEDURE**

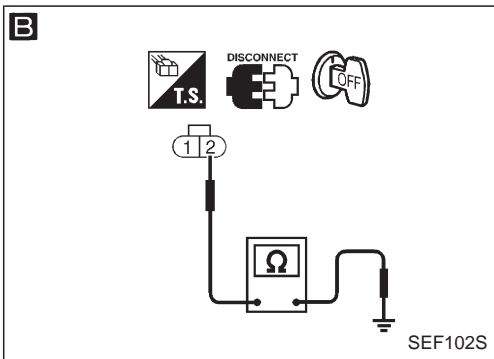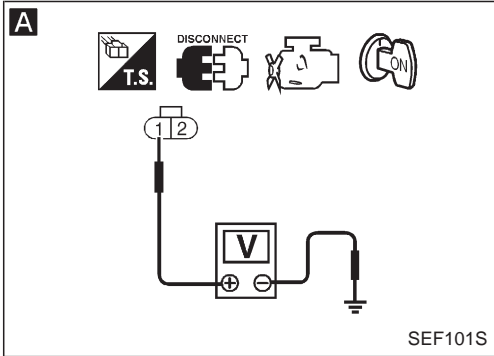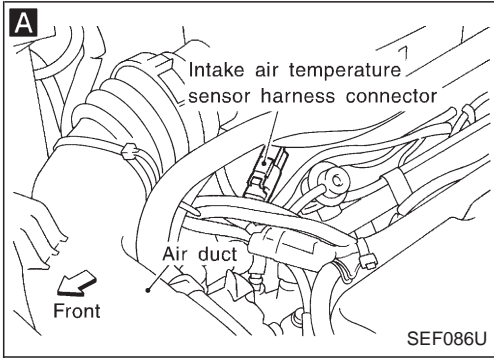

INSPECTION START

A
CHECK POWER SUPPLY.
1. Turn ignition switch "OFF".
2. Disconnect intake air temperature sensor harness connector.
3. Turn ignition switch "ON".
4. Check voltage between terminal ① and ground.
Voltage:
Approximately 5V

NG → Repair harness or connectors.

B
CHECK GROUND CIRCUIT.
1. Turn ignition switch "OFF".
2. Check harness continuity between terminal ② and engine ground.
Continuity should exist.
If OK, check harness for short to ground and short to power.

NG → Check the following.
● Harness for open or short between ECM and intake air temperature sensor
If NG, repair open circuit, short to ground or short to power in harness or connectors.

CHECK COMPONENT
(Intake air temperature sensor).
Refer to "COMPONENT INSPECTION" on next page.

NG → Replace intake air temperature sensor.

Disconnect and reconnect harness connectors in the circuit. Then retest.


Trouble is not fixed.
Check ECM pin terminals for damage and check the connection of ECM harness connector.
Reconnect ECM harness connector and retest.

INSPECTION END


**Intake Air Temperature Sensor (Cont'd)
COMPONENT INSPECTION**

Intake air temperature sensor

Check resistance as shown in the figure.

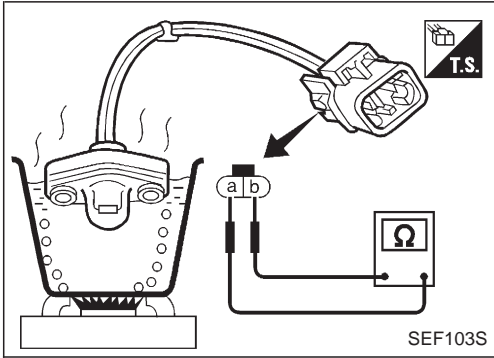

SEF103S

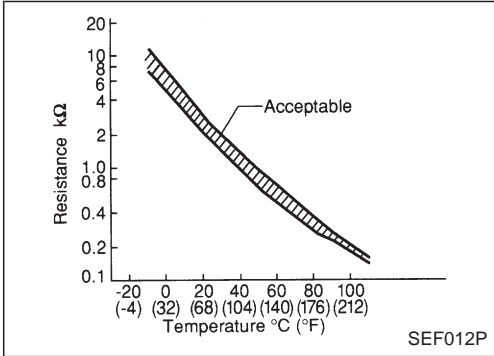

SEF012P

<Reference data>

Intake air temperature °C (°F)	Resistance kΩ
20 (68)	2.1 - 2.9
80 (176)	0.27 - 0.38


If NG, replace intake air temperature sensor.

Throttle Position Sensor

COMPONENT DESCRIPTION

The throttle position sensor responds to the accelerator pedal movement. This sensor is a kind of potentiometer which transforms the throttle position into output voltage, and emits the voltage signal to the ECM. In addition, the sensor detects the opening and closing speed of the throttle valve and feeds the voltage signal to the ECM.

Idle position of the throttle valve is determined by the ECM receiving the signal from the throttle position sensor. This one controls engine operation such as fuel cut.

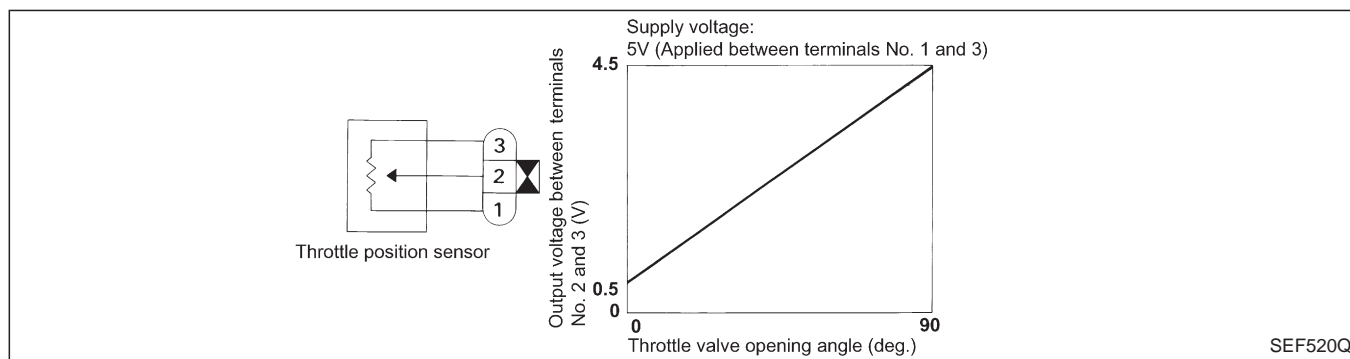

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Remarks: Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
THRTL POS SEN	● Ignition switch: ON (Engine stopped)	Throttle valve: fully closed
		Throttle valve: fully opened
CLSD THL/POSI	● Ignition switch: ON (Engine stopped)	Throttle valve: Idle position
		Throttle valve: Slightly open

ECM TERMINALS AND REFERENCE VALUE

Remarks: Specification data are reference values, and are measured between each terminal and Ⓒ (ECCS ground) with a voltmeter.

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
20	LG	Throttle position sensor signal	Ignition switch “ON” (Warm-up condition) └ Accelerator pedal released	0.35 - 0.65V
			Ignition switch “ON” └ Accelerator pedal fully depressed	Approximately 4V
37	PU	Throttle position sensor power supply	Ignition switch “ON”	Approximately 5V
21 29	B/G B/G	Sensors' ground	Engine is running. (Warm-up condition) └ Idle speed	0.001 - 0.02V




Throttle Position Sensor (Cont'd)

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
43	<ul style="list-style-type: none"> ● An excessively low or high voltage from the sensor is sent to ECM.* 	<ul style="list-style-type: none"> ● Harness or connectors (The sensor circuit is open or shorted.) ● Throttle position sensor

*: When this malfunction is detected, the ECM enters fail-safe mode.

Engine operating condition in fail-safe mode	Condition	Driving condition
Throttle position will be determined based on the amount of mass air flow and the engine speed. Therefore, acceleration will be poor.	When engine is idling	Normal
	When accelerating	Poor acceleration

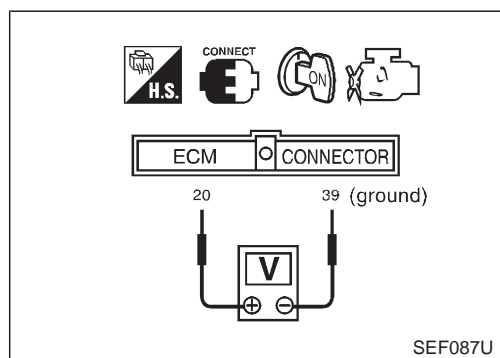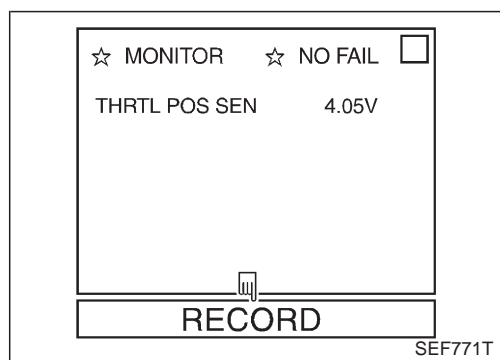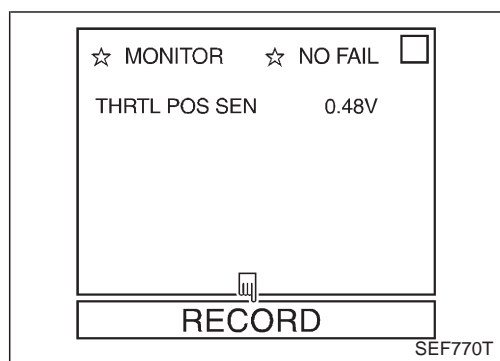

OVERALL FUNCTION CHECK

Use this procedure to check the overall function of the throttle position sensor circuit. During this check, a DTC might not be confirmed.






- 1) Start engine and warm it up sufficiently.
- 2) Turn ignition switch “OFF” and wait at least 5 seconds.
- 3) Turn ignition switch “ON”.
- 4) Select “THRTL POS SEN” in “DATA MONITOR” mode with CONSULT.
- 5) Read “THRTL POS SEN” signal and check the following:
 - The voltage when accelerator pedal fully released is approximately 0.35 - 0.65V.
 - The voltage when accelerator pedal fully depressed is approximately 4V.

OR

- 1) Start engine and warm it up sufficiently.
- 2) Turn ignition switch “OFF” and wait at least 5 seconds.
- 3) Turn ignition switch “ON”.
- 4) Check the voltage between ECM terminals ②⑩ and ③⑨ (ground) and check the following:
 - The voltage when accelerator pedal fully released is approximately 0.35 - 0.65V.
 - The voltage when accelerator pedal fully depressed is approximately 4V.





Throttle Position Sensor (Cont'd)

EC-TPS-01

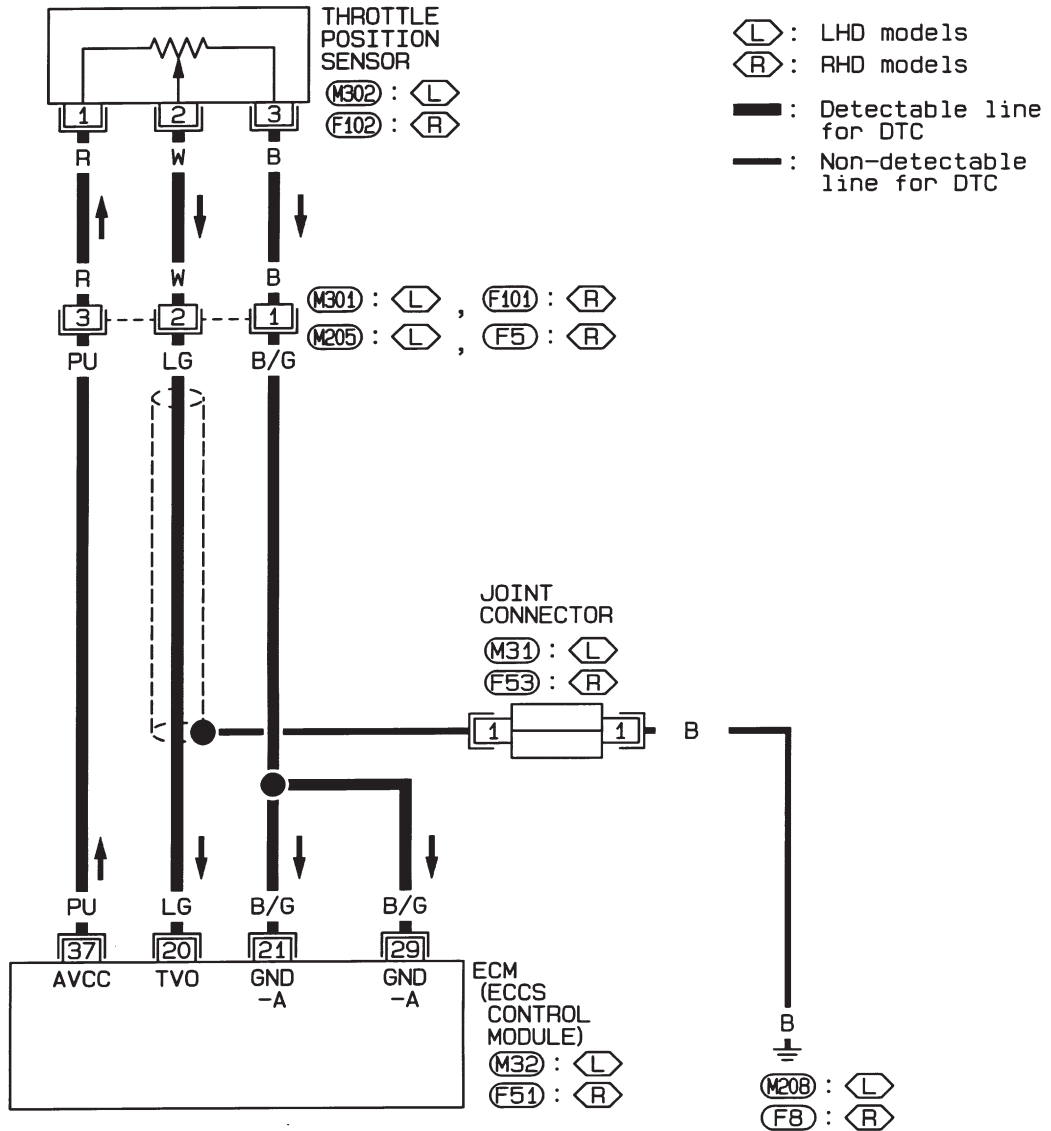

Throttle Position Sensor (Cont'd)

DIAGNOSTIC PROCEDURE

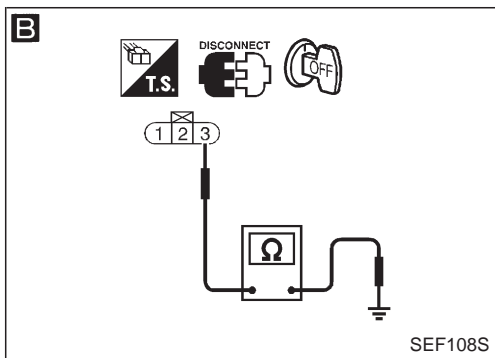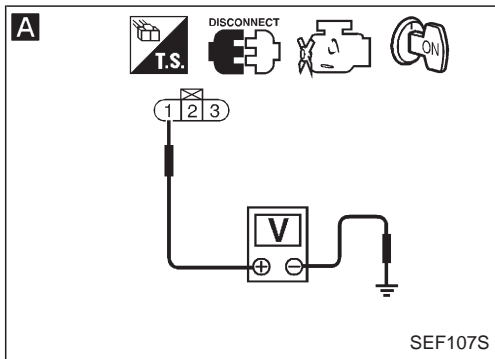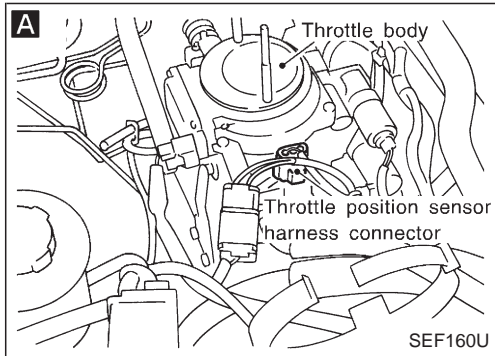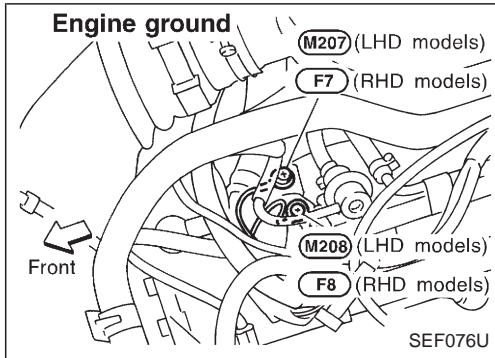

INSPECTION START

ADJUST THROTTLE POSITION SENSOR.
Perform BASIC INSPECTION, EC-58.

OK

CHECK SHIELD CIRCUIT.
 1. Turn ignition switch "OFF".
 2. Loosen and retighten engine ground screws.
 3. Remove joint connector (M31) or (F53).
 4. Check the following.
 ● Continuity between joint connector terminal ① and ground
 ● Joint connector (Refer to "HARNESS LAYOUT" in EL section.)
Continuity should exist.
 If OK, check harness for short to ground and short to power. Then reconnect joint connector.

NG → Repair open circuit, short to ground or short to power in harness or connectors.

OK

CHECK POWER SUPPLY.
 1. Disconnect throttle position sensor harness connector.
 2. Turn ignition switch "ON".
 3. Check voltage between terminal ① and ground with CONSULT or tester.
Voltage: Approximately 5V

NG → Check the following.
 ● Harness connectors (M205), (M301) (LHD models), (F5), (F101) (RHD models)
 ● Harness for open or short between throttle position sensor and ECM
 If NG, repair harness or connectors.

OK




CHECK GROUND CIRCUIT.
 1. Turn ignition switch "OFF".
 2. Check harness continuity between terminal ③ and engine ground.
Continuity should exist.
 If OK, check harness for short to ground and short to power.

NG → Check the following.
 ● Harness connectors (M205), (M301) (LHD models), (F5), (F101) (RHD models)
 ● Harness for open or short between throttle position sensor and ECM
 If NG, repair open circuit, short to ground or short to power in harness or connectors.

OK

Ⓐ

Throttle Position Sensor (Cont'd)

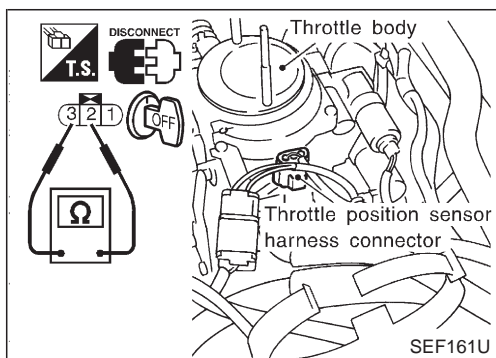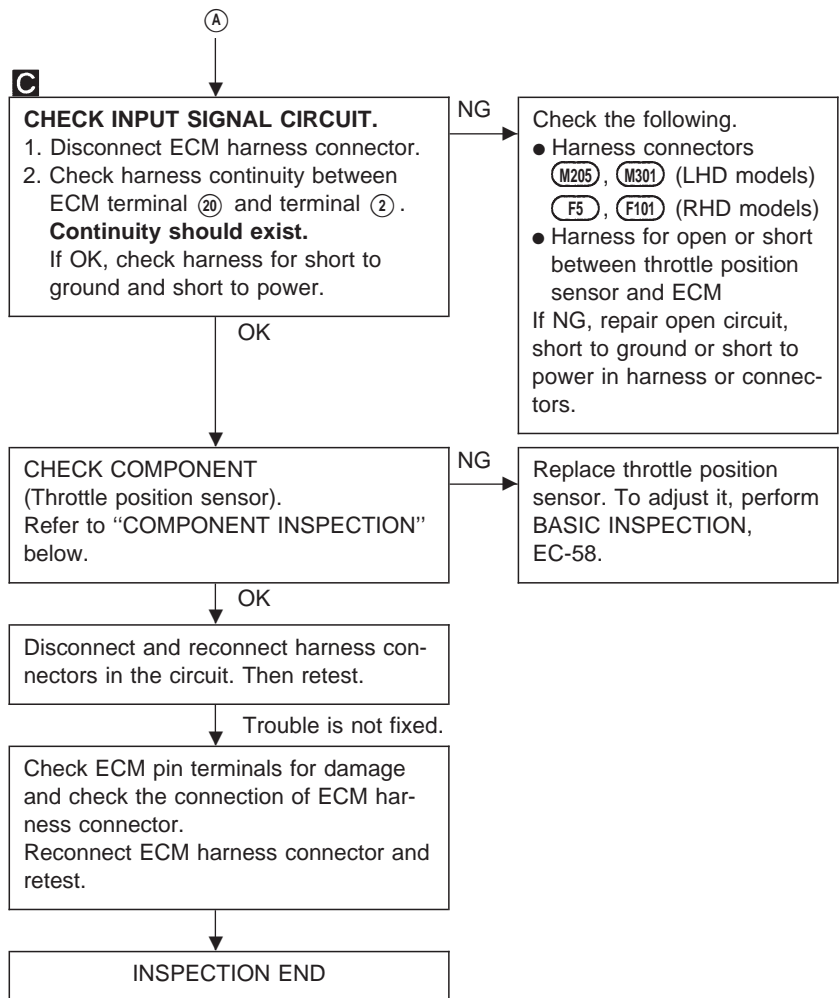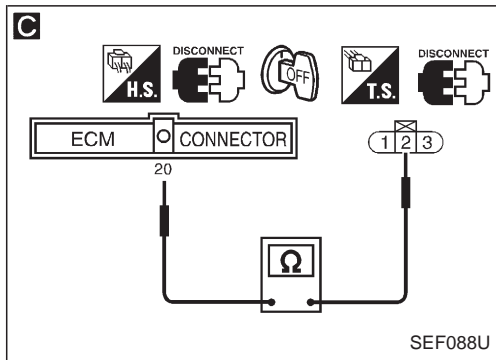


COMPONENT INSPECTION

Throttle position sensor

1. Start engine and warm it up sufficiently.
2. Turn ignition switch "OFF".
3. Disconnect throttle position sensor harness connector.
4. Make sure that resistance between terminals ② and ③ changes when opening throttle valve manually.

Throttle valve conditions	Resistance at 25°C (77°F)
Completely closed	Approximately 0.6 kΩ
Partially open	0.6 - 4.0 kΩ
Completely open	Approximately 4 kΩ

If NG, replace throttle position sensor.
 To adjust throttle position sensor, perform "BASIC INSPECTION", EC-58.

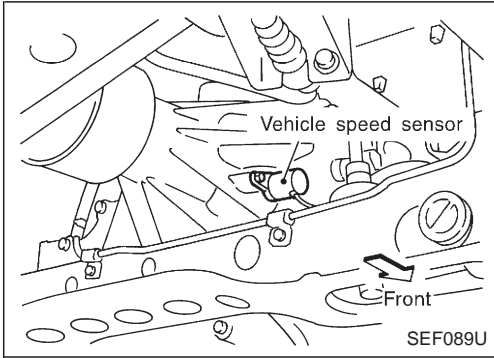

Vehicle Speed Sensor (VSS)

COMPONENT DESCRIPTION

The vehicle speed sensor is installed in the transmission. It contains a pulse generator which provides a vehicle speed signal to the speedometer. The speedometer then sends a signal to the ECM.

ECM TERMINALS AND REFERENCE VALUE

Remarks: Specification data are reference values, and are measured between each terminal and ③ (ECCS ground) with a voltmeter.



TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
32	W/L	Vehicle speed sensor	<p>Engine is running.</p> <p>Jack up all wheels and run engine at idle in 1st position.</p>	<p>Varies from 0 to 5V</p>

SEF068U

Vehicle Speed Sensor (VSS) (Cont'd)


LHD MODELS

EC-VSS-01

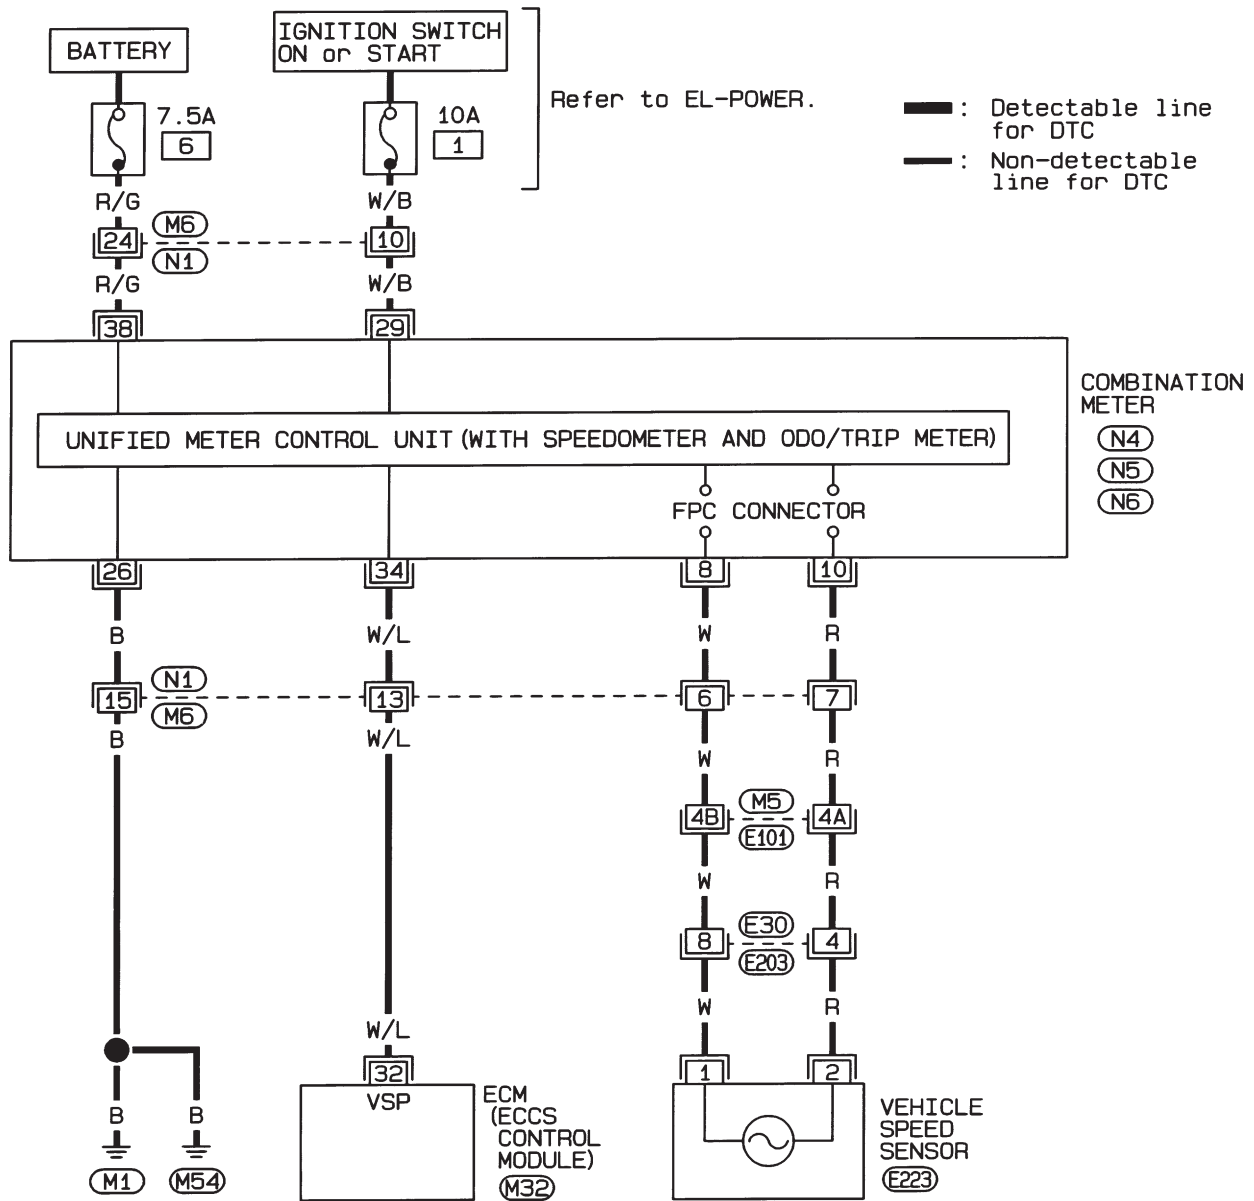

Refer to last page (Foldout page).

(M5), (E101)





HEC407

Vehicle Speed Sensor (VSS) (Cont'd)

RHD MODELS

EC-VSS-02

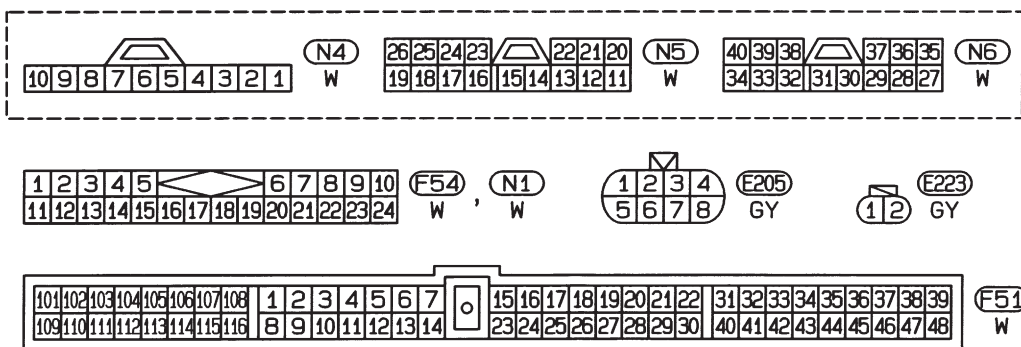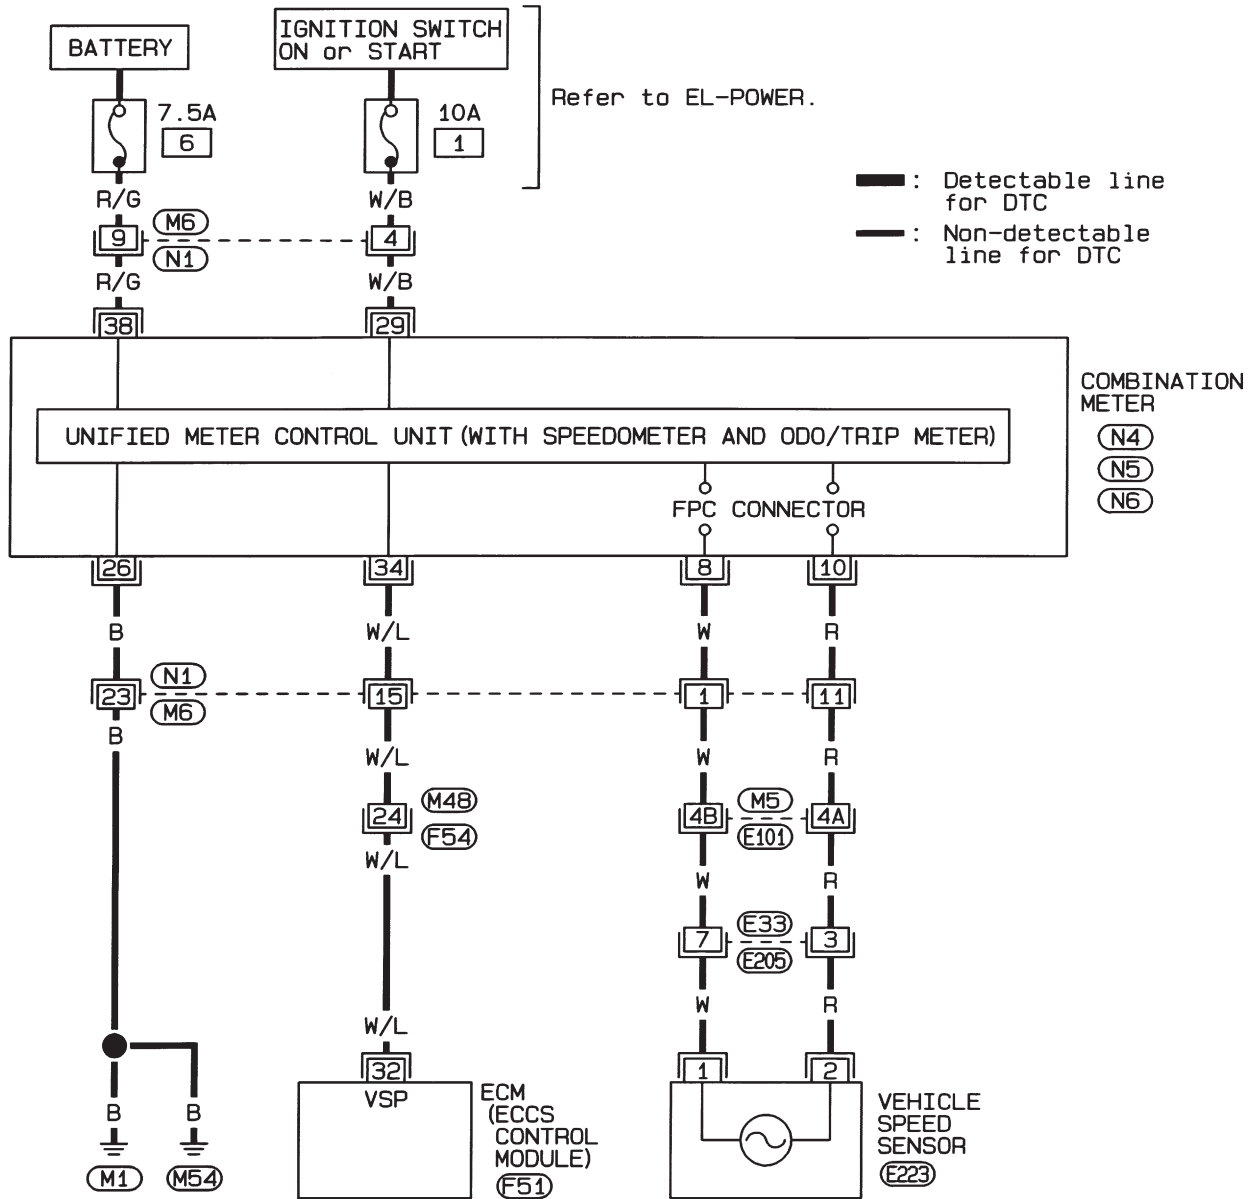

Refer to last page (Foldout page).

(M5), (E101)



HEC408

Vehicle Speed Sensor (VSS) (Cont'd)
DIAGNOSTIC PROCEDURE

A

■ VEHICLE SPEED SEN CKT ■

AFTER TOUCH START.
DRIVE VEHICLE
AT 10km/h (6mph) OR
MORE WITHIN 15 sec.

NEXT START

MEF559D

A

☆ MONITOR ☆ NO FAIL

VHCL SPEED SE 20km/h
P/N POSI SW OFF

RECORD

SEF941N

A

CONNECT H.S. E ON

ECM CONNECTOR

32

V

SEF163U

B

DISCONNECT H.S. E DISCONNECT T.S. E

ECM CONNECTOR

32 34 (N12)

OFF

Ω

SEF090U

INSPECTION START

A

CHECK OVERALL FUNCTION.

- Lift up the vehicle.
- Start engine.
- Perform "VEHICLE SPEED SEN CKT" in "FUNCTION TEST" mode with CONSULT.

OR

- Start engine.
- Read "VHCL SPEED SE" signal in "DATA MONITOR" mode with CONSULT.

The vehicle speed on CONSULT should be able to exceed 10 km/h (6 MPH) when rotating wheels with suitable gear position.

OR

- Turn ignition switch "ON".
- Rotate drive wheel by hand.
- Check voltage between ECM terminal (32) and ground.

Voltage should vary between approx. 0 - 5V.

OK → INSPECTION END

NG

B

CHECK INPUT SIGNAL CIRCUIT.

- Turn ignition switch "OFF".
- Disconnect ECM harness connector and combination meter harness connector.
- Check harness continuity between ECM terminal (32) and terminal (34). **Continuity should exist.** If OK, check harness for short to ground and short to power.

NG → Check the following.

- Harness connectors (F54), (M48) (RHD models)
- Harness connectors (M6), (N1)
- Harness for open or short between ECM and combination meter

If NG, repair open circuit, short to ground or short to power in harness or connectors.

OK →

NG

CHECK SPEEDOMETER FUNCTION.
Make sure that speedometer functions properly.

NG → Check the following.

- Harness for open or short between combination meter and vehicle speed sensor


If NG, repair harness or connectors.


- Vehicle speed sensor and its circuit (Refer to EL section.)

OK →

Ⓐ

Vehicle Speed Sensor (VSS) (Cont'd)

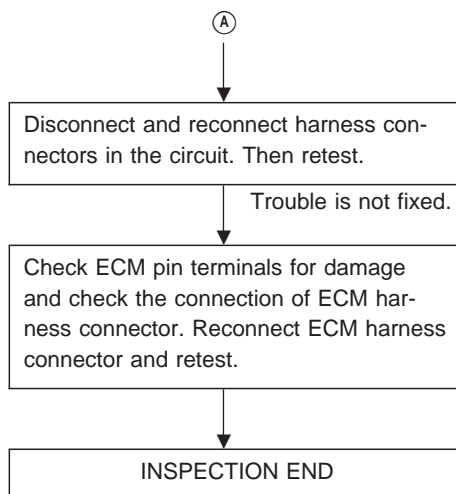


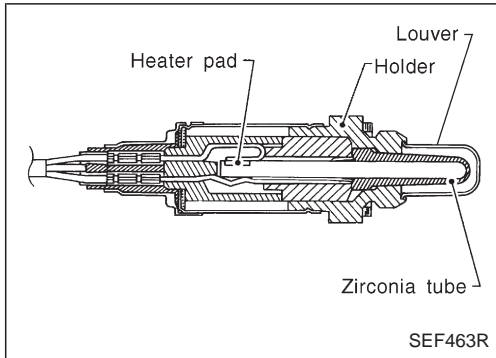

Heated Oxygen Sensor (HO2S)
— LHD Models —

COMPONENT DESCRIPTION

The heated oxygen sensor is placed into the front exhaust tube. It detects the amount of oxygen in the exhaust gas compared to the outside air. The heated oxygen sensor has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The heated oxygen sensor signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

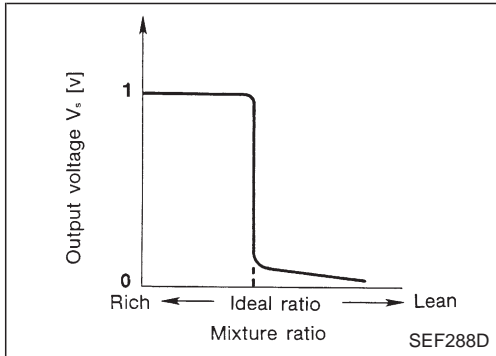

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Remarks: Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
O2 SEN	● Engine: After warming up	Maintaining engine speed at 2,000 rpm	0 - 0.3V ↔ 0.6 - 1.0V


ECM TERMINALS AND REFERENCE VALUE

Remarks: Specification data are reference values, and are measured between each terminal and ③⑨ (ECCS ground) with a voltmeter.

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
19	W	Heated oxygen sensor	<div style="border: 1px solid black; padding: 2px;">Engine is running.</div> After warming up sufficiently and engine speed is 2,000 rpm.	0 - Approximately 1.0V (periodically change)


Heated Oxygen Sensor (HO2S)
— LHD Models — (Cont'd)

EC-HO2S-01

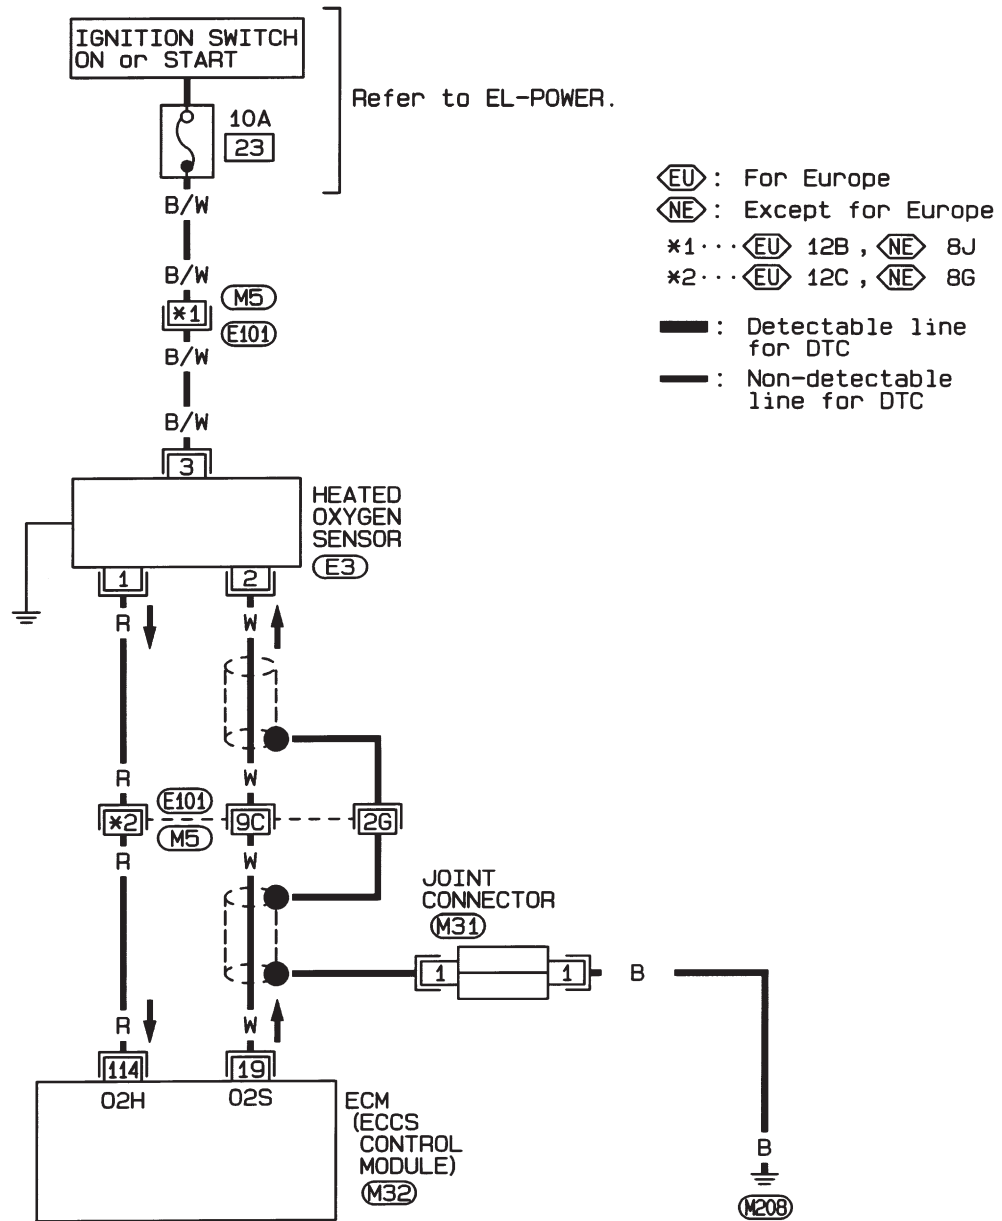


Refer to last page
(Foldout page).

M5 , E101



**Heated Oxygen Sensor (HO2S)
— LHD Models — (Cont'd)
DIAGNOSTIC PROCEDURE**

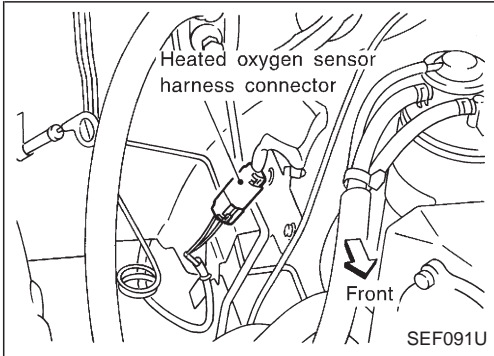

INSPECTION START

A CHECK HEATED OXYGEN SENSOR CIRCUIT. OK → INSPECTION END

1. Start engine and warm it up sufficiently.
2. Perform "MIXTURE RATIO TEST" in "FUNCTION TEST" mode with CONSULT.

OR




2. Make sure that "M/R F/C MNT" in "DATA MONITOR" mode indicates "RICH" and "LEAN" periodically more than 5 times during 10 seconds at 2,000 rpm.

OR



2. Stop engine and set ECM Diagnostic Test Mode II (Heated oxygen sensor monitor).
3. Restart engine and run it at about 2,000 rpm for about 2 minutes under no-load.
4. Keep engine speed at 2,000 rpm and make sure that the malfunction indicator lamp on the instrument panel comes on more than 5 times during each 10 seconds.

↓ NG

A

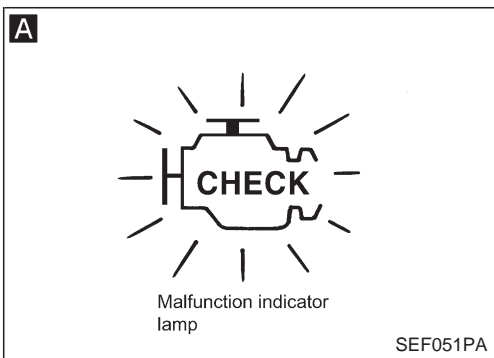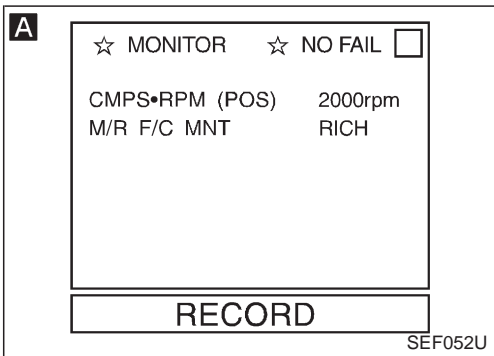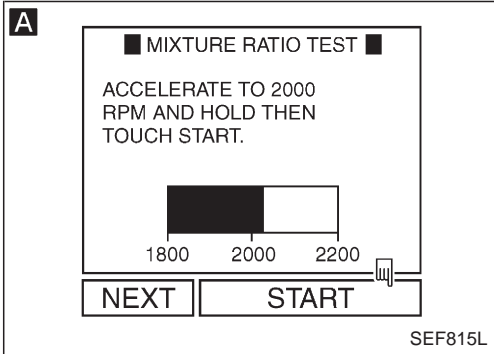

Heated Oxygen Sensor (HO2S)
— LHD Models — (Cont'd)

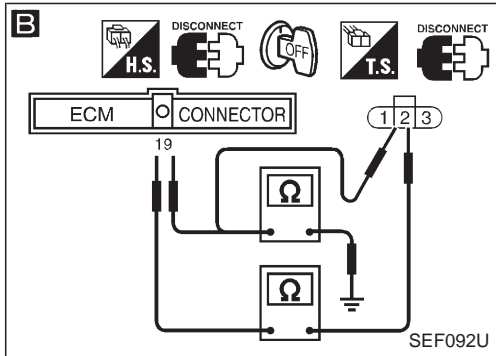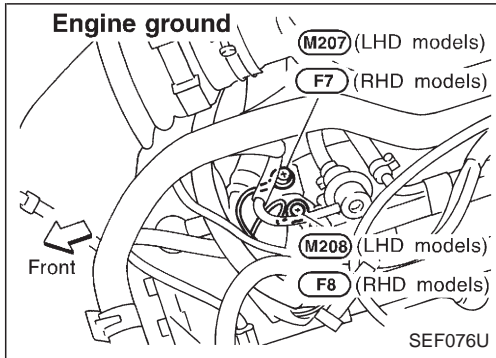

CHECK SHIELD CIRCUIT.
 1. Turn ignition switch "OFF".
 2. Loosen and retighten engine ground screws.
 3. Remove joint connector (M31).
 4. Check the following.
 ● Continuity between joint connector terminal ① and ground
 ● Joint connector (Refer to "HARNESS LAYOUT" in EL section.)
Continuity should exist.
 If OK, check harness for short to ground and short to power. Then reconnect joint connector.

NG → Repair open circuit, short to ground or short to power in harness or connectors.

CHECK INPUT SIGNAL CIRCUIT.
 1. Turn ignition switch "OFF".
 2. Disconnect heated oxygen sensor harness connector and ECM harness connector.
 3. Check harness continuity between ECM terminal ⑱ and terminal ②.
Continuity should exist.
 4. Check harness continuity between ECM terminal ⑱ (or terminal ②) and ground.
Continuity should not exist.
 If OK, check harness for short to ground and short to power.

NG → Repair open circuit, short to ground or short to power in harness or connectors.

Disconnect and reconnect harness connectors in the circuit. Then retest.


Check ECM pin terminals for damage and check the connection of ECM harness connector. Reconnect ECM harness connector and retest.

NG → Replace heated oxygen sensor.

INSPECTION END

**Heated Oxygen Sensor Heater
— LHD Models —**

SYSTEM DESCRIPTION

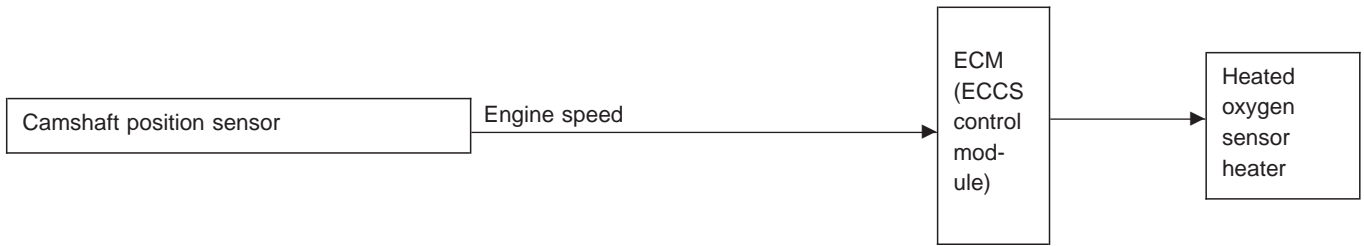

The ECM performs ON/OFF control of the heated oxygen sensor heater corresponding to the engine speed.

OPERATION

Engine speed rpm	Heated oxygen sensor heater
Above 3,200	OFF
Below 3,200	ON


ECM TERMINALS AND REFERENCE VALUE

Remarks: Specification data are reference values, and are measured between each terminal and Ⓣ (ECCS ground) with a voltmeter.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
114	R	Heated oxygen sensor heater	Engine is running. └ Engine speed is below 3,200 rpm.	Approximately 0V
			Engine is running. └ Engine speed is above 3,200 rpm.	BATTERY VOLTAGE (11 - 14V)


Heated Oxygen Sensor Heater
— LHD Models — (Cont'd)

EC-H02S-01

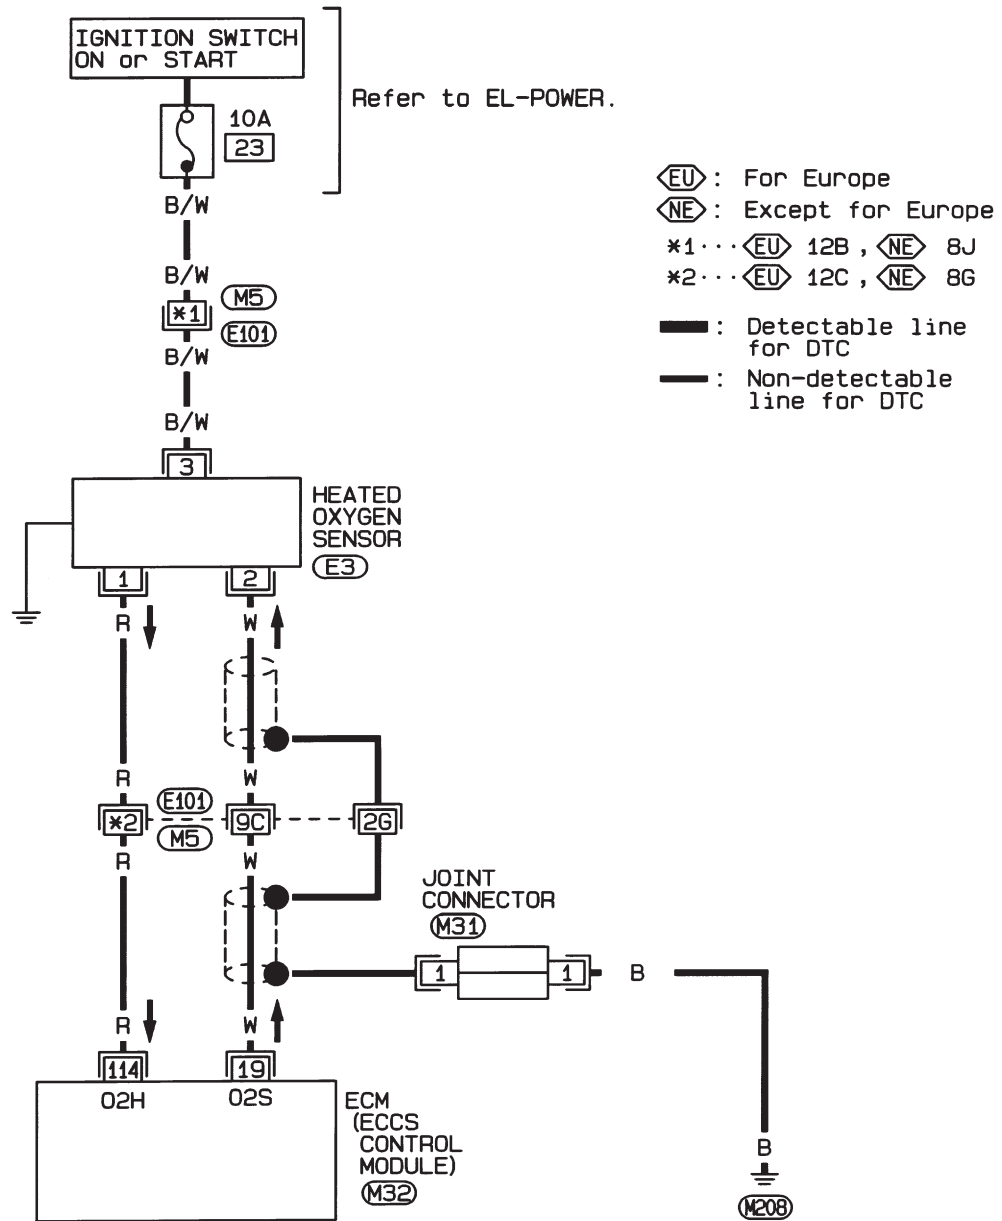






Refer to last page (Foldout page).

M5, E101



Heated Oxygen Sensor Heater
— LHD Models — (Cont'd)

DIAGNOSTIC PROCEDURE

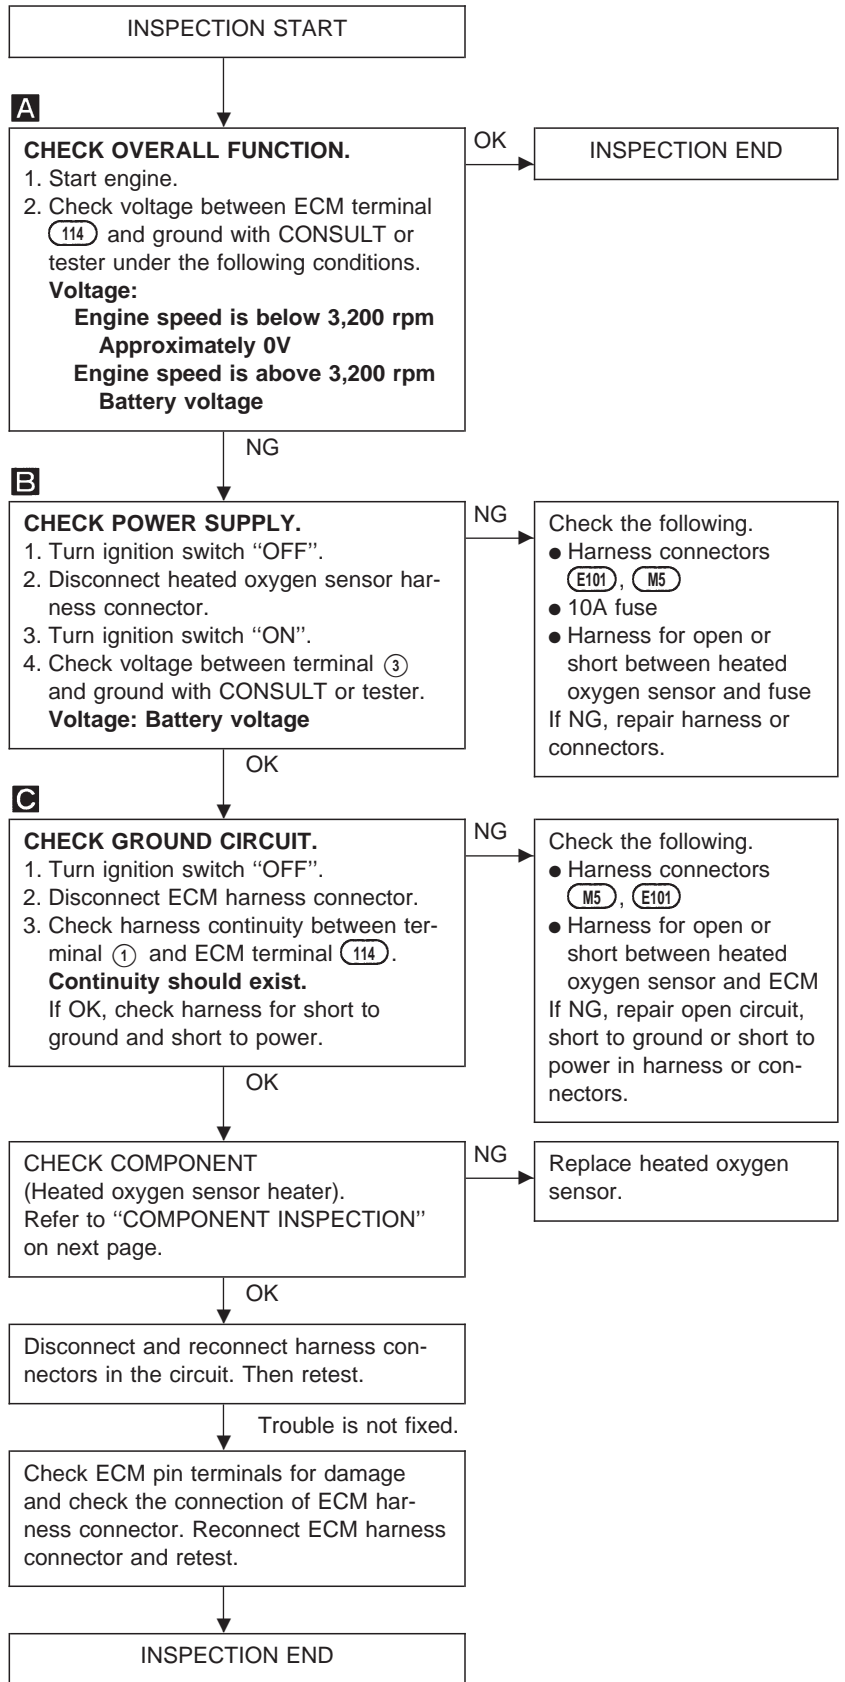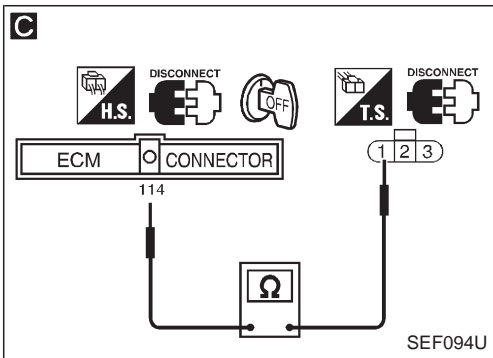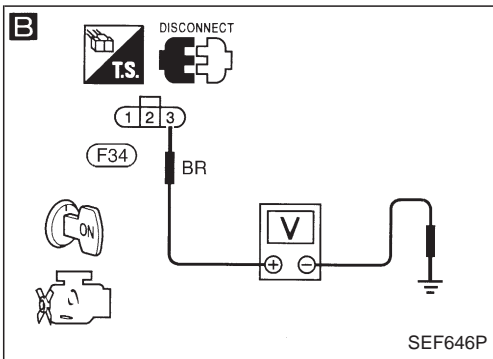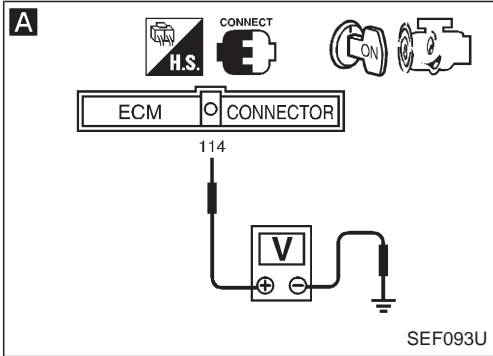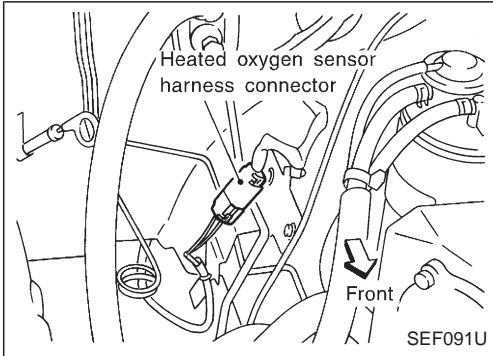

Heated Oxygen Sensor Heater — LHD Models — (Cont'd)

COMPONENT INSPECTION

Heated oxygen sensor heater

Check resistance between terminals ③ and ①.

Resistance: 2.3 - 4.3Ω at 25°C (77°F)


Check continuity between terminals ② and ①, ③ and ②.

Continuity should not exist.

If NG, replace the heated oxygen sensor.


CAUTION:

Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

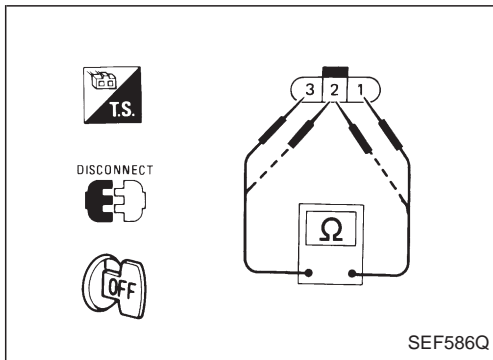


Idle Air Control Valve (IACV) — Auxiliary Air Control (AAC) Valve

SYSTEM DESCRIPTION

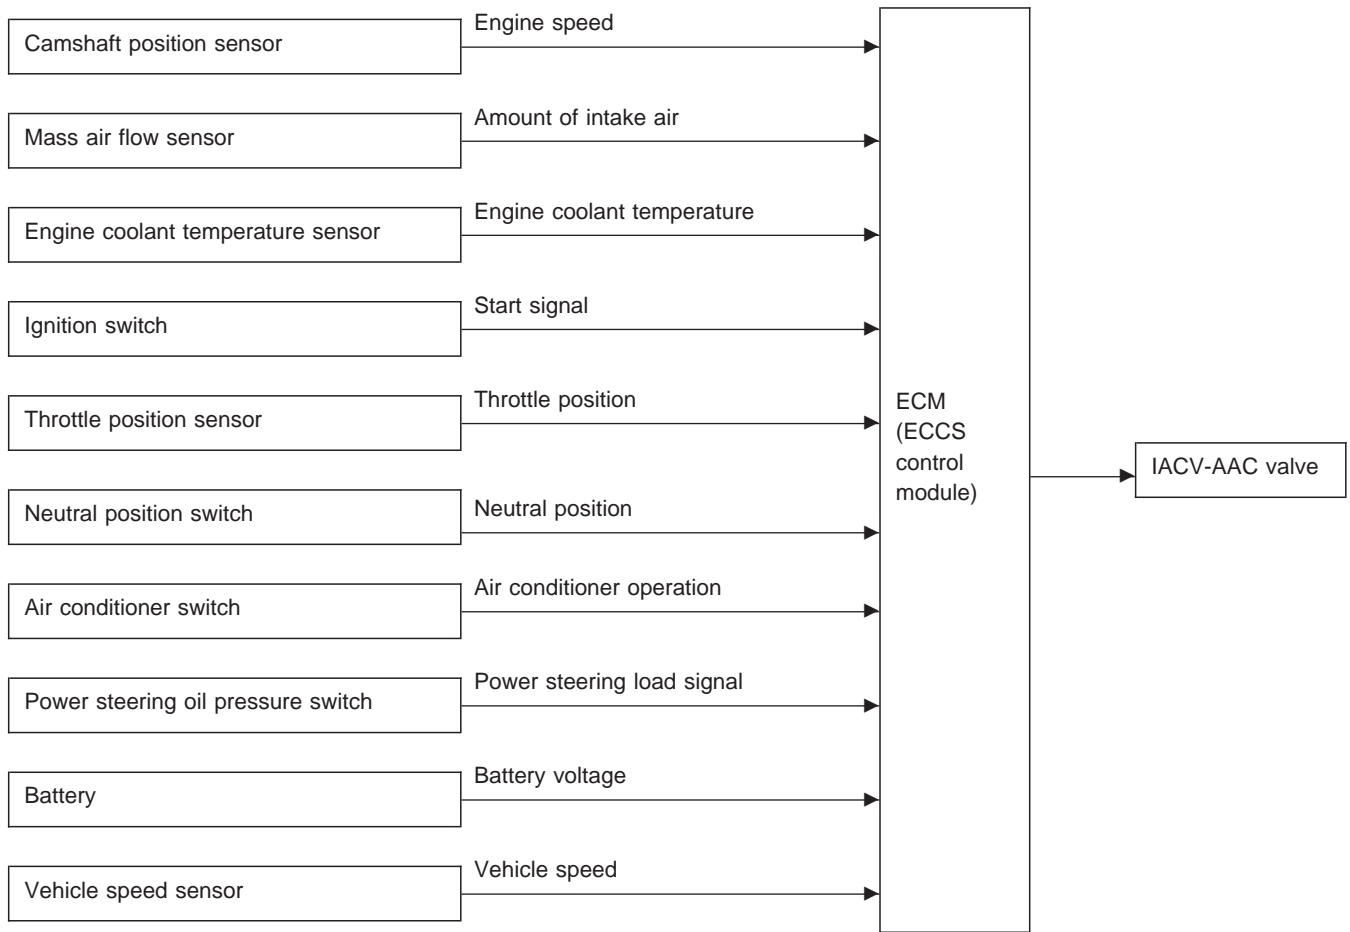

This system automatically controls engine idle speed to a specified level. Idle speed is controlled through fine adjustment of the amount of air which by-passes the throttle valve via IACV-AAC valve. The IACV-AAC valve repeats ON/OFF operation according to the signal sent from the ECM. The camshaft position sensor detects the actual engine speed and sends a signal to the ECM. The ECM then controls the ON/OFF time of the IACV-AAC valve so that engine speed coincides with the target value memorized in ECM. The target engine speed is the lowest speed at which the engine can operate steadily. The optimum value stored in the ECM is determined by taking into consideration various engine conditions, such as during warm up, deceleration, and engine load (air conditioner and power steering operation).

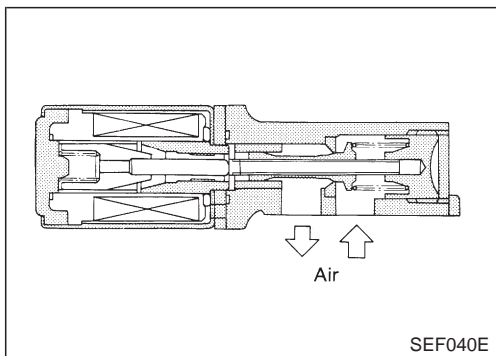

COMPONENT DESCRIPTION

IACV-AAC valve

The IACV-AAC valve is moved by ON/OFF pulses from the ECM. The longer the ON pulse, the greater the amount of air that will flow through the valve. The more air that flows through the valve, the higher the idle speed.

TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS

KA

Idle Air Control Valve (IACV) — Auxiliary Air Control (AAC) Valve (Cont'd)

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Remarks: Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
IACV-AAC/V	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: Neutral position ● No-load 	Idle
		2,000 rpm
		20 - 40%
		—



ECM TERMINALS AND REFERENCE VALUE

Remarks: Specification data are reference values, and are measured between each terminal and Ⓣ (ECCS ground) with a voltmeter.

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
113	W/G	IACV-AAC valve	<div style="border: 1px solid black; padding: 2px; display: inline-block;">Engine is running.</div> └ Idle speed	10 - 13V
			<div style="border: 1px solid black; padding: 2px; display: inline-block;">Engine is running.</div> └ Steering wheel is being turned. └ Air conditioner is operating. └ Rear window defogger switch is "ON". └ Lighting switch is "ON".	5 - 10V







Idle Air Control Valve (IACV) — Auxiliary Air Control (AAC) Valve (Cont'd)

EC-AAC/V-01

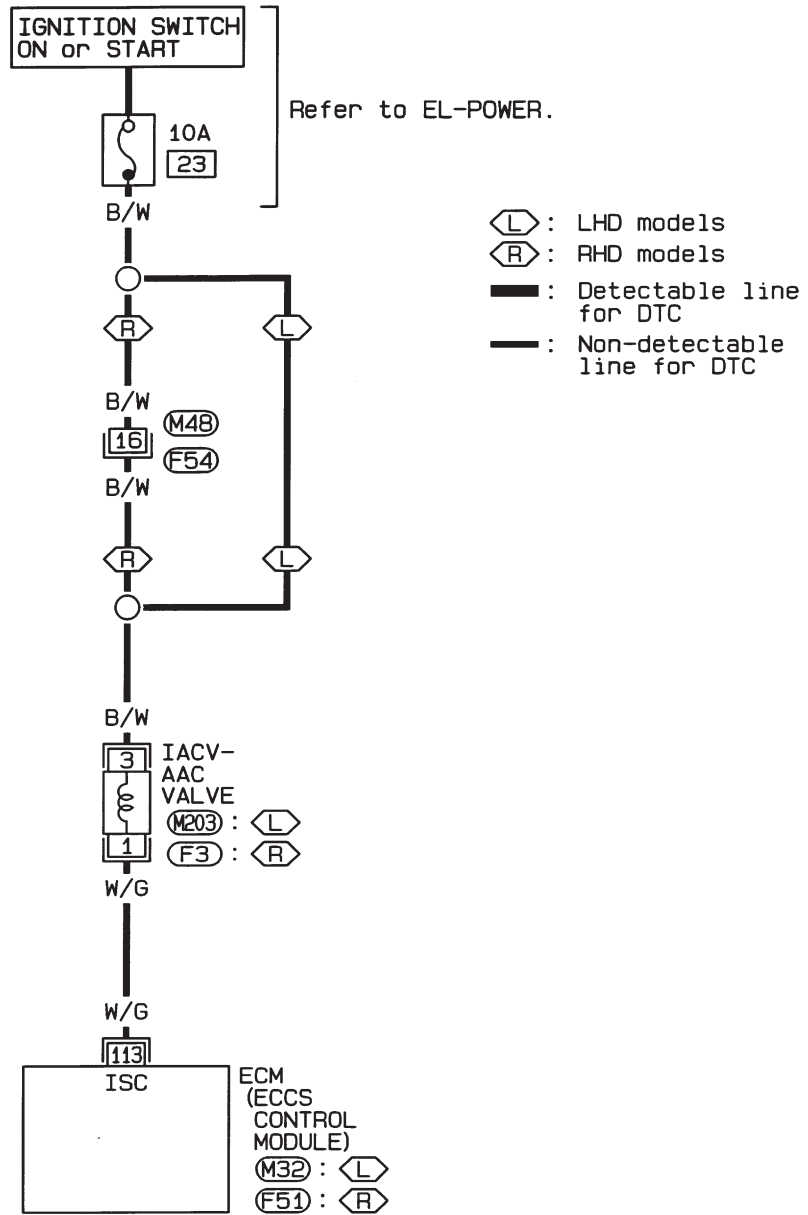


Idle Air Control Valve (IACV) — Auxiliary Air Control (AAC) Valve (Cont'd)

DIAGNOSTIC PROCEDURE

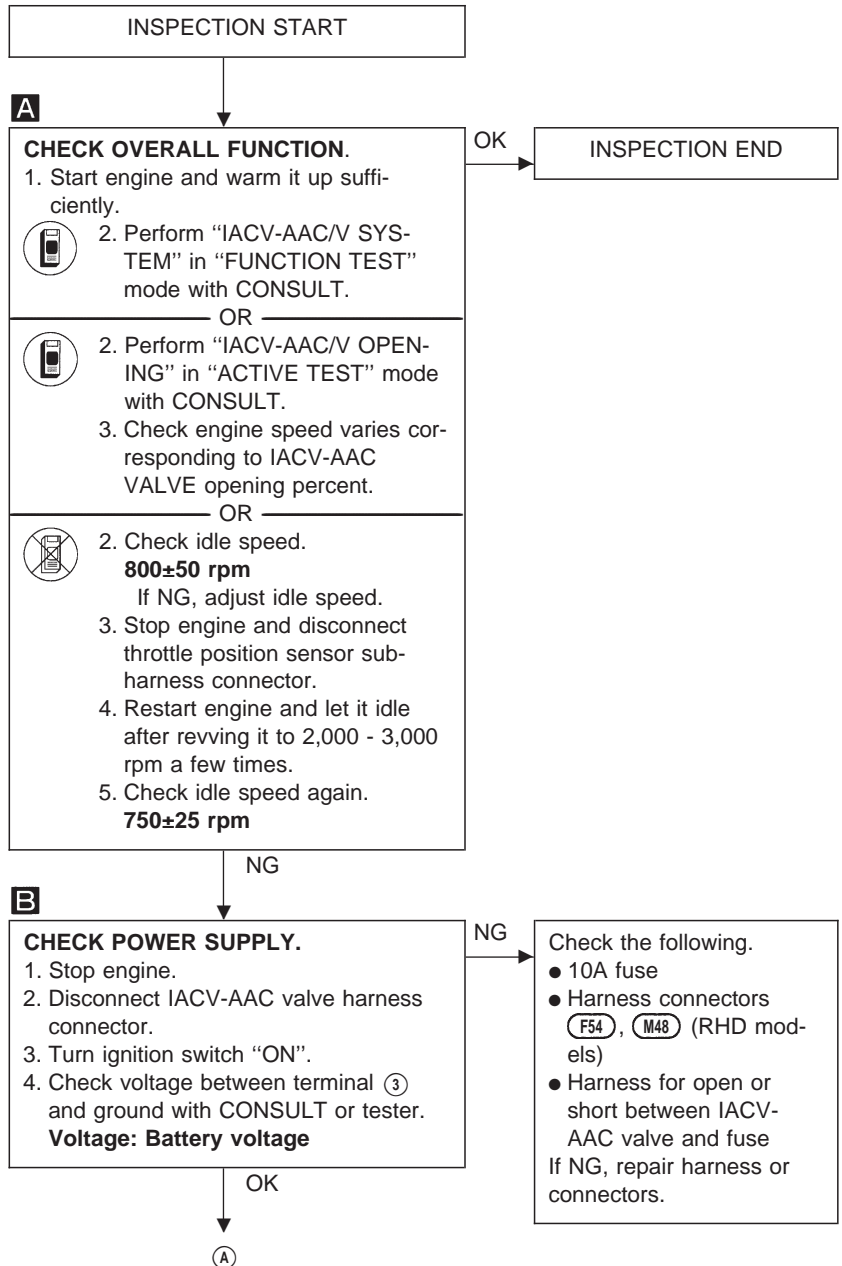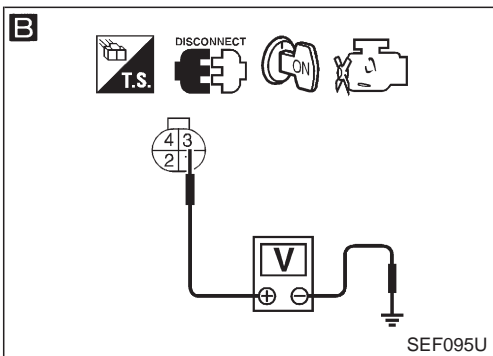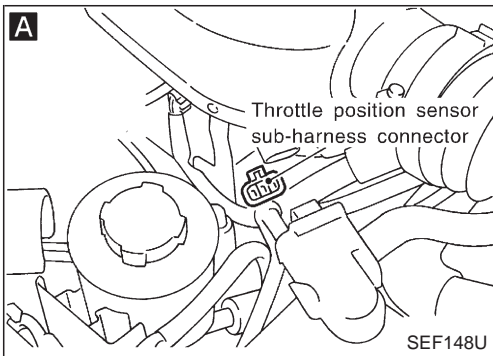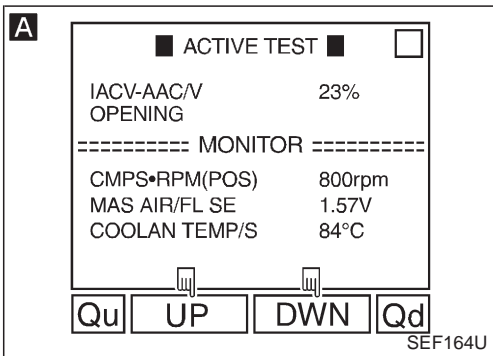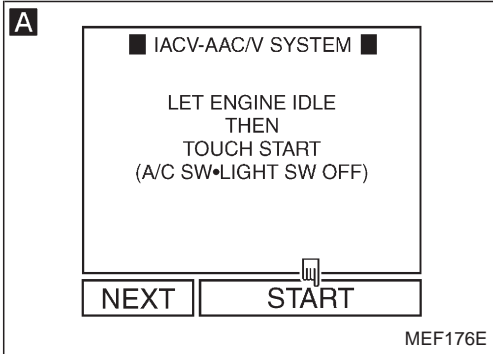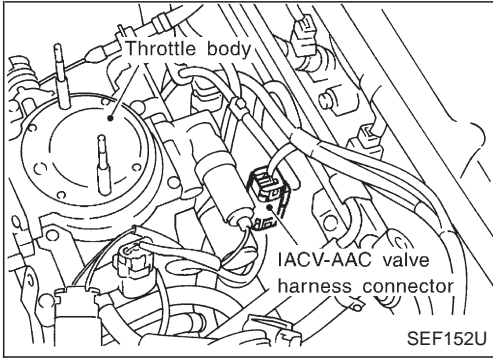

Idle Air Control Valve (IACV) — Auxiliary Air Control (AAC) Valve (Cont'd)

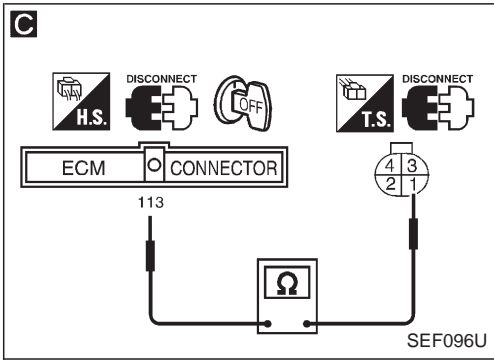

A

C

CHECK OUTPUT SIGNAL CIRCUIT.
 1. Turn ignition switch "OFF".
 2. Disconnect ECM harness connector.
 3. Check harness continuity between ECM terminal (113) and terminal (1).
Continuity should exist.
 If OK, check harness for short to ground and short to power.

NG →

Repair open circuit, short to ground or short to power in harness or connectors.

OK ↓

CHECK COMPONENT
 (IACV-AAC valve).
 Refer to "COMPONENT INSPECTION" below.

NG →

Replace IACV-AAC valve.

OK ↓


Disconnect and reconnect harness connectors in the circuit. Then retest.

Trouble is not fixed. ↓

Check ECM pin terminals for damage and check the connection of ECM harness connector. Reconnect ECM harness connector and retest.

↓

INSPECTION END

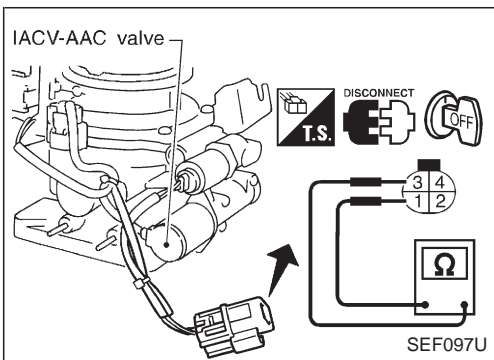

COMPONENT INSPECTION

IACV-AAC valve


Disconnect IACV-AAC valve harness connector.

- Check IACV-AAC valve resistance.

Resistance:

Approximately 10Ω at 25°C (77°F)

- Check plunger for seizing or sticking.
- Check for broken spring.

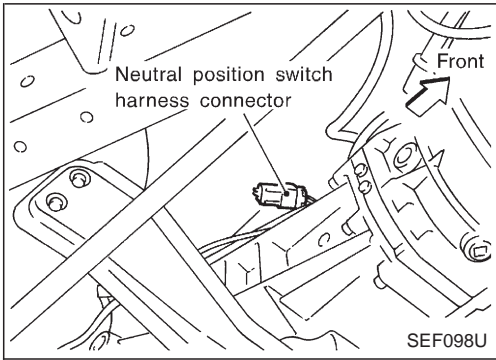

Neutral Position Switch

COMPONENT DESCRIPTION

When the gear position is in "Neutral", neutral position is "ON". ECM detects the position because the continuity of the line (the "ON" signal) exists.

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Remarks: Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
P/N POSI SW	● Ignition switch: ON	Shift lever: Neutral position ON
		Except above OFF



ECM TERMINALS AND REFERENCE VALUE

Remarks: Specification data are reference values, and are measured between each terminal and ③ (ECCS ground) with a voltmeter.

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
35	L/B	Neutral position	Ignition switch "ON" └ Neutral position	Approximately 0V
			Ignition switch "ON" └ Except the above gear position	Approximately 5V

Neutral Position Switch (Cont'd)







EC-PNP/SW-01

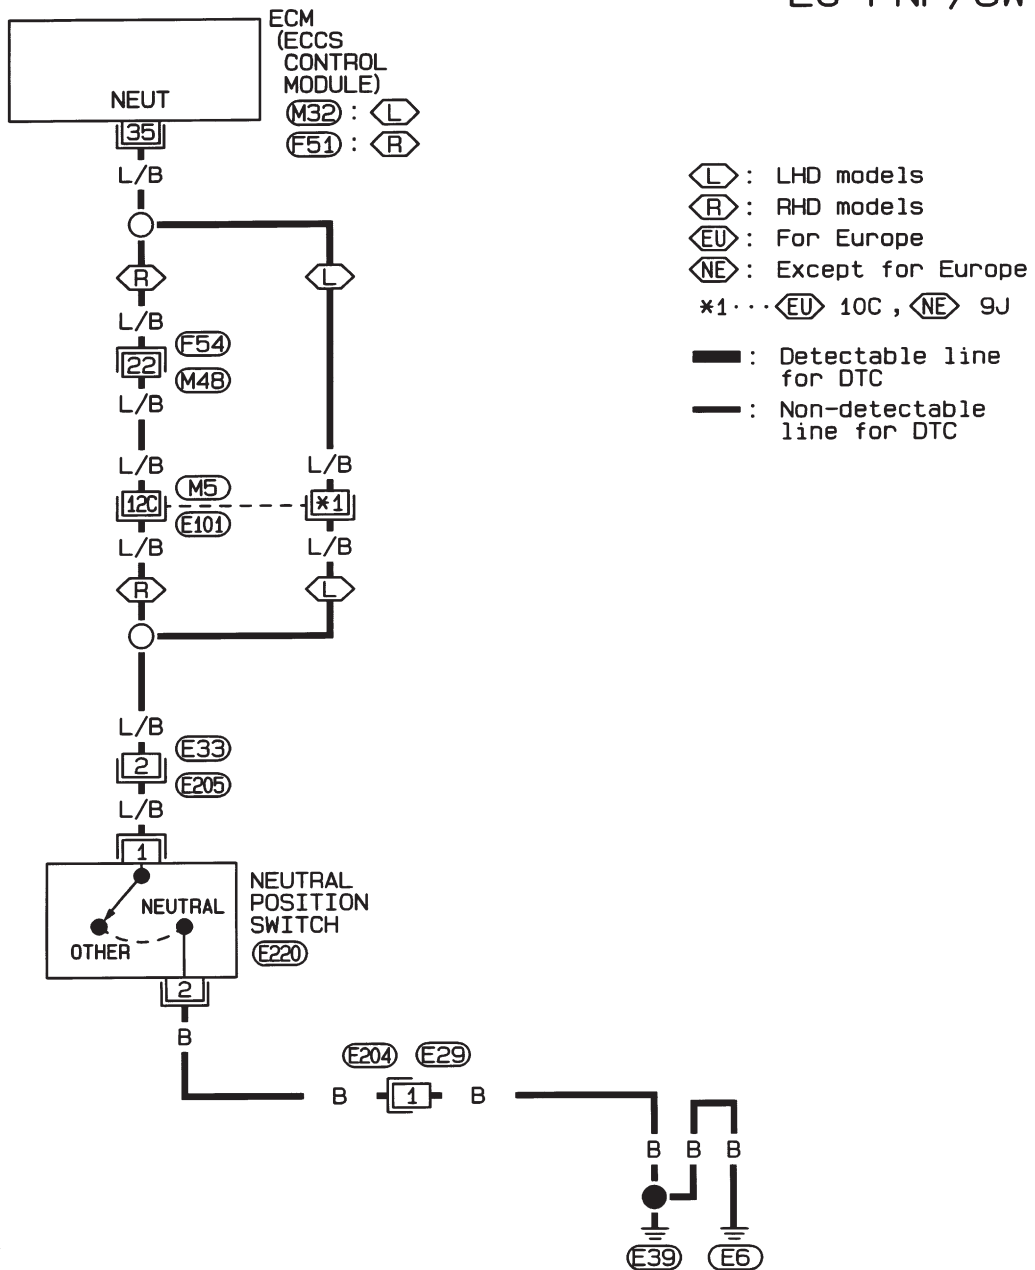



Refer to last page (Foldout page).


M5, E101

Neutral Position Switch (Cont'd)
DIAGNOSTIC PROCEDURE

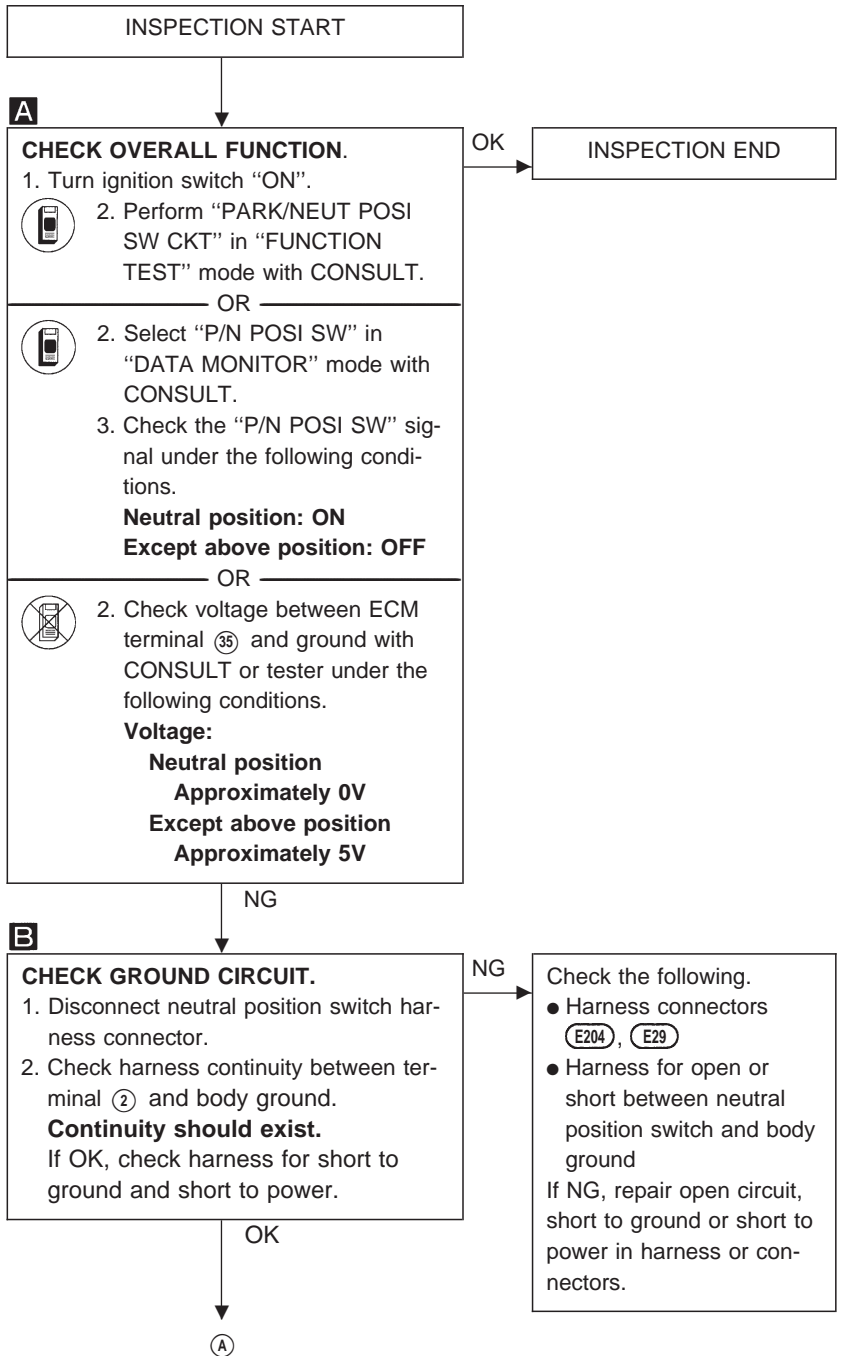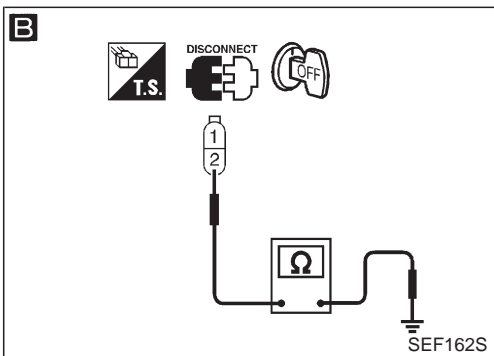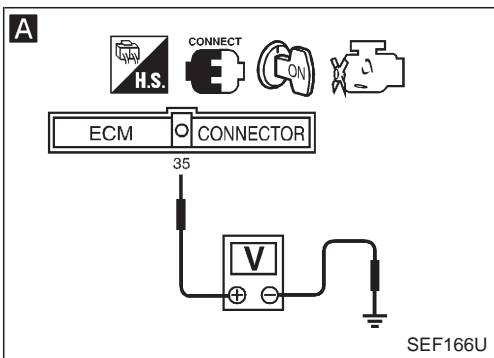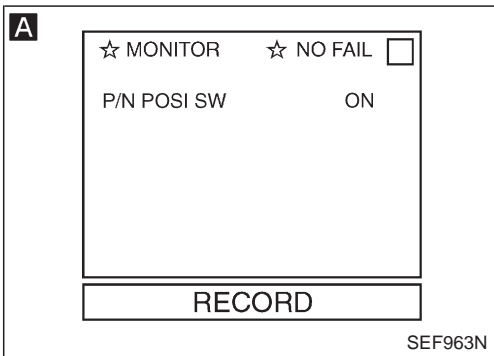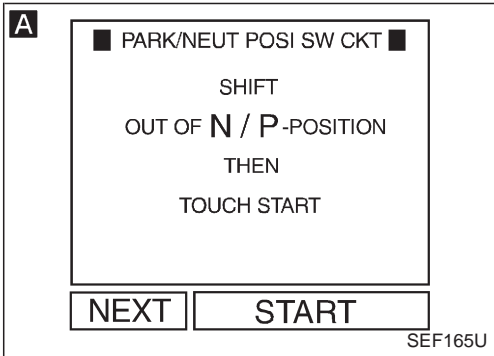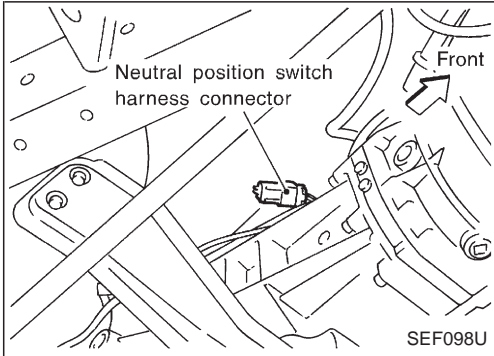

Neutral Position Switch (Cont'd)

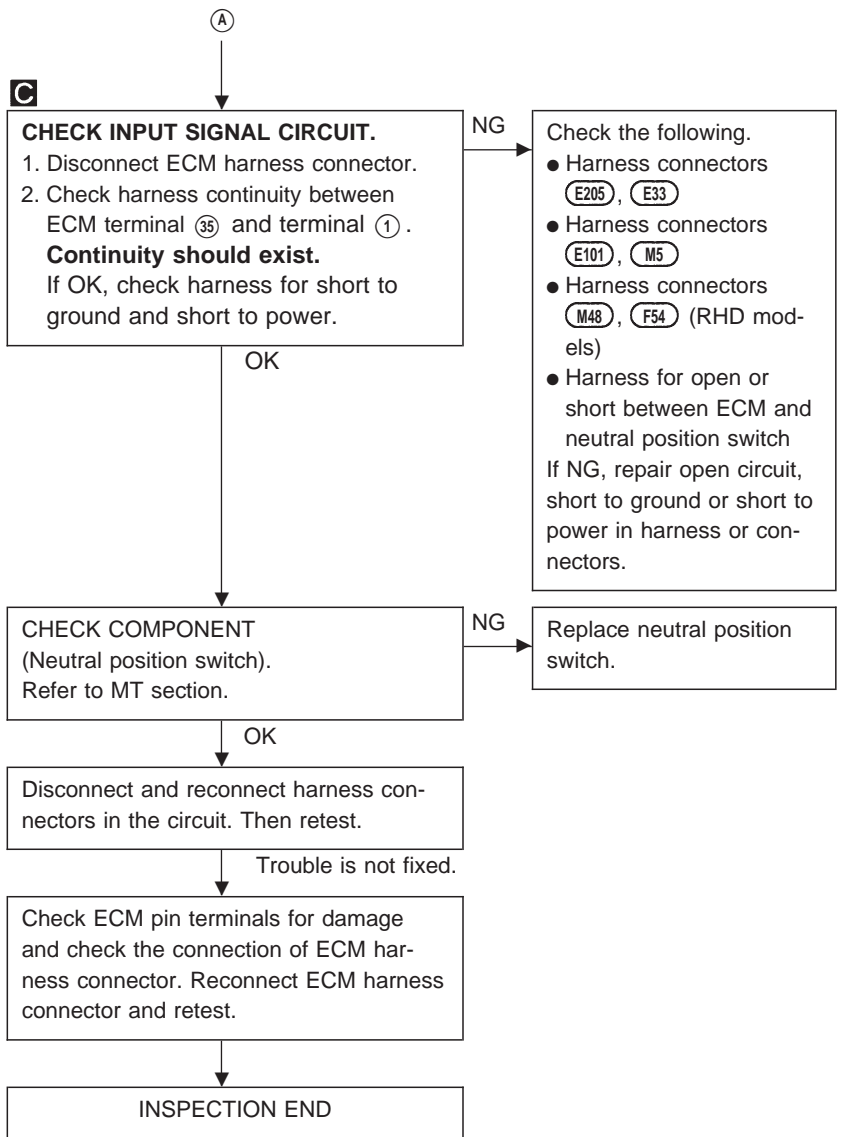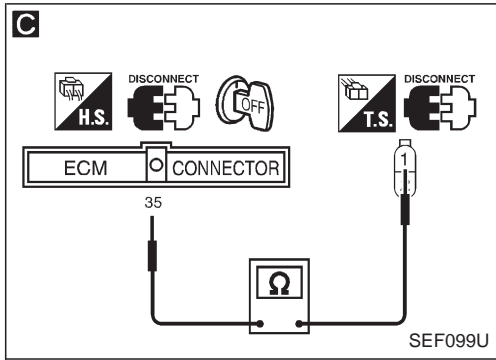

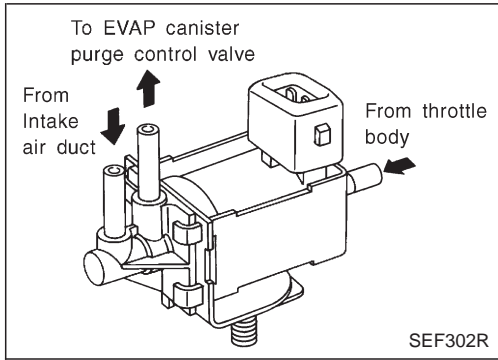

EVAP Canister Purge Control Solenoid Valve

COMPONENT DESCRIPTION

EVAP canister purge control solenoid valve

The EVAP canister purge control solenoid valve responds to signals from the ECM. When the ECM sends an OFF signal, the vacuum signal (from the throttle body to the EVAP canister purge control valve) passes through the EVAP canister purge control solenoid valve. The signal then reaches the EVAP canister purge control valve.

When the ECM sends an ON (ground) signal, the vacuum signal is cut.

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Remarks: Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
EGRC SOL/V	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: Neutral position ● No-load 	Idle	OFF
		Above 3,800 rpm	ON


ECM TERMINALS AND REFERENCE VALUE

Remarks: Specification data are reference values, and are measured between each terminal and Ⓣ (ECCS ground) with a voltmeter.


TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
105	W/L	EVAP canister purge control solenoid valve	Engine is running. (Warm-up condition) └ Idle speed	BATTERY VOLTAGE (11 - 14V)
			Engine is running. (Warm-up condition) └ Engine is above 3,800 rpm.	Approximately 1V

EVAP Canister Purge Control Solenoid Valve (Cont'd)

EC-PGC/V-01




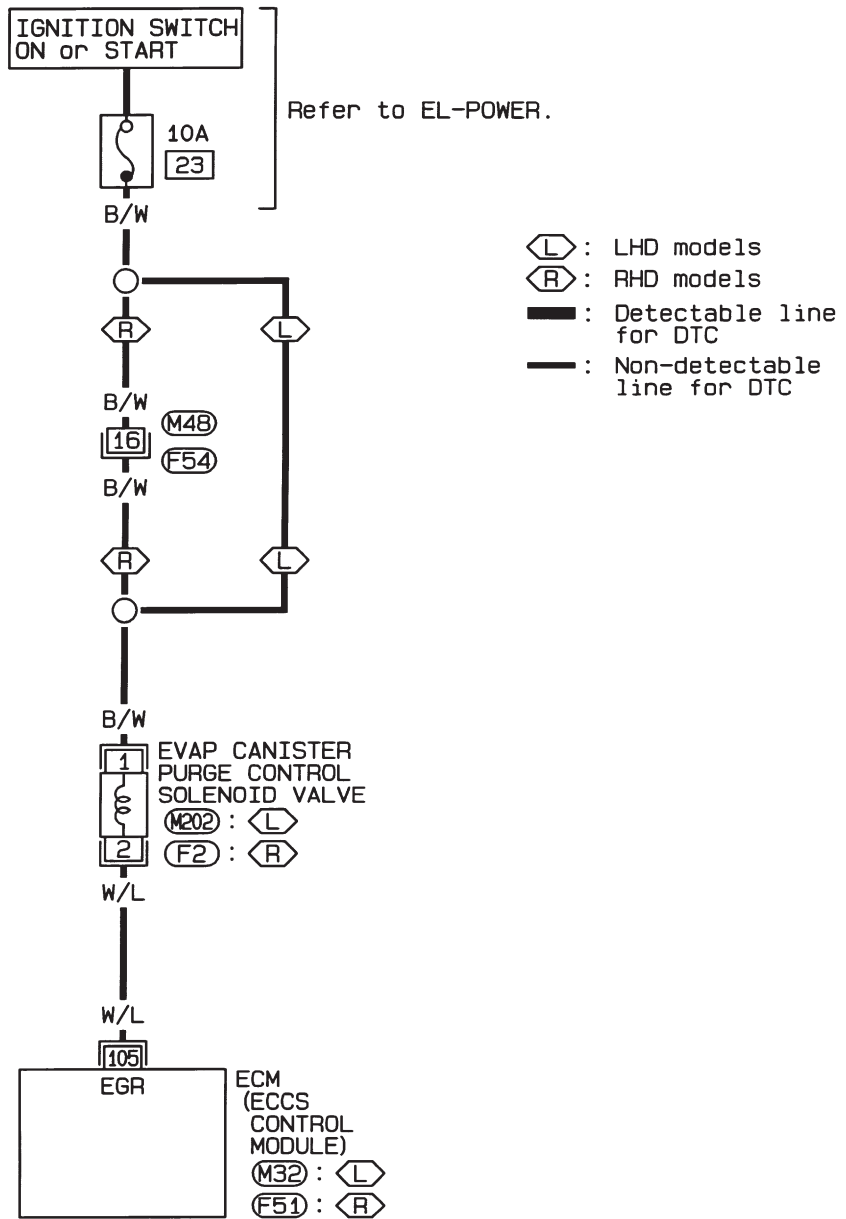


- ◁ : LHD models
- ▷ : RHD models
- : Detectable line for DTC
- - - : Non-detectable line for DTC





EVAP Canister Purge Control Solenoid Valve (Cont'd)

DIAGNOSTIC PROCEDURE

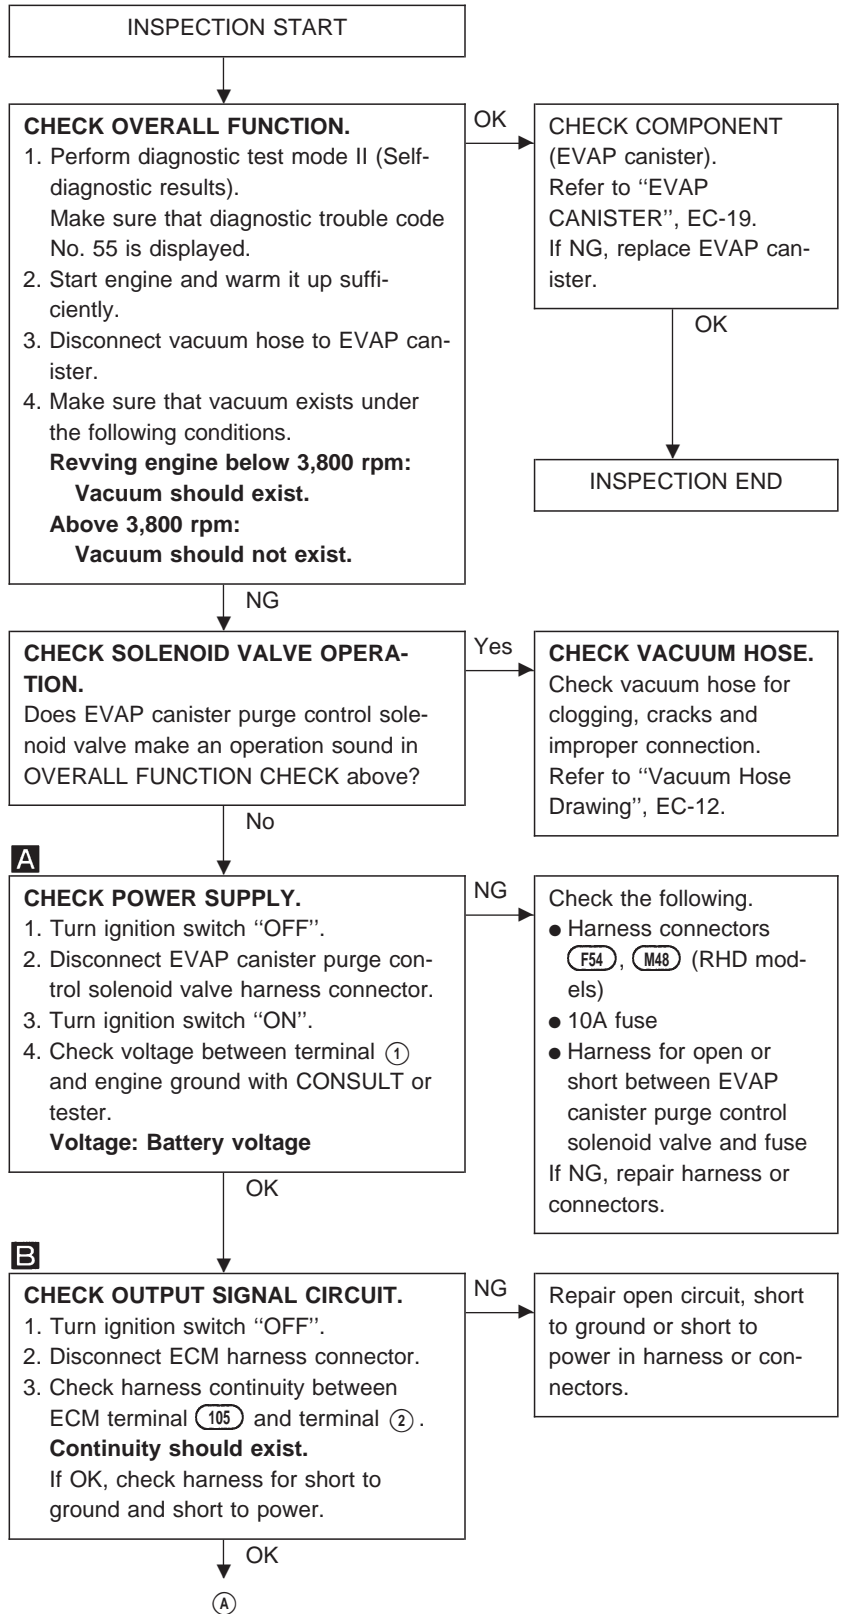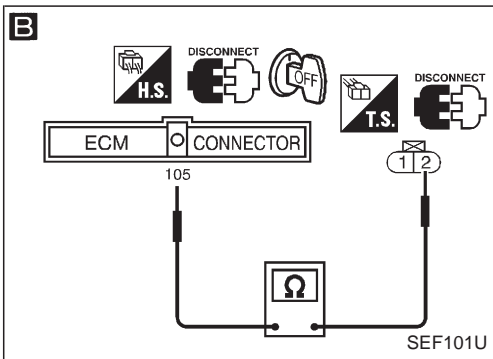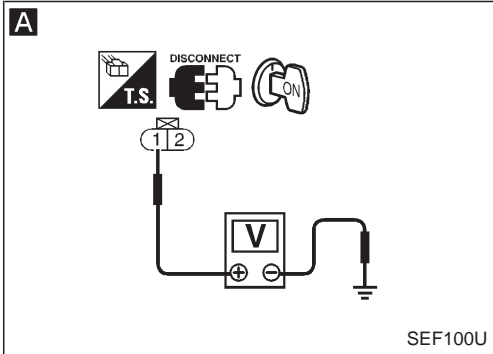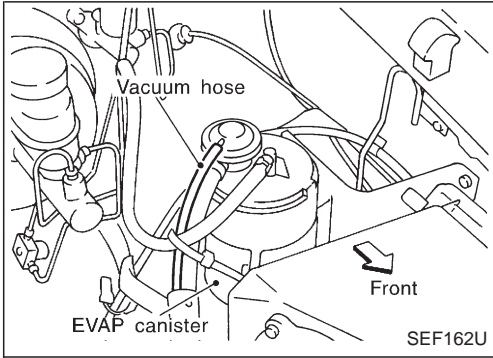

EVAP Canister Purge Control Solenoid Valve (Cont'd)

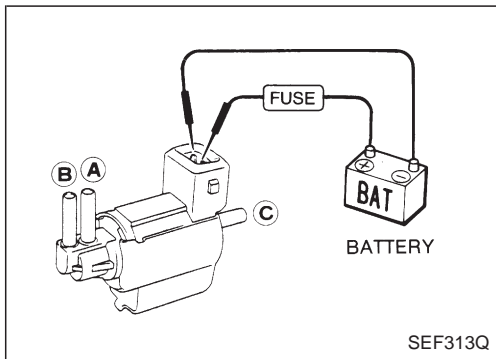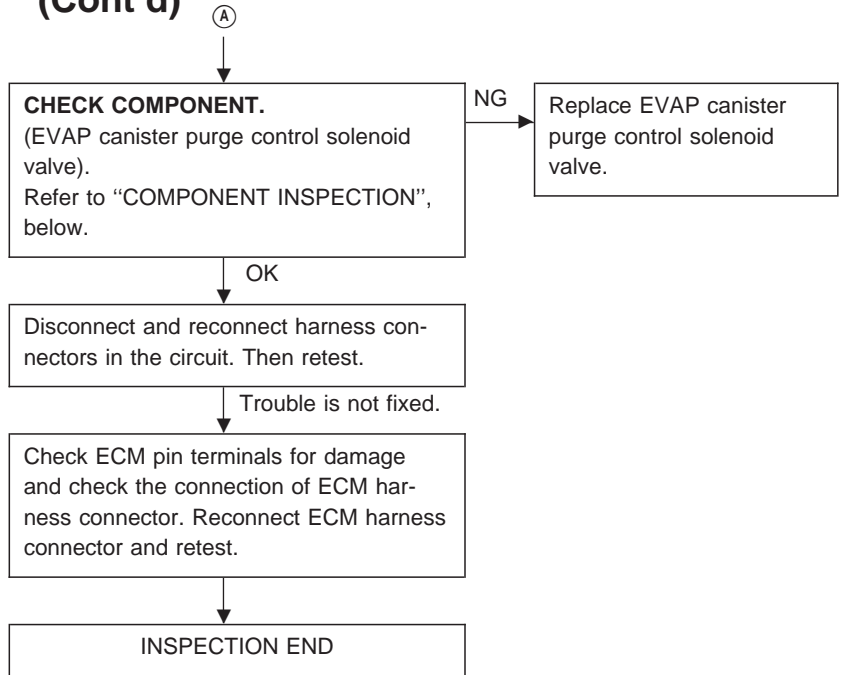

COMPONENT INSPECTION

EVAP canister purge control solenoid valve

Check air passage continuity.



Condition	Air passage continuity between (A) and (B)	Air passage continuity between (A) and (C)
12V direct current supply between terminals	Yes	No
No supply	No	Yes

If NG, replace solenoid valve.

Injector


LHD MODELS

EC-INJECT-01

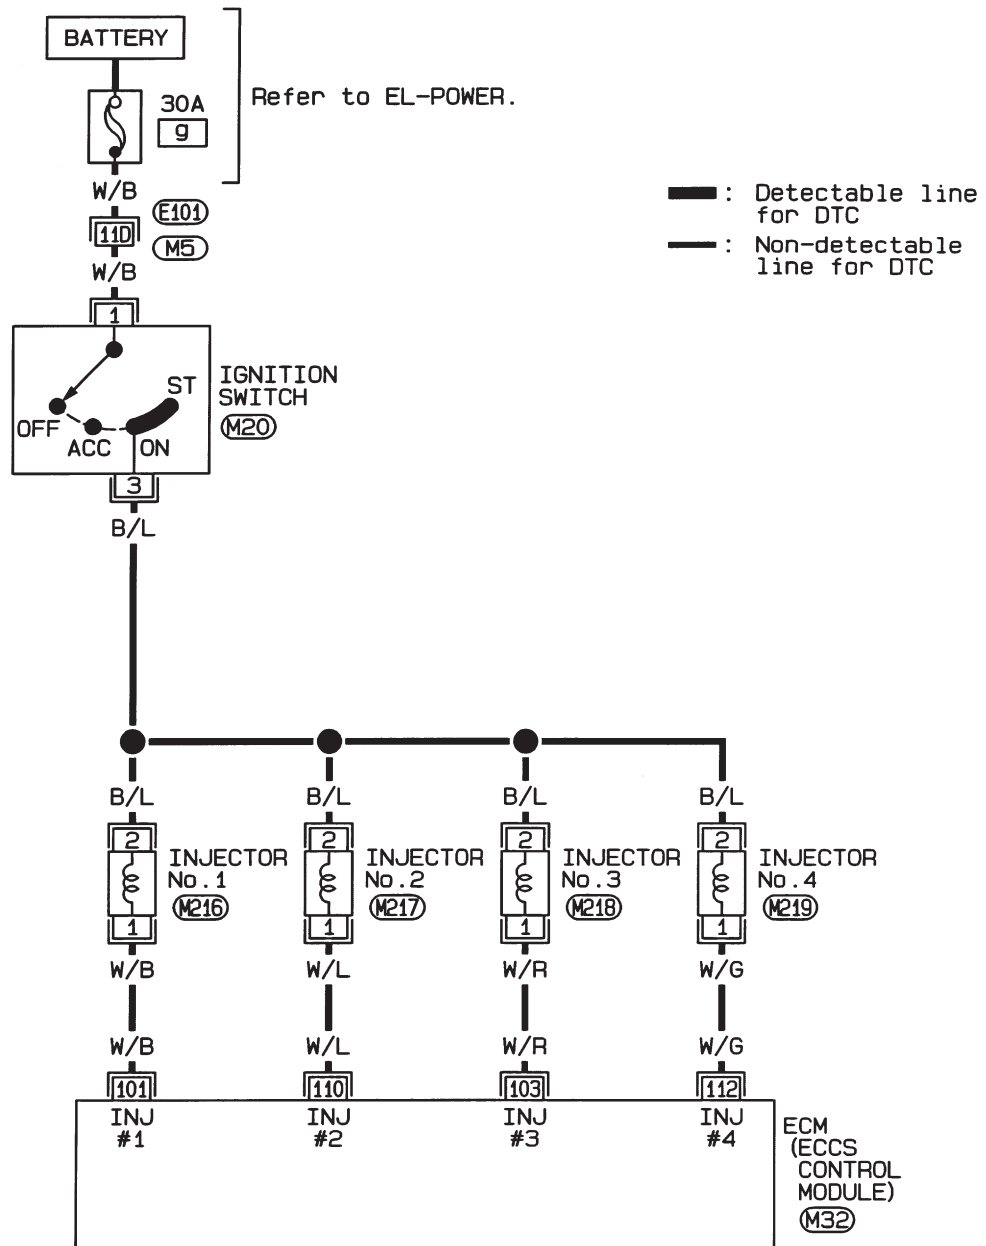

Refer to last page (Foldout page).




M5, E101




Injector (Cont'd)

RHD MODELS

EC-INJECT-02

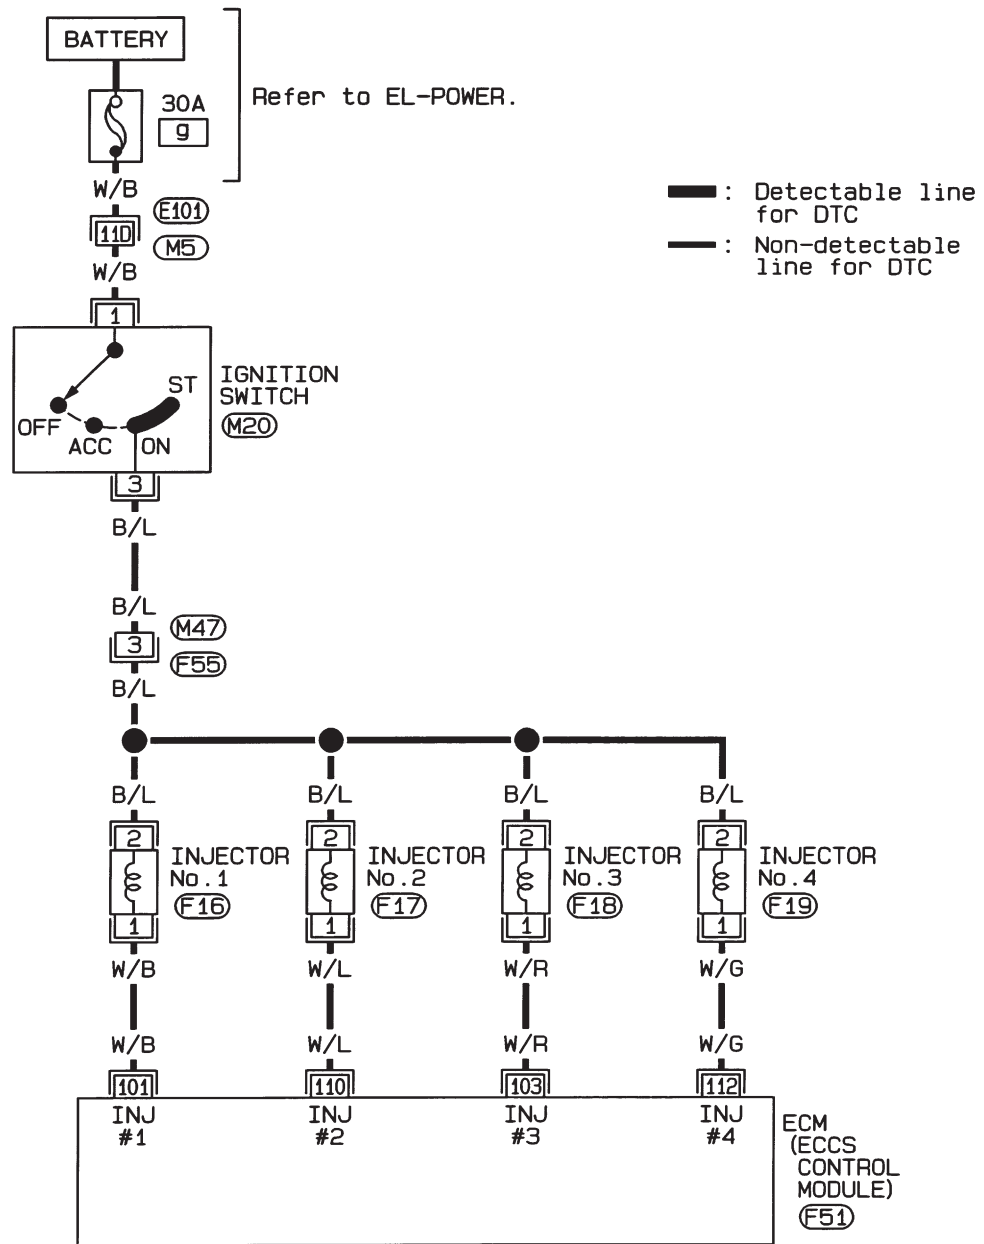


Refer to last page (Foldout page).



Injector (Cont'd)

COMPONENT DESCRIPTION

The fuel injector is a small, precise solenoid valve. When the ECM supplies a ground to the injector circuit, the coil in the injector is energized. The energized coil pulls the needle valve back and allows fuel to flow through the injector into the intake manifold. The amount of fuel injected depends upon the injection pulse duration. Pulse duration is the length of time the injector remains open. The ECM controls the injection pulse duration based on engine fuel needs.

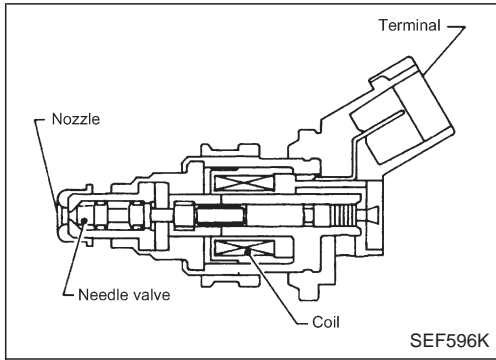







ECM TERMINALS AND REFERENCE VALUE

Remarks: Specification data are reference values, and are measured between each terminal and Ⓣ (ECCS ground) with a voltmeter.

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
101 103 110 112	W/B W/R W/L W/G	Injector No. 1 Injector No. 3 Injector No. 2 Injector No. 4	<p>Engine is running. (Warm-up condition)</p> <p>└ Idle speed</p>	<p>BATTERY VOLTAGE (11 - 14V)</p> <p>SEF069U</p>
			<p>Engine is running.</p> <p>└ Engine speed is 2,000 rpm.</p>	<p>BATTERY VOLTAGE (11 - 14V)</p> <p>SEF070U</p>

Injector (Cont'd)


DIAGNOSTIC PROCEDURE

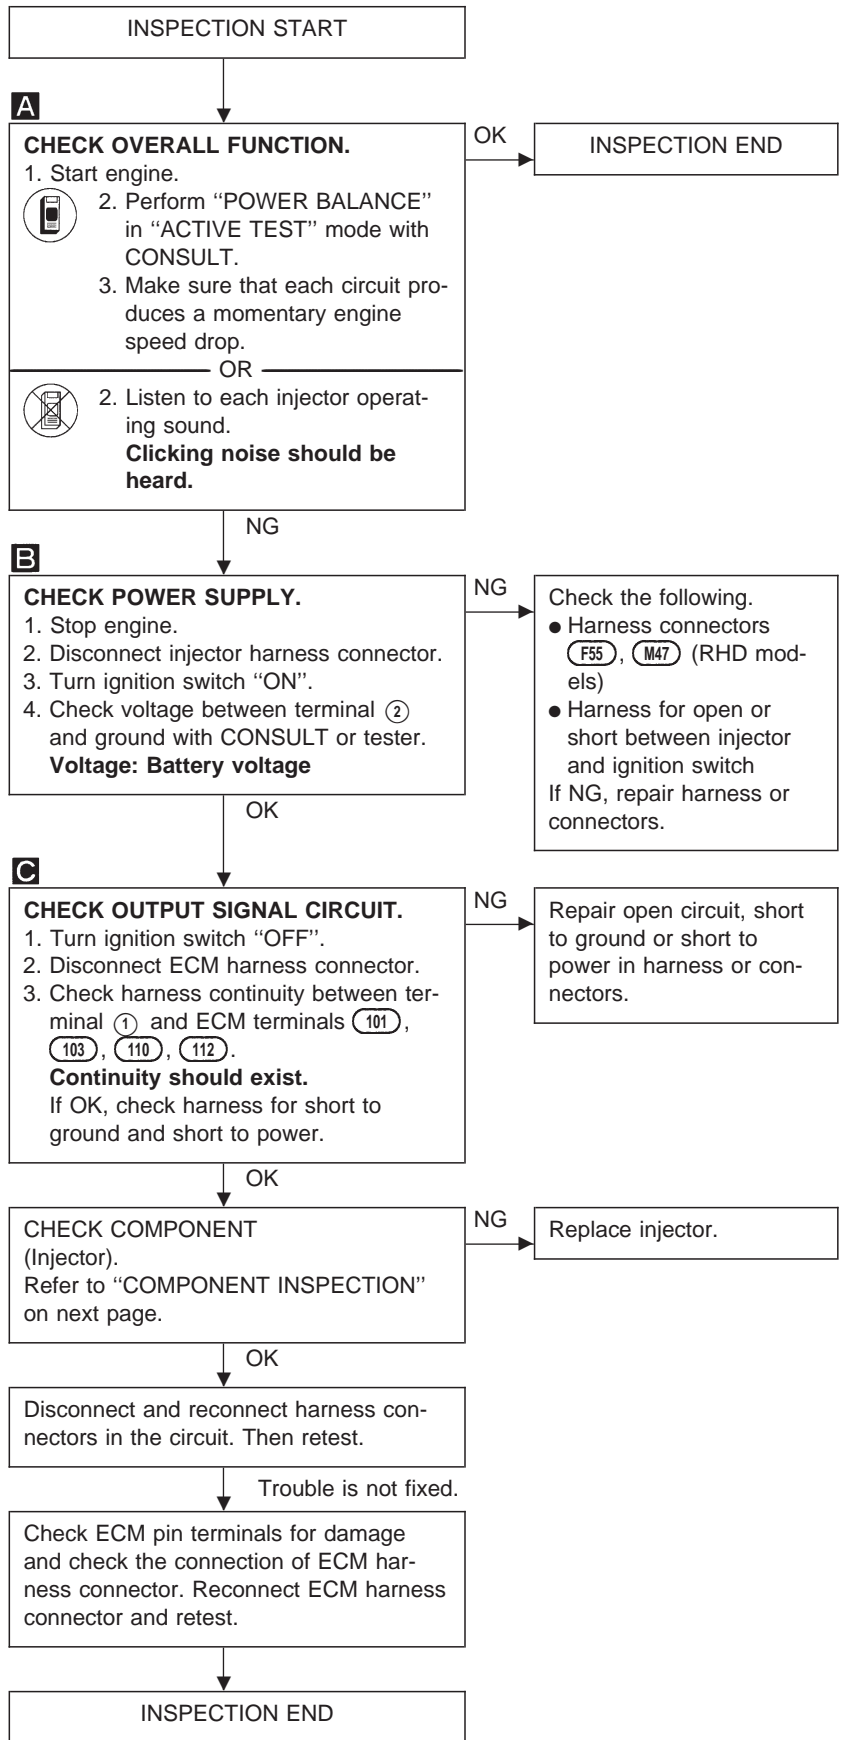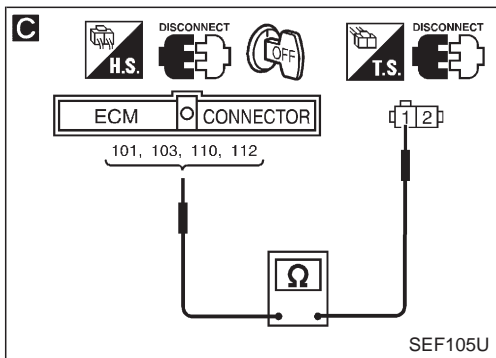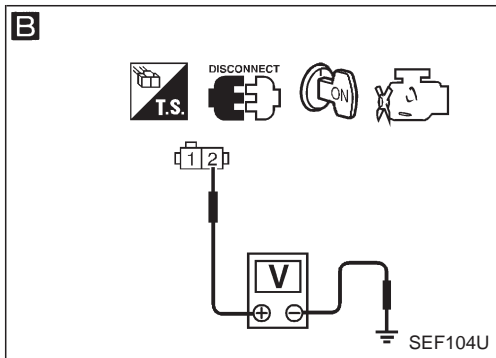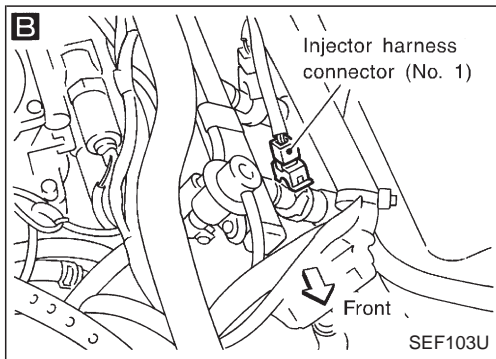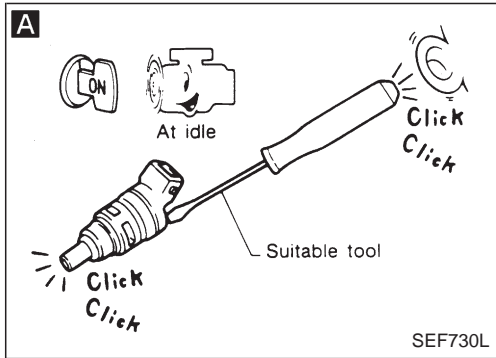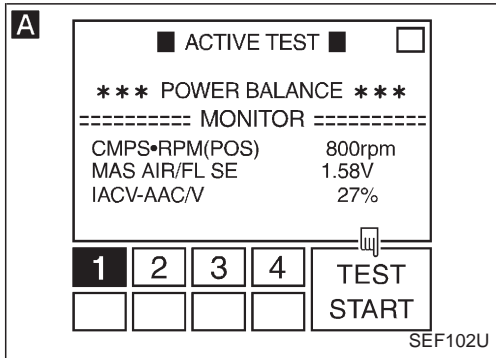

Injector (Cont'd) COMPONENT INSPECTION


Injector

1. Disconnect injector harness connector.
2. Check resistance between terminals as shown in the figure.
Resistance: 10 - 14 Ω at 25°C (77°F)
If NG, replace injector.

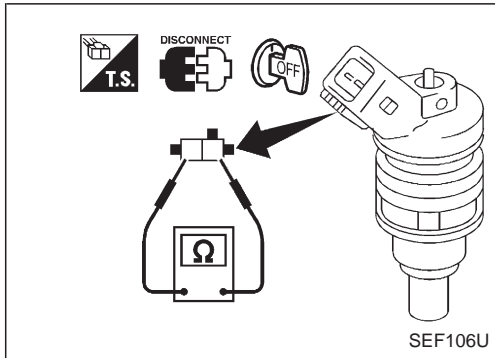

Start Signal

EC-S/SIG-01

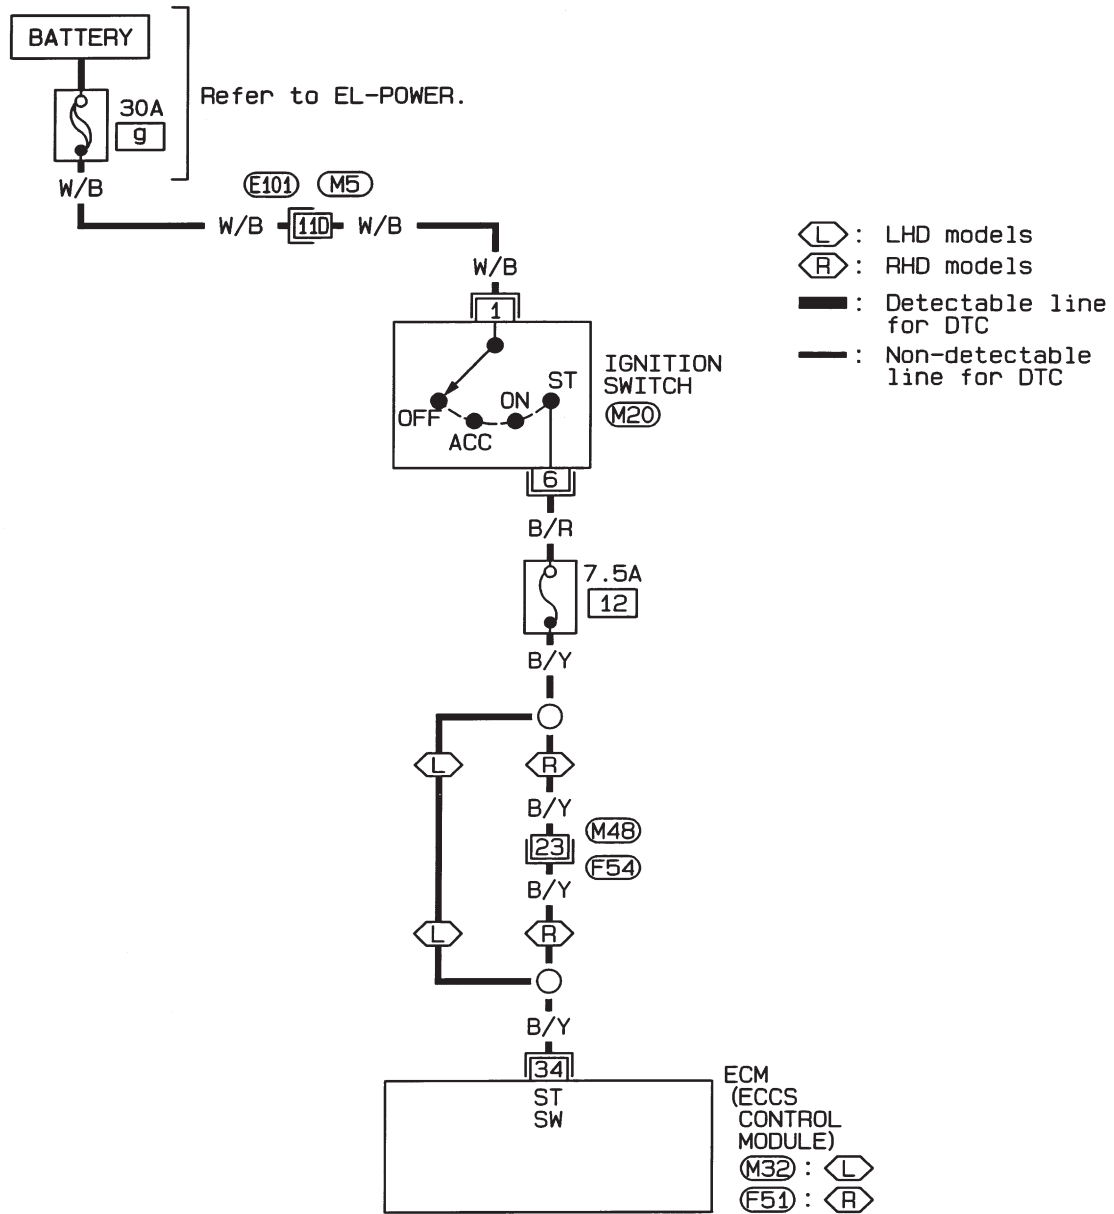

1	3	5	(M20)
6	2	4	W

1	2	3	4	5	6	7	8	9	10	(F54)				
11	12	13	14	15	16	17	18	19	20	21	22	23	24	W

Refer to last page (Foldout page).

(M5), (E101)

101	102	103	104	105	106	107	108	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	31	32	33	34	35	36	37	38	39	
109	110	111	112	113	114	115	116	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	40	41	42	43	44	45	46	47	48

(M32), (F51)
W, W



Start Signal (Cont'd) DIAGNOSTIC PROCEDURE

A

■ START SIGNAL CKT ■

1. CLOSE THROTTLE, SHIFT TO P OR N RANGE.
2. TOUCH START AND START ENGINE IMMEDIATELY.

NEXT
START

SEF191L




A

☆ MONITOR
☆ NO FAIL

START SIGNAL	OFF
CLSD THL/POSI	ON
AIR COND SIG	OFF
P/N POSI SW	ON


RECORD

SEF153U

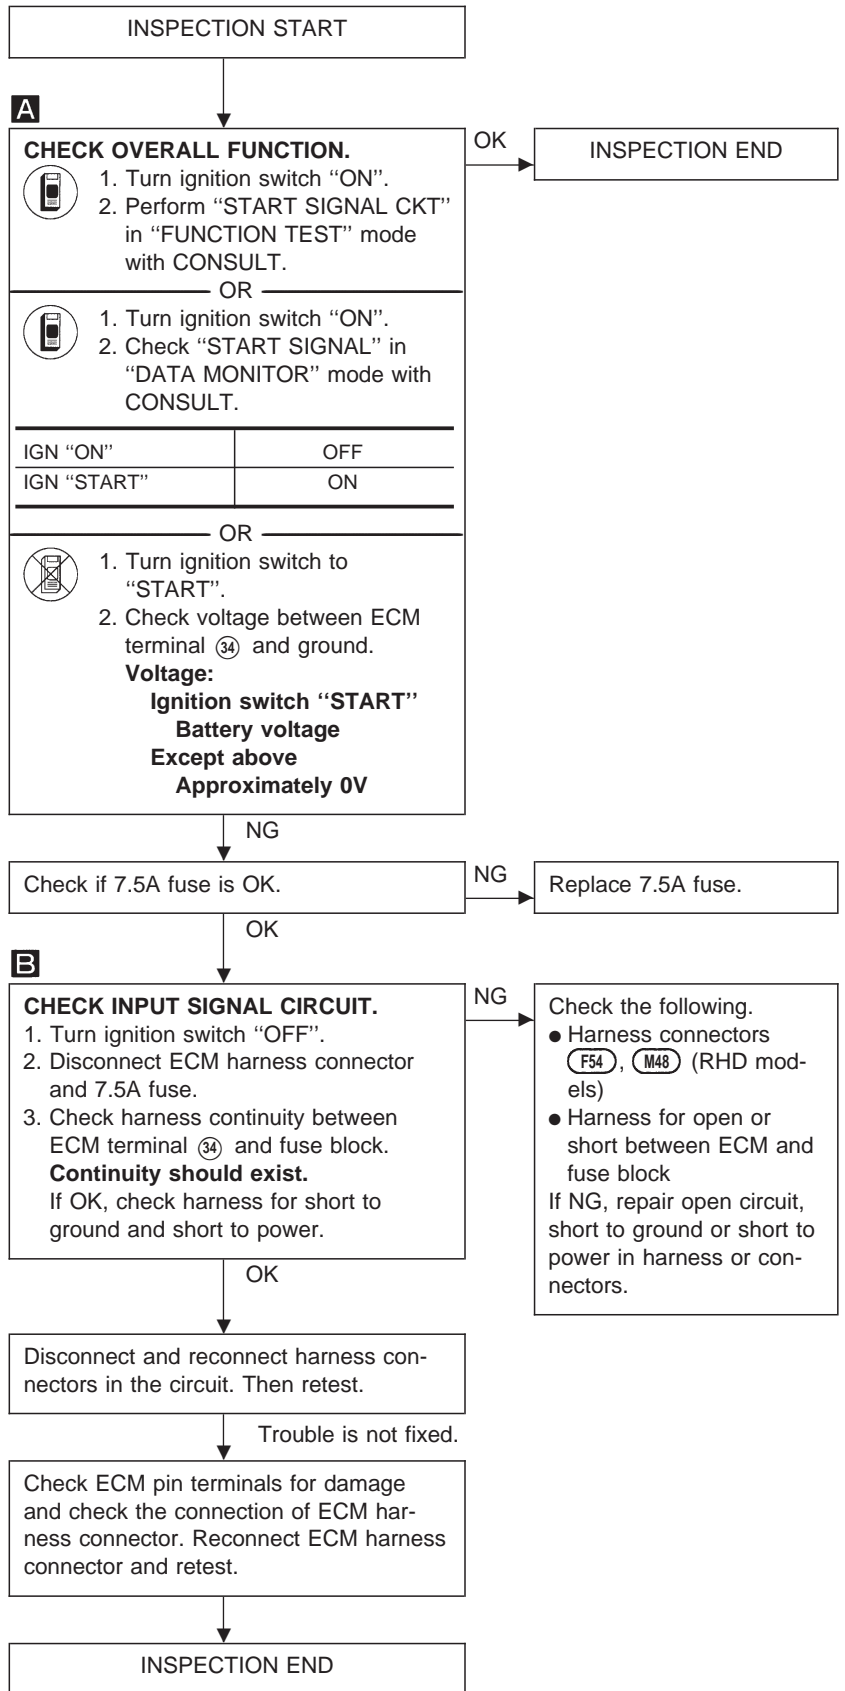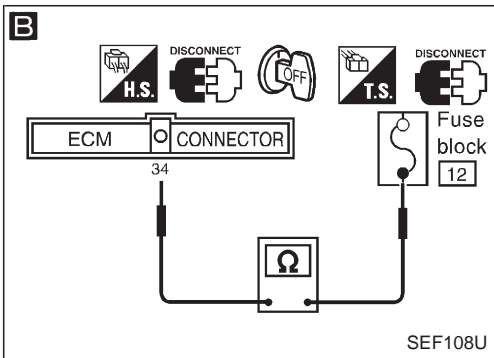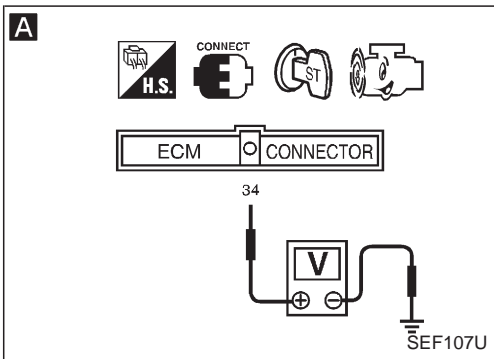


Fuel Pump

SYSTEM DESCRIPTION

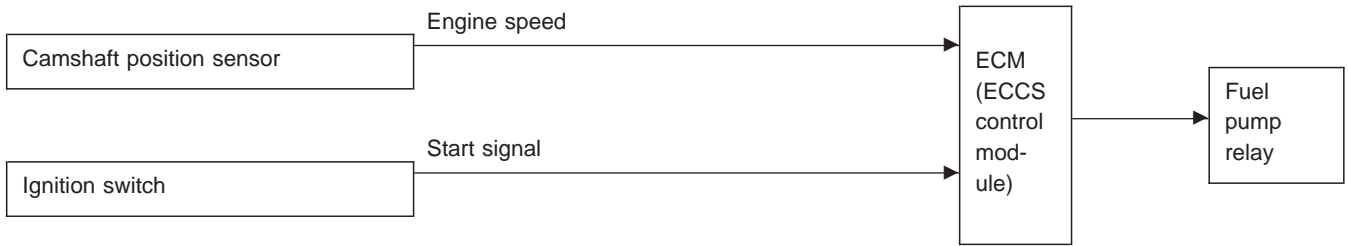

The ECM activates the fuel pump for several seconds after the ignition switch is turned on to improve engine startability. If the ECM receives a 180° signal from the camshaft position sensor, it knows that the engine is rotating, and causes the pump to operate. If the 180° signal is not received when the ignition switch is on, the engine stalls. The ECM stops pump operation and prevents battery discharging, thereby improving safety. The ECM does not directly drive the fuel pump. It controls the ON/OFF fuel pump relay, which in turn controls the fuel pump.

Condition	Fuel pump operation
Ignition switch is turned to ON.	Operates for 5 seconds.
Engine running and cranking	Operates.
When engine is stopped	Stops in 1 second.
Except as shown above.	Stops.

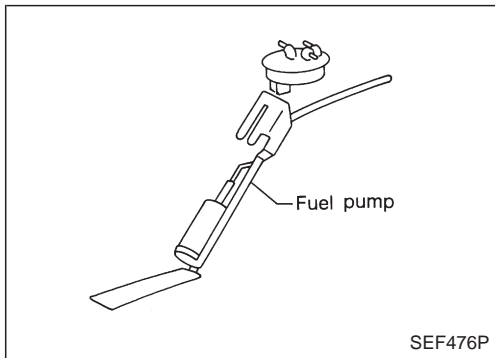

COMPONENT DESCRIPTION

The fuel pump with a fuel damper is an in-tank type (the pump and damper are located in the fuel tank).

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Remarks: Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
FUEL PUMP RLY	<ul style="list-style-type: none"> ● Ignition switch is turned to ON (Operates for 5 seconds). ● Engine running and cranking ● When engine is stopped (Stops in 1 second) 	ON
	Except as shown above	OFF

TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS

KA

Fuel Pump (Cont'd)

ECM TERMINALS AND REFERENCE VALUE


Remarks: Specification data are reference values, and are measured between each terminal and Ⓒ³⁹ (ECCS ground) with a voltmeter.

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
104	W/R	Fuel pump relay	Ignition switch "ON"	Approximately 1V
			└ For 5 seconds after turning ignition switch "ON"	
			Engine is running.	
			Ignition switch "ON"	BATTERY VOLTAGE (11 - 14V)
			└ 5 seconds after turning ignition switch "ON"	

Fuel Pump (Cont'd)





LHD MODELS

EC-F/PUMP-01

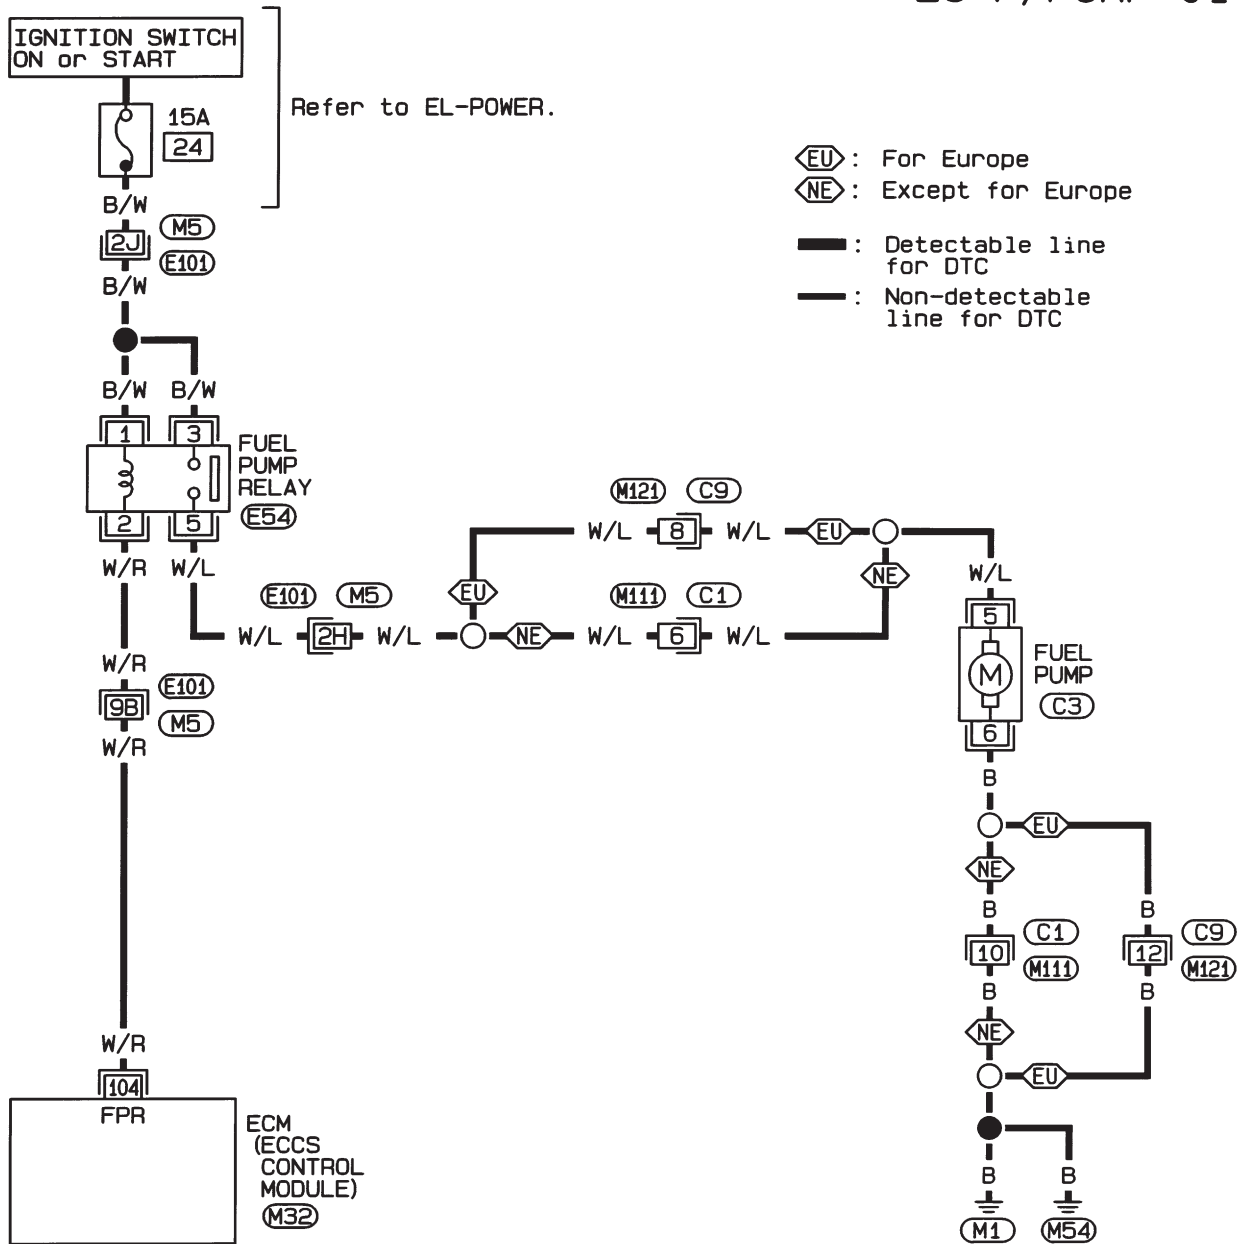


Refer to EL-POWER.

- ⊖EU : For Europe
- ⊖NE : Except for Europe
- : Detectable line for DTC
- - - : Non-detectable line for DTC



Refer to last page (Foldout page).




M5, E101



Fuel Pump (Cont'd)

RHD MODELS






EC-F/PUMP-02

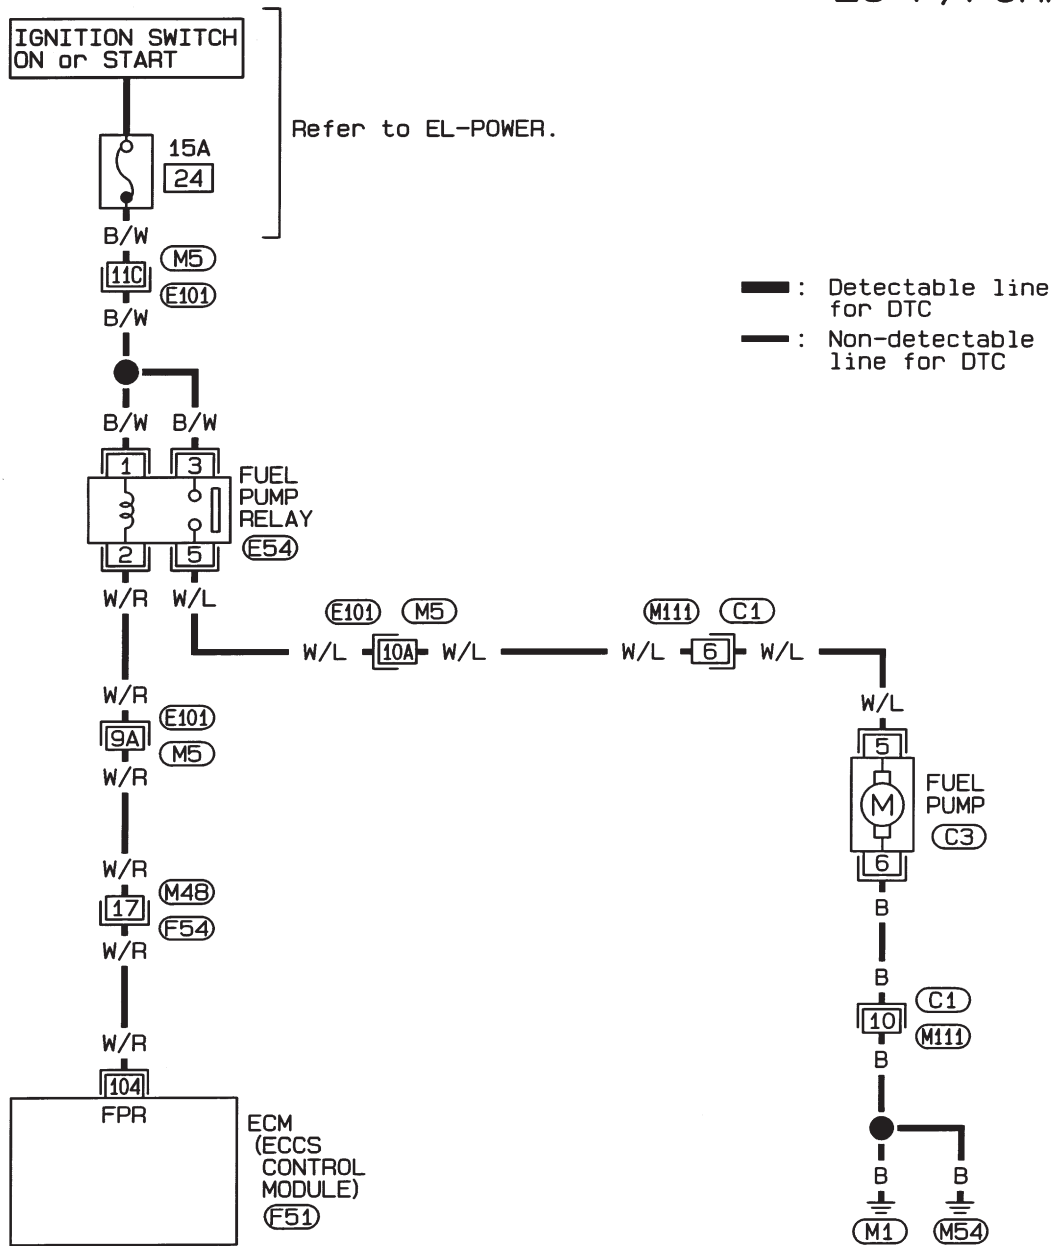



Refer to last page (Foldout page).

M5, E101

Fuel Pump (Cont'd)
DIAGNOSTIC PROCEDURE

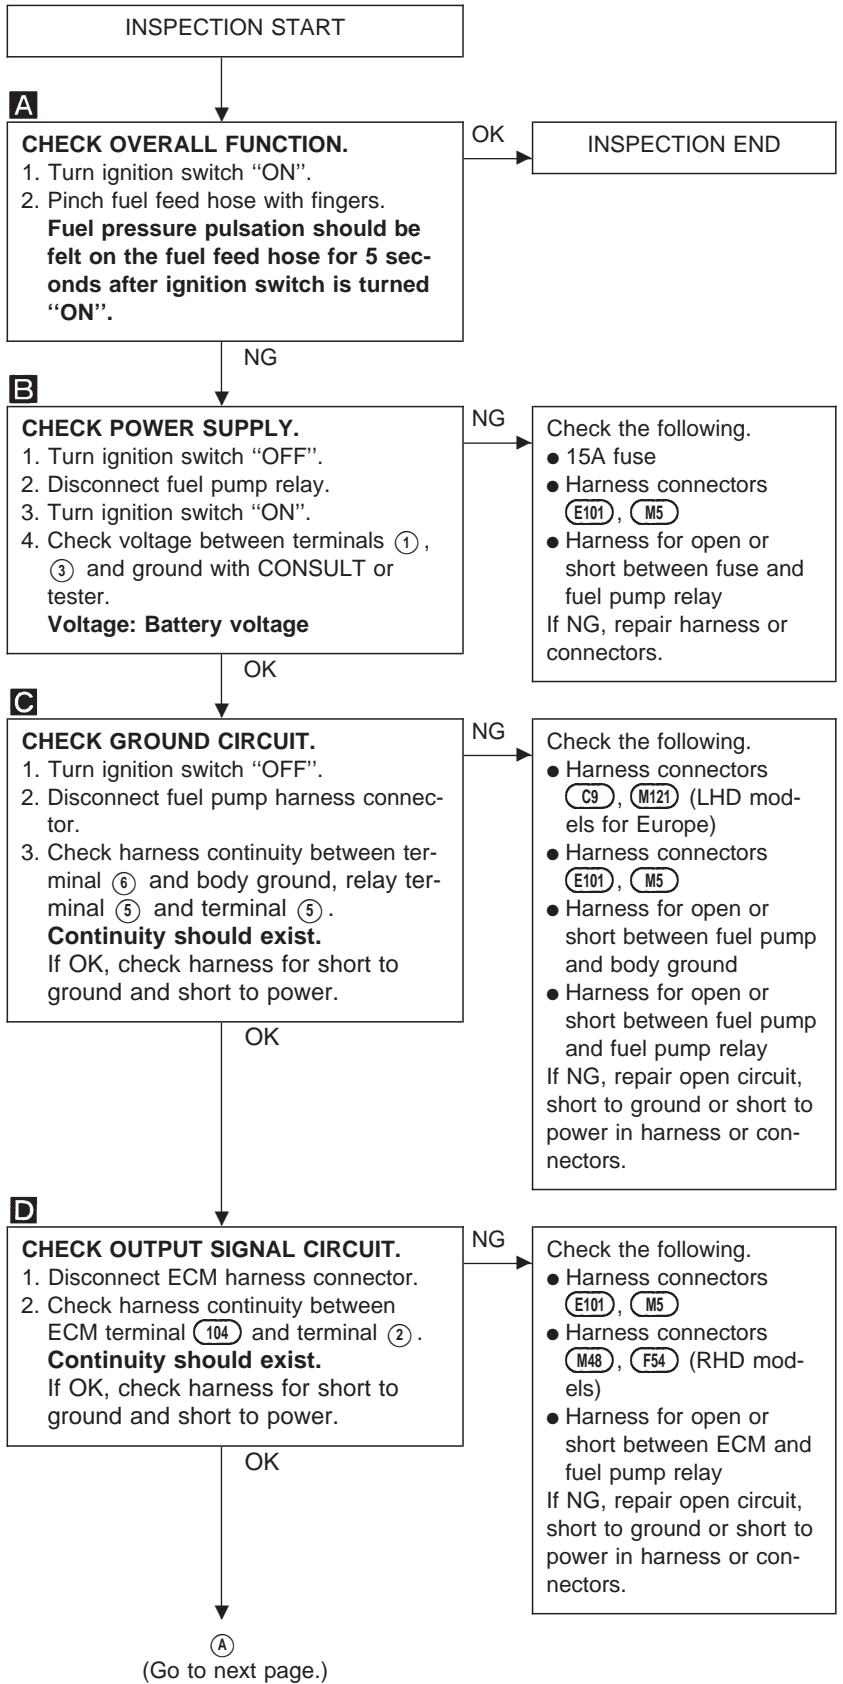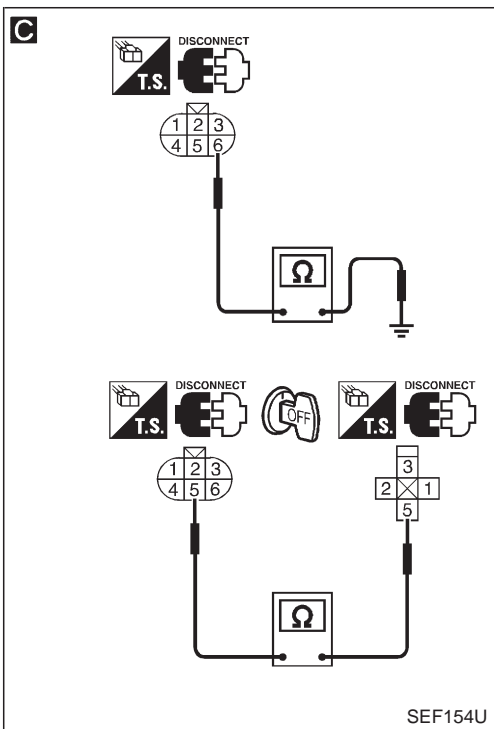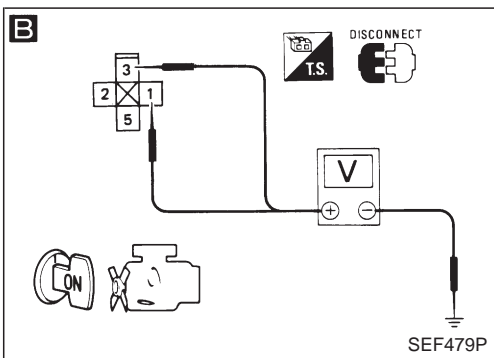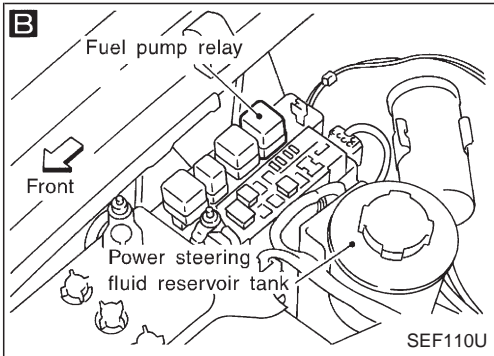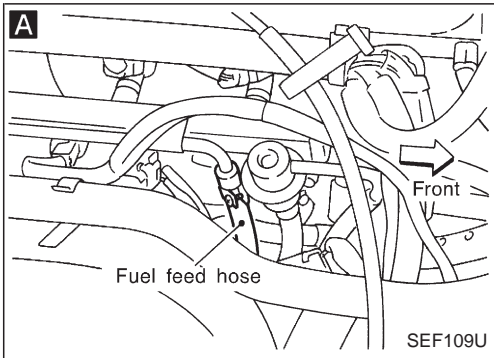

Fuel Pump (Cont'd)

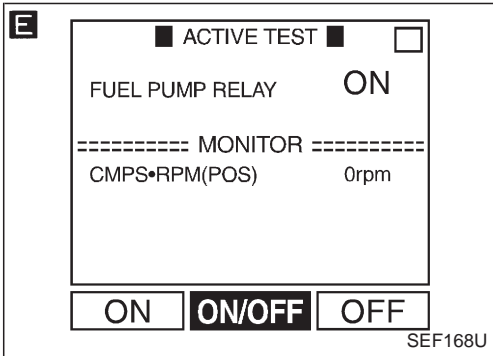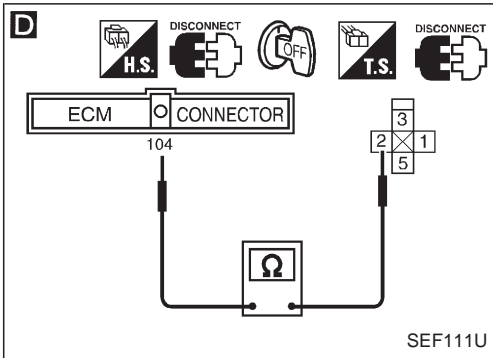

E

CHECK COMPONENT
(Fuel pump relay).
1. Reconnect fuel pump relay, fuel pump harness connector and ECM harness connector.
2. Turn ignition switch "ON".
3. Turn fuel pump relay "ON" and "OFF" in "ACTIVE TEST" mode with CONSULT and check operating sound.

OR

Refer to "COMPONENT INSPECTION" below.

NG → Replace fuel pump relay.

OK →

CHECK COMPONENT
(Fuel pump).
Refer to "COMPONENT INSPECTION" below.

NG → Replace fuel pump.

OK →


Disconnect and reconnect harness connectors in the circuit. Then retest.

↓ Trouble is not fixed.

Check ECM pin terminals for damage and check the connection of ECM harness connector. Reconnect ECM harness connector and retest.

↓

INSPECTION END

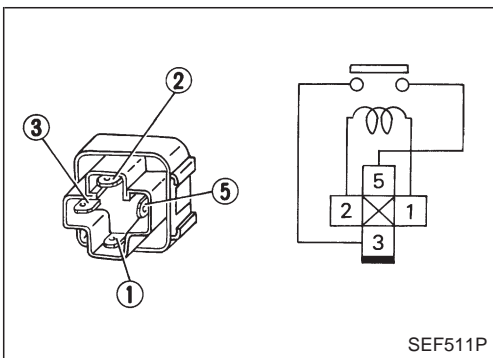

COMPONENT INSPECTION

Fuel pump relay

Check continuity between terminals ③ and ⑤.

Conditions	Continuity
12V direct current supply between terminals ① and ②	Yes
No current supply	No


If NG, replace relay.

Fuel pump

1. Disconnect fuel pump harness connector.
2. Check resistance between terminals ⑤ and ⑥.


Resistance: 0.2 - 5.0Ω at 25°C (77°F)

If NG, replace fuel pump.

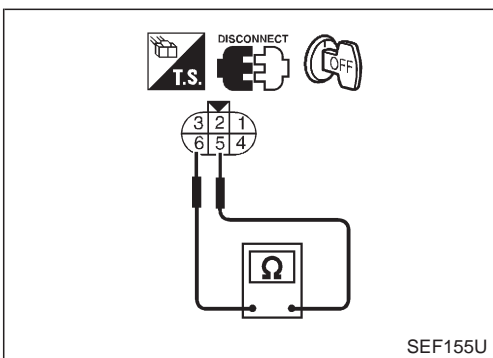


Power Steering Oil Pressure Switch

EC-PST/SW-01

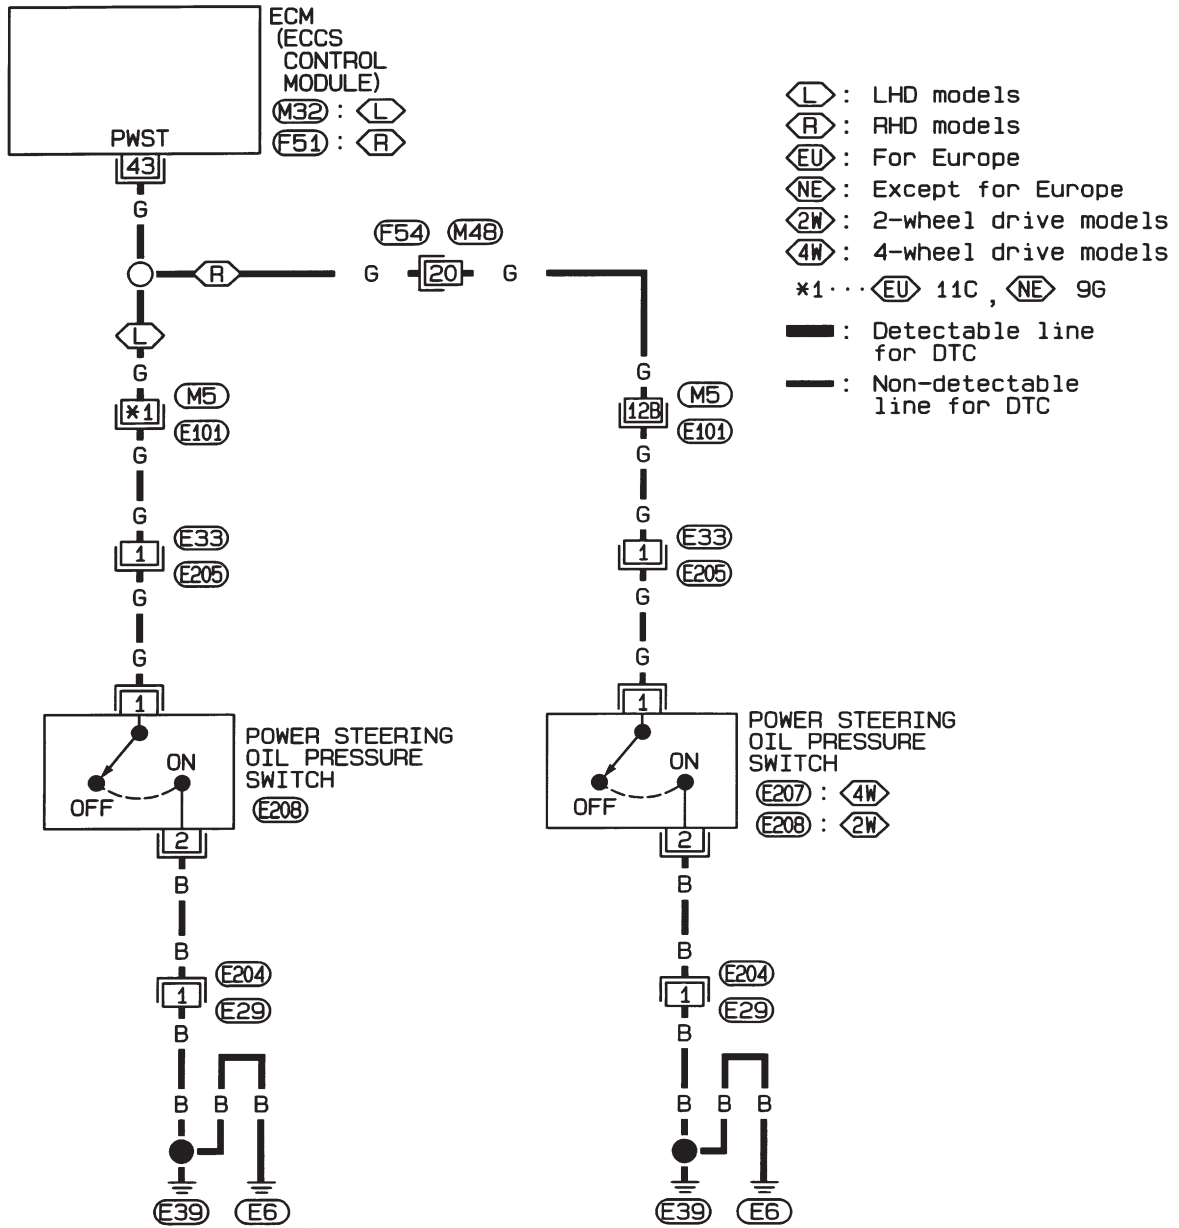


Refer to last page (Foldout page).



**Power Steering Oil Pressure Switch (Cont'd)
COMPONENT DESCRIPTION**

The power steering oil pressure switch is attached to the power steering high-pressure tube and detects a power steering load. When a power steering load is detected, it signals the ECM. The ECM adjusts the IACV-AAC valve to increase the idle speed and adjust for the increased load.

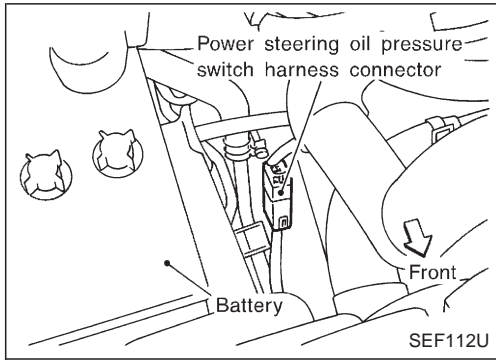

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Remarks: Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
PW/ST SIGNAL	● Engine: After warming up, idle the engine	Steering wheel in neutral position (forward direction)	OFF
		The steering wheel is turned	ON

ECM TERMINALS AND REFERENCE VALUE

Remarks: Specification data are reference values, and are measured between each terminal and ③⑨ (ECCS ground) with a voltmeter.

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
43	G	Power steering oil pressure switch	Engine is running. └ Steering wheel is being turned.	0V
			Engine is running. └ Steering wheel is not being turned.	Approximately 5V

Power Steering Oil Pressure Switch (Cont'd) DIAGNOSTIC PROCEDURE

A

■ PW/ST SIGNAL CIRCUIT ■

HOLD STEERING WHEEL
IN A FULL
LOCKED POSITION
THEN
TOUCH START

NEXT START

MEF023E

A

☆ MONITOR ☆ NO FAIL

PW/ST SIGNAL OFF

RECORD

SEF5911

A

H.S. CONNECT ON

ECM CONNECTOR

43

V

SEF113U

Power steering oil pressure switch harness connector

Battery

Front

SEF112U

B


T.S. DISCONNECT OFF

Except RHD 4WD models


RHD 4WD models

Ω

SEF156U

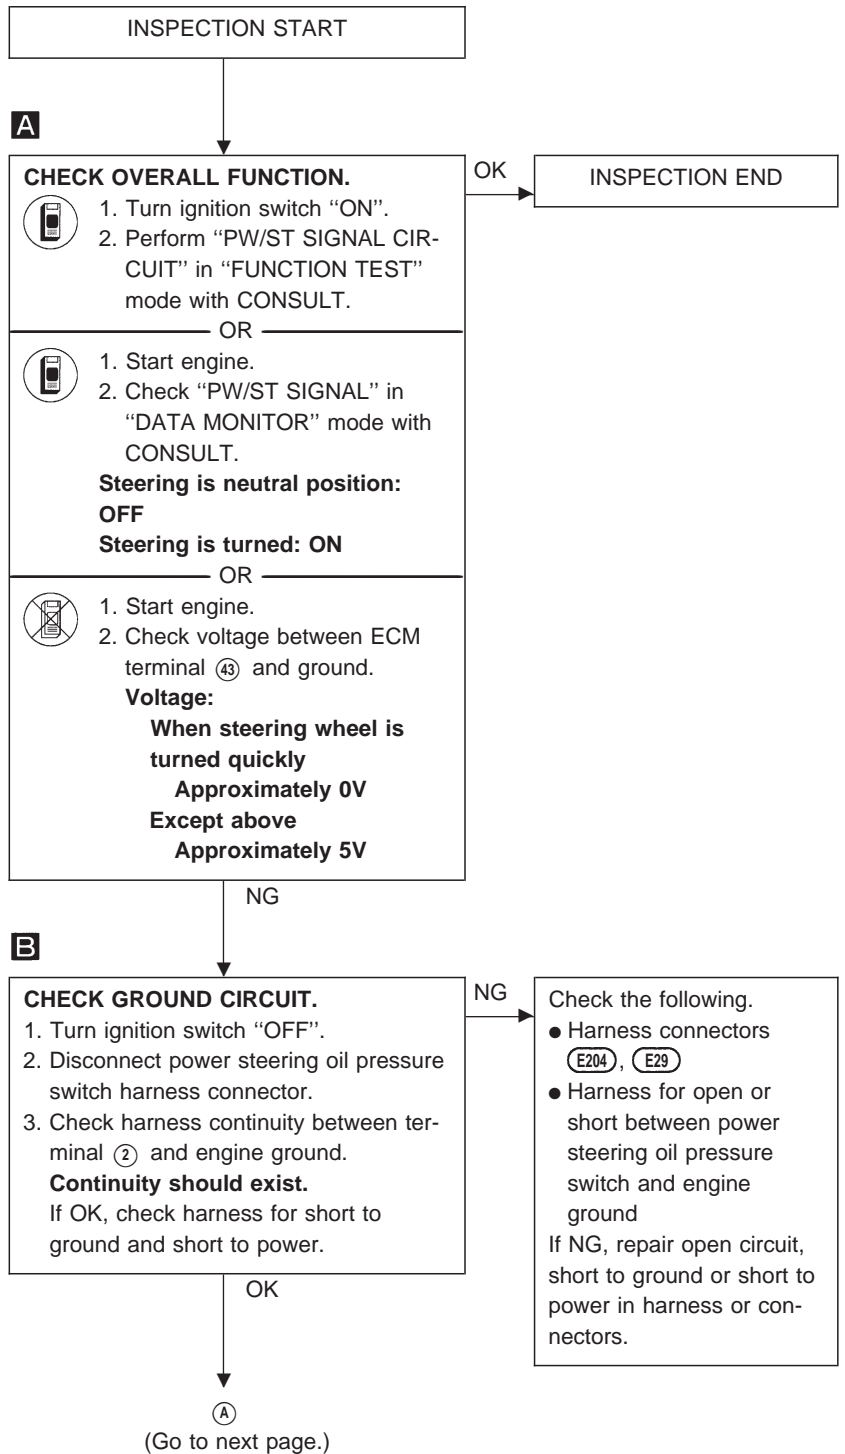

Power Steering Oil Pressure Switch (Cont'd)

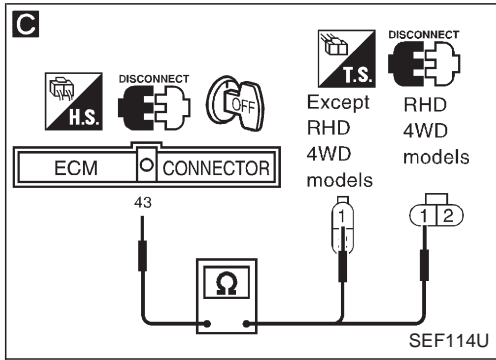

C

CHECK INPUT SIGNAL CIRCUIT.
 1. Disconnect ECM harness connector.
 2. Check harness continuity between ECM terminal (43) and terminal (1).
Continuity should exist.
 If OK, check harness for short to ground and short to power.

NG → Check the following.
 ● Harness connectors (E205), (E33)
 ● Harness connectors (E101), (M5)
 ● Harness connectors (M48), (F54) (RHD models)
 ● Harness for open or short between ECM and power steering oil pressure switch
 If NG, repair open circuit, short to ground or short to power in harness or connectors.


OK → **CHECK COMPONENT**
 (Power steering oil pressure switch). Refer to "COMPONENT INSPECTION" below.

NG → Replace power steering oil pressure switch.

OK → Disconnect and reconnect harness connectors in the circuit. Then retest.

Trouble is not fixed. → Check ECM pin terminals for damage and check the connection of ECM harness connector. Reconnect ECM harness connector and retest.

INSPECTION END

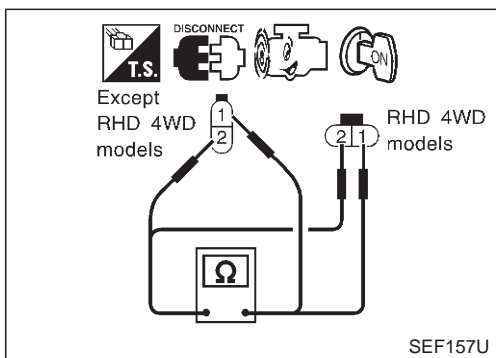

COMPONENT INSPECTION

Power steering oil pressure switch


1. Disconnect power steering oil pressure switch harness connector then start engine.
2. Check continuity between terminals (1) and (2).

Conditions	Continuity
Steering wheel is being turned	Yes
Steering wheel is not being turned	No

If NG, replace power steering oil pressure switch.

Swirl Control Valve Control Solenoid Valve

SYSTEM DESCRIPTION

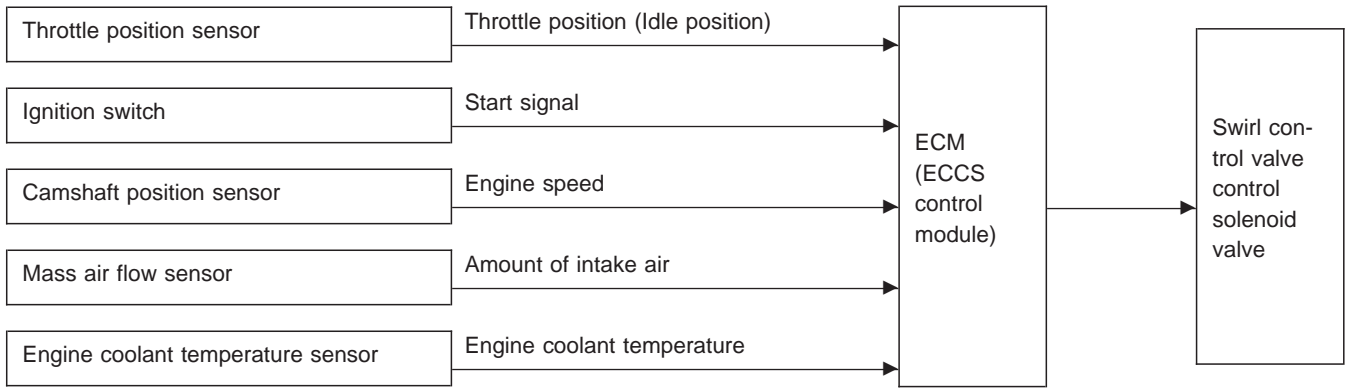

This system has a swirl control valve in the intake passage of each cylinder. While idling and during low engine speed operation, the swirl control valve closes. Thus the velocity of the air in the intake passage increases, promoting the vaporization of the fuel and producing a swirl in the combustion chamber. Because of this operation, this system tends to increase the burning speed of the gas mixture, improve fuel consumption, and increase the stability in running conditions. Also, except when idling and during low engine speed operation, this system opens the swirl control valve. In this condition, this system tends to increase power by improving intake efficiency via reduction of intake flow resistance, intake flow.

The solenoid valve controls swirl control valve's shut/open condition. This solenoid valve is operated by the ECM.

Throttle position switch	Engine speed	Swirl control valve control solenoid valve	Swirl control valve
Idle	Below 3,600 rpm	ON	Closed
Except idle	More than 3,600 rpm	OFF	Open

When engine coolant temperature is below 0°C (32°F) swirl control valve is kept open.

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Remarks: Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
SWRL CONT S/V	● Engine is running at a speed of less than 3,600 rpm.	ON
	● Except above	OFF


ECM TERMINALS AND REFERENCE VALUE

Remarks: Specification data are reference values, and are measured between each terminal and ③ (ECCS ground) with a voltmeter.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
12	GY	Swirl control valve control solenoid valve	Engine is running. └ Idle speed	0 - 1V
			Engine is running. └ Engine speed is above 3,600 rpm.	BATTERY VOLTAGE (11 - 14V)



**Swirl Control Valve Control Solenoid Valve
(Cont'd)****COMPONENT DESCRIPTION****Swirl control valve control solenoid valve**

The swirl control valve control solenoid valve responds to signals from the ECM. When the ECM sends an ON (ground) signal, the solenoid valve is bypassed to apply intake manifold vacuum to the swirl control valve actuator. This operation closes the swirl control valve. When the ECM sends an OFF signal, the vacuum signal is cut and the swirl control valve opens.

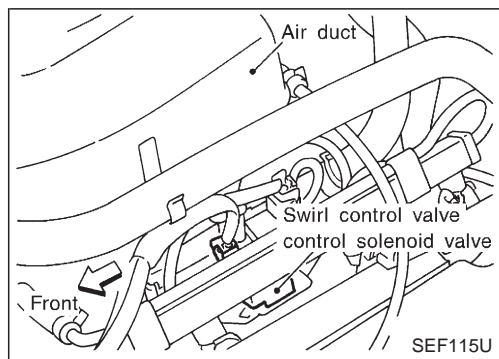






Swirl Control Valve Control Solenoid Valve
(Cont'd)

EC-SWL/V-01

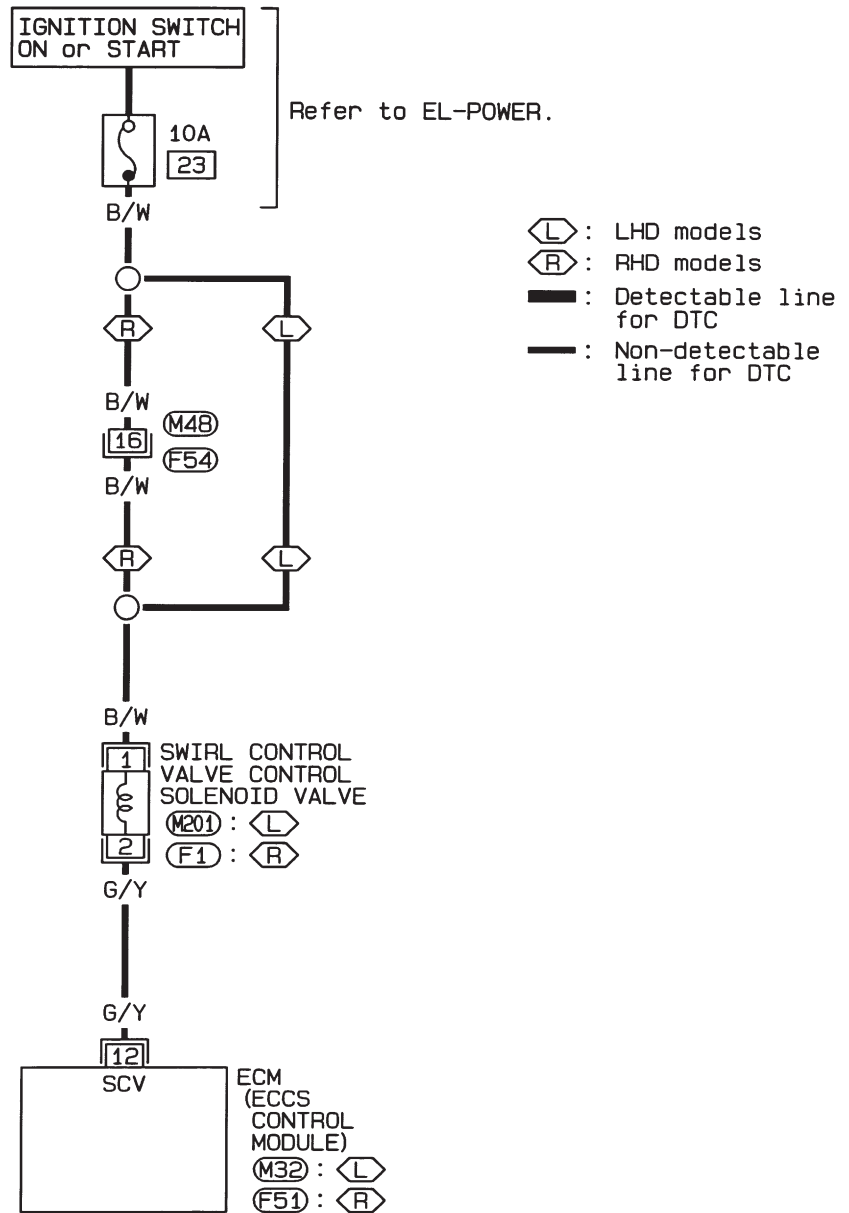

Swirl Control Valve Control Solenoid Valve (Cont'd)

DIAGNOSTIC PROCEDURE

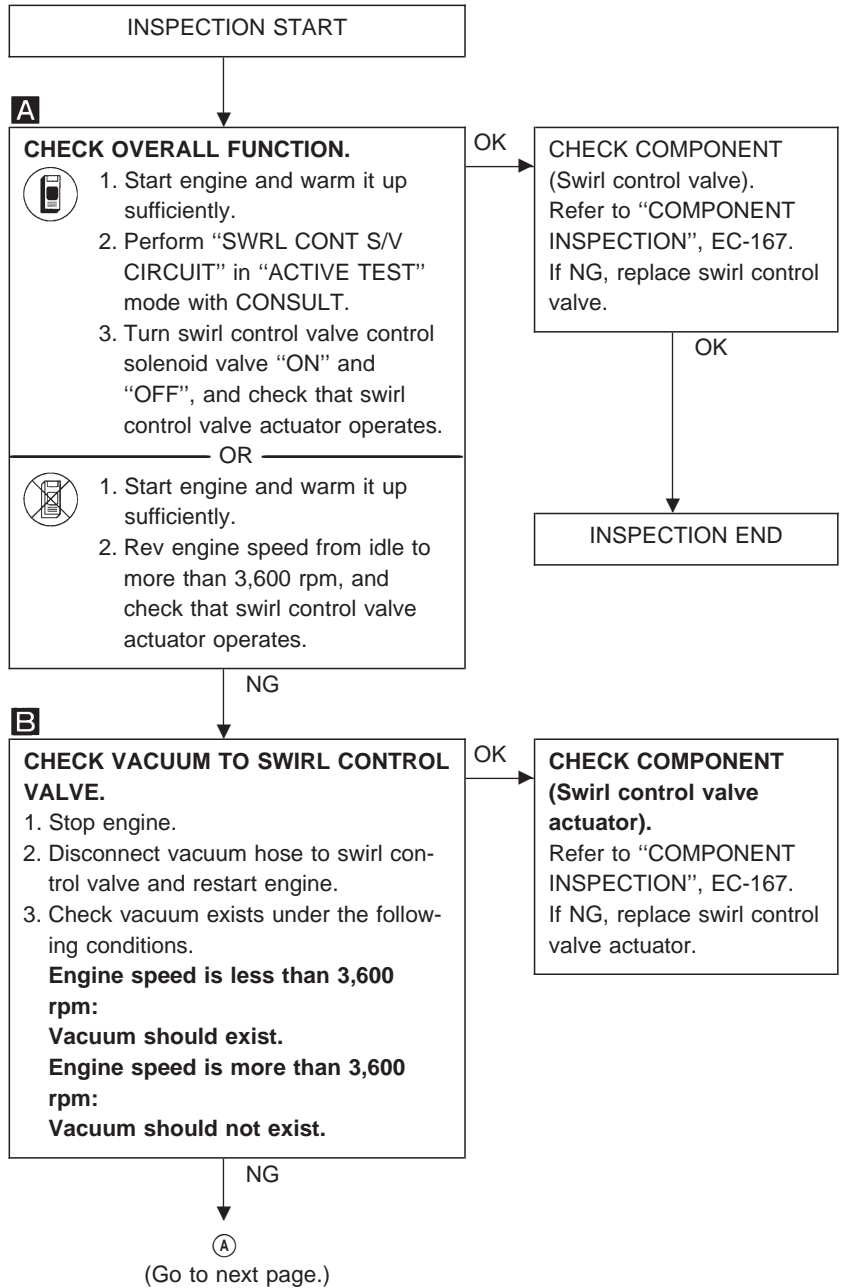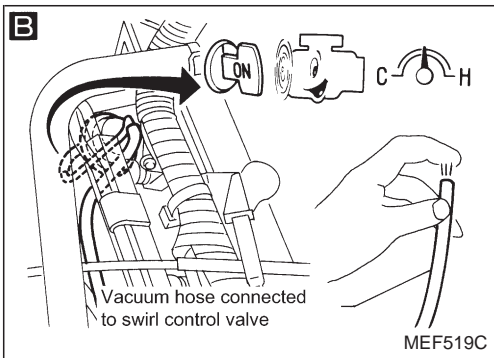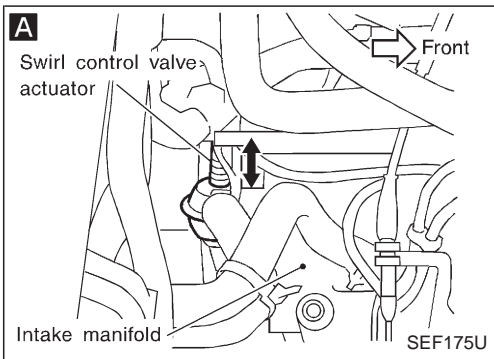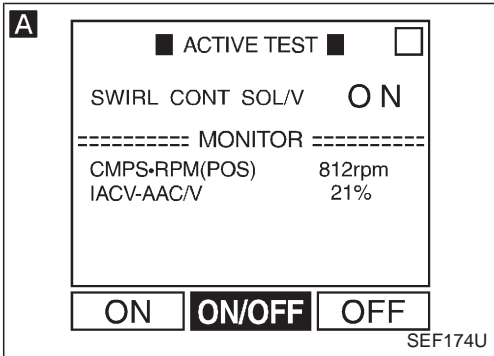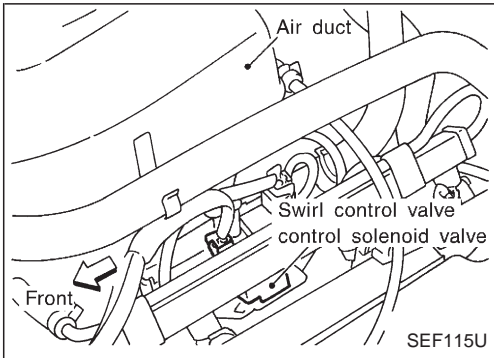

Swirl Control Valve Control Solenoid Valve (Cont'd)

C

■ SWRL CONT S/V CIRCUIT ■

DOES
THE SWRL CONT ACTUATOR
MOVE
EVERY 3 SECONDS ?

NEXT NO YES

SEF167U

C

■ ACTIVE TEST ■

SWIRL CONT SOL/V ON

----- MONITOR -----

CMPS-RPM(POS) 812rpm
IACV-AAC/V 21%

ON ON/OFF OFF

SEF174U

C

CONNECT H.S.

ECM CONNECTOR

12

SEF176U

D

DISCONNECT T.S.

1 2

SEF212S

E

DISCONNECT T.S. DISCONNECT H.S.

1 2

ECM CONNECTOR

12

SEF116U

C

CHECK SWIRL CONTROL VALVE CONTROL SOLENOID VALVE OPERATION.

1. Stop engine.
2. Turn ignition switch "ON".
3. Perform "SWRL CONT S/V CIRCUIT" in "FUNCTION TEST" mode with CONSULT.

OR

2. Turn ignition switch "ON".
3. Perform "SWRL CONT S/V CIRCUIT" in "ACTIVE TEST" mode with CONSULT.
4. Turn swirl control valve control solenoid valve "ON" and "OFF", and listen to swirl control valve control solenoid valve operating sound.

OR

2. Start engine and warm it up sufficiently.
3. Check voltage between ECM terminal ⑫ and ground under the following condition.

Engine speed is less than 3,600 rpm:
Voltage: 0 - 1V

Engine speed is more than 3,600 rpm:
Voltage: Battery voltage

OK

Check the following.

- Vacuum hose improper connection
Refer to "Vacuum Hose Drawing", EC-12.
- Vacuum hose clogging or cracks.
- Vacuum tank
Refer to "COMPONENT INSPECTION", EC-167.
- One-way valve
Refer to "COMPONENT INSPECTION", EC-167.

If NG, repair or replace malfunctioning part(s).

D

CHECK POWER SUPPLY.

1. Turn ignition switch "OFF".
2. Disconnect swirl control valve control solenoid valve harness connector.
3. Turn ignition switch "ON".
4. Check voltage between terminal ① and ground with CONSULT or tester.

Voltage: Battery voltage

NG

Check the following.

- Harness connectors (F54), (M48) (RHD models)
- 10A fuse
- Harness for open or short between swirl control valve control solenoid valve and fuse

If NG, repair harness or connectors.

E

CHECK INPUT SIGNAL CIRCUIT.

1. Turn ignition switch "OFF".
2. Disconnect ECM harness connector.
3. Check continuity between terminal ② and ECM terminal ⑫.

Continuity should exist.


If OK, check harness for short to ground and short to power.


NG

Repair open circuit, short to ground or short to power in harness or connectors.

OK

②

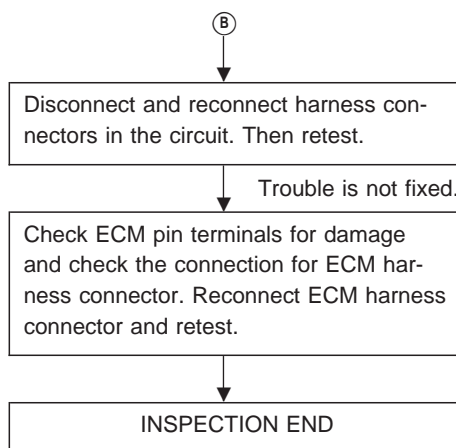**Swirl Control Valve Control Solenoid Valve
(Cont'd)**

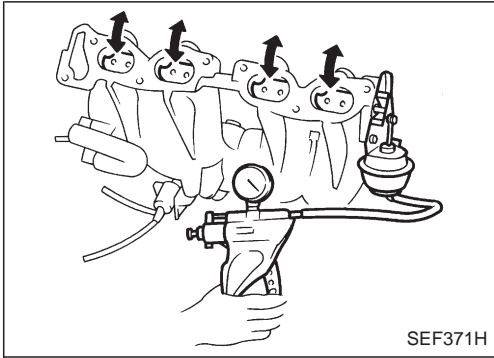


Swirl Control Valve Control Solenoid Valve (Cont'd)

COMPONENT INSPECTION

Swirl control valve

Supply vacuum to actuator and check swirl control valve operation.

Condition	Swirl control valve
Supply vacuum to actuator	Close
No supply	Open

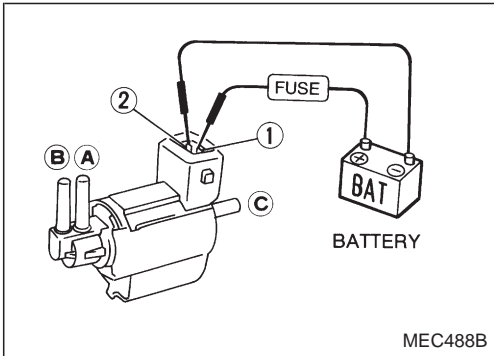


Swirl control valve control solenoid valve

Check solenoid valve air passage continuity.

Condition	Air passage continuity between (A) and (B)	Air passage continuity between (A) and (C)
12V direct current supply between terminals ① and ②	Yes	No
No supply	No	Yes

If NG, replace solenoid valve.

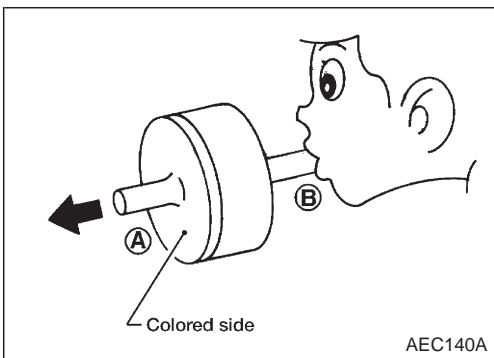


One-way valve

Check one-way valve air passage continuity.

Condition	Air passage continuity
Blow air from side B to A	Yes
Blow air from side A to B	No

If NG, replace one-way valve.

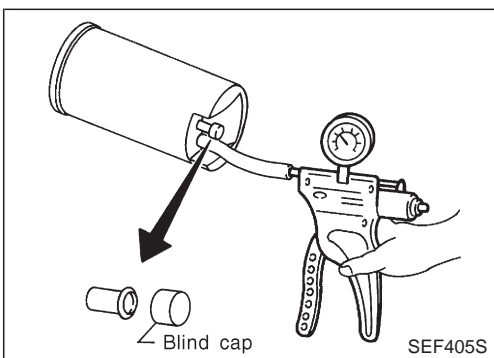

Vacuum tank






Check vacuum tank leakage.

Apply vacuum -80.0 kPa (-800 mbar, -600 mmHg, -23.62 inHg). Then keep it for 10 seconds and check there is no leakage.

IACV-FICD Solenoid Valve


EXCEPT FOR EUROPE

EC-FICD-01

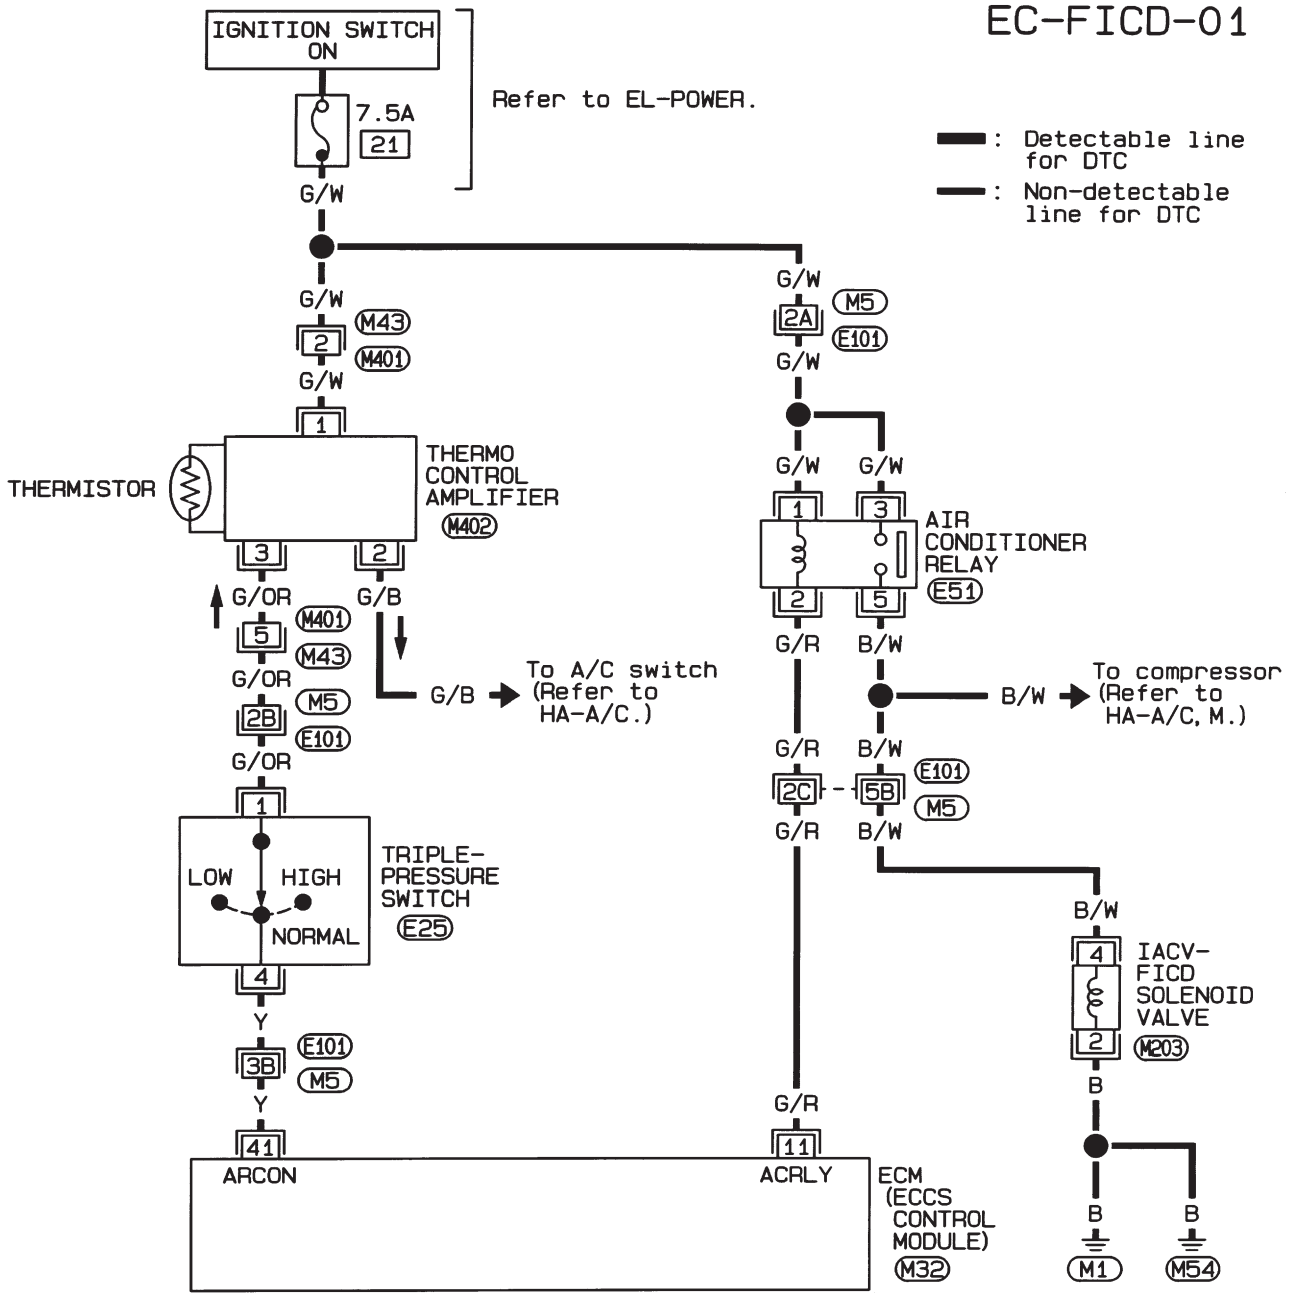

Refer to last page (Foldout page).

M5, E101





M32
W



IACV-FICD Solenoid Valve (Cont'd)

FOR EUROPE

EC-FICD-02

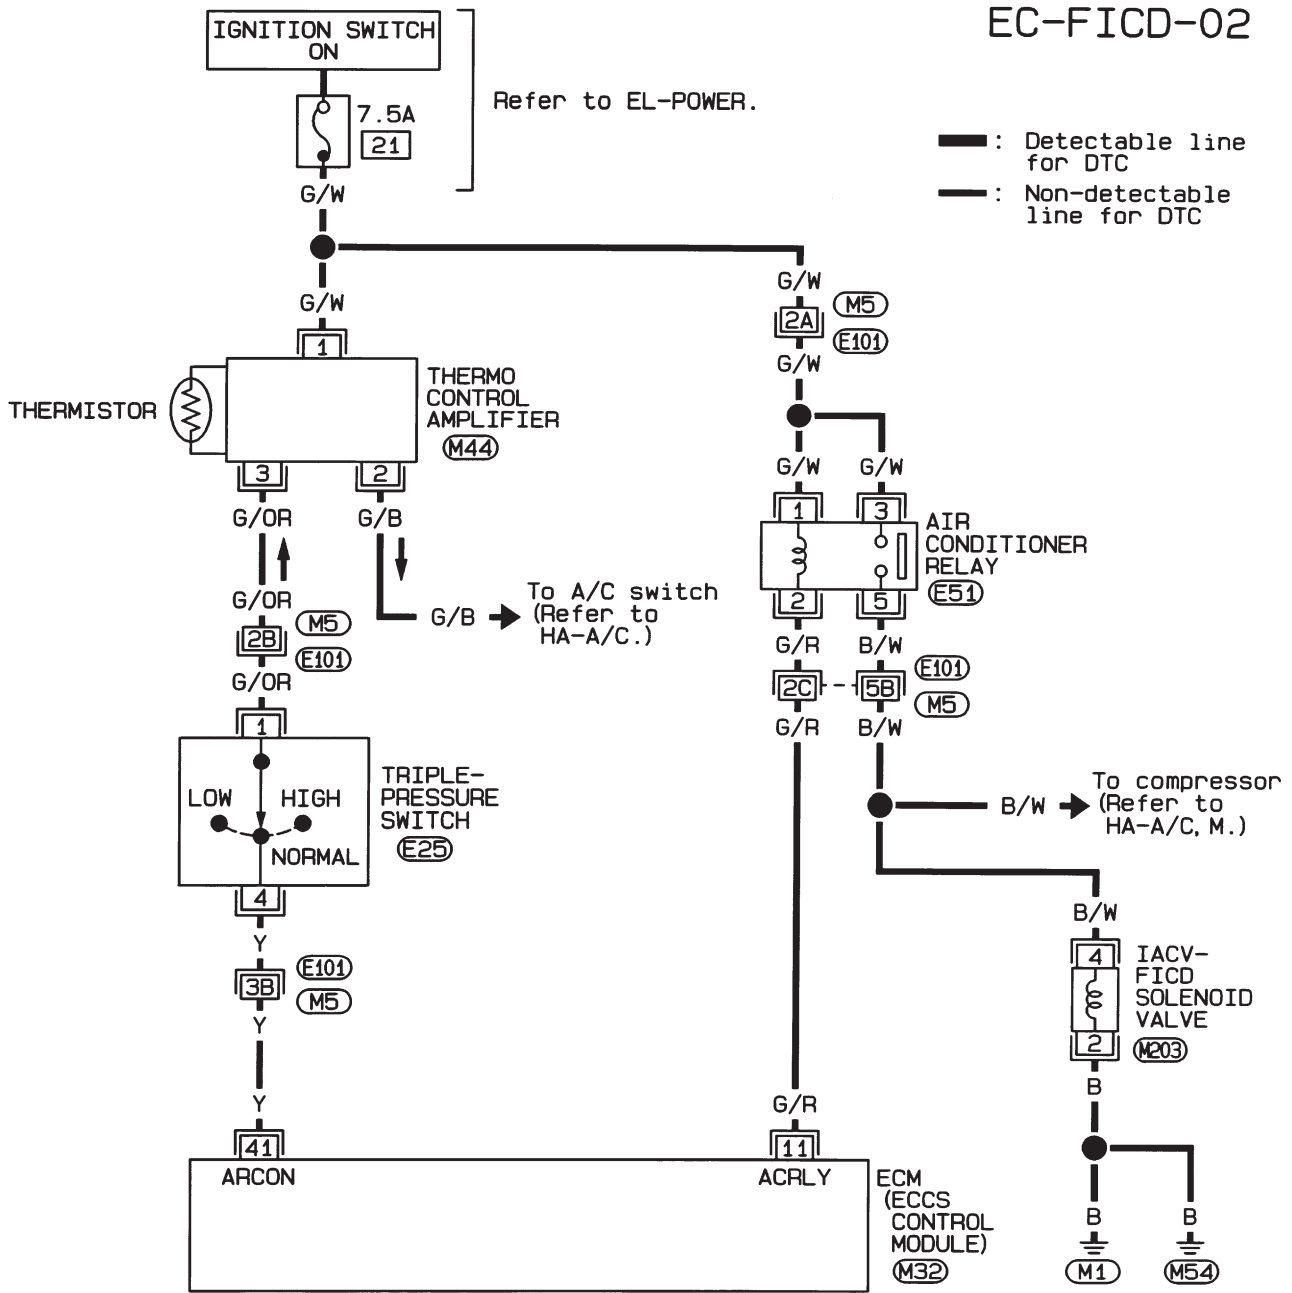

Refer to last page (Foldout page).
 M5, E101


101	102	103	104	105	106	107	108	1	2	3	4	5	6	7	15	16	17	18	19	20	21	22	31	32	33	34	35	36	37	38	39
109	110	111	112	113	114	115	116	8	9	10	11	12	13	14	23	24	25	26	27	28	29	30	40	41	42	43	44	45	46	47	48



IACV-FICD Solenoid Valve (Cont'd)

COMPONENT DESCRIPTION

The idle air adjusting (IAA) unit is made up of the IACV-AAC valve, IACV-FICD solenoid valve and idle adjusting screw. It receives the signal from the ECM and controls the idle speed at the preset value.

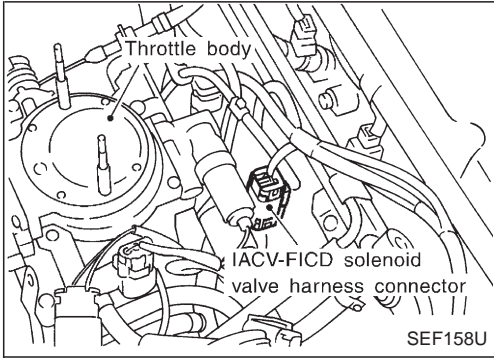





ECM TERMINALS AND REFERENCE VALUE

Remarks: Specification data are reference values and are measured between each terminal and ③ (ECCS ground) with a voltmeter.

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
11	G/R	Air conditioner relay	Engine is running. └ Both air conditioner switch and blower switch are "ON". (Compressor operates.)	Approximately 1V
			Engine is running. └ Air conditioner switch is "OFF".	BATTERY VOLTAGE (11 - 14V)
41	Y	Air conditioner switch	Engine is running. └ Both air conditioner switch and blower switch are "ON". (Compressor operates.)	Approximately 0V
			Engine is running. └ Air conditioner switch is "OFF".	BATTERY VOLTAGE (11 - 14V)

IACV-FICD Solenoid Valve (Cont'd)



DIAGNOSTIC PROCEDURE

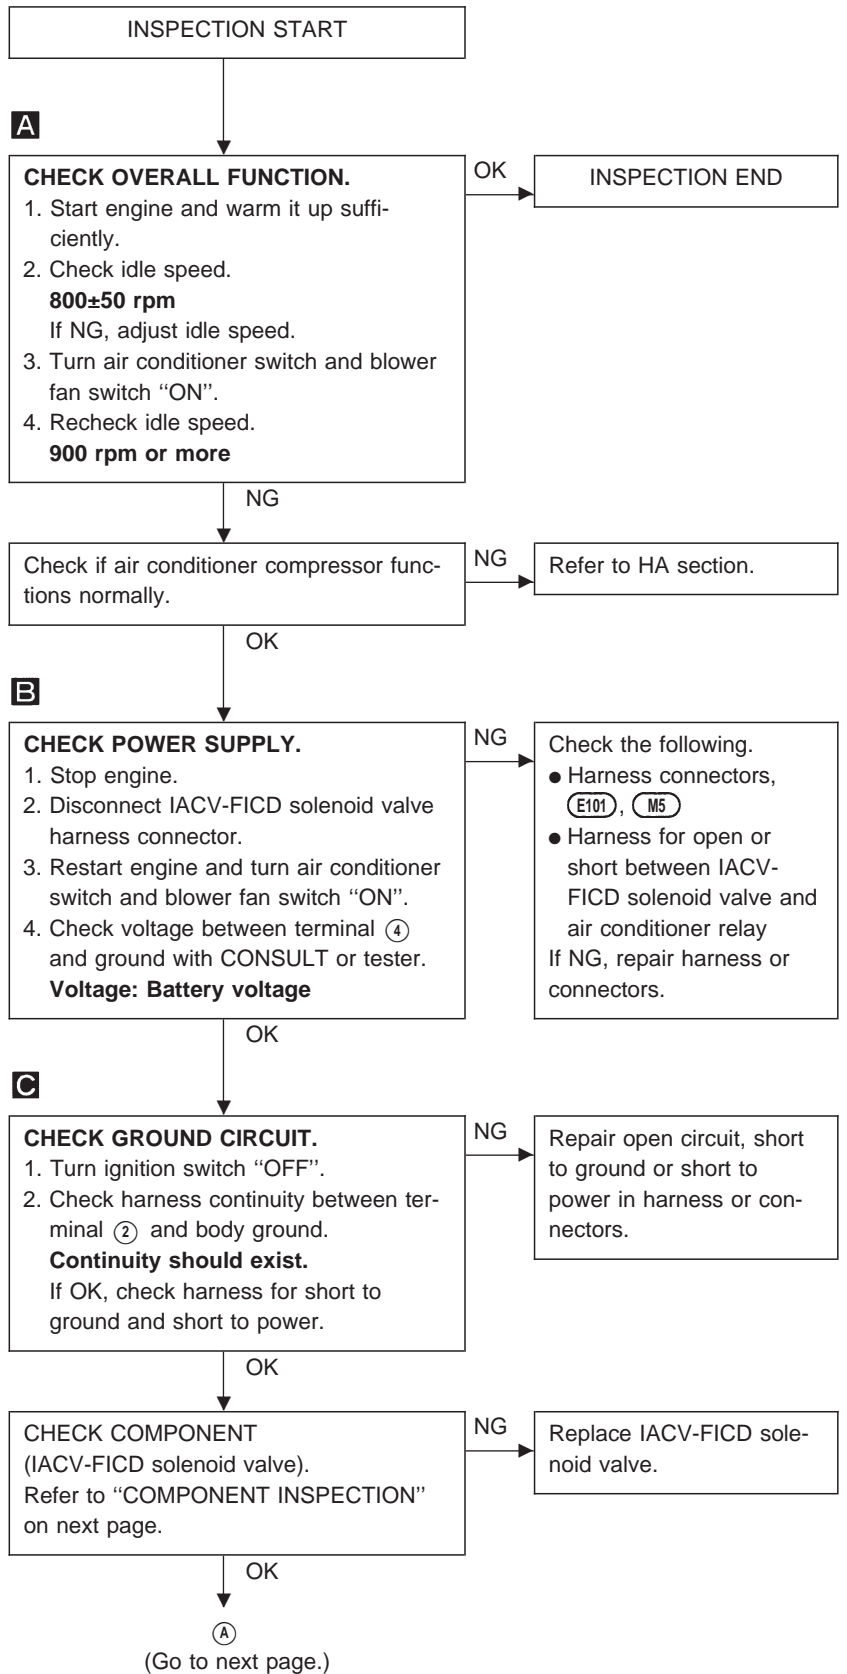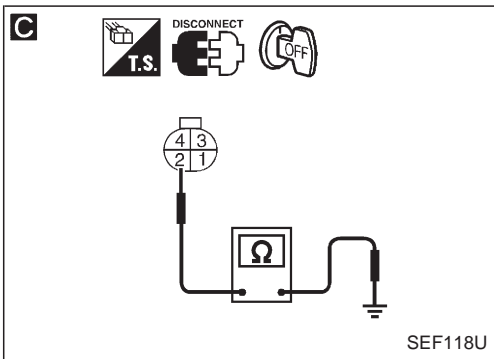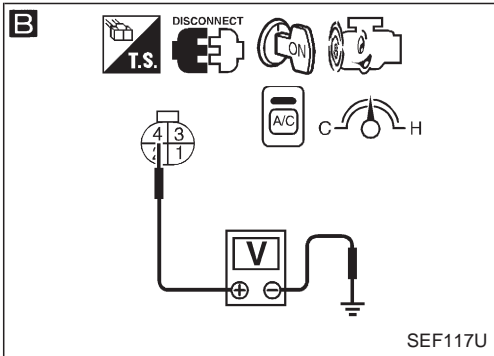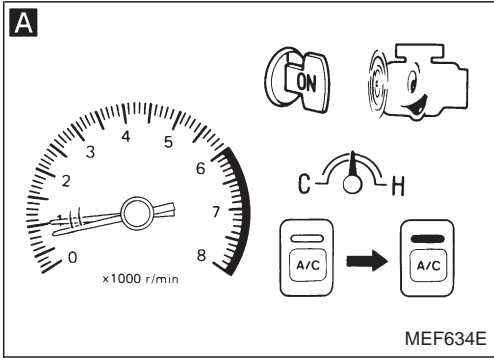

TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS

IACV-FICD Solenoid Valve (Cont'd)

KA

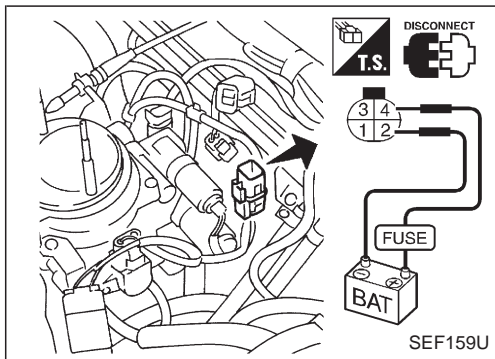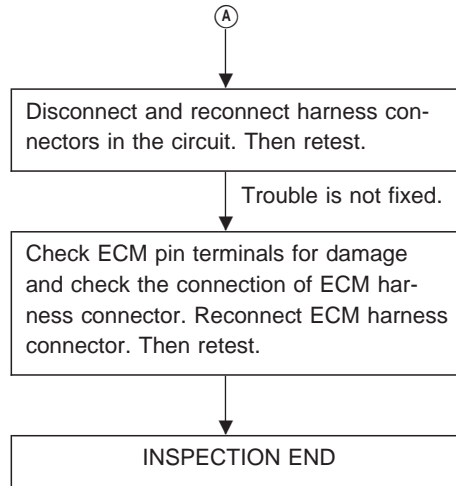


COMPONENT INSPECTION

IACV-FICD solenoid valve

Disconnect IACV-FICD solenoid valve harness connector.





- Check for clicking sound when applying 12V direct current to terminals.
- Check plunger for seizing or sticking.
- Check for broken spring.

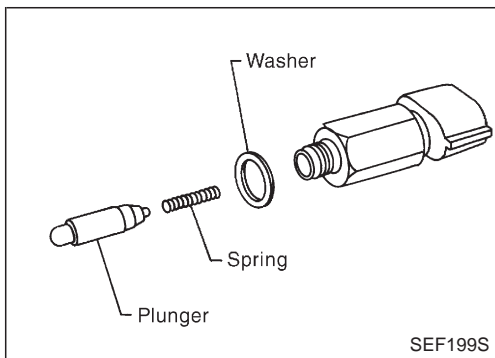

MIL & Data Link Connectors

LHD MODELS EXCEPT FOR EUROPE






EC-MIL/DL-01

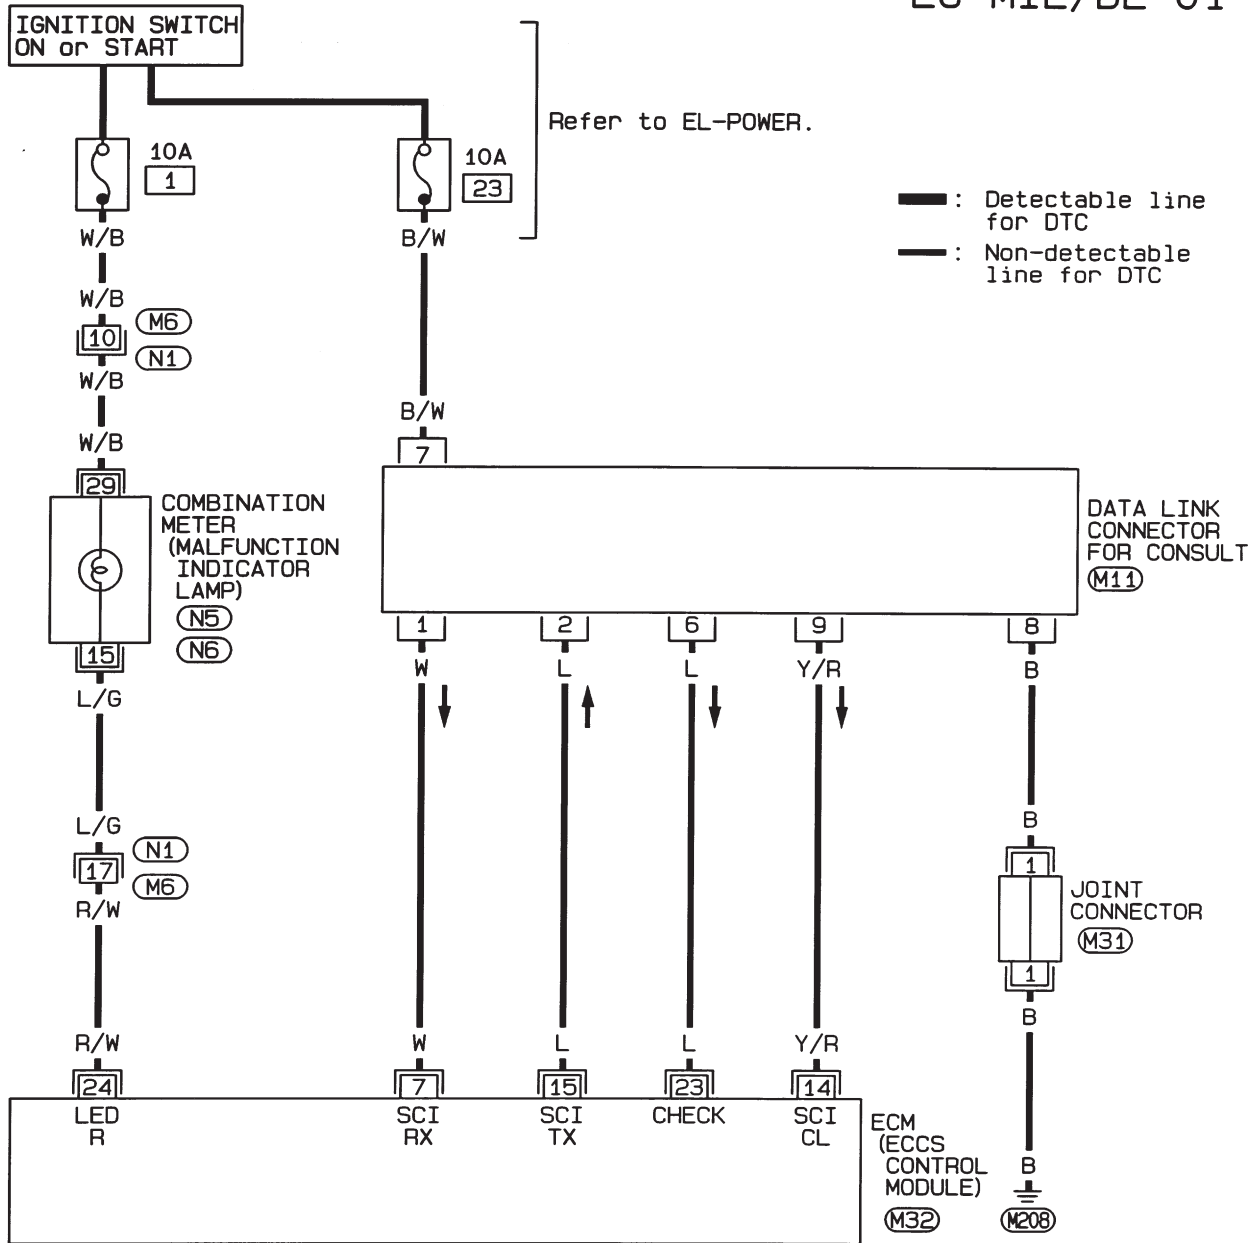

MIL & Data Link Connectors (Cont'd)

RHD MODELS


EC-MIL/DL-02

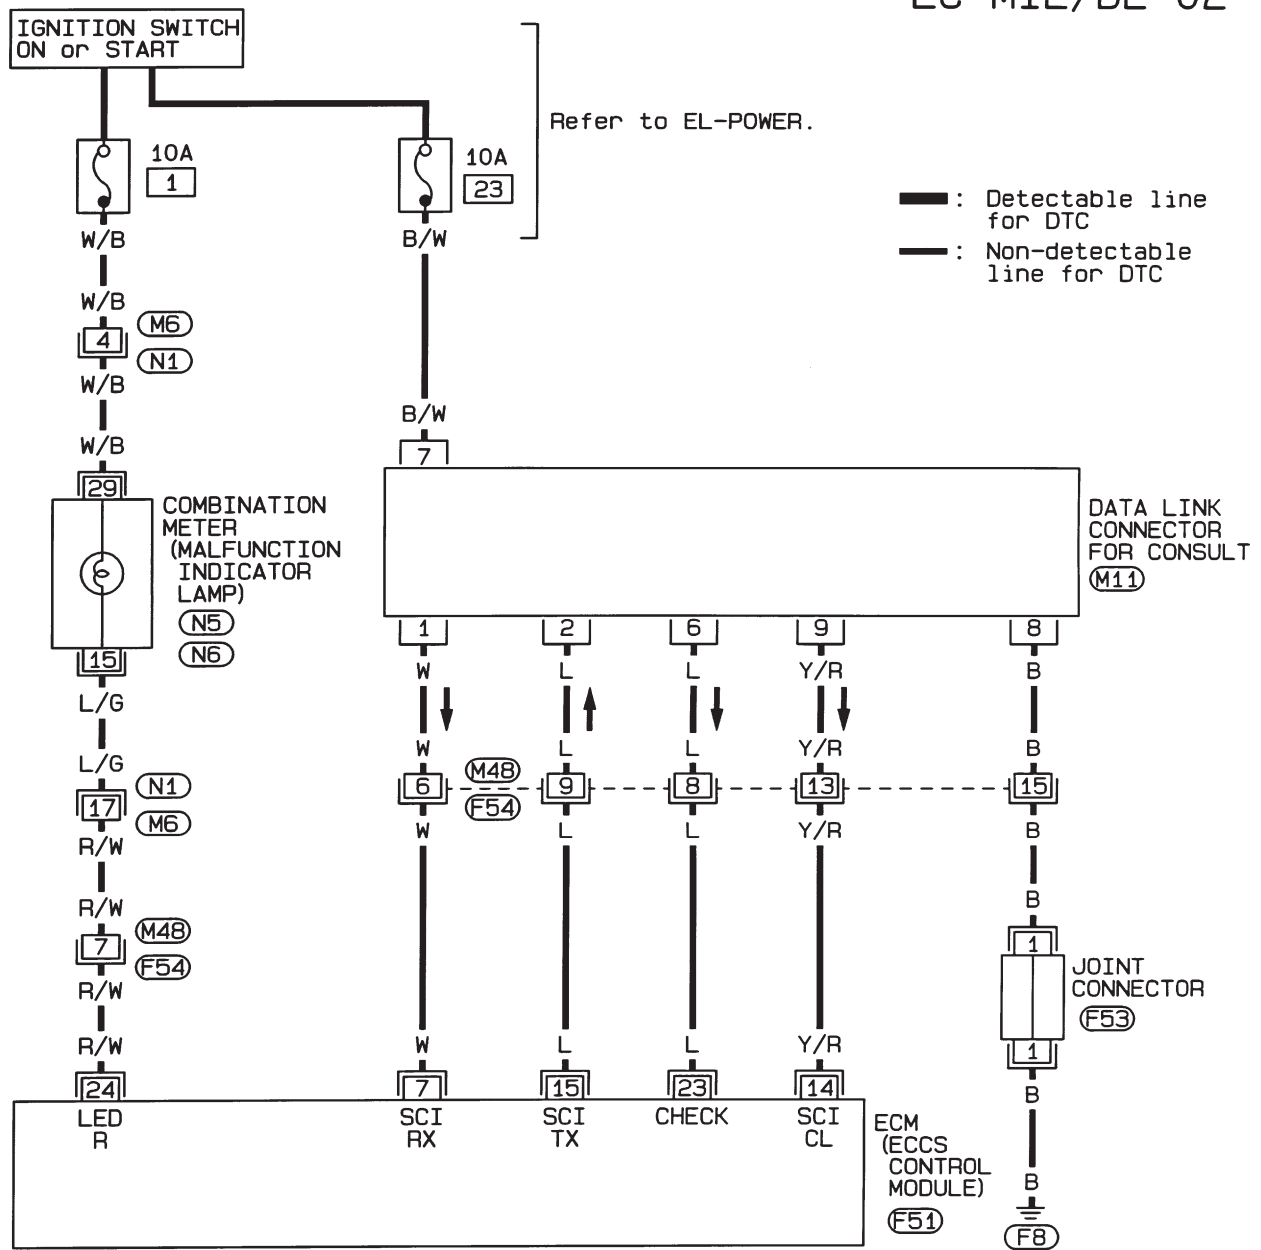

MIL & Data Link Connectors (Cont'd)

FOR EUROPE

EC-MIL/DL-03

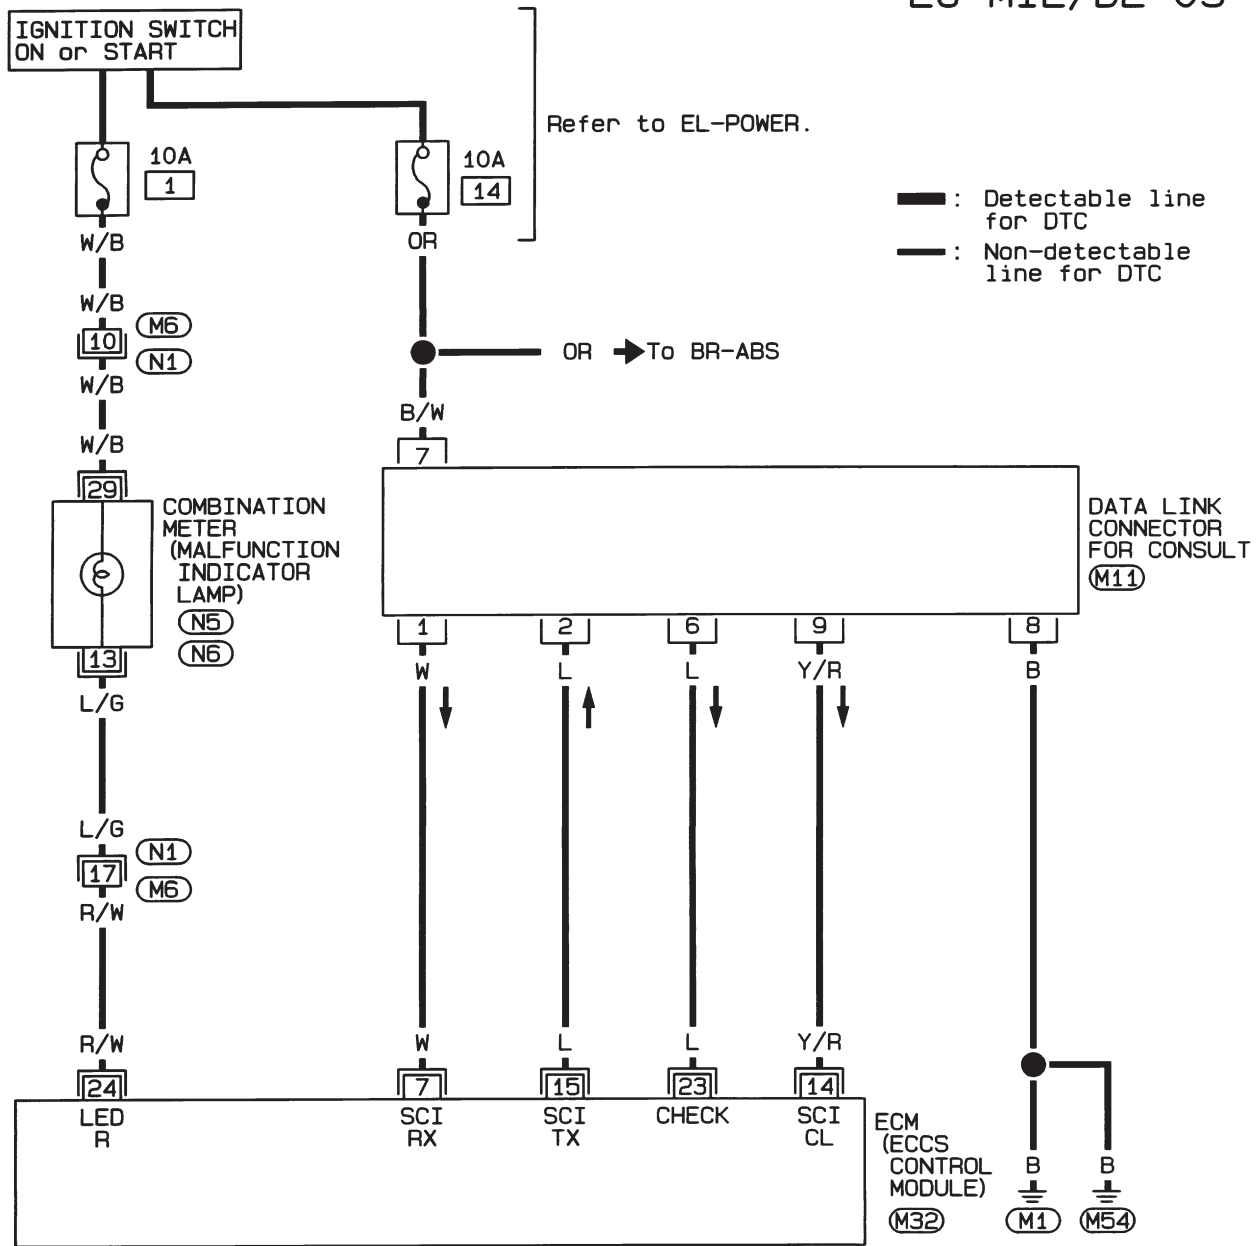

1	2	3	4	5	6	7	(M11)
8	9	10	11	12	13	14	GY

1	2	3	4	5	6	7	8	9	10	(N1)				
11	12	13	14	15	16	17	18	19	20	21	22	23	24	W

26	25	24	23	22	21	20	(N5)		
19	18	17	16	15	14	13	12	11	W

40	39	38	37	36	35	(N6)		
34	33	32	31	30	29	28	27	W

101	102	103	104	105	106	107	108	1	2	3	4	5	6	7	(M32)	H.S.
109	110	111	112	113	114	115	116	8	9	10	11	12	13	14	W	

CAUTION:


- Disassembly and assembly of the injection pumps should be done only in service shops authorized by NISSAN or by the pump manufacturer.
- The pump tester is required for servicing the pump.
- Before removing fuel injection pump from vehicle, check closely to make sure that it is definitely malfunctioning.

For TD25 engine models with Nissan Anti-Theft System (NATS)

- For inspection of coded solenoid unit (CSOLU), refer to NATS (Diesel) in EL section.
- When replacing injection pump assembly along with CSOLU, perform NATS initialisation with CONSULT.


For initialisation procedure, refer to NATS (Diesel) in EL section.

Fuel System

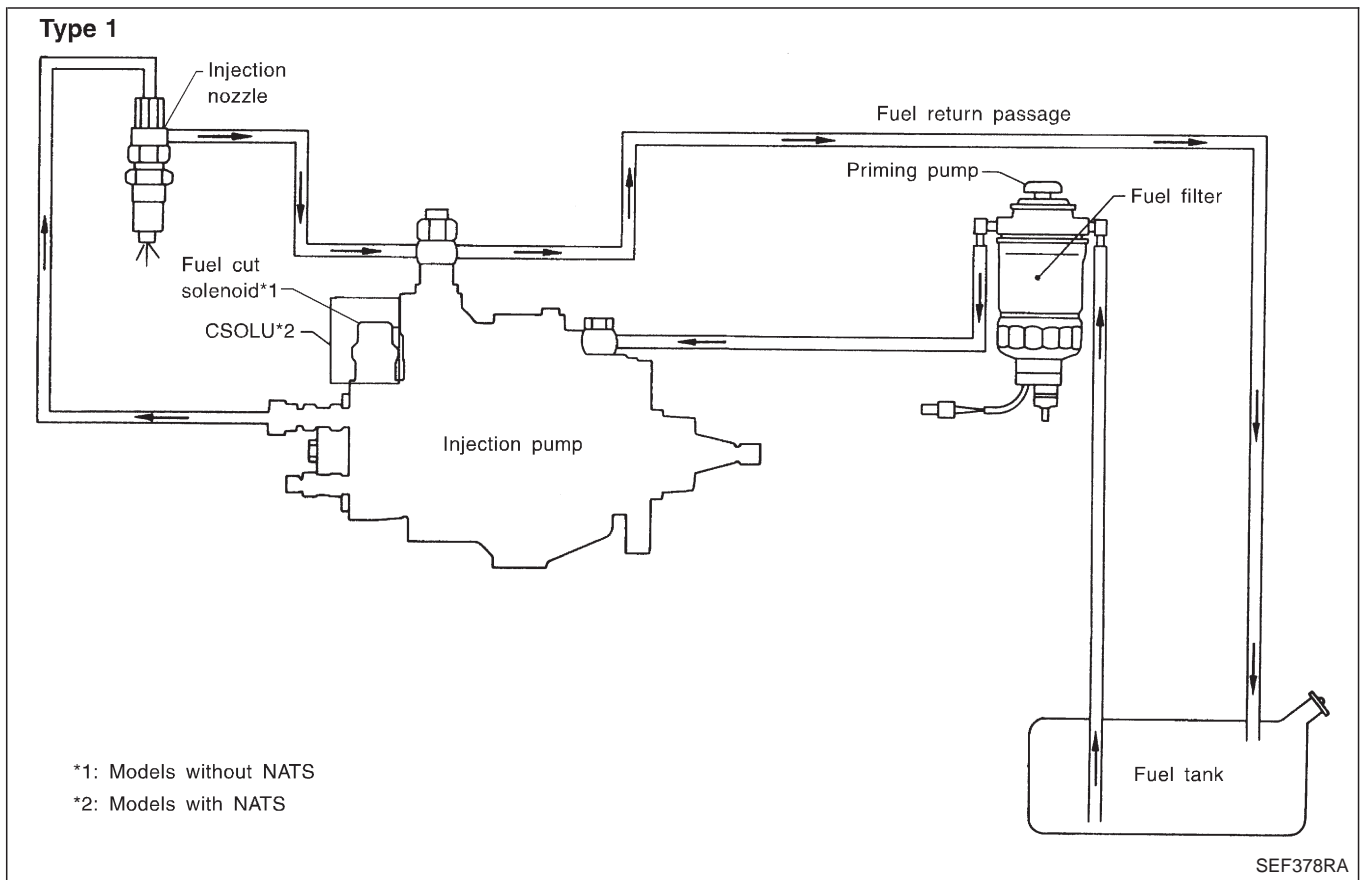


Fuel System (Cont'd)

Type 2

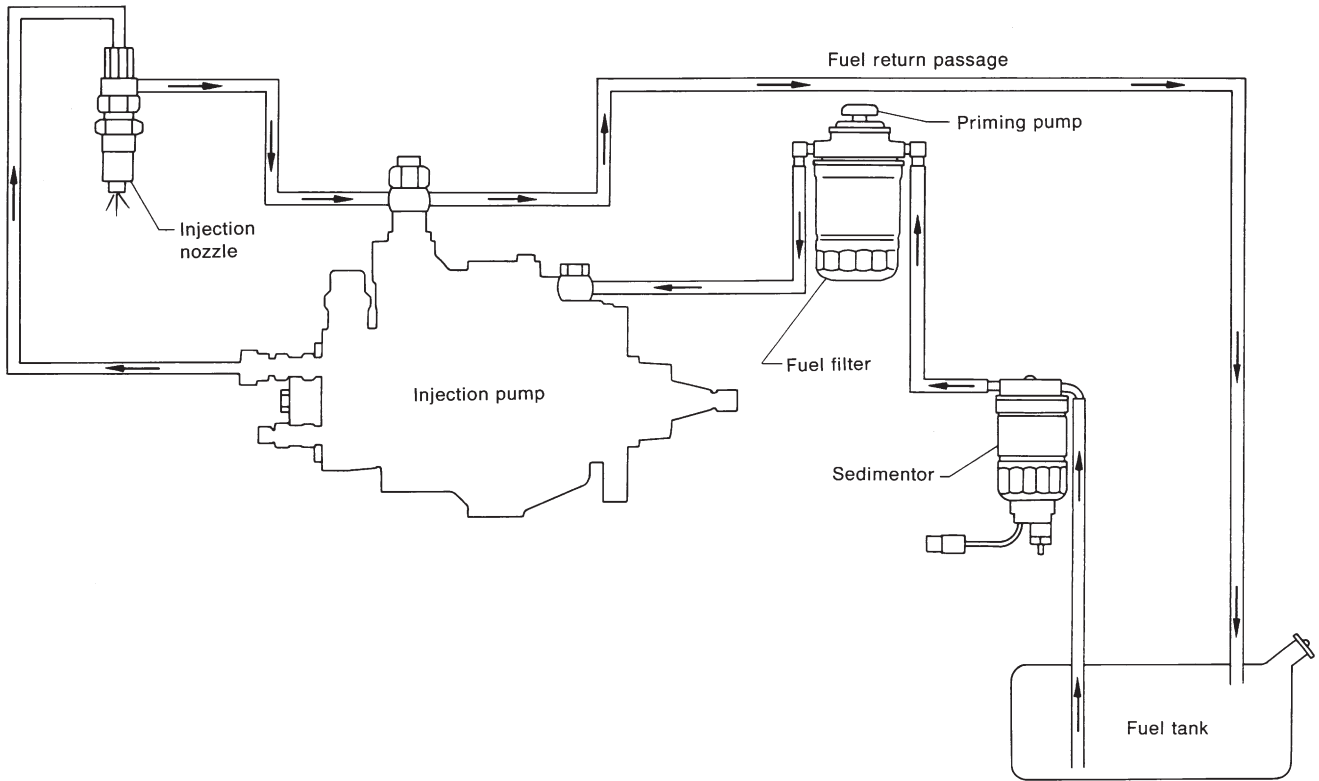


SEF383FA

Type 3

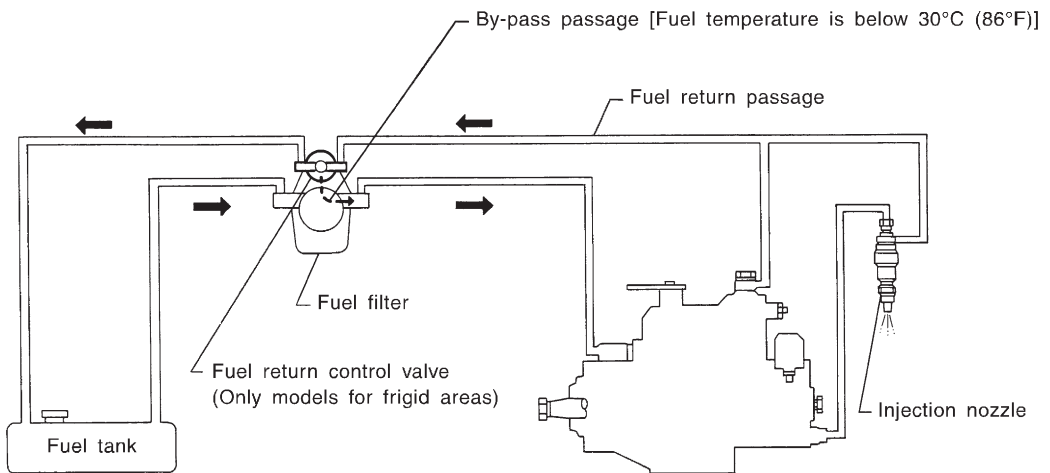


Fuel temperature: Hot

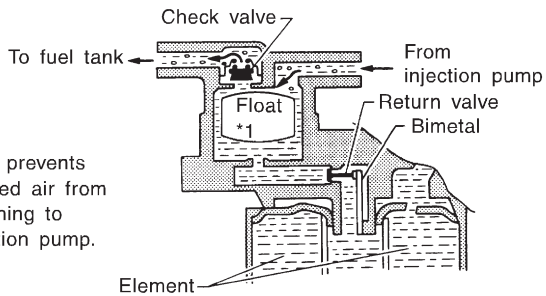


*1: Float prevents trapped air from returning to injection pump.

Fuel temperature: Cold

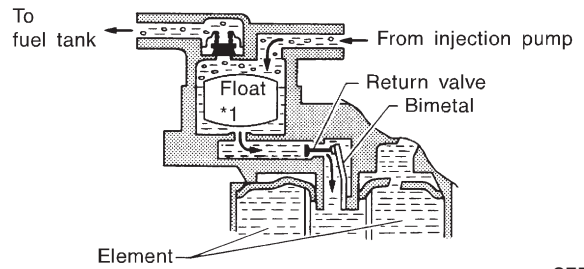

SEF151RA

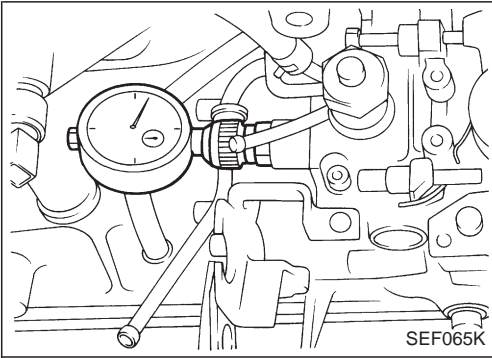


Inspection

PLUNGER LIFT INSPECTION

1. Remove injection tubes.
2. Remove plug bolt from distributor head and install dial gauge.
3. Plunger lift measurement
 - (1) Turn crankshaft counterclockwise 20 to 25 degrees from No. 1 piston at TDC.
 - (2) Find dial gauge's needle rest position at step (1) set position, then set the gauge to zero.
 - (3) Turn crankshaft clockwise until No. 1 piston is set at TDC.
 - (4) Read dial gauge indication.
 $0.71 \pm 0.05 \text{ mm (} 0.0280 \pm 0.0020 \text{ in)}$
 - (5) If it is not within the above range, adjust it within adjustment standard range.

Refer to EC-181.

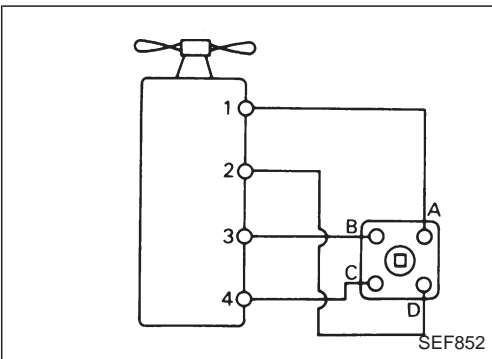

4. Disconnect dial gauge and reinstall plug bolt with new washer.

Plug: 14 - 20 N·m (1.4 - 2.0 kg-m, 10 - 14 ft-lb)

5. Connect injection tubes.

Flare nut:


Flare nut: 20 - 25 N·m (2.0 - 2.5 kg-m, 14 - 18 ft-lb)

6. Bleed air from fuel system.
Refer to EC-191.

INJECTION PUMP CALIBRATION

Calibrate injection pump on injection pump tester.

Refer to "Injection Pump Calibration Standard" in SDS, EC-235.

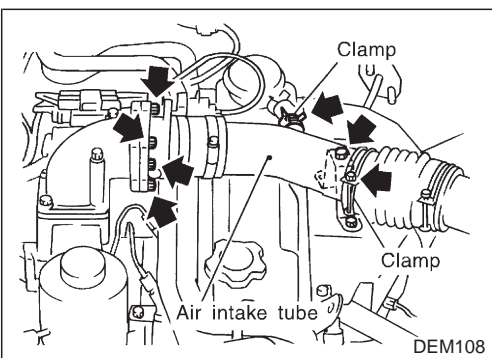


Removal

1. Disconnect air duct and air intake housing.


Removal (Cont'd)

2. Remove injection tube.


Cover the injection nozzle assembly with a plug to prevent dust entry.

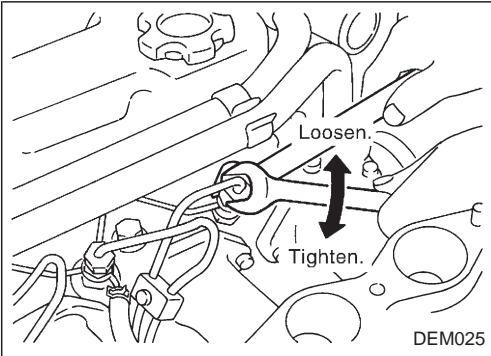


3. Turn ignition switch to OFF position and disconnect wire harness connectors connected to the injection pump.

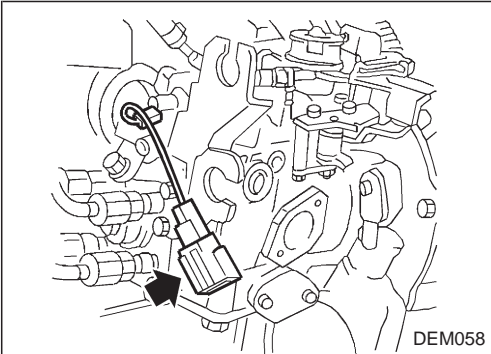


4. Remove accelerator wire and disconnect overflow hose, fuel inlet hose and fuel return hose.

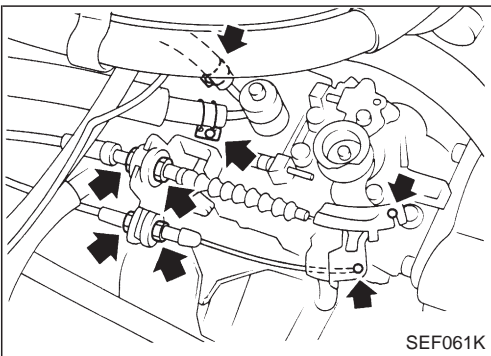

5. Remove injection pump drive gear cover.

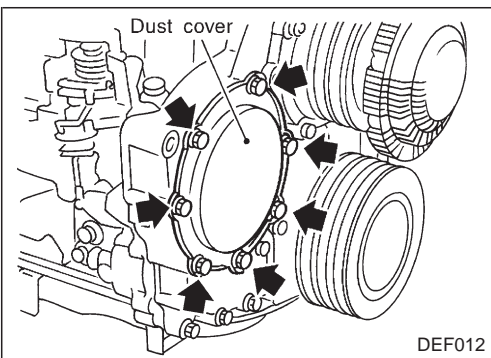


6. Loosen injection pump drive gear nut and remove drive gear by using puller.

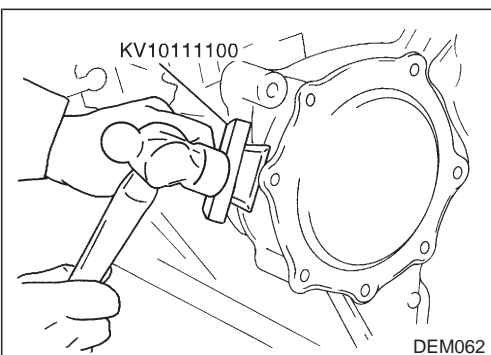


Removal (Cont'd)


7. Remove vacuum pump.
 - Remove the eye bolt securing the oil tube. Remove the vacuum pump. Be careful not to bend the oil tube during vacuum pump removal.

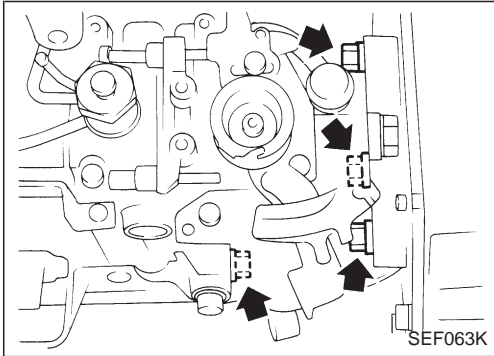

8. Remove injection pump fixing nuts and bolts.

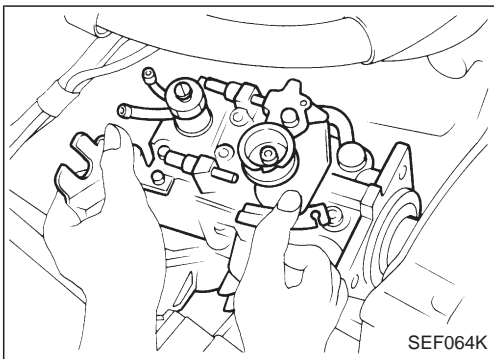


9. Remove injection pump with injection tubes.
Disconnect injection tube from pump once it is removed.

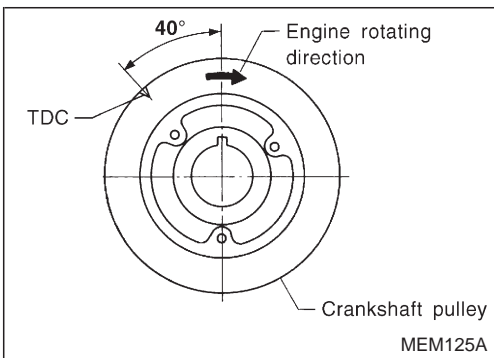


Installation and Adjustment

1. Confirm that No. 1 piston is set at TDC on its compression stroke.

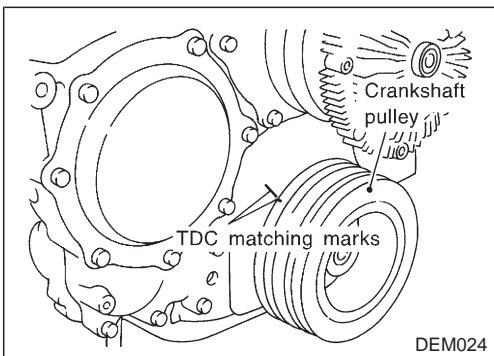

Installation and Adjustment (Cont'd)

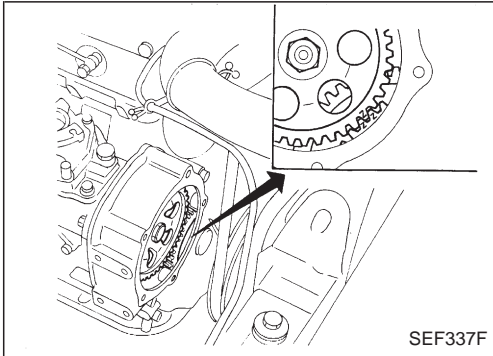


2. Install injection pump.
 - (1) Temporarily set injection pump so that the flange of pump is aligned with aligning mark on front cover.
 - (2) Install injection drive gear over the key.


⌚: 59 - 69 N·m (6 - 7 kg-m, 43 - 51 ft-lb)

Coat key with grease to prevent it from falling into the front cover. Make sure that "Z" marks are aligned.

- (3) Install drive gear cover while applying a continuous bead of liquid gasket.

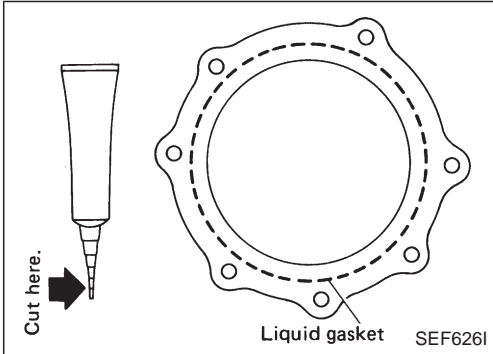

- Be sure liquid gasket is 2.5 to 3.5 mm (0.098 to 0.138 in) wide.
- Attach timing gear case cover to timing gear case within 5 minutes after coating.
- Wait at least 30 minutes before refilling engine oil.
- Use Genuine Liquid Gasket or equivalent.

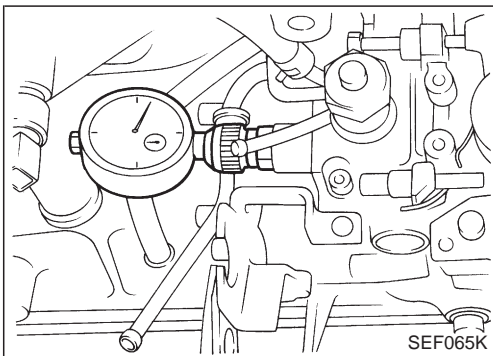

PLUNGER LIFT ADJUSTMENT

1. Loosen injection pump mounting nuts and mounting bracket bolt.
2. Remove plug bolt from distributor head and install dial gauge.
3. Plunger lift measurement and adjustment
 - (1) Turn crankshaft counterclockwise 20 to 25 degrees from No. 1 piston at TDC.
 - (2) Find dial gauge's needle rest position at step (1) set position, then set the gauge to zero.
 - (3) Turn crankshaft clockwise until No. 1 piston is set at TDC.
 - (4) Read dial gauge indication.

0.71±0.02 mm (0.0280±0.0008 in)

- (5) If it is not within the above range, turn pump body until it comes within standard range.

- a. If indication is smaller than the specified value, turn pump body counterclockwise.
- b. If indication is larger than the specified value, turn pump body clockwise.

4. Tighten injection pump securely.

Injection pump fixing bolt:


⌚: 20 - 25 N·m (2.0 - 2.5 kg-m, 14 - 18 ft-lb)

Injection pump to mounting bracket:

⌚: 30 - 41 N·m (3.1 - 4.2 kg-m, 22 - 30 ft-lb)

INJECTION PUMP

Installation and Adjustment (Cont'd)

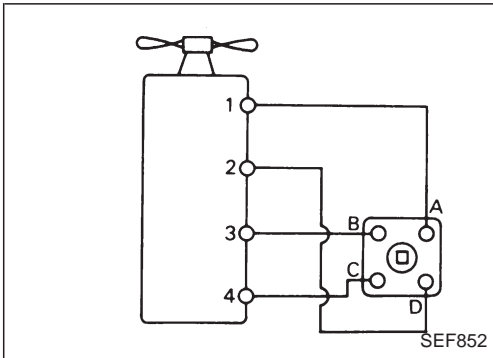

5. Disconnect dial gauge and reinstall plug bolt with new washer.

Plug: 14 - 20 N·m (1.4 - 2.0 kg-m, 10 - 14 ft-lb)

6. Connect injection tubes.

Flare nut:

Flare nut: 20 - 25 N·m (2.0 - 2.5 kg-m, 14 - 18 ft-lb)


7. Bleed air from fuel system.

Refer to EC-191.

IDLE AND MAXIMUM SPEED ADJUSTMENT

CAUTION:

- Do not remove sealing wires unless absolutely necessary.
- Disturbing full-load adjusting screw will change fuel flow characteristics, resulting in an improperly adjusted engine. Readjustment of fuel injection pump should be done using a pump tester.
- If maximum speed adjusting screw is turned in direction that increases control lever angle, engine damage may result.

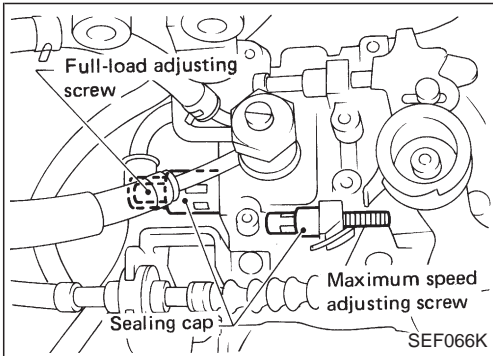


Throttle control wire adjustment

1. Turn idle control knob fully counterclockwise.
2. Make sure that clearance between idle control lever pin and fuel injection pump control lever is within the specified range.

Clearance:

1 - 2 mm (0.04 - 0.08 in)

3. If not within the specified range, adjust with idle control wire adjusting nut.
4. After adjusting clearance, tighten lock nut.

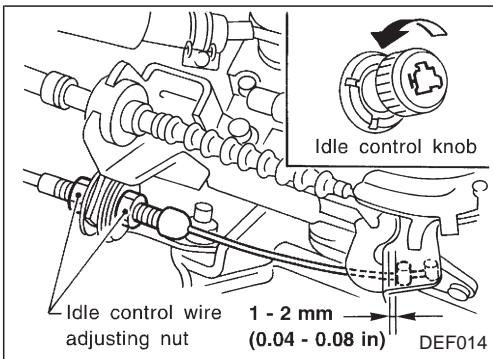


Idle adjustment

Refer to "Checking Idle Speed", "ENGINE MAINTENANCE" in MA section.

Maximum speed adjustment

Maximum speed adjusting screw is retained by sealing wire and need not be adjusted under normal circumstances. However, if it becomes necessary to adjust it, the following procedure should be followed:

1. Start engine and warm it up until coolant temperature indicator points to middle of gauge.
 2. Connect tachometer's pick-up to No. 1 fuel injection tube.
- To obtain accurate reading of engine rpm, remove clamps that secure No. 1 fuel injection tube.

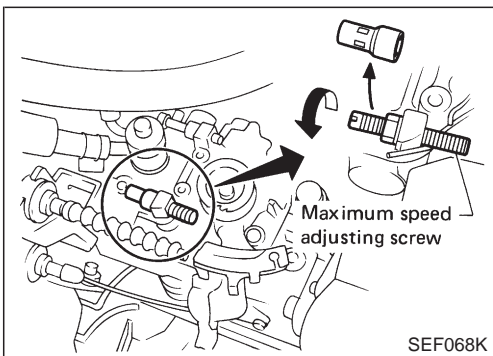


Installation and Adjustment (Cont'd)

3. Depress accelerator pedal fully under no load and, at this point, read the tachometer indication.

Maximum engine speed (Under no load):


5,000⁺¹⁰⁰₋₂₀₀ rpm

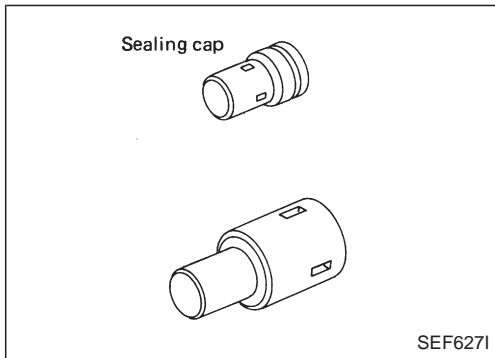

4. If indication is lower than specified maximum engine speed, turn maximum speed adjusting screw counterclockwise 1 or 2 rotations. Then depress accelerator pedal to floor under no load and, at this point, read indication.
5. If indication is still lower than specified speed, repeat step 4 above until specified engine speed is reached.
6. After adjustment, tighten lock nut securely.
7. Seal with a sealing wire or install a sealing cap.


Disassembly

Refer to "VE INJECTION PUMP" in EF section of Service Manual for TD series diesel engine (1st Revision).

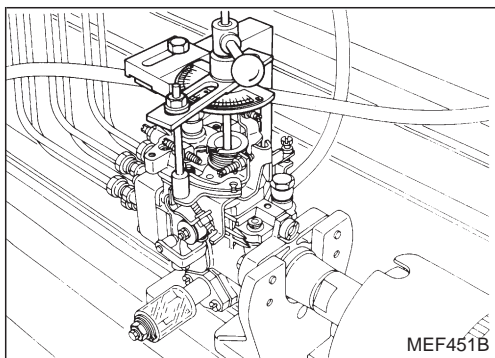

Load Timer Adjustment

1. After adjusting the timer stroke, find the control lever position where the injection quantity is as specified and then fix the control lever using the adjusting device (KV11282617).

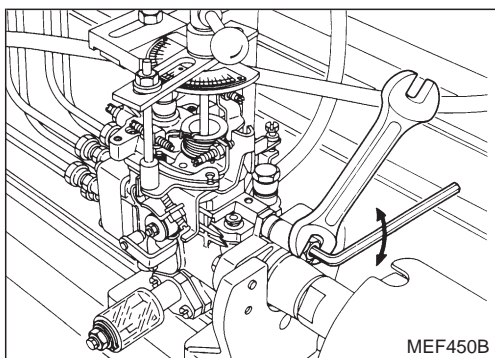

2. Run the injection pump at the specified speed and then adjust the governor shaft installation position so that the timer stroke is as specified. Refer to "Injection Pump Calibration Standard" in SDS for the timer stroke.

Start Q Adjustment Lever

DISASSEMBLY




1. Attach injection pump to bracket using two bolts.
2. Remove start Q adjustment lever by removing nut after marking the installation position.
3. Remove nut and washer from the tip of lever shaft and then remove start Q adjustment lever, spring, washer and O-ring.
4. Remove lever shaft and washer from the inside of governor cover.

INSPECTION

1. Check that lever shaft's sliding surface is not worn, scratched or damaged excessively and that lever shaft's flange is not bent, worn or damaged excessively. Replace lever shaft if defective.
2. Inspect the other parts carefully. If they are damaged, worn, rusted or bent excessively they must be replaced.

REASSEMBLY

During reassembly of a fuel injection pump equipped with start Q adjustment lever, a block gauge must be used to determine the start Q adjustment lever installation position.

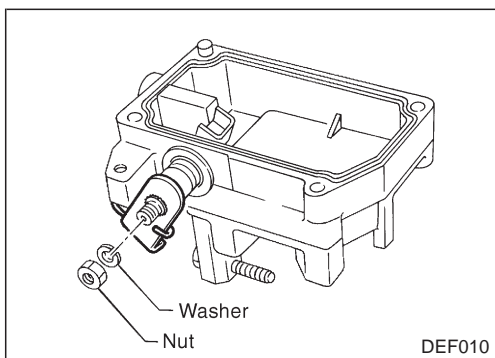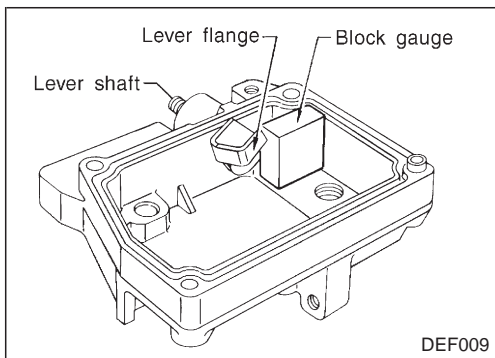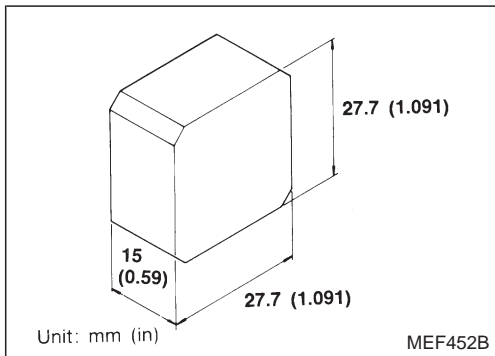

1. Using block gauge, ensure that the distance from the inside face of cover to the tip of lever flange is 27.7 mm (1.091 in). Maintain lever shaft in this position.


2. Install start Q adjustment lever on lever shaft so that start Q adjustment lever contacts (or almost contacts) the under side of the adjusting bolt base. Then, fix start Q adjustment lever on lever shaft using washer and nut.



If start Q adjustment lever cannot be installed as described above, use start Q adjustment lever with differently phased serrations.

Start Q Adjustment Lever (Cont'd)**ADJUSTMENT**

Adjust adjusting bolt on the normal operating side so that the starting injection quantity is as specified.

Refer to "Injection Pump Calibration Standard" in SDS for the starting injection quantity.

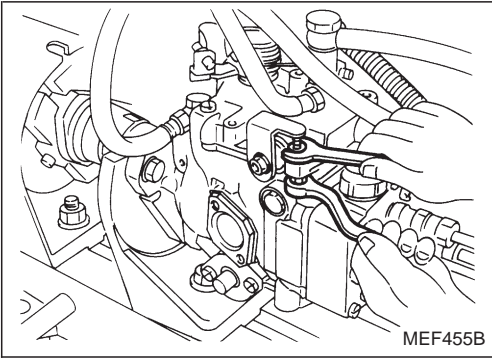

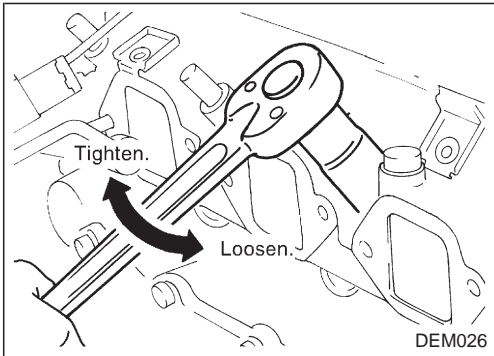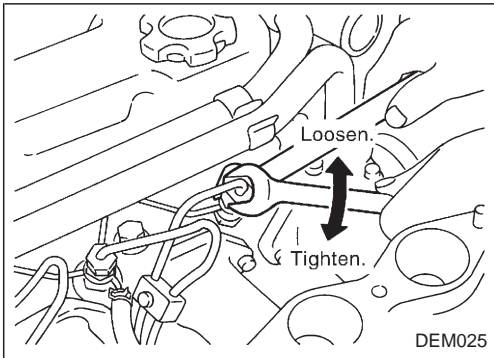

Removal and Installation

1. Remove injection tube assembly.
2. Remove spill tube assembly.
To prevent spill tube from breaking, remove it by gripping nozzle holder.

3. Remove injection nozzle assembly using deep socket wrench.

4. Install injection nozzle in the reverse order of removal.

Injection nozzle to cylinder head:

: 54 - 64 N·m (5.5 - 6.5 kg-m, 40 - 47 ft-lb)



Spill tube nut:

: 29 - 39 N·m (3.0 - 4.0 kg-m, 22 - 29 ft-lb)

Injection tube flare nut:

: 20 - 25 N·m (2.0 - 2.5 kg-m, 14 - 18 ft-lb)

- a. Nozzle gaskets should always be replaced.
 - b. To prevent spill tube from breaking later, spill tube nuts should be tightened gradually in sequence.
5. Bleed air from fuel system.
Refer to "Bleeding Fuel System", EC-191.

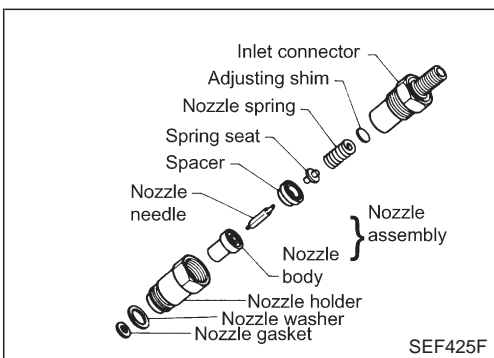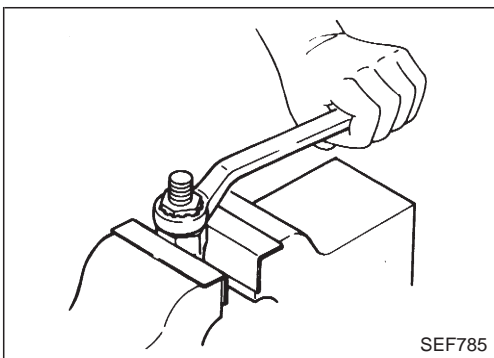

Disassembly




1. Loosen inlet connector while keeping nozzle top from turning.

2. Arrange all disassembled parts in order shown at left.

Inspection

Thoroughly clean all disassembled parts with fresh kerosene or solvent.

- If nozzle needle is damaged or fused, replace nozzle assembly with a new one.
- If end of nozzle needle is seized or excessively discolored, replace nozzle assembly.
- Check nozzle body and distance piece for proper contact. If excessively worn or damaged, replace nozzle assembly or nozzle holder assembly.
- Check spacer and nozzle holder for proper contact. If excessively worn or damaged, replace spacer or nozzle holder.
- Check nozzle spring for excessive wear or damage. If excessively worn or damaged, replace it with a new spring.

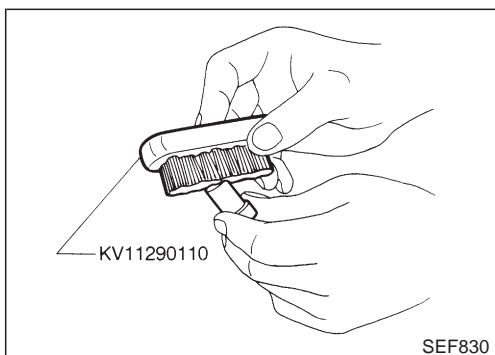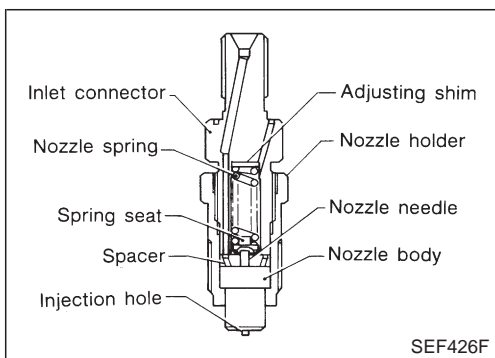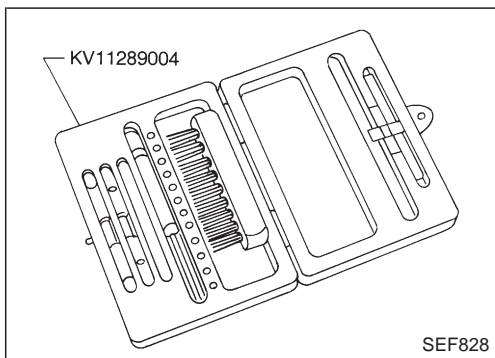


Cleaning

- a. **Do not touch the nozzle mating surface with your fingers.**
- b. **To wash the nozzles, use a wooden stick and brass brush with clean diesel fuel.**

1. Clean nozzle assembly using the Nozzle Cleaning Kit.
2. Portions which should be cleaned are indicated in the left figure.
3. Remove any carbon from exterior of nozzle body (except wrapping angle portion) by using Tool.


Cleaning (Cont'd)

4. Clean fuel sump of nozzle body using Tool.

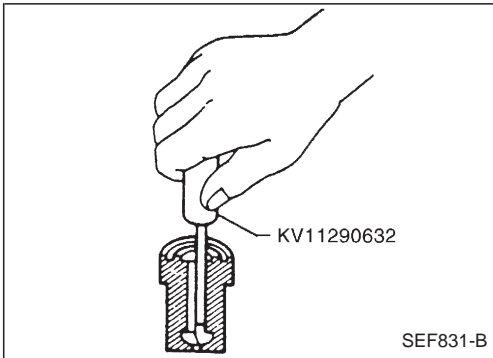


5. Clean nozzle seat by using Tool.

This job should be performed with extra precautions, since efficiency of nozzle depends greatly on a good nozzle seat.

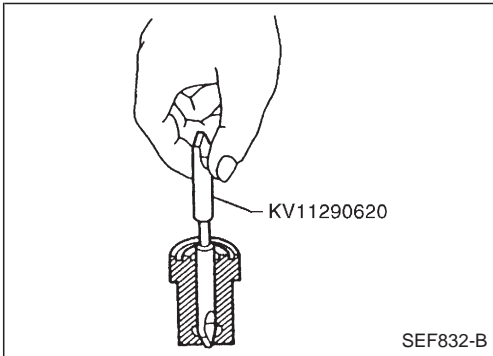


6. Clean spray hole of nozzle body by using Tool.

To prevent spray hole from canting, always clean it by starting with inner side and working towards outside.

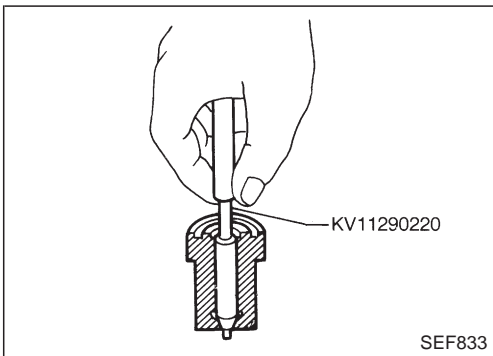

7. Decarbon nozzle needle tip by using Tool.

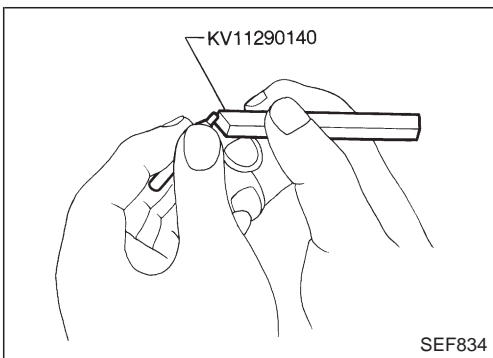



8. Check needle for proper position.

(1) Pull needle about halfway out from body and then release it.
 (2) Needle should sink into body very smoothly from just its own weight.

(3) Repeat this test and rotate needle slightly each time.

If needle fails to sink smoothly from any position, replace both needle and body as a unit.

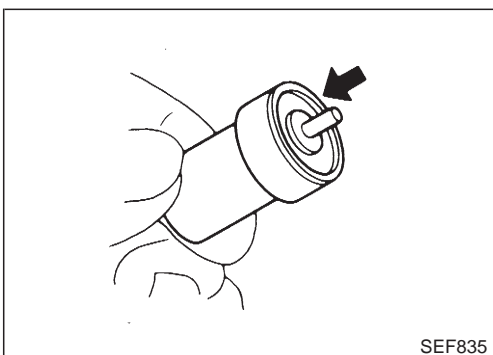

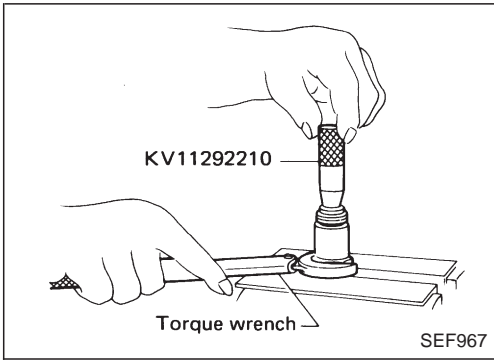

Assembly

Assemble in the reverse order of disassembly.


Inlet connector to nozzle holder:

: 29 - 49 N·m (3.0 - 5.0 kg-m, 22 - 36 ft-lb)

Test and Adjustment


WARNING:

When using nozzle tester, be careful not to allow diesel fuel sprayed from nozzle to contact your hand or body, and make sure your eyes are properly protected with goggles.

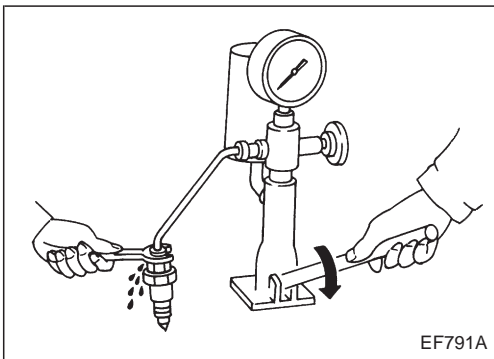

INJECTION PRESSURE TEST

1. Install nozzle to injection nozzle tester and bleed air from flare nut.

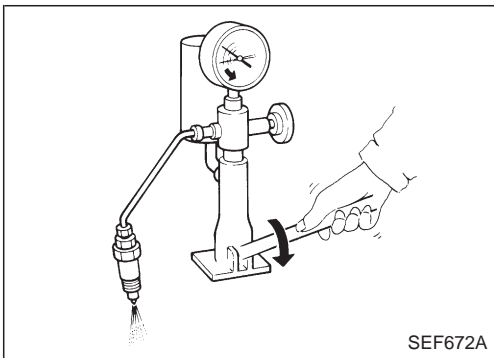


2. Pump the tester handle slowly (one time per second) and watch the pressure gauge.
3. Read the pressure gauge when the injection pressure just starts dropping.

Initial injection pressure:

Used	9,807 - 10,297 kPa (98.1 - 103.0 bar, 100 - 105 kg/cm ² , 1,422 - 1,493 psi)
New	10,297 - 11,278 kPa (103.0 - 112.8 bar, 105 - 115 kg/cm ² , 1,493 - 1,635 psi)

Always check initial injection pressure using a new nozzle.


Test and Adjustment (Cont'd)

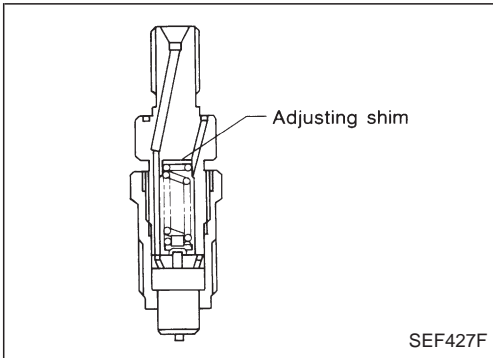

4. To adjust injection pressure, change adjusting shims.
 - a. **Increasing the thickness of adjusting shims increases initial injection pressure. Decreasing thickness reduces initial pressure.**
 - b. **A shim thickness of 0.04 mm (0.0016 in) corresponds approximately to a difference of 471 kPa (4.71 bar, 4.8 kg/cm², 68 psi) in initial injection pressure.**


Refer to "Injection Nozzle" in SDS for adjusting shims, EC-233.

LEAKAGE TEST

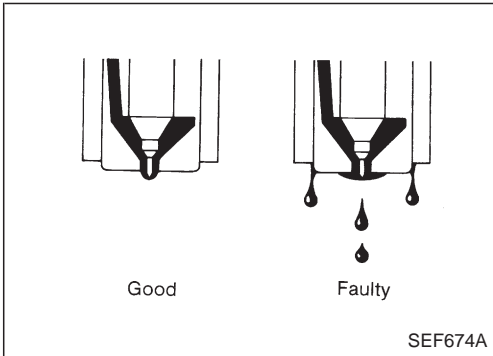

1. Maintain the pressure at about 981 to 1,961 kPa (9.8 to 19.6 bar, 10 to 20 kg/cm², 142 to 284 psi) below initial injection pressure.
2. Check that there is no dripping from the nozzle tip or around the body.
3. If there is leakage, clean, overhaul injection nozzle or replace it.

SPRAY PATTERN TEST

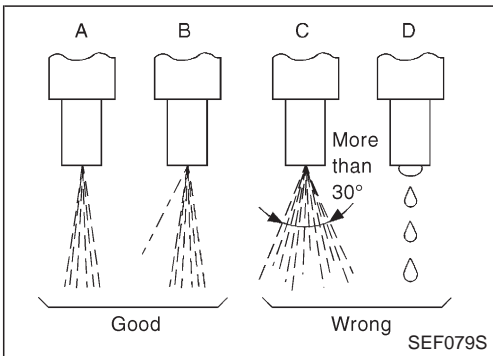




1. Check spray pattern by pumping tester handle one full stroke per second.
 - a. **If main spray angle is within 30 degrees as shown, injection nozzle is good.**
 - b. **It is still normal even if a thin stream of spray deviates from main spray (pattern B).**
2. If injection nozzle is not normal, adjust or clean injection nozzle or replace it.

Bleeding Fuel System

Air should be bled out of fuel system when injection pump is removed or fuel system is repaired.

Protect pump and engine mounts from fuel splash with rags. If engine will not start after bleeding air, loosen injection tubes at nozzle side and crank engine until fuel overflows from injection tube. Tighten injection tube flare nuts.

If the engine does not operate smoothly after it has started, race it two or three times.

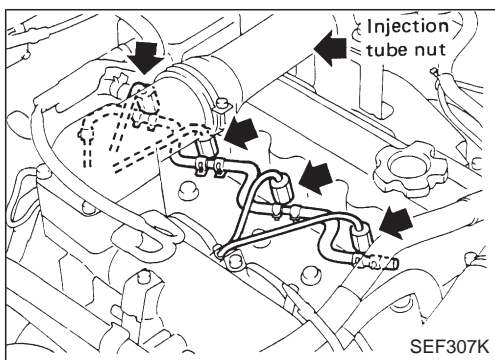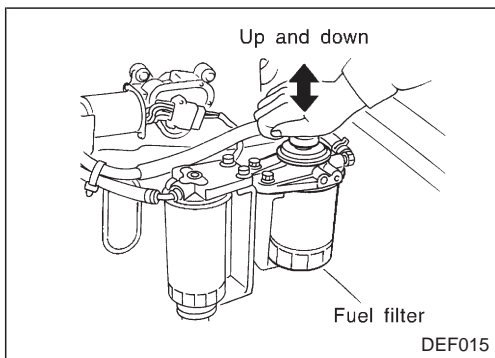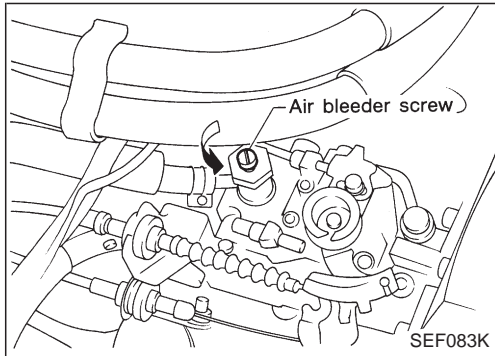

CAUTION:

Wipe up any fuel discharged while bleeding air during each step.

● Step 1: Fuel filter and injection pump bleeding

1. Loosen air bleeder screw to injection pump.
2. Move fuel filter priming pump up and down until no further air comes out of air bleeder screw.
3. Tighten air bleeder screw.


● Step 2: Fuel injection tube and spill tube air bleeding

1. Loosen injection tube nuts on nozzle holder side.
2. Move the priming pump up and down until no further air comes out of the injection tube nuts.
3. Tighten the injection tube nuts.

: 20 - 25 N·m (2.0 - 2.5 kg-m, 14 - 18 ft-lb)

Bleeding Fuel Filter


1. Move the priming pump up and down to bleed air from the fuel filter.
2. When air is completely bled from the fuel pump, priming pump operation becomes noticeably heavy. Stop pump operation.

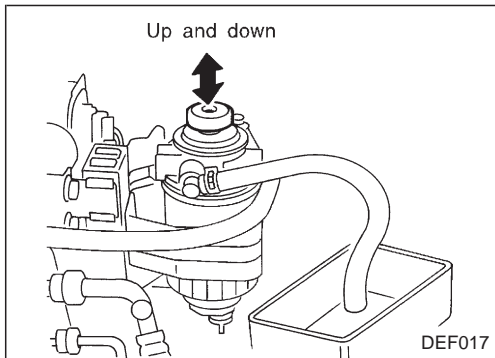

Checking Priming Pump

Before checking priming pump, make sure that fuel filter is filled with fuel.

1. Disconnect fuel return hose.
- Place a suitable container beneath hose end.**
2. Pump priming pump and check that the fuel overflows from the hose end. If not, replace priming pump.

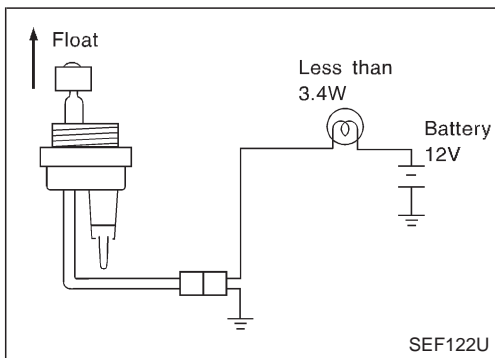


Checking Fuel Filter Switch

1. Remove the connector from filter and fuel filter switch.
2. Turn the key switch "ON". Lift the float to ensure that the warning lamp turns on.

Fuel filter switch tightening torque:

⚙️: 3.9 - 5.9 N·m (0.4 - 0.6 kg·m, 35 - 52 in-lb)

Discard the old O-ring and replace it with a new one.

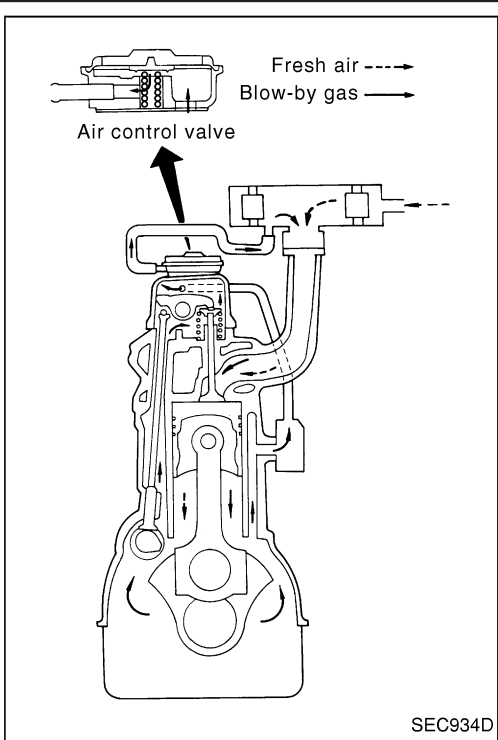

Positive Crankcase Ventilation


DESCRIPTION

The open-type crankcase ventilation system is utilized as a crankcase emission control system.

The open-type crankcase emission control system prevents blow-by gas from emitting the atmosphere and keeps the internal crankcase pressure constant.

During the valve operation, the blow-by gas is fed into the intake manifold by the air control valve.

This is activated by the intake manifold vacuum. When the intake air flow is restricted by the throttle body, the internal rocker cover pressure decreases. At this point, the air control valve keeps the internal rocker cover pressure constant so that air or dust is not sucked in around the crankshaft oil seal.

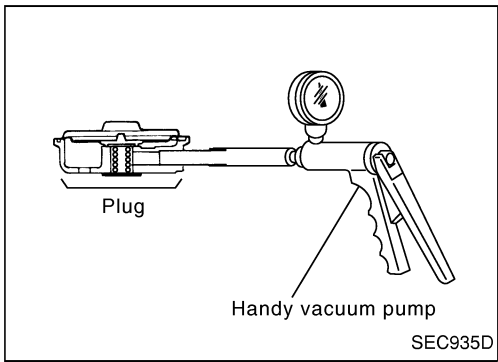


INSPECTION

Air control valve

1. Remove rocker cover.
2. Remove air control valve from rocker cover.
3. Check the valve as follows.
 - a. Plug all the lower holes.
 - b. While applying the vacuum with a handy vacuum pump, make sure that valve operating sound is heard.

CAUTION:

Before starting inspection, wipe off any engine oil if it exists in the valve.

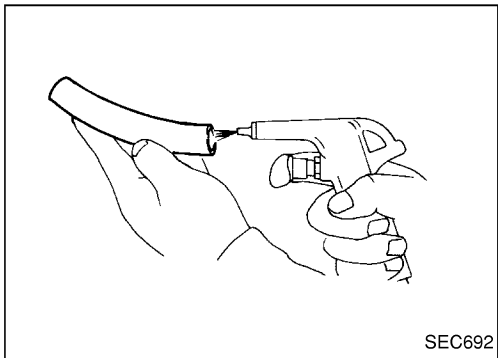


Ventilation hose




1. Check hoses and hose connections for leaks.
2. Disconnect all hoses and clean with compressed air. If any hose cannot be freed of obstructions, replace.

Component Parts Location

Under instrument panel

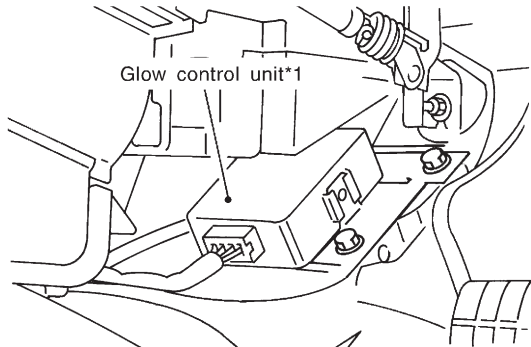


*1: Engine control module (For Europe)

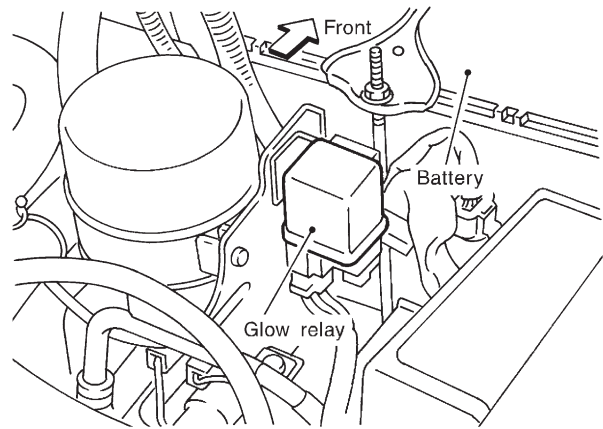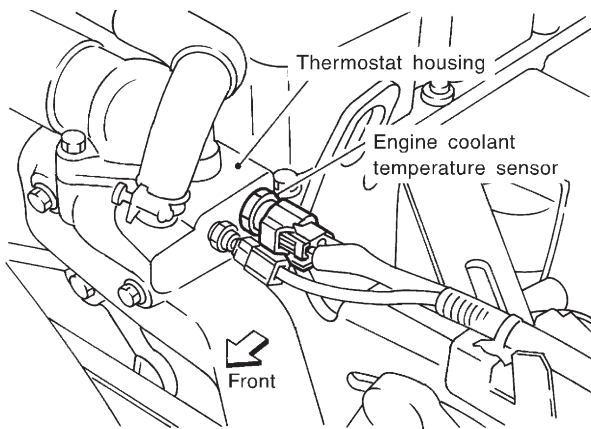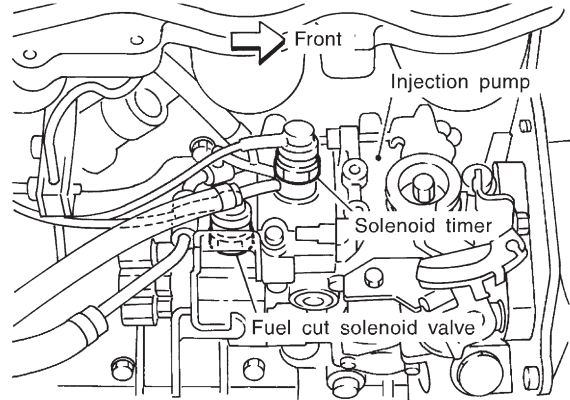

DEF030-N


Circuit Diagram

(TW) : With NATS
 (OT) : Without NATS
 *1 : Refer to "NATS" in EL section.

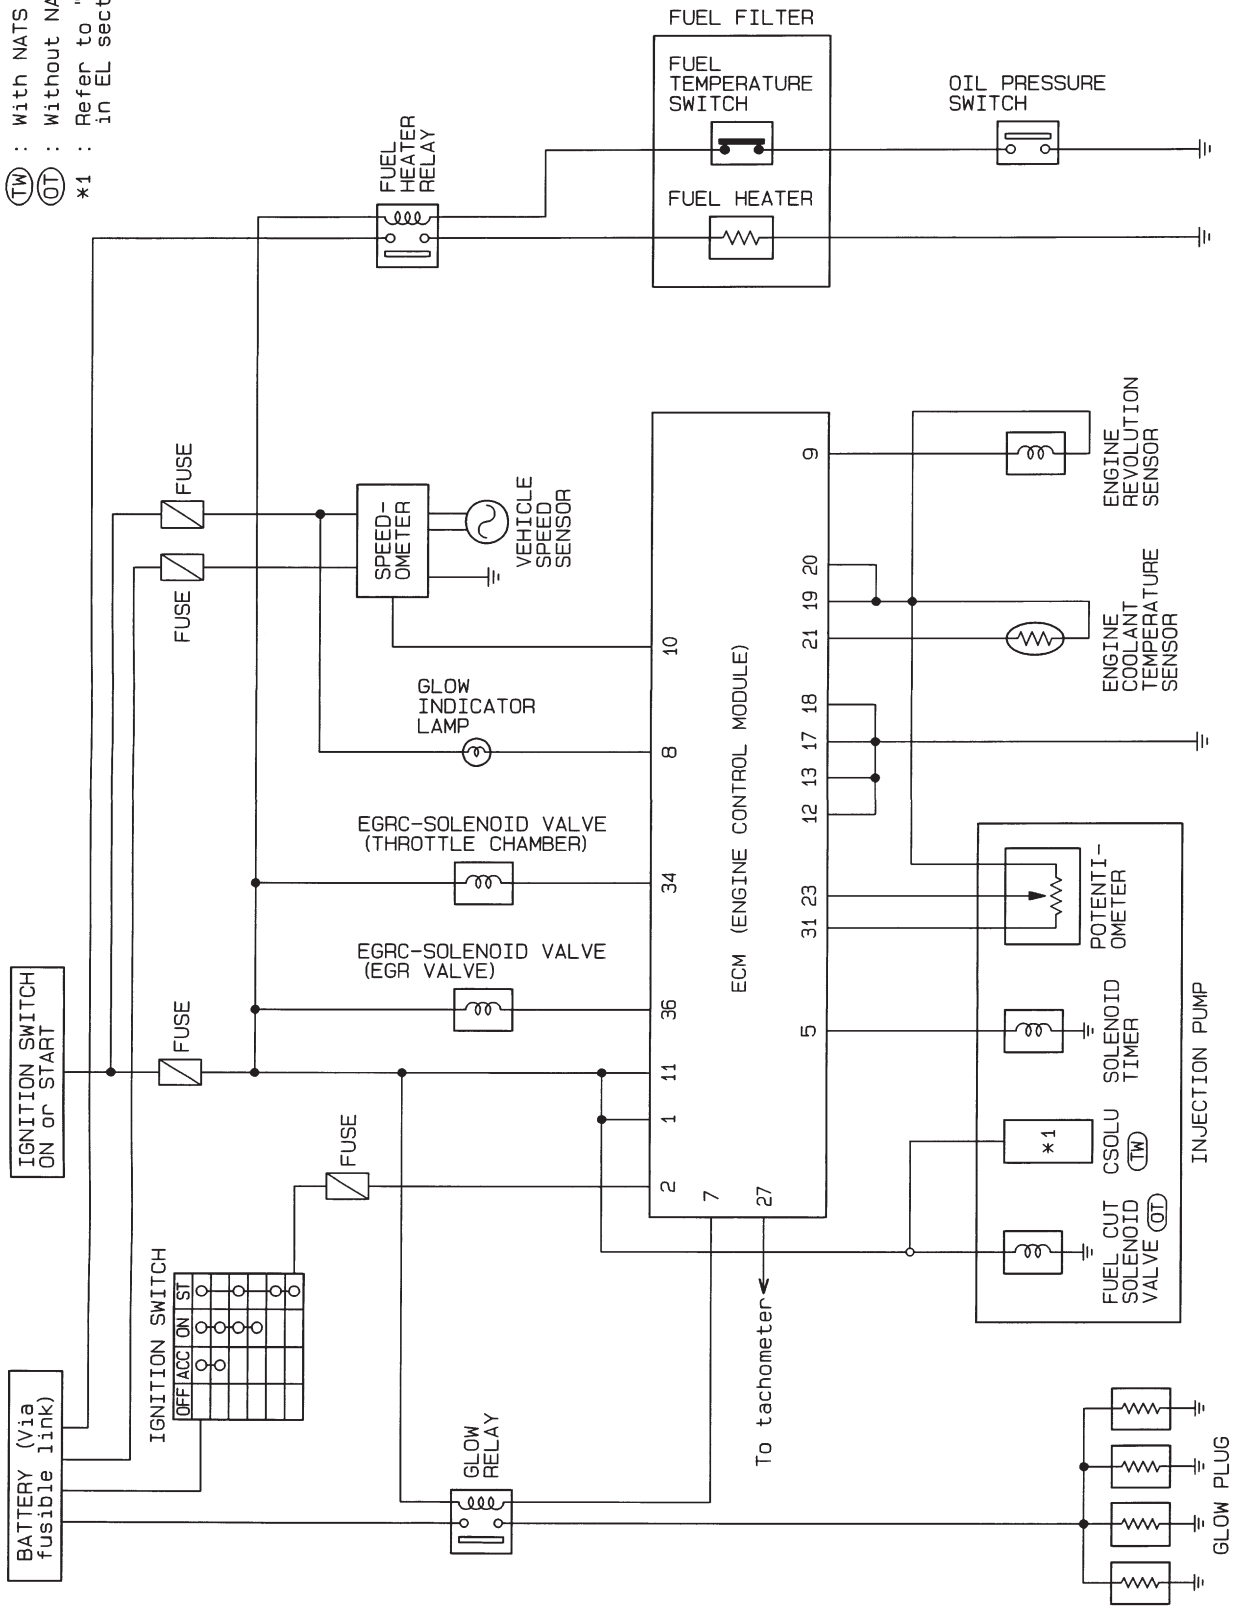

HEC570

Description

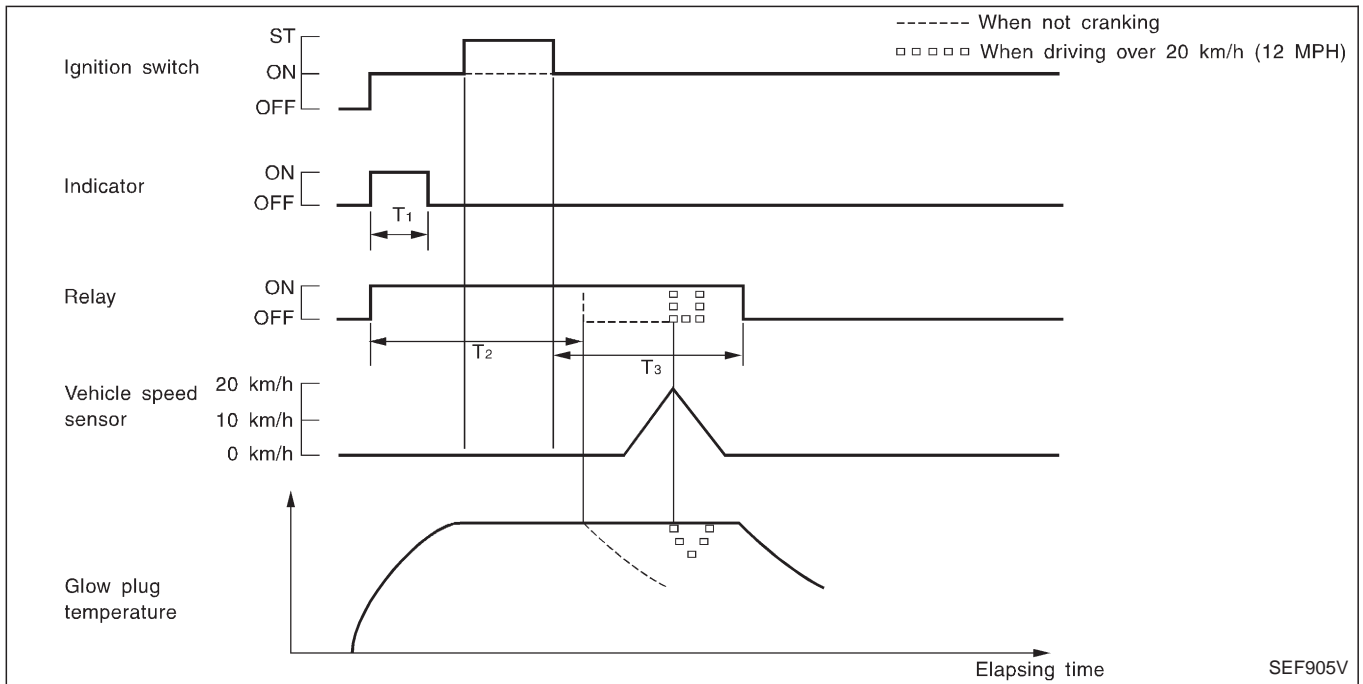


When coolant temperature is lower than 50°C (122°F), the relay is turned on at the same time that the ignition switch is turned on. From this time, the electric current flows through the glow plugs and heats them up quickly. After T₁ seconds have passed, the control unit turns off the indicator. The relay automatically turns off after it has been on for T₂ seconds or the cranking time, whichever is longer. The relay remains on for T₃ seconds after the ignition switch has returned to “ON” from “START”. These features improve the combustion performance of the engine after it has started. When the coolant temperature is higher than 50°C (122°F), the relay is turned on only during engine cranking.

T ₁ : approx. 2 - 6	[sec.]	(Varies with coolant temperature.)
T ₂ : 30	[sec.]	[When coolant temperature is below 50°C (122°F).]
5	[sec.]	[When coolant temperature is over 50°C (122°F).]
T ₃ : 600	[sec.]	[When coolant temperature is below 50°C (122°F).]
0	[sec.]	[When coolant temperature is over 50°C (122°F).]

Wiring Diagram

TD25 ENGINE (LHD)

EC-GLOW-01

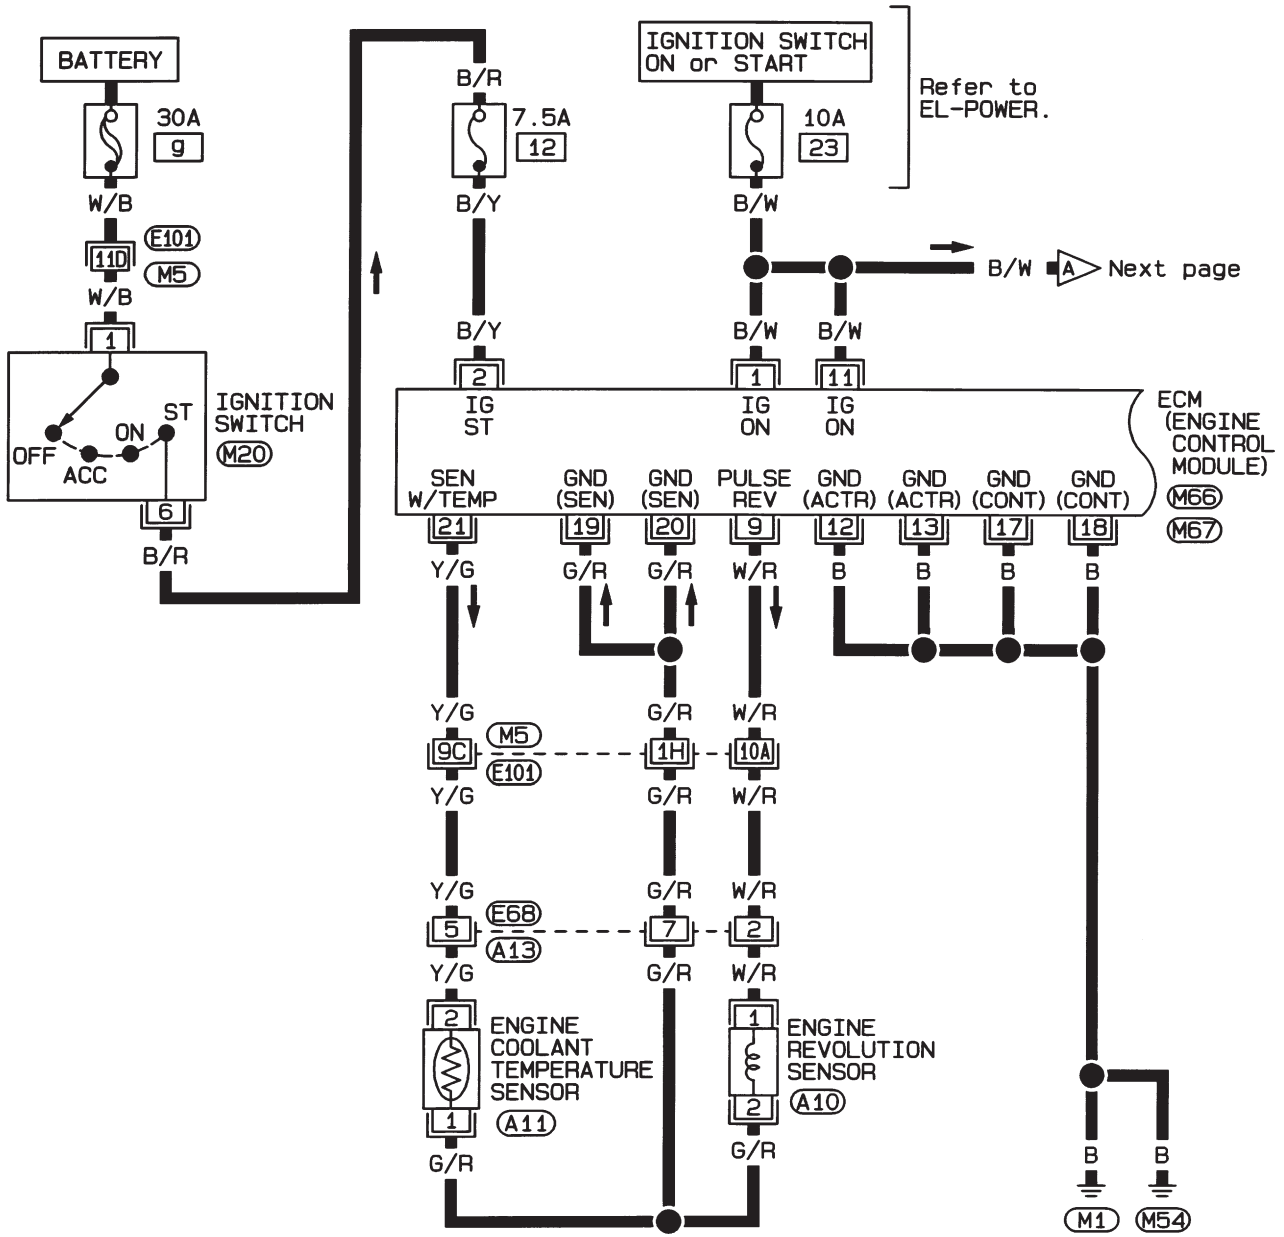

Refer to EL-POWER.


Next page

ECM (ENGINE CONTROL MODULE) (M66) (M67)



Refer to last page (Foldout page).


(M5), (E101)

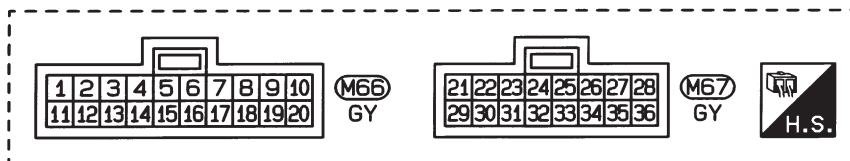

Wiring Diagram (Cont'd)

TD25 ENGINE (LHD)

EC-GLOW-02


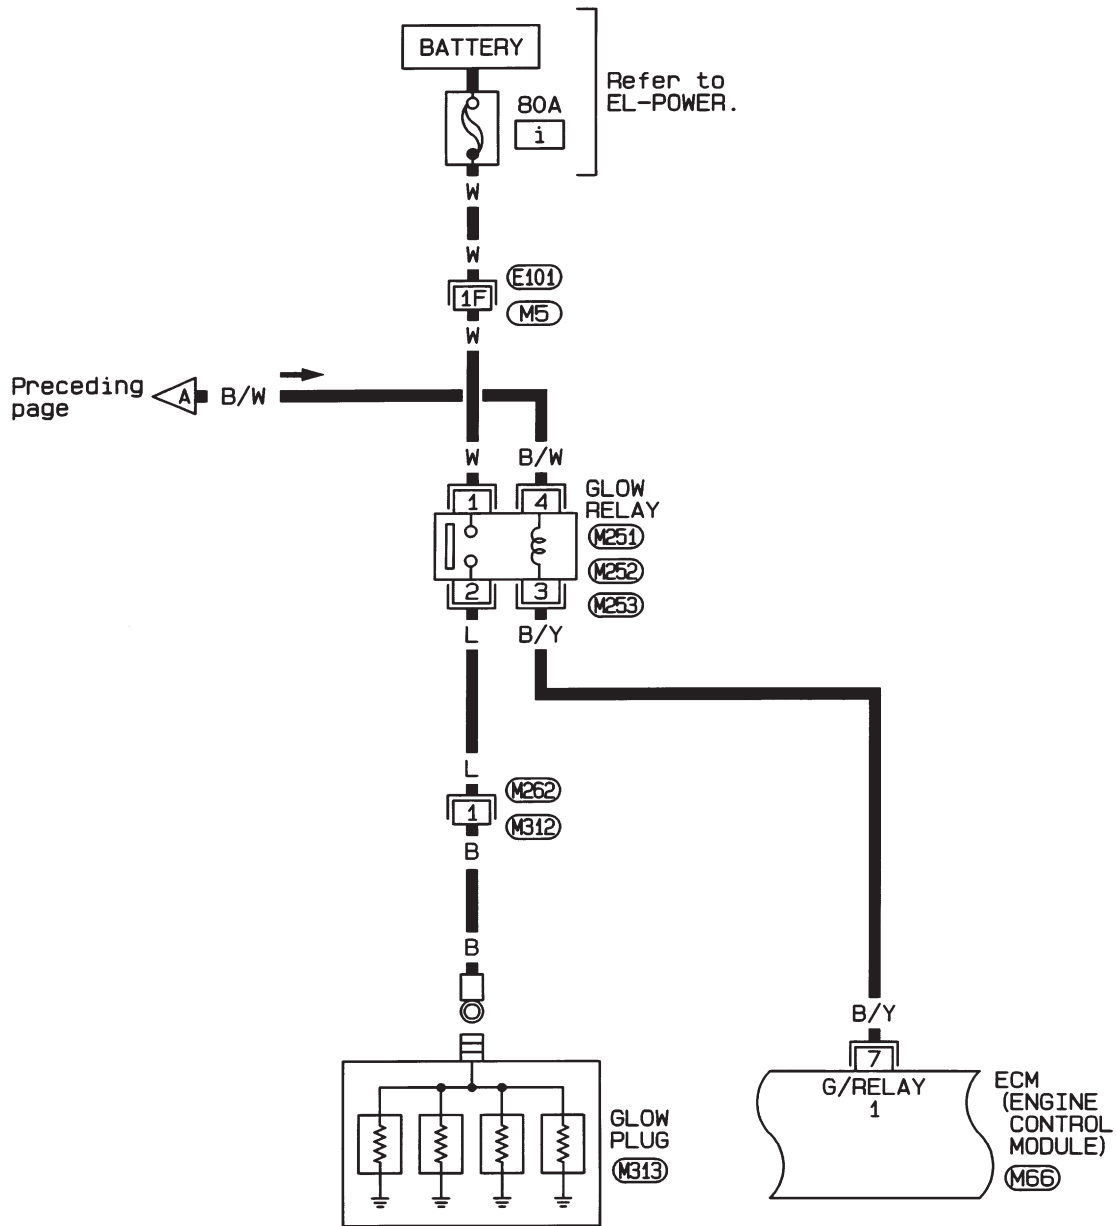


Refer to EL-POWER.

Preceding page \triangleleft A B/W \rightarrow

Refer to last page (Foldout page).


M5, E101



Wiring Diagram (Cont'd)



TD25 ENGINE (LHD)

EC-GLOW-03

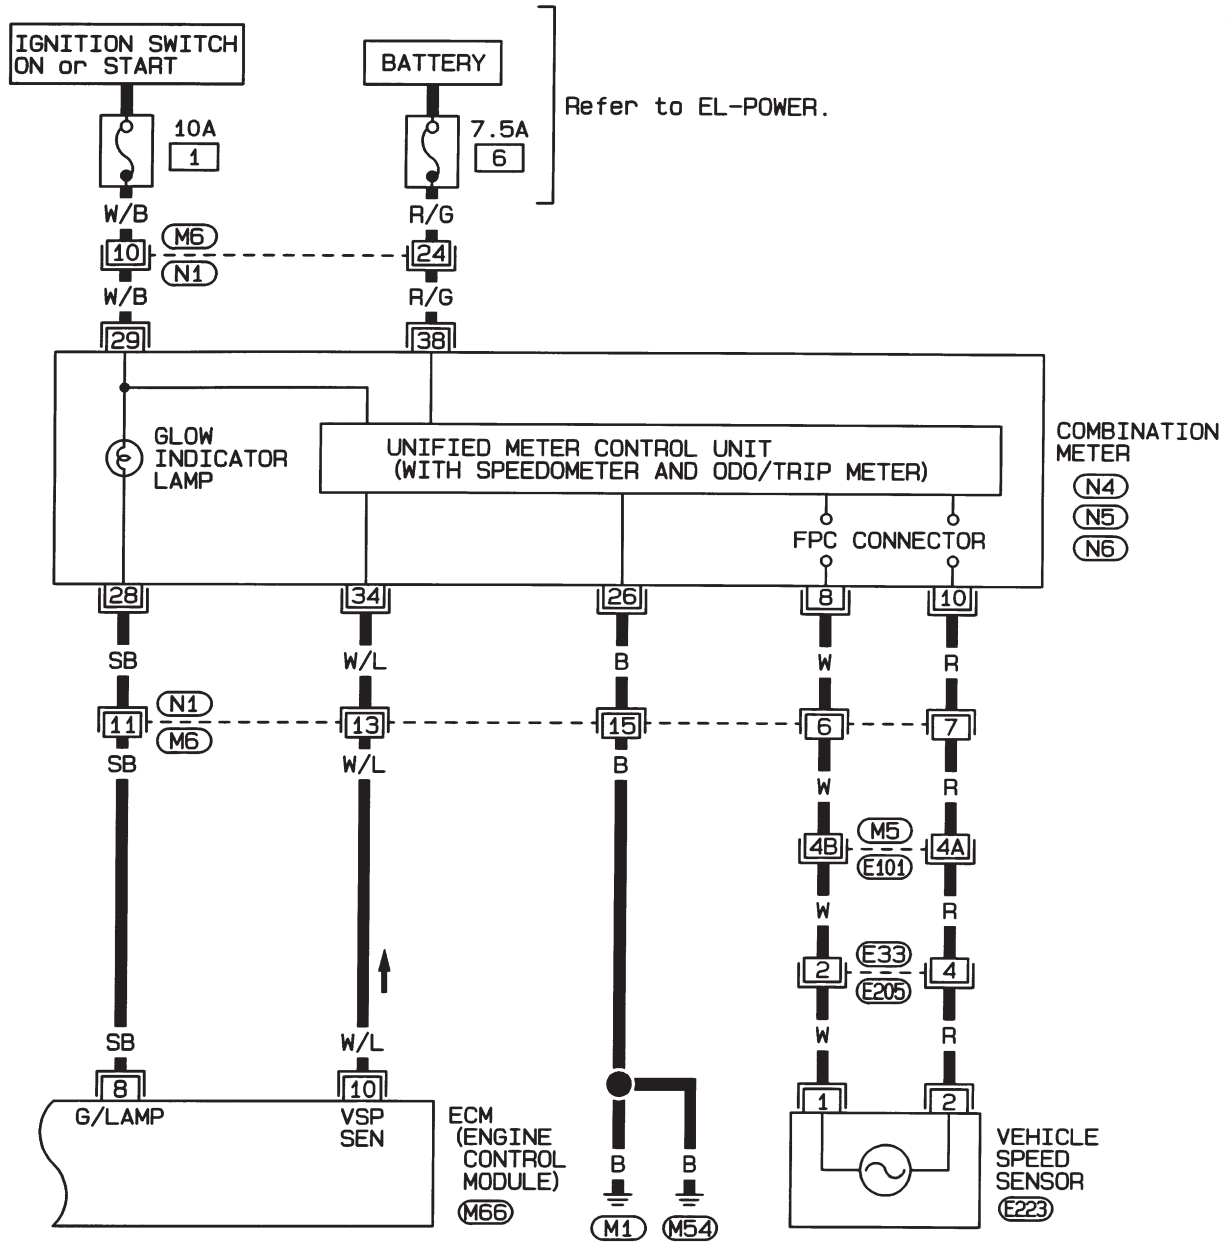

Refer to last page (Foldout page).

(M5), (E101)




HEC573

Wiring Diagram (Cont'd)


TD25 ENGINE (RHD)

EC-GLOW-04

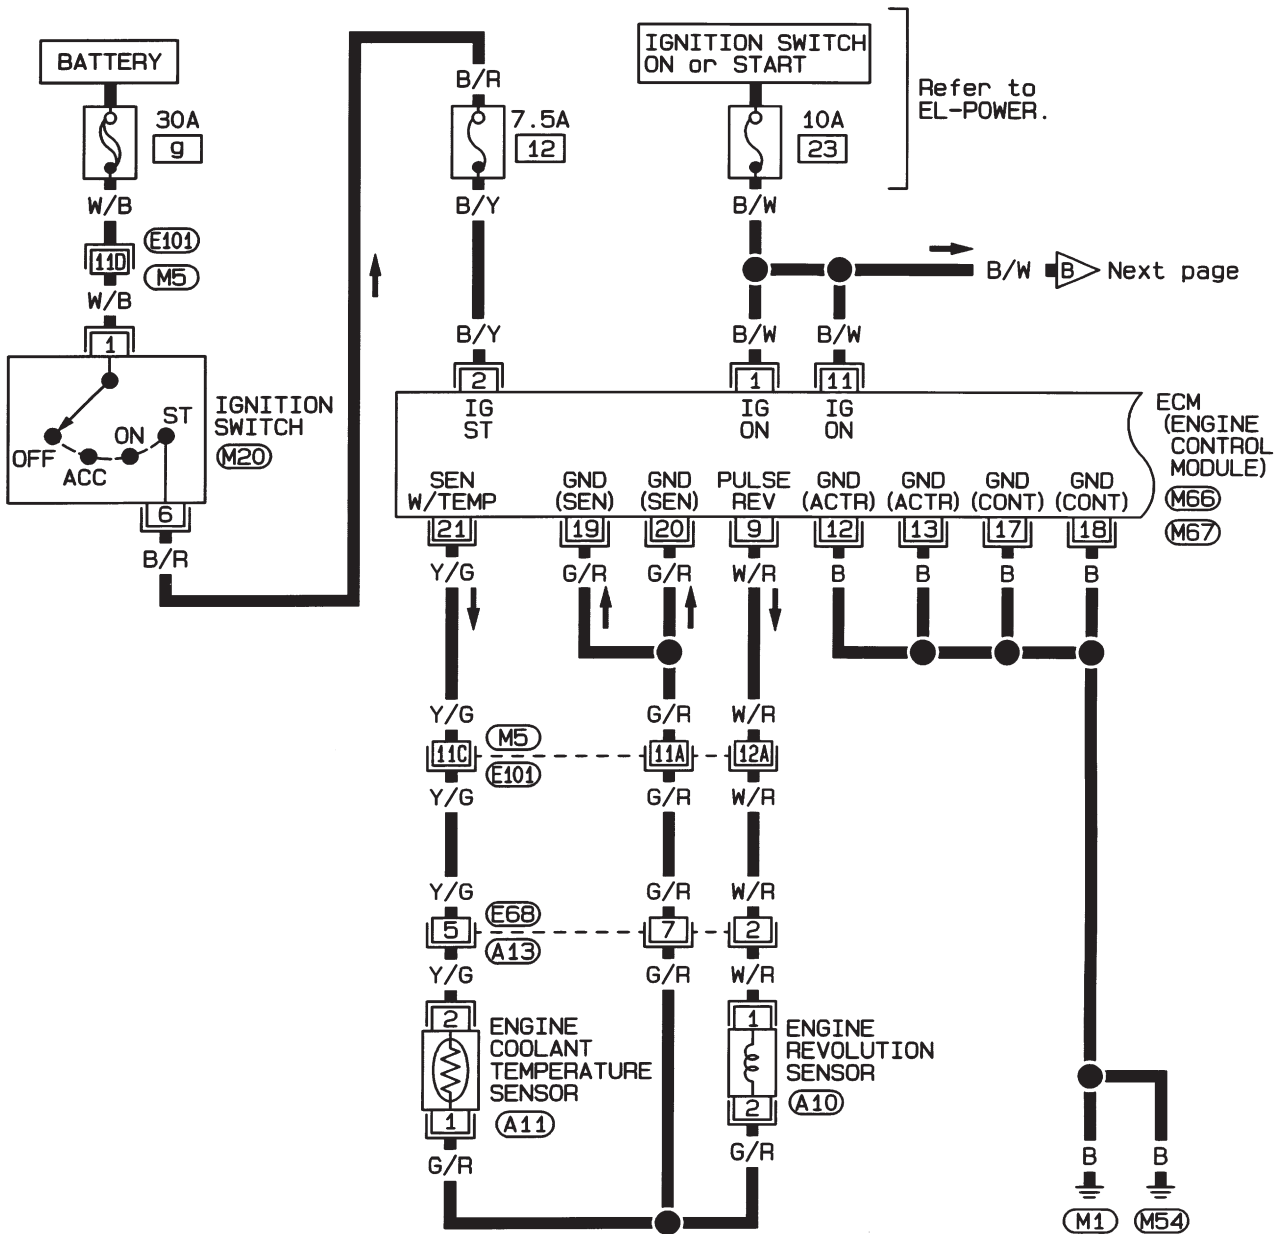

Refer to last page (Foldout page).



M5, E101

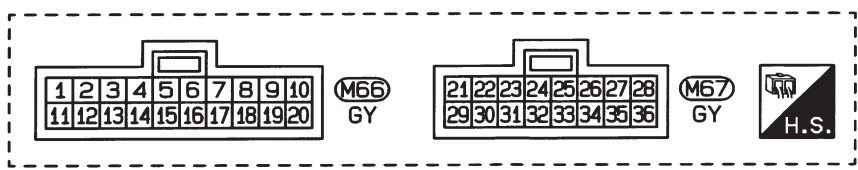

Wiring Diagram (Cont'd)

TD25 ENGINE (RHD)

EC-GLOW-05

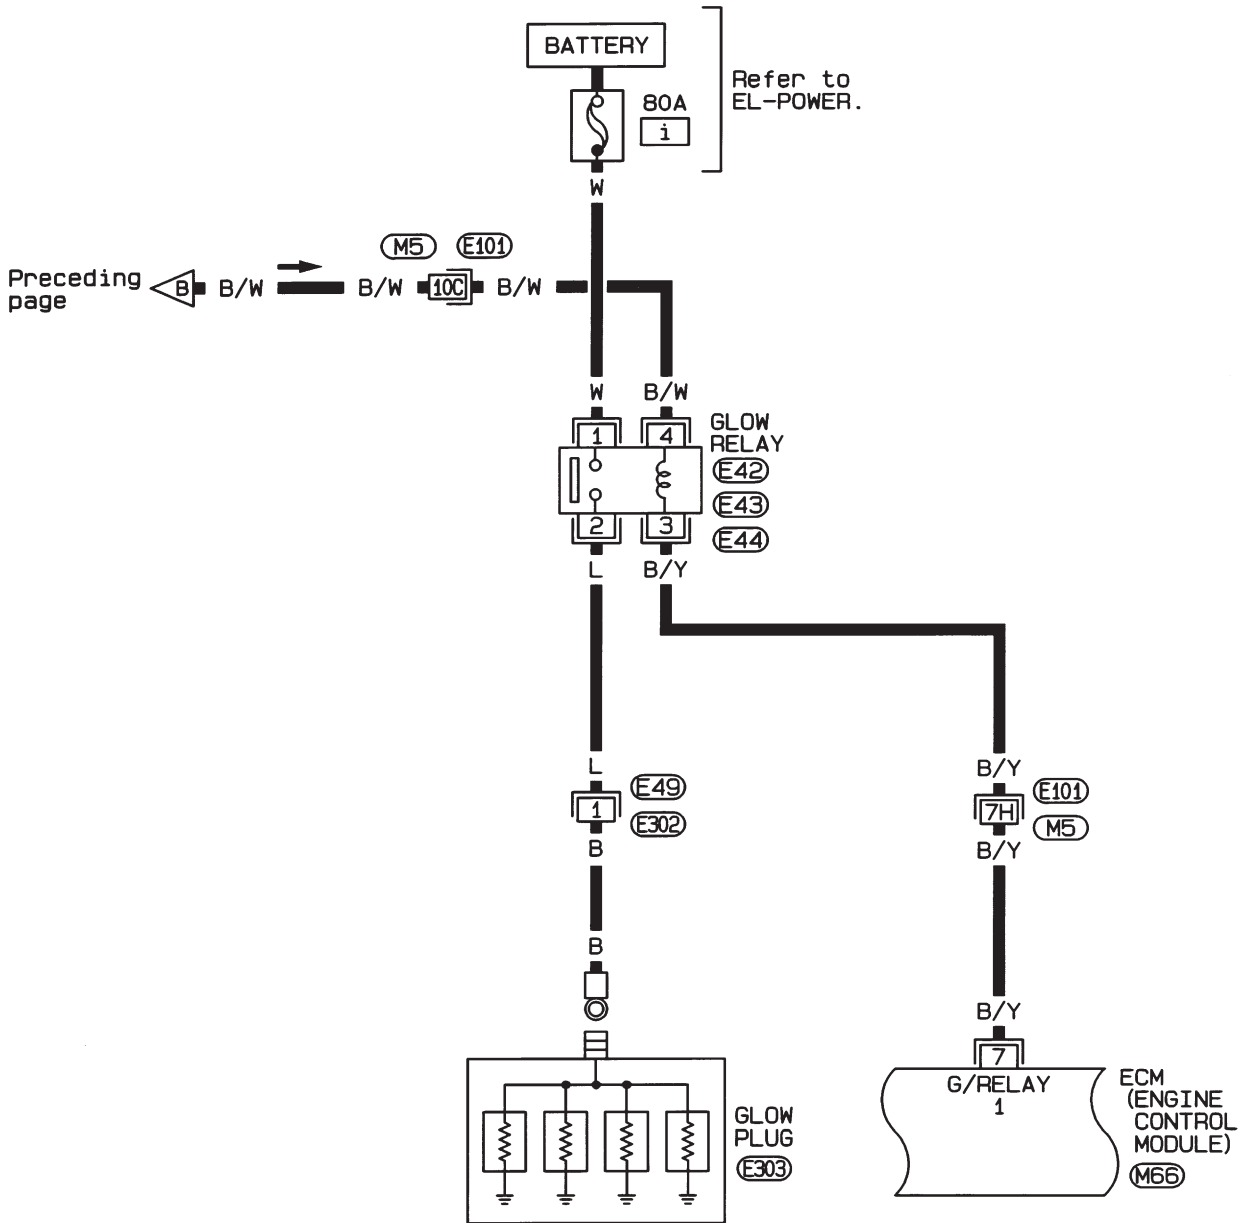


Refer to last page (Foldout page).

M5, E101

Wiring Diagram (Cont'd)


TD25 ENGINE (RHD)


EC-GLOW-06

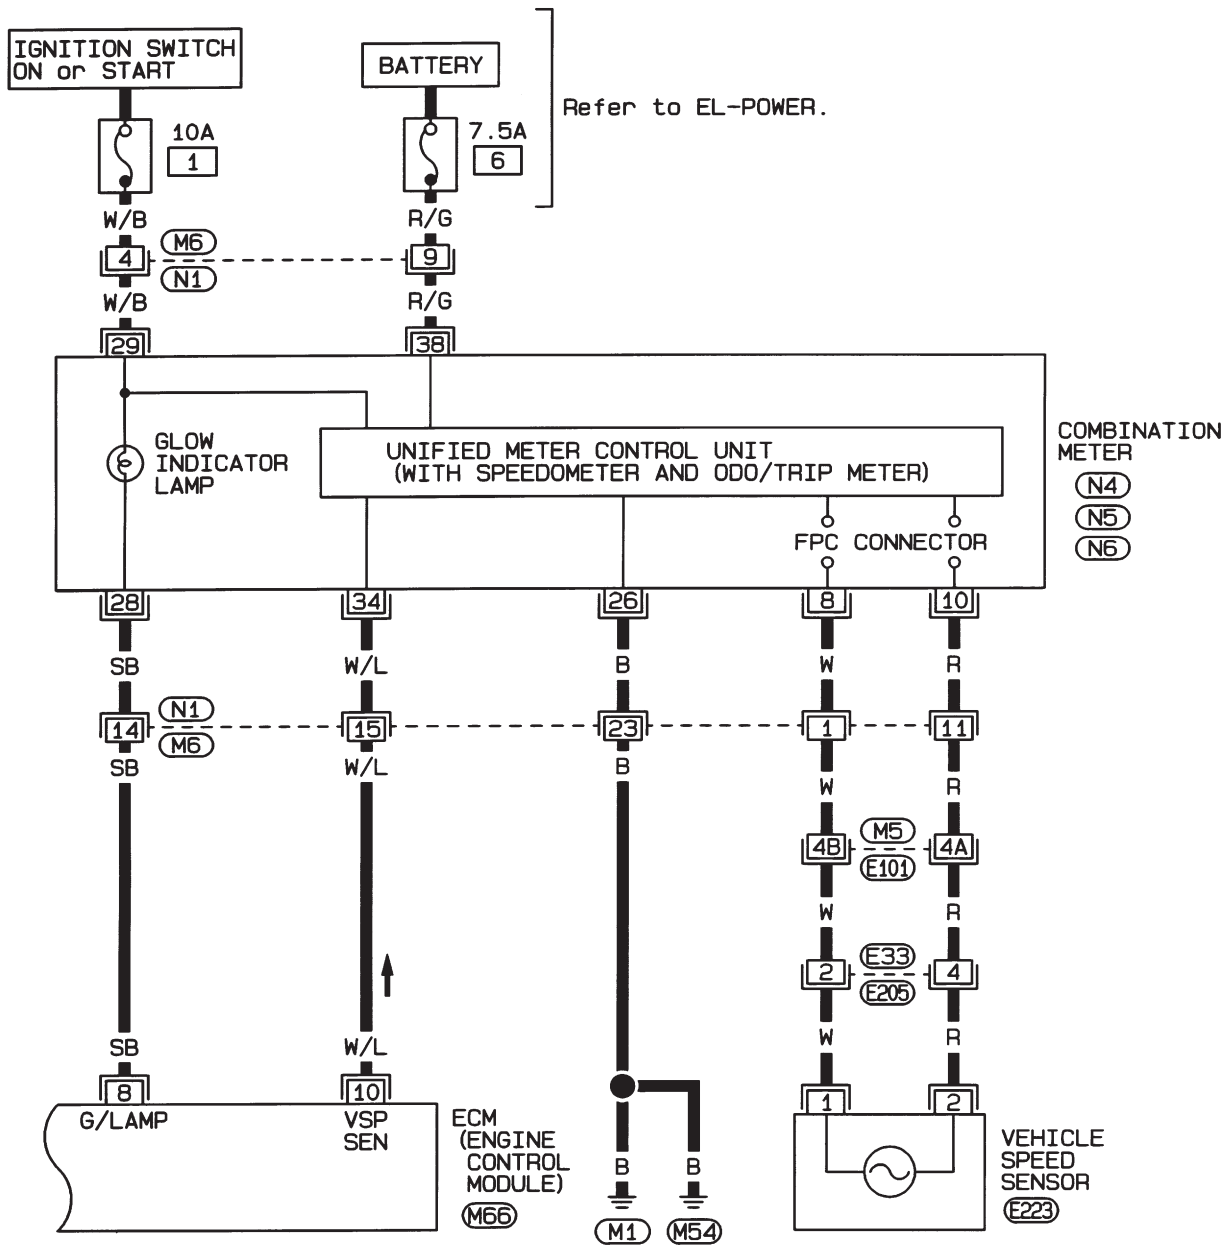

Refer to last page (Foldout page).


(M5), (E101)



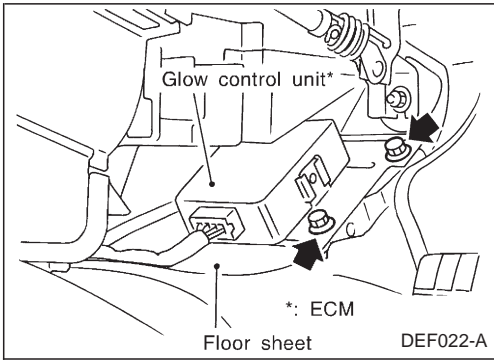

Glow Control Unit Circuit Inspection (For Cold Areas)


Roll up the floor sheet. Check the glow control unit.

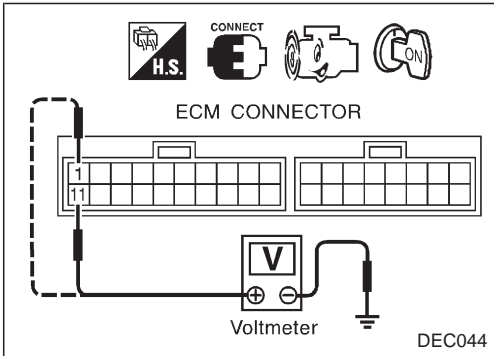

POWER SUPPLY CIRCUIT

Turn ignition switch ON and check voltage between terminal ① or ⑪ and body ground.


Voltage: approx. 12V

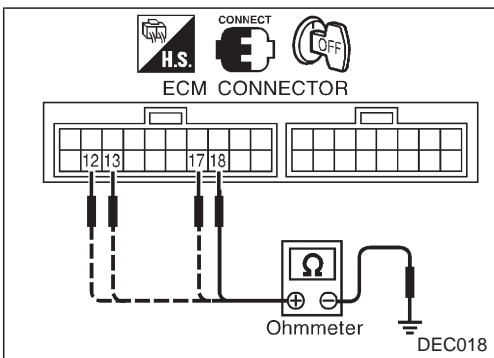

GROUND CIRCUIT

Check continuity between terminal ⑫, ⑬, ⑰ or ⑱ and body ground.


Continuity should exist.

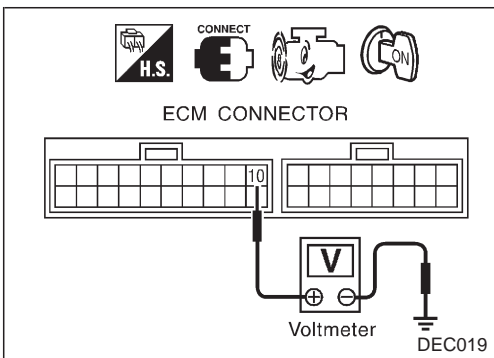

VEHICLE SPEED SENSOR CIRCUIT

While running vehicle or lifting rear wheels in 2WD position, check that voltage between terminal ⑩ and body ground fluctuates.

Voltage: approx. 5V

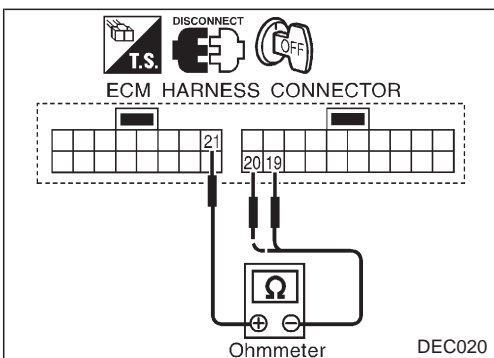

ENGINE COOLANT TEMPERATURE SENSOR CIRCUIT


Check continuity between terminals ⑳ and ⑲ or ㉑.

Measure resistance to temperature approximately as shown in "ENGINE COOLANT TEMPERATURE SENSOR", "Component Inspection", EC-209.

Glow Control Unit Circuit Inspection (For Cold Areas) (Cont'd)

START SIGNAL INPUT CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect harness connector from the starter motor's "S" terminal.
3. Check terminal voltage between terminals ② and ⑫, ⑬, ⑰ or ⑱ when the ignition switch is at "START".
Voltage: approx. 12V

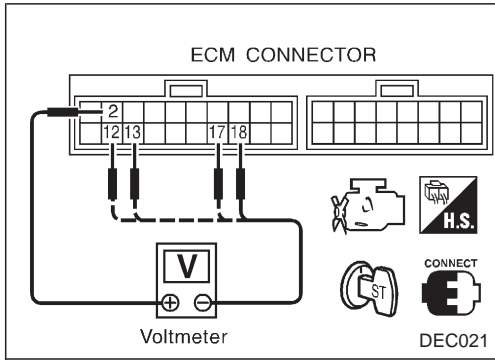




GLOW INDICATOR CONTROL CIRCUIT

1. Turn ignition switch OFF.
2. Leave harness connector joined to glow control unit.
3. Connect test lamp to glow control unit as shown.
4. Turn ignition switch to ON and measure the time the test lamp stays lit.

Time the test lamp should stay lit:

Approx. 2 - 6 seconds

(The time will vary according to coolant temperature.)

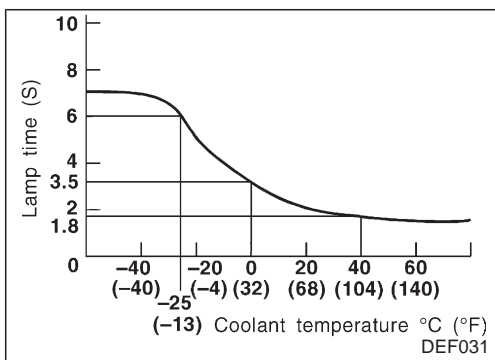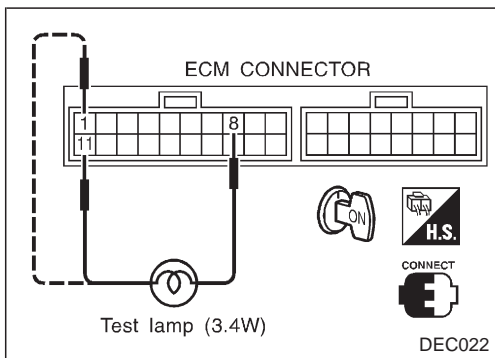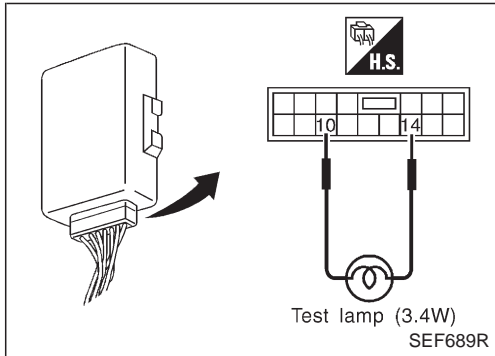





Glow Control Unit Circuit Inspection (For Cold Areas) (Cont'd)

PRE-GLOW CONTROL CIRCUIT

1. Turn ignition switch OFF.
2. Leave harness connector joined to glow control unit.
3. Connect test lamp to glow control unit as shown below.
4. Turn ignition switch ON and measure terminal voltage and the time the test lamp stays lit.

Battery voltage should appear for 30 seconds at coolant temperature below 50°C (122°F).


Battery voltage should appear for 5 seconds at coolant temperature over 50°C (122°F).

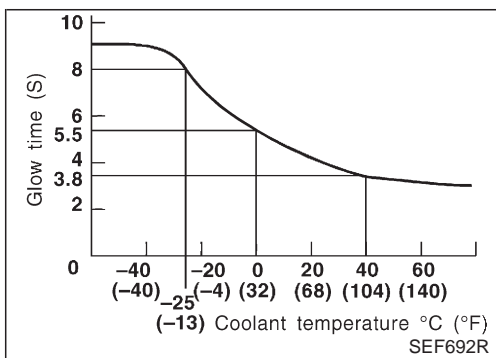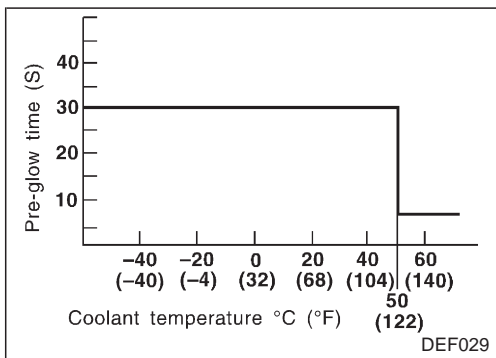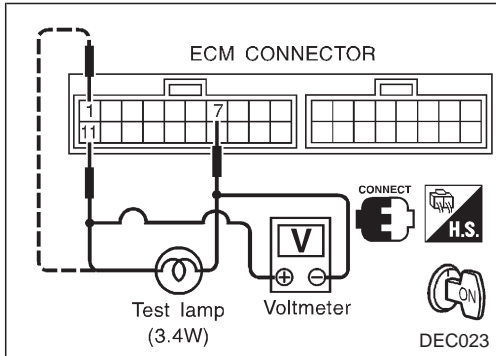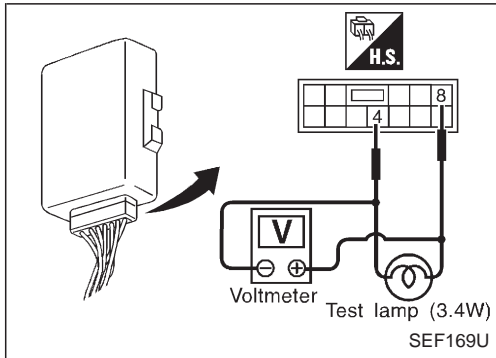


- The time will be shortened if ignition switch is OFF for only a brief period. Therefore, when measuring the time, leave ignition switch OFF for more than 1 minute, and then turn ignition switch ON.
- When the coolant temperature is below 10°C (50°F), the battery voltage should appear for 30 seconds.

AFTER-GLOW CONTROL CIRCUIT

1. Connect test lamp to glow control unit as shown.
2. Turn ignition switch to START and run engine, then measure glow plug terminal voltage and the time the test lamp stays lit.

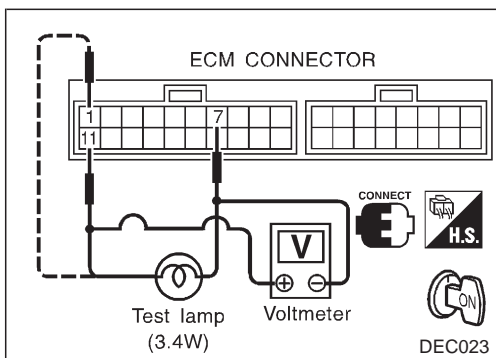

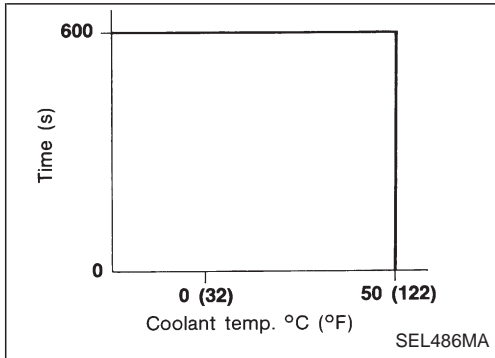


Glow Control Unit Circuit Inspection (For Cold Areas) (Cont'd)

Battery voltage should continue for 10 minutes at coolant temperature below 50°C (122°F).

[If vehicle speed is above 20 km/h (12 MPH), glow plug terminal voltage should drop to 0V. If the speed drops below 10 km/h (6 MPH), the battery voltage should appear.]

The voltage should not appear at coolant temperature over 50°C (122°F).

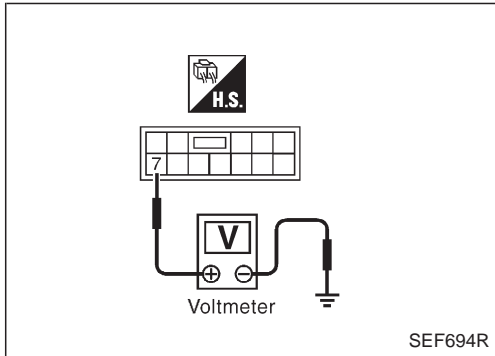


Glow Control Unit Circuit Inspection (Except for Cold Areas)

POWER SUPPLY CIRCUIT

Turn ignition switch ON and check voltage between terminal ⑦ and body ground.


Voltage: approx. 12V

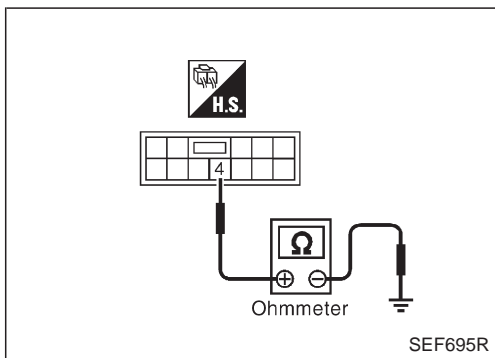

GROUND CIRCUIT

Check continuity between terminal ④ and body ground.


Continuity should exist.

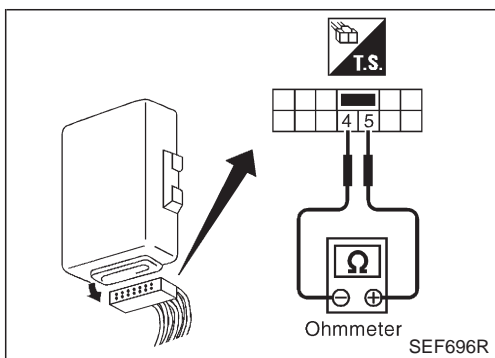

ENGINE COOLANT TEMPERATURE SENSOR CIRCUIT

Check continuity between terminals ⑤ and ④.

Measure resistance to temperature approximately as shown in "ENGINE COOLANT TEMPERATURE SENSOR", "Component Inspection", EC-209.

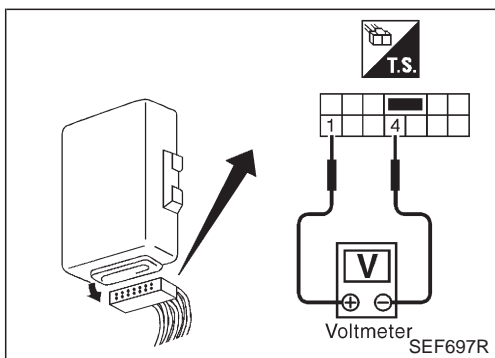


START SIGNAL INPUT CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect harness connector from the starter motor's "S" terminal.
3. Check terminal voltage between terminals ① and ④ when the ignition switch is at "START".

Voltage: approx. 12V

Glow Control Unit Circuit Inspection (Except for Cold Areas) (Cont'd)

GLOW INDICATOR CONTROL CIRCUIT

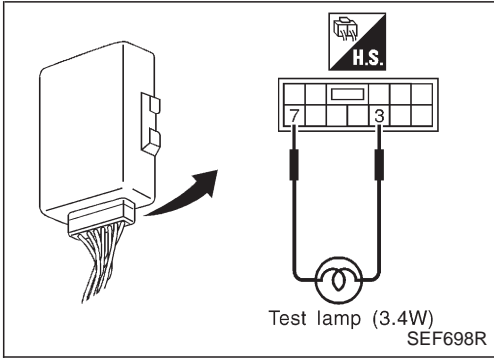


1. Turn ignition switch OFF.
2. Leave harness connector joined to glow control unit.
3. Connect test lamp to glow control unit as shown.
4. Turn ignition switch to ON and measure the time the test lamp stays lit.

Time the test lamp should stay lit:


Approx. 2 - 6 seconds

(The time will vary according to coolant temperature.)

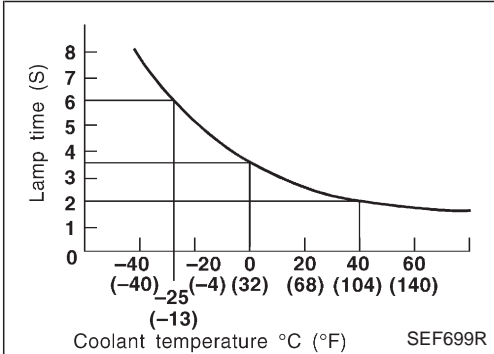

GLOW CONTROL CIRCUIT

Pre-glow control

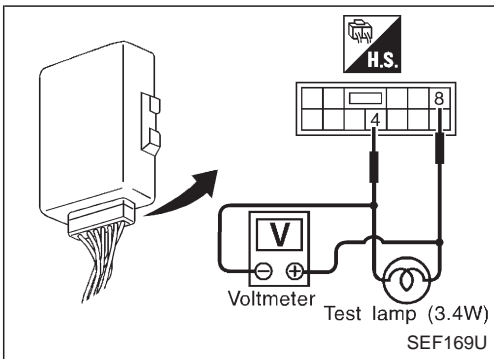


1. Turn ignition switch OFF.
2. Leave harness connector joined to glow control unit.
3. Connect test lamp to glow control unit as shown.
4. Turn ignition switch ON and measure terminal voltage and the times the test lamp turns on and off.

1) At coolant temperature below 50°C (122°F) the battery voltage appears for 15 seconds.

● **Battery voltage should appear for 4 to 8 seconds*, and then be chopped intermittently for the rest time.**

* **Pre-glow time (Varies with coolant temperature)**

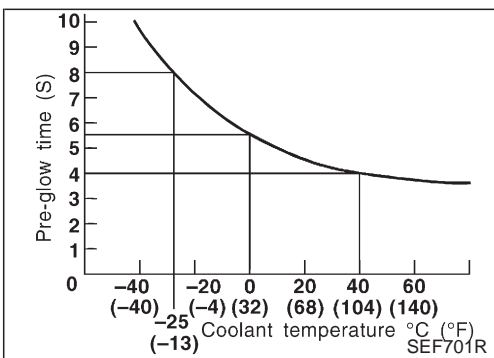


● **The time will be shortened if ignition switch is OFF for only a brief period.**

Therefore, when measuring the time, leave ignition switch OFF for more than 1 minute, and then turn ignition switch ON.

The test lamp turns on and off approx. 1 - 3 times after it stayed lit.


2) At coolant temperature over 50°C (122°F) the battery voltage appears for approximately 3 seconds.

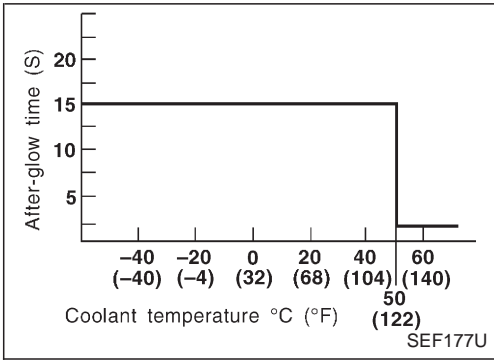

Glow Control Unit Circuit Inspection (Except for Cold Areas) (Cont'd)

After-glow control


1. Turn ignition switch OFF.
2. Leave harness connector joined to glow control unit.
3. Connect test lamp to glow control unit as shown in "Pre-glow control".
4. Turn ignition switch to START and return to ON. Measure terminal voltage and count the times the test lamp turns on and off.
 - 1) At coolant temperature below 50°C (122°F) the battery voltage appears intermittently for 15 seconds. Test lamp turns on and off approx. 3 times.
 - 2) At coolant temperature over 50°C (122°F) the battery voltage appears for 2 seconds.

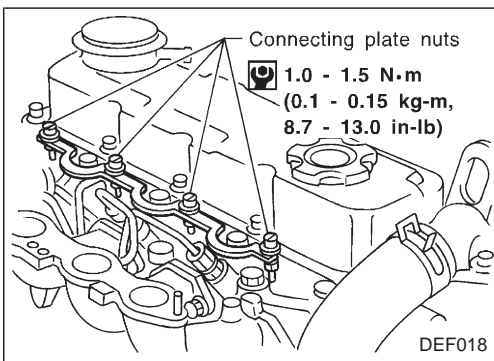

Component Inspection

GLOW PLUG CONNECTING PLATE NUTS

Check that all glow plug connecting plate nuts and harness nut are installed securely.

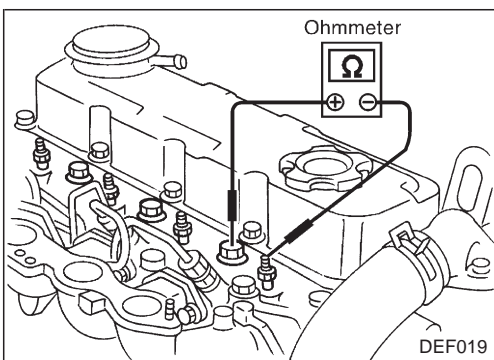


GLOW PLUG

Remove glow plug connecting plate and perform continuity test between each glow plug and cylinder head.

No continuity ... Replace glow plug.

Two manufacturer's ceramic glow plugs are provided on TD25 engine.

A color mark of orange or blue is put on the glow plug head. Do not mix them in one engine. Do not use if dropped on the floor.

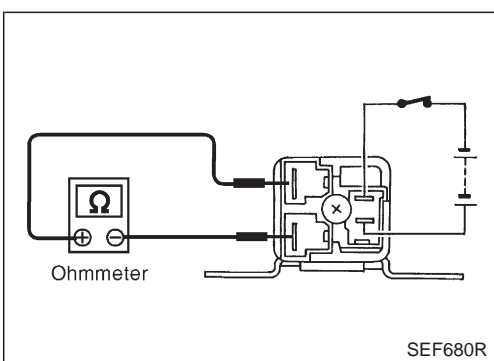


GLOW RELAY

The glow relay is normally open.

Component Inspection (Cont'd)
ENGINE COOLANT TEMPERATURE SENSOR


Disconnect engine coolant temperature harness connector and measure resistance.

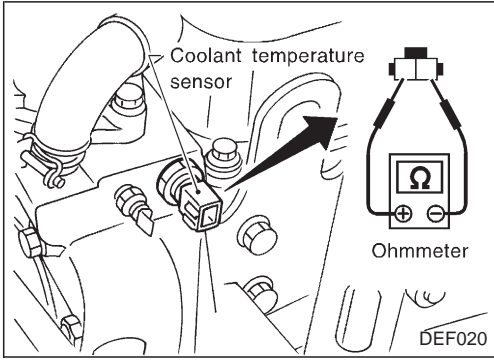








Coolant temp. °C (°F)	Resistance kΩ
-25 (-13)	19
0 (32)	5.6
20 (68)	2.5
40 (104)	1.2

Component Parts Location

Under instrument panel

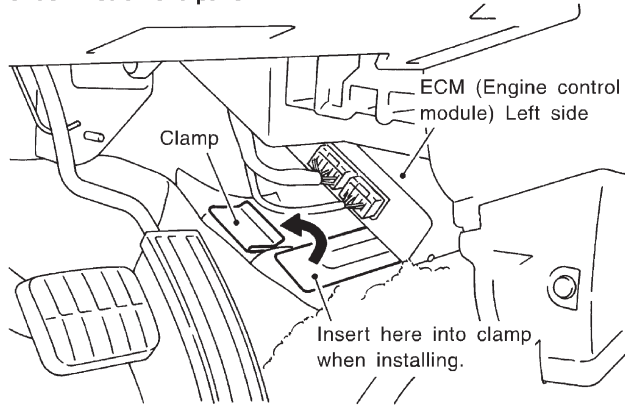


Under instrument panel

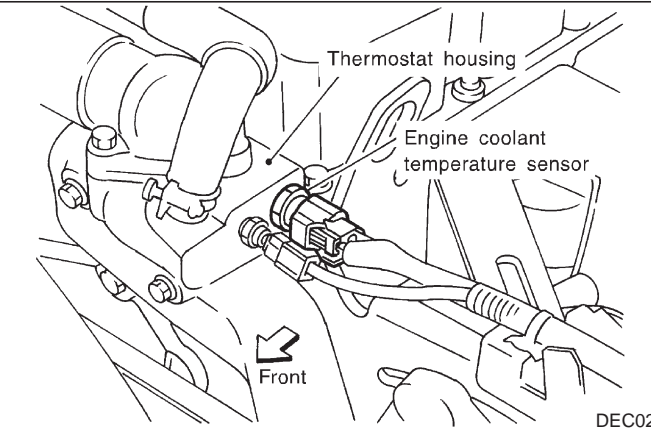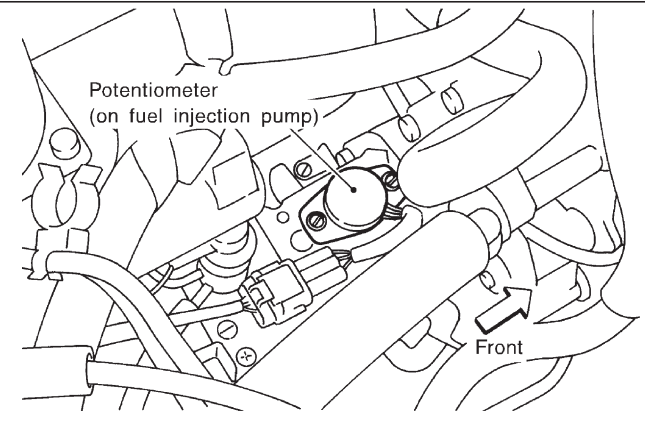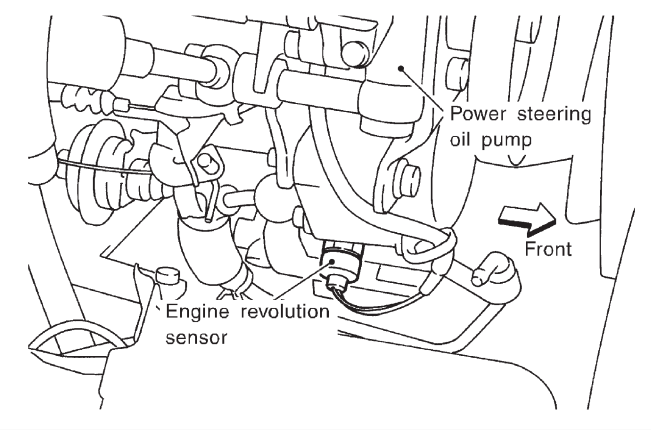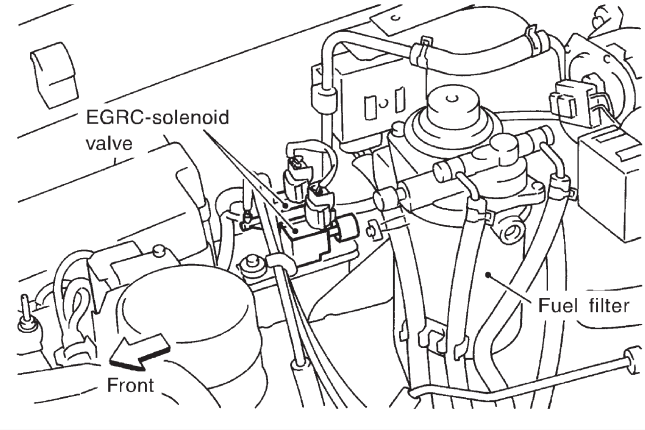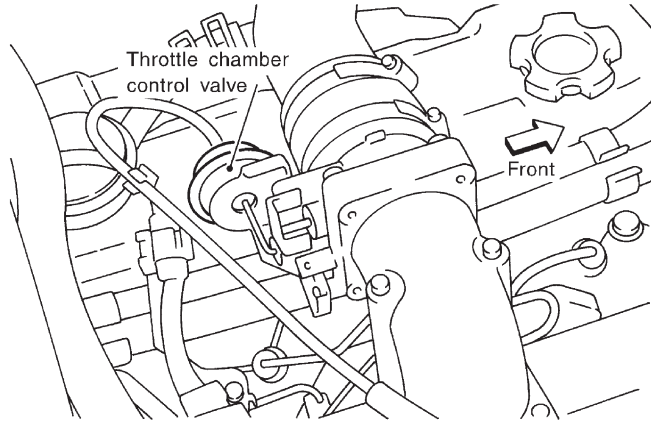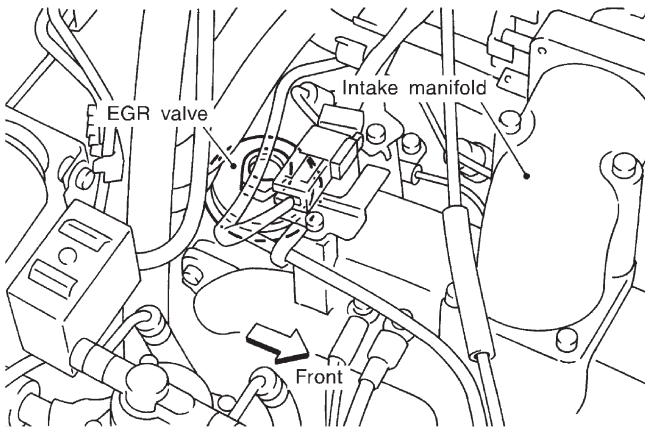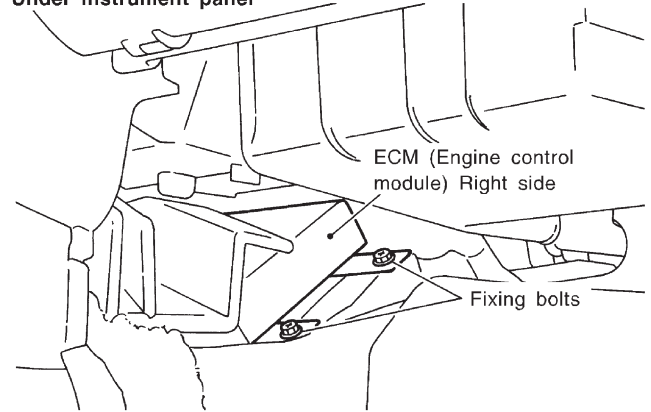

DEC024

Description

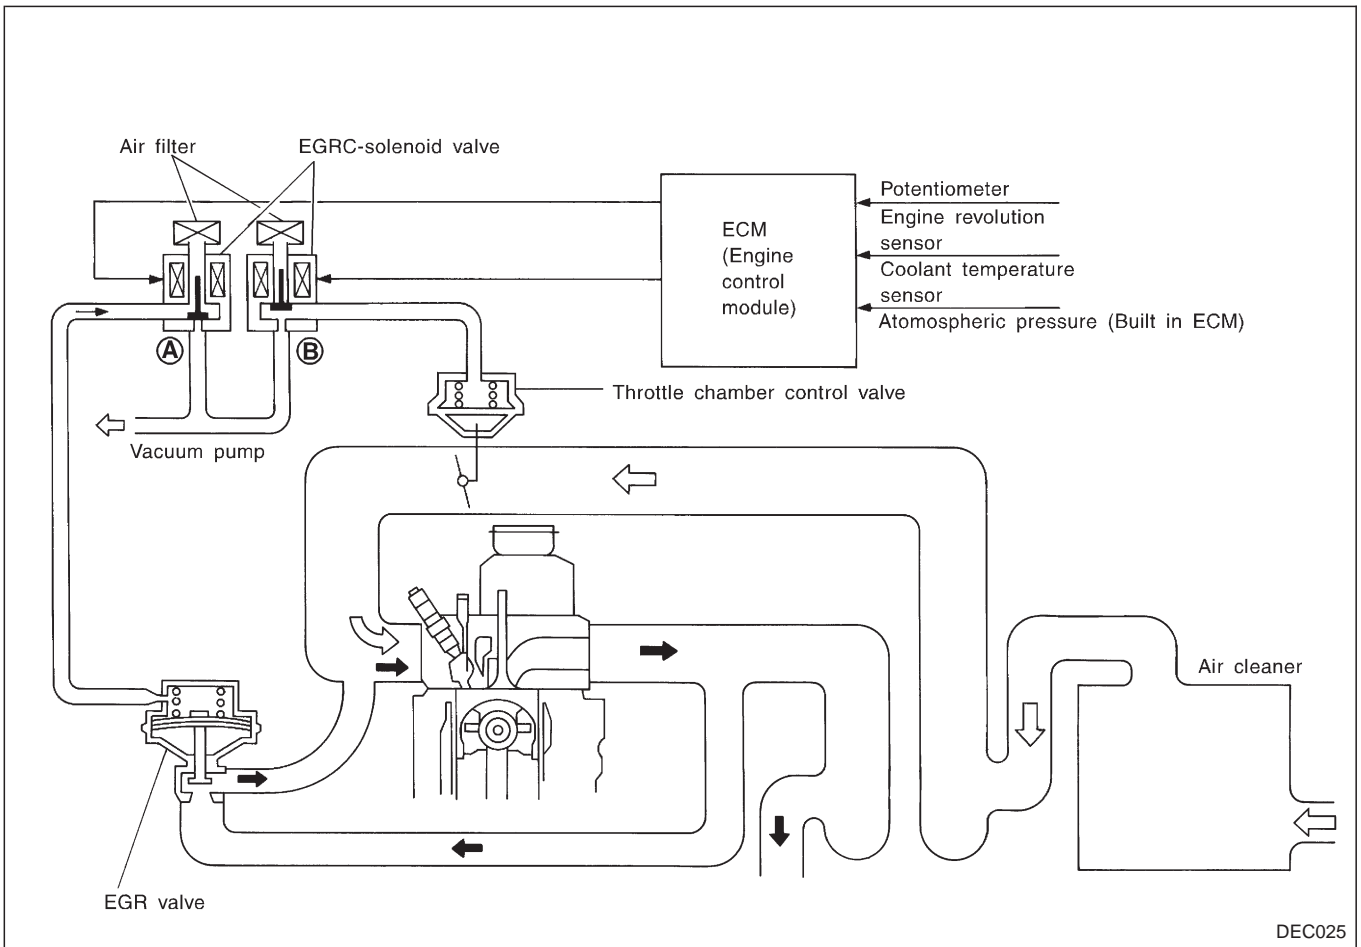


The EGR system is designed to control the formation of NO_x emission by recirculating the exhaust gas into the intake manifold passage through the EGR valve.

For electrical circuit of the EGR system, refer to "Circuit Diagram" in "QUICK-GLOW SYSTEM", EC-195.

Operation

Coolant temperature °C (°F)	Engine load (EGR area)	EGRC-solenoid valve		EGR valve	Throttle chamber control valve	Amount of EGR gas
		A	B			
Below 60 (140)	All	OFF (Closed)	OFF (Closed)	Closed	Open	—
Above 60 (140)	Low load (Area ①)	ON (Open)	ON (Open)	Open	Nearly closed	High
	Middle load (Area ②)	OFF (Closed)	ON (Open)	Open	Open	Low
	High load*1 (Area ③)	OFF (Closed)	OFF (Closed)	Closed	Open	—



*1: Also includes conditions, in which the engine is stopped with the ignition switch ON or the atmospheric pressure is below 90.0 kPa (900 mbar, 675 mmHg, 26.57 inHg).

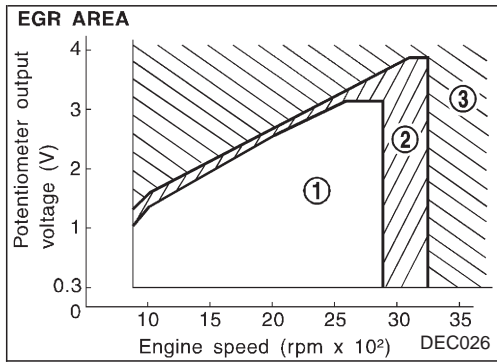

Wiring Diagram

TD25 ENGINE (LHD)

EC-EGRC/V-01

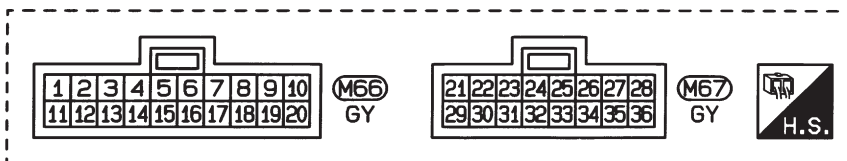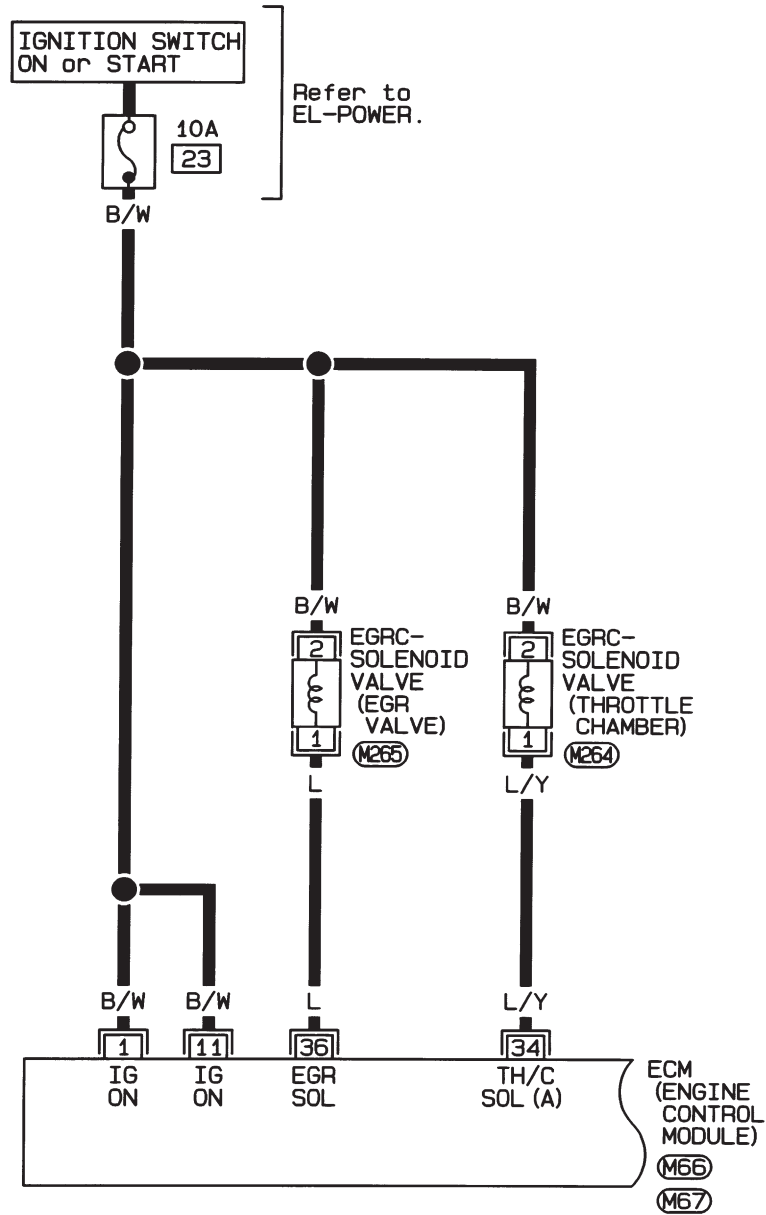

EGR SYSTEM




TD

Wiring Diagram (Cont'd)

TD25 ENGINE (LHD)

EC-EGRC/V-02

TW : With NATS
OT : Without NATS

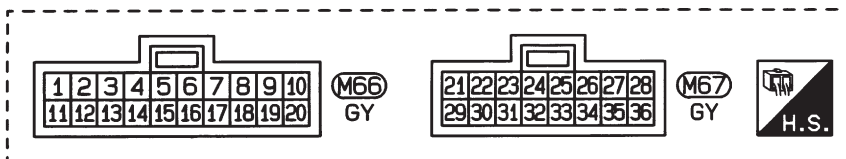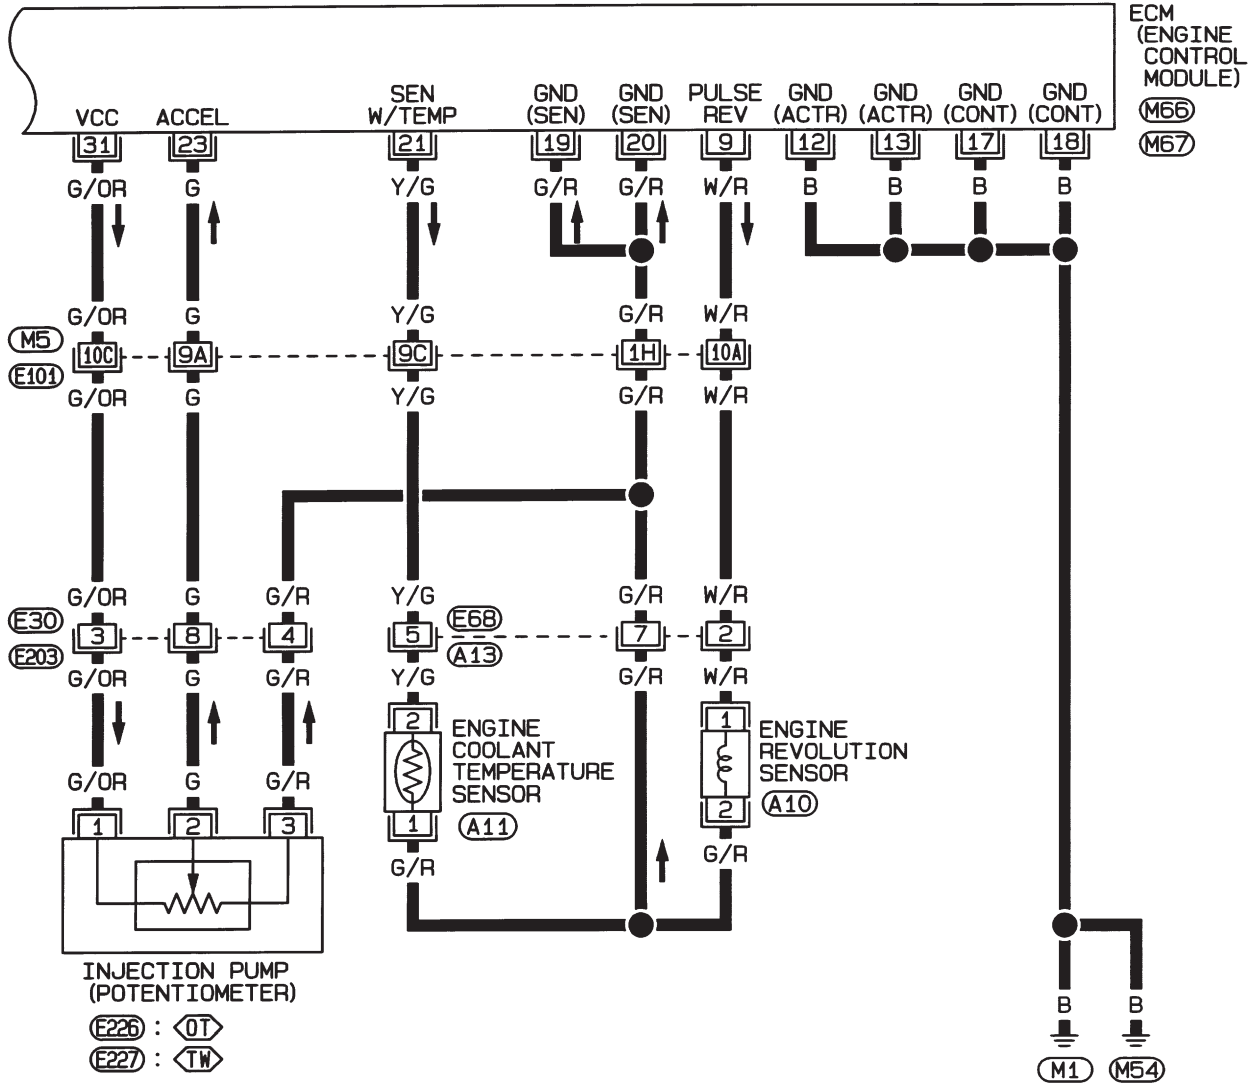

Refer to last page (Foldout page).


(M5), (E101)

HEC580

Wiring Diagram (Cont'd)


TD25 ENGINE (RHD)

EC-EGRC/V-04





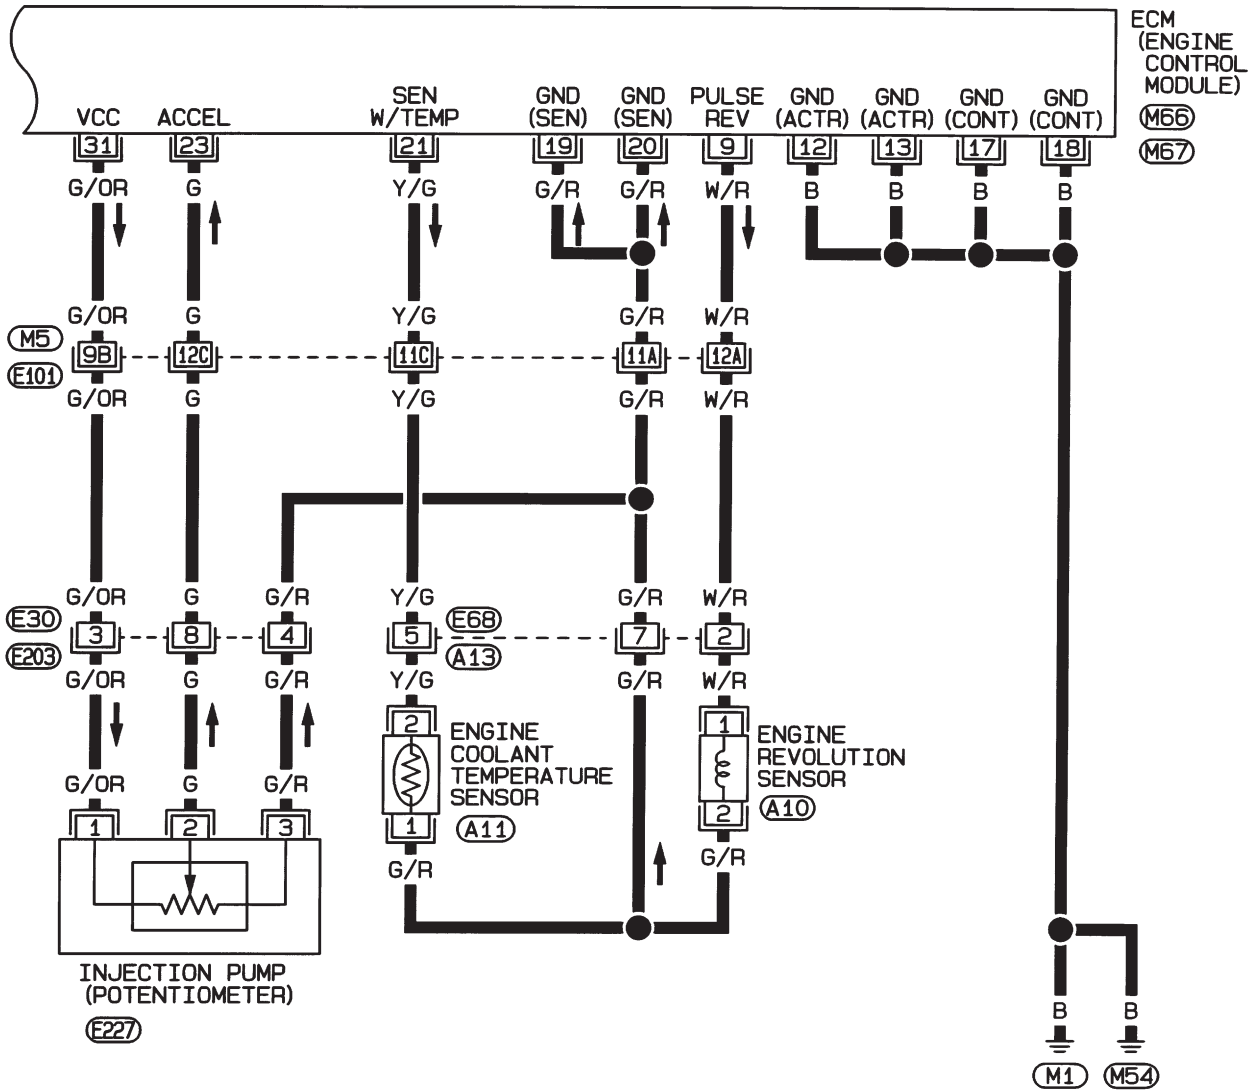


Refer to last page (Foldout page).

M5, E101

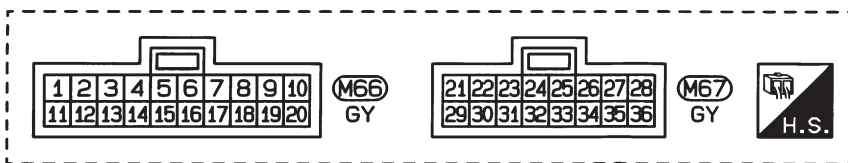

HEC582

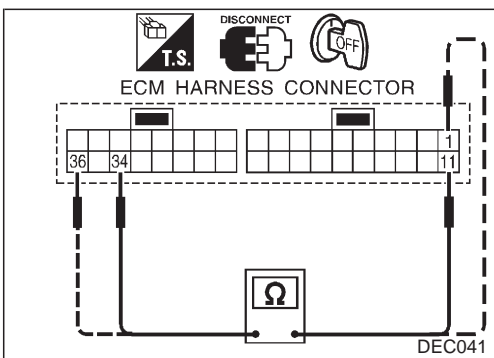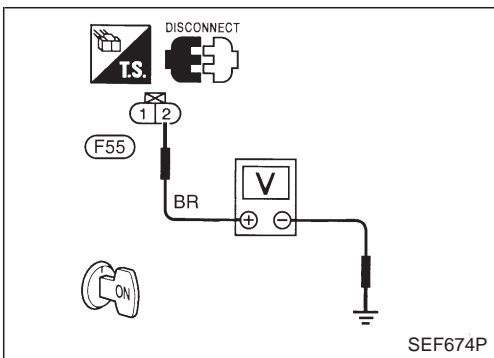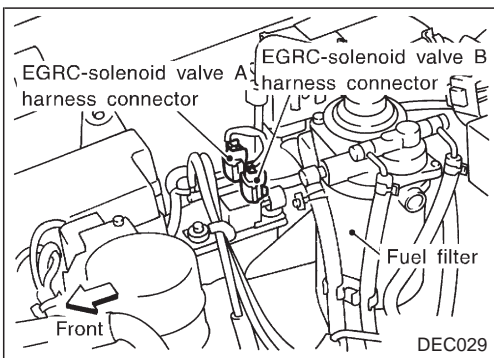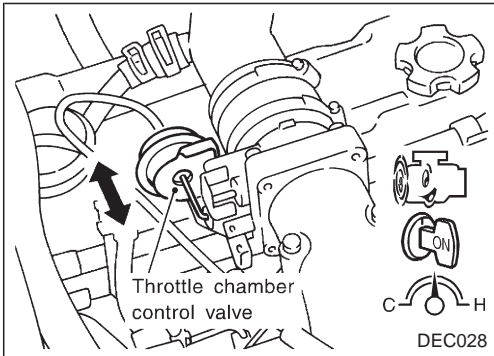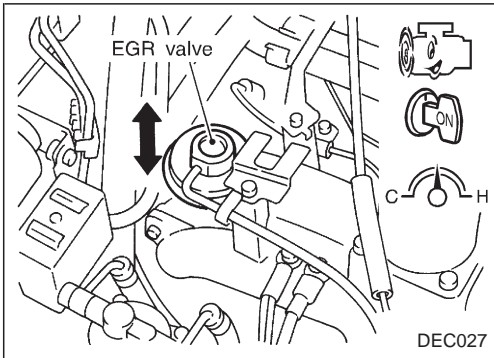

System Inspection

OVERALL FUNCTION

1. Start engine and warm it up sufficiently.
2. Make sure that EGR valve diaphragm and throttle chamber control valve rod movement (Use your finger to confirm EGR valve diaphragm movement) under the following conditions.

At idle:

Diaphragm and rod do not move.

Revvng engine from idle to between 1,000 and 2,800 rpm:

Diaphragm and rod move.

Keeping engine speed between 2,900 and 3,200 rpm:

Diaphragm and rod stay in open position.

POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect EGRC-solenoid valve A and B harness connector.
3. Turn ignition switch ON.

4. Check voltage between terminal ② and ground.

Voltage: Battery voltage

OUTPUT SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between terminals.

Continuity should exist.

If OK, check harness for short.

EGRC-solenoid valve A:

ECM terminal ③⑥ and terminal ① or ⑪


EGRC-solenoid valve B:

ECM terminal ③④ and terminal ① or ⑪

EGR SYSTEM

System Inspection (Cont'd)

INPUT SIGNAL CIRCUIT

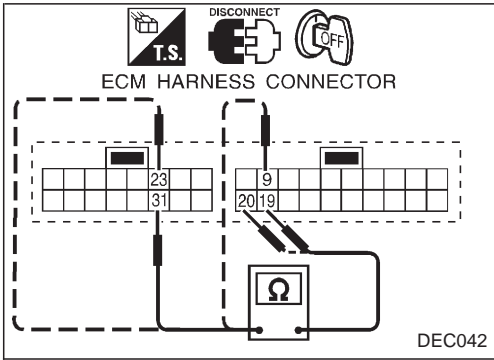

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between terminals.

Continuity should exist.

If OK, check harness for short.

Potentiometer:

ECM terminal ③① and terminal ①⑨ or ②⑩.

ECM terminal ②③ and terminal ①⑨ or ②⑩.

Engine revolution sensor:

ECM terminal ⑨ and terminal ①⑨ or ②⑩.

Engine coolant temperature sensor:

Refer to "Glow Control Unit Inspection" in "QUICK-GLOW SYSTEM", EC-206.


Component Inspection

EGR valve

Apply vacuum to EGR vacuum port with a hand vacuum pump.

EGR valve diaphragm should lift.

If NG, replace EGR valve.

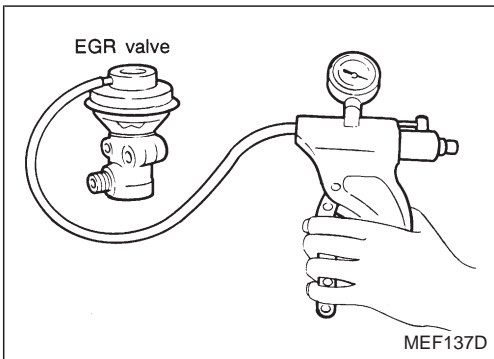


Throttle chamber control valve

Apply vacuum to throttle chamber control valve vacuum port with a hand vacuum pump.


Throttle chamber control valve should close.

If NG, replace throttle chamber control valve.

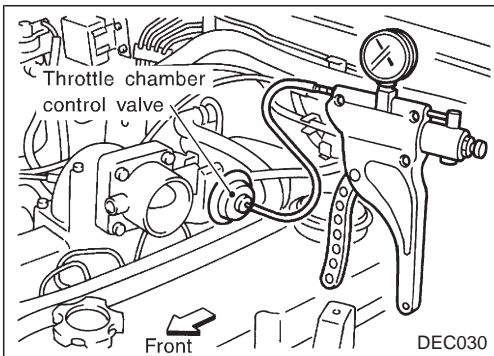

EGRC-solenoid valve A and B

Check air passage continuity.

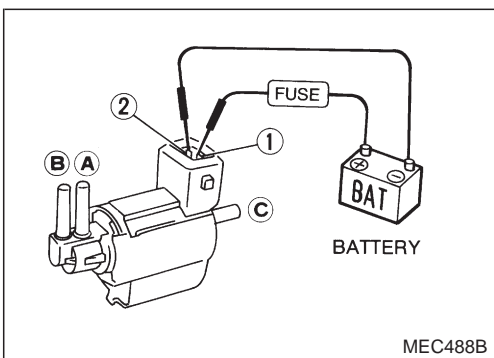


Condition	Air passage continuity between (A) and (B)	Air passage continuity between (A) and (C)
12V direct current supply between terminals ① and ②	Yes	No
No supply	No	Yes

If NG, replace solenoid valve(s).

Component Inspection (Cont'd)


Engine revolution sensor

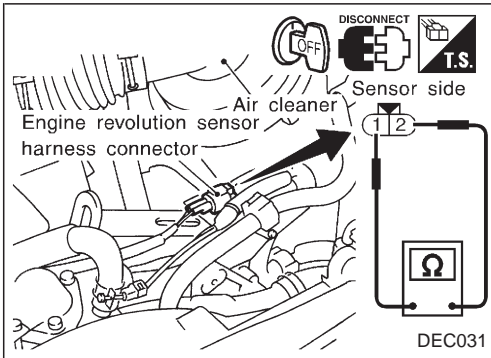

1. Disconnect engine revolution sensor harness connector.
2. Check resistance between terminals ① and ②.

Resistance: Approximately 1.6 kΩ [at 25°C (77°F)]
If NG, replace sensor.

Potentiometer

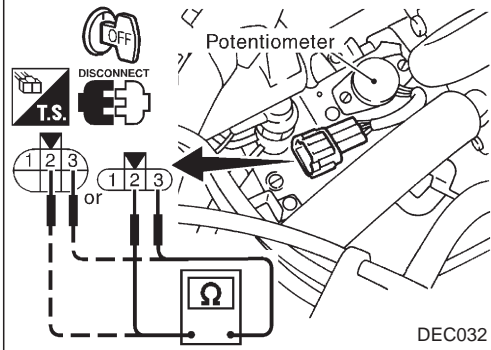

1. Disconnect potentiometer harness connector.
2. Make sure that resistance between terminals ② and ③ changes when accelerator operated.

Accelerator pedal condition	Resistance kΩ [at 20°C (68°F)]
Completely released	Approximately 0.7
Partially depressed	0.7 - 5
Completely depressed	Approximately 5


If NG, replace potentiometer.

Atmospheric pressure sensor

This sensor is inside ECM and not replaceable.
EGR system should not operate under atmospheric pressure below 90.0 kPa (900 mbar, 675 mmHg, 26.57 inHg).

Engine coolant temperature sensor

Refer to "Component Inspection" in "QUICK-GLOW SYSTEM", EC-209.

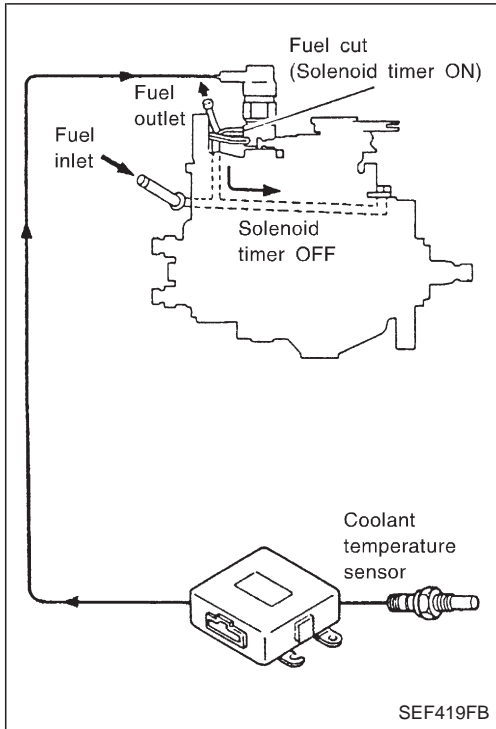


Description

To improve startability, a solenoid timer is used on models for cold areas. Its purpose is to advance fuel injection timing in relation to coolant temperature for a certain period after starting the engine.

This timer is controlled by the signal from the glow control unit (or ECM). The control unit sends a signal to activate the advance mechanism of the fuel injection pump during cold starting.

Refer to "Circuit Diagram", "QUICK-GLOW SYSTEM", EC-195.

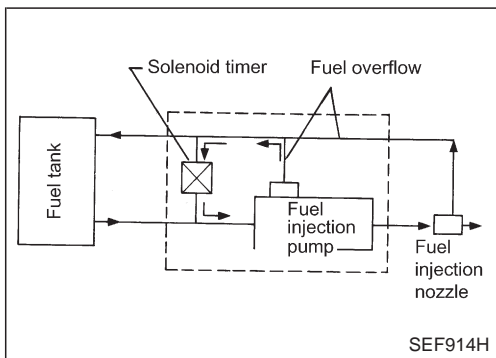


Operation

Part of the fuel in the return line returns to the fuel injection pump inlet, when the solenoid timer is OFF. When cold starting, the solenoid timer comes ON to stop the return of fuel to the inlet. This increases the fuel pressure in the fuel injection pump so that fuel injection timing advances. The duration of fuel injection timing advance varies with changes in coolant temperature.

SOLENOID TIMER Operation (Cont'd)

TD

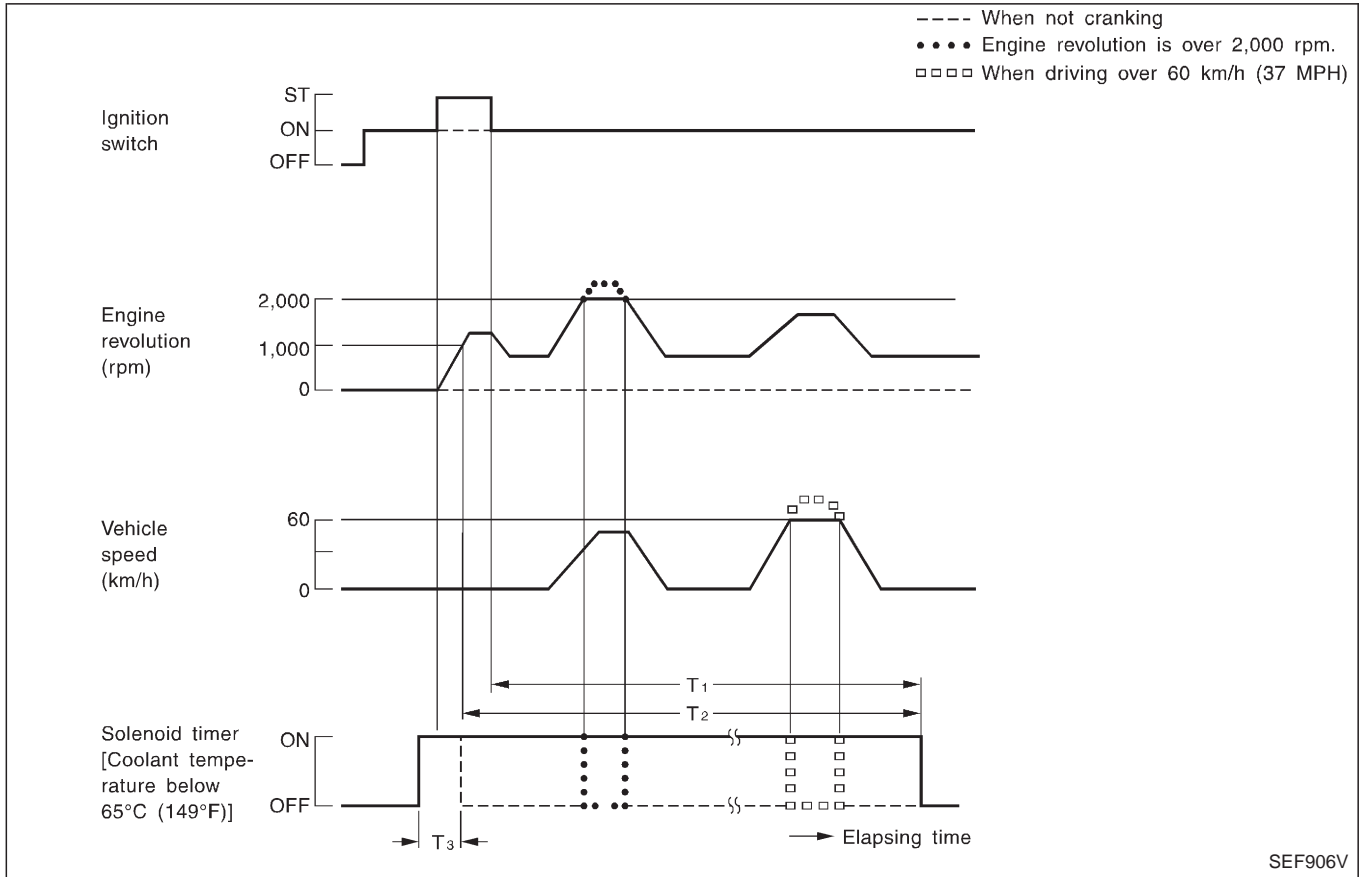


When coolant temperature is lower than 65°C (149°F), and the engine runs within conditions defined with the engine speed and the potentiometer, the solenoid timer operates. It turns on when the ignition switch is turned to START position.

The solenoid timer remains on for T_1 or T_2 seconds. The T_1 starts after engine speed has risen over 1,000 rpm in START position. The T_2 starts after ignition switch has been returned to ON position with engine running.

If the engine does not start within T_3 seconds or if the engine stops for more than T_3 seconds the solenoid timer turns off. Also it turns off if the engine speed rises over 2,000 rpm or the vehicle speed rises over 60 km/h but it recovers if these figures become lower than the limit.

T_1, T_2 : 30 [sec.]

T_3 : approx. 1 [sec.]

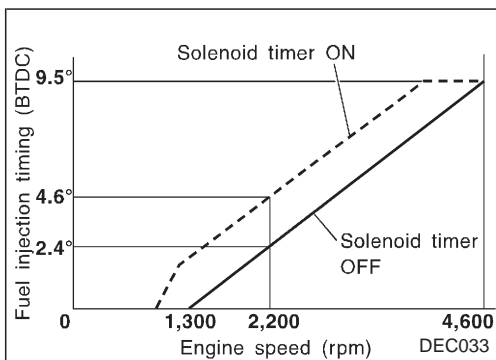

TIMER CHARACTERISTICS

The figures show the differences in fuel injection timing in relation to engine speed when the solenoid timer is both ON and OFF.

When the solenoid timer turns ON, fuel injection timing advances by approximately 2°. Thus, cold engine starting in cold weather is greatly improved.



Application:

	Part No.	Pump assembly No.
TD25	16700 3S301	104780-4961
	16700 3S300	104780-4951

Wiring Diagram

TD25 ENGINE (LHD)

EC-PLA-01

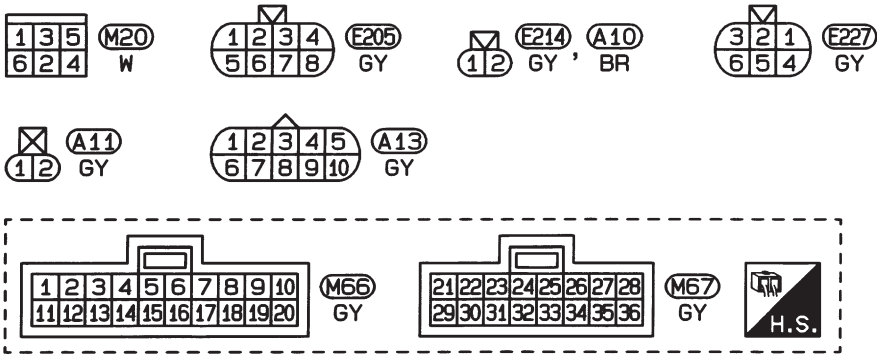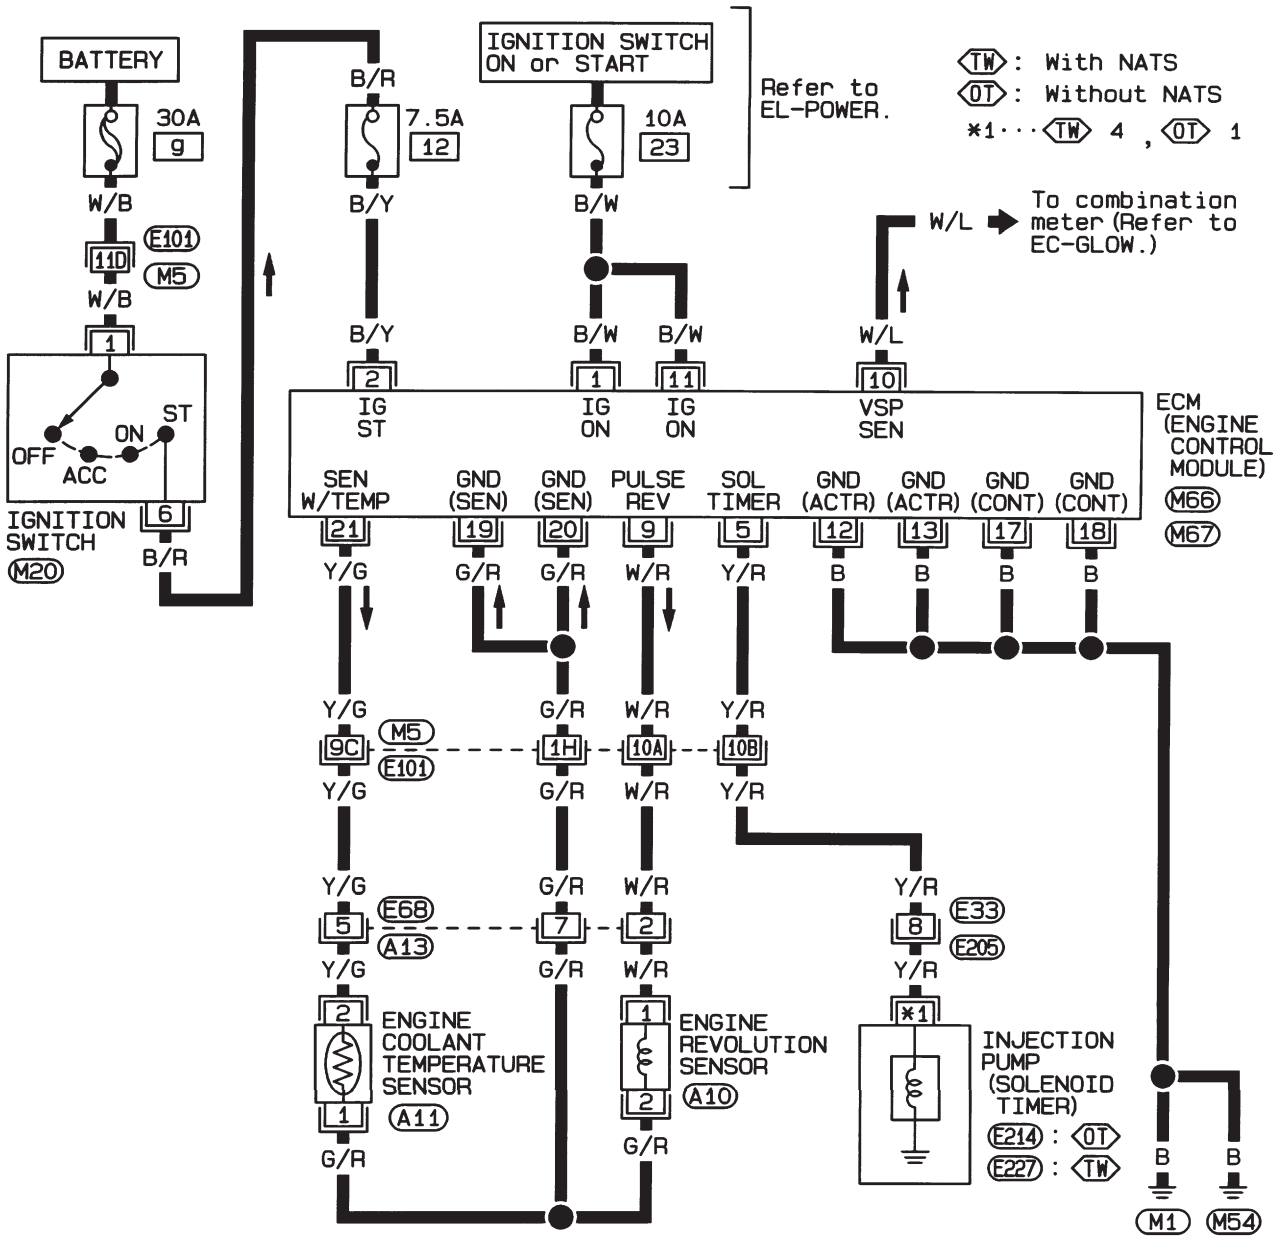

Refer to last page (Foldout page).

M5, E101

NOTE: Refer to "EC-GLOW-03" for vehicle speed sensor, and "EC-EGRC/V-02" for potentiometer.

HEC577




SOLENOID TIMER

TD

Wiring Diagram (Cont'd)

TD25 ENGINE (RHD)


EC-PLA-02

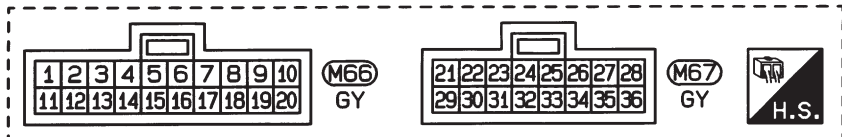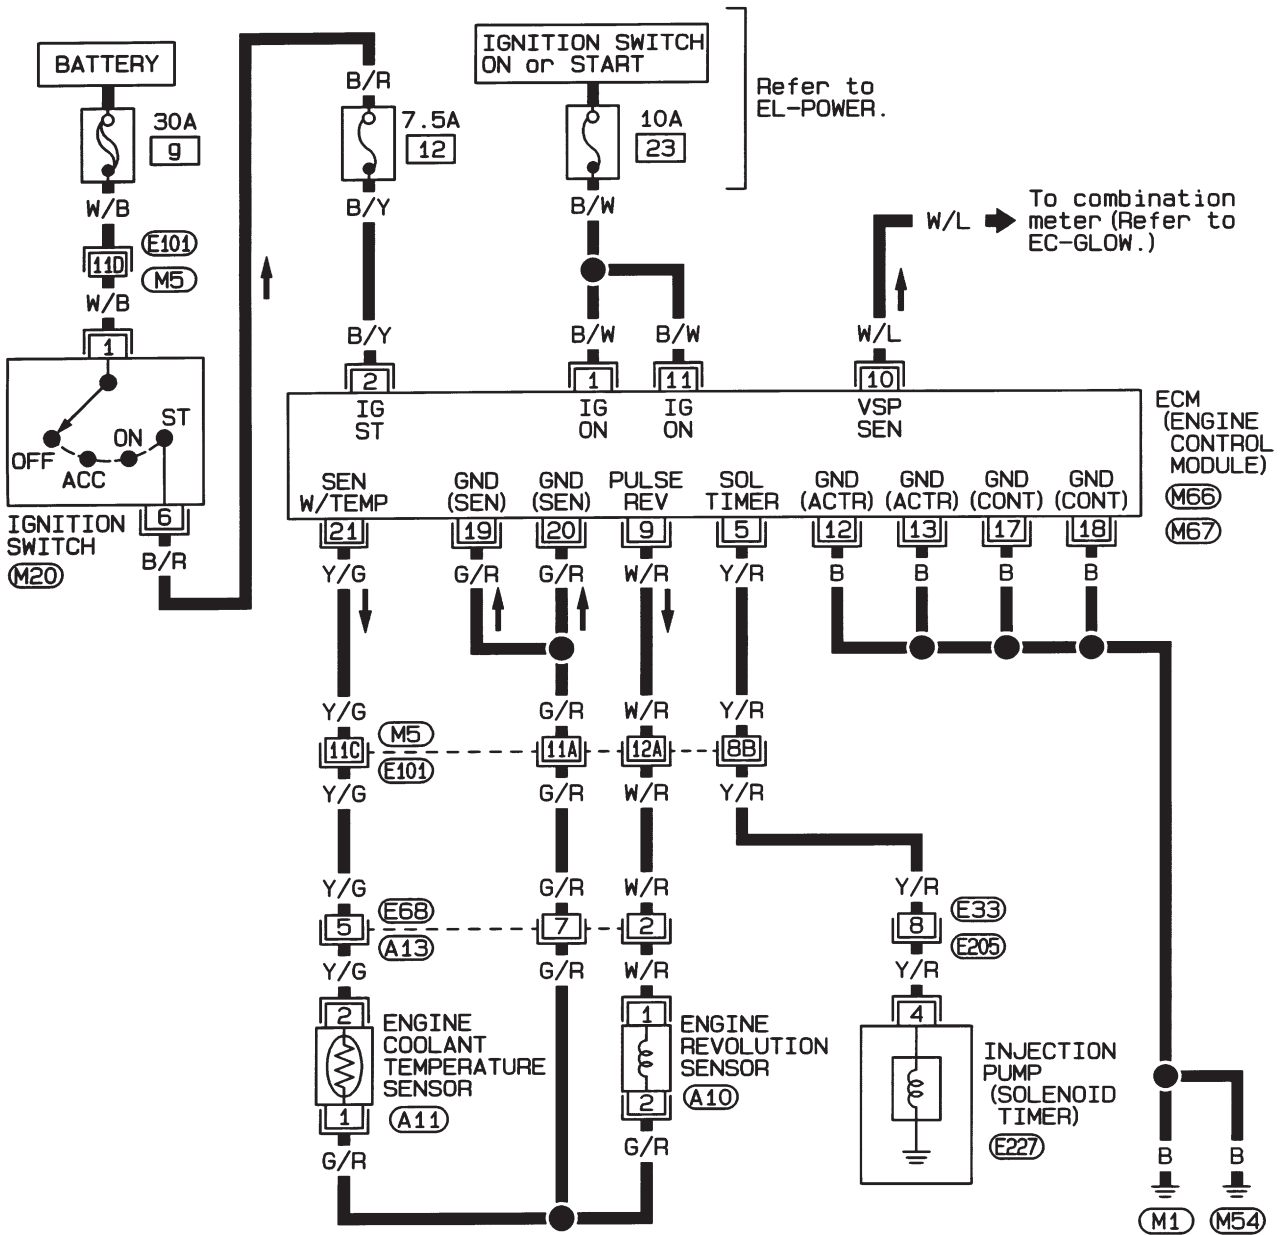

Refer to last page (Foldout page).
M5, E101

NOTE: Refer to "EC-GLOW-06" for vehicle speed sensor, and "EC-EGRC/V-04" for potentiometer.

HEC578

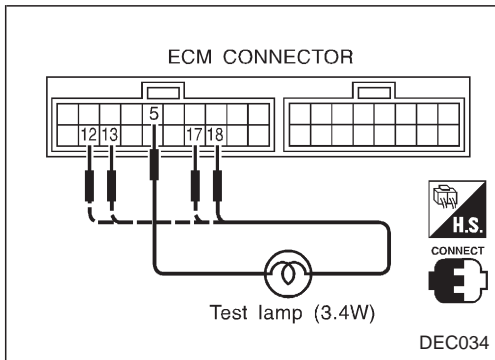

Inspection


SOLENOID TIMER CONTROL CIRCUIT

1. Connect test lamp to glow control unit as shown.
2. Disconnect the harness connector from starter motor "S" terminal.
3. Make sure that test lamp comes on when ignition switch is turned to START.
4. Measure the time the test lamp stays lit when ignition switch is turned to ON from START.

Time the test lamp should stay lit:

Approx. 30 seconds at coolant temperature below 65°C (149°F)

0 seconds at coolant temperature over 65°C (149°F)

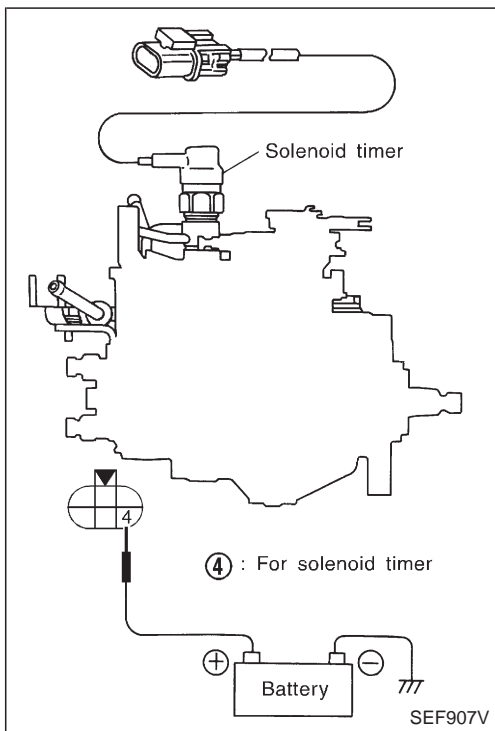

SOLENOID TIMER

1. Disconnect solenoid timer harness and check for "clicking" sound from solenoid when battery is connected and disconnected.

If solenoid has malfunction, replace it.

After checking, reconnect the connector.


TIMER PISTON STROKE (Using pump tester)

Measure timer piston strokes at specified fuel injection pump speed when solenoid timer is on and off.


Refer to "Injection Pump Calibration Standard" in SDS.

Wiring Diagram

EC-FCUT-01

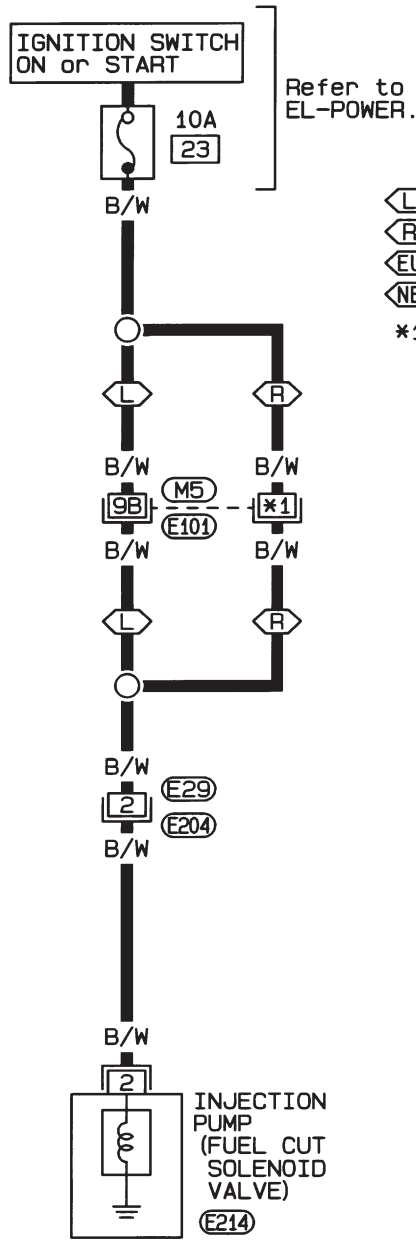


- ◊L : LHD models
- ◊R : RHD models
- ◊EU : For Europe
- ◊NE : Except for Europe
- *1... ◊EU 10B , ◊NE 11C



Refer to last page
(Foldout page).




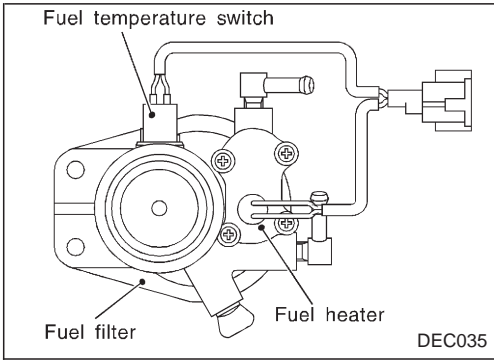


Description

This system prevents fuel filter from clogging with fuel wax. Fuel heater system operates when fuel temperature switch and oil pressure switch are on.



Fuel temperature switch turns on when fuel temperature decreases below -15°C (5°F). It remains on until fuel temperature increases to around 0°C (32°F).

If fuel temperature does not decrease below -15°C (5°F), fuel temperature switch will not turn on even though fuel temperature is below 0°C (32°F).

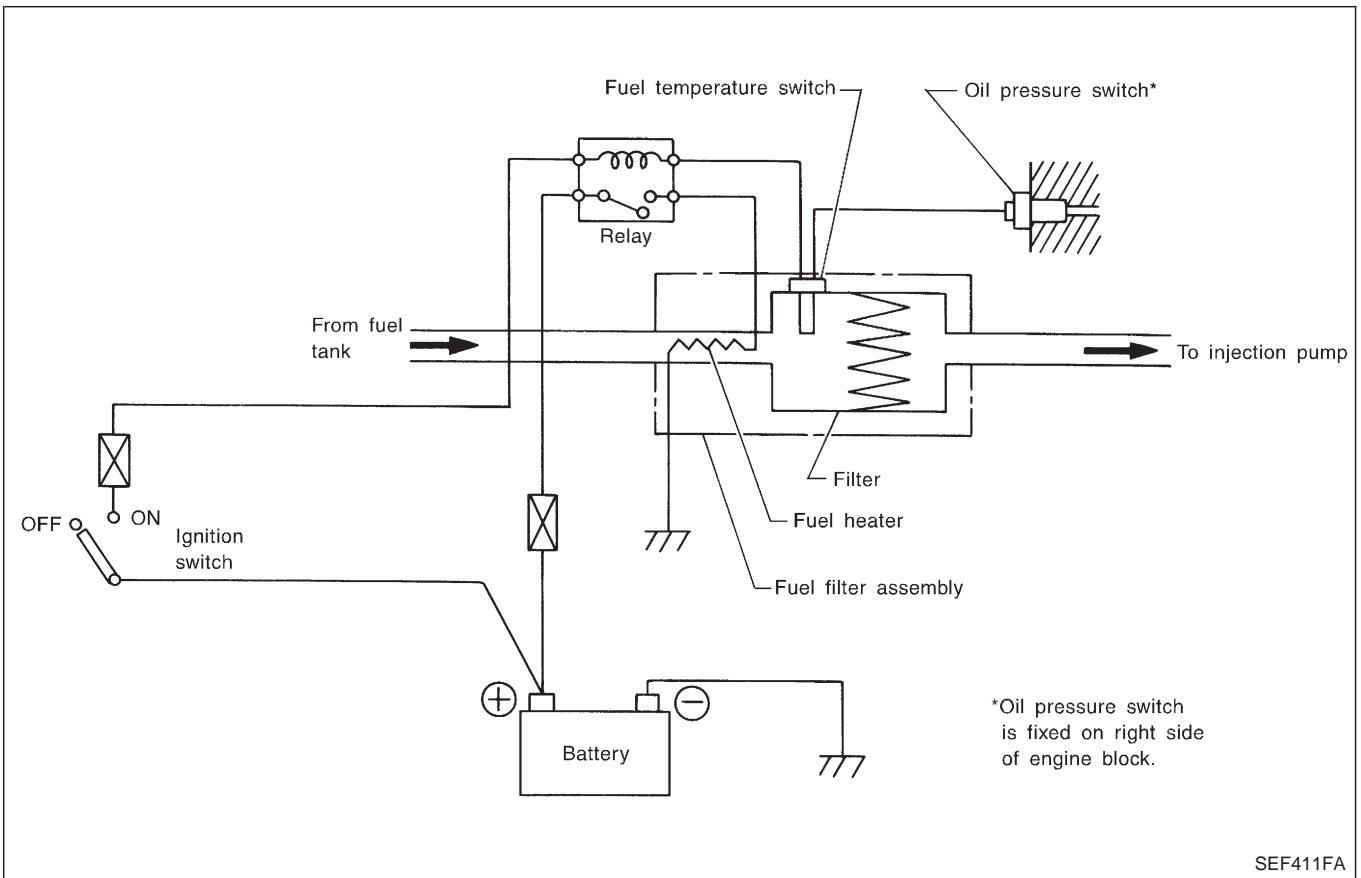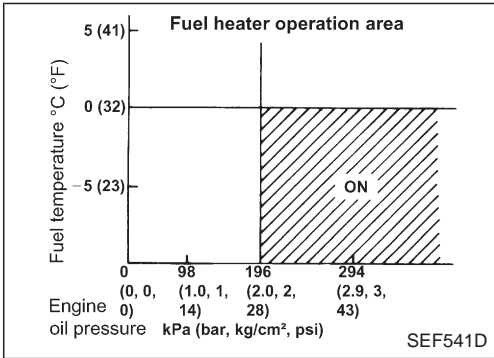



Wiring Diagram

EC-F/HEAT-01

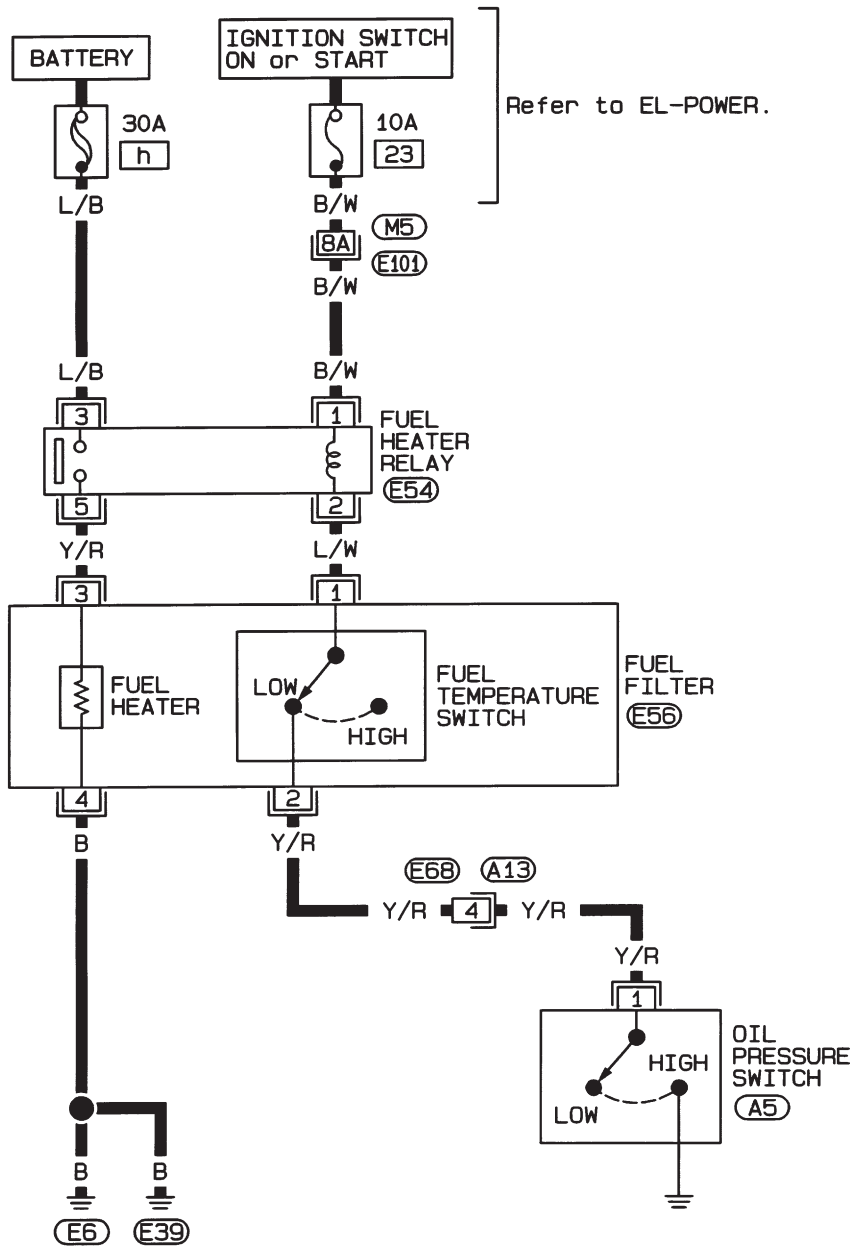

Refer to last page (Foldout page).

(M5), (E101)

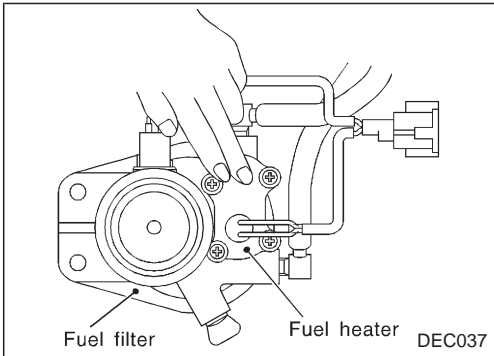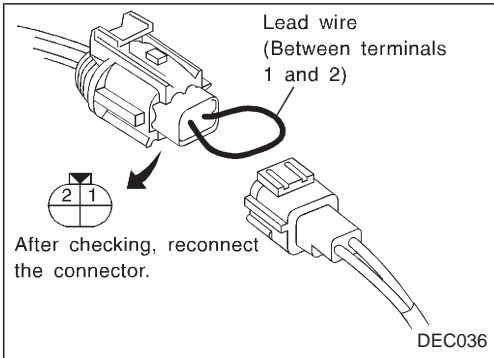


System Inspection

1. Turn ignition switch "OFF". Disconnect fuel temperature switch harness connector.
2. Connect a lead wire, as shown, between terminals of fuel temperature switch.

3. Run engine at about 1,000 rpm. After several minutes, make sure that fuel heater is hot.

Be careful not to burn yourself.


4. If fuel heater does not operate, check fuel heater system for wire harness and electrical components.

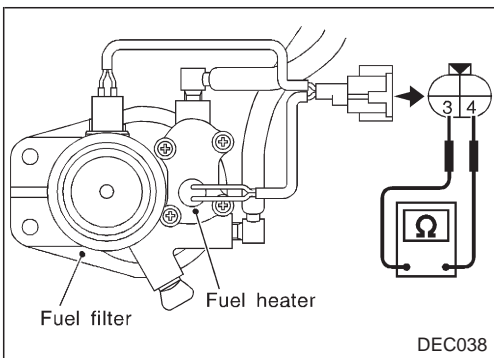

Component Inspection

Fuel heater

1. Check continuity for fuel heater.
2. If fuel heater has malfunction, replace fuel filter heater.

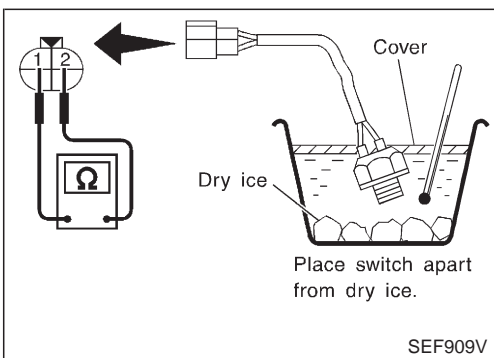

Fuel temperature switch

Remove fuel temperature switch and check the operation by changing atmospheric temperature using dry ice.

Temperature °C (°F)	Operation	Continuity
Decreased to minus 11 - 19 (52 - 66)	OFF → ON	ON: Exists.
Increased to approx. 0 (32)	ON → OFF	OFF: Does not exist.


If NG, replace fuel temperature switch.

Component Inspection (Cont'd)

When installing, use a new O-ring.


WARNING:

Do not touch the cooled fuel temperature switch with your bare hand.

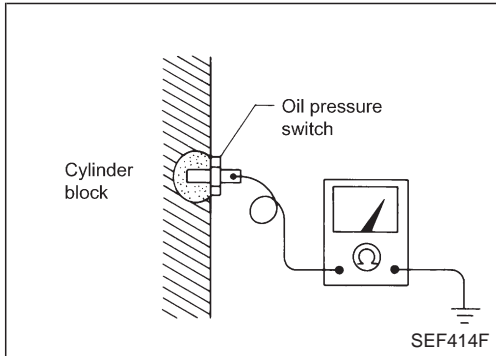


Oil pressure switch


1. Run engine at about 1,000 rpm.
2. Check continuity for oil pressure switch.
3. If oil pressure switch has malfunction, replace it.

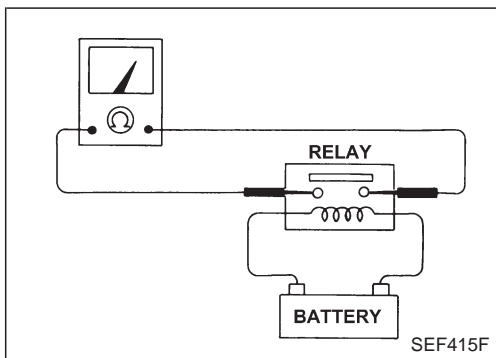

Fuel heater relay

1. Check fuel heater relay operation.
2. If fuel heater relay does not operate, replace it.

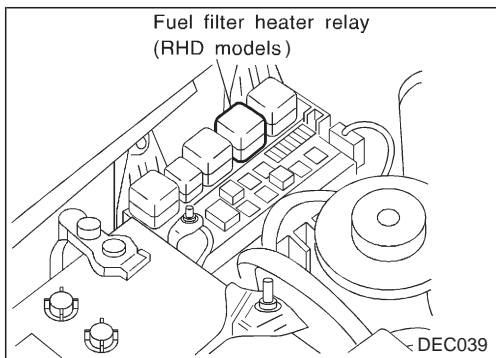

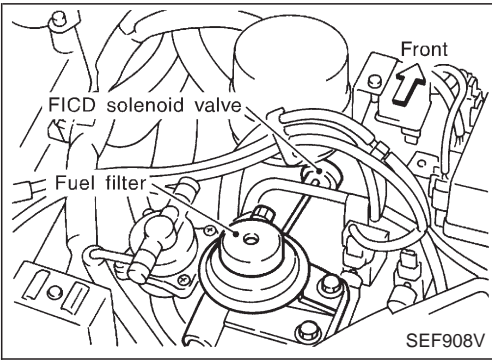

Electrical Components Inspection

IACV-FICD solenoid valve

1. Disconnect IACV-FICD solenoid valve harness connectors and vacuum hoses.
2. Connect solenoid valve connector to battery and adequate vacuum hoses to the solenoid valve as shown in the figure.
3. Blow air into hoses.


If air flows: OK

If air does not flow: NG

If NG, replace IACV-FICD solenoid valve.

AIR CONDITIONER RELATED COMPONENTS

Refer to "Electrical Components Inspection", "TROUBLE DIAGNOSES" in HA section.

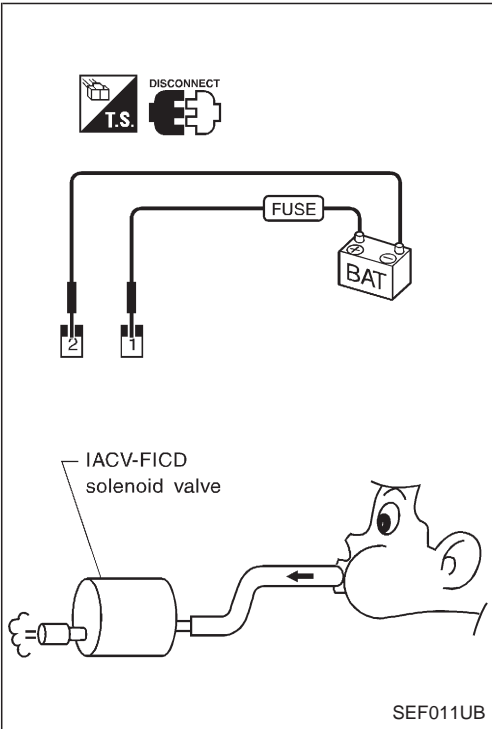

General Specifications

PRESSURE REGULATOR

Fuel pressure kPa (bar, kg/cm ² , psi)	
At idle	Approximately 235 (2.35, 2.4, 34)
A few seconds after ignition switch is turned OFF to ON	Approximately 294 (2.94, 3.0, 43)

Inspection and Adjustment

Idle speed*1 rpm	Base idle speed*3	750±25
No-load*2 (in "N" position)	Target idle speed	800±50
Air conditioner: ON (in "N" position)	900 or more	
Ignition timing	10°±2° BTDC	
Throttle position touch speed rpm	1,000±150	

*1: Feedback controlled and needs no adjustments

*2: Under the following conditions:

- Air conditioner switch: OFF
- Steering wheel: Kept in straight-ahead position
- Electrical load: OFF (Lights, heater fan & rear window defogger)

*3: Throttle position sensor connector is disconnected.

IGNITION COIL

Primary voltage V	Battery voltage (11 - 14)
Primary resistance [at 25°C (77°F)] Ω	Less than 1.0
Secondary resistance [at 25°C (77°F)] kΩ	7 - 13

MASS AIR FLOW SENSOR

Supply voltage V	Battery voltage (11 - 14)
Output voltage at idle V	1.3 - 1.7 at idle* 1.7 - 2.1 at 2,500 rpm*

*: Engine is warmed up sufficiently and running under no-load.

ENGINE COOLANT TEMPERATURE SENSOR

Temperature °C (°F)	Resistance
20 (68)	2.1 - 2.9 kΩ
50 (122)	0.68 - 1.00 kΩ
90 (194)	0.236 - 0.260 kΩ

FUEL PUMP

Resistance [at 25°C (77°F)] Ω	0.2 - 5.0
----------------------------------	-----------

IACV-AAC VALVE

Resistance [at 25°C (77°F)] Ω	Approximately 10.0
----------------------------------	--------------------

INJECTOR

Resistance [at 25°C (77°F)] Ω	10 - 14
----------------------------------	---------

RESISTOR

Resistance [at 25°C (77°F)] kΩ	Approximately 2.2
-----------------------------------	-------------------

THROTTLE POSITION SENSOR

Throttle valve conditions	Resistance [at 25°C (77°F)]
Completely closed	Approximately 0.6 kΩ
Partially open	0.6 - 4.0 kΩ
Completely open	Approximately 4.0 kΩ

HEATED OXYGEN SENSOR HEATER

Resistance [at 25°C (77°F)] Ω	2.3 - 4.3
----------------------------------	-----------

INTAKE AIR TEMPERATURE SENSOR

Temperature °C (°F)	Resistance
20 (68)	2.1 - 2.9 kΩ
80 (176)	0.27 - 0.38 kΩ

VE-type Injection Pump


APPLICATION

Engine	Destination	Part No.	Pump assembly No.	Remarks
TD25	Europe	16700 3S300	104780-4951	With Nissan Anti-Theft System (NATS)
		16700 3S301	104780-4961	

INSPECTION AND ADJUSTMENT

Plunger lift

Engine	Plunger lift at TDC mm (in)		Part No.	Pump assembly No.
	Inspection	Adjustment		
TD25	0.71±0.05 (0.0280 ±0.0020)	0.71±0.02 (0.0280 ±0.0008)	16700 3S300	104780-4951
			16700 3S301	104780-4961

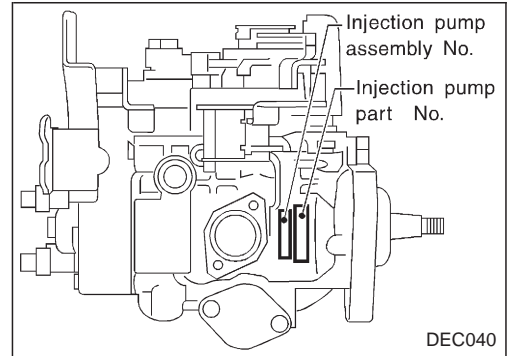

Maximum engine speed

Engine	Maximum engine speed (Under no load)	rpm
TD25	5,000	⁺¹⁰⁰ ₋₂₀₀

Injection Nozzle

INSPECTION AND ADJUSTMENT

Injection nozzle assembly

Unit: kPa (bar, kg/cm², psi)

Initial injection pressure	
New	10,297 - 11,278 (103.0 - 112.8, 105 - 115, 1,493 - 1,635)
Used	9,807 - 10,297 (98.1 - 103.0, 100 - 105, 1,422 - 1,493)

Adjusting shims

Thickness mm (in)	Part No.
0.1 (0.004)	16613-65N00
0.2 (0.008)	16613-65N01
0.3 (0.012)	16613-65N02
0.4 (0.016)	16613-65N03
0.5 (0.020)	16613-65N04
0.52 (0.0205)	16613-65N05
0.54 (0.0213)	16613-65N06
0.56 (0.0220)	16613-65N07
0.58 (0.0228)	16613-65N08
0.8 (0.031)	16613-65N09

Injection Pump Calibration Standard

Injection pump assembly No. 104780-4951/
104780-4961
Part No. 16700 3S300/
106700 3S301

Pump rotation: Clockwise—viewed from drive side

1. Test conditions

- | | |
|---|--|
| 1 - 1 Nozzle: 105780-0060 (NP-DN0SD1510) | 1 - 4 Injection pipe: 2 dia. x 6 dia. x 450 mm (0.08 dia. x 0.24 dia. x 17.72 in) |
| 1 - 2 Nozzle holder: 105780-2150 | 1 - 5 Fuel oil temperature: 45 ⁺⁵ ₀ °C (113 ⁺⁹ ₀ °F) |
| 1 - 3 Nozzle opening pressure: 13,000 ⁺³⁰⁰ ₀ kPa
(130.0 ^{+3.0} ₀ bar,
133 ⁺³ ₀ kg/cm ² ,
1,891 ⁺⁴³ ₀ psi) | 1 - 6 Supply pump pressure: 20 kPa (0.20 bar, 0.2 kg/cm ² , 2.8 psi) |

2. Setting		Pump speed rpm	Settings	Charge air press kPa (mbar, mmHg, inHg)	Difference in delivery ml (Imp fl oz)
2 - 1	Timing device travel	1,100	ON 3.4 - 4.2 mm (0.134 - 0.165 in) OFF 1.8 - 2.2 mm (0.071 - 0.087 in)	—	—
2 - 2	Supply pump pressure	1,100	ON 471 - 549 kPa (4.71 - 5.49 bar, 4.8 - 5.6 kg/cm ² , 68 - 80 psi) OFF 402 - 461 kPa (4.02 - 4.61 bar, 4.1 - 4.7 kg/cm ² , 58 - 67 psi)	—	—
2 - 3	Full-load delivery	1,100	46.9 - 47.9 ml (1.65 - 1.69 Imp fl oz)/1,000 st	—	3.5 (0.12)
2 - 4	Idle speed regulation	375	5.1 - 9.1 ml (0.18 - 0.32 Imp fl oz)/1,000 st	—	2.0 (0.07)
2 - 5	Start	100	45.0 - 80.0 ml (1.58 - 2.82 Imp fl oz)/1,000 st	—	—
2 - 6	Full-load speed regulation	2,500	12.9 - 16.9 ml (0.45 - 0.59 Imp fl oz)/1,000 st	—	—
2 - 7	Load timer adjustment	1,100	0.1 - 0.5 mm (0.004 - 0.020 in)	—	—

3. Test specifications	Solenoid timer	ON		OFF		
3 - 1 Timing device	N = rpm mm (in)	1,100 3.3 - 4.3 (0.130 - 0.169)	2,150 7.3 - 8.2 (0.287 - 0.323)	700 Below 0.8 (0.031)	1,100 1.7 - 2.3 (0.067 - 0.091)	2,150 6.3 - 7.5 (0.248 - 0.295)
3 - 2 Supply pump	N = rpm kPa (bar, kg/cm ² , psi)			1,100 392 - 471 (3.92 - 4.71, 4.0 - 4.8, 57 - 68)	2,150 618 - 696 (6.18 - 6.96, 6.3 - 7.1, 90 - 101)	
3 - 3 Overflow delivery	N = rpm ml (Imp fl oz)/ min.	1,100 310 - 570 (10.9 - 20.1)		—		

3 - 4 Fuel injection quantities

Speed control lever position	Pump speed rpm	Fuel delivery ml (Imp fl oz)/1,000 st	Charge air press kPa (mbar, mmHg, inHg)
Max. speed	1,100	46.4 - 48.4 (1.63 - 1.70)	—
	500	41.3 - 47.3 (1.45 - 1.66)*	
	2,150	41.2 - 48.2 (1.45 - 1.70)*	
	2,500	11.9 - 17.9 (0.42 - 0.63)	
	2,700	Below 5.0 (0.18)	
Switch OFF Magnet valve	375	0 (0)	—
Idling	375	4.6 - 9.6 (0.16 - 0.34)	—
3 - 5 Solenoid	Max. cut-in voltage: 8V Test voltage: 12 - 14V		

4. Dimensions	
K	3.2 - 3.4 mm (0.126 - 0.134 in)
KF	5.7 - 5.9 mm (0.224 - 0.232 in)
MS	0.9 - 1.1 mm (0.035 - 0.043 in)
BCS	—
Pre-stroke	0.08 - 0.12 mm (0.0031 - 0.0047 in)
Control lever angle	
α	51.5 - 59.5 degree
β	31.0 - 41.0 degree
γ	—

ON: Solenoid timer is ON. *: Reference value


OFF: Solenoid timer is OFF.

If there is no designation in the specifications for the Solenoid Timer's ON-OFF position, then the position should be regarded as OFF.

Injection Pump Calibration Standard (Cont'd)

Control lever angle measurement position

Measure the control lever angles (α , β).

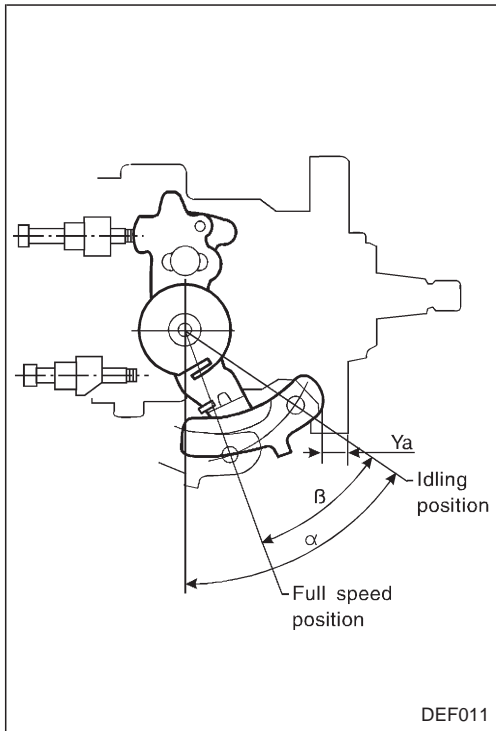

Load timer adjustment

- Fix the control lever in the position satisfying the following conditions.

Pump speed: 1,100 rpm

Fuel injection quantity: 33.0±0.5 ml (1.16±0.02 Imp fl oz)/1,000 st

- With the control lever positioned as described in 1. above, adjust the governor sleeve so that the timer stroke conforms to the specified values (item 2 - 7).

Control lever position			Specified values	
Pump speed rpm	Fuel injection quantity ml (Imp fl oz)/1,000 st	Boost pressure kPa (mbar, mmHg, inHg)	Timer stroke mm (in)	Timer stroke reduction value mm (in)
1,100	33.0±1.0 (1.16±0.04)	—	1.7 (0.067)	0.3±0.3 (0.012±0.012)
1,100	20.0±2.5 (0.70±0.09)*	—	1.1 (0.043)*	0.9±0.4 (0.035±0.016)*

*: Reference value

Potentiometer adjustment

- Hold the control lever in the idling position.
- Adjust the potentiometer so that the output voltage is 5.64±0.03V. Then fix the potentiometer.
- After adjusting the potentiometer, remove the dummy bolt and then confirm the potentiometer's output voltage specifications below.

Pump speed rpm	Fuel injection q'ty ml (Imp fl oz)/1,000 st	Output voltage V	Control lever angle	Remarks
1,075	23.3±1.0 (0.82±0.04)	5.64±0.03	—	Adjusting point
—	1.34 (0.05)*	—	Idle	Check point
—	Above 9.7	—	Full	Check point

*: Reference value

(Input voltage: 10V)